

Accessing Sun Documentation Online

A broad selection of Sun system documentation is located at:

<http://www.sun.com/products-n-solutions/hardware/docs>

A complete set of Solaris documentation and many other titles are located at:

<http://docs.sun.com>

Sun Welcomes Your Comments

Sun is interested in improving its documentation and welcomes your comments and suggestions. You can email your comments to Sun at:

docfeedback@sun.com


Please include the part number (806-1400-10) of the document in the subject line of your email.

Sun Fire™ Link Optical Module (Paroli) Installation Guide

Copyright 2002 Sun Microsystems, Inc. All rights reserved. Use is subject to license terms. Third-party software, including font technology, is copyrighted and licensed from Sun suppliers. Sun, Sun Microsystems, the Sun logo, Sun Fire, AnswerBook2, docs.sun.com, and Solaris are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

Federal Acquisitions: Commercial Software—Government Users Subject to Standard License Terms and Conditions.

Copyright 2002 Sun Microsystems, Inc. Tous droits réservés. Distribué par des licences qui en restreignent l'utilisation. Le logiciel détenu par des tiers, et qui comprend la technologie relative aux polices de caractères, est protégé par un copyright et licencié par des fournisseurs de Sun. Sun, Sun Microsystems, le logo Sun, Sun Fire, AnswerBook2, docs.sun.com, et Solaris sont des marques de fabrique ou des marques déposées de Sun Microsystems, Inc. aux États-Unis et dans d'autres pays.

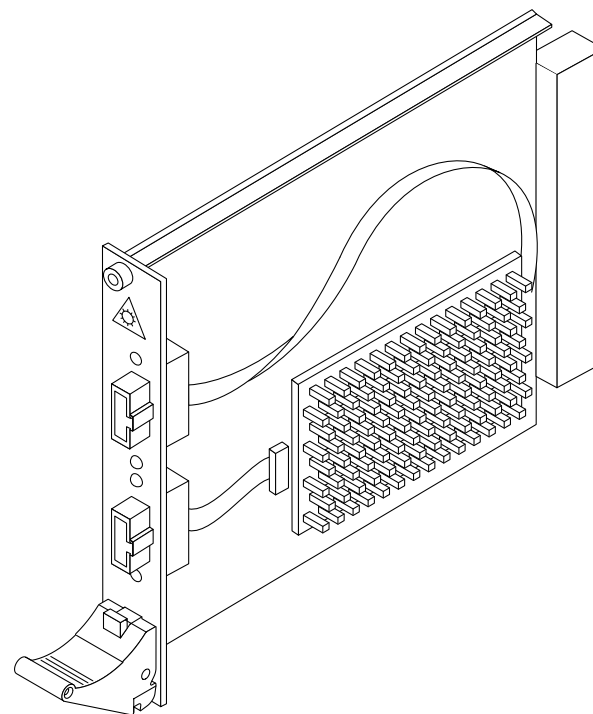

Sun Microsystems, Inc., 4150 Network Circle, Santa Clara, CA 95054 U.S.A.
650-960-1300, Fax 650-969-9131



This doclette provides instructions for installing a Sun Fire Link assembly in a Sun Fire 6800 chassis or a Sun Fire 15K/12K chassis.

Complete documentation for the Sun Fire Link interconnect product is available in two formats:

- In a printed version, which you can order (part number, X4190A)
- In Adobe Acrobat Exchange (.pdf) format on the Sun Fire Link CD (part number, LNKSS-B00-E99). The CD ships with:
 - The Sun Fire Link Assembly (Sun Fire 6800 system)
 - The Sun Fire Link Assembly (Sun Fire 15K/12K system)

To read the documentation online, use the CD-ROM drive on the workstation that serves as your administration station.

These instructions are for use by trained service representatives who have been trained on Sun Fire Link interconnect hardware, and who have previously installed a Sun Fire Link assembly in the field. They are not complete instructions; they lack illustrations and precautions.

Note – These instructions are intended only as a reminder for those who have previous experience with this procedure. See the *Sun Fire Link Hardware Installation Guide* for more detailed instructions.

Note – When installing a new system, you can install the optical modules into the Sun Fire Link assembly either before or after you install that assembly into the chassis.

Installing a Fire Link Optical Module in a Sun Fire 6800 System

Each Fire Link optical module provides one optical link with a receive channel and a transmit channel. You can install a maximum of four optical modules per Sun Fire 6800 system: two Fire Link assemblies with two optical modules per assembly.

Fire Link optical modules are installed in slots labeled LINK 0 and LINK 2 in the Fire Link assembly.

1. **Attach an ESD wrist strap or foot strap, and connect the strap to the system.**
2. **If installed, remove the filler panel.**
3. **Press the ejector lever down on the optical module.**
4. **Hold the optical module by the two side edges or the front panel, and slide it into the slot between the two guides.**

The cutouts in the handle of the optical module must align with the square cutouts on the Sun Fire Link assembly.

Sun Proprietary/Confidential: Internal Use Only

5. **Push on the front panel to completely seat the optical module in the assembly.**
6. **Push the ejector lever in to lock the lever. You should feel it click.**
7. **Tighten the two captive screws, one at each end of the optical module.**

Installing a Fire Link Optical Module In a Sun Fire 15K/12K System

Fire Link optical modules are installed in the two lower slots (labeled LINK 0 and LINK 2) in the Fire Link assembly.

1. **Attach an ESD wrist strap or foot strap. Connect the strap to the system.**
2. **If installed, remove the filler panel.**
3. **Press the ejector lever down on the optical module.**
4. **Hold the optical module by the two side edges or the front panel and slide it into the slot in between the two guides.**

The cutouts in the handle of the optical module must align with the square cut outs on the Sun Fire Link assembly.
5. **Push on the front panel to completely seat the optical module in the assembly.**
6. **Push the handle in to lock the lever. You should feel it click.**
7. **Tighten the two captive screws, one at each end of the optical module.**

Sun Proprietary/Confidential: Internal Use Only