



SunFire X4640 CPU Module and Filler Identification

SunFire X4640 CPU Module

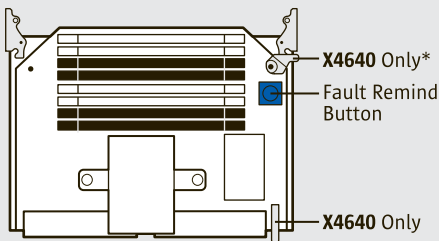

SunFire X4640 CPU Filler

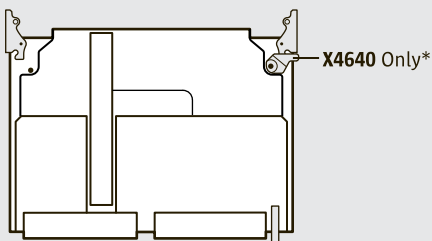


* Keying feature prevents insertion into incompatible systems.

Configuration Information

- Use ONLY **SunFire X4640** CPU Modules and **SunFire X4640** CPU Fillers.
- Use ONLY **SunFire X4640** CPU Modules of the same revision in your server.
- Refer to the Service Manual for supported CPU Module configurations.
- Use one of two configurations shown below.


=Module number

8 CPU Modules

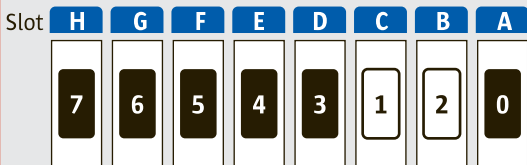

Note Module order: C=1, B=2

4 CPU Modules

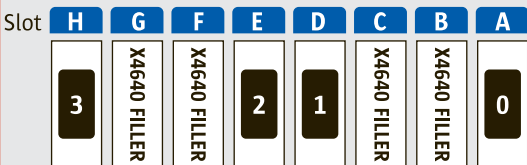

4 Filler SunFire X4640 Modules Required