

Tools Required

- Anti-static wrist strap
- #2 Phillips screwdriver
- Stylus (or Pencil)
- Anti-static mat

Procedure Color Coding

- Hot Service
- Cold Service

Must power down system

CAUTION

Rack may tip.
Always deploy anti-tilt legs.

Only extend 1 system at a time.

CAUTION

System is heavy.
(88lb/40 kg)

Use 2 persons to lift or transport.

FT Status Indicator

- ▲ Fault (Service action required)

Enclosure Status Indicators

Locate LED/Button	Fault (Service action required)	OK (Steady on)	ON/Standby Button (Front only)
		Standby (Blink)	
		Transition (Blink)	

Supplemental Enclosure Status Indicators


TOP FAN Fault (Service action required)	REAR PS Fault (Service action required)	Fault (System Over Temperature)

On/Standby Button Use

POWER ON SYSTEM: Press

SET SYSTEM TO STANDBY: Graceful shut down: Press and release.

Emergency shut down: Press and hold for >4 seconds.

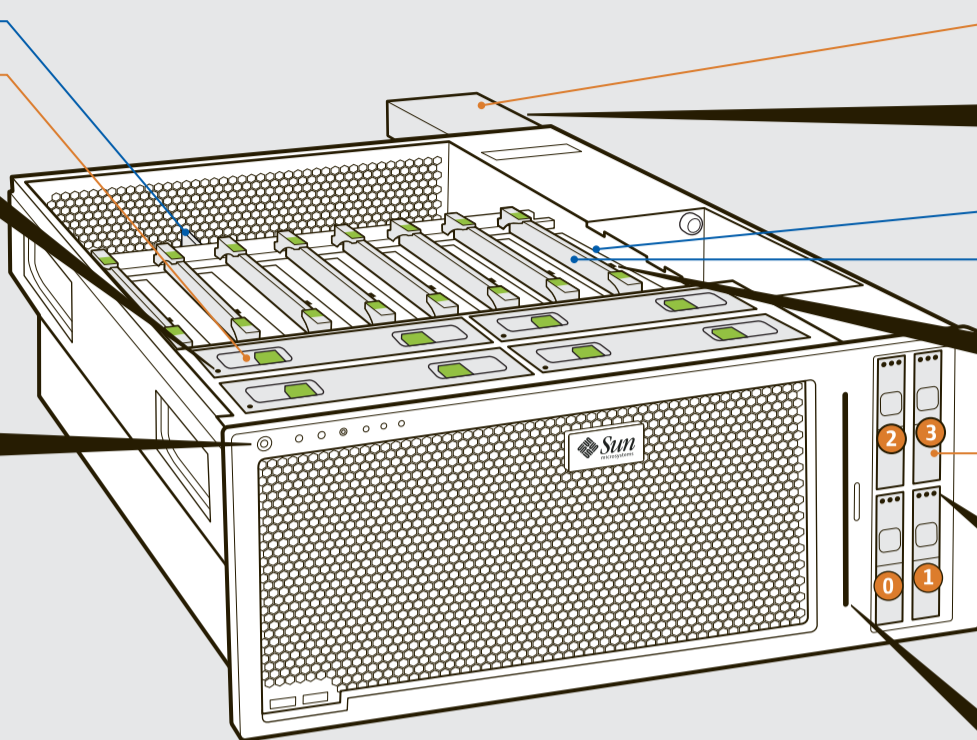

2 Power Supplies (PS)

Bi-color PS Status Indicator

- ▲ Fault (Service action required)
- OK OK

6 DDR-2 DIMMs (on CPU Modules)

5 SunFire X4640 CPU Modules

CPU Module Status Indicator

- ▲ Fault (Service action required)

1 Hard Drives (HDD)

HDD Status Indicators

-
- ▲ LED NOT Functional
- ▲ Fault (Service action required)
- OK OK

DVD Media Orientation

Insert DVD with graphics facing left.

1 HDD Removal

- 1 Identify desired HDD.
- 2 Remove HDD.
- 3 Use correct drive.

2 Power Supply (PS) Removal

- 1 Rotate out Cable Management Arm (CMA).
- 2 1. Identify Faulted PS. 2. Disconnect power cable.
- 3 1. Unlatch PS. 2. Remove PS.

3 PCI Card Insertion

NOTE: Only Low Profile PCI cards can be installed in this system.

1. Set system to standby.
2. Remove Top Cover.

- 3 1. Open locking lever. 2. Lift out filler.
- 4 Insert PCI card.
- 5 Swing rear locking lever down to lock PCI card.

4 Fan Tray (FT) Removal

- 1 Identify faulted Fan Tray.
- 2 Lift Fan Tray.

INFORMATION

System will overheat without Fan Trays installed. Replace Fan Tray within 60 seconds of removal.

5 SunFire X4640 CPU Module and CPU Filler Removal

NOTE: Configuration information is found on chart inside system.

1. Set system to standby.
2. Remove Top Cover.
3. Identify slot.

- 1 Identify Module.
- 2 Open eject levers.
- 3 Carefully lift module/filler and place on anti-static mat.


6 DDR-2 DIMM Configuration, Population, and Replacement

IMPORTANT: Memory resides on the CPU Modules.

Only use SunFire X4640 CPU Modules.

Use only DDR-2 DIMMs.

Ensure DIMMs are installed in matched pairs with the same Sun PN.

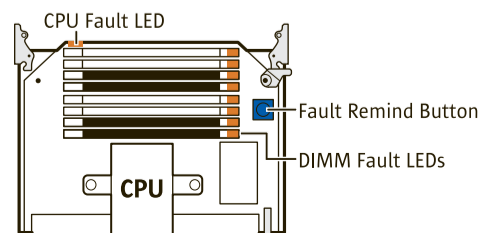


Paired DIMMs only

1	DIMM 7 DIMM 6
2	DIMM 5 DIMM 4
3	DIMM 3 DIMM 2
4	DIMM 1 DIMM 0

Installation order

- 1 Set system to standby.
- 2 Remove Top Cover.
- 3 Remove desired CPU Module and place on anti-static mat.

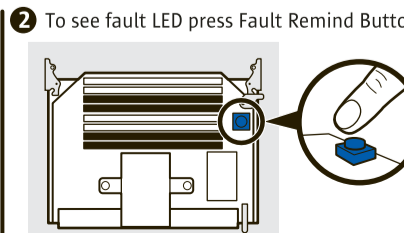

- 3 DIMMs must be installed in matched pairs.

- 4 Press DIMM fully into socket. Be sure lock tabs are engaged.