



ExPR Installation Note: *Read this first*

- ✓ ExPR installation tasks are numbered and must be performed sequentially.
- ✓ Follow the installation instructions as described in the *ExPR Installation, Configuration, and Administration Guide* (chapter 4, *ExPR Installation and Configuration Tasks*).
- ✓ Use the table below as a checklist while you install ExPR.

Installation Checklist

✓	Task	Description
	<i>Before You Start</i>	<ol style="list-style-type: none"> 1. New ExPR sites will require a license key (existing sites already have one). You cannot install ExPR without a license key. Get your key from StorageTek Software Manufacturing Distribution (SMD). See the separate data sheet for instructions. 2. Read the <i>Installation Planning</i> chapter in the <i>ExPR Installation, Configuration, and Administration Guide</i>. This chapter describes how ExPR executes in your MVS environment and details MVS housekeeping procedures you may need to perform prior to installing ExPR. 3. Get current recommended ExPR maintenance information from StorageTek Software Support or go online to the StorageTek Customer Resource Center (CRC) at http://www.support.storagetek.com
	Task 1	Perform SMP/E Installation
	Task 2	Define ExPR Datasets
	Task 3	Tailor the ExPR Procedure
	Task 4	Initialize ExPR Datasets
	Task 5	Install the ExPR Started Task
	Task 6	Install the ExPR SMF Exit (optional)
	Task 7	Install the ExPR Security Exit (optional)
	Task 8	Activate the ExPR License Key
	Task 9	Install ExPR on a PC
	Task 10	Define Network Connections to the PC
	Task 11	Retrieve the Host Configuration to the PC
	Task 12	Store the Revised Configuration to the Host
	Task 13	Define Devices
	Task 14	Define Settings
	Task 15	Define Exception Thresholds
	Task 16	Define Tape Catalog Processing
	Task 17	Copy Previous Version Data to New Datasets (optional)
	Task 18	Perform Installation Verification Procedures
	Task 19	Install and Configure Web Browser Interface (optional)