

# *Integrated Signaling System*

---

## **Feature Manual - V-Flex**

910-5727-001 Revision A

June 2009



**Copyright 2009 Tekelec  
All Rights Reserved  
Printed in USA**

## **Notice**

Information in this documentation is subject to change without notice. Unauthorized use, copying, or translation of this documentation can result in civil or criminal penalties.

Any export of Tekelec products is subject to the export controls of the United States and the other countries where Tekelec has operations.

No part of this documentation may be reproduced, translated, or transmitted in any form or by any means, electronic or mechanical, including photocopying or recording, for any purpose without the express written permission of an authorized representative of Tekelec.

Other product names used herein are for identification purposes only, and may be trademarks of their respective companies.

RoHS 5/6 - As of July 1, 2006, all products that comprise new installations shipped to European Union member countries will comply with the EU Directive 2002/95/EC "RoHS" (Restriction of Hazardous Substances). The exemption for lead-based solder described in the Annex will be exercised. RoHS 5/6 compliant components will have unique part numbers as reflected in the associated hardware and installation manuals.

WEEE - All products shipped to European Union member countries comply with the EU Directive 2002/96/EC, Waste Electronic and Electrical Equipment. All components that are WEEE compliant will be appropriately marked. For more information regarding Tekelec's WEEE program, contact your sales representative.

## **Trademarks**

The Tekelec logo, EAGLE, G-Flex, G-Port, IP7, IP7 Edge, and IP7 Secure Gateway are registered trademarks of Tekelec. TekServer, A-Port, EAGLE 5 ISS, and V-Flex are trademarks of Tekelec. All other trademarks are the property of their respective owners.

## **Patents**

This product is covered by one or more of the following U.S. and foreign patents:

### U.S. Patent Numbers:

5,732,213; 5,953,404; 6,115,746; 6,167,129; 6,324,183; 6,327,350; 6,456,845; 6,606,379; 6,639,981; 6,647,113; 6,662,017; 6,735,441; 6,745,041; 6,765,990; 6,795,546; 6,819,932; 6,836,477; 6,839,423; 6,885,872; 6,901,262; 6,914,973; 6,940,866; 6,944,184; 6,954,526; 6,954,794; 6,959,076; 6,965,592; 6,967,956; 6,968,048; 6,970,542; 6,987,781; 6,987,849; 6,990,089; 6,990,347; 6,993,038; 7,002,988; 7,020,707; 7,031,340; 7,035,239; 7,035,387; 7,043,000; 7,043,001; 7,043,002; 7,046,667; 7,050,456; 7,050,562; 7,054,422; 7,068,773; 7,072,678; 7,075,331; 7,079,524; 7,088,728; 7,092,505; 7,108,468; 7,110,780; 7,113,581; 7,113,781; 7,117,411; 7,123,710; 7,127,057; 7,133,420; 7,136,477; 7,139,388; 7,145,875; 7,146,181; 7,155,206; 7,155,243; 7,155,505; 7,155,512; 7,181,194; 7,190,702; 7,190,772; 7,190,959; 7,197,036; 7,206,394; 7,215,748; 7,219,264; 7,222,192; 7,227,927; 7,231,024; 7,242,695; 7,254,391; 7,260,086; 7,260,207; 7,283,969; 7,286,516; 7,286,647; 7,286,839; 7,295,579; 7,299,050; 7,301,910; 7,304,957; 7,318,091; 7,319,857; 7,327,670

### Foreign Patent Numbers:

EP1062792; EP1308054; EP1247378; EP1303994; EP1252788; EP1161819; EP1177660; EP1169829; EP1135905; EP1364520; EP1192758; EP1240772; EP1173969; CA2352246

## **Ordering Information**

Your Tekelec Sales Representative can provide you with information about how to order additional discs.

# Table of Contents

<b>Chapter 1: Introduction.....</b>	<b>1</b>
Introduction.....	2
Scope and Audience.....	3
Manual Organization.....	3
Related Publications.....	4
Documentation Availability, Packaging, and Updates.....	4
Documentation Admonishments.....	5
Customer Care Center.....	5
Emergency Response.....	7
Locate Product Documentation on the Customer Support Site.....	8
Customer Assistance.....	8
<b>Chapter 2: Feature Description.....</b>	<b>9</b>
V-Flex Feature Overview.....	10
V-Flex Protocol.....	12
MPS/EPAP Platform.....	13
EPAP/PDBA Overview.....	15
Subscriber Data Provisioning.....	16
EPAP (EAGLE Provisioning Application Processor).....	18
Service Module Cards.....	19
Network Connections.....	22
Serviceability Hints.....	26
<b>Chapter 3: EAGLE 5 ISS V-Flex Commands.....</b>	<b>29</b>
Introduction.....	30
EAGLE 5 ISS Commands for V-Flex.....	30
EAGLE 5 ISS Card Commands.....	31
EAGLE 5 ISS Serial Number Commands.....	32
EAGLE 5 ISS System Options Commands.....	32
EAGLE 5 ISS Feature Control Commands.....	33
EAGLE 5 ISS Self ID and Capability Point Code Commands.....	34
EAGLE 5 ISS Mate Application Commands.....	35
EAGLE 5 ISS Subsystem Application Commands.....	36
EAGLE 5 ISS Service Selector Commands.....	36

EAGLE 5 ISS V-Flex Options Commands.....	40
EAGLE 5 ISS HOMERN Prefix Commands.....	40
EAGLE 5 ISS Voice Mail Prefix Commands.....	41
EAGLE 5 ISS Voice Mail Routing Number Commands.....	42
EAGLE 5 ISS Voice Mail Server ID Commands.....	43
EAGLE 5 ISS Call Decision Entry Commands.....	44
EAGLE 5 ISS Local Subsystem Activation Commands.....	45
Maintenance Commands for V-Flex.....	45
rept-stat-sys.....	46
rept-stat-sccp.....	47
rept-stat-mps.....	48
rept-stat-trbl.....	49
rept-stat-alm.....	49
rept-stat-db.....	50
rtrv-tbl-capacity.....	50
inh-card / alw-card.....	51
inh-alm / unhb-alm.....	51
rtrv-data-rtdb.....	51
Measurements Commands for V-Flex.....	51
chg-measopts.....	52
rtrv-measopts.....	52
rept-ftp-meas.....	53
rept-stat-meas.....	53
EAGLE 5 ISS Debug Commands.....	53

## **Chapter 4: V-Flex Configuration.....55**

Introduction.....	56
Provisioning Service Module Cards.....	56
Adding a Service Module.....	57
Enabling V-Flex, Setting STP Options, and Turning On V-Flex.....	59
Provisioning True Point Code and Capability Point Code.....	63
Provisioning a Mated Application using True Point Code.....	64
Provisioning V-Flex as a Local Subsystem.....	65
Adding the V-Flex Subsystem Application.....	65
Removing the V-Flex Subsystem Application.....	67
Routing MSUs to Support V-Flex Subsystem.....	70
Provisioning the V-Flex Service Selector.....	71
Adding a V-Flex Service Selector.....	71
Removing a Service Selector.....	72
Changing an Existing Service Selector to a V-Flex Service Selector.....	74

Provisioning the V-Flex Options.....	76
Provisioning HOMERN Entries.....	78
Provisioning Voice Mail Prefix Entries.....	78
Provisioning Voice Mail Routing Numbers.....	79
Provisioning Voice Mail Server ID Entries.....	80
Provisioning Call Decision Table Entries.....	82
Activating the V-Flex Subsystem.....	83
Changing the State of a Subsystem Application.....	86
Taking the Subsystem Application Offline.....	87
Taking the Subsystem Application Online.....	90
Activating the E5-SM4G Throughput Capacity Feature.....	91
Configuring the Measurements Platform for V-Flex.....	95

**Chapter 5: Maintenance and Measurements.....97**

Hardware Requirements.....	98
EPAP Status and Alarms.....	98
DSM Status Requests.....	99
V-Flex Alarms.....	99
Migration System Status Reports.....	107
Code and Application Data Loading.....	108
EPAP Application Data Loading.....	108
State Transitions during Start-Up.....	110
V-Flex UIMs.....	112
V-Flex Measurements.....	118

**Glossary.....121**

# List of Figures

Figure 1: Call Scenario with V-Flex Feature.....	10
Figure 2: MPS/EPAP Platform Architecture.....	14
Figure 3: Subscriber Data Provisioning Architecture (High Level).....	17
Figure 4: Database Administrative Architecture.....	18
Figure 5: Customer Provisioning Network.....	22
Figure 6: EPAP Sync Network.....	23
Figure 7: DSM Networks.....	24
Figure 8: Dial-Up PPP Network.....	25
Figure 9: Obbit Message for Abort of Card Loading.....	110
Figure 10: V-Flex Enabled, Normal Operating Sequence.....	111
Figure 11: V-Flex Enabled, but Service Module Not Connected to EPAP.....	111
Figure 12: V-Flex Enabled, but Service Module card memory Insufficient for Database.....	111
Figure 13: V-Flex Enabled, but Database Exceeds Service Module card memory.....	111
Figure 14: V-Flex Not Enabled at First, but then Activated on Service Module.....	112
Figure 15: V-Flex Activation Unsuccessful due to Insufficient Database.....	112

# List of Tables

Table 1: Admonishments.....	5
Table 2: EPAP IP Addresses in the DSM Network.....	25
Table 3: EAGLE 5 ISS Commands Used for V-Flex.....	30
Table 4: ent-srvsel Parameters - Class = DATABASE.....	37
Table 5: chg-srvsel Parameters - Class = DATABASE.....	37
Table 6: dlt-srvsel Parameters - Class = DATABASE.....	38
Table 7: rtrv-srvsel Parameters - Class = DATABASE.....	39
Table 8: chg-vflx-opts Parameters - Class = DATABASE.....	40
Table 9: Service Module Card Locations.....	57
Table 10: Subsystem Allow/Inhibit.....	84
Table 11: V-Flex UAMs.....	100
Table 12: V-Flex UIMs.....	113
Table 13: Pegs for Per System V-Flex Measurements.....	119
Table 14: Pegs for Per SSP V-Flex Measurements.....	119



# Chapter 1

## Introduction

---

### Topics:

- *Introduction.....2*
- *Scope and Audience.....3*
- *Manual Organization.....3*
- *Related Publications.....4*
- *Documentation Availability, Packaging, and Updates.....4*
- *Documentation Admonishments.....5*
- *Customer Care Center.....5*
- *Emergency Response.....7*
- *Locate Product Documentation on the Customer Support Site.....8*
- *Customer Assistance.....8*

V-Flex is an EAGLE 5 ISS feature that allows operators to customized voice mail routing based on subscriber information and call status. With the introduction of advanced services such as video and multimedia voice mail and the implementation of a tiered voice mail service structure, operators can deploy a few advanced voice mail servers for premium customers, while maintaining standard platforms to service the majority of basic voice mail subscribers.

## Introduction

V-Flex is an EAGLE 5 ISS feature that allows operators to customized voice mail routing based on subscriber information and call status. With the introduction of advanced services such as video and multimedia voice mail and the implementation of a tiered voice mail service structure, operators can deploy a few advanced voice mail servers for premium customers, while maintaining standard platforms to service the majority of basic voice mail subscribers.

Range-based voice mail routing schemes route calls to all available voice mail server centers (VMSCs) in an equal, load-sharing scheme. Subscriber numbers are grouped into ranges and are routed to the VMSC associated with a particular number range. This routing scheme does not make it possible to assign a subscriber to a particular VMSC on an individual basis.

### Flexible Voice mail Routing

V-Flex provides operators with the ability to associate individual subscriber numbers (DN or MSISDN) to a specific voice mail server in a centralized database. V-Flex determines which VMSC the voice mail call should be routed to for a specific subscriber. This allows the operator to make specific subscriber-to-VMSC assignments, making the most efficient use of the VMSC platforms that are deployed.

In addition, V-Flex also provides a flexible routing scheme with DN/MSISDN-VMSC assignment controlled by a central application. This means that mobile switching centers (MSCs) with the V-Flex feature would not need to maintain separate number ranges, each with a VMSC assignment. Consequently, subscriber re-assignment and platform maintenance is greatly simplified.

V-Flex is an advanced database application. Deployed as a local subsystem on the EAGLE 5 ISS platform, V-Flex centralizes voice mail routing. Queries from MSCs are routed directly to the EAGLE 5 ISS V-Flex node, where the subscriber DN/MSISDN-VMSC mappings and call decision criteria are provisioned and maintained in the system OAM. Upon receipt of the query, V-Flex uses mapping tables and call decision criteria to determine a specific voice mail routing number, which the MSC uses to route the call.

### V-Flex Benefits

- Easy deployment of premium voice mail services
- Maximized resource utilization - V-Flex centralizes voice mail routing, performing load balancing across multiple VMSCs as well as alleviating the need for MSCs to maintain number range tables. The core routing solution allows the most efficient use of network resources and simplifies provisioning and maintenance.
- Scalability - Tekelec is the industry leader in providing advanced database applications, such as V-Flex, providing high capacity, superior throughput and scalability up to 96 million subscriber numbers per node.
- Simplified provisioning - Easy-to-use interface simplifies operator provisioning of subscriber VMSC mapping and call decision criteria. Provisioning is non-service affecting and can be done in real time.

### V-Flex Functions

V-Flex provides the following functions:

- Flexible number mapping provides a logical link between a subscriber (MSISDN/DN) and a VMSC
- Supports up to eight DNs per subscriber
- Support for individual and range entries
- Up to 96 million subscriber numbers, scalable in increments of 500,000
- Up to 50,000 MSISDN range entries
- Variable-length database supports numbers from 1 to 15 digits
- Number normalization feature stores numbers in international format and automatically translates national numbers to international numbers before searching the database, preventing duplicate number storage
- Centralized routing data for simplified provisioning and maintenance
- Flexible network deployment – can be deployed as a standalone solution or integrated with the EAGLE 5 ISS signal transfer point (STP) function, and/or other EAGLE 5 ISS platform applications
- Scalable from 850 to 75,000 transactions per second (TPS)
- Real-time memory-based database with less than 75 millisecond processing delay
- Automatic provisioning synchronization – database changes are sent to one node and automatically replicated to other V-Flex nodes
- High-provisioning transaction rate – over 25 database updates per second
- 99.99999% availability for mated pair deployments
- Supports two different query types:
  - ITU/ETSI INAP IDP query
  - 3GPP CAMEL (CAP) IDP query

### V-Flex Considerations

- GTT must be ON before the V-Flex feature can be enabled
- The V-Flex feature requires 4 GB Service Module cards.
- V-Flex and North American LNP are mutually exclusive in an EAGLE 5 ISS node.

## Scope and Audience

This manual is intended for anyone responsible for installing, maintaining, and using the V-Flex feature in the EAGLE 5 ISS. Users of this manual and the others in the EAGLE 5 ISS family of documents must have a working knowledge of telecommunications and network installations.

## Manual Organization

This document is organized into the following chapters:

- [Introduction](#) on page 1, contains general information about the V-Flex documentation, the organization of this manual, and how to get technical assistance.

- [Feature Description](#) on page 9, provides a functional description of the V-Flex feature, including network perspectives, assumptions and limitations, a database overview, Service Module card provisioning and reloading, and V-Flex user interface overview.
- [EAGLE 5 ISS V-Flex Commands](#) on page 29, describes the new or updated commands that support the V-Flex feature. It provides some sample reports and explanations of appropriate command usage.
- [V-Flex Configuration](#) on page 55, describes Eagle 5 ISS provisioning for the V-Flex feature.
- [Maintenance and Measurements](#) on page 97, describes maintenance and measurements in detail, including EPAP status and alarms, hardware verification messages, V-Flex system status reports and commands, code and application data loading, and alarms.

## Related Publications

For information about additional publications that are related to this document, refer to the *Related Publications* document. The *Related Publications* document is published as a part of the *Release Documentation* and is also published as a separate document on the Tekelec Customer Support Site.

## Documentation Availability, Packaging, and Updates

Tekelec provides documentation with each system and in accordance with contractual agreements. For General Availability (GA) releases, Tekelec publishes a complete EAGLE 5 ISS documentation set. For Limited Availability (LA) releases, Tekelec may publish a documentation subset tailored to specific feature content or hardware requirements. Documentation Bulletins announce a new or updated release.

The Tekelec EAGLE 5 ISS documentation set is released on an optical disc. This format allows for easy searches through all parts of the documentation set.

The electronic file of each manual is also available from the Tekelec Customer Support site ([support.tekelec.com](http://support.tekelec.com)). This site allows for 24-hour access to the most up-to-date documentation, including the latest versions of Feature Notices.

Printed documentation is available for GA releases on request only and with a lead time of six weeks. The printed documentation set includes pocket guides for commands and alarms. Pocket guides may also be ordered separately. Exceptions to printed documentation are:

- Hardware or Installation manuals are printed without the linked attachments found in the electronic version of the manuals.
- The Release Notice is available only on the Customer Support site.

**Note:** Customers may print a reasonable number of each manual for their own use.

Documentation is updated when significant changes are made that affect system operation. Updates resulting from Severity 1 and 2 PRs are made to existing manuals. Other changes are included in the documentation for the next scheduled release. Updates are made by re-issuing an electronic file to the customer support site. Customers with printed documentation should contact their Sales Representative for an addendum. Occasionally, changes are communicated first with a

Documentation Bulletin to provide customers with an advanced notice of the issue until officially released in the documentation. Documentation Bulletins are posted on the Customer Support site and can be viewed per product and release.

## Documentation Admonishments

Admonishments are icons and text throughout this manual that alert the reader to assure personal safety, to minimize possible service interruptions, and to warn of the potential for equipment damage.

**Table 1: Admonishments**

	<p><b>DANGER:</b> (This icon and text indicate the possibility of <i>personal injury</i>.)</p>
	<p><b>WARNING:</b> (This icon and text indicate the possibility of <i>equipment damage</i>.)</p>
	<p><b>CAUTION:</b> (This icon and text indicate the possibility of <i>service interruption</i>.)</p>

## Customer Care Center

The Tekelec Customer Care Center is your initial point of contact for all product support needs. A representative takes your call or email, creates a Customer Service Request (CSR) and directs your requests to the Tekelec Technical Assistance Center (TAC). Each CSR includes an individual tracking number. Together with TAC Engineers, the representative will help you resolve your request.

The Customer Care Center is available 24 hours a day, 7 days a week, 365 days a year, and is linked to TAC Engineers around the globe.

Tekelec TAC Engineers are available to provide solutions to your technical questions and issues 7 days a week, 24 hours a day. After a CSR is issued, the TAC Engineer determines the classification of the trouble. If a critical problem exists, emergency procedures are initiated. If the problem is not critical, normal support procedures apply. A primary Technical Engineer is assigned to work on the CSR and provide a solution to the problem. The CSR is closed when the problem is resolved.

Tekelec Technical Assistance Centers are located around the globe in the following locations:

### Tekelec - Global

Email (All Regions): [support@tekelec.com](mailto:support@tekelec.com)

- **USA and Canada**

Phone:

1-888-FOR-TKLC or 1-888-367-8552 (toll-free, within continental USA and Canada)

1-919-460-2150 (outside continental USA and Canada)

TAC Regional Support Office Hours:

8:00 a.m. through 5:00 p.m. (GMT minus 5 hours), Monday through Friday, excluding holidays

- **Central and Latin America (CALA)**

Phone:

USA access code +1-800-658-5454, then 1-888-FOR-TKLC or 1-888-367-8552 (toll-free)

TAC Regional Support Office Hours (except Brazil):

10:00 a.m. through 7:00 p.m. (GMT minus 6 hours), Monday through Friday, excluding holidays

- **Argentina**

Phone:

0-800-555-5246 (toll-free)

- **Brazil**

Phone:

0-800-891-4341 (toll-free)

TAC Regional Support Office Hours:

8:30 a.m. through 6:30 p.m. (GMT minus 3 hours), Monday through Friday, excluding holidays

- **Chile**

Phone:

1230-020-555-5468

- **Columbia**

Phone:

01-800-912-0537

- **Dominican Republic**

Phone:

1-888-367-8552

- **Mexico**

Phone:

001-888-367-8552

- **Peru**

Phone:

0800-53-087

- **Puerto Rico**
  - Phone:  
1-888-367-8552 (1-888-FOR-TKLC)
- **Venezuela**
  - Phone:  
0800-176-6497
- **Europe, Middle East, and Africa**
  - **Signaling**
    - Phone:  
+44 1784 467 804 (within UK)
    - TAC Regional Support Office Hours:  
8:00 a.m. through 7:00 p.m. (GMT), Monday through Friday, excluding holidays
  - **Software Solutions**
    - Phone:  
+33 3 89 33 54 00
    - TAC Regional Support Office Hours:  
8:00 a.m. through 7:00 p.m. (GMT), Monday through Friday, excluding holidays
- **Asia**
  - **India**
    - Phone:  
+91 124 436 8552 or +91 124 436 8553
    - TAC Regional Support Office Hours:  
10:00 a.m. through 7:00 p.m. (GMT plus 5 1/2 hours), Monday through Saturday, excluding holidays
  - **Singapore**
    - Phone:  
+65 6796 2288
    - TAC Regional Support Office Hours:  
9:00 a.m. through 6:00 p.m. (GMT plus 8 hours), Monday through Friday, excluding holidays

## Emergency Response

In the event of a critical service situation, emergency response is offered by the Tekelec Customer Care Center 24 hours a day, 7 days a week. The emergency response provides immediate coverage,

automatic escalation, and other features to ensure that the critical situation is resolved as rapidly as possible.

A critical situation is defined as a problem with an EAGLE 5 ISS that severely affects service, traffic, or maintenance capabilities, and requires immediate corrective action. Critical problems affect service and/or system operation resulting in:

- A total system failure that results in loss of all transaction processing capability
- Significant reduction in system capacity or traffic handling capability
- Loss of the system's ability to perform automatic system reconfiguration
- Inability to restart a processor or the system
- Corruption of system databases that requires service affecting corrective actions
- Loss of access for maintenance or recovery operations
- Loss of the system ability to provide any required critical or major trouble notification

Any other problem severely affecting service, capacity/traffic, billing, and maintenance capabilities may be defined as critical by prior discussion and agreement with the Tekelec Customer Care Center.

## Locate Product Documentation on the Customer Support Site

Access to Tekelec's Customer Support site is restricted to current Tekelec customers only. This section describes how to log into the Tekelec Customer Support site and locate a document. Viewing the document requires Adobe Acrobat Reader, which can be downloaded at [www.adobe.com](http://www.adobe.com).

1. Log into the Tekelec **new** Customer Support site at [support.tekelec.com](http://support.tekelec.com).  
**Note:** If you have not registered for this new site, click the **Register Here** link. Have your customer number available. The response time for registration requests is 24 to 48 hours.
2. Click the **Product Support** tab.
3. Use the Search field to locate a document by its part number, release number, document name, or document type. The Search field accepts both full and partial entries.
4. Click a subject folder to browse through a list of related files.
5. To download a file to your location, right-click the file name and select **Save Target As**.

## Customer Assistance

The Tekelec Customer Care Center offers a point of contact through which customers can receive support for problems. The Tekelec Customer Care Center is staffed with highly-trained engineers to provide solutions to technical questions and issues seven days a week, twenty-four hours a day. A variety of service programs are available through the Tekelec Customer Care Center to maximize the performance of Tekelec products that meet and exceed customer needs.

# Chapter 2

## Feature Description

---

### Topics:

- [V-Flex Feature Overview.....10](#)
- [V-Flex Protocol.....12](#)
- [MPS/EPAP Platform.....13](#)


This chapter describes how V-Flex permits routing of calls to voice mail systems with specific capabilities based on subscriber and call context information.

## V-Flex Feature Overview

V-Flex permits routing of calls to voice mail systems with specific capabilities based on subscriber and call context information. The scenario for a voice mail call to an MSC supported by an Eagle with the V-Flex feature enabled is:

1. MSC receives an IAM for a call being routed to a VMS
2. MSC is programmed to generate an IDP to the EAGLE 5 ISS (instead of directly to a VMS)
3. Eagle 5 ISS, using subscriber information and call context information from the IAM:
  - Analyzes the information provided in the IDP
  - Performs appropriate database searches
  - Generates a CONNECT message to the MSC with routing information
4. MSC connects to the correct VMS based on routing information

**Figure 1: Call Scenario with V-Flex Feature**

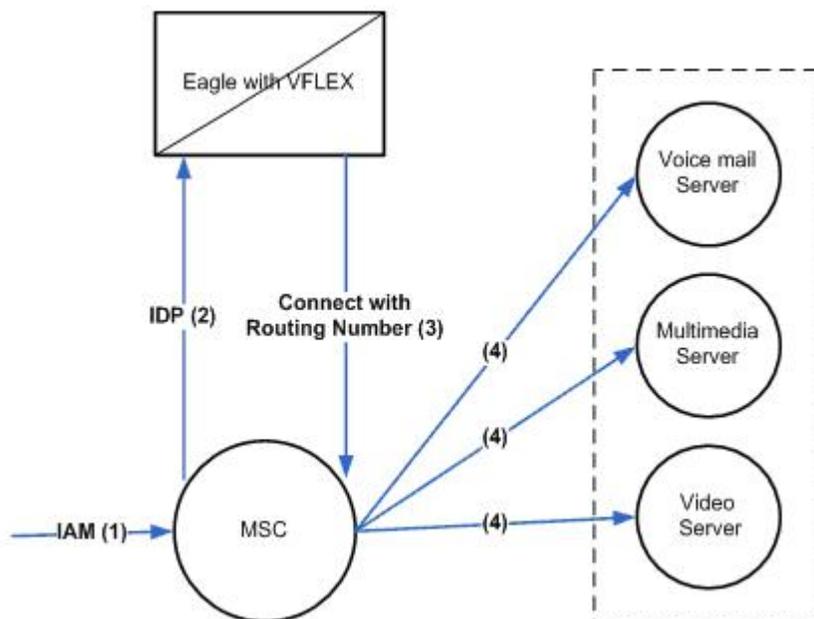

When the V-Flex service is triggered, V-Flex must determine three things for the transaction to be successful:

- The MSISDN of the subscriber whose voice mail is being accessed
- The VMS ID assigned to that subscriber (MSISDN)
- The Voice Mail Routing Number of the VMS associated with the MSISDN of the subscriber

### Determining the MSISDN

The first step is to determine where to find the MSISDN of the subscriber whose voice mail is being accessed.

A valid MSISDN is defined as :

- An MSISDN found in the IDP query
- An MSISDN correctly encoded in the IDP query
- An MSISDN found either as a DN or within DN Block in the RTDB
- An MSISDN or DN Block that has an associated VMS ID or GRN entity



**TOPPLE:** An invalid MSISDN can still be routed using a default routing number provisioned in the Call Decision Table (for an MSISDN "not found" that matches other parameters).

How the MSISDN is determined is dependent on the type of VM call that is made. Voice mail calls can be made in two ways:

- Redirected call to a VMS by the MSC
- Direct call to VMS using standard VMS number used by the MSC

When a call is redirected (indicated by the RDI parameter in the IDP), the MSISDN is identified by one of the following:

- Check for MSISDN in Re-Directing Number (RDN)
- If there is no MSISDN in RDN, get MSISDN from Original Called Number (OCN)

For a direct VMS call, the MSISDN is identified by checking for a VM prefix in the INAP CalledPartyNumber or the CAP CalledPartyBCDNumber resulting in one of the following options:

- If there is a match on the VM prefix, get MSISDN from CdPN / CdPBCDN following VM prefix digits
- If there is no match on the VM prefix in CdPN / CdPBCDN, get MSISDN from INAP/CAP CgPN
- If there is a match on the VM prefix and there are additional digits in the CdPN/CdPBCDN, then get MSISDN from CdPN/CdPBCDN following VM prefix digits
- If there is a match on the VM prefix and there are no additional digits in the CdPN/CdPBCDN, then get MSISDN from INAP/CAP CgPN
- If there is no match on the VM prefix in CdPN/CdPBCDN, get MSISDN from INAP/CAP CgPN

### Determining the VMS ID

The second step is to find the VMS ID assigned to the subscriber (MSISDN). For this, V-Flex extracts the MSISDN from the appropriate parameter and uses it to search the Eagle Real-time Database (RTDB) to find the VMS ID assigned to that subscriber. A match may be found on a specific DN, or within a DN Block.

### Determining the VMRN

The third step is to determine the VMRN. The VMRN is determined based on the following call conditions (combination of parameters in the Call Decision Table):

**Voice Mail Number or Voice Mail Prefix (from the INAP/CAP CdPN or CdPBCDN parameter)**

For redirect by the MSC, the Voice Mail Number is used.

For a direct dial by the subscriber, the Voice Mail Prefix is used if it is available (VMPrefix + MSISDN in the INAP CdPN). When the VMPrefix is not available, the CdPN is used.

Different voice mail numbers correspond to different call scenarios and can be used to determine which VMS routing number should be used.

**Redirection Indicator (INAP/CAP RDI parameter)**

Indicates whether the call has been redirected (redirection signifies a voice mail deposit). If the call has not been redirected, the call is either a voice mail retrieval or a direct dialed VM deposit (as determined by the INAP/CAP CdPN).

**Bearer Capabilities (INAP/CAP)**

Determines the type of mail – for example voice, video, multimedia, etc.

**Note:** Bearer Capabilities is a set of up to 32 values (0-31) configured by the network provider.

**MSISDN found or not found in the EPAP RTDB**

Indicates authorized versus unauthorized retrieval.

Based on the parameter values in the Call Decision Table, V-Flex determines the appropriate VMRN and returns it in a connect response to the MSC. The MSC uses the VMRN supplied by V-Flex to route the Voice Mail call.

## V-Flex Protocol

The EAGLE 5 ISS supports the V-Flex capability point code type and an additional local subsystem that is entered into the MAP table. Like other entries in the MAP table, this subsystem can have a mate subsystem, and a concerned point code group assigned to it. This subsystem is administered using MAP commands (*ent-map*, *chg-map*, *dlr-map*). All point code types (except ITUN-24) are supported in the MAP commands. The V-Flex subsystem cannot be set to Load Shared mode (as end nodes do not perform load sharing), but is set to Dominant or Solitary mode.

**Multiple Local Subsystems**

The EAGLE 5 ISS supports more than one local subsystem, allowing local subsystem for two or more EPAP-related features to operate at the same time. For example, local subsystems for V-Flex and EIR can coexist in the system.

**Messages for Local Subsystems**

The message arrives on the V-Flex subsystem on *rt-on-ssn* or *rt-on-gt*. If the message arrives *rt-on-ssn*, it must contain either the EAGLE 5 ISS true point code or the V-Flex capability point code in the DPC field of the message, and EAGLE 5 ISS V-Flex Subsystem number in the Called Party Subsystem field of the message. If V-Flex queries has the EAGLE 5 ISS capability point code for the DPC, then the EAGLE 5 ISS processes the message, but is not able to divert this message in the event of subsystem failure.

If a *rt-on-gt* message arrives at the EAGLE 5 ISS, it must either contain a CdPA address that translates to the V-Flex subsystem or match SCCP Service Selectors that have been provisioned to select V-Flex. These messages also should contain one of EAGLE 5 ISS capability point codes

in the DPC field. The EAGLE 5 ISS also processes the message if it has the EAGLE 5 ISS's true point code for the DPC, but it is not able to divert these messages in the event of subsystem failure.

If the V-Flex local subsystem is offline and the mated subsystem is available, the routing indicator is used to determine whether to reroute:

- If the message arrived route-on-ssn, the message is not rerouted to the mate. In this case, EAGLE 5 ISS is acting as an end node, and end nodes do not reroute. If the return on error option is set, the EAGLE 5 ISS generates a UDTs, otherwise it will discard the message.
- If the message arrived on route-on-gt, the message is rerouted to the mated subsystem. In this case, EAGLE 5 ISS is acting as both STP and SCP, and STPs do reroute messages.

### MTP and SCCP Management to Support V-Flex

If the V-Flex subsystem is offline, the EAGLE 5 ISS sends SSPs that causes the *rt-on-ssn* message to be diverted to the mate subsystem. These do not cause the *rt-on-gt* messages to be diverted. In order to make other nodes divert *rt-on-gt* traffic to the mate, the EAGLE 5 ISS will send response method TFPs to the APC of the message, when messages arrive *rt-on-gt* for one of the V-Flex Capability Point Codes and the result of translation is the EAGLE 5 ISS V-Flex subsystem. This TFP should cause the APC to divert traffic to the mate. If a message arrives *rt-on-gt* for the EAGLE 5 ISS True Point Code, the EAGLE 5 ISS will not generate a TFP. Therefore, nodes that send *rt-on-gt* traffic to the EAGLE 5 ISS should use a V-Flex capability point code, not the EAGLE 5 ISS True Point Code.

If the EAGLE 5 ISS receives an RSP (Route Set Test Message - Prohibited) for a V-Flex capability point code, and the V-Flex subsystem is offline, the EAGLE 5 ISS does not reply. If the EAGLE 5 ISS receives an RSR (Route Set Test Message - Restricted) for V-Flex capability point code, and the V-Flex subsystem is offline, the EAGLE 5 ISS replies with a TFP concerning the capability point code. When the V-Flex subsystem is online, RSRT replies to both RSRs and RSPs for the V-Flex capability point code with a TFA.

## MPS/EPAP Platform


Tekelec provides the MPS (Multi-Purpose Server) platform as a subsystem of the EAGLE 5 ISS. The MPS provides support for the AINPQ, A-Port, EIR, G-Flex, G-Port, IGM, V-Flex, and INP features.

The MPS is composed of hardware and software components that interact to create a secure and reliable platform. (For details about the MPS hardware, refer to the *Tekelec 1000 Application Server Hardware Manual*.) The MPS provides the means of interfacing the customer provisioning application with the EAGLE 5 ISS. It connects the customer with the EAGLE 5 ISS and accepts the customer number portability data, while accommodating numbers of varying lengths.

The EAGLE Provisioning Application Processor (EPAP) is software that runs on the MPS hardware platform. It collects and organizes customer provisioning data, and forwards it to the EAGLE 5 ISS Service Module cards. [Figure 2: MPS/EPAP Platform Architecture](#) on page 14 shows the overall system architecture, providing a graphic overview of MPS/EPAP platform from customer provisioning through the MPS subsystem to the EAGLE 5 ISS Service Module card databases.

**Note:** In this Manual, Service Module Card refers to either a DSM card or an E5-SM4G card unless a specific card is required. For more information about the supported cards, refer to the *EAGLE 5 ISS Hardware Manual*.

**Figure 2: MPS/EPAP Platform Architecture**

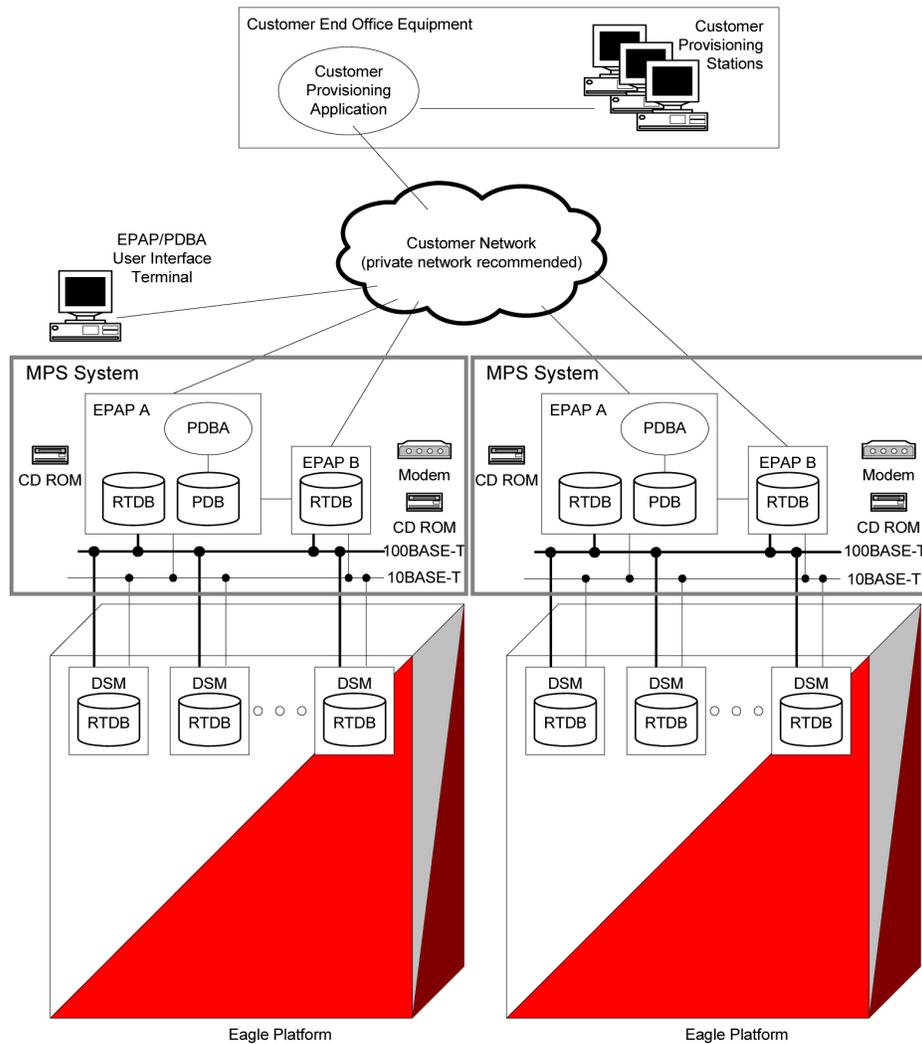

**Design Overview and System Layout**

*Figure 2: MPS/EPAP Platform Architecture* on page 14 illustrates the overall system architecture and identifies the different tasks, databases and interfaces involved. The system consists of two mated MPS servers. Each MPS contains two EPAP platforms, EPAP A and EPAP B, each containing a RealTime Database (RTDB), a Provisioning Database (PDB), servers, optical media, modems, and network hubs. Each MPS and its EPAPs may be thought of as an ‘EPAP system’; the EPAP system and the mated EAGLE 5 ISS is referred to as the ‘mated EPAP system’. Each EPAP system is a T1000 AS system with a total of four Ethernet interfaces: one from each EPAP to the 100Base-T Ethernet and one from each EPAP to the 10Base-T Ethernet.

On the EAGLE 5 ISS platform side, a set of Service Module cards, which hold the RTDB database, is part of the STP. Two high-speed Ethernet links connect the Service Module cards and the EPAPs. One of the links is a 100BASE-T Ethernet bus, and the other is a 10BASE-T Ethernet bus.

The RTDB database is provisioned and maintained through the EPAPs. EPAP A and EPAP B act as the active EPAP and the standby EPAP. One link serves as the active link, and the other as the standby link. At any given time, there is only one active EPAP and one active link. The database is provisioned through the active link by the active EPAP; the other EPAP provides redundancy.

In case of failure of the active EPAP, the standby EPAP takes over the role of active EPAP and continues to provision the subscriber database. In the case where the active link fails, the active EPAP switches to the standby link to continue provisioning the Service Module cards. The two Ethernet links are part of the DSM network.

Another 100BASE-T Ethernet link exists between the EPAPs; that link is called the EPAP sync network.

The major modules on the EPAP are:

- Service Module card provisioning module
- Maintenance module
- RTDB module
- PDB module

The Service Module card provisioning module is responsible for updating subscriber databases on the EAGLE 5 ISS Service Module cards using the Reliable Multicast Transport Protocol (RMTP) multicast. The maintenance module is responsible for the proper functioning of the EPAP platform. The PDB module is responsible for preparing and maintaining the Real Time Database, which is the “golden copy” of the subscriber database. The PDB module can run on one of the EPAPs of either of the mated EAGLE 5 ISSs.

### Functional Overview

The main function of the MPS / EPAP platform is to provision the data from the customer network to the Service Module cards on the EAGLE 5 ISS. Subscriber database records are continuously updated from the customer network to the PDB. The PDB module communicates with the maintenance module and the RTDB task over a TCP/IP connection to provision the Service Module cards on the EAGLE 5 ISS. The maintenance module is responsible for the overall stability and performance of the system.

It is possible for the current copy of the RTDB database on the Service Module cards to get out-of-sync due to missed provisioning or card rebooting. Therefore, the RTDB on the EPAP contains a coherent, current copy of the subscriber database. The EPAP-Service Module card provisioning task sends database information out on the provisioning link. The Service Module cards act as the receivers and are reprovisioned.

### EPAP/PDBA Overview

The EAGLE Provisioning Application Processor (EPAP) platform and the Provisioning Database Application (PDBA), coupled with the Provisioning Database Interface (PDBI) facilitate the user database required for EAGLE 5 ISS EPAP-based features. The following functions are supported:

- Accept and store subscription data provisioned by the customer
- Update and reload subscriber databases on the Service Module cards

The PDBA operates on the master Provisioning Database (PDB). The EPAP and PDBA are both installed on the MPS hardware platform.

The EPAP platform performs the following:

- Maintains an exact copy of the real time database (RTDB) on the EPAP
- Distributes the subscription database to the Service Module cards
- Maintains a redundant copy of the RTDB database

The EPAP platform is a mated pair of processors (the upper processor, called EPAP A, and the lower processor, EPAP B) contained in one frame.

During normal operation, information flows through the EPAP/PDBA software with no intervention. Subscription data is generated at one or more operations centers and is delivered to the PDBA through a TCP socket interface (PDBI). The PDBA software stores and replicates data on EPAP A on the mated EPAP system. The data is then transmitted by the EPAPs across a private network to the Service Module cards located in the EAGLE 5 ISS frame.

The primary interface to the PDBA consists of machine-to-machine messages. The interface is defined by Tekelec and is described in the Provisioning Database Interface Manual. Provisioning software compatible with the EPAP socket interface can be created or updated using the interface described in that manual.

Additionally, a direct user interface is provided on each EPAP to allow for configuration, maintenance, debugging, and platform operations. A direct user interface is also provided by the PDBA for configuration and database maintenance.

The MPS/EPAP is an open-systems platform and easily accommodates the required high provisioning rates. Compared to the traditional OAM platform, the persistent database and provisioning in an open systems platform provides these benefits:

- Variety of hardware components and vendors
- Availability of third party communication and database tools
- Standard communication protocols
- Availability of personnel with related experience

Each EPAP server maintains a copy of the Real Time Database (RTDB) in order to provision the EAGLE 5 ISS Service Module cards. The EPAP server must comply with the hardware requirements in the *MPS Hardware Manual*. [Figure 2: MPS/EPAP Platform Architecture](#) on page 14 illustrates the EPAP architecture contained in the MPS subsystem.


Each EPAP has a dedicated optical media drive. One EPAP per EAGLE 5 ISS platform has a modem capable of supporting remote diagnostics, configuration, and maintenance. These remote operations are performed through EPAP login sessions and are accessible across the customer network as well as through a direct terminal connection to the EPAP using an RS232 connection. Refer to the *Tekelec T1000 Application Server Hardware Manual* for details about the hardware devices and network connections.

## Subscriber Data Provisioning

[Figure 3: Subscriber Data Provisioning Architecture \(High Level\)](#) on page 17 shows the current high-level view of the subscriber data provisioning architecture. Only those parts of the EAGLE 5 ISS platform that are relevant to subscriber data provisioning are shown. This section defines requirements for the Provisioning Database Interface (PDBI) between the EPAP and the operator's

provisioning system (OPS). Provisioning clients connect to the EPAPs via the PDBI. This interface contains commands that allow all of the provisioning and retrieving of subscription data. The PDBI is used for real-time provisioning of subscriber and network entity data only. Refer to the *Provisioning Database Interface Manual* for more details.

**Figure 3: Subscriber Data Provisioning Architecture (High Level)**

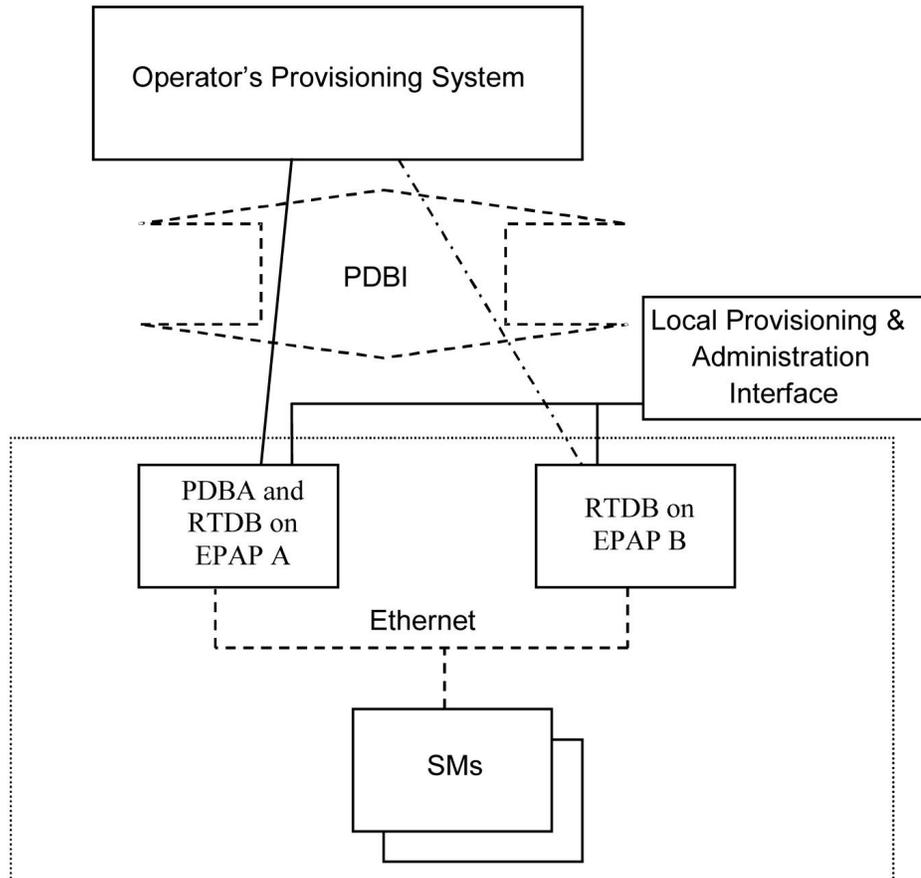

A pair of active/standby EPAP servers provides the interface between the Real Time Database (RTDB) of the EAGLE 5 ISS Service Module cards and the OPS. EPAP A is equipped with both the PDB (Provisioning Database) and the RTDB, and EPAP B has just the RTDB. An EPAP with just the RTDB must be updated by the EPAP that has the PDB.

For more information about the EPAP, refer to the *EPAP Administration Manual*. For more information about the MPS hardware, refer to the *Tekelec 1000 Application Server Hardware Manual*.

### Distributed Administrative Architecture

This section describes, at a high level, the distributed administrative architecture for the EAGLE 5 ISS, including the EPAP.

Databases requiring high update and retrieval rates, such as the EPAP RTDB, are populated using redundant Ethernet connections to Service Module cards from an EPAP MPS platform.

An EPAP consists of a combined Provisioning (MySQL) and Real Time Database (RTDB). The Provisioning Database (PDB) responds to requests for updates by the active and standby RTDBs

on both mated EAGLE 5 ISSs. The active EPAP RTDB is responsible for initiating multi-cast updates of changed database records to the Service Module cards after the data has been committed to the EPAP disks. Furthermore, the PDB may accept and commit more database updates while the RTDBs are completing their previous updates.

It is this overlapping of database updates, coupled with an RTDB transactional database engine and fast download time, that allows larger amounts of data at a time to be transferred from the PDB. Committing larger amounts of data at a time to the RTDB (versus a single update at a time) allows faster overall transaction rates to be achieved. The boundaries of the transaction rates become more closely related to cache size and disk cache flush time than the disk access time of a single update. Thus, successful completion of EPAP database updates only guarantees that the PDB has been updated, but it does *not* mean the RTDB has completed the update and sent the new subscription data to the Service Module card.

The EPAP architecture contains a local provisioning terminal and a modem for remote access, as well as other functions. A backup device can be used to back up or restore the provisioning database. The local provisioning terminal is used to manually repair the standby EPAP RTDB or to turn the subscriber database audit on or off. For additional information, refer to the *Tekelec T1000 Application Server Hardware Manual* and *EPAP Administration Manual*.

## EPAP (EAGLE Provisioning Application Processor)

As shown in [Figure 2: MPS/EPAP Platform Architecture](#) on page 14, a single MPS system contains two EPAP (EAGLE Provisioning Application Processor) servers. At any given time, only one actively communicates with the Service Module cards. The other EPAP server is in standby mode. In addition, two MPS systems can be deployed in a mated-pair configuration.

The primary purpose of the EPAP systems is to maintain the RTDB and PDB and to download copies of the RTDB to the Service Module cards on the EAGLE 5 ISS.


The PDB on the active EPAP receives subscription data from the customer network through the PDBI, the external source of provisioning information. The PDBA continually updates the active EPAP's PDB. The PDB uses MySQL database software. Once an update is applied to the active PDB, it is sent to the RTDBs on the active and standby EPAPs.

Both the active and standby EPAPs maintain copies of the RTDB. Periodically, the Service Module card polls the active EPAP RTDB for any new updates. The active EPAP downloads the updates to the Service Module for its own resident copy of the RTDB.

In a mated-pair configuration, there are two mated MPS Systems, as shown in [Figure 2: MPS/EPAP Platform Architecture](#) on page 14. The PDB on the active EPAP automatically updates the PDB on the mate platform. The PDB on the mate platform then updates its EPAP RTDBs, which in turn update the RTDBs on the associated Service Module cards.

Provisioning of the EAGLE 5 ISS's Service Module cards is performed through two interfaces, using two different sets of commands. Provisioning is accomplished by the STP updates from EAGLE 5 ISS terminals and by updates from the customer's external provisioning system. This system of dual provisioning is illustrated in [Figure 4: Database Administrative Architecture](#) on page 18.

### Figure 4: Database Administrative Architecture

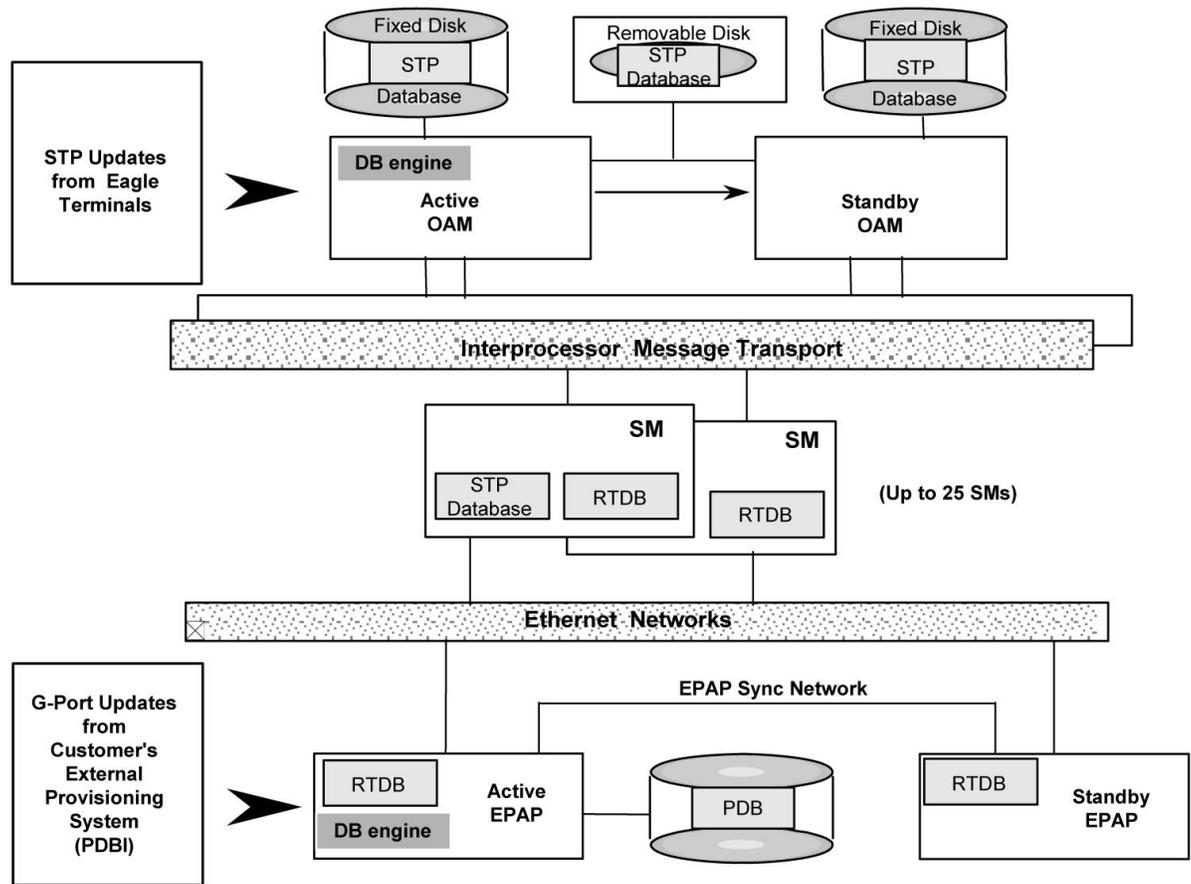

### Service Module Cards

From 1 to 25 Service Module cards can be provisioned with one or more EPAP-related features enabled. EPAP-related features require that all Service Module cards contain 4 GB of memory. [Figure 4: Database Administrative Architecture](#) on page 18 illustrates each Service Module card having two Ethernet links, the main Service Module network on the 100BASE-T link and the backup Service Module network on the 10BASE-T link. The Service Module cards run the VSCCP software application.

The Service Module Ethernet ports are linked to the EPAP system to receive the downloaded Real Time database (RTDB). Multiple Service Module cards provide a means of load balancing in high-traffic situations. The RTDB on the Service Module card is in a format that facilitates rapid lookups.

Though the Service Module card copies of the RTDB are intended to be identical, the various databases may not be identical at all times for the following reasons:

- When a Service Module card is initialized, the card downloads the current copy of the database from the EPAP. While that card is being loaded, it cannot receive new updates that have arrived at the EPAP since reload began..
- Card databases can become out-of-sync with the EPAP RTDB when the EPAP receives updates from its provisioning source, but it has not yet sent the updates down to the Service Module cards. Updates are applied to the Provisioning Database (PDB) as they are received.

Two possible scenarios contribute to a condition where a Service Module card may not have enough memory to hold the entire database:

- The database is downloaded successfully to the Service Module card, but subsequent updates eventually increase the size of the database beyond the capacity of the Service Module card memory. In this situation, it is desirable for EPAP-related features to continue processing transactions, even though the database might not be up-to-date.
- When a Service Module card is booted and it is determined then that the card does not have enough memory for the entire database, the database is not loaded on that card. Each Service Module card is responsible for recognizing and reporting its out-of-memory conditions by means of alarms.

### Overview of EPAP to Service Module Card Communications

Before discussing Service Module card status reporting or EPAP status reporting, it is helpful to understand the communications between the Service Module cards and the EPAP in broad terms.

- UDP - sending Service Module card status messages

The Service Module cards and EPAPs create a UDP (User Datagram Protocol) socket which is used for status messages. One of the last things a Service Module card does when it is initialized is to send a status message to the EPAP, containing the Service Module ID, database level, and memory size. The EPAP maintains tables containing the last known status of each Service Module card. EPAP uses these to determine whether or not the Service Module card needs to download the database.

- IP - reporting EPAP maintenance data

The Service Module cards create a TCP socket when they are initialized, and listen for connection requests. During initialization or after a loss of connectivity, the active EPAP chooses one of the Service Module cards and issues a *Connect* to establish the TCP/IP connection with that Service Module card (referred to as the primary Service Module). The purpose of this link is to provide a path for reporting EPAP alarms and to forward maintenance blocks to the Service Module card.

- IP Multicast - downloading GSM database

Because of the large size of the database and the need to download it quickly on up to 25 Service Module cards, EPAP-related features use a technique known as IP multicasting. This technique is based on Reliable Multicast Transport Protocol-II (RMTP-II), a product of Globalcast Communications. IP multicasting downloads the RTDB and database updates to all of the Service Module cards simultaneously.

The administration of IP multicasting is based on the concept of a “tree”, or stream of data, which is constantly being broadcast by the EPAP. Service Module cards that need to download the real time database or to receive database updates “join the tree”. Service Module cards can also “leave the tree”, typically when the database fills their available memory.

### Service Module Card Provisioning and Reload

One of the core functions of the EPAP is to provision the Service Module cards with the Real Time Database (RTDB) updates. In order to provide redundancy for this feature, separate RMTP channels are created on each interface from each EPAP:

- EPAP A, Link A (on the main DSM network, 100BASE-T)

- EPAP A, Link B (on the backup DSM network, 10BASE-T)
- EPAP B, Link A (on the main DSM network, 100BASE-T)
- EPAP B, Link B (on the backup DSM network, 10BASE-T)

Provisioning and other data is broadcast on one of these channels to all of the Service Module cards. Provisioning is done by database level in order to leave tables coherent between updates.

The Service Module cards do the following:

- Detect the need for incremental updates and send a status message to the EPAP.
- Discriminate between the various streams according to the database level contained in each message and accept updates based on the Service Module card database level.

### *Service Module Card Reload Model*

Service Module cards may require a complete database reload in the event of reboot or loss of connectivity for a significant amount of time. The EPAP provides a mechanism to quickly load a number of Service Module cards with the current database. The database on the EPAP is large and may be updated constantly. The database sent to the Service Module card or cards will likely be missing some of these updates making it corrupt, in addition to being "back level."

### **EPAP Continuous Reload**

It is important to understand how the EPAP handles reloading of multiple Service Module cards from different starting points. Reload begins when the first Service Module card requires it. Records are read sequentially from the Real Time Database (RTDB) from an arbitrary starting point, wrapping back to the beginning. If another Service Module card requires reloading at this time, it uses the existing record stream and notifies the Service Module card provisioning task of the first record it read. This continues until all Service Module cards are satisfied.

### **Service Module Card Database Levels and Reloading**

The current database level when the reload started is of special importance during reload. When a Service Module card detects that the last record has been received, it sends a status message back to the EPAP indicating the database level at the start of reload. This action starts incremental loading. The Service Module card continues to reload until it is completely caught up with the current level of the RTDB. As database records are sent to the Service Module cards during reload, normal provisioning can *change* those records. All records changed between the start and end of reloading must be incrementally loaded before the database is coherent and usable by the Service Module card.

The following terminology is used here for the stages of database reload for a given Service Module card.

- **Stage 1 loading:** The database is being copied record for record from the golden RTDB in the EPAP to the Service Module card RTDB. The database is incoherent during stage 1 loading.
- **Incremental update:** The database is receiving all of the updates missed during stage 1 loading or some other reason (e.g., network outage, processor limitation, lost communication, etc.). The database is coherent, but back-level during incremental update.
- **Current:** The database is receiving current updates from the Service Module card provisioning task.

- **Coherent:** The database is at a whole database level, that is, not currently updating records belonging to a database level.

### *EPAP Status and Error Reporting via Maintenance Blocks*

The EPAPs forward all status and error messages to the Service Module cards in maintenance blocks. Maintenance blocks are asynchronously sent whenever the EPAP has something to report. The maintenance blocks eventually update EPAP Device Control Blocks (DCBs) located on the EAGLE 5 ISS. The DCBs provide the status information that is received when a `rept-stat-mps` command is issued.

## Network Connections

Several customer and Tekelec-installed private networks are *required* to support the provisioning of subscription data. These networks are:

- [Customer Provisioning Network](#) on page 22
- [EPAP Sync Network](#) on page 23
- [DSM Networks](#) on page 24
- [Dial-Up PPP Network](#) on page 25

The following discussion is an overview of these private networks. It expands on the networks in the architecture diagram shown in [Figure 5: Customer Provisioning Network](#) on page 22. (For details about configuring these networks, refer to the *EPAP Administration Manual*.)


### Customer Provisioning Network

The customer network carries the following traffic:

- Customer queries and responses to the PDB via the PDBI from the customer provisioning network
- Updates between PDBs of a mated EAGLE 5 ISS pair
- Updates between a PDB on one EAGLE 5 ISS and RTDBs on a mated EAGLE 5 ISS
- PDBA import/export (file transfer) traffic
- Traffic from a PDBA reloading from its mate
- EPAP and PDBA user interface traffic.

A typical customer network is shown in [Figure 5: Customer Provisioning Network](#) on page 22.

### Figure 5: Customer Provisioning Network

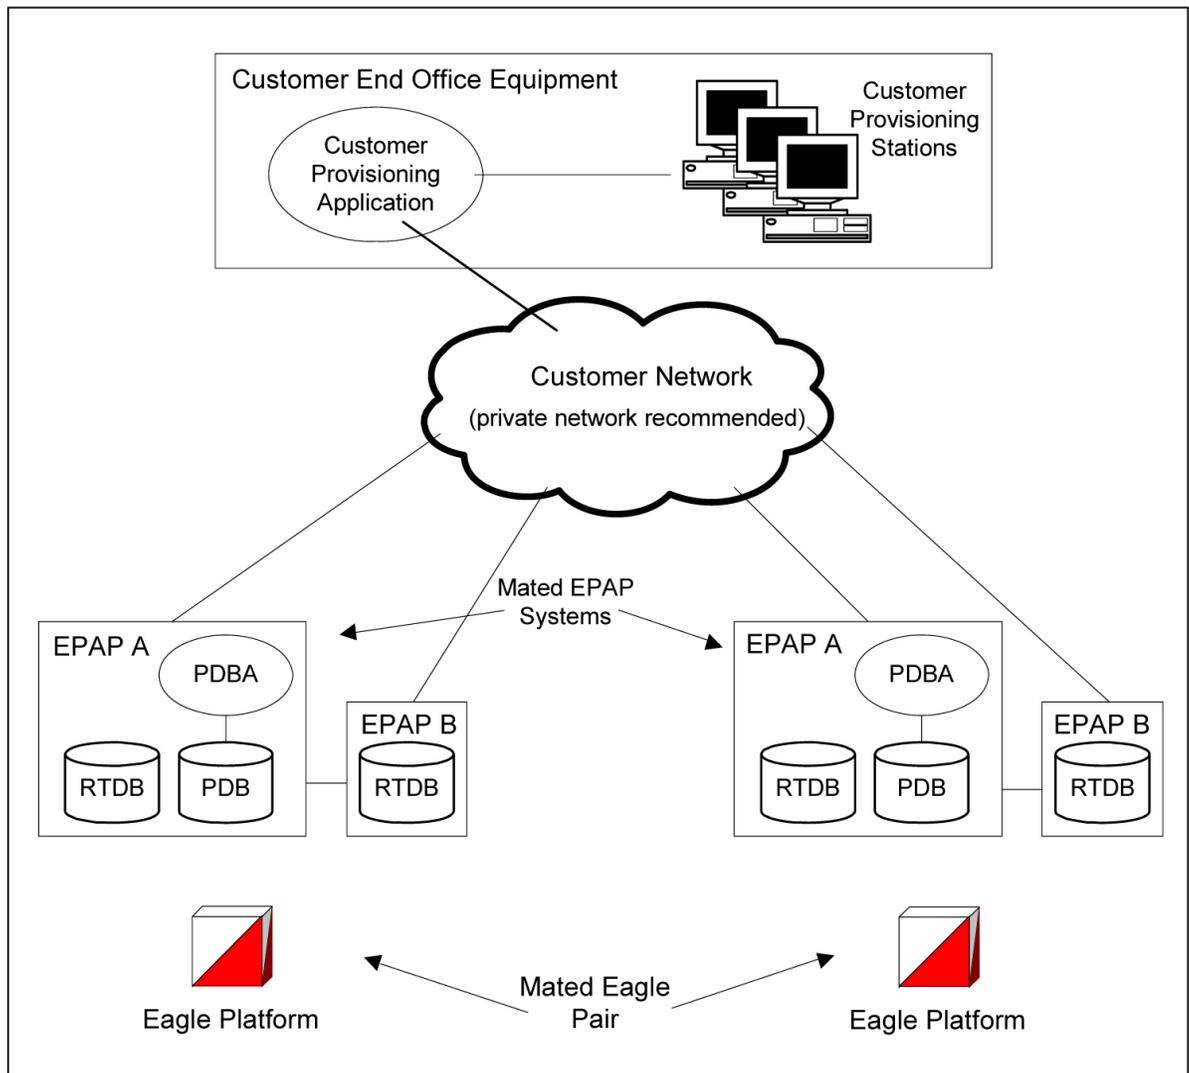


Although a dedicated network is recommended, it is possible that unrelated customer traffic can use the network as well. The determination, either to have a dedicated network or to allow other customer traffic, should be based on available external Ethernet bandwidth and network performance considerations.

**EPAP Sync Network**

The EPAP sync network carries RTDB and maintenance application traffic between active and standby EPAP servers on an MPS system. It synchronizes the contents of the RTDBs of both EPAP A and B. The EPAP Sync network is a single Ethernet connection between EPAP A and EPAP B running at 100BASE-T, as shown in [Figure 6: EPAP Sync Network](#) on page 23.

**Figure 6: EPAP Sync Network**

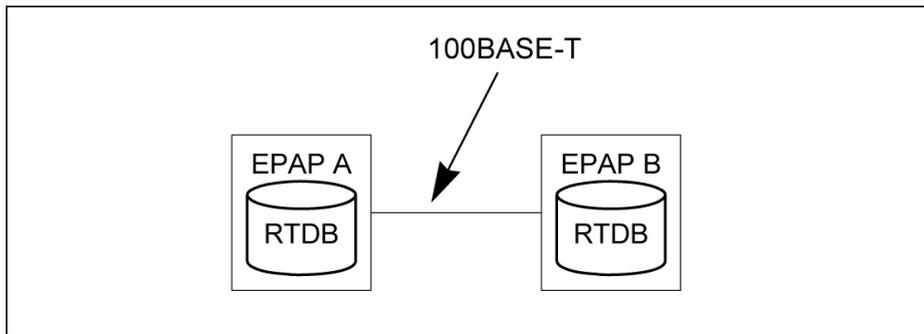


**DSM Networks**

The DSM networks are shown in [Figure 7: DSM Networks](#) on page 24. They carry provisioning data from the active EPAP RTDB to the Service Module cards. They also carry reload and maintenance traffic to the Service Module cards.

The DSM networks consist of two Ethernet networks: the main DSM network running at 100BASE-T, and the backup DSM network running at 10BASE-T. Both Ethernet networks connect EPAP A and EPAP B with every Service Module card on a single EAGLE 5 ISS platform.

**Figure 7: DSM Networks**

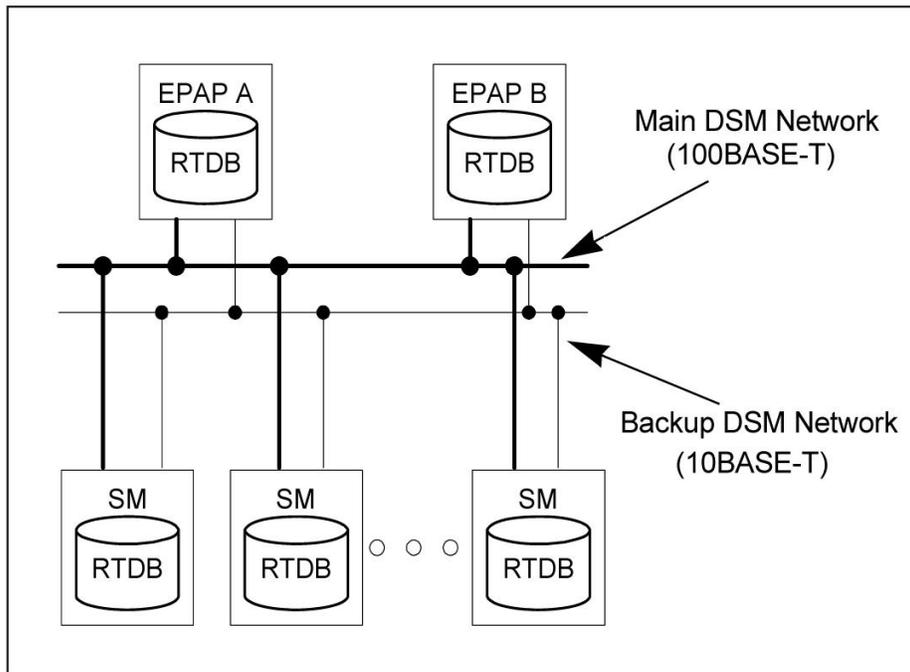

Maintenance information is sent from the active EPAP to an arbitrarily selected Service Module card. The selected Service Module card is known as the primary Service Module card. Static information is exchanged across this interface at initialization, and dynamic information is exchanged on occasion.

While much of the traditional OAM provisioning and database functionality is implemented on the EPAP, the maintenance reporting mechanism is still the OAM.

The first and second octets of the EPAP network addresses for this network are 192.168. (The first two octets for private class C networks are defined in RFC 1918.)

The third octet is customer specifiable for each DSM network. It is important to select values that do not interfere with the customer's network addressing scheme.

The fourth octet of the address is specified as follows:

- If the EPAP is configured as "EPAP A", the fourth octet has a value of 100.
- If the EPAP is configured as "EPAP B", the fourth octet has a value of 200.

[Table 2: EPAP IP Addresses in the DSM Network](#) on page 25 summarizes the contents of each octet.


**Table 2: EPAP IP Addresses in the DSM Network**

Octet	Value
1	'192'
2	'168'
3	One customer-provisioned value for DSM network A, and another for DSM network B
4	'100' for EPAP A '200' for EPAP B

### Dial-Up PPP Network

The dial-up PPP network allows multiple user-interface sessions to be established with the EPAP. The network connects a remote EPAP/PDBA user interface terminal with the EPAP in the EAGLE 5 ISS's MPS subsystem. The dial-up PPP network is illustrated in [Figure 8: Dial-Up PPP Network](#) on page 25.

### Figure 8: Dial-Up PPP Network

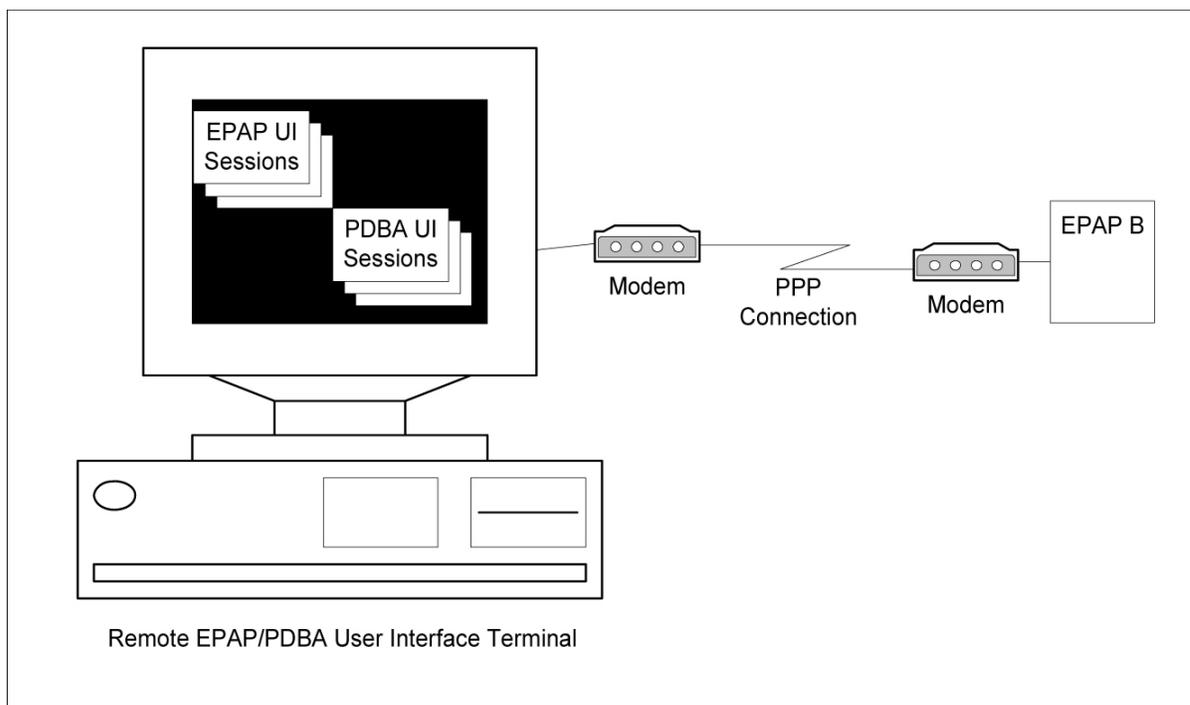

## Serviceability Hints

The following hints are offered to aid in the serviceability of V-Flex databases:

- [Mated Application Considerations](#) on page 26
- [Entity Point Codes and Routes](#) on page 26

## Mated Application Considerations

An EPAP-administered entity data can possibly become out-of-sync with the EAGLE 5 ISS mated application table because the creation of entity point codes (and/or subsystem numbers) in the mated application table is not performed at database administration time.

If this mismatch is discovered in real-time operations, a UIM message (such as “SCCP did not route - DPC not in MAP tbl” or “SCCP did not route - SS not in MAP tbl”) is sent to the EAGLE 5 ISS maintenance terminal. This message means the MSU was discarded.

For this reason, it is recommended that the entity (SP or RN) not be administered until the entity point code (and/or subsystem number) has been entered into the EAGLE 5 ISS mated application (MAP) table.

## Entity Point Codes and Routes

Verification that an entity point code exists in the route table and has a route is not performed at database administration time. Therefore, it is possible for the EPAP entity data to be out-of-sync with the EAGLE 5 ISS route table.

If an out-of-sync condition is discovered during real-time operation, a UIM is sent to the EAGLE 5 ISS maintenance terminal, indicating one of these conditions:

- Destination point code is not in the route table.
- Destination point code exists in the route table but is not assigned a route.
- Destination point code exists in the route table and has been assigned a route, but it is out of service.



# Chapter 3

## EAGLE 5 ISS V-Flex Commands

---

### Topics:

- *Introduction.....30*
- *EAGLE 5 ISS Commands for V-Flex.....30*
- *Maintenance Commands for V-Flex.....45*
- *Measurements Commands for V-Flex.....51*
- *EAGLE 5 ISS Debug Commands.....53*

This chapter describes the EAGLE 5 ISS commands that are used for the configuration, maintenance, and measurements for the V-Flex Voice Mail Router (V-Flex) feature.

## Introduction

This chapter describes the EAGLE 5 ISS commands that are used for the configuration, maintenance, and measurements for the V-Flex Voice Mail Router (V-Flex) feature.

## EAGLE 5 ISS Commands for V-Flex

This chapter contains a brief description of the command functions that are used for V-Flex.

Complete descriptions of these commands are shown in the Commands Manual, including parameter names, valid values, and output examples for the commands.

The EAGLE 5 ISS commands that are used for V-Flex feature configuration, maintenance, and measurements are listed in [Table 3: EAGLE 5 ISS Commands Used for V-Flex](#) on page 30.

**Table 3: EAGLE 5 ISS Commands Used for V-Flex**

EAGLE 5 ISS Commands for V-Flex Feature			
alw-card	dlt-card	ent-ss-appl	rtrv-feat
alw-map-ss	dlt-csl	ent-trace	rtrv-homern
chg-csl	dlt-homern	ent-vflx-cd	rtrv-map
chg-ctrl-feat	dlt-map	ent-vflx-rn	rtrv-measopts
chg-feat	dlt-srvsel	ent-vflx-vmsid	rtrv-serial-num
chg-map	dlt-ss-appl	inh-map-ss	rtrv-sid
chg-measopts	dlt-vflx-cd	inh-card	rtrv-srvsel
chg-sid	dlt-vflx-rn	rept-ftp-meas	rtrv-ss-appl
chg-srvsel	dlt-vflx-vmsid	rept-stat-db	rtrv-stpopts
chg-ss-appl	enable-ctrl-feat	rept-stat-meas	rtrv-tbl-capacity
chg-stpopts	ent-card	rept-stat-mps	rtrv-vflx-cd
chg-th-alm	ent-csl	rept-stat-sccp	rtrv-vflx-opts
chg-vflx-cd	ent-homern	rept-stat-sys	rtrv-vflx-rn
chg-vflx-opts	ent-map	rtrv-csl	rtrv-vflx-vmsid
chg-vflx-rn	ent-serial-num	rtrv-ctrl-feat	
chg-vflx-vmsid	ent-srvsel	rtrv-data-rtddb	

## EAGLE 5 ISS Card Commands

The `ent/dlt/rtrv/alw/inh-card` commands are used to add, remove, display information about, allow operation of, and stop operation of Service Module cards in the system.

- `ent-card` - Enter Card

The `ent-card` command is used to add Service Module cards to the database, using the following parameters:

`:loc` - The location of the Service Module card being added to the database. Service Module cards are dual-slot cards. The card must be installed in an odd-even pair of slots. The odd-numbered slot is specified in the `loc` parameter value.

`:type` - The type of card being added to the database. The value of this parameter is `dsM`.

`:appl` - The application to be loaded on the card. The value of this parameter is `vsccp`.

`:force` - Allow a LIM card to be added to the database even if there are not enough Service Module cards to support the number of LIM cards in the system. Do not specify this parameter when configuring Service Module cards.

- `dlt-card` - Delete Card

The `dlt-card` command is used to remove provisioned cards from the database, before they are physically removed from the shelf.

The `dlt-card` command uses the `loc` parameter:

`:loc` - The location of the Service Module card being removed from the database. The odd-numbered slot for the dual-slot Service Module card is specified in the `loc` parameter value.

- `rtrv-card` - Retrieve Card

The `rtrv-card` command is used to display information about the cards that are provisioned in the database. When the command is entered with no parameters, all cards that are provisioned in the database are listed.

The `rtrv-card` command can be entered with the following parameter to display information about a specific Service Module card:

`:loc` - The location of a specific Service Module card. The odd-numbered slot for the dual-slot Service Module card is specified in the `loc` parameter value.

- `alw-card` - Allow Card

The `alw-card` command is used to cause a Service Module card to begin operation in the system. The card status is changed from OOS-MT-DSBLD (Out-of-Service-Maintenance-Disabled) to IS-NR (In-Service-Normal) if the GPL loading is successful.

When the command is entered with the `loc` parameter, the approved version of the VSCCP GPL is loaded on the card.

`:loc` - The location of the Service Module card. The odd-numbered slot for the dual-slot Service Module card must be specified in the `loc` parameter value.

- `inh-card` - Inhibit Card

The `inh-card` command is used to cause a Service Module card to stop operation in the system. When the card status has changed from in-service normal (IS-NR) to Out-of-Service Maintenance-Disabled (OOS-MT-DSBLD), the Service Module card can be physically removed from the shelf.

`:loc` - The location of the Service Module card. The odd-numbered slot for the dual-slot Service Module card must be specified in the `loc` parameter value.

`:force` - This parameter must be specified to inhibit the last card that is supporting an SCCP subsystem or MPS-to-Service Module connection.

## EAGLE 5 ISS Serial Number Commands

Before the V-Flex feature can be enabled, the database must contain a valid and locked serial number for the EAGLE 5 ISS. The system is shipped with a serial number in the database, but the serial number is not locked. The serial number can be changed, if necessary, and locked after the system is on-site.

The `ent/rtrv-serial-num` commands are used to enter, lock, and display the status of the system serial number.

- `ent-serial-num` - Enter Serial Number

The serial number must be entered once without the lock parameter, and entered again with the lock parameter.

The `ent-serial-num` command uses these parameters:

`:serial` - The serial number assigned to the system. The serial number is not case sensitive.

`:lock` - This parameter has only one value, `yes`, which locks the serial number. After the serial number is locked, it cannot be changed.

- `rtrv-serial-num` - Retrieve Serial Number

The `rtrv-serial-num` command displays the system serial number and its lock status. The command has no parameters.

## EAGLE 5 ISS System Options Commands

The `chg/rtrv-stpopts` commands are used to change and report on the values of one or more of the STP node level processing option indicators maintained in database tables. System default values for the options are assigned initially at STP installation time. The values can be updated using the `chg-stpopts` command.

- `chg-stpopts` - Change STP Options

The `chg-stpopts` command is used to define all STP-specific system options in the database.

Before the V-Flex feature can be turned on, the values for the default country code (`defcc`) and default network destination code (`defndc`) parameter values must be changed from none to the appropriate values for the system that is using V-Flex.

After the V-Flex feature is on, the `defcc` and `defndc` parameter values cannot be changed to none.

The DSM checksum audit (dsmaud) parameter is supported for V-Flex.

- `rtrv-stpopts` - Retrieve STP Options

The `rtrv-stpopts` command displays the settings of the provisioned STP options in the database. The command has no parameters.

## EAGLE 5 ISS Feature Control Commands

The GTT feature must be turned on in the system before the V-Flex feature can be enabled.

The `chg/rtrv-feat` commands are used to turn on and display the on/off status of features, such as GTT, that are controlled with feature bits.

- `chg-feat` - Change Feature

The `chg-feat` command is used to set the bit in the system to indicate the status of on for a feature that is controlled with a bit – to turn on the feature. After the feature is turned on, it cannot be turned off.

`:gtt=on` - Turns on the GTT feature.

- `rtrv-feat` - Retrieve Feature

The `rtrv-feat` command is used to display the status (on or off) of features that are controlled with feature bits. This command has no parameters.

When a feature is enabled using the `enable-ctrl-feat` command with the feature part number and feature access key, it is recognized by the system. Other actions might be needed to make the feature fully operational, such as turning the feature on, installing hardware, and database provisioning.

The V-Flex feature must be enabled using the V-Flex feature part number 893016701 and a feature access key. The feature access key is based on the V-Flex feature part number and the serial number of the system, making the feature access key site-specific.

Some features can be enabled with a temporary feature access key for a limited trial of the feature. The V-Flex feature cannot be enabled using a temporary feature access key.

After the feature is enabled, the feature must be turned on by using the `chg-ctrl-feat` command to set the feature status to on. The V-Flex feature is a Permanently On feature. The feature cannot be turned off after it is turned on.

The `enable/chg/rtrv-ctrl-feat` commands are used to enable, turn on, and display the status of features that are controlled by feature access keys.

- `enable-ctrl-feat` – Enable Control Feature

The `enable-ctrl-feat` command uses the following parameters to permanently enable the V-Flex feature:

`:partnum` - The Tekelec-issued part number for the V-Flex feature, 893016701.

`:fak` - The feature access key contains 13 alphanumeric characters and is not case sensitive.

- `chg-ctrl-feat` – Change Control Feature

The `chg-ctrl-feat` command is used to turn on the V-Flex feature. After the V-Flex feature is turned on, it is permanently on; it cannot be turned off.

The `chg-ctrl-feat` command uses the following parameters to turn on the V-Flex feature:

:partnum - The Tekelec-issued part number of the V-Flex feature, 893016701.

:status=on - Sets the status of the enabled V-Flex feature to on.

- `rtrv-ctrl-feat` - Retrieve Control

The `rtrv-ctrl-feat` command displays the status (on or off) of the enabled features in the system. After the V-Flex feature is enabled, the VFLEX entry in the command output shows the status as off. After the V-Flex feature is turned on, the VFLEX entry in the command output shows the status as on.

The command can be entered with no parameters to list all enabled features, or with one of the following parameters:

:partnum - Specify the part number 893016701 to display the status only for the V-Flex feature.

:enable - Specify the value perm to display the status of all permanently enabled features in the system.

The following features have been permanently enabled:

Feature Name	Partnum	Status	Quantity
IPGWx Signaling TPS	893012805	on	2000
ISUP Normalization	893000201	on	----
Command Class Management	893005801	on	----
Prepaid SMS Intercept Ph1	893006701	on	----
Intermed GTT Load Sharing	893006901	on	----
G-Port Circ Route Prevent	893007001	on	----
XGTT Table Expansion	893006101	on	400000
XMAP Table Expansion	893007710	on	3000
Large System # Links	893005910	on	2000
Routesets	893006401	on	6000
EAGLE5 Product	893007101	off	----
EAGLE Product	893007201	off	----
IP7 Product	893007301	off	----
Network Security Enhance	893009101	off	----
HC-MIM SLK Capacity	893011801	on	64
VFLEX	893012301	on	----
EAGLE OA&M IP Security	893400001	off	----
SCCP Conversion	893012001	on	----

## EAGLE 5 ISS Self ID and Capability Point Code Commands

The self-identification identifies the system to the other signaling points in the network, using true point codes and capability point codes.

- `chg-sid` - Change Self Identification

The `chg-sid` command is used to define the self-identification point codes of the system. The command also defines the common language location identifier (CLLI), which identifies the system in terms of its physical location.

Capability point codes are used by the SS7 protocol to identify a group of functionally related STPs in the signaling network to which the STP belongs. For the V-Flex subsystem, the EAGLE 5 ISS supports ANSI, ITU-I, ITU-N, ITU-I Spare, and ITU-N Spare capability point code types, including group codes. ITU-N24 capability point codes are not supported.

The `chg-sid` command uses the following parameters:

:cpctype - Specify the vflex parameter value to allow defining V-Flex capability point codes.  
 :pc/pca/pci/pcn/pcn24 - Used to define the ANSI, ITU-I, ITU-N, ITU-I spare, ITU-N spare, and ITU-N24 true point codes for the system. (An ITU-N true point code and an ITU-N24 true point code cannot be defined at the same time in the system.)  
 :cpc/cpca/cpci/cpcn - Used to define the ANSI, ITU-I, ITU-N, ITU-I spare, and ITU-N spare capability point codes for V-Flex.  
 :cli - Used to define the system common language location identifier.

- `rtrv-sid` - Retrieve Self Identification

The `rtrv-sid` command displays the true and capability point codes and CLI that are defined in the system.

The command can be entered with no parameters to display all defined true and capability point codes, or with one of the following parameters to display information for a specific point code or CPC type:

:cpctype - Specify the vflex parameter value to display V-Flex capability point codes.  
 :pc/pca/pci/pcn/pcn24 - Used to display the ANSI, ITU-I, ITU-N, ITU-I spare, ITU-N spare, or ITU-N24 true point codes for the system.  
 :cpc/cpca/cpci/cpcn - Used to display the ANSI, ITU-I, ITU-N, ITU-I spare, or ITU-N spare capability point codes for V-Flex.

## EAGLE 5 ISS Mate Application Commands

V-Flex exists as a local SCCP subsystem on the EAGLE 5 ISS, with a subsystem number assigned to it.

Local subsystems must be entered into the MAP table. Like other entries in the MAP table, this subsystem can have a mate subsystem and a concerned point code group assigned to it.

Unlike other entries in the MAP table, this subsystem cannot be set to Load Shared mode (as end nodes do not perform load sharing), but can be set only to Dominant or Solitary mode.

The `ent/chg/dlt/rtrv-map` commands are used to provision a true point code and a subsystem number for the V-Flex subsystem.

Refer to the procedures in the Database Administration Manual - Global Title Translation and to the `ent/chg/dlt/rtrv-map` command descriptions in the *Commands Manual* to provision MAP table entries for V-Flex.

- `ent-map` - Enter Mate Application

The `ent-map` command is used to enter into the MAP table the mated application relationship information maintained by the system. This information is used to support the routing of SCCP management SSP/SSA messages.

:ssn - Defines the V-Flex subsystem number.

- `chg-map` - Change Mate Application

The `chg-map` command is used to change the MAP table information for the V-Flex local subsystem.

:ssn - The V-Flex subsystem number.

- `dlt-map` - Delete Mate Application

The `dlt-map` command is used to delete the MAP table information for the V-Flex local subsystem.

- `rtrv-map` - Retrieve Mate Application

The `rtrv-map` command displays the mated application relationship information maintained by the system in the MAP table.

## EAGLE 5 ISS Subsystem Application Commands

The `chg/dlt/rtrv-ss-appl` commands are used to define or delete the local subsystem application, and change and display the local subsystem application status in the database.

- `ent-ss-appl` - Change Subsystem Application

The `ent-ss-appl` command uses the following parameters to reserve a subsystem number for a subsystem application and set the application status to online or offline:

`:appl` - The application type (vflex).

`:ssn` - The subsystem number.

`:stat` - The new application status.

- `chg-ss-appl` - Change Subsystem Application

The `chg-ss-appl` command changes the status for the specified application to either offline or online.

`:appl` - The application type (vflex).

`:nstat` - The new application status.

- `dlt-ss-appl` - Change Subsystem Application

The `dlt-ss-appl` command removes the specified application from the database.

`:appl` - The application type (vflex).

- `rtrv-ss-appl` - Retrieve Subsystem Application

The `rtrv-ss-appl` command displays the application type, subsystem number, and status for all provisioned local subsystem applications. The command has no parameters.

## EAGLE 5 ISS Service Selector Commands

The `ent/chg/dlt/rtrv-srvsel` service selector commands are used to provision, remove, change, and display the applicable service selectors required for a service entry for DSM services. These commands provide some flexibility when provisioning the type of messages that require V-Flex processing.

Complete descriptions of these commands are shown in the Commands Manual, including parameter names, valid values, and output examples for the commands.

- ent-srvsel - Enter Service Selector

The ent-srvsel command specifies the applicable service selectors to define a V-Flex DSM service entry.

The ssn=\* parameter is supported for the V-Flex subsystem. The snp and snai parameters are not needed in V-Flex service selectors.

The gti/gtii/gtin value can be either 2 or 4.

If the gti/gtii/gtin value is 2, the np, nai, npv, or naiv parameters cannot be specified with the ent-srvsel command.

If the gti/gtii/gtin value is 4, either the np and nai or the npv and naiv parameters must be specified with the ent-srvsel command.

If either the npv or naiv parameters are specified in the ent-srvsel command, then both parameters must be specified and neither the np and nai parameters can be specified.

If either the np or nai parameters are specified in the ent-srvsel command, then both parameters must be specified, and neither the npv and naiv parameters can be specified.

**Table 4: ent-srvsel Parameters - Class = DATABASE**

Parameter	Optional/ Mandatory	Range	Description
GTI, GTII, GTIN	Mandatory	2, 4	Global Title Indicator
SSN	Mandatory	0-255 *	Subsystem number
TT	Mandatory	0-255	Translation Type
SERV	Mandatory	eir, gflex, gport, inpq, inpmr, mnpsms, smsmr, idps, idpr, mnp, vflex	GSM service
NAI	Optional	sub, rsvd, natl, intl	Nature Of Address Indicator
NAIV	Optional	0-127	NAI Value
NP	Optional	e164, generic, x121, f69, e210, e212, e214, private	Numbering Plan
NPV	Optional	0-15	Numbering Plan Value

- chg-srvsel - Change Service Selector

The chg-srvsel command specifies the applicable selectors to change an existing V-Flex service entry.

**Table 5: chg-srvsel Parameters - Class = DATABASE**

Parameter	Optional/ Mandatory	Range	Description
GTI, GTII, GTIN	Mandatory	2, 4	Global Title Indicator

Parameter	Optional/ Mandatory	Range	Description
NSERV	Mandatory	eir, gflex, gport, inpq, inpmr, mnpsms, smsmr, idps, idpr, mnp, vflex	New GSM service
SSN	Mandatory	0-255*	Subsystem number
TT	Mandatory	0-255	Translation Type
NAI	Optional	sub, rsvd, natl, intl	Nature Of Address Indicator
NAIV	Optional	0-127	NAI Value
NP	Optional	e164, generic, x121, f69, e210, e212, e214, private	Numbering Plan
NPV	Optional	0-15	Numbering Plan Value

- `dlt-srvsel` - Delete Service Selector

The `dlt-srvsel` command specifies the applicable selectors to delete an existing service entry.

Either the `np` and `nai`, or `npv` and `naiv` parameters can be specified with the `dlt-srvsel` command only if the `gti/gtii/gtin` value for the service selector being removed is 4. If the `gti/gtii/gtin` value of service selector being removed is 2, only the `gti/gtii/gtin`, `tt`, and `ssn` parameters can be specified with the `dlt-srvsel` command.

If either the `np` or `nai` parameters are specified with the `dlt-srvsel` command, then both parameters must be specified with the `dlt-srvsel` command and neither the `npv` and `naiv` parameters can be specified with the `dlt-srvsel` command.

**Note:** If the service selector being removed does not show values for the `np` and `nai` parameters, or the `npv` and `naiv` parameters, and you want to use these parameters with the `dlt-srvsel` command, refer to the command description in the *Commands Manual* for the `np` and `nai` values that correspond to the `npv` and `naiv` values for the service selector being removed.

**Note:** If the service selector being removed does not show values for the `npv` and `naiv` parameters, and you want to use these parameters with the `dlt-srvsel` command, refer to the command description in the *Commands Manual* for the `npv` and `naiv` values that correspond to the `np` and `nai` values shown for the service selector being removed.

**Table 6: `dlt-srvsel` Parameters - Class = DATABASE**

Parameter	Optional/ Mandatory	Range	Description
GTI, GTII, GTIN	Mandatory	2, 4	Global Title Indicator
TT	Mandatory	0-255	Translation Type
SSN	Mandatory	0-255*	Subsystem number

Parameter	Optional/ Mandatory	Range	Description
NAI	Optional	sub, rsvd, natl, intl	Nature Of Address Indicator
NAIV	Optional	0-127	NAI Value
NP	Optional	e164, generic, x121, f69, e210, e212, e214, private	Numbering Plan
NPV	Optional	0-15	Numbering Plan Value

- `rtrv-srvsel` - Retrieve Service Selector command

The `rtrv-srvsel` command displays a list of provisioned service selector combinations. All output is sorted first by service, then by global title domain (ANSI first, followed by ITU), GTI, translation type, numbering plan, and the nature of address indicator. The output can be filtered by specifying various optional parameters.

Because of the large number of service selectors that can be in the database, the `rtrv-srvsel` command can be entered with the `num` and `force` parameters. The `num` parameter specifies the maximum number of entries to display. The `force` parameter must be specified to display more than 50 entries. This prevents trying to display extremely large numbers of entries, which could take hours.

**Table 7: `rtrv-srvsel` Parameters - Class = DATABASE**

Parameter	Optional/ Mandatory	Range	Description
GTI, GTIL, GTIN	Optional	2, 4	Global Title Indicator
NAI	Optional	sub, rsvd, natl, intl	Nature Of Address Indicator
NAIV	Optional	0-127	NAI Value
NP	Optional	e164, generic, x121, f69, e210, e212, e214, private	Numbering Plan
NPV	Optional	0-15	Numbering Plan Value
SERV	Optional	eir, gflex, gport, inpq, inpmr, mnpsms, smsmr, idps, idpr, mnp, vflex	GSM service
SSN	Mandatory	0-255*	Subsystem number
TT	Optional	0-255	Translation Type
NUM	Optional	0-992	Number of entries to display
FORCE	Optional	yes, no	Display more than 50 entries

## EAGLE 5 ISS V-Flex Options Commands

The `chg/rtrv-vflx-opts` commands define and display V-Flex options in the system. The options are used to condition the DN in an incoming MSU.

- `chg-vflx-opts` - Change V-Flex Options

The `chg-vflx-opts` command uses the following parameter to provision the data in the VFLXOPTS table:

**Table 8: `chg-vflx-opts` Parameters - Class = DATABASE**

Parameter	Optional/ Mandatory	Range	Description
<code>dra</code>	Optional	<code>rn, rndn, ccrndn</code>	Destination Routing Address (DRA)
<code>dranai</code>	Optional	<code>sub, unknown, natl, intl, ntwk</code>	Nature Of Address Indicator for DRA
<code>dranaiv</code>	Optional	<code>0-127</code>	Nature Of Address Indicator Value for DRA
<code>dranp</code>	Optional	<code>e164, x121, f69</code>	Numbering Plan for DRA
<code>dranpv</code>	Optional	<code>0-7</code>	Numbering Plan Value for DRA
<code>nequeryonly</code>	Optional	<code>off, on</code>	Search Call Decision table after RTDB lookup
<code>netype</code>	Optional	<code>vmsid, sprn, grn</code>	Network Entity Type used for RTDB lookup

- `rtrv-vflx-opts` - Retrieve V-Flex Options

The `rtrv-vflx-opts` command displays the V-Flex options setting that are provisioned in the VFLXOPTS table.

## EAGLE 5 ISS HOMERN Prefix Commands

The `ent/dlt/rtrv-homern` commands define, delete, and display home routing number prefixes in the HOMERN table.

- `ent-homern` - Enter Home Routing Number Prefix

The `ent-homern` command is used to enter up to 100 home routing number prefixes for the operating network into the HOMERN table.

`:rn` - Home routing number prefix (1-15 digits)

- `dlt-homern` - Delete Home Routing Number Prefix  
 The `dlt-homern` command removes a home routing number prefix from the HOMERN table.  
`:rn` – Home routing number prefix (1-15 digits)
- `rtrv-homern` - Retrieve Home Routing Number Prefix  
 The `rtrv-homern` command displays the list of home routing number prefixes that belong to the operation network. The command has no parameters.

## EAGLE 5 ISS Voice Mail Prefix Commands

The `ent/chg/dlt/rtrv-csl` commands are used to enter, change, delete, and display Voice Mail prefix entries for V-Flex. The common screening list entries tailor certain types of common screening information to specific features.

- `ent-csl` - Enter Common Screening List  
 The `ent-homern` command is used to enter up to 100 home routing number prefixes for the operating network into the HOMERN table.  
 The `ent-csl` command is used to enter a Voice Mail prefix digit string; the string is specified in the following parameter:  
`:ds` - Specify 1-15 hexadecimal digits for the prefix  
 The V-Flex feature is identified in the command by one of the following parameters:  
`:feature` - Specify the feature name as it appears in the `rtrv-ctrl-feat` command output when the feature is enabled (`:feature="VFLEX"`).  
`:pn` - Specify the V-Flex feature part number 893016701  
 The Common Screening List must be specified when the feature uses more than one screening list. V-Flex uses only the `vmpfx` list.  
`:list` - Specify the name of the Common Screening List associated with the feature (`:list=vmpfx`).
- `chg-csl` - Change Common Screening List  
 The `chg-csl` command is used to change a Voice Mail prefix digit string; the new string is specified in the following parameter:  
`:ds` - Specify 1-15 hexadecimal digits for the prefix  
 The V-Flex feature is identified in the command by one of the following parameters:  
`:feature` - Specify the feature name as it appears in the `rtrv-ctrl-feat` command output when the feature is enabled (`:feature="VFLEX"`).  
`:pn` - Specify the V-Flex feature part number 893016701  
 The Common Screening List must be specified when the feature uses more than one screening list. V-Flex uses only the `vmpfx` list.  
`:list` - Specify the name of the Common Screening List associated with the feature (`:list=vmpfx`).
- `dlt-csl` - Delete Common Screening List

The `dlt-csl` command is used to delete a Voice Mail prefix digit string; the string is specified in the following parameter:

`:ds` – Specify 1-15 hexadecimal digits for the prefix

The V-Flex feature is identified in the command by one of the following parameters:

`:feature` - Specify the feature name as it appears in the `rtrv-ctrl-feat` command output when the feature is enabled (`:feature="VFLEX"`)

`:pn` - Specify the V-Flex feature part number 893016701

The Common Screening List must be specified when the feature uses more than one screening list. V-Flex uses only the `vmpfx` list.

`:list` - Specify the name of the Common Screening List associated with the feature (`:list=vmpfx`).

- `rtrv-csl` - Retrieve Common Screening List

The `rtrv-csl` command is used to display the provisioned Voice Mail prefix entries. The V-Flex feature is identified in the command by one of the following parameters:

`:feature` - Specify the feature name as it appears in the `rtrv-ctrl-feat` command output when the feature is enabled (`:feature="VFLEX"`)

`:pn` - Specify the V-Flex feature part number 893016701

## EAGLE 5 ISS Voice Mail Routing Number Commands

The `chg/dlt/ent/rtrv-vflx-rn` commands are used to define and display voice mail routing numbers and routing number names, and to view the associated reference count.

- `chg-vflx-rn` - Change Voice Mail Routing Number

The `chg-vflx-rn` command uses the following parameters:

`:rnname` - Routing number name associated with a voice mail routing number

`:nrn` - New Voice Mail Routing Number associated with a routing number name

`:nrnname` - New Routing Number Name

- `dlt-vflx-rn` - Delete Voice Mail Routing Number

A routing number (name) cannot be deleted if its associated reference count is greater than zero. (Use the `rtrv-vflx-rn` command to display the reference count.)

The `dlt-vflx-rn` command uses the following parameter:

`:rnname` - Routing number name associated with a voice mail routing number

- `ent-vflx-rn` - Enter Voice Mail Routing Number

The `ent-vflx-rn` command uses the following parameters to associate voice mail routing numbers with routing number names.

`:rn` - Voice Mail Routing Number

`:rnname` - Voice Mail Routing Number Name

- `rtrv-vflx-rn` - Retrieve Voice Mail Routing Number

The `rtrv-vflx-rn` command displays voice mail routing numbers and routing number names, and the associated reference count.

When the command is entered with no parameters, all provisioned voice mail routing number information is displayed.

The following parameters can be used to display information for a specific routing number or routing number name, with or without the reference count:

:refcnt - Display (yes) or do not display (no) the reference count

:rn - Voice Mail Routing Number

:rname - Voice Mail Routing Number Name

## EAGLE 5 ISS Voice Mail Server ID Commands

The `ent/chg/dlt/rtrv-vflx-vmsid` commands are used to enter, change, delete, and display Voice Mail Server IDs for V-Flex.

- `ent-vflx-vmsid` - Enter Voice Mail Server ID

The `ent-vflx-vmsid` command is used to define a Voice Mail Server ID and associate up to 10 voice mail routing number names with that VMSID. The default VMSID comprises a special default set of routing numbers used when a query is received with either an invalid MSISDN or with a MSISDN that is not found in the RTDB.

The following command parameters specify the new VMSID and the routing number name associated with each specified voice mail routing number index:

:id - Specify 1-15 hexadecimal digits for the ID, or `dflt` to specify the default VMSID

:idx0 through :idx9 - Specify the new routing number name for the specified voice mail routing number index.

- `chg-vflx-vmsid` - Change Voice Mail Server ID

The `chg-vflx-vmsid` command is used to change one or more voice mail routing numbers that are associated with a VMSID.

The following command parameters specify the VMSID and the new routing number name associated with each voice mail routing number index:

:id - Specify 1-15 hexadecimal digits for the ID, or `dflt` to specify the default VMSID

:idx0 through :idx9 - Specify the routing number name for the specified voice mail routing number index.

- `dlt-vflx-vmsid` - Delete Voice Mail Server ID

The `dlt-vflx-vmsid` command with the following parameter is used to delete a Voice Mail Server ID from the VMSID table:

:id - Specify 1-15 hexadecimal digits for the ID

- `rtrv-vflx-vmsid` - Retrieve Voice Mail Server ID

The `rtrv-vflx-vmsid` command is used to display the provisioned V-Flex VMSIDs and the routing number name associated with each voice mail routing number index.

When the command is entered with no parameters, all VMSIDs are displayed. The following parameters are used to display one VMSID, or all entries referring to the specified routing number name:

:id - Specify 1-15 hexadecimal digits for the ID, or `dflt` to specify the default VMSID

:rname - Specify a routing number name that is associated with the specified VMSID

## EAGLE 5 ISS Call Decision Entry Commands

The `ent/chg/dlt/rtrv-vflx-cd` commands are used to enter, change, delete, and display call decision entries for the V-Flex feature.

- `ent-vflx-cd` - Change V-Flex Call Decision Entry

The `ent-vflx-cd` command is used to define the call decision criteria that are used to create a voice mail routing number.

The command uses the following parameters to define the call decision entry:

`:bcap` - INAP/CAP bearer capabilities; numerical values that are used to indicate the type of mail that is used by the call, such as voice, video, or multimedia. The user assigns meanings to the numbers; V-Flex does not place any interpretation on the values. The value `none` can be specified to indicate that there is no BCAP information in the entry.

`:cdn` - The call decision name for the new call decision entry

`:dnstat` - Dialed number status, to indicate whether the MSISDN is found in the EPAP RTDB, is not found in the RTDB, or does not matter.

`:rnidx` - The routing number index to be associated with the generated voice mail routing number.

`:rdi` - Call redirection indicator (redirected or not redirected)

`:vmdig` - The voice mail number or voice mail prefix digits to associate with the specified call decision entry name. If the call is redirected (the `rdi=redir` parameter is specified), then the value specified for the `vmdig` parameter represents a voice mail number. If the call is not redirected (the `rdi=dir` parameter is specified), then the value specified for the `vmdig` parameter represents a set of voice mail digits.

- `chg-vflx-cd` - Change V-Flex Call Decision Entry

The `chg-vflx-cd` command is used to change an existing V-Flex call decision entry. The command uses the following parameters to change the call decision entry name, a routing number index associated with the call decision entry, or a voice mail number or voice mail prefix digits that are associated with a call decision entry:

`:cdn` - An existing call decision entry name

`:ncdn` - The new name for the specified call decision entry

`:nrnidx` - The new routing number index to be associated with the specified call decision entry name

`:nvmdig` - The new voice mail number or voice mail prefix digits to associate with the specified call decision entry name

- `dlt-vflx-cd` - Delete V-Flex Call Decision Entry

The `dlt-vflx-cd` command with the `cdn` parameter is used to remove an existing V-Flex call decision entry from the Call Decision table.

`:cdn` - An existing call decision entry name

- `rtrv-vflx-cd` - Retrieve V-Flex Call Decision Entry

The `rtrv-vflx-cd` command is used to display the provisioned V-Flex call decision entries.

When the command is entered with no parameters, all call decision entries are displayed. The following parameters are used to display one call decision entry, or all call decision entries that are associated with the specified voice mail number or voice mail prefix digits.

:cdn - Call decision name; name of a call decision entry

:vmdig - Voice mail number or voice mail prefix digits

## EAGLE 5 ISS Local Subsystem Activation Commands

The `alw-map-ss` command activates a mated application subsystem.

The `inh-map-ss` command shuts down (inhibits) a mated application subsystem. The specified subsystem attempts a coordinated shutdown. If the coordinated shutdown fails, a UIM is issued indicating the shutdown failed. If the `force` parameter is specified, the subsystem is forced to shut down, and a coordinated shutdown is not performed.

- `alw-map-ss` - Allow Mated Application Subsystem

The `alw-map-ss` command allows a mated application subsystem to become operational in the system.

:ssn - Subsystem number for the mated application subsystem

- `inh-map-ss` - Retrieve Mated Subsystem Application

:rname - Routing number name associated with a voice mail routing number

The `inh-map-ss` command stops the operation of a mated application subsystem.

:ssn - Subsystem number for the local subsystem

:force - Specify yes to force the shutdown of the mated application subsystem

## Maintenance Commands for V-Flex

This section provides a description of the commands used for maintenance when the V-Flex feature is on.

The command examples shown illustrate the requirements and provide suggestions for suitable names and output. The commands are described in detail in the Commands Manual, where the actual parameter names, valid values, and output for the commands are provided.

Commands described here include:

- [rept-stat-sys](#) on page 46
- [rept-stat-sccp](#) on page 47
- [rept-stat-mps](#) on page 48
- [rept-stat-trbl](#) on page 49
- [rept-stat-alm](#) on page 49
- [rept-stat-db](#) on page 50
- [rtro-tbl-capacity](#) on page 50
- [inh-card / alw-card](#) on page 51
- [inh-alm / unhb-alm](#) on page 51

- [rtro-data-rtdb](#) on page 51

## rept-stat-sys

This command reports the status of system entities, including cards. The display shows the number of these items that are in service (IS-NR) and how many are in another state (IS-ANR, OOS-MT, OOS-MT-DSBLD). The V-Flex subsystem entry (VFLEX SS) appears when the V-Flex feature is on. Refer to the *Commands Manual* for a complete description of this command.

```
eagle10605 09-05-25 02:32:46 EST EAGLE 41.0.0
  MAINTENANCE STATUS REPORT
  Maintenance Baseline established.
  Routing Baseline established.
  SCCP Baseline established.
  ALARMS:      CRIT=    9 MAJR=   10 MINR=  3 INH=  2
  OAM 1113     IS-NR     Active INH=  0
  OAM 1115     IS-NR     Standby INH=  0
  LIM   CARD IS-NR=  3 Other=  0 INH=  0
  SCCP   CARD IS-NR=  3 Other=  0 INH=  0
  GLS   CARD IS-NR=  0 Other=  0 INH=  0
  SLAN   CARD IS-NR=  0 Other=  0 INH=  0
  VXWLAN CARD IS-NR=  0 Other=  0 INH=  0
  EMDC   CARD IS-NR=  0 Other=  0 INH=  0
  SS7IPGW CARD IS-NR=  0 Other=  0 INH=  0
  IPGWI   CARD IS-NR=  0 Other=  0 INH=  0
  IPLIM   CARD IS-NR=  0 Other=  0 INH=  0
  IPLIMI  CARD IS-NR=  0 Other=  0 INH=  0
  HMUX   CARD IS-NR=  0 Other=  0 INH=  0
  HIPR    IS-NR=  2 Other=  0 INH=  0
  IMT     IS-NR=  2 Other=  0
  SLK     IS-NR=  0 Other=  6 INH=  0
  DLK     IS-NR=  0 Other=  0 INH=  0
  LINK SET  IS-NR=  0 Other=  4 INH=  0
  NDC IP LK  IS-NR=  4 Other=  0 INH=  0
  DSM IP LK  IS-NR=  0 Other=  0 INH=  0
  MCPM   CARD IS-NR=  0 Other=  0 INH=  0
  EROUTE  CARD IS-NR=  0 Other=  0 INH=  0
  CLOCK    IS-NR=  2 Other=  0 INH=  0
  HS CLOCK  IS-NR=  2 Other=  0 INH=  0
  MCPM IP LK  IS-NR=  2 Other=  0 INH=  0
  APPLSOCK IS-NR=  0 Other=  0 INH=  0
  SCTP ASSOC IS-NR=  0 Other=  0 INH=  0
  APPL SERVER IS-NR=  0 Other=  0 INH=  0
  SS7 DPC   IS-NR=  0 Other=  6 INH=  0
  CLUST DPC IS-NR=  0 Other=  1 INH=  0
  RTX      IS-NR=  2 Other=  1 INH=  0
  XLIST DPC  IS-NR=  0 Other=  0
  DPC SS     Actv =  0 Other=  0
  SEAS SS    IS-NR=  0 Other=  2
  SEAS X25   IS-NR=  0 Other=  2 INH=  0
  LSMS SS    IS-NR=  0 Other=  2
  LSMS Conn  IS-NR=  0 Other=  2 INH=  0
  TERMINAL   IS-NR=  2 Other= 14 INH=  0
  MPS        IS-NR=  2 Other=  0
  SECURITY SS IS-NR=  1 Other=  0
  EIR SS     IS-NR=  1 Other=  0
  RTD SS     IS-NR=  0 Other=  1
  VFLEX SS   IS-NR=  1 Other=  0
;
```

**rept-stat-sccp**

This command reports V-Flex Subsystem operating status, CPU usage related to V-Flex, and Service Module card status. The loc parameter displays detailed card traffic statistics. Refer to the *Commands Manual* for a complete description of this command.

```

tklc1170501 07-08-18 10:16:24 EST EAGLE5 37.6.0
SCCP SUBSYSTEM REPORT IS-NR Active -----
  SCCP ALARM STATUS = No Alarms
VFLEX SUBSYSTEM REPORT IS-NR Active -----
  VFLEX: SSN STATUS = Allowed MATE SSN STATUS = -----
  VFLEX ALARM STATUS = No Alarms
GFLEX SERVICE REPORT IS-NR Active -----
  GFLEX ALARM STATUS = No Alarms
GPORT SERVICE REPORT IS-NR Active -----
  GPORT ALARM STATUS = No Alarms

SCCP Cards Configured=25 Cards IS-NR=25
System Daily Peak SCCP Load 15639 TPS 06-09-18 06:14:24
System Overall Peak SCCP Load 21062 TPS 06-09-15 14:24:38
System Total SCCP Capacity 21250 TPS (21250 max SCCP Capacity)
System SCCP Capacity Calc. Method (N)
System TPS Alarm Threshold 17000 TPS (80% System N SCCP Capacity)

CARD VERSION PST SST AST MSU CPU
USGAGE USGAGE
-----
1217 126-030-000 IS-NR Active ----- 100% 45%
1317 126-030-000 IS-NR Active ----- 100% 51%
2217 126-030-000 IS-NR Active ----- 100% 42%
3201 126-030-000 IS-NR Active ----- 54% 25%
3203 126-030-000 IS-NR Active ----- 55% 25%
3205 126-030-000 IS-NR Active ----- 57% 27%
3207 126-030-000 IS-NR Active ----- 69% 29%
3211 126-030-000 IS-NR Active ----- 85% 35%
3213 126-030-000 IS-NR Active ----- 94% 37%
3215 126-030-000 IS-NR Active ----- 86% 35%
3217 126-030-000 IS-NR Active ----- 74% 31%
4217 126-030-000 IS-NR Active ----- 64% 28%
4317 126-030-000 IS-NR Active ----- 100% 41%
5117 126-030-000 IS-NR Active ----- 100% 40%
5317 126-030-000 IS-NR Active ----- 56% 25%
6101 P 126-030-000 IS-NR Active ----- 57% 32%
6103 126-030-000 IS-NR Active ----- 63% 27%
6105 126-030-000 IS-NR Active ----- 69% 37%
6107 126-030-000 IS-NR Active ----- 66% 29%
6111 126-030-000 IS-NR Active ----- 59% 27%
6113 126-030-000 IS-NR Active ----- 55% 34%
6115 126-030-000 IS-NR Active ----- 55% 26%
6117 126-030-000 IS-NR Active ----- 54% 26%
1105 126-030-000 IS-NR Active ----- 55% 26%
1107 126-030-000 IS-NR Active ----- 55% 26%
-----
SCCP Service Average MSU Capacity = 71% Average CPU Capacity = 32%

AVERAGE CPU USAGE PER SERVICE:
GTT = 1% GFLEX = 4% GPORT = 0%
VFLEX = 2%

TOTAL SERVICE STATISTICS:
SERVICE SUCCESS ERRORS FAIL REROUTE\ FORWARD TO GTT TOTAL
RATIO WARNINGS

```

```

GTT:          3510          15          0%          -          -          3525
GFLEX:        100043         0          0%          0          0          100043
GPORT:        312203         0          0%          15         1879       314097
VFLEX:        23157          0          0%          -          -          23157

Command Completed.
;

```

### rept-stat-mps

This command displays the overall status of the application running on the MPS (multi-purpose server). Command output for the various reports of this command include V-Flex in overall status and for specific cards when the feature is on. Refer to the *Commands Manual* for a complete description of this command.

Overall status:

```

rlghncxa03w 07-09-07 11:27:34 EST EAGLE 37.6.0
          VERSION      PST          SST          AST
EPAP A    027-015-000  IS-NR      Active      -----
CRITICAL PLATFORM    ALARM DATA = No Alarms
MAJOR    PLATFORM    ALARM DATA = No Alarms
MINOR    PLATFORM    ALARM DATA = No Alarms
CRITICAL APPLICATION ALARM DATA = No Alarms
MAJOR    APPLICATION ALARM DATA = No Alarms
MINOR    APPLICATION ALARM DATA = No Alarms
          ALARM STATUS = No Alarms

          VERSION      PST          SST          AST
EPAP B    027-015-000  OOS-MT     Fault      Standby
CRITICAL PLATFORM    ALARM DATA = No Alarms
MAJOR    PLATFORM    ALARM DATA = h'0123456789ABCDEF
MINOR    PLATFORM    ALARM DATA = h'0123456789ABCDEF
CRITICAL APPLICATION ALARM DATA = No Alarms
MAJOR    APPLICATION ALARM DATA = h'0123456789ABCDEF
MINOR    APPLICATION ALARM DATA = No Alarms
          ALARM STATUS = ** 0371 Major Platform Failure(s)

CARD  PST          SST          GSM STAT    VFLEX STAT
1106 P IS-NR      Active      ACT         ACT
1201 IS-ANR      Active      SWDL       SWDL
1205 OOS-MT-DSBLD Manual      -----    -----
1302 OOS-MT      Isolated   -----    -----
1310 IS-ANR      Standby    SWDL       SWDL

CARD 1106 ALARM STATUS = No Alarms
  DSM PORT A:    ALARM STATUS = No Alarms
  DSM PORT B:    ALARM STATUS = No Alarms
CARD 1201 ALARM STATUS = No Alarms
  DSM PORT A:    ALARM STATUS = ** 0084 IP Connection Unavailable
  DSM PORT B:    ALARM STATUS = ** 0084 IP Connection Unavailable
CARD 1205 ALARM STATUS = No Alarms
  DSM PORT A:    ALARM STATUS = ** 0084 IP Connection Unavailable
  DSM PORT B:    ALARM STATUS = ** 0084 IP Connection Unavailable
CARD 1302 ALARM STATUS = ** 0013 Card is isolated from the system
  DSM PORT A:    ALARM STATUS = ** 0084 IP Connection Unavailable
  DSM PORT B:    ALARM STATUS = ** 0084 IP Connection Unavailable

```

```

CARD 1310 ALARM STATUS = No Alarms
  DSM PORT A:      ALARM STATUS      = ** 0084 IP Connection Unavailable
  DSM PORT B:      ALARM STATUS      = ** 0084 IP Connection Unavailable
Command Completed.
;

```

Status for a specific card:

```

Integrat40 07-09-07 11:37:24 EST EAGLE5 37.6.0
CARD  VERSION      TYPE      PST      SST      AST
1205  -----      DSM      OOS-MT-DSBLD  Manual  -----
  DSM PORT A      OOS-MT      Unavail  -----
    ALARM STATUS  = ** 0084 IP Connection Unavailable
  DSM PORT B      OOS-MT      Unavail  -----
    ALARM STATUS  = ** 0084 IP Connection Unavailable
GSM STAT          = -----
VFLEX STAT        = -----
CARD ALARM STATUS = No Alarms.
DSM MEMORY USAGE = 0%
Command Completed.
;

```

## rept-stat-trbl

This command output includes a summary of any trouble notifications for the V-Flex subsystem. The severity of each alarm is indicated in the output report. Refer to the *Commands Manual* for a complete description of this command.

```

rlghncxa03w 07-02-03 09:50:17 EST EAGLE5 37.6.0
SEQN UAM AL DEVICE ELEMENT TROUBLE TEXT
0002.0143 * CARD 1113 EOAM System release GPL(s) not approved
3661.0048 * TERMINAL 1 Terminal failed
3674.0155 * DLK 1107,A STPLAN STPLAN connection unavailable
3677.0312 * DPC 001-115-001 DPC is restricted
3678.0002 * GPL SYSTEM BPCM Card is not running approved GPL
3683.0176 * SECULOG 1116 Stdby security log -- upload required
3684.0013 ** CARD 1305 SS7IPGW Card is isolated from the system
3688.0236 ** SLK 1203,A lslg2 REPT-LKF: not aligned
3692.0318 ** LSN e5e6 REPT-LKSTO: link set prohibited
3697.0539 ** ENET 1305,A Ethernet Interface Down
3698.0539 ** ENET 1305,B Ethernet Interface Down
3699.0539 ** ENET 1307,B Ethernet Interface Down
3700.0536 * IP7 assoc1234567890 IP Connection Excess Retransmits
0915.0541 *C RTD SYSTEM MSU cksum error threshold exceeded

0915.0541 *C RTD SYSTEM MSU cksum error threshold exceeded
Command Completed.
;

```

## rept-stat-alm

This command output includes the alarm totals for the V-Flex subsystem and DSM/EPAP IP links. Refer to the *Commands Manual* for a complete description of this command.

```

rlghncxa03w 07-05-27 15:00:53 EST EAGLE 37.6.0
ALARM TRANSFER= LMC
ALARM MODE CRIT= AUDIBLE MAJR= SILENT MINR= AUDIBLE
ALARM FRAME 1 CRIT= 7 MAJR= 0 MINR= 10
ALARM FRAME 2 CRIT= 0 MAJR= 0 MINR= 0
ALARM FRAME 3 CRIT= 0 MAJR= 0 MINR= 0
ALARM FRAME 4 CRIT= 0 MAJR= 0 MINR= 0
ALARM FRAME 5 CRIT= 0 MAJR= 0 MINR= 0

```

```

ALARM FRAME 6 CRIT= 0 MAJR= 0 MINR= 0
ALARM FRAME OAP CRIT= 0 MAJR= 0 MINR= 0
ALARM FRAME GPF CRIT= 0 MAJR= 0 MINR= 0
PERM. INH. ALARMS CRIT= 2 MAJR= 0 MINR= 0
TEMP. INH. ALARMS CRIT= 3 MAJR= 0 MINR= 0
TIMED. INH. ALARMS CRIT= 0 MAJR= 0 MINR= 0
ACTIVE ALARMS CRIT= 2 MAJR= 0 MINR= 10
TOTAL ALARMS CRIT= 7 MAJR= 0 MINR= 10

Command Completed.
;

```

## rept-stat-db

This command displays the status information for the EAGLE 5 ISS databases. This includes the level information for each Service Module card, and for the active and standby EPAP databases. It reports database exception status such as corrupted, incoherent, or inconsistent, as well as providing the birth dates and levels. It shows the status of the PDB and RTDB databases when the V-Flex feature key is on. For a complete description of this command, refer to the *Commands Manual*.

```

tekelecstp 07-08-29 08:55:54 NZST EAGLE 37.6.0
rept-stat-db:display=all:db=mps
Command entered at terminal #4.
      EPAP A ( ACTV )
      C BIRTHDATE          LEVEL          EXCEPTION
      - - - - -
PDB          Y 07-08-29 08:20:04      12345          -
RTDB         Y 07-08-29 08:20:04      12345          -
RTDB-EAGLE  Y 07-08-29 08:20:04      12345          -

      EPAP B ( STDBY )
      C BIRTHDATE          LEVEL          EXCEPTION
      - - - - -
PDB          Y 07-08-29 08:20:04      12345          -
RTDB         Y 07-08-29 08:20:04      12345          -
RTDB-EAGLE  Y 07-08-29 08:20:04      12345          -

      EAGLE RTDB REPORT
      CARD/APPL  LOC  C BIRTHDATE          LEVEL          EXCEPTION          IN-SRVC
      - - - - -
VSCCP          1201 Y 07-08-29 08:20:04      12345          -          10d 23h 21m
VSCCP          1203 Y 07-08-29 08:20:04      12345          -          10d 23h 21m
VSCCP          1105 Y 07-08-29 08:20:04      12345          -           5d  3h  1m
;

```

## rtrv-tbl-capacity

The `rtrv-tbl-capacity` command retrieves table use capacity summary information. For each table listed, the number of table entry elements in use and the total allowed number of table elements is presented, along with a percent (%) full value. Information is shown for the V-Flex Call Decision (VFLXCD), Routing Number (VFLXRN), and VMSID (VFLXVID) tables if the V-Flex feature is enabled.

```

tklc1090701 07-05-24 14:22:01 EST EAGLE 37.6.0

```

```

DSTN      table is (      5940 of      6000) 99% full
XLIST     table is (         0 of       500)  0% full
X25-DSTN  table is (         0 of     1024)  0% full
SPC       table is (         4 of       40) 10% full
LS        table is (       738 of     1024) 72% full
SLK       table is (       360 of     2000) 18% full
X25-SLK   table is (         0 of       256)  0% full
IP-LNK    table is (         6 of       512)  1% full
MAP       table is (       336 of     1024) 33% full
GTA       table is (  269999 of 269999) 100% full
SSNSELID  table is (         0 of    10000)  0% full
SCRSET    table is (        40 of       255) 16% full
RTEKEY    table is (         0 of     1000)  0% full
APPLSOCK  table is (         0 of     4000)  0% full
AS        table is (         0 of       250)  0% full
MRN       table is (       768 of     5988) 13% full
SCCPSRV   table is (        12 of        96) 13% full
VFLXRN    table is (         1 of    10000)  1% full
VFLXCD    table is (         1 of     4950)  1% full
VFLXVID   table is (         1 of     1000)  1% full
;

```

### inh-card / alw-card

The `inh-card` command is used to change the state of the card from in-service normal (IS-NR) to Out-of-Service Maintenance-Disabled (OOS-MT-DSBLD). A craftsperson then can test the Service Module card or physically remove it from the shelf.

The `alw-card` command is used to change the card from OOS-MT-DSBLD (out-of-service maintenance-disabled) to IS-NR (in-service normal) if card loading is successful.

Refer to the *Commands Manual* for a complete description of these commands.

### inh-alm / unhb-alm

These commands allow both Port A and Port B to be specified for the `dev=dlk` parameter. This allows alarms to be inhibited on the DSM ports. Refer to the *Commands Manual* for a complete description of these commands.

### rtrv-data-rtddb

This command retrieves data from the RTDB on an active Service Module card. If the `loc` parameter is specified and the target card is an active Service Module card, the RTDB data is retrieved from that card. If the `loc` parameter is not specified, the data is retrieved on the active Service Module card that has the lowest IMT address. The RTDB status on the active Service Module card can be coherent or incoherent.

## Measurements Commands for V-Flex

This section provides a description of the commands used for measurements for the V-Flex feature.

The command examples shown illustrate the requirements and provide suggestions for suitable names and output. The commands are described in detail in the *Commands Manual*, where the actual parameter names, valid values, and output for the commands are provided.

Commands described here include:

- [chg-measopts](#) on page 52
- [rtrv-measopts](#) on page 52
- [rept-ftp-meas](#) on page 53
- [rept-stat-meas](#) on page 53

## chg-measopts

The `chg-measopts` command provides the capability to enable and disable measurement options related to the Measurements Platform. This command provides the `mtchvflex` and the `mtcdvflex` options to activate or deactivate the automatic generation and FTP transfer of the hourly and daily maintenance measurement report for V-Flex. By default, both V-Flex options are disabled and cannot be changed unless the V-Flex feature is on. Refer to the *Commands Manual* for a complete description of this command.

## rtrv-measopts

The `rtrv-measopts` command displays the current state of the Measurements Platform options, including the V-Flex report options.

Refer to the *Commands Manual* for a complete description of this commands.

```

tekelecstp 07-08-22 16:31:40 EST EAGLE 37.6.0

PLATFORMENABLE = on
COLLECT15MIN   = off
CLLIBASEDNAME  = off
-----
SYSTOTSTP     = off
SYSTOTTT      = off
SYSTOTSTPLAN  = off
COMPLINK      = off
COMPLNKSET    = off
GTWYSTP       = off
GTWYLNKSET    = off
GTWYORIGNI    = off
GTWYORIGNINC  = off
GTWYLSORIGNI  = off
GTWYLSDESTNI  = off
GTWYLSONISMT  = off
MTCHLNP       = off
MTCHNP        = off
MTCHMAP       = off
MTCHEIR       = off
MTCHVFLEX     = on
MTCDESTP     = off
MTCDLINK      = off
MTCDLNKSET    = off
MTCDESTPLAN  = off
MTCDLNP       = off
MTCDNP        = off
MTCDMAP       = off
MTCDEIR       = off
MTCDFLEX     = on

```

```

NMSTP           = off
NMLINK          = off
NMLNKSET        = off
AVLLINK         = off
AVLSTPLAN      = off
AVLDLINK       = off
;

```

### rept-ftp-meas

This command initiates on-demand generation and FTP transfer of a measurements report from the MCPM to the customer FTP server. The `rept-ftp-meas` accepts a V-Flex entity type. The combination of this entity type and a report type determines which on-demand V-Flex report is generated. There are only two report types that are accepted with the V-Flex entity type: MTCH and MTCD. The V-Flex entity type is valid only when the V-Flex feature is on. Refer to the *Commands Manual* for a complete description of this command.

**Note:** The ability to schedule the automatic generation and FTP of V-FLEX daily and hourly measurement reports is not available in the EAGLE 5 ISS release 39.0.

### rept-stat-meas

This command reports the status of the Measurements Subsystem, including card location and state, alarm level, and subsystem state. Refer to the *Commands Manual* for a complete description of this command.

```

                                PST           SST           AST
MEAS SS                        OOS-MT       Fault          -----
ALARM STATUS = ** 0516 MEAS degraded with card out of service

CARD  VERSION          TYPE    PST           SST           AST
1107  P 101-9-000      MCPM   IS-NR        Active        -----
      IP Link A         IS-NR        Active        Available
1109  101-9-000      MCPM   OOS-MT       Fault         -----
      IP Link A         OOS-MT       Fault         Unavailable

CARD 1107 ALARM STATUS = No Alarms
CARD 1109 ALARM STATUS = Card is isolated from the system
Command Completed.
;

```

## EAGLE 5 ISS Debug Commands

Chapter 6 of the *Commands Manual* contains descriptions of commands that can be used in assessing and modifying system status and operation. The debug commands are used only under the direction of Tekelec support personnel.

The `ent-trace` command can be used to trace MSUs sent to Service Module cards running the VSCCP application.



## V-Flex Configuration

---

### Topics:

- [Introduction.....56](#)
- [Provisioning Service Module Cards.....56](#)
- [Enabling V-Flex, Setting STP Options, and Turning On V-Flex.....59](#)
- [Provisioning True Point Code and Capability Point Code.....63](#)
- [Provisioning a Mated Application using True Point Code.....64](#)
- [Provisioning V-Flex as a Local Subsystem.....65](#)
- [Routing MSUs to Support V-Flex Subsystem.....70](#)
- [Provisioning the V-Flex Service Selector.....71](#)
- [Provisioning the V-Flex Options.....76](#)
- [Provisioning HOMERN Entries.....78](#)
- [Provisioning Voice Mail Prefix Entries.....78](#)
- [Provisioning Voice Mail Routing Numbers.....79](#)
- [Provisioning Voice Mail Server ID Entries.....80](#)
- [Provisioning Call Decision Table Entries.....82](#)
- [Activating the V-Flex Subsystem.....83](#)
- [Changing the State of a Subsystem Application.....86](#)
- [Activating the E5-SM4G Throughput Capacity Feature.....91](#)
- [Configuring the Measurements Platform for V-Flex.....95](#)

The V-Flex feature is configured on the EAGLE 5 ISS and on the EPAP. This chapter covers the EAGLE 5 ISS configuration only. The EPAP configuration is covered in the *EPAP Administration Manual*.

## Introduction

The V-Flex feature is configured on the EAGLE 5 ISS and on the EPAP. This chapter covers the EAGLE 5 ISS configuration only. The EPAP configuration is covered in the *EPAP Administration Manual*.



### CAUTION

**CAUTION:** Refer to the *Dimensioning Guide for EPAP Advanced DB Features Technical Reference* for important information on the dimensioning rules and the Service Module card database capacity requirements.

The EAGLE 5 ISS configuration of the V-Flex feature consists of the following tasks:

- Verify that the EAGLE 5 ISS contains Service Module cards or E5-SM4G cards, or both, running the VSCCP application. See [Adding a Service Module](#) on page 57.
- Enable the V-Flex feature, set system STP options, and turn on the V-Flex feature. See [Enabling V-Flex, Setting STP Options, and Turning On V-Flex](#) on page 59.
- Change the self identification of the EAGLE 5 ISS node to include ITU-I and ITU-N true point codes and V-Flex capability point codes. To provision true point codes and V-Flex capability point codes, see [Provisioning True Point Code and Capability Point Code](#) on page 63 and refer to the procedures in the *Database Administration Manual - SS7*.
- Provision mated applications for the V-Flex feature that contain the EAGLE 5 ISS ITU-I and ITU-N true point codes, the V-Flex capability point codes, and the V-Flex subsystem number. To provision mated applications, refer to the procedures in the *Database Administration Manual - Global Title Translation*.
- Provision the V-Flex local subsystem number. To configure the V-Flex subsystem application number, see [Adding the V-Flex Subsystem Application](#) on page 65.
- Provision the service selector mechanism to route MSUs to the V-Flex subsystem. To configure the V-Flex service selectors, see [Adding a V-Flex Service Selector](#) on page 71.
- Provision V-Flex options. See [Provisioning the V-Flex Options](#) on page 76.
- Provision home routing number prefix (HOMERN) entries. See [Provisioning HOMERN Entries](#) on page 78.
- Provision Voice Mail screening prefix entries. See [Provisioning Voice Mail Prefix Entries](#) on page 78.
- Provision Voice Mail routing numbers (VM RN) . See [Provisioning Voice Mail Routing Numbers](#) on page 79.
- Provision Voice Mail Server ID (VMSID) entries. See [Provisioning Voice Mail Server ID Entries](#) on page 80.
- Provision Call Decision entries. See [Provisioning Call Decision Table Entries](#) on page 82.
- Activate the V-Flex local subsystem. See [Activating the V-Flex Subsystem](#) on page 83.
- Configure the Measurements Platform if measurements are to be collected for V-Flex. See [Configuring the Measurements Platform for V-Flex](#) on page 95.

## Provisioning Service Module Cards

The V-Flex feature requires Service Module cards running the VSCCP application.

Any of the following cards can be used as Service Module cards running the VSCCP application in the system:

- Service Module 4G – a Service Module with 4 gigabytes of memory
- E5-SM4G - an EPM-based card with 4 gigabytes of memory

This section contains procedures for adding Service Module cards to the system.

### Adding a Service Module

This procedure uses the `ent-card` command to add Service Module cards to the database, to support the Global Title Translation feature, the Enhanced Global Title Translation feature, and the V-Flex feature.



**CAUTION:** Refer to the *Dimensioning Guide for EPAP Advanced DB Features Technical Reference* for important information on the dimensioning rules and the DSM database capacity requirements.

A Service Module card can be inserted only in the odd numbered card slots of an extension shelf. Slot 09 of each shelf contains an HMUX card or a HIPR card. A Service Module cannot be inserted in slot 09. Service Module cards can be inserted in the control shelf, but only in slots 01, 03, 05, 07, and 11. A Service Module card occupies two card slots, so the even-numbered card slot to the right of the odd-numbered slot where the Service Module card has been inserted must be empty. The Service Module card is connected to the network through the odd-numbered card slot connector.

**Table 9: Service Module Card Locations**

Location of the Service Module	Empty Card Location	Location of the Service Module	Empty Card Location
Slot 01	Slot 02	Slot 11	Slot 12
Slot 03	Slot 04	Slot 13	Slot 14
Slot 05	Slot 06	Slot 15	Slot 16
Slot 07	Slot 08	Slot 17	Slot 18

The shelf to which the card is to be added must already be provisioned in the database. This can be verified with the `rttrv-shlf` command. If the shelf is not in the database, refer to the procedure for adding a shelf in the Database Administration Manual – System Management.

The card cannot be added to the database if the specified card location already has a card assigned to it.

The system can contain a maximum of 25 Service Module cards for EPAP-based features.

**Note:** See *EAGLE 5 ISS Commands for V-Flex* on page 30 for brief descriptions of the commands that are used in these procedures to configure the V-Flex feature. Refer to the *Commands Manual*

for complete descriptions of the commands that are used in this procedure. The complete descriptions include all valid parameter values and output examples.

1. Verify that the GTT feature is on. Enter the `rtrv-feat` command. If the GTT feature is on, the `GTT = on` field appears in the command output.

**Note:** The `rtrv-feat` command output contains other fields that are not used by this procedure. To see all the fields displayed by the `rtrv-feat` command, refer to the `rtrv-feat` command description in the *Commands Manual*.

- If the GTT feature is on, shown by the entry `GTT = on` in the `rtrv-feat` command output, go to [Step 3](#) on page 58.
- If the GTT feature is off, shown by the entry `GTT = off` in the `rtrv-feat` command output, continue with [Step 2](#) on page 61.

**Note:** The GTT feature must be purchased before turning it on. If you are not sure whether you have purchased the GTT feature, contact your Tekelec Sales Representative or Account Representative.

After the Global Title Translation (GTT) feature has been turned on with the `chg-feat` command, it cannot be turned off.

2. Display the cards in the system, by entering the `rtrv-card` command. Odd-even pairs of card locations that do not contain cards (are not listed in the output or are not HMUX or HIPR card locations) could be used for Service Module cards.

```
rlghncxa03w 03-03-15 16:34:56 EST EAGLE 37.6.0
CARD  TYPE      APPL      LSET NAME      LINK SLC LSET NAME      LINK SLC
1201  LIMDS0      SS7ANSI      LS1             A    0    LS1             B
1102  DSM         VSCCP      -----        A    --  -----        B    --
1113  GPSM        OAM
1114  TDM-A
1115  GPSM        OAM
1116  TDM-B
1117  MDAL
;
```

3. If an E5-SM4G card is being added, verify that card locations 09 and 10 contain HIPR cards in the shelf where the E5-SM4G card will be installed.

Enter the `rept-stat-gpl:gpl=hipr` command to list the installed HIPR cards in the system.

- If the shelf contains HIPR cards, continue with [Step 4](#) on page 58.
- If the shelf does not contain HIPR cards, refer to the *Installation Manual - EAGLE 5 ISS* to install HIPR cards in the shelf. Continue with [Step 4](#) on page 58.

**Note:** Cards should be distributed throughout the system for proper power distribution. Refer to the *Installation Manual - EAGLE 5 ISS* for the shelf power distribution.

4. Verify that the Service Module card has been physically installed into the proper location.



#### CAUTION

**CAUTION:** If the version of the BPDCM GPL on the Service Module card does not match the BPDCM GPL version in the database when the Service Module card is inserted into the card slot, UAM 0002 is generated indicating that these GPL versions do not match. If UAM 0002 has been generated, perform the alarm clearing procedure for UAM 0002 in the *Maintenance Unsolicited Alarm and Information Messages* manual before proceeding with this procedure.

5. Add the Service Module card to the database, using the `ent-card` command.

```
ent-card:loc=1301:type=dsm:appl=vsccp
```

**Note:** Verify the temperature threshold settings for an E5-SM4G card by performing the “Changing the High-Capacity Card Temperature Alarm Thresholds” procedure in the *Database Administration Manual - SS7*.

6. Verify the temperature threshold settings for an E5-SM4G card by performing the “Changing the High-Capacity Card Temperature Alarm Thresholds” procedure in the *Database Administration Manual - SS7*.

7. Verify the changes by entering the `rtrv-card` command with the card location specified.

```
rtrv-card:loc=1102
```

```
rlghncxa03w 03-03-15 16:34:56 EST EAGLE 37.6.0
CARD   TYPE      APPL      LSET NAME      LINK SLC LSET NAME      LINK SLC
1102   DSM         VS CCP    -----      A   --  -----      B
;
```

8. Back up the database changes, by entering the following command.

```
chg-db:action=backup:dest=fixed
```

The following messages should appear; the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

9. Repeat this procedure for each Service Module card that needs to be added to the system.

## Enabling V-Flex, Setting STP Options, and Turning On V-Flex

This procedure is used to enable the V-Flex feature, set the system STP options, and turn on the V-Flex feature in the EAGLE 5 ISS.

The V-Flex feature must be enabled using the V-Flex feature part number 893016701 and the feature access key.

**Note:** Each feature must be purchased before you can receive the feature access key to use to enable the feature. If you are not sure if you have purchased the feature and received the feature access key, contact your Tekelec Sales Representative or Account Representative.

After the V-Flex feature is enabled and turned on, the V-Flex feature cannot be turned off. When the V-Flex feature is enabled, it is permanently enabled. The V-Flex feature cannot be temporarily enabled.



**CAUTION**

**CAUTION:** The V-Flex feature cannot be enabled if the LNP feature is on. Enter the `rtrv-ctrl-feat` command to verify whether or not the LNP feature is on. If the LNP feature is on, shown with a quantity greater than zero for the LNP ported TNs field in the command output, this procedure cannot be performed.

Before the V-Flex feature can be enabled, the following conditions must exist in the system:

- The V-Flex feature requires Service Module cards running the VSCCP application to be configured in the system. If there are no Service Module cards present in the EAGLE 5 ISS, they must be added before the V-Flex feature can be enabled and turned on. See [Adding a Service Module](#) on page 57.

**CAUTION**

**CAUTION:** Refer to the *Dimensioning Guide for EPAP Advanced DB Features Technical Reference* for important information on the dimensioning rules and the Service Module card database capacity requirements.

- The database must contain a valid and locked serial number for the EAGLE 5 ISS. The system is shipped with a serial number in the database, but the serial number is not locked. The serial number can be changed, if necessary, and locked after the system is on-site.
- The GTT feature must be turned on.

After the V-Flex feature has been enabled, the STP options for the default country code and the default network destination code must be changed from none to appropriate values for V-Flex.

The `chg-stpopts` and `rtrv-stpopts` commands support the `defcc`, `defndc` and `dsmaud` parameters for the V-Flex feature.

The V-Flex feature cannot be enabled when the `ansigflex` parameter is enabled.

The default country code (`defcc`) parameter, default network destination code (`defndc`) parameter can be provisioned for V-Flex after the V-Flex feature is enabled. The `defcc` and `defndc` parameter values must be changed from none to appropriated values before the V-Flex feature can be turned on in the system.

In the `rtrv-stpopts` command output:

- The `defcc` and `defndc` parameters are displayed with value none when the V-Flex feature is enabled
- The `dsmaud` parameter is displayed with value off when the V-Flex feature is turned on

After the V-Flex feature has been enabled and the STP options are set, the V-Flex feature status must be set to on (the feature must be “turned on”). Database provisioning for V-Flex can be done after the feature is turned on.

After the feature is turned on:

- The `defcc` and `defndc` parameter values cannot be set to none
- The Service Module audit running state (`dsmaud`) parameter of the `chg-stpopts` command can be provisioned for V-Flex

```
CHG-STPOPTS:DEFCC=<cc>:DEFNDC=<ndc>:Service ModuleAUD=ON
```

1. Verify that the GTT feature is on. Enter the `rtrv-feat` command. If the GTT feature is on, the `GTT = on` field appears in the command output.

**Note:** The `rtrv-feat` command output contains other fields that are not used by this procedure. To see all the fields displayed by the `rtrv-feat` command, refer to the `rtrv-feat` command description in the *Commands Manual*.

- If the GTT feature is on, shown by the entry `GTT = on` in the `rtrv-feat` command output in step 1, go to [Step 3](#) on page 61.
- If the GTT feature is off, shown by the entry `GTT = off` in the `rtrv-feat` command output in step 1, continue with [Step 2](#) on page 61.

**Note:** The GTT feature must be purchased before turning it on. If you are not sure whether you have purchased the GTT feature, contact your Tekelec Sales Representative or Account Representative.

After the Global Title Translation (GTT) feature has been turned on with the `chg-feat` command, it cannot be turned off.

- Turn the GTT feature on, by entering the following command.

```
chg-feat:gtt=on
```

Refer to the *Database Administration Manual - Global Title Translation* for more information about turning on and using the GTT feature.

- Display the status of the features that are controlled with feature access keys. Enter the `rtrv-ctrl-feat` command. The output lists the enabled features in the system and shows the on/off status for each feature.

```
rlghncxa03w 07-08-29 16:40:40 EST EAGLE5 37.6.0
The following features have been permanently enabled:
Feature Name          Partnum  Status  Quantity
IPGWx Signaling TPS   893012805 on      2000
VFLEX                 893016701 on      ----
E5-SM4G Throughput Cap 893019101 on      ----
;
```

If the `rtrv-ctrl-feat` output shows a LNP ported TNs quantity entry, this procedure cannot be performed.

If the VFLEX entry appears in the `rtrv-ctrl-feat` output with status on, performing this procedure is not necessary.

- Verify that Service Module cards are configured in the database. Enter the `rtrv-card` command to display the cards in the database. Service Module cards are shown with the entries Service Module in the TYPE field and VSCCP in the APPL field of the output.

```
rlghncxa03w 03-03-15 16:34:56 EST EAGLE 37.6.0
CARD  TYPE      APPL      LSET NAME      LINK SLC LSET NAME      LINK SLC
1201  LIMDS0     SS7ANSI   LS1             A    0    LS1            B    --
1102  DSM        VSCCP     -----        A    --  -----        B    --
1113  GPSM      OAM
1114  TDM-A
1115  GPSM      OAM
1116  TDM-B
1117  MDAL
;
```

If Service Module cards are not shown in the output of the `rtrv-card` command, go to the [Adding a Service Module](#) on page 57 and add the necessary Service Module cards, making sure that the Service Module cards meet the requirements.

- Verify that the system serial number is correct and locked. Enter the `rtrv-serial-num` command to display the system serial number and the lock status.
  - If the serial number is correct and locked, continue with [Step 7](#) on page 62.
  - If the serial number shown in the output is not correct, enter the correct serial number into the database, using the `ent-serial-num` command without the lock parameter. Enter the `rtrv-serial-num` command again to verify that the correct serial number is entered.

```
ent-serial-num:serial=<system serial number>
```

```
rtrv-serial-num
```

- If the serial number is correct but is not locked, lock the serial number. Enter the `ent-serial-num` command, specifying the serial number shown in the `rtrv-serial-num` command output and the `lock=yes` parameter.

```
ent-serial-num:serial=<system serial number>:lock=yes
```

6. Verify that the `defcc` and `defndc` STP option parameter values are not none. Enter the `rtrv-stpopts` command. If the parameter values are none, change the values. Then continue with [Step 7](#) on page 62.
7. Enable the V-Flex feature, by entering the `enable-ctrl-feat` command.

```
enable-ctrl-feat:partnum=893016701:fak=<feature access key>
```

**Note:** The feature access key is provided by Tekelec when the feature is purchased. If you do not have the controlled feature part number or the feature access key for a TIF feature, contact your Tekelec Sales Representative or Account Representative.

When the feature is enabled, the VFLEX entry appears in the output of the `rtrv-ctrl-feat` command.

```
rlghncxa03w 07-08-29 16:40:40 EST EAGLE5 37.6.0
The following features have been permanently enabled:
Feature Name          Partnum    Status    Quantity
HC-MIM SLK Capacity   893012707 on         64
VFLEX                 893016701 off        ----
E5-SM4G Throughput Cap 893019101 on         ----
;
```

8. Turn on the V-Flex feature, by entering the `chg-ctrl-feat` command.

```
chg-ctrl-feat:partnum=893016701:status=on
```

When the feature is turned on, the status changes to on in the `rtrv-ctrl-feat` command output.

```
rlghncxa03w 07-08-29 16:40:40 EST EAGLE5 37.6.0
The following features have been permanently enabled:
Feature Name          Partnum    Status    Quantity
HC-MIM SLK Capacity   893012707 on         64
VFLEX                 893016701 on         ----
E5-SM4G Throughput Cap 893019101 on         ----
;
```

9. Back up the database changes, by entering the following command.

```
chg-db:action=backup:dest=fixed
```

The following messages appear; the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

## Provisioning True Point Code and Capability Point Code

Messages for the V-Flex local subsystem can arrive Rt-on-SSN or Rt-on-GT. All MSUs must contain the EAGLE 5 ISS true or secondary point code or the V-Flex capability point code in the DPC field of the message.

For the V-Flex subsystem, the EAGLE 5 ISS supports ANSI, ITU-I, ITU-N, ITU-I Spare, and ITU-N Spare capability point code types, including group codes. ITU-N24 capability point codes are not supported.

This procedure explains how to provision EAGLE 5 ISS true point codes and V-Flex capability point codes.

1. Display the true and capability point codes in the system. Enter the `rtrv-sid` command.

```
tekelecstp 07-08-22 15:07:48 EST EAGLE 37.6.0

      PCA          PCI          PCN          CLLI          PCTYPE
      -----          -          -          tekelecstp          ANSI
;
```

2. Verify that the V-Flex feature is enabled and turned on, by entering the `rtrv-ctrl-feat` command.

```
rlghncxa03w 07-08-29 16:40:40 EST EAGLE5 37.6.0
The following features have been permanently enabled:
Feature Name          Partnum  Status  Quantity
IPGWx Signaling TPS    893012805 on       2000
VFLEX                 893016701 on       ----
E5-SM4G Throughput Cap 893019101 on       ----
;
```

- If the VFLEX entry appears in the command output, and the feature status is on, continue with [Step 3](#) on page 63.
  - If the VFLEX entry does not appear in the command output or if the feature status in the VFLEX entry is off, go to [Enabling V-Flex, Setting STP Options, and Turning On V-Flex](#) on page 59 to enable and turn on the V-Flex feature. Continue with [Step 3](#) on page 63.
3. Change the ANSI, ITU-I, ITU-N, ITU-I Spare, and ITU-N Spare true point codes and V-Flex capability point codes, using the `chg-sid` command. (ITU-N24 point codes are not valid for V-Flex.)
  4. Verify the changes with the `rtrv-sid` command.

```
tekelecstp 07-08-22 15:07:48 EST EAGLE 37.6.0

      PCA          PCI          PCN          CLLI          PCTYPE
      -----          -          -          tekelecstp          ANSI

      CPCA (VFLEX)
      004-004-004

      CPCI (VFLEX)
      5-012-0

      CPCN (VFLEX)
```

```
12345
```

```
;
```

5. Back up the changes using the `chg-db:action=backup:dest=fixed` command.

The following messages appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED): MASP A - Backup starts on active MASP.
BACKUP (FIXED): MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED): MASP A - Backup starts on standby MASP.
BACKUP (FIXED): MASP A - Backup on standby MASP to fixed disk complete.
```

## Provisioning a Mated Application using True Point Code

V-Flex exists as a local SCCP subsystem on the EAGLE 5 ISS, with a subsystem number assigned to it.

Before the local subsystem application can be added to the database:

- The EAGLE 5 ISS ANSI, ITU-I, ITU-N, ITU-I Spare, and ITU-N Spare true point codes must be defined in the system. See [Provisioning True Point Code and Capability Point Code](#) on page 63.
- The EAGLE 5 ISS ANSI, ITU-I, ITU-N, ITU-I Spare, and ITU-N Spare true point codes and a subsystem number must be entered into the Mated Application table.

When multiple point code types are assigned to a local subsystem, they must have the same subsystem number. The subsystem number is linked to a service type. In order for all point code types to reach the local subsystem, the MSU must have this one subsystem number.

Use the procedures in the Database Administration Manual – Global Title Translation to add an EAGLE 5 ISS true point code and the subsystem number to a solitary or dominant mated application.

The V-Flex subsystem can have a mate subsystem and a concerned point code group assigned to it in the MAP table.

The V-Flex subsystem mated application cannot be set to Load Shared mode (as end nodes do not perform load sharing), but can be set only to Dominant or Solitary mode.

If multiple point code types for V-Flex are provisioned in the MAP table, then the point code type for the Subsystem Out-of-service Request message (SOR) is determined using the following order:

1. ANSI
2. ITU-N
3. ITU-N Spare
4. ITU-I
5. ITU-I Spare

## Provisioning V-Flex as a Local Subsystem

The following procedures in this section are used to add, remove, or change a subsystem application. Only one subsystem application can be defined. The application must be unique.

- [Adding the V-Flex Subsystem Application](#) on page 65
- [Removing the V-Flex Subsystem Application](#) on page 67
- [Changing the State of a Subsystem Application](#) on page 86

### Adding the V-Flex Subsystem Application

This procedure is used to reserve a subsystem number for the V-Flex (Voice Mail Router) application, and to place the V-Flex application either on-line or offline.

Before the V-Flex subsystem application can be added to the database, the following conditions must exist in the system:

- The V-Flex feature must be enabled and turned on. See [Enabling V-Flex, Setting STP Options, and Turning On V-Flex](#) on page 59.
- The application specified by the appl parameter (vflex) cannot already be in the database.
- The EAGLE 5 ISS ITU-I and 14-bit ITU-N true point code and an assigned subsystem number must be in the Mated Application table. Only one subsystem number for the application can be defined. See [Provisioning a Mated Application using True Point Code](#) on page 64 and the procedures in the *Database Administration Manual – Global Title Translation* for provisioning solitary and dominant mated applications.

If the stat parameter is not specified, the application will be offline.

The examples in this procedure reserve the subsystem number 100 for the V-Flex application and set the V-Flex application status to on-line.

1. Verify that the V-Flex feature is enabled and turned on, by entering the `rtrv-ctrl-feat` command.

If the V-Flex feature is enabled and turned, the VFLEX entry shows a status of on.

```
r1ghncxa03w 07-08-29 16:40:40 EST EAGLE5 37.6.0
The following features have been permanently enabled:
Feature Name          Partnum  Status  Quantity
IPGWx Signaling TPS   893012805 on      2000
HC-MIM SLK Capacity   893012707 on      64
VFLEX                 893016701 on      ----
E5-SM4G Throughput Cap 893019101 on      ----
;
```

- If the V-Flex feature is not enabled or turned on, go to the procedure in [Enabling V-Flex, Setting STP Options, and Turning On V-Flex](#) on page 59.

Return to this procedure and continue with [Step 2](#) on page 66.

- If the V-Flex feature is enabled and turned on, continue with [Step 2](#) on page 66.

- Verify that EAGLE 5 ISS true point codes are defined in the system. Enter the `rtrv-sid` command. The EAGLE 5 ISS true point codes are shown in the PCA, PCI, and PCN fields of the `rtrv-sid` output.

```
tekelecstp 07-08-22 15:07:48 EST EAGLE 37.6.0

PCA          PCI          PCN          CLLI          PCTYPE
001-001-001  2-002-2      01234       tekelecstp   ANSI

CPCA (VFLEX)
004-004-004

CPCI (VFLEX)
5-012-0

CPCN (VFLEX)
12345

;
```

If the `rtrv-sid` output does not show entries in the PCA, PCI or PCN fields, or if the true point code values need to be changed, See [Provisioning True Point Code and Capability Point Code](#) on page 63 and the *“Changing the Self-Identification of the System” procedure in the Database Administration Manual - SS7* to add the correct point code values.

Continue with [Step 3](#) on page 66.

- Verify that the EAGLE 5 ISS true point codes (from [Step 2](#) on page 66) and a subsystem number that can be used for V-Flex are available in the MAP table. Enter the `rtrv-map` command. If EAGLE 5 ISS true point codes and V-Flex subsystem number are not shown in the `rtrv-map` output, go to the *“Provisioning a Mated Application” procedure in the Database Administration Manual – Global Title Translation* and add the EAGLE 5 ISS true point codes and a subsystem to a mated application..
- Verify that the V-Flex application is not already defined in the database. Enter the `rtrv-ss-appl` command. The VFLEX entry should not appear in the output.

```
tekelecstp 07-07-25 08:02:22 EST EAGLE 37.6.0
APPL  SSN  STAT

SS-APPL TABLE IS 25% FULL (1 OF 4)

;
```

- Add the V-Flex application and subsystem number, using the `ent-ss-appl` command. If the `stat` parameter is not specified, the status defaults to offline.
 

```
ent-ss-appl:appl=vflex:ssn=100:stat=online
```
- Verify the changes, by entering the `rtrv-ss-appl` command.

```
tekelecstp 07-07-25 08:02:22 EST EAGLE 37.6.0
APPL  SSN  STAT
VFLEX 11  online

SS-APPL TABLE IS 25% FULL (1 OF 4)

;
```

- Back up the changes using the `chg-db:action=backup:dest=fixed` command. The following messages appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED): MASP A - Backup starts on active MASP.
BACKUP (FIXED): MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED): MASP A - Backup starts on standby MASP.
BACKUP (FIXED): MASP A - Backup on standby MASP to fixed disk complete.
```

## Removing the V-Flex Subsystem Application

This procedure is used to remove a subsystem application from the database. The EAGLE 5 ISS can contain only one subsystem application.

If the V-Flex subsystem application is defined and must be removed, use the procedure in this section.

If another subsystem application is already defined, it must be removed before the V-Flex application can be entered. To remove the INP, EIR, or LNP subsystem, do not perform the procedure in this section. Perform the procedures in the *Feature Manual - INP*, *Feature Manual - EIR*, or *Database Administration Manual - LNP*.

The subsystem application to be removed must be in the database and the subsystem must be out of service.

- Display the subsystem application number for the V-Flex application in the database, by entering the `rtrv-ss-appl` command.

```
tekelecstp 07-07-25 08:02:22 EST EAGLE 37.6.0
APPL SSN STAT
VFLEX 11 online

SS-APPL TABLE IS 25% FULL (1 OF 4)
;
```

- Display the operating status of the V-Flex subsystem, by entering the `rept-stat-sccp` command.

```
tklc1170501 07-08-18 10:16:24 EST EAGLE5 37.6.0
SCCP SUBSYSTEM REPORT IS-NR Active -----
    SCCP ALARM STATUS = No Alarms
VFLEX SUBSYSTEM REPORT IS-NR Active -----
    VFLEX: SSN STATUS = Allowed MATE SSN STATUS = -----
    VFLEX ALARM STATUS = No Alarms
GFLEX SERVICE REPORT IS-NR Active -----
    GFLEX ALARM STATUS = No Alarms
GPORT SERVICE REPORT IS-NR Active -----
    GPORT ALARM STATUS = No Alarms

SCCP Cards Configured=25 Cards IS-NR=25
System Daily Peak SCCP Load 15639 TPS 06-09-18 06:14:24
System Overall Peak SCCP Load 21062 TPS 06-09-15 14:24:38
System Total SCCP Capacity 21250 TPS (21250 max SCCP Capacity)
System SCCP Capacity Calc. Method (N)
System TPS Alarm Threshold 17000 TPS ( 80% System N SCCP
Capacity)

CARD VERSION PST SST AST MSU CPU
USAGE USAGE
-----
1217 126-030-000 IS-NR Active ----- 100% 45%
```

```

1317 126-030-000 IS-NR Active ----- 100% 51%
2217 126-030-000 IS-NR Active ----- 100% 42%
3201 126-030-000 IS-NR Active ----- 54% 25%
3203 126-030-000 IS-NR Active ----- 55% 25%
3205 126-030-000 IS-NR Active ----- 57% 27%
3207 126-030-000 IS-NR Active ----- 69% 29%
3211 126-030-000 IS-NR Active ----- 85% 35%
3213 126-030-000 IS-NR Active ----- 94% 37%
3215 126-030-000 IS-NR Active ----- 86% 35%
3217 126-030-000 IS-NR Active ----- 74% 31%
4217 126-030-000 IS-NR Active ----- 64% 28%
4317 126-030-000 IS-NR Active ----- 100% 41%
5117 126-030-000 IS-NR Active ----- 100% 40%
5317 126-030-000 IS-NR Active ----- 56% 25%
6101 P 126-030-000 IS-NR Active ----- 57% 32%
6103 126-030-000 IS-NR Active ----- 63% 27%
6105 126-030-000 IS-NR Active ----- 69% 37%
6107 126-030-000 IS-NR Active ----- 66% 29%
6111 126-030-000 IS-NR Active ----- 59% 27%
6113 126-030-000 IS-NR Active ----- 55% 34%
6115 126-030-000 IS-NR Active ----- 55% 26%
6117 126-030-000 IS-NR Active ----- 54% 26%
1105 126-030-000 IS-NR Active ----- 55% 26%
1107 126-030-000 IS-NR Active ----- 55% 26%
-----
SCCP Service Average MSU Capacity = 71% Average CPU Capacity = 32%

AVERAGE CPU USAGE PER SERVICE:
  GTT = 1% GFLEX = 4% GPORT = 0%
  VFLEX = 2%

TOTAL SERVICE STATISTICS:

```

	SERVICE	SUCCESS	ERRORS	FAIL RATIO	REROUTE\ WARNINGS	FORWARD TO GTT	
TOTAL	GTT:	3510	15	0%	-	-	
3525	GFLEX:	100043	0	0%	0	0	100043
	GPORT:	312203	0	0%	15	1879	314097
23157	VFLEX:	23157	0	0%	-	-	

```

Command Completed.
;

```

**Note:** If the V-Flex subsystem is out of service, shown by the entry VFLEX SUBSYSTEM REPORT OOS-MT-DSBLD in the `rept-stat-sccp` output in [Step 3](#) on page 68, skip [Step 4](#) on page 69 and [Step 5](#) on page 69, and go to [Step 6](#) on page 69.

- Place the V-Flex subsystem application out of service. Enter the `inh-map-ss` command and specify the V-Flex subsystem number displayed in [Step 1](#) on page 67.

```
inh-map-ss:ssn=100
```

```
rlghncxa03w 03-06-28 14:42:38 GMT EAGLE 41.0.0
Inhibit map subsystem command sent to all SCCP cards.
Command Completed.
```

When this command has successfully completed, the following message appears. If the force=yes parameter is not specified, wait for a message that indicates the the subsystem is inhibited.

```
rlghncxa03w 03-06-28 14:42:38 GMT EAGLE 41.0.0
Inhibit map subsystem command sent to all SCCP cards.
Command Completed.
```

- Verify that the V-Flex subsystem is out of service (OOS-MT-DSBLD), by entering the `rept-stat-sccp` command. If the V-Flex subsystem is not out of service, return to [Step 3](#) on page 68 and enter the `inh-map-ss` command with the force=yes parameter specified.

```
e1030701 06-09-18 02:44:41 EST EAGLE 36.0.0
SCCP SUBSYSTEM REPORT IS-NR Active -----
SCCP ALARM STATUS = No Alarms
VFLEX SUBSYSTEM REPORT OOS-MT_DSBLD Inhibited -----
VFLEX: SSN STATUS = Inhibited MATE SSN STATUS = -----
VFLEX ALARM STATUS = *C 0529 Service is disabled

SCCP Cards Configured= 1 Cards IS-NR= 1
System Daily Peak SCCP Load 0 TPS 00-00-15 00:41:06
System Overall Peak SCCP Load 0 TPS 00-00-00 00:00:00
System Total SCCP Capacity 1100 TPS (1100 max SCCP Capacity)
System SCCP Capacity Calc. Method (N)
System TPS Alarm Threshold 880 TPS ( 80% System N SCCP
Capacity)

CARD VERSION PST SST AST MSU CPU
USAGE USAGE
-----
1105 P 039-007-001 IS-NR Active ----- 0% 6%
-----
SCCP Service Average MSU Capacity = 0% Average CPU Capacity = 6%

AVERAGE CPU USAGE PER SERVICE:
GTT = 0% VFLEX = 0

TOTAL SERVICE STATISTICS:
SERVICE SUCCESS ERRORS FAIL REROUTE\ FORWARD
RATIO WARNINGS TO GTT
TOTAL
GTT: 0 0 0% - -
VFLEX 0 0 0% 0 0

Command Completed.
;
```

- Remove the V-Flex subsystem application from the database, by entering the `dlt-ss-appl` command.  
`dlt-ss-appl:appl=vflex`
- Verify the changes by entering the `rtrv-ss-appl` command. No application entries should appear in the output.

```
tekelecstp 07-07-25 08:02:22 EST EAGLE 37.6.0
APPL SSN STAT

SS-APPL TABLE IS 25% FULL (1 OF 4)
;
```

- Back up the changes using the `chg-db:action=backup:dest=fixed` command.

The following messages appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED): MASP A - Backup starts on active MASP.
BACKUP (FIXED): MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED): MASP A - Backup starts on standby MASP.
BACKUP (FIXED): MASP A - Backup on standby MASP to fixed disk complete.
```

## Routing MSUs to Support V-Flex Subsystem

V-Flex allows global title information to resolve to the V-Flex local subsystem, so that route-on-global title (rt-on-gt) messages can be forwarded to the local subsystem.

Provisioning is required to accomplish the following tasks:

- Provision V-Flex as a service. See [Provisioning the V-Flex Service Selector](#) on page 71.
- Direct DPC/SSN routing to the EAGLE 5 ISS PC and the V-Flex local subsystem

This is handled on the network card. No provisioning is required.

Rt-on-SSN MSUs should contain EAGLE® 5 ISS's V-Flex Subsystem number in the Called Party Subsystem field of the message.

If the V-Flex local subsystem is online, then it does not matter whether the DPC is capability point code (CPC), or true or secondary point code (TSPC). The message will be processed by the local subsystem. Any required response MSU will use the TSPC assigned to the destination node as the OPC.

If the local V-Flex subsystem is offline and the mated subsystem is available, the EAGLE 5 ISS will not reroute the message to the mate. In this case, the EAGLE 5 ISS is acting as an end node, and end nodes do not reroute. If possible, the EAGLE 5 ISS will generate network management messages to force the network to transition traffic to the mate.

Because the EAGLE 5 ISS cannot generate an SSP when a message arrives Rt-on-SSN for the EAGLE 5 ISS CPC, it is preferred that nodes sending Rt-on-SSN traffic use one of the EAGLE 5 ISS TSPCs.

- Final GTT routing to an EAGLE 5 ISS PC and the V-Flex local subsystem

Rt-on-GT MSUs can arrive either with SCCP CdPA information that matches an EAGLE® 5 ISS service selector, or with a GTA address that has been provisioned to translate to the local V-Flex subsystem.

If the local V-Flex subsystem is online, then it does not matter if the DPC is a CPC or TSPC. The query will be redirected to the local subsystem and processed. Any response MSU will use the TSPC assigned to the destination node as the OPC.

If the local V-Flex subsystem is offline and the mated subsystem is available, the EAGLE 5 ISS will reroute the message to the mated subsystem. In this case, the EAGLE 5 ISS is acting as both STP and SCP, and STPs do reroute messages. If a message arrives Rt-on-GT for the EAGLE 5 ISS TSPC, the EAGLE 5 ISS cannot generate a TFP. The EAGLE 5 ISS will be forced to handle and reroute these messages, instead of forcing the adjacent node to route to the mate. Therefore, nodes that send Rt-on-GT traffic to the EAGLE 5 ISS should use one of the V-Flex CPCs, not the EAGLE 5 ISS TSPC.

See [Activating the V-Flex Subsystem](#) on page 83.

This information must be provisioned properly in GTT tables, using a command like the following command. Refer to the procedures in the *Database Administration Manual - Global Title Translation*.

```
ENT-GTT:TYPE=<TT Type>:GTA=<gta>:EGTA=<egta>:XLAT=DPCSSN:RI=SSN:PC=<EAGLE 5
ISS True or Secondary Point Code>:SSN=<V-Flex SSN>
```

## Provisioning the V-Flex Service Selector

The procedures in this section describe how to add, change, and remove a service selector. The information is indicated that is specific to the V-Flex feature.

The commands that are used in these procedures are described briefly in “*EAGLE 5 ISS Service Selector Commands*” on page 3-8, and in complete detail in the *Commands Manual*.

### Adding a V-Flex Service Selector

This procedure is used to add a service selector for the V-Flex feature.

The V-Flex feature must be enabled and turned on before a V-Flex service selector can be added.

1. Verify that the V-Flex feature is enabled and turned on, by entering the `rtrv-ctrl-feat` command. If the V-Flex feature is enabled and turned on, the status of the VFLEX entry is on.

```
rlghncxa03w 07-08-29 16:40:40 EST EAGLE5 37.6.0
The following features have been permanently enabled:
Feature Name          Partnum      Status      Quantity
IPGWx Signaling TPS   893012805   on          2000
HC-MIM SLK Capacity   893012707   on          64
VFLEX                  893016701   on          ----
E5-SM4G Throughput Cap 893019101   on          ----
;
```

- If the V-Flex feature is not enabled or turned on, go to [Enabling V-Flex, Setting STP Options, and Turning On V-Flex](#) on page 59 to enable and turned on the V-Flex feature. Then continue with [Step 2](#) on page 71.
  - If the V-Flex feature is enabled and turned on, continue with [Step 2](#) on page 71.
2. Display any existing V-Flex service selectors in the database, by entering the `rtrv-srvsel:serv=vflex` command.

```
rlghncxa03w 07-06-28 14:42:38 GMT EAGLE 37.6.0

GTII  TT  NP      NAI  SSN  SNP  SNAI  SERV
4     1   e164    intl 3    ---  ---   vflex
4     2   e164    intl *  ---  ---   vflex

GTIN  TT  NP      NAI  SSN  SNP  SNAI  SERV
4     4   e164    natl 4    ---  ---   vflex
```

```
SRV_SELECTOR table is (3 of 20992) 1 % full
;
```

3. Add new V-Flex service selectors, using the `ent-srvsel` command. For example, enter commands like these:

```
ent-srvsel: serv=vflex: tt=35: ssn=100: gtin=4: np=e214: nai=natl
```

```
ent-srvsel: serv=vflex: tt=57: ssn=75: gtin=2
```

4. Verify the changes by entering the `rtrv-srvsel` command with the parameters and values used in [Step 3](#) on page 72.

```
rlghncxa03w 07-06-28 14:42:38 GMT EAGLE 37.6.0

GTII  TT  NP      NAI  SSN  SNP  SNAI  SERV
4     1   e164   intl  3    ---  ---   vflex
4     2   e164   intl  *    ---  ---   vflex

GTIN  TT  NP      NAI  SSN  SNP  SNAI  SERV
4     4   e164   natl  4    ---  ---   vflex
4     35  e214   natl  100  ---  ---   vflex
2     57  ---    ---   75   ---  ---   vflex

SRV_SELECTOR table is (5 of 20992) 1 % full
;
```

5. Back up the changes using the `chg-db:action=backup:dest=fixed` command. The following messages appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED): MASP A - Backup starts on active MASP.
BACKUP (FIXED): MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED): MASP A - Backup starts on standby MASP.
BACKUP (FIXED): MASP A - Backup on standby MASP to fixed disk complete.
```

## Removing a Service Selector

This procedure is used to remove a service selector from the database.

To remove a service selector, the `GTI`, `GTII`, `GTIN`, `tt`, and `ssn` parameter values must be entered as shown in the `rtrv-srvsel` output.

These parameters can also be used to limit the amount of information displayed with the `rtrv-srvsel` command.

```
test
```

1. Display the service selectors in the database, by entering the `rtrv-srvsel` command.

```

GTII  TT  NP      NAI  SSN  SNP  SNAI  SERV
4     1   e214   intl  4    e164 intl  gport
4     1   e214   intl  5    e164 intl  smsmr
4     2   e214   intl  5    e164 intl  mnpsms
4     2   e164   intl          ---  ---  vflex

GTIN  TT  NP      NAI  SSN  SNP  SNAI  SERV
4     4   e214   natl  75   e164 intl  gflex
4     9   e214   natl  100 e164 intl  gflex
4    35   e214   natl  100 ---  ---  vflex
2    57   e214   natl  75   ---  ---  vflex

SRV SELECTOR table is (8 of 20992)  1 % full
;

```

2. Remove the service selector from the database, using the `dlt-srvsel` command. For example, enter commands like these.

```

dlt-srvsel:serv=vflex:tt=35:ssn=100:gtin=4:np=e214:nai=natl
dlt-srvsel:serv=vflex:tt=57:ssn=75:gtin=2

```

3. Verify the changes by entering the `rtrv-srvsel` command with the parameters and values used in [Step 2](#) on page 73.

```

rtrv-srvsel:serv=vflex:tt=35:ssn=100:gtin=4:np=e214:nai=natl

rlghncxa03w 07-06-28 14:42:38 GMT  EAGLE 37.6.0

GTIN  TT  NP      NAI  SSN  SNP  SNAI  SERV
No SRV Selector found in range
;

rtrv-srvsel:serv=vflex:tt=57:ssn=75:gtin=2

tekelecstp 07-08-28 16:35:22 EST  EAGLE 37.6.0
GTII  TT  NP      NAI  NPV  NAIV  SSN  SNP  SNAI  SERV
No SRV Selector found in range
;

```

4. Back up the changes using the `chg-db:action=backup:dest=fixed` command.

The following messages appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED): MASP A - Backup starts on active MASP.
BACKUP (FIXED): MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED): MASP A - Backup starts on standby MASP.
BACKUP (FIXED): MASP A - Backup on standby MASP to fixed disk complete.
```

## Changing an Existing Service Selector to a V-Flex Service Selector

This procedure is used to change an existing non-V-Flex service selector to a V-Flex service selector.

The only parameters that can be changed using this procedure are:

### **:nserv**

New DSM service type, VFLEX

### **:nsnp**

A V-Flex service selector cannot contain an SNP value; if the service selector being changed contains an SNP value, this value must be changed to none with this parameter.

### **:nsnai**

A V-Flex service selector cannot contain an SNAI value; if the service selector being changed contains an SNAI value, this value must be changed to none with this parameter.

The `chg-srvsel` command requires that the following parameters be specified with the values shown in the `rtrv-srvsel` output for the service selector that is being changed. If any of these parameter values need to be changed for a V-Flex service selector, use the procedure in [Removing a Service Selector](#) on page 72 to remove the existing service selector. Then use the procedure in [Adding a V-Flex Service Selector](#) on page 71 to add the new V-Flex service selector with the new parameter information.

### **:gtii/gtin/gtin24**

Global title indicator for ITU international (gtii), ITU national using 14-bit point codes (gtin), and ITU national using 24-bit point codes (gtin24).

### **:tt**

Translation type

### **:ssn**

Subsystem number

### **:nai**

Nature of address indicator

### **:naiv**

Nature of address indicator value

### **:np**

Numbering plan

### **:npv**

Numbering plan value

1. Display the service selectors in the database, using the `rtrv-srvsel` command.

```
rlghncxa03w 07-06-28 14:42:38 GMT EAGLE 37.6.0

GTII  TT  NP      NAI  SSN  SNP  SNAI  SERV
4      1  e214   intl  4    e164 intl  gport
4      1  e214   intl  5    e164 intl  smsmr
4      2  e214   intl  5    e164 intl  mnpsms
4      2  e164   intl  *    ---  ---  vflex

GTIN  TT  NP      NAI  SSN  SNP  SNAI  SERV
4      4  e214   natl  34   e164 intl  gflex
4      9  e214   natl  ---  e164 intl  gflex

SRV SELECTOR table is (6 of 20992) 1 % full

;
```

**Note:** If the `rtrv-srvsel` output in [Step 1](#) on page 75 shows V-Flex service selectors, skip [Step 2](#) on page 75 and go to [Step 3](#) on page 75.

2. Verify that the V-Flex feature is enabled and turned on, by entering the `rtrv-ctrl-feat` command. If the V-Flex feature is enabled and turned on, the status of the VFLEX entry is on.

```
rlghncxa03w 07-08-29 16:40:40 EST EAGLE5 37.6.0
The following features have been permanently enabled:
Feature Name          Partnum  Status  Quantity
IPGWx Signaling TPS   893012805 on      2000
HC-MIM SLK Capacity   893012707 on      64
VFLEX                 893016701 on      ----
E5-SM4G Throughput Cap 893019101 on      ----

;
```

- If the V-Flex feature is not enabled or turned on, go to [Enabling V-Flex, Setting STP Options, and Turning On V-Flex](#) on page 59 to enable and turn on the V-Flex feature. Go to [Step 3](#) on page 75.
  - If the V-Flex feature is enabled and turned on, go to [Step 3](#) on page 75.
3. Change the service selector, using the `chg-srvsel` command.

```
chg-srvsel:gtin=4:tt=4:np=e214:nai=natl:ssn=34:nsnp=none:nsnai=none:nserv=vflex
```

**Note:** If the SNP, or SNAI parameter values are shown as dashes in the `rtrv-srvsel` output, these parameters cannot be specified with the `chg-srvsel` command. If the `gtii/gtin/gtin24` parameter value is 2, the `np`, `nai`, `npv`, and `naiv` parameters cannot be specified with the `chg-srvsel` command.

If the `gtii/gtin/gtin24` parameter value is 4, either the `np` and `nai`, or the `npv` and `naiv` parameters must be specified with the `chg-srvsel` command. The `np` and `nai` parameters can be specified in place of the `npv` and `naiv` parameters, and the `npv` and `naiv` parameters can be specified in place of the `np` and `naiv` parameters as long as parameter values be specified correspond to

the values shown in the `rtrv-srvsel` output. Refer to the `chg-srvsel` command description in the *Commands Manual*.

4. Verify the changes by entering the `rtrv-srvsel` command with the `serv=vflex` parameter and the values for the other parameter that were used in [Step 3](#) on page 75.

```
rtrv-srvsel:gtin=4:tt=4:np=e214:nai=natl:ssn=34:serv=vflex
```

```
rlghncxa03w 07-06-28 14:42:38 GMT EAGLE 37.6.0

GTIN  TT  NP      NAI  SSN  SNP  SNAI  SERV
4      4    e214   natl  34   ---  ---   vflex

SRV SELECTOR table is (6 of 20992) 1 % full

;
```

5. Back up the changes using the `chg-db:action=backup:dest=fixed` command.

The following messages appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED): MASP A - Backup starts on active MASP.
BACKUP (FIXED): MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED): MASP A - Backup starts on standby MASP.
BACKUP (FIXED): MASP A - Backup on standby MASP to fixed disk complete.
```

## Provisioning the V-Flex Options

The V-Flex options indicate the contents and required processing of types of information in the MSU.

- The destination routing address (`dra`) can contain the routing number, the routing number + dialed number, or the country code + routing number + dialed number.
- The nature of address indicator can be specified as a mnemonic (`dranai`) or an explicit value to indicate a subscriber number, a national significant number, an international number, a network specific number, or an unknown type of number.
- The numbering plan can be specified as a mnemonic (`dranp`) or an explicit value (`dranpv`) to indicate an ISDN/telephony numbering plan, a data numbering plan, or a telex numbering plan.
- If the network query only option is set to on, the Call Decision table is searched, after RTDB lookup, for the specified network entity type: a Voice Mail Server ID, a signaling point routing number, or a generic routing number (the routing number provided by the RTDB lookup).

The default value for this parameter is `off`.

The V-Flex feature must be turned on before this procedure can be completed. See [Enabling V-Flex, Setting STP Options, and Turning On V-Flex](#) on page 59.

1. Verify that the V-Flex feature is enabled and turned on, by entering the `rtrv-ctrl-feat` command. If the V-Flex feature is enabled and turned on, the status of the VFLEX entry is on.

```
rlghncxa03w 07-08-29 16:40:40 EST EAGLE5 37.6.0
The following features have been permanently enabled:
Feature Name           Partnum   Status   Quantity
IPGWx Signaling TPS    893012805 on        2000
HC-MIM SLK Capacity    893012707 on         64
VFLEX                  893016701 on         ----
E5-SM4G Throughput Cap 893019101 on         ----
;
```

- If the V-Flex feature is not enabled or turned on, go to [Enabling V-Flex, Setting STP Options, and Turning On V-Flex](#) on page 59 to enable and turn on the V-Flex feature. Go to [Step 2](#) on page 77.
  - If the V-Flex feature is enabled and turned on, go to [Step 2](#) on page 77.
2. Display the status of the V-Flex options, using the `rtrv-vflx-opts` command.

```
tekelecstp 07-05-04 07:53:46 EST EAGLE 37.6.0

VFLEX OPTIONS
-----
DRANPV      = 0
DRANAIV     = 0
DRA         = RN
NEQUERYONLY = OFF
NETYPE      = VMSID
;
```

3. Change the V-Flex options to the desired settings, by entering the `chg-vflx-opts` command with at least one of the V-Flex option parameters specified. The `netqueryonly` and `netype` parameters must be specified together in the command if the network query only option is used.

```
chg-vflx-opts:dranai=<nai>;dranp=<np>;dra=<dra>
```

4. Verify the changes, by entering the `rtrv-vflx-opts` command.

```
tekelecstp 07-05-04 07:53:46 EST EAGLE 37.6.0

VFLEX OPTIONS
-----
DRANPV      = 0
DRANAIV     = 0
DRA         = RNDN
NEQUERYONLY = OFF
NETYPE      = VMSID
;
```

5. Back up the changes, using the `chg-db:action=backup:dest=fixed` command.

These messages appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

## Provisioning HOMERN Entries

The `ent-homern` command is used to provision the prefix RNs in the HOMERN table.

The matching RN is removed in the incoming message as part of the conditioning process.

Any deleted HomeRN digits are omitted from the DN digits encoded in a Connect:DRA parameter.

After HomeRN deletion, MSISDN with MSISDN\_NAI in subscriber format are converted to international format by prepending the STPOPTS defcc value and the STPOPTS :defndc value.

After HomeRN deletion, MSISDN with MSISDN\_NAI in national format shall be converted to international format by prepending STPOPTS defcc value.

1. Display the HOMERN table entries, by entering the `rtrv-homern` command.
2. Enter the home routing number prefixes that will be used for V-Flex. Use the following command for each prefix:

```
ent-homern:rn=<routing number>
```

3. Verify the changes by entering the `rtrv-homern` command.

```
rlghncxa03w 03-03-28 08:50:12 EST EAGLE 31.3.0
RN
-----
216780909087654
76345098
abc
abc1234
c10234567
cabade
HOMERN table is (6 of 100) 6% full
;
```

4. Back up the changes, using the `chg-db:action=backup:dest=fixed` command.

These messages appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

## Provisioning Voice Mail Prefix Entries

A list of up to 100 Voice Mail prefixes can be provisioned, that can be searched against incoming CdPN digits to determine if a direct-dial VM deposit is required.

1. Verify that the V-Flex feature is enabled and turned on, by entering the `rtrv-ctrl-feat` command. If the V-Flex feature is enabled and turned on, the status of the VFLEX entry is on.

```
rlghncxa03w 07-08-29 16:40:40 EST EAGLE5 37.6.0
The following features have been permanently enabled:
Feature Name          Partnum  Status  Quantity
IPGWx Signaling TPS   893012805 on       2000
HC-MIM SLK Capacity   893012707 on        64
```

```
VFLEX                893016701  on      ----
E5-SM4G Throughput Cap 893019101  on      ----
;
```

- If the V-Flex feature is not enabled or turned on, go to [Enabling V-Flex, Setting STP Options, and Turning On V-Flex](#) on page 59 to enable and turn on the V-Flex feature. Go to [Step 2](#) on page 79.
  - If the V-Flex feature is enabled and turned on, go to [Step 2](#) on page 79.
2. Display the Common Screening List table entries, by entering the `rtrv-csl` command.
  3. Enter the Voice Mail prefix digit strings that will be used for V-Flex. Enter the following for each prefix:  
`ent-csl:feature="VFLEX":dn=<digit string>`

4. Verify the changes by entering the `rtrv-csl:feature="VFLEX"` command.

```
tekelecstp 07-08-23 17:30:17 EST EAGLE 37.6.0
VFLEX
VM Prefix List
DS
-----
12
123
12345
123456789abcdef
VM Prefix List table is (4 of 100) 4% full
;
```

5. Back up the changes, using the `chg-db:action=backup:dest=fixed` command. These messages appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

## Provisioning Voice Mail Routing Numbers

Each VM Routing Number is 1-15 hexadecimal digits and has a VM Routing Number Name. A VM Routing Number Name can be assigned to each of 10 VMRN indices associated with a VMSID. See [Provisioning Voice Mail Server ID Entries](#) on page 80 on page 4-41.

For each VM Routing Number, a reference count is maintained in the database. When a VMSID entry refers to a VM RN entry, the reference count of that VM Routing Number is incremented by 1 in the database. When a VM RN reference to a VMSID entry is removed, the reference count is decremented by 1 in the database. A VM RN entry can be deleted only when the reference count is zero for that VM RN.

1. Verify that the V-Flex feature is enabled and turned on, by entering the `rtrv-ctrl-feat` command. If the V-Flex feature is enabled and turned on, the status of the VFLEX entry is on.

```
rlghncxa03w 07-08-29 16:40:40 EST EAGLE5 37.6.0
The following features have been permanently enabled:
Feature Name          Partnum    Status    Quantity
IPGWx Signaling TPS   893012805  on        2000
HC-MIM SLK Capacity   893012707  on         64
```

```

VFLEX                893016701  on      ----
E5-SM4G Throughput Cap 893019101  on      ----
;

```

- If the V-Flex feature is not enabled or turned on, go to [Enabling V-Flex, Setting STP Options, and Turning On V-Flex](#) on page 59 to enable and turn on the V-Flex feature. Go to [Step 2](#) on page 80.
  - If the V-Flex feature is enabled and turned on, go to [Step 2](#) on page 80.
2. Display the voice mail routing numbers, by entering the `rtrv-vflx-rn` command.
  3. Enter the Voice Mail routing numbers that will be used for V-Flex. Enter the following for each routing number:  
`ENT-VFLX-RN:RNNAME=<RN Name>:RN=<Routing Number digits>`

4. Verify the changes by entering the `rtrv-vflx-rn` command.

```

tekelecstp 07-06-29 15:07:01 EST EAGLE 37.6.0
RN Name Routing Number
-----
rn01 123456789abcd01
rn02 123456789abcd02
rn03 123456789abcd03
rn04 123456789abcd04
rn05 123456789abcd05
rn06 123456789abcd06
rn07 123456789abcd07
rn08 123456789abcd08
rn09 123456789abcd09
rn10 123456789abcd0A
rn11 123456789abcd0B
rn12 123456789abcd0C
rn13 123456789abcd0D
rn14 123456789abcd0E
rn15 123456789abcd0F
. .
. .
. .
. .
rn10000 100000000abcdef
VFLEX Routing Number table is (10000 of 10000) 100% full.
;

```

5. Back up the changes, using the `chg-db:action=backup:dest=fixed` command.  
These messages appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```

BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.

```

## Provisioning Voice Mail Server ID Entries

Up to 10 Voice Mail Routing Number Names (VM RN Names) in the VFLXVID table provide a correlation between the VMSIDs associated to the subscribers from the EPAP, and a list of call-related VMRN indices and VM Routing numbers to be used by the EAGLE 5 ISS in the IDP

response being sent to the MSC. Up to 1000 VMSIDs can be provisioned, including the default VMSID.

Each VM RN name is assigned to a Routing Number Index (0-9). The Routing Number Indices are used in the Call Decision entries to identify a Routing Number associated with a VMSID.

**Note:** It is up to the user to interpret what each index means. V-Flex does not interpret the indices in any way.

V-Flex VMSIDs are provisioned on EAGLE 5 ISS independently of the VMSIDs that are provisioned in the EPAP database. The EAGLE 5 ISS does not verify whether a particular EAGLE 5 ISS VMSID is already provisioned in the EPAP database. A default VMSID can be provisioned in the VFLXVID table:

- If no specific MSISDN is found for a particular IDP
- If a specific MSISDN is found with no VMSID
- If a specific MSISDN is found with a VMSID in the RTDB, but there is no matching VMSID provisioned in the VFLXVID table.
- If a VMRN index match is found in the Call Decision Table, but there is no corresponding VMRN index provisioned in specific MSISDN's VMSID.

For each Routing Number, a reference count is maintained in the database. Whenever a VMSID entry refers to a Routing Number, the reference count of that RN will be incremented by 1 in the database. Whenever a VMSID reference to a Routing Number is removed, the reference count of that RN will be decremented by 1 in the database. A Routing Number can be deleted only when the reference count is zero for that Routing Number.

1. Verify that the V-Flex feature is enabled and turned on, by entering the `rtrv-ctrl-feat` command. If the V-Flex feature is enabled and turned on, the status of the VFLEX entry is on.

```
rlghncxa03w 07-08-29 16:40:40 EST EAGLE5 37.6.0
The following features have been permanently enabled:
Feature Name          Partnum      Status  Quantity
IPGWx Signaling TPS   893012805   on      2000
HC-MIM SLK Capacity   893012707   on        64
VFLEX                 893016701   on       ----
E5-SM4G Throughput Cap 893019101   on       ----
;
```

- If the V-Flex feature is not enabled or turned on, go to [Enabling V-Flex, Setting STP Options, and Turning On V-Flex](#) on page 59 to enable and turn on the V-Flex feature. Go to [Step 2](#) on page 81.
- If the V-Flex feature is enabled and turned on, go to [Step 2](#) on page 81.

2. Display the Voice Mail Server IDs, by entering the `rtrv-vflx-vmsid` command.
3. Enter the Voice Mail routing numbers that will be used for V-Flex. Enter the following for each VMSID:

```
ENT-VFLX-VMSID: ID=<VMSID>: IDX0=<RN Name>: IDX1=<RN Name>: IDX2=<RN
Name>: IDX3=<RN Name>: IDX4=<RN Name>: IDX5=<RN Name>: IDX6=<RN
Name>: IDX7=<RN Name>: IDX8=<RN Name>: IDX9=<RN Name>
```

4. Verify the changes by entering the `rtrv-vflx-vmsid` command.

```
rlghncxa03w 07-02-07 11:11:28 EST EAGLE 37.6.0
VMS ID          IDX0          IDX1          IDX2          IDX3          IDX4          IDX5
-----
123456789abcdef RN000000    RN000001    RN000002    RN000003    RN000004    RN000005
```

```

          -----
          |         |         |         |         |
          |   IDX6   |   IDX7   |   IDX8   |   IDX9   |
          |-----|-----|-----|-----|
          | RN000006 | RN000007 | RN000008 | RN000009 |
          |         |         |         |         |
VMS ID   |         |         |         |         |
-----|-----|-----|-----|
123456789012abc | RN000010 | RN000011 | RN000012 | RN000013 | RN000014 | RN000015 |
          |         |         |         |         |
          |   IDX6   |   IDX7   |   IDX8   |   IDX9   |
          |-----|-----|-----|-----|
          | RN000016 | RN000017 | RN000018 | RN000019 |
          |         |         |         |         |
VMS ID   |         |         |         |         |
-----|-----|-----|-----|
a23456789012abc | RN000020 | RN000021 | RN000022 | RN000023 | RN000024 | RN000025 |
          |         |         |         |         |
          |   IDX6   |   IDX7   |   IDX8   |   IDX9   |
          |-----|-----|-----|-----|
          | RN000026 | RN000027 | RN000028 | RN000029 |
          |         |         |         |         |
VFLEX VMSID table is ( 3 of 1000) 1% full.
;

```

5. Back up the changes, using the `chg-db:action=backup:dest=fixed` command.

These messages appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```

BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.

```

## Provisioning Call Decision Table Entries

A maximum of 4,950 Call Decision entries can be provisioned in the VFLXCD table. The key in each table entry is:

- Voice Mail Number/Voice Mail Prefix (1-15 hexadecimal digits)
- INAP/CAP Redirection Indicator (redirected, not redirected)
- INAP/CAP Bearer Capability
- MSISDN/RN status indicator in the database (Found, Not Found, Does not matter -\*)

Each Call Decision table entry also contains a VM Routing Number Index (0-9). The VM RN index is used in the VMSID for a specific MSISDN, or in the default VMSID if a specific VMSID is not provisioned.

1. Verify that the V-Flex feature is enabled and turned on, by entering the `rtrv-ctrl-feat` command. If the V-Flex feature is enabled and turned on, the status of the VFLEX entry is on.

```
rlghncxa03w 07-08-29 16:40:40 EST EAGLE5 37.6.0
The following features have been permanently enabled:
Feature Name          Partnum    Status    Quantity
IPGWx Signaling TPS   893012805 on        2000
HC-MIM SLK Capacity   893012707 on         64
VFLEX                 893016701 on         ----
E5-SM4G Throughput Cap 893019101 on         ----
;
```

- If the V-Flex feature is not enabled or turned on, go to [Enabling V-Flex, Setting STP Options, and Turning On V-Flex](#) on page 59 to enable and turn on the V-Flex feature. Go to [Step 2](#) on page 83.
  - If the V-Flex feature is enabled and turned on, go to [Step 2](#) on page 83.
2. Display the Call Decision entries, by entering the `rtrv-vflx-cd` command.
  3. Enter the Call Decision entries that will be used for V-Flex. Enter the following for each entry:
 

```
ent-vflx-cd:dnstat=<dn status>:rdi=<rdi>:bcap=<bcap>:vmdig=<vm
digits>:rnidx=<rn index>:cdn=<call decision entry name>
```
  4. Verify the changes by entering the `rtrv-vflx-cd` command.

```
tekelecstp 07-08-01 09:36:55 EST EAGLE 37.6.0

RDI      DN Status    BCAP    VM Number/Prefix    VMRN Index    CD Name
---      -
DIR      NFND         0       1                    9             c100
DIR      NFND         0       12                   9             c101
DIR      NFND         0       123                  9             c102
DIR      NFND         0       1234                 9             c103
DIR      FND         0       1                    9             c200
DIR      *           1       123                  9             c201
DIR      *           2       2345678              9             c203
DIR      *           3       456789a              9             c204
DIR      *           4       56789ab              9             c205
REDIR    *           1       123456789abcdef     9             c202

VFLEX Call Decision table is (10 of 4950) 1% full.
;
```

5. Back up the changes, using the `chg-db:action=backup:dest=fixed` command. These messages appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

## Activating the V-Flex Subsystem

The procedure in this section explains how to activate the V-Flex subsystem.

V-Flex operates as a local subsystem in the EAGLE 5 ISS.

When all configuration is complete for the V-Flex feature, the V-Flex subsystem application must be taken online and the local subsystem must be activated to allow it to begin operation.

When the local subsystem operating state is Inhibited, the `chg-ss-appl:appl=` command can be used to specify the value `online` or the value `offline` to control the persistent setting for the local subsystem. The `rtrv-ss-appl` command always displays the online or offline provisioned value. When the first Service Module card is loaded, this state tells whether the subsystem should be considered allowed (online) or inhibited (offline). This is a database state. If the command is accepted, then the change is made to the tables and can be read after an `init-sys` command is entered to initialize the system.

When the Service Module cards are in-service and the subsystem application is online, the `alw/inh-map-ss` commands can be used to change the dynamic operating state of the local subsystem. The `inh-map-ss` command does not necessarily force a state change, because it can fail if the mate does not send SOG. The `force=yes` parameter must be specified to bypass the SOR/SOG exchange and inhibit immediately. (There is no `rtrv-map-ss` command.)

The procedures in [Changing the State of a Subsystem Application](#) on page 86 explain how to take a local subsystem online and offline.

**Table 10: Subsystem Allow/Inhibit**

Command \ Subsystem State	Offline	Online
<code>alw-map-ss</code>	Command is rejected.	Attempts to make the local subsystem active.
<code>inh-map-ss</code>	Command accepted, but no action because offline implies inhibited.	Attempts to inhibit the local subsystem. Use of the <code>force=yes</code> parameter bypasses the SOR/SOG exchange and inhibits immediately.
<code>chg-ss-appl :appl=vflex :nstat=online</code>	Command is rejected, because the subsystem must be online to be in the allowed state.	Changes local subsystem database status to online.
<code>chg-ss-appl :appl=vflex :nstat=offline</code>	Command is rejected because the subsystem must be inhibited to go offline.	Changes local subsystem database status to offline.

1. Display the status of the V-Flex subsystem application, by entering the `rtrv-ss-appl` command.

```
tekelecstp 07-07-25 08:02:22 EST EAGLE 37.6.0
APPL SSN STAT
VFLEX 11 offline

SS-APPL TABLE IS 25% FULL (1 OF 4)
;
```

2. Change the V-Flex subsystem to status to online.  
`chg-ss-appl:appl=vflex:nstat=online`
3. Enter the command to allow the V-Flex subsystem to begin operation.

```
alw-map-ss:ssn=<V-flex ssn>
```

```
integrat40 00-05-24 10:37:22 EST EAGLE5 37.6.0
Allow map subsystem command sent to all SCCP cards.
Command Completed.
```

```
;
```

4. Display the operating status of the V-Flex subsystem, by entering the `rept-stat-sccp` command.

```
tklcl1170501 07-08-18 10:16:24 EST EAGLE5 37.6.0
SCCP SUBSYSTEM REPORT IS-NR Active -----
  SCCP ALARM STATUS = No Alarms
VFLEX SUBSYSTEM REPORT IS-NR Active -----
  VFLEX: SSN STATUS = Allowed MATE SSN STATUS = -----
  VFLEX ALARM STATUS = No Alarms
GFLEX SERVICE REPORT IS-NR Active -----
  GFLEX ALARM STATUS = No Alarms
GPORT SERVICE REPORT IS-NR Active -----
  GPORT ALARM STATUS = No Alarms

SCCP Cards Configured=25 Cards IS-NR=25
System Daily Peak SCCP Load 15639 TPS 06-09-18 06:14:24
System Overall Peak SCCP Load 21062 TPS 06-09-15 14:24:38
System Total SCCP Capacity 21250 TPS (21250 max SCCP Capacity)
System SCCP Capacity Calc. Method (N)
System TPS Alarm Threshold 17000 TPS ( 80% System N SCCP
Capacity)

CARD VERSION PST SST AST MSU CPU
USAGE USAGE
-----
1217 126-030-000 IS-NR Active ----- 100% 45%
1317 126-030-000 IS-NR Active ----- 100% 51%
2217 126-030-000 IS-NR Active ----- 100% 42%
3201 126-030-000 IS-NR Active ----- 54% 25%
3203 126-030-000 IS-NR Active ----- 55% 25%
3205 126-030-000 IS-NR Active ----- 57% 27%
3207 126-030-000 IS-NR Active ----- 69% 29%
3211 126-030-000 IS-NR Active ----- 85% 35%
3213 126-030-000 IS-NR Active ----- 94% 37%
3215 126-030-000 IS-NR Active ----- 86% 35%
3217 126-030-000 IS-NR Active ----- 74% 31%
4217 126-030-000 IS-NR Active ----- 64% 28%
4317 126-030-000 IS-NR Active ----- 100% 41%
5117 126-030-000 IS-NR Active ----- 100% 40%
5317 126-030-000 IS-NR Active ----- 56% 25%
6101 P 126-030-000 IS-NR Active ----- 57% 32%
6103 126-030-000 IS-NR Active ----- 63% 27%
6105 126-030-000 IS-NR Active ----- 69% 37%
6107 126-030-000 IS-NR Active ----- 66% 29%
6111 126-030-000 IS-NR Active ----- 59% 27%
6113 126-030-000 IS-NR Active ----- 55% 34%
6115 126-030-000 IS-NR Active ----- 55% 26%
6117 126-030-000 IS-NR Active ----- 54% 26%
1105 126-030-000 IS-NR Active ----- 55% 26%
1107 126-030-000 IS-NR Active ----- 55% 26%
-----
SCCP Service Average MSU Capacity = 71% Average CPU Capacity = 32%

AVERAGE CPU USAGE PER SERVICE:
GTT = 1% GFLEX = 4% GPORT = 0%
VFLEX = 2%

TOTAL SERVICE STATISTICS:
```

	SERVICE	SUCCESS	ERRORS	FAIL RATIO	REROUTE\ WARNINGS	FORWARD TO GTT	
TOTAL	GTT:	3510	15	0%	-	-	-
3525	GFLEX:	100043	0	0%	0	0	100043
	GPORT:	312203	0	0%	15	1879	314097
23157	VFLEX:	23157	0	0%	-	-	-
Command Completed.							
;							

## Changing the State of a Subsystem Application

The procedures in this section are used to set the state of an existing subsystem application to either online or offline.

The online/offline status of the subsystem application is shown in the STAT field of the `rtrv-ss-appl` command output.

The `rept-stat-sccp` command displays the operating state (in or out of service) of the subsystem.

If the subsystem application is to be taken online, the subsystem application must be offline.

When the subsystem is taken online (regardless of how the subsystem was taken offline), the EAGLE 5 ISS sends SNR/SSA. A UAM is generated, indicating that the subsystem is ALLOWED.

If the subsystem application is to be taken offline, the subsystem application must be online. The subsystem must be taken out of service (OOS-MT-DSBLD) with the `inh-map-ss` command before it can be taken offline.

A subsystem application can be taken offline using coordinated state change, or forced offline without using coordinated state change.

When the `inh-map-ss` command is entered for the subsystem, a coordinated shutdown is attempted. If the coordinated shutdown fails, a UIM is output indicating the shutdown failed. If the force parameter is specified, the subsystem is forced to shut down; a coordinated shutdown is not performed.

For coordinated state change, SCMG sends an SOR message to the mated subsystem and will start a Tcoord timer (30 seconds). If SCMG receives an SOG message from the mated subsystem before the Tcoord timer expires, SCMG will broadcast SSPs to the concerned point code group, send SBR / SSP, and take the subsystem offline. A UAM is generated, indicating that the subsystem is PROHIBITED. If the SOG is not received before Tcoord expires, then the inhibit request is denied and a UIM is generated.

When the subsystem is taken offline without coordinated state change, the EAGLE 5 ISS sends SBR/SSPs. A UAM is generated, indicating that the subsystem is PROHIBITED.

When the EAGLE 5 ISS receives an SOR message from its mated subsystem, it will reply with an SOG message if both of these conditions are met:

- The local subsystem is available

- The total load on the DSM subsystem is less than 45% of its capacity

If either of these conditions is not met, the EAGLE 5 ISS will not reply to the SOR message.

### Taking the Subsystem Application Offline

Use the procedure in this section to take a subsystem application offline.

1. Verify the state of the subsystem application - online or offline, by entering the rtrv-ss-appl command.

```
tekelecstp 07-07-25 08:02:22 EST EAGLE 37.6.0
APPL  SSN  STAT
VFLEX 11  online

SS-APPL TABLE IS 25% FULL (1 OF 4)
;
```

If the V-Flex subsystem is offline, this procedure does not need to be performed.

2. Display the operating status of the subsystem by entering the rept-stat-sccp command.

```
tklc1170501 07-08-18 10:16:24 EST EAGLE5 37.6.0
SCCP SUBSYSTEM REPORT IS-NR Active -----
SCCP ALARM STATUS = No Alarms
VFLEX SUBSYSTEM REPORT IS-NR Active -----
VFLEX: SSN STATUS = Allowed MATE SSN STATUS = -----
VFLEX ALARM STATUS = No Alarms
GFLEX SERVICE REPORT IS-NR Active -----
GFLEX ALARM STATUS = No Alarms
GPORT SERVICE REPORT IS-NR Active -----
GPORT ALARM STATUS = No Alarms

SCCP Cards Configured=25 Cards IS-NR=25
System Daily Peak SCCP Load 15639 TPS 06-09-18 06:14:24
System Overall Peak SCCP Load 21062 TPS 06-09-15 14:24:38
System Total SCCP Capacity 21250 TPS (21250 max SCCP Capacity)
System SCCP Capacity Calc. Method (N)
System TPS Alarm Threshold 17000 TPS ( 80% System N SCCP
Capacity)

CARD VERSION PST SST AST MSU CPU
USAGE USAGE
-----
1217 126-030-000 IS-NR Active ----- 100% 45%
1317 126-030-000 IS-NR Active ----- 100% 51%
2217 126-030-000 IS-NR Active ----- 100% 42%
3201 126-030-000 IS-NR Active ----- 54% 25%
3203 126-030-000 IS-NR Active ----- 55% 25%
3205 126-030-000 IS-NR Active ----- 57% 27%
3207 126-030-000 IS-NR Active ----- 69% 29%
3211 126-030-000 IS-NR Active ----- 85% 35%
3213 126-030-000 IS-NR Active ----- 94% 37%
3215 126-030-000 IS-NR Active ----- 86% 35%
3217 126-030-000 IS-NR Active ----- 74% 31%
4217 126-030-000 IS-NR Active ----- 64% 28%
4317 126-030-000 IS-NR Active ----- 100% 41%
5117 126-030-000 IS-NR Active ----- 100% 40%
5317 126-030-000 IS-NR Active ----- 56% 25%
6101 P 126-030-000 IS-NR Active ----- 57% 32%
6103 126-030-000 IS-NR Active ----- 63% 27%
6105 126-030-000 IS-NR Active ----- 69% 37%
6107 126-030-000 IS-NR Active ----- 66% 29%
6111 126-030-000 IS-NR Active ----- 59% 27%
```

```

6113 126-030-000 IS-NR Active ----- 55% 34%
6115 126-030-000 IS-NR Active ----- 55% 26%
6117 126-030-000 IS-NR Active ----- 54% 26%
1105 126-030-000 IS-NR Active ----- 55% 26%
1107 126-030-000 IS-NR Active ----- 55% 26%
-----
SCCP Service Average MSU Capacity = 71% Average CPU Capacity = 32%

AVERAGE CPU USAGE PER SERVICE:
  GTT = 1% GFLEX = 4% GPORT = 0%
  VFLEX = 2%

TOTAL SERVICE STATISTICS:

      SERVICE      SUCCESS      ERRORS      FAIL      REROUTE\      FORWARD
TOTAL      GTT:           3510         15         0%         -           -
3525      GFLEX:          100043        0         0%         0           0 100043
          GPORT:          312203        0         0%         15          1879 314097
          VFLEX:          23157         0         0%         -           -
23157

Command Completed.
;

```

- Place the subsystem out of service. Specify the subsystem number displayed in the output in [Step 1](#) on page 87.

```
inh-map-ss:ssn=100
```

```

rlghncxa03w 09-05-28 14:42:38 GMT EAGLE 41.0.0
Inhibit map subsystem command sent to all SCCP cards.
Command Completed.
;

```

- Verify that the subsystem is out of service, by entering the `rept-stat-sccp` command.

```

tklcl170501 07-08-18 10:16:24 EST EAGLE5 37.6.0
SCCP SUBSYSTEM REPORT IS-NR Active -----
  SCCP ALARM STATUS = No Alarms
VFLEX SUBSYSTEM REPORT OOS-MT-DSBLD Active -----
  VFLEX: SSN STATUS = Inhibited MATE SSN STATUS = -----
  VFLEX ALARM STATUS = No Alarms
GFLEX SERVICE REPORT IS-NR Active -----
  GFLEX ALARM STATUS = No Alarms
GPORT SERVICE REPORT IS-NR Active -----
  GPORT ALARM STATUS = No Alarms

SCCP Cards Configured=25 Cards IS-NR=25
System Daily Peak SCCP Load 15639 TPS 06-09-18 06:14:24
System Overall Peak SCCP Load 21062 TPS 06-09-15 14:24:38
System Total SCCP Capacity 21250 TPS (21250 max SCCP Capacity)
System SCCP Capacity Calc. Method (N)
System TPS Alarm Threshold 17000 TPS ( 80% System N SCCP
Capacity)

CARD  VERSION      PST      SST      AST      MSU  CPU
-----  -----  -----  -----  -----  ----  ---
1217  126-030-000  IS-NR    Active  -----  100%  45%
1317  126-030-000  IS-NR    Active  -----  100%  51%
2217  126-030-000  IS-NR    Active  -----  100%  42%

```

```

3201 126-030-000 IS-NR Active ----- 54% 25%
3203 126-030-000 IS-NR Active ----- 55% 25%
3205 126-030-000 IS-NR Active ----- 57% 27%
3207 126-030-000 IS-NR Active ----- 69% 29%
3211 126-030-000 IS-NR Active ----- 85% 35%
3213 126-030-000 IS-NR Active ----- 94% 37%
3215 126-030-000 IS-NR Active ----- 86% 35%
3217 126-030-000 IS-NR Active ----- 74% 31%
4217 126-030-000 IS-NR Active ----- 64% 28%
4317 126-030-000 IS-NR Active ----- 100% 41%
5117 126-030-000 IS-NR Active ----- 100% 40%
5317 126-030-000 IS-NR Active ----- 56% 25%
6101 P 126-030-000 IS-NR Active ----- 57% 32%
6103 126-030-000 IS-NR Active ----- 63% 27%
6105 126-030-000 IS-NR Active ----- 69% 37%
6107 126-030-000 IS-NR Active ----- 66% 29%
6111 126-030-000 IS-NR Active ----- 59% 27%
6113 126-030-000 IS-NR Active ----- 55% 34%
6115 126-030-000 IS-NR Active ----- 55% 26%
6117 126-030-000 IS-NR Active ----- 54% 26%
1105 126-030-000 IS-NR Active ----- 55% 26%
1107 126-030-000 IS-NR Active ----- 55% 26%
-----
SCCP Service Average MSU Capacity = 71% Average CPU Capacity = 32%

AVERAGE CPU USAGE PER SERVICE:
GTT = 1% GFLEX = 4% GPORT = 0%
VFLEX = 2%

TOTAL SERVICE STATISTICS:
SERVICE SUCCESS ERRORS FAIL REROUTE\ FORWARD
RATIO WARNINGS TO GTT
TOTAL
3525 GTT: 3510 15 0% - -
GFLEX: 100043 0 0% 0 0 100043
GPORT: 312203 0 0% 15 1879 314097
23157 VFLEX: 23157 0 0% - -

Command Completed.
;

```

5. Take the subsystem offline. Enter the `chg-ss-appl` command with the `nstat=offline` parameter.  
`chg-ss-appl:appl=vflex:nstat=offline`
6. Verify the changes by entering the `rtrv-ss-appl` command.

```

tekelecstp 07-07-25 08:02:22 EST EAGLE 37.6.0
APPL SSN STAT
VFLEX 11 offline

SS-APPL TABLE IS 25% FULL (1 OF 4)
;

```

7. Back up the new changes using the `chg-db:action=backup:dest=fixed` command.  
 The following messages appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```

BACKUP (FIXED): MASP A - Backup starts on active MASP.
BACKUP (FIXED): MASP A - Backup on active MASP to fixed disk complete.

```

```
BACKUP (FIXED): MASP A - Backup starts on standby MASP.
BACKUP (FIXED): MASP A - Backup on standby MASP to fixed disk complete.
```

## Taking the Subsystem Application Online

Use the procedure in this section to take the subsystem application online.

1. Verify the state of the subsystem application - online or offline, by entering the `rtrv-ss-appl` command.

```
tekelecstp 07-07-25 08:02:22 EST EAGLE 37.6.0
APPL  SSN  STAT
VFLEX 11  offline

SS-APPL TABLE IS 25% FULL (1 OF 4)
;
```

If the V-Flex subsystem is online, this procedure does not need to be performed.

2. Display the operating status of the subsystem by entering the `rept-stat-sccp` command.

```
tklcl170501 07-08-18 10:16:24 EST EAGLE5 37.6.0
SCCP SUBSYSTEM REPORT IS-NR Active -----
SCCP ALARM STATUS = No Alarms
VFLEX SUBSYSTEM REPORT OOS-MT-DSBLD Active -----
VFLEX: SSN STATUS = Inhibited MATE SSN STATUS = -----
VFLEX ALARM STATUS = No Alarms
GFLEX SERVICE REPORT IS-NR Active -----
GFLEX ALARM STATUS = No Alarms
GPORT SERVICE REPORT IS-NR Active -----
GPORT ALARM STATUS = No Alarms

SCCP Cards Configured=25 Cards IS-NR=25
System Daily Peak SCCP Load 15639 TPS 06-09-18 06:14:24
System Overall Peak SCCP Load 21062 TPS 06-09-15 14:24:38
System Total SCCP Capacity 21250 TPS (21250 max SCCP Capacity)
System SCCP Capacity Calc. Method (N)
System TPS Alarm Threshold 17000 TPS ( 80% System N SCCP
Capacity)

CARD VERSION PST SST AST MSU CPU
USAG Usage USAG Usage
-----
1217 126-030-000 IS-NR Active ----- 100% 45%
1317 126-030-000 IS-NR Active ----- 100% 51%
2217 126-030-000 IS-NR Active ----- 100% 42%
3201 126-030-000 IS-NR Active ----- 54% 25%
3203 126-030-000 IS-NR Active ----- 55% 25%
3205 126-030-000 IS-NR Active ----- 57% 27%
3207 126-030-000 IS-NR Active ----- 69% 29%
3211 126-030-000 IS-NR Active ----- 85% 35%
3213 126-030-000 IS-NR Active ----- 94% 37%
3215 126-030-000 IS-NR Active ----- 86% 35%
3217 126-030-000 IS-NR Active ----- 74% 31%
4217 126-030-000 IS-NR Active ----- 64% 28%
4317 126-030-000 IS-NR Active ----- 100% 41%
5117 126-030-000 IS-NR Active ----- 100% 40%
5317 126-030-000 IS-NR Active ----- 56% 25%
6101 P 126-030-000 IS-NR Active ----- 57% 32%
6103 126-030-000 IS-NR Active ----- 63% 27%
6105 126-030-000 IS-NR Active ----- 69% 37%
6107 126-030-000 IS-NR Active ----- 66% 29%
6111 126-030-000 IS-NR Active ----- 59% 27%
```

```

6113 126-030-000 IS-NR      Active  -----  55%  34%
6115 126-030-000 IS-NR      Active  -----  55%  26%
6117 126-030-000 IS-NR      Active  -----  54%  26%
1105 126-030-000 IS-NR      Active  -----  55%  26%
1107 126-030-000 IS-NR      Active  -----  55%  26%
-----
SCCP Service Average MSU Capacity = 71%  Average CPU Capacity = 32%

AVERAGE CPU USAGE PER SERVICE:
GTT   = 1%  GFLEX = 4%  GPORT = 0%
VFLEX = 2%

TOTAL SERVICE STATISTICS:

      SERVICE      SUCCESS      ERRORS      FAIL      REROUTE\      FORWARD
TOTAL  SERVICE      SUCCESS      ERRORS      RATIO      WARNINGS      TO GTT
3525   GTT:          3510         15          0%         -             -
      GFLEX:       100043        0           0%         0             0  100043
      GPORT:       312203        0           0%         15            1879  314097
      VFLEX:       23157         0           0%         -             -
23157

      Command Completed.
;

```

- Take the subsystem application online. Enter the `chg-ss-appl` command with the `nstat=online` parameter.  
`chg-ss-appl:appl=vflex:nstat=online`
- Verify the changes by entering the `rtrv-ss-appl` command.

```

tekelecstp 07-07-25 08:02:22 EST  EAGLE 37.6.0
APPL  SSN  STAT
VFLEX 11  online

SS-APPL TABLE IS 25% FULL (1 OF 4)
;

```

- Back up the new changes using the `chg-db:action=backup:dest=fixed` command. The following messages appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```

BACKUP (FIXED): MASP A - Backup starts on active MASP.
BACKUP (FIXED): MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED): MASP A - Backup starts on standby MASP.
BACKUP (FIXED): MASP A - Backup on standby MASP to fixed disk complete.

```

## Activating the E5-SM4G Throughput Capacity Feature

The E5-SM4G Throughput Capacity feature provides up to 75,000 transactions per second when the maximum number of E5-SM4G cards are installed in the EAGLE 5 ISS and one or more EPAP-related features (such as V-Flex) are enabled and turned on.

The E5-SM4G Throughput Capacity feature must be enabled using the E5-SM4G Throughput Capacity feature part number 893019101 and the feature access key.

The feature access key is based on the feature part number and the serial number of the EAGLE 5 ISS, making the feature access key site-specific.

**Note:** The E5-SM4G Throughput Capacity feature must be purchased before you can receive the feature access key to use to enable the E5-SM4G Throughput Capacity feature. If you are not sure if you have purchased the E5-SM4G Throughput Capacity feature and received the feature access key, contact your Tekelec Sales Representative or Account Representative.

After the E5-SM4G Throughput Capacity feature is enabled and turned on, the E5-SM4G Throughput Capacity feature cannot be turned off. When the E5-SM4G Throughput Capacity feature is enabled, it is permanently enabled. The E5-SM4G Throughput Capacity feature cannot be temporarily enabled.

Before the E5-SM4G Throughput Capacity feature can be enabled, the following conditions must exist in the system:

- The E5-SM4G Throughput Capacity feature requires 25 E5-SM4G cards running the VSCCP application to be configured in the system. This feature increases the processing capacity of SCCP traffic for an EAGLE 5 ISS processing EPAP-based traffic to 75,000 transactions per second. If there are no E5-SM4G cards present in the EAGLE 5 ISS, they must be added before the E5-SM4G Throughput Capacity feature can be enabled and turned on. See [Adding a Service Module](#) on page 57.



#### CAUTION

**CAUTION:** Refer to the *Dimensioning Guide for EPAP Advanced DB Features Technical Reference* for important information on the dimensioning rules and the DSM database capacity requirements.

- HIPR cards must be installed in card locations 09 and 10 in all shelves in the system that contain E5-SM4G cards.
- The database must contain a valid and locked serial number for the EAGLE 5 ISS. The system is shipped with a serial number in the database, but the serial number is not locked. The serial number can be changed, if necessary, and locked after the system is on-site.
- The GTT feature must be turned on.

**Note:** The E5-SM4G Throughput Capacity feature cannot be enabled if the ansigflex STP Option is enabled.

After the E5-SM4G Throughput Capacity feature has been enabled, the E5-SM4G Throughput Capacity feature status must be set to on (the feature must be “turned on”).

1. Display the status of the features that are controlled by feature access keys. Enter the `rtrv-ctrl-feat` command.

```
rlghncxa03w 07-08-29 16:40:40 EST EAGLE5 37.6.0
The following features have been permanently enabled:
Feature Name          Partnum   Status   Quantity
IPGWx Signaling TPS   893012805 on        2000
HC-MIM SLK Capacity   893012707 on         64
VFLEX                 893016701 on         ----
E5-SM4G Throughput Cap 893019101 on         ----
;
```

- If the `rtrv-ctrl-feat` output shows that the E5-SM4G Throughput Capacity feature is enabled and its status is on, no further action is necessary.
- If the feature is enabled, and its status is off, skip [Step 2](#) on page 93 through [Step 6](#) on page 94, and go to step [Step 7](#) on page 94.

- If the `rtrv-ctrl-feat` output shows that the LNP feature is enabled, this procedure cannot be performed. The E5-SM4G Throughput Capacity feature cannot be enabled if the LNP feature is enabled.
  - If the E5-SM4G Throughput Capacity and LNP features are not enabled, continue with [Step 2](#) on page 93.
2. Verify that the GTT feature is on. Enter the `rtrv-feat` command. If the GTT feature is on, the GTT = on field appears in the command output.

```
rlghncxa03w 04-01-28 11:34:04 EST EAGLE 31.3.0
EAGLE FEATURE LIST

GTT      = on      GWS      = off     NRT      = off
X25G     = off     LAN      = off     CRMD     = off
SEAS     = off     LFS      = off     MTPRS    = off
FAN      = off     DSTN5000 = off     WNP      = off
CNCF     = off     TLNP     = off     SCCPCNV  = off
TCAPCNV  = off     IPISUP   = off     DYNRTK   = off
X252000  = off     PLNP     = off     E5IS     = off
NCR      = off     ITUMTPRS = off     SLSOCB   = off
EGTT     = off     VGTT     = off     MGTT     = off
MPC      = off     ITUDUPPC = off     GFLEX    = off
MEASPLAT = off     TSCSYNC  = off     E5IS     = off
;
```

**Note:** The `rtrv-feat` command output contains other fields that are not used by this procedure. To see all the fields displayed by the `rtrv-feat` command, refer to the `rtrv-feat` command description in the *Commands Manual*.

- If the GTT feature is on, shown by the entry GTT = on in the `rtrv-feat` command output, go to [Step 4](#) on page 93.
- If the GTT feature is off, shown by the entry GTT = off in the `rtrv-feat` command output, continue with [Step 3](#) on page 93.

**Note:** The GTT feature must be purchased before turning it on. If you are not sure whether you have purchased the GTT feature, contact your Tekelec Sales Representative or Account Representative.

After the Global Title Translation (GTT) feature has been turned on with the `chg-feat` command, it cannot be turned off.

3. Turn the GTT feature on, by entering the following command.  
`chg-feat:gtt=on`

Refer to the *Database Administration Manual - Global Title Translation* for more information about turning on and using the GTT feature.

4. Verify the number of E5-SM4G cards that are provisioned in the database using the `rept-stat-gpl:gpl=sccphc` command. This is an example of the possible output.

```
rlghncxa03w 07-05-01 11:40:26 GMT EAGLE5 37.0.0
GPL CARD RUNNING APPROVED TRIAL
SCCPHC 1201 126-002-000 126-002-000 126-003-000
SCCPHC 1203 126-002-000 126-002-000 126-003-000
SCCPHC 1207 126-002-000 126-002-000 126-003-000
SCCPHC 1213 126-002-000 126-002-000 126-003-000
SCCPHC 1215 126-002-000 126-002-000 126-003-000
SCCPHC 1305 126-002-000 126-002-000 126-003-000
SCCPHC 1313 126-002-000 126-002-000 126-003-000
SCCPHC 2103 126-002-000 126-002-000 126-003-000
Command Completed
```

- If the required number of E5-SM4G cards (25) are provisioned in the database, continue with [Step 5](#) on page 94.
  - If the required number of E5-SM4G cards are not provisioned in the database, go to [Adding a Service Module](#) on page 57 on page 4-5 to add the required number of E5-SM4G cards to the database. Then continue with [Step 5](#) on page 94.
5. Verify that the system serial number is correct and locked. Enter the `rtrv-serial-num` command to display the system serial number and the lock status.

- If the serial number is correct and locked, continue with [Step 6](#) on page 94.
- If the serial number shown in the output is not correct, enter the correct serial number into the database, using the `ent-serial-num` command without the lock parameter. Enter the `rtrv-serial-num` command again to verify that the correct serial number is entered.

```
ent-serial-num:serial=<system serial number>
```

```
rtrv-serial-num
```

- If the serial number is correct but is not locked, lock the serial number. Enter the `ent-serial-num` command, specifying the serial number shown in the `rtrv-serial-num` command output and the `lock=yes` parameter.

```
ent-serial-num:serial=<system serial number>:lock=yes
```

6. Enable the E5-SM4G Throughput Capacity feature with the permanent key by entering the `enable-ctrl-feat` command.

```
enable-ctrl-feat:partnum=893019101:fak=<E5-SM4G Throughput Capacity feature access key>
```

The values for the feature access key (the fak parameter) are provided by Tekelec. If you do not have the feature access key for the E5-SM4G Throughput Capacity feature, contact your Tekelec Sales Representative or Account Representative.

**Note:** If you do not want to turn the E5-SM4G Throughput Capacity feature on at this time, go to [Step 8](#) on page 94.

7. Turn the E5-SM4G Throughput Capacity feature on with the `chg-ctrl-feat` command, specifying the E5-SM4G Throughput Capacity feature part number used in [Step 1](#) on page 92 and the `status=on` parameter.

```
chg-ctrl-feat:partnum=893019101:status=on
```

After this feature is turned on, it cannot be turned off.

8. Verify the changes by entering the `rtrv-ctrl-feat` command with the E5-SM4G Throughput Capacity feature part number 893019101.

```
rlghncxa03w 07-08-29 16:40:40 EST EAGLE5 37.6.0
The following features have been permanently enabled:
Feature Name          Partnum   Status   Quantity
IPGWx Signaling TPS   893012805 on        2000
HC-MIM SLK Capacity   893012707 on         64
VFLEX                 893016701 on         ----
E5-SM4G Throughput Cap 893019101 on         ----
;
```

9. Back up the new changes using the `chg-db:action=backup:dest=fixed` command.

These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.  
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.  
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.  
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

## Configuring the Measurements Platform for V-Flex

The EAGLE 5 ISS can collect daily and hourly measurements for the V-Flex service. V-Flex measurements are collected only by the EAGLE 5 ISS Measurements Platform. UI measurements reports are not available for V-Flex.

See [V-Flex Measurements](#) on page 118 in this manual for information about measurements for V-Flex.

Refer to the procedures in the *Database Administration Manual - System Management* for configuring the Measurements Platform and the IPUI feature in the EAGLE 5 ISS.



# Chapter 5

## Maintenance and Measurements

---

### Topics:

- *Hardware Requirements.....98*
- *EPAP Status and Alarms.....98*
- *V-Flex Alarms.....99*
- *Migration System Status Reports.....107*
- *Code and Application Data Loading.....108*
- *V-Flex UIMs.....112*
- *V-Flex Measurements.....118*

This chapter describes maintenance and measurements in detail, including EPAP status and alarms, hardware verification messages, V-Flex system status reports and commands, code and application data loading, and alarms.

## Hardware Requirements

EPAP-related features require Service Module cards (DSM cards or E5-SM4G cards) running the VSCCP application. The EAGLE 5 ISS can be equipped with from 1 to 25 Service Module cards to support EPAP-related features.

EPAP-related features require EPAP running in a T1000 AS based MPS system.

## EPAP Status and Alarms

Because EPAP has no direct means of accepting user input or displaying output messages on EAGLE 5 ISS terminals, maintenance, measurements, and status information are routed through a Service Module card. EPAP sends two types of messages to the Service Module card: *EPAP Maintenance Blocks* on page 98 and *DSM Status Requests* on page 99. Each message type is discussed in the following sections.

### EPAP Maintenance Blocks

The active EPAP generates and sends maintenance blocks to the primary Service Module card. One maintenance block is sent as soon as the IP link is established between the active EPAP and the primary Service Module card. Additional maintenance blocks are sent whenever the EPAP needs to report any change in status or error conditions. The information returned in maintenance blocks is included in the output of the `rept-stat-mps` and `rept-stat-sccp` commands.

The EPAP sends maintenance blocks that contain at least the following information:

- Status of EPAP 'A' - actual states are active, standby, and down (inoperative). Maintenance blocks include a field for this information so that it can be forwarded to the EPAP A Device Control Block (DCB), where it is available for the output of the `rept-stat-mps` command.
- Status of EPAP 'B' - actual states are active, standby, and down (inoperative). Maintenance blocks include a field for this information so that it can be forwarded to the EPAP B DCB, where it is available for the output of the `rept-stat-mps` command.
- Identification of Active EPAP - a field to identify the active EPAP.
- Congestion Indicator - an indicator showing provisioning link congestion. The link between the EPAPs and the external source of provisioning data can become congested in high-provisioning traffic situations. When this occurs and subsequently as the congestion clears, the EPAP sends maintenance blocks to the Service Module card. The EPAP must ensure that no more than one maintenance block per second is sent to the primary Service Module card if the only reason is to report a change in congestion status.
- Alarm Conditions - an error code field. If the EPAP needs to report an alarm condition, it puts an appropriate UAM identifier in this field.
- Current MPS Database Size - a field indicating the current RTDB size. The Service Module card uses this information to calculate the percentage of memory utilized by the RTDB.

## DSM Status Requests

When the EPAP needs to know the status of a Service Module card, it sends a DSM status request to that Service Module card. Because status messages are sent over UDP, the EPAP broadcasts the DSM status request (to all Service Module cards) and each Service Module card returns its status to the EPAP.

### DSM Status Reporting to the EPAP

The sections that follow describe the DSM status reporting for the EPAP.

### DSM Status Messages – When Sent

Service Module cards send a DSM status message to the EPAP when any the following events occur in the Service Module card:

- The Service Module card is booted.
- The Service Module card receives a DSM Status Request message from the EPAP
- The Service Module card determines that it needs to download the entire database, for example, if the Service Module card determines that the RTDB needs to be downloaded (for instance, if the database is totally corrupted), or if a craftsperson requests that the database be reloaded.
- The Service Module card starts receiving database downloads or database updates. When a Service Module card starts downloading the RTDB or accepting database updates, it sends a DSM Status Message informing the EPAP of the first record received. This helps the EPAP keep track of downloads in progress.

### DSM Status Messages Fields

The DSM Status Message provides the following information to the EPAP:

- **DSM Memory Size.** When the Service Module card is initialized, it determines the amount of memory present. The EPAP uses the value to determine if the Service Module card has enough memory to hold the RTDB.

Refer to the *Dimensioning Guide for EPAP Advanced DB Features Technical Reference* for important information on the dimensioning rules and the Service Module card database capacity requirements.

- **Load Mode Status.** This indicator indicates whether or not 80% of the IS-NR (In-Service Normal) LIMs have access to SCCP services.

## V-Flex Alarms

All V-Flex related UAMs are output to the Maintenance Output Group. The *Maintenance Manual* contains a complete description of all UAMs. [Table 11: V-Flex UAMs](#) on page 100 contains a listing of UAMs used to support the V-Flex feature.

Refer to the *EAGLE 5 ISS Maintenance Manual* for more information and corrective procedures for the EAGLE 5 ISS related alarms. Refer to the *MPS Platform Software and Maintenance Manual* for more information and corrective procedures for the MPS related alarms.

**Table 11: V-Flex UAMs**

UAM	Severity	Message Text	MPS or EAGLE 5 ISS
0013	Major	Card is isolated from system	EAGLE 5 ISS
0084	Major	IP Connection Unavailable	EAGLE 5 ISS
0085	None	IP Connection Available	EAGLE 5 ISS
0099	Major	Incompatible HW for provisioned slot	EAGLE 5 ISS
0250	None	MPS available	MPS
0261	Critical	MPS unavailable	MPS
0370	Critical	Critical Platform Failure(s)	MPS
0371	Critical	Critical Application Failure(s)	MPS
0372	Major	Major Platform Failure(s)	MPS
0373	Major	Major Application Failure(s)	MPS
0374	Minor	Minor Platform Failure(s)	MPS
0375	Minor	Minor Application Failure(s)	MPS
0422	Major	Insufficient extended memory	EAGLE 5 ISS
0423	None	Card reload attempted	EAGLE 5 ISS

UAM	Severity	Message Text	MPS or EAGLE 5 ISS
0441	Major	Incorrect MBD - CPU	EAGLE 5 ISS
0442	Critical	RTDB database capacity is 95% full	EAGLE 5 ISS
0443	Major	RTDB database is corrupted	EAGLE 5 ISS
0444	Minor	RTDB database is inconsistent	EAGLE 5 ISS
0445	None	RTDB database has been corrected	EAGLE 5 ISS
0446	Major	RTDB Database capacity is 80% full	EAGLE 5 ISS
0447	None	RTDB database capacity alarm cleared	EAGLE 5 ISS
0448	Minor	RTDB database is incoherent	EAGLE 5 ISS
0449	Major	RTDB resynchronization in progress	EAGLE 5 ISS
0451	Major	RTDB reload is required	EAGLE 5 ISS
0551	Critical	VFLEX Subsystem is not available	EAGLE 5 ISS
0552	Critical	VFLEX Subsystem is disabled	EAGLE 5 ISS
0553	Minor	VFLEX Subsystem normal, card(s) abnormal	EAGLE 5 ISS
0554	None	VFLEX Subsystem is available	EAGLE 5 ISS

UAM	Severity	Message Text	MPS or EAGLE 5 ISS
0555	None	VFLEX Subsystem is removed	EAGLE 5 ISS

### DSM-EPAP Link

Two alarms are used to indicate the DSM-to-EPAP link status. Refer to the *Signaling Products Maintenance Manual* for more information and corrective procedures for the following alarms.

- **UAM 0084 - IP Connection Unavailable**

This message indicates that an IP application socket is out of service due to a IP link down (Ethernet problem) or due to the Service Module card.

```
station1234 00-09-30 16:28:08 EAGLE 35.0.0
** 5676.0084 ** DSM B 1101 IP Connection Unavailable
```

- **UAM 0085 - IP Connection Available**

This message indicates that a previously broken link between the EPAP and Service Module card is now functioning properly.

```
station1234 00-09-30 16:28:08 EAGLE 35.0.0
5676.0085 DSM B 1101 IP Connection Available
```

### MPS (EPAP) Alarms

The following alarms are output on the EAGLE 5 ISS and include an alarm data string in the output. Refer to the *MPS Platform Software and Maintenance Manual*(except where noted)for more information and corrective procedures for the following MPS related alarms.

- **UAM 0261 - MPS unavailable**

This message indicates that the EAGLE 5 ISS is unable to communicate with the MPS or the MPS has an internal failure. Refer to the *Maintenance Manual* for the corrective action procedure.

Example:

```
station1234 00-09-30 16:28:08 EAGLE 35.0.0
*C 0259.0261 *C MPS B MPS unavailable
```

- **UAM 0370 - Critical Platform Failure (s)**

This message indicates the application running in the MPS server has detected a critical platform failure. The Alarm Data in the message contains a 16-character hexadecimal string in the format of h'1xxxxxxxxxxxxxx'. This alarm will be reset when UAM #250, MPS Available is issued.

Example:

```
station1234 00-09-30 16:28:08 EAGLE 35.0.0
*C 0259.0370 *C MPS B Critical Platform Failure(s)
ALARM DATA = h'1000000000000008'
```

- **UAM 0371 - Critical Application Failure (s)**

This message indicates the application running in the MPS server has detected a critical application failure. The Alarm Data in the message contains a 16-character hexadecimal string in the format of h'2xxxxxxxxxxxxx'. This alarm will be reset when UAM #250, MPS Available is issued.

Example:

```
station1234 00-09-30 16:28:08 EAGLE 35.0.0
*C 0259.0371 *C MPS B Critical Application Failure(s)
ALARM DATA = h'2000000000000001'
```

- **UAM 0372 - Major Platform Failure (s)**

This message indicates the application running in the MPS server has detected a major platform failure. The Alarm Data in the message contains a 16-character hexadecimal string in the format of h'3xxxxxxxxxxxxx'. This alarm will be reset when UAM #250, MPS Available is issued.

Example:

```
station1234 00-09-30 16:28:08 EAGLE 35.0.0
** 0259.0372 ** MPS B Major Platform Failure(s)
ALARM DATA = h'3000000000000002'
```

- **UAM 0373 - Major Application Failure (s)**

This message indicates the application running in the MPS server has detected a major application failure. The Alarm Data in the message contains a 16-character hexadecimal string in the format of h'4xxxxxxxxxxxxx'. This alarm will be reset when UAM #250, MPS Available is issued.

Example:

```
station1234 00-09-30 16:28:08 EAGLE 35.0.0
** 0259.0373 ** MPS B Major Application Failure(s)
ALARM DATA = h'4000000000000008'
```

- **UAM 0374 - Minor Platform Failure (s)**

This message indicates the application running in the MPS server has detected a minor platform failure. The Alarm Data in the message contains a 16-character hexadecimal string in the format of h'5xxxxxxxxxxxxx'. This alarm will be reset when UAM #250, MPS Available is issued.

Example:

```
station1234 00-09-30 16:28:08 EAGLE 35.0.0
* 0259.0374 * MPS B Minor Platform Failure(s)
ALARM DATA = h'5000000000000004'
```

- **UAM 0375 - Minor Application Failure (s)**

This message indicates the application running in the MPS server has detected a minor application failure. The Alarm Data in the message contains a 16-character hexadecimal string in the format of h'6xxxxxxxxxxxxx'. This alarm will be reset when UAM #250, MPS Available is issued.

Example:

```
station1234 00-09-30 16:28:08 EAGLE 35.0.0
* 0259.0375 * MPS B Minor Application Failure(s)
ALARM DATA = h'6000000000000001'
```

### Card Related MPS Alarms

The following alarms are output on the EAGLE 5 ISS. Refer to the *Signaling Products Maintenance Manual* for more information and corrective procedures for the following card related MPS alarms.

- **UAM 0013** - Card is isolated from system

This indicates a card has become isolated and is unable to communicate to other cards in the system. This could be caused by a defective card, a power failure occurred on the card, or the system software has ordered a reset.

This also appears when the card has been manually reset by a command.

Example:

```
station1234 00-04-30 16:28:08 EAGLE 35.0.0
** 0012.0013 ** CARD 1101 SCCP          Card is isolated from the system
          ASSY SN: 102199815a1234
```

- **UAM 0099** - Incompatible HW for provisioned slot

This indicates a DCM or Service Module card does not have an extended memory. This card is automatically inhibited.

Example:

```
station1234 00-04-30 16:28:08 EAGLE 35.0.0
** 0012.0099 ** CARD 1101 VSCCP  Incompatible hardware for provisioned slot
          ASSY SN: 102199815a1234
```

- **UAM 0422** - Insufficient extended memory

At least one SCCP card does not have enough memory for the V-Flex application. Loading of the SCCP card is automatically inhibited.

Example:

```
station1234 00-04-30 16:28:08 EAGLE 35.0.0
** 0012.0422 ** CARD 1108  SCCP          Insufficient extended memory
```

- **UAM 0423** - Card reload attempted

Card loading is no longer inhibited. The once inhibited card is now attempting to load.

Example:

```
station1234 00-04-30 16:28:08 EAGLE 35.0.0
          0012.0423      CARD 1108  SCCP          Card reload attempted
```

- **UAM 0441** - Incorrect main board - CPU

A Service Module card does not have the required hardware configuration for the V-Flex application.

Example:

```
station1234 00-04-30 16:28:08 EAGLE 35.0.0
** 0012.0441 ** CARD 1108  VSCCP          Incorrect MBD - CPU
```

- **UAM 0442** - Insufficient RTDB database capacity

At least one Service Module card does not have at least 1Gb of memory or does not have enough capacity for the RTDB. Loading of the Service Module card is automatically inhibited.

Example:

```
station1234 00-04-30 16:28:08 EAGLE 35.0.0
*C 0012.0442 *C CARD 1108 VSCCP RTDB database capacity is 95% full
```

- **UAM 0443** - RTDB database is corrupted

A RTDB database is corrupt. The calculated checksum did not match the checksum value stored for one or more records.

Example:

```
station1234 00-04-30 16:28:08 EAGLE 35.0.0
** 0012.0443 ** CARD 1108 VSCCP RTDB database is corrupted
```

- **UAM 0444** - RTDB database is inconsistent

The real time database on one or more Service Module cards is not identical to the current real time database on the active EPAP fixed disks.

Example:

```
station1234 00-04-30 16:28:08 EAGLE 35.0.0
* 0012.0444 * CARD 1108 VSCCP RTDB database is inconsistent
```

- **UAM 0445** - RTDB database has been corrected

This message indicates that a problem with the RTDB has been corrected.

Example:

```
station1234 00-04-30 16:28:08 EAGLE 35.0.0
0012.0445 CARD 1108 VSCCP RTDB database has been corrected
```

- **UAM 0446** - RTDB Database capacity is 80% full

This message is displayed when a Service Module card detects that its daughterboard memory is at least 80% full.

Example:

```
station1234 00-04-30 16:28:08 EAGLE 35.0.0
** 0012.0446 ** CARD 1108 VSCCP RTDB Database capacity is 80% full
```

- **UAM 0447** - RTDB database capacity alarm cleared

This message indicates that a problem with the RTDB memory has been corrected.

Example:

```
station1234 00-04-30 16:28:08 EAGLE 35.0.0
0012.0447 CARD 1108 VSCCP RTDB database capacity alarm cleared
```

- **UAM 0448** - RTDB database is incoherent

This message indicates that the RTDB database download is in-process.

Example:

```
station1234 00-04-30 16:28:08 EAGLE 35.0.0
* 0012.0448 * CARD 1108 VSCCP RTDB database is incoherent
```

- **UAM 0449** - RTDB resynchronization in progress

This message indicates that the MPS database resynchronization is in-process.

Example:

```
station1234 00-04-30 16:28:08 EAGLE 35.0.0
** 0012.0449 ** CARD 1108 VSCCP RTDB resynchronization in progress
```

- **UAM 0451** - RTDB reload is required

The RTDB database on the Service Module card needs to be reloaded because the resynch log does not contain all of the required updates.

Example:

```
station1234 00-04-30 16:28:08 EAGLE 35.0.0
** 0012.0451 ** CARD 1108 VSCCP RTDB reload is required
```

### V-Flex Subsystem Alarms

The following alarms are output on the EAGLE 5 ISS for the V-Flex subsystem.

- **UAM 0551** - VFLEX Subsystem is not available

Indicates no SCCP cards have a V-Flex status of active. All are OOS or loading.

Example:

```
station1234 00-04-30 16:28:08 EAGLE 35.0.0
*C 0056.0455 *C VFLEX SYSTEM VFLEX Subsystem is not available
```

- **UAM 0552** - VFLEX Subsystem is disabled

Indicates all IS-NR SCCP cards have a V-Flex status of Offline (with at least 1 card IS-NR). The `inh-map-ss` command has been executed.

Example:

```
station1234 00-04-30 16:28:08 EAGLE 35.0.0
*C 0056.0456 *C VFLEX SYSTEM VFLEX Subsystem is disabled
```

- **UAM 0553** - VFLX Subsystem normal, card(s) abnormal

1 SCCP card has V-Flex status of Active and there are 1 or more cards with an V-Flex status other than Active.

Example:

```
station1234 00-04-30 16:28:08 EAGLE 35.0.0
* 0056.0457 * VFLX SYSTEM VFLX Subsystem normal, card(s) abnormal
```

- **UAM 0554** - VFLEX Subsystem is available

All SCCP cards are IS-NR and have an V-Flex status of Active.

Example:

```
station1234 00-04-30 16:28:08 EAGLE 35.0.0
0056.0458 VFLEX SYSTEM VFLEX Subsystem is available
```

- **UAM 0555** - VFLEX Subsystem is removed

Indicates the last SCCP card deleted.

Example:

```
station1234 00-04-30 16:28:08 EAGLE 35.0.0
0056.0459 VFLEX SYSTEM VFLEX Subsystem is removed
```

## Migration System Status Reports

Status reporting described here includes the following:

- System status
- V-Flex status
- Service Module memory capacity status
- Loading mode support status

### System Status Reporting

The `rept-stat-sys` command supports the Service Module cards running the VSCCP application.

The `rept-stat-sccp` command supports the Service Module cards running the VSCCP application and reports V-Flex statistics.

### MPS Status Reporting

The `rept-stat-mps` command supports MPS system reporting. `rept-stat-mps` concentrates on reporting the status of the provisioning system. See [Maintenance Commands for V-Flex](#) on page 45 and [Measurements Commands for V-Flex](#) on page 51, for more details. V-Flex statistics are placed in the `rept-stat-sccp` command.

### Service Module Memory Capacity Status Reporting

As mentioned in the [DSM Status Reporting to the EPAP](#) on page 99, the Service Module sends a message to the EPAP containing the amount of memory on the Service Module board. The EPAP determines whether the Service Module has enough memory to store the RTDB and sends an ack or nak back to the Service Module indicating whether or not the Service Module has an adequate amount of memory. Refer to the *Dimensioning Guide for EPAP Advanced DB Features Technical Reference* for important information on the dimensioning rules and the Service Module database capacity requirements.

When the EPAP sends database updates to the Service Modules, the update messages include a field that contains the new database memory requirements. Each Service Module monitors the DB size requirements, and issues a minor alarm if the size of the DB exceeds 80% of its memory. If a database increases to the point that there is insufficient Service Module memory, a major alarm is issued.

The `rept-stat-mps:loc=xxxx` command shows the amount of memory used by the RTDB as a percent of available Service Module memory.

### Loading Mode Support Status Reporting

The OAM application determines whether or not the system is in an unstable loading mode since it knows the state of all LIM, SCCP, and Service Module cards in the system. When the loading mode is unstable, the `rept-stat-sys` command reports the existence of the unstable loading mode and the specific conditions that caused it. Refer to [EPAP Application Data Loading](#) on page 108, for more details.

## Code and Application Data Loading

In general, administrative updates can occur while a Service Module card is loading. The Service Module card should also remain in an in-transition state if the STP portion of the database has completed loading and is waiting for the RTDB to download.

### Service Module Code Loading

The EAGLE 5 ISS OAM performs code loading of the Service Module card.

## EPAP Application Data Loading

The V-Flex feature requires that new TDM-resident data tables be loaded in addition to those currently supported by EAGLE 5 ISS. The GPL and data loading support this additional table loading while maintaining support for loading the existing EAGLE 5 ISS tables.

In order to support both RTDB and EAGLE 5 ISS data loading, the VSCCP GPL verifies its hardware configuration during initialization to determine if it has the capacity to support the RTDB.

The VSCCP GPL application data loader registers all tables for loading, independent of the V-Flex feature provisioning and main board / applique hardware configuration. As a result, load requests are always identical. During loading, multiple Service Module load requests are combined into a single download, reducing the overall download time. The Service Module card stores or discards RTDB table data based on whether or not it has RTDB-capable hardware for features like G-Port, G-Flex, INP, and EIR.

The OAM, on the other hand, downloads or sets memory boundaries for the V-Flex options, HOMERN, and service selector tables only if the V-Flex feature is provisioned. When the V-Flex feature is not provisioned, the OAM does not attempt to read these tables from disk. Instead, empty tables (i.e., tables without entries) are downloaded. All other tables requested for loading are read from disk and downloaded routinely.

### 80% Threshold of Support

Loading mode is based on the ability of the system to provide SCCP service to at least 80% of the LIMs.

### VSCCP Capacity

An insufficient number of Service Module cards that are is-nr or oos-mt-dsblld relative to 80% of the number of provisioned LIMs is called a “failure to provide adequate SCCP capacity.”

### Insufficient SCCP Service

It is also possible for LIMs or Service Module cards to be inhibited or to have problems that prevent them from operating normally. If enough Service Module cards are out of service, it may not be possible for the remaining is-nr Service Module cards to service at least 80% of the number of is-nr LIMs. This is called “insufficient SCCP service.” When this occurs, some of the LIMs are denied SCCP service. It is possible to inhibit LIMs to bring the ratio back to 16:1 (or better).

### Conditions That Create an Unstable Loading Mode

Current system implementation interrupts and aborts card loading upon execution of an STP database `chg` command. Loading mode support denies the execution of EAGLE 5 ISS database `chg` commands when the system is in an unstable loading mode. An unstable loading mode exists when any of the following conditions are true:

- The system's maintenance baseline has not been established.
- Less than 80% of the number of LIMs provisioned are is-nr or oos-mt-dsblld.
- The number of is-nr and oos-mt-dsblld sccp cards is insufficient to service at least 80% of all provisioned LIMs.
- Insufficient SCCP service occurs when an insufficient number of is-nr Service Module cards are available to service at least 80% of the number of is-nr LIMs.
- LIM cards are being denied SCCP service and any Service Module cards are in an abnormal state (oos-mt, is-anr).

### Actions Taken When the System is in an Unstable Loading Mode

- No affect on RTDB downloads or updates.

Unstable loading mode has no impact on RTDB downloads or the stream of RTDB updates.

- `rept-stat-sys` reports unstable loading mode.

When the loading mode is unstable, the `rept-stat-sys` command reports the existence of the unstable loading mode and the specific trigger that caused it.

- No EAGLE 5 ISS database updates allowed.

When in an unstable loading mode, the EAGLE 5 ISS does not accept database updates. When updates are rejected, the reason is given as: E3112 Cmd Rej: Loading Mode unstable due to SCCP service is deficient.

The `inh-card` and `alw-card` commands can be used to alter SCCP service levels to achieve the 80% threshold. This can be repeated for each card until the system is able to supply SCCP services to at least 80% of the is-nr LIMs. The remaining 20% LIM or supporting Service Module cards may remain out of service until the stream of database updates ceases. This stream of

updates can be temporarily interrupted to allow the remaining 20% of the system to come in service.

Once an EAGLE 5 ISS database has been loaded, that database can be updated (as long as the system is not in an unstable loading mode). However, if an database update comes in during EAGLE 5 ISS database loading, the Service Module aborts the current loading, issues a class 01D7 obit, and reboots. [Figure 9: Obit Message for Abort of Card Loading](#) on page 110 shows an example.

**Figure 9: Obit Message for Abort of Card Loading**

```

tekelecstp 97-04-08 12:29:04 EAGLE 35.0.0
-----
Card 1317  Module RADB_MGR.C  Line  337  Class 01d7
Card 1317  Module RADB_MGR.C  Line  337  Class 01d7
Register Dump :
    EFL=00000246    CS =0058          EIP=0000808d    SS =0060
    EAX=000a6ff3    ECX=000a0005    EDX=00000000    EBX=000a6fa0
    ESP=00108828    EBP=0010882c    ESI=001f1e10    EDI=00000000
    DS =0060        ES =0060        FS =0060        GS =0060

Stack Dump :
[SP+1E]=001f    [SP+16]=0000    [SP+0E]=000a    [SP+06]=0010
[SP+1C]=1e10    [SP+14]=0004    [SP+0C]=6fa0    [SP+04]=8850
[SP+1A]=0010    [SP+12]=001f    [SP+0A]=0004    [SP+02]=0001
[SP+18]=886c    [SP+10]=4928    [SP+08]=7ec3    [SP+00]=504b

User Data Dump :

14 02 fa ed 01 01 1d 01 5a 01 00          .....Z..

Report Date:97-04-08  Time:12:29:04

```

### Using the force Option


Use the force option to execute commands that would put the system in unstable loading mode. If executing the `ent-card` or `inh-card` commands would cause the system to enter an unstable loading mode, use the force option on the command.

### State Transitions during Start-Up

Figures [Figure 10: V-Flex Enabled, Normal Operating Sequence](#) on page 111 through [Figure 15: V-Flex Activation Unsuccessful due to Insufficient Database](#) on page 112 show the transitions that a Service Module card goes through as it boots, loads code and data, and runs various VSCCP services. These figures do not illustrate every possible situation, but they do include the most common scenarios involving the V-Flex feature.


In *Figure 10: V-Flex Enabled, Normal Operating Sequence* on page 111, the V-Flex feature is enabled, and the Service Module card memory is 4 GB and is connected to the EPAP. A normal Service Module card operating sequence occurs, providing V-Flex service.

**Figure 10: V-Flex Enabled, Normal Operating Sequence**

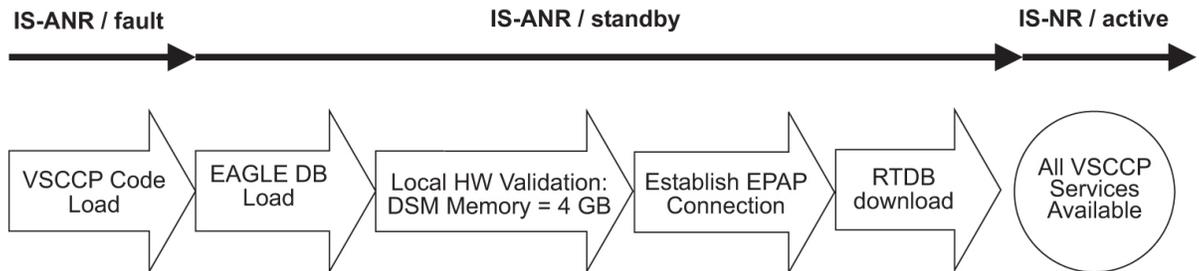


In *Figure 11: V-Flex Enabled, but Service Module Not Connected to EPAP* on page 111, the V-Flex feature is enabled, the Service Module card memory is 4 GB, but the Service Module card is unable to connect EPAP; the V-Flex cannot begin operation.

**Figure 11: V-Flex Enabled, but Service Module Not Connected to EPAP**

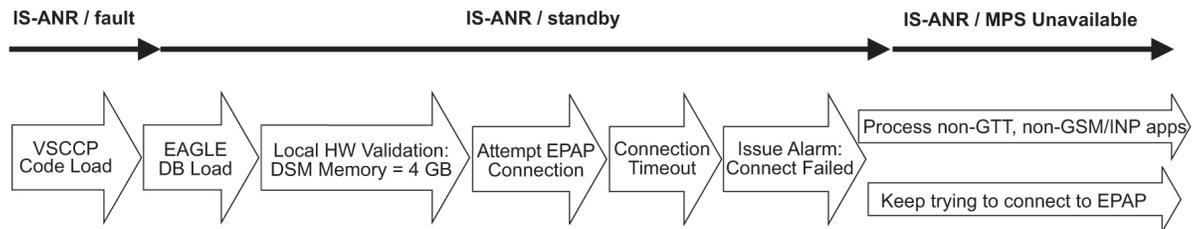


In *Figure 12: V-Flex Enabled, but Service Module card memory Insufficient for Database* on page 111, the V-Flex feature is enabled, the Service Module card has the required 4 GB memory and is connected to the EPAP, but the Service Module card is too small for the required database; V-Flex cannot begin operation. Refer to the *Dimensioning Guide for EPAP Advanced DB Features Technical Reference* for important information on the dimensioning rules and the Service Module card database capacity requirements.

**Figure 12: V-Flex Enabled, but Service Module card memory Insufficient for Database**

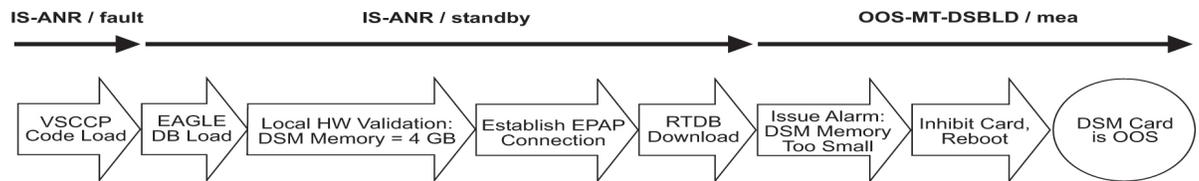


In *Figure 13: V-Flex Enabled, but Database Exceeds Service Module card memory* on page 111, the V-Flex feature is enabled, the Service Module card is connected to the EPAP, but the RTDB grows eventually to exceed the capacity of the Service Module card memory, despite its memory size of 4 GB (an alarm is issued when the Service Module card memory becomes full from the RTDB update). The V-Flex cannot begin operation. Refer to the *Dimensioning Guide for EPAP Advanced DB Features Technical Reference* for important information on the dimensioning rules and the Service Module card database capacity requirements.

**Figure 13: V-Flex Enabled, but Database Exceeds Service Module card memory**

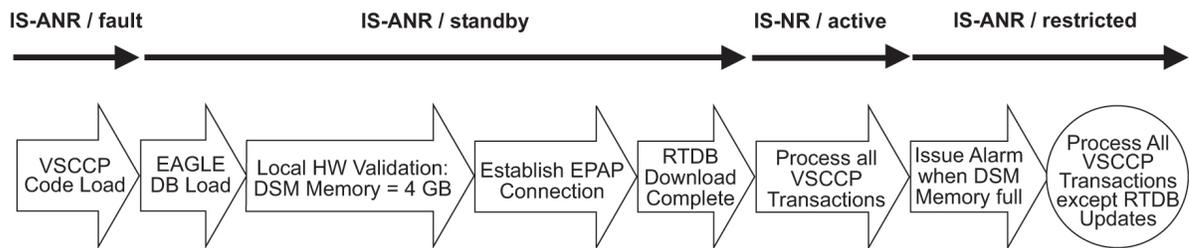


In *Figure 14: V-Flex Not Enabled at First, but then Activated on Service Module* on page 112, the V-Flex feature is not initially enabled; the Service Module card memory is 4 GB but no EPAP connection; the Service Module card is running other applications when the V-Flex feature is enabled and turned on; the Service Module has sufficient memory to provide V-Flex service.

**Figure 14: V-Flex Not Enabled at First, but then Activated on Service Module**

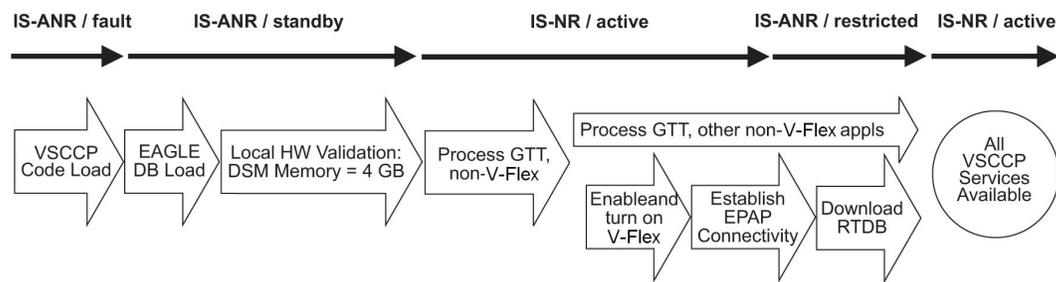

In *Figure 15: V-Flex Activation Unsuccessful due to Insufficient Database* on page 112, the V-Flex feature is not initially enabled; the Service Module card memory is 4 GB but no EPAP connection, and is running other applications when the V-Flex feature is turned on. However, the Service Module card memory is insufficient for the needed database, and the cannot provide V-Flex operation. Refer to the *Dimensioning Guide for EPAP Advanced DB Features Technical Reference* for important information on the dimensioning rules and the Service Module card database capacity requirements.

**Figure 15: V-Flex Activation Unsuccessful due to Insufficient Database**

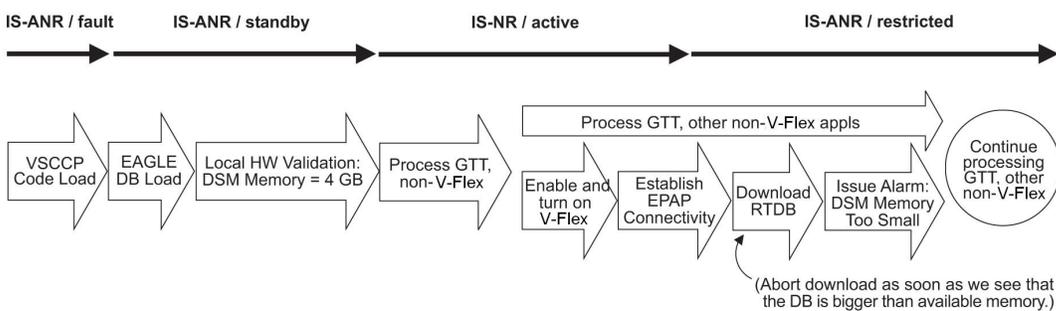

## V-Flex UIMs

The EAGLE 5 ISS Maintenance Manual contains a complete description of all UIM text and formats. If V-Flex is provisioned, then the following UIMs (*Table 12: V-Flex UIMs* on page 113) are used.

Table 12: V-Flex UIMs

UIM	Text	Description	Action
1035	SCCP rsp did not route - invalid GTI	The SCCP response did not route due to an invalid GTI	Use a valid GTI in the CGPA part of the query
1036	SCCP rsp did not route - invalid TT	The SCCP response did not route due to an invalid TT	Provision the CGPA TT in the GTT TT table
1037	SCCP rsp did not route - bad Xlation	The SCCP response did not route due to a bad translation	Provision the CGPA GTA address in the GTT database
1038	SCCP rsp did not route -SSP not True PC	The SCCP response did not route due to SSP is not true point code	Use the true point code in the CGPA point code or OPC of the query
1039	SCCP rsp did not route - bad Selectors	The SCCP response did not route due to invalid selectors	Provision the CGPA GTI, TT, NP, and NAI in the EGTT selector table
1040	ITU <-> ANSI translation not supported	This message indicates an invalid translation PC type in attempting to cross the ANSI to ITU domain.	Change the translation PC type to not cross the domain (ANSI <-> ITU), by using the appropriate EPAP commands.
1041	SCCP did not route -no SSN in msg or DB	This message indicates the SCCP message did not route because the SSN was not found in the message or translation data.	Change the message to include the CDPA SSN in the message or provision the SSN in the translation table.
1232	SCCP Encode Failure 2	This message indicates that there is an SCCP encode failure.	Contact the distant end node this message refers to and verify action is being taken to correct the SCCP encode failure problem.

UIM	Text	Description	Action
1260	LSS: Unsupported TCAP msg type	The local subsystem received an SCCP message containing an unsupported TCAP (transaction capabilities application portion) message type.	None
1261	LSS: Invalid len in transaction portion	The local subsystem received a TCAP message containing an invalid length in the transaction portion of the message.	None
1262	LSS: Invalid len in dialogue portion	The local subsystem received a TCAP message with an invalid length in the dialogue portion of the message.	None
1263	LSS: Invalid len in component portion	The local subsystem received a TCAP message with an invalid length in the component portion of the message.	None
1264	LSS: No originating transaction ID	The local subsystem received a TCAP message that does not have an originating transaction ID.	None
1265	LSS: Invalid transaction ID len	The local subsystem received a TCAP message containing an invalid transaction ID length.	None
1266	LSS: Dest transaction ID in Begin	The local subsystem received a Begin TCAP message containing a destination transaction ID. (The Begin message	None

UIM	Text	Description	Action
		should have an originating transaction ID only. A destination transaction ID is valid only in Abort, Continue, and End TCAP messages.)	
1267	LSS: No External element	The local subsystem received a TCAP message that does not contain an External element in the dialogue portion of the message.	None
1268	LSS: No External Object Identifier	The local subsystem received a TCAP message that does not contain an Object Identifier element in the External element in the dialogue portion of the message.	None
1269	LSS: Not Structured Dialogue	The local subsystem received a TCAP message with an Object Identifier value in the External element in the dialogue portion that does not indicate a structured dialogue as specified in ITU Q.773.	None
1270	LSS: No External ASN1-Type	The local subsystem received a TCAP message that does not have an ASN1-Type element in the External element in the dialogue portion of the message.	None
1271	LSS: No Dialogue Request	The local subsystem received a TCAP message that does not have a Dialogue	None

UIM	Text	Description	Action
		Request element in the ASN1-Type element in the dialogue portion of the message.	
1272	LSS: No Application Context Name	The local subsystem received a TCAP message that does not have an Application Context Name element in the Dialogue Request element in the dialogue portion of the message.	None
1273	LSS: No ACN Object Identifier	The local subsystem received a TCAP message that does not have an Object Identifier element in the Application Context Name element in the dialogue portion of the message.	None
1274	LSS: No component portion	The local subsystem received a TCAP message that does not contain a component portion tag.	None
1275	1275 LSS: First component not an Invoke		
1276	LSS: No Invoke ID	The local subsystem received a TCAP message that does not contain an Invoke ID within the component.	None
1277	LSS: No operation code	The local subsystem received a TCAP message that does not contain an operation code tag within the component.	None

UIM	Text	Description	Action
1279	LSS: Unsupported network type	The local subsystem received an SCCP message of an unsupported network type.	None
1280	LSS: Unsupported SCCP msg type	The local subsystem received an SCCP message of an unsupported SCCP message type.	Check translations on the originating switch to determine the trouble
1284	LSS: Unknown SSP PC	The local subsystem received an SCCP message that contained an SSP (Service Switching Point) point code (PC) that is not in the Eagle routing table.	None
1286	LSS: Invalid INAP/CAMEL digits length	The local subsystem received an INAP message in which the Called Party Number parameter length is invalid.	None
1288	LSS: Unsupported operation code	The local subsystem received a TCAP message in which the operation code is unsupported.	None
1291	LSS: No INAP/CAP CalledPartyNumber param	The local subsystem received an INAP message that does not contain an Called Party Number parameter.	None
1293	LSS: Linked ID in query	The local subsystem received an INAP query message containing Linked ID	None
1378	Inh VFLX SS request already outstanding	A second attempt to inhibit the V-Flex subsystem has been made while the first is still being processed.	None - the second attempt will be ignored

UIM	Text	Description	Action
1379	Failure Inhibiting VFLEX SS	The attempted inhibit of the V-Flex subsystem failed. A response SOG was not received from the mate.	No action necessary.
1380	VFLEX: No RN digits provisioned	The digits in the VMS at the requested VMRN index were not provisioned.	The provisioning information for the VMS ID accessed via the MSU information should be verified.
1381	VFLEX: CD entry not found	The call decision table entry matching the incoming MSU criteria is not found.	Call decision tree provisioning should be updated.
1382	LSS: Too many digits for DRA parameter	Too many digits (>31) in the DRA parameter to encode.	Decrease the number of RN digits or modify the querying node to send fewer digits in DN.

## V-Flex Measurements

Refer to the *Maintenance Manual* for detailed measurement usage information.

The EAGLE 5 ISS Measurement system supports the collection and retrieval of measurements related to the V-Flex Voice Mail Router (V-Flex) feature. The V-Flex measurement registers are supported only with the Measurements Platform feature enabled and the Measurements Platform option on.

There are five measurement registers specifically for the V-Flex feature (see [Table 13: Pegs for Per System V-Flex Measurements](#) on page 119 and [Table 14: Pegs for Per SSP V-Flex Measurements](#) on page 119). The registers are reported in two new V-Flex reports (VFLX\_SYS and VFLX\_SSP) that have been added to the Hourly Maintenance Measurements (MTCH) report and Daily Maintenance Measurements (MTCD) report.

The data for these registers originates in the Service Module cards. The IP User Interface (IPUI, Telnet) feature must be on to provide the FTP interface to the customer's network, for the FTP transfer of the V-Flex MTCH and V-Flex MTCD reports to a customer FTP server. Following collection, scheduled reports are automatically generated and transferred to the customer's FTP server through the IPUI interface.

Refer to the procedure in the *Database Administration Manual - System Management* for configuring the Measurements Platform and the IPUI feature in the EAGLE 5 ISS.

When the V-Flex feature is on, the MCP application collects V-Flex measurements data each hour following the hour boundary (0000, 0100, 0200, etc.). The collected data is retained in the appropriate

data store. The retention period for hourly V-Flex measurements data is 24 hours. The V-Flex measurements data collected each hour is aggregated into a daily sum total that is reported in the MTCD report. The retention period for daily V-Flex measurements data is 7 days.

Existing FTP file server reports are overwritten by subsequent requests that produce the identical file name.

Reports can be scheduled or generated on demand. The `chg-measopts` command is used to schedule automatic generation of reports, and the `rept-ftp-meas` command is used to generate and FTP transfer reports on demand. See [Measurements Commands for V-Flex](#) on page 51 and refer to the *Commands Manual* for descriptions of the commands that are used for V-Flex measurements.

**Table 13: Pegs for Per System V-Flex Measurements**

Event Name	Description	Type	Unit
VFIDPQRCV	Total number of IDP queries received for the V-Flex service.	System	Peg count
VFCNCTRSP	Total number of IDP Connect responses sent by the V-Flex service.	System	Peg count
VFERRRSP	Total number of IDP queries received that resulted in TCAP Error response from the V-Flex service.	System	Peg count

**Table 14: Pegs for Per SSP V-Flex Measurements**

VFVMSISDN	Total number of IDP queries received for the V-Flex service with a valid MSISDN and known OPC.	Per-SSP	Peg count
VFIMSISDN	Total number of IDP queries received for the V-Flex service with a invalid MSISDN and known OPC.	Per-SSP	Peg count



# Glossary

## A

AINPQ	ANSI-41 INP Query
ANSI	<p>American National Standards Institute</p> <p>An organization that administers and coordinates the U.S. voluntary standardization and conformity assessment system. ANSI develops and publishes standards. ANSI is a non-commercial, non-government organization which is funded by more than 1000 corporations, professional bodies, and enterprises.</p>
APC	<p>Adjacent Point Code</p> <p>The point code that identifies a node adjacent to the EAGLE 5 ISS. This term is used in link sets and routes.</p>
A-Port	ANSI-41 Mobile Number Portability
AS	<p>Application Server</p> <p>A logical entity serving a specific Routing Key. An example of an Application Server is a virtual switch element handling all call processing for a unique range of PSTN trunks, identified by an SS7 DPC/OPC/CIC_range. Another example is a virtual database element, handling all HLR transactions for a particular SS7 DPC/OPC/SCCP_SSN combination. The AS contains a set of one or more unique Application</p>

**A**

Server Processes, of which one or more normally is actively processing traffic.

**C**

CPU

Central Processing Unit

**D**

Database

All data that can be administered by the user, including cards, destination point codes, gateway screening tables, global title translation tables, links, LNP services, LNP service providers, location routing numbers, routes, shelves, subsystem applications, and 10 digit telephone numbers.

DB

Database

Daughter Board

Documentation Bulletin

DCB

Device Control Block

DPC

Destination Point Code

DPC refers to the scheme in SS7 signaling to identify the receiving signaling point. In the SS7 network, the point codes are numeric addresses which uniquely identify each signaling point. This point code can be adjacent to the EAGLE 5 ISS, but does not have to be.

DSM

Database Service Module.

The DSM provides large capacity SCCP/database functionality. The DSM is an application card that supports network specific functions such as EAGLE

**D**

Provisioning Application Processor (EPAP), Global System for Mobile Communications (GSM), EAGLE Local Number Portability (ELAP), and interface to Local Service Management System (LSMS).

**E**

EGTT

Enhanced Global Title Translation

A feature that is designed for the signaling connection control part (SCCP) of the SS7 protocol. The EAGLE 5 ISS uses this feature to determine to which service database to send the query message when a Message Signaling Unit (MSU) enters the system.

EIR

Equipment Identity Register

A network entity used in GSM networks, as defined in the 3GPP Specifications for mobile networks. The entity stores lists of International Mobile Equipment Identity (IMEI) numbers, which correspond to physical handsets (not subscribers). Use of the EIR can prevent the use of stolen handsets because the network operator can enter the IMEI of these handsets into a 'blacklist' and prevent them from being registered on the network, thus making them useless.

EPAP

EAGLE Provisioning Application Processor

EPM

Embedded Platform Module

A single-slot card that is similar to the high-capacity blade except that it uses a lower-power CPU and thus does not require external fan trays or extra power.

**E**

## Embedded Processor Module

A card that contains an Intel Celeron 1GHz processor, 256MB RAM, and other enhancements, intended as replacement for K6 DCM-class cards.

**F**

## FTP

## File Transfer Protocol

A client-server protocol that allows a user on one computer to transfer files to and from another computer over a TCP/IP network.

**G**

## GB

Gigabyte — 1,073,741,824 bytes

## G-Flex

## GSM Flexible numbering

A feature that allows the operator to flexibly assign individual subscribers across multiple HLRs and route signaling messages, based on subscriber numbering, accordingly.

## GPL

## Generic Program Load

Software that allows the various features in the system to work. GPLs and applications are not the same software.

## G-Port

## GSM Mobile Number Portability

A feature that provides mobile subscribers the ability to change the GSM subscription network within a portability cluster, while retaining their original MSISDN(s).

## GSM

## Global System for Mobile Communications

**G**

GT	Global Title Routing Indicator
GTA	Global Title Address
GTI	Global Title Indicator
GTT	Global Title Translation A feature of the signaling connection control part (SCCP) of the SS7 protocol that the EAGLE 5 ISS uses to determine which service database to send the query message when an MSU enters the EAGLE 5 ISS and more information is needed to route the MSU. These service databases also verify calling card numbers and credit card numbers. The service databases are identified in the SS7 network by a point code and a subsystem number.

**H**

HIPR	High-Speed IMT Packet Router A card that provides increased system throughput and traffic capacity. HIPR moves EAGLE from an intra-shelf ring topology to an intra-shelf switch topology. HIPR acts as a gateway between the intra-shelf IMT BUS, running at 125Mbps, and the inter-shelf operating at 1.0625Gbps. The HIPR card will seat in the same slot as an HMUX card (slots xx09 & xx10 of each shelf).
HMUX	High-Speed Multiplexer A card that supports the requirements for up to 1500 links, allowing communication on IMT buses between cards, shelves and

**H**

frames. HMUX cards interface to 16 serial links, creating a ring from a series of point to point links. Each HMUX card provides a bypass multiplexer to maintain the ring's integrity as cards are removed and inserted into an operational shelf.

High-Speed IMT Multiplexer, a replacement card for the IPMX.

HOMERN Home Network Routing Number Prefix

HW Hardware

**I**

IAM Initial Address Message

ID Identity, identifier

IDP Initial Detection Point

IGM IS41 GSM Migration

INAP Intelligent Network Application Protocol

INP INAP-based Number Portability

Tekelec's INP can be deployed as a stand-alone or an integrated signal transfer point/number portability solution. With Tekelec's stand-alone NP server, no network reconfiguration is required to implement number portability. The NP server delivers a much greater signaling capability than the conventional SCP-based approach.

## I

	Intelligent Network (IN) Portability
IP	Internet Protocol  IP specifies the format of packets, also called datagrams, and the addressing scheme. The network layer for the TCP/IP protocol suite widely used on Ethernet networks, defined in STD 5, RFC 791. IP is a connectionless, best-effort packet switching protocol. It provides packet routing, fragmentation and re-assembly through the data link layer.
ISDN	Integrated Services Digital Network
IS-NR	In Service - Normal
ISDN	Integrated Services Digital Network  Integrates a number of services to form a transmission network. For example, the ISDN network integrates, telephony, facsimile, teletext, Datex-J, video telephony and data transfer services, providing users with various digital service over a single interface: voice, text, images, and other data.
ISS	Integrated Signaling System
ITU	International Telecommunications Union
ITU-I	ITU International

**I**

ITU-N  
ITU National

**L**

LIM  
Link Interface Module

Provides access to remote SS7, IP and other network elements, such as a Signaling Control Point (SCP) through a variety of signaling interfaces (DS0, MPL, E1/T1 MIM, LIM-ATM, E1-ATM, IPLIMx, IPGWx). The LIMs consist of a main assembly and possibly, an interface appliqué board. These appliqués provide level one and some level two functionality on SS7 signaling links.

Link  
Signaling Link

LNP  
Local Number Portability

LSS  
Local Subsystem

**M**

MAP  
Mobile Application Part

MCP  
Measurement Collection Processor

This application is used by the MCPM card for the Measurements Platform feature.

MCPM  
Measurement Collection and Polling Module

The Measurement Collection and Polling Module (MCPM) provides comma delimited core STP measurement data to a remote server for processing. The MCPM is an EDSM with 2 GB of memory running the MCP application.

**M**

MPS	<p>Multi-Purpose Server</p> <p>The Multi-Purpose Server provides database/reload functionality and a variety of high capacity/high speed offboard database functions for applications. The MPS resides in the General Purpose Frame.</p>
MSC	<p>Mobile Switching Center</p>
MSISDN	<p>Mobile Station International Subscriber Directory Number</p> <p>The MSISDN is the network specific subscriber number of a mobile communications subscriber. This is normally the phone number that is used to reach the subscriber.</p>
MSU	<p>Message Signaling Unit</p> <p>The SS7 message that is sent between signaling points in the SS7 network with the necessary information to get the message to its destination and allow the signaling points in the network to set up either a voice or data connection between themselves. The message contains the following information:</p> <ul style="list-style-type: none"><li>• The forward and backward sequence numbers assigned to the message which indicate the position of the message in the traffic stream in relation to the other messages.</li><li>• The length indicator which indicates the number of bytes the message contains.</li><li>• The type of message and the priority of the message in the signaling information octet of the message.</li></ul>

**M**

- The routing information for the message, shown in the routing label of the message, with the identification of the node that sent message (originating point code), the identification of the node receiving the message (destination point code), and the signaling link selector which the EAGLE 5 ISS uses to pick which link set and signaling link to use to route the message.

**N**

NAI	Nature of Address Indicator Standard method of identifying users who request access to a network.
NP	Number Plan

**O**

OAM	Operations, Administration, and Maintenance The generic load program (application) that operates the Maintenance and Administration Subsystem which controls the operation of the EAGLE 5 ISS.
OPC	Originating Point Code
OPS	Operator Provisioning System

**P**

PC	Point Code The identifier of a signaling point or service control point in a network. The format of the point
----	------------------------------------------------------------------------------------------------------------------

## P

code can be one of the following types:

- ANSI point codes in the format network indicator-network cluster-network cluster member (**ni-nc-ncm**).
- Non-ANSI domestic point codes in the format network indicator-network cluster-network cluster member (**ni-nc-ncm**).
- Cluster point codes in the format network indicator-network cluster-\* or network indicator-\*-\*.
- ITU international point codes in the format **zone-area-id**.
- ITU national point codes in the format of a 5-digit number (**nnnnn**), or 2, 3, or 4 numbers (members) separated by dashes (**m1-m2-m3-m4**) as defined by the Flexible Point Code system option. A group code is required (**m1-m2-m3-m4-gc**) when the ITUDUPPC feature is turned on.
- 24-bit ITU national point codes in the format main signaling area-subsignaling area-service point (**msa-ssa-sp**).

The EAGLE 5 ISS LNP uses only the ANSI point codes and Non-ANSI domestic point codes.

PDB

Provisioning Database

PDBA

Provisioning Database Application

There are two Provisioning Database Applications (PDBAs), one in EPAP A on each EAGLE 5 ISS. They follow an Active/Standby model. These

**P**

processes are responsible for updating and maintaining the Provisioning Database (PDB).

PDBI

Provisioning Database Interface

The interface consists of the definition of provisioning messages only. The customer must write a client application that uses the PDBI request/response messages to communicate with the PDBA.

PPP

Point-to-Point Protocol

**R**

RFC

Request for Comment

RFCs are standards-track documents, which are official specifications of the Internet protocol suite defined by the Internet Engineering Task Force (IETF) and its steering group the IESG.

RMTP

Reliable Multicast Transport Protocol

RN

Routing Number

RSP

Routeset Prohibited Test (Msg)

RSR

Reset Request

RTDB

Real Time Database

**S**

SCCP

Signaling Connection Control Part

## S

SOR	Support of Optimal Routing System Out of Service Request
SP	Service Provider Signaling Point
SS	Subsystem
SSN	Subsystem Number  The subsystem number of a given point code. The subsystem number identifies the SCP application that should receive the message, or the subsystem number of the destination point code to be assigned to the LNP subsystem of the EAGLE 5 ISS.  A value of the routing indicator portion of the global title translation data commands indicating that no further global title translation is required for the specified entry.
SSP	Subsystem Prohibited network management message.  Subsystem Prohibited SCCP (SCMG) management message. (CER)
STP	Signal Transfer Point  STPs are ultra-reliable, high speed packet switches at the heart of SS7 networks, which terminate all link types except F-links. STPs are nearly always deployed in mated pairs for reliability reasons. Their primary functions are to provide access to SS7 networks and to provide routing of signaling

## S

messages within and among signaling networks.

## T

TCAP	Transaction Capabilities Application Part
TCP	Transfer Control Protocol
TCP/IP	Transmission Control Protocol/Internet Protocol
TDM	Terminal Disk Module Time Division Multiplexing
TFA	TransFer Allowed (Msg)
TFP	TransFer Prohibited (Msg) A procedure included in the signaling route management (functionality) used to inform a signaling point of the unavailability of a signaling route.
True Point Code	The point code defining a destination in the Destination Point Code table.
TT	Translation Type. Resides in the Called Party Address (CdPA) field of the MSU and determines which service database is to receive query messages. The translation type indicates which Global Title Translation table determines the routing to a particular service database.

## U

UAM	Unsolicited Alarm Message.
UDP	User Datagram Protocol
UIM	Unsolicited Information Message

## V

V-Flex	<p>Voicemail Flexible Routing</p> <p>An advanced database application based on the industry proven EAGLE 5 ISS. Deployed as a local subsystem on the EAGLE platform, V-Flex centralizes voicemail routing.</p>
VMS	<p>Voice Mail Server</p> <p>Virtual Memory System</p> <p>A multi-user, multiprocessing virtual memory-based operating system designed for use in time sharing, batch processing, real time and transaction processing.</p>
VSCCP	<p>VxWorks Signaling Connection Control Part</p> <p>The application used by the Service Module card to support the G-Flex, G-Port, INP, AINPQ, EIR, A-Port, IGM, V-Flex, and LNP features. If the G-Flex, G-Port, INP, AINPQ, EIR, A-Port, IGM, V-Flex, or LNP feature is not turned on, and a Service Module card is present, the VSCCP GPL processes normal GTT traffic.</p>



## Index

100BASE-T Ethernet bus 15  
10BASE-T Ethernet bus 15

### A

active EPAP 15, 18, 23  
active EPAP RTDB process 18  
active/standby EPAP servers 17  
admonishments, documentation 5  
alw-card 109  
availability, documentation 4

### C

card loading interrupted or aborted 109  
CAUTION admonishment 5  
Coherent 22  
CSR, See Customer Service Request (CSR)  
Current 21  
Customer Care Center 5, 8  
    contact information 5  
    emergency response 8  
customer network 18  
Customer Service Request (CSR) 5  
Customer Support site  
    how to access 8  
customer's external provisioning system 18

### D

DANGER admonishment 5  
data from customer network 18  
database  
    loading complete 108  
    records 15  
database memory requirements 108  
DCBs 22  
destination point code 27  
device control blocks 22  
documentation 4, 5, 8  
    availability, packaging, and updates 4  
    Documentation Bulletins 5  
    electronic files 4  
    locate on Customer Support site 8  
    printed 4  
    Related Publications 4  
    Release Notice 4  
dual provisioning 18

### E

EAGLE 5 ISS mated application table 26  
Eagle Commands for V-Flex Feature 30  
Eagle Provisioning Application Processor 13  
EAGLE Provisioning Application Processor 15, 18  
EAGLE Provisioning Application Processors 17  
Eagle Service Module card databases 13  
electronic files, documentation 4  
emergency response, Customer Care Center 8  
ent-card 110  
entity PC 26  
entity point codes 26  
EPAP 13, 14, 15, 17, 18, 98  
    required hardware 98  
EPAP A 17  
EPAP A, Link A 20  
EPAP A, Link B 21  
EPAP architecture 18  
EPAP automatically updates PDB 18  
EPAP B 17  
EPAP B, Link A 21  
EPAP B, Link B 21  
EPAP network addresses 25  
EPAP-related features  
    required hardware 98  
ept-stat-epap 22  
Ethernet links 15

### F

force option 110

### G

Globalcast Communications 20

### H

hardware  
    MPS system 98  
    required for EPAP 98  
    Service Module cards 98  
    T1000 AS 98  
high-traffic situations 19

### I

import/export traffic 22  
incremental loading 21

Incremental update 21  
 incremental updates 21  
 inh-card 109, 110  
 inhibit LIMs 109  
 initializing Service Module cards 19  
 IP 20  
 IP Multicast 20

## L

LIMs denied SCCP service 109  
 load balancing 19  
 local provisioning terminal 18  
 locate documentation on Customer Support site 8  
 loss of connectivity 20

## M

maintenance application traffic 23  
 mated application table 26  
 mated EPAP system 14  
 mated MPS servers 14  
 mated pair configuration 18  
 memory requirements 108  
 modem for remote access 18  
 MPS 17  
 MPS platform 13  
 multi cast updates 18  
 Multi-Purpose Server 13  
 Multi-Purpose Server (MPS) hardware 17  
 multiple Service Modules 21  
 MySQL 18

## N

network addresses 25

## O

OAM provisioning 24  
 OPS 17  
 out-of-sync 26  
 out-of-sync condition 26  
 overlapping database updates 18

## P

packaging, documentation 4  
 PDB 17  
 PDBA 15, 22  
 PDBI 16, 17  
 platforms 14  
 printed documentation 4  
 provision Service Module cards 15  
 provision V-Flex 15  
 Provisioning Database 14, 17, 18

Provisioning Database Application 15  
 Provisioning Database Interface 17  
 provisioning Service Module cards 18

## R

real-time database 16  
 Realtime Database 17  
 RealTime Database 14  
 Related Publications 4  
 Release Notice 4  
 Reliable Multicast Transport Protocol-II 20  
 reloading multiple Service Modules 21  
 rept-stat-epap 107  
 rept-stat-sccp 107  
 rept-stat-sys 107, 108, 109  
 RMTP multicast 15  
 RMTP-II 20  
 route table 26  
 RS232 connection 16  
 RTDB 17  
 RTDB database 18

## S

send status message 21  
 Service Module 17  
 Service Module card polls 18  
 Service Module card provisioning module 15  
 Service Module cards 13, 98  
     required 98  
 Stage 1 loading 21  
 standby EPAP 15, 18, 23  
 subsystem numbers 26

## T

T1000 AS 98  
 TAC Regional Support Office 6  
 TCP/IP socket 20  
 TDM-resident data tables 108  
 TOPPLE admonishment 5  
 transitions of Service Module card 110

## U

UAMs messages 99  
 UDP 20  
 UIM message 26  
 updates, documentation 4  
 user interface traffic 22

## V

V-Flex  
     capability point code 12, 13

## Feature Manual - V-Flex

V-Flex (*continued*)  
    subsystem 12, 13  
V-Flex UAMs 99  
VSCCP 19

## W

WARNING admonishment 5

