

Tekelec EAGLE[®] 5
Integrated Signaling System

FTP-Based Table Retrieve Application (FTRA)
User Guide

910-4919-001 Revision B

April 2007



TEKELEC

**Copyright 2007 Tekelec.
All Rights Reserved
Printed in U.S.A.**

Notice

Information in this documentation is subject to change without notice. Unauthorized use or copying of this documentation can result in civil or criminal penalties.

Any export of Tekelec products is subject to the export controls of the United States and the other countries where Tekelec has operations.

No part of this documentation may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying or recording, for any purpose without the express written permission of an authorized representative of Tekelec.

Other product names used herein are for identification purposes only, and may be trademarks of their respective companies.

RoHS 5/6 - As of July 1, 2006, all products that comprise new installations shipped to European Union member countries will comply with the EU Directive 2002/95/EC "RoHS" (Restriction of Hazardous Substances). The exemption for lead-based solder described in the Annex will be exercised. RoHS 5/6 compliant components will have unique part numbers as reflected in the associated hardware and installation manuals.

WEEE - All products shipped to European Union member countries comply with the EU Directive 2002/96/EC, Waste Electronic and Electrical Equipment. All components that are WEEE compliant will be appropriately marked. For more information regarding Tekelec's WEEE program, contact your sales representative.

Trademarks

The Tekelec logo, EAGLE, G-Flex, G-Port, IP⁷, IP⁷Edge, IP⁷ Secure Gateway, and TALI are registered trademarks of Tekelec. TekServer is a trademark of Tekelec. All other trademarks are the property of their respective owners.

Patents

This product is covered by one or more of the following U.S. and foreign patents:

U.S. Patent Numbers:

5,008,929, 5,953,404, 6,167,129, 6,324,183, 6,327,350, 6,456,845, 6,606,379, 6,639,981, 6,647,113, 6,662,017, 6,735,441, 6,745,041, 6,765,990, 6,795,546, 6,819,932, 6,836,477, 6,839,423, 6,885,872, 6,901,262, 6,914,973, 6,940,866, 6,944,184, 6,954,526, 6,954,794, 6,959,076, 6,965,592, 6,967,956, 6,968,048, 6,970,542

Ordering Information

For additional copies of this document, contact your sales representative.

Table of Contents

Chapter 1. Introduction

Overview	1-2
Document Conventions	1-3
Documentation Packaging and Updates	1-3
Documentation Admonishments	1-3
Customer Care Center	1-4
Emergency Response	1-5

Chapter 2. Using FTRA

FTRA Initialization	2-2
Exit the FTRA	2-3
STP Connection Configuration Menu	2-5
Adding an STP Configuration Record	2-8
Displaying an Existing STP Configuration Record	2-13
Testing an STP Configuration Record	2-17
Connectivity Test Log File Menu	2-18
Modifying an Existing STP Configuration Record	2-23
Deleting an STP Configuration Record	2-26
Selecting the Current STP	2-27
Secure EAGLE 5 ISS Host Key Provisioning	2-29
FTP Server Configuration	2-35
Retrieve Database Tables from an STP	2-40
Retrieve Tables Window	2-40
Retrieve Tables Log	2-54
Retrieve Tables Log File Menu	2-56
Command Line Interface	2-61
Updating Database Tables in the Selected STP	2-68
Update Tables Log Window	2-78
The System Log	2-87
About FTRA Window	2-92
FTRA release 4.0	2-92
Change summary.	2-92
RTRV-STP Command.	2-93
Command line interface	2-95
Version Information	2-96
SSH/SFTP Error Codes	2-98
Troubleshooting Procedures	2-116

Index

List of Figures

Figure 1. FTP-Based Table Retrieve Application Window	2-2
Figure 2. File Menu in the FTP-Based Table Retrieve Application Window	2-3
Figure 3. Exit Confirmation Window	2-3
Figure 4. Exit Window	2-4
Figure 5. Edit Menu	2-5
Figure 6. STP Connection Configuration Menu Window (FTRA 4.0)	2-5
Figure 7. Invalid STP Name Error Message	2-8
Figure 8. Adding an STP Configuration Record (FTRA 4.0)	2-9
Figure 9. Invalid IP Address Error Message	2-10
Figure 10. Invalid STP User Name Error Message	2-10
Figure 11. Invalid STP Password Error Message	2-10
Figure 12. Invalid FTP User Name Error Message	2-11
Figure 13. Invalid FTP Password Error Message	2-11
Figure 14. STP Added Window	2-12
Figure 15. Selecting an STP Name from the STP Name Drop Down List (FTRA 4.0)	2-13
Figure 16. STP Name Selected from the STP Name Drop Down List (FTRA 4.0)	2-14
Figure 17. Selecting a STP Configuration Record by Typing in the STP Name Field (FTRA 4.0)	2-15
Figure 18. STP Configuration Record (FTRA 4.0)	2-16
Figure 19. STP Name Does Not Exist Error Message	2-16
Figure 20. Connectivity Test Log Window with No Errors	2-17
Figure 21. Connectivity Test Log Window with Errors	2-18
Figure 22. Command Complete Connectivity Test Window	2-18
Figure 23. File Menu in the Connectivity Test Log Window	2-19
Figure 24. Print Window	2-20
Figure 25. Save Window	2-21
Figure 26. Saved File Confirmation Window	2-21
Figure 27. Modifying STP Configuration Record Parameters (FTRA 4.0)	2-24

List of Figures

Figure 28. STP Data Modified Window	2-25
Figure 29. Modify Warning Window	2-25
Figure 30. Delete STP Window	2-26
Figure 31. STP Selection Change Window	2-27
Figure 32. Current STP Selected (FTRA 4.0)	2-28
Figure 33. IP Address Warning Message	2-29
Figure 34. FTP Server Configuration Menu in the FTP-Based Table Retrieve Application Window	2-35
Figure 35. FTP Server Configuration Menu Window	2-36
Figure 36. Invalid IP Address Error Message	2-37
Figure 37. Select Starting Directory Window	2-37
Figure 38. Invalid Subpath Window	2-38
Figure 39. FTP Server Configuration Example	2-38
Figure 40. FTP Server Data Set Window	2-39
Figure 41. GTT Warning Window	2-40
Figure 42. Retrieve Tables Window	2-41
Figure 43. Retrieve Table Log - Release Not Compatible Error	2-43
Figure 44. Commands Menu in the FTP-Based Table Retrieve Application Window	2-43
Figure 45. Selecting a Command	2-44
Figure 46. Selecting a Range of Commands	2-45
Figure 47. Selecting Multiple Commands	2-46
Figure 48. Adding a Command to the Selected Commands Box	2-47
Figure 49. Adding a Range of Commands to the Selected Commands Box	2-48
Figure 50. Adding Multiple Commands to Selected Commands Box	2-49
Figure 51. Command Selected to be Removed in the Selected Commands Box	2-50
Figure 52. Command Removed from the Selected Commands Box	2-50
Figure 53. Command Data Stored Window	2-51
Figure 54. Retrieving Database Tables from the Local Database	2-52
Figure 55. Retrieve Tables Log Window - Processing Retrieve Request	2-53
Figure 56. Command Complete Window Without Errors	2-53
Figure 57. Command Complete Window With Errors	2-54
Figure 58. Retrieve Tables Log Window without Errors	2-55

Figure 59. Retrieve Table Log with Errors	2-55
Figure 60. Retrieve Table Log with the RTRV-STP Command	2-56
Figure 61. File Menu in the Retrieve Tables Log Window	2-57
Figure 62. View Menu	2-58
Figure 63. Print Window	2-58
Figure 64. Save Window	2-59
Figure 65. Saved File Confirmation Window	2-60
Figure 66. FTTRA Windows Command Line Interface	2-62
Figure 67. FTTRA Windows Command Line Interface to modify STP data.	2-62
Figure 68. FTTRA UNIX Command Line Interface	2-63
Figure 69. FTTRA UNIX Command Line Interface to modify STP data.	2-63
Figure 70. FTTRA Windows Scheduled Task	2-64
Figure 71. FTTRA Windows Scheduled Task to modify STP data ...	2-64
Figure 72. UNIX cron job scheduled via crontab (note: last line shows FTTRA scheduled to run at 3am Monday through Friday	2-65
Figure 73. FTTRA wrapper script example for Unix (might be necessary if running from cron)	2-65
Figure 74. FTTRA wrapper script example on Unix for modifying STP configuration (might be necessary if running from cron)	2-66
Figure 75. Update Tables Window	2-68
Figure 76. Edit Menu	2-69
Figure 77. Select Window	2-70
Figure 78. Update Tables Window with a Command File Selected and Stop on Error Box Checked	2-71
Figure 79. Update Tables Log Window - Processing Retrieve Request	2-72
Figure 80. Must Enter Command Script File Name Message	2-72
Figure 81. Update Validation Complete Window without Errors	2-73
Figure 82. Update Validation Complete Window with Errors	2-74
Figure 83. Command Complete Window	2-74
Figure 84. Command File Editor Window	2-75
Figure 85. Command In progress, Cannot Close Window	2-76
Figure 86. Command File Editor with Invalid Command	2-76
Figure 87. File Menu in the Command File Editor Window	2-77

List of Figures

Figure 88. Command Complete Window	2-77
Figure 89. Update Tables Log Window after the Commit Command Completed	2-78
Figure 90. Update Tables Log	2-79
Figure 91. Update Tables Log with Stop on Error Box Checked in the Update Tables Window	2-80
Figure 92. Update Tables Log with Stop on Error Box NOT Checked Error in the Update Tables Window	2-81
Figure 93. Update Tables Log with Stop on Error Box NOT Checked Error in the Update Tables Window (continued)	2-82
Figure 94. File Menu in the Update Tables Log Window	2-83
Figure 95. View Menu	2-83
Figure 96. Print Window	2-84
Figure 97. Save Window	2-85
Figure 98. Saved Confirmation Window	2-86
Figure 99. System Log Window	2-87
Figure 100. File Menu in the System Log Window	2-88
Figure 101. View Menu	2-88
Figure 102. Print Window	2-89
Figure 103. Save Window	2-90
Figure 104. Saved Confirmation Window	2-91
Figure 105. Help Menu	2-92
Figure 106. Typical About FTRA Window	2-92
Figure 107. Retrieve Tables window with rtrv-stp command selected for retrieval.	2-93
Figure 108. Successful Retrieval Session for rtrv-stp command	2-94
Figure 109. Rtrv-stp Command unsupported on EAGLE release ..	2-94
Figure 110. STP data modified through CLI.	2-95
Figure 111. Invalid STP name	2-96
Figure 112. Invalid number of arguments.	2-96
Figure 113. About FTRA Display Window	2-97

List of Tables

Table 1. FTP-Based Table Retrieve Application Menu	
Description	2-2
Table 2. STP Connection Configuration Menu Description	2-6
Table 3. FTP Server Configuration Menu Window Descriptions ...	2-36
Table 4. Select Starting Directory Window Descriptions	2-38
Table 5. Retrieve Tables Window Description	2-41
Table 6. FTTRA – Eagle Compatibility Matrix	2-67
Table 7. Update Tables Window Description	2-69
Table 8. Select Window Descriptions	2-70
Table 9. Update Validation Complete Window Description	2-73
Table 10. FTP/SFTP/SSH Error Codes	2-98
Table 11. Generic Network Error Codes	2-113
Table 12. TCP Fault Tolerance Table for FTP/SFTP	2-119

List of Tables

Introduction

Overview	1-2
Document Conventions	1-3
Documentation Packaging and Updates.....	1-3
Documentation Admonishments.....	1-3
Customer Care Center	1-4

Overview

The FTP-Based Table Retrieve Application (FTRA) is designed in conjunction with the FTP Retrieve and Replace feature to transfer EAGLE 5 ISS database tables using an FTP session to a remote server for offline processing. The FTRA is a stand-alone application that interfaces with one or more STPs. Database tables can be retrieved from the EAGLE 5 ISS, using the EAGLE 5 ISS's retrieve commands. The output of these retrieve commands is converted to CSV (comma separated value) files. EAGLE 5 ISS commands in the form of a command file can be read into the FTRA where they are validated and sent to the selected STP. Logs are provided for event tracking and error message display.

The FTRA provides the following features through the use of a graphical user interface:

- STP Connection Configuration.
- STP Connectivity Test.
- FTP Server Configuration.
- Retrieving the EAGLE 5 ISS database tables with the results converted to CSV files.
- Automated or manual retrieval of database tables from multiple STPs with the command line interface. The results are converted to CSV files.
- Configuration provisioning for automated retrieval of database tables from multiple STPs.
- Validation of the command files before being sent to the STP
- Validation of STP database update command files using an offline database
- Command file editing
- Viewing the log files for event tracking and error message display.

Document Conventions

In order to clearly differentiate between references to objects, actions, literal entries, and user-supplied information, the following conventions are used in this user guide:

- Menu selections and buttons are shown in bold, and the steps in a menu path are represented with ">". For example:

Select **Edit > STP Connection Configuration** from the menu.

The **Add** button is not enabled when the **STP Connection Configuration** menu opens.

- Commands and entries that must be entered exactly as shown in this document are shown in the 10 point Courier bold font. For example:

Using a text editor (such as Notepad) add the following lines to the AUTOEXEC.BAT file:

```
SET FTRA_HOME="C:\<download_directory>"  
SET JRE_HOME="C:\Program Files\Java\j2re1.4.0_01"
```

- User-specific information is shown in italics and enclosed in "<>". For example, the name of the folder you wish to use as the download directory in the previous example is shown as <download_directory>.

Documentation Packaging and Updates

Customer documentation is updated whenever significant changes that affect EAGLE 5 ISS operation or configuration are made.

The document part number is shown on the title page along with the current revision of the document, the date of publication, and, if applicable, the software release that the document covers. The bottom of each page contains the document part number and the date of publication.

Documentation Admonishments

Admonishments are icons and text that may appear in this and other EAGLE 5 ISS manuals that alert the reader to assure personal safety, to minimize possible service interruptions, and to warn of the potential for equipment damage.

Following are the admonishments, listed in descending order of priority.



DANGER:

(This icon and text indicate the possibility of *personal injury*.)

**CAUTION:**

(This icon and text indicate the possibility of *service interruption*.)

**WARNING:**

(This icon and text indicate the possibility of *equipment damage*.)

Customer Care Center

The Customer Care Center offers a point of contact through which customers can receive support for problems that may be encountered during the use of Tekelec's products. The Customer Care Center is staffed with highly trained engineers to provide solutions to your technical questions and issues seven days a week, twenty-four hours a day. A variety of service programs are available through the Customer Care Center to maximize the performance of Tekelec products that meet and exceed customer needs.

To receive technical assistance, call the Customer Care Center at one of the following locations:

- Tekelec, UK

Phone: +44 1784 467 804

Fax: +44 1784 477 120

Email: ecsc@tekelec.com

- Tekelec, USA

Phone (within the continental US) 888-367-8552 (888-FOR-TKLC)
(outside the continental US) +1 919-460-2150.

Email: support@tekelec.com.

When your call is received, the Customer Care Center issues a Customer Service Report (CSR). Each CSR includes an individual tracking number. When a CSR is issued, the Customer Care Center determines the classification of the trouble. The CSR contains the serial number of the system, problem symptoms, and messages. The Customer Care Center assigns the CSR to a primary engineer, who will work to solve the problem. The Customer Care Center closes the CSR when the problem is resolved.

If a critical problem exists, the Customer Care Center initiates emergency procedures (see the following topic, "Emergency Response").

Emergency Response

If a critical service situation occurs, the Customer Care Center offers emergency response twenty-four hours a day, seven days a week. The emergency response provides immediate coverage, automatic escalation, and other features to ensure a rapid resolution to the problem.

A critical situation is defined as an EAGLE 5 ISS or LSMS problem that severely affects service, traffic, or maintenance capabilities, and requires immediate corrective action. Critical problems affect service or system operation, resulting in:

- Failure in the system that prevents transaction processing
- Reduction in EAGLE 5 ISS capacity or in EAGLE 5 ISS traffic-handling capability
- Inability to restart the EAGLE 5 ISS
- Corruption of the database
- Inability to perform maintenance or recovery operations
- Inability to provide any required critical or major trouble notification
- Any other problem severely affecting service, capacity, traffic, and billing. Maintenance capabilities may be defined as critical by prior discussion and agreement with the Customer Care Center.

Using FTRA

FTRA Initialization	2-2
Exit the FTRA	2-3
STP Connection Configuration Menu	2-5
Adding an STP Configuration Record.....	2-8
Displaying an Existing STP Configuration Record	2-13
Testing an STP Configuration Record.....	2-17
Modifying an Existing STP Configuration Record	2-23
Deleting an STP Configuration Record	2-26
Selecting the Current STP	2-27
Secure EAGLE 5 ISS Host Key Provisioning	2-29
FTP Server Configuration.....	2-35
Retrieve Database Tables from an STP	2-40
Command Line Interface	2-61
Updating Database Tables in the Selected STP	2-68
Update Tables Log Window	2-78
The System Log	2-87
About FTRA Window	2-92
SSH/SFTP Error Codes	2-98

FTRA Initialization

To start the FTRA, double-click the FTRA icon on the desktop. When the application starts, the **FTP-Based Table Retrieve Application** window is displayed. See Figure 1. The **Initializing** window opens and displays the message “Initializing, please wait.....” until the initialization process has been completed.

Figure 1. FTP-Based Table Retrieve Application Window

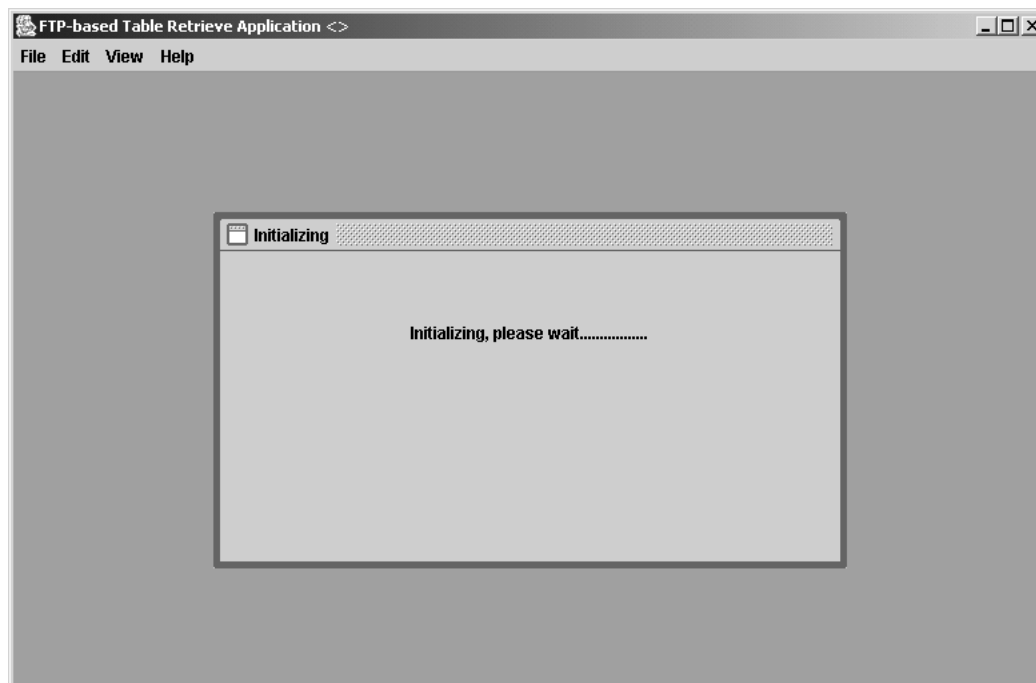


Table 1 shows the description of the menus in the **FTP-Based Table Retrieve Application** window.


Table 1. FTP-Based Table Retrieve Application Menu Description

Item	Description
File	Selects the Exit menu.
Edit	Selects the STP Connection Configuration menu, the FTP Server Configuration menu, or the Commands menu
View	Selects these logs: • The Retrieve Tables Log • The Update Tables Log • The System Log.
Help	Selects the About FTRA window.

Exit the FTRA

To close the **FTP-Based Table Retrieve Application** window and exit the FTRA, either select **File > Exit** from the **File** menu, see Figure 2, or click the close window button in the upper right hand corner of the window.

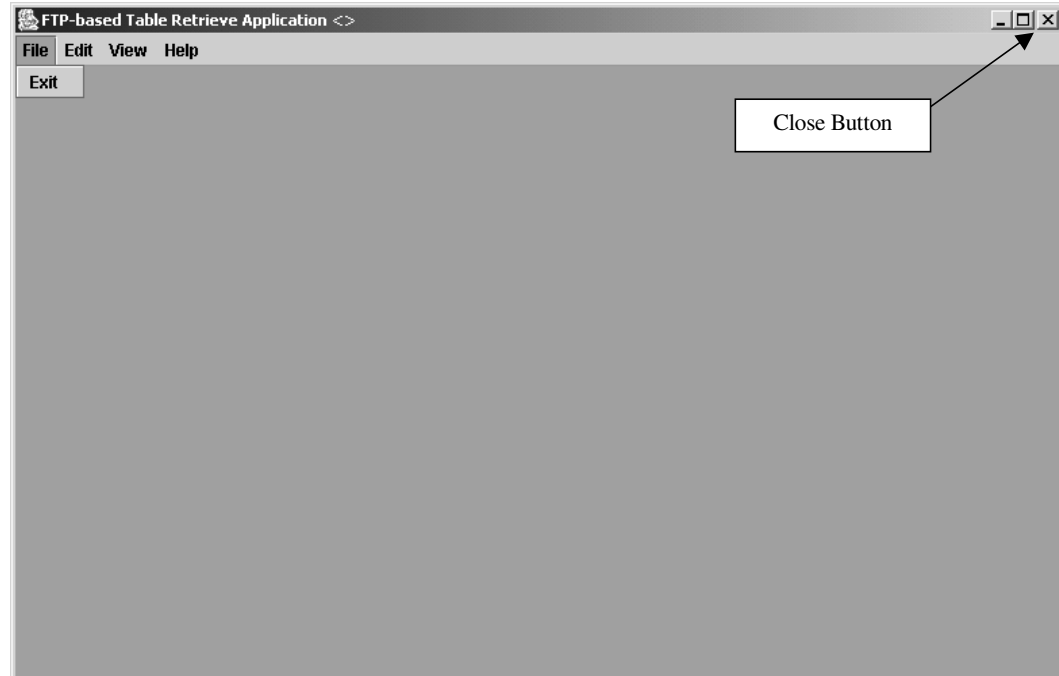Figure 2. File Menu in the FTP-Based Table Retrieve Application Window



The **Exit?** confirmation window (see Figure 3) opens with “You are about to exit. Continue?” Click **OK** to exit and close the application. The **Exit** window (see Figure 4 on page 4) is displayed until the Exit process is completed. To cancel the exit and resume using the application, click **Cancel**.

Figure 3. Exit Confirmation Window



Figure 4. Exit Window

STP Connection Configuration Menu

Before database tables can be retrieved from an STP, or command files can be sent to an STP, the STP must be defined as an STP configuration record in the STP Connection Configuration database. The STP configuration record is configured and selected using the **STP Connection Configuration Menu** window.

The **STP Connection Configuration Menu** window is displayed by selecting **Edit > STP Connection Configuration**. See Figure 5.

Figure 5. Edit Menu



Figure 6. STP Connection Configuration Menu Window (FTRA 4.0)

 A screenshot of the 'FTP-based Table Retrieve Application <STP 2>' window. The 'STP Connection Configuration Menu' sub-window is open. It contains the following fields and controls:

- 'Current STP Selected: STP 2' label.
- 'STP Name' dropdown menu with a 'Refresh' button.
- 'Primary IP Address' text field with a 'Test' button.
- 'Back-Up IP Address' text field with a 'Test' button.
- 'Secure Connection' checkbox.
- 'STP UserName' text field.
- 'STP Password' text field.
- 'FTP UserName' text field.
- 'FTP Password' text field.
- 'Use STP and FTP UserNames, Passwords for all STPs' checkbox.
- Bottom buttons: 'Select', 'Add', 'Modify', 'Delete', and 'Close'.

Table 2 shows the description of the fields, buttons, and boxes in the **STP Connection Configuration Menu** window.

Table 2. STP Connection Configuration Menu Description

Item	Description
Fields	
STP Name	Contains the STP Names. The STP name must contain at least one alphanumeric character and a maximum of 64 upper-case alphanumeric characters. The STP Name will always be entered in uppercase regardless of the Caps Lock key setting on your keyboard. This field also provides a drop down list for selecting stored STP configuration records.
Primary IP Address (FTRA 4.0)	The primary IP address of the associated STP (used for telnet sessions). The FTRA uses this IP address first when connecting to the STP. The primary IP address is the IP address of an IPSM in the associated EAGLE 5 ISS.
Backup IP Address (FTRA 4.0)	The backup IP address of the associated STP (used for telnet sessions). The FTRA uses this IP address when the connection using the primary IP address fails. The backup IP address should be the IP address of another IPSM in the same EAGLE 5 ISS.
STP UserName	The user name assigned to the user by the STP system administrator (used for telnet sessions).
STP Password	The password assigned to the user by the STP system administrator (used for telnet sessions).
FTP UserName	The FTP user name assigned to the user by the administrator (used for FTP). Any FTP user name with symbols must be enclosed within double quotation marks (for example, to specify the FTP user name mylogin#1 , you would enter " mylogin#1 ").
FTP Password	The FTP password assigned to the user by the administrator (used for FTP).
Buttons	
Refresh	Displays the data of the STP configuration record typed in the STP Name field. If an STP name is selected from the STP Name drop down list, the data fields are automatically displayed.
Test	Verifies that the FTRA can successfully connect and login to the EAGLE 5 ISS through an available telnet terminal at the specified IP address. For FTRA 4.0, the STP Connection Configuration Menu window has two Test buttons, one for the Primary IP address, and one for the Backup IP address.
Select	Selects the displayed STP name to be connected to the FTRA. The STP Selection Change window opens to verify if you want to proceed.
Add	Adds a newly entered STP configuration record and associated data to the STP Connection Configuration database.
Modify	Modifies the fields of the displayed STP configuration record.

Table 2. STP Connection Configuration Menu Description (Continued)

Item	Description
Delete	Deletes the displayed STP configuration record and associated data from the STP Connection Configuration database.
Close	Closes the STP Connection Configuration Menu window.
Secure Connection (FTRA 4.0)	Enables the FTRA to use a secure IP connection to the STP. To use a secure connection for the FTRA to EAGLE 5 ISS communication, make sure the EAGLE 5 ISS is running release 30.2 or greater and that the Eagle OA&M IP Security Enhancements feature is enabled and activated. This can be verified by entering the rtrv-ctrl-feat command at the EAGLE 5 ISS. If the Eagle OA&M IP Security Enhancements feature is not enabled or activated, perform the “Activating the Eagle OA&M IP Security Enhancements Controlled Feature” procedure in the <i>Database Administration Manual - System Management</i> and enable and activate the Eagle OA&M IP Security Enhancements feature. NOTE: This box should be unchecked if the Eagle OA&M IP Security Enhancements feature is not enabled or activated, and will not be enabled or activated. If this box is checked, the public key fingerprint for the EAGLE 5 ISS specified in this window must be installed onto the FTRA for the FTRA and the specified EAGLE 5 ISS to use a secure connection. After this STP is added to the STP Connection Configuration database, add the public key fingerprint to the FTRA by performing the “Secure EAGLE 5 ISS Host Key Provisioning” procedure on page 29.
Use STP and FTP UserNames, Passwords for all STPs Box	All the STP and FTP user names and passwords of all the provisioned STPs are changed to the user name and password of the displayed STP name. This change occurs only when the Add or Modify buttons are used.

Adding an STP Configuration Record

Procedure

1. Select **Edit > STP Connection Configuration** from the **FTP-Based Table Retrieve Application** window. See Figure 5 on page 5. The **STP Connection Configuration Menu** window opens. The **Add** button is not enabled when the **STP Connection Configuration Menu** window opens.
-

2. Enter the STP name in the **STP Name** field of the **STP Connection Configuration Menu** window. The STP name must contain at least one alphanumeric character, with a maximum of 64 upper-case characters (alphanumeric, letters and numbers, and spaces). or Figure 8 on page 9 (FTRA 4.0). The STP Name will always be entered in uppercase regardless of the Caps Lock key setting on your keyboard.

If characters other than alphanumeric characters or spaces are included in the STP name, the **Invalid STP Name** warning window is displayed. See Figure 7. If the **Invalid STP Name** window appears, click **OK**, and reenter the STP name in the **STP Name** field with the correct characters.

NOTE: When the new STP name is entered into the STP Name field, the **Add** button is enabled. If the STP name matches an existing STP name in the STP Connection Configuration database, the **Add** button is disabled. If you wish to display the existing STP names, go to the “Displaying an Existing STP Configuration Record” procedure on page 13.

NOTE: If the “Use STP and FTP UserNames and Passwords for all STPs” box is checked when the **Add** button is clicked, all the user names and passwords for all provisioned STP Names are changed to those of the added STP name.

NOTE: Existing STP configuration records can be changed. Go to the “Modifying an Existing STP Configuration Record” procedure on page 23 to change an existing STP configuration record.

Figure 7. Invalid STP Name Error Message

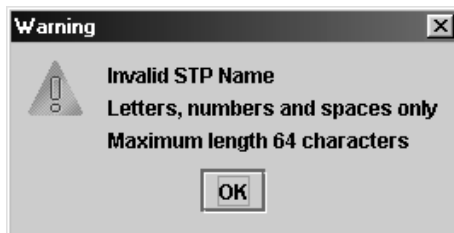


Figure 8. Adding an STP Configuration Record (FTRA 4.0)

The screenshot shows the 'FTP-based Table Retrieve Application <STP 2>' window. Inside, there is a sub-window titled 'STP Connection Configuration Menu'. The 'Current STP Selected' is 'STP 2'. The 'STP Name' field is a dropdown menu showing 'STP 6'. The 'Primary IP Address' field contains '10.2.3.4'. The 'Back-Up IP Address' field contains '10.2.3.5'. There are 'Refresh' and 'Test' buttons next to the IP address fields. The 'Secure Connection' checkbox is unchecked. The 'STP UserName' field contains 'eagle'. The 'STP Password' field is masked with asterisks. The 'FTP UserName' field contains 'eagle1'. The 'FTP Password' field is masked with asterisks. At the bottom, there is a checkbox 'Use STP and FTP UserNames, Passwords for all STPs' which is unchecked. Below the checkboxes are buttons for 'Select', 'Add', 'Modify', 'Delete', and 'Close'.

3. Enter the IP address want to connect to the STP in the **Primary IP Address** field, and a backup IP address in the **Backup IP Address** field. See Figure 8 on page 9 (FTRA 4.0).



CAUTION: If the backup IP address is not entered for FTRAs running 4.0, the FTRA will not be able to connect to the STP when the connection to the STP using the primary IP address fails. It is recommended that you specify a backup IP address for the STP.

If the primary and backup IP addresses (FTRA 4.0) are not entered correctly, the **Invalid IP Address** warning window is displayed. See Figure 9. If the **Invalid IP Address** window appears, click **OK**, and re-enter the IP address in the primary or backup IP addresses box (FTRA 4.0) in the **Primary IP Address** or **Backup IP Address** fields in the correct format.

Figure 9. Invalid IP Address Error Message



-
4. Enter the STP user name for this STP in the **STP UserName** field. The user name is assigned to the user by the STP system administrator for telnet sessions. See Figure 8 on page 9 (FTRA 4.0). If the format of the STP user name is not correct, the **Invalid STP User Name** warning window is displayed. See Figure 10. If the **Invalid STP User Name** window appears, click **OK**, and re-enter the STP user name in the **STP UserName** field.

Figure 10. Invalid STP User Name Error Message



-
5. Enter the STP password for this STP in the **STP Password** field. The password is assigned to the user by the EAGLE 5 ISS system administrator for telnet sessions. See Figure 8 on page 9 (FTRA 4.0). If the format of the STP password is not correct, the **Invalid STP Password** warning window is displayed. See Figure 11. If the **Invalid STP Password** window appears, click **OK**, and re-enter the STP password in the **STP Password** field.

NOTE: The STP Password field does not check for invalid EAGLE 5 ISS passwords. The passwords are validated by the EAGLE 5 ISS when the FTRA attempts a connection to the EAGLE 5 ISS. The requirements for the format of EAGLE 5 ISS passwords is shown in the output of the EAGLE 5 ISS's `rtrv-secu-dflt` command.

Figure 11. Invalid STP Password Error Message



6. Enter the FTP user name assigned by the FTP server administrator in the **FTP UserName** field. See Figure 8 on page 9 (FTRA 4.0). Any FTP user name with symbols must be enclosed within double quotation marks (for example, to specify the FTP user name `mylogin#1`, you would enter `"mylogin#1"`). If the format of the FTP user name is not correct, the **Invalid FTP User Name** warning window is displayed. See Figure 12. If the **Invalid FTP User Name** window appears, click **OK**, and re-enter the FTP user name in the **FTP UserName** field.

NOTE: Any firewall between the FTRA and the FTP server configured in the **FTP Server Configuration Menu** window (Figure 35 on page 36), must allow FTPs to the IP address specified in the **FTP Server Configuration Menu** window.

Figure 12. Invalid FTP User Name Error Message



7. Enter the FTP password assigned by the FTP server administrator in the **FTP Password** field. See Figure 8 on page 9 (FTRA 4.0). If the format of the FTP password is not correct, the **Invalid FTP Password** warning window is displayed. See Figure 13. If the **Invalid FTP Password** window appears, click **OK**, and re-enter the FTP password in the **FTP Password** field.

Figure 13. Invalid FTP Password Error Message



NOTE: If you are running FTRA 4.0 and not enabling a secure connection to the STP, skip this step and go to step 9.


8. To enable a secure connection between the FTRA and the STP being added in this procedure, click in the **Secure Connection** box.

Make sure the EAGLE 5 ISS is running release 30.2 or greater and that the Eagle OA&M IP Security Enhancements feature is enabled and activated. This can be verified by entering the `rtrv-ctrl1-feat` command at the EAGLE 5 ISS. If the Eagle OA&M IP Security Enhancements feature is not enabled or activated, perform the "Activating the Eagle OA&M IP Security Enhancements Controlled Feature" procedure in the *Database Administration*

Manual - System Management and enable and activate the Eagle OA&M IP Security Enhancements feature.

9. Click the **Add** button. See Figure 8 on page 9 (FTRA 4.0). The newly entered STP Name and associated data is added to the STP Connection Configuration database, and the **STP Added** window (Figure 14) is displayed. Click **OK** to continue.

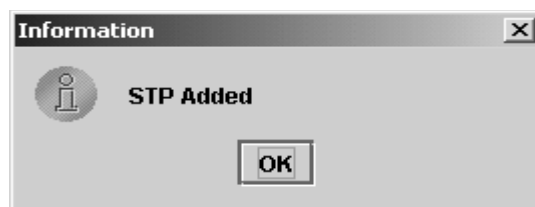Figure 14. STP Added Window



10. Verify the addition of the new STP name. See the "Displaying an Existing STP Configuration Record" procedure on page 13.
-

Displaying an Existing STP Configuration Record


An existing STP configuration record can be displayed by either selecting the STP Name from the STP Name drop down list, or by re-entering the STP name in the **STP Name** field in the **STP Connection Configuration Menu** window and clicking the **Refresh** button.

To Use the STP Name Drop Down List

Procedure

1. In the **STP Connection Configuration Menu** window, click on the **STP Name** drop down list. The **STP Name** drop down list opens. Move the cursor to the STP name to be selected. Click on the desired STP name in the drop down list. See Figure 15 on page 13 (FTRA 4.0).

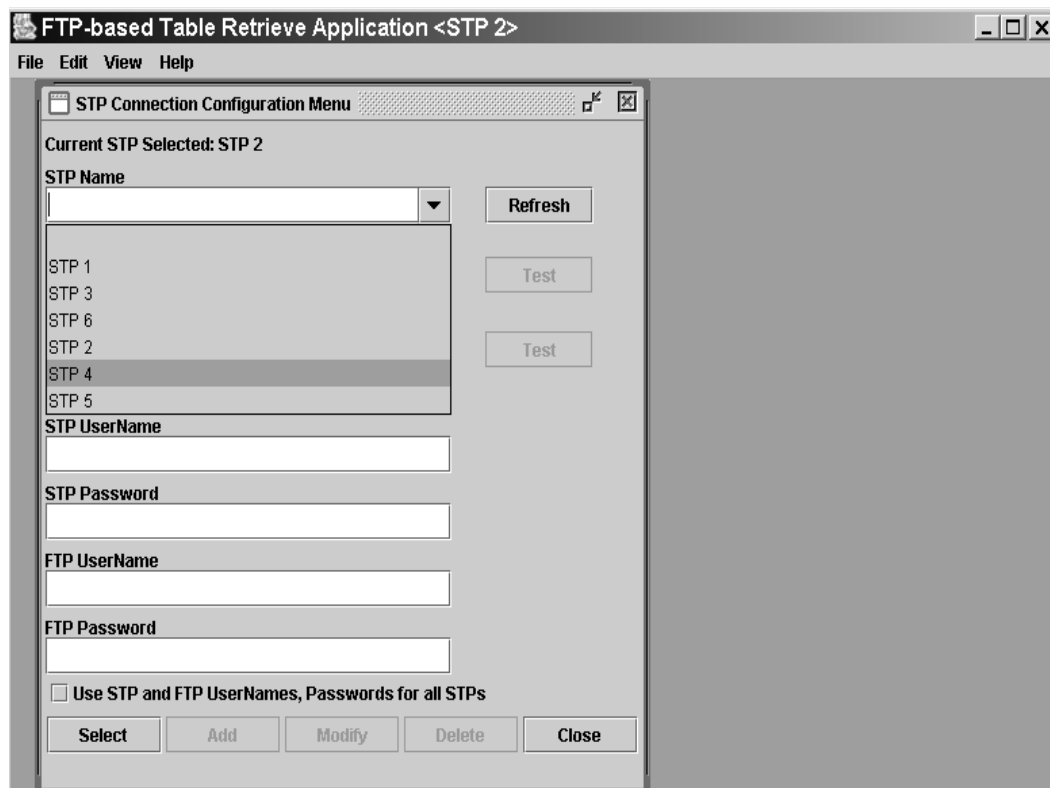Figure 15. Selecting an STP Name from the STP Name Drop Down List (FTRA 4.0)



2. When the STP name is selected in step 1, the STP configuration record for the specified STP is displayed. See Figure 16 on page 14 (FTRA 4.0). The **Refresh**, **Test**, **Select**, **Delete**, and **Close** buttons are enabled.

Figure 16. STP Name Selected from the STP Name Drop Down List (FTRA 4.0)

FTP-based Table Retrieve Application <STP 2>

File Edit View Help

STP Connection Configuration Menu

Current STP Selected: STP 2

STP Name
STP 4

Refresh

Primary IP Address
10.2.3.8

Test

Back-Up IP Address
10.2.3.9

Test

☒ Secure Connection

STP UserName
eagle

STP Password

FTP UserName
eagle1

FTP Password

☐ Use STP and FTP UserNames, Passwords for all STPs

Select Add Modify Delete Close

To Enter the STP Name

Procedure

1. Type the STP name in the **STP Name** field in the **STP Connection Configuration Menu** window. See Figure 17 on page 15 (FTRA 4.0). The **Refresh**, **Test**, **Select**, **Delete**, and **Close** buttons are enabled.

Figure 17. Selecting a STP Configuration Record by Typing in the STP Name Field (FTRA 4.0)

FTP-based Table Retrieve Application <STP 2>

File Edit View Help

STP Connection Configuration Menu

Current STP Selected: STP 2

STP Name
STP 5

Refresh

Primary IP Address

Test

Back-Up IP Address

Test

☐ Secure Connection

STP UserName

STP Password

FTP UserName

FTP Password

☐ Use STP and FTP UserNames, Passwords for all STPs

Select Add Modify Delete Close

2. Click the **Refresh** button. The STP configuration record for the specified STP is displayed. See Figure 18 on page 16 (FTRA 4.0).

Figure 18. STP Configuration Record (FTRA 4.0)

The screenshot shows a window titled "FTP-based Table Retrieve Application <STP 2>". Inside, there is a sub-dialog titled "STP Connection Configuration Menu". The "Current STP Selected" is "STP 2". The "STP Name" is set to "STP 5" in a dropdown menu, with a "Refresh" button next to it. The "Primary IP Address" is "10.2.3.10" with a "Test" button. The "Back-Up IP Address" is "10.2.3.11" with a "Test" button. The "Secure Connection" checkbox is checked. The "STP UserName" is "eagle", the "STP Password" is masked with "*****", the "FTP UserName" is "user2", and the "FTP Password" is masked with "*****". There is an unchecked checkbox for "Use STP and FTP UserNames, Passwords for all STPs". At the bottom are buttons for "Select", "Add", "Modify", "Delete", and "Close".

3. If the STP name was entered incorrectly, or is not in the STP configuration record database, the "STP Name does not exist" error message is displayed. See Figure 19.

Figure 19. STP Name Does Not Exist Error Message

Testing an STP Configuration Record

Procedure

1. Select **Edit > STP Connection Configuration** from the **FTP-Based Table Retrieve Application** window. See Figure 5 on page 5. The **STP Connection Configuration Menu** window opens.
2. Display the STP configuration record being modified. Go to the “Displaying an Existing STP Configuration Record” procedure on page 13.
3. Click the **Test** button. The **Connectivity Test Log** window opens. See Figure 20 and Figure 21 on page 18. The Connectivity Test Log contains the events of the Test process and any error messages that may have occurred. The **Connectivity Test Log** window opens at the start of the Test process and is automatically cleared whenever a subsequent Test process is initiated.

Figure 20. Connectivity Test Log Window with No Errors

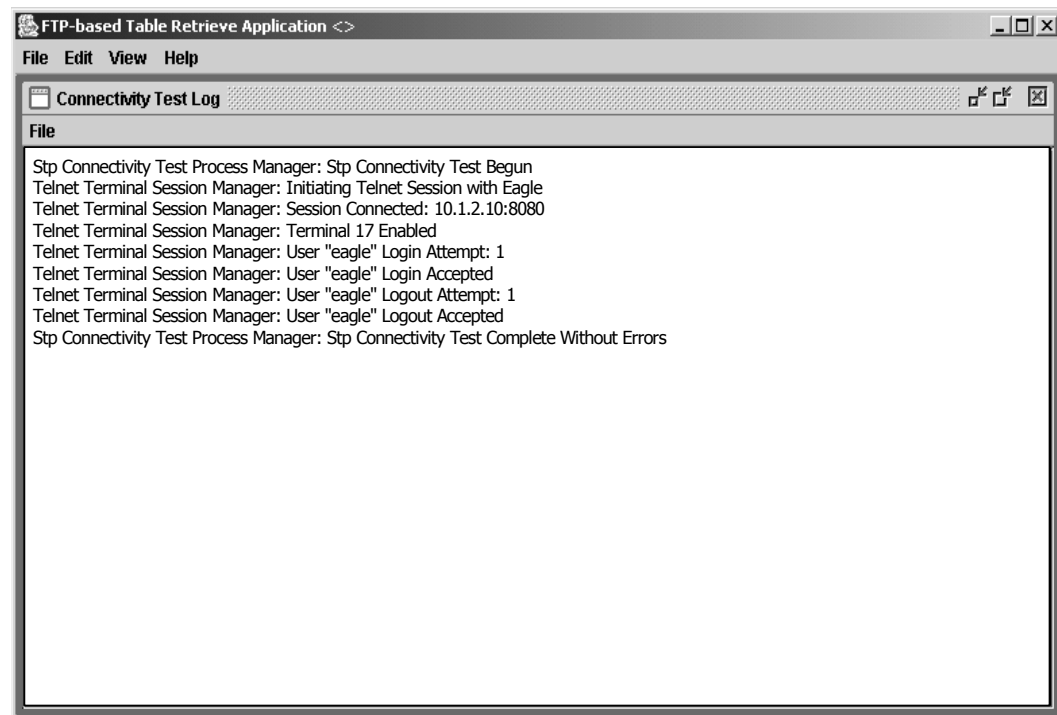
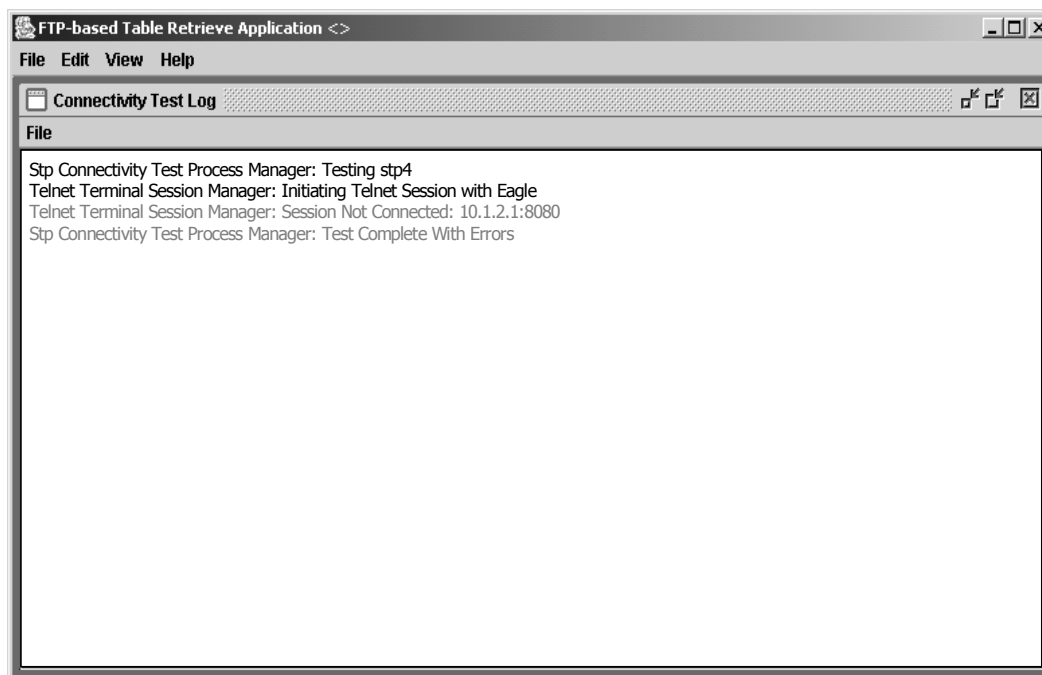
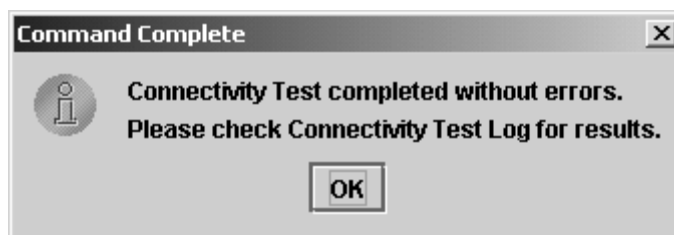


Figure 21. Connectivity Test Log Window with Errors

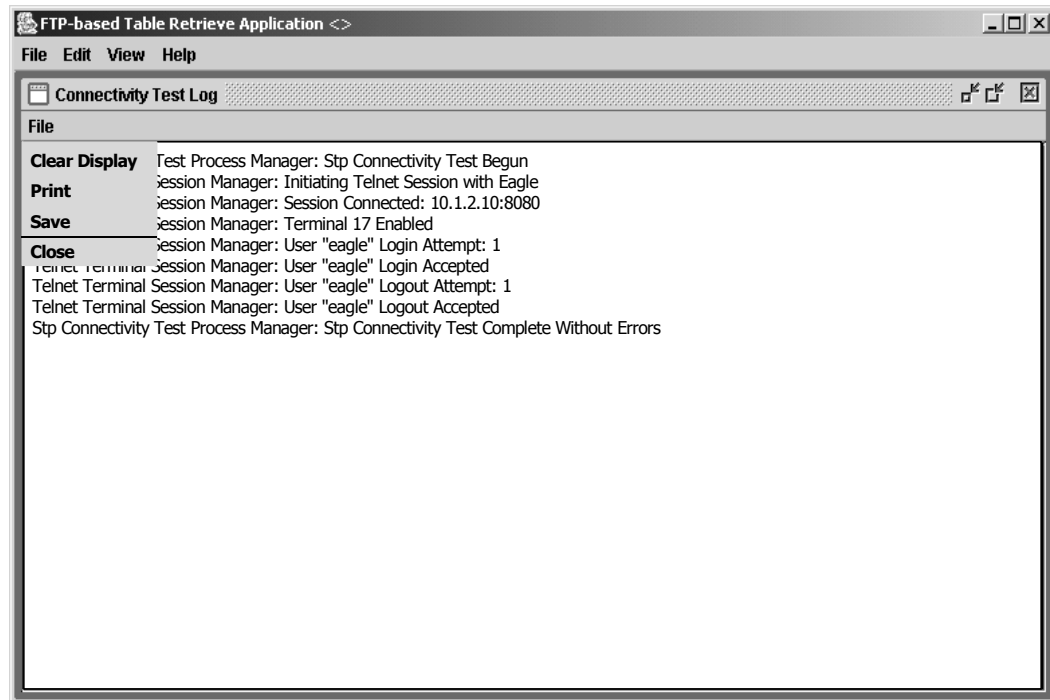
4. When the test is complete, the **Command Complete** window opens. See Figure 22. Click **OK** to continue.

Figure 22. Command Complete Connectivity Test Window

Connectivity Test Log File Menu

The **File** menu in the **Connectivity Test Log** window, shown in Figure 23 on page 19, provides these selections:

- Clearing the Connectivity Test Log display
- Printing the Connectivity Test Log
- Saving the Connectivity Test Log to a file
- Closing the **Connectivity Test Log** window.

Figure 23. File Menu in the Connectivity Test Log Window

Clearing the Connectivity Test Log Display

The display can be cleared, enabling new entries to be captured to the log. Once the log is cleared, the existing entries are lost unless the log is save to a file or printed before the display is cleared.


Procedure

1. Select **File > Clear Display** in the **Connectivity Test Log** window. See Figure 23. The Connectivity Test Log display clears.
-

Printing the Connectivity Test Log

Procedure

1. Select **File > Print** in the **Connectivity Test Log** window. See Figure 23 on page 19. The **Print** window opens. See Figure 24.

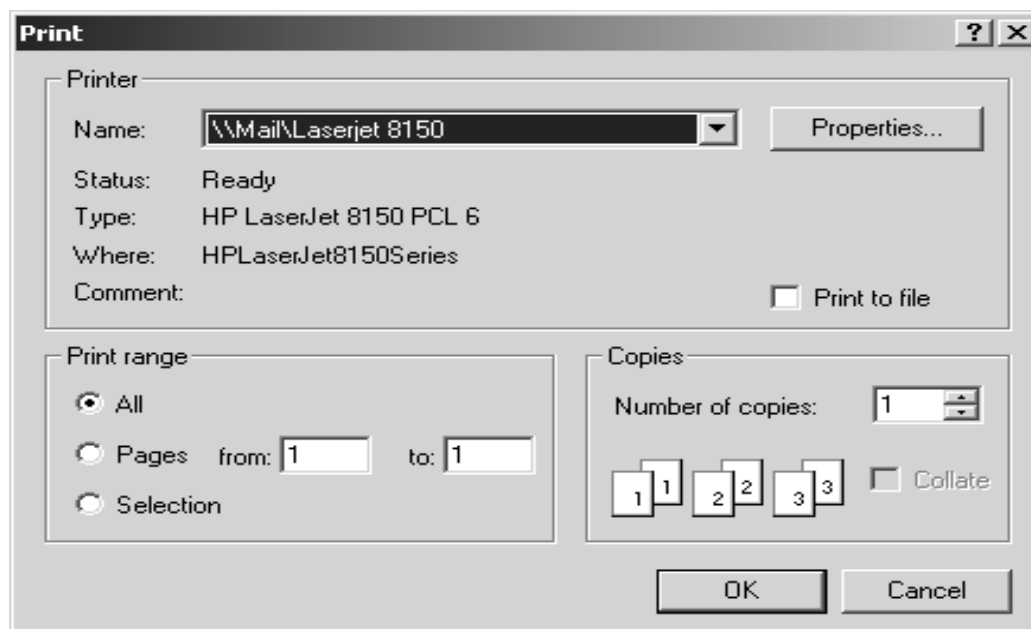Figure 24. Print Window


-
2. Configure the printer settings.
-
3. To print the Connectivity Test Log, click the **OK** button in the **Print** window. The current contents of the Connectivity Test Log are printed.
-
4. If you decide not to print the Connectivity Test Log, click the **Cancel** button in the **Print** window.
-

Saving the Connectivity Test Log to a File

Procedure

1. Select **File > Save** in the **Connectivity Test Log** window. See Figure 23 on page 19. The **Save** window opens. See Figure 25.

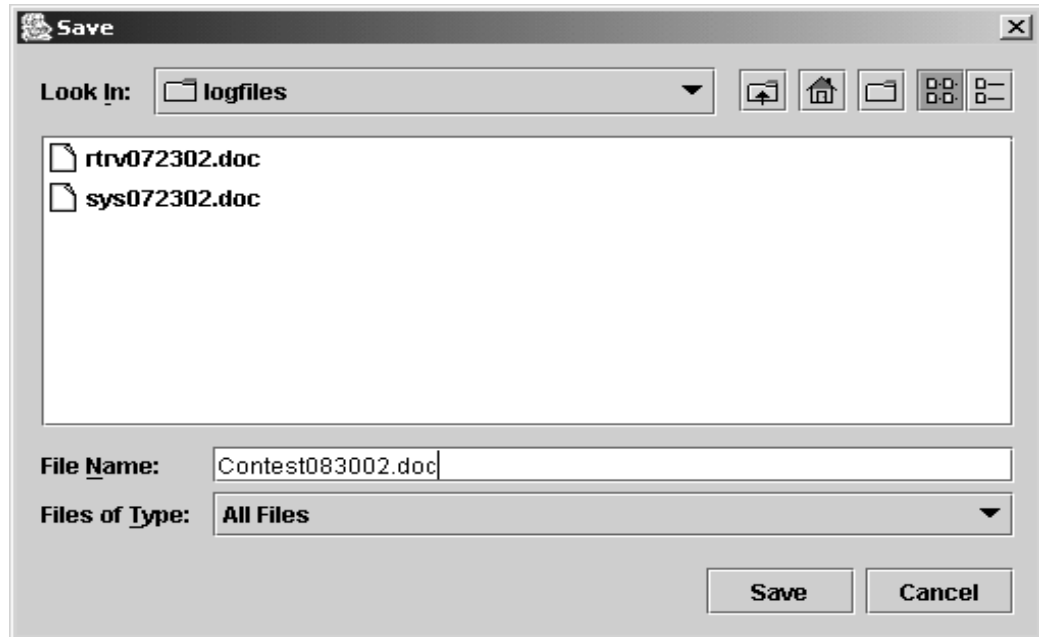Figure 25. Save Window




-
2. Select a location for the file, and enter the file name and file type (with either the .doc or .txt extensions).

NOTE: The .doc file type is recommended, although the user can use Microsoft Word to open the file, even if it was saved as a .txt file.

NOTE: If you decide not to save the file, do not perform steps 3 and 4, but click **Cancel** in the **Save** window.

3. Click the **Save** button. A **Saved** file confirmation window opens with “Data saved to file.” See Figure 26.

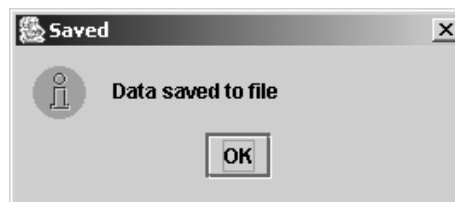Figure 26. Saved File Confirmation Window



-
4. To save the file, click **OK** in the **Saved** file confirmation window to continue.
-

Closing the Connectivity Test Log Window

Procedure

1. Select **File > Close** in the **Connectivity Test Log** window, or click the close window button in the upper right hand corner of the **Connectivity Test Log** window. See Figure 23 on page 19. The **Connectivity Test Log** window closes.
-

Modifying an Existing STP Configuration Record

Procedure

1. Select **Edit > STP Connection Configuration** from the **FTP-Based Table Retrieve Application** window. See Figure 5 on page 5. The **STP Connection Configuration Menu** window opens.
-

2. Display the STP configuration record being modified. Go to the “Displaying an Existing STP Configuration Record” procedure on page 13.
-


3. Select and change the STP configuration record parameters. The **Modify** button is enabled when new data is entered into any of the fields, or when the **Use STP and FTP UserNames and Passwords for all STPs** box is checked.

NOTE: The STP name cannot be changed.

If the IP address, STP user name, or STP password is not entered correctly, an error message is displayed. See Figure 9 on page 10, Figure 10 on page 10, or Figure 11 on page 10. If the FTP user name and FTP password are not entered, an error message is displayed. See Figure 12 on page 11 or Figure 13 on page 11.

4. To apply the changes, click the **Modify** button. See Figure 27 on page 24 (FTRA 4.0). The displayed STP configuration record is modified, and all fields are cleared. To confirm that the STP configuration data has been modified, the **STP Data Modified** window is displayed (Figure 28 on page 25). Click **OK** in the **STP Data Modified** window to continue.

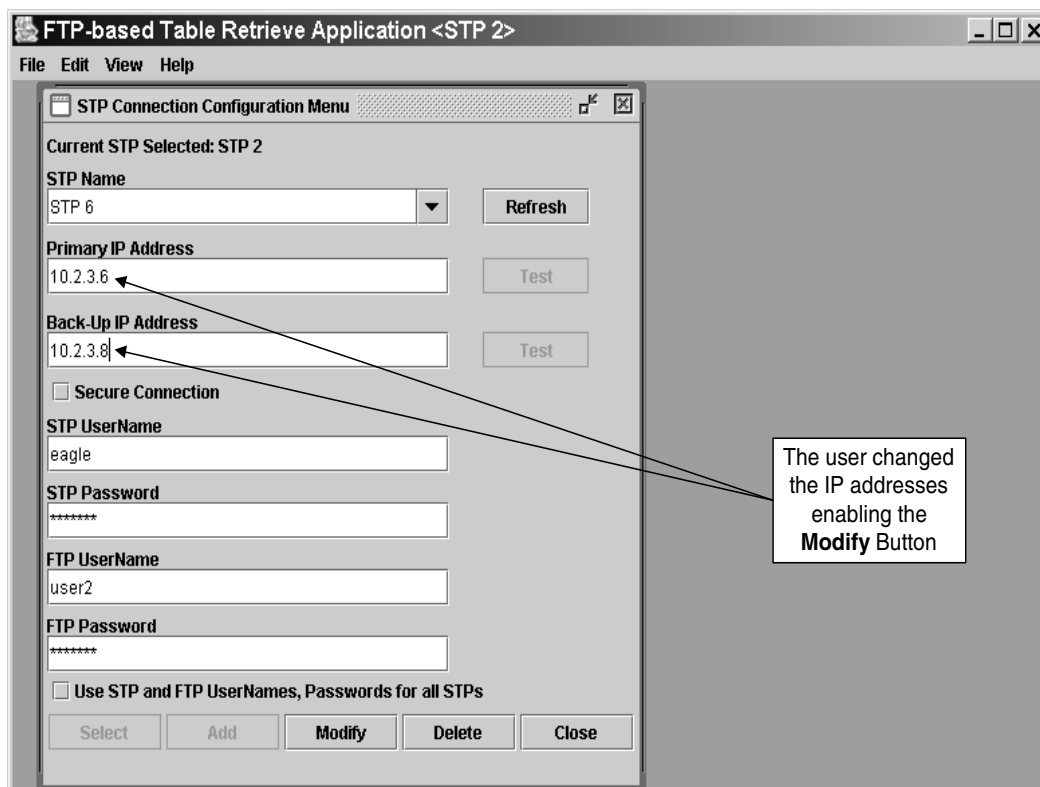Figure 27. Modifying STP Configuration Record Parameters (FTRA 4.0)



CAUTION: If the Use STP and FTP UserNames and Passwords for all STPs box is checked, then all user names and passwords for all STPs in the STP Configuration database are changed to the user name and password for the displayed STP.




CAUTION: It is recommended that the setting for the Secure Connection box is not changed, unless you have verified that the new setting for the Secure Connection box will match the state of the Eagle OA&M IP Security Enhancements feature on the STP. The state of the Eagle OA&M IP Security Enhancements feature can be verified by entering the `rtrv-ctrl-feat` command at the EAGLE 5 ISS. If the Eagle OA&M IP Security Enhancements feature is not enabled or activated, the Secure Connection box should be unchecked. If the Eagle OA&M IP Security Enhancements feature is enabled and activated, the Secure Connection box should be checked. To change the state of the Eagle OA&M IP Security Enhancements feature, perform the "Activating the Eagle OA&M IP Security Enhancements Controlled Feature" procedure in the *Database Administration Manual - System Management*.

Figure 28. STP Data Modified Window



NOTE: If the STP configuration record being changed is shown in the **Current STP Selected:** field, a **Modify Warning** window is displayed. See **Figure 29**.

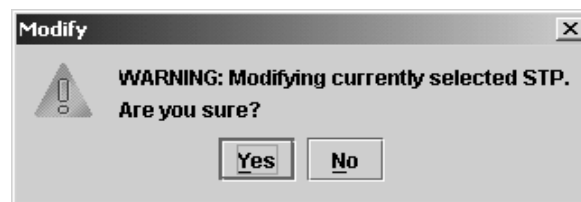Figure 29. Modify Warning Window



Click **Yes** to continue.

If you do not wish to apply the changes, click the **Refresh** button in the **STP Connection Configuration Menu** window. This resets the STP configuration record values.


-
5. Verify that the changes were made. See the “Displaying an Existing STP Configuration Record” procedure on page 13.
-

Deleting an STP Configuration Record

Procedure

1. Select **Edit > STP Connection Configuration** from the **FTP-Based Table Retrieve Application** window. See Figure 5 on page 5. The **STP Connection Configuration Menu** window opens.
2. Display the STP configuration record being deleted. Go to the “Displaying an Existing STP Configuration Record” procedure on page 13. The **Delete** button is enabled when an existing STP configuration record is displayed.
3. To delete the STP configuration record, click the **Delete** button. The **Delete STP** window opens. See Figure 30.

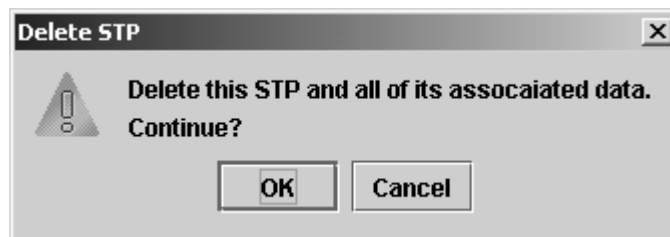Figure 30. Delete STP Window



Click **OK**, to delete the STP configuration record. The STP configuration record is deleted.

If you do not wish to delete the STP configuration record, click **Cancel**.

4. Verify the STP name is no longer in the STP Connection Configuration database. Go to the “Displaying an Existing STP Configuration Record” procedure on page 13.
-

Selecting the Current STP

Before retrieving database tables from an EAGLE 5 ISS, or sending commands to an EAGLE 5 ISS, that STP name must be shown in the **STP Connection Configuration Menu** window as the current STP. The **Current STP Selected:** indicator in the **STP Connection Configuration Menu** window shows which STP is the current STP.


Procedure

1. Display an existing STP configuration record. Go to the “Displaying an Existing STP Configuration Record” procedure on page 13.
-

2. Click the **Select** button.

If the selected STP is different from the STP shown as the current STP, the **STP Selection Change** window opens and displays “Warning: Selecting a different STP will purge existing table data. Do you want to proceed?” See Figure 31.

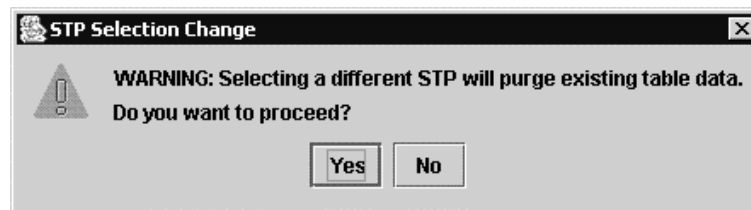Figure 31. STP Selection Change Window



3. To proceed and select the STP name as the current STP, click the **Yes** button in the **STP Selection Change** window. The existing data table is purged.

NOTE: To purge the data tables, a flag is set so that any of the existing table data already stored in the offline database will not be used.

The selected STP name appears in the title bar of the window, and **Current STP Selected: <STP Name>** appears in the **STP Connection Configuration Menu**. See Figure 32 on page 28 (FTRA 4.0).

Figure 32. Current STP Selected (FTRA 4.0)

FTP-based Table Retrieve Application <STP 6>

File Edit View Help

☐ STP Connection Configuration Menu

Current STP Selected: STP 6

STP Name
STP 6 Refresh

Primary IP Address
10.2.3.6 Test

Back-Up IP Address
10.2.3.7 Test

☒ Secure Connection

STP UserName
eagle

STP Password

FTP UserName
user2

FTP Password

☐ Use STP and FTP UserNames, Passwords for all STPs

Select Add Modify Delete Close

-
4. If you do not wish to use the STP name selected in step 2, click the **No** button in the **STP Selection Change** window. The current STP configuration record is displayed.
-

Secure EAGLE 5 ISS Host Key Provisioning


An EAGLE 5 ISS using secure connections has a unique host key for each IPSM in the EAGLE 5 ISS. This key is used by the FTRA (FTRA 4.0) to positively identify or authenticate each IPSM's telnet server on the EAGLE 5 ISS. The FTRA will not connect to an unauthenticated server. The FTRA authenticates the server by matching its preinstalled host key with the key received from the EAGLE 5 ISS when the connection between the EAGLE 5 ISS and the FTRA is made.

This procedure installs the public host key fingerprint, generated when the IPSM is installed into the EAGLE 5 ISS, re initialized using the **init-card** command, or when the IPSM is brought into service with the **alw-card** or **rst-card** commands, into the FTRA. This procedure must be performed for each IPSM on each EAGLE 5 ISS that the FTRA will connect to, but only for EAGLE 5 ISSs using secure connections to connect to the FTRA. This procedure must be performed before any secure connection between the EAGLE 5 ISS and the FTRA can be initiated.

NOTE: Once the IPSM is installed into the EAGLE 5 ISS, the public host key fingerprint for the IPSM will change only when power to the IPSM is disrupted by removing the IPSM from the shelf, then reinserting the IPSM into the shelf, or as the result of any event that interrupts power to the IPSM. Re initializing the IPSM will not change the public host key fingerprint for the IPSM. This procedure will have to be performed for each public host key fingerprint on the EAGLE 5 ISS that has changed.

The public host key fingerprint is added to the FTRA's **hosts.xml** file. If the public host key fingerprint has not been added to the FTRA's **hosts.xml** file, and you try to initiate a secure connection to the EAGLE 5 ISS, you will receive the following warning message (Figure 33).

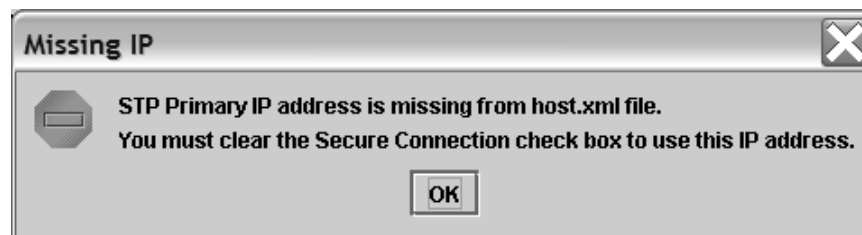Figure 33. IP Address Warning Message



If the warning message shown in Figure 33 is received, either clear the **Secure Connection** check box in the STP Configuration Record for the STP (see the "Modifying an Existing STP Configuration Record" procedure on page 23), or add the public host key fingerprint to the FTRA's **hosts.xml** file using the procedure on page 31.

The verification that the keys are installed on the FTRA is called strict host key checking. By default, strict host key checking is on. This enforces server (EAGLE 5 ISS) strong authentication, designed to provide security between the FTRA and the EAGLE 5 ISS. This also prevents a hostile server from tricking the FTRA into exposing any EAGLE 5 ISS login and password combinations.



CAUTION: Do not set strict host key checking to off, unless your network is in a controlled and secure environment. If you set strict host key checking to off, the Connectivity Test Log will warn you each time you try to connect that the EAGLE 5 ISS public host key fingerprint has not been added to the hosts.xml file on the FTRA.

To set the strict host key flag:

1. Open the application start file using any text file editor. On the Windows platform, open the **ftra.bat** file. On the UNIX platform, open the **ftra** file.

-
2. Insert into the application start file, one of these text strings, depending on whether you want strict host key checking on or off.

- **-DstrictHostKeyChecking=1** for setting strict host key checking to on (this is the default setting).
- **-DstrictHostKeyChecking=0** for setting strict host key checking to off

This text string can be inserted anywhere between the **%JRE_HOME%\bin\java** and **-cp** text strings as shown in the following example.

```
%JRE_HOME%\bin\java -DstrictHostKeyChecking=1 -Ddebuglevel=2
-DsshTools.home=%FTRA2_HOME% -Dftra2rootdir=%FTRA2_HOME% -cp ftra3.jar
com.tekelec.ftra.gui.InterfaceSelector %1
```

-
3. Save the changes and close the application start file.
-

Procedure

1. On the EAGLE 5 ISS, enter the **rtrv-trm** command. The location of the IPSM is shown in the **LOC** column with the **TELNET** terminal type.

This is an example of the possible output.

```
rlghncxa03w 05-09-17 15:08:45 GMT EAGLE5 34.0.0
```

TRM	TYPE	COMM	FC	TMOUT	MXINV	DURAL
1	VT320	9600-7-E-1	SW	30	5	99:59:59
2	KSR	9600-7-E-1	HW	30	5	INDEF
3	PRINTER	4800-7-E-1	HW	30	0	00:00:00
4	VT320	2400-7-E-1	BOTH	30	5	00:30:00
5	VT320	9600-7-O-1	NONE	30	5	00:00:30
6	VT320	9600-7-E-2	SW	30	9	INDEF
7	PRINTER	9600-7-N-2	HW	30	5	00:30:00
8	KSR	19200-7-E-2	BOTH	30	5	00:30:00
9	VT320	9600-7-E-1	SW	30	7	00:30:00
10	VT320	9600-7-E-1	HW	30	5	00:30:00
11	VT320	4800-7-E-1	HW	30	5	00:30:00
12	PRINTER	9600-7-E-1	HW	30	4	00:30:00
13	VT320	9600-7-O-1	NONE	30	5	00:30:00
14	VT320	9600-7-E-2	SW	30	8	00:30:00
15	VT320	9600-7-N-2	HW	30	5	00:30:00
16	VT320	9600-7-E-2	BOTH	30	3	00:30:00

TRM	TYPE	LOC	TMOUT	MXINV	DURAL	SECURE
17	TELNET	1111	60	5	00:30:00	yes
18	TELNET	1111	60	5	00:30:00	yes
19	TELNET	1111	60	5	00:30:00	yes
20	TELNET	1111	60	5	00:30:00	yes
21	TELNET	1111	60	5	00:30:00	yes
22	TELNET	1111	60	5	00:30:00	yes
24	TELNET	1111	60	5	00:30:00	yes

TRM	TRAF	LINK	SA	SYS	PU	DB	UIMRD
1	NO	YES	NO	YES	NO	YES	YES
2	NO	NO	NO	NO	NO	NO	NO
3	YES	YES	YES	NO	YES	YES	YES
4	YES	NO	NO	NO	NO	NO	NO
5	NO	YES	NO	NO	NO	NO	YES
6	NO	NO	YES	NO	NO	NO	NO
7	YES	YES	YES	YES	YES	YES	YES
8	NO	NO	NO	NO	YES	NO	YES
9	NO	YES	NO	NO	NO	YES	NO
10	NO	NO	NO	NO	NO	NO	YES
11	YES	YES	YES	YES	YES	YES	YES
12	YES	YES	YES	YES	YES	YES	YES
13	NO	YES	NO	NO	NO	NO	YES
14	NO	NO	YES	NO	NO	NO	NO
15	YES	YES	YES	NO	YES	YES	YES
16	NO	NO	NO	NO	YES	NO	YES
17	NO	NO	NO	NO	NO	NO	NO
18	NO	NO	NO	NO	NO	NO	NO
19	NO	NO	NO	NO	NO	NO	NO
20	NO	NO	NO	NO	NO	NO	NO
21	NO	NO	NO	NO	NO	NO	NO
22	NO	NO	NO	NO	NO	NO	NO
23	NO	NO	NO	NO	NO	NO	NO
24	NO	NO	NO	NO	NO	NO	NO

2. Display the IP address assigned to the IPSM using the **rtrv-ip-lnk** command, specifying the card location of the IPSM shown in step 1 and the **port=a** parameter. For this example, enter this command.

```
rtrv-ip-lnk:loc=1111:port=a
```

The following is an example of the possible output.

```
rlghncxa03w 05-09-17 15:08:45 GMT EAGLE5 34.0.0
LOC  PORT IPADDR          SUBMASK          DUPLEX SPEED MACTYPE AUTO MCAST
1111  A      192.168.54.96         255.255.255.0    HALF   100   DIX      NO   NO
```

NOTE: If the Security Administration (SA) setting for all the terminals assigned to the IPSM specified in this procedure is set to **YES**, see the **rtrv-trm** output in step 1, skip this step and go to step 4.

3. Change the Security Administration setting on the terminals assigned to the IPSM with the **chg-trm** command and specifying the number of the terminals whose Security Administration setting is **NO**, and with the **sa=yes** parameter.

```
chg-trm:sa=yes:trm=<TELNET terminal number>
```

When the **chg-trm** command has successfully completed, this message should appear.

```
rlghncxa03w 05-09-17 15:08:45 GMT EAGLE5 34.0.0
CHG-TRM: MASP A - COMPLTD
```

NOTE: When the IPSM is installed into the EAGLE 5 ISS, UIM 1493 is generated. UIM 1493 contains the DSA key fingerprint to be added to the **hosts.xml** file. If you recorded the DSA key fingerprint for the IPSM when UIM 1493 was generated, skip step 4 and go to step 5.



CAUTION: If you are performing step 4 from a telnet terminal, make sure the step is being performed from a telnet terminal that is not assigned to the IPSM being initialized. When the IPSM is initialized, you will lose all telnet connections supported by the IPSM being initialized.

4. Obtain the DSA key fingerprint for the IPSM by performing the **init-card** command and specifying the location of the IPSM. For this example, enter this command.

```
init-card:loc=1111
```

After the **init-card** command has been executed, UIM 1494 is generated. The DSA key fingerprint is at the end of the output, in the hexadecimal format, and shown in bold in this output example.

```
rlghncxa03w 05-09-17 15:08:45 GMT EAGLE5 34.0.0
0021.1494   CARD 1111      INFO      SSH Host Keys Loaded
           DSA Server Host Key FTRA-formatted Fingerprint=
           84 7c 92 8b c 7c d8 19 1c 6 4b de 5c 8f c5 4d
           Report Date:05-03-17   Time:15:08:45
```

NOTE: If you wish to change the public host key fingerprint on the IPSM, remove and reinsert the IPSM. The public host key fingerprint does not change until the IPSM loses power. However, contact the Customer Care Center before removing and reinserting the IPSM. Refer to page 4 for the contact information.

5. Edit the FTRA **hosts.xml** file (in the **\$FTRA_HOME/cfg** directory on Unix or **%FTRA_HOME%\cfg** folder on Windows), using any text file editor. Add the:

- IPSM IP address from the **rtrv-ip-lnk** output shown in step 2
- DSA public key fingerprint, shown in either the output of UIM 1493, when the IPSM was installed, or from the output of UIM 1494 when the **init-card** command was performed in step 4 in the following format:

```
<AllowHost HostName="<IPSM IP Address>" Fingerprint="767: <DSA public key fingerprint>" />
```

NOTE: The value 767 preceding the DSA public key fingerprint is the length of the key in bytes. On your EAGLE 5 ISS, this value may be different. refer to the FTRA Connectivity Test Log to verify this value. The outputs of UIM 1493 or 1494 do not contain this value.

The following is a sample **/ftra/cfg/hosts.xml** file before the new DSA fingerprint information is added.

```
=====
<?xml version="1.0" encoding="UTF-8"?>

<HostAuthorizations>
<AllowHost HostName="192.168.54.36" Fingerprint="767: 4a 9 ec d3 70 34 d2 91
f7 8b 75 a8 95 37 98 35"/>
<AllowHost HostName="192.168.54.216" Fingerprint="767: bc 76 ac 53 1e fd 72 16
3e 9c dc d7 23 25 6 59"/>
///-----
/// Add new fingerprints HERE, after last allowed host in the above list.
///-----
</HostAuthorizations>
=====
```

The sample **/ftra/cfg/hosts.xml** file after the new DSA fingerprint information is added.

```
=====
<?xml version="1.0" encoding="UTF-8"?>

<HostAuthorizations>
<AllowHost HostName="192.168.54.36" Fingerprint="767: 4a 9 ec d3 70 34 d2 91
f7 8b 75 a8 95 37 98 35"/>
<AllowHost HostName="192.168.54.216" Fingerprint="767: bc 76 ac 53 1e fd 72 16
3e 9c dc d7 23 25 6 59"/>
<AllowHost HostName="192.168.54.96" Fingerprint="767: 84 7c 92 8b c 7c d8 19
1c 6 4b de 5c 8f c5 4d"/>
///-----
/// Add new fingerprints HERE, after last allowed host in the above list.
///-----
</HostAuthorizations>
=====
```

NOTE: There should be no duplicate IP addresses in this file.

6. Save the file and exit the text editor.
-
7. A secure connection can now be established to the IP address used in this procedure. Either add the STP containing the IP address to the STP Configuration Record (see the “Adding an STP Configuration Record” procedure on page 8), or if the IP address is already defined in the STP Configuration Record, change the existing record for this STP with the IP address used in this procedure (see the “Modifying an Existing STP Configuration Record” procedure on page 23). Whether adding a new STP record, or changing an existing STP record, make sure the **Secure Connection** check box is checked.
-
8. After the STP record has been added or changed to use a secure connection, test the connection by performing the “Testing an STP Configuration Record” procedure on page 17. If the connection test is passed, the public host key fingerprint is successfully installed.

If the connection is refused, make sure that the key information for the EAGLE 5 ISS and the FTRA shown in the Connectivity Test Log match. The Connectivity Test Log shows both the key received from the EAGLE 5 ISS host and the key contained in the **hosts.xml** file for the EAGLE 5 ISS host. The following is an example from the Connectivity Test Log containing a host key mismatch. The key received from the EAGLE 5 ISS host is shown in bold. The key contained in the **hosts.xml** file is shown in bold underline.

```
2003-07-11 14:22:56.117: Stp Connectivity Test Process Manager: Testing STP11805011201
2003-07-11 14:22:56.227: Telnet Terminal Session Manager: Initiating Secure Telnet
Session with Eagle: 192.168.53.71:22
2003-07-11 14:22:56.808: HostKeyVerification: ERROR: Host 192.168.53.71 cannot be
authenticated due to a mismatched entry for this host in the hosts.xml file. The host key
supplied by 192.168.53.71 is: 768: bb 7d 79 a2 7d ae 5d 5a 45 e2 44 58 cd 8a bd 83.
The current allowed key for 192.168.53.71 is: 768: ab 7d 79 a2 7d ae 5d 5a 45 e2 44 58 cd
8a bd 83.
2003-07-11 14:22:56.828: HostKeyVerification: Connection rejected...onHostKeyMismatch
```

FTP Server Configuration

An FTP server must be configured on the EAGLE 5 ISS using the **FTP Server Configuration** menu before database tables can be retrieved from the EAGLE 5 ISS, or command files can be sent to the EAGLE 5 ISS.

NOTE: If the **Secure Connection** box in the **STP Connection Configuration Menu** window is checked, the IP address specified in the **FTP Server Configuration** menu must be the IP address of a secure FTP server. If the **Secure Connection** box in the **STP Connection Configuration Menu** window is not checked, the IP address specified in the **FTP Server Configuration** menu must be the IP address of a FTP server.

NOTE: Any firewall between the FTRA and the FTP server configured in the **FTP Server Configuration Menu** window (Figure 35 on page 36), must allow FTPs to the IP address specified in the **FTP Server Configuration Menu** window.


Procedure

1. Select **Edit > FTP Server Configuration** from the **FTP-based Table Retrieve Application** menu. See Figure 34.

Figure 34. FTP Server Configuration Menu in the FTP-Based Table Retrieve Application Window



The **FTP Server Configuration Menu** window opens. See Figure 35 on page 36 and Table 3 on page 36.

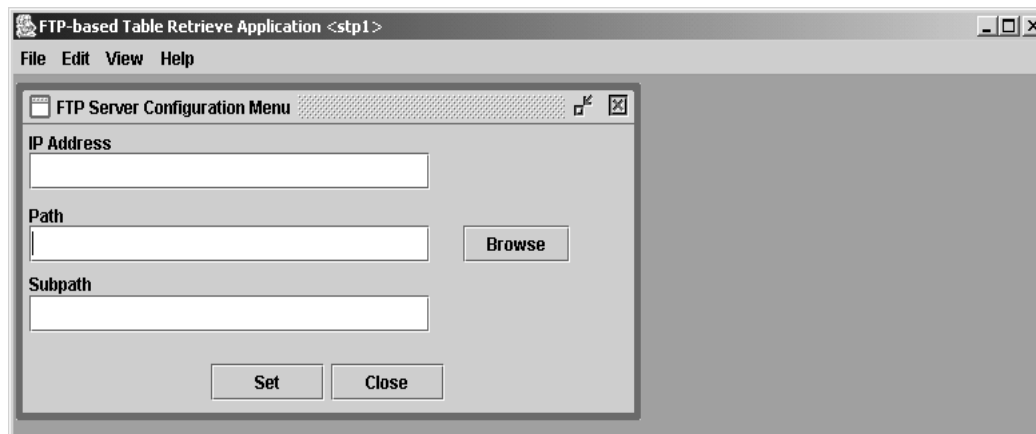Figure 35. FTP Server Configuration Menu Window**Table 3.** FTP Server Configuration Menu Window Descriptions

Item	Description
Fields	
IP Address	The IP Address of the associated STP
Path	The complete path to the data tables transfer directory on the STP. This directory must be given complete read/write/execute permissions for all users. From Windows, this is commonly administered from within the FTP server software. From Unix, this is done with the chmod command. Please refer to your PC system documentation or Unix man pages for full details on setting directory permissions.
Subpath	The value used by the path parameter of the EAGLE 5 ISS ent-ftp-serv/chg-ftp-serv commands. The subpath is relative to the user's default directory upon FTP login. A file separator ('\ or '/') is not used to begin the subpath string.
Buttons	
Browse	Opens the Select Starting Directory window to initiate a directory/file selection dialog for the data tables.
Set	Stores the FTP server configuration data.
Close	Closes the FTP Server Configuration Menu window.

- Enter the IP address of the STP in the **IP Address** field.

NOTE: If the format is not entered correctly, the Invalid IP Address warning window is displayed. See Figure 36 on page 37.

Figure 36. Invalid IP Address Error Message

3. Enter the path for the FTP temporary data table storage area or click the **Browse** button.

If the **Browse** button is clicked, the **Select Starting Directory** window opens to select the location for the temporary data table storage area to be entered in **Path** field. See Figure 37 and Table 4 on page 38.

This directory must be given complete read/write/execute permissions for all users. From Windows, this is commonly administered from within the FTP server software. From Unix, this is done with the **chmod** command. Please refer to your PC system documentation or Unix **man** pages for full details on setting directory permissions.

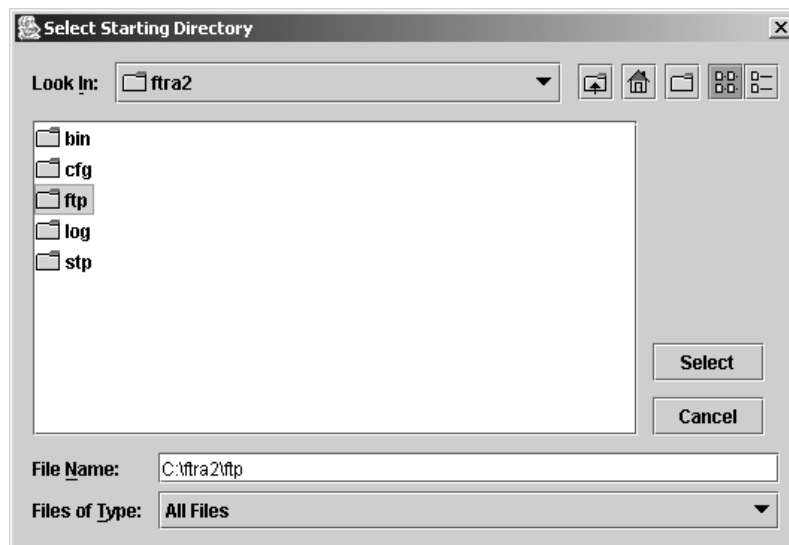
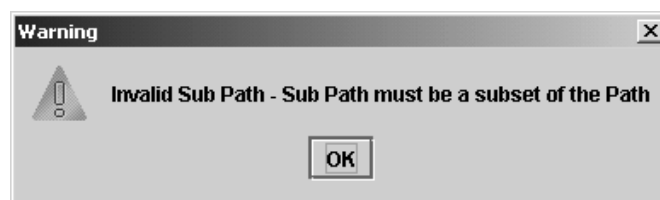
Figure 37. Select Starting Directory Window


Table 4. Select Starting Directory Window Descriptions

Item	Description
Fields	
Look in:	A drop down menu that allows the user to browse through the directory structures.
File Name:	The name of the file to be selected.
Files of type:	A drop down menu that allows the user to select all files of a particular type.
Buttons	
Select	Takes the contents of the File Name field and loads it into the Path field of the menu
Cancel	Closes the Select Starting Directory window.

-
4. Enter the Subpath. The subpath must always be the last part of the path. The subpath is relative to the user's default directory upon FTP login. A file separator ('\ ' or '/') is not used to begin the subpath string. If an invalid Subpath is entered, a warning window opens. See Figure 38.

Figure 38. Invalid Subpath Window

-
5. Click the **Set** button. See Figure 39

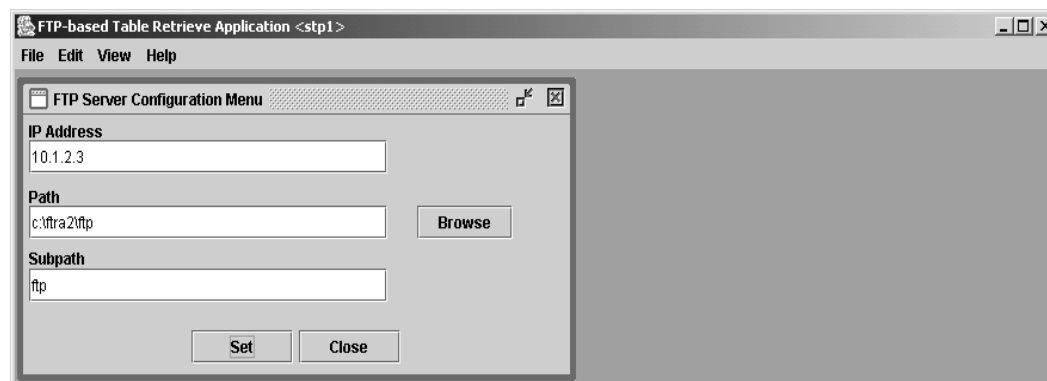Figure 39. FTP Server Configuration Example

The **FTP Server Data Set** window opens. See Figure 40.

Figure 40. FTP Server Data Set Window



Click **OK** to continue.

Retrieve Database Tables from an STP

Retrieve Tables Window

The **Retrieve Tables** window (see Figure 42 on page 41) is used to select the database tables you wish to retrieve from the selected STP. The **Retrieve Tables** window contains a list of predefined retrieve commands. Any number of the retrieve commands can be selected from the **Command List** box and moved to the **Selected Commands** box. Clicking the **Retrieve** button causes the database tables associated with the selected retrieve commands to be transferred from the selected STP.

The **Retrieve from STP** and **Retrieve from Local Database** buttons determine whether new database tables are retrieved from the selected STP or if existing tables already retrieved from that STP will be used. If no tables exist for the selected STP, the **Retrieve from Local Database** button will be grayed out.

The output from the retrieve commands is converted to CSV files. When the retrieve operation is completed, the **Command Complete** window opens notifying the user if the retrieve was executed with or without errors. The Retrieve Tables Log opens allowing the user to view the events.



CAUTION: With FTRA 4.0, if you attempt to retrieve and convert the database tables for these GTT commands (`rtrv-tt`, `rtrv-gtt`) and these EGTT commands (`rtrv-gttset`, `rtrv-gttset`, `rtrv-gta`) in the same retrieve tables request, you will receive a warning (Figure 41) that errors can be caused by attempting to retrieve and convert the GTT and EGTT database tables from the same EAGLE 5 ISS.

You may only retrieve and convert the tables corresponding to which feature is on, GTT or EGTT. If the EGTT feature is on, shown in the `rtrv-feat` output, the database tables for the `rtrv-gttset`, `rtrv-gttset`, and `rtrv-gta` commands can be retrieved and converted. If the EGTT feature is off, the database tables for the `rtrv-tt` and `rtrv-gtt` commands can be retrieved and converted.

The errors will be caused when the retrieved GTT and EGTT database tables are converted to CSV files. Because only one set of the database tables, GTT or EGTT, can be retrieved, only that set of the database tables can be converted. The error will occur when the attempt is made to convert that database tables that could not be retrieved.

Figure 41. GTT Warning Window

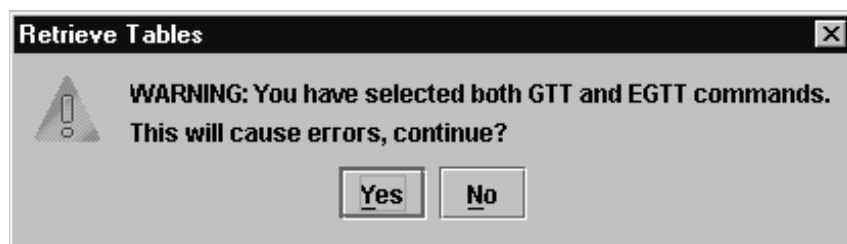


Figure 42. Retrieve Tables Window

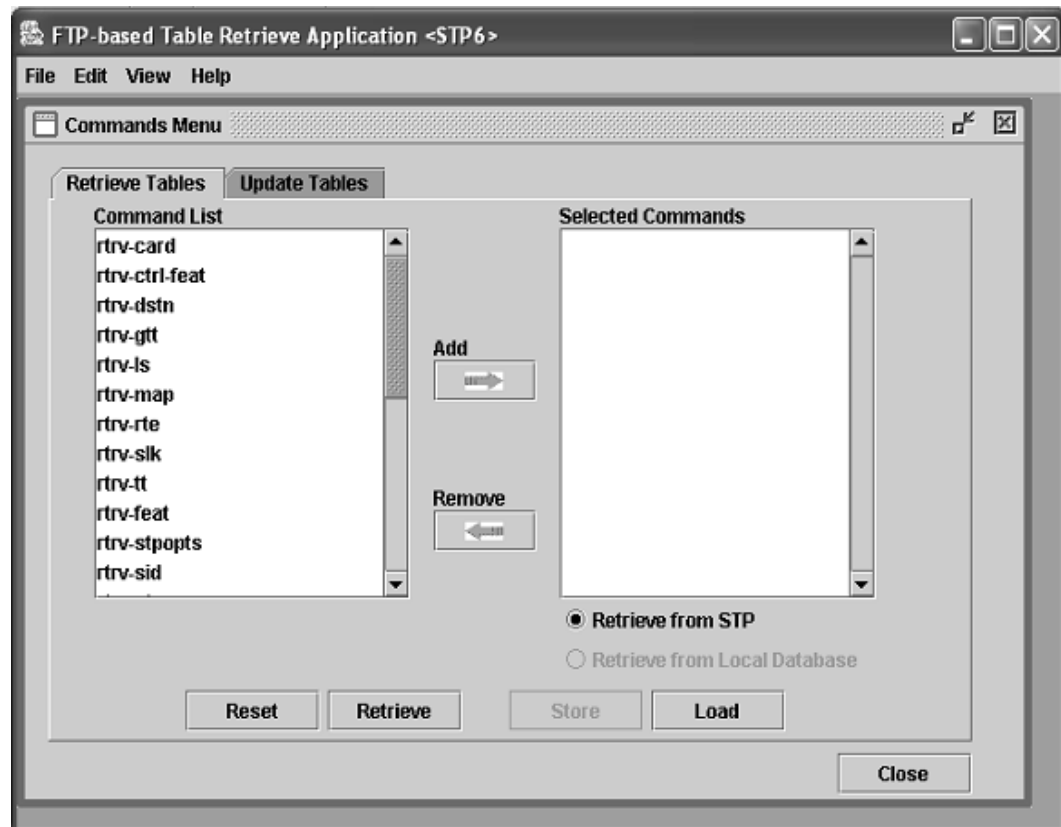


Table 5 on page 41 shows the description of the fields and buttons in the **Retrieve Tables** window.

Table 5. Retrieve Tables Window Description

Item	Description
Fields	
Command List	Contains a predefined list of retrieve commands.
Selected Commands	These commands are used to determine which database tables are retrieved from the selected STP. From one to all of the retrieve commands can be selected for retrieval.
Buttons	
Add	Moves the highlighted commands from the Command List box to the Selected Commands box.

Table 5. Retrieve Tables Window Description (Continued)

Item	Description
Remove	Moves any highlighted commands in the Selected Commands box back to the Command List box and places them in the Command List box in alphabetical order.
Reset	Moves all commands in the Command List box to the Selected Commands box. All highlights in the Selected Commands box are removed.
Retrieve	Initiates the retrieval of all the selected database tables represented by the selected retrieve commands. The database tables are transferred using an FTP connection and converted to CSV files.
Store	Stores the commands in the Selected Commands box which will be used by the Command Line Interface. This list is maintained even when the FTRA is shut down and restarted.
Load	Loads the commands into the Selected Commands box which are currently stored for Command Line Interface usage. This allows the user to verify rtrv commands which will be executed by the Command Line Interface.
Retrieve from STP	Retrieves the database tables, based on the selected retrieve commands, from the selected STP instead of using the tables previously retrieved.
Retrieve from Local Database	When selected, the FTRA uses the database table previously retrieved from the selected STP.
Close	Closes the Commands Menu window.

In FTRA 4.0 the EAGLE 5 ISS release 32.0 and later are supported if that release supports CSV file output.

When a Retrieve Tables command is performed, FTRA 4.0 verifies that the EAGLE 5 ISS is running one of the supported releases. If the EAGLE 5 ISS release is not supported, an error message is displayed and the Retrieve Tables command is terminated. See Figure 43.

Figure 43. Retrieve Table Log - Release Not Compatible Error

If the EAGLE 5 ISS release is supported, the Retrieve Tables command is performed and operations on the FTRA can continue.


Procedure

1. Select **Edit > Commands > Retrieve Tables** from the **FTP-Based Table Retrieve Application** window. See Figure 44. The **Retrieve Tables** window opens. See Figure 42 on page 41.


Figure 44. Commands Menu in the FTP-Based Table Retrieve Application Window

2. To select commands in the **Command List** box of the **Retrieve Tables** window, perform one of these steps: To select a single command, click on the command and it is highlighted. See Figure 45.

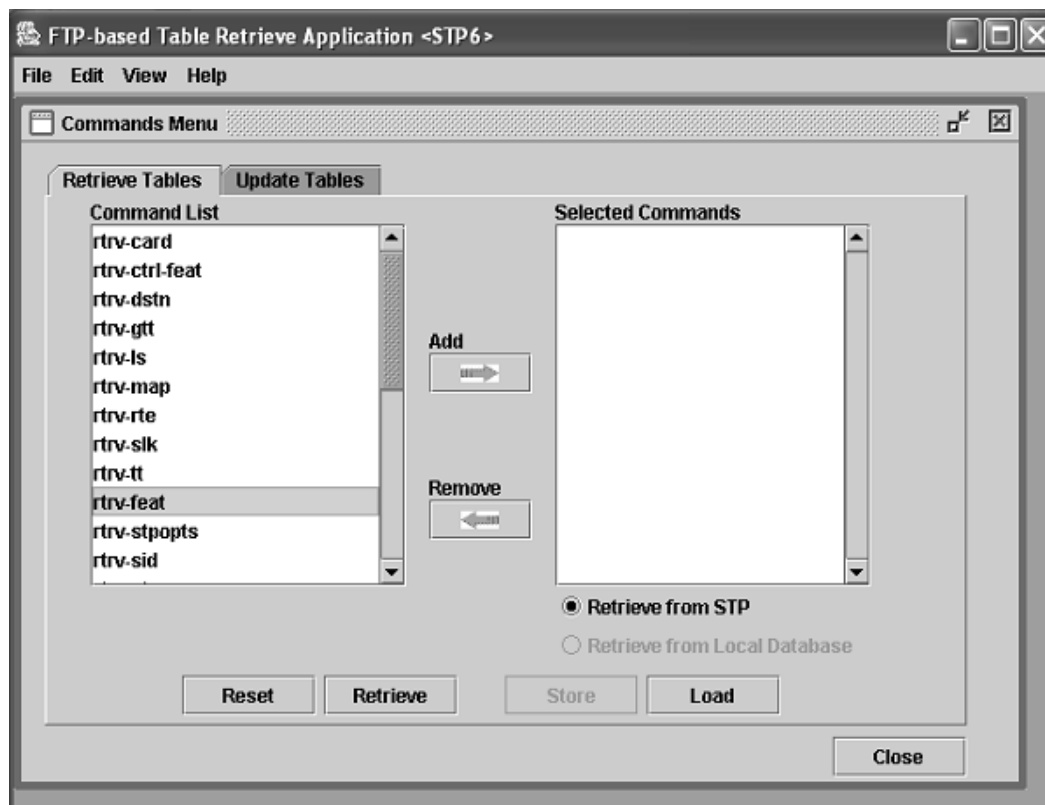Figure 45. Selecting a Command




- a. To select a range of commands, click on the first command and while holding down the Shift key, click on the last command to be selected. All the commands in between the selected commands are highlighted, along with the selected commands. See Figure 46.

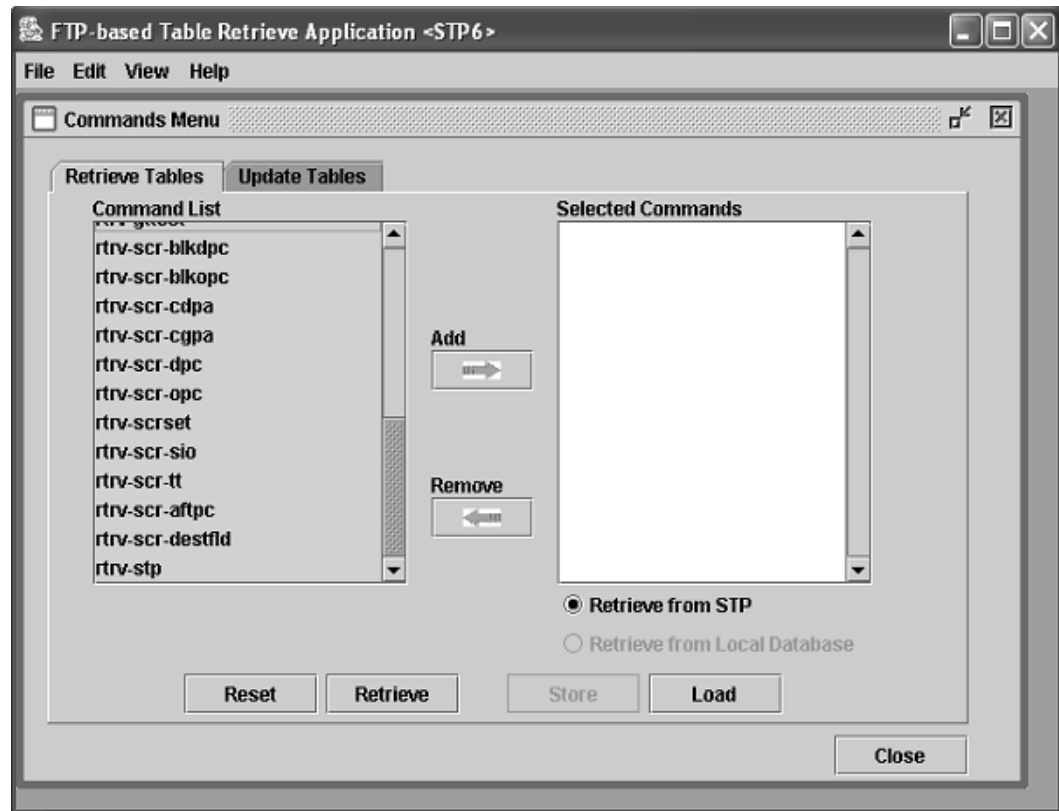Figure 46. Selecting a Range of Commands

- b. To select multiple commands, select the first command, then hold down the Ctrl key and click on each of commands to be selected. The selected commands are highlighted. See Figure 47 on page 46.

NOTE: If you have selected any of these GTT commands (rtrv-tt, rtrv-gtt) and these EGTT commands (rtrv-gttset, rtrv-gttset, rtrv-gta) in substeps b or c, see the Caution on page 40.

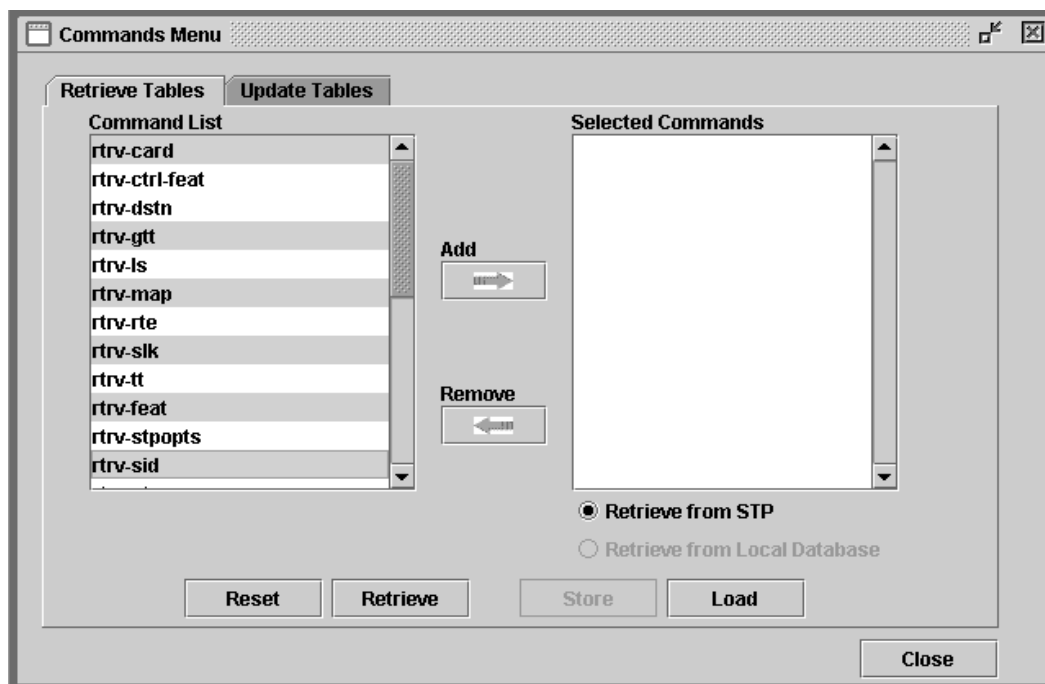Figure 47. Selecting Multiple Commands

3. To move the commands selected in step 2 to the **Selected Commands** box, click the **Add** button. The commands are moved to **Selected Commands** box. See Figure 48, Figure 49 on page 48, and Figure 50 on page 49.

Figure 48. Adding a Command to the Selected Commands Box

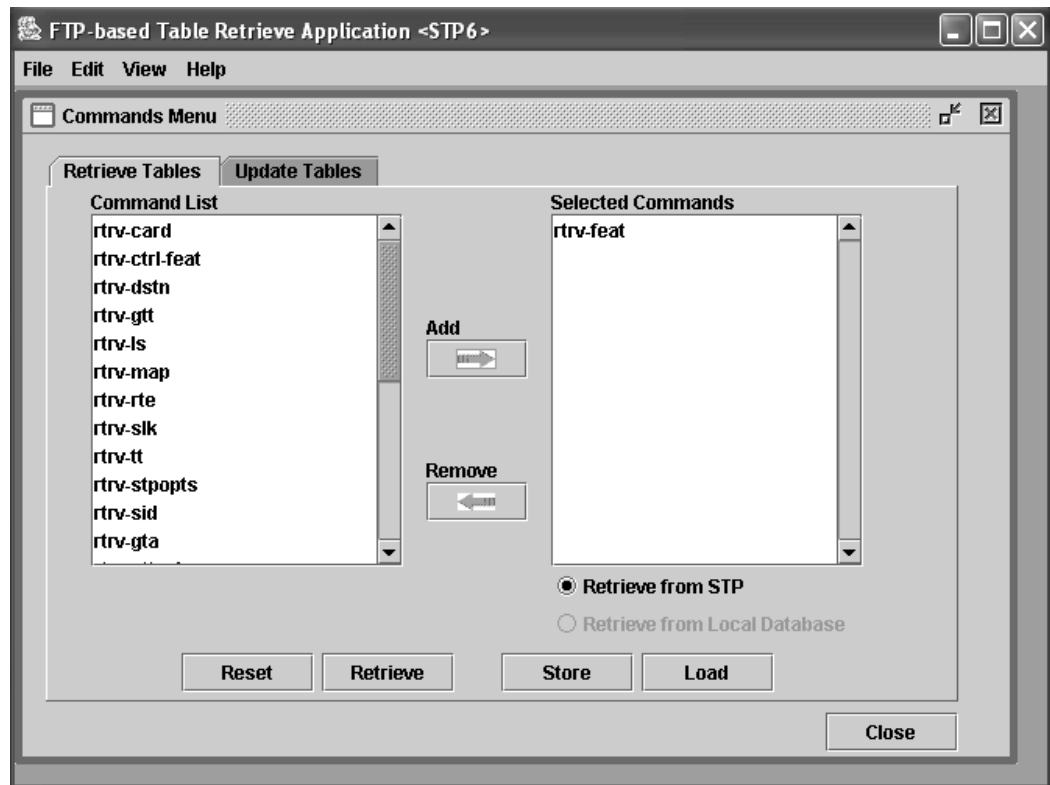


Figure 49. Adding a Range of Commands to the Selected Commands Box


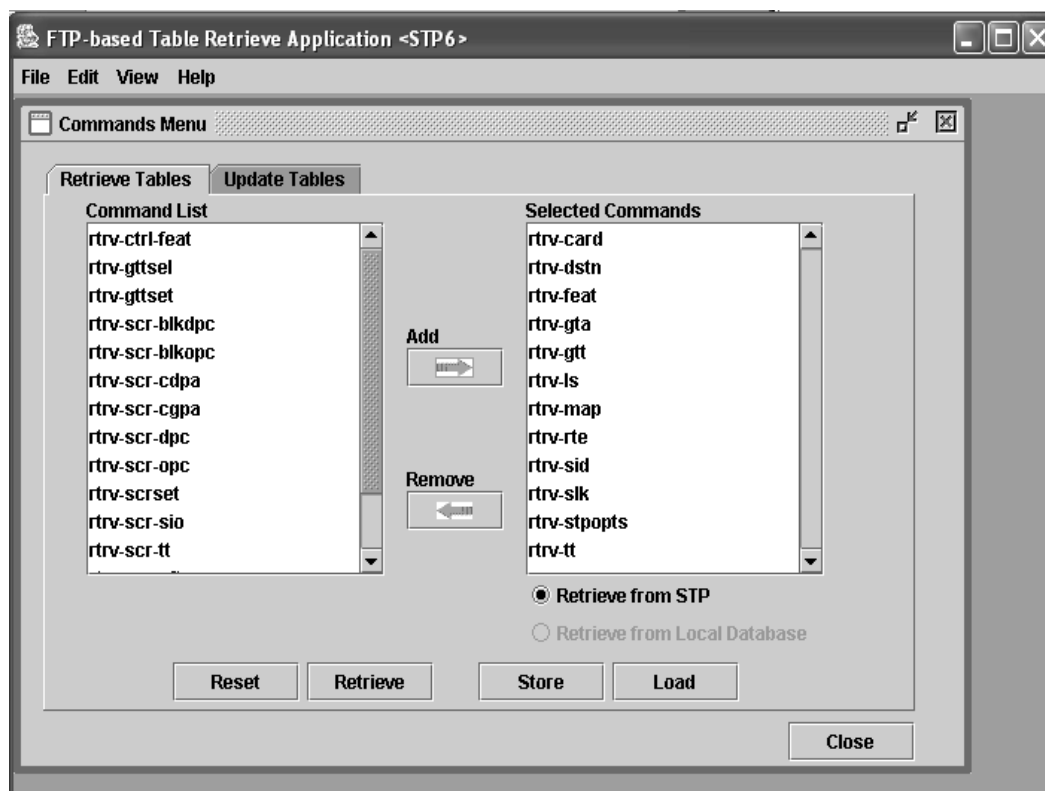


Figure 50. Adding Multiple Commands to Selected Commands Box

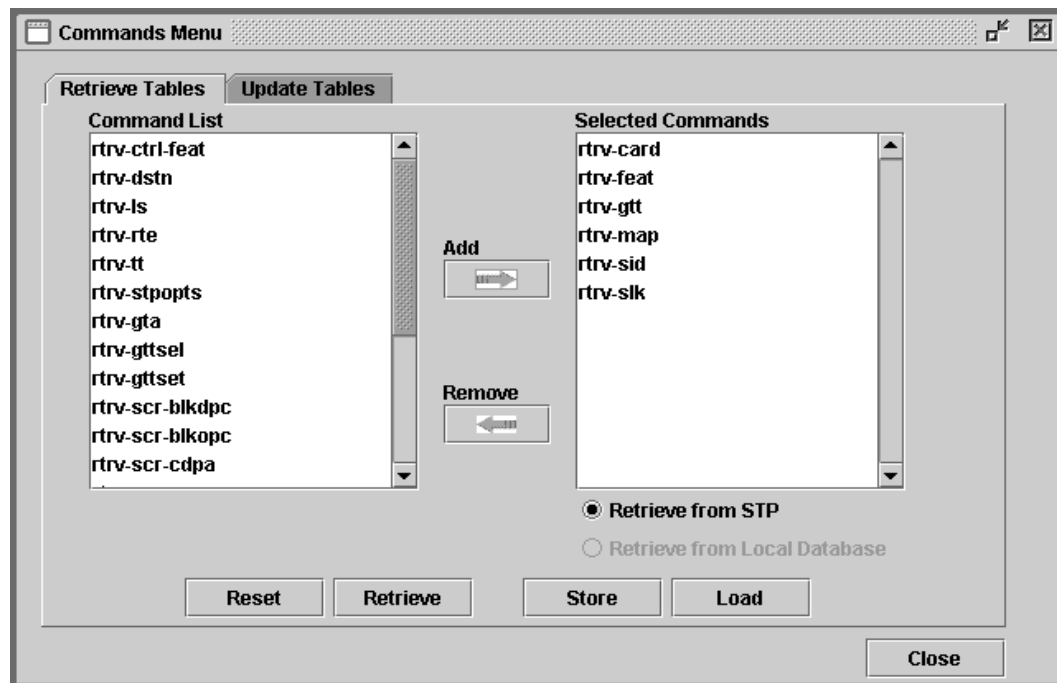

NOTE: If no commands are being moved from the Selected Commands box to the Command List box, skip step 4 and go to step 5.

4. To remove commands from the **Selected Commands** box, perform one of these steps:
 - a. In the **Selected Commands** box, click on the command to be removed and it is highlighted. Click the **Remove** button. The highlighted command is moved to the **Command List** box. See Figure 51 on page 50.
 - b. To select a range of multiple commands to be removed, click on the first command and while holding down the Shift key, click on the last command to be removed. Click the **Remove** button. All highlighted commands are moved to the **Command List** box.
 - c. Hold down the Ctrl key and click on each of commands to be removed. Click the **Remove** button. Only the highlighted commands are moved to **Command List** side. See Figure 52 on page 50.

NOTE: When a command is removed from the Selected Commands box, the command is placed in the Command List box in alphabetical order.

- d. Click the **Reset** button. All commands in the **Command List** box are moved to the **Selected Commands** box. All highlights in the **Selected Commands** box are removed.

Figure 51. Command Selected to be Removed in the Selected Commands Box


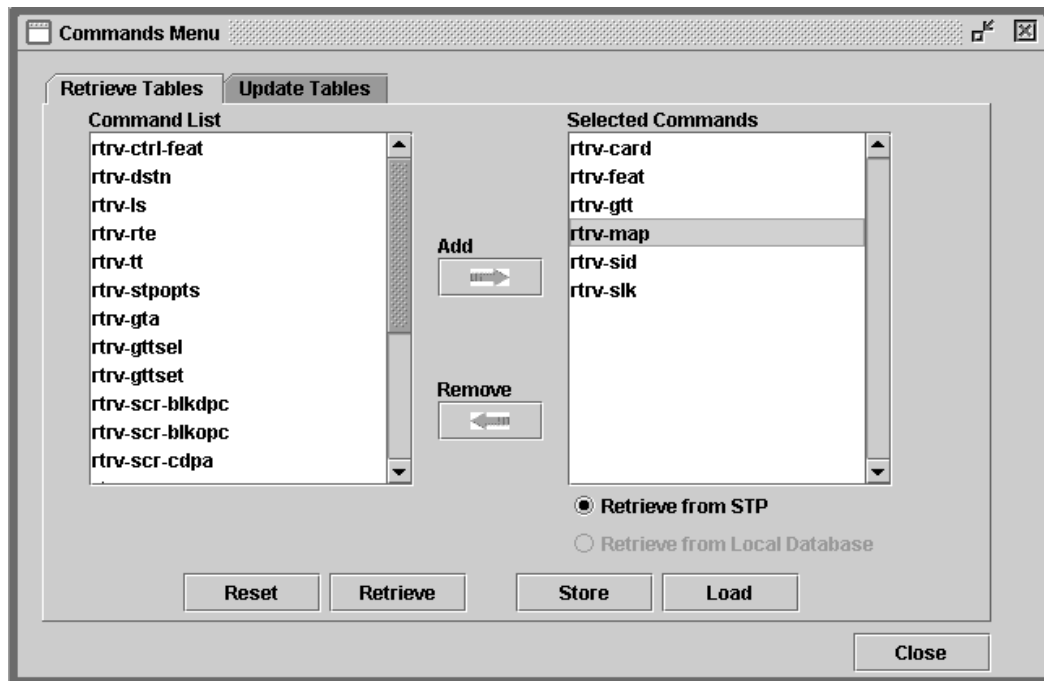


Figure 52. Command Removed from the Selected Commands Box

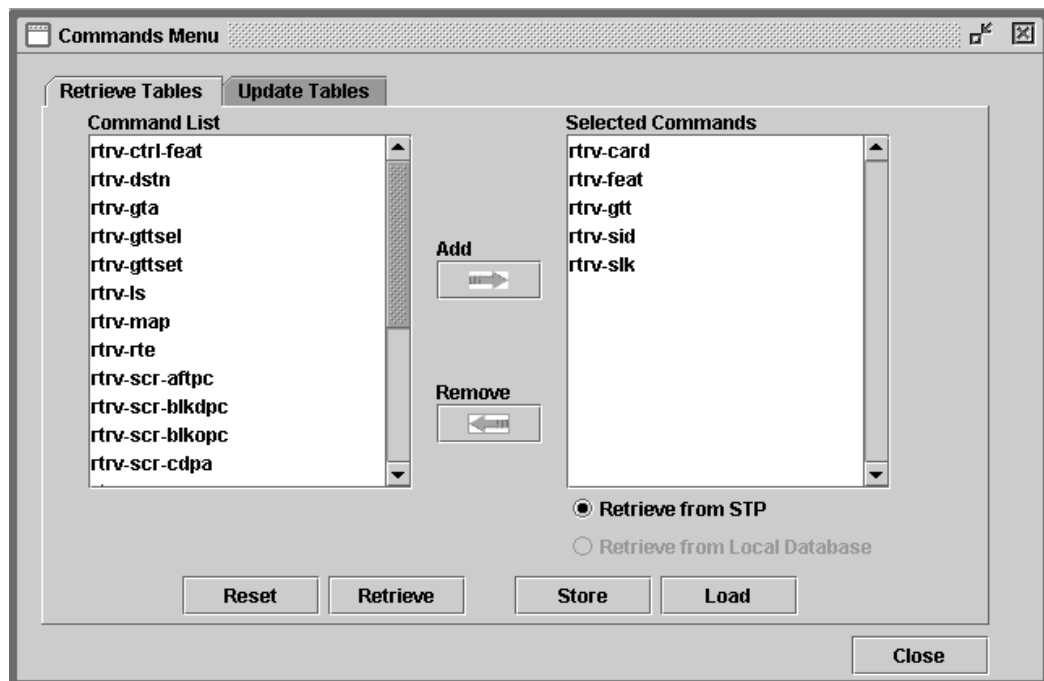

NOTE: If command information from only the selected STP is being retrieved, and the Command Line Interface is not being used, skip step 5 and go to step 6.

5. To store the selected commands for the Command Line Interface, click the **Store** button on the **Commands Menu** window. The **Command Data Stored** window opens. See Figure 53.

Figure 53. Command Data Stored Window




Click **OK** to continue.

To verify what retrieve commands are stored, click the **Load** button. The stored commands appear in the **Selected Commands** box, as shown in Figure 48 on page 47, Figure 49 on page 48, or Figure 50 on page 49.

To use the Command Line Interface, go to the “Command Line Interface” section on page 61.

NOTE: If database tables are to be retrieved from the selected STP, skip step 6 and go to step 7.

6. To generate CSV files from database tables already retrieved from the selected STP, select the **Retrieve from Local Database** button after selecting the desired commands. See Figure 54 on page 52. Click the **Retrieve** button.

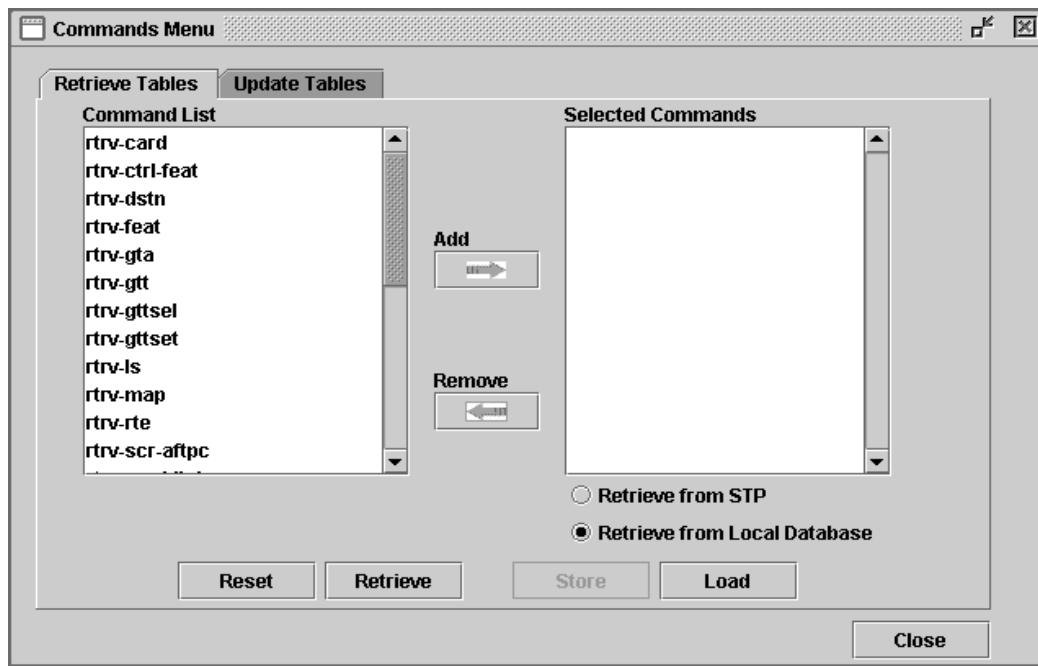Figure 54. Retrieving Database Tables from the Local Database


NOTE: If step 6 was performed, skip step 7. This procedure is finished.

7. Retrieve the database tables from the selected STP corresponding to the commands selected in step 2 by selecting the **Retrieve from STP** button, then click the **Retrieve** button. The **Retrieve Tables Log** window opens (see Figure 55 on page 53) and displays the message "Processing Retrieve Request, Please Wait" until the retrieve process completes.

NOTE: The telnet terminals on the EAGLE 5 ISS to which FTRA will be connecting should have their terminal settings set to all=no (use the EAGLE 5 ISS command `chg-trm:trm=<telnet terminal>:all=no` to make this setting; use the EAGLE 5 ISS command `rtrv-trm` to verify the EAGLE 5 ISS terminal settings). On an STP with heavy UIM output, this prevents the FTRA's terminal from being flooded with unrelated output, which could unnecessarily backlog command responses during FTRA operation.

NOTE: If you are retrieving the database tables for any of these GTT commands (`rtrv-tt`, `rtrv-gtt`) and any of these EGTT commands (`rtrv-gttset`, `rtrv-gttset`, `rtrv-gta`), see the Caution on page 40.

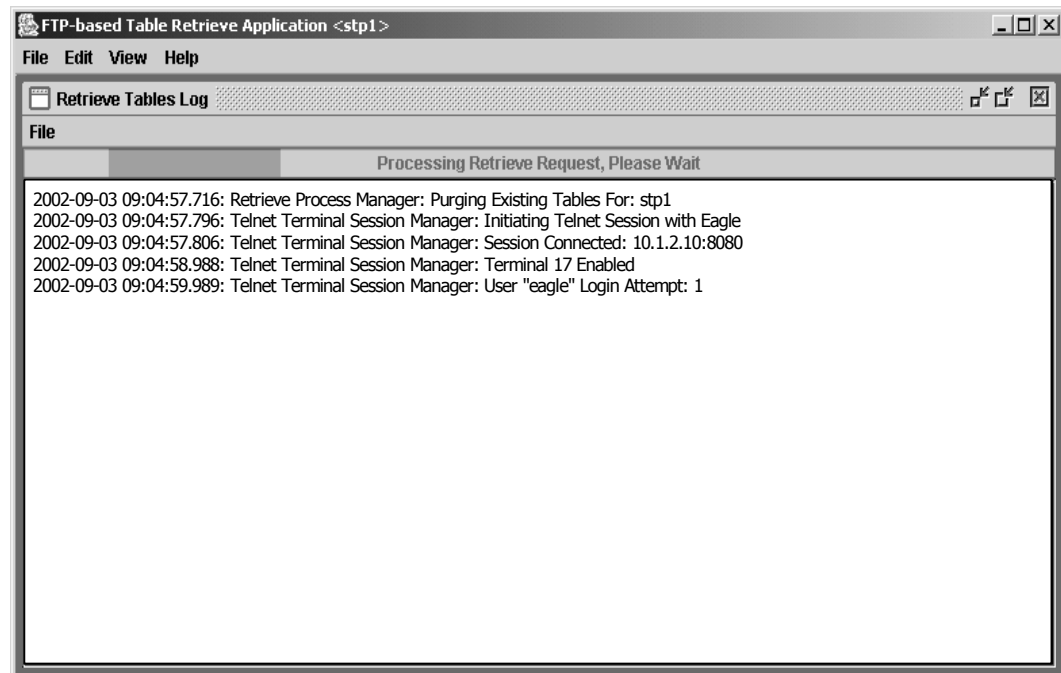Figure 55. Retrieve Tables Log Window - Processing Retrieve Request



This message is displayed until the retrieve process completes. The **Command Complete** window opens.

- a. If no errors occurred, the text "Retrieve Tables processing completed without errors." "Please check Retrieve Tables Log for Results." appears in the **Command Complete** window. See Figure 56.

Figure 56. Command Complete Window Without Errors



Click **OK**, to continue.

- b. If errors occurred, the text "Retrieve Tables processing completed with errors." "Please check Retrieve Tables Log for Results." appears in the **Command Complete** window. See Figure 57 on page 54.

Figure 57. Command Complete Window With Errors



The **Retrieve Table Log** window opens. See Figure 58 on page 55 and Figure 59 on page 55. Click **OK**, to continue.

Retrieve Tables Log

The Retrieve Tables Log contains the events of the retrieve processing and any error messages that may have occurred. The **Retrieve Tables Log** window is opened after database tables have been retrieved from an STP and is displayed until the retrieve processing is complete (see Figure 55 on page 53).

The Retrieve Tables Log displays the information of the CSV files generated for the selected retrieve commands. The filenames of the CSV files are displayed in ascending order except for the filename of the **rtrv-stp** CSV file. Since the **rtrv-stp** command CSV is not generated by the CSVGEN(X) utility, the CSV filename for the **rtrv-stp** command is not displayed in the sorted order with other CSV filenames, but it is displayed as the last entry in the filenames list. Since the Retrieve Tables Log is generated by the CSVGEN(X) utility, no record of processing the **rtrv-stp** command is displayed in this log. See Figure 60 on page 56 for an example of the Retrieve Tables Log when the **rtrv-stp** command is processed.

The log is automatically cleared when the next set of database tables are retrieved from an STP. Selecting **View > Retrieve Tables Log** from the menu also opens the **Retrieve Tables Log** window. See Figure 58 and Figure 59 on page 55.

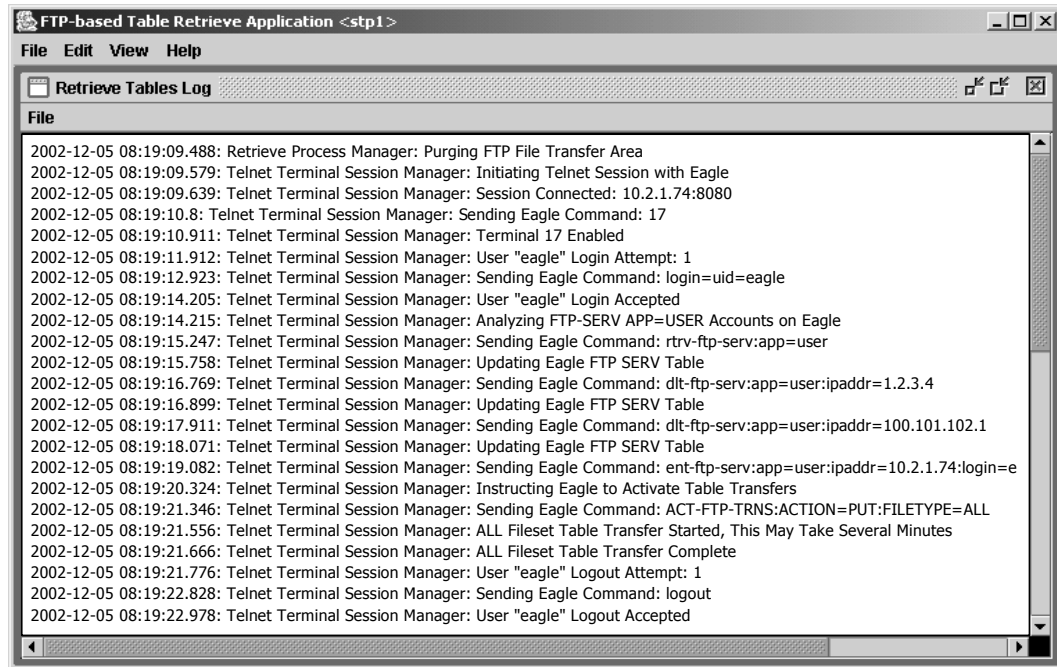
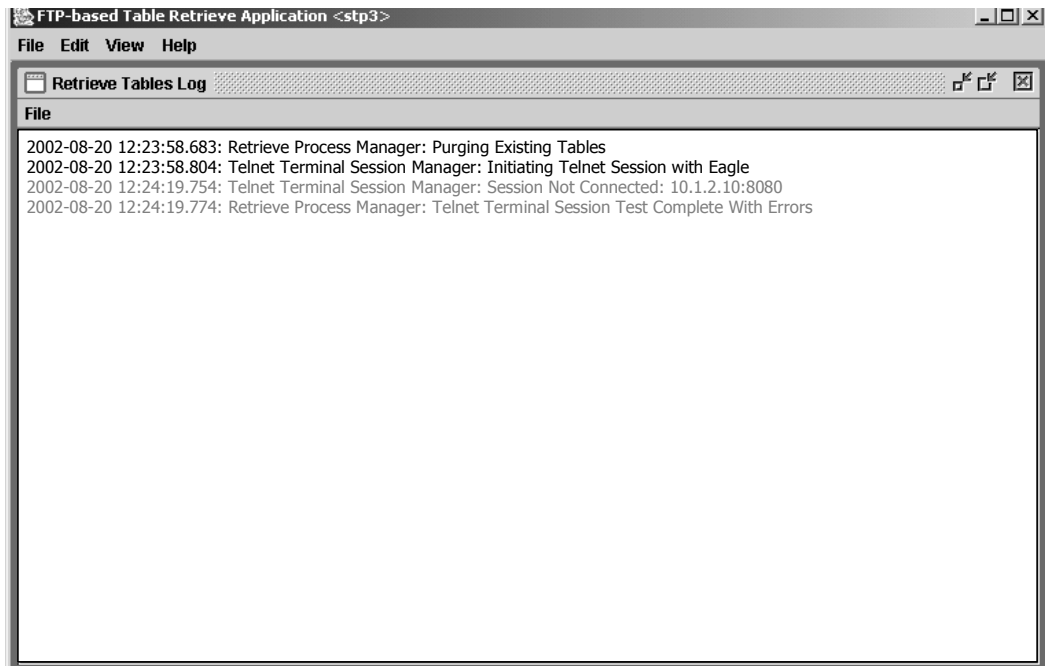
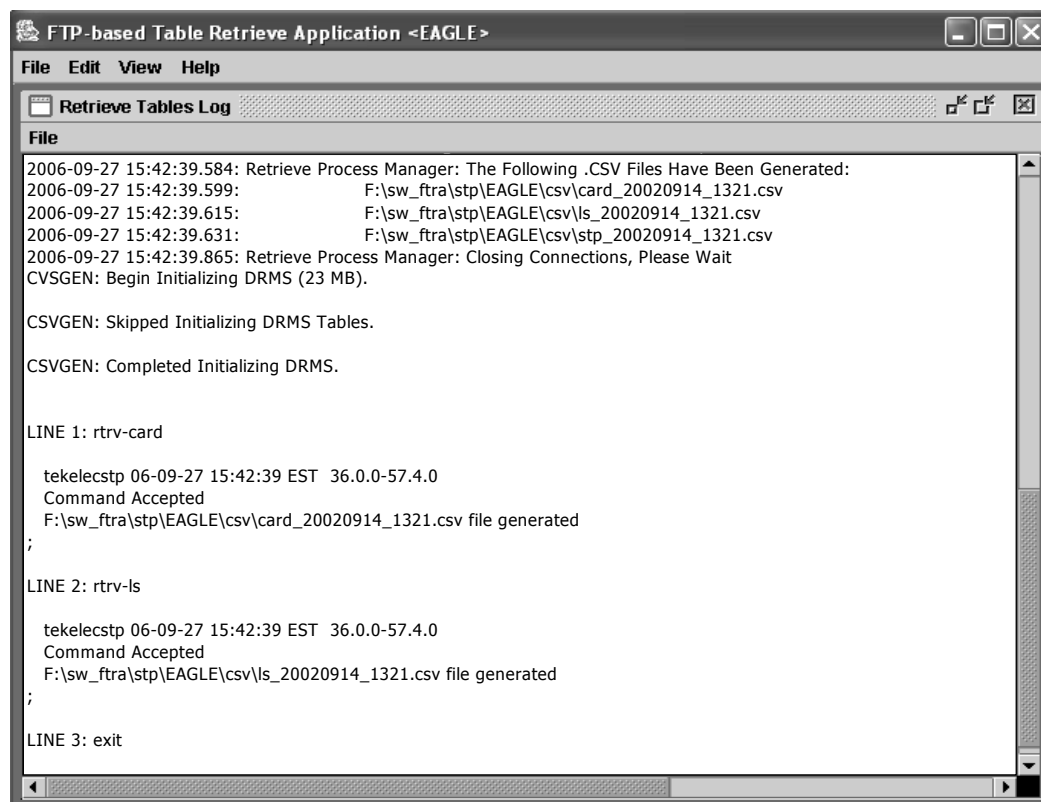
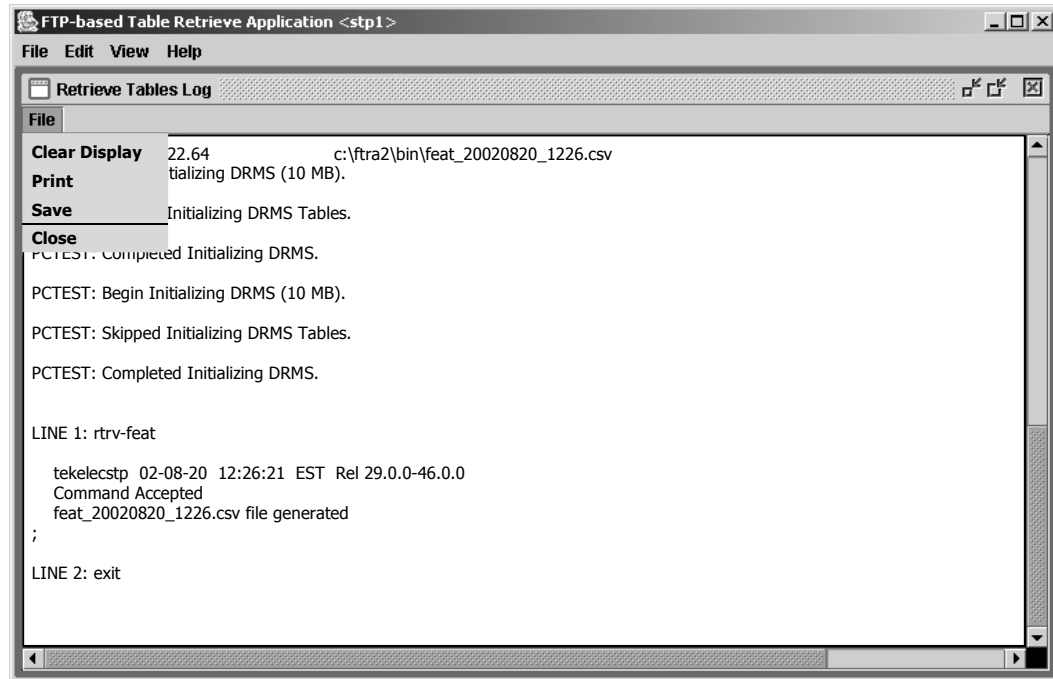
Figure 58. Retrieve Tables Log Window without Errors**Figure 59.** Retrieve Table Log with Errors

Figure 60. Retrieve Table Log with the RTRV-STP Command

Retrieve Tables Log File Menu

The **File** menu in the **Retrieve Tables Log** window, shown in Figure 61, provides these selections:

- Clearing the Retrieve Tables Log display
- Printing the Retrieve Tables Log
- Saving the Retrieve Tables Log to a file
- Closing the **Retrieve Tables Log** window.

Figure 61. File Menu in the Retrieve Tables Log Window

Clearing the Retrieve Tables Log Display

The display can be cleared, enabling new entries to be captured to the log. Once the log is cleared, the existing entries are lost unless the log is saved to a file or printed before the display is cleared.

Procedure

NOTE: Perform either step 1 or steps 2 and 3.

1. Select **File > Clear Display** in the **Retrieve Tables Log** window. See Figure 61.
2. Select **View > Retrieve Tables Log** from the **View** menu in the **FTP-based Table Retrieve Application** window. See Figure 62. The **Retrieve Tables Log** window opens.

Figure 62. View Menu


3. Select **File > Clear Display** in the **Retrieve Tables Log** window. The Retrieve Tables Log display clears.

Printing the Retrieve Tables Log

Procedure

NOTE: Perform either step 1 or steps 2 and 3.

1. Select **File > Print** in the **Retrieve Tables Log** window. See Figure 61 on page 57.
2. Select **View > Retrieve Tables Log** from the **View** menu in the **FTP-based Table Retrieve Application** window. See Figure 62. The Retrieve Tables Log opens.
3. Select **File > Print** in the **Retrieve Tables Log** window. The **Print** window opens. See Figure 63 on page 58.

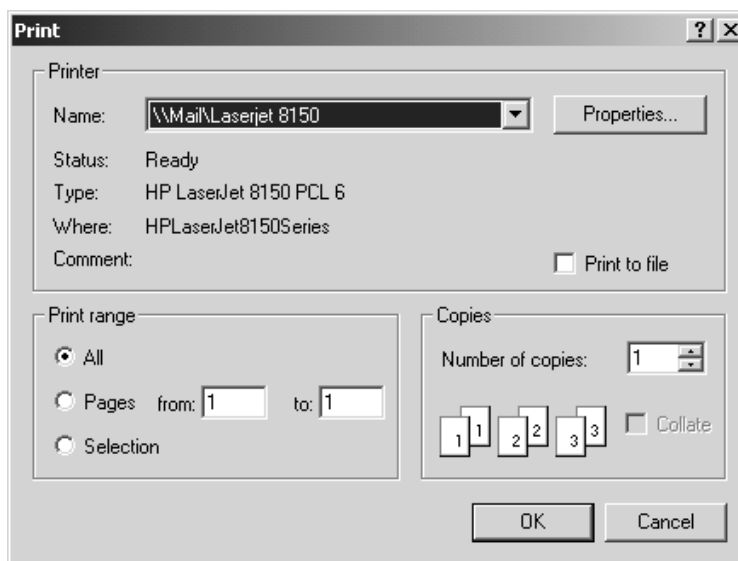Figure 63. Print Window

4. Configure the printer settings.

5. To print the Retrieve Tables Log, click the **OK** button in the **Print** window. The current contents of the Retrieve Tables Log are printed.

6. If you decide not to print the Retrieve Tables Log, click the **Cancel** button in the **Print** window.

Saving the Retrieve Tables Log to a File

Procedure


NOTE: Perform either step 1 or steps 2 and 3.

1. Select **File > Save** in the **Retrieve Tables Log** window. See Figure 61 on page 57.

2. Select **View > Retrieve Tables Log** from the **View** menu in the **FTP-based Table Retrieve Application** window. See Figure 62 on page 58. The **Retrieve Tables Log** window opens.

3. Select **File > Save** in the **Retrieve Tables Log** window. The **Save** window opens. See Figure 64 on page 59.

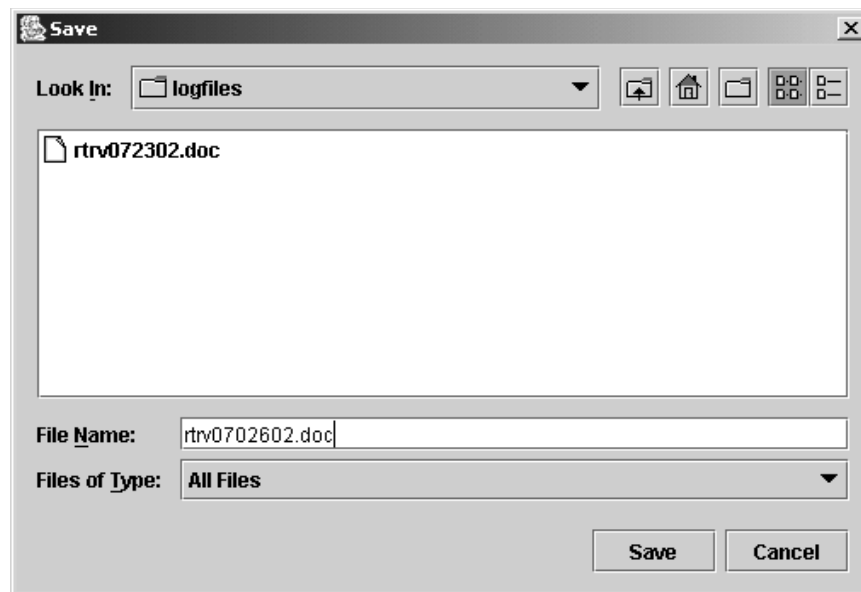Figure 64. Save Window




-
4. Select a location for the file, and enter the file name and file type (with either the .doc or .txt extensions).

NOTE: The .doc file type is recommended, although the user can use Microsoft Word to open the file, even if it was saved as a .txt file.

NOTE: If you decide not to save the file, do not perform steps 5 and 6, but click **Cancel** in the **Save** window.

5. Click the **Save** button. A **Saved** file confirmation window opens with “Data saved to file.” See Figure 65.

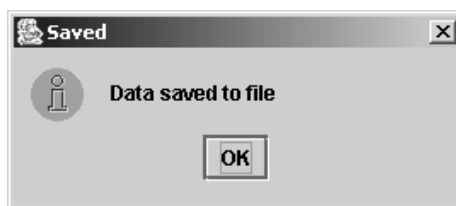Figure 65. Saved File Confirmation Window



-
6. To save the file, click **OK** in the **Saved** file confirmation window to continue.
-

Closing the Retrieve Tables Log Window

Procedure

1. Select **File > Close** in the **Retrieve Tables Log** window, or click the close window button in the upper right hand corner of the **Retrieve Tables Log** window. See Figure 61 on page 57. The **Retrieve Tables Log** window closes.
-

Command Line Interface

The FTRA Command Line Interface allows the user to retrieve the same database tables, using the EAGLE 5 ISS's retrieve commands, from all configured STPs in the STP configuration database. The **Store** and **Load** buttons in the **Retrieve Tables** window are used to select these retrieve commands. See "Retrieve Database Tables from an STP" on page 40.

The Command Line Interface for FTRA 4.0 allows the user to change the STP Username and Password for an STP already configured in the system.

Before the Command Line Interface can be started, you must exit the FTRA application. To start the Command Line Interface retrieve process, enter the (**fttra -c**) at the DOS command prompt (in Windows) or at a shell command prompt (in UNIX).

For modifying the Username and Password for an STP, three command line arguments have to be specified with the "-c" option (fttra -c stpname username password).

The user can automate this retrieve process through the use of external scheduling software such as Scheduled Task (on the Windows platform) and "cron" (on the Unix platform). Please refer to the platform's scheduling program for specifics on how to use the external scheduling software. For example, on the Unix platform, enter the **man crontab** command.

Procedure – Command Line Interface Manual Start

1. Exit the FTRA application. See "Exit the FTRA" on page 3.

2. On the Windows platform, at a DOS prompt, go to the **\bin** directory of the FTRA *<install_directory>* location.

3. On the Unix platform, at a shell prompt, go to the **/bin** directory of the FTRA *<install_directory>* location.

4. Enter the **fttra -c stpname username password** command (see Figure 66 on page 62 or Figure 68 on page 63). The stored **rttrv** commands are then sent to the provisioned STP. The data tables are retrieved and converted to the CSV file format.

Result: The username and password shall be modified in the STP configuration for the specified stpname.

NOTE: The parameters specified in the command line are case sensitive. For example, an stpname specified as EAGLE, Eagle or eagle shall be treated separately.

Figure 66. FTRA Windows Command Line Interface



Figure 67. FTRA Windows Command Line Interface to modify STP data.



Figure 68. FTRA UNIX Command Line Interface**Figure 69.** FTRA UNIX Command Line Interface to modify STP data.


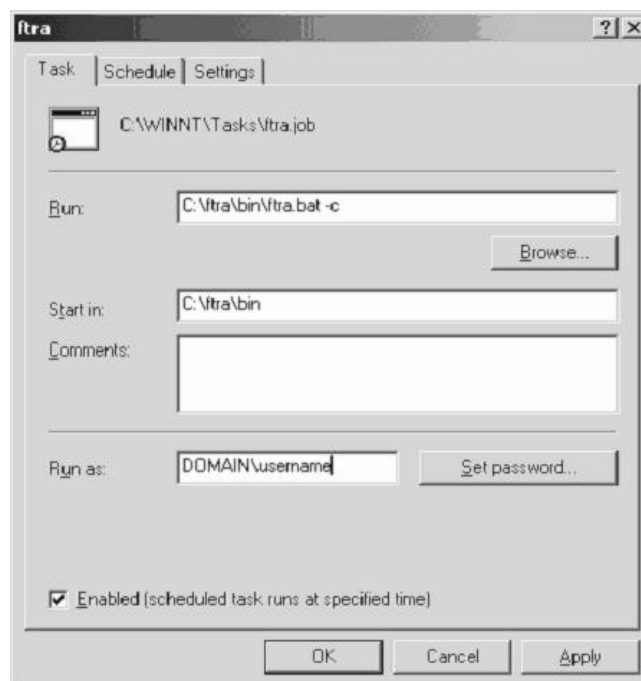
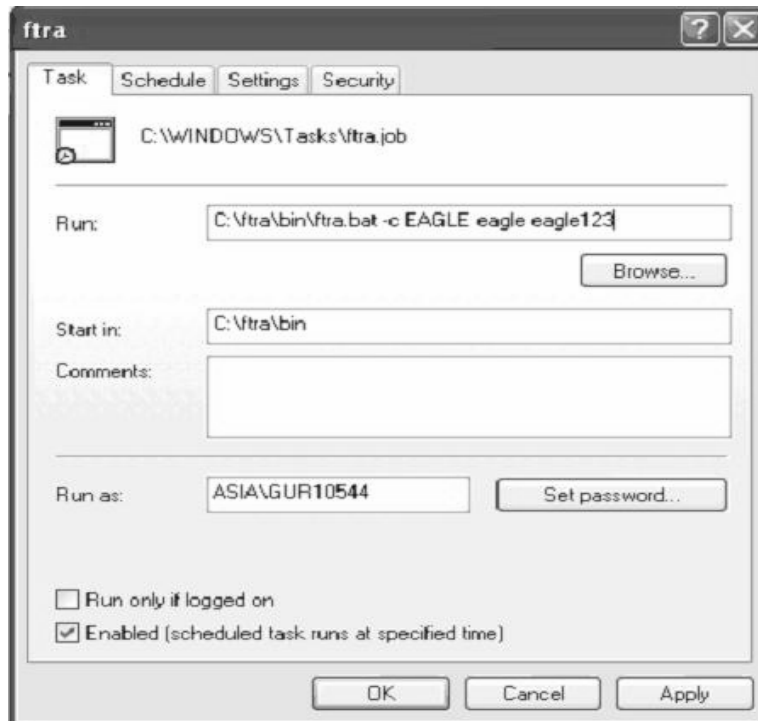
Figure 70. FTRA Windows Scheduled Task**Figure 71.** FTRA Windows Scheduled Task to modify STP data

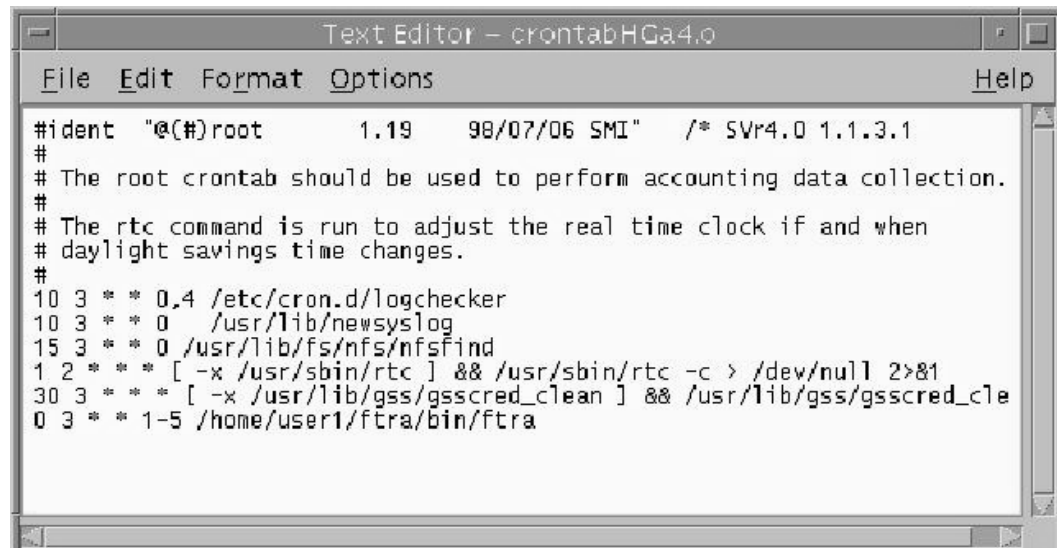Figure 72. UNIX cron job scheduled via crontab (note: last line shows FTRA scheduled to run at 3am Monday through Friday)




```

#ident "@(#)root      1.19   98/07/06 SMI"      /* SVr4.0 1.1.3.1
#
# The root crontab should be used to perform accounting data collection.
#
# The rtc command is run to adjust the real time clock if and when
# daylight savings time changes.
#
10 3 * * 0,4 /etc/cron.d/logchecker
10 3 * * 0   /usr/lib/newsyslog
15 3 * * 0 /usr/lib/fs/nfs/nfsfind
1 2 * * * [ -x /usr/sbin/rtc ] && /usr/sbin/rtc -c > /dev/null 2>&1
30 3 * * * [ -x /usr/lib/gss/gsscred_clean ] && /usr/lib/gss/gsscred_cle
0 3 * * 1-5 /home/user1/ftra/bin/ftra

```

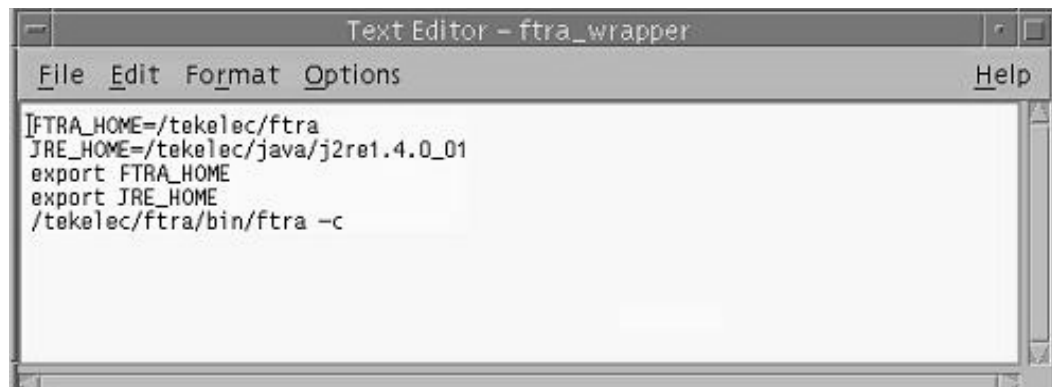Figure 73. FTRA wrapper script example for Unix (might be necessary if running from cron)




```

FTRA_HOME=/tekelec/ftra
JRE_HOME=/tekelec/java/j2re1.4.0_01
export FTRA_HOME
export JRE_HOME
/tekelec/ftra/bin/ftra -c

```

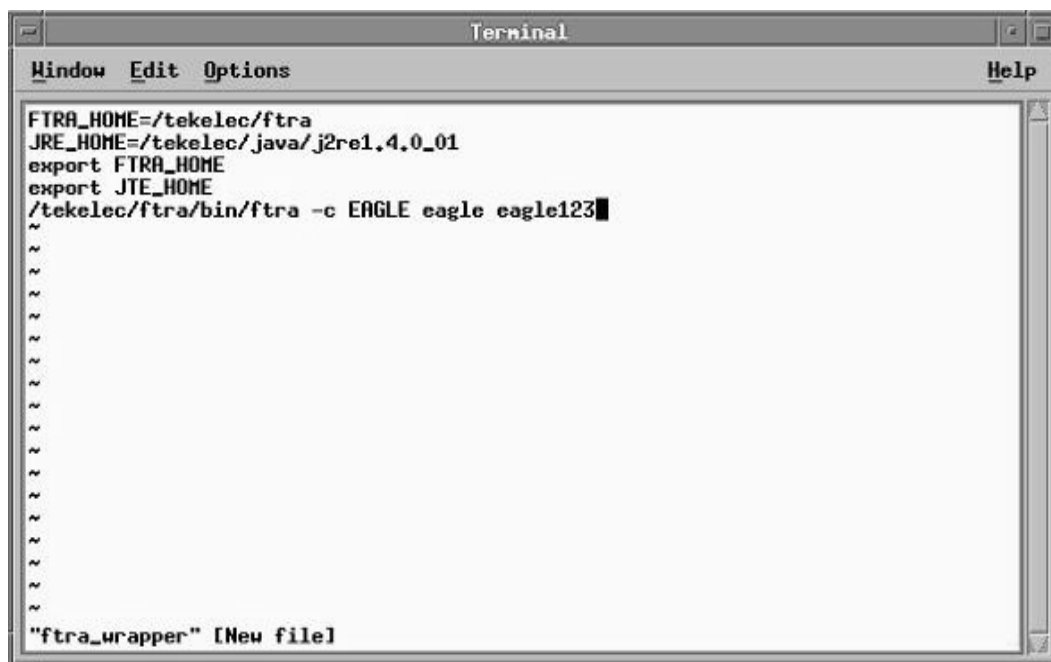Figure 74. FTRA wrapper script example on Unix for modifying STP configuration (might be necessary if running from cron)



Procedure – Command Line Interface Automatic Start

1. To automate the FTRA retrieve process, enter the "ftra -c" command, the path to the bin directory of FTRA i.e. <install_directory> and the start time in the external scheduling software such as Scheduled Tasks (in Windows, see Figure 103 on page 90) or "cron" (in Unix, see Figure 104 on page 91).

Result: When the start time is reached, the stored rtrv commands are sent to all the provisioned STPs. The data tables are retrieved and converted to CSV file format for the stored rtrv commands.

However, to automate the FTRA retrieve process using three command line parameters, enter the **ftra -c stpname username password** command, the path to the bin directory of the FTRA such as <install_directory>, and the start time in the external scheduling software such as Scheduled Tasks (on Windows) or "cron" (on Unix).

Result: The username and password shall be modified in the STP configuration for the specified stpname. When the start time is reached, the stored rtrv commands are sent to all the provisioned STPs. The data tables

will be retrieved and converted to csv file format for the stored rtrv commands. See Figure 99 on page 87 for example.

NOTE: If you are using “cron” on the Unix workstation, it might be necessary to create a wrapper script for FTRA, in order to correctly set environment variables. For an example of the wrapper script, see Figure 77 on page 70.

Table 6. FTRA – Eagle Compatibility Matrix

	FTRA 1.0	FTRA 1.1	FTRA 2.0	FTRA 2.1	FTRA 2.2	FTRA 3.0	FTRA 4.0
Eagle 28.x and earlier	N	N	N	N	N	N	N
Eagle 29.0	Y	N	N	N	N	Y	Y
Eagle 30.0	N	Y	Y	N	N	Y	Y
Eagle 30.2	N	N	Y	N	N	Y	Y
Eagle 31.3	N	N	N	Y	N	Y	Y
Eagle 31.6	N	N	N	N	Y	Y	Y
Eagle 31.9	N	N	N	N	Y	Y	Y
Eagle 32.0	N	N	N	N	N	Y*	Y*
Eagle 35.0 and later	N	N	N	N	N	Y*	Y* Y**

Legend:

N - Not supported.

Y - Supported. (CSVGen installed from FTRA install CD.)

Y* - Supported. (CSVGen transferred from Eagle TDM.)

Y** - Supported. (rtrv-stp command support, command line support for modifying STP data.)

All other releases of Eagle that are not listed are not officially supported by any release of FTRA.

Updating Database Tables in the Selected STP

The **Update Tables** window (see Figure 75) is used to send EAGLE 5 ISS commands to the selected STP. The commands, in the form of a command file, are validated before being sent.

To send the command file to the selected STP, the command file is selected by entering the path and file name of the command file, or by selecting the file name of the command file from the **Select** window. The command file is then validated by clicking the **Validate** button in the **Update Tables** window. When the validation is completed, the **Update Validation Complete** window appears. From the **Update Validation Complete** window the command file can be edited, sent to the selected STP, or the **Update Validation Complete** window can be closed without sending the command file to the selected STP. The Update Tables Log contains the events of the command validation and any error messages that may have occurred.

Figure 75. Update Tables Window

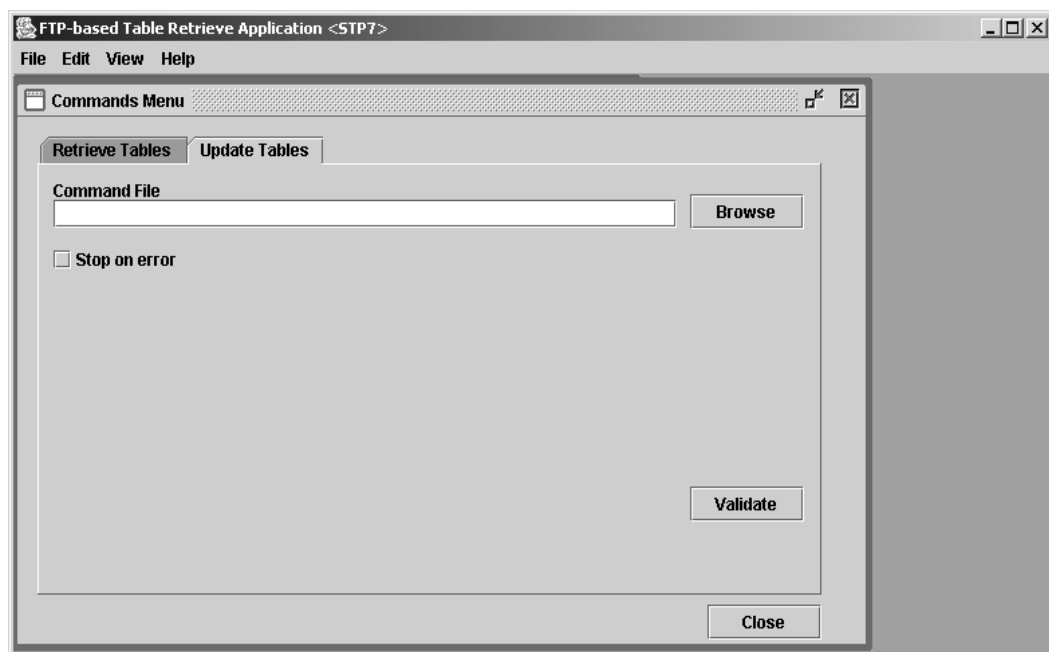


Table 7 shows the description of the fields and buttons in the **Update Tables** window.

Table 7. Update Tables Window Description

Item	Description
Fields	
Command File	The path and file name of the command file are entered here. A command file contains the EAGLE 5 ISS commands used to modify database tables of the STP.
Stop on error box	If the box is checked, and an error is found during the validation of the commands, the validation stops and no further commands are validated. If the box is not checked, all commands are processed regardless of errors. The error results are displayed in the Update Tables Log.
Buttons	
Browse	Opens the Select window to select the command file to send to the selected STP.
Validate	Validates the EAGLE 5 ISS commands using the offline database.
Close	Closes the Commands Menu window.

Validating a Command File

Procedure

1. Select **Edit > Commands > Update Tables** in the **FTP-based Table Retrieve Application** window. See Figure 76. The **Update Tables** window opens. See Figure 75 on page 68.

Figure 76. Edit Menu

2. Perform one of these steps.
 - a. Enter the path and name of the command file in the **Command File** field. See Figure 77.
 - b. Click the **Browse** button. The **Select** window is opened. See Figure 77 on page 70. Find the folder containing the command file and click on the command file name. The command file name is highlighted. Click the

Select button. The **Select** window disappears and the **Update Tables** window appears with the path and file name of the selected command file entered in the **Command File** field.

If you wish to cancel the command file selection process in the **Select** window, click the **Cancel** button.

Table 8 on page 70 shows the description of the buttons in the **Select** window.

Figure 77. Select Window


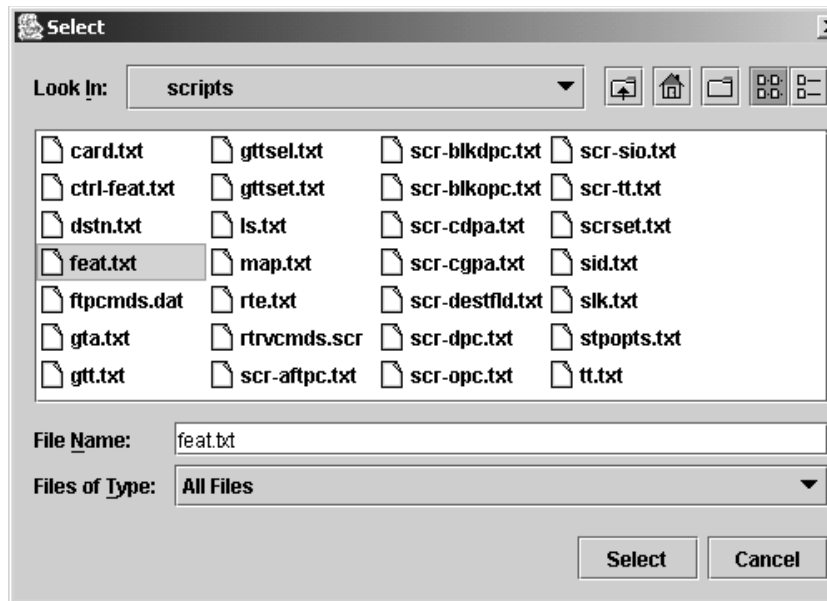


Table 8. Select Window Descriptions

Item	Description
Fields	
Look in:	A drop down menu allowing the user to browse through the directory structures.
File Name:	The name of the file to be selected.
Files of type:	A drop down menu that selects all files.
Buttons	
Select	The contents of the File Name field and the path to the filename is loaded into the Command File field of the Update Tables window.
Cancel	Closes the Select window.


3. If you wish to have the command validation stop if any errors are found, check the **Stop on error** box in the **Update Tables** window. See Figure 78. If you wish to have the command validation processed regardless of any errors, uncheck the **Stop on error** box. The error results are displayed in the Update Tables Log.

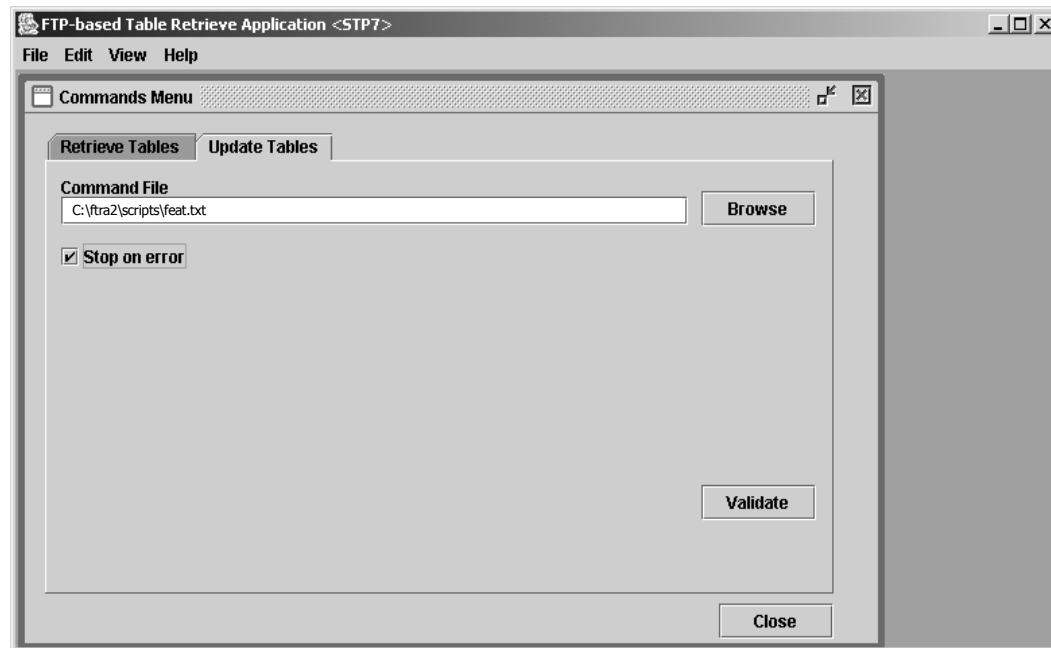Figure 78. Update Tables Window with a Command File Selected and Stop on Error Box Checked



4. Click the **Validate** button. The **Update Tables Log** window opens at the beginning of the validate process and displays the "Processing Validate Request, Please Wait" message until the validation of the command file is complete. See Figure 79.

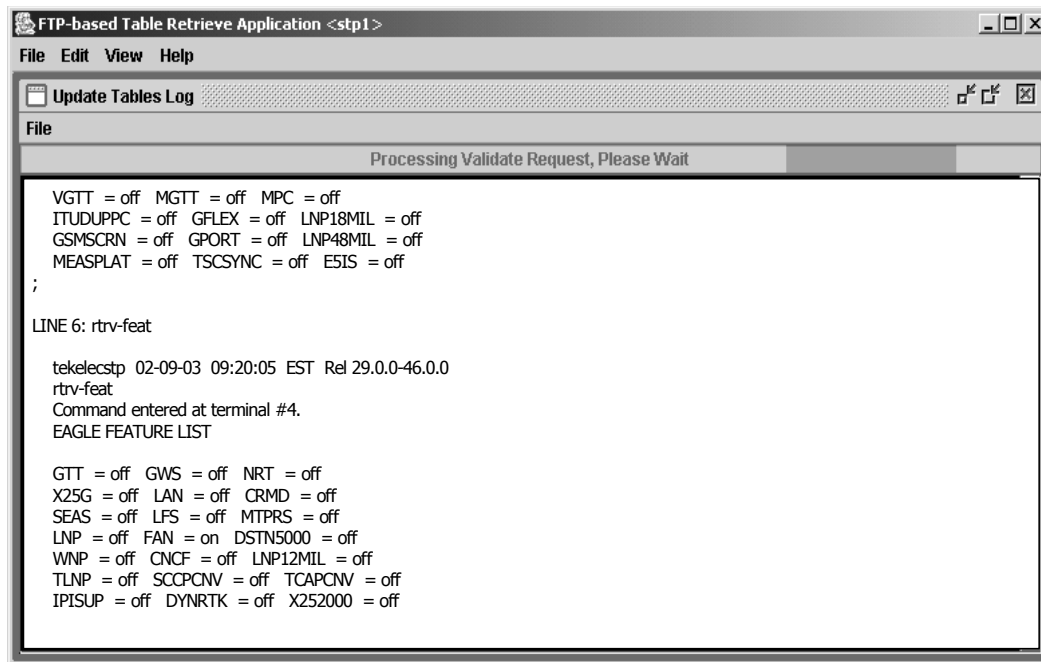Figure 79. Update Tables Log Window - Processing Retrieve Request



The **Update Validation Complete** window opens. See the “Update Validation Complete Window” section on page 73.

5. The **Update Tables Log** window opens. It contains the events and error messages generated during the validation. See Figure 89 on page 78, Figure 90 on page 79, and Figure 91 on page 80 for Update Tables Log examples.

NOTE: If there is no entry in the **Command File** field and the **Validate** button is clicked, a warning message is displayed stating that a command file name must be entered. See Figure 80.

Figure 80. Must Enter Command Script File Name Message



Update Validation Complete Window

When the command validation has completed, the **Update Validation Complete** window opens notifying the user if the commands validated with or without errors. From the **Update Validation Complete** window, the command file can be edited, sent to the selected STP, or the window can be closed without sending the command file to the selected STP. See Figure 81.

Figure 81. Update Validation Complete Window without Errors

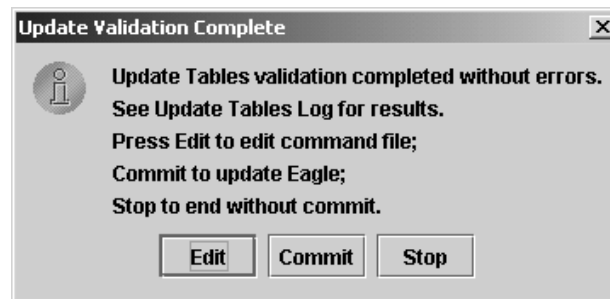


Table 9 shows the description of the buttons in the **Update Validation Complete** window.

Table 9. Update Validation Complete Window Description


Item	Description
Edit	Opens the Command File Editor window and allows the user to make changes to the command file. To edit a command file, go to the “Editing a Command File” section on page 75.
Commit	Sends the commands in the command file to the STP. A Command Complete window opens and the Update Tables Log is updated. See the “Sending a Command File to the Selected STP” section on page 74. If the Update Tables validation completed with errors the Commit button is not displayed.
Stop	Closes the Update Validation Complete window without sending the commands in the command file to the STP.

Update Validation Complete Window with Errors

If the **Update Validation Complete** window shows that errors have occurred, the command file can be edited or the window can be closed without sending the command file to the selected STP. See Figure 82. There is no **Commit** button in this window; this prevents the sending of invalid commands.

To fix the errors in the command file, click the **Edit** button, then go to the “Editing a Command File” section on page 75.

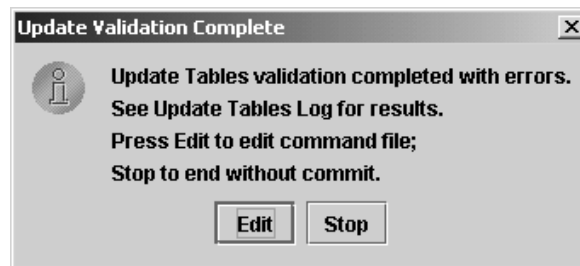Figure 82. Update Validation Complete Window with Errors




Sending a Command File to the Selected STP

To send the command file, click the **Commit** button in the **Update Validation Complete** window. The **Commit** button is shown only on the **Update Validation Complete without Errors** window. See Figure 81 on page 73. The validated command file is sent to the selected STP.

The **Command Complete** window opens and displays: “Update Tables processing completed without errors” and “Please check Update Tables Log for results.” See Figure 83. Click **OK**, to continue. The Update Tables Log contains the commit processing events. See Figure 89 on page 78.

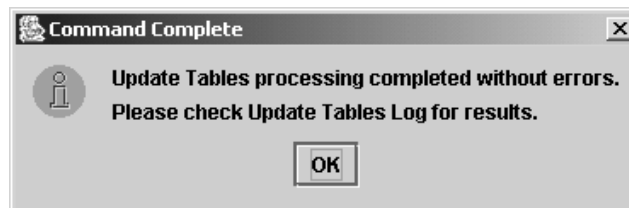Figure 83. Command Complete Window




Stop Without Sending or Editing a Command File

To stop the process without sending or editing a command file, click the **Stop** button in the **Update Validation Complete** window. See Figure 81 on page 73. The **Update Validation Complete** window is closed. No changes are made to the command file and the command file is not sent to the selected STP.

Editing a Command File

To edit a command file, click the **Edit** button in the **Update Validation Complete** window. The **Command File Editor** window is opened. See Figure 84.

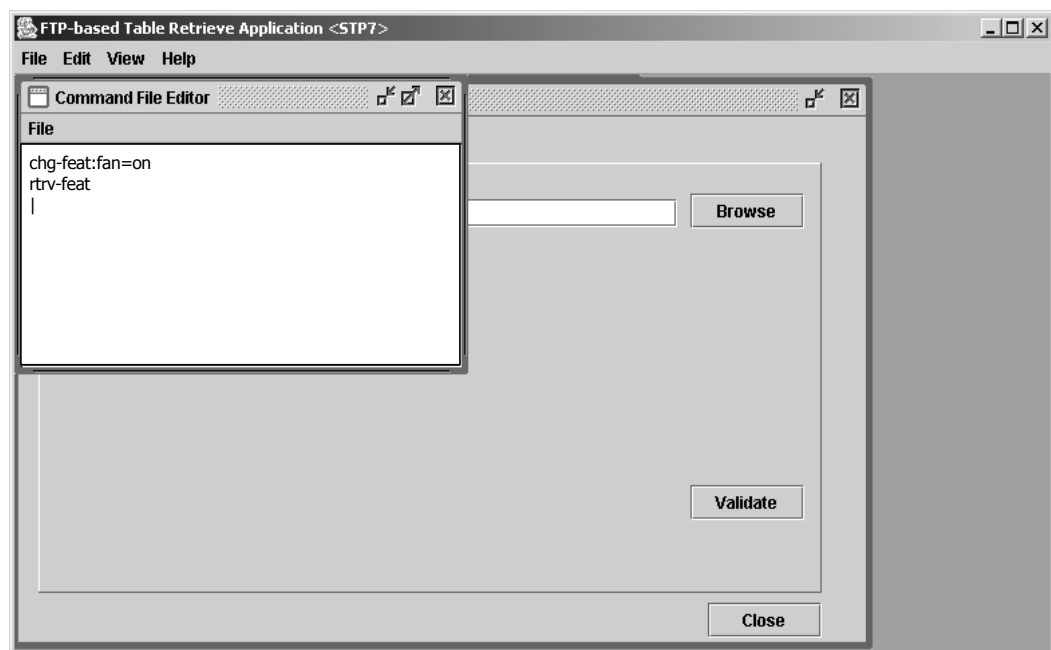Figure 84. Command File Editor Window



When the editing is complete, the command file can be saved without sending the command file to the selected STP, saved and sent to the selected STP without any further validation, or the command file can be closed without saving the changes to the command file.


Procedure

1. Click the **Edit** button in the **Update Validation Complete** window. See Figure 81 on page 73. The **Command File Editor** window opens. See Figure 84 on page 75.

NOTE: The hourglass is displayed until the **Command File Editor** window is closed.


NOTE: If an attempt is made to close the **Update Tables** window while the **Command File Editor** window is opened, the **Command In progress, Cannot Close Window** warning message is displayed. See Figure 85.

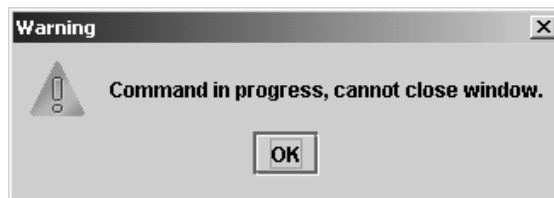Figure 85. Command In progress, Cannot Close Window




2. Edit the command file. Figure 86 shows a command file with an invalid command. In this example, the invalid command is **chg-feat:.** This command should be removed from the command file, or have a correct parameter and value added to it.

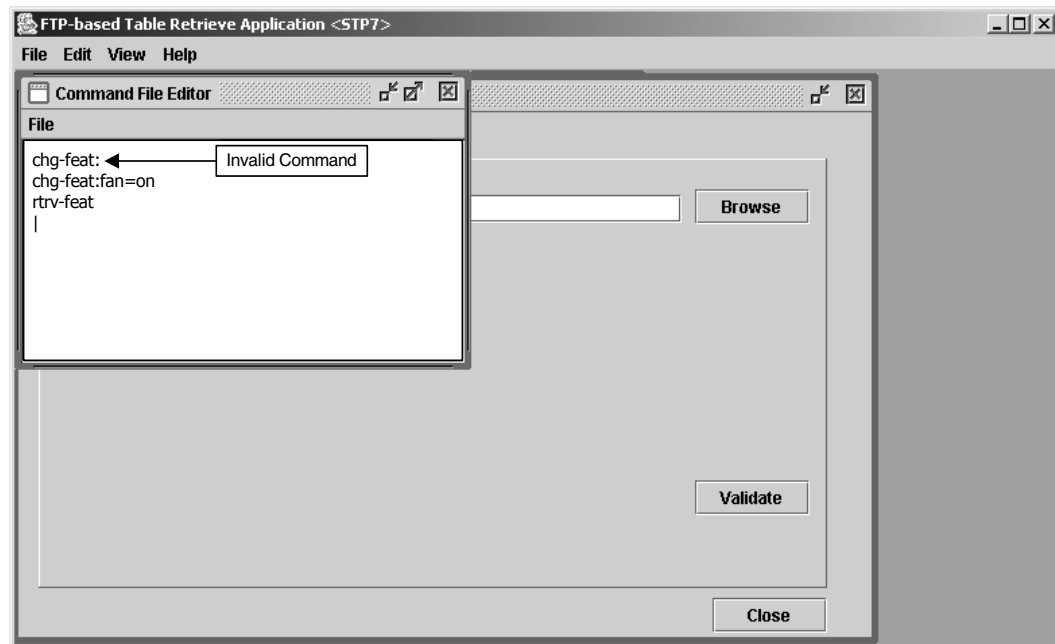Figure 86. Command File Editor with Invalid Command



3. When the editing is complete, perform one of these steps.
 - a. Select **File > Save** from the **Command File Editor** window (see Figure 87). The command file is saved and the **Command File Editor** window remains open. The command file is not sent to the selected STP. The command file can be validated again in the **Update Tables** window.

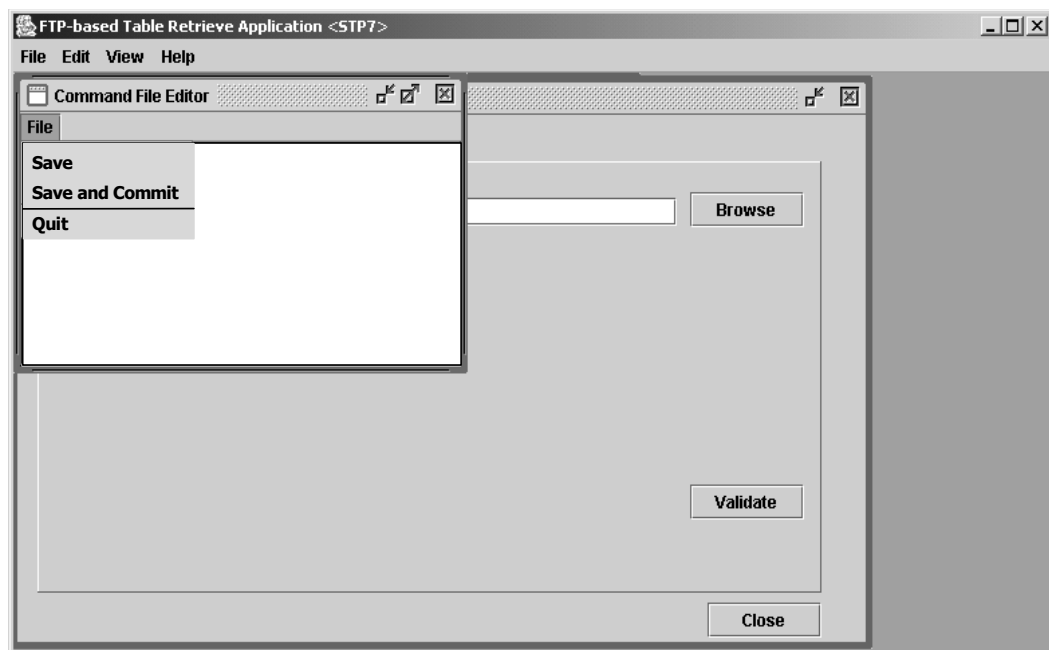Figure 87. File Menu in the Command File Editor Window



- b. Select **File > Save and Commit** from the **Command File Editor** window (see Figure 87). The command file is saved and the **Command File Editor** window closes. The **Command Complete** window opens and displays: "Update Tables processing completed without errors. Please check Update Tables Log for results. Click **OK**, to continue. See Figure 88. The command file is sent to the selected STP. The Update Tables Log contains the commit processing events. See Figure 89 on page 78

Figure 88. Command Complete Window



- c. Select **File > Quit** from the **Command File Editor** window (see Figure 87). The **Command File Editor** window closes. The command file is not sent to the selected STP. If changes to the command file have been made, a window is displayed asking if you want to save the changes.

Update Tables Log Window

The Update Tables Log contains the processing events and any error messages that may have occurred during the validation and sending of a command file. The **Update Tables Log** window is opened at the beginning of the validation process and displays "Processing Validate Request, Please Wait" (Figure 79 on page 72) until the command file validation is completed. The **Update Tables Log** window is automatically cleared when the next command file validation is started.

Selecting **View > Update Tables Log** from the menu can also open the **Update Tables Log** window.

See Figure 89, Figure 90 on page 79, Figure 91 on page 80, and Figure 92 on page 81 for the **Update Tables Log** window examples.

Figure 89. Update Tables Log Window after the Commit Command Completed

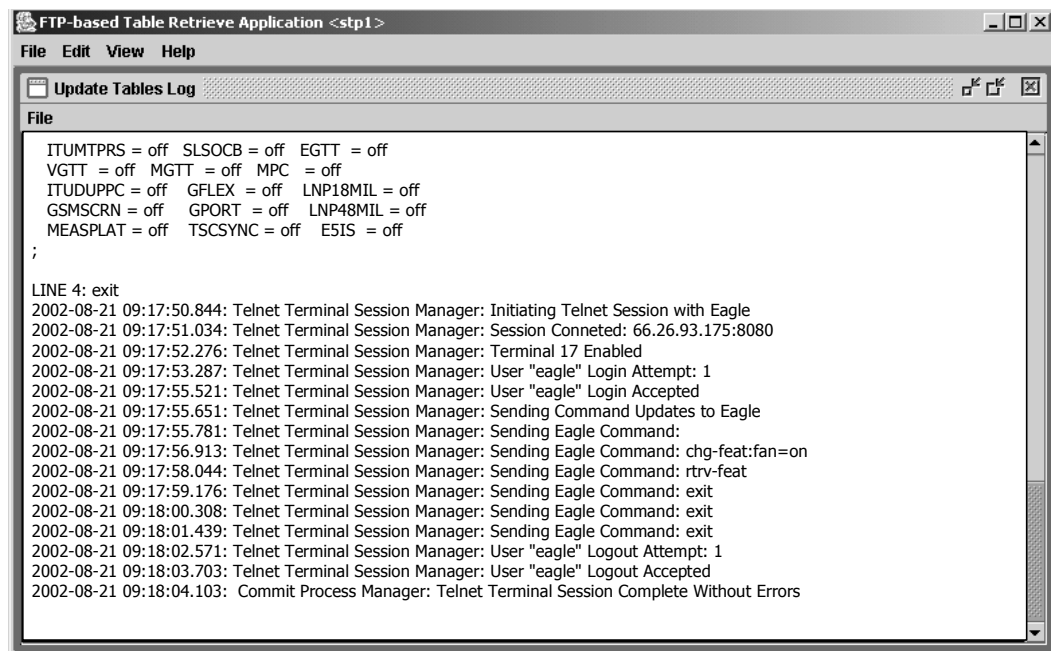


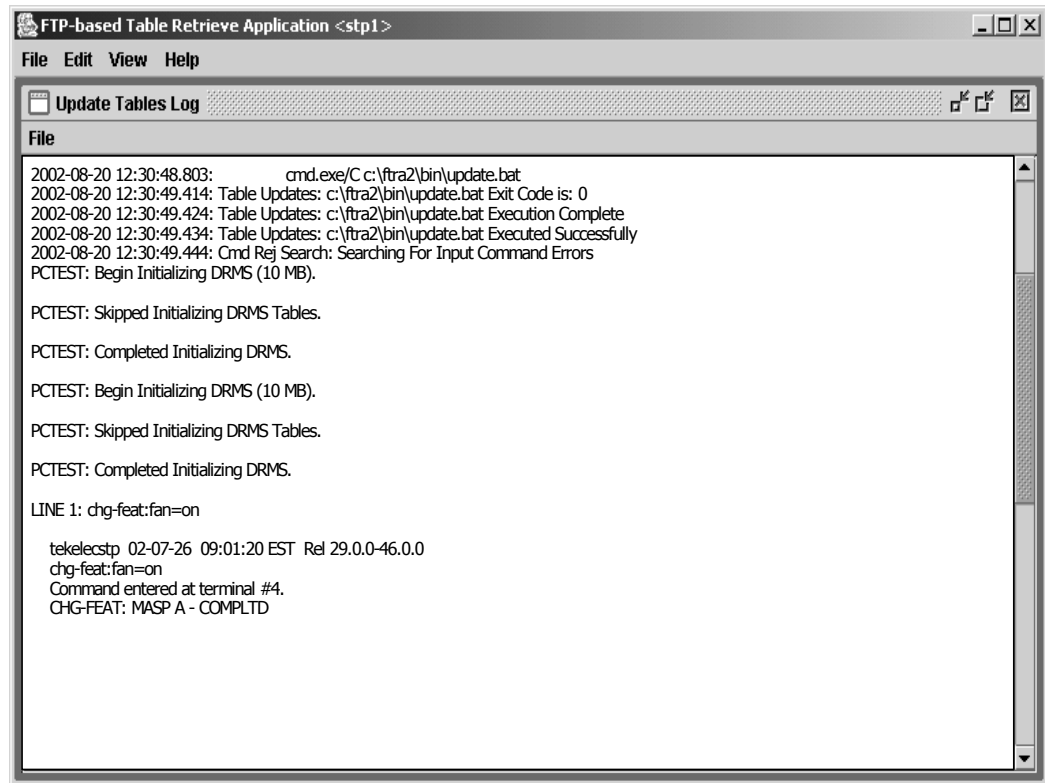
Figure 90. Update Tables Log

Figure 91. Update Tables Log with Stop on Error Box Checked in the Update Tables Window

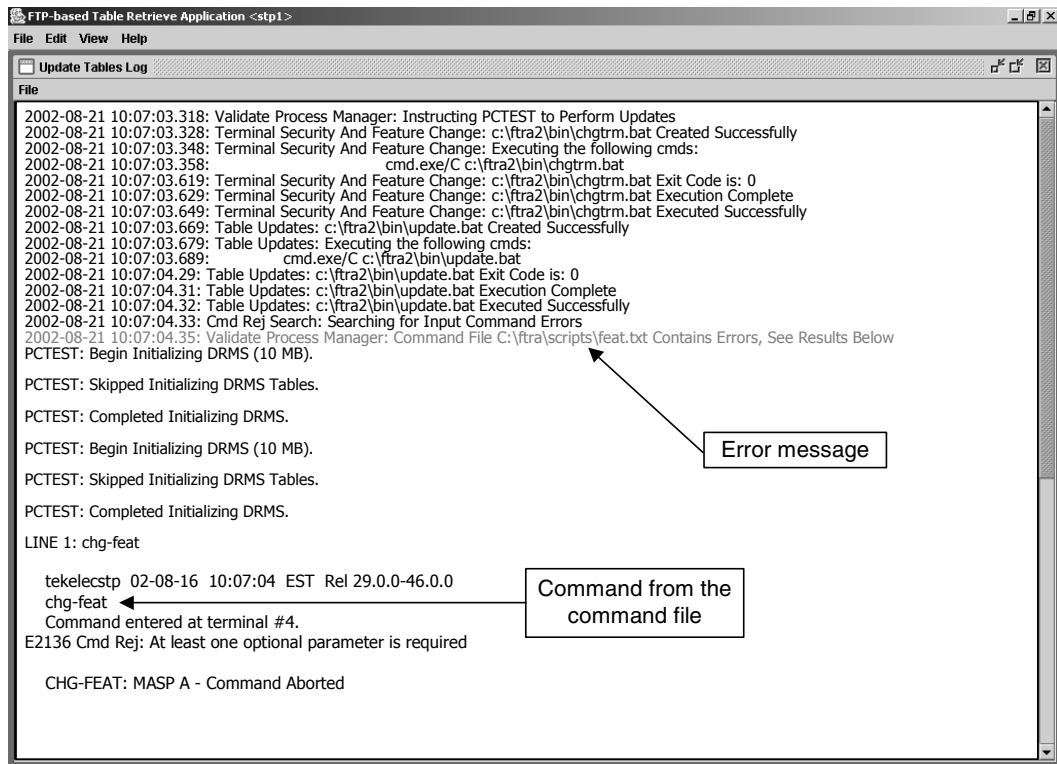


Figure 92. Update Tables Log with Stop on Error Box NOT Checked Error in the Update Tables Window


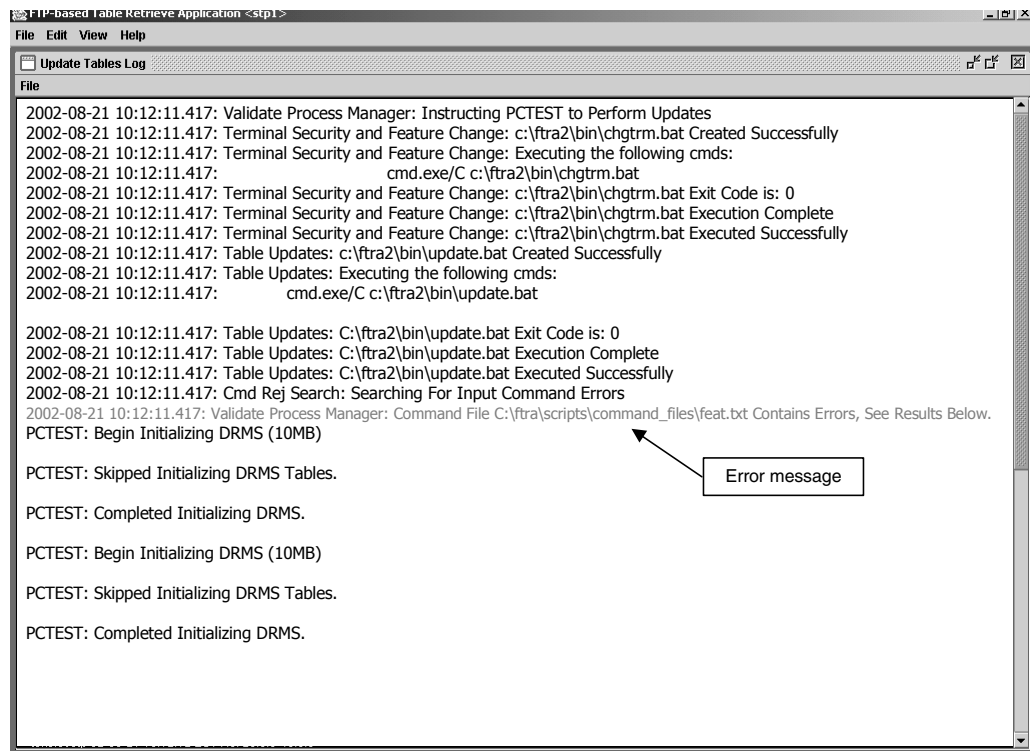


Figure 86 on page 76 shows an example of a command file that produced the error shown in Figure 92.

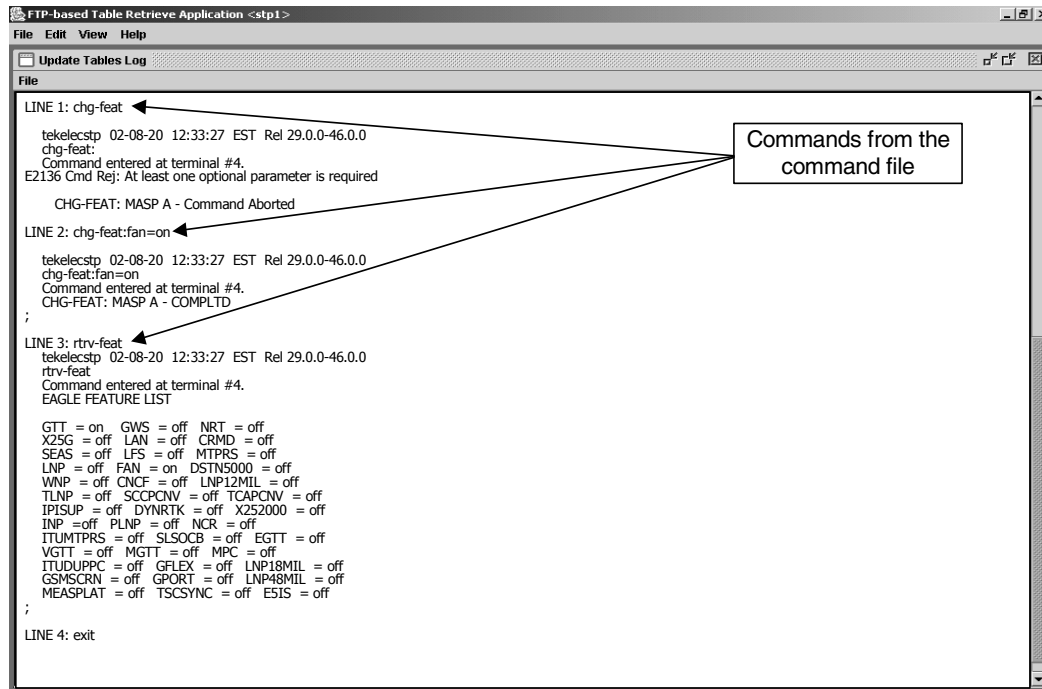
Figure 93. Update Tables Log with Stop on Error Box NOT Checked Error in the Update Tables Window (continued)



File Menu in the Update Tables Log Window

The **File** menu in the **Update Tables Log** window, shown in Figure 94 on page 83, provides the user with the following selections:

- Clearing the Update Tables Log display.
- Printing the Update Tables Log.
- Saving the Update Tables Log to a file.
- Closing the **Update Tables Log** window.

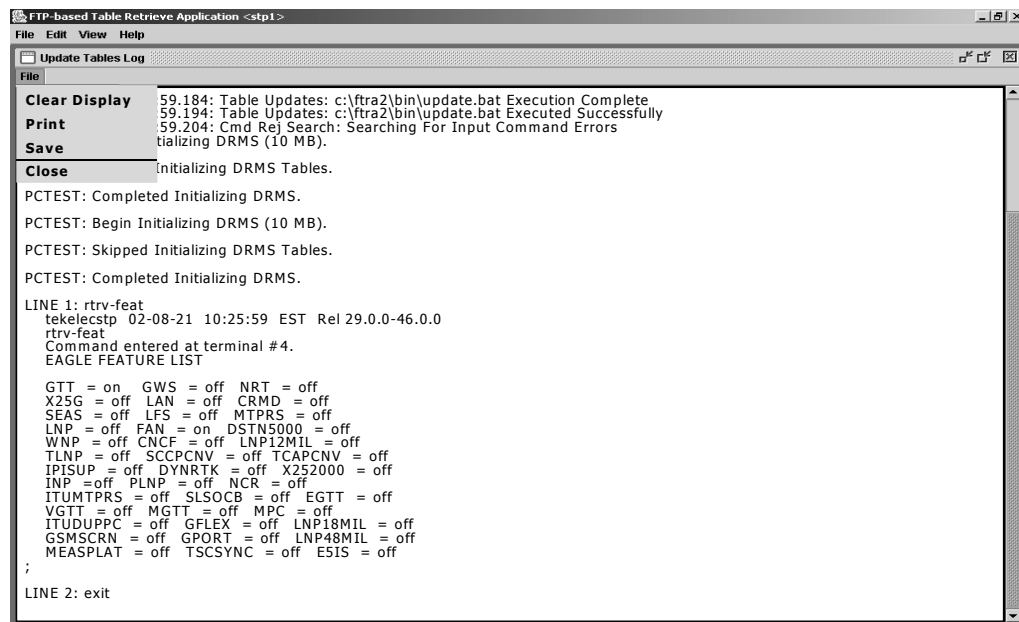Figure 94. File Menu in the Update Tables Log Window

Clearing the Update Tables Log Display

The display can be cleared, enabling new entries to be captured to the log. Once the log is cleared, the existing entries are lost unless the log is save to a file or printed before the display is cleared.

Procedure

NOTE: Perform either step 1 or steps 2 and 3.

1. Select **File > Clear Display** in the **Update Tables Log** window. See Figure 94.
2. Select **View > Update Tables Log** in the **FTP-based Table Retrieve Application** window. See Figure 95. The **Update Tables Log** window opens.

Figure 95. View Menu

3. Select **File > Clear Display** in the **Update Tables Log** window. The Update Tables Log display clears.
-


Printing the Update Tables Log

Procedure

NOTE: Perform either step 1 or steps 2 and 3.

1. Select **File > Print** from the **Update Tables Log** window. See Figure 94 on page 83.
-
2. Select **View > Update Tables Log** in the **FTP-based Table Retrieve Application** window. See Figure 95 on page 83. The Update Tables Log opens.
-
3. Select **File > Print** from the **Update Tables Log** window. The **Print** window opens. See Figure 96.

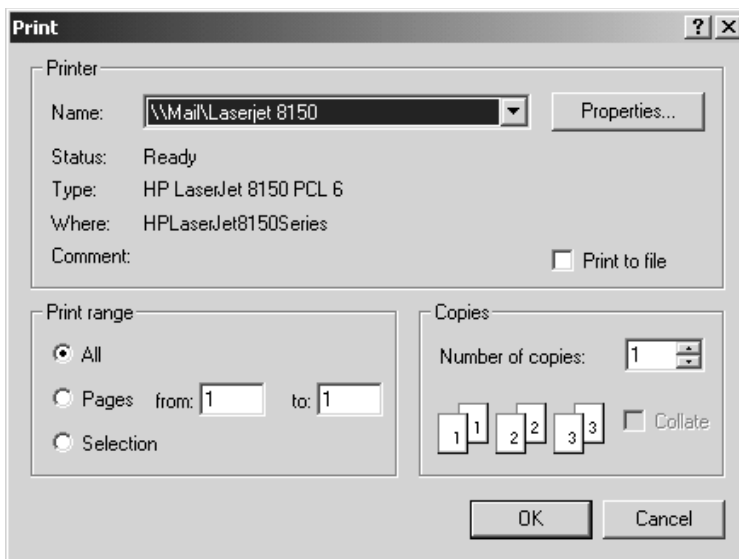Figure 96. Print Window



4. Configure the printer settings.
-
5. To print the Update Tables Log, click the **OK** button. The current contents of the Update Tables Log are printed.
-

6. If you do not wish to print the Update Tables Log, click the **Cancel** button.
-


Saving the Update Tables Log to a File

Procedure

NOTE: Perform either step 1 or steps 2 and 3.

1. Select **File > Save** from the **Update Tables Log** window. See Figure 94.
2. Select **View > Update Tables Log** in the **FTP-based Table Retrieve Application** window. See Figure 95 on page 83. The Update Tables Log opens.
3. Select **File > Save** in the **Update Tables Log** window. The **Save** window opens. See Figure 97.

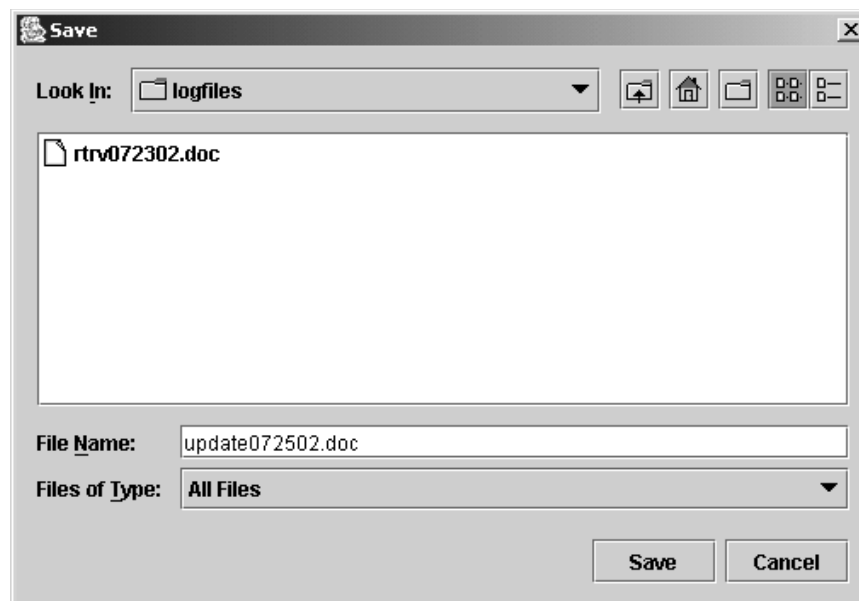Figure 97. Save Window




4. Select a location for the file, and enter the file name and file type (with either the .doc or .txt extensions).

NOTE: The .doc file type is recommended, although the user can use Microsoft Word to open the file even if it was saved as a .txt file.

5. To save the file, click the **Save** button. A **Saved** file confirmation window opens with "Data saved to file." See Figure 98. Click **OK**, to continue.

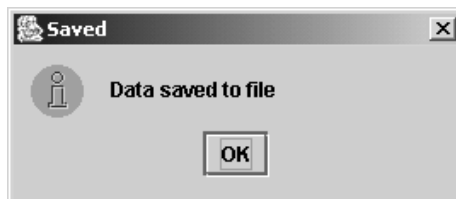Figure 98. Saved Confirmation Window



-
6. If you do not wish to save the file, click the **Cancel** button in the **Save** window.
-

Closing the Update Tables Log Window


Procedure

1. Select **File > Close** in the **Update Tables Log** window, or click the close window button in the upper right hand corner of the **Update Tables Log** window. See Figure 94 on page 83. The **Update Tables Log** window closes.
-

The System Log

The System Log contains an event history and any errors that have occurred when database tables are retrieved from an STP, or command files are sent to an STP. See Figure 99.

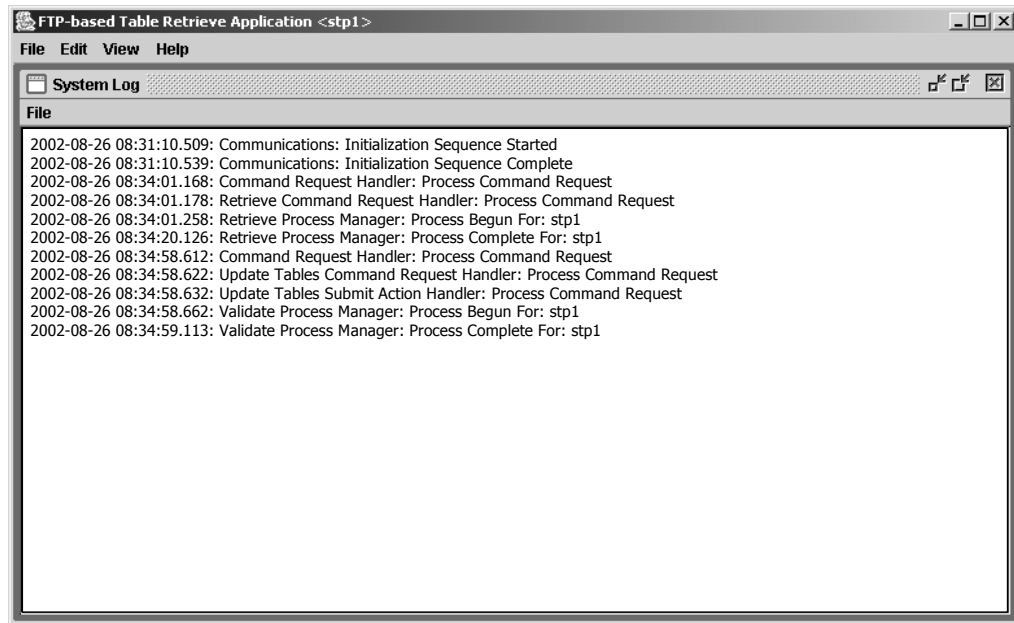
Figure 99. System Log Window



File Menu in the System Log Window

The **File** menu in the **System Log** window, shown in Figure 100 on page 88, provides these selections:

- Clearing the System Log display.
- Printing the System Log.
- Saving the System Log to a file.
- Closing the **System Log** window.

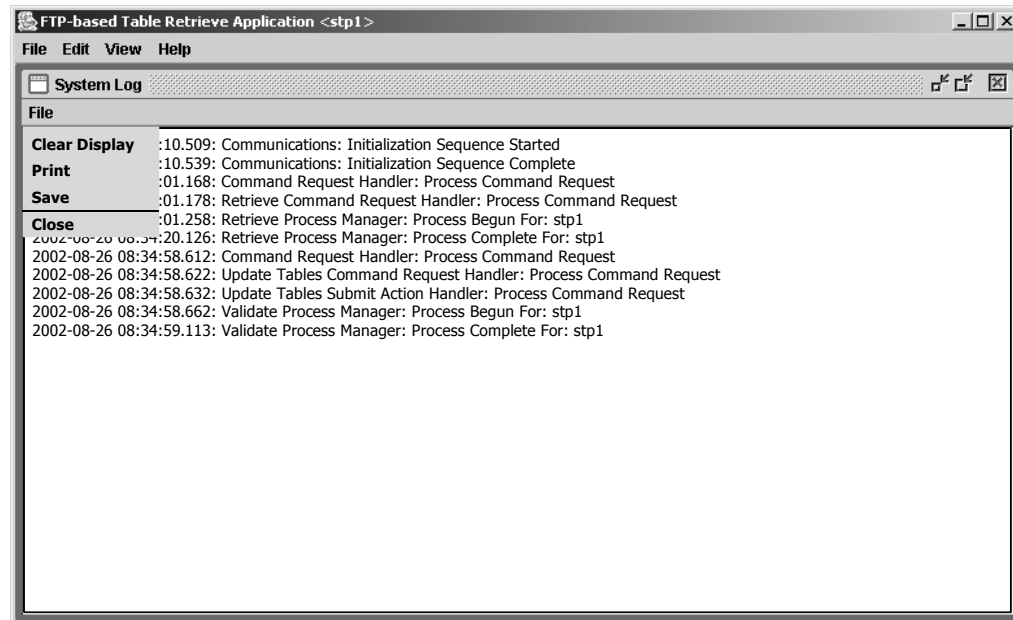Figure 100. File Menu in the System Log Window

Clearing the System Log Display

The display can be cleared, enabling new entries to be captured to the log. Once the log is cleared, the existing entries are lost unless the log is saved to a file or printed before the display is cleared.

Procedure

1. Select **View > System Log** in the **FTP-based Table Retrieve Application** window. See Figure 101. The **System Log** window opens.

Figure 101. View Menu


2. Select **File > Clear Display** in the **System Log** window. See Figure 100. The **System Log** display clears.

Printing the System Log

Procedure

1. Select **View > System Log** in the **FTP-based Table Retrieve Application** window. See Figure 101 on page 88. The **System Log** window opens.
 2. Select **File > Print** in the **System Log** window. The **Print** window opens. See Figure 102.
-

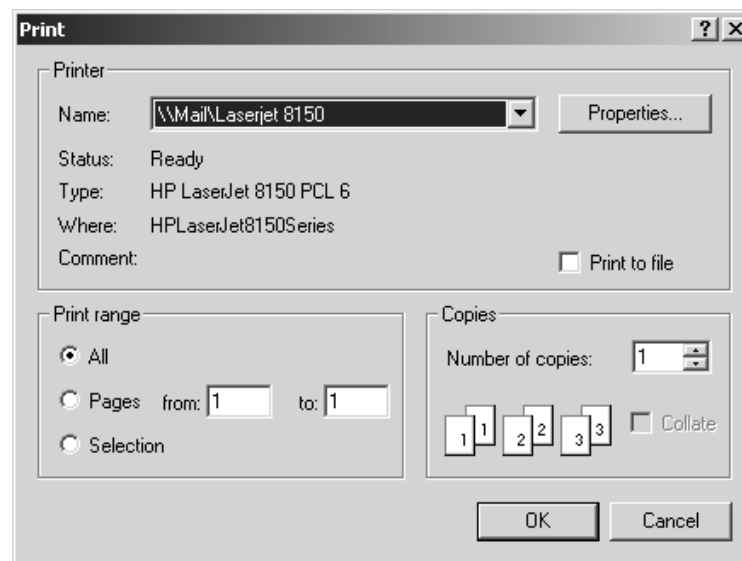Figure 102. Print Window




3. Configure the printer settings.
 4. To print the System Log, click the **OK** button. The current contents of the System Log are printed.
 5. If you decide not to print the System Log, click the **Cancel** button.
-

Saving the System Log to a File

Procedure

1. Select **View > System Log** in the **FTP-based Table Retrieve Application** window. See Figure 101 on page 88. The System Log opens.
 2. Select **File > Save** in the **System Log** window. The **Save** window opens. See Figure 103.
-

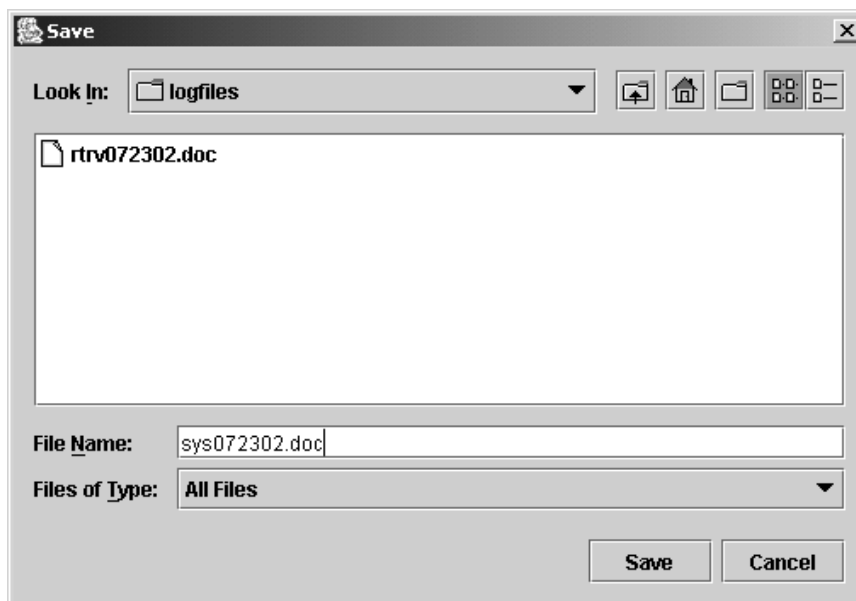Figure 103. Save Window




3. Select a location for the file, and enter the file name and file type (with either the .doc or .txt extensions).

NOTE: The .doc file type is recommended, although the user can use Microsoft Word to open the file even if it was saved as a .txt file.

4. To save the System Log to a file, click the **Save** button. A **Saved** file confirmation opens with "Data saved to file". See Figure 104. Click **OK** to continue.

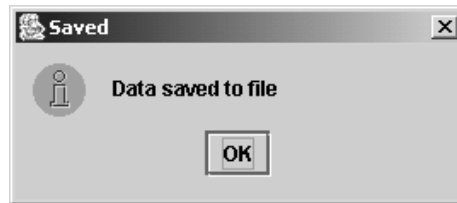Figure 104. Saved Confirmation Window



-
5. If you do not wish to save the System Log to a file, click the **Cancel** button in the **Save** window.
-

Closing the System Log Window

Procedure

1. Select **File > Close** in the **System Log** window, or click the close window button in the upper right hand corner of the **System Log** window. The **System Log** window closes.
-

About FTRA Window


The **About FTRA** window displays the version level of the FTRA and copyright information. To display the **About FTRA** window, select **Help > About** in the **FTP-based Table Retrieve Application** window. See Figure 105.

Figure 105. Help Menu



The **About FTRA** window opens. See Figure 106. Click **OK**, to continue.

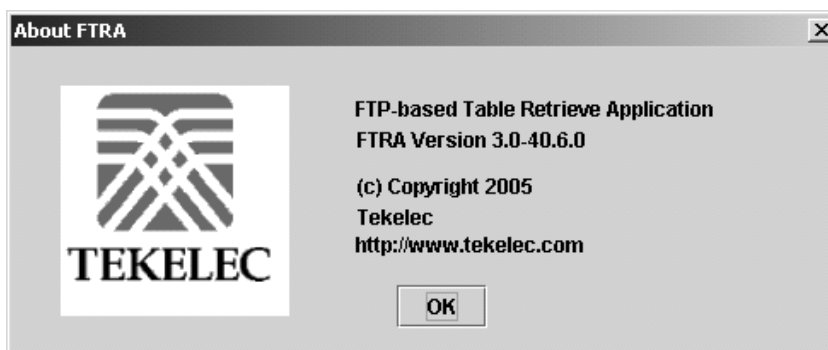Figure 106. Typical About FTRA Window



FTRA release 4.0

The following sub-sections detail the changes that were made to FTRA Release 4.0.

Change summary.

The following enhancements have been included in FTRA Release 4.0:

1. Support for rtrv-stp command.
2. Support to change the STP Username and Password for an STP whose configuration already exists in the system through the Command Line.

The second identified enhancement has introduced some minor changes to the Command Line Interface.

RTRV-STP Command.


The **rtrv-stp** command is added to the list of rtrv commands supported on FTRA. The rtrv-stp command provides a consolidated report of STP configuration on a system-wide basis.

NOTE: The rtrv-stp functionality is supported on Eagle Release 35.0 or later.

Retrieve Tables

This added functionality provided in FTRA Release 4.0 changes the display of the Retrieve Table Window. A new command rtrv-stp is added to the retrieve command list as shown in Figures 107.

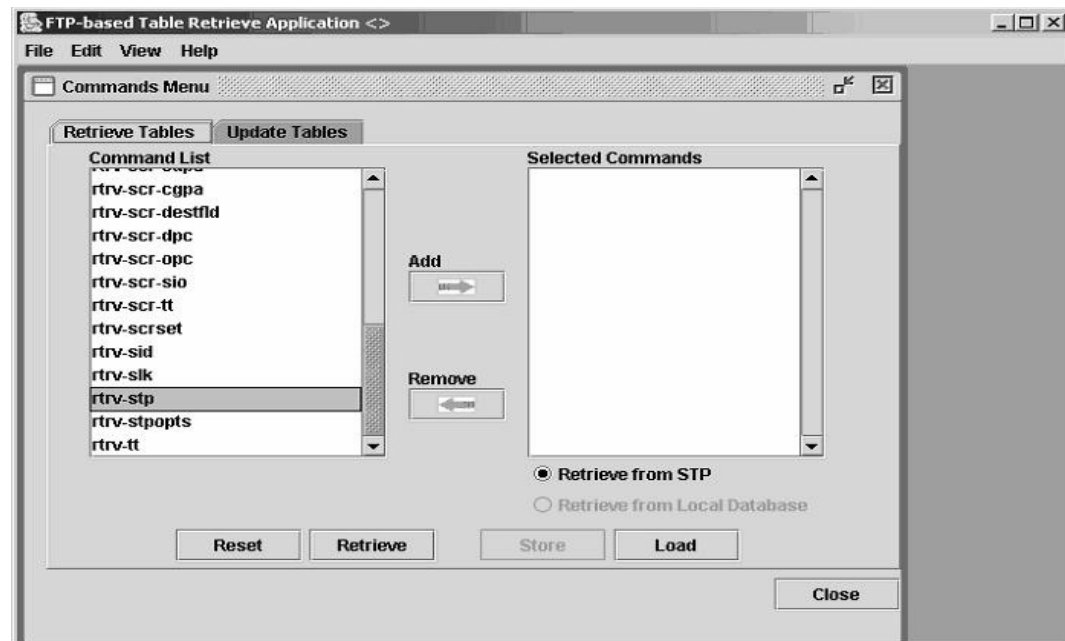Figure 107. Retrieve Tables window with rtrv-stp command selected for retrieval.



RTRV-STP Command Retrieval Session

The FTRA retrieval session when rtrv-stp command is supported on EAGLE is shown in Figures 108. If the command is not supported on EAGLE, an error will be displayed and the retrieval session will be terminated (refer "STP data modified through CLI." on page 95).

Figure 108. Successful Retrieval Session for rtrv-stp command


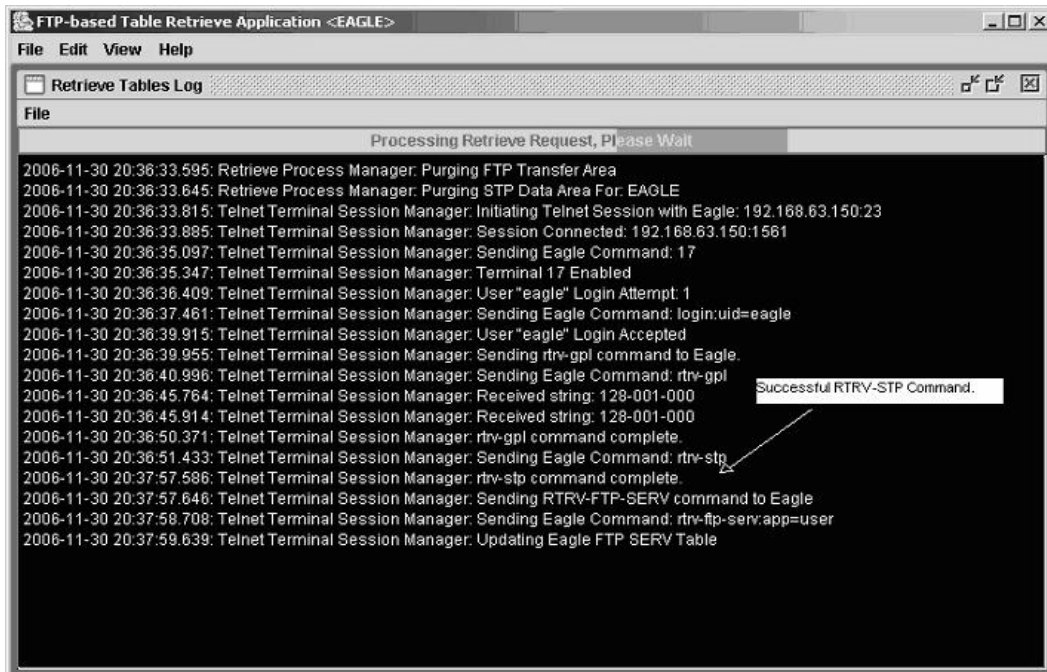


Figure 109. Rtrv-stp Command unsupported on EAGLE release

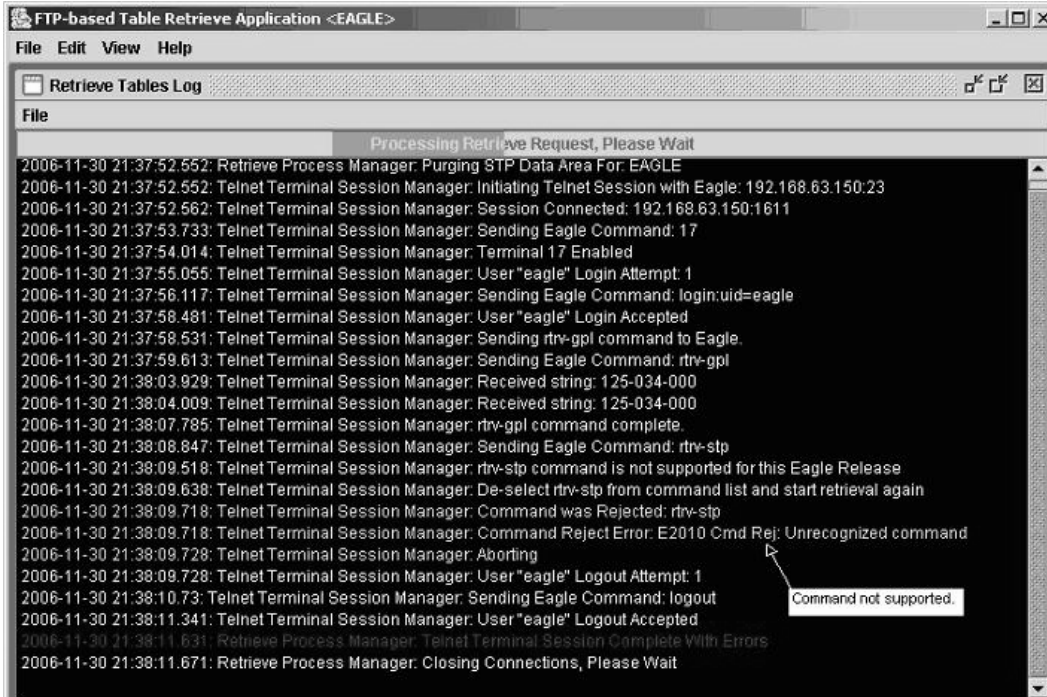


Command line interface

FTRA 4.0 supports modifying the STP Username and STP Password through the CLI for an STP whose configuration already exists in the system. Using the CLI the STP username and password can be modified in the system configuration without interacting with the GUI. Figure 110 shows the FTRA command line interface for modifying the STP Username and STP Password through the CLI for an STP "EAGLE".

After successfully updating the STP parameters in the system configuration, a message will be displayed as shown in the Figure 110.

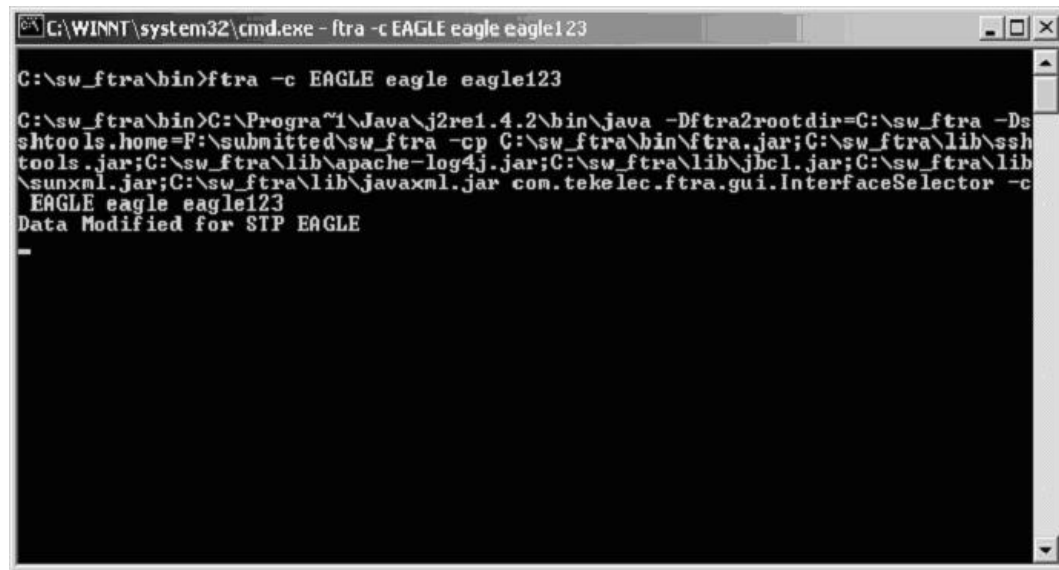Figure 110. STP data modified through CLI.




```
C:\WINNT\system32\cmd.exe - ftra -c EAGLE eagle eagle123

C:\sw_ftra\bin>ftra -c EAGLE eagle eagle123

C:\sw_ftra\bin>C:\Program Files\Java\j2re1.4.2\bin\java -Dftra2rootdir=C:\sw_ftra -Dssh
tools.home=F:\submitted\sw_ftra -cp C:\sw_ftra\bin\ftra.jar;C:\sw_ftra\lib\ssh
tools.jar;C:\sw_ftra\lib\apache-log4j.jar;C:\sw_ftra\lib\jcl.jar;C:\sw_ftra\lib
\sunxml.jar;C:\sw_ftra\lib\jaxml.jar com.tekelec.ftra.gui.InterfaceSelector -c
EAGLE eagle eagle123
Data Modified for STP EAGLE
```

If the user supplied STP name doesn't match with one of the existing STP(s) configured in the system, an error message shall be displayed as shown in Figure 111 on page 96.

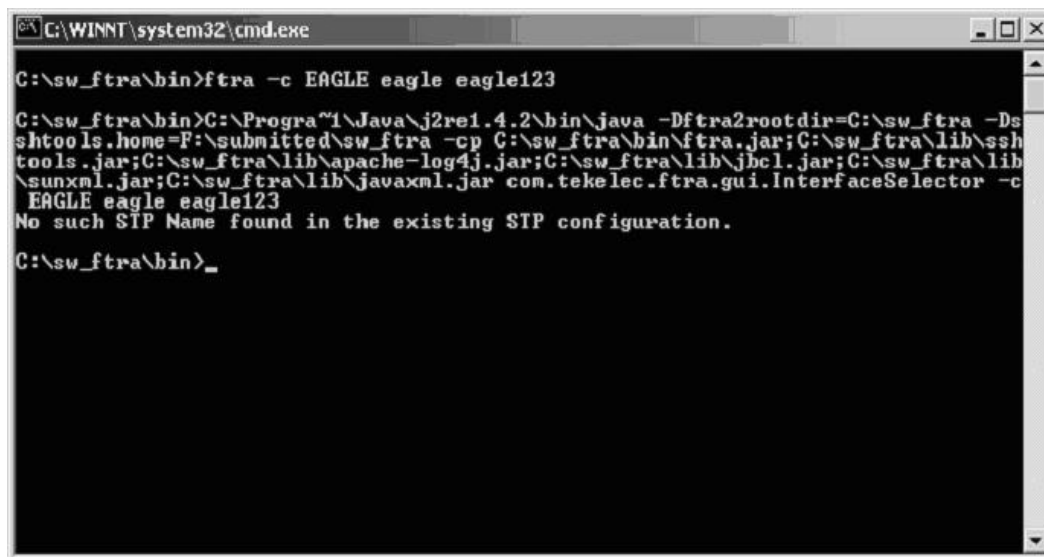Figure 111. Invalid STP name


```
C:\WINNT\system32\cmd.exe

C:\sw_ftra\bin>ftra -c EAGLE eagle eagle123

C:\sw_ftra\bin>C:\Program Files\Java\j2re1.4.2\bin\java -Dftra2rootdir=C:\sw_ftra -Dssh
tools.home=F:\submitted\sw_ftra -cp C:\sw_ftra\bin\ftra.jar;C:\sw_ftra\lib\ssh
tools.jar;C:\sw_ftra\lib\apache-log4j.jar;C:\sw_ftra\lib\jbc1.jar;C:\sw_ftra\lib
\sunxml.jar;C:\sw_ftra\lib\jaxaml.jar com.tekelec.ftra.gui.InterfaceSelector -c
EAGLE eagle eagle123
No such STP Name found in the existing STP configuration.

C:\sw_ftra\bin>
```

If the user supplies a wrong number of arguments through the command line then the error message as shown in Figure 112 on page 96 is displayed.

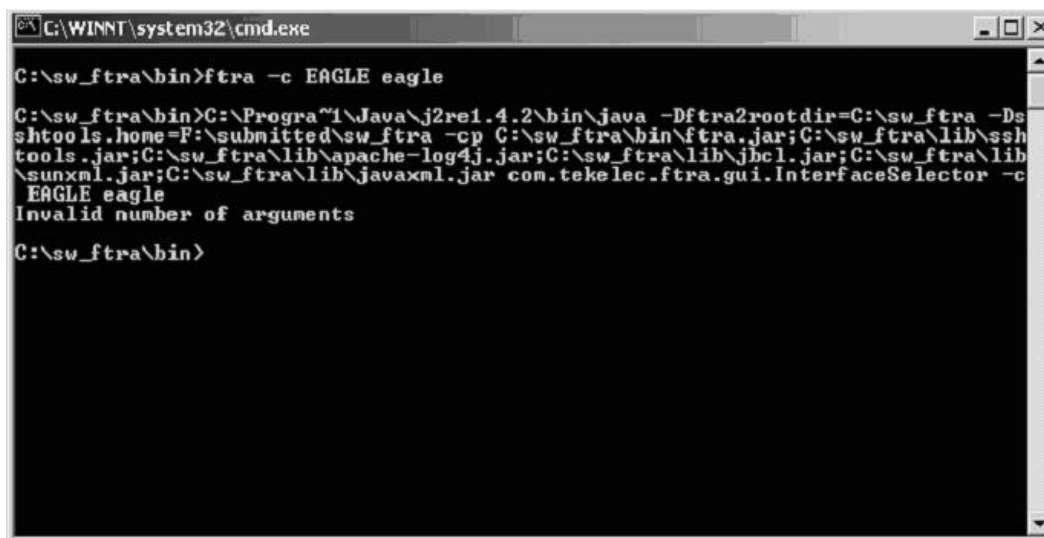Figure 112. Invalid number of arguments.

```
C:\WINNT\system32\cmd.exe

C:\sw_ftra\bin>ftra -c EAGLE eagle

C:\sw_ftra\bin>C:\Program Files\Java\j2re1.4.2\bin\java -Dftra2rootdir=C:\sw_ftra -Dssh
tools.home=F:\submitted\sw_ftra -cp C:\sw_ftra\bin\ftra.jar;C:\sw_ftra\lib\ssh
tools.jar;C:\sw_ftra\lib\apache-log4j.jar;C:\sw_ftra\lib\jbc1.jar;C:\sw_ftra\lib
\sunxml.jar;C:\sw_ftra\lib\jaxaml.jar com.tekelec.ftra.gui.InterfaceSelector -c
EAGLE eagle
Invalid number of arguments

C:\sw_ftra\bin>
```

Version Information

FTRA Release 4.0 displays an “About FTRA” window. Figure 149 shows the new FTRA Version string and updated copyright information.

Figure 113. About FTRA Display Window



SSH/SFTP Error Codes

Table 10 and Table 11 on page 113 contain a list of the error codes that can be generated when making a secure connection between the FTRA, version 4.0, and the EAGLE 5 ISS. Each error code contains a brief description of the error and the suggested recovery action.

This section also contains procedures, following Tables 10 and 11, for testing connectivity and network problems, and to verify that the setup for making secure connections is correct.

If secure connections to the EAGLE 5 ISS cannot be made, verify that the Eagle OA&M IP Security Enhancements feature is enabled and activated by entering the `rtrv-ctrl-feat` command at the EAGLE 5 ISS before performing any of the actions in Tables 10 and 11. If the Eagle OA&M IP Security Enhancements feature is not enabled or activated, perform the “Activating the Eagle O&AM IP Security Enhancements Controlled Feature” procedure in the *Database Administration Manual - System Management* and enable and activate the Eagle OA&M IP Security Enhancements feature.

If any of the errors shown in Table 10 or Table 11 on page 113 are encountered after the recovery procedure is verified, contact the Customer Care Center. Refer to page 4 for the contact information.

Table 10. FTP/SFTP/SSH Error Codes

SFTP/SSH Generic Network Client Error Code	Description	Action/Recovery
User Errors		
594	Invalid Path	Verify that the path is valid in the FTP Server Configuration Menu window (see Figure 35 on page 36).
598	The SSHD daemon is not running on the destination system or the server IP address unavailable.	Verify that the IP address exists on network with a ping (Refer to the “Connectivity Test – I” section on page 116 and the “Connectivity Test - II” section on page 117). If the IP address exists on network then verify that SSHD daemon is running on the destination machine using the <code>ps -ef grep sshd</code> command.
629	The SFTP daemon is not running	Verify that the subsystem entry in the <code>sshd_config</code> file on the destination station is specified and points to the SFTP daemon.

Table 10. FTP/SFTP/SSH Error Codes (Continued)

SFTP/SSH Generic Network Client Error Code	Description	Action/Recovery
633	User login failure.	Verify that the Username and Password in the STP Connection Configuration Menu window, (see Table 2 on page 6) is valid and an account exists for the username and password on the SSHD server host.
SFTP Errors		
595	File open failed.	Invalid file name in the download list, or out of resources. Report this issue to the Customer Care Center immediately. Refer to page 4 for the contact information.
596	The file name is already specified.	Report this issue to the Customer Care Center immediately. (Internal SFTP implementation error). Refer to page 4 for the contact information.
SFTP Client Errors		
597	SFTP client packet send failure	Perform these tests: • “FTP Server Verification” on page 116 • “SFTP /SSHD Server Verification” on page 116 • “Connectivity Test – I” on page 116 • “Connectivity Test - II” on page 117 • “Network Outage Trouble Shooting” on page 118. Make any fixes necessary and retry the connection. If the problem persists, report the issue to the Customer Care Center. Refer to page 4 for the contact information.
598	The SFTP connection is closed.	
599	SFTP packet read failure	

Table 10. FTP/SFTP/SSH Error Codes (Continued)

SFTP/SSH Generic Network Client Error Code	Description	Action/Recovery
600	SFTP protocol error. The received message is larger than the expected packet size.	Verify that the SFTP/SSHD version is compatible with openSSH 3.0.2p1 . Verify there is no network outage by performing the tests in “Network Outage Trouble Shooting” section on page 118. If the error persists, report the issue to the Customer Care Center. Refer to page 4 for the contact information.
601	Undefined	Notify the Customer Care Center. Refer to page 4 for the contact information.
608	SFTP received a invalid ID in the response received during a read operation on remote directory.	Verify that the SFTP/SSHD version is compatible with openSSH 3.0.2p1 . Verify there is no network outage by performing the tests in “Network Outage Trouble Shooting” section on page 118. If the error persists, report the issue to the Customer Care Center. Refer to page 4 for the contact information.
609	SFTP: Handle mismatch error. This error is displayed when there is a failure to receive an expected handle upon successful READ/WRITE/CREAT/TRUNC/EXCL of a file using SSH_FXP_OPEN on remote server.	
610	Unexpected SSH2_FXP_ATTRS.	
611	Unexpected SSH_FXP_NAME. SFTP using the SSH_FXP_OPENDIR opens a directory for reading. The server responds to this request with either a SSH_FXP_NAME or a SSH_FXP_STATUS message. This error code implies that an unexpected SSH_FXP_NAME is received.	Verify that the SFTP/SSHD version is compatible with openSSH 3.0.2p1 . Verify there is no network outage by performing the tests in “Network Outage Trouble Shooting” section on page 118.

Table 10. FTP/SFTP/SSH Error Codes (Continued)

SFTP/SSH Generic Network Client Error Code	Description	Action/Recovery
612	The SFTP client uses the SSH_FXP_REALPATH request to have the server localize any given path name to an absolute path. This is useful for converting path names containing “..” components or relative pathnames without a leading slash into absolute paths. This error implies that there is a failure during this operation	Check if the access to the path specified in the FTP Server Configuration Menu window (see Figure 35 on page 36) is accessible and re-try the connection.
613	The SSH_FXP_READLINK request is used by the SFTP client to read the target of a symbolic link. The server will respond with a SSH_FXP_NAME packet containing only one name and a dummy attributes value. The name in the returned packet contains the target of the link. This failure implies that there is a failure during the READLINK operation.	Verify that the SFTP/SSHD version is compatible with openSSH 3.0.2p1 . Verify there is no network outage by performing the tests in “Network Outage Trouble Shooting” section on page 118.
614	The SFTP client receives SSH_FXP_DATA as a response to any file operations from the server. This error implies that the client received an unexpected SSH_FXP_NAME from the server.	
615	The SFTP client received more data than expected.	
616	The SFTP client failed to read the data from the file descriptor of the file specified for transfer.	Report this issue to the Customer Care Center immediately. Refer to page 4 for the contact information.

Table 10. FTP/SFTP/SSH Error Codes (Continued)

SFTP/SSH Generic Network Client Error Code	Description	Action/Recovery
SSH Client Errors		
617	Excessive identity files. This error means that there are excessive identity files. OpenSSH implementation contains the maximum of 100 identity files or the client configuration file is corrupted.	Report this issue to the Customer Care Center immediately. Refer to page 4 for the contact information.
624	The debug levels allowed for SSH protocol in openSSH is 0-9. There is either an error in the client configuration file, or the client configuration file is corrupted.	
625	Failure to read the client configuration file.	Report this issue to the Customer Care Center immediately. Refer to page 4 for the contact information.
626	Invalid compression level is specified in the client configuration file.	

Table 10. FTP/SFTP/SSH Error Codes (Continued)

SFTP/SSH Generic Network Client Error Code	Description	Action/Recovery
627	SSH failure to setup the IO with the server.	Verify that the SFTP/SSHD version is compatible with openSSH 3.0.2p1. Verify there is no network outage by performing these tests: • “FTP Server Verification” on page 116 • “SFTP /SSHD Server Verification” on page 116 • “Connectivity Test – I” on page 116 • “Connectivity Test - II” on page 117 • “Network Outage Trouble Shooting” on page 118. Make any fixes necessary and retry the connection. If the problem persists, report the issue to the Customer Care Center. Refer to page 4 for the contact information.
628	SSH failure to open the channel for the SSH connection with the server.	
629	SSH failure to setup the channel for the SSH connection with the server.	
630	SSH failure to verify the SSH client host key.	
631	SSH user authentication failure. Please verify that only the password authentication is set to “yes” in the SSH server configuration file. Refer to the SSHD server configuration provided by vendor of the product. The FTRA and the EAGLE 5 ISS is compatible with openSSH 3.0.2p1 .	Report the issue to the Customer Care Center if the problem persists after the SSHD configuration file is verified. Refer to page 4 for the contact information.
632	The authentication method is NULL in the client software. This error is a failure to set the null authentication method.	Report this issue to the Customer Care Center. Refer to page 4 for the contact information.

Table 10. FTP/SFTP/SSH Error Codes (Continued)

SFTP/SSH Generic Network Client Error Code	Description	Action/Recovery
633	Permission is denied by the server due to authentication failure.	Verify that the SFTP/SSHD version is compatible with openSSH 3.0.2p1. Verify there is no network outage by performing these tests: • “FTP Server Verification” on page 116 • “SFTP /SSHD Server Verification” on page 116 • “Connectivity Test – I” on page 116 • “Connectivity Test - II” on page 117 • “Network Outage Trouble Shooting” on page 118. Make any fixes necessary and retry the connection. If the problem persists, report the issue to the Customer Care Center. Refer to page 4 for the contact information.
640	A bad message was received during the SSH authentication.	
641	Missing authentication context, encountered during the SSH user authorization.	
642	Failure during the public key read/verification operation.	
643	Undefined SFTP/SSH error.	

Table 10. FTP/SFTP/SSH Error Codes (Continued)

SFTP/SSH Generic Network Client Error Code	Description	Action/Recovery
644	Unexpected SSH_FXP_STATUS error. An invalid status was received by the SFTP server.	- Verify that the SFTP/SSHD version is compatible with openSSH 3.0.2p1. Verify there is no network outage by performing these tests: “FTP Server Verification” on page 116 “SFTP /SSHD Server Verification” on page 116 “Connectivity Test – I” on page 116 “Connectivity Test - II” on page 117 “Network Outage Trouble Shooting” on page 118. Make any fixes necessary and retry the connection. If the problem persists, report the issue to the Customer Care Center. Refer to page 4 for the contact information.
645	A bad option was specified in the SSH client on the EAGLE 5 ISS.	
646	An unsupported escape character was used in the SSH client on the EAGLE 5 ISS.	
647	An unsupported cipher type was used in the SSH client on the EAGLE 5 ISS.	Report this issue to the Customer Care Center immediately. Refer to page 4 for the contact information.

Table 10. FTP/SFTP/SSH Error Codes (Continued)

SFTP/SSH Generic Network Client Error Code	Description	Action/Recovery
648	An unsupported MAC type was used in the SSH client on the EAGLE 5 ISS.	Verify that the SFTP/SSHD version is compatible with openSSH 3.0.2p1. Verify there is no network outage by performing these tests: • “FTP Server Verification” on page 116 • “SFTP /SSHD Server Verification” on page 116 • “Connectivity Test – I” on page 116 • “Connectivity Test - II” on page 117 • “Network Outage Trouble Shooting” on page 118. Make any fixes necessary and retry the connection. If the problem persists, report the issue to the Customer Care Center. Refer to page 4 for the contact information.
649	A bad port was used in the SSH client on the EAGLE 5 ISS.	Report this issue to the Customer Care Center immediately. Refer to page 4 for the contact information.
656	Bad forwarding was used in the SSH client on the EAGLE 5 ISS.	
657	Bad forwarding ports were specified in the SSH client on the EAGLE 5 ISS.	
658	A bad dynamic port was specified in the SSH client on the EAGLE 5 ISS.	

Table 10. FTP/SFTP/SSH Error Codes (Continued)

SFTP/SSH Generic Network Client Error Code	Description	Action/Recovery
659	The host was not specified in the SSH client on the EAGLE 5 ISS.	Verify that the SFTP/SSHD version is compatible with openSSH 3.0.2p1. Verify there is no network outage by performing these tests: • “FTP Server Verification” on page 116 • “SFTP /SSHD Server Verification” on page 116 • “Connectivity Test – I” on page 116 • “Connectivity Test - II” on page 117 • “Network Outage Trouble Shooting” on page 118. Make any fixes necessary and retry the connection. If the problem persists, report the issue to the Customer Care Center. Refer to page 4 for the contact information.

Table 10. FTP/SFTP/SSH Error Codes (Continued)

SFTP/SSH Generic Network Client Error Code	Description	Action/Recovery
660	An invalid option or argument was specified in the SSH client on the EAGLE 5 ISS.	Report this issue to the Customer Care Center immediately. Refer to page 4 for the contact information.
661	The hostname was not specified in the SSH client on the EAGLE 5 ISS.	
663	The SSH client was unable to load the cipher type on the EAGLE 5 ISS.	
664	Asynchronous IO is not supported on IPSM, SSH client error.	
665	Compression is already enabled in the SSH client on the EAGLE 5 ISS.	
666	Unknown cipher number on the SSH client on the EAGLE 5 ISS.	
667	The SSH client key length is invalid.	
668	No key is available on the SSH client on the EAGLE 5 ISS.	Report this issue to the Customer Care Center immediately. Refer to page 4 for the contact information.

Table 10. FTP/SFTP/SSH Error Codes (Continued)

SFTP/SSH Generic Network Client Error Code	Description	Action/Recovery
669	The secure connection was closed by the remote server, refer to the error on the SFTP/SSHD server side.	Verify that the SFTP/SSHD version is compatible with openSSH 3.0.2p1 . Verify there is no network outage by performing these tests:
670	Connection failure due to network outage or the connection was lost due to a faulty SSHD/SFTP server or network.	• “FTP Server Verification” on page 116 • “SFTP /SSHD Server Verification” on page 116 • “Connectivity Test – I” on page 116 • “Connectivity Test - II” on page 117 • “Network Outage Trouble Shooting” on page 118.
671	An unexpected packet type was received from the SFTP/SSHD server.	
672	A bad packet length was received from the SSHD/SFTP server.	Make any fixes necessary and retry the connection. If the problem persists, report the issue to the Customer Care Center. Refer to page 4 for the contact information.
673	A cryptographic attack was detected by the SSH client. Please notify the local system administrator.	Report the issue to the Customer Care Center. Refer to page 4 for the contact information. This is not a software problem but there is a security threat. The keys/authentication may have to be updated immediately.

Table 10. FTP/SFTP/SSH Error Codes (Continued)

SFTP/SSH Generic Network Client Error Code	Description	Action/Recovery
674	The SSH/SFTP client on the EAGLE 5 ISS failed to read from the remote side.	Verify that the SFTP/SSHD version is compatible with openSSH 3.0.2p1. Verify there is no network outage by performing these tests: • “FTP Server Verification” on page 116 • “SFTP /SSHD Server Verification” on page 116 • “Connectivity Test – I” on page 116 • “Connectivity Test - II” on page 117 • “Network Outage Trouble Shooting” on page 118. Make any fixes necessary and retry the connection. If the problem persists, report the issue to the Customer Care Center. Refer to page 4 for the contact information.
675	Corrupted check bytes were detected on the SSH/SFTP client on the EAGLE 5 ISS.	
676	Corrupted MAC on input was detected by the SSH/SFTP client on the EAGLE 5 ISS.	Verify that the sshtools.xml file provided with FTRA software has the field as shown: <pre><!-- The Message Authentication Code configuration, add or override default mac implementations --> <MacConfiguration> <DefaultAlgorithm>hmac-md5</DefaultAlgorithm> </MacConfiguration></pre>
677	Corrupted pad on input was detected by the SSH/SFTP client on the EAGLE 5 ISS.	Report this issue to the Customer Care Center immediately. Refer to page 4 for the contact information.
678	SSH/SFTP tried to close a connection that is already closed.	

Table 10. FTP/SFTP/SSH Error Codes (Continued)

SFTP/SSH Generic Network Client Error Code	Description	Action/Recovery
679	The SSH/SFTP client on the EAGLE 5 ISS failed to write to the remote side.	Verify that the SFTP/SSHD version is compatible with openSSH 3.0.2p1. Verify there is no network outage by performing these tests: • “FTP Server Verification” on page 116 • “SFTP /SSHD Server Verification” on page 116 • “Connectivity Test – I” on page 116 • “Connectivity Test - II” on page 117 • “Network Outage Trouble Shooting” on page 118. Make any fixes necessary and retry the connection. If the problem persists, report the issue to the Customer Care Center. Refer to page 4 for the contact information.
680	SSH/SFTP tried to set the packet size twice.	Report this issue to the Customer Care Center immediately. Refer to page 4 for the contact information.
681	A bad packet size was detected by the SSH/SFTP client on the EAGLE 5 ISS.	

Table 10. FTP/SFTP/SSH Error Codes (Continued)

SFTP/SSH Generic Network Client Error Code	Description	Action/Recovery
SSH/SFTP Connection/Setup Errors		
682	The connection timed out when SSH tried to connect to SSHD.	Verify that the SFTP/SSHD version is compatible with openSSH 3.0.2p1. Verify there is no network outage by performing these tests: • “FTP Server Verification” on page 116 • “SFTP /SSHD Server Verification” on page 116 • “Connectivity Test – I” on page 116 • “Connectivity Test - II” on page 117 • “Network Outage Trouble Shooting” on page 118. Make any fixes necessary and retry the connection. If the problem persists, report the issue to the Customer Care Center. Refer to page 4 for the contact information.
683	The SSH connection was refused by the remote server.	
684	The SSHD server is unreachable.	
685	The network has reset.	
686	The SSH/SFTP connection has been aborted.	
687	The SFTP/SSH connection has been reset by the peer.	
688	Failed to allocate network buffers.	
689	The SSH/SFTP socket is already connected.	
690	The SSH/SFTP socket is not connected.	
691	The network channel is down.	
692	The SSHD/SFTP server connection host is down.	
693	SFTP client channel read failure.	
694	SFTP client channel write failure.	
695	SFTP client channel open failure.	

Table 11. Generic Network Error Codes

SFTP/SSH/ Generic Network Client Error Code	Description	Action/Recovery
40	A destination address is required.	Verify that there is an FTP server entry on the EAGLE 5 ISS using the rtrv-ftp-serv command, and re-try the connection
41	Protocol wrong type for socket	Report this issue to the Customer Care Center. Refer to page 4 for the contact information.
42	The protocol is not available.	
43	The protocol is not supported.	
44	The socket type is not supported.	
45	The operation is not supported on the socket.	
46	The protocol family is not supported.	
47	The address family is not supported.	
48	The address is already in use.	
49	The requested address cannot be assigned.	
50	Socket operation on non-socket	
51	The network is unreachable.	Verify that the connection tests and network outage numbers match as shown in these sections: • “Connectivity Test – I” on page 116 • “Connectivity Test - II” on page 117 • “Network Outage Trouble Shooting” on page 118. Make any fixes necessary and retry the connection. If the problem persists, report the issue to the Customer Care Center. Refer to page 4 for the contact information.
52	The network dropped the connection on reset.	

Table 11. Generic Network Error Codes (Continued)

SFTP/SSH/ Generic Network Client Error Code	Description	Action/Recovery
53	Software caused the connection to abort.	Report this issue to the Customer Care Center. Refer to page 4 for the contact information.
54	The connection was reset by the peer.	Verify that the connection tests pass and network outage numbers are within the allowed limits as shown in these sections: • “Connectivity Test – I” on page 116 • “Connectivity Test - II” on page 117 • “Network Outage Trouble Shooting” on page 118. Make any fixes necessary and retry the connection. If the problem persists, report the issue to the Customer Care Center. Refer to page 4 for the contact information.
55	No buffer space available.	Report this issue to the Customer Care Center. Refer to page 4 for the contact information.
56	The socket is already connected.	
57	The socket is not connected.	
58	Can't send after socket shutdown	
59	Too many references: can't splice	
60	The connection timed out.	Perform these tests and verify that the FTP server address responds to the ping command from the ISPM. • “Connectivity Test – I” on page 116 • “Connectivity Test - II” on page 117
61	The connection was refused.	Verify that there is a FTP server daemon is running on the remote station by performing the “FTP Server Verification” test on page 116.

Table 11. Generic Network Error Codes (Continued)

SFTP/SSH/ Generic Network Client Error Code	Description	Action/Recovery
62	The network is down.	Verify that the connection tests pass and network outage numbers are within the allowed limits as shown in these sections: • “Connectivity Test – I” on page 116 • “Connectivity Test - II” on page 117 • “Network Outage Trouble Shooting” on page 118. Make any fixes necessary and retry the connection. If the problem persists, report the issue to the Customer Care Center. Refer to page 4 for the contact information.
65	There is no route to the host.	
67	The host is down.	
30	Read-only file system	
32	Broken pipe	Report the issue to the Customer Care Center. Refer to page 4 for the contact information.
35	Unsupported value	

Troubleshooting Procedures

FTP Server Verification

Component: The FTP server IP address shown in the **FTP Server Configuration Menu** window (see Figure 35 on page 36).

Supported Version/Specification: Any FTP server compliant with IETF RFC 959.

Test: On the Unix platform, execute the `netstat -a | grep 21` command to verify that the FTP server is running on the machine with the IP address shown in the **FTP Server Configuration Menu** window (Figure 35 on page 36).

Expected Result:

```

Unix> netstat -a | grep 21
*.32821          *.*                0          0          0          0 LISTEN
f5e15218 stream-ord f5ee8880          0 /var/adm/atria/almd , The system and
process specific variable will change.

```

On the Windows platform, check the Task Manager to verify that the FTP daemon is running.

SFTP/SSHD Server Verification

Component: The SSHD/SFTP server IP address shown in the **FTP Server Configuration Menu** window (see Figure 35 on page 36).

Supported Version/Specification: Version compatible with openSSH 3.0.2p1.

Test: On the Unix platform, execute the `ps -f | grep sshd` command. Please refer to Unix MAN pages for help with `ps` command.

On the Windows platform, use the Task Manager to verify that the sshd daemon process is running.

Expected Result:

```

Unix> ps -ef | grep sshd
user  26912 26886  0 13:28:07 pts/5    0:00 grep sshd
root   411    1  0   Jul 24 ?        4:35 /usr/local/sbin/sshd Note: The
user/system/path variables depends on the server.

```

On the Windows platform, check the Task Manager to verify that the FTP daemon is running.

Connectivity Test – I

Component: Connectivity Test - I.

Supported Version/Specification: N/A

Test: To verify that there is a network connection available between the EAGLE 5 ISS and the FTP/SFTP server shown in the **FTP Server Configuration Menu** window (see Figure 35 on page 36).

On an EAGLE 5 ISS terminal, enter the **pass:loc=xxxx:cmd="ping yy.yy.yy.yy"** command, where **xxxx** is location of IPSM associated with the IP address entered in the **STP Connection Configuration Menu** window, (see Table 2 on page 6), and **yy.yy.yy.yy** is the IP address of the FTP/SFTP server shown in the **FTP Server Configuration Menu** window (see Figure 35 on page 36).

Expected Result:

NOTE: The RTT time and data sizes may vary.

```
> pass:loc=xxxx:cmd="ping yy.yy.yy.yy"
Command Accepted - Processing
rlghncxa03w 05-09-31 13:57:59 GMT EAGLE5 34.0.0
pass:loc=xxxx:cmd="ping yy.yy.yy.yy"
Command entered at terminal #5.

;
rlghncxa03w 05-09-31 13:57:59 GMT EAGLE5 34.0.0
PASS: Command sent to card

;
rlghncxa03w 05-09-31 13:57:59 GMT EAGLE5 34.0.0
PING command in progress

;
rlghncxa03w 05-09-31 13:57:59 GMT EAGLE5 34.0.0

;
rlghncxa03w 05-09-31 13:58:01 GMT EAGLE5 34.0.0
PING yy.yy.yy.yy: 56 data bytes
64 bytes from yy.yy.yy.yy: icmp_seq=0. time=10. ms
64 bytes from yy.yy.yy.yy: icmp_seq=1. time=5. ms
64 bytes from yy.yy.yy.yy: icmp_seq=2. time=5. ms
---yy.yy.yy.yy PING Statistics---
3 packets transmitted, 3 packets received, 0% packet loss
round-trip (ms) min/avg/max = 5/6/10
PING command complete
```

Connectivity Test - II

Component: Connectivity Test - II.

Supported Version/Specification: N/A.

Test: To verify that there is a network connection available between the EAGLE 5 ISS and FTP/SFTP server shown in the **FTP Server Configuration Menu** window (see Figure 35 on page 36).

Execute the **ping -s zz.zz.zz.zz** command on the FTP server machine where **zz.zz.zz.zz** is the IP address of the EAGLE 5 ISS shown in the **STP Connection Configuration Menu** window (see Table 2 on page 6).

Expected Result:

```
ping -s zz.zz.zz.zz
PING zz.zz.zz.zz: 56 data bytes
64 bytes from e1011501-3-a (zz.zz.zz.zz): icmp_seq=0. time=5. ms
64 bytes from e1011501-3-a (zz.zz.zz.zz): icmp_seq=1. time=4. ms
```

```

64 bytes from e1011501-3-a (zz.zz.zz.zz): icmp_seq=2. time=5. ms
64 bytes from e1011501-3-a (zz.zz.zz.zz): icmp_seq=3. time=4. ms

----zz.zz.zz.zz PING Statistics----
4 packets transmitted, 4 packets received, 0% packet loss
round-trip (ms)  min/avg/max = 4/4/5

```

Network Outage Trouble Shooting

Component: Network Outage Troubleshooting

Supported Version/Specification: N/A.

Test: To verify the TCP/IP traffic/network statistics are within the Tekelec supported network statistics.

At the EAGLE 5 ISS, enter the **pass:loc=xxxx:cmd="netstat -p tcp"** command at the EAGLE 5 ISS terminal, where **xxxx** is location of the IPSM associated with the IP address entered in the **STP Connection Configuration Menu** window, (see Table 2 on page 6), and analyze the data from output which is similar to the following example output.

NOTE: The specific information for the command may vary depending upon the system used.

```

> pass:loc=3102:cmd="netstat -p tcp"
Command Accepted - Processing
  rlghncxa03w 05-09-31 19:32:52 GMT  EAGLE5 34.0.0
  pass:loc=3102:cmd="netstat -p tcp"
  Command entered at terminal #5.
;
  rlghncxa03w 05-09-31 19:32:52 GMT  EAGLE5 34.0.0
  PASS: Command sent to card
;
  rlghncxa03w 05-09-31 19:32:52 GMT  EAGLE5 34.0.0
TCP:
  161 packets sent
    156 data packets (28411 bytes)
    0 data packet (0 byte) retransmitted
    5 ack-only packets (1 delayed)
    0 URG only packet
    0 window probe packet
    0 window update packet
    0 control packet
  161 packets received
    156 acks (for 28255 bytes)
    0 duplicate ack+C2
    0 ack for unsent data
    5 packets (9 bytes) received in-sequence
    0 completely duplicate packet (0 byte)
    0 packet with some dup. data (0 byte duped)
    0 out-of-order packet (0 byte)
    0 packet (0 byte) of data after window
    0 window probe
    0 window update packet
    0 packet received after close
    0 discarded for bad checksum
    0 discarded for bad header offset field
    0 discarded because packet too short
  0 connection request

```

```

1 connection accept
1 connection established (including accepts)
0 connection closed (including 0 drop)
0 embryonic connection dropped
156 segments updated rtt (of 157 attempts)
0 retransmit timeout
    0 connection dropped by rexmit timeout
0 persist timeout
0 keepalive timeout
    0 keepalive probe sent
    0 connection dropped by keepalive
0 pcb cache lookup failed

;

rlghncxa03w 05-09-31 19:32:52 GMT  EAGLE5 34.0.0

NETSTAT command complete

```

Expected Result:

The network outage causes the TCP/IP problems like:

- Network latency
- Packet drop
- Duplicate packets.

If the TCP Packet Delay, TCP Packet Loss, TCP Packet Error, or TCP Out of Order values are greater than the values shown in Table 12, fix the network problems and retry the connection.

Table 12. TCP Fault Tolerance Table for FTP/SFTP

Protocol	Fault	Threshold Value
SFTP/FTP	TCP Packet Delay	175 milliseconds
SFTP/ FTP	TCP Packet Loss	40% packet loss
SFTP/ FTP	TCP Packet Errors	10%
SFTP/ FTP	TCP Out of Order	30% of packets with offset of 30 packets

SSH/SFTP/SFTPD/SSHD Protocol Troubleshooting

For more information on SSH/SFTP/SFTPD/SSHD protocol troubleshooting, refer to *SSH, the Secure Shell: The Definitive Guide*, First Edition, Barrett and Silverman, O'Reilly, February 2001.

Index

- .doc file extension 2-21, 2-60, 2-85, 2-90
- .txt file extension 2-21, 2-60, 2-85, 2-90

- 30 - Read-only file system 2-115
- 32 - Broken pipe 2-115
- 35 - Unsupported value 2-115
- 40 - A destination address is required 2-113
- 41 - Protocol wrong type for socket 2-113
- 42 - The protocol is not available 2-113
- 43 - The protocol is not supported 2-113
- 44 - The socket type is not supported 2-113
- 45 - The operation is not supported on the socket 2-113
- 46 - The protocol family is not supported 2-113
- 47 - The address family is not supported 2-113
- 48 - The address is already in use 2-113
- 49 - The requested address cannot be assigned 2-113
- 50 - Socket operation on non-socket 2-113
- 51 - The network is unreachable 2-113
- 52 - The network dropped the connection on reset 2-113
- 53 - Software caused the connection to abort 2-114
- 54 - The connection was reset by the peer 2-114
- 55 - No buffer space available 2-114
- 56 - The socket is already connected 2-114
- 569 - The file name is already specified 2-99
- 57 - The socket is not connected 2-114
- 58 - Can't send after socket shutdown 2-114
- 59 - Too many references: can't splice 2-114
- 595 - File open failed 2-99
- 597 - SFTP client packet send failure 2-99
- 598 - The SFTP connection is closed 2-99
- 599 - SFTP packet read failure 2-99
- 60 - The connection timed out 2-114
- 600 - SFTP protocol error 2-100
- 601 - Undefined 2-100
- 608 - SFTP received a invalid ID in the response received during a read operation on remote directory 2-100
- 609 - SFTP: Handle mismatch error 2-100
- 61 - The connection was refused 2-114
- 610 - Unexpected SSH2_FXP_ATTRS 2-100
- 611 - Unexpected SSH_FXP_NAME 2-100
- 612 - SSH_FXP_REALPATH request failure 2-101
- 613 - SSH_FXP_READLINK request failure 2-101
- 614 - unexpected SSH_FXP_NAME 2-101
- 615 - The SFTP client received more data than expected 2-101
- 616 - The SFTP client failed to read the data from the file descriptor 2-101
- 617 - Excessive identity files 2-102
- 62 - The network is down 2-115
- 624 - The debug levels allowed for SSH protocol in openSSH is 0-9 2-102
- 625 - Failure to read the client configuration file 2-102
- 626 - Invalid compression level is specified in the client configuration file 2-102
- 627 - SSH failure to setup the IO with the server 2-103
- 628 - SSH failure to open the channel for the SSH connection with the server 2-103
- 629 - SSH failure to setup the channel for the SSH connection with the server 2-103
- 630 - SSH failure to verify the SSH client host key 2-103
- 631 - SSH user authentication failure 2-103
- 632 - The authentication method is NULL in the client software 2-103
- 633 - Permission is denied by the server due to authentication failure 2-104
- 633 - User login failure 2-99

- 640 - A bad message was received during the SSH authentication 2-104
- 641 - Missing authentication context, encountered during the SSH user authorization 2-104
- 642 - Failure during the public key read/verification operation 2-104
- 643 - Undefined SFTP/SSH error 2-104
- 644 - Unexpected SSH_FXP_STATUS error 2-105
- 645 - A bad option was specified in the SSH client on the EAGLE 5 ISS 2-105
- 646 - An unsupported escape character was used in the SSH client on the EAGLE 5 ISS 2-105
- 647 - An unsupported cipher type was used in the SSH client on the EAGLE 5 ISS 2-105
- 648 - An unsupported MAC type was used in the SSH client on the EAGLE 5 ISS 2-106
- 649 - A bad port was used in the SSH client on the EAGLE 5 ISS 2-106
- 65 - There is no route to the host 2-115
- 656 - Bad forwarding was used in the SSH client on the EAGLE 5 ISS 2-106
- 657 - Bad forwarding ports were specified in the SSH client on the EAGLE 5 ISS 2-106
- 658 - A bad dynamic port was specified in the SSH client on the EAGLE 5 ISS 2-106
- 659 - The host was not specified in the SSH client on the EAGLE 5 ISS 2-107
- 660 - An invalid option or argument was specified in the SSH client on the EAGLE 5 ISS 2-108
- 661 - The hostname was not specified in the SSH client on the EAGLE 5 ISS 2-108
- 663 - The SSH client was unable to load the cipher type on the EAGLE 5 ISS 2-108
- 664 - Asynchronous IO is not supported on IPSM, SSH client error 2-108
- 665 - Compression is already enabled in the SSH client on the EAGLE 5 ISS 2-108
- 666 - Unknown cipher number on the SSH client on the EAGLE 5 ISS 2-108
- 667 - The SSH client key length is invalid 2-108
- 668 - No key is available on the SSH client on the EAGLE 5 ISS 2-108
- 669 - The secure connection was closed by the remote server 2-109
- 67 - The host is down 2-115
- 670 - Connection failure due to network outage or the connection was lost due to a faulty SSHD/SFTP server or network 2-109
- 671 - An unexpected packet type was received from the SFTP/SSHD server 2-109
- 672 - A bad packet length was received from the SSHD/SFTP server 2-109
- 673 - A cryptographic attack was detected by the SSH client 2-109
- 674 - The SSH/SFTP client on the EAGLE 5 ISS failed to read from the remote side 2-110
- 675 - Corrupted check bytes were detected on the SSH/SFTP client on the EAGLE 5 ISS 2-110
- 676 - Corrupted MAC on input was detected by the SSH/SFTP client on the EAGLE 5 ISS 2-110
- 677 - Corrupted pad on input was detected by the SSH/SFTP client on the EAGLE 5 ISS 2-110
- 678 - SSH/SFTP tried to close a connection that is already closed 2-110
- 679 - The SSH/SFTP client on the EAGLE 5 ISS failed to write to the remote side 2-111
- 680 - SSH/SFTP tried to set the packet size twice 2-111
- 681 - A bad packet size was detected by the SSH/SFTP client on the EAGLE 5 ISS 2-111
- 682 - The connection timed out when SSH tried to connect to SSHD 2-112
- 683 - The SSH connection was refused by the remote server 2-112
- 684 - The SSHD server is unreachable 2-112
- 685 - The network has reset 2-112
- 686 - The SSH/SFTP connection has been aborted 2-112

687 - The SFTP/SSH connection has been reset by the peer 2-112
 688 - Failed to allocate network buffers 2-112
 689 - The SSH/SFTP socket is already connected 2-112
 690 - The SSH/SFTP socket is not connected 2-112
 691 - The network channel is down 2-112
 692 - The SSHD/SFTP server connection host is down 2-112
 693 - SFTP client channel read failure 2-112
 694 - SFTP client channel write failure 2-112
 695 - SFTP client channel open failure 2-112

A

A bad dynamic port was specified in the SSH client on the EAGLE 5 ISS - Error code 658 2-106
 A bad message was received during the SSH authentication - Error code 640 2-104
 A bad option was specified in the SSH client on the EAGLE 5 ISS - Error code 645 2-105
 A bad packet length was received from the SSHD/SFTP server - Error code 672 2-109
 A bad packet size was detected by the SSH/SFTP client on the EAGLE 5 ISS - Error code 681 2-111
 A bad port was used in the SSH client on the EAGLE 5 ISS - Error code 649 2-106
 A cryptographic attack was detected by the SSH client - Error code 673 2-109
 A destination address is required - Error code 40 2-113
 About FTRA window 2-2, 2-92
 Activating the Eagle OA&M IP Security Enhancements Controlled Feature procedure 2-7, 2-11, 2-24, 2-98
 Add button 1-3, 2-6, 2-8, 2-12, 2-46
 Retrieve Tables 2-41
 Adding
 Command to the Selected Commands Box 2-47
 Multiple Commands to the Selected Commands Box 2-49

Range of Commands to the Selected Commands Box 2-48
 STP Configuration Record 2-8, 2-34
 Adding an STP Configuration Record FTRA 2.0 2-8, 2-9, 2-10, 2-11, 2-12
 alw-card command 2-29
 An invalid option or argument was specified in the SSH client on the EAGLE 5 ISS - Error code 660 2-108
 An unexpected packet type was received from the SFTP/SSHD server - Error code 671 2-109
 An unsupported cipher type was used in the SSH client on the EAGLE 5 ISS - Error code 647 2-105
 An unsupported escape character was used in the SSH client on the EAGLE 5 ISS - Error code 646 2-105
 An unsupported MAC type was used in the SSH client on the EAGLE 5 ISS - Error code 648 2-106
 Application, FTRA exiting 2-3
 Asynchronous IO is not supported on IPSM, SSH client error - Error code 664 2-108

B

Backup IP Address - FTRA 2.0 2-9
 Backup IP Address - FTRA 2.0 or greater 2-6
 Backup IP Address Field - FTRA 2.0 or greater 2-6, 2-9
 Bad forwarding ports were specified in the SSH client on the EAGLE 5 ISS - Error code 657 2-106
 Bad forwarding was used in the SSH client on the EAGLE 5 ISS - Error code 656 2-106
 Box
 Command List 2-40, 2-41, 2-42, 2-44, 2-49
 Secure Connection - FTRA 2.0 or greater 2-7, 2-11, 2-24, 2-29, 2-34, 2-35
 Selected Commands 2-40, 2-41, 2-42, 2-46, 2-49, 2-51
 Adding a Command 2-47
 Adding a Range of Commands 2-48
 Adding Multiple Commands 2-49

- Command Removed 2-50
- Command Selected to be Removed 2-50
- Stop on error
 - Update Tables 2-71
- Stop on error, Update Tables window 2-69, 2-71, 2-80, 2-81, 2-82
- Use STP and FTP UserNames, Passwords for all STPs 2-7, 2-8, 2-23, 2-24
- Broken pipe - Error code 32 2-115
- Browse button
 - FTP Server Configuration Menu 2-36, 2-37
 - Update Tables 2-69
- Button
 - Add 1-3, 2-6, 2-8, 2-12, 2-41, 2-46
 - Browse
 - FTP Server Configuration Menu 2-36, 2-37
 - Update Tables window 2-69
 - Cancel 2-20
 - Print window
 - Retrieve Tables Log 2-59
 - System Log 2-89
 - Update Tables Log 2-85
 - Save window
 - Retrieve Tables Log 2-60
 - System Log 2-91
 - Update Tables Log 2-86
 - Select Starting Directory window 2-38
 - Select window 2-70
- Close 2-7, 2-14, 2-36
 - Retrieve Tables 2-42
 - Update Tables 2-69
- Commit, Update Validation Complete window 2-73, 2-74
- Delete 2-7, 2-14, 2-26
- Edit, Update Validation Complete window 2-73, 2-74, 2-75, 2-76
- Load 2-42, 2-51, 2-61
- Modify 2-6, 2-23
- Refresh 2-6, 2-13, 2-14, 2-15, 2-25
- Remove 2-42, 2-49
- Reset 2-42, 2-49
- Retrieve 2-40, 2-42, 2-51, 2-52
- Retrieve from Local Database 2-40, 2-42, 2-51

- Retrieve from STP 2-40, 2-42, 2-52
- Save
 - Retrieve Tables Log 2-60
 - System Log 2-90
 - Update Tables Log 2-85
- Select 2-6, 2-14
 - Select Starting Directory window 2-38
 - Select window 2-70
- Set 2-38
 - FTP Server Configuration Menu 2-36
- Stop, Update Validation Complete window 2-73
- Store 2-42, 2-51, 2-61
- Test 2-6, 2-14, 2-17
- Validate 2-69, 2-71, 2-72
 - Update Tables window 2-68

C

- Can't send after socket shutdown - Error code 58 2-114
- Cancel button 2-20
 - Print window
 - Retrieve Tables Log 2-59
 - System Log 2-89
 - Update Tables Log window 2-85
 - Save window
 - Retrieve Tables Log 2-60
 - System Log 2-91
 - Update Tables Log 2-86
 - Select Starting Directory window 2-38
 - Select window 2-70
- chg-ftp-serv EAGLE 5 ISS command 2-36
- chg-trm command 2-32
- chg-trm:trm=:all=no EAGLE 5 ISS command 2-52
- chmod command 2-36, 2-37
- Clearing the display
 - Connectivity Test Log 2-18, 2-19
 - Retrieve Tables Log 2-56, 2-57
 - System Log 2-87, 2-88
 - Update Tables Log 2-82, 2-83
- Close button
 - FTP Connection Configuration Menu 2-36
 - Retrieve Tables window 2-42

- STP Connection Configuration Menu
 - 2-7, 2-14
- Update Tables 2-69
- Closing
 - Connectivity Test Log window 2-18, 2-22
 - Retrieve Tables Log window 2-56, 2-60
 - System Log window 2-87, 2-91
 - Update Tables Log window 2-82, 2-86
- Command
 - EAGLE 5 ISS
 - alw-card 2-29
 - chg-ftp-serv 2-36
 - chg-trm 2-32
 - chg-trm:trm=:all=no 2-52
 - ent-ftp-serv 2-36
 - init-card 2-29, 2-32, 2-33
 - pass:loc=xxxx
 - cmd="netstat -p tcp" 2-118
 - cmd="ping yy.yy.yy.yy" 2-117
 - rst-card 2-29
 - rtrv 2-42, 2-61, 2-66
 - rtrv-ctrl-feat 2-7, 2-11, 2-24, 2-98
 - rtrv-feat 2-40
 - rtrv-ftp-serv 2-113
 - rtrv-gta 2-40, 2-45, 2-52
 - rtrv-gtt 2-40, 2-45, 2-52
 - rtrv-gttset 2-40, 2-45, 2-52
 - rtrv-gttset 2-40, 2-45, 2-52
 - rtrv-ip-lnk 2-32, 2-33
 - rtrv-secu-dflt 2-10
 - rtrv-stp 2-54, 2-56
 - rtrv-trm 2-31, 2-32, 2-52
 - rtrv-tt 2-40, 2-45, 2-52
 - FTRA
 - ftra -c 2-61, 2-66
 - Selecting 2-44
- Command Complete
 - Connectivity Test window 2-18
 - Retrieve Tables window 2-40, 2-53, 2-54
 - Update Tables window 2-73, 2-74, 2-77
- Command File
 - Editing 1-2, 2-75
 - Editor window 2-73, 2-75, 2-76, 2-77
 - File Menu 2-77
 - File Menu 2-77
 - Invalid Command 2-76
 - Field, Update Tables window 2-69, 2-70, 2-72
 - Selected, Update Tables window
 - Stop on error box checked 2-71
 - Sending to the Selected STP 2-74
- Command In progress, Cannot Close
 - Window message 2-76
- Command Line Interface 1-2, 2-42, 2-51, 2-61
 - Automatic Start 2-66
 - Manual Start 2-61
 - UNIX 2-63
 - Windows 2-62
- Command List
 - Box 2-40, 2-41, 2-42, 2-44, 2-49
 - Field
 - Retrieve Tables window 2-41
 - Update Tables window 2-69
 - Side 2-49
- command prompt
 - DOS 2-61
 - shell 2-61
- Command Removed from the Selected
 - Commands Box 2-50
- Command Selected to be Removed in the
 - Selected Commands Box 2-50
- Commands
 - EAGLE 5 ISS 1-2, 2-68, 2-69
 - EGTT
 - rtrv-gta 2-40, 2-45, 2-52
 - rtrv-gttset 2-40, 2-45, 2-52
 - rtrv-gttset 2-40, 2-45, 2-52
 - GTT
 - rtrv-gtt 2-40, 2-45, 2-52
 - rtrv-tt 2-40, 2-45, 2-52
- Menu 2-2
- Menu window 2-42, 2-51, 2-69
- Selecting a Range 2-45
- Selecting Multiple 2-46
- Commit button, Update Validation
 - Complete window 2-73, 2-74
- Compression is already enabled in the SSH
 - client on the EAGLE 5 ISS - Error code 665 2-108
- Configuration record, STP 2-5, 2-6, 2-7, 2-8, 2-13, 2-14, 2-15, 2-16, 2-17, 2-23, 2-24, 2-25, 2-26, 2-27, 2-28, 2-29, 2-34
- FTRA 2.0 2-15, 2-16

Configuration record, STP - FTRA 2.0
 Adding 2-8, 2-9, 2-10, 2-11, 2-12
 Connection failure due to network outage or
 the connection was lost due to a
 faulty SSHD/SFTP server or network
 - Error code 670 2-109
 Connectivity Test - I procedure 2-116
 Connectivity Test - II procedure 2-117
 Connectivity Test Log 2-17, 2-18, 2-19, 2-20
 Clearing the Display 2-18, 2-19
 closing 2-18, 2-22
 File Menu 2-18
 Print window 2-19, 2-20
 Printing 2-18, 2-19
 Save window 2-20
 saved file confirmation window 2-21
 saving to a file 2-18, 2-20
 window 2-17, 2-18, 2-19, 2-20, 2-22, 2-30,
 2-33, 2-34
 errors 2-18
 no errors 2-17
 Connectivity Test Log window
 File Menu 2-18, 2-19
 copyright information 2-92
 Corrupted check bytes were detected on the
 SSH/SFTP client on the EAGLE 5 ISS
 - Error code 675 2-110
 Corrupted MAC on input was detected by
 the SSH/SFTP client on the EAGLE 5
 ISS - Error code 676 2-110
 Corrupted pad on input was detected by the
 SSH/SFTP client on the EAGLE 5 ISS
 - Error code 677 2-110
 cron 2-61, 2-66, 2-67
 CSV file format 1-2, 2-40, 2-42, 2-51, 2-61,
 2-66
 Current STP
 Selected 2-27
 FTRA 2.0 2-28
 Selected: field 2-25
 Selecting 2-27
 Customer Care Center 1-4, 2-32, 2-98, 2-99,
 2-100, 2-101, 2-102, 2-103, 2-104,
 2-105, 2-106, 2-107, 2-108, 2-109,
 2-110, 2-111, 2-112, 2-113, 2-114,
 2-115

D

Database Administration Manual - System
 Management 2-7, 2-11, 2-24, 2-98
 Database, STP Connection Configuration
 2-5, 2-6, 2-7, 2-8, 2-12, 2-26
 Delete button 2-7, 2-14, 2-26
 Delete STP Data window 2-26
 Deleting an STP Configuration Record 2-26
 Description
 Retrieve Tables window 2-41
 Update Tables window 2-69
 Display
 Clearing
 Connectivity Test Log 2-18, 2-19
 Retrieve Tables Log 2-56, 2-57
 System Log 2-87, 2-88
 Update Tables Log 2-82, 2-83
 Displaying an Existing STP Configuration
 Record 2-13
 DOS command prompt 2-61
 Drop down list
 STP Name 2-6, 2-13
 FTRA 2.0 2-13, 2-14
 DSA Key Fingerprint 2-32, 2-33
 Duplicate packets 2-119

E

EAGLE 5 ISS
 Telnet terminals 2-6, 2-32, 2-52
 UIM - Unsolicited Information Message
 2-32, 2-33, 2-52
 EAGLE 5 ISS chg-ftp-serv command 2-36
 EAGLE 5 ISS chg-trm:trm=:all=no command
 2-52
 EAGLE 5 ISS command
 alw-card 2-29
 chg-ftp-serv 2-36
 chg-trm 2-32
 chg-trm:trm=:all=no 2-52
 ent-ftp-serv 2-36
 init-card 2-29, 2-32, 2-33
 pass:loc=xxxx
 cmd="netstat -p tcp" 2-118
 cmd="ping yy.yy.yy.yy" 2-117
 rst-card 2-29
 rtrv 2-42, 2-61, 2-66
 rtrv-ctrl-feat 2-7, 2-11, 2-24, 2-98

- rtrv-feat 2-40
- rtrv-ftp-serv 2-113
- rtrv-gta 2-40, 2-45, 2-52
- rtrv-gtt 2-40, 2-45, 2-52
- rtrv-gttset 2-40, 2-45, 2-52
- rtrv-gttset 2-40, 2-45, 2-52
- rtrv-ip-lnk 2-32, 2-33
- rtrv-secu-dflt 2-10
- rtrv-stp 2-54, 2-56
- rtrv-trm 2-31, 2-32, 2-52
- rtrv-tt 2-40, 2-45, 2-52
- EAGLE 5 ISS commands 1-2, 2-68, 2-69
- EAGLE 5 ISS EGTT commands
 - rtrv-gta 2-40, 2-45, 2-52
 - rtrv-gttset 2-40, 2-45, 2-52
 - rtrv-gttset 2-40, 2-45, 2-52
- EAGLE 5 ISS ent-ftp-serv command 2-36
- EAGLE 5 ISS Feature
 - EGTT 2-40
 - GTT 2-40
- EAGLE 5 ISS feature
 - Eagle OA&M IP Security Enhancements 2-7, 2-11, 2-12, 2-24, 2-98
- EAGLE 5 ISS GTT commands
 - rtrv-gtt 2-40, 2-45, 2-52
 - rtrv-tt 2-40, 2-45, 2-52
- EAGLE 5 ISS Manual, Database
 - Administration Manual - System Management 2-7, 2-11, 2-24, 2-98
- EAGLE 5 ISS pass:loc=xxxx
 - cmd="netstat -p tcp" command 2-118
 - cmd="ping yy.yy.yy.yy" command 2-117
- EAGLE 5 ISS procedure
 - Activating the Eagle OA&M IP Security Enhancements Controlled Feature 2-7, 2-11, 2-24, 2-98
- EAGLE 5 ISS Public Host Key Fingerprint 2-29, 2-30, 2-32, 2-34
- EAGLE 5 ISS Public Key Fingerprint 2-7, 2-32, 2-33
- EAGLE 5 ISS release 30.2 or greater 2-7, 2-11
- EAGLE 5 ISS rtrv-ctrl-feat command 2-7, 2-11, 2-24, 2-98
- EAGLE 5 ISS rtrv-feat command 2-40
- EAGLE 5 ISS rtrv-ftp-serv command 2-113
- EAGLE 5 ISS rtrv-gta command 2-40, 2-45, 2-52
- EAGLE 5 ISS rtrv-gtt command 2-40, 2-45, 2-52
- EAGLE 5 ISS rtrv-gttset command 2-40, 2-45, 2-52
- EAGLE 5 ISS rtrv-secu-dflt command 2-10
- EAGLE 5 ISS rtrv-stp command 2-54, 2-56
- EAGLE 5 ISS rtrv-trm command 2-52
- EAGLE 5 ISS rtrv-tt command 2-40, 2-45, 2-52
- Eagle OA&M IP Security Enhancements feature 2-7, 2-11, 2-12, 2-24, 2-98
- Edit button, Update Validation Complete window 2-73, 2-74, 2-75, 2-76
- Edit menu
 - FTP-Based Table Retrieve Application 2-5, 2-69
- Editing a Command File 2-75
- EGTT commands
 - EAGLE 5 ISS
 - rtrv-gta 2-40, 2-45, 2-52
 - rtrv-gttset 2-40, 2-45, 2-52
 - rtrv-gttset 2-40, 2-45, 2-52
- EGTT Feature 2-40
- Emergency response 1-5
- Entering an STP Name 2-14
- ent-ftp-serv EAGLE 5 ISS command 2-36
- Environment variable
 - FTRA_HOME 1-3
 - JRE_HOME 1-3
- Error code
 - 30 - Read-only file system 2-115
 - 32 - Broken pipe 2-115
 - 35 - Unsupported value 2-115
 - 40 - A destination address is required 2-113
 - 41 - Protocol wrong type for socket 2-113
 - 42 - The protocol is not available 2-113
 - 43 - The protocol is not supported 2-113
 - 44 - The socket type is not supported 2-113
 - 45 - The operation is not supported on the socket 2-113
 - 46 - The protocol family is not supported 2-113
 - 47 - The address family is not supported 2-113

- 48 - The address is already in use 2-113
- 49 - The requested address cannot be assigned 2-113
- 50 - Socket operation on non-socket 2-113
- 51 - The network is unreachable 2-113
- 52 - The network dropped the connection on reset 2-113
- 53 - Software caused the connection to abort 2-114
- 54 - The connection was reset by the peer 2-114
- 55 - No buffer space available 2-114
- 56 - The socket is already connected 2-114
- 57 - The socket is not connected 2-114
- 58 - Can't send after socket shutdown 2-114
- 59 - Too many references: can't splice 2-114
- 595 - File open failed 2-99
- 596 - The file name is already specified 2-99
- 597 - SFTP client packet send failure 2-99
- 598 - The SFTP connection is closed 2-99
- 599 - SFTP packet read failure 2-99
- 60 - The connection timed out 2-114
- 600 - SFTP protocol error 2-100
- 601 - Undefined 2-100
- 608 - SFTP received a invalid ID in the response received during a read operation on remote directory 2-100
- 609 - SFTP: Handle mismatch error 2-100
- 61 - The connection was refused 2-114
- 610 - Unexpected SSH2_FXP_ATTRS 2-100
- 611 - Unexpected SSH_FXP_NAME 2-100
- 612 - SSH_FXP_REALPATH request failure 2-101
- 613 - SSH_FXP_READLINK request failure 2-101
- 614 - unexpected SSH_FXP_NAME 2-101
- 615 - The SFTP client received more data than expected 2-101
- 616 - The SFTP client failed to read the data from the file descriptor 2-101
- 617 - Excessive identity files 2-102
- 62 - The network is down 2-115
- 624 - The debug levels allowed for SSH protocol in openSSH is 0-9 2-102
- 625 - Failure to read the client configuration file 2-102
- 626 - Invalid compression level is specified in the client configuration file 2-102
- 627 - SSH failure to setup the IO with the server 2-103
- 628 - SSH failure to open the channel for the SSH connection with the server 2-103
- 629 - SSH failure to setup the channel for the SSH connection with the server 2-103
- 630 - SSH failure to verify the SSH client host key 2-103
- 631 - SSH user authentication failure 2-103
- 632 - The authentication method is NULL in the client software 2-103
- 633 - Permission is denied by the server due to authentication failure 2-104
- 633 - User login failure 2-99
- 640 - A bad message was received during the SSH authentication 2-104
- 641 - Missing authentication context, encountered during the SSH user authorization 2-104
- 642 - Failure during the public key read/verification operation 2-104
- 643 - Undefined SFTP/SSH error 2-104
- 644 - Unexpected SSH_FXP_STATUS error 2-105
- 645 - A bad option was specified in the SSH client on the EAGLE 5 ISS 2-105
- 646 - An unsupported escape character was used in the SSH client on the EAGLE 5 ISS 2-105
- 647 - An unsupported cipher type was used in the SSH client on the EAGLE 5 ISS 2-105
- 648 - An unsupported MAC type was used in the SSH client on the EAGLE 5 ISS 2-106
- 649 - A bad port was used in the SSH client on the EAGLE 5 ISS 2-106
- 65 - There is no route to the host 2-115

- 656 - Bad forwarding was used in the SSH client on the EAGLE 5 ISS 2-106
 - 657 - Bad forwarding ports were specified in the SSH client on the EAGLE 5 ISS 2-106
 - 658 - A bad dynamic port was specified in the SSH client on the EAGLE 5 ISS 2-106
 - 659 - The host was not specified in the SSH client on the EAGLE 5 ISS 2-107
 - 660 - An invalid option or argument was specified in the SSH client on the EAGLE 5 ISS 2-108
 - 661 - The hostname was not specified in the SSH client on the EAGLE 5 ISS 2-108
 - 663 - The SSH client was unable to load the cipher type on the EAGLE 5 ISS 2-108
 - 664 - Asynchronous IO is not supported on IPSM, SSH client error 2-108
 - 665 - Compression is already enabled in the SSH client on the EAGLE 5 ISS 2-108
 - 666 - Unknown cipher number on the SSH client on the EAGLE 5 ISS 2-108
 - 667 - The SSH client key length is invalid 2-108
 - 668 - No key is available on the SSH client on the EAGLE 5 ISS 2-108
 - 669 - The secure connection was closed by the remote server 2-109
 - 67 - The host is down 2-115
 - 670 - Connection failure due to network outage or the connection was lost due to a faulty SSHD/SFTP server or network 2-109
 - 671 - An unexpected packet type was received from the SFTP/SSHD server 2-109
 - 672 - A bad packet length was received from the SSHD/SFTP server 2-109
 - 673 - A cryptographic attack was detected by the SSH client 2-109
 - 674 - The SSH/SFTP client on the EAGLE 5 ISS failed to read from the remote side 2-110
 - 675 - Corrupted check bytes were detected on the SSH/SFTP client on the EAGLE 5 ISS 2-110
 - 676 - Corrupted MAC on input was detected by the SSH/SFTP client on the EAGLE 5 ISS 2-110
 - 677 - Corrupted pad on input was detected by the SSH/SFTP client on the EAGLE 5 ISS 2-110
 - 678 - SSH/SFTP tried to close a connection that is already closed 2-110
 - 679 - The SSH/SFTP client on the EAGLE 5 ISS failed to write to the remote side 2-111
 - 680 - SSH/SFTP tried to set the packet size twice 2-111
 - 681 - A bad packet size was detected by the SSH/SFTP client on the EAGLE 5 ISS 2-111
 - 682 - The connection timed out when SSH tried to connect to SSHD 2-112
 - 683 - The SSH connection was refused by the remote server 2-112
 - 684 - The SSHD server is unreachable 2-112
 - 685 - The network has reset 2-112
 - 686 - The SSH/SFTP connection has been aborted 2-112
 - 687 - The SFTP/SSH connection has been reset by the peer 2-112
 - 688 - Failed to allocate network buffers 2-112
 - 689 - The SSH/SFTP socket is already connected 2-112
 - 690 - The SSH/SFTP socket is not connected 2-112
 - 691 - The network channel is down 2-112
 - 692 - The SSHD/SFTP server connection host is down 2-112
 - 693 - SFTP client channel read failure 2-112
 - 694 - SFTP client channel write failure 2-112
 - 695 - SFTP client channel open failure 2-112
- Error Codes
FTP 2-98

- Generic Network 2-113
- SFTP 2-98
- SSH 2-98
- Error message
 - STP Name does not exist 2-16
- Errors
 - SFTP 2-99
 - SFTP Client 2-99
 - SSH Client 2-102
 - SSH/SFTP Connection/Setup 2-112
- Errors - contacting the Customer Care Center
 - 1-4, 2-32, 2-98, 2-99, 2-100, 2-101, 2-102, 2-103, 2-104, 2-105, 2-106, 2-107, 2-108, 2-109, 2-110, 2-111, 2-112, 2-113, 2-114, 2-115
- Excessive identity files - Error code 617 2-102
- Exit Confirmation window 2-3
- Exit menu 2-2
- Exit window 2-3, 2-4
- Exiting the FTRA application 2-3

F

- Failed to allocate network buffers - Error code 688 2-112
- Failure during the public key read/verification operation - Error code 642 2-104
- Failure to read the client configuration file - Error code 625 2-102
- Feature
 - Eagle OA&M IP Security Enhancements 2-7, 2-11, 2-12, 2-24, 2-98
 - EGTT 2-40
 - GTT 2-40
- Field
 - Command File, Update Tables window 2-69, 2-70, 2-72
 - Command List
 - Retrieve Tables 2-41
 - Update Tables 2-69
 - Current STP Selected: 2-25
 - File Name: 2-38
 - Select Starting Directory window 2-38
 - Select window 2-70
 - Files of type:

- Select Starting Directory window 2-38
 - Select window 2-70
- FTP Password 2-6, 2-11
- FTP UserName 2-6, 2-11
- IP Address 2-36
 - Backup - FTRA 2.0 or greater 2-6, 2-9
 - Primary - FTRA 2.0 or greater 2-6, 2-9
- Look in:
 - Select Starting Directory window 2-38
 - Select window 2-70
- Path 2-36
- Selected Commands, Retrieve Tables 2-41
- STP Name 2-6, 2-8, 2-13, 2-14
 - STP name typed
 - FTRA 2.0 2-14, 2-15
- STP Password 2-6, 2-10
- STP UserName 2-6, 2-10
- Subpath 2-36
- file extension
 - .doc 2-21, 2-60, 2-85, 2-90
 - .txt 2-21, 2-60, 2-85, 2-90
- File format
 - CSV 1-2, 2-40, 2-42, 2-51, 2-61, 2-66
- File menu
 - Command File Editor window 2-77
 - Connectivity Test Log 2-18, 2-19
 - FTP-Based Table Retrieve Application window 2-3
 - Retrieve Tables Log 2-56, 2-57
 - System Log 2-87, 2-88
 - Update Tables Log 2-82, 2-83
- File Name: Field
 - Select Starting Directory window 2-38
 - Select window 2-70
- File open failed - Error code 595 2-99
- Files of type: Field
 - Select Starting Directory window 2-38
 - Select window 2-70
- Fingerprint
 - Key
 - DSA 2-32, 2-33
 - Public Host Key
 - EAGLE 5 ISS 2-29, 2-30, 2-32, 2-34
 - Public Key

- EAGLE 5 ISS 2-7, 2-32, 2-33
- flag - strict host key 2-30
- FTP Error Codes 2-98
- FTP Password Field 2-6, 2-11
- FTP server 2-35, 2-116
 - secure 2-35
- FTP Server Configuration 1-2, 2-35
 - Menu 2-2, 2-35
 - Browse button 2-36, 2-37
 - Close button 2-36
 - IP Address 2-35, 2-116
 - IP Address Field 2-36
 - Path Field 2-36
 - Set button 2-36, 2-38
 - Subpath Field 2-36
 - Menu window 2-11, 2-35, 2-36, 2-98, 2-101, 2-116, 2-117
- FTP Server Data Set window 2-39
- FTP Server Verification procedure 2-116
- FTP UserName Field 2-6, 2-11
- FTP-Based Table Retrieve Application
 - Edit Menu 2-5, 2-35, 2-69
 - File Menu 2-3
 - Help Menu 2-92
 - View Menu 2-58, 2-83, 2-88
 - window 2-2, 2-8, 2-17, 2-23, 2-26, 2-43, 2-57, 2-58, 2-59, 2-69, 2-83, 2-84, 2-85, 2-88, 2-89, 2-90, 2-92
 - File menu 2-3
- FTRA
 - Command
 - fra -c 2-61, 2-66
 - Initialization 2-2
 - STP IP connection
 - secure 2-7, 2-11
 - version level 2-92
- FTRA 2.0
 - Current STP Selected 2-28
 - FTP Server 2-35
 - Secure FTP Server 2-35
 - STP Configuration Record 2-15, 2-16
 - Adding 2-8, 2-9, 2-10, 2-11, 2-12
 - STP Connection Configuration
 - Menu window 2-35
 - STP Connection Configuration Menu
 - Backup IP Address 2-6
 - Backup IP Address Field 2-9
 - IP Address

- Backup 2-6, 2-9
- Primary 2-6, 2-9
- Primary IP Address 2-6
- Primary IP Address Field 2-9
- Secure Connection Box 2-7, 2-11, 2-24, 2-29, 2-34, 2-35
- STP Name drop down list 2-13, 2-14
- STP name typed 2-14, 2-15
- FTRA application
 - exiting 2-3
- fra -c command 2-61, 2-66
- fra file 2-30
- FTRA icon 2-2
- FTRA window
 - GTT Warning window 2-40
 - Retrieve Tables 2-40, 2-41, 2-43, 2-44, 2-61
 - description 2-41
 - GTT Warning window 2-40
 - Update Tables 2-68, 2-69, 2-70, 2-71, 2-76, 2-77, 2-80, 2-81, 2-82
 - description 2-69
 - Select, description 2-70
 - Update Validation Complete 2-72, 2-73, 2-74
 - Update Validation Complete with errors 2-74
- fra.bat 2-30
- FTRA_HOME environment variable 1-3

G

- Generic Network Error Codes 2-113
- GTT commands
 - EAGLE 5 ISS
 - rtrv-gtt 2-40, 2-45, 2-52
 - rtrv-tt 2-40, 2-45, 2-52
- GTT Feature 2-40
- GTT Warning window 2-40

H

- Help menu
 - FTP-Based Table Retrieve Application
 - 2-92
- hexadecimal 2-32
- Host Key - Secure EAGLE 5 ISS
 - Provisioning 2-29

host key checking - strict 2-30
Host Key Fingerprint
 Public
 EAGLE 5 ISS 2-29, 2-30, 2-32, 2-34
host key flag - strict 2-30
hosts.xml 2-29, 2-30, 2-32, 2-33, 2-34

I

Icon, FTRA 2-2
init-card command 2-29, 2-32, 2-33
Initializing the FTRA 2-2
Initializing window 2-2
Invalid compression level is specified in the
 client configuration file - Error code
 626 2-102
Invalid FTP Password warning window
 2-11
Invalid FTP User Name warning window
 2-11
Invalid IP Address warning window 2-9,
 2-10, 2-36, 2-37
Invalid STP Name Error Message window
 2-8
Invalid STP Name warning window 2-8
Invalid STP Password warning window
 2-10
Invalid STP User Name warning window
 2-10
IP Address 2-6, 2-35, 2-116, 2-117, 2-118
 Backup - FTRA 2.0 2-9
 Backup - FTRA 2.0 or greater 2-6
 IPSM 2-32, 2-33
 Primary - FTRA 2.0 2-9
 Primary - FTRA 2.0 or greater 2-6
IP address 2-6
IP Address Field 2-36
 Backup - FTRA 2.0 or greater 2-6, 2-9
 Primary - FTRA 2.0 or greater 2-6, 2-9
IP Address warning message 2-29
IP connection
 FTRA and STP
 secure 2-7, 2-11
IPSM 2-29, 2-31, 2-32, 2-33, 2-117, 2-118
IPSM IP Address 2-32, 2-33

J

JRE_HOME environment variable 1-3

K

Key Fingerprint
 DSA 2-32, 2-33
 Public
 EAGLE 5 ISS 2-7, 2-32, 2-33

L

Load button 2-42, 2-51, 2-61
Log
 Connectivity Test 2-17, 2-18, 2-19, 2-20
 window, File Menu 2-18, 2-19
 Retrieve Tables 2-2, 2-40, 2-53, 2-54, 2-56,
 2-58, 2-59
 window, File Menu 2-56, 2-57
 System 2-2, 2-87, 2-88, 2-89, 2-90, 2-91
 closing 2-87, 2-91
 window 2-87, 2-88, 2-89, 2-90, 2-91
 File menu 2-87, 2-88
 Update Tables 2-2, 2-68, 2-69, 2-71, 2-72,
 2-73, 2-74, 2-77, 2-78, 2-79, 2-80, 2-81,
 2-82, 2-83, 2-84, 2-85
 window 2-71, 2-72, 2-78, 2-82, 2-83,
 2-84, 2-85, 2-86
 Commit Command Completed
 2-78
 File Menu 2-82, 2-83
Look in: Field
 Select Starting Directory window 2-38
 Select window 2-70

M

manual
 admonishments 1-3
Menu
 Commands 2-2
 Connectivity Test Log
 File 2-18
 Edit
 FTP-Based Table Retrieve Applica-
 tion 2-5, 2-69
 Exit 2-2
 File
 Command File Editor window 2-77
 Connectivity Test Log window 2-18,
 2-19
 FTP-Based Table Retrieve Applica-

- tion window 2-3
 - Retrieve Tables Log window 2-56, 2-57
 - System Log window 2-87, 2-88
 - Update Tables Log window 2-82, 2-83
- FTP Server Configuration 2-2, 2-35
 - Browse button 2-36, 2-37
 - Set button 2-36
- FTP-Based Table Retrieve Application 2-35
- Help
 - FTP-Based Table Retrieve Application 2-92
- Retrieve Tables Log
 - File 2-56
- STP Connection Configuration 2-2, 2-5
- View
 - FTP-Based Table Retrieve Application 2-58, 2-83, 2-88
- Message
 - Command In Progress, Cannot Close Window 2-76
 - IP Address warning 2-29
 - Must Enter Command Script File Name 2-72
 - Processing Validate Request, Please Wait 2-71, 2-78
 - Update Tables processing completed without errors 2-77
- Missing authentication context, encountered during the SSH user authorization - Error code 641 2-104
- Modify button 2-6, 2-23
- Modify Warning window 2-25
- Modifying an Existing STP Configuration Record 2-23, 2-29, 2-34
- Must Enter Command Script File Name message 2-72

N

- netstat -a | grep 21 2-116
- Network latency 2-119
- No buffer space available - Error code 55 2-114
- No key is available on the SSH client on the EAGLE 5 ISS - Error code 668 2-108

O

- openSSH 3.0.2p1 2-100, 2-101, 2-103, 2-104, 2-105, 2-106, 2-107, 2-109, 2-110, 2-111, 2-112, 2-116

P

- Packet drop 2-119
- pass:loc=xxxx
 - cmd="netstat -p tcp" EAGLE 5 ISS command 2-118
 - cmd="ping yy.yy.yy.yy" EAGLE 5 ISS command 2-117
- Path Field 2-36
- path parameter 2-36
- Permission is denied by the server due to authentication failure - Error code 633 2-104
- ping -s zz.zz.zz.zz command 2-117
- Primary IP Address - FTFA 2.0 2-9
- Primary IP Address - FTFA 2.0 or greater 2-6
- Primary IP Address Field - FTFA 2.0 or greater 2-6, 2-9
- Print window
 - Cancel button
 - Update Tables Log 2-85
 - Connectivity Test Log 2-19, 2-20
 - Retrieve Tables Log 2-58, 2-59
 - System Log 2-89
 - Update Tables Log 2-84
- Printing
 - Connectivity Test Log 2-18, 2-19
 - Retrieve Tables Log 2-56, 2-58
 - System Log 2-87, 2-89
 - Update Tables Log 2-82, 2-84
- Problems - contacting the Customer Care Center 1-4, 2-32, 2-98, 2-99, 2-100, 2-101, 2-102, 2-103, 2-104, 2-105, 2-106, 2-107, 2-108, 2-109, 2-110, 2-111, 2-112, 2-113, 2-114, 2-115
- Procedure
 - Activating the Eagle OA&M IP Security Enhancements Controlled Feature 2-7, 2-11, 2-24, 2-98
 - Connectivity Test - I 2-116
 - Connectivity Test - II 2-117
 - FTP Server Verification 2-116
 - SFTP Server Verification 2-116

- SSHD Server Verification 2-116
- Processing Retrieve Request
 - Update Tables Log window 2-72
- Processing Validate Request, Please Wait message 2-71, 2-78
- Protocol Troubleshooting 2-119
- Protocol wrong type for socket - Error code 41 2-113
- Provisioning the Secure EAGLE 5 ISS Host Key 2-29
- ps 2-116
- ps -ef | grep sshd 2-98
- ps -f | grep sshd 2-116
- Public Host Key Fingerprint
 - EAGLE 5 ISS 2-29, 2-30, 2-32, 2-34
- Public Key Fingerprint
 - EAGLE 5 ISS 2-7, 2-32, 2-33

R

- Read-only file system - Error code 30 2-115
- Record, STP configuration 2-5
- Refresh button 2-6, 2-13, 2-14, 2-15, 2-25
- release 30.2 or greater - EAGLE 5 ISS 2-7, 2-11
- Release Not Compatible Error - Retrieve Tables Log window 2-43
- Remove button 2-42, 2-49
- Reset button 2-42, 2-49
- Retrieve button 2-40, 2-42, 2-51, 2-52
- Retrieve Database Tables from an STP 2-40
- Retrieve from Local Database button 2-40, 2-42, 2-51
- Retrieve from STP button 2-40, 2-42, 2-52
- Retrieve Tables
 - Command List Box 2-40, 2-41, 2-42, 2-44, 2-49
 - Selected Commands Box 2-40, 2-41, 2-42, 2-46, 2-49, 2-51
- Retrieve Tables Log 2-2, 2-40, 2-53, 2-54, 2-56, 2-58, 2-59
 - Clearing the Display 2-56, 2-57
 - closing 2-56, 2-60
 - File Menu 2-56
 - Print window 2-58, 2-59
 - Printing 2-56, 2-58
 - Save window 2-59, 2-60
 - saved file confirmation window 2-60

- saving to a file 2-56, 2-59
- Retrieve Tables Log window 2-52, 2-54, 2-56, 2-57, 2-58, 2-59, 2-60
- File Menu 2-56, 2-57
- Processing Retrieve Request 2-53
- Release Not Compatible Error 2-43
 - with Errors 2-55
 - with the RTRV-STP Command 2-56
 - without Errors 2-55
- Retrieve Tables window 2-40, 2-41, 2-43, 2-44, 2-61
 - Add button 2-41, 2-46
 - Close button 2-42
 - description 2-41
 - GTT Warning window 2-40
 - Load button 2-42, 2-51, 2-61
 - Remove button 2-42, 2-49
 - Reset button 2-42, 2-49
 - Retrieve button 2-40, 2-42, 2-51, 2-52
 - Retrieve from Local Database button 2-40, 2-42, 2-51
 - Retrieve from STP button 2-40, 2-42, 2-52
 - Store button 2-42, 2-51, 2-61
- Retrieving EAGLE 5 ISS database tables 1-2
- rst-card command 2-29
- rtrv commands 2-42, 2-61, 2-66
- rtrv-ctrl-feat EAGLE 5 ISS command 2-7, 2-11, 2-24, 2-98
- rtrv-feat EAGLE 5 ISS command 2-40
- rtrv-ftp-serv EAGLE 5 ISS command 2-113
- rtrv-gta EAGLE 5 ISS command 2-40, 2-45, 2-52
- rtrv-gtt EAGLE 5 ISS command 2-40, 2-45, 2-52
- rtrv-gttset EAGLE 5 ISS command 2-40, 2-45, 2-52
- rtrv-gttset EAGLE 5 ISS command 2-40, 2-45, 2-52
- rtrv-ip-lnk command 2-32, 2-33
- rtrv-secu-dflt EAGLE 5 ISS command 2-10
- rtrv-stp EAGLE 5 ISS command 2-54, 2-56
- rtrv-trm command 2-31, 2-32
- rtrv-trm EAGLE 5 ISS command 2-52
- rtrv-tt EAGLE 5 ISS command 2-40, 2-45, 2-52

S

Save button

Retrieve Tables Log

Save window 2-60

System Log Save window 2-90

Update Tables Log Save window 2-85

Save window

Cancel button

System Log 2-91

Update Tables Log 2-86

Connectivity Test Log 2-20

Retrieve Tables Log 2-59, 2-60

System Log 2-90, 2-91

Update Tables Log 2-85, 2-86

Saved File Confirmation window

Connectivity Test Log 2-21

Retrieve Tables Log 2-60

System Log 2-90, 2-91

Update Tables Log 2-85, 2-86

Saving to a file

Connectivity Test Log 2-18, 2-20

Retrieve Tables Log 2-56, 2-59

System Log 2-87, 2-90

Update Tables Log 2-82, 2-85

secure connection 2-7, 2-29

Secure Connection Box - FTTRA 2.0 or greater

2-7, 2-11, 2-24, 2-29, 2-34, 2-35

Secure EAGLE 5 ISS Host Key Provisioning

2-29

Secure FTP server 2-35

Secure Host Key - EAGLE 5 ISS

Provisioning 2-29

secure IP connection between FTTRA and STP

2-7, 2-11

Security Administration 2-32

Select button 2-6, 2-14

Select Starting Directory window 2-38

Select window 2-70

Select Starting Directory window 2-36, 2-37, 2-38

Cancel button 2-38

Select button 2-38

Select window

Cancel button 2-70

description 2-70

Select button 2-70

Update Tables 2-68, 2-69, 2-70

Selected Commands

Box 2-40, 2-41, 2-42, 2-46, 2-49, 2-51

Adding a Command 2-47

Adding a Range of Commands 2-48

Adding Multiple Commands 2-49

Command Selected Removed 2-50

Command Selected to be Removed
2-50

Field, Retrieve Tables window 2-41

Selected STP 1-2, 2-27, 2-40, 2-41, 2-42, 2-51,
2-52, 2-68, 2-69, 2-73, 2-74, 2-75, 2-77

Sending a Command File 2-74

Selecting

Command 2-44

Current STP 2-27

Multiple Commands 2-46

Range of Commands 2-45

Sending a Command File to the Selected STP
2-74

Server

FTP - FTTRA 2.0 2-35

Secure FTP - FTTRA 2.0 2-35

Set button 2-38

FTP Server Configuration Menu 2-36

SFTP client channel open failure - Error code
695 2-112SFTP client channel read failure - Error code
693 2-112SFTP client channel write failure - Error code
694 2-112

SFTP Client Errors 2-99

SFTP client packet send failure - Error code
597 2-99

SFTP Connection Errors 2-112

SFTP Error Codes 2-98

SFTP Errors 2-99

SFTP packet read failure - Error code 599
2-99

SFTP protocol error - Error code 600 2-100

SFTP received a invalid ID in the response
received during a read operation on
remote directory - Error code 608
2-100

SFTP Server 2-109, 2-112, 2-116

SFTP Server Verification procedure 2-116

SFTP Setup Errors 2-112

SFTP/SSH Error Codes 2-98

SFTP: Handle mismatch error - Error code
609 2-100

- Shell command prompt 2-61
- Socket operation on non-socket - Error code 50 2-113
- Software caused the connection to abort - Error code 53 2-114
- SSH Client Errors 2-102
- SSH Connection Errors 2-112
- SSH Error Codes 2-98
- SSH failure to open the channel for the SSH connection with the server - Error code 628 2-103
- SSH failure to setup the channel for the SSH connection with the server - Error code 629 2-103
- SSH failure to setup the IO with the server - Error code 627 2-103
- SSH failure to verify the SSH client host key - Error code 630 2-103
- SSH Setup Errors 2-112
- SSH user authentication failure - Error code 631 2-103
- SSH, the Secure Shell: The Definitive Guide 2-119
- SSH/SFTP Error Codes 2-98
- SSH/SFTP tried to close a connection that is already closed - Error code 678 2-110
- SSH/SFTP tried to set the packet size twice - Error code 680 2-111
- SSH_FXP_READLINK request failure - Error code 613 2-101
- SSH_FXP_REALPATH request failure - Error code 612 2-101
- SSHD Server 2-109, 2-112, 2-116
- SSHD Server Verification procedure 2-116
- sshtools.xml 2-110
- Stop button, Update Validation Complete window 2-73
- Stop on error box
 - Update Tables window 2-69, 2-71, 2-80, 2-81, 2-82
- Stop on error box Checked
 - Command File Selected
 - Update Tables window 2-71
- Stop Without Sending or Editing a Command File 2-75
- Store button 2-42, 2-51, 2-61
- STP
 - FTRA IP connection
 - secure 2-7, 2-11
 - Retrieve Database Tables 2-40
- STP Added window 2-12
- STP Configuration Record 2-5, 2-6, 2-7, 2-8, 2-13, 2-14, 2-15, 2-16, 2-17, 2-23, 2-24, 2-25, 2-26, 2-27, 2-28, 2-29, 2-34
 - Adding 2-8, 2-34
 - Deleting 2-26
 - Displaying 2-13
 - FTRA 2.0 2-15, 2-16
 - Modifying 2-23, 2-29, 2-34
 - testing 2-17
- STP Configuration Record - FTRA 2.0
 - Adding 2-8, 2-9, 2-10, 2-11, 2-12
- STP Connection Configuration 1-2
 - Database 2-5, 2-6, 2-7, 2-8, 2-12, 2-26
 - Menu 2-2, 2-5
 - Menu window 2-5, 2-6, 2-7, 2-8, 2-13, 2-14, 2-17, 2-23, 2-25, 2-26, 2-27, 2-99, 2-117, 2-118
 - FTRA 2.0 2-35
 - FTRA 2.0 or greater 2-5
- STP Connection Configuration Menu
 - Add button 1-3, 2-6, 2-8, 2-12
 - Close button 2-7, 2-14
 - Delete button 2-7, 2-14, 2-26
 - FTP Password Field 2-6, 2-11
 - FTP UserName Field 2-6, 2-11
 - IP Address 2-117, 2-118
 - Backup - FTRA 2.0 2-9
 - Backup - FTRA 2.0 or greater 2-6
 - Primary - FTRA 2.0 2-9
 - Primary - FTRA 2.0 or greater 2-6
 - IP Address Field
 - Backup - FTRA 2.0 or greater 2-6, 2-9
 - Primary - FTRA 2.0 or greater 2-6, 2-9
 - Modify button 2-6, 2-23
 - Refresh button 2-6, 2-13, 2-14, 2-15, 2-25
 - Secure Connection Box - FTRA 2.0 or greater 2-7, 2-11, 2-24, 2-29, 2-34, 2-35
 - Select button 2-6, 2-14
 - STP Name drop down list 2-6, 2-13
 - FTRA 2.0 2-13, 2-14
 - STP Name Field 2-6, 2-8, 2-13, 2-14
 - STP name typed
 - FTRA 2.0 2-14, 2-15

- STP Password Field 2-6, 2-10
 - STP UserName Field 2-6, 2-10
 - Test button 2-6, 2-14, 2-17
 - Use STP and FTP UserNames, Passwords for all STPs Box 2-7, 2-8, 2-23, 2-24
 - STP Connectivity Test 1-2
 - STP Data Modified window 2-23, 2-25
 - STP Name 2-6, 2-7, 2-8, 2-12, 2-13, 2-14, 2-16, 2-23, 2-26, 2-27, 2-28
 - entering 2-14
 - STP Name does not exist error message 2-16
 - STP Name drop down list 2-6, 2-13
 - FTRA 2.0 2-13, 2-14
 - STP Name Field 2-6, 2-8, 2-13, 2-14
 - STP name typed
 - FTRA 2.0 2-14, 2-15
 - STP Password Field 2-6, 2-10
 - STP Selection Change window 2-6, 2-27, 2-28
 - STP UserName Field 2-6, 2-10
 - strict host key checking 2-30
 - strict host key flag 2-30
 - Subpath Field 2-36
 - Support - contacting the Customer Care Center 1-4, 2-32, 2-98, 2-99, 2-100, 2-101, 2-102, 2-103, 2-104, 2-105, 2-106, 2-107, 2-108, 2-109, 2-110, 2-111, 2-112, 2-113, 2-114, 2-115
 - System Log 2-2, 2-87, 2-88, 2-89, 2-90, 2-91
 - Clearing the Display 2-87, 2-88
 - closing 2-87, 2-91
 - Print window 2-89
 - Printing 2-87, 2-89
 - Save window 2-90, 2-91
 - saved file confirmation window 2-90, 2-91
 - saving to a file 2-87, 2-90
 - System Log window 2-87, 2-88, 2-89, 2-90, 2-91
 - Cancel button 2-89
 - File menu 2-87, 2-88
- T**
- Task Scheduler
 - Windows 2-61, 2-66
 - TCP Out of Order 2-119
 - TCP Packet Delay 2-119
 - TCP Packet Error 2-119
 - TCP Packet Errors 2-119
 - TCP Packet Loss 2-119
 - Technical Assistance - contacting the Customer Care Center 1-4, 2-32, 2-98, 2-99, 2-100, 2-101, 2-102, 2-103, 2-104, 2-105, 2-106, 2-107, 2-108, 2-109, 2-110, 2-111, 2-112, 2-113, 2-114, 2-115
 - telnet server 2-29
 - Telnet terminals 2-6, 2-32, 2-52
 - Terminals
 - EAGLE 5 ISS
 - Telnet 2-6, 2-32, 2-52
 - Test button 2-6, 2-14, 2-17
 - Testing an STP Configuration Record 2-17
 - The address family is not supported - Error code 47 2-113
 - The address is already in use - Error code 48 2-113
 - The authentication method is NULL in the client software - Error code 632 2-103
 - The connection timed out - Error code 60 2-114
 - The connection timed out when SSH tried to connect to SSHD - Error code 682 2-112
 - The connection was refused - Error code 61 2-114
 - The connection was reset by the peer - Error code 54 2-114
 - The debug levels allowed for SSH protocol in openSSH is 0-9 - Error code 624 2-102
 - The file name is already specified - Error code 596 2-99
 - The host is down - Error code 67 2-115
 - The host was not specified in the SSH client on the EAGLE 5 ISS - Error code 659 2-107
 - The hostname was not specified in the SSH client on the EAGLE 5 ISS - Error code 661 2-108
 - The network channel is down - Error code 691 2-112
 - The network dropped the connection on reset - Error code 52 2-113
 - The network has reset - Error code 685 2-112
 - The network is down - Error code 62 2-115

The network is unreachable - Error code 51 2-113

The operation is not supported on the socket - Error code 45 2-113

The protocol family is not supported - Error code 46 2-113

The protocol is not available - Error code 42 2-113

The protocol is not supported - Error code 43l 2-113

The requested address cannot be assigned - Error code 49 2-113

The secure connection was closed by the remote server - Error code 669 2-109

The SFTP client failed to read the data from the file descriptor - Error code 616 2-101

The SFTP client received more data than expected - Error code 615 2-101

The SFTP connection is closed - Error code 598 2-99

The SFTP/SSH connection has been reset by the peer - Error code 687 2-112

The socket is already connected - Error code 56 2-114

The socket is not connected - Error code 57 2-114

The socket type is not supported - Error code 44 2-113

The SSH client key length is invalid - Error code 667 2-108

The SSH client was unable to load the cipher type on the EAGLE 5 ISS - Error code 663 2-108

The SSH connection was refused by the remote server - Error code 683 2-112

The SSH/SFTP client on the EAGLE 5 ISS failed to read from the remote side - Error code 674 2-110

The SSH/SFTP client on the EAGLE 5 ISS failed to write to the remote side - Error code 679 2-111

The SSH/SFTP connection has been aborted - Error code 686 2-112

The SSH/SFTP socket is already connected - Error code 689 2-112

The SSH/SFTP socket is not connected - Error code 690 2-112

The SSHD server is unreachable - Error code 684 2-112

The SSHD/SFTP server connection host is down - Error code 692 2-112

There is no route to the host - Error code 65 2-115

Too many references: can't splice - Error code 59 2-114

Troubleshooting Procedures 2-116

U

UIM - Unsolicited Information Message
EAGLE 5 ISS 2-32, 2-33, 2-52

UIM 1493 2-32, 2-33

UIM 1494 2-32, 2-33

Undefined - Error code 601 2-100

Undefined SFTP/SSH error - Error code 643 2-104

Unexpected SSH_FXP_NAME - Error code 611 2-100

unexpected SSH_FXP_NAME - Error code 614 2-101

Unexpected SSH_FXP_STATUS error - Error code 644 2-105

Unexpected SSH2_FXP_ATTRS - Error code 610 2-100

Unknown cipher number on the SSH client on the EAGLE 5 ISS - Error code 666 2-108

Unsupported value - Error code 35 2-115

Update Tables Log 2-2, 2-68, 2-69, 2-71, 2-72, 2-73, 2-74, 2-77, 2-78, 2-79, 2-80, 2-81, 2-82, 2-83, 2-84, 2-85

Clearing the Display 2-82, 2-83

closing 2-82, 2-86

Print window 2-84

Printing 2-82, 2-84

Save window 2-85, 2-86

saved file confirmation window 2-85, 2-86

saving to a file 2-82, 2-85

Update Tables Log window 2-71, 2-72, 2-78, 2-82, 2-83, 2-84, 2-85, 2-86

Commit Command Completed 2-78

File Menu 2-82

File menu 2-82, 2-83

Processing Retrieve Request 2-72

- Update Tables processing completed
 - without errors message 2-77
- Update Tables window 2-68, 2-69, 2-70, 2-71, 2-76, 2-77, 2-80, 2-81, 2-82
 - Browse button 2-69
 - Close button 2-69
 - Command File field 2-69, 2-70, 2-72
 - Command File Selected
 - Stop on error box Checked 2-71
 - description 2-69
 - Select window, description 2-70
- Update Validation Complete Window
 - Update Tables
 - Update Validation Complete 2-72, 2-73, 2-74
- Update Validation Complete window
 - 2-68, 2-73, 2-75, 2-76
 - with errors Window
 - Update Tables
 - Update Validation Complete with errors 2-74
 - Validate button 2-68, 2-69, 2-71, 2-72
- Update Validation Complete window 2-68, 2-72, 2-73, 2-74, 2-75, 2-76
 - description 2-73
 - with errors 2-74
 - without errors 2-74
- Updating Database Tables in the Selected STP 2-68
- Use STP and FTP UserNames, Passwords for all STPs Box 2-7, 2-8, 2-23, 2-24
- User login failure - Error code 633 2-99

V

- Validate button
 - Update Tables 2-69, 2-71, 2-72
 - Update Tables window 2-68
- Validating command files 1-2
- Variable
 - environment
 - FTRA_HOME 1-3
 - JRE_HOME 1-3
- Version level 2-92
- View menu
 - FTP-Based Table Retrieve Application 2-58, 2-83, 2-88
- Viewing log files 1-2

W

- Window
 - About FTTRA 2-2, 2-92
 - Command Complete Connectivity Test 2-18
 - Command File Editor 2-73, 2-75, 2-76, 2-77
 - File Menu 2-77
 - Invalid Command 2-76
 - Command File Editor window
 - File Menu 2-77
 - Commands Menu 2-42, 2-51, 2-69
 - Connectivity Test Log 2-17, 2-18, 2-19, 2-20, 2-22, 2-30, 2-33, 2-34
 - closing 2-18, 2-22
 - File Menu 2-18, 2-19
 - Print 2-19, 2-20
 - Save 2-20
 - Saved file confirmation 2-21
 - with errors 2-18
 - with no errors 2-17
 - Exit 2-3, 2-4
 - Exit Confirmation 2-3
 - FTP Server Configuration Menu 2-11, 2-35, 2-36, 2-98, 2-101, 2-116, 2-117
 - FTP Server Data Set 2-39
 - FTP-Based Table Retrieve Application 2-2, 2-8, 2-17, 2-23, 2-26, 2-43, 2-57, 2-58, 2-59, 2-69, 2-83, 2-84, 2-85, 2-88, 2-89, 2-90, 2-92
 - GTT Warning 2-40
 - Initializing 2-2
 - Invalid FTP Password warning 2-11
 - Invalid FTP User Name warning 2-11
 - Invalid IP Address warning 2-9, 2-10, 2-36, 2-37
 - Invalid STP Name Error Message 2-8
 - Invalid STP Name warning 2-8
 - Invalid STP Password warning 2-10
 - Invalid STP User Name warning 2-10
 - Modify Warning 2-25
 - Print
 - Retrieve Tables Log 2-59
 - Update Tables Log 2-85
 - Retrieve Tables 2-40, 2-41, 2-43, 2-44, 2-61
 - Add button 2-41, 2-46
 - Close button 2-42

- Command Complete 2-40, 2-53, 2-54
- Command List Field 2-41
- description 2-41
- GTT Warning 2-40
- Load button 2-42, 2-51, 2-61
- Remove button 2-42, 2-49
- Reset button 2-42, 2-49
- Retrieve button 2-40, 2-42, 2-51, 2-52
- Retrieve from Local Database button 2-40, 2-42, 2-51
- Retrieve from STP button 2-40, 2-42, 2-52
- Selected Commands Field 2-41
- Store button 2-42, 2-51, 2-61
- Retrieve Tables Log 2-52, 2-54, 2-56, 2-57, 2-58, 2-59, 2-60
 - closing 2-56, 2-60
 - File Menu 2-56, 2-57
 - Print 2-58, 2-59
 - Processing Retrieve Request 2-53
 - Release Not Compatible Error 2-43
 - Save 2-59, 2-60
 - Saved file confirmation 2-60
 - with Errors 2-55
 - with the RTRV-STP Command 2-56
 - without Errors 2-55
- Save
 - Retrieve Tables window 2-60
- Select
 - File Name: Field 2-70
 - Files of type: Field 2-70
 - Look in: Field 2-70
 - Update Tables 2-68, 2-69, 2-70
- Select Starting Directory 2-36, 2-37, 2-38
 - File Name: Field 2-38
 - Files of type: Field 2-38
 - Look in: Field 2-38
- Select, description 2-70
- STP Added 2-12
- STP Connection Configuration Menu 2-5, 2-6, 2-7, 2-8, 2-13, 2-14, 2-17, 2-23, 2-25, 2-26, 2-27, 2-99, 2-117, 2-118
 - FTRA 2.0 2-35
 - FTRA 2.0 or greater 2-5
- STP Data Deleted 2-26
- STP Data Modified 2-23, 2-25
- STP Selection Change 2-6, 2-27, 2-28
- System Log 2-87, 2-88, 2-89, 2-90, 2-91
 - closing 2-87, 2-91
 - File Menu 2-87, 2-88
 - Print 2-89
 - Print window
 - Cancel button 2-89
 - Save 2-90, 2-91
 - Saved file confirmation 2-90, 2-91
- Update Tables 2-68, 2-69, 2-70, 2-71, 2-76, 2-77, 2-80, 2-81, 2-82
 - Browse button 2-69
 - Close button 2-69
 - Command Complete 2-73, 2-74, 2-77
 - Command File field 2-69, 2-70, 2-72
 - Command List Field 2-69
 - description 2-69
 - Select, description 2-70
 - Stop on error box 2-69, 2-71, 2-80, 2-81, 2-82
 - Update Validation Complete 2-73
 - Validate button 2-68, 2-69, 2-71, 2-72
- Update Tables Log 2-71, 2-72, 2-78, 2-82, 2-83, 2-84, 2-85, 2-86
 - closing 2-82, 2-86
 - Commit Command Completed 2-78
 - File Menu 2-82, 2-83
 - Print 2-84
 - Processing Retrieve Request 2-72
 - Save 2-85, 2-86
 - Saved file confirmation 2-85, 2-86
- Update Validation Complete 2-68, 2-72, 2-73, 2-74, 2-75, 2-76
 - Commit button 2-73, 2-74
 - description 2-73
 - Edit button 2-73, 2-74, 2-75, 2-76
 - Stop button 2-73
 - with errors 2-74
 - without errors 2-74
- Windows Task Scheduler 2-61, 2-66