

# **Oracle® Solaris SAN Configuration and Multipathing Guide**

Copyright © 2009, 2010, Oracle and/or its affiliates. All rights reserved.

This software and related documentation are provided under a license agreement containing restrictions on use and disclosure and are protected by intellectual property laws. Except as expressly permitted in your license agreement or allowed by law, you may not use, copy, reproduce, translate, broadcast, modify, license, transmit, distribute, exhibit, perform, publish, or display any part, in any form, or by any means. Reverse engineering, disassembly, or decompilation of this software, unless required by law for interoperability, is prohibited.

The information contained herein is subject to change without notice and is not warranted to be error-free. If you find any errors, please report them to us in writing.

If this is software or related software documentation that is delivered to the U.S. Government or anyone licensing it on behalf of the U.S. Government, the following notice is applicable:

U.S. GOVERNMENT RIGHTS Programs, software, databases, and related documentation and technical data delivered to U.S. Government customers are "commercial computer software" or "commercial technical data" pursuant to the applicable Federal Acquisition Regulation and agency-specific supplemental regulations. As such, the use, duplication, disclosure, modification, and adaptation shall be subject to the restrictions and license terms set forth in the applicable Government contract, and, to the extent applicable by the terms of the Government contract, the additional rights set forth in FAR 52.227-19, Commercial Computer Software License (December 2007). Oracle America, Inc., 500 Oracle Parkway, Redwood City, CA 94065.

This software or hardware is developed for general use in a variety of information management applications. It is not developed or intended for use in any inherently dangerous applications, including applications which may create a risk of personal injury. If you use this software or hardware in dangerous applications, then you shall be responsible to take all appropriate fail-safe, backup, redundancy, and other measures to ensure its safe use. Oracle Corporation and its affiliates disclaim any liability for any damages caused by use of this software or hardware in dangerous applications.

Oracle and Java are registered trademarks of Oracle and/or its affiliates. Other names may be trademarks of their respective owners.

AMD, Opteron, the AMD logo, and the AMD Opteron logo are trademarks or registered trademarks of Advanced Micro Devices. Intel and Intel Xeon are trademarks or registered trademarks of Intel Corporation. All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. UNIX is a registered trademark licensed through X/Open Company, Ltd.

This software or hardware and documentation may provide access to or information on content, products, and services from third parties. Oracle Corporation and its affiliates are not responsible for and expressly disclaim all warranties of any kind with respect to third-party content, products, and services. Oracle Corporation and its affiliates will not be responsible for any loss, costs, or damages incurred due to your access to or use of third-party content, products, or services.

---

Copyright © 2009, 2010, Oracle et/ou ses affiliés. Tous droits réservés.

Ce logiciel et la documentation qui l'accompagne sont protégés par les lois sur la propriété intellectuelle. Ils sont concédés sous licence et soumis à des restrictions d'utilisation et de divulgation. Sauf disposition de votre contrat de licence ou de la loi, vous ne pouvez pas copier, reproduire, traduire, diffuser, modifier, breveter, transmettre, distribuer, exposer, exécuter, publier ou afficher le logiciel, même partiellement, sous quelque forme et par quelque procédé que ce soit. Par ailleurs, il est interdit de procéder à toute ingénierie inverse du logiciel, de le désassembler ou de le décompiler, excepté à des fins d'interopérabilité avec des logiciels tiers ou tel que prescrit par la loi.

Les informations fournies dans ce document sont susceptibles de modification sans préavis. Par ailleurs, Oracle Corporation ne garantit pas qu'elles soient exemptes d'erreurs et vous invite, le cas échéant, à lui en faire part par écrit.

Si ce logiciel, ou la documentation qui l'accompagne, est concédé sous licence au Gouvernement des Etats-Unis, ou à toute entité qui délivre la licence de ce logiciel ou l'utilise pour le compte du Gouvernement des Etats-Unis, la notice suivante s'applique :

U.S. GOVERNMENT RIGHTS. Programs, software, databases, and related documentation and technical data delivered to U.S. Government customers are "commercial computer software" or "commercial technical data" pursuant to the applicable Federal Acquisition Regulation and agency-specific supplemental regulations. As such, the use, duplication, disclosure, modification, and adaptation shall be subject to the restrictions and license terms set forth in the applicable Government contract, and, to the extent applicable by the terms of the Government contract, the additional rights set forth in FAR 52.227-19, Commercial Computer Software License (December 2007). Oracle America, Inc., 500 Oracle Parkway, Redwood City, CA 94065.

Ce logiciel ou matériel a été développé pour un usage général dans le cadre d'applications de gestion des informations. Ce logiciel ou matériel n'est pas conçu ni n'est destiné à être utilisé dans des applications à risque, notamment dans des applications pouvant causer des dommages corporels. Si vous utilisez ce logiciel ou matériel dans le cadre d'applications dangereuses, il est de votre responsabilité de prendre toutes les mesures de secours, de sauvegarde, de redondance et autres mesures nécessaires à son utilisation dans des conditions optimales de sécurité. Oracle Corporation et ses affiliés déclinent toute responsabilité quant aux dommages causés par l'utilisation de ce logiciel ou matériel pour ce type d'applications.

Oracle et Java sont des marques déposées d'Oracle Corporation et/ou de ses affiliés. Tout autre nom mentionné peut correspondre à des marques appartenant à d'autres propriétaires qu'Oracle.

AMD, Opteron, le logo AMD et le logo AMD Opteron sont des marques ou des marques déposées d'Advanced Micro Devices. Intel et Intel Xeon sont des marques ou des marques déposées d'Intel Corporation. Toutes les marques SPARC sont utilisées sous licence et sont des marques ou des marques déposées de SPARC International, Inc. UNIX est une marque déposée concédée sous licence par X/Open Company, Ltd.

# Contents

---

<b>Preface</b> .....	11
<b>1 Product Overview</b> .....	15
About Sun StorageTek Traffic Manager .....	15
Software Features .....	16
Fibre Channel Software Features .....	16
SAS Software Features .....	16
Multipathing Software Features .....	17
Supported Standards .....	18
<b>2 Fibre Channel Configuration Overview</b> .....	21
Configuration Task Overview .....	21
Configuration Considerations .....	22
<b>3 Administering Multipathing Devices Through mpathadm Commands</b> .....	25
Administering Multipathing Devices .....	25
▼ To Get a List of Multipathing Support That Can Be Administered by the mpathadm Command .....	25
▼ To Get the Multipathing Support Properties .....	25
▼ To Get a List of Initiator Ports Discovered on the System .....	26
▼ To Get the Properties of a Particular Initiator Port .....	27
▼ To Get a List of Logical Units Discovered on the System .....	27
▼ To Get the Properties and Associated Path Information of a Particular Logical Unit by Name .....	27
▼ To List All Logical Units Associated With a Particular Target Port .....	29
▼ To List a Logical Unit With a Particular Name Derived From the Hardware Used by the System .....	30
▼ To Configure Auto-Failback for a Particular Multipathing Support .....	31

▼ To Fail Over a Logical Unit .....	33
▼ To Enable a Path .....	35
▼ To Disable a Path .....	36
<b>4 Configuring Multipathing Software .....</b>	<b>39</b>
Configuring Multipathing .....	39
Multipathing Considerations .....	40
Enabling and Disabling Multipathing .....	40
▼ To Enable Multipathing .....	41
▼ To Disable Multipathing .....	42
Enabling or Disabling Multipathing on a Per-Port Basis .....	43
Port Configuration Considerations .....	43
Configuring Third-Party Storage Devices .....	45
Third-Party Device Configuration Considerations .....	45
Configuring Third-Party Storage Devices: New Devices .....	46
Configuring Third-Party Storage Devices: Disabling Devices .....	47
Displaying Device Name Changes .....	47
Configuring Automatic Failback .....	48
▼ To Configure Automatic Failback .....	49
<b>5 Configuring SAN Devices .....</b>	<b>51</b>
SAN Device Considerations .....	51
Adding SAN Devices .....	52
▼ To Add a SAN Device .....	52
Configuring Fabric Boot Devices on SPARC .....	53
Boot Considerations .....	53
<b>6 Configuring SAS Domains .....</b>	<b>55</b>
SAS Multipathing Considerations .....	55
Dynamic Discovery of SAS Devices .....	55
Configuring SAS Boot Devices .....	56
<b>7 Configuring IPFC SAN Devices .....</b>	<b>57</b>
IPFC Considerations .....	57

Determining Fibre Channel Adapter Port Instances .....	58
Invoking and Configuring IPFC .....	60
▼ To Start a Network Interface Manually .....	60
▼ To Configure the Host for Automatic Plumbing Upon Reboot .....	61
<b>8 Solaris 10 10/08 x86/x64 Fibre Channel Operating System Booting Procedure .....</b>	<b>63</b>
Setup Requirements .....	64
Installation Overview .....	64
Installation Procedure .....	65
▼ To Summarize the Procedure .....	65
▼ To Perform a CD ROM, DVD ROM, or Network-Based OS Installation .....	65
Post-Installation Patches for the Sun Solaris 10 10/08 OS .....	72
<b>9 Persistent Binding for Tape Devices .....</b>	<b>73</b>
Persistent Binding Overview .....	73
Creating Tape Links .....	74
▼ Configuration Steps .....	75
<b>A Manual Configuration for Fabric-Connected Devices .....</b>	<b>77</b>
Manual Configuration .....	77
▼ To Configure Manually .....	78
Fabric Device Node Configuration .....	78
Ensuring That LUN Level Information Is Visible .....	79
Configuring Device Nodes Without Multipathing Enabled .....	80
▼ To Configure an Individual Device Without Multipathing .....	80
▼ To Configure Multiple Devices Without Multipathing .....	81
Configuring Device Nodes With Solaris Multipathing Software Enabled .....	83
▼ To Configure Individual Devices With Sun StorageTek Traffic Manager Software .....	83
▼ To Configure Multiple Devices With Multipathing .....	84
Unconfiguring Fabric Devices .....	86
Unconfiguring a Fabric Device .....	86
<b>B Supported FC-HBA API .....</b>	<b>93</b>
Supported Fibre Channel HBA API .....	93

- C   Multipathing Troubleshooting .....97**
  - System Fails to Boot During `stmsboot` ..... 97
    - ▼ To Recover From Single User Mode ..... 97
  - System Crashes During `stmsboot` ..... 98
    - ▼ To Recover from a System Crash ..... 98
  
- Index ..... 101**

# Figures

---

FIGURE 8-1	System BIOS for Selecting Disk, CD-ROM, or Network Boot Device Priority ..	66
FIGURE 8-2	Selecting an FC-based Boot Disk During Disk Selection .....	67
FIGURE 8-3	luxadm display Command and Output .....	68
FIGURE 8-4	HBA BIOS Screen for an HBA WWN .....	70
FIGURE 8-5	HBA BIOS Screen for Enabling Boot From the FC LUN .....	71
FIGURE 8-6	Example System BIOS for Enabling Booting from an FC LUN .....	72





# Tables

---

TABLE 2-1	Tasks to Configure Solaris OS FC and Sun StorageTek Traffic Manager Software .....	21
TABLE 7-1	IPFC (NFS/NAS and SNDR) .....	57
TABLE B-1	Supported and Unsupported FC-HBA Interfaces .....	93



# Preface

---

The *Solaris SAN Configuration and Multipathing Guide* provides an overview of the Sun StorageTek Traffic Manager software as an integrated part of the Sun Solaris 10 Operating System (OS). This guide includes instructions about how to install and configure the software and devices.

This guide is intended for system, storage and network administrators who create and maintain Fibre Channel (FC) storage area networks (SANs) and serial attached SCSI (SAS) Domains. A high level of expertise in the management and maintenance of SANS and SAS Domains is assumed.

## Before You Read This Document

Before you read this book, read the latest Solaris 10 Operating System Release Notes.

## How This Document Is Organized

[Chapter 1, “Product Overview,”](#) provides an overview of the Sun StorageTek Traffic Manager software.

[Chapter 2, “Fibre Channel Configuration Overview,”](#) provides an overview of configuring the Sun StorageTek Traffic Manager software.

[Chapter 3, “Administering Multipathing Devices Through `mpathadm` Commands,”](#) explains how to use the `mpathadm` command to enable multipathing administration through the ANSI standard Multipath Management API.

[Chapter 4, “Configuring Multipathing Software”](#) explains how to configure the multipathing feature for FC devices provided in the Solaris 10 OS.

[Chapter 5, “Configuring SAN Devices,”](#) provides high level overviews of the steps used to configure SAN devices.

[Chapter 6, “Configuring SAS Domains”](#) provides high-level overviews of the steps used to configure SAS domains.

Chapter 7, “Configuring IPFC SAN Devices,” explains considerations when configuring IPFC SAN Devices.

Chapter 8, “Solaris 10 10/08 x86/x64 Fibre Channel Operating System Booting Procedure” describes how to manually install the Solaris 10 OS, x86/x64 FC Operating System.

Chapter 9, “Persistent Binding for Tape Devices” describes how you can specify tape binding in the Solaris 10 OS while retaining the benefits of automatic discovery for disk-based devices.

Appendix A, “Manual Configuration for Fabric-Connected Devices” explains Manual configuration for Fabric Connected Devices.

Appendix B, “Supported FC-HBA API” provides details on Supported FC-HBA API.

Appendix C, “Multipathing Troubleshooting” provides trouble shooting information for potential problems that might occur while you run the Sun StorageTek Traffic Manager software.

## Using UNIX Commands

This document might not contain information about basic UNIX commands and procedures such as shutting down the system, booting the system, and configuring devices. Refer to the following for this information:

- Software documentation that you received with your system
- Solaris Operating System documentation at <http://docs.sun.com>

## Related Third-Party Web Site References

Third-party URLs are referenced in this document and provide additional, related information.

---

**Note** – Sun is not responsible for the availability of third-party web sites mentioned in this document. Sun does not endorse and is not responsible or liable for any content, advertising, products, or other materials that are available on or through such sites or resources. Sun will not be responsible or liable for any actual or alleged damage or loss caused or alleged to be caused by or in connection with use of or reliance on any such content, goods, or services that are available on or through such sites or resources.

---

## Documentation, Support, and Training

See the following web sites for additional resources:

- [Documentation \(http://docs.sun.com\)](http://docs.sun.com)
- [Support \(http://www.oracle.com/us/support/systems/index.html\)](http://www.oracle.com/us/support/systems/index.html)
- [Training \(http://education.oracle.com\)](http://education.oracle.com) – Click the Sun link in the left navigation bar.

## Oracle Welcomes Your Comments

Oracle welcomes your comments and suggestions on the quality and usefulness of its documentation. If you find any errors or have any other suggestions for improvement, go to <http://docs.sun.com> and click Feedback. Indicate the title and part number of the documentation along with the chapter, section, and page number, if available. Please let us know if you want a reply.

[Oracle Technology Network \(http://www.oracle.com/technetwork/index.html\)](http://www.oracle.com/technetwork/index.html) offers a range of resources related to Oracle software:

- Discuss technical problems and solutions on the [Discussion Forums \(http://forums.oracle.com\)](http://forums.oracle.com).
- Get hands-on step-by-step tutorials with [Oracle By Example \(http://www.oracle.com/technology/obe/start/index.html\)](http://www.oracle.com/technology/obe/start/index.html).
- Download [Sample Code \(http://www.oracle.com/technology/sample\\_code/index.html\)](http://www.oracle.com/technology/sample_code/index.html).

## Typographic Conventions

The following table describes the typographic conventions that are used in this book.

TABLE P-1 Typographic Conventions

Typeface	Meaning	Example
AaBbCc123	The names of commands, files, and directories, and onscreen computer output	Edit your <code>.login</code> file. Use <code>ls -a</code> to list all files. <code>machine_name%</code> you have mail.
<b>AaBbCc123</b>	What you type, contrasted with onscreen computer output	<code>machine_name%</code> <b>su</b> Password:
<i>aabbcc123</i>	Placeholder: replace with a real name or value	The command to remove a file is <i>rm filename</i> .

TABLE P-1    Typographic Conventions    (Continued)

Typeface	Meaning	Example
<i>AaBbCc123</i>	Book titles, new terms, and terms to be emphasized	Read Chapter 6 in the <i>User's Guide</i> .  <i>A cache</i> is a copy that is stored locally.  Do <i>not</i> save the file.  <b>Note:</b> Some emphasized items appear bold online.

## Shell Prompts in Command Examples

The following table shows the default UNIX system prompt and superuser prompt for shells that are included in the Oracle Solaris OS. Note that the default system prompt that is displayed in command examples varies, depending on the Oracle Solaris release.

TABLE P-2    Shell Prompts

Shell	Prompt
Bash shell, Korn shell, and Bourne shell	\$
Bash shell, Korn shell, and Bourne shell for superuser	#
C shell	machine_name%
C shell for superuser	machine_name#

# Product Overview

---

This chapter provides an overview of the Sun StorageTek Traffic Manager software, and covers the following topics:

- “About Sun StorageTek Traffic Manager” on page 15
- “Software Features” on page 16
- “Supported Standards” on page 18

## About Sun StorageTek Traffic Manager

The Sun StorageTek Traffic Manager software enables multipathing connections for Sun Solaris 10 OS hosts. Multipathing provides higher availability for storage devices through the use of multiple access paths. Fibre Channel (FC), Serial Attached SCSI (SAS), and Internet Small Computer Storage Interface (iSCSI) protocols are supported.

The Sun StorageTek Traffic Manager software resides on the host and identifies the storage devices on your SAN or SAS Domain. The software enables you to attach Fibre Channel storage in either loop, fabric, or point-to-point mode. The software provides a common interface for managing both Fibre Channel and SAS storage.

For information on how to configure targets and initiators in preparation for multipathing, see the following:

- Chapter 14 of the *Solaris 10 System Administration: Devices and File Systems Guide*, to configure Solaris iSCSI targets and initiators

## Software Features

The Sun StorageTek Traffic Manager software enables multipathing connections for the Sun Solaris 10 OS hosts, with the following software features:

- “Fibre Channel Software Features” on page 16
- “SAS Software Features” on page 16
- “Multipathing Software Features” on page 17

## Fibre Channel Software Features

The Sun StorageTek Traffic Manager software provides the following key features:

- Dynamic Storage Discovery – The software automatically recognizes devices and any modifications made to device configurations. This feature makes devices available to the system without requiring you to reboot or manually change information in configuration files.
- Persistent Device Naming – Devices that are configured within the software maintain their device naming through reboots or reconfiguration. The only exception to this policy are tape devices found in `/dev/rmt` that will not change unless they are removed, and then regenerated at a later date.
- Fibre Channel Arbitrated Loop (FCAL) Support – OpenBoot PROM (OBP) commands that are used on servers can access FCAL attached storage for scanning the FC loop.
- Fabric Booting – The Solaris OS supports booting from fabric devices as well as non-fabric Fibre Channel devices. Fabric topologies with Fibre Channel switches provide higher speed, more connections, and port isolation.
- FC-HBA Library – What was previously known as the Storage Networking Industry Association Fibre Channel host bus adapter (SNIA FC-HBA) library is now known as the FC-HBA library. The FC-HBA library application programming interface (API) enables management of FC HBAs and provides a standards-based interface for other applications (such as Sun StorEdge Enterprise Storage Manager) that can be used to gather information about FC HBAs.

Man pages for common FC-HBA APIs are included in the Solaris 10 OS in `libhbaapi (3LIB)`. For additional information about FC specifications, refer to <http://www.t11.org>.

## SAS Software Features

- Dynamic Storage Discovery – The Solaris OS Storage Multipathing software automatically recognizes devices and any modifications made to device configurations. This makes devices available to the system without requiring you to reboot or manually change information in configuration files.



- **Persistent Device Naming** – Dynamic Storage Discovery Devices that are configured within the Solaris OS Storage Multipathing software maintain their device naming through reboots or reconfiguration.

## Multipathing Software Features

The Solaris 10 OS contains the Sun StorageTek Traffic Manager software. The software is enabled by default for x86-based platforms and optional for SPARC-based platforms. The software contains the following features:

- **Path management** – The Sun StorageTek Traffic Manager software dynamically manages the paths to any storage devices it supports. The addition or removal of paths to a device is done automatically when a path is brought online or removed from a service. This feature enables hosts configured with the software to begin with a single path to a device and add more host controllers, increasing bandwidth and RAS, without changing device names or modifying applications. Sun storage does not require configuration files to manage or databases to keep current. For storage other than Sun, contact your storage vendor for methods to enable support and to ensure it is qualified with the Sun StorageTek Traffic Manager software.
- **Single Device Instances** – Unlike other multipathing solutions, the Sun StorageTek Traffic Manager software is fully integrated with the Solaris 10 OS. The software displays multipath devices as single device instances instead of as one device, or device link, per path. This feature reduces the cost of managing complex storage architectures utilities such as format(1M) or Sun Solaris OS Volume Manager, to “see” one representation of a storage device instead of a separate device for each path.
- **Failover support** – Implementing higher levels of RAS requires redundant host connectivity to storage devices. The Sun StorageTek Traffic Manager software manages the failure of storage paths while maintaining host I/O connectivity through available secondary paths.
- **Symmetrical/Asymmetrical device support**– The Sun StorageTek Traffic Manager software supports the following disk storage devices:
  - All Sun disk storage, both symmetric and asymmetric
  - All T10/T11 standards-compliant non-Sun symmetrical disk devices
  - Many non-Sun asymmetrical disk arrays

---

**Note** – T10 ALUA support has been added for asymmetrical devices that support this T10 standard. Contact your storage vendor to see whether your device is supported.

---

- **I/O load balancing** – In addition to providing simple failover support, the Sun StorageTek Traffic Manager software can use any active paths to a storage device to send and receive I/O. With I/O routed through multiple host connections, bandwidth can be increased by the

addition of host controllers. The software uses a round-robin load-balancing algorithm by which individual I/O requests are routed to active host controllers in a series one after the other.

- **Queue depth** – SCSI storage arrays present storage to a host in the form of a logical unit number (LUN). LUNs have a finite set of resources available, such as the amount of data that can be stored, as well as the number of active commands that a device or LUN can process at one time. The number of active commands that can be issued before a device blocks further I/O is known as queue depth. When the Sun StorageTek Traffic Manager software is enabled, a single queue is created for each LUN regardless of the number of distinct or separate paths it may have to the host. This feature enables the disk driver to maintain and balance one queue to the LUN, effectively managing queue depth. No other multipathing software available for the Solaris 10 OS has this ability.
- **stmsboot command** – The Solaris 10 OS includes the `stmsboot (1M)` command, which allows you to enable or disable the Solaris OS Multipathing software on your boot device after the OS installation has been completed. This command is available for both SPARC and x86/x64 systems, and provides support for SAS multipathing with the Solaris 10 Update 5 OS.

SAS multipathing is not enabled by default in the Solaris 10 Update 5 OS for either SPARC or x86/x64 hosts, so use of the `stmsboot` command is required as a post-installation step if you wish to enable Multipathing.

SPARC hosts do not enable multipathing for Fibre Channel devices by default, so use of the `stmsboot` command is required as a post-installation step.

X86/x64 hosts do enable multipathing of Fibre Channel devices by default, so the use of the `stmsboot` command is not mandatory as a post-installation step.

- **Dynamic reconfiguration** – The Sun StorageTek Traffic Manager software supports the Solaris 10 OS dynamic reconfiguration (DR).

## Supported Standards

The Sun StorageTek Traffic Manager software is based on open standards for communicating with devices and device management, ensuring interoperability with other standards-based devices and software. The following standards are supported by the Sun StorageTek Traffic Manager software:

- ANSI Standard: Information Technology – SNIA Multipath Management API Specification (ANSI INCITS 412-2006)
- T10 standards, including SCSI-3, SAM, FCP, SPC, and SBC
- T11.3 FC standards, including FC-PH, FC-AL, FC-LS, and FC-GS
- T11.5 storage management standards, including FC-HBA
- IETF standards, including RFC 2625

- Serial Attached SCSI-2 (SAS2)



# Fibre Channel Configuration Overview

This chapter provides information about configuring the Solaris OS Fibre Channel (FC) and Storage Multipathing software. The following topics are discussed:

- “[Configuration Task Overview](#)” on page 21
- “[Configuration Considerations](#)” on page 22

## Configuration Task Overview

This section provides a high level overview of the tasks that you should perform to configure the Sun StorageTek Traffic Manager software.

The following table lists the configuration tasks, description about each task and the reference information where you can find the procedures to perform each task.

**TABLE 2-1** Tasks to Configure Solaris OS FC and Sun StorageTek Traffic Manager Software

Configuration Task	Task Description	Reference Information
Enable Multipathing	<p>Multipathing capability is provided by the Sun StorageTek Traffic Manager software in the Solaris 10 OS. This software enables multipathing:</p> <ul style="list-style-type: none"> <li>▪ By default, for Fibre Channel-attached devices on x86/x64 platforms</li> <li>▪ By manual configuration on SPARC platforms</li> <li>▪ By manual configuration for SAS devices</li> </ul>	<p>The steps for enabling multipathing are outlined in <a href="#">Chapter 4, “Configuring Multipathing Software.”</a></p>

**TABLE 2-1** Tasks to Configure Solaris OS FC and Sun StorageTek Traffic Manager Software  
(Continued)

Configuration Task	Task Description	Reference Information
Configure Fibre Channel Devices	In the Solaris 10 OS, FCAL, fabric, and point-to-point connected devices are made available to the host. This feature differs from previous versions of the Sun StorageTek Traffic Manager software running on the Solaris 8 or 9 OS. In those versions, manual configuration steps were required to achieve fabric-connected device availability on the Solaris host.	<a href="#">Chapter 5, “Configuring SAN Devices”</a>
Set up FC Boot Device	The Sun StorageTek Traffic Manager software enables a Solaris server to boot from a fabric device.	<a href="#">“SAN Device Considerations” on page 51</a>
Configure IPFC SAN devices	You can configure host recognition of IPFC devices and implementation of IP over FC in a SAN. Configuration of IPFC depends on the instance of the Fabric Port (FP) driver for the FC adapter ports.	<a href="#">Chapter 7, “Configuring IPFC SAN Devices”</a>
Configure SAS Devices	In the Solaris 10 Update 5 OS, multipathing of SAS devices is supported.	

## Configuration Considerations

Before you configure the Sun StorageTek Traffic Manager software, consider the following:

- Configure ports and zones according to the vendor-specific documentation for storage and switches.
- LUN masking enables specific LUNs to be seen by specific hosts. See your vendor-specific storage documentation that describes masking.
- Power management needs to be disabled for hosts and devices on a SAN. See `power.conf` (4) for details about power management.
- The STMS Boot utility is included with the Sun StorageTek Traffic Manager software that manages the enable and disable process needed for SAN booting. Issuing the `stmsboot` command allows the automatic update of `/etc/vfstab` and the dump configuration to reflect device name changes when enabling or disabling the Sun StorageTek Traffic Manager software. Note that the software is disabled by default with SPARC devices and enabled by default with x86 devices.
- For Sun Solaris 10 OS, fabric-connected devices are configured and made available to the host automatically during install and boot time.

---

**Note** – If you are performing an upgrade and want to make any Fibre Channel (FC) devices unavailable after upgrade, those devices have to be manually unconfigured using `cfgadm -c unconfigure` commands. However, to make those devices permanently unavailable to the system, you may want to consider using switch zoning or LUN masking. The changes made by `cfgadm -c unconfigure` do not persist after a reboot unless manual configuration for fabric-connected devices has been turned on. To find out how to disable the fabric devices discovery during boot or install, please refer to [Appendix A, “Manual Configuration for Fabric-Connected Devices”](#)

---





# Administering Multipathing Devices Through `mpathadm` Commands

---

You determine and configure Solaris OS multipathing support by using `mpathadm` commands. Starting with the Solaris 10 Update 3 OS, the `mpathadm` command enables multipathing administration through the ANSI standard Multipath Management API. The terms used in this chapter to denote a path, initiator port, target port, and logical unit are consistent with the T10 specification.

## Administering Multipathing Devices

Perform the following tasks to administer any multipathing devices.

### ▼ To Get a List of Multipathing Support That Can Be Administered by the `mpathadm` Command

The multipathing support is identified with the Multipath Management API plug-in library name.

- List the multipathing support by typing the `mpathadm list mpath-support` command.

```
# mpathadm list mpath-support
mpath-support: libmpscsi_vhci.so
```

(Only one result is shown in the preceding example.)

### ▼ To Get the Multipathing Support Properties

The multipathing support properties are associated with Multipath Management API plug-in properties.

- 1 List the multipathing support by typing the `mpathadm list mpath-support` command.

```
# mpathadm list mpath-support
mpath-support: libmpscsi_vhci.so
```

(Only one mpath support name result is shown in the preceding output list example.)

- 2 Choose the mpath support name from the output list.

- 3 List the multipathing support properties for a specified mpath support name by typing the `mpathadm show mpath-support mpath-support-name` command.

```
# mpathadm show mpath-support libmpscsi_vhci.so
mpath-support: libmpscsi_vhci.so
  Vendor: Sun Microsystems
  Driver Name: scsi_vhci
  Default Load Balance: round-robin
  Supported Load Balance Types:
    round-robin
    logical-block
  Allows To Activate Target Port Group Access: yes
  Allows path Override: no
  Supported Auto Failback Config: yes
  Auto Failback: on
  Failback Polling Rate (current/max): 0/0
  Supported Auto Probing config: no
  Auto Probing: NA
  probing Polling Rate (current/max): NA/NA
  Supported Devices:
    Vendor: SUN
    Product: T300
    Revision:
    Supported Load Balance Types:
      round-robin
    Vendor: SUN
    Product: T4
    Revision:
    Supported Load Balance Types:
      round-robin
```

The command output also shows a list of device products that is supported by the multipathing support software. The multipathing support `libmpscsi_vhci.so` supports T10 target port group compliant devices by default.

## ▼ To Get a List of Initiator Ports Discovered on the System

An initiator port is part of a path that consists of an initiator port, target port, and a logical unit.

- Run the `mpathadm list initiator-port` command.

```
# mpathadm list initiator-port
Initiator-Port: iqn.1986-03.com.sun:01:080020b7ac2b.437a3b3e,4000002affff
```

Initiator-Port: 2000000173018713

## ▼ To Get the Properties of a Particular Initiator Port

Display the properties of an initiator port by typing the show command.

### 1 Run the `mpathadm list initiator-port` command.

```
# mpathadm list initiator-port
Initiator-Port: iqn.1986-03.com.sun:01:080020b7ac2b.437a3b3e,4000002affff
Initiator-Port: 2000000173018713
```

### 2 Select an initiator port to use from the output.

### 3 Run the `mpathadm show initiator-port initiator-port-name` command.

```
# mpathadm show initiator-port 2000000173018713
initiator-port: 2000000173018713
  Transport Type: Fibre Channel
  OS Device File: /devices/pci@1f,2000/SUNW,glc@4/fp@0,0
```

## ▼ To Get a List of Logical Units Discovered on the System

The `mpathadm list lu` command displays the list of logical units attached to the initiator. This list displays the number of paths and the operational path count to each logical unit listed.

### ● Run the `mpathadm list lu` command.

```
# mpathadm list lu
/dev/rds/c4t60020F20000035AF4267CCCB0002CEE2d0s2
  Total Path Count: 2
  Operational Path Count: 2
/dev/rds/c4t60003BA27D2120004204AC2B000DAB00d0s2
  Total Path Count: 2
  Operational Path Count: 2
/dev/rds/c4t60003BA27D2120004204AC1A000F1D6Cd0s2
  Total Path Count: 2
  Operational Path Count: 2
```

## ▼ To Get the Properties and Associated Path Information of a Particular Logical Unit by Name

Display the list of logical units, along with the properties for each logical unit through the `mpathadm` command. The list of logical units contains logical unit names that in turn can be used to display the properties of a particular logical unit.

**1 Run the `mpathadm list lu` command.**

```
# mpathadm list lu
/dev/rds/c4t600020F20000035AF4267CCCB0002CEE2d0s2
  Total Path Count: 2
  Operational Path Count: 2
/dev/rds/c4t60003BA27D2120004204AC2B000DAB00d0s2
  Total Path Count: 2
  Operational Path Count: 2
/dev/rds/c4t60003BA27D2120004204AC1A000F1D6Cd0s2
  Total Path Count: 2
  Operational Path Count: 2
```

**2 Select a logical unit name from the output.****3 Run the `mpathadm show lu logical-unit-name` command.**

```
# mpathadm show lu /dev/rds/c4t60003BA27D2120004204AC2B000DAB00d0s2
logical unit: /dev/rds/c4t60003BA27D2120004204AC2B000DAB00d0s2
  mpath-support libmpscsi_vhci.so
  Vendor: SUN
  Product: T4
  Revision: 0301
  Name Type: SCSI Inquiry VPD page 83 type 3
  Name: 60003ba27d2120004204ac2b000dab00
  Asymmetric: yes
  Current Load Balance: round-robin
  Logical Unit Group ID: NA
  Auto Failback: on
  Auto Probing: NA

  Paths:
    Initiator Port Name: 2000000173818713
    Target Port Name: 20030003ba27d212
    Override Path: NA
    Path State: OK
    Disabled: no

    Initiator Port Name: 2000000173018713
    Target Port Name: 20030003ba27d095
    Override path: NA
    Path State: OK
    Disabled: no

  Target Port Groups:
    ID: 2
    Explicit Failover: yes
    Access State: standby
    Target Ports:
      Name: 20030003ba27d212
      Relative ID: 0

    ID: 5
    Explicit Failover: yes
    Access State: active
    Target Ports:
      Name: 20030003ba27d095
      Relative ID: 0
```

## ▼ To List All Logical Units Associated With a Particular Target Port

To list paths through a target port use the show command of a logical unit. First, retrieve the list of target ports associated with a logical unit. Then, use the target port to list all logical units associated with this target port.

### 1 Run the `mpathadm list lu` command.

```
# mpathadm list lu
/dev/rds/c4t60020F20000035AF4267CCCB0002CEE2d0s2
  Total Path Count: 2
  Operational Path Count: 2
/dev/rds/c4t60003BA27D2120004204AC2B000DAB00d0s2
  Total Path Count: 2
  Operational Path Count: 2
/dev/rds/c4t60003BA27D2120004204AC1A000F1D6Cd0s2
  Total Path Count: 2
  Operational Path Count: 2
```

### 2 Select a logical unit name from the output.

### 3 Run the `mpathadm show lu` command.

```
# mpathadm show lu /dev/rds/c4t60003BA27D2120004204AC2B000DAB00d0s2
logical unit: /dev/rds/c4t60003BA27D2120004204AC2B000DAB00d0s2
  mpath-support libmpscsi_vhci.so
  Vendor: SUN
  Product: T4
  Revision: 0301
  Name Type: SCSI Inquiry VPD page 83 type 3
  Name: 60003ba27d2120004204ac2b000dab00
  Asymmetric: yes
  Current Load Balance: round-robin
  Logical Unit Group ID: NA
  Auto Failback: on
  Auto Probing: NA

  Paths:
    Initiator Port Name: 2000000173818713
    Target Port Name: 20030003ba27d212
    Override Path: NA
    Path State: OK
    Disabled: no

    Initiator Port Name: 2000000173018713
    Target Port Name: 20030003ba27d095
    Override path: NA
    Path State: OK
    Disabled: no

  Target Port Groups:
    ID: 2
    Explicit Failover: yes
```

```
Access State: standby
Target Ports:
  Name: 20030003ba27d212
  Relative ID: 0

ID: 5
Explicit Failover: yes
Access State: active
Target Ports:
  Name: 20030003ba27d095
  Relative ID: 0
```

- 4 Select a target port from the output list.
- 5 Run the `mpathadm list lu -t` command.

```
# mpathadm list lu -t 20030003ba27d212
/dev/rdisk/c4t60003BA27D2120004204AC2B000DAB00d0s2
  Total Path Count: 2
  Operational Path Count: 2
/dev/rdisk/c4t60003BA27D2120004204AC1A000F1D6Cd0s2
  Total Path Count: 2
  Operational Path Count: 2
```

## ▼ To List a Logical Unit With a Particular Name Derived From the Hardware Used by the System

- 1 Run the `mpathadm list lu` command.

```
# mpathadm list lu
/dev/rdisk/c4t60020F20000035AF4267CCCB0002CEE2d0s2
  Total Path Count: 2
  Operational Path Count: 2
/dev/rdisk/c4t60003BA27D2120004204AC2B000DAB00d0s2
  Total Path Count: 2
  Operational Path Count: 2
/dev/rdisk/c4t60003BA27D2120004204AC1A000F1D6Cd0s2
  Total Path Count: 2
  Operational Path Count: 2
```

- 2 Select a logical unit name from the output.
- 3 Run the `mpathadm show lu logical-unit-name` command.

```
# mpathadm show lu /dev/rdisk/c4t60003BA27D2120004204AC2B000DAB00d0s2
logical unit: /dev/rdisk/c4t60003BA27D2120004204AC2B000DAB00d0s2
mpath-support libmpscsi_vhci.so
Vendor: SUN
Product: T4
Revision: 0301
Name Type: SCSI Inquiry VPD page 83 type 3
```

```

Name: 60003ba27d2120004204ac2b000dab00
Asymmetric: yes
Current Load Balance: round-robin
Logical Unit Group ID: NA
Auto Failback: on
Auto Probing: NA

Paths:
  Initiator Port Name: 2000000173818713
  Target Port Name: 20030003ba27d212
  Override Path: NA
  Path State: OK
  Disabled: no

  Initiator Port Name: 2000000173018713
  Target Port Name: 20030003ba27d095
  Override path: NA
  Path State: OK
  Disabled: no

Target Port Groups:
  ID: 2
  Explicit Failover: yes
  Access State: standby
  Target Ports:
    Name: 20030003ba27d212
    Relative ID: 0

  ID: 5
  Explicit Failover: yes
  Access State: active
  Target Ports:
    Name: 20030003ba27d095
    Relative ID: 0

```

- 4 Select an *inquiry-string-name* from the output.
- 5 Run the `mpathadm list lu -n inquiry-string-name` command.

```

# mpathadm list lu -n 60003ba27d2120004204ac2b000dab00
mpath-support: libmpscsi_vhci.so
/dev/rds/c4t60003BA27D2120004204AC2B000DAB00d0s2
Total Path Count: 2
Operational Path Count: 2

```

## ▼ To Configure Auto-Failback for a Particular Multipathing Support

Symmetrical devices allow for automatic failback to a possible optimal path. If a failover occurs on the initial path, the standby path becomes the new online path. Usually the standby path is a suboptimal path. When auto-failback is enabled, the initial path comes back online, failover to the initial path automatically occurs.

**1 Run the `mpathadm list mpath-support` command.**

```
# mpathadm list mpath-support
mpath-support: libmpscsi_vhci.so
```

**2 Select an mpath support name from the output list.****3 Run the `mpathadm modify mpath-support -a [on | off] mpath-support-name` command.**

```
# mpathadm modify mpath-support -a off libmpscsi_vhci.so
```

**4 Run the `mpathadm show mpath-support mpath-support-name` command to check the change.**

```
# mpathadm show mpath-support libmpscsi_vhci.so
mpath-support: libmpscsi_vhci.so
  Vendor: Sun Microsystems
  Driver Name: scsi_vhci
  Default Load Balance: round-robin
  Supported Load Balance Types:
    round-robin
    logical-block
  Allows To Activate Target Port Group Access: yes
  Allows path Override: no
  Supported Auto Failback Config: yes
  Auto Failback: on
  Failback Polling Rate (current/max): 0/0
  Supported Auto Probing config: no
  Auto Probing: NA
  probing Polling Rate (current/max): NA/NA
  Supported Devices:
    Vendor: SUN
    Product: T300
    Revision:
    Supported Load Balance Types:
      round-robin
    Vendor: SUN
    Product: T4
    Revision:
    Supported Load Balance Types:
      round-robin
```

---

**Note** – The auto-failback display initiated by the `mpathadm modify` command setting is effective while the system is running. However, to keep the changed setting persistent, you must update the `/kernel/drv/scsi_vhci.conf` file. Refer to [“Configuring Automatic Failback”](#) on page 48.

---



## ▼ To Fail Over a Logical Unit

This operation is applicable only to devices in the following two categories:

- Asymmetric devices with a proprietary failover mechanism recognized and supported by multipathing support
- Devices conforming to the T10 Standard Target Port Group Support `libmpscsi_vhci.so` and providing *explicit* mode asymmetric logical unit access

### 1 Run the `mpathadm list lu` command.

```
# mpathadm list lu
/dev/rds/c4t60020F20000035AF4267CCCB0002CEE2d0s2
  Total Path Count: 2
  Operational Path Count: 2
/dev/rds/c4t60003BA27D2120004204AC2B000DAB00d0s2
  Total Path Count: 2
  Operational Path Count: 2
/dev/rds/c4t60003BA27D2120004204AC1A000F1D6Cd0s2
  Total Path Count: 2
  Operational Path Count: 2
```

### 2 Select a logical unit name from the output.

### 3 Run the `mpathadm show lu logical-unit-name` command.

```
# mpathadm show lu /dev/rds/c4t60003BA27D2120004204AC2B000DAB00d0s2
logical unit: /dev/rds/c4t60003BA27D2120004204AC2B000DAB00d0s2
  mpath-support libmpscsi_vhci.so
  Vendor: SUN
  Product: T4
  Revision: 0301
  Name Type: SCSI Inquiry VPD page 83 type 3
  Name: 60003ba27d2120004204ac2b000dab00
  Asymmetric: yes
  Current Load Balance: round-robin
  Logical Unit Group ID: NA
  Auto Failback: on
  Auto Probing: NA

  Paths:
    Initiator Port Name: 2000000173818713
    Target Port Name: 20030003ba27d212
    Override Path: NA
    Path State: OK
    Disabled: no

    Initiator Port Name: 2000000173018713
    Target Port Name: 20030003ba27d095
    Override path: NA
    Path State: OK
    Disabled: no

  Target Port Groups:
    ID: 2
```

```
Explicit Failover: yes
Access State: standby
Target Ports:
  Name: 20030003ba27d212
  Relative ID: 0
```

```
ID: 5
Explicit Failover: yes
Access State: active
Target Ports:
  Name: 20030003ba27d095
  Relative ID: 0
```

**4 Run the `mpathadm failover lu` *logical-unit-name* command.**

```
# mpathadm failover lu /dev/rdisk/c4t60003BA27D2120004204AC2B000DAB00d0s2
```

If this operation is successful, the access state of the devices' target port groups changes as a result of the logical unit failover.

**5 Run the `mpathadm show lu` *logical-unit-name* command to verify the access state change.**

```
# mpathadm show lu /dev/rdisk/c4t60003BA27D2120004204AC2B000DAB00d0s2
```

```
logical unit: /dev/rdisk/c4t60003BA27D2120004204AC2B000DAB00d0s2
```

```
  mpath-support libmpscsi_vhci.so
  Vendor: SUN
  Product: T4
  Revision: 0301
  Name Type: SCSI Inquiry VPD page 83 type 3
  Name: 60003ba27d2120004204ac2b000dab00
  Asymmetric: yes
  Current Load Balance: round-robin
  Logical Unit Group ID: NA
  Auto Failback: on
  Auto Probing: NA
```

Paths:

```
  Initiator Port Name: 2000000173818713
  Target Port Name: 20030003ba27d212
  Override Path: NA
  Path State: OK
  Disabled: no
```

```
  Initiator Port Name: 2000000173018713
  Target Port Name: 20030003ba27d095
  Override path: NA
  Path State: OK
  Disabled: no
```

Target Port Groups:

```
  ID: 2
  Explicit Failover: yes
  Access State: active
  Target Ports:
    Name: 20030003ba27d212
    Relative ID: 0
```

```
ID: 5
```

```

Explicit Failover: yes
Access State: standby
Target Ports:
    Name: 20030003ba27d095
Relative ID: 0

```

## ▼ To Enable a Path

If the path to a logical unit is disabled, the `enable` command changes the path back to enabled. The full path must be specified using the initiator port name, target port name, and the logical unit. To verify the change, run the `show` command for the logical unit.

### 1 Run the `mpathadm list lu` command.

```

# mpathadm list lu
/dev/rds/c4t60020F20000035AF4267CCCB0002CEE2d0s2
    Total Path Count: 2
    Operational Path Count: 2
/dev/rds/c4t60003BA27D2120004204AC2B000DAB00d0s2
    Total Path Count: 2
    Operational Path Count: 2
/dev/rds/c4t60003BA27D2120004204AC1A000F1D6Cd0s2
    Total Path Count: 2
    Operational Path Count: 2

```

### 2 Select a logical unit name from the output.

### 3 Run the `mpathadm show lu logical-unit-name` command.

```

# mpathadm show lu /dev/rds/c4t60003BA27D2120004204AC2B000DAB00d0s2
logical unit: /dev/rds/c4t60003BA27D2120004204AC2B000DAB00d0s2
    mpath-support libmpscsi_vhci.so
    Vendor: SUN
    Product: T4
    Revision: 0301
    Name Type: SCSI Inquiry VPD page 83 type 3
    Name: 60003ba27d2120004204ac2b000dab00
    Asymmetric: yes
    Current Load Balance: round-robin
    Logical Unit Group ID: NA
    Auto Failback: on
    Auto Probing: NA

    Paths:
        Initiator Port Name: 2000000173818713
        Target Port Name: 20030003ba27d212
        Override Path: NA
        Path State: OK
        Disabled: no

        Initiator Port Name: 2000000173018713
        Target Port Name: 20030003ba27d095
        Override path: NA

```

```
Path State: OK
Disabled: no

Target Port Groups:
  ID: 2
  Explicit Failover: yes
  Access State: standby
  Target Ports:
    Name: 20030003ba27d212
    Relative ID: 0

  ID: 5
  Explicit Failover: yes
  Access State: active
  Target Ports:
    Name: 20030003ba27d095
    Relative ID: 0
```

- 4 Select an initiator port and a target port name.
- 5 Run the `mpathadm enable path -i initiator-port-name -t target-port-name -l logical-unit-name` command.  

```
# mpathadm enable path -i 2000000173018713 -t 20030003ba27d095 \
-l /dev/rdisk/c4t60003BA27D2120004204AC2B000DAB00d0s2
```

## ▼ To Disable a Path

This operation makes the path unavailable for the logical unit, regardless of its operational state.

---

**Note** – The disabled state is not persistent across rebooting. If the path is operational before the next boot sequence, it is enabled by default. This operation is not allowed when the given path is the last operational path remaining.

---

- 1 Run the `mpathadm list lu` command.  

```
# mpathadm list lu
/dev/rdisk/c4t60020F20000035AF4267CCCB0002CEE2d0s2
  Total Path Count: 2
  Operational Path Count: 2
/dev/rdisk/c4t60003BA27D2120004204AC2B000DAB00d0s2
  Total Path Count: 2
  Operational Path Count: 2
/dev/rdisk/c4t60003BA27D2120004204AC1A000F1D6Cd0s2
  Total Path Count: 2
  Operational Path Count: 2
```

- 2 Select a logical unit name from the output.

### 3 Run the `mpathadm show lu logical-unit-name` command.

```
# mpathadm show lu /dev/rdisk/c4t60003BA27D2120004204AC2B000DAB00d0s2
logical unit: /dev/rdisk/c4t60003BA27D2120004204AC2B000DAB00d0s2
  mpath-support libmpscsi_vhci.so
  Vendor: SUN
  Product: T4
  Revision: 0301
  Name Type: SCSI Inquiry VPD page 83 type 3
  Name: 60003ba27d2120004204ac2b000dab00
  Asymmetric: yes
  Current Load Balance: round-robin
  Logical Unit Group ID: NA
  Auto Failback: on
  Auto Probing: NA

  Paths:
    Initiator Port Name: 2000000173818713
    Target Port Name: 20030003ba27d212
    Override Path: NA
    Path State: OK
    Disabled: no

    Initiator Port Name: 2000000173018713
    Target Port Name: 20030003ba27d095
    Override path: NA
    Path State: OK
    Disabled: no

  Target Port Groups:
    ID: 2
    Explicit Failover: yes
    Access State: standby
    Target Ports:
      Name: 20030003ba27d212
      Relative ID: 0

    ID: 5
    Explicit Failover: yes
    Access State: active
    Target Ports:
      Name: 20030003ba27d095
      Relative ID: 0
```

### 4 Select an initiator port and a target port name.

### 5 Run the `mpathadm disable path -i initiator-port-name -t target-port-name -l logical-unit-name` command.

```
# mpathadm disable path -i 2000000173018713 -t 20030003ba27d095
-l /dev/rdisk/c4t60003BA27D2120004204AC2B000DAB00d0s2
```



# Configuring Multipathing Software

---

This chapter explains how to configure the Sun StorageTek Traffic Manager software that is provided in the Solaris 10 OS for Fibre Channel (FC) devices. It also provides the considerations while enabling or disabling the multipathing feature on SPARC based systems, x86 based systems, per-port basis and third-party storage devices.

The following topics are discussed:

- [“Configuring Multipathing” on page 39](#)
- [“Multipathing Considerations” on page 40](#)
- [“Enabling and Disabling Multipathing” on page 40](#)
- [“Enabling or Disabling Multipathing on a Per-Port Basis” on page 43](#)
- [“Configuring Third-Party Storage Devices” on page 45](#)
- [“Configuring Automatic Failback” on page 48](#)

## Configuring Multipathing

The multipathing feature for FC devices can be configured to control all Sun supported FC HBAs. Multipathing is disabled by default for FC devices on SPARC based systems, but is enabled by default on x86 based systems. Configuration of the multipathing software depends on how you intend to use your system.

---

**Note** – The multipathing feature is not available for parallel SCSI devices but is available for FC disk devices. Multipathing is not supported on tape drives or libraries, or on IP over FC.

---

Before you configure third-party devices for multipathing, be aware of the following:

## Multipathing Considerations

Before you change multipathing configuration note the following considerations. Then follow the instructions for your machine architecture (SPARC or x86) described in the subsequent sections. Some devices need to be properly configured to work with the multipathing software. Refer to your storage array documentation for details on the device specific configuration for your device.

- Device Specific Considerations
- Device Name Change Considerations

In the `/dev` and `/devices` trees, multipath-enabled devices receive new names that indicate that they are under multipath control. A device therefore will have a different name from its original name when it is under multipath control.

Device name with multipath disabled:

```
/dev/dsk/c1t1d0s0
```

Device name with multipath enabled:

```
/dev/dsk/c0t60003BA27D5170003E5D2A7A0007F3D2d0s0
```

Therefore, applications that use device names directly must be configured to use the new names whenever you change multipath configuration from disabled to enabled or vice-versa.

The system's `/etc/vfstab` file and the dump configuration also contain references to device names. On both SPARC and x86/x64-based systems the `stmsboot (1m)` command described in the following sections automatically updates the `/etc/vfstab` file dump configuration with the new device names. If you have application-dependent file systems which are not listed in the file `/etc/vfstab`, you can use the `stmsboot` command to determine the mapping between the old and new device paths.



**Caution** – if you have run `devfsadm -C` or performed a reconfiguration reboot then the old device paths will not exist and the `stmsboot -L` command will fail to provide this information.

---

## Enabling and Disabling Multipathing

With the release of the Solaris 10 Update 4 OS, the `stmsboot (1m)` command is now available for use on SPARC, x86, and x64 based systems to enable or disable multipathing for Fibre Channel (FC) and SAS devices. The `stmsboot` command updates the `/etc/vfstab` file and dump configuration to reflect device name changes during the next reboot. You do not need to manually edit the `/kernel/drv/fp.conf` or `/kernel/drv/mpt.conf` files.



The following considerations apply to the `stmsboot -e`, `-d`, and `-u` options:

- You should reboot immediately after running the `stmsboot` command.
- Ensure that `eeeprom(1m)` boot device is set to boot from your current boot device. This is required since the `stmsboot` command reboots the machine to complete the operation.
- The `stmsboot` command saves a copy of your original `/kernel/drv/fp.conf`, `/kernel/drv/mpt.conf` and `/etc/vfstab` files before modifying them. See [Appendix C, “Multipathing Troubleshooting,”](#) if you encounter unexpected problems while using `stmsboot`.

---

**Note** – The behavior of the `stmsboot` command in the Solaris 10 OS differs from the `stmsboot` command provided by Sun StorEdge SAN Foundation software in the Solaris 8 and Solaris 9 OS. In the Solaris 8 and Solaris 9 OS, the `stmsboot` command is used to enable or disable multipathing on the boot device only for SPARC based hosts only. In the Solaris 10 OS, the command is used to enable or disable multipathing on all capable devices.

The `stmsboot` command is available on both SPARC and x86/x64-based systems from the Solaris 10 Update 4 OS onwards. In the Solaris 10 Update 5 OS the `stmsboot` command is used to enable, disable or update multipathing for Serial-Attached SCSI devices as well as FC devices.

---

## ▼ To Enable Multipathing

Perform the following steps to enable multipathing on all multipath-capable devices on SPARC or x86/x64 based systems. If you want to enable multipathing only on specific FC or SAS HBA ports, refer to [“Enabling or Disabling Multipathing on a Per-Port Basis”](#) on page 43.

The multipathing software automatically recognizes Sun supported devices. If you want to enable multipathing on third-party devices, add entries to the `/kernel/drv/scsi_vhci.conf` file as described by *Device Name Change Considerations* in [“Multipathing Considerations”](#) on page 40.

### 1 Run the `stmsboot -e` command:

```
# stmsboot -e
```

WARNING: `stmsboot` operates on each supported multipath-capable controller detected in a host. In your system, these controllers are

```
/devices/pci@780/pci@0/pci@8/SUNW,qlc@0/fp@0,0
/devices/pci@780/pci@0/pci@8/SUNW,qlc@0,1/fp@0,0
/devices/pci@7c0/pci@0/pci@1/pci@0,2/LSILogic,sas@1
/devices/pci@7c0/pci@0/pci@1/pci@0,2/LSILogic,sas@1
/devices/pci@7c0/pci@0/pci@1/pci@0,2/LSILogic,sas@2
/devices/pci@7c0/pci@0/pci@9/LSILogic,sas@0
/devices/pci@7c0/pci@0/pci@9/LSILogic,sas@0
```

If you do NOT wish to operate on these controllers, please quit `stmsboot` and re-invoke with `-D { fp | mpt }` to specify which controllers you wish

to modify your multipathing configuration for.

```
Do you wish to continue? [y/n] (default: y) y
Checking mpzio status for driver fp
Checking mpzio status for driver mpt
WARNING: This operation will require a reboot.
Do you want to continue ? [y/n] (default: y) y
The changes will come into effect after rebooting the system.
Reboot the system now ? [y/n] (default: y) y
```

---

**Note** – During the reboot, `/etc/vfstab` and the dump configuration are updated to reflect the device name changes.

---

- 2 (Optional) After the reboot, if necessary, configure your applications to use new device names as described by *Device Name Change Considerations* in [“Multipathing Considerations” on page 40](#).

## ▼ To Disable Multipathing

Perform the following steps to disable multipathing on all multipath-capable devices on SPARC or x86/x64 based systems. If you want to disable multipathing only on specific FC or SAS HBA ports, refer to [“Enabling or Disabling Multipathing on a Per-Port Basis” on page 43](#).

- 1 Run the `stmsboot -d` command.

```
# stmsboot -d
```

WARNING: stmsboot operates on each supported multipath-capable controller detected in a host. In your system, these controllers are

```
/devices/pci@780/pci@0/pci@8/SUNW,qlc@0/fp@0,0
/devices/pci@780/pci@0/pci@8/SUNW,qlc@0,1/fp@0,0
/devices/pci@7c0/pci@0/pci@1/pci@0,2/LSILogic,sas@1
/devices/pci@7c0/pci@0/pci@1/pci@0,2/LSILogic,sas@1
/devices/pci@7c0/pci@0/pci@1/pci@0,2/LSILogic,sas@2
/devices/pci@7c0/pci@0/pci@9/LSILogic,sas@0
/devices/pci@7c0/pci@0/pci@9/LSILogic,sas@0
```

If you do NOT wish to operate on these controllers, please quit `stmsboot` and re-invoke with `-D { fp | mpt }` to specify which controllers you wish to modify your multipathing configuration for.

```
Do you wish to continue? [y/n] (default: y) y
Checking mpzio status for driver fp
Checking mpzio status for driver mpt
WARNING: This operation will require a reboot.
Do you want to continue ? [y/n] (default: y) y
The changes will come into effect after rebooting the system.
Reboot the system now ? [y/n] (default: y) y
```

---

**Note** – During the reboot, `/etc/vfstab` and the dump configuration are updated to reflect the device name changes.

---

- 2 (Optional) After the reboot, if necessary, configure your applications to use new device names as described by *Device Name Change Considerations* in [“Multipathing Considerations” on page 40](#).

## Enabling or Disabling Multipathing on a Per-Port Basis

Multipathing can be enabled or disabled on specific Fibre Channel Host Bus Adapter (HBA) controller ports. If you enable multipathing on a specific HBA port controller port, all supported devices connected to that controller port will be enabled for multipath operation.

The following procedure applies to both SPARC and x86 based machines.

### Port Configuration Considerations

Before you start configuring the software by port, consider the following:

- FC global and per-port multipath settings are specified in the file `/kernel/drv/fp.conf`. Per-port multipath settings have priority over the global setting. This means that if global multipathing is enabled by a specific port has been disabled for multipathing, the port will not be available in the multipathing configuration. Conversely, even if global multipathing has been disabled, specific ports may be enabled for multipathing if they are listed in the appropriate `driver.conf(4)` file.
- Load balancing is controlled by the global `load-balance` property in `/kernel/drv/scsi_vhci.conf` file and is not controlled on a per-port basis.
- If a device has more than one path to the host, all paths to the device must be configured with multipathing enabled or disabled.
- Configuring multipathing by port enables the multipathing software to coexist with other multipathing solutions like Symantec (VERITAS) Dynamic Multipathing (DMP), or EMC PowerPath. However, devices and paths should not be shared between the multipathing software and other multipathing solutions.

### ▼ To Configure Multipathing by Port

Depending on how many ports you want the multipathing software to control, you can enable or disable multipathing globally or for specified ports.

- 1 Log in as root (`su - root`).

## 2 Determine the HBA controller ports that you want the multipathing software to control.

For example, to select the desired device, perform an `ls -l` command on `/dev/cfg` directory. The following example shows the `ls -l` command output.

```
lrwxrwxrwx 1 root root 50 Jan 29 21:33 c0 ->
    ../../devices/pci@7c0/pci@0/pci@1/pci@0/ide@8:scsi
lrwxrwxrwx 1 root root 61 Jan 29 21:33 c1 ->
    ../../devices/pci@7c0/pci@0/pci@1/pci@0,2/LSILogic,sas@1:scsi
lrwxrwxrwx 1 root root 61 Jan 29 21:33 c2 ->
    ../../devices/pci@7c0/pci@0/pci@1/pci@0,2/LSILogic,sas@2:scsi
lrwxrwxrwx 1 root root 53 Jan 29 21:33 c3 ->
    ../../devices/pci@7c0/pci@0/pci@9/LSILogic,sas@0:scsi
lrwxrwxrwx 1 root root 54 Apr 16 20:28 c5 ->
    ../../devices/pci@780/pci@0/pci@8/SUNW,qlc@0/fp@0,0:fc
lrwxrwxrwx 1 root root 56 Apr 16 20:28 c6 ->
    ../../devices/pci@780/pci@0/pci@8/SUNW,qlc@0,1/fp@0,0:fc
```

---

**Note** – Controllers c5 and c6 are ports A and B on a dual-port FC HBA. Controllers c1 and c3 are single port SAS HBA ports. Controller c2 is the internal SAS controller in a Sun Fire T2000 server.

---

Once you have determined the port, or ports, you want to explicitly enable or disable multipathing for, go to the next step.

## 3 Enable or disable specific ports as follows:

### ■ FC HBA ports

#### a. Edit file `/kernel/drv/fp.conf`

#### b. Add the following line for each FC HBA port that is to be enabled:

```
name="fp" parent="parent name" port=port-number mpzio-disable="no";
```

where *parent name* is the port device name, and *port-number* is the FC HBA port number.

For example, the following entries disable multipathing on all FC HBA controller ports except for the two specified ports:

```
mpzio-disable="yes";
name="fp" parent="/pci@6,2000/SUNW,qlc@2" port=0 mpzio-disable="no";
name="fp" parent="/pci@13,2000/pci@2/SUNW,qlc@5" port=0 mpzio-disable="no";
```

#### c. Add the following line for each FC HBA port that is to be disabled:

```
name="fp" parent="parent name" port=port-number mpzio-disable="yes";
```

For example:

```
name="fp" parent="/pci@6,2000/SUNW,qlc@2" port=0 mpzio-disable="yes";
```

**4 Type `stmsboot -u` to start the reboot and configuration process.**

You are prompted to reboot. During the reboot, the `/etc/vfstab` file and your dump device configuration are updated to reflect any device name changes.

**5 (Optional) After the reboot, if necessary, configure your applications to use new device names as described in “[Multipathing Considerations](#)” on page 40.**

## Configuring Third-Party Storage Devices

---

**Note** – Before configuring any third-party device, ensure that they are supported. Refer to your third-party user documentation, or third-party vendor for information on proper vendor and product IDs, modes and various settings required for the device to work with multipathing software.

---

### Third-Party Device Configuration Considerations

Before you configure third-party devices for multipathing, be aware of the following:

- The device must support the `REPORT_LUNS` SCSI command, and SCSI-3 `INQUIRY` command VPD Device Identification Page (0x83).
- You will need the vendor ID (VID) and product ID (PID) of the device. You can obtain them by using the `format` command followed by the `inquiry` option on your system. See the `format(1M)` man page.

When multipathing is enabled, the multipath access still depends on a device specific `scsi_vhci` failover implementation accepting the device. The default way this occurs, automatically, is for the `scsi_vhci` code to call a *probe* function in each failover implementation, looking for the first *probe* result that indicates the device is supported.

A *probe* implementation determines support based on some combination of `scsi_inquiry(9S)` data. A device with `INQUIRY` data indicating T10 Target-Port-Group-Support (TPGS) compliance will use the standards-based TPGS failover implementation. For noncompliant devices, a failover implementation's probe will typically determine support based on VID/PID match against a private compiled-in table.

To override the *probe* process, the `scsi_vhci.conf` file supports a `scsi_vhci-failover-override` property. The value of `scsi_vhci-failover-override` can be used to establish support for a device not currently accepted by *probe*, override *probe* support, or disable multipath support for a device.

## Configuring Third-Party Storage Devices: New Devices

Multipathing can be configured on third-party symmetric storage devices. A symmetric storage device is defined as a storage device in which all paths to the storage device are active and I/O commands can be issued through any path.

### ▼ To Configure New Third-Party Devices

Perform the following steps to configure third-party devices if your system already has multipathing enabled. If your system has multipathing disabled, you can configure third-party devices while enabling multipathing as described earlier in this chapter.

#### 1 Add the vendor ID and product ID entries to the `/kernel/drv/scsi_vhci.conf` file.

The vendor ID and product ID are the vendor and product identification strings that the device returns in SCSI INQUIRY data. The vendor ID must be eight characters long. You must specify all eight characters even if the trailing characters are spaces.

The product ID can be up to 16 characters long.

```
device-type-scsi-options-list =
"VendorID1ProductID1", "enable-option",
"VendorID2ProductID2", "enable-option",
...
"VendorIDnProductIDn", "enable-option";
enable-option = 0x1000000;
```

Note that the entries are separated by the `,` character and the last vendor/product entry is terminated by the `;` character.

For example, to add a device from a “ACME” vendor with a product ID of “MSU”, and to add a device from vendor “XYZ” vendor with a product ID of “ABC”, you would add the following lines to file `/kernel/drv/scsi_vhci.conf`:

To add a device from a “XYZ” vendor with a product ID of “ABC”, you would add:

```
device-type-scsi-options-list =
"ACME    MSU", "enable-option",
"XYZ     ABC", "enable-option";
enable-option = 0x1000000;
```

#### 2 Save and exit the `scsi_vhci.conf` file.

#### 3 Type `stmsboot -u` to start the reboot and configuration process.

You are prompted to reboot. During the reboot, the `/etc/vfstab` file and the dump configuration are updated to reflect the device name changes.

#### 4 If necessary, perform device name updates as described in [“Enabling and Disabling Multipathing” on page 40](#).

# Configuring Third-Party Storage Devices: Disabling Devices

Multipathing can be disabled for all devices of a certain Vendor ID/Product ID combination from Inquiry data. This exclusion is specified in the `scsi_vhci.conf` file.

## ▼ To Disable Third-Party Devices

### 1 Add the vendor ID and product ID entries to the `/kernel/drv/scsi_vhci.conf` file.

The vendor ID and product ID are the vendor and product identification strings that the device returns in SCSI INQUIRY data. The vendor ID must be eight characters long. You must specify all eight characters even if the trailing characters are spaces. The product ID can be up to 16 characters long.

```
device-type-scsi-options-list =
"VendorID1ProductID1", "disable-option",
"VendorID2ProductID2", "disable-option",
...
"VendorIDnProductIDn", "disable-option";
disable-option = 0x7000000;
```

The entries in the preceding example are separated by the `,` character and the last vendor/product entry is terminated by the `;` character. For example, to add a device from vendor “ACME” with a product ID of “MSU,” and a vendor device from vendor “XYZ” with product ID “ABC,” you would add the following lines to the file `/kernel/drv/scsi_vhci.conf`:

```
device-type-scsi-options-list =
"ACME    MSU", "disable-option",
"XYZ     ABC", "disable-option";
disable-option = 0x7000000;
```

### 2 Save and exit the `scsi_vhci.conf` file.

### 3 Type `stmsboot -u` to start the reboot and configuration process.

You are prompted to reboot. During the reboot, the `/etc/vfstab` file and the dump configuration are updated to reflect the device name changes.

### 4 If necessary, perform the device name updates as described in [“Enabling and Disabling Multipathing” on page 40](#).

## Displaying Device Name Changes

The `stmsboot(1M)` command, available on Solaris OS 10 Update 5 SPARC, x86 and x64 platforms, can be used to display the mapping between non-multipathed and multipathed

device names, after the changes made to the multipath configuration by invoking `stmsboot` with the `-e`, `-d`, or `-u` option. Both the non-multipathed and the multipathed device names must exist in order to show the mapping.

The `-L` option displays the mapping of devices on all controllers.

```
# stmsboot -L
non-STMS device name          STMS device name
-----
/dev/rdisk/c2t8d0             /dev/rdisk/c10t500000E01046DEE0d0
/dev/rdisk/c2t0d0             /dev/rdisk/c10t500000E01046B070d0
/dev/rdisk/c2t3d0             /dev/rdisk/c10t20000020372A40AFd0
/dev/rdisk/c2t12d0            /dev/rdisk/c10t500000E01046DEF0d0
/dev/rdisk/c2t11d0            /dev/rdisk/c10t500000E01046E390d0
/dev/rdisk/c3t8d0             /dev/rdisk/c10t500000E01046DEE0d0
/dev/rdisk/c3t0d0             /dev/rdisk/c10t500000E01046B070d0
/dev/rdisk/c3t3d0             /dev/rdisk/c10t20000020372A40AFd0
/dev/rdisk/c3t12d0            /dev/rdisk/c10t500000E01046DEF0d0
/dev/rdisk/c3t11d0            /dev/rdisk/c10t500000E01046E390d0
```

The `-l` option displays the mapping of devices on only the specified controller. The following example displays the mapping of controller 3.

```
# stmsboot -l3
non-STMS device name          STMS device name
-----
/dev/rdisk/c3t8d0             /dev/rdisk/c10t500000E01046DEE0d0
/dev/rdisk/c3t0d0             /dev/rdisk/c10t500000E01046B070d0
/dev/rdisk/c3t3d0             /dev/rdisk/c10t20000020372A40AFd0
/dev/rdisk/c3t12d0            /dev/rdisk/c10t500000E01046DEF0d0
/dev/rdisk/c3t11d0            /dev/rdisk/c10t500000E01046E390d0
```

## Configuring Automatic Failback

Some storage devices have controllers configured as PRIMARY and SECONDARY as part of the array configuration. The secondary paths may operate at a lower performance level than the primary paths. The multipathing software uses the primary path to talk to the storage device and keeps the secondary path on standby. In the event of a primary path failure, the multipathing software automatically directs all I/O traffic over the secondary path, with the primary path taken offline. This process is called a “failover” operation. When the failure associated with the primary path has been repaired, the multipathing software automatically directs all I/O traffic over the primary path and keeps the secondary path standby as before. This process is called a “failback” operation.

You can disable the automatic failback operation so the multipathing software does not automatically failback to the primary path. Later, after the failure associated with the primary path has been repaired, you can do a manual failback operation using the `luxadm(1M)` command.



## ▼ To Configure Automatic Failback

**1** Open the `/kernel/drv/scsi_vhci.conf` file in a text editor.

**2** To disable automatic failback capability, change the `auto-failback` entry to:

```
auto-failback="disable";
```

To enable automatic failback capability (if you disabled it before), change the `auto-failback` entry to:

```
auto-failback="enable";
```

**3** Save and exit the file.

**4** Reboot the system.

```
# shutdown -g0 -y -i6
```



## Configuring SAN Devices

---

This chapter provides the high level overview of the steps used to configure SAN devices. In the Solaris 10 OS, FCAL, fabric, and point-to-point connected devices are made available to the host automatically. This feature differs from previous versions of the SAN Foundation software running on the Solaris 8 or the Solaris 9 OS. In those versions, manual configuration steps were required to achieve fabric-connected device availability on the host. To find out how to manually configure fabric-connected devices, refer to [Appendix A, “Manual Configuration for Fabric-Connected Devices.”](#)

The following topics are discussed:

- “SAN Device Considerations” on page 51
- “Adding SAN Devices” on page 52
- “Configuring Fabric Boot Devices on SPARC” on page 53

### SAN Device Considerations

Be aware of the following considerations before configuring the Sun StorageTek Traffic Manager software.

- Configure ports and zones according to the vendor-specific documentation for storage and switches.
- With the Solaris 10 OS you no longer have to manually configure devices unless you enable manual device configuration.
- LUN masking enables specific LUNs to be seen by specific hosts. See your vendor-specific storage documentation that describes masking.
- Turn off power management on servers connected to the SAN to prevent unexpected results as one server attempts to power down a device while another attempts to gain access. See `power.conf(1M)` man page for details about power management.

- Connect arrays and other storage devices to the SAN with or without multipathing capability. The Sun StorageTek Traffic Manager software is an associated application that is bundled with the product name.
- The STMS Boot utility is included with the Sun StorageTek Traffic Manager software that manages the enable and disable process needed for SAN booting. Issuing the `stmsboot` command allows the automatic update of `/etc/vfstab` and the dump configuration to reflect device name changes when enabling or disabling the Sun StorageTek Traffic Manager software. Note that the software is disabled by default with SPARC devices and enabled by default with x86 devices.

## Adding SAN Devices

Adding and removing SAN devices requires knowledge of the following commands:

- `luxadm(1M)`
- `format(1M)`
- `fsck(1M)`
- `newfs(1M)`
- `cfgadm(1M)` and `cfgadm_fp(1M)`

---

**Note** – If you use the `format` command when the Sun StorageTek Traffic Manager software multipathing feature is enabled, you will see only one instance of a device identifier for each LUN. Without the Sun StorageTek Traffic Manager software enabled, you will see one identifier for each path.

---

The `cfgadm` and `cfgadm_fp` commands are used most frequently to configure storage devices on a SAN. Refer to the appropriate man page for detailed instructions about how to use each command.

### ▼ To Add a SAN Device

- 1 Create the LUNs desired on the SAN device.
- 2 If necessary, apply LUN masking for HBA control on the SAN device.
- 3 Connect the storage device to the system.
- 4 If necessary, create port-based or WWN zones on the switch on the SAN device.
- 5 Run the `fsck` or `newfs` commands on the device, if used for file systems.

---

**6 Mount any existing file systems available on the storage device's LUNs or disk groups.**

---

**Note** – You might need to run the `fsck` command to repair any errors in the LUNs listed in the `/etc/vfstab` file.

---

## Configuring Fabric Boot Devices on SPARC

The Sun StorageTek Traffic Manager software allows a Solaris 10 OS SPARC server to be booted from a fabric disk device.

### Boot Considerations

Fabric boot devices can be added through the Solaris 10 OS interactive installation GUI or text installer just as internal boot devices have been added in the previous Solaris OS releases. Refer to the Solaris 10 OS installation guide for details. You should consider the following points while enabling a fabric boot device.

- Minimize interference to boot devices through the following actions:
  - Ensuring the boot device is not an overly subscribed target or LUN
  - Avoiding installation of applications and software on target or LUN
  - Reducing physical distance between host and fabric device, as well as the number of hops
- Remove the boot disk from volume manager control prior to beginning the fabric boot procedure.
- Ensure that the latest HBA Fcode and drivers are loaded for the install HBAs on the system.
- If multipathing is desired on the boot device, use the `stmsboot` command as described in [Chapter 4, “Configuring Multipathing Software.”](#)



# Configuring SAS Domains

---

This chapter provides overviews of SAS Domain considerations, SAS device discovery, and SAS boot device configuration.

## SAS Multipathing Considerations

- SAS multipathing is supported with the Solaris 10 Update 5 OS release when using the bundled `mpt (7d)` driver.
- SAS expanders are not supported with the Solaris 10 Update 5 OS release.
- LUN masking is not supported with SAS-attached devices in the Solaris 10 Update 5 OS release.
- Turn off power management on hosts connected to the SAS Domain in order to prevent unexpected results as one server attempts to power down a device while another attempts to gain access. See `pmconfig (1m)` and `power . conf (4)` for details about power management.

## Dynamic Discovery of SAS Devices

Adding and removing SAS devices is performed dynamically when using the `mpt (7d)` driver. You are no longer required to edit the `sd . conf` file to enable your system to detect specific targets and LUNs attached with the `mpt` driver. See `mpt (7d)` for more information.

You are no longer required to edit the `sd . conf` file to enable your system to detect specific targets and LUNs attached with the `mpt` driver.

If you add or remove a device in your SAS domain, messages will be written to the `/var/adm/messages` file indicating presence or removal. If a device has been added, it is visible to and available by the `format (1m)` command.

## Configuring SAS Boot Devices

The Solaris Multipathed IO software allows Solaris 10 Update 5 OS hosts to boot from a multipathed SAS device, or from a SATA device connected to a SAS controller. Only the bundled mpt driver is supported for SAS multipathing in the Solaris 10 Update 5 OS release.

Some SAS and SATA devices might not support multipathing but will still function as non-multipathed devices. See <http://sunsolve.sun.com> for more information.



# Configuring IPFC SAN Devices

Configuring Internet Protocol over Fibre Channel (IPFC) on the host system describes host recognition of IPFC devices and implementation of IP over FC in a SAN. The IPFC driver is based on RFC 2625 and allows IP traffic to run over FC.

This chapter contains the following topics:

- “IPFC Considerations” on page 57
- “Invoking and Configuring IPFC” on page 60

## IPFC Considerations

The following table shows the supported features available for IPFC.

TABLE 7-1 IPFC (NFS/NAS and SNDR)

Feature	Supported
Cascading	Yes, with fabric zones only
Zone type	Fabric zone with the HBA configured as an F-port point-to-point connection
Maximum number of device ports per zone	253

The following restrictions apply:

- IPFC is not supported on 1 Gbit Sun switches.
- Promiscuous mode is not supported. The snoop(1M) utility cannot be used.
- Multicasting is supported through broadcasting only.
- Network cards using IPFC cannot be used as routers. The /etc/notrouter file must be present on the host.

- Any standard network commands can be used after IPFC is attached. These commands (telnet, ping, or ftp) are used in this environment in the same way as in an Ethernet setup.

## Determining Fibre Channel Adapter Port Instances

This section explains how to configure the desired host system for IPFC. It includes the procedures to determine the port instance and to plumb an IPFC instance.

### ▼ To Determine Port Instances

#### 1 Determine the HBA PCI adapter slot and the I/O board PCI slot.

You need this information to perform the calculation in “[Determining Fibre Channel Adapter Port Instances](#)” on page 58.

For example, assume you have an array with an HBA card located in PCI adapter slot 5, and the PCI adapter is in slot 1 of the I/O board.

#### 2 Determine the instance number.

##### a. Search for the fp driver binding name in the /etc/path\_to\_inst file.

---

**Note** – Determine the correct entry by finding the hardware path described in your server hardware manual or Sun System Handbook. The Sun System Handbook is available at [http://sunsolve.sun.com/handbook\\_pub/](http://sunsolve.sun.com/handbook_pub/).

---

##### b. Narrow the search by using the I/O board and slot information from Step 1.

---

**Note** – The following method of deriving the Solaris 10 OS device path of an HBA from its physical location in server might not work for all Sun server hardware.

---

##### i. Multiply the PCI adapter slot number by the number of adapter ports.

For example, if the HBA has two ports, multiply by 2. Using the array with an HBA in the PCI adapter slot 5, multiply 5 by 2 to get 10.

##### ii. Add the PCI adapter I/O board slot number to the number derived in Step i.

Using an HBA in PCI adapter slot 5 and PCI slot 1 of the I/O board, add 1 to 10 for a sum of 11.

##### iii. Convert the number derived in Step ii to hexadecimal.

The number 11 converts to “b” in hexadecimal.

**iv. Search for the fp entry with pci@hex where hex is the number you derived in Step iii.**

The following table shows the elements of the device path for a PCI single FC network adapter device that has the following path:

```
"/pci@b,2000/SUNW,qlc@2/fp@0,0" 7 "fp"
```

Entry Item	Entry Value
Physical Name	/pci@b,2000/SUNW,qlc@2/fp@0,0
Instance Number	7
Driver Binding Name	fp

**c. Manually plumb each FP instance.**

Use the `ifconfig interface-number plumb` command. In this example, the value of *interface-number* is `fcip7`.

```
# ifconfig fcip7 plumb
```

When the command is successful, a message appears on both the console and in the messages file. For example:

```
Sep 13 15:52:30 bytownite ip: ip: joining multicasts failed (7) on fcip0 -
will use link layer brocasts for multicast
```

## ▼ To Plumb an IPFC Instance

Each FP instance on the system has an entry in `/dev/fc`. If HBAs have been removed, some stale links might exist. Use this procedure to load and plumb IPFC.

- 1 For each entry in `/dev/fc`, issue a `luxadm -e dump_map` command to view all the devices that are visible through that HBA port:**

```
# luxadm -e dump_map /dev/fc/fp0
Pos  Port_ID Hard_Addr Port_WWN      Node_WWN      Type
0    610100 0          210000e08b049f53 200000e08b049f53 0x1f (Unknown Type)
1    620d02 0          210000e08b02c32a 200000e08b02c32a 0x1f (Unknown Type)
2    620f00 0          210000e08b03eb4b 200000e08b03eb4b 0x1f (Unknown Type)
3    620e00 0          210100e08b220713 200100e08b220713 0x1f (Unknown Type,Host Bus Adapter)
# luxadm -e dump_map /dev/fc/fp1
No FC devices found. - /dev/fc/fp1
```

- 2 Based on the list of devices, determine which destination HBAs are visible to the remote host with which you want to establish IPFC communications.**

In the example for this procedure, the destination HBAs have port IDs `610100` and `620d02`. The originating HBA's port ID is `620e00`.

- 3 List the physical path of the originating HBA port from which you can see the destination HBA port, where *originating-hba-link* is a variable for the link determined in Step 2.

```
# ls -l /dev/fc/fp originating-hba-link
```

In the following example, 0 is the number for the *originating-hba-link*:

```
# ls -l /dev/fc/fp 0
lrwxrwxrwx 1 root root 51 Sep 4 08:23 /dev/fc/fp0 ->
../../../../devices/pci@8,600000/SUNW,qlc@1/fp@0,0:devctl
```

- 4 Search the physical path identified in Step 3.

You must remove the leading `../../../../devices` from the path name output. For example

```
# grep pci@8,600000/SUNW,qlc@1/fp@0,0 /etc/path_to_inst
"/pci@8,600000/SUNW,qlc@1/fp@0,0" 0 "fp"
```

- 5 Determine the fp instance for the originating HBA port from the output of the command in Step 4.

The instance number precedes “fp” in the output. In the following example output, the instance number is 0.

```
"/pci@8,600000/SUNW,qlc@1/fp@0,0" 0 "fp"
```

- 6 Use the instance number from Step 5 to load IPFC and plumb the IPFC interface.

In this example, the instance is 0.

```
# ifconfig fcip 0 plumb
```

## Invoking and Configuring IPFC

Immediately upon installation, start IPFC manually with the `ifconfig` command. You can configure the host so that on subsequent reboot, the IPFC network interface starts automatically. This section describes the procedures to start a network interface manually and to configure the host for automatic plumbing upon reboot.

### ▼ To Start a Network Interface Manually

Use this procedure when you want to plumb IPFC with specific netmask values and get the IPFC interface up and running.

- 1 Use the `ifconfig` command with the appropriate interface.

Ask your network administrator for an appropriate IP address and netmask information. For example, to enable an IPFC interface associated with fp instance 0 and an IP address of 192.9.201.10, type:

```
# touch /etc/notrouter
# ifconfig fcip0 inet 192.9.201.10 netmask 255.255.255.0 up
```

The `ifconfig` command is described in more detail in the `ifconfig(1M)` man page.

## 2 Use the command `ifconfig -a` to verify that the network is functioning.

The output of `ifconfig -a` should look like this:

```
lo0: flags=1000849<UP,LOOPBACK,RUNNING,MULTICAST,IPv4> mtu 8232 index 1
inet 127.0.0.1 netmask ffffffff
fcip0: flags=1001843<UP,BROADCAST,RUNNING,MULTICAST,MULTI BCAST,IPv4> mtu 1500 index 2
inet 192.9.201.10 netmask ffffffff broadcast 192.9.201.255 ether 0:e0:8b:1:3c:f7
hme0: flags=1000843<UP,BROADCAST,RUNNING,MULTICAST,IPv4> mtu 1500 index 3
inet 192.9.200.70 netmask ffffffff broadcast 192.9.200.255
ether 8:0:20:fc:e9:49
```

## ▼ To Configure the Host for Automatic Plumbing Upon Reboot

Each network interface must have an `/etc/hostname.interface` file defining the name of the IP address associated with it. For example, IPFC network interface `fcip0` has a file named `/etc/hostname.fcip0`.

- 1 **Manually create a `/etc/hostname.interface` file that contains a single line that identifies the host name or interface IP address.**
- 2 **Make any additional entries to the `/etc/inet/hosts` file.**

The Solaris 10 OS installation program creates the `/etc/inet/hosts` file with minimum entries. You must manually make additional entries with a text editor. See the `hosts(4)` man page for additional information.

The `/etc/inet/hosts` file contains the hosts database. This file contains the host names and the primary network interface IP addresses, as well as the IP addresses of other network interfaces attached to the system and of any other network interfaces that the machine must know about.

The following example shows an `etc/inet/host` file.

```
127.0.0.1      localhost    loghost
192.9.200.70   sun1         #This is the local host name
192.9.201.10   fcip0        #Interface to network 192.9.201.10
```

- 3 **Edit the `/etc/nsswitch.conf` file so that all uncommented entries have the word `files` before any other name service.**

The `/etc/nsswitch.conf` specifies which name service to use for a particular machine. The following code shows an example of an `/etc/nsswitch.conf` file.

```
hosts: files nis
```



# Solaris 10 10/08 x86/x64 Fibre Channel Operating System Booting Procedure

---

Starting with Solaris 10 10/08 release, x86/x64 Operating System (OS), Fibre Channel (FC) devices now appear in the disk selection portion of Solaris SunInstall. An interactive Solaris 10 10/08 installation is now required due to the potentially large number of devices that might appear in the disk selection portion of Solaris SunInstall.

This chapter describes how to manually install the Solaris 10 10/08 x86/x64 FC OS. This OS includes Sun StorageTek SAN Foundation software with the Sun 2-Gbit and 4-Gbit Fibre Channel (FC) HBA drivers, and the Sun StorageTek Traffic Manager software.

---

## Note –

Sun 1 Gb HBAs do *not* support booting over a SAN on x86 machines. Sun 4 Gb HBAs do support booting over a SAN on x86 machines. Most Sun 2 Gb HBAs do support booting over a SAN on x86 machines, except for the following:

- Sun StorageTek 2 Gb Enterprise Class Dual-Port Fibre HBA, SG-XPCI2FC-QF2-Z
  - Sun StorageTek 2 Gb PCI Dual-Port Fibre HBA, SG-XPCI2FC-QF2
  - Sun StorageTek 2 Gb FC PCI Single-Channel Network Adapter, X6767A
  - Sun StorageTek 2 Gb FC PCI Dual-Channel Network Adapter, X6768A
  - Sun StorageTek 2 Gb FC PCI-X Enterprise Single-Port HBA, SG-XPCI1FC-QL2
  - Sun StorageTek 2 Gb FC PCI Single-Port Host Adapter, SG-XPCI1FC-QF2
- 

The Solaris 10 10/08 x64/x86 OS can be installed from a CD-ROM, DVD-ROM, or network.

This chapter contains the following topics:

- [“Setup Requirements” on page 64](#)
- [“Installation Overview” on page 64](#)
- [“Installation Procedure” on page 65](#)
- [“Post-Installation Patches for the Sun Solaris 10 10/08 OS” on page 72](#)

## Setup Requirements

You must have the following items for installation.

- At least Solaris 10 10/08 release
- 10/100/1000 Mbit/sec Ethernet network for network-based OS installation
- One of the following for installation support
  - Jump-start server for a network-based OS installation
  - CD-ROM or DVD-ROM drive for a CD-ROM or DVD-ROM based OS installation

## Installation Overview

In order to successfully complete the installation, use an FC-based device during the disk selection portion of the installation. At the end of the interactive installation, you must select Manual Reboot.

After OS installation and before rebooting, gather the configuration information by issuing the `luxadm` command on the newly installed logical unit number (LUN). The `luxadm` command output provides a map from `c#t#d#` to the array WWN and LUN number. Record the HBA World Wide Name (WWN) and array WWN port information.

During rebooting, use the WWN and LUN number to set the HBA BIOS for each HBA to be used to boot from each LUN on the same array. Change the system BIOS to perform booting from CD-ROM or Network to disk.

---

**Note** – Console access is required for HBA and system BIOS changes.

---

In addition, note the following during the Sun Solaris OS installation.

- If using a custom disk layout, do not remove the overlap (`s2`) partition. The x86 boot installer has a dependency on this partition.
- By default, the Sun StorageTek Traffic Manager software manages the FC boot devices with multiple paths to a single boot device.



# Installation Procedure

## ▼ To Summarize the Procedure

- 1 Install the HBA hardware.

Follow the instructions in the appropriate Sun HBA installation guide found at <http://docs.sun.com/app/docs?q=StorageTek+Host+Bus+Adapter>.

- 2 Install the Sun Solaris OS as described in the next section, [“Installation Procedure” on page 65](#)

## ▼ To Perform a CD ROM, DVD ROM, or Network-Based OS Installation

After installing the HBA, perform the following steps for an interactive network-based installation of the Solaris 10 10/08 x86/x64 OS.

For more information, refer to *Solaris 10 Installation Guide: Basic Installations*, 817-0544 at <http://docs.sun.com/>.

- 1 If you are installing from a CD-ROM or DVD-ROM rather than over a network, insert the Sun Solaris Software into the CD-ROM or DVD-ROM drive.
- 2 Upon initial power up, provide the system BIOS and configure it to boot from either the network or CD-ROM (DVD-ROM) as applicable.

See [Figure 8–1](#) for an example of one of several BIOS setup screens.

---

**Note** – The system BIOS setup screens are different for each system BIOS vendor.

---

FIGURE 8-1 System BIOS for Selecting Disk, CD-ROM, or Network Boot Device Priority

PhoenixBIOS Setup Utility				
Main	Advanced	Security	Power	Boot
				Exit
CD-ROM Drive				Item Specific Help
+Hard Drive				Keys used to view or
Network Boot				configure devices:
MBA v7.0.3 Slot 0210				<Enter> expands or
MBA v7.0.3 Slot 0218				collapses devices with
				a + or -
				<Ctrl+Enter> expands
				all
				<Shift + 1> enables or
				disables a device.
				<+> and <-> moves the
				device up or down.
				<n> May move removable
				device between Hard
				Disk or Removable Disk
				<d> Remove a device
				that is not installed.
Help	Select Item	Change Values	Setup Defaults	
Exit	Select Menu	Select > Sub-Menu	Save and Exit	

- 3 Install the Sun Solaris OS using the Solaris Interactive Installation (SunInstall). See Figure 8-2 for an example of one of several SunInstall screens.

**FIGURE 8-2** Selecting an FC-based Boot Disk During Disk Selection

```

Select Disks

On this screen you must select the disks for installing Solaris software.
Start by looking at the Suggested Minimum field; this value is the
approximate space needed to install the software you've selected. Keep
selecting disks until the Total Selected value exceeds the Suggested Minimum
value.
NOTE: ** denotes current boot disk

Disk Device                                     Available Space
=====
^[ ]      c0t500060E8000000000000EBB100000189d0      1020 MB
x[ ]      c0t500060E8000000000000EBB10000018Ad0      1020 MB
x[ ]      c0t500060E8000000000000EBB10000018Bd0      1020 MB
x[ ]      c0t500060E8000000000000EBB10000018Cd0      1020 MB
x[X]      c0t600015D000020280000000000000001142d0    10208 MB (F4 to edit)
x[ ]      c0t600015D000020280000000000000001146d0    10208 MB
x[ ]      c0t600015D00002028000000000000000114Ad0    10208 MB
v[ ]      c0t600015D00002028000000000000000114Ed0    10208 MB

Total Selected: 10208 MB
Suggested Minimum: 3574 MB

F2 Continue  F3 Go Back  F4 Edit  F5 Exit  F6 Help

```

- 4 During installation, select a desired array and its associated LUN.
- 5 Select Manual Reboot at the end of the SunInstall utility screens and then verify your selections to start the Sun Solaris OS installation.
- 6 Before rebooting after the installation completes, issue the `luxadm display` command on the boot LUN.

See [Figure 8-3](#).

```

# luxadm display /dev/rdisk/c0t600015D000020280000000000000001142d0s2
DEVICE PROPERTIES for disk: /dev/rdisk/c0t600015D000020280000000000000001142d0s2
Vendor:      SUN
Product ID:   SE6920
Revision:     0202
Serial Num:   00500057
Unformatted capacity: 10240.000 MBytes
Read Cache:   Enabled
  Minimum prefetch: 0x0
  Maximum prefetch: 0xffff
Device Type:   Disk device
Path(s):

/dev/rdisk/c0t600015D000020280000000000000001142d0s2
/devices/scsi_vhci/disk@g600015d000020280000000000000001142:c,raw
Controller    /dev/cfg/c4
Device Address 213600015d207200,0
Host controller port WWN 210100e08b206812
Class          primary
State          ONLINE
Controller     /dev/cfg/c11
Device Address 213600015d207200,0

```

```

Host controller port WWN      210100e08b30a2f2
Class          primary
State          ONLINE

```

FIGURE 8-3 luxadm display Command and Output

```

QLogic Fast!UTIL
=====Selected Adapter=====
Adapter Type I/O Address Slot Bus Device Function
QLA2462      3400          02  03  01      1
=====
=====Adapter Settings=====
BIOS Address:                CF000
BIOS Revision:               1.05
Adapter Serial Number:      A04712
Interrupt Level:            5
Adapter Port Name:          210100E08B206812
Host Adapter BIOS:          Enabled
Frame Size:                 2048
Loop Reset Delay:           5
Adapter Hard Loop ID:       Disabled
Hard Loop ID:               0
Spinup Delay:               Disabled
Connection Options:         2
Fibre Channel Tape Support: Enabled
Data Rate:                  2
=====
Use <Arrow keys> and <Enter> to change settings, <Esc> to exit

```

The following luxadm command output from the example in the figure can be used to map the MPxIO based c#t#d# to the HBA WWN and array WWN:

- MPxIO c#t#d# = c0t600015d00020280000000000000001142d0
- Array WWN = 213600015d207200, LUN 0
- HBA WWNs = 210100e08b206812 and 210100e08b30a2f2

- 7 During the reboot process, watch the monitor so you can enter the HBA #1 BIOS screen and specify the boot device to be the FC LUN onto which you just installed the Sun Solaris OS.**


Follow this step for each HBA to be used for multipathing, and specify the boot device to be the FC LUN on which you installed the Sun Solaris OS. See [Figure 8-4](#) and [Figure 8-5](#).

  - **For the QLogic HBA BIOS, perform the following steps.**
    - a. During host rebooting, press Control-Q to display the HBA BIOS screen.
    - b. Select the HBA that you want to enable as the boot device and enable boot.
    - c. Configure the boot device:
      - i. Select Configuration Settings.
      - ii. Select Selectable Boot Settings.
      - iii. Make sure that Selectable Boot is set to enable.

In this menu, you can select the boot device/LUN by the array WWPN.
      - iv. Save and then exit the HBA BIOS screen.
  - **For the Emulex HBA BIOS, perform the following steps.**
    - a. During host rebooting, press Alt-E to display the HBA BIOS screen.
    - b. Select the HBA that you want to enable as the boot device and enable boot.
    - c. Select Configure Boot Devices.
    - d. Select a boot entry.
    - e. Select the WWPN of the desired boot device.
    - f. Type the LUN number.
    - g. Select the boot LUN.
    - h. Select Boot Device with the Array WWPN.
    - i. Save and exit the HBA BIOS screen.

FIGURE 8-4 HBA BIOS Screen for an HBA WWN

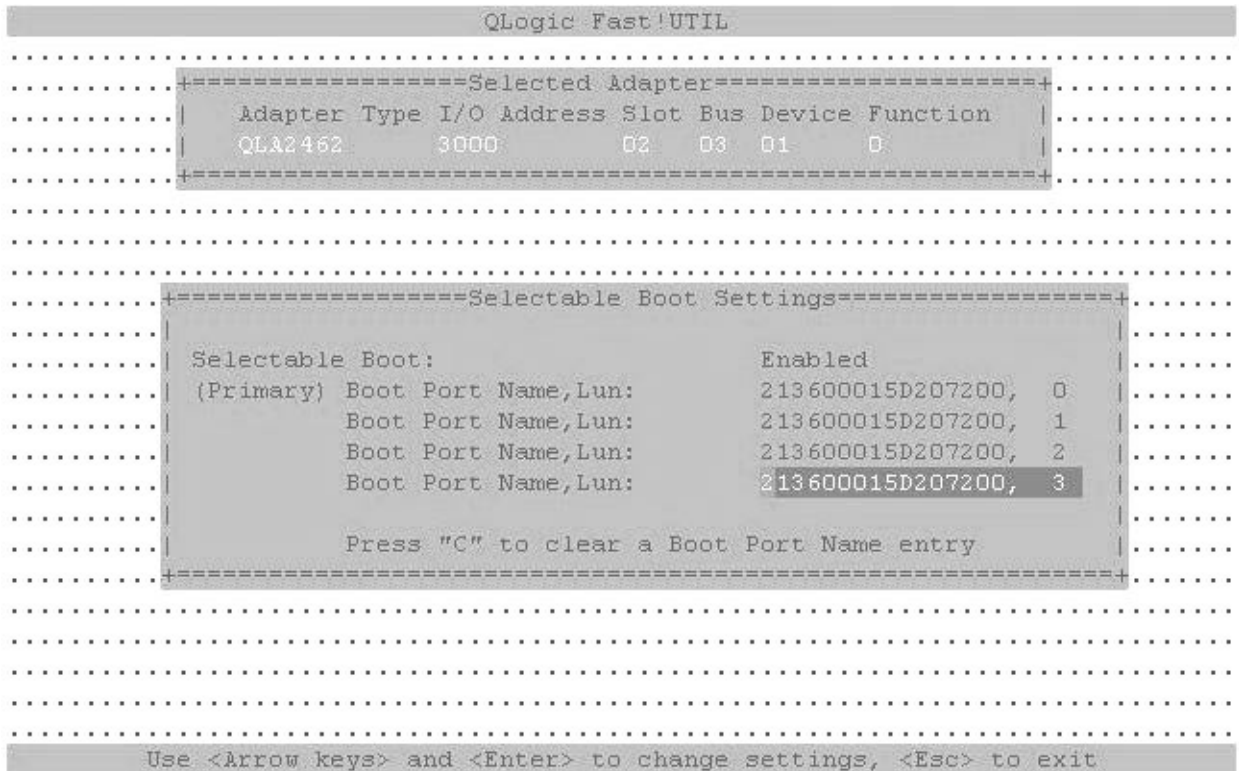

**FIGURE 8-5** HBA BIOS Screen for Enabling Boot From the FC LUN**Note –**

The figure shows the following modifications:

- Selectable boot = Enabled
- ARRAY WWN = 213600015d207200
- ARRAY LUN = 0
- HBA WWN = 210100e08b206812

- 8** Repeat the appropriate modifications for all HBAs and all LUNs.
- 9** Type the system BIOS per the vendor's access method and specify the boot device to be the FC LUN on which you installed the Solaris 10 10/08 OS. The following figure shows an example of one screen in a vendor's system BIOS.

FIGURE 8-6 Example System BIOS for Enabling Booting from an FC LUN

PhoenixBIOS Setup Utility					
Main	Advanced	Security	Power	Boot	Exit
-----					Item Specific Help
-Hard Drive					-----
HA 1 PortID 180F00 SE6920					Keys used to view or configure devices: <Enter> expands or collapses devices with a + or - <Ctrl+Enter> expands all <Shift + 1> enables or disables a device. <+> and <-> moves the device up or down. <n> May move removable device between Hard Disk or Removable Disk <d> Remove a device that is not installed.
HA 2 PortID 180F00 SE6920					
#220 ID00 LUN0 SEAGATE ST373307LC					
Bootable Add-in Cards					
CD-ROM Drive					
Network Boot					
MBA v7.0.3 Slot 0210					
MBA v7.0.3 Slot 0218					
-Removable Devices					
CD-ROM Drive 0210					
MBA v7.0.3 Slot 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					
Removable Disk 0218					

10 Reboot to the newly installed Solaris 10 10/08 OS using the FC LUN specified in the system BIOS.

## Post-Installation Patches for the Sun Solaris 10 10/08 OS

The following patches are recommended for the OS:

- 120223-xx Emulex-Sun LightPulse FC adapter driver
- 119131-xx FC device drivers
- 119716-xx MPxIO
- 119471-xx luxadm

These patches can be found on the SunSolve web site at <http://sunsolve.sun.com>.



## Persistent Binding for Tape Devices

---

To simplify management of servers in SAN-based data-centers, the Sun StorageTek SAN Foundation software stack in the Solaris OS dynamically detects devices in a SAN and builds associated `/dev` tree entries without requiring you to edit configuration files.

In most cases, this process greatly simplifies SAN management. However, for tape devices, you might like the ability to explicitly specify how that `/dev` entries are created and to ensure the `/dev` entries are identical across multiple servers on a SAN. This chapter describes how you can specify this tape binding in the Solaris OS while retaining the benefits of automatic discovery for disk-based devices.

### Persistent Binding Overview

The `/dev/rmt` directory contains links to physical devices under `/devices` for tape devices. Each tape LUN seen by the system is represented by 24 minor nodes in the form of `/dev/rmt/N`, `/dev/rmt/Nb`, and `/dev/rmt/Nbn`, where *N* is an integer counter starting from 0. This number is picked by `devfsadm` during enumeration of new devices. Every new tape logical unit number (LUN) found by `devfsadm` gets the next available number in `/dev/rmt`.

Because the `/dev/rmt` name depends on the order in which devices appear in the device tree, it changes from host to host. For a given tape drive that is seen by two or more different hosts, the `/dev/rmt` link can be different on each of these hosts. This difference can cause problems for the most common usage of Symantec (VERITAS) NetBackup (SSO option). Also, if the drive is replaced, the links change unless the vendor provides a way to retain the port World-Wide Name (PWWN) of the drive.

## Creating Tape Links

The `/etc/devlink.tab` file is called the default device table file. It specifies rules that `devfsadm` uses to create links in the `/dev` directory. Type `man devlinks` on the command-line interface (CLI) for more information. This file does not contain any entries for tapes because `devfsadm` is already able to create links for tape drives, but rules can be added that will modify the default behavior for creating tape links.

For any tape drive visible to the Sun Solaris OS but not specified in the `devlink` file, `devfsadm` automatically assigns a minor node number starting from 0. These minor node numbers will conflict with any lower numbers assigned manually in `/etc/devlink.tab`, so be sure to assign numbers there that are high enough to avoid conflicts.

This approach can easily lead to duplicate links in `/dev/rmt`. Any tapes discovered before entries were specified in `/etc/devlink.tab` have automatically created links. When entries are added and `devfsadm` is run, the original links remain in `/dev/rmt`, resulting in duplicate links. To remove the original links in `/dev/rmt`, run the `rm /dev/rmt/*` command before running `devfsadm`.

This approach cannot be used with multiple-port tape drives that are attached to multiple HBA ports. If multiple HBA ports are attached to the same tape LUN, the system detects two tape drives instead of one. The one that appears last in the `prtconf` output gets the link generated by the `/etc/devlink.tab`.

The following example shows a sample entry for tape in the `devlink.tab` file.

```
type=ddi_byte:tape;addr=PWWN,LUN-number; rmt/rmt-number\M0
```

Change the `rmt #` to whatever `/dev/rmt/N` is required. Then change the PWWN and LUN to match the desired tape device. You can obtain this value by running the `ls -l` command on the existing `/dev/rmt/` link as shown below.

```
# ls -l /dev/rmt/4
lrwxrwxrwx 1 root root 69 Oct 6 14:57 /dev/rmt/4 ->
../../../../devices/pci@1f,700000/SUNW,qlc@2/fp@0,0/st@w5005076300617717,0:
```

If, for example, you wanted the `/dev/rmt/` number to be 40, you would create an entry in `/etc/devlink.tab` like the following example:

```
# type=ddi_byte:tape;addr=w5005076300617717,0; rmt/40\M0
```

You can then add this line to the `devlink` file on every Solaris server on the SAN that uses this drive so that it always appears as minor node 40.

## ▼ Configuration Steps

- 1 **Create the entries in `/etc/devLink.tab` as described in “Creating Tape Links” on page 74.**

If `devfsadm` has previously discovered the devices, you must determine the device address by running the `ls -l` command on the existing link.

---

**Note** – Be sure to assign `/dev/rmt/ N` numbers to avoid conflicts with any automatically configured devices, as described above.

---

- 2 **Remove existing links from `/dev/rmt` by running the `rm /dev/rmt/*` command.**

- 3 **Run `devfsadm`.**

This command creates new links as per the entries in `/etc/devLink.tab` in addition to automatically creating links for any unspecified devices.



# Manual Configuration for Fabric-Connected Devices

---

This appendix explains about configuring and unconfiguring the fabric devices in the Solaris 10 OS. It explains how the visible fabric devices on a host are detected and configured with and without enabling the Sun StorageTek Traffic Manager software.

This appendix contains the following sections:

- “Manual Configuration” on page 77
- “Fabric Device Node Configuration” on page 78
- “Configuring Device Nodes Without Multipathing Enabled” on page 80
- “Configuring Device Nodes With Solaris Multipathing Software Enabled” on page 83
- “Unconfiguring Fabric Devices” on page 86

## Manual Configuration

In the Solaris 10 OS, fabric-connected devices are made available to the Solaris host. This differs from previous versions of the Sun StorageTek Traffic Manager software running on the Solaris 8 or the Solaris 9 OS. In those versions, manual configuration steps were required to achieve fabric-connected device availability.

If you want to manually configure the fabric-connected devices, use the following steps to change the default behavior on the Solaris 10 host.

---

**Note** – Changing the default behavior makes all of your fabric-connected devices unavailable, which can cause problems for fabric-connected devices that are required to be available at boot time.

---

## ▼ To Configure Manually

- 1 To enable manual configuration, make sure that the following line in the `/kernel/drv/fp.conf` file does not start with an initial `#` character:

```
manual_configuration_only=1;
```

Refer to the `fp(7D)` man page and the `cfgadm_fp(1M)` man page for further information on this setting.

- 2 Reboot the host.

- 3 For each fabric-connected device that will need to be made available, follow the steps in [“Configuring Device Nodes Without Multipathing Enabled” on page 80](#) or [“Configuring Device Nodes With Solaris Multipathing Software Enabled” on page 83](#), depending on whether you are using the Sun StorageTek Traffic Manager software for multipathing.

If the original default behavior for fabric-connected devices is desired, use the following steps:

- 4 To disable manual configuration, make sure that the following line in the `/kernel/drv/fp.conf` file starts with an initial `#` character:

```
# manual_configuration_only=1;
```

Refer to the `fp(7D)` man page and the `cfgadm_fp(1M)` man page for further information on this setting.

- 5 Reboot the host.

## Fabric Device Node Configuration

After you configure the hardware in your direct-attach system or SAN, you must ensure that the hosts recognize the devices. This section explains host recognition of fabric devices, also known as 24-bit FC addressing devices on the SAN. After configuring the devices, ports, and zones in your SAN, make sure that the host is aware of the devices. You can have up to 16 million fabric devices connected together on a SAN with FC support.

This section is limited to the operations required from the perspective of the Solaris 10 OS. It does *not* cover other aspects, such as device availability and device-specific management. If devices are managed by other software, such as a volume manager, refer to the volume manager product documentation for additional instructions.

# Ensuring That LUN Level Information Is Visible

## ▼ To Ensure LUN Level Information is Visible

- 1 Use the `cfgadm` command to identify LUN level information.  
If you issue the `cfgadm -al -o show_SCSI_LUN controller-ID` command immediately after a system boots up, the output might not show the Fibre Channel Protocol (FCP) SCSI LUN level information. The information does not appear because the storage device drivers, such as the `ssd` and `st` driver, are not loaded on the running system.
- 2 Use the `modinfo` command to check whether the drivers are loaded. After the drivers are loaded, the LUN level information is visible in the `cfgadm` output.

## ▼ To Detect Fabric Devices Visible on a Host

This section provides an example of the procedure for detecting fabric devices using FC host ports `c0` and `c1`. This procedure also shows the device configuration information that is displayed with the `cfgadm(1M)` command.

---

**Note** – In the following examples, only failover path attachment point IDs (`Ap_Ids`) are listed. The `Ap_Ids` displayed on your system depend on your system configuration.

---

- 1 Log in as root (`su - root`).
- 2 Display the information about the attachment points on the system.

```
# cfgadm -l
Ap_Id      Type      Receptacle  Occupant  Condition
c0         fc-fabric  connected   unconfigured unknown
c1         fc-private connected   configured unknown
```

In this example, `c0` represents a fabric-connected host port, and `c1` represents a private, loop-connected host port. Use the `cfgadm(1M)` command to manage the device configuration on fabric-connected host ports.

By default, the device configuration on private, loop-connected host ports is managed by a host using the Solaris 10 OS.

- 3 Display information about the host ports and their attached devices.

```
# cfgadm -al
Ap_Id      Type      Receptacle  Occupant  Condition
c0         fc-fabric  connected   unconfigured unknown
c0::50020f2300006077 disk      connected   unconfigured unknown
c0::50020f23000063a9 disk      connected   unconfigured unknown
c0::50020f2300005f24 disk      connected   unconfigured unknown
c0::50020f2300006107 disk      connected   unconfigured unknown
c1         fc-private  connected   configured  unknown
c1::220203708b69c32b disk      connected   configured  unknown
```

c1::220203708ba7d832	disk	connected	configured	unknown
c1::220203708b8d45f2	disk	connected	configured	unknown
c1::220203708b9b20b2	disk	connected	configured	unknown

**Note** – The `cfgadm -l` command displays information about FC host ports. You can also use the `cfgadm -al` command to display information about FC devices. The lines that include a port world wide name (WWN) in the `Ap_Id` field associated with `c0` represent a fabric device. Use the `cfgadm configure` and `unconfigure` commands to manage those devices and make them available to hosts using the Solaris 10 OS. The `Ap_Id` devices with port WWNs under `c1` represent private-loop devices that are configured through the `c1` host port.

# Configuring Device Nodes Without Multipathing Enabled

This section describes fabric device configuration tasks on a host that does not have multipathing enabled.

The procedures in this section show how to detect fabric devices that are visible on a host and to configure and make them available to a host using the Solaris 10 OS. The procedures in this section use specific devices as examples to illustrate how to use the `cfgadm(1M)` command to detect and configure fabric devices.

The device information that you supply and that is displayed by the `cfgadm(1M)` command depends on your system configuration.

## ▼ To Configure an Individual Device Without Multipathing

This sample procedure describes how to configure a fabric device that is attached to the fabric-connected host port `c0`.

- 1 Log in as root (`su - root`).
- 2 Identify the device to be configured.

```
# cfgadm -al
Ap_Id      Type      Receptacle  Occupant  Condition
c0         fc-fabric connected  unconfigured unknown
c0::50020f2300006077 disk      connected  unconfigured unknown
c0::50020f23000063a9 disk      connected  unconfigured unknown
c0::50020f2300005f24 disk      connected  unconfigured unknown
c0::50020f2300006107 disk      connected  unconfigured unknown
c1         fc-private connected  configured  unknown
c1::220203708b69c32b disk      connected  configured  unknown
c1::220203708ba7d832 disk      connected  configured  unknown
c1::220203708b8d45f2 disk      connected  configured  unknown
c1::220203708b9b20b2 disk      connected  configured  unknown
```



**3 Configure the fabric device.**

```
# cfgadm -c configure c0::50020f2300006077
```

**4 Verify that the selected fabric device is configured.**

```
# cfgadm -al
```

Ap_Id	Type	Receptacle	Occupant	Condition
c0	fc-fabric	connected	configured	unknown
c0::50020f2300006077	disk	connected	configured	unknown
c0::50020f23000063a9	disk	connected	unconfigured	unknown
c0::50020f2300005f24	disk	connected	unconfigured	unknown
c0::50020f2300006107	disk	connected	unconfigured	unknown
c1	fc-private	connected	configured	unknown
c1::220203708b69c32b	disk	connected	configured	unknown
c1::220203708ba7d832	disk	connected	configured	unknown
c1::220203708b8d45f2	disk	connected	configured	unknown
c1::220203708b9b20b2	disk	connected	configured	unknown

Notice that the Occupant column for both c0 and c0::50020f2300006077 displays as configured, indicating that the c0 port has a configured occupant and that the c0::50020f2300006077 device is configured.

**5 Use the show\_SCSI\_LUN option to display FCP SCSI LUN information for multi-LUN SCSI devices.**

The following code example shows that the physical devices connected through Ap\_Id c0::50020f2300006077 have four LUNs configured.

```
# cfgadm -al -o show_SCSI_LUN c0
```

Ap_Id	Type	Receptacle	Occupant	Condition
c0	fc-fabric	connected	configured	unknown
c0::50020f2300006077,0	disk	connected	configured	unknown
c0::50020f2300006077,1	disk	connected	configured	unknown
c0::50020f2300006077,2	disk	connected	configured	unknown
c0::50020f2300006077,3	disk	connected	configured	unknown

The device is now available on the host using the Solaris 10 OS. The paths represent each SCSI LUN in the physical device represented by c0::50020f2300006077.

## ▼ To Configure Multiple Devices Without Multipathing

Make sure you first identify the devices visible to the host with the procedure [“Ensuring That LUN Level Information Is Visible” on page 79](#). This procedure describes how to configure all unconfigured fabric devices that are attached to a fabric-connected host port. The port used as an example is c0.

**1 Log in as root (su - root).****2 Identify the devices to be configured.**

```
# cfgadm -al
```

Ap_Id	Type	Receptacle	Occupant	Condition
c0	fc-fabric	connected	unconfigured	unknown
c0::50020f2300006077	disk	connected	unconfigured	unknown

c0::50020f23000063a9	disk	connected	unconfigured	unknown
c0::50020f2300005f24	disk	connected	unconfigured	unknown
c0::50020f2300006107	disk	connected	unconfigured	unknown
cl	fc-private	connected	configured	unknown
cl::220203708b69c32b	disk	connected	configured	unknown
cl::220203708ba7d832	disk	connected	configured	unknown
cl::220203708b8d45f2	disk	connected	configured	unknown
cl::220203708b9b20b2	disk	connected	configured	unknown

### 3 Configure all of the unconfigured devices on the selected port.

```
# cfgadm -c configure c0
```

---

**Note** – This operation repeats the configure operation of an individual device for all the devices on c0. This can be time consuming if the number of devices on c0 is large.

---

### 4 Verify that all devices on c0 are configured.

```
# cfgadm -al
```

Ap_Id	Type	Receptacle	Occupant	Condition
c0	fc-fabric	connected	configured	unknown
c0::50020f2300006077	disk	connected	configured	unknown
c0::50020f23000063a9	disk	connected	configured	unknown
c0::50020f2300005f24	disk	connected	configured	unknown
c0::50020f2300006107	disk	connected	configured	unknown
cl	fc-private	connected	configured	unknown
cl::220203708b69c32b	disk	connected	configured	unknown
cl::220203708ba7d832	disk	connected	configured	unknown
cl::220203708b8d45f2	disk	connected	configured	unknown
cl::220203708b9b20b2	disk	connected	configured	unknown

### 5 Use the show\_SCSI\_LUN command to display FCP SCSI LUN information for multi-LUN SCSI devices.

The following code example shows that the physical devices represented by c0::50020f2300006077 and c0::50020f2300006107 each have four LUNs configured. The physical devices represented by c0::50020f23000063a9 and c0::50020f2300005f24 each have two LUNs configured.

```
# cfgadm -al -o show_SCSI_LUN c0
```

Ap_Id	Type	Receptacle	Occupant	Condition
c0	fc-fabric	connected	configured	unknown
c0::50020f2300006077,0	disk	connected	configured	unknown
c0::50020f2300006077,1	disk	connected	configured	unknown
c0::50020f2300006077,2	disk	connected	configured	unknown
c0::50020f2300006077,3	disk	connected	configured	unknown
c0::50020f23000063a9,0	disk	connected	configured	unknown
c0::50020f23000063a9,1	disk	connected	configured	unknown
c0::50020f2300005f24,0	disk	connected	configured	unknown
c0::50020f2300005f24,1	disk	connected	configured	unknown
c0::50020f2300006107,0	disk	connected	configured	unknown
c0::50020f2300006107,1	disk	connected	configured	unknown
c0::50020f2300006107,2	disk	connected	configured	unknown
c0::50020f2300006107,3	disk	connected	configured	unknown

# Configuring Device Nodes With Solaris Multipathing Software Enabled

This section describes how to perform fabric device configuration steps on a host that has the multipathing software enabled.

The devices attached to the fabric-connected host port are not configured by default and so are not available to the host using the Solaris 10 OS. Use the `cfgadm configure` and `cfgadm unconfigure` commands to manage device node creation for fabric devices. See the `cfgadm_fp(1M)` man page for additional information. The procedures in this section illustrate steps to detect fabric devices that are visible on a host and to configure them as multipathing devices to make them available to the host using the Solaris 10 OS.

The device information that you supply, and that is displayed by the `cfgadm(1M)` command, depends on your system configuration. For more information on the `cfgadm` command, see the `cfgadm_fp(1M)` and `cfgadm(1M)` man pages.

## ▼ To Configure Individual Devices With Sun StorageTek Traffic Manager Software

This sample procedure uses fabric-connected host ports `c0` and `c2` to configure fabric devices as multipath devices on a host that has the Sun StorageTek Traffic Manager software enabled.

The `cfgadm -c configure` command for fabric devices is the same regardless of whether multipathing is enabled.

- 1 Log in as root (`su - root`).
- 2 Identify the port WWN of the device to be configured as the Sun StorageTek Traffic Manager software device.

Look for devices on a fabric-connected host port marked as `fc-fabric`. These devices are the devices you can configure with the `cfgadm -c configure` command.

```
# cfgadm -al
```

Ap_Id	Type	Receptacle	Occupant	Condition
c0	fc-fabric	connected	unconfigured	unknown
c0::50020f2300006077	disk	connected	unconfigured	unknown
c0::50020f23000063a9	disk	connected	unconfigured	unknown
c1	fc-private	connected	configured	unknown
c1::220203708b69c32b	disk	connected	configured	unknown
c1::220203708ba7d832	disk	connected	configured	unknown
c1::220203708b8d45f2	disk	connected	configured	unknown
c1::220203708b9b20b2	disk	connected	configured	unknown
c2	fc-fabric	connected	unconfigured	unknown
c2::50020f2300005f24	disk	connected	unconfigured	unknown
c2::50020f2300006107	disk	connected	unconfigured	unknown

In the above example, the `c0::50020f2300006077` and `c2::50020f2300006107` `Ap_Ids` represent the same storage device with different port WWNs for the storage device controllers. The `c0` and `c2` host ports are enabled for use by the Sun StorageTek Traffic Manager software.

### 3 Configure the fabric device and make the devices available to the host.

```
# cfmadm -c configure c0::50020f2300006077 c2::50020f2300006107
```

### 4 Verify that the selected devices are configured.

```
# cfmadm -al
```

Ap_Id	Type	Receptacle	Occupant	Condition
c0	fc-fabric	connected	configured	unknown
c0::50020f2300006077	disk	connected	configured	unknown
c0::50020f23000063a9	disk	connected	unconfigured	unknown
c1	fc-private	connected	configured	unknown
c1::220203708b69c32b	disk	connected	configured	unknown
c1::220203708ba7d832	disk	connected	configured	unknown
c1::220203708b8d45f2	disk	connected	configured	unknown
c1::220203708b9b20b2	disk	connected	configured	unknown
c2	fc-fabric	connected	configured	unknown
c2::50020f2300005f24	disk	connected	unconfigured	unknown
c2::50020f2300006107	disk	connected	configured	unknown

Notice that the `Occupant` column of `c0` and `c0::50020f2300006077` specifies `configured`, which indicates that the `c0` port has at least one configured occupant and that the `c0::50020f2300006077` device is configured. The same change has been made in `c2` and `c2::50020f2300006107`.

When the configure operation has been completed without an error, multipathing-enabled devices are created on the host. If the physical device represented by `c0::50020f2300006077` and `c2::50020f2300006107` has multiple SCSI LUNs configured, each LUN is configured as a Sun StorageTek Traffic Manager software device. The example below shows that two LUNs are configured through `c0::50020f2300006077` and `c2::50020f2300006107`. Each `Ap_Id` is associated with a path to those Sun StorageTek Traffic Manager software devices.

```
# cfmadm -al -o show SCSI_LUN c0::50020f2300006077\ c2::50020f2300006107
```

Ap_Id	Type	Receptacle	Occupant	Condition
c0::50020f2300006077,0	disk	connected	configured	unknown
c0::50020f2300006077,1	disk	connected	configured	unknown
c2::50020f2300006107,0	disk	connected	configured	unknown
c2::50020f2300006107,1	disk	connected	configured	unknown

The example above shows that the following two multipathing-enabled devices are created for the device represented by `c0::50020f2300006077` and `c2::50020f2300006107`:

## ▼ To Configure Multiple Devices With Multipathing

Before you configure or remove device nodes, be sure to first identify the fabric devices by using the procedure [“Ensuring That LUN Level Information Is Visible” on page 79](#).

In this example, an Ap\_Id on a fabric-connected host port is a path to the Sun StorageTek Traffic Manager software device. For example, all devices with a path through c2 are to be configured, but none through c0 are to be configured. c2 is an attachment point from the host to the fabric, whereas c2::50020f2300006107 is an attachment point from the storage to the fabric. A host detects all the storage devices in a fabric for which it is configured.

Configuring an Ap\_Id on the device that has already been configured through another Ap\_Id results in an additional path to the previously configured device. A new device node is not created in this case. The device node is created only the first time an Ap\_Id to the corresponding device is configured.

### 1 Log in as root (su - root)..

### 2 Identify the fabric-connected host port to be configured.

```
# cfgadm -al
```

Ap_Id	Type	Receptacle	Occupant	Condition
c0	fc-fabric	connected	configured	unknown
c0::50020f2300006077	disk	connected	configured	unknown
c0::50020f23000063a9	disk	connected	configured	unknown
c1	fc-private	connected	configured	unknown
c1::220203708b69c32b	disk	connected	configured	unknown
c1::220203708ba7d832	disk	connected	configured	unknown
c1::220203708b8d45f2	disk	connected	configured	unknown
c1::220203708b9b20b2	disk	connected	configured	unknown
c2	fc-fabric	connected	unconfigured	unknown
c2::50020f2300005f24	disk	connected	unconfigured	unknown
c2::50020f2300006107	disk	connected	unconfigured	unknown

Devices represented by Ap\_Iids c0::50020f2300006077 and c2::50020f2300006107 are two paths to the same physical device, with c0::50020f2300006077 already configured. Configure the unconfigured devices on the selected port. This operation repeats the configure command of an individual device for all the devices on c2. This can be time-consuming if the number of devices on c2 is large.

```
# cfgadm -c configure c2
```

### 3 Verify that all devices on c2 are configured.

```
# cfgadm -al
```

Ap_Id	Type	Receptacle	Occupant	Condition
c0	fc-fabric	connected	configured	unknown
c0::50020f2300006077	disk	connected	configured	unknown
c0::50020f23000063a9	disk	connected	configured	unknown
c1	fc-private	connected	configured	unknown
c1::220203708b69c32b	disk	connected	configured	unknown
c1::220203708ba7d832	disk	connected	configured	unknown
c1::220203708b8d45f2	disk	connected	configured	unknown
c1::220203708b9b20b2	disk	connected	configured	unknown
c2	fc-fabric	connected	configured	unknown
c2::50020f2300005f24	disk	connected	configured	unknown
c2::50020f2300006107	disk	connected	configured	unknown

Notice that the Occupant column of c2 and all of the devices under c2 is marked as configured.

The `show_SCSI_LUN` command displays FCP SCSI LUN information for multiple LUN SCSI devices. The following code example shows that the physical devices connected through by `c2::50020f2300006107` and `c2::50020f23000005f24` each have two LUNs configured.

```
# cfgadm -al -o show_SCSI_LUN c2
```

Ap_Id	Type	Receptacle	Occupant	Condition
c2	fc-fabric	connected	configured	unknown
c2::50020f23000005f24,0	disk	connected	configured	unknown
c2::50020f23000005f24,1	disk	connected	configured	unknown
c2::50020f2300006107,0	disk	connected	configured	unknown
c2::50020f2300006107,1	disk	connected	configured	unknown

## Unconfiguring Fabric Devices

This section provides information about unconfiguring the Sun StorageTek Traffic Manager software.

### Unconfiguring a Fabric Device

Before you unconfigure a fabric device, stop all activity to the device and unmount any file systems on the fabric device. See the administration documentation for the Solaris 10 OS for unmounting instructions. If the device is under any volume manager's control, see the documentation for your volume manager before unconfiguring the device.

#### ▼ To Unconfigure a Fabric Device

This procedure describes how to unconfigure a fabric device that is attached to the fabric-connected host port `c0`.

- 1 Log in as root (`su - root`).
- 2 Identify the device to be unconfigured.

Only devices on a fabric-connected host port can be unconfigured.

```
# cfgadm -al
```

Ap_Id	Type	Receptacle	Occupant	Condition
c0	fc-fabric	connected	configured	unknown
c0::50020f2300006077	disk	connected	configured	unknown
c0::50020f23000063a9	disk	connected	configured	unknown
c1	fc-private	connected	configured	unknown
c1::220203708b69c32b	disk	connected	configured	unknown
c1::220203708ba7d832	disk	connected	configured	unknown

- 3 Unconfigure the fabric device.

```
# cfgadm -c unconfigure c0::50020f2300006077
```

#### 4 Verify that the selected fabric device is unconfigured.

```
# cfgadm -al
```

Ap_Id	Type	Receptacle	Occupant	Condition
c0	fc-fabric	connected	configured	unknown
c0::50020f2300006077	disk	connected	unconfigured	unknown
c0::50020f23000063a9	disk	connected	configured	unknown
c1	fc-private	connected	configured	unknown
c1::220203708b69c32b	disk	connected	configured	unknown
c1::220203708ba7d832	disk	connected	configured	unknown

### ▼ To Unconfigure All Fabric Devices on a Fabric-Connected Host Port

This procedure describes how to unconfigure all configured fabric devices that are attached to a fabric-connected host port.

#### 1 Log in as root (su - root)..

#### 2 Identify the fabric devices to be unconfigured.

Only devices on a fabric-connected host port can be unconfigured.

```
# cfgadm -al
```

Ap_Id	Type	Receptacle	Occupant	Condition
c0	fc-fabric	connected	configured	unknown
c0::50020f2300006077	disk	connected	configured	unknown
c0::50020f23000063a9	disk	connected	configured	unknown
c1	fc-private	connected	configured	unknown
c1::220203708b69c32b	disk	connected	configured	unknown
c1::220203708ba7d832	disk	connected	configured	unknown

#### 3 Stop all activity to each fabric device on the selected port and unmount any file systems on each fabric device.

If the device is under any volume manager's control, see the documentation for your volume manager before unconfiguring the device.

```
# cfgadm -c unconfigure c0
```

#### 4 Unconfigure all of the configured fabric devices on a selected port.

---

**Note** – This operation repeats the unconfigure operation of an individual device for all the devices on c0. This process can be time-consuming if the number of devices on c0 is large.

---

#### 5 Verify that all the devices on c0 are unconfigured.

```
# cfgadm -al
```

Ap_Id	Type	Receptacle	Occupant	Condition
c0	fc-fabric	connected	unconfigured	unknown
c0::50020f2300006077	disk	connected	unconfigured	unknown
c0::50020f23000063a9	disk	connected	unconfigured	unknown
c1	fc-private	connected	configured	unknown
c1::220203708b69c32b	disk	connected	configured	unknown
c1::220203708ba7d832	disk	connected	configured	unknown

Notice that the Occupant column of c0 and all the fabric devices attached to it are displayed as unconfigured.

## ▼ To Unconfigure a Fabric Device Associated With Sun StorageTek Traffic Manager Multipathing-Enabled Devices

This procedure shows fabric-connected host ports c0 and c2 to illustrate how to unconfigure fabric devices associated with Sun StorageTek Traffic Manager software devices.

- 1 Log in as root (su - root)..
- 2 Identify the port WWN of the fabric device to be unconfigured.

```
# cfmadm -al
```

Ap_Id	Type	Receptacle	Occupant	Condition
c0	fc-fabric	connected	configured	unknown
c0::50020f2300006077	disk	connected	configured	unknown
c0::50020f23000063a9	disk	connected	configured	unknown
c1	fc-private	connected	configured	unknown
c1::220203708b69c32b	disk	connected	configured	unknown
c1::220203708ba7d832	disk	connected	configured	unknown
c2	fc-fabric	connected	configured	unknown
c2::50020f2300005f24	disk	connected	configured	unknown
c2::50020f2300006107	disk	connected	configured	unknown

In this example, the c0::50020f2300006077 and c2::50020f2300006107 Ap\_Ids represent different port WWNs for the same device associated with a Sun StorageTek Traffic Manager software device. The c0 and c2 host ports are enabled for use by the Sun StorageTek Traffic Manager software.

- 3 Stop all device activity to each fabric device on the selected port and unmount any file systems on each fabric device.

If the device is under any volume manager's control, see the documentation for your volume manager for maintaining the fabric device.

- 4 Unconfigure fabric devices associated with the device.

Only devices on a fabric-connected host port can be unconfigured through the cfmadm -c unconfigure command.

```
# cfmadm -c unconfigure c0::50020f2300006077 c2::50020f2300006107
```

---

**Note** – You can remove a device from up to eight paths individually, as in the example command cfmadm -c unconfigure c0::1111, c1::2222, c3::3333, and so on. As an alternative, you can remove an entire set of paths from the host, as in the example cfmadm -c unconfigure c0.

---

- 5 Verify that the selected devices are unconfigured.

```
# cfmadm -al
```

Ap_Id	Type	Receptacle	Occupant	Condition
c0	fc-fabric	connected	configured	unknown



c0::50020f2300006077	disk	connected	unconfigured	unknown
c0::50020f23000063a9	disk	connected	configured	unknown
c1	fc-private	connected	configured	unknown
c1::220203708b69c32b	disk	connected	configured	unknown
c1::220203708ba7d832	disk	connected	configured	unknown
c2	fc-fabric	connected	configured	unknown
c2::50020f2300005f24	disk	connected	configured	unknown
c2::50020f2300006107	disk	connected	unconfigured	unknown

Notice that the Ap\_Ids c0::50020f2300006077 and c2::50020f2300006107 are unconfigured. The Occupant column of c0 and c2 still displays those ports as configured because they have other configured occupants.

The Sun StorageTek Traffic Manager software devices associated with the Ap\_Ids c0::50020f2300006077 and c2::50020f2300006107 are no longer available to the host using the Solaris 10 OS. The following two devices are removed from the host:

```
/dev/rdisk/c6t60020F20000061073AC8B52D000B74A3d0s2
```

```
/dev/rdisk/c6t60020F20000061073AC8B4C50004ED3Ad0s2
```

## ▼ To Unconfigure One Path to a Multipathing Device

In contrast to the procedure in the preceding section, this procedure shows how to unconfigure one device associated with c2::50020f2300006107 and leave the other device, 50020f2300006077, configured. Only devices on a fabric-connected host port can be unconfigured through the `cfgadm unconfigure` command.

- 1 Log in as root (`su - root`).
- 2 Identify the Ap\_Id of the Sun StorageTek Traffic Manager software device to be unconfigured.

```
# cfgadm -al
```

Ap_Id	Type	Receptacle	Occupant	Condition
c0	fc-fabric	connected	configured	unknown
c0::50020f2300006077	disk	connected	configured	unknown
c0::50020f23000063a9	disk	connected	configured	unknown
c1	fc-private	connected	configured	unknown
c1::220203708b69c32b	disk	connected	configured	unknown
c1::220203708ba7d832	disk	connected	configured	unknown
c2	fc-fabric	connected	configured	unknown
c2::50020f2300005f24	disk	connected	configured	unknown
c2::50020f2300006107	disk	connected	configured	unknown

In this example, c0::50020f2300006077 and c2::50020f2300006107 Ap\_Ids represent different port WWNs for the same device.

- 3 Unconfigure the Ap\_Id associated with the device.

**Note** – If the Ap\_Id represents the last configured path to the device, stop all activity to the path and unmount any file systems on it. If the multipathing device is under any volume manager’s control, see the documentation for your volume manager for maintaining the fabric device.

In the example that follows, the path represented as c2 : :50020f2300006107 is unconfigured, and c0 : :50020f2300006077 remains configured to show how you can unconfigure just one of multiple paths for a multipathing device.

```
# cfgadm -c unconfigure c2::50020f2300006107
```

**4 Verify that the selected path c2::50020f2300006107 is unconfigured.**

```
# cfgadm -al
Ap_Id      Type      Receptacle  Occupant  Condition
c0         fc-fabric connected   configured unknown
c0::50020f2300006077 disk      connected   configured unknown
c0::50020f23000063a9 disk      connected   configured unknown
c1         fc-private connected   configured unknown
c1::220203708b69c32b disk      connected   configured unknown
c1::220203708ba7d832 disk      connected   configured unknown
c2         fc-fabric connected   configured unknown
c2::50020f2300005f24 disk      connected   configured unknown
c2::50020f2300006107 disk      connected   unconfigured unknown
```

The devices associated with that Ap\_Id are still available to a host using the Solaris 10 OS through the other path, represented by c0 : :50020f2300006077. A device can be connected to multiple Ap\_Id's and an Ap\_Id can be connected to multiple devices.

```
/dev/rdisk/c6t60020F20000061073AC8B52D000B74A3d0s2
and
/dev/rdisk/c6t60020F20000061073AC8B4C50004ED3Ad0s2
```

**▼ To Unconfigure All Fabric-Connected Devices With Multipathing Enabled**

An Ap\_Id on a fabric-connected host port is a path to the Sun StorageTek Traffic Manager software device.

When a Sun StorageTek Traffic Manager software device has multiple Ap\_Id's connected to it, the device is still available to the host using the Solaris 10 OS after you unconfigure an Ap\_Id. After you unconfigure the last Ap\_Id, no additional paths remain and the device is unavailable to the host using the Solaris 10 OS. Only devices on a fabric-connected host port can be unconfigured.

- 1 Log in as root (su - root)..**
- 2 Identify the devices to be unconfigured.**

```
# cfgadm -al
Ap_Id      Type      Receptacle  Occupant  Condition
```

---

c0	fc-fabric	connected	configured	unknown
c0::50020f2300006077	disk	connected	configured	unknown
c0::50020f23000063a9	disk	connected	configured	unknown
c1	fc-private	connected	configured	unknown
c1::220203708b69c32b	disk	connected	configured	unknown
c1::220203708b9b20b2	disk	connected	configured	unknown
c2	fc-fabric	connected	configured	unknown
c2::50020f2300005f24	disk	connected	configured	unknown

### 3 Unconfigure all of the configured devices on the selected port.

```
# cfgadm -c unconfigure c2
```

---

**Note** – This operation repeats the unconfigure command of an individual device for all devices on c2. This process can be time-consuming if the number of devices on c2 is large.

---

### 4 Verify that all devices on c2 are unconfigured.

```
# cfgadm -al
```

Ap_Id	Type	Receptacle	Occupant	Condition
c0	fc-fabric	connected	configured	unknown
c0::50020f2300006077	disk	connected	configured	unknown
c1	fc-private	connected	configured	unknown
c1::220203708b69c32b	disk	connected	configured	unknown
c1::220203708ba7d832	disk	connected	configured	unknown
c2	fc-fabric	connected	unconfigured	unknown
c2::50020f2300005f24	disk	connected	unconfigured	unknown
c2::50020f2300006107	disk	connected	unconfigured	unknown

Notice that the Occupant column lists c2 and all the devices attached to c2 as unconfigured.



## Supported FC-HBA API

---

This appendix contains the list of supported and unsupported FC-HBA Interfaces. For further information regarding the API, refer to the Sun StorageTek Traffic Manager multipathing “[Software Features](#)” on page 16.

### Supported Fibre Channel HBA API

**TABLE B-1** Supported and Unsupported FC-HBA Interfaces

FC - HBA Interfaces	Supported or Not Supported by Sun StorageTek Traffic Manager Software
HBA_GetVersion	Supported
HBA_LoadLibrary	Supported
HBA_FreeLibrary	Supported
HBA_GetNumberOfAdapters	Supported
HBA_GetAdapterName	Supported
HBA_OpenAdapter	Supported
HBA_CloseAdapter	Supported
HBA_GetAdapterAttributes	Supported
HBA_GetAdapterPortAttributes	Supported
HBA_GetDiscoveredPortAttributes	Supported
HBA_GetPortAttributesbyWWN	Supported
HBA_SendCTPassThru	Supported
HBA_SendCTPassThruV2	Supported

TABLE B-1 Supported and Unsupported FC-HBA Interfaces *(Continued)*

FC - HBA Interfaces	Supported or Not Supported by Sun StorageTek Traffic Manager Software
HBA_RefreshInformation	Supported
HBA_GetFcpTargetMapping	Supported
HBA_SendScsiInquiry	Supported
HBA_SendReportLuns	Supported
HBA_SendReadCapacity	Supported
HBA_GetPortStatistics	Supported
HBA_ResetStatistics	Not supported
HBA_GetFcpPersistentBinding	Not supported
HBA_GetEventBuffer	Not supported
HBA_SetRNIDMgmtInfo	Supported
HBA_GetRNIDMgmtInfo	Supported
HBA_SendRNID	Supported
HBA_SendRNIDV2	Supported
HBA_ScsiInquiryV2	Supported
HBA_ScsiReportLUNsV2	Supported
HBA_ScsiReadCapacityV2	Supported
HBA_OpenAdapterByWWN	Supported
HBA_RefreshAdapterConfiguration	Supported
HBA_GetVendorLibraryAttributes	Supported
HBA_GetFcpTargetMappingV2	Supported
HBA_SendRPL	Not supported
HBA_SendRPS	Not supported
HBA_SendSRL	Not supported
HBA_SendLIRR	Not supported
HBA_SendRLS	Supported
HBA_RemoveCallback	Supported
HBA_RegisterForAdapterEvents	Supported

TABLE B-1 Supported and Unsupported FC-HBA Interfaces *(Continued)*

FC-HBA Interfaces	Supported or Not Supported by Sun StorageTek Traffic Manager Software
HBA_RegisterForAdapterAddEvents	Supported
HBA_RegisterForAdapterPortEvents	Supported
HBA_RegisterForAdapterPortStatEvents	Not supported
HBA_RegisterForTargetEvents	Supported
HBA_RegisterForAdapterLinkEvents	Not supported
HBA_RegisterForAdapterTargetEvents	Supported
HBA_GetFC4Statistics	Not supported
HBA_GetFCPStatistics	Not supported
HBA_GetBindingCapability	Not supported
HBA_GetBindingSupport	Not supported
HBA_SetBindingSupport	Not supported
HBA_SetPersistentBindingV2	Not supported
HBA_GetPersistentBindingV2	Not supported
HBA_RemovePersistentBinding	Not supported
HBA_RemoveAllPersistentBindings	Not supported





# Multipathing Troubleshooting

---

This appendix provides solutions to potential problems that might occur while running the Sun StorageTek Traffic Manager software.

This appendix contains the following sections:

- [“System Fails to Boot During `stmsboot`” on page 97](#)
- [“System Crashes During `stmsboot`” on page 98](#)

## System Fails to Boot During `stmsboot`

During the reboot following `stmsboot` enable (-e), disable (-d), or update (-u) operations if the system fails to boot but lets you enter single user mode, perform the following to recover.

### ▼ To Recover From Single User Mode

- 1 Type the root password and enter single user mode.
- 2 Restart the `mpxio-upgrade` service.

```
# svcadm restart svc:/system/device/mpxio-upgrade:default
```

If this command is not successful, follow the instructions in the next section to recover your original configuration.

---

**Note** – Prior to the Solaris 10 Update 4 OS, this service was known as `svc:/platform/sun4u/mpxio-upgrade:default`.

---

# System Crashes During stmsboot

During the reboot following stmsboot enable (-e), disable (-d), or update (-u) operations, if your system hangs, panics, or fails to boot, follow the instructions below to recover your original configuration.

## ▼ To Recover from a System Crash

- 1 **Boot the system from another disk, CD, DVD, or over the network.**
- 2 **Run the `fsck your-root-device` command where *your-root-device* is your original root device.**  
`# fsck your-root-device`
- 3 **Mount your original root device.**  
`# mount your-root-device /mnt`
- 4 **Restore your original `fp.conf` file (for FC multipathing) or `mpt.conf` (for SAS multipathing) as follows.**
  - **If you ran the `stmsboot -e` command or `stmsboot -d` command:**
    - For SAS multipathing, type the command `cp /mnt/etc/mpxio/mpt.conf /mnt/kernel/drv/mpt.conf`
    - For FC multipathing, type the command `cp /mnt/etc/mpxio/fp.conf /mnt/kernel/drv/fp.conf`
  - **If you ran the `stmsboot -u` command, and you modified either the `fp.conf` file or the `mpt.conf` undo the changes you made to this file by editing either the `/mnt/kernel/drv/fp.conf` or the `/mnt/kernel/drv/mpt.conf` files.**
- 5 **Undo any other changes you made to the multipathing configuration prior to running the `stmsboot` command.**

For example, if you modified the `scsi_vhci.conf` file, undo the changes you made to this file by editing the `/mnt/kernel/drv/scsi_vhci.conf` file.

If you modified the device settings of your storage arrays, restore their original settings.
- 6 **Restore your original `/etc/vfstab` file:**  
`# cp /mnt/etc/mpxio/vfstab /mnt/etc/vfstab`

The `/mnt/etc/mpxio/vfstab` file is a copy your original `/etc/vfstab` file that the `stmsboot` command saved prior to updating your `vfstab` file. A `/mnt/etc/mpxio/vfstab` file will not exist if the `stmsboot` command has not modified your `vfstab` file.

- 7 If the system is running on a Solaris 10 Update 4 OS (or later) x86 based system, perform the following steps:**

- a. Restore your original /boot/solaris/bootenv.rc file.**

```
# cp /mnt/etc/mpxio/bootenv.rc /mnt/boot/solaris/bootenv.rc
```

The /mnt/etc/mpxio/bootenv.rc file is a copy your original /boot/solaris/bootenv.rc file that the stmsboot command saved prior to updating your bootenv.rc file. A /mnt/etc/mpxio/bootenv.rc file will not exist if the stmsboot command has not modified your bootenv.rc file.

- b. Update the boot archive.**

```
# bootadm update-archive -R /mnt
```

- 8 Disable the mpxio-upgrade service:**

```
# /usr/sbin/svccfg -f /mnt/etc/mpxio/svccfg_recover
```

- 9 Type sync to synchronize the file systems.**

- 10 Unmount the device.**

```
# umount /mnt
```

- 11 Reboot the system.**



# Index

---

## Numbers and Symbols

24-bit FC addressing devices, 78

## A

ANSI standard Multipath Management API, 25–37

Ap\_Id, 79

automatic failback, configuration, 48–49

## B

boot disk, 53

Booting, 16

broadcasting, 57

## C

cfgadm, 52

-c, 81

-l, 79, 80

cfgadm -al -o show\_SCSI\_LUN, 79

cfgadm -c unconfigure, 88

cfgadm(1M), 79

cfgadm configure, 80

cfgadm\_fp(1M), 83

configuration

device, 79

dump, 40

fabric devices, 80

Fibre Channel overview, 21–23

configuration (*Continued*)

manual, 77–78

multipathing, 40

SAS devices, 56

tasks, 21

configure

automatic failback, 48–49

fabric-connected devices, 51–53

multipathing feature, 39, 51–53

SAN devices, 51–53

SAS devices, 56

third-party devices, 45, 46

considerations

device name changes, 40

device specific, 40

fabric boot devices, 53

IPFC, 57–60

multipathing, 40

multipathing, enabling and disabling, 40–43

per-port configuration, 43–45

SAN devices, 51–52

SAS devices, 55

stmsboot command, 22

StorageTek Traffic Manager, 22–23

third-party device configuration, 45

## D

device

asymmetrical, 17

configuration, 80

device (*Continued*)

storage, 17

device management, 18

devices, tape, 16

disabling, multipathing, 40–43

discovery

dynamic, 55

SAS devices, 55

**E**

enabling, multipathing, 40–43

**F**

fabric-connected host ports, 79, 83

fabric device configuration, 80

fc-fabric, 83

FCAL, 16

Fibre Channel

arbitrated loop, 16

booting Solaris 10 x86/x64, 63–72

configuration overview, 21–23

configuring IPFC SAN devices, 57–61

determining adapter port instances, 58–60

enabling and disabling multipathing, 40–43

HBA, 16

IPFC considerations, 57–60

listing LUN level information, 79–80

multipathing configuration, 39

supported HBA interfaces, 93–95

**I**

initiator ports, displaying properties, 27

Internet Protocol over Fibre Channel, *See* IPFC

IPFC, considerations, 57–60

**L**

logical units, listing, 27

## LUN

masking, 51

recognition, 53

SCSI devices, 86

luxadm(1M), 48

**M**

modinfo, 79

mpathadm commands, 25–37

automatic failback, configuring, 31

configure automatic failback, 31

disable a path, 36–37

enable a path, 35–36

initiator ports

discovered, 26–27

properties, 27

logical unit with a particular name, 30–31

logical units

associated with target port, 29

discovered, 27

fail over, 33–35

properties and associated path, 27

mpt driver, 55

Multipath Management API plug-in

library, 25

properties, 25

multipathing

boot considerations, 53

configuring automatic failback, 48–49

configuring device nodes, 83–86

configuring third-party storage devices, 45–48

disabled, device node configuration, 80

disabled, multiple device configuration, 81–82

enabling and disabling, 40–43

enabling and disabling on a per-port basis, 43–45

fabric device node configuration, 78

features, 17–18

manual configuration, 77–78

mpathadm command, 25–37

SAS boot device configuration, 56

SAS considerations, 55

support, 25–37

troubleshooting, 97–99

**P**

- per-port configuration
  - considerations, 43–45
  - enabling and disabling multipathing, 43–45
- persistent binding of tape devices, 73–75
- physical device, 81
- Promiscuous mode, 57

**R**

- REPORT LUNS command, 45

**S**

- SAS devices
  - configuration, 56
  - dynamic discovery, 55
  - multipathing considerations, 55
- sd driver, 55
- Serial Attached SCSI, *See* SAS
- show\_SCSI\_LUN, 81, 86
- snoop(1M), 57
- Solaris 10 x86/x64 FC OS booting procedure, 63–72
- ssd driver, 79
- st driver, 79
- stmsboot command, 40
  - boot considerations, 53
  - considerations, 22
  - determining device paths, 40
  - enabling and disabling multipathing, 18
  - SAN device considerations, 52
  - system crashes, 98–99
- storage device, 48

**T**

- T10 standard, 25–37
- T11 standard, 16
- tape device persistent binding, 73–75
- To Detect Fabric Devices Visible on a Host, 84
- troubleshooting, multipathing, 97–99

