



Sun Fire™ E25K/E20K Systems

Getting Started

Accessing the Documentation Files

The full documentation set for the Sun Fire E25K/E20K systems is available on the documentation CD.

1. Insert the documentation CD into a CD-ROM or DVD-ROM drive.

- If you are accessing the documentation CD from a Power Macintosh, PC, or if your system is running Volume Manager, the CD-ROM will mount automatically.
- If your system is not running Volume Manager, become superuser and mount the CD-ROM manually by typing:

```
# mkdir -p /cdrom/cdrom0
# mount -o ro -F hsfs /dev/dsk/c0t6d0s2 /cdrom/cdrom0
```

The above command applies to workstations with SCSI drives. If your workstation has an IDE drive, the device is /dev/dsk/c0t2d0s2.

2. Open the cdrom0 directory to access the PDF files with Adobe® Acrobat Reader. If you do not have Adobe Acrobat Reader installed, you can download it at no cost, at:

<http://www.adobe.com/products/acrobat/readstep.html>

List of Sun Fire E25K/E20K Systems Documentation

	System Overview	Sun Fire E25K/E20K Systems Binder Set • <i>Sun Fire E25K/E20K Systems Overview Manual</i>
	Installation	Sun Fire E25K/E20K Systems Binder Set • <i>Sun Fire E25K/E20K Systems Site Planning Guide</i> • <i>Sun Fire E25K/E20K Systems Hardware Installation and De-Installation Guide</i> Other Installation Documents • <i>System Management Services (SMS) Administrator Guide</i> • <i>System Management Services (SMS) Installation Guide</i> • <i>Sun Fire E25K/E20K Systems Read Me First</i> • <i>Sun Fire E25K/E20K Systems Unpacking Guide</i> • <i>Cable Management Guide Sun Fire High-End Server Systems</i> • <i>Sun Fire E25K/E20K Systems Task Map</i> (see Task Map on the following page)
	Administration	Sun Fire E25K/E20K Systems Other Administration Documents • <i>System Management Services (SMS) Administrator Guide</i> • <i>System Management Services (SMS) Reference Manual</i> • <i>Sun Fire High-End System Users Guide</i>
	Hardware Repair	Sun Fire E25K/E20K Systems Binder Set • <i>Sun Fire E25K/E20K Systems Service Manual</i> Other Documents • <i>Sun Fire E25K/E20K Systems Service Reference I-Nomenclature</i> • <i>Sun Fire E25K/E20K Systems Service Reference II-Component Numbering</i> • <i>Sun Fire E25K/E20K Systems Carrier Plate Configurations</i>
	Globalization	Sun Fire E25K/E20K Systems Binder Set • French, Korean, Simplified Chinese, and Traditional Chinese

Installation Task Map for the Sun Fire E25K/E20K Systems



- Step 1** • Verify power, air conditioning, and floor area requirements—Refer to the *Sun Fire E25K/E20K Systems Site Planning Guide*



- Step 2** • Set up cabinet, connect power cables—Refer to the *Sun Fire E25K/E20K Systems Hardware Installation and De-Installation Guide*

- Step 3** • Power on the Sun Fire 25K/20K systems—Refer to the *Sun Fire E25K/E20K Systems Hardware Installation and De-Installation Guide*
• Allow the systems to run through POST and ensure there are no errors, then power off the systems

- Step 4** • Install options and storage devices—Refer to the documentation that came with the option or storage for details

- Step 5** • Power on the Sun Fire 25K/20K systems again—Refer to the *Sun Fire E25K/E20K Systems Hardware Installation and De-Installation Guide*.

- Step 6** • Configure the systems—Refer to the *System Management Services (SMS) Administrator Guide* and the *Sun Fire E25K/E20K Software Overview Guide*

- Step 7** • Install Solaris™ Operating Environment on each domain—Refer to the *Solaris (SPARC Platform Edition) Installation Guide*
• Boot Solaris Operating System on each domain—Refer to the *System Management Services (SMS) Administrator Guide* and the *Sun Fire E25K/E20K Software Overview Guide*

Accessing Sun Documentation

You can view, print, or purchase a broad selection of Sun documentation, including localized versions, at:

<http://www.sun.com/documentation>

Contacting Sun Technical Support

If you have technical questions about this product that are not answered in this document, go to:

<http://www.sun.com/service/contacting>

Sun Welcomes Your Comments

Sun is interested in improving its documentation and welcomes your comments and suggestions. You can submit your comments by going to:

<http://www.sun.com/hwdocs/feedback>

Please include the title and part number of your document with your feedback:

Sun Fire E25K/E20K Systems Getting Started, part number 817-4133-10.

Copyright 2004 Sun Microsystems, Inc. All rights reserved. Use is subject to license terms. Third-party software, including font technology, is copyrighted and licensed from Sun suppliers. Portions may be derived from Berkeley BSD systems, licensed from U. of CA. Sun, Sun Microsystems, the Sun logo, and Solaris are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and in other countries. All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. in the U.S. and in other countries. U.S. Government Rights—Commercial use. Government users are subject to the Sun Microsystems, Inc. standard license agreement and applicable provisions of the FAR and its supplements.

Copyright 2004 Sun Microsystems, Inc. Tous droits réservés. Distribué par des licences qui en restreignent l'utilisation. Le logiciel détenu par des tiers, et qui comprend la technologie relative aux politiques de caractères, est protégé par un copyright et licencié par des fournisseurs de Sun. Des parties de ce produit pourront être dérivées des systèmes Berkeley BSD licenciés par l'Université de Californie. Sun, Sun Microsystems, le logo Sun, et Solaris sont des marques de fabrique ou des marques déposées de Sun Microsystems, Inc. aux Etats-Unis et dans d'autres pays. Toutes les marques SPARC sont utilisées sous licence et sont des marques de fabrique ou des marques déposées de SPARC International, Inc. aux Etats-Unis et dans d'autres pays.



Sun Microsystems, Inc.
www.sun.com