


Sun Fire™ T1000 Server Getting Started Guide

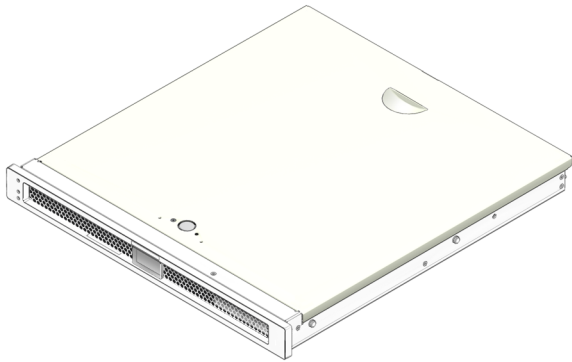

This guide provides basic information about your server, and explains where to find information to get your server up and running quickly.

The following topics are covered:

- [Sun Fire T1000 Server Documentation](#)
- [Important Information About Firmware Updates and Solaris OS Patches](#)
- [Front and Rear Panel Identification](#)

For detailed information, refer to the Sun Fire T1000 server documentation.

Important Information About Firmware Updates and Solaris OS Patches

Before you deploy your server, check for information about recommended updates of the Sun™ System Firmware and Solaris™ Operating System (OS). This information is described in the *Sun Fire T1000 Server Product Notes* (819-3246) that are posted at: <http://www.sun.com/documentation>

Sun Fire T1000 Server Documentation

Instructions for installing, administering, and servicing your server are provided online from the Sun™ documentation web site:


<http://www.sun.com/documentation>

- *Sun Fire T1000 Server Product Notes* (819-3246)
Describes late-breaking information about the server
- *Sun Fire T1000 Server Overview* (819-3245)
Lists product features
- *Sun Fire T1000 Server Site Planning Guide* (819-3749)
Provides server specifications for site planning
- *Sun Fire T1000 Server Installation Guide* (819-3247)
Provides detailed rackmounting, cabling, power on, and configuring information
- *Sun Fire T1000 Server Administration Guide* (819-3249)
Describes how to perform administrative tasks that are specific to this server
- *Advanced Lights Out Manager (ALOM) CMT Guide* (819-6672)
Describes how to use the Advanced Lights Out Manager (ALOM) software
- *Sun Fire T1000 Server Service Manual* (819-3248)
Describes how to run diagnostics to troubleshoot the server, and how to remove and replace parts in the server
- *Sun Fire T1000 Server Safety and Compliance Guide*
Provides safety and compliance information that is specific to this server

For information about the Solaris Operating System that is preinstalled on the server, go to:

<http://www.sun.com/software/preinstall>

Front and Rear Panel Identification

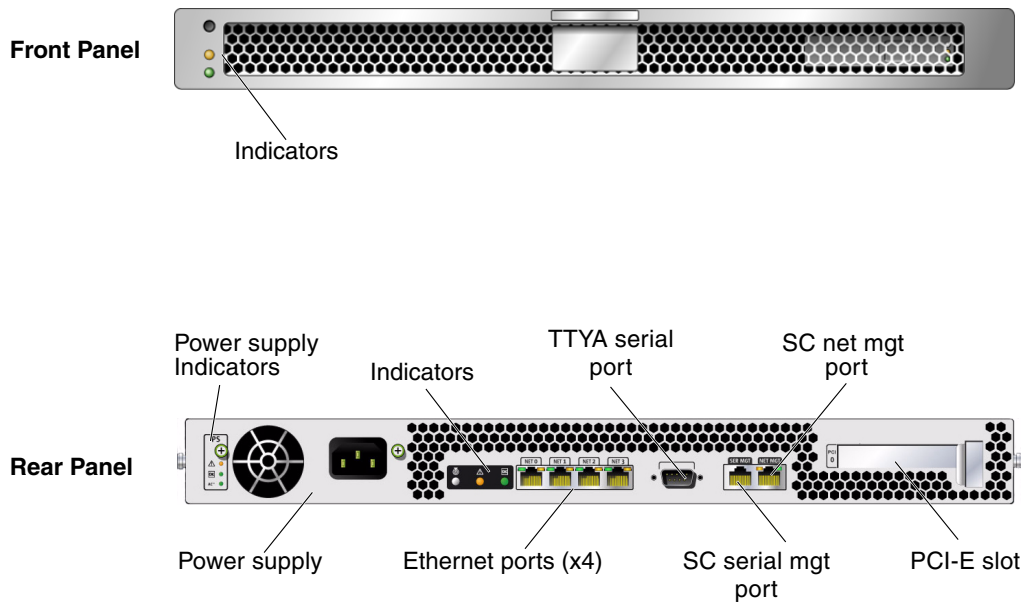

Copyright 2006 Sun Microsystems, Inc. All rights reserved. Use is subject to license terms. Third-party software, including font technology, is copyrighted and licensed from Sun suppliers. Portions may be derived from Berkeley BSD systems, licensed from U. of CA. Sun, Sun Microsystems, the Sun logo, Sun Fire, Java, and Solaris are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and in other countries. All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. in the U.S. and in other countries. U.S. Government Rights—Commercial use. Government users are subject to the Sun Microsystems, Inc. standard license agreement and applicable provisions of the FAR and its supplements.

Copyright 2006 Sun Microsystems, Inc. Tous droits réservés. Distribué par des licences qui en restreignent l'utilisation. Tout logiciel tiers, sa technologie relative aux polices de caractères comprise, est protégé par un copyright et licencié par des fournisseurs de Sun. Des parties de ce produit peuvent dériver des systèmes Berkeley BSD licenciés par l'Université de Californie. Sun, Sun Microsystems, le logo Sun, Sun Fire, Java, et Solaris sont des marques de fabrique ou des marques déposées de Sun Microsystems, Inc. aux États-Unis et dans d'autres pays. Toutes les marques SPARC sont utilisées sous licence et sont des marques de fabrique ou des marques déposées de SPARC International, Inc. aux États-Unis et dans d'autres pays.



Submit comments about this document at: <http://www.sun.com/hwdocs/feedback>

Sun Microsystems, Inc.
www.sun.com

Part No. 819-3244-11, Rev. A
July 2006