

These instructions are for experienced service providers only.

About the Torque Screwdriver

The torque screwdriver is:

- For installing UltraSPARC™ modules only
- Preset to 6 inch-pounds (resets with audible clicking)
- Accurate to within +/- 7%
- Rated for 5,000 operations

Installing UltraSPARC Modules

Screws on the UltraSPARC modules must be tightened to 6 inch-pounds. The torque screwdriver is set to this specification.

Note – To maximize UltraSPARC module performance, install the *first* (or *only*) module in location *PROC 0*. *PROC 1* is for a second module.





Caution – Observe all static safety rules.

- 1. Inspect the UltraSPARC module for dust on the connectors.**
If necessary, *gently* clean the connectors with the dry, stiff toothbrush supplied.
- 2. Inspect the board module mating surfaces.**
If the surface requires cleaning, use the dry, stiff toothbrush.
- 3. Holding the module by the edges, align the hole in the module with the standoff on the board, and align the screws with the board compression connectors.**
- 4. Firmly but gently press the module straight down until the standoff post snaps into place and the module connectors are fully seated.**
- 5. Use the torque screwdriver to *partially tighten* the five 3/32 hex screws in the tightening sequence shown in the adjacent diagram.**

IMPORTANT: *In order*, beginning with screw 1 (as designated in the diagram), *partially tighten* the screws just until they touch the compression connectors.

- 6. Finish the module installation by tightening *all* the screws to 6 inch-pounds in the same tightening sequence.**

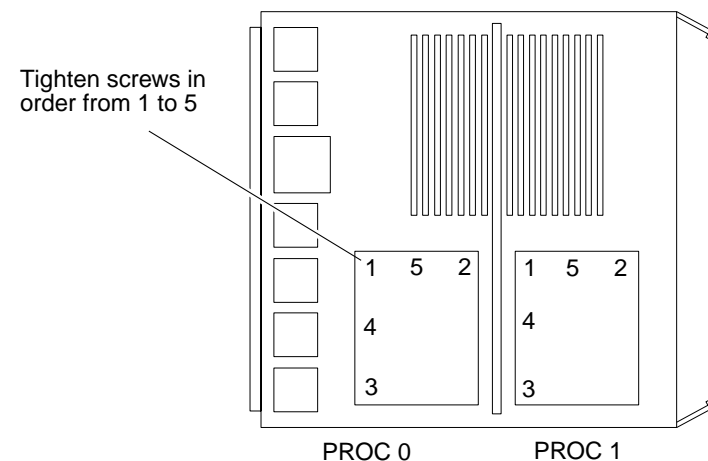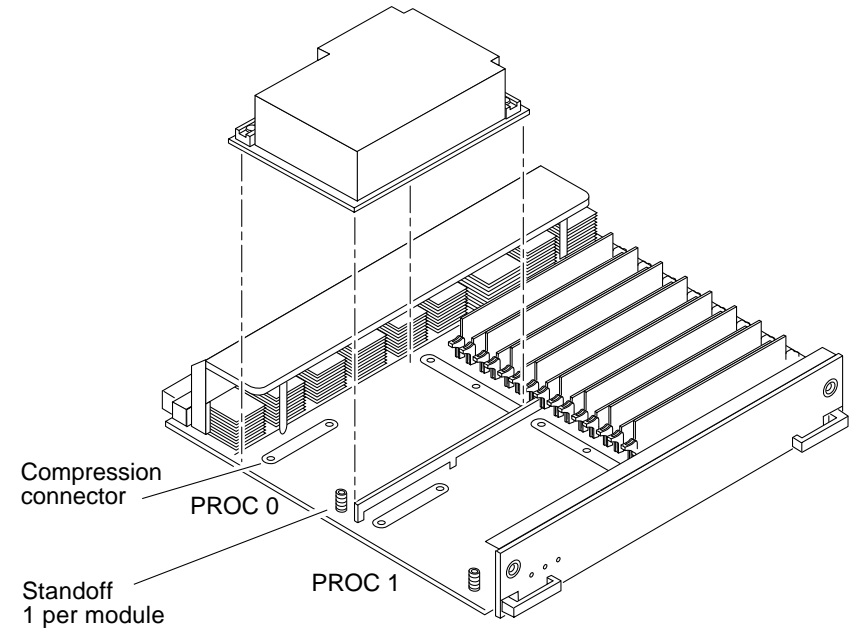

Accessing Sun Documentation Online

A broad selection of Sun system documentation is located at the following web site:

<http://www.sun.com/products-n-solutions/hardware/docs>

To locate the most current documentation at this site, select a product category. The documents at that location may include updated information that did not ship with your product, such as product notes, release notes, late-breaking news, or later revisions of manuals.

Ordering Sun Documentation

Fatbrain.com, an Internet professional bookstore, stocks select product documentation from Sun Microsystems, Inc. For a list of documents and how to order them, visit the Sun Documentation Center on Fatbrain.com at:

<http://www.fatbrain.com/documentation/sun>

Sun Welcomes Your Comments

Sun is interested in improving its documentation and welcomes your comments and suggestions. You can email your comments to Sun at:

docfeedback@sun.com

Please include the part number (816-1736-10) of the document in the subject line of your email.

Copyright 2001 Sun Microsystems, Inc. All rights reserved. Use is subject to license terms. Third-party software, including font technology, is copyrighted and licensed from Sun suppliers. Sun, Sun Microsystems, the Sun Logo, AnswerBook2, docs.sun.com, Sun Enterprise, UltraSPARC, and Solaris are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

RESTRICTED RIGHTS: Use, duplication, or disclosure by the U.S. Federal Acquisitions: Commercial Software—Government Users Subject to Standard License Terms and Conditions. Federal Acquisitions: Commercial Software—Government Users Subject to Standard License Terms and Conditions.

Copyright 2001 Sun Microsystems, Inc. Tous droits réservés. Distribué par des licences qui en restreignent l'utilisation. Le logiciel détenu par des tiers, et qui comprend la technologie relative aux polices de caractères, est protégé par un copyright et licencié par des fournisseurs de Sun. Sun, Sun Microsystems, le logo Sun, AnswerBook2, docs.sun.com, UltraSPARC, et Solaris sont des marques de fabrique ou des marques déposées de Sun Microsystems, Inc. aux Etats-Unis et dans d'autres pays.

Please Recycle Sun Microsystems, Inc. • 901 San Antonio Road • Palo Alto, CA 94303-4900
USA • 650 960-1300 • Fax 650 969-9131

Part Number: 816-1736-10
July 2001, Revision A



Sun Enterprise™ 6x00, 5x00, 4x00, and 3x00 Systems Torque Screwdriver for UltraSPARC™ Module Installation Guide

