


---

Air baffles are required when there are three or four Sun™ Enterprise™ 4000 or 4500 servers in a Sun Enterprise Expansion Cabinet. There are two sizes of baffles: a short baffle and a tall baffle. The configurations requiring baffles use differing numbers of each size baffle as listed in the table that follows. If the cabinet contains fewer than three chassis, an air baffle is not required.

| Number of 4x00 Chassis | Number of Short Baffles | Number of Tall Baffles |
|------------------------|-------------------------|------------------------|
| 3                      | 2                       | 1                      |
| 4                      | 1                       | 0                      |

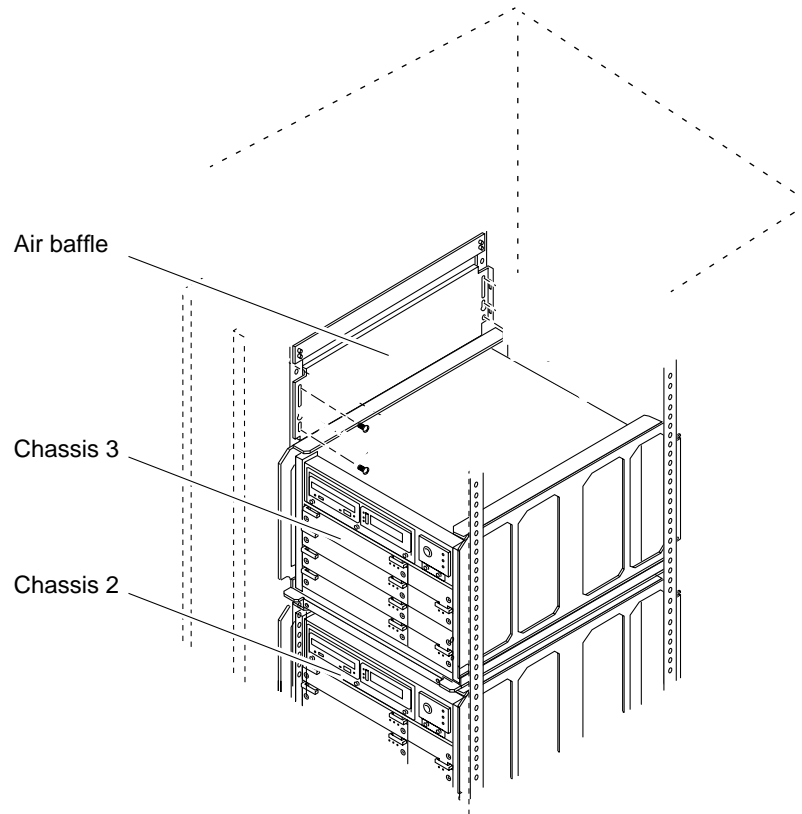

---

The Sun Enterprise 4x00 must be mounted in the expansion cabinet starting from the bottom of the cabinet. Refer to the *Rackmount Placement Matrix* to verify that the chassis have been installed at the correct height. The document is accessible on the Web at <http://docs.sun.com> in the *Hardware* section under *Storage and Peripherals*. If you do not have access to the Web, contact your Sun™ service representative for the correct mounting holes. When the expansion cabinet contains three chassis, there should be approximately 1 inch (2.5 cm) of space between each pair of chassis. It is not necessary to seal these air gaps.

## Inventory

Each kit contains:

- 1 Air baffle plate
- 4 Screws

## Installing an Air Baffle

---

**Note** – If the top chassis is not mounted as specified in the *Rackmount Placement Matrix*, the air baffle or baffles will not fit properly.

---

1. Orient the air baffle with the slotted flange toward the rear of the cabinet and to the right.
2. Secure the air baffle in place with two screws at the front and two screws at the rear.

---

## Sun Documentation on the Web

The docs.sun.com web site enables you to access Sun technical documentation on the Web. You can browse the docs.sun.com archive or search for a specific book title or subject at:

<http://docs.sun.com>

## Sun Welcomes Your Comments

We are interested in improving our documentation and welcome your comments and suggestions. You can email your comments to us at:

[smcc-docs@sun.com](mailto:smcc-docs@sun.com)

Please include the part number of your document in the subject line of your email.

Copyright 1998 Sun Microsystems, Inc. All rights reserved. Use is subject to license terms. Third-party software, including font technology, is copyrighted and licensed from Sun suppliers. Sun, Sun Microsystems, the Sun Logo, SunDocs, and Solaris are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. **RESTRICTED RIGHTS:** Use, duplication, or disclosure by the U.S. Government is subject to restrictions of FAR 52.227-14(g)(2)(6/87) and FAR 52.227-19(6/87), or DFAR 252.227-7015(b)(6/95) and DFAR 227.7202-3(a).

Copyright 1998 Sun Microsystems, Inc. Tous droits réservés. Distribué par des licences qui en restreignent l'utilisation. Le logiciel détenu par des tiers, et qui comprend la technologie relative aux polices de caractères, est protégé par un copyright et licencié par des fournisseurs de Sun. Sun, Sun Microsystems, le logo Sun, SunDocs, et Solaris sont des marques de fabrique ou des marques déposées de Sun Microsystems, Inc. aux Etats-Unit et dans d'autres pays.



---

## Sun™ Enterprise™ 4x00 Air Baffle Installation Guide

