



# Netra™ 1290 Server Getting Started Guide

## Shipping Kit Contents

Your shipping kit should contain the following items:

- *Netra 1290 Server Getting Started Guide* (this document)
- Rackmount kit:
  - Slide assemblies with mounting brackets (2)
  - No. 10-32 UNF screws with washers (8)
  - M6 screws with washers (8)
- Cable management arm (CMA-800)
- Lite cable management arm (CMA-Lite)
- Ethernet/serial cables (4)
- Antistatic wrist strap and snap-on converter
- RJ-45 to DB-25 male adapter
- RJ-45 to DB-9 female adapter
- Unpacking tools:
  - 13 mm wrench
  - 8 mm wrench

## Setting Up the Netra 1290 Server

The following list summarizes the tasks to set up your Netra 1290 server:

1. Verify power, air conditioning, and floor area requirements.
2. Set up the Sun™ Rack and connect the power cables. Refer to the *Sun Rack Installation Guide*.
3. Unpack the Netra 1290 server and install it into the rack. Refer to the *Netra 1290 Server Installation Guide*, 819-4372.
4. Power on the Sun Rack. Refer to the *Sun Rack Installation Guide*.
5. Connect an administrative console to access the system controller and power on the Netra 1290 server. Refer to the *Netra 1290 Server Installation Guide*, 819-4372.
6. Allow the server to run through POST and ensure there are no errors, then power off the server. Refer to the *Netra 1290 Server System Administration Guide*, 819-4374, if there are errors.
7. (Optional) Install options and storage devices. Refer to the *Netra 1290 Server Service Manual*, 819-4373, and documentation that came with the option or storage device for details.
8. Power on the Netra 1290 server, and configure the system. Refer to the *Netra 1290 Server System Administration Guide*, 819-4374
9. (Optional) Create additional domains. Refer to the *Netra 1290 Server System Administration Guide*, 819-4374.
  - a. Install the Solaris™ software on each domain. Refer to the *Solaris Installation Guide*.
  - b. Boot the Solaris software on each domain. Refer to the *Netra 1290 Server System Administration Guide*, 819-4374.



## Accessing Netra 1290 Server Documentation

The Netra 1290 server documentation is available online at the following URL:

<http://www.sun.com/documentation>

## Contacting Sun Technical Support

If you have technical questions about this product that are not answered in the Netra 1290 server documentation, go to:

<http://www.sun.com/service/contacting>

## Sun Welcomes Your Comments

Sun is interested in improving its documentation and welcomes your comments and suggestions. You can submit your comments by going to:

<http://www.sun.com/hwdocs/feedback>

Please include the title and part number of your document with your feedback:

*Netra 1290 Server Getting Started Guide*, part number 819-4378-10.

Copyright 2006 Sun Microsystems, Inc. All rights reserved. Use is subject to license terms. Third-party software, including font technology, is copyrighted and licensed from Sun suppliers. Portions may be derived from Berkeley BSD systems, licensed from U. of CA. Sun, Sun Microsystems, the Sun logo, Netra, and Solaris are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and in other countries. All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. in the U.S. and in other countries.

U.S. Government Rights—Commercial use. Government users are subject to the Sun Microsystems, Inc. standard license agreement and applicable provisions of the FAR and its supplements.

Copyright 2006 Sun Microsystems, Inc. Tous droits réservés. Distribué par des licences qui en restreignent l'utilisation. Le logiciel détenu par des tiers, et qui comprend la technologie relative aux polices de caractères, est protégé par un copyright et licencié par des fournisseurs de Sun. Des parties de ce produit pourront être dérivées des systèmes Berkeley BSD licenciés par l'Université de Californie. Sun, Sun Microsystems, le logo Sun, Netra, et Solaris sont des marques de fabrique ou des marques déposées de Sun Microsystems, Inc. aux Etats-Unis et dans d'autres pays. Toutes les marques SPARC sont utilisées sous licence et sont des marques de fabrique ou des marques déposées de SPARC International, Inc. aux Etats-Unis et dans d'autres pays.



Sun Microsystems, Inc.  
[www.sun.com](http://www.sun.com)