



Sun Fire™ V20z and Sun Fire V40z Servers

Guide for Pre-Installed Solaris™ 10
Operating System

Sun Microsystems, Inc.
www.sun.com

Part No. 819-1811-10
March 2005, Revision A

Submit comments about this document at: <http://www.sun.com/hwdocs/feedback>

Copyright 2005 Sun Microsystems, Inc., 4150 Network Circle, Santa Clara, California 95054, U.S.A. All rights reserved.

Sun Microsystems, Inc. has intellectual property rights relating to technology that is described in this document. In particular, and without limitation, these intellectual property rights may include one or more of the U.S. patents listed at <http://www.sun.com/patents> and one or more additional patents or pending patent applications in the U.S. and in other countries.

This document and the product to which it pertains are distributed under licenses restricting their use, copying, distribution, and decompilation. No part of the product or of this document may be reproduced in any form by any means without prior written authorization of Sun and its licensors, if any.

Third-party software, including font technology, is copyrighted and licensed from Sun suppliers.

Parts of the product may be derived from Berkeley BSD systems, licensed from the University of California. UNIX is a registered trademark in the U.S. and in other countries, exclusively licensed through X/Open Company, Ltd.

Sun, Sun Microsystems, the Sun logo, AnswerBook2, docs.sun.com, Sun Fire and Solaris are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and in other countries.

All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. in the U.S. and in other countries. Products bearing SPARC trademarks are based upon an architecture developed by Sun Microsystems, Inc.

The OPEN LOOK and Sun™ Graphical User Interface was developed by Sun Microsystems, Inc. for its users and licensees. Sun acknowledges the pioneering efforts of Xerox in researching and developing the concept of visual or graphical user interfaces for the computer industry. Sun holds a non-exclusive license from Xerox to the Xerox Graphical User Interface, which license also covers Sun's licensees who implement OPEN LOOK GUIs and otherwise comply with Sun's written license agreements.

U.S. Government Rights—Commercial use. Government users are subject to the Sun Microsystems, Inc. standard license agreement and applicable provisions of the FAR and its supplements.

DOCUMENTATION IS PROVIDED "AS IS" AND ALL EXPRESS OR IMPLIED CONDITIONS, REPRESENTATIONS AND WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT, ARE DISCLAIMED, EXCEPT TO THE EXTENT THAT SUCH DISCLAIMERS ARE HELD TO BE LEGALLY INVALID.

Copyright 2005 Sun Microsystems, Inc., 4150 Network Circle, Santa Clara, California 95054, États-Unis. Tous droits réservés.

Sun Microsystems, Inc. a les droits de propriété intellectuelle relatants à la technologie qui est décrite dans ce document. En particulier, et sans la limitation, ces droits de propriété intellectuelle peuvent inclure un ou plus des brevets américains énumérés à <http://www.sun.com/patents> et un ou les brevets plus supplémentaires ou les applications de brevet en attente aux États-Unis et dans les autres pays.

Ce produit ou document est protégé par un copyright et distribué avec des licences qui en restreignent l'utilisation, la copie, la distribution et la décompilation. Aucune partie de ce produit ou document ne peut être reproduite sous aucune forme, par quelque moyen que ce soit, sans l'autorisation préalable et écrite de Sun et de ses bailleurs de licence, s'il y en a.

Le logiciel détenu par des tiers, et qui comprend la technologie relative aux polices de caractères, est protégé par un copyright et licencié par des fournisseurs de Sun.

Des parties de ce produit pourront être dérivées des systèmes Berkeley BSD licenciés par l'Université de Californie. UNIX est une marque déposée aux États-Unis et dans d'autres pays et licenciée exclusivement par X/Open Company, Ltd.

Sun, Sun Microsystems, le logo Sun, Solaris et Sun Fire sont des marques de fabrique ou des marques déposées de Sun Microsystems, Inc. aux États-Unis et dans d'autres pays.

Toutes les marques SPARC sont utilisées sous licence et sont des marques de fabrique ou des marques déposées de SPARC International, Inc. aux États-Unis et dans d'autres pays. Les produits portant les marques SPARC sont basés sur une architecture développée par Sun Microsystems, Inc.

L'interface d'utilisation graphique OPEN LOOK et Sun a été développée par Sun Microsystems, Inc. pour ses utilisateurs et licenciés. Sun reconnaît les efforts de pionniers de Xerox pour la recherche et le développement du concept des interfaces d'utilisation visuelle ou graphique pour l'industrie de l'informatique. Sun détient une licence non exclusive de Xerox sur l'interface d'utilisation graphique Xerox, cette licence couvrant également les licenciées de Sun qui mettent en place l'interface d'utilisation graphique OPEN LOOK et qui en outre se conforment aux licences écrites de Sun.

LA DOCUMENTATION EST FOURNIE «EN L'ÉTAT» ET TOUTES AUTRES CONDITIONS, DÉCLARATIONS ET GARANTIES EXPRESSES OU TACITES SONT FORMELLEMENT EXCLUES, DANS LA MESURE AUTORISÉE PAR LA LOI APPLICABLE, Y COMPRIS NOTAMMENT TOUTE GARANTIE IMPLICITE RELATIVE À LA QUALITÉ MARCHANDE, À L'APTITUDE À UNE UTILISATION PARTICULIÈRE OU À L'ABSENCE DE CONTREFAÇON.



Contents

Preface v

Related Documentation v

Accessing Sun Documentation vi

Contacting Sun Technical Support vi

Sun Welcomes Your Comments vi

Configuring the Pre-Installed Solaris™ 10 Operating System 1

Worksheet for Installation 1

Before You Start 3

Service Processor 3

Configuring the Pre-Installed Solaris 10 Operating System 4

User Documentation 6

Removing the Pre-Installed Solaris 10 OS from the Server 6

Downloading Solaris 10 OS 6

Preface

This document contains instructions for configuring the Solaris 10 operating system on a Sun Fire V20z and V40z server.

Related Documentation

Application	Title	Part Number
Installation	<i>Sun Fire V20z and Sun Fire V40z Servers—Installation Guide</i>	817-5246-xx
Service	<i>Sun Fire V20z and Sun Fire V40z Servers—User Guide</i>	817-5248-xx
Server Management	<i>Sun Fire V20z and Sun Fire V40z Servers—Server Management Guide</i>	817-5249-xx
Linux OS Installation	<i>Sun Fire V20z and Sun Fire V40z Servers—Linux OS Installation Guide</i>	817-5250-xx
Troubleshooting	<i>Sun Fire V20z and Sun Fire V40z Servers—Troubleshooting Techniques and Diagnostics Guide</i>	817-7184-xx
Late-breaking information	<i>Sun Fire V20z and Sun Fire V40z Servers—Release Notes</i>	819-1771-xx

Accessing Sun Documentation

You can view, print, or purchase a broad selection of Sun documentation, including localized versions, at:

<http://www.sun.com/documentation>

Contacting Sun Technical Support

If you have technical questions about this product that are not answered in this document, go to:

<http://www.sun.com/service/contacting>

Sun Welcomes Your Comments

Sun is interested in improving its documentation and welcomes your comments and suggestions. You can submit your comments by going to:

<http://www.sun.com/hwdocs/feedback>

Please include the title and part number of your document with your feedback:

Sun Fire V20z and Sun Fire V40z Servers—Guide for Pre-Installed Solaris 10 OS, part number 819-1811-10

Configuring the Pre-Installed Solaris™ 10 Operating System

This guide walks you through the steps for configuring the Solaris™ 10 Operating System (OS) that has been pre-installed on your Sun Fire™ V20z or Sun Fire V40z server. These steps include:

1. Logging on to the Service Processor (SP) and setting up the Serial-over-LAN option for console output.
2. Configuring the Solaris 10 OS that is pre-installed on your server.

Worksheet for Installation

Use the following worksheet to gather the information that you need to install the Solaris 10 OS.

You do not need to gather all of the information that is requested on the worksheet. You only need to collect the information that applies to your system.

TABLE 1 Worksheet for Installation

Info Needed to Install	Description/Example	Your Answers:
Network	Is the system connected to a network?	Yes/No
Network interfaces	Which network interfaces are connected to the system?	
DHCP	Can the system use Dynamic Host Configuration Protocol (DHCP) to configure its network interfaces?	Yes/No

TABLE 1 Worksheet for Installation (*Continued*)

Info Needed to Install	Description/Example	Your Answers:
Host Name	If you are not using DHCP, supply a host name that you choose for the system.	
IP Address	If you are not using DHCP, supply the IP address for the system. Example: 129.200.9.1	
Subnet	If you are not using DHCP, is the system part of a subnet? If yes, what is the netmask of the subnet? Example: 255.255.0.0	Yes/No
IPv6	Do you want to enable IPv6 on this machine?	Yes/No
Default Route <i>NOTE: This option appears only if you choose to assign a static IP address to the server.</i>	Do you want to specify a default route IP address or let the Solaris Web Start installation program or Solaris suninstall program find one? The default route provides a bridge that forwards traffic between two physical networks. An IP address is a unique number that identifies each host on a network. You have the following choices: You can specify the IP address. An <code>/etc/defaultrouter</code> file is created with the specified IP address. When the system is rebooted, the specified IP address becomes the default route. You can let the software detect an IP address The Solaris suninstall program detects an IP address when the system is rebooted. You can choose None if you do not have a router or do not want the software to detect an IP address at this time. The software automatically tries to detect an IP address on reboot. Host IP address:	<ul style="list-style-type: none"> • Specify One • Detect One • None
Time Zone	How do you want to specify your default time zone?	<ul style="list-style-type: none"> • Geographic region • Offset from GM • Time zone file
Root Password	Choose a root password for the system.	

Before You Start

Note – Visit the Web site to ensure that you have the most recent version of the user documentation for the Sun Fire V20z and Sun Fire V40z servers:

http://www.sun.com/products-n-solutions/hardware/docs/Servers/Workgroup_Servers/Sun_Fire_V20z/index.html

● **You must first perform the initial setup of the Service Processor (SP).**

To do so, refer to the two following sections in the *Sun Fire V20z and Sun Fire V40z Servers—Server Management Guide* (817-5249). (This guide is included on your Sun Fire V20z and Sun Fire V40z Servers—Documentation and Support Files CD.)

In Chapter 1, under the heading “Initial Setup of the Service Processor”

- “Part I: Assigning Network Settings to the SP”
- “Part II: Securing the SP”

Service Processor

Note – For a complete list of commands and options available on the SP, refer to the appendices in the *Sun Fire V20z and Sun Fire V40z Servers—Server Management Guide* (817-5249).

The Sun Fire V20z and Sun Fire V40z servers include a dedicated chipset for complete OS independence and maximum availability of server-management functions. This chipset, called Service Processor (SP), is an embedded PowerPC chip providing the following:

- Environmental monitoring of the platform (such as temperatures, voltages, fan speeds and panel switches)
- Alert messages when problems occur
- Remote control of server operations (boot, shutdown and reboot of the server’s operating system, turning the server’s power on and off, stopping the server’s boot process in BIOS, and upgrading the BIOS)

Configuring the Pre-Installed Solaris 10 Operating System

Note – Before you perform this procedure, you need to perform the initial setup of the Service Processor. If you have not done so, see [“Before You Start” on page 3](#).

Gather information on your system and network as shown in the [“Worksheet for Installation” on page 1](#), and use this information as you proceed through the configuration.

1. Using an SSHv1 or SSHv2 client, connect to the IP address of the SP on your Sun Fire V20z or Sun Fire V40z server.
2. Log in to the SP with the *user account* that you previously created.
3. Enable the Serial-over-LAN feature on the SP by running the following command:

```
# platform set console -s sp -e -S 9600
```

Note – Ensure that the baud rate value passed to the `-S` argument matches the speed that was specified for the serial-redirection feature of the BIOS and the speed used for your boot loader and OS configuration.

The default baud rate in the BIOS settings is 9600.

Note – By default, the pre-installed Solaris 10 OS image is configured to send output to the serial port.

4. At the prompt, run the following command:

```
# platform console
```
5. Power on the platform by pressing the platform-power button on the front panel. You should see the POST messages on your screen as the OS boots up.

Note – If you do not see the messages on your screen, the Serial-over-LAN feature may not be configured correctly.

Verify first that you correctly entered the command and options shown in [Step 3](#).

6. Choose the terminal type when prompted.

If prompted, confirm your selection(s).

7. Press Esc+2 to continue.

8. Follow the on-screen prompts.

9. Use the information in “[Worksheet for Installation](#)” on page 1 to help you fill out the system and network information as prompted.

The screens that display will vary, depending on the method that you chose for assigning network information to the server (DHCP or static IP address).

After you have entered the system-configuration information, the server completes the boot process and displays the Solaris login prompt.

Resetting the Console Output to the Video Port



Caution – This step is intended for advanced users of Solaris only.

You can seriously disrupt the proper functioning of the server or render the server unbootable if you introduce a problem in the `bootenv.rc` file.

10. (optional) While logged in to the SP, if you wish to re-direct the console output to the video port, run the `eeeprom` command at the prompt with the following arguments:

```
eeeprom output-device=screen
```

```
eeeprom input-device=keyboard
```

User Documentation

You can access the various collections of the Solaris 10 OS user documentation at

<http://docs.sun.com/app/docs/prod/solaris.10#hic>

Specifically, you can access the Solaris 10 OS Release and Installation Collection at

<http://docs.sun.com/app/docs/coll/1236.1?q=Solaris+10>

Removing the Pre-Installed Solaris 10 OS from the Server

If you wish to remove the pre-installed version of the Solaris 10 OS from your server, use the Sun Installation Assistant for Sun Fire V20z and Sun Fire V40z Servers CD-ROM. This CD-ROM is included in the accessory box for your server.

The Sun Installation Assistant CD-ROM helps you to install a supported Linux operating system (OS). As part of this installation, you can remove an existing OS from your hard disk drive.

For more information on the Sun Installation Assistant CD-ROM, refer to Chapter 2 in the *Sun Fire V20z and Sun Fire V40z Servers—Linux Operating System Installation Guide* (817-5250).

Downloading Solaris 10 OS

If you need to re-install Solaris 10 after removing it, you can download the Solaris 10 OS or order the Solaris 10 OS media kit.

For more information, go to the following URL:

<http://www.sun.com/software/solaris/index.jsp>