


# 4U Express Rail Rackmounting Kit

NOTE: Kit can be used with both square- and round-hole racks.

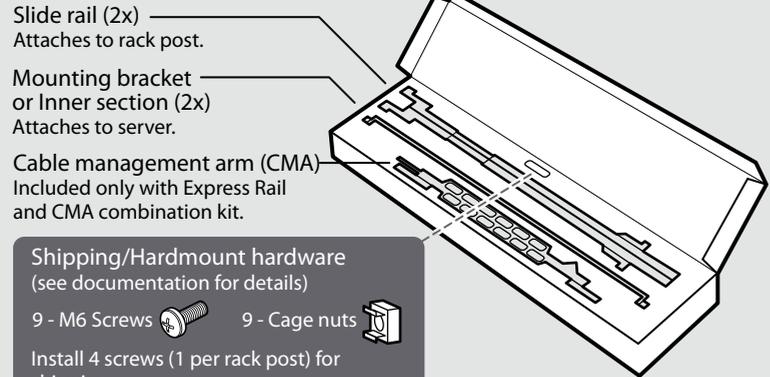

Shipping/Hardmount hardware (see documentation for details)

9 - M6 Screws    9 - Cage nuts

Install 4 screws (1 per rack post) for shipping.  
Install 8 screws (2 per rack post) for hardmount.  
Cage nuts required for shipping in square-hole racks.

## Installation

- Attach 2 mounting brackets to server. Press in center of bracket to aid attachment.
- Use installation card to determine server and outer slide rail placement.
- Orient slide rail with ball bearing track at front.
- Extend slide rail to fit rack and attach. Verify rail is firmly in place. Repeat procedure 3 and 4 for other slide rail.
- Use at least 2 people to lift and insert server approximately 1/2 way into rack.
1. Slide green release tabs on both sides of server.  
2. Push server into rack.

**CAUTION**  
Tip Hazard  
If available, extend anti-tilt bar or anti-tilt legs before installing server.

For shipping or hardmount in a square-hole rack, place cage nuts prior to mounting slide rail.

press    Click!    Click!    front    ball bearing track    middle section

## Removal

- Remove cables at rear of server, and if present, disengage CMA.
- Squeeze green levers and fully extend server.
- Slide gray tabs on both sides to release server from slide rails.
- Use at least 2 people to remove server from rack.
- Push green metal lever and slide rail middle section into rack.
1. Push upper and lower grey levers.  
2. Pull slide rails outward and away from retma rails to remove.  
3. Repeat for rear attachment.  
4. Repeat for other side.
- Remove both mounting brackets from server. (1) lift clip and (2) slide bracket back.


**CAUTION**  
Tip Hazard  
If available, extend anti-tilt bar or anti-tilt legs before extending server.

clip    2

4U Express Rail Rackmounting Kit PDF 820-4079-11

## Cable Management Arm (CMA)

Included only with Express Rail and CMA combination kit.

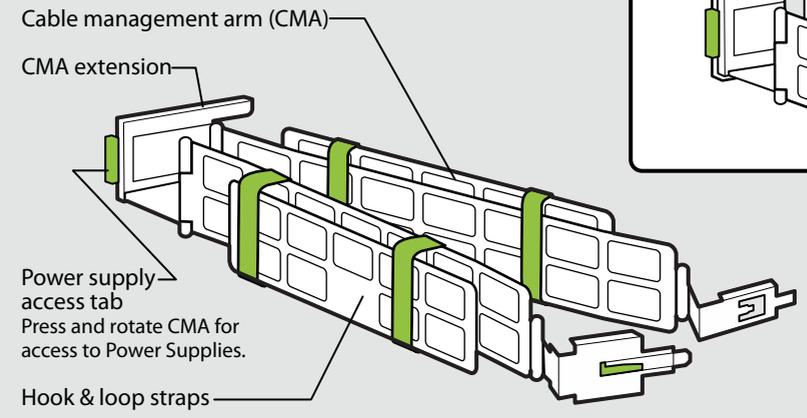

## CMA Installation

- Remove tape to separate parts.
- Attach CMA extension to left rear of rack rail.
- Attach right inner latch to right rear of rack rail.
- Attach right outer latch.
- Attach support latch to left CMA extension.
- Mount cables.
- IMPORTANT:** Verify CMA operation by carefully pulling server out of rack. Readjust any cables as needed to insure smooth operation with no cable binding or tightness.

tape    CMA extension    inner latch    outer latch    support latch    open

Slide Rail Position

For square-hole racks, install cage nuts prior to mounting slide rail for shipping or hardmount.

For square-hole racks, install cage nuts prior to mounting slide rail for shipping or hardmount.

Slide Rail Position



100%