



# SunVTS™ 5.1 Test Reference Manual

---

Sun Microsystems, Inc.  
4150 Network Circle  
Santa Clara, CA 95054 U.S.A.  
650-960-1300

Part No. 816-5145-10  
September 2002, Revision B

Send comments about this document to: [docfeedback@sun.com](mailto:docfeedback@sun.com)

Copyright 2002 Sun Microsystems, Inc., 4150 Network Circle, Santa Clara, California 95054, U.S.A. All rights reserved.

Sun Microsystems, Inc. has intellectual property rights relating to technology embodied in the product that is described in this document. In particular, and without limitation, these intellectual property rights may include one or more of the U.S. patents listed at <http://www.sun.com/patents>, and one or more additional patents or pending patent applications in the U.S. and in other countries.

This document and the product to which it pertains are distributed under licenses restricting their use, copying, distribution, and decompilation. No part of the product or of this document may be reproduced in any form by any means without prior written authorization of Sun and its licensors, if any.

Third-party software, including font technology, is copyrighted and licensed from Sun suppliers.

Parts of the product may be derived from Berkeley BSD systems, licensed from the University of California. UNIX is a registered trademark in the U.S. and other countries, exclusively licensed through X/Open Company, Ltd.

Sun, Sun Microsystems, the Sun logo, AnswerBook2, docs.sun.com, SunVTS, and Solaris are trademarks, registered trademarks, or service marks of Sun Microsystems, Inc. in the U.S. and other countries.

All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. in the U.S. and other countries. Products bearing SPARC trademarks are based upon an architecture developed by Sun Microsystems, Inc.

The OPEN LOOK and Sun™ Graphical User Interface was developed by Sun Microsystems, Inc. for its users and licensees. Sun acknowledges the pioneering efforts of Xerox in researching and developing the concept of visual or graphical user interfaces for the computer industry. Sun holds a non-exclusive license from Xerox to the Xerox Graphical User Interface, which license also covers Sun's licensees who implement OPEN LOOK GUIs and otherwise comply with Sun's written license agreements.

Use, duplication, or disclosure by the U.S. Government is subject to restrictions set forth in the Sun Microsystems, Inc. license agreements and as provided in DFARS 227.7202-1(a) and 227.7202-3(a) (1995), DFARS 252.227-7013(c)(1)(ii) (Oct. 1998), FAR 12.212(a) (1995), FAR 52.227-19, or FAR 52.227-14 (ALT III), as applicable.

DOCUMENTATION IS PROVIDED "AS IS" AND ALL EXPRESS OR IMPLIED CONDITIONS, REPRESENTATIONS AND WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT, ARE DISCLAIMED, EXCEPT TO THE EXTENT THAT SUCH DISCLAIMERS ARE HELD TO BE LEGALLY INVALID.

---

Copyright 2002 Sun Microsystems, Inc., 4150 Network Circle, Santa Clara, California 95054, Etats-Unis. Tous droits réservés.

Sun Microsystems, Inc. a les droits de propriété intellectuelle relatant à la technologie incorporée dans le produit qui est décrit dans ce document. En particulier, et sans la limitation, ces droits de propriété intellectuelle peuvent inclure un ou plus des brevets américains énumérés à <http://www.sun.com/patents> et un ou les brevets plus supplémentaires ou les applications de brevet en attente dans les Etats-Unis et dans les autres pays.

Ce produit ou document est protégé par un copyright et distribué avec des licences qui en restreignent l'utilisation, la copie, la distribution, et la décompilation. Aucune partie de ce produit ou document ne peut être reproduite sous aucune forme, par quelque moyen que ce soit, sans l'autorisation préalable et écrite de Sun et de ses bailleurs de licence, s'il y ena.

Le logiciel détenu par des tiers, et qui comprend la technologie relative aux polices de caractères, est protégé par un copyright et licencié par des fournisseurs de Sun.

Des parties de ce produit pourront être dérivées des systèmes Berkeley BSD licenciés par l'Université de Californie. UNIX est une marque déposée aux Etats-Unis et dans d'autres pays et licenciée exclusivement par X/Open Company, Ltd.

Sun, Sun Microsystems, le logo Sun, AnswerBook2, docs.sun.com, SunVTS, et Solaris sont des marques de fabrique ou des marques déposées de Sun Microsystems, Inc. aux Etats-Unis et dans d'autres pays.

Toutes les marques SPARC sont utilisées sous licence et sont des marques de fabrique ou des marques déposées de SPARC International, Inc. aux Etats-Unis et dans d'autres pays. Les produits portant les marques SPARC sont basés sur une architecture développée par Sun Microsystems, Inc.

L'interface d'utilisation graphique OPEN LOOK et Sun™ a été développée par Sun Microsystems, Inc. pour ses utilisateurs et licenciés. Sun reconnaît les efforts de pionniers de Xerox pour la recherche et le développement du concept des interfaces d'utilisation visuelle ou graphique pour l'industrie de l'informatique. Sun détient une licence non exclusive de Xerox sur l'interface d'utilisation graphique Xerox, cette licence couvrant également les licenciées de Sun qui mettent en place l'interface d'utilisation graphique OPEN LOOK et qui en outre se conforment aux licences écrites de Sun.

LA DOCUMENTATION EST FOURNIE "EN L'ÉTAT" ET TOUTES AUTRES CONDITIONS, DECLARATIONS ET GARANTIES EXPRESSES OU TACITES SONT FORMELLEMENT EXCLUES, DANS LA MESURE AUTORISEE PAR LA LOI APPLICABLE, Y COMPRIS NOTAMMENT TOUTE GARANTIE IMPLICITE RELATIVE A LA QUALITE MARCHANDE, A L'APTITUDE A UNE UTILISATION PARTICULIERE OU A L'ABSENCE DE CONTREFAÇON.



Adobe PostScript

# Contents

---

<b>Preface</b>	<b>xvii</b>
<b>1. Introduction</b>	<b>1</b>
Test Requirements	2
Collection of SunVTS Tests	2
32-Bit and 64-Bit Tests	3
SunVTS User Interfaces	3
Running a Test From a User Interface	4
Running a Test From the Command Line	6
Testing Frame Buffers	8
Testing Multiple Frame Buffers	9
Remote Testing of Frame Buffers	10
<b>2. Advanced Frame Buffer Test (afbtest)</b>	<b>11</b>
afbtest Test Requirements	11
afbtest Options	12
afbtest Test Modes	19
afbtest Command-Line Syntax	20
<b>3. Alarm Card Test (alarmtest)</b>	<b>23</b>
alarmtest Subtests	23

alarmtest Options	24
alarmtest Loopbacks	27
alarmtest Test Modes	27
alarmtest Command-Line Syntax	27
<b>4. SunATM Adapter Test (atmtest)</b>	<b>31</b>
atmtest Test Requirements	31
atmtest Options	32
atmtest Test Modes	35
atmtest Command-Line Syntax	35
<b>5. Audio Test (audiotest)</b>	<b>37</b>
audiotest Subtests	38
audiotest Options	39
audiotest Test Modes	41
audiotest Command-Line Syntax	41
<b>6. Bidirectional Parallel Port Printer Test (bpptest)</b>	<b>45</b>
bpptest Hardware and Software Requirements	45
bpptest Options	46
bpptest Test Modes	47
bpptest Command-Line Syntax	47
<b>7. Compact Disc Test (cdtest)</b>	<b>49</b>
Volume Management and Compact Discs	49
cdtest Options	50
cdtest Test Modes	52
cdtest Command-Line Syntax	53
<b>8. Color Graphics Frame Buffer Test (cg14test)</b>	<b>55</b>
cg14test Requirements	55

cg14test Groups	55
cg14test Options	64
cg14test Test Modes	65
cg14test Command-Line Syntax	66
<b>9. Frame Buffer, GX, GXplus, and TurboGX Options Test (cg6)</b>	<b>67</b>
cg6 Subtests	68
cg6 Options	69
cg6 Test Modes	70
cg6 Command-Line Syntax	71
<b>10. CPU Test (cputest)</b>	<b>73</b>
cputest Options	74
cputest Test Modes	77
cputest Command-Line Syntax	77
<b>11. CPU Power Management Test (cpupmtest)</b>	<b>79</b>
cpupmtest Options	79
cpupmtest Test Modes	81
cpupmtest Command-Line Syntax	81
<b>12. Disk and Floppy Drives Test (disktest)</b>	<b>83</b>
disktest Test Requirements	83
disktest Test Options	86
disktest Test Modes	89
disktest Command-Line Syntax	89
<b>13. Sun Fire 880 FC-AL Disk Backplane Test (dpmtest)</b>	<b>91</b>
dpmtest Options	91
dpmtest Test Modes	94
dpmtest Command-Line Syntax	94

- 14. DVD Test (dvdtest) 97**
  - dvdtest Test Requirements 97
  - dvdtest Options 97
  - dvdtest Test Modes 99
  - dvdtest Command-Line Syntax 99
  
- 15. ECP 1284 Parallel Port Printer Test (ecpptest) 101**
  - ecpptest Hardware and Software Requirements 101
  - ecpptest Subtests 102
  - ecpptest Options 102
  - ecpptest Test Modes 105
  - ecpptest Command-Line Syntax 105
  
- 16. Sun StorEdge A5x00 Test (enatest) 107**
  - enatest Options 111
  - enatest Fault Isolation Capability 114
  - enatest Test Modes 115
  - enatest Command-Line Syntax 115
  
- 17. Sun StorEdge 1000 Enclosure Test (enctest) 117**
  - enctest Options 118
  - enctest Test Modes 120
  - enctest Command-Line Syntax 120
  
- 18. Environmental Test (envtest) 121**
  - envtest Options 121
  - envtest Test Modes 123
  - envtest Command-Line Syntax 124
  
- 19. Environmental Test (env2test) 125**
  - env2test Options 125

	<code>env2test</code> Test Modes	127
	<code>env2test</code> Command-Line Syntax	128
<b>20.</b>	<b>Environmental Test (<code>env3test</code>)</b>	<b>129</b>
	<code>env3test</code> Options	129
	<code>env3test</code> Test Modes	131
	<code>env3test</code> Command-Line Syntax	131
<b>21.</b>	<b>Environmental Test (<code>env4test</code>)</b>	<b>133</b>
	<code>env4test</code> Options	134
	<code>env4test</code> Test Modes	137
	<code>env4test</code> Command-Line Syntax	137
<b>22.</b>	<b>Environmental Test (<code>env5test</code>)</b>	<b>139</b>
	<code>env5test</code> Test Requirements	139
	<code>env5test</code> Options	140
	<code>env5test</code> Test Modes	142
	<code>env5test</code> Command-Line Syntax	142
<b>23.</b>	<b>Frame Buffer Test (<code>fbtest</code>)</b>	<b>143</b>
	<code>fbtest</code> Options	143
	<code>fbtest</code> Test Modes	144
	<code>fbtest</code> Command-Line Syntax	145
<b>24.</b>	<b>Fast Frame Buffer Test (<code>ffbtest</code>)</b>	<b>147</b>
	<code>ffbtest</code> Test Requirements	147
	<code>ffbtest</code> Options	148
	<code>ffbtest</code> Test Modes	154
	<code>ffbtest</code> Command-Line Syntax	155
<b>25.</b>	<b>Floating Point Unit Test (<code>fputest</code>)</b>	<b>157</b>

	fputest Subtests	157
	fputest Options	158
	fputest Test Modes	160
	fputest Command-Line Syntax	160
<b>26.</b>	<b>IEEE 1394 Camera Test (fwcamtest)</b>	<b>161</b>
	fwcamtest Test Requirements	161
	Start a Window Environment	161
	Testing Through a Remote Connection	162
	fwcamtest Subtests	162
	fwcamtest Options	162
	fwcamtest Test Modes	164
	fwcamtest Command-Line Syntax	164
<b>27.</b>	<b>Graphics Frame Buffer Test (gfbtest)</b>	<b>165</b>
	gfbtest Test Requirements	166
	gfbtest Options	166
	gfbtest Test Modes	173
	gfbtest Command Line Syntax	173
<b>28.</b>	<b>PGX32 Frame Buffer Test (gfxtest)</b>	<b>177</b>
	gfxtest Test Requirements	177
	gfxtest Options	178
	gfxtest Test Modes	180
	gfxtest Command-Line Syntax	180
<b>29.</b>	<b>I2C Bus Test (i2ctest)</b>	<b>181</b>
	i2ctest Test Requirements	181
	i2ctest Options	182
	i2ctest Test Modes	183



	<code>i2ctest</code> Command-Line Syntax	183
<b>30.</b>	<b>Expert3D Frame Buffer Test (<code>ifbtest</code>)</b>	<b>185</b>
	<code>ifbtest</code> Test Requirements	185
	Preparation for <code>ifbtest</code>	186
	<code>ifbtest</code> Options	187
	<code>ifbtest</code> Test Modes	191
	<code>ifbtest</code> Command-Line Syntax	191
<b>31.</b>	<b>Intelligent Fibre Channel Processor Test (<code>ifptest</code>)</b>	<b>193</b>
	<code>ifptest</code> Subtests	193
	<code>ifptest</code> Options	194
	<code>ifptest</code> Test Modes	196
	<code>ifptest</code> Command-Line Syntax	197
<b>32.</b>	<b>Integer Unit Test (<code>iutest</code>)</b>	<b>199</b>
	<code>iutest</code> Options	199
	<code>iutest</code> Test Modes	201
	<code>iutest</code> Command-Line Syntax	201
<b>33.</b>	<b>Level 1 Data Cache Test (<code>l1dcachetest</code>)</b>	<b>203</b>
	<code>l1dcachetest</code> Options	203
	<code>l1dcachetest</code> Test Modes	205
	<code>l1dcachetest</code> Command-Line Syntax	205
<b>34.</b>	<b>Level 2 Cache Test (<code>l2cachetest</code>)</b>	<b>207</b>
	<code>l2cachetest</code> Options	207
	<code>l2cachetest</code> Test Modes	209
	<code>l2cachetest</code> Command-Line Syntax	209
<b>35.</b>	<b>LOMlite Alarm Test (<code>lomlitetest</code>)</b>	<b>211</b>

- lomlitetest Requirements 211
- lomlitetest Subtests 212
- lomlitetest Options 212
- lomlitetest Test Modes 214
- lomlitetest Command-Line Syntax 214
  
- 36. M64 Video Board Test (m64test) 215**
  - m64test Options 215
  - m64test Test Modes 218
  - m64test Command-Line Syntax 218
  
- 37. Cache Consistency Test (mpconstest) 221**
  - mpconstest Test Requirements 222
  - mpconstest Subtests 223
  - mpconstest Options 224
  - mpconstest Test Modes 227
  - mpconstest Command-Line Syntax 227
  
- 38. Multiprocessor Test (mptest) 229**
  - mptest Options 229
  - mptest Test Modes 233
  - mptest Command-Line Syntax 233
  
- 39. Network Hardware Test (nettest) 235**
  - nettest Options 236
  - nettest Test Modes 238
  - nettest Command-Line Syntax 239
  
- 40. Ethernet Loopback Test (netlbtest) 241**
  - netlbtest Test Requirements 241
  - netlbtest Options 242

- netlbttest Test Modes 244
- netlbttest Command-Line Syntax 244
  
- 41. PCMCIA Modem Card Test (pcsertest) 247**
  - pcsertest Options 247
  - pcsertest Test Mode 249
  - pcsertest Command-Line Syntax 249
  
- 42. SPARCstorage Array Controller Test (plntest) 251**
  - plntest Controller Test 251
  - Probing for SSA Controller Devices 252
  - plntest Options 253
  - plntest Test Modes 255
  - plntest Command-Line Syntax 255
  
- 43. Physical Memory Test (pmemtest) 257**
  - pmemtest Options 257
  - pmemtest Test Modes 260
  - pmemtest Command-Line Syntax 260
  
- 44. Qlogic 2202 Board Test (qlctest) 263**
  - qlctest Subtests 263
  - qlctest Options 264
  - qlctest Test Modes 268
  - qlctest Command-Line Syntax 268
  
- 45. Remote System Control (rsctest) 271**
  - rsctest Subtests 271
  - rsctest Options 273
  - rsctest Test Modes 276
  - rsctest Command-Line Syntax 276

- 46. Serial Asynchronous Interface (PCI) Test (saiptest) 279**
  - saiptest Hardware Requirements 279
  - saiptest Options 280
  - saiptest Test Modes 284
  - saiptest Command-Line Syntax 284
  
- 47. Sun Enterprise Cluster 2.0 Network Hardware Test (scitest) 287**
  - scitest Options 287
  - scitest Test Modes 289
  - scitest Command-Line Syntax 289
  
- 48. Internal I2C Smartcard Reader Test (sc2test) 291**
  - sc2test Subtests 291
  - sc2test Options 292
  - sc2test Test Modes 294
  - sc2test Command-Line Syntax 294
  
- 49. SEEPROM Test (seepromtest) 295**
  - seepromtest Options 295
  - seepromtest Test Modes 297
  - seepromtest Command-Line Syntax 297
  
- 50. Environmental Sensing Card Test (sentest) 299**
  - sentest Options 299
  - sentest Test Modes 301
  - sentest Command-Line Syntax 301
  
- 51. Soc+ Host Adapter Card Test (socaltest) 303**
  - socaltest Options 303
  - socaltest Test Modes 306

- socaltest Command-Line Syntax 306
- 52. Serial Parallel Controller Test (spiftest) 307**
  - spiftest Hardware Requirements 307
  - spiftest Options 308
  - spiftest Test Modes 311
  - spiftest Command-Line Syntax 311
- 53. Serial Ports Test (sptest) 313**
  - sptest Synchronous Testing Software Requirements 315
  - sptest Options 315
  - sptest Test Modes 320
  - sptest Command-Line Syntax 321
- 54. SunHSI Board Test (sunlink) 323**
  - sunlink Test Requirements 323
  - sunlink Options 324
  - sunlink Loopback Connectors 325
  - sunlink Test Modes 326
  - sunlink Command-Line Syntax 326
- 55. SunPCi II Test (sunpci2test) 329**
  - sunpci2test Test Requirements 329
  - sunpci2test Options 330
  - sunpci2test Test Modes 331
  - sunpci2test Command-Line Syntax 331
- 56. SuperI/O Test (sutest) 333**
  - Loopback Connectors 333
  - sutest Options 334
  - sutest Test Modes 336

- sutest Command-Line Syntax 336
- 57. System Test (systest) 339**
  - systest Options 339
  - systest Test Modes 341
  - systest Command-Line Syntax 341
- 58. Tape Drive Test (tapetest) 343**
  - tapetest Test Requirements 343
  - tapetest Options 343
  - tapetest Test Modes 347
  - tapetest Command-Line Syntax 347
- 59. S24 Frame Buffer Test (tcxtest) 349**
  - tcxtest Test Groups 349
  - tcxtest Subtests 350
  - tcxtest Options 351
  - tcxtest Test Modes 353
  - tcxtest Command-Line Syntax 353
- 60. USB Audio Test (usbaudiotest) 355**
  - usbaudiotest Subtests 355
  - usbaudiotest Options 356
  - usbaudiotest Test Modes 357
  - usbaudiotest Command-Line Syntax 357
- 61. Sun USB Keyboard Test (usbkbtest) 359**
  - usbkbtest Options 359
  - usbkbtest Test Modes 361
  - usbkbtest Command-Line Syntax 361

- 62. USB Parallel Port Printer (usbppptest) 363**
  - usbppptest Subtests 363
  - usbppptest Options 364
  - usbppptest Test Modes 365
  - usbppptest Command-Line Syntax 365
  
- 63. Virtual Memory Test (vmemtest) 367**
  - vmemtest Swap Space Requirements 367
  - vmemtest Options 368
  - vmemtest Test Modes 372
  - vmemtest Command-Line Syntax 372
  
- 64. Sun Fire Link Interconnect Test (wrsmtest) 375**
  - wrsmtest Options 376
  - wrsmtest Test Modes 379
  - wrsmtest Command-Line Syntax 379
  
- A. Loopback Connectors 381**
  - 25-Pin RS-232 Loopback Plug 383
  - 25-Pin RS-232 Port-to-Port Loopback Cable 383
  - 8-Pin to 8-Pin Loopback Cable 384
  - 8-Pin Loopback Plug 385
  - 25-Pin Port A-to-Port B Loopback Plug 386
  - 25-Pin Port A-to-A Port B-to-B Loopback Plug 386
  - 96-Pin Female Loopback Connector 387
  - 96-Pin Female Special Loopback Connector 389
  - 37-Pin RS-449 Loopback Cable 390
  - 37-Pin RS-449 Loopback Plug 391
  - 9-Pin Male Single-Port Loopback Plug 392

9-Pin Female Single-Port Loopback Plug	392
9-Pin to 25-Pin Port-to-Port Loopback Cable	393
9-Pin to 9-Pin Port-to-Port Loopback Cable	394
NT to TE Loopback Cable	394
Twisted-Pair Ethernet (TPE) Loopback Cable for Fast Ethernet	395
TPE Loopback Cable for Gigabit and 10/100 Ethernet	395



# Preface

---

SunVTS™ is the Sun Microsystems™ Validation Test Suite. SunVTS is a comprehensive software diagnostic package that tests and validates Sun™ hardware by verifying the configuration and functionality of most hardware controllers, devices, and platforms.

SunVTS is primarily used from a graphical user interface (GUI), for the Common Desktop Environment (CDE). This book describes SunVTS tests that run on machines with SPARC™ architectures. The descriptions include specific test options, procedures, and error messages.

This book is primarily written as a reference for SunVTS test specific information. Refer to the *SunVTS User's Guide* for overall SunVTS information. Developers or experienced users who want to run the SunVTS diagnostic application will find these documents useful.

---

## Before You Read This Book

In order to make full use of the information in this document, you may need access to the following documents:

- *SunVTS User's Guide*
- *SunVTS Quick Reference Card*

---

# How This Book Is Organized

This book is organized as follows:

Chapter 1 describes SunVTS requirements, test modes, user interfaces, the collection of tests, and how to run a test from the command line.

The remaining chapters describe the individual SunVTS tests, their options, applicable test modes, and command-line syntax. These chapters are arranged in alphabetical order according to each test name.

Appendix A provides information about the serial and parallel port loopback connectors that are required by some of the SunVTS tests.

---

# Using UNIX Commands

This document might not contain information on basic UNIX® commands and procedures such as shutting down the system, booting the system, and configuring devices.

See one or more of the following for this information:

- *Solaris Handbook for Sun Peripherals*
- Online documentation for the Solaris™ software environment available at <http://docs.sun.com>
- Other software documentation that you received with your system

---

# Typographic Conventions

Typeface or Symbol	Meaning	Examples
AaBbCc123	The names of commands, files, and directories; on-screen computer output	Edit your <code>.login</code> file. Use <code>ls -a</code> to list all files. % You have mail.
<b>AaBbCc123</b>	What you type, when contrasted with on-screen computer output	% <b>su</b> Password:
<i>AaBbCc123</i>	Book titles, new words or terms, words to be emphasized. Replace command-line variables with real names or values.	Read Chapter 6 in the <i>User's Guide</i> . These are called <i>class</i> options. To delete a file, type <code>rm filename</code> .

---

---

# Shell Prompts

Shell	Prompt
C shell	<i>machine-name%</i>
C shell superuser	<i>machine-name#</i>
Bourne shell and Korn shell	\$
Bourne shell and Korn shell superuser	#

---

---

# Related Documentation

This manual covers SunVTS revision 5.1 tests. It serves as a reference companion to the SunVTS 5.1 manuals listed below.

---

Application	Title	Part Number
Installation and Navigation	<i>SunVTS 5.1 User's Guide</i>	816-5144-10
Quick Reference Card	<i>SunVTS Quick Reference Card</i>	816-5146-10

---

---

## Accessing Sun Documentation Online

A broad selection of Sun system documentation is located at:

<http://www.sun.com/products-n-solutions/hardware/docs>

A complete set of Solaris documentation and many other titles are located at:

<http://docs.sun.com>

---

## Sun Welcomes Your Comments

Sun is interested in improving its documentation and welcomes your comments and suggestions. You can email your comments to Sun at:

[docfeedback@sun.com](mailto:docfeedback@sun.com)

Please include the part number (816-5145-10) of your document in the subject line of your email.

# Introduction

---

This manual describes SunVTS™ Version 5.1 tests that are distributed on the Sun Computer Systems Supplement CD.

The Sun™ Validation and Test Suite (SunVTS) software runs multiple diagnostic hardware tests from a single user interface. SunVTS verifies the connectivity, functionality, and reliability of most hardware controllers and devices.

SunVTS is composed of many individual tests that support testing of a wide range of products and peripherals. Most of the tests are capable of testing devices in a 32-bit or 64-bit Solaris™ environment.

Use SunVTS to test one device or multiple devices. Some of the major test categories are:

- Audio tests
- Communication (serial and parallel) tests
- Graphic/video tests
- Memory tests
- Network tests
- Peripherals (disks, tape, CD-ROM, DVD-ROM, printer, floppy) tests
- Processor tests
- Storage tests

Such flexibility means that the proper test modes and options need to be selected to maximize its effectiveness. This book covers the individual test options and requirements. For overall test configuration modes and options refer to the *SunVTS User's Guide*.

---

**Note** – When an error occurs in VTS testing, the test message window displays the error number, the error description, the probable cause of the error, and the recommended actions. Because this information is displayed at the time of the error, error messages are not included in this manual.

---

The default installation directory for SunVTS is `/opt/SUNWvts`. However, when you are installing SunVTS, you can specify a different directory. Refer to the *SunVTS User's Guide* for installation information.

---

## Test Requirements

SunVTS Version 5.1 was first introduced and designed to run in the Solaris 8 2/02 and Solaris 9 operating environments. It is recommended that you run SunVTS 5.1 in either of these operating environments.

The operating system kernel must be configured to support all peripherals that are to be tested.

Some SunVTS tests have special requirements such as the connection of loopback connectors, installation of test media, or the availability of disk space. These requirements are listed for each test in the corresponding chapter in this book.

---

## Collection of SunVTS Tests

Many individual tests make up the collection of tests in the SunVTS application. Each test is a separate process from the SunVTS kernel. Each test can be run individually from the command line or from the SunVTS user interface.

When SunVTS is started, the SunVTS kernel automatically probes the system kernel to determine the hardware devices. The devices are then displayed on the SunVTS control panel with the appropriate tests and test options. This provides a quick check of your hardware configuration, and no time is wasted trying to run tests that are not applicable to your configuration.

During testing, the hardware tests send the test status and messages to the SunVTS kernel through interprocess communication (IPC) protocols. The kernel passes the status to the user interface and logs the messages.

SunVTS has a shared object library that contains test-specific probing routines. At runtime, the SunVTS kernel dynamically links in and calls these probing routines to initialize its data structure with test-specific information. You can add new tests into the SunVTS environment without recompiling the SunVTS source code.

As of SunVTS 3.0, the SunVTS kernel and most tests support 32-bit and 64-bit operating environments. When the `sunvts` command is used to start SunVTS, the appropriate tests (32-bit or 64-bit versions) are presented.

## 32-Bit and 64-Bit Tests

Because each test is a separate program, you can run individual tests directly from the command line. When this is done, care must be taken to run the appropriate test (32-bit or 64-bit) that corresponds to the operating system that is running (32-bit or 64-bit). This is done by running tests from specific directories as follows:

- 32-bit tests—`/opt/SUNWvts/bin/testname`
- 64-bit tests—`/opt/SUNWvts/bin/sparcv9/testname`
  - The test is an actual 64-bit binary test if *testname* is a binary file.
  - The test is a 32-bit test capable of running in the 64-bit environment if *testname* is a symbolic link.

---

**Note** – The `SUNWvtsx` package must be installed for 64-bit SunVTS support. For more information on SunVTS packages and installation procedures refer to the *SunVTS User's Guide*.

---

If you use the `sunvts` command to run SunVTS, SunVTS automatically allocates 32-bit or 64-bit tests based on the 32-bit or 64-bit Solaris operating environment that is running. Therefore, the only time that you need to be concerned with the 32-bit or 64-bit operation is when you run the SunVTS kernel or SunVTS tests from the command line.

If you are not sure which operating system is running, refer to the Solaris System Administration manuals. In Solaris 8 2/02 and Solaris 9, the following command can be used to identify the application support of your system.

```
# isainfo -v
```

---

**Note** – The `isainfo` command is not available in Solaris 2.6 or earlier releases.

---

---

## SunVTS User Interfaces

You can run SunVTS tests from various interfaces: The CDE graphical user interfaces, or the TTY interface. SunVTS tests can also be run individually from a shell tool command line, using the command-line syntax for each test (refer to

“Running a Test From the Command Line” on page 6). TABLE 1-1 describes the various SunVTS user interfaces. Refer to the *SunVTS User’s Guide* for more information on these interfaces.

TABLE 1-1 SunVTS System Interfaces

SunVTS System Interfaces	Description
Graphical user interfaces (GUIs)	Users can select tests and test options by pointing and clicking with a mouse button in the CDE interface.
TTY interface	Users can run SunVTS from a terminal or modem attached to a serial port. This feature requires that users use the keyboard instead of the mouse, and it displays one screen of information at a time.
Command-line execution	Users can run each of the SunVTS tests individually from a shell tool command line using the command-line syntax. Each test description in this book contains the corresponding command-line syntax.

---

**Note** – To increase or decrease a numeric value in a SunVTS CDE dialog box, you can use either the up or down arrows, or type a new value in the text box and press Return. Select Apply to apply all dialog box changes.

---

## Running a Test From a User Interface

The common way to run SunVTS testing is through a SunVTS user interface—CDE or the TTY interface.

Test configuration, control, and results are easily accessed through buttons and dialog boxes. These buttons and dialog boxes are covered in the *SunVTS User’s Guide*. However, the Test Parameter Options dialog box is unique for each test, and is therefore covered in this manual.

### Test Parameter Options Dialog Box

The options displayed in this menu differ for each test, but the lower set of buttons are generic and are described below.



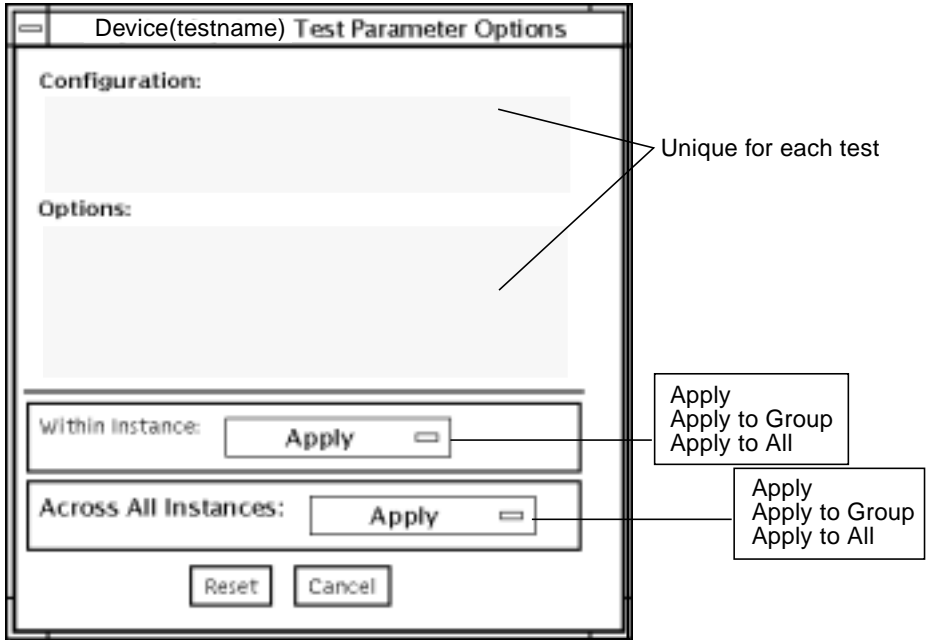


FIGURE 1-1 Test Parameter Options Dialog Box (CDE)

TABLE 1-2 Test Parameter Options Dialog Box Items

Menu Item	Description
Configuration	Information such as device type, capacity, revision, and serial numbers for the selected device. This information cannot be changed.
Options	A list of test options that are used to customize the testing of the selectable device, group, or all devices. The options are specific for each test and are covered in the test specific-chapters in this manual.
Within Instance	Provides the means to apply the settings: <ul style="list-style-type: none"> <li>• to this device only with Apply, or</li> <li>• to all devices within this group with Apply to Group, or</li> <li>• to all devices (of the <i>same device type</i> for <i>all controllers</i>) with Apply to All.</li> </ul> <p>The option settings are only applied to one instance of the test.</p>

**TABLE 1-2** Test Parameter Options Dialog Box Items (*Continued*)

Menu Item	Description
Across All Instances	Provides the means to apply the settings globally: <ul style="list-style-type: none"><li>• to this device only with Apply, or</li><li>• to all devices within this group with Apply to Group, or</li><li>• to all devices (of the <i>same device type</i> for <i>all controllers</i>) with Apply to All.</li></ul> The option settings are applied to all instances.
Reset	Returns the option values to their default settings and closes the test parameter option menu.
Cancel	Ignores any changes made to option values and closes the test parameter option menu.

---

**Note** – The Test Parameter Options Dialog Box descriptions also apply to the Test Parameter Options menu in the TTY interface.

---

## Running a Test From the Command Line

In some cases it may be more convenient to run a single SunVTS test from the command line rather than through a SunVTS user interface. The following information describes how to do this.

Unless specified, the test runs without the SunVTS kernel (`vtstk`). All events and errors are sent to `stdout` or `stderr` and are not logged in the log files.

When you run a test in this way, you must specify all test options in the form of command-line arguments.

There are two types of command-line arguments:

- Standard arguments—common to all tests. Refer to TABLE 1-3 for details.
- Test specific arguments—unique to a specific test. Refer to the test-specific chapters in this book for details.

The standard syntax for all SunVTS tests is:

```
testname [-scruvdtelnf] [-i number] [-w number] [-o test_specific_arguments]
```

---

**Note** – 64-bit tests are located in the `sparcv9` subdirectory: `/opt/SUNWvts/bin/sparcv9/testname`. If a test is not present in this directory, then it may only be available as a 32-bit test. For more information refer to “32-Bit and 64-Bit Tests” on page 3.

---

## Standard Command-Line Arguments

The following table defines the standard SunVTS command-line arguments:

**TABLE 1-3** Standard Command-Line Arguments

Argument	Description
-s	Runs a test as though it were invoked from the SunVTS kernel ( <code>vtsk</code> ). The default is to send the output to <code>stdout</code> or <code>stderr</code> .
-c	Enables a core image of the test process to be created in the current working directory upon receipt of certain signals, otherwise those signals are caught and handled to prevent a core from being generated. The default is to disable the creation of a core image.
-r	Enables run on error so that when an error occurs, the test continues with the next test sequence instead of exiting. The default is false.
-v	Runs the test in Verbose mode and displays messages with more detailed information about the testing process. The default is false.
-d	Runs the test in debug mode and displays messages to help programmers debug their test code. The default is false.
-t	Runs the test in test Trace mode and displays messages that track function calls and sequences currently in use by the test code. The default is false.
-e	Runs the test in Stress mode by increasing the system load. The default is false.
-l	Runs the test in Online Functional mode. This is the same mode that tests run in when executed with the <code>vtsui.online</code> command. It is a non-intrusive version that will not significantly affect other applications. See the note below. The default is true.
-n	Runs the test in Connection mode. See the note below. The default is false.
-f	Runs the test in full Functional test mode. This mode assumes that the test has complete control of the device under test. See the note below. The default is false.

**TABLE 1-3** Standard Command-Line Arguments (*Continued*)

Argument	Description
-i <i>number</i>	Defines the number of instances for scalable tests.
-w <i>number</i>	Defines to which instance the test is assigned; this option is for scalable tests.
-o	Indicates that the options and arguments that follow are test specific.

---

**Note** – Separate each test-specific argument by commas, with no space after each comma.

---

---

**Note** – If you choose to specify a test mode with the `l`, `n`, or `f` option, specify only one option at a time because only one test mode can be selected at a time.

---

## Test-Specific Arguments

There are test-specific arguments, as described in TABLE 1-4. Test-specific arguments follow the format specified in the `getsubopt(3C)` man page. For information about test-specific arguments refer to the specific test chapter in this book.

**TABLE 1-4** SunVTS Test-Specific Arguments

Argument	Description
-o	Separate each test-specific argument by commas, with no space after the comma. For example: <code>#!/sample -v -o dev=/dev/audio,volume=78</code>
	The test option format is specified by the man page <code>getsubopt(3C)</code> .

---

## Testing Frame Buffers

Before running a frame buffer test, determine whether the test requires frame buffer locking. Not all frame buffer tests have a locking option. Some tests set the lock automatically. Check the test chapter for each individual test to see if this step is needed. If locking is required, you can set the lock in one of two ways:

- If you are using the CDE SunVTS interface, go to the Option menu of the graphic test and select Enable for the frame buffer locking option.
- If you are working from the command line, you can enable frame buffer locking with the `lock=e/d` option. For example, to run the generic frame buffer test (`fbtest`) with a locked frame buffer, enter:

```
# ./fbtest -o dev=cgthree0,lock=enable
```

(See the test command line argument descriptions in this manual.)



---

**Caution** – If frame buffer locking is disabled (unlocked) on frame buffers that are running `vtstui`, or if you move the mouse, you will receive false error messages. Even a slight mouse movement can cause a test to fail.

---



---

**Caution** – Disable the Power Management screen saver option and the Save/Resume option before you run any of the SunVTS frame buffer tests. For information on disabling these Power Management features, refer to the Power Management chapter in the *Solaris Common Desktop Environment: Users's Guide* in the Solaris 9 User Collection. This document is available at:  
`docs.sun.com`.

---



---

**Caution** – If you are using the CDE interface for SunVTS, do not conduct frame buffer tests through the `dtlogin` window. Log in as `root` and disable the auto-logout option.

---



---

**Caution** – Do not run TTY mode and frame buffer tests concurrently on the console monitor. The frame buffer test may fail.

---

## Testing Multiple Frame Buffers

The following rules apply when you test multiple frame buffers (displays) simultaneously:

- Only the console monitor can run the window environment (such as CDE). The console monitor is the monitor connected to the frame buffer appointed by `/dev/fb`. SunVTS enables frame buffer locking on the console monitor by default.

- The frame buffer that is running the window environment must have window locking enabled to avoid false test failures. All other frame buffers must have window locking disabled.

## Remote Testing of Frame Buffers

If you start `sunvts` or `vtsk` from a screen other than the console monitor, frame buffer locking is not available. In this case:

- Disable the window locking option on the remote screen by setting it to `d`.
- Enable frame buffer locking for the console monitor, as shown in the example above. The SunVTS user interface cannot display on a monitor if locking is disabled.

Do not run any graphic programs (including `vtsui`) on the remote frame buffer during graphic testing.

## Advanced Frame Buffer Test (afbtest)

---

The `afbtest` verifies the functionality of the advanced frame buffer (AFB).

The `afbtest` can detect and adapt to the various video modes of the AFB. Instead of only running in one standard graphics mode, all tests can run in any mode. In stereo mode, all tests write into the right and left eyes unless you specify otherwise.

You can interrupt `afbtest` using Control-c.

Test accuracy is checked using a checksum algorithm. Possible locations of failing pixels are colored chartreuse to help visually identify their position.



---

**Caution** – Do not run any other application or screen saver program that uses the AFB accelerator port while running `afbtest`. This combination causes SunVTS to return incorrect errors.

---

---

### `afbtest` Test Requirements

Disable all screen savers before testing any graphics device. Type `xset s off` at a UNIX® prompt to disable the Solaris screen saver.

For full instructions on testing frame buffers, please see “Testing Frame Buffers” on page 8.

`afbtest` requires approximately 29 MB of disk space in the `/tmp` directory to extract its working files. If this space is not available, the diagnostic will fail and report warning and error messages, indicating a lack of disk space.

---

## afbtest Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.

By default, all `afbtest` options are enabled.



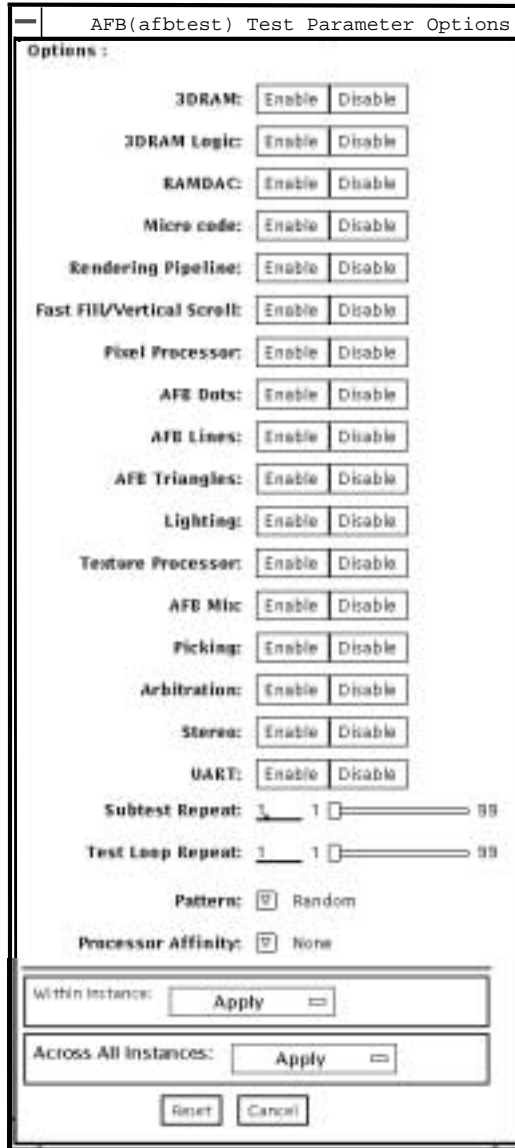


FIGURE 2-1 afbtest Test Parameter Options Dialog Box

**TABLE 2-1** afbtest Options

afbtest Options	Description
3DRAM test	<p>The 3DRAM test thoroughly tests the video memory in the AFB using 512-bit reads and writes. 3DRAM makes a full-screen pass, consisting of a write and a read to each pixel location, for each access mode on the list below. The data used can be either random or specified by the user. A second pass is made with the one's complement of the data used in the first pass so that each memory location is tested with both a zero and a one.</p> <p>Errors in this subtest are attributes to the 3DRAM. A failing chip is indicated by (X, Y) locations and device-specific "U" numbers.</p> <ul style="list-style-type: none"><li>• DFB8R, DFB8G, DFB8B, DFB8X—Buffer A</li><li>• DFB24—Buffer A</li><li>• DFB32—Buffer A</li><li>• SFB8R, SFB8G, SFB8B, SFB8X—Buffer A</li><li>• SFB8R, SFB8G, SFB8B, SFB8X—Buffer B</li><li>• SFB32—Buffer A</li><li>• SFB32—Buffer B</li><li>• SFB32—Buffer C</li><li>• SFB64—Buffers A and C</li><li>• SFB64—Buffers B and C</li></ul>

**TABLE 2-1** afbtest Options (Continued)

afbtest Options	Description
3DRAM Logic test	<p>The 3DRAM Logic test provides logical functionality to the AFB. The following services are tested:</p> <ul style="list-style-type: none"> <li>• Compare Controls—Match AB</li> <li>• Compare Controls—Magnitude AB</li> <li>• Compare Controls—Match C</li> <li>• Compare Controls—Magnitude C</li> <li>• Match Mask—AB</li> <li>• Magnitude Mask—AB</li> <li>• Match Mask—C</li> <li>• Magnitude Mask—C</li> <li>• Raster Operations—RGB</li> <li>• Raster Operations—X</li> <li>• Raster Operations—YZ</li> <li>• Plane Mask—RGB</li> <li>• Plane Mask—X</li> <li>• Plane Mask—Y</li> <li>• Plane Mask—Z</li> <li>• Group Enable—R, G, B, X</li> <li>• Group Enable—Y, Z</li> </ul> <p>Each function is tested separately with a series of SFB64 writes. A total of 16 writes are made for each different test case with Y coordinate values varying from 0 to 30 in increments of 2 pixels. This dotted column organization provides page thrashing and block flashing in all screen resolutions. For each operation all possible combinations are tested. For example, in <code>ROP RGB new==old</code> there are three possible values: <i>new &lt; old</i>, <i>new == old</i>, and <i>new &gt; old</i>. Each of these cases are tested.</p> <p>Five passes of the functions are made. Each pass writes into a different AFB address space: SFB32-A, SFB32-B, SFB32-C, SFB64-AC, and SFB64-BC. Note that the passes that write into the SFB32 address spaces are writing two pixels at a time because the tests use SFB64 writes.</p> <p>Care is taken to ensure that all 3DRAM chips are tested. Errors in this subtest are attributed to the 3DRAM.</p>

**TABLE 2-1** afbtest Options (Continued)

afbtest Options	Description
RAMDAC test	<p>RAMDAC registers are tested using simple read/write patterns to determine if there are any bad bits. This includes all LUTs (4 CLUTs, PWLUT and OWLUT). afbtest ensures that data is actually being read from the RAMDAC and not being supplied by the driver.</p> <p>RAMDAC on AFB can be in SEP8 or Combined mode. RAMDAC test detects the RAMDAC mode and tests the RAMDAC output for that mode. The RAMDAC Signature Register captures the pixels going to the screen. This test determines that all of the different data paths within the RAMDAC are functioning properly.</p> <p>The data pattern is designed so all the data paths are tested, that is, all CLUTs, PWLUTs, and OWLUTS. A cursor is also displayed on the screen.</p> <p>Errors in this test are attributed to the RAMDAC.</p>
Microcode test	<p>Microcode test generates the checksum for the microcode of each enabled float and compares all the checksums for equality.</p> <p>Errors in this test are attributed to the microcode PROMS &amp; SRAMS.</p>
Rendering Pipeline test	<p>Rendering Pipeline test uses the rendering pipeline tests developed for the FFB stand-alone diagnostics. Each FFB primitive is tested thoroughly with a variety of sources and configurations:</p> <ul style="list-style-type: none"><li>• Dots</li><li>• Anti-aliased dots</li><li>• Lines using all four line drawing primitives</li><li>• Triangles</li><li>• Polygons</li><li>• Rectangles</li><li>• Fonts</li></ul> <p>Errors in this test are attributed to the Draw Chips.</p>
Fast Fill/Vertical Scroll test	<p>Fast Fill/Vertical Scroll primitives are separated from the Rendering Pipeline tests because of their dependence on screen type. There are three different tests, one for each screen type. Each test uses both block and page mode fast fills.</p> <p>Errors in this test are attributed to the Draw Chips.</p>

**TABLE 2-1** afbtest Options (Continued)

afbtest Options	Description
Pixel Process test	<p>The Pixel Processor test, a subtest, exercises the options selected by the AFB's Pixel Processor Control (PPC) register:</p> <ul style="list-style-type: none"><li>• Auxiliary clipping (additive and subtractive)</li><li>• Depth cueing</li><li>• Alpha blend</li><li>• Viewport clip (2D and 3D)</li><li>• Area pattern (transparent and opaque)</li></ul> <p>Errors in this test are attributed to the Draw Chips.</p>
AFB Dots test	<p>This test uses the AFB primitive tests developed for the AFB stand-alone diagnostics. AFB Dots are tested thoroughly with a variety of sources and configurations:</p> <ul style="list-style-type: none"><li>• Dots</li><li>• Anti-aliased dots</li><li>• Big dots</li></ul> <p>Errors in this test are attributed to the Command &amp; Draw Chips.</p>
AFB Lines test	<p>This test uses the AFB primitive tests developed for the AFB stand-alone diagnostics. AFB Lines are tested thoroughly with a variety of sources and configurations:</p> <ul style="list-style-type: none"><li>• Jaggy lines</li><li>• Anti-aliased lines</li><li>• Lines with patterns</li><li>• Bresenham lines</li><li>• Wide lines drawn as lines and triangles</li></ul> <p>Errors in this test are attributed to the Command &amp; Draw Chips.</p>
AFB Triangles test	<p>This test uses the AFB primitive tests developed for the AFB stand-alone diagnostics. AFB Triangles are tested thoroughly with a variety of sources and configurations:</p> <ul style="list-style-type: none"><li>• Triangles drawn clockwise &amp; counter clockwise</li><li>• Triangles drawn as stripes</li><li>• Independent triangles</li><li>• Triangles drawn as stars</li><li>• Triangles with facet normals</li></ul> <p>Errors in this test are attributed to the Command &amp; Draw Chips.</p>

**TABLE 2-1** afbtest Options (Continued)

afbtest Options	Description
Lighting test	<p>The Lighting test exercises AFB float and lighting microcode. This test lights an object with maximum number of lights (32) that AFB can handle in hardware. A checksum is generated for the rendered image and compared with the checksum generated for the same image on a known good system.</p> <p>Errors in this test are attributed to the Float &amp; Microcode SRAMS.</p>
Texture Processor test	<p>The Texture Processor test exercises the different options of the AFB's Texture Pixel Processor Control (TPPC) register:</p> <ul style="list-style-type: none"><li>• Texture Minification</li><li>• Texture Magnification</li><li>• Blend</li><li>• Decal</li><li>• Modulation</li></ul> <p>Errors in this test are attributed to the Draw Chips.</p>
AFB Mix test	<p>The AFB Mix test draws different primitives with variety combinations of sources and configurations, exercising all the Draw, Float, Microcode, and 3DRAM chips on AFB. This test is to stress the AFB.</p> <p>Errors in this test are attributed to Draw, Float, Microcode, and/or 3DRAM Chips.</p>
Picking test	<p>The Picking test exercises the pick detect login of the 3DRAM. We define a pick detect window and make sure that writes to the window are picked, and writes outside the window are not picked. The test is repeated once for each 3DRAM.</p> <p>Errors in this test are attributed to the 3DRAM.</p>
Arbitration test	<p>The Arbitration test, a subtest, continuously renders an object into the accelerator port while doing reads and writes through the direct port. A picture is rendered into all 32 planes of the B buffer while the other process does 32-bit DFB reads and writes in the A plane. This subtest simulates conditions in the real world, where rendering processes and windows operations run concurrently.</p> <p>Errors in this test are attributed to the Context switching between DFB and SFB.</p>

**TABLE 2-1** `afbtest` Options (Continued)

<code>afbtest</code> Options	Description
Stereo test	<p>Stereo test displays an object in stereo mode with different images for the right and left eye. The user can verify proper operation by looking at the screen with stereo glasses and following the instructions being displayed. If the monitor type is not 1280x1024 at 76MHz, this test prints a warning message and does not execute.</p> <p>To prevent this message from being displayed or written to the SunVTS information log, disable the stereo test in the Test Parameter Options dialog box. Only Sony P4 and N2 monitors support stereo resolutions. This test temporarily switches the monitor into stereo mode, renders a stereo image, performs a signature analysis on the stereo image (using the RAMDAC signature capture register), and after displaying the image for five seconds, restores the monitor to its previous resolution.</p> <p>Errors in this test are attributed to the RAMDAC.</p>
UART test	<p>The UART test tests both UART0 and UART1. First, UART memory is tested using simple read/write patterns to determine if there are any bad bits. Then data is written to UART 0/1 and the written data is read using the internal loopback in polling mode. The read data is verified with written data.</p> <p>Errors in this test are attributed to UART and its SRAM memory chip.</p>

---

## `afbtest` Test Modes

Due to the nature of graphic tests, reading data from, or writing data to the frame buffer during graphic tests will disturb user operation. For this reason, `afbtest` is only available in offline Functional test mode.

**TABLE 2-2** `afbtest` Supported Test Modes

Test Mode	Description
Functional (Offline)	Runs the full set of tests.

# afbtest Command-Line Syntax

`/opt/SUNWvts/bin/afbtest standard_arguments -o dev=device_name, S=subtest_number, F=#_of_subtest_loops, B=#_of_test_loops, P=test_pattern`

TABLE 2-3 afbtest Command-Line Syntax

Argument	Description
<code>dev=device_name</code>	<code>device_name</code> is the relative path name of the device being tested with respect to <code>/dev/fbs</code> ; the default is <code>afb0</code> .
<code>S=subtest_number</code>	<code>subtest_number</code> is the test number of the subtest to be run. Select from the subtests below. You can run multiple subtests by adding the subtest numbers together. For example, <code>n=0x3</code> runs both test 1 and test 2; <code>n=0x180</code> runs both test <code>0x080</code> and test <code>0x100</code> . You do not need the leading zeros. <ul style="list-style-type: none"><li><code>n=0x00001</code> 3DRAM</li><li><code>n=0x00002</code> 3DRAM Logic</li><li><code>n=0x00004</code> RAMDAC</li><li><code>n=0x00008</code> Micro code</li><li><code>n=0x00010</code> Rendering Pipeline</li><li><code>n=0x00020</code> FastFill/Vertical Scroll</li><li><code>n=0x00040</code> Pixel Processor</li><li><code>n=0x00080</code> AFB Dots</li><li><code>n=0x00100</code> AFB Lines</li><li><code>n=0x00200</code> AFB Triangles</li><li><code>n=0x00400</code> Lighting</li><li><code>n=0x00800</code> Texture Processor</li><li><code>n=0x02000</code> AFB Mix Test</li><li><code>n=0x04000</code> Picking</li><li><code>n=0x08000</code> Arbitration</li><li><code>n=0x10000</code> Stereo</li><li><code>n=0x40000</code> UART</li></ul>
<code>F=#_of_subtest_loops</code>	The number of times to repeat each subtest. The default is 1.
<code>B=#_of_test_loops</code>	The number of times to repeat a test loop before passing. The default is 1.
<code>P=test_pattern</code>	The test pattern number. The default is <code>r</code> , for random patterns. You may also choose 0 for <code>0x0000000</code> , 3 for <code>0x33333333</code> , 5 for <code>0x55555555</code> , or 9 for <code>0x99999999</code> .



---

**Note** – 64-bit tests are located in the `sparcv9` subdirectory: `/opt/SUNWvts/bin/sparcv9/testname`. If the test is not present in this directory, then it may only be available as a 32-bit test. For more information refer to “32-Bit and 64-Bit Tests” on page 3.

---

---

**Note** – Errors returned by `afbtest` are nonspecific: It is not possible to determine which component caused a failure. In all error conditions, the field replaceable unit (FRU) is the entire AFB.

---



## Alarm Card Test (`alarmtest`)

---

The `alarmtest` exercises the Alarm Card on the Sun Netra™ CT 400 and CT 800 systems.

The Alarm Card is a hot-swappable add-on option for the Netra ct systems which provides secure remote access for system monitoring, failure recovery, and alarm notification. The alarm card can be used in both front- and rear-access systems.

This test is not scalable.

---

**Note** – Do not run `alarmtest` and `rsctest` at the same time. Tests may return incorrect results.

---

---

**Note** – The Netra CT 400/800 system only runs the 64-bit OS (to take full advantage of UltraSPARCII). Although, `alarmtest` is available in 32-bit and 64-bit mode, only the 64-bit version of `alarmtest` is run on a Netra CT 400/800 system.

---

---

## `alarmtest` Subtests

`alarmtest` consists of seven subtests which test and report on the following:

- Ethernet
- Serial ports
- PC-card (PCMCIA) socket
- Flash memory
- SEEPROM
- TOD
- Alarmport

---

## alarmtest Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.

**user0(alarmtest) Test Parameter Options**

**Options:**

Enet\_Test:  Enable  Disable

Edata\_Pattern\_Type:  Seq  
 Rand

Num\_Packets: ▲▼ 50

Target\_IP\_Addr:

ETest\_Type:  Internal  
 External  
 Phy  
 Ping

Serial\_Test:  Enable  Disable

Loopback\_Type:  Internal  
 External

Data\_Pattern\_Type:  Seq  
 Rand

STest\_Type:  c  
 d  
 u  
 v

TTYU\_Baud: ▼ 9600

TTYV\_Baud: ▼ 9600

PC\_Card\_Test:  Enable  Disable

PC\_Card\_Type:  Modem  Serial

Flash\_Test:  Enable  Disable

SEEPROM\_Test:  Enable  Disable

TOD\_Test:  Enable  Disable

ALARMPORT:  Enable  Disable

ALARMNUM:  0  
 1  
 2  
 3

ALARM0ON: ▼ Off

ALARM1ON: ▼ Off

ALARM2ON: ▼ Off

ALARM3ON: ▼ Off

---

Within Instance:

---

Across All Instances:

Reset Cancel

Test Parameter view, scrolled up

Test Parameter view, scrolled down

FIGURE 3-1 alarmtest Test Parameter Options Dialog Box

**TABLE 3-1** alarmtest Options

Option	Description
Enet_Test	Enables or disables Ethernet testing.
Edata_Pattern_Type	Selects the type of data pattern for Enet_Test: Sequential, Random, or both.
Num_Packets	Specifies the number of data packets to be sent in one test loop.
Target_IP_Addr	Specifies the IP address of a host to use for the ping test.
Etest_Type	Selects any or all internal, external, Phy (ethernet transceiver), or ping tests.
Serial_Test	Enables or disables serial_test.
Loopback_Type	Selects internal loopback, external loopback, or both.
Sdata_Pattern_Type	Selects the type of data pattern for serial_test: Sequential, Random, or both.
STest_Type	Selects ports to be tested: c, d, u, or v.
TTYU_Baud	Selects the alarm card's COM1 port baud rate.
TTYV_Baud	Selects the alarm card's COM2 port baud rate.
PC_Card_Test	Enables or disables PC card (PCMCIA) testing.
PC_Card_Type	Specifies the card type for the PC Card: modem or serial i/o.
Flash_Test	Enables or disables the flash checksum test.
SEEPROM_test	Enables or disables the SEEPROM checksum test.
TOD_test	Enables or disables the TOD checksum test.
ALARMPORT	Enables or disables the alarmport test.
ALARMNUM	Selects any or all alarm ports to be tested: 0, 1, 2, 3.
ALARM0ON	Turns on, turns off, or toggles (on then off) alarm port 0.
ALARM1ON	Turns on, turns off, or toggles (on then off) alarm port 1.
ALARM2ON	Turns on, turns off, or toggles (on then off) alarm port 2.
ALARM3ON	Turns on, turns off, or toggles (on then off) alarm port 3.

---

**Note** – The alarmport test requires a visual check using an LED box.

---

## alarmtest Loopbacks

The loopback tests use the following external loopbacks:

- Ethernet loopback test—standard RJ-45 connector. Connect pin 1 to pin 3, and pin 2 to pin 6.
- Serial loopback test for Netra ct 800—DB-9 connector. Connect pin 2 to pin 3, pins 4 and 6 to pin 1, and pin 7 to pin 8.
- Serial loopback test for Netra ct 400—RJ-45. Connect pin 6 to pin 3, pin 1 to pin 8, and pin 2 to pin 7.

---

## alarmtest Test Modes

**TABLE 3-2** alarmtest Supported Test Modes

Test Mode	Description
Connection	Reports the status of the alarm card.
Functional (Offline)	Runs the subtests for Ethernet, Serial, Flash, PCMCIA, SEEPROM, TOD, and Alarmport.

---

## alarmtest Command-Line Syntax

```
/opt/SUNWvts/bin/alarmtest standard_arguments -o enet=  
E(nable)/D(isable),epatttype=seq+rand,epkts=number_packets,target=IP_address,  
etest=I+E+H+P,serial=E(nable)/D(isable),slb=I+E,spatttype=seq+rand,  
stest=c+d+u+v,pccard=E(nable)/D(isable),pccardtype=modem/serial,flash=  
E(nable)/D(isable),seeprom=E(nable)/D(isable),tod=E(nable)/D(isable),ttyubaud=
```

*ALL* / *specific\_baud*, *tttyvbaud*=*ALL* / *specific\_baud*, *aport*=[*E*]*nable* / [*D*]*isable*, *anum*=*0+1+2+3*, *a0on*=*On* / *Off* / [*T*]*oggle*, *a1on*=*On* / *Off* / [*T*]*oggle*, *a2on*=*On* / *Off* / [*T*]*oggle*, *a3on*=*On* / *Off* / [*T*]*oggle*

**TABLE 3-3** `alarmtest` Command-Line Syntax

Argument	Explanation
<code>enet=E(nable)/D(isable)</code>	Enables or disables Ethernet testing.
<code>epatype=seq+rand</code>	Selects the type of data pattern for <code>Enet_Test</code> : Sequential, Random, or both.
<code>epkts=number_packets</code>	Specifies the number of data packets to be sent in one test loop.
<code>target=IP_address</code>	Specifies the IP address of a host to use for the ping test.
<code>etest=I+E+H+P</code>	Selects any or all internal, external, Phy, or ping tests.
<code>serial=E(nable)/D(isable)</code>	Enables or disables <code>serial_test</code> .
<code>slb=I+E</code>	Selects internal loopback, external loopback, or both.
<code>spatype=seq+rand</code>	Selects the type of data pattern for <code>serial_test</code> : Sequential, Random, or both.
<code>stest=c+d+u+v</code>	Selects ports to be tested: c, d, u, or v.
<code>pccard=E(nable)/D(isable)</code>	Enables or disables PC card (PCMCIA) testing.
<code>pccardtype=modem/serial</code>	Specifies the card type for the PC Card: modem or serial i/o. Default is modem.
<code>flash=E(nable)/D(isable)</code>	Enables or disables the flash checksum test.
<code>seeprom=E(nable)/D(isable)</code>	Enables or disables the SEEPROM checksum test.
<code>tod=E(nable)/D(isable)</code>	Enables or disables the TOD checksum test.
<code>tttyubaud=ALL / specific_baud</code>	Defines baud rates to be used in testing the alarmcard's COM1 port.
<code>tttyvbaud=ALL / specific_baud</code>	Defines baud rates to be used in testing the alarmcard's COM2 port.
<code>aport=[E]nable / [D]isable</code>	Enables or disables the alarmport test.
<code>anum=0+1+2+3</code>	Selects any or all alarm port to be tested: 0, 1, 2, 3
<code>a0on=On / Off / [T]oggle</code>	Turns on, turns off, or toggles (on then off) alarm port 0.
<code>a1on=On / Off / [T]oggle</code>	Turns on, turns off, or toggles (on then off) alarm port 1.
<code>a2on=On / Off / [T]oggle</code>	Turns on, turns off, or toggles (on then off) alarm port 2.
<code>a3on=On / Off / [T]oggle</code>	Turns on, turns off, or toggles (on then off) alarm port 3.



---

**Note** – 64-bit tests are located in the `sparcv9` subdirectory:  
`/opt/SUNWvts/bin/sparcv9/testname`. If a test is not present in this directory,  
then it may only be available as a 32-bit test. For more information refer to “32-Bit  
and 64-Bit Tests” on page 3.

---



## SunATM Adapter Test (`atmtest`)

---

The `atmtest` checks the functionality of the SunATM™-155 and SunATM-622 SBus and PCI bus adapters.

It runs only in loopback (external or internal) mode. The asynchronous transfer mode (ATM) adapter, and ATM device driver must be present. To run the `atmtest` in external loopback mode, a loopback connector must be attached to the ATM adapter. The internal loopback mode does not require a loopback connector.

`atmtest` uses DLPI RAW mode to talk to the device driver. It establishes a virtual circuit (VC) to send a message, receive a message, and compare messages. If the message does not match, or the message is out of sequence, it displays an error message.

Using a random number generator, `atmtest` sends data into a data buffer and then sends each message from a different starting point. This assures that no two consecutive messages are the same.

`atmtest` can test more than one virtual circuit. The more virtual circuits used increases the stress level of the test. `atmtest` automatically selects the virtual circuit number which is unique to the test.

`atmtest` is nonscalable because it provides multiple virtual circuits to be tested by a single instance.

---

## `atmtest` Test Requirements

`atmtest` can only be selected when the Intervention mode is enabled since it requires a loopback connector for external loopback testing. While Intervention mode is enabled, `atmtest` and `nettest` are both available as default selections; however, you must deselect `nettest` when testing the ATM device.

Bring the ATM interface down to make sure that the interface is in offline mode before running `atmtest`.

---

**Note** – Do not run `nettest` while running `atmtest`.

---

---

**Note** – The external optical loopback test requires a 62.5 micron cable.

---

---

## atmtest Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.

### Sa0(atmtest) Test Parameter Options

**Configuration:**  
 Host\_Name: ss5-4-net191  
 Host Address: 172.18.191.34  
 Host ID: 80720852  
 Domain Name: nettest.eng.sun.com

**Options:**

Total\_packets: ▲ ▼

Number\_of\_VC: ▲ ▼

MAX\_PKT\_LEN: ▲ ▼

Outstanding\_Pkts: ▲ ▼

First\_VC\_no: ▲ ▼

Bandwidth: ▲ ▼

Loopback:  External  Internal

Print\_warning:  Enable  Disable

---

Within Instance:

Across All Instances:

FIGURE 4-1 atmtest Test Parameter Options Dialog Box

**TABLE 4-1** atmttest Options

Options	Description
Configuration	The post address, host ID, and domain name of the system being tested.
Total packets	The total number of packets sent. The default number of packets sent is 10000.
Number of VC	The default number of virtual circuits is 2. The atmttest uses these two virtual circuits to send out messages simultaneously. The message is received in sending order.
MAX_PKG_LEN	The maximum packet length to be used by the test to send out the data. The default number is 9140.
Outstanding_pkts	Describes the maximum number of outstanding packets. atmttest stops sending messages when the outstanding packet count is more than the number of packets this field specifies.
First_VC_no	Enables the user to set up the starting virtual circuit number to be used for each atmttest instance. atmttest can automatically avoid virtual circuit numbers that have already been used.
Bandwidth	Enables the user to select different bandwidths to test. The default number is 14.
Loopback	Enables the user to select either the external loopback field or internal loopback field. The default selection is the external loopback field. A loopback connector is only needed for external loopback testing.
Print Warning	Disabled by default. Click Enable to see warning errors, such as retry on timeout.

---

# atmtest Test Modes

TABLE 4-2 atmtest Supported Test Modes

---

Test Mode	Description
Functional (Offline)	Runs the full set of tests.

---

---

# atmtest Command-Line Syntax

`/opt/SUNWvts/bin/atmtest standard_arguments, -o dev=device,tpkts=n,nv=  
n,ml=n,bw=n,opkts=n | warn | ld | sd | sl | nc | ns,vcf=n`

TABLE 4-3 atmtest Command-Line Syntax

---

Argument	Description
<code>dev=device</code>	Specifies the device name to be tested, such as <code>ba0</code> or <code>sa0</code> .
<code>tpkts=n</code>	Specifies the number of packets to loopback, -1 for continuous [1...2147483647, -1].
<code>nv=num_vc</code>	Specifies the number of simultaneous virtual circuits to be tested.
<code>ml=max_len</code>	Specifies the maximum length of the random packet.
<code>bw=bandwidth</code>	Specifies the bandwidth in MBits/s of a virtual circuit.
<code>opkts=n</code>	Specifies the number of packets for each virtual circuit that can be transmitted without receiving a corresponding packet.
<code>warn</code>	When enabled, prints warning messages.
<code>ld</code>	The internal loopback mode is selected.
<code>sd</code>	Changes the payload data to static instead of random.
<code>sl</code>	Changes all packets to their maximum length.
<code>nc</code>	Instructs the test not to check the receive payload (improves throughput).
<code>ns</code>	Instructs the test not to exit on a packet reception failure.
<code>vcf=n</code>	Specifies the first virtual circuit number used.

---

---

**Note** – 64-bit tests are located in the `sparcv9` subdirectory:  
`/opt/SUNWvts/bin/sparcv9/testname`. If the test is not present in this directory,  
then it may only be available as a 32-bit test. For more information refer to “32-Bit  
and 64-Bit Tests” on page 3.

---



## Audio Test (`audiotest`)

---

The `audiotest` verifies the hardware and software components of the audio subsystem. This test supports all Sun audio implementations.

This test will work with exclusive access devices (only one process or application available at a time), or with newer audio devices which support the software mixer feature available in the Solaris 8 operating environment.

---

**Note** – `audiotest` turns the mixer off automatically at run time. Shut down all audio applications before running `audiotest`, as Online mode is not supported. The mixer is restored after testing.

---

This test is not scalable.

The availability of the following subtests depends on the particular audio implementation being tested.

# audiotest Subtests

TABLE 5-1 audiotest Subtests

Subtest	Description
Record/Play test	This test plays and records one second of data. It does not check data. This test is run on all audio implementations.
Crystal test	The crystal test measures the accuracy of the crystal that generates the sample rate clock. It does this by playing a one-second signal and then measuring the actual time required to play the signal. This measurement is performed for each of the eight standard sample rates. This test is available for <code>dbri(7)</code> and <code>audiocs(7)</code> audio implementations
Loopback tests	<p>This test verifies the functionality and signal quality of the audio ports. The test simultaneously plays and records a known signal. The recorded signal is analyzed for loop gain and signal-to-noise ratio plus distortion. This is repeated at various sample rates, encodings, precisions and channels.</p> <p>The audio ports that are supported depend on the audio implementation under test. The <code>audiocs(7)</code> implementation supports loopbacks from/to headphone, line-out, microphone, and line-in ports. The <code>dbri(7)/speakerbox</code> implementation supports fewer ports. The <code>audioamd(7)</code> implementation does not support loopback tests. Most tests require a stereo loopback cable.</p> <p>Note: The microphone loopback tests require special hardware and are used by manufacturing centers and special test facilities. Do not invoke the microphone loopback tests unless you have the required hardware.</p>
Controls test	This test verifies the three control buttons on the Sun speakerbox. The Controls test plays music while the user is prompted to press the Volume Down, Volume Up, and Mute buttons in a specific order. If no button is pressed in 30 seconds the test fails. This test is only supported on the <code>dbri(7)/speakerbox</code> implementation.
Audio test	This test plays a 30-second music file out of the speaker or headphone. The full benefit of this test is only realized if the user listens to the output. Badly distorted audio or inaudible music indicates a problem. This test is supported on all audio implementations.

---

# audiotest Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.

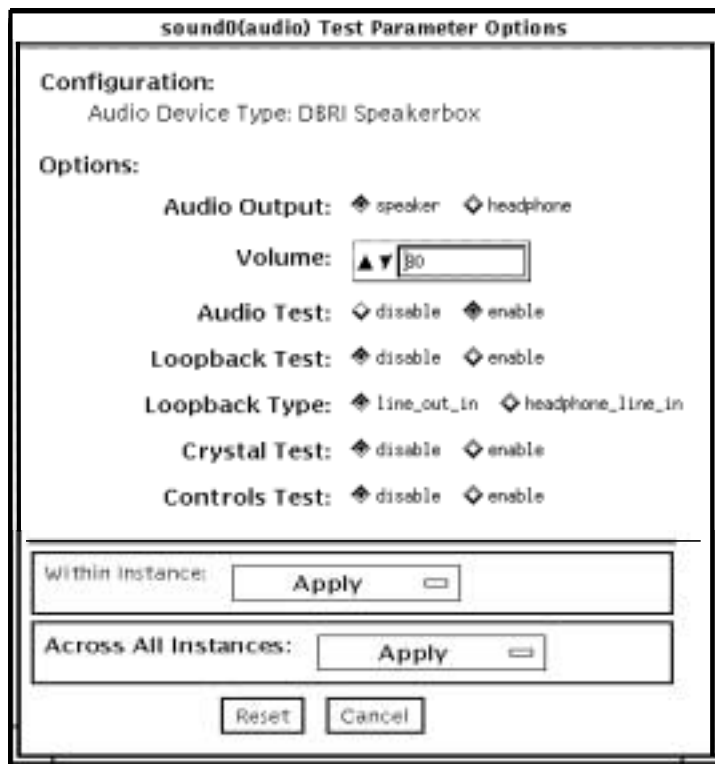


FIGURE 5-1 audiotest Test Parameter Options Dialog Box

---

**Note** – Upon startup, the SunVTS probe utility determines which audio implementation is present and adjusts the audiotest Option menu appropriately. Your dialog box may look different than the one pictured here, but will contain some or all of these options.

---

---

**Note** – The internal loopbacks are only active if the audio jacks are unused (nothing connected).

---

Some options can only be selected through the command line. See the command-line option descriptions in “audiotest Command-Line Syntax” on page 41.

**TABLE 5-2** audiotest Options

---

Option	Description
Audio Output	Selects the output port for the Music Play test.
Volume	Sets the volume for the Music Play test.
Audio test	Enables or disables the Music Play test. This test is enabled by default.
Loopback test	Enables or disables the Loopback test. A loopback cable must be installed between the selected ports to run external loopback tests. This test is disabled by default.
Loopback type	Selects the type of Loopback test to run.
Crystal test	Enables or disables the Crystal test. This test is disabled by default.
Controls test	Enables or disables the speakerbox Controls test. This is an interactive test. The user is prompted to press the control buttons on the speakerbox. This test is disabled by default.

---

---

**Note** – Do not run the Crystal test while running other SunVTS tests. The Crystal test is timing-dependent. If the system is too busy, it fails due to time-out errors.

---

---

# audiotest Test Modes

TABLE 5-3 audiotest Supported Test Modes

Test Mode	Description
Connection test	A simple open and close is performed. No data is transferred. The test returns a pass if the device can be opened and closed successfully. If the device cannot be opened because it is busy, then it is assumed that the device is successfully connected to another process and the test passes.
Functional (Offline)	The record/play test is run and you can choose to run any of the tests described earlier. In this mode, the test will fail if the device is busy.

---

# audiotest Command-Line Syntax

```
/opt/SUNWvts/bin/audiotest standard_arguments -o dev=  
/dev/sound/unit_no, I=/dev/ioctl_device, M,L,Q,S,T=loopback_test_type,  
X,E,LE,CD,CDD=CD_device_name, CDT=track_number, CDG=play_gain, CDL=  
play_time, W, MF=filename, TF=filename
```

TABLE 5-4 audiotest Command-Line Syntax

Argument	Description
dev=/dev/audio_device	Specifies the audio device to be tested. The default is dev=/dev/audio.
I=/dev/ioctl_device	Specifies the audio ioctl device to be tested. The default is /dev/audioctl.
M	Enables the Music Play test.
L	Enables the Loopback test.
Q	Enables the Quality test. This option does the same thing as L option except that it prints an extra status message upon completion.
S	Enables the speakerbox Controls test.

**TABLE 5-4** audiotest Command-Line Syntax (Continued)

Argument	Description
<b>T</b> = <i>loopback_test_type</i>	<p>Specifies the type of Loopback test. The default is 1; the choices are listed below:</p> <ul style="list-style-type: none"> <li>• 0—Codec Internal Loopback (CS4231 audio only)</li> <li>• 1—Line-in/Line-out</li> <li>• 2—Headphone/Line-in</li> <li>• 3—Headphone/Microphone</li> <li>• 4—Speaker/CD-input</li> <li>• I1—Internal Line-in/Line-out</li> <li>• I2—Internal Spk/Mic</li> <li>• I3—Internal Headphone/Aux1</li> <li>• I4—Internal Speaker/Aux1</li> <li>• I5—Internal Headphone/Mic</li> </ul> <p>Note: Test type 0 is always run by default on CS4231 audio implementations. Test types 3 and 4 require special hardware, and are used by manufacturing centers and special test facilities. Do not invoke these tests unless you have the required hardware.</p>
<b>X</b>	Enables the Audio Crystal test.
<b>E</b>	Continues testing if an error occurs.
<b>LE</b>	Loops on error. This plays the signal data in a continuous loop.
<b>CD</b>	Enables the <i>cdtest</i> . This is for systems with an internal CD-ROM drive. A CD-ROM with music tracks must be loaded prior to running this test.
<b>CDD</b> = <i>CD_device_name</i>	Specifies the raw device name for the CD-ROM drive. The default is <code>CDD=/dev/rdisk/c0t6d0s0</code> .
<b>CDT</b> = <i>number</i>	Specifies the track number of the CD-ROM to play. The default is to play the first track on the disc.
<b>CDG</b> = <i>play_gain</i>	Specifies the play gain of the CD Play test (0 to 255). The default is 120.
<b>CDL</b> = <i>play_time</i>	Specifies the number of seconds to run the CD Play test. The default is 30 seconds.

**TABLE 5-4** audiotest Command-Line Syntax (*Continued*)

Argument	Description
<b>W</b>	Shows warning messages during the Loopback test.
<b>MF=filename</b>	Selects an optional music file.
<b>TF=filename</b>	Specifies an optional tolerance file.

Note: The tolerance file is used by manufacturing centers and special test facilities. Do not use this option unless you are familiar with the tolerance file format.

**Note** – 64-bit tests are located in the `sparcv9` subdirectory: `/opt/SUNWvts/bin/sparcv9/testname`. If the test is not present in this directory, then it may only be available as a 32-bit test. For more information refer to “32-Bit and 64-Bit Tests” on page 3.





## Bidirectional Parallel Port Printer Test (`bpptest`)

---

The `bpptest` verifies the functionality of the bidirectional parallel port. SBus printer cards have two printer ports: one for any printer device and one for a parallel port printer.

The `bpptest` also verifies that your SBus card and its parallel port are working properly by attempting to transfer a data pattern from the SBus card to the printer.

Two indications show that the card and printer are functioning properly: First, you can see from the SunVTS Status window that `bpptest` made a successful pass, and second, that the pattern transmitted to the printer printed correctly.

If the `bpptest` passes successfully, you know that the SBus DMA circuitry, the printer, and the device driver are functioning properly.

---

**Note** – Large PostScript™ files or raster files may require that the printer has 2 MB or more of memory. Otherwise, the printout may appear on two different sheets of paper.

---


---

## `bpptest` Hardware and Software Requirements

The SBus printer card and device drivers must be installed to run `bpptest`. A printer must be connected to the bidirectional parallel port, and be powered-up. If both a SPARCprinter and a parallel port printer are connected to the SBus card, you can test both devices at the same time.

# bpptest Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.

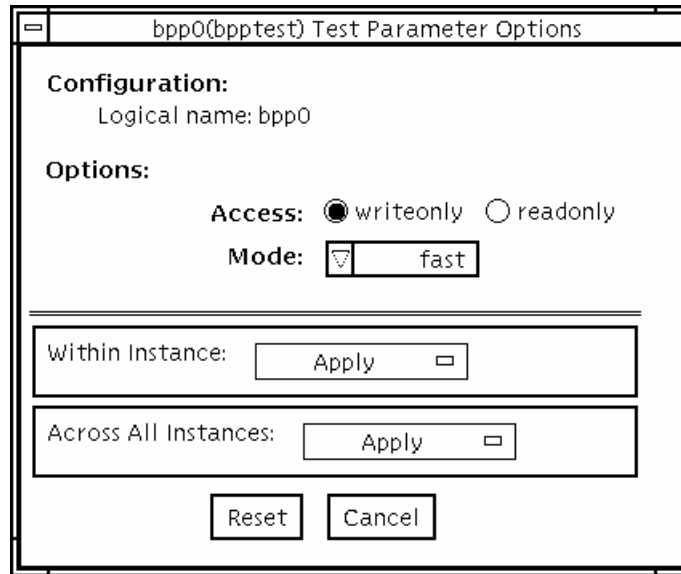

**FIGURE 6-1** bpptest Test Parameter Options Dialog Box

**TABLE 6-1** bpptest Options

Option	Description
Access	Determines the direction of data transfer; this field is informational only. <i>Writeonly</i> is the only option currently available. Data is transferred only from the SBus printer card to the printer.
Mode	Sets the print intervals. This option lets you select the intervals at which the test image is printed. The default setting is <i>fast</i> . In the online and Functional tests this option is set to <i>medium</i> . In the Functional test, the choices are: <ul style="list-style-type: none"><li>• <i>fast</i>—prints an image every 10 seconds.</li><li>• <i>medium</i>—prints an image every 12 minutes.</li><li>• <i>extended</i>—prints an image every 30 minutes.</li></ul>

---

# bpptest Test Modes

This test supports Connection and Functional test modes.

TABLE 6-2 bpptest Supported Test Modes

Test Mode	Description
Connection	In this mode, <code>bpptest</code> verifies that a bidirectional parallel port is configured on the system. The success of the <code>bpptest</code> in this mode indicates that the bidirectional parallel port hardware and the software driver are installed on the system.
Functional (Offline)	The testing done in this mode registers a failure if the port is found busy. This is because SunVTS tests make the assumption that all the resources will be available for testing in the Functional test and therefore the unavailability of the device is interpreted as an indication of a fault condition.

---

# bpptest Command-Line Syntax

```
/opt/SUNWvts/bin/bpptest standard_arguments -o dev=device_name,access=writeonly|readonly,mode=mode
```

TABLE 6-3 bpptest Command-Line Syntax

Argument	Description
<code>dev=device_name</code>	Specifies the name of the device. This should be of the form <code>/dev/bpp#</code> , where <code>#</code> is the minor number of the device.
<code>access=writeonly</code>	Determines test mode. <code>writeonly</code> is the only option currently available.
<code>mode=mode</code>	Sets the test image print rate. The test image is a continuous printout of the ASCII character set. Possible rates are: <ul style="list-style-type: none"><li>• <code>fast</code>—prints the test image at 10-second intervals.</li><li>• <code>medium</code>—prints the test image at 12-minute intervals.</li><li>• <code>extended</code>—prints the test image at 30-minute intervals.</li></ul>

---

**Note** – 64-bit tests are located in the `sparcv9` subdirectory:  
`/opt/SUNWvts/bin/sparcv9/testname`. If a test is not present in this directory,  
then it may only be available as a 32-bit test. For more information refer to “32-Bit  
and 64-Bit Tests” on page 3.

---

## Compact Disc Test (`cdtest`)

---

The `cdtest` checks the CD-ROM unit by reading the CD.

`cdtest` is not a scalable test.

Each track is classified as follows:

- Mode 1 uses error detection/correction code (288 bytes).
- Mode 2 uses that space for auxiliary data or as an audio track.

---

**Note** – Load a compact disc into the drive before starting the test. See the explanation of CD types in TABLE 7-1.

---

---

## Volume Management and Compact Discs

`cdtest` tests the CD-ROM drive(s) even if the Volume Manager is not running. If the Volume Manager is running and no media is installed in the CD-ROM drive(s), SunVTS prompts you to install media in the drive before selecting the test.

The test fails if you try to run it without a CD in the drive.

---

## cdtest Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.

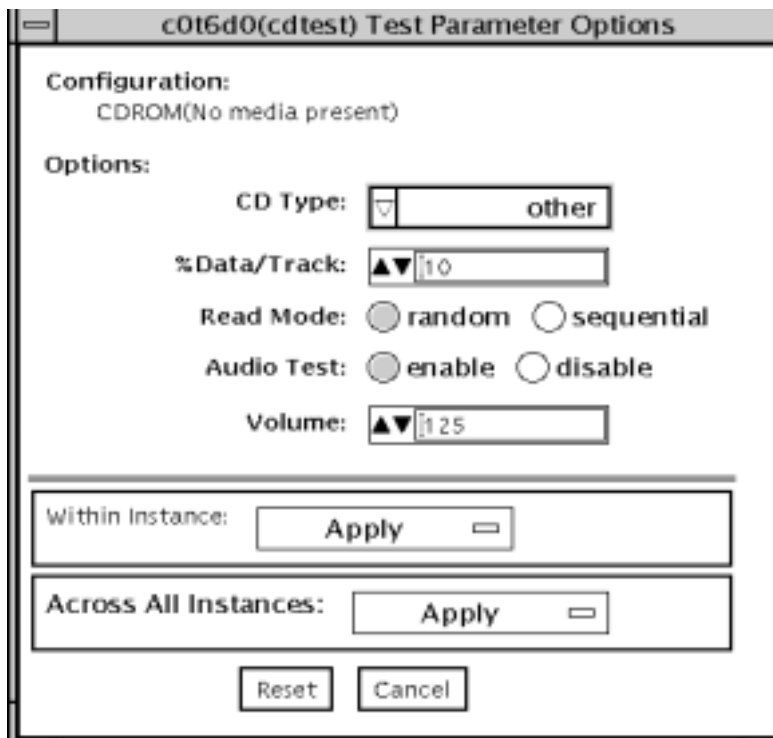


FIGURE 7-1 cdtest Test Parameter Options Dialog Box

TABLE 7-1 cdtest Options

Options	Description
CD Type	The types of compact discs that can be tested are listed in the CD Type menu. The choices are: pdo, multi-session, or other (the default CD type is other). In the Connection test, this option has a default value of other.  Note: Your choice must correspond with the disc used for testing.
% Data/Track	Tests a percentage of data on each track. Type a value between 0 and 100 in this field to indicate the percentage. In the online and connection tests this option has a canned value of 2%.

**TABLE 7-1** `cdtest` Options

Options	Description
Read Mode	<code>cdtest</code> reads the CD either in Random or Sequential mode. In Random mode, data blocks are read from random track positions; in Sequential mode, data blocks are read in sequence. For both modes, the total number of blocks read is determined by the <code>%_of_data</code> option. In the online and Connection tests this option has a canned value of random.
Audio Test	Enables or disables the audio test. You must connect headphones or a speaker to the audio jack on the CD player to hear audio output. In the Connection test, this option has a default value of disable.
Volume	Adjusts the volume. Type a value between 0 and 255 in this field. In the online and connection tests this option has a default value of 125.

---

## `cdtest` Test Modes

This test supports Connection and Functional tests.

**TABLE 7-2** `cdtest` Supported Test Modes

Test Mode	Description
Connection	In this mode, <code>cdtest</code> verifies that a CD-ROM drive is connected to and configured in the system.
Functional (Offline)	This mode is similar to Functional online mode except that the test registers a failure if the device is found to be busy. This is because SunVTS tests make the assumption that all the resources will be available for testing in the Functional test and the unavailability of a device is interpreted as an indication of a fault condition.



---

# cdtest Command-Line Syntax

`/opt/SUNWvts/bin/cdtest standard_arguments -o dev=raw_device_name, mode=mode, read=random/sequential, data=%_of_data, vol=volume, audio=enable/disable, type=CD_type`

TABLE 7-3 cdtest Command-Line Syntax

Argument	Description
<code>dev=raw_device_name</code>	Specifies the name of the raw device to be tested.
<code>read=random/sequential</code>	Indicates random or sequential read access.
<code>data=%_of_data</code>	Sets the percentage of data to be tested. You can specify 0 to 100 percent.
<code>vol=volume</code>	Controls the audio volume. You can specify 0 through 255; the default is 255.
<code>audio=enable/disable</code>	Enables or disables the audio test. You must connect headphones or a speaker to the audio jack on the CD player to hear audio output.
<code>type=CD_type</code>	Specifies the type of CD used for the test. The choices are: <code>pdo</code> , <code>multi-session</code> , <code>sunos</code> and <code>other</code> ; the default is <code>other</code> .

---

**Note** – 64-bit tests are located in the `sparcv9` subdirectory:

`/opt/SUNWvts/bin/sparcv9/testname`. If a test is not present in this directory, then it may only be available as a 32-bit test. For more information refer to “32-Bit and 64-Bit Tests” on page 3.

---



## Color Graphics Frame Buffer Test (cg14test)

---

`cg14test` checks the `cg14` frame buffer card. `cg14test` is specific to the VSIMM (Video SIMM) devices in the SPARCstation 10 SX and the SPARCstation 20 SX.



---

**Caution** – Do not close the SunVTS window to an icon while it is running frame buffer tests.

---

---

### `cg14test` Requirements

Ensure that the frame buffer locking option is enabled from the Options window. For full instructions on testing frame buffers, see “Testing Frame Buffers” on page 8.

---

### `cg14test` Groups

There are nine test groups in `cg14test`:

1. MDI and VBC Chip Control Registers
2. Memory Chips
3. MDI Chip Cursor Registers
4. MDI Chip CLUT Registers

5. DAC Chip Registers
6. MDI Chip XLU Registers
7. CG14 Display (visual only)
8. MDI Chip Testmode Readback in 8-bit mode
9. Driver IOCTLs

**TABLE 8-1** cg14 Test Groups

Test Groups	Description
Hardware (Groups 1-6)	These test groups are tested by opening <code>/dev/fbs/cgfourteenX</code> , mapping the MDI Control Address Space, modifying the target test location (using direct writes to the mapped address space), reading from the mmapped address space for verification, and closing the device.
Visual Pattern (Group 7)	This subtest loads a visual pattern of 256 colors, then rotates the pattern around. You verify this test by seeing it display.
Data Propagation (Group 8)	<p>This test group is tested by loading the frame buffer (FB) memory with four neutral data patterns, then setting a target FB pixel with data that triggers the test mode readback latch. The result is read from the readback register after vertical blanking occurs. Two different trigger patterns are used at each FB pixel. All four MDI pixel paths (A - D) are used, and the pixel locations for each trigger are designed to detect gross MDI input data opens or short, VRAM SAM addressing, and VRAM-to-SAM transfer addressing.</p> <p>The screen shows four horizontal bars, which are either greyscale or colored. These bars change each time the trigger data is inverted, and as it completes the testing of a raster pattern.</p>
<p>Note: If the resolution and VRAM size permits, 8-bits per pixel mode are tested.</p>	

**TABLE 8-1** cg14 Test Groups (Continued)

Test Groups	Description
Driver (Group 9)	<p data-bbox="596 239 1279 378">Test all IOCTL calls that have not yet been used to verify proper driver communication to the hardware. Call the driver to perform a hardware update, and then confirm that the update was successful by using the complementary driver read, or reading the mmap'ed address space and comparing it against the stimulus.</p> <p data-bbox="596 418 1279 557">cg14test performs the appropriate steps before and after each test (if possible) to maintain context and prevent visual confusion by saving the register data before it is overwritten, disabling video (if possible), performing the specific test, and restoring the saved register data information.</p> <p data-bbox="596 597 1279 649">The data used for register testing is optimized to include all 0's, all 1's, and walking a 1 through each bit being tested.</p>
MDI and VBC Chip Control Registers (Group 1)	<ul style="list-style-type: none"> <li data-bbox="596 670 1136 696">• Master Control Register bits 7-0 write/read verify</li> <li data-bbox="596 701 1108 727">• Packed Pixel Register bits 3-0 write/read verify</li> <li data-bbox="596 732 1250 784">• Master Status Register bits 7-4 read-only verify 0x00 and 0x30 occur</li> <li data-bbox="596 789 1208 815">• Horizontal Blank Start Register bits 9-0 write/read verify</li> <li data-bbox="596 821 1215 847">• Horizontal Blank Clear Register bits 9-0 write/read verify</li> <li data-bbox="596 852 1179 878">• Horizontal Sync Set Register bits 9-0 write/read verify</li> <li data-bbox="596 883 1208 909">• Horizontal Sync Clear Register bits 9-0 write/read verify</li> <li data-bbox="596 914 1208 940">• Composite Sync Clear Register bits 9-0 write/read verify</li> <li data-bbox="596 946 1186 972">• Vertical Blank Start Register bits 11-0 write/read verify</li> <li data-bbox="596 977 1193 1003">• Vertical Blank Clear Register bits 11-0 write/read verify</li> <li data-bbox="596 1008 1158 1034">• Vertical Sync Set Register bits 11-0 write/read verify</li> <li data-bbox="596 1039 1179 1065">• Vertical Sync Clear Register bits 11-0 write/read verify</li> <li data-bbox="596 1071 1222 1123">• Transfer Cycle Set Register bits 9-0 write/read verify (MDI revision 0 only)</li> <li data-bbox="596 1128 1250 1180">• Transfer Cycle Clear Register bits 9-0 write/read verify (MDI revision 0 only)</li> <li data-bbox="596 1185 1200 1211">• Fault Status Address Register bits 15-0 write/read verify</li> <li data-bbox="596 1216 1229 1269">• Auto-increment Address Space Register bits 7-0 write/read verify</li> <li data-bbox="596 1274 1115 1300">• Video Base Register bits 23-12 write/read verify</li> </ul>

**TABLE 8-1** cg14 Test Groups (Continued)

Test Groups	Description
Memory Chips (Group 2)	The Memory Chips test group includes VRAM Testing, Memory Retention, and Test Write Recovery.  VRAM Testing: The Data Bus test uses 18 NTA patterns (Nair, Thatte, and Abraham's testing procedure for RAM) to check for data and address faults. This test is performed in MDI_CHUNKY_XBGR_MAP access mode only. See TABLE 8-2.

**TABLE 8-1** cg14 Test Groups (Continued)

Test Groups	Description
Memory Chips (Group 2) Continued	<p>VRAM Testing (Continued)</p> <p>The test ascends through the frame buffer memory, clearing it to 0's. The NTA pattern test number <i>x</i> reads a location to make sure test data <i>y</i> is present. It then writes new data <i>z</i> to that location. The location ascends through the FB sequentially. See TABLE 8-2.</p> <p>Memory Retention:</p> <p>The VRAM Data Retention test checks for gross problems with the VRAM refresh. Since refresh is active during this test, no retention problems should occur unless the refresh is defective.</p> <p>This test turns off the video, writes 0's to all the VRAM, waits the specified <code>memory_hold</code> time (the default is five seconds), then reads and compares all VRAM data. This process is repeated with data of f's, then the video is restored and the test is complete.</p> <p>Two command-line parameters are related to this test: <code>R=number</code> and <code>H=number</code>. <code>R=</code> lets the user specify the refresh interval from 128-1023. The time between refresh cycles and the system default is 123. <code>H=</code> lets the user specify the retention test hold time in seconds.</p> <p>Write Recovery:</p> <p>A Write Recovery test is used in all the EMC mapping modes to write data to 0's followed by immediately reading that data location to see if the VRAM can recover from a write correctly. This is done to all sequential ascending locations. Next, a second independent pass of memory is made with the complementary data of 0xffffffff written to descending locations of the FB memory buffer.</p> <p>The EMC mapping access modes are:</p> <ul style="list-style-type: none"><li>• MDI_CHUNKY_XGBR_MAP</li><li>• MDI_CHUNKY_BGR_MAP</li><li>• MDI_PLANAR_X16_MAP</li><li>• MDI_PLANAR_C16_MAP</li><li>• MDI_PLANAR_X32_MAP</li><li>• MDI_PLANAR_B32_MAP</li><li>• MDI_PLANAR_G32_MAP</li><li>• MDI_PLANAR_R32_MAP</li></ul>

**TABLE 8-1** cg14 Test Groups (Continued)

Test Groups	Description
MDI Chip Cursor Registers (Group 3)	<p>The MDI Chip Cursor Registers are:</p> <ul style="list-style-type: none"> <li>• Cursor Plane 0 Register bits 31-0 write/read verify</li> <li>• Cursor Plane 1 Register bits 31-0 write/read verify</li> <li>• Cursor Plane 0 Register bits 31-0 write/read verify (with auto increment)</li> <li>• Cursor Plane 1 Register bits 31-0 write/read verify (with auto increment)</li> <li>• Cursor Control Register bits 2-0 write/read verify</li> <li>• Cursor Color Register 1 bits 28-0 write/read verify</li> <li>• Cursor Color Register 2 bits 28-0 write/read verify</li> <li>• X-Cursor Location Register bits 11-0 write/read verify</li> <li>• Y-Cursor Location Register bits 11-0 write/read verify</li> <li>• Cursor Plane 0 Non-Auto Registers test</li> <li>• Cursor Plane 0 Auto Registers test</li> <li>• Cursor Plane 1 Non-Auto Registers test</li> <li>• Cursor Plane 1 Auto Registers test</li> <li>• Cursor Planes Retry A test</li> <li>• Cursor Planes Retry B test</li> </ul>
MDI Chip CLUT Registers (Group 4)	<p>The MDI Chip CLUT Registers are:</p> <ul style="list-style-type: none"> <li>• LUT1 Registers 0-255 bits 31-27 &amp; 23-0 write/read verify</li> <li>• LUT1 Registers 0-255 bits 31-27 &amp; 23-0 write/read verify (with auto increment)</li> <li>• LUT1D Registers 0-255 bits 31-27 &amp; 23-0 write/read verify</li> <li>• LUT1D Registers 0-255 bits 31-27 &amp; 23-0 write/read verify (with auto increment)</li> <li>• LUT2 Registers 0-255 bits 31-27 &amp; 23-0 write/read verify</li> <li>• LUT2 Registers 0-255 bits 31-27 &amp; 23-0 write/read verify (with auto increment)</li> <li>• LUT2D Registers 0-255 bits 31-27 &amp; 23-0 write/read verify</li> <li>• LUT2D Registers 0-255 bits 31-27 &amp; 23-0 write/read verify (with auto increment)</li> <li>• LUT3 Registers 0-255 bits 31-27 &amp; 23-0 write/read verify</li> <li>• LUT3 Registers 0-255 bits 31-27 &amp; 23-0 write/read verify (with auto increment)</li> <li>• LUT3D Registers 0-255 bits 31-27 &amp; 23-0 write/read verify</li> <li>• LUT3D Registers 0-255 bits 31-27 &amp; 23-0 write/read verify (with auto increment)</li> </ul>



**TABLE 8-1** cg14 Test Groups (Continued)

Test Groups	Description
DAC Chip Registers (Group 5)	The DAC Chip Registers test group includes the RAMDAC registers and control registers.  RAMDAC Registers: <ul data-bbox="596 366 1233 427" style="list-style-type: none"><li>• Address Register bits 7-0 (0x7 maximum) write/read verify</li><li>• Mode Register bits 7-0 (skip bit 5) bits write/read verify</li></ul> Control Registers: <ul data-bbox="596 501 1262 708" style="list-style-type: none"><li>• ID Register bits 7-0 r/o verify data is 0x8C</li><li>• Pixel-Mask Register bits 7-0 write/read verify (skipped if dac rev= 2)</li><li>• Command2 Register bits 7-0 write/read verify (skipped if dac rev = 2)</li><li>• Command3 Register bits 7-0 write/read verify (skipped if dac rev = 2)</li></ul>
MDI Chip XLUT Registers (Group 6)	The MDI Chip XLUT Registers are: <ul data-bbox="596 765 1243 939" style="list-style-type: none"><li>• XLUT Registers 0-255 bits 7-0 write/read verify</li><li>• XLUT Registers 0-255 bits 7-0 write/read verify (with auto increment)</li><li>• XLUTD Registers 0-255 bits 7-0 write/read verify</li><li>• XLUTD Registers 0-255 bits 7-0 write/read verify (with auto increment)</li></ul>

**TABLE 8-1** cg14 Test Groups (Continued)

Test Groups	Description
CG14 Display (visual only) Group 7)	This test visually displays 256 boxes on the screen (each in a different color), and then shifts the CLUT1 entries giving the visual impression of the pattern mirroring itself from left to right horizontally. The pattern then rotates up, down, followed by mirroring itself horizontally left to right.
MDI Chip Test Mode Readback Register (Group 8)	This test mode reads back register bits 23-0 in read-only and verify modes.

**TABLE 8-1** cg14 Test Groups (Continued)

Test Groups	Description
Driver IOCTLs (Group 9)	<ul style="list-style-type: none"> <li>• MDI_GET_CFGINFO check # of CLUT's, pixel height, pixel width, and pixel mode against hardware</li> <li>• FBIOGATTR check real_type, fb_height, fb_width, fb_depth, fb_cmsize, and fb_size against cfginfo values</li> <li>• FBIOGTYPE check fb_type, fb_height, fb_width, fb_depth,fb_size, and fb_cmsize against driver defines or cfginfo values</li> <li>• FBIOGVIDEO check status returned against hardware</li> <li>• FBIOSVIDEO set off, off, on, on, off verifying against hardware</li> <li>• FBIOVERTICAL (imbedded in FBIOSVIDEO)</li> <li>• MDI_VRT_CNTL turn off, off, on, on, off the video interrupt enable and verify the hardware agreesMDI_SET_PIXELMODE set different modes and verify against the hardware</li> <li>• MDI_SET_PPR set the different modes and verify against the hardware</li> <li>• MDI_SET_COUNTERS set HSS, HSC, XCC, HBC, XCS, HBS, CSC, VSS, VSC, VBC, VBS, HCT, and VCT then verify against hardware</li> <li>• MDI_SET_XLUT set xlut and verify against hardware</li> <li>• MDI_GET_XLUT get xlut and verify against hardware</li> <li>• MDI_SET_CLUT set clut (1-3 as applicable) and verify against hardware</li> <li>• MDI_GET_CLUT get clut (1-3 as applicable) and verify against hardware</li> <li>• FBIOPUTCMAP set and verify clut1 matches</li> <li>• FBIOGETCMAP verify clut1 matches get</li> <li>• FBIOSATTR set emu_type to FBTYPE_MDICOLOR and verify</li> <li>• FBIOGATTR check</li> <li>• FBIOGCURMAX verify x and y size match driver defines</li> <li>• FBIOSCUSOR verify set at 3 locations matches hardware</li> <li>• FBIOGCURSOR verify driver knows what set(s) just did</li> <li>• FBIOSCURPOS verify set at three locations matches hardware</li> <li>• FBIOGCURPOS verify driver knows what set(s) just did</li> <li>• MDI_SET_CURSOR set then check CCR, XCU, and YCU cursor hardware registers</li> </ul>


**TABLE 8-2** cg14test NTA Testing Patterns

NTA Test Pattern Number = <i>x</i>	Test Data = <i>y</i>	New Data = <i>z</i>
1.0	0x00000000	0x01010101
1.5	0x01010101	0xffffffff
2.1	0xffffffff	0xf1f1f1f1
2.2	0xf1f1f1f1	0x33333333
3.1	0x33333333	0xf0f0f0f0
3.2	0xf0f0f0f0	0x0f0f0f0f
4.1	0x0f0f0f0f	0x55555555
4.2	0x55555555	0xaaaaaaaa
5.1	0xaaaaaaaa	0x05050505 (1x) 0x88888888 (2x)
5.2	0x88888888	0xf5f5f5f5
6.1	0xf5f5f5f5	0x00000000 (1x) 0x5f5f5f5f (2x)
6.2	0x5f5f5f5f	0x11111111
7.1	0x11111111	0x00000000 (1x) 0xcccccccc (2x)
7.2	0xcccccccc	0xdbdbdbdb
8.1	0xdbdbdbdb	0x6d6d6d6d
8.2	0x6d6d6d6d	0x6b6b6b6b
9.1	0x6b6b6b6b	0x00000000
9.2	0x00000000	-

---

## cg14test Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.

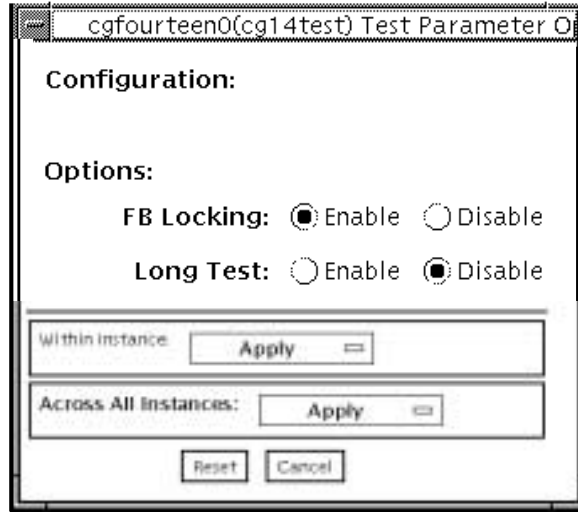

**FIGURE 8-1** cg14test Test Parameter Options Dialog Box

**TABLE 8-3** cg14test Options

Options	Description
FB Locking	See “Testing Frame Buffers” on page 8 for details.
Long Test	When enabled, the color bar screen(s) in the MDI Testmode Readback test checks all SAM transfers in clock=0 mode and clock=1 mode. If Long test is disabled, clock=1 runs checks on the first eight addresses and the first SAM transfer only.
Processor Affinity	For multiprocessor systems, indicates the processor to be tested.

## cg14test Test Modes

Due to the nature of graphic tests, reading from or writing to the frame buffer during graphic tests will disturb user operation. This test is only available in offline Functional test mode.

**TABLE 8-4** cg14test Supported Test Modes

Test Mode	Description
Functional (Offline)	This mode uses all subtests to test the cg14 frame buffer. The user can select the long mode for TRMB subtest.

---

# cg14test Command-Line Syntax

`/opt/SUNWvts/bin/cg14test standard_arguments -o dev=device_name, lock=E(nable)/D(isable),L,I`

**TABLE 8-5** cg14test Command-Line Syntax

Argument	Description
<code>dev=device_name</code>	Specifies the path of the cg14 device file to be tested; for example: <code>/dev/fbs/device_name</code> .
<code>lock=E(nable)/D(isable)</code>	Enables and disables the window system locking option. See “Testing Frame Buffers” on page 8 for details. Do not use when your device is the window system display.
<code>L</code>	Enables the long TMRB test.
<code>I</code>	Enables optional driver ioctl tests for cursor. Note: Do not move the mouse during the cg14test when you run this option.

---

**Note** – 64-bit tests are located in the `sparcv9` subdirectory:

`/opt/SUNWvts/bin/sparcv9/testname`. If a test is not present in this directory, then it may only be available as a 32-bit test. For more information refer to “32-Bit and 64-Bit Tests” on page 3.

---

## Frame Buffer, GX, GXplus, and TurboGX Options Test (cg6)

---

The `cg6` test verifies the GX, GXplus, and TurboGX™ frame buffer and the graphics options offered with most SPARC™ based workstations and servers. This test stresses the frame buffer with the subtests described below.

For full instructions on testing frame buffers, see “Testing Frame Buffers” on page 8.

---

**Note** – Disable all screen savers before testing any graphics device. Type `xset s off` at the prompt to disable the Solaris screen saver.

To start SunVTS with `vtstui`, but without `vtstsk`, add the host name to `xhost` as:  
`xhost + hostname`.

---

---

# cg6 Subtests

TABLE 9-1 cg6 Subtests

Subtests	Description
Cursor test	cg6 visually checks the overlay registers of the RAMDAC. A pointer is drawn on the screen and moved to predetermined locations. There is a problem if the pointer disappears. This visual test ensures that the overlay is working properly
Fast Copy in double buffer test mode	Creates two full-size screen raster images in double buffer mode, writing different patterns to each. The hidden buffer is copied to the visible buffer, and the data is compared. An error message is returned if there are inconsistencies. Then the buffer is flipped and the process is repeated.  Note: This test only applies to Sun Microsystems GX+ graphic accelerators with double-buffering capacity.
TEC test	Verifies that the transformation engine and cursor control logic are accessible to confirm that further TEC access is performed correctly.
FBC test	Verifies that the frame buffer controller logic is accessible to confirm that further FBC access is performed correctly.
Frame Buffer test	Verifies that the frame buffer memory is working. A “walking ones” pattern is written to memory, with a specific color signifying one of eight bits. The screen is divided into eight equally wide vertical stripes. A “walking one” is written to each stripe, causing eight iterations of these stripes. The value written is read back and checked. If the values do not match, an error is reported.
Screen test using blits	Draws blocks of color and performs <code>blit</code> transfers to other portions of the screen. First, the entire screen is drawn with cyan, then a black block is placed in the upper-left corner. This subtest <code>blits</code> this block on the upper-right, lower-right, and lower-left corners, then “or’s” the whole image.
Blit test	Draws a block of data and <code>blit</code> into a location at the bottom-right rectangle.



**TABLE 9-1** cg6 Subtests

Subtests	Description
Line test	Draws lines on the screen in different colors with different data values. The data is read back and compared with the expected values. An error is returned in the case of a mismatch.
Polygon test	Draws hourglass-shaped polygons on the screen, using the four vertices. After all the polygons are rendered in the video memory, they are read back and the data compared with expected values. If there is a mismatch, an error is displayed.
Colormap test	Loads all 256 locations in the color map with a greyscale, both backward and forward. This means decreasing values are loaded to all R, G, and B values.

Note: If the system being tested has a monochrome or greyscale monitor, visual color problems are undetectable.

---

## cg6 Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.

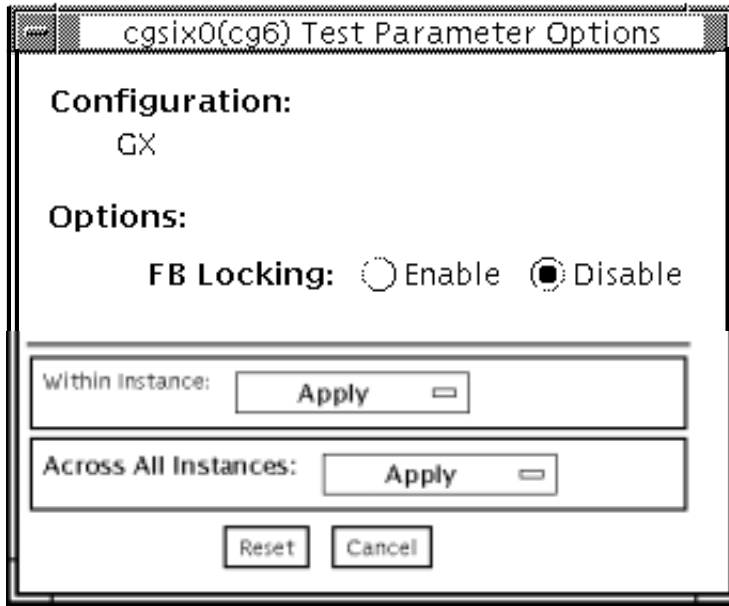


FIGURE 9-1 cg6 Test Parameter Options Dialog Box

---

**Note** – See “Testing Frame Buffers” on page 8 for details about frame buffer locking.

---

## cg6 Test Modes

Due to the nature of graphic tests, reading from or writing to the frame buffer during graphic tests will disturb user operation.

TABLE 9-2 cg6 Supported Test Modes

Test Mode	Description
Functional (Offline)	Runs the full set of tests

---

# cg6 Command-Line Syntax

`/opt/SUNWvts/bin/cg6 standard_arguments -o dev=device_name, lock=E(nable)/D(isable), Passes=number`

**TABLE 9-3** cg6 Command-Line Syntax

Argument	Description
<code>dev=device_name</code>	Specifies the path of the cg14 device file to be tested, for example, <code>/dev/eps/device_name</code> .
<code>lock=E(nable)/D(isable)</code>	Enables/disables the window system locking option. See “Testing Frame Buffers” on page 8 for details. Do not use when device is the window system display.
<code>Passes=number</code>	The number of passes to run. The default is 1.

---

**Note** – 64-bit tests are located in the `sparcv9` subdirectory:

`/opt/SUNWvts/bin/sparcv9/testname`. If a test is not present in this directory, then it may only be available as a 32-bit test. For more information refer to “32-Bit and 64-Bit Tests” on page 3.

---

---

**Note** – Extra swap space of 5 MB is required.

---



## CPU Test (cputest)

---

The `cputest` checks specific aspects of SPARC V9 processor datapath functionality.

The `cputest` comprises two subtests:

- `g0` subtest—tests a processor’s `g0` register functionality. The `g0` subtest is only supported on UltraSPARC-based systems.
- `CUC` subtest—tests a processor’s ability to correctly execute a Compress/Uncompress/Compare (`cmp`) command sequence on machines with the SPARC-V9 architecture.

As the `CUC` subtest runs, it creates four files in the `/tmp/sunvts` directory. The `CUC` subtest uses the following file naming conventions where `nnn` represents the processor unit number and `x` represents a random character string appended to the file name:

- `PnnnPx`— original pattern file (size determined by the `cputest` File Size option)
- `PnnnZx`— compressed version of the pattern file
- `PnnnUx`— uncompressed data from the `PnnnZx` file
- `PnnnCx`— comparison data between the `PnnnPx` and `PnnnUx` files

With the `cputest` file retention mode, you can control whether these files are deleted or not, so that in the event of a miscompare, you can view the contents of the files to analyze the miscompared data. The exact names of the files are displayed in the SunVTS message window whenever the files are saved such as when there is a compression miscompare or when the file retention mode is set to save. Refer to “`cputest` Options” on page 74 for more details.



---

**Caution** – Do not run the `CUC` subtest with the retention mode set to `save` for numerous passes, otherwise the files that are saved in `/tmp/sunvts` can fill the `/tmp` capacity. If `/tmp` is mounted to the swap area, the swap space may become filled to capacity.

---

---

**Note** – Only one instance of `cputest` per processor is possible.

---

---

**Note** – When `cputest` is run with other tests, it may give the error message "exec'd program compress failed with code 1". This can be an indication of a failed compression program, not necessarily a failed CPU. If this occurs, stop all other tests and run `cputest` alone. If the message occurs again, the CPU is failing.

---

---

**Note** – The `cputest` only runs on SPARC V9 systems.

---

---

## cputest Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.

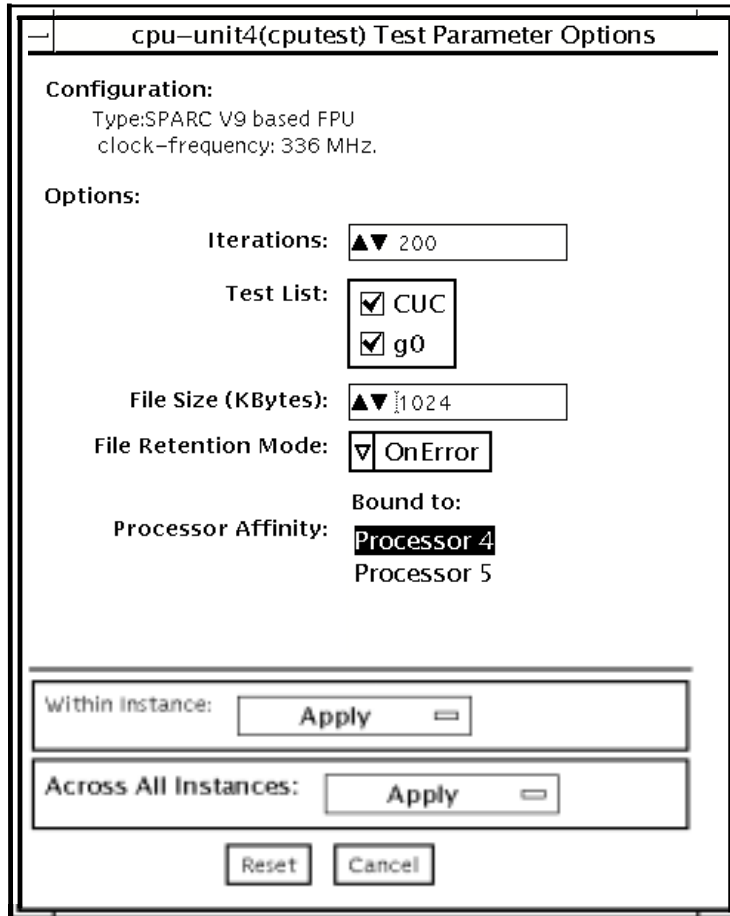


FIGURE 10-1 cputest Test Parameter Options Dialog Box

**TABLE 10-1** `cputest` Option Dialog Box Descriptions

Option	Description
Iterations	Specifies the number of times to loop on the selected subtests. Use the up/down arrows to select a value from 1 to 8192. The default varies depending on the SunVTS test mode.
Test List	Specifies which subtests to run. The choices are: <ul style="list-style-type: none"><li>• CUC—the compress/uncompress/compare subtest.</li><li>• g0—the g0 register subtest.</li></ul> Refer to the general test description at the beginning of this chapter for subtest descriptions. If no subtest is selected, both subtests run.
File Size (KBytes)	Specifies the size of the CUC pattern file in KBytes. Select a value from 1 to 8192. The default varies depending on the SunVTS test mode.
File Retention Mode	Specifies whether the <code>cputest</code> removes the CUC pattern files or not. The choices are: <ul style="list-style-type: none"><li>• Purge—unconditionally removes the four subtest files.</li><li>• Save—does not remove any of the four subtest files.</li><li>• OnError—removes the four subtest files unless the CUC resulted in a miscompare. In this case, do not remove the files.</li></ul> The default is OnError. Refer to the Caution at the beginning of this chapter regarding the Save value.
Processor Affinity	Although the test parameter dialog box displays the processor affinity “bound to” selection box, the processor that corresponds to this instance of the <code>cputest</code> is determined when the SunVTS kernel probes for devices. Therefore, switching processor affinity in this dialog box is not supported.



---

## cputest Test Modes

The following table describes how the `cputest` functions in the different test modes.

**TABLE 10-2** `cputest` Supported Test Modes

Test Mode	Description
Connection	Both subtests are selected. The test options are fixed with the following values: <ul style="list-style-type: none"><li>• Iterations=5</li><li>• File Size=64 KBytes</li><li>• File retention=OnError</li></ul>
Functional (Offline)	Both subtests are selectable, and all the test options are available to scale the <code>cputest</code> as needed.

---

## cputest Command-Line Syntax

```
/opt/SUNWvts/bin/cputest standard_arguments -o dev=device_name,count=count_number,test=testlist,size=file_size,retain=mode
```

**TABLE 10-3** `cputest` Command-Line Syntax

Argument	Description
<i>dev=device_name</i>	Specifies the name of the device to test, for example, <code>cpu-unit5</code> .
<i>count=count_number</i>	Defines the number of times to loop on the subtests. Use a number from 1 to 8192. The default is 200.

**TABLE 10-3** `cputest` Command-Line Syntax (*Continued*)

---

Argument	Description
<code>test=testlist</code>	Specifies which subtests to run. The choices are: <ul style="list-style-type: none"><li>• CUC</li><li>• g0</li><li>• CUC+g0</li></ul>
<code>size=file_size</code>	Specifies the size of the CUC pattern file in KBytes. Select a value from 1 to 8192. The default is 1024.
<code>retain=mode</code>	Specifies whether the <code>cputest</code> removes the CUC pattern files or not. The choices are: <ul style="list-style-type: none"><li>• Purge—unconditionally remove the four subtest files</li><li>• Save—do not remove any of the four subtest files</li><li>• OnError—remove the four subtest files unless the CUC resulted in a miscompare. In this case do not remove the files.</li></ul> <p>The default is OnError.</p> <p>Refer to the Caution at the beginning of this chapter regarding the Save value.</p>

---

**Note** – 64-bit tests are located in the `sparcv9` subdirectory: `/opt/SUNWvts/bin/sparcv9/testname`. If a test is not present in this directory, then it may only be available as a 32-bit test. For more information refer to “32-Bit and 64-Bit Tests” on page 3.

---

## CPU Power Management Test (cpupmtest)

---

`cpupmtest` cycles a CPU through its Power Management™ states. The CPU is run for user-defined periods of time from full speed, to half speed, to lowest speed, back up to half speed, and to full speed, in that order, at various levels. `cpupmtest` test verifies that the CPU speed changes correctly for each state.

You can also run this test concurrently with device tests, to monitor whether CPU speed changes are affecting device performance. Use `cpupmtest` to check that all devices function correctly during different Power Management modes.

---

**Note** – The number of speed levels available for testing depends on the type of CPU being tested, Enter an appropriate number of arguments for your CPU: `speed1, speed2 .. speedn`, where `speed1` is the CPU's lowest speed and `speedn` is the CPU's highest speed.

---

`cpupmtest` is currently supported on Sun Blade™ 100 and Sun Blade 1000 systems.

---

### `cpupmtest` Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.

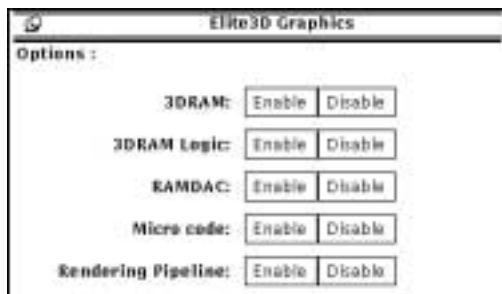


FIGURE 11-1 cpupmtest Test Parameter Options Dialog Box

---

**Note** – Your system may display a different number of levels in the dialog box, as the number of available levels depends on the type of CPU being tested.

---

TABLE 11-1 cpupmtest Options

Option	Description
Level1	Sets the number of minutes to test the system at its lowest speed.
Level2	Sets the number of minutes to test the system at a level higher than the lowest speed.
Level3	Sets the number of minutes to test the system at a level higher than Level2 speed.
Level<n-1>	Sets the number of minutes to test the system at a level lower than the normal speed.
Level<n>	Sets the number of minutes to test the system at its normal speed.
Log Power States	Records and timestamps every CPU power level change to the VTS log file (/var/opt/SUNWvts/logs/sunvts.info).

---

## cpupmtest Test Modes

TABLE 11-2 cpupmtest Supported Test Modes

Test Mode	Description
Functional (Offline)	Runs the full test.

---

## cpupmtest Command-Line Syntax

```
/opt/SUNWvts/bin/cpupmtest standard_arguments  
-o dev=cpupm, speed1=mn, speed2=mn, speedn=mn
```

TABLE 11-3 cpupmtest Command-Line Syntax

Argument	Description
dev= <i>cpupm</i>	Specifies the name of the device.
speed1= <i>mn</i>	Sets the number of minutes to test the system at its lowest speed.
speed2= <i>mn</i>	Sets the number of minutes to test the system at the next level of speed.
speed <i>n</i> = <i>mn</i>	Sets the number of minutes to test the system at its highest speed.



## Disk and Floppy Drives Test (`disktest`)

---

`disktest` verifies the functionality of hard drives and diskette drives using three subtests (see TABLE 12-1): Media, File System, and Asynchronous I/O. Most disk drives, such as SCSI disks, native or SCSI floppy disks, IPI, and so on, are supported. The type of drive being tested is displayed at the top of the Test Parameter Options dialog box.

The `disktest` Test Parameter Options dialog box shows all the partitions that are available for testing. The file System subtest can only be run if the selected partition is mounted (described below). The WriteRead option of the Media subtest is allowed only if a selected partition is *not* mounted.

---

### `disktest` Test Requirements

By default, `disktest` does not mount any partitions. To have SunVTS pre-mount all mountable partitions, set the environment variable `BYPASS_FS_PROBE` to 0 (zero) before starting SunVTS. Pre-mounting can be disabled by unsetting `BYPASS_FS_PROBE` or changing it to a value other than 0 (zero).

The mount point used by `disktest` is the word *disktest* appended by the name of the disk partition. For example, if the disk partition name is `/dev/dsk/c0t3d0s0`, `disktest` mounts it as superuser under the name `/disktest_c0t3d0s0`.



---

**Caution** – If a power failure occurs while the Media subtest is running in WriteRead mode, disk data may be destroyed.

---



---

**Caution** – Running the Media substest on a disk partition in the WriteRead mode may cause data corruption if the same partition is being used by other programs. Only select this mode when the system is offline (not used by any other users or programs).

---

`disktest` tests the floppy drive regardless of whether the Volume Management software is running or not. The following mount point names are used:

- If the Volume Management software *is* running, `disktest` tests the disk drive with the mount point name in the `/etc/mnttab` file.
- If the Volume Management software *is not* running, `disktest` tests the disk drive with the device name `dev=/dev/diskette`. Do not edit the `/etc/vold.conf` file to change the diskette drives. Currently, the SunVTS software is hard-coded to use these path names as the default logic names.

Loading an option file (refer to the *SunVTS User's Guide* for option file details) that was created when `BYPASS_FS_PROBE` was set to 0 (zero) might not work if the `BYPASS_FS_PROBE` environment variable is no longer set to 0. Testing may fail with the following error:

```
SUNWvts.disktest.8088 07/24/98 15:47:22 disktest c0t0d0 FATAL:
"Couldn't get file system information on /disktest_s0t0d0s0,
statvfs() system call failure error: No such file or directory.
```

This error is caused when SunVTS expects to use the predefined mount point names that are created when `BYPASS_FS_PROBE` is set to 0 (zero), but these mount points do not exist while `BYPASS_FS_PROBE` is not set to 0.

To use option files with `disktest`, create two separate option files for the two different states of the `BYPASS_FS_PROBE` environment variable.



The following table describes the `disktest` subtests.

**TABLE 12-1** `disktest` Subtests

Subtest	Description
Media subtest	<p>Verifies disk media by writing data to and reading data from the disk. The Media subtest treats a disk as one large chunk of contiguous data.</p> <p>This is a scalable test that can run multiple copies in read/write mode on the same disk partition. To avoid data corruption, all simultaneous instances of <code>disktest</code> communicate through a shared memory service. This ensures that different copies of the media subtest do not overlay the same disk block at the same time.</p> <p>The Media subtest runs in two different modes as described below:</p> <p><b>SyncIO:</b> The SyncIO media test creates a random offset for a partition from which the media testing starts. Starting from this offset, the read (Readonly mode) or the write/read (WriteRead mode) begins in a sequential fashion. The test continues until the specified percentage of media is covered.</p> <p><b>AsyncIO:</b> The AsyncIO media test always starts from the first block of the partition under test and covers the area specified by the Media Coverage percentage.</p> <p>AsyncIO uses the read/write feature of the Solaris disk driver to exercise the disk. In Readonly mode, the test sends a maximum of four asynchronous read packets, each with a random size and a random offset into the selected partition. The test then waits for all outstanding I/O activity to complete before issuing another round of packets. This process continues until the whole area is tested. In WriteRead mode, one write packet is issued in every four read packets as a spot check of the write operation. Before data is written to a particular location, data is backed up, write-verified, and restored to its original state.</p>
File System subtest	<p>Verifies the disk system's integrity. The File System subtest exercises the partition being tested to determine if it is mounted. If the partition is not already mounted or pre-mounted, then the test is blocked. The test opens two temporary files (of the size specified on <code>File System File Size</code>) and performs a Read/Write test.</p>

# disktest Test Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.

**c0t0d0(disktest) Test Parameter Options**

**Configuration:**  
Capacity: 8.49GB  
Controller: uata0

**Options:**

Partition: 0(/)

Test Media:  Enable  Disable

Media Write Read Mode: Readonly

Media Test Method:  
 SyncIO  
 AsyncIO

Media Coverage(%): 30

Media Transfer Size: 32KB

Test File System:  Enable  Disable

File System File Size: 512KB

File System Transfer Size: 512B

File System Test Pattern: sequential

Instance: 1

---

Within Instance: Apply

---

Across All Instances: Apply

Reset Cancel

**FIGURE 12-1** disktest Test Parameter Options Dialog Box

The following table describes the `disktest` option menu for different test modes.

**TABLE 12-2** `disktest` Configurations and Options

<code>disktest</code> Options	Description
Partition	Displays the partition for the Media subtest. If a partition is mounted, its mount point is appended after the partition number, such as <code>1(/usr)</code> , where <code>1</code> is the partition number, and <code>"/usr"</code> is the mount point.
Test Media	Enables or disables the Media subtest.
Media Write Read Mode	Enables Read-Only or Compare after Read or Read after Write, with or without backup.
Media Test Method	Enables or disables the Media Test Methods (SyncIO and AsyncIO).
Media Coverage (%)	Enables users to test all or part of a partition (in percentages).
Media Transfer Size	Displays the transfer size of the media subtest.
Test File System	Enables or disables the File System subtest.
File System File Size	Creates a file system file size twice the size of what is specified.
File System Transfer Size	Displays the transfer size of the File System subtest.
File System Test Pattern	Test pattern of File System subtest.
Connection Test for Hard Disk	<ul style="list-style-type: none"> <li>• Option Menu for hard disk partition—0 - 7 [default]</li> <li>• Test Media—[Enable](fixed to Enable)</li> <li>• Media Write Read Mode—[Read Only](fixed to Read Only)</li> <li>• Media Test Method-[SyncIO] (fixed to SyncIO)</li> <li>• Media Coverage(%)—1</li> <li>• Media Transfer Size—[2KB]</li> <li>• Test File System—[Disable](fixed to Disable)</li> </ul>

**TABLE 12-2** disktest Configurations and Options (*Continued*)

disktest Options	Description
Online Mode for Hard Disk	<ul style="list-style-type: none"> <li>• Partition—0 - 7 [default]</li> <li>• Test Media—[Enable] [Disable]</li> <li>• Test Mode—[Read-only~](fixed to Read-only)</li> <li>• Media Coverage(%)—[10]</li> <li>• Media Transfer Size—[2KB]</li> <li>• Test File System—[Disable~](fixed to Disable)</li> </ul>
Functional Test for Hard Disk	<ul style="list-style-type: none"> <li>• Partition—0 - 7 [default]</li> <li>• Test Media—[Enable] [Disable]</li> <li>• Media Write Read Mode—[Readonly] [CompareRead] [WriteRead]</li> <li>• Media Test method—[SyncIO] [AsyncIO]</li> <li>• Media Coverage(%)—[30]</li> <li>• Media Transfer Size—[2KB] [16KB] [32KB] [64KB] [128KB] [256KB] [512KB]</li> <li>• Test File System—[Enable] [Disable]</li> <li>• File System File Size—[512KB] [2MB] [8MB] [20MB] [100MB] [200MB]</li> <li>• File System Transfer Size—[512B] [1024B] [10KB] [40KB] [80KB]</li> <li>• File System Test Pattern—[sequential] [0x00000000] [0xffffffff] [0x5aa55aa5] [0xdb6db6db] [random]</li> </ul>
Functional Test for Floppy Disk	<ul style="list-style-type: none"> <li>• (under Other-Devices group)—partition: 0 - 7 [default]</li> <li>• Test Media—[Enable]- [Disable]</li> <li>• Media Write Read Mode—[Read-only] [BackupWriteRead]</li> <li>• Media Test Method—[SyncIO] [AsyncIO]</li> <li>• Media Coverage(%)—[30]</li> <li>• Media Transfer Size—[2KB] [10KB] [20KB]</li> <li>• Test File System—[Enable] [Disable]</li> <li>• Floppy File Size— [100KB] [200KB]</li> <li>• Floppy Transfer Size—[512B] [1024B] [10KB]</li> <li>• File System Test Pattern—[sequential] [0x00000000] [0xffffffff] [0x5aa55aa5] [0xdb6db6db] [random]</li> </ul>

---

# disktest Test Modes

TABLE 12-3 disktest Supported Test Modes

Test Mode	Description
Connection	Only one instance of <code>disktest</code> (which monitors UNIX error messages) is allowed for each disk device. <code>disktest</code> displays messages and reports errors. The test also opens the hard disk, checks the disk configuration, reads a few blocks, and then closes the hard disk. No File System subtest is run. No Write option is available in Connection test.
Functional (Offline)	More than one instance of <code>disktest</code> is allowed for one disk device. The File System subtest, Media subtests, and floppy test can be run in offline Functional test mode.

---

# disktest Command-Line Syntax

```
/opt/SUNWvts/bin/disktest standard_arguments -o dev=device_name
,partition=<0-7>"(mount_point)",rawsub=E|D,
rawrw=ReadOnly|CompareRead|WriteRead, method=AsyncIO+SyncIO,rawcover=
n,
rawiosize=n,fssub=E|D,fssize=n,fsiosize=n,fspattern=data_pattern
```

TABLE 12-4 disktest Command-Line Syntax

Argument	Description
<code>dev=device_name</code>	Specifies the name of the disk to be tested, such as <code>c0t3d0</code> .
<code>partition= n"(mount_point)"</code>	Specifies the partition number as follows: <ul style="list-style-type: none"><li>• <code>n</code>—is the partition number (slice number), usually <code>0-7</code></li><li>• <code>mount_point</code>—is the mount point for the mounted partition that you plan to test</li></ul> For example: <code>partition=6"/export"</code>
<code>rawsub= E(nable)   D(isable)</code>	Enables or disables the media subtest.

**TABLE 12-4** `disktest` Command-Line Syntax (*Continued*)

Argument	Description
<code>rawrw=</code> <i>ReadOnly   CompareRead   WriteRead</i>	Specifies the Media subtest Read, Compare, and Write mode: <ul style="list-style-type: none"> <li>• Read only</li> <li>• Read twice, Compare (works only with SyncIO method)</li> <li>• Write, Read, Compare, restore</li> </ul>
<code>method=AsyncIO+SyncIO</code>	Specifies the Media access method. You can choose to use either or both methods . If you use both access methods together, you must insert a '+' between the two: AsyncIO: Runs the asynchronous i/o test, using the async read/write feature of the Solaris disk driver SyncIO: Runs the synchronous i/o test.
<code>rawcover=n</code>	Specifies media coverage from 0-100 (percentage) of the partition.
<code>rawiosize=n</code>	Specifies the media size to transfer. The number you specify is in kilobytes: 2KB   16KB   32KB   64KB   128KB   256KB   512KB
<code>fssub=E(nable)   D(isable)</code>	Enables or disables the File System subtest.
<code>fssize=n</code>	Indicates the file system subtest size in kilobytes or megabytes: <ul style="list-style-type: none"> <li>• K   k   KB   kb—kilobytes</li> <li>• M   m   MB   mb—megabytes</li> </ul> 512KB   2MB   8MB   20MB   100MB   200MB
<code>fsiosize=n</code>	Indicates the size of the file system subtest I/O transfer in bytes or kilobytes: <ul style="list-style-type: none"> <li>• B   b—bytes</li> <li>• K   k   KB   kb—kilobytes</li> </ul> 512B   1024B   10KB   40KB   80KB
<code>fspattern=data_pattern</code>	Specifies the file system data pattern as sequential or random. {seq(uential)   0x0(000000)   0xf(ffffff)   0xa(5a5a5a)   0x5(a5a5a5a)   ran(dom)   0xd(b6db6db)}

---

**Note** – 64-bit tests are located in the `sparcv9` subdirectory: `/opt/SUNWvts/bin/sparcv9/testname`. If a test is not present in this directory, then it may only be available as a 32-bit test. For more information refer to “32-Bit and 64-Bit Tests” on page 3.

---

## Sun Fire 880 FC-AL Disk Backplane Test (`dpctest`)

---

`dpctest` exercises and verifies the Fibre Channel Mass Storage Subsystem in Daktari platforms. `dpctest` exercises various tests in the Daktari Personality Module (DPM) firmware for validating the mass storage subsystem.

No special hardware is required to run the `dpctest` test.

---

### `dpctest` Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.

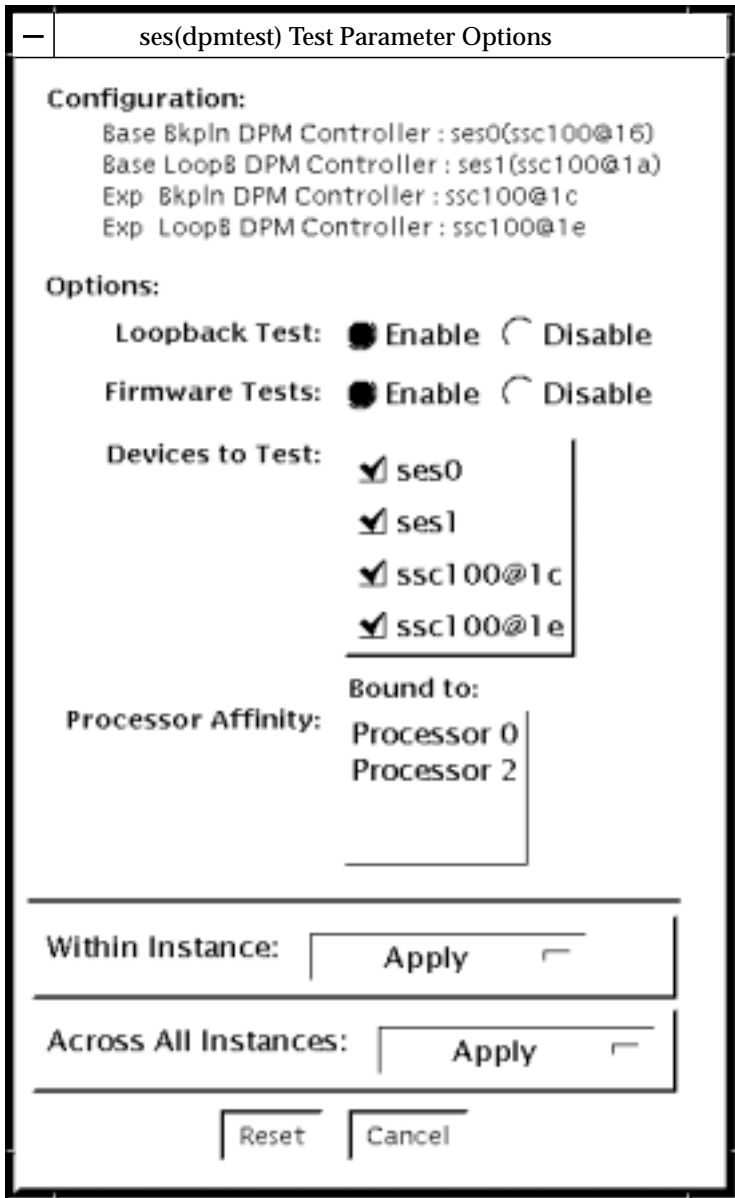


FIGURE 13-1 dpctest Test Parameter Options Dialog Box



**TABLE 13-1** `dpctest` Test Options

Option	Description
Firmware Test	When enabled, the subtest runs the system friendly firmware tests on each of the selected SES/SSC100 devices. By default it is enabled.
Loopback Test	When Enabled, the subtest will cause the SES device to loop packets around the fiber loop with varying data patterns. The device reads the packet after the packet is received, and verifies that the data payload is correct. By default it is enabled. Note: This test will run only on SES/SSC100 devices which are in the base backplane.
Devices to Test	The SES/SSC100 devices being tested. Users have an option to select or deselect each device for being tested. By default all the devices are selected for testing. Note: At least one device has to be selected for testing. If the user tries to deselect all of the devices, then an error message will be popped up. Note: If the device has both fibre and i2c paths, only the fibre path is listed under 'Devices to Test'. When you perform the tests on this device, the tests are run on both fibre and i2c paths.

---

# dpctest Test Modes

**TABLE 13-2** dpctest Supported Test Modes

Test Mode	Description
Connection	<p>The test opens each selected device, extracts information about the device (wwn/wwpn, firmware revision, drives installed, temperatures, etc.) and displays the information for the user. If the device has both fibre and i2c paths, then information will be extracted from both the paths.</p> <p>After the test is performed on all the selected devices, the test closes the devices and exists.</p>
Functional	<p>The test opens each selected device and runs the selected subtests against the device. When fully run, the test closes the device and reports the results.</p> <p>Note: When no subtests are selected and you try to perform the functional testing, then just a configuration check will be performed.</p>

---

# dpctest Command-Line Syntax

```
/opt/SUNWvts/bin/dpctest standard_arguments -o dev=[device name],  
dpmdev=[device1+device2+...], fwtest=[Enable/Disable], lb=[Enable/Disable]
```

TABLE 13-3 `dpctest` Command-Line Syntax

Argument	Description
<code>-o dev=[device name]</code>	<p><i>[device name]</i> is the path name of the device being tested. The default value is <code>ses</code>.</p> <p>Since the current SunVTS infrastructure doesn't allow specifying multiple devices under the <code>dev</code> suboption, this suboption is not used in <code>dpctest</code>. A new suboption <code>dpmdev</code> has been introduced to satisfy this requirement.</p>
<code>dpmdev=[device1+device2...]</code>	<p><i>device1, device2,...</i> represent the SES/SSC100 devices being tested. The default value is all the SSC100s present in the system.</p> <p>Note: The values for the <code>dpmdev</code> suboption can be device names such as <code>ses0, ses1, ssc100@16, ssc100@1a</code>, etc. Multiple values can be specified with a '+' (plus sign) separator. An absolute path through fibre paths to devices are allowed (for example, <code>/dev/es/ses0</code>) as <code>dpmdev</code> suboption values. However, absolute paths through a <code>i2c</code> path to devices are not allowed because commas are not allowed as part of a suboption value. Commas delimit suboptions in the options string (for example, <code>/devices/pci@9,700000/ebus@1/i2c@1,30/controller@0,16:ssc100</code>).</p> <p>Note: The following devices in the Sun Fire™ V880 system may be specified for <code>dpmdev</code> suboption values:</p> <p>Fibre Path:</p> <ul style="list-style-type: none"> <li><code>ses0</code> - fibre path to base backplane's SSC100 (<code>/dev/es/ses0</code>) device on loopA.</li> <li><code>ses1</code> - fibre path to base backplane's SSC100 (<code>/dev/es/ses1</code>) device on loopB. This is valid only when a CrystalB+ PCI card present in the system.</li> </ul> <p>I2C Path:</p> <ul style="list-style-type: none"> <li><code>ssc100@16</code> - base backplane's SSC100 device on loopA through a <code>i2c</code> path.</li> <li><code>ssc100@1a</code> - base backplane's SSC100 device on loopB through a <code>i2c</code> path.</li> <li><code>ssc100@1c</code> - expansion backplane's SSC100 device on loopA through a <code>i2c</code> path.</li> <li><code>ssc100@1e</code> - expansion backplane's SSC100 device on loopB through a <code>i2c</code> path.</li> </ul> <p>Note: <code>ssc100@1c</code> and <code>ssc100@1e</code> will be valid only when an expansion backplane is present in the system.</p>
<code>lb=[Enable   Disable]</code>	<p><i>Enable</i> or <i>Disable</i> loopback test. The default value is <i>Enable</i>.</p> <p>Note: The loopback test will run only on SES/SSC100 devices that are in the base backplane.</p>
<code>fwtest=[Enable   Disable]</code>	<p><i>Enable</i> or <i>Disable</i> firmware tests. The default value is <i>Enable</i>.</p>



---

## DVD Test (`dvdtest`)

The `dvdtest` tests the DVD by reading a DVD-ROM in the drive.

The `dvdtest` runs even if the Volume Manager is not running. If the Volume Manager is running and no media (DVD or CD) is installed in the drive, SunVTS prompts you to install media in the drive before selecting the test.

---

### `dvdtest` Test Requirements

---

**Note** – Load a DVD-ROM into the DVD drive before running this test or the test will fail.

---

When a DVD-ROM is loaded in the drive, SunVTS uses the `dvdtest` to test the drive. When a CD (non-DVD type) is loaded, SunVTS uses the `cdtest` to test the drive. Whenever you change the media in the drive you must perform a reprobe (refer to the *SunVTS User's Guide* for details) so the SunVTS kernel will associate the correct test (`dvdtest` or `cdtest`) based on the media that is loaded in the drive.

---

### `dvdtest` Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.



**FIGURE 14-1** dvdtest Test Parameter Options Dialog Box

**TABLE 14-1** dvdtest Option Menu Descriptions

Option	Description
% Data/Track	Specifies a percentage of data to test for each track. Use a number between 0 and 100.
Read Mode	Specifies either Random or Sequential mode. Random mode reads data blocks from random track positions. Sequential mode reads data blocks in sequence. For both modes, the total number of blocks read is determined by the % Data/Track value.

---

## dvdtest Test Modes

The following table describes how the `dvdtest` functions in the different test modes.

**TABLE 14-2** `dvdtest` Supported Test Modes

Test Mode	Description
Connection	Requests and displays information from the drive and reads two blocks of data from the media to confirm connectivity. An error is reported if no media is loaded in the drive.
Functional (Offline)	Requests and displays information from the drive, then reads data from the media based on the options that are set in the Test Parameter Options Dialog Box. An error is reported if no media is loaded in the drive.

---

## dvdtest Command-Line Syntax

```
/opt/SUNWvts/bin/dvdtest standard_arguments  
-o dev=device_name,read=random|sequential,data=%_of_data
```

**TABLE 14-3** `dvdtest` Command-Line Syntax

Argument	Description
dev=device_name	Specifies the name of the device to test, for example <code>/dev/rdisk/cntndn</code> .
read=random sequential	Indicates random or sequential read access.
data=%_of_data	Sets the percentage of data to test. Use a number from 0 to 100.

---

**Note** – 64-bit tests are located in the `sparcv9` subdirectory: `/opt/SUNWvts/bin/sparcv9/testname`. If a test is not present in this directory, then it may only be available as a 32-bit test. For more information refer to “32-Bit and 64-Bit Tests” on page 3.

---





## ECP 1284 Parallel Port Printer Test (ecpptest)

---

The `ecpptest` verifies the functionality of the `ecpp(7)` IEEE 1284 parallel printer port device.

The `ecpp(7)` device is an *exclusive use device*. Only one application can interface with it at a time.

This test is not scalable.

---

### ecpptest Hardware and Software Requirements

The `ecpp(7)` driver is installed with the operating system if the system being tested supports the `ecpp(7)` device. To run the optional printer subtest, a Centronics or ECP-mode printer must be attached to the printer port. To run the optional external loopback test, a passive loopback connector must be installed on the printer port.

---

**Note** – The external loopback test is intended for Sun internal manufacturing use only. It requires a custom loopback connector not available to an external customer.

---

---

# ecpptest Subtests


TABLE 15-1 ecpptest Subtests

Subtest	Description
Internal Test FIFO Loopback	Verifies DMA and PIO accesses to the <code>ecpp</code> device. It uses an Internal Test FIFO on the <code>ecpp</code> device. There are no printer or loopback connectors required. This test is always executed.
External Passive Loopback	This verifies the parallel port I/O connections to the back panel connector. This test requires a passive loopback connector (Sun part no. 270-2965-01). This test is disabled by default and must be manually enabled by the user.  Note: The external loopback test is intended for Sun internal manufacturing use only. It requires a custom loopback connector that is not available to an external customer.
Printer test	This verifies the parallel port printer operation. It outputs a half page of ASCII character data. The output mode (for example, ECP and Centronics) is determined by which mode the printer and <code>ecpp</code> driver automatically negotiate. It will not change the current mode. The user must verify that data printed properly. This test is disabled by default and must be manually enabled by the user.

---

# ecpptest Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.

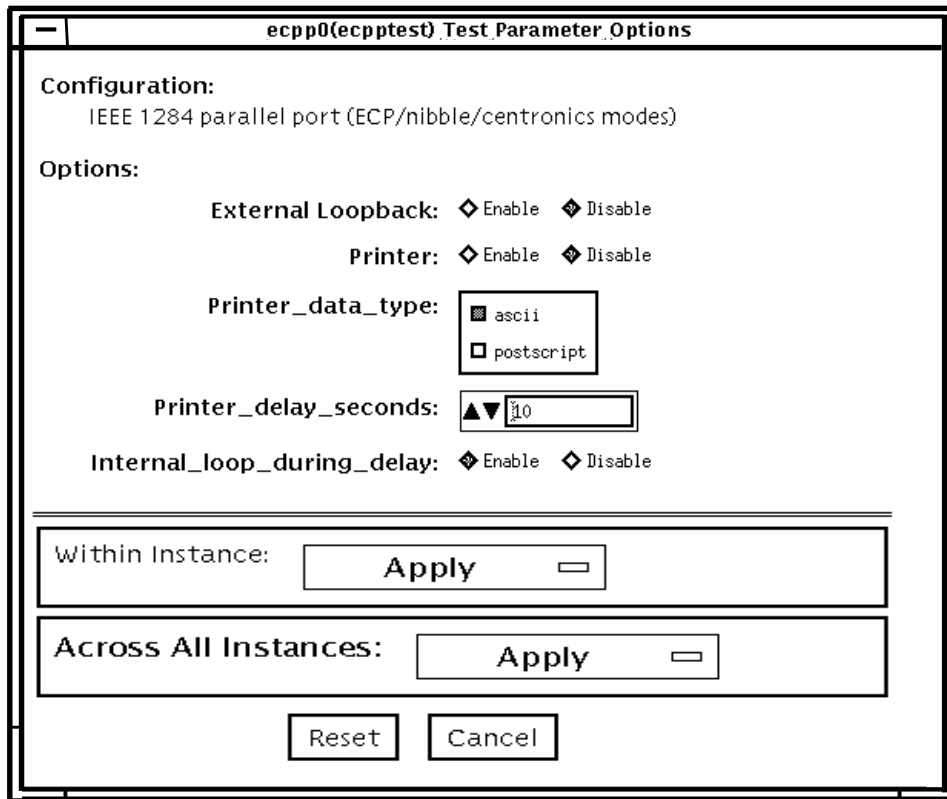

**FIGURE 15-1** ecpptest Test Parameter Options Dialog Box

**TABLE 15-2** ecpptest Options

ecpptest Options	Description
External Loopback	Enables or disables the external loopback test. This test requires a special loopback plug.
Printer	Enables or disables the printer test; this test requires a printer to be attached to the parallel port.

**TABLE 15-2** `ecpptest` Options

<code>ecpptest</code> Options	Description
Printer_data_type	Choose whether ascii text or PostScript data is sent to the printer. The printer test must be enabled for this to be meaningful. A postscript printer must be attached to print postscript data.
Printer_delay_seconds	Allows the user to choose a delay between passes of the printer test. This prevents continuous printing of data that could quickly empty the paper supply. This is only meaningful if the printer test is enabled.
Internal_loop_during_delay	Enables the Internal Test FIFO loopback test during the printer delay time. This is only meaningful if the printer test is enabled.

---

# ecpptest Test Modes

TABLE 15-3 *ecpptest* Supported Test Modes

Test Mode	Description
Connection	Opens and closes the <i>ecpp(7)</i> device. No data is transferred. The test passes if the device can be open and closed successfully. The test also passes if the device cannot be opened because the device is busy with another process.
Functional (Offline)	Runs the internal loopback test and the user can optionally run the External loopback test and Printer test. The test will fail if the device is busy.

---

# ecpptest Command-Line Syntax

```
/opt/SUNWvts/bin/ecpptest standard_arguments -o [dev=device_name]
[ext_loop=Enable|Disable][printer=Enable|Disable][,data=ascii|postscript][,
delay=0-86400][,dloop=Enable|Disable]
```

TABLE 15-4 *ecpptest* Command-Line Syntax

Argument	Description
<i>dev=device_name</i>	Specifies the name of the device. This should be of the form <i>/dev/ecpp#</i> , where # is the minor number of the device. The default device is <i>/dev/ecpp0</i> .
<i>ext_loop=Enable Disable</i>	If enabled, the external loopback test is run. The external loopback plug must be attached to the printer port.
<i>printer=Enable Disable</i>	If enabled, the printer test is run. A Centronics or ECP mode parallel port printer must be attached
<i>data=ascii postscript</i>	Choose whether ASCII text or PostScript data is sent to the printer. A PostScript printer must be attached to print postscript data.
<i>delay=0-86400</i>	Allows the user to choose a delay between passes of the printer test. This prevents continuous printing of data that could quickly empty the paper supply.
<i>dloop=Enable Disable</i>	Enables the Internal Test FIFO loopback test during the printer delay time.

---

**Note** – 64-bit tests are located in the `sparcv9` subdirectory:  
`/opt/SUNWvts/bin/sparcv9/testname`. If a test is not present in this directory,  
then it may only be available as a 32-bit test. For more information refer to “32-Bit  
and 64-Bit Tests” on page 3.

---

## Sun StorEdge A5x00 Test (enatest)

---

`enatest` is used to provide configuration verification, fault isolation, and repair validation of the Sun StorEdge™ A5x00 subsystem. The `enatest` tests Sun StorEdge models A5000 (14 slot disk array) and A5200 (22 slot disk array).

The Sun StorEdge A5x00 is a high availability mass storage subsystem consisting of:

- SCSI Fibre Channel protocol host adapters with dual 100-Megabyte FC-AL ports.
- A disk enclosure.
- A front panel display for configuration information.
- Up to two interface boards in the enclosure, which provide FC-AL connections to the enclosure and also provide status information and control of the conditions within the enclosure.
- Other field-replaceable units (FRUs) within the enclosure include power supply units, fan trays, and backplane.

---

**Note** – Do not run `enatest` and `socaltest` at the same time, otherwise test failures might occur.

---

---

**Note** – The Sun StorEdge A5x00 was formally known as the Sun Enterprise Network Array™. The `enatest` tests both of these disk array subsystems.

---

enatest detects all Sun StorEdge A5x00 enclosures connected to the host and collects relevant configuration information. FIGURE 16-1 shows the Test Parameter Options menu which contains a sample configuration listing and test parameters. TABLE 16-1 describes the extent of the test coverage and provides samples of the



configuration information that is displayed.

**TABLE 16-1** `enatest` Coverage

Test Coverage	Description
Host Connections	<code>enatest</code> searches for all the active and inactive connections between the host and the enclosure and reports the number of existing active connections. If the <code>VERBOSE</code> mode is enabled, the port on the host side and the <code>GBIC</code> port on the enclosure side is reported for each active connection. The test also diagnoses any inactive connection(s) and reports the possible causes for the failure. The test will fail if there are one or more inactive connections. See the section on “ <code>enatest</code> Fault Isolation Capability” on page 114 for more information.

**TABLE 16-1** enatest Coverage

Test Coverage	Description
Sample Output, for an enclosure attached to an SBus social card:	<pre>SUNWvts.enatest.1010 06/05/97 13:48:53 enatest ses0 VERBOSE: "MYBOX: Lower-Right GBIC connected to host via /devices/sbus@1f,0/SUNW,socal@0,0:1" SUNWvts.enatest.1006 06/05/97 13:48:53 enatest ses0 VERBOSE: "MYBOX: Interface Board (Bottom one in the enclosure) detected to be installed and OK" SUNWvts.enatest.6023 06/05/97 13:48:53 enatest ses0 ERROR: "MYBOX: Cannot communicate with the enclosure via /devices/sbus@1f,0/SUNW,socal@0,0:0; possibly connected to Lower-Left GBIC in the enclosure" Probable_Cause(s):     (1)Signal too low at the GBIC module in the enclosure     (2)Faulty cable or cable disconnected     (3)Faulty GBIC module on the host side Recommended_Action(s):     (1)Ensure the cables are properly connected     (2)Please contact your service representative  SUNWvts.enatest.2006 06/05/97 13:48:53 enatest ses0 INFO: "MYBOX: Number of connections to the host: 1"</pre>
Disk Access	During the testing, each disk is accessed through each active connection leading to that disk. The enatest opens partition 2 on the disk and reads 512 bytes of raw data. If there are any failures, the test tries to isolate the fault to either an enclosure element, the cable, the host adapter card, or the OE module on the host adapter. See the section on "enatest Fault Isolation Capability" on page 114 for more information.
Enclosure Status	The status of the enclosure is obtained by querying the SCSI Enclosure Services (SES) device in the enclosure. Detailed information regarding the status of the elements within the enclosure is reported. The test fails if a critical condition is detected in the enclosure. The table below shows how the status information is reported.

**TABLE 16-2** Element Enclosure Status

Enclosure Element	Information
Disk	<ul style="list-style-type: none"><li>• Fault Sensed—Yes/No</li><li>• Status of ports A and B—Connected or Bypassed</li></ul>
Power Supply	<ul style="list-style-type: none"><li>• Status—ON/OFF</li><li>• Temperature—OK/Critical Overtemp/Abnormal</li><li>• AC Input—OK/Not OK</li><li>• DC Output—OK/Not OK</li></ul>
Fan	<ul style="list-style-type: none"><li>• Status—On/Off</li><li>• Speed—High/Low/Stopped</li></ul>
Backplane	<ul style="list-style-type: none"><li>• Status—OK/Failed</li><li>• Status of ports A and B—Connected/Bypassed</li></ul>
Interface Board	<ul style="list-style-type: none"><li>• Temperature—OK/Critical Overtemp</li><li>• Loop A status—OK/Failed</li><li>• Loop B status—OK/Failed</li></ul>
GBIC	<ul style="list-style-type: none"><li>• Status—Disabled/Enabled</li><li>• Signal Level—OK/Too low</li><li>• Transmitter—OK/Failed</li></ul>

---

## enatest Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.



FIGURE 16-1 enatest Test Parameter Options Dialog Box

**TABLE 16-3** enatest Options

enatest Options	Description
Enclosure Services Functional test (general description)	<p>Certain control operations are performed on devices in the enclosure through the SES device and verified that the operation was performed successful. This functional test involves the following steps:</p> <ol style="list-style-type: none"><li>1. Perform control operation.</li><li>2. Verify control operation was successful.</li><li>3. Restore state to what it was before 1.</li><li>4. Verify restore operation was successful.</li></ol> <p>The test will fail if any one of the above steps fails.</p> <p>This test targets the disks and the fans in the enclosure.</p>
Enclosure Services Functional test (detailed Disk test description)	<ol style="list-style-type: none"><li>1. Control Operation—Each port of the disk is toggled from its original state. A port that was originally connected will be bypassed and vice-versa.</li><li>2. Verify Control Operation—This is done in two ways. First, the new status of the disk ports is verified by reading the status through the SES device. The test will fail if the status read back does not reflect the change. Next, disk access is attempted through the port that was originally connected but has now been bypassed. The test will fail if the access attempt is successful.</li><li>3. Restore State—The port states are restored to what they were before the Control Operation.</li><li>4. Verify Restore Operation—This is done in two ways. First the status of the disk ports is verified by reading the status through the SES device. The test will fail if the status read back does not reflect the change. Next, disk access is attempted through the port that have been reconnected. The test will fail if the access attempt is unsuccessful.</li></ol>
Enclosure Services Functional test (detailed Fan test description)	<ol style="list-style-type: none"><li>1. Control Operation—The speed of each fan is toggled. Possible speeds are HIGH and LOW.</li><li>2. Verify Control Operation—The status is read back through the SES device and the speeds are compared. Failure to vary the speed in this case will result in an INFO message indicating that the fan speed could not be changed but does not result in a test failure. This is because SES can ignore fan speed change requests if required because of existing ambient temperature conditions.</li><li>3. Restore State—Restore the fan speed to the original speed.</li><li>4. Verify Restore Operation—This is similar to the Verify Control Operation step above.</li></ol>

---

# enatest Fault Isolation Capability

In the case of a failure, the test aids in fault isolation by reporting the possible cause(s) of failure. The fault isolation capability varies depending on the nature of the fault and the system configuration. `enatest` can detect and isolate hard faults. The following table shows the fault isolation capability for different configurations. A `Yes` indicates that fault isolation capability is available for that component in that configuration and a `No` indicates lack of fault isolation capability for that component in that configuration.

The following table is not applicable when using the PCI-based Fibre Channel card due to the card's lack of fault isolation capabilities.

**TABLE 16-4** `enatest` Fault Isolation Configurations

Connections to Enclosure	System Architecture	SOC+ Host Adapter	Host Side GBIC or Cable	Enclosure Elements			
				Disk	Backplane	IB	GBIC
Multiple	sun4u	Yes	Yes	Yes	Yes	Yes	Yes
Multiple	sun4d	Yes	No	Yes	Yes	No	No
Single	sun4u	Yes	No	No	No	No	No
Single	sun4d	Yes	No	No	No	No	No

---

## enatest Test Modes

**TABLE 16-5** enatest Supported Test Modes

Test Mode	Description
Connection test	<p>In this mode, the host connections and the status of the enclosure are checked. The test fails if there are any broken connections or if a critical enclosure condition is detected.</p> <p>Noncritical conditions result in a warning. A sample of the output follows.</p> <pre>Connection test starting....  ses0   Status: Connected   Enclosure:     Product Anemones Enterprise Network Array,     Enclosure Name=MYBOX,   Host Connections:     Number of Active Connections=2,   Enclosure State:     Critical Conditions=None, Non-Critical Conditions=None  Connection test complete</pre>
Functional (offline)	All test options are allowed in this mode.

---

## enatest Command-Line Syntax

```
/opt/SUNWvts/bin/enatest standard_arguments -o dev=device_name,  
disk_access=enable | disable, disks=disk1:disk2:disk3:...diskn, disp=enable | disable,
```

*esfunc=enable / disable, conn=enable / disable, delay=delay\_in\_seconds*

**TABLE 16-6** `enatest` Command-Line Syntax

Argument	Description
<code>dev=device_name</code>	Specifies the name of an <code>ses</code> device in the enclosure.
<code>disk_access=enable / disable</code>	Enables or disables disk access.
<code>disks=disk1:disk2:disk3:...</code> <code>diskn</code>	Lists the disks contained in this enclosure that the <code>disk_access</code> test should attempt to access. The disk names are separated by colons (:). If this option is disabled, the test will access all disks found in the enclosure.
<code>disp=enable / disable</code>	Enables or disables the display of detailed status information regarding the enclosure elements.
<code>esfunc=enable / disable</code>	Enables or disables the Enclosure Services Functional test.
<code>conn=enable / disable</code>	Displays information about the connection to the host.
<code>delay=delay_in_seconds</code>	Sets the minimum delay (in seconds) between successive invocations of the test.

---

**Note** – 64-bit tests are located in the `sparcv9` subdirectory: `/opt/SUNWvts/bin/sparcv9/testname`. If a test is not present in this directory, then it may only be available as a 32-bit test. For more information refer to “32-Bit and 64-Bit Tests” on page 3.

---



## Sun StorEdge 1000 Enclosure Test (enctest)

`enctest` tests the Sun StorEdge™ A1000, D1000, and D2 disk enclosures. The A1000 and D1000 enclosures can support either 12 1" 4GB drives or 8 1.6" 9GB drives. The D2 disk enclosure can support 12 1" either 18GB or 36GB drives. These disk enclosures have redundant power and cooling. Following enclosure models are supported by `enctest`:

- Sun StorEdge A1000—Disk tray with the hardware RAID controller
- Sun StorEdge D1000—Disk tray without the hardware RAID controller
- Sun StorEdge D2—Disk tray without the hardware RAID controller

`enctest` can be used for validation, configuration verification, repair verification, and fault isolation of these models.

`enctest` sets the disk enclosure LEDs as follows:

TABLE 17-1 `enctest` Status LEDs

LED State	Indicated Condition
On	Unrecoverable or critical condition
Blinking	Non-critical condition
Off	Informational or no condition to report

**Note** – The `ses` driver must be present on the system with the Sun StorEdge enclosure(s). If the `ses` driver is not present, SunVTS will not detect the Sun StorEdge hardware. Use the following command to see if the `ses` driver is present:  
`pkginfo SUNWses`  
 Install the package if necessary.

enctest reports the status of the various elements in the enclosure. An error is registered if an unrecoverable or critical condition is detected. Noncritical conditions are reported through warning messages. The table below describes the information that is reported for each enclosure element.


**TABLE 17-2** `enctest` Enclosure Status Report

Enclosure Element	Information reported (per device slot)
Disk	Present/Not Present Failed/OK
Power supply	Present/Not Present Failed/OK
Fan	Present/Not Present Failed/OK
Temperature	OK/Over temperature
RPA cache Battery (StorEdge A1000 only)	OK/Low Charge

---

## enctest Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.

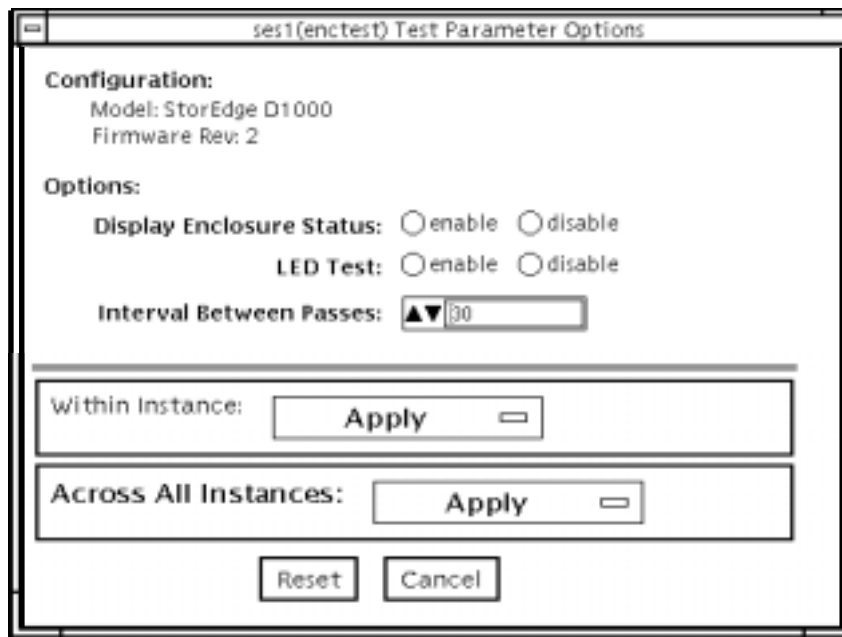

**FIGURE 17-1** enctest Test Parameter Options Dialog Box

**TABLE 17-3** enctest Options

enctest Options	Description
Display Enclosure Status	When enabled, the status of the enclosure elements are displayed as messages in the SunVTS console. These messages are also logged in the SunVTS info log file.
LED Test	When enabled, the LEDs associated with the disks are flashed for a short period of time.
Interval Between Passes	Sets the minimum delay between successive invocations of the test.

---

## enctest Test Modes

TABLE 17-4 enctest Supported Test Modes

Test Mode	Description
Connectivity	The enclosure status summary bits are read. Detailed information is reported only if an unrecoverable or critical condition is detected.
Functional (Offline)	All options are allowed.

---

## enctest Command-Line Syntax

```
/opt/SUNWvts/bin/enctest standard_arguments -o dev=device_name, disp=  
enable | disable, led=enable | disable, delay=delay_in_seconds
```

TABLE 17-5 enctest Command-Line Syntax

Argument	Description
<code>dev=device_name</code>	This is the name of a ses device in the enclosure.
<code>disp=enable   disable</code>	Detailed status information regarding the enclosure elements will be displayed if enabled.
<code>led=enable   disable</code>	Option to enable or disable the LED test.
<code>delay=delay_in_seconds</code>	Minimum delay between successive invocations of the test.

---

**Note** – 64-bit tests are located in the `sparcv9` subdirectory:

`/opt/SUNWvts/bin/sparcv9/testname`. If a test is not present in this directory, then it may only be available as a 32-bit test. For more information refer to “32-Bit and 64-Bit Tests” on page 3.

---

## Environmental Test (envtest)

---

`envtest` exercises the I2C bus on the Sun Enterprise™ 450 product line. `envtest` contains five subtests to test and report on the power supply status, system temperature status, fan speed, disk LEDs, and front panel and keyswitch.

`envtest` is not scalable.

---


**Note** – Do not run `envtest` while the system is under a heavy load or false failures may be reported.

---

---

### `envtest` Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.

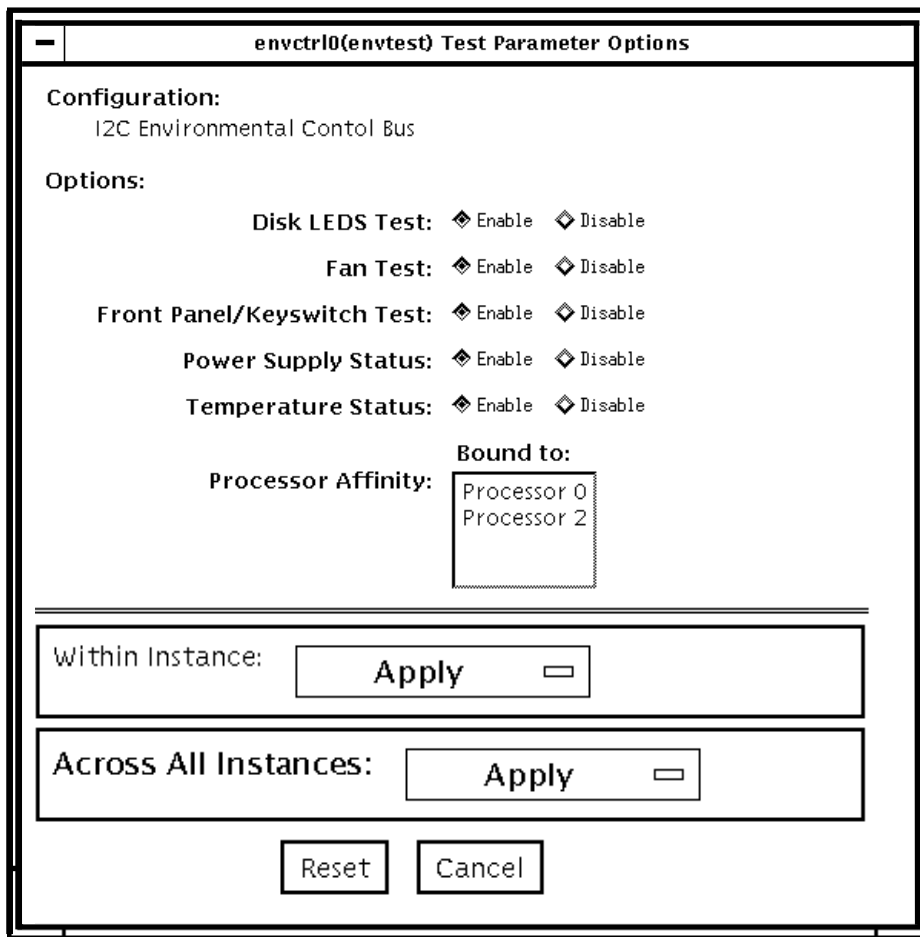

**FIGURE 18-1** envtest Test Parameter Options Dialog Box

**TABLE 18-1** envtest Options

envtest Options	Description
Disk LEDs test	Illuminates each LED on the disk backplane(s) to green, then amber, and then back to its original state. The test then illuminates all disk LEDs to green, then amber, and then back to their original state. This test is only enabled in Functional test mode.
Fan test	Cycles each fanbank speed to low, medium, and high, then verifies the correct speed. Next, each fanbank is stopped, one at a time. The test then verifies that a fan fault has occurred. Next, the watchdog timer is invoked to simulate a catastrophic failure. The test verifies that the system set all fanbanks to high and then resets the fan speed to normal. This test is only enabled in Functional test.
Front Panel and Keyswitch test	Flashes each individual LED on the front panel to ON (green or amber), then OFF, and then back to its original state. The test then illuminates all front panel LEDs then sets them back to their original state. The power on LED is Read Only and will not be cycled. The test then displays the current keyswitch position. This test is only enabled in Functional test mode.
Power Supply Status	Identifies the number of power supplies that are in the system, and the state of each power supply, and verifies that the power supply temperatures are within normal operating parameters. This test is enabled in all modes.
Temperature Status	Identifies the current temperature of each CPU in the system, and the ambient temperature of the system, and envtest verifies that all temperatures are within normal operating parameters. This test is enabled in all modes.

---

## envtest Test Modes

envtest supports Connection and Functional tests.

**TABLE 18-2** envtest Supported Test Modes

Test Mode	Description
Connection	Reports the status of the power supplies, the temperature sensors within the system, and verifies normal operating parameters.
Functional (Offline)	Tests the disk back panel, front panel LEDs, and fan control circuitry. Also uses the same functionality as online Functional mode and connection mode

---

# envtest Command-Line Syntax

```
/opt/SUNWvts/bin/envtest [standard arguments]  
-o dev=raw_device_name,diskleds=E/D,fans=E/D,fpanel=E/D,  
psupply=E/D,temp=E/D
```

**TABLE 18-3** envtest Command-Line Syntax

Argument	Description
<code>dev=raw_device_name</code>	Specifies the name of the raw device to test.
<code>diskleds=enable/disable</code>	Enables or disables the Disk LEDs test.
<code>fans=enable/disable</code>	Enables or disables the Fans test.
<code>fpanel=enable/disable</code>	Enables or disables the Front Panel test.
<code>psupply=enable/disable</code>	Enables or disables the Power Supply test
<code>temp=enable/disable</code>	Enables or disables the Temperature test.

---

**Note** – 64-bit tests are located in the `sparcv9` subdirectory:

`/opt/SUNWvts/bin/sparcv9/testname`. If a test is not present in this directory, then it may only be available as a 32-bit test. For more information refer to “32-Bit and 64-Bit Tests” on page 3.

---



## Environmental Test (`env2test`)

---

`env2test` exercises and validates the I2C bus on the Sun Enterprise 250 systems.

Five subtests in `env2test` test and report the status of the power supply, system temperature, fan speed, disk LEDs, front panel, and keyswitch.

`env2test` is not scalable.

---

**Note** – Do not run `env2test` while the system is under a heavy load or false failures may be reported.

---

---

### `env2test` Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.

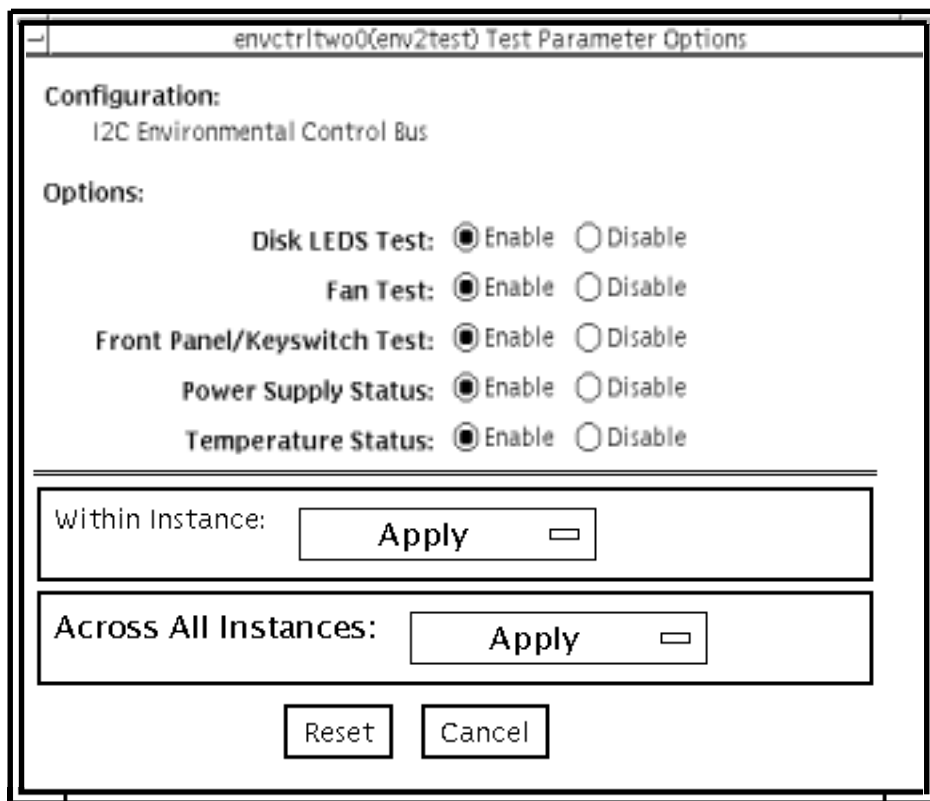


FIGURE 19-1 env2test Test Parameter Options Dialog Box

**TABLE 19-1** env2test Options

env2test Options	Description
Disk LEDs test	Determines the number of disks that are present and the state of each disk. Illuminates each LED on the disk backplane to amber, and then back to its original state. The test then illuminates all disk LEDs to amber, and then back to their original state. This test is only enabled in Functional mode.
Fan test	Sets the fanbank speed to halfway between the current speed and max speed, then verifies the correct speed. Next, the fanbank speed is set to max speed, and the speed is verified. The fanbank speeds are then returned to normal, and then verified. This test is only enabled in Functional mode.
Front Panel and Keyswitch test	Flashes each individual LED on the front panel to On (green or amber), then Off, and then back to its original state. The test then illuminates all front panel LEDs then sets them back to their original state. The power on LED is read-only and will not be cycled. The test then displays the current keyswitch position. This test is only enabled in Functional mode.
Power Supply Status	Identifies the number of power supplies that are in the system and the state of each power supply. This test is enabled in all modes.
Temperature Status	Identifies the current temperature of each CPU in the system, the ambient temperatures of the system, the temperature on the SCSI and power distribution boards, and verifies that all temperatures are within normal operating parameters. This test is enabled in all modes.

---

## env2test Test Modes

env2test supports Connection and Functional tests as described in the table below.

**TABLE 19-2** env2test Supported Test Modes

Test Mode	Description
Connection	Reports the status of the power supplies and the temperature sensors within the system, and verifies normal operating parameters
Functional (Offline)	Tests the disk back panel, front panel LEDs, and fan control circuitry. Also uses the same functionality as online mode and connection test

---

# env2test Command-Line Syntax

```
/opt/SUNWvts/bin/env2test [standard arguments]
-o dev=device_name,diskleds=E/D,env_mon=poll_interval,fans=E/D,
fpanel=E/D,psupply=E/D,temp=E/D
```

TABLE 19-3 env2test Command-Line Syntax

Argument	Description
<code>dev=raw_device_name</code>	Specifies the name of the raw device to test.
<code>diskleds=enable   disable</code>	Enables or disables diskleds test.
<code>env_mon=poll_interval</code>	Displays all system environmental statics every <code>poll_interval</code> seconds. (Display ONLY, does not test.)
<code>fans=enable   disable</code>	Enables or disables Fan test.
<code>fpanel=enable   disable</code>	Enables or disables Front Panel test.
<code>psupply=enable   disable</code>	Enables or disables Power Supply test.
<code>temp=enable   disable</code>	Enables or disables Temperature test.

---

**Note** – 64-bit tests are located in the `sparcv9` subdirectory:  
`/opt/SUNWvts/bin/sparcv9/testname`. If a test is not present in this directory, then it may only be available as a 32-bit test. For more information refer to “32-Bit and 64-Bit Tests” on page 3.

---

## Environmental Test (`env3test`)

---

`env3test` is an environmental control test for the Sun Blade 1000 and Sun Blade 100 systems. The test monitors the system by reading temperatures and fan speeds, as well as their limits. It reports whether the temperatures and fan speeds fall within system environmental condition limits.

The MAX1617 temperature sensor keeps a set of hard limits for the maximum and minimum temperatures allowed within the system. If the temperature passes one of these limits, the system performs a hard shutdown to protect hardware components. `env3test` also checks against the environmental monitor daemon, which keeps its own limits.

By reading these temperature values, the test reports the possibility of a failure of the system environmental feedback loop between the fans and the temperature sensors.

---

**Note** – If `env3test` fails to register temperature values, the system temperature indicators may be faulty.

---

---


**Note** – `env3test` will not run on operating environments earlier than the Solaris 8 10/00 operating environment.

---

---

### `env3test` Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.

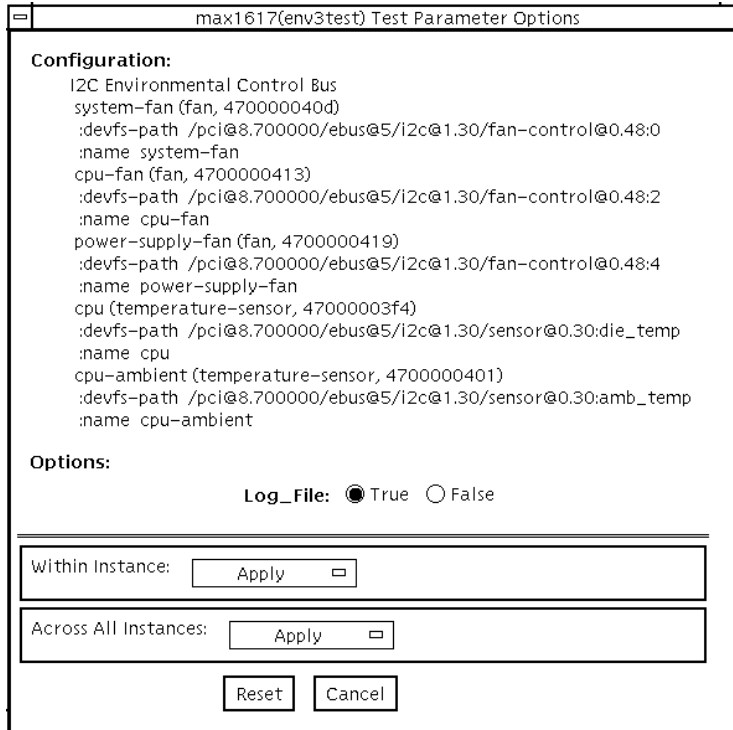

**FIGURE 20-1** env3test Test Parameter Options Dialog Box

If the Log File option is set to True, the test logs two lines of information read from the system into the log file `/var/opt/SUNWvts/logs/env3test.log`. The first line is a time stamp. The second line is a list of names and the read values, as shown below:

```
Wed May 24 13:55:57 2000
system-fan , 19, cpu-fan , 49, power-supply-fan , 100, cpu , 81,
cpu-ambient ,24
```

The values for fan settings refer to the percentage of performance at which each fan is running. The system fan, for example, is running at 19% of its capacity. The temperature values are in degrees Celsius. The cpu in the above example is running at 81 degrees C.

---

## env3test Test Modes

**TABLE 20-1** env3test Supported Test Modes

Test Mode	Description
Connection	Attempts connection to the device.
Functional (Offline)	Reports the received information to the GUI logging window in verbose mode.

---

## env3test Command-Line Syntax

```
/opt/SUNWvts/bin/env3test [standard arguments] -o dev=driver_name,  
logging=true|false
```

**TABLE 20-2** env3test Command-Line Syntax

Argument	Description
dev=driver_name	Specifies the driver name for this test. The driver for the Sun Blade 1000 is max1617.
logging=true false	Enables or disables the logging feature.

**Note** – 64-bit tests are located in the sparcv9 subdirectory:

/opt/SUNWvts/bin/sparcv9/testname. If a test is not present in this directory, then it may only be available as a 32-bit test. For more information refer to “32-Bit and 64-Bit Tests” on page 3.

---





## Environmental Test (`env4test`)

---

`env4test` exercises and validates the I2C bus on the Sun Netra™ CT systems.

There are nineteen subtests in `env4test` that test and report the status of the following:

- Continuity LED flash test
- Slot LED flash test
- Disk LED flash test
- Power supply LED flash test
- Fan LED flash test
- System controller board LED flash test
- Front transition module LED flash test
- Green LED's blink register
- Register read/write test, 3N march
- Register read/write test, 5N march
- Register read/write test, Crosstalk
- FRU presence test
- I/O slot health test
- I/O slot reset test
- Power remote on/off test
- Fan speed switch test
- CPU temperature status display test
- Power supply status display test
- Fan status display test

`env4test` is not scalable.

---

## env4test Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.

**scsb(env4test) Test Parameter Options**

Configurations:  
I2C Environmental Control Bus

Options:

SCR Fpga:  ENABLE  DISABLE

MidPlane ID:  ENABLE  DISABLE

LEDS ON Continuity:  ENABLE  DISABLE

Slot LEDES:  ENABLE  DISABLE

Disk LEDES:  ENABLE  DISABLE

Power Supply LEDES:  ENABLE  DISABLE

Fan LEDES:  ENABLE  DISABLE

SCB LEDES:  ENABLE  DISABLE

FTM LEDES:  ENABLE  DISABLE

Green LED Blink:  ENABLE  DISABLE

Register R/W:

FRU Presence:  ENABLE  DISABLE

Health:  ENABLE  DISABLE

Power Supply ON/OFF:  ENABLE  DISABLE

Fan Speed:  ENABLE  DISABLE

Temp Test:  ENABLE  DISABLE

Temperature Status:  ENABLE  DISABLE

Power Supply Status:  ENABLE  DISABLE

Fan Status:  ENABLE  DISABLE

All:  ENABLE  DISABLE

---

Within Instance:

---

Across All Instances:

FIGURE 21-1 env4test Test Parameter Options Dialog Box

**TABLE 21-1** env4test Options

env4test Options	Description
LEDS ON Continuity test	Asserts all LEDs in the system display panel except for the PDU LEDs. This verifies the ability of the System Controller Board (SCB) to perform sequential writes while automatically advancing the address pointer internally.
Slot LEDS test	Repeatedly flashes all I/O slot LEDs.
Disk LEDS test	Repeatedly flashes all disk LEDs.
Power Supply LEDS test	Repeatedly flashes all power supply LEDs.
Fan LEDS test	Repeatedly flashes all fan LEDs.
SCB LEDS test	Repeatedly flashes all system controller board LEDs.
FTM LEDS test	Repeatedly flashes all front transition module LEDs.
Green LED Blink test	Tests hardware functionality that enables blinking for the green LEDs.
Register R/W test	A pattern write test to interrupt registers and LED registers (read/write) to isolate the stuck-at-1, stuck-at-0, and cross talk fault categories. The test execution time from shortest to longest is: 3N march, 5N march, (XTALK) Cross Talk.
FRU Presence test	Reads and displays FRU presence signals.
Health test	Reads and displays I/O slot health signals.
Reset test	Sequentially resets individual I/O slots.
Power Supply test	Tests the remote power on/off signals in systems with redundant power supplies. This test is only valid when 2 power supplies are inserted in a single drawer.
Fan test	Tests the functionality of fan speed changes.
Temperature Status test	Identifies the current temperature of the CPU, the ambient temperature of the system, and verifies that the temperature is within normal operating parameters. This test is enabled in all modes.
Power Supply Status test	Detects assertion of Presence signal in the SCB and reads the power supply status register via the I2C bus. The encoded bit status is displayed to the console.
Fan Status test	Detects assertion of Presence signal in the SCB and reads the fan status register via the I2C bus. The encoded bit status is displayed to the console.
All tests	Executes all tests sequentially.

---

# env4test Test Modes

env4test supports Connection and Functional tests as described in the table below.

TABLE 21-2 env4test Supported Test Modes

Test Mode	Description
Connection	Attempts connection to the device.
Functional	Tests the disk back panel, front panel LEDs, and fan control circuitry. Also uses the same functionality as Online test mode and Connection test mode.

---

# env4test Command-Line Syntax

```
/opt/SUNWvts/bin/env4test [standard arguments] -o dev=device_name,  
ContinuityTest=E(nable)|D(isable),SlotLedsTest=E/D,DiskLedsTest=E/D,  
PsupplyLedsTest=E/D,FanLedsTest=E/D,ScbLedsTest=E/D,  
FtmLedsTest=E/D,GreenLedsBlinkTest=E/D,RegTest=3N|5N|Cross_Talk,  
FRUPresenceTest=E/D,HealthTest=E/D,ResetTest=E/D,  
PowerSupplyTest=E/D,FanTest=E/D,TempStatus=E/D, PsupplyStatus=  
E/D,FanStatus=E/D, AllTests=E/D
```

TABLE 21-3 env4test Command-Line Syntax

Argument	Explanation
dev=raw_device_name	Specifies the name of the raw device to test.
ContinuityTest=Enable/Disable	Turns on all LED's except for PDU.
SlotLedsTest=Enable/Disable	Enables or disables the slot LED flash test.
DiskLedsTest=Enable/Disable	Enables or disables the disk LED flash test.
PsupplyLedsTest= Enable/Disable	Enables or disables the power supply LED flash test.
FanLedsTest=Enable/Disable	Enables or disables the fan LED flash test.
ScbLedsTest=Enable/Disable	Enables or disables the scb LED flash test.
FtmLedsTest=Enable/Disable	Enables or disables the ftm LED flash test.
GreenLedsBlinkTest=Enable/Disable	Enables or disables the green LED hardware blink test.

**TABLE 21-3** env4test Command-Line Syntax

Argument	Explanation
<b>RegTest=3N 5N xtalk</b>	Enables or disables the 3N, 5N, cross talk register test.
<b>FRUPresenceTest= Enable Disable</b>	Enables or disables the FRU presence test.
<b>HealthTest= Enable Disable</b>	Enables or disables the health test.
<b>ResetTest= Enable Disable</b>	Enables or disables the reset test.
<b>PowerSupplyTest= Enable Disable</b>	Enables or disables the power supply remote on/off test.
<b>FanTest=Enable Disable</b>	Enables or disables the fan speed change test.
<b>TempStatus=Enable Disable</b>	Enables or disables display of CPU temperature.
<b>PsupplyStatus=Enable Disable</b>	Enables or disables display of power supply status.
<b>FanStatus=Enable Disable</b>	Enables or disables display of fan status.
<b>AllTests=Enable Disable</b>	Performs all tests in sequence.

---

**Note** – 64-bit tests are located in the `sparcv9` subdirectory: `/opt/SUNWvts/bin/sparcv9/testname`. If a test is not present in this directory, then it may only be available as a 32-bit test. For more information refer to “32-Bit and 64-Bit Tests” on page 3.

---

## Environmental Test (`env5test`)

---

`env5test` exercises and validates the environmental subsystems of the Sunfire 280R product line. This test contains subtests to exercise a system's fans, keyswitch, LEDs, power supplies and temperature sensors.

This test is not scalable.

---

**Note** – Only the 64-bit version of this test is supported.

---

---

### `env5test` Test Requirements

- You must install the `SUNWpiclh`, `SUNWpiclr`, `SUNWpiclu`, and `SUNWpiclx` `picl` packages correctly before running `env5test`.
- Verify that the `picld` daemon is running by typing the following:

```
# ps -ef |grep picld
root 100077      1  0   Sep 11 ?           23:40 /usr/lib/picl/picld
```

If the daemon is not running, run the `start` script to restart it by typing the following:

```
# /etc/init.d/picld start
```

# env5test Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.

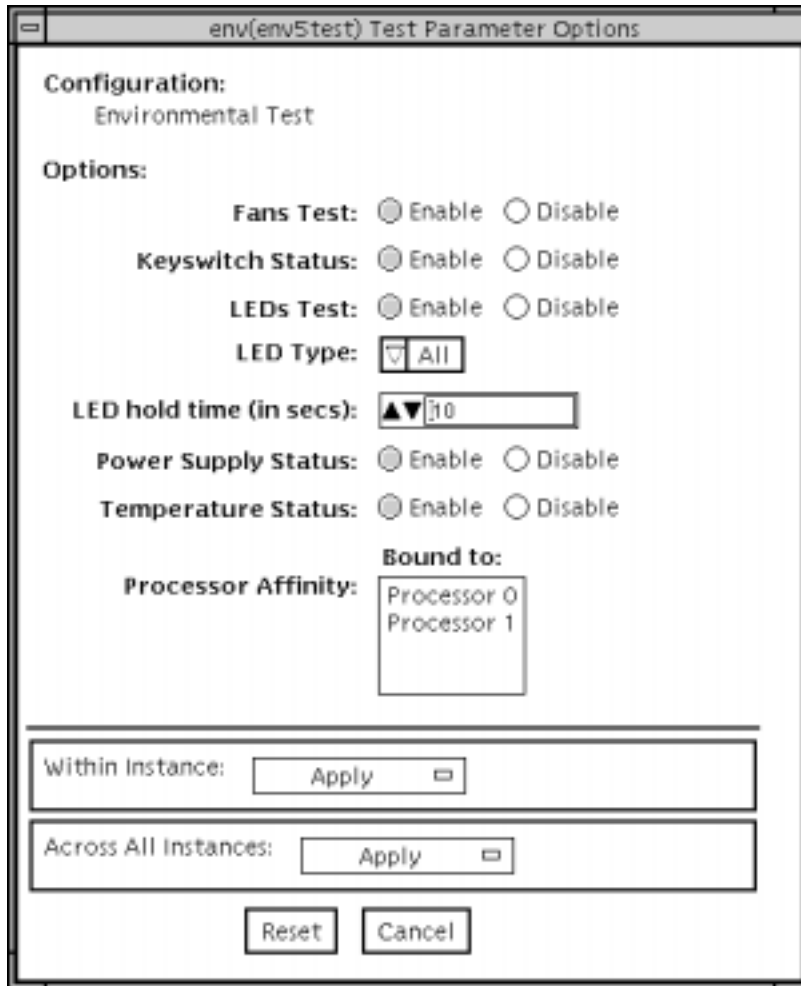


FIGURE 22-1 env5test Test Parameter Options Dialog Box



**TABLE 22-1** env5test Options

Options	Description
Fan test	Cycles each fan bank in the system and identifies its current speed and state. Displays fault information if the state is not correct. Provides different test coverage for various types of fans based on their properties. Only enabled in Functional test mode.
Keyswitch status	Displays the current keyswitch position. Enabled in all modes.
LEDs test	Enables or disables the LEDS subtest. Default is Disable. Flashes each individual green or amber LED in the system on, then off, then back to its original state. You can select to test all LEDs (by default) or test by categories. Also specifies how long the LEDs stay on during the exercise. Only enabled in Functional test mode.
LED Type	Sets the type of LED category to be tested. Default is All.
LED hold time	Sets the number of seconds that LEDs are turned on during the LED subtest. Values are 0 to 10. Default is 0.
Power supply status	Identifies the number of power supplies in the system, the state of each one, and current (I) draw information if applicable. Displays fault information if the state of the power supply is incorrect. Enabled in all modes.
Temperature status	Identifies the current temperature of temperature sensors in the system and verifies that all temperatures are within normal operating parameters. Enabled in all modes.

---

# env5test Test Modes

TABLE 22-2 env5test Supported Test Modes

Test Mode	Description
Connection	Runs the Keyswitch, Power Supply, and Temperature subtests. Reports on the status only of system fans. Verifies normal operating parameters.
Functional (Offline)	Runs the full set of subtests.

---

# env5test Command-Line Syntax

```
/opt/SUNWvts/bin/sparcv9/env5test standard_arguments  
-o dev=raw_device_name,leds=E/D,ledtype=category,ledtime=num_seconds,  
keys=E/D,fans=E/D,psupply=E/D,temp=E/D
```

TABLE 22-3 env5test Command-Line Syntax

Argument	Description
<b>dev=raw_device_name</b>	Specifies the name of the raw device to test. Default is /dev/env
<b>leds=E/D</b>	Enables or disables the LEDS subtest. Default is Disable.
<b>ledtype=category</b>	Sets the type of LED category to be tested. Default is All.
<b>ledtime=num_seconds</b>	Sets the number of seconds that LEDs are turned on during the LED subtest. Values are 0 to 10. Default is 0.
<b>keys=E/D</b>	Enables or disables the Keyswitch subtest. Default is Enable.
<b>fans=E/D</b>	Enables or disables the Fans subtest. Default is Disable.
<b>psupply=E/D</b>	Enables or disables the Power supply subtest. Default is Enable.
<b>temp=E/D</b>	Enables or disables the Temperature subtest. Default is Enable.

## Frame Buffer Test (`fbtest`)

---

`fbtest` is a generic test for all frame buffers used with the Solaris 2.x and Solaris 7-9 software.

The `fbtest` checks the frame buffer by sequentially writing, reading, and verifying small blocks of random patterns across the entire video RAM. The block size is 64 x 64 pixels. If a miscompare occurs, the test stops with an error message that indicates the location of the error.

If a generic frame buffer device name (`dvc/fb`) is specified, `fbtest` automatically detects the depth of the frame buffer, and adjusts testing to the frame buffer size.

For full instructions on testing frame buffers, see “Testing Frame Buffers” on page 8.

---

### `fbtest` Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.

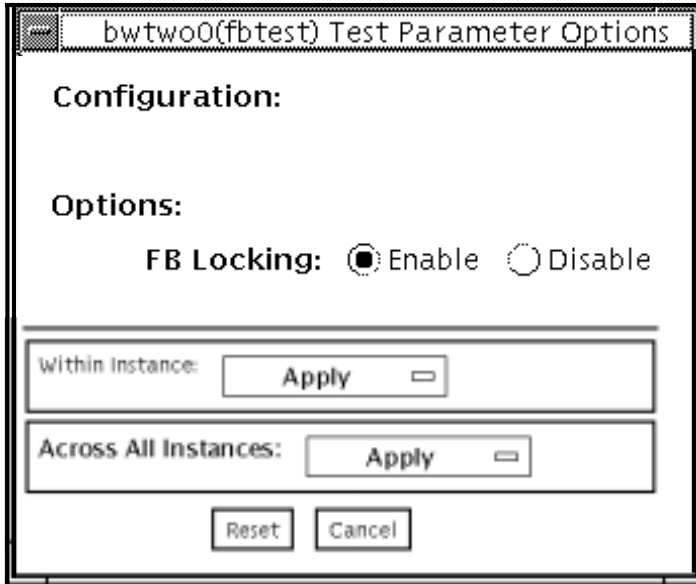


FIGURE 23-1 fbtest Test Parameter Options Dialog Box

---

**Note** – To start SunVTS with `vtmui`, but without `vtsk`, you must add the host name to `xhost` as: `xhost + hostname`.

---

## fbtest Test Modes

Due to the nature of graphic tests, reading from or writing to the frame buffer during graphic tests disturbs user operation.

TABLE 23-1 fbtest Supported Test Modes

Test Mode	Description
Functional (Offline)	Runs the full set of tests

---

# fbtest Command-Line Syntax

`/opt/SUNWvts/bin/fbtest standard_arguments -o dev=device_name, lock=  
E(nable)/D(isable)`

**TABLE 23-2** fbtest Command-Line Syntax

Argument	Description
<code>dev=device_name</code>	Specifies which frame buffer to test.
<code>lock= E(nable)/D(isable)</code>	Enables or disables the window system locking option. See “Testing Frame Buffers” on page 8 for details. Frame buffer locking is enabled by default on the window server running the Open Windows software.

---

**Note** – 64-bit tests are located in the `sparcv9` subdirectory:

`/opt/SUNWvts/bin/sparcv9/testname`. If a test is not present in this directory, then it may only be available as a 32-bit. For more information refer to “32-Bit and 64-Bit Tests” on page 3.

---



## Fast Frame Buffer Test (`ffbttest`)

---

`ffbttest` verifies the functionality of the fast frame buffer (FFB).

`ffbttest` can detect and adapt to the video modes of single- and double-buffer versions of the FFB. All `ffbttest` tests can run in several screen resolutions such as standard, stereo, and high resolution. In stereo mode, all tests write into the right and left eyes unless you specify otherwise. This test also supports FFB, FFB2, and FFB2+ fast frame buffer configurations. Use the `ffbconfig -prconf` command to display the configuration of the frame buffer you want to test.

You can interrupt `ffbttest` using Control-C.

Test accuracy is checked using a checksum algorithm. Possible locations of failing pixels are identified, as well as the likely failing FRU.



---

**Caution** – *Do not* run any other application or screen saver program that uses the FFB accelerator port while running `ffbttest`. These programs cause SunVTS to return incorrect errors.

---

---

## `ffbttest` Test Requirements

Disable all screen savers before testing any graphics device. Type `xset s off` at a UNIX prompt to disable the Solaris screen saver. Disable the Power Management™ software if it is running.

For full instructions on testing frame buffers, see “Testing Frame Buffers” on page 8.

`ffbttest` requires approximately 7 MB of disk space in the `/tmp` directory to extract its working files. If this space is not available, the diagnostic will fail and report warning and error messages, indicating a lack of disk space.

To start SunVTS with `vtstui`, but without `vtstk`, you must add the host name to `xhost` as: `xhost + <hostname>`.

## fbttest Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.

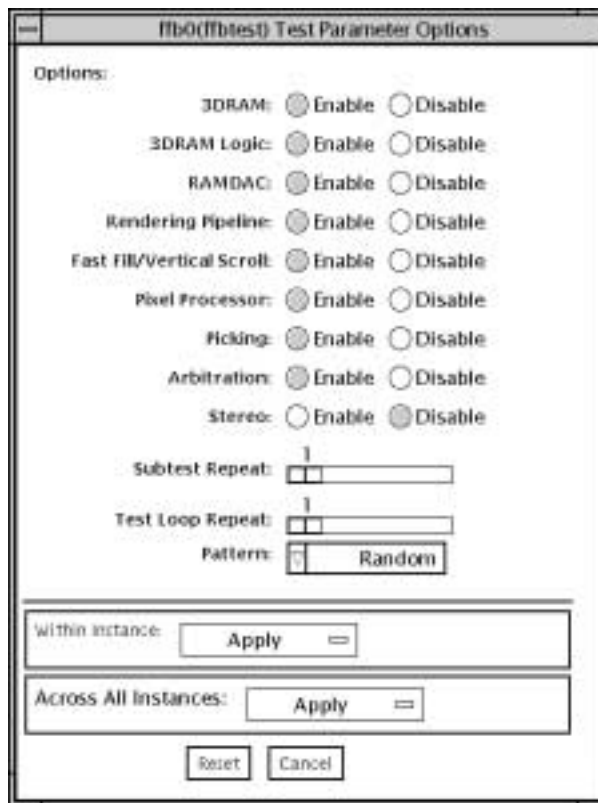


FIGURE 24-1 fbttest Test Parameter Options Dialog Box



By default, all tests are enabled except the stereo test.

**TABLE 24-1** `ffbttest` Options

<code>ffbttest</code> Options	Description
3DRAM test	<p>The 3DRAM test thoroughly tests the video memory in the FFB using 512-bit reads and writes. 3DRAM makes a full screen pass, consisting of a write and a read to each pixel location, for each access mode on the list below. You can use either random data or specify data at the command line. A second pass is made with the one's complement of the data used in the first pass so that each memory location is tested with both a zero and a one. Notice that some passes are skipped on the single-buffered FFB.</p> <p>Errors in this subtest are attributes to the 3DRAM. A failing chip is indicated by (X, Y) locations and device-specific "U" numbers:</p> <ul style="list-style-type: none"><li>• DFB8R, DFB8G, DFB8B, DFB8X—Buffer A</li><li>• DFB24—Buffer A</li><li>• DFB32—Buffer A</li><li>• SFB8R, SFB8G, SFB8B, SFB8X—Buffer A</li><li>• SFB8R, SFB8G, SFB8B, SFB8X—Buffer B (double buffer only)</li><li>• SFB32—Buffer A</li><li>• SFB32—Buffer B (double buffer only)</li><li>• SFB32—Buffer C (double buffer only)</li><li>• SFB64—Buffers A and C (double buffer only)</li><li>• SFB64—Buffers B and C (double buffer only)</li></ul>

**TABLE 24-1** `fbttest` Options (Continued)

<code>fbttest</code> Options	Description
3DRAM Logic test	<p>3DRAM Logic provides logical functionality to the FFB. The following services are tested:</p> <ul style="list-style-type: none"> <li>• Compare Controls—Match AB</li> <li>• Compare Controls—Magnitude AB</li> <li>• Compare Controls—Match C (double buffer only)</li> <li>• Compare Controls—Magnitude C (double buffer only)</li> <li>• Match Mask—AB</li> <li>• Magnitude Mask—AB</li> <li>• Match Mask—C (double buffer only)</li> <li>• Magnitude Mask—C (double buffer only)</li> <li>• Raster Operations—RGB</li> <li>• Raster Operations—X</li> <li>• Raster Operations—YZ (double buffer only)</li> <li>• Plane Mask—RGB</li> <li>• Plane Mask—X</li> <li>• Plane Mask—Y</li> <li>• Plane Mask—Z</li> <li>• Group Enable—R, G, B, X</li> <li>• Group Enable—Y, Z (double buffer only)</li> </ul>
3DRAM Logic test (Continued)	<p><code>fbttest</code> tests each function separately with a series of SFB64 writes. A total of 16 writes are made for each different test case with Y coordinate values varying from 0 to 30 in increments of 2 pixels. This dotted column organization provides page thrashing and block flashing in all screen resolutions. For each operation, all possible combinations are tested. For example, <code>ROP RGB new==old</code> has three possible values: <code>new &lt; old</code>, <code>new == old</code>, and <code>new &gt; old</code>. <code>fbttest</code> tests each of these cases.</p> <p>Five passes of the functions are made. Each pass writes into a different FFB address space: SFB32-A, SFB32-B, SFB32-C, SFB64-AC, and SFB64-BC. Note that the passes that write into the SFB32 address spaces are writing two pixels at a time because the tests use SFB64 writes.</p> <p>For FFB2+ boards, additional testing is performed on the new stencil and <code>passin</code> capabilities if the board is DBZ.</p> <p>Care is taken to ensure that all 3DRAM chips are tested. Errors in this subtest are attributed to the 3DRAM.</p>

**TABLE 24-1** `ffbttest` Options (Continued)

<code>ffbttest</code> Options	Description
RAMDAC Test	<p>RAMDAC registers are tested using simple read/write patterns to determine if there are any bad bits. This includes all LUTs. <code>ffbttest</code> ensures that data is actually being read from the RAMDAC and not being supplied by the driver.</p> <p>Next, the RAMDAC Signature Register captures the pixels going to the screen. This test determines that all of the different data paths within the RAMDAC are functioning properly.</p> <p>The following modes are tested:</p> <ul style="list-style-type: none"> <li>• 24-bit true color from A</li> <li>• 24-bit true linear color from A</li> <li>• 24-bit direct color from A</li> <li>• 24-bit true color from B (double buffer only)</li> <li>• 24-bit true linear color from B</li> <li>• 24-bit direct color from B (double buffer only)</li> <li>• 8-bit pseudo color (from each plane in RGB) from A</li> <li>• 8-bit pseudo color (from each plane in RGB) from B (double buffer only)</li> <li>• 8-bit non-linear grayscale (from each plane in RGB) from A</li> <li>• 8-bit non-linear grayscale (from each plane in RGB) from B (double buffer only)</li> <li>• 8-bit linear grayscale (from each plane in XRGB) from A</li> <li>• 8-bit linear grayscale (from each plane in XRGB) from B (double buffer only)</li> <li>• 8-bit overlay pseudo color (from buffer A, X plane)</li> </ul>
RAMDAC test (Continued)	<p>This test displays a total of 11 different types of windows on the screen for the single-buffered configuration; 22 for double-buffered. A cursor is also displayed on the screen.</p> <p>RAMDAC on FFB2+ board supports three modes (SEP8, SEP4, and Combined). This test detects the RAMDAC type and tests the original and additional features like increased number of CLUTs, increased WLUT size, additional overlay WLUT.</p> <p>Errors in this test are attributed to the RAMDAC.</p>

**TABLE 24-1** `ffbttest` Options (Continued)

<code>ffbttest</code> Options	Description
Rendering Pipeline test	<p>Rendering Pipeline uses the rendering pipeline tests developed for the FFB stand-alone diagnostics.</p> <p>Each primitive is tested thoroughly with the following sources and configurations:</p> <ul style="list-style-type: none"><li>• Dots</li><li>• Anti-aliased dots</li><li>• Lines using all four line drawing primitives</li><li>• Triangles</li><li>• Polygons</li><li>• Rectangles</li><li>• Fonts</li></ul> <p>Errors in this test are attributed to the FBC.</p>
Fast Fill/Vertical Scroll test	<p>The Fast Fill/Vertical Scroll primitives are separated from the Rendering Pipeline tests because of their dependence on screen type. There are three different tests, one for each screen type. Each test uses both block and page mode fistfuls.</p> <p>Errors in this test are attributed to the FBC.</p>
Pixel Process test	<p>Pixel Processor, a subtest, exercises the following options selected by the FFB's Pixel Processor Control (PPC) register:</p> <ul style="list-style-type: none"><li>• Auxiliary clipping (additive and subtractive)</li><li>• Depth cueing</li><li>• Alpha blend</li><li>• Viewport clip (2D and 3D)</li><li>• Area pattern (transparent and opaque)</li></ul> <p>Errors in this test are attributed to the FBC.</p>
Picking test	<p>The Picking test exercises the pick detect login of the 3DRAM. <code>ffbttest</code> defines a pick detect window and checks that writes to the window are picked, and writes outside the window are not picked. The test is repeated once for each 3DRAM.</p> <p>Errors in this test are attributed to the 3DRAM.</p>

**TABLE 24-1** `fbtest` Options (Continued)

<code>fbtest</code> Options	Description
Arbitration test	<p>The Arbitration subtest continuously renders an object into the accelerator port while performing reads and writes through the direct port. For single-buffered configurations, a picture is rendered into the RGB planes while another process does DFB reads and writes in the X plane. For doubled buffered configuration, a picture is rendered into all 32 planes of the B buffer while the other does 32-bit DFB reads and writes in the A plane. This subtest simulates conditions in the real world, where rendering processes and windows operations run concurrently.</p> <p>Errors in this test are attributed to the FBC.</p>
Stereo Test	<p>The Stereo test displays an object in stereo mode with different images for the right and left eye. The user can verify proper operation by looking at the screen with stereo glasses and following the displayed instructions. If the monitor type is not 1280x1024 at 76MHz, this test prints a warning message and does not run. To prevent this message from being displayed or written to the SunVTS information log, disable the stereo test in the test option menu. Only Sony P4 and N2 monitors support stereo resolutions.</p> <p>This test temporarily switches the monitor into stereo mode, renders a stereo image, performs a signature analysis on the stereo image (using the RAMDAC signature capture register), and after displaying the image for five seconds, restores the monitor to its previous resolution.</p> <p>Errors in this test are attributed to the RAMDAC.</p> <p>Note — If vertical lines are displayed on the console when running SunVTS, this could be caused by the <code>fbtest</code> stereo test. There is a time-critical period in the FFB hardware when trying to change the screen resolution from standard to stereo and back to standard. When the system is heavily loaded or running all of the SunVTS tests, the FFB device driver may get interrupted while changing screen resolution. If this occurs, FB ASIC and RAMDAC get out of synchronization, resulting in an unusual display on the FFB screen. This problem could also cause a system hang condition. To avoid this type of display problem, disable the <code>fbtest</code> stereo test when other SunVTS tests are enabled.</p> <p>This test is disabled by default because it is only needed when a stereo monitor and stereo glasses are present.</p>

---

# ffbttest Test Modes

Due to the nature of graphic tests, reading from or writing to the frame buffer during graphic tests will disturb user operation. This test is only available in offline Functional test and Stress mode.

**TABLE 24-2** `ffbttest` Supported Test Modes

Test Mode	Description
Functional (Offline)	The <code>ffbttest</code> verifies both the single- (SFB) and double-buffered (DBZ) fast frame buffer boards.
Stress mode	Stress mode exercises the frame buffer as much as possible. The Random test generator, constructed as part of the verification effort, is used. Starting from a known seed, random primitives with random attributes are generated. The primitives are checked to ensure that they were rendered in the same way as on a known good system. The test is repeated ten times, with each random picture overlaying the previous one.

Stress mode is not available on FFB2+ boards.

# ffbttest Command-Line Syntax

`/opt/SUNWvts/bin/ffbttest standard_arguments -o dev=device_name, S=subtest_number,F=#_of_subtest_loops,B=#_of_test_loops,P=test_pattern`

TABLE 24-3 ffbttest Command-Line Syntax

Argument	Description
<code>dev=device_name</code>	<code>device_name</code> is the relative path name of the device being tested with respect to <code>/dev/fbs</code> ; The default is <code>ffb0</code> .
<code>S=subtest_number</code>	<p><code>subtest_number</code> is the test number of the subtest to be run. Select from the subtests below. You can run multiple subtests by adding the subtest numbers. For example, <code>n=0x3</code> runs both test 1 and test 2; <code>n=0x180</code> runs both test 0x080 and test 0x100. Note that you do not need the leading zeros.</p> <ul style="list-style-type: none"><li>• <code>n=0x00001</code> 3DRAM</li><li>• <code>n=0x00002</code> 3DRAM Logic</li><li>• <code>n=0x00004</code> RAMDAC</li><li>• <code>n=0x00008</code> Rendering Pipeline</li><li>• <code>n=0x00010</code> FastFill/Vertical Scroll</li><li>• <code>n=0x00020</code> Pixel Processor</li><li>• <code>n=0x00040</code> Picking</li><li>• <code>n=0x00080</code> Arbitration</li><li>• <code>n=0x00100</code> Stereo</li></ul> <p>More than one test can be selected by ORing subtest numbers. For example: <code>n = 0x00009</code> selects 3DRAM and Rendering Pipeline tests. A hex number must be preceded by <code>0x</code>, decimal numbers are also acceptable.</p>
<code>F=#_of_subtest_loops</code>	Specifies the number of times to repeat each subtest. The default is 1.
<code>B=#_of_test_loops</code>	Specifies the number of times to repeat a test loop before passing. The default is 1.
<code>P=test_pattern</code>	Specifies the test pattern number. The default is <code>r</code> , for random patterns. You may also choose 0 for <code>0x0000000</code> , 3 for <code>0x33333333</code> , 5 for <code>0x55555555</code> , or 9 for <code>0x99999999</code> .

---

**Note** – 64-bit tests are located in the `sparcv9` subdirectory: `/opt/SUNWvts/bin/sparcv9/testname`. If a test is not present in this directory, then it may only be available as a 32-bit test. For more information refer to “32-Bit and 64-Bit Tests” on page 3.

---

---

**Note** – Errors returned by `ffbtst` are nonspecific. It is not possible to determine which component caused a failure. In all error conditions, the field replaceable unit (FRU) is the entire FFB.

---



# Floating Point Unit Test (`fputest`)

---

The `fputest` checks the functionality of the floating point unit in a Sun SPARC based CPU. The test verifies the functionality by various arithmetic operations. In addition, the `fputest` stresses the CPU with the use of benchmarks. Both single and double precision numbers are used for the operations.

---

## `fputest` Subtests

Instruction tests:

- FSR Register test
- Registers test
- NACK test
- Move Registers test
- Positive to Negative test
- Negative to Positive test
- Absolute test
- Single-Precision Integer to Floating Point test
- Double-Precision Integer to Floating Point test
- Single-Precision Floating Point to Integer test
- Double-Precision Floating Point to Integer test
- Single-Precision Round Toward Zero test
- Double-Precision Round Toward Zero test
- Single to Double-Precision Format Conversion test
- Double to Single-Precision Format Conversion test
- Single and Double-Precision Addition, Subtraction, Multiplication, Square-root, Division, and Compare tests
- Single and Double-Precision Compare and Exception if Unordered tests

- Branching and No Branching on Condition Instructions tests
- Single and Double-Precision Chaining tests
- Weitek Status tests
- Lock test
- Single and Double-Precision Datapath tests
- Timing (load) test

Benchmark tests:

- Linpack test
- Cparanoia test
- Kcsqrt test
- Kcdiv test
- Clorenz test
- Cvector test

---

## fpctest Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.

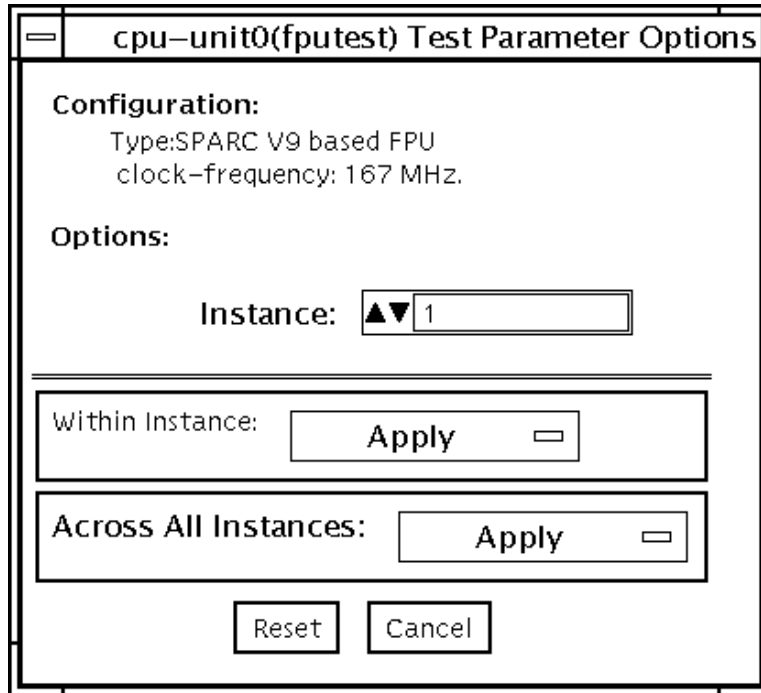


FIGURE 25-1 `fputest` Test Parameter Options Dialog Box

---

**Note** – It is not advisable to use the Processor Affinity option for this test. Doing so reduces the effectiveness of the test.

---

---

# fputest Test Modes

**TABLE 25-1** fputest Supported Test Modes

Test Mode	Description
Connection	Includes all the instruction tests.
Functional (Offline)	Performs all the instruction tests and all the benchmark tests.
Stress mode	Performs several fpu benchmark tests.

---

# fputest Command-Line Syntax

`/opt/SUNWvts/bin/fputest standard_arguments`

---

**Note** – 64-bit tests are located in the `sparcv9` subdirectory: `/opt/SUNWvts/bin/sparcv9/testname`. If a test is not present in this directory, then it may only be available as a 32-bit test. For more information refer to “32-Bit and 64-Bit Tests” on page 3.

---

## IEEE 1394 Camera Test (`fwcamtest`)

---

`fwcamtest` tests the parameters and display functions of an IEEE 1394 digital camera, such as vid mode, frame rate, and frames received. This test currently supports the LG PC-10 camera.

---

**Note** – Do not run the `fwcamtest` and `vmemtest` at the same time on any Sun Blade™ system. This may cause the tests to fail.

---

---

**Note** – Do not start Sunforum™ (or any application that uses the `dcam0` device) while `fwcamtest` is running. This causes the test to fail.

---

---

## `fwcamtest` Test Requirements

### Start a Window Environment

The system that runs `fwcamtest` must already be running a window environment, such as CDE. If the system has no window environment, or is only displaying the login window, `fwcamtest` will neither pass nor fail.

---

**Note** – Your window system must be operating in 24-bit depth to run the display test. Instructions for changing this setting are below.

---

If you are working in CDE, you can change your system to 24-bit depth by editing the file `/usr/dt/config/Xservers` or `/etc/dt/config/Xservers`. The file `/etc/dt/config/Xservers` overrides the file `/usr/dt/config/Xservers`. Edit the appropriate file to include the following line:

```
:0 Local local_uid@console root /usr/openwin/bin/Xsun :0
-nobanner -dev /dev/fbs/ffb0 defdepth 24 defclass TrueColor
```

---

## Testing Through a Remote Connection

While running `fwcamtest` through a remote connection (such as a telnet session), if the `DISPLAY` variable is not set properly, it will cause numerous warning messages to display. These messages are logged and can fill up the log files. To avoid this, set your `DISPLAY` variable for the local host, and perform `xhost remote_host` on the local host before you start SunVTS and run `fwcamtest`.

---

## fwcamtest Subtests


`fwcamtest` has three subtests:

- **Parameter Test**—Tests the digital camera parameters such as vid mode and brightness.
- **Framereceive Test**—Initializes the vid mode, framerate and ring buffer capacity parameters, then checks for the frame received.
- **Display Test**—Displays the captured frames. This display test sets up the 1394 bus for asynchronous transfer mode. The display test will only display the frames on the host running the test; it cannot display on a remote host.

---

## fwcamtest Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.

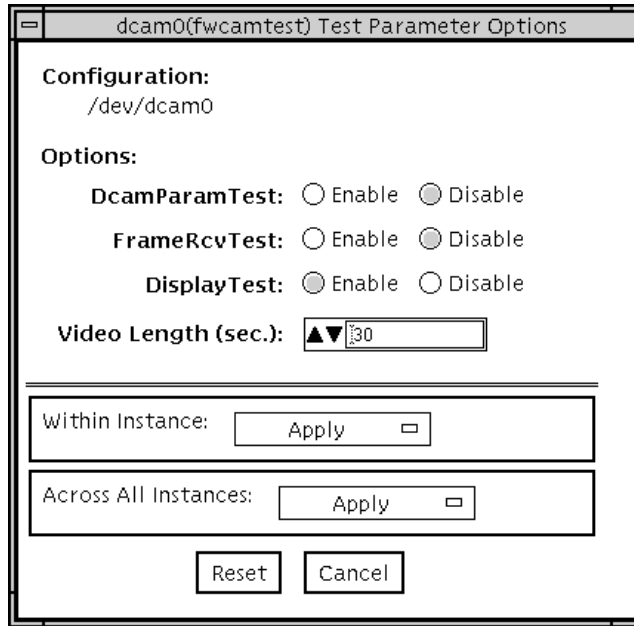

**FIGURE 26-1** fwcamtest Test Parameter Options Dialog Box

**TABLE 26-1** fwcamtest Options

<i>fwcamtest</i> Options	Description
DcamParamTest	Enables or disables the Parameter subtest.
FrameRevTest	Enables or disables the Frame Receive subtest.
DisplayTest	Enables or disables the Display subtest.
Video Length	Determines, in seconds, how long the screen display lasts.

---

## fwcamtest Test Modes

**TABLE 26-2** fwcamtest Supported Test Modes

Test Mode	Description
Functional (Offline)	Runs the full set of tests.

---

## fwcamtest Command-Line Syntax

`/opt/SUNWvts/bin/fwcamtest standard_arguments`  
`-o dev=dcam0,dcamparam=E(nable)|D(isable),framercv=E|D,display=E|D,`  
`T=seconds`

**TABLE 26-3** fwcamtest Command-Line Syntax

Argument	Description
<code>dev=dcam0</code>	Specifies the device name for this test.
<code>dcamparam=E(nable) D(isable)</code>	Enables or disables the Parameter subtest.
<code>framercv=E D</code>	Enables or disables the Frame Receive subtest.
<code>display=E D</code>	Enables or disables the Display subtest.
<code>T=seconds</code>	Specifies the time period of the display test in seconds.

---

**Note** – 64-bit tests are located in the `sparcv9` subdirectory:

`/opt/SUNWvts/bin/sparcv9/testname`. If the test is not present in this directory, then it may only be available as a 32-bit test. For more information refer to “32-Bit and 64-Bit Tests” on page 3.

---



# Graphics Frame Buffer Test (gfbtest)

---

`gfbtest` verifies the functionality of the Graphics frame buffer (GFB).

`gfbtest` can detect and adapt to the video modes of Sun XV-1000 Model D256 Graphics Accelerator and Sun XV-1000 Model S64 Graphics Accelerator. SunXV-1000 Model D256 Graphics Accelerator has 256 MB of Texture Memory and 72 MB of video memory. Sun XV-1000 Model S64 Graphics Accelerator has 36 MB Texture Memory and 256 MB Video Memory.

All `gfbtest` tests can run in several screen resolutions such as standard, stereo, and high resolution. In stereo mode, all tests write into the right and left eyes unless you specify otherwise. Use the `fbconfig -dev <device-name> -prconf` command to display the configuration of the frame buffer you want to test. You can interrupt `gfbtest` using Control-C. Turn off all other keyboard input if CDE is running on the unit being tested. Test accuracy is checked using a checksum algorithm. Possible locations of failing pixels are identified, as well as the likely failing FRU.

---

**Note** – `gfbtest` is only available in 64-bit mode.

---



---

**Caution** – Do not run any other application or screen saver program that uses the GFB accelerator port while running `gfbtest`. These programs cause SunVTS to return incorrect errors.

---

---

## gfbtest Test Requirements

Disable all screen savers before testing any graphics device. Type `xset s off` at a UNIX prompt to disable the Solaris screen saver. Disable the Power Management software if it is running. For full instructions on testing frame buffers, see "Testing Frame Buffers" on page 9.

`gfbtest` requires approximately 26 MB of disk space in the `/tmp` directory to extract its working files. If this space is not available, the diagnostic will fail and report warning and error messages, indicating a lack of disk space. To start SunVTS with `vtstui`, but without `vtstsk`, you must add the host name to `xhost` as:

```
xhost + <hostname>
```

---

## gfbtest Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the SunVTS User's Guide for more details. By default, all tests are enabled except the stereo test.

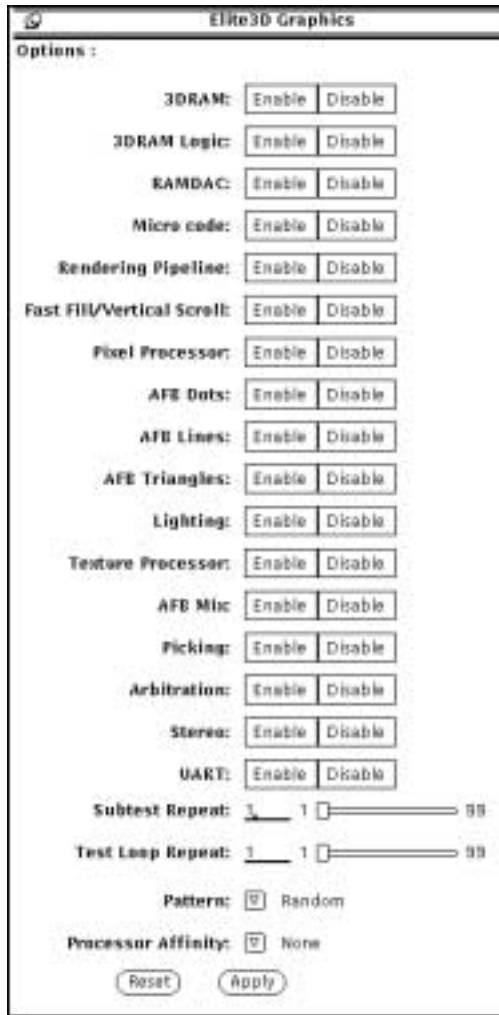


FIGURE 27-1 gfbtest Test Parameter Options Dialog Box

**TABLE 27-1** gfbtest Options

gfbtest Options	Description
3DRAM Test	<p>The 3DRAM test thoroughly tests the video memory in the GFB using 512-bit reads and writes. 3DRAM makes a full screen pass, consisting of a write and a read to each pixel location, for each access mode on the list below. You can use either random data or specify data at the command line. A second pass is made with the one's complement of the data used in the first pass so that each memory location is tested with both a zero and a one.</p> <p>Errors in this subtest are attributed to the 3DRAM. A failing chip is indicated by (X, Y) locations and device-specific "U" numbers:</p> <ul style="list-style-type: none"><li>• SFB Stencil 8</li><li>• SFB WID 16</li><li>• FB RGBAZ 64 - Buffer A</li><li>• SFB RGBAZ 64 - Buffer B</li></ul>

**TABLE 27-1** gfbtest Options

gfbtest Options	Description
3DRAM Logic Test	<p>3DRAM Logic test provides logical functionality to the GFB. The following services are tested:</p> <ul data-bbox="608 335 993 725" style="list-style-type: none"><li>• Compare Controls - Match AB</li><li>• Compare Controls - Magnitude AB</li><li>• Compare Controls - Match C</li><li>• Compare Controls - Magnitude C</li><li>• Match Mask - AB</li><li>• Magnitude Mask - AB</li><li>• Match Mask - C</li><li>• Magnitude Mask - C</li><li>• Raster Operations - RGB</li><li>• Raster Operations - X</li><li>• Raster Operations - YZ</li><li>• Plane Mask - RGB</li></ul> <p>gfbtest tests each function separately with a series of SFB64 writes. A total of 16 writes are made for each different test case with Y coordinate values varying from 0 to 30 in increments of 2 pixels. This dotted column organization provides page thrashing and block flashing in all screen resolutions. For each operation, all possible combinations are tested.</p> <p>For example: ROP RGB new==old has three possible values. new &lt; old, new == old, and new &gt; old. gfbtest tests each of these cases.</p> <p>Errors in this subtest are attributed to the 3DRAM.</p>

**TABLE 27-1** gfbtest Options

gfbtest Options	Description
XChip Test	<p>X Chip registers are tested using simple read/write patterns to determine if there are any bad bits. This includes all LUTs. gfbtest ensures that data is actually being read from the RAMDAC and not being supplied by the driver. Next, the RAMDAC Signature Register captures the pixels going to the screen. This test determines that all of the different data paths within the RAMDAC are functioning properly. The following modes are tested:</p> <ul style="list-style-type: none"><li>• 24-bit true color from A</li><li>• 24-bit true linear color from A</li><li>• 24-bit direct color from A</li><li>• 24-bit true color from B</li><li>• 24-bit true linear color from B</li><li>• 24-bit direct color from B</li><li>• 8-bit pseudo color (from each plane in RGB) from A</li><li>• 8-bit pseudo color (from each plane in RGB) from B</li><li>• 8-bit non-linear grayscale (from each plane in RGB) from A</li><li>• 8-bit non-linear grayscale (from each plane in RGB) from B</li><li>• 8-bit linear grayscale (from each plane in XRGB) from A</li><li>• 8-bit linear grayscale (from each plane in XRGB) from B</li><li>• 8-bit overlay pseudo color (from buffer A, X plane)</li></ul> <p>Errors in this test are attributed to the RAMDAC.</p>
Cafe Test	<p>This test will do non-destructive testing of cafe memory (RDRAM) and cafe. The errors in this test are attributed to the cafe and its memory.</p>
Texture Memory Test	<p>Texture memory test tests out all the of the texture memory by writing the data pattern selected (random, 0s, 1s, 5s or 0xAs). By default Random data is selected. The data is written using block writes and read back using block reads. This test automatically detects if the board has 64 MB or 256MB of texture memory and tests it accordingly.</p> <p>Errors in this test are attributed to texture memory and texture memory subsystem.</p>

**TABLE 27-1** gfbtest Options

<code>gfbtest</code> Options	Description
Rendering Pipeline Test	<p>Each primitive is tested thoroughly by exercising the following:</p> <ul style="list-style-type: none"> <li>• Simple Triangles</li> <li>• 2d primitives</li> <li>• 3d Primitives (like Triangles, 3d lines etc.)</li> <li>• Vertex Processor</li> </ul> <p>Errors in this test are attributed to the FBC3.</p>
Texture Pipeline Test	<p>This test renders textured primitives to test</p> <ul style="list-style-type: none"> <li>• 2d texture Minification filtering</li> <li>• 2d texture Magnification filtering</li> <li>• 3d texture Minification filtering</li> <li>• 3d texture Magnification filtering</li> <li>• texture environment</li> <li>• Filter4 and sharpen filters</li> <li>• anisotropic filter</li> </ul> <p>Errors in this test are attributed to FBC3.</p>
Fragment Processor Test	<p>Fragment Processor, a subtest, exercises the following options selected by the GFB's Fragment Processor Control (FPC) register:</p> <ul style="list-style-type: none"> <li>• Auxiliary clipping (additive and subtractive)</li> <li>• Depth cueing</li> <li>• Alpha blend</li> <li>• Viewport clip (2D and 3D)</li> <li>• Area pattern (transparent and opaque)</li> </ul> <p>Errors in this test are attributed to the FBC3.</p>
Lighting Test	<p>The Lighting test exercises GFB float and lighting microcode. This test lights an object with maximum number of lights (32) that GFB can handle in hardware. A checksum is generated for the rendered image and compared with the checksum generated for the same image on a known good system.</p> <p>Errors in this test are attributed to the Cafe, Microcode and RD RAMs.</p>
Super Sampling Test	<p>This test will test the super sampling filtering. A picture is drawn into off screen memory, then it is filtered through the super sample filter and copied into on screen video memory.</p> <p>The errors in this test are attributed to FBC3 and 3DRAMs.</p>

**TABLE 27-1** gfbtest Options

gfbtest Options	Description
Mesh Buffer Test	<p>This test exercises the mesh buffer by setting up the mesh buffer and rendering triangles by using mesh buffer.</p> <p>Errors in this test are attributed to mesh buffer.</p>
Clip Trap Test	<p>Clip trap feature is tested by drawing triangles which cross the clip region. When the triangle falls beyond clip region, a clip trap is sent to cafe. Then, Cafe services the clip trap.</p> <p>The errors in this test are attributed to cafe and microcode.</p>
Context Switching Test	<p>This test tests the microcode context switching capabilities.</p> <p>Errors in this test are attributed to Cafe, RDRAMs and/or Microcode.</p>
Mixed Primitives Test	<p>The GFB Mix test draws different primitives with variety combinations of sources and configurations, exercising all the FBC3, Cafe, Microcode, SDRAM and 3DRAM chips on GFB. This test is to stress the GFB.</p> <p>Errors in this test are attributed to FBC3, CAFE, Microcode, SDRAM, RDRAM and/or 3DRAM Chips.</p>
Picking Test	<p>The Picking test exercises the pick detect login of the 3DRAM. A pick detect window is defined and the test verifies that writes to the window are picked, and writes outside the window are not picked. The test is repeated once for each 3DRAM.</p> <p>Errors in this test are attributed to the 3DRAM.</p>
Stereo Test	<p>Stereo test displays an object in stereo mode with different images for the right and left eye. You can verify proper operation by looking at the screen with stereo glasses and following the instructions displayed. If the monitor type is not 1280x1024 at 76MHz, this test prints a warning message and does not execute.</p> <p>To prevent this message from being displayed or written to the SunVTS information log, disable the stereo test in the Test Parameter Options dialog box. This test temporarily switches the monitor into stereo mode, renders a stereo image, performs a signature analysis on the stereo image (using the RAMDAC signature capture register), and after displaying the image for five seconds, restores the monitor to its previous resolution.</p> <p>Errors in this test are attributed to the X Chip.</p>



---

## gfbtest Test Modes

Due to the nature of graphic tests, reading data from, or writing data to the frame buffer during graphic tests will disturb user operation. For this reason, `gfbtest` is only available in offline Functional test mode.

**TABLE 27-2** `gfbtest` Supported Test Modes

Test Mode	Description
Functional (Offline)	Runs the full set of tests

---

## gfbtest Command Line Syntax

`/opt/SUNWvts/bin/sparcv9/gfbtest standard_arguments -o dev=device_name, S=subtest_number, F=#_of_subtest_loops, B=#_of_test_loops, P=test_pattern`

**TABLE 27-3** `gfbtest` Command-Line Syntax

Argument	Description
<code>dev=device_name</code>	<code>device_name</code> is the relative path name of the device being tested with respect to <code>/dev/fbs</code> . The default is <code>gfb0</code> .

**TABLE 27-3** gfbtest Command-Line Syntax

Argument	Description
<b>S</b> = <i>subtest_number</i>	<p><i>subtest_number</i> is the test number of the subtest to be run. Select from the subtests below. You can run multiple subtests by adding the subtest numbers together. For example, <i>n=0x3</i> runs both test 1 and test 2; <i>n=0x180</i> runs both test <i>0x080</i> and test <i>0x0100</i>. You do not need the leading zeros.</p> <ul style="list-style-type: none"> <li>• <i>n=0x00001</i> Video Memory 3DRAM</li> <li>• <i>n=0x00002</i> 3DRAM Logic</li> <li>• <i>n=0x00004</i> X Chip</li> <li>• <i>n=0x00008</i> Cafe</li> <li>• <i>n=0x00010</i> Texture Memory SDRAM</li> <li>• <i>n=0x00020</i> Rendering Pipeline</li> <li>• <i>n=0x00040</i> Texturing Pipeline</li> <li>• <i>n=0x00080</i> Fragment Processor</li> <li>• <i>n=0x00100</i> Lighting</li> <li>• <i>n=0x00200</i> Super Sampling</li> <li>• <i>n=0x00400</i> Mesh Buffer</li> <li>• <i>n=0x00800</i> Clip Trap</li> <li>• <i>n= 0x01000</i> Context Switching</li> <li>• <i>n=0x02000</i> Mixed Primitives</li> <li>• <i>n=0x04000</i> Picking</li> <li>• <i>n=0x08000</i> Stereo</li> </ul>
<b>F</b> =# <i>_of_subtest_loops</i>	The number of times to repeat each subtest. The default is 1.
<b>B</b> =# <i>_of_test_loops</i>	The number of times to repeat a test loop before passing. The default is 1.
<b>P</b> = <i>test_pattern</i>	The test pattern number. The default is <i>r</i> , for random patterns. You may also choose <b>0</b> for 0x0000000, <b>3</b> for 0x3333333, <b>5</b> for 0x5555555, or <b>9</b> for 0x9999999.

**Note** – If looping on a test, the verbose mode is disabled. Separate multiple parameters with commas. Example: `gfbtest -o dev=gfb1,S=0x9,B=2`

**Note** – 64-bit tests are located in the `sparcv9` subdirectory: `/opt/SUNWvts/bin/sparcv9/testname`. If the test is not present in this directory, then it may only be available as a 32-bit test. For more information refer to “32-Bit and 64-Bit Tests” on page 3.

---

**Note** – Errors returned by `gfbtest` are nonspecific: It is not possible to determine which component caused a failure. In all error conditions, the field replaceable unit (FRU) is the entire GFB.

---



## PGX32 Frame Buffer Test (`gfxtest`)

The `gfxtest` tests the PGX32 frame buffer card by performing video memory, RAMDAC, and acceleration subtests as described in TABLE 28-1.

TABLE 28-1 `gfxtest` Subtests

Subtest	Description
Video Memory	Thoroughly tests the 8-MB of video frame buffer memory using random and sequential 8-bit and 32-bit accesses. One pass of this subtest takes a while to complete.
RAMDAC	Tests the internal circuitry of the video output. The RAMDAC CLUT (color Lookup table) is tested using simple/read-write patterns to determine if there are any bad bits in the CLUT. This test only checks the functionality of the digital portion of the RAMDAC. This subtest does not ensure that the analog video signals are produced properly. This subtest takes less than one second to complete.
Acceleration	Thoroughly tests the hardware graphics acceleration of the PGX32 card. It re-initializes the engine, tests primitives such as lines, rectangles, bitblts, tiled and stippled rectangles with on-screen and off-screen memory. The Acceleration test also tests the ALU. This test takes less than one second to complete.

### `gfxtest` Test Requirements



**Caution** – DO NOT run any other application or screen saver program that uses the PGX32 frame buffer card. These programs cause SunVTS to return incorrect errors.

Disable all screen savers before testing any graphics device. Type `xset s off` at a UNIX prompt to disable the Solaris screen saver.

Due to the nature of graphics tests, reading from or writing to the frame buffer during graphics tests will disturb user operation.

Do not run `gfxtest` from the SunVTS TTY mode when you are at the console.

For full instructions on testing frame buffers, see “Testing Frame Buffers” on page 8.


---

**Note** – To start SunVTS with `vtsui`, but without `vtsk`, you may need to add the host name to `xhost` as: `xhost + hostname`.

---

## gfxtest Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.

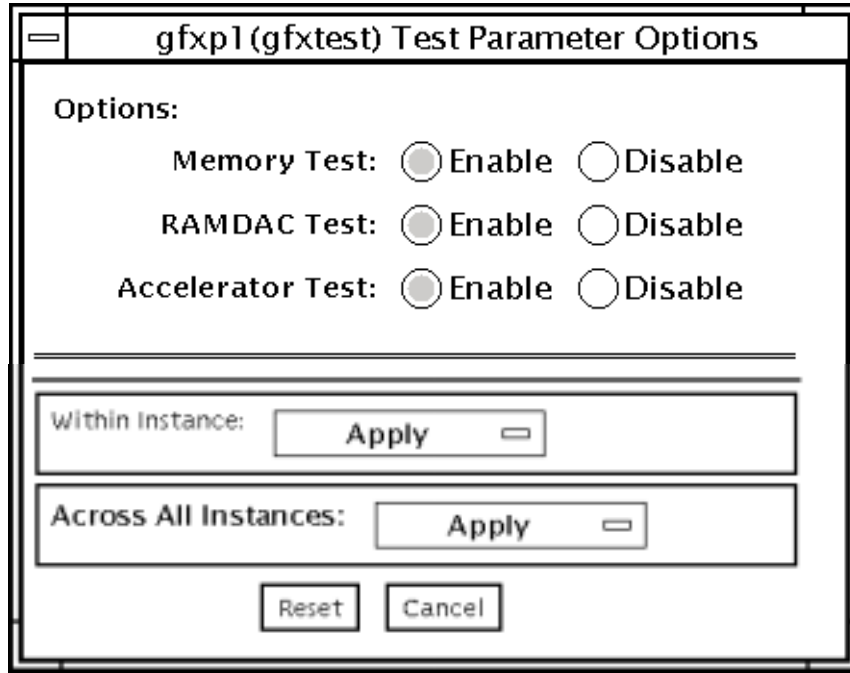

**FIGURE 28-1** gfxtest Test Parameter Options Dialog Box

**TABLE 28-2** gfxtest Options

Options	Description
Memory Test	Enables or disables the Video Memory subtest. The default is enabled.
RAMDAC Test	Enables or disables the RAMDAC subtest The default is enabled.
Acceleration Test	Enables or disables the Acceleration subtest. The default is enabled.

---

# gfxtest Test Modes

TABLE 28-3 `gfxtest` Supported Test Modes

Test Mode	Description
Functional (Offline)	Runs the full set of tests.

---

# gfxtest Command-Line Syntax

```
/opt/SUNWvts/bin/gfxtest standard_arguments -o dev=device_name,mem=no_of_passes,ramdac=no_of_passes,accel=no_of_passes
```

TABLE 28-4 `gfxtest` Command-Line Syntax

Argument	Description
<code>dev=device_name</code>	<code>device_name</code> is the relative path name of the device being tested with respect to <code>/dev/fbs</code> , for example, <code>/dev/fbs/gfxp0</code> .
<code>mem=no_of_passes</code>	Specifies the number of times to run the Video Memory subtest. The default is one time.
<code>ramdac=no_of_passes</code>	Specifies the number of times to run the RAMDAC subtest. The default is one time.
<code>accel=no_of_passes</code>	Specifies the number of times to run the Acceleration subtest. The default is one time.

---

**Note** – 64-bit tests are located in the `sparcv9` subdirectory: `/opt/SUNWvts/bin/sparcv9/testname`. If a test is not present in this directory, then it may only be available as a 32-bit test. For more information refer to “32-Bit and 64-Bit Tests” on page 3.

---

---

**Note** – Errors returned by `gfxtest` are nonspecific. It is not possible to determine which component caused a failure. In all error conditions, the field replaceable unit (FRU) is the entire PGX32 frame buffer card.

---



## I2C Bus Test (`i2ctest`)

---

`i2ctest` checks each I2C bus for the status of its devices. `i2ctest` then determines any device faults based on the information it collects, and displays a report. `i2ctest` also detects and reports hung I2C bus segments.

This test is scalable.

---

**Note** – Only the 64-bit version of this test is supported.

---

---

### `i2ctest` Test Requirements

- You must have the `SUNWpiclh`, `SUNWpiclr`, `SUNWpiclu`, and `SUNWpiclx` `picl` packages installed correctly before running the test.
- Verify that the `picld` daemon is running by typing the following:

```
# ps -ef |grep picld
root 100077      1  0   Sep 11 ?           23:40 /usr/lib/picl/picld
```

If the daemon is not running, run the `start` script to restart it by typing the following:

```
# /etc/init.d/picld start
```

---

## i2ctest Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.

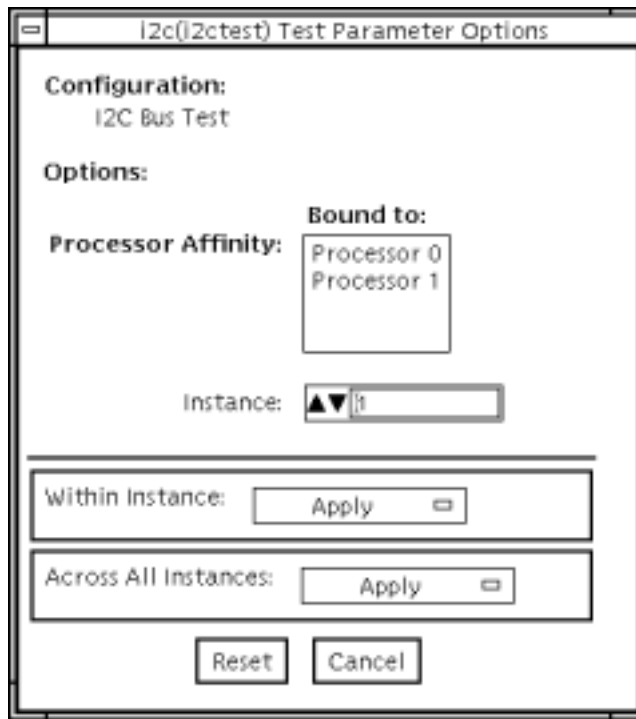


FIGURE 29-1 i2ctest Test Parameter Options Dialog Box

---

## i2ctest Test Modes

**TABLE 29-1** i2ctest Supported Test Modes

Test Mode	Description
Connection	Runs the full test.
Functional (Offline)	Runs the full test.

---

## i2ctest Command-Line Syntax

```
/opt/SUNWvts/bin/sparcv9/i2ctest standard_arguments  
-o dev=raw_device_name
```

**TABLE 29-2** i2ctest Command-Line Syntax

Argument	Description
<i>dev=raw_device_name</i>	Specifies the name of the raw device to test.



## Expert3D Frame Buffer Test (ifbtest)

---

`ifbtest` verifies the functionality of the Expert3D frame buffer.

`ifbtest` can detect and adapt to many video modes of the Expert3D frame buffer. All tests can run at a resolution of 1024x768 or higher.

You can interrupt `ifbtest` using Control-C.

Test accuracy is checked using direct image comparison against compressed images. Failed pixel locations are printed as error messages.



---

**Caution** – Do not run any other application or screen saver program that uses the Expert3D accelerator port while running `ifbtest`. This combination causes SunVTS to return incorrect errors.

---

---

### `ifbtest` Test Requirements

Disable all screen savers before testing any graphics device. To disable the Solaris screen saver, type the following at a UNIX prompt:

```
# xset s off
```

To turn Power Management off, type the following at a UNIX prompt:

```
# xset -dpms
```

The display resolution must be 1024x768 or higher (the standard resolution). To change resolution, go to a UNIX prompt and type:

```
# fbconfig -res 1280x1024x76
```

For full instructions on testing frame buffers, see “Testing Frame Buffers” on page 8.

## Preparation for `ifbtest`

You should complete a few steps in advance to ensure that `ifbtest` runs as smoothly as possible.

If you are running `ifbtest` in a window system (such as CDE):

- Turn Power Management off, if it is enabled. The following is an alternate way to turn Power Management off. Change `allowFBPM=1` to `allowFBPM=0` in `/platform/sun4u/kernal/drv/ifb.conf` file.
- Make sure that no other program is running that might modify the screen during the test.
- Make sure you have permission to lock the X server. `ifbtest` is designed to lock the X server during testing to prevent screen changes.
- The CDE login window should not be displayed during testing.
- Check that the window system is only running on one Expert3D frame buffer.

If you are not running `ifbtest` in a window system:

- Turn Power Management off, if it is enabled. The following is an alternate way to turn Power Management off. Change `allowFBPM=1` to `allowFBPM=0` in `/platform/sun4u/kernal/drv/ifb.conf` file.
- Make sure that no other program is running that might modify the screen during the test.
- Make sure the Expert3D frame buffer being tested is not the console device. Console messages may modify the screen.

---

# ifbtest Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.

By default, all `ifbtest` options are enabled.

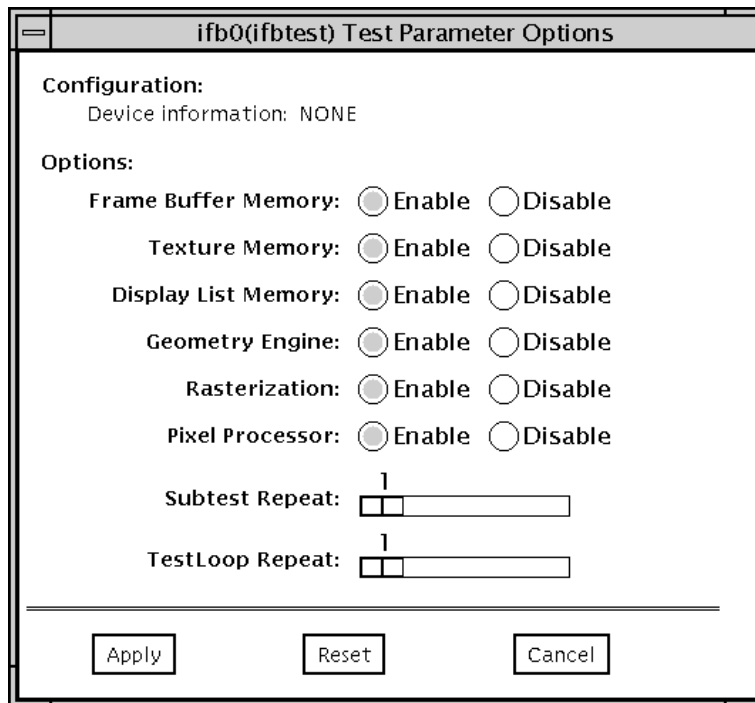


FIGURE 30-1 `ifbtest` Test Parameter Options Dialog Box

**TABLE 30-1** ifbtest Options

<b>ifbtest Options</b>	<b>Description</b>
Frame Buffer Memory test	<p>Thoroughly tests the Expert3D video memory by using read and write requests. Tests for shorts or failed connections on the data bus by writing the following values to every address:</p> <ul style="list-style-type: none"> <li>• 0xFFFFFFFF</li> <li>• 0xFFFF0000</li> <li>• 0x0000FFFF</li> <li>• 0xFF00FF00</li> <li>• 0x00FF00FF</li> <li>• 0xF0F0F0F0</li> <li>• 0x0F0F0F0F</li> <li>• 0xCCCCCCCC</li> <li>• 0x33333333</li> <li>• 0xAAAAAAAA</li> <li>• 0x55555555</li> </ul> <p>Tests for shorts or failed connections on the address bus by writing the offset of each memory location to each location and reading them back. This may also catch speed-related problems due to the volume of read/writes.</p> <p>Errors in the test are reported as an error in a particular address, not attributed to a specific chip. To help distinguish bit-related errors, the errors are summarized to list which bits had at least one error in the test.</p> <p>This test shows on the screen as random pixels.</p>
Texture Memory test	<p>This test is identical in process to the frame buffer memory test (above). Since this test produces no visible effect, rectangles are drawn in rows across the screen to show progress.</p>
Display List Memory test	<p>This test is identical in process to the frame buffer memory and texture memory tests (above), and is applied to direct burst memory.</p> <p>This test takes little time and no progress is displayed.</p>
Geometry Engine test	<p>Loads diagnostic microcode into the geometry engine and confirms that the processor operates correctly. This is a pass/fail test.</p> <p>This test takes little time and no progress is displayed.</p>



**TABLE 30-1** ifbtest Options

<code>ifbtest</code> Options	Description
Rasterization test	<p>Renders many primitives with minimal fragment processing, to test the rasterization of the primitives.</p> <p>The primitives used are:</p> <ul style="list-style-type: none"><li>• Dots</li><li>• Anti-aliased dots</li><li>• Lines using all for line-drawing primitives</li><li>• Anti-aliased lines using all for line-drawing primitives</li><li>• Triangles, Quads, and Polygons in point, line, and fill modes</li><li>• Rectangles</li></ul> <p>This tests for the following rasterization attributes:</p> <ul style="list-style-type: none"><li>• pixel coverage</li><li>• constant value registers for color, Z, and stencil</li><li>• interpolation of color, Z, and texture coordinates along lines and spans in polygons</li><li>• texture map sampling</li></ul> <p>Resulting images are compared against stored images. Errors indicate which operation type and value was being tested, and the coordinate of the failed pixel.</p>

**TABLE 30-1** ifbtest Options

<code>ifbtest</code> Options	Description
Pixel Processor test	<p>Tries the various pixel processing operators using a variety of fragment values. This tests the following fragment processing operations:</p> <ul style="list-style-type: none"><li>• Depth Buffering</li><li>• Blending</li><li>• Alpha Test</li><li>• Color Test</li><li>• Color Clamp</li><li>• Logic Operations</li><li>• Color Matrix and Bias</li><li>• Color Table</li><li>• Control Planes</li><li>• Fast Clear</li><li>• Stencil</li><li>• Scissor Clipping</li><li>• Desktop Clipping</li><li>• Mask Clipping</li><li>• Write Masks</li><li>• Window Origin</li><li>• Fog</li><li>• Pixel Texture</li><li>• Accumulation Buffer</li><li>• Pixel Buffers</li></ul> <p>Resulting images are compared against stored images. Errors indicate which operation type and value was being tested and the coordinate of the failed pixel.</p>

---

# ifbtest Test Modes

Due to the nature of graphic tests, reading data from, or writing data to the frame buffer during graphic tests will disturb user operation. For this reason, *ifbtest* is only available in Offline Functional test mode.

TABLE 30-2 *ifbtest* Supported Test Modes

Test Mode	Description
Functional (Offline)	Runs the full set of tests.

---

# ifbtest Command-Line Syntax

*/opt/SUNWvts/bin/ifbtest standard\_arguments -o dev=device\_name, fbmem=E(nable)/D(isable), texmem=E/D, dlmem=E/D, geomeng=E/D, rasterization=E/D, pixelproc=E/D, subtest\_repeat=number, test\_repeat=number*

TABLE 30-3 *ifbtest* Command-Line Syntax

Argument	Description
<i>dev=device_name</i>	<i>device_name</i> is the relative path name of the device being tested with respect to <i>/dev/£bs</i> . There is no default.
<i>fbmem=E/D</i>	Enables or disables the frame buffer memory test.
<i>texmem=E/D</i>	Enables or disables the texture memory test.
<i>dlmem=E/D</i>	Enables or disables the display list memory test.
<i>geomeng=E/D</i>	Enables or disables the geometry engine test.
<i>rasterization=E/D</i>	Enables or disables the rasterization test.
<i>pixelproc=E/D</i>	Enables or disables the pixel processing test.
<i>subtest_repeat=number</i>	Defines the number of times to repeat each subtest. The default is 1.
<i>test_repeat=number</i>	Defines the number of times to repeat a test loop before passing. The default is 1.

---

**Note** – 64-bit tests are located in the `sparcv9` subdirectory:  
`/opt/SUNWvts/bin/sparcv9/testname`. If the test is not present in this directory,  
then it may only be available as a 32-bit test. For more information refer to “32-Bit  
and 64-Bit Tests” on page 3.

---

## Intelligent Fibre Channel Processor Test (`ifptest`)

---

`ifptest` tests the functionality of the PCI FC-AL card when there are no devices attached to the loop. The driver checks for devices on the fibre loop. If devices are detected the driver blocks any diagnostic commands.

---

**Note** – When devices are attached to the loop, do not run `ifptest`. Instead, run `disktest` tests on the individual devices. This will test the whole subsystem including the FC-AL controller.

---

`ifptest` uses the “mailbox” interface to the card. This interface allows certain firmware operations to be performed that normally would not be available to the application layer.

---

### `ifptest` Subtests

Four subtests are run in online and functional modes:

- Mailbox Loopback test

Loads a series of registers into the input mailboxes on the card and then reads the output mailboxes and compares results. This verifies that the system side of the card is operating correctly, and that the internal data paths are okay.

- Firmware revision check

Reads the firmware revision from the firmware and compares it against a revision loaded by the driver.

- Checksum firmware test

Runs an internal checksum test on the installed firmware. This verifies that the RISC RAM on the card is fully functional and that the installed firmware is still intact. This test also serves as a quick RAM check of the RISC RAM.

- Dump revision levels

Extracts the hardware and firmware revision levels of different submodules on the card.

---

## ifptest Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.

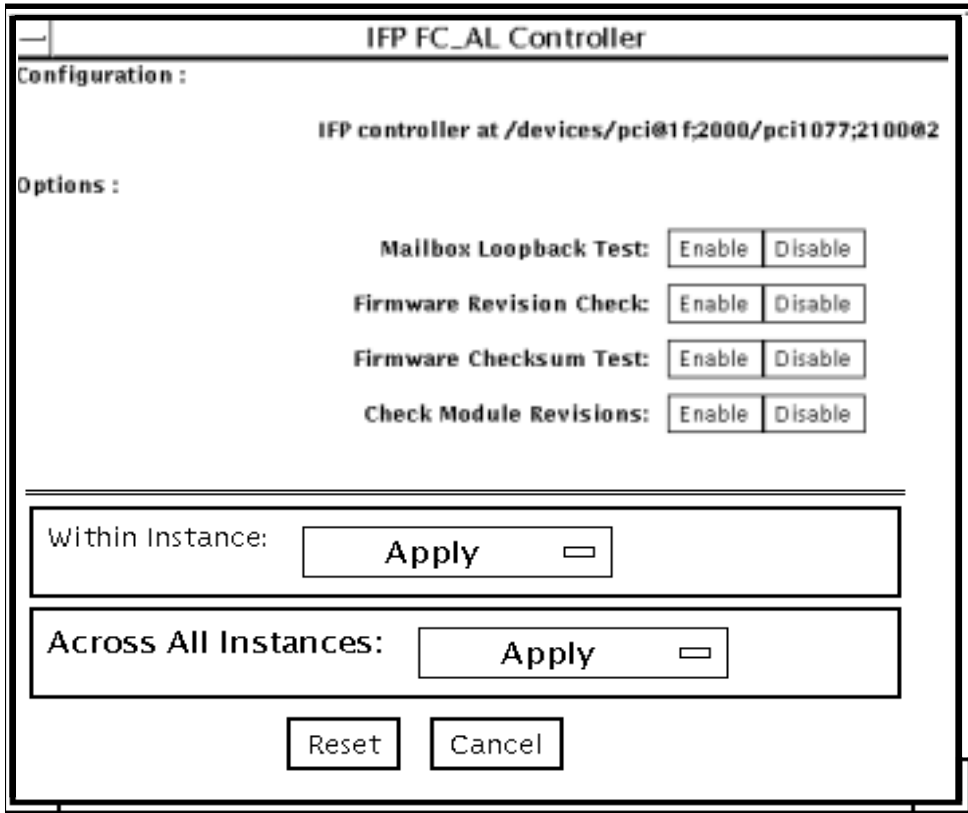


FIGURE 31-1 ifptest Test Parameter Options Dialog Box

TABLE 31-1 ifptest Options

ifptest Options	Description
Mailbox Loopback test	Enables or disables the mailbox loopback command. This test writes data patterns into the mailboxes and then reads them back from the output mailboxes and verifies the data is correct.

**TABLE 31-1** `ifptest` Options

<code>ifptest</code> Options	Description
Firmware revision check	Enables or disables the firmware revision check command. This test extracts the firmware revision from the RISC firmware code and verifies against expected values.
Firmware checksum test	Enables or disables the firmware checksum command. This command instructs the interface's RISC processor to calculate the checksum on the current microcode and then compare it against the checksum that was loaded in with the microcode.
Check Module Revisions	Enables or disables the firmware check module command. This command returns the revision level of several submodules on the interface card. Although this test is executed when enabled, the module revision levels are only printed out in VERBOSE mode.

## `ifptest` Test Modes

**TABLE 31-2** `ifptest` Supported Test Modes

Test Mode	Description
Connection	Performs only an open/close operation.
Functional (Offline)	Runs the full set of mailbox tests.

**Note** – Connection test mode will only open the controller to verify that the path is still viable.



---

# ifptest Command-Line Syntax

```
/opt/SUNWvts/bin/ifptest standard_arguments  
-o dev=device name,mbox=Enable | Disable,fwrevcheck=Enable | Disable,  
checksum=Enable | Disable,modrevcheck=Enable | Disable
```

TABLE 31-3 ifptest Command-Line Syntax

Argument	Description
dev=	The name of the device to test.
mbox= <i>Enable   Disable</i>	Enables or disables the mailbox loopback command. This test writes data patterns into the mailboxes and then reads them back from the output mailboxes and verifies the data is correct.
fwrevcheck= <i>Enable   Disable</i>	Enables or disables the firmware revision check command. This test extracts the firmware revision from the RISC firmware code and verifies against expected values.
checksum= <i>Enable   Disable</i>	Enables or disables the firmware checksum command. This command instructs the interface's RISC processor to calculate the checksum on the current microcode and then compare it against the checksum that was loaded in with the microcode.
modrevcheck= <i>Enable   Disable</i>	Enables or disables the firmware checksum command. This command returns the revision level of several sub-modules on the interface card. Although this test is executed when enabled, the module revision levels are only printed out in VERBOSE mode.

---

**Note** – 64-bit tests are located in the `sparcv9` subdirectory:

`/opt/SUNWvts/bin/sparcv9/testname`. If a test is not present in this directory, then it may only be available as a 32-bit test. For more information refer to “32-Bit and 64-Bit Tests” on page 3.

---



## Integer Unit Test (`iutest`)

---

The Integer Unit Test (`iutest`) tests the resident integer unit in Sun SPARC CPUs. It exercises all of the register windows present in the Integer Unit of the CPU. The successful completion of the test implies that all of the register windows are functioning properly and failure implies a faulty register.

---

### `iutest` Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.

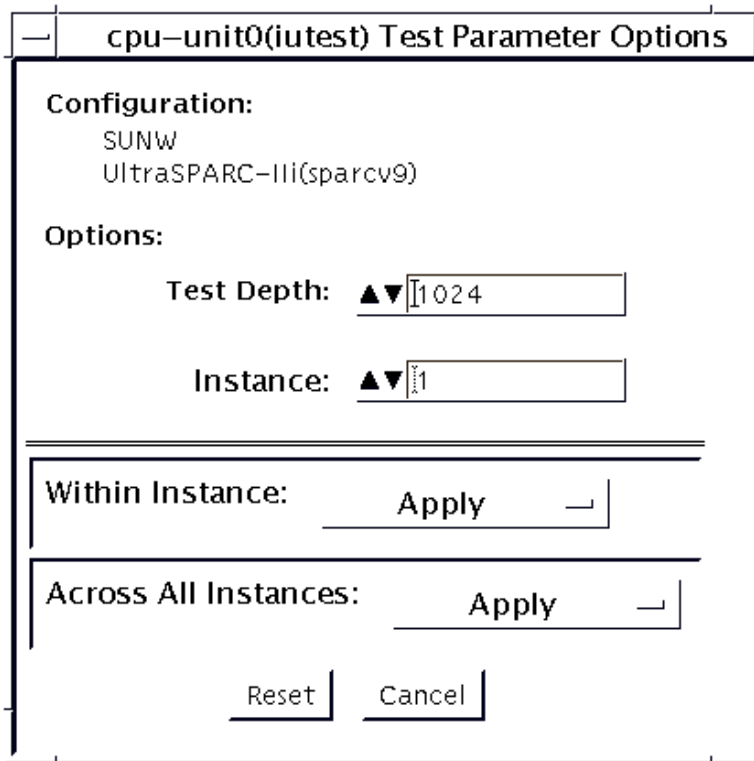


FIGURE 32-1 iutest Test Parameter Options Dialog Box

For the test options in the `iutest` Test Parameter Options dialog box, Test Depth is the only option you need to specify. The default, maximum and minimum values of the Test Depth are 1024, 65536, and 144 respectively. It is recommended to specify this value higher than the default value because this value sets the depth of the test. Setting the Test Depth value higher than the default, ensures that the test goes through all the register windows at least more than once.

---

# iutest Test Modes

TABLE 32-1 iutest Supported Test Modes

Test Mode	Description
Connection	Displays the type of CPU implementation (for example, <i>sparcv7</i> or <i>sparcv9</i> , etc.), the operating frequency, and CPU status (online, offline, etc.).
Functional (Offline)	Verifies all of the register windows and returns the appropriate error message if there is a faulty register. Otherwise, displays a successful test message.

---

# iutest Command-Line Syntax

```
/opt/SUNWvts/bin/iutest standard_arguments -o depth=val,dev=cpu-unitN
```

In the *iutest* command-line syntax, *val* is the value of the `Test_Depth` parameter option as described in the preceding *iutest* options section. *N* is the CPU unit number (0,1,2, etc.). The test behavior is unpredictable if options other than those described in this section are entered.

---

**Note** – 64-bit tests are located in the *sparcv9* subdirectory:

`/opt/SUNWvts/bin/sparcv9/testname`. If a test is not present in this directory, then it may only be available as a 32-bit test. For more information refer to “32-Bit and 64-Bit Tests” on page 3.

---



## Level 1 Data Cache Test (l1dcachetest)


---

`l1dcachetest` exercises the level1 Data cache in the CPU module of Sun systems. The test writes, reads, and verifies access of multiple virtual addresses. The virtual addresses are so chosen that they cause targeted hits and misses in the cache. The test dynamically determines the size and organization of the cache and tunes the test accordingly to be effective on the l1dcache.

---

### `l1dcachetest` Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.

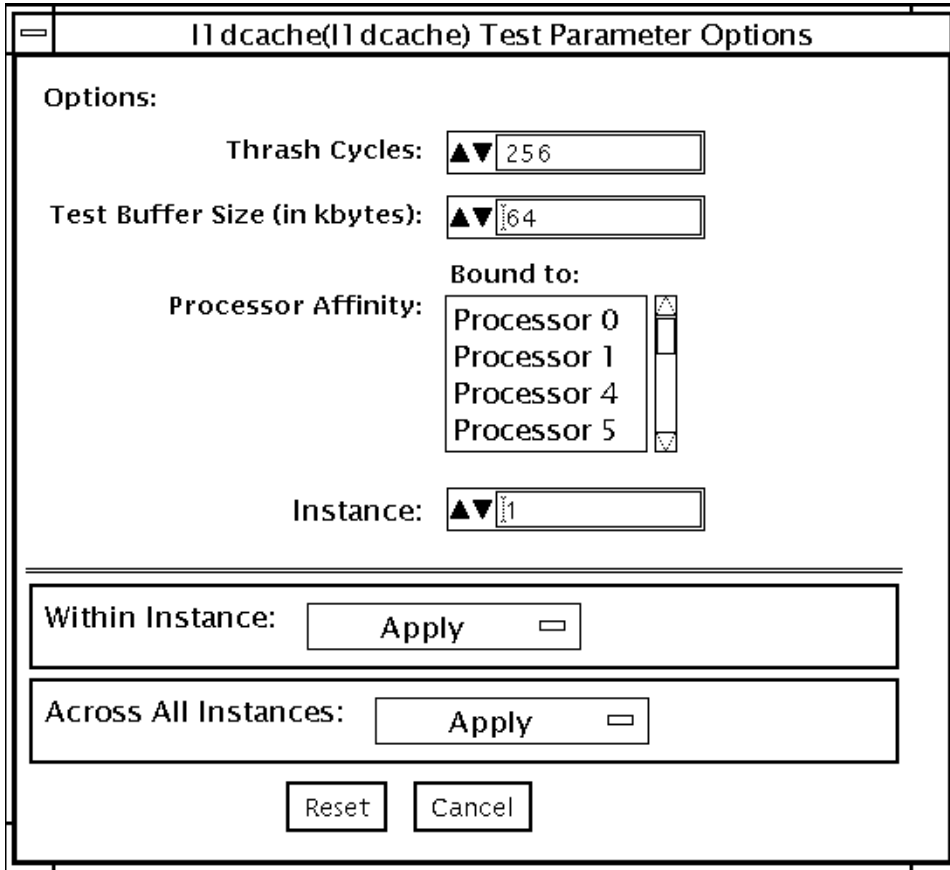

**FIGURE 33-1** l1dcachetest Test Parameter Options Dialog Box

**TABLE 33-1** l1dcachetest Options

Option	Description
Thrash Cycles	Specifies the number of thrashing cycles the test completes for the level1 cache on the system. Default value for Exclusive mode is 256.
Test Buffer Size	Sets the size of the buffer, in KBs, that the test allocates for testing. Default value is 64.

**Note** – The Test Buffer Size option will not be supported in a future release of SunVTS. The reason for this is that the test will dynamically determine the size of the cache and set the buffer size appropriately.



---

**Note** – The `l1dcachetest` is automatically bound to a processor. Users are advised to not use the Processor Affinity option for the `l1dcachetest`.

---

---

## l1dcachetest Test Modes

**TABLE 33-2** `l1dcachetest` Supported Test Modes

Test Mode	Description
Connection	Performs the Connection subtest.
Exclusive	Performs only the <code>l1dcachetest</code> (full test).

---

## l1dcachetest Command-Line Syntax

```
/opt/SUNWvts/bin/l1dcachetest standard_arguments -o [
[ dev=cpu-unitN ]
[ count=number ]
[ buffer=number ] ]
```

---

**Note** – The `l1dcachetest` is now per CPU, and *N* is the CPU number (0,1,2, etc.). Therefore, if the system has five CPUs (CPUs 1, 2, 5, 6, and 7), you can perform `l1dcachetest` on each CPU individually by specifying which CPU you want to verify when invoking the test. For example, if you want to perform `l1dcachetest` on CPU 7, you would enter the following:

```
/opt/SUNWvts/bin/l1dcachetest generic_options -o dev=cpu-unit7
```

---

64-bit tests are located in the `sparcv9` subdirectory: `/opt/SUNWvts/bin/sparcv9/testname`. If a test is not present in this directory, then it may only be available as a 32-bit test. For more information refer to “32-Bit and 64-Bit Tests” on page 3.

**TABLE 33-3** `l1dcachetest` Command-Line Syntax

Argument	Description
<code>dev=cpu-unitN</code>	Specifies the name of the device.
<code>count=number</code>	Specifies the number of thrashing cycles the test completes for the level1 cache on the system. Default value for Offline mode is 256.
<code>buffer=number</code>	Sets the size of the buffer, in KBs, that the test allocates for testing. Default value is 64.

## Level 2 Cache Test (`l2cachetest`)

---

`l2cachetest` exercises the level2 cache in the CPU module of Sun systems. In most CPUs, the level2 cache is also the external cache, but in some cases the level2 cache is on the chip. The test writes, reads, and verifies access of multiple virtual addresses. The virtual addresses are chosen so that they cause targeted hits and misses in the level2 cache. The test dynamically determines the size and organization of the cache and tunes the test accordingly to be effective on the `l2cache`.

---

**Note** – The `l2cachetest` was previously named `l2dcachetest`.

---

---

### `l2cachetest` Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.

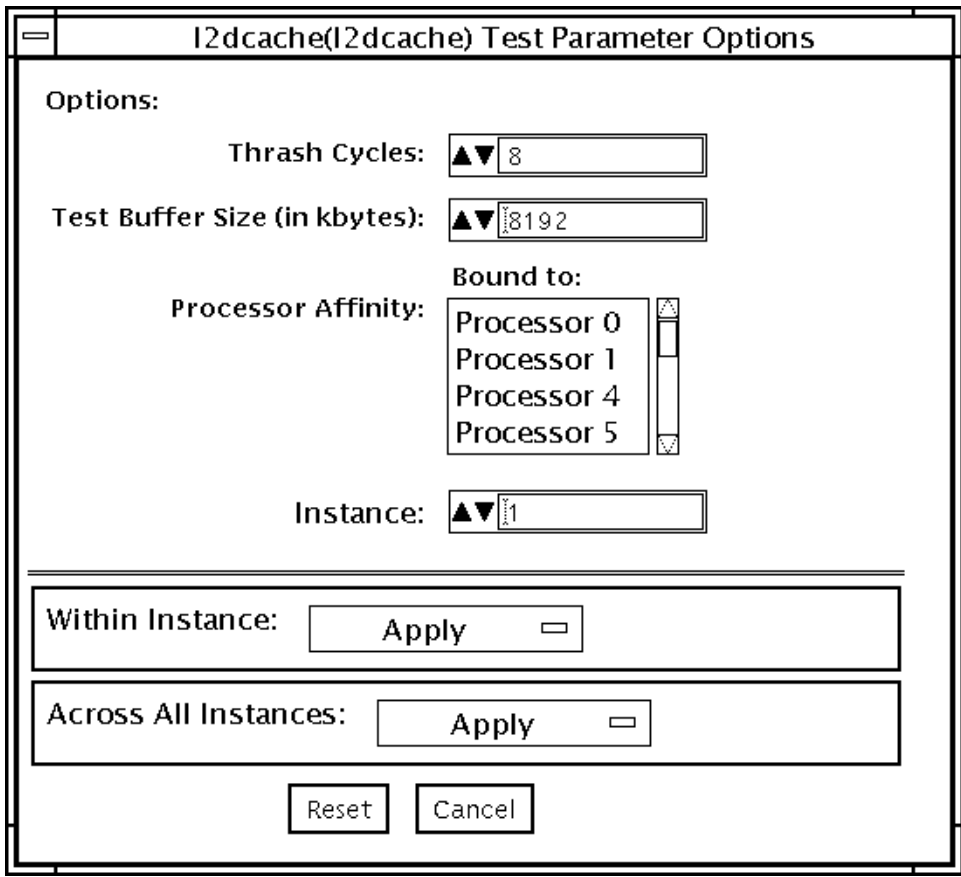


FIGURE 34-1 l2cachetest Test Parameter Options Dialog Box

TABLE 34-1 l2cachetest Options

Option	Description
Thrash Cycles	Specifies the number of thrashing cycles the test completes for the level2 cache on the system. Default value for Exclusive mode is 8.
Test Buffer Size	Sets the size of the buffer, in KBs, that the test allocates for testing. Default value is 8192.

**Note** – The Test Buffer Size option will not be supported in a future release of SunVTS. The reason for this is that the test will dynamically determine the size of the cache and set the buffer size appropriately.

---

**Note** – The `l2cachetest` is automatically bound to a processor. Users are advised to not use the Processor Affinity option for the `l2cachetest`.

---

---

## l2cachetest Test Modes

**TABLE 34-2** l2cachetest Supported Test Modes

Test Mode	Description
Connection	Performs the Connection subtest.
Exclusive	Performs only the l2cachetest (full test).

---

## l2cachetest Command-Line Syntax

```
/opt/SUNWvts/bin/l2cachetest -generic_options -o  
[ dev=cpu-unitN ]  
[ count=number ]  
[ buffer=number ] ]
```

---

**Note** – The `l2cachetest` is now per CPU, and *N* is the CPU number (0,1,2, etc.). Therefore, if the system has five CPUs (CPUs 1, 2, 5, 6, and 7), you can perform `l2cachetest` on each CPU individually by specifying which CPU you want to verify when invoking the test. For example, if you want to perform `l2cachetest` on CPU 7, you would enter the following:

```
/opt/SUNWvts/bin/l2cachetest -generic_options -o dev=cpu-unit7
```

---

**TABLE 34-3** l2cachetest Command-Line Syntax

Argument	Description
<code>dev=cpu-unitN</code>	Specifies the name of the device.
<code>count=number</code>	Specifies the number of thrashing cycles the test completes for the level2 cache on the system. Default value for Offline mode is 8.
<code>buffer=number</code>	Sets the size of the buffer, in KBs, that the test allocates for testing. Default value is 8192.



## LOMlite Alarm Test (lomlitetest)

---

`lomlitetest` tests the functionality of LOMlite and LOMlite 2 system monitoring, alarms, and lights-out management (LOM) processors currently used in Netra™ T platforms. This test also tests the legacy TSalarms alarm card used in some Netra t 11xx systems. `lomlitetest` exercises the hardware and device drivers for the LOMlite, LOMlite 2, or TSalarms device, and tests the system and environmental monitoring functions of the device.

This test is not scalable.

---

**Note** – During offline functional testing, messages from the LOM processor are seen on the system console. This is normal and does not indicate a fault.

---

---

### `lomlitetest` Requirements

- The LOMlite or TSalarms device driver must be installed
- In the Netra t 11xx or Netra t 14xx platforms, the LOMlite or TSalarms plug-in card must be installed

---

# lomlitetest Subtests

**TABLE 35-1** lomlitetest Subtests

Subtest	Description
Connection subtest	Run for both LOMlite and TSalarms. Attempts to open the device nodes appropriate to the device being tested.
Passive Read subtest	Attempts to read the available data from the device being tested. Device data is read as follows:  All devices: Alarm state  LOMlite and LOMlite 2: <ul style="list-style-type: none"><li>• Fault LED state</li><li>• Power supply state</li><li>• Fans state</li><li>• EEPROM event log</li></ul> LOMlite 2 only: <ul style="list-style-type: none"><li>• Power supply voltages</li><li>• Enclosure and CPU temperatures</li></ul>
Active Alarms subtest	Reads, inverts, and re-reads each alarm state to ensure change took effect. Resets alarms to original state and checks that the state is correct. In the case of LOMlite and LOMlite 2 devices, reads the EEPROM event log and ensures that the expected events are recorded.
Active Fault LED subtest	Reads, inverts, rereads and resets the state of the fault indicator LED. Checks that the state changes are recorded in the EEPROM event log.

---

# lomlitetest Options

This test has no programmable options unless it is run on a multi-processor system. On single-processor systems, the appropriate subtests are automatically selected depending upon the test mode and the type of device detected or specified on the command line.



FIGURE 35-1 shows the options menu for a multi-processor system. To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.

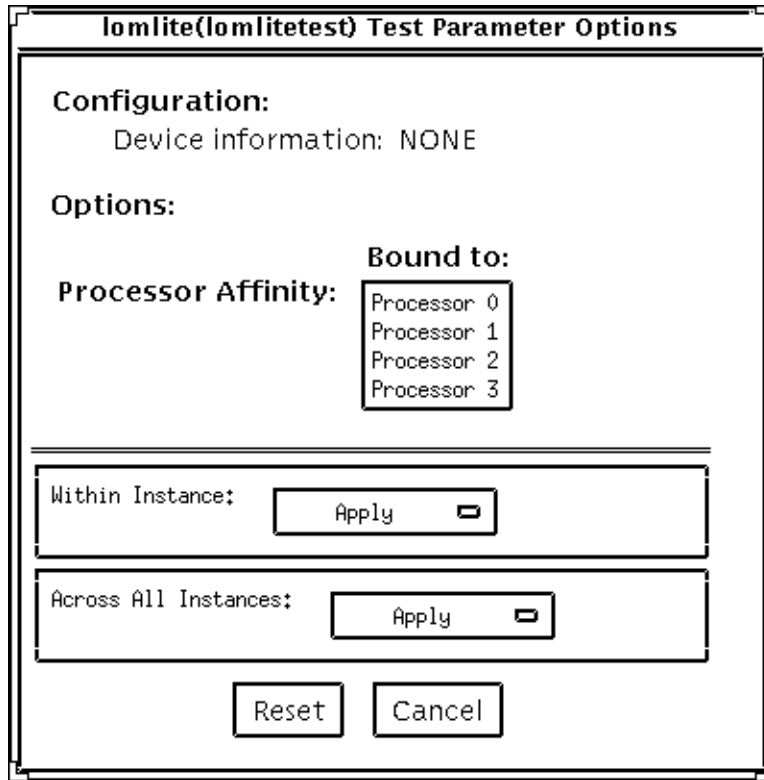


FIGURE 35-1 lomlitetest Test Parameter Options Dialog Box

---

# lomlitetest Test Modes

**TABLE 35-2** lomlitetest Supported Test Modes

Test Mode	Description
Connection	Runs the Connection subtest.
Functional (Offline)	Runs all subtests.

---

# lomlitetest Command-Line Syntax

```
/opt/SUNWvts/bin/lomlitetest standard_arguments  
-o dev=lomlite2 | lomlite | tsalarms
```

**TABLE 35-3** lomlitetest Command-Line Syntax

Argument	Description
dev= <i>lomlite2   lomlite   tsala rms</i>	Selects the type of device driver to test.

## M64 Video Board Test (`m64test`)

---

`m64test` tests the PCI-based M64 video board by performing the following subtests:

- Video Memory test
- RAMDAC test
- Accelerator Port test




---

**Caution** – *Do not* run any other application or screen saver program that uses the M64 video board while running `m64test`. Do not run Power Management™ software. These programs cause SunVTS to return incorrect errors.

---



---

**Note** – Disable all screen savers before testing any graphics device. Type `xset s off` at a UNIX prompt to disable the Solaris screen saver. Type `xset -dpms` (to turn off power management) or type `xset s noblank` (to turn off screen saver). Disable Power Management software if it is running.

---



---

**Note** – To start SunVTS with `vtmui`, but without `vtsk`, you must add the host name to `xhost` as: `xhost + hostname`.

---

For full instructions on testing frame buffers, see “Testing Frame Buffers” on page 8.

---

## `m64test` Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User’s Guide* for more details.

By default, all options are enabled except frame buffer locking.

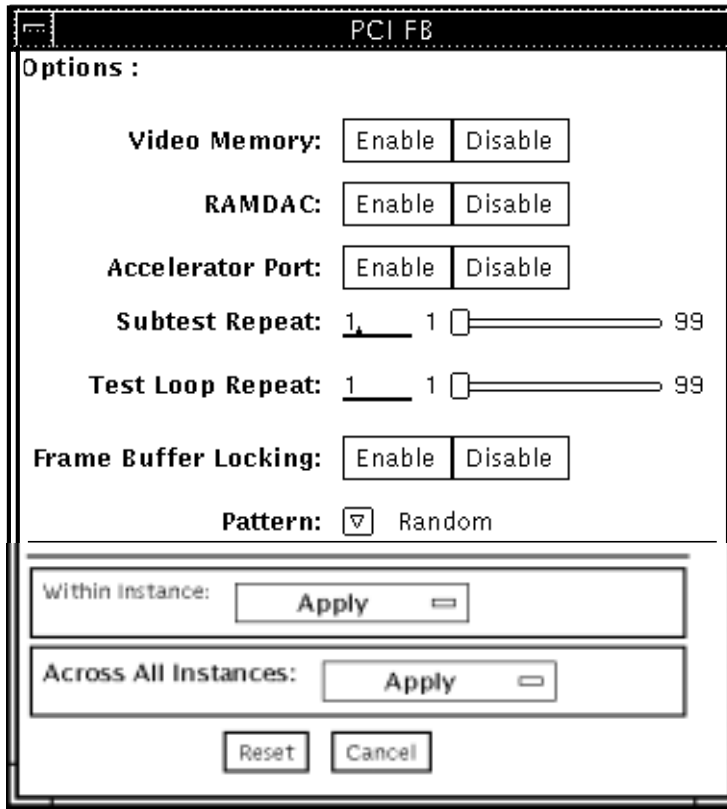


FIGURE 36-1 m64test Test Parameter Options Dialog Box

TABLE 36-1 m64test Options

m64test Options	Description
Video Memory test	Thoroughly tests the on-screen video memory (the memory part that is mapped on to the monitor) of the M64 video board in 8-bit, 16-bit, 32-bit, 64-bit, and 64 byte (block) modes. Entire on-screen video memory is tested by testing 512 bit blocks at a time (8x8 pixel block). Each block is tested in two passes. Each pass consists of a data write and read. In the first pass user specified data or random data is used and in the second pass one's complement of the data used in the first pass is used so that each on-screen video memory location (bit) is tested with a zero (electrical low state) and one (electrical high state).

**TABLE 36-1** m64test Options

m64test Options	Description
RAMDAC test	<p>Tests the RAMDAC in three phases. In the first phase the RAMDAC CLUT (Color LookUp Table) is tested using simple write/read patterns to determine if there are any bad bits in CLUT.</p> <p>The data patterns used are:</p> <ul style="list-style-type: none"><li>• Random data</li><li>• Complement of the random data (used as first data pattern)</li><li>• The data pattern 0101</li><li>• The data pattern 10101</li></ul> <p>In the second phase, four different patterns are drawn on the screen. Each pattern stays on the screen for approximately three seconds. The four patterns are listed below. For each pattern the signature is captured and compared with the signature obtained for the same pattern on a known good board. This test verifies that all the different data paths within the RAMDAC are functioning properly.</p> <p>Patterns drawn on screen:</p> <ul style="list-style-type: none"><li>• Red ramp with cursor at top-left corner of the screen</li><li>• Blue ramp with cursor at top-right corner of the screen</li><li>• Green ramp with cursor at bottom-left of the screen</li><li>• Grey ramp with cursor at bottom-right of the screen</li></ul> <p>In the last (third) phase of the RAMDAC test the Vertical Retrace Interrupt is tested for 300 interrupts.</p>
Accelerator Port test	<p>Tests all of the following:</p> <ul style="list-style-type: none"><li>• Data paths (sources: fixed color, host data, blit, fixed pattern)</li><li>• Arithmetic and logic unit (ALU)</li><li>• Color comparator</li><li>• Primitives (destinations: line, rectangle)</li><li>• Mono to color expansion logic</li></ul> <p>Primitives are drawn using a combination of different data paths (allowed), ALU functions, and color comparator functions. A checksum is generated for each data combination and is compared with the checksum generated for the same data combination on a known good board.</p>
Frame Buffer Locking	<p>This option is set to <i>disable</i> if the M64 is not the console device. When Sunvts GUI is brought up FB Locking is enabled by default if M64 is console device. If M64 is not console device, FB Locking is disabled by default.</p>

---

## m64test Test Modes

Due to the nature of graphics tests, reading from or writing to the frame buffer during graphics tests will disturb user operation. This test is only available in the Offline Functional test mode.

**TABLE 36-2** m64test Supported Test Modes

Test Mode	Description
Functional (Offline)	The m64test verifies the M64 video board.

---

## m64test Command-Line Syntax

```
/opt/SUNWvts/bin/m64test standard_arguments -o dev=device_name, S=
subtest_number,F=#_of_subtest_loops,B=#_of_test_loops,L=disable,P=test_pattern
```

**TABLE 36-3** m64test Command-Line Syntax

Argument	Description
<b>dev=device_name</b>	<i>device_name</i> is the relative path name of the device being tested with respect to /dev/fbs. The default is m640.
<b>S=subtest_number</b>	<i>subtest_number</i> is the test number of the subtest to be run. Select from the subtests below. You can run multiple subtests by adding the subtest numbers. For example, n=0x00003 runs both test 00001 and test 00002; n=0x00005 runs both test 0x00001 and test 0x00004. Note that you do not need the leading zeros. <ul style="list-style-type: none"><li>n-0x00001 VRAM</li><li>n-0x00002 RAMDAC</li><li>n-0x00004 Accelerator port test (Rendering Pipeline)</li></ul> More than one test can be selected by ORing subtest numbers. For example: n = 0x00005 means VRAM and Rendering Pipeline tests. A hex number must be preceded by 0x, decimal numbers are also acceptable.
<b>F=#_of_subtest_loops</b>	Specifies the number of times to repeat each subtest. The default is 1.

**TABLE 36-3** m64test Command-Line Syntax

---

Argument	Description
<b>B=#_of_test_loops</b>	Specifies the number of times to repeat a test loop before passing; default is 1.
<b>L=disable</b>	Disables the frame buffer lock. Disable the lock when the m64 is not the console or when the server is not running on the m64 under test.
<b>P=test_pattern</b>	Specifies the test pattern number. The default is r, for random patterns. You may also choose 0 for 0x0000000, 3 for 0x33333333, 5 for 0x55555555, or 9 for 0x99999999.

---

**Note** – 64-bit tests are located in the `sparcv9` subdirectory: `/opt/SUNWvts/bin/sparcv9/testname`. If a test is not present in this directory, then it may only be available as a 32-bit test. For more information refer to “32-Bit and 64-Bit Tests” on page 3.

---

**Note** – Errors returned by `m64test` are nonspecific. It is not possible to determine which component caused a failure. In all error conditions, the field replaceable unit (FRU) is the entire M64 video board.

---





## Cache Consistency Test (mpconstest)

---

`mpconstest` verifies that cache coherency is maintained in a multi-processor environment by creating contention for one or more cache lines.

Only the following cpus are supported:

- SuperSPARC [TI] (SS10/SS20/SS1000/SC2000)
- SuperSPARC II
- MicroSPARC II [TI] (50 MHz)
- MicroSPARC II (SS5)
- UltraSPARC I [TI] (143/167/200MHz)
- UltraSPARC II (250/333/336/360MHz)
- UltraSPARC III (500-600/750/900MHz)
- UltraSPARC III Cu

This test has several subtests, each designed to create a different kind of contention for cache lines. Each subtest uses different methods to test the shared memory buffer, the stride size, and any intermediate stores or loads.

When `mpconstest` starts, it creates a shared memory buffer. It then determines the number of CPUs on the system. For each CPU, the test takes the following steps:

1. Forks a thread and binds it to the CPU.
2. Runs the selected subtest in the thread.
3. Assigns each CPU an ID number from 1 to  $n$ . The CPU assigned ID 1 is considered the master.

The above steps are repeated for each subtest. Only one subtest can be selected at a time.

This test is not scalable.

---

## mpconstest Test Requirements

This test requires that the tested system has at least two CPUs. Otherwise, the test will not appear as an option.

`mpconstest` only runs on machines that support the v8plus standard of SPARC CPU hardware architecture. If the v8plus instructions are not supported, `mpconstest` will not appear on the Test Selection GUI. To determine whether a machine supports the v8plus standard, go to a command prompt on that machine and type:

```
% isalist  
sparcv9+vis sparcv9 sparcv8plus+vis sparcv8plus sparcv8
```

---

**Note** – This set of tests is very sensitive to activity on the machine and must be run exclusive of all other tests.

---

---

# mpconstest Subtests

TABLE 37-1 mpconstest subtests

Tests	Description
cons1	Each CPU writes to successive locations with a stride size of byte, half word, or full word. This subtest creates contention for a single cache line. No other loads or stores are performed between successive writes to shared memory.
cons2	Each CPU reads from a location that is <i>cachsize</i> bytes away from the last written location. Every read causes the previously written line to be written back. The test runs until the CPU has accessed all lines in the cache.
cons3	Similar to cons1 except that only one double word of each line is accessed. This creates simultaneous contention for multiple cache lines rather than a single line.
cons4	Similar to cons2, except that each CPU performs one store byte ( <i>storeb</i> ) and one load byte ( <i>loadb</i> ) operation between the detection of ID and the write of the next CPU ID. The target of the <i>storeb</i> and <i>loadb</i> is a unique byte in the line the CPU just read. This target is recognized as a different double word in the shared line <i>cachsize</i> bytes.
cons5	Similar to cons3 except that each CPU performs one <i>storeb</i> and one <i>loadb</i> operation between the detection of ID and the write of the next CPU ID. The target of the <i>storeb</i> is one unique byte of the next double word in the line that the CPU just read from the CPU ID. The <i>storeb</i> data is unique to each CPU and changes each time the address of the target line changes.
cons6	Similar to cons1 except that only one double word of each line is accessed. This creates simultaneous contention for multiple cache lines rather than a single line.
cons7	Similar to cons3 except that each CPU performs two <i>storeb</i> and one <i>loadh</i> operations between the detection of the CPU ID and the write of the next CPU ID. The targets of the <i>storebs</i> and <i>loadh</i> are two consecutive bytes of a double word in a shared line which is not a part of the shared memory buffer containing the IDs. The address of the target <i>storeb</i> and <i>loadh</i> instructions is held constant. The first <i>storeb</i> instruction gains ownership of the cache line, and the second <i>storeb</i> is performed as a write hit. This occurs at the same time other CPUs are reading and writing the shared line containing the IDs.

**TABLE 37-1** mpconstest subtests

Tests	Description
cons8	Similar to cons3 except that each CPU performs one <code>storeb</code> and one <code>loadb</code> operation between the detection of the CPU ID and the write of the next CPU ID. The target of the <code>storeb</code> and <code>loadb</code> is one unique byte of a double word of a private (unshared) line whose line number is identical to the line number containing the IDs. The <code>storeb</code> data is unique to each CPU and changes each time the address of the line containing the IDs changes.
cons9	Similar to cons8 except that the target of the <code>storeb</code> and <code>loadb</code> is one unique byte of a double word of a private line whose address does not change through the entire test.
cons10	Similar to cons9 except that two <code>storeb</code> and two <code>loadb</code> operations are performed to private (unshared) lines. The target of the second <code>storeb</code> is <code>cachesize</code> bytes away from the target of the first <code>storeb</code> . In a direct map cache, this results in a writeback of the unshared data written with the first <code>storeb</code> . The <code>loadb</code> operations are performed after the <code>storeb</code> in order to ensure that the writeback occurs correctly.
cons11	Similar to cons10 except that the target of the <code>storeb</code> and <code>loadb</code> operations is to a shared line rather than a private line.
cons12	Similar to cons7 except that two store double ( <code>stored</code> ) and load double ( <code>loadd</code> ) operations are used in place of the <code>storeb</code> and <code>loadb</code> operations. The target of the <code>stored</code> and <code>loadd</code> operations are two consecutive double words of a shared line. This test is designed to verify that the double word operations are performed correctly while the shared and owned state of the line containing the ID is changing.
cons13 through cons17	These tests are similar variations of intermediate operations, stride size etc, and do not involve any new interfaces.

---

## mpconstest Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.

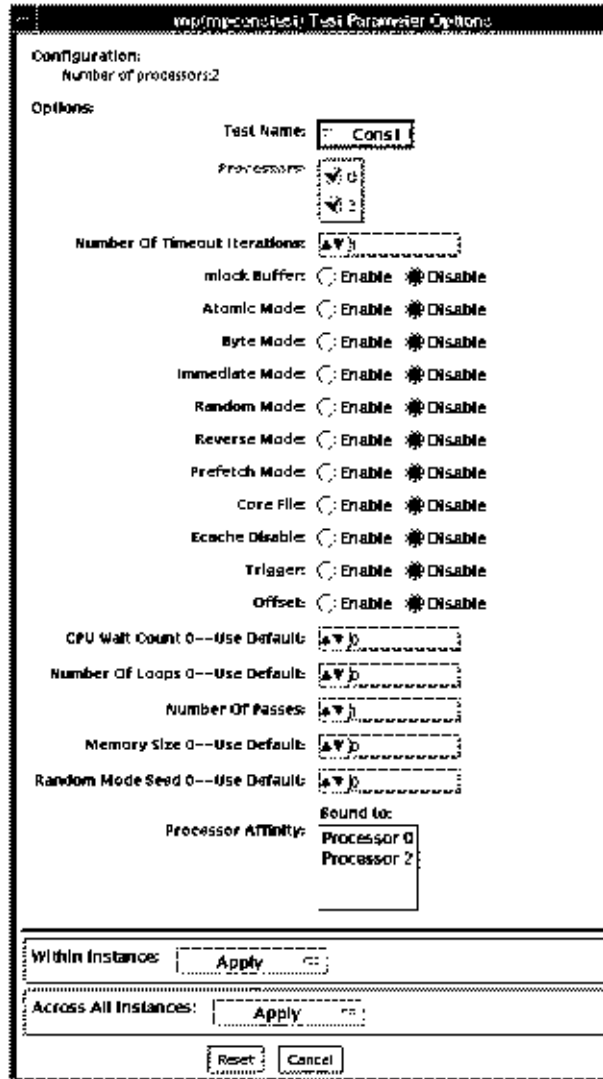


FIGURE 37-1 mpconctest Test Parameter Options Dialog Box

**TABLE 37-2** `mpconstest` Options

Option	Description
Test Name	Selects the subtest to be run.
Number of Timeout Iterations	Sets the number of times the test is allowed to time out. Default is 1. Note that each timeout occurs after a greater amount of elapsed time than the previous one. That is, if the first timeout occurs after $T$ units of time, the second occurs $2T$ after $T$ , and the third occurs $3T$ after $2T$ .
Lock Buffer	Locks Buffer in Memory. Default is not locked. Locking the buffer in memory will disable COMA (Cache Only Memory Architecture).
Atomic Mode	Uses the atomic instruction swap. Default is disabled.
Byte Mode	Uses byte instructions to load and store. Default is disabled.
Immediate Mode	Supports all subtests except <code>cons1</code> , <code>cons2</code> , <code>cons3</code> , <code>cons15</code> , <code>cons16</code> , and <code>cons17</code> .
Random Mode	Enables Random Mode.
Reverse Mode	Traverses the shared memory buffer in reverse. Default is disabled.
Prefetch Mode	Sets prefetch for read and write. Default is disabled.
CoreFile	Generates a core file. Exits in case of unexpected signals. Default is disabled.
Ecach Disable	Disables the external cache. Default is enabled.
Trigger	Sends an interrupt signal to all processors when one processor detects a failure. Default is disabled.
Offset	Specifies an offset of line size between successive writes. Default is disabled.
CPU Wait Count	Forces CPU 1 to write first if the number of CPUs is less than <i>cpucount</i> . Default is disabled. This option is not supported with subtests <code>cons15</code> , <code>cons16</code> , and <code>cons17</code> .
Number of Loops	Selects the number of test loops. Default is 5.
Number of Passes	Selects the number of passes. Increasing the number of passes increases system stress. Setting the number of passes to 0 will cause the test to run in an endless loop. Passes can only be set to 0 in command line mode, not from the GUI. Default is 1.
Memory Size	Selects the memory size, in Megabytes, for the shared buffer. Default is 128.
Random Mode Seed	Sets random number seed to a user specified value. Selects a random number seed by default.

---

# mpconstest Test Modes

TABLE 37-3 mpconstest Supported Test Modes

Test Mode	Description
Functional (Offline)	Runs the full test.

---

# mpconstest Command-Line Syntax

```
/opt/SUNWvts/bin/mpconstest standard_arguments  
-o tst=Cons1|Cons2,itm=number,lck,a,b,c,e,h,loops=number,memsize=  
memsize, wait=cputcount,passes=passes,r,t,x,y,i,q,seed=number
```

TABLE 37-4 mpconstest Command-Line Syntax

Argument	Description
<i>tst=</i> <i>Cons1 Cons2 Cons3 Cons4 Cons5 Cons6 Cons7 Cons8 Cons9 Cons10 Cons11 Cons12 Cons12 Cons13 Cons14 Cons15 Cons16 Cons17</i>	Range of choices available between cons1 through cons17 subtests.
<i>itm=number</i>	Sets the number of times the test is allowed to time out. Default is 1. Note that each timeout occurs after a greater amount of elapsed time than the previous one. That is, if the first timeout occurs after T units of time, the second occurs 2T after T, and the third occurs 3T after 2T.
<i>lck</i>	Locks Buffer in Memory. Default is not locked. Locking the buffer in memory will disable COMA (Cache Only Memory Architecture).
<i>a</i>	Enables atomic mode. Uses the atomic instruction swap
<i>b</i>	Enables byte mode. Uses byte instructions to load and store.
<i>c</i>	Generates a core file. Exits in case of unexpected signals.
<i>e</i>	Disables the external cache.

**TABLE 37-4** mpconstest Command-Line Syntax

Argument	Description
<b>h</b>	Prints usage message.
<b>loops=number</b>	Sets the number of loops for the iterations. Default is 5.
<b>memsize=memsize</b>	Selects the memory size, in Megabytes, for the shared buffer. Default is 128.
<b>wait=cpucount</b>	Forces CPU 1 to write first if the number of CPUs is less than <i>cpucount</i> .
<b>passes=passes</b>	Selects the number of passes. Increasing the number of passes increases system stress. Setting the number of passes to 0 will cause the test to run in an endless loop. Passes can only be set to 0 in command line mode, not from the GUI. Default is 1.
<b>r</b>	Enables Reverse mode. Traverses the shared memory buffer in reverse.
<b>t</b>	Enables Trigger. Sends an interrupt signal to all processors when one processor detects a failure.
<b>x</b>	Enables Prefetch. Sets prefetch for read and write.
<b>y</b>	Enables Offset. Specifies an offset of line size between successive writes.
<b>i</b>	Enables Immediate Mode. Not supported for subtests cons1, cons2, cons3, cons15, and cons 17.
<b>q</b>	Enables Random Mode.
<b>seed</b>	Sets a random number seed to the user specified value.



## Multiprocessor Test (mptest)

---

`mptest` verifies the functionality of multiprocessing hardware. This test allocates a page of virtual memory for the test—declaring the page shared—locks the page against swapping, and creates threads to each of the processors being tested. Up to 1024 processors can be tested by `mptest` in a CPU.

The *processor mask* argument can be used during test probing. The `mptest` verifies that the current processor mask matches the argument you entered in the command line or from the GUI/TTYUI.

---

### mptest Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.

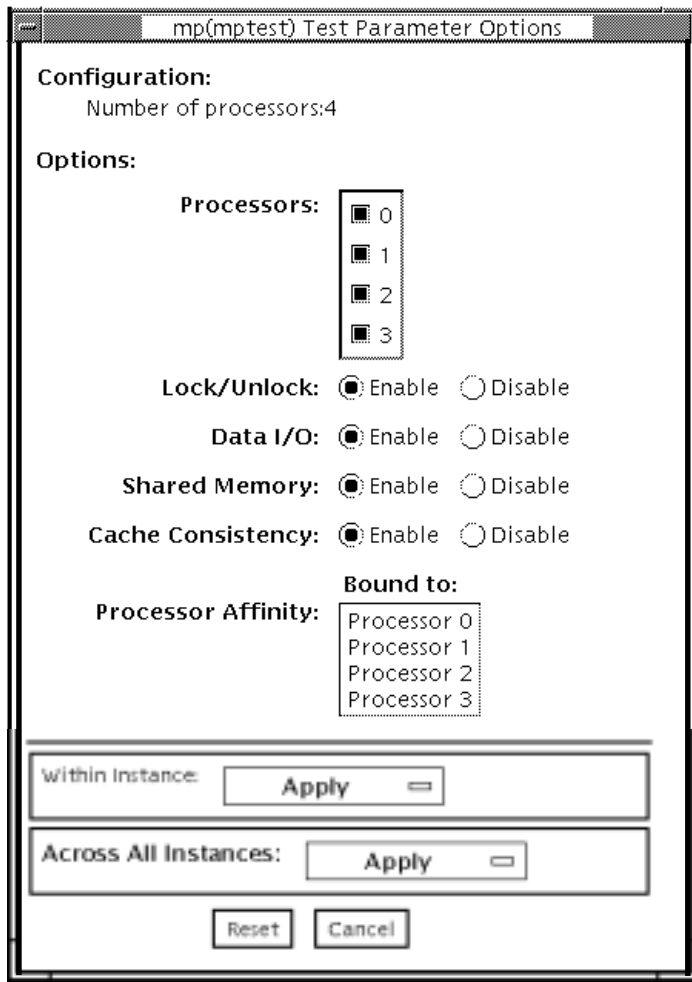


FIGURE 38-1 mptest Test Parameter Options Dialog Box

The processors that can be tested are listed in the Configuration area of the menu. You can enable or disable the multiprocessing test for individual processors on this menu.

The options listed in TABLE 38-1 can be run alone or concurrently with other options.

**TABLE 38-1** `mptest` Options

<code>mptest</code> Options	Description
Processors	<p>You can test specific processors by clicking Select on the check boxes to enable or disable each processor. A check mark means the processor is enabled for testing. The default setting is all processors enabled.</p> <p>Note: <code>mptest</code> requires at least two enabled processors to test multiprocessing systems.</p>
Lock/Unlock	<p>Tests the lock/unlock mechanism that guarantees exclusive access to a physical page to one processor. A thread is created at each of the processors. Each processor uses the SPARC atomic instruction <code>ldstub</code> to write to the same shared physical memory page. While one processor is attempting the write, the other processors should be free spinning for their turn. As each processor acquires the lock, it writes an ordinal number to a shared trace buffer using a shared write pointer. After the test cycle is complete, the trace buffer is dumped for analysis.</p> <p>This test fails and returns an error message if the trace buffer does not contain an equal number of ordinal numbers for each processor. For example, if the specified loop count is 5, the trace buffer should contain five 0s, five negative 1s, five 2s, and so on.</p>

**TABLE 38-1** `mptest` Options (Continued)

<code>mptest</code> Options	Description
Data I/O	Requires two or more threads, each of which locks onto one of the processors. Each processor, in turn, writes data to a temporary file that has been mapped to the physical address. The modified data is immediately read by other processors being tested. This test hangs and fails if the processors do not recognize the expected data.
Shared Memory	<p>A shared memory buffer is divided into a number of contiguous chunks, one for each of the CPUs participating in the test. Each CPU is assigned a unique chunk based upon its ID (1-N). This subtest has two parts.</p> <p>First, each CPU locks and writes data to its data chunk. Identical data is written for each CPU. Then each CPU reads and compares the information on its data chunk with that of another CPU.</p> <p>If two CPUs do not confirm consistent data, the test fails and returns an error message. If that happens, testing stops and this test is run again in verbose mode to return more detailed information.</p>
Cache Consistency	<p>Requires two or more processors to access and write to the same physical address. This test verifies that a change in physical address by one processor is confirmed by another.</p> <p>If two processors do not confirm consistent data, the test continues to run, but the Pass Count in the SunVTS status window stops incrementing. If this happens, stop testing and run the test again in verbose mode for a more detailed picture of the problem.</p>

---

# mptest Test Modes

TABLE 38-2 mptest Supported Test Modes

Test Mode	Description
Connection	Checks the current processors on the system with the original processor mask. An error is reported if the two values do not match. The original processor mask is set during probing, which shows the processors on system during the probe. The status of each selected processor is checked by <code>procesor_bind</code> .
Functional (Offline)	This test mode verifies that the current processor mask is the same as that from the command line, or the same as that from the GUI/TTYUI.

---

# mptest Command-Line Syntax

`/opt/SUNWvts/bin/mptest standard_arguments`  
`-o M=0+1+2+3... ,NL,ND,NS,NC,omask=hexidecimal_number`

TABLE 38-3 mptest Command-Line Syntax

Arguments	Description
<code>M=0+1+2+3...</code>	Use 0, 1, 2 to specify the processors to test.
<code>NL</code>	Disables the Lock/Unlock subtest.
<code>ND</code>	Disables the Data I/O subtest.
<code>NS</code>	Disables the Shared Memory subtest.
<code>NC</code>	Disables the Cache Consistency subtest.
<code>omask=hexidecimal_number</code>	Original mask of processors. Bit 0 represents processor 0 and bit 1 represents processor 1. For example, 03333320.

---

**Note** – 64-bit tests are located in the `sparcv9` subdirectory:

`/opt/SUNWvts/bin/sparcv9/testname`. If a test is not present in this directory, then it may only be available as a 32-bit test. For more information refer to “32-Bit and 64-Bit Tests” on page 3.

---



## Network Hardware Test (`nettest`)

---

`nettest` checks all the networking hardware on the system CPU board and separate networking controllers (for example, a second SBus Ethernet controller). For this test to be meaningful, the machine under test must be attached to a network with at least one other system on the network.

---

**Note** – This version of `nettest` is used for *all* networking devices, including Ethernet (`ie` and `le`), token ring (`tr`, `trp`), quad Ethernet (QED), fiber optic (`fddi`, `nf`, `bf`, `pf`), SPARCcluster™ 1 system (`em`), ATM (`sa`, `ba`), HiPPI, 100-Mbits per second Ethernet (`be`, `hme`), and GigaSwift Ethernet (`ce`) devices.

---

The `nettest` mainly uses the Internet Control Message Protocol (ICMP), and requires at least two machines on a network—the machine under test and another machine reliable enough to be a test target. Both machines must support the Transmission Control Protocol/Internet Protocol (TCP/IP) (ICMP is part of TCP/IP). The target machine must either be configured to respond to ICMP broadcast or to RPC broadcast.

First `nettest` determines the target machine(s) to test against. If no targets are specified, it sends an ICMP broadcast to find them. If it fails to find all necessary targets, it tries RPC broadcast to the RPC port mapper daemon. If you specify the targets, `nettest` uses the specified target(s) instead.

After finding the necessary targets, `nettest` performs the following tests:

- Random test—sends out 256 packets with random data length and random data.
- Incremental test—sends out packets with length from minimum to maximum packet size using incremental data. (Minimum and maximum values differ for each device.)
- Pattern test—sends 256 packets of maximum length, where each packet contains one test pattern, and all byte patterns (0 to 0xFF hex) are used. That is, the first packet contains pattern 0, the second packet contains pattern 1, and so on, until the last packet pattern of 0xFF.

---

**Note** – `nettest` is a scalable test. However, the maximum number of networked devices allowed on a system is 255, and the number of instances for each device is limited to 2. So, if you start the SunVTS exerciser using the `-i` option to specify a default number of instances for all tests, `nettest` cannot assign more than 2 instances per each networked device.

---

---

## nettest Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.



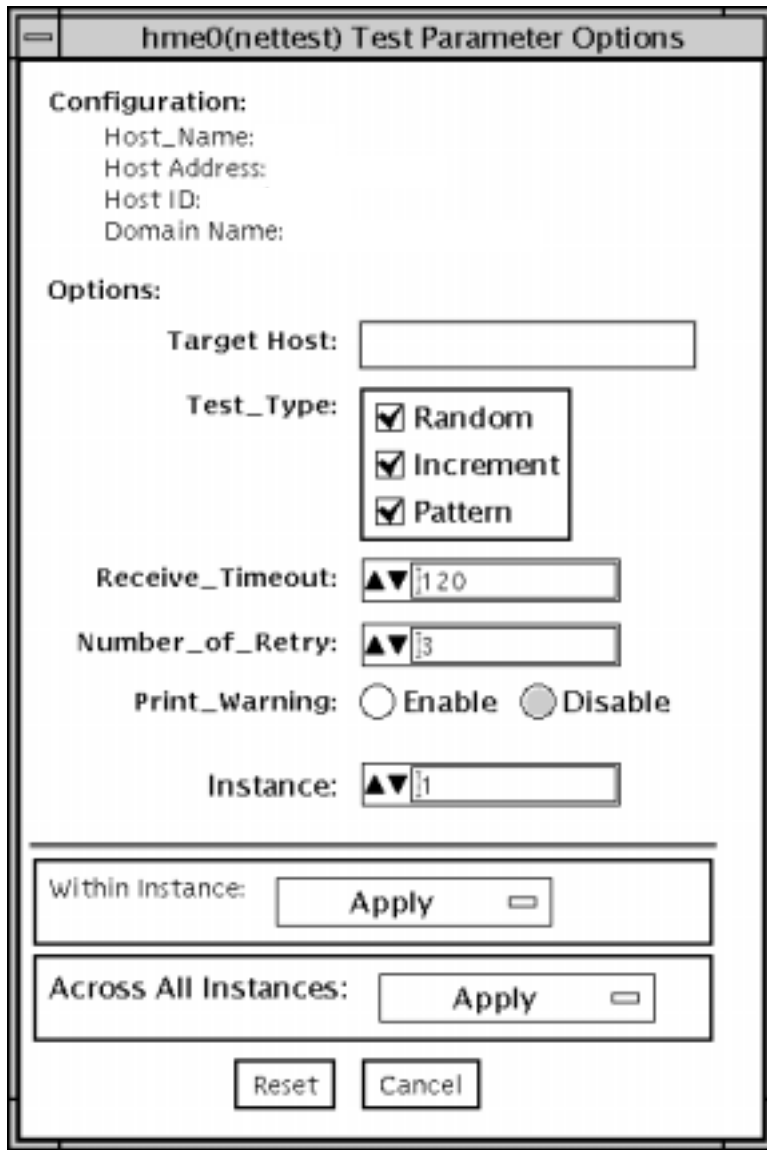


FIGURE 39-1 nettest Test Parameter Options Dialog Box

The Configuration section specifies the host name, host ID, host address, and domain name of the system being tested.

**TABLE 39-1** nettest Options

nettest Options	Description
Target Host	Specifies one or more targets to be tested against. Target host entries can be either a host name or an Internet address. When no target host is specified, the test finds necessary targets through broadcasting. The default setting leaves this field empty.
Receive Timeout field	The default is 120 seconds, but can be changed. Use a range from 0 to 600 seconds.
Number of Retries field	The default number of retries before flagging an error is three, but can be changed. Use a range between 0 to 128 retries.
Print Warning	Disabled by default. Click Enable to see warning errors, such as retry on timeout.

---

## nettest Test Modes

Both Connection and Functional test modes are supported by nettest. Different test schemes are performed on the network device based on the mode selected.

**TABLE 39-2** nettest Supported Test Modes

Test Mode	Description
Connection	Checks whether the device is connected. It searches through all the network interfaces for a specified device name. If nettest does not find the device connected, the test fails; otherwise it returns: device is connected.
Functional (Offline)	Performs all three tests (Random test, Incremental test, and Pattern test) sequentially. It allows you to specify options that will perform heavy stress testing.
Online	Performs only the Random test.

---

# nettest Command-Line Syntax

```
/opt/SUNWvts/bin/nettest standard_arguments -o target=h1+h2+..., dev=interface, test=type, packets=n, pattern=hex, timeout=seconds, retry=n, warn
```

TABLE 39-3 nettest Command-Line Syntax

Argument	Description
<i>target=h1+h2+...</i>	A list of test targets by host name or Internet address.
<i>dev=interface</i>	Network interface name. The default value is <code>le0</code> for Ethernet networks.
<i>test=type</i>	The test type. Type <code>Random</code> , <code>Increment</code> , or <code>Pattern</code> for the desired test. The default value is <code>Random+Increment+Pattern</code> where all tests run.
<i>packets=n</i>	Number of random/pattern packets. The default is 256.
<i>pattern=hex</i>	Specifies a data pattern, in hexadecimal form. The default is all patterns from 0 to <code>0xff</code> .
<i>timeout=seconds</i>	Indicates the number of seconds to wait before a timeout; the default is 120 seconds.
<i>retry=n</i>	Indicates the number of test timeout retries; the default is three retries.
<i>warn</i>	When enabled, prints warning messages.

---

**Note** – 64-bit tests are located in the `sparcv9` subdirectory:

`/opt/SUNWvts/bin/sparcv9/testname`. If a test is not present in this directory, then it may only be available as a 32-bit test. For more information refer to “32-Bit and 64-Bit Tests” on page 3.

---



## Ethernet Loopback Test (netlbttest)

---

The `netlbttest` replaces the `gemtest` previously included in SunVTS. It provides functional test coverage of the devices which have device drivers that support the Ethernet loopback test. These devices include `eri` (the Ethernet device in the RIO chip) and `ge` (Gigabit Ethernet), and `ce` (GigaSwift Ethernet). The `netlbttest` runs in loopback (external/internal) mode.

The `netlbttest` uses DLPI RAW mode to talk to the device driver. For the purpose of this test, a packet is defined as an Ethernet header followed by the Ethernet data payload (refer to the IEEE 802.3z standard). The test generates and sends out the desired number of packets (a tunable parameter) and expects to receive the same number of packets through the loopback interface, external or internal. If an error occurs (for example, packet mismatch or timeout), an error message indicating the type of error, its probable cause(s), and recommended action(s) is displayed on the SunVTS console.

The data sent out is generated by a random number generator, and put into a data buffer. Each time a packet is sent, it is selected from a different starting point of the data buffer, so that any two consecutively transmitted packets will not be the same.

---

**Note** – Do not run `nettest` and `netlbttest` at the same time or the tests may fail.

---

---

## netlbttest Test Requirements

You must have the Ethernet card and the device driver installed, a loopback connector in place, and Intervention mode enabled before running `netlbttest`. `netlbttest` cannot run if the network interface is connected to a live network, and

requires that the ethernet device be configured offline before running the test. Use the `ifconfig(1M)` command to bring the Ethernet device down before running `netlbttest`. Enter the following commands to bring the interface down:

```
# ifconfig interface down
# ifconfig interface unplumb
```

To run `netlbttest`, a loopback connector must be connected to the Ethernet interface. A loopback connector provides the network interface driver the necessary link for testing, while maintaining isolation from a live network. The loopback connector is required for both internal and external tests of the Ethernet device.


The loopback cable for `ge` and Sun GigaSwift Ethernet MMF adapter (`ce` fiber) is based on the following specifications: multimode, duplex, 62.5/125 micron, `sc` connector, 850nm. The cable can be made by splitting a standard fiber optic cable in two. The two ends of the cable should be connected to the TX and RX ports of the adapter (the order does not matter), thus forming a loop.

The loopback connector for the `eri` device is a standard RJ-45 connector. See “Twisted-Pair Ethernet (TPE) Loopback Cable for Fast Ethernet” on page 395 for the diagram. The loopback connector for a Sun GigaSwift Ethernet UTP adapter (`ce` copper) is a standard RJ-45 with all 8 pins connected. See “TPE Loopback Cable for Gigabit and 10/100 Ethernet” on page 395 for the diagram.

---

## netlbttest Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.

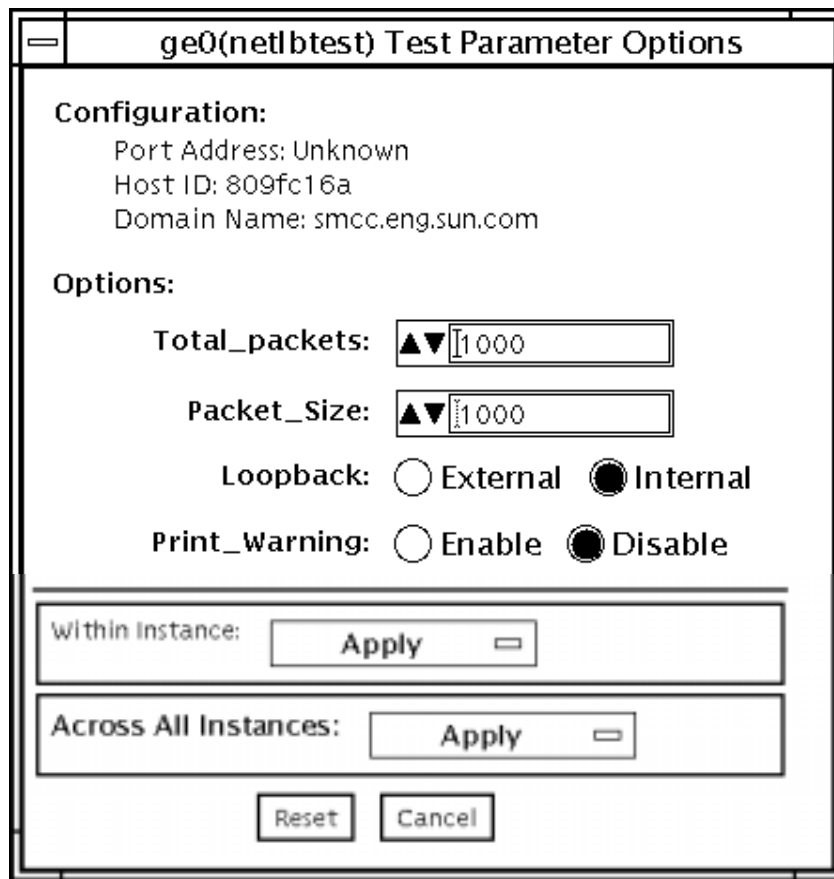

**FIGURE 40-1** netlbtest Test Parameter Options Dialog Box

Refer to TABLE 40-1 for test parameter descriptions.

**TABLE 40-1** netlbtest Options

netlbtest Options	Description
Configuration	Specifies the Port Address, Host ID, and Domain Name of the system under test.
Total Packets	Specifies the total number of the packets to send. The default number of packets is 1000.
Packet size	Determines the size (in bytes) of the packets to be transmitted. $60 \leq \text{packet size} \leq 1514$ . The default packet size is 1000 bytes.

**TABLE 40-1** netlbtest Options

netlbtest Options	Description
Loopback	Determines the external and internal loopback mode. The default setting is internal loopback mode.
Print_Warning	Enables or disables the printing of warning messages. The default setting is Disable.
Processor Affinity	Binds the test to a specific processor. If no processor is specified, the test migrates between processors. This option is only available on multiprocessor systems.

## netlbtest Test Modes

**TABLE 40-2** netlbtest Supported Test Modes

Test Mode	Description
Functional (Offline)	Runs the full set of subtests. It is assumed that the host is not connected to the network through the intended test device(s).

Since netlbtest requires a loopback connector, it can only be selected when Intervention mode is enabled.

## netlbtest Command-Line Syntax

```
/opt/SUNWvts/bin/netlbtest standard_arguments
-o dev=device ,tpkts=n ,pkosz=pkt_size ,lb=Internal
,warn=Disable
```

**TABLE 40-3** netlbtest Command-Line Syntax

Argument	Description
dev=device_name	Specifies the device to test such as ge0 or eri0.
tpkts=n	[1...100000], count of packets to loopback.
pkosz=pkt_size	[60... 1514], packet size in bytes.
lb=Internal	Selects internal (or external) loopback mode.
warn=Disable	Enables or disables printing of warning messages.



---

**Note** – 64-bit tests are located in the `sparcv9` subdirectory:  
`/opt/SUNWvts/bin/sparcv9/testname`. If a test is not present in this directory,  
then it may only be available as a 32-bit test. For more information refer to “32-Bit  
and 64-Bit Tests” on page 3.

---



## PCMCIA Modem Card Test (pcsertest)

---

PCMCIA is a technology that provides small, easy to use peripheral devices. PCMCIA stands for Personal Computer Memory Card International Association. It is a PC Card standard for mobile computing I/O cards. These cards range from memory, FAX/modems, serial I/O, SCSI, video, sound, and so on.

The `pcsertest` verifies the functionality of PCMCIA modem card and PCMCIA serial I/O socket card. It does not test any other PCMCIA devices.

The `pcsertest` issues a series of commands to the modem to initiate a local analog loopback test and verifies this functionality.

As an option, the `pcsertest` tests serial I/O socket cards. This test writes a pattern of incrementing data to the serial I/O socket card, which is then looped back, read and verified.

---


**Note** – When testing serial I/O socket cards, a 9-pin loopback connector is required. However, no loopback connector is required when testing the default modem card. See Appendix A for loopback connector wiring instructions.

---

---

### `pcsertest` Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.

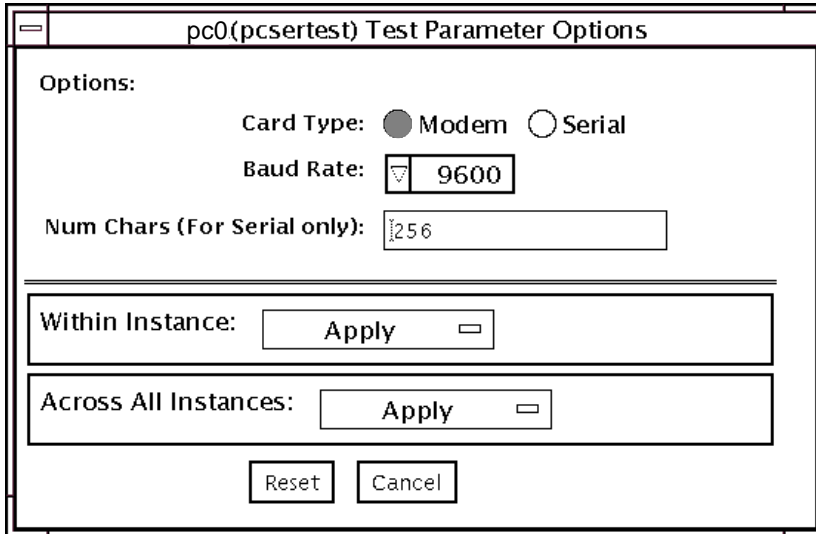

**FIGURE 41-1** pcsertest Test Parameter Options Dialog Box

**TABLE 41-1** pcsertest Options

pcsertest Option	Description
Card Type	Specifies the type of device you are testing; either a PCMCIA modem, or a PCMCIA serial I/O socket card. Note-If you choose the Serial card type, and there is no serial I/O socket card in the slot, the test fails.
Baud Rate	Specifies the baud rate for testing.
Num Chars	Specifies the number of characters being used for external loopback testing of the serial socket card. By default, this is set to 256 characters. This option is applicable only to serial socket cards and ignored for the modem card.

**Note** – Any combination of modem and socket I/O cards can be placed in the PCMCIA slots. However, you must select the correct type of card in the Options dialog box. If you select an incorrect card type, the test fails. The default card type for each PCMCIA slot is a modem card. If only one modem card is plugged in, the empty slot is ignored.

---

# pcsertest Test Mode

TABLE 41-2 pcsertest Supported Test Modes

Test Mode	Description
Functional (Offline)	Runs the full set of tests.

---

---

# pcsertest Command-Line Syntax

`/opt/SUNWvts/bin/pcsertest standard_arguments -o dev=device_name,  
type=card_type,baudrate=speed,numchars=n`

TABLE 41-3 pcsertest Command-Line Syntax

Argument	Description
<code>dev=device_name</code>	Specifies the device name (for example, <code>dev=pc0</code> and <code>dev=pc1</code> )
<code>type=card_type</code>	Specify one of the two card types for the device ( <code>type=serial</code> or <code>type=modem</code> ). You do not need to specify the type if the device is a modem, since modem is the default card type.
<code>baudrate=speed</code>	Specifies the communication speed. Specify one of the following: 9600 19200 38400 57600 The default is 9600.
<code>numchars=n</code>	Specifies the number of characters to use for external loopback testing of the serial socket card. By default, this is set to 256 characters. This option is applicable only to serial socket cards and ignored for the modem card.

---

**Note** – 64-bit tests are located in the `sparcv9` subdirectory:

`/opt/SUNWvts/bin/sparcv9/testname`. If a test is not present in this directory, then it may only be available as a 32-bit test. For more information refer to “32-Bit and 64-Bit Tests” on page 3.

---



## SPARCstorage Array Controller Test (plntest)

---

`plntest` checks the functionality of the controller board on the SPARCstorage™ Array. The SPARCstorage Array (SSA) is a large disk storage I/O subsystem capable of housing up to 30 SCSI hard drives. The SSA communicates with a host system over a fiber-optic link provided by an SBus-based host adapter card in the host system and the corresponding SSA controller board hardware.

The SSA controller card is an intelligent, CPU-based board with its own memory and ROM-resident software. In addition to providing a communications link to the disk drives, it also buffers data between the host system and disk drives in its nonvolatile RAM (NVRAM). For data to go from the host to a particular disk, it must first be successfully transferred to this NVRAM space.

The host machine, SBus host adapter card, Fibre Channel connection, and the SSA controller board must be working properly to perform this data transfer operation. By verifying and stressing this operation, `plntest` can isolate failures on the SSA disk drives from failures on the SSA controller board.

---

**Note** – `disktest` transfers data on the SSA disk drives over the same path mentioned above. However, `disktest` does not transfer data as quickly as `plntest`.

---

---

### `plntest` Controller Test

The `plntest` exercises the hardware and software by invoking SCSI read buffer commands of various sizes to the NVRAM. These operations exercise the host Fibre Channel hardware, the SSA Fibre Channel hardware, the SSA resident management

software, and the hardware component interaction on the SSA controller card (all components except the SCSI devices). In addition, the `plntest` reports failure of the fan module and the NVRAM battery module of the SPARCstorage Array.

---

## Probing for SSA Controller Devices

Unlike most other hardware devices, the SSA controller card does not have a logical device name (one you would find in the `/dev` directory). Therefore, the SSA controller card is identified by its longer, physical device name.

---

**Note** – The physical device name of the SSA controller card cannot be used to run `plntest`.

---

When running `plntest` from the command line, the physical device name of the SSA controller card cannot be used, so a logical name must be specified. ANSI standards require commas as delimiters between items. Since the physical name of the SSA controller contains embedded commas, if you use a physical name that contains commas as a command-line option, `plntest` misinterprets the option.

There are two ways that you can create a logical name:

- Run the SunVTS kernel (`vtstk`), which automatically creates a logical name entry for the SSA controller under the `/dev` directory, such as:

```
# /dev/ssaxX , where XX represents the decimal number of the  
controller
```

Use this name as the parameter for the `dev=` option of `plntest`.



- Manually make a soft link from the actual physical device name to a logical name of your choice (under /dev). Use this name as the parameter for the `dev=` option of `plntest`, as shown in the following example:

```
machine# ./plntest -o "?"


1: /devices/io-unit@f,e3200000/sbi@0,0/SUNW,soc@1,0/SUNW,
pln@0c0d,0e0f0102:ctlr
2: /devices/io-unit@f,e0200000/sbi@0,0/SUNW,soc@3,0/SUNW,
pln@0c0d,0e0f0102:ctlr

machine# ln -s \ /devices/io-unit@f,e3200000/sbi@0,0/SUNW,soc@1,0/SUNW,
pln@0c0d,0e0f0102:ctlr \ /dev/ssal
machine# /opt/SUNWvts/bin/plntest dev=/dev/ssal
```

---

## plntest Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.

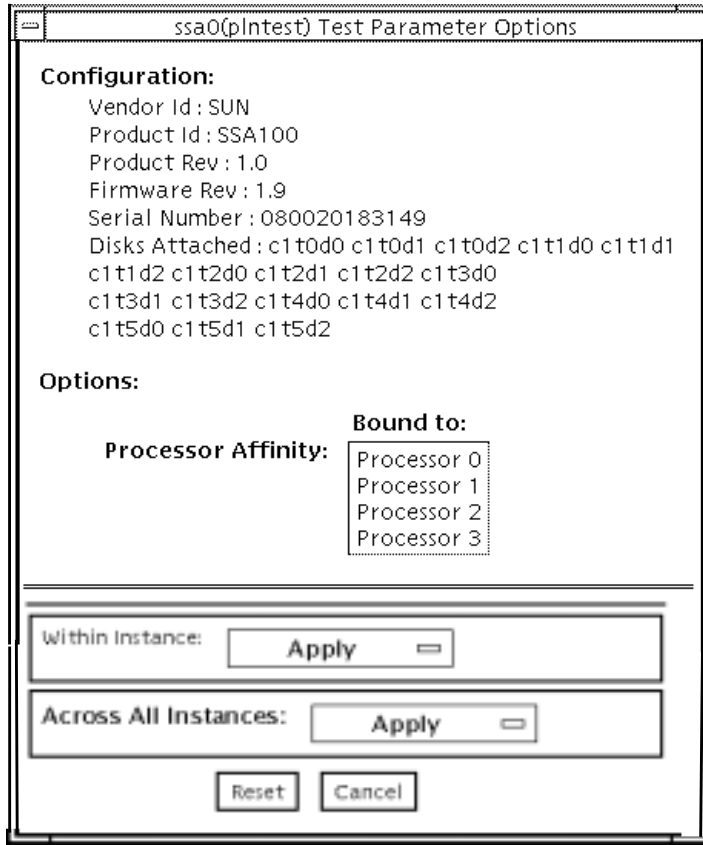

**FIGURE 42-1** plntest Test Parameter Options Dialog Box

Configuration lists the names of all the logical disk drives (both single and grouped) that are attached to the SPARCstorage Array controller board. plntest is not a scalable test.

---

**Note** – If no disks are present, none is displayed under the Attached Disks heading.

---

---

# plntest Test Modes

TABLE 42-1 plntest Supported Test Modes

Test Mode	Description
Connection	In this mode, <code>plntest</code> checks the state of the battery module and the fan module of the SPARCstorage Array.
Functional (Offline)	<code>plntest</code> checks the state of the battery module and the fan module of the SPARCstorage Array. The <code>plntest</code> issues a SCSI command, <code>READBUFFER</code> , causing the entire NVRAM to be read. This test uses different transfer buffer sizes.

---

# plntest Command-Line Syntax

```
/opt/SUNWvts/bin/plntest standard_arguments -o ?,dev=device_name,x
```

TABLE 42-2 plntest Command-Line Syntax

Argument	Description
?	Probes the system for valid SSA controller devices and prints them to screen (see “Probing for SSA Controller Devices” on page 252).
dev=device_name	Specifies the physical path name of the SSA controller card to be tested. This argument <i>must</i> be included when running <code>plntest</code> from the command line, unless the ? argument is used.
x	Probes the specified SSA controller card for the single and grouped disks attached to the controller card, and prints their logical names to the screen.

Note: The `dev=device_name` option must be specified for this option to work.

---

**Note** – 64-bit tests are located in the `sparcv9` subdirectory:

`/opt/SUNWvts/bin/sparcv9/testname`. If a test is not present in this directory, then it may only be available as a 32-bit test. For more information refer to “32-Bit and 64-Bit Tests” on page 3.

---



## Physical Memory Test (`pmemtest`)

---


The `pmemtest` checks the physical memory of the system and reports hard and soft error correction code (ECC) errors, memory read errors, and addressing problems. The pseudo driver `mem` is used to read the physical memory.

This test reads through all the available physical memory. It does not write to any physical memory location.

---

### `pmemtest` Options

`pmemtest` is supported both in physical mapping and logical mapping displays in the UI. In physical mapping, `pmemtest` provides support to test the memory on a per-board basis; users can select the `pmemtest` which is displayed under the physical memory board, which is to be tested and test only that board. In logical mapping, the `pmemtest` options apply to the complete memory across the boards.

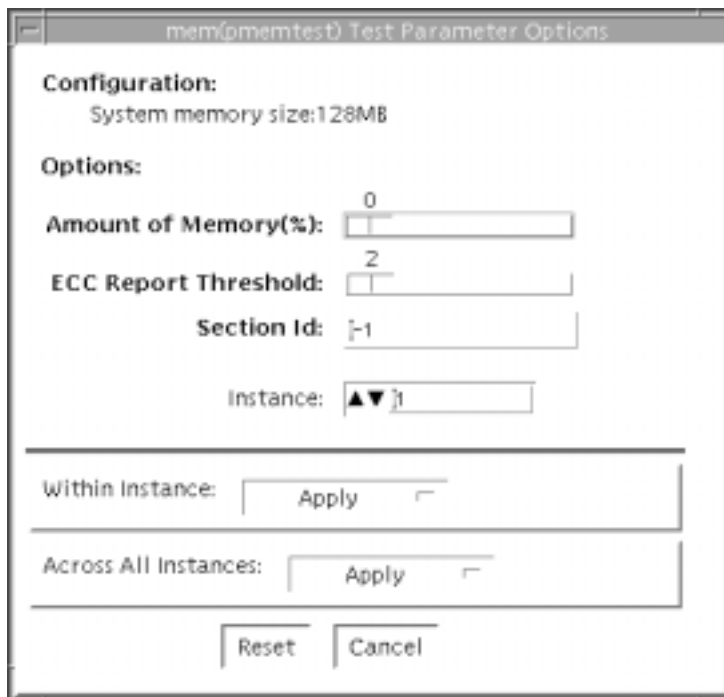

**FIGURE 43-1** pmemtest Test Parameter Options Dialog Box

**TABLE 43-1** pmemtest Options

pmemtest Options	Description
Configuration	Shows the total amount of physical memory, rounded up to the nearest megabyte, probed by the SunVTS kernel.
Amount of Memory	Specifies the percentage of the physical memory to be tested. The default 0% ensures dividing the total memory equally among instances which results in 100% coverage at the completion of every test pass. Note that one test pass includes one pass each by all instances.

**TABLE 43-1** `pmemtest` Options

<code>pmemtest</code> Options	Description
ECC Report Threshold	Determines how many correctable ECC errors occurred in the elapsed time before <code>pmemtest</code> reports a test failure. A value of zero results in no report of any correctable ECC errors. The default is 2. This option is only available on UltraSPARC systems.
Section ID	When set to -1, <code>pmemtest</code> will test one memory section in each pass, automatically testing each subsequent memory section as testing progresses. When set to a number other than -1, only the section specified will be tested. A section is defined by the pass and instance number settings. This option is only available on UltraSPARC systems.
Instance	Instances are the number of copies of <code>pmemtest</code> to run simultaneously on the memory being tested.

---

**Note** – The amount of memory option is specified on a “per instance” basis. The real memory coverage for one test pass depends on the amount of memory option and the number of instances. For example, if there are four instances, and each instance specifies “50%” for the amount of memory option, then this will result in “200%” (4 times 50%) coverage on each test pass. For guaranteed 100% memory coverage for each test pass, choose default percentage size option as 0% for all instances.

---

---

# pmemtest Test Modes

**TABLE 43-2** pmemtest Supported Test Modes

Test Mode	Description
Connection Test	In this mode, one percent of the memory is read. pmemtest also informs the user how much physical memory is available. For sun4m, sun4u, and UltraSPARC servers, the test reports the ECC errors that have occurred since it was last invoked. The test reports ECC errors for a particular CPU or memory board when physical mapping is selected, otherwise it provides the SIMM number of the ECC memory error.
Functional (Offline)	In Functional test mode, the amount of memory to be read can vary. By default 100% of the memory is tested. Also for UltraSPARC servers, this test mode reports the ECC errors that have occurred since it was last invoked. The test reports ECC errors for a particular memory board when physical mapping is selected, otherwise it provides the SIMM number of the ECC memory error.
Online	In this mode too, the amount of memory to be read can vary. By default 100% of the memory is tested. Also for UltraSPARC servers, this test mode reports the ECC errors that have occurred since it was last invoked. The test reports ECC errors for a particular memory board when physical mapping is selected, otherwise it provides the SIMM number of the ECC memory error.

---

# pmemtest Command-Line Syntax

For 32-bit configurations:

```
/opt/SUNWvts/bin/pmemtest standard_arguments -o size=[0-100],dev=  
device_name,threshold=report_threshold,bdinfo=number,section=section_id
```

For 64-bit configurations:

```
/opt/SUNWvts/bin/sparcv9/pmemtest standard_arguments -o size=[0-  
100],dev=device_name,threshold=report_threshold,bdinfo=number,section=  
section_id
```



**TABLE 43-3** `pmemtest` Command-Line Syntax

Argument	Description
<code>size=[0-100]</code>	Specifies the percentage of memory to be tested. The default is 0% (for 100% memory coverage).
<code>dev=device_name</code>	Specifies the device to test, for example, <code>mem</code> .
<code>threshold=report_threshold</code>	Determines how many correctable ECC errors occur before they are reported as an error causing <code>pmemtest</code> to report a failure. A value of zero results in no report of any correctable ECC errors. The default is 2. This option is only available on UltraSPARC systems.
<code>bdinfo=number</code>	For UltraSPARC servers, this argument indicates board number information. For example, if board 0 and board 5 have memory and you want the test to read the memory on both boards, then this argument should read <code>bdinfo=33 (2**5+2**0)</code> . The <code>bdinfo</code> value can be specified as 0 to test the memory present on all boards.
<code>section=section_id</code>	When set to -1, <code>pmemtest</code> will test one memory section in each pass, automatically testing each subsequent memory section as testing progresses. When set to a number other than -1, only the section specified will be tested. A section is defined by the pass and instance number settings. This option is only available on UltraSPARC systems.

---

**Note** – 64-bit tests are located in the `sparcv9` subdirectory:

`/opt/SUNWvts/bin/sparcv9/testname`. If a test is not present in this directory, then it may only be available as a 32-bit test. For more information refer to “32-Bit and 64-Bit Tests” on page 3.

---



## Qlogic 2202 Board Test (`qlctest`)

---

`qlctest` is made up of several subtests that test the functions of the Qlogic 2202 FC/AL Crystal. Unlike the earlier single-port Q2100 board, the Q2202 is a two-port board which has greater diagnostic support.

This test is not scalable.

---

**Note** – Do not run customer data while running `qlctest`, as the test will take priority over customer data requests. The customer will be unable to access data while `qlctest` is running.

---

---

**Note** – Do not run other tests while `qlctest` is running. `qlctest` may cause other tests to fail.

---

---

**Note** – `qlctest` is an intervention mode test. No subtests can be selected unless intervention is set.

---

---

### `qlctest` Subtests

There are nine possible subtests to run in intervention and functional modes:

- Fcode revision check
- Firmware revision check
- Board revision check
- Checksum Firmware subtest
- Selftest

- Mailbox Loopback subtest
- Internal 10-bit Loopback subtest
- Internal 1-bit Loopback subtest
- External Loopback subtest

The external loopback test is an intervention test. To test the fibre loop, leave the QLC port attached to the storage. In the Test Parameters Options dialog box, set the "Test if Connected to Storage" option to "Yes". To test the Qlogic 2202 board alone, connect a loopback cable to the QLC port. This cable can be made by taking a regular cable and splitting it apart. Then loop the transmitter side of the port to the receiver side of the port.

For subtest descriptions, see TABLE 44-1.

---

## qlctest Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.

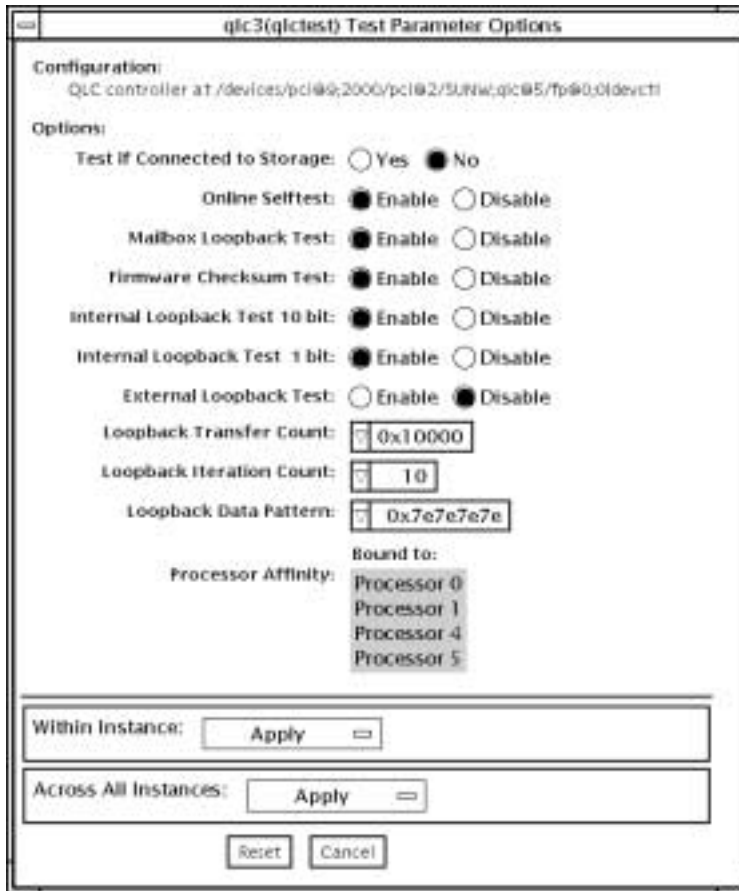


FIGURE 44-1 qlctest Test Parameter Options Dialog Box

TABLE 44-1 qlctest Options

qlctest Options	Description
Fcode revision check	Retrieves the fcode revision string. A core subtest that is always run but not shown in the Options dialog box.
Firmware revision check	Retrieves the firmware revision string. A core subtest that is always run but not shown in the Options dialog box.
Board revision check	Retrieves the board revision levels. A core subtest that is always run but not shown in the Options dialog box.
Test if Connected to Storage	Runs qlctest while connected to storage. Default value is No.

**TABLE 44-1** qlctest Options

qlctest Options	Description
Selftest	Evaluates the functionality of ISP hardware by performing the following tests: <ul style="list-style-type: none"><li>• Transmit FIFO test</li><li>• Receive FIFO test</li><li>• SRAM test</li><li>• Misc. Register tests</li></ul> Run by default, but can be deselected.
Mailbox Loopback subtest	Loads a series of registers into the input mailboxes on the card and then reads the output mailboxes and compares results. This verifies that the system side of the card is operating correctly, and that the internal data paths are correct. Run by default, but can be deselected.
Firmware Checksum subtest	Runs an internal checksum test on the installed firmware. This verifies that the RISC RAM on the card is fully functional and that the installed firmware is still intact. This test also serves as a quick RAM check of the RISC RAM. Run by default, but can be deselected.
Internal 10-bit Loopback subtest	Performs internal loopback test within the host adapter ISP hardware at the 10-bit interface. This test is done with data sourcing from the system memory and going to the system memory. The desired data pattern, transfer length, and iteration count can be selected via the test parameters menu. Run by default, but can be deselected.
Internal 1-bit Loopback subtest	Performs internal loopback test within the host adapter ISP hardware at the 1-bit interface. This test is done with data sourcing from the system memory and going to the system memory. The desired data pattern, transfer length, and iteration count can be selected via the test parameters menu. Run by default, but can be deselected.
External Loopback subtest	Performs an external loopback test. This test is done with data sourcing from the system memory and going to the system memory. The desired data pattern, transfer length, and iteration count can be selected via the test parameters menu. This is an intervention test, because a loopback cable is needed from the transceiver to the receiver of the QLC port when testing this port by itself. This subtest can also test the entire fibre channel loop when the loop is connected to the storage to be tested. Not run by default, but can be selected.

**TABLE 44-1** qlctest Options

qlctest Options	Description
Loopback Transfer Count	Controls the packet size used in the internal 10-bit, internal 1-bit, and external loopback tests. Default value is 0x10000.
Loopback Iteration Count	Sets the number of times to loop the internal 10-bit, internal 1-bit, and external loopback tests. Default value is 10.
Loopback Data Pattern	Selects the data pattern to loop for the internal 10-bit, internal 1-bit, and external loopback tests. Default value is 0x7e7e7e7e.

---

# qlctest Test Modes

TABLE 44-2 qlctest Supported Test Modes

Test Mode	Description
Connection	Opens and closes the QLC port.
Functional (Offline)	Runs the full set of tests.

---

# qlctest Command-Line Syntax

```
/opt/SUNWvts/bin/qlctest standard_arguments  
-v -o dev=device name,run_connect=Yes/No,selftest=Enable/Disable,  
mbox=Enable/Disable,checksum=Enable/Disable,ilb_10=Enable/Disable, ilb=  
Enable/Disable,e1b=Enable/Disable,xcnt=0xtransfer_count, icnt=iteration_count,  
lbfpattern=0xpattern
```

TABLE 44-3 qlctest Command-Line Syntax

Argument	Description
<b>dev</b>	The name of the device to test.
<b>run_connect=Yes/No</b>	If <b>run_connect</b> is set to Yes, <b>qlctest</b> will run when the tested port is connected to storage. If the port being tested is not connected to storage, this option has no effect. Default value is No.
<b>selftest=Enable/Disable</b>	Enables or disables the selftest command. Evaluates the functionality of the ISP hardware. Enabled by default.
<b>mbox=Enable/Disable</b>	Enables or disables the mailbox loopback command. This test writes data patterns into the mailboxes and then reads them back from the output mailboxes and verifies the data is correct. Enabled by default.
<b>checksum=Enable/Disable</b>	Enables or disables the checksum command. Runs an internal checksum test on the installed firmware. This verifies that the RISC RAM on the card is fully functional and that the installed firmware is still intact. This test also serves as a quick RAM check of the RISC RAM. Enabled by default.



**TABLE 44-3** qlctest Command-Line Syntax

---

Argument	Description
<i>i1b_10=Enable/Disable</i>	Enables or disables the internal 10-bit test. Performs internal loopback test within the host adapter ISP hardware at the 10-bit interface. Enabled by default.
<i>i1b=Enable/Disable</i>	Enables or disables the internal 1-bit test. Performs internal loopback test within the host adapter ISP hardware at the 1-bit interface. Enabled by default.
<i>e1b=Enable/Disable</i>	Enables or disables the external loopback test. The desired data pattern, transfer length, and iteration count can be selected via the test parameters menu. Requires a cable for this intervention test. Disabled by default.
<i>xcnt=0xtransfer_count</i>	Controls the packet size to be transferred, for example, 0x1000. Default value is 0x10000.
<i>icnt=iteration_count</i>	Controls the number of times the loopback test will run, for example, 100. Default value is 10.
<i>lbfpattern=0xpattern</i>	Lists the data pattern to loop, for example, 0x7E7E7E7E. Default value is 0x7E7E7E7E.

---

**Note** – 64-bit tests are located in the `sparcv9` subdirectory:

`/opt/SUNWvts/bin/sparcv9/testname`. If a test is not present in this directory, then it may only be available as a 32-bit test. For more information refer to “32-Bit and 64-Bit Tests” on page 3.

---



## Remote System Control (`rsctest`)

---

The `rsctest` exercises the Remote System Control (RSC) feature, which is integrated on the Sun Enterprise 250 as well as the next-generation RSC 2.0 plug-in card introduced with the Sun Fire 280R line.

The RSC provides secure remote access for system monitoring, firmware updates, and failure recovery. The RSC communicates with the host through two internal serial lines, the I2C bus, and reset lines.

The RSC 1.0 hardware consists of the controller, flash, SEEPROM, 10MB Ethernet port, and an external console serial port.

The RSC 2.0 plug-in card hardware consists of the controller, flash, SEEPROM, 10MB Ethernet port, FRUSEEPROM, Time Of Day (TOD) device, internal PCMCIA modem card, and battery backup.

`rsctest` is not scalable.

---

### `rsctest` Subtests

The `rsctest` will present different subtests and options based on which revision of the RSC hardware it is testing.

The subtests common to both RSC 1.0 and 2.0 include:

**TABLE 45-1** Subtests for both RSC 1.0 and 2.0

Subtest	Description
Ethernet	Allows for internal loopback testing, on the Ethernet device with user specified data, size, and number of packets.  Allows for external loopback testing with user-specified data, size, and number of packets. This requires a connection to a 10MB hub or switch for RSC 1.0, or a passive loopback connector for RSC 2.0.  Allows for a ping to be sent to a specified host and checks the response.
Flash CRC	Performs a checksum test on the flash device.
SEEPROM CRC	Performs a checksum test on the SEEPROM device.
Serial	Allows internal loopback testing with user-specified data and size on the two internal serial ports.  Allows for internal and/or external testing on the external ttyu port. The external test requires a passive loopback connector.

`rsctest` also presents the following subtests when running on the RSC 2.0 hardware:

**TABLE 45-2** Subtests for RSC 2.0 Only

Subtest	Description
FRU SEEPROM CRC	Performs a checksum test on the SEEPROM device.
I2C	Tests the i2c bus connection between the host and the RSC.
TOD	Performs multiple reads to the TOD device and verifies that the time is incrementing.
Modem	Verifies that the modem is installed. Displays the manufacture information, in Verbose mode. Performs AT inquiry commands.

The subtests call test modlets that are written in the native Real Time Operating System (RTOS) that resides in the RSC firmware. The `rsctest` subtests execute the test modlets, passes parameters, and retrieves results from the RSC using a test protocol on the host to RSC internal serial lines.

---

## rsctest Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.

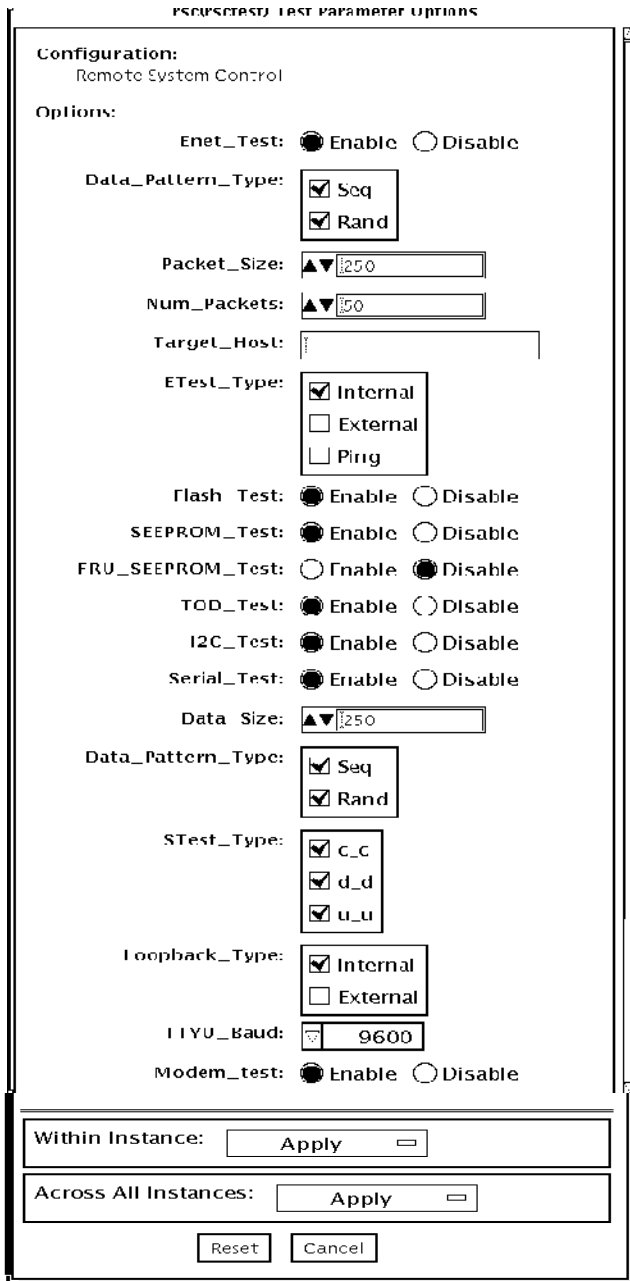


FIGURE 45-1 rsctest Test Parameter Options Dialog Box

**TABLE 45-3** `rsctest` Options

<code>rsctest</code> Options	Description
Enet test	Enables or disables RSC Ethernet testing.
Data Pattern Type	Selects Sequential, Random, or both types of data patterns.
Packet Size	Defines the size of each data packet to be sent for all tests.
Num Packets	Specifies the number of data packets to send in one test loop.
Target Host	Specifies the IP address of a host to use for the ping test.
Enet Test Type	Selects any or all Internal, External, or ping tests.
Flash test	Enables or disables the flash checksum test.
SEEPROM test	Enables or disables the SEEPROM checksum test.
FRU SEEPROM test	Enables or disables the FRU SEEPROM checksum test (RSC 2.0 only).
TOD test	Enables or disables the Time Of Day test.
I2C test	Enables or disables the I2C test (RSC 2.0 only).
Serial test	Enables or disables the RSC serial test.
Data Size	Defines the data size to be sent.
Loopback Type	Selects Internal, External, or both. External requires a loopback plug.
Data Pattern Type	Selects Sequential, Random, or both types of data patterns.
Serial Test Type	Selects serial ports to be tested, u to u, c to c, or d to d.
TTYU_Baud	Select a fixed baud rate or all baud rates for testing the ttyu port. The valid baud rates under TTYU_Baud are: ALL, 300, 600, 1200, 2400, 4800, 9600, 14400, 19200, 38400, 57600, 76800, 115200. The default is 9600.
Modem Test	Used to Enable or Disable the RSC PCMCIA modem test (RSC 2.0 only).

---

# rsctest Test Modes

rsctest supports Connection and Functional tests as described in the table below.

TABLE 45-4 rsctest Supported Test Modes

Test Mode	Description
Connection	Reports the status of the RSC.
Functional (Offline)	Tests the RSC's Ethernet, flash, SEEPROM, and serial devices. All tests use internal modes as defaults. The rsctest will not run the serial test on ttyc if the console has been redirected to the RSC. The ttyu tests will not run if there is an open login on ttyu.

---

# rsctest Command-Line Syntax

RSC 1.0: `/opt/SUNWvts/bin/rsctest standard_arguments -o enet=E/D, epatttype=seq+rand, esize=packet_size, epkts=number_packets, target=IP_address, etest=I+E+P, flash=E/D, seeprom=E/D, serial=E/D, sdatsize=data_size, slb=I+E, spatttype=seq+rand, stest=u_u+c_c+d_d, ttyubaud=baud_rate | all`

RSC 2.0: `/opt/SUNWvts/bin/rsctest standard_arguments -o enet=E/D, epatttype=seq+rand, esize=packet_size, epkts=number_packets, target=IP_address, etest=I+E+P, flash=E/D, seeprom=E/D, fruseeprom=E/D, tod=E/D, i2c=E/D, serial=E/D, sdatsize=data_size, slb=I+E, spatttype=seq+rand, stest=u_u+c_c+d_d, ttyubaud=baud_rate | all, rscmodem=E/D`

TABLE 45-5 rsctest Command-Line Syntax

Argument	Description
<code>enet=enable   disable</code>	Enables or disables RSC Ethernet test.
<code>epatttype=seq+rand</code>	Predefined pattern options used for Enet test.
<code>esize=packet_size</code>	Data size for each packet in the Enet test.
<code>epkts=number_packets</code>	Number of packets to send for Enet test.
<code>target=IP_address</code>	IP address of target system for Enet ping test.
<code>etest=Internal+External+ Ping</code>	Selects any or all Internal, External, or ping tests.
<code>flash=enable   disable</code>	Enables or disables RSC Flash Checksum test.



**TABLE 45-5** `rsctest` Command-Line Syntax

Argument	Description
<code>seeprom=enable disable</code>	Enables or disables RSC SEEPROM checksum test.
<code>fruseeprom=E/D (RSC 2.0 ONLY)</code>	Enables or disables RSC FRU SEEPROM checksum test.
<code>tod=E/D (RSC 2.0 ONLY)</code>	Enables or disables RSC Time Of Day test.
<code>i2c=E/D (RSC 2.0 ONLY)</code>	Enables or disables RSC i2c test.
<code>serial=enable disable</code>	Enables or disables RSC serial test.
<code>sdatsize=data_size</code>	Data size for the rsc serial tests.
<code>s1b=Internal+External</code>	Loopback type. External N/A on ports C and D.
<code>sptype=seq+rand</code>	Predefined pattern options used for RSC serial test.
<code>stest=u_u+c_c+d_d</code>	Defines port and configuration to use for RSC serial test.
<code>ttty_baud=ALL specific_baud</code>	Defines baud rates to be used in testing the RSC's console port. The valid baud rates under <code>ttty_baud</code> are: ALL, 300, 600, 1200, 2400, 4800, 9600, 14400, 19200, 38400, 57600, 76800, 115200. The default is 9600.
<code>rscmodem=E/D</code>	Enables or disables the RSC PCMCIA modem test.

**Note** – 64-bit tests are located in the `sparcv9` subdirectory: `/opt/SUNWvts/bin/sparcv9/testname`. If a test is not present in this directory, then it may only be available as a 32-bit test. For more information refer to “32-Bit and 64-Bit Tests” on page 3.



## Serial Asynchronous Interface (PCI) Test (`saiptest`)

---

`saiptest` checks the functionality of the serial asynchronous interface (SAI) card through its device driver.

---

**Note** – You must have Patch ID 109338 installed on the system where you plan to run the `saiptest`.

---

---

### `saiptest` Hardware Requirements

Before running the SunVTS diagnostics software, make sure you install the device driver and the cards to be tested. Also, you should reboot your system with the `boot -r` command to reconfigure the system and allow the SunVTS kernel to recognize the new driver.

---

**Note** – You must run the `saiptest` in Intervention mode.

---

---

**Note** – You must have Patch ID 109338 installed on the system where you plan to run the `sapitest`.

---

The following minimum hardware configuration is required to successfully run the Internal test:

- PCI-based SPARC system with a PCI slot
- Serial asynchronous interface card, installed in one of the PCI slots

The following hardware is also required to run other SunVTS Serial Asynchronous Interface tests:

- Serial asynchronous interface patch panel (part no. 370-2810)
- 25-pin serial loopback plugs (part no. 540-1558)
- RS-232 serial cables (part no. 530-1685)
- TTY terminal

---

## saiptest Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.

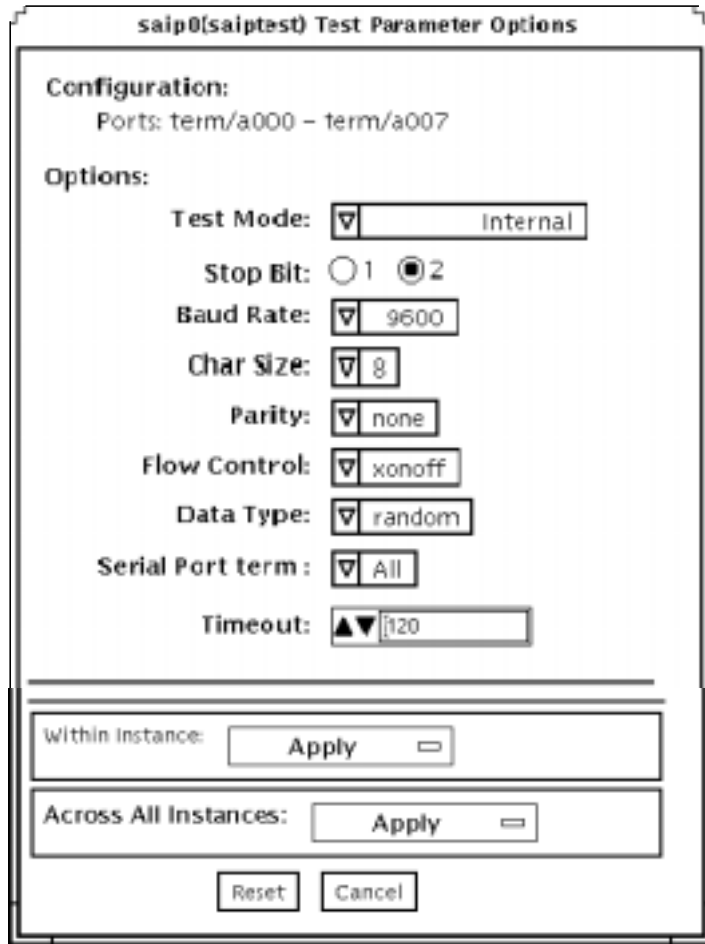


FIGURE 46-1 saiptest Test Parameter Options Dialog Box

The Configuration section of the Options dialog box displays the asynchronous serial ports available for the SAI board. The following table shows the available ports.

TABLE 46-1 saiptest Asynchronous Serial Ports

Board Number	Board Device	Serial Ports
0	saip0	term/a000-a007
1	saip1	term/b000-b007
2	saip2	term/c000-c007

**TABLE 46-1** saiptest Asynchronous Serial Ports *(Continued)*

<b>Board Number</b>	<b>Board Device</b>	<b>Serial Ports</b>
3	saip3	term/d000-d007
4	saip4	term/e000-e007
5	saip5	term/f000-f007
6	saip6	term/g000-g007
7	saip7	term/h000-h007
8	saip8	term/i000-i007
9	saip9	term/j000-j007
10	saip10	term/k000-k007
11	saip11	term/l000-l007
12	saip12	term/m000-m007
13	saip 13	term/n000-n007
14	saip 14	term/o000-o007
15	saip 15	term/p00-p007

**TABLE 46-2** saiptest Options

<code>saiptest</code> Option	Description
Internal Test	Performs internal loopback testing on the SAI card(s) installed in PCI slots. You do not need to attach anything to the card(s) to perform this test.
25-pin Loopback	Provides full-duplex transmission and full-modem loopback testing of the serial port selected in the Serial Port section of the option menu. Attach the 25-pin loopback plug to the serial port on the serial asynchronous interface patch panel that is being tested. This test cannot be run concurrently with the Echo-TTY option enabled.
Echo-TTY	<p>Checks the proper operation of the serial port selected in the Serial Port selection of the option menu by echoing characters typed on a TTY terminal keyboard to the TTY terminal screen. The characters you type on your TTY keyboard display on the TTY screen.</p> <p>Note: A TTY connection to the serial asynchronous interface serial port requires corresponding character size set up. For example, if a TTY attachment is running with 8-bit character size, then the Char Size <code>saiptest</code> option should be set to 8-bits. If you do not type any characters within two minutes, this test times-out.</p>
Baud Rate	<p>Specifies the baud rate. Choose 110, 300, 600, 1200, 2400, 4800, 9600, 19200, or 38400 baud.</p> <p>Note: The baud rate of 38400 can only be used if the Internal test is disabled and you are testing one port at a time.</p>
Char Size	Specifies the character length. Choose 5, 6, 7, or 8 characters.
Stop Bit	Specifies the number of stop bits. Choose 1 or 2 bits.
Parity	Specifies the selectable parity. Choose none, odd, or even.
Flow Control	Specifies the selectable flow control. Choose XOnOff, rtscts, or both.
Data Type	Specifies the selectable data type pattern. Choose 0x55555555 (0x55), 0xaaaaaaaa (0xaa), or random.
Serial Port	Specifies the serial port to be tested. The available ports are listed in the Configurations section at the top of the <code>saiptest</code> options menu.
Timeout	Specifies the number of seconds until the test times out. The default is 120 seconds.

---

## saiptest Test Modes

**TABLE 46-3** saiptest Supported Test Modes

Test Mode	Description
Functional (Offline)	Runs the full set of tests.

---

---

## saiptest Command-Line Syntax

*/opt/SUNWvts/bin/saiptest standard\_arguments -o dev=device\_name, M=test\_mode, B=baud\_rate, Size=character\_size, Stop=#of\_stop\_bits, Parity=parity, F=flow\_control, Data=test\_pattern, sp=serial\_port, tout=time\_out*



**TABLE 46-4** saiptest Command-Line Syntax

Argument	Description
<b>dev=</b> <i>device_name</i>	<p>Specifies the asynchronous serial ports of the PCI card slots tested. Since there is no default, you must type a device name—either a board(saip0-16) or an individual port (term/x000-term/x007, where x is a-p):</p> <ul style="list-style-type: none"> <li>•saip0 = the 8 asynchronous serial ports in the first card</li> <li>•saip1 = the 8 asynchronous serial ports in the second card</li> <li>•saip2 = the 8 asynchronous serial ports in the third card</li> <li>•saip3 = the 8 asynchronous serial ports in the fourth card</li> <li>•saip4 = the 8 asynchronous serial ports in the fifth card</li> <li>•saip5 = the 8 asynchronous serial ports in the sixth card</li> <li>•saip6 = the 8 asynchronous serial ports in the seventh card</li> <li>•saip7 = the 8 asynchronous serial ports in the eighth card</li> <li>•saip8 = the 8 asynchronous serial ports in the ninth card</li> <li>•saip9 = the 8 asynchronous serial ports in the tenth card</li> <li>•saip10 = the 8 asynchronous serial ports in the eleventh card</li> <li>•saip11 = the 8 asynchronous serial ports in the twelfth card</li> <li>•saip12 = the 8 asynchronous serial ports in the thirteenth card</li> <li>•saip13 = the 8 asynchronous serial ports in the fourteenth card</li> <li>•saip14 = the 8 asynchronous serial ports in the fifteenth card</li> <li>•saip15 = the 8 asynchronous serial ports in the sixteenth card</li> </ul> <p>or</p> <p><i>/dev/term/x00m</i></p> <p>Where x is a-p and m is 0 to 7 (any of the asynchronous serial ports in PCI card slots).</p>
<b>M=</b> <i>test_mode</i>	Specifies Internal, 25_pin_loopback, or Echo_TTY test mode.
<b>B=</b> <i>baud_rate</i>	Sets the baud rate to 110, 300, 600, 1200, 2400, 4800, 9600, 19200, 38400; the default is 9600.
<b>stop=</b> <i>#of_stop_bits</i>	Toggles the number of stop bits between 1 or 2. The default is 1.
<b>size=</b> <i>character_size</i>	Sets the character size as an integer between 5 and 8.
<b>Parity=</b> <i>parity</i>	Specifies the parity as none, odd, or even. The default is none.
<b>F=</b> <i>flow_control</i>	Specifies flow control as xonoff, rtscts, or both.
<b>Data=</b> <i>test_pattern</i>	Specifies test pattern as 0x55555555, 0xAAAAAAAA, or random.
<b>sp=</b> <i>serial_port</i>	Specifies the terminal and asynchronous serial port number, such as term/a00n (sp=n).
<b>tout=</b> <i>time_out</i>	Specifies the number of seconds until the test times out. The default is 120 seconds.

---

**Note** – 64-bit tests are located in the `sparcv9` subdirectory: `/opt/SUNWvts/bin/sparcv9/testname`. If a test is not present in this directory, then it may only be available as a 32-bit test. For more information refer to “32-Bit and 64-Bit Tests” on page 3.

---

---

**Note** – The `saiptest` error messages are generated when the SunVTS Serial Asynchronous Interface discovers errors. The error descriptions that appear in the VTS interface identify probable causes for the card or test failure, and identify the Field Replaceable Unit (FRU) and recommended action, if possible. The two FRUs under test are: the Serial Asynchronous Interface card, and the patch panel with the cable attached.

---

## Sun Enterprise Cluster 2.0 Network Hardware Test (`scitest`)

---

`scitest` verifies the functionality of the Sun Enterprise Cluster 2.0 by checking the networking hardware. For this test to be meaningful, the cluster must already be configured before the test is run. For details on how to configure the cluster, refer to *Sun Enterprise Cluster 2.0 Hardware Site Preparation, Planning, and Installation Guide*.

`scitest` reads the `/etc/sma.ip` file to determine the target nodes in the cluster. `scitest` mainly uses the Internet Control Message Protocol (ICMP) to test the connections between cluster nodes.

After finding the cluster nodes (targets), `scitest` performs the following tests:

- Random test—sends out 256 packets with random data length and random data.
- Incremental test—sends out packets with length from minimum to maximum packet size using incremental data.
- Pattern test—sends 256 packets of maximum length, where each packet contains one test pattern and all byte patterns (0 to 0xFF) are used.

---

**Note** – `scitest` is a scalable test. The maximum number of instances is two per SCI card.

---

---

### `scitest` Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.

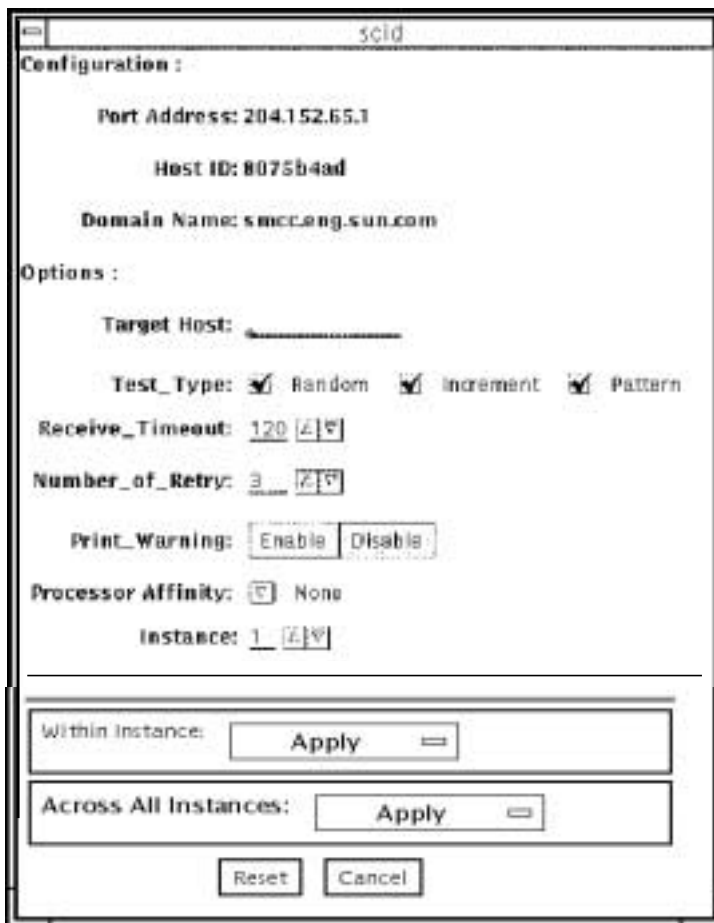


FIGURE 47-1 scitest Test Parameter Options Dialog Box

TABLE 47-1 scitest Options

scitest Options	Description
Target Host	Not used.
Receive Timeout field	Specify a number between 0–600 seconds. The default is 120 seconds.
Number of Retries field	The number of retries before an error is flagged. Specify a number between 0–128.
Print Warning	Disabled by default. Choose Enable to see warning errors, such as retry on timeout errors.

---

## scitest Test Modes

Connection, Functional, and Online modes are supported by `scitest`. Different test schemes are performed on the network device based on the mode selected.

TABLE 47-2 `scitest` Supported Test Modes

Test Mode	Description
Connection	<code>scitest</code> checks if the device is connected. It searches through all the network interfaces for the specified device name. <code>scitest</code> finds the device not connected the test fails, otherwise, it returns <code>device is connected</code> .
Functional (Offline)	<code>scitest</code> performs all three tests (Random test, Incremental test, and Pattern test) sequentially. It allows you to specify an option in such a way that <code>scitest</code> performs a very stressful test.
Online	Performs the full set of tests.

---

## scitest Command-Line Syntax

```
/opt/SUNWvts/bin/scitest standard_arguments -o dev=interface,test=type,packets=n,pattern=hex,delay=seconds, timeout=seconds,retry=n,warn
```

TABLE 47-3 `scitest` Command-Line Syntax

Argument	Description
dev= <i>interface</i>	Network interface name. The default value is <code>1e0</code> for Ethernet networks.
test= <i>type</i>	The test type. Specify <code>random</code> , <code>increment</code> , or <code>pattern</code> . The default value is <code>random+increment+pattern</code> to run.
packets= <i>n</i>	Number of random/pattern packets. The default is 256.
pattern= <i>hex</i>	Specifies a data pattern in hexadecimal form. The default is all patterns from 0 to <code>0xff</code> .
delay= <i>seconds</i>	Indicates the time between subtests in seconds. The default is 30 seconds.

**TABLE 47-3** `scitest` Command-Line Syntax

---

<b>Argument</b>	<b>Description</b>
<code>timeout=seconds</code>	Indicates the number of seconds to wait before a timeout. The default is 20 seconds.
<code>retry=n</code>	Indicates the number of test timeout retries. The default is three retries.
<code>warn</code>	When enabled, prints warning messages.

---

**Note** – 64-bit tests are located in the `sparcv9` subdirectory: `/opt/SUNWvts/bin/sparcv9/testname`. If a test is not present in this directory, then it may only be available as a 32-bit test. For more information refer to “32-Bit and 64-Bit Tests” on page 3.

---

# Internal I2C Smartcard Reader Test (sc2test)

---

The `sc2test` verifies the proper functioning and integrity of the internal I2C Smartcard reader by testing the `scmi2c(7d)` driver.

---

## sc2test Subtests

The `sc2test` consists of the following subtests:

- Register subtests:

- Register read subtest

- The Register read subtest performs read access to selected `scmi2c` reader registers via `ioctl()`.

- Walking 1s subtest

- The Walking 1s subtest performs walking 1s to selected `scmi2c` reader registers; registers under test are saved and restored.

- AnswerToReset (ATR) subtest

- The `sc2test` initializes the card reader. It will power manage and reset the card. After reset, the test attempts multiple tries to read the ATRs from the insertcard to verify against a list of recognized ATRs. The cards supported are the Cyberflex and Payflex cards.

- APDU unique-ID subtest

- Based on the result of the ATR, the Application Protocol Data Unit (APDU) unique-ID subtest exchanges selected ISO 7816 APDUs between the card and the reader to retrieve the card's unique ID.



---

**Caution** – The `sc2test` cannot run when the `ocfserv` Smartcard server application is running, because the `ocfserv` will have exclusive open on `/dev/scmi2c0`. The `sc2test` detects the `ocfserv` process running and prompts the user to kill `ocfserv`. Also, the `sc2test` cannot run if any other third party Smartcard host application has exclusive open on `/dev/scmi2c0` device.

---



---

**Caution** – The file `/opt/SUNWvts/bin/sc2test.atr` consists of an ATR list for the Cyberflex or Payflex cards supported. You can use an editor program to update the file to include the new ATR.


---

---

## sc2test Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.



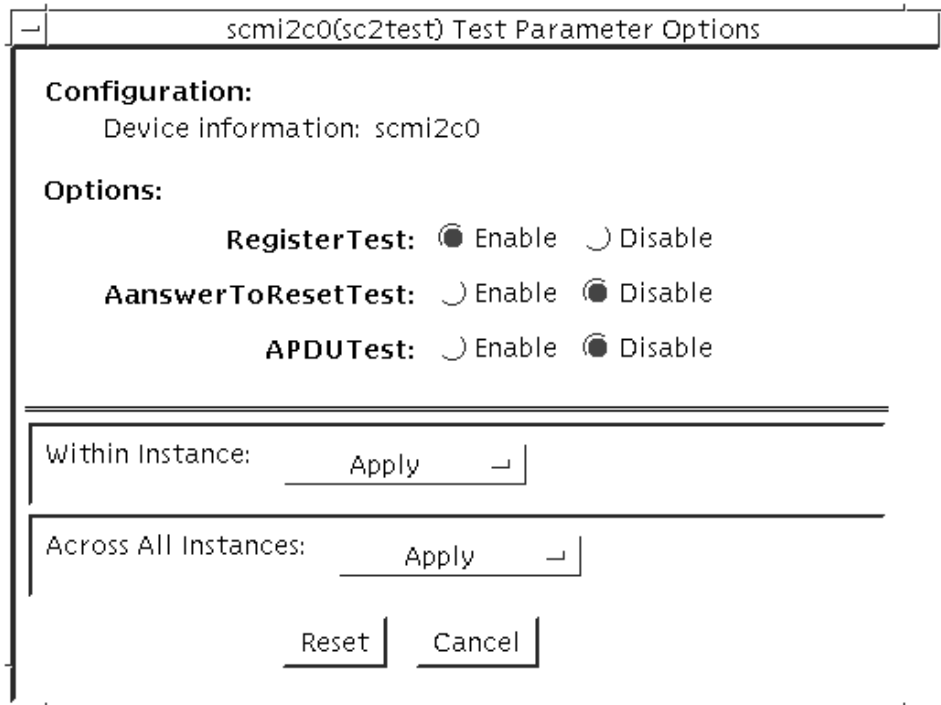

**FIGURE 48-1** `sc2test` Test Parameter Options Dialog Box

**TABLE 48-1** `sc2test` Options

<code>sc2test</code> Options	Description
Register Test	Enables or Disables the Register subtests; the default is Enable
AnswerToReset Test	Enables or Disables the AnswerToReset subtest; the default is Disable
APDU Test	Enables or Disables the APDU subtest; the default is Disable

---

## sc2test Test Modes

TABLE 48-2 sc2test Supported Test Modes

Test Mode	Description
Connection	Performs the Register read and Walking 1s subtests
Functional (Offline)	Performs the Register subtests, AnswerToReset subtest, and the APDU unique-ID subtest

---

## sc2test Command-Line Syntax

```
/opt/SUNWvts/bin/sc2test standard_arguments -o [
[ dev=device_logical_name ]
[ regs=enable/disable ]
[ atr=enable/disable ]
[ apdu=enable/disable ] ]
```

TABLE 48-3 sc2test Command-Line Syntax

Argument	Description
<i>dev=device_name</i>	<i>device_name</i> is the logical device name to be tested, for example, <i>dev=scmi2c0</i>
<i>reg=enable/disable</i>	Enables or disables the Register tests; the default is enable
<i>atr=enable/disable</i>	Enables or disables the ATR test; the default is disable
<i>apdu=enable/disable</i>	Enables or disables the APDU unique-id test; the default is disable

---

**Note** – 64-bit tests are located in the *sparcv9* subdirectory: */opt/SUNWvts/bin/sparcv9/testname*. If a test is not present in this directory, then it may only be available as a 32-bit test. For more information refer to “32-Bit and 64-Bit Tests” on page 3.

---

## SEEPROM Test (`seepromtest`)

---

The `seepromtest` verifies the functionality of the SEEPROM. The probing portion of the `seepromtest` traces the PICL (Platform Information and Control Library) tree and finds the SEEPROM nodes with physical addresses. In addition, the probing portion of `seepromtest` verifies the size of the physical parent of the SEEPROM. Once the probing portion is complete, `seepromtest` reads each byte of the SEEPROM devices to verify that the SEEPROM is the correct size. Finally, the `seepromtest` checks the Read operation of the SEEPROM devices.

---


**Note** – `seepromtest` can only be performed on platforms with one or more SEEPROM physical address in the PICL tree. Currently, `seepromtest` is only supported on the Sun Blade 1000/2000 workstations.

---

---

### `seepromtest` Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.

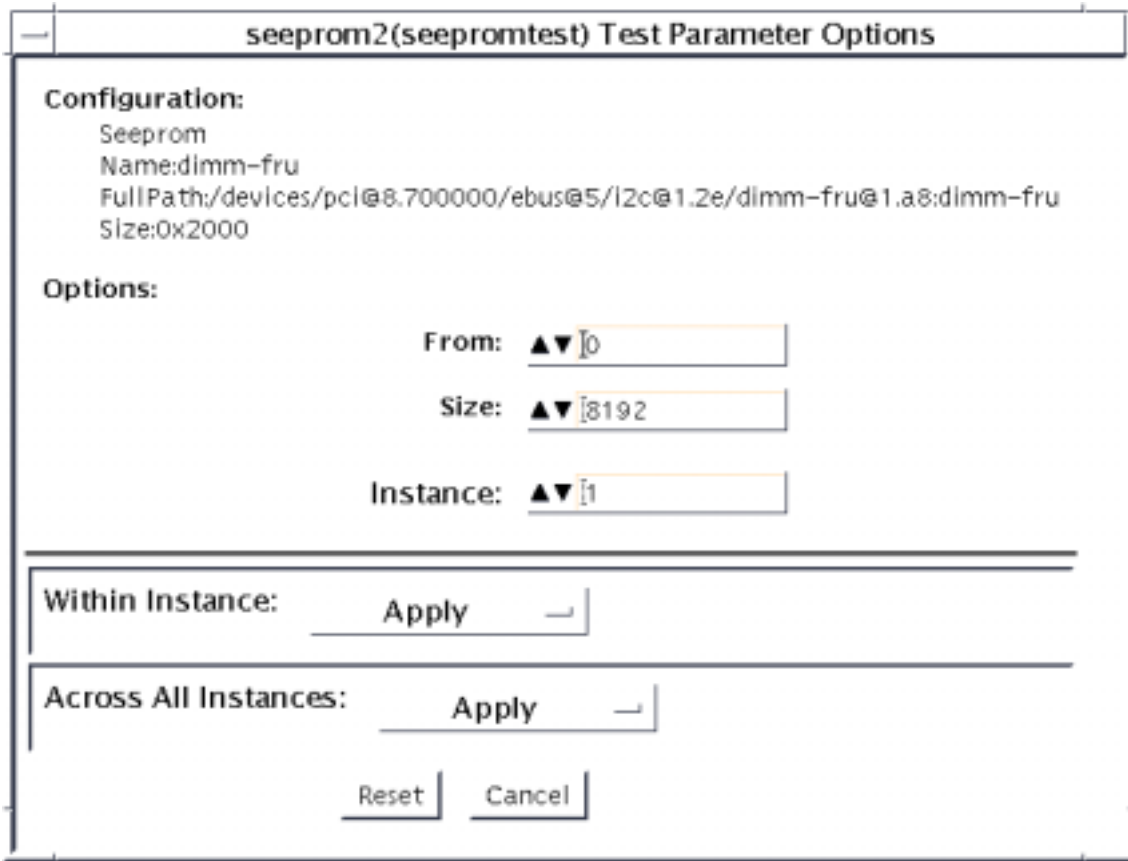

**FIGURE 49-1** seepromtest Test Parameter Options Dialog Box

**TABLE 49-1** seepromtest Options

seepromtest Options	Description
From	Specifies the number from which the offset of the SEEPROM is read.
Size	Specifies the number of bytes to be read from the SEEPROM.

---

# seepromtest Test Modes

**TABLE 49-2** seepromtest Supported Test Modes

Test Mode	Description
Connection	Performs the entire seepromtest.
Functional (Offline)	Performs the entire seepromtest.

---

# seepromtest Command-Line Syntax

```
/opt/SUNWvts/bin/seepromtest standard_arguments [-o  
[ dev=device_name ]  
[ from=number ]  
[ size=number ] ]
```

**TABLE 49-3** seepromtest Command-Line Syntax

Argument	Description
<i>dev=device_name</i>	The name of the SEEPROM device, for example, seeprom0, seeprom1, etc.
<i>from=number</i>	The number from which the offset is read.
<i>size=number</i>	The number of bytes to be read.

SEEPROM devices do not have device names. `seepromtest` assigns a device name such as `seeprom0`, `seeprom1`, `seeprom2`, etc. to identify them. If you do not specify a device name in the command-line syntax, the `seepromtest` lists the device names as `seeprom0`, `seeprom1`, `seeprom2`, etc., and the physical addresses.

When invoked, `seepromtest` displays a list of the SEEPROMs in the system and their usage. The following is an example of invoking `seepromtest` without any arguments. Notice the logical names on the left and physical names on the right.

```
seeprom0 : /devices/.../dimm-fru@1,a0:dimm-fru  
seeprom1 : /devices/.../dimm-fru@1,a4:dimm-fru  
...
```

---

**Note** – 64-bit tests are located in the `sparcv9` subdirectory:  
`/opt/SUNWvts/bin/sparcv9/testname`. If a test is not present in this directory,  
then it may only be available as a 32-bit test. For more information refer to “32-Bit  
and 64-Bit Tests” on page 3.

---

## Environmental Sensing Card Test (`sentest`)

---

`sentest` checks the SCSI Environmental Sensing card (SEN) installed in the SPARCstorage RSM to monitor the enclosure environment. The SEN card monitors the enclosure's over-temperature condition, fan-failures, power-supply failures, and drive activity.

`sentest` verifies the SEN card by first setting each control function to a predetermined value, and then reading it back to verify if the value is correct.

`sentest` verifies the following control functions in the enclosure:


- Alarm (enable/disable)—`sentest` toggles the alarm to the disable state, then to the enable state.
- Alarm time (0-0xff seconds)—`sentest` sets the time (from 0 to 4095), then reads it back to verify the time setting.
- Drive fault LED (DL0-DL6)—`sentest` toggles each LED to its OFF and ON states.

`sentest` is a nonscalable test. It cannot verify the control function settings correctly if another instance is changing the setting.

---

### `sentest` Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.

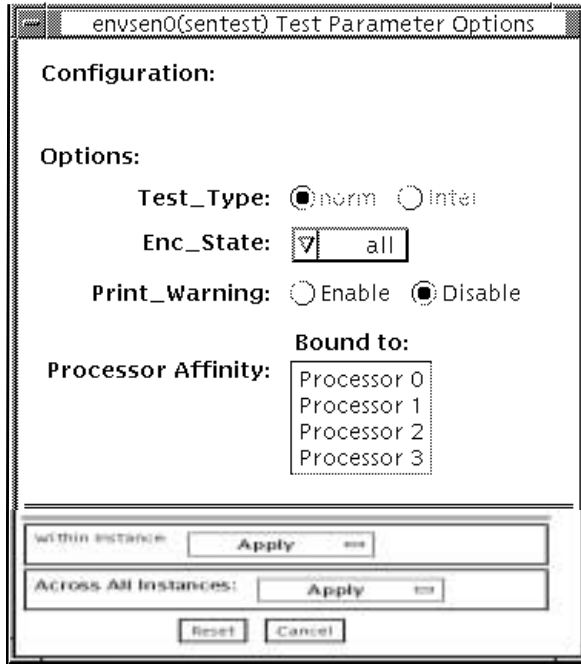

**FIGURE 50-1** `sentest` Test Parameter Options Dialog Box

**TABLE 50-1** `sentest` Options

<code>sentest</code> Option	Description
Test Type	Specifies the test to be performed. <code>Norm</code> test type performs normal testing as alarm enable/disable, alarm time setting, and drive LED on/off testing. Interactive test type reports the current enclosure status.
Enc_state	Specifies which subsystem's status in the enclosure is reported. Default is ALL. This test is only used with the inter test type and in Functional test. The test options are: <ul style="list-style-type: none"> <li>• Alarm enable/disable status</li> <li>• Drive present status</li> <li>• Drive LED status</li> <li>• Power modules status</li> <li>• Fan modules status</li> <li>• Over temperature, abs (abnormal, no immediate attention needed), chk (abnormal, immediate attention needed) status</li> <li>• All of the above</li> </ul>



---

## sentest Test Modes

sentest supports the test modes described in the following table. Each mode performs a different test scheme on the SEN card.

**TABLE 50-2** sentest Supported Test Modes

Test Mode	Description
Connection	Checks the device connection by opening the device. If the device does not open, the device is not connected.
Functional (Offline)	Checks three components within the enclosure. It checks alarm enable/disable, alarm time setting, and the drive LEDs. It does not test the power on/off function (only functions whose values can be changed are tested).

---

## sentest Command-Line Syntax

`/opt/SUNWvts/bin/sentest standard arguments`  
`-o dev=interface, test=type, enc=component`

**TABLE 50-3** sentest Command-Line Syntax

Argument	Description
<code>dev=interface</code>	SEN card device name. The default value is <code>ses0</code> .
<code>test=type</code>	Specifies the test type. Select <code>Norm</code> for normal testing or <code>Inter</code> for interactive testing; the default value is <code>Norm</code> . Possible values are: <code>norm</code> and <code>inter</code> .
<code>enc=component</code>	Indicates which part of the enclosure status is reported. The default value is <code>ALL</code> . Possible values are: <code>enalm</code> , <code>dp</code> , <code>dl</code> , <code>pm</code> , <code>fan</code> , <code>ovt</code> , and <code>ALL</code> .

**Note** – 64-bit tests are located in the `sparcv9` subdirectory:

`/opt/SUNWvts/bin/sparcv9/testname`. If a test is not present in this directory, then it may only be available as a 32-bit test. For more information refer to “32-Bit and 64-Bit Tests” on page 3.



## Soc+ Host Adapter Card Test (socaltest)

---

`socaltest` aids the validation and fault isolation of the SOC+ host adapter card. In the case of a faulty card, the test tries to isolate the fault to the card, the GBIC module, or the DMA between the host adapter card and the host memory.

---

**Note** – Do not run `socaltest` and `enatest` at the same time, otherwise test failures might occur.

---

---

**Note** – Do not run `socaltest` and `disktest` at the same time, otherwise test failures might occur.

---

---

**Note** – Do not run `socaltest` with a high system load. Running this test with a large number of instances and concurrency might cause resource limitations that cause this test to fail.

---

---

### socaltest Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.

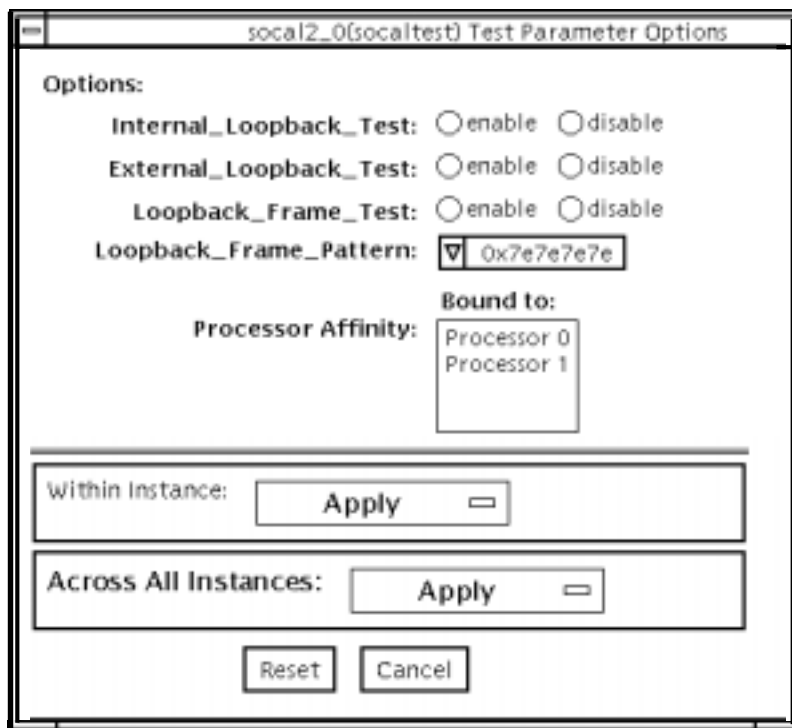


FIGURE 51-1 socialtest Test Parameter Options Dialog Box

**TABLE 51-1** `socaltest` Options

<code>socaltest</code> Options	Description
Internal Loopback test	<p>Checks the host adapter card and the direct memory access (DMA) with the host system. This is accomplished as follows:</p> <ol style="list-style-type: none"><li>1. A frame is created in the host adapter local memory, sent out through the SOC+ transmitter and internally looped back to the SOC+ receiver. The received data is compared with the original data.</li><li>2. A frame is created in the host adapter local memory, sent out through the SOC+ transmitter and looped back through the SERDES (serialiser-deserialiser) chip on the host adapter card. The received data is compared with the original data.</li><li>3. A frame is created in the host main memory, transferred through the DMA to the host adapter transmitter, looped back within the SOC+ chip, and transferred from the receiver to the host main memory through the DMA. The received frame is compared with the original transmitted frame, which tests the host memory to the host adapter DMA path.</li></ol>
External Loopback test	<p>The External Loopback test verifies the proper functioning of the GBIC module. A frame is created in the host adapter local memory, sent out and looped back through the external loopback connector attached to the port. If the external loopback test is run together with the internal loopback test, the DMA path is also tested by creating a frame in host main memory, transferring it to the host adapter through the DMA, looping it back through the external loopback connector and transferring the received frame back to the host main memory by DMA.</p>
Loopback Frame test	<p>Sends out a buffer initialized with the selected pattern and compares it with the looped back frame. It passes if the two compare and fails if they do not.</p>
Loopback Frame Pattern	<p>List of selectable patterns for the Loopback Frame test.</p>

**Note** – In addition to the tests described above, `socaltest` also tests the basic functions of the SOC+ chip, the on-board XRAM, and the host control buffer by invoking the appropriate tests implemented in firmware.

---

# socaltest Test Modes

**TABLE 51-2** socaltest Supported Test Modes

Test Mode	Description
Functional (Offline)	Runs the full set of tests.

---

**Note** – You cannot run the Internal and External Loopback tests if the port is connected to a disk array.

---

---

# socaltest Command-Line Syntax

`/opt/SUNWvts/bin/socaltest standard arguments`  
`-o dev=device name,e1b=enabled|disabled,i1b=enabled|disabled,1bf=enable|disable,ptn=pattern`

**TABLE 51-3** socaltest Command-Line Syntax

Argument	Description
<code>dev=device name</code>	The name of the socal port to be tested.
<code>e1b=enabled disabled</code>	Enables or disables the External Loopback test.
<code>i1b=enabled disabled</code>	Enables or disables the Internal Loopback test.
<code>1bf=enable disable</code>	Enables or disables the Loopback Frame test.
<code>ptn=pattern</code>	Specify the pattern in hexadecimal, for example: <code>ptn=0x7e7e7e7e</code>

---

**Note** – 64-bit tests are located in the `sparcv9` subdirectory: `/opt/SUNWvts/bin/sparcv9/testname`. If a test is not present in this directory, then it may only be available as a 32-bit test. For more information refer to “32-Bit and 64-Bit Tests” on page 3.

---

## Serial Parallel Controller Test (spiftest)

---

The `spiftest` accesses card components such as the cd-180 and ppc2 chips, and the serial and parallel ports through the serial parallel controller device driver.

---

### spiftest Hardware Requirements

Before running the SunVTS system exerciser, make sure you install the cards to be tested and the device driver. You should also reboot your system with the `boot -r` command to reconfigure the system and allow the SunVTS kernel to recognize the new driver.

---

**Note** – The `spiftest` must be run in Intervention mode.

---

The following minimum hardware configuration is required to successfully run the Internal test:

- SBus-based SPARC desktop system with an SBus slot
- Serial parallel controller card, installed in one of the SBus slots

The following hardware is also required to run the other SunVTS serial parallel controller tests:

- Serial parallel controller patch panel (part number 540-2007)
- 96-pin loopback plugs (part number 370-1366)
- 25-pin serial loopback plugs (part number 540-1558)
- RS-232 serial cables (part number 530-1685)
- TTY terminal

---

# spiftest Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.

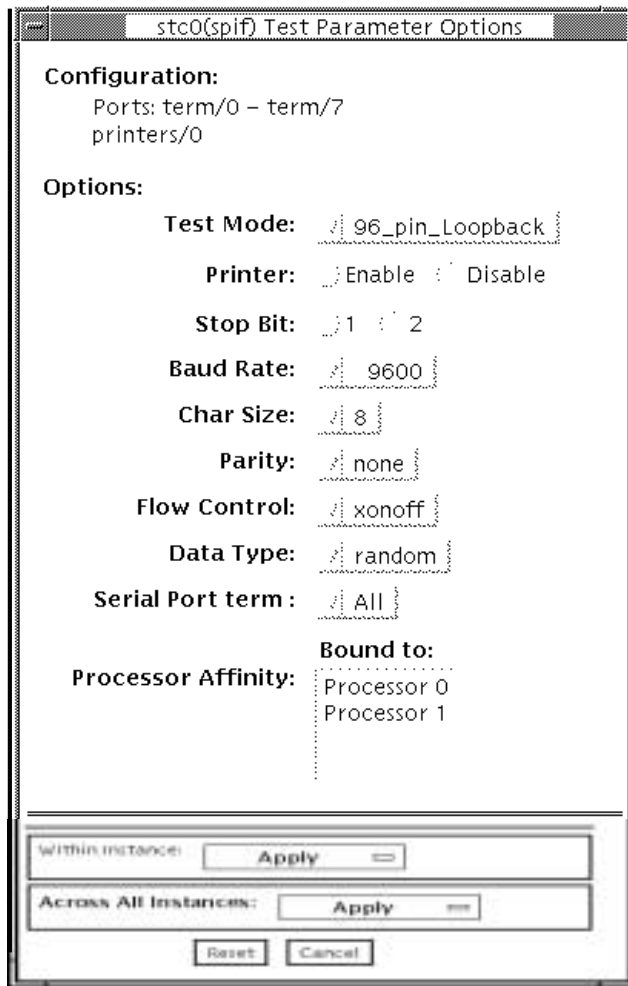


FIGURE 52-1 spiftest Test Parameter Options Dialog Box



The Configuration section of the Options dialog box displays the serial ports available for the SPC/S board. The available ports are listed in the table below.

**TABLE 52-1** `spiftest` Serial Ports for the SPC/S Board

Board Number	Board Device	Serial Ports	Parallel Ports
0	stc0	term/0-7	printers/0
1	stc1	term/8-15	printers/1
2	stc2	term/16-23	printers/2
3	stc3	term/24-31	printers/3
4	stc4	term/32-39	printers/4
5	stc5	term/40-47	printers/5
6	stc6	term/48-55	printers/6
7	stc7	term/56-63	printers/7

The `spiftest` options are described in the table below.

**TABLE 52-2** `spiftest` Options

<code>spiftest</code> Option	Description
96-pin Loopback (LB)	Provides data transmission, full-modem loopback, and parallel port loopback testing. You <i>must</i> attach a 96-pin loopback connector (part number 370-1366) to the card before running this test (see Appendix A, “96-Pin Female Loopback Connector” section).
Internal test	Performs a quick internal check of the serial parallel controller card(s) installed in SBus slots. You do not need to attach anything to the card(s) to perform this test.
25-pin Loopback (LB)	Provides full-duplex transmission and full-modem loopback testing of the serial port selected in the Serial Port selection of this menu. You <i>must</i> attach the 25-pin Loopback plug to the serial port on the Serial Parallel Controller Patch Panel that is being tested (see Appendix A). This test cannot be run concurrently with the Echo-TTY option enabled.

**TABLE 52-2** spiftest Options

spiftest Option	Description
Echo-TTY	<p>Checks the proper operation of the serial port selected in the Serial Port section of this menu by echoing characters typed on a TTY terminal keyboard to the TTY terminal screen. The characters you type should be displayed on the TTY screen.</p> <p>Note: TTY connection to the <code>spif</code> serial port requires corresponding character size setup. For example, if a TTY attachment is running with 8-bit character size, then the <code>spiftest</code> option 'Char Size' should also be set to 8 bits. If you do not type within two minutes, this test will time-out. Terminate testing by pressing Control-C. After a short delay, the Status window updates the Pass Count.</p> <p>This test cannot be run concurrently with the 25-pin Loopback subtest.</p>
Printer	<p>Sends the entire ASCII character set to a parallel printer. You must attach a parallel printer to the parallel port on the Serial Parallel Controller patch panel. Observe the printer output to validate the test.</p>
Baud Rate	<p>Specifies the baud rate; choose 110, 300, 600, 1200, 2400, 4800, 9600, 19200, or 38400 baud.</p> <p>Note: The baud rate of 38400 can only be used if one port is tested at a time and the Internal Test is disabled.</p>
Char Size	<p>Indicates character length. Choose 5, 6, 7, or 8 characters.</p>
Stop Bit	<p>Specifies the number of stop bits. Choose 1 or 2 bits.</p>
Parity	<p>Specifies the selectable parity. Choose none, odd or even.</p>
Flow Control	<p>Specifies the selectable flow control. Choices are <code>xonoff</code>, <code>rtscts</code>, or <code>both</code>.</p>
Data Type	<p>Specifies the selectable data type pattern. It can be <code>0x55555555</code> (<code>0x55</code>), <code>0xaa555555</code> (<code>0xaa</code>), or <code>random</code>.</p>
Serial Port	<p>Specifies the serial port to be tested. The available ports are listed in the Configurations section at the top of the <code>spiftest</code> Options dialog box.</p>

You can also change the test options by modifying the `/opt/SUNWvts/bin/.customtest` file. See "Adding Your Own Tests" in *.customtest* in the *SunVTS User's Guide*.

---

# spiftest Test Modes

TABLE 52-3 spiftest Supported Test Modes

Test Mode	Description
Functional (Offline)	Runs the full set of tests.

---

---

# spiftest Command-Line Syntax

`/opt/SUNWvts/bin/spiftest standard_arguments -o dev=device_name, M=test_mode, Ptr=enable/disable, B=baud_rate, Size=character_size, S=#of_stop_bits, Parity=parity, F=flow_control, Data=test_pattern, sp=serial_port`

TABLE 52-4 spiftest Command-Line Syntax

Argument	Description
<code>dev=device_name</code>	Specifies the serial ports in SBus card slots (0-63) being tested. Since there is no default, you must type a board name: <ul style="list-style-type: none"><li>• <code>stc0</code>—the 8 serial ports in the first card</li><li>• <code>stc1</code>—the 8 serial ports in the second card</li><li>• <code>stc2</code>—the 8 serial ports in the third card</li><li>• <code>stc3</code>—the 8 serial ports in the fourth card</li><li>• <code>stc4</code>—the 8 serial ports in the fifth card</li><li>• <code>stc5</code>—the 8 serial ports in the sixth card</li><li>• <code>stc6</code>—the 8 serial ports in the seventh card</li><li>• <code>stc7</code>—the 8 serial ports in the eighth card</li></ul>
<code>M=test_mode</code>	Specifies <code>Internal</code> , <code>96_pin_loopback</code> , <code>25_pin_loopback</code> , or <code>Echo_TTY</code> test mode.
<code>Ptr=printer_test</code>	Enables or disables the Printer subtest.
<code>B=baud_rate</code>	Sets the baud rate to 110, 300, 600, 1200, 2400, 4800, 9600, 19200, or 38400. The default is 9600. To use the 38400 rate, only one port at a time can be tested, and the <code>Internal</code> test must be disabled.
<code>stop=#of_stop_bits</code>	Toggles the number of stop bits between 1 or 2. The default is 1.
<code>size=character_size</code>	Sets character size as a number between 5 and 8.
<code>P=parity</code>	Specifies the parity as none, odd, or even. The default is none.

**TABLE 52-4** spiftest Command-Line Syntax

---

Argument	Description
<b>F</b> = <i>flow_control</i>	Specifies flow control as <code>xonxoff</code> , <code>rtscts</code> , or both.
<b>Data</b> = <i>test_pattern</i>	Specifies test pattern as <code>0x55555555</code> , <code>0xAAAAAAAA</code> , or <code>random</code> .
<b>sp</b> = <i>serial_port</i>	Specifies the terminal and serial port number, such as <code>term/3</code> .

---

---

**Note** – 64-bit tests are located in the `sparcv9` subdirectory: `/opt/SUNWvts/bin/sparcv9/testname`. If a test is not present in this directory, then it may only be available as a 32-bit test. For more information refer to “32-Bit and 64-Bit Tests” on page 3.

---

## Serial Ports Test (`sptest`)

---

`sptest` checks the system's on-board serial ports (`zs[0,1]`, `zsh[0,1]`, `se[0,1]`, `se_hdlc[0,1]`), as well as any multi-terminal interface (ALM2) boards (`mcp[0-3]`). Data is written and read in asynchronous and synchronous modes utilizing various loopback paths.

Intervention mode must be enabled to run this test.

This test is nonscalable.

`sptest` dynamically probes for `se`, `zs`, `zsh`, and `se_hdlc` ports for testing. All error messages, warning messages, and options in the test parameter options dialog box are set dynamically to the correct port names. For example, if a system's a and b ports are su ports, and c and d are se ports, `sptest` will test ports c and d. The test parameter dialog box will also show the correct ports in its menu options, such as "Test Type: c to d," etc. See FIGURE 53-1 for an example of the test parameter dialog box.

TABLE 53-1 Serial Port Tests

Mode	Description
Asynchronous testing	<p>This mode uses the asynchronous communication protocol as described in the <code>zs(7D)</code> and <code>se(7D)</code> man pages. The <code>termio(7I)</code> interface is used for configuring port characteristics.</p> <p>The user can select the loopback paths to use, the amount of data to transfer, and the baud rate to use.</p> <p>The test writes and reads data through the loopback path and compares the data to the original data. The test first sends a single character. If no errors or timeouts are detected, the rest of the data is simultaneously written and read, then compared.</p>
Synchronous testing	<p>This mode uses the synchronous hdlc-framing interface as described in the <code>zsh(7D)</code> and <code>se_hdlc(7D)</code> man pages. Data is written and read in checksum-protected packets.</p> <p>The user can select the loopback paths to use and the clock rate.</p> <p>The synchronous test runs in three phases:</p> <ol style="list-style-type: none"><li>1. The first phase looks for activity on the port. If no activity is detected for at least four seconds, the test proceeds to the next phase. If activity is detected <code>sptest</code> exits with an error.</li><li>2. The second phase attempts to send and receive one packet. If no packets are detected after five attempts, the test exits with an error. If a packet is returned, the result is compared to the original. If the length and content of the packets do not match exactly, the test exits with an error.</li><li>3. The third phase attempts to send many packets through the loop. Some packet drops are to be expected especially on a heavily loaded system. The test allows a percentage of the packets to be dropped. The user can set the drop tolerance between 0 percent and 99 percent. The default is 20 percent. If the system is extremely busy then the drop tolerance should be increased. Each packet is compared with its original for length and content. If a mismatch is detected, the test exits with an error.</li></ol>

---

# sptest Synchronous Testing Software Requirements

If you have `zs(7D)` serial ports on your machine, the synchronous devices may not exist. Look in the `/dev` directory for `zsh` (where `h=0` and/or `1`). If they do not exist, you can create them.

## ▼ To Create Synchronous Devices

1. Verify that the following two lines are in the `/etc/devlink.tab` file. If they are not there, add them.

```
type=ddi_pseudo;name=zsh zsh\M0
type=ddi_pseudo;name=clone;minor=zsh zsh
```



---

**Caution** – The white spaces in the lines above *must* be a single tab character before and after the `zsh` variables; using spaces will not work.

---

2. When the lines have been added to the `/etc/devlink.tab` file, change directories to `/kernel/drv` and run the `add_drv zsh` command.
3. If this command does not work, run the `rem_drv zsh` command and then run the `add_drv zsh` command again.

---

## sptest Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.

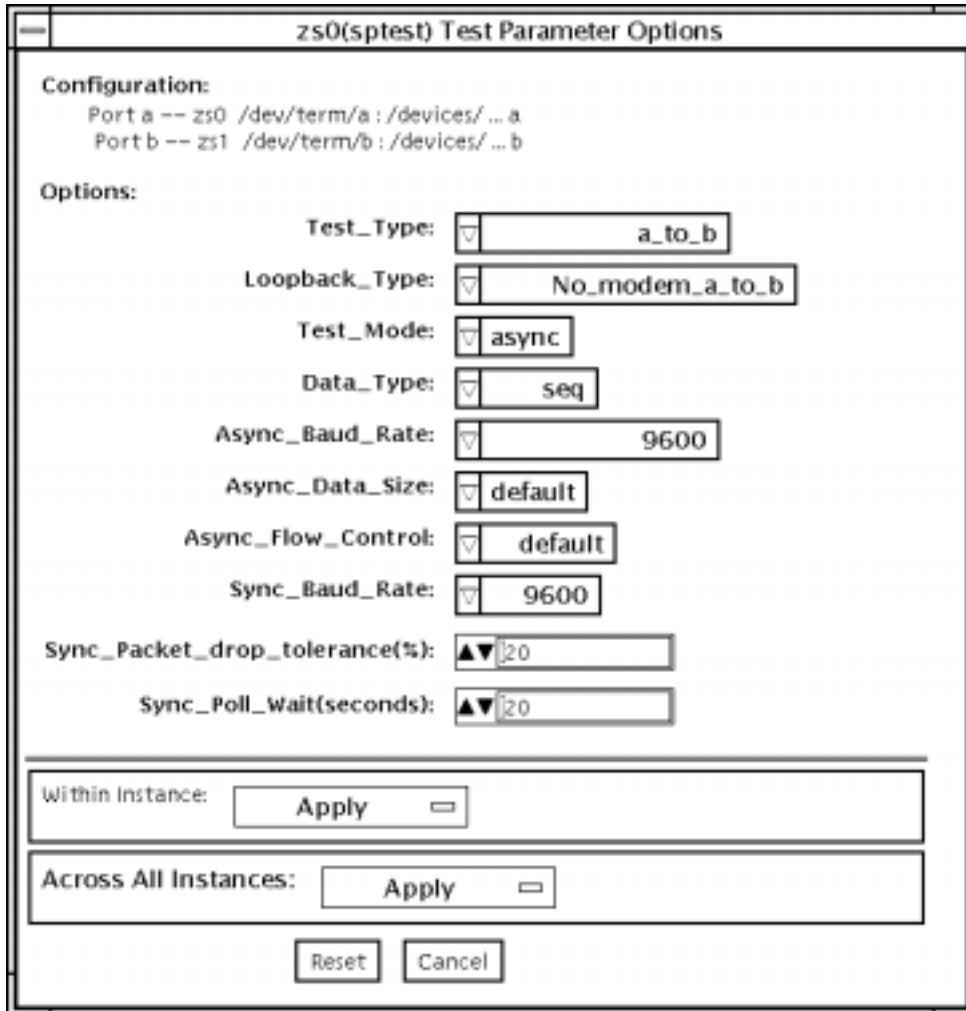


FIGURE 53-1 sptest Test Parameter Options Dialog Box

There are a variety of loopback paths available. The internal loopback paths do not require an external connector. Their availability depends on the device. The *zs*(7D) device has an internal path for synchronous mode and the *se*(7D) device has an internal path for asynchronous mode. The external loopback connectors are described in Appendix A. The exact type of loopback connector required depends on the system I/O panel.

Some examples of loopback test commands follow. For a full description of command-line syntax, see “sptest Command-Line Syntax” on page 321.



To test `/dev/term/b` from the command line using internal loopback, type the following:

```
% ./sptest -vf -o M=async,T=b,L=I
```

To test `/dev/term/b` from the command line using external loopback, type:

```
% ./sptest -vf -o M=async,T=b,L=P
```

For `zs(7D)` machines, the internal loopback path is only active in synchronous mode:

```
% ./sptest -vf -o M=sync,T=b,L=I
```

The following table lists the possible devices for each port. Below, “a” represents port a of the CPU board (motherboard), “b” represents port b of the CPU board, and the device names of the ports for each CPU board are listed.

**TABLE 53-2** `sptest` Serial Devices

CPU	Port	Async Device	Sync Device
0	a	zs0 or se0	zsh0 or se_hdlc0
	b	zs1 or se1	zsh1 or se_hdlc1
1	a	zs2	zsh2 *
	b	zs3	zsh3 *
2	a	zs4	zsh4 *
	b	zs5	zsh5 *

\* Currently, only `zsh0` and `zsh1` are supported by device drivers.

**TABLE 53-3** sptest Options

sptest Options	Description
Test Type	Selects how the test will run. Test options include: <ul style="list-style-type: none"><li>• a= runs the test on port a</li><li>• b= runs the test on port b</li><li>• a_b= runs the test on ports a and b sequentially</li><li>• a_b_concurrent= runs the test on port a and port b concurrently.</li></ul>
Loopback Type	Selects the loopback test. Options include: <ul style="list-style-type: none"><li>• Internal is an internal path for a, b, a_b, and a_b_concurrent test types.</li><li>• Plug_a_to_a_b_to_b is an external loopback plug for a, b, a_b, and a_b_concurrent test types.</li><li>• no_modem_a_to_b is an external loopback cable for a_to_b and a_to_b_concurrent test types.</li><li>• Modem_a_to_b is an external loopback cable with a modem attached to generate synchronous Transmit and Receive clocks in synchronous mode. The modem a_to_b external loopback type is intended for Sun internal use only. It requires custom equipment that is not available.</li></ul>
Test Mode	Selects the mode to put the serial device into before running the test. The modes available are Asynchronous, Synchronous or Both. When Both is selected, the test runs in Asynchronous mode then Synchronous mode.
Data Type	Selects the data pattern to transfer. The user can select: <ul style="list-style-type: none"><li>• Random</li><li>• Sequential</li><li>• Alphanumeric</li><li>• 0x00-0xff</li></ul>
Async Baud Rate	Selects the baud rate for Asynchronous mode testing. The valid rates are: 110, 300, 600, 1200, 4800, 9600, 19200, 38400, 57600, 76800, 115200, 153600, 230400, 307200, 460800, and ALL. The default rate is 9600 baud. Some platforms can only support up to 38400 or 76800. The test will return an error if you try to use a higher baud rate then is supported. For baud rates greater then 153600 the serial line drivers must be set for RS-423 mode and not RS-232 mode. The RS-423 and RS-232 modes are usually selected by a hardware jumper on the motherboard. Consult your hardware installation manual for more information.
Async Data Size	Selects the total number of bytes to transfer in Asynchronous mode. This can range from 1 to 10000.

**TABLE 53-3** sptest Options

---

<b>sptest Options</b>	<b>Description</b>
Async Flow Control	Selects the type of flow control to use in asynchronous mode testing. The user can select <code>Hardware (RTS/CTS)</code> , <code>Software (XON/XOFF)</code> or <code>None</code> . The default depends on the loopback type. Software flow control is not allowed on <code>a</code> , <code>b</code> , <code>a_b</code> , or <code>a_b_concurrent</code> loopback types.
Sync Baud Rate	Selects the device generated clock rate for synchronous mode testing. The valid rates are from 110 to 230400. The rate does not have to be a specific value as required for async mode baud rates. The default rate is 9600. Some platforms can only support up to 38400 or 76800. The test will return an error if you try to use a higher rate than is supported. For rates greater than 100000 the serial line drivers must be set for RS-423 mode and not RS-232 mode. The RS-423 and RS-232 modes are usually selected by a hardware jumper on the motherboard. Consult your hardware installation manual for more information.
Sync Packet Drop Tolerance	Selects the tolerance level of Synchronous mode dropped packets during the <code>many_packets</code> subtest. The default is 20 percent. The valid range is from 0 percent to 99 percent. Some packet drops are expected especially at higher clock rates and on a heavily loaded system.
Sync Poll Wait	Selects the number of seconds in additional time to wait for a Synchronous mode packet to be sent. Additional time may be needed when there is heavy system activity and time-outs are being detected. In general, the user can decrease the value to 0 when the system load is light or increase the value when there is a heavy system load.

---

---

# sptest Test Modes

sptest supports the following SunVTS test modes.

**TABLE 53-4** sptest Supported Test Modes

Test Mode	Description
Connection	Attempts to open the port to determine if the device is connected. If it fails and the port is not busy, the test exits with an error. If it is successful or fails with a busy or exclusive use error, then the port is considered connected, and the test passes.
Functional (Offline)	Performs the selected loopback test.
Online	Performs the full set of tests.

---

# sptest Command-Line Syntax

```
/opt/SUNWvts/bin/sptest standard_arguments -o dev=device_name, porta=port_name, T=test_type, L=loopback_type, M=mode, D=data_pattern, AB=async_baud_rate, S=async_data_size, par=none|even|odd, BS=1|10|100|1000|3000|5000|10000, F=flow_control, B=sync_baud_rate, DP=sync_drop_tolerance, P=sync_poll_wait
```

TABLE 53-5 sptest Command-Line Syntax

Argument	Description
<b>dev=device_name</b>	Identifies the serial port(s) to test. There is no default value. You must specify a device name such as: <ul style="list-style-type: none"><li>• se0,</li><li>• zs0, zs1</li><li>• zs2, zs3</li><li>• ..., ...</li></ul>
<b>porta=port_name</b>	The name of the first device of a serial device pair. The default is a.
<b>T=test_type</b>	Specifies the type of test to run: <ul style="list-style-type: none"><li>• a= runs the test on port a.</li><li>• b= runs the test on port b.</li><li>• a_b= runs the test on ports a and b sequentially.</li><li>• a_b_concurrent= runs the test on port a and port b concurrently.</li><li>• a_to_b= runs the test from port a to port b.</li></ul>
<b>L=loopback_type</b>	The type of loopback connector attached to ports: <ul style="list-style-type: none"><li>• No_modem_a_to_b</li><li>• Internal_a_to_a_b_to_b</li><li>• Plug_a_to_a_b_to_b</li><li>• Modem_a_to_b</li></ul>
<b>M=mode</b>	The default test mode is asynchronous. Specify one of the following modes: <ul style="list-style-type: none"><li>• asynch</li><li>• synch</li><li>• both</li></ul>
<b>D=data_pattern</b>	Selects the data pattern to transfer. The user can select: <ul style="list-style-type: none"><li>• Random</li><li>• Sequential</li><li>• Alphanumeric</li><li>• 0x00-0xFF</li></ul>

**TABLE 53-5** `sptest` Command-Line Syntax (*Continued*)

Argument	Description
<b>AB=</b> <i>async_baud_rate</i>	Asynchronous baud rate (default = 9600). The valid values are between 110 - 460800.  Note: Some platforms can only support asynchronous baud rates up to 38400 or 76800. For baud rates greater than 153600 the serial line drivers must be set for RS-423 mode and not RS-232 mode.
<b>S=</b> <i>async_data_size</i>	Asynchronous mode total number of bytes to write; from 1 to 10000 bytes.
<b>PAR=</b> <i>none   even   odd</i>	Parity used in the async loop test. Default value is none.
<b>BS=</b> <i>1   10   100   1000   3000   5000   10000</i>	Number of bytes in each write during async loop test. Default value is 100.
<b>F=</b> <i>flow_control</i>	Asynchronous mode flow control: <ul style="list-style-type: none"> <li>• Hardware (RTS/CTS)</li> <li>• Software (xon/xoff)</li> <li>• None</li> </ul>
<b>B=</b> <i>sync_baud_rate</i>	Synchronous baud rate (default = 9600). The valid rates are between 110 - 256000.  Note: Some platforms can only support synchronous rates up to 38400 or 76800. For rates greater than 100000 the serial line drivers must be set for RS-423 mode and not RS-232 mode.
<b>DP=</b> <i>sync_drop_tolerance</i>	Synchronous mode drop packet tolerance (default=20 percent).
<b>P=</b> <i>sync_poll_waitt</i>	Synchronous mode additional wait time during poll (in seconds).

**Note** – 64-bit tests are located in the `sparcv9` subdirectory: `/opt/SUNWvts/bin/sparcv9/testname`. If a test is not present in this directory, then it may only be available as a 32-bit test. For more information refer to “32-Bit and 64-Bit Tests” on page 3.

## SunHSI Board Test (`sunlink`)

---

The `sunlink` test verifies the functionality of the SBus and PCI bus SunHSI™ boards by using the HDLC protocol. `sunlink` initializes and configures the selected channel.

Next, `sunlink` opens a datagram socket and tries to modify the socket to accept `ioctl` communications with the driver, and receive synchronous mode information from it.

`sunlink` then opens the ports, linking the upper and lower layers with `ioctl` calls. After initialization, this test checks for activity before attempting to send or receive data. An error message is returned if activity is detected; otherwise the transmit buffer is filled with random data. Random data is used by default. You may also specify other patterns. The data is then transmitted. If the transmission succeeds, `sunlink` then receives the returned data and verifies that it is identical to what was sent. Finally, statistics about the send and receive are gathered from the socket.

A full `sunlink` test takes approximately eight minutes per port and makes a brief check of the board ports before the actual test begins. If the port is bad, the test immediately aborts and returns an error message.

---

### `sunlink` Test Requirements

This test will not pass unless you install the correct loopback connectors or port to port cables on the ports you are testing. The ports specified for test in the Options dialog box must have loopback connectors attached. See Appendix A for loopback connector part numbers and wiring instructions.

# sunlink Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.

The Configuration field displays the available ports. (See FIGURE 54-1.)

**hihp0(sunlink) Test Parameter Options**

**Configuration:**  
Amount: 400KB  
Ports: 0 1 2 3  
Port type: RS449  
Protocol: HDLC

**Options:**

**Clock Source:**  Baud  External

**Internal Loopback:**  Enable  Disable

**Baud\_Rate:** ▲▼ 100000

**Ports:** ▼ 0+1+2+3

Within Instance: Apply □

Across All Instances: Apply □

Reset Cancel

FIGURE 54-1 sunlink Test Parameter Options Dialog Box



**TABLE 54-1** sunlink Options

sunlink Options	Description
Clock source	Select either the onboard clock or an external clock for use when using sunlink. To use the external clock option, the transmit, receive, and clock data lines must be physically looped back.
Internal Loopback	Enables or disables internal loopback tests. Internal Loopback is only needed when the Loopback setting is not port-to-port, and the clock source is onboard.
Baud Rate	Specifies the bit rate transfer speed from 9600bs to 2.048mbs.
Port	Specifies the loopback type—simple single external port loopback, multiple external port loopback, and port-to-port external loopback.

---

## sunlink Loopback Connectors

Refer to Appendix A of this manual for information on SunLink™ loopback cables and loopback connectors. Refer to the High Speed Serial Interface hardware manuals for information on null modem cables.

---

# sunlink Test Modes

**TABLE 54-2** sunlink Supported Test Modes

Test Mode	Description
Functional (Offline)	Runs the full set of tests.

---

# sunlink Command-Line Syntax

`/opt/SUNWvts/bin/sunlink standard_arguments -o dev=device_name,p=port#,  
P=data_pattern,brate=speed_n,I,C=clocksource`

**TABLE 54-3** sunlink Command-Line Syntax

Argument	Explanation
<code>dev=device_name</code>	Specifies the device to be tested. Use <code>hih0</code> for the HDLC protocol.
<code>p=ports</code>	Specifies the port number to be tested.
<code>P=data_pattern</code>	Specifies the <i>data_pattern</i> as one of the following: <ul style="list-style-type: none"><li>• <code>c</code>—Character (0x55)</li><li>• <code>i</code>—Incrementing</li><li>• <code>d</code>—Decrementing</li><li>• <code>r</code>—Random (default)</li></ul>
<code>brate=speed_n</code>	Specifies the bit rate transfer speed from 9600bs to 2.048mbs.
<code>I</code>	Enables internal loopback for HSI.
<code>c=clocksource</code>	Specifies the clock source value as one of the following: <ul style="list-style-type: none"><li>• <code>B</code>—Onboard clock source</li><li>• <code>E</code>—External clock source</li></ul>

The following is a typical command-line syntax for testing a SunHSI board:

```
# /opt/SUNWvts/bin/sunlink -o dev=hih0,P=0+1+2+3,brate=100000
```

This command tests the internal loopback for ports 0, 1, 2, and 3. It does not run for the port to port internal loopback test.

---

**Note** – 64-bit tests are located in the `sparcv9` subdirectory:

`/opt/SUNWvts/bin/sparcv9/testname`. If a test is not present in this directory, then it may only be available as a 32-bit test. For more information refer to “32-Bit and 64-Bit Tests” on page 3.

---



## SunPCi II Test (`sunpci2test`)

---

The `sunpci2test` tests the SunPCi™ II card, which is a PC processor embedded in an add-on card. This test consists of approximately 150 POST routines that perform diagnostic, hardware detection, and initialization functions. This test issues a reset, then launches POST in the SunPCi II BIOS to check the devices. Finally, the `sunpci2test` runs bridge and system diagnostics tests.

---

### `sunpci2test` Test Requirements

Before running the test, the X-window for Microsoft Windows must be shut down. If this is not done, the test will not launch.


#### ▼ To Shut Down Microsoft Windows and the SunPCi II Card:

1. **Click Start button in Microsoft Windows.**
2. **Click Shut Down.**  
The shutdown window appears. Wait for the “It is now safe to shut off your PC” message.
3. **Select “File” from the SunPCi window.**
4. **Select “Exit” from the file menu.**
5. **Click OK.**

---

## sunpci2test Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.

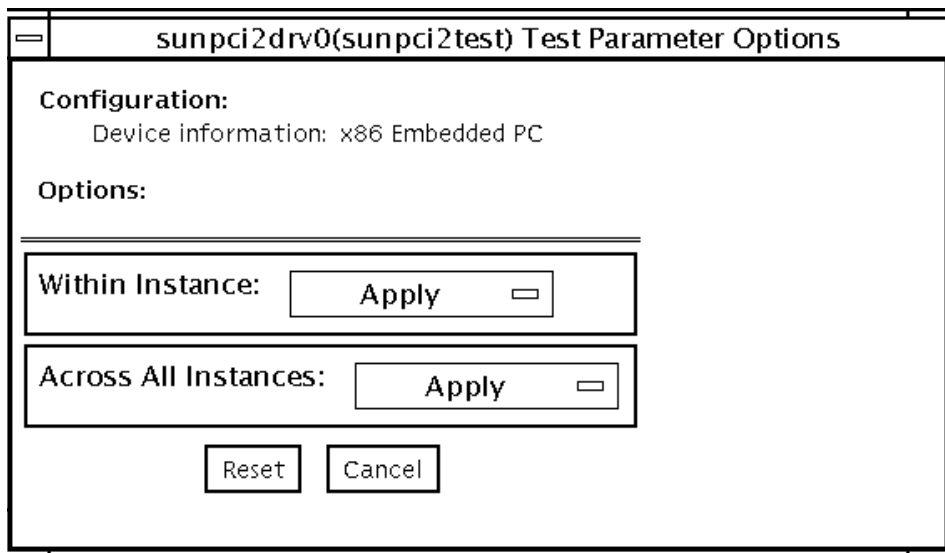

**FIGURE 55-1** sunpci2test Test Parameter Options Dialog Box

sunpci2test only runs with the default parameters in place. Thus, this test does not allow any options to be configured specifically for an individual system. The number of instances is preset to 1 (the default value), as only one local copy of the test is supported.

---

## sunpci2test Test Modes

**TABLE 55-1** sunpci2test Supported Test Modes

Test Mode	Description
Connection	Runs the full set of tests.
Functional (Offline)	Runs the full set of tests.

---

## sunpci2test Command-Line Syntax

`/opt/SUNWvts/bin/sunpci2test` *standard\_arguments*

---

**Note** – There are no test-specific options for sunpci2test.

---

**Note** – 64-bit tests are located in the sparcv9 subdirectory:

`/opt/SUNWvts/bin/sparcv9/testname`. If a test is not present in this directory, then it may only be available as a 32-bit test. For more information refer to “32-Bit and 64-Bit Tests” on page 3.

---





## SuperI/O Test (`sutest`)

---

`sutest` checks the on-board system serial ports (`su[0,1]`). Data is written and read in asynchronous mode, using various loopback paths. You can select the loopback paths to use, the amount of data to transfer, and the baud rate.

The test writes and reads data through the loopback path and compares the data to the original data. The test first sends a single character. If no errors or timeouts are detected, the rest of the data is simultaneously written and read, then compared.

This test uses the asynchronous communication protocol. The `termio(7I)` interface is used for configuring port characteristics.

For CPU 0, port a on the CPU board (motherboard) uses the `su0` asynchronous device, while port b uses `su1`.

Intervention mode must be enabled to run this test.

This test is nonscalable.

---

## Loopback Connectors

This test requires null modem and plug connectors, which are described in Appendix A.

There are a variety of loopback paths available. The exact type of loopback connector required depends on the system I/O panel.

The loopback for the “Null Modem a to b” option is a female-to-female plug. Its pin configuration is the same as the one described for the “9-Pin to 9-Pin Port-to-Port Loopback Cable” on page 394.

The loopback for the “Plug a to a” option is described in the section “9-Pin Female Single-Port Loopback Plug” on page 392.

---

**Note** – `sutest` supports any pair of ports, not just a and b.

---

## sutest Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.

The dialog box is titled "su0(sutest) Test Parameter Options". It is divided into several sections:

- Configuration:**
  - Port a = su0 = /dev/term/a = /devices/...su...a
  - Port b = su1 = /dev/term/b = /devices/...su...b
- Options:**
  - Test\_Type: a\_to\_b
  - Loopback\_Type: Null\_modem\_a\_to\_b
  - Data\_Type: seq
  - Async\_Baud\_Rate: 9600
  - User\_Defined\_Baud\_Rate: 9600
  - Async\_Data\_Size: default
  - Async\_Flow\_Control: default
- Buttons:**
  - Within Instance: Apply
  - Across All Instances: Apply
  - Reset
  - Cancel

**FIGURE 56-1** `sutest` Test Parameter Options Dialog Box

**TABLE 56-1** sutest Options

sutest Options	Description
Test Type	Selects how the test will run. Test options include: <ul style="list-style-type: none"><li>• a= runs the test on port a</li><li>• b= runs the test on port b</li><li>• a_b= runs the test on ports a and b sequentially</li><li>• a_b_concurrent= runs the test on port a and port b concurrently.</li></ul>
Loopback Type	Selects the loopback test. Options include: <ul style="list-style-type: none"><li>• Internal_a_to_a__b_to_b_ is an internal path for a, b, a_b, and a_b_concurrent test types.</li><li>• Plug_a_to_a__b_to_b_ is an external loopback plug for a, b, a_b, and a_b_concurrent test types.</li><li>• null_modem_a_to_b_ is an external loopback cable for a_to_b and a_to_b_concurrent test types.</li></ul>
Data Type	Selects the data pattern to transfer. The user can select: <ul style="list-style-type: none"><li>• Random</li><li>• Sequential</li><li>• Alphanumeric</li><li>• 0x00-0xff</li></ul>
Async Baud Rate	Selects the baud rate for Asynchronous mode testing. The valid rates are: 50, 110, 300, 600, 1200, 4800, 9600, 19200, 38400, 57600, 115200, and ALL. The default rate is 9600 baud. Some platforms can only support up to 38400 or 76800. The test will return an error if you try to use a higher baud rate than is supported. For baud rates greater than 153600 the serial line drivers must be set for RS-423 mode and not RS-232 mode. The RS-423 and RS-232 modes are usually selected by a hardware jumper on the motherboard. Consult your hardware installation manual for more information.
User Defined Baud Rate	Allows the user to set new baud rate values for the test. First select the User Defined option from the Async Baud Rate menu. Then enter the new value in the User Defined Baud Rate field.
Async Data Size	Selects the total number of bytes to transfer in Asynchronous mode. This can range from 1 to 10000.
Async Flow Control	Selects the type of flow control to use in asynchronous mode testing. The user can select Hardware (RTS/CTS), Software (XON/XOFF) or None. The default depends on the loopback type. Software flow control is not allowed on a, b, a_b, or a_b_concurrent loopback types.

---

# sutest Test Modes

sutest supports the following SunVTS test modes.

**TABLE 56-2** sutest Supported Test Modes

Test Mode	Description
Connection	Tries to open the port to determine if the device is connected. If it fails and the port is not busy, the test exits with an error. If it is successful or fails with a busy or exclusive use error, then the port is considered connected, and the test passes.
Functional (Offline)	Performs the selected loopback test.

---

# sutest Command-Line Syntax

`/opt/SUNWvts/bin/sutest standard_arguments -o dev=device_name, porta=port_name, T=test_type, L=loopback_type, D=data_pattern, AB=baud_rate, BS=write_size, F=flow_control`

**TABLE 56-3** sutest Command-Line Syntax

Argument	Explanation
<code>dev=device_name</code>	Identifies the serial port(s) to test. There is no default value. You must specify a device name such as <code>su0</code> .
<code>porta=port_name</code>	The name of the first device of a serial device pair. The default is <code>a</code> .
<code>T=test_type</code>	Specifies the type of test to run: <ul style="list-style-type: none"><li>• <code>a=</code> runs the test on port <code>a</code>.</li><li>• <code>b=</code> runs the test on port <code>b</code>.</li><li>• <code>a_b=</code> runs the test on ports <code>a</code> and <code>b</code> sequentially.</li><li>• <code>a_b_concurrent=</code> runs the test on port <code>a</code> and port <code>b</code> concurrently.</li><li>• <code>a_to_b=</code> runs the test from port <code>a</code> to port <code>b</code>.</li></ul>

**TABLE 56-3** `sutest` Command-Line Syntax (*Continued*)

Argument	Explanation ( <i>Continued</i> )
<b>L</b> = <i>loopback_type</i>	The type of loopback connector attached to ports: <ul style="list-style-type: none"><li>• <code>Internal_a_to_a_b_to_b</code></li><li>• <code>Null_modem_a_to_b</code></li><li>• <code>Plug_a_to_a_b_to_b</code></li></ul>
<b>D</b> = <i>data_pattern</i>	Selects the data pattern to transfer. The user can select: <ul style="list-style-type: none"><li>• <code>Random</code></li><li>• <code>Sequential</code></li><li>• <code>Alphanumeric</code></li><li>• <code>0x00-0xFF</code></li></ul>
<b>AB</b> = <i>baud_rate</i>	Asynchronous baud rate (default = 9600). The valid values are between 110 - 460800.  Note: Some platforms can only support asynchronous baud rates up to 38400 or 76800. For baud rates greater than 153600 the serial line drivers must be set for RS-423 mode and not RS-232 mode.
<b>BS</b> = <i>write_size</i>	Asynchronous mode write size; from 1 to 10000 bytes.
<b>F</b> = <i>flow_control</i>	Asynchronous mode flow control <ul style="list-style-type: none"><li>• <code>Hardware</code> (RTS/CTS)</li><li>• <code>Software</code> (xon/xoff)</li><li>• <code>None</code></li></ul>

**Note** – 64-bit tests are located in the `sparcv9` subdirectory: `/opt/SUNWvts/bin/sparcv9/testname`. If a test is not present in this directory, then it may only be available as a 32-bit test. For more information refer to “32-Bit and 64-Bit Tests” on page 3.



## System Test (`systemst`)

---

The `systemst` checks the overall functionality of a Sun system by exercising the CPU, I/O, and Memory channels simultaneously. The test ensures the concurrency of the different channels by the use of Solaris threads. The test aims at stimulating failures that might be caused due to the interaction of the various different hardware modules in the system. It is very stressful on the CPU, and stresses the parallel computational capability of a multiprocessor system.

---

### `systemst` Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.

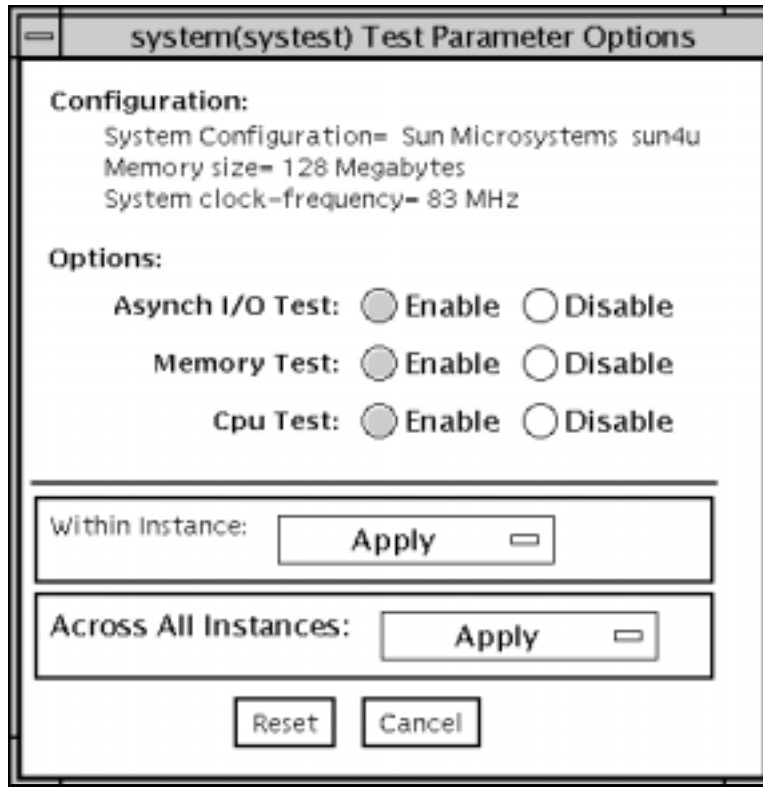


FIGURE 57-1 `systemtest` Test Parameter Options Dialog Box

---

**Note** – Users are advised to not use the Processor Affinity option for this test. Doing so reduces the effectiveness of the test.

---



---

# systemst Test Modes

**TABLE 57-1** `systemst` Supported Test Modes

Test Mode	Description
Connection	Performs the Connection subtest.
Exclusive	Performs only the <code>systemst</code> (full test).

---

# systemst Command-Line Syntax

`/opt/SUNWvts/bin/systemst standard_arguments -o -io=Enable/Disable  
-mem=Enable/Disable, -cpu=Enable/Disable, -dev=system`

**TABLE 57-2** `systemst` Command Line Syntax

Argument	Description
<code>io=Enable/Disable</code>	Enables or Disables the Asynch I/O Test
<code>mem=Enable/Disable</code>	Enables or Disables the Memory Test
<code>cpu=Enable/Disable</code>	Enables or Disables the Cpu Test
<code>dev=system</code>	Specifies the pseudo device name

---

**Note** – 64-bit tests are located in the `sparcv9` subdirectory:

`/opt/SUNWvts/bin/sparcv9/testname`. If a test is not present in this directory, then it may only be available as a 32-bit test. For more information refer to “32-Bit and 64-Bit Tests” on page 3.

---



## Tape Drive Test (tapetest)

---

The `tapetest` synchronous I/O test writes a pattern to a specified number of blocks (or, for a SCSI tape, writes to the end of the tape). The `tapetest` then rewinds the tape and reads and compares the data just written. The `tapetest` asynchronous I/O test sends a series of up to five asynchronous read/write requests to the tape drive, writing to the tape and then reading and comparing the data. The terms asynchronous and synchronous referred to here, and in the “method” field are not related to the scsi messaging terms of the same name. The `tapetest` file test writes four files to the tape and then reads them back, comparing the data. For tape library testing, the pass count is incremented only after all tapes in the library have been tested. The read/write algorithms are enhanced for DLT tape by using a random data pattern (1.5:1 compression) and a more robust read compare algorithm. Some default parameters have also changed.

---

### tapetest Test Requirements

If you have a tape drive in your system, load a blank writable tape (scratch tape) before you start SunVTS. If you fail to do this, the `tapetest` option may display `drive type:unknown` on the option menu for the `tapetest`.

---

### tapetest Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.

tapetest supports 4-mm, 8-mm, DLT, 1/4-inch cartridge, and 1/2-inch front-load tape drive testing. The options available for each of the tape devices differ slightly. An example of the Options dialog box for a device is shown in FIGURE 58-1.

The Async I/O subtest uses the asynchronous read and write feature of the Solaris tape driver to exercise tape drives. In read-only mode the test sends a maximum of four asynchronous read packets, each with a random size and a random offset, to the tape drive. The test then waits for all outstanding I/O activity to complete before issuing another round of packets. This process continues until the whole area being tested has been covered. In read-write mode, one write packet is issued for every four read packets to ensure a spot check of the write operation. The area of the tape to be tested is written to first in order for the test to work correctly. This test is only supported under the Solaris 2.6 and Solaris 7-9 operating environments and compatible releases.

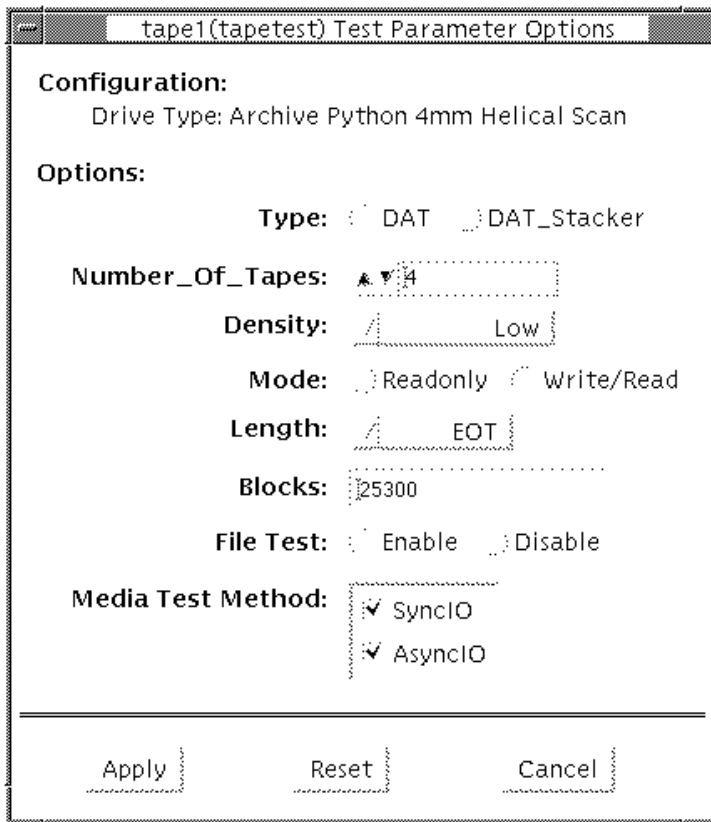


FIGURE 58-1 tapetest Test Parameter Options Dialog Box

---

**Note** – This test does not immediately stop after being disabled.

---

---

**Note** – Selecting non-default options can significantly increase the run time for the test.

---

---

**Note** – The Options dialog box for the 1/4-inch, 1/2-inch, DLT, and 8-mm tape drives differ slightly from FIGURE 58-1.

---

**TABLE 58-1** tapetest Options

tapetest Options	Description
Type	Normal tape drive or tape library (stacker).
# of Tapes	The number of tapes in the tape library. tapetest registers a single tape library pass only after all tapes in the library pass.
Density	<p>The following settings are available for most tape drives:</p> <ul style="list-style-type: none"><li>• Low—Tests the l tape device.</li><li>• Medium—Tests the m tape device.</li><li>• Compression—Tests the c tape device.</li><li>• All—Tests the l, m, and c tape devices.</li></ul> <p>For half-inch tape drives, the available settings are 800, 1600, and 6250 BPI (blocks per inch).</p> <p>For certain QIC drives, select QIC-11 (1-byte block ID) mode, QIC-24 (4-byte block ID) mode, or Both.</p> <p>Note: On a DLT drive, the l and m settings both use no compression. tapetest does not support changing DLT capacity settings indicated on the front panel.</p>
Mode	<p>If you enable Write/Read mode, the test first writes to the tape and then reads it back to compare. If you enable Read_Only mode, the test assumes the tape has been properly written and merely reads and compares. This mode is useful to check proper head alignment.</p> <p>Note: If a read only pass is attempted and the tape was not previously written by tapetest, using the same test parameters currently set, a “Big Read Failure” will occur.</p>

**TABLE 58-1** tapetest Options

tapetest Options	Description
Length	<p>The amount of the tape to be tested. The choices are:</p> <ul style="list-style-type: none"> <li>• EOT: The default; tests to the entire tape.</li> <li>• Long: The SCSI tape tests 70,000 blocks of the tape.</li> <li>• Short: Only the first 1000 blocks are tested.</li> <li>• Specified: You must type the number of blocks to be tested in the # of blocks field.</li> </ul>
# of Blocks	<p>If you select Specified under the Length option, you must type the number of blocks you want to test.</p>
Blocksize	<p>Block size specification. This option is only available for Tandberg QIC tape drives. There are two possible values. 512-bytes is for use with older tape media that have transfer size restrictions, while 64-kbytes is for use with current, high-capacity tape media.</p> <p>Note1: This option is only available in command line interface mode.</p> <p>Note2: With patches 110278-01 or 110211-01 applied, DLT writes either a 512 byte or 65536 byte block depending on how this parameter is set.</p>
File Test	<p>The tape file test sequence is as follows:</p> <ol style="list-style-type: none"> <li>1. Writes three files.</li> <li>2. Rewinds.</li> <li>3. Reads part of the first file.</li> <li>4. Forward spaces to the start of the second file.</li> <li>5. Reads the second file.</li> <li>6. Forward spaces to the start of the third file.</li> <li>7. Tries to read to the end of that file for SCSI tapes only. The tape file test tries to backspace to the start of the second file and read it.</li> </ol>
Retension	<p>When enable is selected, the program retensions the tape.</p>
Media Test Method	<ul style="list-style-type: none"> <li>• Sync I/O—tapetest reads and or writes the number of blocks selected in Length.</li> <li>• Async I/O—tapetest makes four asynchronous read requests to the tape drive. If read and write testing is selected, one asynchronous write request is also sent. The test continues after completing the requests.</li> </ul> <p>Note – When testing Tandberg QIC drives, Async I/O testing is restricted to read-only due to asynchronous behavior differences with other tape drives.</p> <p>Note: This option is not associated with the synchronous data transfer request SCSI message. It is only synchronous or asynchronous in nature because the numbers of reads and writes are not synchronous to each other. The SDTR message is not invoked.</p>

---

# tapetest Test Modes

The `tapetest` supports the following test modes. It performs different test schemes on the tape device, according to the mode you select.

**TABLE 58-2** `tapetest` Supported Test Modes

Test Mode	Description
Connection	<code>tapetest</code> verifies that the drive can be opened and that the drive type can be determined. If both checks are successful, or if the drive is currently busy, then the test passes. The <code>tapetest</code> fails if the open operation is unsuccessful for any reason other than the drive is busy.
Functional (Offline)	<code>tapetest</code> checks the status, rewinds the tape, erases and retensions it. If the device is a cartridge tape, <code>tapetest</code> writes a pattern to <code>nblks</code> or <code>eot</code> (default), rewinds the tape, and then reads and compares of the pattern. On the other hand, if the device is busy or if no tape cartridge can be found in the drive, the test cannot run and fails.
Online	<code>tapetest</code> verifies that the drive can be opened and that the drive type can be determined. If both checks are successful, then the test passes. The <code>tapetest</code> fails if the open operation is unsuccessful for any reason or if the drive is busy.

---

# tapetest Command-Line Syntax

```
/opt/SUNWvts/bin/tapetest standard_arguments -o dev=device_name,  
s=block_count,d=density,m=mode,l=length,method=method,ft=enables/disables,  
ret=enables/disables,dat=dat_type,8mm=8mm_type,num=magazine_size,  
blocksize=block_size
```

**TABLE 58-3** `tapetest` Command-Line Syntax

Argument	Explanation
<code>dev=device_name</code>	Specifies the <code>device_name</code> of the tape drive (required).
<code>s=block_count</code>	Specifies the number of blocks to be tested.
<code>d=density</code>	Specifies the density of the tape to open.
<code>m=mode</code>	Enables either the Write_Read or Read_Only tests.
<code>l=length</code>	Specifies the length of the test (EOT, Specified, Long, or Short).

**TABLE 58-3** tapetest Command-Line Syntax (*Continued*)

Argument	Explanation ( <i>Continued</i> )
<b>method=method</b>	Specifies the media test method (SyncI/O and or AsyncI/O) used.  Note: This option does not invoke the SCSI message “synchronous data transfer request. It is only asynchronous or synchronous in nature.
<b>ft=enables/disables</b>	Enables or disables the File test.
<b>ret=enables/disables</b>	Enable or disables tape retention.
<b>dat=dat_type</b>	If you are testing a digital audio tape drive, specify whether it is a regular DAT drive or a DAT stacker. The choices are DAT and DAT_Stacker.
<b>8mm=8mm_type</b>	If you are testing an 8-mm tape drive, specify whether it is a regular 8-mm tape drive or a tape library. The command line choices are 8mm and 8mm_Library.
<b>num=magazine_size</b>	If you are testing a tape library, specify the magazine size.
<b>blocksize= block_size</b>	This option is only available on a Tandberg QIC drive and DLT drives. Specify whether to use a 64 kbyte block transfer or a 512 byte block transfer. Use 512 bytes when testing older media in the drive. DLT supports 512 byte and 65536 byte modes

---

**Note** – 64-bit tests are located in the `sparcv9` subdirectory: `/opt/SUNWvts/bin/sparcv9/testname`. If a test is not present in this directory, then it may only be available as a 32-bit test. For more information refer to “32-Bit and 64-Bit Tests” on page 3.

---



## S24 Frame Buffer Test (`tcxtest`)

---

Through a series of protocol, memory, acceleration, and colormap tests, `tcxtest` checks the functionality of the S24 Frame Buffer SBus card used on the SPARCstation 5 and checks the FSV (fast SBus video) ASIC on the SPARCstation 4 motherboard.

---

**Note** – Disable all screen savers before testing any graphics device. Type `xset s off` at a UNIX prompt to disable the Solaris screen saver.

---

For instructions on testing frame buffers, see “Testing Frame Buffers” on page 8.

---

### `tcxtest` Test Groups

`tcxtest` has four distinct test groups.

AFX Protocol tests (in 8/16/32/64-bit mode):

- WRC

Frame Buffer Memory tests (in 8/16/32/64-bit14 mode):

- address
- constant
- random

Acceleration tests (both User and Raw modes):

- blit
- stip

Colormap and Cursor tests:

- cursor (does not apply to SPARCstation4)
- colormap

# tcxtest Subtests

TABLE 59-1 tcxtest Subtests

tcxtest Subtests	Description
WRC	By performing multiple writes and reads, and then verifying the results, the WRC test exercises the FIFO inside the S24 chip. The WRC test is composed of these three subtests: <code>test_afx_alt_wr</code> , <code>test_memafx</code> , and <code>test_afx_random</code> . If these tests fail, they print an error message showing the expected and observed data.
Test_afx_alt_wr	This test performs 16 writes to alternative pages, for example, WR (Page1), WR (Page2), WR (Page1+off), WR (Page2+off), and so on. It then reads back the data and compares it with the expected results. This test also writes to the frame buffer space 16 times, followed by a write to a different page in the frame buffer space. The test then reads this data back and verifies it with the expected results.
Test_memafx	<p>The CPU in the SWIFT chip has closely coupled interfaces for the DRAM and the AFX bus. This test checks the arbitration between the two accesses.</p> <p>This test performs a number of alternating writes to the AFX and the CPU memory. After writing to different locations, the test reads and verifies the data. By performing an access across the page boundaries, the test covers both the cached and non-cached accesses.</p>
Test_afx_random	<p>After writing to one page in the DRAM memory, the test performs a few random writes/reads to random locations in the AFX space. The test then writes to a different page in the DRAM space, where it performs random accesses.</p> <p>This test does not perform any data verification, it just checks to see if any of these random accesses caused a time out.</p>
Constant	This test writes a data pattern to the whole memory. This pattern is read back and compared with the expected data. Once the memory fill operation is completed, the test reads the memory back and verifies that the value read is correct.
Address	This test writes a data pattern (which is same as the value of the address) to the whole memory. This pattern is then read back to verify that it is the correct value.

**TABLE 59-1** `tcxtest` Subtests

<code>tcxtest</code> Subtests	Description
Random	This test writes a random data pattern to the whole memory. This pattern is read back and compared with the expected data. After the memory fill operation is completed, the test reads the memory and verifies the values read are correct.
Blit	This test has two parts; the raw <code>blit</code> test and the user <code>blit</code> test. The raw <code>blit</code> test draws a 64x64x24 pixel image at the top-left corner of screen. Next it <code>blits</code> the image to the screen. The destination images are read back and compared with the original image to verify the raw <code>blit</code> operation has run correctly. The user <code>blit</code> test draws a 64x64x24 pixel image at the top left corner of screen. It then <code>blits</code> the image to the screen. The destination images are read back and compared with the original image. The user <code>blit</code> test is the same as the raw <code>blit</code> test, except the user <code>blit</code> test uses the user data space for the <code>blit</code> command.
Stip	This test performs numerous corner cases for stipple. The test writes to the destination with different data values using a stipple operation. The destination data is read back and verified. For the fast SBus video (SV), the following is checked: <ul style="list-style-type: none"> <li>• Walks 1 through pixel mask.</li> <li>• Walks 1 through ROP bits.</li> <li>• Walks 1 through destination byte.</li> <li>• Walks 1 through IDX byte.</li> </ul>
Cursor (does not apply to SPARCstation 4)	This test performs a data register regression test. It writes a walking 1 pattern to the cursor data registers. The data is then read back and verified with the expected results. The test is repeated using a walking 0 as the data pattern
Colormap	Loads all locations in the colormap with varying values of RGB.  Note: If the system being tested has a monochrome or greyscale monitor, visual color problems are undetectable.

## `tcxtest` Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.

FB locking is the only test parameter option for this test. See “Testing Frame Buffers” on page 8 for details.

1. Click enable or disable to configure frame buffer locking, etc.

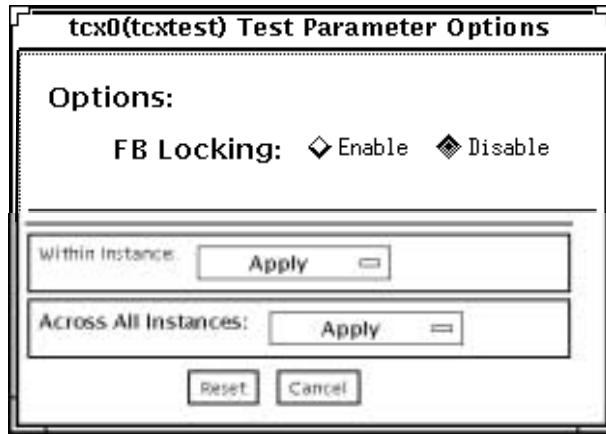


FIGURE 59-1 tcctest Test Parameter Options Dialog Box

---

## tcxtest Test Modes

**TABLE 59-2** tcxtest Supported Test Modes

Test Mode	Description
Functional (Offline)	Runs the appropriate subtests for the hardware platform being tested.

---

## tcxtest Command-Line Syntax

`/opt/SUNWvts/bin/tcxtest standard_arguments -o dev=device_name,lock=  
E(nable)|D(isable), x=bit_mode,T=test,s=[dfb8,dfb24,dfb32]`

**TABLE 59-3** tcxtest Command-Line Syntax

Argument	Explanation
<code>dev=device_name</code>	Specifies the filename of the device to be tested, for example, <code>dev=tcx0</code> .
<code>lock= E(nable) D(isable)</code>	Enables or disables the window system locking option. See “Testing Frame Buffers” on page 8 for details. Do not use when device is the window system display.

**TABLE 59-3** `tcxtest` Command-Line Syntax (Continued)

Argument	Explanation
<code>x=bit_mode</code>	Specifies the data transfer size. Supported values are: <ul style="list-style-type: none"><li>• 8byte</li><li>• 16short</li><li>• 32long</li><li>• 64double word</li></ul>
<code>T=test</code>	Specifies a particular test. To specify an individual test, replace <code>test</code> with: <ul style="list-style-type: none"><li>• a=Address</li><li>• c=Constant</li><li>• r=Random</li><li>• b=Blit</li><li>• s=Stipple</li><li>• h=Cursor</li><li>• w=WRC</li></ul> <p>Note: When you select either the <code>Blit</code> or <code>Stipple</code> test, both the <code>User</code> and <code>Raw</code> mode tests are run.</p>
<code>s=[dfb8, dfb24, dfb32]</code>	Specifies which frame buffer memory space to use. <ul style="list-style-type: none"><li>• <code>-dfb8</code>—Dumb frame buffer 8-bit space. Memory is accessed only by bytes.</li><li>• <code>-dfb24</code>—Dumb frame buffer 24-bit space. Memory is accessed only by 24-bit reads and writes.</li><li>• <code>-dfb32</code>—Dumb frame buffer 8-bit space. Memory is accessed by 8-bit reads and writes.</li></ul>

**Note** – 64-bit tests are located in the `sparcv9` subdirectory: `/opt/SUNWvts/bin/sparcv9/testname`. If a test is not present in this directory, then it may only be available as a 32-bit test. For more information refer to “32-Bit and 64-Bit Tests” on page 3.

## USB Audio Test (`usbaudiotest`)

---

The `usbaudiotest` verifies the proper functioning of the hardware and software components of the USB audio subsystem. Specifically, the `usbaudiotest` tests the USB audio devices: USB microphones and speakers.



---

**Caution** – This test works with exclusive access devices (only one process or application available at a time).

---

---

### `usbaudiotest` Subtests

`usbaudiotest` uses the following subtests:

- **Tone subtest**

The Tone subtest is only performed in the Connectivity test mode. This subtest is user-interactive in that the user must listen when the test is performed. This subtest generates two seconds of sound which is output to the speakers.

- **Record/Play subtest**

This subtest performs a simple check that records and plays one second of random data at 8kHz sampling. It simply reads random data from the USB microphone port and plays back to the USB speakers.

- **Audio subtest**

This subtest plays a 30 second music file which is output to the speakers. This is a partially user-interactive test. If there are no system call errors, the user must decide, by listening, if the test passed or failed. Things to listen for are distortion or lack of music.

# usbdiotest Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.

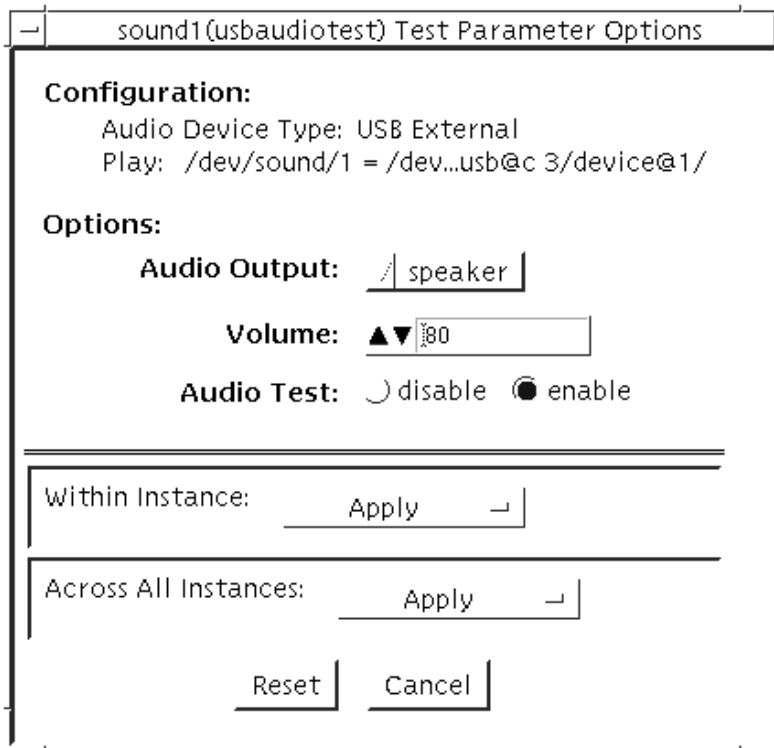


FIGURE 60-1 usbdiotest Test Parameter Options Dialog Box

TABLE 60-1 usbdiotest Options

usbdiotest Options	Description
Volume:	Specifies the volume of 0 to 255; the default is 80
Audiotest:	Can be set to “enable” or “disable” to perform the audio music test; the default is “enable”



---

## usbaudiotest Test Modes

**TABLE 60-2** usbaudiotest Supported Test Modes

Test Mode	Description
Connection	Outputs two seconds of sound to the speakers
Functional	(1) Records and Plays test (2) Performs Audio Music test (optional)

---

---

## usbaudiotest Command-Line Syntax

```
/opt/SUNWvts/bin/usbaudiotest standard_arguments -p 0 -sf -o  
O=speaker,V=n,M=enable,dev=sound1
```

**TABLE 60-3** usbaudiotest Command-Line Syntax

Argument	Description
<b>dev</b> =audio_device	Specifies the audio device to be tested; the default is /dev/sound/1, /dev/sound/1ctl
<b>M</b> =enable disable	Enables or disables the Music Play test; the default is “enable”
<b>MF</b> =filename	Selects an optional music file; the default is music.au
<b>V</b> =n	Volume control, n is 0 to 255; the default is 80

---

**Note** – 64-bit tests are located in the `sparcv9` subdirectory:

`/opt/SUNWvts/bin/sparcv9/testname`. If a test is not present in this directory, then it may only be available as a 32-bit test. For more information refer to “32-Bit and 64-Bit Tests” on page 3.

---



## Sun USB Keyboard Test (usbkbttest)

---

`usbkbttest` verifies whether the keyboard(s) attached to the USB bus are USB compliant. The test will flash the LEDs of a compliant keyboard.

---

### `usbkbttest` Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.

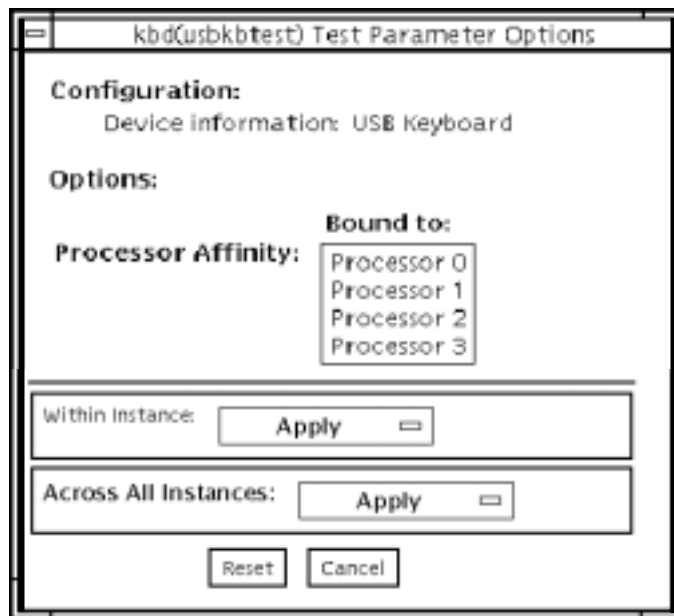


FIGURE 61-1 usbkbtest Test Parameter Options Dialog Box

---

# usbkbtest Test Modes

**TABLE 61-1** usbkbtest Supported Test Modes

Test Mode	Description
Connection	Runs the full test.
Functional (Offline)	Runs the full test.

---

# usbkbtest Command-Line Syntax

```
/opt/SUNWvts/bin/usbkbtest standard_arguments  
-o dev=kbd|usb/hidn
```

**TABLE 61-2** usbkbtest Command-Line Syntax

Argument	Description
dev= <i>kbd usb/hidn</i>	Specifies what kind of keyboard is being tested. Use <i>kbd</i> for console keyboards and <i>usb/hidn</i> for other keyboards, where <i>n</i> is the instance number.



## USB Parallel Port Printer (usbppptest)

---

The `usbppptest` verifies the proper functioning and integrity of the USB parallel port devices. The test data, either ASCII or a postscript file, is sent to the printer through the USB bulk transfer. The `usbppptest` saves and restores the printer settings.

---

**Note** – The `usbppptest` will not be registered in the Solaris 8 operating environment; it is currently only supported on Solaris 9 software.

---

---

### usbppptest Subtests

The `usbppptest` consists of the following subtests:

- `getdevvid` subtest

The `getdevvid` subtest retrieves the IEEE 1284 ID string of the printer.

- `Printer` subtest

The `Printer` subtest prints strings of ASCII characters (from 0x32 to 0x7e), and can also print the postscript file `ecppdata.ps` to the printer.

## usbppptest Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.

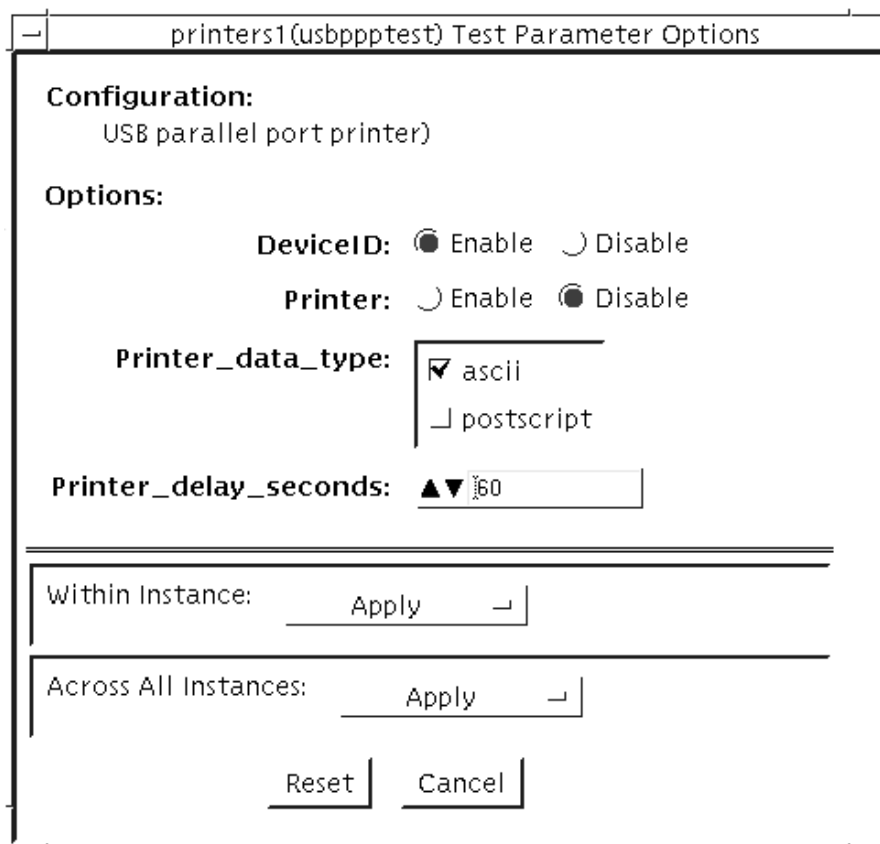


FIGURE 62-1 usbppptest Test Parameter Options Dialog Box



**TABLE 62-1** `usbppptest` Options

<code>usbppptest</code> Options	Description
DeviceID	Specifies the path to the printer
Printer	Enables or Disables the Printer subtest
Printer_data_type	Specifies the test data: <code>ascii</code> , <code>postscript</code> , or both
Printer_delay_seconds	Specifies in seconds, the delay after the Printer subtest is performed

## `usbppptest` Test Modes

**TABLE 62-2** `usbppptest` Supported Test Modes

Test Mode	Description
Connection	In connection mode, only the <code>getdev</code> subtest is performed
Functional (Offline)	In offline mode, the <code>getdev</code> subtest is enabled by default and the Printer subtest is disabled by default

## `usbppptest` Command-Line Syntax

```
/opt/SUNWvts/bin/usbppptest standard_arguments -o [
[ dev=/dev/printer/1 ]
[ getdev=enable/disable ]
[ printer=enable/disable]
[ data=ascii/postscript/ascii+postscript ]
[ pdelay=number_of_seconds ] ]
```

**TABLE 62-3** `usbppptest` Command-Line Syntax

Argument	Description
<code>dev=/dev/printer/1</code>	Specifies the path to the printer
<code>getdev=enable/disable</code>	Enables or disables the <code>getdev</code> subtest

**TABLE 62-3** `usbppptest` Command-Line Syntax

Argument	Description
<code>printer=enable/disable</code>	Enables or disables the Printer subtest
<code>data=ascii/postscript / ascii+postscript</code>	Specifies the test data format
<code>pdelay=number_of_seconds</code>	Specifies in seconds, the delay after the Printer subtest is performed

**Note** – 64-bit tests are located in the `sparcv9` subdirectory: `/opt/SUNWvts/bin/sparcv9/testname`. If a test is not present in this directory, then it may only be available as a 32-bit test. For more information refer to “32-Bit and 64-Bit Tests” on page 3.

## Virtual Memory Test (`vmemtest`)

---

The `vmemtest` checks virtual memory; that is, it tests the combination of physical memory and the swap partitions of the disk(s).

---

**Note** – This test may not stop immediately after being disabled.

---

This test uses the Solaris `valloc` (page aligned) system call to allocate, write, read, and compare virtual memory. These operations normally cause heavy paging activity on the system and simulate a stressful environment for the operating system. This test also detects ECC parity errors, memory read errors, and addressing problems, and displays the corresponding virtual memory addresses on failure.

---

**Note** – Do not run the `vmemtest` with `fwcptest` at the same time on any Sun Blade™ system. This will cause the test to fail.

---

---

### `vmemtest` Swap Space Requirements

Running this test places a significant burden on the operating system, since it uses the majority of swap space available for testing. You should use the `vmemtest` `swap space reserve` option when non-SunVTS test processes are started after SunVTS testing has started. See “Swap Space Requirements” in the *SunVTS User’s Guide* for a complete discussion of swap space requirements.

---

## vmemtest Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.



**FIGURE 63-1** vmemtest Test Parameter Options Dialog Box

**TABLE 63-1** `vmemtest` Options

<b>vmemtest Options</b>	<b>Description</b>
Mode	<p>Two modes are available:</p> <ul style="list-style-type: none"><li>• Regular mode tests the amount of memory and is limited by the amount of physical memory available to the system under test.</li><li>• Page mode tests assign virtual memory one page at a time. Each page is mapped to the temporary file <code>/tmp/vmem.page</code> and is then paged out to storage once test data is written. Next, the temporary page is paged back into memory for a read and compare.</li></ul> <p>When the Stress Test Execution option is selected, the <code>vmemtest</code> allocates the entire assigned system memory (through <code>valloc</code>), writing from beginning to end. The memory is then read back and compared with the original pattern, one long word at a time.</p>
Reserve	<p>The Reserve option specifies the amount of memory to reserve from being tested by <code>vmemtest</code>. The reserved space is used for other processes running concurrently with the or SunVTS tests. The Reserve option can be used to reserve memory in addition to the default. This option applies only to a specific instance. Trying to reserve more memory than what is assigned to be tested by this instance will cause the test to fail.</p>
Test Amount	<p>An amount can be specified to test the virtual memory, instead of the default. Specifying a number greater than the available memory, can cause <code>vmemtest</code> or other running tests to fail.</p>
<code>vmemtest</code> Configuration	<p>The amount of memory listed in the Configuration field is equivalent to the sum of the used and available swap space amounts returned by the <code>swap -s</code> command. It indicates the amount of virtual memory found, rounded up to the nearest Kbyte.</p>
Contiguous Errors	<p>Specifies the number of memory errors that occur on successive memory locations before testing stops.</p>

**TABLE 63-1** `vmemtest` Options

<b>vmemtest Options</b>	<b>Description</b>
Test Method	<ul style="list-style-type: none"> <li>• The default selection is the Sequential test. The whole memory is tested from the beginning address to the end address in a sequence.</li> <li>• Address Random test: Randomly selects memory addresses to test.</li> <li>• Page Striding test: Non-contiguous memory test, implemented sequentially and non-sequentially.               <ul style="list-style-type: none"> <li>—Sequential test: tests from the first page to the last page, with a specified test range. Only one word is tested per page.</li> <li>—Non-sequential test: tests randomly from first to last page, within a specified memory range. Goes back and forth testing one word per page until all pages are tested.</li> </ul> </li> <li>• Block Copy test: Writes and reads data between two memory blocks. Each memory block is half the memory to be tested.</li> <li>• File Caching test: Aimed at improving performance through the use of file caching in the Solaris kernel. This test is useful for large memory configurations. This test takes 30 to 70% less time than the Sequential test method.</li> </ul>
Predefined Pattern	<p>Select one of the following patterns to use for the test:</p> <ul style="list-style-type: none"> <li>• Address—uses the virtual addresses of the tested memory locations.</li> <li>• walk_1—uses a pattern that starts with 0x80000000 through 0x00000001</li> <li>• walk_0—uses a pattern that starts with 0x7fff7fff through 0x7fff7ffe</li> <li>• 0x00000000—uses all ones and zeros for testing</li> <li>• 0x5aa55aa5—uses 0x5aa55aa5 and 0xa55aa55a patterns</li> <li>• 0xdb6db6db—uses 0xdb6db6db and 0x24924924 patterns</li> <li>• Checkerboard—uses 0x55555555 and 0xaaaaaaaa patterns.</li> <li>• UserDefined—uses the pattern that is specified in the User Defined Pattern area (see below).</li> </ul>
User Defined Pattern	<p>Only used if the Predefined Pattern is set to <code>UserDefined</code>. The pattern specified should be in the form of an 8-digit, hexadecimal number such as 0x2a341234.</p>
Instance	<p>Specifies how many copies of the <code>vmemtest</code> test to run.</p>

---

# vmemtest Test Modes

**TABLE 63-2** vmemtest Supported Test Modes

Test Mode	Description
Functional (Offline)	Runs the full set of tests.

In Offline Functional mode, `vmemtest` writes a pattern to an amount of virtual memory specified by the user. Then the data is read back and compared. If there is a miscompare, the data is read again and compared. Whenever there is a miscompare, the virtual address is reported. When there is a miscompare on recomparison, an attempt is made to convert the virtual address to the physical address if the SunVTS diagnostic driver is installed.

---

# vmemtest Command-Line Syntax

```
/opt/SUNWvts/bin/vmemtest standard_arguments -o mode=type, reserve=n,  
amount=n, bdfinfo=n, cerr=number, type1=n, pp1=pattern, type2=n, pp2=pattern,  
type3=n, pp3=patten, type4=n, pp4=pattern, type5=n, pp5=pattern, type6=n, up=  
hex_pattern
```

**TABLE 63-3** vmemtest Command-Line Syntax

Argument	Explanation
<b>mode=</b> Page/Regular	Specifies which mode of the <code>vmemtest</code> to run. Choose: <ul style="list-style-type: none"><li>• <code>Page</code>—tells the write/read memory test to proceed one system memory page at a time.</li><li>• <code>Regular</code>—uses the <code>valloc</code> option to allocate the entire assigned memory, which is read and compared one long word at a time.</li></ul>
<b>reserve=<i>n</i></b>	Specifies the amount of MB of virtual memory to reserve in addition to the default amount.
<b>amount=<i>n</i></b>	Specifies the number of MB of memory to be tested instead of the default (maximum) amount.
<b>bdfinfo=<i>n</i></b>	Provides the board number information for all the CPU/memory boards in the system. For example, if board 0 and board 5 have memory, then the <code>bdfinfo=33</code> ( $2^{**}5+2^{**}0$ ).



**TABLE 63-3** vmemtest Command-Line Syntax

Argument	(Continued)Explanation
<code>cerr=<i>n</i></code>	Specifies the maximum number of contiguous errors to be dumped when a memory error occurs.
<code>type1=<i>value</i></code> <code>pp1=<i>pattern</i></code>	<code>type1</code> is sequential test. The value is Enabled or Disabled. Select from:  <code>address,walk_0,walk_1,Checkerboard,0x00000000,0xffffffff,0x5aa55aa5,0xdb6db6db,random,UserDefined</code>
<code>type2=<i>value</i></code> <code>pp1=<i>pattern</i></code>	<code>type2</code> is File cache test. The value is Enabled or Disabled. Select from:  <code>address,walk_0,walk_1,Checkerboard,0x00000000,0xffffffff,0x5aa55aa5,0xdb6db6db,random,UserDefined</code>
<code>type3=<i>value</i></code> <code>pp3=<i>pattern</i></code>	<code>type3</code> is Random address test. The value is Enabled or Disabled. Select from:  <code>Checkerboard,0x00000000,0xffffffff,0x5aa55aa5,0xdb6db6db,UserDefined</code>
<code>type4=<i>value</i></code> <code>pp4=<i>pattern</i></code>	<code>type4</code> is <code>page_striding</code> test. The value is Enabled or Disabled. Select from:  <code>Checkerboard,0x00000000,0xffffffff,0x5aa55aa5,0xdb6db6db,UserDefined</code>
<code>type5=<i>value</i></code> <code>pp5=<i>pattern</i></code>	<code>type5</code> is <code>march_c</code> test. The value is Enabled or Disabled. Select from:  <code>Checkerboard,0x00000000,0xffffffff,0x5aa55aa5,0xdb6db6db,UserDefined</code>
<code>type6=<i>value</i></code> <code>up=<i>hex_address</i></code>	<code>type6</code> is <code>Block_Copy</code> test. The value is Enabled or Disabled.  Only used if the <code>pp</code> argument is set to <code>UserDefined</code> . The pattern specified should be in the form of a 8-digit, hexadecimal number such as <code>0x2a341234</code> .

**Note** – 64-bit tests are located in the `sparcv9` subdirectory: `/opt/SUNWvts/bin/sparcv9/testname`. If a test is not present in this directory, then it may only be available as a 32-bit test. For more information refer to “32-Bit and 64-Bit Tests” on page 3.



## Sun Fire Link Interconnect Test (`wrsmtest`)

---

The `wrsmtest` verifies the functionality of the Sun Fire™ Link Interconnect by checking the cluster networking hardware.

---

**Note** – For this test to be meaningful, the cluster must be configured before the test is run.

---

For details on how to configure the cluster before running `wrsmtest`, refer to the cluster network administration documentation that is shipped with the product.

The `wrsmtest` uses the Internet Control Message Protocol (ICMP) that is based on the Data Link Protocol Interface (DLPI) to test the connections between cluster nodes.

First, `wrsmtest` determines the target cluster nodes to use for testing. You can specify the target hosts in the `wrsmtest` Test Parameter menu, or if no targets are specified, `wrsmtest` sends an ICMP broadcast from the private cluster network to find them. If it fails to find the necessary targets, it performs an RPC broadcast to the RPC port mapper daemon.

After finding the cluster nodes (targets), `wrsmtest` performs the following subtests:

- Random test—sends out 256 packets with random data length and random data.
- Incremental test—sends out packets with length from minimum to maximum packet size using incremental data.
- Pattern test—sends 256 packets of maximum length, where each packet contains one test pattern where all byte patterns (0 to 0xFF) are used.

---

**Note** – `wrsmtest` is a scalable test. The maximum number of instances is two per WIB card.

---

---

**Note** – The `wrsmtest` is only supported in a 64-bit operating environment.

---

## wrsmtest Options

To reach the dialog box below, right-click on the test name in the System Map and select Test Parameter Options. If you do not see this test in the System Map, you might need to expand the collapsed groups, or your system may not include the device appropriate to this test. Refer to the *SunVTS User's Guide* for more details.

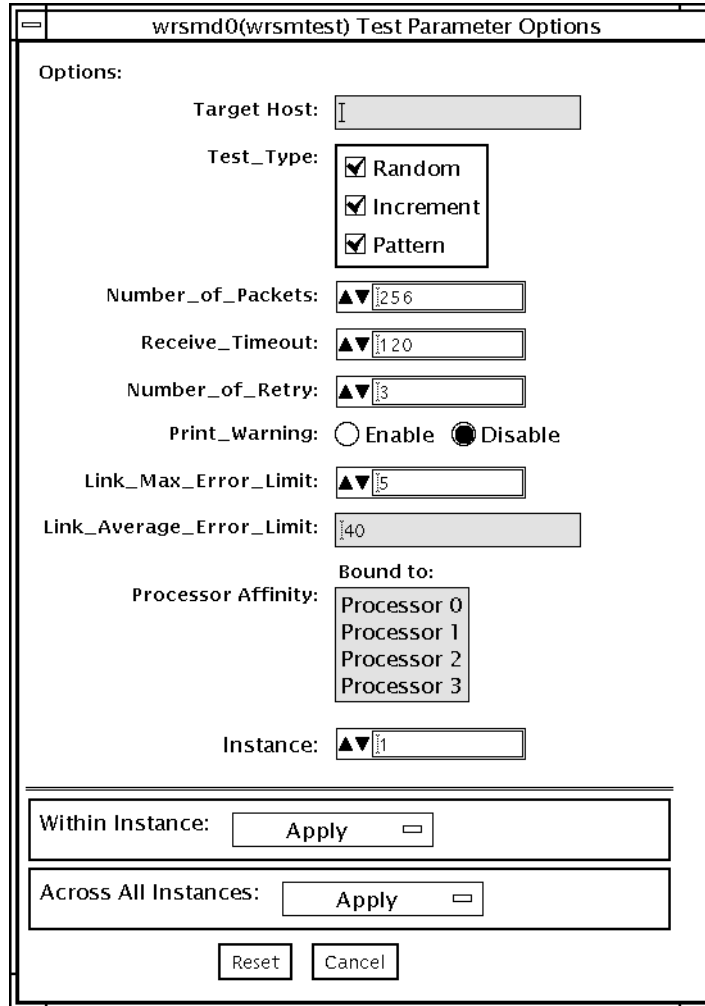


FIGURE 64-1 wrsmtest Test Parameter Options Dialog Box

**TABLE 64-1** wrsmtest Options

<b>wrsmtest Options</b>	<b>Description</b>
Target Host	Specifies one or more cluster node targets for testing. Target host entries can be either a host name or an Internet address for the <code>wrsmnd</code> interface, for example, <code>target1+target2+target3</code> . When no target host is specified, the test finds the necessary targets through broadcasting. The default setting leaves this field empty.
Test Type	Specifies which subtests to run: <ul style="list-style-type: none"><li>• Random test—sends out 256 packets with random data length and random data.</li><li>• Incremental test—sends out packets with length from minimum to maximum packet size using incremental data.</li><li>• Pattern test—sends 256 packets of maximum length, where each packet contains one test pattern where all byte patterns (0 to 0xFF) are used.</li></ul> All subtests are selected by default.
Number of Packets	Specifies the number of packets to use for testing. The default is 256.
Receive Timeout	Specifies the receive timeout value in seconds. Specify a number between 0–600 seconds. The default is 120 seconds.
Number of Retries	Sets the number of retries before an error is flagged. Specify a number between 0–128. The default is 3.
Print Warning	Choose Enable to see warning errors, such as <code>retry on timeout</code> errors. Disabled by default.
Link Max Error Limit	Upper threshold limit for peak link errors per second for a test to pass. If the test reports peak link errors that exceed this limit, the device being tested will fail and report an error message.
Link Average Error Limit	Threshold limit for average link errors per hour for a test to pass. If the test reports average link errors that exceed this limit, the device being tested will fail and report an error message. The default is 40 errors per hour.

---

## wrsmtest Test Modes

Connection, and Functional modes are supported by `wrsmtest`. Different test schemes are performed on the cluster interconnect device based on the test mode you select.

**TABLE 64-2** `wrsmtest` Supported Test Modes

Test Mode	Description
Connection	<code>wrsmtest</code> checks if the device is connected. It searches through DLPI <code>wrsmd</code> interfaces for the specified device name. If <code>wrsmtest</code> finds the device not connected, the test fails, otherwise, it returns the following message: device is connected.
Functional (Offline)	<code>wrsmtest</code> performs all three subtests (Random test, Incremental test, and Pattern test) sequentially. It allows you to specify options in such a way that <code>wrsmtest</code> performs a very stressful test.

---

## wrsmtest Command-Line Syntax

```
/opt/SUNWvts/bin/wrsmtest standard_arguments -o dev=interface,test=
type,packets=n,pattern=hex,delay=seconds, timeout=seconds,retry=
n,warn= E|D,maxerr=n,avgerr=n
```

**TABLE 64-3** `wrsmtest` Command-Line Syntax

Argument	Description
<code>dev=interface</code>	Identifies the cluster network interface name. The default value is <code>wrsmd0</code> for DLPI cluster networks.
<code>test=type</code>	Specifies which subtests to run. Specify <code>random</code> , <code>increment</code> , or <code>pattern</code> . Use a <code>+</code> symbol to list multiple subtests. The default value is <code>random+increment+pattern</code> .
<code>packets=n</code>	Specifies the number of random/pattern packets. The default is 256.
<code>pattern=hex</code>	Specifies a data pattern in hexadecimal form. The default is all patterns from 0 to 0xff.
<code>delay=seconds</code>	Indicates the time between subtests in seconds. The default is 30 seconds.

**TABLE 64-3** wrsmtest Command-Line Syntax

---

Argument	Description
<code>timeout=seconds</code>	Indicates the number of seconds to wait before a timeout. The default is 1 second.
<code>retry=n</code>	Indicates the number of test timeout retries. The default is three retries.
<code>warn=E/D</code>	When enabled, prints warning messages.
<code>maxerr=n</code>	Upper threshold limit for peak link errors per second for a test to pass. If the test reports peak link errors that exceed this limit, the device being tested will fail and report an error message.
<code>avgerr=n</code>	Threshold limit for average link errors per hour for a test to pass. If the test reports average link errors that exceed this limit, the device being tested will fail and report an error message. The default is 40 errors per hour.

---

**Note** – 64-bit tests are located in the `sparcv9` subdirectory: `/opt/SUNWvts/bin/sparcv9/testname`. If a test is not present in this directory, then it may only be available as a 32-bit test. For more information refer to “32-Bit and 64-Bit Tests” on page 3.

---



## Loopback Connectors

Loopback connectors are designed for the testing of communication ports. They take the form of either a single plug or a port-to-port cable with some communication connections shorted (looped-back).

**Note** – Loopback connectors must be wired properly and connected firmly for the Serial Port tests to work correctly. Miswired, poorly soldered, or missing loopback connectors can cause erroneous diagnostic error messages.

The following table depicts the pin assignments for most loopback plugs and cables that may be used when testing a system.

**TABLE A-1** Loopback Connector Pin Assignments

Signal Description	EIA	CCITT #	RS-449 "A"	RS-449 "B"	DIN 8 8-pin round	DB9 9-pin	DB25 25-pin	Direction	Alpha ID
Chassis/Frame Ground	AA	101	1	NC*	NC*	NC*	1	None	AA
Transmit Data (TxDa)	BA	103	4	22	3	3	2	Output	BA
Receive Data (RxDa)	BB	104	6	24	5	2	3	Input	BB
Request To Send (RTSa)	CA	105	7	25	6	7	4	Output	CA
Clear To Send (CTSa)	CB	106	9	27	2	8	5	Input	CB
Data Set Ready (DSRa)	CC	107	11	29	NC*	6	6	Input/output	CC

**TABLE A-1** Loopback Connector Pin Assignments (*Continued*)

Signal Description	EIA	CCITT #	RS-449 "A"	RS-449 "B"	DIN 8 8-pin round	DB9 9-pin	DB25 25-pin	Direction	Alpha ID
Signal Ground (SG)	AB	102	19	NC*	4	5	7	None	AB
Data Carrier Detect (DCDa)	CF	109	13	31	7	1	8	Input	CF
Transmit Clock In (TRxCa)	DB	114	5	23	NC*	NC*	15	Input	DB
Receive Clock In (RTxCa)	DD	115	8	26	8	NC*	17	Input	DD
Data Terminal Ready (DTRa)	CD	108	12	30	1	4	20	Output	CD
External Clock Out (TRxCa)	DA	113	17	35	NC*	NC*	24	Output	DA
Secondary Data Carrier Detect (DCDb)	SC F	122	NC*	NC*	NC*	NC*	12	Input	SCF
Secondary Clear to Send (CTSb)	SC B	121	NC*	NC*	NC*	NC*	13	Input	SCB
Secondary Transmit Data (TxDb)	SB A	118	NC*	NC*	NC*	NC*	14	Output	SBA
Secondary Receive Data (RxDb)	SB B	119	NC*	NC*	NC*	NC*	16	Input	SBB
Secondary Request to Send (RTSb)	SC A	120	NC*	NC*	NC*	NC*	19	Output	SCA

\*NC = No connection

---

## 25-Pin RS-232 Loopback Plug

The RS-232 and RS-423 single-port loopback plug is a specially wired male DB-25 connector. It is plugged in to a serial port in the back of the system under test.

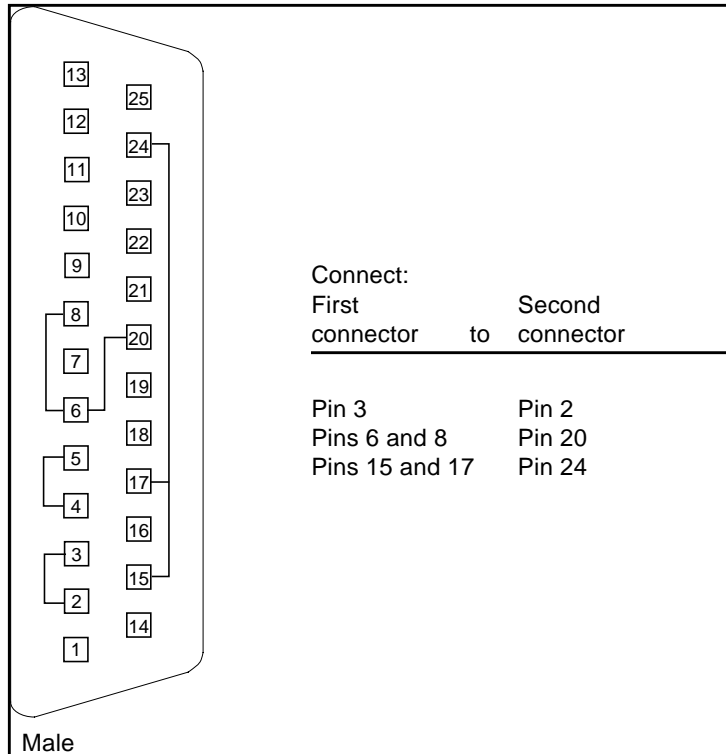


FIGURE A-1 25-pin RS-232 Loopback Plug Wiring Diagram

---

## 25-Pin RS-232 Port-to-Port Loopback Cable

Use these wiring instructions for 25-pin RS-232 and RS-423 port to 25-pin RS 232 and RS 423 port loopback cables (two DB-25 connections). It is plugged into a pair of serial ports in the back of the system under test. Both connectors are male.


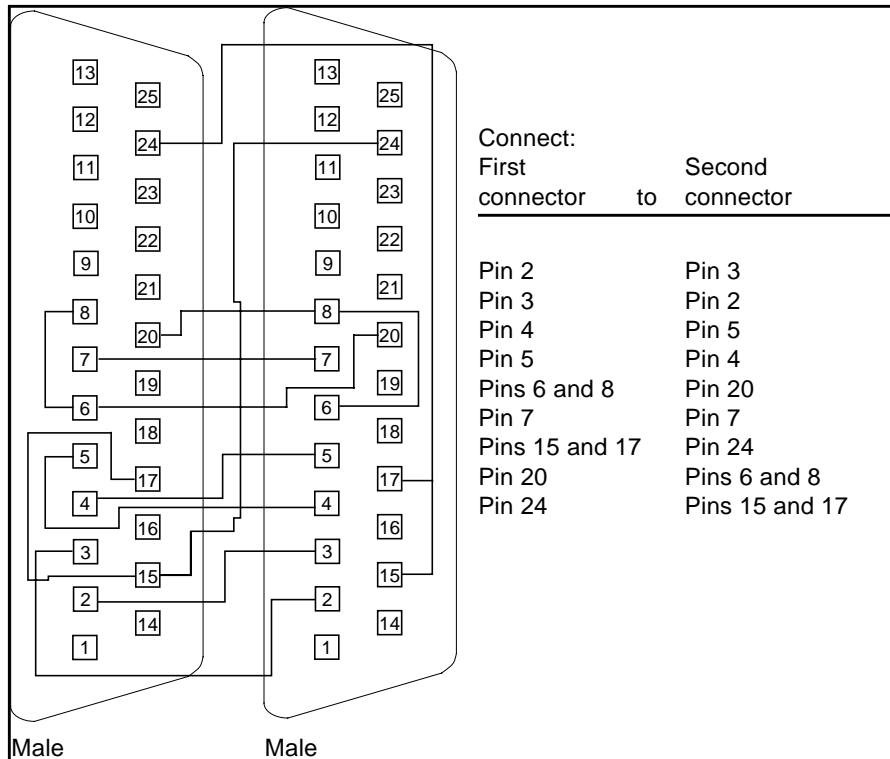


FIGURE A-2 25-pin RS-232 Port-to-Port Loopback Cable Wiring Diagram

## 8-Pin to 8-Pin Loopback Cable

Use these wiring directions for 8-pin round DIN RS-232 port to RS-423 to 8-pin round-DIN RS-232 and RS-423 port loopback cable. Both connectors are male.

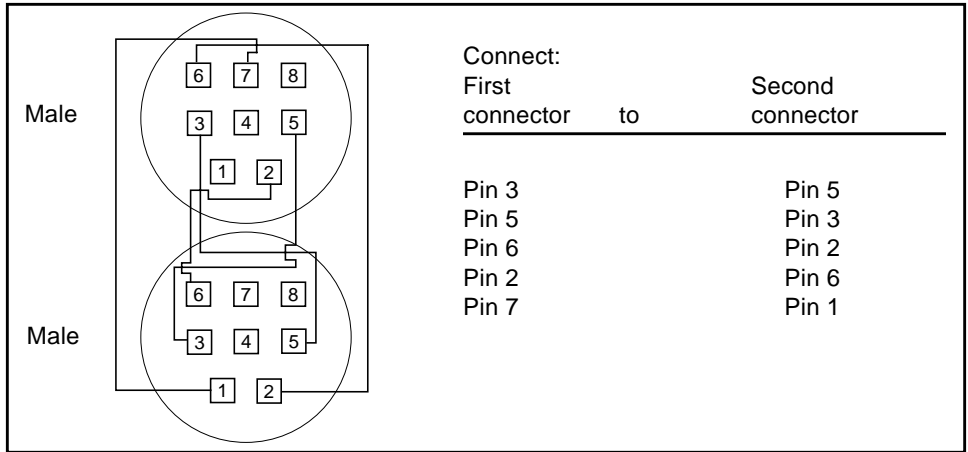


**FIGURE A-3** 8-Pin to 8-Pin Loopback Cable Wiring Diagram

Pin 8, Receive clock In (DD), remains unconnected.

## 8-Pin Loopback Plug

Use these wiring directions for male 8-pin round-DIN RS-232 and RS-423 single-port loopback plugs.

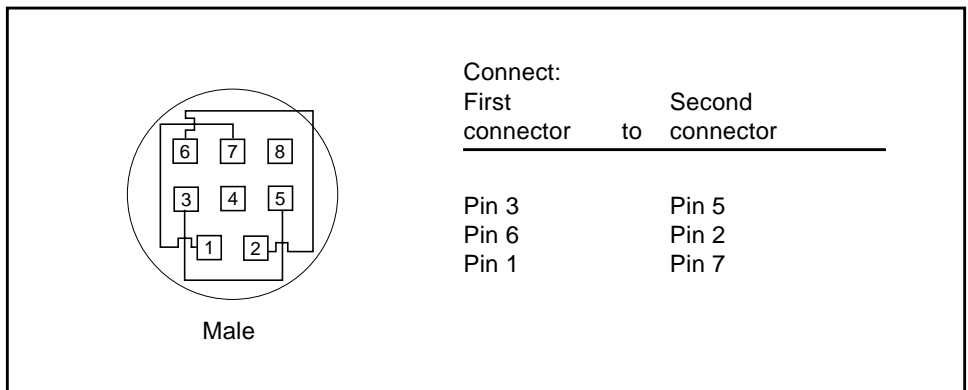

**FIGURE A-4** 8-Pin Loopback Plug Wiring Diagram

Pin 8, Receive Clock In (DD), remains unconnected.

---

## 25-Pin Port A-to-Port B Loopback Plug

Use these wiring directions for a 25-pin Port A to Port B loopback plug for most systems.

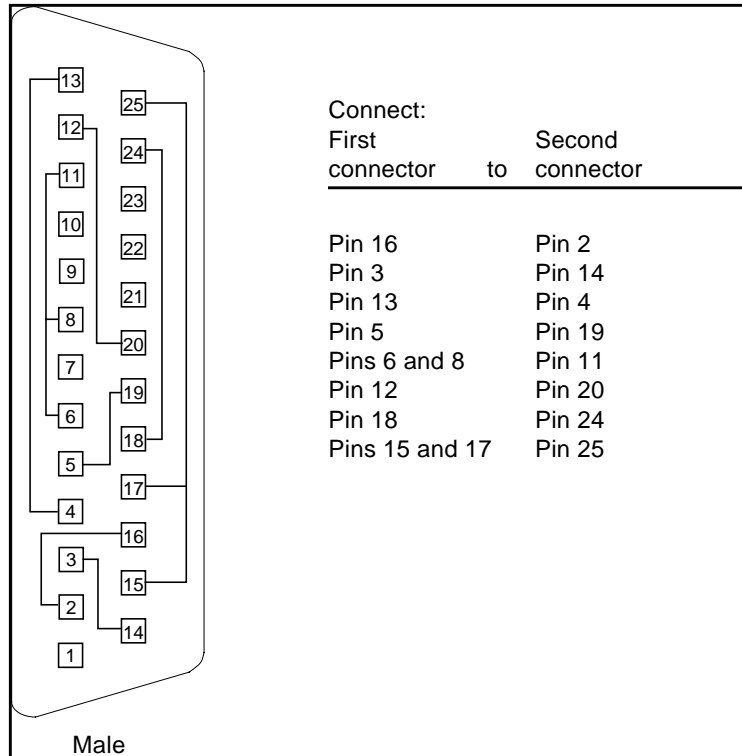


FIGURE A-5 Port A-to-Port B Loopback Plug Wiring Diagram

---

## 25-Pin Port A-to-A Port B-to-B Loopback Plug

If your system has a single communication port to connect it to peripherals, use these wiring instructions for making a male 25-pin loopback plug for that communication port.


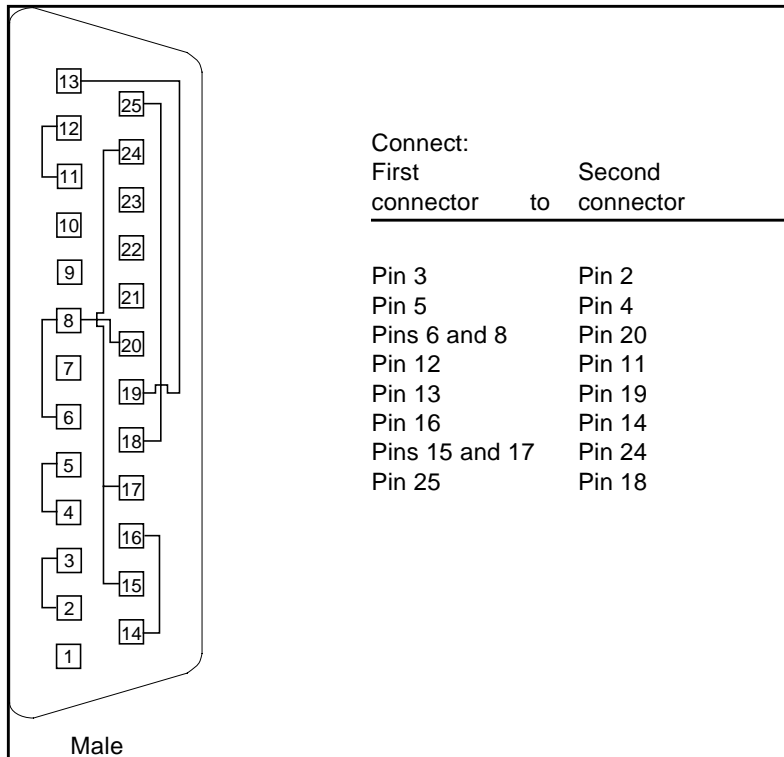


FIGURE A-6 Port A-to-A, Port B-to-B Loopback Plug Wiring Diagram

## 96-Pin Female Loopback Connector

This 96-pin connector can be ordered from Sun (part number 370-1366).

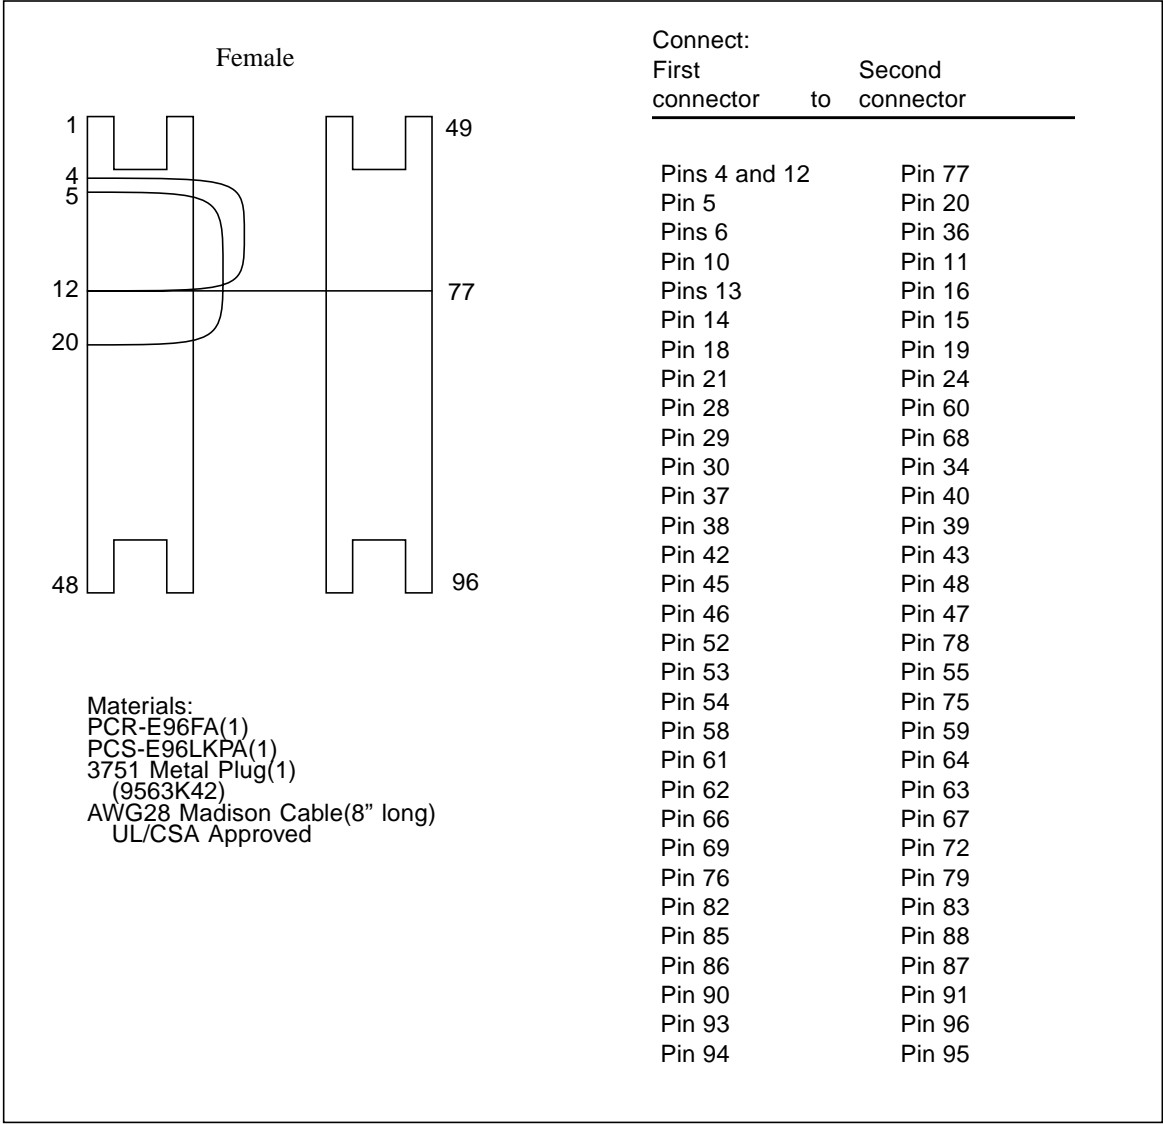

**FIGURE A-7** 96-Pin Female Loopback Connector Wiring Diagram



# 96-Pin Female Special Loopback Connector

This 96-pin connector can be ordered from Sun (part number 370-1381).


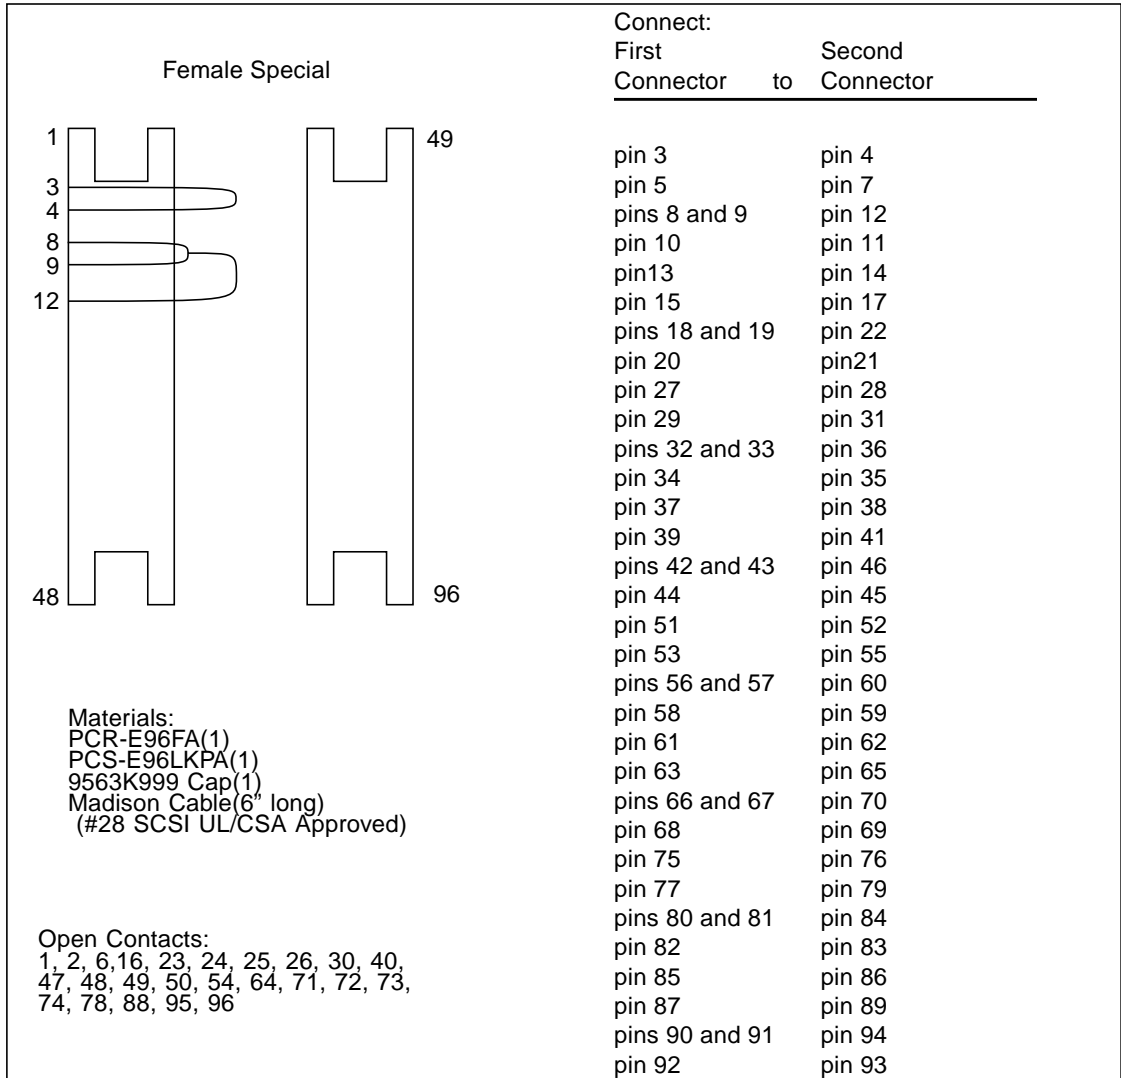


FIGURE A-8 96-Pin Female Special Loopback Connector Wiring Diagram

# 37-Pin RS-449 Loopback Cable

Use these wiring instructions for a loopback cable for two 37-pin RS-449 synchronous ports.

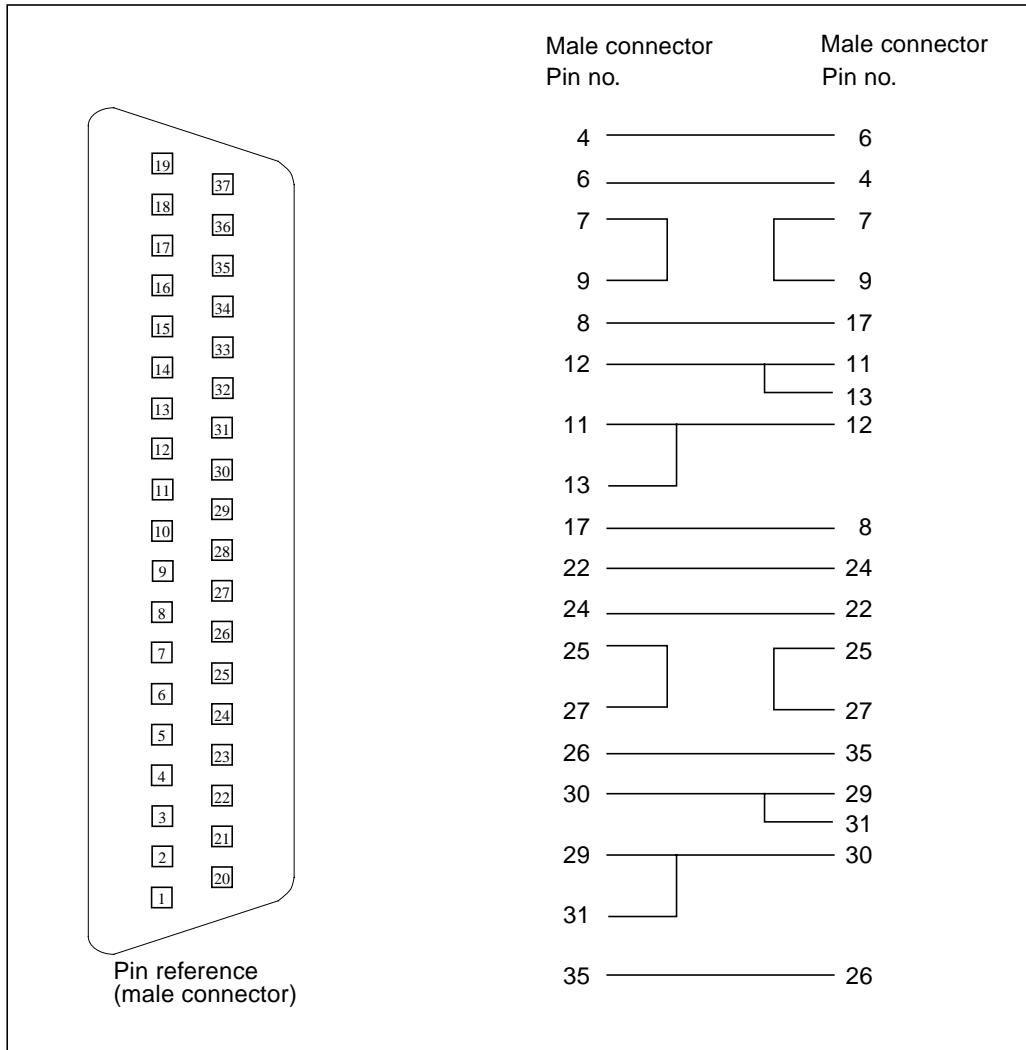


**FIGURE A-9** 37-Pin RS-449 Loopback Cable Wiring Diagram

---

# 37-Pin RS-449 Loopback Plug

Use these wiring instructions for making a male 37-pin RS-449 loopback plug. This connector is also available from Sun (part number 530-1430).

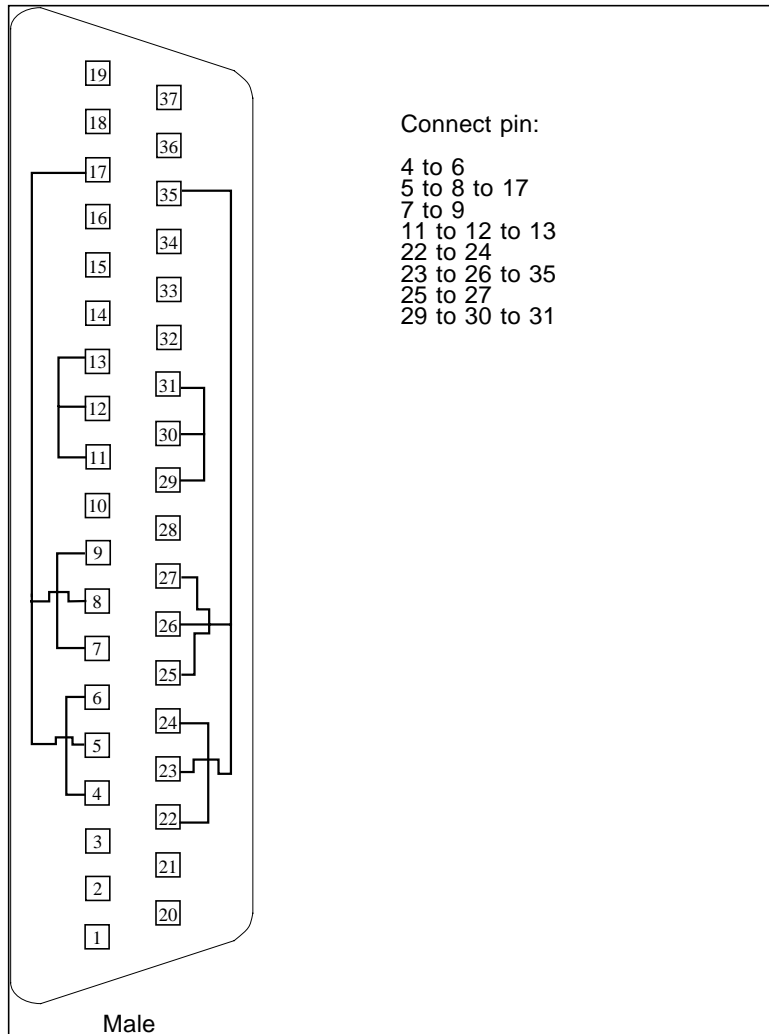

**FIGURE A-10** 37-Pin RS-449 Loopback Plug Wiring Diagram

## 9-Pin Male Single-Port Loopback Plug

Use these wiring instructions for male 9-pin RS-232 and RS-423 single-port loopback plugs.

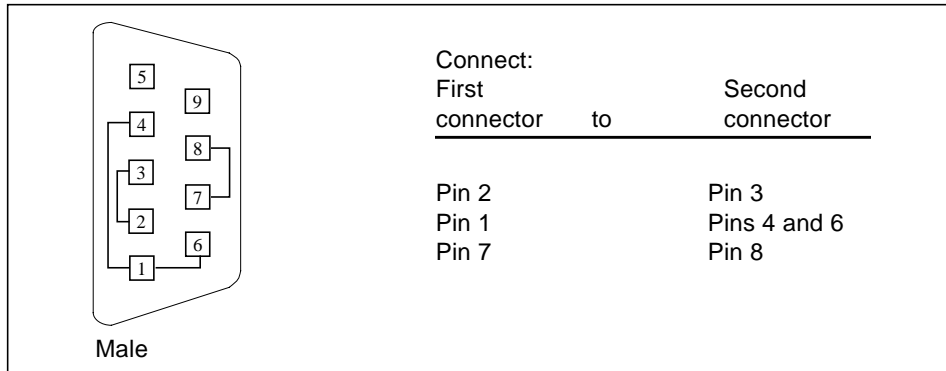


FIGURE A-11 9-Pin Male Single-Port Loopback Plug Wiring Diagram

## 9-Pin Female Single-Port Loopback Plug

Use these wiring directions for female 9-pin RS-232 and RS-423 single-port loopback plugs. Use this loopback plug with the `pcmciaetest`.


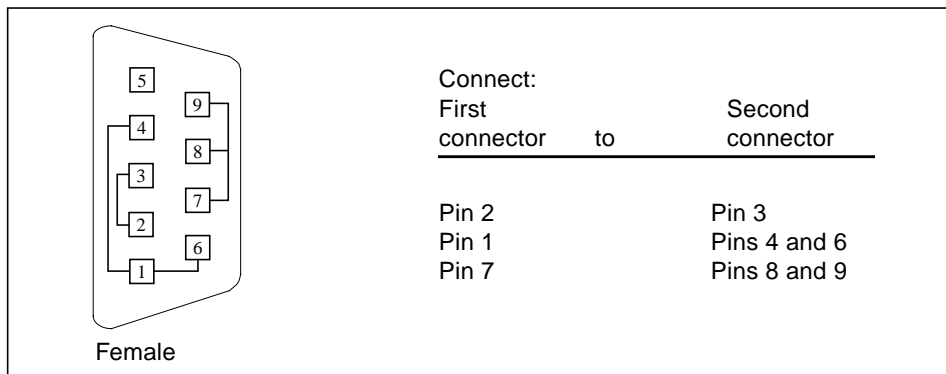


FIGURE A-12 9-Pin Female Single-Port Loopback Plug Wiring Diagram

# 9-Pin to 25-Pin Port-to-Port Loopback Cable

Use these wiring instructions for a 9-pin RS-232 and RS-423 port to 25-pin RS-232 and RS 423 port loopback cables. Both connectors are male.

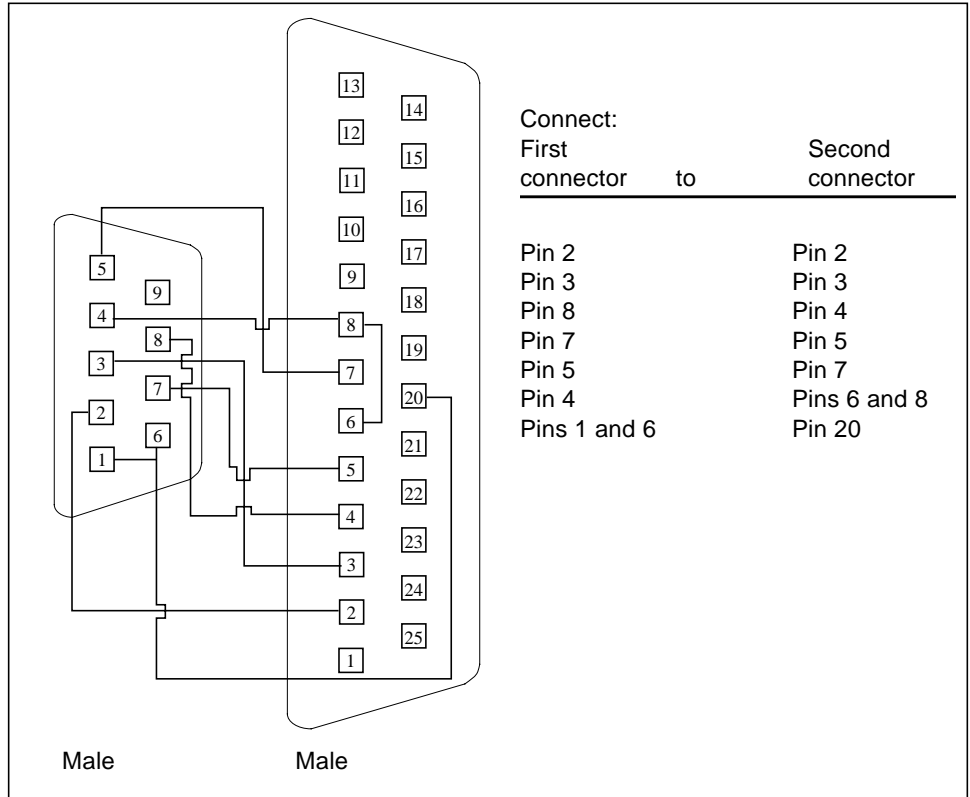

**FIGURE A-13** 9-Pin to 25-Pin Port-to-Port Loopback Cable Wiring Diagram

# 9-Pin to 9-Pin Port-to-Port Loopback Cable

Use these wiring instructions for 9-pin RS-232 and RS 423 port to 9-pin RS-232 and RS-423 port loopback cables. Both connectors are male.

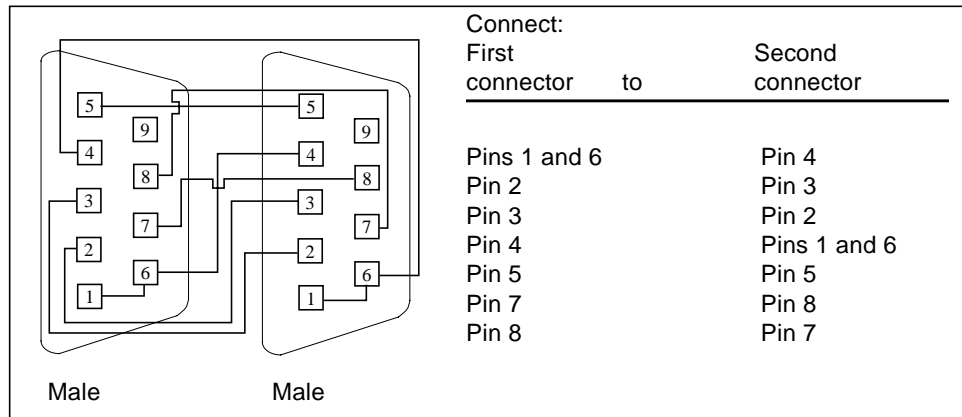


FIGURE A-14 9-Pin to 9-Pin Port-to-Port Loopback Cable Wiring Diagram

Please note that this cable has no Sun part number assigned to it.


# NT to TE Loopback Cable

Using two standard RJ-45 connectors, and connect pin 1 to pin 1, pin 2 to pin 2, and so on, for all pins. This loopback is a “straight-through” connection.

---

# Twisted-Pair Ethernet (TPE) Loopback Cable for Fast Ethernet

Use the following wiring instructions for standard RJ-45 connectors for Fast Ethernet. This loopback cable is used in `netlbttest` for `eri` devices.

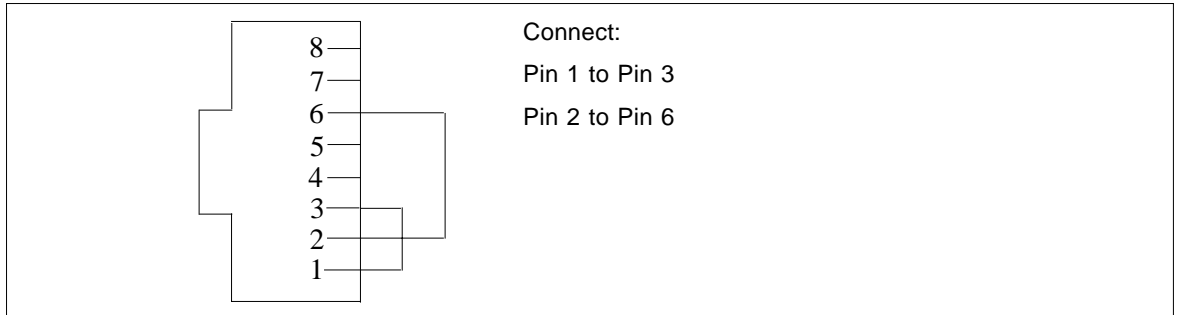


**FIGURE A-15** Twisted-Pair Ethernet (TPE) Loopback Cable Wiring Diagram for Fast Ethernet

---

# TPE Loopback Cable for Gigabit and 10/100 Ethernet

Use the following wiring instructions for RJ-45 connectors for Gigabit and 10/100 Ethernet. This loopback cable is used in `netlbttest` for Gigabit and 10/100 devices.

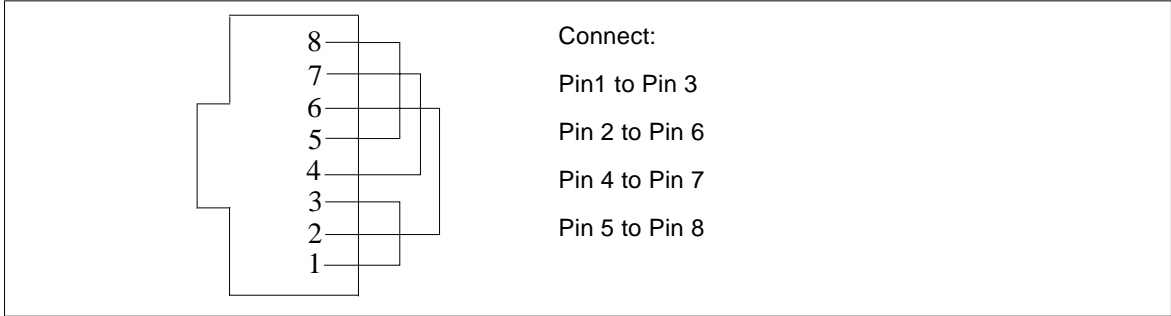

**FIGURE A-16** TPE Loopback Cable Wiring Diagram for Gigabit and 10/100 Ethernet



# Index

---

## NUMERICS

- 25-pin port A-to-A port B-to-B loopback plug, 386
- 25-pin port A-to-port B loopback plug, 386
- 25-pin RS-232 loopback plug, 383
- 25-pin RS-232 port-to-port loopback cable, 383
- 64-bit and 32-bit tests, 3
- 8-pin loopback plug, 385
- 8-pin to 8-pin loopback cable, 384

## A

- Acceleration tests of `tcxtest`, 349
- accessing SunVTS, 3
- Advanced Frame Buffer test, `afbtest`, 11
- `afbtest`, Advanced Frame Buffer test, 11
  - command line syntax, 20
  - options, 12
  - test modes, 19
- AFX Protocol tests of `tcxtest`, 349
- Alarm Card, Alarm Card test, 23
  - command line syntax, 27
  - options, 23
  - test modes, 27
- Alm test, See `sptest`, 313
- Apply to All button, 5
- Apply to Group button, 5
- arguments
  - standard, 6
- `atmtest`, SunATM adapter test, 31
  - command line syntax, 35

- options, 32
- test modes, 35

- Audio Test, audio subsystem test, 37
- audiotest subsystem test, `audiotest`, 37
- `audiotest`, audiotest subsystem test
  - command line syntax, 41
  - options, 39

## B

- Bidirectional parallel port test, `bpptest`, 45
- `bpptest`, Bidirectional parallel port test, 45
  - command line syntax, 47
  - options, 46
  - requirements, 45
  - test modes, 47
- buttons
  - Apply to All, 5
  - Apply to Group, 5
  - Cancel, 6
  - Reset, 6

## C

- cache consistency test, `mpconstest`, 221
- Cancel button, 6
- CDE, (Common Desktop Environment), xvii
- CD-ROM test, `cdtest`, 49
- `cdtest`, Compact Disc test, 49
  - and Volume Management, 49

- command line syntax, 53
- options, 50
- test modes, 52
- cg14 frame buffer card test, `cg14test`, 55
- `cg14test`, CG14 test, 55
  - command line syntax, 66
  - test groups, 55
  - test modes, 65
- `cg6 test`, `cg6`, 67
- `cg6`, CG6 frame buffer test, 67
  - and swap requirements, 71
  - command line syntax, 71
  - subtests, 68
  - test modes, 70
- circuit test, `i2ctest`, 181
- Colormap and Cursor tests of `tcxtest`, 349
- Command line execution, 6
- command line options, 6
- Common Desktop Environment (CDE), xvii
- Compact Disc (CD) test, `cdtest`, 49
- cpu Power Management test, `cpupmtest`, 79
- CPU stress test, `systest`, 339
- CPU tests
  - `cputest`, 73
  - `mpctest`, 229
  - multiprocessor test `mpctest`, 229
  - `systest`, 339
- `cpupmtest` , CPU Power Management test, 79
  - command line syntax, 81
  - test modes, 81
- `cpupmtest` ,CPU Power Management test
  - options, 79
- `cputest`, CPU test, 73, 165
  - command line syntax, 77
  - options, 74
  - test modes, 77
- `cputest`, cpu test
  - options, 74

## D

- disk drive test, 83
- `disktest`, disk and floppy test, 83
  - command line syntax, 89
  - subtests, 84

- test modes, 89
- `dpctest` , Sun Fire 880 FC-AL Disk Backplane
  - options, 91
- `dpctest` , Sun Fire 880 FC-AL Disk Backplane
  - test modes, 94
- `dpctest` , Sun Fire 880 FC-AL Disk Backplane test
  - command line syntax, 94
- `dpctest` , Sun Fire 880 FC-AL Disk Backplane
  - test, 91
- DVD drive test, `dvdtest`, 97
- `dvdtest`, DVD drive test, 97
  - command line syntax, 99
  - options, 97
  - test modes, 99

## E

- `ecpp(7)` IEEE 1284 parallel printer port device
  - test, 101
- `ecpptest`, Parallel port printer test, 101
  - command line syntax, 105
  - requirements, 101
  - subtests, 102
- `enatest`, Sun Enterprise Array test, 107
  - command line syntax, 115
  - fault isolation, 114
  - status, 111
  - test modes, 115
- `enctest`, StorEdge 1000 test, 117
  - command line syntax, 120
  - options, 118
  - test modes, 120
- `env2test`, I2C bus test, 125
  - options, 125
  - test modes, 127
- `env3test`, Environmental Hardware test, 129
  - command line syntax, 131
- `env4test`, I2C bus test, 133
  - options, 134
  - test modes, 137
- `env5test` , Environmental test, 139
- `env5test` , environmental test
  - command line syntax, 142
  - options, 140
  - test modes, 142
  - test requirements, 139

## Environmental hardware tests

env3test, 129

envtest, 121

environmental test, env5test, 139

envtest, I2C bus test, 121

command line syntax, 124

Ethernet hardware test, nettest, 235

ethernet loopback test, netlbttest, 241

exercising SSA fiber channel with plntest, 251

Expert3D Frame Buffer test, ifbtest, 185

## F

Fast Frame Buffer test, ffbtest, 147

fbtest frame buffer test, 143

command line syntax, 145

test modes, 144

ffbtest, Fast frame buffer test, 147

cautions and notes, 147

command line syntax, 155

options, 148

test modes, 154

fiber optic test, nettest, 235

floppy drive and disk test, disktest, 83

fputest, floating Point Unit test, 157, 199, 291, 295, 355, 363

command line syntax, 160, 201, 294, 297, 357, 365

options, 158, 199, 292, 295, 356, 364

frame buffer

multiple, 9

testing, 9

Frame Buffer Memory tests tcxtest, 349

frame buffer test, generic, fbtest, 143

Frame buffer tests

cg14test, 55

cg6, 67

frame buffer tests

gfxtest, 177

fwcamtest , Fire Wire Camera test, 161

command line syntax, 164

options, 162

test modes, 164

## G

gfbtest Options, 166, 168

gfbtest Test Requirements, 166

gfxtest

cautions and notes, 177

command line syntax, 180

options, 178

test modes, 180

gfxtest, PGX32 Frame butter test, 177

graphical user interface (GUI), xvii

GUI (graphical user interface), xvii

GX & GX+ test, cg6, 67

## H

hard drive and floppy test, disktest, 83

HDLC and SDLC test (for the HSI),sunlink, 323

HSI board test, sunlink, 323

## I

I2C bus test, env2test, 125

I2C bus test, env4test, 133

I2C bus test, envtest, 121

i2C Bus tests

i2ctest, 181

i2ctest , i2c bus test, 181

command line syntax, 183

options, 182

test modes, 183

test requirements, 181

ifbtest, Expert3D Frame Buffer test, 185

command line syntax, 191

options, 187

test modes, 191

Test Requirements, 185

ifptest , PCI FC\_AL card test

command line syntax, 197

options, 194

test modes, 196

ifptest, PCI FC\_AL card test, 193

Installation directory, 2

Internet control message protocol (ICMP) and

nettest, 235

interprocess communication protocols, 2

IPC (interprocess communication), 2

IPI tests

disktest, 83

## K

keyboard test, `usbkbtest`, 359

## L

`l1dcachetest` , level 1 data cache test, 203

command line syntax, 205

options, 203

test modes, 205

`l2dcachetest` , level 2 cache test, 207

command line syntax, 209

options, 207

test modes, 209

level 1 data cache test, `l1dcachetest`, 203

level 2 cache test, `l2dcachetest`, 207

LOMlite alarm test, `lomlittest`, 211

`lomlittest` , LOMlite alarm test, 211

command line syntax, 214

options, 212

requirements, 211

subtests, 212

test modes, 214

loopback connectors

25-pin port A-to-A port B-to-B plug, 386

25-pin RS-232 plug, 383

25-pin RS-232 port-to-port cable, 383

8-pin plug, 385

8-pin to 8-pin cable, 384

port A-to-port B plug, 386

See Appendix A

## M

M64 video board test, `m64test`, 215

`m64test`, M64 Video test, 215

cautions and notes, 215

command line syntax, 218

options, 215

subtests, 215

test modes, 218

Major test categories, 1

Media tests

`cdtest`, 49

`disktest`, 83

`tapetest`, 343

Memory errors detected by `vmentest`, 367

Memory tests

`vmentest`, 367

mouse

movement, can cause test failure, 9

`mpconstest` , Cache consistency test, 221

`mpconstest` , cache consistency test

command line syntax, 227

options, 224

subtests, 223

test modes, 227

`mpctest` multiprocessor test, 229

command line syntax, 233

test modes, 233

multiprocessor test, `mpctest`, 229

## N

`netlbtest`, ethernet loopback test, 241

command line syntax, 244

options, 242

test modes, 244

test requirements, 241

`nettest` network hardware test, 235

command line syntax, 239

options, 236

test modes, 238

Network tests

`netlbtest`, 241

`nettest`, 235

## P

parallel port test, `ppptest`, 45

parallel printer port test `ecppptest`, 101

parallel/serial port test, `spiftest`, 307

PCI FC\_AL card test, `ifptest`, 193

PCI tests

`atmtest`, 31

pcsertest PCMCIA modem card test, 247  
 command line syntax, 249  
 loopback requirement, 247  
 test mode, 249

Peripheral tests  
 cdtest, 49  
 disktest, 83  
 tapetest, 343  
 usbkbttest, 359

plntest SPARCstorage Array controller test, 251  
 command line syntax, 255  
 important note, 252  
 test modes, 255

pmemtest, memory test, 257  
 command line syntax, 260  
 options, 257

Printer tests  
 bpptest, 45  
 ecptest, 101

protocols, interprocess communication, 2

## Q

qlctest , Qlogic 2202 PC / AL Crystal test, 263  
 command line syntax, 268  
 test modes, 268

quad ethernet test, nettest, 235

## R

remote  
 testing, 10

Remote System Control (RSC) test,rsctest, 271

Remote System Control test  
 rsctest, 271

Requirements, 2

Reset button, 6

rsctest  
 Remote System Control test modes, 276

rsctest, Remote System Control test, 271  
 Command line syntax, 276

## S

saiptest, Serial Asynchronous Interface (PCI)  
 test, 279  
 available ports, 283  
 command line syntax, 284  
 hardware requirements, 279

saiptest, Serial Asynchronous Interface (PCI) test  
 options, 280  
 test modes, 284

SBus DMA circuitry, test with bpptest, 45

SBus printer card test, bpptest, 45

SBus tests  
 atmttest, 31  
 bpptest, 45

scitest, Cluster networking hardware test, 287  
 command line syntax, 289  
 options, 288  
 test modes, 289

scitest, SunFireLink Interconnect test, Cluster  
 networking hardware test, 375

SCSI Environmental Sensing card test,  
 sentest, 299

SCSI Environmental Sensing card test,  
 sentest, 299

SCSI tests  
 cdtest, 49  
 disktest, 83  
 dvdtest, 97

sentest, SCSI Environmental Sensing card  
 test, 299  
 command line syntax, 301  
 test modes, 301  
 verification, 299

Serial Asynchronous Interface test,  
 saiptest, 279

serial port test, spptest, 313

serial/parallel port test, spiftest, 307

SOC+ host adapter card test, socaltest, 303

socaltest, Soc+ card test, 303  
 command line syntax, 306  
 test modes, 306

SPARCstation 5 S24 frame buffer test,  
 tcxtest, 349

SPARCstation tests  
 audiotest, 37

SPARCstation VSIMM test, cg14test, 55

- SPARCstation4 TCX frame buffer test,
  - tcxtest, 349
- SPARCstorage Array controller test, plntest, 251
- spiftest, serial/parallel port test, 307
  - available ports, 309
  - command line syntax, 311
  - hardware requirements, 307
  - options, 308
  - test modes, 311
- sptest, serial port test, 313
  - command line syntax, 321
  - options, 315
  - requirements, 315
  - test modes, 320
  - tests, 314
- SSA
  - exercising fiber channel with plntest, 251
  - probing for controller devices, 252
- SSA controller test, plntest, 251
- SSA fault isolation with plntest, 251
- standard
  - command line arguments, 6
  - usage, 6
- standard\_arguments, 6
- Storage subsystem tests
  - enatest, 107
- StorEdge 1000 enclosure test, enctest, 117
- Sun Enterprise 450 bus test, envttest, 121
- Sun Enterprise Cluster 2.0 Network Hardware test
  - scitest, 287
- Sun Enterprise Cluster networking hardware test,
  - scitest, 287
- Sun Enterprise Network Array test, 107
- Sun Enterprise Network Array test, enatest, 107
- Sun Fire 880 FC-AL Disk Backplane test,
  - dpmttest, 91
- SunATM adapter test, atmtest, 31
- SunFireLink Interconnect tests
  - wrsmttest, 375
- sunlink, HSI/S board test, 323
  - command line syntax, 326
  - loopback connectors, 325
  - options, 324
  - requirements, 323
  - test modes, 326
- sunpci2test, Sun PCI2 test, 329
- command line syntax, 331
- test requirements, 329
- SunVTS
  - accessing, 3
  - interfaces
    - CDE, 3
    - OPEN LOOK, 3
    - TTY, 3
  - sutest, Super I/O test, 333
    - command line syntax, 336
    - options, 334, 335
    - test modes, 336
  - sysstest, CPU stress test, 339
    - command line syntax, 341
    - options, 339
    - test modes, 341
- T**
  - tapetest, tape drive test, 343
    - command line syntax, 347
    - options, 343
    - test modes, 347
    - test requirements, 343
  - tcxtest, Fast SBus Video card test, 349
  - tcxtest, S24 Frame Buffer SBus card test
    - test groups, 349
  - tcxtest, S24 Frame Butter SBus card test, 349
    - command line syntax, 353
    - options, 351
    - subtests, 350
    - test modes, 353
  - test options, 6
  - Test Parameter menu, 4
  - testing
    - remotely, 10
  - Tests
    - 32-bit and 64-bit tests, 3
  - Tests, overall description of, 2
  - Test-specific arguments, 8
  - Test-specific menu, 4
  - Test-specific options, 5
  - TGX test, cg6, 67
  - token ring test, nettest, 235

## U

`usbkbtest` , USB keyboard test, 359  
    command line syntax, 361  
    options, 359  
    test modes, 361

## V

### Video test

`cg6`, 67

### Video tests

`cg14test`, 55

`fbtest`, 143

`ffbtest`, 147

`gfxtest`, 177

`m64test`, 215

virtual memory test, `vmemtest`, 367

`vmemtest`, virtual memory test, 367

    command line syntax, 372

    swap space, and, 367

    test modes, 372

Volume Management and `disktest`, 84

VSIMM test, `cg14test`, 55

## W

### window

    locking disabled, 10

    locking enabled, 10

`wrsmtest`, SunFireLink Interconnect test, Cluster

    networking hardware test

    command line syntax, 379

    options, 378

    test modes, 379

## Z

`zs test`, `sptest`, 313

