

StorageTek Host Software Component (MSP Implementation)

Reference Summary

Version 6.2



Part Number: E28554-01
February, 2012
Revision 01

Submit comments about this document to STP_FEEDBACK_US@ORACLE.COM.

-

Host Software Component (HSC) Reference Summary

E28554-01

Oracle welcomes your comments and suggestions for improving this book. Contact us at STP_FEEDBACK_US@ORACLE.COM. Please include the title, part number, issue date, and revision.

Copyright ©1987, 2012, Oracle and /or its affiliates. All rights reserved.

This software and related documentation are provided under a license agreement containing restrictions on use and disclosure and are protected by intellectual property laws. Except as expressly permitted in your license agreement or allowed by law, you may not use, copy, reproduce, translate, broadcast, modify, license, transmit, distribute, exhibit, perform, publish, or display any part, in any form, or by any means. Reverse engineering, disassembly, or decompilation of this software, unless required by law for interoperability, is prohibited.

The information contained herein is subject to change without notice and is not warranted to be error-free. If you find any errors, please report them to us in writing.

If this is software or related software documentation that is delivered to the U.S. Government or anyone licensing it on behalf of the U.S. Government, the following notice is applicable:

U.S. GOVERNMENT RIGHTS Programs, software, databases, and related documentation and technical data delivered to U.S. Government customers are "commercial computer software" or "commercial technical data" pursuant to the applicable Federal Acquisition Regulation and agency-specific supplemental regulations. As such, the use, duplication, disclosure, modification, and adaptation shall be subject to the restrictions and license terms set forth in the applicable Government contract, and, to the extent applicable by the terms of the Government contract, the additional rights set forth in FAR 52.227-19, Commercial Computer Software License (December 2007). Oracle USA, Inc., 500 Oracle Parkway, Redwood City, CA 94065.

This software or hardware is developed for general use in a variety of information management applications. It is not developed or intended for use in any inherently dangerous applications, including applications which may create a risk of personal injury. If you use this software or hardware in dangerous applications, then you shall be responsible to take all appropriate fail-safe, backup, redundancy, and other measures to ensure the safe use. Oracle Corporation and its affiliates disclaim any liability for any damages caused by use of this software or hardware in dangerous applications.

Oracle is a registered trademark of Oracle Corporation and /or its affiliates. Oracle and Java are registered trademarks of Oracle and /or its affiliates. Other names may be trademarks of their respective owners.

AMD, Opteron, the AMD logo, and the AMD Opteron logo are trademarks or registered trademarks of Advanced Micro Devices. Intel and Intel Xeon are trademarks or registered trademarks of Intel Corporation. All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. UNIX is a registered trademark licensed through X/Open Company, Ltd.

This software or hardware and documentation may provide access to or information on content, products, and services from third parties. Oracle Corporation and its affiliates are not responsible for and expressly disclaim all warranties of any kind with respect to third-party content, products, and services. Oracle Corporation and its affiliates will not be responsible for any loss, costs, or damages incurred due to your access to or use of third-party content, products, or services.

Document Effectivity

| EC Number | Date | Doc Kit Number | Type | Effectivity |
|-----------|-----------------|----------------|-------------|--|
| 132886 | September, 2007 | --- | Revision A | This document applies to the Host Software Component for MSP, version 6.2. |
| --- | February, 2009 | --- | Revision B | |
| --- | August, 2010 | --- | Revision BA | |
| --- | February, 2012 | --- | Revision 01 | |

Contents

| | |
|--|-----------|
| Preface | ix |
| Access to Oracle Support | ix |
| Syntax Conventions | 1 |
| Syntax Flow Diagrams | 1 |
| Specifying Commands | 1 |
| Variables | 1 |
| Delimiters | 1 |
| Flow Lines | 2 |
| Single Required Choice | 2 |
| Single Optional Choice | 3 |
| Defaults | 3 |
| Repeat Symbol | 3 |
| Syntax Continuation (Fragments) | 4 |
| Library Identification | 5 |
| How to Specify a CAPid | 6 |
| CAPid Formats | 7 |
| Ranges and Lists | 9 |
| Control Statement Syntax Conventions | 12 |
| LIBGEN Macro Syntax | 13 |
| SLIACS macro | 13 |
| SLIALIST macro | 13 |
| SLIDLIST macro | 13 |
| SLIDRIVS macro | 14 |
| SLIENDGN macro | 14 |
| SLILIBRY macro | 14 |
| SLILSM macro | 15 |
| SLIRCVRY macro | 15 |
| SLISTATN macro | 16 |
| Control Statement Syntax | 17 |
| Control Data Set Definition (CDSDEF) control statement | 17 |
| EXECParm control statement | 17 |
| Journal Definition (JRNDEF) control statement | 18 |
| LMUPATH control statement | 18 |
| LMUPDEF command and control statement | 18 |

| | |
|--|-----------|
| OPTion control statement | 18 |
| Reconfiguration Definition (RECDEF) control statement | 19 |
| Scratch Subpool Definition (SCRPDEF) command and control statement | 19 |
| Scratch Subpool (SCRPOol) control statement | 19 |
| Volume Attribute (VOLATTR) control statement | 20 |
| Volume Attribute Definition (VOLDEF) command and control statement | 21 |
| Utility Syntax | 23 |
| ACTivities Report utility | 23 |
| AUDIt utility | 24 |
| BACKup utility | 24 |
| Database Decompile (LIBGEN) utility | 24 |
| Directory Rebuild (DIRBLD) utility | 24 |
| EJECT utility | 25 |
| INITialize Cartridge utility | 26 |
| Journal OFFLoad utility | 26 |
| MERGEcds utility | 26 |
| MOVE utility | 27 |
| Reconfiguration utility | 27 |
| REPLace utility | 27 |
| RESTore utility | 27 |
| SCRATCH utility | 28 |
| Scratch Conversion utility | 28 |
| Scratch Redistribution (SCREdist) utility | 29 |
| SET utility | 30 |
| UNSCRatch utility | 31 |
| UNSElect utility | 31 |
| Volume Report (VOLRpt) utility | 32 |
| HSC Operator Command Syntax | 33 |
| Allocation (ALLOC) command and control statement | 33 |
| CAP Preference (CAPPref) command and control statement | 33 |
| CDs Enable/Disable command | 34 |
| CLean command | 34 |
| Communications Path (COMMPath) command and control statement | 35 |
| DISMOUNT command | 35 |
| Display command | 36 |
| Display Acs | 36 |
| Display ALl | 36 |
| Display ALLOC | 36 |
| Display Cap | 36 |
| Display CDS | 36 |
| Display Cmd | 37 |
| Display COMMPath | 37 |
| Display DRives | 38 |
| Display Exceptions | 39 |

| | |
|---|-----------|
| Display LMUPDEF | 39 |
| Display LSM | 39 |
| Display Message | 39 |
| Display MNTD | 40 |
| Display MONitor | 40 |
| Display OPTion | 40 |
| Display Requests | 40 |
| Display SCRatch | 41 |
| Display SCRPFDEF | 42 |
| Display SRVlev | 42 |
| Display Status | 42 |
| Display THReshld | 43 |
| Display TREQDEF | 44 |
| Display UNITDEF | 44 |
| Display VOLDEF | 44 |
| Display Volume | 44 |
| DRAin CAP command | 44 |
| EJect command | 45 |
| ENter command | 46 |
| Journal command | 46 |
| MODify command | 47 |
| MONITOR command | 47 |
| Mount command | 48 |
| Mount/Dismount Options (MNTD) command and control statement | 49 |
| MOVE command | 50 |
| OPTion command and control statement | 51 |
| RECover Host command | 51 |
| RELease CAP command | 52 |
| SCRATCH command | 52 |
| SENter command | 52 |
| SRVlev command | 52 |
| Stop Monitoring (STOPMN) command | 52 |
| SWitch command | 53 |
| TRace command | 53 |
| TRACELKP command | 53 |
| UNSCRatch command | 53 |
| User Exit (UEXIT) command and control statement | 54 |
| Vary Station command | 54 |
| View command | 55 |
| Warn command | 56 |
| HSC Diagnostic Command Syntax | 57 |
| List command | 57 |
| TRace command | 58 |

Preface

This summary contains frequently used syntax information associated with Release 6.2.0 of the Host Software Component (MSP Implementation).

Use the material presented here as a memory aid. We assume that you are an experienced user who has worked with the Host Software Component at the programmer level. With this in mind, explanatory text has been kept to a minimum.

The following information appears in this reference summary:

- syntax conventions
- LIBGEN macro syntax
- control statement syntax
- utility syntax
- operator command syntax
- diagnostic command syntax.

Access to Oracle Support

Oracle customers have access to electronic support through My Oracle Support. For information, visit <http://www.oracle.com/support/contact.html> or visit <http://www.oracle.com/accessibility/support.html> if you are hearing impaired.

Syntax Conventions

Syntax Flow Diagrams

Syntax is illustrated using flow diagrams. These can include the following elements:

- Syntax – the diagram itself.
- Items – individual elements inside the diagram. Items can be keywords, variables, delimiters, operators, fragment references, and separators.
- Groups – a collection of items or other groups.

The following sections describe syntax flow diagram features and include some generic examples.

Specifying Commands

Commands are composed of command names, keyword parameters, and positional parameters. Command names initiate command execution, keyword parameters are operands that contain keywords and their related values, and positional parameters are operands that are identified by their position in the command string rather than by keywords.

- Keyword parameters can be specified in any order. The HSC accepts (tolerates) multiple occurrences of a keyword. The value assigned to a keyword reflects the last occurrence of a keyword within a command.
- Positional parameters must be entered in the order shown in the syntax diagram.
- Uppercase letters indicate the minimum abbreviation for the command name, keyword, or positional parameter.

Variables


Variables are italicized.

Delimiters


If a comma(,), a semicolon(;), or other delimiter is shown with an element of the syntax diagram, it must be entered as part of the statement or command.

Flow Lines

Syntax diagrams consist of horizontal and vertical lines and the text of a command, control statement, macro, or utility.

 


or

 


Diagrams are read left to right and top to bottom. Arrows show flow and direction.

- a statement begins with ▶▶
- a statement ends with ▶◀
- diagrams continuing to the next line begin with ▶
- fragments begin and end with |

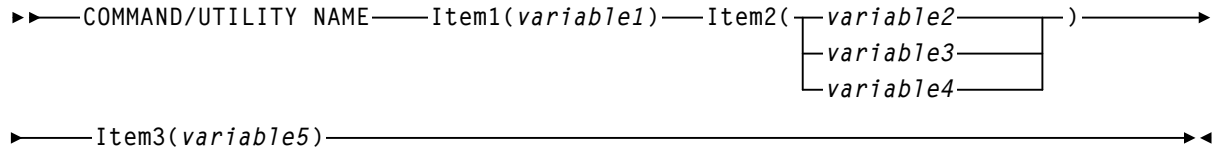

Single Required Choice

 Branch lines, without repeat arrows, indicate that a **single** choice must be made. If one of the items from which a choice is being made is on the base line of the diagram, a single choice is required.




Single Optional Choice

If the first item is on the line below the base line, a single choice of items in the stack is optional.



Defaults

Default values and parameters appear above the syntax diagram line. In the following example, if a value is not specified with the command, `Default Value` is used by the HSC.

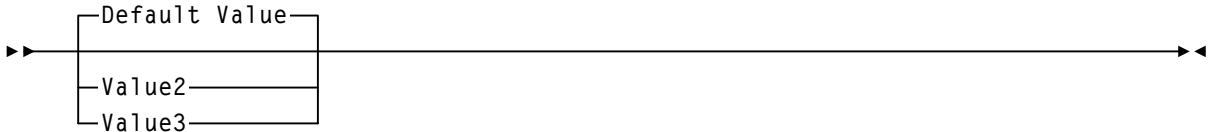


Some keyword parameters provide a choice of values in a stack. When the stack contains a default value, the keyword and the value choices are placed below the baseline to indicate that they are optional, and the default value appears above the keyword line. In the following example, if the keyword is not specified with the command, `Keyword(Default Value)` is used by the HSC.



Repeat Symbol

 A repeat symbol indicates that more than one choice can be made or that a single choice can be made more than once. The repeat symbol shown in this example indicates that a comma is required as the repeat separator.



Syntax Continuation (Fragments)

Fragment references direct you to parts (fragments) of the syntax that contain more detail than can be shown in the main syntax diagram.

▶ COMMAND/UTILITY NAME | Fragment Reference |

Fragment:

Item1(*variable1*, *variable3*)
 └───┬───┘ └───┬───┘
 variable2 *variable4*

Item2(*variable5*, *variable7*)
 └───┬───┘ └───┬───┘
 variable6 *variable8*

Library Identification

Each ACS, LSM, and CAP is assigned a unique identification number during LIBGEN. Use this number in HSC commands and utilities when identifying a specific ACSid, LSMid, or CAPid.

- ACSid (*acs-id*) is a hexadecimal value from 00 through FF that identifies the LMU.

An *acs-id* is the result of defining the SLIALIST macro during a LIBGEN. See “LIBGEN Macros” in the *HSC Configuration Guide* for information about the SLIALIST macro. The first ACS listed in this macro acquires a hexadecimal identifier of 00, the second ACS listed acquires a hexadecimal identifier of 01, and so forth until all ACSs are identified.

- An LSM number (*ll*) is a hexadecimal value from 00 through 17. It differentiates an LSM from every other LSM connected to the same LMU.

An LSM number is the result of defining the SLIACS macro LSM, LSM2, LSM3, and LSM4 parameters. See the *HSC Configuration Guide* for information about the SLIACS macro. The first LSM listed for an ACS acquires a hexadecimal number of 00, the second LSM listed for an ACS acquires a hexadecimal number of 01, and so forth.

- An LSMid (*lsm-id*) is made up of the ACSid and the LSM number separated by a colon (:). It differentiates an LSM from every other LSM in a library.
- A CAP number is a hexadecimal value from 00 to 02 for all existing libraries, except for SL3000 libraries. The CAP number for an SL3000 is a hexadecimal value from 00 to 0B. The CAP number identifies a specific CAP in an LSM that has more than one CAP.
- A CAPid (*cap-id*) is a hexadecimal value made up of the LSMid and the CAP number separated by a colon. Refer to “How to Specify a CAPid” on page 6 for more information.

Some HSC commands and utilities require, or optionally allow, the user to specify a host identifier or a VOLSER.

- The *host-id* for a given host is the identifier specified in the HOSTID parameter of the SLILIBRY macro in the LIBGEN. The HOSTID parameter is the SMF system identifier for **both** JES2 and JES3. Valid characters for a HOSTID are A-Z, 0-9, #, \$, and @.
- A VOLSER (*volser*) identifies a volume serial number consisting of one to six characters. Valid characters are A-Z, 0-9, # (crosshatch), \$, ¥ (yen character), and optional trailing blanks. Leading blanks are not allowed.

How to Specify a CAPid

A CAPid specifies a particular CAP in the library. Each CAP is identified by the LSMid of the LSM that the CAP is attached to and a CAP number to distinguish it from other CAPs in that LSM.

CAP configurations differ based on the LSM type. The following configurations are possible:

LSM (Model 4410) and PowderHorn LSM (Model 9310)

can be configured with either the standard 21-cell CAP or an enhanced CAP. An enhanced CAP contains two 40-cell magazine-style CAPs and a one-cell priority CAP (PCAP). The 40-cell CAPs function independently.

WolfCreek LSM (Models 9360-050, 9360-075, and 9360-100)

configured with a WolfCreek CAP which contains a 20-cell magazine-style CAP and a PCAP. An optional 30-cell, magazine-style CAP, called a WolfCreek optional CAP, may be added to the WolfCreek CAP.

TimberWolf LSM (Model 9740)

configured with either a 14-cell permanent rack or a 10-cell removable magazine.

StreamLine Library (Model SL3000)

The library is configured with 2, 13-cell removable magazines in each CAP. This library can contain up to 12 CAPs (00-0B).

StreamLine Library (Model 8500)

This library is configured with 3, 13-cell removable magazines. An optional 39-cell CAP can be added.

CAPid Formats

There are two formats that can be used to specify a CAPid:

- *AA:LL*, where *AA* is the ACSid and *LL* is the LSM number. This format is referred to as the *lsm-id*.
- *AA:LL:CC*, where *AA:LL* is the LSMid and *:CC* is the CAP number. This format is referred to as the *cap-id*.



Caution: Do not use a colon as the MSP command delimiter because the system will process the colon in the new CAPid format as the end of the command. All information following the colon in an HSC command will not be processed.

The appropriate format to use is determined by the CAP hardware and the command being specified.

- The *AA:LL* format can be specified in the following situations:
 - to specify a standard CAP
 - to allow the HSC to select a CAP based on CAP preference.
- The *AA:LL:CC* format can be specified for any CAP hardware in any command that accepts a CAPid. This is the preferred format. Valid CAP numbers are:

00 indicates one of the following:

- a 21-cell 4410 or 9310 standard CAP
- the right-hand 40-cell 4410 or 9310 enhanced CAP
- the 20-cell 9360 WolfCreek CAP
- a 14-cell or 10-cell removable magazine 9740 TimberWolf CAP
- a left-side SL3000 AEM CAP, consisting of 18, 13-cell removable magazines
- the left-hand 39-cell SL8500 library CAP.



Note: The LSM portion of the SL8500 CAP must be the LSM number of the LSM on track 1 of the structure.

01 indicates one of the following:

- the left-hand 40-cell 4410 or 9310 enhanced CAP
- the 30-cell 9360 WolfCreek optional CAP
- an optional SL3000 CEM CAP consisting of 2, 13-cell removable magazines
- the right-hand optional 39-cell SL8500 library CAP.

02 indicates one of the following:

- PCAP in either a 4410 or 9310 enhanced CAP or a 9360 WolfCreek CAP.
- an optional SL3000 CEM CAP consisting of 2, 13-cell removable magazines.

03, 04, 05 indicates the following:

- optional SL3000 CEM/DEM CAPs each consisting of 2, 13-cell removable magazines.

06 indicates the following:

- the only required SL3000 BDM CAP consisting of 2, 13-cell removable magazines.

07, 08, 09, 0A indicates the following:

- optional SL3000 CEM CAPs each consisting of 2, 13-cell removable magazines.

0B indicates the following:

- a right-side SL3000 AEM CAP, consisting of 18, 13-cell removable magazines



Notes:

- If SL3000 library CAPs are not present, the HSC reports them as “not installed” This keeps CAP addresses from changing as new CAPs are added.
- Refer to the individual command explanations for additional information on specifying CAPids.
- SL3000 and SL8500 libraries do not contain a PCAP.

Ranges and Lists

HSC commands and utilities often allow the user to specify ranges and lists of elements.

1. An inclusive range is indicated by a pair of elements of the same length and data type, joined by a dash. The first element **must** be strictly less than the second element.
 - A hexadecimal range consists of a pair of hexadecimal numbers (for example, 0A2-0AD, or 000-0FC).
 - A decimal range consists of a pair of decimal numbers (for example, 1-9, or 010-094). Leading zeros are not required.
 - A numeric VOLSER range (*vol-range*) consists of a pair of VOLSER elements containing a decimal numeric portion of 1 to 6 digits (for example, ABC012-ABC025, or X123CB-X277CB). The decimal portion is referred to as an incremental range. The following additional restrictions apply:
 - The character positions of the incremental portion of both range elements must match.
 - The non-incremental characters of the first element must be identical to those of the second element.
 - You cannot increment two portions of a range element. If 111AAA is the first element, you cannot specify 112AAB for the second element.
 - If a VOLSER range contains more than one decimal portion, any portion is valid as the incremental range. For example:

A00B00 the largest range that can be specified is A00B00 through A99B99.

A0B0CC the largest range that can be specified is A0B0CC through A9B9CC.

000XXX the largest range that can be specified is 000XXX through 999XXX.



Note: A VOLSER range for most operator commands is limited to 100 entries. If a larger range is entered, only the first 100 VOLSERS in the range are acted on. If HSC utilities are used, the entire range is processed.

- An alphabetic VOLSER range (*vol-range*) consists of a pair of VOLSER elements containing an incremental portion of 1 to 6 characters (for example, 000AAA-000ZZZ, or 9AAA55-9ZZZ55). This portion is referred to as an incremental range. The following additional restrictions apply:
 - The character positions of the incremental portion of both range elements must match.
 - The non-incremental characters of the first element must be identical to those of the second element.

- You cannot increment two portions of a range element. If 111AAA is the first element, you cannot specify 112AAB for the second element.
- The alphabetic portion of the VOLSER range is defined as being from character A to Z. To increment multi-character sequences, each character increments to Z. For instance, ACZ is part of the AAA-AMM range. Examples are:

A00A0-A99A0 increments VOLSERs A00A0 through A09A0, then A10A0 through A99A0.

9AA9A-9ZZ9A increments VOLSERs 9AA9A through 9AZ9A, then 9BA9A through 9ZZ9A.

111AAA-111ZZZ increments VOLSERs 111AAA through 111AAZ, then 111ABA through 111ZZZ.

999AM8- 999CM8 increments VOLSERs 999AM8 through 999AZ8, then 999BA8 through 999CM8

A3BZZ9- A3CDE9 increments VOLSERs A3BZZ9 through A3CAA9, then A3CAB9 through A3CDE9

**AAAAAA-
AAACCC** increments VOLSERs AAAAAA through AAAAAZ, then AAAABA through AAACCC

**CCCNNN-
DDDNNN** increments VOLSERs CCCNNN through CCCNNZ, then CCCNOA through DDDNNN*

* **Caution:** This is a very large range.

The number of volumes in an alphabetic VOLSER range depends on the number of elements in the incrementing portion of the VOLSER range. For an A to Z range in each character position, the number of volumes can be calculated by 26 to the power of the number of positions that are being incremented.

| | | |
|----------------------|--------|-------------|
| A-Z | 26^1 | 26 |
| AA-ZZ | 26^2 | 676 |
| AAA-ZZZ | 26^3 | 17,576 |
| AAAA-ZZZZ | 26^4 | 456,976 |
| AAAAA-ZZZZZ | 26^5 | 11,881,376 |
| AAAAAA-ZZZZZZ | 26^6 | 308,915,776 |



Note: For most operator commands, a VOLSER range is limited to 100 entries. If a large range is entered, only the first 100 VOLSERS are acted upon. If HSC utilities are used, the entire range is processed.

2. A list consists of one or more elements. If more than one element is specified, the elements **must** be separated by a comma or a blank, and the entire list enclosed in parentheses.
 - For some HSC operator commands, an element may consist of a single item or a range. Refer to the individual command explanations for valid list entries.
 - In general, HSC utilities **do not allow** ranges to be specified in a list. The exception to this is a VOLSER list (*vol-list*) which does allow ranges to be specified.

For VOLATTR control statements, you can use wildcard characters (% , ? , or *) to identify a list of VOLSERS.

Control Statement Syntax Conventions

The control statement for each utility program consists of a command (indicating the utility function) followed by parameters, as applicable, in 80-character card-image records. The standard syntax conventions for control statements are as follows:

- The only valid control statement information area is from column 1 to column 72. Columns 73-80 are ignored.
- Parameters are separated by one or more blanks or a comma.
- A value is associated with a parameter by an equal sign (=) or by enclosing the value in parentheses, and concatenating it immediately after the parameter.
- Case (upper or lower) is ignored in actual control statements.
- Control statements may be interspersed with comments designated by an asterisk (*) in column one.

For definition data sets (VOLATTRs, UNITATTRs and TAPEREQs) comments **must** be in the new format (/...*/). Asterisk (*) comments are not allowed. A /...*/ comment in the first line is **not** required for definition data sets.

- A control statement is terminated if the statement is not continued. Comments cannot be nested, and mixing the two comment styles (* and /*) is not allowed.
- The 80-character card-image records use conventional continuation rules.
 - A space and a dash (–) following a parameter or parameter value indicates that a blank is to be inserted between the last nonblank character of this line and the first nonblank character of the next nonblank record.
 - A plus sign (+) specifies that the continued control information is to be concatenated directly after the character preceding the plus sign. The continued data starts at column two of the next nonblank record.



Note: You can use a continuation only after a new keyword or after the natural end of a value. Some examples follow.

The following examples illustrate continuations used correctly:

```
SCRPOOL NAME=STD36,RANGE+  
(AAA000-AAA999,ZZZ000-ZZZ999)
```

```
SCRPOOL NAME=STD36,RANGE(AAA000-AAA999,-  
ZZZ000-ZZZ999)
```

The following example illustrates a continuation used *incorrectly*:


```
SCRPOOL NAME=STD36,RANGE(AAA000-AAA999,ZZZ+  
000-ZZZ999)
```

- The maximum length of a control statement is 32,767 characters.
- The maximum length of a command (used as a command or in PARMLIB) is 126 characters.


LIBGEN Macro Syntax

This section contains the syntax for LIBGEN macros presented in alphabetical order. For complete descriptions of the macros and the required order for specifying them, see the *HSC/MSP Configuration Guide*.


SLIACS macro

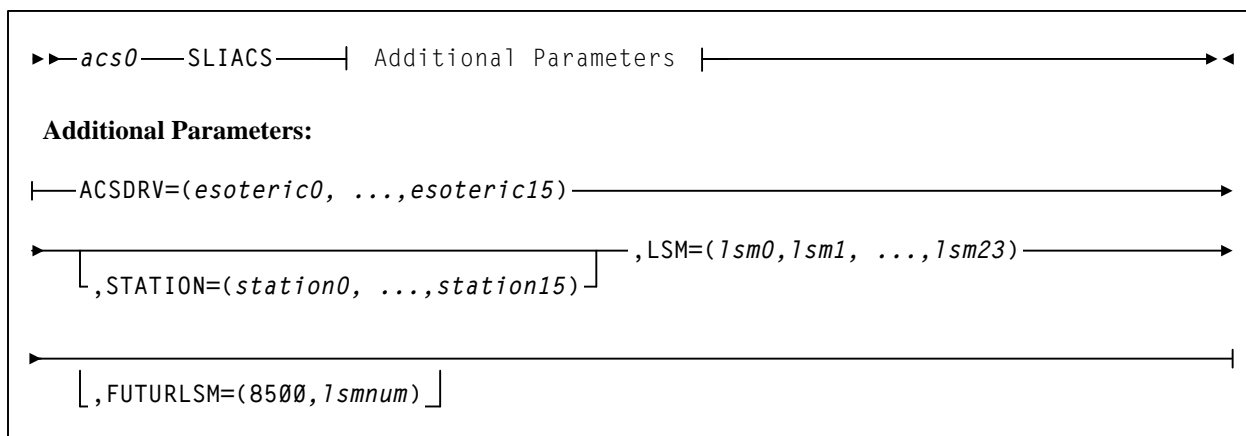

SLIALIST macro

 

SLIDLIST macro

 

SLIDRIVS macro

▶▶ *drives0* SLIDRIVS ADDRESS=(*addr0,addr1...*)◀◀

SLIENDGN macro

▶▶ SLIENDGN◀◀

SLILIBRY macro

▶▶ SLILIBRY — HOSTID=(*host-id0,host-id1,...,host-id15*) — ,ACSLIST=*acslst* —▶▶

Optional Parameters


Optional Parameters:

,CLNPRFX=^{CLN}*prefix* ,SMF=²⁵⁵*libtype*


,MAJNAME=^{STKALSQN}*qname* ,COMPRFX=[.]*commandchar* ,SCRLABL=^{SL}^{AL}^{NL}^{NSL}

,EJCTPAS=*password* ,DRVHOST=(*host-id*)

SLILSM macro

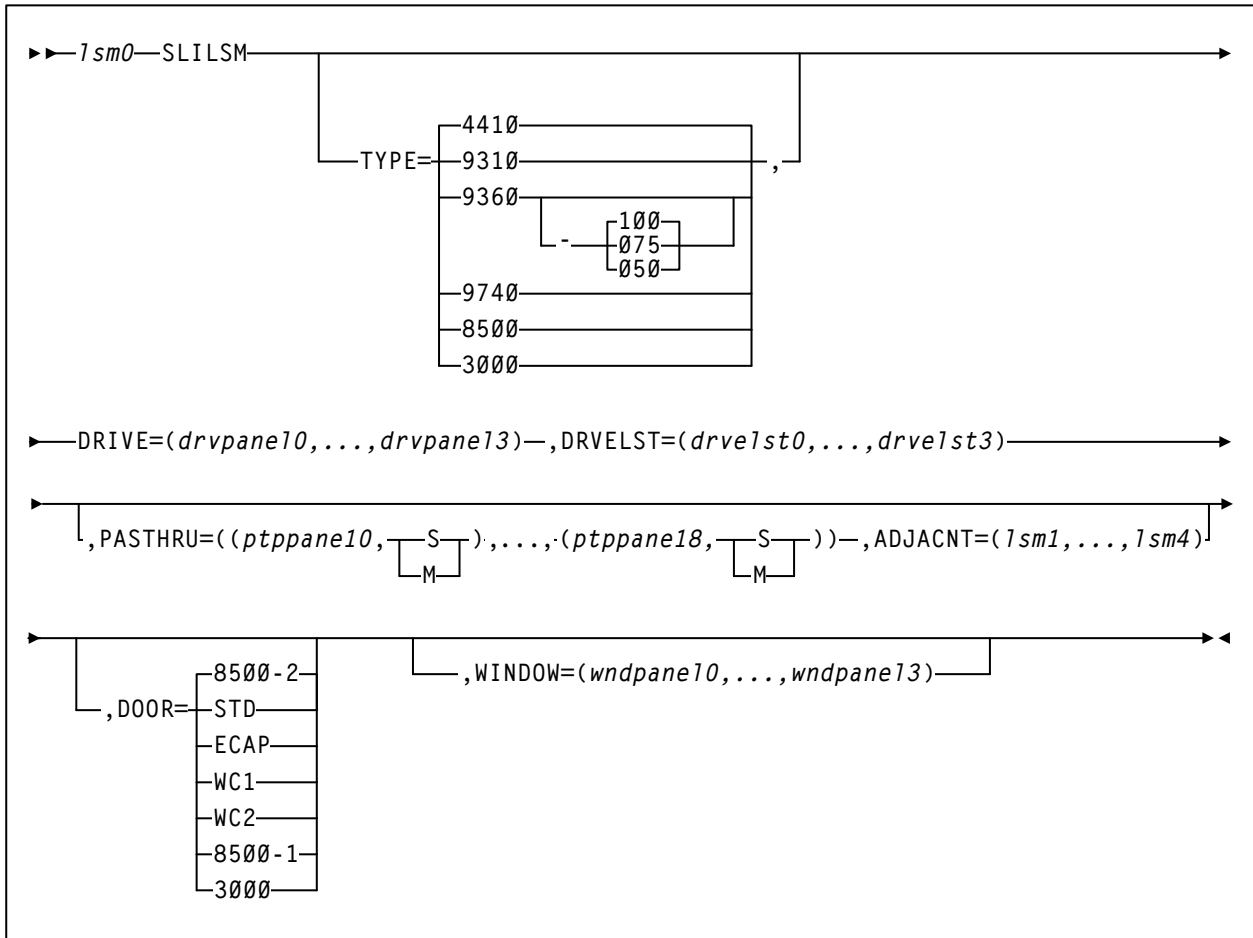

SLIRCVRY macro

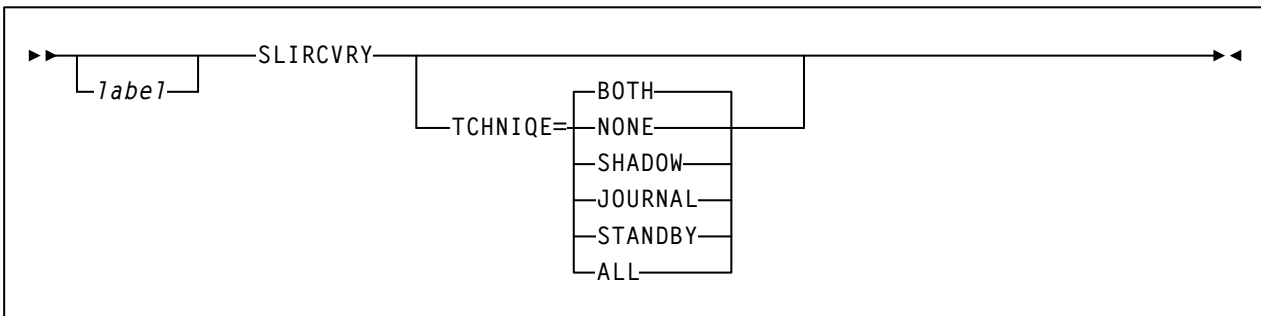


SLISTATN macro

```
▶◀ station0—SLISTATN ADDRESS=(addr0, ..., addr15)————▶◀
```


Control Statement Syntax

This section contains the syntax for control statements. For complete descriptions of the control statements, see the *HSC/MSP System Programmer's Guide*.


Control Data Set Definition (CDSDEF) control statement

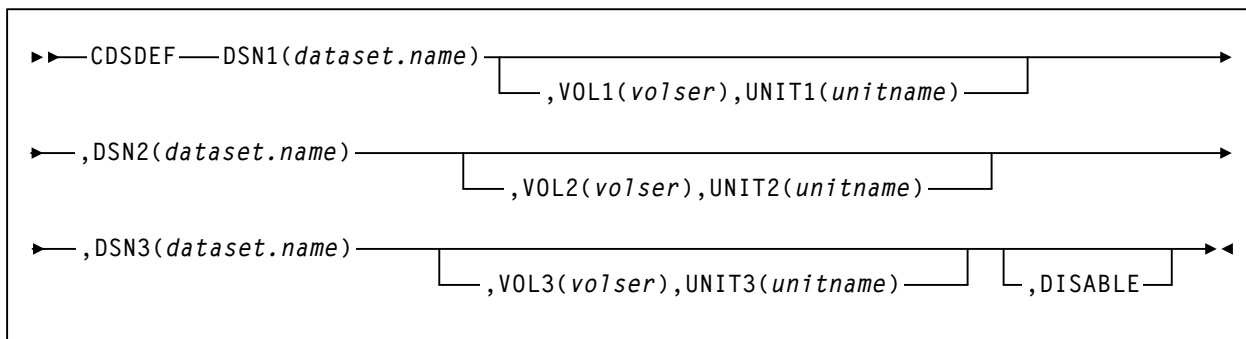


EXECParm control statement

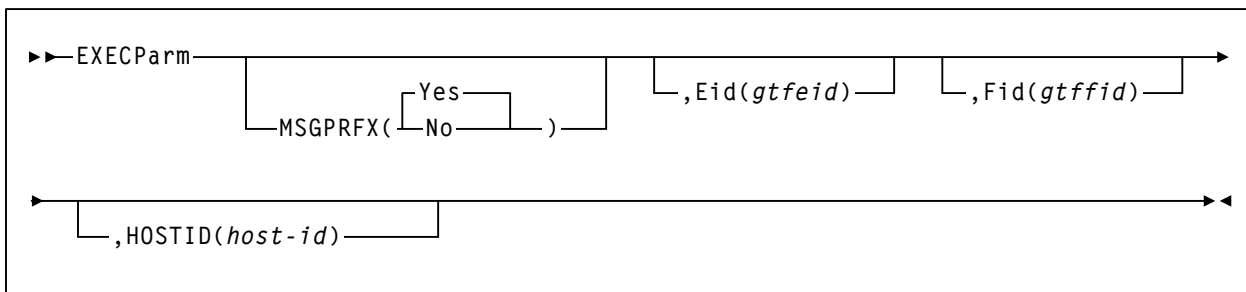


Journal Definition (JRNDEF) control statement

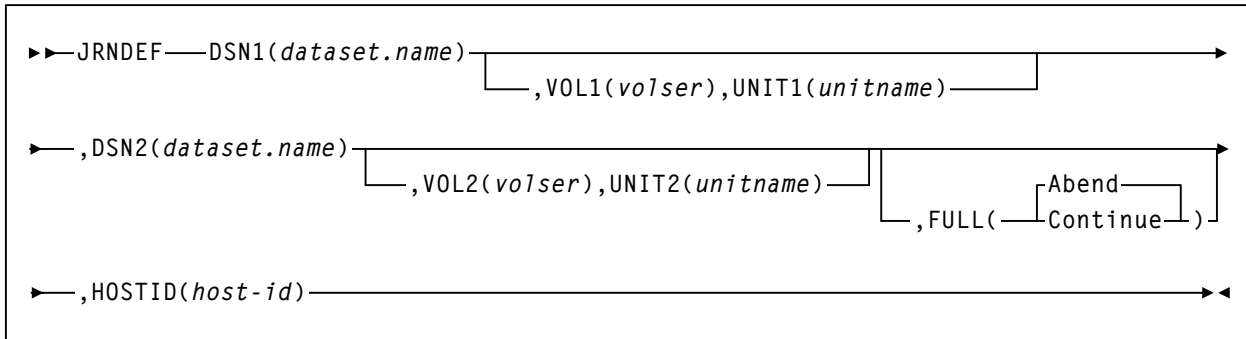


LMUPATH control statement

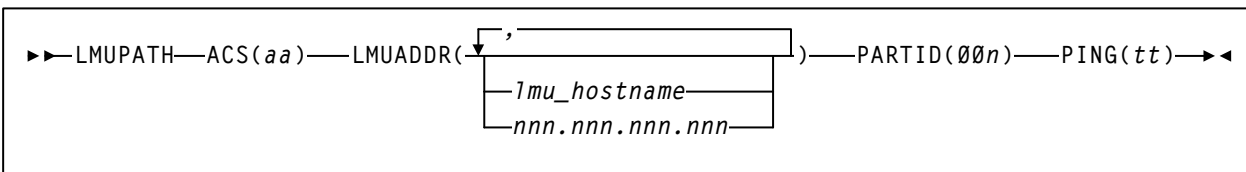


LMUPDEF command and control statement

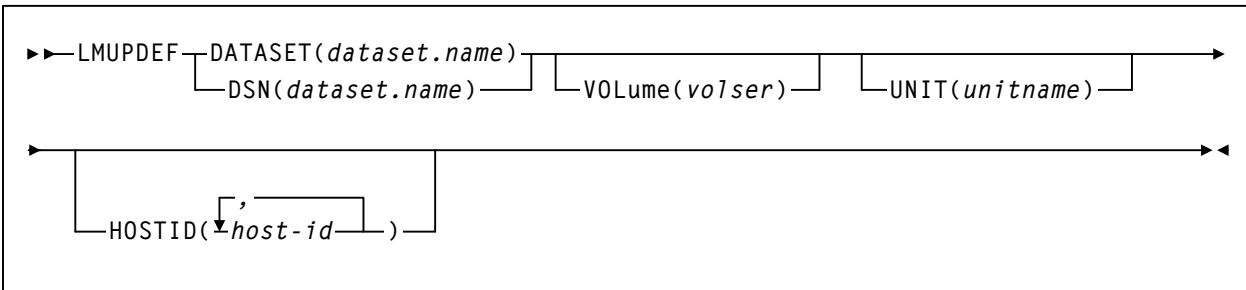


OPTion control statement

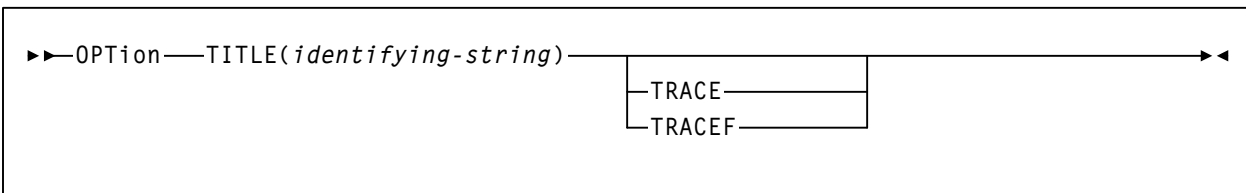


Reconfiguration Definition (RECDEF) control statement

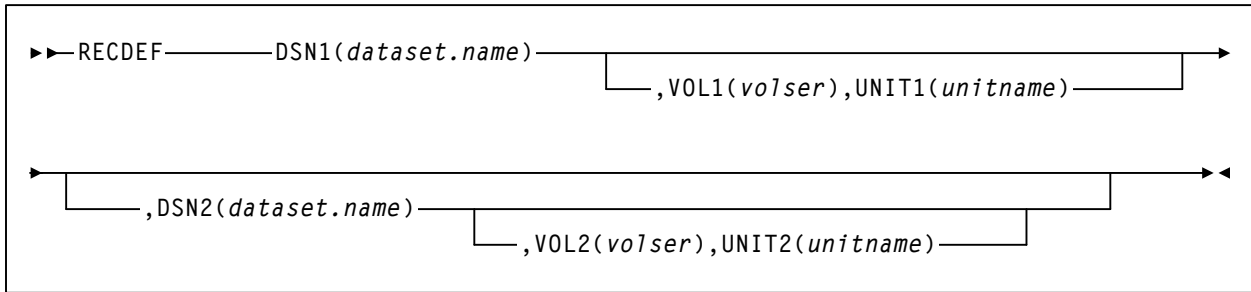


Scratch Subpool Definition (SCRPDEF) command and control statement

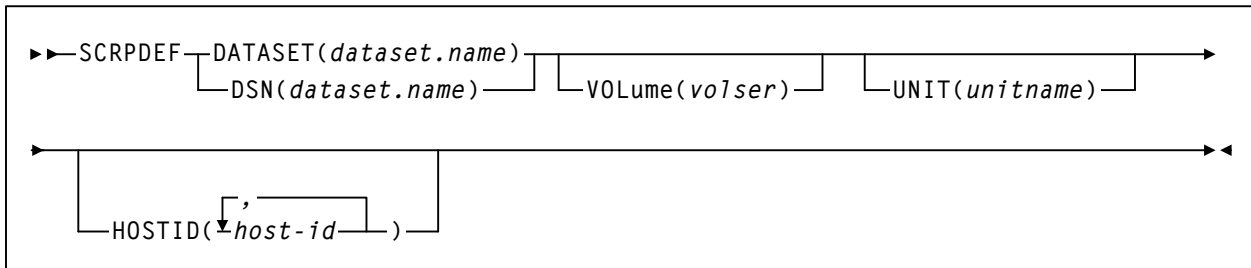

Scratch Subpool (SCRPOol) control statement

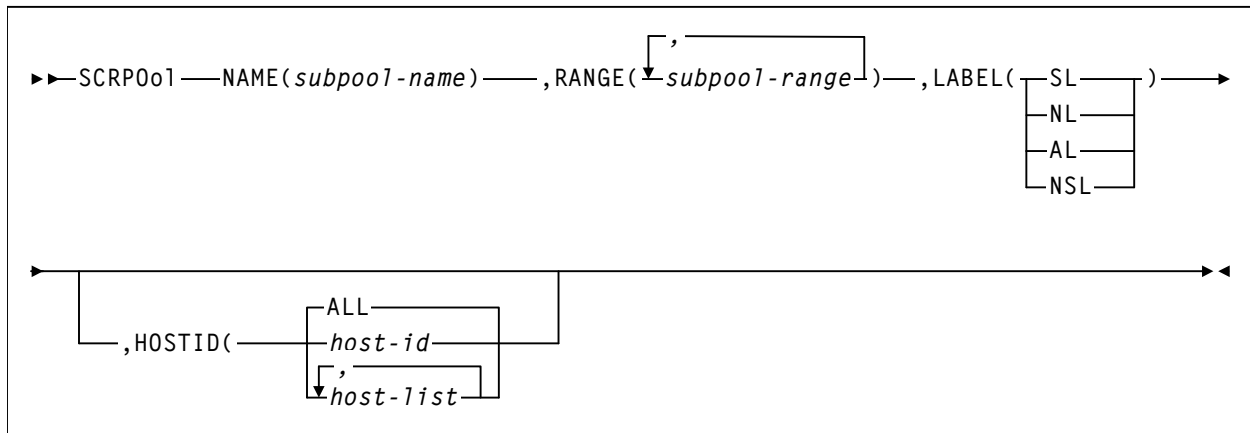


Volume Attribute (VOLATTR) control statement

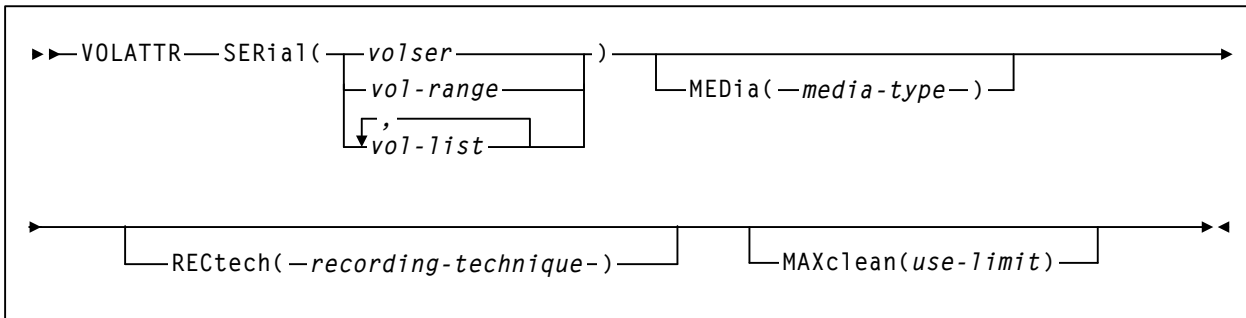

| Media Types | Recording Techniques |
|---|--|
| LONGItud, Standard | LONGItud, 18track, 36track, 36Atrack, 36Btrack, 36Ctrack |
| ECART | |
| ZCART | |
| DD3A, DD3B, DD3C, DD3D | HELical, DD3 |
| STK1R, STK1U, STK1Y | STK1R, STK1R34, STK1R35, STK1RA, STK1RA34, STK1RA35, STK1RB, STK1RB34, STK1RB35, STK1RAB, STK1RAB4, STK1RAB5, STK1RC, STK1RC34, STK1RC35, STK1RD, STK1RDE, STK1RDN, STK1RD34, STK1RD35, STK1RDE4, STK1RDE5 |
| STK2P STK2W | STK2P, STK2P34, STK2P35, STK2PA, STK2PA34, STK2PA35, STK2PB, STK2PB34, STK2PB35 |
| LTO-10G, LTO-35G, LTO-50G, LTO-100G, LTO-200G, LTO-400G, LTO-400W, LTO-800G, LTO-800W, LTO-1.5T, LTO-1.5W | * |
| SDLT, SDLT-2, SDLT-S1, SDLT-S2, SDLT-S3, SDLT-S4, SDLT-4 | * |
| T10000T1, T10000TS, T10000T2, T10000TT, T10000CT, T10000CL | T10K, T10KN, T10KE, T10KA, T10KAN, T1A34, T1A35, T10KAE, T1AE34, T1AE35, T10KB, T10KBN, T1B34, T1B35, T10KBE, T1BE34, T1BE35, T10KC, T10KCE, T10KCN, T1C34, T1C35, T1CE34, T1CE35 |

* No corresponding recording technique.


Volume Attribute Definition (VOLDEF) command and control statement

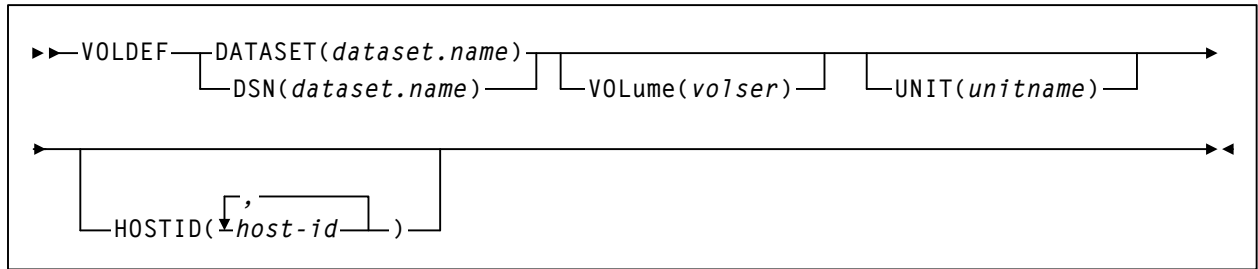


Utility Syntax

This section contains the syntax for library utilities. For complete descriptions of the utilities, see the *HSC/MSP System Programmer's Guide*.


ACTivities Report utility

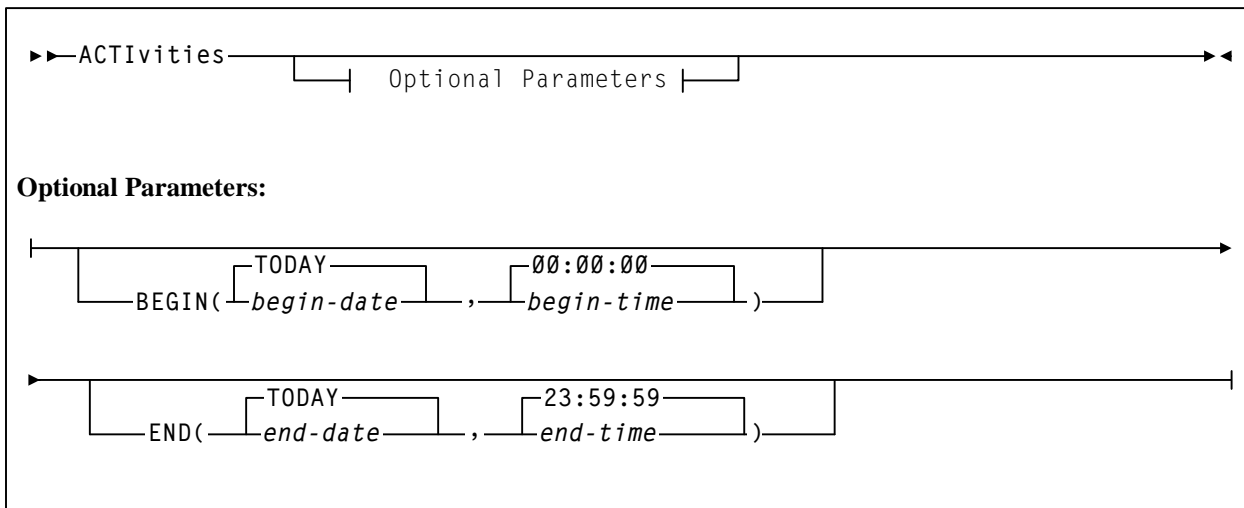


AUDIt utility

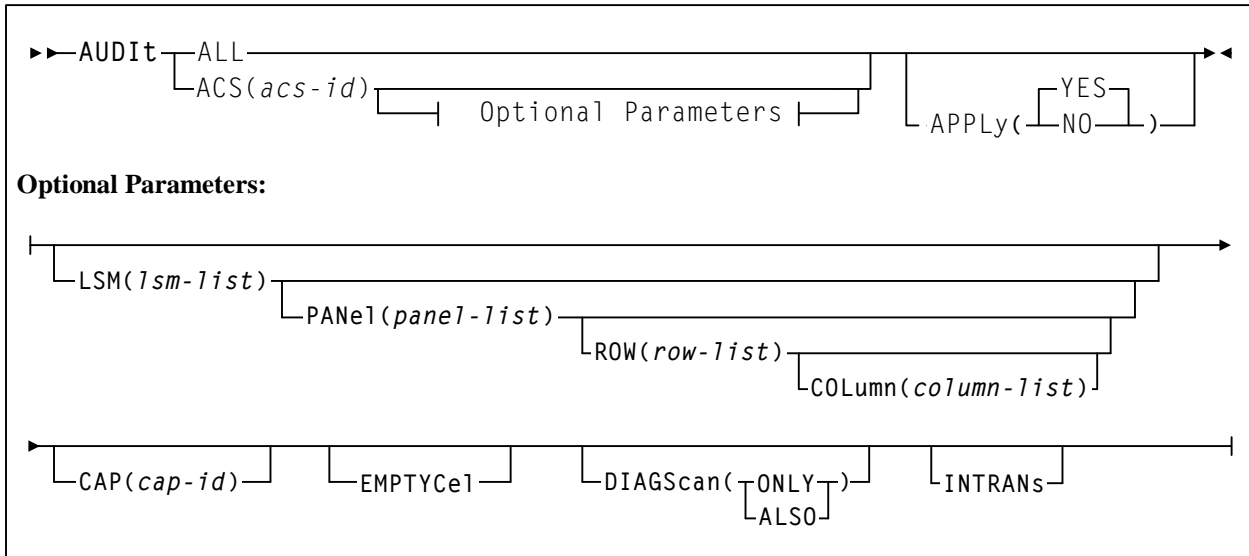


BACKup utility

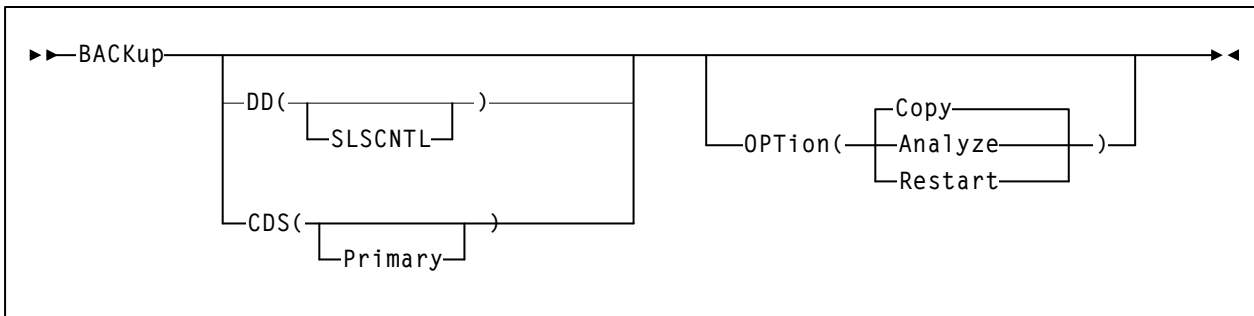


Database Decompile (LIBGEN) utility

 

Directory Rebuild (DIRBLD) utility

 

EJECT utility

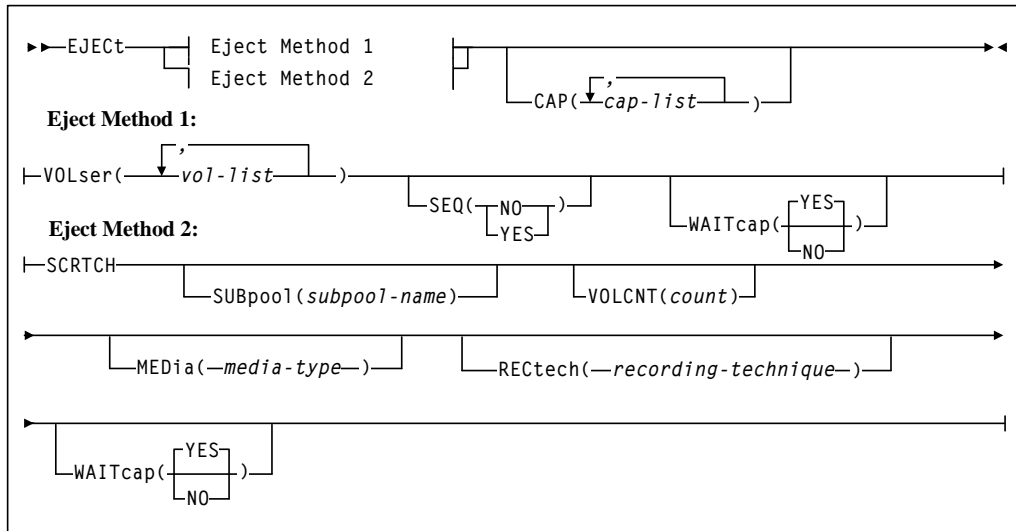


| Media Types | Recording Techniques |
|---|--|
| Standard | 18track, 36track, 36Atrack, 36Btrack, 36Ctrack |
| ECART | |
| ZCART | |
| DD3, DD3A, DD3B, DD3C | HELical, DD3 |
| STK1, STK1R | STK1R, STK1R34, STK1R35, STK1RA, STK1RA34, STK1RA35, STK1RB, STK1RB34, STK1RB35, STK1RAB, STK1RAB4, STK1RAB5, STK1RC, STK1RC34, STK1RC35, STK1RD, STK1RDE, STK1RDN, STK1RD34, STK1RD35, STK1RDE4, STK1RDE5 |
| STK2, STK2P | STK2P, STK2P34, STK2P35, STK2PA, STK2PA34, STK2PA35, STK2PB, STK2PB34, STK2PB35 |
| LTO-10G, LTO-35G, LTO-50G, LTO-100G, LTO-200G, LTO-400G, LTO-400W, LTO-800G, LTO-800W, LTO-1.5T, LTO-1.5W | * |
| SDLT, SDLT-2, SDLT-S1, SDLT-S2, SDLT-S3, SDLT-S4, SDLT-4 | * |


| Media Types | Recording Techniques |
|--|---|
| T10000T1, T10000TS, T10000T2, T10000TT | T10K, T10KN, T10KE, T10KA, T10KAN, T1A34, T1A35, T10KAE, T1AE34, T1AE35, T10KB, T10KBN, T1B34, T1B35, T10KBE, T1BE34, T1BE35, T10KC, T10KCE, T10KCN, T1C34, T1C35, T1CE34, T1CE35 |

* No corresponding recording technique.


INITialize Cartridge utility

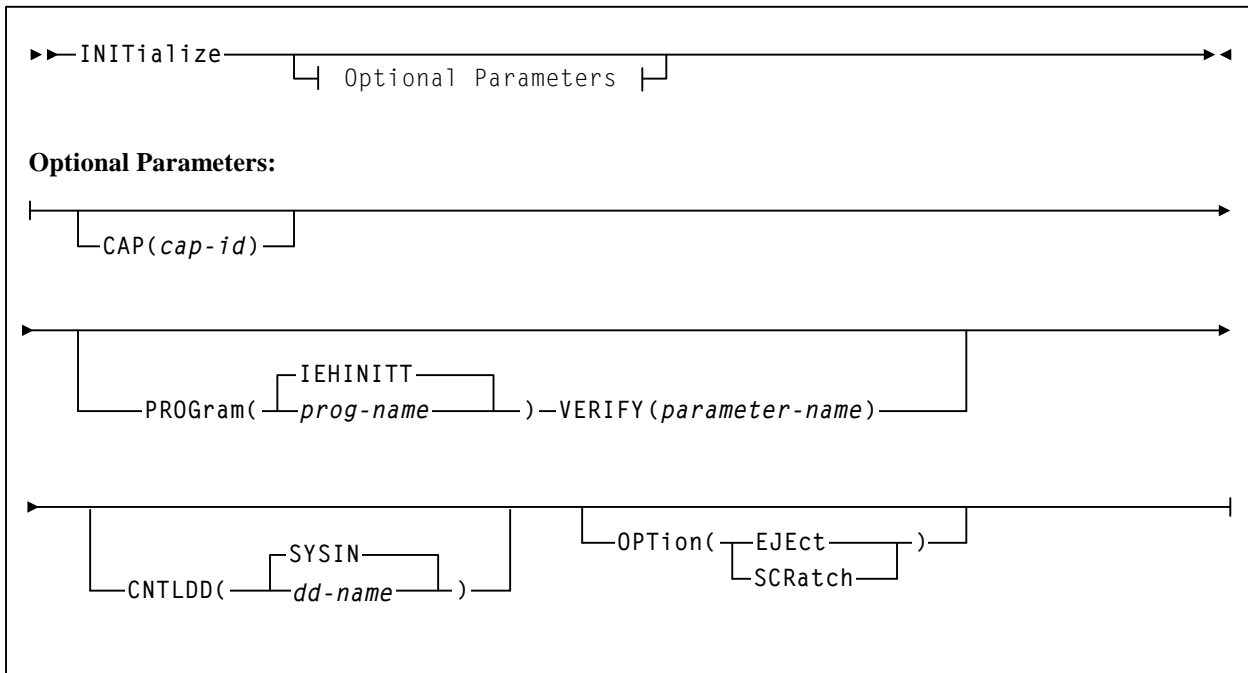


Journal OFFLoad utility

 


MERGEcds utility

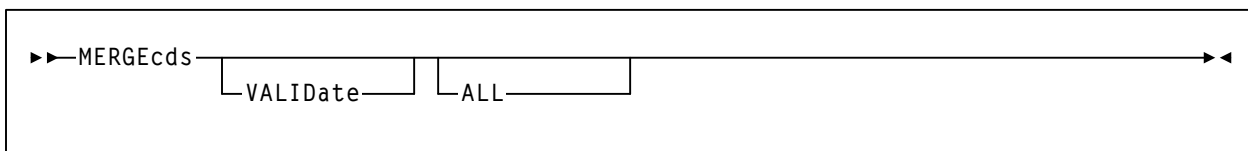


MOVE utility

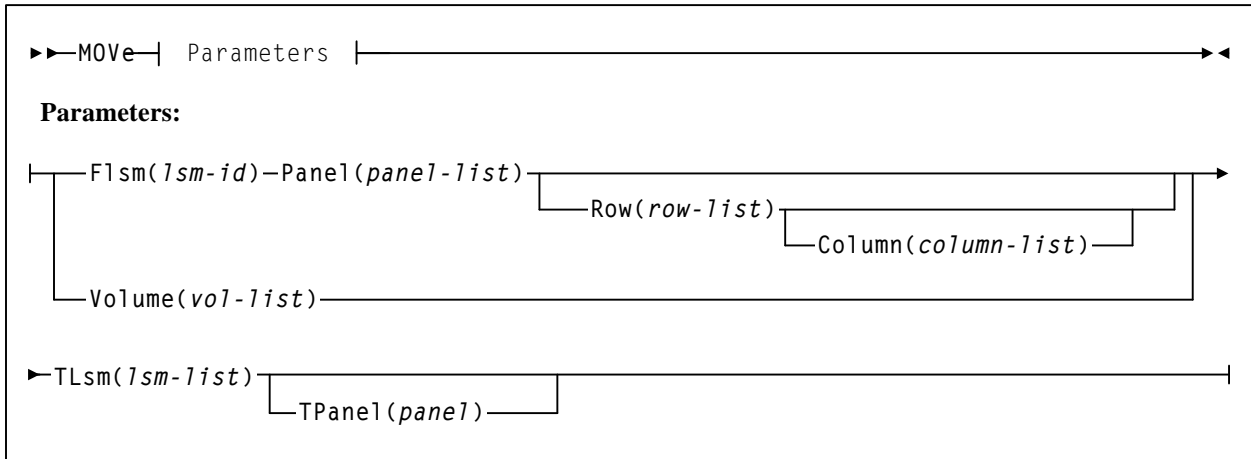


Reconfiguration utility

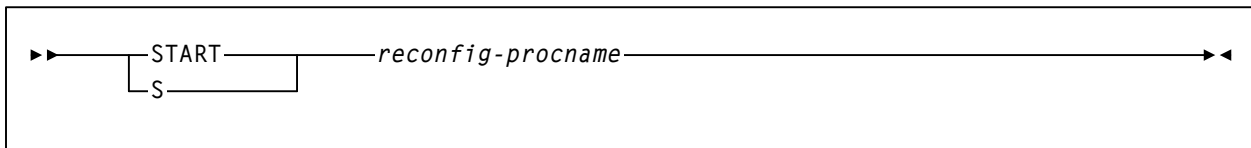


REPLace utility

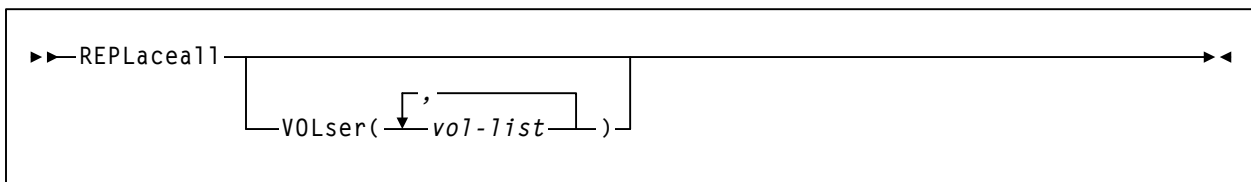


RESTore utility

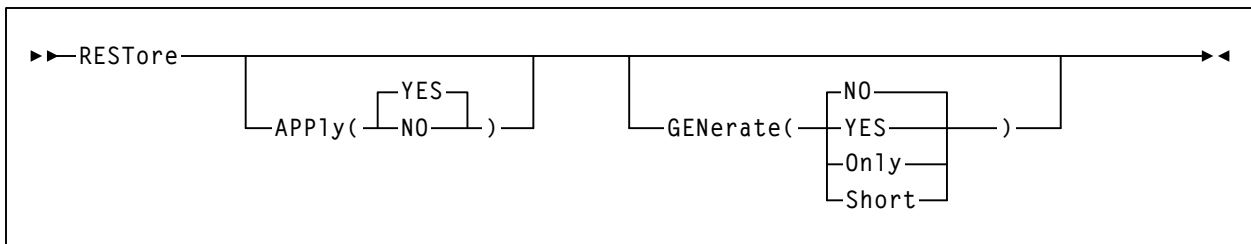


SCRAtch utility

 

Scratch Conversion utility

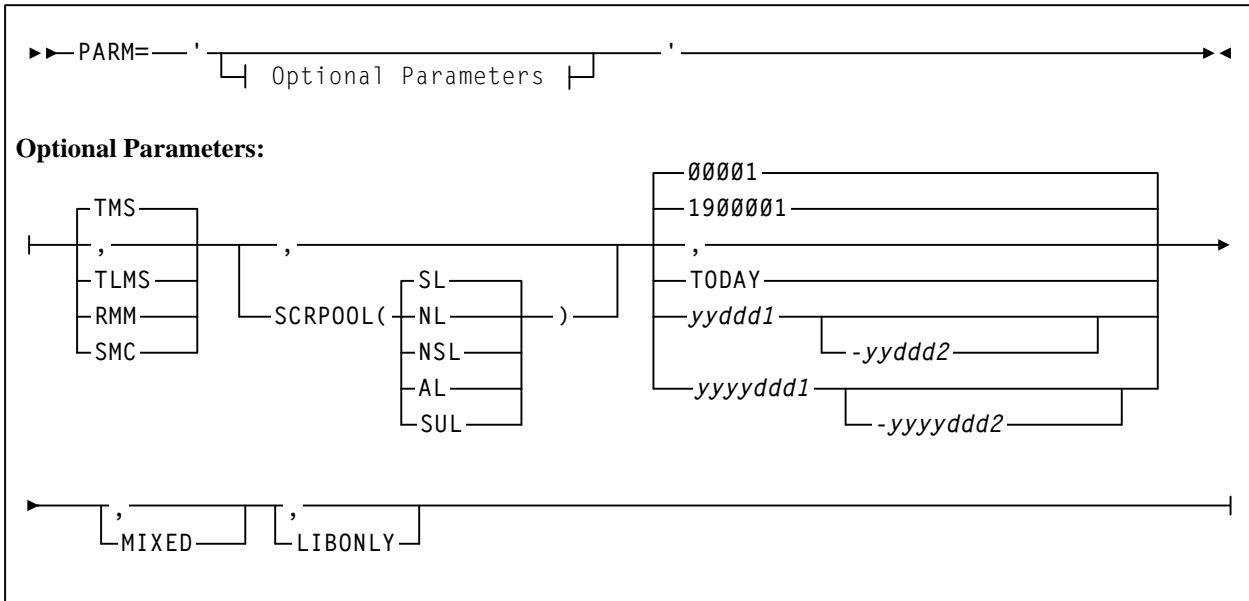


Scratch Redistribution (SCREdist) utility

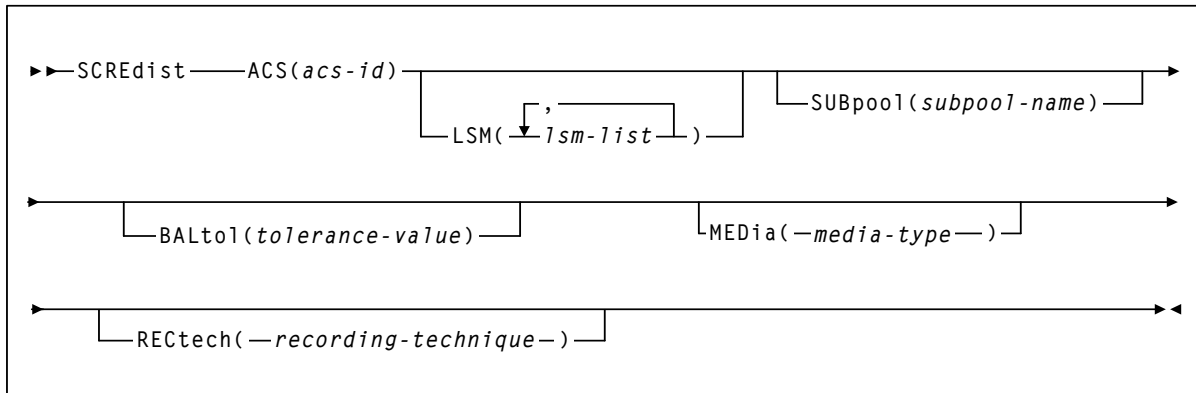

| Media Types | Recording Techniques |
|---|--|
| LONGitud, Standard | LONGitud, 18track, 36track, 36Atrack, 36Btrack, 36Ctrack |
| ECART | |
| ZCART | |
| DD3, DD3A, DD3B, DD3C | HELical, DD3 |
| STK1, STK1R | STK1R, STK1R34, STK1R35, STK1RA, STK1RA34, STK1RA35, STK1RB, STK1RB34, STK1RB35, STK1RAB, STK1RAB4, STK1RAB5, STK1RC, STK1RC34, STK1RC35, STK1RD, STK1RDE, STK1RDN, STK1RD34, STK1RD35, STK1RDE4, STK1RDE5 |
| STK2, STK2P | STK2P, STK2P34, STK2P35, STK2PA, STK2PA34, STK2PA35, STK2PB, STK2PB34, STK2PB35 |
| LTO-10G, LTO-35G, LTO-50G, LTO-100G, LTO-200G, LTO-400G, LTO-400W, LTO-800G, LTO-800W, LTO-1.5T, LTO-1.5W | * |
| SDLT, SDLT-2, SDLT-S1, SDLT-S2, SDLT-S3, SDLT-S4, SDLT-4 | * |
| T10000T1, T10000TS, T10000T2, T10000TT | T10K, T10KN, T10KE, T10KA, T10KAN, T1A34, T1A35, T10KAE, T1AE34, T1AE35, T10KB, T10KBN, T1B34, T1B35, T10KBE, T1BE34, T1BE35, T10KC, T10KCE, T10KCN, T1C34, T1C35, T1CE34, T1CE35 |

* No corresponding recording technique.


SET utility

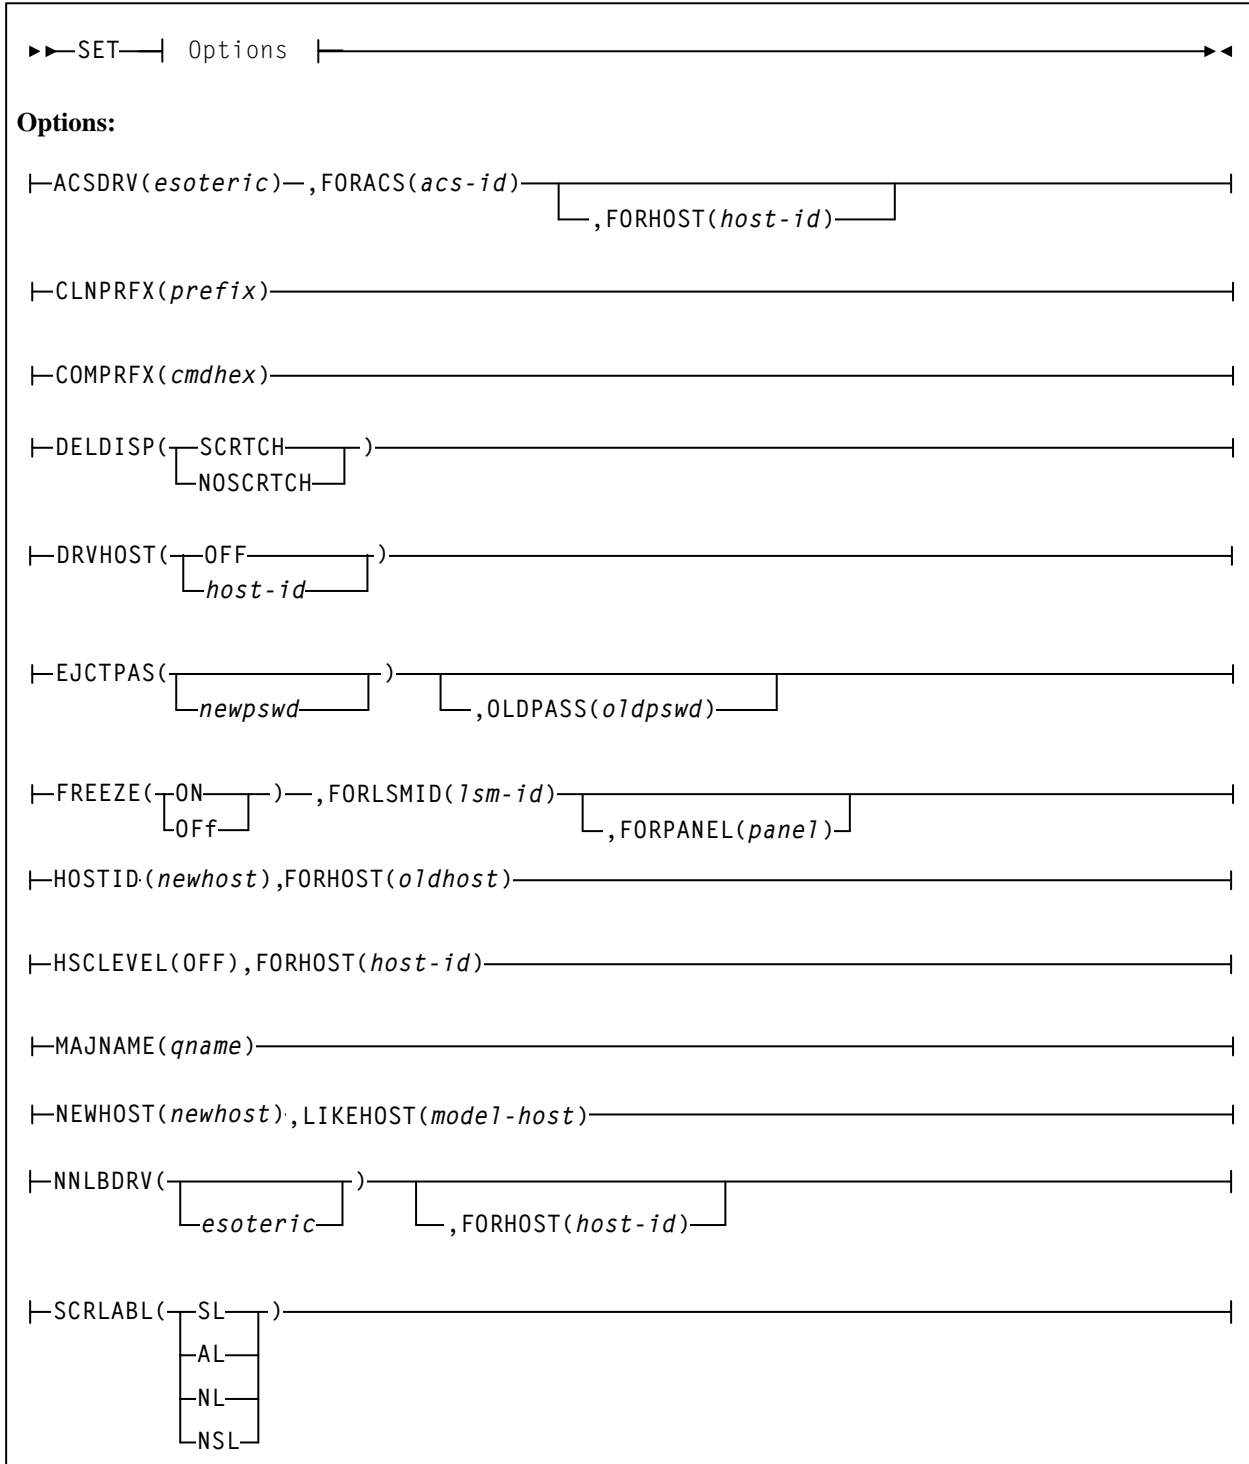


SET utility (continued)




UNSCratch utility

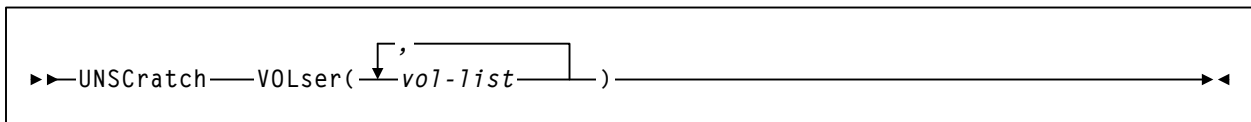

UNSElect utility

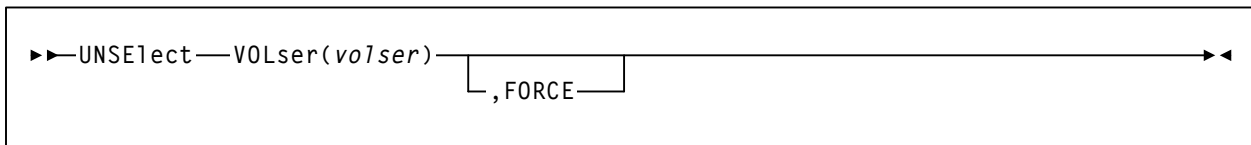


Volume Report (VOLRpt) utility

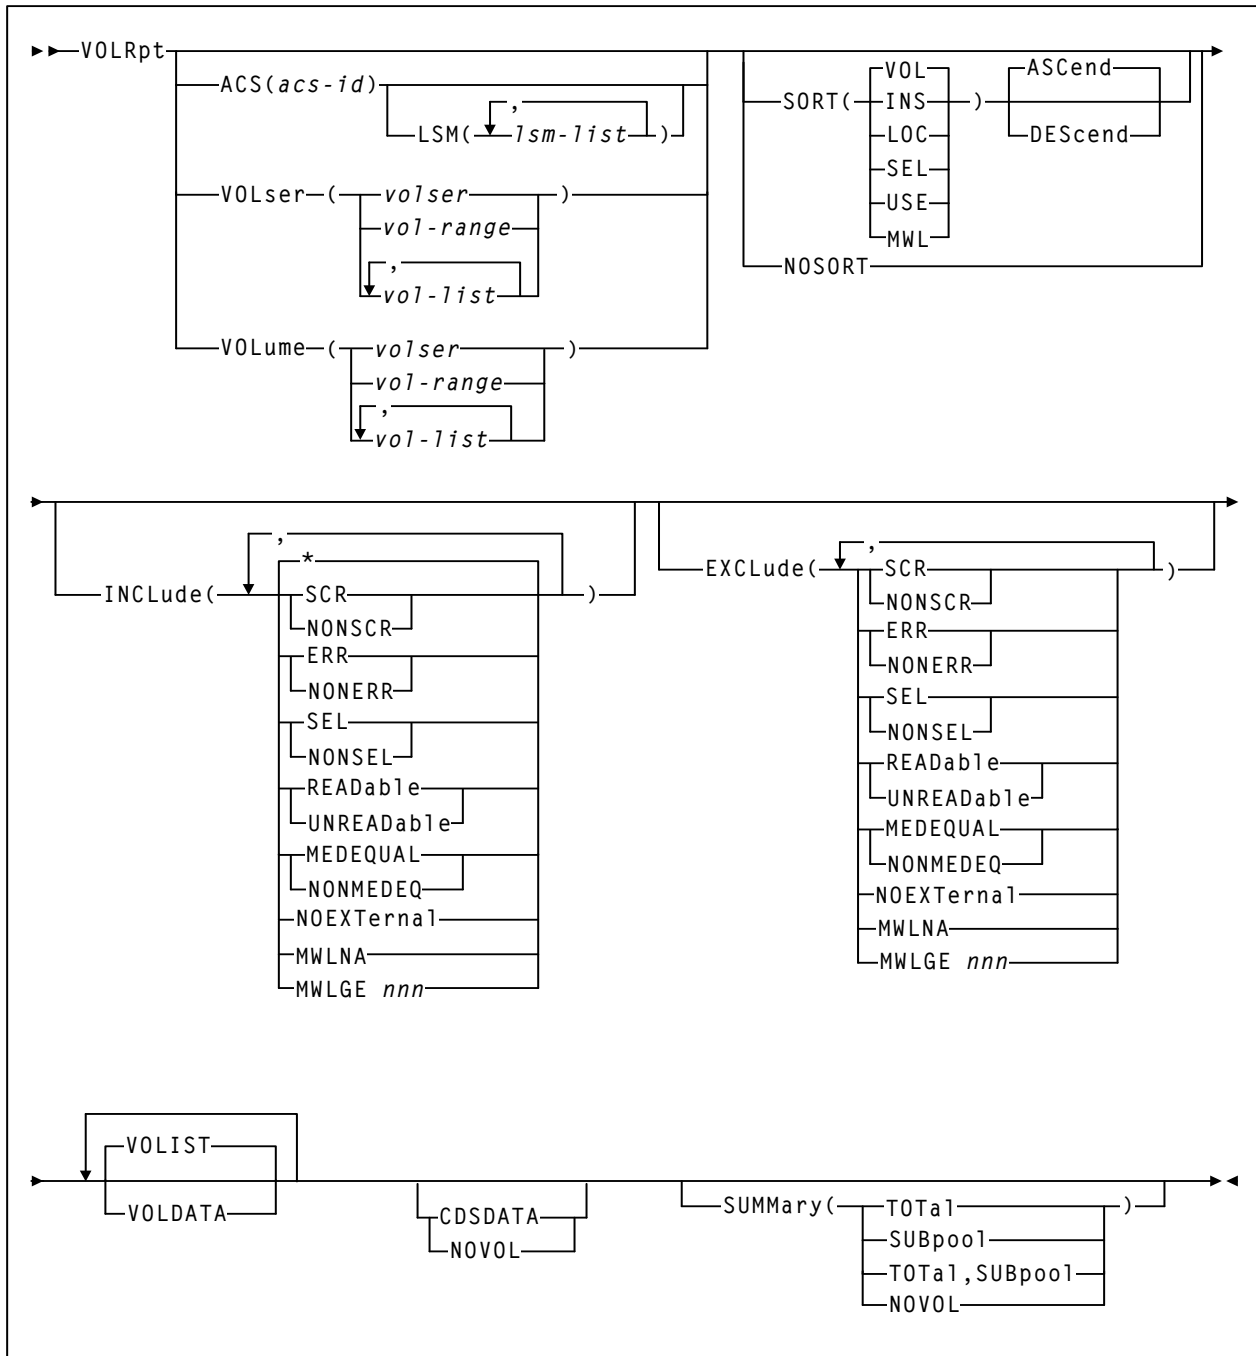


HSC Operator Command Syntax

This section contains the syntax for operator commands. For complete descriptions of the commands, see the *HSC/MSP Operator's Guide*.


Allocation (ALLOC) command and control statement

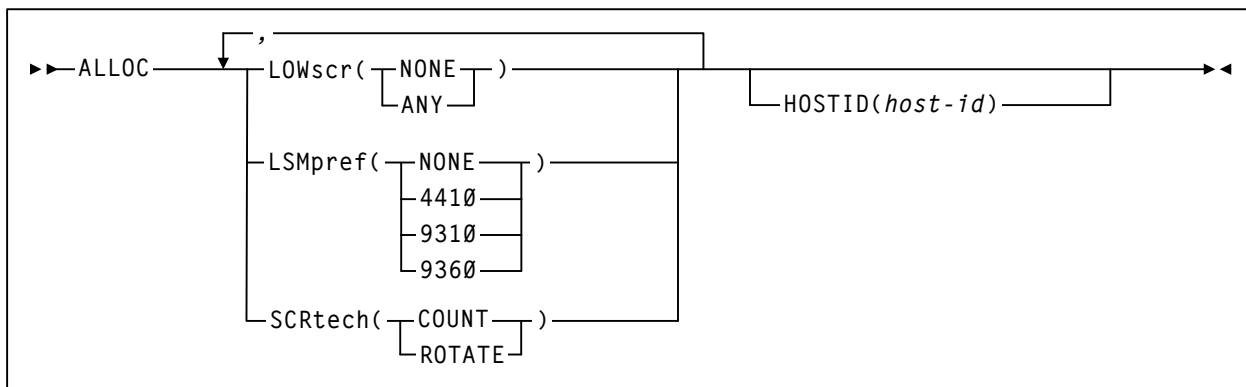


CAP Preference (CAPPref) command and control statement

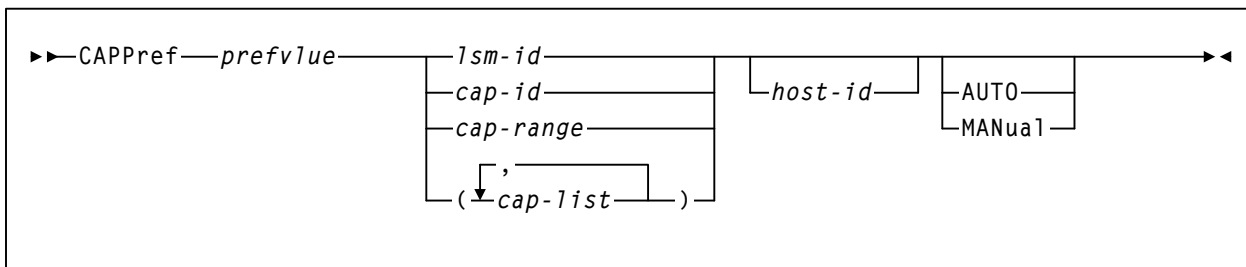


CDs Enable/Disable command

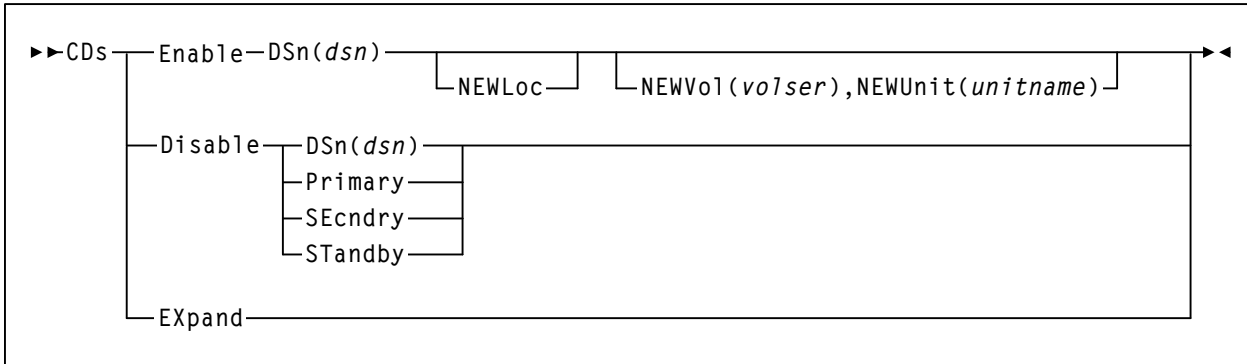


CLean command

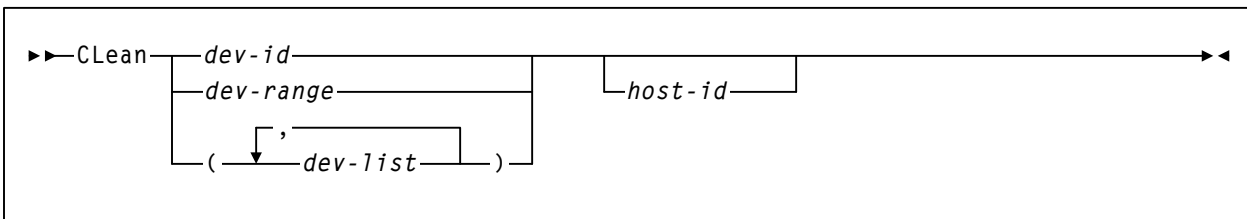

Communications Path (COMMPath) command and control statement

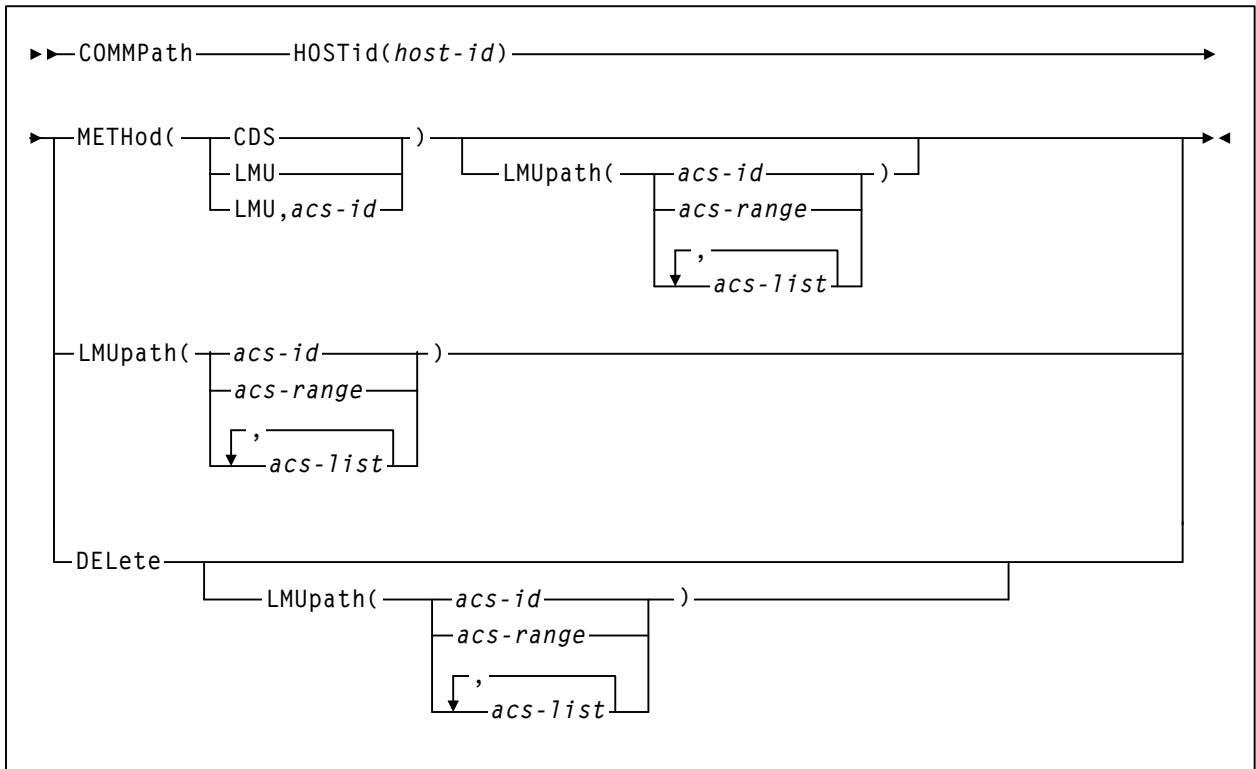


DISMount command

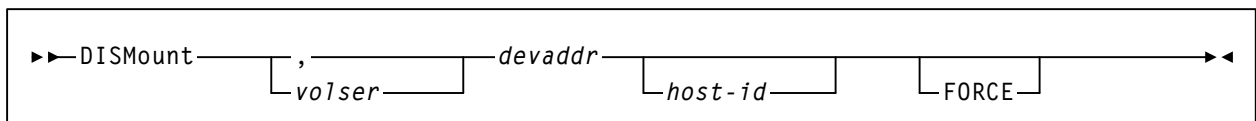


Display command


Display Acs

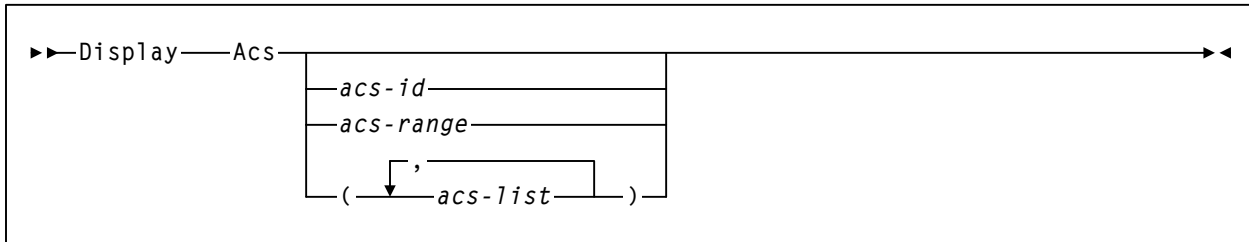


Display ALI

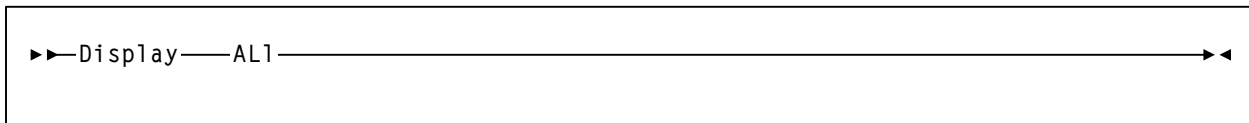


Display ALLOC

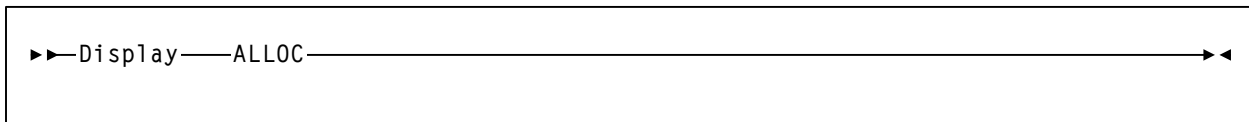


Display Cap

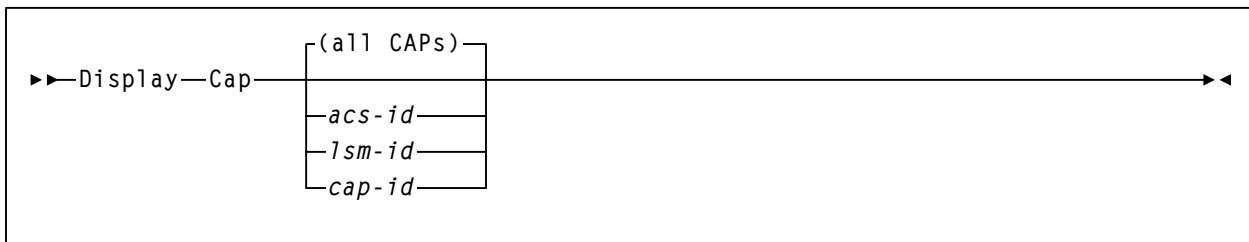


Display CDS

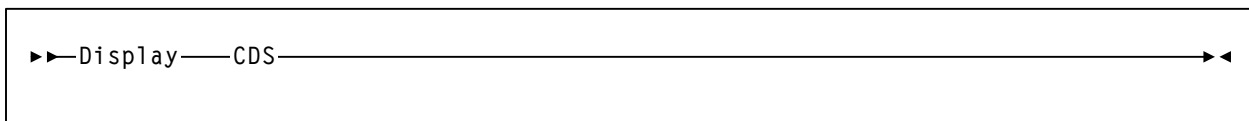


Display Cmd

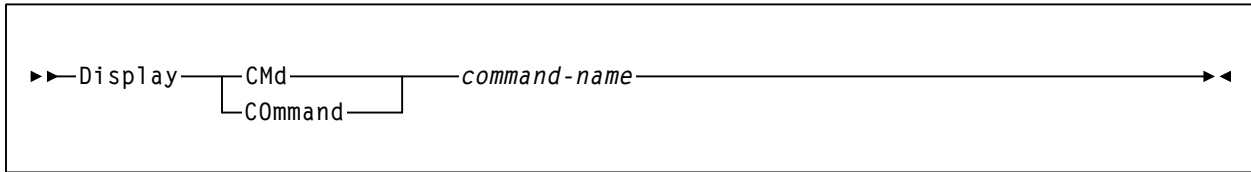

Display COMMPath

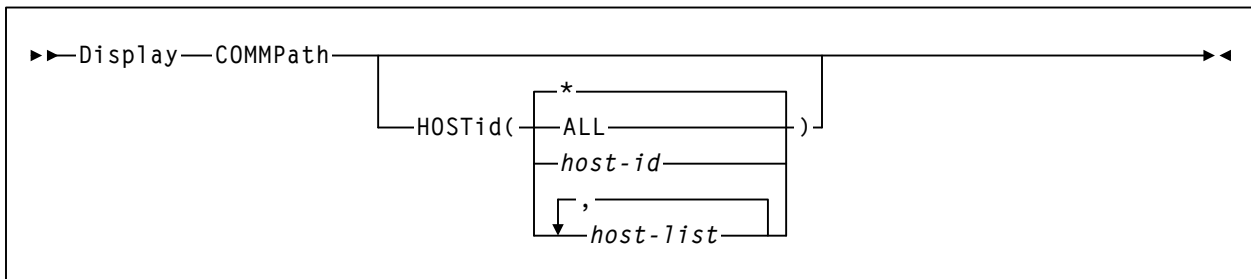

Display Dives

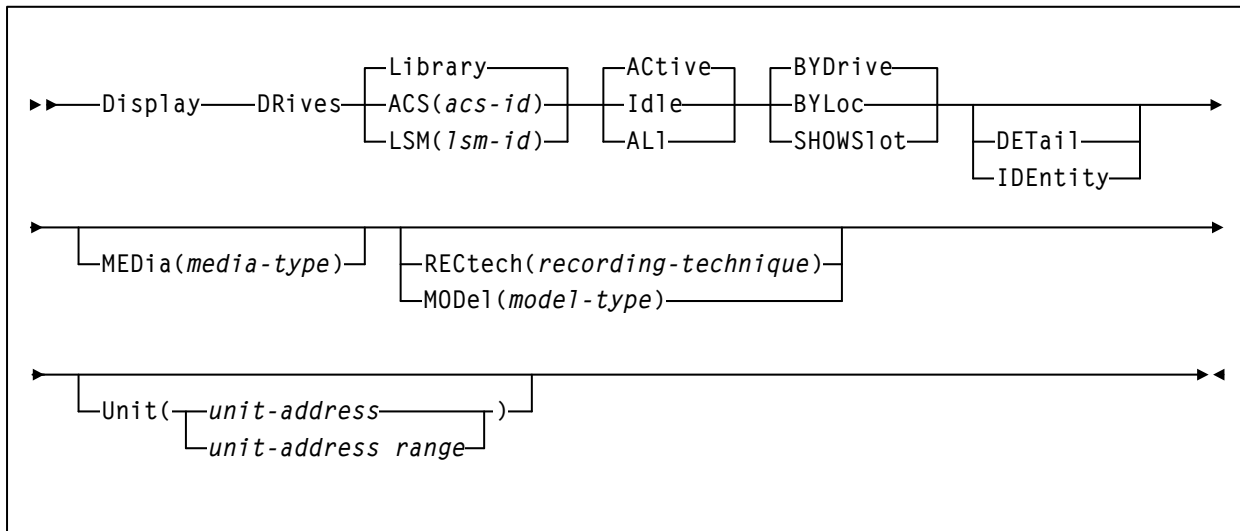


| Media Types | Recording Techniques | Model Types |
|---|--|--|
| LONGItud | LONGItud, 18track, 36track, 36Atrack, 36Btrack, 36Ctrack | 4480, 4490, 9490, 9490EE |
| Standard | | |
| ECART | | |
| ZCART | | |
| DD3, DD3A, DD3B, DD3C, DD3D | HELical, DD3 | SD3 |
| STK1, STK1R, STK1U, STK1Y | STK1R, STK1R34, STK1R35, STK1RA, STK1RA34, STK1RA35, STK1RB, STK1RB34, STK1RB35, STK1RAB, STK1RAB4, STK1RAB5, STK1RC, STK1RC34, STK1RC35, STK1RD, STK1RDE, STK1RDN, STK1RD34, STK1RD35, STK1RDE4, STK1RDE5 | 9840, 984035, T9840B, T984035B, T9840C, T9840C35, T9840D, T9840D35, T9840DE, T9840DE5 |
| STK2, STK2P, STK2W | STK2P, STK2P34, STK2P35, STK2PA, STK2PA34, STK2PA35, STK2PB, STK2PB34, STK2PB35 | T9940A, T9940A35, T9940B, T9940B35 |
| LTO-10G, LTO-35G, LTO-50G, LTO-100G, LTO-200G, LTO-400G, LTO-400W, LTO-800G, LTO-800W, LTO-1.5T, LTO-1.5W, LTO-CLN1, LTO-CLN2, LTO-CLNU | * | HP-LTO2, HP-LTO3, HP-LTO4, HP-LTO5, IBM-LTO2, IBM-LTO3, IBM-LTO4, IBM-LTO5 |


| Media Types | Recording Techniques | Model Types |
|--|---|--|
| SDLT, SDLT-2, SDLT-S1, SDLT-S2, SDLT-S3, SDLT-S4, SDLT-4 | * | SDLT-600, DLT-S4 |
| T10000T1, T10000TS, T10000T2, T10000TT, T10000CT, T10000CL | T10K, T10KN, T10KE, T10KA, T10KAN, T1A34, T1A35, T10KAE, T1AE34, T1AE35, T10KB, T10KBN, T1B34, T1B35, T10KBE, T1BE34, T1BE35, T10KC, T10KCE, T10KCN, T1C34, T1C35, T1CE34, T1CE35 | T1A34, T1A35, T1AE34, T1AE35, T1B34, T1B35, T1BE34, T1BE35, T1C34, T1C35, T1CE34, T1CE35 |

* No corresponding recording technique.


Display Exceptions

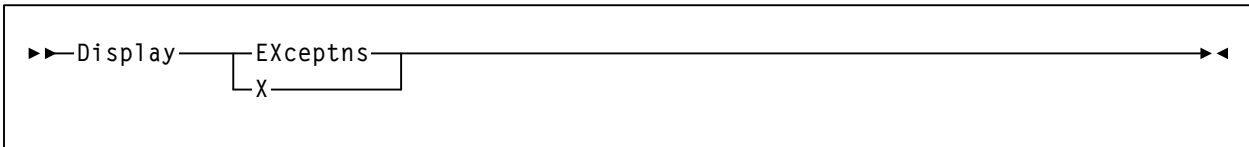


Display LMUPDEF

 


Display LSM

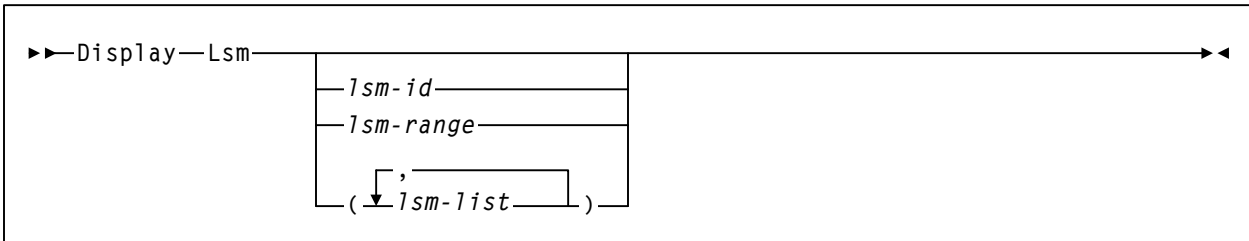


Display Message

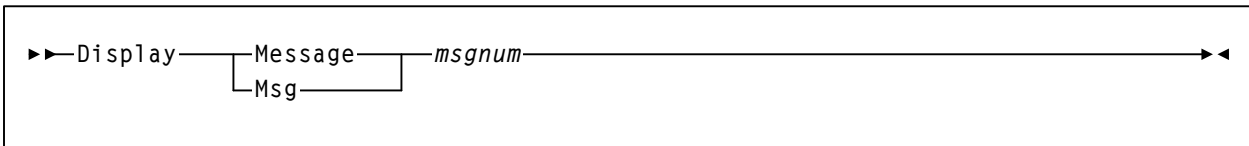


Display MNTD

 


Display MONitor

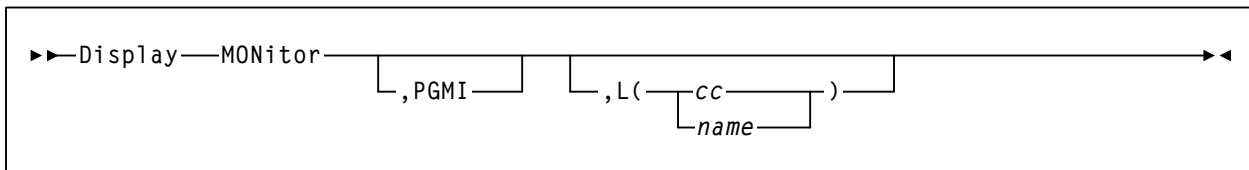


Display OPTion

 

Display Requests

 


Display SCRatch

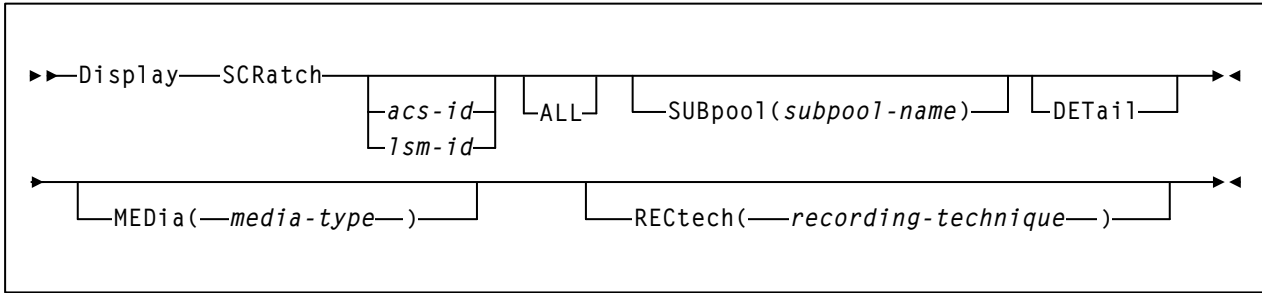


| Media Types | Recording Techniques |
|---|--|
| LONGitud | LONGitud, 18track, 36track, 36Atrack, 36Btrack, 36Ctrack |
| Standard | |
| ECART | |
| ZCART | |
| DD3, DD3A, DD3B, DD3C | HELical, DD3 |
| STK1, STK1R | STK1R, STK1R34, STK1R35, STK1RA, STK1RA34, STK1RA35, STK1RB, STK1RB34, STK1RB35, STK1RAB, STK1RAB4, STK1RAB5, STK1RC, STK1RC34, STK1RC35, STK1RD, STK1RDE, STK1RDN, STK1RD34, STK1RD35, STK1RDE4, STK1RDE5 |
| STK2, STK2P | STK2P, STK2P34, STK2P35, STK2PA, STK2PA34, STK2PA35, STK2PB, STK2PB34, STK2PB35 |
| LTO-10G, LTO-35G, LTO-50G, LTO-100G, LTO-200G, LTO-400G, LTO-400W, LTO-800G, LTO-800W, LTO-1.5T, LTO-1.5W | * |
| SDLT, SDLT-2, SDLT-S1, SDLT-S2, SDLT-S3, SDLT-S4, SDLT-4 | * |
| T10000T1, T10000TS, T10000T2, T10000TT | T10K, T10KN, T10KE, T10KA, T10KAN, T1A34, T1A35, T10KAE, T1AE34, T1AE35, T10KB, T10KBN, T1B34, T1B35, T10KBE, T1BE34, T1BE35, T10KC, T10KCE, T10KCN, T1C34, T1C35, T1CE34, T1CE35 |

* No corresponding recording technique.

 
Display SCRPDEF




Display SRVlev

 

Display Status

 


Display THReshld

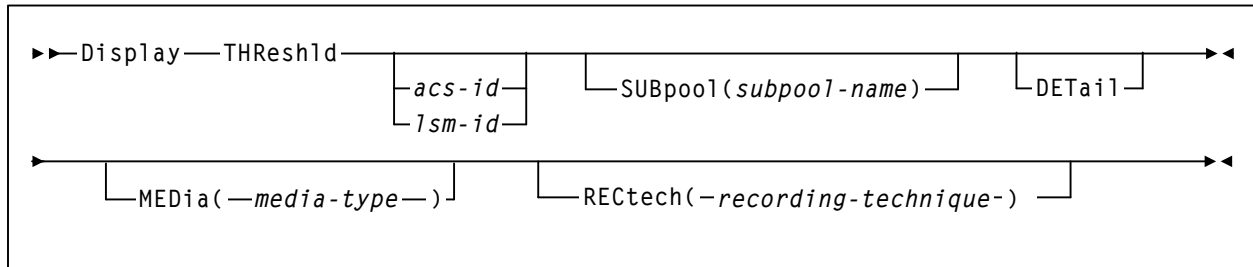


| Media Types | Recording Techniques |
|---|--|
| LONGitud | LONGItud, 18track, 36track, 36Atrack, 36Btrack, 36Ctrack |
| Standard | |
| ECART | |
| ZCART | |
| DD3, DD3A, DD3B, DD3C | HELical, DD3 |
| STK1, STK1R | STK1R, STK1R34, STK1R35, STK1RA, STK1RA34, STK1RA35, STK1RB, STK1RB34, STK1RB35, STK1RAB, STK1RAB4, STK1RAB5, STK1RC, STK1RC34, STK1RC35, STK1RD, STK1RDE, STK1RDN, STK1RD34, STK1RD35, STK1RDE4, STK1RDE5 |
| STK2, STK2P | STK2P, STK2P34, STK2P35, STK2PA, STK2PA34, STK2PA35, STK2PB, STK2PB34, STK2PB35 |
| LTO-10G, LTO-35G, LTO-50G, LTO-100G, LTO-200G, LTO-400G, LTO-400W, LTO-800G, LTO-800W, LTO-1.5T, LTO-1.5W | * |
| SDLT, SDLT-2, SDLT-S1, SDLT-S2, SDLT-S3, SDLT-S4, SDLT-4 | * |
| T10000T1, T10000TS, T10000T2, T10000TT | T10K, T10KN, T10KE, T10KA, T10KAN, T1A34, T1A35, T10KAE, T1AE34, T1AE35, T10KB, T10KBN, T1B34, T1B35, T10KBE, T1BE34, T1BE35, T10KC, T10KCE, T10KCN, T1C34, T1C35, T1CE34, T1CE35 |

* No corresponding recording technique.

 
Display TREQDEF




Display UNITDEF

 


Display VOLDEF

 


Display Volume

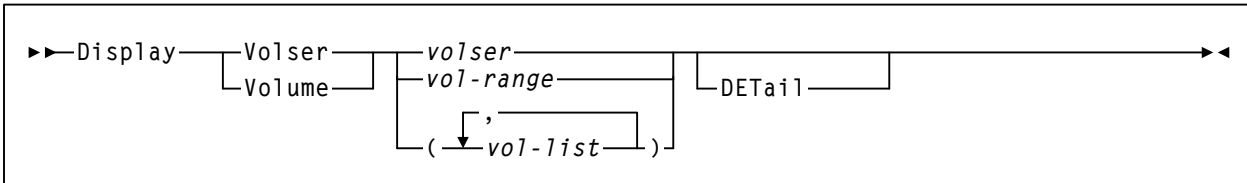

DRAIN CAP command

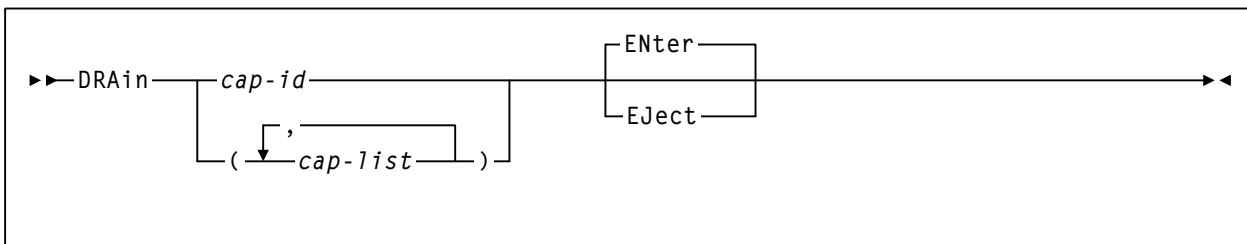

Eject command

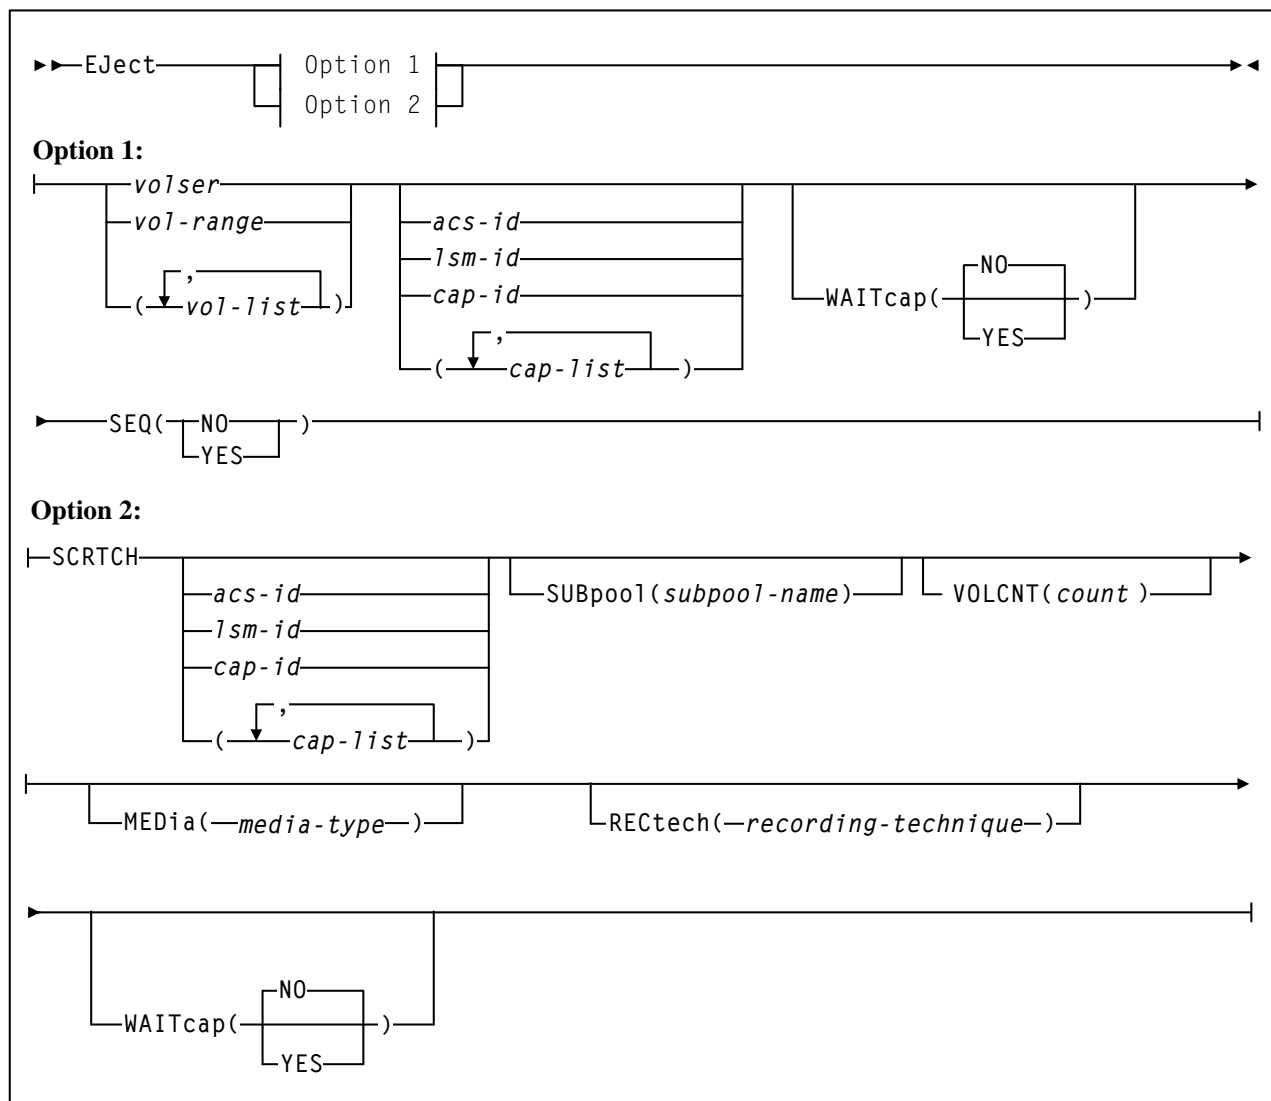


| Media Types | Recording Techniques |
|-----------------------|--|
| LONGitud | LONGitud, 18track, 36track, 36Atrack, 36Btrack, 36Ctrack |
| Standard | |
| ECART | |
| ZCART | |
| DD3, DD3A, DD3B, DD3C | HELical, DD3 |


| Media Types | Recording Techniques |
|---|--|
| STK1, STK1R | STK1R, STK1R34, STK1R35, STK1RA, STK1RA34, STK1RA35, STK1RB, STK1RB34, STK1RB35, STK1RAB, STK1RAB4, STK1RAB5, STK1RC, STK1RC34, STK1RC35, STK1RD, STK1RDE, STK1RDN, STK1RD34, STK1RD35, STK1RDE4, STK1RDE5 |
| STK2, STK2P | STK2P, STK2P34, STK2P35, STK2PA, STK2PA34, STK2PA35, STK2PB, STK2PB34, STK2PB35 |
| LTO-10G, LTO-35G, LTO-50G, LTO-100G, LTO-200G, LTO-400G, LTO-400W, LTO-800G, LTO-800W, LTO-1.5T, LTO-1.5W | * |
| SDLT, SDLT-2, SDLT-S1, SDLT-S2, SDLT-S3, SDLT-S4, SDLT-4 | * |
| T10000T1, T10000TS, T10000T2, T10000TT | T10K, T10KN, T10KE, T10KA, T10KAN, T1A34, T1A35, T10KAE, T1AE34, T1AE35, T10KB, T10KBN, T1B34, T1B35, T10KBE, T1BE34, T1BE35, T10KC, T10KCE, T10KCN, T1C34, T1C35, T1CE34, T1CE35 |

* No corresponding recording technique.


ENter command

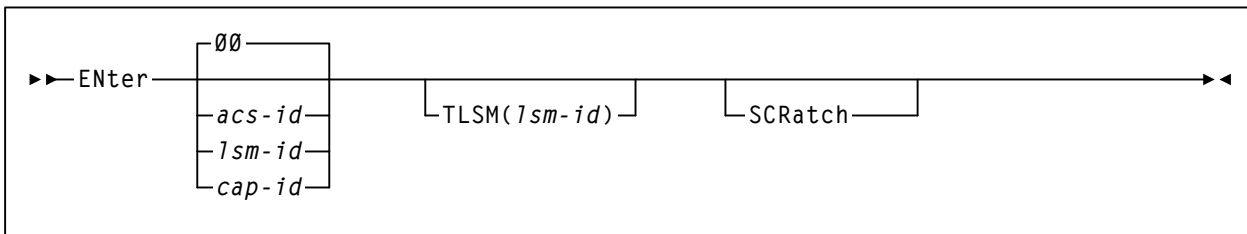


Journal command

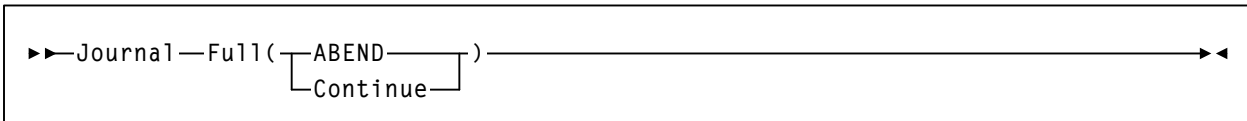


MODify command

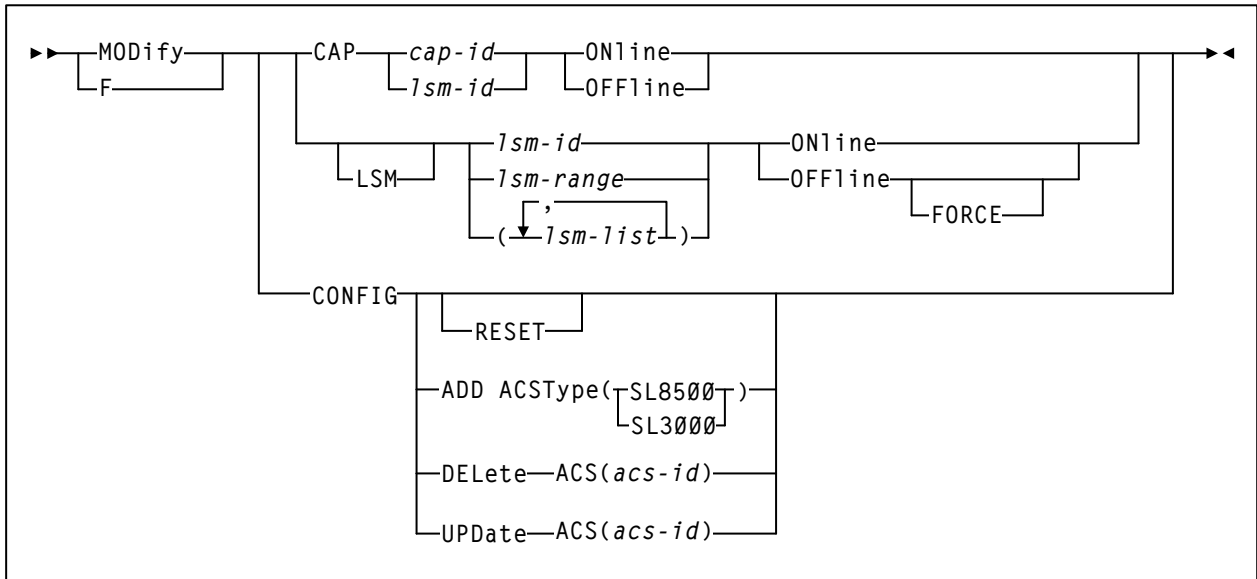

MONITOR command

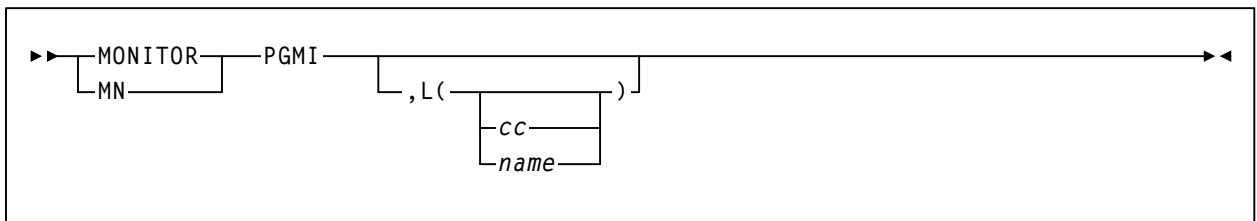


Mount command

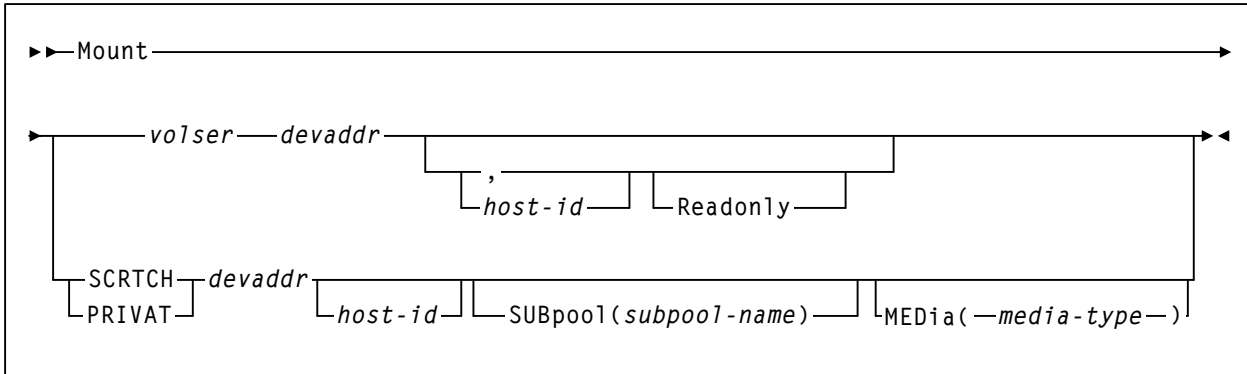


| Media Types |
|--|
| LONGitud |
| Standard |
| ECART |
| ZCART |
| DD3, DD3A, DD3B, DD3C |
| STK1, STK1R |
| STK2, STK2P |
| LTO-10G, LTO-35G, LTO-50G, LTO-100G, LTO-200G, LTO-400G, LTO-400W, LTO-800G, LTO-800W, LTO-1.5T, LTO-1.5W |
| SDLT, SDLT-2, SDLT-S1, SDLT-S2, SDLT-S3, SDLT-S4, SDLT-4 |
| T10000T1, T10000TS, T10000T2, T10000TT |


Mount/Dismount Options (MNTD) command and control statement

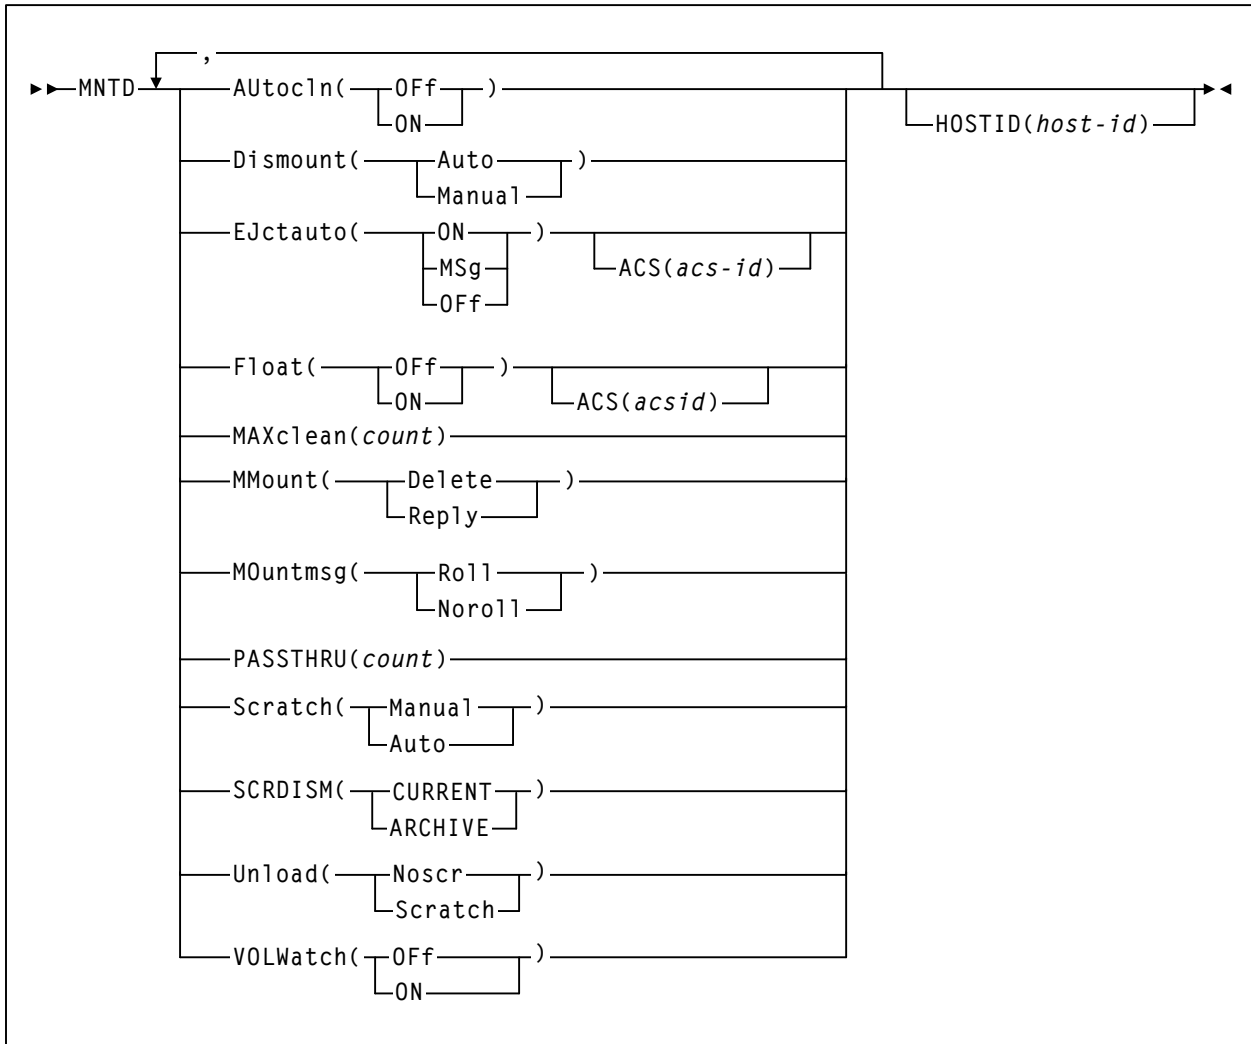


MOVE command

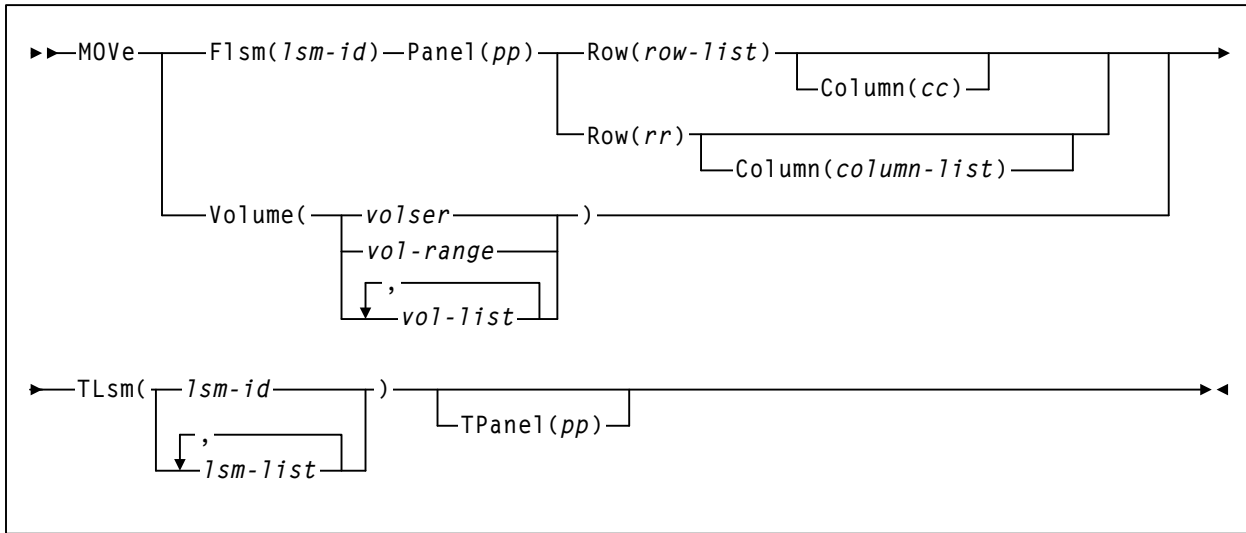

OPTion command and control statement

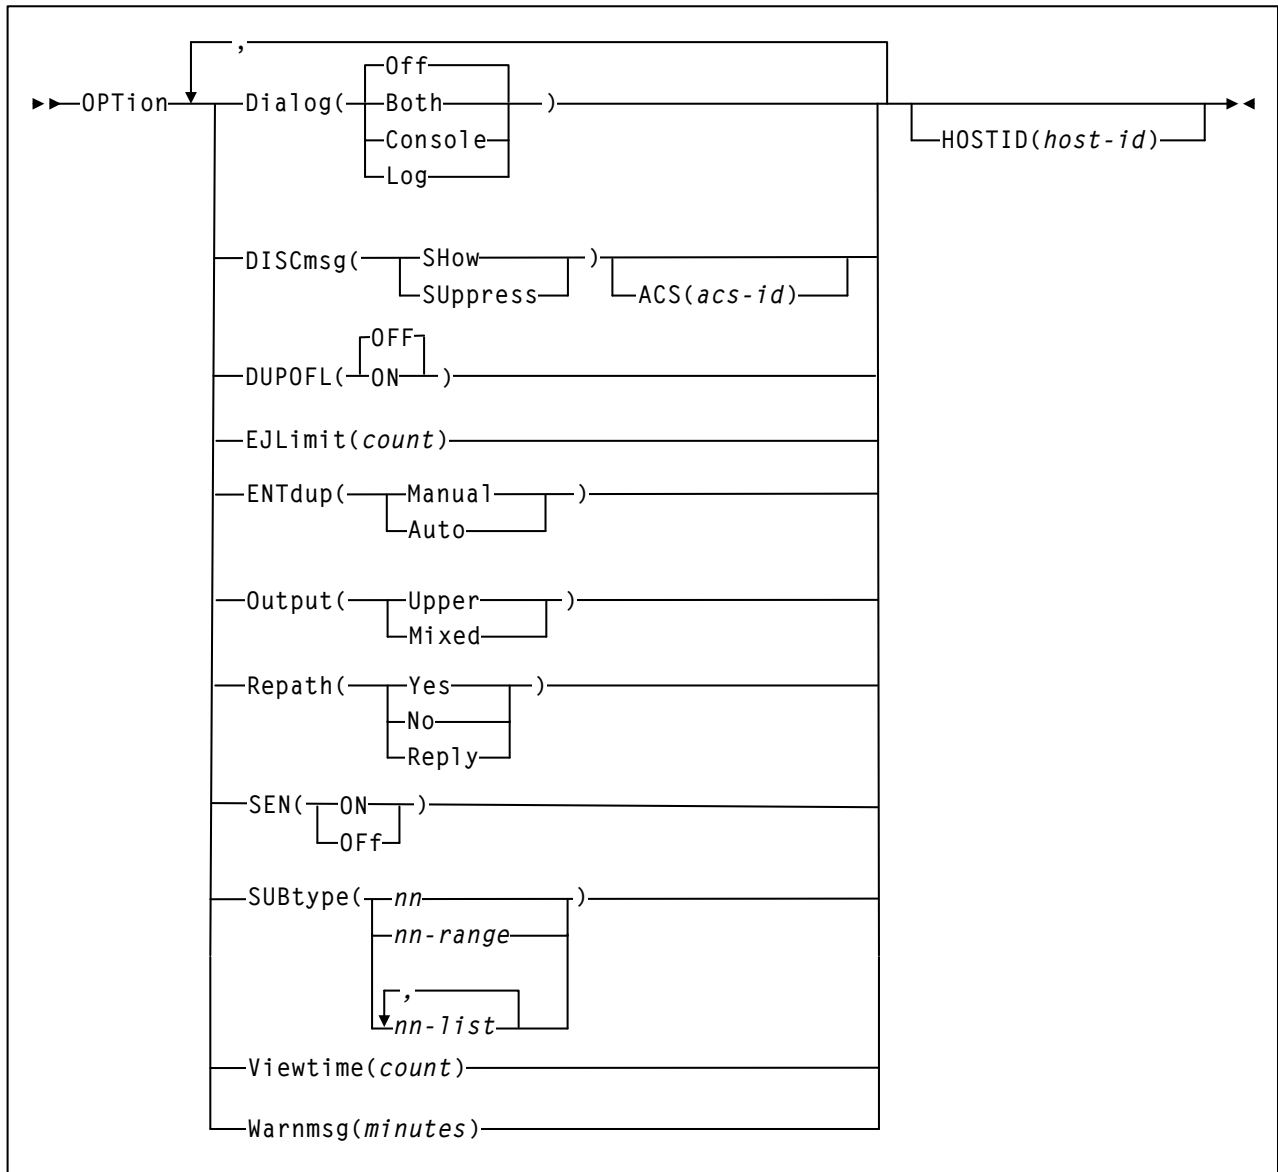

RECover Host command

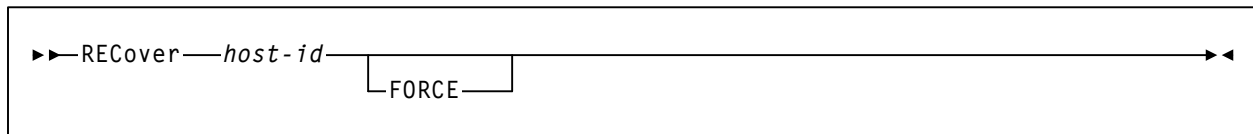

RELease CAP command

```
▶ RELease cap-id ◀◀
```

SCRAtch command

```
▶ SCRAtch VOLser( vol-list ) ◀◀
```

SEnTer command

```
▶ SEnTer cap-id ◀◀
```


SRVlev command

```
▶ SRVlev BASE ◀◀  
    FULL
```


Stop Monitoring (STOPMN) command

```
▶ STOPMN PGMI ◀◀  
    PM , L( cc )  
            name
```


SWitch command

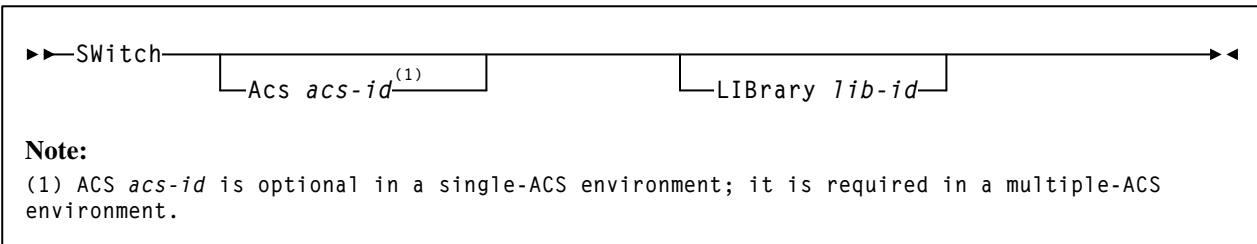


TRace command

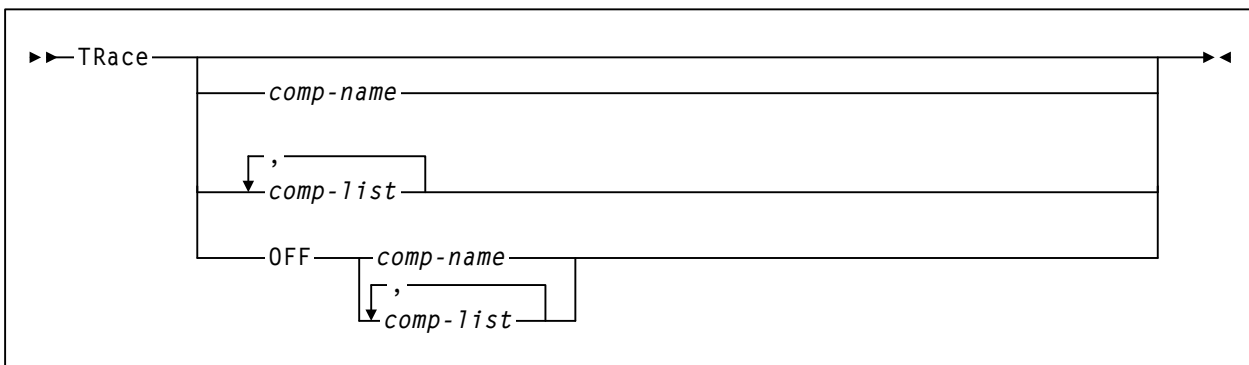


TRACELKP command

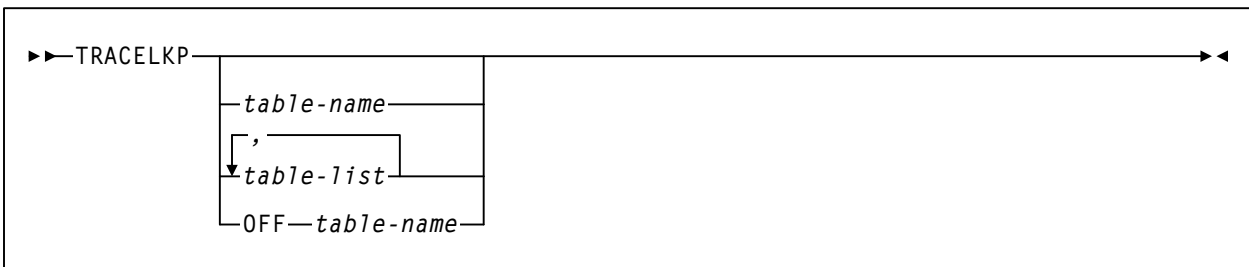


UNSCRatch command

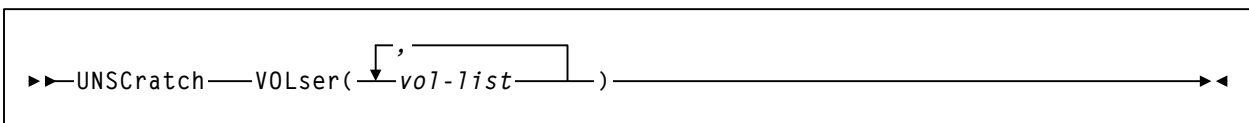


User Exit (UEXIT) command and control statement

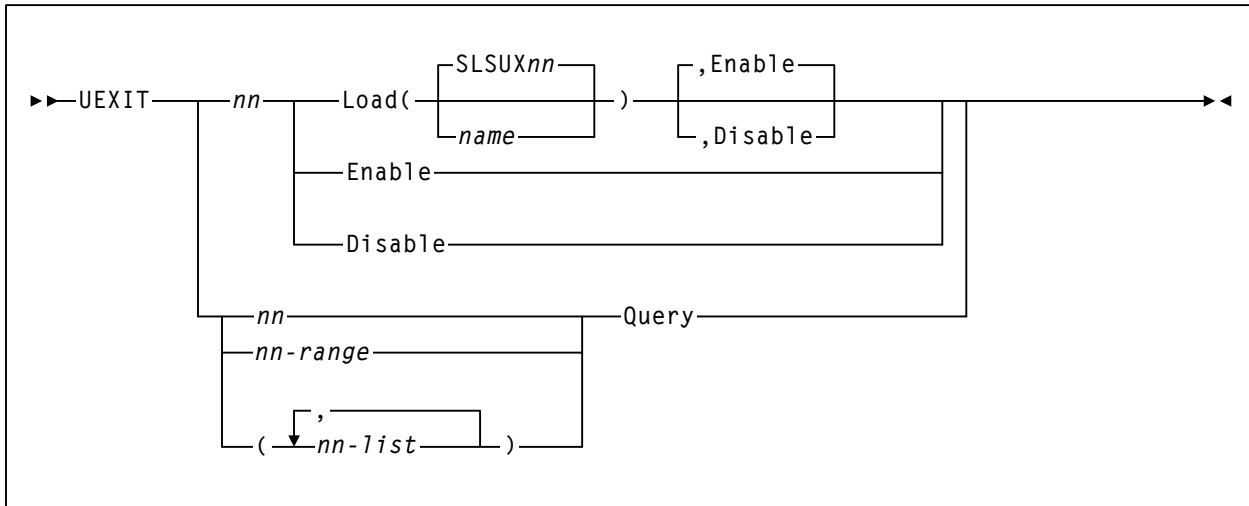


Vary Station command

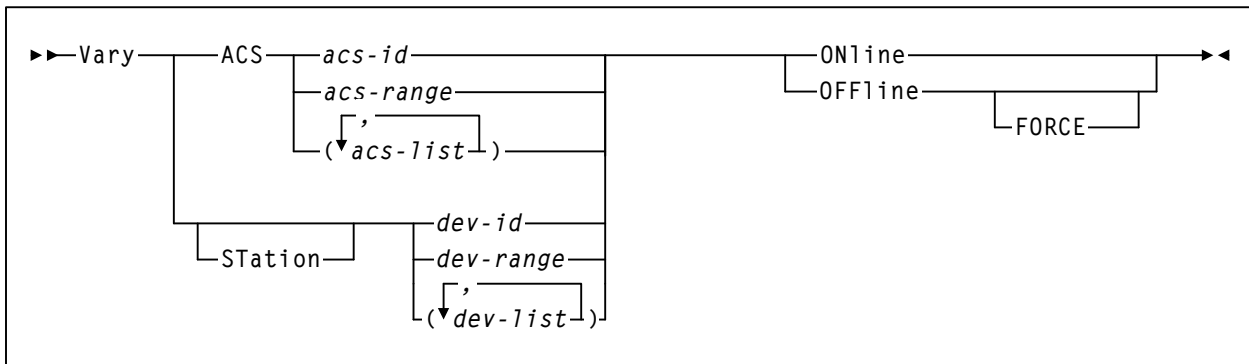

View command

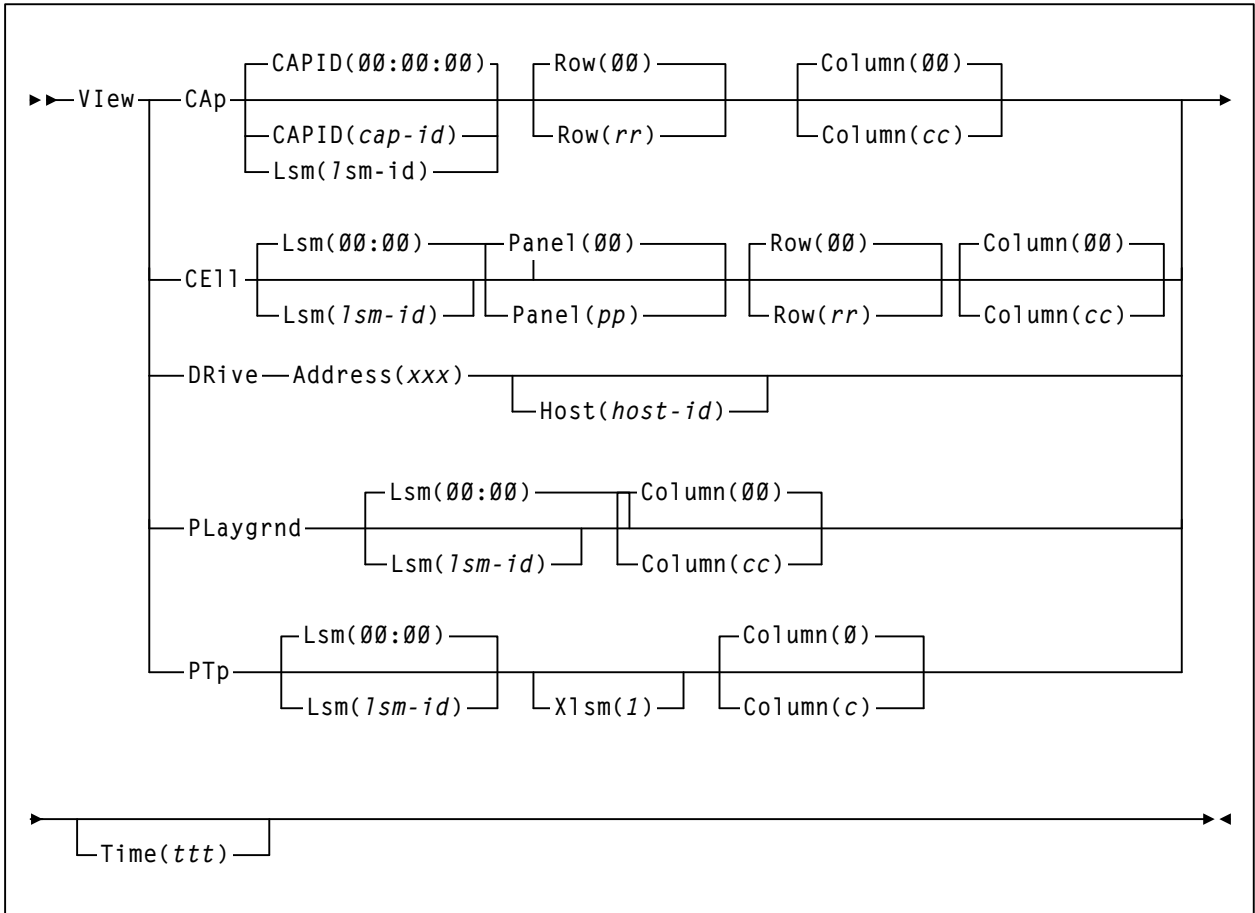

Warn command

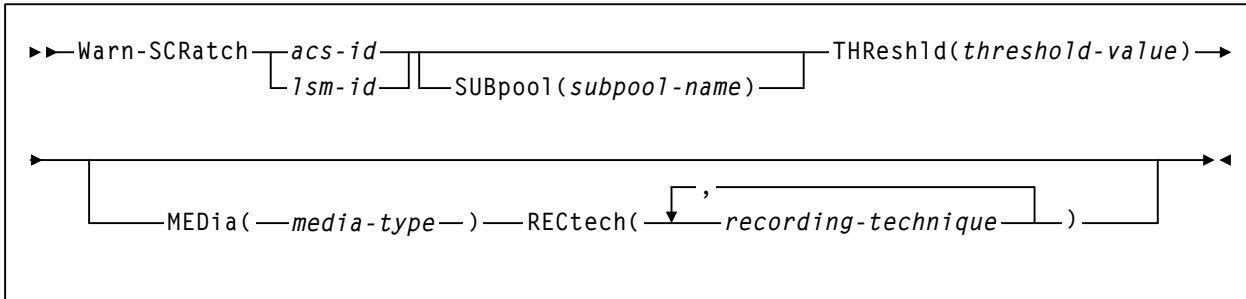


| Media Types | Recording Techniques |
|---|--|
| LONGItud | LONGItud, 18track, 36track, 36Atrack, 36Btrack, 36Ctrack |
| Standard | |
| ECART | |
| ZCART | |
| DD3, DD3A, DD3B, DD3C | HELical, DD3 |
| STK1, STK1R | STK1R, STK1R34, STK1R35, STK1RA, STK1RA34, STK1RA35, STK1RB, STK1RB34, STK1RB35, STK1RAB, STK1RAB4, STK1RAB5, STK1RC, STK1RC34, STK1RC35, STK1RD, STK1RDE, STK1RDN, STK1RD34, STK1RD35, STK1RDE4, STK1RDE5 |
| STK2, STK2P | STK2P, STK2P34, STK2P35, STK2PA, STK2PA34, STK2PA35, STK2PB, STK2PB34, STK2PB35 |
| LTO-10G, LTO-35G, LTO-50G, LTO-100G, LTO-200G, LTO-400G, LTO-400W, LTO-800G, LTO-800W, LTO-1.5T, LTO-1.5W | * |
| SDLT, SDLT-2, SDLT-S1, SDLT-S2, SDLT-S3, SDLT-S4, SDLT-4 | * |
| T10000T1, T10000TS, T10000T2, T10000TT | T10K, T10KN, T10KE, T10KA, T10KAN, T1A34, T1A35, T10KAE, T1AE34, T1AE35, T10KB, T10KBN, T1B34, T1B35, T10KBE, T1BE34, T1BE35, T10KC, T10KCE, T10KCN, T1C34, T1C35, T1CE34, T1CE35 |

* No corresponding recording technique.

HSC Diagnostic Command Syntax

This section contains the syntax for diagnostic commands. For complete descriptions of the commands, see the *HSC/MSP System Programmer's Guide* and *HSC/MSP Operator's Guide*.

List command

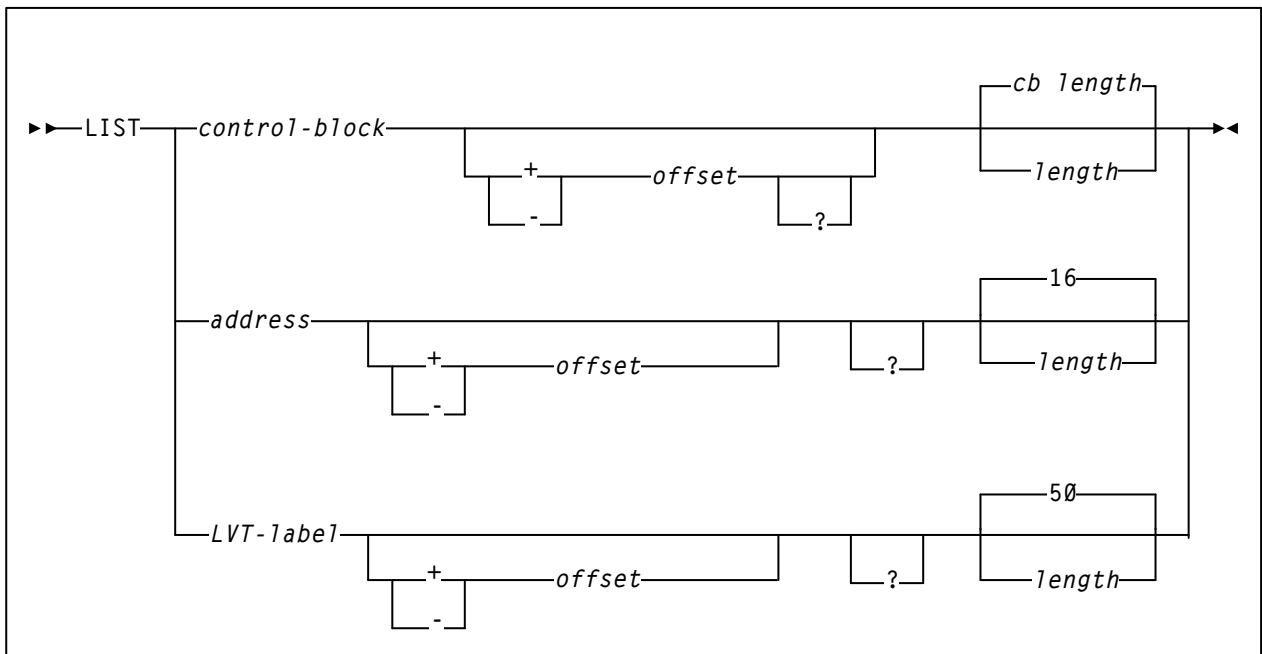

TRace command

