

Oracle Integrated Lights Out Manager (ILOM) 3.0

Supplement for Sun SPARC Enterprise
T5120 and T5220 Servers



Copyright © 2009, 2010 Oracle and/or its affiliates. All rights reserved.

FUJITSU LIMITED provided technical input and review on portions of this material.

This software and related documentation are provided under a license agreement containing restrictions on use and disclosure and are protected by intellectual property laws. Except as expressly permitted in your license agreement or allowed by law, you may not use, copy, reproduce, translate, broadcast, modify, license, transmit, distribute, exhibit, perform, publish, or display any part, in any form, or by any means. Reverse engineering, disassembly, or decompilation of this software, unless required by law for interoperability, is prohibited.

The information contained herein is subject to change without notice and is not warranted to be error-free. If you find any errors, please report them to us in writing.

If this is software or related software documentation that is delivered to the U.S. Government or anyone licensing it on behalf of the U.S. Government, the following notice is applicable:

U.S. GOVERNMENT RIGHTS Programs, software, databases, and related documentation and technical data delivered to U.S. Government customers are "commercial computer software" or "commercial technical data" pursuant to the applicable Federal Acquisition Regulation and agency-specific supplemental regulations. As such, the use, duplication, disclosure, modification, and adaptation shall be subject to the restrictions and license terms set forth in the applicable Government contract, and, to the extent applicable by the terms of the Government contract, the additional rights set forth in FAR 52.227-19, Commercial Computer Software License (December 2007). Oracle America, Inc., 500 Oracle Parkway, Redwood City, CA 94065 FUJITSU LIMITED, 1-1, Kamikodanaka 4-chome, Nakahara-ku, Kawasaki-shi, Kanagawa-ken 211-8588, Japan.

This software or hardware is developed for general use in a variety of information management applications. It is not developed or intended for use in any inherently dangerous applications, including applications which may create a risk of personal injury. If you use this software or hardware in dangerous applications, then you shall be responsible to take all appropriate fail-safe, backup, redundancy, and other measures to ensure its safe use. Oracle Corporation and its affiliates and FUJITSU LIMITED disclaim any liability for any damages caused by use of this software or hardware in dangerous applications.

Oracle and Java are registered trademarks of Oracle and/or its affiliates. Other names may be trademarks of their respective owners.

Fujitsu and the Fujitsu logo are registered trademarks of Fujitsu Limited.

AMD, Opteron, the AMD logo, and the AMD Opteron logo are trademarks or registered trademarks of Advanced Micro Devices. Intel and Intel Xeon are trademarks or registered trademarks of Intel Corporation. All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. UNIX is a registered trademark licensed through X/Open Company, Ltd.

This software or hardware and documentation may provide access to or information on content, products, and services from third parties. Oracle Corporation and its affiliates and FUJITSU LIMITED are not responsible for and expressly disclaim all warranties of any kind with respect to third-party content, products, and services. Oracle Corporation and its affiliates and FUJITSU LIMITED will not be responsible for any loss, costs, or damages incurred due to your access to or use of third-party content, products, or services.

Copyright © 2009, 2010, Oracle et/ou ses affiliés. Tous droits réservés.

Entrée et revue tecnica fournies par FUJITSU LIMITED sur des parties de ce matériel.

Ce logiciel et la documentation qui l'accompagne sont protégés par les lois sur la propriété intellectuelle. Ils sont concédés sous licence et soumis à des restrictions d'utilisation et de divulgation. Sauf disposition de votre contrat de licence ou de la loi, vous ne pouvez pas copier, reproduire, traduire, diffuser, modifier, breveter, transmettre, distribuer, exposer, exécuter, publier ou afficher le logiciel, même partiellement, sous quelque forme et par quelque procédé que ce soit. Par ailleurs, il est interdit de procéder à toute ingénierie inverse du logiciel, de le désassembler ou de le décompiler, excepté à des fins d'interopérabilité avec des logiciels tiers ou tel que prescrit par la loi.

Les informations fournies dans ce document sont susceptibles de modification sans préavis. Par ailleurs, Oracle Corporation et FUJITSU LIMITED ne garantit pas qu'elles soient exemptes d'erreurs et vous invite, le cas échéant, à lui en faire part par écrit.

Si ce logiciel, ou la documentation qui l'accompagne, est concédé sous licence au Gouvernement des Etats-Unis, ou à toute entité qui délivre la licence de ce logiciel ou l'utilise pour le compte du Gouvernement des Etats-Unis, la notice suivante s'applique :

U.S. GOVERNMENT RIGHTS. Programs, software, databases, and related documentation and technical data delivered to U.S. Government customers are "commercial computer software" or "commercial technical data" pursuant to the applicable Federal Acquisition Regulation and agency-specific supplemental regulations. As such, the use, duplication, disclosure, modification, and adaptation shall be subject to the restrictions and license terms set forth in the applicable Government contract, and, to the extent applicable by the terms of the Government contract, the additional rights set forth in FAR 52.227-19, Commercial Computer Software License (December 2007). Oracle America, Inc., 500 Oracle Parkway, Redwood City, CA 94065 et FUJITSU LIMITED, 1-1, Kamikodanaka 4-chome, Nakahara-ku, Kawasaki-shi, Kanagawa-ken 211-8588, Japan.

Ce logiciel ou matériel a été développé pour un usage général dans le cadre d'applications de gestion des informations. Ce logiciel ou matériel n'est pas conçu ni n'est destiné à être utilisé dans des applications à risque, notamment dans des applications pouvant causer des dommages corporels. Si vous utilisez ce logiciel ou matériel dans le cadre d'applications dangereuses, il est de votre responsabilité de prendre toutes les mesures de secours, de sauvegarde, de redondance et autres mesures nécessaires à son utilisation dans des conditions optimales de sécurité. Oracle Corporation et ses affiliés déclinent toute responsabilité quant aux dommages causés par l'utilisation de ce logiciel ou matériel pour ce type d'applications.

Oracle et Java sont des marques déposées d'Oracle Corporation et/ou de ses affiliés. Tout autre nom mentionné peut correspondre à des marques appartenant à d'autres propriétaires qu'Oracle.

Fujitsu et le logo Fujitsu sont des marques déposées de Fujitsu Limited.

AMD, Opteron, le logo AMD et le logo AMD Opteron sont des marques ou des marques déposées d'Advanced Micro Devices. Intel et Intel Xeon sont des marques ou des marques déposées d'Intel Corporation. Toutes les marques SPARC sont utilisées sous licence et sont des marques ou des marques déposées de SPARC International, Inc. UNIX est une marque déposée concédée sous licence par X/Open Company, Ltd.

Ce logiciel ou matériel et la documentation qui l'accompagne peuvent fournir des informations ou des liens donnant accès à des contenus, des produits et des services émanant de tiers. Oracle Corporation et ses affiliés et FUJITSU LIMITED déclinent toute responsabilité ou garantie expresse quant aux contenus, produits ou services émanant de tiers. En aucun cas, Oracle Corporation et ses affiliés et FUJITSU LIMITED ne sauraient être tenus pour responsables des pertes subies, des coûts occasionnés ou des dommages causés par l'accès à des contenus, produits ou services tiers, ou à leur utilisation.



Adobe PostScript

Contents

Using This Documentation vii

Understanding ILOM 3.0 for the Sun SPARC Enterprise T5120 and T5220 Servers 1

ILOM Overview 1

Platform-Specific ILOM Features 2

ILOM Features Not Supported 3

Managing the Host 5

Reset the Host 6

Managing Host Boot Mode 6

Boot Mode Overview 7

▼ Manage the Host Boot Mode LDOMs Configuration (CLI) 8

▼ Change the Host Boot Mode Behavior at Reset (CLI) 8

▼ Manage the Host Boot Mode Script (CLI) 9

▼ Display Host's Boot Mode Expiration Date (CLI) 10

▼ View or Configure Boot Mode Settings (Web Interface) 10

Viewing and Configuring Host Control Information 11

▼ Display the Host's MAC Address (CLI) 12

▼ Display the Host's OpenBoot Version (CLI) 12

▼ Display the Host's POST Version (CLI) 12

▼ Specify Host Behavior When the Host Stops Running (CLI) 13

▼ Specify Host Behavior When the Host Resets (CLI) 13

- Managing Automatic Restart 14
 - ▼ Set the Boot Timeout Interval 14
 - ▼ Specify System Behavior at Boot Timeout 14
 - ▼ Specify System Behavior if Restart Fails 15
 - ▼ Specify Maximum Restart Attempts 15
- ▼ View and Configure Host Control Information (Web Interface) 16

Managing System User Interactions 18

- ▼ Enable the System to Send a Break Signal or Force a Core Dump (CLI) 18
- ▼ Display Host Status Information (CLI) 18

Managing the Service Processor 21

Storing Customer Information 22

- ▼ Change Customer FRU Data (CLI) 22
- ▼ Change System Identification Information (CLI) 22
- ▼ Change Customer Identification Information (Web Interface) 23
- ▼ Display Console History (CLI) 24
- ▼ Change Console Escape Characters (CLI) 25

Changing Configuration Policy Settings 25

- ▼ Specify Backup of the User Database (CLI) 26
- ▼ Restore Host Power State at Restart (CLI) 26
- ▼ Specify Host Power State at Restart (CLI) 27
- ▼ Disable or Re-Enable Power-On Delay (CLI) 28
- ▼ Manage Configuration Policy Settings (Web Interface) 28

Managing Network Access 29

- ▼ Disable or Re-Enable Network Access to the SP (CLI) 30
- ▼ Display the DHCP Server's IP Address (CLI) 30

ILOM Information Stored on the SCC 31

Managing Devices 33

Managing Virtual Keyswitch Settings 33

▼ Specify Host Behavior With the Keyswitch State 33

▼ Control the Virtual Keyswitch (Web Interface) 34

Discover IPMI Sensors and Indicators 35

Sensors on Sun SPARC Enterprise T5120 and T5220 Servers 36

Indicators on Oracle's Sun SPARC Enterprise T5120 and T5220 Servers 40

Discover ALOM Compatibility Information 41

ALOM CMT Compatibility Shell 41

Significant Differences Between ILOM and ALOM CMT 42

Adding a Commit Step to Procedures That Configure ILOM Network
Configuration Properties 42

▼ Commit a Change to a Network Configuration Property 42

▼ Commit a Change to a Serial Port Configuration Property 43

▼ Create an ALOM CMT Compatibility Shell 44

ILOM and ALOM CMT Command Comparison 46

ALOM CMT Variable Comparison 54

Event Messages Available Through the ALOM Compatibility Shell 55

Event Message Overview 55

Event Severity Levels 56

Service Processor Usage Event Messages 57

Environmental Monitoring Event Messages 60

Host Monitoring Event Messages 64

Index 67

Using This Documentation

This guide contains information about the Oracle Integrated Lights Out Manager (ILOM) service processor (SP) for the Sun SPARC Enterprise T5120 and T5220 servers from Oracle.

This section contains the following topics:

- “Using UNIX Commands” on page vii
- “Shell Prompts” on page viii
- “Related Documentation” on page viii
- “Documentation, Support, and Training” on page ix
- “Documentation Feedback” on page x

Using UNIX Commands

This document might not contain information on basic UNIX commands and procedures such as shutting down the system, booting the system, and configuring devices.

See one of the following for this information:

- Software documentation that you received with your system
- Oracle Solaris Operating System documentation, which is at <http://docs.sun.com>

Shell Prompts

Shell	Prompt
C shell	<i>machine-name%</i>
C shell superuser	<i>machine-name#</i>
Bourne shell and Korn shell	\$
Bourne shell and Korn shell superuser	#
ILOM service processor	->
ALOM compatibility shell	sc>
OpenBoot™ PROM firmware	ok

Related Documentation

The documents listed as online are available at:

(<http://docs.sun.com/app/docs/prod/coolthreads.srvr>)

Application	Title	Part Number	Format	Location
Late-breaking information	<i>SPARC Enterprise T5120 and T5220 Servers Product Notes</i>	820-3312	PDF	Online
Getting started	<i>SPARC Enterprise T5120 Server Getting Started Guide</i>	820-4417	Printed	Ships with system
Getting started	<i>SPARC Enterprise T5120 Server Getting Started Guide (DC)</i>	820-5838	Printed	Ships with system
Getting started	<i>SPARC Enterprise T5220 Server Getting Started Guide</i>	820-4418	Printed	Ships with system
Getting started	<i>SPARC Enterprise T5120 Server Getting Started Guide</i>	820-4417	Printed	Ships with system
Site preparation	<i>SPARC Enterprise T5120 and T5220 Servers Site Planning Guide</i>	820-3314	PDF HTML	Online
Installation	<i>SPARC Enterprise T5120 and T5220 Servers Installation Guide</i>	820-3315	PDF HTML	Online

Application	Title	Part Number	Format	Location
Administration	<i>SPARC Enterprise T5120 and T5220 Server System Administration Guide</i>	820-3316	PDF HTML	Online
Service	<i>SPARC Enterprise T5120 and T5220 Servers Service Manual</i>	820-3318	PDF HTML	Online
Safety	<i>SPARC Enterprise T5120 and T5220 Servers Safety and Compliance Manual</i>	820-3319	PDF HTML	Online

See the following documentation for more information about how to work with ILOM features that are common to all platforms managed by ILOM.

Task	Title	Part Number	Format	Location
Update information	<i>Oracle Integrated Lights Out Manager (ILOM) 3.0 Feature Updates and Release Notes</i>	820-7329	PDF HTML	Online
Conceptual information	<i>Oracle Integrated Lights Out Manager (ILOM) 3.0 Concepts Guide</i>	820-6410	PDF HTML	Online
Browser interface information	<i>Oracle Integrated Lights Out Manager (ILOM) 3.0 Web Procedures Guide</i>	820-6411	PDF HTML	Online
CLI procedural information	<i>Oracle Integrated Lights Out Manager (ILOM) 3.0 CLI Procedures Guide</i>	820-6412	PDF HTML	Online
SNMP and IPMI information	<i>Oracle Integrated Lights Out Manager (ILOM) 3.0 Management Protocols Reference Guide</i>	820-6413	PDF HTML	Online
Installation and configuration information	<i>Oracle Integrated Lights Out Manager (ILOM) 3.0 Getting Started Guide</i>	820-5523	PDF HTML	Online

Documentation, Support, and Training

These web sites provide additional resources:

- Documentation (<http://docs.sun.com>)
- Support (<http://www.sun.com/support>)
- Training (<http://www.sun.com/training>)

Documentation Feedback

Submit comments about this document by clicking the Feedback[+] link at (<http://docs.sun.com>). Include the title and part number of your document with your feedback:

Oracle Integrated Lights Out Manager (ILOM) 3.0 Supplement for SPARC Enterprise T5120 and T5220 Servers, part number 820-6683-13.

Understanding ILOM 3.0 for the Sun SPARC Enterprise T5120 and T5220 Servers

This section introduces ILOM 3.0 for the Sun SPARC Enterprise T5120 and T5220 servers and includes:

- [“ILOM Overview” on page 1](#)
- [“Platform-Specific ILOM Features” on page 2](#)
- [“ILOM Features Not Supported” on page 3](#)

ILOM Overview

Integrated Lights Out Manager (ILOM) is system management firmware that is preinstalled on some SPARC servers. ILOM enables you to actively manage and monitor components installed in your server. ILOM provides a browser-based interface and a command-line interface, as well as SNMP and IPMI interfaces.

Note – For information about upgrading, installing, and configuring ILOM on your service processor see the firmware installation instructions in the *Sun SPARC Enterprise T5120 and T5220 Servers Installation Guide* and the product notes for your server.

For more information about how to work with ILOM features that are common to all platforms managed by ILOM, see the following documentation at:

(<http://docs.sun.com/app/docs/prod/int.lights.mgr30#hic>)

Task	Title	Part Number	Location
Conceptual information	<i>Sun Integrated Lights Out Manager (ILOM) 3.0 Concepts Guide</i>	820-6410	Online
Browser interface information	<i>Sun Integrated Lights Out Manager (ILOM) 3.0 Web Interface Procedures Guide</i>	820-6411	Online
CLI procedural information	<i>Sun Integrated Lights Out Manager (ILOM) 3.0 CLI Procedures Guide</i>	820-6412	Online
SNMP and IPMI information	<i>Sun Integrated Lights Out Manager (ILOM) 3.0 SNMP and IPMI Procedures Guide</i>	820-6413	Online
Installation and configuration information	<i>Sun Integrated Lights Out Manager (ILOM) 3.0 Getting Started Guide</i>	820-5523	Online

Related Information

- [“Platform-Specific ILOM Features” on page 2](#)
- [“ILOM Features Not Supported” on page 3](#)

Platform-Specific ILOM Features

ILOM operates on many platforms, supporting features that are common to all platforms. Some ILOM features belong to a subset of platforms and not to all. This document describes features that belong to Sun SPARC Enterprise T5120 and T5220 servers, augmenting the set of features described in the Integrated Lights Out Manager 3.0 base documentation.

Note – To perform some procedures documented in Oracle’s Integrated Lights Out Manager 3.0 base documentation, you must create a serial connection to the server and activate the Physical Presence switch on the server. The Physical Presence switch on the Sun SPARC Enterprise T5120 and T5220 servers is the Locator button. For information about creating a serial connection to your server, see the *Sun SPARC Enterprise T5120 and T5220 Server System Administration Guide*.

Related Information

- [“ILOM Overview” on page 1](#)
- [“ILOM Features Not Supported” on page 3](#)

ILOM Features Not Supported

Among the ILOM features supported on other platforms, ILOM does not support the following features on Sun SPARC Enterprise T5120 and T5220 servers:

- The KVMs features of ILOM Remote Console. However, ILOM Remote Console does provide remote serial console on Sun SPARC Enterprise T5120 and T5220 servers.
- Chassis Monitoring Module (CMM) features, such as single signon.

Related Information

- [“ILOM Overview” on page 1](#)
- [“Platform-Specific ILOM Features” on page 2](#)

Managing the Host

This section contains information on ILOM features for the Sun SPARC Enterprise T5120 and T5220 servers that augment the array of properties common to ILOM on other platforms. In particular, this section describes the properties in the /HOST namespace, and includes:

Description	Links
Resetting the Host	“Reset the Host” on page 6
Managing Host Boot Mode	“Boot Mode Overview” on page 7 “Manage the Host Boot Mode LDOMs Configuration (CLI)” on page 8 “Change the Host Boot Mode Behavior at Reset (CLI)” on page 8 “Manage the Host Boot Mode Script (CLI)” on page 9 “Display Host’s Boot Mode Expiration Date (CLI)” on page 10 “View or Configure Boot Mode Settings (Web Interface)” on page 10
Viewing and Configuring Host Control Information	“Display the Host’s MAC Address (CLI)” on page 12 “Display the Host’s OpenBoot Version (CLI)” on page 12 “Display the Host’s POST Version (CLI)” on page 12 “Specify Host Behavior When the Host Resets (CLI)” on page 13 “Specify Host Behavior When the Host Stops Running (CLI)” on page 13 “Managing Automatic Restart” on page 14 “View and Configure Host Control Information (Web Interface)” on page 16
Managing System User Interactions	“Enable the System to Send a Break Signal or Force a Core Dump (CLI)” on page 18 “Display Host Status Information (CLI)” on page 18

Reset the Host

The reset command generates a graceful or forced hardware reset of the host server. By default, the reset command gracefully resets the host. To perform a graceful reset from ILOM, type:

```
-> reset /SYS
```

If a graceful reset is not possible, a forced reset is performed. To perform a forced hardware reset from ILOM, type:

```
-> reset -force /SYS
```

For a list of available options for the reset command in both the ILOM and ALOM compatibility CLIs, see [TABLE: ALOM CMT Shell Status and Control Commands on page 50](#).

Related Information

- [“ILOM and ALOM CMT Command Comparison” on page 46](#)

Managing Host Boot Mode

Use the boot mode properties to specify how ILOM handles boot, as described in the following topics:

- [“Boot Mode Overview” on page 7](#)
- [“Manage the Host Boot Mode LDoms Configuration \(CLI\)” on page 8](#)
- [“Change the Host Boot Mode Behavior at Reset \(CLI\)” on page 8](#)
- [“Manage the Host Boot Mode Script \(CLI\)” on page 9](#)
- [“Display Host’s Boot Mode Expiration Date \(CLI\)” on page 10](#)
- [“View or Configure Boot Mode Settings \(Web Interface\)” on page 10](#)

Boot Mode Overview

Boot mode (bootmode) properties enable you to override the default method the server uses when it boots. This ability is useful to override particular OpenBoot or LDOMs settings that might be incorrect, to set up OpenBoot variables using a script, or similar tasks.

For example, if the OpenBoot settings have become corrupt, you can set the bootmode state property to `reset_nvram` then reset the server to its factory default OpenBoot settings.

Service personnel might instruct you to use the bootmode script property for problem resolution. The full extent of script capabilities are not documented and exist primarily for debugging.

Because bootmode is intended to be used to correct a problem with the OpenBoot or LDOMs settings, the bootmode takes effect for a single boot only. Additionally, to prevent an administrator from setting a bootmode state property and forgetting about it, a bootmode state property expires if the host is not reset within 10 minutes of the bootmode state property being set.

Related Information

- [“Reset the Host” on page 6](#)
- [“Managing Host Boot Mode” on page 6](#)

▼ Manage the Host Boot Mode LDOMs Configuration (CLI)

- At the `->` prompt, type:

```
-> set /HOST/bootmode config=configname
```

where the `config` property takes a *configname* value such as a named logical domain configuration downloaded to the SP using the Logical Domains software.

For example, if you have created a logical domain configuration called `ldm-set1`:

```
-> set bootmode config=ldm-set1
```

To return the boot mode `config` to the factory default configuration, specify `factory-default`.

For example:

```
-> set bootmode config=factory-default
```

Note – If you set `/HOST/bootmode config=""`, ILOM sets the `config` to empty.

Related Information

- [“Reset the Host” on page 6](#)
- [“View or Configure Boot Mode Settings \(Web Interface\)” on page 10](#)

▼ Change the Host Boot Mode Behavior at Reset (CLI)

The `/HOST/bootmode state` property controls how OpenBoot nonvolatile random access memory (NVRAM) variables are used. Normally the current settings of these variables are retained. Setting `/HOST/bootmode state=reset_nvram` changes the OpenBoot NVRAM variables to their default settings at the next reset.

- At the `->` prompt, type:

```
-> set /HOST/bootmode state=value
```

where *value* is one of the following:

- `normal` – At next reset, retains current NVRAM variable settings.
- `reset_nvram` – At next reset, returns OpenBoot variables to default settings.

Note – `state=reset_nvram` will return to `normal` after the next server reset or 10 minutes (see `expires` property in [“Display Host’s Boot Mode Expiration Date \(CLI\)”](#) on page 10). `config` and `script` properties do not expire and will be cleared upon the next server reset or manually by setting *value* to `""`.

Related Information

- [“Reset the Host”](#) on page 6
- [“View or Configure Boot Mode Settings \(Web Interface\)”](#) on page 10

▼ Manage the Host Boot Mode Script (CLI)

- At the `->` prompt, type:

```
-> set /HOST/bootmode script=value
```

where `script` controls the host server OpenBoot PROM firmware method of booting. `script` does not affect the current `/HOST/bootmode` setting. *value* can be up to 64 bytes in length. You can specify a `/HOST/bootmode` setting and set the script within the same command.

For example:

```
-> set /HOST/bootmode state=reset_nvram script="setenv diag-switch? true"
```

After the server resets and OpenBoot PROM reads the values stored in the script, the OpenBoot PROM sets the OpenBoot PROM variable `diag-switch?` to the user-requested value of `true`.

Note – If you set `/HOST/bootmode script=""`, ILOM sets the script to empty.

Related Information

- “Reset the Host” on page 6
- “View or Configure Boot Mode Settings (Web Interface)” on page 10

▼ Display Host’s Boot Mode Expiration Date (CLI)

- At the `->` prompt, type:


```
-> show /HOST/bootmode expires
Properties:
  expires = Thu Oct 16 18:24:16 2008
```

where expires is the date and time when the current boot mode will expire.

Related Information

- “Reset the Host” on page 6
- “View or Configure Boot Mode Settings (Web Interface)” on page 10

▼ View or Configure Boot Mode Settings (Web Interface)

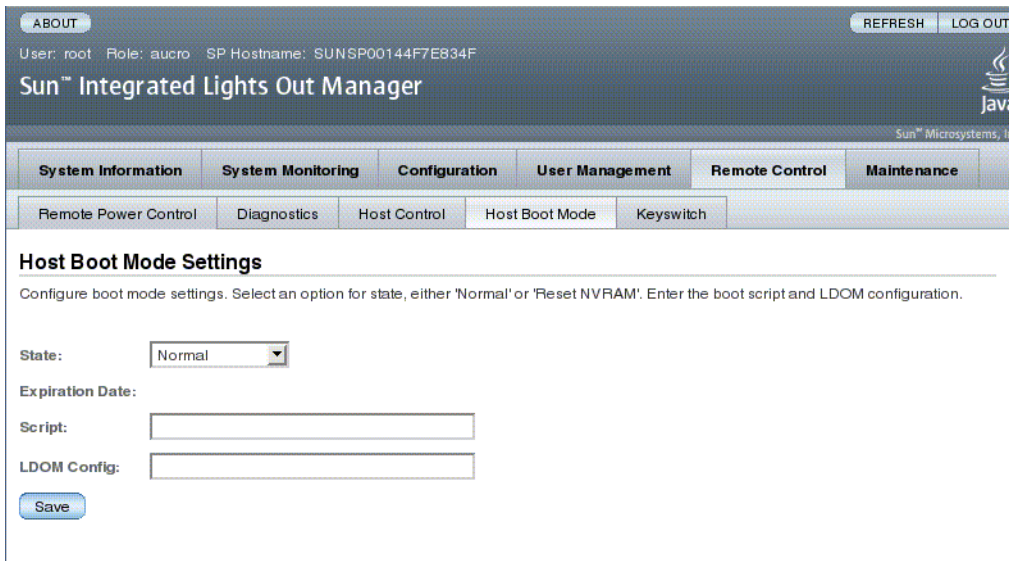

The screenshot shows the Sun Integrated Lights Out Manager (ILOM) web interface. At the top, there is a navigation bar with "ABOUT", "REFRESH", and "LOG OUT" buttons. Below this, the user information is displayed: "User: root Role: auroc SP Hostname: SUNSP00144F7E834F". The main title is "Sun™ Integrated Lights Out Manager" with the Sun logo and "Sun™ Microsystems, Inc." below it. The interface has a menu bar with "System Information", "System Monitoring", "Configuration", "User Management", "Remote Control", and "Maintenance". Under "Configuration", there are sub-menus: "Remote Power Control", "Diagnostics", "Host Control", "Host Boot Mode", and "Keyswitch". The "Host Boot Mode Settings" page is active, showing a form with the following fields:

- State: Normal (dropdown menu)
- Expiration Date: (text input field)
- Script: (text input field)
- LDOM Config: (text input field)

A "Save" button is located at the bottom left of the form.

You can use the ILOM web interface to view or configure the four aspects of boot mode control:

- State
- Expiration Date
- Script
- LDom Configuration

1. **Log in to the ILOM web interface as Administrator (root) to open the web interface.**
2. **Select Remote Control -> Boot Mode Settings.**
3. **Select the Boot Mode State, if desired.**
4. **View the Expiration Date.**
5. **Specify a boot script, if desired.**
6. **Specify an LDom's configuration file, if desired.**
7. **Click Save.**

Related Information

- ["Reset the Host" on page 6](#)
- ["Managing Host Boot Mode" on page 6](#)

Viewing and Configuring Host Control Information

Use the host information properties to view system configuration and firmware version information, as described in the following procedures:

- ["Display the Host's MAC Address \(CLI\)" on page 12](#)
- ["Display the Host's OpenBoot Version \(CLI\)" on page 12](#)
- ["Display the Host's POST Version \(CLI\)" on page 12](#)
- ["Specify Host Behavior When the Host Stops Running \(CLI\)" on page 13](#)
- ["Specify Host Behavior When the Host Resets \(CLI\)" on page 13](#)
- ["Managing Automatic Restart" on page 14](#)
- ["View and Configure Host Control Information \(Web Interface\)" on page 16](#)

▼ Display the Host's MAC Address (CLI)

The `/HOST macaddress` property is automatically configured by the system software, so you cannot set or change the property. The value is read and determined from the server's removable system configuration card (SCC PROM) and then stored as a property in ILOM.

`/HOST macaddress` is the MAC address for the `net0` port. The MAC addresses for each additional port increments from the `/HOST macaddress`. For example, `net1` is equal to the value of `/HOST macaddress` plus one (1).

- View the current setting for this property:

```
-> show /HOST macaddress
```

Related Information

- ["Viewing and Configuring Host Control Information" on page 11](#)
- ["View and Configure Host Control Information \(Web Interface\)" on page 16](#)

▼ Display the Host's OpenBoot Version (CLI)

The `/HOST obp_version` property displays information about the version of OpenBoot on the host.

- View the current setting for this property:

```
-> show /HOST obp_version
```

Related Information

- ["Viewing and Configuring Host Control Information" on page 11](#)
- ["View and Configure Host Control Information \(Web Interface\)" on page 16](#)

▼ Display the Host's POST Version (CLI)

The `/HOST post_version` property displays information about the version of POST on the host.

- View the current setting for this property:

```
-> show /HOST post_version
```


Related Information

- [“Viewing and Configuring Host Control Information” on page 11](#)
- [“View and Configure Host Control Information \(Web Interface\)” on page 16](#)

▼ Specify Host Behavior When the Host Stops Running (CLI)

Use the `/HOST autorestart` property to specify what ILOM should do when the host leaves the `RUNNING` state (when the watchdog timer expires).

● Set this property:

```
-> set /HOST autorestart=value
```

where *value* can be:

- `none` – ILOM takes no action other than to issue a warning.
- `reset` – ILOM attempts to reset the system when the Oracle Solaris watchdog timer expires (the default).
- `dumpcore` – ILOM attempts to force a core dump of the OS when the watchdog timer expires.

Related Information

- [“Reset the Host” on page 6](#)
- [“Viewing and Configuring Host Control Information” on page 11](#)
- [“View and Configure Host Control Information \(Web Interface\)” on page 16](#)

▼ Specify Host Behavior When the Host Resets (CLI)

Use the `/HOST autorunonerror` property to specify whether the system should powercycle the host after host software initiates a power-on-reset to recover from an error. The system checks the value of the `/HOST/diag trigger` property after powercycling the host to determine whether to run POST.

● Set this property:

```
-> set /HOST autorunonerror=value
```

where *value* can be:

- `false` – The SP powers off the host after the host has reset (the default).
- `true` – The SP powercycles the host after the host has reset.

Related Information

- [“Reset the Host” on page 6](#)
- [“Viewing and Configuring Host Control Information” on page 11](#)
- [“View and Configure Host Control Information \(Web Interface\)” on page 16](#)

Managing Automatic Restart

Use the following procedures to manage the automatic restart feature:

- [“Set the Boot Timeout Interval” on page 14](#)
- [“Specify System Behavior at Boot Timeout” on page 14](#)
- [“Specify System Behavior if Restart Fails” on page 15](#)
- [“Specify Maximum Restart Attempts” on page 15](#)

▼ Set the Boot Timeout Interval

- **Set the time delay between a request to boot the host and booting the host:**

```
-> set /HOST boottimeout=seconds
```

The default value of `boottimeout` is 0 (zero seconds) or no timeout. Possible values are in the range from 0 to 36000 seconds.

Related Information

- [“Reset the Host” on page 6](#)
- [“Managing Automatic Restart” on page 14](#)
- [“View and Configure Host Control Information \(Web Interface\)” on page 16](#)

▼ Specify System Behavior at Boot Timeout

- **Specify system behavior at the completion of `boottimeout`:**

```
-> set /HOST bootrestart=value
```

where *value* can be:

- none (the default)
- reset

Related Information

- [“Reset the Host” on page 6](#)
- [“Managing Automatic Restart” on page 14](#)
- [“View and Configure Host Control Information \(Web Interface\)” on page 16](#)

▼ Specify System Behavior if Restart Fails

- Type:

```
-> set /HOST bootfailrecovery=value
```

where *value* can be:

- powercycle
- poweroff (the default)

This action takes effect if the host fails to reach the Oracle Solaris running state.

Related Information

- [“Reset the Host” on page 6](#)
- [“Managing Automatic Restart” on page 14](#)
- [“View and Configure Host Control Information \(Web Interface\)” on page 16](#)

▼ Specify Maximum Restart Attempts

- Type:

```
-> set /HOST maxbootfail=attempts
```

The default value of `maxbootfail` is 3 (three attempts).

If the host does not boot successfully within the number of tries indicated by `maxbootfail`, the host is powered off or powercycled (depending upon the setting of `bootfailrecovery`). In either case, `boottimeout` is set to 0 (zero seconds), disabling further attempts to restart the host.

Related Information

- [“Reset the Host” on page 6](#)

- “Managing Automatic Restart” on page 14
- “View and Configure Host Control Information (Web Interface)” on page 16

▼ View and Configure Host Control Information (Web Interface)

This procedure describes how to view and configure several kinds of host information.

The screenshot shows the Sun Integrated Lights Out Manager (ILOM) web interface. At the top, there is a navigation bar with an 'ABOUT' tab, a 'REFRESH' button, and a 'LOG OUT' button. Below this, the user information is displayed: 'User: root Role: auroc SP Hostname: SUNSP00144F7E834F'. The main title is 'Sun™ Integrated Lights Out Manager' with the Java logo and 'Sun™ Microsystems, Inc.' below it. A menu bar contains several tabs: 'System Information', 'System Monitoring', 'Configuration', 'User Management', 'Remote Control', and 'Maintenance'. Under the 'Configuration' tab, there are sub-tabs: 'Remote Power Control', 'Diagnostics', 'Host Control', 'Host Boot Mode', and 'Keyswitch'. The 'Host Control' sub-tab is selected, and the page title is 'Host Control'. The main content area contains a paragraph explaining the host control information and a list of configuration parameters with their current values and dropdown menus for selection:

- MAC Address: 00:14:4f:7e:83:46
- Hypervisor Version: Hypervisor 1.7.0.build_11***PROTOTYPE**** 2008/09/24 17:23
- OBP Version: OBP 4.30.1_nightly_09.23.2008 2008/09/23 00:07
- POST Version: POST 4.30.1_nightly_09.23.2008 2008/09/23 00:30
- SysFW Version: Sun System Firmware : dev build coreilom-re @coreilom-release.east.sun.com (r37557) Tue Sep 30 21:33:20 EDT 2008
- Host Status: Powered on
- Auto Run On Error: False
- Auto Restart Policy: Reset
- Boot Timeout: 0
- Boot Restart Policy: None
- Max Boot Fails Allowed: 3
- Boot Fail Recovery: Poweroff

At the bottom left of the configuration area, there is a 'Save' button.

ILOM enables you to view or configure several host control features. There are six aspects to host control:

- MAC address
- Hypervisor version

- OpenBoot version
 - POST version
 - System Firmware version
 - HOST status
 - Auto Run On Error
 - Auto Restart Policy
 - Boot timeout
 - Boot restart policy
 - Maximum boot failures allowed
 - Boot failure recovery
1. **Log in to the ILOM web interface as Administrator (root) to open the web interface.**
 2. **Select Remote Control -> Host Control.**
 3. **View the MAC address.**
 4. **View the Hypervisor version.**
 5. **View the OpenBoot version.**
 6. **View the POST version.**
 7. **View the System Firmware version.**
 8. **View the Host status.**
 9. **Select a value for Auto Run On Error, if desired.**
 10. **Select a value for Auto Restart Policy, if desired.**
 11. **Select a value for Boot Timeout, if desired.**
 12. **Select a value for Boot Restart Policy, if desired.**
 13. **Select a value for Maximum Boot Failures Allowed, if desired.**
 14. **Select a value for Boot Failure Recovery, if desired.**
 15. **Click on Save.**

Related Information

- [“Reset the Host” on page 6](#)
- [“Viewing and Configuring Host Control Information” on page 11](#)

Managing System User Interactions

The system user properties enable you to customize the way ILOM identifies and interacts with the host server.

- [“Enable the System to Send a Break Signal or Force a Core Dump \(CLI\)” on page 18](#)
- [“Display Host Status Information \(CLI\)” on page 18](#)

▼ Enable the System to Send a Break Signal or Force a Core Dump (CLI)

Use the `set /HOST send_break_action` command to bring the server to a menu from which you can choose to go to the OpenBoot PROM prompt (ok). If you have configured the `kmdb` debugger, then specifying the `send_break_action=break` command brings the server into debug mode.

Specify `send_break_action=dumpcore` to force a core dump.

- **At the `->` prompt, type:**

```
-> set send_break_action=value
```

where *value* can be:

- `break` – Sends a break to the host.
- `dumpcore` – Forces a panic core dump of the managed system OS (not supported by all OS versions).

Related Information

- [“Display Host Status Information \(CLI\)” on page 18](#)

▼ Display Host Status Information (CLI)

Use the `show /HOST status` command to display information about the host server’s platform ID and status.

- At the -> prompt, type:

```
-> show /HOST status
```

For example:

```
-> show /HOST status  
/HOST  
  Properties:  
    status = Solaris running  
  
  Commands:  
    cd  
    set  
    show  
->
```

Related Information

- [“Enable the System to Send a Break Signal or Force a Core Dump \(CLI\)”](#) on page 18

Managing the Service Processor

This section contains information on ILOM properties on the Sun SPARC Enterprise T5120 and T5220 servers that augment the array of properties common to ILOM on other platforms. In particular, this section covers properties in the /SP namespace, and includes:

Description	Links
Storing Customer Information	“Change Customer FRU Data (CLI)” on page 22 “Change System Identification Information (CLI)” on page 22 “Change Customer Identification Information (Web Interface)” on page 23
Displaying Console History	“Display Console History (CLI)” on page 24
Modifying Console Escape Characters	“Change Console Escape Characters (CLI)” on page 25
Changing Configuration Policy Settings	“Specify Backup of the User Database (CLI)” on page 26 “Restore Host Power State at Restart (CLI)” on page 26 “Specify Host Power State at Restart (CLI)” on page 27 “Disable or Re-Enable Power-On Delay (CLI)” on page 28 “Manage Configuration Policy Settings (Web Interface)” on page 28
Managing Network Access	“Disable or Re-Enable Network Access to the SP (CLI)” on page 30 “Display the DHCP Server’s IP Address (CLI)” on page 30
In case of SP failure, view recoverable information stored on the SCC.	“ILOM Information Stored on the SCC” on page 31

Storing Customer Information

This section describes ILOM features that enable you to store information (for purposes such as inventory control or site resource management) on the SP and FRU PROMs.

- “Change Customer FRU Data (CLI)” on page 22
- “Change System Identification Information (CLI)” on page 22
- “Change Customer Identification Information (Web Interface)” on page 23

▼ Change Customer FRU Data (CLI)

Use the `/SP customer_fru` property to store information in all FRU PROMs.

- At the `->` prompt, type:

```
-> set /SP customer_fru
```

Note – The data string (*data*) must be enclosed in quote marks.

Related Information

- “Change System Identification Information (CLI)” on page 22
- “Change Customer Identification Information (Web Interface)” on page 23

▼ Change System Identification Information (CLI)

Use the `/SP system_identifier` property to store customer identification information.

- At the `->` prompt, type:

```
-> set /SP system_identifier
```

Note – The data string (*data*) must be enclosed in quote marks.

Related Information

- “Change Customer FRU Data (CLI)” on page 22
- “Change Customer Identification Information (Web Interface)” on page 23

▼ Change Customer Identification Information (Web Interface)

The screenshot shows the Sun Integrated Lights Out Manager (ILOM) web interface. At the top, there is a navigation bar with 'ABOUT', 'REFRESH', and 'LOG OUT' buttons. Below this, the user information is displayed: 'User: root Role: auro SP Hostname: SUNSP00144F7E834F'. The main title is 'Sun™ Integrated Lights Out Manager'. A secondary navigation bar contains tabs for 'System Information', 'System Monitoring', 'Configuration', 'User Management', 'Remote Control', and 'Maintenance'. Under 'System Information', there are sub-tabs for 'Versions', 'Session Time-Out', 'Components', 'Fault Management', and 'Identification Information'. The 'Identification Information' tab is selected, and the page content includes the heading 'Identification Information' and the instruction 'Configure identification information.' Below this, there are five input fields: 'Customer FRU Data', 'SP Hostname' (with the value 'SUNSP00144F7E834F'), 'SP System Identifier', 'SP System Contact', and 'SP System Location'. At the bottom, the 'SP System Description' is shown as 'SPARC-Enterprise-T5120, ILOM v3.0.0.0, r37557' and a 'Save' button is present.

ILOM provides features that enable you to store information on FRUs and the SP.

1. Log in to the ILOM web interface as Administrator (root) to open the web interface.
2. Select System Information -> Identification Information.
3. Edit the Customer FRU data field, if desired.
4. Edit the SP Hostname, if desired.
5. Edit the SP System Identifier field, if desired.
6. Edit the SP System Contact field, if desired.
7. Edit the SP System Location field, if desired.

8. View the SP System Description.

9. Click Save.

Related Information

- [“Change Customer FRU Data \(CLI\)”](#) on page 22
- [“Change System Identification Information \(CLI\)”](#) on page 22

▼ Display Console History (CLI)

This section describes displaying the host server console output buffer.

The console buffer can contain up to 1 Mbyte of information. If ILOM senses a host server reset, it writes boot information and initialization data into the console buffer until ILOM is notified by the server that the Oracle Solaris OS is up and running.

Note – You must have Administrator level user permission to use this command.

- At the `->` prompt, type:

```
-> set /SP/console/history property=option[...]  
-> show /SP/console/history
```

where *property* can be:

- `line_count` – This option accepts a value within the range of 1 to 2048 lines. Specify "" for an unlimited number of lines. The default is all lines.
- `pause_count` – This option accepts a value of 1 to any valid integer or "" for infinite number of lines. The default is not to pause.
- `start_from` – The options are:
 - `end` – The last line (most recent) in the buffer (the default).
 - `beginning` – The first line in the buffer.

If you type the `show /SP/console/history` command without having set any arguments with the `set` command, ILOM displays all lines of the console log, starting from the end.

Note – Timestamps recorded in the console log reflect server time. These time stamps reflect local time, and the ILOM console log uses UTC (Coordinated Universal Time). The Oracle Solaris OS system time is independent of the ILOM time.

▼ Change Console Escape Characters (CLI)

Use the `/SP/console escapechars` property to change the escape character sequence to switch from a system console session back to ILOM.

- **At the `->` prompt, type:**

```
-> set /SP/console escapechars=xx
```

where *property* can be any printable characters.

The sequence is limited to two characters. The default value is #. (Hash-Period). You can customize the sequence.

Note – Changing the escape character does not take effect in a currently active console session.

Related information

- [“Reset the Host” on page 6](#)

Changing Configuration Policy Settings

This section describes managing configuration system policies using ILOM.

- [“Specify Backup of the User Database \(CLI\)” on page 26](#)
- [“Restore Host Power State at Restart \(CLI\)” on page 26](#)
- [“Specify Host Power State at Restart \(CLI\)” on page 27](#)
- [“Disable or Re-Enable Power-On Delay \(CLI\)” on page 28](#)
- [“Manage Configuration Policy Settings \(Web Interface\)” on page 28](#)

▼ Specify Backup of the User Database (CLI)

The `/SP/policy BACKUP_USER_DATA` property specifies whether the local user database on ILOM (that is, user name, role, password, and CLI mode information) should be backed up. When this property is set to enabled, this data is backed up on the removable system configuration card (SCC PROM) on the system.

- At the `->` prompt, type:

```
-> set /SP/policy BACKUP_USER_DATA=value
```

where *value* can be:

- `enabled` – Backs up the user database to the SCC (This is the default value).
- `disabled` – No backup.

For example, if you want the local user database on ILOM to be backed up, type:

```
-> set /SP/policy BACKUP_USER_DATA=enabled
```

Related Information

- [“ILOM Information Stored on the SCC” on page 31](#)
- [“Manage Configuration Policy Settings \(Web Interface\)” on page 28](#)

▼ Restore Host Power State at Restart (CLI)

Use the `/SP/policy HOST_LAST_POWER_STATE` property to control the behavior of the server after an unexpected power outage. When external power is restored, the ILOM service processor starts to run automatically. Normally, the host power is not turned on until you use ILOM to turn it on.

ILOM records the current power state of the server in nonvolatile storage. If the `HOST_LAST_POWER_STATE` policy is enabled, ILOM can restore the host to the previous power state. This policy is useful in the event of a power failure, or if you physically move the server to a different location.

For example, if the host server is running when power is lost and the `/SP/policy HOST_LAST_POWER_STATE` property is set to disabled, the host server remains off when power is restored. If the `/SP/policy HOST_LAST_POWER_STATE` property is set to enabled, the host server restarts when the power is restored.

- At the `->` prompt, type:

```
-> set /SP/policy HOST_LAST_POWER_STATE=enabled
```

where *value* can be:

- `enabled` – When power is restored, returns the server to the state it was in before the power was removed.
- `disabled` – Keeps the server off when power is applied (the default).

If you enable `HOST_LAST_POWER_STATE`, you should also configure `/SP/policy HOST_POWER_ON_DELAY`. For further information, see [“Disable or Re-Enable Power-On Delay \(CLI\)”](#) on page 28.

Related Information

- [“Disable or Re-Enable Power-On Delay \(CLI\)”](#) on page 28
- [“Specify Host Power State at Restart \(CLI\)”](#) on page 27
- [“Manage Configuration Policy Settings \(Web Interface\)”](#) on page 28

▼ Specify Host Power State at Restart (CLI)

Use `/SP/policy HOST_AUTO_POWER_ON` to power on the host automatically when the service processor has been booted. If this policy is set to `enabled`, the service processor sets `HOST_LAST_POWER_STATE` to `disabled`.

- At the `->` prompt, type:

```
-> set /SP/policy HOST_AUTO_POWER_ON=value
```

where *value* can be:

- `enabled` – When power is applied, automatically powers on the host when the SP has been booted.
- `disabled` – Keeps the host power off when power is applied (the default).

Related Information

- [“Restore Host Power State at Restart \(CLI\)”](#) on page 26
- [“Disable or Re-Enable Power-On Delay \(CLI\)”](#) on page 28
- [“Manage Configuration Policy Settings \(Web Interface\)”](#) on page 28

▼ Disable or Re-Enable Power-On Delay (CLI)

Use the `/SP/policy HOST_POWER_ON_DELAY` property to cause the server to wait for a short time before powering on automatically. The delay is a random interval of one to five seconds. Delaying the server power on helps minimize current surges on the main power source. This power-on delay is important when multiple servers in racks power on after a power outage.

- At the `->` prompt, type:

```
-> set /SP/policy HOST_POWER_ON_DELAY=value
```

where *value* can be:

- enabled
- disabled (the default).

Related Information

- [“Specify Host Power State at Restart \(CLI\)”](#) on page 27
- [“Restore Host Power State at Restart \(CLI\)”](#) on page 26
- [“Manage Configuration Policy Settings \(Web Interface\)”](#) on page 28

▼ Manage Configuration Policy Settings (Web Interface)

ABOUT REFRESH

User: root Role: auroc SP Hostname: SUNSP00144F7E834F

Sun™ Integrated Lights Out Manager

System Information System Monitoring Configuration User Management Remote Control Maintenance

System Management Access Alert Management Network DNS Serial Port Clock Timezone Syslog SMTP Client

Policy Configuration

Configure system policies from this page. To modify a policy, select the radio button next to that policy, then choose Enable or Disable from the drop down list.

Service Processor Policies

Actions

Description	Status
<input type="radio"/> Auto power-on host on boot (enabling this policy disables Set host power to last power state policy)	Disable
<input type="radio"/> Set host power to last power state on boot (enabling this policy disables Auto power-on host policy)	Disable
<input type="radio"/> Set to delay host power on	Disable
<input type="radio"/> Set to enable backing up of user account info to SCC card	Enable

1. Log in to the ILOM web interface as Administrator (root) to open the web interface.
2. Select Configuration -> Policy.
3. Select an Action value to apply the Action (enable or disable) you have chosen.

Related Information

- [“Specify Host Power State at Restart \(CLI\)”](#) on page 27
- [“Restore Host Power State at Restart \(CLI\)”](#) on page 26
- [“Disable or Re-Enable Power-On Delay \(CLI\)”](#) on page 28
- [“Specify Backup of the User Database \(CLI\)”](#) on page 26

Managing Network Access

This section describes managing network access to the SP using ILOM.

- [“Disable or Re-Enable Network Access to the SP \(CLI\)”](#) on page 30
- [“Display the DHCP Server’s IP Address \(CLI\)”](#) on page 30

▼ Disable or Re-Enable Network Access to the SP (CLI)

Use the `/SP/network` state property to enable or disable the service processor's network interface.

- At the `->` prompt, type:

```
-> set /SP/network state=value
```

where *value* can be:

- enabled (the default)
- disabled

Related Information

- [“Display the DHCP Server’s IP Address \(CLI\)” on page 30](#)

▼ Display the DHCP Server’s IP Address (CLI)

To display the IP address of the DHCP server that provided the dynamic IP address requested by the service processor, view the `dhcp_server_ip` property. To see the `dhcp_server_ip` property, use the following procedure.

- Type:

```
-> show /SP/network

/SP/network
  Targets:

  Properties:
    commitpending = (Cannot show property)
    dhcp_server_ip = 10.8.31.5
    ipaddress = 10.8.31.188
    ipdiscovery = dhcp
    ipgateway = 10.8.31.248
    ipnetmask = 255.255.252.0
    macaddress = 00:14:4F:7E:83:4F
    pendingipaddress = 10.8.31.188
    pendingipdiscovery = dhcp
    pendingipgateway = 10.8.31.248
    pendingipnetmask = 255.255.252.0
    state = enabled
```

```
Commands :
  cd
  set
  show
```

Related Information

- [“Disable or Re-Enable Network Access to the SP \(CLI\)” on page 30](#)

ILOM Information Stored on the SCC

SPARC servers store in the SCC (system configuration card) a subset of the information backed up and restored by ILOM 3.0. In case of a server failure in which there is no ILOM backup of SP data, transferring the SCC to the replacement server can provide partial restoration of the failed server’s configuration data.

Note – The version of the data on the SCC must match the version of the SCC daemon running on the SP. If the versions differ, the version on the SCC is ignored. After SP reset, the SCC data is overwritten.

TABLE: ILOM Properties Stored on the SCC

Properties	Targets
<i>/SP/users/username/</i>	name password role cli_mode
<i>/SP/network/</i>	ipaddress ipdiscovery ipgateway ipnetmask state
<i>/HOST/diag/</i>	trigger level verbosity mode
<i>/HOST/</i>	autorunonerror autorestart

TABLE: ILOM Properties Stored on the SCC *(Continued)*

Properties	Targets
/SP/policy/	HOST_LAST_POWER_STATE HOST_POWER_ON_DELAY BACKUP_USER_DATA
/SP/services/ssh/state	N/A
/SP/clients/smtp/	address port state
/SP/alertmgmt/rules/[1-15]/ (if the alert is an email alert)	destination level type
/SP/system_identifier	N/A
/SYS/keyswitch	N/A

TABLE: ALOM CMT Conditional Variables

Variable
sc_clipasswecho
sc_cliprompt
sc_clitimeout
sc_clieventlevel
sc_eschapechars

Related Information

- [“Specify Backup of the User Database \(CLI\)” on page 26](#)

Managing Devices

This section contains information on ILOM properties on the Sun SPARC Enterprise T5120 and T5220 servers that augment the array of properties common to ILOM on other platforms. In particular, this chapter covers properties in the `/SYS` namespace.

- [“Managing Virtual Keyswitch Settings” on page 33](#)

Managing Virtual Keyswitch Settings

- [“Specify Host Behavior With the Keyswitch State” on page 33](#)
- [“Control the Virtual Keyswitch \(Web Interface\)” on page 34](#)

▼ Specify Host Behavior With the Keyswitch State

Use the `/SYS keyswitch_state` property to control the position of the virtual keyswitch.

- **At the `->` prompt, type:**

```
-> set /SYS keyswitch_state=value
```

where *value* can be:

- `normal` – The system can power itself on and start the boot process (the default).
- `standby` – The system cannot power itself on.
- `diag` – The system can power itself on using preset values of diagnostic properties: (`/HOST/diag level=max`, `/HOST/diag mode=max`, `/HOST/diag verbosity=max`) to provide thorough fault coverage. This option overrides the values of diagnostic properties that you might have set.


- locked – The system can power itself on, however you are prohibited from updating any of the flash devices or setting `/HOST send_break_action=break`.

Related Information

- [“Control the Virtual Keyswitch \(Web Interface\)”](#) on page 34

▼ Control the Virtual Keyswitch (Web Interface)

You can use the web interface to control the virtual keyswitch position of the system.

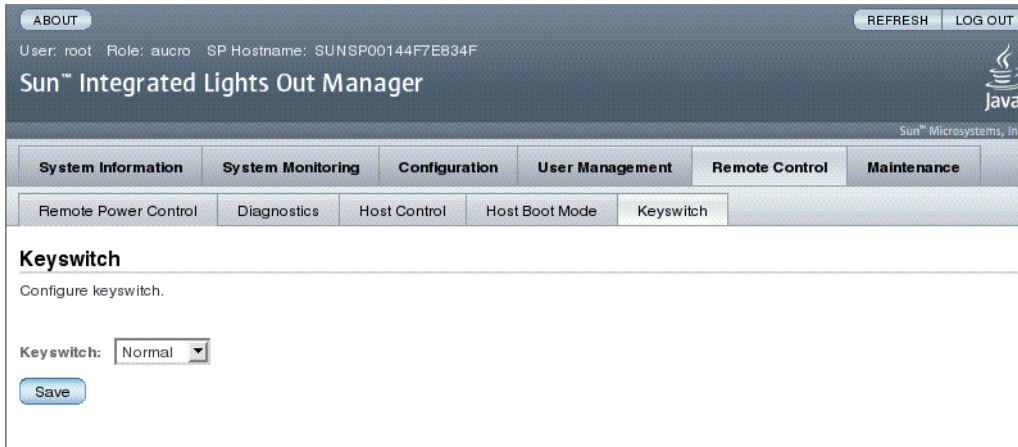

The screenshot shows the Sun Integrated Lights Out Manager (ILOM) web interface. At the top, there is a header with "ABOUT" on the left and "REFRESH" and "LOG OUT" on the right. Below the header, it displays "User: root Role: auro SP Hostname: SUNSP00144F7E834F". The main title is "Sun™ Integrated Lights Out Manager" with the Java logo and "Sun™ Microsystems, Inc." on the right. A navigation bar contains tabs for "System Information", "System Monitoring", "Configuration", "User Management", "Remote Control", and "Maintenance". Under "Remote Control", there are sub-tabs for "Remote Power Control", "Diagnostics", "Host Control", "Host Boot Mode", and "Keyswitch". The "Keyswitch" sub-tab is selected, showing the "Keyswitch" section. Below the section title, it says "Configure keyswitch." and "Keyswitch: Normal" with a dropdown arrow. A "Save" button is located at the bottom left of the form.

1. Log in to the ILOM web interface as Administrator (root) to open the web interface
2. Select Remote Control -> Keyswitch.
3. Select the Keyswitch state value.
4. Click Save.

Related Information

- [“Specify Host Behavior With the Keyswitch State”](#) on page 33

Discover IPMI Sensors and Indicators

Your server includes a number of IPMI-compliant sensors and indicators. Sensors measure voltages, temperature ranges, and detection of when components are installed and removed. Indicators, such as light emitting diodes (LEDs), notify you of important server conditions, such as when service is required.

This section contains the following topics:

- [“Sensors on Sun SPARC Enterprise T5120 and T5220 Servers” on page 36](#)
- [“Indicators on Oracle’s Sun SPARC Enterprise T5120 and T5220 Servers” on page 40](#)

Sensors on Sun SPARC Enterprise T5120 and T5220 Servers

TABLE: Sensors on Sun SPARC Enterprise T5120 and T5220 Servers

Name	Path	Description
/Bn/CHn/Dn/PRSNT	/SYS/MB/CMP0/BRn/CHn/Dn/PRSNT	Branch (0-3) Channel (0-1) DIMM (0-1) Presence sensor
/Bn/CHn/Dn/TEMP	/SYS/MB/CMP0/BRn/CHn/Dn/T_AMB	Branch (0-3) Channel (0-1) DIMM (0-1) Temperature sensor
/FBn/FMn/Fn/TACH	/SYS/FANBDn/FMn/Fn/TACH	Fan Board (0-1) Fan Module (0-2) Fan (0-1) Speed sensor
/FBn/FMn/PRSNT	/SYS/FANBDn/FMn/PRSNT	Fan Board (0-1) Fan Module (0-2) Presence sensor
/FBn/PRSNT	/SYS/FANBDn/PRSNT	Fan Board (0-1) Presence sensor
/HDDn/PRSNT	/SYS/HDDn/PRSNT	Hard Disk (0-15) Presence sensor
/MB/CMP0/T_BCORE	/SYS/MB/CMP0/T_BCORE	Bottom of Core Temperature sensor
/MB/CMP0/T_TCORE	/SYS/MB/CMP0/T_TCORE	Top of Core Temperature sensor
/MB/I_USBn	/SYS/MB/I_USBn	USB Port (0-1) Current sensor
/MB/I_VCORE	(Inaccessible, used internally)	CPU Core Current Threshold sensor
/MB/I_VMEML	(Inaccessible, used internally)	Left memory bank current sensor
/MB/I_VMEMR	(Inaccessible, used internally)	Right memory bank current sensor
/MB/P0/CPUS_BITn	(Inaccessible, used internally)	CPU attachment (0-11) sensor
/MB/T_AMB	/SYS/MB/T_AMB	Ambient Temperature Threshold sensor

TABLE: Sensors on Sun SPARC Enterprise T5120 and T5220 Servers (*Continued*)

Name	Path	Description
/MB/T_BUS_BAR#	(Inaccessible, used internally)	Motherboard Bus Bar (0-1) Temperature sensor
/MB/V_+12V0_MAIN	/SYS/MB/V_+12V0_MAIN	12V Main Voltage Threshold sensor
/MB/V_1V0_VDD	(Inaccessible, used internally)	1.0V Main Voltage Threshold sensor
/MB/V_1V1_VDD	(Inaccessible, used internally)	1.1V Main Voltage Threshold sensor
/MB/V_1V2_VDD	(Inaccessible, used internally)	1.2V Main Voltage Threshold sensor
/MB/V_1V5_VDD	(Inaccessible, used internally)	1.5V Main Voltage Threshold sensor
/MB/V_1V8_GBE#	(Inaccessible, used internally)	NET (0-1) Voltage Threshold sensor
/MB/V_+3V3_MAIN	/SYS/MB/V_+3V3_MAIN	3.3V Main Voltage Threshold sensor
/MB/V_+3V3_STBY	/SYS/MB/V_+3V3_STBY	3.3V Standby Voltage Threshold sensor
/MB/V_5V0_VCC	(Inaccessible, used internally)	5V Main Voltage Threshold sensor
/MB/V_VBAT	/SYS/MB/V_VBAT	Battery Voltage Threshold sensor
/MB/V_VCORE	/SYS/MB/V_VCORE	CPU Core Voltage Threshold sensor
/MB/V_VCORE_POK	/SYS/MB/V_VCORE_POK	Core Power for CPU Within Specification sensor
/MB/V_VDDIO	/SYS/MB/V_VDDIO	Voltage Threshold sensor
/MB/V_VMEML	/SYS/MB/V_VMEML	Left Memory Branch Voltage Threshold sensor
/MB/V_VMEMR	/SYS/MB/V_VMEMR	Right Memory Branch Voltage Threshold sensor
/MB/V_VTTL	(Inaccessible, used internally)	Left Memory Riser (0-1) VTT Voltage
/MB/V_VTRR	(Inaccessible, used internally)	Right Memory Riser (0-1) VTT Voltage
/MB/VMEML_POK	/SYS/MB/VMEML_POK	Left Memory Branch Power Within Specification sensor

TABLE: Sensors on Sun SPARC Enterprise T5120 and T5220 Servers *(Continued)*

Name	Path	Description
/MB/VMEMR_POK	/SYS/MB/VMEMR_POK	Right Memory Branch Power Within Specification sensor
/MB/XAUI n /PRSNT	(Inaccessible, used internally)	XAUI (0-1) Presence sensor
/PDB/+5V0_POK	(Inaccessible, used internally)	PDB 5.0V Power Within Specification sensor
/PS n /AC_POK	/SYS/PS n /AC_POK	Power Supply (0-1) Power Within Specification sensor
/PS n /CUR_FAULT	/SYS/PS n /CUR_FAULT	Power Supply (0-1) Current Fault sensor
/PS n /DC_POK	/SYS/PS n /DC_POK	Power Supply (0-1) DC power sensor
/PS n /FAIL	(Inaccessible, used internally)	Power Supply (0-1) Alert sensor
/PS n /FAN_FAULT	/SYS/PS n /FAN_FAULT	Power Supply (0-1) Fan Fault sensor
/PS n /I_IN_LIMIT	/SYS/PS n /I_IN_LIMIT	Power Supply (0-1) AC current limit sensor
/PS n /I_IN_MAIN	/SYS/PS n /I_IN_MAIN	Power Supply (0-1) AC current sensor
/PS n /I_OUT_LIMIT	/SYS/PS n /I_OUT_LIMIT	Power Supply (0-1) DC current limit sensor
/PS n /I_OUT_MAIN	/SYS/PS n /I_OUT_MAIN	Power Supply (0-1) DC current limit sensor
/PS n /IN_POWER	/SYS/PS n /IN_POWER	Power Supply (0-1) AC power sensor
/PS n /OUT_POWER	/SYS/PS n /OUT_POWER	Power Supply (0-1) DC power sensor
/PS n /PRSNT	/SYS/PS n /PRSNT	Power Supply (0-1) Presence sensor
/PS n /TEMP_FAULT	/SYS/PS n /TEMP_FAULT	Power Supply (0-1) Temperature Fault sensor
/PS n /V_IN_MAIN	/SYS/PS n /V_IN_MAIN	Power Supply (0-1) AC voltage sensor
/PS n /V_OUT_MAIN	/SYS/PS n /V_OUT_MAIN	Power Supply (0-1) DC voltage sensor

TABLE: Sensors on Sun SPARC Enterprise T5120 and T5220 Servers (*Continued*)

Name	Path	Description
/PSn/VOLT_FAULT	/SYS/PSn/VOLT_FAULT	Power Supply (0-1) Voltage Fault sensor
/SASBP/PRSNT	(Inaccessible, used internally)	Disk Backplane Presence sensor
/SYS/VPS	/SYS/SYS/VPS	Total system power (in watts) sensor
/XAUIIn/0V9_FAULT	(Inaccessible, used internally)	XAUI (0-1) 0.9 Volt Fault sensor
/XAUIIn/1V2_FAULT	(Inaccessible, used internally)	XAUI (0-1) 1.2V Fault sensor
/XAUIIn/1V8_FAULT	(Inaccessible, used internally)	XAUI (0-1) 1.8V Fault sensor
/XAUIIn/3V3_FAULT	(Inaccessible, used internally)	XAUI (0-1) 3.3V Fault sensor
/XAUIIn/5V0_FAULT	(Inaccessible, used internally)	XAUI (0-1) 5.0V Fault sensor

Related Information

- [“Indicators on Oracle’s Sun SPARC Enterprise T5120 and T5220 Servers” on page 40](#)

Indicators on Oracle's Sun SPARC Enterprise T5120 and T5220 Servers

TABLE: Indicators on the Sun SPARC Enterprise T5120 and T5220 Servers

Name	Path	Description
/ACT	/SYS/ACT	System Power Activity indicator
/Bn/CHn/Dn/FAIL	/SYS/MB/CMP0/BRn/CHn/Dn/SERVICE	Branch Service indicator
/FAN_FAULT	/SYS/FAN_FAULT	Fan Fault indicator
/FBn/FMn/SERVICE	/SYS/FANBDn/FMn/SERVICE	Fan Board (0–1) Fan Module (0–3) Service indicator
/HDDn/OK2RM	/SYS/HDDn/OK2RM	Hard Disk (0–15) Okay to Remove indicator
/HDDn/SERVICE	/SYS/HDDn/SERVICE	Hard Disk (0–15) Service indicator
/LOCATE	/SYS/LOCATE	Locate indicator
/PS_FAULT	/SYS/PS_FAULT	Power Supply Fault indicator
/SERVICE	/SYS/SERVICE	Service indicator
/TEMP_FAULT	/SYS/TEMP_FAULT	Temperature Fault indicator

Related Information

- [“Sensors on Sun SPARC Enterprise T5120 and T5220 Servers” on page 36](#)

Discover ALOM Compatibility Information

Description	Links
Description of ALOM CMT compatibility shell.	“Significant Differences Between ILOM and ALOM CMT” on page 42 “Create an ALOM CMT Compatibility Shell” on page 44 “ILOM and ALOM CMT Command Comparison” on page 46
Table comparing ALOM CMT variables to corresponding ILOM variables.	“ALOM CMT Variable Comparison” on page 54
Event messages available through the ALOM CMT compatibility shell.	“Event Message Overview” on page 55 “Event Severity Levels” on page 56 “Service Processor Usage Event Messages” on page 57 “Environmental Monitoring Event Messages” on page 60 “Host Monitoring Event Messages” on page 64

ALOM CMT Compatibility Shell

ILOM supports some of the features of the ALOM CMT command-line interface by means of a compatibility shell. There are significant differences between ILOM and ALOM CMT. This chapter describes those differences. This chapter includes the following topics:

- [“Significant Differences Between ILOM and ALOM CMT” on page 42](#)
- [“Create an ALOM CMT Compatibility Shell” on page 44](#)

- [“ILOM and ALOM CMT Command Comparison” on page 46](#)

Significant Differences Between ILOM and ALOM CMT

The backward compatibility shell supports some, but not all features of ALOM CMT. Some of the more significant differences between ILOM and ALOM CMT are described in this section or in the product notes for your server.

- [“Adding a Commit Step to Procedures That Configure ILOM Network Configuration Properties” on page 42](#)
- [“Commit a Change to a Network Configuration Property” on page 42](#)
- [“Commit a Change to a Serial Port Configuration Property” on page 43](#)

Adding a Commit Step to Procedures That Configure ILOM Network Configuration Properties

In the original ALOM CMT environment, when changing the values of some ALOM CMT variables (such as network and serial port configuration variables), it was necessary to reset the service processor (called the system controller in ALOM CMT) before the changes took effect. By comparison, in ILOM (and the ALOM CMT compatibility shell) you must commit the changed values rather than resetting the service processor.



Caution – In ILOM, if you change the value of the property and reset the SP without committing the change, the new property setting will not be retained.

▼ Commit a Change to a Network Configuration Property

1. **Change the value of the target network configuration property.**

2. Commit the change.

For example, set a static IP address using the ALOM compatibility CLI:

```
sc> setsc netsc_ipaddr xxx.xxx.xxx.xxx  
sc> setsc netsc_commit true
```

To set the same property using the ILOM CLI:

```
-> set /SP/network pendingipaddress=xxx.xxx.xxx.xxx  
Set 'pendingipaddress' to 'xxx.xxx.xxx.xxx'  
-> set /SP/network commitpending=true  
Set 'commitpending' to 'true'
```

Related Information

- [“Commit a Change to a Serial Port Configuration Property” on page 43](#)
- [“Adding a Commit Step to Procedures That Configure ILOM Network Configuration Properties” on page 42](#)

▼ Commit a Change to a Serial Port Configuration Property

1. Change the value of the target serial port configuration property.
2. Use either the ALOM CMT command `setsc ser_commit true` or the ILOM command `set /SP/serial/external commitpending=true` to commit the change.
Refer to [“ILOM and ALOM CMT Command Comparison” on page 46](#) for a list of variables and corresponding properties.

ALOM CMT Variable	Comparable ILOM Property
netsc_commit	/SP/network commitpending
ser_commit	/SP/serial/external commitpending

Related Information

- [“Commit a Change to a Network Configuration Property” on page 42](#)
- [“Adding a Commit Step to Procedures That Configure ILOM Network Configuration Properties” on page 42](#)

▼ Create an ALOM CMT Compatibility Shell

Your server is configured to operate under an ILOM shell, by default. You can create an ALOM compatibility shell if you prefer to use commands that resemble ALOM CMT commands to administer your server.

Note – If you have performed an upgrade of the firmware from an earlier version and selected the option to preserve the settings of your earlier version of ILOM, you can continue to use your prior settings (including the username `admin` and password) without recreating the `admin` username, described in this section. If you use the original password for the username `root` supplied with ILOM firmware, ILOM warns you that the password is still set to the factory default.

1. Log onto the service processor with a username that has been assigned the user management (u) role.

When powered on, the SP boots to the ILOM login prompt.

```
XXXXXXXXXXXXXXXXXXXX login: username
Password:
Waiting for daemons to initialize...
Daemons ready

Integrated Lights Out Manager

Version 3.0.x.x

Copyright 2008 Sun Microsystems, Inc. All rights reserved.
Use is subject to license terms.

Warning: password is set to factory default.

->
```

2. Create a user named `admin`, and set the `admin` account roles to `aucro` and the CLI mode to `alom`.

```
-> create /SP/users/admin
Creating user...
Enter new password: *****
Enter new password again: *****
Created /SP/users/admin

-> set /SP/users/admin role=aucro
Set 'role' to 'aucro'
```



```
->set /SP/users/admin cli_mode=alom
Set 'cli_mode' to 'alom'
```

Note – The asterisks in the example will not appear when you enter your password.

You can combine the `create` and `set` commands on a single line:

```
-> create /SP/users/admin role=aucro cli_mode=alom
Creating user...
Enter new password: *****
Enter new password again: *****
Created /SP/users/admin
```

3. Log out of the `root` account after you have finished creating the `admin` account.

```
-> exit
```

4. Log in to the ALOM CLI shell (indicated by the `sc>` prompt) from the ILOM login prompt.

```
XXXXXXXXXXXXXXXXXXXX login: admin
Password:
Waiting for daemons to initialize...

Daemons ready

Integrated Lights Out Manager

Version 3.0.x.x

Copyright 2008 Sun Microsystems, Inc. All rights reserved.
Use is subject to license terms.

sc>
```

In the ALOM CMT compatibility shell (with a few exceptions) you can use commands that resemble the commands of ALOM CMT. Remember that the ALOM CMT compatibility shell is an ILOM interface. The comparisons between the ILOM CLI and the ALOM CMT compatibility CLI are described in [“ILOM and ALOM CMT Command Comparison”](#) on page 46.

Related Information

- [“ILOM and ALOM CMT Command Comparison”](#) on page 46

ILOM and ALOM CMT Command Comparison

The following table provides a command-by-command comparison between the command sets of ALOM CMT and the default ILOM CLI command set. Only the supported ALOM CMT command options are listed in the tables below. Where there are ALOM CMT command-line arguments that have no corresponding ILOM properties, those ALOM CMT arguments have been omitted. The command set of the ALOM compatibility shell provides a close approximation of the equivalent commands and arguments (where supported) in ALOM CMT.

Note – By default, when displaying information ALOM CMT commands limit their output to a terse format, offering more verbose output if a `-v` flag is supplied with the command. ILOM's `show` commands do not have a terse output format. These commands always provide verbose output.

TABLE: ALOM CMT Shell Configuration Commands

ALOM CMT Command	Summary	Comparable ILOM Command
<code>password</code>	Changes the login password of the current user.	<code>set /SP/users/username password</code>
<code>restartssh</code>	Restarts the SSH server so that new host keys generated by the <code>ssh-keygen</code> command are reloaded.	<code>set /SP/services/ssh restart_sshd_action=true</code>
<code>setdate [[<i>m</i><i>m</i><i>d</i>]<i>HHMM</i> <i>m</i><i>m</i><i>d</i><i>d</i><i>HHMM</i>[<i>cc</i>]<i>yy</i>][.<i>SS</i>]</code>	Sets ALOM CMT date and time.	<code>set /SP/clock datetime=<i>value</i></code>
<code>setdefaults [-a]</code>	Resets all ALOM CMT configuration parameters to their default values. The <code>-a</code> option resets the user information to the default (one admin account only).	<code>set /SP reset_to_defaults=[<i>none</i> <i>factory</i> <i>all</i>]</code>
<code>setkeyswitch [normal stby diag locked]</code>	Sets the status of the virtual keyswitch. Setting the virtual keyswitch to standby (<code>stby</code>) powers off the server. Before powering off the host server, ALOM CMT asks for a confirmation.	<code>set /SYS keyswitch_state=<i>value</i></code>

TABLE: ALOM CMT Shell Configuration Commands (*Continued*)

ALOM CMT Command	Summary	Comparable ILOM Command
<code>setsc [param] [value]</code>	Sets the specified ALOM CMT parameter to the assigned value.	<code>set target property=value</code>
<code>setupsc</code>	Runs the interactive configuration script. This script configures the ALOM CMT configuration variables.	No equivalent in ILOM
<code>showplatform [-v]</code>	Displays information about the host system's hardware configuration, and whether the hardware is providing service. The <code>-v</code> option displays verbose information about the displayed components.	<code>show /HOST</code>
<code>showfru</code>	Displays information about the field-replaceable units (FRUs) in a host server.	Use the ILOM <code>show [FRU]</code> command to display static FRU information. (For dynamic FRU information, use the ALOM CMT <code>showfru</code> command.)
<code>showusers -g lines</code>	Displays a list of users currently logged in to ALOM CMT. The display for this command has a similar format to that of the UNIX command <code>who</code> . The <code>-g</code> option pauses the display after the number of lines you specify for <code>lines</code> .	<code>show -level all -o table /SP/sessions</code> No equivalent in ILOM for <code>-g</code> option
<code>showhost version</code>	Displays version information for host-side components. The <code>version</code> option displays the same information as the <code>showhost</code> command with no option.	<code>show /HOST</code>
<code>showkeyswitch</code>	Displays status of virtual keyswitch.	<code>show /SYS keyswitch_state</code>
<code>showsc [param]</code>	Displays the current nonvolatile random access memory (NVRAM) configuration parameters.	<code>show target property</code>

TABLE: ALOM CMT Shell Configuration Commands (*Continued*)

ALOM CMT Command	Summary	Comparable ILOM Command
showdate	Displays the ALOM CMT date. ALOM CMT time is expressed in Coordinated Universal Time (UTC) rather than local time. The Oracle Solaris OS and ALOM CMT time are not synchronized.	show /SP/clock datetime
ssh-keygen -l	Generates Secure Shell (SSH) host keys and displays the host key fingerprint on the SC.	show /SP/services/ssh/keys rsa dsa
ssh-keygen -r		set /SP/services/ssh generate_new_key_action=true
ssh-keygen -t {rsa dsa}		set /SP/services/ssh generate_new_key_type=[rsa dsa]
usershow [username]	Displays a list of all user accounts and permission levels, and whether passwords are assigned.	show /SP/users
useradd <i>username</i>	Adds a user account to ALOM CMT.	create /SP/users/ <i>username</i>
userdel [-y] <i>username</i>	Deletes a user account from ALOM CMT. The -y option enables you to skip the confirmation question.	delete [-script] /SP/users/ <i>username</i>
userpassword [username]	Sets or changes a user password.	set /SP/users/ <i>username</i> password
userperm [username] [c] [u] [a] [r] [o] [s]	Sets the permission level for a user account.	set /SP/users/ <i>username</i> role= <i>permissions</i> [a u c r o s]

TABLE: ALOM CMT Shell Log Commands

ALOM CMT Command	Summary	Comparable ILOM Command
showlogs -p [r p] [-b <i>lines</i> -e <i>lines</i> -v] [-g <i>lines</i>]	Displays the history of all events logged in the event log, or major and critical events in the event log. The -p option selects whether to display only major and critical events from the event log (r) or to display all of the events from the event log (p). -g <i>lines</i> specifies the number of lines to display before pausing. -e <i>lines</i> displays <i>n</i> lines from the end of the buffer. -b <i>lines</i> displays <i>n</i> lines from the beginning of the buffer. -v displays the entire buffer.	show /SP/logs/event/list No equivalent in ILOM
consolehistory [-b <i>lines</i> -e <i>lines</i> -v] [-g <i>lines</i>] [boot run]	Displays the host server console output buffers. -g <i>lines</i> specifies the number of lines to display before pausing. -e <i>lines</i> displays <i>n</i> lines from the end of the buffer. -b <i>lines</i> displays <i>n</i> lines from the beginning of the buffer. -v displays the entire buffer.	set /SP/console/history <i>property=value</i> [set /SP/console/history <i>property=value</i>] [set /SP/console/history <i>property=value</i>] show /SP/console/history where <i>property</i> can be: line_count=[<i>lines</i>] default value is "" (none), meaning there is no limit to the total number of lines retrieved from the buffer. pause_count=[<i>count</i>] default value is "" (none), meaning there is no limit to the count of lines displayed per pause. start_from=[end beginning] default value is end.

TABLE: ALOM CMT Shell Status and Control Commands

ALOM CMT Command	Summary	Comparable ILOM Command
showenvironment	Displays the environmental status of the host server. This information includes system temperatures, power supply status, front panel LED status, hard disk drive status, fan status, voltage, and current sensor status.	show -o table -level all /SYS
showpower [-v]	Displays power metrics for the host server.	show /SP/powermgmt
shownetwork [-v]	Displays the current network configuration information. The -v option shows additional information about your network, including information about your DHCP server.	show /SP/network
console [-f]	Connects to the host system console. The -f option forces the console write lock from one user to another. In ILOM, the -force option terminates the console, permitting you to start a new console.	start [-force] /SP/console
break [-D] [-c]	Drops the host server from running the Oracle Solaris OS software into OpenBoot PROM or kadb depending upon the mode in which the Oracle Solaris software was booted.	set /HOST send_break_action=[break dumpcore] [start /SP/console]
bootmode [normal] [reset_nvram] [config=configname] [bootscript = string]	Controls the host server OpenBoot PROM firmware method of booting.	set /HOST/bootmode <i>property=value</i> (where <i>property</i> is state, config, or script)

TABLE: ALOM CMT Shell Status and Control Commands (*Continued*)

ALOM CMT Command	Summary	Comparable ILOM Command
<code>flashupdate -s IPaddr -f pathname [-v] [-y] [-c]</code>	<p>Downloads and updates system firmware (both host firmware and ALOM CMT firmware). For ILOM, <i>ipaddr</i> must be a TFTP server. If you use DHCP, you can replace <i>ipaddr</i> with the name of the TFTP host.</p> <p>The <code>-y</code> option enables you to skip the confirmation question.</p> <p>The <code>-c</code> option enables you to update system firmware on your server without preserving configuration information.</p> <p>After configuration information has been deleted (by having used the <code>-c</code> option or the <code>set /SP reset_to_defaults=factory</code> command), you <i>must</i> use the <code>-c</code> option when replacing system firmware that includes ILOM 3.0 with firmware that includes ILOM 2.0. If you omit the <code>-c</code> option, the <code>flashupdate</code> command attempts to restore preserved configuration information, halting the firmware downgrade because that configuration information is absent.</p>	<pre>load -source tftp://ipaddr/pathname</pre>
<code>reset [-y] [-f] [-c]</code>	<p>Generates a hardware reset on the host server.</p> <p>The <code>-y</code> option enables you to skip the confirmation question.</p> <p>The <code>-f</code> option forces a hardware reset.</p> <p>The <code>-c</code> option starts the console.</p>	<pre>reset [-script] [-force] /SYS [start /SP/console]</pre>
<code>reset -d [-n] [-y] [-f] [-c]</code>	<p>The <code>-d</code> option gracefully resets the control domain.</p> <p>The <code>-n</code> option sets the <code>auto-boot</code> variable to <code>disable</code> (lasts for one reset).</p> <p>The <code>-y</code> option enables you to skip the confirmation question.</p> <p>The <code>-f</code> option forces a hardware reset.</p> <p>The <code>-c</code> option starts the console.</p>	<pre>[set /HOST/domain/control auto-boot=disable] reset [-script] [-force] /HOST/domain/control [start /SP/console]</pre>

TABLE: ALOM CMT Shell Status and Control Commands (*Continued*)

ALOM CMT Command	Summary	Comparable ILOM Command
<code>powercycle [-y] [-f]</code>	<code>poweroff</code> followed by <code>poweron</code> . The <code>-f</code> option forces an immediate <code>poweroff</code> , otherwise the command attempts a graceful shutdown.	<code>stop [-script] [-force] /SYS</code> <code>start [-script] [-force] /SYS</code>
<code>poweroff [-y][-f]</code>	Removes the main power from the host server. The <code>-y</code> option enables you to skip the confirmation question. ALOM CMT attempts to shut the server down gracefully. The <code>-f</code> option forces an immediate shutdown.	<code>stop [-script] [-force] /SYS</code>
<code>poweron</code>	Applies the main power to the host server or FRU.	<code>start /SYS</code>
<code>setlocator [on/off]</code>	Turns the Locator LED on the server on or off.	<code>set /SYS/LOCATE value=<i>value</i></code>
<code>showfaults [-v]</code>	Displays current valid system faults.	<code>show faulty</code>
<code>clearfault <i>UUID</i></code>	Manually repairs system faults. Use the ILOM <code>show faulty</code> command to identify faulted components.	<code>set /SYS/<i>component</i></code> <code>clear_fault_action=true</code>
<code>showlocator</code>	Displays the current state of the Locator LED as either <code>on</code> or <code>off</code> .	<code>show /SYS/LOCATE</code>

TABLE: ALOM CMT Shell FRU Commands

ALOM CMT Command	Summary	Comparable ILOM Command
<code>setfru -c <i>data</i></code>	The <code>-c</code> option enables you to store information (such as inventory codes) on all FRUs in a system.	<code>set /SYS customer_frudata=<i>data</i></code>
<code>showfru -g lines [-s -d] [<i>FRU</i>]</code>	Displays information about the FRUs in a host server.	<code>show [<i>FRU</i>]</code>
<code>removefru [-y] [<i>FRU</i>]</code>	Prepares a FRU (for example, a power supply) for removal. The <code>-y</code> option enables you to skip the confirmation question.	<code>set /SYS/PS0</code> <code>prepare_to_remove_action=true</code>

TABLE: ALOM CMT Shell Automatic System Recovery (ASR) Commands

ALOM CMT Command	Summary	Comparable ILOM Command
<code>enablecomponent component</code>	Re-enables a component that has been disabled using the <code>disablecomponent</code> command.	<code>set /SYS/component component_state=enabled</code>
<code>disablecomponent component</code>	Disables a component.	<code>set /SYS/component component_state=disabled</code>
<code>showcomponent component</code>	Displays system components and their test status.	<code>show /SYS/component component_state</code>
<code>clearasrdb</code>	Removes all entries from the list of disabled components.	No equivalent in ILOM

TABLE: ALOM CMT Shell Miscellaneous Commands

ALOM CMT Command	Summary	Comparable ILOM Command
<code>help [command]</code>	Displays a list of all ALOM CMT commands with their syntax and a brief description of how each command works. Specifying a command name as an option enables you to view the help for that command.	<code>help</code>
<code>reset [-y]</code>	Reboots ALOM CMT. The <code>-y</code> option enables you to skip the confirmation question.	<code>reset [-script] /SP</code>
<code>userclimode username shelltype</code>	Sets the type of shell to <i>shelltype</i> , where <i>shelltype</i> is <code>default</code> or <code>alom</code> .	<code>set /SP/users/username cli_mode=shelltype</code>
<code>logout</code>	Logs out from an ALOM CMT shell session.	<code>exit</code>

Related Information

- [“Create an ALOM CMT Compatibility Shell” on page 44](#)
- [“ALOM CMT Variable Comparison” on page 54](#)
- [“Event Messages Available Through the ALOM Compatibility Shell” on page 55](#)

ALOM CMT Variable Comparison

TABLE: ALOM CMT Variables and Comparable ILOM Properties

ALOM CMT Variable	Comparable ILOM Properties
diag_level	/HOST/diag level
diag_mode	/HOST/diag mode
diag_trigger	/HOST/diag trigger
diag_verbosity	/HOST/diag verbosity
if_connection	/SP/services/ssh state
if_emailalerts	/SP/clients/smtp state
if_network	/SP/network state
mgt_mailalert	/SP/alertmgmt/rules
mgt_mailhost	/SP/clients/smtp address
netsc_dhcp	/SP/network pendingipdiscovery
netsc_commit	/SP/network commitpending
netsc_enetaddr	/SP/network macaddress
netsc_ipaddr	/SP/network pendingipaddress
netsc_ipgateway	/SP/network pendingipgateway
netsc_ipnetmask	/SP/network pendingipnetmask
sc_backupuserdata	/SP/policy BACKUP_USER_DATA
sc_clieventlevel	N/A
sc_cliprompt	N/A
sc_clitimeout	N/A
sc_clipasswdecho	N/A
sc_customerinfo	/SP system_identifier
sc_escapechars	/SP/console escapechars
sc_powerondelay	/SP/policy HOST_POWER_ON_DELAY
sc_powerstatememory	/SP/policy HOST_LAST_POWER_STATE
ser_baudrate	/SP/serial/external pendingspeed
sys_autorestart	/SP autorestart
sys_autorunonerror	/SP autorunonerror

TABLE: ALOM CMT Variables and Comparable ILOM Properties (*Continued*)

ALOM CMT Variable	Comparable ILOM Properties
sys_boottimeout	/HOST boottimeout
sys_bootrestart	/HOST bootrestart
sys_bootfailrecovery	/HOST bootfailrecovery
sys_enetaddr	/HOST macaddress

Related Information

- [“ILOM and ALOM CMT Command Comparison” on page 46](#)
- [“Create an ALOM CMT Compatibility Shell” on page 44](#)
- [“Event Messages Available Through the ALOM Compatibility Shell” on page 55](#)

Event Messages Available Through the ALOM Compatibility Shell

This chapter contains information about event messages. Topics include:

- [“Event Message Overview” on page 55](#)
- [“Event Severity Levels” on page 56](#)
- [“Service Processor Usage Event Messages” on page 57](#)
- [“Environmental Monitoring Event Messages” on page 60](#)
- [“Host Monitoring Event Messages” on page 64](#)

Event Message Overview

The firmware on the service processor (known in ALOM CMT as the SC or system controller) sends event messages to several destinations:

- Messages are sent to all logged-in users, based on the configuration of the `sc_clieventlevelvariable`.
- Messages are recorded in the event log. View logged messages using the ALOM compatibility shell `showlogs` command.

- Messages recorded in the event log can be identified according to the severity of the event. If the severity of the event is major or critical, you can view the messages for those events using the ALOM compatibility shell `showlogs -p r` command. View all messages in the event log using the ALOM compatibility shell `showlogs -p p` command.
- Messages are sent in email messages based on the configuration of the `mgt_mailalert` variable. Individual email addresses can be configured to receive messages of different severities.
- If the event represents a fault, the event message appears in the output of the ALOM compatibility shell `showfaults` command.
- Messages are sent to the managed system operating system for logging into the Oracle Solaris syslog facility based on the configuration of the `sys_eventlevel` variable. Not all versions of the Oracle Solaris Operating System support this capability.

Related Information

- [“Event Severity Levels” on page 56](#)
- [“Service Processor Usage Event Messages” on page 57](#)
- [“Environmental Monitoring Event Messages” on page 60](#)
- [“Host Monitoring Event Messages” on page 64](#)

Event Severity Levels

Each event has a severity level and corresponding number:

- Critical (1)
- Major (2)
- Minor (3)

ALOM compatibility shell configuration parameters use these severity levels to determine which event messages are displayed.

Related Information

- [“Event Message Overview” on page 55](#)
- [“Service Processor Usage Event Messages” on page 57](#)
- [“Environmental Monitoring Event Messages” on page 60](#)
- [“Host Monitoring Event Messages” on page 64](#)

Service Processor Usage Event Messages

The following table displays usage event messages from the service processor (system controller).

TABLE: System Controller Usage Event Messages

Severity	Message	Description
Critical	Host has been powered off	ALOM compatibility shell sends this message whenever the SC requests a host power off, including when a user types the <code>poweroff</code> command.
Critical	Host has been powered off	ALOM compatibility shell sends this message when the SC requires an immediate host power off, including when a user types the <code>poweroff -f</code> command.
Critical	Host has been powered off	ALOM compatibility shell sends this message when the host power has turned off. It is also normal for this event to be sent when the host has reset itself.
Major	Host has been powered on	ALOM compatibility shell sends this message when the SC requests a host power on, either because of <code>sc_powerstatememory</code> or when a user types the <code>poweron</code> command.
Critical	Host has been reset	ALOM compatibility shell sends one of these messages when the SC requests a host reset, including when a user types the reset command.
Critical	Host has been powered off	
Critical	Host has been powered on	
Critical	Host System has Reset.	ALOM compatibility shell sends this message when the SC detects that the host has reset. This message is followed immediately by the Host has been powered off event message because reset is implemented as a powercycle on these systems.
Minor	<code>"root : Set : object = /clock/datetime : value = "datetime": success</code>	ALOM compatibility shell sends this message when a user types the <code>setdate</code> command to modify the SC date or time.

TABLE: System Controller Usage Event Messages (*Continued*)

Severity	Message	Description
Major	Upgrade succeeded	ALOM compatibility shell sends this message after the SC firmware has been reloaded after operation of the <code>flashupdate</code> command.
Minor	"root : Set : object = /HOST/bootmode/state: value = "bootmode-value": success	ALOM compatibility shell sends this message after a user changes the bootmode to normal using the <code>bootmode normal</code> command.
Minor	"root : Set : object = /HOST/bootmode/state: value = "reset_nvram": success	ALOM compatibility shell sends this message after a user changes the boot mode to <code>reset_nvram</code> with the <code>bootmode</code> command.
Minor	"root : Set : object = /HOST/bootmode/script: value = "text": success	ALOM compatibility shell sends this message after a user changes the boot mode boot script. The boot script = " <code>text</code> " is the text of the boot script provided by the user.
Minor	Keyswitch position has been changed to <i>keyswitch_position</i> .	ALOM compatibility shell sends this message after a user changes the keyswitch position with the <code>setkeyswitch</code> command. The <i>keyswitch_position</i> is the new keyswitch position.
Minor	"user" : open session : object = /session/type: value = www/shell: success	ALOM compatibility shell sends this message when users log in. <i>user</i> is the name of the user who just logged in.
Minor	"user" : close session : object = /session/type: value = www/shell: success	ALOM compatibility shell sends this message when users log out. <i>user</i> is the name of the user who just logged out.
Minor	"root : Set: object = /HOST/send_break_action: value = dumpcore : success	ALOM compatibility shell sends this message when an ALOM compatibility shell user sends a request to the host to dump core by typing the <code>break -D</code> command.

TABLE: System Controller Usage Event Messages (*Continued*)

Severity	Message	Description
Critical	Host Watchdog timeout.	ALOM compatibility shell sends this message when the host watchdog has timed out and the <code>sys_autorestart</code> variable has been set to none. The SC will not perform any corrective measures.
Critical	SP Request to Dump core Host due to Watchdog.	ALOM compatibility shell sends this message when the host watchdog has timed out and the <code>sys_autorestart</code> variable has been set to <code>dumpcore</code> . The SC attempts to perform a core dump of the host to capture error state information. The dump core feature is not supported by all OS versions.
Critical	SP Request to Reset Host due to Watchdog.	ALOM compatibility shell sends this message when the host watchdog has timed out and the <code>sys_autorestart</code> variable has been set to <code>reset</code> . Then the SC attempts to reset the host.

Related Information

- [“Event Severity Levels” on page 56](#)
- [“Event Message Overview” on page 55](#)
- [“Environmental Monitoring Event Messages” on page 60](#)
- [“Host Monitoring Event Messages” on page 64](#)

Environmental Monitoring Event Messages

The following table displays environmental monitoring event messages from the service processor (system controller).

TABLE: Environmental Monitoring Event Messages

Severity	Message	Description
Critical	SP detected fault at time <i>time</i> . Chassis cover removed.	ALOM compatibility shell sends this message if the chassis cover has been removed. The platform hardware turns managed system power off immediately as a precautionary measure. The event message System poweron is disabled should accompany this message to prevent the use of the poweron command while the chassis cover is removed.
Major	System poweron is disabled.	ALOM compatibility shell sends this message when the SC refuses to power on the system, either through the user poweron command or by the front panel power button. The SC disables power on because of an accompanying event, such as the event indicated by the message Chassis cover removed. Other possibilities include a device failure or insufficient fan cooling.
Major	System poweron is enabled.	ALOM compatibility shell sends this message after the condition that caused power on to be disabled (indicated by the preceding System poweron is disabled message) has been rectified. For example, by replacing the chassis cover or installing sufficient fans to cool the system.

TABLE: Environmental Monitoring Event Messages (*Continued*)

Severity	Message	Description
Major	SP detected fault at time <i>time</i> " <i>fault_type</i> 'fault' at <i>location</i> asserted"	<p>ALOM compatibility shell sends this message when a failure or a fault is detected. A fault is a lower priority condition that indicates the system is operating in a degraded mode. <i>fault_type</i> is the type of failure that has occurred, such as temperature, voltage, current, or power supply.</p> <p>The <i>location</i> is the location and name of the device that has the error condition. The location and name of the device match the output of the ALOM compatibility shell <code>showenvironment</code> command.</p> <p>This fault event message appears in the output of the ALOM compatibility shell <code>showfaults</code> command.</p>
Minor	SP detected fault cleared at <i>time</i> <i>time</i> current fault at <i>device</i> asserted.	<p>ALOM compatibility shell sends this message to indicate that a prior fault or failure has recovered or been repaired. The fields (<i>time</i> and <i>device</i>) are the same as the prior fault or failure event.</p>

TABLE: Environmental Monitoring Event Messages (*Continued*)

Severity	Message	Description
Major	<i>Device_type</i> at <i>location</i> has exceeded low warning threshold.	ALOM compatibility shell sends these messages when analog measurement sensors have exceeded the specified threshold.
Critical	<i>Device_type</i> at <i>location</i> has exceeded low critical shutdown threshold.	The threshold that was exceeded is included in the message.
Critical	<i>Device_type</i> at <i>location</i> has exceeded low nonrecoverable shutdown threshold	<i>Device_type</i> is the type of device that has failed, such as VOLTAGE_SENSOR or TEMP_SENSOR. The <i>location</i> is the location and name of the device that has the error condition. The location and name of the device match the output of the ALOM compatibility shell showenvironment command.
Major	<i>Device_type</i> at <i>location</i> has exceeded high warning threshold	For TEMP_SENSOR events, this message could indicate a problem outside of the server, such as the temperature in the room or blocked airflow in or out of the server. For VOLTAGE_SENSOR events, this message indicates a problem with the platform hardware or possibly with add-on cards installed.
Critical	<i>Device_type</i> at <i>location</i> has exceeded high soft shutdown threshold	These fault event messages appear in the output of the ALOM compatibility shell showfaults command.
Critical	<i>Device_type</i> at <i>location</i> has exceeded high hard shutdown threshold	
Minor	<i>Device_type</i> at <i>location</i> is within normal range.	ALOM compatibility shell sends this message when an analog measurement sensor no longer exceeds any warning or failure thresholds. This message is sent only if the sensor reading recovers sufficiently within the boundaries of the failure parameters. The message might not match the current output of the ALOM compatibility shell showenvironment command.

TABLE: Environmental Monitoring Event Messages (*Continued*)

Severity	Message	Description
Critical	Critical temperature value: host should be shut down	ALOM compatibility shell sends this message to indicate that the SC has started a shutdown because there are not enough working fans necessary to keep the system cooled. The number of fans necessary to maintain system cooling depends on the platform. See your platform documentation for more information.
Critical	Host system failed to power off.	ALOM compatibility shell sends this message if the SC is unable to power off the system. This message indicates a problem with either the platform hardware or the SC hardware. The system should be manually unplugged to prevent damage to the platform hardware. This fault event message appears in the output of the ALOM compatibility shell <code>showfaults</code> command.
Major	<i>FRU_type</i> at <i>location</i> has been removed.	ALOM compatibility shell sends these messages to indicate that a FRU has been removed or inserted. The field <i>FRU_type</i> indicates the type of FRU, such as <code>SYS_FAN</code> , <code>PSU</code> , or <code>HDD</code> . The field <i>location</i> indicates the location and name of the FRU, as shown in the output of the <code>showenvironment</code> command.
Minor	<i>FRU_type</i> at <i>location</i> has been inserted.	
Major	Input power unavailable for PSU at <i>location</i> .	ALOM compatibility shell sends this message to indicate that a power supply is not receiving input power. This message normally indicates that the power supply is not plugged in to AC power. If the power cords are plugged in to an outlet that is provided power, this message indicates a problem with the power supply itself. This fault event message appears in the output of the ALOM compatibility shell <code>showfaults</code> command.

Related Information

- [“Event Severity Levels” on page 56](#)

- “Service Processor Usage Event Messages” on page 57
- “Event Message Overview” on page 55
- “Host Monitoring Event Messages” on page 64

Host Monitoring Event Messages

The following table displays host monitoring event messages from the service processor (system controller).

TABLE: Host Monitoring Event Messages

Severity	Message	Description
Critical	SP detected fault at time <i>time</i> <i>component</i> disabled	ALOM compatibility shell sends this message when a component has been disabled, either automatically by POST discovering a fault or by a user typing the <code>disablecomponent</code> command. <i>component</i> is the disabled component, which will be an entry from the platform <code>showcomponent</code> command. This fault event message appears in the output of the ALOM compatibility shell <code>showfaults</code> command.
Minor	SP detected fault cleared at <i>component</i> reenabled	ALOM compatibility shell sends this message when a component is enabled. A component can be enabled by a user typing the <code>enablecomponent</code> command or by FRU replacement if the component itself is a FRU (such as a DIMM). <i>component</i> is the name of the component shown in the output of the platform <code>showcomponent</code> command.

TABLE: Host Monitoring Event Messages (*Continued*)

Severity	Message	Description
Major	Host detected fault, MSGID: SUNW-MSG-ID	ALOM compatibility shell sends this message when the Oracle Solaris PSH software diagnoses a fault. The SUNW-MSG-ID of the fault is an ASCII identifier that can be entered at (http://www.sun.com/msg) for more information about the nature of the fault and the steps to repair. This fault event message appears in the output of the ALOM compatibility shell <code>showfaults</code> command.
Major	<i>Location</i> has been replaced; faults cleared.	ALOM compatibility shell sends this message after the replacement of a FRU that contained a host-detected fault. <i>Location</i> is the location and name of the FRU that was replaced. This event can be received at SC boot or after FRUs have been swapped and the chassis cover is closed.
Major	Existing faults detected in FRU_PROM at <i>location</i> .	ALOM compatibility shell sends this message to indicate that the SC has detected a new FRU with pre-existing faults logged into its FRU PROM. This event can occur when either a FRU or the SC card is moved from one system to another. The location is the name of the SEEPROM on the replaced FRU, such as MB/SEEPROM. The most recent existing fault will be imported from the FRU PROM onto the <code>showfaults</code> list. The entry on the <code>showfaults</code> list is the fault imported, not this message.

Related Information

- “Event Severity Levels” on page 56
- “Service Processor Usage Event Messages” on page 57
- “Environmental Monitoring Event Messages” on page 60
- “Event Message Overview” on page 55

Index

Symbols

- /HOST autorestart property, 13
- /HOST autorunonerror property, 13
- /HOST macaddress property, 12
- /HOST send_break_action property, 18
- /HOST status property, 18
- /HOST/bootmode config property, 8
- /HOST/bootmode expires property, 10
- /HOST/bootmode script property, 9
- /HOST/bootmode state property, 8
- /SP customer_fru data property, 22
- /SP system_id identifier property, 22
- /SP/console escapechars property, 25
- /SP/policy BACKUP_USER_DATA property, 26
- /SP/policy HOST_AUTO_POWER_ON property, 27
- /SP/policy HOST_LAST_POWER_STATE property, 26
- /SP/policy HOST_POWER_ON_DELAY property, 28
- /SYS keyswitch_state property, 33

A

- ALOM CMT
 - environmental monitor event messages, 60
 - event message overview, 55
 - event messages, 55
 - event severity levels, 56
 - event usage messages, 57
 - host monitor event messages, 64
- ALOM CMT commands, comparison with ILOM commands, 46
- ALOM CMT compatibility shell, 44
- ALOM CMT compatibility shell
 - commands, compared with ILOM

- commands, 46
 - creating, 44
 - limits to backward compatibility, 42
- ALOM CMT variables, 54
 - to commit, 43
- automatic restart, 14
 - set the boot timeout interval, 14
 - specify behavior at boot timeout, 14
 - specify behavior if restart fails, 15
 - specify max restart attempts, 15

B

- backing up user data, 26
- boot mode
 - expiration date, 10
 - LDoms, 8
 - manage at reset, 8
 - managing configuration, 8
 - managing host, 6
 - managing reset, 8
 - managing script, 9
 - managing with the web interface, 10
 - overview, 7

C

- commit network configuration properties, 43
- console escape character, change, 25
- console history, display, 24
- customer identification data, change with web interface, 23

D

- DHCP server, display IP Address, 30

F

- FRU data, change, 22

- H**
- host
 - control information in the web interface, 16
 - display status information, 18
 - reset, 6
 - send a break or force a core dump, 18
 - specify behavior on reset, 13
 - specify behavior when host stops running, 13
 - host power state
 - manage power-on delay, 28
 - manage with web interface, 28
 - restore at restart, 26
 - specify at restart, 27
 - host status information, displaying with CLI, 18
- I**
- ILOM
 - features not supported, 3
 - overview, 1
 - platform-specific features, 2
 - ILOM and ALOM CMT commands, 46
 - ILOM commands
 - compared with ALOM CMT compatibility shell commands, 46
 - ILOM commit step, 42
 - ILOM properties
 - /HOST autorestart, 13
 - /HOST autorunonerror, 13
 - /HOST macaddress, 12
 - /HOST send_break_action, 18
 - /HOST status, 18
 - /HOST/bootmode config, 8
 - /HOST/bootmode expires, 10
 - /HOST/bootmode script, 9
 - /HOST/bootmode state, 8
 - /SP customer_fruedata, 22
 - /SP system_identifier, 22
 - /SP/console escapechars, 25
 - /SP/policy BACKUP_USER_DATA, 26
 - /SP/policy HOST_AUTO_POWER_ON, 27
 - /SP/policy HOST_LAST_POWER_STATE, 26
 - /SP/policy HOST_POWER_ON_DELAY, 28
 - /SYS keyswitch_state
 - , 33
 - /SP/serial/external commitpending, 43
 - to commit, 43
 - IPMI indicators, 40
 - IPMI sensors, 36
- K**
- keyswitch
 - control with web interface, 34
 - specify host behavior, 33
- M**
- MAC address, display host, 12
- N**
- network access
 - enable or disable, 30
 - network configuration properties, to commit, 43
 - network configuration property, commit a change, 42
- O**
- OpenBoot
 - display version, 12
 - OpenBoot version, displaying with CLI, 12
 - with web interface, 16
- P**
- Physical Presence switch, 2
 - platform, showing, 18
 - POST
 - display version, 12
 - POST version, displaying with web interface, 16
 - property
 - backup data, 26
 - system user, 18
- R**
- remote control settings
 - changing with the CLI, 6
 - changing with the web interface, 10
- S**
- SCC, ILOM information stored on, 31
 - serial port configuration property, commit a change, 43
 - server, platform information, 18

/SP/serial/external commitpending
property, 43
switch, Physical Presence, 2
system identification, change, 22

T

timer, watchdog, 13

U

user database, backup, 26

W

watchdog timer, 13

