



Sun™ x4 PCIe Quad Gigabit Ethernet ExpressModule Getting Started Guide

Where to Find Sun x4 PCIe Quad Gigabit Ethernet ExpressModule Documentation

For installation instructions and technical details of the Sun x4 PCIe Quad Gigabit Ethernet ExpressModule, refer to the *Sun x4 PCIe Quad Gigabit Ethernet ExpressModule User's Guide* (820-3084). You can find this manual, as well as the entire Sun x4 PCIe Quad Gigabit Ethernet ExpressModule manual set at:

<http://docs.sun.com/app/docs/x4pcie-dq-gbe-em/>

Safety Considerations

For general safety information, refer to *Important Safety Information for Sun Hardware Systems* (816-7190), which shipped with the adapter. For additional platform-specific safety information, refer to your platform's Safety and Compliance Manual, which you can find at:

<http://www.sun.com/documentation>

Contacting Sun Technical Support

If you have technical questions about this product that are not answered in this document, go to:

<http://www.sun.com/service/contacting>

When you call Sun Services, be sure to indicate that the adapter was purchased separately and is not associated with a system. Have the adapter identification information ready when you call. The adapter part number, serial number, and revision level can be found on labels on the adapter. If possible, have the adapter in front of you when you contact Sun Services.

When Returning a Board to Sun Services

You *must* get Return Material Authorization (RMA) numbers from Sun Services or the World Wide Solution Center for each part you intend to return. Ensure that these RMA numbers are on the boxes containing the returned parts.

If Sun Services asks for a system serial number, be sure to indicate that the board was purchased separately and is not associated with a system. Sun Services will give you specific details on the return procedure for your geographic area.

Refer to the *Sun x4 PCIe Quad Gigabit Ethernet ExpressModule User's Guide* (820-3084) instructions.

Third-Party Web Sites

Sun is not responsible for the availability of third-party web sites mentioned in this document. Sun does not endorse and is not responsible or liable for any content, advertising, products, or other materials that are available on or through such sites or resources. Sun will not be responsible or liable for any actual or alleged damage or loss caused by or in connection with the use of or reliance on any such content, goods, or services that are available on or through such sites or resources.

Sun Welcomes Your Comments

Sun is interested in improving its documentation and welcomes your comments and suggestions. You can submit your comments by going to:

<http://www.sun.com/hwdocs/feedback>

Please include the title and part number of your document with your feedback:

Sun x4 PCIe Quad Gigabit Ethernet ExpressModule Getting Started Guide,
part number is 820-3086-11

Copyright 2008 Sun Microsystems, Inc. All rights reserved. Use is subject to license terms. Third-party software, including font technology, is copyrighted and licensed from Sun suppliers. Portions may be derived from Berkeley BSD systems, licensed from



Sun Microsystems, Inc.
www.sun.com

E22080-001



Part No. 820-3086-11, Rev. A
January 2008