



StorageTek™ Host Software Component (HSC)

MSP software

Reference Summary

Part Number: 316106201

Revision: A

Version: 6.2

**StorageTek™
Host Software Component
(MSP Implementation)**

Reference Summary

Release 6.2

Copyright 2007 Sun Microsystems, Inc., 4150 Network Circle, Santa Clara, California 95054, U.S.A. All rights reserved.

Sun Microsystems, Inc. has intellectual property rights relating to technology that is described in this document. In particular, and without limitation, these intellectual property rights may include one or more of the U.S. patents listed at <http://www.sun.com/patents> and one or more additional patents or pending patent applications in the U.S. and in other countries.

This document and the product to which it pertains are distributed under licenses restricting their use, copying, distribution, and decompilation. No part of the product or of this document may be reproduced in any form by any means without prior written authorization of Sun and its licensors, if any.

Third-party software, including font technology, is copyrighted and licensed from Sun suppliers.

Parts of the product may be derived from Berkeley BSD systems, licensed from the University of California. UNIX is a registered trademark in the U.S. and in other countries, exclusively licensed through X/Open Company, Ltd.

Sun, Sun Microsystems, the Sun logo, Java, AnswerBook2, docs.sun.com, and Solaris are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and in other countries.

All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. in the U.S. and in other countries. Products bearing SPARC trademarks are based upon an architecture developed by Sun Microsystems, Inc.

The OPEN LOOK and Sun™ Graphical User Interface was developed by Sun Microsystems, Inc. for its users and licensees. Sun acknowledges the pioneering efforts of Xerox in researching and developing the concept of visual or graphical user interfaces for the computer industry. Sun holds a non-exclusive license from Xerox to the Xerox Graphical User Interface, which license also covers Sun's licensees who implement OPEN LOOK GUIs and otherwise comply with Sun's written license agreements.

U.S. Government Rights—Commercial use. Government users are subject to the Sun Microsystems, Inc. standard license agreement and applicable provisions of the FAR and its supplements.

DOCUMENTATION IS PROVIDED "AS IS" AND ALL EXPRESS OR IMPLIED CONDITIONS, REPRESENTATIONS AND WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT, ARE DISCLAIMED, EXCEPT TO THE EXTENT THAT SUCH DISCLAIMERS ARE HELD TO BE LEGALLY INVALID.

Copyright 2007 Sun Microsystems, Inc., 4150 Network Circle, Santa Clara, Californie 95054, Etats-Unis. Tous droits réservés.

Sun Microsystems, Inc. a les droits de propriété intellectuels relatants à la technologie qui est décrit dans ce document. En particulier, et sans la limitation, ces droits de propriété intellectuels peuvent inclure un ou plus des brevets américains énumérés à <http://www.sun.com/patents> et un ou les brevets plus supplémentaires ou les applications de brevet en attente dans les Etats-Unis et dans les autres pays.

Ce produit ou document est protégé par un copyright et distribué avec des licences qui en restreignent l'utilisation, la copie, la distribution, et la décompilation. Aucune partie de ce produit ou document ne peut être reproduite sous aucune forme, par quelque moyen que ce soit, sans l'autorisation préalable et écrite de Sun et de ses bailleurs de licence, s'il y en a.

Le logiciel détenu par des tiers, et qui comprend la technologie relative aux polices de caractères, est protégé par un copyright et licencié par des fournisseurs de Sun.

Des parties de ce produit pourront être dérivées des systèmes Berkeley BSD licenciés par l'Université de Californie. UNIX est une marque déposée aux Etats-Unis et dans d'autres pays et licenciée exclusivement par X/Open Company, Ltd.

Sun, Sun Microsystems, le logo Sun, Java, AnswerBook2, docs.sun.com, et Solaris sont des marques de fabrique ou des marques déposées de Sun Microsystems, Inc. aux Etats-Unis et dans d'autres pays.

Toutes les marques SPARC sont utilisées sous licence et sont des marques de fabrique ou des marques déposées de SPARC International, Inc. aux Etats-Unis et dans d'autres pays. Les produits portant les marques SPARC sont basés sur une architecture développée par Sun Microsystems, Inc.

L'interface d'utilisation graphique OPEN LOOK et Sun™ a été développée par Sun Microsystems, Inc. pour ses utilisateurs et licenciés. Sun reconnaît les efforts de pionniers de Xerox pour la recherche et le développement du concept des interfaces d'utilisation visuelle ou graphique pour l'industrie de l'informatique. Sun détient une licence non exclusive de Xerox sur l'interface d'utilisation graphique Xerox, cette licence couvrant également les licenciées de Sun qui mettent en place l'interface d'utilisation graphique OPEN LOOK et qui en outre se conforment aux licences écrites de Sun.

LA DOCUMENTATION EST FOURNIE "EN L'ÉTAT" ET TOUTES AUTRES CONDITIONS, DECLARATIONS ET GARANTIES EXPRESSES OU TACITES SONT FORMELLEMENT EXCLUES, DANS LA MESURE AUTORISEE PAR LA LOI APPLICABLE, Y COMPRIS NOTAMMENT TOUTE GARANTIE IMPLICITE RELATIVE A LA QUALITE MARCHANDE, A L'APTITUDE A UNE UTILISATION PARTICULIERE OU A L'ABSENCE DE CONTREFAÇON.

We welcome your feedback. Please contact the Sun Learning Services Feedback System at:

SLSFS@Sun.com

or

Sun Learning Services
Sun Microsystems Inc.
One StorageTek Drive
Louisville, CO 80028-3256
USA

Document Effectivity

EC Number	Date	Doc Kit Number	Type	Effectivity
132886	September, 2007	---	First Edition	This document applies to the Host Software Component for MSP, version 6.2.

Contents

About this Summary	ix
Other HSC Books to Help You	ix
Syntax Conventions	1
Syntax Flow Diagrams	1
Specifying Commands	1
Variables	1
Delimiters	1
Flow Lines	2
Single Required Choice	2
Single Optional Choice	3
Defaults	3
Repeat Symbol	3
Syntax Continuation (Fragments)	4
Library Identification	5
How to Specify a CAPid	6
CAPid Formats	6
Ranges and Lists	8
Control Statement Syntax Conventions	11
LIBGEN Macro Syntax	13
SLIACS macro	13
SLIALIST macro	13
SLIDLIST macro	13
SLIDRIVS macro	14
SLIENDGN macro	14
SLILIBRY macro	14
SLILSM macro	15
SLIRCVRY macro	15
SLISTATN macro	15
Control Statement Syntax	17
Control Data Set Definition (CDSDEF) control statement	17
EXECParm control statement	17
Journal Definition (JRNDEF) control statement	18
License Key Definition (LKEYDEF) command and control statement	18
License Key Information (LKEYINFO) control statement	18

LMUPATH control statement	18
LMUPDEF command and control statement	19
OPTion control statement	19
Reconfiguration Definition (RECDEF) control statement	19
Scratch Subpool Definition (SCRPDEF) command and control statement	19
Scratch Subpool (SCRPOol) control statement	20
Volume Attribute (VOLATTR) control statement	20
Volume Attribute Definition (VOLDEF) command and control statement	20
Utility Syntax	21
ACTivities Report utility	21
AUDIt utility	22
BACKup utility	22
Database Decompile (LIBGEN) utility	22
Directory Rebuild (DIRBLD) utility	22
EJECT utility	23
INITialize Cartridge utility	23
Journal OFFLoad utility	24
MERGEcds utility	24
MOVE utility	24
Reconfiguration utility	24
REPLace utility	25
RESTore utility	25
SCRAtch utility	25
Scratch Conversion utility	25
Scratch Redistribution (SCREdist) utility	26
SET utility	27
UNSCRatch utility	28
UNSElect utility	28
Volume Report (VOLRpt) utility	29
HSC Operator Command Syntax	31
Allocation (ALLOC) command and control statement	31
CAP Preference (CAPPref) command and control statement	31
CDs Enable/Disable command	32
CLean command	32
Communications Path (COMMPath) command and control statement	33
DISMOUNT command	33
Display command	34
DRAIn CAP command	39
EJECT command	39
ENter command	40
Journal command	40
MODify command	40
MONITOR command	40
Mount command	41

Mount/Dismount Options (MNTD) command and control statement	41
MOVE command	42
OPTION command and control statement	43
RECOVER Host command	43
RELEASE CAP command	44
SCRATCH command	44
SENDER command	44
SRVLEV command	44
Stop Monitoring (STOPMN) command	44
SWITCH command	45
TRACE command	45
TRACELKP command	45
UNSCRATCH command	45
User Exit (UEXIT) command and control statement	46
VARY Station command	46
VIEW command	47
WARN command	48
HSC Diagnostic Command Syntax	49
LIST command	49
TRACE command	49

About this Summary

This summary contains frequently used syntax information associated with Release 6.2.0 of the Host Software Component (MSP Implementation).

Use the material presented here as a memory aid. We assume that you are an experienced user who has worked with the Host Software Component at the programmer level. With this in mind, explanatory text has been kept to a minimum.

The following information appears in this reference summary:

- syntax conventions
- LIBGEN macro syntax
- control statement syntax
- utility syntax
- operator command syntax
- diagnostic command syntax.

Other HSC Books to Help You

This summary supplements existing HSC 6.2.0 documentation. For more detailed information about a topic, refer to the following manuals:

- *HSC/MSP Configuration Guide*
- *HSC/MSP System Programmer's Guide*
- *HSC/MSP Operator's Guide*.

Syntax Conventions

Syntax Flow Diagrams

Syntax is illustrated using flow diagrams. These can include the following elements:

- Syntax – the diagram itself.
- Items – individual elements inside the diagram. Items can be keywords, variables, delimiters, operators, fragment references, and separators.
- Groups – a collection of items or other groups.

The following sections describe syntax flow diagram features and include some generic examples.

Specifying Commands

Commands are composed of command names, keyword parameters, and positional parameters. Command names initiate command execution, keyword parameters are operands that contain keywords and their related values, and positional parameters are operands that are identified by their position in the command string rather than by keywords.

- Keyword parameters can be specified in any order. The HSC accepts (tolerates) multiple occurrences of a keyword. The value assigned to a keyword reflects the last occurrence of a keyword within a command.
- Positional parameters must be entered in the order shown in the syntax diagram.
- Uppercase letters indicate the minimum abbreviation for the command name, keyword, or positional parameter.

Variables


Variables are italicized.

Delimiters


If a comma(,), a semicolon(;), or other delimiter is shown with an element of the syntax diagram, it must be entered as part of the statement or command.

Flow Lines

Syntax diagrams consist of horizontal and vertical lines and the text of a command, control statement, macro, or utility.


 


or

 


Diagrams are read left to right and top to bottom. Arrows show flow and direction.

- a statement begins with ►►
- a statement ends with ►◄
- diagrams continuing to the next line begin with ►
- fragments begin and end with |

  

Single Required Choice

 Branch lines, without repeat arrows, indicate that a **single** choice must be made. If one of the items from which a choice is being made is on the base line of the diagram, a single choice is required.




Single Optional Choice

If the first item is on the line below the base line, a single choice of items in the stack is optional.



Defaults

Default values and parameters appear above the syntax diagram line. In the following example, if a value is not specified with the command, `Default Value` is used by the HSC.

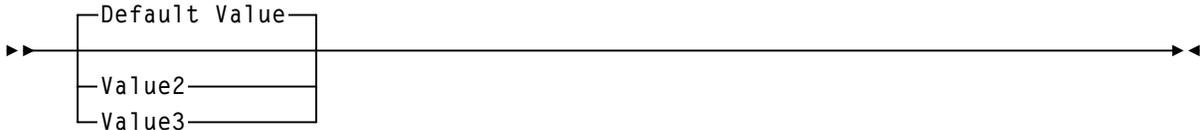

Some keyword parameters provide a choice of values in a stack. When the stack contains a default value, the keyword and the value choices are placed below the baseline to indicate that they are optional, and the default value appears above the keyword line. In the following example, if the keyword is not specified with the command, `Keyword(Default Value)` is used by the HSC.



Repeat Symbol

A repeat symbol indicates that more than one choice can be made or that a single choice can be made more than once. The repeat symbol shown in this example indicates that a comma is required as the repeat separator.



Syntax Continuation (Fragments)

Fragment references direct you to parts (fragments) of the syntax that contain more detail than can be shown in the main syntax diagram.

▶ COMMAND/UTILITY NAME | Fragment Reference |

Fragment:

Item1(*variable1*, *variable3*)
 └───┬───┘ └───┬───┘
 variable2 *variable4*

Item2(*variable5*, *variable7*)
 └───┬───┘ └───┬───┘
 variable6 *variable8*

Library Identification

Each ACS, LSM, and CAP is assigned a unique identification number during LIBGEN. Use this number in HSC commands and utilities when identifying a specific ACSid, LSMid, or CAPid.

- ACSid (*acs-id*) is a hexadecimal value from 00 through FF that identifies the LMU.

An *acs-id* is the result of defining the SLIALIST macro during a LIBGEN. See “LIBGEN Macros” in the *HSC Configuration Guide* for information about the SLIALIST macro. The first ACS listed in this macro acquires a hexadecimal identifier of 00, the second ACS listed acquires a hexadecimal identifier of 01, and so forth until all ACSs are identified.

- An LSM number (*ll*) is a hexadecimal value from 00 through 17. It differentiates an LSM from every other LSM connected to the same LMU.

An LSM number is the result of defining the SLIACS macro LSM, LSM2, LSM3, and LSM4 parameters. See the *HSC Configuration Guide* for information about the SLIACS macro. The first LSM listed for an ACS acquires a hexadecimal number of 00, the second LSM listed for an ACS acquires a hexadecimal number of 01, and so forth.

- An LSMid (*lsm-id*) is made up of the ACSid and the LSM number separated by a colon (:). It differentiates an LSM from every other LSM in a library.
- A CAP number is a hexadecimal value from 00 to 02. The CAP number identifies a specific CAP in an LSM that has more than one CAP.
- A CAPid (*cap-id*) is a hexadecimal value made up of the LSMid and the CAP number separated by a colon. Refer to “How to Specify a CAPid” on page 6 for more information.

Some HSC commands and utilities require, or optionally allow, the user to specify a host identifier or a VOLSER.

- The *host-id* for a given host is the identifier specified in the HOSTID parameter of the SLILIBRY macro in the LIBGEN. The HOSTID parameter is the SMF system identifier for **both** JES2 and JES3. Valid characters for a HOSTID are A-Z, 0-9, #, \$, and @.
- A VOLSER (*volser*) identifies a volume serial number consisting of one to six characters. Valid characters are A-Z, 0-9, # (crosshatch), \$, ¥ (yen character), and optional trailing blanks. Leading blanks are not allowed.

How to Specify a CAPid

A CAPid specifies a particular CAP in the library. Each CAP is identified by the LSMid of the LSM that the CAP is attached to and a CAP number to distinguish it from other CAPs in that LSM.

CAP configurations differ based on the LSM type. The following configurations are possible:

LSM (Model 4410) and PowderHorn LSM (Model 9310)

can be configured with either the standard 21-cell CAP or an enhanced CAP. An enhanced CAP contains two 40-cell magazine-style CAPs and a one-cell priority CAP (PCAP). The 40-cell CAPs function independently.

WolfCreek LSM (Models 9360-050, 9360-075, and 9360-100)

configured with a WolfCreek CAP which contains a 20-cell magazine-style CAP and a PCAP. An optional 30-cell, magazine-style CAP, called a WolfCreek optional CAP, may be added to the WolfCreek CAP.

TimberWolf LSM (Model 9740)

configured with either a 14-cell permanent rack or a 10-cell removable magazine.

StreamLine Library (Model 8500)

This library is configured with 3, 13-cell removable magazines. An optional 39-cell CAP can be added.

CAPid Formats

There are two formats that can be used to specify a CAPid:

- *AA:LL*, where *AA* is the ACSid and *LL* is the LSM number. This format is referred to as the *lsm-id*.
- *AA:LL:CC*, where *AA:LL* is the LSMid and *:CC* is the CAP number. This format is referred to as the *cap-id*.



Caution: Do not use a colon as the MVS command delimiter because the system will process the colon in the new CAPid format as the end of the command. All information following the colon in an HSC command will not be processed.

The appropriate format to use is determined by the CAP hardware and the command being specified.

- The *AA:LL* format can be specified in the following situations:
 - to specify a standard CAP
 - to allow the HSC to select a CAP based on CAP preference.

- The *AA:LL:CC* format can be specified for any CAP hardware in any command that accepts a CAPid. This is the preferred format. Valid CAP numbers are:

00 indicates one of the following:

- a 21-cell standard CAP
- the right-hand 40-cell CAP of an enhanced CAP
- the 20-cell CAP of a WolfCreek CAP
- a 14-cell or 10-cell removable magazine 9740 TimberWolf CAP
- the 3, 13-cell removable magazines for an SL8500 CAP.

01 indicates one of the following:

- the left-hand 40-cell CAP of an enhanced CAP
- the 30-cell CAP of a WolfCreek optional CAP
- the 3, 13-cell removable magazines for an optional SL8500 CAP.

02 indicates the PCAP in either an enhanced CAP or a WolfCreek CAP.

Ranges and Lists

HSC commands and utilities often allow the user to specify ranges and lists of elements.

1. An inclusive range is indicated by a pair of elements of the same length and data type, joined by a dash. The first element **must** be strictly less than the second element.
 - A hexadecimal range consists of a pair of hexadecimal numbers (for example, 0A2-0AD, or 000-0FC).
 - A decimal range consists of a pair of decimal numbers (for example, 1-9, or 010-094). Leading zeros are not required.
 - A numeric VOLSER range (*vol-range*) consists of a pair of VOLSER elements containing a decimal numeric portion of 1 to 6 digits (for example, ABC012-ABC025, or X123CB-X277CB). The decimal portion is referred to as an incremental range. The following additional restrictions apply:
 - The character positions of the incremental portion of both range elements must match.
 - The non-incremental characters of the first element must be identical to those of the second element.
 - You cannot increment two portions of a range element. If 111AAA is the first element, you cannot specify 112AAB for the second element.
 - If a VOLSER range contains more than one decimal portion, any portion is valid as the incremental range. For example:

A00B00 the largest range that can be specified is A00B00 through A99B99.

A0B0CC the largest range that can be specified is A0B0CC through A9B9CC.

000XXX the largest range that can be specified is 000XXX through 999XXX.



Note: A VOLSER range for most operator commands is limited to 100 entries. If a larger range is entered, only the first 100 VOLSERs in the range are acted on. If HSC utilities are used, the entire range is processed.

- An alphabetic VOLSER range (*vol-range*) consists of a pair of VOLSER elements containing an incremental portion of 1 to 6 characters (for example, 000AAA-000ZZZ, or 9AAA55-9ZZZ55). This portion is referred to as an incremental range. The following additional restrictions apply:
 - The character positions of the incremental portion of both range elements must match.
 - The non-incremental characters of the first element must be identical to those of the second element.

- You cannot increment two portions of a range element. If 111AAA is the first element, you cannot specify 112AAB for the second element.
- The alphabetic portion of the VOLSER range is defined as being from character A to Z. To increment multi-character sequences, each character increments to Z. For instance, ACZ is part of the AAA-AMM range. Examples are:

<u>A00A0-A99A0</u>	increments VOLSERs A00A0 through A09A0, then A10A0 through A99A0.
<u>9AA9A-9ZZ9A</u>	increments VOLSERs 9AA9A through 9AZ9A, then 9BA9A through 9ZZ9A.
<u>111AAA-111ZZZ</u>	increments VOLSERs 111AAA through 111AAZ, then 111ABA through 111ZZZ.
<u>999AM8-999CM8</u>	increments VOLSERs 999AM8 through 999AZ8, then 999BA8 through 999CM8
<u>A3BZZ9- A3CDE9</u>	increments VOLSERs A3BZZ9 through A3CAA9, then A3CAB9 through A3CDE9
<u>AAAAAA- AAACCC</u>	increments VOLSERs AAAAAA through AAAAAZ, then AAAABA through AAACCC
<u>CCCNNN- DDNNN</u>	increments VOLSERs CCCNNN through CCCNNZ, then CCCNOA through DDDNNN*

* **Caution:** This is a very large range.

The number of volumes in an alphabetic VOLSER range depends on the number of elements in the incrementing portion of the VOLSER range. For an A to Z range in each character position, the number of volumes can be calculated by 26 to the power of the number of positions that are being incremented.

A-Z	26^1	26
AA-ZZ	26^2	676
AAA-ZZZ	26^3	17,576
AAAA-ZZZZ	26^4	456,976
AAAAA-ZZZZZ	26^5	11,881,376
AAAAAA-ZZZZZZ	26^6	308,915,776



Note: For most operator commands, a VOLSER range is limited to 100 entries. If a large range is entered, only the first 100 VOLSERS are acted upon. If HSC utilities are used, the entire range is processed.

2. A list consists of one or more elements. If more than one element is specified, the elements **must** be separated by a comma or a blank, and the entire list enclosed in parentheses.
 - For some HSC operator commands, an element may consist of a single item or a range. Refer to the individual command explanations for valid list entries.
 - In general, HSC utilities **do not allow** ranges to be specified in a list. The exception to this is a VOLSER list (*vol-list*) which does allow ranges to be specified.

For VOLATTR control statements, you can use wildcard characters (% , ? , or *) to identify a list of VOLSERS.

Control Statement Syntax Conventions

The control statement for each utility program consists of a command (indicating the utility function) followed by parameters, as applicable, in 80-character card-image records. The standard syntax conventions for control statements are as follows:

- The only valid control statement information area is from column 1 to column 72. Columns 73-80 are ignored.
- Parameters are separated by one or more blanks or a comma.
- A value is associated with a parameter by an equal sign (=) or by enclosing the value in parentheses, and concatenating it immediately after the parameter.
- Case (upper or lower) is ignored in actual control statements.
- Control statements may be interspersed with comments designated by an asterisk (*) in column one.

For definition data sets (VOLATTRs, UNITATTRs and TAPEREQs) comments **must** be in the new format (/...*/). Asterisk (*) comments are not allowed. A /*...*/ comment in the first line is **not** required for definition data sets.

- A control statement is terminated if the statement is not continued. Comments cannot be nested, and mixing the two comment styles (* and /*) is not allowed.
- The 80-character card-image records use conventional continuation rules.
 - A space and a dash (-) following a parameter or parameter value indicates that a blank is to be inserted between the last nonblank character of this line and the first nonblank character of the next nonblank record.
 - A plus sign (+) specifies that the continued control information is to be concatenated directly after the character preceding the plus sign. The continued data starts at column two of the next nonblank record.



Note: You can use a continuation only after a new keyword or after the natural end of a value. Some examples follow.

The following examples illustrate continuations used correctly:

```
SCRPOOL NAME=STD36,RANGE+  
(AAA000-AAA999,ZZZ000-ZZZ999)
```

```
SCRPOOL NAME=STD36,RANGE(AAA000-AAA999,-  
ZZZ000-ZZZ999)
```

The following example illustrates a continuation used *incorrectly*:


```
SCRPOOL NAME=STD36,RANGE(AAA000-AAA999,ZZZ+  
000-ZZZ999)
```

- The maximum length of a control statement is 32,767 characters.
- The maximum length of a command (used as a command or in PARMLIB) is 126 characters.


LIBGEN Macro Syntax

This section contains the syntax for LIBGEN macros presented in alphabetical order. For complete descriptions of the macros and the required order for specifying them, see the *HSC/MSP Configuration Guide*.


SLIACS macro

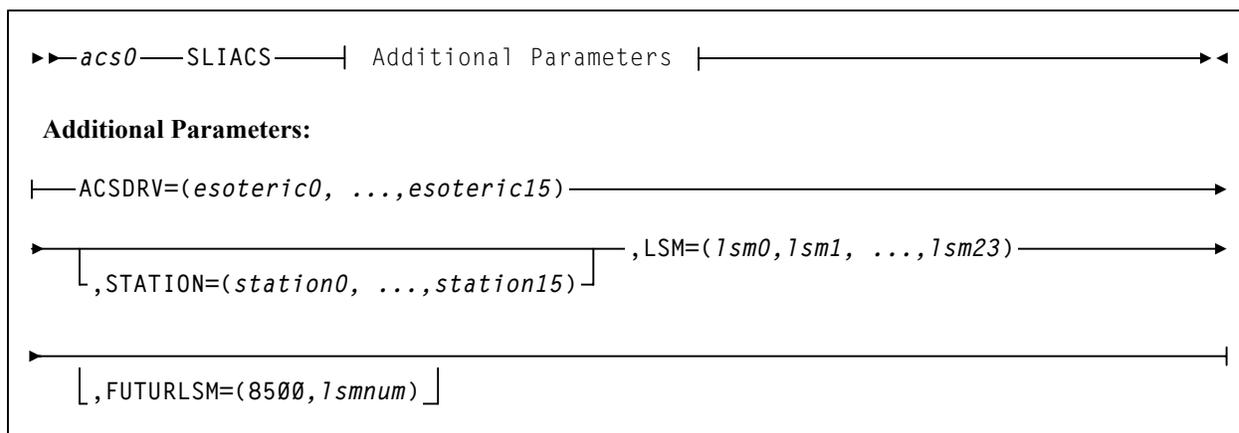

SLIALIST macro

 

SLIDLIST macro

 

SLIDRIVS macro

▶▶ *drives0* SLIDRIVS ADDRESS=(*addr0,addr1...*)◀◀

SLIENDGN macro

▶▶ SLIENDGN◀◀

SLILIBRY macro

▶▶ SLILIBRY — HOSTID=(*host-id0,host-id1,...,host-id15*) — ,ACSLIST=*acslst* —▶▶

Optional Parameters


Optional Parameters:

,CLNPRFX=^{CLN}*prefix* ,SMF=²⁵⁵*libtype*


,MAJNAME=^{STKALSQN}*qname* ,COMPRFX=[.]*commandchar* ,SCRLABL=^{SL}^{AL}^{NL}^{NSL}

,EJCTPAS=*password* ,DRVHOST=(*host-id*)


SLILSM macro

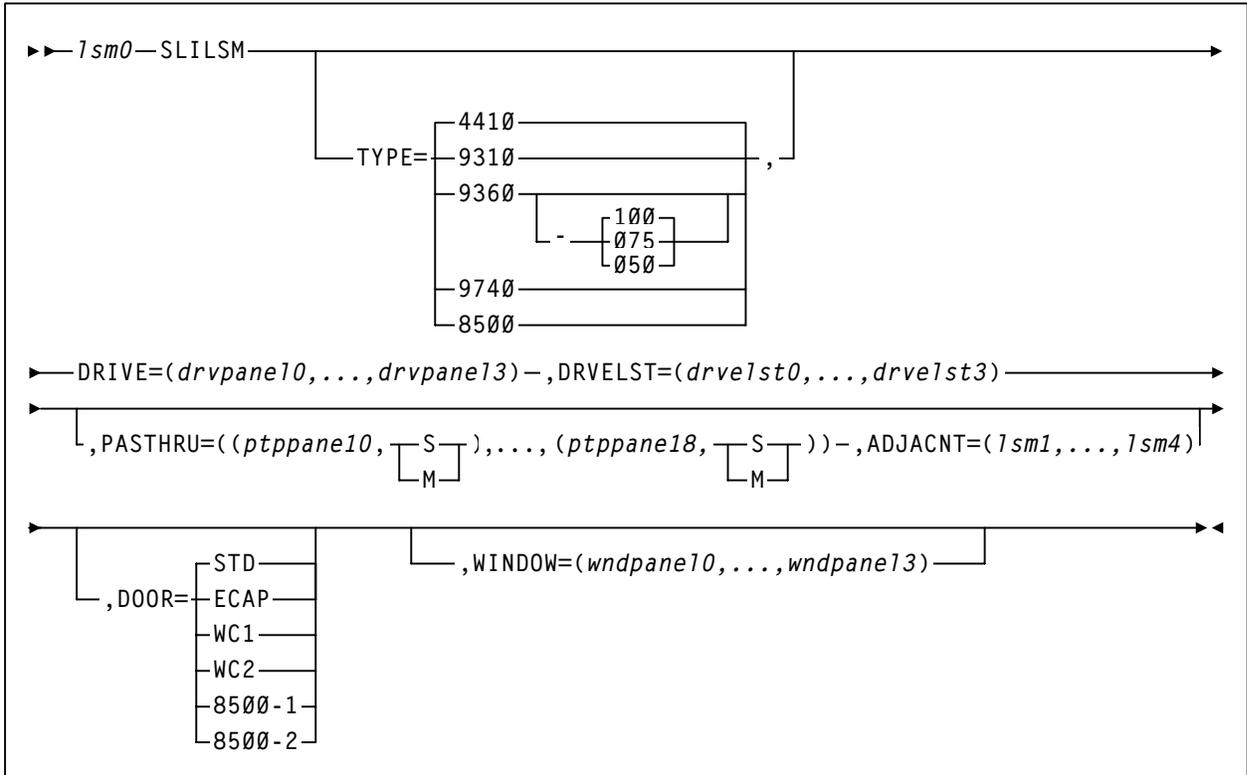

SLIRCVRY macro

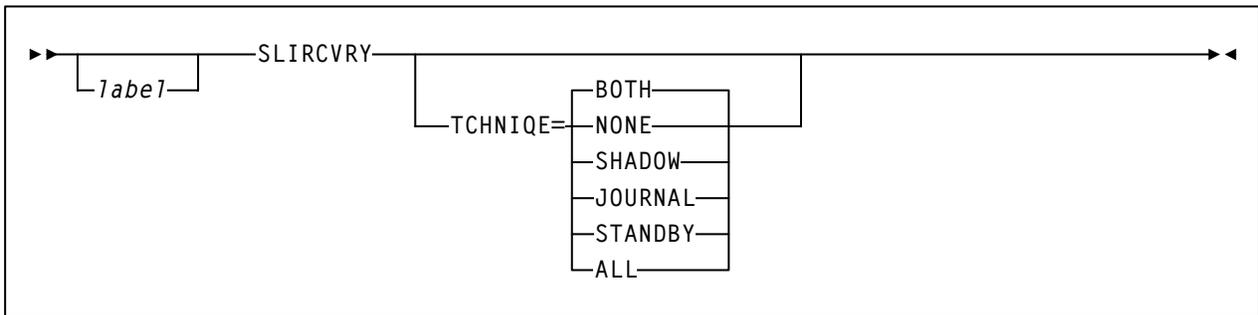


SLISTATN macro

 


Control Statement Syntax

This section contains the syntax for control statements. For complete descriptions of the control statements, see the *HSC/MSP System Programmer's Guide*.


Control Data Set Definition (CDSDEF) control statement

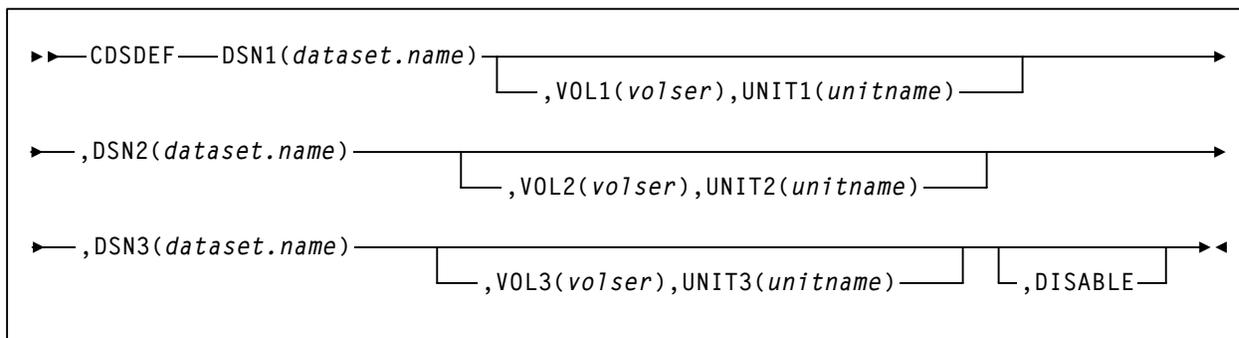


EXECParm control statement

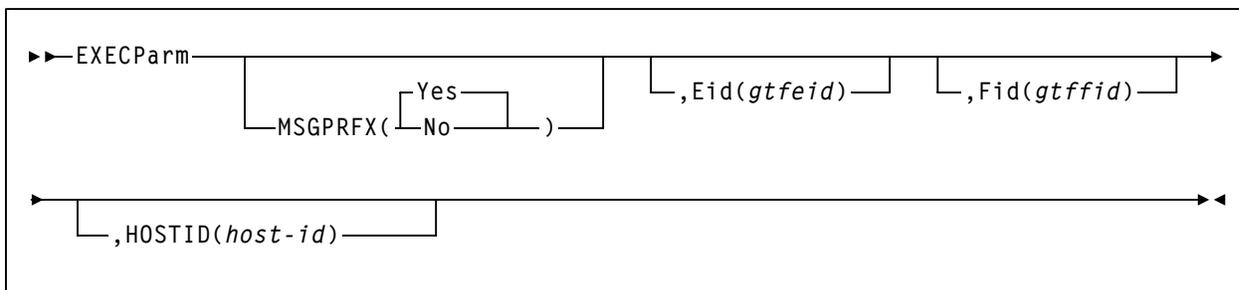


Journal Definition (JRNDEF) control statement

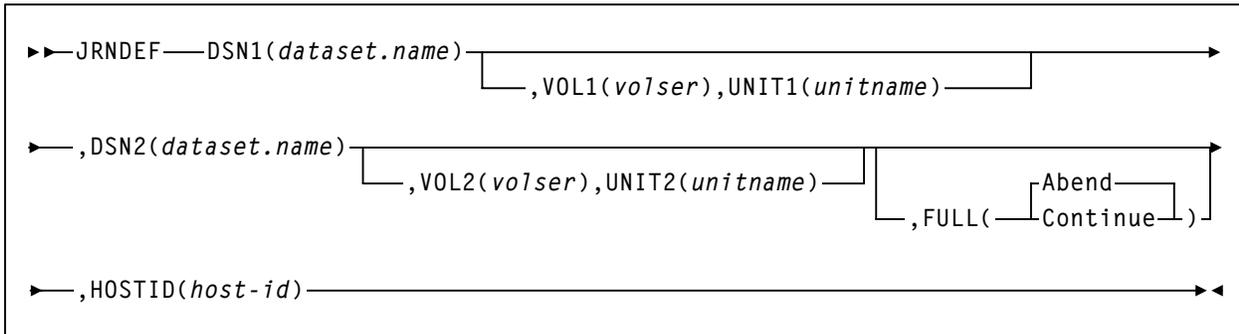


License Key Definition (LKEYDEF) command and control statement

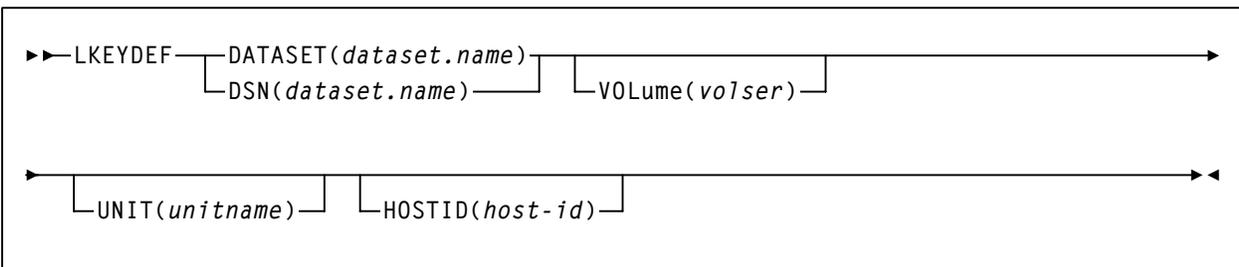


License Key Information (LKEYINFO) control statement

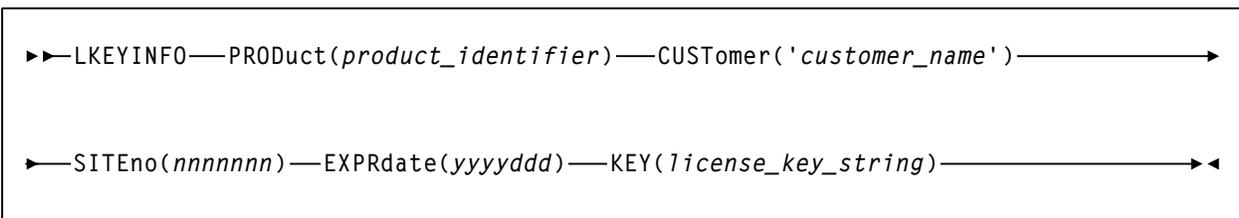


LMUPATH control statement

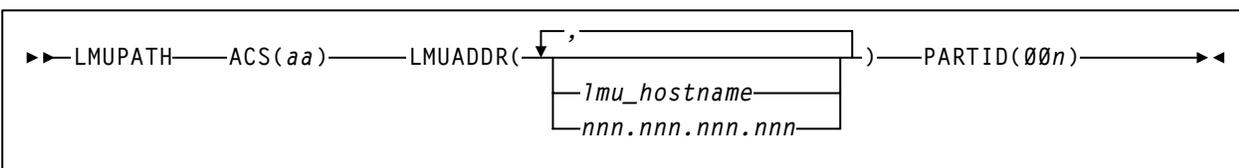


LMUPDEF command and control statement

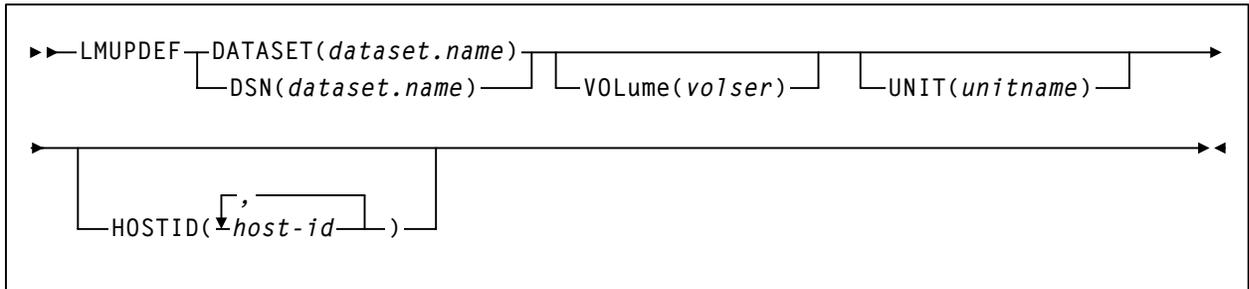


OPTion control statement

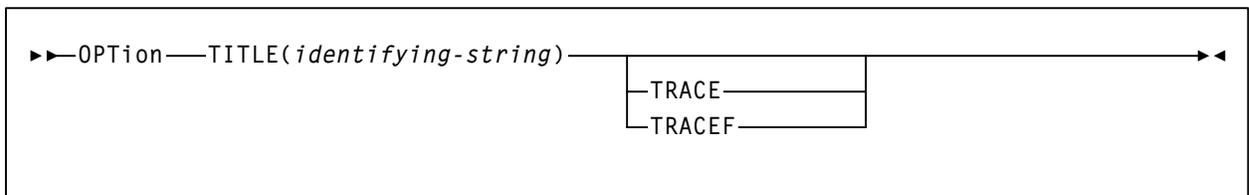

Reconfiguration Definition (RECDEF) control statement

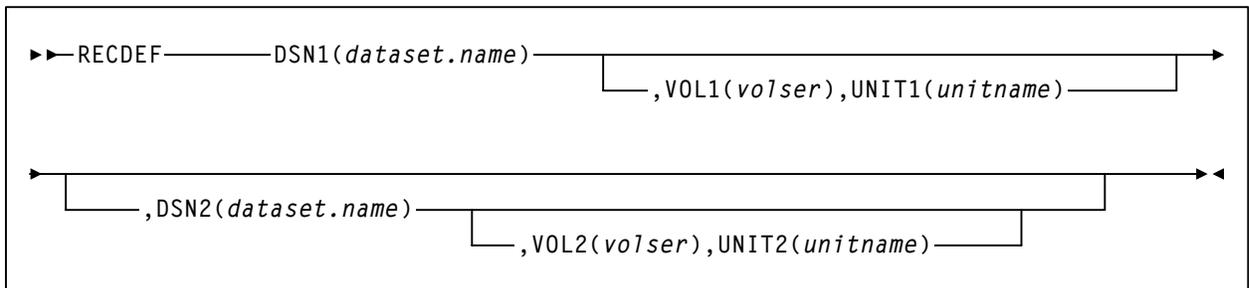


Scratch Subpool Definition (SCRPDEF) command and control statement

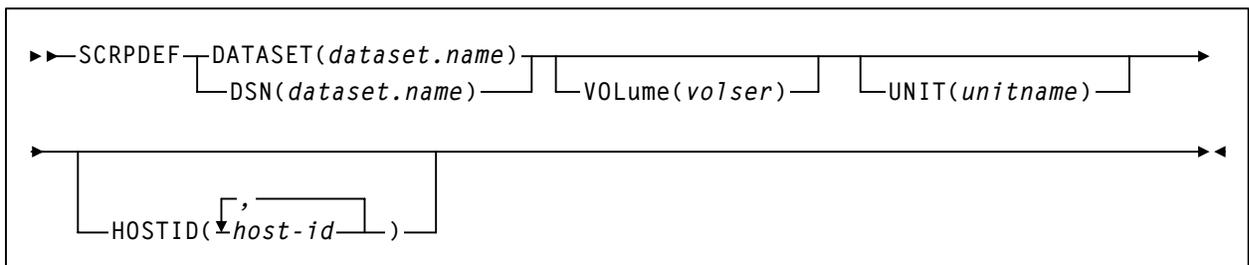


Utility Syntax

This section contains the syntax for library utilities. For complete descriptions of the utilities, see the *HSC/MSP System Programmer's Guide*.


ACTivities Report utility

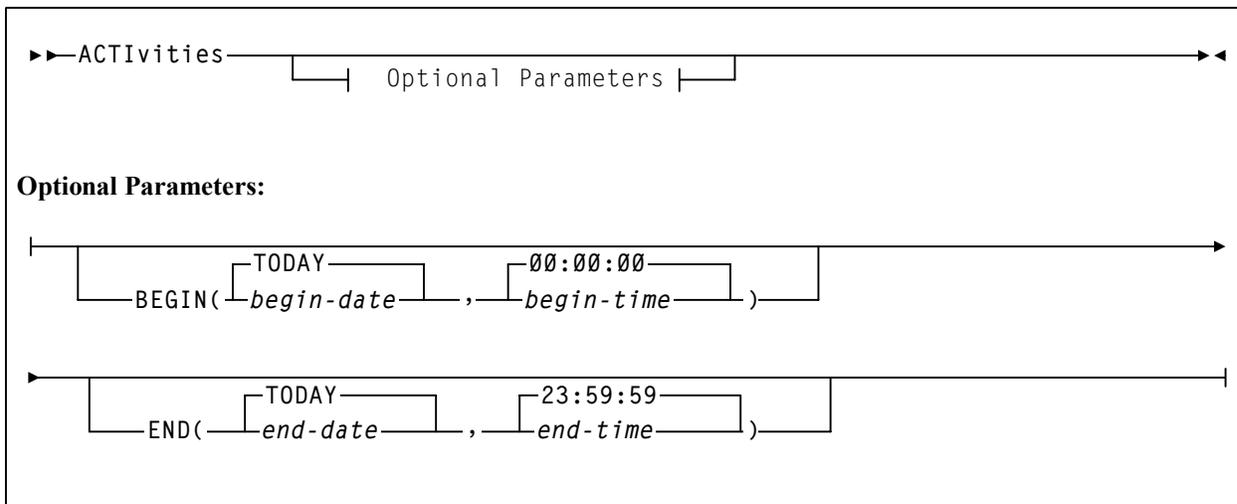


AUDIt utility

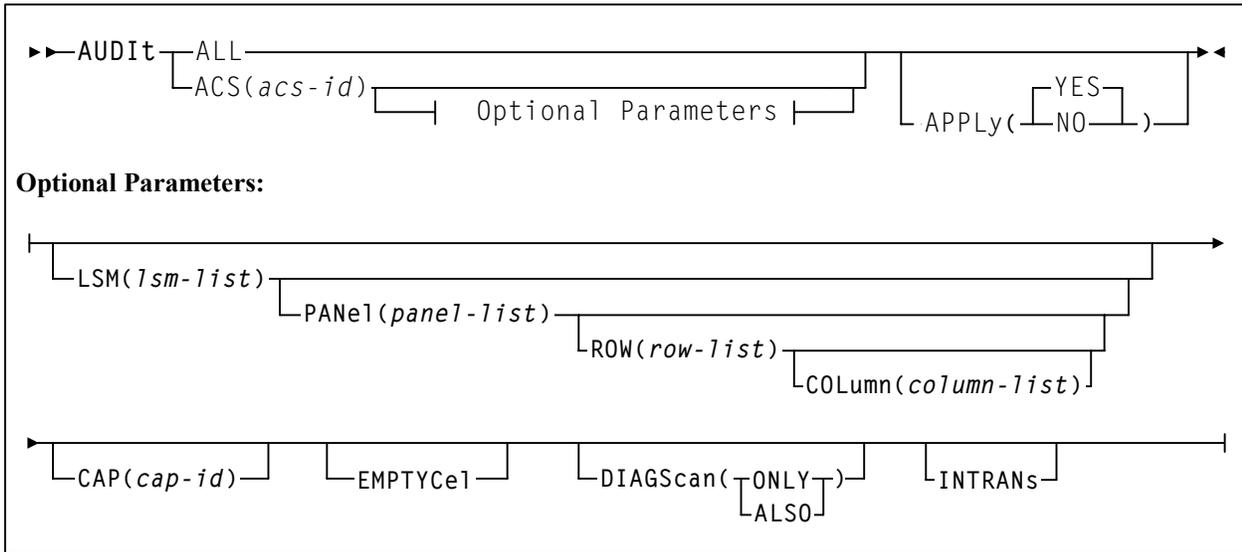


BACKup utility

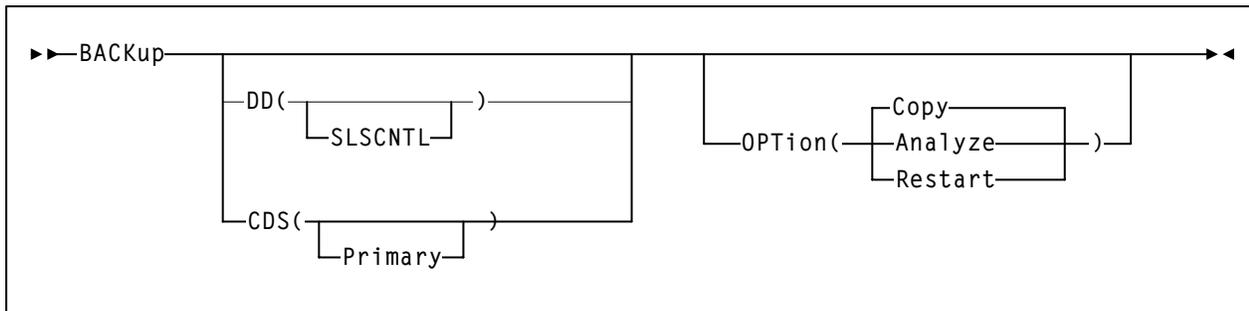


Database Decompile (LIBGEN) utility

 


Directory Rebuild (DIRBLD) utility

 

EJECT utility

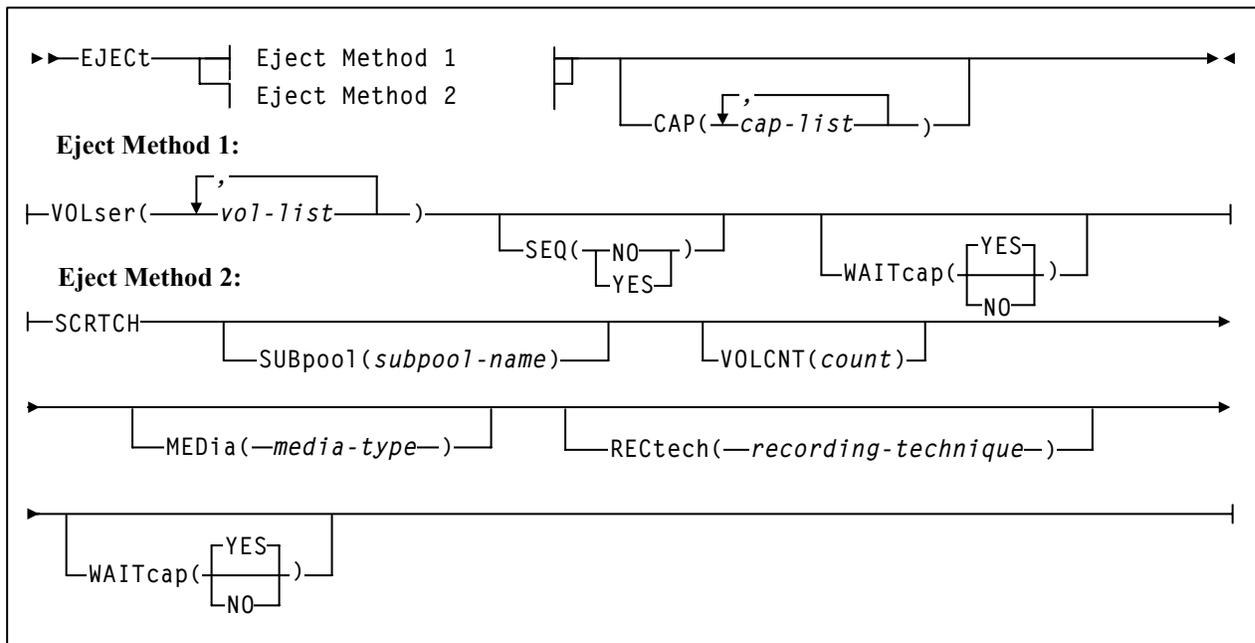


INITialize Cartridge utility

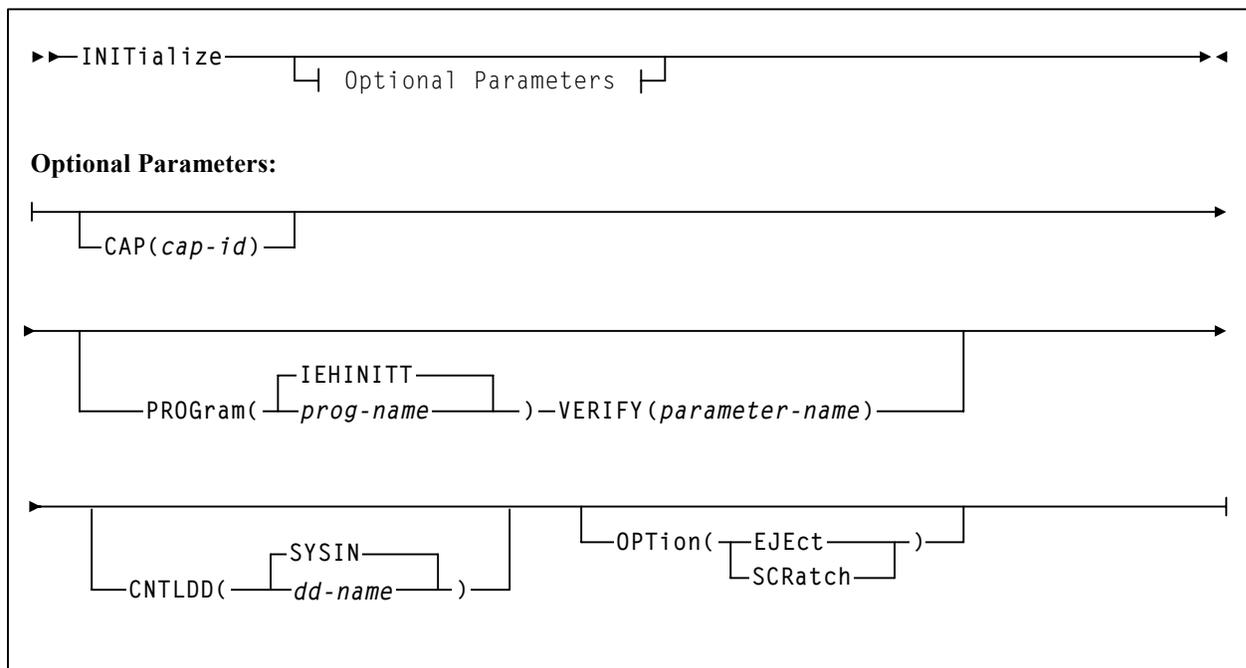


Journal OFFLoad utility




MERGEcds utility

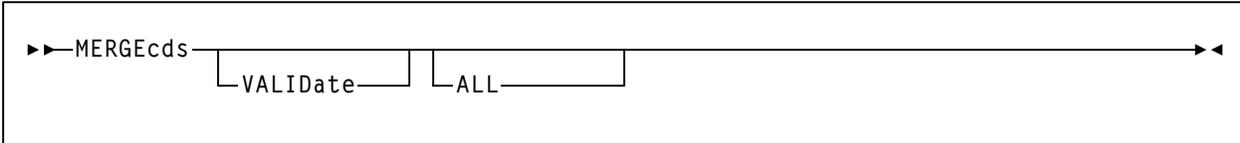


MOVE utility

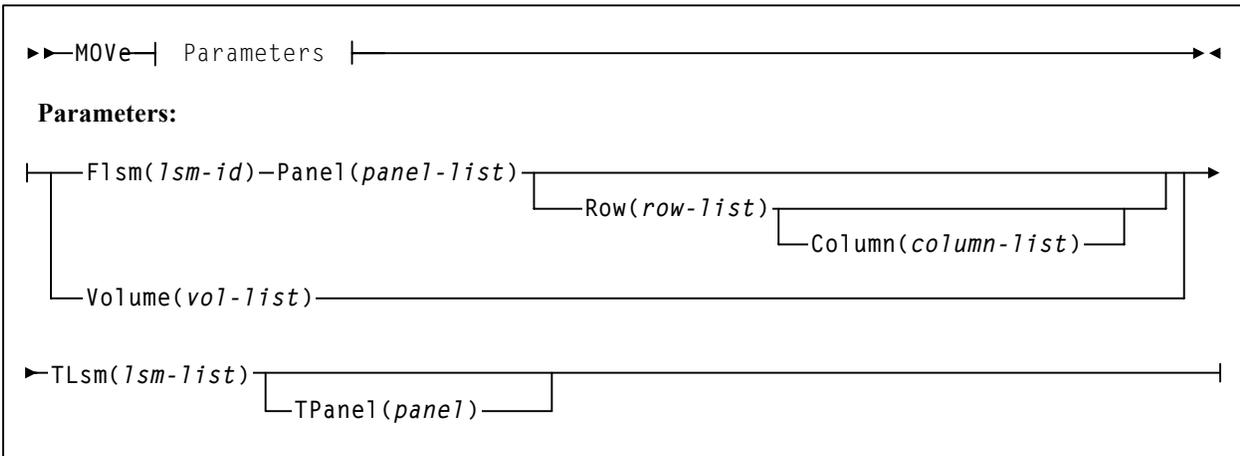


Reconfiguration utility

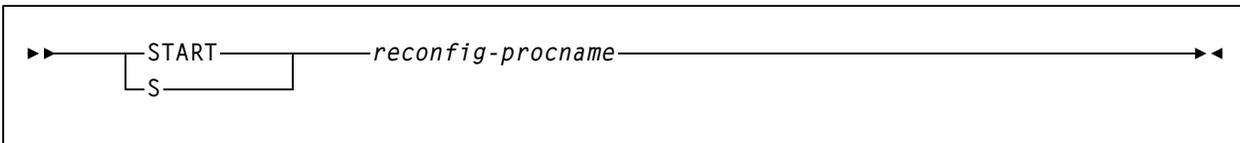


REPLace utility

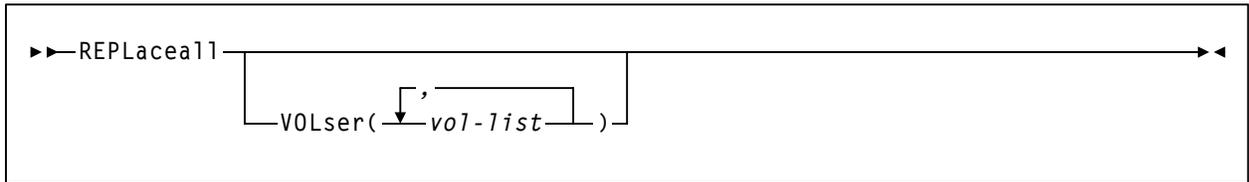


RESTore utility

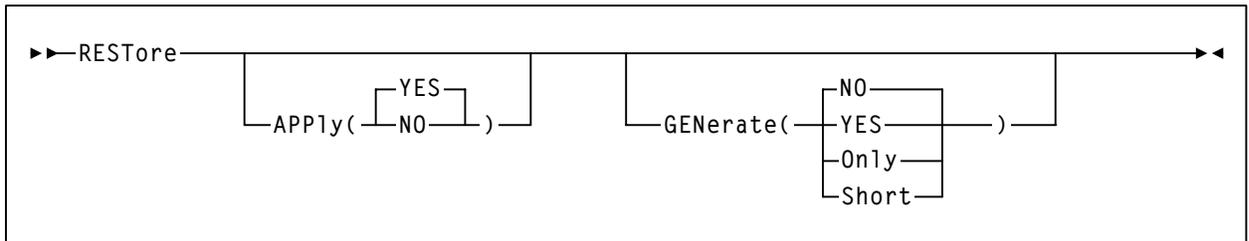


SCRATCH utility

 


Scratch Conversion utility

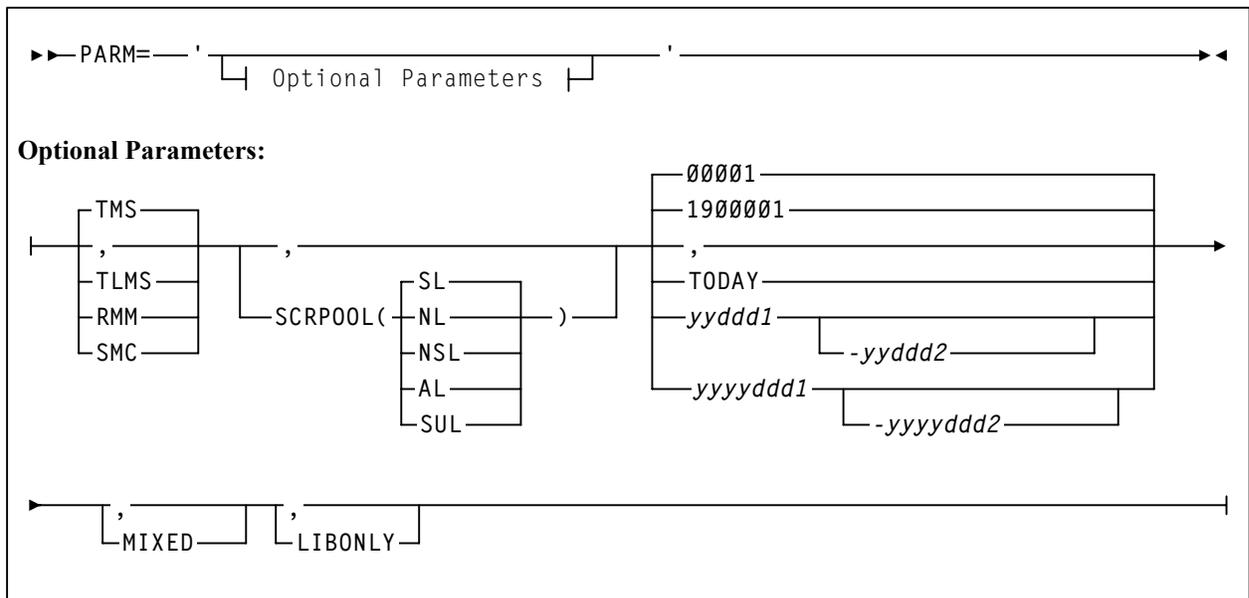

Scratch Redistribution (SCREdist) utility

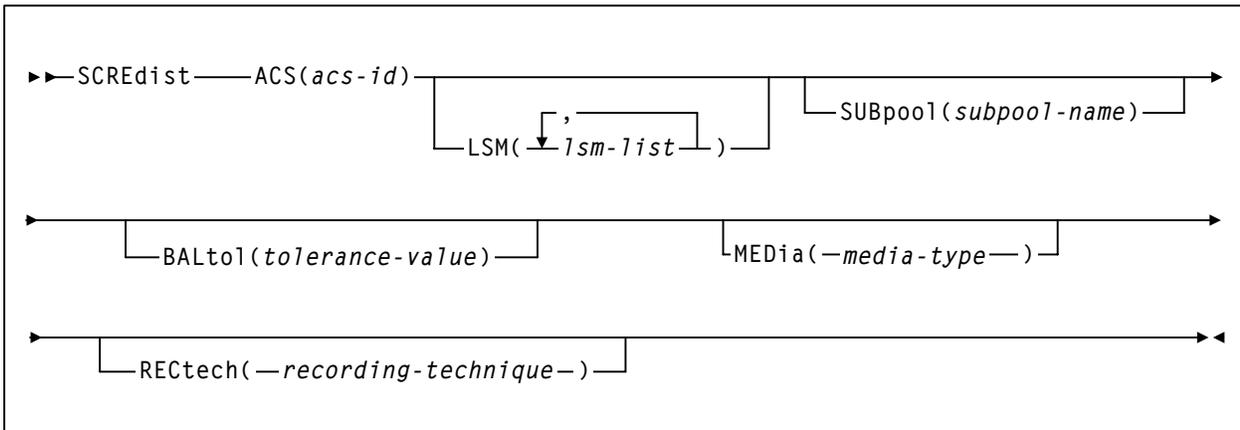


SET utility

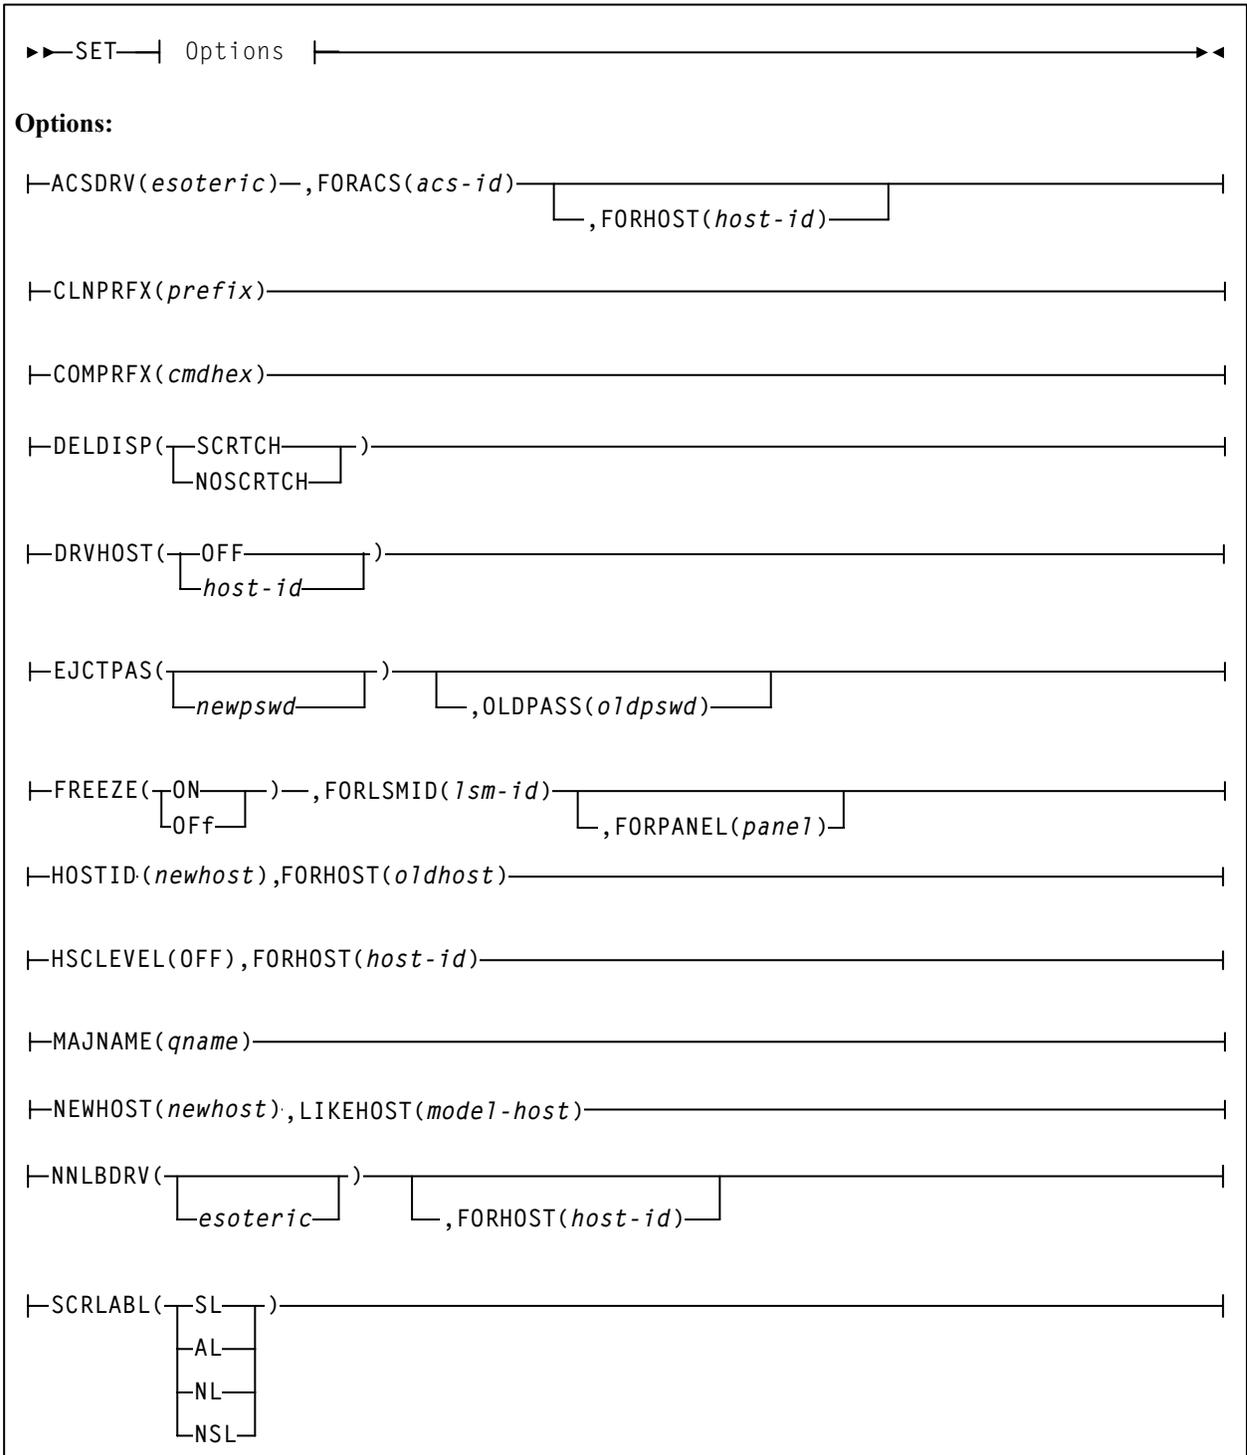


SET utility (continued)




UNSCratch utility

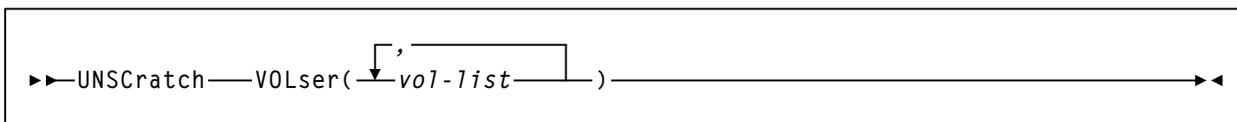

UNSElect utility

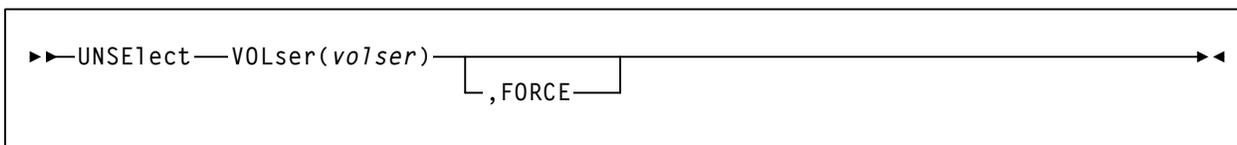


Volume Report (VOLRpt) utility

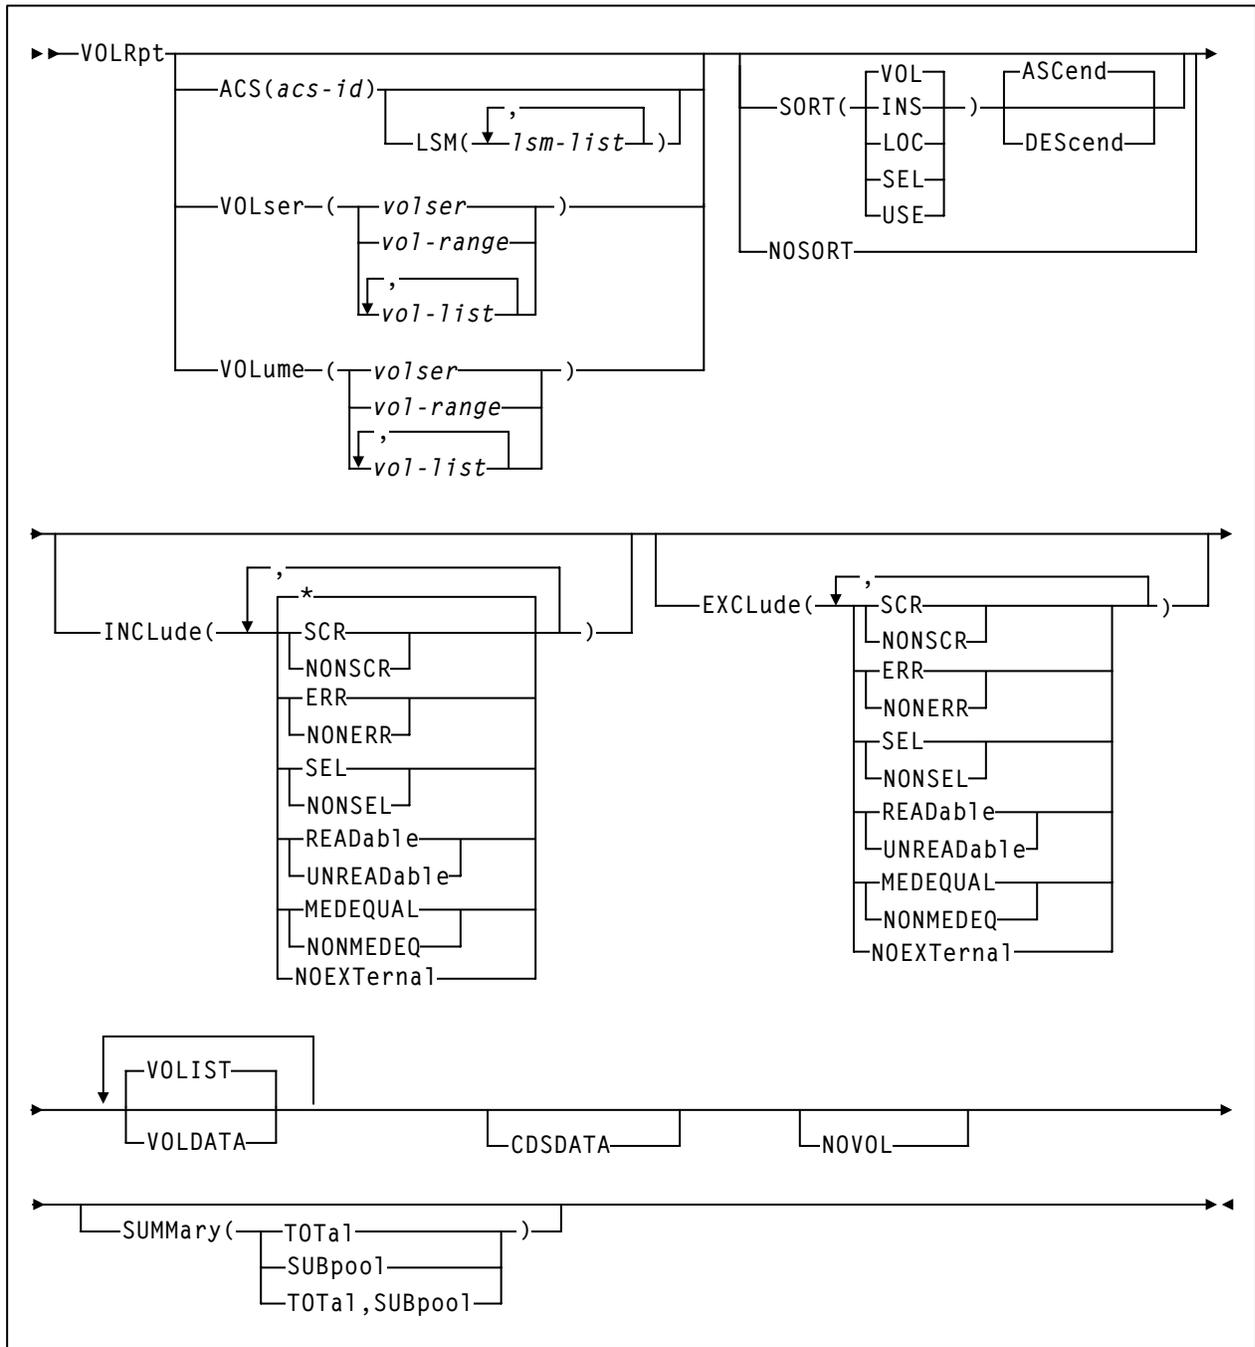


HSC Operator Command Syntax

This section contains the syntax for operator commands. For complete descriptions of the commands, see the *HSC/MSP Operator's Guide*.


Allocation (ALLOC) command and control statement

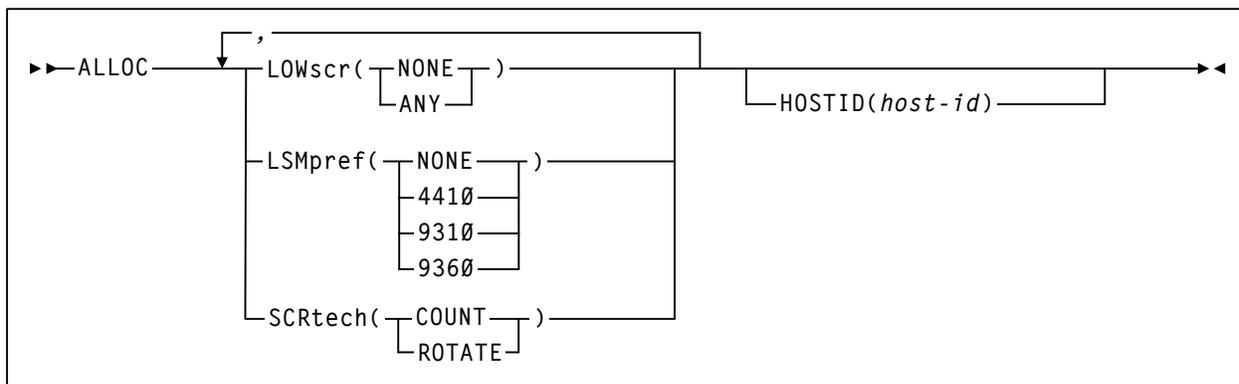


CAP Preference (CAPPref) command and control statement

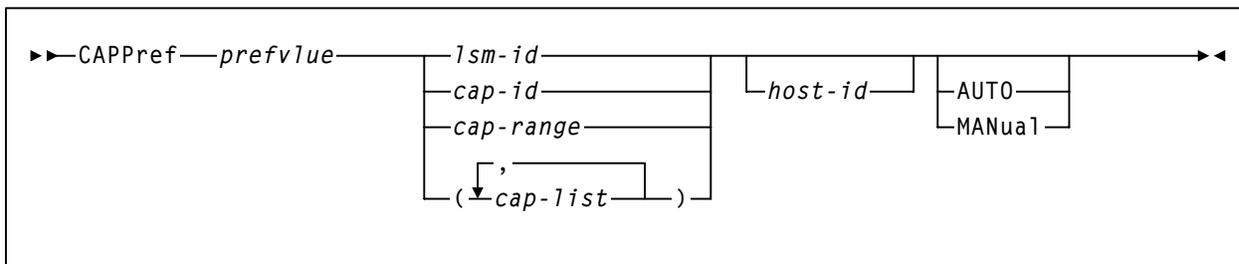


CDs Enable/Disable command

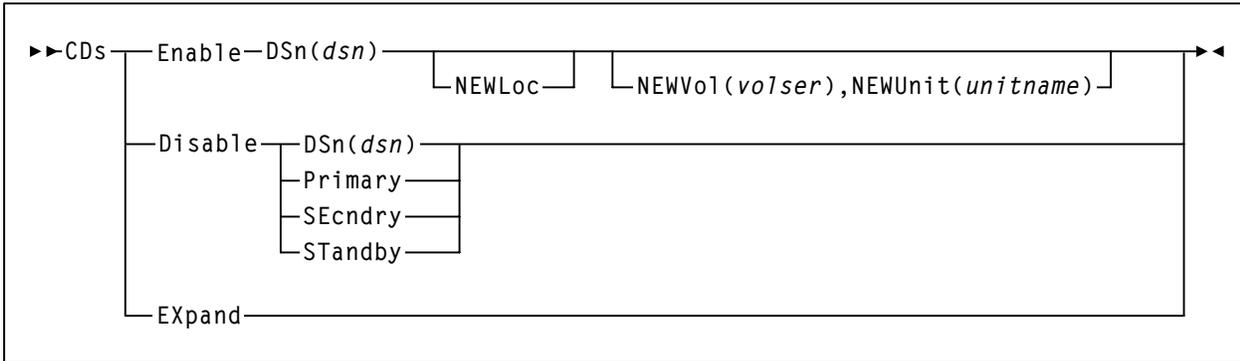


CLean command

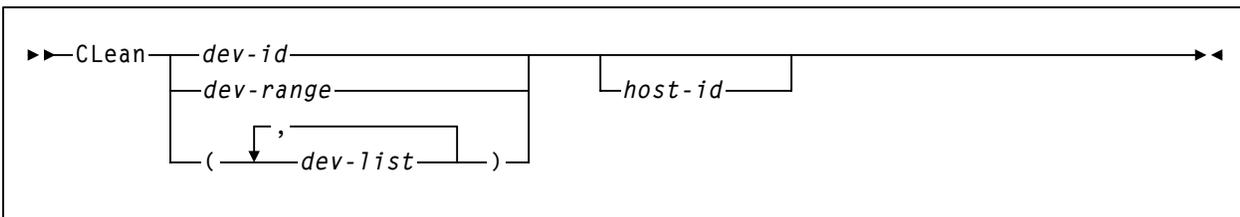

Communications Path (COMMPath) command and control statement

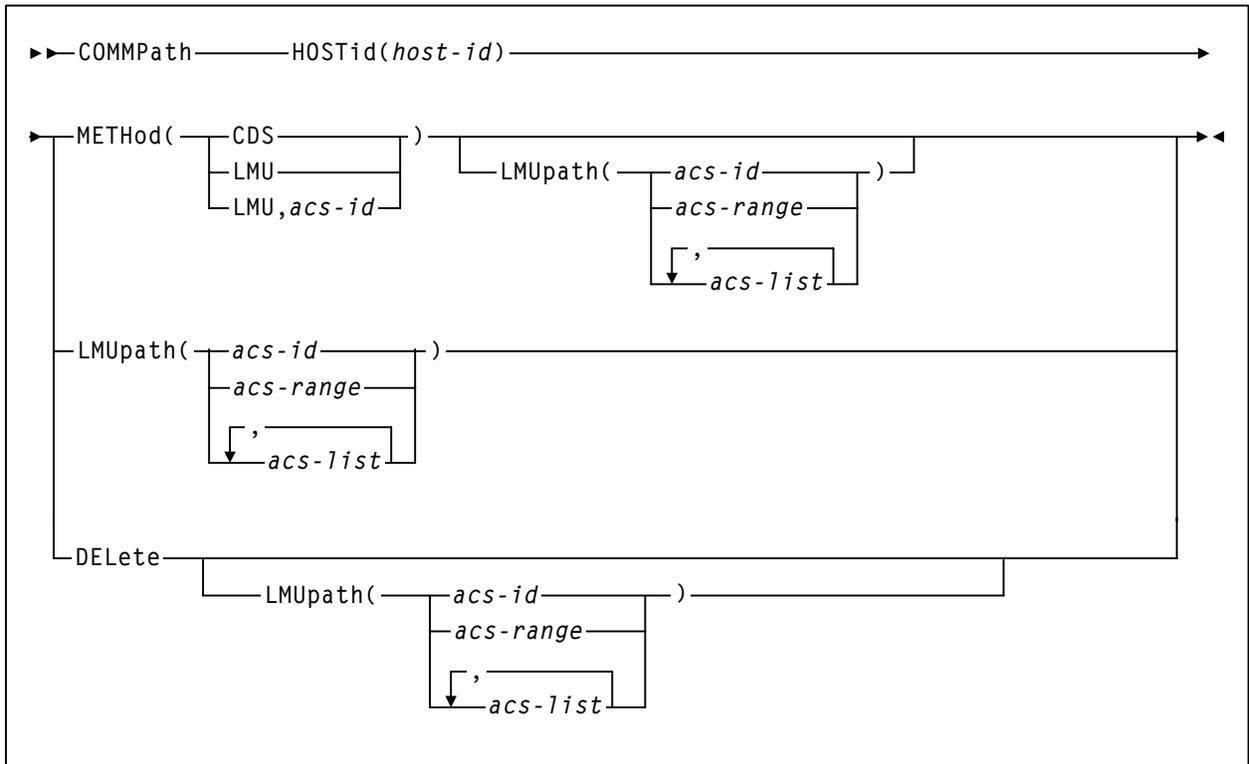


DISMount command

 


Display command


Display Acs

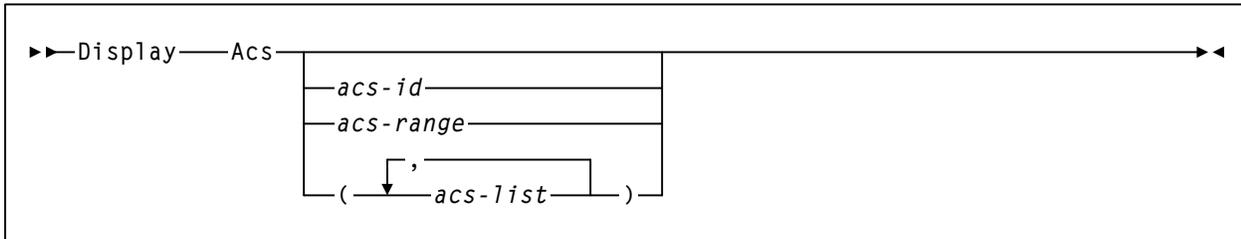


Display ALI

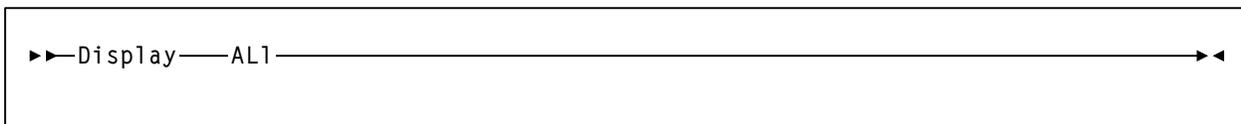


Display ALLOC

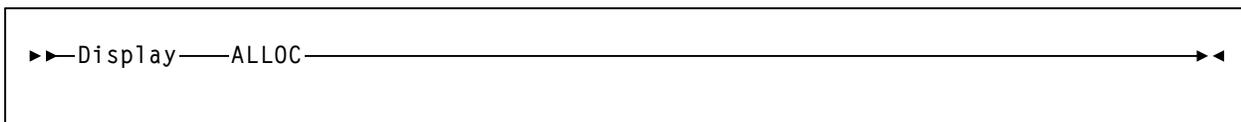


Display Cap

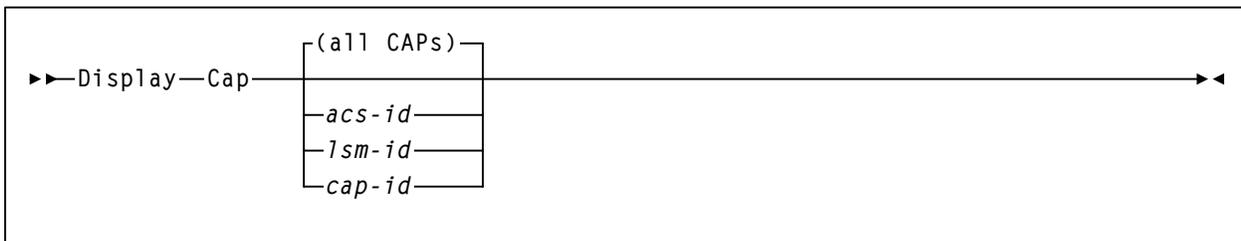


Display CDS

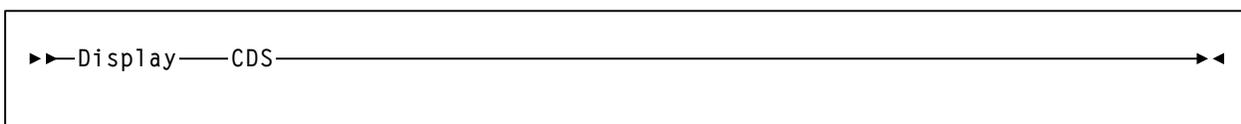


Display Cmd

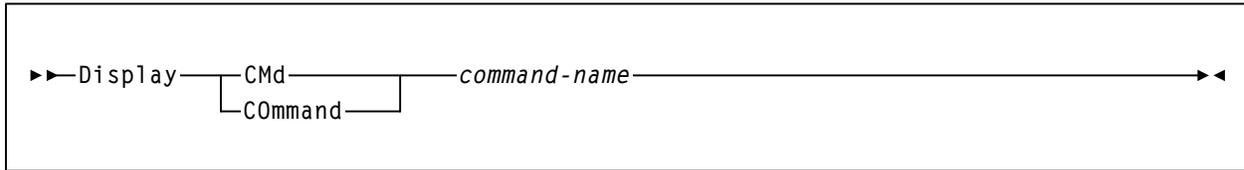


Display COMMPath

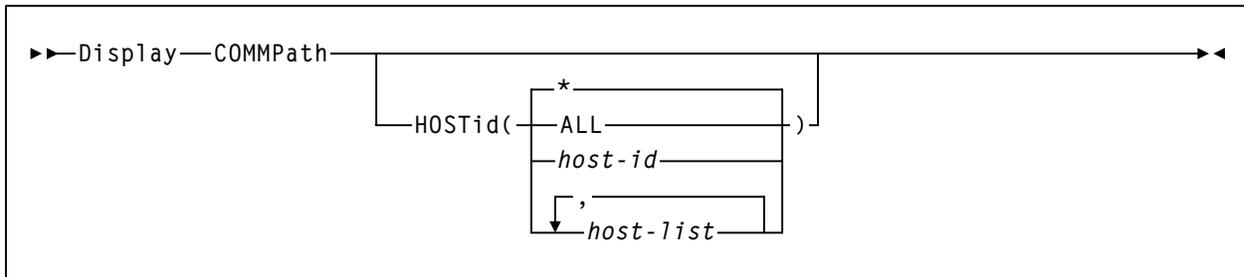


Display DRives

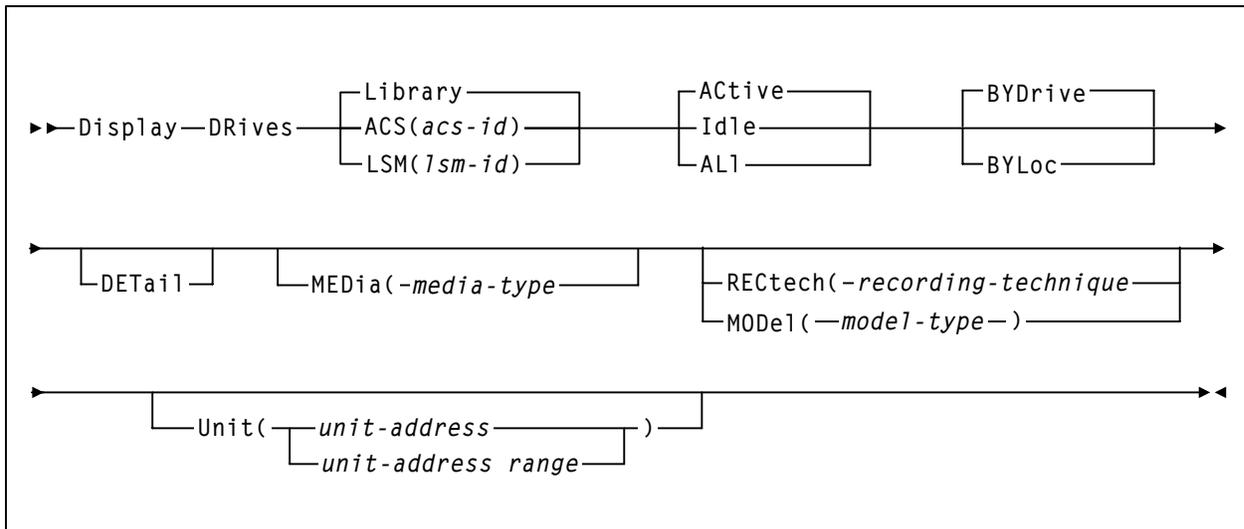


Display Exceptions

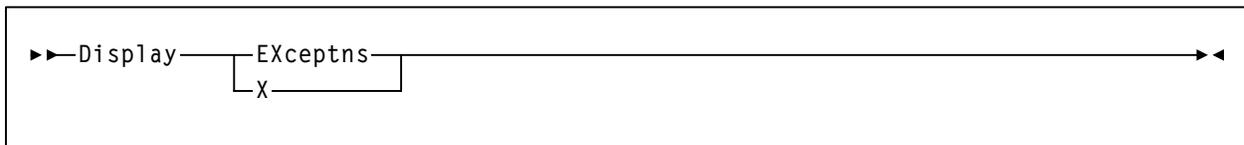


Display LKEYDEF

 


Display LMUPDEF

 


Display LSM

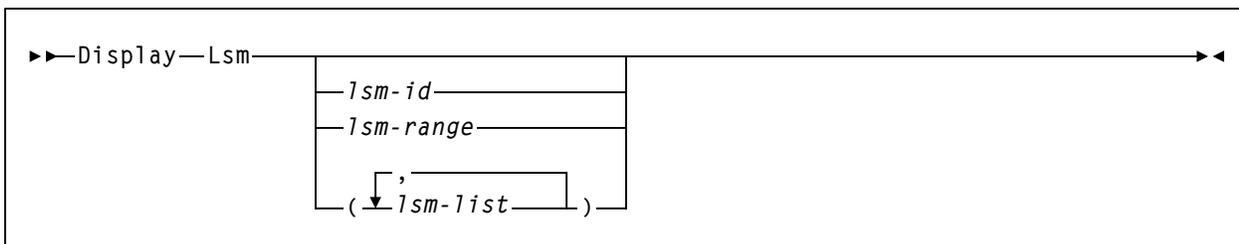


Display Message

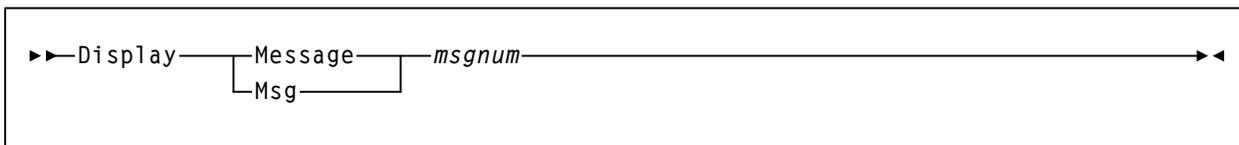

Display MNTD

 

Display MONitor

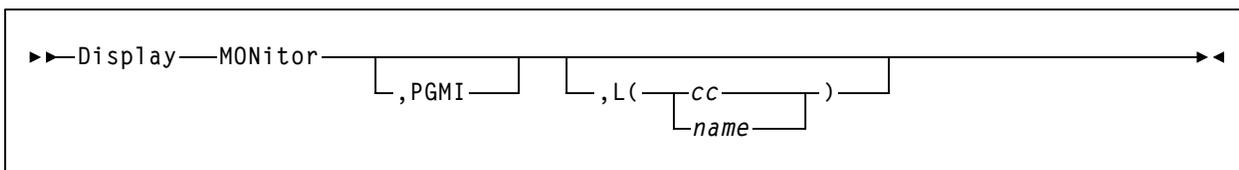

Display OPTion

►► Display — OPTion ◀◀

Display Requests

►► Display — Requests ◀◀

Display SCRatch

►► Display — SCRatch ◀◀

┌ *acs-id* ─┘ ┌ ALL ─┘ ┌ SUBpool(*subpool-name*) ─┘ ┌ DETail ─┘

└ *lsm-id* ─┘

┌ MEDIA(*media-type*) ─┘ ┌ RECTech(*recording-technique*) ─┘

Display SCRDEF

►► Display — SCRDEF ◀◀


Display SRVlev

►► Display — SRVlev ◀◀


Display Status

►► Display — Status ◀◀

Display THReshd

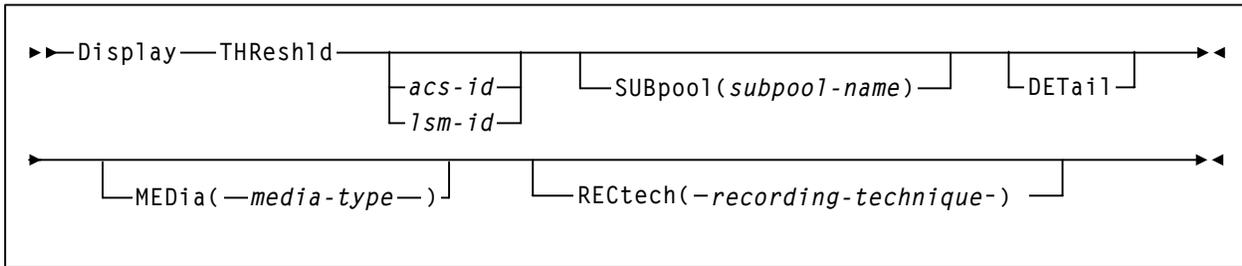


Display TREQDEF

 


Display UNITDEF



 
Display VOLDEF




Display Volume

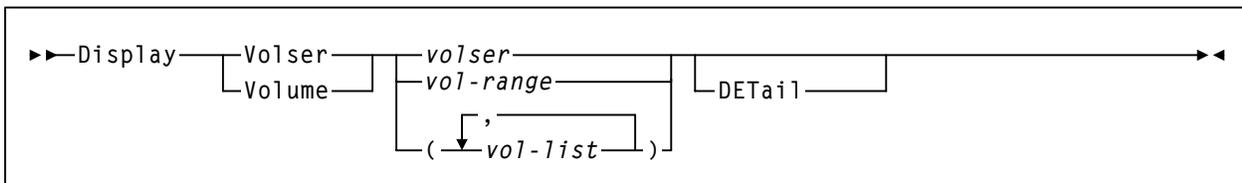


DRAIn CAP command

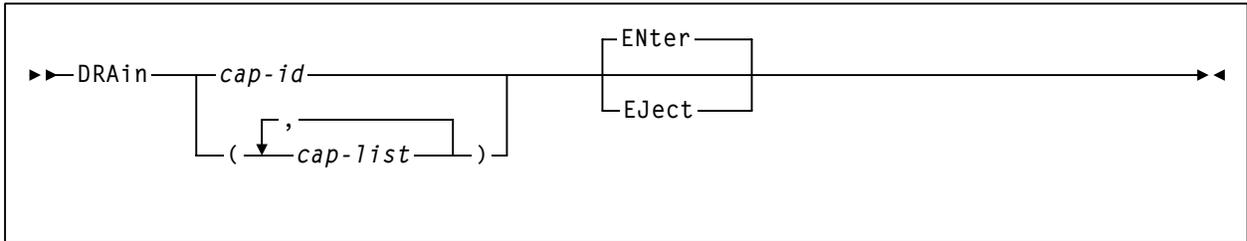


EJect command

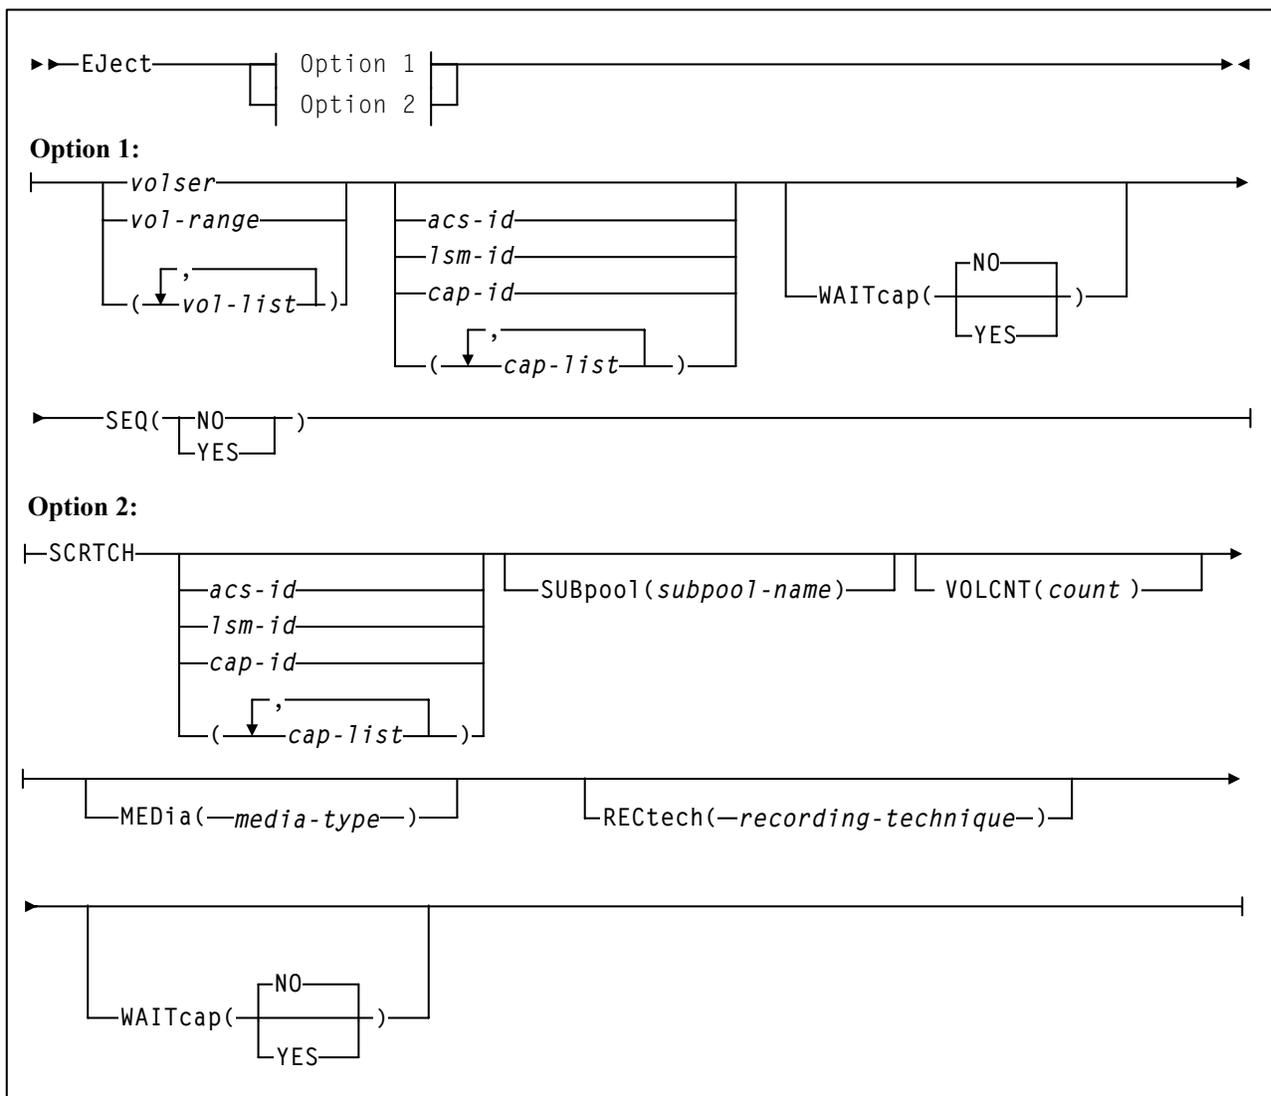


ENter command

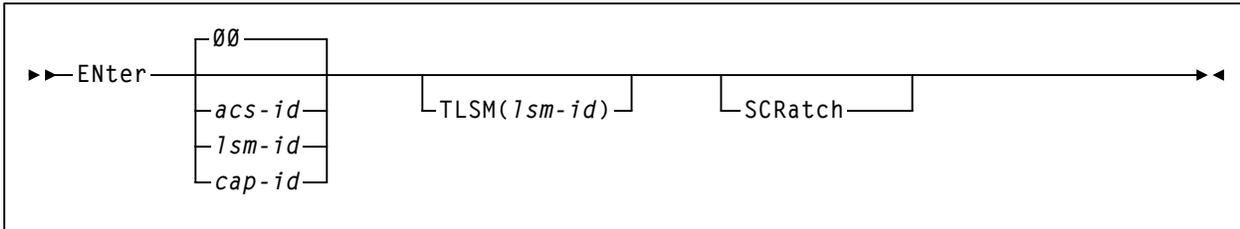


Journal command

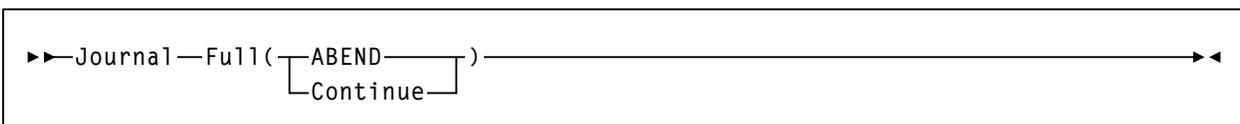


MODify command

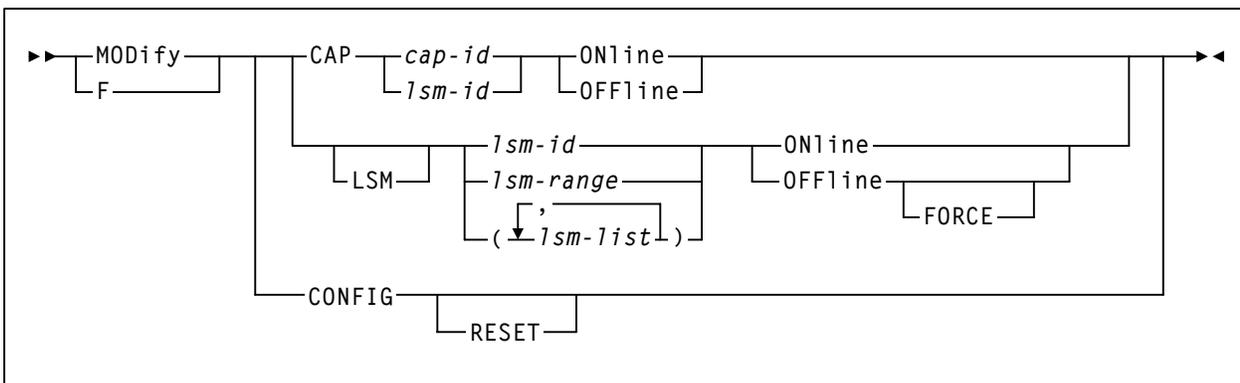


MONITOR command

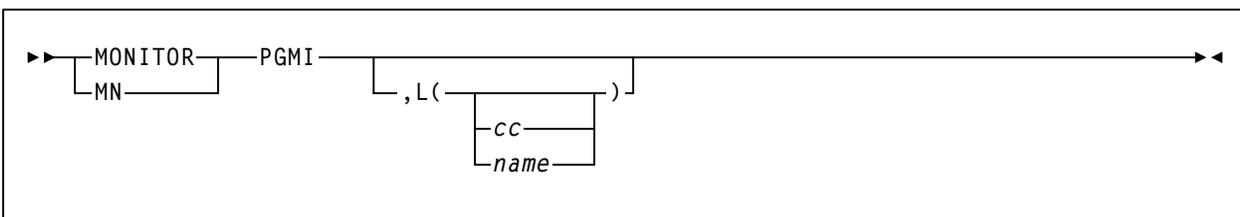


Mount command

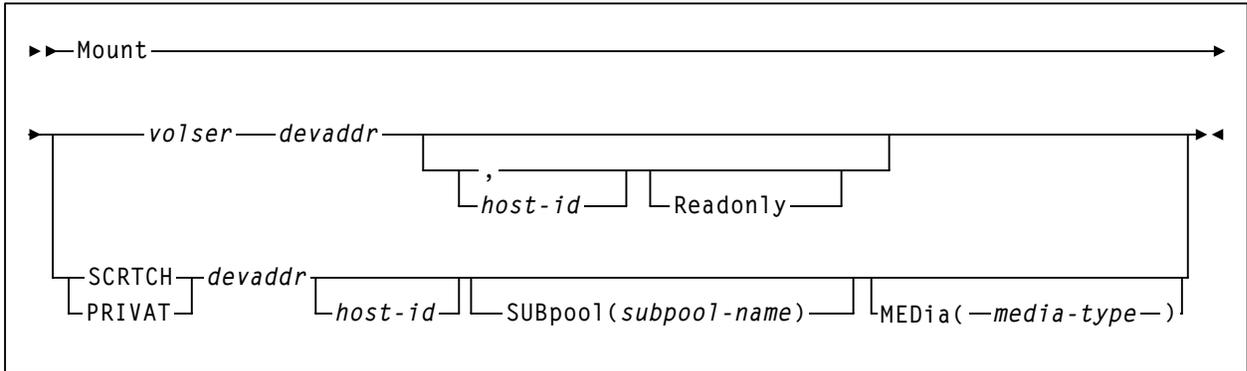


Mount/Dismount Options (MNTD) command and control statement

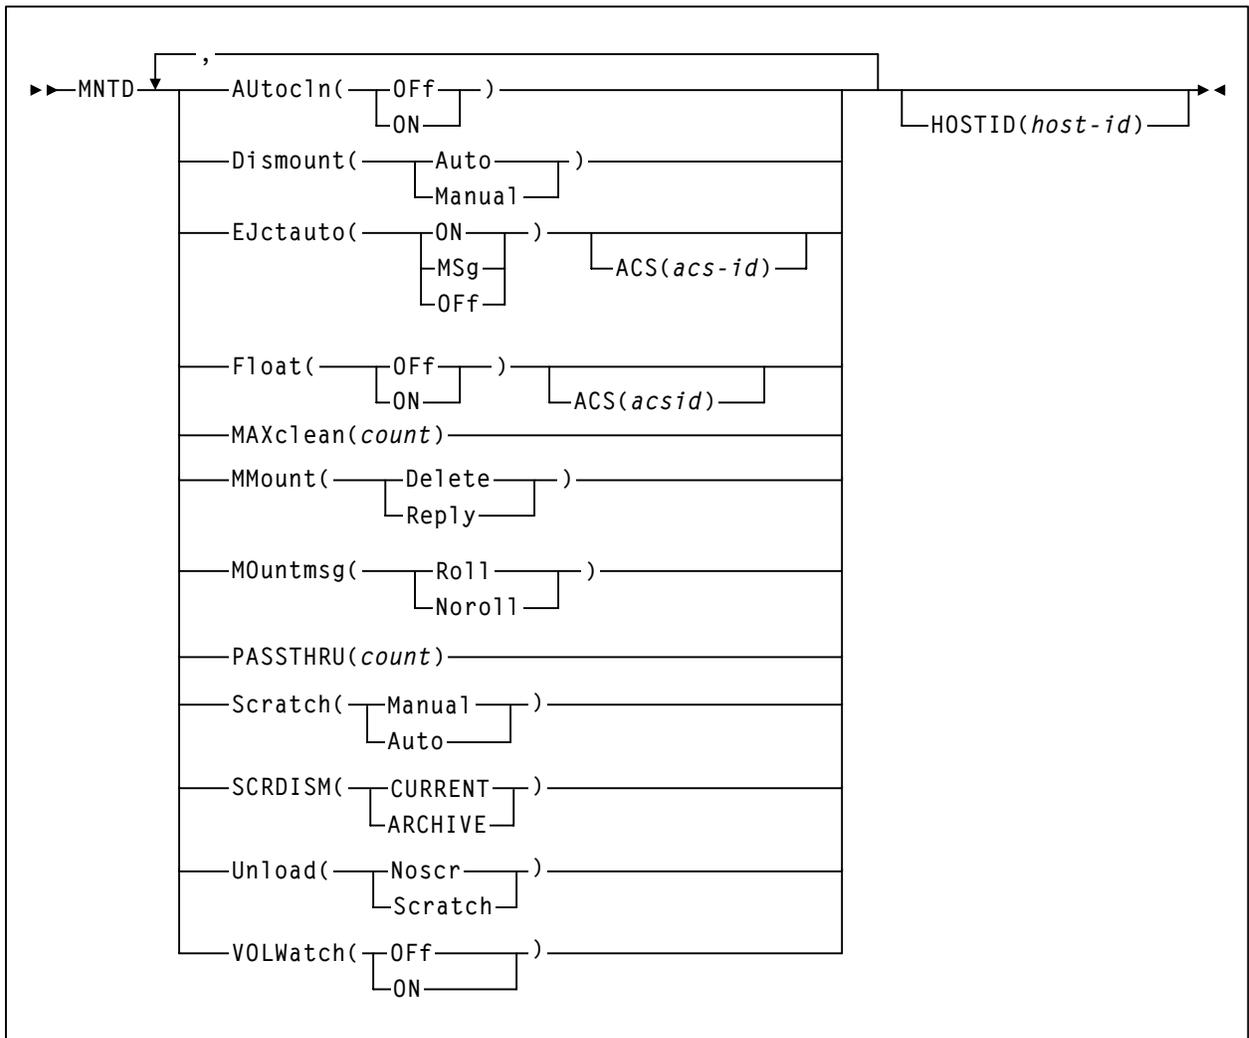

MOVE command

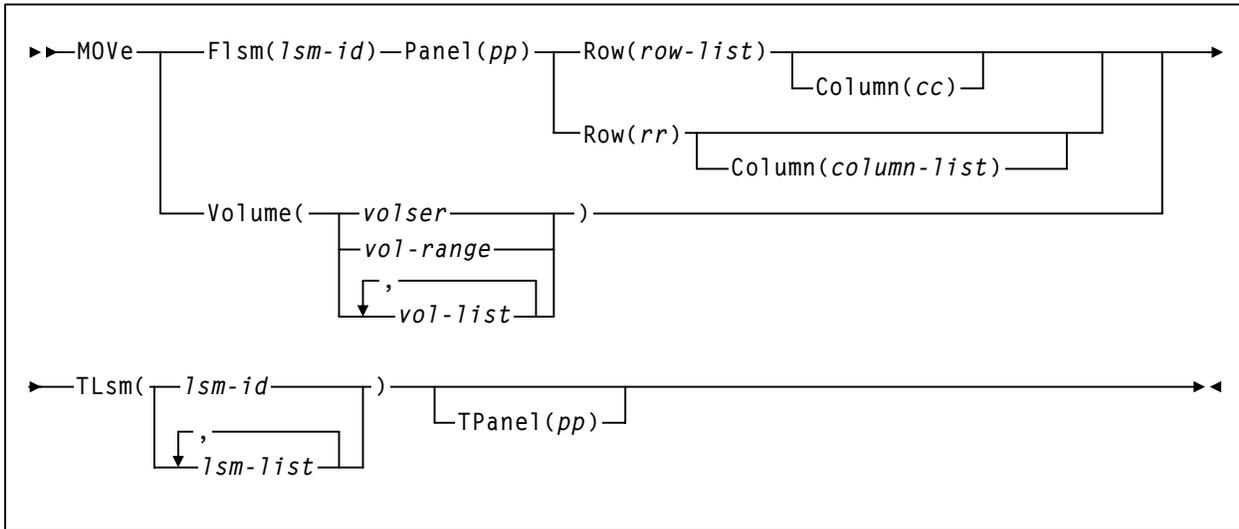

OPTion command and control statement

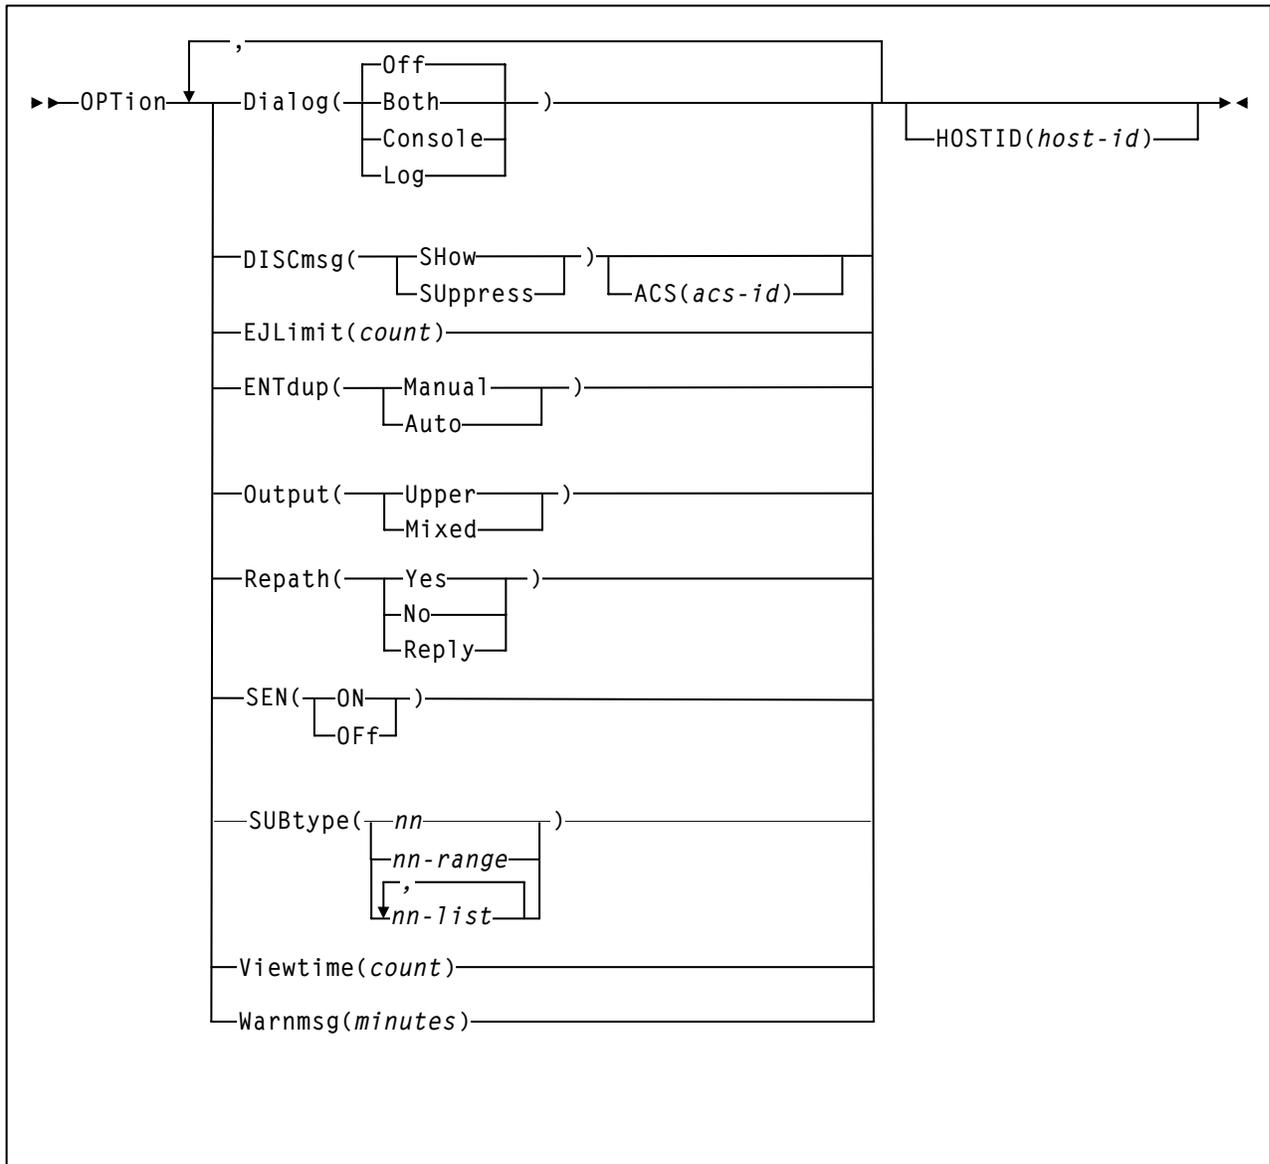

RECover Host command



RELease CAP command

```
▶▶ RELease — cap-id ▶▶
```

SCRAtch command

```
▶▶ SCRAtch — VOLser( vol-list ) ▶▶
```

SEnTer command

```
▶▶ SEnTer — cap-id ▶▶
```

SRVlev command

```
▶▶ SRVlev — BASE | FULL ▶▶
```

Stop Monitoring (STOPMN) command

```
▶▶ STOPMN — PGMI , L( cc | name ) ▶▶
```

SWitch command

```
► Switch — Acs acs-id(1)
```

Note:

(1) ACS *acs-id* is optional in a single-ACS environment; it is required in a multiple-ACS environment.

TRace command

```
► TRace — comp-name  
          — comp-list  
          — OFF — comp-name  
                  — comp-list
```


TRACELKP command

```
► TRACELKP — table-name  
            — table-list  
            — OFF — table-name
```


UNSCRatch command

```
► UNSCratch — VOLser( vol-list )
```


User Exit (UEXIT) command and control statement

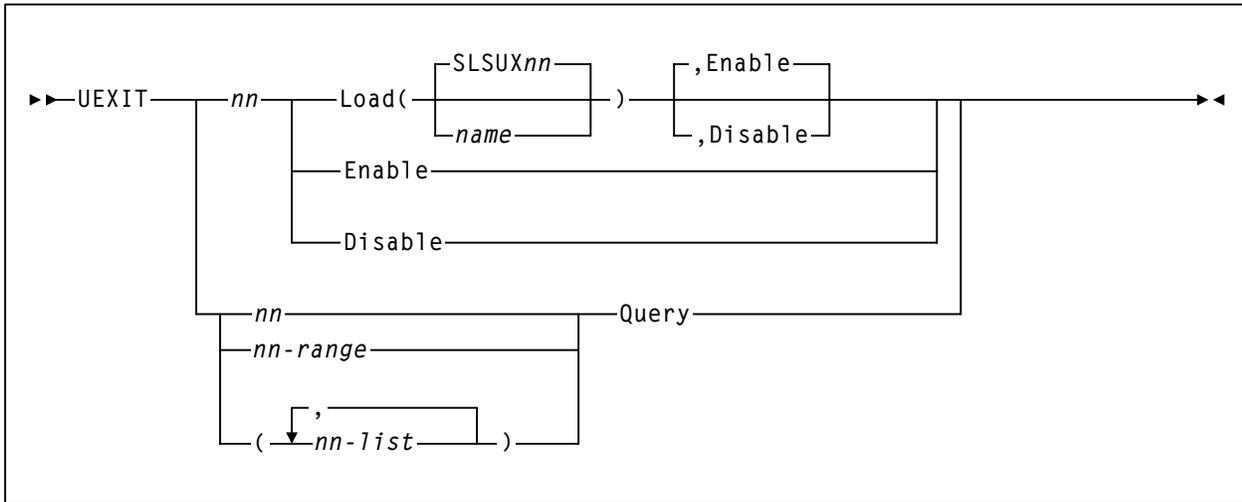


Vary Station command

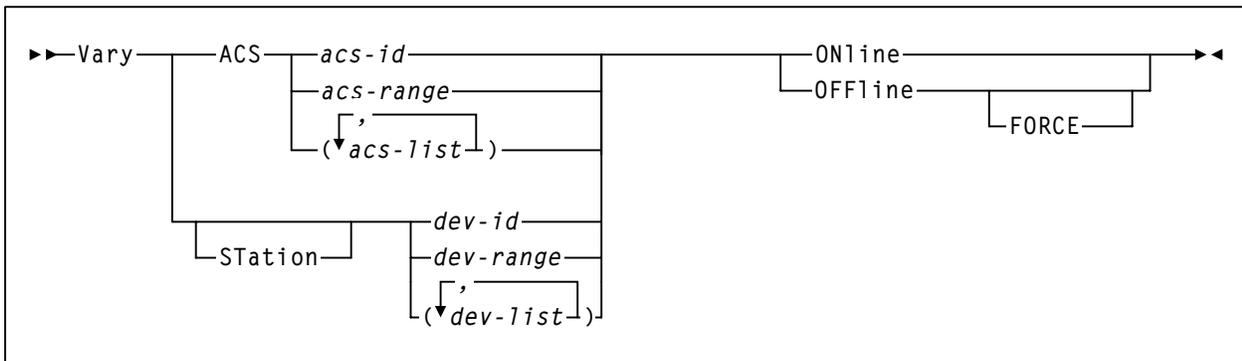

View command

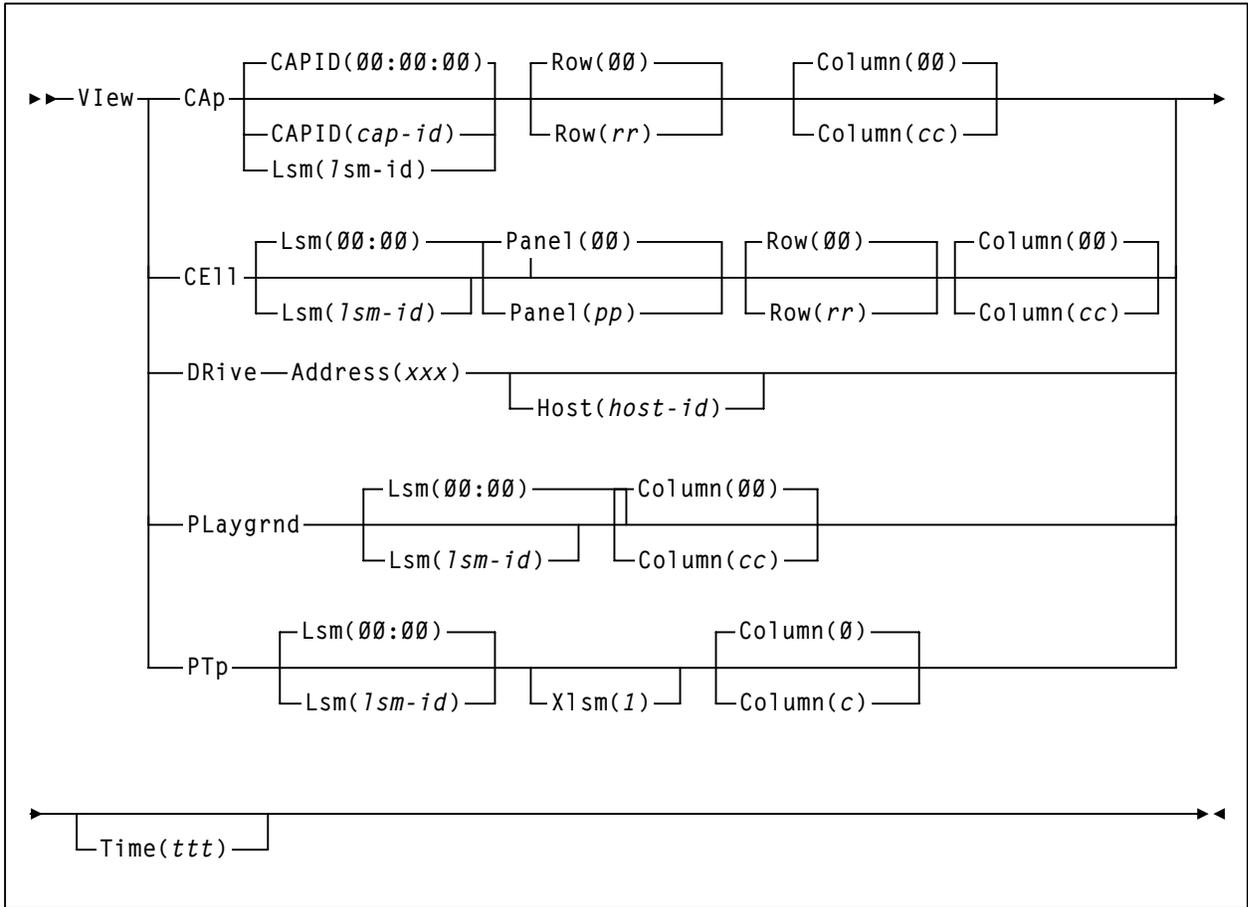


Warn command

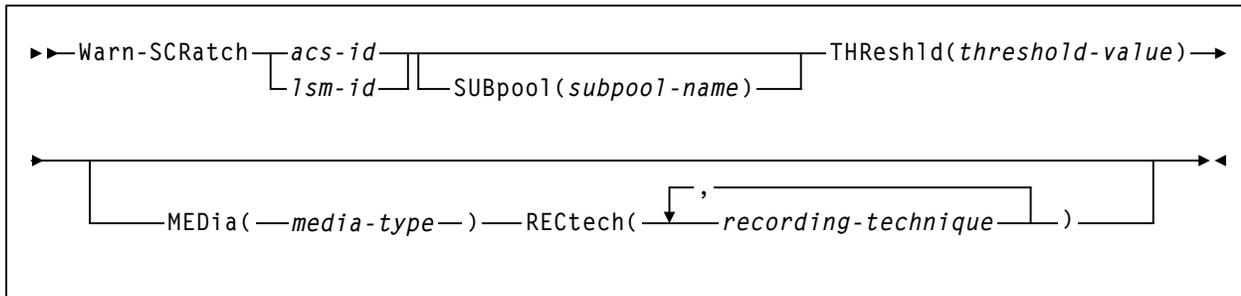


HSC Diagnostic Command Syntax

This section contains the syntax for diagnostic commands. For complete descriptions of the commands, see the *HSC/MSP System Programmer's Guide* and *HSC/MSP Operator's Guide*.

List command

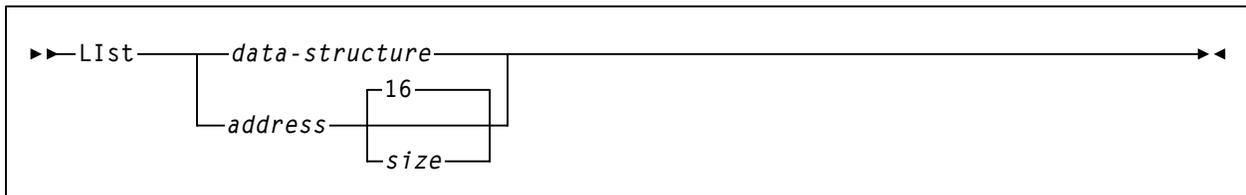

TRace command

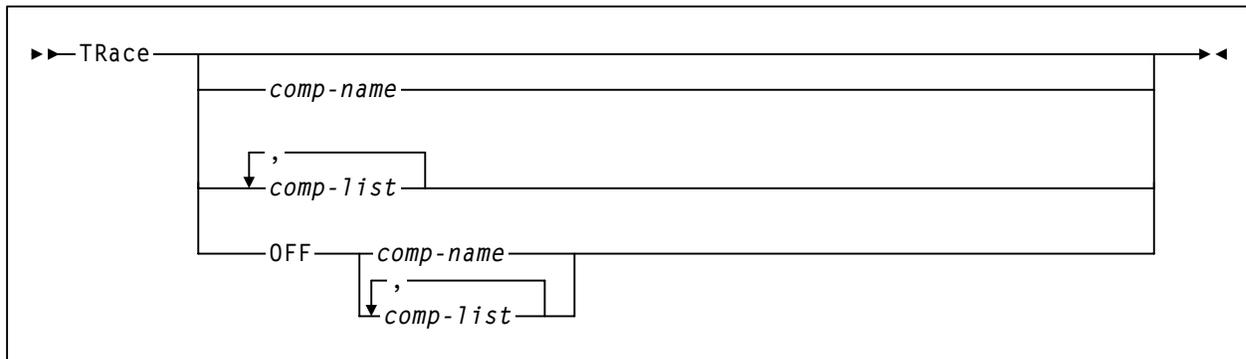



Sun Microsystems, Inc. 4150 Network Circle, Santa Clara, CA 95054 USA Phone 1-650-960-1300 or 1-800-555-9SUN Web sun.com



ARGENTINA: 5411-4317-5636 • AUSTRALIA: 1-800-550-786 • AUSTRIA: 43-1-601-26-0 • BALKANS: 301-6188-111 • BELGIUM: 32-2-704 89 83 • BRAZIL: 55-11-51872100 • BRUNEI: 65-216-8333 • CANADA: 1-800-422-8020 (GENERAL); 416-964-2001 (LEARNING MANAGEMENT SYSTEM SALES, TORONTO) • CHILE: 562-372-4500 • COLOMBIA: 571-629-2323
CZECH REPUBLIC: 420-2-33009311 • DENMARK: 45-4556-5040 • EGYPT: 00-202-570-9442 • FINLAND: 358-9-525-551 • FRANCE: 33-1-41-33-17-17 • GERMANY: 49-89-460-08-2788 • GREECE: 30-01-6188101 • HONG KONG: 852-2877-7077 • HUNGARY: 361-202-4415 • INDIA: 91-80-229-8989 • INDONESIA: 65-216-8333 • IRELAND: 353-1-668-4377
ISRAEL: 972-9-9710500 • ITALY: 39-02-9259511 • JAPAN: 81-3-5779-1820 • KOREA: 82-2-3453-6602 • MALAYSIA: 603-2116-1887 • MIDDLE EAST: 00-9714-3366333 • MEXICO: 525-261-0344 • NETHERLANDS: 31-33-4515200 • NEW ZEALAND: 0800-786-338 • NORTH WEST AFRICA: 00-9714-3366333 • NORWAY: FROM NORWAY: 47-22023950, TO NORWAY: 47-23369650 • PAKISTAN: 00-9714-3366333 • PEOPLE'S REPUBLIC OF CHINA: 8610-6803-5588 • PHILIPPINES: 632-885-7867 • POLAND: 48-22-8747848 • PORTUGAL: 351-21-413-4000 • RUSSIA: 7-095-935-8411 • SAUDI ARABIA: 00-9714-3366333 • SINGAPORE: 65-216-8300 • SOUTH AFRICA: 27-11-256-6300 • SPAIN: 34-902-210-412 • SRI LANKA: 65-2168333 • SWEDEN: 46-8-631-22-00 • SWITZERLAND: 41-1-908-90-50 (GERMAN) 41-22-999-0444 (FRENCH) • TAIWAN: 886-2-25185735 • THAILAND: 662-344-6855 • TURKEY: 90-212-335-22-00 • UNITED KINGDOM: 44-1276-416-520 • UNITED STATES: 1-800-422-8020 • VENEZUELA: 582-905-3800 • VIETNAM: 65-216-8333 • WORLDWIDE HEADQUARTERS: 1-650-960-1300

SUN™ THE NETWORK IS THE COMPUTER ©2006 Sun Microsystems, Inc. All rights reserved. Sun, Sun Microsystems, and the Sun logo are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and other countries.