



StorageTek™ Expert Library Manager Software

Installation and Maintenance Guide

PN 312652901
Revision A
Version 6.2

Expert Library Manager

Installation and Maintenance Guide

Version 6.2

MVS

PN 312652901

Revision A

Copyright 2007 Sun Microsystems, Inc., 4150 Network Circle, Santa Clara, California 95054, U.S.A. All rights reserved.

Sun Microsystems, Inc. has intellectual property rights relating to technology that is described in this document. In particular, and without limitation, these intellectual property rights may include one or more of the U.S. patents listed at <http://www.sun.com/patents> and one or more additional patents or pending patent applications in the U.S. and in other countries.

This document and the product to which it pertains are distributed under licenses restricting their use, copying, distribution, and decompilation. No part of the product or of this document may be reproduced in any form by any means without prior written authorization of Sun and its licensors, if any.

Third-party software, including font technology, is copyrighted and licensed from Sun suppliers.

Parts of the product may be derived from Berkeley BSD systems, licensed from the University of California. UNIX is a registered trademark in the U.S. and in other countries, exclusively licensed through X/Open Company, Ltd.

Sun, Sun Microsystems, the Sun logo, Java, AnswerBook2, docs.sun.com, and Solaris are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and in other countries.

All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. in the U.S. and in other countries. Products bearing SPARC trademarks are based upon an architecture developed by Sun Microsystems, Inc.

The OPEN LOOK and Sun™ Graphical User Interface was developed by Sun Microsystems, Inc. for its users and licensees. Sun acknowledges the pioneering efforts of Xerox in researching and developing the concept of visual or graphical user interfaces for the computer industry. Sun holds a non-exclusive license from Xerox to the Xerox Graphical User Interface, which license also covers Sun's licensees who implement OPEN LOOK GUIs and otherwise comply with Sun's written license agreements.

U.S. Government Rights—Commercial use. Government users are subject to the Sun Microsystems, Inc. standard license agreement and applicable provisions of the FAR and its supplements.

DOCUMENTATION IS PROVIDED "AS IS" AND ALL EXPRESS OR IMPLIED CONDITIONS, REPRESENTATIONS AND WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT, ARE DISCLAIMED, EXCEPT TO THE EXTENT THAT SUCH DISCLAIMERS ARE HELD TO BE LEGALLY INVALID.

Copyright 2007 Sun Microsystems, Inc., 4150 Network Circle, Santa Clara, Californie 95054, Etats-Unis. Tous droits réservés.

Sun Microsystems, Inc. a les droits de propriété intellectuels relatants à la technologie qui est décrit dans ce document. En particulier, et sans la limitation, ces droits de propriété intellectuels peuvent inclure un ou plus des brevets américains énumérés à <http://www.sun.com/patents> et un ou les brevets plus supplémentaires ou les applications de brevet en attente dans les Etats-Unis et dans les autres pays.

Ce produit ou document est protégé par un copyright et distribué avec des licences qui en restreignent l'utilisation, la copie, la distribution, et la décompilation. Aucune partie de ce produit ou document ne peut être reproduite sous aucune forme, par quelque moyen que ce soit, sans l'autorisation préalable et écrite de Sun et de ses bailleurs de licence, s'il y en a.

Le logiciel détenu par des tiers, et qui comprend la technologie relative aux polices de caractères, est protégé par un copyright et licencié par des fournisseurs de Sun.

Des parties de ce produit pourront être dérivées des systèmes Berkeley BSD licenciés par l'Université de Californie. UNIX est une marque déposée aux Etats-Unis et dans d'autres pays et licenciée exclusivement par X/Open Company, Ltd.

Sun, Sun Microsystems, le logo Sun, Java, AnswerBook2, docs.sun.com, et Solaris sont des marques de fabrique ou des marques déposées de Sun Microsystems, Inc. aux Etats-Unis et dans d'autres pays.

Toutes les marques SPARC sont utilisées sous licence et sont des marques de fabrique ou des marques déposées de SPARC International, Inc. aux Etats-Unis et dans d'autres pays. Les produits portant les marques SPARC sont basés sur une architecture développée par Sun Microsystems, Inc.

L'interface d'utilisation graphique OPEN LOOK et Sun™ a été développée par Sun Microsystems, Inc. pour ses utilisateurs et licenciés. Sun reconnaît les efforts de pionniers de Xerox pour la recherche et le développement du concept des interfaces d'utilisation visuelle ou graphique pour l'industrie de l'informatique. Sun détient une licence non exclusive de Xerox sur l'interface d'utilisation graphique Xerox, cette licence couvrant également les licenciées de Sun qui mettent en place l'interface d'utilisation graphique OPEN LOOK et qui en outre se conforment aux licences écrites de Sun.

LA DOCUMENTATION EST FOURNIE "EN L'ÉTAT" ET TOUTES AUTRES CONDITIONS, DECLARATIONS ET GARANTIES EXPRESSES OU TACITES SONT FORMELLEMENT EXCLUES, DANS LA MESURE AUTORISEE PAR LA LOI APPLICABLE, Y COMPRIS NOTAMMENT TOUTE GARANTIE IMPLICITE RELATIVE A LA QUALITE MARCHANDE, A L'APTITUDE A UNE UTILISATION PARTICULIERE OU A L'ABSENCE DE CONTREFAÇON.

We welcome your feedback. Please contact the Sun Learning Solutions Feedback System at SLSFS@Sun.com or

Sun Learning Services
Sun Microsystems, Inc.
One StorageTek Drive
Louisville, CO 80028-3256
USA

Please include the publication name, part number, and edition number in your correspondence if they are available. This will expedite our response.

Notices

Please read the following compliance and warning statements for this product.

Potential equipment damage: Cables that connect peripherals must be shielded and grounded; refer to descriptions in the cable instruction manuals. Operation of this equipment with cables that are not shielded and not correctly grounded might result in interference to radio and TV reception.

Changes or modifications to this equipment that are not expressly approved in advance by StorageTek will void the warranty. In addition, changes or modifications to this equipment might cause it to create harmful interference.

United States FCC Compliance Statement

The following compliance statement pertains to Federal Communications Commission Rules 47 CFR 15.105:

Note: This equipment has been tested and found to comply with the limits for a Class A digital device pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his or her own expense.

CISPR 22 and EN55022 Warning

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Japanese Compliance Statement

The following compliance statement in Japanese pertains to VCCI EMI regulations:

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスA情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

English translation: This is a Class A product based on the Technical Requirement of the Voluntary Control Council for Interference by Information Technology (VCCI). In a domestic environment, this product may cause radio interference, in which case the user may be required to take corrective actions.

Taiwan Warning Label Statement

The following warning label statement pertains to BSMI regulations in Taiwan, R.O.C.:

警告使用者：這是甲類的資訊產品，在居住的環境中使用時，可能會造成射頻干擾，在這種情況下，使用者會被要求採取某些適當的對策

English translation: This is a Class A product. In a domestic environment, this product may cause radio interference, in which case, the user may be required to take adequate measures.

Internal Code License Statement

The following is the Internal Code License Agreement from StorageTek:

Internal Code Notice

PLEASE READ THIS NOTICE CAREFULLY BEFORE INSTALLING AND OPERATING THIS EQUIPMENT. THIS NOTICE IS A LEGAL AGREEMENT BETWEEN YOU (EITHER AN INDIVIDUAL OR ENTITY), THE END USER, AND STORAGE TECHNOLOGY CORPORATION (“STORAGETEK”), THE MANUFACTURER OF THE EQUIPMENT. BY OPENING THE PACKAGE AND ACCEPTING AND USING ANY UNIT OF EQUIPMENT DESCRIBED IN THIS DOCUMENT, YOU AGREE TO BECOME BOUND BY THE TERMS OF THIS AGREEMENT. IF YOU DO NOT AGREE WITH THE TERMS OF THIS AGREEMENT, DO **NOT** OPEN THE PACKAGE AND USE THE EQUIPMENT. IF YOU DO NOT HAVE THE AUTHORITY TO BIND YOUR COMPANY, DO **NOT** OPEN THE PACKAGE AND USE THE EQUIPMENT. IF YOU HAVE ANY QUESTIONS, CONTACT THE AUTHORIZED STORAGETEK DISTRIBUTOR OR RESELLER FROM WHOM YOU ACQUIRED THIS EQUIPMENT. IF THE EQUIPMENT WAS OBTAINED BY YOU DIRECTLY FROM STORAGETEK, CONTACT YOUR STORAGETEK REPRESENTATIVE.

1. **Definitions:** The following terms are defined as follows:
 - a. “Derivative works” are defined as works based upon one or more preexisting works, such as a translation or a musical arrangement, or any other form in which a work may be recast, transformed, or adapted. A work consisting of editorial revision, annotations, elaboration, or other modifications which, as a whole, represent an original work of authorship, is a Derivative work.
 - b. “Internal Code” is Microcode that (i) is an integral part of Equipment, (ii) is required by such Equipment to perform its data storage and retrieval functions, and (iii) executes below the user interface of such Equipment. Internal code does not include other Microcode or software, including data files, which may reside or execute in or be used by or in connection with such Equipment, including, without limitation, Maintenance Code.
 - c. “Maintenance Code” is defined as Microcode and other software, including data files, which may reside or execute in or be used by or in connection with Equipment, and which detects, records, displays, and/or analyzes malfunctions in the Equipment.
 - d. “Microcode” is defined as a set of instructions (software) that is either imbedded into or is to be loaded into the Equipment and executes below the external user interface of such Equipment. Microcode includes both Internal Code and Maintenance Code, and may be in magnetic or other storage media, integrated circuitry, or other media.

2. The Equipment you have acquired by purchase or lease is manufactured by or for StorageTek and contains Microcode. By accepting and operating this Equipment, you acknowledge that StorageTek or its licensor(s) retain(s) ownership of all Microcode, as well as all copies thereof, that may execute in or be used in the operation or servicing of the Equipment and that such Microcode is copyrighted by StorageTek or its licensor(s).
3. StorageTek hereby grants you, the end user of the Equipment, a personal, nontransferable (except as permitted in the transfer terms below), nonexclusive license to use each copy of the Internal Code (or any replacement provided by StorageTek or your authorized StorageTek distributor or reseller) which license authorizes you, the end user, to execute the Internal Code solely to enable the specific unit of Equipment for which the copy of Internal Code is provided to perform its data storage and retrieval functions in accordance with StorageTek's (or its licensor's) official published specifications.
4. Your license is limited to the use of the Internal Code as set forth. You may not use the Internal Code for any other purpose. You may not, for example, do any of the following:
 - a. Access, copy, display, print, adapt, alter, modify, patch, prepare Derivative works of, transfer, or distribute (electronically or otherwise) or otherwise use the Internal Code;
 - b. Reverse assemble, decode, translate, decompile, or otherwise reverse engineer the Internal Code (except as decompilation may be expressly permitted under applicable European law solely for the purpose of gaining information that will allow interoperability when such information is not otherwise readily available); or
 - c. Sublicense, assign, or lease the Internal Code or permit another person to use such Internal Code, or any copy of it.
5. Nothing in the license set forth above or in this entire Notice shall convey, in any manner, to you any license to or title to or other right to use any Maintenance code, or any copy of such Maintenance Code. Maintenance Code and StorageTek's service tools and manuals may be kept at your premises, or they may be supplied with a unit of Equipment sent to you and/or included on the same media as Internal Code, but they are to be used only by StorageTek's customer service personnel or those of an entity licensed by StorageTek, all rights in and to such Maintenance Code, service tools and manuals being reserved by StorageTek or its licensors. You agree that you shall not use or attempt to use the Maintenance Code or permit any other third party to use and access such Maintenance Code.
6. You, the end user, agree to take all appropriate steps to ensure that all of your obligations set forth in this Notice are extended to any third party having access to the Equipment.

7. You may transfer possession of the Internal Code to another party only with the transfer of the Equipment on which its use is authorized, and your license to use the Internal Code is discontinued when you are no longer an owner or a rightful possessor of the Equipment. You must give such transferee all copies of the Internal Code for the transferred Equipment that are in your possession, along with a copy of all provisions of this Notice.

Any such transfer by you is automatically (without further action on the part of either party) expressly subject to all the terms and conditions of this Notice passing in full to the party to whom such Equipment is transferred, and such transferee accepts the provisions of this license by initial use of the Internal Code. You cannot pass to the transferee of the Equipment any greater rights than granted under this Notice, and shall hold StorageTek harmless from any claim to the contrary by your transferee or its successors or assigns. In addition, the terms and conditions of this Notice apply to any copies of Internal Code now in your possession or use or which you hereafter acquire from either StorageTek or another party.

8. You acknowledge that copies of both Internal Code and Maintenance Code may be installed on the Equipment before shipment or included with the Equipment and other material shipped to you, all for the convenience of StorageTek's service personnel or service providers licensed by StorageTek, and that during the warranty period, if any, associated with the Equipment, and during periods in which the Equipment is covered under a maintenance contract with StorageTek or service providers licensed by StorageTek, both Internal Code and Maintenance Code may reside and be executed in or used in connection with such Equipment, and you agree that no rights to Maintenance Code are conferred upon you by such facts.

StorageTek or the licensed service provider may keep Maintenance Code and service tools and manuals on your premises but they are to be used only by StorageTek's customer service personnel or those of service providers licensed by StorageTek. You further agree that upon

- (i) any termination of such warranty period or maintenance contract period; or
- (ii) transfer of possession of the Equipment to another party, StorageTek and its authorized service providers shall have the right with respect to the affected Equipment to remove all service tools and manuals and to remove or disable all Maintenance Code and/or replace Microcode which includes both Internal Code and Maintenance Code with Microcode that consists only of Internal Code.

Revision History

EC	Date	Description
132874	March 2007	Revision A

About this Guide

Expert Library Manager (ExLM) is MVS host software that manages Nearline real tape volumes (including VSM multi-volume cartridges (MVCs)) and VSM virtual tape volumes (VTVs).

What's New in This Guide?

ExLM 6.2 adds the following features:

- The ExLM Eject Utility function has been replaced with enhancements to Action Eject. The ExLM Eject Utility will be removed after this release.
- New and enhanced ExLM control statements. **Note that:**
 - ExLM 6.2 control statements provide similar function to selected HSC (SLUADMIN) and VTCS (SWSADMIN) utilities.
 - A new form of the Condition clause for volume selection is available where either a value or a range of values works with the condition to select volumes.
 - ExLM 6.2 is updated to issue a warning message when EQ and NE is specified with a field specified for comparison that represents a data set

name and the specified string constant contains wild-card characters. For example:

WHEN(DataSetName EQ 'SYSBACK.')**

WHEN(DataSetName NE 'SYSBACK.')**

A warning message is written to the parameter file listing to document the applied change.

If the comparison operator is LT, LE, GT, or GE, a syntax warning (or error) message is issued because such characters are illegal in a properly formed data set name.

- New volume fields are available. For more information, see *ExLM Quick Reference*.

Table 1. on page xiv describes the ExLM 6.2 control statements.

Table 1. ExLM 6.2 Control Statements

ExLM Control Statement	6.2 Status	Corresponding HSC or VTCS Utility
ACTION CONSOLIDATE	Enhanced	SWSADMIN CONSOLIDATE
ACTION EJECT	Enhanced	SLUADMIN EJECT
ACTION EXPORT	Enhanced	SWSADMIN EXPORT
ACTION MIGRATE	Enhanced	SWSADMIN MIGRATE
ACTION MOVE	Enhanced	SLUADMIN MOVE
ACTION RECALL	Enhanced	SWSADMIN RECALL
ACTION RECLAIM	New	SWSADMIN RECLAIM
ACTION SCRATCH	New	SLUADMIN SCRATCH
ACTION UNSCRATCH	New	SLUADMIN UNSCRATCH, SLUADMIN REPLACEALL
DATASET	Enhanced	
LOCATION	Unchanged	
MANAGE PHYSICAL	Unchanged	
MANAGE VIRTUAL	Unchanged	
METHOD	Enhanced	
OPTIONS	Enhanced	
OPTIONS SYNC and SYNCVTV MANAGE PHYSICAL and MANAGE VIRTUAL	Unchanged	SLUONDB (and SMC equivalent)
PULLLIST	Unchanged	

Table 1. ExLM 6.2 Control Statements

ExLM Control Statement	6.2 Status	Corresponding HSC or VTCS Utility
REPORT CELLCNT	Unchanged	
REPORT CONSOLIDATE	Unchanged	
REPORT DATASET	Unchanged	
REPORT EJECT	Unchanged	
REPORT ENTER	Unchanged	
REPORT EXPORT	Unchanged	
REPORT LSM	Enhanced	
REPORT MIGRATE	Unchanged	
REPORT MULTIPLE	New	SWSADMIN MVCRPT
REPORT NONSCRCNT	Unchanged	
REPORT OPERATOR	Unchanged	
REPORT PHYSICAL	New	SLUADMIN VOLRPT
REPORT RECALL	Unchanged	
REPORT SCRCNT	Unchanged	
REPORT SUMMARY	Unchanged	
REPORT VIRTUAL	New	SWSADMIN VTVRPT
REPORT VOLUME	Enhanced	
SET METHOD	Enhanced	
SUBPOOL	Enhanced	
SUBPOOL and MANAGE PHYSICAL BALSCR	Unchanged	SLUADMIN SCRATCH REDISTRIBUTION
TMS CA1	Enhanced	
TMS COMMON	Enhanced	
TMS CTT	Enhanced	
TMS CUSTOM	Enhanced	
TMS OPEN	Enhanced	
TMS RMM	Enhanced	
TMS TLMS	Enhanced	
UNMANAGED	Enhanced	

- ExLM 6.2 adds the LISTDD and LISTDSN parameters to selected ACTION statements. Specified as an alternative to a WHEN condition, the LISTDD and LISTDSN parameters specify a file containing the list of volsers to use for the statement.
- ExLM 6.2 supports IF REQ statements in PTFs when necessary to identify requisite HSC or VTCS maintenance.
- ExLM 6.2 provides failover capability for ExLM Agent. You can now specify multiple Agent host/port pairs on the AGENT keyword of the TMS statements. The specified host/port pairs are tried in order until a successful connection is made or the list of hosts is exhausted. If none of the Agents can be contacted, a WTOR message says that no Agents can be contacted.

What's New for ExLM Explorer in Version 6.2?

- ExLM Explorer is enhanced to support all new features as described in Table 1. on page xiv.
- Additional fields are available for reports and selection criteria.
- You can now specify an external list of items as an alternative to specifying selection rules for Action objects and Custom reports.
- You can now specify multiple hosts for the ExLM Agent. ExLM tries each Agent in the list until a successful connection can be made or the end of the list is reached. This provides a failover capability when ExLM obtains tape management system information from a remote host.
- You can now specify whether volumes ejected from an SL8500 library are ejected in the sequence determined by the hardware to provide for the least robotic motion or in the sequence specified by ExLM.
- Three new Action object types have been added: Action Scratch, Action Unscratch, and Action Reclaim. These replace the SLUADMIN Scratch, SLUADMIN Unscratch, and SWSADMIN Reclaim functions.
- Four new report types have been added: Multiple, MVC_VTV, Physical, and Virtual. These report on MVCs, MVC-VTV combinations, physical volumes in an LSM, and VTVs, respectively. These replace the SWSADMIN MVCRPT, SLUADMIN VOLRPT, and SWSADMIN VTVRPT functions.
- You can generate text strings in custom report columns and headings based on the run-time evaluation of complex expressions.
- You can now use substrings in comparisons of text fields, such as CreationJobName and DataSetName.

Intended Audience

This guide is for StorageTek or customer personnel who are responsible for installing and maintaining ExLM.

Prerequisites

To perform the tasks described in this guide, you should already understand the following:

- MVS or OS/390 operating system
- System Modification Program Extended (SMP/E)

Reader's Comments

If you have comments on this book, please e-mail us at glsfs@stortek.com and include the document title and number with your comments.

About the Software

This guide applies to ExLM Version 6.2.

How this Guide is Organized

This guide contains the following sections:

- Chapter 1, "Preparing to Install ExLM 6.2"
- Chapter 2, "Installing ExLM 6.2 from Tape"
- Chapter 3, "Installing ExLM 6.2 from CD-ROM"

Note: Chapter 2, "Installing ExLM 6.2 from Tape" and Chapter 3, "Installing ExLM 6.2 from CD-ROM" now include information on installing ExLM Agent, which was formerly included in the *ExLM System Administrator's Guide* (now the *ExLM User's Guide*).

- Chapter 4, "Performing Post-Installation Tasks"
- Appendix A, "ExLM SAMPLIB Members"

Related Publications

The following publications provide additional information about ExLM, VSM, and NCS.

ExLM

The ExLM documentation set consists of the ExLM Information CD-ROM, which contains PDF file formats of the following publications:

- *ExLM Installation and Maintenance Guide*
- *ExLM User's Guide (formerly ExLM System Administrator's Guide)*
- *ExLM Messages and Codes*
- *ExLM Quick Reference*

VTCS and VSM

The VTCS and VSM documentation set consists of the VTCS Information CD-ROM, which contains PDF file formats of the following books:

- *Introduction to VSM*
- *VTCS Installation and Configuration Guide*
- *VTCS Administrator's Guide*
- *VTCS Messages and Codes*
- *VTCS Command and Utility Reference*
- *VTCS Quick Reference*

NCS

NCS Installation Guide

HSC-MVS Environment

- *Configuration Guide*
- *Operator's Guide*
- *System Programmer's Guide*
- *Messages and Codes*
- *System Programmer's Reference Summary*
- *Operator's Reference Summary*
- *NCS/VTCS XML Guide*

SMC

- *Configuration and Administration Guide*

LibraryStation

- *Configuration Guide*
- *Operator and System Programmer's Guide*
- *Messages and Codes*

MVS/CSC

- *Configuration Guide*
- *Operator Guide*
- *System Programmer Guide*
- *Messages and Codes*

Conventions for Reader Usability

Conventions are used to shorten and clarify explanations and examples within this book.

Typographic

The following typographical conventions are used in this book:

- **Bold** is used to introduce new or unfamiliar terminology.
- Letter Gothic is used to indicate command names, filenames, and literal output by the computer.
- **Letter Gothic Bold** is used to indicate literal input to the computer.
- *Letter Gothic Italic* is used to indicate that you must substitute the actual value for a command parameter. In the following example, you would substitute your name for the “username” parameter.
- Logon *username*
- A bar (|) is used to separate alternative parameter values. In the example shown below either username or systemname must be entered.
- Logon *username|systemname*
- Brackets [] are used to indicate that a command parameter is optional.
- Ellipses (...) are used to indicate that a command may be repeated multiple times.
- The use of mixed upper and lower case characters (for non–case sensitive commands) indicates that lower case letters may be omitted to form abbreviations. For example, you may simply enter **Q** when executing the **Quit** command.

Keys

Single keystrokes are represented by double brackets [[]] surrounding the key name. For example, press [[ESC]] indicates that you should press only the escape key.

Combined keystrokes use double brackets and the plus sign (+). The double brackets surround the key names and the plus sign is used to add the second keystroke. For example, press [[AL]] + [[C]] indicates that you should press the alternate key and the C key simultaneously.

Enter Command The instruction to “press the [[ENTER]] key” is omitted from most examples, definitions, and explanations in this book.

For example, if the instructions asked you to “enter” **Logon pat**, you would type in **Logon pat** and press `ENTER`.

However, if the instructions asked you to “type” **Logon pat**, you would type in **Logon pat** and you would *not* press `[[ENTER]]`.

Symbols

The following symbols are used to highlight text in this book.



Warning: Information necessary to keep you from damaging your hardware or software.



Caution: Information necessary to keep you from corrupting your data.



Hint: Information that can be used to shorten or simplify your task or they may simply be used as a reminder.

Note: Information that may be of special interest to you. Notes are also used to point out exceptions to rules or procedures.


Syntax

Syntax flow diagram conventions include the following:


Flow Lines—Syntax diagrams consist of a horizontal baseline, horizontal and vertical branch lines and the command text. Diagrams are read left to right and top to bottom. Arrows show flow and direction.




Single Required Choice—Branch lines (without repeat arrows) indicate that a single choice must be made. If one of the items to choose from is on the baseline of the diagram, one item must be selected.

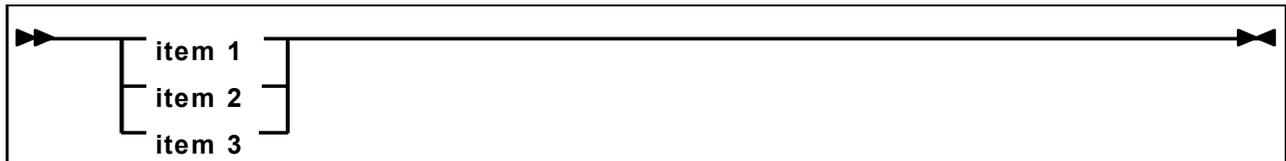

Single Optional Choice—If the first item is on the line below the baseline, one item may optionally be selected.

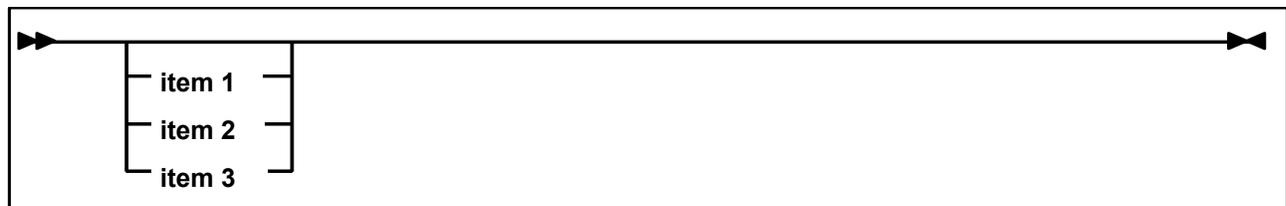

Defaults—Default values and parameters appear above the baseline.

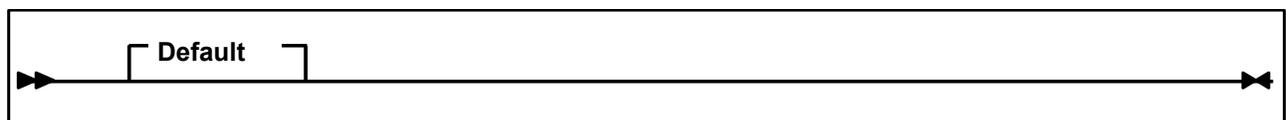

Additional Information

Sun Microsystems, Inc. (Sun) offers several methods for you to obtain additional information.

Sun's External Web Site Sun's external Web site provides marketing, product, event, corporate, and service information. The external Web site is accessible to anyone with a Web browser and an Internet connection.

The URL for the Sun external Web site is: <http://www.sun.com>

The URL for Sun StorageTek™ brand-specific information is:
<http://www.storagetek.com>

Customer Resource Center The Sun StorageTek product Customer Resource Center (CRC) is a Web site that enables members to resolve technical issues by searching code fixes and technical documentation for StorageTek brand products. CRC membership entitles you to other proactive services, such as HIPER subscriptions, technical tips, answers to frequently asked questions, addenda to product documentation books, and online product support contact information. Customers who have a current warranty or a current maintenance service agreement may apply for membership by clicking on the `Request Password` button on the CRC home page. Sun employees may enter the CRC through the SunWeb PowerPort.

The URL for the CRC is <http://www.support.storagetek.com>

Partners Site The StorageTek Partners site is a Web site for partners with a StorageTek Partner Agreement. This site provides information about products, services, customer support, upcoming events, training programs, and sales tools to support StorageTek Partners. Access to this site, beyond the Partners Login page, is restricted. On the Partners Login page, Sun employees and current partners who do not have access can request a login ID and password and prospective partners can apply to become StorageTek resellers.

The URL for the StorageTek Partners site is:
<http://members.storagetek.com>

The URL for partners with a Sun Partner Agreement is:
<http://www.sun.com/partners/>

Hardcopy Publications Contact a Sun sales or marketing representative to order additional paper copies of this publication or to order other StorageTek brand product customer publications in paper format.

Customer Support

Customer support is available 24 hours a day, seven days a week, to customers with Sun or StorageTek maintenance contracts and to Sun employees. You can find additional information about customer support on the Customer Resource Center (CRC) Web site at:

<http://www.support.storageitek.com>

Requesting Help with Software

A publication that is sent to customers using Sun StorageTek software is called *Requesting Help from Software Support*. This book outlines the customer support provided by the Sun StorageTek Software Support organizations for software and it details the process and guidelines for getting help with Sun Sto

Customer-initiated Maintenance

Customer-initiated maintenance begins with a telephone call from you to Sun Microsystems StorageTek Support. You receive immediate attention from qualified Sun personnel, who record problem information and respond with the appropriate level of support.

To contact Sun Microsystems StorageTek Support about a problem:

1. Use the telephone and call:

 **800.525.0369** (inside the United States)

 **303.673.4056** (outside the United States)

2. Describe the problem to the call taker. The call taker will ask several questions and will either route your call to or dispatch a support representative.

If you have the following information when you place a service call, the process will be much easier:

Account name	
Site location number	
Contact name	
Telephone number	
Equipment model number	
Device address	
Device serial number (if known)	
Urgency of problem	
Fault Symptom Code (FSC)	
Problem description	

Sun's Worldwide Offices

You may contact any of Sun's worldwide offices to discuss complete storage, service, and support solutions for your organization. You can find address and telephone number information on Sun's external Web site at:

<http://www.sun.com/worldwide/>

Contents

Notices	v
United States FCC Compliance Statement	v
CISPR 22 and EN55022 Warning	v
Japanese Compliance Statement	vi
Taiwan Warning Label Statement	vi
Internal Code License Statement	vii
Internal Code Notice	vii
Revision History	xi
About this Guide	xiii
What's New in This Guide?	xiii
What's New for ExLM Explorer in Version 6.2?	xvi
Intended Audience	xvii
Prerequisites	xvii
Reader's Comments	xvii
About the Software	xvii
How this Guide is Organized	xvii
Related Publications	xviii
ExLM	xviii
VTCS and VSM	xviii
NCS	xviii
HSC-MVS Environment	xviii
SMC	xviii
LibraryStation	xix
MVS/CSC	xix
Chapter 1. Preparing to Install ExLM 6.2	1
Obtain and Configure ExLM License Keys	2
LKEYINFO Control Statement	3
Verify ExLM Software and Hardware Prerequisites	5
ExLM Mainframe Software Requirements	5
ExLM Nearline Hardware Requirements	6
ExLM Explorer PC Hardware and Software Requirements	8

Chapter 2. Installing ExLM 6.2 from Tape	9
Verify Installation Materials	10
ExLM 6.2 Base Tape Contents	10
ExLM FMID	10
Load the ExLM SAMPLIB Data Set	11
Define and Set Up the EXLM SMP/E CSI Environment	12
RECEIVE the ExLM 6.2 FMID	13
APPLY CHECK the ExLM 6.2 FMID	13
APPLY the ExLM 6.2 FMID	13
ACCEPT the ExLM 6.2 FMID	13
Install Current ExLM 6.2 Corrective Maintenance	14
Chapter 3. Installing ExLM 6.2 from CD-ROM	15
Verify Installation Materials	16
EXLM Installation CD-ROM Base Contents	16
ExLM FMID	16
Unload the EXLM Base CD-ROM	17
FTP EXLM62.pax to USS	17
Unpack the EXLM62.pax file	18
TSO RECEIVE the LOADSAMP.xmit file	19
Defining and Setting up the EXLM SMP/E CSI Environment	19
RECEIVE the EXLM FMID from USS	20
Completing the SMP/E Installation	20
Unload the Current ExLM 6.2 Corrective Maintenance CD-ROM	21
Current ExLM 6.2 Corrective Maintenance CD-ROM Contents	22
Install Current ExLM 6.2 Corrective Maintenance	22
Chapter 4. Performing Post-Installation Tasks	23
APF Authorize the ExLM 6.2 LINKLIB	23
Exclude the HSC CDSs from EDI	23
Verify the Installation	24
Install and Configure ExLM Agent (Optional)	25
ExLM Agent Started Task Parameters	28
Install ExLM Explorer (Optional)	29
Allocate the Explorer Configuration File Library	29
Install the JCL Procedure for Jobs Submitted by the Explorer	29
Appendix A. ExLM SAMPLIB Members	31

Figures

Figure 1. LKEYINFO Syntax 3

Figure 2. Example LKEYINFO Statement for ExLM 4

Figure 3. JCL to Unload the ExLM 6.2 SAMPLIB 11

Figure 4. JCL to Copy LOADSAMP.xmit to a PDS 19

Tables

Table 1.	ExLM 6.2 Control Statements	xiv
Table 2.	Preparing to Install ExLM	1
Table 3.	ExLM 6.2 Mainframe Software Requirements	5
Table 4.	VSM 6.0 Nearline Hardware Requirements	6
Table 5.	Prerequisites for T10000 Drives as RTDs	7
Table 6.	ExLM Explorer PC Hardware Requirements	8
Table 7.	ExLM Explorer PC Software Requirements	8
Table 8.	ExLM Tape Installation Summary and Checklist	9
Table 9.	ExLM 6.2 Base Tape Contents	10
Table 10.	<i>SMP/E Target Library Contents</i>	<i>13</i>
Table 11.	SMP/E Distribution Library Contents	13
Table 12.	ExLM CD-ROM Installation Summary and Checklist	15
Table 13.	ExLM 6.2 Installation CD-ROM Contents	16
Table 14.	Contents of the EXLM62.gimzip directory	18
Table 15.	Contents of SMPNTS after unpacking the EXLM62.pax file	18
Table 16.	Current ExLM 6.2 Corrective Maintenance CD-ROM Content	22
Table 17.	ExLM Post-Installation Checklist	23
Table 18.	SAMPLIB Member Parameter Files	24
Table 19.	ExLM SAMPLIB Members	31

Chapter 1. Preparing to Install ExLM 6.2

This chapter tells how to prepare to install ExLM 6.2. Use the checklist in Table 2 to help plan and verify completion of your ExLM pre-installation tasks.

Table 2. Preparing to Install ExLM

Task	✓ to Verify Completion
“Obtain and Configure ExLM License Keys” on page 2	
“Verify ExLM Software and Hardware Prerequisites” on page 5	

After you complete the tasks in this chapter, depending on the installation media you use, go to one of the following:

- “Installing ExLM 6.2 from Tape” on page 9
- “Installing ExLM 6.2 from CD-ROM” on page 15

Obtain and Configure ExLM License Keys

ExLM 6.2 requires a valid license key for initialization. Product license keys are validated during initialization and immediately after midnight each day.

You can obtain license keys through the StorageTek Customer Resource Center (CRC) at **www.support.storagetek.com**, or by contacting your StorageTek Software Manufacturing Distribution Representative, Marketing Representative, or Systems Engineer. License Keys are generally issued within 48 hours of receipt of the request.

HSC does license key validation for ExLM. After StorageTek issues you an ExLM license key, you must make the license key information available to the HSC license key validation service as described in “LKEYINFO Control Statement” on page 3.

LKEYINFO Control Statement

The LKEYINFO control statement inputs license key information for ExLM.

Syntax

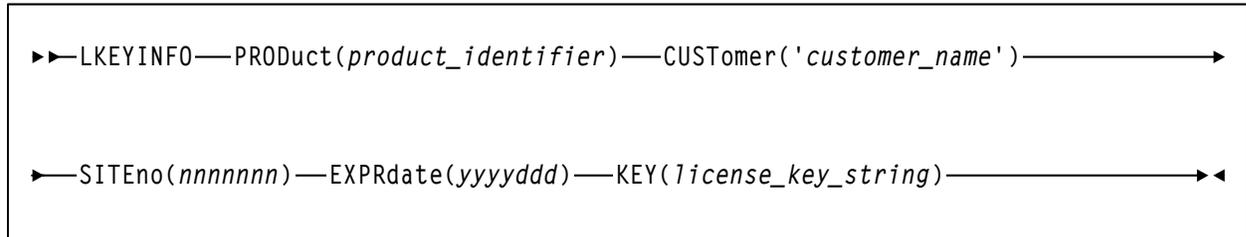


Figure 1. LKEYINFO Syntax

Parameters

Note: You must enter the values for **all** parameters **exactly** as specified in the license key issued to you by StorageTek.

PRODUct

Specifies the product and release to which the license key applies.

product-identifier

The product identifier. The product identifier consists of the ExLM product abbreviation (ExLM) followed by a four-character release id. For example, for EXLM 6.2, the product identifier is EXLM0620.

CUSTomer

Specifies the customer name, which is maximum of 20 characters.

customer-name

The customer name.

SITEno

Specifies the site number.

nnnnnnn

The site number.

EXPRdate

Specifies the expiration date of the license key.

yyyyddd

The expiration date.

KEY

Specifies the license key.

license-key-string

The license key string.

Usage

Place the LKEYINFO control statement in data set or PDS member specified by an LKEYDEF control statement in the HSC START procedure. The definition data set can be a fixed length 80-byte sequential data set, or a fixed length 80-byte member of a PDS.

Example

Figure 2 shows an example LKEYINFO statement for ExLM.

```
LKEYINFO PROD(EXLM0620) -  
CUST('your customer name') -  
SITE('your site number') -  
EXPRD('your ExLM expiration date') -  
KEY('your ExLM license key') -
```

Figure 2. Example LKEYINFO Statement for ExLM

Verify ExLM Software and Hardware Prerequisites

ExLM Mainframe Software Requirements

Verify the mainframe software prerequisites for ExLM 6.2 listed in Table 3.

Table 3. ExLM 6.2 Mainframe Software Requirements

Software Description	Minimum Version/Release
Operating System	Minimum z/OS level commonly supported by IBM, 1.6 or above at this release.
Host Software Component	NCS 6.2 or higher. NCS 6.0 and 6.1 are supported with reduced functionality.
Virtual Tape Control Software	VTCS 6.2 or higher. VTCS 6.0 and 6.1 are supported with reduced functionality.
Mainframe TCP/IP	IBM OS/390 eNetwork Communications Server V2R6 or higher or any 100% compatible TCP/IP product.
Supported Tape Management System Software Note: ExLM does not require tape management system software. In this case, specify the NOTMS parameter of the OPTIONS statement as described in <i>ExLM User's Guide</i> .	Any of the following: <ul style="list-style-type: none">• CA-1 (TMS) Releases: 5.0 and higher• CA-DYNAM/TLMS Releases: 5.4 and higher• IBM DFSMSrmm Release 1.1 with PTFs UY95341 and UY97452 If you use other tape management systems, contact your vendor for support information.
Sort software	IBM DF/SORT Release 6 or compatible

ExLM Nearline Hardware Requirements

ExLM 6.2 is compatible with all LSMs and transports that NCS 6.0 and above supports. If you are using ExLM to manage VSM multi-volume cartridges, verify the minimum VSM 6.0 and above Nearline hardware requirements listed in Table 4 and Table 5 on page 7.

Table 4. VSM 6.0 Nearline Hardware Requirements

Hardware	Requirement
LSMs	Any of the following but 9310, 9740, or SL8500 recommended by StorageTek: 4410, 9310, 9740, 9360, and SL8500
Transports and media	<p>VSM RTDs can be a mixture of 9490 (Timberline), 9490EE (Timberline EE), T9840A, T9840B, T9840C, T9940A, T9940B, and T10000 transports (see Table 5 on page 7). Each VTSS must have a minimum of two library-attached transports for each media type used for MVCs. For example, if your MVCs are STANDARD and ECART, you need a minimum of <i>either</i> two 9490s <i>or</i> two 9490EEs as RTDs. If your MVCs are STANDARD, ECART, ZCART, and STK1R, you need a minimum of two 9490EEs <i>and</i> two 9840s as RTDs.</p> <p>Note: Using T9940s as RTDs requires HSC 4.0.0 and VTCS 4.0.0 with PTF LH1043 applied.</p> <p>Valid media types for the supported RTDs are:</p> <p>9490: STANDARD, ECART</p> <p>9490EE: STANDARD, ECART, ZCART</p> <p>SD-3: DD3A, DD3B, DD3C</p> <p>9840: STK1R</p> <p>T9940: STK2, STK2P (both currently indicate 60 Gb cartridges)</p>

Table 5. Prerequisites for T10000 Drives as RTDs

Description	Requirement
NCS/VTCS	6.0 with the following PTFs: <ul style="list-style-type: none">• L1H12ZI (SOS6000)• L1H12ZJ (SWS6000) 6.1 with the following PTFs: <ul style="list-style-type: none">• L1H12ZN (SOS6100)• L1H12ZO (SWS6100) 6.2
LSMs	9310 and SL8500 at LMU Compat Level 13
protocol	FICON
VTSSs	VSM4 and VSM5
media	T10000T1 (full capacity 500GB cartridge)

ExLM Explorer PC Hardware and Software Requirements

The ExLM 6.2 Explorer PC component is optional. If you install and use Explorer, verify the PC hardware requirements in Table 6 and the software requirements in Table 7.

Table 6. ExLM Explorer PC Hardware Requirements

Hardware Description	Minimum Requirement	Recommended System
System unit	90 MHz Pentium system unit with mouse	166 MHz Pentium system unit with mouse
Memory	32 MB (64 MB Windows 2000 or Windows XP)	64 MB (128 with Windows 2000, Windows Server 2003, or Windows XP)
Free disk space	10 MB	10 MB
CD-ROM drive	present	present
Monitor	800 x 600 pixels with small fonts	1024 x 768 pixels with 256 colors
network card	present	present

Table 7. ExLM Explorer PC Software Requirements

Software Description	Minimum Requirement
Windowing System	Microsoft Windows 2000 (with SP3 or above) Windows Server 2003, or Windows XP (with SP2 or above), or later, 100% compatible version
PC TCP/IP for communications between Explorer and the ExLM mainframe component	The 32-bit WINSOCK TCP/IP supplied with the Windows versions listed above is required to enable the GUI to transfer configuration data between the workstation and the mainframe. Customers can also transfer configuration data using other facilities (external to the GUI) if desired.

Chapter 2. Installing ExLM 6.2 from Tape

This chapter tells how to install ExLM 6.2 from tape. Use the checklist in Table 8 to help plan and verify completion of ExLM installation from tape.

Note: Make sure you complete all the tasks in Chapter 1, “Preparing to Install ExLM 6.2” on page 1 *before* you start installing ExLM 6.2 from tape!

Table 8. ExLM Tape Installation Summary and Checklist

Task	✓ to Verify Completion
“Verify Installation Materials” on page 10	
“Load the ExLM SAMPLIB Data Set” on page 11	
“Define and Set Up the EXLM SMP/E CSI Environment ” on page 9	
“RECEIVE the ExLM 6.2 FMID” on page 13	
“APPLY CHECK the ExLM 6.2 FMID” on page 13	
“APPLY the ExLM 6.2 FMID” on page 13	
“ACCEPT the ExLM 6.2 FMID” on page 13	
“Install Current ExLM 6.2 Corrective Maintenance” on page 14	

Note: Installing ExLM 6.2 will delete previous versions of ExLM if installed in the same SMP/E zones. StorageTek recommends that you install EXLM Release 6.2 in a new SMP/E CSI as described in the LCMINSTB SAMPLIB member.

Verify Installation Materials

Before installing ExLM, make sure you have the following installation materials:

- ExLM 6.2 Base Tape
- ExLM 6.2 current Corrective Maintenance tape

Note:

- Contact Sun StorageTek Software Support for information about additional PTFs that might be required before installing ExLM. See the *Requesting Help from Software Support* guide for information about contacting StorageTek for technical support and for requesting changes to software products.
- Sun recommends that you use the MVS Program Binder when installing ExLM base function and maintenance. Failure to do so may result in link-editing errors.

ExLM 6.2 Base Tape Contents

ExLM 6.2 is distributed on a standard label data cartridge with a volume serial number of LM6200. The distribution tape is in SMP/E RELFILE format and includes the files described in Table 9.

Table 9. ExLM 6.2 Base Tape Contents

File	Data Set Name	Description
1	SMPMCS	SMP/E control statements
2	SLM6200.F1	SLM6200 JCLIN
3	SLM6200.F2	SLM6200 load modules
4	SLM6200.F3	ExLM SAMPLIB in IEBCOPY unload format; for more information, see Appendix A, “ExLM SAMPLIB Members” on page 31.
5	SLM6200.F4	ExLM Explorer install executables in IEBCOPY unload format.

ExLM FMID

The ExLM 6.2 software is packaged in standard SMP/E format. The ExLM 6.2 installation tape includes the following FMID:

SLM6200

ExLM 6.2 load modules

Load the ExLM SAMPLIB Data Set

The ExLM 6.2 SAMPLIB (LCM.LCMSAMP) is SMP/E controlled. You can, however, use the JCL in Figure 3 to load a temporary copy of LCM.LCMSAMP from file 4 of the distribution tape to help install ExLM.

LCM.LCMSAMP contains sample JCL members for the ExLM 6.2 installation; see Appendix A, “ExLM SAMPLIB Members” on page 31 for more information.

```
//LCMINSTA JOB
//*****
//*
//* JOB:      LCMINSTA
//*
//* PURPOSE:  LOAD A TEMPORARY COPY OF LCM.LCMSAMP INTO DATA SET
//*           LCM.TEMP.ALCMSAMP SO THAT IT CAN BE USED TO ASSIST
//*           IN THE INSTALLATION OF EXLM.
//*
//* CHANGES: 0 COMPLETE THE JOB STATEMENT.
//*           0 AS CODED, LCM.TEMP.ALCMSAMP WILL BE PLACED ON A
//*           STORAGE VOLUME. CHANGE THIS IF DESIRED.
//*
//*****
//S1      EXEC PGM=IEBCOPY
//SYSPRINT DD  SYSOUT=*
//ALCMSAMP DD  DSN=LCM.TEMP.ALCMSAMP,
//            SPACE=(3120,(250,150,10)),
//            DCB=(RECFM=FB,LRECL=80,BLKSIZE=3120),
//            DISP=(NEW,CATLG,DELETE),UNIT=SYSALLDA
//RELFILE3 DD  DSN=SLM6200.F3,DISP=OLD,
//            VOL=SER=LM6200,UNIT=3480,LABEL=(4,SL)
//SYSIN     DD  *
COPY      INDD=RELFILE3,OUTDD=ALCMSAMP
```

Figure 3. JCL to Unload the ExLM 6.2 SAMPLIB

Note: ExLM installs using standard SMP/E logic and processes. In this section, you load SAMPLIB members into a temporary PDS. These SAMPLIB members include JCL samples for each of the installation steps. You can copy and modify these JCL samples to meet your needs.

Define and Set Up the EXLM SMP/E CSI Environment

You must define and initialize the EXLM62 SMP/E CSI. SAMPLIB member LCMINSTB provides basic JCL and SMP/E control statements for this task. Modify LCMINSTB per the comments and then submit it as a batch job.

Note:

- Ensure that the SMP/E DSSPACE parameter, which specifies the amount of space to be allocated to temporary RELFILE data sets, is set to at least (50,25,50).
- You **must** install EXLM with SMP/E Version 3 Release 1 or higher. For installation from CD-ROM, you **must** have access to USS with “make” and “write” permissions.
- Sun recommends ACCEPTing all EXLM base product components.
- If you install EXLM 6.2 in an SMP/E CSI containing a previous release of ExLM, the previous release is deleted from the target and distribution zones and all SYSMODS for the previous release are deleted from the SMP/E CSI. Sun recommends that you install EXLM 6.2 in a new SMP/E CSI. Products from other vendors should **not** be installed in the same SMP/E CSI as EXLM.

RECEIVE the ExLM 6.2 FMID

Perform the SMP/E RECEIVE of FMID SLM6200 from the Base Tape. SAMPLIB member LCMRCV provides basic JCL and SMP/E control statements for this task.

APPLY CHECK the ExLM 6.2 FMID

Perform the SMP/E APPLY CHECK of the SLM6200 FMID, fix any problems that occur, and rerun the APPLY CHECK until it succeeds. SAMPLB member LCMAPC provides the basic JCL and SMP/E control statements for this task.

APPLY the ExLM 6.2 FMID

Perform the SMP/E APPLY of the SLM6200 FMID. SAMPLIB member LCMAPL provides the basic JCL and SMP/E control statements for this task. When the apply is successful, the SMP/E target libraries contain the data sets described in Table 10.

Table 10. SMP/E Target Library Contents

Data Set Name	Contents
LCM.LCMLINK	Load modules required for ExLM 6.2 execution
LCM.LCMSAMP	Sample material for use with ExLM 6.2.
LCM.LCMGUI	PC workstation self-extracting install executable for ExLM Explorer.

ACCEPT the ExLM 6.2 FMID

Perform the SMP/E ACCEPT of the SLM6200 FMID. This provides the base for future installation of corrective maintenance. SAMPLB member LCMACC provides the basic JCL and SMP/E control statements for this task. When the accept is successful, the SMP/E distribution libraries contain the data sets described in Table 11.

Table 11. SMP/E Distribution Library Contents

Data Set Name	Contents
LCM.ALCLINK	ExLM 6.2 load modules
LCM.ALCSAMP	Sample material for use with ExLM 6.2.
LCM.ALCGUI	PC workstation self-extracting install executable for ExLM Explorer.

Install Current ExLM 6.2 Corrective Maintenance

Perform the SMP/E RECEIVE, APPLY CHECK and APPLY of the accumulated corrective maintenance file (SMPPFTIN) and accumulated external hold data file (HOLDDATA) from the corrective service media shipped with ExLM 6.2 base media **or, preferably, using current PTF and HOLDDATA files for the SLM6200 FMID downloaded from the StorageTek Customer Resource Center website.** SAMPLB member LCMRPTF provides an example of the basic JCL and SMP/E control statements for the receive portion of this task.

Chapter 3. Installing ExLM 6.2 from CD-ROM

This chapter tells how to install ExLM 6.2 from CD-ROM. Use the checklist in Table 12 to help plan and verify completion of ExLM installation from CD-ROM.

Note: Make sure you complete all the tasks in Chapter 1, “Preparing to Install ExLM 6.2” on page 1 *before* you start installing ExLM 6.2 from CD-ROM!

Table 12. ExLM CD-ROM Installation Summary and Checklist

Task	✓ to Verify Completion
“Verify Installation Materials ” on page 16	
“Unload the EXLM Base CD-ROM ” on page 17	
“TSO RECEIVE the LOADSAMP.xmit file ” on page 19	
“RECEIVE the EXLM FMID from USS ” on page 20	
“APPLY CHECK the ExLM 6.2 FMID” on page 15	
“APPLY the ExLM 6.2 FMID” on page 15	
“ACCEPT the ExLM 6.2 FMID” on page 15	
“Unload the Current ExLM 6.2 Corrective Maintenance CD-ROM ” on page 21	
“Install Current ExLM 6.2 Corrective Maintenance” on page 22	

Note: Installing ExLM 6.2 will delete previous versions of ExLM if installed in the same SMP/E zones. StorageTek recommends that you install EXLM Release 6.2 in a new SMP/E CSI as described in the LCMINSTB SAMPLIB member.

Verify Installation Materials

Before installing ExLM, make sure you have the following installation materials:

- EXLM 6.2 base CD-ROM
- ExLM 6.2 current corrective maintenance CD-ROM

Note:

- Contact StorageTek Software Support for information about additional PTFs that might be required before installing ExLM. See the *Requesting Help from Software Support* guide for information about contacting StorageTek for technical support and for requesting changes to software products.
- StorageTek recommends that you use the MVS Program Binder when installing ExLM base function and maintenance. Failure to do so may result in link-editing errors.

EXLM Installation CD-ROM Base Contents

EXLM Release 6.2 is distributed on a single standard CD-ROM. Table 13 lists the files included on this CD-ROM.

Table 13. ExLM 6.2 Installation CD-ROM Contents

File	Data Set Name	Description
1	Documents	The installation documentation for installing EXLM from a CD-ROM
2	EXLM62.gimzip	File containing the complete EXLM product minus samples.
3	EXLM62.pax	Compressed file containing the complete EXLM product suite except ExLM samples are included.
4	Samples	Unix version of EXLM Samples
5	Samples.win	Window version of EXLM Samples (with CR/LF)
6	Start Here.html	HTML starting point to the documents folder

ExLM FMID

The ExLM 6.2 software is packaged in standard SMP/E format. The ExLM 6.2 installation tape includes the following FMID:

SLM6200

ExLM 6.2 load modules

Unload the EXLM Base CD-ROM

The following sections tell how to unload the ExLM base CD-ROM:

- “FTP EXLM62.pax to USS ”
- “Unpack the EXLM62.pax file” on page 18

FTP EXLM62.pax to USS

The EXLM62.pax file contains the ExLM Base and sample JCL.

FTP EXLM62.pax to USS:

1. **Create a USS directory to receive the EXLM62.pax file:**
 - a. Establish network connectivity between your desktop PC and a MVS host and USS.
 - b. Logon to USS by entering OMVS from the TSO READY prompt or enter TSO OMVS from an ISPF command line.
 - c. Use the `mkdir` command to create a new directory. For example, the `mkdir SMPNTS` command creates a new directory named SMPNTS. Use the `pwd` command to show the complete USS path to SMPNTS. Note this path information, which you need in the SMP/E RECEIVE batch job NTSEXLM.
4. **Insert the ExLM 6.2 installation CD into the CD-ROM drive.**
5. **Open a DOS window and `cd` to your CD-ROM.**
6. **Transfer the EXLM62.pax file, in binary, from the CD to the USS directory using the following FTP commands:**

```
ftp mvshost
user
password
cd /uss/userid/SMPNTS
binary
put EXLM62.pax
quit
```
7. **Watch for FTP messages to ensure the successful transfer of EXLM62.pax to the new directory.**

Note: You can also logon on to USS, change directory (`cd`) to the SMPNTS directory and then enter the `ls` command from within the SMPNTS directory. The EXLM62.pax file should be listed.

Unpack the EXLM62.pax file

This section tells how to unpack the EXLM62.pax file.

unpack the EXLM62.pax file:

1. **Log on to USS by entering TSO OMVS from a ISPF command line or OMVS from the TSO READY prompt.**

If you are still logged on to USS and within the SMPNTS directory, go to Step 3. Otherwise, continue with Step 2.

2. **Change directory (cd) to the SMPNTS directory.**
3. **To unpack the EXLM62.pax file.**

```
pax -rv <EXLM62.pax
```

This file will unpack in place and will create the files and directories shown in Table 14 and Table 15.

Table 14. Contents of the EXLM62.gimzip directory

File	Data Set Name	Description
1	GIMPAF.XML	Product attribute file
2	GIMPAF.XSL	Style sheet
3	SMPHOLD	Directory containing SMP/E HOLD data
4	SMPPTFIN	Directory containing SMP/E PTFIN file for each product
5	SMPRELF	Directory containing SMP/E REL files for each product

Table 15. Contents of SMPNTS after unpacking the EXLM62.pax file

File	Data Set Name	Description
1	LOADSAMP.xmit	EXLM Samples formatted for input into the TSO Receive
2	EXLM62.gimzip	Directory Input to the SMP/E Receive process
3	EXLM62.pax	Compressed file FTPed from the install CD

TSO RECEIVE the LOADSAMP.xmit file

After you unpack the EXLM62.pax file, copy the LOADSAMP.xmit file to an MVS PDS data set using the JCL shown in Figure 4.

```
//Your jobcard
//* Turn caps off for this member. Enter CAPS OFF on the command line.
//* Use this JCL member to unload ExLM sample JCL members from USS.
//* You must first FTP the EXLM62.pax file to USS and unpack the file
//* before running this job.
//*
//ALLOCJCL EXEC PGM=IEFBR14,REGION=4000K
//DD1 DD DSN=hlq.EXLM62.SAMPLES,
// DISP=(NEW,CATLG),UNIT=XXXX,VOL=SER=XXXXXX,
// DCB=(LRECL=80,BLKSIZE=27920,RECFM=FB),
// SPACE=(TRK,(9,4,10))
/*
//UNLOAD EXEC PGM=IKJEFT01,COND=(0,NE)
//SYSPRINT DD SYSOUT=*
//SYSTSPRT DD SYSOUT=*
//SYSTSIN DD DATA

ALLOCATE DD(LOADDD) PATHOPTS(ORDONLY) FILEDATA(BINARY) +
PATH('/uss/userid/SMPNTS/LOADSAMP.xmit')
RECEIVE INDD(LOADDD)

                                DSNAME('hlq.EXLM62.SAMPLES) SHR
```

Figure 4. JCL to Copy LOADSAMP.xmit to a PDS

Defining and Setting up the EXLM SMP/E CSI Environment

You must define and initialize the EXLM62 SMP/E CSI. A sample batch job is in hlq.EXLM62.SAMPLES (LCMINSTB). Follow the instructions included in the comments of ALLOCCSI and submit the batch job to define and initialize the SMP/E CSI.

Defining and initializing the SMP/E CSI includes the following steps:

1. Define the required SMP/E data sets.
2. Define the Consolidated Software Inventory (CSI) data set that contains the SMP/E global, target, and distribution zones for this release.
3. Initialize the SMP/E CSI.
4. Add zones, options, utilities, and DDDEF entries to the SMP/E CSI.

RECEIVE the EXLM FMID from USS

Perform the SMP/E RECEIVE of FMID SLM6200 from USS. SAMPLIB member NTSEXLM provides basic JCL and SMP/E control statements for this task. Before submitting this JCL, modify the following:

- SET NTS= to point to your USS path.
- NTSEXLM to point to EXLM62.gimzip.
- The control statements following the SELECT DD statement allow for the selection of the ExLM FMID as input to the SMP/E RECEIVE process. Do the following to change the job to select this FMID:
 - Delete the SYSMODS . /* use this to select all functions */ statement.
 - Delete the /* statement.
 - Delete the //SELECT DD * Select statement for specific FMIDs. statement.

Completing the SMP/E Installation

Complete the installation of the base product using SMP/E APPLYCHECK, APPLY, and ACCEPT steps as described starting on “APPLY CHECK the ExLM 6.2 FMID” on page 13.

Unload the Current ExLM 6.2 Corrective Maintenance CD-ROM

Use the following procedure to unload COVER Letters, HOLDDATA, PTFs, and SUMMARY data directly from your CD-ROM drive to your MVS host.

Unload the Current ExLM 6.2 Corrective Maintenance CD-ROM:

1. Insert the ExLM 6.2 installation CD into the CD-ROM drive.
2. Open a DOS window and cd to your CD-ROM.
3. Transfer the EXLM62.pax file, in binary, from the CD to the USS directory using the following FTP commands:

```
FTP mvshost User Password quote site QUOTESOVERRIDE quote site DATASETMODE
quote site CYLINDERS **** quote site filetype=SEQ ****
quote site blksize=0
****
quote site recfm=FB
****
quote site lrecl=80
****
binary
mput exlm62.cvr
mput exlm62.hdd
mput exlm62.ptf
mput exlm62.smm
quit
```

Note: The quote site statements can be eliminated if the files are pre-allocated.

Executing this sequence of FTP commands copies the following CD-ROM files...

- ex1m62.cvr
- ex1m62.hdd
- ex1m62.ptf
- ex1m62.smm

...to the following data sets on your MVS system:

- hlq.EXLM62.CVR
- hlq.EXLM62.HDD
- hlq.EXLM62.PTF
- hlq.EXLM62.SMM

Current ExLM 6.2 Corrective Maintenance CD-ROM Contents

EXLM 6.2 Current Corrective Maintenance is distributed on a single standard CD-ROM. Table 16 lists the files included on this CD-ROM.

Table 16. Current ExLM 6.2 Corrective Maintenance CD-ROM Content

File	Data Set Name	Description
1	ex1m62.cvr	Cover letters
2	ex1m62.hdd	HOLDDATA
3	ex1m62.ptf	Cumulative Service PTFs
4	ex1m62.smm	Summary

Install Current ExLM 6.2 Corrective Maintenance

Perform the SMP/E RECEIVE, APPLYCHECK and APPLY of the accumulated corrective maintenance file (SMPPFTIN) and accumulated external hold data file (HOLDDATA) from the corrective service media shipped with ExLM 6.2 base media **or, preferably, using current PTF and HOLDDATA files for the SLM6200 FMID downloaded from the StorageTek Customer Resource Center website.** SAMPLB member LCMRPTF provides an example of the basic JCL and SMP/E control statements for the receive portion of this task.

Chapter 4. Performing Post-Installation Tasks

This chapter tells how complete ExLM installation. Use the checklist in Table 17 to help plan and verify completion of your ExLM post-installation tasks.

Table 17. ExLM Post-Installation Checklist

Task	✓ to Verify Completion
“APF Authorize the ExLM 6.2 LINKLIB”	
“Verify the Installation” on page 24	
“Install and Configure ExLM Agent (Optional)” on page 25	
“Install ExLM Explorer (Optional)” on page 29	

APF Authorize the ExLM 6.2 LINKLIB



Caution: Don't forget to do this step, because failing to do so will prevent ExLM from executing!

APF authorize the ExLM LINKLIB by adding it to the ExLM authorized program list (PARMLIB member IEAAPFxx) on your system. For example, if your ExLM LINKLIB is LCM.LCMLINK and is located on volume USR001, SAMPLIB member LCMAPFXX will add this LINKLIB to the authorized program list.

If your installation uses SYS1.PARMLIB member PROG00 to establish APF authorization, use the following statement:

```
APFADD
  DSNAME (LCM.LCMLINK)
  VOLUME (USR001)
```

Use your security system to protect the ExLM LINKLIB by allowing read access to only personnel authorized to manage your ACS.

Exclude the HSC CDSs from EDI

If using the Enhanced Data Integrity (EDI) feature of Z/OS 1.5 or above, all copies of the HSC CDSs must be excluded from EDI processing. For more information, see *DFSMS: Using Data Sets* for the installed version(s) or Z/OS for appropriate entries in the IFGPSEDI PARMLIB member.

Verify the Installation

You can customize ExLM SAMPLIB member LCMRUN and run it to verify ExLM 6.2 installation. LCMRUN runs ExLM with the CHECK option, which prevents ExLM from making any changes to the LSM, the HSC database, or the tape management system files. For more information about the CHECK option, see *ExLM User's Guide*. LCMRUN runs with ExLM default management techniques and default reports.

Before invoking LCMRUN, modify the job as follows:

- Provide the data set name of your system's TMC or VMF.
- Verify that the data set names on the STEPLIB DD statement for ExLM and HSC are correct for your system.
- Supply the name of the parameter file to use for verification. Select the appropriate verification parameter file from the provided SAMPLIB member described Table 18.
- StorageTek recommends that you allocate **at least** 32 MB of region to run effectively. Some larger environments may require a larger region size to be specified.

Table 18. SAMPLIB Member Parameter Files

Tape Management System	SAMPLIB Member
CA-1	LCMVCA1
CA-TLMS	LCMVTLMS
DFSMSrmm	LCMVRMM
TMS CUSTOM	LCMVCUST
TMS COMMON	LCMVCOMM
none	LCMVNTMS

Install and Configure ExLM Agent (Optional)

This section tells how to install and configure ExLM Agent. The ExLM Agent is an MVS started task that can access TMS information from multiple MVS hosts without shared DASD. The base ExLM program executes on the same MVS host as HSC and communicates with an ExLM Agent on each host via TCP/IP. Each instance of an ExLM Agent operates as a started task on the MVS host it is serving.

Install ExLM base as described this guide *before* you install and configure ExLM Agent. For information on ExLM Agent commands, see *ExLM User's Guide*.



Caution: The host running the ExLM batch job **must be** at the same version as the hosts running the ExLM Agent. ExLM Agent on hosts with ExLM 4.0 installed are incompatible with batch jobs run on hosts with ExLM 5.0.0 and above installed.

Use the following procedure to install and configure ExLM Agent.

install and configure ExLM Agent:

1. **For OS/390 eNetwork Communications Server V2R6 or higher and above, ensure that the OpenEdition root file system is installed.**

The ExLM Agent requires the OpenEdition root file installed in full-function mode. See *IBM Open Edition Planning Guide* for more information about creating an HFS root file, modifying the BPXPRMxx PARMLIB member, and creating the root file system directories.

2. **Create the ExLM Agent access codes data set by customizing SAMPLIB member LCMCODES.**

Ensure that the access codes data set specifies a list of hosts authorized to retrieve information for each defined access code. After creating the ExLM Agent access code data set, populate the data set with a string of random characters that will be used for the access codes. Also ensure that the access codes data set specifies a list of hosts authorized to retrieve information for each defined access code. An exact copy of this data set should exist on both the ExLM Agent host and the host running the ExLM batch job. The ExLM batch job will use the access codes when communicating with the ExLM Agent. If the access codes being used on both sides do not match, access to the remote TMS information will be denied by the ExLM Agent.

3. **Use your system security software (such as RACF, ACF-2, or TopSecret) to give READ access to referenced data sets to the user ID associated with an ExLM Agent started task.**

These data sets include the ExLM Agent access codes data set you created in Step 2 and any TMCs that the ExLM Agent accesses.

Also use your system security software to give:

- WRITE access to the access codes data set to personnel who maintain access codes.
- READ access to the access codes data set to ExLM jobs.

4. **Create an ExLM Agent started task procedure by customizing SAMPLIB member LCMAGENT.**

For more information, see “ExLM Agent Started Task Parameters” on page 28.

Note:

- You must specify the security code data set (DDname LCMSECUR) in the JCL for both the ExLM Agent started task and the batch job for base ExLM. For example:
//LCMSECUR DD DSN=<agent access code file>,DISP=SHR
 - If you use the custom TMS module interface, include the correct load module containing the custom TMS module in the STEPLIB ddname.
 - When starting more than one Agent in a shared environment, each Agent should have its own uniquely named dump dataset.
5. **Install the agent started task procedure in your system PROCLIB.**
 6. **To connect the ExLM batch job to an ExLM Agent, do one of the following:**
 - Specify the following TMS statement parameters in the ExLM job:
 - For CA1, use TMCDSN to identify the data set name of the ExLM Agent's TMS catalog.
 - For TLMS, use VMFDSN to identify the data set name of the ExLM Agent's TMS catalog.
 - For all other TMS types, use DSN to identify the data set name of the ExLM Agent's TMS catalog.
 - In Explorer, use the Access tab of the TMS property sheet.
 7. **If you specified a value other than the default port (3002) in Step 6, insert a service entry (“exlm-agent”) for this port number in your TCP/IP ETC.SERVICES file.**

For example:

```
exlm-agent 4096/tcp # ExLM Agent
```

8. Optionally, you can reserve the ExLM Agent's TCP/IP port for the ExLM Agent's exclusive use with the PORT statement in your TCP/IP configuration profile.

StorageTek recommends doing so to avoid port conflicts. In the following example, the first column is the PORT number:

```
PORT
7 UDP MISC SERV ; Miscellaneous Server
.
3002 TCP LCMAGENT ; ExLM Agent ***** ADD THIS LINE **
```

Note: You must restart your TCP/IP address space or use the OBEYFILE command or the MVS VARY TCPIP command to force a running TCP/IP address space to reserve the added port number.

9. Optionally, you can have the TCP/IP address space monitor the ExLM Agent.

StorageTek recommends doing so, because this configuration causes the ExLM Agent started task to automatically start or stop when the TCP/IP address space starts or stops. In addition, the TCP/IP address space periodically queries the state of ExLM Agent, and restarts it if not active. You can set up this configuration in the AUTOLOG statement in the TCP/IP configuration profile.

For example:

```
AUTOLOG
    FTPSERVE ; FTP Server
    LPSERVE ; LPD Server
    NAMESRV ; Domain Name Server
    NCPROUT ; NCPROUTE Server
    PORTMAP ; Portmap Server
    ROUTED ; Routed Server
    RXSERVE ; Remote Execution Server
    SMTP ; SMTP Server
    SNMPD ; SNMP Agent Server
    SNMPQE ; SNMP Client
    MISC SERV ; Miscellaneous Server
    LCMAGENT ; ExLM Agent *****ADD THIS LINE *****
ENDAUTOLOG
```

ExLM Agent Started Task Parameters

The following list describes the execution parameters you can specify in the ExLM Agent started task JCL via PARM=’’ on the EXEC statement.

PORT

specifies the port number for client connections. The default is 3002.

UPPERCASE

specifies that messages are in uppercase.

MODLEVEL

displays the service level for the ExLM Agent.

MAXCONN

specifies the maximum number of concurrent client connections. The default is 50.

LOG(SYSTEM|DD)

specifies the routing for messages.

SYSTEM

routes messages to the system console.

DD

routes messages to the ddname LWSLOG (the default).

SWAPpable

specifies that the ExLM Agent is swappable during idle periods. The default is non-swappable.

OPTFILE('filename') or OPTFILE(DD:ddname)

Specifies a fully qualified MVS dataset or MVS ddname that contains execution parameters for the ExLM Agent. This statement allows you to bypass the JCL parameter length limitations when coding a large number of execution parameters. If coding a ddname instead of dataset name, you must prefix it with "DD:". For example: OPTFILE(DD:LCMOPTS).

Install ExLM Explorer (Optional)

ExLM Explorer is provided in member LCMXPLR of the LCMGUI data set. Updates to the ExLM Explorer are distributed as PTFs that replace this member. You can determine the build level of ExLM Explorer that is installed on a workstation by viewing the “About ExLM Explorer” item in its Help menu.

update ExLM Explorer on a workstation:

1. **Install the ExLM PTF that contains the Explorer update on an MVS host running ExLM.**
2. **FTP a copy of the LCMXPLR member of the LCMGUI data set to each PC running Explorer and rename the member to EXLMINST.EXE as follows:**

```
ftp <host name>
User: <userid>
Password: <password>
ftp> binary
ftp> get 'LCM.LCMGUI(LCMXPLR)' EXLMINST.EXE
ftp> quit
```

3. **On each workstation run EXLMINST.EXE and follow the instructions in the setup wizard.**

Allocate the Explorer Configuration File Library

ExLM Explorer produces a configuration file that must reside on the MVS host used to execute ExLM runs. The library used to store configuration files should be a PDS. Allocation information can be found in the SAMPLIB member LCMINSTH.

Install the JCL Procedure for Jobs Submitted by the Explorer

ExLM Explorer 6.2 can submit ExLM batch jobs. This function requires that you place a cataloged procedure to invoke ExLM in SYS1.PROCLIB or another suitable location such as a private JCLLIB. SAMPLIB member LCMEXEC contains a sample JCL procedure.

Note: The JCL contained in the cataloged procedure in SYS1.PROCLIB (LCMEXEC) must contain the same DD statements that are necessary to run the batch ExLM application. This includes, but is not limited to, such DD statements as LCMTMSDB (tape management system catalog), LCMSECUR (ExLM Agent access code file), and, if you are using the SMC 6.2 UUI, the SMCLINK DD card (points to the SMC 6.2 libraries).

Appendix A. ExLM SAMPLIB Members

The ExLM SAMPLIB member LCMINDEX contains the members described in Table 19.

Table 19. ExLM SAMPLIB Members

Member	Description
LCMACC	Sample control statement for SMP/E ACCEPT.
LCMAGENT	Sample ExLM Agent started task procedure.
LCMAPC	Sample control statement for SMP/E APPLY CHECK.
LCMAPFXX	Sample ExLM authorized library list entry.
LCMAPL	Sample control statement for SMP/E APPLY.
LCMCGI	Sample CGI script for TMS OPEN host.
LCMCHGS	Cumulative documentation changes for the release as PTFs are applied
LCMCODES	Sample ExLM Agent access code file.
LCMEJECT	Sample JCL procedure for the ExLM eject utility.
LCMEEXEC	<p>Sample JCL procedure for use with jobs submitted by the ExLM Explorer, as well as other ExLM jobs submitted by an installation. LCMEEXEC pre-defines certain items that are common to all ExLM runs at the installation.</p> <p>For example, if ExLM is installed in a library that is not included in the linklist or LPA list, LCMEEXEC should have a STEPLIB pointing to the production ExLM load library.</p> <p>DD statements that are dynamically allocated by most ExLM jobs or are different from one ExLM job to the next should not be in LCMEEXEC.</p>
LCMINSTx	<p>Sample jobs that can be used to install ExLM in its own set of SMP/E zones and data sets.</p> <p>Note: Use of the LCMINSTx jobs is optional, and they are provided for user convenience in performing the necessary SMP/E functions associated with the installation of this version of ExLM. Care should be taken that neither the documented SMP/E installation steps nor local installation procedures are bypassed when using these jobs.</p>
LCMKST	Documents the key values for each extended field. LCMKST contains a list of equates for all extended fields. All extended fields will have a key greater than 0 associated with them. For more information, see “Guidelines for Producing TMCI Records” in Appendix C. Data Areas of <i>ExLM User’s Guide</i> .
LCMMTHF	Macro for defining the layout of a method file record. For more information, see “METHODFILE Record” in Appendix C. Data Areas of <i>ExLM User’s Guide</i> .
LCMRVCV	Sample control statement for SMP/E RECEIVE.
LCMRPTF	Sample JCL to receive PTFs from a PUT tape.

Table 19. ExLM SAMPLIB Members

LCMRUN	Sample JCL to run ExLM.
LCMSMPE	Sample SMP/E JCL procedure used with LCMINSTx jobs.
LCMTIDR	Sample TMS Interface Definition Response xml document.
LCMTMCI	Macro for defining the layout of an ExLM TMC information record.
LCMTTIR	Sample TMS Tape Information Response xml document.
LCMUX01P	Macro for defining the parameter list used by the ExLM TMS CUSTOM interface. For more information, see “TMS CUSTOM Interface Module Parameters” in Chapter 3 of the <i>User’s Guide</i> .
LCMUX01S	Sample assembler program for use with the ExLM TMS CUSTOM interface.
LCMVAUTM	ExLM parameter file for IVP with Automedia.
LCMVCA1	ExLM parameter file for IVP with CA-1.
LCMVCOMM	ExLM parameter file for IVP with common-format TMS extract files.
LCMVCONT	ExLM parameter file for IVP with Control-T
LCMVCUST	ExLM parameter file for IVP with ExLM custom tape management system interfaces (a tape management system vendor supplied user exit is required).
LCMVNTMS	ExLM parameter file for IVP without a TMS.
LCMVRMM	ExLM parameter file for IVP with DFSMSrmm.
LCMVTLMS	ExLM parameter file for IVP with CA-TLMS.
LCMXDMD	ExLM parameter file for demand (or shift) run.
LCMXDVLD	ExLM parameter file for vaulting run with special data sets.
LCMXDVLS	ExLM parameter file for vaulting run with multiple subpools.
LCMXDVLT	ExLM parameter file for daily vaulting run
LCMXRAC1	ExLM parameter file for a post action report.
LCMXREJ1	ExLM parameter file for an eject report that includes data set name.
LCMXREJ2	ExLM parameter file for a report of volumes ejected for need by data set name.
LCMXREN1	ExLM parameter file for a report of volumes on a Pull List that were not already in an LSM.
LCMXRMT1	ExLM parameter file for a summary report with counts of several methods.
LCMXRSM1	ExLM parameter file for an LSM summary report.
LCMXRSR1	ExLM parameter file for a non-LSM scratch list report.

Table 19. ExLM SAMPLIB Members

LCMXRVR1	ExLM parameter file for a report of all volumes with HSC and TMS information.
LCMXSYNC	ExLM parameter file for scratch synchronization
LCMXTMUL	Sample source for the built in REPORT MULTIPLE template.
LCMXTPHY	Sample source for the built in REPORT PHYSICAL template.
LCMXTVIR	Sample source for the built in REPORT VIRTUAL template.

Sun Microsystems, Inc. 4150 Network Circle, Santa Clara, CA 95054 USA Phone 1-650-960-1300 or 1-800-555-9SUN Web sun.com



ARGENTINA: 5411-4317-5636 • AUSTRALIA: 1-800-550-786 • AUSTRIA: 43-1-601-26-0 • BALKANS: 301-6188-111 • BELGIUM: 32-2-704 89 83 • BRAZIL: 55-11-51872100 • BRUNEI: 65-216-8333 • CANADA: 1-800-422-8020 (GENERAL); 416-964-2001 (LEARNING MANAGEMENT SYSTEM SALES, TORONTO) • CHILE: 562-372-4500 • COLOMBIA: 571-629-2323
CZECH REPUBLIC: 420 2 33009311 • DENMARK: 45 4556 5040 • EGYPT: 00 202 570 9442 • FINLAND: 358-9-525-551 • FRANCE: 33-1-41-33-17-17 • GERMANY: 49-89-460-08-2788 • GREECE: 30-01-6188101 • HONG KONG: 852-2877-7077 • HUNGARY: 361-202-4415 • INDIA: 91-80-229-8989 • INDONESIA: 65-216-8333 • IRELAND: 353-1-668-4377
ISRAEL: 972-9-9710500 • ITALY: 39-02-9259511 • JAPAN: 81-3-5779-1820 • KOREA: 82-2-3453-6602 • MALAYSIA: 603-2116-1887 • MIDDLE EAST: 00 9714 3366333 • MEXICO: 525-261-0344 • NETHERLANDS: 31-33-4515200 • NEW ZEALAND: 0800-786-338 • NORTH WEST AFRICA: 00 9714 3366333 • NORWAY: FROM NORWAY: 47-22023950, TO NORWAY: 47-23369650 • PAKISTAN: 00-9714-3366333 • PEOPLE'S REPUBLIC OF CHINA: 8610-6803-5588 • PHILIPPINES: 632-885-7867 • POLAND: 48-22-8747848 • PORTUGAL: 351-21-413-4000 • RUSSIA: 7-095-935-8411 • SAUDI ARABIA: 00 9714 3366333 • SINGAPORE: 65-216-8300 • SOUTH AFRICA: 27-11-256-6300 • SPAIN: 34-902-210-412 • SRI LANKA: 65-2168333 • SWEDEN: 46-8-631 22 00 • SWITZERLAND: 41-1-908-90-50 (GERMAN) 41-22-999-0444 (FRENCH) • TAIWAN: 886-2-25185735 • THAILAND: 662-344-6855 • TURKEY: 90 212 335 22 00 • UNITED KINGDOM: 44-1276-416-520 • UNITED STATES: 1-800-422-8020 • VENEZUELA: 582-905-3800 • VIETNAM: 65-216-8333 • WORLDWIDE HEADQUARTERS: 1-650-960-1300

SUN™ THE NETWORK IS THE COMPUTER ©2006 Sun Microsystems, Inc. All rights reserved. Sun, Sun Microsystems, and the Sun logo are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and other countries.