

FRONT SHIPPING BRACKET

Temporary Screw Storage



Short M 6 Screws




Short 10-32 Screws

Front and Rear Shipping Bracket Removal


#2 Phillips (plus) driver.



1 Remove 4 short screws from temporary storage location.

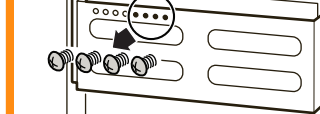


2 1. Remove 4 long screws.
2. Remove Front Shipping Bracket.

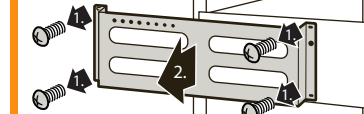

3 Use the 4 short screws to re-secure system to rack.



4 Remove Upper and Lower Rear Shipping Brackets.

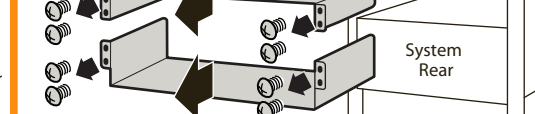

FRONT SHIPPING BRACKET

Temporary Screw Storage



Short M 6 Screws




Short 10-32 Screws

Front and Rear Shipping Bracket Removal


#2 Phillips (plus) driver.



1 Remove 4 short screws from temporary storage location.

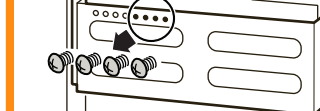

2 1. Remove 4 long screws.
2. Remove Front Shipping Bracket.

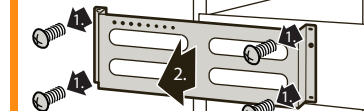

3 Use the 4 short screws to re-secure system to rack.



4 Remove Upper and Lower Rear Shipping Brackets.

