

Sun Ethernet Fabric Operating System

VRRP Administration Guide



Part No.: E25209-02
August 2012

Copyright © 2010, 2011, Oracle and / or its affiliates. All rights reserved.

This software and related documentation are provided under a license agreement containing restrictions on use and disclosure and are protected by intellectual property laws. Except as expressly permitted in your license agreement or allowed by law, you may not use, copy, reproduce, translate, broadcast, modify, license, transmit, distribute, exhibit, perform, publish, or display any part, in any form, or by any means. Reverse engineering, disassembly, or decompilation of this software, unless required by law for interoperability, is prohibited.

The information contained herein is subject to change without notice and is not warranted to be error-free. If you find any errors, please report them to us in writing.

If this is software or related software documentation that is delivered to the U.S. Government or anyone licensing it on behalf of the U.S. Government, the following notice is applicable:

U.S. GOVERNMENT RIGHTS Programs, software, databases, and related documentation and technical data delivered to U.S. Government customers are "commercial computer software" or "commercial technical data" pursuant to the applicable Federal Acquisition Regulation and agency-specific supplemental regulations. As such, the use, duplication, disclosure, modification, and adaptation shall be subject to the restrictions and license terms set forth in the applicable Government contract, and, to the extent applicable by the terms of the Government contract, the additional rights set forth in FAR 52.227-19, Commercial Computer Software License (December 2007). Oracle America, Inc., 500 Oracle Parkway, Redwood City, CA 94065.

This software or hardware is developed for general use in a variety of information management applications. It is not developed or intended for use in any inherently dangerous applications, including applications which may create a risk of personal injury. If you use this software or hardware in dangerous applications, then you shall be responsible to take all appropriate fail-safe, backup, redundancy, and other measures to ensure its safe use. Oracle Corporation and its affiliates disclaim any liability for any damages caused by use of this software or hardware in dangerous applications.

Oracle and Java are registered trademarks of Oracle and/or its affiliates. Other names may be trademarks of their respective owners.

Intel and Intel Xeon are trademarks or registered trademarks of Intel Corporation. All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. AMD, Opteron, the AMD logo, and the AMD Opteron logo are trademarks or registered trademarks of Advanced Micro Devices. UNIX is a registered trademark of The Open Group.

This software or hardware and documentation may provide access to or information on content, products, and services from third parties. Oracle Corporation and its affiliates are not responsible for and expressly disclaim all warranties of any kind with respect to third-party content, products, and services. Oracle Corporation and its affiliates will not be responsible for any loss, costs, or damages incurred due to your access to or use of third-party content, products, or services.

Copyright © 2010, 2011, Oracle et / ou ses affiliés. Tous droits réservés.

Ce logiciel et la documentation qui l'accompagne sont protégés par les lois sur la propriété intellectuelle. Ils sont concédés sous licence et soumis à des restrictions d'utilisation et de divulgation. Sauf disposition de votre contrat de licence ou de la loi, vous ne pouvez pas copier, reproduire, traduire, diffuser, modifier, breveter, transmettre, distribuer, exposer, exécuter, publier ou afficher le logiciel, même partiellement, sous quelque forme et par quelque procédé que ce soit. Par ailleurs, il est interdit de procéder à toute ingénierie inverse du logiciel, de le désassembler ou de le décompiler, excepté à des fins d'interopérabilité avec des logiciels tiers ou tel que prescrit par la loi.

Les informations fournies dans ce document sont susceptibles de modification sans préavis. Par ailleurs, Oracle Corporation ne garantit pas qu'elles soient exemptes d'erreurs et vous invite, le cas échéant, à lui en faire part par écrit.

Si ce logiciel, ou la documentation qui l'accompagne, est concédé sous licence au Gouvernement des Etats-Unis, ou à toute entité qui délivre la licence de ce logiciel ou l'utilise pour le compte du Gouvernement des Etats-Unis, la notice suivante s'applique :

U.S. GOVERNMENT RIGHTS. Programs, software, databases, and related documentation and technical data delivered to U.S. Government customers are "commercial computer software" or "commercial technical data" pursuant to the applicable Federal Acquisition Regulation and agency-specific supplemental regulations. As such, the use, duplication, disclosure, modification, and adaptation shall be subject to the restrictions and license terms set forth in the applicable Government contract, and, to the extent applicable by the terms of the Government contract, the additional rights set forth in FAR 52.227-19, Commercial Computer Software License (December 2007). Oracle America, Inc., 500 Oracle Parkway, Redwood City, CA 94065.

Ce logiciel ou matériel a été développé pour un usage général dans le cadre d'applications de gestion des informations. Ce logiciel ou matériel n'est pas conçu ni n'est destiné à être utilisé dans des applications à risque, notamment dans des applications pouvant causer des dommages corporels. Si vous utilisez ce logiciel ou matériel dans le cadre d'applications dangereuses, il est de votre responsabilité de prendre toutes les mesures de secours, de sauvegarde, de redondance et autres mesures nécessaires à son utilisation dans des conditions optimales de sécurité. Oracle Corporation et ses affiliés déclinent toute responsabilité quant aux dommages causés par l'utilisation de ce logiciel ou matériel pour ce type d'applications.

Oracle et Java sont des marques déposées d'Oracle Corporation et / ou de ses affiliés. Tout autre nom mentionné peut correspondre à des marques appartenant à d'autres propriétaires qu'Oracle.

Intel et Intel Xeon sont des marques ou des marques déposées d'Intel Corporation. Toutes les marques SPARC sont utilisées sous licence et sont des marques ou des marques déposées de SPARC International, Inc. AMD, Opteron, le logo AMD et le logo AMD Opteron sont des marques ou des marques déposées d'Advanced Micro Devices. UNIX est une marque déposée d'The Open Group.

Ce logiciel ou matériel et la documentation qui l'accompagne peuvent fournir des informations ou des liens donnant accès à des contenus, des produits et des services émanant de tiers. Oracle Corporation et ses affiliés déclinent toute responsabilité ou garantie expresse quant aux contenus, produits ou services émanant de tiers. En aucun cas, Oracle Corporation et ses affiliés ne sauraient être tenus pour responsables des pertes subies, des coûts occasionnés ou des dommages causés par l'accès à des contenus, produits ou services tiers, ou à leur utilisation.



Contents

Using This Documentation 1

- Product Notes 1
- Related Documentation 2
- Acronyms and Abbreviations 2
- CLI Command Modes 3
- Feedback 3
- Support and Accessibility 4

Protocol Description 5

- Introduction 5

Configuring VRRP 7

- Introduction 7
 - VRRP Topology 7
 - Configuration Guidelines 8
 - Default Configuration Values 8
 - ▼ Create VRRP Instance Over an Interface 9
 - ▼ Configure Additional Associated IP Addresses to a VRRP Instance 12
 - ▼ Configure VRRP Priority 13
 - ▼ Enable Preempt Mode 15
 - ▼ Configure Authentication Password for VRRP Tickets 16
 - ▼ Configure VRRP Advertisement Interval 18

Using This Documentation

VRRP is an implementation of the RFC 2338 specification. VRRP provides full support of the draft VRRP MIB specification and enables network load balancing. This guide describes the basic and advanced configuration tasks of VRRP. A basic knowledge of the protocol is a prerequisite.

- “Product Notes” on page 1
 - “Related Documentation” on page 2
 - “Acronyms and Abbreviations” on page 2
 - “CLI Command Modes” on page 3
 - “Feedback” on page 3
 - “Support and Accessibility” on page 4
-

Product Notes

For late-breaking information and known issues about the following products, refer to the product notes at:

Sun Network 10GbE Switch 72p:

<http://www.oracle.com/pls/topic/lookup?ctx=SN-10GbE-72p>

Related Documentation

Documentation	Links
All Oracle products	http://oracle.com/documentation
Sun Blade 6000 Ethernet Switched NEM 24p 10GbE	http://www.oracle.com/pls/topic/lookup?ctx=SB6K-24p-10GbE
Sun Network 10GbE Switch 72p	http://www.oracle.com/pls/topic/lookup?ctx=SN-10GbE-72p
Sun Blade 6000 modular system	http://www.oracle.com/pls/topic/lookup?ctx=sb6000
Oracle Integrated Lights Out Manager (Oracle ILOM) 3.0	http://www.oracle.com/pls/topic/lookup?ctx=ilom30

For detailed information about the commands and options described in this document, refer to the *Sun Ethernet Fabric Operating System CLI Base Reference Manual*.

Acronyms and Abbreviations

Acronym or Abbreviation	Explanation
CLI	Command-line interface
IP	Internet Protocol
LAN	Local area network
MAC	Media access control
MIB	Management information base
SEFOS	Sun Ethernet Fabric Operating System
VRID	Virtual router identifier
VRRP	Virtual Router Redundancy Protocol

CLI Command Modes

The following table lists the configuration modes used in this document with their access and exit methods.

Command Mode	Access Method	Prompt	Exit Method
User EXEC	Access SEFOS from Oracle ILOM with read-only rights (privilege level 1).	SEFOS>	Use logout or exit to return to the Oracle ILOM prompt.
Privileged EXEC	Access SEFOS from Oracle ILOM with full administrative rights (privilege level 15).	SEFOS#	Use the logout or exit command to return to the Oracle ILOM prompt.
Global Configuration	From User EXEC mode, use the enable command.	SEFOS(config)#	Use the end command to return to Privileged EXEC mode.
Interface Configuration	From Global Configuration mode, use the interface interface-type interface-id command.	SEFOS(config-if)#	Use the exit command to return to Global Configuration mode, or use the end command to return to Privileged EXEC mode.
VRRP Router Configuration	From Global Configuration mode, use the router VRRP command.	SEFOS(config-vlan)#	Use the exit command to return to Global Configuration mode, or use the end command to return to Privileged EXEC mode.
VRRP Interface Configuration	From VRRP Router Configuration mode, use the command interface vlan vlan-id command.	SEFOS(config-vrrp-if)#	Use the exit command to return to Global Configuration mode, or use the end command to return to Privileged EXEC mode.

Feedback

Provide feedback on this documentation at:

<http://www.oracle.com/goto/docfeedback>

Support and Accessibility

Description	Links
Access electronic support through My Oracle Support	http://support.oracle.com For hearing impaired: http://www.oracle.com/accessibility/support.html
Learn about Oracle's commitment to accessibility	http://www.oracle.com/us/corporate/accessibility/index.html

Protocol Description

This section provides an introduction to protocol description:

- “Introduction” on page 5
-

Introduction

VRRP is an election protocol that dynamically assigns responsibility for a virtual router to one of the VRRP routers on a LAN. This elected router is called the master router, and others are called backup routers. The master router is responsible for forwarding data packets received for the VRRP MAC address. Backup routers listen for the advertisement packet from the master router. If backup routers do not receive advertisement packets for a certain period, the backup routers elect a new master router. VRRP is designed to provide a highly available default first hop route for end-hosts on the LAN.

SEFOS VRRP is Oracle’s implementation of VRRP.

Configuring VRRP

The following section provides an introduction to configuring VRRP:

- “[Introduction](#)” on page 7
-

 
Introduction


The following procedures show how to configure VRRP:

- “[VRRP Topology](#)” on page 7
- “[Configuration Guidelines](#)” on page 8
- “[Default Configuration Values](#)” on page 8
- “[Create VRRP Instance Over an Interface](#)” on page 9
- “[Configure Additional Associated IP Addresses to a VRRP Instance](#)” on page 12
- “[Configure VRRP Priority](#)” on page 13
- “[Enable Preempt Mode](#)” on page 15
- “[Configure Authentication Password for VRRP Tickets](#)” on page 16
- “[Configure VRRP Advertisement Interval](#)” on page 18
- “[Configure VRRP \(Linux Example\)](#)” on page 19

VRRP Topology

The following figures are examples of the VRRP topology.



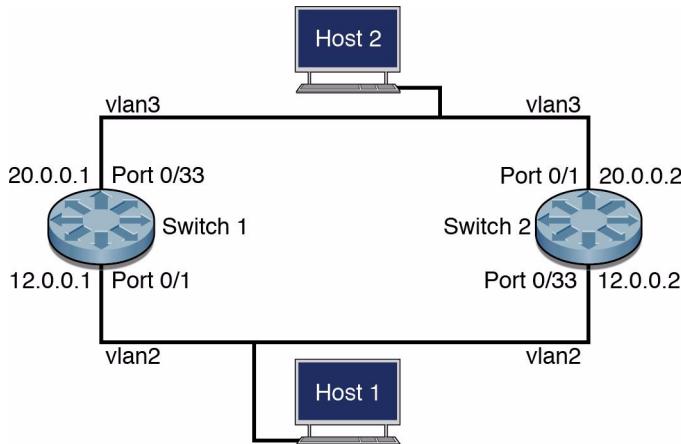

Configuration Guidelines

Refer to the Sun Ethernet Fabric Operating System CLI Enterprise Reference Manual for a complete set of commands and options for configuring VRRP.

The command `vrrp vrid(1-255) ipv4 ip-address` must be entered for the current interface (with the correct vrid) before the execution of any commands in Interface Configuration mode.

This section shows the default configuration values:

Default Configuration Values

Feature	Default Setting
VRRP status	Disabled
VRRP Priority	100
Preempt mode	Enabled
Authentication	None
Advertisement interval	1 second

▼ Create VRRP Instance Over an Interface

See the first figure in “[VRRP Topology](#)” on page 7 for the topology used in this example.

1. Enable VRRP to configure an instance over a VLAN interface.

```
SEFOS# configure terminal
SEFOS(config)# router vrrp
```

2. Select an interface to configure VRRP and enter Interface Configuration mode.

```
SEFOS(config-vrrp)# interface vlan 2
```

3. Create a VRRP instance and specify a virtual IP address.

```
SEFOS(config-vrrp-if)# vrrp 2 ipv4 12.0.0.5
SEFOS(config-vrrp-if)# end
```

4. View the VRRP configurations and states in switch 1.

```
SEFOS# show vrrp interface vlan 2
P indicates configured to preempt
Interface  vrID Priority  P  State      Master Addr      VRouter Addr
-----  -----  -----  -  -----  -----  -----
vlan2      1       100      P  Backup     12.0.0.5      12.0.0.5
```

Alternatively, you can display the detailed configuration information.

```
SEFOS# show vrrp interface vlan 2 detail
vlan2  - vrID 1
-----
State is Backup
Virtual IP address is 12.0.0.5
Virtual MAC address is 00:00:5e:00:01:01
Master router is 12.0.0.5
Associated Ip Addresses :
-----
12.0.0.5
Advertise time is 1 secs
Current priority is 100
Configured priority is 100, may preempt
Accept Mode Disabled
```

You can display the configuration statistics.

```
SEFOS# show vrrp interface vlan 2 statistics
vlan2  - vrID 1
-----
Transitions to Master          : 0
Advertisements Received        : 441
Advertise Internal Errors     : 0
Authentication Failures       : 0
TTL Errors                     : 0
Zero Priority Packets Received: 0
Zero Priority Packets Sent    : 0
Invalid Type Packets Received: 0
Address List Errors           : 0
Invalid Authentication Type   : 0
Authentication Type Mismatch  : 0
Packet Length Errors          : 0
```

The counter for Advertisements Received increases for every second in switch 1.

5. View the VRRP configurations in switch 2.

```
SEFOS# show vrrp interface vlan 2
P indicates configured to preempt

Interface  vrID Priority  P  State      Master Addr  VR Router Addr
-----  -----  -----  -  -----  -----  -----
vlan2       1     100      P  Master    local        12.0.0.5
```

Alternatively, you can display the detailed configuration information.

```
SEFOS# show vrrp interface vlan 2 detail
vlan2  - vrID 1
-----
State is Master
Virtual IP address is 12.0.0.5
Virtual MAC address is 00:00:5e:00:01:01
Master router is 12.0.0.5
Associated IpAddresses :
-----
12.0.0.5
Advertise time is 1 secs
Current priority is 100
Configured priority is 100, may preempt
Accept Mode Disabled
```

You can display the configuration statistics.

```
SEFOS# show vrrp interface vlan 2 statistics
vlan2  - vrID 1
-----
Transitions to Master          : 1
Advertisements Received        : 0
Advertise Internal Errors     : 0
Authentication Failures       : 0
TTL Errors                     : 0
Zero Priority Packets Received: 0
Zero Priority Packets Sent     : 0
Invalid Type Packets Received: 0
Address List Errors           : 0
Invalid Authentication Type    : 0
Authentication Type Mismatch   : 0
Packet Length Errors          : 0
```

The counter for Advertisements Received does not increase for every second in switch 2. Maximum number of instances allowed in a router is 10.

▼ Configure Additional Associated IP Addresses to a VRRP Instance

A VRRP instance can be associated with more than one IP address. When the router becomes master for an instance, then it replies to the ARP request(s) for all the associated IP addresses.

See the first figure in “[VRRP Topology](#)” on page 7 for the topology used in this example.

1. In both switches, configure additional associated IP addresses to a VRRP instance.

- a. Enter Global Configuration mode.

```
SEFOS# configure terminal
```

- b. Enable VRRP and enter VRRP Configuration mode.

```
SEFOS(config)# router vrrp
```

- c. Select an interface to configure VRRP and enter Interface Configuration mode.

```
SEFOS(config-vrrp)# interface vlan 2
```

- d. Create a VRRP instance and specify a virtual IP address to configure.

```
SEFOS(config-vrrp-if)# vrrp 1 ipv4 12.0.0.5
```

- e. Add an additional associated IP address 12.0.0.6 to the VRRP instance.

```
SEFOS(config-vrrp-if)# vrrp 1 ipv4 12.0.0.6 secondary
```

- f. Exit Interface Configuration mode.

```
SEFOS(config-vrrp-if)# end
```

2. View the VRRP associated IP addresses in switch 1.

```
SEFOS# show vrrp interface vlan 2 detail
```

```
vlan2 - vrID 1
```

```
-----
```

```
State is Backup
Virtual IP address is 12.0.0.5
Virtual MAC address is 00:00:5e:00:01:01
Master router is 12.0.0.5
Associated IpAddresses :
-----
12.0.0.5
12.0.0.6
Advertise time is 1 secs
Current priority is 100
Configured priority is 100, may preempt
Accept Mode Disabled
```

3. View the VRRP associated IP addresses in switch 2.

```
SEFOS# show vrrp interface vlan 2 detail
vlan2 - vrID 1
-----
State is Master
Virtual IP address is 12.0.0.5
Virtual MAC address is 00:00:5e:00:01:01
Master router is 12.0.0.5
Associated IpAddresses :
-----
12.0.0.5
12.0.0.6
Advertise time is 1 secs
Current priority is 100
Configured priority is 100, may preempt
Accept Mode Disabled
```

Maximum number of associated IP addresses per instance is 10.

▼ Configure VRRP Priority

See the first figure in “[VRRP Topology](#)” on page 7 for the topology used in this example. You can configure a VRRP instance with a priority so that the router with higher priority will become the master for that instance. You can configure the priority from 1 to 254, with 1 being the lowest priority. A priority of 255 is used for the router that owns the associated IP addresses.

1. Type the following commands in switch 1 to configure VRRP instance 1’s priority as 200.

- a. Enter Global Configuration mode.

```
SEFOS# configure terminal
```

- b. Enter Router Configuration mode.

```
SEFOS(config)# router vrrp
```

- c. Enter Interface Configuration mode for VLAN 2.

```
SEFOS(config-vrrp)# interface vlan 2
```

- d. Configure the priority as 200.

```
SEFOS(config-vrrp-if)# vrrp 1 priority 200
```

- e. Exit Interface Configuration mode.

```
SEFOS(config-vrrp-if)# end
```

2. Type the following commands in switch 2 to configure the priority for VRRP instance 1 as 150.

- a. Enter Global Configuration mode.

```
SEFOS# configure terminal
```

- b. Enter Router Configuration mode.

```
SEFOS(config)# router vrrp
```

- c. Enter Interface Configuration mode for VLAN 2.

```
SEFOS(config-vrrp)# interface vlan 2
```

- d. Configure the priority as 150.

```
SEFOS(config-vrrp-if)# vrrp 1 priority 150
```

- e. Exit Interface Configuration mode.

```
SEFOS(config-vrrp-if)# end
```

3. View the priority in switch 1.

```
SEFOS# show vrrp interface vlan 2
P indicates configured to preempt

Interface vrID Priority P State Master Addr VRouter Addr
----- - ----- - -----
vlan2 1 200 P Master local 12.0.0.5
```

4. View the priority in switch 2.

```
SEFOS# show vrrp interface vlan 2
P indicates configured to preempt

Interface vrID Priority P State Master Addr VRouter Addr
----- - ----- - -----
vlan2 1 150 P Backup 12.0.0.5 12.0.0.5
```

▼ Enable Preempt Mode

See the first figure in “[VRRP Topology](#)” on page 7 for the topology in this example. You can configure VRRP to preempt the existing router. This means that if a new VRRP router is added to the network with priority higher than the existing routers, then the new router becomes the master. If preemption is disabled, then the new router will not become a master. This router becomes master only when the current master is down, that is, only when it does not receive any advertisement packets from the current master. By default, preempt mode is enabled.

1. In switch 1 and switch 2, enable preempt mode.

```
SEFOS# configure terminal
SEFOS(config)# router vrrp
SEFOS(config-vrrp)# interface vlan 2
SEFOS(config-vrrp-if)# vrrp 1 preempt
SEFOS(config-vrrp-if)# end
```

2. View the preemption status in switch 1.

```
SEFOS# show vrrp interface vlan 2 detail
vlan2 - vrID 1
-----
State is Master
Virtual IP address is 12.0.0.5
Virtual MAC address is 00:00:5e:00:01:01
```

```
Master router is 12.0.0.5
Associated IpAddresses :
-----
12.0.0.5
12.0.0.6
Advertise time is 1 secs
Current priority is 200
Configured priority is 200, may preempt
Accept Mode Disabled
```

3. View the preemption status in switch 2.

```
SEFOS# show vrrp interface vlan 2 detail
vlan2 - vrID 1
-----
State is Backup
Virtual IP address is 12.0.0.5
Virtual MAC address is 00:00:5e:00:01:01
Master router is 12.0.0.5
Associated IpAddresses :
-----
12.0.0.5
12.0.0.6
Advertise time is 1 secs
Current priority is 150
Configured priority is 150, may preempt
Accept Mode Disabled
```

▼ Configure Authentication Password for VRRP Tickets

See the first figure in “[VRRP Topology](#)” on page 7 for the topology in this example. You can configure VRRP text authentication to authenticate VRRP packets. An advertisement packet will get discarded if the authentication key in the packet does not match with the locally configured value.

1. In switch 1 and in switch 2, configure the authentication password or key as **text1**.

```
SEFOS# configure terminal
SEFOS(config)# router vrrp
SEFOS(config-vrrp)# interface vlan 2
SEFOS(config-vrrp-if)# vrrp 1 text-authentication text1
SEFOS(config-vrrp-if)# end
```

2. View the authentication key configured in switch 1.

```
SEFOS# show vrrp interface vlan 2 detail
vlan2 - vrID 1
-----
State is Master
Virtual IP address is 12.0.0.5
Virtual MAC address is 00:00:5e:00:01:01
Master router is 12.0.0.5
Associated IpAddresses :
-----
12.0.0.5
12.0.0.6
Advertise time is 1 secs
Current priority is 200
Configured priority is 200, may preempt
Configured Authentication
Authentication key is text1
Accept Mode Disabled
```

3. View the authentication key configured in switch 2.

```
SEFOS# show vrrp interface vlan 2 detail
vlan2 - vrID 1
-----
State is Backup
Virtual IP address is 12.0.0.5
Virtual MAC address is 00:00:5e:00:01:01
Master router is 12.0.0.5
Associated IpAddresses :
-----
12.0.0.5
12.0.0.6
Advertise time is 1 secs
Current priority is 150
Configured priority is 150, may preempt
Configured Authentication
Authentication key is text1
Accept Mode Disabled
```

▼ Configure VRRP Advertisement Interval

See the first figure in “[VRRP Topology](#)” on page 7 for the topology in this example. You can configure VRRP master router to send an advertisement packet at regular intervals to convey to the backup routers that the master is alive. By default, this interval is 1 second. You can configure this value in the range 1 to 255. In this example, you set the advertisement interval to 5 seconds on VLAN 2.

1. In both switches, configure the advertisement interval.

```
SEFOS# configure terminal
SEFOS(config)# router vrrp
SEFOS(config-vrrp)# interface vlan 2
SEFOS(config-vrrp-if)# vrrp 1 timer 5
SEFOS(config-vrrp-if)# end
```

2. View the advertisement timer interval configured in switch 1.

```
SEFOS# show vrrp interface vlan 2 detail
vlan2 - vrID 1
-----
State is Master
Virtual IP address is 12.0.0.5
Virtual MAC address is 00:00:5e:00:01:01
Master router is 12.0.0.5
Associated IpAddresses :
-----
12.0.0.5
12.0.0.6
Advertise time is 5 secs
Current priority is 200
Configured priority is 200, may preempt
Configured Authentication
Authentication key is text1
Accept Mode Disabled
```

3. View the advertisement timer interval configured in switch 2.

```
SEFOS# show vrrp interface vlan 2 detail
vlan2 - vrID 1
-----
State is Backup
Virtual IP address is 12.0.0.5
Virtual MAC address is 00:00:5e:00:01:01
Master router is 12.0.0.5
Associated IpAddresses :
```

```
-----  
12.0.0.5  
12.0.0.6  
Advertise time is 5 secs  
Current priority is 150  
Configured priority is 150, may preempt  
Configured Authentication  
Authentication key is text1  
Accept Mode Disabled
```

▼ Configure VRRP (Linux Example)

See the second figure in “[VRRP Topology](#)” on page 7 for the topology in this example. Hosts are used to verify that the data is forwarded correctly. In this example, you use a Linux machine as a host. Port 1 of switch 1, port 1 of switch 2, and the host 1 are connected through a hub. Similarly, port 2 of switch 1, port 2 of switch 2, and host 2 are connected through another hub. In this topology, switch 1 and switch 2 act as a virtual router in vlan 2 and vlan 3. The virtual IP is 12.0.0.3 for vlan 2 and the IP is 20.0.0.3 for vlan 3. The priority of switch 1 is 150 and the priority of switch 2 is 125. Initially, switch 1 will forward the data traffic between host 1 and host 2. If switch 1 fails to operate for some reason, switch 2 will start forwarding the packets.

Note – Note that in the output of the show commands, the sections concerning the default VLAN (vlan 1) and the ports that are members of that VLAN are omitted.

1. In switch 1, configure vlan 2 and vlan 3 and assign the member ports and IP addresses. Be sure to disable spanning tree and GVRP, if they are running in the switch.

```
SEFOS# configure terminal  
SEFOS(config)# no spanning-tree  
SEFOS(config)# set gvrp disable  
SEFOS(config)# vlan 2  
SEFOS(config-vlan)# ports extreme-ethernet 0/1 untagged  
extreme-ethernet 0/1  
SEFOS(config-vlan)# exit  
SEFOS(config)# interface vlan2  
SEFOS(config-if)# shutdown  
SEFOS(config-if)# ip address 12.0.0.1 255.0.0.0  
SEFOS(config-if)# no shutdown  
SEFOS(config-if)# exit  
SEFOS(config-if)# vlan 3
```

```

SEFOS(config-if)# ports extreme-ethernet 0/33 untagged
extreme-ethernet 0/33
SEFOS(config-if)# interface extreme-ethernet 0/33
SEFOS(config)# switchport access vlan 3
SEFOS(config-vlan)# no shutdown
SEFOS(config-vlan)# exit
SEFOS(config)# interface vlan 3
SEFOS(config-if)# shutdown
SEFOS(config-if)# ip address 20.0.0.1 255.0.0.0
SEFOS(config-if)# no shutdown
SEFOS(config)# end

```

2. Verify the VLAN configurations.

```

SEFOS# show ip interface
vlan2 is up, line protocol is up
Internet Address is 12.0.0.1/8
SEFOS# show vlan brief
Broadcast Address 12.255.255.255
Vlan database
-----
Vlan ID : 2
Member Ports : Ex0/1
Untagged Ports : Ex0/1
Forbidden Ports : None
Name :
Status : Permanent
-----
Vlan ID : 3
Member Ports : Ex0/33
Untagged Ports : Ex0/33
Forbidden Ports : None
Name :
Status : Permanent
-----
vlan3 is up, line protocol is up
Internet Address is 20.0.0.1/8
Broadcast Address 20.255.255.255

```

3. In switch 2, configure vlan 2 and vlan 3 and assign the ports and IP address. Be sure to disable spanning tree and GVRP if they are running in the switch.

```

SEFOS# configure terminal
SEFOS(config)# no spanning-tree
SEFOS(config)# set gvrp disable
SEFOS(config)# vlan 2

```

```

SEFOS(config-vlan)# ports extreme-ethernet 0/33 untagged
extreme-ethernet 0/33
SEFOS(config-vlan)# exit
SEFOS(config)# interface extreme-ethernet 0/33
SEFOS(config-if)# switchport access vlan 2
SEFOS(config-if)# no shutdown
SEFOS(config-if)# exit
SEFOS(config)# interface vlan 2
SEFOS(config-if)# shutdown
SEFOS(config-if)# ip address 12.0.0.2 255.0.0.0
SEFOS(config-if)# no shutdown
SEFOS(config-if)# exit
SEFOS(config)# vlan 3
SEFOS(config-vlan)# ports extreme-ethernet 0/1 untagged
extreme-ethernet 0/1
SEFOS(config-vlan)# exit
SEFOS(config)# interface extreme-ethernet 0/1
SEFOS(config-if)# switchport access vlan 3
SEFOS(config-if)# no shutdown
SEFOS(config-if)# exit
SEFOS(config)# interface vlan 3
SEFOS(config-if)# shutdown
SEFOS(config-if)# ip address 20.0.0.2 255.0.0.0
SEFOS(config-if)# no shutdown
SEFOS(config-if)# end

```

4. Verify the configuration.

```

SEFOS# show ip interface
vlan2 is up, line protocol is up
Internet Address is 12.0.0.2/8
SEFOS# show vlan briefBroadcast Address 12.255.255.255
Vlan database
-----
Vlan ID : 2
Member Ports : Ex0/33
Untagged Ports : Ex0/33
Forbidden Ports : None
Name :
Status : Permanent
-----
Vlan ID : 3
Member Ports : Ex0/1
Untagged Ports : Ex0/1
Forbidden Ports : None
Name :
Status : Permanent
-----
```

```
vlan3 is up, line protocol is up  
Internet Address is 20.0.0.2/8  
Broadcast Address 20.255.255.255
```

5. In switch 1, verify the connectivity between switch 1 and switch 2.

```
SEFOS# ping 12.0.0.2  
Reply Received From :12.0.0.2, TimeTaken : 50 msec  
Reply Received From :12.0.0.2, TimeTaken : 40 msec  
SEFOS# ping 20.0.0.2Reply Received From :12.0.0.2, TimeTaken : 40  
msec  
Reply Received From :20.0.0.2, TimeTaken : 50 msec  
Reply Received From :20.0.0.2, TimeTaken : 30 msec  
Reply Received From :20.0.0.2, TimeTaken : 30 msec
```

6. Enable VRRP instances over vlan2 and vlan3 in switch 1 and configure the IP addresses and priority.

```
SEFOS# configure terminal  
SEFOS(config)# router vrrp  
SEFOS(config-vrrp)# interface vlan 2  
SEFOS(config-vrrp-if)# vrrp 1 ipv4 12.0.0.3  
SEFOS(config-vrrp-if)# vrrp 1 priority 150  
SEFOS(config-vrrp-if)# exit  
SEFOS(config-vrrp)# interface vlan 3  
SEFOS(config-vrrp-if)# vrrp 1 ip 20.0.0.3  
SEFOS(config-vrrp-if)# vrrp 1 priority 150  
SEFOS(config-vrrp-if)# end
```

7. Verify the VRRP configurations in switch 1.

```
SEFOS# show vrrp  
P indicates configured to preempt  
Interface vrID Priority P State Master Addr VRouter Addr  
----- ----- ----- - ----- -----  
vlan2 1 150 P Master local 12.0.0.3  
vlan3 1 150 P Master local 20.0.0.3
```

8. Enable VRRP instances over vlan 2 and vlan 3 in switch 2, and configure the IP addresses and priority.

```
SEFOS# configure terminal  
SEFOS(config)# router vrrp  
SEFOS(config-vrrp)# interface vlan 2  
SEFOS(config-vrrp-if)# vrrp 1 ipv4 12.0.0.3
```

```

SEFOS(config-vrrp-if)# vrrp 1 priority 125
SEFOS(config-vrrp-if)# exit
SEFOS(config-vrrp)# interface vlan 3
SEFOS(config-vrrp-if)# vrrp 1 ipv4 20.0.0.3
SEFOS(config-vrrp-if)# vrrp 1 priority 125
SEFOS(config-vrrp-if)# end

```

9. Verify the VRRP configurations in switch 2.

SEFOS# show vrrp						
P indicates configured to preempt						
Interface	vrID	Priority	P	State	Master Addr	VRouter Addr
vlan2	1	125	P	Backup	12.0.0.3	12.0.0.3
vlan3	1	125	P	Backup	20.0.0.3	20.0.0.3

10. In host 1, configure an interface with 12.0.0.100 and add a route to the host 2 network through 12.0.0.3.

- a. Execute these Linux commands in host 1 (a Linux machine is used as a host).

```

[root@host1 root]# /sbin/ifconfig eth0 12.0.0.100
[root@host1 root]# /sbin/route add -net 20.0.0.0 netmask 255.0.0.0
gw 12.0.0.3

```

- b. Verify the configurations using these Linux commands.

```

[root@host1 root]# /sbin/ifconfig
eth0      Link encap:Ethernet HWaddr 00:10:B5:66:A7:28
          inet addr:12.0.0.100 Bcast:12.255.255.255 Mask:255.0.0.0
[root@host1 root]# /sbin/route -nUP BROADCAST RUNNING MULTICAST
MTU:1500 Metric:1
Kernel IP routing table
Destination     Gateway     Genmask       Flags Metric Ref    Use Iface
12.0.0.0        0.0.0.0    255.0.0.0    U      0      0        0 eth0
20.0.0.0        12.0.0.3   255.0.0.0    UG     0      0        0 eth0
RX packets:35 errors:0 dropped:0 overruns:0 frame:0
TX packets:80 errors:0 dropped:0 overruns:0 carrier:0
collisions:0 txqueuelen:100
RX bytes:2974 (2.9 Kb) TX bytes:6092 (5.9 Kb)
Interrupt:15 Base address:0xbd00

```

11. In host 2, configure an interface with 20.0.0.100 and add a route to the host 1 network through 20.0.0.3.

a. Execute these Linux commands in host 2 (another Linux machine).

```
[root@host2 root]# /sbin/ifconfig eth0 20.0.0.100
[root@host2 root]# /sbin/route add -net 12.0.0.0 netmask 255.0.0.0
gw 20.0.0.3
```

b. Verify the configurations using these Linux commands.

```
[root@host2 root]# /sbin/ifconfig
eth0      Link encap:Ethernet HWaddr 00:10:B5:66:A7:28
          inet addr:20.0.0.100 Bcast:20.255.255.255 Mask:255.0.0.0
[root@host2 root]# /sbin/route -n
          Kernel IP routing table
          Destination     Gateway         Genmask        Flags Metric Ref    Use Iface
          20.0.0.0       0.0.0.0        255.0.0.0      U      0      0        0 eth0
          12.0.0.0       20.0.0.3       255.0.0.0      UG     0      0        0 eth0
          RX packets:35 errors:0 dropped:0 overruns:0 frame:0
          TX packets:80 errors:0 dropped:0 overruns:0 carrier:0
          collisions:0 txqueuelen:100
          RX bytes:2974 (2.9 Kb) TX bytes:6092 (5.9 Kb)
          Interrupt:15 Base address:0xbd00
```

12. Initiate 25 ping packets from host 1 to host 2.

```
[root@host2 root]# ping 20.0.0.100 -c 25
PING 20.0.0.100 (20.0.0.100) from 12.0.0.100 : 56(84) bytes of
data.
64 bytes from 20.0.0.100: icmp_seq=1 ttl=63 time=79.0 ms
64 bytes from 20.0.0.100: icmp_seq=2 ttl=63 time=25.4 ms
64 bytes from 20.0.0.100: icmp_seq=3 ttl=63 time=25.7 ms
```

13. During the ping session, shutdown vlan 2 and vlan 3 in switch 1.

```
SEFOS# configure terminal
SEFOS(config)# interface vlan 2
SEFOS(config-if)# shutdown
SEFOS(config-if)# exit
SEFOS(config)# interface vlan 3
SEFOS(config-if)# shutdown
SEFOS(config-if)# end
```

- 14. Observe whether the ping is still successful after a small black hole period (connectivity loss between the hosts).**

```
64 bytes from 20.0.0.100: icmp_seq=4 ttl=63 time=27.6 ms
64 bytes from 20.0.0.100: icmp_seq=5 ttl=63 time=24.8 ms
64 bytes from 20.0.0.100: icmp_seq=13 ttl=63 time=49.7 ms
64 bytes from 20.0.0.100: icmp_seq=14 ttl=63 time=30.3 ms
64 bytes from 20.0.0.100: icmp_seq=15 ttl=63 time=24.3 ms
64 bytes from 20.0.0.100: icmp_seq=16 ttl=63 time=31.3 ms
64 bytes from 20.0.0.100: icmp_seq=17 ttl=63 time=25.9 ms
64 bytes from 20.0.0.100: icmp_seq=18 ttl=63 time=30.3 ms
64 bytes from 20.0.0.100: icmp_seq=19 ttl=63 time=33.7 ms
64 bytes from 20.0.0.100: icmp_seq=20 ttl=63 time=28.8 ms
64 bytes from 20.0.0.100: icmp_seq=21 ttl=63 time=22.9 ms
64 bytes from 20.0.0.100: icmp_seq=22 ttl=63 time=25.3 ms
64 bytes from 20.0.0.100: icmp_seq=23 ttl=63 time=30.0 ms
64 bytes from 20.0.0.100: icmp_seq=24 ttl=63 time=22.3 ms
64 bytes from 20.0.0.100: icmp_seq=25 ttl=63 time=26.5 ms

--- 20.0.0.100 ping statistics ---
25 packets transmitted, 18 received, 28% loss, time 24045ms
rtt min/avg/max/mdev = 22.342/31.370/79.070/13.006 ms
```

- 15. Verify that the ARP table in host 1 for 12.0.0.3 is resolved with the VRRP MAC address.**

```
[root@host1 root]# /sbin/arp -an
? (12.0.0.3) at 00:00:5E:00:01:01 [ether] on eth0
```

- 16. Verify that the ARP table in host 2 for 20.0.0.3 is resolved with the VRRP MAC address.**

```
[root@host2 root]# /sbin/arp -an
? (20.0.0.3) at 00:00:5E:00:01:01 [ether] on eth0
```

Alternatively, use the following steps to set up host 1 with a system running Solaris 10 and using an nxge 10GbE interface.

- a. **Configure the interface with 12.0.0.100 as its IP address and add a route to the host 2 network through 12.0.0.3.**

```
root@unknown:~# ifconfig nxge0 plumb 12.0.0.100 up
root@unknown:~# route add net 20.0.0.0/8 12.0.0.3
```

b. Verify the configuration.

```
root@unknown:~# ifconfig nxge0
nxge0: flags=1000843<UP,BROADCAST,RUNNING,MULTICAST,IPv4> mtu
1500 index 6
    inet 12.0.0.100 netmask ff000000 broadcast 12.255.255.255
root@unknown:~# netstat -rn
Routing Table: IPv4
Destination      Gateway      Flags  Ref  Use   Interface
-----  -----  -----  ---  ---   -----
12.0.0.0        12.0.0.100  U      5    16   nxge0
20.0.0.0        12.0.0.3   UG     2    1343
127.0.0.1       127.0.0.1  UH     2    3100  lo0
```

c. Verify that the ARP entry for the gateway is the VRRP MAC address.

```
root@unknown:~# arp -an
Net to Media Table: IPv4
Device  IP Address  Mask          Flags  Phys Addr
-----  -----  -----  -----
nxge0   12.0.0.1   255.255.255.255 00:21:28:77:c3:bd
nxge0   12.0.0.2   255.255.255.255 00:14:4f:6c:d0:4d
nxge0   12.0.0.3   255.255.255.255 00:00:5e:00:01:01
nxge0   12.0.0.100 255.255.255.255 SPLA   00:14:4f:9b:de:b2
```