

**StorageTek Virtual Library Extension**  
Configuring the Host Software for VLE

**E49180-02**

February 2014

StorageTek Virtual Library Extension Configuring the Host Software for VLE

E49180-02

Copyright © 2013, 2014, Oracle and/or its affiliates. All rights reserved.

This software and related documentation are provided under a license agreement containing restrictions on use and disclosure and are protected by intellectual property laws. Except as expressly permitted in your license agreement or allowed by law, you may not use, copy, reproduce, translate, broadcast, modify, license, transmit, distribute, exhibit, perform, publish, or display any part, in any form, or by any means. Reverse engineering, disassembly, or decompilation of this software, unless required by law for interoperability, is prohibited.

The information contained herein is subject to change without notice and is not warranted to be error-free. If you find any errors, please report them to us in writing.

If this is software or related documentation that is delivered to the U.S. Government or anyone licensing it on behalf of the U.S. Government, the following notice is applicable:

U.S. GOVERNMENT END USERS: Oracle programs, including any operating system, integrated software, any programs installed on the hardware, and/or documentation, delivered to U.S. Government end users are "commercial computer software" pursuant to the applicable Federal Acquisition Regulation and agency-specific supplemental regulations. As such, use, duplication, disclosure, modification, and adaptation of the programs, including any operating system, integrated software, any programs installed on the hardware, and/or documentation, shall be subject to license terms and license restrictions applicable to the programs. No other rights are granted to the U.S. Government.

This software or hardware is developed for general use in a variety of information management applications. It is not developed or intended for use in any inherently dangerous applications, including applications that may create a risk of personal injury. If you use this software or hardware in dangerous applications, then you shall be responsible to take all appropriate fail-safe, backup, redundancy, and other measures to ensure its safe use. Oracle Corporation and its affiliates disclaim any liability for any damages caused by use of this software or hardware in dangerous applications.

Oracle and Java are registered trademarks of Oracle and/or its affiliates. Other names may be trademarks of their respective owners.

Intel and Intel Xeon are trademarks or registered trademarks of Intel Corporation. All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. AMD, Opteron, the AMD logo, and the AMD Opteron logo are trademarks or registered trademarks of Advanced Micro Devices. UNIX is a registered trademark of The Open Group.

This software or hardware and documentation may provide access to or information on content, products, and services from third parties. Oracle Corporation and its affiliates are not responsible for and expressly disclaim all warranties of any kind with respect to third-party content, products, and services. Oracle Corporation and its affiliates will not be responsible for any loss, costs, or damages incurred due to your access to or use of third-party content, products, or services.

---

---

# Contents

<b>Preface</b> .....	vii
Audience .....	vii
Documentation Accessibility .....	vii
<b>1 What is Virtual Library Extension?</b>	
<b>VLE Hardware and Software</b> .....	1-2
<b>Single Node VLE Configuration</b> .....	1-3
<b>Multi-Node VLE Systems</b> .....	1-4
<b>VLE to VLE Data Transfer</b> .....	1-5
<b>VTV Encryption</b> .....	1-6
<b>VTV Deduplication</b> .....	1-6
<b>Early Time To First Byte (ETTFB)</b> .....	1-6
<b>Frame Size Control</b> .....	1-7
<b>2 Configuring the MVS Host Software</b>	
<b>Key Configuration Values</b> .....	2-1
Subsystem Name .....	2-1
VTSS Ethernet Port Addresses .....	2-1
IP Addresses of VLE Ports for Host (UUI) Communication .....	2-1
VMVC Volsers .....	2-1
VMVC Reclamation Threshold .....	2-2
VTV Deduplication .....	2-2
Early Time to First Byte (ETTFB) .....	2-2
<b>MVS Host Software Configuration Tasks</b> .....	2-2
Acquire the ELS supporting PTFs for VLE 1.4 .....	2-3
Updating the SMC OMVS RACF Security Entry .....	2-3
Modifying the SMC SCMDS file .....	2-3
Updating the VTCS CONFIG Deck to Define VLE .....	2-4
Specifying the Reclamation Policy for VMVCS .....	2-6
Defining the VLE VMVCs to the MVS Host Software and Including VMVCs in an MVC Pool ...	
2-6	
Creating VMVC Volume Pools (7.0 and Above) .....	2-6
Updating the MVS Host Software Policies .....	2-6
Creating Storage and Management Classes for VLE .....	2-7
FROMLST Parameter Use .....	2-8

Routing Data to VLE..... 2-9

## List of Figures

1-1	VLE Subsystem Architecture .....	1-3
1-2	Single Node VLE in a VSM System .....	1-4
1-3	VLE Multi-Node Complex .....	1-5

## List of Tables

2-1	ELS Supporting PTFs for VLE 1.4.....	2-3
-----	--------------------------------------	-----

---

---

# Preface

This preface introduces this guide.

## Audience

This guide is for StorageTek or customer personnel who are responsible for configuring the MVS host software for Oracle's StorageTek Virtual Library Extension (VLE).

## Documentation Accessibility

For information about Oracle's commitment to accessibility, visit the Oracle Accessibility Program website at

<http://www.oracle.com/pls/topic/lookup?ctx=acc&id=docacc>.

### Access to Oracle Support

Oracle customers have access to electronic support through My Oracle Support. For information, visit <http://www.oracle.com/pls/topic/lookup?ctx=acc&id=info> or visit <http://www.oracle.com/pls/topic/lookup?ctx=acc&id=trs> if you are hearing impaired.



---

---

## What is Virtual Library Extension?

Oracle's StorageTek Virtual Library Extension (VLE) is back-end disk storage for VTSS. VLE provides:

- An additional storage tier in the VSM solution. VTVs can now migrate from VTSS to VLE to provide fast access to recent data. Additionally, VTVs can transition from VLE storage to tape media (MVCs) for long term archive. You can control how VTVs are migrated and archived through the existing HSC Management and Storage Classes, providing full backward compatibility with previous configurations.
- Back-end disk storage shared between multiple VTSS systems ensuring high-availability access to data.

---

---

**Note:** For VLE 1.1 and above, a "VLE" is a collection of nodes interconnected with a private network.

---

---

To VTCS, a VLE looks like a tape library except that the VTVs are stored in Virtual Multi-Volume Cartridges (VMVCs) on disk. With VLE, you can configure either a VLE and tape or a VLE only (for example, with Tapeless VSM configurations) back-end VTV storage solution. A VTSS can migrate VTVs to and recall them from a VLE, just as is done with a real tape library.

---

**Caution:**

- **Note that** if you have a VLE system, HSC/VTCS uses SMC communication services to communicate with the VLE. To ensure that these services are available during VTCS startup, Oracle recommends that you first issue the start command for HSC, then immediately issue the start command for SMC, while HSC is initializing.
  - **Also note that** stopping SMC stops VTCS from sending messages to the VLE, which effectively stops data transfer. Therefore, you should ensure that VTCS activity is quiesced or VTCS is terminated before stopping SMC.
  - You cannot use AT-TLS with the SMC HTTP server if you are using VLE.
  - **Note that** in Tapeless VSM configurations, if you have only a single-node VLE attached to a specific VTSS and that VLE goes offline, you lose access to any VTVs migrated to the VLE that are not resident in the VTSS until the VLE comes back online.
- 

The VLE solution consists of:

- Virtual Tape Storage Subsystem (VTSS) hardware and microcode
- Virtual Tape Control Subsystem (VTCS) software and Storage Management Component (SMC)
- VLE hardware and software

## VLE Hardware and Software

The VLE, which is a factory-assembled unit in a Sun Rack II Model 1242, consists of the following hardware:

- A server built on a Sun Server X2-4 platform.
- Four 1GigE ports for a combination of SMC UII connections and service connections.
- A service (ILOM) port.
- Four Quad-port 1GigE cards, which provide 16 Ethernet ports for data transfer.
- One or more Oracle Storage Drive Enclosure DE2-24Cs (DE2-24C) that contain disk (HDDs) in a ZFS RAID array, scalable in effective capacities starting at 200TB for a single JBOD VLE (assuming a 4 to 1 compression ratio when the data is migrated to the VLE).
- Two dual-port 10GigE Network Adapter (NIC) cards per server, which are required for the internal network connections for VLEs with 2 or more nodes (or, with the Oracle switch, for 3 or more nodes).
- A DVD drive.


The VLE software consists of:

- Oracle Solaris 11 Operating System.
- ZFS file system and MySQL database.

- The VLE application software.

Figure 1–1 shows the VLE subsystem architecture.

**Figure 1–1 VLE Subsystem Architecture**

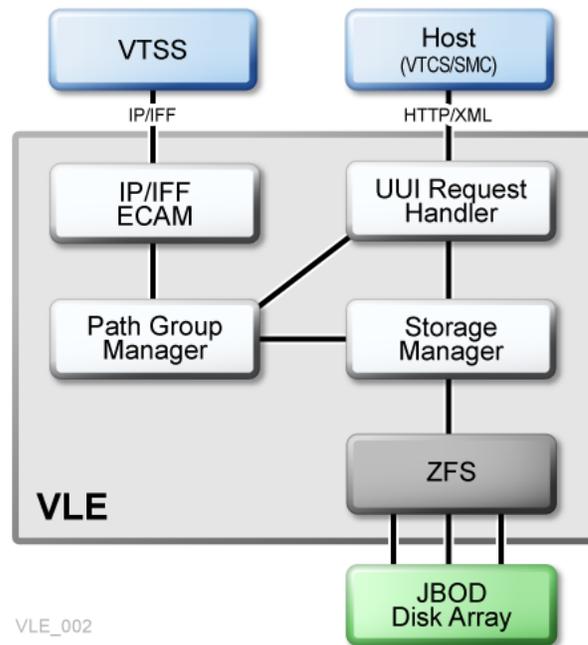

As Figure 1–1 shows, the VLE application software is comprised of:

- HTTP/XML is the data protocol for host to VLE communications.
- The Universal User Interface (UI) Request Handler, which processes UI requests from and produces responses to Storage Management Component (SMC) and Virtual Tape Control Software (VTCS). The UI Request Handler determines which VLE components are used to service a request.


UI Request Handler calls:

- The PathGroup Manager to schedule VTV migrates and recalls. The PathGroup Manager manages all Path Groups, where each Path Group manages a single VTV data transfer between the VTSS and the VLE.
- The Storage Manager to schedule all report generation.
- The VLE Storage Manager component manages the VMVC/VTV data and meta data on the VLE. The VLE Storage Manager stores VTV data on and retrieves it from the ZFS on the JBOD array.
- TCP/IP/IFF is the data protocol for host to VLE communications, where the IP/IFF/ECAM component handles communications between the VTSS and the VLE.

## Single Node VLE Configuration

Figure 1–2 shows a single node VLE configuration.

Figure 1-2 Single Node VLE in a VSM System

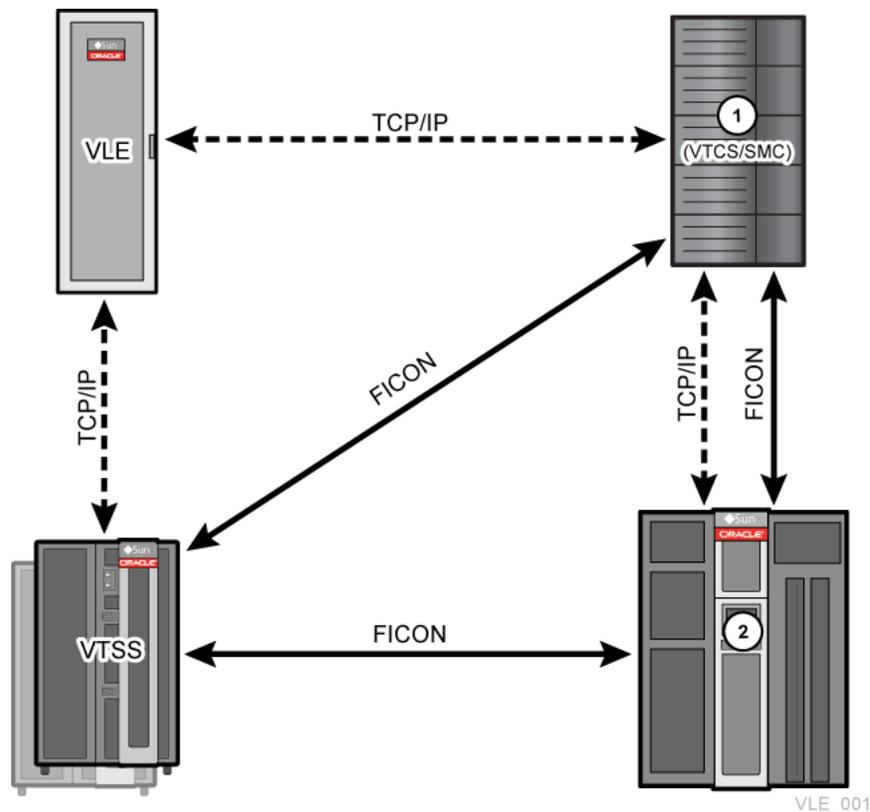

As Figure 1-2 shows (where 1 is the MVS host and 2 is the library):

- Multiple TCP/IP connections (between the VTSS's IP ports and the VLE's IP ports) are supported as follows:
  - A single VLE can connect up to 8 VTSSs, so VTSSs can share VLEs.
  - A single VTSS can connect to up to 4 VLEs to increase buffer space for heavy workloads.
- A single VTSS can be attached to:
  - Only RTDs
  - Only other VTSSs (clustered)
  - Only VLEs
  - Any combination of the above.
- TCP/IP is the only supported protocol for connections between the VLE and the VTSS and for connections between the VLE and hosts running SMC and VTCS.

## Multi-Node VLE Systems

- Multi-node VLE systems **enable massive scaling of the VLE storage system**. You can construct *multi-node systems* that can consist of one to 64 nodes, with multiple nodes interconnected by a private network. A multi-node VLE appears to SMC/VTCS as a single VLE. **For Version 1.4**, the VLE now ships with 4Tb JBODs. A single VLE, therefore, **can scale between 200 TB (for a one JBOD system) and 100 PB (for a fully populated 64-node VLE)**.

---


**Note:** These are effective capacities, assuming 4:1 compression. **Also note** that VLE is **architected** for up to 64 nodes, but has only been **validated** for up to 7 nodes.

---

Figure 1-3 shows a VLE multi-node complex, where the nodes are cross connected into a dedicated 10GE switch so that each node can access any other node in the complex, where:

- 1 - MVS Host
- 2 - Remote VLE
- 3 - Public Network
- 4 - Private Network
- 5 - VLE Multi-Node Grid
- 6 - Virtual Tape Storage System

**Figure 1-3 VLE Multi-Node Complex**

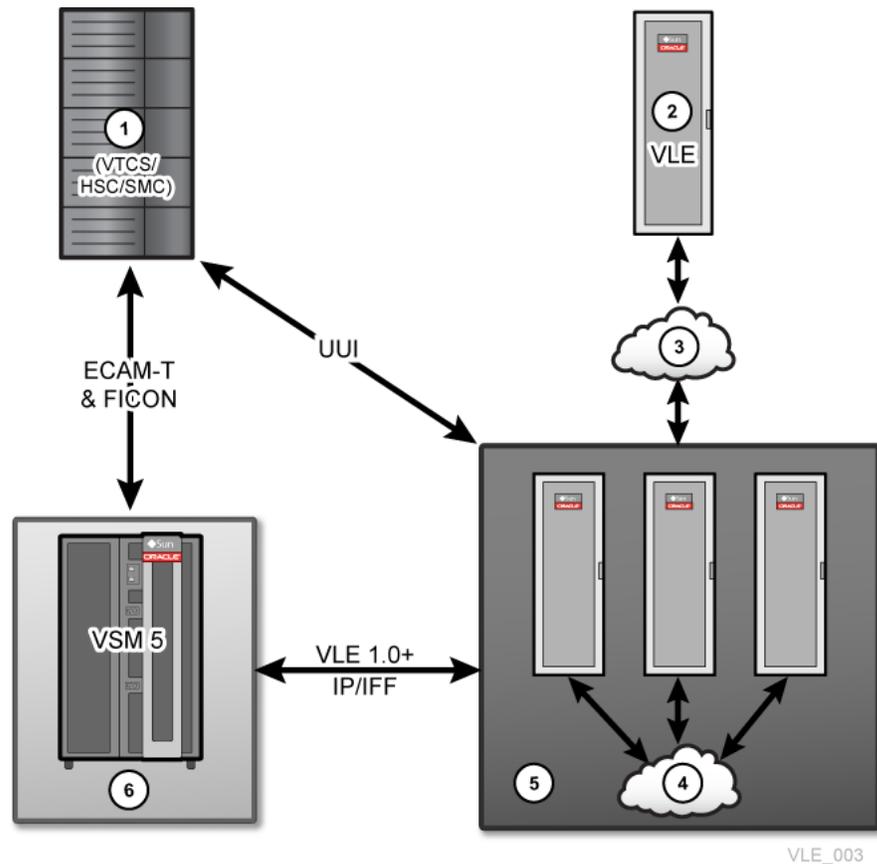

## VLE to VLE Data Transfer

The VLE storage system can manage data transfers independently of the VTSS, which frees VTSS resources for front-end (host) workload, which improves the overall VTSS through-put. For example:

- If your migration policies specify that there should be two VLE copies of a VTV (either in the same or separate VLEs), then the first migrate to a VLE will cause data to be transferred from the VTSS and all subsequent VLE migrates for the VTV may be achieved through a VLE to a VLE copy. This reduces the VTSS cycle times required to migrate all copies of a VTV.
- If your environment runs:
  - VLE 1.2 or above, and
  - VTCS 7.1 (with the supporting PTFs) or VTCS 7.2

Then you can use VTCS to define more VLE devices than there are VTSS to VLE paths through the `CONFIG STORMNGR VLEDEV` parameter. If you use this addressing scheme, then the VTSS resources used to migrate all the VTV copies to VLE are reduced even further because the path from the VTSS to the target VLE is only reserved when the data transfer is direct from the VTSS to the VLE. For all VLE VRTD actions, a path from the VTSS is only reserved when VTSS data transfer is required.

## VTV Encryption

**The encryption feature** enables encryption of VMVCs written to the VLE system. Encryption is enabled on a *per node basis*, through an *encryption key* stored on the node, backed up on a USB device. Encryption is entirely managed through the VLE GUI; the host software has no knowledge of encryption, as the VLE deencrypts VTVs that are recalled to the VTSS.

## VTV Deduplication

**Deduplication** eliminates redundant data in a VLE complex. Deduplication, which is controlled by the `STORCLAS` statement `DEDUP` parameter, increases the effective VLE capacity and is performed by the VLE before the VTV is written to a VMVC.

To assess deduplication results, enable deduplication, monitor the results with the `SCRIPT` report, and fine tune deduplication as necessary. The `SCRIPT` report provides the approximate “reduction ratio” for the deduplicated data, which is uncompressed Gb divided by used Gb. The Reduction Ratio, therefore, includes **both** VTSS compression **and** VLE deduplication. A larger reduction ratio indicates more effective compression and deduplication.

For example, the VTSS receives 16 Mb of data, compresses it to 4Mb, and writes the compressed data to a VTV. VLE subsequently deduplicates the VTV to 2Mb and writes it to a VMVC. Thus, the reduction ratio is 16Mb divided by 2Mb or 8.0:1.

## Early Time To First Byte (ETTFB)

**Early Time To First Byte (ETTFB)**, also known as the concurrent tape recall/mount feature, allows the VTSS to use a VTD to read data as it being recalled from VLE:

- ETTFB is set globally through `CONFIG GLOBAL FASTRECL`.
- If `CONFIG GLOBAL FASTRECL=YES`, you can disable ETTFB on per VTSS basis through `CONFIG VTSS NOERLYMNT`.

`CONFIG GLOBAL` **and** `CONFIG VTSS` apply to **both** ETTFB for RTDs and ETTFB for VLE.

## Frame Size Control

**Frame Size Control** specifies the use of Jumbo frames on each copy link:

- If your TCP/IP network supports Jumbo Frames, enabling this option can improve network performance.
- You enable Jumbo Frames by selecting the `Jumbo Frames` check box on the `Port Card Configuration Tab`. Selecting this box sets the MTU (Maximum Transmission Unit) value to 9000 for the port.



---

## Configuring the MVS Host Software

This chapter provides the MVS host software configuration for VLE as described in the following sections:

- ["Key Configuration Values"](#) on page 2-1
- ["MVS Host Software Configuration Tasks"](#) on page 2-2

### Key Configuration Values

The following sections describe values required for software configuration that must match values that are typically already set in the hardware configuration and recorded in the `IP_and_VMVC_Configuration.xls` worksheet.

#### Subsystem Name

The subsystem name of the VLE, which is set by the VLE installation scripts, is specified in the following:

- Either the VTCS `CONFIG TAPEPLEX STORMNGR` parameter or the `CONFIG STORMNGR NAME` parameter
- The VTCS `CONFIG RTD STORMNGR` parameter
- The SMC `STORMNGR NAME` parameter
- The SMC `SERVER STORMNGR` parameter
- The HSC `STORCLAS STORMNGR` parameter

#### VTSS Ethernet Port Addresses

The VTSS Ethernet port addresses are required to configure the VTSS to VLE IP connection through the `CONFIG RTD IPIF` parameter. For VSM5s, this value must match the values specified on the VSM5 IFF Configuration Status Screen. For VSM 6s, this must be unique for each VTSS but does **not** correspond to an actual value on the VSM 6 TCP/IP ports.

#### IP Addresses of VLE Ports for Host (UI) Communication

These addresses are required for the SMC `SERVER IP` parameter.

#### VMVC Volsers

Required to define VMVCs to SMC/VTCS, method of definition depends on the software version, see ["Defining the VLE VMVCs to the MVS Host Software and](#)

[Including VMVCs in an MVC Pool](#)" on page 2-6.

## VMVC Reclamation Threshold

For more information, see "[Specifying the Reclamation Policy for VMVCS](#)" on page 2-6.

## VTV Deduplication

The `STORCLAS DEDUP` parameter specifies whether VTV data migrated to VMVCs in the specified `STORMNGR` is deduplicated. For example:

```
STORCLAS NAME (VLEDEDUP) STORMNGR (VLE1) DEDUP (YES)
```

This `STORCLAS` statement specifies to deduplicate data in Storage Class `VLEDEDUP` that is migrated to `VLE1`. For more information, see *ELS 7.x Command, Control Statement, and Utility Reference*.

Deduplication increases effective VMVC capacity and is performed by the VLE before the VTV is written to a VMVC. Oracle recommends, therefore, that you initially enable deduplication, then monitor the results with the `SCRPT` report and fine tune deduplication as necessary.

## Early Time to First Byte (ETTFB)

ETTFB (also known as the concurrent tape recall/mount feature) allows host applications to read data while VTVs are being recalled from **either** VMVCs or RTDs. ETTFB is done by overlapping the VTV recall and mount phases, which allows the application to read the VTV data sooner. If the application attempts to read part of the VTV that has not been recalled, the application's I/O request is blocked until the required VTV data is been recalled. With ETTFB for VLE, application access to the first byte occurs in under a second, making the VLE a true extension of the VTSS. Therefore, VLE ETTFB is a good choice for applications that serially access the VTV data. VLE ETTFB is generally **not** a benefit for those applications that stack multiple files on a single VTV, including HSM and image management applications. In these types of applications, the desired data is usually not at the beginning of the VTV, but rather at some random location in the VTV.

ETTFB is disabled by default. You can globally enable ETTFB through the `CONFIG GLOBAL FASTRECL` parameter. If you globally enable ETTFB, you can disable it for individual VTSSs through the `CONFIG VTSS NOERLYMNT` parameter.

VTVs that have incurred a ETTFB recall error have an error flag set in their VTV record in the CDS. These VTSSs are subsequently not selected for ETTFB. If you want to reset the error flag, do any of the following:

- Enter a `VTVMMAINT SCRATCH (ON)` command for the VTV.
- Migrate the VTV to a new MVC copy.
- Import the VTV.
- Create a new version of the VTV.
- Scratch the VTV.

## MVS Host Software Configuration Tasks

Adding VLE to a VSM system requires the tasks described in the following sections:

- "[Acquire the ELS supporting PTFs for VLE 1.4](#)" on page 2-3

- "Updating the SMC OMVS RACF Security Entry" on page 2-3
- "Modifying the SMC SCMDS file" on page 2-3
- "Updating the VTCS CONFIG Deck to Define VLE" on page 2-4
- "Defining the VLE VMVCs to the MVS Host Software and Including VMVCs in an MVC Pool" on page 2-6
- "Updating the MVS Host Software Policies" on page 2-6

For more information on the commands and control statements referenced in this chapter, see *ELS 7.x Command, Control Statement, and Utility Reference*.

## Acquire the ELS supporting PTFs for VLE 1.4

For ELS 7.2, support is included in the base level. For ELS 7.0 and 7.1, get the latest SMP/E receive HOLDDATA and PTFs described in Figure 1–1 and SMP/E APPLY with GROUPEXTEND.

**Table 2–1 ELS Supporting PTFs for VLE 1.4**

ELS 7.0	ELS 7.1
L1H16C1	L1H16J6
L1H1672	L1H1674

## Updating the SMC OMVS RACF Security Entry

The VLE requires SMC to have an OMVS RACF security entry to have a TCP/IP connection to the host.

OMVS is a segment associated with the RACF userid. The SMC started task must have a userid associated with OMVS, either in the RACF STARTED class definition or the ICHRIN03 LNKST module. The userid associated with the SMC task needs to have an OMVS segment defined to it within RACF as follows:

```
ADDUSER userid
DFLTGRP (groupname) OWNER (owner) OMVS (UID (uidnumber))
```

Or, if the userid already exists but does not have an OMVS segment:

```
ALTUSER userid OMVS (UID (uidnumber))
```

## Modifying the SMC SCMDS file

SMC manages all communication between VTCS and VLE, so SMC must know how to connect to the VLE server. You do so by adding an SMC STORMNGR statement for each VLE system plus one or more SMC SERVER statements that define the TCP/IP control paths for the VLE. For 7.0 and above, you may want to do this in your SMC CMDS file as shown in Example 2–1.

### Example 2–1 SMC Commands for VLE

```
TAPEPLEX NAME (TMVSA) LOCSUB (SLS0)
SERVER NAME (ALTSERV) TAPEPLEX (TMVSA) +
HOSTNAME (MVSX) PORT (8888)
STORMNGR NAME (VLE1)
SERVER NAME (VLE1) + STORMNGR (VLE1) IP (192.168.1.10) PORT (60000)
```

Example 2–1 contains:

- A TAPEPLEX statement, which defines a single TapePlex, *TMVSA*, with an HSC/VTCS running on the same MVS host (*SLS0*).
- A SERVER statement, which defines a backup HSC/VTCS subsystem (*ALTSERV*) running on another host.
- A STORMNGR command that defines a VLE (*VLE1*) .
- A second SERVER command that defines a UII communication path to the VLE, where:
  - The server name is *VLE1*
  - The STORMNGR parameter value is *VLE1*
  - The IP parameter value is the VLE port IP address of 192.168.1.10 for UII communications
  - The PORT parameter value is 60000; this value is always used for the SERVER PORT parameter for SMC communication with a VLE

## Updating the VTCS CONFIG Deck to Define VLE

You must update VTCS CONFIG deck to define the VLE and the connectivity from the VTSS systems to the VLE. VTCS can drive VLE 1.4 as follows:

- For VTCS 7.0 and above, the CONFIG TAPEPLEX statement defines the TapePlex that VTCS is running under and provides the list of defined VLEs on the CONFIG TAPEPLEX STORMNGR parameter as shown in [Example 2-2](#).

### Example 2-2 VTCS 7.0 CONFIG VLE

```
TAPEPLEX THISPLEX=TMVSA STORMNGR=VLE1
VTSS NAME=VTSS1 LOW=70 HIGH=80 MAXMIG=8 MINMIG=4 RETAIN=5
RTDPATH NAME=VL1RTD1 STORMNGR=VLE1 IPIF=0A:0
RTDPATH NAME=VL1RTD2 STORMNGR=VLE1 IPIF=0A:1
RTDPATH NAME=VL1RTD3 STORMNGR=VLE1 IPIF=0I:0
RTDPATH NAME=VL1RTD4 STORMNGR=VLE1 IPIF=0I:1
RTDPATH NAME=VL1RTD5 STORMNGR=VLE1 IPIF=1A:0
RTDPATH NAME=VL1RTD6 STORMNGR=VLE1 IPIF=1A:1
RTDPATH NAME=VL1RTD7 STORMNGR=VLE1 IPIF=1I:0
RTDPATH NAME=VL1RTD8 STORMNGR=VLE1 IPIF=1I:1
VTD LOW=6900 HIGH=69FF
```

In [Example 2-2](#), note:

- The CONFIG TAPEPLEX statement, which defines *TMVSA* as the TapePlex that VTCS is running under and the names of all connected VLEs (which in this example is a single VLE called *VLE1*).
- The CONFIG RTDPATH statements, which define a single VLE RTD for each path from the VTSS to the VLE. In this example, the CONFIG RTDPATH statements for *VTSS1* specify:
  - The name of the RTDPATH.
  - The connections to the defined VLEs (*STORMNGR=VLE1*).
  - The IPIF value for each VTSS to VLE port connection in *ci:p* format where:
    - \* *c* is 0 or 1.
    - \* *i* is A or I.
    - \* *p* is 0 through 3.

---

**Note:** For VSM5s, this value must match the values specified on the VSM5 IFF Configuration Status Screen. For VSM 6s, this must be unique for each VTSS but does **not** correspond to an actual value on the VSM 6 TCP/IP ports.

---

- VTCS 7.1 and above systems can, of course, drive VLE 1.4 as VTCS 7.0 does as described on page 2-4. In this mode, however, the number of VLE RTD targets is limited by the number of paths from a VTSS. Additionally, the VLE RTDs are assigned to fixed VTSS paths. The path from a VTSS to the VLE is always reserved by VTCS regardless of whether any VTSS to VLE data transfer is occurring.

However, with VTCS 7.1 (with the PTFs described in [Table 2-1](#)) and above, you can define a VLE with more VLE RTD targets than there are paths from the VTSS to the VLE, which means:

- The path from the VTSS to the VLE is **not** reserved unless a VTSS to VLE data transfer is required.
- More VLE RTD operations can occur simultaneously. For example, an audit of a VMVC does not require data transfer between the VTSS and the VLE.

As shown in [Example 2-3](#), the VLEs are defined through a `CONFIG STORMNGR` statement, **not** the `CONFIG TAPEPLEX STORMNGR` parameter. **The `CONFIG STORMNGR` statement specifies the VLEs that VTCS connects to. Additionally, for each VLE, the `CONFIG STORMNGR VLEDEV` parameter defines the number and the names of the RTD devices that the VLE emulates. The more devices defined (up to the maximum of 96 devices per VLE), the greater the level of concurrent activities VTCS can schedule on the VLEs.**

### Example 2-3 VTCS 7.1 CONFIG VLE

```
TAPEPLEX THISPLEX=TMVSC
STORMNGR NAME=VLE1 VLEDEV(S000-S05F)
STORMNGR NAME=VLE2 VLEDEV(S000-S05F)
VTSS NAME=VTSS1 LOW=70 HIGH=80 MAXMIG=8 MINMIG=4 RETAIN=5
RTDPATH NAME=VL1RTD1 STORMNGR=VLE1 IPIF=0A:0
RTDPATH NAME=VL1RTD2 STORMNGR=VLE1 IPIF=0A:1
RTDPATH NAME=VL1RTD3 STORMNGR=VLE1 IPIF=0I:0
RTDPATH NAME=VL1RTD4 STORMNGR=VLE1 IPIF=0I:1
RTDPATH NAME=VL1RTD5 STORMNGR=VLE2 IPIF=1A:0
RTDPATH NAME=VL1RTD6 STORMNGR=VLE2 IPIF=1A:1
RTDPATH NAME=VL1RTD7 STORMNGR=VLE2 IPIF=1I:0
RTDPATH NAME=VL1RTD8 STORMNGR=VLE2 IPIF=1I:1
VTD LOW=6900 HIGH=69FF
```

In [Example 2-3](#), note:

- The `CONFIG TAPEPLEX` statement now simply defines `TMVSC` as the TapePlex that VTCS is running under. It does **not** define the connected VLEs.
- The `CONFIG STORMNGR` statements, which define the VLEs configured in this system - `VLE1` and `VLE2` in this example. These statements also specify the number of VLE devices through the `VLEDEV` parameter. In this example, each VLE has the maximum of 96 emulated devices, which allows VTCS to schedule up to 96 processes on each VLE. The VLE device addresses are in the form of `Sxxx` (where `xxx` is a hexadecimal value. For example, `S000-S05F` represents 96 emulated devices.
- The `CONFIG RTDPATH` statements for `VTSS1`, which specify:

- The name of the `RTDPATH`
- The connections to the defined VLEs (`STORMNGR=VLE1`, `STORMNGR=VLE2`)
- The `IPIF` value for each VTSS to VLE port connection in `ci:p` format where:
  - \* `c` is 0 or 1
  - \* `i` is A or I
  - \* `p` is 0 through 3

---

**Note:** For VSM5s, this value must match the values specified on the VSM5 IFF Configuration Status Screen. For VSM 6s, this must be unique for each VTSS but does **not** correspond to an actual value on the VSM 6 TCP/IP ports.

---

### Specifying the Reclamation Policy for VMVCS

VLE MVC media (VMVCS) is subject to fragmentation and must be reclaimed just like real MVCs. The VMVC reclaim process, however, uses far fewer resources than a standard reclaim. The reclaim threshold for a VMVC is specified through the `CONFIG RECLAIM VLTHRES` parameter. The lower that you set `VLTHRES`, the more frequent VTCS will run reclaim on the VMVCS and the greater the effective capacity of the VMVS (less fragmentation).

## Defining the VLE VMVCS to the MVS Host Software and Including VMVCS in an MVC Pool

VMVC `volsers` must be defined both to the MVS host software and to the VLE. The VMVCS are defined to the VLE as part of the VLE configuration. The following sections tell how to define the VMVCS to the MVS host software.

### Creating VMVC Volume Pools (7.0 and Above)

1. Code HSC `POOLPARAM/VOLPARAM` statements to define the VMVC pools.

For example, to define two separate pools for VLE1 and VLE2:

```
POOLPARAM NAME(LEPOOL1)TYPE(MVC)
VOLPARAM VOLSER(VL0000-VL880)
```

```
POOLPARAM NAME(LEPOOL2)TYPE(MVC)
VOLPARAM VOLSER(VL2000-VL2880)
```

2. Run `SET VOLPARAM` to validate the `POOLPARAM/VOLPARAM` statements.

```
SET VOLPARAM APPLY(NO)
```

`APPLY(NO)` validates the statements without loading them. If you like the results, go to Step 3. Otherwise, rework your volume definitions, rerun this step, and if the definitions are valid, then go to Step 3.

3. Run `SET VOLPARAM` to load the `POOLPARAM/VOLPARAM` statements.

```
SET VOLPARAM APPLY(YES)
```

## Updating the MVS Host Software Policies

The following sections tell how to update the MVS host software policies to direct data to the VLE system.

## Creating Storage and Management Classes for VLE

*Management Classes* specify how VTCS manages VTVs. The HSC `MGMTclas` control statement defines a Management Class and its attributes. For example, the `DELSCR` parameter of the `MGMTclas` statement specifies whether VTCS deletes scratched VTVs from the VTSS. Management Classes can also point to *Storage Classes*, which specify where migrated VTVs reside. The HSC `STORclas` control statement defines a Storage Class and its attributes. You specify the VLE system as the destination for migrated VTVs through the `STORCLAS STORMNGR` keyword. For example:

```
STOR NAME (VLOCAL) STORMNGR (VLESERV1) DEDUP (YES)
STOR NAME (VREMOTE) STORMNGR (VLESERV2) DEDUP (YES)
```

The preceding statements define a “local” Storage Class (`VLOCAL`) on the `VLE1` and a “remote” Storage Class (`VREMOTE`) on the `VLE2`. As these `STORCLAS` statements specify, all migrations to storage class `VLOCAL` or `VREMOTE` **must** go to the specified VLEs. **Also note** that deduplication is specified for both Storage Classes.

You can be less restrictive than this if desired. For example, if you define an `MVCPool` that contains both `VMVCs` and `MVCs` you can set up the migration policies to migrate to a VLE but if the VLE becomes full or not available, to continue to migrate to real tape media (`MVCs`). For example the `MVC` pool `DR` is defined as follows:

```
POOLPARM NAME (DR) TYPE (MVC)
VOLPARM VOLSER (VL0000-VL0100)
VOLPARM VOLSER (ACS000-ACS099)
```

Pool `DR`, therefore, contains both `MVCs` and `VMVCs`. A Storage Class that specifies pool `DR` will migrate first to `VMVCs` and only use `MVCs` if `VMVCs` are not available. For example:

```
STOR NAME (DRCLASS) MVCPool (DR) DEDUP (YES)
```

This method is valuable if you have a configuration where both an `ACS` and a `VLE` are connected to the `VTSS` systems.

Next, to specify migration to VLE, you specify the VLE Storage Classes you defined through the `MGMTCLAS MIGPOL` parameter. For example:

```
MGMT NAME (M1) MIGPOL (VLOCAL, VREMOTE)
MGMT NAME (M2) MIGPOL (DRCLASS)
```

Management Class `M1` migrates one VTV copy to the “remote” VLE, one copy to the “local” VLE. Management Class `M2` migrates a single VTV copy to the Storage Class that points to the “mixed” `MVC` pool that contains both `MVCs` and `VMVCs`.

---

**Note:** In addition to directing migration to a VLE also consider:

---

1. You can use the `ARCHage` and `ARCHPol` parameters of the `MGMTclas` statement to set an Archive Policy for VTVs in a Management Class. When the VTV’s age exceeds the `ARCHage` value, the VTV is eligible for archive per the Storage Class(es) specified on the `ARCHPol` parameter. You can use Archive Policies to archive (move) VTVs from `VMVCs` to `MVCs` as the VTVs age. For more information, see *Managing HSC and VTCS*.
2. You can use `STORSEL` statements to cause VTCS to preference recalls from VLE media. For more information, see *Managing HSC and VTCS*.

3. If you are running at ELS 7.0 or above, you can use HSC `MIGRSEL` and `MIGRVTV` to fine tune migration to VLE. Using these statements, you can cause migration of data in a Management Class to start to one Storage Class before another. This method is typically used to ensure that a critical DR copy is made as soon as possible. For more information, see *Configuring HSC and VTCS*.
4. On a VLE 1.1 and above system, if multiple VLEs are connected to each other and to the VTSS, by default, VTCS preferences VLE to VLE connections to make multiple VTV copies. You can control this behavior as described in [FROMLST Parameter Use](#).

### FROMLST Parameter Use

If you do not specify `FROMLST`, the default behavior is as follows:

- For Clustered VTSSs, if a copy resides on multiple VTSSs in the cluster, the VTV can be sourced from any available VTSS, which may not be optimal if the VTSS and the connected ACS are geographically distant from each other.
- For VLE to VLE connections, if a VTV copy resides on both a VTSS and one VLE and you want to migrate it to a connected VLE, the default is to use the VLE to VLE connection. Similarly, this may not be optimal if the connected VLEs are geographically distant from each other. For example, a DR scenario with a local VLE (`LOCVLE`) and remote VLE (`REMVLE`) connected to VTSSA. You want to migrate two VTV copies:
  - First, a local copy from VTSSA to `LOCVLE`
  - Second, a copy using VLE-to-VLE copy from `LOCVLE` to `REMVLE`. VLE to VLE Replication (Versus VTSS to VLE)

To make the VTV copies as desired, do the following:

1. Create a `VTSSLST` statement to create a VTSS list that contains only VTSSA.

```
VTSSLST NAME(VSM2VLE) VTSS(VTSSA)
```

2. Create a `STORCLAS` statement that sends a VTV copy to `REMVLE`.

```
STORCLAS NAME(FORREMOT) STORMNGR(REMVLE)
```

3. Create a `MIGRVTV` statement that delays the migration copy to `REMVLE`.

```
MIGRVTV STOR(FORREMOT) IMMDELAY(360)
```

The migration delay is 360 minutes to allow the migration to the local site occur first; then the migration to the remote site is by VLE-to-VLE copy. Note that 360 minutes is just an example value, you can specify values of up to 9998 (do not specify 9999, because then the VTV is only migrated using automigration).

4. Create a `STORCLAS` statement that sends a VTV copy to `LOCVLE`.

```
STORCLAS NAME(FORLOCAL) STORMNGR(LOCVLE) FROMLST(VSM2VLE)
```

---

**Note:** Note that the `FROMLST` parameter specifies that the local VTV copy is sourced from VTSSA.

---

5. Finally, create a `MGMTCLAS` statement that specifies two VTV copies, one to the local site and one to the remote site:

```
MGMTCLAS NAME(DRVLE) MIGPOL(FORLOCAL, FORREMOT)
```

**Routing Data to VLE**

To route data to VLE, first create an SMC POLICY command that specifies a VLE Management Class. Next, create SMC TAPEREQ statements that route the desired workload to the SMC VLE policy. For example:

```
POLICY NAME(VLEWORK) MEDIA(VIRTUAL) MGMT(VLECLASS)
```

```
TAPEREQ DSN(VLETEST.***) POLICY(VLEMIGR)
```

The preceding example assigns the VLEWORK policy to all tape datasets with an HLQ of VLETEST.

