

**Oracle® Communications
Performance Intelligence Center**

ProAlarm Viewer User Guide

Release 9.0

February 2014

Copyright © 2003, 2014, Oracle and/or its affiliates. All rights reserved.

This software and related documentation are provided under a license agreement containing restrictions on use and disclosure and are protected by intellectual property laws. Except as expressly permitted in your license agreement or allowed by law, you may not use, copy, reproduce, translate, broadcast, modify, license, transmit, distribute, exhibit, perform, publish, or display any part, in any form, or by any means. Reverse engineering, disassembly, or decompilation of this software, unless required by law for interoperability, is prohibited.

The information contained herein is subject to change without notice and is not warranted to be error-free. If you find any errors, please report them to us in writing.

If this is software or related documentation that is delivered to the U.S. Government or anyone licensing it on behalf of the U.S. Government, the following notice is applicable:

U.S. GOVERNMENT RIGHTS Programs, software, databases, and related documentation and technical data delivered to U.S. Government customers are "commercial computer software" or "commercial technical data" pursuant to the applicable Federal Acquisition Regulation and agency-specific supplemental regulations. As such, the use, duplication, disclosure, modification, and adaptation shall be subject to the restrictions and license terms set forth in the applicable Government contract, and, to the extent applicable by the terms of the Government contract, the additional rights set forth in FAR 52.227-19, Commercial Computer Software License (December 2007). Oracle America, Inc., 500 Oracle Parkway, Redwood City, CA 94065.

This software or hardware is developed for general use in a variety of information management applications. It is not developed or intended for use in any inherently dangerous applications, including applications that may create a risk of personal injury. If you use this software or hardware in dangerous applications, then you shall be responsible to take all appropriate fail-safe, backup, redundancy, and other measures to ensure its safe use. Oracle Corporation and its affiliates disclaim any liability for any damages caused by use of this software or hardware in dangerous applications.

Oracle and Java are registered trademarks of Oracle and/or its affiliates. Other names may be trademarks of their respective owners.

Intel and Intel Xeon are trademarks or registered trademarks of Intel Corporation. All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. AMD, Opteron, the AMD logo, and the AMD Opteron logo are trademarks or registered trademarks of Advanced Micro Devices. UNIX is a registered trademark of The Open Group.

This software or hardware and documentation may provide access to or information on content, products, and services from third parties. Oracle Corporation and its affiliates are not responsible for and expressly disclaim all warranties of any kind with respect to third-party content, products, and services. Oracle Corporation and its affiliates will not be responsible for any loss, costs, or damages incurred due to your access to or use of third-party content, products, or services.

Table of Contents

Table of Contents

Chapter 1:About This Help Text.....	6
ProAlarm Viewer Overview	7
ProAlarm Viewer Scope and Audience	7
About the Performance Intelligence Center	7
Setting User Preferences.....	8
Customer Care Center	15
PIC Documentation Library	17
Locate Product Documentation on the Customer Support Site	18
Chapter 2 :Product Highlights	19
ProAlarm Viewer Summary	20
Components	20
Alarm Colors	20
Alarm Types.....	21
Chapter 3 : Understanding ProAlarm Viewer Features	22
Menu Bar	23
Map List	23
Filters in the Map List	23
Icons in the Map List.....	24
Columns in Map List.....	25
Map Pages	25
Icons in the Map Page	25
Toolbar Icons	26
Alarm Pages	27
Filters in Alarms: Opened Page.....	28
Alarms: Terminated Page.....	29
Events Page.....	31
Comments Page	32
Troubleshooting Page	33
Chapter 4 :Using ProAlarm Viewer	34
Accessing ProAlarm Viewer	35
Opening Alarm Pages	35
Changing Alarm Status	36
Acknowledging an Alarm.....	36

Terminating an Alarm	37
Sorting Columns in Alarm Pages.....	37
Drilling Down to Troubleshoot ProTraq Cell Alarms	37
Displaying Alarm Events, Comments, and Troubleshooting Guidelines	38
Adding, Editing, and Deleting Comments	38
Adding a New Comment.....	38
Editing a Comment	39
Deleting a Comment	40
Adding and Editing Troubleshooting Guidelines.....	40
Linking to ProDiag	41
Closing Maps.....	41
Closing ProAlarm Viewer	41
Chapter 5: ProAlarm Viewer Preferences	42
Modifying Application Preferences	43
Modifying User Preferences	44

List of Figures

Figure 1 : PIC Overview	8
Figure 2 : Time Formatting Page.....	9
Figure 3 : Directory Page	10
Figure 4 : Mapping Page	11
Figure 5 : Point code Tab	12
Figure 6 : CIC Page.....	13
Figure 7 : Alarms Page.....	14
Figure 8 : Privacy Page	15
Figure 9 : Filter Dialog	24
Figure 10 : Network Object Icons	26
Figure 11 : Alarms Associated With Map Object	36
Figure 12 : Alarms Opened Table with Alarm Selected.....	38
Figure 13 :Alarms: Terminated Table With Alarm Selected.....	38
Figure 14 :Alarms: Opened Table With Alarm Selected	39
Figure 15 : Comments Dialog.....	39
Figure 16 : Guidelines Dialog	40
Figure 17 : ProAlarm Viewer Application Preferences Dialog	43

List of Tables

Table 1 : Default Alarm Colors	20
Table 2 : Map List Icons	24
Table 3 : Map List Columns.....	25
Table 4 : Map Page Toolbar Icons	26
Table 5 : Tabbed Pages for Alarms.....	27
Table 6 : Alarms: Opened Icons	28
Table 7 : Alarms: Opened Columns	28
Table 8 : Alarms Terminated Icons.....	30
Table 9 : Alarms Terminated Columns	30
Table 10 : Events Icons.....	31
Table 11 : Events Page Columns.....	32
Table 12 : Comments Page Icons	32
Table 13 : Comments Page Columns.....	33
Table 14 : Troubleshooting Page Icons	33

Chapter 1:About This Help Text

Topics:

- [*ProAlarm Viewer Overview*](#)
- [*ProAlarm Viewer Scope and Audience*](#)
- [*About the Performance Intelligence Center*](#)
- [*Customer Care Center*](#)
- [*PIC Documentation Library*](#)
- [*Locate Product Documentation on the Customer Support Site*](#)

ProAlarm Viewer Overview

In ProAlarm Viewer, users can monitor alarm information. The user interface provides alarm details, including the alarm name, probable cause, severity level, start time, and number of associated events. Users can acknowledge and terminate alarms.

The network elements being monitored are configured in maps.

ProAlarm Viewer Scope and Audience

This help text is for users responsible for monitoring alarm information for network elements.

About the Performance Intelligence Center

The Performance Intelligence Center (PIC) is a monitoring and data gathering system that provides network performance, service quality and customer experience - across various networks, technologies, protocols, etc. Beyond monitoring performance and gathering data, the solution also provides analytics, actionable intelligence and potentially an intelligent feedback mechanism. It allows Service Providers to simultaneously look across the Data Link, Network, Transport and Application layer traffic to better correlate and identify the impact of network problems on revenue generating applications and services.

PIC functionality is based on the following general flow. The Integrated Message Feeder (IMF) is used to capture SS7 and SigTran traffic. The Probed Message Feeder (PMF) is used to capture both SS7 and IP traffic. Both products forward Probe Data Units (PDUs) to the Integrated xDR Platform (IXP). The IXP stores this traffic data and correlates the data into detailed records (CDRs, IPDRs, TDRs, etc.). The IXP then stores the data on the system for future analysis. The Network Software Platform (NSP) provides applications that mine the detailed records to provide value-added services such as network performance analysis, call tracing and reporting.

PIC centralized configuration tasks fall into one of two categories:

- Data Acquisition and Processing - the configuration of the probes, routing of PDUs to the xDR builder setup, KPI generation, data feeds, etc.
- PIC System Administration - the configuration of monitoring sites, configuring PIC servers, setting up permissions, etc.

Note: For more information see Centralized Configuration Manager Administration Guide. This is a graphic overview of the PIC system.

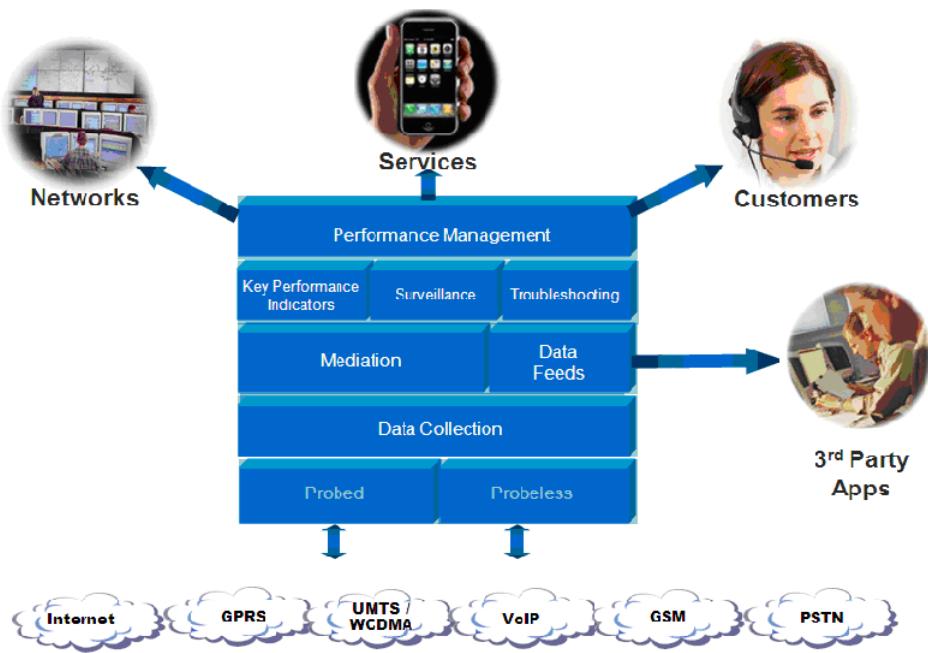


Figure 1 : PIC Overview

Setting User Preferences

Users can set User Preferences that apply across all the NSP applications. These include

- Time specifications (date format, time zone, etc.)
- Directory names (for exporting, uploading, and downloading)
- Enumeration values (numerals vs. text)
- Point code specifications
- CIC specifications
- Default alarm colors
- Default object privacy privileges

Setting Time Format

Follow these steps to set the time format:

1. Click **User Preferences** on the Application board. The User Preferences page is displayed.
2. Click the **Time** tab.

The Time page is displayed. The red asterisk denotes a required field.

Note: Use the tips on the page to help you configure the time format.

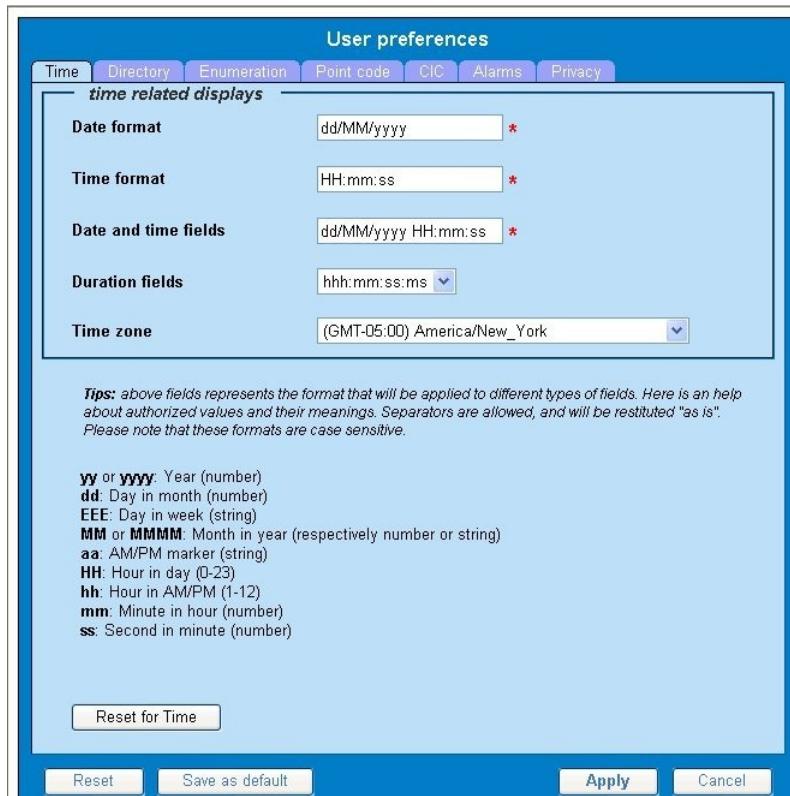


Figure 2 : Time Formatting Page

3. Enter the format for these time-related displays.
 - **Date format**
 - **Time format**
 - **Date and time fields**
4. Select the formats for these time-related displays by using the drop-down arrow.
 - **Duration fields**
 - **Time zone**

Note: You must choose your time zone to get local time.
5. If you want to reset the time-related displays to default settings, click **Reset for Time**. (The bottom **Reset** button resets all the tabbed pages to default settings.)
6. Click **Apply** to save settings.

Setting Directory Preferences

Use the User Preferences feature to set the Export, Upload and Download directory paths for your system. These paths define where xDR's, dictionary files and other elements are stored.

Follow these steps to set the directory preferences.

1. Click User Preferences on the Application board. The User Preferences page is displayed.
2. Click the Directory tab.
The Directory page is displayed. The red asterisk denotes a required field.

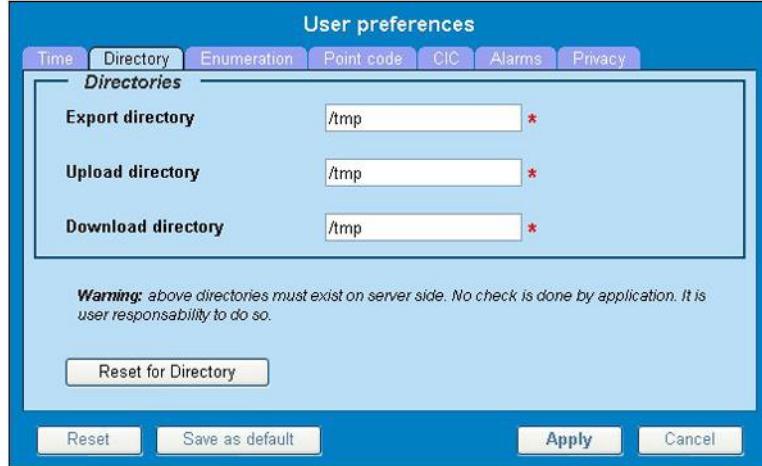


Figure 3 : Directory Page

3. Type in the following:
 - **Export directory**
 - **Upload directory**
 - **Download directory**
4. If you want to reset the directories to default settings, click Reset for Directory. (The bottom Reset button resets all the tabbed pages to default settings.)
5. Click **Apply** to save your settings.

Setting Mapping Preferences

You can set the Mapping settings using the User Preferences feature. Follow these steps to set Mapping preferences.

1. Click **User Preferences** in the Application board.
The User Preferences page is displayed.
2. Click the **Mapping** tab .
The Mapping page is displayed.

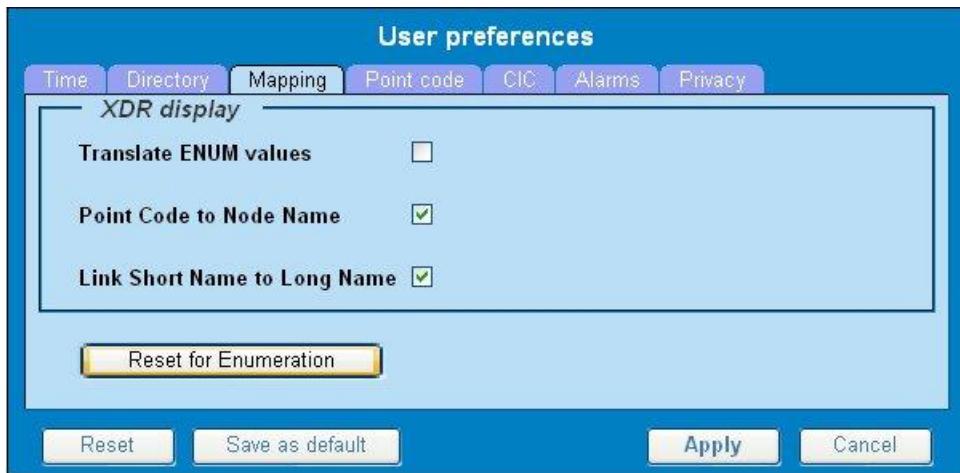


Figure 4 : Mapping Page

3. Check **Translate ENUM values** to display text instead of numerals. Enumeration is used by xDRs to display text values instead of numeric. (For example, rather than showing the numeral for Alarm Severity, the user interface will show the actual word, such as "Major" or "Critical.")
4. Check **Point Code to Node Name** to display the custom (user-defined) name of the node. Otherwise, the Point Code value is displayed.
5. Check **Link Short Name to Long Name** to display the custom (user-defined) link name or the Eagle link name. Otherwise, the short name is displayed, which is the name that begins with an asterisk (*).
6. To reset the Mapping values to the default, click **Reset for Enumeration**. (The bottom **Reset** button resets all the tabbed pages to default settings.)
7. Click **Apply** to save the changes.

Setting Point Code Preferences

The User Preferences feature enables you to set the Point Code preferences for your system. A Point Code is a unique address for a node (Signaling Point), used to identify the destination of a message signal unit (MSU).

Follow these steps to set the Point Code preferences.

1. Click **User Preferences** in the Application board. The User Preferences page is displayed.
2. Click the **Point Code** tab. The Point Code page is displayed. The red asterisk denotes a required field.

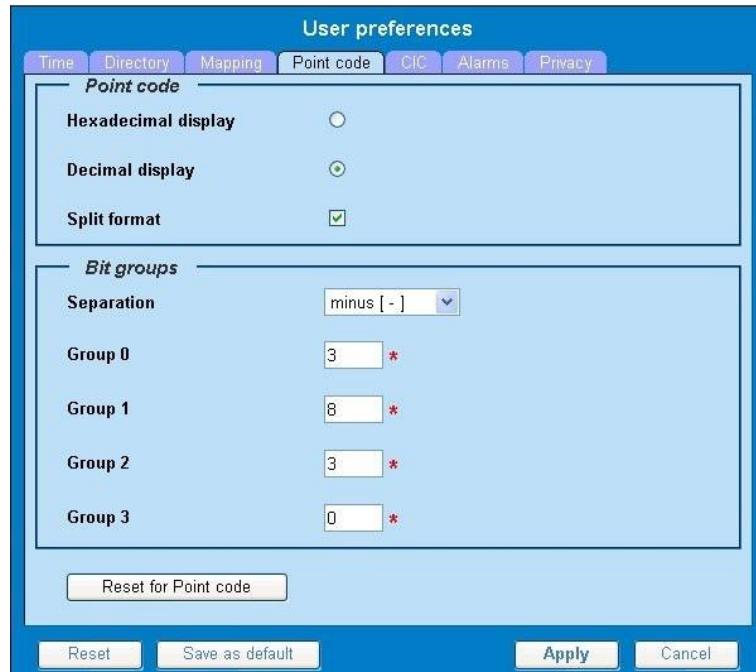


Figure 5 : Point code Tab

3. Select either **Hexadecimal display** or **Decimal display**.
4. Select or de-select **Split format**.
If **Split format** is checked, the Bit groups settings in the box below are active. If **Split format** is not checked, Bit groups settings are not applicable.
5. If you selected Split format above, go to the next step. If you did not select Split format, go to [step8To reset](#).
6. In the Bit groups panel, use the drop-down box to select the **Separation** type .
7. Type in values for **Groups 0-3**.
8. To reset the point code preferences to default settings, click **Reset for Point code**. (The bottom **Reset** button resets all the tabbed pages to default settings.)
9. Click **Apply** to save your settings.

Setting CIC Preferences

The Circuit Identification Code (CIC) provides a way to identify which circuit is used by the Message Signaling Unit (MSU). This is important in ProTrace applications. Use the User Preferences feature to set the CIC settings for your system.

Complete these steps to set the CIC preferences:

1. Click **User Preferences** in the Application board.
The User preferences page is displayed.
2. Click the **CIC** tab. The CIC page is displayed. The red asterisk denotes a required field.

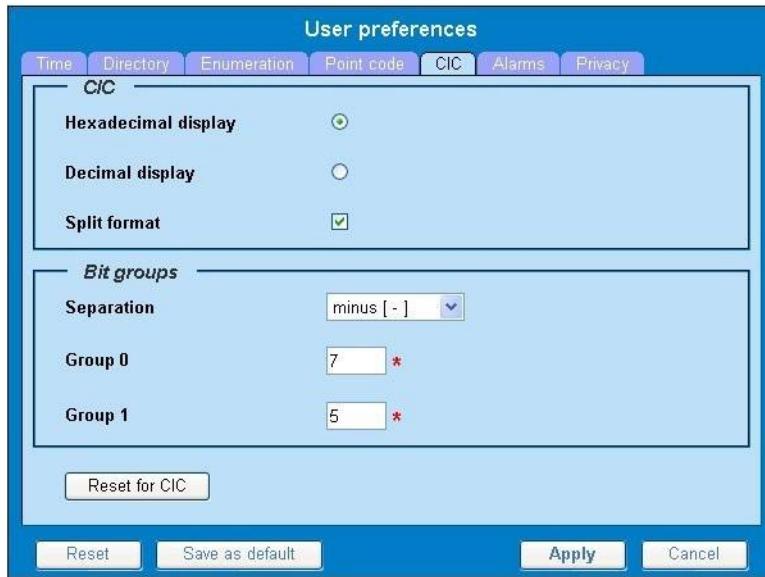


Figure 6 : CIC Page

3. Select either **Hexadecimal display** or **Decimal display**.
4. Select or de-select **Split format**. If **Split format** is checked, the Bit groups settings in the box below are active. If **Split format** is not checked, Bit groups settings are not applicable.
5. If you selected Split format above, go to the next step. If you did not select Split format, go to [Step 8](#).
6. In the Bit groups panel, use the drop-down box to select **Separation** type..
7. Type in values for **Group 0** and **Group 1**.
8. If you want to reset CIC preferences to the default, click **Reset for CIC**. (The bottom **Reset** button resets all the tabbed pages to default settings.)
9. Click **Apply** to save your settings.

Setting Alarms Preferences

Use the Alarms tab in User Preferences to define the default colors that indicate alarm severity. The colors are displayed in the Perceived Severity column of alarms tables and on object icons in maps.

Follow these steps to modify alarm status colors.

1. Click **User Preferences** in the Application board. The User preferences page is displayed.
2. Click the **Alarms** tab. The Alarms page is displayed. The red asterisk denotes a required field.



Figure 7 : Alarms Page

3. Click the color palette (icon on the right side of the screen) associated with the alarm status color(s) you want to modify.
A pop-up palette window is displayed.
4. Click the color you want for the type of alarm.
The color palette pop-up is closed and the color box for the alarm displays the selected color.
The number for the color is also displayed.
5. If you want to reset the Alarm preferences to the default, click **Reset for Alarmlist**. (The bottom **Reset** button resets all the tabbed pages to default settings.)
6. Click **Apply**.
The changes do not take effect until you log out of and in again to NSP.

Setting Default Object Privacy

All NSP users can set default access privileges for Objects (data) they create in NSP applications. An owner has full rights to modify or delete the object . Other users are assigned to a Profile and have access to these Objects through that Profile's associated Privacy Roles.

To enter the default Object Privacy (data) settings, follow these steps:

1. Click **User preferences** in the Application board menu.
The User Preferences window is displayed. The **Time** tab is active by default.
2. Click the **Privacy** tab .
The Privacy page is displayed.

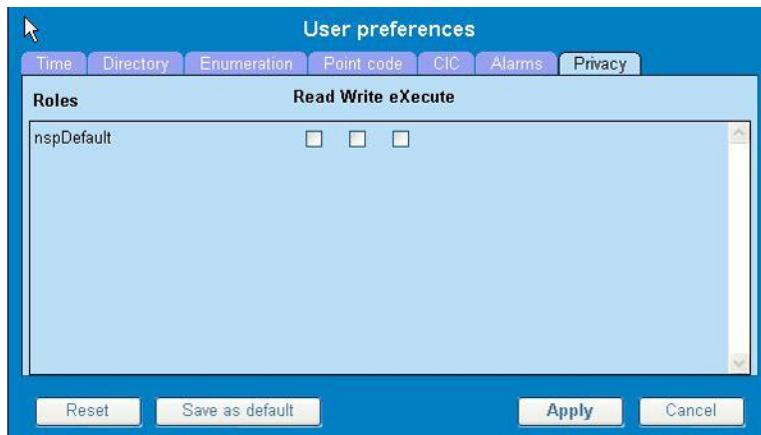


Figure 8 : Privacy Page

3. Click the appropriate box to select **Read**, **Write**, or **eXecute**. If you want the role to have no access to the selected object(s), ensure that no box is checked.
4. Click **Save as default**.
5. To reset all the tabbed pages to default settings, click **Reset**.
6. Click **Apply**.

The settings are saved.

Customer Care Center

The Tekelec Customer Care Center is your initial point of contact for all product support needs. A representative takes your call or email, creates a Customer Service Request (CSR) and directs your requests to the Tekelec Technical Assistance Center (TAC). Each CSR includes an individual tracking number. Together with TAC Engineers, the representative will help you resolve your request.

The Customer Care Center is available 24 hours a day, 7 days a week, 365 days a year, and is linked to TAC Engineers around the globe.

Tekelec TAC Engineers are available to provide solutions to your technical questions and issues 7 days a week, 24 hours a day. After a CSR is issued, the TAC Engineer determines the classification of the trouble. If a critical problem exists, emergency procedures are initiated. If the problem is not critical, normal support procedures apply. A primary Technical Engineer is assigned to work on the CSR and provide a solution to the problem. The CSR is closed when the problem is resolved.

Tekelec Technical Assistance Centers are located around the globe in the following locations:

Tekelec - Global

Email (All Regions): support@tekelec.com

• **USA and Canada Phone:**

1-888-FOR-TKLC or 1-888-367-8552 (toll-free, within continental USA and Canada)

1-919-460-2150 (outside continental USA and Canada)

TAC Regional Support Office Hours:

8:00 a.m. through 5:00 p.m. (GMT minus 5 hours), Monday through Friday, excluding holidays •

Caribbean and Latin America (CALA) Phone:

USA access code +1-800-658-5454, then 1-888-FOR-TKLC or 1-888-367-8552 (toll-free) TAC

Regional Support Office Hours (except Brazil):

10:00 a.m. through 7:00 p.m. (GMT minus 6 hours), Monday through Friday, excluding holidays

• **Argentina**

Phone:

0-800-555-5246 (toll-free)

• **Brazil**

Phone:

0-800-891-4341 (toll-free)

TAC Regional Support Office Hours:

8:30 a.m. through 6:30 p.m. (GMT minus 3 hours), Monday through Friday, excluding

holidays

• **Chile**

Phone

1230-020-555-5468

• **Colombia**

Phone:

1- 800-912-0537

• **Dominican Republic**

Phone:

1-888-367-8552

• **Mexico**

Phone:

001-888-367-8552

• **Peru**

Phone:

0800-53-087

• **Puerto Rico**

Phone:

1-888-367-8552 (1-888-FOR-TKLC)

• **Venezuela**

Phone:

0800-176-6497

• **Europe, Middle East, and Africa**

Regional Office Hours:

8:30 a.m. through 5:00 p.m. (GMT), Monday through Friday, excluding holidays

• **Signaling**

Phone:

+44 1784 467 804 (within UK)

• **Software Solutions**

Phone:

+33 3 89 33 54 00

• **Asia**

• **India**

Phone:

+91 124 436 8552 or +91 124 436

8553 TAC Regional Support Office

Hours:

10:00 a.m. through 7:00 p.m. (GMT plus 5 1/2 hours), Monday through Saturday, excluding holidays

• **Singapore**

Phone:

+65 6796 2288

TAC Regional Support Office Hours:

9:00 a.m. through 6:00 p.m. (GMT plus 8 hours), Monday through Friday, excluding holidays

PIC Documentation Library

PIC customer documentation and online help are created whenever significant changes are made that affect system operation or configuration. Revised editions of the documentation and online help are distributed and installed on the customer system. Consult your NSP Installation Manual for details on how to update user documentation. Additionally, a Release Notice is distributed on the Tekelec Customer Support site along with each new release of software. A Release Notice lists the PRs that have been resolved in the current release and the PRs that are known to exist in the current release.

Listed is the entire PIC documentation library of user guides.

• Security User Guide

- Alarms User Guide
- ProAlarm Viewer User Guide
- ProAlarm Configuration User Guide
- Centralized Configuration Manager Administration Guide
- Customer Care User Guide
- Alarm Forwarding Administration Guide
- Diagnostic Utility Administration Guide
- ProTraq User Guide
- ProPerf User Guide
- ProPerf Configuration User Guide
- System Alarms User Guide
- ProTrace User Guide
- Data Feed Export User Guide
- Audit Viewer Administration Guide
- ProDiag User Guide
- SigTran ProDiag User Guide
- Report Server Platform User Guide
- Reference Data User Guide
- Exported Files User Guide
- Scheduler User Guide
- Quick Start User Guide

Locate Product Documentation on the Customer Support Site

Access to Tekelec's Customer Support site is restricted to current Tekelec customers only. This section describes how to log into the Tekelec Customer Support site and locate a document. Viewing the document requires Adobe Acrobat Reader, which can be downloaded at www.adobe.com.

1. Log into the [Tekelec Customer Support](#) site.

Note: If you have not registered for this new site, click the **Register Here** link. Have your customer number available. The response time for registration requests is 24 to 48 hours.

2. Click the **Product Support** tab.
3. Use the Search field to locate a document by its part number, release number, document name, or document type. The Search field accepts both full and partial entries.
4. Click a subject folder to browse through a list of related files.
5. To download a file to your location, right-click the file name and select **Save Target As**.

Chapter 2 :Product Highlights

Topics:

- *ProAlarm Viewer Summary*
- *Components*
- *Alarm Colors*
- *Alarm Types*

ProAlarm Viewer Summary

ProAlarm Viewer is part of the Network Software Platform (NSP) toolbox, which is part of the Performance Intelligence Center (PIC) Solution .

PIC performs the following:

- Acquires network data for real-time events by surveying SS7 network elements, linksets, links, and applications
- Correlates and stores the data
- Raises alarms

In ProAlarm Viewer, the user monitors alarm information for elements that are configured in the maps. (A user with the role NSPConfigurationManager configures maps of managed elements using ProAlarm Configuration.)

Note: Java plug-in 1.6.0-13 [or higher] must be installed to ensure proper functioning of the application. ProAlarm handles the following types of alarms:

- Alarms based on traffic supervision (Q.752)
- Alarms based on Key Performance Indicators (KPIs) (ProTraq)
- Alarms based on SS7 links (transmission, multiplexing)
- Alarms based on system errors (for system maintenance)

Components

The ProAlarm Viewer application resides on the NSP platform. The main components of ProAlarm Viewer are the

- Map list - list of maps configured in the ProAlarm Configuration application.
- Map pages - display of maps showing the general location of network elements.
- Alarm pages - display of alarm details, events, comments, and troubleshooting guidelines.

Alarm Colors

Alarms are color coded and can be configured to have different colors. See [Chapter 1:About This Help Text](#)he default colors are shown below:

Table 1 : Default Alarm Colors

Color	Associated Alarm
	(Yellow) Minor Alarm

Color	Associated Alarm
	(Orange) Major Alarm
	(Red) Critical Alarm
	(Light Blue) Warning Alarm
	(Light Green) Cleared Alarm
	(White) Indeterminate Alarm

Alarm Types

For a complete list of alarms, see the *PIC Alarm User Guide*.

Chapter 3 : Understanding ProAlarm Viewer Features

Topics:

- [*Menu Bar*](#)
- [*Map List*](#)
- [*Map Pages*](#)
- [*Alarm Pages*](#)

A
l
a
r
m

P
a
g
e
s
A
l
a
r
m

P
a
g
e
s

Menu Bar

The Menu Bar has three drop-down menus:

- **Open**
 - **Map Viewer** - an alarm map must first be configured in ProAlarm Configuration before it is displayed in the ProAlarm Viewer Map View (ProAlarm Configuration is accessible in the Configuration group on the **NSP Application** board.)
 - **All Alarms** - view of all the existing alarms in a table format regardless of if an alarm is configured on an alarm map. This view does not require ProAlarm Configuration. The All alarm list is independent of configured maps and their content. This All Alarm list always displays all alarms.
- **Display**
 - **Preferences** - a means to set application preferences such as Refresh Interval and default Number of Records Per Page. (Also see [Chapter 5: ProAlarm Viewer Preferences](#).)
- **Help**
 - **User manual** - a link to online help topics
 - **About ProAlarm** - basic contact and version information

Note: Do not use the Function Keys (F1 through F12) when using NSP. Function keys work in unexpected ways. For example, the F1 key does not open NSP help but opens the help for the browser in use. The F5 key does not refresh a specific screen, but refreshes the entire session and results in a loss of any entered information.

Map List

The Map list is a list of all available maps that have been configured in ProAlarm Configuration. If the Map List is empty, there are no maps assigned to you. See *ProAlarm Configuration User Guide* for information on creating and viewing maps. Also see the *NSP Security User Guide* for privacy information.

You can perform the following actions in the Map list:

- View a list of the configured maps to which you have access
- Click a map in the list to view the map graphic and its related details
- Define and apply filters for the list
- Set up privacy rules for the maps you own
- Refresh the view to see the most current list of maps
- Set the number of records to view per page

Filters in the Map List

From the Map list, you can access the Filter dialog, which enables you to define filters for the list.



Figure 9 : Filter Dialog

Icons in the Map List

Table 2 : Map List Icons

Icon	Description
	Navigation icon - to move from one record to another
	Filter - to define filters for the <i>Map list</i>
	Privacy - to define access rights to the maps you own
	Refresh - to refresh the page to show the most current Map list
	Records per Page - to set the number of records to view per page
	Change Records per Page - to refresh the page to reflect the number entered in Records Per Page
	Record Number/Total Number of Records - to show the number of the selected record / total number of records available
	Count on Demand -- to provide the total number of records in the database

Columns in Map List

Column Name	Description
Map Id	unique numerical identifier for the map
Name	actual (non-numerical) name for the map
Description	not applicable; this field is always empty by default
Owner	name of the user who created the map
Created	date the map was created

Table 3 : Map List Columns

Map Pages

Clicking a map name in the Map list displays the related Map page and its details. Clicking a network element on the Map page shows alarm details for that element only. The details are displayed in the alarms tables beneath the map. You can open only one map at a time.

Some maps are aggregate maps, meaning there is at least one map (sub-map) nested within another higher-level map. These layers enable you to view alarms in more specific locations within a network or region. ProAlarm Viewer enables you to drill down or drill up within these aggregate maps. (ProAlarm Configuration is used to configure aggregate maps.)

Note: There is only a single instance of each Managed Object in a map. If the object is configured (in ProAlarm Configuration) as both an object on the map and part of an aggregate (user-defined or map aggregate), the map does not display both.

You can perform the following actions in the map page:

- Select a network element to display its details.
- Manipulate the view by zooming in and out, panning, fitting to page, and refreshing.
- Drill up and down to the different layers of aggregate maps. See [Right-Click Menus in the Map Pages](#).

Icons in the Map Page

Two sets of icons are associated with a Map page: network object icons and toolbar icons.

Network Object Icons

The features of network object icons are explained below:

- The color of the base element and the alarm balloon denotes the severity of the newest, most severe alarm for that network element. See [Alarm Colors](#) and [Modifying User Preferences](#).
- The color of the outline around the base element denotes the most severe acknowledged alarm.
- The object identifier is just under the object.
- The number in the base element is the number of outstanding alarms.
- The number in the alarm balloon is the number of new alarms.
- A + sign indicates that additional lower-level alarms exist but are not referenced in the display.

The figure below shows a close-up of some object icons with alarm balloons.

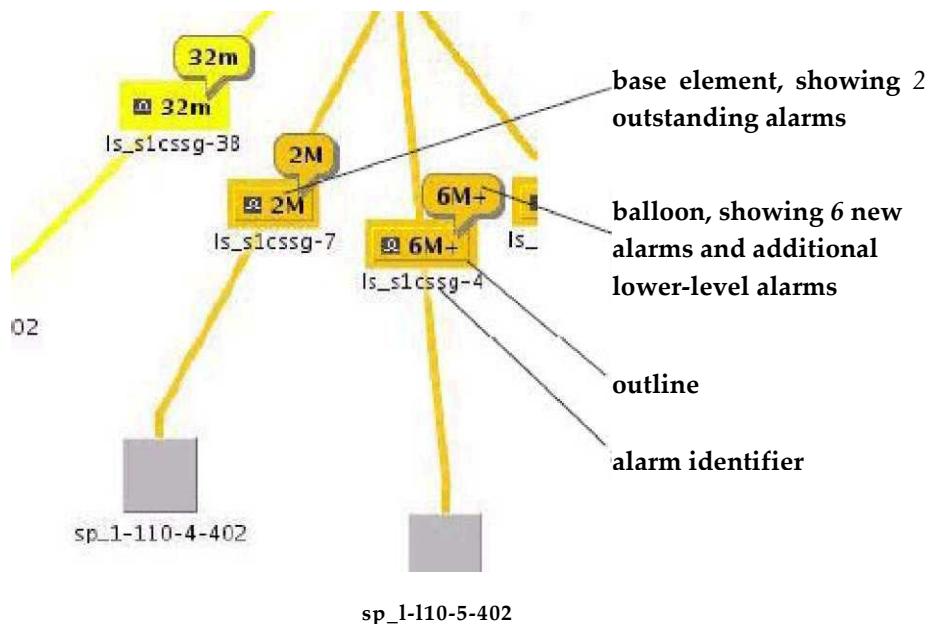


Figure 10 : Network Object Icons

Toolbar Icons

Table 4 : Map Page Toolbar Icons

Icons	Description
	Select - to select a network element
	Pan - to scroll the map in any direction
	Zoom In - to enlarge the map view
	Zoom Out - to reduce the map view
	Fit Contents to page- to view all the resources in the area

Icons	Description
	Area select - to zoom in on a specific area to view
	Top map layer - to go to the topmost layer of the map.
<input checked="" type="checkbox"/> Automatic Refresh	Automatic Refresh - a toggle switch to turn the map and alarm refresh function on and off. Turning it off prevents further page updates. The Automatic Refresh function defaults to "on" when a map is closed and opened again. The refresh interval is set in the View ▶ Preferences menu

Right-Click Menus in the Map Pages

You can right-click objects in the Map page to perform the following functions:

- Acknowledge an alarm
- Terminate an alarm
- Drill up in an aggregate map
- Drill down in an aggregate map
- Show the status and state of a linkset (if you have ProDiag, an NSP diagnostic tool, installed)

Alarm Pages

Alarm details are displayed on five tabbed pages. The pages and their tables are laid out the same for the Map page and the Alarm pages. (Both views are accessible from the **Open** menu.)

Table 5 : Tabbed Pages for Alarms

Alarm Page	Explanation
Alarms: opened page	provides details for all open alarms; filters can be set to customize the view
Alarms: terminated page	provides details for all terminated alarms; filters can be set to customize the view
Events page	provides the details of events associated with a selected alarm record
Comments page	allows a user to add and edit comments applicable to a specific alarm when acknowledging or terminating the alarm
Troubleshooting page	allows a user with the NSPConfigManager role to add and edit troubleshooting guidelines for a specific alarm

Alarms: Opened Page

The Alarms: opened page displays a table with information about alarms that are still active. Each active alarm is a single record in the Alarms: opened table.

You can perform the following actions in the Alarms: opened page:

- View all opened alarms for Managed Objects.
- View the details of an alarm.
- Drill down to charts and Key Performance Indicators (KPIs) to further analyze the alarm (for ProTraq cell alarms only).
- Terminate an alarm. (When the probable cause of an alarm has been rectified, the Alarm has to be cleared or terminated.)

Note: You can terminate an alarm only if you belong to group NSPMonitorPowerUser.

- Acknowledge an alarm.

Note: You can acknowledge an alarm only if you belong to group NSPMonitorUser.

- Manage the display by setting filters, turning Automatic Refresh on and off, setting the number of rows per page, and sorting columns.

Filters in Alarms: Opened Page

You can filter alarms by using any combination of the three filters on the Alarms: opened page. Each filter defaults to No Filtering. The filter fields are

- **Perceived Severity** - to filter by specific severity (critical, major, minor, warning).
- **Managed Object Class** - to filter by class level of the object (for example, IXP, IMF, Host name).
- **Alarm Type** - to filter by type (for example, communications, environment, equipment).

Icons in Alarms: Opened Page

Table 6 : Alarms: Opened Icons

Alarm Icon	Description
	Terminate alarm - to terminate selected alarms
	Acknowledge alarm - to acknowledge selected alarms
	Change records per page - to refresh the view to show the number of rows entered in the Number of Rows field

Table 7 : Alarms: Opened Columns

Column Name	Description
-------------	-------------

Select	check box to select alarm record(s)
Alarm Identifier	unique ID for that alarm
Perceived Severity	alarm severity level (color coded)
Managed Object	specific object on which the alarm occurred, if the alarm is associated with an object
Probable Cause	cause of the alarm based on history of similar alarms
Specific Problem	alarm name
Raised Time	time the alarm was registered
Changed Time	time the status of the alarm was changed
Event Count	number of events for the alarm
Managed Object Class	class level of the object (for example, IXP, IMF, Host) if the alarm is associated with an element
Acknowledge • State • Time • User	<ul style="list-style-type: none"> state of the acknowledged alarm; check denotes "yes"; yellow triangle denotes "no." time the alarm was acknowledged user who acknowledged the alarm
Alarm Type	type of alarm (for example, equipment, processing error, quality of service).
Troubleshooting Action	drill-down links (for ProTraq cell alarms only) to chart and KPI data selected in a group of alarms

Alarms: Terminated Page

The Alarms: terminated page displays a table that contains information about alarms that have been terminated. Each terminated alarm is a single record in the Alarms:terminated table.

Note: The system exports terminated alarms (with all their fields) for storage on a dedicated directory. The files are kept for 90 days, after which they are purged. This feature enables users to calculate statistics on alarms.

You can perform the following actions in the Alarms: terminated page:

- View all terminated alarms for Managed Objects for a designated time, ranging from the past hour through the past 30 days
- View the details of an alarm
- Drill down to charts and Key Performance Indicators (KPIs) to further analyze the alarm (for ProTraq cell alarms only).

- Manage the display by setting filters, setting the number of rows per page, and sorting columns

Filters in Alarms: Terminated Page

You can filter alarms by using any combination of the three filters on the Alarms: terminated page. The filter fields are

- **Alarm Type** - to filter by type (for example, communications, environment, equipment). The default is No Filtering.
- **Managed Object Class** - to filter by class level of the object (for example, IXP, IMF, Host name). The default is No Filtering.
- **Time Interval** - the time range during which the alarm was terminated. The default is Last Hour.

Icons in Alarms: Terminated Page

Table 8 : Alarms Terminated Icons

Alarm Icon	Description
Number of Rows <input type="text" value="20"/>	Number of Rows -- maximum number of rows to display on each page
	Change records per page-- to refresh the view to show the number of rows entered in the Number of Rows field
	View details - to view events, comments, and troubleshooting tips for a selected alarm (or the last alarm selected in a group of alarms)

Columns in Alarms: Terminated Page

Table 9 : Alarms Terminated Columns

Column Name	Description
Select	radio button to select a terminated alarm record
Alarm Identifier	unique ID for the alarm
Managed Object	specific object on which the alarm occurred, if the alarm is associated with an object
Probable Cause	cause of the alarm based on history of similar alarms
Specific Problem	alarm name
Raised Time	time the alarm was registered
Cleared Time	time that the alarm was terminated
Event Count	number of events for the alarm record

Column Name	Description
Managed Object Class	class level of the object (for example, IXP, IMF, Host), if the map is associated with an element
User	user who terminated the alarm
Acknowledge	<ul style="list-style-type: none"> • indicator as to whether the alarm was acknowledged. (A check means "yes," and yellow triangle means "no.") • time that the alarm was acknowledged • user who acknowledged the alarm
Alarm Type	type of alarm (for example, equipment, processing error, quality of service)
Changed Time	time the alarm status was changed
Perceived Severity	alarm severity level (color coded)
Troubleshooting Action	drill-down links to chart and KPI data (for ProTraq cell alarms only)

Events Page

The Events page displays a table that details events for an alarm received from the Performance Intelligence Center (PIC) system. An alarm can have more than one event associated with it.

You can perform the following actions on the Events page:

- View event details for a selected alarm
- Manage the display by setting the number of rows per page and sorting columns

Icons in the Events Page

Table 10 : Events Icons

Alarm Icon	Description
	Change records per page-- to refresh the view to show the number of rows entered in the Number of Rows field.
Number of Rows <input type="text" value="20"/>	Number of rows -- indicates the number of rows for display on one page.

Columns in the Events Page

Table 11 : Events Page Columns

Column Name	Description
Event Identifier	unique identifier for the event; this identifier is different from that of the associated alarm
Event Time	date and time the event occurred
Specific Problem	description of the problem that occurred
Perceived Severity	event severity level (color coded)
Additional Text	additional information (optional) provided by the event originator
Alarm Type	type of alarm (for example, equipment, processing error, quality of service)

Comments Page

Users have the option to make comments about an alarm. These comments are displayed in a table on the Comments page.

You can perform the following actions in the Comments page:

- View a comment for a selected alarm
- Edit comments for a selected alarm
- Delete comments for a selected alarm
- Manage the display by setting the number of rows per page and sorting columns

Icons in the Comments Page

Table 12 : Comments Page Icons

Icon	Description
	Edit Comment - to edit the comment for the selected alarm record
	Delete Comment - to remove the comment about the selected alarm from the Comments page
Number of Rows <input type="text" value="20"/>	Number of Rows - number of rows for display on each page
	Change records per page - to refresh the view to show the number of rows entered in the Number of Rows field.

Columns in the Comments Page

Table 13 : Comments Page Columns

Column Name	Description
Select	radio button for selecting a comment to edit or delete
Comment Identifier	unique ID for the comment
Comment Time	time and date the comment was entered
User Name	person who entered the comment
Comment Text	body of the comment

Troubleshooting Page

An alarm can have a associated Troubleshooting guideline that provides specific recommendations for resolving the alarm.

You can perform the following actions in the Troubleshooting page:

- View a Troubleshooting guideline for a selected alarm
- Drill down to charts and Key Performance Indicators (KPIs) to further analize the alarm
- Write or edit a Troubleshooting guideline for a selected alarm

Icons in the Troubleshooting Page

Table 14 : Troubleshooting Page Icons

Icon	Description
	Jump to chart - to open a chart in ProPerf to further troubleshoot the alarm (for ProTraq cell alarms only)
	Jump to KPI data - to access the KPI data in ProTrace to further troubleshoot the alarm (for ProTraq cell alarms only)
	Edit Guideline- to enter a new Troubleshooting guideline or edit an existing one for the selected alarm record

Chapter 4 :Using ProAlarm Viewer

Topics:

- *Accessing ProAlarm Viewer'*
- *Opening Alarm Pages*
- *Changing Alarm Status*
- *Sorting Columns in Alarm Pages*
- *Drilling Down to Troubleshoot ProTraq Cell Alarms*
- *Displaying Alarm Events, Comments, and Troubleshooting Guidelines*
- *Adding, Editing, and Deleting Comments*
- *Linking to ProDiag*
- *Adding and Editing Troubleshooting Guidelines*
- *Closing Maps*
- *Closing ProAlarm Viewer*

Accessing ProAlarm Viewer

To access and log in to ProAlarm Viewer, follow these steps:

1. Log in to NSP using your Web browser.

The Application board is displayed.

2. Click **ProAlarm Viewer** in the Application group.

The ProAlarm Viewer page is displayed, with the Map list active by default.

Opening Alarm Pages

Alarm pages may or may not have accompanying map graphic displays. The following two sections explain how to view alarm details with and without maps.

Viewing Alarm Details (without Maps)

To open a detailed list of alarms that are not associated with a network map, perform:

1. From the NSP Application board, click **ProAlarm Viewer**.

The Map list and Menu bar are displayed.

2. Select **Open > All Alarms** to view alarms tables only.

Viewing Alarm Details via Maps

1. From the NSP Application board, click **ProAlarm Viewer**.

The Map list and Menu bar are displayed.

2. Click the name of the map in the Map list.

The Map page is displayed for the selected map. A detailed list of alarms for the map are displayed underneath the map.

3. Click the appropriate network element.

The detailed list of alarms show only the data for the selected network element(s). Selecting two elements shows data for both of them.

Note: There is only a single instance of each Managed Object in a map. If the object is configured (in ProAlarm Configuration) as both an object on the map and part of an aggregate (user-defined or map aggregate), the map does not display both.

Note: To remove (or stop) element filtering, click any empty area of the map.

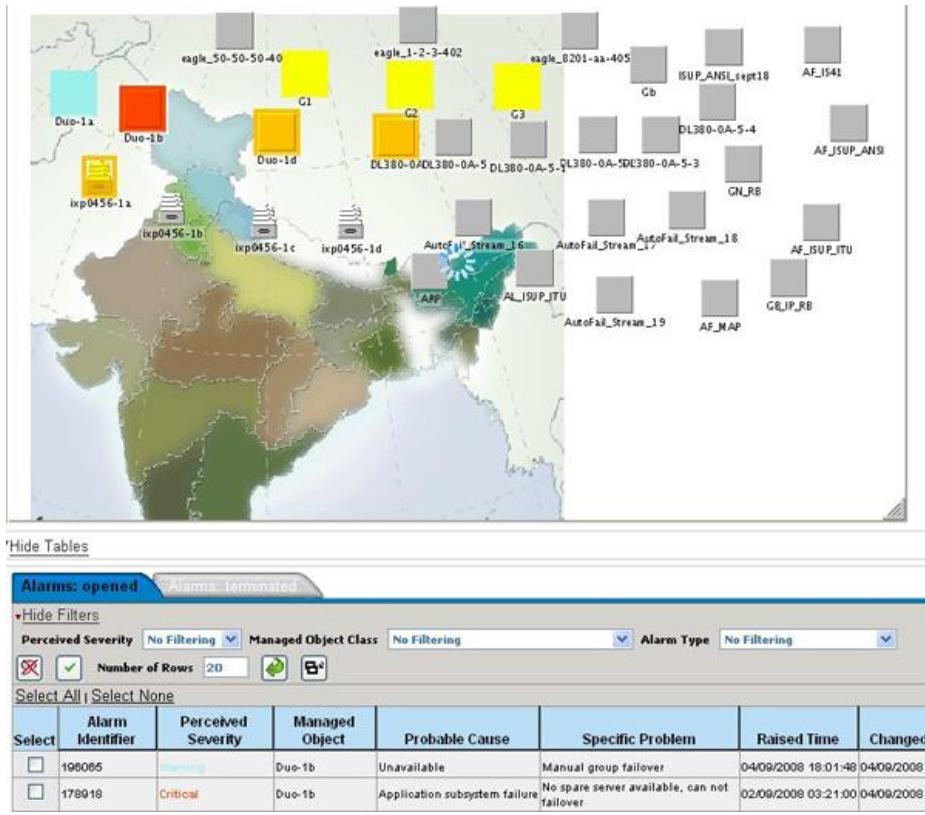


Figure 11 : Alarms Associated With Map Object

For information on Alarm tables, see [Alarm Pages](#)

Changing Alarm Status

Changing an alarm status means setting the alarm to be either "acknowledged" or "terminated."

Acknowledging an Alarm

1. Click the appropriate check box in the Select column of the Alarms: opened table.

Click the Acknowledge Alarm icon  in the Menu Bar.

The Status, Time, and User columns are populated to reflect the change.

After you click the Acknowledge Alarm icon, a pop-up dialog is displayed, giving you the option to add a comment for that alarm.

Note: If the dialog is not displayed, check that your browser pop-up blocker is not enabled; also check **Display preferences** in the Menu Bar to ensure the Auto Comments Popup is set to **True**. If you do make changes, you might have to log out and back into PIC for them to take effect.

Terminating an Alarm

1. Click the appropriate check box in the Select column of the Alarms: opened table.
2. Click the Terminate Alarm icon  in the Menu Bar.

A pop-up dialog is displayed, giving you the option to add a comment for that alarm. On the next Refresh cycle, the alarm record moves from the Alarms: opened to the Alarms: terminated table. (If the alarm has not been acknowledged, the system acknowledges the alarm first.)

Note: If the Comments dialog is not displayed, check that your browser pop-up blocker is not enabled; also check **Display preferences** in the Menu Bar to ensure the Auto Comments Popup is set to **True**. If you make any changes, you might have to log out and back into PIC for the changes to take effect.

Sorting Columns in Alarm Pages

You can sort records in ascending or descending order in the Alarm tables by clicking the column header. A small yellow arrow is displayed, indicating in which direction the column is sorted.

Drilling Down to Troubleshoot ProTraq Cell Alarms

You can drill down to view charts or KPI data for a ProTraq cell alarm. This feature enables a quicker view of alarm data for more in-depth analysis and easier troubleshooting.

To drill down to a chart in ProPerf, click the Jump to Chart icon in one of these locations:

- the Troubleshooting Action column of the Alarms: opened or Alarms: terminated page.
- the Troubleshooting page displayed in the Alarm details section (at the bottom of the screen)

The ProPerf chart is opened in another window. See *ProPerf User Guide* for details on interpreting the chart.

To drill down to a chart in ProTrace, click the Jump to KPI Data icon in one of these locations:

- the Troubleshooting Action column of the Alarms: opened or Alarms: terminated page.
- the Troubleshooting page displayed in the Alarm details section (at the bottom of the screen)

The ProTrace xDR Viewer is opened in another window. See *ProTrace User Guide* for details on interpreting the KPI data.


Note: If the following message is displayed after you click the Jump to KPI Data icon, see *ProTraq User Guide* to turn on the drilldown function. (The message provides the session name, which is the identifier in ProTraq.)

Message: The drilldown is turned off for the statistical session: <session_name>.

Displaying Alarm Events, Comments, and Troubleshooting Guidelines

Follow these steps to view Events, Comments and Troubleshooting information associated with active or terminated alarms.

1. Click the appropriate check box in the Select column of the Alarms: opened table or the radio button in the Select column of the Alarms: terminated table.

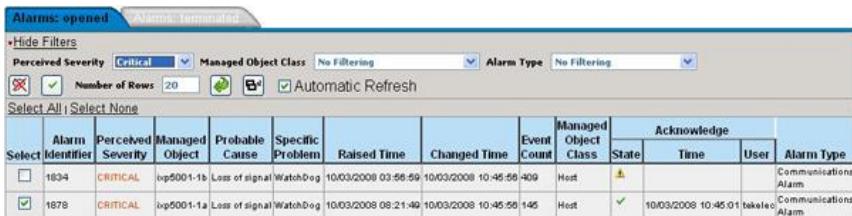

Select	Alarm Identifier	Perceived Severity	Managed Object	Probable Cause	Specific Problem	Raised Time	Changed Time	Event Count	Managed Object Class	Acknowledge			Alarm Type
										User	State	Time	
<input type="checkbox"/>	1834	Critical	bp5001-1b	Loss of signal	WatchDog	10/03/2008 03:56:59	10/03/2008 10:46:56	409	Host				Communications Alarm
<input checked="" type="checkbox"/>	1878	Critical	bp5001-1a	Loss of signal	WatchDog	10/03/2008 08:21:49	10/03/2008 10:46:56	145	Host		10/03/2008	10:45:01	teleco Communications Alarm

Figure 12 : Alarms Opened Table with Alarm Selected



Select	Alarm Identifier	Managed Object	Probable Cause	Specific Problem	Raised Time	Cleared Time	Event Count	Managed Object Class	User	Acknowledge			Alarm Type
										User	State	Time	
<input checked="" type="radio"/>	13	MI0-0A	Loss of signal	WatchDog	01/10/2008 10:52:52	08/10/2008 06:20:07	4126	JMX Agent	NSPInternal		07/10/2008	09:01:23	teleco Communications Alarm

Figure 13 :Alarms: Terminated Table With Alarm Selected

2. Click the Show Detail icon  in the appropriate Menu Bar.

The Events, Comments and Troubleshooting tables display information for the selected alarm.

Note: The Comments and Troubleshooting tables are not always populated.

Adding, Editing, and Deleting Comments

You can add comments when acknowledging or terminating an alarm. You can edit these comments from the Comments page (at the bottom of the screen).

Adding a New Comment

Users add new comments when terminating or acknowledging an alarm from the Alarms: opened page. The alarm status changes only after the Comments window contents are saved.

Note: NSP makes it possible for an external system to change alarm status using an alarm-forwarding Simple Network Management Protocol (SNMP) agent in the host. See *Alarm Forwarding Administration Guide* for details.

1. Click the appropriate check box in the Select column of the Alarms: opened table.

Alarm Identifier	Perceived Severity	Managed Object	Probable Cause	Specific Problem	Raised Time	Changed Time	Event Count	Managed Object Class	Acknowledge	State	Time	User	Alarm Type
<input type="checkbox"/> 1834	CRITICAL	1xp5001-1b	Loss of signal	WatchDog	10/03/2008 03:56:59	10/03/2008 10:45:58	409	Host	<input checked="" type="checkbox"/>	!			Communications Alarm
<input checked="" type="checkbox"/> 1878	CRITICAL	1xp5001-1a	Loss of signal	WatchDog	10/03/2008 08:21:49	10/03/2008 10:45:59	145	Host	<input checked="" type="checkbox"/>	10/03/2008 10:45:01	teleco		Communications Alarm

Figure 14 :Alarms: Opened Table With Alarm Selected

2. Click either the Acknowledge Alarm icon or the Terminate Alarm icon . The Comments Dialog is displayed



Figure 15 : Comments Dialog

Note: If the dialog is not displayed, check that your browser pop-up blocker is not enabled; also check Display preferences in the Menu Bar to ensure the Auto Comments Popup is set to **True**. If you have to make any changes, you might have to log out and back in to PIC.

3. Enter a comment (optional) containing up to 255 characters and click **Apply**. The comment is saved.

Note: The alarm record moves from the Alarms: opened to the Alarms: terminated table if the alarm is being terminated.

Editing a Comment

1. Click the appropriate check box in the Select column of the Alarms: opened table or the radio button in the Select column of the Alarms: terminated table.
2. Click the Show Detail icon
3. Click the **Comments** tab.

If there are comments for this alarm, they are displayed in the Comments table.

4. Click the radio button for the appropriate comment and click the Edit Comment icon

The Comments dialog containing the comment text is displayed.

5. Make the necessary changes and click **Apply**.

The content changes are saved.

Deleting a Comment

1. Click the appropriate check box in the Select column of the Alarms: opened table or the radio button in the Alarms: terminated table.
2. Click the Show Detail icon .
3. Click the **Comments** tab.

If there are comments for this alarm, they are displayed in the Comments table.

4. Click the radio button for the appropriate comment and click the Delete Comment icon . The comment is deleted.

Adding and Editing Troubleshooting Guidelines

An alarm can have a Troubleshooting guideline associated with it that provides specific recommendations for resolving the alarm. You can add and edit Troubleshooting Guidelines for individual alarms. Troubleshooting Guidelines are optional.

Follow these steps to add a new guideline for an alarm or edit an existing guideline.

1. Click the appropriate check box in the Select column of the Alarms: opened table or the radio button in the Alarms: terminated table.
2. Click the Show Detail icon .
3. Click the **Troubleshooting** tab.
4. Click the Edit Guideline icon . The Guidelines Dialog is displayed.

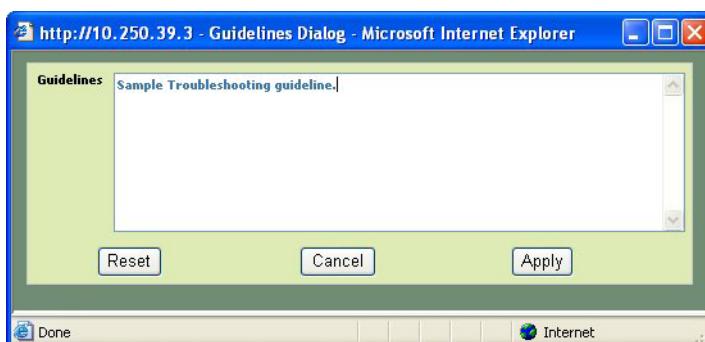


Figure 16 : Guidelines Dialog

5. Enter the necessary information and click **Apply**. The content is saved.

Linking to ProDiag

You can check the status and state of a link or linkset if you have ProDiag installed on your system. For information on ProDiag and how to link to it from ProAlarm Viewer, see *ProDiag User Guide*.

Closing Maps

ProAlarm Viewer displays its maps in separate windows. To return to the Map list display from a map window,

Click the Close button at the upper right corner of the window. **Note:**
ProAlarm Viewer allows only one map to be open at one time.

Closing ProAlarm Viewer

To close ProAlarm Viewer, click **Home** to return to the NSP Portal page or click **Logout** to exit PIC.

Chapter 5: ProAlarm Viewer Preferences

Topics:

- *Modifying Application Preferences*
- *Modifying User Preferences*

Modifying Application Preferences

You can modify Application Preferences in ProAlarm Viewer. These preferences apply only to the ProAlarm Viewer application and do not affect preferences for other applications.

Note: Users must have the role of NSPMonitoringUser or NSPBusinessUser to manage alarm preferences.

1. From the ProAlarm Viewer Menu Bar, select **Display > Preferences**. The ProAlarm viewer application preferences dialog is displayed.

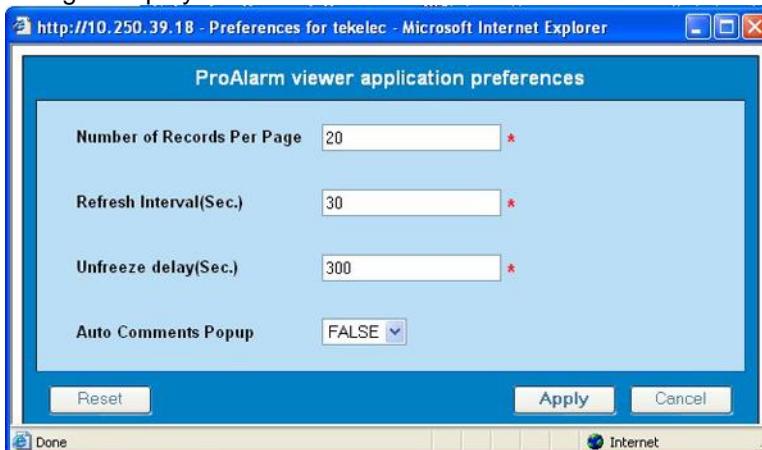


Figure 17 : ProAlarm Viewer Application Preferences Dialog

2. Modify the preferences as needed. The options are explained below:

The changes do not take effect until you log out of and in again to the Network Software Platform.

Modifying User Preferences

User Preferences settings apply globally to Network Software Platform (NSP) applications. For information on setting User Preferences, see [Chapter 1:About This Help Text](#).

Note that within User Preferences, you can modify the default colors that indicate alarm severity. The colors are displayed in the Perceived Severity column of alarm tables.