

Tekelec EAGLE[®] 5
Integrated Signaling System

Release 35.1

Commands Manual

910-3722-001 Revision C

December 2007



TEKELEC

Copyright2006 Tekelec®

All Rights Reserved.

Printed in U.S.A.

Notice

Information in this documentation is subject to change without notice. Unauthorized use or copying of this documentation can result in civil or criminal penalties.

Any export of Tekelec products is subject to the export controls of the United States and the other countries where Tekelec has operations.

No part of this documentation may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying or recording, for any purpose without the express written permission of an authorized representative of Tekelec.

Other product names used herein are for identification purposes only, and may be trademarks of their respective companies.

RoHS 5/6 - As of July 1, 2006, all products that comprise new installations shipped to European Union member countries will comply with the EU Directive 2002/95/EC "RoHS" (Restriction of Hazardous Substances). The exemption for lead-based solder described in the Annex will be exercised. RoHS 5/6 compliant components will have unique part numbers as reflected in the associated hardware and installation manuals.

WEEE - All products shipped to European Union member countries comply with the EU Directive 2002/96/EC, Waste Electronic and Electrical Equipment. All components that are WEEE compliant will be appropriately marked. For more information regarding Tekelec's WEEE program, contact your sales representative.

Trademarks

The Tekelec logo, EAGLE, G-Flex, G-Port, IP⁷, IP⁷ Edge, IP⁷ Secure Gateway, and TALI are registered trademarks of Tekelec. TekServer is a trademark of Tekelec. All other trademarks are the property of their respective owners.

Patents

This product is covered by one or more of the following U.S. and foreign patents:

U.S. Patent Numbers:

5,008,929; 5,953,404; 6,167,129; 6,324,183; 6,327,350; 6,456,845; 6,606,379; 6,639,981; 6,647,113; 6,662,017; 6,735,441; 6,745,041; 6,765,990; 6,795,546; 6,819,932; 6,836,477; 6,839,423; 6,885,872; 6,901,262; 6,914,973; 6,940,866; 6,944,184; 6,954,526; 6,954,794; 6,959,076; 6,965,592; 6,967,956; 6,968,048; 6,970,542

Ordering Information

For additional copies of this document, contact your sales representative.

Table of Contents

Chapter 1. Introduction

Overview.....	1-1
Where to Find Information in This Manual.....	1-2
Scope and Audience.....	1-3
Related Publications.....	1-3
Customer Assistance.....	1-7
Documentation Packaging, Delivery, and Updates.....	1-8
Documentation Admonishments.....	1-8

Chapter 2. Alphabetical List of Commands

Chapter 3. Commands Listed by Class

Chapter 4. Using Commands

Introduction.....	4-1
Maintenance and Administration Subsystem Processors.....	4-1
Removable Cartridge Disk Drives.....	4-2
Input/Output Devices	4-2
Terminals and Printers.....	4-2
Terminal and Printer Connections.....	4-3
KSR Function on VT320 Terminal Devices.....	4-4
KSR Configuration.....	4-4
Changing the Mode Of Operation.....	4-4
Requirements.....	4-4
Telnet Terminals.....	4-4
Element Management System Alarm Monitor Terminals.....	4-7
About Commands.....	4-8
Entering Commands.....	4-8
Action Commands.....	4-8
Command Keywords and Parameters	4-9
Keyboard Functions.....	4-9
Arrow Key Operation.....	4-11
Up Arrow Key.....	4-12
Down Arrow Key.....	4-13
Right Arrow Key.....	4-13
Left Arrow Key.....	4-13
Command Output and Messages.....	4-13
Command Output Banners.....	4-14
System Security.....	4-15
Rules for User ID and Password Administration.....	4-15
Command Classes.....	4-16
Login Security Checks.....	4-16
Intrusion Alert.....	4-17

Login Procedure.....	4-17
Login Error Messages.....	4-21
Logout Procedure	4-22

Chapter 5. Commands

Chapter 6. Pass-Through Commands

Introduction.....	6-1
Command Conventions.....	6-1

Appendix A. Reference Information

Summary of Range Values for :link Parameter.....	A-2
Possible Values for PST/SST/AST.....	A-3
PST.....	A-3
SST.....	A-4
AST.....	A-4
Point Code Formats and Conversion.....	A-5
ANSI Point Codes.....	A-5
ITU International Point Codes.....	A-8
ITU National Point Codes.....	A-9
Converting ITU National Point Code Formats.....	A-9
Introduction.....	A-9
Converting Single Number ITU National Point Codes.....	A-10
Converting Multiple-Part ITU National Point Codes.....	A-11
24-bit ITU-National Point Codes.....	A-11
Spare and Private Point Code Subtype Prefixes.....	A-12
Valid CIC Ranges for SI and MSU Types in Routing Key Static Entries.....	A-14
NAIV/NAI Mapping.....	A-15
NPV/NP Mapping.....	A-15
Cards that use the ent-card Command.....	A-16
Summary of Loopback Testing Commands and Functions.....	A-20
Tekelec-defined ISUP Normalization Variants.....	A-31

Appendix B. Acronyms and Abbreviations

Index

List of Figures

Figure 4-1.	System Terminal User Display.....	4-3
Figure 4-2.	Telnet Terminal Selection and Login.....	4-6
Figure 4-3.	Output Banner Format.....	4-14
Figure 5-1.	The chg-db:action=backup:dest=fixed Command.....	5-91
Figure 5-2.	The chg-db:action=backup:dest=remove Command.....	5-91
Figure 5-3.	The chg-db:action=restore:src=fixed Command.....	5-91
Figure 5-4.	The chg-db:action=restore:src=remove Command.....	5-92
Figure 5-5.	The chg-db:action=repair Command.....	5-92
Figure 5-6.	The chg-db:action=import Command.....	5-93
Figure 5-7.	The chg-db:action=beginedl/finshedl Command.....	5-94
Figure 5-8.	Prefix Table References.....	5-265
Figure 5-9.	Eagle Input and Internal Clocks with TDM-GTI.....	5-379
Figure A-1.	ATM Loopback Tests.....	A-30

List of Tables

Table 1-1. Manual Organization.....	1-2
Table 4-1. Action Commands and Their Associated System Entity	4-8
Table 4-2. Keyboard Functions.....	4-9
Table 5-1. Parameters That Must Be Provisioned Prior to Updating OAP	5-22
Table 5-2. Other Data Required for Updating the OAP Configuration.....	5-23
Table 5-3. Performance Impact of act-oap-config parameters	5-24
Table 5-4. TSM and TDM Memory Requirements	5-28
Table 5-5. Commands for which canc-cmd Halts Processing and Output.....	5-42
Table 5-6. Valid Parameter Combinations for Routing Key Types using the chg-appl-rtkey command.	5-60
Table 5-7. PSTN Categories and Associated PSTN IDs.....	5-61
Table 5-8. Routing Keys and Supported PSTN Categories and PSTN IDs for PSTN Category 1	5-61
Table 5-9. Maximum IP Connections per Card.....	5-72
Table 5-10. Performance Range for Enhanced Bulk Download Activities.....	5-96
Table 5-11. Valid pvalue Values for chg-dcmps.....	5-98
Table 5-12. Link Alignment Performance.....	5-120
Table 5-13. EIR Response Type (eirrsptype) Values.....	5-134
Table 5-14. Valid Parameter Combinations for the chg-gtt Routing Parameters	5-166
Table 5-15. Gateway Screening Stop Action Definitions.....	5-174
Table 5-16. DRANAIV/DRANAI Mapping.....	5-180
Table 5-17. DRANPV/DRANP Mapping.....	5-181
Table 5-18. Examples of parameter combinations for the chg-inpopts command	5-183
Table 5-19. Valid Subnet Mask Values.....	5-188
Table 5-20. Default Subnet Mask Values.....	5-188
Table 5-21. Valid chg-isupvar-attrb command parameter combinations.....	5-189
Table 5-22. SLS Bit Rotation	5-224
Table 5-23. Link Alignment Performance.....	5-229
Table 5-24. Impacts on Data Collection of Turning On the 15 Minute Measurements Option	5-248
Table 5-25. Valid PVN Subnet Mask Values.....	5-257
Table 5-26. Acceptable nsfi and si parameter combinations (chg-scr-sio)....	5-331
Table 5-27. Valid combinations for the h0/h1 and nh0/nh1 parameters (chg-scr-sio).....	5-331
Table 5-28. Additional Valid chg-scr-sio Parameter Combinations.....	5-332
Table 5-29. Routing Key Quantity Change Examples for DCM Cards	5-349
Table 5-30. Routing Key Quantity Change Examples for SSED Cards	5-350
Table 5-31. NPCFMTI Parameter - ITU National Point Code Values.....	5-372
Table 5-32. Point Code Format Examples.....	5-373

Table 5-33. Valid and Default UAPS Parameter Values	5-395
Table 5-34. Performance for the copy-meas command.....	5-420
Table 5-35. Commands For Which dact-cmd Aborts Processing and Output.....	5-424
Table 5-36. Valid Combinations for the h0/h1 and nh0/nh1 Parameters (chg-scr-sio).....	5-537
Table 5-37. SE-HSL SLK Capacity Feature Quantities.....	5-559
Table 5-38. Minimum Hardware Required for LNP Quantity Features	5-559
Table 5-39. Maximum Sockets/Associations per Card.....	5-573
Table 5-40. Valid ent-gtt Routing Parameter Combinations.....	5-639
Table 5-41. Valid Subnet Mask Values.....	5-654
Table 5-42. SLS Bit Rotation.....	5-672
Table 5-43. Link Alignment Performance.....	5-675
Table 5-44. Valid Combinations for the h0/h1 Parameters (ent-scr-sio).....	5-740
Table 5-45. Valid ent-scr-sionsfi and si Parameter Combinations.....	5-741
Table 5-46. Additional Valid ent-scr-sio Parameter Combinations.....	5-741
Table 5-47. Transmission Rate for the bps Parameter.....	5-756
Table 5-48. Examples of ent-srvsel Parameter Combinations	5-769
Table 5-49. DMS.CFG File Location for format-disk Command.....	5-794
Table 5-50. Disk Format Capacity	5-794
Table 5-51. Parameter Combinations for the inh-alm command	5-800
Table 5-52. Route Set Test When LNP is Offline.....	5-806
Table 5-53. Receiving Messages when LNP is Offline	5-807
Table 5-54. Reason That Card Requires a Full Data Download	5-814
Table 5-55. Reason That Card Requires a Full Data Download	5-828
Table 5-56. rept-ftp-meas Valid and Invalid Parameter Combinations.....	5-837
Table 5-57. Explanation of rept-imt-info:report=hmuxerr Statistics	5-841
Table 5-58. Explanation of rept-imt-info:report=hiprerr Statistics	5-847
Table 5-59. Hexadecimal/Decimal Values for s and e parameters	5-861
Table 5-60. rept-imt-lvl1 Statistics Explanation	5-869
Table 5-61. Valid Parameter Combinations for the type Parameter	5-881
Table 5-62. Auto-Inhibit Hardware Verification Codes.....	5-923
Table 5-63. Summary of DPC Parameter Syntaxes	5-961
Table 5-64. IMT Bus States	5-987
Table 5-65. Summary of DPC Parameter Syntaxes.....	5-1021
Table 5-66. Serial Number Formats.....	5-1124
Table 5-67. Summary of DPC Parameter Syntaxes	5-1156
Table 5-68. Retrieve Commands for Additional Table Information	5-1514
Table 5-69. Time Zones Set by the set-time command	5-1560
Table 5-70. Test Disk Execution Times	5-1566
Table 5-71. Parameter Combinations for the unhb-alm command	5-1585
Table 5-72. Actions with Corresponding Upgrade Phase.....	0
Table 5-73. Dependencies in Card Loading.....	0
Table 5-74. Parameter/Card Type Filters for MSUs.....	0
Table A-1. Summary of Ranges for link Parameter.....	A-2
Table A-2. Commands that support the Spare Point Code Prefix.....	A-12
Table A-3. Commands that support the Private Point Code Prefix.....	A-14
Table A-4. Valid CIC Ranges for SI and MSU Types.....	A-14
Table A-5. NAIV/NAI Mapping.....	A-15

Table A-6. NPV/NP Mapping.....	A-15
Table A-7. Valid ent-card Applications (appl) and Card Types (type).....	A-16
Table A-8. Loopback Testing Commands and Functions—LIME1 and LIMT1 Cards.....	A-21
Table A-9. Loopback Testing Commands and Functions—LIM and ATM Cards.....	A-25
Table A-10. Tekelec-defined ISUP Normalization Variants.....	A-31

Introduction

Overview.....	1-1
Where to Find Information in This Manual.....	1-2
Scope and Audience.....	1-3
Related Publications.....	1-3
Customer Assistance.....	1-7
Documentation Packaging, Delivery, and Updates.....	1-8
Documentation Admonishments.....	1-8

Overview

The *Commands Manual* provides a description of all commands used in the EAGLE 5 Integrated Signaling System (ISS) and LNP. The EAGLE 5 ISS includes the IP7 Secure Gateway and the IP7 Front End. The use of the term “the system” indicates that the information is common to all of the functions of the EAGLE 5 ISS. Differences are indicated for the specific product, as appropriate.

NOTE: The IP7 Front End configuration is a stand-alone single-shelf IP7 Secure Gateway. When using this manual, consider IP7 Front End and IP7 Secure Gateway as functional equivalents with the IP7 Front End limited to a single shelf configuration.

Commands are entered at a terminal to perform system operations such as displaying the system status, administering system security, and maintaining the database. Error messages are displayed to provide information about problems encountered when a command is entered.

Where to Find Information in This Manual

Table 1-1 shows how this manual is organized.

NOTE: Throughout this manual, reference to the OAP (Operation System Support Application Processor) applies also to the EOAP (Enhanced Operation System Support Application Process).

Table 1-1. Manual Organization

Chapter Number and Title	Description
Chapter 1, "Introduction"	The organization of this manual The audience References to other Tekelec documentation Customer assistance Documentation packaging, delivery, and updates Safety admonishments
Chapter 2, "Alphabetical List of Commands"	An alphabetical list of the system commands and the corresponding page number for each command description in this manual
Chapter 3, "Commands Listed by Class"	List of the system commands arranged by command class
Chapter 4, "Using Commands"	Descriptions of system terminals, printers, MASP cards, and MDAL cards Keyboard functions Command class administration Definitions of types of command output and messages Procedures for logging into and logging out of the system
Chapter 5, "Commands"	Descriptions of the commands used in the system
Chapter 6, "Debug Commands"	Descriptions of debug commands used in troubleshooting and debugging the system
Chapter 7, "Pass-Through Commands"	Descriptions of the command strings used within the pass command to gather card- and application-specific information
Appendix A, "Reference Information"	Information that is referred to in more than one command description (including signaling link ports, point code formats and

Table 1-1. Manual Organization

Chapter Number and Title	Description
	usage rules, device status, loopback testing, and ISUP Normalization Variants) How to convert an ITU national point code from the format specified by the chg-stpopts:npcfmti parameter into a single number so that it can be used by gateway screening. Summary of loopback testing functions
Appendix B, "Acronyms and Abbreviations"	List of acronyms and abbreviations used in the document
Index	Alphabetic listing of commands and other information, with page references.

Scope and Audience

This manual is intended for those who maintain and do database administration on the Tekelec Signaling Products and LNP. It is assumed that the user is familiar with the SS7 network and its associated protocols. The manual describes commands used in the system, and it contains a special section on debug commands and their descriptions.

Debug commands are a special group of commands used in troubleshooting and debugging the system. These commands are intended for Tekelec Technical Services personnel and authorized engineering personnel in the operating companies. The use of these commands is restricted to those personnel who have access to the “Debug” command class.

Related Publications

The *Commands Manual* is part of the EAGLE 5 ISS documentation set and may refer to one or more of the following manuals:

The *Commands Manual* contains procedures for logging into or out of the EAGLE 5 ISS, a general description of the terminals, printers, the disk drive used on the system, and a description of all the commands used in the system.

- The *Commands Pocket Guide* is an abridged version of the Commands Manual. It contains all commands and parameters, and it shows the command-parameter syntax.
- The *Commands Quick Reference Guide* contains an alphabetical listing of the commands and parameters. The guide is sized to fit a shirt-pocket.
- The *Commands Error Recovery Manual* contains the procedures to resolve error message conditions generated by the commands in the Commands Manual. These error messages are presented in numerical order.
- The *Database Administration Manual – Features* contains procedural information required to configure the EAGLE 5 ISS to implement these features:
 - X.25 Gateway

- STP LAN
- Database Transport Access
- GSM MAP Screening
- EAGLE 5 Integrated Monitoring Support
- The *Database Administration Manual - Gateway Screening* contains a description of the Gateway Screening (GWS) feature and the procedures necessary to configure the EAGLE 5 ISS to implement this feature.
- The *Database Administration Manual – Global Title Translation* contains procedural information required to configure an EAGLE 5 ISS to implement these features:
 - Global Title Translation
 - Enhanced Global Title Translation
 - Variable Length Global Title Translation
 - Interim Global Title Modification
 - Intermediate GTT Load Sharing
 - ANSI-ITU-China SCCP Conversion
 - Flexible Intermediate GTT Load Sharing
 - Flexible Final GTT Load Sharing
 - Origin-Based SCCP Routing.
- The *Database Administration Manual - IP7 Secure Gateway* contains procedural information required to configure the EAGLE 5 ISS to implement the SS7-IP Gateway.
- The *Database Administration Manual – SEAS* contains the EAGLE 5 ISS configuration procedures that can be performed from the Signaling Engineering and Administration Center (SEAC) or a Signaling Network Control Center (SNCC). Each procedure includes a brief description of the procedure, a flowchart showing the steps required, a list of any EAGLE 5 ISS commands that may be required for the procedure but that are not supported by SEAS, and a reference to optional procedure-related information, which can be found in one of these manuals:
 - *Database Administration Manual – Gateway Screening*
 - *Database Administration Manual – Global Title Translation*
 - *Database Administration Manual – SS7*
- The *Database Administration Manual – SS7* contains procedural information required to configure an EAGLE 5 ISS to implement the SS7 protocol.
- The *Database Administration Manual – System Management* contains procedural information required to manage the EAGLE 5 ISS database and GPLs, and to configure basic system requirements such as user names and passwords, system-wide security requirements, and terminal configurations.
- The *Dimensioning Guide for EPAP Advanced DB Features* is used to provide EPAP planning and dimensioning information. This manual is used by Tekelec personnel and EAGLE 5 ISS customers to aid in the sale, planning, implementation, deployment, and upgrade of EAGLE 5 ISS systems equipped with one of the EAGLE 5 ISS EPAP Advanced Database (EADB) Features.

- The *ELAP Administration Manual* defines the user interface to the EAGLE 5 ISS LNP Application Processor on the MPS/ELAP platform. The manual defines the methods for accessing the user interface, menus, screens available to the user and describes their impact. It provides the syntax and semantics of user input and defines the output the user receives, including information and error messages, alarms, and status.
- The *EPAP Administration Manual* describes how to administer the EAGLE 5 ISS Provisioning Application Processor on the MPS/EPAP platform. The manual defines the methods for accessing the user interface, menus, and screens available to the user and describes their impact. It provides the syntax and semantics of user input and defines the output the user receives, including messages, alarms, and status.
- The *Feature Manual - EIR* provides instructions and information on how to install, use, and maintain the EIR feature on the Multi-Purpose Server (MPS) platform of the EAGLE 5 ISS. The feature provides network operators with the capability to prevent stolen or disallowed GSM mobile handsets from accessing the network.
- The *Feature Manual - G-Flex C7 Relay* provides an overview of a feature supporting the efficient management of Home Location Registers in various networks. This manual gives the instructions and information on how to install, use, and maintain the G-Flex feature on the Multi-Purpose Server (MPS) platform of the EAGLE 5 ISS.
- The *Feature Manual - G-Port* provides an overview of a feature providing the capability for mobile subscribers to change the GSM subscription network within a portability cluster while retaining their original MSISDNs. This manual gives the instructions and information on how to install, use, and maintain the G-Port feature on the Multi-Purpose Server (MPS) platform of the EAGLE 5 ISS.
- The *Feature Manual - INP* provides the user with information and instructions on how to implement, utilize, and maintain the INAP-based Number Portability (INP) feature on the Multi-Purpose Server (MPS) platform of the EAGLE 5 ISS.
- The *FTP-Based Table Retrieve Application (FTRA) User Guide* describes how to set up and use a PC to serve as the offline application for the EAGLE 5 ISS FTP Retrieve and Replace feature.
- The *Hardware Manual - EAGLE 5 ISS* contains hardware descriptions and specifications of Tekelec's signaling products. These include the EAGLE 5 ISS, OEM-based products such as the ASi 4000 Service Control Point (SCP), the Netra-based Multi-Purpose Server (MPS), and the Integrated Sentinel with Extended Services Platform (ESP) subassembly.
- The *Hardware Manual* provides an overview of each system and its subsystems, details of standard and optional hardware components in each system, and basic site engineering. Refer to this manual to obtain a basic understanding of each type of system and its related hardware, to locate detailed information about hardware components used in a particular release, and to help configure a site for use with the system hardware.
- The *Hardware Manual - Tekelec 1000 Application Server* provides general specifications and a description of the Tekelec 1000 Applications Server (T1000 AS). This manual also includes site preparation, environmental and other requirements, procedures to physically install the T1000 AS, and troubleshooting and repair of Field Replaceable Units (FRUs).
- The *Hardware Manual - Tekelec 1100 Application Server* provides general specifications and a description of the Tekelec 1100 Applications Server (T1100 AS). This manual also includes site preparation, environmental and other requirements, procedures to physically install the T1100 AS, and troubleshooting and repair of Field Replaceable Units (FRUs).

- The *Installation Manual - EAGLE 5 ISS* contains cabling requirements, schematics, and procedures for installing the EAGLE 5 ISS along with LEDs, connectors, cables, and power cords to peripherals. Refer to this manual to install components or the complete systems.
- The *Installation Manual - Integrated Applications* provides the installation information for integrated applications such as EPAP 4.0 or earlier (Netra-based Multi-Purpose Server (MPS) platform), Sentinel and IMF. The manual includes information about frame floors and shelves, LEDs, connectors, cables, and power cords to peripherals. Refer to this manual to install components or the complete systems.
- The *LNP Database Synchronization Manual - LSMS with EAGLE 5 ISS* describes how to keep the LNP databases at the LSMS and at the network element (the EAGLE 5 ISS is a network element) synchronized through the use of resynchronization, audits and reconciles, and bulk loads. This manual is contained in both the LSMS documentation set and in the EAGLE 5 ISS documentation set.
- The *LNP Feature Activation Guide* contains procedural information required to configure the EAGLE 5 ISS for the LNP feature and to implement these parts of the LNP feature on the EAGLE 5 ISS:
 - LNP services
 - LNP options
 - LNP subsystem application
 - Automatic call gapping
 - Triggerless LNP feature
 - Increasing the LRN and NPANXX Quantities on the EAGLE 5 ISS
 - Activating and Deactivating the LNP Short Message Service (SMS) feature
- The *Maintenance Manual* contains procedural information required for maintaining the EAGLE 5 ISS and the card removal and replacement procedures. The *Maintenance Manual* provides preventive and corrective maintenance procedures used in maintaining the different systems.
- The *Maintenance Pocket Guide* is an abridged version of the *Maintenance Manual* and contains all the corrective maintenance procedures used in maintaining the EAGLE 5 ISS.
- The *Maintenance Emergency Recovery Pocket Guide* is an abridged version of the *Maintenance Manual* and contains the corrective maintenance procedures for critical and major alarms generated on the EAGLE 5 ISS.
- The *MPS Platform Software and Maintenance Manual - EAGLE 5 ISS with Tekelec 1000 Application Server* describes the platform software for the Multi-Purpose Server (MPS) based on the Tekelec 1000 Application Server (T1000 AS) and describes how to perform preventive and corrective maintenance for the T1000 AS-based MPS. This manual should be used with the EPAP-based applications (EIR, G-Port, G-Flex, and INP).
- The *MPS Platform Software and Maintenance Manual - EAGLE 5 ISS with Tekelec 1100 Application Server* describes the platform software for the Multi-Purpose Server (MPS) based on the Tekelec 1100 Application Server (T1100 AS) and describes how to perform preventive and corrective maintenance for the T1100 AS-based MPS. This manual should be used with the ELAP-based application (LNP).
- The *Provisioning Database Interface Manual* defines the programming interface that populates the Provisioning Database (PDB) for the EAGLE 5 ISS features supported on the MPS/EPAP platform. The manual defines the provisioning messages, usage rules, and

informational and error messages of the interface. The customer uses the PDBI interface information to write his own client application to communicate with the MPS/EPAP platform.

- The *Previously Released Features Manual* summarizes the features of previous EAGLE, EAGLE 5 ISS, and IP7 Secure Gateway releases, and it identifies the release number of their introduction.
- The *Release Documentation* contains the following documents for a specific release of the system:
 - *Release Notice* - Describes the changes made to the system during the lifecycle of a release. The Release Notice includes Generic Program Loads (GPLs), a list of PRs resolved in a build, and all known PRs.
 - The *Release Notice* is maintained solely on Tekelec's Customer Support site to provide you with instant access to the most up-to-date release information.
 - *System Overview* - Provides high-level information on SS7, the IP7 Secure Gateway, system architecture, LNP, and EOAP.
 - *Master Glossary*- Contains an alphabetical listing of terms, acronyms, and abbreviations relevant to the system.
 - *Master Index* - Lists all index entries used throughout the documentation set.
- The *System Manual – EOAP* describes the Embedded Operations Support System Application Processor (EOAP) and provides the user with procedures on how to implement the EOAP, replace EOAP-related hardware, device testing, and basic troubleshooting information.

Customer Assistance

The Customer Care Center offers a point of contact through which customers can receive support for problems that may be encountered during the use of Tekelec's products. The Customer Care Center is staffed with highly trained engineers to provide solutions to your technical questions and issues seven days a week, twenty-four hours a day. A variety of service programs are available through the Customer Care Center to maximize the performance of Tekelec products that meet and exceed customer's needs.

To receive technical assistance, call the Customer Care Center at one of the following locations:

- Tekelec, USA
 - Phone (US and Canada) +1 888-FOR-TKLC
 - Phone (international) +1 919-460-2150
 - Fax +1-919-460-0877
 - Email: support@tekelec.com
- Tekelec, Europe and UK
 - Phone +44 1784 467 804
 - Fax +44 1784 477 120
 - Email: ecsc@tekelec.com

Documentation Packaging, Delivery, and Updates

Customer documentation is provided with each system in accordance with the contract agreements. It is updated whenever significant changes that affect system operation or configuration are made. Updates may be issued as an addendum, or a reissue of the affected documentation.

The document part number appears on the title page along with the current revision of the document and the date of publication. The bottom of each page contains the document part number and date of publication.

Two types of releases are major software releases and maintenance releases. Maintenance releases are issued as addenda with a title page and change bars. On the changed pages, the date and document part number are changed. On any unchanged pages that accompany the changed pages, the date and document part number is unchanged.

When the software release has a minimum effect on documentation, we provide an addendum. The addendum provides an instruction page, a new title page, a change history page, and replacement chapters with the date of publication, the document part number, and change bars.

If a new release has a major impact on documentation, such as a new feature, the entire documentation set is reissued with a new part number and a new release number.

Documentation Admonishments

Admonishments are icons and text that may appear in this and other Tekelec manuals. Admonishments alert the reader to assure personal safety, to minimize possible service interruptions, and to warn of the potential for equipment damage.

The following admonishments, listed in descending order of priority, are used in Tekelec manuals.



TOPPLE: This icon and text indicate the possibility of equipment damage and personal injury from toppling.



DANGER: This icon and text indicate the possibility of *personal injury*.



WARNING: This icon and text indicate the possibility of *equipment damage*.



CAUTION: This icon and text indicate the possibility of *service interruption*.

Alphabetical List of Commands

Introduction

This chapter contains an alphabetical list of the Tekelec Signaling Products (Eagle STP, IP⁷ Secure Gateway, and IP⁷ Front End) commands and the page number where each command is described in this manual.

Commands

act-alm-trns.....	5-1	canc-slk.....	5-49
act-cdl.....	5-2	canc-user.....	5-50
act-dlk.....	5-3	chg-acg-mic.....	5-50
act-echo.....	5-4	chg-acg-noc.....	5-52
act-file-trns.....	5-5	chg-appl-rtkey.....	5-53
act-flash.....	5-7	chg-appl-sock.....	5-63
act-ftp-trns.....	5-10	chg-as.....	5-66
act-gpl.....	5-11	chg-asp.....	5-67
act-lbp.....	5-14	chg-assoc.....	5-68
act-lpo.....	5-20	chg-atm-lps.....	5-73
act-oap-config.....	5-21	chg-attr-seculog.....	5-76
act-slk.....	5-25	chg-cmd.....	5-77
act-user.....	5-27	chg-cmdclass.....	5-80
alloc-mem.....	5-28	chg-csl.....	5-81
alw-card.....	5-29	chg-ctrl-feat.....	5-85
alw-imt.....	5-32	chg-db.....	5-88
alw-map-ss.....	5-33	chg-dcmps.....	5-98
alw-slk.....	5-34	chg-dstn.....	5-99
alw-trm.....	5-35	chg-e1.....	5-108
aud-data.....	5-36	chg-eisopts.....	5-111
blk-slk.....	5-40	chg-feat.....	5-112
canc-alm-trns.....	5-42	chg-frn-pwr.....	5-121
canc-cmd.....	5-42	chg-ftp-serv.....	5-122
canc-dlk.....	5-44	chg-gpl.....	5-124
canc-echo.....	5-45	chg-gsmmap-scrn.....	5-127
canc-lnp-dpcer.....	5-46	chg-gsmopts.....	5-132
canc-lnp-tnrpt.....	5-47	chg-gsms-opcode.....	5-141
canc-lpo.....	5-47	chg-gta.....	5-144
		chg-gtcnv.....	5-157
		chg-gtt.....	5-159
		chg-gttssel.....	5-168

chg-gttset.....	5-172	chg-th-alm.....	5-382
chg-gtw-stp.....	5-173	chg-th-sccp.....	5-384
chg-gws-actset.....	5-173	chg-trm.....	5-385
chg-gws-redirect.....	5-177	chg-ttmap.....	5-393
chg-inpopts.....	5-179	chg-uaps.....	5-394
chg-ip-card.....	5-184	chg-user.....	5-398
chg-ip-lnk.....	5-186	chg-x25-dstn.....	5-402
chg-isupvar-attrb.....	5-189	chg-x25-rte.....	5-404
chg-l2t.....	5-193	chg-x25-slk.....	5-405
chg-l3t.....	5-196	chk-unref-ent.....	5-407
chg-lbp.....	5-203	clr-imt-stats.....	5-410
chg-lnp-lrn.....	5-205	conn-imt.....	5-412
chg-lnp-npanxx.....	5-207	copy-disk.....	5-413
chg-lnp-serv.....	5-209	copy-fta.....	5-415
chg-lnp-sub.....	5-211	copy-gpl.....	5-417
chg-lnp-ttmap.....	5-214	copy-isupvar-attrb.....	5-418
chg-lnpopts.....	5-215	copy-meas.....	5-419
chg-ls.....	5-218	copy-seculog.....	5-420
chg-m2pa-tset.....	5-230	dact-alm-trns.....	5-422
chg-map.....	5-233	dact-cdl.....	5-423
chg-meas.....	5-240	dact-cmd.....	5-424
chg-measopts.....	5-242	dact-echo.....	5-426
chg-mrn.....	5-248	dact-lbp.....	5-426
chg-netopts.....	5-256	dact-rstst.....	5-428
chg-oap-config.....	5-257	dact-slk.....	5-429
chg-pid.....	5-262	dact-user.....	5-430
chg-prefix.....	5-262	disc-imt.....	5-431
chg-pstn-pres.....	5-265	disp-fta-dir.....	5-432
chg-rte.....	5-267	dlt-acg-mic.....	5-432
chg-rtx.....	5-270	dlt-acg-noc.....	5-433
chg-sccp-serv.....	5-274	dlt-appl-rtkey.....	5-434
chg-sccpopts.....	5-280	dlt-appl-sock.....	5-439
chg-scr-aftpc.....	5-282	dlt-as.....	5-440
chg-scr-blkdpc.....	5-287	dlt-asp.....	5-441
chg-scr-blkopc.....	5-293	dlt-assoc.....	5-441
chg-scr-cdpa.....	5-300	dlt-card.....	5-442
chg-scr-cgpa.....	5-305	dlt-csl.....	5-443
chg-scr-destfld.....	5-311	dlt-cspc.....	5-446
chg-scr-dpc.....	5-316	dlt-dlk.....	5-449
chg-scr-isup.....	5-321	dlt-dstn.....	5-449
chg-scr-opc.....	5-323	dlt-e1.....	5-453
chg-scr-sio.....	5-328	dlt-frn-pwr.....	5-454
chg-scr-tt.....	5-333	dlt-fta.....	5-455
chg-scrset.....	5-335	dlt-ftp-serv.....	5-456
chg-secu-dflt.....	5-337	dlt-gsmmap-scrn.....	5-457
chg-secu-trm.....	5-342	dlt-gsms-opcode.....	5-458
chg-sg-opts.....	5-346	dlt-gsmssn-scrn.....	5-459
chg-sid.....	5-351	dlt-gta.....	5-459
chg-slt.....	5-360	dlt-gtcnv.....	5-464
chg-srvsel.....	5-361	dlt-gtt.....	5-466
chg-ss-appl.....	5-365	dlt-gttset.....	5-468
chg-ss7opts.....	5-366	dlt-gttset.....	5-469
chg-stpopts.....	5-367	dlt-gws-redirect.....	5-470
chg-t1.....	5-380	dlt-home-smsc.....	5-471

Alphabetical List of Commands

Commands

dlt-homern.....	5-471	ent-assoc.....	5-574
dlt-ip-host.....	5-472	ent-card.....	5-577
dlt-ip-node.....	5-473	ent-csl.....	5-582
dlt-ip-rte.....	5-475	ent-cspc.....	5-586
dlt-lbp.....	5-476	ent-dlk.....	5-589
dlt-lnp-lrn.....	5-477	ent-dstn.....	5-590
dlt-lnp-npanxx.....	5-478	ent-e1.....	5-601
dlt-lnp-serv.....	5-479	ent-frm-pwr.....	5-605
dlt-lnp-sp.....	5-481	ent-ftp-serv.....	5-606
dlt-lnp-sub.....	5-481	ent-gsmmap-scrn.....	5-607
dlt-ls.....	5-483	ent-gsms-opcode.....	5-613
dlt-map.....	5-484	ent-gsmssn-scrn.....	5-618
dlt-mrn.....	5-486	ent-gta.....	5-618
dlt-na.....	5-493	ent-gtcnv.....	5-630
dlt-prefix.....	5-494	ent-gtt.....	5-633
dlt-pstn-pres.....	5-495	ent-gttset.....	5-641
dlt-rmt-appl.....	5-496	ent-gttset.....	5-644
dlt-rte.....	5-498	ent-gws-redirect.....	5-646
dlt-rtx.....	5-502	ent-home-smsc.....	5-649
dlt-sccp-serv.....	5-506	ent-homern.....	5-649
dlt-scr-aftpc.....	5-511	ent-ip-host.....	5-650
dlt-scr-blkdpc.....	5-514	ent-ip-node.....	5-651
dlt-scr-blkopc.....	5-517	ent-ip-rte.....	5-653
dlt-scr-cdpa.....	5-520	ent-lbp.....	5-655
dlt-scr-cgpa.....	5-523	ent-lnp-lrn.....	5-657
dlt-scr-destfld.....	5-527	ent-lnp-npanxx.....	5-660
dlt-scr-dpc.....	5-529	ent-lnp-serv.....	5-662
dlt-scr-isup.....	5-532	ent-lnp-sp.....	5-664
dlt-scr-opc.....	5-533	ent-lnp-sub.....	5-664
dlt-scr-sio.....	5-536	ent-ls.....	5-667
dlt-scr-tt.....	5-538	ent-map.....	5-676
dlt-scrset.....	5-539	ent-mrn.....	5-684
dlt-shlf.....	5-540	ent-na.....	5-691
dlt-slk.....	5-540	ent-pstn-pres.....	5-692
dlt-spc.....	5-542	ent-rmt-appl.....	5-694
dlt-split-npa.....	5-544	ent-rte.....	5-696
dlt-srvsel.....	5-545	ent-rtx.....	5-700
dlt-ss-appl.....	5-546	ent-scr-aftpc.....	5-704
dlt-subnetid.....	5-547	ent-scr-blkdpc.....	5-708
dlt-t1.....	5-548	ent-scr-blkopc.....	5-712
dlt-tt.....	5-549	ent-scr-cdpa.....	5-717
dlt-ttmap.....	5-550	ent-scr-cgpa.....	5-721
dlt-uim-acthresh.....	5-551	ent-scr-destfld.....	5-725
dlt-user.....	5-552	ent-scr-dpc.....	5-728
dlt-vendid.....	5-552	ent-scr-isup.....	5-732
dlt-x25-dstn.....	5-553	ent-scr-opc.....	5-734
dlt-x25-rte.....	5-553	ent-scr-sio.....	5-738
enable-ctrl-feat.....	5-554	ent-scr-tt.....	5-742
ent-acg-mic.....	5-561	ent-scrset.....	5-744
ent-acg-noc.....	5-562	ent-serial-num.....	5-746
ent-appl-rtkey.....	5-563	ent-shlf.....	5-747
ent-appl-sock.....	5-570	ent-sid.....	5-748
ent-as.....	5-572	ent-slk.....	5-750
ent-asp.....	5-573	ent-spc.....	5-763

ent-split-npa.....	5-765	rept-stat-lnp.....	5-993
ent-srvsel.....	5-766	rept-stat-ls.....	5-1000
ent-ss-appl.....	5-771	rept-stat-lsms.....	5-1003
ent-subnetid.....	5-772	rept-stat-meas.....	5-1005
ent-t1.....	5-773	rept-stat-mps.....	5-1006
ent-tt.....	5-775	rept-stat-mux.....	5-1016
ent-ttmap.....	5-777	rept-stat-ndc.....	5-1017
ent-user.....	5-778	rept-stat-rte.....	5-1018
ent-vendid.....	5-782	rept-stat-rtkey.....	5-1030
ent-x25-dstn.....	5-784	rept-stat-rtx.....	5-1030
ent-x25-rte.....	5-785	rept-stat-sccp.....	5-1036
flash-card.....	5-788	rept-stat-seas.....	5-1047
format-disk.....	5-791	rept-stat-seculog.....	5-1048
inh-alm.....	5-795	rept-stat-slan.....	5-1051
inh-card.....	5-803	rept-stat-slk.....	5-1054
inh-imt.....	5-804	rept-stat-sys.....	5-1062
inh-map-ss.....	5-805	rept-stat-t1.....	5-1067
inh-slk.....	5-807	rept-stat-trbl.....	5-1070
inh-trm.....	5-809	rept-stat-trm.....	5-1075
init-card.....	5-810	rept-stat-tstslk.....	5-1077
init-flash.....	5-816	rept-stat-user.....	5-1078
init-imt-gpl.....	5-819	rept-stat-xlist.....	5-1079
init-mux.....	5-821	rept-x25-meas.....	5-1080
init-network.....	5-822	rls-alm.....	5-1083
init-oap.....	5-825	rmv-card.....	5-1083
init-sys.....	5-826	rmv-imt.....	5-1085
lock.....	5-831	rmv-trm.....	5-1086
login.....	5-831	rst-card.....	5-1087
logout.....	5-832	rst-dstn.....	5-1089
pass.....	5-833	rst-imt.....	5-1090
rept-ftp-meas.....	5-834	rst-trm.....	5-1090
rept-imt-info.....	5-838	rtrv-acg-mic.....	5-1091
rept-imt-lvl1.....	5-859	rtrv-acg-noc.....	5-1093
rept-imt-lvl2.....	5-872	rtrv-appl-rtkey.....	5-1094
rept-meas.....	5-876	rtrv-appl-sock.....	5-1103
rept-stat-alm.....	5-888	rtrv-as.....	5-1106
rept-stat-applsock.....	5-896	rtrv-asp.....	5-1106
rept-stat-as.....	5-897	rtrv-assoc.....	5-1107
rept-stat-asp.....	5-899	rtrv-atm-lps.....	5-1113
rept-stat-assoc.....	5-900	rtrv-atm-prm.....	5-1118
rept-stat-card.....	5-903	rtrv-attr-seculog.....	5-1119
rept-stat-cdl.....	5-929	rtrv-bip.....	5-1120
rept-stat-cdt.....	5-930	rtrv-card.....	5-1124
rept-stat-clk.....	5-931	rtrv-cmd.....	5-1129
rept-stat-cluster.....	5-936	rtrv-cmdclass.....	5-1132
rept-stat-db.....	5-942	rtrv-csl.....	5-1133
rept-stat-dlk.....	5-957	rtrv-cspc.....	5-1139
rept-stat-dstn.....	5-958	rtrv-ctrl-feat.....	5-1141
rept-stat-e1.....	5-970	rtrv-dcmps.....	5-1146
rept-stat-eroute.....	5-972	rtrv-dlk.....	5-1147
rept-stat-gpl.....	5-976	rtrv-dstn.....	5-1149
rept-stat-imt.....	5-985	rtrv-e1.....	5-1176
rept-stat-iptps.....	5-988	rtrv-eisopts.....	5-1179
rept-stat-lfs.....	5-991	rtrv-feat.....	5-1180

Alphabetical List of Commands**Commands**

rtrv-firm-pwr.....	5-1182	rtrv-rte.....	5-1353
rtrv-ftp-serv.....	5-1183	rtrv-rtx.....	5-1370
rtrv-gpl.....	5-1186	rtrv-sccp-serv.....	5-1383
rtrv-gsmmap-scrn.....	5-1192	rtrv-sccpopts.....	5-1388
rtrv-gsmopts.....	5-1199	rtrv-scr-aftpc.....	5-1389
rtrv-gsms-opcode.....	5-1203	rtrv-scr-blkdpc.....	5-1394
rtrv-gsmssn-scrn.....	5-1207	rtrv-scr-blkopc.....	5-1400
rtrv-gta.....	5-1208	rtrv-scr-cdpa.....	5-1405
rtrv-gtcnv.....	5-1222	rtrv-scr-cgpa.....	5-1410
rtrv-gtt.....	5-1223	rtrv-scr-destfld.....	5-1416
rtrv-gttset.....	5-1235	rtrv-scr-dpc.....	5-1421
rtrv-gttset.....	5-1239	rtrv-scr-isup.....	5-1427
rtrv-gtw-stp.....	5-1243	rtrv-scr-opc.....	5-1430
rtrv-gtwy-acthresh.....	5-1243	rtrv-scr-sio.....	5-1436
rtrv-gtwy-prmtrs.....	5-1244	rtrv-scr-tt.....	5-1440
rtrv-gws-actset.....	5-1245	rtrv-scrset.....	5-1443
rtrv-gws-redirect.....	5-1246	rtrv-secu-dflt.....	5-1447
rtrv-home-smisc.....	5-1247	rtrv-secu-trm.....	5-1449
rtrv-homern.....	5-1248	rtrv-secu-user.....	5-1451
rtrv-inpopts.....	5-1249	rtrv-seculog.....	5-1455
rtrv-ip-card.....	5-1252	rtrv-serial-num.....	5-1460
rtrv-ip-host.....	5-1253	rtrv-sg-opts.....	5-1461
rtrv-ip-lnk.....	5-1254	rtrv-shlf.....	5-1462
rtrv-ip-node.....	5-1256	rtrv-sid.....	5-1464
rtrv-ip-rte.....	5-1260	rtrv-slk.....	5-1472
rtrv-isupvar-attrib.....	5-1261	rtrv-slt.....	5-1479
rtrv-l2t.....	5-1263	rtrv-spc.....	5-1480
rtrv-l3t.....	5-1265	rtrv-split-npa.....	5-1485
rtrv-lbp.....	5-1268	rtrv-srvsel.....	5-1486
rtrv-lnp-dbts.....	5-1271	rtrv-ss-appl.....	5-1491
rtrv-lnp-dpcer.....	5-1272	rtrv-ss7opts.....	5-1492
rtrv-lnp-lrn.....	5-1276	rtrv-stp.....	5-1493
rtrv-lnp-npanxx.....	5-1279	rtrv-stpopts.....	5-1505
rtrv-lnp-serv.....	5-1282	rtrv-subnetid.....	5-1509
rtrv-lnp-sp.....	5-1283	rtrv-t1.....	5-1510
rtrv-lnp-sub.....	5-1285	rtrv-tbl-capacity.....	5-1513
rtrv-lnp-tnrpt.....	5-1290	rtrv-th-alm.....	5-1517
rtrv-lnp-ttmap.....	5-1291	rtrv-th-sccp.....	5-1518
rtrv-lnpopts.....	5-1294	rtrv-trbl.....	5-1518
rtrv-log.....	5-1296	rtrv-trbltx.....	5-1520
rtrv-ls.....	5-1306	rtrv-trm.....	5-1525
rtrv-m2pa-tset.....	5-1316	rtrv-tt.....	5-1539
rtrv-map.....	5-1320	rtrv-ttmap.....	5-1542
rtrv-meas-sched.....	5-1326	rtrv-uaps.....	5-1545
rtrv-measopts.....	5-1328	rtrv-uim-acthresh.....	5-1546
rtrv-mem.....	5-1330	rtrv-user.....	5-1547
rtrv-mrn.....	5-1331	rtrv-vendid.....	5-1550
rtrv-na.....	5-1337	rtrv-x25-dstn.....	5-1551
rtrv-netopts.....	5-1337	rtrv-x25-rte.....	5-1552
rtrv-oap-config.....	5-1338	rtrv-x25-slk.....	5-1556
rtrv-obit.....	5-1339	set-date.....	5-1557
rtrv-prefix.....	5-1349	set-gtwy-acthresh.....	5-1558
rtrv-pstn-pres.....	5-1351	set-scrrej-prmtrs.....	5-1559
rtrv-rmt-appl.....	5-1352	set-time.....	5-1560

set-uim-acthresh.....	5-1562
tst-bip.....	5-1563
tst-disk.....	5-1564
tst-dlk.....	5-1567
tst-e1.....	5-1568
tst-imt.....	5-1570
tst-slk.....	5-1572
tst-t1.....	5-1577
ublk-slk.....	5-1578
unhb-alm.....	5-1580
unhb-slk.....	5-1586
unlock.....	5-1588

Pass-Through Commands

arp.....	6-2
aslog.....	6-5
asplog.....	6-6
assocrtt.....	6-12
connmgr.....	6-14
drklog.....	6-21
ftptest.....	6-33
linkinfo.....	6-35
msucount.....	6-40
msuroute.....	6-57
msutrace.....	6-63
netstat.....	6-80
nslookup.....	6-93
ping.....	6-96
sctp.....	6-100
sockrtt.....	6-105
sockstate.....	6-107
tracert.....	6-110
ualog.....	6-120

Commands Listed by Class

Introduction

This chapter provides lists of the available non-configurable command classes and an alphabetical list of the commands allowed in each class. The command class Basic is automatically given to all users and terminals as a default.

Basic

act-echo.....	5-4
act-user.....	5-27
canc-echo.....	5-45
canc-user.....	5-50
chg-pid.....	5-262
dact-cmd.....	5-424
dact-echo.....	5-426
dact-user.....	5-430
dlt-sccp-serv.....	5-506
lock.....	5-831
login.....	5-831
logout.....	5-832
rept-stat-user.....	5-1078
rtrv-cmd.....	5-1129
rtrv-cmdclass.....	5-1132
rtrv-sccp-serv.....	5-1383
rtrv-user.....	5-1547
unlock.....	5-1588

Database Administration

act-ftp-trns.....	5-10
act-lbp.....	5-14
act-oap-config.....	5-21
chg-acg-mic.....	5-50
chg-acg-noc.....	5-52
chg-appl-rtkey.....	5-53
chg-appl-sock.....	5-63

chg-as.....	5-66
chg-asp.....	5-67
chg-assoc.....	5-68
chg-atm-lps.....	5-73
chg-csl.....	5-81
chg-ctrl-feat.....	5-85
chg-dcmps.....	5-98
chg-dstn.....	5-99
chg-e1.....	5-108
chg-frn-pwr.....	5-121
chg-ftp-serv.....	5-122
chg-gsmap-scrn.....	5-127
chg-gsmopts.....	5-132
chg-gsms-opcode.....	5-141
chg-gta.....	5-144
chg-gtcnv.....	5-157
chg-gtt.....	5-159
chg-gttset.....	5-168
chg-gttset.....	5-172
chg-gtw-stp.....	5-173
chg-gws-actset.....	5-173
chg-gws-redirect.....	5-177
chg-inpopts.....	5-179
chg-ip-card.....	5-184
chg-ip-lnk.....	5-186
chg-isupvar-attrb.....	5-189
chg-l2t.....	5-193
chg-l3t.....	5-196
chg-lbp.....	5-203
chg-lnp-serv.....	5-209
chg-lnpopts.....	5-215

chg-ls.....	5-218	dlt-e1.....	5-453
chg-m2pa-tset.....	5-230	dlt-frn-pwr.....	5-454
chg-map.....	5-233	dlt-ftp-serv.....	5-456
chg-mrn.....	5-248	dlt-gsmmap-scrn.....	5-457
chg-netopts.....	5-256	dlt-gsms-opcode.....	5-458
chg-oap-config.....	5-257	dlt-gsmssn-scrn.....	5-459
chg-prefix.....	5-262	dlt-gta.....	5-459
chg-pstn-pres.....	5-265	dlt-gtcnv.....	5-464
chg-rte.....	5-267	dlt-gtt.....	5-466
chg-rtx.....	5-270	dlt-gttset.....	5-468
chg-sccp-serv.....	5-274	dlt-gttset.....	5-469
chg-sccpopts.....	5-280	dlt-gws-redirect.....	5-470
chg-scr-aftpc.....	5-282	dlt-home-smsc.....	5-471
chg-scr-blkdpc.....	5-287	dlt-homern.....	5-471
chg-scr-blkopc.....	5-293	dlt-ip-host.....	5-472
chg-scr-cdpa.....	5-300	dlt-ip-node.....	5-473
chg-scr-cgpa.....	5-305	dlt-ip-rte.....	5-475
chg-scr-destfld.....	5-311	dlt-lbp.....	5-476
chg-scr-dpc.....	5-316	dlt-lnp-serv.....	5-479
chg-scr-isup.....	5-321	dlt-ls.....	5-483
chg-scr-opc.....	5-323	dlt-map.....	5-484
chg-scr-sio.....	5-328	dlt-mrn.....	5-486
chg-scr-tt.....	5-333	dlt-na.....	5-493
chg-scrset.....	5-335	dlt-prefix.....	5-494
chg-sg-opts.....	5-346	dlt-pstn-pres.....	5-495
chg-sid.....	5-351	dlt-rmt-appl.....	5-496
chg-slt.....	5-360	dlt-rte.....	5-498
chg-srvsel.....	5-361	dlt-rtx.....	5-502
chg-ss-appl.....	5-365	dlt-scr-aftpc.....	5-511
chg-ss7opts.....	5-366	dlt-scr-blkdpc.....	5-514
chg-stpopts.....	5-367	dlt-scr-blkopc.....	5-517
chg-t1.....	5-380	dlt-scr-cdpa.....	5-520
chg-th-alm.....	5-382	dlt-scr-cgpa.....	5-523
chg-th-sccp.....	5-384	dlt-scr-destfld.....	5-527
chg-trm.....	5-385	dlt-scr-dpc.....	5-529
chg-ttmap.....	5-393	dlt-scr-isup.....	5-532
chg-uaps.....	5-394	dlt-scr-opc.....	5-533
chg-x25-dstn.....	5-402	dlt-scr-sio.....	5-536
chg-x25-rte.....	5-404	dlt-scr-tt.....	5-538
chg-x25-slk.....	5-405	dlt-scrset.....	5-539
chk-unref-ent.....	5-407	dlt-shlf.....	5-540
copy-isupvar-attrib.....	5-418	dlt-slk.....	5-540
dlt-acg-mic.....	5-432	dlt-spc.....	5-542
dlt-acg-noc.....	5-433	dlt-srvsel.....	5-545
dlt-appl-rtkey.....	5-434	dlt-ss-appl.....	5-546
dlt-appl-sock.....	5-439	dlt-subnetid.....	5-547
dlt-as.....	5-440	dlt-t1.....	5-548
dlt-asp.....	5-441	dlt-tt.....	5-549
dlt-assoc.....	5-441	dlt-ttmap.....	5-550
dlt-card.....	5-442	dlt-uim-acthresh.....	5-551
dlt-csl.....	5-443	dlt-vendid.....	5-552
dlt-cspc.....	5-446	dlt-x25-dstn.....	5-553
dlt-dlk.....	5-449	dlt-x25-rte.....	5-553
dlt-dstn.....	5-449	enable-ctrl-feat.....	5-554

ent-acg-mic.....	5-561	ent-slk.....	5-750
ent-acg-noc.....	5-562	ent-spc.....	5-763
ent-appl-rtkey.....	5-563	ent-srvsel.....	5-766
ent-appl-sock.....	5-570	ent-ss-appl.....	5-771
ent-as.....	5-572	ent-subnetid.....	5-772
ent-asp.....	5-573	ent-t1.....	5-773
ent-assoc.....	5-574	ent-tt.....	5-775
ent-card.....	5-577	ent-ttmap.....	5-777
ent-csl.....	5-582	ent-vendid.....	5-782
ent-cspc.....	5-586	ent-x25-dstn.....	5-784
ent-dlk.....	5-589	ent-x25-rte.....	5-785
ent-dstn.....	5-590	rept-stat-db.....	5-942
ent-e1.....	5-601	rtrv-acg-mic.....	5-1091
ent-frm-pwr.....	5-605	rtrv-acg-noc.....	5-1093
ent-ftp-serv.....	5-606	rtrv-appl-rtkey.....	5-1094
ent-gsmmap-scrn.....	5-607	rtrv-appl-sock.....	5-1103
ent-gsms-opcode.....	5-613	rtrv-as.....	5-1106
ent-gsmssn-scrn.....	5-618	rtrv-asp.....	5-1106
ent-gta.....	5-618	rtrv-assoc.....	5-1107
ent-gtcnv.....	5-630	rtrv-atm-lps.....	5-1113
ent-gtt.....	5-633	rtrv-atm-prm.....	5-1118
ent-gttset.....	5-641	rtrv-card.....	5-1124
ent-gttset.....	5-644	rtrv-csl.....	5-1133
ent-gws-redirect.....	5-646	rtrv-cspc.....	5-1139
ent-home-smsc.....	5-649	rtrv-ctrl-feat.....	5-1141
ent-homern.....	5-649	rtrv-dcmps.....	5-1146
ent-ip-host.....	5-650	rtrv-dlk.....	5-1147
ent-ip-node.....	5-651	rtrv-dstn.....	5-1149
ent-ip-rte.....	5-653	rtrv-e1.....	5-1176
ent-lbp.....	5-655	rtrv-frm-pwr.....	5-1182
ent-lnp-serv.....	5-662	rtrv-ftp-serv.....	5-1183
ent-ls.....	5-667	rtrv-gsmmap-scrn.....	5-1192
ent-map.....	5-676	rtrv-gsmopts.....	5-1199
ent-mrn.....	5-684	rtrv-gsms-opcode.....	5-1203
ent-na.....	5-691	rtrv-gsmssn-scrn.....	5-1207
ent-pstn-pres.....	5-692	rtrv-gta.....	5-1208
ent-rmt-appl.....	5-694	rtrv-gtcnv.....	5-1222
ent-rte.....	5-696	rtrv-gtt.....	5-1223
ent-rtx.....	5-700	rtrv-gttset.....	5-1235
ent-scr-aftpc.....	5-704	rtrv-gttset.....	5-1239
ent-scr-blkdpc.....	5-708	rtrv-gtw-stp.....	5-1243
ent-scr-blkopc.....	5-712	rtrv-gtwy-acthresh.....	5-1243
ent-scr-cdpa.....	5-717	rtrv-gtwy-prmtrs.....	5-1244
ent-scr-cgpa.....	5-721	rtrv-gws-actset.....	5-1245
ent-scr-destfld.....	5-725	rtrv-gws-redirect.....	5-1246
ent-scr-dpc.....	5-728	rtrv-home-smsc.....	5-1247
ent-scr-isup.....	5-732	rtrv-homern.....	5-1248
ent-scr-opc.....	5-734	rtrv-inopts.....	5-1249
ent-scr-sio.....	5-738	rtrv-ip-card.....	5-1252
ent-scr-tt.....	5-742	rtrv-ip-host.....	5-1253
ent-scrset.....	5-744	rtrv-ip-lnk.....	5-1254
ent-serial-num.....	5-746	rtrv-ip-node.....	5-1256
ent-shlf.....	5-747	rtrv-ip-rte.....	5-1260
ent-sid.....	5-748	rtrv-isupvar-attrb.....	5-1261

rtrv-l2t.....	5-1263
rtrv-l3t.....	5-1265
rtrv-lbp.....	5-1268
rtrv-lnp-serv.....	5-1282
rtrv-lnpopts.....	5-1294
rtrv-ls.....	5-1306
rtrv-m2pa-tset.....	5-1316
rtrv-map.....	5-1320
rtrv-mrn.....	5-1331
rtrv-na.....	5-1337
rtrv-netopts.....	5-1337
rtrv-oap-config.....	5-1338
rtrv-prefix.....	5-1349
rtrv-pstn-pres.....	5-1351
rtrv-rmt-appl.....	5-1352
rtrv-rte.....	5-1353
rtrv-rtx.....	5-1370
rtrv-sccpopts.....	5-1388
rtrv-scr-aftpc.....	5-1389
rtrv-scr-blkdpc.....	5-1394
rtrv-scr-blkopc.....	5-1400
rtrv-scr-cdpa.....	5-1405
rtrv-scr-cgpa.....	5-1410
rtrv-scr-destfld.....	5-1416
rtrv-scr-dpc.....	5-1421
rtrv-scr-isup.....	5-1427
rtrv-scr-opc.....	5-1430
rtrv-scr-sio.....	5-1436
rtrv-scr-tt.....	5-1440
rtrv-scrset.....	5-1443
rtrv-serial-num.....	5-1460
rtrv-sg-opts.....	5-1461
rtrv-shlf.....	5-1462
rtrv-slk.....	5-1472
rtrv-slt.....	5-1479
rtrv-spc.....	5-1480
rtrv-srvsel.....	5-1486
rtrv-ss-appl.....	5-1491
rtrv-ss7opts.....	5-1492
rtrv-stp.....	5-1493
rtrv-stpopts.....	5-1505
rtrv-subnetid.....	5-1509
rtrv-t1.....	5-1510
rtrv-tbl-capacity.....	5-1513
rtrv-th-alm.....	5-1517
rtrv-th-sccp.....	5-1518
rtrv-trbltx.....	5-1520
rtrv-trm.....	5-1525
rtrv-tt.....	5-1539
rtrv-ttmap.....	5-1542
rtrv-uaps.....	5-1545
rtrv-uim-acthresh.....	5-1546
rtrv-vendid.....	5-1550
rtrv-x25-dstn.....	5-1551

rtrv-x25-rte.....	5-1552
rtrv-x25-slk.....	5-1556
set-gtwy-acthresh.....	5-1558
set-scrrej-prmtrs.....	5-1559
set-uim-acthresh.....	5-1562

System Maintenance

act-alm-trns.....	5-1
act-file-trns.....	5-5
act-flash.....	5-7
alw-card.....	5-29
alw-imt.....	5-32
alw-map-ss.....	5-33
alw-trm.....	5-35
aud-data.....	5-36
canc-alm-trns.....	5-42
chg-db.....	5-88
clr-imt-stats.....	5-410
conn-imt.....	5-412
copy-disk.....	5-413
copy-fta.....	5-415
copy-gpl.....	5-417
copy-meas.....	5-419
dact-alm-trns.....	5-422
dact-rstst.....	5-428
disc-imt.....	5-431
disp-fta-dir.....	5-432
dlt-fta.....	5-455
flash-card.....	5-788
format-disk.....	5-791
inh-alm.....	5-795
inh-card.....	5-803
inh-imt.....	5-804
inh-map-ss.....	5-805
inh-trm.....	5-809
init-card.....	5-810
init-flash.....	5-816
init-imt-gpl.....	5-819
init-mux.....	5-821
init-network.....	5-822
init-oap.....	5-825
init-sys.....	5-826
pass.....	5-833
rept-imt-info.....	5-838
rept-imt-lvl1.....	5-859
rept-imt-lvl2.....	5-872
rept-stat-alm.....	5-888
rept-stat-applsock.....	5-896
rept-stat-as.....	5-897
rept-stat-asp.....	5-899
rept-stat-assoc.....	5-900
rept-stat-card.....	5-903
rept-stat-cdt.....	5-930

rept-stat-clk.....	5-931
rept-stat-cluster.....	5-936
rept-stat-dlk.....	5-957
rept-stat-dstn.....	5-958
rept-stat-e1.....	5-970
rept-stat-eroute.....	5-972
rept-stat-imt.....	5-985
rept-stat-iptps.....	5-988
rept-stat-lnp.....	5-993
rept-stat-ls.....	5-1000
rept-stat-lsms.....	5-1003
rept-stat-meas.....	5-1005
rept-stat-mps.....	5-1006
rept-stat-mux.....	5-1016
rept-stat-ndc.....	5-1017
rept-stat-rte.....	5-1018
rept-stat-rtkey.....	5-1030
rept-stat-rtx.....	5-1030
rept-stat-sccp.....	5-1036
rept-stat-seas.....	5-1047
rept-stat-slan.....	5-1051
rept-stat-slk.....	5-1054
rept-stat-sys.....	5-1062
rept-stat-t1.....	5-1067
rept-stat-trbl.....	5-1070
rept-stat-trm.....	5-1075
rept-stat-xlist.....	5-1079
rls-alm.....	5-1083
rmv-card.....	5-1083
rmv-imt.....	5-1085
rmv-trm.....	5-1086
rst-card.....	5-1087
rst-dstn.....	5-1089
rst-imt.....	5-1090
rst-trm.....	5-1090
rtrv-bip.....	5-1120
rtrv-log.....	5-1296
rtrv-mem.....	5-1330
rtrv-obit.....	5-1339
rtrv-trbl.....	5-1518
tst-bip.....	5-1563
tst-disk.....	5-1564
tst-e1.....	5-1568
tst-imt.....	5-1570
tst-t1.....	5-1577
unhb-alm.....	5-1580

Link Maintenance

act-cdl.....	5-2
act-dlk.....	5-3
act-lpo.....	5-20
act-slk.....	5-25
alw-slk.....	5-34

blk-slk.....	5-40
canc-dlk.....	5-44
canc-lpo.....	5-47
canc-slk.....	5-49
chg-meas.....	5-240
chg-measopts.....	5-242
dact-cdl.....	5-423
dact-lbp.....	5-426
dact-slk.....	5-429
inh-slk.....	5-807
rept-ftp-meas.....	5-834
rept-meas.....	5-876
rept-stat-cdl.....	5-929
rept-stat-lfs.....	5-991
rept-stat-tstslk.....	5-1077
rept-x25-meas.....	5-1080
rtrv-meas-sched.....	5-1326
rtrv-measopts.....	5-1328
tst-dlk.....	5-1567
tst-slk.....	5-1572
ublk-slk.....	5-1578
unhb-slk.....	5-1586

Program Update

act-gpl.....	5-11
chg-feat.....	5-112
chg-gpl.....	5-124
rept-stat-gpl.....	5-976
rtrv-feat.....	5-1180
rtrv-gpl.....	5-1186

Security Administration

canc-cmd.....	5-42
chg-attr-seculog.....	5-76
chg-cmd.....	5-77
chg-cmdclass.....	5-80
chg-eisopts.....	5-111
chg-secu-dflt.....	5-337
chg-secu-trm.....	5-342
chg-user.....	5-398
copy-seculog.....	5-420
dlt-user.....	5-552
ent-user.....	5-778
rept-stat-seculog.....	5-1048
rtrv-attr-seculog.....	5-1119
rtrv-eisopts.....	5-1179
rtrv-secu-dflt.....	5-1447
rtrv-secu-trm.....	5-1449
rtrv-secu-user.....	5-1451
rtrv-seculog.....	5-1455
rtrv-sid.....	5-1464
set-date.....	5-1557

set-time..... 5-1560

LNP Basic

canc-lnp-dpcer..... 5-46
 canc-lnp-tnrpt..... 5-47
 rtrv-lnp-dpcer..... 5-1272
 rtrv-lnp-lrn..... 5-1276
 rtrv-lnp-npanxx..... 5-1279
 rtrv-lnp-sp..... 5-1283
 rtrv-lnp-sub..... 5-1285
 rtrv-lnp-tnrpt..... 5-1290
 rtrv-lnp-ttmap..... 5-1291
 rtrv-split-npa..... 5-1485

LNP Database

alloc-mem..... 5-28
 chg-lnp-lrn..... 5-205
 chg-lnp-npanxx..... 5-207
 chg-lnp-ttmap..... 5-214
 dlt-lnp-lrn..... 5-477
 dlt-lnp-npanxx..... 5-478
 dlt-lnp-sp..... 5-481
 dlt-split-npa..... 5-544
 ent-lnp-lrn..... 5-657
 ent-lnp-npanxx..... 5-660
 ent-lnp-sp..... 5-664
 ent-split-npa..... 5-765
 rtrv-lnp-dbts..... 5-1271

LNP Subscription

chg-lnp-sub..... 5-211
 dlt-lnp-sub..... 5-481
 ent-lnp-sub..... 5-664

Debug

Pass-Through

arp..... 6-2
 aslog..... 6-5
 asplog..... 6-6
 assocrtt..... 6-12
 connmgr..... 6-14
 drklog..... 6-21
 ftpstest..... 6-33
 linkinfo..... 6-35
 msucount..... 6-40
 msuroute..... 6-57
 msutrace..... 6-63
 netstat..... 6-80

nslookup..... 6-93
 ping..... 6-96
 sctp..... 6-100
 sockrtt..... 6-105
 sockstate..... 6-107
 traceroute..... 6-110
 ualog..... 6-120

Using Commands

Introduction

This chapter provides the following information:

- A description of the system's Maintenance and Administration Subsystem Processors
- A description of the system's input and output devices
- A description of how to enter commands
- The procedures for logging into and out of the system

This chapter is intended to assist personnel responsible for the system.

Maintenance and Administration Subsystem Processors

The maintenance and administration subsystem contains two Maintenance and administration Subsystem Processors (MASP). The MASP is made up of two cards:

1. A GPSM-II card
2. A Terminal Disk Module (TDM).

The GPSM-II card contains the communications processor and applications processor and provides connections to the IMT bus. This processor controls the maintenance and database administration activity.

Each TDM is equipped with a fixed disk drive, the terminal processor for the 16 I/O ports, and interfaces to the Maintenance Disk and Alarm (MDAL) card. The fixed disk drive is used as either a permanent, temporary, or transient medium for data storage. The data stored on the disk can be used immediately or backed up and stored as permanent archives files.

See the *Installation Manual - EAGLE 5 ISS* for more information.

Removable Cartridge Disk Drives

The system is equipped with a removable cartridge drive located on the Maintenance Disk and Alarm (MDAL) card, located in the control shelf. Refer to the *Installation Manual - EAGLE 5 ISS* for more detailed information about the MDAL card.

The removable cartridge is used for installing new software; backing up the system software, application software, and the database; and downloading data for off-line processing.

Input/Output Devices

There are two types of Input/Output (I/O) devices: terminals and printers. All I/O devices are connected to the system through the control shelf backplane. Each I/O device is described in terms of its function and its connection to the system. Refer to the *Installation Manual - EAGLE 5 ISS* for backplane connection information.

Terminals and Printers

The EAGLE 5 ISS uses VT320 terminals for maintenance and database administration. The EAGLE 5 ISS also can be configured to communicate with the SEAS interface (OAP). The terminals enable you to enter information into or receive information from the system. The system is capable of communicating with terminals at data rates from 2400 to 19,200 baud, using the ASCII character set.

You must configure terminals to operate with the system. You also must set printers (and modems) for hardware flow control. To do this, enable Data Terminal Ready (DTR) through your terminal's configuration menu. A modem also must have DCD set on "high." If your terminal has the auto-wrap feature, ensure that it is disabled before using your terminal on the system.

For information on the setup values for printers and terminals on the system, see the **chg-trm** command.

Terminals provide the following capabilities:

- Command input and output
- Continuous alarm states
- Event/Error messages

You enter commands at the terminal to perform system operations such as displaying the system status, administering system security, and maintaining the database.


An example of a terminal screen is shown in Figure 4-1. Note that the alarm status area is labeled either Total Alarm Status or Active Alarm Status depending on how the VT320 terminal is configured. See the **chg-stpopts** command description for configuration information.

Alarms are displayed in the alarm status area of the terminal screen. The alarm levels are as follows:

- Critical – Indicates a severe, service-affecting condition has occurred and that immediate corrective action is needed, regardless of the time of day or the day of the week.
- Major – Indicates a serious disruption of service or the failure of important circuits is taking place. These troubles require attention and response to restore or maintain system capability.
- Minor – Indicates a trouble, but one that does not have a serious affect on service.

- Inhibited – Indicates a device in the system with an inhibited alarm. A temporarily or permanently inhibited alarm does not generate unsolicited output or cause alarm indicators to be turned on. See the **inh-alm** command description for information on inhibited alarms.

Figure 4-1. System Terminal User Display

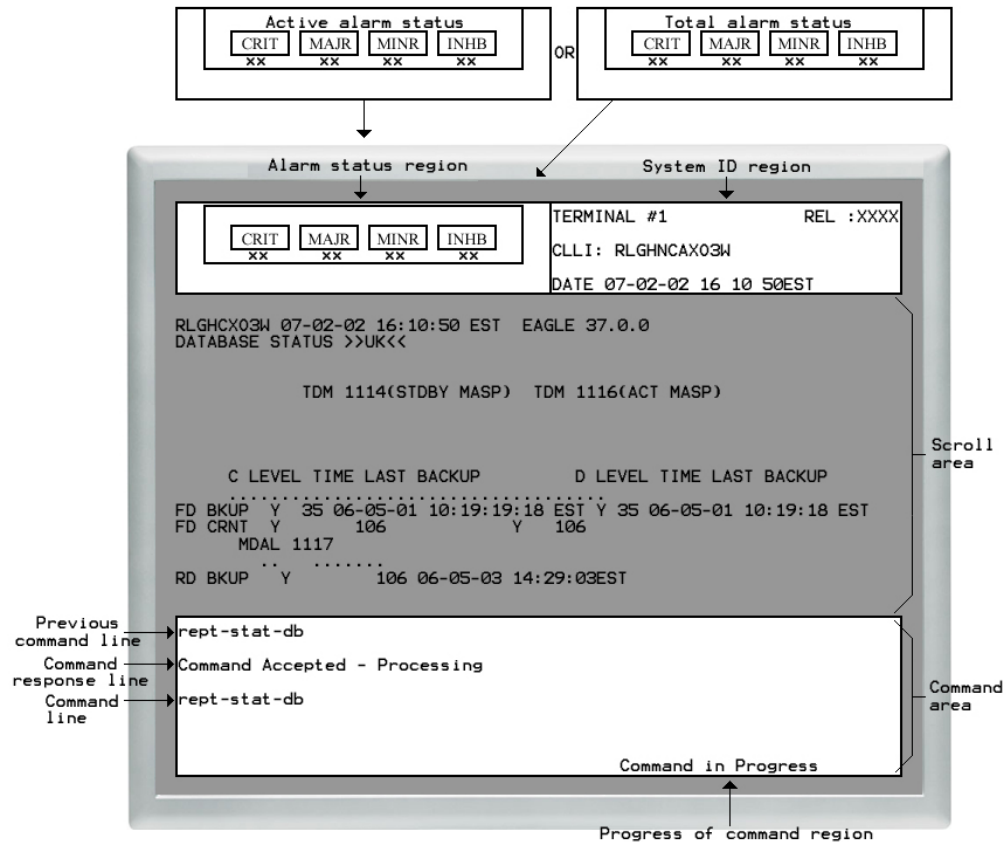

Event/Error messages also are issued to terminals to report system conditions or events. If the condition or event affects service, an alarm is issued along with an Event/Error message. Event/Error messages are displayed in the scroll area of the terminal screen.

Use the command line region of the terminal display (Figure 4-1) to enter commands. The command line region consists of two lines. Each of these lines can hold up to 80 characters. If you enter a command of more than 80 characters in length, the command appears on both lines. When you press the Enter key, only the first 80 characters are displayed in the previous command line, followed by a message on the command response line showing the status of the command. The remaining characters have not been rejected; they are not displayed due to line length limitations. If you recall the command by pressing the Up arrow key or Down arrow key, all the characters in the command are displayed. For a description of the arrow key functions, see Table 4-2.

Terminal and Printer Connections

Terminals and printers are connected to the Terminal Disk Module (TDM), using the control shelf backplane. The TDM also provides Keyboard Send and Receive (KSR) function. See "KSR Function

on VT320 Terminal Devices" on page 4-5 for more information on the KSR function. A description of the TDM can be found in the *Installation Manual - EAGLE 5 ISS*.

KSR Function on VT320 Terminal Devices

The terminals can use the keyboard send and receive (KSR) mode of operation. KSR refers to a device or mode of operation that prints or displays all received data. The KSR mode of operation typically supports a teletype printer, but in the system, it also supports a video display unit and keyboard.

The KSR feature enables you to attach a dumb terminal device or teletype printer to the system's I/O ports or emulate KSR mode of operation on a VT320. KSR enhances the system's dial-up administration functions by allowing faster throughput, because the screen formatting characters associated with the VT320 mode of operation need not be transmitted.

KSR Configuration

This feature allows you to configure the operational characteristics of system's I/O serial ports to support KSR terminal devices. See Table 4-2 for a list of the keyboard functions used by the KSR feature. For information on configuring a serial I/O port for KSR operation, see the *Database Administration Manual - SS7*.

Changing the Mode Of Operation

Before you attempt to change the mode of operation of the terminal, you *must* follow the "Changing the Terminal Characteristics" procedure found in the *Database Administration Manual - SS7*. You must perform this procedure from another terminal.

You can change the mode of operation of the terminal by pressing the **F11** key. The **F11** key instructs the system to mimic a KSR. Command line editing operates exactly like the VT320.

The KSR emulation resembles a printer when in operation. The entire screen is used for output. Before you enter a command, press <Ctrl-A>. The command prompt (>) is displayed. Enter a carriage return to signify the end of command entry.

While in the KSR mode, all output to the video display unit is buffered. When any character is entered from the terminal, a one-minute timer is started and data reception from the system is stopped. The system responds to the command with the appropriate response, then resumes sending data where it left off.

If a carriage return is not received during command entry, a time-out occurs and the system resumes sending data to the terminal.

Requirements

The KSR function operates on any combination of terminal type assignments for the 16 available terminal ports.

Telnet Terminals

Telnet is a user command using the underlying TCP/IP protocol for accessing remote computers. Telnet provides a connection from a remote (client) to a host (server) computer; the client keyboard and monitor (or window) act as if physically attached to the host computer. Remote users log on as if they were local users with whatever privileges may have been granted to the specific applications

and data on the remote computer. Remote users, after they log in, can use the same services as a local user.

The IP User Interface feature permits any standard telnet client to act as an EAGLE 5 ISS terminal. This IP-based access provides a standard interface through which EAGLE 5 ISS commands are entered from a telnet session to the EAGLE 5 ISS. The EAGLE 5 ISS then provides command responses back to the remote telnet terminal.

Up to 3 IPSM cards in the EAGLE 5 ISS, with IP connectivity, enable telnet clients to connect from anywhere on the customer's IP LAN. The EAGLE 5 ISS must be on the customer's LAN or WAN. Each IPSM card provides 8 telnet terminal ports (IDs 17-24 for the first card installed, 25-32 for the second card installed, and 33-40 for the third card installed), which are automatically made available when the card is installed and provisioned. See the **chg-trm** command description in this manual for more information about configuring telnet terminals. Refer to the "Adding an IPSM" procedure in the Database Administration Manual for information on configuring the IPSM.

From the telnet client, the remote user connect to any one of the equipped IPSM cards available by entering the command **telnet** *<IP address>*. For example,

```
telnet 192.168.1.100
```

The remote user then selects a terminal number from a list of available terminals. If an incorrect terminal number (one not listed in the prompt) is selected, the prompt appears again. (After three incorrect tries, the session is closed.) After the session is accepted, an EAGLE 5 ISS welcome message appears. At this point, broadcast messages (if provisioned) will begin to appear. See Figure 4-2.

Figure 4-2. Telnet Terminal Selection and Login

```

Telnet - (None)
Connect Edit Terminal Help
telnet 192.169.1.100

Connected..
Welcome to Eagle.

Select a terminal from the list below:
(17, 18, 19, 22, 24)
> 21
21 is not a valid selection.

Select a terminal from the list below:
(17, 18, 19, 22, 24)
> 17
Connection established as terminal 17.

      eagle10110 01-10-15 09:56:00 GMT Rel 29.0.0-40.27.0
;      7630.0046   TERMINAL    17           Terminal enabled

> login:uid=eagle

Enter Password :

Command Accepted - Processing

      eagle10110 01-10-15 10:00:16 GMT Rel 29.0.0-40.27.0
login:uid=eagle
Command entered at terminal #17.
;

      eagle10110 01-10-15 10:00:18 GMT Rel 29.0.0-40.27.0
User logged in on terminal 17.
;

      eagle10110 01-10-15 10:00:18 GMT Rel 29.0.0-40.27.0
NOTICE: This is a private computer system.
Unauthorized access or use may lead to prosecution.
0 LOGIN failures since last successful LOGIN
Last successful LOGIN was on port 3 on 01-10-15 @ 09:59:51

```

After a connection is made, the remote user can log in using a pre-provisioned user ID and password. (The user ID and password must be provisioned from an existing serial terminal.) The **login** command can be typed directly, without typing <Ctrl-A> first.

An EAGLE 5 ISS serial terminal emulating a Keyboard Send/Receive (KSR) device is normally in *display mode* (where outgoing messages are displayed). In order to enter a command, the user must interrupt the display by holding down the Ctrl key and typing an “a” (the ATTENTION or Ctrl-A key sequence). When the terminal controller receives an ATTENTION, it enters a *command entry mode*. The output text is temporarily halted, and the prompt symbol “>” appears.

The telnet terminal enters *command entry mode* when any key is pressed; <Ctrl-A> is not needed.

After the login is accepted and the user presses a key to receive the standard EAGLE 5 ISS command line prompt, all EAGLE 5 ISS commands assigned to that user ID are now accessible.

The display of broadcast messages can be interrupted with any keystroke, and will resume after a command is entered or a set timeout expires. When in command entry mode, the telnet server holds

any outgoing messages in a buffer while a command is entered. A command entry is completed by pressing the Enter key.

The telnet server waits up to 60 seconds between keystrokes for the command text to be completed, before timing out and resuming the broadcast display. If the command entry times out, and output resumes, the incomplete command text might scroll off the screen. Even though the incomplete command was not executed, it is saved as an entry in the command buffer. This incomplete command will be displayed again when any key is pressed. The command string can be finished by continuing the typing where it was interrupted. Pressing the Enter key submits this command as usual.

Broadcast messages are held in a buffer from the time a key is pressed, until the command is complete (timed out, aborted, cancelled, or rejected). This is to allow command responses to be completely displayed. After the command completes, broadcast messages (if provisioned) will resume. The IPSM card buffer will hold up to 30 minutes of broadcast output before discarding the oldest messages.

When the user enters the **logout** command to end the telnet session, the user is logged off of the EAGLE 5 ISS, but the port remains assigned to the EAGLE 5 ISS telnet terminal. If the active port connection is lost for a reason such as hardware fault or system interruption, the telnet server resets affected ports, the session is closed, and the user ID is logged off.

The OA&M IP Security Enhancement feature provides secure connections to the EAGLE 5 ISS. Refer to Appendix B of the Database Administration Manual - System Management for information on using the PuTTY client to make a secure telnet connection.

Element Management System Alarm Monitor Terminals

Element Management System Alarm Monitor (EMSALM) terminals display UAM alarm set and clear messages and the UIM 1083 "system alive" messages only. No other messages (including reports and other UIMs) are displayed. EMSALM terminals are designed to display alarm messages only. EMSALM terminals are not restricted in any other way. They can accept login, and commands; however these operations may interfere with alarm monitoring and should be performed on an alternate terminal.

Serial port terminal IDs 1-16 can be assigned as EMSALM terminals. These EMSALM terminals are a refinement of the KSR terminal, and contain all the KSR terminal communication parameters.

Telnet terminal IDs 17-40 can be assigned as EMSALM terminals when the IP User Interface feature is enabled and turned on and up to 3 IPSM cards are equipped in the system (see "Telnet Terminals" on page 4-6). These EMSALM terminals have all of the functions of a telnet type terminal.

When the **chg-trm** command is entered to change a terminal to the EMSALM type, all output group parameter values for that terminal default to YES, even if they were set to NO before the change. Even though an output group is set to YES for an EMSALM terminal, no reports or UIMS other than UIM 1083 will appear for that output group. Individual output group values can be changed to NO by entering another **chg-trm** command for an EMSALM terminal (do this only with caution; it can cause loss of UAM alarm messages at the EMSALM terminal).

When the **chg-trm** command is entered to change a terminal from type EMSALM to another type, the output group values remain unchanged. A **chg-trm** command can be entered to change output group settings.

About Commands

Commands allow you to interact with the system to perform specific functions. Commands are available to perform the following functions:

- Obtain system status and operational status
- Modify system configuration
- Obtain measurement reports

The following sections describe how to enter commands through a system terminal. Command correction, keywords, parameters, and syntax are described.

Entering Commands

All commands are entered at the command prompt (>), located in the bottom window of the terminal display. After entering a command, you must press the **Enter** key. When the command has executed (an output message appears in the display to indicate execution), you can enter another command. The **F9** function key allows you to interrupt a running command; however, you cannot enter another command until the running command completes its operation.

Commands are not case sensitive; therefore, either uppercase or lowercase characters can be used. Intermixing (using both upper and lower case) characters does not create an error message, but you must use the correct command syntax.

Action Commands

Throughout this manual, the term “action command” is used in the description of some dependencies, as in the sentence “No other action command can be in progress when this command is entered.”

Action commands are used to effect changes to the state of entities within the system, such as cards and signaling links. For example, you use the **inh-card** command to change the state of the card to Out-of Service - Maintenance Disabled (OOS-MT-DSBLD).

Table 4-1 lists the action commands and shows which type of system entity they are associated with.

Table 4-1. Action Commands and Their Associated System Entity

Action Commands	System Entity
act-slk, alw-slk, canc-slk, dact-slk, inh-slk, unhb-slk, blk-slk, ublk-slk, tst-slk	Link Commands
act-alm-trns, canc-alm-trns, rls-alm	Alarm Commands
alw-trm, inh-trm	Terminal Commands
alw-card, inh-card, rmv-card, rst-card	Card Commands

Command Keywords and Parameters

Commands consist of two parts: keywords and parameters. Keywords identify the principal action to be performed by the system, and consist of one to three words. Most commands also require parameters to further define the command operation.

Parameters are entered after the keyword. Each parameter must be separated from the keyword or the previous parameter with a colon. If a parameter has multiple values, the values entered are discrete and must be separated with a hyphen or comma. The parameters can be entered in any order.

Some command parameters have built-in default values that are used if a value is not specified. To accept a default value, press **Enter** after the desired keyword and parameters have been entered.

Use the following delimiters when entering commands:

- : —separates parameters
- or , —separates multiple values within a parameter block
- = —use as delimiter between the parameter and input value

The following is an example of a command entry:

> **dact-slk:loc=1101:port=a**

The keyword in the above example is **dact-slk** (Deactivate Signaling Link). The first parameter for this command is **loc=1101** (the actual card location in the system for the link being cancelled, based on equipment location). The second parameter is **port=a**. This parameter signifies which signaling link port on the card in the designated location has the link that is to be cancelled.

If an error is made while typing commands, use the **Delete** key to make corrections, one character at a time.

NOTE: If the same parameter is entered more than once in a command, the system accepts the last parameter value that was entered. Any values for the parameter that were entered earlier in the command are ignored.

Keyboard Functions

Some keyboard functions used with commands are described in the previous section. Keyboard functions available for use with commands are listed in Table 4-2. Arrow key functions are further described following the table.

Table 4-2. Keyboard Functions

VT320 Key Sequence	KSR Key Sequence	Description
↑	↑	The Up arrow key recalls the previous commands entered at the prompt, one command at a time. The Up arrow key scrolls backwards through up to 10 commands for a KSR, VT320, or SCCS terminal, and up to 20 commands for an IP UI telnet terminal.

Table 4-2. Keyboard Functions

VT320 Key Sequence	KSR Key Sequence	Description
		See page 4-12 for a description of the Up arrow key functions.
←	←	The Left arrow key backspaces the underline cursor without erasing.
↓	↓	The Down arrow key recalls the previous command entered at the prompt, one parameter at a time. If the Up arrow key is pressed and more than one command has been entered in the session, pressing the Down arrow key displays one previously entered command at a time. The Down arrow key scrolls forward through up to 10 commands for KSR, VT320, and SCCS terminals and up to 20 commands for IP UI telnet terminals. See page 4-13 for a description of the down arrow key functions.
→	→	The Right arrow key recalls the last command entered at the prompt, one character at a time.
F6	F6	The F6 Function key refreshes the terminal screen, including any characters already input on the command line and the command response line.
F7	F7	The F7 Function key clears the scroll buffer. This enables a user to stop useless information from passing to the scroll region of the system terminal.
F8	F8	The F8 function key enables you to stop and restart the scrolling of information on the terminal screen.
F9	F9	The F9 Function key allows you to interrupt a running command so that you can enter another command. Output and processing of the interrupted command continue. Pressing F9 is the same as issuing the canc-cmd command with no parameters. The commands that can be interrupted by pressing F9 are listed in the description of the canc-cmd command. If the terminal is running one of the listed commands and you press F9 , output and processing are cancelled. This function works only on the same terminal that is running the command you want to cancel. To cancel a command from another terminal, use the canc-cmd:trm= command (see the canc-cmd command description).

Table 4-2. Keyboard Functions

VT320 Key Sequence	KSR Key Sequence	Description
F10	F10	The F10 Function key displays help information for the last command that was entered, including parameters, parameter formats, and the command class.
F11	F11	The F11 Function key allows you to toggle the terminal's mode of operation from VT320 to KSR and from KSR to VT320. This function key has no effect on IP UI telnet terminals.
Not Available	Control-A	Control-A allows you to enter a command in the KSR mode.
Control-S	Control-S	Used with the <i>sw</i> or <i>both</i> flow control (see the chg-trm command description for more information), this key sequence sends the XOFF character to temporarily stop sending data.
Control-Q	Control-Q	Used with the <i>sw</i> or <i>both</i> flow control (see the chg-trm command description for more information), this key sequence sends the XON character to resume sending data.
Ins	Ins	When Insert is toggled on, typed characters are inserted into the command line, moving existing characters to the right. When toggled off, typed characters overwrite existing characters.
Del	Del	Deletes one character at a time from the right; the cursor stays in position.
Backspace	Backspace	Deletes a character and moves the cursor one space to the left.

Arrow Key Operation

The arrow keys are used to move the cursor to a different position in a command, and to display part or all of a command that was previously entered.

On KSR, VT320, and SCCS terminals, you can scroll through the last 10 commands that were entered at the terminal during the session. On IP UI telnet terminals, you can scroll through the last 20 commands that were entered at the terminal during the session. Part or all of one command at a time is displayed. When you have scrolled through the complete list of up to 10 or 20 commands, the scrolling wraps back to the beginning of the list.

The list of previously entered commands is cleared when a terminal is inhibited and allowed (**inh-trm:trm=xx** and **alw-trm:trm=xx**) and when a file transfer is initialized with the **act-file-trns** command.

There are two modes of command recall for Up and Down arrow keys:

- **Edit Mode**
Edit Mode includes any key operation that changes the command at the prompt, such as the Delete key, the Back Space key, or an alphanumeric key. Pressing one of these keys to enter or change a command puts the terminal into Edit Mode. Pressing the Enter key (or carriage return) takes the terminal out of Edit Mode.
- **Non-edit Mode**
Pressing the Enter key (or carriage return) puts the terminal into Non-edit Mode. A terminal remains in Non-edit Mode when you press an arrow key, a Function key, or the Insert key, which do not change the command at the prompt. When you press a key that changes the command, the terminal goes into Edit Mode until you press the Enter key again.

Up Arrow Key

The Up arrow key is used to recall up to the last 10 commands (KSR, VT320, and SCCS terminals) or the last 20 commands (IP UI telnet terminals) entered at the prompt during the session.

In Edit Mode

- You enter 3 characters of a command at the prompt and press the Up arrow key. If the previous command was 6 characters long, then the last 3 characters of the previous command are recalled and displayed after the 3 characters that you entered at the prompt.
- You enter 10 characters of a command at the prompt and press the Up arrow key. If the previous command was 6 characters long, none of the previous command is displayed. The command that you entered remains as you entered it at the prompt.
- Entering part or all of a command at the prompt puts the terminal into Edit Mode. In Edit Mode, the last (or previous) command is recalled only if the command length of the last command is greater than the command at the prompt. For example,;

In Non-edit Mode

- When you have pressed the Enter key and there is no command at the prompt, or you have pressed the Insert key or a Function key, the terminal is in Non-edit Mode.
- When you press the Up arrow key in Non-edit Mode, and you have entered at least one previous command, the last command that you entered is displayed at the prompt. Pressing the Up arrow key again clears the command at the prompt (if any) and displays the next previous command that you entered (if any). By continuing to press the Up arrow key, you can scroll backwards through the last 10 commands (KSR, VT320, and SCCS terminals) or the last 20 commands (IP UI telnet terminals) that you entered at the terminal. The display wraps back to the most recent of the entered commands when all of the available commands have been recalled. The terminal remains in Non-edit Mode until you press a key that changes the displayed command.

Down Arrow Key

In Edit Mode, the Down arrow key recalls the last command that was entered at the terminal, one parameter at a time. The recalled parameter is displayed at the end of the entry that currently appears at the prompt.

In Non-edit Mode:

- If the Up arrow has not been pressed just before pressing the Down arrow key, the Down arrow key recalls the last command that was entered at the terminal, one parameter at a time.
- If the Up arrow key is the last key that was pressed before the Down arrow key is pressed, the Down arrow key scrolls forward through the last 10 commands (KSR, VT320, and SCCS terminals) or last 20 commands (IP UI telnet terminals), displaying one complete command each time the key is pressed. The scrolling wraps to the beginning of the list when all of the available commands have been displayed.

Right Arrow Key

Each time the Right arrow key is pressed, one character of the last command is recalled and the cursor moves one position to the right. When the last command is completely displayed, pressing the Right arrow key does not cause any cursor movement or character display.

Left Arrow Key

The Left arrow key moves the underline cursor one position to the left without erasing the character. The underline cursor can be moved until it reaches the first character at the left of the command. If the Left arrow key is pressed again after the cursor reaches the first character of the command, the bell sounds.

Command Output and Messages

Reports and outputs generated through retrieve or report status commands are followed by a semi-colon (;) to signify the end of the output (this is in compliance with TL1 standards).

The following types of output messages are used on the system:

- **Command Accepted—Processing:** The command has been accepted by the application's command handler as syntactically correct. This message is displayed in the command area of the terminal display.
- **Command Completed—**The command has been entered, and the system has completed processing. This message is displayed in the scroll area of the terminal display.
- **Command Executed—**The command has been entered, and the system has completed processing. This message is displayed in the command area of the terminal display.
- **Command Failed—**The command was executed but failed due to an external reason, such as the link is not equipped or a disk drive is unable to communicate. The reason for the failure is included in this message.
- **Command Rejected—**The command syntax could be incorrect, or a parameter value is incorrect (semantic error). This message is displayed in the command area of the terminal display. The reason for rejecting the command (command syntax or incorrect parameter value) is included in this message.

- **Command Aborted**—The command syntax and the parameter values are ok, but for some reason the command was aborted (for example, a disk drive is inaccessible). This message is displayed in the scroll area of the terminal display.
- **Command Response Messages**—A command is entered at the terminal, and the response to that command is echoed on that same terminal. These messages are displayed in the scroll area of the terminal display.
- **Unsolicited Messages**—An example of unsolicited messages are the messages delivered in response to alarm conditions. These messages are displayed in the scroll area of the terminal display.

The unsolicited messages can be directed to a specific terminal or printer by using the **chg-trm** command to assign one or more of the following groups of unsolicited output messages to the specified terminal or printer.

Application Server	Application Subsystem
Card	Clock
Debug	Global Title Translation
Gateway Screening	Measurements Maintenance
Monitor	MPS
SEAS Maintenance	SLAN Maintenance
System Maintenance	Security Administration
Traffic Measurements	Database Administration
Link Maintenance	Program Update
LNP Database Administration	LNP Subscription


To configure a terminal to receive unsolicited LNP database administration and LNP subscription messages, the LNP feature must be turned on (see the **enable-ctrl-feat** command).

Command Output Banners

When a command is executed in the system, one or more banner lines appear in the output that is displayed for the command.

page 4-14 shows the general format of an output banner.

Figure 4-3. Output Banner Format

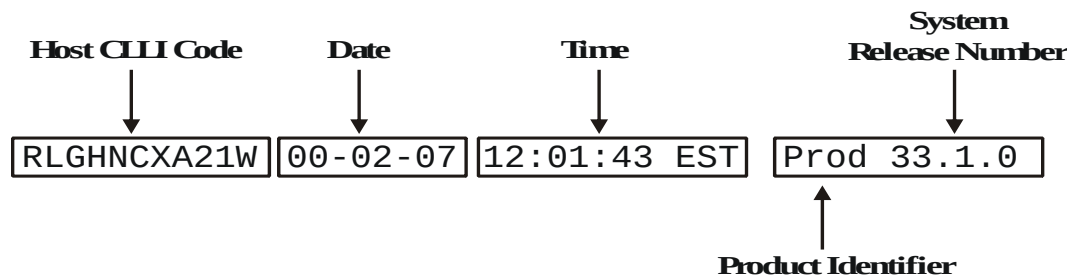

The following fields appear in each output banner:

- **Host CLI code**—a maximum of one alphabetic character and ten alphanumeric characters. The CLI code uniquely identifies the system in terms of its physical location. The CLI code must be unique among all elements in the system.
The CLI code contains the following information:
 - City—4 characters
 - State— 2 characters
 - Building— 2 characters
 - Equipment type —3 characters
- Date—year-month-day
- Time—hour: minute: second time zone
- System Release Number— contains a product identifier and the version ID number.
The product identifier, which is shown as ‘Prod’ in Figure 4-3 and the output examples in this manual, can appear as “EAGLE” or “EAGLE5” depending on which product key is turned on in the system (see the **rtrv-ctrl-feat** output example). If one or more “EAGLE 5” features are enabled in the system, the EAGLE5 product key must also be turned on and EAGLE5 will appear in the banner. If there are no “EAGLE 5” features enabled in the system, the EAGLE product key will be turned on and EAGLE will appear in the banner. (If both the EAGLE5 and EAGLE product keys are enabled, the EAGLE5 product key should be turned on and appear in the banner).
The version ID number identifies the GPL set that is specific to the software release that is expected to be installed on the system as approved loads. The format of the version ID number is *maj.min.maint*, defined as follows:
 - *maj*—the major release ID
 - *min*—the minor release ID
 - *maint*—the maintenance release ID

System Security

User IDs and passwords protect the system from unauthorized entry into the system and enhance system security. To enter the system through a terminal, a user must enter a valid user ID and password at the system prompt, and the user ID and password must be authorized for use together. A user ID identifies a user to the system.

To maintain the security of the system, passwords should be changed periodically and user IDs should be deleted whenever there is a personnel change.

When prompted to enter a new password, a different password should be provided. This is the responsibility of the user, and is not enforced by the EAGLE 5 ISS.

Rules for User ID and Password Administration

The rules for administering User IDs and passwords are:

- The maximum number of user ID-password combinations is 100.
- The maximum length of the user ID is 16 characters.

- The maximum length of the password is 12 characters; the minimum length is site provisionable using the **chg-secu-dflt** command, and it can be from 1 – 12 characters long.
- User IDs and passwords may contain any printable characters except the characters used as command delimiters: colon (:), comma (,), hyphen (-), or equal sign (=).
- Each user ID must begin with an alpha character.
- A password must contain:
 - At least as many characters as specified on the **minlen** parameter of the **chg-secu-dflt** command
 - At least as many alphabetic characters as specified on the **alpha** parameter of the **chg-secu-dflt** command
 - At least as many numeric characters as specified on the **num** parameter of the **chg-secu-dflt** command
 - At least as many punctuation characters as specified on the **punc** parameter of the **chg-secu-dflt** command
- A password must not contain the associated user ID.

Command Classes

Each user ID and password combination is assigned to one or more command classes to control the set of commands that a user may enter.

There are 10 unique non-configurable command classes: Basic, Database Administration, Debug, Link Maintenance, Program Update, Security Administration, System Maintenance, LNP Basic, LNP Database Administration, and LNP Subscription. (The Basic command class is assigned to all users as a default.)

There are 32 available configurable command classes. See the **chg-cmd** command description and the **chg-cmdclass** command description for information about naming and assigning commands to configurable command classes.

See the **chg-user** command description or the **ent-user** command description for more information on configuring user IDs and passwords and assigning command classes.

Login Security Checks

To aid in system security, the system maintains a record of when a password was last changed and requires a user to change the password when it is older than the site-specified maximum password age. The system also keeps track of the elapsed time between successful logins. If the time between successful logins exceeds the site-specified maximum, a user is not allowed access to the system. The site systems administrator also has the ability to revoke a user ID.

When a user first logs into the system, the default unauthorized user warning is displayed as follows

NOTICE: This is a private computer system.

Unauthorized access or use may lead to prosecution.

Additional security is available for the system in that multiple logins using the same user ID are prohibited.

Intrusion Alert

To alert the system administrator to a possible attempt by an unauthorized person trying to log into the system, the system issues a scroll area message. When 5 or more consecutive attempts to log into the system have failed, the following scroll area message is sent to all terminal ports that can receive unsolicited Security Administration messages:

Info: xxxxxxxxxx successive LOGIN failures on port pp

Where:

xxxxxxx is the number of consecutive login failures on the port (1 – 4,294,967,295)

pp is the terminal port (1 – 40) on which the login attempts were made

When the attempt to log into the system is successful after a series of failed consecutive login attempts, or if the active MASP reboots, the count of failed consecutive login attempts for that port is reset to 0.

Attempts to log into the system that are not completed normally, are not considered login attempts and are not included in the count of failed consecutive login attempts. For example, while prompting for a password you might use the **F9** key to abort the command, or errors might occur when the system is looking up a user ID or password.

Login Procedure

The commands described in this manual are entered at a terminal connected to the system. Before you can enter most of the commands, you must enter the **login** command to log into the system and open a user session. You must enter the login command with a valid user ID and password combination. When the system accepts your user ID and password as valid, you can enter commands at the terminal in the user session.

The first procedure in this section explains how to log into the system using the **login** command.

The procedures that follow the login procedure explain how to handle common situations that can arise when you log into the system.

- You must change the password the first time that you log in with a new user ID and password.
- The user ID and password that you enter are not accepted as valid.
- Your password has expired and must be changed.
- Someone else has already logged on with your user ID and password; the system does not allow the same ID and password to be used on two terminals at the same time.

NOTE: You can enter the **act-user** command instead of the **login** command.

Procedure - Log into the System for a User Session

- 1 At the system prompt (>), enter the **login** command with your user ID.
 - 2 Press the **Enter** key.
-

The following message appears:

Enter Password:

-
- 3 At the system prompt, type your password.
For security reasons, the password is not displayed on the terminal screen.
-
- 4 Press the **Enter** key.
Follow the remaining steps to complete this procedure or to go to another procedure, depending on the system response to validation of your user ID and password.
-
- 5 If your user ID and password combination are accepted and the following messages appear in the terminal input/command response region, the terminal is available for a user session.

Command Accepted-Processing
Command Executed

This procedure is complete.

-
- 6 If your user ID and password combination are not accepted and the following message appears, go to ""Procedure - Your User ID and Password were not Accepted" on page 4-18.

E2757 Cmd Rej: Invalid UserID/Password Combination

-
- 7 If you entered a new user ID and password combination for the first time, the following message appears, go to page 4-19 .

Enter new password (password must be changed) :

-
- 8 If you entered your user ID and password combination and your password has expired, the following message appears, go to page 4-20 .

Enter new password (password has expired and must be changed) :

-
- 9 If you entered your user ID and password combination and they are already being used at another terminal, the following message appears. Go to page 4-20 .

E2750 Cmd Rej: UserID already logged on (or is logging on) another port

Procedure - Your User ID and Password were not Accepted

- 1 This procedure outlines the steps to follow when you attempt to log into the system and your user ID and password combination are not accepted.
When you entered the **login** command with your user ID and entered your password at the system prompt, the following message appeared:

E2757 Cmd Rej: Invalid UserID/Password Combination

When this message is displayed, the terminal also presents a message describing the login attempt and the time and date the attempt occurred.

- 2 Verify that you have the correct user ID and password.
Return to the login procedure, and log in again with the correct user ID and password.
If the problem occurs again, contact your System Administrator.
-

Procedure - You Must Change Your Password

- 1 This situation can occur when you first log in after the system administrator uses the **ent-user** command to enter a new user ID and password combination, or when you first log in after the **chg-user:pid=yes** command has been entered.
When you entered the **login** command with your user ID and entered your password at the system prompt, the following message appeared:

Enter new password (password must be changed) :

Type a new password, following your site guidelines.

For security reasons, the password is not displayed on the terminal screen.

- 2 Press the **Enter** key.
The system checks the password to ensure that it meets your site's password complexity requirements.
-

- 3 If your password does not meet your site's password complexity requirements, the system displays a message based on the password violation (see page 4-21 for a list of possible messages).

The login process ends.

Decide on a new password, and start the login procedure again.

- 4 If your password meets the complexity requirements, the following message appears:

Verify Password:

Type the exact password again that you entered in Step 1

For security reasons, the password is not displayed on the terminal screen.

- 5 Press the **Enter** key.
-

- 6 If the user ID and password combination are accepted and the following messages appear in the terminal input/command response region, the terminal is available for a user session

Command Accepted-Processing
Command Executed

- 7 Record your new password in a secure location.
-

Procedure - Your Password has Expired

- 1 When you entered the **login** command with your user ID and entered your password at the system prompt, the following message appeared:

Enter new password (password has expired and must be changed) :

Type a new password, following your site guidelines.

For security reasons, the password is not displayed on the terminal screen.

- 2 Press the **Enter** key.
The system checks the password to ensure that it adheres to your site's password complexity requirements.
-

- 3 If your password does not meet your site's password complexity requirements, the system displays a message based on the password violation (see page 4-21 for a list of possible messages).
The login process ends.
Decide on a new password, and start the login procedure again.
-

- 4 If your password meets the complexity requirements, the following message appears:

Verify Password:

Type the exact password again that you entered in Step 1

For security reasons, the password is not displayed on the terminal screen.

- 5 Press the **Enter** key.
-

- 6 If the user ID and password combination are accepted and the following messages appear in the terminal input/command response region, the terminal is available for a user session

Command Accepted-Processing
Command Executed

- 7 Record your new password in a secure location.
-

Procedure - Your User ID is Already Being Used

- 1 When you entered the **login** command with your user ID and entered your password at the system prompt, the following message appeared:

E2750 Cmd Rej: UserID already logged on (or is logging on) another port

The following information is displayed in the scroll area:

Info: UID is currently logged on (or is logging on) to port yy.

where yy is in the range of 1 - 40.

- 2 Find the terminal at port yy, and log off your user ID at that workstation.
See page 4-22 .

- 3 Return to your terminal and log into the system again.

Login Error Messages

- E2262 Cmd Rej: Password too long, 12 maximum
- E2263 Cmd Rej: Password does not contain enough characters
- E2264 Cmd Rej: Password verification failed
- E2750 Cmd Rej: UserID already logged on (or is logging on) another port
- E2751 Cmd Rej: UserID has been revoked
- E2752 Cmd Rej: UserID has become obsolete and cannot be used
- E2753 Cmd Rej: Password does not contain enough alphabetic characters
- E2754 Cmd Rej: Password does not contain enough numeric characters
- E2755 Cmd Rej: Password does not contain enough punctuation characters
- E2756 Cmd Rej: Failed reading the password table
- E2757 Cmd Rej: Invalid userID/password combination
- E2758 Cmd Rej: ALPHA+NUM+PUNC must not be greater than 12
- E2759 Cmd Rej: Revocation of security admin userID not allowed
- E2760 Cmd Rej: Failed reading the security defaults table
- E2761 Cmd Rej: Password cannot contain userID

See the **chg-secu-dflt** command description for information on different options the system administrator has for configuring the system for password requirements.

The following is an example of the information that might be displayed in the scroll area, depending on your site's configuration:

New password must contain

- from 8 to 12 characters
- at least 1 alphabetic character(s) (a – z)
- at least 1 numeric character(s) (0 – 9)
- at least 1 punctuation character(s) (for example, \$%#@#)

Logout Procedure

When a terminal session is completed, you perform the following logout procedure to log out of the system. The terminal returns to an input idle state.

NOTE: You can use the `dact-user` command instead of the `logout` command.

Procedure - Log Out Of the System

- 1 At the system prompt (`>`), enter the **logout** command.
- 2 Press the **Enter** key.
The following messages appear on the terminal screen to confirm command completion:

```
Command Accepted-Processing
Command Executed
```

Commands

Introduction

This chapter contains commands that are not pass-through or debug commands. The commands are listed in alphabetical order starting on page 5-1 .

For each command listed in this chapter, the following information is given:

- A description of the command
- The command syntax
- A list of related commands
- The command class to which the command belongs
- A description of the command parameters
- An example of the command usage
- Rules, dependencies, and notes relevant to the command
- Sample command output

act-alm-trns

Activate Alarm Transfer

Use this command to transfer all alarm indications from the local office to the remote maintenance center.

Keyword: **act-alm-trns**

Related Commands: **dact-alm-trns, rept-stat-clk, rept-stat-trbl, rtrv-obit, rtrv-trbl**

Command Class: System Maintenance

Parameters

This command has no parameters.

Example

act-alm-trns

Dependencies

No other action command can be in progress when this command is entered.

Notes

After this command is entered, use the **rept-stat-alm** command to verify the **act-alm-trns** action.

New alarms cause the local maintenance center audible alarms to sound for a short period.

Output**act-alm-trns**

```
rlghncxa03w 04-01-09:50:17 EST EAGLE 31.3.0
Alarms transferred to Remote Maintenance Center
Command Completed.
```

```
;
```

act-cdl**Activate Command Driven Loopback**

Use this command to initiate a command driven loopback for testing a signaling link.

Command Driven Loopback is the ability to locally drive a signaling link into a manual line loopback. The data received on the signaling link is echoed (transmitted) back. This is effectively the reverse of the **tst-slk:loopback=lxvr**, which loops the transmitted data back to the receiver.

Keyword: act-cdl

Related Commands: act-lbp, dact-cdl, dact-lbp, rept-stat-cdl, tst-slk

Command Class: Link Maintenance

Parameters

:link= (mandatory)

SS7 signaling links. The SS7 signaling link to be tested.

Synonym: port

Range: a, b, a1-a31, b1-b31

Not all card types support all **link** parameter values.

See Table A-1 for valid link parameter range values for each type of card that can have assigned signaling links.

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

:loopback= (optional)

Loopback test type.

Range: line, payload

The **payload** value is valid only on LIM-ATM and E1-ATM cards.

Default: line

Example

```
act-cdl:loc=1205:link=b
```

Dependencies

The card location specified in the **loc** parameter must be equipped.

The signaling link specified in the **link** parameter must be equipped.

LFS must not be running on the specified signaling link when this command is entered. The LFS processing must be stopped or must be allowed to complete before this command can be entered.

The **loopback=payload** parameter is valid only for LIM-ATM and E1-ATM cards.

Command Driven Loopback testing is not available during upgrade.

A Command Driven Loopback test cannot be in progress on the specified link when this command is entered.

A **tst-slk** command cannot be in progress on the specified link when this command is entered. The **tst-slk** processing must be stopped or must be allowed to complete before this command can be entered.

The card location specified in the **loc** parameter must be in the In-Service-Normal (IS-NR) state.

The card location specified in the **loc** parameter must support Command Driven Loopback testing.

The signaling link specified in the **link** parameter must not be active.

The card location specified in the **loc** parameter cannot be reserved by the system.

Notes

None

Output

act-cdl:loc=1205:link=b

```
tekelecstp 05-01-21 17:00:36 EST EAGLE5 33.0.0
Command Accepted: Command Driven Loopback message is sent.
```

;

```
tekelecstp 05-01-21 17:00:36 EST EAGLE5 33.0.0
Command Completed.
```

;

act-dlk

Activate Data Link

Use this command to activate a TCP/IP data link and put that data link into service. The state of the TCP/IP data link is changed from out of service maintenance disabled (OOS-MT-DSBLD) to in service normal (IS-NR).

Keyword: act-dlk

Related Commands: canc-dlk, dlt-dlk, ent-dlk, rept-stat-dlk, rtrv-dlk, tst-dlk

Command Class: Link Maintenance

Parameters

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Example

act-dlk:loc=1308

Dependencies

No other action command can be in progress when this command is entered.

The shelf and card must be equipped.

The card location must contain an ACM.

Notes

None

Output

```
act-dlk:loc=1308
rlghncxa03w 04-01-17:00:36 EST EAGLE 31.3.0
Activate Link message sent to card.
Command Completed.
;
```

act-echo

Activate Echo

Use this command to force responses from the scroll area of a terminal to be printed to a specified terminal or printer. The command supports one terminal echoing to many terminals or many terminals echoing to one terminal.



CAUTION

CAUTION: Exercise restraint in using this command, because excessive echoing can cause a loss of output at the receiving terminal.

Keyword: act-echo

Related Commands: chg-trm, dact-echo, rept-stat-trm, rmv-trm, rst-trm, rtrv-trm

Command Class: Basic

Parameters

:trm= (mandatory)
Serial port number.
Range: 1-16

Example

```
act-echo:trm=3
```

Dependencies

Terminal output cannot be echoed to a terminal that is out of service.

If a terminal is already echoing to a specified terminal, the **act-echo** command cannot be entered to echo the terminal's output to that same terminal.

Echo is not allowed to the terminal from which the command is issued.

Echo is not allowed to or from IP User Interface telnet ports (terminals 17-40).

Echo is not allowed to an OAP port.

Terminal output cannot be echoed to a terminal that is inhibited.

Notes

This command can be used to echo only command output responses to a terminal. For alarm and network messages to be sent to a terminal, the **chg-trm** command must be used.

To echo output to a destination port, a user must be logged in at the destination port. The following warning message appears in the scroll area of the issuing terminal if echo is attempted to a terminal that has no user logged in:

No user logged in at Terminal X. No echo will occur until a user logs in.
where X is the **trm** parameter value specified in the **act-echo** command.

Output**act-echo:trm=2**

```
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
act-echo:trm=2
Command entered at terminal #1.
```

```
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
Scroll Area Output is echoed to terminal 2.
```

Caution: Loss of output may occur if too many terminals are echoed.

;

act-echo:trm=3

```
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
act-echo:trm=3
Command entered at terminal #1.
```

```
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
Scroll Area Output is echoed to terminal 2.
Scroll Area Output is echoed to terminal 3.
```

Caution: Loss of output may occur if too many terminals are echoed.

;

act-file-trns**Activate File Transfer**

This command starts a file transfer between the system and a remote computer.

Keyword: act-file-trns

Related Commands: copy-fts, disp-fts-dir, dlt-fts

Command Class: System Maintenance

Parameters

:loc= (optional)

The location of the fixed disk to or from which the file is to be uploaded or downloaded.

Range: 1114, 1116

Active and standby TDM locations

Default: The active TDM location

:retries= (optional)

The number of times the system retries a packet before giving up.

Range: 1-20

Default: 10

:timeout= (optional)

The number of seconds the system waits for a packet before sending a negative acknowledgment or retransmitting the previous packet. This parameter also specifies the number of seconds to wait for a transfer initiation message from the remote computer.

Range: 1-120

Default: 30

Example

```
act-file-trns:loc=1113
```

Dependencies

The **loc** parameter must specify a TDM card.

Only one file transfer can be active at a time.

This command cannot be entered on a telnet terminal (IDs 17-40).

Notes

Output messages indicating transfer initiated and transfer terminated (whether successful or not) are sent to the output devices in the Security Administration output group.

LNP Measurements

When used to output LNP measurements, the **rept-meas** command sends data to the FTA. Extracting LNP measurements from the FTA requires:

- A computer with a VT320 or KSR connection to the system
- A communication program that both emulates VT terminals and supports Kermit file transfer
- A spreadsheet program that can import Comma Separated Value (CSV) text files

A PC running ProComm© for Windows and Microsoft Excel© can be used.

Use the following procedure to collect LNP measurements.

Procedure - Extracting LNP Measurements from the FTA

- 1 Enter the following command to display the contents of the FTA:
disp-fts-dir:loc=xxxx
Where **xxxx** = the active TDM (**1114** or **1116**)

- 2 Enter the following command to delete any existing files from the FTA:
dlt-fts:loc=xxxx:all=yes
Where **xxxx** = the active TDM (**1114** or **1116**)

- 3 Enter the command to send LNP daily measurements to the FTA. For example:
rept-meas:enttype=lnp:type=mtcd

- 4 Enter the following command to activate the file transfer:
act-file-trns:loc=xxxx
Where **xxxx** = the active TDM (**1114** or **1116**)

- 5 Enter the following command to display a list of the files transferred to the FTA in step 4:
disp-fts-dir:loc=xxxx
Where **xxxx** = the active TDM (**1114** or **1116**)

- 6 Use the **get** command from within the communications program configured to run Kermit in ASCII mode to transfer the desired files (with the .csv suffixes) to the PC. For example:
> **get mday_lnp.csv**
> **get mday_ssp.csv**
> **get mday_lrn.csv**
> **get mday_npa.csv**
> **finish**

- 7 Run a spreadsheet program and open each of the collected files to view the LNP measurement data.
-
- 8 After all files are successfully transferred and confirmed, enter the following command to remove the files from the FTA:
dlt-fta:loc=xxxx:all=yes
 Where **xxxx** = the active TDM (**1114** or **1116**)
-

Output

Normal session output to non-Security Administration user's terminal.

```
act-file-trns:loc=1114:timeout=20:retries=2
rlghncxa03w 04-01-05 14:37:05 EST EAGLE 31.3.0
act-file-trns:loc=1114:timeout=20:retries=2
Command entered at terminal #1.
;
rlghncxa03w 04-01-05 14:37:05 EST EAGLE 31.3.0
Awaiting File Transfer with remote.
Please initiate binary Kermit session on local computer
;
rlghncxa03w 04-01-05 14:38:33 EST EAGLE 31.3.0
File Transfer : 0 file(s) DOWNLOADED from location 1114 successfully
File Transfer : 1 file(s) UPLOADED to location 1114 successfully
File Transfer : Kermit Session terminated NORMALLY
```

Normal session output to Security Administration group terminals.

```
act-file-trns:loc=1114:timeout=20:retries=2
rlghncxa03w 04-01-05 14:40:42 EST EAGLE 31.3.0
File Transfer : INITIATED on terminal #1
;
rlghncxa03w 04-01-05 14:41:07 EST EAGLE 31.3.0
File Transfer: 511_byte.bin UPLOADED to location 1114 successfully.
;
rlghncxa03w 04-01-05 14:41:44 EST EAGLE 31.3.0
File Transfer : terminated NORMALLY on terminal #1
```

Normal session output to Security Administration user's terminal.

```
act-file-trns:loc=1114:timeout=20:retries=2
rlghncxa03w 04-01-05 14:42:51 EST EAGLE 31.3.0
act-file-trns:loc=1114:timeout=20:retries=2
Command entered at terminal #1.
;
rlghncxa03w 04-01-05 14:43:29 EST EAGLE 31.3.0
File Transfer : INITIATED on terminal #1
;
rlghncxa03w 04-01-05 14:43:53 EST EAGLE 31.3.0
Awaiting File Transfer with remote.
Please initiate binary Kermit session on local computer

rlghncxa03w 04-01-05 14:44:19 EST EAGLE 31.3.0
File Transfer: 511_byte.bin UPLOADED to location 1114 successfully.
;
rlghncxa03w 04-01-05 14:44:52 EST EAGLE 31.3.0
File Transfer : 0 file(s) DOWNLOADED from location 1114 successfully
File Transfer : 1 file(s) UPLOADED to location 1114 successfully
File Transfer : Kermit Session terminated NORMALLY
;
rlghncxa03w 04-01-05 14:45:31 EST EAGLE 31.3.0
File Transfer : terminated NORMALLY on terminal #1
;
```

act-flash**Activate Flash**

Use this command to activate the trial FLASH GPL that is currently running on one target card or on a range of cards.

Keyword: act-flash

Related Commands: clr-imt-stats, flash-card, init-flash, init-imt-gpl, rept-imt-info, rept-imt-lvl1, rept-imt-lvl2, tst-imt

Command Class: System Maintenance

Parameters

:eloc= (optional)

End location. This parameter specifies the location of the last card of a range of cards to be activated.

Range: 1101-1113, 1115, 1201-1218, 1301-1318, 2101-2118, 2201-2218, 2301-2318, 3101-3118, 3201-3218, 3301-3318, 4101-4118, 4201-4218, 4301-4318, 5101-5118, 5201-5218, 5301-5318, 6101-6118

:gpl= (optional)

This parameter specifies the the flash GPL type that is running on the cards in the specified range of cards.

This parameter must be specified for cards that have more than one flash image (GPL).

Range: ayyyyyy

1 alphabetic character followed by 6 alphanumeric characters.

Valid GPLs are: **blbios**, **blbepm**, **blcpld**, **bldiag**, **bldiag6**, **blvxw6**, **bpdcm**, **bphcap**, **bphcapt**, **bphmux**, **bpmpl**, **bpmplt**, **hipr**, **imtpci**, **plde1t1**, and **pldpmc1**.

:loc= (optional)

Location. This parameter specifies the location of a single target card.

Range: 1101-1113, 1115, 1201-1218, 1301-1318, 2101-2118, 2201-2218, 2301-2318, 3101-3118, 3201-3218, 3301-3318, 4101-4118, 4201-4218, 4301-4318, 5101-5118, 5201-5218, 5301-5318, 6101-6118

:sloc= (optional)

Start location. This parameter specifies the location of the first card of a range of cards to be activated.

Range: 1101-1113, 1115, 1201-1218, 1301-1318, 2101-2118, 2201-2218, 2301-2318, 3101-3118, 3201-3218, 3301-3318, 4101-4118, 4201-4218, 4301-4318, 5101-5118, 5201-5218, 5301-5318, 6101-6118

:appl= (obsolete)

This parameter is obsolete; use the **gpl** parameter.

The **appl** parameter has been replaced with the **gpl** parameter to more accurately indicate that a GPL, and not an application, is specified for the parameter value.

Example

act - flash : loc=1105

act - flash : sloc=1101 : eloc=1112 : gpl=bpmpl

Dependencies

The card, or cards, in the specified location or range of locations for this command must be actively running a FLASH GPL in *trial* mode.

The allowed cards are HCAP, HCAP-T, DCM, DSM, E1/T1 MIM, E5-ENET, HC-MIM, E5-E1T1, GPSM-II, MPL, or MPL-T. Card locations xy09 and xy10 (x is the frame, y is the shelf) can be specified only for HMUX or HIPR cards.

Each specified card does not have to be defined in the database, but it does have to be aligned on the IMT bus.

If the target is HMUX or HIPR, both of the card locations specified in the **sloc** and **eloc** parameters must contain HMUX or HIPR cards on the same IMT bus. For HMUX or HIPR the bus is implicit based on the specified location. Location xy09 specifies HMUX or HIPR IMT-A Bus, and location xy10 specifies HMUX or HIPR IMT-B Bus. For example, **sloc=1109:eloc=6109** specifies all HMUX or HIPR cards on the IMT-A Bus only; **sloc=1110:eloc=6110** specifies all HMUX or HIPR cards on the IMT-B Bus only. HMUX or HIPR cards from both the IMT-A bus and IMT-B bus cannot be flash downloaded simultaneously.

The card must be running an inactive flash GPL when this command is executed.

The provisioning subsystem mode (simple, duplex) must be established prior to executing the command.

The **loc** parameter cannot be specified with the **eloc** and **sloc** parameters.

Either the **loc** parameter or the **eloc** and **sloc** parameters must be specified.

The **eloc** and **sloc** parameters must be specified together in the command; one parameter cannot be specified without the other parameter.

The **sloc** parameter value must be greater than the **eloc** parameter value.

The cards in the specified **sloc** and **eloc** card locations must be present and able to communicate over the IMT. The cards do not have to be provisioned in the database.

The **gpl** parameter must be specified if the **eloc** and **sloc** parameters are specified.

The **gpl** parameter must be specified for cards that have more than one flash image (GPL).

The cards in the locations specified in the **sloc** and **eloc** parameters must be running the specified general program load (**gpl**). Other cards in the range of card locations can be running other GPLs, but will not be activated. Only the cards within the range that are running the specified GPL will be activated.

A card that is the active MASP cannot be specified for the **loc**, **sloc**, or **eloc** parameter.

Notes

None

Output

```

act-flash:loc=1105
  rlghncxa03w 04-01-04 13:05:05 EST  EAGLE 31.3.0
  FLASH Memory Activation for card 1105 Started.
;

  rlghncxa03w 04-01-04 13:05:05 EST  EAGLE 31.3.0
  FLASH Memory Activation for card 1105 Completed.
;

  rlghncxa03w 04-01-04 13:05:05 EST  EAGLE 31.3.0
  Command Completed.
;

act-flash:sloc=1101:eloc=1112:gpl=bpmp1
  rlghncxa03w 05-01-04 13:05:05 EST  EAGLE 33.0.0
  FLASH Memory Activation for cards 1101 - 1112 Started.
;

  rlghncxa03w 05-01-04 13:05:05 EST  EAGLE 33.0.0
  FLASH Activation for cards 1101 - 1112 Completed.
  LOC 1101 : PASSED
  LOC 1102 : PASSED
  LOC 1112 : PASSED

  ALL CARD RESULTS PASSED
;

  rlghncxa03w 05-01-04 13:05:05 EST  EAGLE 33.0.0
  Command Completed.
;

```

act-ftp-trns**Activate FTP Transfer**

Use this command to activate an FTP transfer to send database tables from the system to the customer's FTP server.

NOTE: This command is not for customer use. It is for Tekelec use only.

Keyword: act-ftp-trns

Related Commands:

Command Class: Database Administration

Parameters

:action= (mandatory)

This parameter specifies the operation that the command is to perform.

Range: **put**

:filetype= (mandatory)

This parameter specifies the EAGLE 5 ISS table type to be transferred.

Range: **mtp, gtt, gws, all**

mtp—Transfer all Message Transfer Part tables

gtt—Transfer all Global Title Translation tables

gws—Transfer all Gateway Screening tables

all—Transfer all of the types of tables

Example

act-ftp-trns:action=put:filetype=gtt

Dependencies

An **act-ftp-trns** command cannot be entered if another file transfer is already in progress.

Both the **action** and **filetype** parameters must be specified in the command.

The FTP Server table must contain at least one FTP server entry that specifies the **user** application

Notes

This command communicates with the **user** application, defined in the FTP Server table. The IP address and server details necessary for an FTP transfer are also stored in the FTP Server table. Refer to the *FTRA User Guide* for the **user** application to configure an FTP Server table entry for the **user** application. One such **user** application is the FTP-based Table Retrieve Application (FTRA).

Output

The sections ending in "Copy-table COMPLETE" and "FTP file transfer SUCCESSFUL" appear for each table that is transferred. Each table name is shown as tablexxx.tbl, where xxx indicates the name of the specific table.

```
act-ftp-trns:action=put:filetype=gtt
tekelecstp 04-01-05 08:50:12 EST EAGLE 31.3.0
FTP command sent to IPSM card - Processing
;

tekelecstp 04-01-05 08:50:12 EST EAGLE 31.3.0
Copy-table started - tablexxx.tbl
Copy-table COMPLETE.
;

tekelecstp 04-01-05 08:50:12 EST EAGLE 31.3.0
FTP file transfer started - tablexxx.tbl
FTP file transfer SUCCESSFUL.
;

tekelecstp 04-01-05 08:50:12 EST EAGLE 31.3.0
FTP transfer COMPLETE.
;
```

act-gpl

Activate Generic Program Load

Use this command to change the status of the trial GPL from "trial" to "approved." The status of the previously approved GPL is changed to "trial."

Keyword: act-gpl

Related Commands: chg-gpl, copy-gpl, rept-stat-gpl, rtrv-gpl

Command Class: Program Update

Parameters

:gpl= (mandatory)

Generic program load. This parameter specifies the name of the GPL identifier to be moved from "trial" to "approved" status on the disk.

Range: ayyyyyy

1 alphabetic character followed by 6 alphanumeric characters.

atmansi—The GPL is used by the LIM cards to support the high-speed ATM signaling link feature.

atmitu—The GPL is used by the E1 ATM cards to support the high-speed E1 ATM signaling link feature.

blbios—A flash GPL containing the BIOS ROM image on HC-MIM cards that are used for E1 or T1 signaling links.

blcpld—A flash GPL containing the bit files for the CPLD on HC-MIM cards that are used for E1 or T1 signaling links.

bldiag—A flash GPL containing the diagnostic code on HC-MIM cards that are used for E1 or T1 signaling links.

blvxxw—A flash GPL containing the VxWorks operating system on HC-MIM cards that are used for E1 or T1 signaling links.

bphmux—This GPL is used to support Board PROM for HMUX flash memory.

bphcap—This GPL is used to support Board PROM for HCAP flash memory.

bphcapt—This GPL is used to support Board PROM for HCAP-T flash memory.

bphmux—This GPL is used to support Board PROM for HMUX flash memory.

bpmpl—This GPL is used to support Board PROM for MPL flash memory.

bpmplt—This GPL is used to support Board PROM for E1/T1 flash memory and Board Prom for MPL-T flash memory.

ccs7itu—This GPL is used by the LIM cards for ITU-TSS MTP functionality.

cdu—This GPL is used in the card manufacturing process for testing, and when directed by Tekelec Technical Services.

ebdablm—This GPL is used by the TSM card for enhanced bulk download.

ebdadcm—This GPL is used by the DCM card to transmit the LSMS LNP database to the EAGLE 5 ISS at high speed over an ethernet connection for enhanced bulk download.

eroute—This GPL is used by the STC card for EAGLE 5 Integrated Monitoring Support functions.

hipr—The communication software used on the High Speed IMT Packet Router (HIPR) card.

gls—This GPL is used by the TSM cards for downloading gateway screening to LIM cards.

imt—This GPL is the communication processor on the logical processing element (LPE).

imtpci—The communication software that operates the IMT bus on HC-MIM cards.

ipgwi—This GPL is used by the DCM card for TCP/IP point-to-point connectivity for ITU point codes.

iplim—This GPL is used by the DCM card for TCP/IP point-to-point connectivity for ANSI point codes.

iplimi—This GPL is used by the DCM card for TCP/IP point-to-point connectivity for ITU point codes.

ips—This GPL is used by the IPSM card for the IP User Interface feature.

mcp—This GPL is used by the MCPM card for the Measurements Platform feature.

plde1t1—A flash GPL that is used on HC-MIM cards for E1 and T1 signaling links.

pldpmc1—A flash GPL that is used on HC-MIM cards for E1 and T1 signaling links.

sccp—This GPL is used by the TSM cards for the global title translation application.

ss7ansi—This GPL is used by the LIM cards for the MTP functionality.

ss7gx25—This GPL is used by the LIM cards to support X.25 functionality.

ss7ipgw—This GPL is used by the system to support TCP/IP point-to-multipoint connectivity.

ss7hc—This GPL is used to support the functionality for the HC-MIM (High Capacity Multi-Channel Interface Module) card. The HC-MIM card runs either the **ss7ansi** or **ccs7itu** application; the **ss7hc** GPL allows the card to support up to 64 signaling links for E1 and T1 functions.

ss7ml—This GPL is used to support the functionality for the multi-port LIM (MPL or MPL-T) card and the E1/T1 MIM (Multi-Channel Interface Module) card. The MPL cards run only the **ss7ansi** application on a LIMDS0 card (as in the command **ent-card:type=limds0:appl=ss7ansi**); the **ss7ml** GPL allows the card to support 8 signaling links rather than the usual 2 links for LIM cards. The MPL cards support only the DS0 interface. The E1/T1 MIM card runs either the **ss7ansi** or **ccs7itu** application;

the **ss7ml** GPL allows the card to support 8 signaling links for E1 and T1 functions. (The older E1 card supports 2 signaling links for E1 functions).

stplan—This GPL is used by the ACM card to support the STP LAN application.

vcdu—This GPL is used in the card manufacturing process for testing, and when directed by Tekelec Technical Services.

vsccp—This GPL is used by the DSM card to support the G-Flex, G-Port, INP, and LNP ELAP Configuration features. If the G-Flex, G-Port, INP, or LNP ELAP Configuration feature is not turned on, and a DSM card is present, the VSCCP GPL processes normal GTT traffic.

iplhc—This GPL is used by the E5-ENET card for TCP/IP point-to-point connectivity for both ANSI and ITU point codes.

ipghc—This GPL is used by the E5-ENET card to support TCP/IP point-to-multipoint connectivity for both ANSI and ITU point codes.

ss7epm—This GPL is used by the E5-E1T1 cards to support the MTP functionality for both ANSI and ITU applications. The **ss7epm** GPL allows the card to support up to 32 signaling links for E1 and T1 functionality.

blbepm—A flash GPL containing the BIOS ROM image on EPM cards.

blvxw6—A flash GPL containing the VxWorks operating system on EPM cards.

bldiag6—A flash GPL containing the diagnostic code on EPM cards.

vxwslan—This GPL is used by the SSEDCEM card to support the STP LAN application.

:ver= (mandatory)

Version. This parameter specifies the version number of the GPL to be activated, with subfields the format of *major-minor-fix* separated by dashes.

Range: *major-minor-fix*

Specify a value in the range **0–255** for each subfield of the GPL version number (*major-minor-fix*).

:appl= (obsolete)

This parameter is obsolete; use the **gpl** parameter.

The **appl** parameter has been replaced with the **gpl** parameter to more accurately indicate that a GPL, and not an application, is specified for the parameter value.

Example

```
act-gpl:gpl=sccp:ver=101-6-0
act-gpl:gpl=bphcapt:ver=110-25-0
act-gpl:gpl=bpmp1t:ver=112-18-0
act-gpl:gpl=mcp:ver=111-17-0
act-gpl:gpl=atmitu:ver=114-1-0
act-gpl:gpl=ips:ver=114-1-0
act-gpl:gpl=hipr:ver=118-20-0
act-gpl:gpl=ss7hc:ver=125-1-0
act-gpl:gpl=blvxw:ver=125-1-0
act-gpl:gpl=blcp1d:ver=125-1-0
act-gpl:gpl=pldp1c1:ver=125-1-0
act-gpl:gpl=plde1t1:ver=125-1-0
act-gpl:gpl=blbios:ver=125-1-0
act-gpl:gpl=imtpci:ver=125-1-0
```

act-gpl:gpl=bldiag:ver=125-1-0

Dependencies

No other activate, change, copy, or retrieve GPL commands, nor a GPL audit, can be in progress when this command is entered.

Notes

Test the trial GPL by loading to a card before activating the GPL. Activating the GPL changes it from *trial* to *approved*.

The generic program load is committed on the active system and on the standby system.

Trial GPLs are downloaded to cards manually. Only approved GPLs can be downloaded to cards by the system.

Use the **rtrv-gpl** command to determine the version of the GPL.

Output

The output indicates that the specified GPL is activated on each TDM card.

act-gpl:gpl=ss7ansi:ver=101-014-000

```
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
SS7ANSI activate on 1114 completed
SS7ANSI activate on 1116 completed
```

;

act-gpl:gpl=hipr:ver=118-20-0

```
tekelecstp 05-01-03 16:53:23 EST EAGLE5 33.0.0
HIPR activate to 1114 completed
HIPR activate to 1116 completed
```

;

act-gpl:gpl=ss7hc:ver=125-1-0

```
tekelecstp 05-01-03 16:53:23 EST EAGLE5 33.0.0
SS7HC activate to 1114 completed
SS7HC activate to 1116 completed
```

;

The number of "cards of x complete" represents the total number of cards that can communicate on the IMT at the instant that this information is displayed.

act-gpl:appl=imt:ver=21-2-0

```
tekelecstp 05-04-24 06:54:39 EST EAGLE 34.0.0
IMT activate on 1114 completed
IMT activate on 1116 completed
```

;

```
tekelecstp 05-04-24 06:54:41 EST EAGLE 34.0.0
5402. 1105 SYSTEM INFO REPT-EVT:IMT GPL reloading.
1 card(s) of 25 complete.
Report Date: 05-04-24 Time: 06:54:41
```

;

```
tekelecstp 05-04-24 06:55:11 EST EAGLE 34.0.0
5403. 1106 SYSTEM INFO REPT-COND:IMT GPL reloading.
11 card(s) of 25 complete.
Report Date: 05-04-24 Time: 06:55:11
```

;

act-lbp

Activate Loopback Point Test

Use this command to activate one or more loopback point tests for testing data signaling link elements in an SS7 transmission path. Use this command to:

- Activate a test for a specified loopback point that is defined in the LFS database table
- Activate a test for one loopback point that is not defined in the LFS database table
- Activate tests for all loopback points that have been defined in the LFS database table. See "Summary of Loopback Testing Commands and Functions" for information about loopback testing commands and functions.

The **ent-lbp** command can be used to define a maximum of 32 loopback points in the LFS database table.

Keyword: act-lbp

Related Commands: chg-lbp, dact-lbp, dlt-lbp, rept-stat-lfs, rtrv-lbp

Command Class: Database Administration

Parameters

To activate a test for a single loopback point that is defined in the LFS database table, specify the loopback point number in the **lbp** parameter and do not specify any of the **lfst**, **rle**, **rep**, and **cli** parameters in the command. Information from the LFS database is used to activate the test for the specified loopback point.

To activate a test for a single loopback point that is not defined in the LFS database table, specify one or more of the **lfst**, **rle**, **rep**, and **cli** parameters in the command. (If the **cli** parameter is not specified, the **cli** value is blank, a null string. If the **rep** parameter is not specified, the default value is 0.)

To activate tests for all loopback points that are defined in the LFS database, do not specify any of the **lbp**, **lfst**, **rle**, **rep**, and **cli** parameters in the command. Information from the LFS database table is used to activate tests for all defined loopback points.

:link= (mandatory)

SS7 signaling link. This parameter specifies the SS7 signaling link to be tested.

Synonym: port

Range: a, b, a1-a31, b1-b31

Not all card types support all **link** parameter values.

See Table A-1 for valid **link** parameter range values for each type of card that can have assigned signaling link ports.

:loc= (mandatory)

Location. This parameter specifies the unique identifier of the card containing the signaling link to use for loopback point testing.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

:cli= (optional)

Common language location identifier. This parameter specifies the CILLI code or other mnemonic identifier, used to refer to the given loopback point.

Range: ayyyyyyyyyy

1 alphabetic character followed by up to 10 alphanumeric characters

Default: If the **rle**, **lfst**, or **rep** parameter is specified—null string (blank)

If the **rle**, **lfst**, or **rep** parameter is not specified—the value in the LFS database

:data= (optional)

This parameter specifies the data used with the *octet* or *alternate* patterns.

Range: 1-255

Default: 255

:force= (optional)

The **force=yes** parameter must be specified to start a test when there are 256 or more tests already running.

Range: yes, no

Default: no

:lbp= (optional)

Loopback point ID. This parameter specifies a far-end loopback point that lies along an SS7 signaling link path between the STP and the target device (up to *and including* the target device).

Range: 1-32

Default: If the **rle**, **cli**, **rep**, or **lfst** parameter is specified, the default is 1.

If the **rle**, **cli**, **rep**, and **lfst** parameters are not specified, the default is all loopback points found in the LFS database (up to 32 loopback points), as shown in the **rtrv-lbp** command output.

:lfst= (optional)

Link fault sectionalization test. This parameter specifies the type of link fault sectionalization loopback test to be performed.

This parameter is mandatory if the **rle**, **cli**, or **rep** parameter is specified.

Range: LLT, MLT, NLT

LLT—latching loopback test; a software latch is set at the test point to reverse everything that is received and return it to the sender until the test is complete

MLT—manual latch loopback test; an external hardware latch has been set to reverse everything that is received and return it to the sender until the test is complete (for equipment that cannot set a software latch for the test)

NLT—nonlatching loopback test; no permanent latch is set. Loopback codes are alternated with test data until the test is complete.

Default: The value in the LFS database, as shown in the **rtrv-lbp** command output

:maxerr= (optional)

The bit error threshold. This parameter specifies the actual number of errors allowed for a specific time period during which loopback testing is being performed. If this threshold is exceeded, the *TEST STATUS* field in the output report indicates an error.

Range: 0-4838400

Default: 56

:pattern= (optional)

This parameter specifies the type of test pattern used to perform the LFS test.

Range: b2047, b511, octet, alternate

b2047—047-bit Bert pattern sent until it is stopped by software

b511—511-bit Bert pattern sent until it is stopped by software

octet—Data (from the **data** parameter) sent continuously until it is stopped by software

alternate—Alternately, a count of 100 octets of the specified data (from the **data** parameter) followed by 100 octets of 0, sent until it is stopped by the software

The **octet** and **alternate** values are valid only when **lfst=llt** is specified.

Default: b2047

:rep= (optional)

Repetition count. This parameter specifies the number of link elements of the same type (not including the target device) that lie between the STP and the link element to be tested.

Range: 0-31

Default: If the **rle**, **cli**, **rep**, or **lfst** parameter is specified, the default is **0**.
If the **rle**, **cli**, **rep**, or **lfst** parameter is not specified, the default is the value in the LFS database, as shown in the **rtrv-lbp** command output.

:rle= (optional)

Remote link element. This parameter specifies the link element to be looped back for testing. This parameter is mandatory if the **lfst**, **cli**, or **rep** parameter is specified.

Range: **ds0**, **ocu**, **csu**, **dsu**, **nei**

Default: The value from the LFS database, as shown in the **rtrv-lbp** command output

:time= (optional)

This parameter specifies the length of time the test must be run in order to determine success or failure. If the number of errors that actually occur during this time exceeds the threshold set by the **maxerr** parameter, the loopback test is identified as a failure.

Range: 1-240000

hhmmss—*hh*=hours (00-24), *mm*=minutes (00-59), *ss*=seconds (00-59)

For example, **time=1** or **time=000001** is one second; **time=240000** is 24 hours;

time=200 or **time=000200** is 2 minutes

Default: 1 second

Example

Activate tests for all loopback points that are defined in the LFS database table:

```
act-lbp:loc=1205:link=b:pattern=alternate:maxerr=10:time=000200
```

Activate a test for a single loopback point that is not defined in the LFS database table:

```
act-lbp:loc=1205:link=b:lbp=1:rle=ds0:lfst=llt:cli=r lghncxa05w
```

```
act-
```

```
lbp:loc=1205:link=b:lbp=1:rle=ds0:lfst=llt:cli=r lghncxa05w:patte  
rn=octet:data=h'ff
```

```
act-
```

```
lbp:loc=1205:link=b:lbp=1:rle=ds0:lfst=llt:cli=r lghncxa05w:maxe  
r=40:time=12000
```

Activate a test for a single loopback point that is defined in the LFS database table:

```
act-
```

```
lbp:loc=1205:link=b:lbp=3:pattern=alternate:maxerr=10:time=000200
```

Dependencies

The Link Fault Sectionalization (LFS) feature must be on before this command can be entered.

If the **rle=nei** parameter is specified, the **rep=0** parameter must be specified.

The **rep** parameter can be specified only if the **lfst=llt** parameter is specified.

The **rle=ds0** or the **rle=nei** parameter cannot be specified if the **lfst=nlt** parameter is specified. The DS0 and Network Element Interface (NEI) link elements do not support non-latching loopbacks.

If one or more of the **rle**, **rep**, **lfst**, or **cli** parameters are specified, the database is not used to look up their values; therefore, the **lfst** and **rle** parameters must be specified when the **rep** or **cli** parameter is specified.

The **data** parameter can be specified only if the **pattern=octet** parameter or **pattern=alternate** parameter is specified.

The **pattern=octet** and **pattern=alternate** parameters cannot be specified for non-latching tests (**rle=nlt**).

The card location (**loc** parameter) must contain a provisioned and equipped **limds0**, **limt1**, or **limch** (associated with a **limt1**) card configured with either an **ss7ansi** or **ccs7itu** application.

The card in the **loc** parameter location must be in the In-Service-Normal state.

The signaling link that is used for LFS testing must be equipped, and must be deactivated before this command is entered.

The loopback points (LBPs) must have been previously defined in the database.

Only one LFS test can be active on a signaling link at a time.

This command cannot be entered for a signaling link LFS test when the maximum number of LFS tests are active for the card. At least one LFS test must complete before this command can be entered again.

On LIM-AINF, LIM-ILA, LIM-EILA, and MPL cards (type LIMDS0 cards), only one LFS test can be active on a card at a time.

On the following cards, up to 8 LFS tests can be active on a card at a time:

- E1/T1 MIM cards or HC-MIM cards used as T1 cards
- E1/T1 MIM cards used as LIMCH cards associated with a T1 card
- MPL-T cards (type LIMDS0)

This command cannot be entered when the maximum combined total number of LFS and link tests (1024) are in progress in the system. At least one test must complete before this command can be entered again.

The **force=yes** parameter must be specified to activate a test when there are 256 or more tests already running in the system.

The specified signaling link must not be running a **tst-slk** test when this command is entered. The **tst-slk** test must be stopped or allowed to complete before this command can be entered for the link.

The specified signaling link must not be in Command Driven Loopback (CDL) when this command is entered. The link must be removed from CDL before this command can be entered for the link.

This command cannot be entered for a link that is already blocked by another link diagnostic test. The test must be canceled or allowed to complete before this command can be entered for the link.

LFS testing is not available during upgrade.

The maximum number of loopback point entries allowed in the LFS table is 32.

Notes

The **act-lbp** command is not supported for **limatm** cards.

If an LFS test is aborted by a card reset, it can leave the remote far-end loopback condition active. Use the **dact-lbp** command to cancel LFS tests.

The E1/T1 MIM card and the HC-MIM card support this command on up to 8 T1 channels at a time; the command is not supported for E1.

The test can terminate with the status "ERROR, bit error exceeded threshold" for two reasons.

- The number of cumulative bit errors exceeds the specified **maxerr** parameter value.
- The number of bit errors for one second reaches or exceeds 255, without considering the **maxerr** parameter value.

Output

The LFS report is displayed when the LFS test completes.

The following example shows how the test failed because the bit error rate exceeded the threshold. Here the **maxerr=10** parameter is used for a test time of 2 minutes. Because more than 10 errors occurred within 2 minutes, the test is considered a failure and the **TEST STATUS** field displays the cause. The parameter values are applied to each loopback point. The **maxerr** value is per test, not cumulative for all tests.

act - lbp:loc=1205:link=b:pattern=alternate:maxerr=10:time=002000

tekelecstp 05-01-21 17:00:36 EST EAGLE5 33.0.0

LOC = 1205 Link = B LSN = ls11345678 Start time = 11:10:34

PATTERN = ALTERNATE DATA= FF MAXERR = 10 TIME = 00:02:00

TEST STATUS = ERROR, bit error exceeded threshold.

LBP	CLLI	RLE	REP	LFST	BIT_ERROR	ERRORED_SEC	DURATION
2	rlghncxa05w	DS0	0	LLT	0	0	00:02:00
3	-----	OCU	0	NLT	8	2	00:02:00
5	-----	NEI	0	LLT	15	1	00:01:20

;

In the following example, the test failed because the loopback could not be established.

act - lbp:loc=1205:link=b:pattern=alternate:maxerr=10:time=000200

tekelecstp 05-01-21 17:00:36 EST EAGLE5 33.0.0

LOC = 1205 Link = B LSN = ----- Start time = 11:10:34

PATTERN = ALTERNATE DATA= FF MAXERR = 10 TIME = 00:02:00

TEST STATUS = ERROR, loopback was not established.

LBP	CLLI	RLE	REP	LFST	BIT_ERROR	ERRORED_SEC	DURATION
1	rlghncxa05w	DS0	0	LLT	0	0	00:00:00

;

Legend

LOC—Card location that contains the signaling being tested.

LINK—Signaling link that is being tested on the card.

LSN—Name of the linkset that contains the link being tested.

START TIME—Time that the test started.

PATTERN—Type of test pattern used to perform the LFS test.

DATA—Data used with the **octet** or **alternate** patterns.

MAXERR—Bit error threshold; actual number of errors allowed for the specific time period during which loopback testing is being performed. If this threshold is exceeded in the specified time period, the **TEST STATUS** field in the output report indicates an error.

TIME—Specified length of time to run the test in order to determine success or failure. If the number of errors that actually occur during this time exceeds the threshold set by the **maxerr** parameter, the loopback test is identified as a failure.

TEST STATUS—Any one of the following **TEST STATUS** values can appear:

- PASS
- ERROR, LFS HARDWARE is not available.
- ERROR, loopback could not be established.

- ERROR, bit error exceeded threshold.
- ERROR, LFS test aborted.
- ERROR, LFS hardware failed.

LBP—Loopback point used to perform the LFS test.

CLLI—Common Language Location Identifier (CLLI) code, or other mnemonic identifier, used to refer to the given loopback point.

RLE—Remote link element to be looped back for testing.

REP—Repetition count. The number of link elements of the same type (not including the target device) that lie between the STP and the link element to be tested.

LFAST—Type of link fault sectionalization loopback test to be performed.

BIT_ERROR—The number of bit errors observed during the test.

ERRORED_SEC—The number of seconds that contained bit errors during the test. (Bit errors are sampled once per second; each sample that contains bit errors adds one second to this count.)

DURATION—Length of time that the test actually ran for the loopback point. For successful test, the TIME and the DURATION should be the same. If a test ran for less than the specified amount of time, the DURATION will be less than the TIME.

act-lpo

Activate Local Processor Outage

Use this command to force a processor outage on the specified link. The system begins sending link status signal units (LSSUs) with a status of SIPO to the adjacent signaling point. Level 2 status remains in service, except when the link is an ATM high-speed signaling link.

NOTE: The signaling link's blocked status is not preserved across a LIM reboot.

Keyword: act-lpo

Related Commands: blk-slk, canc-lpo, rept-stat-slk, ublk-slk

Command Class: Link Maintenance

Parameters

:link= (mandatory)

The signaling link on the card specified in the **loc** parameter. The links can be specified in any sequence or pattern.

Synonym: port

Range: a, b, a1-a31, b1-b31

Not all card types support all **link** parameter values.

See Table A-1 for valid **link** parameter range values for each type of card that can have assigned signaling links.

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Example

act-lpo:loc=1101:link=a

Dependencies

A card location that is valid and defined in the database must be specified.

No other action command can be in progress when this command is entered.

The card must be equipped and must be one of the following cards:

- A LIM card running the **ss7ansi**, **ss7gx25**, **atmansi**, or **ccs7itu** application
- An E1 ATM card running the **atmitu** application
- An SSEDCCM card running the **iplim** or **iplimi** application with links having **ipliml2=m2pa**
- An E1/T1 MIM or HC MIM card running the **ss7ansi** or **ccs7itu** application

This command can be entered for IPLIMx signaling links only when they have an **ipliml2** parameter setting of **m2pa**.

The **act-lpo** command is not valid for DCM cards with **ss7ipgw** or **ipgwi** TCP/IP links.

The card must contain signaling links.

The signaling link must be equipped in the database.

The **link** parameter values **a1**, **b1**, **a2**, **b2**, **a3**, and **b3** can be specified only for the following cards:

- A multi-port LIM
- An E1/T1 MIM
- An HC MIM

Notes

The function of this command is the same as the **blk-slk** command.

This command generates an alarm.

If the **act-lpo** command is followed by the **init-card** command, the local processor outage is not preserved after the **init-card** command completes.

The *Installation Manual - EAGLE 5 ISS* provides an illustration of card locations.

Output

```
act - lpo: loc=1101: link=a
tekelecstp 05-01-21 17:00:36 EST  EAGLE5 33.0.0
Local processor outage being set.

tekelecstp 05-01-21 17:00:36 EST  EAGLE5 33.0.0
* 0014.0208 * SLK 1101,A nc00027 slk local blocked
```

act-oap-config

Activate OAP Configuration

Use this command to update the OAPs with the configuration data entered into the EAGLE 5 ISS database with the **chg-oap-config** command.

The **act-oap-config** command also sends the EAGLE 5 ISS Site ID to the OAPs. See the **chg-sid**, **ent-lnp-serv**, and **chg-lnp-serv** commands for more information.



CAUTION

CAUTION: Before the **act-oap-config** command can be entered, the EAGLE 5 ISS database must be provisioned with required data for the SEAS feature, depending on which of those features are turned on. If this information is left blank or incorrectly provisioned and the act-

oap-config command is entered, the OAP may lose SEAS or LSMS connectivity. The requirements are discussed in the Dependencies section for this command.

Keyword: act-oap-config

Related Commands: chg-lnp-serv, chg-oap-config, chg-sid, dlt-lnp-serv, ent-lnp-serv, rtrv-lnp-serv, rtrv-oap-config, rtrv-sid

Command Class: Database Administration

Parameters

:force= (optional)

Force the EAGLE 5 ISS to provision only one OAP in a dual OAP configuration.

Range: yes, no

Default: no

:oap= (optional)

The OAP being updated.

Range: a, b, all

Default: all

Example

act-oap-config:oap=a:force=yes

Dependencies

Table 5-1 shows the fields of the **rtrv-oap-config** command output that must be configured depending on which feature is on. Table 5-1 also shows the parameters of the **chg-oap-config** command that are used to configure the OAP configuration data.

If the required information for a feature has already been configured in the EAGLE 5 ISS database, you do not have to re-enter all the parameters for that feature when you make a change. It is mandatory, however, that the configuration data in the EAGLE 5 ISS and the OAP database match.

Table 5-1. Parameters That Must Be Provisioned Prior to Updating OAP

Feature	Fields Displayed	Required Entry before Configuration can be sent to the OAP	chg-oap-config Parameter
SEAS	SEAC CLI	An entry is required if the SEAS feature is on.	seaccli
	X25 Packet Size	An entry is required if the SEAS feature is on.	x25ps
	X25 Mode	An entry is required if the SEAS feature is on.	x25mode
LNP	Active LSMS	An entry is required if the LNP feature is on.	lsms
	Main LSMS NSAP	An entry is required if the lsms=main parameter is specified.	mnsap
	Main LSMS SSEL	An entry is required if the lsms=main parameter is specified.	mpsel

Table 5-1. Parameters That Must Be Provisioned Prior to Updating OAP

Feature	Fields Displayed	Required Entry before Configuration can be sent to the OAP	chg-oap-config Parameter
	Main LSMS PSEL	An entry is required if the lsms=main parameter is specified.	msel
	Shadow LSMS NSAP	An entry is required if the lsms=shadow parameter is specified.	snsap
	Shadow LSMS SSEL	An entry is required if the lsms=shadow parameter is specified.	spsel
	Shadow LSMS PSEL	An entry is required if the lsms=shadow parameter is specified.	sssel
Either SEAS or LNP features	Hostname	An entry is required.	aname and bname
	IP Address	An entry is required if the LNP feature is on.	aipaddr and bipaddr
	IP Netmask	An entry may be required depending on the network configuration.	anmask and bnmask
	Default Router	An entry may be required depending on the network configuration.	arouter and brouter
	Config	An entry is required.	cfg

Table 5-2 shows other data not shown in the **rtv-oap-config** command output that must be provisioned in the database before the OAP configuration can be updated.

Table 5-2. Other Data Required for Updating the OAP Configuration

Feature	Data Required Before an OAP can be Updated
Either SEAS or LNP features	EAGLE 5 ISS CLI - configured with the cli parameter of the chg-sid command
LNP	The LNP services class , liddb , cnam , and isvm configured with the serv parameter of either the ent-lnp-serv or chg-lnp-serv command

To keep OAP parameters in sync with the EAGLE 5 ISS, a checksum is created using all of the OAP configuration data stored on the EAGLE 5 ISS (shown in Table 5-1 and Table 5-2). The OAP also calculates this checksum based on the data it has. The OAP returns this checksum every 5 seconds. The EAGLE 5 ISS compares the checksums and generates the following alarm within 10 seconds of any mismatch.

```
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
```

```
* nnnn.0364 * OAP A Configuration data checksum mismatch
```

The alarm is cleared when a maintenance poll returns a checksum that matches the EAGLE 5 ISS' checksum, indicating that the databases are back in sync. The EAGLE 5 ISS clears the alarm within five seconds. The following UAM clears the alarm:

```
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
```

```
nnnn.0365          OAP A      Configuration data checksum alarm cleared
```

If the **oap=a**, **oap=b**, or **oap=all** parameter is specified with the **act-oap-config** command, then the link from the EAGLE 5 ISS to the specified OAP must be in service.

If the **oap=a** or **oap=b** parameter is specified, the **force=yes** parameter must be specified.

Notes

To configure the OAP from the EAGLE 5 ISS, the procedure "Configuring the OAP from the EAGLE 5 ISS STP Terminal" in the *System Manual – EOAP* is recommended.

It is recommended that only one OAP be updated at a time. Although the **act-oap-config** command completes immediately on the EAGLE 5 ISS, processing on the OAP may take over 10 minutes depending on which parameters changed and which OAP hardware is installed. Also, whenever some parameters are changed, the OAP reboots to use the new data. The reboot interrupts the connection between that OAP and the SEAC or LSMS. By updating only one OAP at a time, the EAGLE 5 ISS and the SEAC or LSMS will not be isolated, as one OAP is always connected to the SEAC or LSMS.

Table 5-3 shows the fields of the **rtrv-oap-config** command output that must be configured depending on which feature is on. Table 5-3 also shows the parameters of the **chg-oap-config** command that are used to configure the OAP configuration data.

Table 5-3. Performance Impact of act-oap-config parameters

Configured Parameter Group	OAP Action					
	Restart Q3 Links	Restart Q3 and SEAS Links	Bring Down, Rebuild, Bring Up Q3 and SEAS Links:	Bring Down Q3 and SEAS Links; Reboot OAP	Bring Down and Rebuild Q3 and SEAS Links; Reboot OAP	Total Time Required (in seconds)
Group A mpsel/spsel mssel/sssel mnsap/snsap serv	X					≤ 65
Group B x25ps, x25mode		X				≤ 260
Group C clli, seaccli			X			≤ 320

Table 5-3. Performance Impact of **act-oap-config** parameters

Configured Parameter Group	OAP Action					
	Restart Q3 Links	Restart Q3 and SEAS Links	Bring Down, Rebuild, Bring Up Q3 and SEAS Links:	Bring Down Q3 and SEAS Links; Reboot OAP	Bring Down and Rebuild Q3 and SEAS Links; Reboot OAP	Total Time Required (in seconds)
Group D aname/bname aipaddr/bipaddr anmask, bnmask arouter/brouter				X		≤ 560
Group A and B		X				≤ 260
Group A and C			X			≤ 320
Group A and D				X		≤ 560
Group A, B, and C			X			≤ 320
Group A, B, and D				X		≤ 560
Group A, C, and D			X	X		≤ 620
Group B and C			X			≤ 320
Group B and D			X	X		≤ 620
Group B, C, and D			X	X		≤ 620
Group C and D					X	≤ 620

The OAP is named and addressed according to the terminal port number on the EAGLE 5 ISS control shelf backplane that the OAP is connected to. The terminal ports are numbered from MMI 0 to MMI 15. OAP A is connected to the lower numbered terminal port and OAP B is connected to the higher numbered terminal port. If the terminal port connections for the OAPs change, the names for OAPs A and B could be reversed. For example, OAP A is connected to MMI 3 and OAP B is connected to MMI 9. At some later time, OAP A is moved from MMI 3 to MMI 12. Because of this move, OAP A is now OAP B, and what was OAP B is now OAP A.

Output

```
act-oap-config:oap=a:force=yes
  rlgncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
  ACT-OAP-CONFIG: MASP A - COMPLTD
;
```

act-slk**Activate Signaling Link**

Use this command to change the link from OOS-MT-DSBLD (Out-of-Service-Maintenance-Disabled) to IS-NR (In-Service-Normal).

NOTE: The signaling link's activated status is preserved across a card reboot.

Keyword: act-slk

Related Commands: blk-slk, dact-slk, dlt-slk, ent-slk, inh-slk, rept-stat-slk, rtrv-slk, tst-slk, ublk-slk, unhb-slk

Command Class: Link Maintenance

Parameters

:link= (mandatory)

The signaling link on the card specified in the **loc** parameter. The links can be specified in any sequence or pattern.

Synonym: port

Range: a, b, a1-a31, b-b31

Not all card types support all **link** parameter values.

See Table A-1 for valid **link** parameter range values for each type of card that can have a location specified in the **loc** parameter.

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Example

act-slk:loc=1301:link=a

Dependencies

The card must be equipped and must be one of the following cards:

- A LIM card running the **ss7ansi**, **ss7gx25**, **atmsansi**, or **ccs7itu** application
- An E1 ATM card running the **atmitu** application
- A DCM or SSEDCCM or E5-ENET card running the **ss7ipgw**, **ipgwi**, **iplim**, or **iplimi** application
- An E1/T1 MIM card or an HC MIM card running the **ss7ansi** or **ccs7itu** application

This command cannot be entered while the **tst-slk** command is in progress.

A card location that is defined in the database must be specified.

The card must contain signaling links.

No other action command can be in progress when this command is entered.

The specified signaling link must be provisioned in the database.

The following **link** parameter values can be specified for the following cards that support more than 2 links per card:

- **a1-a3, b1-b3**—Multi-port LIM (MPL, MPL-T), SSEDCM card running the **iplim** or **iplimi** application with links having **ipliml2=m2pa** or **ipliml2=saaltali**, E1/T1 MIM card
- **a1-a31, b1-b31**—HC-MIM card
- **a1-a15, b1-b15**—E5-E1T1 card
- **a1-a7, b1-b7**—E5-ENET card running the **iplim** or **iplimi** application that supports 16 links

Notes

The *Installation Manual - EAGLE 5 ISS* provides an illustration of card locations.

Output

```
act-slk:loc=1301:link=a
tekelecstp 05-01-21 17:00:36 EST EAGLE5 33.0.0
Activate Link message sent to card
;
```

act-user

Activate User

This command is an alternate to the **login** command. Use this command to log into the system. After this command is entered, the system requests a password. For security reasons the password is not echoed to the terminal.

Keyword: act-user

Related Commands: chg-pid, chg-user, dact-user, dlt-user, ent-user, login, logout, rept-stat-user, rtrv-secu-user, rtrv-user

Command Class: Basic

Parameters

:uid= (mandatory)

User ID. The system prompts you for a valid password after this ID is entered.

Range: azzzzzzzzzzzzzzzzzzzz

1 alphabetic character followed by up to 15 alphanumeric characters; the first character must be a letter.

Example

```
act-user:uid=john
```

Dependencies

The first character of the user ID must be a letter.

Notes



CAUTION: If the OA&P IP Security Enhancements feature is not turned on, a serial terminal (terminals 1-16) must be used to log in with a new Userid and password for the first time or to change an expired password. The OA&M IP Security Enhancements feature must be turned on before you can change the password at the prompt from an IP User Interface telnet terminal (IDs 17-40) when:

- It is the first time the user is logging in with the assigned Userid and password.
- The password has expired because of aging out.

The **login** command can be used instead of **act-user**. The command **act-user** has been provided in accordance with OTGR standards.

When a new system is shipped, the user ID and password are set to the system. Change these immediately to ensure system security.

The OAP is named and addressed according to the terminal port number on the EAGLE 5 ISS control shelf backplane that the OAP is connected to. The terminal ports are numbered from MMI 0 to MMI 15. OAP A is connected to the lower numbered terminal port and OAP B is connected to the higher numbered terminal port. If the terminal port connections for the OAPs change, the names for OAPs A and B could be reversed. For example, OAP A is connected to MMI 3 and OAP B is connected to MMI 9. At some later time, OAP A is moved from MMI 3 to MMI 12. Because of this move, OAP A is now OAP B, and what was OAP B is now OAP A.

Output

Not applicable.

alloc-mem

Allocate Memory

Use this command to create up to five additional LNP 4DIGIT database objects, each capable of containing up to 2 million ported telephone numbers. (The standard EAGLE 5 ISS contains a single LNP 4DIGIT database object.) If all five additional LNP 4DIGIT database objects are configured in the database, the database can contain 12 million ported numbers.

NOTE: This command is obsolete.

NOTE: The alloc-mem:num command cannot be entered to create an LNP 4DIGIT database object that, when added to the number of previously created LNP 4DIGIT database objects, would exceed the maximum number allowed.

Keyword: alloc-mem

Related Commands: rtrv-mem

Command Class: LNP Database

Parameters

:obj= (mandatory)

The type of database object to create.

Range: lnp4digit

:num= (optional)

The number of database objects to create.

Range: 1-5

Default: 1

Example

```
alloc-mem:obj=lnp4digit:num=1
```

Dependencies

An LNP ported TNs feature key of sufficient quantity must be on before the **alloc-mem** command can be executed (see the **enable-ctrl-feat** command and Table 5-4).

LNP 4DIGIT objects can be created with the **alloc-mem** command only if the capacity of the fixed disk drives on the TDMs (Terminal Disk Modules) and the amount of memory on the TSM (Translation Services Modules) memory is sufficient to support the number of ported telephone numbers allowed by the number of LNP 4DIGIT objects configured in the database (one plus the value of the **num** parameter). Table 5-4 shows the TSM and TDM requirements.

Table 5-4. TSM and TDM Memory Requirements

Number of LNP 4DIGIT Objects	Number of Ported Numbers Supported	TSM Memory Requirements	Fixed Disk Drive Capacity Requirements
1	2 Million	256 Mbytes	4 Gigabytes
2	4 Million	512 Mbytes	4 Gigabytes
3	6 Million	768 Mbytes	4 Gigabytes
4	8 Million	1024 Mbytes	4 Gigabytes
5	10 Million	1024 Mbytes	4 Gigabytes
6	12 Million	1024 Mbytes	4 Gigabytes

Notes

If an in-service TSM does not have sufficient memory to support the number of ported telephone numbers allowed by the number of LNP 4DIGIT objects configured in the database, the EAGLE 5 ISS is considered to be in degraded mode and the **alloc-mem** command is rejected. The **rept-stat-card:loc=<SCCP card location>;mode=full** command can be used to display the status and the amount of memory for the TSMs equipped in the database.

Output

```
alloc-mem:obj=lnp4digit:num=1
rlghncxa03w 04-01-07 11:11:28 EST  EAGLE 31.3.0
Memory allocation complete.
;
```

alw-card**Allow Card**

Use this command to change the card from OOS-MT-DSBLD (Out-of-Service-Maintenance-Disabled) to IS-NR (In-Service-Normal) if the loading is successful.

Keyword: alw-card

Related Commands: dlt-card, ent-card, inh-card, init-card, rept-stat-card, rmv-card, rst-card, rtrv-card

Command Class: System Maintenance

Parameters

:loc= (mandatory)

Location. This parameter specifies the card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1113, 1115, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

:code= (optional)

This parameter specifies the GPL type to be loaded.

Range: appr, trial, utility
appr—Approved GPL

trial—Trial GPL

utility—Utility GPL that downloads the CDU or VCDU GPL based on hardware type. This GPL is used primarily by the factory for loading special GPLs for testing purposes.

Default: **appr**

:data= (optional)

High memory refresh. This parameter causes data to be reloaded to the specified card. This parameter is used to reload data if the LNP (see the **enable-ctrl-feat** command), G-Flex, G-Port, or INP feature is on. This parameter is applicable only to network cards containing the LNP database (SCCP, EBDABLM) or the MPS database (VSCCP).

NOTE: Various conditions in the system may prevent the persistence of the data on the cards.

Range: **refresh, persist**

refresh— Causes data to be reloaded to the specified card.

persist— Indicates that the database is not to be reloaded to the card. This parameter is used to request that the EAGLE 5 ISS perform a warm restart of the requested cards. The EAGLE 5 ISS performs various checks to ensure that all conditions necessary to initiate the warm restart are in place (for example, that the TSM/BLM card is present and ready and that the downloaded LNP database is coherent. The LNP database audit cannot be performed prior to the card reset.) During the card initialization and loading sequence, a warm restart is performed if the card meets the warm restart conditions, as described in the Notes section of this command.

Default: **refresh**

Example

alw-card:loc=2301:code=trial

alw-card:loc=1101:data=persist

Dependencies

The following card locations are not valid for this command: **1117**, **1118**, and all **xy 09** and **xy 10** locations (where *x* is the frame and *y* is the shelf).

The active and standby TDM card locations and the card location that is running the active OAM cannot be specified in the **loc** parameter.

The shelf and card must be equipped.

If the card is a LIM, a signaling link must be assigned to the card before the card can be allowed.

No other action command can be in progress when this command is entered.

An SCCP card cannot be reset when the system is in LNP degraded mode.

The LNP (see the **enable-ctrl-feat** command), G-Flex, G-Port, or INP feature must be turned on before the **data** parameter can be specified.

The **data** parameter is valid only for SCCP and EBDABLM card locations or GPLs, or MPS database (VSCCP) card locations or GPLs.

Notes

The function of this command is the same as the **rst-card** command.

The *Installation Manual - EAGLE 5 ISS* provides an illustration of card locations.

The system previously supported the **data** parameter for reloading GTT data. The system does not support persistent GTT data loading, and the **data** parameter is now used in support of the warm restart feature.

A number of reasons exist for not being able to warm restart. If none of these conditions exists, a warm restart is possible and will be attempted following a SCCP/EBDABLM or VSCCP card reset.

- The following conditions require a full data reload:
 - **AUDIT FAILED**—The checksum comparisons of the LNP database failed during card initialization. Data on the card is determined to be corrupted after the reset (was not yet detected by normal auditing).
 - **AUDIT TIMEOUT**—The LNP initialization audit timed out (software failure).
 - **DB LEVEL**—The database level is not supported, or the difference exceeds incremental loading capability. This condition is caused by the reset of OAMs or if the number of updates exceeds the incremental loading capability.
 - **DB STATUS**—The database status of the card is incoherent at the time of a reset. This condition can be caused by a failed network card update or a reset during a database update to the card.
 - **DB VERSION**—The LNP Database version has changed from the previous version. An online memory allocation (**alloc-mem**), import or bulk downloads (**chg-db**), or changes from release to release may alter the database version.
 - **HW ERROR**—The hardware error bit checks on the card failed during card initialization.
 - **NO AUDIT**—Unable to perform an LNP audit. The LNP audit is not on (for example, LNP options has **audit=off**). This condition can occur if the rate of LNP updates exceeds the ability of the LNP audit to compute checksums (excessive unknown checksums). This condition is more likely on a small database where there are fewer checksums. The percentage of known checksums must be 99% or more. The percentage is based on the number of checksums in use, which is smaller for small databases (such as two million TNs or fewer).
 - **POWER ON**—A power on reset (the card is pulled and reinserted).
 - **UNKNOWN/OTHER**—An unknown or other type of software failure.
 - **USER REQUEST**—A user-initiated **init-card** or **init-sys** command **reload type=cold**. The default restart type for these commands is a cold or full LNP data reload. The user must specify **data=persist** for a warm restart on command.
 - **XILINX VERSION**—The M256 Xilinx program version has changed from the previous version.
- The following conditions require an MCPM card cold restart:
 - **DB STATUS**—The database status of the card is incoherent at the time of a reset. This condition can be caused by a failed network card update or a reset during a database update to the card.
 - **MEAS DB**—A measurements database Init failure or corruption.
 - **POWER ON**—A power on reset (card is pulled and reinserted).
 - **UNKNOWN/OTHER**—An unknown or other type of software failure.
 - **XILINX VERSION**—The D1G Xilinx program version has changed from previous version.



CAUTION **CAUTION: This command can be used to enable Measurements Platform measurements collection after the collection function has been disabled with the inh-card command for ALL MPCM cards in the system. To enable collection, at least 1 MPCM card must be allowed in the system. Disabling collection by inhibiting all MPCM cards CAN RESULT IN LOSING ALL PAST MEASUREMENT DATA ON THE CARDS.**

When the OA&M IP Security feature is turned on, and an IPSM card is inserted and initialized for the first time or is removed, inserted, and initialized again, the "SSH Host Keys Regenerated" UIM is displayed. The UIM shows the generated SSH Host Key fingerprint that must be provided at the secure client in order for secure information transfer to occur. The SSH Host Key fingerprint is changed whenever power is lost and restored to an IPSM card.

```
rlghncxa03 03-07-11 07:05:00 EST EAGLE 30.2.0
```

```
0021.1493 CARD 1111 INFO SSH Host Keys Regenerated
```

```
84 7c 92 8b c 7c ds 19 1c 6 4b de 5c 8f c5 4d
```

```
Report Date:03-07-11 Time:22:27:36
```

When the OA&M IP Security feature is turned on, and an IPSM card is restarted with this command, the "SSH Host Keys Loaded" UIM is displayed. The UIM shows the current SSH Host Key fingerprint. The SSH Host Key fingerprint is not changed if the IPSM card does not lose power.

```
rlghncxa03 03-07-11 07:05:00 EST EAGLE 30.2.0
```

```
0021.1493 CARD 1111 INFO SSH Host Keys Regenerated
```

```
DSA Server Host Key FTRA-formatted Fingerprint=
```

```
84 7c 92 8b c 7c ds 19 1c 6 4b de 5c 8f c5 4d
```

```
Report Date:03-07-11 Time:22:27:36
```

If a location for an E1/T1 MIM card (type **lime1**, **limt1**, or **limch**), HC-MIM card (type **lime1** or **limt1**), or E5-E1T1 card (type **lime1** or **limt1**) is specified, at least one signaling link must be provisioned for that card before it can be allowed.

Output

```
alw-card:loc=2301:code=trial
```

```
rlghncxa03w 06-06-01 11:11:28 EST EAGLE 35.0.0
```

```
Card has been allowed.
```

```
;
```

alw-imt

Allow IMT

Use this command to change the state of the specified Interprocessor Message Transport (IMT) bus from OOS-MT-DSBLD (Out-of-Service-Maintenance-Disabled) to IS-NR (In-Service-Normal), if the command is successful. If the command fails, the status is IS-ANR (In-Service-Abnormal). The IMT bus is comprised of two 125 Mbps counter-rotating serial busses. If one bus fails, the other immediately assumes control of all messages.

Keyword: alw-imt

Related Commands: clr-imt-stats, conn-imt, disc-imt, inh-imt, rept-imt-lvl1, rept-imt-lvl2, rept-stat-imt, rmv-imt, rst-imt, tst-imt

Command Class: System Maintenance

Parameters

:bus= (mandatory)

This parameter specifies the IMT bus whose status you want to change.

Range: **a, b**

Example

alw-imt:bus=a

Dependencies

This command cannot be entered during an IMT Fault Isolation Test.

Notes

This command returns an inhibited IMT bus to service.

The function of this command is the same as the **rst-imt** command.

See the **tst-imt** command to determine the location of faults on a failed or abnormal IMT bus.

Output

alw-imt:bus=a

```
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
Allow IMT Bus A command issued.
```

```
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
0100.0097 IMT BUS A Imt allowed
```

```
;
```

alw-map-ss**Allow Mated Application Subsystem**

Use this command to activate a subsystem and bring it online. Currently, the LNPQS, INPQS, and Equipment Identity Register (EIR) subsystems can be allowed and inhibited.

Keyword: **alw-map-ss**

Related Commands: **inh-map-ss**, **rept-stat-lnp**, **rept-stat-sccp**

Command Class: System Maintenance

Parameters

:ssn= (mandatory)

Subsystem number. This parameter specifies the LNP, INP, or EIR subsystem number.

Range: **2-255**

Example

alw-map-ss:ssn=10

Dependencies

No other action command can be in progress when this command is entered.

The EAGLE 5 ISS must be configured with at least one TSM card running the **sccp** application or one DSM card running the **vsccp** application.

The LNP feature (see the **enable-ctrl-feat** command) or the INP feature must be turned on, or the EIR feature must be enabled and turned on before this command can be entered.

The specified **ssn** parameter value must represent the LNPQS, INPQS, or EIR subsystem.

The LNPQS, INPQS, or EIR subsystem must be online in the database before this command can be entered.

The LNPQS, INPQS, or EIR subsystem must be out-of-service maintenance disabled (OOS-MT-DSBLD) for command action to occur. Otherwise, the command is accepted and no action occurs.

Notes

None

Output

```
a lw-map-ss:ssn=11
  integrat40 00-05-24 10:37:22 EST EAGLE5 31.0.0
  Allow map subsystem command sent to all SCCP cards.
  Command Completed.
;
```

alw-slk

Allow Signaling Link

Use this command to return an inhibited signaling link to service. If the link was aligned when it was inhibited, a changeover occurred. This command causes a changeback on the specified link. MSUs are transmitted on the link after the changeback is issued.

NOTE: The signaling link's inhibited status is not preserved across a card reboot.

Keyword: alw-slk

Related Commands: act-slk, blk-slk, canc-slk, dact-slk, dlt-slk, ent-slk, inh-slk, rept-stat-slk, rtrv-slk, tst-slk, ublk-slk, unhb-slk

Command Class: Link Maintenance

Parameters

:link= (mandatory)

This parameter specifies the signaling link defined on the card specified in the **loc** parameter. The links can be specified in any sequence or pattern.

Synonym: port

Range: a, b, a1-a31, b1-b31

Not all card types support all **link** parameter values.

See Table A-1 for valid **link** parameter range values for each type of card that can have a location specified in the **loc** parameter.

:loc= (mandatory)

Location. This parameter specifies the card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Example

```
a lw-slk:loc=1301:link=b
```

Dependencies

A card location that is valid and defined in the database must be specified.

No other action command can be in progress when this command is entered.

This command is not valid on TCP/IP point to multipoint links (DCM cards equipped with SS7IPGW links).

The card must contain signaling links.

The signaling link must be equipped in the database.

The **link** parameter values **a1**, **b1**, **a2**, **b2**, **a3**, and **b3** can be specified only for the following cards:

- A multi-port LIM card
- An SSEDCM card running the **iplim** or **iplimi** application that supports 8 points
- An E1/T1 MIM card, an HC-MIM card, or an E5-E1T1 card

The card that contains the specified signaling link must be equipped in the specified card location.

The card in the specified card location cannot be a TDM card, an MDAL card, an HMUX or HIPR card, or the cards running the OAM application.

If the card in the specified card location is an SSEDCM card running the **iplim** or **iplimi** application, the specified link must have an **ipliml2** parameter value of **m2pa** or **saaltali** (see the **ent-slk** command).

Notes

The function of this command is the same as the **unhb-slk** command.

Not every card location represents a signaling link. Be sure to address a signaling link in this command.

The *Installation Manual - EAGLE 5 ISS* provides an illustration of card locations.

Output

```
alw-slk:loc=1301:link=b
tekelecstp 05-01-21 17:00:36 EST EAGLE5 33.0.0
Allow Link message sent to card
;
```

alw-trm

Allow Terminal

Use this command to return the specified serial port to the state IS-NR (in-service normal) from the state OOS-MT-DSBLD (out-of-service maintenance-disabled) if the command is successful. If the command is not successful, the terminal's state is OOS-MT (out-of-service maintenance).

Keyword: **alw-trm**

Related Commands: **act-echo**, **canc-echo**, **chg-trm**, **dact-echo**, **inh-trm**, **rept-stat-trm**, **rmv-trm**, **rst-trm**, **rtrv-trm**

Command Class: System Maintenance

Parameters

:trm= (mandatory)
The ID of the serial port to be put into service.
Range: **1-40**

Example

```
alw-trm:trm=5
alw-trm:trm=23
```

Dependencies

No other action command can be in progress when this command is entered.

The IP User Interface feature must be enabled before terminal ports 17 through 40 can be specified in the **trm** parameter.

The terminal specified by the **trm** parameter must be equipped.

Anyone logged in to the terminal specified by this command is logged off when this command is executed. For the user to continue working on the specified terminal, the user must log on to that terminal again.

Notes

The function of this command is the same as the **rst-trm** command.

When you attempt to return to service a terminal that is already in service, a warning message is echoed to the scroll area but no action is taken.

Output

```
alw-trm:trm=12
rlghncxa03w 04-01-07 11:11:28 EST  EAGLE 31.3.0
Allow message sent to terminal

rlghncxa03w 04-01-07 11:11:28 EST  EAGLE 31.3.0
1062.0046      TERMINAL      12      Terminal Enabled
;
```

aud-data

Audit Data

Use this command to perform a data audit, which is used to determine the integrity of the database. The data audit is separate from the GPL audit, which determines if a specified GPL is at the correct version level.

Keyword: **aud-data**

Related Commands: **rept-stat-db**, **rtrv-gpl**

Command Class: System Maintenance

Parameters

:display= (optional)

Indicates the scope of the display, whether it is a brief display or full display. The output includes the type and location of the card, the data collection being audited, and a message indicating the overall status. This parameter applies only to STP databases.

Range: **all**, **brief**, **except**

all—Contains the actual checksum values (in hexadecimal) and details for each individual GPL and each subset of the current and backup database

brief—Contains data collections for the current database, the backup database on the fixed disk and the approved and trial GPLs

except—Contains the same as **display=all**, except that only the GPLs or database subsets with problems are displayed

Default: **brief**

Example

```
aud-data:display=all
```

Dependencies

Only one **aud-data** command can be in progress at a time.

Notes

The standby OAM must be available when the **aud-data** command commences so that the standby OAM can receive the signal to begin auditing. If the standby OAM is not available when **aud-data** is issued, then the following messages are issued:

Extended Processing Time Required

Standby MASP is (or was) not available at audit start.

The above messages may also appear if the standby OAM is not available when the hourly periodic audit, which uses the **aud-data** command, automatically starts. Because the standby OAM is not performing any auditing, no audit results for the standby OAM are displayed in the audit report. Instead, the standby's audit results are as follows:

No information currently available

If an auditing cycle completes on either the active or standby OAM and does not produce the full set of expected results (i.e., checksums), the following message appears:

Audit results may be incomplete

The audit results may be missing some of the checksums that would normally be displayed (**:display=all** or **:display=except**). The results may also contain summary status information (**:display=brief**) that might have been calculated differently had some of the missing checksums been available. This condition can be caused if the audit results for the backup database are missing, probably because a backup database has not been created.

If the "Audit results may be incomplete" message appears in the audit report, perform the following procedure:

Procedure - Audit Data

- 1 Ensure that the standby OAM is online and ready.
 - 2 Enter the following command to ensure that a backup database has been created:
rept-stat-db
If no backup has ever been created, the output shows the fixed disk backup (FD BKUP) database at level 1. There will be no information under the heading " Time Last Backup."
 - 3 If necessary, create a backup on the fixed disk by entering the following command:
chg-db:action=backup:dest=fixed
 - 4 Re-enter the **aud-data** command.
-

If the standby OAM does not run an audit cycle and no audit information is available, the following message appears:

Audit results are not available

This condition is probably caused by the standby OAM rebooting while an audit cycle is underway. If this message appears, ensure that the standby OAM is available and re-enter the **aud-data** command. Ensure that the standby OAM remains up (is not rebooted) for the duration of the audit cycle.

Output

The following example shows a full display. This example applies only to STP databases.

aud-data:display=all

```
rlghncxa03w 04-01-07 10:39:04 EST EAGLE 31.3.0
```

```
DATA AUDIT COMPLETE
```

CARD	LOC	DATA		STATUS	NEW CS	OLD CS	REF CS
TDM-ACTV	1114	CRNT MTP	SUBSET	OK	H'ffaf	H'ffaf	H'ffaf
		CRNT GTT	SUBSET	OK	H'5864	H'5864	H'5864
		CRNT GWS	SUBSET	OK	H'd089	H'd089	H'd089
		CRNT MISC	SUBSET	OK	H'2735	H'2735	H'2735
		CRNT DBMM	SUBSET	OK	H'1001	H'1001	H'1001
		BKUP MTP	SUBSET	OK	H'2b85	H'2b85	H'2b85
		BKUP GTT	SUBSET	OK	H'5864	H'5864	H'5864
		BKUP GWS	SUBSET	OK	H'd089	H'd089	H'd089
		BKUP MISC	SUBSET	OK	H'5af1	H'5af1	H'5af1
		BKUP DBMM	SUBSET	OK	H'1001	H'1001	H'1001
		APPR SS7ANSI	GPL	OK	H'1372	H'1372	H'1372
		APPR SCCP	GPL	OK	H'9251	H'9251	H'9251
		TRI SCCP	GPL	OK	H'9251	H'9251	H'9251
		APPR GLS	GPL	OK	H'8887	H'8887	H'8887
		TRI GLS	GPL	OK	H'8887	H'8887	H'8887
		APPR UTILITY	GPL	OK	H'18de	H'18de	H'18de
		TRI UTILITY	GPL	OK	H'18de	H'18de	H'18de
		APPR SS7GX25	GPL	OK	H'9251	H'9251	H'9251
		TRI SS7GX25	GPL	OK	H'610c	H'610c	H'610c
		APPR STPLAN	GPL	OK	H'93bf	H'93bf	H'93bf
		TRI STPLAN	GPL	OK	H'93bf	H'93bf	H'93bf
		APPR		OK	H'b6c6	H'b6c6	H'b6c6
		TRI		OK	H'b6c6	H'b6c6	H'b6c6

```
rlghncxa03w 04-01-07 10:39:04 EST EAGLE 31.3.0
```

```
DATA AUDIT COMPLETE
```

CARD	LOC	DATA		STATUS	NEW CS	OLD CS	REF CS
TDM-STDBY	1116	CRNT MTP	SUBSET	OK	H'ffaf	H'ffaf	H'ffaf
		CRNT GTT	SUBSET	OK	H'5864	H'5864	H'5864
		CRNT GWS	SUBSET	OK	H'd089	H'd089	H'd089
		CRNT MISC	SUBSET	OK	H'2735	H'2735	H'2735
		CRNT DBMM	SUBSET	OK	H'1001	H'1001	H'1001
		BKUP MTP	SUBSET	OK	H'2b85	H'2b85	H'2b85
		BKUP GTT	SUBSET	OK	H'5864	H'5864	H'5864
		BKUP GWS	SUBSET	OK	H'd089	H'd089	H'd089
		BKUP MISC	SUBSET	OK	H'5af1	H'5af1	H'5af1
		BKUP DBMM	SUBSET	OK	H'1001	H'1001	H'1001
		APPR SS7ANSI	GPL	OK	H'1372	H'1372	H'1372
		APPR SCCP	GPL	OK	H'9251	H'9251	H'9251
		TRI SCCP	GPL	OK	H'9251	H'9251	H'9251
		APPR GLS	GPL	OK	H'8887	H'8887	H'8887
		TRI GLS	GPL	OK	H'8887	H'8887	H'8887
		APPR UTILITY	GPL	OK	H'18de	H'18de	H'18de
		TRI UTILITY	GPL	OK	H'18de	H'18de	H'18de
		APPR SS7GX25	GPL	OK	H'9251	H'9251	H'9251
		TRI SS7GX25	GPL	OK	H'610c	H'610c	H'610c
		APPR STPLAN	GPL	OK	H'93bf	H'93bf	H'93bf
		TRI STPLAN	GPL	OK	H'93bf	H'93bf	H'93bf
		APPR		OK	H'b6c6	H'b6c6	H'b6c6
		TRI		OK	H'b6c6	H'b6c6	H'b6c6

```
;
```

The following example applies only to STP databases.

aud-data:display=except

```
rlghncxa03w 04-01-07 10:39:01 EST EAGLE 31.3.0
Extended Processing Time Required
Results will be displayed on completion
```

```
rlghncxa03w 04-01-07 10:39:04 EST EAGLE 31.3.0
DATA AUDIT COMPLETE
CARD      LOC      DATA      STATUS      NEW CS OLD CS REF CS
TDM-ACTV  1116  CRNT MTP      SUBSET  DIFFERENT  H'aaaa H'aaaa H'cccc
          CRNT GTT      SUBSET  CORRUPTED  H'aaaa H'bbbb H'aaaa
          APPR MCM      GPL      CORRUPTED  H'4321 H'3456 H'4321
          APPR GLS      GPL      CORRUPTED  H'4321 H'3456 H'4321
          APPR SCCP     GPL      CORRUPTED  H'4321 H'3456 H'4321
```

```
rlghncxa03w 04-01-07 10:39:01 EST EAGLE 31.3.0
Extended Processing Time Required
Results will be displayed on completion
```

```
rlghncxa03w 04-01-07 10:39:04 EST EAGLE 31.3.0
DATA AUDIT COMPLETE
CARD      LOC      DATA      STATUS      NEW CS OLD CS REF CS
TDM-STDBY 1114  CRNT MTP      SUBSET  DIFFERENT  H'aaaa H'aaaa H'cccc
          CRNT GTT      SUBSET  CORRUPTED  H'aaaa H'bbbb H'aaaa
          APPR MCM      GPL      CORRUPTED  H'4321 H'3456 H'4321
          APPR GLS      GPL      CORRUPTED  H'4321 H'3456 H'4321
          APPR SCCP     GPL      CORRUPTED  H'4321 H'3456 H'4321
```

;

The following example shows a brief display. This example applies only to STP databases.

aud-data or aud-data:display=brief

```
rlghncxa03w 04-01-07 10:39:01 EST EAGLE 31.3.0
CARD      LOC      DATA      STATUS
TDM-ACTV  1114  CRNT DB      OK
          BKUP DB      OK
          GPLS         OK
```

```
rlghncxa03w 04-01-07 10:39:01 EST EAGLE 31.3.0
DATA AUDIT COMPLETE:
```

```
CARD      LOC      DATA      STATUS
TDM-STDBY 1116  CRNT DB      OK
          BKUP DB      OK
          GPLS         OK
```

;

Legend

CARD—The card type

DATA—The type of data being audited:

APPR—The approved GPL

BKUP—The database in the backup partition

CCS7ITU—The CCS7ITU GPL

CRNT—The database in the current partition

DBMM—The database management mechanism database

GLS—The GLS GPL

GTT—The global title translation database

GWS—The gateway screening database

- MISC**—The miscellaneous system configuration database
- MTP**—The message transfer part database (links, linksets, routing tables)
- OAM**—The OAM GPL
- SCCP**—The SCCP GPL
- SS7ANSI**—The SS7ANSI GPL
- SS7GX25**—The SS7GX25 GPL
- SUBSET** or **GPL**—Indicates whether the data is a part of the database or a generic program load.
- TRI**—The trial GPL
- LOC**—The location of the card
- NEW CS**—The new checksum value calculated by this command
- OLD CS**—The checksum value stored in the database or GPL
- REF CS**—The reference checksum value stored on the active MASP
- STATUS**—The status of the database or GPL, as one of the following conditions:
- **CORRUPTED**—The database or GPL has been changed by some abnormal process. The GPL cannot be used
 - **DIFFERENT**—The database or GPL contains information that is not consistent with the reference database or GPL
 - **OK**—The database or GPL is not corrupted and contains the same information as the reference database or GPL

blk-slk

Block Signaling Link

Use this command to force a local processor outage (LPO) on the specified link. The system begins sending link status signal units (LSSU) with status of processor outage (SIPO) to the adjacent signaling point.



CAUTION: Maintenance personnel should use this command only to block MSUs from being sent to the system. Level 2 status remains in service, except when the link is an ATM high-speed signaling link.

NOTE: The signaling link's blocked status is not preserved across a card reboot.

Keyword: blk-slk

Related Commands: blk-slk, canc-lpo, rept-stat-slk, ublk-slk

Command Class: Link Maintenance

Parameters

:link= (mandatory)

This parameter specifies the signaling link defined on the card specified in the **loc** parameter. The links can be specified in any sequence or pattern.

Synonym: port

Range: a, b, a1-a31, b1-b31

Not all card types support all **link** parameter values.

See Table A-1 for valid **link** parameter range values for each type of card that can have a location specified in the **loc** parameter.

:loc= (mandatory)

Location. This parameter specifies the card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Example

blk-slk:loc=2311:link=a

blk-slk:loc=2312:link=a

Dependencies

A card location that is valid and defined in the database must be specified.

No other action command can be in progress when this command is entered.

This command is not valid for DCM cards with **ss7ipgw** or **ipgwi** TCP/IP links.

The card must contain signaling links.

The signaling link must be equipped in the database.

The following **link** parameter values can be specified for the following cards that support more than 2 links per card:

- **a1-a3, b1-b3**—Multi-port LIM (MPL, MPL-T), SSED CM card running the **iplim** or **iplimi** application with links having **ipliml2=m2pa** or **ipliml2=saaltali**, E1/T1 MIM card
- **a1-a31, b1-b31**—HC-MIM card
- **a1-a15, b1-b15**—E5-E1T1 card
- **a1-a7, b1-b7**—E5-ENET card running the **iplim** or **iplimi** application that supports 16 links

The card that contains the specified signaling link must be equipped in the specified card location.

The card in the specified card location cannot be a TDM card, an MDAL card, an HMUX or HIPR card, or the cards running the OAM application.

If the card in the specified card location is an SSED CM card running the **iplim** application, the specified link must have an **ipliml2** parameter value of **m2pa** (see the **ent-slk** command).

If the card in the specified card location is an SSED CM card running the **iplimi** application, the specified link must have an **ipliml2** parameter value of **saaltali** (see the **ent-slk** command).

Notes

The function of this command is the same as the **act-lpo** command.

This command generates a minor alarm. Refer to the *Maintenance Manual* for information on MRNs 0201 and 0208.

If the **blk-slk** command is followed by the **init-card** command, the signaling link blockage is not preserved after the **init-card** command completes.

The *Installation Manual - EAGLE 5 ISS* provides an illustration of card locations.

Output

```
blk-slkl:loc=2311:link=a
tekelecstp 05-01-21 17:00:36 EST EAGLE5 33.0.0
Local processor outage being set.
```

```
;
```

In the following example, no signaling link has been defined for link a.

```
blk-slkl:loc=2312:link=a
tekelecstp 05-01-21 17:00:36 EST EAGLE5 33.0.0
Link is UNEQUIPPED in the database.
Local processor outage being set.
```

```
;
```

In the following example, slot 55 in the card location is not valid.

```
blk-slkl:loc=2355:link=a
tekelecstp 05-01-21 17:00:36 EST EAGLE5 33.0.0
Command Rejected: Slot ID out of range
```

```
;
```

canc-alm-trns**Cancel Alarm Transfer**

Use this command to return all audible alarm indications to the local office.

Keyword: **canc-alm-trns**

Related Commands: **act-alm-trns**, **dact-alm-trns**, **rept-stat-cdt**, **rept-stat-clk**, **rept-stat-trbl**, **rls-alm**, **rtrv-obit**, **rtrv-trbl**

Command Class: System Maintenance

Parameters

This command has no parameters.

Example

```
canc-alm-trns
```

Dependencies

None

Notes

No other action command can be in progress when this command is entered.

The function of this command is the same as the **dact-alm-trns** command.

After the **canc-alm-trns** command is entered, the **rept-stat-alm** command can be entered to verify the status of the alarms.

Output

```
canc-alm-trns
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
Alarms returned to Local Maintenance Center
Command Completed.
```

```
;
```

canc-cmd**Cancel Command**

This command halts processing and output of the commands listed in Table 5-5.

Table 5-5. Commands for which **canc-cmd** Halts Processing and Output

Commands		
rept-imt-info	rtrv-as	rtrv-map
rept-stat-applsock	rtrv-assoc	rtrv-mrn
rept-stat-as	rtrv-asp	rtrv-obit (active OAM)
rept-stat-asp	rtrv-cmd	rtrv-rte
rept-stat-assoc	rtrv-dcmps	rtrv-seculog
rept-stat-card	rtrv-dstn	rtrv-secu-user
rept-stat-clk	rtrv-gta	rtrv-slk
rept-stat-dstn	rtrv-gtt	rtrv-tbl-capacity
rept-stat-ls	rtrv-lbp	rtrv-trbltx
rept-stat-rte	rtrv-log	rtrv-uaps
rept-stat-slk	rtrv-ls	
rtrv-appl-rtkey		
rtrv-appl-sock		

When using the **canc-cmd** command without the **trm** parameter, enter the command on the same terminal that is currently running the command you want to cancel.

When using the **canc-cmd** command with the **trm** parameter, enter the command on a terminal other than the one that is currently running the command you want to cancel.

NOTE: The Basic command class allows use of this command without the **trm** parameter (**dact-cmd**); the Security Administration command class is required for use of this command when the **trm** parameter is specified (**dact-cmd:trm=x**).

Keyword: **canc-cmd**

Related Commands: **rept-imt-info**, **rept-stat-asp**, **rept-stat-assoc**, **rept-stat-card**, **rept-stat-dstn**, **rept-stat-ls**, **rept-stat-rte**, **rept-stat-slk**, **rtrv-appl-rtkey**, **rtrv-appl-sock**, **rtrv-asp**, **rtrv-assoc**, **rtrv-dcmps**, **rtrv-dstn**, **rtrv-gta**, **rtrv-gtt**, **rtrv-log**, **rtrv-ls**, **rtrv-map**, **rtrv-rte**, **rtrv-seculog**, **rtrv-slk**, **rtrv-trbltx**, **rtrv-uaps**

Command Class: Security Administration

Parameters

:trm= (optional)

The terminal on which the command is to be canceled.

Range: 1-40

Example

canc -cmd

canc -cmd :trm=3

Dependencies

The **trm** parameter cannot be specified in a **canc-cmd** command that is entered on the same terminal that is running the command that is to be cancelled. The terminal will return an error: system is busy.

The **canc-cmd:trm=** command requires the Security Administration command class for the terminal and for the user.

The **canc-cmd:trm** command requires a Security Administration command class for the terminal.

Notes

The **canc-cmd** command (without the **trm** parameter) must be entered on the same terminal that is running the command to be cancelled.

If the **canc-cmd** command is entered on a terminal that is not running a command, the **canc-cmd** command completes successfully without returning an error. Likewise, if the **canc-cmd:trm=** command is entered and there is no command running on the specified terminal, the **canc-cmd:trm=** command completes successfully without returning an error.

When the **canc-cmd** with no parameter is entered, a scroll area message appears to indicate that the command has been cancelled. For example:

```
Command aborted on terminal 2.
```

Some output can still appear after the above abort message if output accumulated in the output queue before the **canc-cmd** command was entered. When a command is cancelled, the cancellation should take no longer than 25 seconds to take effect.

The **F9** function key provides the same function as the **canc-cmd** command (without the **trm** parameter). On a terminal in KSR mode, pressing **<CTRL>I** also provides the same function.

The **canc-cmd** and the **F9** function key cannot be used for pure SEAS commands.

If **canc-cmd** is entered to cancel a command other than ones listed in Table 5-5, the terminal will accept another command, but output and processing of the current command continue.

When **canc-cmd** is entered, a command status code of **AB** (command aborted) is logged in the security log as follows:

- When the **canc-cmd** (without the **trm** parameter) is entered, no entry is logged.
- When the **canc-cmd:trm=** command is entered, an entry is logged.
- When the **canc-cmd** command (without the **trm** parameter) is entered as a SEAS flow-thru command, an entry is logged. The **canc-cmd:trm=** command is not allowed as a SEAS flow-thru command because the **canc-cmd:trm=** command belongs to the Security Administration Command Class.

For examples of the security log entries, see the **rtrv-seculog** command.

Output

canc-cmd

```
rlghncxa03w 04-07-27 17:00:36 EST  EAGLE 31.6.0
canc-cmd
Command entered at terminal #2.
```

```
rlghncxa03w 04-07-27 17:00:36 EST  EAGLE 31.6.0
Command aborted on terminal 2.
```

```
;
```

canc-cmd:trm=2

```
rlghncxa03w 04-07-27 17:00:36 EST  EAGLE 31.6.0
canc-cmd:trm=2
Command entered at terminal #3.
```

```
rlghncxa03w 04-07-27 17:00:36 EST  EAGLE 31.6.0
Command aborted on terminal 2.
```

```
;
```

canc-dlk**Cancel Data Link**

Use this command to remove a TCP/IP data link from service. The state of the TCP/IP data link is changed from in service normal (IS-NR) to out of service maintenance disabled (OOS-MT-DSBLD).

Keyword: **canc-dlk**

Related Commands: **act-dlk, dlt-dlk, ent-dlk, rept-stat-dlk, rtrv-dlk, tst-dlk**

Command Class: Link Maintenance

Parameters

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Example

canc-dlk: loc=1308

Dependencies

No other action command can be in progress when this command is entered.

The shelf and card must be equipped.

The card location must contain an ACM card.

Notes

None

Output

canc-dlk: loc=1308

rlghncxa03w 04-01-27 17:00:36 EST EAGLE 31.3.0

Deactivate Link message sent to card.

Command Completed.

;

canc-echo**Cancel Echo**

Use this command to halt the echoing of command responses from the user's terminal to other terminals or printers.

Keyword: **canc-echo**

Related Commands: **act-echo, alw-trm, chg-trm, dact-echo, inh-trm, rept-stat-trm, rmv-trm, rst-trm, rtrv-trm**

Command Class: Basic

Parameters

:trm= (optional)

The ID number of the terminal for which the echo is being canceled.

Range: 1-16

Default: Cancels all active echoes

Example

```
canc -echo
canc -echo :trm=7
```

Dependencies

The echo cannot be cancelled to the same terminal from which the **canc-echo** command is entered. An **act-echo** command must be active at the specified terminal before this command can be entered to cancel the echo.

Notes

Only the echoing of command output responses can be halted by this command. To halt the printing of alarm and network messages, the **chg-trm** command must be used.

Output

```
canc -echo
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
canc-echo
Command entered at terminal #6.
Scroll Area Output echo disabled to all terminals.
;

canc -echo :trm=7
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
canc-echo:trm=7
Command entered at terminal #6
Scroll Area Output echo disabled for terminal 7.
;
```

canc-lnp-dpcer**Cancel LNP DPC Transaction Report**

Use this command to cancel a report previously invoked with the **rtrv-lnp-dpcer** command.

NOTE: This command is obsolete.

NOTE: If the LNP ELAP Configuration controlled feature is turned on, this command is no longer available, and all LNP provisioning is performed at the LSMS.

Keyword: **canc-lnp-dpcer**

Related Commands: **rtrv-lnp-dpcer**

Command Class: LNP Basic

Parameters

This command has no parameters.

Example

```
canc - lnp -dpcer
```

Dependencies

The LNP feature must be turned on before this command can be entered (see the **enable-ctrl-feat** and **chg-ctrl-feat** commands).

Notes

If the **canc-lnp-dpcer** command is entered on the same EAGLE 5 ISS terminal at which the currently active **rtrv-lnp-dpcer** command was entered, you must press the F9 key before the command will be accepted. However, you can cancel the command from a different terminal without pressing the **F9** key.

Output**canc - lnp - dpcer**

```
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
CANC-LNP-DPCER: MASP A - COMPLTD
```

```
;
```

canc-lnp-tnrpt**Cancel LNP Subscription Version Report**

Use this command to cancel a report previously invoked with the **rtvr-lnp-tnrpt** command.

NOTE: This command is obsolete.

NOTE: If the LNP ELAP Configuration controlled feature is turned on, this command is no longer available, and all LNP provisioning is performed at the LSMS.

Keyword: **canc-lnp-tnrpt**

Related Commands: **rtvr-lnp-tnrpt**

Command Class: LNP Basic

Parameters

This command has no parameters.

Example

```
canc - lnp - tnrpt
```

Dependencies

None

Notes

If the **canc-lnp-tnrpt** command is entered on the same EAGLE 5 ISS terminal at which the currently active **rtvr-lnp-dpcer** command was entered, you must press the **F9** key before the command will be accepted. However, you can cancel the command from a different terminal without pressing the **F9** key.

Output**canc - lnp - tnrpt**

```
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
CANC-LNP-TNRPT: MASP A - COMPLTD
```

```
;
```

canc-lpo**Cancel Local Processor Outage**

Use this command to cancel a processor outage and restore the link to its previous state. LSSUs with status of processor outage are terminated, and the link begins sending MSUs.

NOTE: The signaling link's blocked status is not preserved across a card reboot.

Keyword: **canc-lpo**

Related Commands: **act-lpo**, **blk-slk**, **ublk-slk**

Command Class: Link Maintenance

Parameters

:link= (mandatory)

The signaling link defined on the card specified in the **loc** parameter. The links can be specified in any sequence or pattern.

Synonym: **port**

Range: **a, b, a1-a31, b1-b31**

Not all card types support all **link** parameter values.

See Table A-1 for valid **link** parameter range values for each type of card that can have a location specified in the **loc** parameter.

:loc= (mandatory)

The address of the card containing the signaling link to be unblocked.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

Example

canc-lpo:loc=2311:link=b

Dependencies

A card location must be specified that is valid and defined in the database.

No other action command can be in progress when this command is entered.

The card must be equipped and must be one of the following cards:

- A LIM card running the **ss7ansi**, **ss7gx25**, **atmansi**, or **ccs7itu** application
- An E1 ATM card running the **atmitu** application
- An SSED CM card running the **iplim** or **iplimi** application with links having **ipliml2=m2pa**
- An E1/T1 MIM card or an HC MIM card running the **ss7ansi** or **ccs7itu** application

This command cannot be entered for IPLIMx signaling links that have an **ipliml2** parameter setting that is not **m2pa**.

The **canc-lpo** command is not valid for DCM cards with **ss7ipgw** or **ipgwi** TCP/IP links.

The card must contain signaling links.

The signaling link must be equipped in the database.

The **link** parameter values **a1**, **b1**, **a2**, **b2**, **a3**, and **b3** can be specified only for the following cards:

- A multi-port LIM
- An E1/T1 MIM or an HC MIM

Notes

The function of this command is the same as the **ublk-slk** command.

Unblocking a signaling link removes a Level 2 failure resulting from a **blk-slk** of an ATM high-speed signaling link.

The *Installation Manual - EAGLE 5 ISS* provides an illustration of card locations.

Output

canc -lpo:loc=2311:link=a

```
tekelecstp 05-01-21 17:00:36 EST EAGLE5 33.0.0
Local processor outage being cleared.
```

;

In the following example, card location 1113 is not valid:

canc -lpo:loc=1113:link=a

```
tekelecstp 05-01-21 17:00:36 EST EAGLE5 33.0.0
Command Rejected : Location is not valid for command
```

;

canc-slk**Cancel Signaling Link**

Use this command to change the state of the specified link to OOS-MT-DSBLD (Out-Of-Service Maintenance Disabled).



CAUTION: This command impacts network performance and should be used only during periods of low traffic.

Keyword: **canc-slk**

Related Commands: **act-slk, alw-slk, blk-slk, dact-slk, dlt-slk, ent-slk, inh-slk, rept-stat-slk, rtrv-slk, tst-slk, ublk-slk, unhb-slk**

Command Class: Link Maintenance

Parameters

:link= (mandatory)

Signaling link defined on the card specified in the **loc** parameter. The links can be specified in any sequence or pattern.

Synonym: **port**

Range: **a, b, a1-a31, b1-b31**

Not all card types support all **link** parameter values.

See Table A-1 for valid **link** parameter range values for each type of card that can have a location specified in the **loc** parameter.

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

Example

canc -slk:loc=1301:link=a

Dependencies

A card location must be specified that is valid and defined in the database.

No other action command can be in progress when this command is entered.

The card must contain signaling links.

The signaling link must be equipped in the database.

The following **link** parameter values can be specified for the following cards that support more than 2 links per card:

- **a1-a3, b1-b3**—Multi-port LIM (MPL, MPL-T), SSEDCM card running the **iplim** or **iplimi** application with links having **ipliml2=m2pa** or **ipliml2=saaltali**, E1/T1 MIM card
- **a1-a31, b1-b31**—HC-MIM card
- **a1-a15, b1-b15**—E5-E1T1 card
- **a1-a7, b1-b7**—E5-ENET card running the **iplim** or **iplimi** application that supports 16 links

The card that contains the specified signaling link must be equipped in the specified card location.

The card in the specified card location cannot be a TDM card, an MDAL card, an HMUX or HIPR card, or the cards running the OAM application.

Notes

Not every card location represents a signaling link. Be sure to address a signaling link in this command.

The *Installation Manual - EAGLE 5 ISS* provides an illustration of card locations.

After the **canc-slk** command is entered, the **rept-stat-slk** command can be entered to verify the cancellation.

Output

```
canc-slk:loc=1301:link=a
rlghncxa03w 05-02-07 11:11:28 EST EAGLE5 33.0.0
Deactivate Link message sent to card
;
```

canc-user

Cancel User

Use this command to end a user session. The **dact-echo** or **logout** command has the same affect as the **canc-user** command.

Keyword: **canc-user**

Related Commands: **act-user, chg-pid, chg-user, dact-user, dlt-user, ent-user, login, logout, rept-stat-user, rtrv-secu-user, rtrv-user**

Command Class: Basic

Parameters

This command has no parameters.

Example

```
canc-user
```

Dependencies

None

Notes

The **dact-echo** or **logout** commands can be used in place of **canc-user**.

Output

Not applicable.

chg-acg-mic**Change ACG Manually Initiated Control**

Use this command to change the values of ACG controls assigned to certain queries. The control can apply to all queries or to specific query services and called party digits. A particular control is selected to be changed by either specifying that it is the **type=all** control or specifying its service and digits.

Keyword: **chg-acg-mic**

Related Commands: **dlt-acg-mic**, **ent-acg-mic**, **rept-stat-lnp**, **rtrv-acg-mic**

Command Class: Database Administration

Parameters

:aintvl= (optional)

AIN interval index

Range: **1-15**

Default: The current value

:dgts= (optional)

Digits

Range: **000-999, 000000-9999999999**

Specify 3 digits or 6-10 digits.

:drtn= (optional)

Duration index. The amount of time that the ACG is in effect. This number is mapped to a time value at the LNP node. Refer to the chapter on Automatic Call Gapping (AGC) configuration in the *LNP Feature Activation Guide* for a description of the use of the duration index.

Range: **1-13**

Default: The current value

:intvl= (optional)

Interval index. The amount of time between ACGs. This number is mapped to a time value for the LNP node. Refer to the chapter on Automatic Call Gapping configuration in the *LNP Feature Activation Guide* for a description of the use of the gap interval index.

Range: **0-15**

Default: Current value

:nd= (optional)

New number of digits

Range: **3, 6-10**

Default: The current value

:serv= (optional)

Query service

Range: **ain, in**

:type= (optional)

Type of control

Range: **all, sd**

Default: **sd**

Example

To change the type=all MIC to use 3 digits:

chg-acg-mic:type=all:nd=3

To change the MIC for AIN queries for 919-460-2132 to use an interval index of 15:

chg-acg-mic:serv=ain:dgts=9194602132:aintvl=15

To change the MIC for IN queries for 919-xxx-xxxx to use a duration index of 9 and an interval index of 5:

chg-acg-mic: serv=in: dgts=919: drtn=9: intvl=5

Dependencies

If the **type=all** parameter is specified, at least one optional parameter (**nd**, **drtn**, **intvl**, or **aintvl**) must be specified.

If the **type=all** parameter is specified, optional parameters **serv** and **dgts** cannot be specified.

If the **type=sd** parameter is specified, optional parameters **serv** and **dgts** must be specified.

If the **type=sd** parameter is specified, optional parameter **nd** cannot be specified.

If the **serv=ain** parameter is specified, at least one optional parameter (**drtn** or **aintvl**) must be specified.

If the **serv=ain** parameter is specified, optional parameter **intvl** cannot be specified.

If the **serv=in** parameter is specified, at least one optional parameter (**drtn** or **intvl**) must be specified.

If the **serv=in** parameter is specified, optional parameter **aintvl** cannot be specified.

The **dgts** parameter value must be either 3 digits in the range **000-999** or 6-10 digits in the range **000000-9999999999**.

The **nd** parameter value must be **3** or **6-10** to indicate the number of new digits.

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before this command can be entered.

If the **type=all** parameter is specified, a MIC with **type=all** must exist.

If the **type=sd** parameter is specified, a MIC with the same service and digits must exist.

Notes

None

Output

chg-acg-mic: type=all: nd=31

```
rlghncxa03w 04-01-28 08:50:12 EST EAGLE 31.3.0
ACG MIC table is (11 of 256) 4% full of type SD
CHG-ACG-MIC: MASP A - COMPLTD
;
```

chg-acg-noc

Change ACG Node Overload Control

Use this command to change the definition of a node overload level. The definition is comprised of the threshold LNP query rates for node overload levels and the values for the automatic call gappings (ACG) to be sent when at the specified level.

Keyword: **chg-acg-noc**

Related Commands: **dlt-acg-noc**, **ent-acg-noc**, **rept-stat-lnp**, **rtrv-acg-noc**

Command Class: Database Administration

Parameters

:lvl= (mandatory)
Overload level.

Range: **1-10**

:and= (optional)

AIN number of digits. The number of digits in the global title address of an AIN query.

Range: 6, 10

Default: The current value

:drtn= (optional)

Duration index. The amount of time that the ACG is in effect. This number is mapped to a time value at the LNP node. Refer to the chapter on Automatic Call Gapping (ACG) configuration in the *LNP Feature Activation Guide* for a description of the use of the duration index.

Range: 1-13

Default: The current value

:ind= (optional)

IN number of digits. The number of digits in the global title address of an IN query.

Range: 6, 10

Default: The current value

:intvl= (optional)

Interval index. The amount of time between ACGs. This number is mapped to a time value for the LNP node. Refer to the chapter on Automatic Call Gapping configuration in the *LNP Feature Activation Guide* for a description of the use of the gap interval index.

Range: 0-15

Default: The current value

:qr= (optional)

Query rate. The number of LNP queries, which define a particular overload level, in a 30-second period.

Range: 1-2147483647

Default: The current value

Example

To change level 10's query rate and AIN number of digits:

chg-acg-noc:lvl=10:qr=900000:and=6

To change level 3's duration and interval indexes:

chg-acg-noc:lvl=3:drtn=7:intvl=3

Dependencies

At least one optional parameter must be specified.

The **and** parameter value must be either **6** or **10**.

The specified overload level must be defined.

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before this command can be entered.

The **ind** parameter value must be either **6** or **10**.

Notes

None

Output

chg-acg-noc:lvl=10:qr=900000:and=6

rlghncxa03w 03-02-28 08:50:12 EST EAGLE 28.1.0

CHG-ACG-NOC: MASP A - COMPLTD

;

chg-appl-rtkey**Change Static Routing Key Table Entries**

Use this command to change static entries in the Routing Key table. Only one attribute can be changed at a time.

Keyword: chg-appl-rtkey

Related Commands: dlt-appl-rtkey, ent-appl-rtkey, rtrv-appl-rtkey

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:cice= (optional)

The end range of circuit identification codes assigned to the routing key.

Specify the **cice** and **cics** parameters to identify the routing key to be changed. The **cice** parameter is mandatory and valid only if the **si** parameter has a value of **4**, **5**, or **13**.

Range: 0-4294967295

See Table A-4 for valid CIC values for specified SI and MSU types.

:cics= (optional)

The start range of circuit identification codes assigned to the routing key.

Specify the **cics** and **cice** parameters to identify the routing key to be changed. The **cics** parameter is mandatory and valid only if the **si** parameter has a value of **4**, **5**, or **13**.

Range: 0-4294967295

See Table A-4 for valid CIC values for specified SI and MSU types.

:dpc= (optional)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Synonym: dpca

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:dpc/dpca/dpci/dpcn/dpcn24= (optional)

Destination point code.

:dpci= (optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*)

Range: s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—**0-7**

The point code **0-000-0** is not a valid point code.

:dpcn= (optional)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:dpcn24= (optional)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:nasname= (optional)

This parameter is obsolete.

:ncice= (optional)

The new end range of circuit identification codes assigned to the routing key.

Specify the **ncice** and/or **ncics** parameter to change the range of the circuit identification codes assigned to the routing key. The **ncice** parameter is valid only if **si=4, 5, or 13** and is not valid if the **split** parameter is specified.

Range: **0-4294967295**

See Table A-4 for valid CIC values for specified SI and MSU types.

:ncics= (optional)

The new start range of circuit identification codes assigned to the routing key.

Specify the **ncics** and/or **ncice** parameter to change the range of the circuit identification codes assigned to the routing key. The **ncics** parameter is valid only if **si=4, 5, or 13** and is not valid with the **split** parameter.

Range: **0-4294967295**

See Table A-4 for valid CIC values for specified SI and MSU types.

:norm= (optional)

Normalization Enabled/Disabled. This parameter enables or disables the normalization process for MSUs using the routing key.

This parameter cannot be specified with the **ncics**, **ncice**, and **split** parameters.

Range: **yes, no**

If **norm=yes**, **pstncat** and **pstnid** must be set to values supported by the Secure Gateway.

Default: Current value in the database

:nrcontext= (optional)

This parameter modifies the routing context value assigned to this routing key.

- Routing context is mandatory for routing keys associated with SUA Application Servers.
- Routing context is optional for routing keys associated with M3UA Application Servers.
- Routing context is invalid for routing keys associated with TALI connections.

An AS can be associated with only 1 routing key with routing context. An AS can be associated with multiple routing keys that do not contain routing context. An AS cannot be simultaneously assigned to a routing key with routing contexts and to routing keys without routing contexts.

The **pstncat**, **pstnid**, and **norm** parameters cannot be specified when the **nrcontext** parameter is specified.

Range: 0-4294967295

:nsname= (optional)

This parameter is obsolete.

:opc= (optional)

ANSI originating point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Synonym: **opca**

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001–005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006–255.

The point code 000-000-000 is not a valid point code.

:opc/opca/opci/opcn/opcn24= (optional)

Originating point code. Valid only if **si**=4, 5, or 13 and required if **si**=4, 5, or 13.

:opci= (optional)

ITU international originating point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*)

Range: s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

:opcn= (optional)

ITU national originating point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-*

gc, m1-m2-m3-m4-gc). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-**, **0-16383**, **aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:opcn24= (optional)

24-bit ITU national originating point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

:pstncat= (optional)

Public Switched Telephone Network (PSTN) Category assigned to the routing key.

This parameter cannot be specified with the **ncics**, **ncice**, or **split** parameters.

Range: **0-65535**

Default: Current value in the database

:pstnid= (optional)

Public Switched Telephone Network (PSTN) ID assigned to the routing key.

This parameter cannot be specified with the **ncics**, **ncice**, or **split** parameters.

Range: **0-65535**

Default: Current value in the database

:rcontext= (optional)

This parameter specifies a routing key by its routing context when a routing key needs to be changed as an optional alternative to entering the **dpc/si/ssn/opc/cics/cice/type** parameters.

The **pstncat**, **pstnid**, **norm** and **split** parameters cannot be specified if this parameter is specified. (Split operations are invalid for routing keys with routing context.)

Range: **0-4294967295**

:si= (optional)

The service indicator.

Range: **0-15**

0-15 or equivalent text values:

Number = Text—Description

0 = snm—Signaling network management messages

1 = regtest—Signaling network testing and maintenance regular

2 = spltest—Signaling network testing and maintenance special

3 = sccp—SCCP

4 = tup—Telephone user part

5 = isup—ISDN user part

13 = qbicc

See Table A-4 and Table 5-8 for valid **si** values in combination with other parameters.

:split= (optional)

The CIC value where the routing key with the specified CICS and CICE range will be split. The specified routing key is split into two entries with adjacent CIC ranges. The existing routing key retains the range of CICs that is lower than the **split** value. The value of **split** minus 1 is used as the end range for this entry. The range of CICs assigned to the original entry is the values of **cics** to **split** minus 1.

A new routing key entry is created with the high end of the original range. The **split** value is used as the start of the CIC range for this entry. The range of CICs assigned to the new entry is the values of **split** to **cice**.

This parameter is valid only if **si=4**, **5**, or **13** and is not valid with **ncics** or **ncice**. See Table A-4 and Table 5-8.

Range: 0-16363

:ssn= (optional)

Subsystem number. This parameter is mandatory and valid only if the **si=3** parameter is specified.

Range: 0-255

:type= (optional)

Type of routing key.

Range: full, partial, default

Default: full

Example

```
chg-appl-
rtkey:dpc=123-230-245:si=5:opc=123-230-244:cics=1:cice=100:split=
50
```

```
chg-appl-
rtkey:dpc=123-230-245:si=5:opc=123-230-244:cics=1:cice=50:ncice=1
00
```

```
chg-appl-
rtkey:dpcn24=10-100-10:si=5:opc=10-100-11:cics=1:cice=100:ncic
e=200
```

```
chg-appl-rtkey:dpc=8-8-8:si=3:ssn=5:rcontext=500
```

```
chg-appl-
rtkey:dpci=s-3-11-1:si=5:opci=s-4-11-1:cics=1:cice=1000:ncice=500
```

```
chg-appl-rtkey:rcontext=5:ncice=100
```

```
chg-appl-rtkey:rcontext=1:nrcontext=2
```

Dependencies

Optional parameters that must be specified with the **chg-appl-rtkey** command depend on the type of routing key being changed. See Table 5-8 for valid parameter combinations.

The **srkq** parameter value in the **chg-sg-opts** command limits the maximum number of static routing keys that can be provisioned using the **ent-appl-rtkey** command.

- For **ss7ipgw** and **ipgwi** applications running on dual-slot DCM cards (870-1945-xx), there is a limit of 1000 routing keys in the system. The **chg-sg-opts** command will not allow the **srkq** parameter to be set to a value greater than 1000.
- For **ss7ipgw** and **ipgwi** applications running on SSED CM cards (870-2732-xx), there is a limit of 2500 routing keys in the system. See the **chg-sg-opts** command for parameter values that allow 2500 routing keys to be defined in the system.

The subsystem number is mandatory and valid only when the **si=3** (or **sccp**) parameter is specified; if the **si** parameter does not equal **3** (or **sccp**), the **ssn** parameter cannot be specified.

The **pstnid**, **pstncat**, and **norm** parameters are not valid for 24-bit ITU-N point codes.

The value entered for the starting circuit identification code (**cics**) must be less than or equal to the value entered for the ending circuit identification code (**cice**).

The value entered for the new starting circuit identification code (**ncics**) must be less than or equal to the value entered for the new ending circuit identification code (**ncice**).

A circuit identification code range (**cics** to **cice**) cannot be specified that overlaps an existing routing key.

When **si=4**, **5**, or **13** (or **tup**, **isup**, or **qbicc**), the **opc**, **cics**, and **cice** parameters are required. The **opc**, **cics**, and **cice** parameters can be specified only if **si=4**, **5**, or **13**.

The value entered for the circuit identification code split range (**split**) must be greater than the value entered for the starting circuit identification code (**cics**) and less than or equal to the value entered for the ending circuit identification code (**cice**).

The value entered for the new starting circuit identification code (**ncics**) must be less than or equal to the value entered for the ending circuit identification code (**cice**) when the new ending circuit identification code (**ncice**) is not specified.

The value entered for the new ending circuit identification code (**ncice**) must be greater than or equal to the value entered for the starting circuit identification code (**cics**) when the new starting circuit identification code (**ncics**) is not specified.

The **split**, **ncics**, and **ncice** parameters are not allowed with the **si** parameter unless the **si=4**, **5**, or **13** (or **tup**, **isup**, or **qbicc**) parameter is specified.

TALI sockets cannot be specified for IPGWI cards when the Spare Point Code Support Feature (**s-prefix**) is enabled.

A DPC/SI routing key must be specified when the DPC is ANSI and the **si=4** parameter is specified (TUP is used only in an ITU network).

Table A-4 shows valid CIC values for SI types **4**, **5**, and **13**.

Partial point codes are not allowed; no asterisks can be specified in the point codes in the command.

Mixed point code types are not allowed; **opc** and **dpc** types must match.

When the **type=partial** or **type=default** parameters are specified, the **nsname** parameter or attributes must be specified.

When the **type=partial** or **type=default** parameters are specified, the **split** and **resize** parameters are not supported.

When the **type=full** parameter is specified, the **dpc** and **si** parameters must be specified.

When the **pstncat=0** parameter is specified, the **pstnid=0** parameter must be specified.

The parameter value **pstncat=1** requires ITU-I or ITU-N point code.

The following types of partial routing keys are supported:

- DPC-SI-OPC (ignore CIC) can be used as a partial match key for CIC- based traffic.
- DPC-SI (ignore all other fields) can be used as a partial match key for CIC- based traffic or SCCP traffic.
- DPC only (ignore all other fields) can be used as a partial match for any type of traffic.
- SI only (ignore all other fields) can be used as a partial match for any type of traffic.

When a default routing key is specified, only the attributes parameters **pstnid**, **pstncat**, and **norm** are allowed.

The **split**, **ncics**, **ncice**, **pstncat**, **pstnid**, and **norm** parameters cannot be specified if the **rcontext** parameter is specified.

The **rcontext** parameter must be specified for routing keys that are associated with SUA Application Servers.

The specified **rcontext** parameter value must already exist in the database.

If specified, the service indicator parameter must be **si=3** for routing keys that are associated with SUA Application Servers.

An AS cannot be simultaneously assigned to a routing key with routing contexts and routing keys without routing context. To assign an M3UA or SUA association to multiple routing keys with routing context, the M3UA/SUA association must be assigned to more than one AS, and each AS must be assigned to a routing key with routing context.

The AS name and parameters specified for a routing key must use an address format that is valid for the adapter type assigned to the AS.

Table 5-6. Valid Parameter Combinations for Routing Key Types using the **chg-appl-rtkey** command.

Action	dpc	si	ssn	opc	cics	cice	ncics	ncice	split	type
Split CIC Range	X	X		X	X	X			X	full
Re-size CIC Range	X	X		X	X	X	X	X		full
Socket Name Override (SI=ISUP or 5)	X	X		X	X	X				full
Socket Name Override (SI = SCCP or 3)	X	X	X							full
Socket Name Override (SI = not 3, 4, 5, or 13)	X	X								full
Socket Name Override (SI = 4, 5, or 13)	X	X		X						partial
Socket Name Override (SI = 3, 4, 5 or 13)	X	X								partial
Socket Name Override SI-only key		X								partial
Socket Name Override DPC-only key	X									partial
Socket Name Override Default key										default

The value of the **nrcontext** parameter cannot be changed for a routing key if the **rcontext** parameter has not been configured for that routing key.

The attributes that are required to change a routing key must be specified in the command.

Notes

A routing key entry associates a routing key with a socket name or Application Server (AS) name.

The parameters **dpc**, **si**, **ssn**, **opc**, **cics**, and **cice** are used to identify the routing key to be changed.

The parameters **split**, **ncics**, and **ncice** are used to specify new values for the routing key.

The **opc**, **cics**, and **cice** parameters are not required for partial routing keys.

The **cics**, **cice**, **ncice**, **ncice**, and **split** parameters are valid and required when **si=4** and ITU DPCs (**dpca**, **dpca**) are specified. These parameters are not valid when an ANSI DPC (**dpc**, **dpca**) is specified and **si=4**.

The parameters **pstncat**, **pstnid**, and **norm** are routing key attributes. These attributes are not used to uniquely identify routing keys. The **pstncat** and **pstnid** parameter values convey PSTN format information to IP devices and are also used to control the normalization process when **norm=yes**. Table 5-7 describes the PSTN Category and ID combinations.

Table 5-7. PSTN Categories and Associated PSTN IDs

PSTN Category	PSTN Category Description	PSTN ID	PSTN ID Description
0	Unknown	0	Unknown
1	Defines PSTN formats for which the Tekelec EAGLE 5 ISS provides ISUP Normalization function	0	Unknown
		1	ITU Q.767
		2	ETSI V3
		3	UK PNO-ISC7
		4	GERMAN ISUP
2 - 4095	Reserved for future definition by Tekelec	None	None
4096-65535	Available for user definition	0-65535	User-defined PSTN IDs

The values **0** and **4096-65535** are always valid for the **pstncat** parameter when **norm=no**.

Use the **rtv-pstn-pres** command to display allowed values for the **pstncat** and **pstnid** parameters.

The parameter value **pstncat=1** may be used only with keys that specify ITU-N or ITU-I point codes. PSTN IDs used with **pstncat=1** must meet specific **si** value criteria shown in Table 5-8.

The parameter value **norm=yes** can be entered if **pstncat=1** and the **pstnid** parameter value is indicated by "*" in Table 5-6.

Table 5-8. Routing Keys and Supported PSTN Categories and PSTN IDs for PSTN Category 1

Routing Key Entry Type	SI	PC Type	norm= yes is valid	pstnid for pstncat = 1			
				1=ITU Q.767	2=ETSI V3	3=UK PNO- ISC7	4= GERMAN ISUP
Full-CIC	5	ANSI					
and		ITU-I/N	*	*	*	*	*

Table 5-8. Routing Keys and Supported PSTN Categories and PSTN IDs for PSTN Category 1

Routing Key Entry Type	SI	PC Type	norm= yes is valid	pstnid for pstncat = 1			
				1=ITU Q.767	2=ETSI V3	3=UK PNO- ISC7	4= GERMAN ISUP
Partial DPC/ OPC/SI	4 or 13	ALL					
Full-SCCP	3		ALL				
Full-DPC/SI	All valid	ALL					
Partial DPC/ SI	5	ANSI					
		ITU-I/N	*	*	*	*	*
	Other than 5						
Partial DPC	N/A	ALL					
Partial SI	ALL	N/A					
Default	N/A	N/A					

The following changes can be made for routing keys. Only one of these changes is allowed per command.

- A routing key can be split into two entries with adjacent CIC ranges. The resulting entries retain the socket associations of the original entry.
- The range of CICs assigned to a routing key can be changed as long as it does not overlap another routing key. The new entry retains the socket associations of the original entry.
- Routing key attributes **pstncat**, **pstnid**, and **norm** can be changed. These values replace the current attribute values for the routing key.

Group codes are required for ITU-N point codes (DPCN/OPCN) when the Duplicate Point Code feature is turned on.

Routing context is a routing key parameter that uniquely identifies routing keys. Routing context is mandatory for routing keys associated with SUA Application Servers, optional for routing keys associated with M3UA Application Servers, and invalid for routing keys associated with TALI connections.

An AS cannot be simultaneously assigned to a routing key with routing contexts and routing keys without routing contexts.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-).

Output

```

chg-appl-rtkey:dpc=123-230-245:si=3:ssn=250:nsname=socket5
    rlgncxa03w 04-01-28 08:50:12 EST EAGLE 31.3.0
    CHG-APPL-RTKEY: MASP A - COMPLTD
;

```

chg-appl-sock**Change Application Socket**

Use this command for the IPLIM, IPLIMI, SS7IPGW, or IPGWI application to configure the Socket table which is used to associate the local host/local port to a remote host/remote port.

Keyword: **chg-appl-sock**

Related Commands: **dlt-appl-sock, ent-appl-sock, rtrv-appl-sock**

Command Class: Database Administration

Parameters

:sname= (mandatory)

Socket name. This parameter specifies the name of an individual socket. This name is used by the routing key table and maintenance commands.

Range: *aaaaaaaaaaaaaaaa*

Up to 15 alphanumeric characters; the first character must be a letter.

:alw= (optional)

This parameter specifies whether the connection manager should allow or disallow a socket to carry SS7 traffic.

Range: **yes, no**

yes — The connection manager is allowed to carry SS7 traffic.

no — The connection manager is to prohibit the socket from carrying SS7 traffic.

Default: No change to current value

:dcmps= (optional)

This parameter specifies the parameter set that will be used by this socket.

Range: **1-10**

Default: No change to current value

:lhost= (optional)

Local host name. This parameter specifies the logical name assigned to the local host device.

Range: *aaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaa*

Any string of characters beginning with a letter and comprising up to 60 characters in length.

Valid characters are **a-z, A-Z, 0-9, -** (dash), **.** (period)

Default: Current value

:link= (optional)

This parameter specifies the signaling link associated with this socket.

Range: **a, b, a1, b1, a2, b2, a3, b3**

Not all card types support all **link** parameter values.

See Table A-1 for valid **link** parameter range values for each type of card that can have signaling links.

Default: Current value

:lport= (optional)

Local port number. This parameter specifies the TCP port number for the local host.

Range: **1024-65535**

- Default:** Current value
System
Default: 0
- :open=** (optional)
 Socket state. This parameter specifies whether the socket should be open/connected to far end.
Range: **yes, no**
yes — The connection manager is to open the socket if the socket is operational
no — The connection manager will not open the socket
- :remit=** (optional)
 Retransmission Mode. This parameter specifies whether the connection should use the Standard Berkeley Sockets Distribution (BSD) Retransmission Policy, the FIXED Tekelec Aggressive Transmission Policy (a fixed interval between each retransmission), or a combination of the two (MOD—a fixed interval between each retransmission and the fixed interval is doubled after each third retry), if packet loss is detected on the socket.
Range: **bsd, fixed, mod**
Default: No change to current value
System
Default: **fixed**
- :rhost=** (optional)
 Remote host name. This parameter specifies the logical name assigned to the remote host device.
Range: *xxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxx*
 Any string of characters beginning with a letter and comprising up to 60 characters in length).
 Valid characters are **a–z, A–Z, 0–9, -** (dash), **.** (period)
Default: Current value
- :rport=** (optional)
 The TCP port number of the remote host.
Range: **1024-65535**
Default: Current value
System
Default: 0
- :rtt=** (optional)
 Round Trip Time. This parameter tells the connection manager the expected time (in milliseconds) in which a message on this socket is sent to the remote host and an acknowledgment is received back at the local host. If the RTT is entered, the Retransmission Mode cannot be set to BSD.
Range: **1-750**
Default: No change to current value
System
Default: 60
- :server=** (optional)
 This parameter specifies the role of the local socket in the client/server relationship.
Range: **yes, no**
yes — Local side is the server
no — Local side is the client
Default: No change to current value

Example

```
chg-appl-sock:sname=socket1:lhost=gw105.nc.tekelec.com:lport=1030:server=y
```

```
es :rhost=gw100.nc.tekelec.com:rport=1030:open=yes:alw=yes:dcmps=1
0
```

Dependencies

At least one optional parameter must be specified.

The **link** parameter is used to associate a socket with a signaling link.

- Only link **a** is valid on cards that execute the **ss7ipgw** or **ipgwi** application.
- Links **a** and **b** are valid on dual-slot DCM cards or SSEDCCM cards that execute the **iplim** or **iplimi** application and support 2 point-to-point links.
- Links **a**, **b**, **a1**, **b1**, **a2**, **b2**, **a3**, and **b3** are valid only on SSEDCCM cards that execute the **iplim** or **iplimi** application and support 8 point-to-point links.

A maximum of 50 connections (association-to-AS assignments + sockets) can exist per Local Host on IPGWx cards. The total number of sockets and SCTP associations that can be provisioned for **iplim** and **iplimi** applications is limited to 2 on non-SSEDCCM cards and cards with SCTP associations provisioned.

To assign a socket on an IPLIMx card for a local host, the linkset associated with the signaling link must contain only links where the **ipliml2=saaltali** parameter has been specified for the **ent-slk** command.

The allowed maximum is 1 socket per signaling link on IPLIMx cards.

Each time an M3UA/SUA association is assigned to an AS, the SS7IPGW or IPGWI card that hosts the association must maintain a state (ASP-Down, ASP-Inactive, ASP-Active) for the association/AS combination. Each TALI socket on an SS7IPGW or IPGWI card requires the card to maintain a TALI state (NEx-FEx) as well. These states are referred to as adapter states. A single M3UA/SUA association may have multiple adapter states, 1 for each AS it resides in. There is a single adapter state for each TALI socket. The maximum number of adapter states for a single SS7IPW or IPGWI card is 50.

IPGWI sockets cannot be defined when the Spare Point Code Support feature is enabled.

The **sname** parameter value must exist in the IPAPSOCK table.

The specified local host name (**lhost**) must exist in the IP Link table.

The **open=no** parameter must be specified before the **server**, **lhost**, **lport**, **rhost**, **link**, **rexmit**, **rtt**, or **rport** parameters can be specified.

Socket connection parameters (**lhost**, **lport**, **rhost**, **rport**) must be unique for each socket name (**sname**).

To change the value of the **open=yes** parameter, the values must be specified for all parameters that are required to fully specify the connection (**server**, **lhost**, **lport**, **rhost**, and **rport**).

If the socket is a server and the **open=yes** parameter is specified, the socket's **lhost** / **lport** configuration must not match that of any other open client socket. If the socket is a client and the **open=yes** parameter is specified, the socket's **lhost** / **lport** configuration must not match that of any other open socket.

When the **rexmit=bsd** parameter is specified, the **rtt** parameter cannot be specified.

When the **rexmit=fixed** parameter or the **rexmit=mod** parameter is specified, the **rtt** parameter must be specified.

Before the **open=yes** parameter can be specified for a socket, the local host must have a signaling link assigned to its associated signaling link port. Before the local host IP address can be changed, the new local host must have a signaling link assigned to its associated signaling link port.

The local host cannot be assigned to the B interface.

A specified **lhost** or **rhost** name must be valid and must exist in the IP Host table. The name must begin with a letter and can contain the characters **a-z**, **A-Z**, **0-9**, - (dash), and . (period). The **lhost** must be defined as local to this EAGLE 5 ISS.

There are per card and per system limits on the maximum number of sockets supported.

- A maximum of 50 sockets per local host on SS7IPGW/IPGWI cards
- A maximum of 2 sockets per local host on DCM or SSED CM IPLIM/IPLIMI cards that support 2 point-to-point links
- A maximum of 8 sockets per local host on SSED CM IPLIM/IPLIMI cards that support 8 point-to-point links.
- A maximum of 1 socket per signaling link on IPLIM/IPLIMI cards
- A maximum of 4000 IP connections per system

This command cannot be used to change SCTP type IP connections. The **chg-assoc** command must be used for associations; this command is used for sockets.

This command can be entered only for DCM cards running IPGWx applications or DCM and SSED CM cards running IPLIMx applications.

The card for which this command is entered must be equipped.

Notes

The command input is limited to 150 characters.

The total number of sockets and SCTP associations provisioned for **iplim** and **iplimi** applications is limited to 2 on non-SSED CM cards, and when any SCTP associations are provisioned for the card.

Output

```
chg-appl-
sock: sname=socket1: lhost=gw105.nc.tekelec.com: lport=1030: server=y
es: rhost=gw100.nc.tekelec.com: rport=1030: open=yes: alw=yes: dcmps=1
0
    rlghncxa03w 04-01-07 15:35:05 EST  EAGLE 31.3.0
    CHG-APPL-SOCK: MASP A - COMPLTD
;
```

chg-as

Change Application Server

Use this command to change the characteristics of an existing Application Server (AS).

Keyword: **chg-as**

Related Commands: **dlt-as**, **ent-as**, **rept-stat-as**, **rtrv-as**

Command Class: Database Administration

Parameters

:asname= (mandatory)

This parameter specifies the application Server (AS) name in the AS table.

Range: **aaaaaaaaaaaaa**

Up to 15 alphanumeric characters; the first character must be a letter.

:mode= (optional)

This parameter specifies the traffic mode assigned to this AS.

Range: **loadshare**, **override**

The **mode=override** parameter is not valid for SUA associations assigned to the AS.

Default: No change from current value in AS
System
Default: loadshare

:tr= (optional)

This parameter specifies the recovery timer value for this AS, in milliseconds.

Range: 10 - 2000

Default: No change from current value in AS

System

Default: 200

Example

chg-as:asname=asx:mode=override

Dependencies

The AS name (**asname**) must already exist in the AS table.

Association connection parameters must be unique.

The connection state for all associations assigned to the AS must be **open=no** before the **mode** parameter can be changed.

The override traffic mode is not supported for SUA associations.

Notes

By default the AS recovery timer value is set to 200 ms when an AS is entered. This value can be changed at any time using the **chg-as** command. The new timer value will be used the next time the AS enters the AS-Pending state.

Output

chg-as:asname=asx:mode=override

```
rlghncxa03w 04-01-17 15:35:05 EST EAGLE 31.3.0
CHG-AS: MASP A - COMPLTD
```

;

chg-asp

Change Application Server Process

Use this command to change the UA parameter set that an Application Server Process (ASP) uses for various SNM message and notification response options. UA parameter sets are valid only for M3UA associations.

NOTE: This command is obsolete.

Keyword: chg-asp

Related Commands: dlt-asp, ent-asp, rtrv-asp

Command Class: Database Administration

Parameters

:asname= (mandatory)

Application Server Process (ASP) name.

Range: aaaaaaaaaaaaaa

Up to 15 alphanumeric characters; the first character must be a letter.

:uaps= (mandatory)

UA parameter set.

Range: 1-10

Default: 10

Example

chg-asp:aspname=asp1:uaps=1

Dependencies

The ASP must already be defined.

For the associations assigned to the ASP, the association adapter layer type must be **m3ua**.

The associations assigned to the ASP must be set to **open=no** before the UAPS can be changed.

Notes

None

Output

```
chg-asp:aspname=asp1:uaps=1
rlghncxa03w 04-09-17 15:35:05 EST EAGLE 31.10.0
CHG-ASP: MASP A - COMPLTD
;
```

chg-assoc**Change Association**

Use this command to configure existing SCTP associations in the IPAPSOCK table.

Keyword: **chg-assoc**

Related Commands: **dlt-assoc, ent-assoc, rept-stat-assoc, rtrv-assoc**

Command Class: Database Administration

Parameters

:aname= (mandatory)

Name assigned to this association (in IPAPSOCK table).

Range: *aaaaaaaaaaaaaaaa*

Up to 15 alphanumeric characters; the first character must be a letter.

:lhost= (mandatory)

Local host name. This parameter specifies the local host name as defined in the IP Host table.

Range: *aaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaa*

Any string of characters beginning with a letter and comprising up to 60 characters in length.

Valid characters are **0-9, a-z, A-Z, -** (dash), **.** (period).

Default: No change in current value.

:adapter= (optional)

The adapter layer for this association.

Range: **m3ua, sua, m2pa**

Default: Current value

System

Default: **m3ua**

:alhost= (optional)

Alternate local host name. This parameter configures the SCTP association as a multi-homed endpoint.

Range: *aaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaa, none*

Any string of characters beginning with a letter and comprising up to 60 characters in length

Valid characters are **a-z, A-Z, 0-9, -** (dash), **.** (period)

none—The alhost is not configured; the SCTP association is configured as a uni-homed endpoint.

:alw= (optional)

The parameter specifies whether the connection manager should allow or disallow the association to carry SS7 traffic.

Range: **yes, no**

yes— The connection manager is to allow the association to carry SS7 traffic.

no— The connection manager is to prohibit the association from carrying SS7 traffic.

Default: No change in current value

System

Default: **no**

:bufsize= (optional)

Association buffer size in Kilobytes.

Range: **8-400**

:cwmn= (optional)

Minimum congestion window. This parameter specifies the minimum and initial sizes, in bytes, of the association's congestion window.

Range: **1500-196608**

Default: No change in current value

System

Default: **3000**

:istrms= (optional)

SCTP Inbound Stream Value. A 16-bit unsigned integer that defines the number of streams the sender allows the peer end to create in this association.

Range: **1, 2**

Default: No change in current value

System

Default: **2**

:link= (optional)

The signaling link for this association.

Synonym: **port**

Range: **a, b, a1-a7, b1-b7**

Not all card types support all **link** parameter values.

See Table A-1 for valid **link** parameter range values for each type of card that can have assigned signaling links.

Default: Current value.

:lport= (optional)

Local port. This parameter specifies the SCTP port number for the local host.

Range: **1024-65535**

Default: Current value.

:m2patset= (optional)

The M2PA timer set assigned to this association.

Range: **1-20**

Default: **1**

:open= (optional)

Connection state (open or closed) that the connection manager is to put the association in when the socket is operational.

Range: **yes, no**

yes— The connection manager is to open the association if the association is operational.

no— The connection manager will not open the association.

Default: No change in current value

System

Default: no

:ostrms= (optional)

SCTP Outbound Stream Value. This parameter specifies the 16-bit unsigned integer that defines the number of streams the sender wants to create in this association.

Range: 1, 2

Default: No change in current value

System

Default: 2

:rhost= (optional)

Remote host. This parameter specifies the name of the remote host as defined in the IP Host table.

[illegible]

Any string of characters beginning with a letter and comprising up to 60 characters in length.

Valid characters are **a-z**, **A-Z**, **0-9**, - (dash), . (period)

Default: Current value.

:rmax= (optional)

Maximum retransmission timeout. This parameter specifies the maximum value of the calculated retransmission timeout in milliseconds.

Range: 10-1000

Default: No change in current value

System

Default: 800

:rmin= (optional)

Minimum retransmission timeout. This parameter specifies the minimum value of the calculated retransmission timeout in milliseconds.

Range: 10-1000

Default: No change in current value

System

Default: 120

:rmode= (optional)

Retransmission mode. This parameter specifies the retransmission policy used when packet loss is detected.

Range: lin, rfc

lin—The Tekelec Linear Retransmission Policy where each retransmission timeout value is the same as the initial transmission timeout, and only the slow start algorithm is used for congestion control.

rfc—Standard RFC 2960 algorithm in the retransmission delay doubles after each retransmission. The RFC 2960 standard for congestion control is also used.

Default: No change in current value

System

Default: `lin`

:rport= (optional)

Remote port. This parameter specifies the SCTP port number for the remote host.

Range: 1024-65535
Default: Current value.

:rtimes= (optional)

Maximum retransmission retries. This parameter specifies the number of times a data retransmission will occur before closing the association.

Range: 3-12
Default: No change in current value.
System
Default: 10

:uaps= (optional)

User adapter parameter set. This parameter specifies the set used by the M3UA or SUA association for various SNM message and notification response options.

Range: 1-10

:ver= (optional)

Version. This parameter specifies the M2PA version supported by the association. The M2PA version is valid only for associations with the **adapter=m2pa** parameter specified.

Range: d6, rfc

:ver= (obsolete)

This parameter is obsolete. Only the RFC version is valid. Indicates that the association uses M3UA RFC version.

Range: RFC
Default: No change in current value.
System
Default: RFC

Example

```
chg-
assoc:aname=a1:lhost=gw105.nc.tekelec.com:lport=1030 :rhost=gw100.
nc.tekelec.com:rport=1030:open=yes:alw=yes:uaps=10
chg-assoc:aname=ipl1303b6:bufsize=32
```

Dependencies

At least one optional parameter must be specified.

The association name (**aname**) must already exist in the IP Socket/Association (IPAPSOCK) table.

An association's connection parameters (**lhost**, **rhost**, **lport**, **rport**) must be unique.

The connection state must be **open=no** to change **lhost**, **rhost**, **lport**, **rport**, **port**, **alhost**, **adapter**, **m2patset**, **istrms**, **ostrms**, **rmode**, **rmin**, **rmax**, **rtimes**, **cwmin**, and **bufsize** parameters.

To specify the **open=yes** parameter, the values must be specified for all parameters that are required to fully specify the connection (**lhost**, **lport**, **rhost**, and **rport**). Specifying the **open=no** parameter requires only the **aname** parameter and at least one other optional parameter.

The value of the **uaps** parameter can be changed for an association if the **open=yes** parameter is specified.

The host name specified by the **lhost** parameter must exist in the IP Host table and must be provisioned as local to this EAGLE 5 ISS.

The hostnames specified in the **lhost** and **alhost** parameters must refer to different IP addresses.

The hostnames specified in the **lhost** and **alhost** parameters must refer to IP addresses on the same IP card.

An association with **adapter=sua** or **m3ua** cannot be specified for an **lhost** on a card running the **iplim** or **iplimi** application.

Before **open=yes** can be specified for an association, the local host must have a signaling link assigned to its associated signaling link port.

An association's **lhost** and **alhost** cannot be assigned to a card's Ethernet interface B.

The adapter layer cannot be changed for an association that is already associated with an Application Server (AS).

Before the local host can be changed, the new local host must have a signaling link assigned to its associated signaling link port.

Only **link=a** or **link=b** can be specified for the **link** parameter value if the card is a dual-slot DCM card running the **iplim** or **iplimi** application. Only **link=a** can be specified if the card is running the **ss7ipgw** or **ipgwi** application. The **link** parameter values **a**, **b**, **a1-a3**, and **b1-b3** can be specified only if the card is an SSEDCCM card running the **iplim** or **iplimi** application. The **link** parameter values **a**, **b**, **a1-a7**, and **b1-b7** can be specified only if the card is an E5-ENET card running the **iplim** or **iplimi** application.

The card location for the card associated with the **lhost** and **alhost** must exist in the IP Link table.

The allowed maximum is 1 association per signaling link on IPLIMx cards.

A maximum of 50 connections (association-to-AS assignments + sockets) can be specified per local host on IPGWx cards.

A maximum of 4000 connections (association-to-AS assignments + sockets) are allowed per system.

Table 5-9 shows the maximum IP connections per DCM Class card.

Table 5-9. Maximum IP Connections per Card

Type	Cards Per System	Links Per Card	IP Connections Per Link	Total Connections
IPLIMx	100	8	1	800
IPGWx	64	1	50	3200
E5-ENET	100	16	1	1600
System				5600

The **rmin** parameter value must be less than or equal to the **rmax** parameter value.

The **cwmin** parameter value must be less than or equal to the **bufsize** parameter value.

To assign an association on an IPLIMx card for a local host, the association must have an adapter parameter value that is the same as the **ipliml2** setting of its assigned signaling link. An association having an adapter value of **m2pa** must be assigned to an IPLIM signaling link having an **ipliml2** value of **m2pa**.

If the **m2patset** parameter is specified, the **adapter=m2pa** parameter must be specified.

The trade ratio states the quantity of associations to sockets that may be provisioned on a certain card, as follows:

Trade Ratio = a:s

Where: a=associations and s=sockets

The requested buffer size increase cannot exceed available buffer space on the card. Use the **rtrv-assoc** command with the **aname**, **lhost**, or **alhost** parameter to display used and total buffer space on the card.

The **ver** parameter can only be specified if the **adapter=m2pa** parameter is specified.

Notes

The command that is entered cannot exceed a total of 150 characters in length.

The IPAPSOCK table is used to associate the Local Host/Local Port to a Remote Host/Remote Port. This fully specifies the connection.

If the **open=yes** parameter is specified, the association's **lhost** and **lport** configuration must not match that of any open association.

If the card's application is **iplim** or **iplimi**,

- The **adapter** parameter value must equal **m2pa**.
- The **ipliml2** value for the assigned signaling link must equal **m2pa**.

If the entered **lhost** or **alhost** corresponds to an IP address associated with the card's B Ethernet Interface hosted by a present non-EDCM card, an error will be generated. If the entered **lhost** or **alhost** corresponds to an IP address associated with the card's B Ethernet Interface hosted by a provisioned but not present DCM card, the card will be auto-inhibited upon card insertion.

An association with an **adapter** value of **m2pa** cannot be assigned to an SS7IPGW or IPGWI host.

The M2PA version is supported if the application is IPLIMx and the **adapter=m2pa** parameter is specified. When changing the association adapter type to **m2pa** and a version is not specified, the **m2pa=rfc** value is assigned by default.

Output

```
chg-
assoc:aname=a1:lhost=gw105.nc.tekelec.com:lport=1030:rport=1030:u
aps=10:rhost=gw100.nc.tekelec.com:open=yes:alw=yes
      rlgncxa03w 04-01-17 15:35:05 EST EAGLE 31.3.0
      CHG-ASSOC: MASP A - COMPLTD
;
```

chg-atm-lps

Change ATM Link Parameter Set

Use this command to configure a link parameter set with timers and other parameters used by the system to provide level 2 functions for each ATM high-speed signaling link.

Use this command also to copy values from **lpset 20** and **30**, as well as any **lpset** to another. The **action=copy** and **srclpset=x** parameters provide this capability.

Keyword: **chg-atm-lps**

Related Commands: **ent-slk**, **rtrv-atm-lps**

Command Class: Database Administration

Parameters

NOTE: Unless specified, the system default values are meant for both ANSI (T1) and ITU (E1) standards.

:lpset= (mandatory)

The link parameter set being changed. Sets **1** through **19** and **21** through **29** can be configured by the user. Link parameter sets **20** and **30** are not configurable, but are used to contain the recommended default values for a set.

Range: **1-19, 21-29**

Default: **1** for ANSI
21 for ITU

:action= (optional)

This parameter copies a set of ATM signaling link parameters from one set to another.

Range: **copy**

Default: No change to the current value

:maxcc= (optional)

The maximum number of transmissions of BGN, END, ER, or RS PDU.

Range: **1-10**

Default: **4**

:maxnrp= (optional)

The maximum number of retransmitted PDUs during proving.

Range: **0-10**

Default: **1** for ANSI
0 for ITU

:maxpd= (optional)

The maximum number of SD PDUs that can be sent before a POLL is sent.

Range: **5-2120**

Default: **500**

:maxstat= (optional)

The maximum number of list elements in a STAT PDU.

Range: **3-67**

Default: **67**

:n1= (optional)

The number of PDUs sent during proving.

Range: **500-64552**

Default: **64552** for ANSI
1000 for ITU

:nblk= (optional)

The number of monitoring intervals per block.

Range: **1-10**

Default: **3**

:srclpset= (optional)

The source **lpset** for a **copy** action. This parameter can be specified only with the **action=copy** parameter.

Range: **1-30**

:tmrcc= (optional)

The timer, in milliseconds, used during the connection phase to guard against unacknowledged BGN, END, ER or RS PDUs.

Range: 100-2000

Default: 200

:tmrerm= (optional)

The error rate monitor interval, in milliseconds.

Range: 25-500

Default: 100

:tmridle= (optional)

The timer, in milliseconds, used during the idle phase when no SD PDUs are being sent to limit time in the idle phase.

Range: 25-1000

Default: 100

:tmrkalive= (optional)

The timer, in milliseconds, used during the transient phase when no SD PDUs are being sent to keep connection up.

Range: 25-500

Default: 100

:tmrnocred= (optional)

The timer, in milliseconds, used when the no credit exists and PDUs are available to be sent.

Range: 1000-6000

Default: 1500

:tmrnorsp= (optional)

The timer, in milliseconds, used to check that STAT PDUs are arriving often enough.

Range: 500-2000

Default: 1500

:tmrpoll= (optional)

The timer, in milliseconds, used to guarantee that POLL PDUs are sent often enough.

Range: 25-500

Default: 100

:tmrprov= (optional)

The timer, in milliseconds, used to monitor the status of a link after it is placed into service.

Range: 60000-120000

Default: 60000

:tmrsrec= (optional)

The timer, in milliseconds, used to prohibit closely spaced SSCOP recoveries from occurring.

Range: 60000-10800000

Default: 3600000

:tmrt1= (optional)

The time, in milliseconds, between link release action and the next link reestablish action during alignment.

Range: 1000-15000

Default: 5000

:tmrt2= (optional)

The total time, in milliseconds, that SSCF will attempt alignment.

Range: 15000-180000
Default: 120000 for ANSI
 30000 for ITU (E1)

:tmrt3= (optional)
 The time, in microseconds, between proving PDUs.
Range: 450-23000
Default: 925

Example

```
chg-atm-lps:lpset=5:tmrprov=1000:tmridle=55
chg-atm-lps:lpset=3:srclpset=5:action=copy
```

Dependencies

The values in link parameter sets **20** and **30** are the system default values. They cannot be changed but can be copied to another link parameter set.

The values of the **lpset** and **srclpset** parameters cannot be the same.

The **action** and **srclpset** parameters must be specified together.

If **action=copy** is specified, only the **lpset** and **srclpset** parameters can be specified.

At least one optional parameter must be specified.

Notes

The **lpset** values **20** and **30** are non-configurable and contain the default values for ANSI and ITU ATM standards respectively. The **lpset** values **1** through **19** and **21** through **29** are configurable and initialized to the default values for ANSI and ITU standards respectively.

If no parameter value for **lpset** is included when the **ent-slk** command is entered, the system default value of **1** is assigned for ANSI links and the system default value of **21** is assigned for ITU links.

All timer values for link parameter sets are initialized to the system default values.

Output

```
chg-atm-lps:lpset=5:tmrprov=1000:tmridle=55

rlghncxa03w 04-01-05 16:40:40 EST EAGLE 31.3.0
CHG-ATM-LPS: MASP A - COMPLTD
;
```

chg-attr-seculog

Change the Security Log Characteristics

Use this command to modify various attributes that affect the operation of the security logging feature. These attributes include:

- Enabling or disabling the raising of alarms when the log needs uploading
- Specifying the log percentage full threshold at which an *upload required* alarm is raised for the active security log.

Keyword: chg-attr-seculog

Related Commands: rtrv-attr-seculog

Command Class: Security Administration

Parameters**:upldalm=** (optional)

Enable or disable log alarms that pertain to uploading of the security log.

Range: **yes, no****yes**—Enables the log alarms pertaining to uploading of the log, as follows:

- Upload required
- Log overflowed
- Standby log contains greater than 0 un-uploaded entries

no—Prevents the log alarms from being raised when these conditions occur. Should the alarm already be raised when **no** is specified, the alarm is lowered.**Default:** No change to the current value**:upslg=** (optional)Percent full threshold. This parameter specifies the percent full threshold for the security logs. If the **upldalm=yes** parameter is configured, an alarm is raised for the security log when the %full field (as displayed using the **rept-stat-seculog** command) in the log, on the active OAM, reaches or exceeds the value specified for **upslg**. This alarm indicates that the administrator must upload the log.**Range:** **1-99****Default:** No change to the current value**Example****chg-attr-seculog:upslg=80:upldalm=yes****Dependencies**

At least one optional parameter must be specified.

Notes

None

Output**chg-attr-seculog:upslg=80:upldalm=yes**

```
rlghncxa03w 04-01-05 16:40:40 EST  EAGLE 31.3.0
CHG-ATTR-SECULOG:  MASP B - COMPLTD
```

;

chg-cmd**Change Command Attributes**

Use this command to change the attributes of a command.

Keyword: **chg-cmd****Related Commands:** **rtrv-cmd****Command Class:** Security Administration**Parameters****:cmd=** (mandatory)

The command whose attributes are to be changed.

Range: **ZZZZZZZZZZZZZZZZZZZZZZ**

One alphabetic character followed by up to 19 additional alphanumeric characters.

:class1= (optional)Configurable command class name (ayy), and indicator (**-yes** or **-no**) to specify whether the command class is allowed.

Range: *ayy*
Specify the parameter value in the format *ayy -no* or *ayy -yes*.
ayy—Configurable command class name of 1 alphabetic character followed by 2 alphanumeric characters
-no—Indicates that the command class is not allowed.
-yes—Indicates that the command class is allowed.

Default: No change to current value

:class2= (optional)

Configurable command class name (*ayy*), and indicator (**-yes** or **-no**) to specify whether the command class is allowed.

Range: *ayy*
Specify the parameter value in the format *ayy -no* or *ayy -yes*.
ayy—Configurable command class name of 1 alphabetic character followed by 2 alphanumeric characters
-no—Indicates that the command class is not allowed.
-yes—Indicates that the command class is allowed.

:class3= (optional)

Configurable command class name (*ayy*), and indicator (**-yes** or **-no**) to specify whether the command class is allowed

Range: *ayy*
Specify the parameter value in the format *ayy -no* or *ayy -yes*.
ayy—Configurable command class name of 1 alphabetic character followed by 2 alphanumeric characters
-no—Indicates that the command class is not allowed.
-yes—Indicates that the command class is allowed.

:class4= (optional)

Configurable command class name (*ayy*), and indicator (**-yes** or **-no**) to specify whether the command class is allowed

Range: *ayy*
Specify the parameter value in the format *ayy -no* or *ayy -yes*.
ayy—Configurable command class name of 1 alphabetic character followed by 2 alphanumeric characters
-no—Indicates that the command class is not allowed.
-yes—Indicates that the command class is allowed.

:class5= (optional)

Configurable command class name (*ayy*), and indicator (**-yes** or **-no**) to specify whether the command class is allowed.

Range: *ayy*
Specify the parameter value in the format *ayy -no* or *ayy -yes*.
ayy—Configurable command class name of 1 alphabetic character followed by 2 alphanumeric characters
-no—Indicates that the command class is not allowed.
-yes—Indicates that the command class is allowed.

:class6= (optional)

Configurable command class name (*ayy*), and indicator (**-yes** or **-no**) to specify whether the command class is allowed.

Range: *ayy*

Specify the parameter value in the format *ayy -no* or *ayy -yes*.

ayy—Configurable command class name of 1 alphabetic character followed by 2 alphanumeric characters

-no—Indicates that the command class is not allowed.

-yes—Indicates that the command class is allowed.

:class7= (optional)

Configurable command class name (*ayy*), and indicator (**-yes** or **-no**) to specify whether the command class is allowed.

Range: *ayy*

Specify the parameter value in the format *ayy -no* or *ayy -yes*.

ayy—Configurable command class name of 1 alphabetic character followed by 2 alphanumeric characters

-no—Indicates that the command class is not allowed.

-yes—Indicates that the command class is allowed.

:class8= (optional)

Configurable command class name (*ayy*), and indicator (**-yes** or **-no**) to specify whether the command class is allowed

Range: *ayy*

Specify the parameter value in the format *ayy -no* or *ayy -yes*.

ayy—Configurable command class name of 1 alphabetic character followed by 2 alphanumeric characters

-no—Indicates that the command class is not allowed.

-yes—Indicates that the command class is allowed.

Example

```
chg-cmd:cmd=ent-rte:class1=u11-yes
```

```
chg-cmd:cmd=rept-stat-slk:class7=dab-no
```

Dependencies

At least one optional parameter must be specified.

The Command Class Management feature must be enabled before this command can be entered.

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before a command from the classes LNPBAS, LNPDB, and LNPSUB can be specified.

The **cmd** parameter value must be a valid system command.

The **class1** - **class8** parameter values must be valid default or provisioned configurable command class names.

The **login** command is available to all users and therefore cannot be assigned to a configurable class. If the **login** command is used as a parameter, it will be rejected.

Notes

Up to 8 configurable command class names can be specified in one command. More than 8 command classes can be updated by entering additional commands. To update all 32 available configurable command classes, you could enter 4 commands with 8 command classes specified in each command.

The following feature names are valid for this command:

- Prepaid IDP Query Relay
- IDP Screening for Prepaid.

:list= (optional)

The name of the Common Screening List that is associated with the feature.

NOTE: The list parameter must be specified when the feature uses more than one type of Common Screening List.

Range: **delpfx, gt, skbcm, ccnc, skts, insl**

delpfx—Delete Prefix List

gt—Global Title List

skbcm—SK+BCSM List

ccnc—CC+NC List

skts—SK+TS List

insl—In Network Subscriber List

The following screening lists are valid for the indicated features:

- **ccnc, delpfx, gt, skbcm**—Prepaid IDP Query Relay feature
- **skts, insl**—IDP Screening for Prepaid feature

:p1= (optional)

Parameter value 1. The parameter value is specific to the feature and list name that use this parameter.

Range: 1 digits

Valid digit values are:

0-1—For the Prepaid IDP Query Relay feature **delpfx** list, where: **0**=National, **1**=International

:p2= (optional)

Parameter 2. The parameter value is specific to the feature and list name that use this parameter. No feature currently uses this parameter.

:p3= (optional)

Parameter 3. The parameter value is specific to the feature and list name that use this parameter. No feature currently uses this parameter.

:pc= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: **pca**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001-005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006-255**.

The point code **000-000-000** is not a valid point code.

:pc/pca/pci/pcn/pcn24= (optional)

Point code. Either the **ds** parameter or the **pc** parameter must be specified for the command. Currently, there are no common screening list features that use point codes.

:pci= (optional)

ITU international point code with subfields *zone-area-id*.

Range: **0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

The point code **0-000-0** is not a valid point code.

zone—**0-7**

area—**000-255**

id—**0-7**

:pcn= (optional)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmt** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:pcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:pn= (optional)

Part Number. The 9-digit "893xxxxxx" part number of the feature for which the command is entered. The **rtrv-ctrl-feat** command description shows the part number in the command output example.

NOTE: Either the pn parameter or the feature parameter must be specified to identify the feature.

Range: **893000000-893999999**

The first 3 digits are **893**. Do not separate the digits with dashes or spaces.

The following part numbers are valid for this command:

- **893016001**—Prepaid IDP Query Relay feature
- **893015501**—IDP Screening for Prepaid

Example

```
chg-csl:feature="Prepaid IDP Query Relay":list=ccnc:ds=123456
chg-csl:feature="Prepaid IDP Query Relay":list=skbcsm:ds=4321
chg-csl:feature="Prepaid IDP Query
Relay":list=delpfx:ds=54321:p1=0
chg-csl:feature="IDP Screening for
Prepaid":list=insl:ds=123456789bcDEF
chg-csl:feature="IDP Screening for Prepaid":list=skts:ds=36ab
```

Dependencies

An enabled feature must be specified using either a valid part number (**pn**) or feature name (**feature**). The specified feature must use a Common Screening List.

The specified feature name must be for a feature that uses a Common Screening List. The feature name must be specified as it appears in the **rtrv-ctrl-feat** command output example. Enough of the name must be specified to make the name unique when two features begin with the same word or acronym. The following features use a Common Screening List:

- IDP Screening for Prepaid
- Prepaid IDP Query Relay

The feature that is specified in the **feature** parameter must be enabled.

The **list** parameter must be specified for features that use more than one type of screening list.

The **list** parameter value must be valid for the specified screening feature. The following **list** parameter values are valid for the indicated feature:

- **skts, insl**—IDP Screening for Prepaid
- **gt, ccnc, delpfx, skbcsm**—Prepaid IDP Query Relay

The specified screening list entry must exist in the screening list that is used by the feature.

The length of the digit string that is specified for the **ds** parameter must be valid for the screening feature and list type.

A valid **ds** parameter value is required for the specified feature and list type.

The following parameters are allowed with the indicated common screening list type:

- **list=gt**—**ds** parameter
- **list=ccnc**—**ds** parameter
- **list=delpfx**—**ds** and **p1** parameters
- **list=skbcsm**—**ds** parameter
- **list=skts**—**ds** parameter
- **list=insl**—**ds** parameter

The leading digit pattern in the specified digit string (**ds** parameter) must be unique in the specified screening list for the indicated feature:

- **skts** and **insl** lists—IDP Screening for Prepaid
- **gt** and **ccnc** lists—Prepaid IDP Query Relay

The specified **ds** parameter value must be valid for the specified screening list (**list** parameter).

The value that is specified for a common screening list parameter must be valid for the specified common screening list feature.

Notes

None

Output

```
chg-csl:feature="Prepaid IDP Query Relay":list=skbcm:ds=919556
tekelecstp 05-08-21 15:18:41 EST EAGLE 34.1.0
SK+BCSM List table is (5 of 25) 20% full
CHG-CSL: MASP A - COMPLTD
;

chg-csl:feature="IDP Screening for
Prepaid":list=insl:ds=123456789bcdEF
tekelecstp 05-08-21 15:18:41 EST EAGLE 34.3.0
INSL List table is (5 of 25) 20% full
CHG-CSL: MASP A - COMPLTD
;
```

chg-ctrl-feat

Change Controlled Feature

Use this command for controlled features that have been purchased and enabled with the **enable-ctrl-feat** command. to:

- Turn on or turn off On/Off features
- Turn on Permanently On features (they cannot be turned off after they have been turned on)

Use this command when the system station shows an expired temporary key and the administrator wants to clear the CRITICAL system alarm without purchasing a permanent Feature Access Key.

Keyword: **chg-ctrl-feat**

Related Commands: **enable-ctrl-feat**, **rtrv-ctrl-feat**

Command Class: Database Administration

Parameters

:partnum= (mandatory)

Part number. This parameter specifies the part number for the feature.

Range: **893000000 - 893999999**

Do not include dashes in the 9-digit number.

:alarm= (optional)

Clears alarms when temporary feature keys have expired.

Range: **clear**

:status= (optional)

Changes the operational status of the feature.

Range: **on, off**

Default: No change in current status

Example

```
chg-ctrl-feat:partnum=893xxxxxx:status=on
```

```
chg-ctrl-feat:partnum=893xxxxxx:alarm=clear
```

Dependencies

The controlled feature specified by the **partnum** parameter must be enabled (see the **enable-ctrl-feat** command) before this command can be entered.

One of the optional parameters, but not both, must be specified in the command.

To use this command to turn off a feature, the Part Number specified in the command must be for one of the following On/Off features that is currently on. (A Permanently On feature is turned on with this command; after the feature has been turned on, it cannot be turned off with this command):

- 893006601 LNP Short Message Service (LNP SMS)
- 893006701 Prepaid SMS Intercept Phase 1 (PPSMS)
- 893006901 Intermediate GTT Load Sharing (IGTTLS)
- 893007001 G-Port Circular Route Prevention
- 893005801 Command Class Management
- 893005701 IP User Interface (Telnet)
- 893009101 Network Security Enhancement
- 893009301 Portability Check for Mobile Originated SMS
- 893400001 EAGLE OA&M IP Security
- 893013501 MTP Map Screening
- 893000201 ISUP Normalization
- 893000301 German 1TR7 Normalization
- 893000401 UK PNO-ISC7 Normalization
- 893000501 ITU Q.767 Normalization
- 893000601 ITU Q.767 Normalization
- 893000701 FRENCH Normalization
- 893000801 SWEDEN Normalization
- 893000901 BELGIUM Normalization
- 893001001 NETHERLANDS Normalization
- 893001101 SWITZERLAND Normalization
- 893001201 AUSTRIA Normalization
- 893001301 IRELAND Normalization
- 893001501 INDIA Normalization
- 893001601 MALAYSIA Normalization
- 893001701 VIETNAM Normalization
- 893001801 S. AFRICA Normalization
- 893001901 ARGENTINA Normalization
- 893002001 CHILE Normalization
- 893002101 VENEZUELA Normalization
- 893002301 BRAZIL Normalization

- 893002401 SPAIN Normalization
- 893002201 MEXICO Normalization
- 893002501 COLOMBIA Normalization
- 893002601 PERU Normalization
- 893002701 HONGKONG Normalization
- 893002801 CHINA Normalization
- 893002901 JAPAN Normalization
- 893003001 KOREA Normalization
- 893003101 TAIWAN Normalization
- 893003201 PHILLIPINES Normalization
- 893003301 SINGAPORE Normalization
- 893003401 AUSTRALIA Normalization

Turning on a feature that is already on or turning off a feature that is already off has no effect.

Before the LNP ELAP Configuration feature can be turned on, all cards that are running the **sccp**, **ebdadcm**, and **ebdablm** applications must be deleted.

Before the Intermediate Global Title Translation Load Sharing (IGTTLS) feature can be turned on, the GTT feature must be turned on (see the **chg-feat** command).

All IPSM cards in the system must be inhibited before the IP User Interface (Telnet) feature can be turned on or off.

All IPSM cards in the system must be inhibited before the EAGLE OA&M IP Security Enhancements feature can be turned on or off.

The **mtplprst** option must be enabled (see the **chg-stpopts** command) before the Origin-based MTP Routing feature can be turned on.

The Origin-based MTP Routing feature can not be turned on if any of the following unsupported cards are equipped in the system:.

- LIMDS0 Part Number 870-1009-xx
- LIMOCU Part Number 870-1010-xx
- LIMV35 Part Number 870-1012-xx
- ILA Part Number 870-1484-xx
- EILA Part Number 870-2049-xx
- LIM-E1 Part Number 870-1379-01
- ASM (Obsolete)
- Dual-Slot DCM Part Numbers 870-1984-xx

Before the Intermediate Global Title Translation Load Sharing (IGTTLS) feature can be turned on, each SCCP card in the system must have at least a 586 processor.

Only one of the optional parameters, not both, can be specified in the command.

After a Permanently On feature is turned on, it cannot be turned off with this command. All controlled features with quantity feature access keys (like LNP ported TNs) and the following features are Permanently On features:

- LNP ELAP Configuration
- Equipment Identity Register (EIR)
- 15 Minute Measurements
- ANSI/ITU/China SCCP Conversion
- GSM MAP Screening (GMS)
- Enhanced GSM MAP Screening (EGMS)
- Spare Point Code Support
- GSM MAP SRI Redirect for Serving HLR
- ISUP NP with EPAP
- Origin-Based MTP Routing
- Origin-based SCCP Routing

Before the 15 Minute Measurements feature can be turned on,

- The Measurements Platform feature must be turned on (see the **chg-feat** command).
- The Measurements Platform collection option must be enabled (see the **chg-measopts** command).

Before the 15 Minute Measurements feature can be turned on, at least one MCPM card must be in the IS-NR state in the system.

The 15 Minute Measurements feature cannot be turned on when 30 minute measurements collection is in progress.

Notes

None.

Output

chg-ctrl-feat:partnum=893xxxxxx:status=on

```
rlghncxa03w 04-01-05 16:40:40 EST EAGLE 31.3.0
CHG-CTRL-FEAT: MASP A - COMPLTD
```

;

chg-ctrl-feat:partnum=893xxxxxx:alarm=clear

```
rlghncxa03w 04-01-05 16:40:40 EST EAGLE 31.3.0
CHG-CTRL-FEAT: MASP A - COMPLTD
```

;

```
rlghncxa03w 04-01-05 16:40:40 EST EAGLE 31.3.0
0367.0181 * SYSTEM Temp Key(s) expiration alarm cleared.
```

;

chg-db

Change Database

Use this command to manipulate elements of the database.



CAUTION: When this command is entered, all other database operations are locked out while the command executes. The only chg-db actions that are not locked out are the LNP electronic bulk download operations (beganld and canceledl).



CAUTION

CAUTION: The cards that run both the active and standby OAM reboot whenever the restore, import, or finishedl operations complete successfully. When a database is repaired successfully, the card with the standby OAM reboots. This action purges old database data from memory and reloads the MASPs with the new data. When the card with the active OAM reboots, all terminals reinitialize, automatically logging off all users. Depending on the new database, the terminals may be initialized to a different configuration, and user IDs and passwords may change.

Keyword: chg-db

Related Commands: copy-meas, rept-stat-db

Command Class: System Maintenance

Parameters

:action= (mandatory)

The database management action.



CAUTION

CAUTION: These parameter values (except **beginedl**, **canceledl**, or **finishedl**) can cause loss of synchronization of LNP databases unless you inhibit the OAP terminal ports before entering the **chg-db** command with these parameters. Refer to the *Database Administration Manual - System Management* for procedures using these command parameters.

Range: backup, repair, restore, import, beginedl, canceledl, finishedl

backup— Makes a copy of the database from the current data partitions to the backup partitions on both fixed disks or from the active fixed disk to the backup partition on the removable cartridge on the MDAL card

repair— Copies the current and backup databases from the active to the standby fixed disk.

restore— Copies the backup partitions to the current data partitions on both fixed disks, or copies the database on the removable cartridge on the MDAL card to the current partitions on both fixed disks.



CAUTION

CAUTION: The **action=restore** parameter initiates an emergency recovery procedure and requires the **init-sys** command to download the restored database to all the cards in the system.

import— Copies the LNP database from a removable cartridge created at the LSMS to current partitions on both fixed disks. The **import** parameter is used to manually load the LNP database from the LSMS when the LNP is first brought into service or when resynchronization of the LNP database with the LSMS database is needed.



CAUTION

CAUTION: The imported database must be loaded onto all TSMs in the system. The preferred method is to take each TSM out of service using the **rmv-card** command then put it back into service using the **rst-card** command until all the TSMs have been reloaded.



CAUTION

CAUTION: The following method of initialing cards should be used only in emergency situations: all the TSMs can be initialized at the same time using the **init-card:appl=sccp** command. This method not only loads the imported LNP database onto the TSMs at the same time, but takes all the TSMs out of service and the LNP subsystem offline.

beginedl— Signals that an electronic bulk download of the LNP database from the LSMS can proceed. The LSMS LNP data is downloaded to the RAM memory of the

Bulk Load Module (BLM) card. The command performs various checks to ensure that the system is ready to receive the data from the LSMS.

canceledl — Signals that the LNP database resident in the BLM card should not be copied to the OAM fixed disks, but instead should be discarded. The command causes the BLM card to reboot in order to reload a fresh copy of current LNP database.

finishedl — Signals that an electronic bulk download of the LNP database from the LSMS is completed; specifically, that the LNP database currently resident in the BLM's memory should be copied to the OAM fixed disks, overwriting the current LNP database. The command performs various checks to ensure the BLM's LNP database is acceptable prior to copying it to fixed disk. During the execution of **finishedl**, LNP database provisioning is blocked.

:dest= (optional)

Destination drive. This parameter provides the option to back up the database to the fixed or removable drive.

Range: **remove, fixed**

Default: **fixed**

:force= (optional)

Force indicator. Specify **force=yes** with the **action=canceledl** parameter. This parameter prevents the inadvertent destruction of the downloaded LSMS LNP database currently resident in the BLM card.

Range: **yes, no**

Default: **no**

:src= (optional)

Source drive. This parameter provides the option to restore the database from the fixed or removable drive.

Range: **remove, fixed**

Default: **fixed**

Example

```
chg-db:action=backup:dest=fixed
chg-db:action=backup:dest=remove
chg-db:action=restore:src=fixed
chg-db:action=restore:src=remove
chg-db:action=repair
chg-db:action=import
chg-db:action=beginedl
chg-db:action=finishedl
chg-db:action=canceledl:force=yes
```

Dependencies

NOTE: Before issuing a **chg-db:action=import** command, be sure to familiarize yourself with the information in Chapter 9 "Manual LSMS to STP Bulk Download" in the *LNP Database Synchronization Manual*.

NOTE: Before issuing the **chg-db:action=beginedl/canceledl/finishedl** commands, be sure to familiarize yourself with the procedures in Chapter 3 "Preparing the Eagle for High-Speed Operations," in the *LNP Database Synchronization Manual*.


The **chg-db** command cannot be entered while the system is in upgrade mode.

When a removable disk is involved in the operation, the removable disk must meet the following criteria:

- Be accessible and ready in the drive.
- Be formatted as a system removable disk, not a measurement removable disk.


The **dest** parameter can be specified only when **action=backup**. If the **dest=fixed** parameter is specified, or the **dest** parameter is not specified, the database on the current partition of the fixed disk is copied to the backup partition of the fixed disk. This action is shown in Figure 5-1.

Figure 5-1. The **chg-db:action=backup:dest=fixed** Command

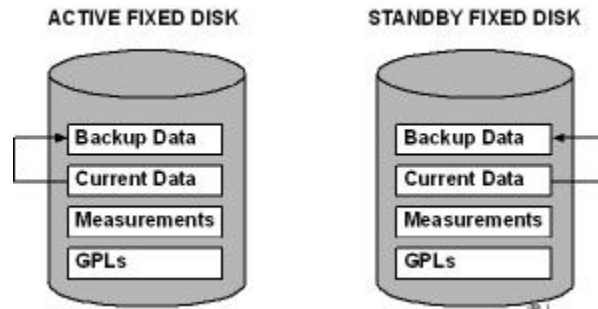

If the **dest=remove** parameter is specified, the database on the current partition of the active TDM fixed disk is copied to the removable cartridge in the MDAL. This action is shown in Figure 5-2.


Figure 5-2. The **chg-db:action=backup:dest=remove** Command

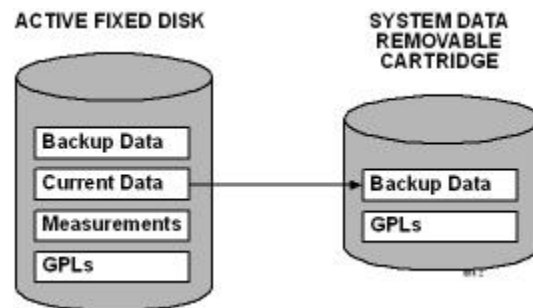

The current database partition of both fixed disks must be free of integrity violations (for example, incoherency, inconsistency, and data corruption) when **action=backup** is specified.

The **src** parameter can be used only when **action=restore**. To restore the database, if the **src=fixed** parameter is specified or the **src** parameter is not specified, the backup partition of each fixed disk is copied to the current partition of the fixed disk. This action is shown in Figure 5-3.


Figure 5-3. The **chg-db:action=restore:src=fixed** Command

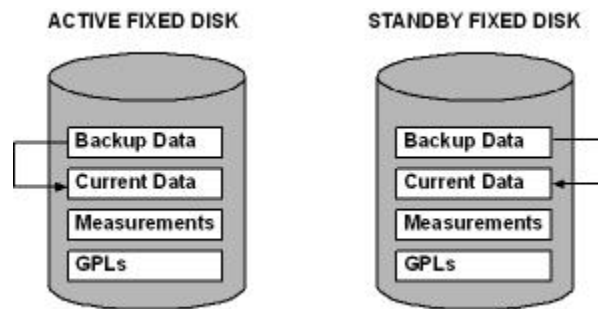

The backup database partition of both fixed disks must be coherent when **chg-db:action=restore:src=fixed** is specified.

If the **src=remove** parameter is specified, the database on the removable cartridge is copied to the current partitions on both the active and standby fixed disks. This action is shown in Figure 5-4.


Figure 5-4. The **chg-db:action=restore:src=remove** Command

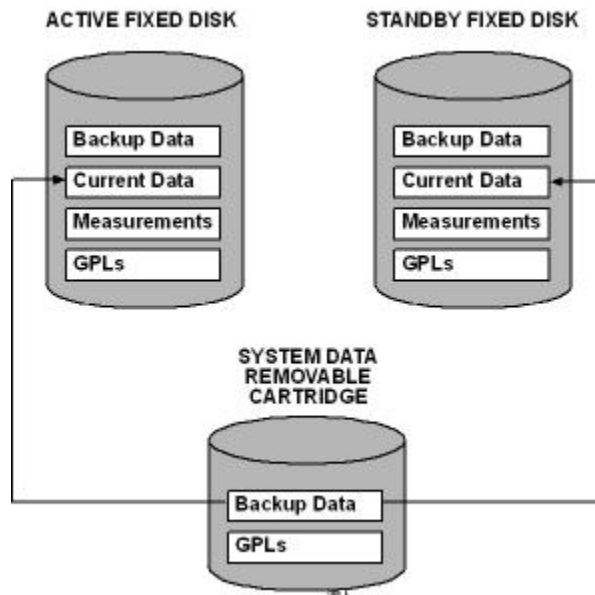

The database on the removable cartridge must be coherent when **action=restore:src=remove** is specified.


If the **action=repair** parameter is specified, the current and backup database partitions are copied from the active fixed disk to the standby fixed disk. This action is shown in Figure 5-5.

Figure 5-5. The **chg-db:action=repair** Command

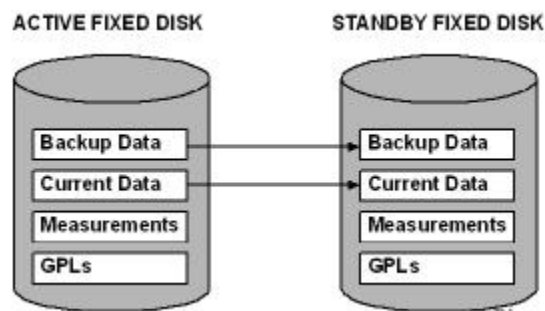

The current and backup database partitions of the active fixed disk must be free of integrity violations (for example, incoherency and data corruption) when **action=repair** is specified.

If the **action=import** parameter is specified, an LNP database is copied from a removable created by the LSMS to the current partition of both fixed disks. Figure 5-6 illustrates this action.

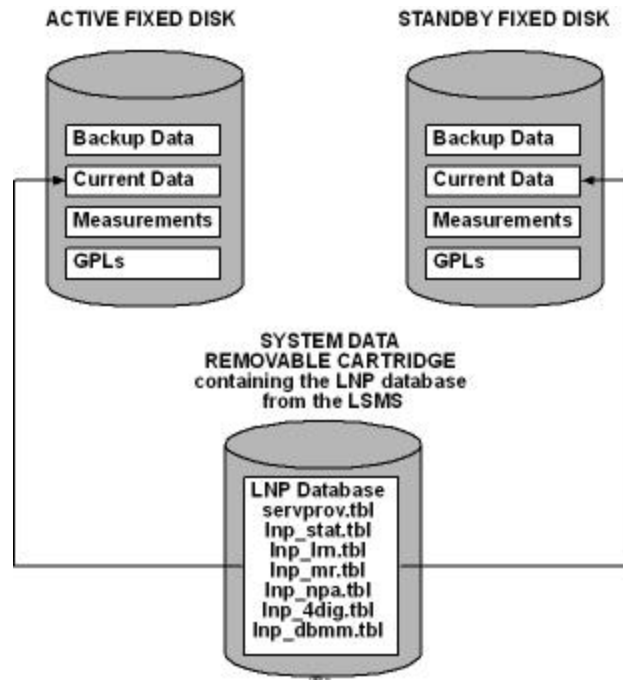Figure 5-6. The **chg-db:action=import** Command

The current database partitions of the active and standby fixed disks must be free of integrity violations (for example, incoherency and data corruption) when the **action=import** parameter is specified.


The LNP feature must be on for use with OAP before the **action=import**, **beginedl**, **finishedl**, or **canceledl** parameter can be specified. Verify that the LNP feature is on by entering the **rtrv-ctrl-feat** command. In the output:

- If the *LNP ported TNs* quantity is not listed, the LNP feature is not on.
- If the LNP ELAP Configuration controlled feature is not listed or is turned off, and the quantity for the *LNP ported TNs* entry is less than or equal to 12,000,000, the LNP feature is turned on for use with OAP.
- If the LNP ELAP Configuration controlled feature is turned on, the LNP feature is turned on for use with ELAP and not with OAP.

Refer to “Activating the LNP Feature” in Chapter 2 of the *LNP Feature Activation Guide*.

If the **chg-db:action=beginedl** command is entered, part or all of the LNP database is transmitted via an ethernet connection from the LSMS to the RAM memory of the system’s Bulk Load Module (BLM) card. After the electronic bulk download of the LNP data from the LSMS is completed and is resident in the BLM’s memory, the **chg-db:action=finishedl** command copies the database to the OAM fixed disks, overwriting the current LNP database. This process is shown in Figure 5-7.

Figure 5-7. The **chg-db:action=beginedl/finshedl** Command

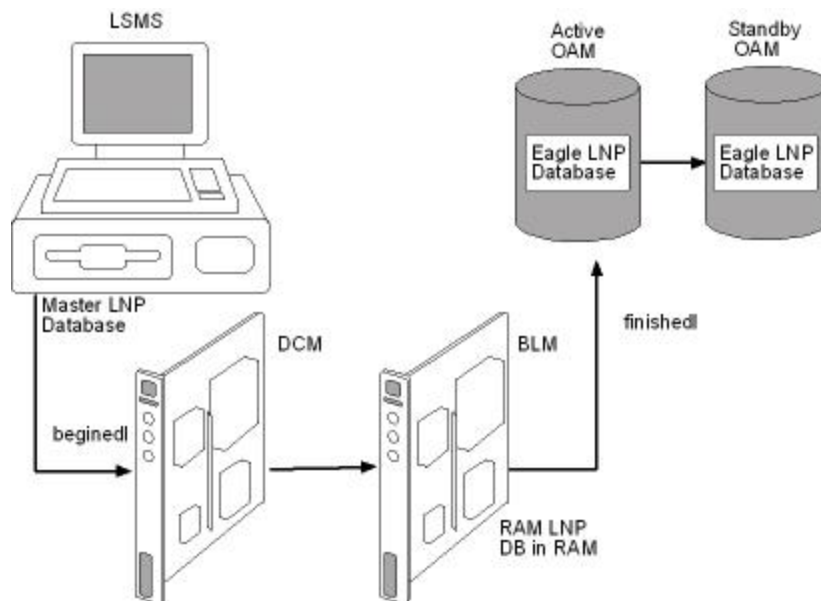

To specify the **chg-db:action=beginedl** command, the following conditions must be met:

- The current database on the active and standby OAM fixed disks must be coherent.
- The BLM and DCM cards must be provisioned and their primary state (PST) must be IS-NR.
- The LNP database currently resident in the BLM card must be at the same level as the current database on the active OAM and must be coherent.
- A **chg-db:action=beginedl/finshedl/canceledl** command must not currently be in effect.

To specify the **chg-db:action=finshedl** command, the following conditions must be met:

- The BLM card must be provisioned and its primary state (PST) must be IS-NR.
- The download from the LSMS to the BLM card must have completed.
- The database in the BLM card must be coherent.
- There cannot be a measurement preparation operation in progress.

To specify the **chg-db:action=canceledl** command, a **chg-db:action=beginedl** command must currently be in effect.

The **force** parameter can be used only with the **chg-db:action=canceledl** command. The **force=yes** parameter must be specified whenever the **action=canceledl** operation is specified.

If the LNP ELAP Configuration controlled feature is turned on, the **beginedl**, **finshedl**, and **canceledl** parameter values are no longer available. All data from the LSMS is transmitted over an ethernet connection to the active ELAP (Eagle LNP Application Processor) rather than a BLM. The ELAP automatically distributes the changes to LNP databases or DSM cards in the EAGLE 5 ISS; it is not necessary to identify a beginning and end for high-speed transmissions. For more information, refer to the *LNP Database Synchronization Manual*.

Notes

When the **chg-db** command is entered with the **action=backup** parameter, the following message appears when an audit is in progress:

Command In Progress: waiting for database audit to complete

The command executes when the audit is finished.

Should the EAGLE 5 ISS LNP database become severely out of sync with the LSMS master LNP database (such as, a long-duration communications failure between the EAGLE 5 ISS and LSMS), then you can use one of the following methods to resynchronize the EAGLE 5 ISS from the master LSMS database:

- The **chg-db:action=import** command (cartridge-based method)
- The **chg-db:action=beginedl** and **chg-db:action=finishedl** command (ethernet-based method)

If the LNP ELAP Configuration controlled feature is turned on, the LSMS can accomplish the resynchronization with no action required at the EAGLE 5 ISS. For more information, refer to the *LNP Database Synchronization Manual*.

After an **action=import** or **action=finishedl** operation completes, the following alarm is raised for all operational SCCP cards:

```
* 5022.0429 * CARD xxxx SCCP LNP database is inconsistent
```

This alarm indicates that all SCCP cards must be reloaded to receive the newly imported LNP database.

The **action=import** or **action=finishedl** operations do not affect the database level. Therefore, these operations do not require that you reinitialize non-SCCP networking cards. Only SCCP cards must be reinitialized.

If the **chg-db:action=finishedl** command is entered, but no modifications have been made to the LNP database in the BLM card (that is, the LSMS did not apply any updates to the database), then the results are as follows:

- The database will not be uploaded from the BLM card to the OAM fixed disks.
- The following output message appears:

```
FINISHEDL : MASP A - LNP DB in BLM card not modified by LSMS.
```

```
No upload will occur.
```

When the LNP ELAP Configuration controlled feature is not turned on, the following components must be in place before the LNP database can be electronically downloaded from the LSMS:

- A single BLM card running the **ebdablm** GPL must be provisioned and must be operational (IS-NR). This card is populated with the current LNP database, and the download must have completed. The card does not go to the IS-NR state until the download is completed.
- A single DCM card running the **ebdadcm** GPL must be provisioned and must be operational (IS-NR).
- An ethernet connection between the LSMS and DCM must exist.
- The DCM card must be provisioned with the necessary TCP/IP configuration information so that the card can establish a data connection with the LSMS.

Performance

For **chg-db** command activities using the **backup**, **restore**, **repair**, and **import** parameter values, the performance time varies depending on the number of records allocated for the database, system activity, and system setup. These operations should typically take no longer than 30 minutes. If one

of these operations exceeds one hour, contact Tekelec Technical Services for assistance at (888) FOR-TKLC.

The performance time required for enhanced bulk download activities varies depending on the number of records provisioned in the database and the quality of the transmission and connections. Table 5-10 lists the performance range for enhanced bulk download activities.

Table 5-10. Performance Range for Enhanced Bulk Download Activities

Activity	Typical Performance per Million Records	Maximum Time* per Million Records
Uploading a database from the BLM to the OAM fixed disks (active and standby).	10 minutes	15–20 minutes
Downloading a database from the LSMS to the BLM (includes extracting and formatting the entries on the LSMS, transmitting the data from the LSMS to the EAGLE 5 ISS and inserting the entries in the database).	75 minutes	90 minutes
*If an activity exceeds the maximum time, contact Tekelec Technical Services for assistance at (888) FOR-TKLC.		

Output

The output of the various actions of the **chg-db** command is shown in the following examples.

In addition to the output shown in the examples for the **action=beginedl** and **action=canceledl** actions, messages such as UIMs might appear at your terminal.

chg-db:action=backup

```
BACKUP (FIXED): MASP B - Backup starts on active MASP.
BACKUP (FIXED): MASP B - Backup on active MASP to fixed disk complete.
BACKUP (FIXED): MASP B - Backup starts on standby MASP.
BACKUP (FIXED): Backup on standby MASP to fixed disk complete.
```

chg-db:action=restore

```
RESTORE (FIXED): MASP A - Restore starts on active MASP.
RESTORE (FIXED):MASP A - Restore from fixed disk on active MASP complete.
RESTORE (FIXED): MASP A - Restore starts on standby MASP.
RESTORE (FIXED):MASP A - Restore from fixed disk on standby MASP complete.
RESTORE (FIXED): MASP A - MASP(s) will reboot to load data.
```

chg-db:action=backup:dest=remove

```
BACKUP (REMOVABLE) : MASP A - Backup starts on active MASP.
BACKUP (REMOVABLE) : MASP A - Backup to removable cartridge complete.
```

chg-db:action=backup:dest=fixed

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

chg-db:action=restore:src=remove

```
RESTORE (REMOVABLE) : MASP A - Restore starts on active MASP.
RESTORE (REMOVABLE) : MASP A - Restore starts on standby MASP.
RESTORE (REMOVABLE) : MASP A - MASP(s) will reboot to load data.
RESTORE (REMOVABLE) : MASP A - Restore from removable cartridge complete.
```

chg-db:action=restore:src=fixed

```
RESTORE (FIXED) : MASP A - Restore starts on active MASP.
RESTORE (FIXED) : MASP A - Restore from fixed disk on active MASP complete.
RESTORE (FIXED) : MASP A - Restore starts on standby MASP.
RESTORE (FIXED) : MASP A - MASP(s) will reboot to load data.
RESTORE (FIXED) : MASP A - Restore from fixed disk on stdby MASP complete.
```

chg-db:action=repair

```
REPAIR: MASP A - Repair starts on standby MASP.
REPAIR: MASP A - Standby MASP will reboot to load data.
REPAIR: MASP A - Repair from fixed disk complete.
```

chg-db:action=import

```
IMPORT : MASP A - Import (LNP) starts on active MASP.
IMPORT : MASP A - Import (LNP) on active MASP complete.
IMPORT : MASP A - Import (LNP) starts on standby MASP.
IMPORT : MASP A - Import (LNP) on standby MASP complete.
IMPORT : MASP A - MASP(s) will reboot to reload data.
```

chg-db:action=beginedl

```
BEGINEDL : MASP A - Electronic Bulk Download from LSMS may proceed.
Note: Issue CHG-DB:ACTION=FINISHEDL or CANCELEDL to resume.
```

chg-db:action=finishedl

```
FINISHEDL : MASP A - Upload (LNP) starts on active MASP.
FINISHEDL : MASP A - Upload (LNP) on active MASP complete.
FINISHEDL : MASP A - Upload (LNP) starts on standby MASP.
FINISHEDL : MASP A - Upload (LNP) on standby MASP complete.
FINISHEDL : MASP A - MASP(s) will reboot to load data.
```

chg-db:action=finishedl

FINISHEDL : MASP A - LNP DB in BLM card not modified by LSMS.
No upload will occur.

chg-db:action=canceledl

CANCELEDL : MASP A - LNP DB upload will not occur.
Note: BLM will now reboot to reload LNP DB.

chg-dcmps**Change Database Communication Module
Parameter Set**

Use this command to change the set of generic timers and parameters used by the system application.

Keyword: **chg-dcmps**

Related Commands: **rtrv-dcmps**

Command Class: Database Administration

Parameters

:set= (mandatory)

The set number.

Range: **1-9**

:parm= (optional)

The parameter number within the timer.

Range: **1-10**

parm=1 is used for the Type of Service (TOS) socket option.

parm=2 is used for the Nagle's Algorithm socket option.

parm=3 is used for the Default SORP flags socket option.

The remaining parameter values are unused.

Default: No change to current value

:pvalue= (optional)

The value to be set for this parameter if the **parm** parameter is specified.

Range: **0-4294967295**

Table 5-11 shows valid **pvalue** parameter values for each **parm** parameter value.

Table 5-11. Valid pvalue Values for chg-dcmps

parm	pvalue bits	Valid Range
1	0-7	0-255
2	0	0=Disabled 1=Enabled
3	0-31	0x0 – 0xFFFFFFFF

Default: No change to current value

:srcset= (optional)

The source set of the copy.

Range: **1-10**

Default: Empty

:timer= (optional)

The timer number within the set.

Range: 1-10

timer=1 is the time in milliseconds between sending of TEST messages by NE.

timer=2 is the time in milliseconds to wait for a response to a TEST message.

timer=3 is the time in milliseconds to continue processing received service messages after NE is prohibited.

timer=4 is the time in milliseconds between sending of MONI messages by NE.

The remaining timer numbers are unused.

Default: No change to current value

:tvalue= (optional)

The value the timer will be set to, in milliseconds.

Range: 0-4294967275

Default: No change to current value

Example

```
chg-dcmps:set=1:srcset=10
```

Dependencies

At least one of the following optional parameters must be specified: **timer**, **parm**, **srcset**.

If the **srcset** parameter is specified, no other optional parameters can be entered.

If the **timer** parameter is specified, the **tvalue** parameter must be specified.

If the **parm** parameter is specified, the **pvalue** parameter must be specified.

Notes

There are 10 IP parameter sets. Each IP parameter set has 10 timers.

IP parameter set number 10 contains parameter set default values. It cannot be changed.

Output

```
chg-dcmps:set=1:srcset=10
```

```
rlghncxa03w 03-02-05 15:35:05 EST EAGLE 28.1.0
```

```
CHG-DCMPS: MASP A - COMPLTD
```

```
;
```

chg-dstn

Change Destination

Use this command to change the characteristics of the point codes that are considered destinations from this signal transfer point (STP). A destination does not have to be an adjacent signaling point, but the system must be able to route traffic to this destination.

Keyword: **chg-dstn**

Related Commands: **chg-rte**, **dlt-dstn**, **dlt-rte**, **ent-dstn**, **ent-rte**, **rept-stat-dstn**, **rtrv-dstn**, **rtrv-rte**

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:dpc= (mandatory)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: **dpca**

Range: p-, 000-255, *

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p**-

The asterisk value (*) is not valid for the *ni* subfield.

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001–005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006–255**.

The point code **000-000-000** is not a valid point code.

:dpc/dpca/dpci/dpcn/dpcn24= (mandatory)

Destination point code.

:dpci= (mandatory)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:dpcn= (mandatory)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:dpcn24= (mandatory)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:aliasa= (optional)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Range: **000-255, none**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

Enter **none** to delete the point code.

The point code **000-000-000** is not a valid point code.

:aliasa/aliasi/aliasn/aliasn24= (optional)

Alias point code.

:aliasi= (optional)

ITU international alias point code with subfields *zone-area-id*. This parameter is not valid if an ITU international (**dp ci**) point code is entered. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255, none**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

zone—**0-7**

area—**000-255**

id—**0-7**

Enter **none** to delete the point code.

The point code **0-000-0** is not a valid point code.

:aliasn= (optional)

ITU national alias point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfnti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz, none**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

Enter **none** to delete the point code.

:aliasn24= (optional)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255, none**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

Enter **none** to delete the point code.

:bei= (optional)

Broadcast exception indicator. This parameter specifies whether the STP broadcasts network management messages to adjacent signaling points. The network management messages contain information about the indicated cluster and any of that cluster's member signaling points that are on its exception list. The messages whose broadcast is determined by this parameter are:

- **TFP**—transfer prohibited
- **TCP**—transfer cluster prohibited

Range: **yes, no**
 yes — Network management messages are not broadcast
 no — Network management messages are broadcast

Default: No change to the current value

:cli= (optional)

The Common Language Location Identifier assigned to this destination.

Range: ayyyyyyyyyy
 1 alphabetic character followed by 10 alphanumeric characters

Default: No change to the current value

:lei= (optional)

Exception-list exclusion indicator, for cluster destinations only. This parameter specifies whether the system *excludes* or *includes (maintains)* a dynamic status exception list (x-list) for each cluster route used to reach the member signaling points that make up the cluster.

Range: **yes, no**
 yes — Do not maintain a dynamic status x-list
 no — Maintain a dynamic status x-list

Default: No change to current value.

:ncai= (optional)

Nested cluster allowed indicator. Specifies whether the route to the cluster point code can be different for provisioned members of the cluster. A point code is a member of a cluster point code if it has the same network identifier (NI) and network cluster (NC) values as the cluster point code. This parameter can only be specified for cluster point codes. Nested cluster routing is allowed if this parameter is set to **yes** and the CRMD and NCR features are turned on.

Range: **yes, no**
 yes — The cluster point code is a nested cluster point code. Point codes that are members of this cluster point code can be assigned to route sets that are different from the route set assigned to the cluster point code.
 no — The cluster point code is not a nested cluster point code. Point codes that are members of this cluster point code must be assigned to the same route set assigned to the cluster point code.

Default: Current value.

:spc= (optional)

ANSI secondary point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: *spca***Range:** *p-*, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*p-*

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001-005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006-255.

The point code 000-000-000 is not a valid point code.

Default: No change.**:spc/spca/spci/spcn/spcn24=** (optional)

Secondary point code.

:spci= (optional)

ITU international secondary point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: *s-, p-, ps-, 0-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s-, p-, ps-*

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

Default: No change.**:spcn=** (optional)

ITU national secondary point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfnti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: *s-, p-, ps-, 0-16383, aa-zz*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*s-, p-, ps-*

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

Default: No change.**:spcn24=** (optional)

24-bit ITU national secondary point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range: *p-, 000-255*

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—*p-*

msa—000-255
 ssa—000-255
 sp—000-255

Example

To change the cli of destination 111-222-111 to rlghncxa01a:

chg-dstn:dpc=111-222-111:cli=rlghncxa01a

To change the national alias of ANSI destination 111-222-111 to 321:

chg-dstn:dpc=111-222-111:aliasn=321

To change the exception-list exclusion indicator for cluster 20-2-* to yes:

chg-dstn:dpc=20-2-*:elei=yes

To change an existing destination to remove the SPC:

chg-dstn:dpc=20-2-2:spc=none

To change an existing destination to contain an SPC:

chg-dstn:dpc=20-2-2:spc=5-5-5

To change Nested Cluster Allowed Indicator for cluster 20-2-* to yes:

chg-dstn:dpc=20-2-*:ncai=yes

To change a network destination:

chg-dstn:dpc=25-*-*:cli=tklc

To change the bei parameter value of ITU national destination 8111-aa to yes:

chg-dstn:dpcn=8111-aa:bei=yes

To change the bei parameter value of 24-bit ITU-N destination 15-100-10 to yes:

chg-dstn:dpcn24=15-100-10:bei=yes

To change the International alias of 24-bit ITN-N destination 12-12-12 to 5-5-5:

chg-dstn:dpcn24=12-12-12:aliasi=5-5-5

To change the 24-bit ITN-N alias of International destination 1-6-1 to 9-9-9:

chg-dstn:dpci=1-6-1:aliasn24=9-9-9

To change an existing 24-bit ITN-N destination to contain a 24-bit ITN-N SPC:

chg-dstn:dpcn24=12-12-12:spcn24=25-25-25

To change ITU-I spare destination point code s-2-100-1:

chg-dstn:dpci=s-2-100-1:spci=s-2-129-9:aliasa=121-120-120:aliasn=s-129

To change ITU-N spare destination point code s-231:

chg-dstn:dpci=s-231:spcn=129:aliasa=120-120-122:aliasi=s-2-123-2

Dependencies

NOTE: A *full point code* contains numerical values for all three segments of the point code.

At least one optional parameter must be specified.

The specified destination point code value must already be defined in the Destination point code table.

The destination address must be a full point code, a network destination, or a cluster point code.

The ANSI self-ID destination point code for the STP must be defined before ANSI destinations can be changed.

The ITU-I self-ID destination point code for the STP must be defined before ITU-I destinations can be changed.

The ITU-N self-ID destination point code for the STP must be defined before ITU-N destinations can be changed.

The Spare Point Code Support feature must be enabled before the spare point code prefix **s-** can be specified for an ITU-I or ITU-N destination, secondary, or alias point code.

If the **dpcn** or **aliasn** parameter is specified, the format must match the format that was assigned with the **chg-stpopts:npcfmti** parameter.

When the 7000 Routesets or 8000 Routesets feature quantity is enabled, the total number of provisioned aliases in the system cannot exceed 8000.

Alias point codes are allowed only for full point code destinations.

Alias point codes for destinations must be full point codes.

A specified alias cannot already be defined as a destination address.

Alias ANSI point codes cannot be members of a cluster or network destination.

The specified alias network type must be different from the destination point code network type.

A 24-bit ITU-N point code cannot have:

- A 14-bit ITU-N alias point code
- An ANSI alias point code

A 24-bit ITU-National point code can have an ITU-I point code alias. This allows conversion of 14-bit ITU-I routing label to 24-bit routing label and vice versa.

An ANSI or ITU-I point code can have either a 14-bit ITU-N alias or a 24-bit ITU-N alias, but not both.

A 14-bit ITU-N point code cannot have a 24-bit ITU-N alias point code.

An ANSI point code cannot have a 24-bit ITU-N alias point code.

If an ITU-I point code is specified, either the **aliasn** or the **aliasn24** parameter can be specified, but not both.

Cluster destinations are allowed only if the CRMD feature is turned on.

The **ncai** parameter can be specified only for cluster destinations.

The **elei** parameter can be specified only for cluster destinations (for example, **dpc=ni-nc-***).

The **bei** parameter can be specified only for cluster destinations.

The NCR (Nested Cluster Routing) feature must be turned on before the **ncai** parameter can be specified.

Network routing is valid only if the Network Routing (NRT) feature is turned on.

When using network routing, if the destination point code has a value of * in the *nc* subfield, the *ncm* subfield must also be * (for example, **dpc=21-*-***).

If a provisioned nested cluster point code is being changed to a non-nested cluster point code (**ncai=no**), previously provisioned members of the cluster must have the same route set.

If a provisioned non-nested cluster point code is being changed to a nested cluster point code (**ncai=yes**), the maximum number of provisioned nested clusters must be no greater than 500.

If specified, the **spc** parameter value must already be configured as a secondary point code in the Secondary Point Code table.

If specified, the **spc** parameter value must be a full point code (except when **spc=none**).

If the **spc** parameter is specified, the **domain=ss7** parameter must be specified.

If the **spc** parameter is specified (except when **spc=none**), the specified destination point code (**dpc**) must be a full point code.

If the **spc** parameter is specified (except when **spc=none**), its network type must match the network type for the destination point code (**dpc**).

If a new **cli** for the destination point code is specified, it cannot match the **cli** of the system.

If the corresponding destination for the specified destination point code is an adjacent signaling point (matched a Far End point code in its linkset entity set), the **cli** of the specified destination point code cannot be assigned to any other destination address.

Alias point codes are supported only for destinations in the SS7 domain (**domain=ss7**).

A reserved word cannot be specified for the destination identifier (**cli**).

If an ITU national destination is being changed and the ITUDUPPC feature is turned on, the following applies depending on whether the destination uses an SPC (secondary point code):

If the destination does *not* use an SPC, the group code of the destination must be the same as the group code of the ITU national true point code.

If the destination uses an SPC, then the group code of the destination must match the group code of the SPC.

For example, if the ITU national true point code has a group code of **ee**, then destinations with group codes of **ee** can be added without using an SPC. Destinations with a group code of **ff**, however, must use an SPC with a group code of **ff**.

Notes

The **domain** parameter of a destination (see the **ent-dstn** command) cannot be changed with this command. To change the **domain** parameter, the destination must be removed with the **dlt-dstn** command and re-entered with the **ent-dstn** command.

In this command, only ITU-international and ITU national point codes and aliases support the spare point code subtype prefix (**s-**). Only ITU-international and ITU national point codes support the private and spare point code subtype prefix (**ps-**). All of the point code types support the private (internal) point code subtype prefix (**p-**). Aliases do not support the private (internal) point code prefix.

Output

The following example shows the display of the destination memory space accounting command completion response with the NCR, NRT, and CRMD features off (disabled) and all Routes and Routesets features off (disabled):

```
chg-dstn:dpca=111-222-111:aliasn=321
rlghncxa03w 04-08-17 15:35:05 EST EAGLE 31.8.0
Destination table is (10 of 2000) 1% full
Destination table is (10 of 2000) 1% full
Alias table is (8 of 12000) 1% full
CHG-DSTN: MASP A - COMPLTD
;
```

The following example shows the display of the destination memory space accounting command completion response with the NCR, NRT, and CRMD features off (disabled) and the 5000 Routes feature on:

```
chg-dstn:dpca=111-222-111:aliasn=321
rlghncxa03w 04-08-18 08:29:15 EST EAGLE 31.8.0
Destination table is (10 of 5000) 1% full
Alias table is (8 of 12000) 1% full
CHG-DSTN: MASP A - COMPLTD
;
```

The following example shows the display of the destination memory space accounting command completion response with one or more of the NCR, NRT, or CRMD features on and the DSTN5000 (5000 Routes) feature on:

```
chg-dstn:dpca=111-222-111:aliasn=321
rlghncxa03w 04-08-18 08:29:15 EST EAGLE 31.8.0
DESTINATION ENTRIES ALLOCATED: 5000
FULL DPC(s): 9
NETWORK DPC(s): 0
CLUSTER DPC(s): 1
TOTAL DPC(s): 10
CAPACITY (% FULL): 1%
ALIASES ALLOCATED: 12000
ALIASES USED: 8
CAPACITY (% FULL): 1%
X-LIST ENTRIES ALLOCATED: 500
CHG-DSTN: MASP A - COMPLTD
;
```

The following example shows the display of the destination memory space accounting command completion response with the NCR, NRT, and CRMD features off (disabled) and the 6000 Routesets feature on:

```
chg-dstn:dpca=111-222-111:aliasn=321
rlghncxa03w 04-08-18 08:29:15 EST EAGLE 31.8.0
Destination table is (60 of 6000) 1% full
Alias table is (8 of 12000) 1% full
CHG-DSTN: MASP A - COMPLTD
;
```

The following example shows the display of the destination memory space accounting command completion response with one or more of the NCR, NRT, or CRMD features and the 6000 Routesets feature on:

```
chg-dstn:dpca=111-222-111:aliasn=321
rlghncxa03w 04-08-18 08:29:15 EST EAGLE 31.8.0
DESTINATION ENTRIES ALLOCATED: 6000
```

```

FULL DPC(s):                46
NETWORK DPC(s):              1
CLUSTER DPC(s):              1
TOTAL DPC(s):                12
CAPACITY (% FULL):          1%
ALIASES ALLOCATED:           12000
ALIASES USED:                 8
CAPACITY (% FULL):           1%
X-LIST ENTRIES ALLOCATED:     500
CHG-DSTN: MASP A - COMPLTD
;

```

The following example shows the display of the destination memory space accounting command completion response with the NCR, NRT, and CRMD features off (disabled). When the 7000 Routesets quantity feature is on, the Destination table line shows "...of 7000" as it appears in the example. When the 8000 Routesets quantity feature is on, the Destination table line shows "...of 8000."

```

chg-dstn:dpca=111-222-111:aliasn=321
rlghncxa03w 04-08-18 08:29:15 EST EAGLE 31.8.0
Destination table is (60 of 7000) 1% full
Alias table is (8 of 8000) 1% full
CHG-DSTN: MASP A - COMPLTD
;

```

The following example shows the display of the destination memory space accounting command completion response with one or more of the NCR, NRT, or CRMD features on: When the 7000 Routesets quantity feature is on, the DESTINATION ENTRIES ALLOCATED line shows "8000" as it appears in the example. When the 7000 Routesets quantity feature is on, the DESTINATION ENTRIES ALLOCATED line shows "7000."

```

chg-dstn:dpca=111-222-111:aliasn=321
rlghncxa03w 04-08-18 08:29:15 EST EAGLE 31.8.0
DESTINATION ENTRIES ALLOCATED: 8000
FULL DPC(s):                  9
NETWORK DPC(s):                0
CLUSTER DPC(s):                1
TOTAL DPC(s):                  10
CAPACITY (% FULL):             1%
ALIASES ALLOCATED:             8000
ALIASES USED:                   8
CAPACITY (% FULL):             1%
X-LIST ENTRIES ALLOCATED:       500
CHG-DSTN: MASP A - COMPLTD
;

```

chg-e1

Change E1 Interface

Use this command to change an interface for an E1 card in the system:

- A 2-port E1 card
- An E1/T1 MIM card
- An HC-MIM card used as an E1 card or an SE-HSL card
- An E5-E1T1 card used as an E1 card or an SE-HSL card

The E1 port number on the card and the E1 card location in the system must be specified.

The CRC4, CAS, CCS, encoding, timing source, and NFAS signaling bit options can be set.

On HC-MIM and E5-E1T1 cards, E1 ports 1, 3, 5, and 7 (master ports) can be independently channel bridged with their adjacent even-numbered E1 ports 2, 4, 6, and 8 (slave ports) to allow non-signaling data pass-through.

Keyword: **chg-e1**

Related Commands: **dlt-e1, ent-e1, rtrv-e1, tst-e1**

Command Class: Database Administration

Parameters

:e1port= (mandatory)

E1 port number. The value must be an E1 port that has already been configured with an E1 interface on the specified E1 card.

Range: **1- 8**

Ports 3 - 8 can be specified only for HC-MIM and E5-E1T1 cards.

Any 2 of the 8 ports on an HC-MIM card can be specified when the card is used as an SE-HSL card.

Any 1 of the 8 ports on an E5-E1T1 card can be specified when the card is used as an SE-HSL card.

:loc= (mandatory)

Card address. The card location as stenciled on the shelf of the system.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

:cas= (optional)

CAS (**on**) or CCS (**off**) indicator.

Range: **on, off**

CAS cannot be specified for HC-MIM cards or E5-E1T1 cards.

Default: No change in current value

:chanbrdg= (optional)

Port bridging status. This parameter indicates whether an odd-numbered E1 port on either an HC-MIM card or an E5-E1T1 card is channel bridged with its adjacent even-numbered E1 port for non-signaling data pass through.

Range: **on, off**

Default: **off**

:crc4= (optional)

CRC4 enable or disable indicator.

Range: **on, off**

Default: No change in current value

:e1tsel= (optional)

Timing source. This parameter indicates a master (**external**) or slave (**line**) timing source, or a timing source recovered from the paired master port for channel bridged slave ports.

Range: **line, external, recovered**

Default: No change in current value

:encode= (optional)

Indicator for use of HDB3 or AMI encoding/decoding.

Range: **hdb3, ami**

AMI encoding is not supported for the 2-port E1 card. AMI encoding is supported for the E1/T1 MIM card, the HC MIM card, or the E5-E1T1 card used as an E1 card.

Default: No change in current value

:minsurate= (optional)

Minimum signal unit rate. This parameter indicates the minimum number of SUs present on a link that are uniformly distributed. This parameter is valid only when the **linkclass=unchan** parameter is specified in the E1 interface.

Range: **500-2000**

Default: No change in current value.

:si= (optional)

Value of two Spare International bits of NFAS data.

Range: **0-3**

Default: No change in current value

:sn= (optional)

Value of five Spare International bits of NFAS data.

Range: **0-31**

Default: No change in current value

Example

chg-

e1: loc=1205: e1port=1: crc4=off: cas=on: encode=hdb3: e1tsel=external: si=2: sn=12

chg-e1: loc=1205: e1port=2: cas=off: encode=ami

chg-e1: loc=1205: e1port=3: chanbrdg=on: e1tsel=recovered

chg-e1: loc=1205: e1port=1: minsurate=1000

Dependencies

At least one optional parameter must be specified.

The specified card location (**loc** parameter) must be equipped.

The card specified by the **loc** parameter must be a **lime1** card type.

The port specified by the **e1port** parameter must already be equipped with an E1 interface.

All signaling links serviced by the specified E1 card must be deactivated before the values for the **crc4**, **cas**, **encode**, and **e1tsel** parameters can be changed.

The **cas=on** parameter cannot be specified when timeslot 16 on the E1 card is being used by a signaling link.

The **cas=on** parameter cannot be specified for HC-MIM or E5-E1T1 cards.

The **encode=ami** parameter is supported only for the E1/T1 MIM card, HC-MIM card, or E5-E1T1 card used as an E1 card. The parameter is not supported for the 2-port E1 card.

The **chanbrdg** parameter can be specified only for HC-MIM cards and E5-E1T1 cards used as E1 cards (not as SE-HSL cards).

The **chanbrdg=on** parameter cannot be specified for even-numbered E1 ports on the HC-MIM cards and E5-E1T1 cards.

The timing source parameter **e1tsel** must be specified if **chanbrdg=on** is specified.

The **e1tsel=line** parameter cannot be specified if the specified HC-MIM port or E5-E1T1 E1 port is in channel bridging mode.

The **e1tsel=recovered** parameter can be specified only if the specified HC-MIM port or E5-E1T1 E1 port is in channel bridging mode.

When provisioning an odd-numbered E1 port of an HC-MIM card or E5-E1T1 card to channel bridging mode, **force=yes** must be specified if the adjacent even-numbered port is already provisioned.

The **minsurate** parameter can be specified only when the **linkclass=unchan** parameter is specified.

The **chanbrdg=on** parameter cannot be specified when the **linkclass=unchan** parameter is specified.

The **cas=on** parameter cannot be specified when the **linkclass=unchan** parameter is specified.

Channelized and un-channelized E1 ports (mixed mode) are not allowed on a single HC-MIM card or E5-E1T1 card. A card cannot be used as an SE-HSL card and either an HC-MIM card or an E5-E1T1 card at the same time.

All signaling links assigned to their adjacent even numbered ports must be deleted before provisioning the port into channel bridging mode.

The specified port cannot be changed since it is bridged with its adjacent odd numbered port (master port). The master port should be changed instead.

Notes

When **e1tsel=external** is specified, a user-supplied BITS clock is required.

External timing is derived from the EAGLE 5 ISS High-Speed Master Clock (1.544 MHz for T1 or 2.048 MHz for E1); therefore, the Master Timing feature is required. Line timing is derived from its received data stream, if present.

Output

chg-e1: loc=1205: e1port=2: cas=off: encode=ami

```
rlghncxa03w 04-01-20 09:07:58 EST EAGLE 31.3.0
CHG-E1: MASP A - COMPLTD
```

;

chg-eisopts

Change Eagle Support for Integrated Sentinel Options

Use this command to enable and disable the copy function associated with the EAGLE 5 Integrated Monitoring Support (E5IS) feature.

Keyword: **chg-eisopts**

Related Commands: **rtrv-eisopts**

Command Class: Security Administration

Parameters

:eiscopy= (optional)

System-wide control for MSU, alarm, and event copy to the ESP.

Range: **on, off**

Default: **off**

Example

chg-eisopts:eiscopy=on

Dependencies

At least one parameter must be specified.

The Eagle 5 Support for Integrated Sentinel (E5IS) feature must be turned on before this command can be entered

Before the E5IS copy function can be enabled, at least 2 STC cards must be installed and in the IS-NR state in the system.

Notes

None

Output

chg-eisopts:eiscopy=on

```
rlghncxa03w 04-01-20 09:07:58 EST  EAGLE 31.3.0
CHG-EISOPTS: MASP A - COMPLTD
;
```

chg-feat

Change Feature

Use this command to activate the optional features available on the system.

You must purchase a feature before you turn the feature on. If you are not sure whether you have purchased a feature, contact your Tekelec Sales Representative or Account Representative.



CAUTION

CAUTION: The features are off when you install the system. After they are turned on with this command, you cannot turn them off.

Keyword: chg-feat

Related Commands: rtrv-feat

Command Class: Program Update

Parameters

:cnf= (optional)

This parameter turns on the Calling Name Conversion Facility (CNCF) feature.

Range: on

Default: No change in current value.

System

Default: off

:crmd= (optional)

This parameter turns on the Cluster Routing and Management Diversity (CRMD) feature.

Range: on

Default: No change in current value.

System

Default: off

:dstn5000= (optional)

This parameter turns on the 5000 Routes feature.

Range: on

Default: No change in current value.

System

Default: off

:dynrtk= (optional)

This parameter turns on the Dynamic Routing Key feature.

Range: on

Default: No change in current value.

System

Default: off

:e5is= (optional)

This parameter turns on the EAGLE 5 Integrated Monitoring Support (E5IS) feature. This feature cannot be turned on until the Time Slot Counter Synchronization (TSC) feature used with GSPM-II cards is turned on (**tscsync=on**). The **e5is** parameter and the **tscsync** parameter can be specified in the same **chg-feat** command to turn both features on at the same time.

Range: on

Default: No change in current value.

System

Default: off

:egtt= (optional)

This parameter turns on the Enhanced Global Title Translation (EGTT) feature.

Range: on

Default: No change in current value.

System

Default: off

:fan= (optional)

This parameter turns on the cooling fan feature.

Range: on

Default: No change in current value.

System

Default: off

:gflex= (optional)

This parameter turns on the GSM flexible numbering (G-Flex) feature.

Range: on

Default: No change in current value.

System

Default: off

:gport= (optional)

This parameter turns on the GSM mobile number portability (G-Port) feature.

Range: on

Default: No change in current value.

System

Default: off

:gtt= (optional)

This parameter turns on the Global Title Translation (GTT) feature.

Range: on

Default: No change in current value.

System

Default: off

:gws= (optional)

This parameter turns on the Gateway Screening (GWS) feature.

Range: on

Default: No change in current value.

System

Default: off

:inp= (optional)

This parameter turns on the INAP (Intelligent Network Application Part) Number Portability feature.

Range: **on**

Default: No change in current value.

System

Default: **off**

:ipisup= (optional)

This parameter turns on the ISUP Routing Over IP (IPISUP) feature.

Range: **on**

Default: No change in current value.

System

Default: **off**

:ituduppc= (optional)

This parameter turns on the ITU National Duplicate Point Code (ITUDUPPC) feature.

Range: **on**

Default: No change in current value.

System

Default: **off**

:itumtpsr= (optional)

This parameter turns on the ITU MTP Restart feature.

Range: **on**

Default: No change in current value.

System

Default: **off**

:lan= (optional)

This parameter turns on the STP LAN feature.

Range: **on**

Default: No change in current value.

System

Default: **off**

:lfs= (optional)

This parameter turns on the Link Fault Sectionalization (LFS) feature.

Range: **on**

Default: No change in current value.

System

Default: **off**

:measplat= (optional)

This parameter turns on the Measurements Platform feature. The **chg-measopts:platformenable=on** command must be entered to enable the Measurement Platform collection function (which cannot be disabled after it is enabled in the system).

Range: **on**

Default: No change in current value.

System

Default: **off**

:mgtt= (optional)

This parameter turns on the Modified Global Title Translation (MGTT) feature. The MGTT feature replaces the PRFXDLGT feature.

Range: **on**

Default: No change in current value.
System
Default: **off**

:mpc= (optional)

This parameter turns on the Multiple Point Code (MPC) feature.

Range: **on**
Default: No change in current value.
System
Default: **off**

:mtprs= (optional)

This parameter turns on the ANSI MTP Restart feature.

Range: **on**
Default: No change in current value.
System
Default: **off**

:ncr= (optional)

This parameter turns on the Nested Cluster Routing (NCR) feature.

Range: **on**
Default: No change in current value.
System
Default: **off**

:nrt= (optional)

This parameter turns on the Network Routing feature.

Range: **on**



CAUTION

CAUTION: When using the Network Routing feature, limited network management is provided for point codes not covered by full point code routing, Cluster Routing, or Nested Cluster Routing.

Default: No change in current value.
System
Default: **off**

:plnp= (optional)

This parameter turns on the PCS (Personal Communication Service) 1900 Number Portability feature.

Range: **on**
Default: No change in current value.
System
Default: **off**

:sccpcnv= (optional)

This parameter turns on the SCCP Conversion feature.

Range: **on**
Default: No change in current value.
System
Default: **off**

:seas= (optional)

This parameter turns on the Signaling Engineering Administration System (SEAS) feature.

Range: **on**
Default: No change in current value.

System**Default:** off**:slsob=** (optional)

This parameter turns on the Other CIC (Circuit Identification Code) Bit Used feature.

Range: on**Default:** No change in current value.**System****Default:** off**:tcapcnv=** (optional)

This parameter turns on the TCAP Conversion feature.

Range: on**Default:** No change in current value.**System****Default:** off**:tlnp=** (optional)

This parameter turns on the Triggerless Local Number Portability (TLNP) feature.

Range: on**Default:** No change in current value.**System****Default:** off**:tscsync=** (optional)This parameter turns on the Time Slot Counter Synchronization (TSC) feature that is used with GPRS-II cards. This feature is required, along with use of STC cards, for the EAGLE 5 Integrated Monitoring Support feature (**e5is=on**).**Range:** on**Default:** No change in current value.**System****Default:** off**:vgtt=** (optional)

This parameter turns on the Variable Length GTT (VGTT) feature.

Range: on**Default:** No change in current value.**System****Default:** off**:wnp=** (optional)

This parameter turns on the Wireless Number Portability (WNP) feature.

Range: on**Default:** No change in current value.**System****Default:** off**:x252000=** (optional)

This parameter turns on the 2000 X.25 Routes and Destinations feature.

Range: on**Default:** No change in current value.**System****Default:** off**:x25g=** (optional)

This parameter turns on the X.25/SS7 Gateway feature.

Range: **on**
Default: No change in current value.
System
Default: **off**

Example

```

chg-feat:gtt=on
chg-feat:gws=on:cncf=on
chg-feat:gtt=on:gws=on:crmd=on:x25g=on:lan=on:lfs=on
chg-feat:sccpcnv=on:tcapcnv=on
chg-feat:tscsync=on:e5is=on
chg-feat:mgtt=on

```

Dependencies

NOTE: The "LNP feature" is turned on when the LNP ported TNs quantity appears in the **rtrv-ctrl-feat** command output. An LNP quantity feature access key has been enabled and turned on. See the **enable-ctrl-feat** and **chg-ctrl-feat** commands for more information about turning on the LNP feature.

At least one optional parameter must be specified.

The Gateway Screening feature must be turned on (**gws=on**) before the following features can be turned on:

- The STP LAN feature (**lan=on**)
- The CNCF feature (**cncf=on**)

The SCCP conversion feature must be on (**sccpcnv=on**) before the TCAP conversion feature can be turned on (**tcapcnv=on**).

The LNP feature must be turned on before the following features can be turned on:

- The Wireless Number Portability feature (**wnp=on**)
- The PCS 1900 Number Portability feature (**plnp=on**)

The LNP feature must be turned on and the Gateway Screening feature must be turned on (**gws=on**) before the Triggerless LNP feature can be turned on (**tlnp=on**).

The X.25/SS7 Gateway feature must be turned on (**x25g=on**) before the 2000 X.25 Routes and Destinations feature can be turned on (**x252000=on**).

The Cluster Routing and Management Diversity (CRMD) feature must be turned on (**crmd=on**) before the Nested Cluster Routing (NCR) feature can be turned on (**ncr=on**).

The Global Title Translation (GTT) feature must be turned on (**gtt=on**) before the Enhanced Global Title Translation (EGTT) feature (**egtt=on**) or the Modified Global Title Translation (MGTT) feature (**mgtt=on**) can be turned on. When the EGTT feature is turned on, three new command sets, the GTT Selector (**ent/chg/dlt/rtrv-gttset**), GTT Set (**ent/dlt/rtrv-gttset**), and GTA (**ent/chg/dlt/rtrv-gta**) commands, replace the following Translation Type and Global Title Translation commands: **ent/dlt/rtrv-tt**, and **ent/chg/dlt/rtrv-gtt**. All data previously provisioned with these commands is maintained.

The EGTT feature cannot be turned on while there is an SCCP card running on a 486 processor.

The Multiple Point Code (MPC) feature must be turned on (**mpc=on**) before the ITU National Duplicate Point Code (ITUDUPPC) feature can be turned on (**ituduppc=on**).

The Global Title Translation (GTT) feature must be turned on (**gtt=on**) before the INAP (Intelligent Network Application Part) number portability (INP) feature (**inp=on**) can be turned on.

If the LNP feature is turned on, the INP feature cannot be turned on. If the INP feature is turned on, the LNP feature cannot be turned on.

If the LNP feature is turned on, the G-Port feature cannot be turned on. If the G-Port feature is turned on, the LNP feature cannot be turned on.

If the LNP ELAP Configuration feature is turned on, the INP, G-Flex, or G-Port feature cannot be turned on. If the INP, G-Flex, or G-Port feature is turned on, the LNP ELAP Configuration feature cannot be turned on. The LNP ELAP Configuration feature can be displayed by entering the **rtrv-ctrl-feat** command.

The Global Title Translation (GTT) feature must be turned on (**gtt=on**) or Enhanced Global Title Translation (EGTT) feature (**egtt=on**) must be turned on before the G-Flex feature can be turned on (**gflex=on**).

The Global Title Translation (GTT) feature must be turned on (**gtt=on**) before the Variable Length GTT (VGTT) feature (**vgtt=on**), or the GSM Mobile Number Portability (G-Port) feature (**gport=on**) can be turned on.

The G-Port, G-Flex, and INP features require DSM cards in the system.

To turn on both the VGTT and LNP features requires that the system has all DSM cards. To turn on both the VGTT and EGTT features requires that the system has TSM or DSM cards. The VGTT feature requires TSM or DSM cards in the system.

The Global Title Translation (GTT) feature must be turned on (**gtt=on**) before the Modified Global Title Translation (MGTT) feature (**mgtt=on**) can be turned on.

The Modified Global Title Translation (MGTT) feature (**mgtt=on**) cannot be turned on if any SCCP card has less than a 586 processor.

Both cards that run the OAM must be GPSM-II cards before the Time Slot Counter Synchronization (TSC) feature (**tscsync** parameter) can be turned on.



CAUTION

CAUTION: Never install or initialize MCAP cards in card slots 1113 and 1115 after GPSM-II cards are provisioned in these slots. Attempting to initialize MCAP cards after GPSM-II cards have been provisioned in slots 1113 and 1115 will cause a system outage. Before replacing an existing GPSM-II card in slot 1113 or 1115, contact Tekelec Customer Service.

The Time Slot Counter Synchronization (TSC) feature (**tscsync** parameter) must be turned on before the EAGLE 5 Integrated Monitoring Support feature (**e5is** parameter) can be turned on. The two parameters can be specified in the same **chg-feat** command to turn them both on at the same time.

The SCCP and TCAP conversion features (SCCPCNV and TCAPCNV) cannot be turned on when the ANSI-ITU-China SCCP Conversion feature is enabled (see the **enable-ctrl-feat** command).

The GPORT and INP features cannot be turned on if the **ansigflex** system option is enabled (see the **chg-stpopts** command).

If any of the G-Flex, G-Port, INP, or EIR features are turned on in the system, the maximum number of DSM cards allowed in the system is 25. If the system is running only GTT, the maximum number of DSM cards allowed in the system is 32.

If the EIR feature is on, the INP feature cannot be on. If the INP feature is on, the EIR feature cannot be on.

The EGTT feature requires TSM or DSM cards in the system.

If the LNP feature is turned on, the G-Flex feature cannot be turned on. If the G-Flex feature is turned on, the LNP feature cannot be turned on.

Notes

This command is not allowed in upgrade mode.

After a feature bit is turned on, it cannot be turned off. Take care in turning on features that are not used in the network configuration.

The Calling Name Conversion Facility (CNCF) feature provides a conversion of ISUP IAM messages. The facility uses the following two versions of calling name identification presentation (CNIP) for calling name information delivery:

- The nonstandard, proprietary ISUP party information (PIP) parameter.
- The ANSI standard ISUP generic name (GN) parameter.

The conversion either replaces the PIP parameter with the GN parameter or the GN parameter with the PIP parameter in the ISUP IAM message. The user can set up GWS screens to apply the CNCF feature on a per-point-code or range-of-point-code basis.

The Cluster Routing and Management Diversity (CRMD) feature allows the system to configure one route set to an entire cluster of destinations, thus enabling the system to manage and switch traffic to more end nodes.

The Global Title Translation (GTT) feature allows the system to provide translation of the global title digits located in the called party address of an SCCP message. The translation consists of a point code and subsystem number. This feature requires TSMs or DSMs loaded with the SCCP application.

The Enhanced Global Title Translation (EGTT) feature provides enhancements to the way the system performs GTT for both ITU and ANSI messages. The feature allows the combination of domain (ANSI or ITU), global title indicator (GTI), translation type (TT), numbering plan (NP), and nature of address indicator (NAI) selectors to be used to select a translation table when the system receives a message requiring EGTT. The feature also allows inclusion of the translated subsystem number (SSN) in the called party address (CDPA) and inclusion of the originating point code (OPC) in the calling party address (CGPA). The feature also provides deletion capability of the GT (global title) in the CDPA.

The Modified Global Title Translation (MGTT) feature allows customizing of the GTT information in the MSU (in addition to the Translation Type) to ensure correct routing. The Global Title information can be modified on outbound MSUs for some networks in order to be compatible with the network the MSU is going to. The MGTT feature replaces the Prefix Deletion of Global Title (PRFXDLGT) feature.

The Gateway Screening (GWS) feature allows the system to screen specific message types with selected parameters from entering the network through this STP. This feature requires TSM cards loaded with the GLS application.

The STP LAN feature allows selected SS7 messages to be copied and sent to a remote host over an ethernet LAN using the TCP/IP protocol. This feature also requires the gateway screening feature and application communication modules (ACMs).

The Triggerless LNP (TLNP) feature gives service providers a method to route calls to ported numbers without having to upgrade their signaling switch (end office or mobile switching center) software. This feature uses the gateway screening stop action TLNP to intercept through-switched ISUP messages on the LIM.

The Link Fault Sectionalization (LFS) feature allows the system to perform a series of far end loopback tests that identify faulty segments of an SS7 transmission path up to and including the remote network element.

The ANSI MTP Restart (MTPRS) feature provides an orderly process for bringing signaling links back into service after the system has been isolated and restarted. A greater preference is given to restoring the STP to network service in an orderly fashion than to the speed of recovery. The time required is system dependent; Table 5-12 provides examples of some approximate times.

Table 5-12. Link Alignment Performance

System Size (No. of LIMs)	Link Alignment Delay (seconds)
Up to 64	62
64 to 127	97
128 to 191	132
More than 191	167

The ITU MTP Restart (ITUMTPRS) feature provides MTP restart support for ITU networks and extends the system's ANSI MTP restart support to mixed ITU and ANSI networks. The performance of ITU MTP Restart is comparable to the performance of ANSI MTP Restart.

SEAS interface support allows the system to interface with the Signaling Engineering and Administration System (SEAS).

The X.25/SS7 Gateway (X25G) feature allows cellular providers to connect their X.25 signaling networks to other providers SS7 network.

The SCCP and TCAP conversion features (SCCPCNV and TCAPCNV) allow the system to convert MTP-routed SCCP and TCAP messages from ANSI to ITU format and to convert ITU formatted messages to ANSI.

The PCS 1900 LNP Query (PLNP) feature provides for LNP query/response in a PCS wireless environment using the LRN method to support Service Provider Number Portability.

The Nested Cluster Routing (NCR) feature allows the system to support full point code entries on different routes within a cluster.

The Other CIC (Circuit Identification Code) Bit Used feature is one of two methods provided as ITU SLS enhancements for distributing the load across links in a combined and single linkset. The Other CIC Bit Used feature lets the system derive the LSB (Least Significant Bit) from bits 2 through 4 of the CIC to serve as the three lower bits of the SLS (Signaling Link Selection) and one other bit of the CIC to serve as the MSB (Most Significant Bit) of the SLS. The SLSOCB feature applies only to ITU-ISUP messages. The other method of distributing the load is rotation of the four bits of the SLS to change the LSB of the SLS. For additional information on bit rotation, see the **ent-ls** command.

The Network Routing (NR) feature allows provisioning of a single routeset to be used for all MSUs destined to members of that network.

The DSTN5000 (5000 Routes) feature provides the ability to administer up 5000 routes on the system. If **dstn5000=on**, the values of the **mtpdpcq** (destination point code) and **mtpxlq** (exception list entries) parameters of the **chg-stpopts** command can total **5500**. Otherwise, the sum total for **mtpdpcq** and **mtpxlq** cannot exceed **2500**. The Cluster Routing and Management Diversity (CRMD) feature must be turned on before the **mtpxlq** parameter can be specified.

The MPC (Multiple Point Code) feature enables the user to use SPCs (secondary point codes) in addition to the true point codes that the EAGLE 5 ISS uses. The SPCs are used for provisioning and

routing as if they were the true point code of the EAGLE 5 ISS. SPCs can be provisioned in any of the three domains (ANSI, ITU-N, and ITU-I). SPCs are supported for any type of link.

The ITUDUPPC (ITU National Duplicate Point Code) feature allows an EAGLE 5 ISS mated pair to route traffic for two or more countries that may have overlapping point code values.

The INP [INAP (Intelligent Network Application Part) Number Portability] feature supports service-provider number portability, which allows subscribers to change to a new service provider while retaining their phone number.

The G-Flex (GSM Flexible Numbering) feature optimizes the use of subscriber numbers and number ranges by providing a logical link between any MSISDN (Mobile Station ISDN number), MDN (Mobile Dialed Number), or MIN (Mobile Identification Number) and any IMSI (International Mobile Station Identifier), between any IMSI and any HLR, and/or between any MSISDN/MDN/MIN and any HLR. This link allows subscribers to move from one HLR (Home Location Register) to another.

The VGTT (Variable Length GTT) feature provides the ability to provision global title entries of varying lengths to a single translation type or GTT set. Users are able to assign global title entries of up to 10 different lengths to a single translation type or GTT set.

The G-Port (GSM Mobile Number Portability) feature provides the ability for a mobile subscriber to change the GSM subscription network within a portability cluster while retaining the original MSISDNs (Mobile Station ISDN numbers).

The Time Slot Counter Synchronization (TSCSYNC) feature allows the system's A (Active) and B (Standby) internal clocks to be synchronized by the GPSM-II card that is running the standby OAM.

The EAGLE 5 Integrated Monitoring Support feature provides an Ethernet interface between the EAGLE 5 ISS and the Sentinel Extended Services Platform (ESP) or the Integrated Message Feeder (IMF), to eliminate the need for cabling between each SS7 link and the ESP or IMF to monitor SS7 traffic.

The Measurements Platform feature provides a dedicated processor for collecting and reporting STP, LNP, INP, G-Flex, and G-Port Measurements data, with support for EAGLE 5 ISS growth to more than 700 links.

Output

chg-feat:gtt=on

```
rlghncxa03w 04-01-11 11:34:04 EST EAGLE 31.3.0
CHG-FEAT: MASP A - COMPLD
```

;

chg-frm-pwr

chg-frm-pwr

Use this command to change an existing power threshold value in the Frame Power Threshold table to a new power threshold value for the specified frame.

Keyword: chg-frm-pwr

Related Commands: dlt-frm-pwr, ent-frm-pwr, rtrv-frm-pwr, rtrv-stp

Command Class: Database Administration

Parameters

:frm= (mandatory)

Frame ID

Range: cf00, ef00, ef01, ef02, ef03, ef04

cf00 — Control frame

ef00 — First extension frame
ef01 — Second extension frame
ef02 — Third extension frame
ef03 — Fourth extension frame
ef04 — Fifth extension frame

:thrshld= (mandatory)

Frame-level power threshold, in Amps. This value is compared with the current power consumption for the frame, and the appropriate alarms are raised if current power consumption exceeds the threshold limit.

Range: 30-65

Default: 30

Example

Change the frame power threshold value for the first extension frame.

chg-frm-pwr:frm=ef00:thrshld=58

Dependencies

A power threshold value must already be provisioned for the specified frame.

Output

chg-frm-pwr:frm=ef00:thrshld=58

```
tekelecstp 06-06-01 15:18:41 EST EAGLE 35.0.0
FRAME POWER THRESHOLD table is (4 of 10) 40% full
CHG-FRM-PWR: MASP A - COMPLTD
```

;

chg-ftp-serv

Change FTP Server Entry

Use this command to change an entry for an FTP server in the FTP Server table.

NOTE: Though the user parameter value is available, it is not for customer use unless directed by Tekelec Technical Support. The FTP-based Table Retrieve Application (FTRA) sends the necessary FTP Server information to the system, and the system overwrites any entry that is already in the FTP Server table for that server.

Keyword: chg-ftp-serv

Related Commands: dlt-ftp-serv, ent-ftp-serv, rtrv-ftp-serv

Command Class: Database Administration

Parameters

:app= (mandatory)

The FTP Client application that interfaces with the FTP server.

Range: meas, user

meas—the Measurements Platform application

user—the FTP-based Table Retrieve Application (FTRA)

:ipaddr= (mandatory)

IP Address of the FTP Server.

Range: 4 numbers separated by dots, with each number in the range of 0-255.

:login= (optional)

FTP Server Username (A prompt for entering a password appears on a separate line.)

Range: ZZZZZZZZZZZZZZ

1 to 15 alphanumeric characters; mixed-case is allowed

:path= (optional)

FTP path used to locate the file that will be sent.

[illegible]

Up to 100 characters; mixed-case string in double quotes with valid FTP path format

Default: User's home directory

:prio= (optional)

Priority of this FTP server when there is more than one FTP Server for this application.

Range: 1 - 10

Example

chg-ftp-

```
serv:app=meas:ipaddr=1.255.0.102:login=ftpmeas1:path=~meas":prio
=1
```

```
chg-ftp-serv:app=user:ipaddr=1.255.0.102:login=tekperson1:path=~\data":prio=1
```

Dependencies

At least one optional parameter must be specified.

The **app** parameter must specify an application that uses the FTP Support feature.

The **ipaddr** parameter must specify a valid IP address for the FTP server.

The **path** parameter value must be in a valid FTP path format.

The **prio** parameter specifies a priority for use of an FTP server by an application when the application has more than one FTP server defined in the table. Each FTP server defined for use by the application must have a priority from 1 to 10 assigned. The available FTP server with the highest priority (smallest number) will be used first by the application.

If the **login** parameter is specified, a separate prompt appears for entry of the FTP server password. You must enter a password that is at least 1 and not more than 15 characters long. If an invalid password is entered or the Return key is pressed without entering a password, the entire command must be entered again to cause the password prompt to appear again. The password is not displayed as it is entered.

An entry for the specified application ID at the specified priority cannot already exist.

The FTP server entry to be changed with this command must already exist in the FTP Server table for the specified IP address and application.

Notes

The same FTP server can be defined more than once, but the specified application must be different for each entry.

Output

```

chg-ftp-serv:app=meas:ipaddr=1.255.0.102:path="-ftpmeas1"
    rlghncxa03w 04-01-20 09:07:58 EST EAGLE 31.3.0
    CHG-FTP-SERV: MASP A - COMPLTD
;
chg-ftp-serv:app=meas:ipaddr=1.255.0.102:login=ftpmeas1
    rlghncxa03w 04-01-20 09:07:58 EST EAGLE 31.3.0
Enter Password:*****
    CHG-FTP-SERV: MASP A - COMPLTD
;
chg-ftp-serv:app=user:ipaddr=1.22.10.2:prio=3
    rlghncxa03w 04-01-20 09:07:58 EST EAGLE 31.3.0
    CHG-FTP-SERV: MASP A - COMPLTD
;

```

chg-gpl

Change Generic Program Load

Use this command to copy a generic program load from the system removable cartridge to the destination active and standby system disks as a "trial" version. The system release identification file is uploaded from the system removable cartridge to the active and standby fixed drives along with each GPL. This command also provides a parameter to turn GPL auditing "on" and "off".

Keyword: chg-gpl

Related Commands: act-gpl, alw-card, copy-gpl, init-card, init-sys, rept-stat-gpl, rtrv-gpl

Command Class: Program Update

Parameters

:gpl= (mandatory)

The generic program load (GPL) identifier. The name of the GPL to be uploaded from the system removable cartridge to the system disks.

Range: ayyyyyyy

atmansi—The GPL is used by the LIM cards to support the high-speed ATM signaling link feature.

atmitu—The GPL is used by the E1 ATM cards to support the high-speed E1 ATM signaling link feature.

blbepm—A flash GPL containing the BIOS ROM image on EPM cards.

blbios—A flash GPL containing the BIOS ROM image on HC-MIM cards that are used for E1 or T1 signaling links.

blcpld—A flash GPL containing the bit files for the CPLD on HC-MIM cards that are used for E1 or T1 signaling links.

bldiag—A flash GPL containing the diagnostic code on HC-MIM cards that are used for E1 or T1 signaling links.

bldiag6—A flash GPL containing the diagnostic code on EPM cards.

blvxw—A flash GPL containing the VxWorks operating system on HC-MIM cards that are used for E1 or T1 signaling links.

blvxw6—A flash GPL containing the VxWorks operating system on EPM cards.

bphmux—This GPL is used to support Board PROM for HMUX flash memory.

bphcap—This GPL is used to support Board PROM for HCAP flash memory.

bphcapt—This GPL is used to support Board PROM for HCAP-T flash memory.

bphmux—This GPL is used to support Board PROM for HMUX flash memory.

bpmpl—This GPL is used to support Board PROM for MPL flash memory.

bpmplt—This GPL is used to support Board PROM for E1/T1 flash memory and Board Prom for MPL-T flash memory.

ccs7itu—This GPL is used by the LIM cards for ITU-TSS MTP functionality.

cdu—This GPL is used in the card manufacturing process.

ebdablm—This GPL is used by the TSM card for enhanced bulk download.

ebdadcm—This GPL is used by the DCM card to transmit the LSMS LNP database to the EAGLE 5 ISS at high speed over an ethernet connection for enhanced bulk download.

eoam—This GPL is used by the GPSM-II card for enhanced OAM functions.

eroute—This GPL is used by the STC card for EAGLE 5 Integrated Monitoring Support functions.

gls—This GPL is used by the TSM cards for downloading gateway screening to LIM cards.

hipr—The communication software used on the High Speed IMT Packet Router (HIPR) card.

imt—This GPL is the communication processor on the logical processing element (LPE).

imtpci—The communication software that operates the IMT bus on HC-MIM cards.

ipghc—This GPL is used by the E5-ENET card to support TCP/IP point-to-multipoint connectivity for both ANSI and ITU point codes.

ipgwi—This GPL is used by the DCM card for TCP/IP point-to-point connectivity for ITU point codes.

iplhc—This GPL is used by the E5-ENET card for TCP/IP point-to-point connectivity for both ANSI and ITU point codes.

iplim—This GPL is used by the DCM card for TCP/IP point-to-point connectivity for ANSI point codes.

iplimi—This GPL is used by the DCM card for TCP/IP point-to-point connectivity for ITU point codes.

ips—This GPL is used by the IPSM card for the IP User Interface feature.

mcp—This GPL is used by the MCPM card for the Measurements Platform feature.

plde1t1—A flash GPL that is used on HC-MIM cards for E1 and T1 signaling links.

pldpmc1—A flash GPL that is used on HC-MIM cards for E1 and T1 signaling links.

sccp—This GPL is used by the TSM cards for the global title translation application.

ss7ansi—This GPL is used by the LIM cards for the MTP functionality.

ss7epm—This GPL is used by the E5-E1T1 cards to support the MTP functionality for both ANSI and ITU applications. The **ss7epm** GPL allows the card to support up to 32 signaling links for E1 and T1 functionality.

ss7gx25—This GPL is used by the LIM cards to support X.25 functionality.

ss7hc—This GPL is used to support the functionality for the HC-MIM (High Capacity Multi-Channel Interface Module) card. The HC-MIM card runs either the **ss7ansi** or **ccs7itu** application; the **ss7hc** GPL allows the card to support up to 64 signaling links for E1 and T1 functions.

ss7ipgw—This GPL is used by the system to support TCP/IP point-to-multipoint connectivity.

ss7ml—This GPL is used to support the functionality for the multi-port LIM (MPL or MPL-T) card and the E1/T1 MIM (Multi-Channel Interface Module) card. The MPL cards run only the **ss7ansi** application on a LIMDS0 card (as in the command **ent-**

card:type=limds0:appl=ss7ansi); the **ss7ml** GPL allows the card to support 8 signaling links rather than the usual 2 links for LIM cards. The MPL cards support only the DS0 interface. The E1/T1 MIM card runs either the **ss7ansi** or **ccs7itu** application; the **ss7ml** GPL allows the card to support 8 signaling links for E1 and T1 functions. (The older E1 card supports 2 signaling links for E1 functions).

stplan—This GPL is used by the ACM card to support the STP LAN application.

utility—This GPL is used by the factory for testing, and when directed by Tekelec Technical Services.

vcdu—This GPL is used in the card manufacturing process.

vsccp—This GPL is used by the DSM card to support the G-Flex, G-Port, INP, and LNP ELAP Configuration features. If the G-Flex, G-Port, INP, or LNP ELAP Configuration feature is not turned on, and a DSM card is present, the VSCCP GPL processes normal GTT traffic.

vxwslan—This GPL is used by the SSEDCCM card to support the STP LAN application.

:audit= (optional)

This parameter specifies whether the active MASP system release running version is to be audited every 90 seconds. The audit state is preserved through a system restart or power up.

NOTE: When audit is turned off, the system release audit process is stopped. The detection, marking, and reporting of corrupt GPLs is continuous and not affected by turning audit off.

Range: on, off

Default: on

:ver= (optional)

Version number of the GPL, in the form of *major-minor-fix*.

Range: *major-minor-fix*

Specify a valid value for each component of the version number, in the range **0-255**

:appl= (obsolete)

This parameter is obsolete; use the **gpl** parameter.

The **appl** parameter has been replaced with the **gpl** parameter to more accurately indicate that a GPL, and not an application, is specified for the parameter value.

Example

```
chg-gpl:gpl=ss7ansi:ver=101-014-000
```

```
chg-gpl:audit=on
```

```
chg-gpl:gpl=vsccp:ver=101-014-000
```

```
chg-gpl:gpl=iplim:ver=101-014-000
```

```
chg-gpl:gpl=bpmp:ver=108-11-0
```

```
chg-gpl:gpl=ss7ml:ver=108-11-0
```

```
chg-gpl:gpl=bphmux:ver=105-21-0
```

```
chg-gpl:gpl=hipr:ver=105-21-0
```

```
chg-gpl:gpl=mcp:ver=111-17-0
```

```
chg-gpl:gpl=ipgwi:ver=111-17-0
```

```
chg-gpl:gpl=bphcapt:ver=111-17-0
```

```
chg-gpl:gpl=eoam:ver=111-17-0
```

```
chg-gpl:gpl=bpmp:ver=112-18-0
```

```
chg-gpl:gpl=atmitu:ver=114-1-0
```



```
chg-gpl:gpl=ss7hc:ver=125-1-0
chg-gpl:gpl=blvxw:ver=125-1-0
chg-gpl:gpl=blcpld=125-1-0
chg-gpl:gpl=plde1t1:ver=125-1-0
chg-gpl:gpl=pldpmc1:ver=125-1-0
chg-gpl:gpl=blbios:ver=125-1-0
chg-gpl:gpl=imtpci:ver=125-1-0
chg-gpl:gpl=bldiag:ver=125-1-0
```

Dependencies

No other activate, change, copy, or retrieve GPL command can be in progress when this command is entered.

If either the **ver** or the **gpl** parameter is specified, both parameters must be specified.

The **audit** parameter, or the **ver** and **gpl** parameters together, or the **audit**, **ver**, and **gpl** parameters together must be specified.

Notes

If there is a failure changing the active system, the operation is stopped. If there is a failure changing the standby system, the active system is still updated.

A cartridge must be inserted into the removable disk drive, the cartridge must be initialized, and it must be formatted as a system disk.

Use the **rtvr-gpl** command to determine the version number and audit state of a GPL.

The **ver** and **gpl** parameters are mandatory if a generic program load is being uploaded from a removable cartridge.

The **audit** parameter is required only when turning GPL auditing on or off and the **ver** and **gpl** parameters are optional.

Before the **gpl=oap** parameter can be specified, the OAPs must be provisioned and functional.

When the **audit** parameter is set to **off**, the system release audit process is stopped. The detection, marking, and reporting of corrupt GPLs is continuous and not affected by turning audit off.

Output

The output for a successful command execution is in the following format; the name of the uploaded GPL is shown for card locations 1114 and 1116.

```
chg-gpl:gpl=ss7hc:ver=125-1-0
rlghncxa03w 06-06-01 11:43:04 EST EAGLE 35.0.0
SS7HC upload to 1114 completed
SS7HC upload to 1116 completed
;
```

The following example shows an error in the upload.

```
chg-gpl:gpl=bphcap:ver=101-014-000
rlghncxa03w 06-06-01 11:43:04 EST EAGLE 35.0.0
BPHCAP corrupted on 1117 removable: mismatched checksums
;
```

chg-gsmmap-scrn

Change GSM MAP Screening Entry

Use this command to change the attributes (**nforbid**, **npc/npc/npci/npcn/npcn24**, **nssn**, **ncgsr**, **ncdsr**, and **naction**) of GSM Map Screening CgPA and CdPA entries that are used to filter out or

allow SCCP messages containing Map Op-Codes, CgPA GTA+NPV+NAIV, CdPA GTA+NPV+NAIV, and forbidden parameters.

Keyword: chg-gsmmap-scrn

Related Commands: dlt-gsmmap-scrn, ent-gsmmap-scrn, rtrv-gsmmap-scrn

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:cgsr= (mandatory)

CgPA Screening Reference.

Range: *ayyy*

1 alphabetic character followed by up to 3 optional alphanumeric characters

:opname= (mandatory)

The user-defined name for the operation code. The **opname** value references the operation code (**opcode**) defined with the **ent-gsms-opcode** command. GSM MAP Screening is performed on the specified address or addresses for the referenced operation code.

Range: *ayyyyyyy*

Up to 8 alphanumeric characters

:cdsr= (optional)

CdPA Screening Reference.

Range: *ayyy*

1 alphabetic character followed by up to 3 optional alphanumeric characters

:force= (optional)

Check Mated Application Override. This parameter must be used to complete command execution if the **npc/npci/npcn** and **nssn** parameter combination specified in the command is not already defined in the SCCP Application entity set (Remote Point Code/Mated Application Table).

Range: **yes, no**

Default: **no**

:naction= (optional)

The new screening action to take if a message is forbidden as defined by the **forbid** parameter.

Range: **atierr, discard, dupdisc, duplicate, forward, pass, route**

atierr — Do not route the MSU. An ATI (Any Time Interrogation) reject message is generated to the originator. This value is valid only for ATI MAP operation codes.

discard — Do not route the MSU. The MSU is discarded (thrown away) and an appropriate UIM is issued.

dupdisc — Route the original message to the duplicate node. The original message will not be sent to the original node. If, however, the duplicate node is not available for routing, the MSU is routed to the original node.

duplicate — Route the message as normal to the original destination and route a copy of the original message to the duplicate node. If the MSU fails to route to the duplicate node, a UIM is generated indicating the duplicate routing failure.

forward — Route the original message to the forward node. The original message will not be sent to the original node. If, however, the forward node is not available for routing, the MSU is routed to the original node.

pass — Route the message as normal to the destination; a UIM will be issued. This is intended to be a test mode and is recommended when setting up GSM Map Screening during the initial phase to assure that no MSUs will be inadvertently thrown away.

route— Route the message as normal to the original destination node; no UIM will be generated. The original destination is the node to which normal GTT would be sent if no GSM MAP actions are taken.

Default: No change to current value

:ncdsr= (optional)

The new CDPA Screening Reference.

Range: *yyyy*

1 alphabetic character followed by up to 3 optional alphanumeric characters

:ncgsr= (optional)

The new CGPA Screening Reference.

Range: *yyyy*

1 alphabetic character followed by up to 3 optional alphanumeric characters

:nforbid= (optional)

The new forbidden parameter value. Indicates a forbidden parameter for the specified entry. If a forbidden parameter is detected, the message is handled with the action defined by the **action/naction** parameter.

Range: **all, none, state, location**

all—All parameters are forbidden. Take the specified screening action defined by the **naction** parameter for messages arriving at the system.

none—None of the parameters are forbidden. Route the message to its destination.

state—Take the specified screening action defined by the **naction** parameter for messages arriving at the system that contain **state** as the forbidden parameter for the entered address/operation code combination. **Note:** The **state** parameter is valid only for GSM ATI messages.

location—Take the specified screening action defined by the **naction** parameter for messages arriving at the system that contain **location** as the forbidden parameter for the entered address/operation code combination. **Note:** The **location** parameter is valid only for GSM ATI messages.

Default: No change to current value

:nmapset= (optional)

The new MAP set ID.

Range: **1-36000 dflt**

dflt—Default MAP set

Default: No change to the MAP set value.

:npc= (optional)

New ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: **npca**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001-005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006-255**.

The point code **000-000-000** is not a valid point code.

:npc/npc/npci/npcn/npcn24= (optional)

New point code. The **npc/npc/npci/npcn/npcn24** and **nssn** parameters are used when the new screening action (**naction**) is **forward**, **duplicate**, or **dupdisc** (duplicate and discard). These parameters allow the craftsperson to change the defined node to which the input message will be routed.

:npci= (optional)

New ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:npcn= (optional)

New ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:npcn24= (optional)

New 24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:nssn= (optional)

New Subsystem Number. The **npc/npc/npci/npcn/npcn24** and **nssn** parameters are used when the new screening action (**naction**) is **forward**, **duplicate**, or **dupdisc** (duplicate and discard). These parameters allow the craftsperson to change the defined node to which the input message will be routed.

Range: **002 - 255**

Example

```

chg-gsmmap-scrn:opname=xyz:cgsr=fela:naction=pass
chg-gsmmap-scrn:opname=xyz:cgsr=fela:cdsr=fall:naction=discard
chg-gsmmap-scrn:opname=test2:cgsr=pcn1:npcn=s-333:nssn=254
chg-gsmmap-
scrn:opname=test1:naction=forward:npc=2-2-2:nssn=20:nmapset=12
chg-gsmmap-
scrn:opname=test2:naction=duplicate:npc=1-1-2:nssn=20:cgsr=cg1:nm
apset=dflt

```

Dependencies

At least one optional parameter must be specified.

If the **cdsr** parameter is specified, at least one additional optional parameter must be specified.

If the **ncdsr** parameter is specified, then the **cdsr** parameter must be specified.

If the **cdsr** parameter is specified, then the **ncgsr** parameter cannot be specified.

The **ncgsr** parameter and the **ncdsr** parameter cannot be specified together in the same command.

The specified **cgsr** parameter value must exist in the database.

The specified **cdsr** parameter value must exist in the database.

The specified **ncgsr** parameter value cannot already exist in the database.

The specified **ncdsr** parameter value cannot already exist in the database.

The GSM Map Screening feature (see the **enable-ctrl-feat** command) must be turned on before this command can be entered.

The Enhanced GSM Map Screening (EGMS) feature must be turned on before the **cdsr**, **ncdsr**, **pc**, and **pca** parameters can be specified.

The specified **opname** parameter value must exist in the GSM Map Op-Code table.

A value of **state** or **location** cannot be specified for the **nforbid** parameter unless the operation code (**opcode**) referenced by the **opname** parameter is **71**. The **opcode=71** parameter signifies an ATI MAP operation code.

A value of **atierr** cannot be specified for the **naction** parameter unless the operation code (**opcode**) referenced by **opname** is **71**. The **atierr** option is valid only for ATI MAP operation codes; **opcode=71** signifies an ATI MAP operation code.

If specified, the **npc/npci/npci/npcn/npcn24** parameter must be a full point code.

If the **naction** parameter is specified, and its value is **forward**, **duplicate**, or **dupdisc**, then the **npc/npci/npci/npci/npcn/npcn24** parameter and the **nssn** parameter must be specified.

The **force** parameter can be specified only if the **npc/npci/npci/npci/npcn/npcn24** parameter and the **nssn** parameter are specified.

If the **npc/npci/npci/npci/npcn/npcn24** parameter and the **nssn** parameter are specified, and the **force** parameter is not specified as **yes**, the PC-SSN must be populated in the SCCP Application entity set (Remote Point Code / Mated Application Table).

If specified, the **npc/npci/npci/npci/npcn/npcn24** parameter value must exist as a destination in the Ordered Route entity set (ANSI only), or must reside in a cluster that exists as a destination in the Ordered Route entity set (for global title routing).

The **npc/npci/npci/npci/npcn/npcn24** and **nssn** parameters can be specified only if the **naction** parameter is specified and its value is **forward**, **duplicate**, or **dupdisc**.

If the value of the **naction** parameter is **forward**, **duplicate**, or **dupdisc**, then the **nmapset** parameter must be specified.

The **npc/npcanpci/npcn/npcn24** and **nssn** parameters can be specified only if the **naction** parameter is specified, and its value is **forward**, **duplicate**, or **dupdisc**. If the **naction** parameter is specified with a value of **forward**, **duplicate**, or **dupdisc**, then the **npc/npcanpci/npcn/npcn24** parameter and the **nssn** parameter must be specified.

The Flexible GTT Load Sharing feature must be enabled before the **nmapset** parameter can be specified.

The specified new MAP set must exist in the MAP table.

If the value of the **nmapset** parameter is not **dflt**, or if the **nmapset=dflt** parameter is specified, but the value of the **force** parameter is not **yes**, then the values for the **npc** and **nssn** parameters must exist in the new MAP set.

If the **nmapset** parameter is specified without specifying the **ndfltact** parameter, then the previously provisioned **dfltact** parameter must have a value of **forward**, **duplicate**, or **dupdisc**.

The **force** parameter can be specified only if the **nmapset** parameter is specified.

Notes

Unlike GTT (Global Title Translation) entries, the GSM MAP Screening commands do not support splits of ranges during deletion or changes of entries.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-).

Output

chg-gsmmap-scrn:cgsr=fela:opname=xyz:naction=pass

```
rlghncxa03w 04-02-20 09:07:58 EST EAGLE 31.4.0
GSM Map Screening table is (2 of 4000) 1% full
CHG-GSM MAP-SCRN: MASP A - COMPLTD
```

;

chg-gsmmap-scrn:cgsr=fela:cdsr=fall:opname=xyz:naction=discard

```
rlghncxa03w 04-02-20 09:07:58 EST EAGLE 31.4.0
GSM Map Screening table is (2 of 4000) 1% full
CHG-GSM MAP-SCRN: MASP A - COMPLTD
```

;

chg-gsmmap-

scrn:opname=test1:naction=forward:npc=2-2-2:nssn=20:nmapset=12

```
tekelecstp 06-05-29 13:24:41 EST EAGLE 35.0.0
GSM Map Screening table is (3 of 4000) 1% full
CHG-GSM MAP-SCRN: MASP A - COMPLTD
```

;

chg-gsmmap-

scrn:opname=test2:naction=duplicate:npc=1-1-2:nssn=20:cgsr=cg1:nmapset=dflt

```
tekelecstp 06-05-29 13:24:41 EST EAGLE 35.0.0
GSM Map Screening table is (3 of 4000) 1% full
CHG-GSM MAP-SCRN: MASP A - COMPLTD
```

;

chg-gsmopts

Change GSM System Options

Use this command to enter GSM (Global System for Mobile Telecommunications) system options in the database. This command updates the GSMOPTS Table.

Keyword: chg-gsmopts

Related Commands: rtrv-gsmopts

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:ccnc= (optional)

E214 country code and network code.

The G-Flex feature must be turned on before this parameter can be specified.

This parameter is mandatory if the **mccmnc** parameter is specified.

Range: 2-8 digits

Default: No change to current value

:defmapvr= (optional)

Default MAP version.

The G-Port feature must be turned on before this parameter can be specified.

Range: 1-3

Default: 1

:defmcc= (optional)

E212 default mobile country code.

The G-Flex feature must be turned on before this parameter can be specified.

Range: 3 digits, **none**

Valid digits are **0-9, A-F, a-f**.

none—Deletes the current value for the **defmcc** parameter.

Default: No change to current value

:defmnc= (optional)

E212 default mobile network code.

The G-Flex feature must be turned on before this parameter can be specified.

Range: 1-4 digits, **none**

Valid digits are **0-9, A-F, a-f**.

none—Deletes the current value for the **defmnc** parameter.

Default: No change to current value

:eirgrsp= (optional)

Equipment Identity Register (EIR) Global Response status. The EIR feature must be enabled and turned on before this parameter can be specified. When a value other than **off** is specified, EIR responds according to the specified value.

Range: **off, whitelst, graylst, blklst, unknown**

off—EIR Global Response is not used.

whitelst—Indicates that the IMEI is "valid" and registration should be allowed for this handset.

graylst—Indicates that the IMEI is "questionable." Registration should be allowed, but the event is logged in the EIR log and a special measurement peg is incremented.

blklst—Indicates that the IMEI is "invalid" and registration should not be allowed for this handset.

unknown—Indicates that the IMEI is not in the White list, the Gray list, or the Black list and registration should not be allowed for this handset.

Default: **off**

:eirimsichk= (optional)

Equipment Identity Register (EIR) IMSI Check status. This parameter is not valid for IMEI ranges.

Range: on, off

Default: off

:eirrsptype= (optional)

Equipment Identity Register (EIR) Response Type. The EIR feature must be turned on before this parameter can be specified.

Range: type1, type2, type3

Table 5-13 contains information to help you choose the value for this parameter.

Table 5-13. EIR Response Type (eirrsptype) Values

Presence in List			EIR Response Type		
White	Gray	Black	Type 1	Type 2	Type 3
X			in white list	in white list	in white list
X	X		in gray list	in gray list	in gray list
X	X	X	in black list	in black list	in black list
X		X	in black list	in black list	in black list
	X		in gray list	in gray list	unknown
	X	X	in black list	in black list	unknown
		X	in black list	in black list	unknown
			in white list*	unknown*	unknown*

* This entry in the table indicates that there has been no match found for the IMEI in an incoming message within the database.

Default: type1

:is412gsm= (optional)

IS-41 to GSM migration prefix. To specify this parameter, the G-Port feature must be turned on.

Range: 1-15 digits, none

Valid digits are **0-9, A-F, a-f**.

none—Deletes the current value of the **is412gsm** parameter.

Default: No change to current value

:mccmnc= (optional)

E212 mobile country code and mobile network code. The G-Flex feature must be turned on before this parameter can be specified.

This parameter is mandatory if the **ccnc** parameter is specified.

Range: 4-7 digits, none

Valid digits are **0-9, A-F, a-f**.

none—Deletes the current **mccmnc** and **ccnc** parameter combination entry.

Default: No change to current value

:msisdntrunc= (optional)

MS ISDN truncation digits. Specifies number of digits to delete from the beginning of the National MSISDN (MSISDN without Country Code) before formulating the MSRN parameter of the SRI-ack response. The G-Port feature must be on before this parameter can be specified.

Range: **0-5**

Default: No change to current value

:msrndig= (optional)

The routing number to be used as is or to be concatenated with the MSISDN. The G-Port feature must be turned on before this parameter can be specified.

Range: **rn, rnidn, ccrndn**

rn — Routing number

rnidn — Routing number prefix and the international DN (dialed/directory number)

ccrndn — Country code, routing number, and national directory number

Default: **rn**

:msrnnai= (optional)

The nature of address indicator value for the MSRN. The G-Port feature must be turned on before this parameter can be specified.

This parameter is mandatory if the **msrnnp** parameter is specified.

Range: **0-7**

0—Unknown Nature of Address

1—International Number

2—National Significant Number

3—Network Specific Number

4—Subscriber Number

5—Reserved for national use

6—Abbreviated Number

7—Reserved for extension

Default: No change to current value

:msrnnp= (optional)

The numbering plan value for the MSRN. The G-Port feature must be turned on before this parameter can be specified.

This parameter is mandatory if the **msrnnai** parameter is specified.

Range: **0-15**

Default: No change to current value

:multcc= (optional)

Multiple country code. The G-Port feature must be turned on before this parameter can be specified.

Range: 1-3 digits

Valid digits are **0-9, A-F, a-f**.

Default: No change to current value

:nmultcc= (optional)

New multiple country code. The specified **multcc** value is either changed to the specified **nmultcc** value, or deleted if **nmultcc=none** is specified. The G-Port feature must be turned on before this parameter can be specified.

Range: 1-3 digits, **none**

Valid digits are **0-9, A-F, a-f**.

none—Deletes the specified **multcc** value from the multiple country code list.

Default: No change to current value

:npmsgta= (optional)

New entity address of an Intelligent Network (IN) platform for the Prepaid Short Message Service Intercept (PPSMS) Phase 1 feature. The PPSMS Phase 1 feature must be turned on before this parameter can be specified.

Range: 1-15 digits, **none**

Valid digits are **0-9, A-F, a-f**.

none—Deletes the specified **npmsgta** parameter value.

Default: No change to current value

:ppmsgta= (optional)

Entity address of an IN platform for the Prepaid Short Message Service Intercept (PPSMS) Phase 1 feature. The Prepaid Short Message Service Intercept (PPSMS) Phase 1 feature must be turned on before this parameter can be specified.

Range: 1-15 digits

Valid digits are **0-9, A-F, a-f**.

Default: No change to current value

:ppmspci1= (optional)

ITU international point code (subfields *zone-area-id*) of IN platform 1 for the Prepaid Short Message Service Intercept (PPSMS) Phase 1 feature. The PPSMS Phase 1 feature must be turned on before this parameter can be specified. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255, none**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

zone—**0-7**

area—**000-255**

id—**0-7**

Enter **none** to delete the point code.

The point code **0-000-0** is not a valid point code.

Default: No change to current value

:ppmspci2= (optional)

ITU international point code (subfields *zone-area-id*) of IN platform 2 for the Prepaid Short Message Service Intercept (PPSMS) Phase 1 feature. The PPSMS Phase 1 feature must be turned on before this parameter can be specified. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255, none**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

zone—**0-7**

area—**000-255**

id—**0-7**

Enter **none** to delete the point code.

The point code **0-000-0** is not a valid point code.

Default: No change to current value

:ppmspcn1= (optional)

ITU national point code of IN platform 1 for the Prepaid Short Message Service Intercept (PPSMS) Phase 1 feature. The PPSMS Phase 1 feature must be turned on before this parameter can be specified. The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: s-, 0-16383, aa-zz, none

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

Enter **none** to delete the point code.

Default: No change to current value

:ppmspcn2= (optional)

ITU national point code of IN platform 2 for the Prepaid Short Message Service Intercept (PPSMS) Phase 1 feature. The PPSMS Phase 1 feature must be turned on before this parameter can be specified. The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: s-, 0-16383, aa-zz, none

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

Enter **none** to delete the point code.

Default: No change to current value

:ppmsri1= (optional)

Routing Indicator of IN platform 1 for the Prepaid Short Message Service Intercept (PPSMS) Phase 1 feature. The PPSMS Phase 1 feature must be turned on before this parameter can be specified.

Range: gt, ssn

Default: No change to current value

:ppmsri2= (optional)

Routing Indicator of IN platform 2 for the Prepaid Short Message Service Intercept (PPSMS) Phase 1 feature. The PPSMS Phase 1 feature must be turned on before this parameter can be specified.

Range: gt, ssn

Default: No change to current value

:serverpfx= (optional)

Server SRI prefix.

Range: 1-4 digits, none

Valid digits are 0-9, A-F, a-f.

none—No Server SRI prefix is provisioned

Default: No change to current value

System

Default: none

:srfaddr= (optional)

Entity address of the MNP_SRF node. The G-Port feature must be turned on before this parameter can be specified.

This parameter is mandatory if the **srfnai** and **srfnp** parameters are specified.

Range: 1-15 digits
Valid digits are **0-9, A-F, a-f**.

Default: No change to current value

:srfnai= (optional)

The nature of address indicator value of the MNP_SRF. The G-Port feature must be turned on before this parameter can be specified.

This parameter is mandatory if the **srfaddr** and **srfnp** parameters are specified.

Range: **0-127**
Default: No change to current value

:srfnp= (optional)

The numbering plan value of the MNP_SRF. The G-Port feature must be turned on before this parameter can be specified.

This parameter is mandatory if the **srfnai** and **srfaddr** parameters are specified.

Range: **0-15**
Default: No change to current value

:sridn= (optional)

The Send Routing Information Dialed Number location.

Range: **tcap, sccp**
Default: No change to current value

Example

```
chg-gsmopts: defmcc=214: defmnc=34
chg-gsmopts: ccnc=33322123: mccmnc=21434
chg-gsmopts: ccnc=334: mccmnc=22435
chg-gsmopts: is412gsm=0123456789abcde
chg-gsmopts: eirimsichk=on: eirrsptype=type1
chg-gsmopts: eirimsichk=on: eirrsptype=type2: eirgrsp=blk1st
chg-gsmopts: multcc=011
chg-gsmopts: multcc=011: nmultcc=11
chg-gsmopts: msisdntrunc=1
```

The following example deletes a ccnc/mccmnc parameter combination. The value of the ccnc parameter specifies the ccnc/mccmnc parameter combination to delete:

```
chg-gsmopts: ccnc=334: mccmnc=none
chg-gsmopts: srfaddr=123456789abcdef: srfnai=0: srfnp=0
chg-gsmopts: msrndig=ccrndn
chg-gsmopts: msrnnai=1: msrnp=1
chg-gsmopts: serverpfx=0000
```

The following examples illustrate use of parameters for the IN platforms used in Prepaid Short Message Service Intercept feature:

```
chg-gsmopts: ppsmsgta=123
chg-gsmopts: ppsmsgta=123: nppsmsgta=234
```

```

chg-gsmopts:ppsmgta=234:nppsmgta=none
chg-gsmopts:ppmspci1=2-2-2:ppmsri1=gt
chg-gsmopts:ppmspci1=s-2-2-2:ppmsri1=gt
chg-gsmopts:ppmspcn1=120:ppmsri1=ssn
chg-gsmopts:ppmspci2=s-3-3-3:ppmsri2=gt
chg-gsmopts:ppmspci2=3-3-3:ppmsri2=gt
chg-gsmopts:ppmspcn2=234:ppmsri2=ssn
chg-gsmopts:ppmspci1=none:ppmspcn2=none

```

The following example shows the **sridn** parameter used with G-Port and the G-Port MNP Circular Route Prevention features.

```
chg-gsmopts:sridn=sccp
```

Dependencies

At least one parameter must be specified.

The G-Flex feature must be turned on before the following parameters can be specified: **defmcc**, **defmnc**, **ccnc**, **mccmnc**.

The G-Port feature must be turned on before the following parameters can be specified: **defmapvr**, **srfaddr**, **srfnai**, **srfnp**, **mrsndig**, **mrsnnai**, **mrsnnp**, **sridn**, **multcc**, **nmultcc**, **msisdtrunc**.

The G-Port feature must be turned on before the **sridn** parameter can be specified in the command.

The G-Port feature must be turned on before the **is412gsm** parameter can be specified in the command.

The G-Port feature must be turned on before the **serverpfx** parameter can be specified in the command.

An **is412gsm** parameter value must exist in the database before the **serverpfx** parameter can be specified.

The **serverpfx** value must be set to **none** in the database before the **is412gsm** value can be set to **none**.

The EIR feature must be enabled and turned on before the following parameters can be specified: **eirgrsp**, **eirsptype**, **eirimsichk**.

The Prepaid Short Message Service Intercept (PPSMS) Phase 1 feature must be turned on before the following parameters can be specified: **ppsmgta**, **nppsmgta**, **ppmspci1**, **ppmspci2**, **ppmspcn1**, **ppmspcn2**, **ppmsri1**, and **ppmsri2**.

The **ccnc** and **mccmnc** parameter values must be specified together in sets.

A maximum of 10 **ccnc** records can exist in the database.

The **ccnc** parameter value must not already exist in the database unless the **mccmnc=none** parameter is specified.

The **srfaddr**, **srfnai**, and **srfnp** parameters must be specified together.

The **mrsnnai** and **mrsnnp** parameters must be specified together.

A value of **none** cannot be specified for the **ccnc** parameter.

When the **nppsmgta** parameter is specified, the **ppsmgta** parameter must be specified. The **nppsmgta** parameter cannot be specified by itself.

A value of **none** cannot be specified for the **ppsmgta** parameter.

The specified **ppsmgta** parameter value must already exist in the database when the **nppsmgta** parameter is specified.

The specified **nppsmgta** parameter value cannot already exist in the database.

A maximum of 10 entries can be defined in the multiple country code list (in addition to the STP options **defcc** value).

The value **none** cannot be specified for the **multcc** parameter.

A multiple country code cannot be entered when the STP options **defcc** value is none. A **defcc** value must first be defined before the first multiple country code can be entered. See the **chg-stpopts** command.

When the **multcc** parameter is specified to enter a new value in the multiple country list, the specified value cannot already exist in the list.

When the **nmultcc** parameter is specified, the **multcc** parameter must be specified.

When the **multcc** and **nmultcc** parameters are specified to change the specified **multcc** value to the specified **nmultcc** value, the specified **nmultcc** value cannot already exist in the multiple country code list.

When the **multcc** and **nmultcc** parameters are specified to change the specified **multcc** value to the specified **nmultcc** value, the specified **multcc** value must already exist in the multiple country code list.

The specified **multcc** and **nmultcc** values cannot already be defined as the STP options **defcc** parameter value.

The specified or existing **ppsmspci1**, **ppsmspci2**, **ppsmspcn1**, or **ppsmspcn2** parameter value must be provisioned in the Mated Applications (MAP) table when the specified or existing **ppsmsri1** or **ppsmsri2** parameter value is **ssn**.

A route to a point code must already be entered before the point code can be specified as the **ppsmspci1**, **ppsmspci2**, **ppsmspcn1**, or **ppsmspcn2** parameter value. when the **ppsmsri1** or **ppsmsri2** parameter value is **gt**.

The **ppsmspci1**, **ppsmspci2**, **ppsmspcn1**, and **ppsmspcn2** parameter values cannot be the STP True Point Code.

The **ppsmspci1**, **ppsmspci2**, **ppsmspcn1**, and **ppsmspcn2** parameter values cannot be the STP Capability Point Code.

Notes

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes.

For the Prepaid Short Message Service Intercept (PPSMS) Phase 1 feature:

- The GTA digits (**ppsmgta** and **nppsmgta** parameters) are used to determine whether or not the incoming message should use the PPSMS Phase 1 function.
- A maximum of 3 GTA values (for 3 IN platforms) can be defined in the database at one time.
- Two IN platforms can be configured for loadsharing, by using the **ent-map** and **ent-mrn** commands as described in the *Feature Manual - G-Port*.
- The point code and routing indicator values (**ppsmspci1**, **ppsmspci2**, **ppsmspcn1**, **ppsmspcn2**, **ppsmsri1**, and **ppsmsri2** parameters) are used to route messages from prepaid subscribers to the correct IN for credit checking.

The **sridn** parameter can be used with G-Port only or with G-Port and G-Port MNP Circular Route Prevention. Refer to the *Feature Manual - G-Port* for more information.

Output

chg-gsmopts: defmcc=214: defmnc=34

```
rlghncxa03w 04-01-20 09:04:14 EST EAGLE 31.3.0
CHG-GSMOPTS: MASP A - COMPLTD
```

;

chg-gsms-opcode**Change GSM MAP Screening Operation Code**

Use this command to change the attributes of the GSM (Global System for Mobile Telecommunication) MAP (mobile application part) screening operation codes. The command allows you to change the default screening action and the operation-code name for a specific operation code.

Keyword: chg-gsms-opcode

Related Commands: dlt-gsms-opcode, ent-gsms-opcode, rtrv-gsms-opcode

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:opname= (mandatory)

This parameter specifies the user-defined name for the operation code. The **opname** value is defined with the **ent-gsms-opcode** command.

Range: ayyyyyyy

Up to 8 alphanumeric characters

:force= (optional)

Check Mated Application Override. This parameter must be used to complete command execution if the **npc/npc/npci/npcn/npcn24** and **nssn** parameter combination specified in the command is not already defined in the SCCP Application entity set (Remote Point Code/Mated Application Table).

Range: yes, no

Default: no

:ndfltact= (optional)

The new default screening action.

Range: pass, discard, atierr, route, forward, duplicate, dupdisc

pass—Route the message as normal to the destination; a UIM will be issued. This is intended to be a test mode and is recommended when setting up GSM Map Screening during the initial phase to assure that no MSUs will be inadvertently thrown away.

discard—Do not route the MSU. The MSU is discarded (thrown away) and an appropriate UIM is issued.

atierr—Do not route the MSU. An ATI (Any Time Interrogation) reject message is generated to the originator. This value is valid only for ATI MAP operation codes.

route—Route the message as normal to the original destination node; no UIM will be generated. The original destination is the node to which normal GTT would be sent if no GSM MAP actions are taken.

forward—Route the original message to the forward node. The original message will not be sent to the original node. If, however, the forward node is not available for routing, the MSU is routed to the original node.

duplicate—Route the message as normal to the original destination and route a copy of the original message to the duplicate node. If the MSU fails to route to the duplicate node, a UIM is generated indicating the duplicate routing failure.

dupdisc—Route the original message to the duplicate node. The original message will not be sent to the original node. If, however, the duplicate node is not available for routing, the MSU is routed to the original node.

Default: No change to the existing value

:nmapset= (optional)

New MAP set ID.

Range: 1-36000 **dflt**

dflt—Default MAP set

:nopname= (optional)

This parameter specifies the new user-defined name for the operation code.

Range: ayyyyyyy

Up to 8 alphanumeric characters

Default: No change to current value

:npc= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: npca

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001–005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006–255.

The point code 000-000-000 is not a valid point code.

:npc/npca/npci/npcn/npcn24= (optional)

New point code. The **npc/npca/npci/npcn/npcn24** and **nssn** parameters are used when the default screening action (**dfltact**) is **forward**, **duplicate**, or **dupdisc** (duplicate and discard). These parameters allow the craftsperson to change the defined node to which the input message will be routed.

:npci= (optional)

New ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

:npcn= (optional)

New ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npfmt** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: s-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:npcn24= (optional)

New 24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

:nssn= (optional)

New Subsystem Number. The **npc/npc/npci/npcn/npcn24** and **nssn** parameters are used when the new default screening action (**ndfltact**) is **forward**, **duplicate**, or **dupdisc** (duplicate and discard). These parameters allow the craftsperson to change the defined node to which the input message will be routed.

Range: 002 - 255

Example

chg-gsms-opcode:opname=ati:ndfltact=atierr

chg-gsms-

opcode:opname=ati:ndfltact=forward:npci=1-1-1:nssn=5:force=yes

chg-gsms-opcode:opname=xyz:npc=9-9-9:nssn=3

chg-gsms-opcode:opname=test2:npci=s-1-1-1

chg-gsms-

opcode:opname=test2:ndfltact=dupdisc:npci=1-1-1:nssn=5:nmapset=8

chg-gsms-

opcode:opname=ts4:ndfltact=forward:npc=1-1-2:nssn=5:nmapset=dflt

Dependencies

At least one optional parameter must be specified.

If the **ndfltact** parameter is specified and its value is **forward**, **duplicate**, or **dupdisc**, the **npc/npc/npci/npcn/npcn24** and **nssn** parameters must be specified.

The reserved word **none** cannot be specified as a value for the **opname** parameter or **nopname** parameter.

If the **npc/npc/npci/npcn/npcn24** and **nssn** parameters are specified with the **ndfltact** parameter, the **ndfltact** parameter value must be **forward**, **duplicate**, or **dupdisc**.

The **force** parameter can be specified only if the **npc/npc/npci/npcn/npcn24** parameter and the **nssn** parameter are specified.

The value specified for the **opname** parameter must already exist in the GSM Map Op-Code table.

The GSM Map Screening feature (see the **enable-ctrl-feat** command) must be turned on before this command can be entered.

The EGMS feature must be enabled and turned on before the **npc** or **npca** parameters can be specified.

The **ndfltact=atierr** parameter cannot be specified unless the value of the operation code referenced by the **opcode** parameter is **71**. The **atierr** option is valid only for ATI MAP operation codes, and the **opcode=71** parameter signifies an ATI MAP operation code.

If specified, the **npc/npca/npci/npcn/npcn24** parameter value must be a full point code.

If the **npc/npca/npci/npcn/npcn24** parameter and the **nssn** parameter are specified, and the **force** parameter is not specified as **yes**, the PC-SSN must be populated in the SCCP Application entity set (Remote Point Code / Mated Application Table).

If specified, the **npc/npca/npci/npcn/npcn24** parameter value must exist as a destination in the Ordered Route entity set or reside in a cluster (ANSI only) that exists as a destination in the Ordered Route entity set (for global title routing).

The **nmapset** parameter must be specified if the value of the **ndfltact** parameter is **forward**, **duplicate**, or **dupdisc**.

If the **nmapset** and **ndfltact** parameters are specified, or if the **ndfltact** and **pc** or **ssn** parameters are specified, then the **ndfltact** parameter must have a value of **forward**, **duplicate**, or **dupdisc**.

The **force** parameter can be specified only if the **nmapset** parameter is specified.

The Flexible GTT Load Sharing feature must be enabled before the **nmapset** parameter can be specified.

The specified new MAP set must exist.

If the **nmapset=dflt** parameter is not specified, or the **nmapset=dflt** parameter is specified, but the **force=yes** parameter is not specified, then the new PC and new SSN must exist in the new MAP set.

If the **nmapset** parameter is specified without the **ndfltact** parameter, then the **dfltact** parameter must have a previously provisioned value of **forward**, **duplicate**, or **dupdisc**.

Notes

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-).

Output

```
chg-gsms-opcode:opname=ati:ndfltact=atierr
rlghncxa03w 04-01-10 11:43:04 EST EAGLE 31.3.0
CHG-GSMS-OPCODE: MASP A - COMPLTD
;

chg-gsms-
opcode:opname=test2:ndfltact=dupdisc:npci=1-1-1:nssn=5:nmapset=8
tekelecstp 06-06-01 10:19:51 EST EAGLE 35.0.0
CHG-GSMS-OPCODE: MASP A - COMPLTD
;

chg-gsms-
opcode:opname=ts4:ndfltact=forward:npc=1-1-2:nssn=5:nmapset=dflt
tekelecstp 06-06-01 10:19:51 EST EAGLE 35.0.0
CHG-GSMS-OPCODE: MASP A - COMPLTD
;
```

chg-gta**Change Global Title Address Information**

Use this command to change the global title address information (GTA) for applicable global title selectors required to specify a global title entry.

This command changes the routing objects for messages requiring global title translations. The specified point code, subsystem number, MRN set ID, and routing indicator overwrite the existing data values.

When the Intermediate GTT Load Sharing feature and the Flexible GTT Load Sharing feature are both on, multiple relationships can be defined among a set of destination point codes in the existing MRN table. The relationship used in a particular translation is based on the GTA digits used for translation. The MRN Set ID and the post-translation PC create a key that is used to perform a lookup in the MRN table. This lookup results in a set of alternate PCs from which a PC is selected, based on relative cost, to route the MSU in most cost-effective way.

Keyword: **chg-gta**

Related Commands: **dlt-gta, ent-gta, rtrv-gta**

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:gttsn= (mandatory)

GTT set name. A GTT set is an entity to which global title addresses and selectors are assigned.

Range: *aaaaaaaa*

1 leading alphabetic and up to 8 following alphanumeric characters.

:ccgt= (optional)

Cancel called global title indicator.

Range: **yes, no**

Default: No change to **ccgt** value

:cggtasn= (optional)

CgPA GTA GTT set name.

Range: *aaaaaaaa, none*

1 leading alphabetic and up to 8 following alphanumeric characters.

none—Set names do not point to the CgGTA set.

:cgpc= (optional)

ANSI CgPA point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: **cgpc**

Range: **000-255, ***

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

The asterisk (*) value is not valid for the *ni* subfield.

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001–005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006–255**.

When **chg-sid:pctype=ansi** is specified, *ni* = **006–255** is valid if *ni* = **006–255**.

The point code **000-000-000** is not a valid point code.

:cgpci= (optional)

ITU international CgPA point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

:cgpcn= (optional)

ITU national CgPA point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: s-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:cgpcn24= (optional)

24-bit ITU national CgPA point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

:cgpcsn= (optional)

CgPA GTA GTT set name.

Range: ayyyyyyyy, none

1 leading alphabetic character and up to 8 following alphanumeric characters.

none—Set names do not point to the CgPA set.

:cgssn= (optional)

The subsystem number of the start CgPA.

Range: 0-255

:cgssnsn= (optional)

CgPA SSN GTT set name.

Range: ayyyyyyyy, none

1 leading alphabetic and up to 8 following alphanumeric characters.

none—Set names do not point to the CgSSN set.

:ecgssn= (optional)

The subsystem number of the end CgPA.

Range: **0-255**

:egta= (optional)

End global title address.

Range: 1-21 digits

Default: Same as the specified **gta** value

:force= (optional)

Check mated application override.

Range: **yes, no**

Default: **no**

:gta= (optional)

Start global title address.

Range: 1-21 digits

:mapset= (optional)

MAP set ID. This parameter specifies the Mated Application set ID.

Range: **1-3600 dflt**

dflt—Default MAP set

:mrnset= (optional)

MRN set ID. This parameter provides the Mated Relay Node set ID.

Range: **1-3000 none, dflt**

dflt—Default MRN set

none—The GTA translation does not participate in any load sharing.

:ngti= (optional)

New GTI code. When the ANSI-ITU-China SCCP Conversion and MGTT features are on and the Translated Point Code is of a different network type, this parameter specifies whether the new GTI translation format is GTI type 2 or GTI type 4.

Range: **2, 4**

:nnai= (optional)

Nature of Address Indicator. This parameter specifies the Nature of Address Indicator with which to replace the received Nature of Address Indicator.

Range: **0-127**

Default: If the **rmgtt=no** parameter is specified, there is no change to the current value.

If the **rmgtt=yes** parameter is specified, the value resets to a default of **0**.

:nnp= (optional)

New Numbering Plan. This parameter specifies the numbering plan with which to replace the received numbering plan.

Range: **0-15**

Default: If the **rmgtt=no** parameter is specified, there is no change to the current value.

If the **rmgtt=yes** parameter is specified, the value resets to a default of **0xFFFF**.

:npdd= (optional)

New Prefix Digits to be Deleted. This parameter specifies the New Prefix Digits to be Deleted with which to replace the received Prefix Digits to be Deleted.

Range: **0-21**

Default: If the **rmgtt=no** parameter is specified, there is no change to the current value.

If the **rmgtt=yes** parameter is specified, the value resets to a default of **0xFFFF**.

:npds= (optional)

New Prefix Digits String. This parameter specifies the New Prefix Digits String with which to replace the received Prefix Digits String.

Range: 1-21 digits

Default: If **:rmgtt=no** is specified, no change to current value
If **:rmgtt=yes** is specified, resets to default value of no digits.

:nsdd= (optional)

New Suffix Digits to be Deleted. This parameter identifies the New Suffix Digits to be Deleted with which to replace the received Suffix Digits to be Deleted.

Range: 0-21

Default: 0

:nsds= (optional)

New Suffix Digits String. This parameter specifies the New Suffix Digits String with which to replace the received Suffix Digits String.

Range: 1-21 digits

Default: No digits

:ntt= (optional)

New Translation Type. The point code domain translation types for EGTT are handled by the EAGLE 5 ISS protocol processing as either ANSI or ITU; therefore, ITU applies to ITU-I, ITU-I Spare, ITU-N, and ITU-N Spare. ITU-I includes ITU-I Spare, and ITU-N includes ITU-N Spare.

Range: 000-255

Default: If the **xlat** parameter does not change from **dpcngt**—No change to the current value.
If the **xlat** parameter changes from **dpcngt**—The **ntt** parameter value is removed.

:opc= (optional)

ANSI originating point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: **opca**

Range: 000-255, *

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

The asterisk (*) value is not valid for the *ni* subfield.

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001–005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006–255.

When **chg-sid:pctype=ansi** is specified, *ni*-*- is valid if *ni* = 006–255.

The point code 000-000-000 is not a valid point code.

:opci= (optional)

ITU international originating point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

:opc= (optional)

ITU national originating point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfnti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:opc24= (optional)

24-bit ITU national originating point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:opcsn= (optional)

The new OPC GTT set name.

Range: *aaaaaaaa*, **none**

1 leading alphabetic character and up to 8 following alphanumeric characters.

:pc= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*). The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: **pca**

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:pci= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:pcn= (optional)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:pcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

Default: No change to current value.

:ri= (optional)

Routing indicator.

Range: **gt, ssn**

Default: No change to current value.

:rmgtt= (optional)

Reset MGTT. This parameter resets all MGTT fields to default values before applying values for other parameters in the command.

Range: **yes, no**

Default: **no**

:selid= (optional)

Selector ID.

Range: **0-65534 none**

:split= (optional)

Split or change an existing GTA range.

Range: **yes, no**

yes — Splits the existing GTA range.

no — Changes the existing GTA range.

Default: yes

:ssn= (optional)

Subsystem number.

Range: 002-255

Default: If the **xlat** parameter is not changed to **dpcngt**—No change to current value.
If the **xlat** parameter is changed to **dpcngt**—The **ssn** parameter value is removed.

:xlat= (optional)

Translate indicator. This parameter is used to specify translation actions and routing actions.

Range: dpc, dpcngt, dpcssn, udts, disc

Default: No change to current value.

Example

chg-

gta:gttsn=lidb:gta=9195554321:xlat=dpcssn:ri:ssn:pc=001-255-252:ssn=254

chg-

gta:gttsn=test:gta=100000:egta=199999:pca=1-1-1:xlat=dpcngt:ri=gt:rmgtt=yes:nnp=3:nnai=120

chg-gta:gttsn=setnat003:gta=987658321198765432102:pcn=s-129

chg-gta:gttsn=itui1:gta=987658321198765432112:pci=s-1-210-1

chg-gta:gttsn=setnat003:gta=987658321198765432122:pcn=s-128-aa

The following examples require the Flexible GTT Load Sharing feature to be ON.

chg-

gta:gttsn=setmap:gta=2345678901:egta=3456789012:ri:ssn:PC=1-1-3:ssn=225:mapset=2

chg-

gta:gttsn=setmap:gta=2345678911:egta=3456789022:ri:ssn:PC=2-2-2:ssn=221:mapset=df1t

In the following example, the database contains a GTA range [5556000-5558000], but no part of the GTA range [5558001-5559000] exists. The command deletes the GTA range [5556000-5558000] from the database and adds two new GTA ranges [5556000-5556799] and [5556800-5559000].

chg-gta:gttsn=tst1:gta=5556800:egta=5559000:split=yes

The following command deletes the GTA range [5556000-5556799] from the database and adds a new GTA range [5556200-5556500] to the database. All the parameters for specified GTA range [5556200-5556500] have the same values as that of the deleted [5556000-5556799] GTA range, except the pc parameter that is assigned the specified value of 1-1-2.

chg-gta:gttsn=tst1:gta=5556200:egta=5556500:pc=1-1-2:split=no

The following command deletes the GTA range [5556200-5556500] from the database and adds two new GTA ranges [5556200-5556400] and [5556401-5556500] to the database.

chg-gta:gttsn=tst1:gta=5556401:egta=5556500

The following example specifies the default MRN set.

chg-gta:gttsn=setmrn:gta=1234567880:pc=1-1-2:mrnset=df1t

The following example specifies the mrnset=none parameter to remove the MRN set ID.

chg-

gta:gttsn=setmrn:gta=1234567890:egta=2234567890:pc=1-1-2:mrnset=none

The following example specifies MRN set ID 2.

```
chg-
gta:gttsn=setmrn:gta=2345678901:egta=3456789012:pc=1-1-3:mrnset=2
chg-
gta:gttsn=setcdgta:gta=123456789012345678901:egta=223456789012345
678901:cggtasn=cggtas1:opcsn=opc1
chg-
gta:gttsn=setcdgta:gta=123456789012345678901:egta=223456789012345
678901:selid=1024:opcsn=opc1
chg-
gta:gttsn=setcdgta:gta=123456789012345678901:egta=223456789012345
678901:cggtasn=none
chg-
gta:gttsn:setcggtas:gta=323456789012345678901:egta=323456789012345
678901:cgssnsn=none
chg-gta:gttsn=setopc:opca=002-001-001:xlat=dpcssn:ri=ssn:
pca=001-001-001:ssn=20:cgssnsn=setcgssnsn
chg-gta:gttsn=setcgpc:cgpc=001-001-001:xlat=dpcssn:ri=ssn:
pca=001-001-001:ssn=20:cgssnsn=setcgssn
chg-gta:gttsn=setcgssn:cgssn=100:ecgssn=200:xlat=dpcssn:ri=ssn:
pca=001-001-001:ssn=20
chg-gta:gttsn=set1:gta=2543:egta=2943:xlat=disc
chg-gta:gttsn=set2:cgpc=1-2-*:xlat=udts
chg-gta:gttsn=set3:opcn=2543:xlat=udts
chg-gta:gttsn=set4:cgssn=25:ecgssn=29:xlat=disc
```

Dependencies

The EGTT feature must be turned on before this command can be entered.

The MGTT feature must be turned on before the **rmgtt**, **nnp**, **nnai**, **ngti**, **nsdd**, **nsds**, **npdd**, and **npds** parameters can be specified.

The ANSI-ITU-China SCCP Conversion feature must be enabled and turned on before the **ngti** parameter can be specified.

The ANSI-ITU-China SCCP Conversion feature must be enabled and turned on before a translated point code that is of a different domain than the **gttsn** can be specified.

The **nsdd**, **nsds**, **npdd**, and **npds** parameters cannot be changed with this command. Use the **rmgtt** parameter to reset all MGTT entry values to their default values, and enter the command again to specify new MGTT parameter values.

At least one optional parameter must be specified.

The **ssn**, **ri**, **cgssn**, or **ecgssn** parameters cannot have an asterisk (*) as a value.

The **gttsn** parameter must be specified, cannot not have a value of **none**, and must match an existing **gttsn**.

The **pc/pca/pci/pcn/pcn24** parameter cannot be out of range and must be a full point code.

If the **egta** parameter is specified, the values of the **gta** and **egta** parameters must be the same length, and the value of the **egta** parameter must be greater than value of the **gta** parameter.

When the **ngti=4** parameter is specified, the **nnp** and **nnai** parameters must be specified.

If the **ngti=4** parameter is specified, then the translated point code cannot be ANSI. For ANSI point codes, the GTI value must be **2**.

If the **ngti=2** parameter is specified, the **nnp** and **nnai** parameters cannot be specified.

The **ccgt** and **ngti** parameters cannot be specified together in the command.

If the ANSI-ITU-China SCCP Conversion feature is not on, and the specified GTT set is an ANSI set, then the **pc/pca** parameter must be a valid ANSI point code.

If the ANSI-ITU-China SCCP Conversion feature is not on, and the specified GTT set is an ITU set, then the **pci/pcn/pcn24** parameter must be a valid ITU point code.

The length of the specified **gta** parameter must match the number of digits provisioned for the specified GTT set (**gttsn**). If the VGTT (variable length GTT) feature is turned on, then there can be up to 10 GTA lengths per GTT set. When the **ent-gta** command is entered to create entries, the software keeps track of the lengths and allows only 10 different lengths. The global title address specified for the GTT set must have the same number of digits as an existing GTA.

The specified **gta/egta** range must exist for the specified GTT set in the STP active database. While an exact match is not required, an overlap with another range cannot be specified. If the range overlaps, an error is generated that displays a list of overlapped global title addresses. An example follows that shows what happens when the user attempts to enter a range (such as 8005550000 to 8005559999) that overlaps an existing range. The overlapping links must match. If they do not, error message E2401 is generated displaying the list of overlapped global title addresses:

The following GTA ranges overlap the input GTA range

```
START GTA END GTA
8005550000 8005551999
8005552000 8005553999
8005554000 8005555999
CHG-GTA: MASP A - Command Aborted
```

If the ANSI-ITU-China SCCP Conversion feature is not on, the **ntt** parameter can be specified only when the **xlat=dpcngt** parameter is specified.

If the ANSI-ITU-China SCCP Conversion feature is on, then the **ntt** parameter can be specified only when the value of the **xlat** parameter is **dpc** or **dpcngt**.

If the ANSI-ITU-China SCCP Conversion feature is on, and the **ntt** parameter is specified, then the **ri=gt** parameter must be specified.

The **ngti** parameter can be specified only when the translated point code and the translation type are in different domains, or are both in the ITU domain.

If the **xlat=dpcngt** parameter is specified, the **ntt** parameter must be specified.

If a new or existing **xlat=dpcngt** parameter is specified, the new or existing value of the **ri** parameter must be **gt**.

If the **ssn** parameter is specified, the new or existing value of the **xlat** parameter must be **dpcssn**.

If the **xlat=dpcssn** parameter is specified, then the **ssn** parameter must be specified.

If the **pc/pca/pci/pcn/pcn24** parameter is specified, and the point code is the STP true point code, then the value of the new or existing **xlat** parameter must be **dpcssn**, and the new or existing value of the **ri** parameter must be **ssn**.

If one or both of the **pc/pca/pci/pcn/pcn24** parameter and the **ssn** parameter is specified, and the point code is the STP true point code, the **ssn** value must exist in the SS-APPL table.

If the **pc/pca/pci/pcn** parameter is specified, then it must exist as a destination in the Route table or reside in a cluster that exists as a destination in the Route table (for global routing) unless the point code is the STP's true point code.

If new or existing **ri=ssn** and **xlat=dpc** parameters are specified, and the **pc/pca/pci/pcn/pcn24** parameter is not specified, then the existing PC must exist in the Remote Point Code/MAP table, unless the **force=yes** parameter is specified.

If the new or existing **ri=ssn**, **xlat=dpc**, and **pc/pca/pci/pcn/pcn24** parameters are specified, then the new PC must exist in the Remote Point Code/MAP table, unless the **force=yes** parameter is specified.

If a new or existing **ccgt=yes** parameter is specified, then the new or existing value of the **ri** parameter must be **ssn**.

If a new or existing **ri=gt** parameter is specified, then the new or existing value of the **ccgt** parameter must be **no**.

If the new or existing **pc/pca/pci/pcn/pcn24** parameter is an STP PC or CPC, the **ccgt=no** parameter must be specified.

The **nnp**, **nnai**, **ngti**, **nsdd**, **nsds**, **npdd**, and **npds** parameters cannot be specified with the **rmgtt** parameter in the command.

If new or existing **ri=ssn** parameter and **xlat=dpcssn** parameters are specified, the new or existing **xlat=dpcssn** must exist in the Remote Point Code/MAP table, unless the **force=yes** parameter is specified.

The GTT table cannot be full.

The **mrnset** parameter must be specified if the **ri=gt** parameter is specified.

If the Flexible GTT Load Sharing feature is enabled, the specified PC must already exist in the specified MRN set.

The specified MRN set must already exist in the MRN table.

If the Flexible GTT Load Sharing feature is enabled, the specified PC must exist in the MRN set.

The **mrnset** parameter can be specified only when the Flexible GTT Load Sharing feature is enabled.

The **mrnset** parameter cannot be specified when the **ri=ssn** parameter is specified.

The SEAS command can operate only on the default MRN set or the default MAP set.

The **mapset** parameter can only be specified if the Flexible GTT Load Sharing feature is enabled, and the **ri=ssn** parameter is specified. If the **ri=ssn** parameter is specified, the **mapset** parameter must be specified. If the **ri=gt** parameter is specified, the **mapset** parameter cannot be specified.

The **mapset** parameter can be specified only when the Flexible GTT Load Sharing feature is enabled.

The specified MAP set must exist in the database.

The specified or previously provisioned PC/SSN must exist in the specified or previously provisioned MAP set.

The SEAS command cannot operate on any MAP set other than the default MAP set.

If the **xlat=dpc** parameter is specified, and the value of the **force** parameter is not **yes**, then the point code and MAP set must exist in the MAP table.

The specified GTA must occur within an existing GTA range in the specified GTT Set.

Either the **gta**, **cgpc/cgpca/cgpci/cgpcn/cgpcn24**, **opc/opca/opci/opcn/opcn24** or **cgssn** parameter must be specified.

If the **cgssnsn** parameter is specified, the **cggtasn**, **opcsn**, **cgpcsn**, and **selid** parameters cannot be specified.

If the **cgssn** parameter is specified, the **cggtasn**, **cgpcsn**, **cgssnsn**, **opcsn**, and **selid** parameters cannot be specified.

The **cgpc/cgpca/cgpci/cgpcn/cgpcn24** and **opc/opca/opci/opcn/opcn24** parameters must have values within the valid range for each subfield.

If the **ecgssn** parameter is specified, its value must be greater than the value of the **cgssn** parameter.

If the **xlat** parameter has a value of **udts** or **disc**, the **gta/egta**, **cgpc**, **opc**, or **cgssn/ecgssn** parameters are the only other optional parameters that can be specified.

The Origin-based SCCP Routing feature must be enabled before the **cggtasn**, **cgpcsn**, **cgssnsn**, **opcsn**, **cgpc/cgpca/cgpci/cgpcn/cgpcn24**, **opc/opca/opci/opcn/opcn24**, **(e)cgssn**, or **selid** parameters are specified or before the **xlat** parameter is specified with a value of **udts** or **discard**.

The **cgssnsn** parameter cannot be specified if the GTTSN set type has a value of **cdgta/cgssn**. The **cggtasn**, **cgpcsn**, or **opcsn** parameters cannot be specified if the GTTSN set type does not have a value of **cdgta**.

The **cggtasn**, **cgpcsn**, and **selid** parameters are mutually exclusive. A translation entry has only one valid value of the three at any given time. If one of the parameters has a valid value, and the entry is changed to set another one to a valid value, the first parameter must be changed to have a value of **none**.

The **gta** parameter must be specified if the GTTSN set type has a value of **cdga** or **cggtta**. The **gta** parameter cannot be specified for other set types.

The **cgpc/cgpca/cgpci/cgpcn/cgpcn24** parameter must be specified if the GTTSN set type has a value of **cgpc**. The **cgpc/cgpca/cgpci/cgpcn/cgpcn24** parameter cannot be specified for other set types.

The **opc/opca/opci/opcn/opcn24** parameter must be specified if the GTTSN set type has a value of **opc**. The **opc/opca/opci/opcn/opcn24** cannot be specified for other set types.

The **cgssn** parameter must be specified if the GTTSN set type is **cgssn**. The **cgssn** parameter cannot be specified for other set types.

The range specified by the **cgssn/ecgssn** parameters cannot overlap a currently existing range for the specified GTT set.

The value specified for the GTT set name (the **gttsn** parameter) must match the corresponding type in the GTTSET table. The following GTT set names and matching GTT set types may be specified:

- GTT set name specified by the **cgssnsn** parameter must be type **cgssn**
- GTT set name specified by the **cggtasn** parameter must be the type **cggtta**
- GTT set name specified by the **cgpcsn** parameter must be type **cgpc**
- GTT set name specified by the **opcsn** parameter must be type **opc**

If the specified GTT set is an ANSI set, the **cgpc/cgpca** and **opc/opca** parameters must be valid ANSI point codes. If the specified GTT set is an ITU set, the **cgpci/cgpcn/cgpcn24** and **opci/opcn/opcn24** parameters must be valid ITU point codes.

The set domain of the **cgpcsn** parameter must be the same as the set domain of the **gttsn** parameter. For example, if the set domain of the **gttsn** parameter is ANSI, then the set domain of the **cgpcsn** parameter must be ANSI. If the set domain of the **gttsn** parameter is ITU, then the set domain of the **cgpcsn** parameter must be ITU.

The set domain of the **opcsn** parameter must be the same as the set domain of the **gttsn** parameter. For example, if the set domain of the **gttsn** parameter is ANSI, then the set domain of the **opcsn** parameter must be ANSI. If the set domain of the **gttsn** parameter is ITU, then the set domain of the **opcsn** parameter must be ITU.

The set domain of the **cgssnsn** parameter must be the same as the set domain of the **gttsn** parameter. For example, if the set domain of the **gttsn** parameter is ANSI, then the set domain of the **cgssnsn** parameter must be ANSI. If the set domain of the **gttsn** parameter is ITU, then the set domain of the **cgssnsn** parameter must be ITU.

The set domain of the **cggtasn** parameter must be the same as the set domain of the **gttsn** parameter. For example, if the set domain of the **gttsn** parameter is ANSI, then the set domain of the **cggtasn** parameter must be ANSI. If the set domain of the **gttsn** parameter is ITU, then the set domain of the **cggtasn** parameter must be ITU.

The range specified by the **cgssn/ecgssn** parameters must exist for the specified GTT set in the STP active data base. An exact match is not required.

If the value of the **xlat** parameter is changed from **udts** or **disc** to **dpc**, **dpcngt**, or **dpcssn**, then the **gta/egta**, **cgpc**, **opc**, **cgssn/ecgssn**, **pc/pca/pci/pn/pcn24**, and **ri** parameters must be specified. If the value of the **xlat** parameter is **udts** or **disc**, changing the PC or other fields requires the **xlat** parameter value to be changed to a value other than **udts** or **disc**.

The **selid** parameter can be specified only if the GTTSN set type has a value of **cdgta**.

The point code specified by the **cgpc** or **opc** parameter must exist.

The **cgpc**, **cgssn**, **gta**, and **opc** parameters are mutually exclusive. Each of these parameters must be specified individually in separate commands.

Notes

The maximum length of the resulting GTA string must not exceed 21 digits when translation is complete.

If the EGTT feature is turned on, then the GTT Selector (**ent/chg/dlt/rtrv-gttset**), GTT Set (**ent/dlt/rtrv-gttset**), and GTA (**ent/chg/dlt/rtrv-gta**) commands replace the Translation Type (**ent/dlt/rtrv-tt**) and Global Title Translation (**ent/chg/dlt/rtrv-gtt**) commands. All data previously provisioned with these commands is maintained.

If a GTT is being deleted or changed and the point code (**dpc** or **rte**) is not found in the route table (unless the point code is the STP's true point code), then the following message is displayed in the terminal scroll area:

NOTICE: No DPC and/or RTE found for GTT being deleted or changed.

The above situation may occur for the following reasons:

- A database was upgraded from a release prior to EAGLE 5 ISS Release 27.1 or IP⁷ Secure Gateway Release 3.0 when GTT entries were not linked to the route table and the deletion of the **dpc** was permitted. The GTT referenced a **dpc/rte** that was deleted, and the enforce reference counts between the GTT and route tables were not updated.
- A serious problem occurred in which the reference count rules were not enforced and a **dpc** and/or **rte** were deleted while being referenced by a GTT entry. This indicates a software error; notify the Customer Care Center at (888) FOR-TKLC.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix **s-** and the private and spare point code subtype prefix (**ps-**). All of the point code types support the private (internal) point code subtype prefix (**p-**).

When the Flexible GTT Load Sharing feature and the Intermediate GTT Load Sharing feature are on, multiple relationships can be defined among a set of destination point codes in the existing MRN table. The relationship used in a particular translation is based on the GTA digits used for translation. The **mrnset** parameter and the post-translation PC create a key that is used to perform a lookup in the MRN table. This lookup results in a set of alternate PCs, from which a PC is selected, based on relative cost, to route the MSU in most cost-effective way.

When the Flexible GTT Load Sharing feature is turned on, multiple relationships can be defined among a set of PC/SSN pairs in the existing MAP table. The relationship used in a particular translation is based on the GTA digits used for translation.

When the Origin-based SCCP Routing feature is enabled, the CdPA GTA entry can be provisioned in addition to the CgPA GTA, CgPA PC, CgPA SSN, and OPC entries. When provisioning, the Advanced CdPA GTA entry can associate with the CgPA GTA set or the CgPA PC set, the SELID and/or OPC set; the CgPA GTA, CgPA PC, or OPC can associate with the CgPA SSN set; the CgPA SSN cannot associate with any other GTT set. The Advanced CdPA GTA entry may contain the selector ID along with CgPA information present in the MSU to search the Selector table again for the CgPA GTA or CgPA PC Set.

Output

```
chg-
gta:gttsn=setmap:gta=2345678901:egta=3456789012:ri:ssn:PC=1-1-3:s
sn=225:mapset=2
      tekelecstp 06-05-27 11:43:27 EST  EAGLE 35.0.0
      CHG-GTA: MASP A - COMPLTD
;
```

chg-gtcnv

Change Global Title Conversion

Use this command to change entries in the Default Global Title Conversion table. A table entry is identified by the direction and either the **tta** parameter, the **tti** parameter, or the **tti/np/nai** parameter combination. The Notes section for this command describes rules for changing entry information.

Keyword: chg-gtcnv

Related Commands: dlt-gtcnv, ent-gtcnv, rtrv-gtcnv

Command Class: Database Administration

Parameters

:dir= (mandatory)

Direction of conversion.

Range: **atoi, itoa, both**

atoi—ANSI to ITU conversion

itoa—ITU to ANSI conversion

both—Conversion in both directions

:nai= (optional)

Nature of Address Indicator. This parameter is mandatory when **gtixlat=24** is specified, and cannot be specified when **gtixlat=22** is specified.

Range: **0-63 ***

Default: No change to current value

:np= (optional)

Numbering Plan. This parameter is mandatory when **gtixlat=24** is specified, and cannot be specified when **gtixlat=22** is specified.

Range: **0-15 ***

Default: No change to current value

:npdd= (optional)

The number of New Prefix Digits to be deleted, which will be replaced with the New Prefix Digits String (**npds**).

Range: **0-21**

Default: No change to current value

:npds= (optional)

The New Prefix Digits String with which to replace the deleted Prefix Digits.

Range: 1-21 digits

Default: No change to current value

:nsdd= (optional)

The number of New Suffix Digits to be deleted, which will be replaced with the New Suffix Digits String (**nsds**).

Range: 0-21

Default: No change to current value

:nsds= (optional)

The New Suffix Digits String with which to replace the deleted Suffix Digits.

Range: 1-21 digits

Default: No change to current value

:rdmod= (optional)

Reset digit modifiers (**npdd** and **npds** or **nsdd** and **nsds**) values to "no digit modification."

Range: yes, no

yes—Reset the **npdd** and **npds** parameter or **nsdd** and **nsds** parameter values.

no—Do not reset the **npdd** and **npds** parameter or **nsdd** and **nsds** parameter values.

Default: No change to current value

:tta= (optional)

ANSI translation type. This parameter is mandatory when **dir=atoi** or **dir=both** is specified.

Range: 0-255 *

Default: No change to current value

:tti= (optional)

ITU translation type. This parameter is mandatory when **dir=atoi** is specified.

Range: 0-255 *

Default: No change to current value

Example

The following example changes a **dir=atoi** entry's current **tti** value to 5.

chg-gtcnv:dir=atoi:tta=10:tti=5

The following example changes a **dir=atoi** entry's current **tti**, **nai**, and **np** values to 7, 8, and 6 respectively, and either changes or adds the **nsdd** and **nsds** values.

chg-gtcnv:dir=atoi:tta=11:tti=7:nai=8:np=6:nsdd=3:nsds=123

The following example changes a **dir=itoe** entry's current **tta** value to 11, and either changes or adds the **npdd** and **npds** values.

chg-gtcnv:dir=itoe:tta=11:tti=7:npdd=3:npds=123

The following example changes a **dir=itoe** entry's current **tta** value to 12, and either changes or adds the **nsdd** and **nsds** values.

chg-gtcnv:dir=itoe:tta=12:tti=7:nai=8:np=6:nsdd=5:nsds=45667

The following example adds or changes a **dir=both** entry's **nsdd** and **nsds** values.

chg-gtcnv:dir=both:tta=12:tti=33:nsdd=3:nsds=456

The following example changes a default **dir=atoi** entry's current **tti** value to 9, and either changes or adds the **nsdd** and **NSDS** values.

chg-gtcnv:dir=atoi:tta=*:tti=9:nsdd=1:nsds=9

The following example changes a default **dir=atoi** entry's current **tti**, **nai**, and **np** value to 4, 6, and 5 respectively.

chg-gtcnv:dir=atoi:tta=*:tti=4:nai=6:np=5

The following example changes a default dir=itua entry's current tta value to 17, and either changes or adds the npdd and npds values.

chg-gtcnv:dir=itua:tta=17:tti=*:nai=*:np=*:npdd=3:npds=123

The following example resets existing npdd/npds or nsdd/nsds values to "no digit modification."

chg-gtcnv:dir=both:tta=12:tti=11:rdmod=yes

Dependencies

The ANSI-ITU-China SCCP Conversion feature must be turned on before this command can be entered.

When **dir=atoi** is specified, the **tta** parameter must be specified.

When **dir=both** is specified, at least the **tta** and **tti** parameters must be specified.

When **dir=both** is specified, no asterisk (*) parameter values can be specified.

When **dir=atoi** is specified, the asterisk parameter value (*) can be specified only for the **tta** parameter.

When **dir=itua** is specified, the asterisk parameter value (*) must be specified for the **tti**, **np**, and **nai** parameters.

When **dir=itua** and **gtixlat=22** are specified, asterisk parameter values (*) cannot be specified; **gtixlat=24** must be specified with asterisk parameter values when **dir=itua** is specified.

The specified **dir**, **tta**, **tti**, **np**, and **nai** parameter combination cannot already exist in the database.

The **nsdd** and **nsds** parameters cannot be used in the same command with the **npdd** and **npds** parameters.

The Default Global Title Conversion table can contain a maximum of 1000 entries.

Notes

The use of asterisks (wildcards) is allowed only once for each direction of ANSI to ITU and ITU to ANSI. This provides a configurable default.

In the conversion direction of ANSI to ITU, an asterisk can be specified only for the ANSI **tta** parameter.

In the conversion direction of ITU to ANSI, the asterisk value must be specified for the **itu tti**, **np**, and **nai** parameters.

Asterisks are not allowed when conversion is in both directions (**dir=both**).

The suffix digit manipulation parameters **nsdd** and **nsds** cannot be specified in the same command with the prefix digit manipulation parameters **npdd** and **npds** parameters. The **npdd** and **nsdd** parameters specify how many digits to delete, if any, from the beginning or end respectively of the Global Title address digits. The **npds** and **nsds** parameters specify what digits, if any, to append to the beginning or end respectively of the Global Title address digits.

The **gtixlat** parameter is expressed in the form of the ANSI GTI and the ITU GTI. The **gtixlat** parameter is used to indicate the conversion of the Global Title Indicator between the ANSI and ITU standards. For example: A **gtixlat** value of **24** converts an incoming ANSI GTI2 to an outgoing ITU GTI 4 or an incoming ITU GTI 4 to an outgoing ANSI GTI2.

Output

```
chg-gtcnv:dir=atoi:gtixlat=22:tta=10:tti=5
rlghncxa03w 03-11-07 11:43:07 EST EAGLE 31.3.0
CHG-GTCNV: MASP A - COMPLTD
;
```

chg-gtt**Change Global Title Translation**

Use this command to change the routing objects for messages requiring global title translation. The global title addresses remain unchanged.

If the EGTT (Enhanced Global Title Translation) feature is turned on, the system will no longer accept GTT (Global Title Translation) and TT (Translation Type) commands. Refer to the new command sets that replace the GTT and TT commands:

- GTT Selector commands (**ent/chg/dlt/rtrv-gttsel**)
- GTT Set commands (**ent/dlt/rtrv-gttset**)
- GTA commands (**ent/chg/dlt/rtrv-gta**).

See the "Notes" section in this command description for functions provided when various controlled features are turned on.

Keyword: **chg-gtt**

Related Commands: **dlt-gtt, ent-gtt, rtrv-gtt**

Command Class: Database Administration

Parameters

NOTE: At least one of these parameters must be specified: pc/pca/pci/pcn/pcn24, ri, ssn, ttn, type/typea/typei/typen/typen24, xlat.

NOTE: See , "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:gta= (mandatory)

Global title start address is the beginning of a range of global title digits.

Range: 1-21 digits

:egta= (optional)

Global title end address is the end of a range of global title digits.

Range: 1-21 digits

Default: **egta** same as **gta**

:mapset= (optional)

The MAP set ID.

Range: **1-36000 dflt**
dflt—Default MAP set

:mrnset= (optional)

The MRN set ID.

Range: **1-3000 none, dflt**
dflt—Default MRN set

none—The GTT translation does not participate in any load sharing

:ngt= (optional)

New global title

Range: **000-255**

Default: If the value for the **xlat** parameter changes from **dpcngt**, the **ngt** parameter is removed.

If the value for the **xlat** parameter does not change from **dpcngt**, there is no change to the **ngt** parameter value.

:ngti= (optional)

New GTI code. When the ANSI-ITU-China SCCP Conversion and MGTT features are on and the Translated Point Code is of a different network type, the **ngti** parameter specifies whether the new GTI translation format is GTI type 2 or GTI type 4.

Range: 2, 4

:nnai= (optional)

New Nature of Address Indicator. This parameter identifies the Nature of Address Indicator with which to replace the received Nature of Address Indicator.

Range: 0-127

Default: If the **rmgtt=no** parameter is specified, there is no change to the current value.
If the **rmgtt=yes** parameter is specified, the value resets to a default of 0.

:nnp= (optional)

New Numbering Plan. This parameter identifies the Numbering Plan with which to replace the received Numbering Plan.

Range: 0-15

Default: If the **rmgtt=no** parameter is specified, there is no change to the current value.
If the **rmgtt=yes** parameter is specified, the value resets to a default of 0xFFFF.

:npdd= (optional)

New Prefix Digits to be Deleted. This parameter identifies the new prefix digits to be deleted with which to replace the received prefix digits to be deleted.

Range: 0-21

Default: If the **rmgtt=no** parameter is specified, no change to the current value.
If the **rmgtt=yes** parameter is specified, the value resets to a default of 0xFFFF.

:npds= (optional)

New Prefix Digits String. This parameter identifies the new prefix digits string with which to replace the received prefix digits string.

Range: 1-21 digits

Default: If the **rmgtt=no** parameter is specified, there is no change to the current value.
If the **rmgtt=yes** parameter is specified, the value resets to a default of no digits.

:nsdd= (optional)

New Suffix Digits to be Deleted. This parameter identifies the New Suffix Digits to be Deleted with which to replace the received Suffix Digits to be Deleted.

Range: 0-21

Default: 0

:nsds= (optional)

New Suffix Digits String. This parameter identifies the New Suffix Digits String with which to replace the received Suffix Digits String.

Range: 1-21 digits

Default: No digits

:pc= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: **pca**

Range: p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:pc/pca/pci/pcn/pcn24= (optional)

Point code.

:pci= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:pcn= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:pcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*) The *prefix* subfield indicates a private point code *prefix-ni-nc-ncm*.(*prefix-ni-nc-ncm*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:ri= (optional)

Routing Indicator. This parameter provides routing instructions to the receiving signaling point. In gateway screening, messages may be screened based on the value of the routing indicator.

Range: **gt, ssn**

gt— Allow a called party address with a routing indicator value of **global title**.

ssn— Allow a called party address with a routing indicator value of **dpc/ssn**.

Default: No change in current value.

:rmgtt= (optional)

This parameter resets all MGTT fields to default values before applying values for other parameters in the command.

Range: **yes, no**

Default: **no**

:split= (optional)

Split or change an existing GTA range.

Range: **yes, no**

yes— Split the existing GTA range.

no— Change the existing GTA range.

Default: **yes**

:ssn= (optional)

Subsystem number

Range: **002-255**

Default: If the **xlat=dpcngt** parameter is specified, there is no change to the current value.
If the **xlat=dpcngt** parameter is not specified, the **ssn** parameter is removed.

:ttn= (optional)

Translation type name.

Range: *aaaaaaaa*

1 alphabetic character followed by up to 7 alphanumeric characters

Default: No translation name is given

:type/typea/typei/typen/typen24= (optional)

Translation type. This parameter identifies the translation type and network type. This parameter is the decimal representation of the 1-byte field used in SS7.

The **type** and **typea** parameters specify an ANSI network.

The **typei** parameter specifies an ITU-international network.

The **typen** parameter specifies an ITU-national network.

The **typen24** parameter specifies a 24-bit ITU-national network.

A translation type numeric value may be entered as ANSI type (**type** or **typea**) and also as an ITU type (**typei** or **typen**). However, they are separate entities.

The point code domain translation types for GTT are handled by the EAGLE 5 ISS protocol processing as either ANSI or ITU; therefore, ITU applies to ITU-I, ITU-I Spare, ITU-N, and ITU-N Spare. ITU-I includes ITU-I Spare, and ITU-N includes ITU-N Spare.

Range: **0-255**

Default: No translation type is specified

:xlat= (optional)

Translate indicator. This parameter is used to determine translation actions and routing actions.

Range: **dpc, dpcssn, dpcngt**

Default: No change in current value.

Example

```
chg-
gtt:type=5:gta=9195551212:egta=9195551999:xlata=dpcssn:ri=ssn:pc=2
55-002-001:ssn=255
```

```
chg-
gtt:ttt=lidb2:gta=9197771212:egta=9197771999:xlata=dpcngt:ri=gt:pc
=255-002-001:ngt=3
```

```
chg-gtt:ttt=lidb6:gta=910777:pc=255-002-002
```

```
chg-gtt:
type=10:gta=8005553232:egta=8005554000:rmgtt=yes:nnp=3:npdd=5
```

```
chg-
gtt:type=11:gta=8005553232:egta=8005554000:nnai=4:nnp=4:nsdd=5:ns
ds=2341:ngti=4
```

```
chg-gtt:gta=123456:pci=s-1-129-7:typei=41
```

```
chg-gtt:gta=223456:pcn=s-128-aa:typen=3
```

```
chg-
gtt:ttt=setmrn:gta=1234567890:egta=2234567890:pc=1-1-2:mrnset=non
e
```

```
chg-
gtt:ttt=setmrn:gta=2234567891:egta=2234567892:pc=1-1-2:mrnset=df
lt
```

```
chg-
gtt:ttt=setmrn:gta=2345678901:egta=3456789012:pc=1-1-3:mrnset=2
```

The following examples require the Flexible GTT Load Sharing feature to be ON.

```
chg-
gtt:ttt=setmap:gta=2345678901:egta=3456789012:ri=ssn:pc=1-1-3:ssn
=10:mapset=2
```

```
chg-
gtt:ttt=setmap:gta=2345678911:egta=3456789022:ri=ssn:pc=2-2-2:ssn
=6:mapset=df
lt
```

The database contains a GTA range [5556000-5558000], but no part of the GTA range [5558001-5559000] exists. The following command deletes the GTA range [5556000-5558000] from the database and adds a new GTA range [5556800-5559000] to the database.

```
chg-gtt:ttt=tst1:gta=5556800:egta=5559000:split=no
```

The following command deletes the GTA range [5556800-5559000] from the database and adds three new GTA ranges [5556800-5556899], [5556900-5557000] and [5557001-5559000] to the database.

```
chg-gtt:ttt=tst1:gta=5556900:egta=5557000
```

Dependencies

This command is not valid when the EGTT feature is turned on.

If the **pcn** parameter is specified, then its format must match the format that was assigned with the **chg-stpopts:npfcmi** parameter.

If the **ttt** parameter is specified, then that name must correspond to a translation type entry.

If the translation type is specified, then the translation type must already exist.

The network type (ANSI, ITU-I, ITU-N, or 24-bit ITU-N) of the translation type and the translated point code must be the same.

The ANSI-ITU-China SCCP Conversion feature must be on before a translated point code and a translation type in different network types can be specified.

The range of global title addresses to be changed, as specified by the start and end global title addresses, must match exactly an existing range in the global title translation data for the specified translation type.

If the new or existing value of the **xlat** parameter is **dpc**, the new or existing value of the **ri** parameter is **ssn**, and the **pc/pca/pci/pcn** parameter is specified, the new point code must exist in the Remote Point Code/MAP table.

If the new or existing value of the **xlat** parameter is **dpc**, the new or existing value of the **ri** parameter is **ssn**, and the **pc/pca/pci/pcn** parameter is not specified, a point code must exist in the Remote Point Code/MAP table.

If the current value of the **xlat** parameter is **dpcssn**, and a value of **dpc** or **dpcngt** is entered for the **xlat** parameter, a value for the **ssn** parameter must not be entered, and the current value for the **ssn** parameter is removed.

If the new value for the **xlat** parameter is **dpcssn**, and the current value for the **ssn** parameter has been removed, then a value for the **ssn** parameter must be specified.

The start **gta** length must equal the number of digits specified by the translation type. If the VGTT (variable length GTT) feature is turned on, then up to 10 GTA lengths per translation type are allowed. When the **ent-gtt** command is entered to create entries, the software keeps track of the lengths and allows only ten different lengths. The global title address specified for the translation type must then have the same number of digits as an existing GTA.

The maximum length of the resulting GTA string must not exceed 21 digits when translation is complete.

The **nnp**, **nnai**, **nsdd**, **nsds**, **npdd**, and **npds** parameters cannot be specified with the **rmgtt** parameter in the command.

The MGTT feature must be on before the **rmgtt**, **nnp**, **nnai**, **nsdd**, **nsds**, **npdd**, and **npds** parameters can be specified in the command.

The **nsdd** and **nsds** parameters cannot be specified in the same command with the **npdd** and **npds** parameters.

To change existing **nsdd**, **nsds**, **npdd**, and **npds** parameter values, enter the command with the **rmgtt** parameter to reset the MGTT values, and enter the command with new **nnp** and **nnai** or **npdd** and **npds** parameter values.

The **ngti** parameter can be specified only when the translated point code and the translation type are in different domains, or are both in the ITU domain.

If the **ngti=4** parameter is specified, the **nnp** and **nnai** parameters must be specified.

If the **ngti=4** parameter is specified, the translated point code cannot be ANSI. For ANSI point codes, the GTI value must be 2.

If the **ngti=2** parameter is specified, the **nnp** and **nnai** parameters cannot be specified.

If the **egta** parameter is specified, then the length must equal the length of the start **gta**.

If the **egta** parameter is specified, the value must be greater than the value specified for the **gta** parameter.

The range of global title addresses to be changed, as specified by the start and end global title addresses, must match exactly or be contained within an existing range in the global title translation data for the specified translation type.

The new **gta-egta** range cannot include the **gta** or the **egta** of an existing range. However, the new global title address range can completely fall within an existing global title address range. If the range overlaps, an error is generated that displays a list of overlapped global title addresses. An example follows that shows what happens when the user attempts to enter a global title address range (such as 8005550000 to 8005559999) that overlaps an existing range. The overlapping links must match. If they do not, the error message displays the list of overlapped global title addresses:

The following GTA ranges overlap the input GTA range

```
START GTA END GTA
8005550000 8005551999
8005552000 8005553999
8005554000 8005555999
CHG-GTT: MASP A - Command Aborted
```

If the range specified by the **gta** and **egta** parameters does not exactly match the existing range, the existing range is split. All addresses in the existing range that are outside the range specified by the **gta** and **egta** parameters retain the original **xlat**, **ri**, **pc**, **ssn**, and **ngt** parameters. A new range is created that is bounded by the **gta** and **egta** parameters. The new range contains new values for the **xlat**, **ri**, **pc**, **ssn** and **ngt** parameters parameters that are present in the command, while retaining parameter values from the previous range that do not have corresponding new values in the command.

When the ANSI-ITU-China SCCP Conversion feature is not on, the current value of the **xlat** parameter is **dpcngt**, and a different value is specified for the **xlat** parameter, then a value for the **ngt** parameter must not be specified, and the current value of the **ngt** parameter is removed.

If the new value for the **xlat** parameter is **dpcngt**, and the current value for the **ngt** parameter has been removed, a value for the **ngt** parameter must be specified.

When the ANSI-ITU-China SCCP Conversion feature is turned on, the **ngt** parameter can be specified only when the **xlat=dpc** parameter or the **xlat=dpcngt** parameter is specified.

When the ANSI-ITU-China SCCP Conversion feature is turned on, and the **ngt** parameter is specified, the **ri=gt** parameter must be specified.

A translation type cannot be specified that is already defined as an alias for another translation type.

Either the **type** parameter or the **ttn** parameter must be specified.

Point code entries must be full point codes. Partial point codes are not allowed.

Table 5-14 shows the valid combinations for the **xlat**, **ri**, **ssn**, and **ngt** parameters. All other combinations are rejected.

Table 5-14. Valid Parameter Combinations for the **chg-gtt** Routing Parameters

New or Existing XLAT Value	New or Existing RI Value	Routing Action	SSN Value	NGT Value
DPC	GT	Translate DPC only and route on GT	Cannot be specified. The	Cannot be specified unless ANSI-ITU-China SCCP Conversion is enabled.

Table 5-14. Valid Parameter Combinations for the **chg-gtt** Routing Parameters

New or Existing XLAT Value	New or Existing RI Value	Routing Action	SSN Value	NGT Value
			current database entry is removed.	The current database entry is removed.
DPC	SSN	Translate DPC only and route on SSN	Cannot be specified. The current database entry is removed.	Cannot be specified. The current database entry is removed.
DPCSSN	GT	Translate DPC and SSN and route on GT	Must be specified.	Cannot be specified. The current database entry is removed.
DPCSSN	SSN	Translate DPC and SSN and route on SSN	Must be specified.	Cannot be specified. The current database entry is removed.
DPCNGT	GT	Translate DPC , new translation type (TT), and route on GT	Cannot be specified. The current database entry is removed.	Must be specified.

To enter this command, the Remote Point Code table cannot be full.

To enter this command, the subsystem table for primary remote point codes cannot be full.

If the **ri=ssn** parameter is specified, then the **mrnset** parameter must not be specified.

If the Flexible GTT Load Sharing feature is enabled, then the PC must already exist in the specified MRN set.

The specified MRN set must already exist in the MRN table.

The **mrnset** parameter can only be specified when the Flexible GTT Load-Sharing feature is enabled.

The SEAS command is not allowed to operate on any other MRN set except the default MRN set.

The **mapset** parameter can only be specified if the Flexible GTT Load Sharing feature is enabled, and the **ri=ssn** parameter is specified. If the **ri=ssn** parameter is specified, the **mapset** parameter must be specified. If the **ri=gt** parameter is specified, the **mapset** parameter cannot be specified.

If the Flexible GTT Load Sharing feature is not enabled, then the **mapset** parameter must not be specified.

If the **ri=gt** parameter is specified, then the **mapset** parameter must not be specified.

The specified or previously provisioned point code and subsystem number must exist in the specified or previously provisioned MAP set.

The SEAS command cannot operate on any MAP set other than the default MAP set.

The specified GTA must lie within an existing GTA range in the specified GTT Set.

The specified GTA range must not overlap with any other existing GTA range in the specified GTT Set.

If the Flexible GTT Load Sharing feature is enabled, then the specified PC must exist in the MRN set.

If the **ri=gt** parameter is specified, then the **mrnset** parameter must be specified.

Notes

The specified DPC, SSN, relative cost, and routing indicator will overwrite the existing data values in the table.

In this command, only ITU-international and ITU-national point codes support the spare point code subtype prefix (s-) and the private and spare point code subtype prefix (**ps-**). All of the point code types support the private (internal) point code subtype prefix (**p-**).

When the Intermediate GTT Load Sharing feature and the Flexible GTT Load Sharing feature are on, multiple relationships can be defined among a set of destination point codes in the existing MRN table. The relationship used in a particular translation is based on the GTA digits used for translation. The MRN Set and the post-translation PC formulate a key that is used for a lookup in the MRN table. The MRN table lookup results in a set of alternate PCs, one of which is selected (based on relative cost) to route the MSU in the most cost effective way.

When the Flexible GTT Load Sharing feature is turned on, multiple relationships among a set of PCs and SSNs in the existing MAP table are supported. The relationship used in a particular translation is based on the GTA digits used for translation. The MAP set ID and PC/SSN formulate a key that is used to perform lookup tasks in the MAP table. The lookup results in a set of alternate PC/SSNs, one of which is selected to route the MSU in the most cost effective way.

If the ANSI-ITU-China SCCP Conversion feature is turned on, then the Translated Point Code (**pc**, **pca**, **pci**, **pcn**, and **pcn24** parameters) can be of a different network type than the Translation Type (**type** parameter).

If the ANSI-ITU-China SCCP Conversion and MGTT features are turned on, and the Translated Point Code is of a different network type, then the **ngti** parameter specifies whether the new GTI translation format is GTI type 2 or GTI type 4.

If the MGTT feature is turned off, then the **ngti** parameter cannot be specified and the Default GT Conversion Table is used for conversion. If the ANSI-ITU-China SCCP Conversion feature is turned off, then mixed network types are not allowed.

Output

```
chg-
gtt:ttt=setmap:gta=2345678901:egta=3456789012:ri=ssn:pc=1-1-3:ssn
=10:mapset=2
tekelecstp 06-05-27 11:43:27 EST EAGLE 35.0.0
CHG-GTT: MASP A - COMPLTD
;
```

chg-gttset

Change GTT Selectors

Use this command to change the global title translation (GTT) set (**gttsn**) linked with an existing **gti**, **tt**, **np/npv**, and **nai/naiv** combination.

Keyword: chg-gttset

Related Commands: dlt-gttset, ent-gttset, rtrv-gttset

Command Class: Database Administration

Parameters

:gti/gtia/gtii/gtin/gtin24= (mandatory)

Global title indicator. For all EGTT selector commands, the domain is defined as **gti** and **gtia** (ANSI), **gtii** (ITU international), **gtin** (ITU national), and **gtin24** (24-bit ITU national).

For the selector commands, **gti** and **gtia** are equivalent; **gtii** and **gtin/gtin24** are mutually exclusive because the EGTT database does not distinguish between ITU national and ITU international

translations. This means that while ITU-I and ITU-N selectors are stored separately, two separate ITU-I and ITU-N entries with the same selector values cannot exist. For example, if an entry with **gtii=2** and **tt=4** already exists, an entry of **gtin=2** and **tt=4** cannot be entered.

Range: Supported value for ANSI: **gti=2** and **gtia=2**
Supported values for ITU: **gtii=2, 4** and **gtin/gtin24=2, 4**

:tt= (mandatory)

Translation type.

Range: **0-255**

:cdgtasn= (optional)

CgPA GTA GTT set name.

Range: *aaaaaaaa*, **none**

1 leading alphabetic character and up to 8 following alphanumeric characters.

none—Set names do not point to the CdGTA set.

:cggtasn= (optional)

CgPA GTA GTT set name.

Range: *aaaaaaaa*, **none**

1 leading alphabetic character and up to 8 following alphanumeric characters.

none—Set names do not point to the CgGTA set.

:cgpcsn= (optional)

CgPA PC GTT set name.

Range: *aaaaaaaa*, **none**

1 leading alphabetic character and up to 8 following alphanumeric characters.

none—Set names do not point to the CgPC set.

:cgssn= (optional)

CgPA subsystem number.

Range: **0-255**

:gttsn= (optional)

GTT set name. A GTT set is an entity to which global title addresses and selectors are assigned.

The **gttsn** parameter can be specified only if the Origin-based SCCP Routing feature is off.

Range: *aaaaaaaa*

1 leading alphabetic character and up to 8 following alphanumeric characters.

:nai= (optional)

Nature of Address indicator. The Nature of Address indicator can be specified by supplying either a mnemonic value (**nai** parameter) or an explicit numeric value (**naiv** parameter). Either the **nai** parameter or the **naiv** parameter, but not both, can be specified in the command. Table A-5 shows the mapping between the **naiv** and the **nai** parameter values.

Range: **sub, rsvd, natl, intl, dflt**

:naiv= (optional)

Nature of Address indicator value. The Nature of Address indicator can be specified by supplying either a mnemonic value (**nai** parameter) or an explicit numeric value (**naiv** parameter). Either the **nai** parameter or the **naiv** parameter, but not both, can be specified in the command. Table A-5 shows the mapping between the **naiv** and the **nai** parameter values.

Range: **0-127**

:np= (optional)

Numbering Plan. The numbering plan can be specified by supplying either a mnemonic value (**np** parameter) or an explicit numeric value (**npv** parameter). Either the **np** parameter or the **npv**

parameter, but not both, can be specified in the command. Table A-6 shows the mapping between the **npv** and the **np** parameter values.

Range: e164, generic, x121, f69, e210, e212, e214, private, dflt

:npv= (optional)

Numbering Plan value. The numbering plan indicator can be specified by supplying either a mnemonic value (**np** parameter) or an explicit numeric value (**npv** parameter). Either the **np** parameter or the **npv** parameter, but not both, can be specified in the command. Table A-6 shows the mapping between the **npv** and the **np** parameter values.

Range: 0-15

:selid= (optional)

Selector ID.

Range: 0-65534

Example

```
chg-
gttsel:gtii=2:tt=40:cdgtasn=setcggtta:cgpcsn=none:cgssn=10:selid=1
2
```

```
chg-gttset:gtia=2:tt=253:gttsn=newansi
```

```
chg-gttset:gtin=4:tt=0:np=dflt:nai=dflt:gttsn=setint000
```

The following example would change the selectors (gtii=4, tt=5, npv=1, naiv=2) linked with GTTSN ansi1 so that the selectors are linked with ansi2 (assuming that ansi2 is an existing GTT set in the database):

```
chg-gttset:gtii=4:tt=5:npv=1:naiv=2:gttsn=ansi2
```

```
chg-
gttsel:gtin=4:tt=60:npv=5:naiv=5:cgpcsn=setcgpc:selid=100:cgssn=1
0
```

Dependencies

The EGTT feature must be turned on before this command can be entered.

At least one parameter value must be changed in the command.

The **np** and **npv** parameters cannot be specified together in the same command.

The **nai** and **naiv** parameters cannot be specified together in the same command.

The parameter values **gtia=4**, **gti/gtia/gtii/gtin/gtin24=1**, and **gti/gtia/gtii/gtin/gtin24=3** cannot be specified.

When the **gti/gtia/gtii/gtin/gtin24=2** parameter is specified, the **np/npv** and **nai/naiv** parameter combinations cannot be specified.

When the **gtii/gtin/gtin24=4** parameter is specified, an **np(v)** and **nai(v)** parameter combination must be specified. These parameters can be specified in any combination: **np** and **naiv**, **npv** and **nai**, **np** and **nai**, or **npv** and **naiv**.

The **gttsn** parameter must be specified, cannot have a value of **none**, and must match an existing **gttsn**.

If two set names are specified, one of the names can have a value of **none**, but not both. A GTT selector must contain at least one GTT set.

An entry must already exist that matches the **gti**, **tt**, and **np(v)** and **nai(v)** combination of parameters.

An entry must already exist that matches the **gtii**, **tt**, and **np(v)** and **nai(v)** combination of parameters.

An entry must already exist that matches the **gtin**, **tt**, and **np(v)** and **nai(v)** combination of parameters.

The specified **gttsn** value must exist for the specified **gtin24**, **tt**, **np/npv/nai/naiv** parameter combination.

The network domain (ANSI or ITU) must match that of the existing GTT Set entry specified by the **gttsn** parameter.

A maximum of 5 **nai** entries per **tt-np** combination is allowed in the GTT Selector table.

At least one set name, as indicated by the **cdgtasn**, **cggtasn**, or **cgpcsn** parameter, must be specified.

If the **cgssn** parameter and/or the **selid** parameter is specified, the **cggtasn** parameter or the **cgpcsn** parameter must be specified.

The specified **cdgta** parameter must already exist for the specified GTT selector.

The **cdgtasn** parameter and the **cggtasn** or **cgpcsn** parameter cannot both have a value of **none**.

The value specified for the **gttsn** parameter must match the name of an existing GTT Set.

The network domain of the specified GTT selector must match that of the GTT set specified by the **cdgtasn** or **gttsn** parameter, unless the domain of the existing GTT set is **cross**.

The Origin-based SCCP Routing feature must be enabled when the **cggtasn**, **cgpcsn**, **cgssn**, or **selid** parameters are specified.

The values for the **cdgtasn**, **cgpcsn**, or **cggtasn** parameters do not match the corresponding entries in the GTT set table.

The specified **cgssn** parameter and/or the **selid** parameter must already exist in the SSNSELID table.

The GTT set specified by the **cggtasn** parameter or the **cgpcsn** parameter must already exist in the database before being assigned to a GTT selector.

The network domain of the CGGTASN or CGPCSN GTT set doesn't match the domain indicated by the **gti** parameter.

The set type specified by the **cggtasn** or **cgpcsn** parameter must match the set type of the corresponding entry in the GTT set table. For example, the **cggtasn** parameter should have a set type of **cggtta**, and the **cgpcsn** parameter should have a set type of **cgpc**.

The network domain (ANSI or ITU) of the specified GTT selector must match the domain of the new GTT set, specified by the **cdgtasn** parameter, unless the domain of the new GTT set has a value of **cross**.

The **cggtasn** and **cgpcsn** parameters cannot be specified in the same command.

A value of **none** cannot be specified for the **cggtasn** parameter or the **cgpcsn** parameter if the GTT Selector contains only one GTT set. A GTT selector must point to at least one GTT set.

A value of **none** cannot be specified for the **cdgtasn** parameter if the **gttsn** parameter specifies the only GTTSET associated with that selector.

The value specified for the **cdgtasn** or **gttsn** set type must match the set type of the corresponding entry specified in the GTTSET table. If the **cdgtasn** parameter is specified, the value specified for the GTTSET type must be **cdgta**.

Notes

When the EGTT feature is turned on, the GTT Selector (**ent/chg/dlt/rtrv-gttset**), GTT Set (**ent/dlt/rtrv-gttset**), and GTA (**ent/chg/dlt/rtrv-gta**) commands replace the Translation Type (**ent/dlt/rtrv-tt**) and Global Title Translation (**ent/chg/dlt/rtrv-gtt**) commands. All data previously provisioned with these commands is maintained.

The entry that matches the specified parameter combination is assigned to the specified **gttsn**.

When the Origin-based SCCP Routing feature is enabled, two GTT sets, either the **cdgtasn/cggtasn** or the **cdgtasn/cgpcsn**, can be assigned to a GTT selector. The **cggtasn** and **cgpcsn** GTT sets are mutually exclusive and cannot be assigned to the same GTT selector.

When the value of the **cggtasn/cgpcsn** GTT set is specified as **none**, that combination (domain, **tt**, **gti**, **np/npi**, **na/ani**, **cgssn**, and **selid**) are deleted from the database. At any point of time, each provisioned selector must have at least one GTT set.

Output

```
chg-gttset:gti=2:tt=10:gttsn=t800

rlghncxa03w 04-01-18 08:50:12 EST EAGLE 31.3.0
GTT Selector table is (114 of 1024) 11% full
CHG-GTTSEL: MASP A - CMPLTD
;
```

chg-gttset

Change GTT Set

Use this command to specify the attributes to change for an existing set of global title translations.

Keyword: **chg-gttset**

Related Commands: **dlt-gttset**, **ent-gttset**, **rtrv-gttset**

Command Class: Database Administration

Parameters

:gttsn= (mandatory)

GTT set name. A GTT set is an entity to which global title addresses and selectors are assigned.

Range: **ayyyyyyy**

1 alphabetic character followed by up to 8 alphanumeric characters.

:ndgt= (optional)

Number of digits. This parameter specifies the number of digits required for GTAs (global title addresses) associated with this GTT set. This parameter is not valid if the VGTT (Variable Length GTT) feature is turned on or if the value of the **settype** parameter is **cgpc**, **cgssn**, or **opc**.

Range: **1-21**

:netdom= (optional)

Network domain. This command does not distinguish between ITU national or ITU international because the Enhanced Global Title Translation (EGTT) feature does not discriminate between the ITU-I and ITU-N translations.

NOTE: The **netdom** parameter refers to the incoming message network domain.

Range: **cross**

Example

```
chg-gttset:gttsn=lidb:netdom=cross
```

```
chg-gttset:gttsn=setxyz:netdom=cross:ndgt=10
```

Dependencies

The **gttsn=none** parameter cannot be specified.

The specified **netdom** parameter value must be **cross**. This command cannot be used to change the **netdom** setting from **cross** to **ansi** or **itu**.

The **ndgt** parameter cannot be specified if the value of the specified **settype** parameter is **cgssn**, **cgpc**, or **opc**.

The EGTT feature must be turned on prior to using this command.

The value specified for the **gttsn** parameter must match the name of an existing GTT Set.

If the VGTT feature is turned on, the **ndgt** parameter cannot be specified.

The ANSI-ITU-China SCCP Conversion feature must be turned on before the **netdom** parameter can be specified.

If GTAs are assigned to the GTT set, the **ndgt** parameter cannot be specified.

The **netdom=cross** parameter can be specified only if the **settype=cdgta** parameter is specified.

Output

```
chg-gttset:gttsn=lidb:netdom=cross
rlghncxa03w 06-06-01 08:50:12 EST EAGLE 35.0.0
CHG-GTTSET: MASP A - COMPLTD
```

chg-gtw-stp

Change Gateway Parameters

Use this command to modify the level 3 ANSI transfer control status (TFCSTAT) when converted from ITU to ANSI.

Keyword: chg-gtw-stp

Related Commands: rtrv-gtw-stp

Command Class: Database Administration

Parameters

:tfcstat= (mandatory)

This parameter identifies the desired level 3 control status on a TFC message received from an ITU node destined for an ANSI node.

Range: 1-3

Example

```
chg-gtw-stp:tfcstat=1
```

Dependencies

None

Notes

None

Output

```
chg-gtw-stp:tfcstat=1
rlghncxa03w 04-01-11 11:34:04 EST EAGLE 31.3.0
CHG-GTW-STP: MASP A - COMPLTD
;
```

chg-gws-actset

Change Gateway Screening Stop Action Sets

Use this command to configure the gateway screening stop action sets in the system database. Stop action sets are used to define the actions performed on the Message Sending Units (MSUs) that pass the gateway screening process. The gateway screening stop action table contains a maximum of 16 stop action sets, with each stop action set containing a maximum of 10 stop actions. The first three gateway screening stop action sets (**actid=1**, **actid=2**, and **actid=3**) are already defined with the existing gateway screening stop actions shown in Table 5-15.

Table 5-15. Gateway Screening Stop Action Definitions

Gateway Screening Stop Action ID	Gateway Screening Stop Action Set Name	Stop Action 1	Stop Action 2	Action Performed by the system
1	copy	copy	—	Copy the MSU for the STP LAN feature.
2	rdct	rdct	—	Redirect the MSU for the DTA feature.
3	cr	copy	rdct	Copy the MSU for the STP LAN feature and redirect the MSU for the DTA feature.



CAUTION

CAUTION: Even though gateway screening is in the screen test mode, as defined by the parameters gwsa=off and gwsn=on in the chg-ls command, the gateway screening action in the stop action set *will* be performed at the end of the screening process.

Keyword: chg-gws-actset

Related Commands: rtrv-gws-actset

Command Class: Database Administration

Parameters

:actid= (mandatory)

The identification number of the gateway screening stop action set.

Range: 4-16

:act1= (optional)

Stop action 1.

Range: cncf, copy, none, rdct, tlnp

Default: No change to the existing value.

:act10= (optional)

Stop action 10.

Range: cncf, copy, none, rdct, tlnp

Default: No change to the existing value.

:act2= (optional)

Stop action 2.

Range: cncf, copy, none, rdct, tlnp

Default: No change to the existing value.

:act3= (optional)

Stop action 3.

Range: cncf, copy, none, rdct, tlnp

Default: No change to the existing value.

:act4= (optional)

Stop action 4.

Range: **cncf, copy, none, rdct, tlnp**
Default: No change to the existing value.

:act5= (optional)

Stop action 5.

Range: **cncf, copy, none, rdct, tlnp**
Default: No change to the existing value.

:act6= (optional)

Stop action 6.

Range: **cncf, copy, none, rdct, tlnp**
Default: No change to the existing value.

:act7= (optional)

Stop action 7.

Range: **cncf, copy, none, rdct, tlnp**
Default: No change to the existing value.

:act8= (optional)

Stop action 8.

Range: **cncf, copy, none, rdct, tlnp**
Default: No change to the existing value.

:act9= (optional)

Stop action 9.

Range: **cncf, copy, none, rdct, tlnp**
Default: No change to the existing value.

:actname= (optional)

The name of the gateway screening stop action set.

This parameter is mandatory when you first enter an action set.

Range: *ayyyyy*
 One alphabetic character followed by up to five alphanumeric characters.
Default: No change to the existing value.

:all= (optional)

The **all=none** parameter clears all of the actions in the specified stop action set, and deletes the stop action set.

Range: **none**
Default: Undefined

:force= (optional)

Use **force=yes** when changing the stop action of an existing stop action set.

Range: **yes, no**
Default: **no**

Example

chg-gws-actset:actid=4:actname=cncf:act1=cncf

Dependencies

At least one optional parameter must be specified.

If **all=none** is specified, no other optional parameters can be specified.

The reserved word *none* cannot be used for the **actname** parameter.

The **force=yes** parameter must be specified to change an existing stop action.

If **cncf** is specified for **act1** through **act10**, the Calling Name Conversion Feature (CNCF) must be on. Use the **rtrv-feat** command to determine whether CNCF is on or off. If off, CNCF can be turned on with the **chg-feat** command. Note also that Gateway Screening (GWS) must be on before CNCF can be turned on.

To provision a Gateway Screening TLNP stop action (**tlnp**), either the TLNP feature must be turned on or the ISUP NP with EPAP feature must be enabled.

If **tlnp** is specified for **act1** through **act10** for Triggerless LNP in the system,

- The Triggerless LNP feature (TLNP) must be on. Use the **rtrv-feat** command to determine whether TLNP is on or off. If TLNP is off, TLNP can be turned on with the **chg-feat** command. (Verify that TLNP has been purchased for your system before you turn it on.)
- The LNP (Local Number Portability) and GWS (Gateway Screening) features must be on before TLNP can be turned on. See the **enable-ctrl-feat** command and the **chg-feat** command.

If **tlnp** is specified for **act1** through **act10** with the ISUP NP with EPAP feature in the system,

- The ISUP NP with EPAP feature must be enabled. Use the **rtrv-ctrl-feat** command to determine whether the ISUP NP with EPAP feature is enabled. The feature is listed in the output if it is enabled. If the ISUP NP with EPAP feature does not appear in the output, you must purchase it and receive the feature access key before you can enable it with the **enable-ctrl-feat** command.
- The G-Port and GWS (Gateway Screening) features must be on before the ISUP NP with EPAP feature can be enabled. See the **chg-feat** command.

A specific gateway screening stop action (**cncf**, **copy**, **none**, **rdct**, **tlnp**) can be specified for one and only one gateway screening stop action parameter for each gateway screening stop action set.

If a value is entered for the **actname** parameter, the value must be unique. Note that the **actname** parameter is *mandatory* when you first enter a gateway screening stop action set in the database and *optional* thereafter.

If **copy** is specified for an action set, it must be specified in stop action 1 (**act1**). A parameter value of **copy** cannot be specified for **act2** through **act10**.

If the redirect gateway screening action (**rdct**) is specified with other gateway screening stop actions, it must be specified with the last gateway screening stop action parameter specified for the command.

The **tlnp** (Triggerless LNP) gateway screening stop action cannot be specified in the same action set with either the **cncf** (Calling Name Conversion Facility) or **rdct** (Redirect) gateway screening stop actions.

Notes

Gateway screening stop action 1 (**act1**) is the first stop action to be performed and gateway screening stop action 10 (**act10**) is the last stop action to be performed on the MSU. These parameters can have the following values:

- **cncf**—Convert the PIP parameter with the GN parameter or the GN parameter with the PIP parameter in the ISUP IAM message for the Calling Name Conversion Facility feature.
- **copy**—Copy the MSU for the STP LAN feature.
- **none**—No action is performed on the MSU.
- **rdct**—Redirect the MSU for the DTA feature

- **tlnp**—ISUP IAMs that pass gateway screening are intercepted by the Triggerless LNP equipped EAGLE 5 ISS and converted to include the LRN if the call is to a ported number. This gateway screening stop action applies only to the Triggerless LNP feature.

Output

chg-gws-actset:actid=4:actname=cncf:act1=cncf

rlghncxa03w 04-01-10 11:43:04 EST EAGLE 31.3.0

CAUTION: GWS action set may be referenced by one or more GWS rules

CHG-GWS-ACTSET: MASP A - COMPLTD

;

chg-gws-redirect

Change Gateway Screening Redirect

Use this command to change the provisioning data for the redirect function. The values that are specified for this command are stored in the Redirect table, and they are used to set the variable fields of the MSUs being redirected. For example, if the **ri=gt** parameter is specified, the value **gt** is set for the routing indicator in the called party address (CDPA) of the MSU being redirected.

Keyword: **chg-gws-redirect**

Related Commands: **dlt-gws-redirect**, **ent-gws-redirect**,

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:dpc= (optional)

Specifies the value used to set the ANSI destination point code field in the routing label of the MSU that is being redirected. The point code has subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: **dpca**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001-005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006-255**.

The point code **000-000-000** is not a valid point code.

Default: Current value.

:dpc/dpca/dpci/dpcn/dpcn24= (optional)

Destination point code.

:dpci= (optional)

Specifies the value used to set the ITU international destination point code field in the routing label of the MSU that is being redirected. The point code has subfields *zone-area-id*.

Range: **0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

The point code **0-000-0** is not a valid point code.

zone—0-7

area—**000–255**

id—**0-7**

Default: Current value.

:dpcn= (optional)

Specifies the value used to set the ITU national destination point code field in the routing label of the MSU that is being redirected. The point code is in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) when the **chg-stpopts:npclmti** flexible point code option is on. A group code (*gc*) must be specified when the ITUDUPPC feature is on (*nnnnn-gc*, *m1-m2-m3-m4-gc*).

Range: **0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

Default: Current value.

:dpcn24= (optional)

Specifies the value used to set the 24-bit ITU national destination point code field in the routing label of the MSU that is being redirected. The point code has subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000–255**

ssa—**000–255**

sp—**000–255**

Default: Current value.

:enabled= (optional)

Specifies whether MSUs that have passed gateway screening are to be redirected (**enabled=on**) or routed as normal (**enabled=off**).

Range: **on, off**

Default: Current value.

:gta= (optional)

Specifies the value used to set the global title address (dialed digits) in the SCCP called party address of the MSU being redirected.

Range: 1-21 digits

:ri= (optional)

Specifies the value used to set the routing indicator in the SCCP called party address of the MSU being redirected. Use the **gt** value to route by global title digits or use the **ssn** value to route by subsystem number.

Range: **gt, ssn**

Default: Current value

:ssn= (optional)

Specifies the value used to set the subsystem number (SSN) in the SCCP called party address of the MSU being redirected. This number is the SSN of the SCP to which all MSUs meeting the redirect criteria are to be redirected.

Range: **0-255**

Default: Current value

:tt= (optional)

Identifies the type of the global title translation (GTT). It is the decimal representation of the 1-byte field used in SS7. This value is used to set the type of the GTT in the SCCP called party address of the MSU being redirected.

Range: 0-255

Default: Current value

Example

```
chg-gws-redirect:dpc=111-222-111:ri=gt:ssn=10:tt=1:gta=180833:enabled=on
```

```
chg-gws-redirect:dpc=111-222-111:ri=ssn:ssn=10:tt=1:gta=1800833:enabled=off
```

```
chg-gws-redirect:enabled=off
```

Dependencies

At least one optional parameter must be specified.

The **dpc/dpca/dpci/dpcn/dpcn24** parameter must be defined in the Destination table or defined as the STP site point code.

If the **dpc/dpca/dpci/dpcn/dpcn24** parameter is defined as a destination, at least one route must be defined.

The redirect function data must exist in the database before it can be changed with this command.

Notes

None

Output

```
chg-gws-redirect:dpc=111-222-111:ri=gt:ssn=10:tt=1:gta=180833:enabled=on
```

```
rlghncxa03w 04-07-10 11:43:04 EST EAGLE 31.6.0
CHG-GWS-REDIRECT: MASP A - COMPLTD
;
```

chg-inpopts

Change INP Options Command

Use this command to provision INP-specific data. This command updates the INPOPTS table.

Keyword: chg-inpopts

Related Commands: rtrv-inpopts

Command Class: Database Administration

Parameters

:cdpnai= (optional)

The Called Party Number Nature of Address indicator.

For INAP INP Query feature, the valid CDPNNAI values are 1 (Subscriber), 2 (Unknown), 3 (National), 4(International) and 5 (Network). For ANSI-41 INAP Query Feature, the valid CDPNNAI values are 0 (National) and 1 (International)

Range: 0-127

Default: Current value

:cdnpfx= (optional)

The Called Party Number Prefix.

Range: 1-15 digits
Valid digits are **0-9, A-F, a-f**.

Default: Current value

:dltpfx= (optional)

Delete prefix.

Range: **yes, no**
Default: **no**

:dra= (optional)

The destination routing address.

Range: **rndn, rn, ccrndn, rnnecd**
rndn—

Supports RN+ [CDPNPFX]+ DN in the INP "CONNECT" or AINPQ "Return Result" response messages.

rn— Routing Number

ccrndn— Supports [CDPNPFX] +CC + RN + DN in the INP "CONNECT" or AINPQ "Return Result" response messages.

rnnecd— Supports RN+ [CDPNPFX]+ NEC+ DN in the INP "CONNECT" or AINPQ "Return Result" response messages.

Default: Current value

:dranai= (optional)

The Nature of Address indicator.

Range: **sub, unknown, natl, intl, ntwk**

NOTE: The nature of address indicator parameters (**dranaiv** or **dranai**) can be specified by supplying either a mnemonic or an explicit value. At no time may both the mnemonic and the explicit value be specified at the same time for the same parameter. Either the **dranaiv** or **dranai** parameter can be specified. Table 5-16 shows the mapping between the **drnaiv** and the **drnai** parameters.

Table 5-16. DRANAIV/DRANAI Mapping

dranaiv	dranai	Description
1	sub	Subscriber Number
2	unknown	Unknown
3	natl	National significant number
4	intl	International number
5	ntwk	Network
The mnemonic's list is different from the list for the Service Selector commands because the INAP destination routing address uses ISUP values instead of SCCP values.		

Default: Current value

:dranaiv= (optional)

The Nature of Address indicator value.

The nature of address indicator parameters (**dranaiv** or **dranai**) can be specified by supplying either a mnemonic or an explicit value. At no time may both the mnemonic and the explicit value be specified at the same time for the same parameter. Either the **dranaiv** or **dranai** parameter can be specified. Table 5-16 shows the mapping between the **drnaiv** and the **drnai** parameters.

Range: 0-127

:dranp= (optional)

The numbering plan.

NOTE: The nature of address indicator parameters (**dranaiv** or **dranai**) can be specified by supplying either a mnemonic or an explicit value. At no time may both the mnemonic and the explicit value be specified at the same time for the same parameter. Either the **dranpv** or **dranp** parameter can be specified. Table 5-17 shows the mapping between the **dranpv** and the **dranp** parameters.

Range: e164, x121, f69

Default: Current value

:dranpv= (optional)

The numbering plan value. See Table 5-17.

NOTE: The numbering plan parameters (**dranpv** or **dranp**) can be specified by supplying either a mnemonic or an explicit value. At no time may both the mnemonic and the explicit value be specified at the same time for the same parameter. Either the **dranpv** or **dranp** parameter can be specified. Table 5-17 shows the mapping between the **dranpv** and the **dranp** parameters

Table 5-17. DRANPV/DRANP Mapping

dranpv	dranp	Description
1	E164	ISDN/telephony numbering plan
3	X121	Data numbering plan
4	F69	Telex numbering plan
Several of the numbering plan mnemonics that apply to the Service Selector commands are not in this list because they do not apply to INAP destination routing addresses.		

Range: 1-7

Default: Current value

:ncdnpfx= (optional)

The New Called Party Number Prefix.

Range: 1-15 digits, **none**
Valid digits are **0-9, a-f, A-F**.

:snai= (optional)

The Service Nature of Address indicator.

Range: sub, natl, intl, none, unknown

Default: Current value

:sprestype= (optional)

INP option that indicates whether the EAGLE 5 ISS is to send a "Connect" message or a "Continue" message when an IDP message is received for INP service, the DN digits match, and the HLR ID is present.

Range: **connect**, **continue**

connect— The EAGLE 5 ISS sends a "Connect" message.

continue— The EAGLE 5 ISS sends a "Continue" message.

Default: **continue**

Example

```
chg-inpopts:dra=rn:dranp=e164:dranai=intl
chg-inpopts:dranp=f69:dranai=sub:dra=rndn
chg-inpopts:dra=rn:dranp=e164:dranai=intl:cdpnpx=fac:dltpr=yes
chg-inpopts:dranp=f69:dranai=sub:dra=rndn:cdpnpx=200
chg-
inpopts:dranp=f69:dranai=sub:dra=rndn:cdpnpx=200:ncdpnpx=3abcde
f :dltpr=yes
chg-
inpopts:dranp=f69:dranai=sub:dra=rndn:cdpnpx=3abcdef:ncdpnpx=no
ne
chg-
inpopts:dranp=f69:dranai=sub:dra=rndn:cdpnpx=fed123:dltpr=no
chg-
inpopts:dra=rn:dranp=e164:dranai=intl:cdpnpx=fac:dltpr=yes:cdpn
nai=50 :snai=intl
chg-
inpopts:dra=rndn:dranp=x121:dranai=intl:cdpnpx=fac:dltpr=no:cdp
nnai=1 :snai=natl
chg-
inpopts:dra=rn:dranp=e164:dranai=intl:cdpnpx=fac:dltpr=yes:cdpn
nai=70 :snai=sub
chg-
inpopts:dra=rn:dranp=e164:dranai=intl:cdpnpx=fac:dltpr=no:cdpn
nai=1 :snai=none
chg-inpopts:sprestype=connect
chg-inpopts:dra=rnnecdn:nec=0
```

Dependencies

At least one optional parameter must be specified.

The INP feature must be turned on before this command can be entered.

The **dranp** and **dranpv** parameters cannot be specified together in the command.

The **dranai** and **dranaiv** parameters cannot be specified together in the command.

If the **ncdpnpx** or **dltpr** parameter is specified, the **cdpnpx** parameter must be specified.

A value of **none** cannot be specified for the **cdpnpx** parameter.

If the **ncdpnpx=none** parameter is specified, then the **dltpr** parameter cannot be specified.

The specified Called Party Number Prefix (**cdpnpx** parameter) must exist in the INPOPTS table.

The specified New Called Party Number Prefix (**ncdpnpfx** parameter) must not already exist in the INPOPTS table.

A maximum of 5 Called Party Number Prefix values is allowed.

A maximum of 5 Called Party Number Nature of Address values is allowed.

The **cdpnnai** and **snai** parameters must be specified together in the command.

If this command is entered to delete a Called Party Number Nature of Address value from the INPOPTS table (for example, if the command is entered with **:cdpnnai=1:ssnai=none**), then the value for the **cdpnnai** parameter must exist in the INPOPTS table.

Notes

Table 5-18 provides examples of **dranp/dranpv**, **dranai/dranaiv**, **cdpnpx/ncdpnpfx/dltpfx**, and **cdpnnai/snai** parameter combinations.

Table 5-18. Examples of parameter combinations for the **chg-inpopts** command

Command	Comments
chg-inpopts:dranai=sub:dranaiv=1:dra=rn	dranai and dranaiv cannot be specified together.
chg-inpopts:dranp=e164:dranpv=1:dra=rndn	dranp and dranpv cannot be specified together.
chg-inpopts:dranp=e164:dranaiv=4:dranpv=1	dranp and dranpv cannot be specified together.
chg-inpopts:dranai=sub:dranaiv=1:dranpv=5	dranai and dranaiv cannot be specified together
chg-inpopts:dranp:=e164:dranai=sub:dranpv=1	dranp and dranpv cannot be specified together.
chg-inpopts:dranai=natl:dranaiv=3:dranp=e164	dranai and dranaiv cannot be specified together.
chg-inpopts:dranai=sub:dranp=f69:dra=rndn	Okay
chg-inpopts:dranp=e164:dranaiv=10:dra=rn	Okay
chg-inpopts:dranai=sub:dranpv=3	Okay
chg-inpopts:dranpv=4:dranaiv=20	Okay
chg-inpopts:dltpfx=yes	cdpnpx must be specified.
chg-inpopts:ncdpnpfx=1:dltpfx=yes	cdpnpx must be specified.
chg-inpopts:cdpnpx=none:dltpfx=yes	cdpnpx=none is not valid.
chg-inpopts:cdpnpx=1:dltpfx=yes	Okay
chg-inpopts:cdpnpx=1:ncdpnpfx=none:dltpfx=yes	dltpfx must not be specified when ncdpnpfx=none .

Table 5-18. Examples of parameter combinations for the **chg-inpopts** command

Command	Comments
chg-inpopts:cdpnpx=2a3b4c5d6e7f	Okay
chg-inpopts:cdpnpx=2:ncdpnpx=3:dltpx=yes	Okay
chg-inpopts:cdpnai=1	cdpnai and snai must be specified together.
chg-inpopts:snai=intl	cdpnai and snai must be specified together.
chg-inpopts:cdpnai=1:snai=intl	Okay
chg-inpopts:cdpnai=1:snai=sub	Okay
chg-inpopts:cdpnai=70:snai=sub	Okay
chg-inpopts:dra=ccrnda	Okay
chg-inpopts:cdpnai=5:snai=unknown	Okay

Output

```

chg-inpopts:dra=rn:dranp=e164:dranai=intl
rlghncxa03w 04-01-11 11:34:04 EST EAGLE 31.3.0
CHG-INPOPTS: MASP A - COMPLTD
;
chg-inpopts:dra=rn:dranp=e164:dranai=intl
rlghncxa03w 04-01-11 11:34:04 EST EAGLE 31.3.0
CHG-INPOPTS: MASP A - COMPLTD
;

```

chg-ip-card**Change Internet Protocol Card**

Use this command to provision IP networking parameters for a given card.

Keyword: **chg-ip-card**

Related Commands: **rtrv-ip-card**

Command Class: Database Administration

Parameters

:loc= (mandatory)

Card location. The unique identifier of a specific application subsystem located in the STP.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

:defrouter= (optional)

Default router IP address. This is a TCP/IP address expressed in standard dot notation. IP addresses consist of the system's network number and the machine's unique host number. An example IP address is 192.126.100.5, where 192.126.100 is the network number and 5 is the machine's host number.

Range:	4 numbers separated by dots, with each number in the range of 0-255 . A value of 0.0.0.0 will remove an IP address from this parameter.
Default:	No change to the parameter value
System	
Default:	0.0.0.0

:dn**sa=** (optional)

The IP address for Domain Name Server A. This is a TCP/IP address expressed in standard dot notation. IP addresses consist of the system's network number and the machine's unique host number. An example IP address is 192.126.100.5, where 192.126.100 is the network number and 5 is the machine's host number.

Range:	4 numbers separated by dots, with each number in the range of 0-255 . A value of 0.0.0.0 will remove an IP address from this parameter.
Default:	No change to the parameter value.

System

Default:	0.0.0.0

:dnsb= (optional)

The IP address for Domain Name Server B. This is a TCP/IP address expressed in standard dot notation. IP addresses consist of the system's network number and the machine's unique host number. An example IP address is 192.126.100.5, where 192.126.100 is the network number and 5 is the machine's host number.

Range: 4 numbers separated by dots, with each number in the range of **0-255**.
A value of **0.0.0.0** will remove an IP address from this parameter.

Default: No change to the parameter value.

System Default: **0.0.0.0**

:domain= (optional)

Domain name of the Domain server.

Range:	<i>XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX</i> <i>XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX</i> Any string of characters beginning with a letter and comprising up to 120 characters in length. Valid characters are a–z , A–Z , 0–9 , - (dash), . (period).
Default:	No change to the parameter value.
System Default:	Null

:rstdomain= (optional)

Reset Domain Name. This parameter is used to reset the Domain Name to a NULL value.

Range: **yes, no**
 yes—reset Domain Name to a NULL value
 no—Domain Name does not change

Default: **no**

:srchordr= (optional)

Host table search order.

Range: **local, srvr, srvronly**
local—Local host table is searched first.
srvr—Domain Server is searched first.
srvronly—Only the Domain Server is searched.

Default: No change to the parameter value

System**Default:** No search**Example**

```
chg-ip-
card: loc=1211:dnsc=150.1.1.1:domain=nc.tekelec.com:defrouter=150.
1.1.105
```

Dependencies

At least one optional parameter must be specified.

The **loc** parameter value must correspond to the location of a DCM or SSEDCCM card in the card table.

The DCM or SSEDCCM card associated with the **loc** parameter must be inhibited prior to command execution.

If the **domain** parameter is specified, the **rstdomain** parameter cannot be specified.

The **defrouter** IP address must be local to the Ethernet A network or Ethernet B network for the card. The B network can be used only on SSEDCCM cards.

Notes

The Domain Name has a 120 character limitation.

Output

```
chg-ip-
card: loc=1211:dnsc=150.1.1.1:domain=nc.tekelec.com:defrouter=150.
1.1.105
```

```
rlghncxa03w 04-01-17 15:35:05 EST EAGLE 31.3.0
CHG-IP-CARD: MASP A - COMPLTD
```

```
;
```

chg-ip-lnk**Change Internet Protocol Link**

Use this command to provision the IP link table.

Keyword: chg-ip-lnk

Related Commands: rtrv-ip-lnk

Command Class: Database Administration

Parameters

:loc= (mandatory)

Card location. The unique identifier of a specific application subsystem located in the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

:port= (mandatory)

Ethernet interface Port ID.

Range: a, b

Port **b** is not valid for SS7IPGW and IPGWI applications with Application Sockets.

:auto= (optional)

Tells hardware whether to automatically determine duplex and speed.

Range: **yes, no**
 yes — Automatically determines duplex and speed
 no — Do not automatically determine duplex and speed

Default: No change to the parameter value

System

Default: **yes**

:duplex= (optional)

This is the mode of operation of the interface.

Range: **half, full**
 half — Half duplex
 full — Full duplex

Default: No change to the parameter value

System

Default: **half**

:ipaddr= (optional)

The IP address for the specified port. This is a TCP/IP address expressed in standard dot notation. IP addresses consist of the system's network number and the machine's unique host number. An example IP address is 192.126.100.5, where 192.126.100 is the network number and 5 is the machine's host number.

Range: 4 numbers separated by dots, with each number in the range of **0-255**.
 A value of **0.0.0.0** will remove an IP address from this parameter.

Default: No change to the parameter value.

System

Default: **0.0.0.0**

:mactype= (optional)

The Media Access Control Type of the interface.

Range: **802.3, DIX**
 802.3 — The IEEE standard number 802.3
 DIX — The Digital/Inter/Xerox *de facto* standard for ethernet

Default: No change to the parameter value

System

Default: **802.3**

:mcast= (optional)

Multicast Control. This parameter enables or disables multicast support for the interface. This parameter is necessary for INP, G-Port, and G-Flex to establish the connection from the DSM card to the MPS system.

Range: **yes, no**
 yes — Multicasting is enabled on the interface and the sending and receiving of multicast frames is allowed.
 no — All multicast frames are silently dropped.

System

Default: **no**

:speed= (optional)

The bandwidth for the interface in megabits per second

Range: **10, 100**

Default: No change to the parameter value

:submask= (optional)

The subnet mask of the IP interface in the form of an IP address with a restricted range of values. This parameter is mandatory when the **ipaddr** parameter is specified.

Range: The value must be valid for the class of the entered IP address.

Table 5-19. Valid Subnet Mask Values

Valid for Class A Networks	Valid for Class A or B Networks	Valid for Class A, B, or C Networks
255.0.0.0	255.255.0.0	255.255.255.0
255.192.0.0	255.255.192.0	255.255.255.192
255.224.0.0	255.255.224.0	255.255.255.224
255.240.0.0	255.255.240.0	255.255.255.240
255.248.0.0	255.255.248.0	255.255.255.248
255.252.0.0	255.255.252.0	255.255.255.252
255.254.0.0	255.255.254.0	
255.255.128.0	255.255.255.128	

Default: If **ipaddr** is not specified, there is no change to the parameter value.
When a host's IP address is known, the default subnet mask should be chosen according to Table 5-20.

Table 5-20. Default Subnet Mask Values

Network Class	IP Network Address Range	Default Subnet Mask
A	1.0.0.0 to 127.0.0.0	255.0.0.0
B	128.0.0.0 to 191.255.0.0	255.255.0.0
C	192.0.0.0 to 223.255.255.0	255.255.255.0

Example

chg-ip-lnk:loc=1211:port=A

Dependencies

The IP address must be entered in the IP Host table using the **ent-ip-host** command before it can be entered in the IP Link table using the **chg-ip-lnk** command.

Each IP address entered into the IP Link table must be unique.

At least one optional parameter must be specified.

If the **auto** parameter is entered, then the **duplex** and **speed** parameters are not allowed.

The **loc** parameter value must correspond to a DCM or SSED CM card in the card table.

The card associated with the **loc** parameter must be inhibited before executing this command.

For SS7IPGW and IPGWI, Application Sockets on port **b** are not allowed.

The local **ipaddr** and **submask** values of either the A or B network cannot be changed to an address that represents a different network if a default router and/or other gateway routers are assigned to the current local network (display with **rtrv-ip-card** and **rtrv-ip-rte**).

The local IP address cannot be changed if the current or new local host has open sockets or associations (the **open** parameter set to **yes** with the **ent-assoc** or **chg-assoc** command).

The IP address of an existing IP link entry in the IP Link table cannot be changed if it exists in the IP Host table.

An IP link entry must be provisioned in the IP Link table before an IP host entry can be provisioned with a corresponding IP address in the IP Host table.

The IP host entry must be deleted from the IP Host table before an IP link entry can be deleted from the IP Link table.

An existing IP link entry in the IP Link table cannot be deleted (**ipaddr=0.0.0.0**) if it exists in the IP Host table.

The IP network address specified by the **ipaddr** and **submask** parameters must be different from the IP network address specified by the **pvn** and **pvnmask** parameters in the NETOPTS table.

Notes

None

Output

chg-ip-lnk:loc=1211:port=a

```
rlghncxa03w 04-01-17 15:35:05 EST EAGLE 31.3.0
CHG-IP-LNK: MASP A - COMPLTD
```

;

chg-isupvar-attrb

Change ISUP Variant Attribute

Use this command to change the attributes of ISUP Variant table entries.

Keyword: **chg-isupvar-attrb**

Related Commands: **copy-isupvar-attrb**, **rtrv-isupvar-attrb**, **rtrv-pstn-pres**

Command Class: Database Administration

Parameters

The following table lists valid combinations of required and optional parameters.

Table 5-21. Valid **chg-isupvar-attrb** command parameter combinations

These are the only permitted combinations of required and optional parameters for this command.											
msg code	parm code	attrib				min len	parmtyp		order	action	force
		defined	not defined	supp	not supp		opt	mf/mv			
R		R								O	
R			R								R
	R	R				R					

Table 5-21. Valid **chg-isupvar-attrb** command parameter combinations

These are the only permitted combinations of required and optional parameters for this command.											
msg code	parm code	attrib				min len	parmtyp		order	action	force
		defined	not defined	supp	not supp		opt	mf/ mv			
	R		R								
R	R			R			R			O	
R	R			R				R	R	O	
R	R				R						
R = Required — O = Optional with the required parameter(s)											

:attrib= (mandatory)

The attribute being assigned to a message or parameter.

Range: **defined, notdefined, supp, notsupp**

defined—The message or parameter is defined in the Variant.

notdefined—The message or parameter is not defined in the Variant.

supp—the parameter is supported in the specified message in the Variant.

notsupp—The parameter is not supported in the specified message in the Variant.

:pstncat= (mandatory)

The Public Switched Telephone Network (PSTN) category assigned to the Variant.

Range: **0-65535**

:pstnid= (mandatory)

The Public Switched Telephone Network (PSTN) ID assigned to the Variant.

Range: **0-65535**

:action= (optional)

Specifies the message or parameter conversion action the software follows when a message is received with the specified **msgcode** or **msgcode:parmcode** combination.

Range: **none, convert, passthru**

none—The software will follow its normal conversion rules. No special conversions will occur.

convert—The software will invoke a special conversion routine that is available in the SG for the specified **msgcode** or **msgcode:parmcode** combination.

passthru—For **msgcode**, the specified **msgcode** should be passed through unconverted using the raw MTP3 transfer method.

For **msgcode:parmcode** combination, **parmcode**, when encountered in **msgcode**, should be passed through to the Normalized section of the message (ignoring the **defined** and **supp** attributes of the Normalized specification).

Valid only when included with the following combinations:

msgcode:attrib=defined

msgcode:parmcode:attrib=supp

Default: **none**

:force= (optional)

You must set **force=yes** when setting **msgcode:attr0b=notdefined**. This is to ensure the user understands that this action is destructive and will clear all the associated parameter data for that **msgcode**.

Range: no, yes

Default: no

:minlen= (optional)

Specified the minimum parameter length. This command is used for validating the length of the received parameter is at least **minlen** bytes long.

Range: 0-255

:msgcode= (optional)

The ISUP message type code entered is used to identify a specific ISUP message that is going to have its attributes changed.

Range: 0-255

Can be entered as **h'00-h'ff**.

:order= (optional)

Specifies the order the mandatory parameters appear in the message.

Range: 1-7

:parmcode= (optional)

The ISUP parameter code entered to identify a specific ISUP parameter that is going to have its attributes changed.

Range: 0-255

Can be entered as **h'00-h'ff**.

:parmtyp= (optional)

Specifies the type of ISUP parameter.

Range: opt, mf, mv

opt—The parameter may appear in the Optional part of the ISUP message.

mf—The parameter must appear in the Mandatory Fixed part of the ISUP message.

mv—The parameter must appear in the Mandatory Variable part of the ISUP message.

Default: opt

Example

```
chg-isupvar-attrb:pstncat=1:pstnid=5:msgcode=4:attrb=defined
```

```
chg-isupvar-
```

```
attrb:pstncat=1:pstnid=5:parmcode=10:attrb=defined:minlen=6
```

```
chg-isupvar-
```

```
attrb:pstncat=1:pstnid=5:msgcode=4:attrb=defined:action=convert
```

Dependencies

The combination of **pstncat=1** and **pstnid=2** values is invalid.

A controlled feature must exist for the specified **pstncat** and **pstnid** combination.

The **msgcode** and **parmcode** parameters cannot be specified together in the command.

When the **parmtyp** parameter is specified, the **attrb** parameter must be specified.

When the **parmtyp=mf/mv** parameter is specified, the **order** parameter must be specified.

When the **order** parameter is specified, the **parmtyp** parameter must be specified.

When a parameter is being **defined**, the **minlen** parameter must be specified.

The following parameter combinations are invalid:

- **attrib** is not allowed to be **defined** or **notdefined** if both **msgcode** and **parmcode** are specified.
- **attrib** is not allowed to be **supp** or **notsupp** unless both **msgcode** and **parmcode** are specified.
- **parmtyp** and **order** are not allowed unless both **msgcode** and **parmcode** are not specified.
- **order** is not allowed if **parmtyp=opt**.
- **minlen** is not allowed if **msgcode** is specified.
- **action** is not allowed if only **parmcode** is specified.
- **action** is not allowed to be **convert** or **passthru** if **msgcode:parmcode=0** is specified.

Only **parmcode=0** (EOP) can have **minlen=0**.

Required controlled features must be enabled:

- ISUP normalization controlled feature
- On/off controlled feature for *Tekelec-defined* Variant
- Quantity controlled feature for *user-defined* Variant.

The PSTN must have been previously defined with the **ent-pstn-pres** command.

The **mf** or **mv** parameters must be kept in an ordered list starting with 1.

The **force=yes** parameter is required and valid only if the **msgcode:attribnotdefined** combination is specified.

Notes

An ISUP Variant table entry exists for each Variant defined in the SG. Each entry contains ISUP message and parameter data specific to the ISUP protocol used by that Variant. A Variant is uniquely defined by its PSTN presentation value, consisting of a PSTN category and PSTN ID.

The **pstncat** and **pstnid** parameters identify the ISUP Variant table entry to be changed. Use the **rtrv-pstn-pres** command to display the only allowed values for the PSTN category and ID. This command can be used to change any *Tekelec-defined* or *user-defined* Variants that **rtrv-pstn-pres** displays. The *Tekelec-defined* Variants' associated ON/OFF control feature *must* be ENABLED.

The user can change the following aspects of the ISUP Variant table entries:

- All the ISUP messages for the Variant can be provisioned as **defined** or **notdefined**. All the ISUP messages default to **notdefined** until this command sets them to **defined**.
- All the ISUP parameters for the Variant can be provisioned as **defined** or **notdefined**. All the ISUP parameters default to **notdefined** until this command sets them to **defined**.
- Values **defined** and **notdefined** are valid only if either **msgcode** or **parmcode** is specified alone. When a parameter is being **defined**, **minlen** is required.
- Changing a **msgcode** to **notdefined** clears all the associated parameter data. In this case, **force=yes** is required.
- All the ISUP parameters for specified messages in the Variant can be provisioned as **supported** or **notsupported**. All the ISUP parameters default to **notsupported** until this command sets them to supported.
- Values **supp** and **notsupp** are valid only if the **msgcode:parmcode** parameter is specified.
- **parmcode** cannot be set to **notdefined** if it occurs in any message as **supp**.

- The minimum valid parameter length can be specified for each **defined** ISUP parameter.
- All the ISUP messages provisioned as **defined** can also have a message conversion action assigned.
- All the ISUP parameters provisioned as **supported** can also have a parameter conversion action assigned.
- All the ISUP parameters provisioned as **supported** can also be assigned as optional, mandatory-fixed (**mf**), or mandatory-variable (**mv**).
- If assigned as MF or MV, the numerical order the parameter appears in the message must be specified.
- The user cannot change the attributes for **pstncat=1**, **pstnID=2**.
- When specified with **msgcode**, **parmcode** identifies a parameter within the **msgcode** that is going to have its attributes changed. **parmcode** is required if **msgcode** is not specified.
- **minlen** is required and valid only if the **parmcode:attrib= defined** combination is specified.
- The **minlen=0** is valid only if **parmcode=0 (EOP)**. All other parameters have a range of **1-255**.
- **parmtyp** is valid only if the **msgcode:parmcode:attrib-supp** combination is specified.
- When **mf** or **mv** is specified, **order** must also be specified. The **parmtyp** can be changed as long as the change does not violate the **order** rules.
- The MF parameters must be specified in an order list starting with 1. The **mv** parameters must be specified in a different ordered list starting with 1. There can be no gaps in order number. A parameter cannot be deleted from a list, as when changing **parmtyp** or changing **attrib** to **notsupp**, unless all parameters with a higher **order** number are deleted first.
- **order** is required and valid only if the **msgcode:parmcode:attrib=supp:parmtyp=mf/mv** combination is specified.
- **action** is valid only when included with the **msgcode:attrib=defined** or **msgcode:parmcode:attrib= supp** combinations.
- When **parmcode =0**, **none** is the only valid **action**.
- The user can enter an **action** for *user-defined* Variants; however, the SG will ignore the **convert** value. There will be no supported conversion **action**.
- **force** is required and valid only if the **msgcode:attrib notdefined** combination is specified.

Output

The following example defines a message in a Variant.

```
chg-isupvar-attrib:pstncat=1:pstnid=5:msgcode=4:attrib=defined
rlghncxa03w 04-01-17 15:35:05 EST EAGLE 31.3.0
CHG-ISUPVAR-ATTRIB: MASP A - COMPLTD
;
```

chg-l2t

Change Level 2 Timers

Use this command to change the values of the SS7 MTP level 2 timers. The SS7 MTP level 2 timers are organized in 30 timer sets of 8 timer values each. The 30 timer sets have been grouped and system default values have been initialized by specification (ANSI, ITU, High Speed for China, and High Speed for Q.703 Annex A). Each timer set is administered individually by this command. The **ent-**

slk command associates links with timer sets. Each assigned link is associated with one of the 30 timer sets.

Keyword: **chg-l2t**

Related Commands: **ent-slk, rtrv-l2t, rtrv-slk**

Command Class: Database Administration

Parameters

:l2tset= (mandatory)

Level 2 timer set identifier, or timer set number. Up to 30 different timer sets can be defined. A signaling link may be assigned to any one of the 30 timer sets.

Range: **1-30**

1-10 for ANSI links

11-20 for low-speed ITU links

21-25 for China high speed links

26-30 for Q.703 Annex A high speed links

:t1= (optional)

Timer 1—Aligned/ready

Range: **5000-350000**

For ANSI timer sets 1-10—**5000-20000** milliseconds

For ITU timer sets 11-20—**40000-50000** milliseconds

For China timer sets 21-25—**25000-350000** milliseconds

For Q.703 Annex A timer sets 26-30—**25000-350000** milliseconds

Default: No change to the current value

System

Default:

For ANSI timer sets 1-10—**13000** milliseconds

For ITU timer sets 11-20—**40000** milliseconds

For China timer sets 21-25—**150000** milliseconds

For Q.703 Annex A timer sets 26-30—**300000** milliseconds

:t2= (optional)

Timer 2—Not aligned

Range: **5000-150000**

For ANSI timer sets 1-10—**5000-30000** milliseconds

For ITU timer sets 11-20—**5000-150000** milliseconds

For China timer sets 21-25—**5000-150000** milliseconds

For Q.703 Annex A timer sets 26-30—**5000-150000** milliseconds

Default: No change to the current value

System

Default:

For ANSI timer sets 1-10—**11500** milliseconds

For ITU timer sets 11-20—**30000** milliseconds

For China timer sets 21-25—**130000** milliseconds

For Q.703 Annex A timer sets 26-30—**130000** milliseconds

:t3= (optional)

Timer 3—Aligned

Range: **5000-20000**

For ANSI timer sets 1-10—**5000-30000** milliseconds

For ITU timer sets 11-20—**1000-2000** milliseconds

For China timer sets 21-25—**1000-2000** milliseconds

For Q.703 Annex A timer sets 26-30—**1000-2000** milliseconds

Default: No change to the current value

System

Default:

For ANSI timer sets 1-10—**11500** milliseconds

For ITU timer sets 11–20—**2000** milliseconds
 For China timer sets 21–25—**1000** milliseconds
 For Q.703 Annex A timer sets 26–30—**1000** milliseconds

:t4epp= (optional)

Timer 4—Proving period Emergency

Range: **200-1000**

For ANSI timer sets 1–10—**200-1000** milliseconds
 For ITU timer sets 11–20—**400-600** milliseconds
 For China timer sets 21–25—**400-600** milliseconds
 For Q.703 Annex A timer sets 26–30—**400-600** milliseconds

Default: No change to the current value

System

Default: For ANSI timer sets 1–10—**600** milliseconds
 For ITU timer sets 11–20—**500** milliseconds
 For China timer sets 21–25—**500** milliseconds
 For Q.703 Annex A timer sets 26–30—**500** milliseconds

:t4npp= (optional)

Timer 4— Proving period normal

Range: **500-70000**

For ANSI timer sets 1–10—**500-5000** milliseconds
 For ITU timer sets 11–20—**7500-9500** milliseconds
 For China timer sets 21–25—**3000-70000** milliseconds
 For Q.703 Annex A timer sets 26–30—**3000-70000** milliseconds

Default: No change to the current value

System

Default: For ANSI timer sets 1–10—**2300** milliseconds
 For ITU timer sets 11–20—**8200** milliseconds
 For China timer sets 21–25—**30000** milliseconds
 For Q.703 Annex A timer sets 26–30—**30000** milliseconds

:t5= (optional)

Timer 5—Sending SIB

Range: **40-500**

For ANSI timer sets 1–10—**40-500** milliseconds
 For ITU timer sets 11–20—**80-120** milliseconds
 For China timer sets 21–25—**80-120** milliseconds
 For Q.703 Annex A timer sets 26–30—**80-120** milliseconds

Default: No change to the current value

System

Default: For ANSI timer sets 1–10—**100** milliseconds
 For ITU timer sets 11–20—**100** milliseconds
 For China timer sets 21–25—**100** milliseconds
 For Q.703 Annex A timer sets 26–30—**100** milliseconds

:t6= (optional)

Timer 6—Remote congestion

Range: **1000-10000**

For ANSI timer sets 1–10—**1000-10000** milliseconds
 For ITU timer sets 11–20—**3000-6000** milliseconds
 For China timer sets 21–25—**3000-6000** milliseconds
 For Q.703 Annex A timer sets 26–30—**3000-6000** milliseconds

Default: No change to the current value

System

Default: For ANSI timer sets 1–10—**4000** milliseconds
 For ITU timer sets 11–20—**4000** milliseconds
 For China timer sets 21–25—**5000** milliseconds
 For Q.703 Annex A timer sets 26–30—**5000** milliseconds

:t7= (optional)

Timer 7—Excessive delay of acknowledgment

Range: **200-3000**

For ANSI timer sets 1–10—**200–3000** milliseconds
 For ITU timer sets 11–20—**500–2000** milliseconds
 For China timer sets 21–25—**500–2000** milliseconds
 For Q.703 Annex A timer sets 26–30—**500–2000** milliseconds

Default: No change to the current value

System

Default: For ANSI timer sets 1–10—**1500** milliseconds
 For ITU timer sets 11–20—**1500** milliseconds
 For China timer sets 21–25—**800** milliseconds
 For Q.703 Annex A timer sets 26–30—**800** milliseconds

Example

chg-l2t:l2tset=1:t1=5400

chg-l2t:l2tset=21:t4epp=600:t5=90:t6=3500:t7=1900

Dependencies

At least one optional parameter must be specified.

Notes

ANSI timer defaults are within the Telcordia recommended ranges.

ITU timer defaults are within ITU Q.703 white book recommended ranges.

Output

```
chg-l2t:l2tset=21:t4epp=600:t5=90:t6=3500:t7=1900
rlghncxa03w 05-02-07 11:11:28 EST EAGLE5 34.0.0
CHG-L2T: MASP A - COMPLTD
;
```

chg-l3t**Change Level 3 Timers**

Use this command to change the SS7 MTP level 3 timers. The SS7 MTP level 3 timers are organized in a timer set of 21 values each. Only one timer set is administered by this command. Each linkset is associated with the SS7 MTP level 3 Timer set. The linkset and timer set association is assigned with the link administration commands.

Keyword: **chg-l3t**

Related Commands: **chg-l2t, rtrv-l2t, rtrv-l3t**

Command Class: Database Administration

Parameters

:l3tset= (mandatory)

Timer set table. Only one timer set table exists. All SS7 signaling links use the SS7 MTP level 3 timer set table.

Range: **1**

:it18= (optional)

For ITU networks.

Timer 18—Timer within a signaling point whose MTP restarts to supervise the receipt of routing information and the activation of the link and link set; in seconds.

Range: 19.0-50.0

Default: No change to the current value.

System

Default: 50.0

:it19= (optional)

For ITU networks.

Timer 19—Supervision timer during MTP restart to avoid ping-pong of TFP, TFR1, and TRA messages; in seconds.

Range: 67.0-69.0

Default: No change to the current value

System

Default: 67.0

:it20= (optional)

For ITU networks.

Timer 20—Overall MTP restart timer at the signaling point whose MTP restarts; in seconds.

Range: 59.0-61.0

Default: No change to the current value.

System

Default: 59.0

:it21= (optional)

For ITU networks.

Timer 21—Overall MTP restart timer at a signaling point adjacent to one whose MTP restarts; in seconds.

Range: 63.0-65.0

Default: No change to the current value.

System

Default: 63.0

:it22= (optional)

For ITU networks.

Timer 22—Waiting to repeat local inhibit test; in seconds.

Range: 180.0-360.0

Default: No change to the current value

System

Default: 90.0

:it23= (optional)

For ITU networks.

Timer 23—Waiting to repeat remote inhibit test; in seconds.

Range: 180.0-360.0

Default: No change to the current value

System

Default: 90.0

:t1= (optional)

For ANSI or ITU networks.

Timer 1—Changeover delay in seconds. Also used as isolation timer for ITU MTP Restart.

Range: 0.1-2.0

Default: No change to the current value

System

Default: 0.8

:t10= (optional)

For ANSI or ITU networks.

Timer 10—Wait to repeat signaling route set test (SRST) message; in seconds.

Range: 20.0-90.0

Default: No change to the current value

System

Default: 30.0

:t11= (optional)

For ANSI or ITU networks.

Timer 11—Transfer restricted; in seconds.

Range: 1.0-90.0

Default: No change to the current value System

System

Default: 30.0

:t12= (optional)

For ANSI or ITU networks.

Timer 12—Wait for uninhibit acknowledgment; in seconds.

Range: 0.1-2.0

Default: No change to the current value

System

Default: 0.8

:t13= (optional)

For ANSI or ITU networks.

Timer 13—Wait for force uninhibit; in seconds.

Range: 0.1-2.0

Default: No change to the current value.

System

Default: 0.8

:t14= (optional)

For ANSI or ITU networks.

Timer 14—Wait for inhibit acknowledgment; in seconds.

Range: 0.2-4.0

Default: No change to the current value

System

Default: 2.0

:t15= (optional)

For ANSI or ITU networks.

Timer 15—Wait for repeat route set congestion test (RSCT); in seconds.

Range: 0.2-4.0
Default: No change to the current value
System
Default: 3.0

:t16= (optional)

For ANSI or ITU networks.

Timer 16—Wait for route set congestion test (RSCT) update; in seconds.

Range: 0.2-3.0
Default: No change to the current value
System
Default: 1.4

:t17= (optional)

For ANSI or ITU networks.

Timer 17—Delay to avoid oscillation of initial alignment failure; in seconds.

Range: 0.5-2.0
Default: No change to the current value
System
Default: 0.8

:t18= (optional)

For ANSI networks.

Timer 18—Repeat transfer restricted (TFR) once by response method; in seconds.

Range: 2.0-20.0
Default: No change to the current value
System
Default: 10.0

:t19= (optional)

For ANSI networks.

Timer 19—Failed link craft referral timer; in seconds.

Range: 30.0-600.0
Default: No change to the current value.
System
Default: 480

:t2= (optional)

For ANSI or ITU networks.

Timer 2—Wait for changeover acknowledge (COA); in seconds.

Range: 0.1-3.0
Default: No change to the current value
System
Default: 1.4

:t20= (optional)

For ANSI networks.

Timer 20—Repeat local inhibit test; in seconds.

Range: 90.0-120.0
Default: No change to the current value
System
Default: 90.0

:t21= (optional)

For ANSI networks.

Timer 21—Repeat remote inhibit test; in seconds.

Range: 90.0-120.0

Default: No change to the current value

System

Default: 90.0

:t22= (optional)

For ANSI networks.

Timer 22—Timer at restarting STP, waiting for signaling links to become available; in seconds.

Range: 10.0-60.0

Default: No change to the current value.

System

Default: 10.0

:t23= (optional)

For ANSI networks.

Timer 23—Timer at restarting STP, started after T22, waiting to receive all TRA messages; in seconds.

Range: 9.0-100.0

Default: No change to the current value.

System

Default: 10.0

:t24= (optional)

For ANSI networks.

Timer 24—Timer at restarting STP with transfer function, started after T23, waiting to broadcast all TRA messages; in seconds.

Range: 9.0-60.0

Default: No change to the current value.

System

Default: 10.0

:t25= (optional)

For ANSI networks.

Timer 25—Timer at adjacent STP and restarting STP, waiting for TRA message; may be started at level 2; in seconds.

Range: 30.0-35.0

Default: No change to the current value

System

Default: 30.0

:t26= (optional)

For ANSI networks.

Timer 26—Timer at restarting STP, waiting to repeat TRW message; in seconds.

Range: 12.0-15.0

Default: No change to the current value.

System

Default: 12.0

:t28= (optional)

For ANSI networks.

Timer 28—Timer at STP adjacent to restarting STP, waiting for TRW message; in seconds.

Range: 3.0-35.0

Default: No change to the current value

System

Default: 3.0

:t29= (optional)

For ANSI networks.

Timer 29—Timer started when a TRA is sent in response to an unexpected TRA or TRW; also, started when traffic resumed without receipt of TRA; in seconds.

Range: 60.0-65.0

Default: No change to the current value

System

Default: 60.0

:t3= (optional)

For ANSI or ITU networks.

Timer 3—Time controlled diversion on changeback; in seconds.

Range: 0.1-2.0

Default: No change to the current value

System

Default: 0.8

:t30= (optional)

For ANSI networks.

Timer 30—Timer to limit sending of TFPs/TFRs in response to an unexpected TRA or TRW; in seconds.

Range: 30.0-35.0

Default: No change to the current value

System

Default: 30.0

:t31= (optional)

For ANSI networks.

Timer 31—False link congestion detection; in seconds.

Range: 10.0-120.0

Default: No change to the current value.

System

Default: 60.0

:t32= (optional)

For ANSI networks.

Timer 32—Link oscillation timer – Procedure A; in seconds.

Range: 60.0-120.0

Default: No change to the current value.

System

Default: 60.0

:t4= (optional)

For ANSI or ITU networks.

Timer 4—Wait for changeback acknowledge (CBA) #1; in seconds.

Range: 0.1-2.0

Default: No change to the current value

System

Default: 0.8

:t5= (optional)

For ANSI or ITU networks.

Timer 5—Wait for changeback acknowledge (CBA) #2; in seconds.

Range: 0.1-2.0

Default: No change to the current value

System

Default: 0.8

:t6= (optional)

For ANSI or ITU networks.

Timer 6—Controlled reroute; in seconds.

Range: 0.1-2.0

Default: No change to the current value

System

Default: 0.8

:t7= (optional)

For ANSI or ITU networks.

Timer 7—Signaling data link connection (SDLC) acknowledged; in seconds.

Range: 0.1-3.0

Default: No change to the current value.

System

Default: 1.0

:t8= (optional)

For ANSI or ITU networks.

Timer 8—Transfer prohibited (TFP) inhibit; in seconds.

Range: 0.5-2.0

Default: No change to the current value.

System

Default: 0.8

Example

```
chg-l3t:l3tset=1:t1=800
```

```
chg-l3t:l3tset=1:t5=800:t6=800:t32=70000
```

Dependencies

The minimum parameter requirement is the table number and at least one timer specified.

You can enter seconds or milliseconds for the timer values. If seconds are entered, the timer value must contain at least one decimal place, but it can contain up to three decimal places. If you do not use decimal places, the system accepts the value as milliseconds. Be aware that the **rtv-l3t** command always displays the output in seconds, not milliseconds.

Do not specify the following pairs of timers together because one value overrides the other:

- T20 and IT22

- T21 and IT23

Notes

The command line allows 157 characters. Some SS7 MTP level 3 timer changes may exceed this limit. Multiple entries of this command may be required in such cases.

Timer 9 is not currently supported in the SS7 protocol, and has been omitted from this manual. The command will support this timer when it has been defined in the protocol.

The default values are within the Telcordia recommended ranges.

Output

chg-l3t:l3tset=1:t1=800

```
rlghncxa03w 04-01-07 08:40:50 EST EAGLE 31.3.0
CHG-L3T: MASP A - COMPLTD
```

;

chg-lbp

Change Loopback Point's Attribute Values

Use this command to change a far-end loopback point's attribute values maintained in the link fault sectionalization table.

Keyword: **chg-lbp**

Related Commands: **act-lbp, dact-lbp, dlt-lbp, ent-lbp, rtrv-lbp**

Command Class: Database Administration

Parameters

:lbp= (mandatory)

Loopback point ID. This parameter identifies a far-end loopback point that lies along an SS7 signaling link path between the STP and the target device (up to *and including* the target device).

Range: **1-32**

:link= (mandatory)

SS7 signaling links. The SS7 signaling link to be tested.

Synonym: **port**

Range: **a, b, a1-a31, b1-b31**

Not all card types support all **link** parameter values.

See Table A-1 for valid **link** parameter range values for each type of card that can have assigned signaling links.

:loc= (mandatory)

Card location. The unique identifier of a specific application subsystem located in the STP.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

:cli= (optional)

Common Language Location Identifier (CLLI) code. This parameter specifies the CLLI or other mnemonic identifier used to refer to the given loopback point.

Range: *aaaaaaaa*

1 alphabetic character followed by up to 23 alphanumeric characters

Default: No change to the cli value

:lfst= (optional)

Link fault sectionalization test. The type of link fault sectionalization loopback test to be performed.

Range: **llt, nlt**

llt—latching loopback test

nlt—nonlatching loopback test

:rep= (optional)

Repetition count. The number of link elements of the same type (not including the target device) that lie between the STP and the link element to be tested.

Range: **0-31**

Default: No change unless:

0—The link element to be looped back for testing is NEI (**rle=nei** is specified)

0—The type of link fault sectionalization test is NLT (**lfst=nlt** is specified)

0—The type of link fault sectionalization test is NLT (**lfst=nlt** is specified)

0—The new remote link element is the first loopback point of the link to be tested

1-30—Next sequential number for subsequent loopback points of the link to be tested

:rle= (optional)

Remote link element. The link element to be looped back for testing.

Range: **ds0, ocu, csu, dsu, nei**

Default: No change to the rle value

Example

chg-lbp:loc=1101:link=a:lbp=1:rle=ds0:lfst=llt

Dependencies

The Link Fault Sectionalization (LFS) feature must be on before using this command.

At least one optional parameter must be specified.

The card location specified in the **loc** parameter cannot be reserved by the system.

The card location (**loc** parameter) must identify a provisioned **limds0**, **limt1**, or **limch** (associated to a **limt1**) card configured with either an **ss7ansi** or **ccs7itu** application.

The CLLI cannot be a reserved word.

The **rep** parameter value that is specified for this loopback point (LBP) must be greater than the **rep** parameter value of any previously defined LBP and less than the **rep** parameter value of any subsequently defined LBP.

The **rep** parameter must be specified if the default value is a duplicate of the **rep** parameter value of any previously defined loopback point.

The LBP must have been previously defined.

The **rep** parameter can be specified only if the **lfst=llt** parameter is specified.

If the **rle=nei** parameter is specified, the **rep=0** parameter must be specified.

The **rle=ds0** or the **rle=nei** parameter cannot be specified if the **lfst=nlt** parameter is specified. The DS0 and Network Element Interface (NEI) link elements do not support non-latching loopbacks.

For each SS7 signaling link, you can define only one loopback point with **rle=nei** specified; and that loopback point must be the terminating SS7 signaling link component.

For each SS7 signaling link, the loopback point with **rle=nei** specified must be the terminating SS7 signaling link component.

The card location specified in the **loc** parameter must be equipped.

Notes

None

Output

```
chg- lbp: loc=1101:port=a: lbp=1: rle=ds0: lfst=llt
```

```
rlghncxa03w 05-01-17 15:35:05 EST EAGLE5 33.0.0
CHG-LBP: MASP A - COMPLTD
```

;

chg-lnp-lrn

Change LNP Location Routing Number

Use this command to change existing location routing number (LRN) specific information in the database. You can change existing message relay override services. This command updates the LNP LRN table. You can change a maximum of two overriding message relay global title translations at a time.

NOTE: This command is obsolete.

NOTE: If the LNP ELAP Configuration feature is turned on, this command is no longer available. This function can be performed at the LSMS or using the ELAP user interface.

Keyword: chg-lnp-lrn

Related Commands: dlt-lnp-lrn, ent-lnp-lrn, rtrv-lnp-lrn

Command Class: LNP Database

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:lrn= (mandatory)

The location routing number.

Range: 10 digits

:nmrgt1= (optional)

New message relay global title entry 1.

Range: *tt-pc-ssn-xlat-ri-ngt-ngta*

tt—Translation type; valid range is **0-255**

pc—ANSI destination point code in the form of *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

- When **chg-sid:pctype=ansi** is specified,
 - *ni*— **001-255**
 - *nc*— **001-255** (if *ni* = **001-005**)
 - —**000-255** (if *ni* = **006-255**)
 - *ncm*— **000-255**
- The point code **0-0-0** is not a valid point code.

ssn—Subsystem number; valid range is **0-255**

xlat—Translate; valid values are **dpc**, **dpcssn**, **dpcngt**

ri—Routing indicator; valid values are **gt**, **ssn**
ngt—New Global Title translation type; valid range is **0-255**
rgta—Replace global title address; valid values are **yes**, **no**

:nmrgt2= (optional)

New message relay global title entry 2.

Range: *tt-pc-ssn-xlat-ri-ngt-rgta*

tt—Translation type; valid range is **0-255**

pc—ANSI destination point code in the form of *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

- When **chg-sid:pctype=ansi** is specified,
 - *ni*— **001–255**
 - *nc*— **001–255** (if *ni* = **001–005**)
 - —**000–255** (if *ni* = **006–255**)
 - *ncm*— **000–255**
- The point code **0-0-0** is not a valid point code.

ssn—Subsystem number; valid range is **0-255**

xlat—Translate; valid values are **dpc**, **dpcssn**, **dpcngt**

ri—Routing indicator; valid values are **gt**, **ssn**

ngt—New Global Title translation type; valid range is **0-255**

rgta—Replace global title address; valid values are **yes**, **no**

Example

chg-lnp-lrn:lrn=1234567890

chg-lnp-lrn:lrn=1234567891:nmrgt1=16-233-233-233-20-dpcssn-ssn-0-yes

Dependencies

To enter this command, the LNP feature must be turned on (see the **enable-ctrl-feat** and **chg-ctrl-feat** commands).

When **nmrgt1** or **nmrgt2** parameters are used, the constituent values must be entered in this order: **tt**, **pc**, **ssn**, **xlat**, **ri**, **ngt**, **rgta**

At least one optional parameter must be specified.

Translation type (**tt** parameter) values that are associated with AIN, IN, PCS, LNPQS, or WNP LNP queries cannot be specified.

The same **tt** value cannot be specified more than once.

When the **xlat=dpcssn** parameter is specified, the **ssn** parameter value must be non-zero.

When the **xlat** parameter is specified with a value other than **dpcssn**, a value of **0** must be specified for the **ssn** parameter.

When a value other than **dpcngt** is specified for the **xlat** parameter, a value of **0** must be specified for the **ngt** parameter.

When the **xlat=dpcngt** parameter is specified, the **ri=gt** parameter must be specified.

The point code must be an ANSI point code, and it must be a valid DPC (not **0-0-0**). The point code entry must be a full point code. Partial point codes are not allowed.

The subsystem number (**ssn** parameter) must be in the LNP database.

The service provider (SP) must be specified if an LRN was not assigned previously.

The LRN must exist.

The NMRGT# message relay translation type must be a reserved service for LNP, and it must already be assigned.

Notes

The LNP EAGLE 5 ISS stores the 10-digit override global title NGT (new global title) value on a per service, point code, and subsystem combination basis. This design allows a user to always modify the NGT field for all LRNs assigned the same service, point code, and subsystem combination instantly with one command. Conversely, the LSMS stores the NGT field independently for each 10-digit override (LRN) global title translation entered.

When an NGT field is modified or assigned to a particular LNP 10-digit override global title translation (either via the LSMS interface or directly from an EAGLE 5 ISS terminal), every existing LRN entry in the LNP EAGLE 5 ISS with the same combination of service, point code, and subsystem will reflect that NGT. Because of this difference in how this information is stored on the LSMS versus how it is stored on the EAGLE 5 ISS, a user could get into a situation where the NGT values in the LSMS are not reflective of those stored in the EAGLE 5 ISS. The NGT value must be specified correctly every time a 10-digit override (LRN) global title translation is updated or the LNP service on the EAGLE 5 ISS could be seriously impacted.

Output

chg-lnp-lrn:lrn=1234567890

```
rlghncxa03w 04-01-18 08:50:12 EST  EAGLE 31.3.0
CHG-LNP-LRN: MASP A - COMPLTD
```

;

chg-lnp-npanxx

Change LNP NPANXX

Use this command to change an existing LNP NPANXX record, including a message relay default global title translation in the database. This command allows the replacement of a single message relay default global title translation in the database and the replacement of the message relay indicator. It does not add to or delete from the NPANXX a new message relay translation type. This command changes only the existing data. Translation type values associated with WNP, PCS, AIN, LNPQS, or IN LNP queries are not allowed to be administered as NPANXX default message relay global title translations.

NOTE: This command is obsolete.

NOTE: If the LNP ELAP Configuration feature is turned on, this command is no longer available. This function can be performed at the LSMS or using the ELAP user interface.

Keyword: chg-lnp-npanxx

Related Commands: dlt-lnp-npanxx, ent-lnp-npanxx, rtrv-lnp-npanxx

Command Class: LNP Database

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:npanxx= (mandatory)

Numbering plan area.

Range: 6 digits

:ngt1= (optional)

New default global title entry 1.

Range: *tt, ni, ncm, ssn, xlat, ri, ngt*

tt—Translation type; valid range is **0-255**

ni—Network indicator; valid range is **0-255**

nc—Network cluster; valid range is **0-255**

ncm—Network cluster member; valid range is **0-255**

ssn—Subsystem number; valid range is **0-255**

xlat—Translate; valid values are **dpc, dpcssn, dpcngt**

ri—Routing indicator; valid values are **gt, ssn**

ngt—New Global Title translation type; valid range is **0-255**

:ngt2= (optional)

New default global title entry 2.

Range: *tt, pc, ssn, xlat, ri, ngt, rgta*

tt—Translation type; valid range is **0-255**

ni—Network indicator; valid range is **0-255**

nc—Network cluster; valid range is **0-255**

ncm—Network cluster member; valid range is **0-255**

ssn—Subsystem number; valid range is **0-255**

xlat—Translate; valid values are **dpc, dpcssn, dpcngt**

ri—Routing indicator; valid values are **gt, ssn**

ngt—New Global Title translation type; valid range is **0-255**

:nmr= (optional)

New message relay ported indication

Range: **yes, no**

Default: The current value

Example

chg -lnp-npanxx :npanxx=111111 :nmr=no

chg -lnp-npanxx :npanxx=111111 :nmr=yes :ngt1=16-255-255-255-0-dpcngt-gt-20

Dependencies

At least one optional parameter must be specified.

To enter the **chg-lnp-npanxx** command, the LNP feature must be turned **on** (see the **enable-ctrl-feat** and **chg-ctrl-feat** commands).

The new message relay global title point code must exist in the route table.

The LNP query default global title point code must exist in the route table, or must be the EAGLE 5 ISS's true point code and LNP subsystem.

The **gt1** and **gt2** parameters translation type must already be assigned, and they must be a reserved service for the LNP.

The NPANXX must already exist.

Translation type (**tt** parameter) values associated with PCS, LNPQS, or WNP LNP queries cannot be specified.

The same translation type value cannot be specified more than once.

When the **xlat=dpcssn** parameter is specified, the **ssn** parameter value must be non-zero.

When the **xlat** parameter is specified with a value other than **dpcssn**, a value of **0** must be specified for the **ssn** parameter.

When a value other than **dpngt** is specified for the **xlat** parameter, a value of **0** for the **ngt** parameter must be specified.

When the **xlat=dpngt** parameter is specified, you must specify the **ri=gt** parameter must be specified.

The point code must be an ANSI point code, and it must be a valid DPC (not **0-0-0**). The point code must be a full point code entry.

The subsystem number (**ssn** parameter) must be in the LNP database.

The new GTT value must not match the old GTT value.

Notes

This command can be entered several times for the same NPANXX to change one or more default global title translations.

The LNP EAGLE 5 ISS stores the 6-digit default global title NGT (new global title) value on a per service, point code, and subsystem combination basis, not on an NPA-NXX basis. This design allows a user to always modify the NGT field for all NPA-NXXs assigned the same service, point code, and subsystem combination instantly with one command. Conversely, the LSMS stores the NGT field independently for each 6-digit default (NPA-NXX) global title translation entered.

When an NGT field is modified or assigned to a particular LNP 6-digit global title translation (either via the LSMS interface or directly from an EAGLE 5 ISS terminal), every existing NPA-NXX entry in the LNP EAGLE 5 ISS with the same combination of service, point code, and subsystem will reflect that NGT. Because of this difference in how this information is stored on the LSMS versus how it is stored on the EAGLE 5 ISS, a user could get into a situation where the NGT values in the LSMS are not reflective of those stored in the EAGLE 5 ISS. The NGT value must be specified correctly every time a 6-digit default (NPA-NXX) global title translation is updated or the LNP service on the EAGLE 5 ISS could be seriously impacted.

Output

```
chg-lnp-npanxx: npanxx=111111: nmr=no
```

```
rlghncxa03w 04-01-18 08:50:12 EST EAGLE 31.3.0
CHG-LNP-NPANXX: MASP A - COMPLTD
```

```
;
```

chg-lnp-serv

Change LNP Service

Use this command to change an existing LNP service. You can specify a new translation type, digit validity indicator, and translation type name for the existing service. A new translation type name of **none** defaults the name back to the reserved service type name.

Keyword: chg-lnp-serv

Related Commands: dlt-lnp-serv, ent-lnp-serv, rtrv-lnp-serv

Command Class: Database Administration

Parameters

:ndv= (optional)

New digits valid.

Range: sccp, tcap

Default: The current value

:nserv= (optional)

New reserved service type name.

Range: ain, in, pcs, wnp, class, lidb, cnam, isvm, lnpqs, wsmcsc, udf1, udf2, udf3, udf4

Default: The current value

:ntt= (optional)

New translation type.

Range: 0-255

Default: The current value

:nttn= (optional)

User defined TT name.

Range: ayyyyyyyy, none
1 to 8 alphabetic characters, or none

Default: If none is specified, the default value is the reserved service type name (**serv** parameter).
If none is not specified, no change to current value.

:serv= (optional)

Reserved service type name.

Range: ain, in, pcs, wnp, class, lidb, cnam, isvm, lnpqs, wsmcsc, udf1, udf2, udf3, udf4

Default: The current value

:tt= (optional)

Translation type.

Range: 0-255

Default: The current value

Example

chg-lnp-serv:serv=lidb:ntt=22, ndv=tcap:nttn=mr lidb

chg-lnp-serv:tt=11:nserv=lnpqs

Dependencies

The LNP feature must be turned on before this command can be entered (see the **enable-ctrl-feat** and **chg-ctrl-feat** commands).

The LNP feature is "turned on" when a value for the LNP ported TNs quantity is shown in the **rtrv-ctrl-feat** command output.

The LNP SMS feature must be turned on before the **serv=wsmcsc** parameter can be specified.

The PCS 1900 LNP (PLNP) feature must be turned on before the **nserv=pcs** parameter can be specified.

The WNP feature must be turned on before the **nserv=wnp** parameter can be specified.

At least one optional parameter must be specified.

The new translation type (**ntt** parameter) must not already exist in the LNP database.

The new translation type name (**nttn** parameter) must not already exist in the LNP database.

The service type (**serv** parameter) must already exist in the LNP database.

The **serv** parameter and the **tt** parameter cannot be specified in the same command.

The **ntt** parameter and the **nserv** parameter cannot be specified in the same command.

The new digits valid indication (**dv** parameter) must not match the old digits valid indication.

An LNP alias cannot be specified as the value for the **ntt** parameter.

Before a service (**serv** parameter) can be changed, all LNP aliases for that service must be removed from the LNP database.

Translation type names must be unique for LNP services.

A reserved service type name can be specified for the **ntn** parameter only if the name matches the existing service (**serv** parameter).

Notes

When the LNP feature is on for up to 12 million TNs (see the **enable-ctrl-feat** command), the LNP services CLASS, CNAM, LIDB, and ISVM must be in the OAP configuration in the EAGLE 5 ISS database. You must update the OAP configuration (with the **act-oap-config** command) whenever you perform the following actions:

- Add LNP services to the database (with the **ent-lnp-serv** command).
- Remove services from the database (with the **dlt-lnp-serv** command).
- Change services (with the **chg-lnp-serv** command).

As a reminder, the following warning message is displayed:

CAUTION: LNP service TTs have changed, OAP configuration is required

A service cannot be changed if any alias translation type exists for that service. To modify the service based upon translation type, the **tt** parameter with the **nserv** parameter must be specified.

Output

```
chg-lnp-serv:serv=lidb:ntt=22:ndv=tcap:nttn=mr lidb
rlghncxa03w 02-11-18 08:50:12 EST EAGLE 30.0.0
CHG-LNP-SERV: MASP A - COMPLTD
;
```

chg-lnp-sub

Change LNP 10-Digit Subscription

Use this command to change an existing LNP 10-digit telephone number (TN) subscription or pooled TN number existing in the database. All the LRN and message relay information must be specified. The messages relay global title point code is validated as a destination in the Route table.

NOTE: This command is obsolete.

NOTE: If the LNP ELAP Configuration feature is turned on, this command is no longer available. This function can be performed at the LSMS or using the ELAP user interface.

Keyword: chg-lnp-sub

Related Commands: dlt-lnp-sub, ent-lnp-sub, rtrv-lnp-sub

Command Class: LNP Subscription

Parameters**:tn=** (mandatory)

The telephone number.

Range: 10 digits

10 digits—To specify a single TN subscription

7 digits with 3 asterisks (***) appended—To pool a block of 1000 TNs

:nlrn= (optional)

The new location routing number.

Range: 10 digits**:nmrgt1=** (optional)

The new message relay global title entry number 1. The arguments allow default global title translations to be incrementally changed by entering the **nmrgt1** and **nmrgt2** parameters several times. When **nmrgt1** or **nmrgt2** parameters are used, the argument values must *all* be entered and separated by a comma (,) or a dash (-) in the order *tt-ni-nc-ncm-ssn-xlat-ri-ngt-rgta*.

Range: *tt, ni, nc, ncm, ssn, xlat, ri, ngt, rgta**tt*—Translation type; valid range is **0-255***ni*—Network indicator; valid range is **0-255***nc*—Network cluster; valid range is **0-255***ncm*—Network cluster member; valid range is **0-255***ssn*—Subsystem number; valid range is **0-255***xlat*—Translate; valid values are **dpc, dpcssn, dpcngt***ri*—Routing indicator; valid values are **gt, ssn***ngt*—New Global Title translation type; valid range is **0-255***rgta*—Replace global title address (TN) with LRN; valid values are **yes, no****:nmrgt2=** (optional)

The new message relay global title entry number 2. The arguments allow default global title translations to be incrementally changed by entering the **nmrgt1** and **nmrgt2** parameters several times. When **nmrgt1** or **nmrgt2** parameters are used, the argument values must *all* be entered and separated by a comma (,) or a dash (-) in the order *tt-ni-nc-ncm-ssn-xlat-ri-ngt-rgta*.

Range: *tt, ni, nc, ncm, ssn, xlat, ri, ngt, rgta**tt*—Translation type; valid range is **0-255***ni*—Network indicator; valid range is **0-255***nc*—Network cluster; valid range is **0-255***ncm*—Network cluster member; valid range is **0-255***ssn*—Subsystem number; valid range is **0-255***xlat*—Translate; valid values are **dpc, dpcssn, dpcngt***ri*—Routing indicator; valid values are **gt, ssn***ngt*—New Global Title translation type; valid range is **0-255***rgta*—Replace global title address (TN) with LRN; valid values are **yes, no****Example****chg-lnp-**

sub:tn=1234567890:nsp=a123:nlrn=1234567890:nmrgt1=16,233-233-233,0,dpc,gt,28,yes

```
chg-lnp-
sub:tn=1234567***:nsp=a123:nlnr=1234567890:nmrgrt1=16,233-233-233,
0,dpc,gt,28,yes
chg-lnp-
sub:tn=1234567000:nsp=a123:nlnr=1234567890:nmrgrt1=16,233-233-233,
0,dpc,gt,28,yes
```

Dependencies

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before this command can be entered.

When the **nmrgt1** or **nmrgt2** parameter is specified, the constituent values must be entered in this order: **tt**, **pc**, **ssn**, **xlat**, **ri**, **ngt**, **rgta**

Ranges across NPANXX boundaries cannot be specified.

Translation type values associated with AIN, IN, LNPQS, PCS, or WNP LNP queries are not allowed as message relay global title translations.

A maximum of two message relay global title translations can be changed at a time.

When the **xlat=dpcssn** parameter is specified, a non-zero value must be specified for the **ssn** parameter.

When a value other than **dpcssn** is specified for the **xlat** parameter, a value of **0** must be specified for the **ssn** parameter.

When the **xlat=dpcngt** parameter is specified, the **ri=gt** parameter must be specified.

When a value other than **dpcngt** is specified for the **xlat** parameter, a value of **0** must be specified for the **ngt** parameter.

When the **rgta=yes** parameter is specified, the **nlnr** parameter must be specified.

Either the **nlnr** parameter or the **ngt** parameter must be specified.

The point code must be a valid ANSI DPC that exists in the routing table. (The point code **0-0-0** is not a valid ANSI point code.) The point code entry must be a full point code. Partial point codes are not allowed.

The same **tt** parameter value cannot be specified more than once.

The **nmrgt# tt** must be already assigned and it must be a reserved service for LNP.

Notes

This command can be entered several times to change an existing LNP service for an existing **tn**.

The LNP EAGLE 5 ISS stores the 10-digit subscription global title NGT (new global title) value on a per service, point code, and subsystem combination basis. This design allows a user to always modify the NGT field for all 10-digit subscriptions assigned the same service, point code, and subsystem combination instantly with one command. Conversely, the LSMS stores the NGT field independently for each 10-digit subscription global title translation entered.

When an NGT field is modified or assigned to a particular LNP 10-digit global title translation (either through the LSMS interface or directly from an EAGLE 5 ISS terminal), every existing subscription entry in the LNP EAGLE 5 ISS with the same combination of service, point code, and subsystem will reflect that NGT. Because of this difference in how this information is stored on the LSMS versus how it is stored on the EAGLE 5 ISS, a user could get into a situation where the NGT values in the LSMS are not reflective of those stored in the EAGLE 5 ISS. The NGT value must be specified correctly every time a 10-digit subscription global title translation is updated or the LNP service on the EAGLE 5 ISS could be seriously impacted.

Pooled TNs are allocated on an even 1000-block boundary and cannot cross an NPANXX's boundary. Specific ported TNs can overlap a pooled block and contain different routing.

Pooled TNs cannot be changed to specific subscriptions, nor can specific subscriptions be changed to pooled TNs.

Output

```
chg - lnp -
sub:tn=1234567890:nsp=a123:nlrn=1234567890:nmrgt1=16,233-233-233,
0,dpc,gt,28,yes
```

```
rlghncxa03w 04-01-18 08:50:12 EST EAGLE 31.3.0
CHG-LNP-SUB: MASP A - COMPLTD
```

```
;
```

chg-lnp-ttmap

Change LNP Translation Type Mapping

Use this command to create, change, or disable the existing message relay global title (MRGT) LNP GT entry for a group of existing telephone numbers (TN) in the database. This command allows you to specify a translation type and global title address treatment of different service providers according to the DPC configured in the message relay (MR) global title translation (GTT) table.

Keyword: chg-lnp-ttmap

Related Commands: rtrv-lnp-ttmap

Command Class: LNP Database

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:pc= (mandatory)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: pca

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001-005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006-255.

The point code 000-000-000 is not a valid point code.

:tt= (mandatory)

Translation type.

Range: 0-255

:nngt= (optional)

New new global title translation type.

Range: 0-255 none

Default: No change to current value

:nrgta= (optional)

New replacement **gta** treatment.

Range: yes, no

Default: No change to current value

Example

chg-lnp-ttmap:tt=16:pc=233-233-233:nngt=28

Dependencies

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before this command can be entered.

At least one optional parameter must be specified.

The **tt** must be reserved for LNP.

The **tt** cannot be an LNP alias.

The point code (**pc/pca** parameter) must exist in the routing table.

The LNP MR table must not be full.

Notes

Entering this command one time affects all the NPANXXs and TNs that reference the specified DPC in their default MR GTT or MR GTT respectively.

If the **nngt** parameter is specified, the **xlat=dpcnngt** and **ri=gt** parameter values must be specified. If they are not specified, they are changed to those values.

The **nrgta** parameter assumes an associated LRN is specified. If no LRN is specified, the real-time database displays *not found* information.

If the **nrgta** or **ngt** parameter is specified, it performs a global database assignment of **ngt** or **rgta** to the specified translation type and point code combination in the database. Subsequent assignments of non-**ngt** parameters specified by **sub** or **npnxxx** commands, for the globally updated translation type and point code combination, retain the globally defined **ngt** or **rgta** value.

The EAGLE 5 ISS terminal-administered **npnxxx** or **sub** commands can also globally enable or disable **ngt** or **rgta** values.

Output

chg-lnp-ttmap:tt=16:pc=233-233-233:nngt=28

```
rlghncxa03w 04-01-05 16:40:40 EST EAGLE 31.3.0
CHG-LNP-TTMAP: MASP A - COMPLTD
```

;

chg-lnpopts

Change LNP System Options

Use this command to enter LNP-specific system options in the database. This command updates the LNPOPTS table.

Keyword: **chg-lnpopts**

Related Commands: **rtrv-lnpopts**

Command Class: Database Administration

Parameters

:admhipri= (optional)

Give LNP database administration the highest administrative priority in the system.

Range: **yes, no**

Default: The current value.

- :amactype=** (optional)
AMA call type.
Range: 3 digits
Default: The current value.
- :amafeatid=** (optional)
AMA feature ID.
Range: 3 digits
Default: The current value.
- :amaslpid=** (optional)
AMA slip ID.
Range: 9 digits
Default: The current value.
- :aud=** (optional)
Audit indicator.
Range: **on, off**
Default: The current value.
- :ccp=** (optional)
Copy charge parameters. When this parameter is enabled (**ccp=yes**), the EAGLE 5 ISS copies the Charge Number and Charge Party Station type from an LNP AIN query (if present) to the LNP AIN Response message.
Range: **yes, no**
Default: The current value.
- :cic=** (optional)
Carrier identification code.
Range: 3-4 digits
Default: The current value.
- :frcsmplx=** (optional)
Allow simplex database updates.
Range: **yes, no**
Default: The current value.
- :gtwystp=** (optional)
Indicates that the LNP system is also configured as a Gateway STP.
Range: **yes, no**
Default: The current value.
- :incslp=** (optional)
Include AMA slip ID in the response.
Range: **yes, no**
Default: The current value.
- :jipdigits=** (optional)
The Jurisdictional Information Parameter value.
Range: 6 digits
Default: The current value.
- :jipprv=** (optional)
Determines whether a Jurisdictional Information Parameter value is to be added to the IAM.
Range: **yes, no**
Default: The current value.

:servport= (optional)

Service portability.

Range: **yes, no**

yes — This is a protocol setting that allows splitting services between TN and LRN override records. This setting lets the EAGLE LNP craftsperson update LRN overrides for message relay services that are to be supported in the network. The EAGLE 5 ISS then uses the TN gateway point code (NPAC subscription data) for message relay services the CLEC wants to provide.

no — If no LRN override services are provisioned, then the TN's gateway point codes (NPAC subscription data) are used to route queries out of the network. If one or more LRN override services are provisioned, the TN is considered to be ported into the network. In this case, if an LRN override service is requested and the LRN has other services administered, but the requested service is not provisioned, then a UDTs response for the service is provided.

Default: The current value

:sp= (optional)

Service provider ID.

Range: xyyy
4 alphanumeric characters

Default: The current value.

:wqredrct= (optional)

Wireless queries directed to default GTT.

Range: **on, off**

on — This setting allows the GTT functionality to treat any wireless LNP (WNP and PCS) queries that require GT as a normal GTT.

off — This setting routes all wireless LNP queries (WNP and PCS) that require GT directly to the local subsystem.

Default: the current value

:wsmsc10dig= (optional)

SCCP GTA digit length indicator for 10 or 11 digits.

Range: **yes, no**

yes — The system verifies that either 10 or 11 digits are present in the CDPA GTA. If 11 digits are present, the first digit is stripped to derive 10 digits for LNP SMS translation. If 10 digits are present, all 10 digits are used for LNP SMS translation.

no — The system verifies that 11 digits (plus a padded 0 digit) are present in the CDPA GTA. If 11 digits are present, the system strips the first digit and considers only 10 digits for LNP SMS translation.

Default: the current value

Example

chg-lnpopts:amaslpid=123456789

chg-lnpopts:amatype=003

chg-lnpopts:amafeatid=010

chg-lnpopts:incslp=yes

chg-lnpopts:cic=1369

chg-lnpopts:aud=on

chg-lnpopts:sp=1234

chg-lnpopts:jipdigits=919460

```

chg-lnpopts:jipprv=yes
chg-lnpopts:frcsmplx=yes
chg-lnpopts:admhipri=yes
chg-lnpopts:gtwystp=yes
chg-lnpopts:ccp=yes
chg-lnpopts:servport=yes
chg-lnpopts:wqredrct=off
chg-lnpopts:wsmc10dig=yes

```

Dependencies

At least one optional parameter must be specified.

The LNP feature (see the **enable-ctrl-feat** command) and the Triggerless LNP (TLNP) feature must be turned on before this command can be entered.

The **jipprv** and **jipdigits** parameters can be specified only if the Triggerless LNP feature is **on**.

The LNP SMS feature must be turned on before the **wsmc10dig** parameter can be specified.

Notes

The **frcsmplx** parameter is used to force the system in a forced simplex mode. In this mode, simplex updates are accepted by the active OAM if the standby OAM is in one of the following states: incoherent, diff level, or unstable.

If the **admhipri** parameter is set to **yes**, LNP database administration can starve out normal STP updates during LNP administration of 2 TNs per second. If the parameter is set to **no**, then STP and LNP updates receive the same priority. Depending on the system activity level, the performance of LNP updates may be reduced.

If the **gtwystp** parameter is set to **yes**, the LNP system is also configured as a gateway STP. The NPAC sends down capability point codes without routes. In this configuration, the system does not output a warning (UIM 1176) about capability point codes or true point codes without routes.

Output

```

chg-lnpopts:amaslpid=123456789

rlghncxa03w 04-01-07 00:57:31 EST EAGLE 31.3.0
CHG-LNPOPTS: MASP A - COMPLTD
;

```

chg-ls

Change Linkset

Use this command to change the attributes for a specified linkset in the system database. The new values overwrite the existing values.

Keyword: chg-ls

Related Commands: chg-slt, dlt-ls, rtrv-ls

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:lsn= (mandatory)

Linkset name. Each linkset name must be unique in the system.

Range: *ayyyyyyyyy*
 1 alphabetic character followed by up to 9 alphanumeric characters

:action= (optional)

This parameter adds or deletes the SAPC or mate IPGWx linkset name.

Range: **add, delete**

Default: **add**

:apc= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: **apca**

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:apc/apca/apci/apcn/apcn24= (optional)

Adjacent point code.

:apci= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:apcn= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:apcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*. The *prefix* indicates a private point code (*prefix-msa-ssa-sp*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:apcntype= (optional)

ITU-N Adjacent Point Code Type. This parameter specifies the format that will be used for changeover and changeover acknowledgement messages.

Range: **itun, itunchina**

itun — ITU National Adjacent Point Code type

itunchina — ITU National China Adjacent Point Code type

Default: **itun**

:asl8= (optional)

Adjacent SLS 8-bit indicator. This parameter specifies whether the adjacent node is sending MSUs with 8-bit SLSs.

Range: **yes, no**

Default: Current value

:bei= (optional)

Broadcast exception indicator. This parameter specifies whether TFP (transfer prohibited) messages are allowed to be broadcast on the linkset.

Range: **yes, no**

yes — TFPs are not broadcast.

no — TFPs are broadcast.

Default: Current value

:clli= (optional)

Far-end Common Language Location Identifier (CLLI). This parameter specifies the CLLI assigned to the linkset.

Range: *ayyyyyyyyyy*

1 alphabetic character followed by up to 10 alphanumeric characters

Default: Current value

:gsmscrn= (optional)

GSM MAP screening. This parameter specifies whether GSM MAP screening is allowed.

Range: **on, off**

Default: Current value

:gttmode= (optional)

Global Title Translation Mode. This parameter specifies a GTT Mode hierarchy for each link set.

Range: **cd, cg, acdcd, acdgcg, acdcdcg, cgacdcd, cgcd, cdcg, sysdflt**

Default: No change to current value.

:gwsa= (optional)

Gateway screening action. This parameter specifies whether gateway screening (GWS) is on or off for the specified linkset.

Range: **on, off**

Default: Current value

:gwsd= (optional)

Gateway screening MSU discard. This parameter specifies whether the discarding of MSUs that bypass the gateway screening function due to load-shedding is on or off. This parameter is also used with the redirect function; MSUs that cannot be screened are discarded if **gwsd=on** is specified.

Range: on, off

Default: off

:gws= (optional)

Gateway screening messaging. This parameter specifies whether messages are generated for each message screened by gateway screening.

Range: on, off

Default: Current value

:iptps= (optional)

IPGWx Linkset TPS. The value of this parameter is a user-defined portion of the total enabled system IP Signaling TPS shown in the **rtrv-ctrl-feat** command output. This parameter is allowed and required only for IPGWx linksets (when **ipgwapc=yes** is specified).

The maximum range value for the **iptps** parameter is **188000** for future expansion. However, the maximum system IPGWx Signaling TPS capacity currently available is 112000.

Range: 100-188000

The specified value must be divisible by 10.

The sum of the **iptps** values assigned to all linksets in the system cannot exceed the enabled system IPGWs Signaling TPS value (see the **rtrv-ctrl-feat** command).

Default: No change to current value.

:itutfr= (optional)

ITU TFR (Transfer Restricted) procedure indicator. This parameter specifies whether the TFR procedure is on or off on a per-linkset basis. This parameter is valid for ITU national linksets only.

Range: on, off

Default: No change to current value

:l3tset= (optional)

Link timer set. This parameter is defined with the **chg-l3t** command.

Range: 1

Default: No change to current value

:lst= (optional)

Linkset type of the specified linkset. This parameter specifies whether the specified link is an access link, bridge link, cross link, diagonal link, or extended link, as defined in Telcordia GR-246-CORE, T1.111.5.

Range: a, b, c, d, e

a— Access links

b— Bridge links

c— Cross links

d— Diagonal links

e— Extended links

Default: No change to current value

:lsusealm= (optional)

IPTPS linkset alarm threshold percent. This parameter specifies the percent of the linkset TPS (**iptps**) at which an alarm is generated to indicate that the actual linkset TPS is approaching the configured **iptps** value for the linkset.

Range: 10-100

Default: No change to current value

:matelsn= (optional)

Mate linkset name.

Range: *aaaaaaaa*
1 alphabetic character followed by up to 9 alphanumeric characters

Default: No change to current value

:mtprse= (optional)

ANSI or ITU MTP Restart equipped. This parameter specifies whether the node adjacent to the linkset is equipped with MTP Restart.

Range: **yes, no**
yes — equipped
no — not equipped

Default: No change to current value

:multgc= (optional)

Multiple group codes. The parameter specifies whether multiple group codes can be specified.

Range: **yes, no**

:nis= (optional)

Network Indicator Spare. This parameter specifies whether the Network Indicator Spare option is on or off for the specified linkset. When this option is enabled, the Network Spare value for network indicator for both ANSI and ITU-National (ITU-N) links is supported by the system.

Range: **on, off**
Default: **off**

:nlsn= (optional)

New linkset name. This parameter specifies the name to be used when changing the linkset name specified in the **lsn** parameter.

Range: *aaaaaaaa*
Up to 8 alphanumeric characters; the first character must be a letter

Default: No change to current value

:sapci= (optional)

ITU international secondary adjacent point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**
Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).
prefix—**s-, p-, ps-**
zone—**0-7**
area—**000-255**
id—**0-7**

The point code **0-000-0** is not a valid point code.

:sapci/sapcn/sapcn24= (optional)

Secondary adjacent point code.

:sapcn= (optional)

ITU national secondary adjacent point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code,

or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:sapcn24= (optional)

24-bit ITU national secondary adjacent point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* indicates a private point code (*prefix-msa-ssa-sp*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:scrn= (optional)

Gateway screening screen set. This parameter specifies the gateway screening screen set assigned to this linkset.

When using the **scrn** parameter to change Gateway Screening from an old screenset name with Gateway Screening Allowed Mode **gwsa=off** to a new screenset name with **gwsa=on**, the command must first be entered to assign the screenset name to NONE (**scrn=none**). This assignment will prevent any rules from the old screenset from being applied during the interim period that it takes for the new screenset to load.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters or none (deletes screen set association)

Default: No change to current value

:slkusealm= (optional)

IPTPS signaling link alarm threshold percent. This parameter specifies the percent of the link "fair share" TPS at which an alarm is generated to indicate that the actual link TPS is approaching the link's "fair share" of its linkset's configured TPS (**iptps**). The "fair share" of the linkset TPS for a link is the configured linkset TPS divided by the number of in-service links in the linkset.

Range: **10-100**

Default: No change to current value

:slsci= (optional)

5-bit to 8-bit SLS conversion indicator. This parameter specifies whether the 5-bit to 8-bit SLS conversion feature is used to select links for outgoing messages direct to the given linkset. When enabled, the system replaces any 5-bit SLS values contained in received messages, with a random 8-bit value before the 5-bit SLS values are used by the STP to select the outgoing link in that linkset.

Range: **yes, no**

yes— enabled

no— disabled

Default: No change to current value.

:slsobit= (optional)

Other CIC (Circuit Identification Code) Bit. If the SLSOCB feature is turned on, this parameter specifies whether the Other CIC Bit option is to be used during link selection. If the option is to be used, specify which bit (5–16) of the CIC is to be used as the other CIC bit. During link selection, the specified bit acts as the most significant bit of the new SLS and bits 2 through 4 of the received CIC become the least significant bits of the new SLS. This parameter is used for ITU-ISUP messages. The SLS is not modified in the outgoing message. The following example shows a received CIC where bit 9 is the other CIC bit (**:slsobit=9**). The new SLS is 0100:

16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
0	0	0	0	1	0	0	0	1	0	0	1	1	0	0	1
New SLS								0				1	0	0	

Range: 5-16 none

Default: No change to current value

:slrsb= (optional)

Rotated SLS (Signaling Link Selection) Bit. This parameter specifies the bit (1–4) to rotate as the new SLS LSB (Least Significant Bit). The SLS is not modified in the outgoing message. Table 5-22 shows how the rotation affects the four bits of the SLS during linkset selection:

Table 5-22. SLS Bit Rotation

If This Bit Is Selected...	Then Bit Locations 4 3 2 1 Are Rotated To...	
Bit 4	3 2 1 4	SLS = 0110 becomes Rotated SLS = 1100 SLS = 1011 becomes Rotated SLS = 0111
Bit 3	2 1 4 3	SLS = 0110 becomes Rotated SLS = 1001 SLS = 1011 becomes Rotated SLS = 1110
Bit 2	1 4 3 2	SLS = 0110 becomes Rotated SLS = 0011 SLS = 1011 becomes Rotated SLS = 1101
Bit 1	No rotation is performed because bit 1 is the existing LSB.	

This parameter is used for ITU messages on a per-linkset basis.

Range: 1-4

Default: No change to current value.

:sltset= (optional)

SLTM record. This parameter specifies the SLTM record to be associated with the linkset.

Range: 1-20

Default: No change to current value.

:tfatcabmlq= (optional)

TFA/TCA broadcast minimum link quantity. This parameter specifies the minimum number of links in the given linkset, or in the combined linkset in which the linkset resides, that must be available to user-part messages traffic. This parameter value is used by the STP to consider the first-choice ordered routes using that linkset as Allowed rather than Restricted.

When the **tfatcabmlq** parameter provisioned or default value is **0**, the TFA/TCA broadcast minimum link quantity is calculated by the EAGLE 5 ISS to be either **1** for linksets containing 3 or fewer links, or half of the number of links configured in the linkset for linksets containing more than 3 links.

When the **tfatcabmlq** parameter value is set to a specific value greater than **0**, the EAGLE 5 ISS does not calculate a TFA/TCA broadcast minimum link quantity. The specified value is used.

If the **lsrestrict** option is **off** (see the **chg-ss7opts** command), the **tfatcabmlq** database value for C linksets cannot be changed to a value greater than **0**. If the **lsrestrict** option is **on** (see the **chg-ss7opts** command), the **tfatcabmlq** value for C linksets (**lst=c**) can be set to a value from **1** to **16**. If you change the **tfatcabmlq** value for one or more C linksets in the system, you cannot set the **lsrestrict** option from **on** to **off** until you set all of the changed C linkset **tfatcabmlq** values back to **0**.

NOTE: The **rtrv-ls** command output always shows the calculated value or the provisioned value for the **tfatcabmlq** parameter. See the **rtrv-ls** command description.

Range: 0, 1-16

Default: No change to current value.

System

Default: 0

Example

Changes link set wy644368 to use APC 144-202-5

chg-ls:lsn=wy644368:apc=144-202-005

Changes link set wy644368 to Link Set Type A

chg-ls:lsn=wy644368:lst=a

Changes link set wy644370 to use APCN24 10-100-15

chg-ls:lsn=wy644370:apcn24=10-100-15

Adds an SAPC to a linkset

chg-ls:lsn=linkset:sapcn=1234-fr:action=add

Deletes an SAPC from a linkset

chg-ls:lsn=linkset:sapcn=1234-fr:action=delete

Modifies an SAPC, sapc has to be deleted first and added again

chg-ls:lsn=nc001:apc=144-201-001

chg-ls:lsn=c002:gwsn=on:nis=on

chg-ls:lsn=nc002:gwsn=on

chg-ls:lsn=nc003:slt=reg:lst=b

Adds a 24-bit ITU-N SAPC to a linkset

chg-ls:lsn=ls1:sapcn24=5-5-5

Deletes a 24-bit ITU-N SAPC from a linkset:

chg-ls:lsn=ls1:sapcn24=5-5-5:action=delete

Assigns a mate linkset to a linkset:

chg-ls:lsn=linkset:matelsn=matelinkset

chg-ls:lsn=linkset:matelsn=matelinkset:action=add

Removes a mate linkset assignment from a linkset:

chg-ls:lsn=linkset:matelsn=matelinkset:action=delete

Changes an ITUN24 linkset to an apcntype for China:

chg-ls:lsn=ls2:apcntype=itunchina

Changes an ITUN24 linkset to an apcntype for Q703.A:

chg-ls:lsn=ls2:apcntype=itun

Additional examples:

chg-ls:lsn=nc003:slsci=yes:tfatcabmlq=2

chg-ls:lsn=lsitu1:gmscrn=off

chg-ls:lsn=wy644370:apcn24=10-100-15

chg-ls:lsn=ls1:sapcn24=5-5-5

chg-ls:lsn=ls1:sapcn24=5-5-5:action=delete

chg-ls:apca=p-011-2-3:lsn=lsa1:lsta=a

chg-ls:apci=s-1-2-3:lsn=lsn1:lsta=c

chg-ls:apcn=ps-1-1-1-2047:lsta=a

Dependencies

The **gwsa**, **gwsn**, and **gwsd** parameters can be specified only if the **scrn** parameter is specified.

The **gwsd=on** parameter can be specified only if the **gwsa=on** parameter is specified.

At least one optional parameter must be specified.

If the **lsrestrict** option is **off** (see the **chg-ss7opts** command), the **tfatcabmlq** database value for C linksets cannot be changed from the system default of **0**. If the **lsrestrict** option is **on** (see the **chg-ss7opts** command), the **tfatcabmlq** value for C linksets (**lsta=c**) can be set to a value from **1** to **16**. If you change the **tfatcabmlq** value for one or more C linksets in the system, you cannot set the **lsrestrict** option from **on** to **off** until you set all of the changed C linkset **tfatcabmlq** values back to **0**. C linksets are never the primary route (except to reach the STP's mate).

The **tfatcabmlq** parameter value cannot exceed the total number of assigned links in the linkset.

The **tfatcabmlq=0** parameter specifies that the system broadcasts TFAs or TCAs only when half the links in the given linkset, or in the combined linkset in which it resides, become available.

The **slsci** parameter is valid only for ANSI linksets.

The linkset name must be in the database.

The screen set name specified by the **scrn** parameter must be valid and must be in the database.

Adjacent point codes must be full point codes.

The adjacent point code must be defined as a destination point code.

The adjacent point code cannot match the site point code.

If the adjacent point code is in the X.25 domain, the **bei=yes** parameter must be specified or the **bei** parameter must be omitted.

The domain of the new adjacent point code must be the same as the previous adjacent point code unless there are no links in the linkset.

The adjacent point code cannot be referenced by an X.25 route with the **lc2nm=yes** parameter specified.

Only one linkset can be defined for an adjacent point code.

An SAPC cannot be deleted when routes exist for its SS7 domain.

If the **gwsa=off** and **gwsn=off** parameters are specified, all MSUs are passed. If the **gwsa=off** and **gwsn=off** parameters are specified for all linksets, gateway screening and the GWS redirect function for the DTA feature are disabled.

If the **gwsa=off** and **gwsn=on** parameters are specified, all MSUs pass, but error messages are generated if an MSU matches a screening condition.

If the **gwsa=on** and **gwsn=off** parameters are specified, MSUs are screened but messages are not generated.



CAUTION: Even though gateway screening is in the screen test mode, as defined by the parameters **gwsa=off** and **gwsn=on**, the gateway screening action in the stop action set specified by the **actname** parameter of the screen set *will* be performed at the end of the screening process.

If the **gwsa=on**, **gwsn=on**, and **gwsd=off** parameters are specified, MSUs are screened and error messages are generated if an MSU is passed when it should have been screened. For example, an LIM was configured for gateway screening but was unable to load its screening data.

The **lc2nm** parameter in the X.25 route commands allows the system to apply network management procedures to X.25 logical channels. If an X.25 logical channel fails, network management reroutes messages to an alternate route.

The **mtprse** parameter can be specified only if the MTP restart feature, MTPRS (for ANSI), or ITUMTPRS (for ITU), is turned on. The **rtrv-feat** command can be used to verify whether the feature is turned on (MTPRS=YES or ITUMTPRS=YES in the output).

The **mtprse=yes** parameter is not valid for IPGW Adjacent Point Code linksets (the **ipgwapc=yes** was specified when the linkset was entered in the database).

The **mtprse=yes** parameter is not valid for IPLIMx M3UA signaling links.

A gateway linkset can be configured only from a SEAS terminal and not from a system terminal.

The **clli** parameter and the **apc/apca/apci/apcn/apcn24** parameter must be specified together in the command.

The **nis** parameter can be specified only for ANSI and ITU-N links.

If a DPC matching the far end point code exists, the system compares the far end CLLI for the given linkset to the destination identifier (DI) of that matching destination. If they are not identical, the system rejects the command.

If the **asl8=yes** parameter is specified with the **lst=a** parameter (a linkset containing access signaling links), this indicates that the originator of the MSUs is generating 8-bit SLs. For other linkset types, the **asl8=yes** parameter indicates that the adjacent STP is converting 5-bit SLs to 8-bit SLs. The SLS in MSUs received by the system on a linkset that has the **asl8=yes** parameter assigned to it will not be converted. These MSUs are assumed to contain 8-bit SLs.

The **asl8=yes** parameter can be assigned only to an SS7 linkset (a linkset containing an adjacent point code in the SS7 domain).

The **apcn** parameter format must match the format that was assigned with the **chg-stpopts:npcfmti** parameter.

An SAPC parameter can be specified only for ITU-N and ITU-N24 linksets.

The **slsobit** parameter is valid only for ITU linksets.

The **slsrbs** parameter is valid only for ITU linksets.

The GSM Map Screening feature must be turned on before the **gmscrn** parameter can be specified (see the **enable-ctrl-feat** and **chg-ctrl-feat** commands).

The Enhanced GSM Map Screening feature must be turned on before the **gmscrn=on** parameter can be specified for an ANSI linkset.

The **itutfr** parameter is valid only for ITU national linksets.

The group code of DPC(s) must match the group code of the APC/SAPC when the **multgc=no** parameter is specified. If the adjacent point code's group code is changed, the **multgc=yes** parameter must be specified, or there must be no routes using the linkset. The **multgc** parameter value can be changed to **no** only if there are no routes with group codes different from the adjacent point code's group code.

Only one ITU-N APC/SAPC is allowed with the **multgc=no** parameter.

Only one ITU-I or 24-bit ITU-N APC/SAPC is allowed per linkset

The **apcntype** parameter can be specified only for ITU-N and ITU-N24 linksets.

A linkset cannot have both a 14-bit ITU-N and a 24-bit ITU-N APC/SAPC unless it contains only IPGWI links or IPLIM M3UA links. These links support 14-bit ITU-N and 24-bit ITU-N traffic simultaneously. A linkset with the **ipgwapc=no** parameter cannot have both a 14-bit ITU-N and a 24-bit ITU-N APC/SAPC if no links are provisioned. The SAPC cannot be a 24-bit ITU-N point code if the linkset contains IPLIM SAALTALI or E1 ATM links, which do not support 24-bit ITU-N traffic.

Private (**p-**) and private and spare (**ps-**) point codes can be assigned only to IPGW linksets (the **ipgwapc=yes** parameter is specified).

The **iptps** parameter cannot be specified for linksets that are not IPGWx.

The specified **iptps** parameter value must be divisible by 10.

The total of the **iptps** parameter values for all linksets cannot exceed the IPGWx Signaling TPS feature quantity that is enabled in the system.

The **lsusealm** parameter cannot be specified for linksets that are not IPGWx.

The **slkusealm** parameter cannot be specified for linksets that are not IPGWx.

The specified linkset name (**lsn**) cannot be the same as the specified mate linkset name (**matelsn**).

If the **action=add** parameter is specified, the specified mate linkset cannot already be assigned as the mate of the specified linkset.

When the **action=add** parameter is specified, the specified mate linkset cannot already be the mate of another linkset.

The specified mate linkset must be an existing linkset in the database.

A mated linkset can have only one assigned link.

Mated linksets can contain only SS7IPGW or IPGWI links.

Mated linksets must have APCs of the same network type.

The card that has the link assigned to the specified linkset must be inhibited before the **action=add** parameter can be specified to assign the specified mate linkset to the specified linkset.

The card that has a link in the mate linkset must be inhibited before the **action=delete** parameter can be specified to delete the mate linkset assignment.

If the **action=delete** parameter is specified to delete a mate linkset assignment, the specified mate linkset must be the mate of the specified linkset in the database.

Either an SAPC or a mate linkset (**matelsn**), but not both, can be specified with the **action=delete** parameter.

The **mtpmse** parameter can be specified only if the MTP restart feature ITUMTPRS (for ITU) is turned on. The **rtrv-feat** command can be used to verify whether the feature is turned on (ITUMTPRS=YES in the output).

The **slsobit** parameter is valid only if the SLSOCB feature is turned on.

The adjacent point code cannot match the capability point code.

An APC cannot be changed to a point code that has exception routes provisioned

An APC or SAPC cannot be assigned to an IPGWx linkset that is already assigned to a route involving another linkset.

The Origin-based SCCP Routing feature must be turned on before the **gttmode** parameter can have a value of **acdcd**, **cgacdcd**, **acdcdcg**, **acdcdcg**, **cgcd**, **dcg**, or **cg**.

The APC/SAPC of an existing IPGW link set cannot be changed to an APC/SAPC that is already configured in a routing key.

All links assigned to the linkset must be removed before changing the **apcntype** parameter value from **apcn** to **apcn24** or from **apcn24** to **apcn**.

If one or more links in a specified linkset are in service, the **apc/apca/apci/apcn/apcn24** parameters cannot be specified.

Notes

Any optional parameter that is not specified is not changed.

The links that directly connect the system with a distant node are grouped into one or more linksets. A linkset can contain up to 8 (international standards) or 16 (national standard) signaling links, depending on how the system attributes were defined when the network was created.

Signaling link test acknowledgments (SLTA) are the same type of maintenance message as the SLTMs received on the link.

MTP restart provides an orderly process for bringing signaling links back into service after the system has been isolated and restarted. A greater preference is given to restoring the STP to network service in an orderly fashion than to the speed of recovery. The time required is system-dependent. Table 5-23 provides examples of some approximate times.

Table 5-23. Link Alignment Performance

System Size (No. of LIMs)	Link Alignment Delay (seconds)
up to 64	62
64 to 127	97
128 to 191	132
more than 191	167

When two linksets are used as a combined linkset, each linkset should have the same **slsci** and **asl8** values. **This is not enforced in the system and there is no warning mechanism if the values of these parameters are not the same for each linkset.**

The **tfacabmlq** parameter is not supported for linksets that terminate in the X.25 domain.

The **slrsb** parameter alone does not provide an even distribution of ITU-ISUP messages across all links within a linkset. The system uses all four bits of the SLS to determine the actual link to route messages. Because the static bit is simply rotated within the SLS, all possible values of the SLS field will still not be realized. The **slsocbit** parameter must also be used to provide an even distribution across all links within the linkset. If both parameters are used for a given linkset, the SLS field is processed in the following order.

1. The SLS is modified using the Other CIC Bit option.
2. The modified SLS is modified again using the Rotated SLS Bit option.
3. The modified SLS is used by the existing linkset and link selection algorithms to select a link.
4. The ISUP message is sent out of the link containing the original, unmodified SLS field.

To modify a secondary adjacent point code, **sapc** has to be first deleted, then added again.

A 24-bit ITU-N point code can be provisioned as an SAPC only if the APC is not already a 24-bit ITU-N point code.

Only one 24-bit ITU-N point code is allowed to be provisioned as an SAPC.

For a linkset containing either low speed CCS7ITU links or IPLIM M2PA links, if the APC is a 14-bit ITU-N point code, then a 24-bit ITU-N point code cannot be provisioned as an SAPC.

For a linkset containing either low speed CCS7ITU links or IPLIM M2PA links, if the APC is a 24-bit ITU-N point code, then a 14-bit ITU-N point code cannot be provisioned as a SAPC.

For a linkset containing either low speed CCS7ITU links or IPLIM M2PA links, if the APC is a ITU-I point code, then either a 24-bit ITU-N point code or a 14-bit ITU-N point code can be provisioned as an SAPC, but not both

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (**s-**) and the private and spare point code subtype prefix (**ps-**). All of the point code types support the private (internal) point code subtype prefix (**p-**).

The ITU National and ITU National China Adjacent Point Code types indicate the format that is used for changeover and changeover acknowledgement messages. China specifies a 16-bit field for data in changeover messages. The FSN occupies the first 12 bits. The trailing 4 bits are spare and are coded as 0. ITU uses a 24-bit field for data in the extended changeover/changeover acknowledgement messages. The FSN is encoded in the first 12 bits. The last 12 bits of the field are spare and are coded as zero.

Output

chg-ls: lsn=nc002:gwsn=on

```
rlghncxa03w 04-01-18 08:16:14 EST EAGLE 31.3.0
Link set table is (114 of 1024) 11% full
CHG-LS: MASP A - COMPLTD
```

;

Output if the APC was changed:

chg-ls: lsn=nc002:gwsn=on

```
rlghncxa03w 04-01-18 08:16:14 EST EAGLE 31.3.0
CAUTION: Linkset APC has changed - verify remote node's APC.
Link set table is (114 of 1024) 1% full
CHG-LS: MASP A - COMPLTD
```

;

chg-m2pa-tset

Change M2PA Timer Set

Use this command to change M2PA timers in an M2PA timer set. The **srcset** and **tset** parameters can be used to copy from one timer set to another.

NOTE: The M2PA RFC feature introduces 20 new timer sets. M2PA timer sets created prior to this feature become M2PA Draft 6 timer sets, which are used by the M2PA Draft 6 associations. M2PA RFC associations use the RFC timer sets.

Keyword: chg-m2pa-tset

Related Commands: rtrv-m2pa-tset

Command Class: Database Administration

Parameters

:tset= (mandatory)

Timer set. This parameter specifies the name of the M2PA timer set.

Range: 1-20

:srcset= (optional)

This parameter specifies which timer set is to be copied into the timer set specified by the **tset** parameter. If the **srcset** parameter is specified, no other timer values can be specified. The timer set specified by the **srcset** parameter cannot be the same timer set that is specified by the **tset** parameter.

Range: 1-20

:t1= (optional)

T1 timer. This parameter specifies the alignment timer in milliseconds. This timer marks the amount of time M2PA waits to receive a Link Status Alignment message from the peer.

Range: 1000-350000

Default: 10000 - D6
35000 - RFC

:t16= (optional)

T16 timer. This parameter specifies the proving rate timer in milliseconds. This timer marks the amount of time between sending Link Status Proving messages while T2N or T2E is running. The T16 value is given in microseconds.

Range: 100-500000

Default: 200000

:t17= (optional)

T17 timer. This parameter specifies the ready rate timer in milliseconds. This timer marks the amount of time between sending Link Status Ready messages while T3 is running.

Range: 100-500

Default: 250

:t18= (optional)

T18 timer. This parameter specifies the processor outage rate timer. This timer marks the amount of time between sending Link Status Processor Outage messages while the link is in service.

Range: 100-10000

Default: 1000

:t2= (optional)

T2 timer. This parameter specifies the M2PA RFC timer.

The T2 timer is not used in M2PA Draft 6 timer sets.

Range: 5000-150000

Default: 20000

:t3= (optional)

T3 timer. This parameter specifies the ready timer in milliseconds. This timer marks the amount of time after proving that M2PA waits to receive a Link Status Ready message from the peer.

Range: 1000-60000

Default: 10000 - D6
2000 - RFC

:t4e= (optional)

T4E timer. This parameter specifies the emergency proving timer in milliseconds. The emergency proving timer marks the amount of time M2PA generates Link Status Proving messages during emergency proving.

Range: 400-5000

Default: 500

:t4n= (optional)

T4N timer. This parameter specifies the normal proving timer in milliseconds. This timer marks the amount of time M2PA generates Link Status Proving messages during normal proving.

Range: 1000-70000

Default: 10000 - D6
30000 - RFC

:t5= (optional)

T5 timer. This parameter specifies the busy rate timer in milliseconds. This timer marks the amount of time between sending Link Status Busy messages while the link is in service.

Range: 80-10000

Default: 1000 - D6
100 - RFC

:t6= (optional)

T6 timer. This parameter specifies the remote congestion timer. This timer marks the amount of time that a congested link will remain in service.

Range: 1000-6000

Default: 3000

:t7= (optional)

T7 timer. This parameter specifies the excessive acknowledgement delay timer. This timer marks the maximum amount of time that can pass between transmission of a user data message and receipt of an acknowledgement for that message from the peer. If this timer expires, the link is taken out of service.

Range: 200-2000

Default: 1200

:ver= (optional)

Version. This parameter specifies the M2PA version used by the association.

Range: d6, rfc

Example

chg-m2pa-tset:tset=1:t1=20000

chg-m2pa-tset:tset=1:t1=20000:ver=d6

chg-m2pa-tset:srctset=1:tset=2:ver=rfc

Dependencies

At least one optional parameter must be specified.

The **srctset** parameter and the **tset** parameter cannot specify the same timer set name.

The specified timer is not supported for the Draft 6 version of M2PA.
Either a timer value or the **srctset** parameter must be specified.

Notes

None

Output

```
chg-m2pa-tset:tset=1:t1=20000:ver=d6
  rlgncxa03w 06-01-18 08:16:14 EST EAGLE 34.3.0
  CHG-M2PA-TSET: MASP A - COMPLTD
;
```

chg-map

Change Mate Applications

Use this command to change the mate point code and subsystem number and its attributes. A mate point code defines an adjacent signaling point, which is considered the mated signal transfer point (STP) to the system.

Keyword: **chg-map**

Related Commands: **dlt-map, ent-map, rtrv-map**

Command Class: Database Administration

Parameters

At least one of these parameters must be specified: **grp**, **materc**, **mpc/mcpa/mpci/mpcn/mpcn24**, **mrc**, **mssn**, **srn**.

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:pc= (mandatory)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: **pca**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001-005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006-255**.

The point code **000-000-000** is not a valid point code.

:pc/pca/pci/pcn/pcn24= (mandatory)

Primary remote point code.

:pci= (mandatory)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:pcn= (mandatory)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:pcn24= (mandatory)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:ssn= (mandatory)

Subsystem number.

Range: **2-255**

:grp= (optional)

Group. This parameter specifies the concerned point code broadcast list (CSPC) group name. The CSPC is a group of point codes that should be notified of the subsystem status. A different CSPC group can be assigned to each mated PC/SSN. For ANSI, the EAGLE 5 ISS broadcasts SSP or SSA to the mate subsystem only if the mate's point code is provisioned as part of the CSPC group to receive an SSP or SSA.

Range: *ayyyyyyy*

1 alphabetic character followed by up to 7 alphanumeric characters or **none**

none—Disassociates a concerned point code broadcast list group from the given mate application

Default: Current value.

:mapset= (optional)

MAP set ID.

Range: **1-36000 dflt**

dflt—Default MAP set

Default: **dflt** - If the Flexible GTT Load Sharing feature is not enabled

No change to current value—If the Flexible GTT Load Sharing feature is enabled

:materc= (optional)

Mate relative cost. The EAGLE 5 ISS determines the multiplicity mode based on the relative costs (the **rc** and **materc** parameters) of the subsystem. (See Notes for additional information on multiplicity modes.)

Range: 00-99

Default: Current value.

:mpc= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Synonym: **mpca**

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001-005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006-255.

The point code 000-000-000 is not a valid point code.

Default: 000-000-000

:mpc/mpca/mpci/mpcn/mpcn24= (optional)

Mate remote point code.

:mpci= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

Default: 000-000-000

:mpcn= (optional)

ITU national point code in the format of a 5-digit ITU number (*nnnnn*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*).

Range: s-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

Default: 00000

:mpcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

Default: **000-000-000**

:mrc= (optional)

Message routing under congestion. This parameter specifies whether Class 0 messages are routed during congestion conditions.

Range: **yes, no**

Default: Current value.

:mssn= (optional)

Mated subsystem number. This parameter specifies the SSN that acts as a backup if the SSN fails.

Range: **2-255**

Default: Current value.

:rc= (optional)

Relative cost. The EAGLE 5 ISS determines the multiplicity mode based on the relative costs (the **rc** and **materc** parameters) of the subsystem. (See Notes for additional information on multiplicity modes.)

Range: **00-99**

Default: Current value.

:srm= (optional)

Subsystem routing messages. This parameter specifies whether subsystem routing messages (SBR, SNR) are transmitted between the mated applications.

Range: **yes, no**

Default: Current value.

:sso= (optional)

Subsystem status option. This parameter specifies whether the PC/SSN will initiate a subsystem test when a RESUME is received for the PC.

Range: **on, off**

on—prohibited

off—allowed

Default: Primary—no change

Mate, if entered—**off**

Example

The following example enters 1-1-3/10 into the MAP table and adds it to the same group as 1-1-0/10. Because 1-1-0/10 already exists in the MAP table, the rc parameter is not used.

chg-map:pc=1-1-0:ssn=10:mpc=1-1-3:mssn=10:materc=40

The following example enters 1-1-2/10 into the MAP table, and adds it to the same group as 1-1-0/10 (see above example). Because 1-1-2/10 has a lower relative cost than 1-1-3/10, it is placed into the group in relative cost order.

chg-map:pc=1-1-0:ssn=10:mpc=1-1-2:mssn=10:materc=30

The following example changes the relative cost (rc) for the specified pc/ssn pair:

chg-map:pc=1-1-0:ssn=10:rc=20

The following example changes the concerned PC broadcast list group name (grp) for the specified pc/ssn pair:

chg-map:pc=1-1-0:ssn=10:grp=abc

The following example changes the ITU-I spare point code entry s-1-12-2 and adds the spare mate point code entry s-2-23-3 in the map table:

chg-map:pci=s-1-12-2:ssn=10:rc=10:mpci=s-2-23-3:mssn=20:materc=10

The following example turns ON the sso option for pc1-1-0 and ssn10.

chg-map:pc=1-1-0:ssn=10:sso=on

The following example turns OFF the sso option for pc1-1-0 and ssn10.

chg-map:pc=1-1-0:ssn=10:sso=off

The following example does not change the current value of the sso option for the primary or the mate.

chg-map:pc=1-1-0:ssn=10:rc=10

The following example turns ON the sso option for primary and mate.

chg-map:pc=1-1-0:ssn=10:mpc=3-3-3:mssn=2:sso=on

The following example turns OFF the sso option for primary and mate.

chg-map:pc=1-1-0:ssn=10:mpc=4-4-4:mssn=2:sso=off

The following example does not change the current value for the sso option for the primary. The sso option is turned OFF for the mate, because the mate is specified but the sso parameter is not specified (the default is OFF for the mate when the mate is specified).

chg-map:pc=1-1-0:ssn=10:mpc=5-5-5:mssn=2

The following example changes the ITU-I spare s-1-12-2 entry and adds the spare mate point code s-2-23-3 entry in the map table.

chg-map:pci=s-1-12-2:ssn=10:rc=10:mpci=s-2-23-3:mssn=20:materc=10

The following example adds a new PC/SSN 1-1-3/10 in the existing MAP set 362.

chg-map:pc=1-1-1:ssn=10:mpc=1-1-3:mssn=10:materc=40:mapset=362

The following example adds a new PC/SSN 1-1-3/15 to the same load-sharing group in the default MAP set to which 1-1-1/15 belongs.

chg-map:pc=1-1-1:ssn=15:mpc=1-1-3:mssn=15:materc=40:mapset=df1t

The following example changes the RC of 1-1-1/10 in existing MAP set 362 to 20.

chg-map:pc=1-1-1:ssn=10:rc=20:mapset=362

The following example changes the RC of 1-1-1/15 in default MAP set to 10 and adds a new PC/SSN 2-2-2/25 to the same load-sharing group in default MAP Set to which 1-1-1/15 belongs.

chg-

map:pc=1-1-1:ssn=15:rc=10:mpc=2-2-2:mssn=25:materc=10:mapset=df1t

Dependencies

At least one optional parameter must be specified.

The specified remote PC must exist in the MAP table.

The Spare Point Code Support feature must be enabled before an ITU-I or ITU-N spare point code can be specified.

The specified SSN must exist for the specified remote PC.

ITU-I, ITU-N, ITU-I spare, and ITU-N spare true PCs must be entered with the same SSN.

The mate PC/SSN cannot be the same as the primary PC/SSN.

If the PC value is an ITU type (**pci**, **pcn**, or **pcn24**), the **srn=yes** parameter cannot be specified.

If an MPC is specified, the network type of the specified PC must match the network type of the specified MPC.

- If an ANSI PC parameter is specified (**pc** or **pca**), the MPC parameter must specify an ANSI point code (**mpc** or **mpca**), respectively.
- If an ITU PC parameter is specified (**pci**, **pcn**, or **pcn24**), the MPC parameter must specify an ITU PC (**mpci**, **mpcn**, or **mpcn24**, respectively).

To mix group and PC Network types, the "ANSI/ITU/24 Bit ITU-N Conversion" feature must be on.

If the ANSI-ITU-China SCCP Conversion feature is turned on, then CPC broadcast group network types and PC network types can be mixed. If the ANSI-ITU-China SCCP Conversion feature is not turned on,

- If PC values are entered as **pc** or **pca**, the PCs in the new CPC broadcast group, if specified, must be entered as **pc** or **pca**.
- If PC values are entered as **pci**, the PCs in the new CPC broadcast group, if specified, must be entered as **pci**.
- If PC values are entered as **pcn** or **pcn24**, the PCs in the new CPC broadcast group, if specified, must be entered as **pcn** or **pcn24**.

If a new mate PC or mate subsystem is specified, then the pair must not already exist in the MAP table.

The DPCs of the primary subsystem and the mate subsystem must be full PCs.

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before an EAGLE 5 ISS true PC and the LNP subsystem can be changed.

If the **pcn** parameter or the **mpcn** parameter is specified, the format must match the format that was assigned with the **chg-stpopts:npcfmti** parameter.

The **mpc**, **mssn**, and **materc** parameters must be specified together in the command.

If the **pc** parameter value is an EAGLE 5 ISS true PC, the subsystem must have a lower relative cost than all other mated subsystems in the group.

A maximum of 8 mated applications is allowed.

The **sso** parameter cannot be specified with a PC that is the system true PC.

A true PC can have only one mate.

A true PC cannot be routed to itself.

If the **mssn**, **materc**, and **rc** parameters are specified, the **mpc** parameter must be specified.

The PC must already exist in the CPC group.

If a CSPC broadcast list group name is specified, then it must already exist, unless the **none** parameter is specified.

If an MPC is specified, then an MSSN must be specified.

The number of MPC Subsystem entries must not exceed the table capacity.

A maximum of 1024 unique remote point codes are allowed.

If a remote MPC is specified, then the remote MPC must exist in the Routing table.

If the Flexible GTT Load Sharing feature is not enabled, then the **mapset** parameter must not be specified. If the Flexible GTT Load Sharing feature is enabled, then the **mapset** parameter must be specified.

The specified MAP set must exist in the database.

The specified PC/SSN/MAP set must already be provisioned in the MAP table.

The EAGLE 5 ISS true PC can be provisioned only in the default MAP set.

The specified MPC/MSSN must not exist in the specified MAP set.

If the resulting multiplicity mode (MULT field) is SOL (Solitary) or SHR (Loadsharing), the **srn** parameter and the **mrc** parameter cannot be specified.

Notes

When the ANSI-ITU-China SCCP Conversion feature is turned on, the Concerned Point Code (CSPC) Group's network type can be of a different network than the mated application's network type. For example, the mated application's network type could be ANSI and the CSPC Group could be ITU or mixed with ANSI, ITU, and ITUN concerned point codes.

The EAGLE 5 ISS supports four multiplicity modes for nodes/subsystems. A description of each mode follows.

- When a PC/SSN pair is not replicated, the pair is in *solitary* mode. The subsystem acts as the only application, with no backup. If this subsystem fails, messages routed to it are discarded and SCCP management returns "Subsystem Unavailable" messages to the originator.
- A group of replicated PC/SSN pairs are in *dominant* mode if each PC/SSN pair in the group has a unique relative cost. The specified subsystem with the lowest relative cost acts as the primary subsystem, while the mate subsystem acts as a backup. In the event of congestion, messages route to the mate subsystem. When the congestion subsides, messages are again routed to the primary (dominant) subsystem.
- A group of replicated PC/SSN pairs are in *load sharing* mode if each PC/SSN pair in the group has the same relative cost. All messages are evenly distributed at the SCCP level to all nodes/subsystems in the group. In the event of congestion or failure, the non-affected subsystem assumes the load of its failed or congested mate.
- The *combined load sharing/dominant* mode supports a combination of load sharing and dominant mode and is new for the Weighted SCP Load Balancing feature. A group of PC/SSN pairs are in combined load sharing/dominant mode when at least two of the PC/SSN pairs have the same relative cost and another node subsystem in the group has a different relative cost. A combination of node accessibility and relative cost determines the preferred PC/SSN.

The **sso** parameter changes the initialization of the subsystem status ("prohibited" or "allowed") for PC/SSN MAP entries. The EAGLE 5 ISS previously marked the subsystem status "allowed" (OFF) for each PC/SSN entry. The **sso** option marks the subsystem status "prohibited" for each entry that has **sso=on**. This causes the EAGLE 5 ISS to generate an SST to the remote PC when an MTP-RESUME is received. Upon reception of an SSA, the subsystem status is marked "allowed".

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-).

Output

```

chg-map:pc=1-1-0:ssn=10:mpc=1-1-2:mssn=10:materc=30
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
CHG-MAP: MASP A - COMPLTD
;
chg-map:pc=1-1-0:ssn=10:mpc=1-1-3:mssn=10:materc=40:mapset=362
tekelecstp 06-06-01 11:11:12 EST EAGLE 35.0.0
chg-map:pc=1-1-0:ssn=10:mpc=1-1-3:mssn=10:materc=40:mapset=362
Command entered at terminal #4.
CHG-MAP: MASP A - COMPLTD
;

```

chg-meas**Change Measurements**

Use this command to change both the report and collecting status of the measurement subsystem.

NOTE: After the Measurements Platform collection function has been enabled, the **collect=on/off** parameter controls only the output of reports to the UI. The parameter has no effect on enabling and disabling collection and report generation for the Measurements Platform. Measurements Platform collection can, but should not, be enabled and disabled by allowing and inhibiting the MCPM cards. (See the **alw-card** and **inh-card** command descriptions.) Report generation for the Measurements Platform is controlled by the **rept-ftp-meas** and **chg-measopts** commands.

Keyword: **chg-meas**

Related Commands: **copy-meas**, **rept-ftp-meas**, **rept-meas**, **rtrv-meas-sched**

Command Class: Link Maintenance

Parameters

:collect= (optional)

Activates or deactivates the reporting of scheduled measurements to the UI. This parameter does not affect measurements collection and generation for the Measurements Platform.

Range: **on, off**

Default: No change to value

System

Default: **off - off**

:complink= (optional)

Activates or deactivates scheduled measurement report for links.

Range: **on, off**

Default: Current value

:complnkset= (optional)

Activates or deactivates scheduled measurement report for linksets.

Range: **on, off**

Default: Current value

:gtwylnkset= (optional)

Activates or deactivates the scheduled GTWY measurement report for the linkset.

Range: **on, off**

Default: Current value

:gtwylsfltr= (optional)

Filters the linksets included in the GTWY report.

Range: **both, stp, seas, none**

both—Only gateway linksets are included in the report to the terminal and SEAS.

stp—Only gateway linksets are included in the report to the terminal. All defined linksets are included in the report to SEAS.

seas—All defined linksets are included in the report to the terminal. Only gateway linksets are included in the report to SEAS.

none—All defined linksets are included in the report to the terminal and SEAS.

:gtwystp= (optional)

Activates or deactivates the scheduled GTWY measurement report for the STP.

Range: **on, off**

Default: Current value

:systotstp= (optional)

Activates or deactivates scheduled measurement report for STP system totals.

Range: **on, off**

Default: Current value

:systotstplan= (optional)

Activates or deactivates scheduled measurement report for the STPLAN feature system totals.

Range: **on, off**

Default: Current value

:systottt= (optional)

Activates or deactivates scheduled measurement report for translation type system totals.

Range: **on, off**

Default: Current value

Example

```
chg-meas:collect=on
```

```
chg-
```

```
meas:complink=on:complnkset=on:systottt=off:systotstp=off:collect=on
```

```
chg-meas:gtwylsfltr=both
```

Dependencies

At least one optional parameter must be specified.

If the 15 Minute Measurements collection option is turned on, the **collect=on** parameter cannot be specified in this command.

Notes

Activated scheduled reports print at serial ports configured for traffic-related unsolicited messages (the **traf=yes** parameter of the **chg-trm** command).

When the Measurements Platform is not enabled, the daily maintenance scheduled reports are always allowed and cannot be inhibited.

The *Maintenance Manual* provides detailed information on measurements and measurement reports.

Output

```
chg-
meas:complink=on:complnkset=on:systotstt=off:systotstp=off:collect
=on
```

```
rlghncxa03w 04-01-18 17:02:57 EST EAGLE 31.3.0
CHG-MEAS: MASP A - COMPLTD
```

```
;
```

chg-measopts**Change Measurements Options**

Use this command for the following functions:

- Enable the Measurements Platform collection function
- Turn on or turn off the 15 Minute Measurements collection function
- Enable or disable the automatic generation and FTP transfer of scheduled measurements reports to the FTP server
- Turn on or off the CLLI-based file name option for measurements reports files

NOTE: After the Measurements Platform collection function has been enabled with the **platformenable=on** parameter, it cannot be disabled with this command.

Keyword: chg-measopts

Related Commands: chg-ftp-serv, chg-meas, chg-netopts, dlt-ftp-serv, ent-ftp-serv, rept-ftp-meas, rept-meas, rept-stat-meas, rtrv-ftp-serv, rtrv-measopts, rtrv-netopts

Command Class: Link Maintenance

Parameters

:all= (optional)

Activates or deactivates the automatic generation and FTP transfer of all scheduled measurements reports.

NOTE: The **all** parameter does not change the setting of the **platformenable** parameter.

Range: on, off

Default: No change to the current value

:avldlink= (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled daily availability measurement report for links.

Range: on, off

Default: No change to the current value

:avllink= (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled hourly availability measurement report for links.

Range: on, off

Default: No change to the current value

:avlstplan= (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled hourly availability measurement report for STPLAN.

Range: on, off

Default: No change to the current value

:cllibasedname= (optional)

Enable or disable CLLI-based measurements report file name option.

Range: on, off

Default: No change to the current value

:collect15min= (optional)

Turns on or off the 15 Minute Measurements collection function.

Range: on, off

Default: No change to the current value

:complink= (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled component measurement report for links.

Range: on, off

Default: No change to the current value

:complinkset= (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled component measurement report for linksets.

Range: on, off

Default: No change to the current value

:gtwylnkset= (optional)

Activates or deactivates the automatic generation and FTP transfer of scheduled GTWY measurement report for linksets.

Range: on, off

Default: No change to the current value

:gtwylsdestni= (optional)

Activates or deactivates the automatic generation and FTP transfer of scheduled GTWY link set measurement report for destination NI

Range: on, off

Default: No change to the current value

:gtwylsonismt= (optional)

Activates or deactivates the automatic generation and FTP transfer of scheduled GTWY linkset measurement report for ISUP message type per linkset per originating NI

Range: on, off

Default: No change to the current value

:gtwylsorigni= (optional)

Activates or deactivates the automatic generation and FTP transfer of scheduled GTWY link set measurement report for originating NI

Range: on, off

Default: No change to the current value

:gtwyorigni= (optional)

Activates or deactivates the automatic generation and FTP transfer of scheduled GTWY link measurement report for originating NI.

Range: on, off

Default: No change to the current value

:gtwyorigninc= (optional)

Activates or deactivates the automatic generation and FTP transfer of scheduled GTWY link measurement report for originating NI and NC.

Range: on, off

Default: No change to the current value

:gtwystp= (optional)

Activates or deactivates the automatic generation and FTP transfer of scheduled GTWY measurement report for STP.

Range: on, off

Default: No change to the current value

:mtcdeir= (optional)

Activates or deactivates the automatic generation and FTP transfer of the daily maintenance measurement report for Equipment Identity Register (EIR).

Range: on, off

Default: No change to the current value

:mtcdlink= (optional)

Activates or deactivates the automatic generation and FTP transfer of the daily maintenance measurement report for links.

Range: on, off

Default: No change to the current value

:mtcdlnkset= (optional)

Activates or deactivates the automatic generation and FTP transfer of the daily maintenance measurement report for link sets.

Range: on, off

Default: No change to the current value

:mtcdlnp= (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled daily maintenance measurement report per LNP.

Range: on, off

Default: No change to the current value

:mtcdmap= (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled daily maintenance measurement report per GSM MAP Screening server entry.

Range: on, off

Default: No change to the current value

:mtcdnp= (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled daily maintenance measurement report per NP.

Range: on, off

Default: No change to the current value

:mtcdstp= (optional)

Activates or deactivates the automatic generation and FTP transfer of the daily maintenance measurement report for STP.

Range: on, off

Default: No change to the current value

:mtcdstplan= (optional)

Activates or deactivates the automatic generation and FTP transfer of the daily maintenance measurement report for STPLAN.

Range: on, off

Default: No change to the current value

:mtcheir= (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled hourly maintenance measurement report for Equipment Identity Register (EIR).

Range: on, off

Default: No change to the current value

:mtchlmp= (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled hourly maintenance measurement report per LNP.

Range: on, off

Default: No change to the current value

:mtchmap= (optional)

Activates or deactivates the automatic generation and FTP transfer of scheduled hourly maintenance measurement report per GSM MAP Screening server entry.

Range: on, off

Default: No change to the current value

:mtchnp= (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled hourly maintenance measurement report per NP.

Range: on, off

Default: No change to the current value

:nmllink= (optional)

Activates or deactivates automatic generation and FTP transfer of the scheduled network management measurement report for links.

Range: on, off

Default: No change to the current value

:nmllnkset= (optional)

Activates or deactivates automatic generation and FTP transfer of the scheduled network management measurement report for link sets.

Range: on, off

Default: No change to the current value

:nmstp= (optional)

Activates or deactivates automatic generation and FTP transfer of scheduled network management measurement report for STP.

Range: on, off

Default: No change to the current value

:platformenable= (optional)

Enables the Measurements Platform collection function.

Range: on

Default: No change to the current value

:systotstp= (optional)

Activates or deactivates automatic generation and FTP transfer of scheduled measurement report for STP system totals.

Range: on, off

Default: No change to the current value

:systotstplan= (optional)

Activates or deactivates automatic generation and FTP transfer of the scheduled measurement report for the STPLAN feature system totals.

Range: on, off
Default: No change to the current value

:systottt= (optional)

Activates or deactivates automatic generation and FTP transfer of scheduled measurement report for translation type system totals.

Range: on, off
Default: No change to the current value

Example

```
chg-measopts:platformenable=on
chg-
measopts:platformenable=on:complink=on:complnkset=on:systottt=off
:systotstp=off
```

Dependencies

The Measurements Platform feature must be on before this command can be entered.

An MCPM card must be in the IS-ANR Restrict state before the Measurements Platform collection option can be enabled.

The 15 Minute Measurements feature must be enabled and turned on before the 15 Minute Measurements collection option can be turned on.

The Measurements Platform collection option must be enabled (**platformenable=on**) before the CLLI-based name option can be turned on (**cllibasedname=on**).

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before the **mtchlnp=on** parameter or the **mtcdlnp=on** parameter can be specified.

The GSM Map Screening (GSMSCR) feature must be turned on before the **mtcdmap=on** parameter or the **mtchmap=on** parameter can be specified.

Either the G-Port feature or the INP feature must be turned on before the **mtchnp=on** parameter or the **mtcdnp=on** parameter can be specified.

The Equipment Identity Register (EIR) feature must be turned on before the **mtcheir=on** parameter or the **mtcdeir=on** parameter can be specified.

This command is not allowed while in upgrade mode.

Half-hour collection and report processing cannot be in progress when **collect15min=on** is specified.

Quarter-hour collection and report processing cannot be in progress when **collect15min=off** is specified.

Notes

When **all=on** is specified, the **mtchnp**, **mtchlnp**, **mtchmap**, **mtcheir**, **mtcdnp**, **mtcdlnp**, **mtcdmap**, and **mtcdeir** report will be turned on if the corresponding feature is turned on.

Activated scheduled reports are generated and transferred to the customer's FTP server

The **rept-ftp-meas** command can be used to manually generate and transfer one report at a time as needed.

The primary application of the **set-time** command is for Daylight Savings Time changes, setting the time forward or backward 1 hour. To reduce effects of **set-time** changes on measurements, the time change should be done within the first 15 minutes of any hour.

The *Maintenance Manual* provides detailed information on measurements and measurement reports.

CLLI-Based Measurements Report File Name

When the CLLI-based file name option (**cllibasedname**) is turned on, the CLLI is added to the measurements report file name, and the year is removed from the file name to ensure that the file name is equal to or fewer than 39 characters.

15 Minute Measurements

When the SEAS feature is turned on and 15 Minute Measurements collection is turned from off to on with the **collect15min=on** parameter, the message "Disabling SEAS Measurements..." is displayed at the UI.

When the SEAS feature is turned on and 15 Minute Measurements collection is running (**collect15min=on**), EAGLE 5 ISS measurements output to the SEAS interface is disabled.

When the SEAS feature is turned on and 15 Minute Measurements collection is turned from on to off with the **collect15min=off** parameter, EAGLE 5 ISS measurements output to the SEAS interface is enabled again.

NOTE: If SEAS reporting is turned on, for the 24 hours after the 15 Minute Measurements option is turned from on to off, 30-minute demand SEAS reports for time periods prior to the option status change will contain only 15 minutes of data, and SEAS will not support reporting at the xx15 and xx45 times.

Some quarter-hour measurements data might not be available for 24 hours after turning 15 Minute Measurements collection on. This condition exists for quarter-hour intervals for which 15 Minute Measurements collection has not yet occurred. Data that was collected on a 30-minute basis is available for reporting for up to 24 hours after it is collected. After the 15 Minute Measurements collection option is turned on, this data remains available on a half-hour basis (xx00 and xx30) but is not available on a quarter-hour basis (xx15 and xx45) because no data was collected on the quarter hours. After the 15 Minute Measurements collection option has been turned on for 24 hours, all 15-minute measurements data is available on a quarter-hour basis (xx00, xx15, xx30, and xx45).

In addition, full 30-minute data coverage will not be available until 24 hours after turning off the 15 Minute Measurements collection option. Reports for specific periods will always contain the amount of data collected for that period.

The action of turning 15-minute measurements feature control status on using the **chg-ctrl-feat** command also has an impact on the generation of measurements reports for **period=active**. Specifically, if the feature control status of 15-minute measurements is turned on and a report is requested for the active interval prior to the next scheduled measurements collection (based on the current 15-minute measurements status), the starting time for the period shown in the report will be incorrect. As soon as the next scheduled collection occurs, active reports will show the correct starting time. For example, if 15-minute feature control status is turned on with the **chg-ctrl-feat** command at 13:03, and the 15-minute measurements collection option is turned on using the **chg-measopts** command at 13:05, and a comp-link report for **period=active** is requested at 13:10, that report will contain an incorrect interval start time. If the same report is requested at 13:20, the start time shown in the report will be correct, because a collection occurred at 13:15.

A similar limitation exists for **period=last**. If the feature control status of 15-minute measurements is turned on and a report is requested for the last interval prior to the next scheduled measurements collection (based on the current 15-minute measurements status), the start and end times for the period shown in the report will be incorrect. The data presented in the report will correspond to the start and end times. As soon as the next scheduled collection occurs, then **period=last** reports will show the correct start and end times and the corresponding data for that interval. To generate measurements from the last collected interval before the first collection with feature control status on, a **period=specific** report will need to be entered. In the example given in the previous paragraph, the first report requested at 13:10 would not give the last interval, but the data given would correspond to the interval shown in the report. The second report requested at 13:20 would show correct start and end times and the data would correspond to the interval.

If the 15 Minute Measurements collection option is turned from on to off in the first 15 minutes of a half-hour (xx00-xx15 or xx30-xx45) and a demand report is requested in the second 15 minutes of a half-hour (xx15-xx30 or xx45-xx60) for **period=last** or **period** not specified, the report that is displayed will be the last 15-minute interval (xx00-xx15 or xx30-xx45), not the last collected 15-minute interval (xx45-xx00 or xx15-xx30). Collection did not occur during this 15-minute period, and the message “Measurements data not current” will be displayed. To report the last collected 15-minute interval, **period=specific** must be specified in the command with the correct **qh/hh** value.

The time interval in each measurements report shows which collection option was on when the measurements were collected. (This might not be the option that is currently on if the option was changed in the last 24 hours).

Table 5-24 summarizes the impacts of turning on the 15 Minute Measurements collection option.

Table 5-24. Impacts on Data Collection of Turning On the 15 Minute Measurements Option

Time Window for Turning On the Option	Impact on Data Collection
xx00-xx15	None. 15 minutes of data will be collected for the quarter-hour xx15.
xx-15-xx30	The xx15 interval will contain no data. The xx30 interval will contain 30 minutes of data
xx30-xx45	None. 15 minutes of data will be collected for the quarter-hour xx15.
xx45-xx00	The xx45 interval will contain no data. The xx00 interval will contain 30 minutes of data

Output

```
chg-
measopts:complink=on:complnkset=on:systottt=off:systotstp=off :pla
tformenable=on
```

```
rlghncxa03w 03-10-18 17:02:57 EAGLE EAGLE 31.3.0
CHG-MEASOPTS: MASP A - COMPLTD
```

```
;
```

chg-mrn

Change Mated Relay Node

Use this command to add or change entries in the Mated Relay Note (MRN) table.

If the Intermediate GTT Load Sharing feature is on, point codes are added to groups in the MRN table. If the Intermediate GTT Load Sharing feature and the Flexible GTT Load Sharing feature are on, entries are added to an existing MRN sets in the MRN table.

NOTE: If only the Intermediate GTT Load Sharing feature is enabled and turned on, the MRN table can contain a maximum of 3000 entries. If both the Intermediate GTT Load Sharing feature and the Flexible GTT Load Sharing feature are enabled, the MRN table can contain a maximum of 6000 entries.



CAUTION: If any entries are provisioned in the SCCP-SERV table, the maximum number of entries that the MRN table can contain is reduced by that amount. Check the `rtrv-sccp-serv` command output to see if entries exist in the SCCP-SERV table.

Keyword: `chg-mrn`

Related Commands: `dlt-mrn`, `ent-mrn`, `rtrv-mrn`

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:pc= (mandatory)

ANSI point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Synonym: `pca`

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:pc/pca/pci/pcn/pcn24= (mandatory)

Post-GTT-translated point code.

:pci= (mandatory)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:pcn= (mandatory)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:pcn24= (mandatory)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:mrnset= (optional)

MRN set ID.

Range: **1-3000 none, dflt**

dflt—Default MRN set.

none—The GTA translation does not participate in any load sharing.

:pc1= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: **pca1**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:pc1/pca1/pci1/pcn1/pcn241= (optional)

Alternate post-GTT-translated point code.

:pc2= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: **pca2**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:pc2/pca2/pci2/pcn2/pcn242= (optional)

Alternate post-GTT-translated point code.

:pc3= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: **pca3**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001–005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006–255**.

The point code **000-000-000** is not a valid point code.

:pc3/pca3/pci3/pcn3/pcn243= (optional)

Alternate post-GTT-translated point code.

:pc4= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: **pca4**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001–005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006–255**.

The point code **000-000-000** is not a valid point code.

:pc4/pca4/pci4/pcn4/pcn244= (optional)

Alternate post-GTT-translated point code.

:pci1= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

:pci2= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

:pci3= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

:pci4= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

:pcn1= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: s-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:pcn2= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmt** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:pcn241= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

:pcn242= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

:pcn243= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

:pcn244= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

:pcn3= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:pcn4= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:rc= (optional)

Relative cost. This parameter specifies the relative cost of the route for the post-GTT-translated point code.

Range: **0-99**

:rc1= (optional)

Relative cost. This parameter specifies the relative cost of the route for alternate post-GTT-translated point code 1.

Range: **0-99**

:rc2= (optional)

Relative cost. This parameter specifies the relative cost of the route for alternate post-GTT-translated point code 2.

Range: **0-99**

:rc3= (optional)

Relative cost. This parameter specifies the relative cost of the route for alternate post-GTT-translated point code 3.

Range: **0-99**

:rc4= (optional)

Relative cost. This parameter specifies the relative cost of the route for alternate post-GTT-translated point code 4.

Range: 0-99

Example

In the following example, the system searches the MRN table for a point code of 1-1-0. If the point code is found, its relative cost is set to 40.

chg-mrn:pc=1-1-0:rc=40

In the following example, the system searches the MRN table for point code 1-1-0. Having found it, the system then searches the associated group of point codes for 1-1-10. If it finds 1-1-10 it changes the relative cost of 1-1-10 to 30. If 1-1-10 is not in the group of point codes, the command will add point code 1-1-10 to the group and assign it a relative cost of 30.

chg-mrn:pc=1-1-0:pc1=1-1-10:rc1=30

In the following example, the system searches the MRN table for a point code of 1-1-0. Having found it, the system then searches for each of the two specified associated point codes in the group. If the associated point code is found, its relative cost is changed to the value indicated in the command. If the associated point code is not found, the specified point code and its relative cost are inserted into the group in the MRN table.

chg-mrn:pc=1-1-0:pc1=1-1-1:rc1=10:pc2=1-1-10:rc2=20

The following examples include spare point codes.

chg-mrn:pcn=s-1-1-1-123-aa:rc=1:pcn1=s-1-1-1-235-aa:rc1=2:pcn2=s-1-1-1-235-aa:rc2=3

chg-

mrn:pci=s-2-2-1:rc=20:pci1=s-2-2-2:rc1=21:pci2=s-2-100-1:rc2=22

chg-mrn:pc=1-1-1:rc=30:mrnset=df1t

chg-mrn:pc=1-1-1:rc=20:pc1=2-2-2:rc1=20:mrnset=111

chg-mrn:pc=1-1-1:pc1=3-3-3:rc1=30:mrnset=111

Dependencies

The Intermediate Global Title Translation Load Sharing feature must be turned on before this command can be entered.

A point code must have the same network type as existing point codes.

When a new point code is specified, its relative cost (**rc**) must be specified; a new point code and its relative cost must be entered together in the command.

A new point code that is specified in the command must not already exist in the MRN table.

The **rc** parameter must be specified when only the **pc** parameter is specified and no other point code parameters are specified.

The point codes cannot have the same value as the EAGLE 5 ISS SID.

The same point code value cannot be entered more than once in the MRN table.

The MRN table can contain a maximum of 3000 point codes. Each point code group can contain a maximum of 8 point codes.

Point codes must be the format set by the **npcfmti** parameter of the **chg-stpopts** command. (Use the **rtrv-stpopts** command to display the STP option settings).

Mate remote point codes must already exist as destinations in the Ordered Route entity set or reside in a cluster destination for which ordered routes are specified.

To change the relative cost for a point code, the point code must already exist in the MRN table.

If the command is entered to change the relative cost of more than one point code, then all specified point codes must exist in the same group in the MRN table. (They must exist in the group indicated by the point code specified in the **pc** parameter.)

The Flexible GTT Loadsharing feature must be enabled before the **mrnset** parameter can be specified.

If the Flexible GTT Loadsharing feature is enabled, the specified PC must already exist in the specified MRN set.

The specified MRN set must already exist in the MRN table.

Notes

To add one or more new point codes to a group in the MRN table,

- Specify a point code in the **pc** parameter that already exists in the group and *do not* specify the **rc** parameter for that point code.
- Specify the point code and the relative cost parameters (**pc1** and **rc1**, for example) for each new point code that you want to add to that group.

To change the relative cost of one point code, enter that point code as the **pc** parameter value and specify its new relative cost in the **rc** parameter value.

To change the relative cost of more than one point code in a group,

- Enter one of the point codes as the **pc** parameter value and its new relative cost in the **rc** parameter value.
- Enter the other point codes and their new relative cost values in additional parameters.

All of the point codes that are specified in one command must exist in the same group in the MRN table

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (**s-**).

Output

```
chg-mrn:pc=1-1-1:rc=20:pc1=2-2-2:rc1=20:mrnset=111
tekelecstp 05-05-17 10:19:51 EST EAGLE 34.2.0
CHG-MRN : MASP A - COMPLTD
;
```

chg-netopts

Change Network Options

Use this command to change the Private Virtual Network address and PVN subnet mask values for the IP networks used by the EAGLE 5 ISS.

Keyword: **chg-netopts**

Related Commands: **rtrv-netopts**

Command Class: Database Administration

Parameters

:pvn= (optional)

Private Virtual Network (PVN) address for the EAGLE 5 ISS. The value must be valid for a Class B network IP address.

Range: **128.0.0.0-191.255.0.0**

Default: 4 numbers separated by dots in the range **128.0.0.0** to **191.255.0.0**
172.20.50.0

:pvnmask= (optional)

Subnet mask for the EAGLE 5 ISS PVN. An IP address with a restricted range of values.

Range: The value must be valid for a Class B network IP address as shown in the following table.

Table 5-25. Valid PVN Subnet Mask Values

Valid for Class B Networks	
255.255.0.0	255.255.248.0
255.255.192.0	255.255.252.0
255.255.224.0	255.255.254.0
255.255.240.0	255.255.255.128

Default: 255.255.252.0

Example

chg-netopts : pvn=172 . 20 . 51 . 0 : pvnmask=255 . 255 . 255 . 0

Dependencies

Both optional parameters must be specified in the command.

The **pvn** and **pvnmask** IP addresses cannot have the same value.

The **pvn** and **pvnmask** parameters must be specified together in the command.

The IP network address specified by the **pvn** and **pvnmask** parameters must be different from the IP network addresses assigned to Ethernet interface A or B of the IPGWx and IPLIMx cards

The IP Network address specified by the **pvn** and **pvnmask** parameters must not have a route for it in the IP Route table.

Notes

None

Output

```
chg-netopts : pvn=172 . 20 . 51 . 0 : pvnmask=255 . 255 . 255 . 0
rlghncxa03w 04-01-20 09:07:58 EST EAGLE 31.3.0
CHG-NETOPTS: MASP A - COMPLTD
;
```

chg-oap-config

Change OAP Configuration

Use this command to configure the EAGLE 5 ISS database with the OAP configuration information. This information is sent to the specified OAP with the **act-oap-config** command.

NOTE: This command enables you to configure the OAP from the EAGLE 5 ISS terminal. You should no longer perform this function from a terminal connected to the OAP.

Keyword: chg-oap-config

Related Commands: chg-lnp-serv, chg-sid, dlt-lnp-serv, ent-lnp-serv, rtrv-lnp-serv, rtrv-oap-config, rtrv-sid

Command Class: Database Administration

Parameters

NOTE: You must provision the EAGLE 5 ISS database with valid information for the SEAS or LNP features if you have those features turned on (as shown by SEAS=on in the output of the rtrv-feat command or by an LNP ported TNs quantity less than or equal to 12000000 in the output of the rtrv-ctrl-feat command). The information must be provisioned to clear the checksum mismatch alarm (UAM 0364).

:aipaddr= (optional)

The IP address of OAP A. This is a TCP/IP address expressed in standard dot notation. IP addresses consist of the system's network number and the machine's unique host number. A sample IP address is **192.126.100.5**, where **192.126.100** is the network number and **5** is the machine's host number. If you are unsure of your IP address, check with your Information Services department. You can configure this parameter even if the LNP feature is turned off.

This parameter is mandatory for LNP.

Range: 1-223, 0-255

4 numbers separated by dots

1-223—first number

0-255—the other three numbers

:aname= (optional)

The name assigned to OAP A.

This parameter is mandatory for LNP and SEAS.

Range: xzzzzzzzzzzzz

1 alphabetic character followed by 1 to 13 alphanumeric characters.

The value must be enclosed in double quotation marks (" "); for example,

aname="tekelec-10".

:anmask= (optional)

The netmask for OAP A. If you are not sure that your network requires this configuration, check with your Information Services department.

Depending on your network configuration, this parameter may be mandatory for LNP and SEAS.

Range: 4 numbers separated by dots, with each number in the range of **0-255**.

:arouter= (optional)

The IP address of the default router assigned to OAP A. This is a TCP/IP address expressed in standard "dot notation." IP addresses consist of the system's network number and the machine's unique host number. A sample IP address is **192.126.100.5**, where **192.126.100** is the network number and **5** is the machine's host number. If you are not sure if your network requires this configuration, check with your Information Services department.

Depending on your network configuration, this parameter may be mandatory for LNP and SEAS.

Range: 1-223, 0-255

4 numbers separated by dots

1-223—first number

0-255—the other three numbers

:bipaddr= (optional)

The IP address of OAP B. This is a TCP/IP address expressed in standard dot notation. IP addresses consist of the system's network number and the machine's unique host number. A sample IP address

is **192.126.100.5**, where **192.126.100** is the network number and **5** is the machine's host number. If you are unsure of your IP address, check with your Information Services department. You can configure this parameter even if the LNP feature is turned off.

This parameter is mandatory for LNP.

Range: **1-223, 0-255**
 4 numbers separated by dots
 1-223—first number
 0-255—the other three numbers

:bname= (optional)

The name assigned to OAP B.

This parameter is mandatory for LNP and SEAS.

Range: *xzzzzzzzzzzzz*
 1 alphabetic character followed by 1 to 13 alphanumeric characters.
 The value must be enclosed in double quotation marks (" "), for example,
 bname="tekelec-10" .

:bnmask= (optional)

The netmask for OAP B. If you are not sure that your network requires this configuration, check with your Information Services department.

Depending on your network configuration, this parameter may be mandatory for LNP and SEAS.

Range: **1-223, 0-255**
 4 numbers separated by dots
 1-223—first number
 0-255—the other three numbers

:brouter= (optional)

The IP address of the default router assigned to OAP B. This is a TCP/IP address expressed in standard dot notation. IP addresses consist of the system's network number and the machine's unique host number. A sample IP address is **192.126.100.5**, where **192.126.100** is the network number and **5** is the machine's host number. If you are not sure that your network requires this configuration, check with your Information Services department.

Depending on your network configuration, this parameter may be mandatory for LNP and SEAS.

Range: 4 numbers separated by dots, with each number in the range of **0-255**.

:cfg= (optional)

The number of OAPs being configured.

This parameter is mandatory for LNP and SEAS.

Range: **sngl, dual**
 sngl—OAP A
 dual—OAP A and OAP B

:lsms= (optional)

The LSMS to be associated with the OAP.

This parameter is mandatory for LNP.

Range: **main, shadow**

:mnsap= (optional)

The network service access point of the main LSMS. This is a TCP/IP address expressed in standard dot notation. IP addresses consist of the system's network number and the machine's unique host number. A sample IP address is **192.126.100.5**, where **192.126.100** is the network number and **5** is the machine's host number.

This parameter is mandatory for LNP if **lsms=main**.

Range: **1-223, 0-255**

4 numbers separated by dots
1-223—first number
0-255—the other three numbers

:mpsel= (optional)

The presentation selector of the main LSMS.

This parameter is mandatory for LNP if **lsms=main**.

Range: xyyy

1-4 alphanumeric characters.

The value must be enclosed in double quotation marks (" ").

:msel= (optional)

The session selector of the main LSMS.

This parameter is mandatory for LNP if **lsms=main**.

Range: xyyy

1-4 alphanumeric characters.

The value must be enclosed in double quotation marks (" ").

:seaccli= (optional)

The common language location identifier (CLLI) of the SEAC the OAP is connecting to.

This parameter is mandatory for SEAS.

Range: ayyyyyyyyy

1 alphabetic character followed by 1 to 10 alphanumeric characters.

:snsap= (optional)

The network service access point of the shadow LSMS. This is a TCP/IP address expressed in standard dot notation. IP addresses consist of the system's network number and the machine's unique host number. A sample IP address is **192.126.100.5**, where **192.126.100** is the network number and **5** is the machine's host number.

This parameter is mandatory for LNP if **lsms=shadow**.

Range: **1-223, 0-255**

4 numbers separated by dots

1-223—first number

0-255—the other three numbers

:spsel= (optional)

The presentation selector of the shadow LSMS. The value is enclosed in quotes (" ").

This parameter is mandatory for LNP if **lsms=shadow**.

Range: xyyy

1 to 4 alphanumeric characters.

:sssel= (optional)

The session selector of the shadow LSMS.

This parameter is mandatory for LNP if **lsms=shadow**.

Range: xyyy

1-4 alphanumeric characters.

The value must be enclosed in double quotation marks.

:x25mode= (optional)

The mode of the x.25 link to the SEAC.

This parameter is mandatory for SEAS.

Range: **dte, dce**

:x25ps= (optional)

The x.25 packet size for the link to the SEAC.

This parameter is mandatory for SEAS.

Range: 7, 8

Example

```
chg-oap-config:aname="tekelec-xx":bname="tekelec-xx"
```

```
chg-oap-config:aipaddr=128.132.64.15:bipaddr=128.132.64.16
```

```
chg-oap-
```

```
config:mnsap=198.89.39.22:mssel="emss":mpsel="emsp":lsms=main
```

Dependencies

At least one parameter must be specified each time the **chg-oap-config** command is entered.

The **chg-oap-config** command allows one or several parameters to be specified at a time. If the required information for a feature has already been provisioned in the EAGLE 5 ISS database, all of the parameters for that feature do not need to be specified when you make a change. It is mandatory, however, that the configuration data in the EAGLE 5 ISS and the OAP database match. The EAGLE 5 ISS generates an alarm (UAM 0364) if the EAGLE 5 ISS database is not provisioned with the same information as the OAP.

To keep OAP parameters in sync with the EAGLE 5 ISS, a checksum is created using all of the OAP configuration data stored on the EAGLE 5 ISS. The OAP also calculates this checksum based on the data it has. The OAP returns this checksum every five seconds. The EAGLE 5 ISS compares the checksums, and generates the following alarm within ten seconds of any mismatch:

```
r lghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
```

```
* nnnn.0364 * OAP A Configuration data checksum mismatch
```

The alarm is cleared when a maintenance poll returns a checksum that matches the EAGLE 5 ISS' checksum, indicating that the databases are back in sync. The EAGLE 5 ISS clears the alarm within five seconds. The following UAM clears the alarm:

```
r lghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
```

```
nnnn.0365 OAP A Configuration data checksum alarm cleared
```

All configured parameters are included in the data checksum with the following exceptions:

:mnsap, **:mpsel**, and **:mssel** if **:lsms=shadow**

:snsap, **:spsel**, and **:sssel** if **:lsms=main**

In addition to parameters configured with the **chg-oap-config** command, the EAGLE 5 ISS' Site ID (**:clli**) and LNP service information (**serv=class/lidb/ cnam/ isvm**) are also included in the checksum. See the **chg-sid** and **ent-lnp-serv** or **chg-lnp-serv** commands for more information.

The LNP feature must be turned on before the **mnsap** and **snsap** parameters can be specified.

The SEAS feature must be turned on before the **seacccli** parameter can be specified.

The SEAS feature must be turned on before the **x25ps** parameter can be specified.

The SEAS feature must be turned on before the **x25mode** parameter can be specified.

The LNP feature must be turned on before the **spsel** and **sssel** parameters can be specified.

The LNP feature must be turned on before the **mpsel** and **spsel** parameters can be specified.

The LNP feature must be turned on before the **lsms** parameter can be specified.

Notes

Before starting disaster recovery operations for the LSMS and before a switchover can occur, the shadow LSMS must be stable. The shadow LSMS should have no active alarms or hardware failures and cannot be in recovery mode with any number portability administration center (NPAC).

Output

```
chg-oap-config:aipaddr=128.132.64.15:bipaddr=128.132.64.16
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
CHG_OAP_CONFIG: MASP A - COMPLTD
;
```

chg-pid**Change Password ID**

Use this command to change your password.

Keyword: **chg-pid**

Related Commands: **act-user**, **chg-secu-dflt**, **chg-user**, **dact-user**, **dlt-user**, **ent-user**, **login**, **logout**, **rept-stat-user**, **rtrv-secu-dflt**, **rtrv-secu-user**, **rtrv-user**

Command Class: Basic

Parameters

This command has no parameters.

Example

chg-pid

Dependencies

Passwords cannot be created or modified from a telnet terminal (terminal IDs 17-40) without the OA&M IP Security Enhancements feature turned on.

When this command is executed, you are prompted to enter your current password. This prevents anyone but you from changing your password.

Use the following rules for creating passwords:

- A new password cannot contain more than 12 characters.
- A new password must contain at least the number of characters that is specified on the **minlen** parameter of the **chg-secu-dflt** command.
- A new password must contain at least the number of alphabetic (**alpha** parameter), numeric (**num** parameter), and punctuation (**punc** parameter) characters that is specified on the **chg-secu-dflt** command.
- A new password cannot contain the associated user ID.

Notes

When a new system is shipped, both the user ID and password are set to the system. Change these immediately to ensure system security.

Output

chg-pid

```
rlghncxa03w 04-01-07 09:10:41 EST EAGLE 31.3.0
CHG-PID: MASP A - COMPLTD
;
```


chg-prefix

Change Prefix

Use this command to enter the name of a feature, the value of a prefix used by the feature, and a prefix number that is used to refer to the prefix from another table.

Keyword: chg-prefix

Related Commands: `dlt-prefix`, `rtrv-ctrl-feat`, `rtrv-prefix`

Command Class: Database Administration

Parameters

:feature= (mandatory)

Feature Name. This parameter specifies the name of an enabled controlled feature that is supported by this command. The parameter value must match the feature name as it is displayed in the **rtv-ctrl-feat** command output.

Range: azzzzzzzzzzzzzzzzzzzzzzzzzzzzzzz

1 alphabetic character and up to 24 optional alphanumeric characters and spaces, enclosed in double quotation marks.

The parameter value is not case-sensitive; upper case or lower case or both can be entered.

Part or all of the feature name can be entered. If part of the feature name is specified, the entry must start with the first letter of the name, and must contain enough of the name to uniquely identify the feature. For example, there are two feature names that begin with “GSM MAP.” Enough additional characters to identify which GSM MAP feature is being entered (at least “GSM MAP SR” to identify the “GSM MAP SRI Redirect” feature). This command supports the following controlled features:

- GSM MAP SRI Redirect
- ISUP NP for EPAP
- Prepaid IDP Query Relay

:prefix= (mandatory)

Prefix Value. Prefix table entries for the following features:

- GSM MAP SRI Redirect
- ISUP NP with EPAP
- Prepaid IDP Query Relay

Range: 1-15 digits

1-15 hexadecimal digits; valid digits are **0-9, a-f, A-F**.

0—Prepaid IDP Query Relay feature Prefix Number 3 CDPN NAI Unknown.

1—Prepaid IDP Query Relay feature Prefix Number 3 CDPN NAI Incoming.

0—Prepaid IDP Query Relay feature Prefix Number 4 CDPA CC Check OFF.

1—Prepaid IDP Query Relay feature Prefix Number 4 CDPN NAI CC Check ON.

Default: Current value

:prefixnum= (mandatory)

Prefix Number. The prefix number identifies the prefix value to use for the specified feature name.

Range: 1-7

1-3 for GSM MAP SRI Redirect feature prefix values

1-5 for ISUP NP with EPAP feature prefix values

6 for the ISUP NP with EPAP feature Insertion Country Code

7 for the ISUP NP with EPAP feature Deletion Condition value
 1 for the Prepaid IDP Query Relay International Insert Prefix
 2 for the Prepaid IDP Query Relay National Insert Prefix
 3 for the Prepaid IDP Query Relay Outgoing CDPN NAI
 4 for the Prepaid IDP Query Relay CGPA DEF CC Check

Default: Current value

Example

Define a prefix with prefix number 1 for the ISUP NP with EPAP feature.

chg-prefix:feature="isup np with epap":prefix=1004:prefixnum=1

Define a prefix with prefix number 2 and specify part of the GSM MAP SRI Redirect feature name.

chg-prefix:feature="GSM MAP SRI":prefix=104:prefixnum=2

Dependencies

The specified feature name value (**feature** parameter) must be enclosed in double quotation marks (" ").

The G-Port feature must be turned on before a prefix can be defined for the GSM MAP SRI Redirect feature.

The GSM MAP SRI Redirect feature must be enabled before a GSM MAP SRI Redirect prefix can be defined.

The ISUP NP with EPAP feature must be enabled before an ISUP NP with EPAP prefix can be defined.

The specified prefix value must contain a number of digits that is equal to or greater than the minimum number of digits required by the specified feature.

The specified prefix value must contain a number of digits that is equal to or less than the maximum number of digits required by the specified feature.

The prefix value **none** is not valid for GSM MAP SRI Redirect prefixes.

The specified prefix number (**prefixnum**) must be valid for the specified feature.

The maximum number of prefixes that can be defined is:

- 3 for the GSM MAP SRI Redirect feature
- 5 values, 1 Insertion Country Code, and 1 Deletion Condition for the ISUP NP with EPAP feature
- 4 for the Prepaid IDP Query Relay feature

The specified feature name must be the name of an enabled controlled feature as it is displayed in the **rtrv-ctrl-feat** command output; The specified feature must be one of the following features that are supported by this command:

- GSM MAP SRI Redirect
- ISUP NP for EPAP
- Prepaid IDP Query Relay


The FEATPFX table cannot be full when a new entry is added.

The Prepaid IDP Query Relay feature must be enabled before a prefix can be provisioned for the feature.

Notes

The Prefix table contains different groups of entries based on the features that are turned on. For the GSM MAP SRI Redirect for Serving HLR feature, the entries are referenced by the VendID table, based on a Vendor Number matching a Prefix Number. For the ISUP NP with EPAP feature, the entries are referenced by the SubnetID table, based on a Subnet Number matching a Prefix Number. The Prefix table for the ISUP NP with EPAP feature also reserves Prefix Number 6 for the Insertion Country Code value, and reserves Prefix Number 7 for the Deletion Condition value. Figure 5-8 illustrates the references to the Prefix table.

Figure 5-8. Prefix Table References

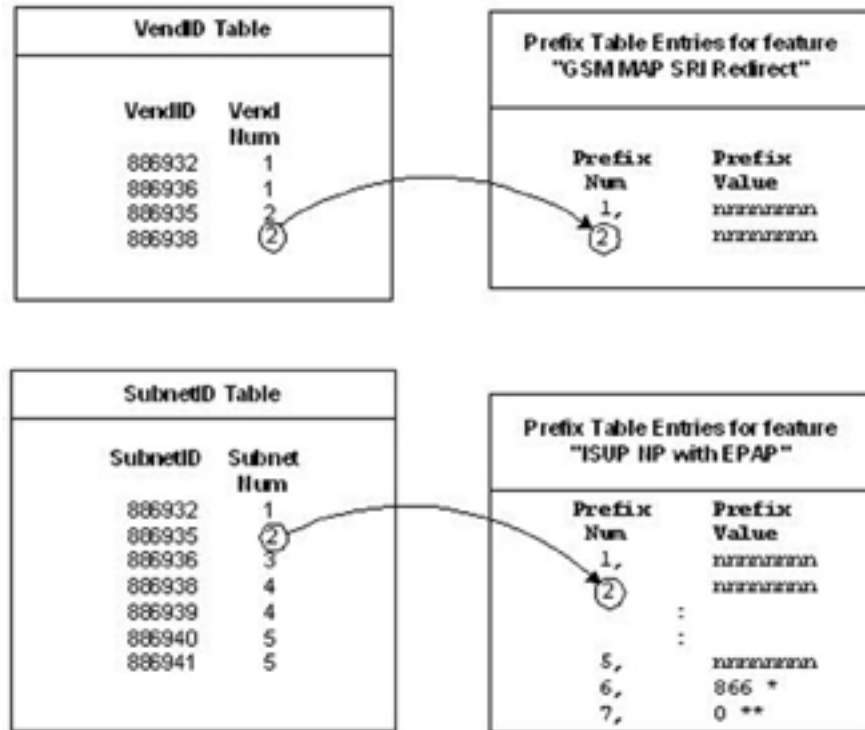

* Reserved for the ISUP NP with EPAP feature Insertion Country Code value

** Reserved for the ISUP NP with EPAP feature Deletion Condition value

For the ISUP NP with EPAP feature:

- When the Insertion Country Code (prefix number 6) is defined, the following information message appears:
ISUP NP with EPAP, Insertion Country Code value is now defined
- When the Deletion Condition (prefix number 7) is defined, the following information message appears:
ISUP NP with EPAP, Deletion Condition value is now defined

Output

chg-prefix:feature="isup np with epap":prefix=1004:prefixnum=1

```
rlghncxa03w 04-09-20 09:04:14 EST EAGLE 31.11.0
CHG-PREFIX: MASP A - COMPLTD
```

;

chg-pstn-pres

Change PSTN Presentation

Use this command to change the description for a previously defined Public Switched Telephone Network (PSTN) presentation value.

Keyword: chg-pstn-pres

Related Commands: `dlt-pstn-pres`, `ent-pstn-pres`, `rtrv-pstn-pres`

Command Class: Database Administration

Parameters

:pstncat= (mandatory)

PSTN category identifying the new Variant being defined.

Range: 0-65535

:pstndesc= (mandatory)

A test description of the PSTN presentation value.

Range: *zzzzzzzzzzzzzzzzzzzzzzzzzzzzzzzzzzzzzzzz*

Any alphanumeric string of 0-31 characters in length, in double quotes

Any alphanumeric string of 0-31 characters in length, in double quotes

:pstnid= (mandatory)

PSTN ID identifying the new Variant being defined.

Range: 0-65535

Example

chg-pstn-pres:pstncat=5000:pstndesc="Mexican ISUP vl.8"

Dependencies

Required controlled features must be enabled.

- ISUP Normalization controlled feature.
- ON/OFF controlled feature for *Tekelec-defined* Variant.
- The Tekelec-defined Variants are listed in section “Tekelec-defined ISUP Normalization Variants”.
- Quantity controlled feature enabled for *user-defined* Variant.

A valid combination of **pstncat** and **pstnid** values must be specified.

- A controlled feature must exist for the **pstncat**/**pstnid** combination.
- The **pstncat** and **pstnid** values must not already be defined.

The maximum number of Variants that the IP⁷ SG supports cannot be exceeded.

An amount greater than the maximum number of *user-defined* Variants associated with the quantity controlled feature cannot be defined.

Notes

The IP⁷ Secure Gateway uses the PSTN presentation value, consisting of a PSTN category and a PSTN ID, to uniquely define an ISUP Variant.

Use the **rtv-psn-pres** command to display the only allowed values for the PSTN category and ID for which the description is being changed.

The **pstndesc=<pstn description>** parameter should be used to describe the Variant that the PSTN is for. The **rtrv-pstn-pres** command displays this field.

Output

The following command changes the description for a previously assigned PSTN.

```
chg-pstn-pres:pstncat=5000:pstnid=1:pstndesc="new description
text"
    rlgncxa03w 04-01-07 09:10:41 EST EAGLE 31.3.0
    CHG-PSTN-PRES: MASP A - COMPLTD
;
```

chg-rte

Change Route

Use this command to change the “cost,” or priority of a route. The cost is based on whether this route is first choice, second choice, and so on. Prioritize routes in such a way that the most direct route (fewest intermediate signaling points) is highest priority.

Keyword: chg-rte

Related Commands: chg-dstn, dlt-dstn, dlt-rte, ent-dstn, ent-rte, rtrv-dstn, rtrv-rte

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:dpc= (mandatory)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: dpca

Range: p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001-005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006-255.

The point code 000-000-000 is not a valid point code.

:dpc/dpca/dpci/dpcn/dpcn24= (mandatory)

Destination point code.

:dpci= (mandatory)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: s-, p-, ps-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps-

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

:dpcn= (mandatory)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:dpcn24= (mandatory)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* subfield indicates a private point code.

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:lsn= (mandatory)

Linkset name. This parameter specifies the name of the linkset associated with the route. The linkset name must be unique.

Range: *ayyyyyyyyy*

1 alphabetic character followed by 9 alphanumeric characters

:nlsn= (optional)

New linkset name. This parameter specifies the new linkset name associated with the route.

Range: *ayyyyyyyyy*

1 alphabetic character followed by 9 alphanumeric characters

Default: The current value

:rc= (optional)

The relative cost (priority) for this route. Zero (**0**) is the highest priority, **99** the lowest.

Range: **0-99**

Default: The current value

Example

chg-rte:lsn=rlgh03:rc=0:dpc=244-003-001

chg-rte:dpc=25-*-*:lsn=myls:rc=10

The following example changes route for dpcn 4085-aa using linkset e1m2itun to relative cost of 30:

chg-rte:dpcn=4085-aa:lsn=e1m2itun:rc=30

The following example changes route for dpcn2410-100-14 using linkset we123624 to a relative cost of 25:

chg-rte:dpcn24=10-100-14:lsn=we123624:rc=25

The following example changes route for private point code dpcp-1-1-1 using linkset we123642 to relative cost of 50:

chg-rte:dpc=p-1-1-1:lsn=we123642:rc=50

The following example changes route for spare point code dpcns-4085-aa using linkset e1m2itun to relative cost of 30:

chg-rte:dpc=s-4085-aa:lsn=e1m2itun:rc=30

The following example changes route for private point code dpcn24p-1-100-1 using linkset we123624 to relative cost of 25:

chg-rte:dpcn24=p-1-100-1:lsn=we123624:rc=25

The following example changes route for private and spare point code dpcips-1-104-1 using linkset e1m2itui to relative cost of 30:

chg-rte:dpci=ps-1-104-1:lsn=e1m2itui:rc=30

Dependencies

No more than two linksets can be assigned the same relative cost (**rc**) value.

If the specified destination address is a full point code address (*ni-nc-ncm*) and is a member of a specified cluster (*ni-nc-**), attributes of the ordered routes assigned to it cannot be changed.

Combined linksets are not allowed for X.25 destinations. Routes of equal cost destined for X.25 domains are not allowed.

If the identity of a route is being changed because of a change in the linkset name, the database must not already contain the new linkset name and destination address.

If the **nl**sn parameter is specified, the link set must already exist in the database and at least one link must be assigned to the link set.

If the new linkset name (**nl**sn parameter) is specified for an existing destination network cluster address (*ni-nc-**), the linkset type used in the route must be consistent with cluster routing; that is, the linkset must be either a B, C, or D linkset.

If the specified destination address is a full point code address (*ni-nc-ncm*) and is a member of a provisioned cluster (*ni-nc-**), whether the attributes of the ordered routes assigned to the cluster can be changed is determined by the destination address's NCAI (Nested Cluster Allowed Indicator). The NCAI is set with the **ncai** parameter of the **ent/chg-dstn** commands.

- If the **ncai=no** parameter is specified, the cluster point code is not a nested cluster point code and the attributes of the ordered routes assigned to the cluster cannot be changed.
- If the **ncai=yes** parameter is specified, the specified destination address is a member of a provisioned nested cluster where the attributes of the ordered routes assigned to the cluster can be changed.

If the specified destination address is a network cluster address (*ni-nc-**), how the attributes of the specified ordered route are changed is determined by the setting of the destination address's NCAI.

- If the **ncai=no** parameter is specified, the attributes of the specified ordered route are changed for each signaling point code having the same network identifier (*ni*) and network cluster (*nc*) codes.
- If the **ncai=yes** parameter is specified, the specified destination address is a nested cluster where changing the attributes of the ordered routes for the cluster does not affect the attributes of the ordered routes of the provisioned members.

The route destination's type must match the route's linkset adjacent point code or the route's linkset secondary adjacent point code type.

Only IPGW routes are allowed for private point codes.

If the **dpcn** parameter is specified, its format must match the format that was assigned with the **chg-stpopts:npcfmti** parameter.

Network routing is valid only if the NRT feature is on. The NRT feature is turned on with the **chg-feat** command.

When using network routing, if the destination point code has a value of * in the *nc* field, the *ncm* field must also be * (for example, **dpc=21-*-***).

At least one of the following optional parameters must be specified: **nda**, **nz nlsn**, and **nrc**.

The current destination address must be a full or a cluster point code.

All linksets that are currently assigned to a route set must still be equipped.

The specified linkset must already be assigned to a route in the Route table.

If a new link set (**nlsn** parameter) is specified in the command, that link set name must exist in the active LINK SET entity.

The specified DPC must be in the database.

Only a single route is allowed to an APC or SAPC for an IPGWx linkset. The changed route must include the APC or SAPC's IPGWx linkset with the destination equal to the APC or SAPC.

Notes

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (**s-**) and the private and spare point code subtype prefix (**ps-**). All of the point code types support the private (internal) point code subtype prefix (**p-**).

Output

```
chg-rtx: lsn=r lgh03: rc=0: dpc=244-003-001
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
CHG-RTX: MASP A - COMPLTD
;
```

chg-rtx

Change Exception Route

Use this command to change an exception route entry in the Routing table.

Keyword: **chg-rtx**

Related Commands: **dlt-rtx**, **ent-rtx**, **rtrv-rtx**

Command Class: Database Administration

Parameters

At least one of the following optional parameters must be specified: **opc**, **ilsn**, **si**, or **cic**.

:dpc= (mandatory)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*). The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:dpci= (mandatory)

Destination Point Code. ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:dpcn= (mandatory)

Destination Point Code. ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfnti** flexible point code option. A group code must be specified when the ITUPUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code or private and spare point code (*prefix-nnnnn, prefix-nnnnn-gc, prefix-m1-m2-m3-m4, prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:dpcn24= (mandatory)

Destination Point Code. 24-bit ITU national point code with subfields *main signaling area-subsignaling area-signaling point (msa-ssa-sp)*. The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:lsn= (mandatory)

Linkset name. This parameter specifies the name of the linkset associated with the specified exception route.

Range: **ayyyyyyyyy**

1 alphabetic character followed by up to 9 alphanumeric characters.

:cic= (optional)

Starting Circuit Identification Code. This parameter is used alone or together with the **ecic** parameter as exception routing criteria for the specified exception route.

Range: **1-16383**

:ecic= (optional)

Ending Circuit Identification Code. This parameter, together with the **cic** parameter, defines the CIC range that is used as exception routing criteria for the specified exception route.

Range: **0-16383**

:force= (optional)

The **force=yes** parameter must be specified when the **ilsn** parameter value is the same as the **nl sn** parameter value.

Range: **yes**

:ilsn= (optional)

Incoming linkset name. This parameter specifies the name of the originating linkset. The parameter value is used as part of the exception routing criteria for the specified exception route.

Range: *ayyyyyyyyy*
1 alphabetic character followed by up to 9 alphanumeric characters.

:nl sn= (optional)

New linkset name. This parameter specifies the linkset name that replaces the linkset name associated with the specified exception route.

Range: *ayyyyyyyyy*
1 alphabetic character followed by up to 9 alphanumeric characters.

:opc= (optional)

ANSI origination point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*). The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Range: **p-, 000-255**
Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).
prefix—p-
When **chg-sid:pctype=ansi** is specified, *ni = 000* is not valid.
When **chg-sid:pctype=ansi** is specified, *nc = 000* is not valid if *ni = 001-005*.
When **chg-sid:pctype=ansi** is specified, *nc = 000* is valid if *ni = 006-255*.
The point code **000-000-000** is not a valid point code.

:opci= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**
Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).
prefix—s-, p-, ps-
zone—0-7
area—000-255
id—0-7
The point code **0-000-0** is not a valid point code.

:opc n= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:np cfmti** flexible point code option. A group code must be specified when the ITUPUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code or private and spare point code (*prefix-nnnnn, prefix-nnnnn-gc, prefix-m1-m2-m3-m4, prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**
 Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).
prefix—**s-, p-, ps-**
nnnnn—**0-16383**
gc—**aa-zz**
m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:opc24= (optional)

24-bit ITU national point code with subfields *main signaling area-subsignaling area-signaling point (msa-ssa-sp)*. The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range: **p-, 000-255**
 Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).
prefix—**p-**
msa—**000-255**
ssa—**000-255**
sp—**000-255**

:rc= (optional)

Relative cost. This parameter specifies the relative cost associated with the specified exception route.

Range: **0-99**

:si= (optional)

Service indicator. This parameter is used as part of the exception routing criteria for the specified exception route.

Range: **3-15**

Example

This example changes the relative cost of an existing exception route.

chg-rtx:dpca=1-1-1:opca=2-3-3:lsn=lset1:rc=30

This example changes the linkset associated with the exception route.

chg-rtx:dpca=1-2-1:si=3:lsn=lset2:nlsn=lset3

This example changes the linkset and relative cost of the exception route.

chg-rtx:dpca=1-3-1:ilsn=lset2:lsn=lset3:nlsn=lset4:rc=20

chg-rtx:dpci=2-100-1:ilsn=lset2:lsn=lset4:rc=10

chg-rtx:dpci=2-100-1:si=5:lsn=lset5:rc=50

Dependencies

Only one of the **opc**, **ilsn**, **cic**, or **si** parameters can be specified for a exception route entry.

If the **ecic** parameter is specified, the **cic** parameter must be specified.

The **ecic** parameter value cannot be less than the **cic** parameter value.

The **opc** parameter value cannot be the same as the **dpc** parameter value.

The Origin-Based MTP Routing feature must be turned on before this command can be entered.

The specified combination of exception route parameter conditions must already exist.

The linkset name, as defined by the **ilsn**, **lsn**, or **nlsn** parameter, must exist.

For the **opc**, **ilsn**, CIC range (**cic** and **ecic** parameter values are not identical), and **si** criteria, only one pair of identical exception route conditions, differing only in **lsn** assignment, can exist for a given

DPC. For exception route conditions with a single CIC, there can be only one exception route per CIC value per DPC per route cost.

The network domain of the APC in the linkset specified by the **lsn** parameter must be the same network domain of the specified DPC or its alias.

The linkset APC/SAPC type and group code in the linkset specified by the **lsn** parameter must match the **dpc** parameter.

The **nlsn** parameter value cannot be the same as the **lsn** parameter value.

Either the **nlsn** parameter, the **rc** parameter, or both parameters must be specified.

The **force=yes** parameter must be specified when the **ilsn** parameter value is the same as the **nlsn** parameter value.

Output

```
chg-rtx:dpc=1-1-1:opc=2-3-3:lsn=lset1:rc=30
stdcfg2b 06-05-19 18:20:11 EST EAGLE 35.0.0
CHG-RTX: MASP A - COMPLTD
```

chg-sccp-serv

Change SCCP Service

Use this command to:

- Change the state of G-Flex and G-Port services to online or offline. Taking a service offline shifts the processing load to designated nodes.
- Add PCs to an existing service group for service re-route assignment, or change the relative cost (RC) of existing point codes in a group.

Keyword: **chg-sccp-serv**

Related Commands: **dlt-sccp-serv**, **rtrv-sccp-serv**

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:serv= (mandatory)

Service. This parameter specifies the name of the service.

Range: **gflex**, **gport**

:gtt= (optional)

GTT option indicator. This parameter specifies whether to use GTT as part of the re-routing procedure when the service is offline, and alternate PCs are not defined or not available.

Range: **no**, **yes**

no — Do not use GTT as part of the re-routing procedure.

yes — Use GTT as part of the re-routing procedure.

Default: **yes**

:pc1= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: **pca1**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001–005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006–255**.

The point code **000-000-000** is not a valid point code.

:pc1/pca1/pci1/pcn1/pcn241= (optional)

Alternate post-GTT-translated point code.

:pc2= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Synonym: **pca2**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001–005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006–255**.

The point code **000-000-000** is not a valid point code.

:pc2/pca2/pci2/pcn2/pcn242= (optional)

Alternate post-GTT-translated point code.

:pc3= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Synonym: **pca3**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001–005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006–255**.

The point code **000-000-000** is not a valid point code.

:pc3/pca3/pci3/pcn3/pcn243= (optional)

Alternate post-GTT-translated point code.

:pc4= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Synonym: **pca4**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001–005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006–255**.

The point code **000-000-000** is not a valid point code.

:pc4/pca4/pci4/pcn4/pcn244= (optional)

Alternate post-GTT-translated point code.

:pci1= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:pci2= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:pci3= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:pci4= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-
zone—0-7
area—000-255
id—0-7

The point code **0-000-0** is not a valid point code.

:pcn1= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: s-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-
nnnnn—0-16383
gc—aa-zz
m1-m2-m3-m4—0-14 for each member; values must sum to 14

:pcn2= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: s-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-
nnnnn—0-16383
gc—aa-zz
m1-m2-m3-m4—0-14 for each member; values must sum to 14

:pcn241= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255
ssa—000-255
sp—000-255

:pcn242= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

:pcn243= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

:pcn244= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

:pcn3= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmt** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: s-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:pcn4= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmt** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: s-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:rc1= (optional)

Relative cost 1. This parameter specifies the relative cost of the route for alternate post-GTT-translated point code 1.

Range: **0-99**

:rc2= (optional)

Relative cost 2. This parameter specifies the relative cost of the route for alternate post-GTT-translated point code 2.

Range: **0-99**

:rc3= (optional)

Relative cost 3. This parameter specifies the relative cost of the route for alternate post-GTT-translated point code 3.

Range: **0-99**

:rc4= (optional)

Relative cost 4. This parameter specifies the relative cost of the route for alternate post-GTT-translated point code 4.

Range: **0-99**

:state= (optional)

This parameter specifies the state of the service.

Re-routing is performed when the service state is **offline**.

Range: **offline, online**

Default: **offline**

Example

```
chg-sccp-serv:serv=gport:state=online
```

```
chg-sccp-
```

```
serv:serv=gport:pca1=1-1-1:rc1=10:pca2=2-2-2:rc2=20:pca3=3-3-3:rc3=30:pca4=4-4-4:rc4=40
```

```
chg-sccp-serv:serv=gport:pci1=2-2-2:rc1=10:pci2=3-3-3:rc2=10
```

```
chg-sccp-serv:serv=gport:state=online:gtt=yes
```

Dependencies

The specified point code network type must match an existing point code network type.

The point code and relative cost parameter values must be specified together as a pair in the command.

The point code cannot match the existing site identification true point code.

The mate remote point code must already exist as destination in the Ordered Route entity set or reside in a cluster destination for which ordered routes are specified.

The SCCP Service table cannot be full when the command is entered. For each supported service (G-Port and G-Flex), up to 7 point codes can be specified for each network type (ANSI, ITU-I, S-ITU-I, ITU-N, S-ITU-N, and ITU-N24).

A maximum of 7 point codes can be allocated to a group or SCCP Service set.

The feature specified by the **serv** parameter must be turned on or enabled. The associated G-Flex or G-Port service must also be turned on.

Notes

The SCCP Service table is part of the MRN table.

To add one or more new point codes to a group in the MRN table,

- Specify a point code (**pc/pca/pci/pcn/pcn24** parameter) that already exists in the group and *do not* specify the **rc** parameter for that point code.
- Specify the point code and the relative cost parameters (**pc1** and **rc1**, for example) for each new point code that you want to add to that group.

To change the relative cost of one point code, specify that point code as the **pc/pca/pci/pcn/pcn24** parameter value and specify its new relative cost in the **rc** parameter value.

To change the relative cost of more than one point code in a group,

- Specify one of the point codes as the **pc/pca/pci/pcn/pcn24** parameter value and its new relative cost in the **rc** parameter value.
- Specify the other point codes and their new relative cost values in additional parameters.

All of the point codes that are specified in one command must exist in the same group in the MRN table

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (**s-**).

This command supports the assignment of point codes to SCCP Service point code groups used for service re-route assignment. It is used to add point codes to an existing service group or to change the relative cost (RC) of existing point codes in a group.

SCCP Service groups are organized by service (G-Flex or G-Port) and PC network type (ANSI, ITU-I, Spare ITU-I, ITU-N, Spare ITU-N, or ITUN-24). Up to 7 point codes can be in a network type grouping for service re-route load sharing. Up to 4 point codes can be added or modified in one command.

The **-sccp-serv** commands differ from the **-mrn** commands in that the service name (**serv** parameter) is required instead of an existing PC in the set serving as the key.

Output

The following example changes the SCCP service for G-Port to provision the point code and relative cost values:

```
chg-sccp-serv:serv=gport:pc1=1-1-1:rc1=10:pc2=1-1-2:rc2=20
tekelecstp 05-12-20 08:35:15 EST 35.0.0
CHG-SCCP-SRV : MASP A - COMPLTD
;
```

chg-sccpopts

Change SCCP Options

Use this command to change the values of one or more of the SCCP option indicators maintained in the STP options table.

Keyword: **chg-sccpopts**

Related Commands: **rtrv-sccpopts**

Command Class: Database Administration

Parameters

:class1seq= (optional)

This parameter enables or disables Class 1 message sequencing.

Range: **on, off**

on—Enabled; Class 1 messages are guaranteed to be sequenced, but the messages are not load shared.

off—Disabled; Class 1 message sequencing is not guaranteed, but the messages might be load shared (if appropriate configuration exists).

Default: Current value

System

Default: **off**

:dfltcgpcasn= (optional)

Default calling party ANSI point code set name. This parameter specifies the system default of the GTT calling party point code set for ANSI when the **gti=0** parameter is in the incoming MSU.

Range: ayyyyyyy, **none**

none—Removes the provisioned CgPA PC set.

:dfltcgpcisn= (optional)

Default calling party ITU point code set name. This parameter specifies the system default of the GTT calling party point code set for ITU when the **gti=0** parameter is in the incoming MSU.

Range: ayyyyyyy, **none**

1 leading alphabetic character and up to 8 following alphanumeric characters.

none—Removes the provisioned CgPA PC set.

:dfltgttmode= (optional)

Default GTT mode. This parameter specifies the system default of the GTT mode hierarchy for EAGLE 5 ISS to follow when performing global title translation.

Range: **acdcd, acdcgcd, acdcdcg, cd, cdcg, cg, cged, cgacdcd**

acdcd—Advanced CdPA GTT, CdPA GTT

acdcgcd—Advanced CdPA GTT, CgPA GTT, CdPA GTT

acdcdcg—Advanced CdPA GTT, CdPA GTT, CgPA GTT

cd—CdPA GTT only

cdcg—CdPA GTT, CgPA GTT

cg—CgPA GTT only

cged—CgPA GTT, CdPA GTT

cgacdcd—CgPA GTT, Advanced CdPA GTT, CdPA GTT

:gmstcapce= (optional)

This parameter enables and disables the processing of GSM Map Screening for TCAP_Continue and TCAP_End messages.

Range: **on, off**

on—Enables GSM Map Screening for TCAP_Continue and TCAP_End messages

off—Disables GSM Map Screening for TCAP_Continue and TCAP_End messages

:mobrscpopc= (optional)

This parameter specifies the OPC that is derived from the SCCP message that is used as an exception class.

Range: **sccp, mtp, tpc**

sccp—The **opc** exception class uses the point code within the CGPA, if the CGPA portion of the message is "route-on-dpcsn". If the option is "route-on-gt", the SCCP option is not used and defaults to the MTP option.

mtp—The **opc** exception class uses the original **mtp opc** value as its criteria.

tpc—The **opc** exception class uses the EAGLE 5 ISS true point code for the criteria.

Example

```
chg-sccpopts: class1seq=on
```

chg-sccpopts:mobrscpopc=sccp

chg-sccpopts:gmstcapce=on

Dependencies

At least one optional parameter must be specified.

The Origin-based MTP Routing feature must be turned on before the **mobrscpopc** parameter can be specified.

The Origin-based SCCP Routing feature must be enabled before the **dfltggtmode** parameter can have a value of **acdcd**, **cgacdcd**, **acdcdcg**, **acdcdcg**, **cgcd**, **cdcg**, or **cg**. The Origin-based SCCP Routing feature must be enabled before the **dfltcgpcasn** or **dfltcgpcisn** parameters can be specified.

The GTT set specified for the **dfltcgpcasn** and **dfltcgpcisn** parameters must exist in the GTTSET table.

The GTT set specified for the **dfltcgpcasn** and **dfltcgpcisn** parameters must have a set type of **cgpc** in the GTTSET table.

The GTT set domain for the **dfltcgpcasn** parameter must be an ANSI network domain, and the GTT set domain for the **dfltcgpcisn** parameter must be an ITU (including ITU-I, ITU-N, ITU-N24) network domain.

The GSM Map Screening feature must be turned on before the **gmstcapce** parameter can be specified.

Notes

None.

Output

```
chg-sccpopts:dfltggtmode=acdcdcg
rlghncxa03w 06-01-18 08:16:14 EST EAGLE 35.0.0
chg-sccpopts:dfltggtmode=acdcdcg
CHG-SCCPOPTS: MASP A - COMPLTD
;
```

chg-scr-aftp

Change Allowed Affected Point Code

Use this command to change the attributes of a specific screening reference in the allowed affected point code category. Attributes that can be changed are the point code and the subsystem number.

Keyword: **chg-scr-aftp**

Related Commands: **dlt-scr-aftp**, **ent-scr-aftp**, **rtrv-scr-aftp**

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:sr= (mandatory)

Screening reference. This parameter specifies the point code's unique screening reference name.

Range: *yyy*

1 alphabetic character followed by up to 3 alphanumeric characters

:ssn= (mandatory)

Subsystem number. An asterisk (*) indicates the full range of values from 1-255.

Range: 1-255 *

:actname= (optional)

Action name. This parameter specifies the name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see the **chg-gws-actset** and **rtrv-gws-actset** commands).

Range: *ayyyyy*, **none**

1 alphabetic character followed by up to 5 alphanumeric characters.

none—Remove an existing gateway screening stop action set from a gateway screening rule.

:area= (optional)

ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:id= (optional)

ITU international ID. This parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7, ***

:msa= (optional)

24-bit ITU-national main signaling area (*msa*) value. This parameter specifies the *msa* of the point code represented by *msa-ssa-spt*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:narea= (optional)

New ITU-international area value. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

Default: Current value

:nc= (optional)

Network cluster (*nc*) value. This parameter specifies one or more *nc* values for the network indicator (*ni*) and network cluster member (*ncm*) values specified in the **ni** and **ncm** parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:ncm= (optional)

Network cluster member (*ncm*) value. This parameter specifies one or more *ncm* values for the network indicator (*ni*) and network cluster (*nc*) values identified in the **ni** and **nc** parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 ***

:ni= (optional)

Network indicator (*ni*) value. This parameter specifies one or more *ni* values for the network cluster (*nc*) and network cluster member (*ncm*) values identified in the **nc** and **ncm** parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 ***

:nid= (optional)

New ITU-international ID value. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7, ***

Default: Current value

:nmsa= (optional)

New 24-bit ITU-national main signaling area (*nmsa*) value. It specifies the new *msa* of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:nnc= (optional)

New network cluster (*nnc*). This parameter specifies one or more *nnc* values for the screening reference specified in the **sr** parameter. It specifies the new network cluster (*nc*) of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

Default: Current value

:nncm= (optional)

New network cluster member (*nncm*). This parameter specifies one or more *ncm* values for the screening reference specified in the **sr** parameter. It specifies the new network cluster member (*ncm*) of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0-255**.

Range: **0-255 ***

Default: Current value

:nni= (optional)

New network identifier (*nni*). This parameter specifies one or more *nni* values for the screening reference specified in the **sr** parameter. It specifies the new network indicator (*ni*) of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000-255**.

Range: **0-255 ***

Default: Current value

:nnpc= (optional)

New ITU-national point code. An asterisk (*) indicates the full range of values from **00000-16383**.

NOTE: Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you use multiple-part ITU national point codes, see , "Converting ITU National Point Code Formats" for information on converting the point code format.

Range: **00000-16383 ***

Default: Current value

:npc= (optional)

ITU national point code. An asterisk (*) indicates the full range of values from **00000-16383**.

Range: **00000-16383 ***

:npcst= (optional)

New point code subtype. This parameter indicates whether the specified new ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range: **none, s**

Default: **none**

:nsfi= (optional)

This parameter specifies the next screening category that is used in the gateway screening process. If specified, the parameter value must be **stop**. This halts the gateway screening process, and the message then proceeds through normal routing.

Range: **stop**

Default: Current value

:nsp= (optional)

New 24-bit ITU national signaling point (*nsp*). This parameter specifies the new *sp* of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:nsr= (optional)

Next screening reference (*nsr*). This parameter specifies which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. If the **nsfi=stop** parameter is specified, the **nsr** parameter cannot be specified.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

Default: Current value

:nssa= (optional)

New 24-bit ITU national sub signaling area (*nssa*). This parameter specifies the new sub signaling area (*ssa*) of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:nssn= (optional)

New subsystem number. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

Default: Current value

:nzone= (optional)

New ITU-international zone. This parameter specifies a new zone for the point code represented by *zone-area-id*. An asterisk (*) indicates the full range of values from **0-7**.

Range: **0-7, ***

Default: Current value

:pcst= (optional)

Point code subtype. This parameter specifies whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (**s**).

Range: **none, s**

Default: **none**

:sp= (optional)

24-bit ITU national signaling point (*sp*). This parameter specifies the signaling point (*sp*) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:ssa= (optional)

24-bit ITU national sub signaling area (*ssa*). This parameter specifies the sub signaling area (*ssa*) in the point code represented by the format *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:zone= (optional)

ITU international zone. This parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0-7**.

Range: **0-7, ***

Example

```

chg-scr-
aftpc:sr=iec:ni=240:nc=010:ncm=010:ssn=254:nni=240:nnc=003:nncm=0
30 :nssn=253

chg-scr-
aftpc:sr=iec:ni=240:nc=008:ncm=203:nssn=253:nsfi=stop:actname=cop
y

chg-scr-
aftpc:sr=aft1:zone=1:area=2:id=3:nsfi=stop:ssn=1:pcst=s:npcst=non
e

```

Dependencies

CAUTION: Even though gateway screening is in the screen test mode, as defined by the parameters **gwsa=off** and **gwsn=on**, the gateway screening action in the stop action set specified by the **actname** parameter of the screen set *will* be performed at the end of the screening process.

A complete point code must be specified, and must be one, and only one of the four point code parameter combinations: **ni-nc-ncm**; **zone-area-id**; **msa-ssa-sp**; or **npc**.

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

At least one optional parameter must be specified.

The new affected point code and subsystem number to be changed cannot already exist in the affected point code entity set.

The **actname** parameter value must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the *ACT NAME* field of the **rtrv-gws-actset** command output.

If the **zone=*** parameter is specified, the **area=*** and **id=*** parameters must be specified.

If the **area=*** parameter is specified, the **id=*** parameter must be specified.

If the **msa=*** parameter is specified, the **ssa=*** and **sp=*** parameters must be specified.

If the **ssa=*** parameter is specified, the **sp=*** parameter must be specified.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc=*** parameter is specified, the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **ncm** parameter is specified as a single value, or a range other than the full range of **000-255**, the **ni** and the **nc** parameters must be specified with a single value.

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range **000-255**.

If the **nsfi** parameter is specified, the parameter value must be **stop**.

If the **nsfi=stop** parameter is specified, the **nsr** parameter cannot be specified.

The character **c** is not a valid value for the **ni**, **nc**, **ncm**, **zone**, **area**, **id**, **msa**, **ssa**, **sp**, and **npc** parameters.

The Gateway Screening Rules table can contain a maximum of 372,600 rules.

The specified screening reference (**sr**) must already exist in the database.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified. The spare point code subtype prefix (s-) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** and **npcst** parameters cannot be specified for ANSI and ITU-N24 point codes.

Notes

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, **:ni=025&&100** specifies all network indicators for ANSI point codes from 25 to 100.

An asterisk cannot be specified for a parameter value in this command unless an asterisk was specified for the parameter value in the original **ent-scr-aftpc** command.

If the screen set reaches 100% capacity (indicated by the “100% full” message), the system will allow subsequent entries. An error will occur, however, when downloading the screen set to the card. Screen sets should not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

A screening reference is assigned to screen sets using the **ent-scrset** command. A screening reference can belong to multiple screen sets.

The spare point code subtype prefix s- is supported only for ITU international and ITU national point codes. The **pcst** parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

```
chg-scr-
aftpc: sr=iec: ni=240: nc=010: ncm=010: ssn=254: nni=240: nnc=003: nncm=0
30 : nssn=253

rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
CHG-SCR-AFTPC: SCREEN SET AFFECTED - IEC 25% FULL
CHG-SCR-AFTPC: MASP A - COMPLTD
;
```

Legend

CHG-SCR-AFTPC—The command entered that caused this output. This is echoed to the printer as a reference.

SCREEN SET AFFECTED—Identifies the screen set that was affected by the command. The screen set name is shown.

% FULL—Indicates the relative size of the screen set.

chg-scr-blkdpc

Change Blocked DPC

Use this command to change the attributes of a specific screening reference in the blocked DPC category. Attributes that can be changed are the blocked destination point code, next screening function identifier, and the next screening reference.

Keyword: **chg-scr-blkdpc**

Related Commands: **dlt-scr-blkdpc**, **ent-scr-blkdpc**, **rtrv-scr-blkdpc**

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:sr= (mandatory)

Screening reference. This parameter specifies the point code's unique screening reference name.

Range: *ayyy*
1 alphabetic character followed by up to 3 alphanumeric characters

:actname= (optional)

Action name. This parameter specifies the name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: *ayyyyy*, **none**
1 alphabetic character followed by up to 5 alphanumeric characters.
none—Remove an existing gateway screening stop action set from a gateway screening rule.

:area= (optional)

ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255** *, C

:id= (optional)

ITU international ID. This parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7** *, C

:msa= (optional)

24-bit ITU-national main signaling area (*msa*) value. This parameter specifies the main signaling area (*msa*) of the point code represented by *msa-ssa-spt*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255** *, C

:narea= (optional)

New ITU-international area value. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255** *, C

Default: Current value

:nc= (optional)

Network cluster (*nc*) value. This parameter specifies one or more *nc* values for the network indicator (*ni*) and network cluster member (*ncm*) values specified in the **ni** and **ncm** parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255** *, C

:ncm= (optional)

Network cluster member (*ncm*) value. This parameter specifies one or more *ncm* values for the network indicator (*ni*) and network cluster (*nc*) values identified in the **ni** and **nc** parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255** *, C

:ni= (optional)

Network indicator (*ni*) value. This parameter specifies one or more *ni* values for the network cluster (*nc*) and network cluster member (*ncm*) values identified in the **nc** and **ncm** parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: 0-255 *, C

:nid= (optional)

New ITU-international ID value. An asterisk (*) indicates the full range of values from **0–7**.

Range: 0-7 *, C

Default: Current value

:nmsa= (optional)

New 24-bit ITU-national main signaling area (*nmsa*) value. This parameter specifies the new main signaling area (*msa*) of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from 000-255.

Range: 000-255 *, C

:nnc= (optional)

New network cluster (*nnc*). This parameter specifies one or more *nnc* values for the screening reference specified in the **sr** parameter. It specifies the new network cluster (*nc*) of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: 000-255 *, C

Default: Current value

:nncm= (optional)

New network cluster member (*nncm*). This parameter specifies one or more *ncm* values for the screening reference specified in the **sr** parameter. It specifies the new network cluster member (*ncm*) of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0–255**.

Range: 0-255 *, C

Default: Current value

:nni= (optional)

New network identifier (*nni*). This parameter specifies one or more *nni* values for the screening reference specified in the **sr** parameter. It specifies the new network indicator (*ni*) of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: 0-255 *, C

Default: Current value

:nnpc= (optional)

New ITU-national point code. An asterisk (*) indicates the full range of values from **00000–16383**.

NOTE: Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you use multiple-part ITU national point codes, see , "Point Code Formats and Conversion" for information on converting the point code format.

Range: 00000-16383 *, C

Default: Current value

:npc= (optional)

The ITU national point code. An asterisk (*) indicates the full range of values from **00000–16383**.

Range: 00000-16383 *, C

:npcst= (optional)

New point code subtype. This parameter indicates whether the specified new ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range: none, s

Default: none

:nsfi= (optional)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range: cgpa, destfld, fail, isup, stop

cgpa—Allowed CGPA is the next screening category.

destfld—Allowed destination field (DESTFLD) is the next screening category.

fail—Discard the received message.

isup—ISUP message type (ISUP) is the next screening category.

stop—The gateway screening process ends and the message proceeds through normal routing.

Default: Current value

:nsp= (optional)

The new 24-bit ITU national signaling point (*nsp*). It specifies the new signaling point (*sp*) of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from 000-255.

Range: 000-255 *, C

:nsr= (optional)

Next screening reference (*nsr*). This parameter specifies which screening reference in the specified screening category (*nsfi*) is to be used in the screening process. If the **nsfi=stop** parameter is specified, the **nsr** parameter cannot be specified.

Range: ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Default: Current value

:nssa= (optional)

New 24-bit ITU national sub signaling area (*nssa*). This parameter specifies the new sub signaling area (*ssa*) of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from 000-255.

Range: 000-255 *, C

:nzone= (optional)

New ITU-international zone. This parameter specifies a new zone for the point code represented by *zone-area-id*. An asterisk (*) indicates the full range of values from 0-7.

Range: 0-7, *, C

Default: Current value

:pcst= (optional)

Point code subtype. This parameter specifies whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range: none, s

Default: none

:sp= (optional)

24-bit ITU national signaling point (*sp*). This parameter specifies the signaling point (*sp*) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from 000-255.

Range: 000-255 *, C

:ssa= (optional)

24-bit ITU national sub signaling area (*ssa*). This parameter specifies the sub signaling area (*ssa*) in the point code represented by the format *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 *, C**

:zone= (optional)

ITU international zone. This parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0-7**.

Range: **0-7 *, C**

Example

```
chg-scr-
blkdpc:sr=iec:ni=240:nc=010:ncm=010:nni=240:nnc=003:nncm=030
chg-scr-blkdpc:sr=iec:ni=c:nc=c:ncm=c:nsfi=cgpa:nsr=wrld2
chg-scr-blkdpc:sr=iec:ni=240:nc=010:ncm=010:nsfi=stop:actname=cr
chg-scr-blkdpc:sr=bdp1:npc=128:nsfi=fail:pcst=s:npcst=none
```

Dependencies



CAUTION: Even though gateway screening is in the screen test mode, as defined by the parameters **gwsa=off** and **gwsn=on**, the gateway screening action in the stop action set specified by the **actname** parameter of the screen set *will* be performed at the end of the screening process.

The Gateway Screening Rules table can contain a maximum of 362,700 rules.

A complete point code must be specified, and must be one and only one of the four point code parameter combinations: **ni-nc-ncm**; **zone-area-id**; **msa-ssa-sp**; or **npc**, except in the special case of entering **c** for "continue."

A new point code entry must be specified by one, and only one of the four point code parameter combinations: **nni-nnc-nncm**, **nzone-narea-nid**, **nmsa-nssa-nsp**, or **nnpc**. If the new point code entry is a different point code type than the existing point code entry, all subfields of the new point code type must be specified.

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

At least one optional parameter must be specified.

The blocked DPC specified by **ni-nc-ncm**; **zone-area-id**; **msa-ssa-sp**; or the **npc** parameter must already exist in the screening reference or within an existing range of DPCs.

The new blocked DPC or DPC range defined by **ni-nc-ncm**; **zone-area-id**; **msa-ssa-sp**, or the **npc** parameter must not already exist in the screening reference or within an existing range of DPCs.

If an asterisk (*) is specified for the new blocked DPC, nothing that matches the specified range of DPCs can already exist in the DPC screening table for the screening reference.

If the **actname** parameter is specified, the **nsfi-stop** parameter must be specified.

If the **actname** parameter is specified, the **nsr** parameter cannot be specified.

The value of the **actname** parameter must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the **ACT NAME** field of the **rtrv-gws-actset** command output.

If **area=*** is specified, **id=*** must be specified.

If **msa=*** is specified, **ssa=*** and **sp=*** must be specified.

If **msa=c** is specified, either the character **c** must also be specified for the **ssa** and **sp** parameters or the **ssa** and **sp** parameters must not be specified. If the **ssa** and **sp** parameters are not specified when **msa=c** is specified, the **ssa** and **sp** values default to the character **c** in the database.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc** parameter is specified as an asterisk (**nc=***), the **ncm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **ncm** parameter is specified as a single value, or a range other than the full range of **000–255**, the **ni** and the **nc** parameters must be specified with a single value.

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range **000–255**.

If **ni=c** is specified, either the character **c** must also be specified for the **nc** and **ncm** parameters or the **nc** and **ncm** parameters must not be specified. If the **nc** and **ncm** parameters are not specified when **ni=c** is specified, the **nc** and **ncm** values default to the character **c** in the database.

If the specified **ni-nc-ncm** or **zone-area-id** or **msa-ssa-sp** is not equal to **c-c-c** or **npc** is not equal to **c**, **nsfi=fail** must be specified and the **nsr** parameter cannot be specified.

If the **nnc** parameter is specified as a range, the **nncm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **nnc** parameter is specified as a single value or a range, a single value must be specified for the **nni** parameter.

If the **nnc** parameter is specified as an asterisk (**nnc=***), the **nncm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **nncm** parameter is specified as a single value, or a range other than the full range of **000–255**, the **nni** and the **nnc** parameters must be specified with a single value.

If the **nni** parameter is specified as an asterisk (**nni=***) or as a range, the **nnc** and **nncm** parameters must be specified as an asterisk or as the full range **000–255**.

If the **nsfi** parameter has a value other than **stop** or **fail**, the **nsr** parameter must be specified and must exist.

When changing a screening entry that has **nsfi** equal to **fail**, the **nni**, **nnc**, **nncm**, **narea**, **nzone**, **nid**, **nmsa**, **nssa**, **nsp**, and **npc** parameter values cannot equal **c**.

The specified screening reference (**sr**) must already exist in the database.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The **pcst** and **npcst** parameters cannot be specified with **c** for a blocked screen reference (**sr**).

The spare point code subtype prefix (**s-**) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** and **npcst** parameters cannot be specified for ANSI and ITU-N24 point codes.

If **ssa=*** is specified, **sp=*** must be specified.

If **zone=*** is specified, **area=*** and **id=*** must be specified.

If **zone=c** is specified, either the character **c** must also be specified for the **area** and **id** parameters or the **area** and **id** parameters must not be specified. If the **area** and **id** parameters are not specified when **zone=c** is specified, the **area** and **id** values default to the character **c** in the database.

Notes

When a blocked DPC screening reference is created, the first entry for a point code must be **c-c-c**, or **c** for the **npc** parameter. Subsequent entries must be specific point codes.

The character **c** is used in the blocked DPC screens to allow the screening process to continue for messages with point codes that do not match any point codes in the blocked DPC screens. When screening for a blocked DPC and the point code being screened does not match any of the point codes in the blocked DPC screens, the message is not rejected and the screening process continues.

There must be an entry in the blocked DPC screens to allow the screening process to continue. This entry consists of a screening reference, point code, **nsfi**, and **nsr**. The point code is **npc=c** or subfields equal to **c-c-c**. When the character **c** is specified, the **nsfi** and **nsr** parameters must be specified.

If the character **c** is specified for the parameters **ni-nc-ncm** or **zone-area-id** or **msa-ssa-sp**, the character **c** is the only value that can be specified for all three parameters. No other values can be used. For example, a point code **c-c-255** is not allowed. The point code must be **c-c-c**. The asterisk (*) value cannot be used with the character **c** (for example, a point code **c-c-*** is not allowed).

When the point code does not match any entries in the blocked DPC screens, the screening process is directed to the screening reference with the point code **c-c-c** or **npc=c**. The **nsfi** and **nsr** in this entry are examined to determine the next step in the screening process.

If the current **ni-nc-ncm** or **zone-area-id** or **msa-ssa-sp** is equal to **c-c-c** or **npc=c**, only the **nsfi** and **nsr** can be changed. Otherwise, only the blocked DPC can be changed.

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, **: ni=025&&100** specifies all network indicators for ANSI point codes from 25 to 100.

An asterisk cannot be specified for a parameter value in this command unless an asterisk was specified for the parameter value in the **ent-scr-blkdpc** command.

If the screen set reaches 100% capacity (indicated by the 100% Full message), the system allows subsequent entries. An error occurs, however, when downloading the screen set to an LIM. Ensure that screen sets do not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** and **npcst** parameters indicate whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

```
chg-scr-
blkdpc: sr=ss01: ni=240: nc=010: ncm=010: nni=240: nnc=003: nncm=030
      rlgncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
      CHG-SCR-BLKDPC: SCREEN SET AFFECTED - SS01 25% FULL
      CHG-SCR-BLKDPC: MASP A - COMPLTD
;
```

Legend

CHG-SCR-BLKDPC—The command entered that caused this output. This is echoed to the printer as a reference.

SCREEN SET AFFECTED—Identifies the screen set that was affected by the command. The screen set name is shown.

% FULL—Indicates the relative size of the screen set.

chg-scr-blkopc**Change Blocked OPC**

Use this command to change the attributes associated with a screening reference in the blocked OPC category. Attributes that can be changed are the point code, next screening function identifier, and next screening reference.

Keyword: **chg-scr-blkopc**

Related Commands: **dlt-scr-blkopc**, **ent-scr-blkopc**, **rtrv-scr-blkopc**

Command Class: Database Administration

Parameters

:sr= (mandatory)

Screening reference. This parameter specifies the point code's unique screening reference name.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

:actname= (optional)

The name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: *ayyyyy*, **none**

1 alphabetic character followed by up to 5 alphanumeric characters.

none—Remove an existing gateway screening stop action set from a gateway screening rule.

:area= (optional)

The ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255** *, C

:id= (optional)

The ITU international ID. The parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7** *, C

:msa= (optional)

The 24-bit ITU-national main signaling area (msa) value. It specifies the main signaling area (*msa*) of the point code represented by *msa-ssa-spt*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255** *, C

:narea= (optional)

The new ITU-international area value. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255** *, C

Default: Current value

:nc= (optional)

The network cluster (*nc*) value. This parameter specifies one or more *nc* values for the network indicator (*ni*) and network cluster member (*ncm*) values specified in the **ni** and **ncm** parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255** *, C

:ncm= (optional)

The network cluster member (*ncm*) value. This parameter specifies one or more *ncm* values for the network indicator (*ni*) and network cluster (*nc*) values identified in the **ni** and **nc** parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: 0-255 *, C

:ni= (optional)

The network indicator (*ni*) value. This parameter specifies one or more *ni* values for the network cluster (*nc*) and network cluster member (*ncm*) values identified in the **nc** and **ncm** parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: 0-255 *, C

:nid= (optional)

The new ITU-international ID value. An asterisk (*) indicates the full range of values from **0–7**.

Range: 0-7, *, C

Default: Current value

:nmsa= (optional)

The new 24-bit ITU-national main signaling area (*nmsa*) value. It specifies the new main signaling area (*msa*) of the point code represented by *msa-ssa-spt*. An asterisk (*) indicates the full range of values from **000–255**.

Range: 000-255 *, C

:nnc= (optional)

The new network cluster (*nnc*). This parameter specifies one or more *nnc* values for the screening reference specified in the **sr** parameter. It specifies the new network cluster (*nc*) of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: 000-255 *, C

Default: Current value

:nncm= (optional)

The new network cluster member (*nncm*). This parameter specifies one or more *ncm* values for the screening reference specified in the **sr** parameter. It specifies the new network cluster member (*ncm*) of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0–255**.

Range: 0-255 *, C

Default: Current value

:nni= (optional)

The new network identifier (*nni*). This parameter specifies one or more *nni* values for the screening reference specified in the **sr** parameter. It specifies the new network indicator (*ni*) of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: 0-255 *, C

Default: Current value

:nnpc= (optional)

The new ITU-national point code. An asterisk (*) indicates the full range of values from **00000–16383**.

NOTE: Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you use multiple-part ITU national point codes, see

"Converting ITU National Point Code Formats" for information on converting the point code format.

Range: 00000-16383 *, C

Default: Current value

:npc= (optional)

The ITU national point code. An asterisk (*) indicates the full range of values from **00000–16383**.

Range: 00000-16383 *, C

:npcst= (optional)

New point code subtype. This parameter indicates whether the specified new ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range: none, s

Default: none

:nsfi= (optional)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range: cgpa, fail, stop

cgpa—Allowed CGPA is the next screening category.

fail—Discard the received message.

stop—The gateway screening process ends and the message proceeds through normal routing.

Default: Current value

:nsp= (optional)

New 24-bit ITU national signaling point (*nsp*). This parameter specifies the new signaling point (*sp*) of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: 000-255 *, C

:nsr= (optional)

Next screening reference (*nsr*). The parameter indicates which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. If **nsfi=stop**, the **nsr** parameter cannot be specified.

Range: ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Default: Current value

:nssa= (optional)

The new 24-bit ITU national sub signaling area (*nssa*). It specifies the new sub signaling area (*ssa*) of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: 000-255 *, C

:nzone= (optional)

The new ITU-international zone. The parameter specifies a new zone for the point code represented by *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: 0-7 *, C

Default: Current value

:pcst= (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range: none, s

Default: none

:sp= (optional)

The 24-bit ITU national signaling point (*sp*). This parameter specifies the signaling point (*sp*) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 *, C**

:ssa= (optional)

The 24-bit ITU national sub signaling area (*ssa*). This parameter specifies the sub signaling area (*ssa*) in the point code represented by the format *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 *, C**

:zone= (optional)

The ITU international zone. The parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0-7**.

Range: **0-7, *, C**

Example

chg-scr-

blkopc:sr=iec:ni=240:nc=010:ncm=010:nni=240:nnc=010:nncm=020

chg-scr-blkopc:sr=iec:ni=c:nc=c:ncm=c:nsfi=dpc:nsr=wrld1

chg-scr-blkopc:sr=iec:ni=c:nc=c:ncm=c:nsfi=stop:actname=none

chg-scr-blkopc:sr=bop1:npc=128:nsfi=fail:pcst=s:npcst=none

Dependencies



CAUTION: Even though gateway screening is in the screen test mode, as defined by the parameters **gwsa=off** and **gwsn=on**, the gateway screening action in the stop action set specified by the **actname** parameter of the screen set *will* be performed at the end of the screening process.

A complete point code must be specified, and must be one and only one of the four point code parameter combinations: **ni-nc-ncm**; **zone-area-id**; **msa-ssa-sp**; or **npc**, except in the special case of entering **c** for "continue."

A new point code entry must be specified by one, and only one of the four point code parameter combinations: **nni-nnc-nncm**, **nzone-narea-nid**, **nmsa-nssa-nsp**, or **nnpc**. If the new point code entry is a different point code type than the existing point code entry, all subfields of the new point code type must be specified.

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

At least one optional parameter must be specified.

The blocked OPC specified by **ni-nc-ncm**; **zone-area-id**; **msa-ssa-sp**; or the **npc** parameter must already exist in the screening reference or within an existing range of OPCs.

The new blocked OPC or OPC range defined by **ni-nc-ncm**; **zone-area-id**, **msa-ssa-sp**, or the **npc** parameter must not already exist in the screening reference or within an existing range of OPCs.

If the **actname** parameter is specified, the **nsr** parameter cannot be specified.

The **actname** parameter value must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the **ACT NAME** field of the **rtrv-gws-actset** command output.

If the **area=*** parameter is specified, the **id=*** parameter must be specified.

If the **msa=*** parameter is specified, the **ssa=*** and **sp=*** parameters must be specified.

If the **msa=c** parameter is specified, the **ssa** and **sp** parameters must have a value of **c**, or the **ssa** and **sp** parameters cannot be specified. If the **ssa** and **sp** parameters are not specified when the **msa=c** parameter is specified, the **ssa** and **sp** parameter values default to **c** in the database.

The next screening function identifier (**nsfi**) and the next screening reference (**nsr**) must point to an existing screen, or the **nsfi** must be equal to **stop** and the **nsr** must not be specified.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc=*** parameter is specified, the **ncm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **ncm** parameter is specified as a single value, or a range other than the full range of **000–255**, the **ni** and the **nc** parameters must be specified with a single value.

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range **000–255**.

If the **ni=c** parameter is specified, the **nc** and **ncm** parameters must have a value of **c**, or the **nc** and **ncm** parameters cannot be specified. If the **nc** and **ncm** parameters are not specified when the **ni=c** parameter is specified, the **nc** and **ncm** parameter values default to **c** in the database.

If the **nnc** parameter is specified as a range, the **nncm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **nnc** parameter is specified as a single value or a range, a single value must be specified for the **nni** parameter.

If the **nnc=*** parameter is specified, the **nnm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **nncm** parameter is specified as a single value, or a range other than the full range of **000–255**, the **nni** and the **nnc** parameters must be specified with a single value.

If the **nni** parameter is specified as an asterisk (**nni=***) or as a range, the **nnc** and **nncm** parameters must be specified as an asterisk or as the full range **000–255**.

When changing a screening entry where the **nsfi=fail** parameter is specified, the **nni**, **nnc**, **nncm**, **narea**, **nzone**, **nid**, **nmsa**, **nssa**, **nsp**, and the **npc=c** parameter cannot be specified.

When changing a screening entry, and the **nsfi=fail** parameter is specified, the **nni**, **nnc**, **nncm**, **narea**, **nzone**, **nid**, **nmsa**, **nssa**, **nsp**, and **npc** parameters cannot have a value of **c**.

If the specified **ni-nc-ncm** or **zone-area-id** or **msa-ssa-sp** is equal to **c-c-c** or if the **npc=c** parameter is specified, the **nsfi=fail** parameter cannot be specified, and the **nni**, **nnc**, **nncm**, **nzone**, **narea**, **nid**, **nmsa**, **nssa**, **nsp**, and **nnpc** parameters cannot be specified. Point code **c-c-c** and **npc=c** cannot be changed to a numbered point code.

If the specified **ni-nc-ncm**, **zone-area-id**, or **msa-ssa-sp** is not equal to **c-c-c**, or the **npc=c** parameter is not specified, the **nsfi=fail** parameter must be specified, and the **nsr** parameter cannot be specified.

If the **ssa=*** parameter is specified, the **sp=*** parameter must be specified.

The specified screening reference (**sr**) must already exist in the database.

The Spare Point Code Support feature must be enabled before the **pcst** and **npcst** parameters can be specified.

The **pcst** and **npcst** parameters cannot be specified with **c** for a blocked screen reference (**sr**).

The spare point code subtype prefix (**s-**) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** and **npcst** parameters cannot be specified for ANSI and ITU-N24 point codes.

If the **zone=*** parameter is specified, the **area=*** and **id=*** parameters must be specified.

If the **zone=c** parameter is specified, the **area** and **id** parameters must have a value of **c**, or the **area** and **id** parameters cannot be specified. If the **area** and **id** parameters are not specified when the **zone=c** parameter is specified, the **area** and **id** parameter values default to **c** in the database.

Notes

When a blocked OPC screening reference is created, the first entry for a point code must be **c-c-c**, or **c** for the **npc** parameter. Subsequent entries must be specific point codes.

The character **c** is used in the blocked OPC screens to allow the screening process to continue for messages with point codes that do not match any point codes in the blocked OPC screens. When screening for a blocked OPC and the point code being screened does not match any of the point codes in the blocked OPC screens, the message is not rejected and the screening process continues. There must be an entry in the blocked OPC screens to allow the screening process to continue.

This entry consists of a screening reference, point code, **nsfi**, and **nsr**. The point code is **npc=c** or subfields equal to **c-c-c**. When the character **c** is specified, the **nsfi** and **nsr** parameters must be specified.

If the character **c** is specified for the parameters **ni-nc-ncm** or **zone-area-id** or **msa-ssa-sp**, the character **c** is the only value that can be specified for all three parameters. No other values can be used. For example, a point code **c-c-255** is not allowed. The point code must be **c-c-c**. The asterisk (*) value cannot be used with the character **c** (for example, a point code **c-c-*** is not allowed).

When the point code does not match any entries in the blocked OPC screens, the screening process is directed to the screening reference with the point code **c-c-c** or **npc=c**. The **nsfi** and **nsr** in this entry are examined to determine the next step in the screening process.

If the current **ni-nc-ncm** or **zone-area-id** or **msa-ssa-sp** is equal to **c-c-c** or **npc=c**, only the **nsfi** and **nsr** can be changed. Otherwise, only the blocked OPC can be changed.

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, **:ni=025&&100** specifies all network indicators for ANSI point codes from 25 to 100.

An asterisk cannot not be specified for a parameter value in this command unless an asterisk was specified for the parameter value in the original **ent-scr-blkopc** command.

If the screen set reaches 100% capacity (indicated by the "100% full" message), the system will allow subsequent entries. An error will occur, however, when downloading the screen set to the card. Screen sets should not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** and **npcst** parameters indicate whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

```

chg-scr-
blkopc:sr=iec:ni=240:nc=010:ncm=010:nni=240:nnc=010:nncm=020
  rlgncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
  CHG-SCR-BLKOPC: SCREEN SET AFFECTED - IEC 25% FULL
  CHG-SCR-BLKOPC: MASP A - COMPLTD
;

```

Legend

CHG-SCR-BLKOPC—The command entered that caused this output. This is echoed to the printer as a reference.

SCREEN SET AFFECTED—Identifies the screen set that was affected by the command. The screen set name is provided.

% FULL—Indicates the relative size of the screen set.

chg-scr-cdpa**Change Allowed Called Party Address**

Use this command to change the attributes associated with a specific screening reference in the allowed called party address category. Attributes that can be changed are the point code, subsystem number, next screening function identifier, and next screening reference.

Keyword: **chg-scr-cdpa**

Related Commands: **dlt-scr-cdpa**, **ent-scr-cdpa**, **rtrv-scr-cdpa**

Command Class: Database Administration

Parameters

:sr= (mandatory)

Screening reference. This parameter specifies the point code's unique screening reference name.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

:ssn= (mandatory)

Subsystem number. An asterisk (*) indicates the full range of values from **1-255**.

Range: **1-255 ***

:actname= (optional)

Action name. This parameter specifies the name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: *ayyyyy*, **none**

1 alphabetic character followed by up to 5 alphanumeric characters.

none—Remove an existing gateway screening stop action set from a gateway screening rule.

:area= (optional)

ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:id= (optional)

ITU international ID. This parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0-7**.

Range: **0-7, ***

:msa= (optional)

24-bit ITU-national main signaling area (*msa*) value. This parameter specifies the main signaling area (*msa*) of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:narea= (optional)

New ITU-international area value. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

Default: Current value

:nc= (optional)

Network cluster (*nc*) value. This parameter specifies one or more *nc* values for the network indicator (*ni*) and network cluster member (*ncm*) values specified in the **ni** and **ncm** parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:ncm= (optional)

Network cluster member (*ncm*) value. This parameter specifies one or more *ncm* values for the network indicator (*ni*) and network cluster (*nc*) values identified in the **ni** and **nc** parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000-255**.

Range: **0-255 ***

:ni= (optional)

Network indicator (*ni*) value. This parameter specifies one or more *ni* values for the network cluster (*nc*) and network cluster member (*ncm*) values identified in the **nc** and **ncm** parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000-255**.

Range: **0-255 ***

:nid= (optional)

New ITU-international ID value. An asterisk (*) indicates the full range of values from **0-7**.

Range: **0-7, ***

Default: Current value

:nmsa= (optional)

New 24-bit ITU-national main signaling area (*nmsa*) value. This parameter specifies the new main signaling area (*msa*) of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:nnc= (optional)

New network cluster (*nnc*). This parameter specifies one or more *nnc* values for the screening reference specified in the **sr** parameter. It specifies the new network cluster (*nc*) of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

Default: Current value

:nncm= (optional)

New network cluster member (*nncm*). This parameter specifies one or more *ncm* values for the screening reference specified in the **sr** parameter. It specifies the new network cluster member (*ncm*) of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0-255**.

Range: 0-255 *
Default: Current value

:nni= (optional)

New network identifier (*nni*). This parameter specifies one or more *nni* values for the screening reference specified in the **sr** parameter. It specifies the new network indicator (*ni*) of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: 0-255 *
Default: Current value

:nnpc= (optional)

New ITU-national point code. An asterisk (*) indicates the full range of values from **00000–16383**. Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you use multiple-part ITU national point codes, see "Converting ITU National Point Code Formats" for information on converting the point code format.

Range: 00000-16383 *
Default: Current value

:npc= (optional)

ITU national point code. An asterisk (*) indicates the full range of values from **00000–16383**.

Range: 00000-16383 *

:npcst= (optional)

New point code subtype. This parameter indicates whether the specified new ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range: none, s
Default: none

:nscmgfid= (optional)

New SCMG format ID. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **1–255**.

Range: 1-255 *
Default: Current value

:nsfi= (optional)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range: **aftpc, stop**
aftpc—Allowed affected point code is the next screening category.
stop—The gateway screening process ends and the message proceeds through normal routing.
Default: Current value

:nsp= (optional)

New 24-bit ITU national signaling point (*nsp*). This parameter specifies the new signaling point (*sp*) of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: 000-255 *

:nsr= (optional)

Next screening reference (*nsr*). The parameter indicates which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. If **nsfi=stop**, the **nsr** parameter cannot be specified.

Range: *ayyy*
 1 alphabetic character followed by up to 3 alphanumeric characters

Default: Current value

:nssa= (optional)

New 24-bit ITU national sub signaling area (*nssa*). This parameter specifies the new sub signaling area (*ssa*) of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:nssn= (optional)

New subsystem number. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

Default: Current value

:nzone= (optional)

New ITU-international zone. This parameter specifies a new zone for the point code represented by *zone-area-id*. An asterisk (*) indicates the full range of values from **0-7**.

Range: **0-7, *, C**

Default: Current value

:pcst= (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range: **none, s**

Default: **none**

:scmgfid= (optional)

The SCCP management (SCMG) format ID, which consists of a one-octet field and uniquely defines the function and format of each SCMG message. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **1-255**. The following SCCP message types are screened against the Allowed CDPA table and all others are passed: UDT, UDTS, XUDT, XUDTS.

Range: **1-255 ***

:sp= (optional)

24-bit ITU national signaling point (*sp*). This parameter specifies the signaling point (*sp*) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:ssa= (optional)

24-bit ITU national sub signaling area (*ssa*). This parameter specifies the sub signaling area (*ssa*) in the point code represented by the format *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:zone= (optional)

ITU international zone. This parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0-7**.

Range: **0-7, ***

Example

chg-scr-

cdpa:sr=cdp1:ni=5:nc=5:ncm=5:ssn=1:scmgfid=4:nsfi=stop:nni=6:nncm=3:nssn=*

chg-scr-

cdpa:sr=cdp1:ni=c:nc=c:ncm=c:ssn=1:scmgfid=3:nsfi=stop:actname=copy

```
chg-scr-
cgpa:sr=cgpa:zone=1:area=2:id=3:ssn=1:sccpmt=9:ri=*:nsfi=stop:pcst=s
:npbst=none
```

Dependencies



CAUTION: Even though gateway screening is in the screen test mode, as defined by the parameters **gwsa=off** and **gwsn=on**, the gateway screening action in the stop action set specified by the **actname** parameter of the screen set *will* be performed at the end of the screening process.

A complete point code must be specified, and must be one and only one of the four point code parameter combinations: **ni-nc-ncm**; **zone-area-id**; **msa-ssa-sp**; or **npc**, except in the special case of entering **c** for "continue."

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

At least one optional parameter must be specified.

The CDPA point code, **scmgfid**, and **ssn** to be changed must already exist in the CDPA entity set.

The new CDPA point code, **scmgfid**, and **ssn** cannot already exist in the CDPA entity set.

If the **actname** parameter is specified, the **nsfi=stop** parameter must be specified.

If the **actname** parameter is specified, the **nsr** parameter cannot be specified.

The **actname** parameter value must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the **ACT NAME** field of the **rtrv-gws-actset** command output.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc=*** parameter is specified, the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **ncm** parameter is specified as a single value, or a range other than the full range of **000-255**, the **ni** and the **nc** parameters must be specified with a single value.

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range **000-255**.

If the **nnc** parameter is specified as a range, the **nncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **nnc** parameter is specified as a single value or a range, a single value must be specified for the **nni** parameter.

If the **nnc=*** parameter is specified, the **nnm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **nncm** parameter is specified as a single value, or a range other than the full range of **000-255**, the **nni** and the **nnc** parameters must be specified with a single value.

If the **nni** parameter is specified as an asterisk (**nni=***) or as a range, the **nnc** and **nncm** parameters must be specified as an asterisk or as the full range **000-255**.

If the **nsfi=aftpc** parameter is specified, the **ssn=1** parameter must be specified.

If the **nsfi=stop** parameter is specified, the **nsr** parameter cannot be specified.

If the **nsfi** parameter is specified with a value other than **stop**, the **nsr** parameter must be specified.

The next screening function identifier (**nsfi**) and the next screening reference (**nsr**) must point to an existing screen, or the **nsfi** must be equal to **stop** and the **nsr** must not be specified.

The specified screening reference (**sr**) must already exist in the database.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The spare point code subtype prefix (**s-**) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** and **npcst** parameters cannot be specified for ANSI and ITU-N24 point codes.

If the **ssn** parameter is specified with a value other than **1**, the **scmgfid** parameter cannot be specified.

If the **ssn=1** parameter is specified, the **scmgfid** parameter must be specified.

Notes

A range of values is specified by separating the values that define the range by two ampersands (**&&**); for example, **:ni=025&&100** specifies all network indicators for ANSI point codes from **25** to **100**.

If the screen set reaches 100% capacity (indicated by the 100% Full message), the system will allow subsequent entries. An error will occur, however, when downloading the screen set to a LIM. Screen sets should not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

An asterisk can be specified for a parameter value in the **chg-scr-cdpa** and **dlt-scr-cdpa** commands *only* if that parameter value was specified as an asterisk in the **ent-scr-cdpa** command to define the parameter value.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

chg-scr-

cdpa: sr=cdp1: ni=5: nc=5: ncm=5: ssn=1: scmgfid=4: nsfi=stop: nni=6: nncm=3 : nssn=*

```
rlghncxa03w 04-01-14 15:35:30 EST EAGLE 31.3.0
CHG-SCR-CDPA: MASP A - COMPLTD
```

;

chg-scr-cgpa

Change Allowed Calling Party Address

Use this command to change the attributes associated with a specific screening reference in the allowed calling party address category. Attributes that can be changed are the point code, subsystem number, routing indicator, next screening function identifier, and next screening reference.

Keyword: **chg-scr-cgpa**

Related Commands: **dlt-scr-cgpa**, **ent-scr-cgpa**, **rtrv-scr-cgpa**

Command Class: Database Administration

Parameters

NOTE: At least one of these parameters must be specified: nsfi.

:ri= (mandatory)

Routing indicator. This parameter specifies routing instructions to the receiving signaling point. In gateway screening, messages may be screened based on the value of the routing indicator.

Range: **dpc, gt, ***

dpc—Allow a called party address with a routing indicator value of “DPC/SSN.”

gt—Screening stops and gateway screening is bypassed as a forced pass.

*—Allow both routing indicator values.

:sccpmt= (mandatory)

SCCP message type. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values.

Range: 9, , *10, , *17, , *18, *
 9—UDT
 10—UDTS
 17—XUDT
 18—XUDTS

:sr= (mandatory)

Screening reference. This parameter specifies the point code's unique screening reference name.

Range: ayyy
 1 alphabetic character followed by up to 3 alphanumeric characters

:ssn= (mandatory)

Subsystem number. An asterisk (*) indicates the full range of values from 1-255.

Range: 1-255 *

:actname= (optional)

Action name. This parameter specifies the name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: ayyyyy, none
 1 alphabetic character followed by up to 5 alphanumeric characters.
none—remove an existing gateway screening stop action set from a gateway screening rule.

:area= (optional)

ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from 000–255.

Range: 000-255 *

:id= (optional)

ITU international ID. This parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from 0–7.

Range: 0-7, *

:msa= (optional)

24-bit ITU-national main signaling area (*msa*) value. It specifies the main signaling area (*msa*) of the point code represented by *msa-ssa-spt*. An asterisk (*) indicates the full range of values from 000–255.

Range: 000-255 *

:narea= (optional)

New ITU-international area value. An asterisk (*) indicates the full range of values from 000–255.

Range: 000-255 *

Default: Current value

:nc= (optional)

Network cluster (*nc*) value. This parameter specifies one or more *nc* values for the network indicator (*ni*) and network cluster member (*ncm*) values specified in the **ni** and **ncm** parameters. *It specifies the nc of the point code represented by ni-nc-ncm. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from 000–255.*

Range: 000-255 *

:ncm= (optional)

Network cluster member (*ncm*) value. This parameter specifies one or more *ncm* values for the network indicator (*ni*) and network cluster (*nc*) values identified in the **ni** and **nc** parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 ***

:ni= (optional)

Network indicator (*ni*) value. This parameter specifies one or more *ni* values for the network cluster (*nc*) and network cluster member (*ncm*) values identified in the **nc** and **ncm** parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 ***

:nid= (optional)

New ITU-international ID value. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7, ***

Default: Current value

:nmsa= (optional)

New 24-bit ITU-national main signaling area (*nmsa*) value. This parameter specifies the new main signaling area (*msa*) of the point code represented by *msa-ssa-spt*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:nnc= (optional)

New network cluster (*nnc*). This parameter specifies one or more *nnc* values for the screening reference specified in the **sr** parameter. It specifies the new network cluster (*nc*) of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

Default: Current value

:nncm= (optional)

New network cluster member (*nncm*). This parameter specifies one or more *ncm* values for the screening reference specified in the **sr** parameter. It specifies the new network cluster member (*ncm*) of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0–255**.

Range: **0-255 ***

Default: Current value

:nni= (optional)

New network identifier (*nni*). This parameter specifies one or more *nni* values for the screening reference specified in the **sr** parameter. It specifies the new network indicator (*ni*) of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 ***

Default: Current value

:nnpc= (optional)

New ITU-national point code. An asterisk (*) indicates the full range of values from **00000–16383**. Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you use multiple-part ITU national point codes, see "Converting ITU National Point Code Formats" for information on converting the point code format.

Range: **00000-16383 ***

- Default:** Current value
- :npc=** (optional)
ITU national point code. An asterisk (*) indicates the full range of values from **00000–16383**.
Range: **00000-16383 ***
- :npcst=** (optional)
New point code subtype. This parameter indicates whether the specified new ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).
Range: **none, s**
Default: **none**
- :nri=** (optional)
New routing indicator that provides routing instructions to the receiving signaling point. In gateway screening, messages may be screened based on the value of the routing indicator. An asterisk (*) indicates that both routing indicator values (**gt** and **dpc**) will be accepted in the gateway screening process.
Range: **dpc, gt, ***
dpc—Allow a called party address with a routing indicator value of “DPC/SSN.”
gt—Screening stops and gateway screening is bypassed as a forced pass.
Default: Current value
- :nsccpmt=** (optional)
New SCCP message type. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values.
Range: **9, , * 10, , * 17, , * 18, ***
Default: Current value
- :nsfi=** (optional)
This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.
Range: **cdpa, stop, tt**
cdpa—Allowed called party address is the next screening category.
stop—The gateway screening process ends and the message proceeds through normal routing.
tt—Allowed translation type is the next screening category.
Default: Current value
- :nsp=** (optional)
New 24-bit ITU national signaling point (*nsp*). This parameter specifies the new signaling point *sp* of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.
Range: **000-255 ***
- :nsr=** (optional)
Next screening reference (*nsr*). This parameter specifies which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. If **nsfi=stop**, the **nsr** parameter cannot be specified.
Range: *ayyy*
1 alphabetic character followed by up to 3 alphanumeric characters
Default: Current value
- :nssa=** (optional)
New 24-bit ITU national sub signaling area (*nssa*). This parameter specifies the new sub signaling area (*ssa*) of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: 000-255 *

:nssn= (optional)

New subsystem number. An asterisk (*) indicates the full range of values from 000–255.

Range: 000-255 *

Default: Current value

:nzone= (optional)

New ITU-international zone. This parameter specifies a new zone for the point code represented by *zone-area-id*. An asterisk (*) indicates the full range of values from 0–7.

Range: 0-7, *, C

Default: Current value

:pcst= (optional)

Point code subtype. This parameter specifies whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range: none, s

Default: none

:sp= (optional)

24-bit ITU national signaling point (*sp*). This parameter specifies the signaling point (*sp*) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from 000–255.

Range: 000-255 *

:ssa= (optional)

24-bit ITU national sub signaling area (*ssa*). This parameter specifies the sub signaling area (*ssa*) in the point code represented by the format *msa-ssa-sp*. An asterisk (*) indicates the full range of values from 000–255.

Range: 000-255 *

:zone= (optional)

ITU international zone. This parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from 0–7.

Range: 0-7, *

Example

```
chg-scr-cgpa:sr=iec:ni=240:nc=010:ncm=010:ssn=3:ri=dpc
```

```
chg-scr-
```

```
cgpa:sr=iec:ni=240:nc=010:ncm=010:ssn=3:ri=dpc:nsfi=stop:actname=copy
```

```
chg-scr-
```

```
cgpa:sr=cdp1:ni=5:nc=5:ncm=5:ssn=1:ri=dpc:sccpmt=009:nsfi=sdpa:nsr=cdp1
```

```
chg-scr-
```

```
cgpa:sr=cgpa:zone=1:area=2:id=3:ssn=1:sccpmt=9:ri=*:nsfi=stop:pcst=s :npcst=none
```

Dependencies



CAUTION: Even though gateway screening is in the screen test mode, as defined by the parameters *gwsa=off* and *gwsn=on*, the gateway screening action in the stop action set specified by the *actname* parameter of the screen set *will* be performed at the end of the screening process.

A complete point code must be specified, and must be one, and only one of the four point code parameter combinations: *ni-nc-ncm*; *zone-area-id*; *msa-ssa-sp*; or *npc*.

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

At least one optional parameter must be specified.

The CGPA point code or range of point codes, **ri**, **sccpmt**, and subsystem number or numbers to be changed must exist in the CGPA entity set.

The new CGPA point code and subsystem number cannot already exist in the CGPA entity set.

If the **actname** parameter is specified, the **nsfi=stop** parameter must be specified.

If the **actname** parameter is specified, the **nsr** parameter cannot be specified.

The value of the **actname** parameter must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the *ACT NAME* field of the **rtrv-gws-actset** command output.

The next screening function identifier (**nsfi**) and the next screening reference (**nsr**) must point to an existing screen, or the **nsfi** must be equal to **stop** and the **nsr** must not be specified.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc** parameter is specified as an asterisk (**nc=***), the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **ncm** parameter is specified as a single value, or a range other than the full range of **000-255**, the **ni** and the **nc** parameters must be specified with a single value.

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range **000-255**.

If the **nnc** parameter is specified as a range, the **nncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **nnc** parameter is specified as a single value or a range, a single value must be specified for the **nni** parameter.

If the **nnc** parameter is specified as an asterisk (**nnc=***), the **nnm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **nncm** parameter is specified as a single value, or a range other than the full range of **000-255**, the **nni** and the **nnc** parameters must be specified with a single value.

If the **nni** parameter is specified as an asterisk (**nni=***) or as a range, the **nnc** and **nncm** parameters must be specified as an asterisk or as the full range **000-255**.

The **nsfi=cdpa** parameter can be specified only when the **ri=*** or the **ri=dpc** parameter is specified.

The **nsfi=tt** parameter can be specified only when the **ri=*** or the **ri=gt** parameter is specified.

If the **nsfi=stop** parameter is specified, the **nsr** parameter cannot be specified.

If the **nsfi** parameter has a value other than **stop**, the **nsr** parameter must be specified.

The specified screening reference (**sr**) must already exist in the database.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The spare point code subtype prefix (**s-**) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** and **npcst** parameters cannot be specified for ANSI and ITU-N24 point codes.

Notes

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, **:ni=025&&100** specifies all network indicators for ANSI point codes from 25 to 100.

If the screen set reaches 100% capacity (indicated by the 100% Full message), the system will allow subsequent entries. An error will occur, however, when downloading the screen set to a LIM. Screen sets should not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

An asterisk can be specified for a parameter value in the **chg-scr-cgpa** and **dlt-scr-cgpa** commands *only* if that parameter value was specified as an asterisk in the **ent-scr-cgpa** command to define the parameter value.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

```
chg-scr-cgpa:sr=iec:ni=240:nc=010:ncm=010:ssn=3:ri=dpc
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
CHG-SCR-CGPA: SCREEN SET AFFECTED - IEC 25% FULL
CHG-SCR-CGPA: MASP A - COMPLTD
;
```

Legend

CHG-SCR-CGPA—The command entered that caused this output. This is echoed to the printer as a reference.

SCREEN SET AFFECTED—Identifies the screen set that was affected by the command. The screen set name is shown.

% FULL—Indicates the relative size of the screen set.

chg-scr-destfld

Change an Allowed DESTFLD

Use this command to change the attributes of a specific screening reference in the allowed affected destination field (DESTFLD) category. Attributes that can be changed are the allowed affected destination point codes.

Keyword: **chg-scr-destfld**

Related Commands: **dlt-scr-destfld**, **ent-scr-destfld**, **rtrv-scr-destfld**

Command Class: Database Administration

Parameters

:sr= (mandatory)

Screening reference. This parameter specifies the point code's unique screening reference name.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

:actname= (optional)

Action name. This parameter specifies the name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: *yyyyyy*, **none**

1 alphabetic character followed by up to 5 alphanumeric characters.

none—remove an existing gateway screening stop action set from a gateway screening rule.

:area= (optional)

ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:id= (optional)

ITU international ID. This parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7 ***

:msa= (optional)

24-bit ITU-national main signaling area (*msa*) value. This parameter specifies the main signaling area (*msa*) of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:narea= (optional)

New ITU-international area value. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

Default: Current value

:nc= (optional)

Network cluster (*nc*) value. This parameter specifies one or more *nc* values for the network indicator (*ni*) and network cluster member (*ncm*) values specified in the **ni** and **ncm** parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:ncm= (optional)

Network cluster member (*ncm*) value. This parameter specifies one or more *ncm* values for the network indicator (*ni*) and network cluster (*nc*) values identified in the **ni** and **nc** parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 ***

:ni= (optional)

Network indicator (*ni*) value. This parameter specifies one or more *ni* values for the network cluster (*nc*) and network cluster member (*ncm*) values identified in the **nc** and **ncm** parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 ***

:nid= (optional)

New ITU-international ID value. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7 ***

Default: Current value

:nmsa= (optional)

New 24-bit ITU-national main signaling area (*nmsa*) value. This parameter specifies the new main signaling area (*msa*) of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:nnc= (optional)

New network cluster (*nnc*). This parameter specifies one or more *nnc* values for the screening reference specified in the **sr** parameter. It specifies the new network cluster (*nc*) of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

Default: Current value

:nncm= (optional)

New network cluster member (*nncm*). This parameter specifies one or more *ncm* values for the screening reference specified in the **sr** parameter. It specifies the new network cluster member (*ncm*) of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0–255**.

Range: **0-255 ***

Default: Current value

:nni= (optional)

New network identifier (*nni*). This parameter specifies one or more *nni* values for the screening reference specified in the **sr** parameter. It specifies the new network indicator (*ni*) of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 ***

Default: Current value

:nnpc= (optional)

New ITU-national point code. An asterisk (*) indicates the full range of values from **00000–16383**. Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you use multiple-part ITU national point codes, see "Converting ITU National Point Code Formats" for information on converting the point code format.

Range: **00000-16383 ***

Default: Current value

:npc= (optional)

ITU national point code. An asterisk (*) indicates the full range of values from **00000–16383**.

Range: **00000-16383 ***

:npcst= (optional)

New point code subtype. This parameter indicates whether the specified new ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range: **none, s**

Default: **none**

:nsfi= (optional)

This parameter specifies the next screening category that is used in the gateway screening process. If specified, the parameter value must be **stop**.

Range: **stop**

stop—The gateway screening process ends and the message proceeds through normal routing.

Default: Current value

:nsp= (optional)

New 24-bit ITU national signaling point (*nsp*). This parameter specifies the new signaling point (*sp*) of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:nssa= (optional)

New 24-bit ITU national sub signaling area (*ssa*). This parameter specifies the new sub signaling area (*ssa*) of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:nzone= (optional)

New ITU-international zone. This parameter specifies a new zone for the point code represented by *zone-area-id*. An asterisk (*) indicates the full range of values from **0-7**.

Range: **0-7, *, C**

Default: Current value

:pcst= (optional)

Point code subtype. This parameter specifies whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (*s-*).

Range: **none, s**

Default: **none**

:sp= (optional)

24-bit ITU national signaling point (*sp*). This parameter specifies the signaling point (*sp*) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:ssa= (optional)

24-bit ITU national sub signaling area (*ssa*). This parameter specifies the sub signaling area (*ssa*) in the point code represented by the format *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:zone= (optional)

ITU international zone. This parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0-7**.

Range: **0-7, ***

Example

chg-scr-destfld:sr=iec:ni=240:nc=010:ncm=019&&020:nncm=021

chg-scr-destfld:sr=iec:ni=240:nc=010:ncm=019&&020:nsfi=stop:actname=none

chg-scr-destfld:sr=dst1:zone=1:area=2:id=3:nsfi=stop:pcst=s:npcst=none

Dependencies

CAUTION: Even though gateway screening is in the screen test mode, as defined by the parameters *gwsa=off* and *gwsn=on*, the gateway screening action in the stop action set specified by the *actname* parameter of the screen set *will* be performed at the end of the screening process.

A complete point code must be specified, and must be one, and only one of the four point code parameter combinations: **ni-nc-ncm**; **zone-area-id**; **msa-ssa-sp**; or **npc**.

A new point code entry must be specified by one, and only one of the four point code parameter combinations: **nni-nnc-nncm**, **nzone-narea-nid**, **nmsa-nssa-nsp**, or **nnpc**. If the new point code entry is a different point code type than the existing point code entry, all subfields of the new point code type must be specified.

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

At least one optional parameter must be specified.

The new DESTFLD defined by **ni-nc-ncm**, **zone-area-id**, **msa-ssa-sp**, or the **npc** parameter must not already exist in the screening reference.

If the **actname** parameter is specified, the **nsfi=stop** parameter must be specified.

If the **actname** parameter is specified, the **nsr** parameter cannot be specified.

The value of the **actname** parameter must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the *ACT NAME* field of the **rtrv-gws-actset** command output.

If the **zone=*** parameter is specified, the **area=*** and **id=*** parameters must be specified.

If **area=*** is specified, **id=*** must be specified.

If **msa=*** is specified, **ssa=*** and **sp=*** must be specified.

If the **ssa=*** parameter is specified, the **sp=*** parameter must be specified.

The **nsr** parameter cannot be specified in this command because **nsfi=stop** must be specified.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc=*** parameter is specified, the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **ncm** parameter is specified as a single value, or a range other than the full range of **000-255**, the **ni** and the **nc** parameters must be specified with a single value.

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range **000-255**.

If the **nnc** parameter is specified as a range, the **nncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **nnc** parameter is specified as a single value or a range, a single value must be specified for the **nni** parameter.

If the **nnc** parameter is specified as an asterisk (**nnc=***), the **nnm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **nncm** parameter is specified as a single value, or a range other than the full range of **000-255**, the **nni** and the **nnc** parameters must be specified with a single value.

If the **nni** parameter is specified as an asterisk (**nni=***) or as a range, the **nnc** and **nncm** parameters must be specified as an asterisk or as the full range **000-255**.

The **nsfi=stop** parameter must be specified in the command

The entry specified by **ni-nc-ncm**, **zone-area-id**, **msa-ssa-sp**, or the **npc** parameter must already exist in the screening reference.

The specified screening reference (**sr**) must already exist in the database.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The spare point code subtype prefix (s-) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** and **npcst** parameters cannot be specified for ANSI and ITU-N24 point codes.

Notes

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, **:ni=025&&100** specifies all network indicators for ANSI point codes from 25 to 100.

An asterisk can be specified for a parameter value in the **chg-scr-destfld** and **dlt-scr-destfld** commands *only* if that parameter value was specified as an asterisk in the **ent-scr-destfld** command to define the parameter value.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** and **npcst** parameters indicate whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

chg-scr-destfld:sr=iec:ni=240:nc=010:ncm=019&&020:nncm=021

```
rlghncxa03w 04-01-13 11:49:47 EST EAGLE 31.3.0
CHG-SCR-DESTFLD: SCREEN SET AFFECTED - SS01 25% FULL
CHG-SCR-DESTFLD: MASP A - COMPLTD
;
```

chg-scr-dpc**Change Allowed DPC**

Use this command to change the attributes of a specific screening reference in the allowed DPC category. Attributes that may be changed are the point code, next screening function identifier, and the next screening reference.

Keyword: **chg-scr-dpc**

Related Commands: **dlt-scr-dpc**, **ent-scr-dpc**, **rtrv-scr-dpc**

Command Class: Database Administration

Parameters

NOTE: At least one of these parameters must be specified: nsfi.

:sr= (mandatory)

Screening reference. This parameter specifies the point code's unique screening reference name.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

:actname= (optional)

Action name. This parameter specifies the name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: *ayyyyy*, **none**

1 alphabetic character followed by up to 5 alphanumeric characters.

none—remove an existing gateway screening stop action set from a gateway screening rule.

:area= (optional)

ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:id= (optional)

ITU international ID. The parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: 0-7, *

:msa= (optional)

24-bit ITU-national main signaling area (*msa*) value. This parameter specifies the main signaling area (*msa*) of the point code represented by *msa-ssa-spt*. An asterisk (*) indicates the full range of values from **000-255**.

Range: 000-255 *

:narea= (optional)

New ITU-international area value. An asterisk (*) indicates the full range of values from **000-255**.

Range: 000-255 *

Default: Current value

:nc= (optional)

Network cluster (*nc*) value. This parameter specifies one or more *nc* values for the network indicator (*ni*) and network cluster member (*ncm*) values specified in the **ni** and **ncm** parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000-255**.

Range: 000-255 *

:ncm= (optional)

Network cluster member (*ncm*) value. This parameter specifies one or more *ncm* values for the network indicator (*ni*) and network cluster (*nc*) values identified in the **ni** and **nc** parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000-255**.

Range: 0-255 *

:ni= (optional)

Network indicator (*ni*) value. This parameter specifies one or more *ni* values for the network cluster (*nc*) and network cluster member (*ncm*) values identified in the **nc** and **ncm** parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000-255**.

Range: 0-255 *

:nid= (optional)

New ITU-international ID value. An asterisk (*) indicates the full range of values from **0-7**.

Range: 0-7, *

Default: Current value

:nmsa= (optional)

New 24-bit ITU-national main signaling area (*nmsa*) value. This parameter specifies the new main signaling area (*msa*) of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: 000-255 *

:nnc= (optional)

New network cluster (*nnc*). This parameter specifies one or more *nnc* values for the screening reference specified in the **sr** parameter. It specifies the new network cluster (*nc*) of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000-255**.

Range: 000-255 *

Default: Current value

:nncm= (optional)

New network cluster member (*nncm*). This parameter specifies one or more *ncm* values for the screening reference specified in the **sr** parameter. It specifies the new network cluster member

(*ncm*) of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from 0–255.

Range: 0-255 *

Default: Current value

:nni= (optional)

New network identifier (*nni*). This parameter specifies one or more *nni* values for the screening reference specified in the **sr** parameter. It specifies the new network indicator (*ni*) of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from 000–255.

Range: 0-255 *

Default: Current value

:nnpc= (optional)

New ITU-national point code. An asterisk (*) indicates the full range of values from 00000–16383.

NOTE: Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you use multiple-part ITU national point codes, see "Converting ITU National Point Code Formats" for information on converting the point code format.

Range: 00000-16383 *

Default: Current value

:npc= (optional)

ITU national point code. An asterisk (*) indicates the full range of values from 00000–16383.

Range: 00000-16383 *

:npcst= (optional)

New point code subtype. This parameter indicates whether the specified new ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range: none, s

Default: none

:nsfi= (optional)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range: blkdpdpc, cgpa, destfld, isup, stop

blkdpdpc—Blocked DPC is the next screening category.

cgpa—Allowed CGPA is the next screening category.

destfld—Allowed destination field (DESTFLD) is the next screening category.

isup—ISUP message type (ISUP) is the next screening category.

stop—The gateway screening process ends and the message proceeds through normal routing.

Default: Current value

:nsp= (optional)

The new 24-bit ITU national signaling point (*nsp*). It specifies the new signaling point (*sp*) of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from 000–255.

Range: 000-255 *

:nsr= (optional)

Next screening reference (*nsr*). The parameter indicates which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. If **nsfi=stop**, the **nsr** parameter cannot be specified.

Range: *ayyy*
1 alphabetic character followed by up to 3 alphanumeric characters

Default: Current value

:nssa= (optional)

New 24-bit ITU national sub signaling area (*nssa*). This parameter specifies the new sub signaling area (*ssa*) of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:nzone= (optional)

New ITU-international zone. This parameter specifies a new zone for the point code represented by *zone-area-id*. An asterisk (*) indicates the full range of values from **0-7**.

Range: **0-7 *, C**

Default: Current value

:pcst= (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (*s*).

Range: **none, s**

Default: **none**

:sp= (optional)

24-bit ITU national signaling point (*sp*). This parameter specifies the signaling point (*sp*) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:ssa= (optional)

24-bit ITU national sub signaling area (*ssa*). This parameter specifies the sub signaling area (*ssa*) in the point code represented by the format *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:zone= (optional)

The ITU international zone. The parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0-7**.

Range: **0-7, ***

Example

```
chg-scr-dpc:sr=iec:ni=240:nc=010:ncm=010:nni=240:nnc=003:nncm=030
```

```
chg-scr-
```

```
dpc:sr=iec:ni=240:nc=010:ncm=010:nni=240:nnc=003:nncm=030:nsfi=stop:actname=none
```

```
chg-scr-dpc:sr=dpc1:npc=128:nsfi=fail:pcst=s:npcst=none
```

Dependencies



CAUTION: Even though gateway screening is in the screen test mode, as defined by the parameters *gwsa=off* and *gwsn=on*, the gateway screening action in the stop action set specified by the *actname* parameter of the screen set *will* be performed at the end of the screening process.

A complete point code must be specified, and must be one, and only one of the four point code parameter combinations: **ni-nc-ncm**; **zone-area-id**; **msa-ssa-sp**; or **npc**.

A new point code entry must be specified by one, and only one of the four point code parameter combinations: **nni-nnc-nncm**, **nzone-narea-nid**, **nmsa-nssa-nsp**, or **nnpc**. If the new point code

entry is a different point code type than the existing point code entry, all subfields of the new point code type must be specified.

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

At least one optional parameter must be specified.

The DPC specified by **ni-nc-ncm**, **zone-area-id**, **msa-ssa-sp**, or the **npc** parameter must already exist in the screening reference or within an existing range of DPCs.

The new DPC or DPC range defined by **ni-nc-ncm**, **zone-area-id**, **msa-ssa-sp**, or the **npc** parameter must not already exist in the screening reference or within an existing range of DPCs.

If the **actname** parameter is specified, the **nsfi-stop** parameter must be specified.

If the **actname** parameter is specified, the **nsr** parameter cannot be specified.

The **actname** parameter value must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the *ACT NAME* field of the **rtrv-gws-actset** command output.

If the **zone=*** parameter is specified, the **area=*** and **id=*** parameters must be specified.

If the **area=*** parameter is specified, the **id=*** parameter must be specified.

If the **msa=*** parameter is specified, the **ssa=*** and **sp=*** parameters must be specified.

If the **ssa=*** parameter is specified, the **sp=*** parameter must be specified.

The next screening function identifier (**nsfi**) and the next screening reference (**nsr**) must point to an existing screen, or the **nsfi** must be equal to **stop** and the **nsr** must not be specified.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc=*** parameter is specified, the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **ncm** parameter is specified as a single value, or a range other than the full range of **000-255**, the **ni** and the **nc** parameters must be specified with a single value.

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range **000-255**.

If the **nnc** parameter is specified as a range, the **nncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **nnc** parameter is specified as a single value or a range, a single value must be specified for the **nni** parameter.

If the **nnc=*** parameter is specified, the **nncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **nncm** parameter is specified as a single value, or a range other than the full range of **000-255**, the **nni** and the **nnc** parameters must be specified with a single value.

If the **nni** parameter is specified as an asterisk (**nni=***) or as a range, the **nnc** and **nncm** parameters must be specified as an asterisk or as the full range **000-255**.

If the **nsfi** parameter has a value other than **stop**, the **nsr** parameter must be specified.

The specified screening reference (**sr**) must already exist in the database.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The spare point code subtype prefix (**s-**) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** and **npcst** parameters cannot be specified for ANSI and ITU-N24 point codes.

Notes

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, **:ni=025&&100** specifies all network indicators for ANSI point codes from 25 to 100.

An asterisk cannot not be specified for a parameter value in this command unless an asterisk was specified for the parameter value in the original **ent-scr-dpc** command.

If the screen set reaches 100% capacity (indicated by the “100% full” message), the system will allow subsequent entries. An error will occur, however, when downloading the screen set to the card. Screen sets should not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** and **npcst** parameters indicate whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

```
chg-scr-dpc:sr=iec:ni=240:nc=010:ncm=010:nni=240:nnc=003:nncm=030
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
CHG-SCR-DPC: SCREEN SET AFFECTED - IEC 25% FULL
CHG-SCR-DPC: MASP A - COMPLTD
;
```

Legend

CHG-SCR-DPC—The command entered that caused this output. This is echoed to the printer as a reference.

SCREEN SET AFFECTED—Identifies the screen set that was affected by the command. The screen set name is provided.

% FULL—Indicates the relative size of the screen set.

chg-scr-isup**Change Allowed ISUP Screening Reference**

Use this command to change the attributes associated with a specific allowed ISUP screening reference in the Allowed ISUP entity set.

Keyword: **chg-scr-isup**

Related Commands: **dlt-scr-isup**, **ent-scr-isup**, **rtrv-scr-isup**

Command Class: Database Administration

Parameters

:isupmt/tupmt= (mandatory)

ISUP message type or TUP message type. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**. The **tupmt** parameter is not valid for SEAS.

Range: **000-255 ***

:sr= (mandatory)

Screening reference. This parameter specifies the point code's unique screening reference name.

Range: **ayyy**

1 alphabetic character followed by up to 3 alphanumeric characters

:actname= (optional)

Action name. This parameter specifies the stop action set name.

Range: *ayyyyy*
 1 alphabetic character followed by up to 5 alphanumeric characters.

Default: Current value

:nisupmt/ntupmt= (optional)

New ISUP message type or new TUP message type. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**. The **ntupmt** parameter is not valid for SEAS.

Range: **000-255 ***

:nsfi= (optional)

This parameter specifies the next screening category that is used in the gateway screening process. If specified, the parameter value must be **stop**.

Range: **stop**
 stop—The gateway screening process ends and the message proceeds through normal routing.

Default: Current value

:nsr= (optional)

Next screening reference (*nsr*). The parameter specifies which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. If the **nsfi=stop** parameter is specified, the **nsr** parameter cannot be specified.

Range: *ayyy*
 1 alphabetic character followed by up to 3 alphanumeric characters

Default: Current value

Example

chg-scr-isup:sr=iec:isupmt=1:nisupmt=1&&2

chg-scr-isup:tupmt=20:ntupmt=1:sr=tu01

Dependencies

At least one optional parameter must be specified.

If the **actname** parameter is specified, the **nsfi=stop** parameter must be specified.

The value of the **actname** parameter must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the *ACT NAME* field of the **rtrv-gws-actset** command output.

The specified **isupmt** or **tupmt** parameter value must already exist in the specified **sr**.

The specified **nisupmt** or **ntupmt** parameter value must not already exist in the specified **sr**.

If the **nsfi** parameter is specified, the parameter value must be **stop**.

If the **nsfi=stop** parameter is specified, the **nsr** parameter cannot be specified.

Notes

An asterisk can be specified for a parameter value in the **chg-scr-isup** and **dlt-scr-isup** commands *only* if that parameter value was specified as an asterisk in the **ent-scr-isup** command to define the parameter value.

A range of values can be specified for the **isupmt** parameter or **tupmt** parameter, by separating the values that define the range by two ampersands (&&); for example, **:isupmt=025&&100** specifies all ISUP message types from **25** to **100**. The value to the left of the && must be less than the value to the right of the && in the range.

TUP does not apply to SEAS. ISUP Message Type is the default.

To use TUP message type screening, an SIO screening reference with **si=04** (TUP) must exist in the SIO table. The TUP screening reference specifies the SIO screening reference as the next screening reference parameter (**nsr**) value.

To use ISUP message type screening, an SIO screening reference with **si=05** (ISUP) must exist in the SIO table. The ISUP screening reference specifies the ISUP SIO screening reference as the next screening reference parameter (**nsr**) value.

To screen for TUP and ISUP message types using a combined ISUP/TUP screen set, the SIO screening reference with **si=4** and the SIO screening reference with **si=5** must be two different screening references. The TUP screening reference specifies the SIO screening reference as the next screening reference parameter (**nsr**) value, and the ISUP screening reference specifies the SIO ISUP screening reference as the next screening reference parameter (**nsr**) value.

Output

When a screening reference is specified that is not yet associated with a screen set, the following output appears:

```
chg-scr-isup:sr=is01:isupmt=2:nsfi=stop:nisupmt=4
rlghncxa03w 04-01-14 16:45:50 EST EAGLE 31.3.0
CHG-SCR-ISUP: MASP A - COMPLTD
;
```

When a screening reference is specified that is already associated with one or more screen sets, the following output appears:

```
chg-scr-isup:sr=is02:isupmt=9:nsfi=stop:nisupmt=8
tekelecstp 04-02-17 16:35:56 EST EAGLE 31.4.0
Extended Processing Time Required -- Please Wait
Notice: The number of screensets affected is 2.
CHG-SCR-ISUP: SCREEN SET AFFECTED - ist1 1% FULL
CHG-SCR-ISUP: SCREEN SET AFFECTED - ist2 1% FULL
CHG-SCR-ISUP: MASP A - COMPLTD
;
```

chg-scr-opc

Change Allowed OPC

Use this command to change the attributes associated with a specific screening reference in the allowed OPC category. Attributes that can be changed are the point code, next screening function identifier and, next screening reference.

Keyword: **chg-scr-opc**

Related Commands: **dlt-scr-opc**, **ent-scr-opc**, **rtrv-scr-opc**

Command Class: Database Administration

Parameters

NOTE: At least one of these parameters must be specified: nnc, nncm, nni, nsfi, nsr.

:sr= (mandatory)

Screening reference. This parameter specifies the point code's unique screening reference name.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

:actname= (optional)

Action name. This parameter specifies the name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: *ayyyyy*, **none**
 1 alphabetic character followed by up to 5 alphanumeric characters.
none—Remove an existing gateway screening stop action set from a gateway screening rule.

:area= (optional)

ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:id= (optional)

ITU international ID. This parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7 ***

:msa= (optional)

24-bit ITU-national main signaling area (*msa*) value. This parameter specifies the main signaling area (*msa*) of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:narea= (optional)

New ITU-international area value. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

Default: Current value

:nc= (optional)

Network cluster (*nc*) value. This parameter specifies one or more *nc* values for the network indicator (*ni*) and network cluster member (*ncm*) values specified in the **ni** and **ncm** parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:ncm= (optional)

Network cluster member (*ncm*) value. This parameter specifies one or more *ncm* values for the network indicator (*ni*) and network cluster (*nc*) values identified in the **ni** and **nc** parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 ***

:ni= (optional)

Network indicator (*ni*) value. This parameter specifies one or more *ni* values for the network cluster (*nc*) and network cluster member (*ncm*) values identified in the **nc** and **ncm** parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 ***

:nid= (optional)

New ITU-international ID value. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7 ***

Default: Current value

:nmsa= (optional)

New 24-bit ITU-national main signaling area (*nmsa*) value. This parameter specifies the new main signaling area (*msa*) of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000–255**.

Range: 000-255 *

:nnc= (optional)

New network cluster (*nnc*). This parameter specifies one or more *nnc* values for the screening reference specified in the **sr** parameter. It specifies the new network cluster (*nc*) of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from 000–255.

Range: 000-255 *

Default: Current value

:nncm= (optional)

New network cluster member (*nncm*). This parameter specifies one or more *ncm* values for the screening reference specified in the **sr** parameter. It specifies the new network cluster member (*ncm*) of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from 0–255.

Range: 0-255 *

Default: Current value

:nni= (optional)

New network identifier (*nni*). This parameter specifies one or more *nni* values for the screening reference specified in the **sr** parameter. It specifies the new network indicator (*ni*) of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from 000–255.

Range: 0-255 *

Default: Current value

:nnpc= (optional)

New ITU-national point code. An asterisk (*) indicates the full range of values from 00000–16383.

NOTE: Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you use multiple-part ITU national point codes, see "Converting ITU National Point Code Formats" for information on converting the point code format.

Range: 00000-16383 *

Default: Current value

:npc= (optional)

ITU national point code. An asterisk (*) indicates the full range of values from 00000–16383.

Range: 00000-16383 *

:npcst= (optional)

New point code subtype. This parameter indicates whether the specified new ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range: none, s

Default: none

:nsfi= (optional)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range: blkdp, blkopc, cgpa, dp, sio, stop

blkdp—Blocked DPC is the next screening category.

blkopc—Blocked OPC is the next screening category.

cgpa—Allowed CGPA is the next screening category.

dp—Allowed DPC is the next screening category.

sio—Allowed SIO is the next screening category.

stop—The gateway screening process ends and the message proceeds through normal routing.

Default: Current value

:nsp= (optional)

New 24-bit ITU national signaling point (*nsp*). This parameter specifies the new signaling point (*sp*) of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: 000-255 *

:nsr= (optional)

Next screening reference (*nsr*). This parameter indicates which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. If the **nsfi=stop** parameter is specified, the **nsr** parameter cannot be specified.

Range: ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Default: Current value

:nssa= (optional)

New 24-bit ITU national sub signaling area (*nssa*). This parameter specifies the new sub signaling area (*ssa*) of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: 000-255 *

:nzone= (optional)

New ITU-international zone. This parameter specifies a new zone for the point code represented by *zone-area-id*. An asterisk (*) indicates the full range of values from **0-7**.

Range: 0-7, *, C

Default: Current value

:pcst= (optional)

Point code subtype. This parameter specifies whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (**s**).

Range: none, s

Default: none

:sp= (optional)

24-bit ITU national signaling point (*sp*). This parameter specifies the signaling point (*sp*) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: 000-255 *

:ssa= (optional)

24-bit ITU national sub signaling area (*ssa*). This parameter specifies the sub signaling area (*ssa*) in the point code represented by the format *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: 000-255 *

:zone= (optional)

ITU international zone. This parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0-7**.

Range: 0-7, *

Example

chg-scr-opc:sr=iec:ni=240:nc=010:ncm=010:nni=240:nnc=010:nncm=020


```
chg-scr-
opc:sr=iec:ni=240:nc=010:ncm=010:nni=240:nnc=010:nncm=020:nsfi=st
op:actname=cncf
chg-scr-opc:sr=iec:nsfi=dpc:nsr=wr2
chg-scr-opc:sr=opc1:npc=128:nsfi=fail:pcst=s:npcst=none
```

Dependencies



CAUTION: Even though gateway screening is in the screen test mode, as defined by the parameters **gwsa=off** and **gwsn=on**, the gateway screening action in the stop action set specified by the **actname** parameter of the screen set *will* be performed at the end of the screening process.

A complete point code must be specified, and must be one, and only one of the four point code parameter combinations: **ni-nc-ncm**; **zone-area-id**; **msa-ssa-sp**; or **npc**.

A new point code entry must be specified by one, and only one of the four point code parameter combinations: **nni-nnc-nncm**, **nzone-narea-nid**, **nmsa-nssa-nsp**, or **nnpc**. If the new point code entry is a different point code type than the existing point code entry, all subfields of the new point code type must be specified.

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

At least one optional parameter must be specified.

The OPC specified by **ni-nc-ncm**; **zone-area-id**, **msa-ssa-sp**, or the **npc** parameter must not already exist in the screening reference or within an existing range of OPCs.

The OPC specified by **ni-nc-ncm**; **zone-area-id**, **msa-ssa-sp**, or the **npc** parameter must not already exist in the screening reference or within an existing range of OPCs.

The new OPC or OPC range defined by **ni-nc-ncm**, **zone-area-id**, **msa-ssa-sp**, or the **npc** parameter must not already exist in the screening reference or within an existing range of OPCs.

If the **actname** parameter is specified, the **nsfi-stop** parameter must be specified.

If the **actname** parameter is specified, the **nsr** parameter cannot be specified.

The **actname** parameter value must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the *ACT NAME* field of the **rtrv-gws-actset** command output.

If **zone=*** is specified, **area=*** and **id=*** must be specified.

If the **area=*** parameter is specified, the **id=*** parameter must be specified.

If the **msa=*** parameter is specified, the **ssa=*** and **sp=*** parameters must be specified.

If the **ssa=*** parameter is specified, the **sp=*** parameter must be specified.

The next screening function identifier (**nsfi**) and the next screening reference (**nsr**) must point to an existing screen, or the **nsfi** must be equal to **stop** and the **nsr** must not be specified.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc=*** parameter is specified, the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **ncm** parameter is specified as a single value, or a range other than the full range of **000-255**, the **ni** and the **nc** parameters must be specified with a single value.

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range **000-255**.

If the **nnc** parameter is specified as a range, the **nncm** parameter must be specified as an asterisk or as the full range **000–255**

If the **nnc** parameter is specified as a single value or a range, a single value must be specified for the **nni** parameter.

If the **nnc=*** parameter is specified, the **nncm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **nncm** parameter is specified as a single value, or a range other than the full range of **000–255**, the **nni** and the **nnc** parameters must be specified with a single value.

If the **nni** parameter is specified as an asterisk (**nni=***) or as a range, the **nnc** and **nncm** parameters must be specified as an asterisk or as the full range **000–255**.

If the **nsfi** parameter has a value other than **stop**, the **nsr** parameter must be specified.

The specified screening reference (**sr**) must already exist in the database.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The spare point code subtype prefix (**s-**) is not supported for ANSI point codes (parameters **ni**, **nc**, **nncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** parameter cannot be specified for ANSI and ITU-N24 point codes.

Notes

A range of values is specified by separating the values that define the range by two ampersands (**&&**); for example, **:ni=025&&100** specifies all network indicators for ANSI point codes from **25** to **100**.

An asterisk cannot not be specified for a parameter value in this command unless an asterisk was specified for the parameter value in the original **ent-scr-opc** command.

If the screen set reaches 100% capacity (indicated by the “100% full” message), the system will allow subsequent entries. An error will occur, however, when downloading the screen set to the card. Screen sets should not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** and **npcst** parameters indicate whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

```
chg-scr-opc:sr=iec:ni=240:nc=010:nncm=010:nni=240:nnc=010:nncm=020
rlghncxa03w 04-01-07 12:05:33 EST EAGLE 31.3.0
CHG-SCR-OPC: SCREEN SET AFFECTED - IEC 25% FULL
CHG-SCR-OPC: MASP A - COMPLTD
;
```

Legend

CHG-SCR-OPC—The command entered that caused this output. This is echoed to the printer as a reference.

SCREEN SET AFFECTED—Identifies the screen set that was affected by the command. The screen set name is provided.

% FULL—Indicates the relative size of the screen set.

chg-scr-sio**Change Allowed SIO**

Use this command to change a specific screening reference in the allowed service indicator octet category. Attributes that may be changed are the network indicator, service indicator, message priority, heading codes, next screening function identifier, and next screening reference.

NOTE: To use TUP message type screening, an SIO screening reference with si=04 (TUP) must be defined in the SIO table. This SIO screening reference is specified as the next screening reference (nsr) value in an ISUP screening reference for screening TUP message types.

Keyword: chg-scr-sio

Related Commands: dlt-scr-sio, ent-scr-sio, rtrv-scr-sio

Command Class: Database Administration

Parameters

At least one of these parameters must be specified: **nh0** , **nh1**, **nnic**, **npri**, **nsfi**, **nsi**, **nsr**.

:nic= (mandatory)

Network indicator code. This parameter specifies whether the message originated from an international (**0**) or national (**2**) network. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0-3**.

Range: **0-3 ***

:pri= (mandatory)

Message priority. This parameter specifies the new message priority in the SIO. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0-3**.

Range: **0-3 ***

Default: Current value

:si= (mandatory)

Service indicator. This parameter specifies the type of message. The values are defined in Telcordia TR-NWT-000246.

Range: **00, 01- 15**

:sr= (mandatory)

Screening reference. This parameter specifies the point code's unique screening reference name.

Range: ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

:actname= (optional)

Action name. This parameter specifies the name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: ayyyyy

1 alphabetic character followed by up to 5 alphanumeric characters.

none—remove an existing gateway screening stop action set from a gateway screening rule.

:h0= (optional)

This parameter is mandatory if the service indicator (**si**) value is **00**, **01**, **02**, or **03**. Otherwise, the **h0** parameter is undefined.

Range: **0-15 ***

Default: Current value or undefined

:h1= (optional)

This parameter is mandatory if the service indicator (**si**) value is **00**, **01**, **02**, or **03**. Otherwise, the **h1** parameter is undefined.

Range: **0-15 ***

Default: Current value or undefined

:nh0= (optional)

New H0 heading code. This parameter specifies a new H0 heading code for the screening reference specified in the **sr** parameter. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0-15**.

Range: **0-15 ***

Default: Current value

:nh1= (optional)

New H1 heading code. This parameter specifies a new H1 heading code for the screening reference specified in the **sr** parameter. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0-15**.

Range: **0-15 ***

Default: Current value

:nnic= (optional)

New network indicator code. This parameter specifies the new **nic** for the screening reference specified. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0-3**.

Range: **0-3 ***

Default: Current value

:npri= (optional)

New message priority. This parameter specifies the new message priority in the SIO. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0-3**.

Range: **0-3 ***

Default: Current value

:nsfi= (optional)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range: **blkdpc, cdpa, cgpa, destfld, isup, stop**

blkdpc—Blocked DPC is the next screening category.

cdpa—Allowed CDPA is the next screening category.

cgpa—Allowed CGPA is the next screening category.

destfld—Allowed destination field (DESTFLD) is the next screening category.

isup—ISUP message type (ISUP) is the next screening category.

stop—The gateway screening process ends and the message proceeds through normal routing.

Default: Current value

:nsi= (optional)

New service indicator. This parameter specifies the type of message for the specified screening reference. The values are defined in Telcordia TR-NWT-000246.

Range: **0- 15**

Default: Current value

:nsr= (optional)

Next screening reference (*nsr*). This parameter specifies which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. If the **nsfi=stop** parameter is specified, the **nsr** parameter cannot be specified.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

Default: Current value

Example

```
chg-scr-sio:sr=iec:nic=1:si=1:h0=02:h1=03:pri=*:nh0=03&&04
```

```
chg-scr-sio:sr=iec:nic=1:si=3:pri=2:npri=1
```

```
chg-scr-sio:sr=iec:nic=1:si=3:pri=3:nnic=2:nsfi=stop:actname=copy
```

Dependencies



CAUTION: Even though gateway screening is in the screen test mode, as defined by the parameters **gwsa=off** and **gwsn=on**, the gateway screening action in the stop action set specified by the **actname** parameter of the screen set *will* be performed at the end of the screening process.

At least one attribute must be changed.

If asterisk values or ranges are specified for the new heading codes, nothing that matches the entire combination of **nic/nnic**, **si/nsi**, and the specified new heading codes and priorities can already exist in the allowed SIO category for the screening reference.

An asterisk cannot be specified for a parameter value in this command unless an asterisk was specified for the parameter value in the original **ent-scr-sio** command.

If the **actname** parameter is specified, the **nsfi-stop** parameter must be specified.

If the **actname** parameter is specified, the **nsr** parameter cannot be specified.

The **actname** parameter value must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the *ACT NAME* field of the **rtrv-gws-actset** command output.

The next screening function identifier (**nsfi**) and the next screening reference (**nsr**) must point to an existing screen, or the **nsfi** must be equal to **stop** and the **nsr** must not be specified.

Use Table 5-26 to determine an acceptable combination of the **nsfi** (new entries) and **si** parameters:

Table 5-26. Acceptable **nsfi** and **si** parameter combinations (**chg-scr-sio**)

If the nsfi parameter is...	...the si parameter must be:
destfl	00
cdpa	03
cgpa	03

If the **si** parameter value is greater than 2, and the **nsi** parameter value is greater than 3, the **nh0** and **nh1** parameters are used to enter the required **h0** and **h1** parameter values.

Table 5-27 shows the valid combinations of the **h0/h1** and **nh0/nh1** parameters

Table 5-27. Valid combinations for the **h0/h1** and **nh0/nh1** parameters (**chg-scr-sio**)

If the h0 (nh0) parameter is specified as:	The h1 (nh1) parameter can be specified as:
A single value	A single value
A single value	A range
A single value	An asterisk (*) entry
A range	An asterisk (*) entry
An asterisk (*) entry	An asterisk (*) entry

The **nh0** and **nh1** parameters cannot be specified if the **nsi** parameter is specified and is not equal to **00**, **01**, or **02**.

Use Table 5-28 to determine additional acceptable combinations of specified parameter values

Table 5-28. Additional Valid chg-scr-sio Parameter Combinations

si value:	nic value	pri value	h0 value:	h1 value:
0	s, *	s, *, r	s	s, *, r
0	s, *	s, *, r	*, r	*
1, 2	s, *	s, *, r	s	s, *, r
1, 2	s, *	s, *, r	*, r	*
3-15	s, *	s, *, r	u	u
Legend s = single value r = range * = asterisk u = unspecified				

If the **nh0** or **nh1** parameters are specified, the parameter values must be valid with the **h0** or **h1** values currently in the database.

The **h0**, **h1**, **nh0**, and **nh1** parameters cannot be specified if the **si** parameter is not equal to **00**, **01**, or **02**, and the **nsi** parameter is not specified.

The **nnic**, **nsi**, **pri**, and **nh0/nh1** parameters must not already exist in the allowed SIO category.

The **sr**, **nic**, **si**, **pri**, and **h0/h1** parameters for which attributes are to be changed must be in the allowed SIO category.

Notes

If the screen set reaches 100% capacity (indicated by the “100% full” message), the system allows subsequent entries. An error occurs, however, when downloading the screen set to the card. Ensure

that screen sets do not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

To use TUP message type screening, an SIO screening reference with **si=04** (TUP) must be defined in the SIO table. To use ISUP message type screening, a rule with **si=05** (ISUP) must be defined in the SIO table. To use a combined ISUP/TUP screen set for TUP and ISUP message screening, the SIO screening reference with **si=4** and the SIO screening reference with **si=5** must be two different screening references.

A network indicator value of **1** or **3** can be used in private networks.

A network indicator value of **3** can be used in some national networks to broaden the identity of a national network, but is usually spare.

Output

chg-scr-sio:sr=iec:nic=1:si=3:pri=2:npri=1

```
rlghncxa03w 04-01-14 16:45:50 EST EAGLE 31.3.0
CHG-SCR-SIO: SCREEN SET AFFECTED - SS01 25% FULL
CHG-SCR-SIO: SCREEN SET AFFECTED - SS04 35% FULL
CHG-SCR-SIO: MASP A - COMPLTD
;
```

Legend

CHG-SCR-SIO—The command entered that caused this output. This is echoed to the printer as a reference.

SCREEN SET AFFECTED—Identifies the screen set that was affected by the command. The screen set name is provided.

% FULL—Indicates the relative size of the screen set.

chg-scr-tt

Change Allowed Translation Type

Use this command to change the attributes of a specific screening reference in the allowed translation type category. Attributes that can be changed are the translation type, next screening function identifier and next screening reference.

Keyword: **chg-scr-tt**

Related Commands: **dlt-scr-tt**, **ent-scr-tt**, **rtrv-scr-tt**

Command Class: Database Administration

Parameters

:sr= (mandatory)

Screening reference. This parameter specifies the point code's unique screening reference name.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

:type= (mandatory)

Translation type. This parameter specifies the global title translation type value in the called party address. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0–255**.

Range: **000-255 ***

:actname= (optional)

Action name. This parameter specifies the name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: ayyyyy, none

1 alphabetic character followed by up to 5 alphanumeric characters.

none—remove an existing gateway screening stop action set from a gateway screening rule.

:nsfi= (optional)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range: cdpa, stop

cdpa—Allowed called party address is the next screening category.

stop—The gateway screening process ends and the message proceeds through normal routing.

Default: Current value

:nsr= (optional)

Next screening reference (*nsr*). This parameter specifies which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. If the **nsfi=stop** parameter is specified, the **nsr** parameter cannot be specified.

Range: ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Default: Current value

:ntype= (optional)

New translation type. The translation type identifies the global title translation type value in the called party address. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from 0–255.

Range: 000-255 *

Default: Current value

Example

```
chg-scr-tt:sr=iec:type=012:ntype=014
```

```
chg-scr-tt:sr=iec:type=012:ntype=014:nsfi=stop:actname=none
```

Dependencies

CAUTION: Even though gateway screening is in the screen test mode, as defined by the parameters **gwsa=off** and **gwsn=on**, the gateway screening action in the stop action set specified by the **actname** parameter of the screen set *will* be performed at the end of the screening process.

At least one attribute must be changed.

The new translation type cannot already exist.

If an asterisk is specified for the new allowed **type**, no other translation types can exist in the screening table.

If the **actname** parameter is specified, the **nsfi=stop** parameter must be specified.

If the **actname** parameter is specified, the **nsr** parameter cannot be specified.

The **actname** parameter value must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the *ACT NAME* field of the **rtrv-gws-actset** command output.

The next screening function identifier and the next screening to be added must point to one or more existing screening references.

If the **nsfi=stop** parameter is specified, the **nsr** parameter cannot be specified.

If the **nsfi** parameter has a value other than **stop**, the **nsr** parameter must be specified.

If the screening reference exists, the single value or range specified for the allowed **type** to be added to the TT screen for the allowed TT screening reference must not already exist in that TT screen.

The screening reference and translation type for which the attributes are to be changed must exist.

Notes

If the screen set reaches 100% capacity (indicated by the “100% full” message), the system allows subsequent entries. An error occurs, however, when downloading the screen set to the card. Ensure that screen sets do not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

An asterisk can be specified for a parameter value in the **chg-scr-tt** and **dlt-scr-tt** commands *only* if that parameter value was specified as an asterisk in the **ent-scr-tt** command to define the parameter value.

Output

chg-scr-tt:sr=iec:type=012:ntype=014

```
rlghncxa03w 04-01-07 12:05:33 EST EAGLE 31.3.0
CHG-SCR-TT: SCREEN SET AFFECTED - IEC 25% FULL
CHG-SCR-TT: MASP A - COMPLTD
;
```

Legend

CHG-SCR-TT—The command entered that caused this output. This is echoed to the printer.

SCREEN SET AFFECTED—Identifies the screen set that was affected by the command. The screen set name is provided.

% FULL—Indicates the relative size of the screen set.

chg-scrset

Change Screen Set

Use this command to change the attributes of a screen set. A screen set is a group of screening references that can be assigned to a linkset. It is defined by a name and a pointer to the first screening reference of a screen set.

Keyword: **chg-scrset**

Related Commands: **dlt-scrset**, **ent-scrset**, **rtrv-scrset**

Command Class: Database Administration

Parameters

At least one of these parameters must be specified: **nsrn**, **nsfi**, **nsr**.

:scrn= (mandatory)

Screen set name. Each screening reference must have a unique name.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

:actname= (optional)

Action name. This parameter specifies the name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: *ayyyyy*

1 alphabetic character followed by up to 5 alphanumeric characters.

none—remove an existing gateway screening stop action set from a gateway screening rule.

:destfld= (optional)

This parameter turns on and off the automatic allowed affected destination screening for network management messages against the routing table, self point codes, and capability point codes. When this parameter is **on**, the automatic screening is applied at the end of the provisioned screen set.

Range: **yes, no**

Default: Current value

:nscrn= (optional)

New screen set name.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

Default: Current value

:nsfi= (optional)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range: **blkdpc, blkopc, dpc, opc, sio, stop**

blkdpc—Blocked DPC is the next screening category.

blkopc—Blocked OPC is the next screening category.

dpc—Allowed DPC is the next screening category.

opc—Allowed OPC is the next screening category.

sio—Allowed SIO is the next screening category.

stop—The gateway screening process ends and the message proceeds through normal routing.

Default: Current value

:nsr= (optional)

Next screening reference. The parameter indicates which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. If **nsfi=stop**, the **nsr** parameter cannot be specified.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

Default: Current value

Example

chg-scrset:scrn=ss01:nsfi=opc:nsr=iec

chg-scrset:scrn=ss02:nsfi=stop:nscrn=ss03

chg-scrset:scrn=ss02:nscrn=ss03:nsfi=stop:actname=copy

chg-scrset:scrn=ss02:nsfi=stop:nscrn=ss03:destfld=no

Dependencies

The new screen set name cannot be in use by another screen set.

If the **actname** parameter is specified, the **nsfi=stop** parameter must be specified.

If the **actname** parameter is specified, the **nsr** parameter cannot be specified.

The **actname** parameter value must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the *ACT NAME* field of the **rtrv-gws-actset** command output.

The next screening function identifier (**nsfi**) and the next screening reference (**nsr**) must point to an existing screen, or the **nsfi** must be equal to **stop** and the **nsr** must not be specified.

If the **nsfi** parameter has a value other than **stop**, the **nsr** parameter must be specified.

An existing screen set must be removed from all linksets before it can be changed.

If the **nscrn** parameter is specified, the **scrn** parameter value cannot be referenced by a linkset.

If the next screening function identifier (**nsfi**) and the next screening reference (**nsr**) does not point to an existing screen, the **nsfi** must be equal to **stop** and the **nsr** parameter must not be specified.

At least one optional parameter must be specified.

Notes

If the screen set reaches 100% capacity (indicated by the “100% full” message), the system allows subsequent entries. An error occurs, however, when downloading the screen set to the card. Screen sets should not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

The system validates the command to verify that the specified screen set name is in use.

Output

```
chg-scrset:scrn=ss01:nsfi=opc:nsr=iec
rlghncxa03w 04-01-07 09:35:10 EST EAGLE 31.3.0
CHG-SCRSET:  SCREEN SET AFFECTED - SS01  25% FULL
CHG-SCRSET:  MASP A - COMPLTD
;
```

Legend

CHG-SCRSET—The command entered that caused this output. This is echoed to the printer as a reference.

SCREEN SET AFFECTED—Identifies the screen set that was affected by the command. The screen set name is shown.

% FULL—Indicates the relative size of the screen set.

chg-secu-dflt

Change System-Wide Security-Related Defaults

Use this command to change various system-wide, security-related defaults, such as:

- The default password aging interval
- The default user ID aging interval
- Whether to allow or prohibit multiple simultaneous logins with the same user ID
- Control of the password-complexity checking algorithm
- Login warning message text

Keyword: **chg-secu-dflt**

Related Commands: **ent-user**, **login**, **rtrv-secu-dflt**

Command Class: Security Administration

Parameters

:alpha= (optional)

This parameter specifies the minimum number of alphabetic characters (a–z) required in a new password.

Range: 0-12

Default: Current value

System

Default: 1

:minlen= (optional)

Minimum password length. This parameter specifies the minimum number of characters that must be in a user password.

Range: 1-12

Default: Current value

System

Default: 8

:multlog= (optional)

This parameter specifies whether multiple simultaneous logins can be performed with a user ID.

Range: yes, no

yes — A user ID can be logged in to more than one terminal at the same time.

no — A user ID can be logged in to only one terminal at a time.

Default: Current value

System

Default: no

:num= (optional)

Number. This parameter specifies the minimum number of numeric characters (0–9) required in a new password.

Range: 0-12

Default: Current value

System

Default: 1

:page= (optional)

Password age. This parameter specifies the default password aging interval for newly created user IDs. If the **page** parameter is specified in the **ent-user** command, the system uses that value; otherwise, the system uses the value specified here.

Range: 0-999

Default: Current value

System

Default: 90

:punc= (optional)

Punctuation. This parameter specifies the minimum number of punctuation characters required in a new password. A punctuation character is any character that is not an alphabetic or numeric character, including spaces.

Range: 0-12

Default: Current value

System

Default: 1


```
chg-secu-dflt:wrnln=14:wrntx=""  
chg-secu-dflt:wrnln=15:wrntx=""  
chg-secu-dflt:wrnln=16:wrntx=""  
chg-secu-dflt:wrnln=17:wrntx=""  
chg-secu-dflt:wrnln=18:wrntx=""  
chg-secu-dflt:wrnln=19:wrntx=""  
chg-secu-dflt:wrnln=20:wrntx=""
```

Dependencies

At least one optional parameter must be specified.

The sum of the values specified for the **alpha**, **num**, and **punc** parameters must not be greater than 12.

The **wrnln** and **wrntx** parameters must be specified together in this command.

Notes

The warning message lines are displayed in the scroll area in order after a successful login; that is, line 1, line 2, and so on.

Any warning message line provisioned as a zero-length null string (" ") is not displayed in the scroll area during login.

Specify at least one blank (" ") to cause a blank line to be displayed as part of the warning message.

The following message is the default message delivered with every system:

```
NOTICE: This is a private computer system.  
Unauthorized access or use may lead to prosecution.
```

Even though the minimum number of characters allowed in a password is specified using the **minlen** parameter, the password also must satisfy the minimum value requirements specified on the **alpha**, **num**, and **punc** parameters. The actual minimum password length is the greater of either the value specified on the **minlen** parameter or the total number of characters specified on the **alpha**, **num**, and **punc** parameters.

For example, if **chg-secu-dflt:minlen=5:alpha=2:num=2:punc=2** is entered, the minimum number of password characters specified on the **minlen** parameter is 5. But the total number of characters specified in the **alpha**, **num**, and **punc** parameters is 6 (**alpha+num+punc**). The effective minimum number of characters is actually 6 rather than the 5 specified on the **minlen** parameter.

Output

The following commands create the warning message that is shown in the output after the commands. The notes that are not bold in parentheses after some commands explain the displayed output. The warning message is displayed after the user enters the login command and a password. The output example shows the command output, a login command and password prompt, and the warning message that was created with these commands. See the Notes section for this command for additional information about entering this command.

```
chg-secu-
dflt:wrnln=1:wrntx="*****"

chg-secu-dflt:wrnln=2:wrntx="* notice: this is a private computer system. *"

chg-secu-dflt:wrnln=3:wrntx="* unauthorized access or use may lead to *"

chg-secu-dflt:wrnln=4:wrntx="* prosecution. *"

chg-secu-dflt:wrnln=5:wrntx="* 05-07-01 notice!!! eagle will be upgraded between *"

chg-secu-dflt:wrnln=6:wrntx="* the hours of 2am-3am on 05-07-01. *"

chg-secu-dflt:wrnln=7:wrntx="* *"

chg-secu-dflt:wrnln=8:wrntx="* today's happy message: go with tekelec!! *"

chg-secu-
dflt:wrnln=9:wrntx="*****"

chg-secu-dflt:wrnln=10:wrntx=" " (set to 1 space to cause blank line before login history is
displayed)

chg-secu-dflt:wrnln=11:wrntx=""

chg-secu-dflt:wrnln=12:wrntx=""

chg-secu-dflt:wrnln=13:wrntx=""

chg-secu-dflt:wrnln=14:wrntx="" (remaining lines are provisioned to "" to cause
chg-secu-dflt:wrnln=15:wrntx="" them not to display as part of the message
chg-secu-dflt:wrnln=16:wrntx="" after successful login)
chg-secu-dflt:wrnln=17:wrntx=""
chg-secu-dflt:wrnln=18:wrntx=""
chg-secu-dflt:wrnln=19:wrntx=""

chg-secu-dflt:wrnln=20:wrntx=""
    rlghncxa03w 04-01-10 11:43:04 EST EAGLE 31.3.0
    CHG-SECU-DFLT: MASP A - COMPLTD
;

LOGIN:UID=eagle
PASSWORD:<password is not displayed>
```

```
*****
* NOTICE: This is a private computer system. *
* Unauthorized Access or use may lead to *
* prosecution. *
* 11/3/00 Notice!!! Eagle will be upgraded between *
* the hours of 2am-3am on 11/11/00. *
*
```

```

* Today's happy message: Go with Tekelec!! *
*****

0 LOGIN failures since last successful LOGIN
Last successful LOGIN was on port 3 on 04-01-06 @ 12:12:35
;

```

chg-secu-trm

Change Terminal Access Rights

Use this command to configure the access rights for a terminal. Only a user with system security administration authority can change a terminal's access rights. Access rights determine whether a terminal or port has command access to the system for the different command classes.

Keyword: **chg-secu-trm**

Related Commands: **rtrv-secu-trm**

Command Class: Security Administration

Parameters

:trm= (mandatory)

Terminal ID. This parameter specifies the port to be configured.

Range: **1-16**

:all= (optional)

All non-configurable command classes. This parameter specifies whether to configure all of the command classes.

Range: **yes, no**

Default: Current value

System

Default: **no**

:cc1= (optional)

This parameter specifies a configurable command class name (*ayy*), and an indicator (**-yes** or **-no**) stating whether the command class is allowed for the specified terminal. The parameter value is specified in the format *ayy -yes* or *ayy -no*.

Range: *ayy*

1 alphabetic character followed by 2 alphanumeric characters.

A dash and the indicator value follow the command class name:

-no—This command is not allowed for the specified terminal.

-yes—This command is allowed for the specified terminal.

:cc2= (optional)

Configurable command class name (*ayy*), and an indicator **-yes** or **-no** to specify whether the command class is allowed or not allowed for the specified terminal. The parameter value is specified in the format *ayy -yes* or *ayy -no*.

Range: *ayy*

1 alphabetic character followed by 2 alphanumeric characters.

A dash and the indicator value follow the command class name:

-no—This command is not allowed for the specified terminal.

-yes—This command is allowed for the specified terminal.

:cc3= (optional)

Configurable command class name (*ayy*), and an indicator **-yes** or **-no** to specify whether the command class is allowed or not allowed for the specified terminal. The parameter value is specified in the format *ayy -yes* or *ayy -no*.

Range: *ayy*
1 alphabetic character followed by 2 alphanumeric characters.
A dash and the indicator value follow the command class name:
-no—This command is not allowed for the specified terminal.
-yes—This command is allowed for the specified terminal.

:cc4= (optional)

Configurable command class name (*ayy*), and an indicator **-yes** or **-no** to specify whether the command class is allowed or not allowed for the specified terminal. The parameter value is specified in the format *ayy -yes* or *ayy -no*.

Range: *ayy*
1 alphabetic character followed by 2 alphanumeric characters.
A dash and the indicator value follow the command class name:
-no—This command is not allowed for the specified terminal.
-yes—This command is allowed for the specified terminal.

:cc5= (optional)

Configurable command class name (*ayy*), and an indicator **-yes** or **-no** to specify whether the command class is allowed or not allowed for the specified terminal. The parameter value is specified in the format *ayy -yes* or *ayy -no*.

Range: *ayy*
1 alphabetic character followed by 2 alphanumeric characters.
A dash and the indicator value follow the command class name:
-no—This command is not allowed for the specified terminal.
-yes—This command is allowed for the specified terminal.

:cc6= (optional)

Configurable command class name (*ayy*), and an indicator **-yes** or **-no** to specify whether the command class is allowed or not allowed for the specified terminal. The parameter value is specified in the format *ayy -yes* or *ayy -no*.

Range: *ayy*
1 alphabetic character followed by 2 alphanumeric characters.
A dash and the indicator value follow the command class name:
-no—This command is not allowed for the specified terminal.
-yes—This command is allowed for the specified terminal.

:cc7= (optional)

Configurable command class name (*ayy*), and an indicator **-yes** or **-no** to specify whether the command class is allowed or not allowed for the specified terminal. The parameter value is specified in the format *ayy -yes* or *ayy -no*.

Range: *ayy*
1 alphabetic character followed by 2 alphanumeric characters.
A dash and the indicator value follow the command class name:
-no—This command is not allowed for the specified terminal.
-yes—This command is allowed for the specified terminal.

:cc8= (optional)

Configurable command class name (*ayy*), and an indicator **-yes** or **-no** to specify whether the command class is allowed or not allowed for the specified terminal. The parameter value is specified in the format *ayy -yes* or *ayy -no*.

Range: *ayy*
1 alphabetic character followed by 2 alphanumeric characters.
A dash and the indicator value follow the command class name:
-no—This command is not allowed for the specified terminal.
-yes—This command is allowed for the specified terminal.

:db= (optional)
Database Administration class. Specifies whether the Database Administration class of commands is allowed.
Range: **yes, no**
Default: Current value
System
Default: **no**

:dbg= (optional)
Debug class. Specifies whether the Debug class of commands is allowed.
Range: **yes, no**
Default: Current value
System
Default: **no**

:link= (optional)
Link Maintenance class. Specifies whether the Link Maintenance class of commands is allowed.
Range: **yes, no**
Default: Current value
System
Default: **no**

:lnpbas= (optional)
LNP Basic class. Specifies whether the LNP Basic class of commands is allowed.
Range: **yes, no**
Default: Current value
System
Default: **no**

:lnpdb= (optional)
LNP Database class. Specifies whether the LNP Database class of commands is allowed.
Range: **yes, no**
Default: Current value
System
Default: **no**

:lnpsub= (optional)
LNP Subscription class. Specifies whether the LNP Subscription class of commands is allowed.
Range: **yes, no**
Default: Current value
System
Default: **no**

:pu= (optional)
Program Update class. Specifies whether the Program Update class of commands is allowed.
Range: **yes, no**
Default: Current value
System
Default: **no**

:sa= (optional)

Security Administration class. Specifies whether the Security Administration class of commands is allowed.

Range: **yes, no**

Default: Current value

System

Default: **no**

:sys= (optional)

System Maintenance class. Specifies whether the System Maintenance class of commands is allowed.

Range: **yes, no**

Default: Current value

System

Default: **no**

Example

```
chg-secu-trm:trm=3:all=yes
```

```
chg-secu-trm:trm=3:sys=yes:lnpbas=yes:lnpdb=no:lnpsub=no
```

```
chg-secu-trm:trm=3:sys=yes:lnpbas=yes:lnpdb=no:lnpsub=no:cc1=u04-  
no:cc3=u11-yes
```

Dependencies

This command is not supported on telnet terminals (terminal IDs 17-40).

At least one optional parameter must be specified.

Access rights for a terminal cannot be changed while a user is logged on to that terminal.

At least two terminal ports must be configured to have security administration authority.

The Command Class Management feature must be enabled before configurable command class name parameters (**cc1**, **cc2**, **cc3**, **cc4**, **cc5**, **cc6**, **cc7**, **cc8**) can be specified.

The value specified for a configurable command class name must be a default or provisioned command class name in the CCNAMES table.

If the **all** parameter is specified and any of the individual command classes are also specified, the individual command classes take precedence.

If the **lnpbas**, **lnpdb**, and **lnpsub** parameters is specified, the LNP feature must be turned on (see the **enable-ctrl-feat** command).

If the **all=yes** parameter is specified, but the LNP feature is not turned on, the **lnpbas**, **lnpdb**, and **lnpsub** parameters default to a **no** value for the user.

Notes

Up to 8 configurable command class name parameters can be entered in one command. Additional commands can be entered to change access rights for more than 8 names. To change access rights for all 32 available configurable command class names, four commands could be entered with 8 names specified in each command.

Security Administration ports whose terminal port type has been configured with a value of **oap**, **none**, or **printer** do not allow commands to be entered. Because commands cannot be entered from terminals attached to these ports, they are not considered as ports configured for security administration authority.

Output

chg-secu-trm:trm=3:all=yes

```
rlghncxa03w 04-01-15 12:30:04 EST  EAGLE 31.3.0
Command entered at terminal #13.
```

```
rlghncxa03w 04-01-15 12:30:07 EST EAGLE 31.3.0
CHG-SECU-TRM: MASP A - COMPLTD
```

i

chg-sg-opts

Change IP

Use this command to change the IP⁷ Secure Gateway protocol options.

Keyword: chg-sg-opts

Related Commands: `rtrv-sg-opts`

Command Class: Database Administration

Parameters

:drkq= (optional)

The dynamic routing key quantity. The maximum number of dynamic routing key entries in the Routing Key table of each SS7IPGW or IPGWI card.

Range: 0-2500

Default: Current value

System

Default: 0

:getcomm= (optional)

This parameter specifies the community name to use for SNMP Get and GetNext request validations. This value applies for each DCM or SSEDCM SNMP agent in the system.

[illegible]

Any string up to 32 characters in length

If the string contains characters other than alphanumeric characters, the entire string must be enclosed in single quotes (' ').

The string can be entered in upper and lower case; the system converts upper case alphabetic characters to lower case.

Default: Current value

System

Default: public

:inhfepalm= (optional)

This parameter specifies whether major alarms for TALI sockets whose secondary state is NEA-FEP will be inhibited. This value applies to all IPLIM and SS7IPGW cards in the system.

Range: yes, no

yes—All TALI sockets with a secondary status of NEA-FEP are reported as IS-NR and no socket alarm is raised. For IPLIM and IPLIMI cards, where each link consists of a single TALI socket, a link alarm will still be raised when the TALI socket's secondary status is NEA-FEP, regardless of the **inhfepalm** setting.

no—NEA-FEP sockets are reported as OOS-MT and a major alarm is raised for that connection.

Default: Current value

System

Default: no


```
chg-sg-opts:trapcomm=public
chg-sg-opts:ipgwabate=yes
chg-sg-opts:iplimabate=yes
chg-sg-opts:iptpsalmtthresh=90
```

Dependencies

This command cannot be entered to change the **sync** option on a card that is not in the Out-of-Service Maintenance-Disabled (OOS-MT-DSBLD) state.

At least one optional parameter must be specified.

The Dynamic Routing Key feature must be turned on before parameter values relating to dynamic routing keys can be changed.

The sum of the values specified for the **srkq** and **drkq** parameters must not be greater than:

- 1000 if there are any DCM cards (870-1945-xx) running the **ss7ipgw** or **ipgwi** application.
- 2500 if all cards running the **ss7ipgw** or **ipgwi** application are SSED CM cards (870-2732-xx).

Replacing an SSED CM card with a dual-slot DCM card when the sum of the values for the **srkq** and **drkq** parameters is greater than 1000 will result in the DCM card being auto- inhibited.

The number of static entries in the Routing Key table cannot exceed the value specified for the **srkq** parameter.

The **srkq** parameter value must be greater than or equal to the current number of static routing key entries. Attempts to decrease the **srkq** value below the actual current number of static routing key entries are not allowed.

If **d** is the current maximum number of actual dynamic routing keys on any card that is running the **ss7ipgw** or **ipgwi** application, then the sum of **d** and the **srkq** value cannot exceed:

- 1000 for dual-slot DCM cards running the **ss7ipgw** or **ipgwi** application
- 2500 for SSED CM cards running the **ss7ipgw** or **ipgwi** application

The total number of actual routing keys cannot not exceed 2500 per card. Effectively this means that even if the **drkq** parameter value has been decreased to less than **d**, the **srkq** value cannot be increased until **d** has first been decreased.

Notes

For DCM cards:

As shown in Table 5-29, the following conditions must be satisfied when changing routing key quantity assignments.

1. **drkq** + **srkq** cannot exceed **1000**. The total number of routing keys per card cannot exceed 1000.
2. If **d** is the current maximum number of actual dynamic routing keys on any SS7IPGW card (as reported by the **rept-stat-rtkey** command), then **d** + **srkq** must be ≤ 1000 . The total number of actual routing keys may not exceed 1000 per card. Effectively this means that even if **drkq** has been decreased to less than **d**, **srkq** cannot be increased until **d** has also decreased.
3. If **s** is the current maximum number of actual static routing keys, then **srkq** must be $\geq s$. Attempts to decrease **srkq** below **s** are not allowed.

Table 5-29. Routing Key Quantity Change Examples for DCM Cards

srkq	drkq	d	s	Change	Result
500	500	500	500	drkq to 250	OK
500	500	500	500	srkq to 250	Fails #3 above
250	250	250	250	drkq to 750	OK
250	250	250	250	srkq to 750	OK
250	250	250	250	drkq to 1000	Fails #1 above
250	250	250	250	srkq to 1000	Fails #1 and #2 above
250	250	500	250	srkq to 750	Fails #2 above
250	250	500	250	srkq to 500	OK
250	250	0	250	drkq to 1000	Fails #1 above
250	250	250	250	srkq to 200	Fails #3 above

For SSED CM cards:

As shown in Table 5-30, the following conditions must be satisfied when changing routing key quantity assignments.

1. **drkq** + **srkq** cannot exceed 2500. The total number of routing keys per card cannot exceed 2500.
2. If **d** is the current maximum number of actual dynamic routing keys on any SS7IPGW card (as reported by the **rept-stat-rtkey** command), then **d** + **srkq** must be ≤ 2500 . The total number of actual routing keys may not exceed 2500 per card. Effectively this means that even if **drkq** has been decreased to less than **d**, **srkq** cannot be increased until **d** has also decreased.
3. If **s** is the current maximum number of actual static routing keys, then **srkq** must be $\geq s$. Attempts to decrease **srkq** below **s** are not allowed.

Table 5-30. Routing Key Quantity Change Examples for SSED CM Cards

srkq	drkq	d	s	Change	Result
1000	1000	1000	1000	drkq to 500	OK
1000	1000	1000	1000	srkq to 500	Fails #3 above
500	500	500	500	drkq to 1500	OK
500	500	500	500	srkq to 1500	OK
500	500	500	500	drkq to 2000	OK
500	500	500	500	srkq to 2200	Fails #1 and #2 above
500	500	1000	500	srkq to 1600	Fails #2 above

Table 5-30. Routing Key Quantity Change Examples for SSED CM Cards

srkq	drkq	d	s	Change	Result
500	500	1000	500	srkq to 1500	OK
500	500	0	500	drkq to 2200	Fails #1 above
500	500	500	500	srkq to 400	Fails #3 above

The **sctpcsum** parameter specifies the configured SCTP checksum algorithm. The configured SCTP checksum algorithm takes effect on the IPLIMx/IPGWx under the following conditions:

- All associations on the card are **open=no**
- No associations are provisioned on the card

If neither condition is true, the card raises a minor alarm indicating that it is not using the configured SCTP checksum algorithm. The minor alarm is cleared and the configured SCTP checksum algorithm takes effect after all associations are set to **open=no** or after the card is reset.

Output

```
chg-sg-opts:sctpcsum=crc32c
rlghncxa03w 04-01-07 09:17:40 EST EAGLE 31.3.0
CHG-SG-OPTS: MASP A - COMPLTD
;
```

chg-sid

Change Self Identification

Use this command to change the self-identification of the system. The self-identification identifies the system to the other signaling points in the network.



CAUTION: Use this command only during periods of low traffic. If you change the point code using the **chg-sid** command, the change does not become enabled until you initialize (**init-sys**) the system.

Keyword: **chg-sid**

Related Commands: **ent-sid**, **rtrv-sid**

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.



CAUTION: If there are STC cards in the system for the EAGLE 5 Integrated Monitoring Support (E5IS) feature, you must turn off the EIS copy function (see the **chg-eisopts** command) before you change the system CLLI. When the CLLI change is complete, use the **chg-eisopts** command to turn on the EIS copy function again.

:cli= (optional)

Common language location identifier. This parameter, which must be unique, identifies the system in terms of its physical location:

- The first four characters identify the city, town, or locality.
- The fifth and sixth characters identify state or province.

- The seventh and eighth characters identify the building.
- The last three characters identify the traffic unit.

Range: *ayyyyyyyyyy*
 1 alphabetic character followed by up to 10 alphanumeric characters
 The value **none** is invalid for the CLLI.

Default: Current value.

:cpc= (optional)

ANSI capability point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: **cpc**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:cpc/cpca/cpci/cpcn/cpcn24= (optional)

Capability point code. The code used by the SS7 protocol to identify a group of functionally related STPs in the signaling network to which the STP belongs.

:cpci= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

Default: No change to existing point code value.

:cpcn= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npfnti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

Default: No change to existing point code value.

:cpcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

Default: No change to existing point code value.

:cpctype= (optional)

Capability point code type. Specify whether the capability point code is for the STP or for LNP, INP, EIR (Equipment Identity Register), G-Port or G-Flex.

The **cpctype** parameter is used to associate a specific service or capability (for example, Local Number Portability Query Response and Message Relay service) with one or more of the capability point codes. This parameter cannot be changed once assigned.

Range: **lnp, stp, inp, eir, gport, gflex**

Default: **stp**

:ncpc= (optional)

New ANSI capability point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: **ncpca**

Range: **000-255, none**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

Enter **none** to delete the point code.

The point code **000-000-000** is not a valid point code.

Default: No change to existing point code value.

:ncpc/ncpca/ncpci/ncpcn/ncpcn24= (optional)

New capability point code. Use new CPCs to replace or delete existing CPCs.

:ncpci= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255, none**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

zone—**0-7**

area—**000-255**

id—**0-7**

Enter **none** to delete the point code.

The point code **0-000-0** is not a valid point code.

Default: No change to existing point code value.

:ncpcn= (optional)

New ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npclfnti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz, none**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

Enter **none** to delete the point code.

Default: No change to existing point code value.

:ncpcn24= (optional)

New 24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255, none**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

Enter **none** to delete the point code.

Default: No change in point code value.

:npci= (optional)

New STP ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255, none**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—**0-7**

area—**000-255**

id—**0-7**

Enter **none** to delete the point code.

The point code **0-000-0** is not a valid point code.

Default: No change to existing point code value.

:npci/ncpcn= (optional)

New STP ITU national or international point code.

:npcn= (optional)

New STP ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfnti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz, none**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

Enter **none** to delete the point code.

Default: No change to existing point code value.

:pc= (optional)

ANSI STP point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Synonym: **pca**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:pc/pca/pci/pcn/pcn24= (optional)

STP point code.

:pci= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

Default: No change in point code value.

:pcn= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfnti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-*

m2-m3-m4-gc). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

Default: No change in point code value.

:pcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

Default: No change in point code value.

:pctype= (optional)

The type of point code. The **pctype** parameter does not affect ITU destinations.

Range: **ansi, other**

ansi—Supports point codes that meet the ANSI standard

other—Supports point codes that do not meet the ANSI standard.

Default: The point code type is not changed.

Example

To change the ANSI site identification STP point code:

chg-sid:pc=10-20-30

To change the site identification PCTYPE to ANSI:

chg-sid:pctype=ANSI

To change the site identification CLLI to rlghncxa03w:

chg-sid:clli=rlghncxa03w

To add a new ANSI capability point code:

chg-sid:cpc=002-002-002

To delete an ITU-I capability point code:

chg-sid:cpci=2-003-4:ncpci=none

To change an existing ITU-N capability point code, 01234, to 02092: (The existing CPC is replaced with the new CPC.)

chg-sid:cpcn=01234:ncpcn=02092

To add a new ANSI LNP CPC:

chg-sid:cpc=002-002-002:cpctype=lnp

To change an existing ITU-N capability point code with a group code of 01234-aa to 02092-si: (The existing CPC is replaced with the new CPC.)

chg-sid:cpcn=01234-aa:ncpcn=02092-si:cpctype=stp

To add an ITU national INP CPC:

chg-sid:cpcn=04567:cpctype=inp

To change the ITU-N 24-bit site identification STP Point Code when no previous ITU-N site identification STP point code exists:

chg-sid:pcn24=1-101-1

To change the ITU-N 24-bit site identification STP Point Code when a previous ITU-N site identification STP point code exists:

chg-sid:pcn=none

chg-sid:pcn24=1-101-1

To change the ITU-N site identification STP Point Code when a previous ITU-N 24-bit site identification STP point code exists:

chg-sid:pcn24=none

chg-sid:pcn=2000

To add a new ITU-N 24-bit Capability Point Code:

chg-sid:cpcn24=22-22-22

To change an existing 24-bit ITN-N Capability Point Code 22-22-22 to 33-33-33.

chg-sid:cpcn24=22-22-22:ncpcn24=33-33-33

To add a new EIR-type Capability Point Code:

chg-sid:cpctype=eir:cpci=2-30-1

chg-sid:cpctype=eir:cpcn=123

To delete an existing ITUI Capability Spare Point Code:

chg-sid:cpci=s-2-003-4:ncpci=none

To change an existing node ITU-I spare true point code from an assigned point code value to none:

chg-sid:pci=s-1-234-5:npci=none

To change an existing ITU-N spare capability point code from s-01234 to s-02092. The existing CPC is replaced with the new CPC:

chg-sid:cpcn=s-01234:ncpcn=s-02092:cpctype=stp

To change or add new node true point codes simultaneously, for multiple point code types:

chg-sid:pca=111-111-111:pci=1-234-5:pcn=12345

chg-sid:pca=111-111-111:pci=1-234-5:pcn24=233-255-255

To change or add new node true point codes simultaneously, for ITU-I spare and ITU-N spare point code types.

chg-sid:pci=s-1-234-5:pcn=s-12345

To change an existing node ITU-N spare true point code from an assigned point code value to none:

chg-sid:pcn=s-12345:ncpn=none

To change the CPC list to include an ANSI CPC for the G-Port service:

chg-sid:cpca=1-2-3:cpctype=gport

To change the CPC list to include an ITU-I CPC for the G-Flex service:

chg-sid:cpci=2-3-4:cpctype=gflex

Dependencies

At least one optional parameter must be specified.

The Spare Point Code Support feature must be enabled before a spare point code (prefix **s-**) can be specified in the command.

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed. ITU-National point code must be a full point code.

The STP destination and capability point codes can be specified only as full point codes or **none**.

If the **ncpc**, **ncpca**, **ncpci**, **ncpcn**, or **ncpcn24** parameter is specified, a corresponding existing **cpc**, **cpc**, **cpci**, **cpcn**, or **cpcn24** parameter must be specified.

If the **npci** parameter or the **npcn** parameter is specified, a corresponding existing **pci** parameter value or **pcn** parameter value must be specified.

If the **cpctype** parameter is specified, the **cpc**, **cpc**, **cpci**, **cpcn**, or **cpcn24** parameter must be specified.

If the **cpctype** parameter is specified, an **ncpc**, **ncpca**, **ncpci**, **ncpcn**, or **ncpcn24** parameter cannot be specified in the command.

If a **pc**, **pca**, **pci**, **pcn**, or **pcn24** parameter, a **cpc**, **cpc**, **cpci**, **cpcn**, or **cpcn24** parameter, and an **npci**, **npcn**, **ncpc**, **ncpca**, **ncpci**, **ncpcn**, or **ncpcn24** parameter are specified, their values must be different.

The STP capability point code type (domain) must match the new STP capability point code type (domain).

When the **cpctype=lnp** parameter is specified, the **cpc** parameter or the **cpc** parameter must be specified with an ANSI point code value.

If the **cpctype=inp** parameter or the **cpctype=eir** parameter is specified, the **cpc** parameter and the **cpc** parameter cannot be specified for the point code. An ANSI point code cannot be specified.

The LNP feature must be on before the **cpctype=lnp** parameter can be specified (see the **enable-ctrl-feat** command).

NOTE: The LNP feature is "turned on" when a value is shown for the LNP ported TNs quantity in the rtrv-ctrl-feat command output.

Before the **cpctype=inp** parameter can be specified, the INP feature must be on.

Before the **cpctype=eir** parameter can be specified, the Equipment Identity Register (EIR) feature must be on.

Only the **pcn** parameter or the **pcn24** parameter can be specified; however, both parameters cannot be specified in the same command.

If a 14-bit ITU-N site ID currently exists, it must be disabled before a 24-bit ITU-N site ID can be assigned.

Only one new point code parameter (**npc**, **ncpc**, **ncpca**, **ncpci**, **ncpcn**, or **ncpcn24**) can be specified.

If the **pcn**, **npcn**, **cpcn**, or **ncpcn** parameter is specified, the format must match the format that was assigned with the **chg-stpopts:npcfmti** parameter.

The site CLLI code that is specified in the command cannot be the same as an existing route destination CLLI code.

The STP destination point code that is specified in the command cannot be the same as an existing STP capability point code.

The STP capability point code that is specified in the command cannot be the same as an existing STP capability point code.

The new STP capability point code that is specified in the command cannot be the same as an existing STP capability point code.

If the system is configured for ANSI format point codes, the specified network indicator value (*ni*) of the **pc**, **cpc**, or **ncpc** parameter must be **6** or greater when the specified cluster value (*nc*) is **0**.

The true point code and capability point codes cannot be the same as existing secondary point codes.

The existing true point code cannot be changed if it is in the MAP table.

The maximum number of capability point codes that can be provisioned is 96.

The STP destination point code can be deleted by specifying a value of **none** for the **pc/pca/pci/pcn/pcn24** parameter only if there are no destination point codes in the route table that have the same point code type (**pctype**) as the STP point code to be deleted.

The parameter value **none** cannot be specified for the **cpc**, **cpca**, **cpci**, **cpcn**, and **cpcn24** parameters.

The STP destination point code that is specified in the command cannot be the same as an existing route destination point code.

The STP capability point code that is specified in the command cannot be the same as the STP destination point code.

The STP capability point code that is specified in the command cannot be the same as an existing route destination point code.

The new STP capability point code that is specified in the command cannot be the same as the STP destination point code.

The new STP capability point code that is specified in the command cannot be the same as an existing route destination point code.

The specified **pci** or **pcn** parameter value must already exist as an STP destination point code.

The same type of STP Destination point code cannot be assigned if one already exists.

When an **ncpc**, **ncpca**, **ncpci**, **ncpcn**, or **ncpcn24** parameter is specified, the specified corresponding **cpc**, **cpca**, **cpci**, **cpcn**, or **cpcn24** parameter value must already exist in the database.

The G-Flex feature must be turned on to change the capability point code if the **cpctype=gflex** parameter is specified.

The G-Port feature must be turned on to change the capability point code if the **cpctype=gport** parameter is specified.

Notes

If one of the **pc/pca/pci/pcn/pcn24** parameters is specified to change the point code, the following message is displayed:

CAUTION: SYSTEM SITE ID HAS BEEN CHANGED, MANUAL RE-INITIALIZATION IS NEEDED

If the redirect function refers to any of the **pc/pca** or **cpc/cpca** parameters, the following message is displayed:

CAUTION: SYSTEM SITE ID WAS REFERENCED BY THE REDIRECT FUNCTION'S DPC

When the system's CLLI has been entered into the database or changed with the **chg-sid** command, the OAP configuration in the system database must be changed to include the new CLLI value. The following warning message is displayed to remind the user to update the OAP configuration:

CAUTION: System CLLI has changed, OAP configuration is required

To update the OAP configuration, use the **act-oap-config** command.

In order for the change to be fully implemented, you must enter the **init-sys** command. This initializes the entire system system, and reloads all LIMs with the new self ID.

Only one ITU-N Site ID point code can be defined at one time (**pcn** or **pcn24**). To change from one to the other, the current Site ID must be disabled before the new one can be defined.

When the **cpctype=lnp** parameter is specified, it associates a specific service or capability (for example, local number portability query response and message relay service) with one or more of the capability point codes.

After the **cpctype** is defined, it cannot be changed.

For initial installation of a system, the self point code must be entered before any destination is entered.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (**s-**).

When the Site ID is changed, manual initialization is required because an MSU can be in transition between a link card and an SCCP card at the time the SID table is changed. In that case, it is possible for the Destination True Point Code to no longer appear to belong to the STP node, and SCCP would not know what to do with it. The following message is displayed:

CAUTION: SYSTEM SITE ID HAS BEEN CHANGED, MANUAL RE-INITIALIZATION IS
NEEDED

The **chg-sid** command is used to identify the STP in the signaling network. STP identity is determined by the Common Language (CLLI) code and the SS7 Destination/True Point Code (DPC). For MTP message discrimination, the STP can also be identified by one or more optional capability codes representing service-related SCCP capabilities resident at the STP.

The CLLI and DPC are used as paired key fields in SEAS to uniquely identify the STP and all SEAS interactions with that STP. This command is viewed as the first command to be used in provisioning a newly commissioned STP or an STP that is being reactivated in a new location or at a new network address.

The **chg-sid** command can also be used to add capability codes to the existing set for that STP after the CLLI and DPC have been initialized. Alternatively, the STP CLLI and DPC can be provisioned locally during installation, and the command used only to add new capability codes. The STP's own CLLI must be provisioned before SEAS-STP communication, in order to support UAL-level interactions.

Output

chg-sid:pc=10-20-30

```
rlghncxa03w 04-01-07 09:17:40 EST EAGLE 31.3.0
CHG-SID: MASP A - COMPLTD
;
```

chg-slt

Change Signaling Link Test Message

Use this command to change the fields of a signaling link test message (SLTM) record in the SLTM table.

Keyword: **chg-slt**

Related Commands: **chg-l3t**, **ent-ls**, **rtrv-ls**, **rtrv-slt**

Command Class: Database Administration

Parameters

:sltset= (mandatory)

The signaling link test message record number in the SLTM table.

Range: **1-20**

:enabled= (optional)

Enables the signaling link test message.

Range: **on, off**

Default: Current value.

:mode= (optional)

The *SLTM* mode to be used when sending test messages.

Range: **special, regular**

special—All *SLTM*s generated by the links in the linkset associated with this *SLTM* record are designated “special” maintenance messages.

regular—All *SLTM*s generated by the links in the linkset associated with this *SLTM* record are designated “regular” maintenance messages.

Default: Current value.

:pattern= (optional)

The test pattern to be sent with a signaling link test message.

Range:

2 to 30 alphanumeric characters; valid characters are **0-9, a-f, A-F**.

An even number of characters must be used in the pattern. The first two characters of the pattern must be letters.

Default: Current value.

:t1= (optional)

The T1 timer for repeating the *SLTM* after a failure, in seconds.

Range: **4-12**

Default: Current value.

:t2= (optional)

The T2 timer for the *SLTM* period, in seconds.

Range: **30-90**

Default: Current value.

Example

chg-slt:sltset=1:t1=6:t2=60:enabled=off:pattern=aabbccdd

Dependencies

The value of **t1** should be greater than the level 3 timer **t6**. The level 3 timer **t6** can be **0 to 6** seconds. Enter the **rtrv-l3t** command to verify the value of the level 3 timer **t6**.

Notes

None

Output

chg-slt:sltset=1:t1=6:t2=60:enabled=off:pattern=aabbccdd

rlghncxa03w 04-01-07 00:21:41 EST EAGLE 31.3.0

CHG-SLT: MASP A - COMPLTD

;

chg-srvsel

Change Service Selector

Use this command to assign the applicable service selectors required to change a service entry for DSM services.

Keyword: chg-srvsel

Related Commands: dlt-srvsel, ent-srvsel, rtrv-srvsel

Command Class: Database Administration

Parameters

:gti/gtia/gtii/gtin/gtin24= (mandatory)

Global title indicator. For all service selector commands, the domain is defined as **gti** and **gtia** (ANSI), **gtii** (ITU international), **gtin** (ITU national) and **gtin24** (24-bit ITU national). For the service selector commands, **gti** and **gtia** are equivalent.

Range: Supported value for ANSI: **gti=2** and **gtia=2**
Supported values for ITU: **gtii=2, 4; gtin=2, 4, gtin24=2, 4**

:ssn= (mandatory)

Subsystem number.

Range: **0-255 ***

:tt= (mandatory)

Translation type.

Range: **0-255**

:nai= (optional)

Nature of address indicator. The nature of address indicator can be specified by a mnemonic value (**nai** parameter) or an explicit numeric value (**naiv** parameter). Either the **nai** parameter or the **naiv** parameter, but not both, can be specified. Table A-5 shows the mapping between the **naiv** and the **nai** parameter values.

Range: **sub, rsvd, natl, intl**

Default: Current value

:naiv= (optional)

Nature of address indicator value. The nature of address indicator can be specified by a mnemonic value (**nai** parameter) or an explicit numeric value (**naiv** parameter). Either the **nai** parameter or the **naiv** parameter, but not both, can be specified. Table A-5 shows the mapping between the **naiv** and the **nai** parameter values.

Range: **0-127**

Default: Current value.

:np= (optional)

Numbering plan. The numbering plan can be specified by a mnemonic value (**np** parameter) or an explicit numeric value (**npv** parameter). Either the **np** parameter or the **npv** parameter, but not both, can be specified. Table A-6 shows the mapping between the **npv** and the **np** parameter values.

Range: **e164, generic, x121, f69, e210, e212, e214, private**

Default: Current value

:npv= (optional)

Numbering plan value. The numbering plan can be specified by a mnemonic value (**np** parameter) or an explicit numeric value (**npv** parameter). Either the **np** parameter or the **npv** parameter, but not both, can be specified. Table A-6 shows the mapping between the **npv** and the **np** parameters.

Range: **0-15**

Default: Current value.

:nserv= (optional)

New DSM service.

NOTE: The **gport** service cannot be used for Prepaid SMS Intercept; use the **smsmr** service. The **gport** service cannot be used for Portability Check for Mobile Originated SMS; use the **mnpsms** service.

Range: **eir**, **gflex**, **gport**, **inpq**, **inpmr**, **mnpsms**, **smsmr**, **idpr**, **idps**

eir — Equipment Identity Register

gflex — GSM flexible numbering

gport — GSM number portability

inpq — INP query

inpmr — INP message relay

mnpsms — Portability Check for Mobile Originated SMS

smsmr — Prepaid SMS Intercept

idpr — Prepaid IDP Query Relay

idps — IDP Screening for Prepaid

Default: No change to existing value.

:nsnai= (optional)

New service nature of address indicator.

Range: **sub**, **natl**, **intl**, **rnidn**, **rnndn**, **rnsdn**, **none**, **ccrndn**

sub — Subscriber number

natl — National significant number

intl — International number

rnidn — Routing number prefix and international dialed/directory number

rnndn — Routing number prefix and national dialed/directory number

rnsdn — Routing number prefix and subscriber dialed/directory number

none — The **nsnai** is not associated with the new DSM service.

ccrndn — Country code, routing number, and national directory number

Default: No change to existing value.

:nsnp= (optional)

New service numbering plan.

Range: **e164**, **e212**, **e214**, **none**

e164 — E.164 numbering plan

e212 — E.212 numbering plan

e214 — E.214 numbering plan

none — The **nsnp** is not associated with the new DSM service.

Default: No change to existing value.

Example

```
chg-srvsel:gti=2:tt=10:nserv=gflex
```

```
chg-srvsel:gtin=2:tt=253:nserv=inpq
```

```
chg-srvsel:gtin=4:tt=0:np=e164:nai=intl:nsnp=e164:nsnai=rnidn
```

```
chg-
```

```
srvsel:gtin=4:tt=0:np=e164:nai=sub:nsnp=e164:nsnai=rnsdn:nserv=in  
pmr
```

```
chg-srvsel:gtin24=4:tt=4:np=e164:nai=intl:nsnai=rnidn
```

```
chg-srvsel:gtii=4:tt=4:np=e164:nai=intl:ssn=10:nserv=eir
```

Dependencies

The G-Flex feature must be turned on before the **nserv=gflex** parameter can be specified.

The INP feature must be turned on before the **nserv=inpmr** or **nserv=inpq** parameter can be specified.

The G-Port feature must be turned on before the **nserv=gport** parameter can be specified.

The Prepaid SMS Intercept (PPSMS) Phase 1 feature must be turned on before the **nserv=smsmr** parameter can be specified.

The Portability Check for Mobile Originated SMS feature must be turned on before the **nserv=mnpsms** parameter can be specified.

The Equipment Identity Register (EIR) feature must be turned on before the **nserv=eir** parameter can be specified.

At least one of the following parameters must be specified: **nsnp**, **nsnai**, or **nserv**.

The values **1** and **3** are not valid for the **gti/gtia/gtii/gtin/gtin24** parameters.

The value **4** is not valid for the **gtia** parameter.

When the **gti/gtia/gtii/gtin/gtin24=2** parameter is specified, no **np(v)** and **nai(v)** parameter combinations can be specified.

When the **gtii/gtin/gtin24=4** parameter is specified, an **np(v)** and **nai(v)** parameter combination must be specified. The parameters can be specified in these combinations: **np** and **naiv**, **npv** and **nai**, **np** and **nai**, or **npv** and **naiv**.

The **np** and **npv** parameters cannot be specified together in the command.

The **nai** and **naiv** parameters cannot be specified together in the command.

When the **nserv** parameter value is **inpmr**, **inpq**, **gport**, **eir**, **mnpsms**, or **smsmr**, the **gtia** and **gti** parameters cannot be specified.

When the **nserv=inpmr** parameter is specified, the **nsnp=e164** parameter must be specified.

When the **nsnai** parameter value **rnidn**, **rncdn**, or **rnsdn** is specified, an **nserv** parameter value of **inpmr**, **gport**, **smsmr**, or **mnpsms** must be specified.

When the **nserv=inpq** parameter is specified, the **gtii** parameter cannot be specified.

When the **nserv=gport** parameter is specified, the **gtia** and **gti** parameters cannot be specified.

When the **nserv** parameter value **inpq**, **eir**, or **idpr** is specified, the **nsnai** and **nsnp** parameters cannot be specified.

When the **nserv=gflex** parameter is specified, the **nsnai=none** and **nsnp=none** parameters cannot be specified.

When the **nserv=inpmr** parameter is specified, the **nsnai** parameter must be specified.

An entry must already exist that exactly matches the **gti/gtii/gtin/gtin24**, **tt**, **ssn**, **np(v)**, and **nai(v)** combination of parameters.

When the **nsnai=ccrncdn** parameter is specified, the **nserv** parameter value **gport**, **mnpsms**, or **smsmr** must be specified.

When the **nserv** parameter value **inpmr**, **smsmr**, **mnpsms**, or **gport** is specified, the **nsnp=e164** parameter must be specified.

When the **nserv** parameter value **gflex**, **gport**, **inpmr**, **mnpsms**, or **smsmr** is specified, the **nsnai** and **nsnp** parameters must be specified.

The **nsnai=none** parameter can be specified only when the **nserv=inpq** parameter is specified.

An ITU Service Selector cannot be entered when the **ansigflex** STP option is enabled (see the **chg-stpotps** command).

The Prepaid IDP Query Relay feature must be turned on before the **nserv=idpr** parameter can be specified.

When the **nserv=idpr** parameter is specified, the only valid mandatory service parameters are **tt**, **ssn**, **gtii** and **gtin**. When the **nserv=idpr** parameter is specified, the only valid optional parameters are **np** and **nai**.

The IDP Screening for Prepaid feature must be turned on before the **nserv=idps** parameter can be specified.

When the **nserv=idps** parameter is specified, the only valid optional service parameters are **np** and **nai**.

When the **nserv=idps** parameter is specified, the only valid mandatory service parameters are **tt**, **serv**, **ssn**, **gtin**, and **gtii**.

Notes

None

Output

```
chg-srvsel:gti=2:tt=10:nserv=gflex
rlghncxa03w 04-01-05 16:40:40 EST EAGLE 31.3.0
Service Selector table is (114 of 1024) 11% full
CHG-SRVSEL: MASP A - COMPLTD
;
```

chg-ss-appl

Change Subsystem Application

Use this command to change the application status in the database.

Keyword: chg-ss-appl

Related Commands: dlt-ss-appl, ent-ss-appl, rtrv-ss-appl

Command Class: Database Administration

Parameters

:appl= (mandatory)

Application type.

Range: lnp, inp, eir

:nstat= (optional)

Status.

Range: offline, online

Example

```
chg-ss-appl:appl=lnp:nstat=offline
```

```
chg-ss-appl:appl=inp:nstat=online
```

```
chg-ss-appl:appl=eir:nstat=online
```

Dependencies

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before the **chg-ss-appl:appl=lnp** command can be entered.

The INP feature must be turned on before the **chg-ss-appl:appl=inp** command can be entered.

The Equipment Identity Register (EIR) feature must be turned on before the **chg-ss-appl:appl=eir** command can be entered.

The application type (**appl** parameter) must already exist in the SS-APPL table.

The subsystem must be in the opposite state of the requested change.

The subsystem must be inhibited before **status=offline** can be specified.

Notes

After the LNP subsystem is inhibited before performing an LNP ELAP bulk download, **chg-ss-appl:appl=lnp:nstat=offline** must be entered to ensure that the subsystem remains down through DSM card replacements and reloads.

Output

chg-ss-appl:appl=lnp:nstat=offline

```
rlghncxa03w 04-01-05 16:40:40 EST EAGLE 31.3.0
CHG-SS-APPL: MASP A - COMPLTD
```

;

chg-ss7opts**Change SS7 Options**

Use this command to update (change by simple replacement) the values of one or more of the SS7 option indicators maintained in the STP Options table. SS7 options can modify normal handling of SS7 traffic.

Keyword: **chg-ss7opts**

Related Commands: **rtrv-ss7opts**

Command Class: Database Administration

Parameters

:discardtfc= (optional)

This parameter enables and disables the handling of TFC traffic from ITU-I networks. If enabled, TFC traffic from ITU-I networks will be discarded.

Range: **on, off**

on — Discard TFC ITU-I traffic

off — Do not discard TFC ITU-I traffic

System

Default: **off**

:discardtfcn= (optional)

This parameter enables and disables the handling of TFC traffic from ITU-N networks. If enabled, TFC traffic from ITU-N networks will be discarded.

Range: **on, off**

on — Discard TFC ITU-N traffic

off — Do not discard TFC ITU-N traffic

System

Default: **off**

:lsrestrict= (optional)

Use the restricted linkset routing determination algorithm. This parameter enables and disables the restricted linkset routing determination algorithm on a system-wide basis.

Range: **on, off**

on—Restrictive linkset routing enabled; route traffic on the least restrictive available route with the lowest cost.

off—Restrictive linkset routing disabled; route traffic on the lowest cost route.

Default: Current value in the database.

System

Default: **off**

Example

chg-ss7opts:lsrestrict=on

Dependencies

At least one optional parameter must be specified.

When the **lsrestrict** option is **on**, the **tfatcabmlq** parameter value for C linksets can be changed to a non-zero value (see the **chg-ls** command). If the **tfatcabmlq** parameter in any C linkset has been changed to a non-zero value, the **tfatcabmlq** value must be set back to **0** for all C linksets before the **lsrestrict** option can be turned off.

Notes

None

Output

chg-ss7opts:lsrestrict=yes

```
rlghncxa03w 04-08-29 16:40:40 EST EAGLE 31.9.0
CHG-SS7OPTS: MASP A - COMPLTD
;
```

chg-stpopts

Change STP Options

Use this command to change the values of one or more of the STP node level processing option indicators maintained in the STP's options table. All values are assigned initially to system defaults at STP installation time, and they may be updated subsequently using this command.

NOTE: For those STP option attributes supporting STP event message throttling, the values for the indicated parameters shall become effective in the next event-message output interval following their activation. All other updates shall be effective immediately, as of the time of activation.

Keyword: **chg-stpopts**

Related Commands: **rtrv-stpopts**

Command Class: Database Administration

Parameters

:ansigflex= (optional)

This parameter enables ANSI G-Flex to execute at 1700 TPS per DSM card.

Range: **yes, no**
 yes — Enabled
 no — Disabled

Default: Current value

System

Default: **no**

:cnvcgda= (optional)

This parameter enables discarding of the CGPA point code in ANSI SCCP messages if the point code or alias point code of the destination network type is not defined.

Range: **yes, no**
 yes — Enabled
 no — Disabled

Default: Current value

System

Default: **no**

:cnvcgdi= (optional)

This parameter enables discarding of the CGPA point code in ITU-I SCCP messages if the point code or alias point code of the destination network type is not defined.

Range: **yes, no**
 yes — Enabled
 no — Disabled

Default: Current value

System

Default: **no**

:cnvcgdn= (optional)

This parameter enables discarding of the CGPA point code in ITU-N SCCP messages if the point code or alias point code of the destination network type is not defined.

Range: **yes, no**
 yes — Enabled
 no — Disabled

Default: Current value

System

Default: **no**

:cnvcgdn24= (optional)

This parameter enables discarding of the CGPA point code in ITU-N24 SCCP messages if the point code or alias point code of the destination network type is not defined.

Range: **yes, no**
 yes — Enabled
 no — Disabled

Default: Current value

System

Default: **no**

:criticalminh= (optional)

Critical alarm inhibit. This parameter enables inhibiting of critical alarms.

Range: **yes, no**
 yes — Enabled
 no — Disabled

Default: Current value

System

Default: **no**

:defcc= (optional)

Default country code.

Range: Valid digits are **0-9, A-F, a-f**.

Default: Current value

:dispactalms= (optional)

Display active alarms. This parameter displays active or total alarms in the alarm status area of the VT320 screen (see Figure 4-1). The alarm status area comprises four boxes to show counts for critical, major, minor, and inhibited alarms. When total alarms are displayed (**dispactalms=no**), the counts for critical, major, and minor alarms include any temporarily or permanently inhibited alarms. The alarm status area is labeled *Total Alarm Status*. When active alarms are displayed (**dispactalms=yes**), the counts for critical, major, and minor alarms do not include any temporarily or permanently inhibited alarms. The alarm status area is labeled *Active Alarm Status*. This parameter does not affect the count displayed in the inhibited box; the number of inhibited alarms is always displayed.

Range: **yes, no**

yes — Enabled; active alarm status is displayed

no — Disabled; total alarm status is displayed

Default: Current value

System

Default: **no**

:dsmaud= (optional)

DSM audit running state. Refer to the *EPAP Administration Manual* for more information about the DSM checksum audit.

Range: **on, off, ccc**

on — Running

off — Not running

ccc — Running with Corruption Cross Correction enabled. EAGLE 5 ISS LNP, G-Flex, G-Port, and INP systems contain $n+1$ DSM cards (maximum 25) running the VSCCP application. Each of the VSCCP DSM cards contains a full image of the RTDB database. If a record within the RTDB database on any card should become corrupted, a mate VSCCP DSM card can supply the corrected data. The **dsmaud=ccc** parameter enables the Corruption Cross Correction function used by the system to obtain the correct data from a mate DSM.

Default: Current value

:force= (optional)

Specify **force=yes** to change the **hsclksrc** parameter value when the TDMs are reporting that the high speed system clocks are currently valid.

Range: **yes**

:gr2878rglbl= (optional)

This parameter specifies HSL register labels and data for EAGLE 5 ISS supported registers in measurement reports to SEAS.

Range: **yes, no**

yes — Use GR-2878-CORE HSL labels and data in SEAS output

no — HSL labels and data are not supported to SEAS

Default: Current value

:gsmdecerr= (optional)

GSM MAP screening decode error action.

Range: **pass, discard**

Default: Current value

System

Default: **pass**

:gsmdflt= (optional)

GSM MAP screening default action.

Range: **pass, discard**

Default: Current value

System

Default: **pass**

:gtcnvdfilt= (optional)

This parameter enables routing of SCCP messages using system defaults when an appropriate entry is not found in the Default GT Conversion Table.

Range: **yes, no**

yes — Enabled

no — Disabled

Default: Current value

System

Default: no

:hsckll= (optional)

High speed master clock line length.

Range: longhaul, shorthaul

longhaul — Gain is high for long haul

shorthaul — Gain is low for short haul

Default: Current value

System

Default: longhaul

:hsclksrc= (optional)

High speed master clock source. The **force=yes** parameter must be specified with this parameter to change the clock source when the TDMs are reporting that the high speed system clocks are currently valid.



CAUTION: Changing the high speed master clock source can result in clock outage and loss of traffic on all links, if the new source type does not match the provisioned source for the E1 or T1 cards (what is actually plugged into the backplane).

Range: rs422, e1framed, e1unframed, t1framed, t1unframed

rs422 — RS-422 clock source

e1framed — E1 Framed clock source

e1unframed — E1 Unframed clock source

t1framed — T1 Framed clock source

t1unframed — T1 Unframed clock source

Default: Current value

System

Default: rs422

:mtpdpcq= (optional)

MTP destination point code quantity. This parameter specifies the maximum number of DPCs that can be provisioned from the STP. The value of this parameter is dependent directly on the number of x-list entries that can be provisioned using the **mtpxlq** parameter. If the number of destinations that can be provisioned is increased, the number of x-list entries that can be maintained is decreased.

Range: 500-8000

500-2000—if DSTN5000 feature is not turned on

500-5000—if DSTN5000 feature is turned on

500-6000—if 6000 Routesets feature is enabled

500-7000—if 7000 Routesets feature is enabled

500-8000—if 8000 Routesets feature is enabled

Default: Current value

System

Default: 2000

:mtplprst= (optional)

MTP low priority route set test. This parameter specifies whether low priority route set polling is enabled or disabled at the STP.

Range: yes, no

yes — Enabled

no — Disabled

Default: Current value

System

Default: yes

:mtpltctdpcq= (optional)

MTP loop test congestion trigger DPC quantity. This parameter specifies the number of most frequently occurring DPCs to which the MTP loop test messages are to be sent when the MTP loop test is triggered by congestion.

Range: 3-10

Default: Current value

:mtplti= (optional)

MTP loop test indicator. This parameter specifies whether the MTP loop detection procedures are enabled or disabled at the STP.

Range: yes, no

yes — Enabled

no — Disabled

Default: Current value

System

Default: yes

:mtpltst= (optional)

MTP loop test supervision timer. This parameter specifies the amount of time, in milliseconds, that the MTP loop test detection procedures run when started.

Range: 10000-20000

Default: Current value

System

Default: 10000

:mtprsi= (optional)

MTP Restart indicator. This parameter specifies whether MTP Restart procedures (both ANSI and ITU) are enabled or disabled at the STP.

Range: yes, no

yes — Enabled

no — Disabled

Default: Current value

System

Default: no

:mtprsit= (optional)

ANSI MTP Restart isolation timer. This parameter specifies the minimum duration of node isolation, in milliseconds, before the ANSI MTP Restart procedure is deemed necessary.

Range: 2000-900000

Default: Current value

System

Default: 5000

:mtpt10alt= (optional)

MTP T10 alternate timer, in milliseconds. This parameter specifies the interval at which the STP performs a route set test on low priority routes. The value of the **mtpt10alt** parameter must be equal to or greater than the value of the level 3 T10 timer.

Range: 20000-10000000

Default: Current value

System

Default: 30000

:mtp31ctl= (optional)

MTP T31 congestion trigger level. This parameter specifies the signaling link congestion level at which the system starts the level 3 t31 timer. When the level 3 t31 timer expires, the associated signaling link is removed from service for realignment.

Range: 1, 2

Default: Current value

:mtpxlet= (optional)

MTP x-list expiration time. This parameter specifies the maximum amount of time the system maintains an unreferenced dynamic status exception list (x-list) entry.

Range: 0020-2400

Default: Current value

System

Default: 0100

:mtpxlot= (optional)

MTP x-list occupancy threshold. This parameter specifies the dynamic status exception list (x-list) occupancy threshold at which the system raises a minor alarm. The threshold is expressed as a percentage of space available.

Range: 0-100

Default: Current value

:mtpxlq= (optional)

MTP x-list quantity. This parameter specifies the number of dynamic status exception list (x-list) entries the system maintains. The value of this parameter is dependent directly on the number of destinations that are provisioned using the **mtpdpcq** parameter.

Range: 500-6000

500-2000—if DSTN5000 feature is not turned on

500-5000—if DSTN5000 feature is turned on

500-6000—if 6000, 7000, or 8000 Routesets feature is enabled

Default: Current value

System

Default: 500

:npcfmti= (optional)

The ITU National Point Code Format Identifier. This parameter specifies how the ITU national point code is entered into the database and how it is displayed in any outputs from the system. The ITU national point code is a 14-bit integer. The point codes can be a single number up to five digits, or two, three, or four numbers separated by dashes. This parameter specifies the number of bits to allow in each position of the four members.

Range: *m1-m2-m3-m4*

Four members where each member represents the number of bits allowed in the corresponding position for a flexible ITU national point code. The range of each member (*m1-m4*) is from 0 to 14. Each member must be specified no matter how many numbers the point code format contains, and the sum of *m1+m2+m3+m4* must equal 14 (for example, **npcfmti=7-7-0-0**, or **npcfmti=0-6-8-0**). Table 5-31 defines the values of the parts of the ITU national point code.

Table 5-31. NPCFMTI Parameter - ITU National Point Code Values

Number of Bits in Point Code Section								
Bit	0	1	2	3	4	5	6	7
Range of Values	Not Used	0-1	0-3	0-7	0-15	0-31	0-63	0-127
Bit	8	9	10	11	12	13	14	
Range of Values	0-255	0-511	0-1023	0-2047	0-4095	0-8191	0-16383	

Table 5-32. Point Code Format Examples

NPCFMTI Value	Range of Point Code Values
7-7-0-0	0-0 to 127-127
0-6-8-0	0-0 to 63-255
0-0-4-10	0-0 to 15-1023
3-8-3-0	0-0-0 to 7-255-7
2-9-2-1	0-0-0-0 to 3-511-3-1
4-4-4-2	0-0-0-0 to 15-15-15-3
14-0-0-0	00000 to 16385

Default: Current value

System

Default: **14-0-0-0**

:randsls= (optional)

Random SLS (signaling link selection) option. This parameter enables the EAGLE 5 ISS to ignore the incoming SLS value and randomly generate a new SLS value to select an outgoing linkset and a link. If selected, this parameter only applies to ITU SCCP messages. The parameter also enables the user to restrict Random SLS generation to Class 0 messages only.

This parameter is implemented independent of the ITU SLS Enhancement feature settings for individual linksets. These settings are specified by the **slsocbit** (Use of the Other CIC BIT capability) and **slsrsb** (SLS Bit Rotation capability) parameters of the **ent-ls** and **chg-ls** commands. When the ITU SLS Enhancement is turned on with either the **randsls=all** or **randsls=class0** parameters, the SLS Bit Rotation capability (set with the **slsrsb** parameter of the **ent-ls** or **chg-ls** commands) is overridden, and cannot be used on individual linksets. The **ent-ls** and **chg-ls** commands do not prevent the user from provisioning with the **slsrsb** parameter.

Range: **class0, all, off**

Default: Current value

System

Default: **off**

:rptlnpmrss= (optional)

Report LNP MR SS unequipped. This parameter specifies whether to generate UIN 1049 for LNP message relay (MR) messages with missing subsystems. If no MAP entry is found from a GTT done on an LNP MR message, the UIM is either displayed (**:rptlnpmrss=yes**) or suppressed (**:rptlnpmrss=no**). This setting applies only to LNP MR messages. All other messages display UIM 1049 when no MAP entry is found, regardless of this setting.

Range: **yes, no**

yes — Display UIM 1049 for all messages.

no — Do not display UIM 1049 for LNP MR with missing subsystems.

Default: Current value

:rstrdev= (optional)

Restore device state. This parameter enables restoration of device states when the **init-sys** command is executed and when an OAM role change occurs and maintains the inhibited state of terminals, links, and cards through an **init-sys** execution, OAM role change, and card reload.



CAUTION: An init-sys command causes the system to go down.

Range: **on, off**

Default: Current value

:secmtpmate= (optional)

This parameter enables security screening for MTP messages received by an STP on a non-C-Link, with an OPC equal to the SID (True, Adjacent, or Capability) point code of its mate.

Range: **off, notify, silent, test**

off — Screening is disabled; message is processed normally.

notify — Screening is enabled; UIM is generated and message is discarded.

silent — Screening is enabled; message is discarded. No UIM is generated.

test — Screening is enabled; UIM is generated and message is processed normally.

Default: Current value

System

Default: **off**

:secmtpsid= (optional)

This parameter enables security screening for MTP messages received at MTP3 containing an OPC equal to its own SID (OPC that is the True, Secondary, or Capability point code entered in the **chg-sid** command) that is not a route-set-congestion-message. The EAGLE 5 ISS should not receive a message with its own OPC unless the message is a result of a circular route test or is an SLTM when the far end is in loopback. (SLTM messages are not checked.)

Range: **off, notify, silent, test**

off — Screening is disabled; message is processed normally.

notify — Screening is enabled; UIM is generated and message is discarded.

silent — Screening is enabled; message is discarded. No UIM is generated.

test — Screening is enabled; UIM is generated and message is processed normally.

Default: Current value

System

Default: **off**

:secmtpsnm= (optional)

This parameter enables security screening for MTP SNM messages. The EAGLE 5 ISS should not receive an MTP network management message unless:

- The OPC is an adjacent point code. (For all link types, this rule does not apply to UPU, TFC, and RCT messages.)
- The EAGLE 5 ISS has a route to the OPC of the MTP network management message on the linkset which the message was received.
- The EAGLE 5 ISS has a route to the destination field in the message (if applicable to the concerned message) on the linkset which the message was received. (For all link types, this rule does not apply to RST messages.)

Range: **off, notify, silent, test**

off — Screening is disabled; message is processed normally.

notify — Screening is enabled; UIM is generated and message is discarded.

silent — Screening is enabled; message is discarded. No UIM is generated.

test — Screening is enabled; UIM is generated and message is processed normally.

Default: Current value

System

Default: **off**

:secsccpmsg= (optional)

This parameter enables security screening for SCCP SCMG messages. The EAGLE 5 ISS should not receive an SCCP network management message unless:

- The EAGLE 5 ISS has a route to the OPC of the SCMG message on the linkset on which the message was received.
- The EAGLE 5 ISS has a route to the Affected Point Code (also called the Concerned Point Code in EAGLE 5 ISS) in the message on the linkset on which the message was received.

This parameter applies only to SSP and SOR messages. SSA, SST, SOG, SBR, SNR and SRT messages are not affected.

Range: **off, notify, silent, test**

off — Screening is disabled; message is processed normally.

notify — Screening is enabled; UIM is generated and message is discarded.

silent — Screening is enabled; message is discarded. No UIM is generated.

test — Screening is enabled; UIM is generated and message is processed normally.

Default: Current value

System

Default: **off**

:slscnv= (optional)

Per node SLS conversion indicator.

Range: **on, off, perls**

on — SLS conversion is enabled on all linksets.

off — SLS conversion is disabled on all linksets.

perls — SLS conversion is enabled on a per linkset basis.

Default: Current value

:tfatfrpr= (optional)

TFA/TFR pacing rate. This parameter specifies the amount of time, in milliseconds, between partial broadcasts of up to 20 percent increments of the number of TFAs/TCAs or TFRs/TCRs to be broadcast by the STP when an affected destination becomes accessible using its primary route rather than an alternate route. The STP uses this pacing to prevent congestion on the newly recovered linksets.

Range: **0-1000**

Set in increments of 100.

Default: Current value
System
Default: 1000

:uimrd= (optional)

Unsolicited Information Message (UIM) redirect indicator. This parameter specifies whether the UIMs are to be routed to the specified output group.

Range: **yes, no**
yes — Enabled
no — Disabled

Default: Current value
System
Default: **no**

:defndc= (obsolete)

This parameter is obsolete.

Example

```
chg-stpopts:mtpt31ctl=2:uimrd=yes
chg-stpopts:mtpxlq=1000:mtpxlet=0200:mtpxlot=75
chg-stpopts:critalminh=yes
chg-stpopts:npcfmti=4-4-4-2
chg-stpopts:randsls=all
chg-stpopts:rptlnpmrss=no
chg-stpopts:rstrdev=on
chg-stpopts:hsclksrc=t1framed
chg-stpopts:hsclksrc=e1unframed:force=yes
chg-stpopts:hscclkll=shorthaul
chg-stpopts:ansigflex=yes
chg-stpopts:cnvcgda=yes
chg-stpopts:gtcnvdfilt=yes
```

Dependencies

The values of the **mtpdpcq** and **mtpxlq** parameters are interdependent; that is, to increase the number of DPCs that can be provisioned, the number of x-list entries that the STP is to maintain must be decreased. Conversely, to increase the number of x-list entries that the STP maintains, the number of DPCs that can be provisioned must be decreased.

At least one optional parameter must be specified.

The ANSI-ITU-China SCCP Conversion feature must be enabled before the **cnvcgda**, **cnvcgdi**, **cnvcgdn**, **cnvcgdn24** or **gtcnvdfilt** parameters can be specified.

The G-Port, INP, and EIR features must be off before the **ansigflex** option can be enabled.

The G-Flex feature must be on before the **ansigflex** option can be enabled.

The **ansigflex** option cannot be enabled when Service Selector table contains an ITU entry. (See the **chg-srvsel** command.)

The **hsclksrc** parameter values **t1unframed**, **t1framed**, **e1unframed**, and **e1framed** cannot be specified if either TDM is a version that does not support the Global Timing Interface feature (both TDMs must be TDM-15 or later, with the Global Timing Interface **bpcdm** GPL loaded).

If changing the **hscldsrc** parameter value will cause system clocks to fail that are required to keep links active or TSCSYNC available, the **force=yes** parameter must also be specified. The **force=yes** parameter can be specified only with the **hscldsrc** parameter. Clocks are required in the following situations:

- When at least one DS0 card is provisioned, one BITS clocks is required.
- When a high speed link is being master-timed, at least one high speed clock is required.
- When TSCSYNC is turned on, both SYSTEM clocks (A and B) are required.

The **hscldll** parameter cannot be specified if either TDM is a version that does not support the Global Timing Interface feature (both TDMs must be TDM-15 or later, with the Global Timing Interface **bpcdm** GPL loaded).

The **mtpxlet** parameter must be specified in the one of the following formats: *mm*, *hmm*, *hhmm*, where *m* is minutes and *h* is hours. For example, **43** is 43 minutes, **138** is 1 hour 38 minutes, and **2400** is 24 hours.

When the **mtpxlet** parameter is specified, the value for minutes (*mm*) must be in the range **00-59**.

The DSTN5000 (5000 Routes) feature must be turned on before the **mtpdpcq** parameter value can be increased to more than **2000**.

When the number of x-list entries (the **mtpxlq** parameter) is specified, the total number of DPCs (the **mtpdpcq** parameter) and x-list entries provisioned cannot exceed the space available in the Route table.

When the number of DPCs (the **mtpdpcq** parameter) is specified, the total number of DPCs and x-list entries (the **mtpxlq** parameter) provisioned cannot exceed the space available in the Route table.

The number of DPCs provisioned (the **mtpdpcq** parameter) cannot be increased if space allocated for maintaining x-list entries becomes full.

The value for the **mtpdpcq** parameter cannot be less than the number of DPCs provisioned.

The Cluster Routing and Management Diversity (CRMD) feature must be turned on before the **mtpxlq**, **mtpxlet**, and **mtpxlot** parameters can be specified.

The maximum allowed number of destination point codes can be changed by the **mtpdpcq** parameter. The maximum value of the **mtpdpcq** parameter is one of the following values:

- **5000** if the DSTN5000 feature is on
- **6000**, **7000**, or **8000** if the respective 6000, 7000, or 8000 Routesets feature is enabled
- **2000** if no Routes or Routesets feature is on

If the Cluster Routing and Management Diversity feature is turned on, the maximum number of destination point codes contained in the exception list can be changed by the **mtpxlq** parameter. The maximum value of the **mtpxlq** parameter is one of the following values:

- **5000** if the DSTN5000 feature is on
- **6000** if the 6000, 7000, or 8000 Routesets feature is enabled
- **2000** if no Routes or Routesets feature is on

The sum of the values of the **mtpdpcq** and **mtpxlq** parameters can be increased beyond **2500** only if one or more of the following features is turned on:

- If the DSTN5000 feature is turned on (**chg-feat:dstn5000=on**), the **mtpdpcq** and **mtpxlq** parameters cannot exceed **5500**.

- If the 6000 Routesets feature is enabled (see the **enable-ctrl-feat** command), the **mtpdpcq** and **mtpxlq** parameters cannot exceed **6500**.
- If the 7000 Routesets feature is enabled (see the **enable-ctrl-feat** command), the **mtpdpcq** and **mtpxlq** parameters cannot exceed **7500**.
- If the 8000 Routesets feature is enabled (see the **enable-ctrl-feat** command), the **mtpdpcq** and **mtpxlq** parameters cannot exceed **8500**.

The ANSI MTP restart (MTPRS) feature must be turned on before the **mtprsit** parameter can be specified.

The ANSI MTP restart (MTPRS) or ITU MTP restart (ITUMTPRS) feature must be turned on before the **mtpirsi** parameter can be specified.

A value for the **tfatfrpr** parameter must be specified in increments of 100 milliseconds (0.1 seconds).

To enter seconds (instead of milliseconds) for the timer values, the timer value must contain at least one decimal place, and can contain up to three decimal places. If no decimal places are entered, the system accepts the value as milliseconds. The **rtrv-stpopts** command always displays the output in milliseconds, not seconds.

To specify the **criticalminh=no** parameter, critical alarms cannot be currently inhibited in the system.

If the **npcfnti** parameter is specified, it must be in the format *m1-m2-m3-m4* and all members must be specified. If the ITU national point code format is to only have two members, then two members of the **npcfnti** parameter must be specified as greater than zero, while the other two members must be specified as 0 (for example, **npcfnti=7-7-0-0**, **npcfnti=0-6-8-0**, or **npcfnti=0-0-4-10**).

If the **npcfnti** parameter is specified, the sum of the values specified for *m1+m2+m3+m4* must be equal to 14.

The G-Flex, G-Port, or INP feature must be turned on before the **defcc** or **dsmaud** parameter can be specified.

The **defcc** parameter value cannot already exist as an entry in the GSM Options Multiple Country Code (the **multcc** parameter) list.

If a GSM Options Multiple Country Code (the **multcc** parameter) has been defined, the **defcc=none** parameter cannot be specified.

The GSM Map Screening feature must be turned on (see the **enable-ctrl-feat** and **chg-ctrl-feat** commands) before the **gsmdflt** or **gsmsdecerr** parameter can be specified.

The **secmtpsid**, **secmtpsnm** and **secscpcsmg** parameters cannot be specified unless the Network Security Enhancements controlled feature has been enabled and turned on.

If the Origin-based MTP Routing feature is turned on, the **mtpmprst=no** parameter cannot be specified.

Notes

If the database contains ITU national point codes of a particular format, and the format is changed with the **npcfnti** parameter of the **chg-stpopts** command, the format of the ITU national point codes in the database will be changed to the new format.

The format defined by the **npcfnti** parameter applies to all database entities that use ITU national point codes except gateway screening. Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If the system is using a format for the ITU national point code other than a single number, the point code will have to be converted from its current format to a single number in order to be used by gateway screening. The conversion is explained in "Converting ITU National Point Code Formats".

For the STP option attributes supporting STP event message throttling, the values for the indicated parameters become effective in the next event-message output interval following their activation. All other updates become effective at the time of activation (immediately).

When the **slscnv=on** parameter is specified with the **chg-stpopts** command, the node acts as if the 5-bit to 8-bit SLS conversion is being performed on every linkset in the database, even those linksets that have the **slsci=no** parameter specified for them.

When the **slscnv=off** parameter is specified with the **chg-stpopts** command, the node acts as if the 5-bit to 8-bit SLS conversion has been turned off for every linkset in the database, even those linksets that have the **slsci=yes** parameter specified for them.


When the **slscnv=perls** parameter is specified with the **chg-stpopts** command, the 5-bit to 8-bit SLS conversion is performed only on the linksets that have the **slsci=yes** parameter specified for them.

When the value of the **dispactalms** parameter is changed, there could be a delay of up to five seconds as the VT320 screen refreshes to the selected display.

Eagle Clocks with TDM-GTI

Figure 5-9 shows a general schematic of clocking, without any of the redundant backup features, in the EAGLE 5 ISS with the TDM-GTI card. There are two types of input clocks that can be plugged into the control shelf backplane: low and high speed reference clocks. The TDM card takes these input clocks and uses them as timing references to generate the low and high speed clocks that are distributed to the cards in the EAGLE 5 ISS STP. These distributed clocks are used for various purposes depending on what types of links or features are provisioned.

Figure 5-9. Eagle Input and Internal Clocks with TDM-GTI

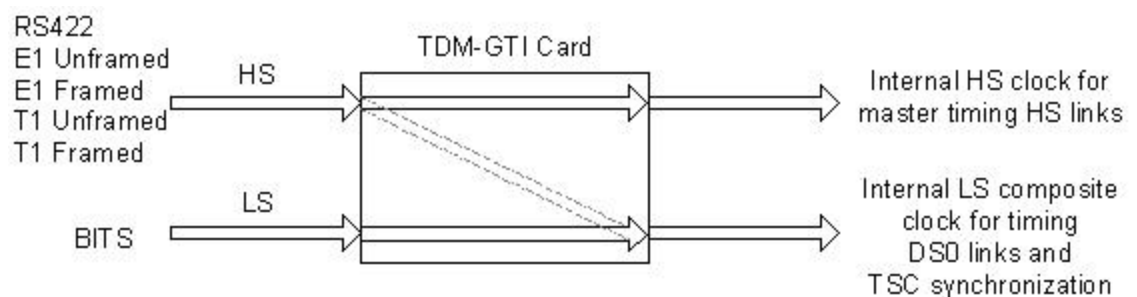

The high speed clock that is distributed to the cards in the EAGLE 5 ISS is used as the timing source only for high speed links that have been provisioned to use master timing. This clock can be derived only from the high speed input clock. Prior to TDM-GTI card the high speed input clock could be only the RS422 type. TDM-GTI adds the capability for this clock to be recovered from a framed or unframed E1 or T1 signal interface.

The low speed composite clock that is distributed to the cards in the EAGLE 5 ISS is used for timing DS0 links and for the Time Slot Counter Synchronization (TSCSYNC) feature that is required for the Sentinel and IMF products. Prior to TDM-GTI this low speed clock could be generated only from a BITS clock source plugged into the control shelf backplane. TDM-GTI can generate this low speed internal clock from the high speed input clock source, with the following restriction:

- When DS0 cards are provisioned in the system, the internal low speed clock can be generated only from a BITS clock as it is without TDM-GTI.
- When no DS0 cards are present and the BITS clocks are present and valid, the internal low speed clock is generated from the BITS clocks.

- When no DS0 cards are present and the BITS clocks are not present or not valid, the internal low speed clock is generated from the high speed input clock.

Output

chg-stpopts:mtpxlq=1000:mtpxlet=0200:mtpxlot=75

```
rlghncxa03w 04-07-07 11:43:04 EST EAGLE 31.6.0
CHG-STPOPTS: MASP A - COMPLTD
;
```

chg-t1

Change T1 Interface

Use this command to change a T1 interface for an E1/T1 MIM card, an HC-MIM card, or an E5-E1T1 card used as a T1 card. The T1 port number on the card and the T1 card location in the EAGLE 5 ISS must be specified.

Framing, line length, encoding, master/slave clocking options, and signaling bit setting can be specified.

On an HC-MIM card or an E5-E1T1 card, T1 ports 1, 3, 5, and 7 (master ports) can be independently channel bridged with their adjacent even-numbered (slave) T1 ports 2, 4, 6, and 8 to allow non-signaling data pass-through.

Keyword: **chg-t1**

Related Commands: **dlt-t1, ent-t1, rtrv-t1, tst-t1**

Command Class: Database Administration

Parameters

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

:t1port= (mandatory)

T1 port number. The value must be a T1 port for which an interface has already been configured on the specified T1 card.

Range: **1-8**

Ports 3 - 8 can be specified only for HC-MIM cards and E5-E1T1 cards.

:chanbrdg= (optional)

Indicates whether an odd numbered T1 port on an HC-MIM card or E5-E1T1 card is channel bridged with its adjacent even numbered port for non-signaling data pass through.

Range: **on, off**

Default: **off**

:encode= (optional)

Indicator for use of B8ZS or AMI encoding/decoding.

Range: **b8zs, ami**

Default: Current value

:framing= (optional)

Indicator for framing format.

Range: sf, esf
Default: Current value

:ll= (optional)

T1 cable length in feet between the EAGLE 5 ISS and the connecting node.

Range: 0 - 655

Default: 133

:t1tsel= (optional)

Timing source. Indicates master (external) or slave (line) timing source, or timing source recovered from the paired master port for the channel bridged slave port.

Range: line, external, recovered

Default: Current value

Example

```
chg-t1:loc=1205:t1port=1:encode=ami:t1tsel=external
```

```
chg-t1:loc=1205:t1port=2:encode=b8z:ll=250s
```

```
chg-t1:loc=1205:t1port=3:chanbrdg=on:t1tsel=recovered
```

Dependencies

At least one optional parameter must be specified.

The specified card location (**loc** parameter) must be equipped.

The card specified by the **loc** parameter must be a **limt1** card type.

The specified T1 port (**t1port** parameter) must be already equipped with a T1 interface.

All signaling links that are serviced by the specified T1 card (**loc** parameter) must be deactivated before the values for the **encode**, **t1tsel**, **ll**, and **framing** parameters can be changed. See the **dlt-slk** command to delete the signaling links.

The **chanbrdg=on** parameter cannot be specified for HC-MIM card or E5-E1T1 card even-numbered T1 ports (**t1port** parameter).

The timing source parameter **t1tsel** must be specified when the **chanbrdg=on** parameter is specified.

The **t1tsel=line** parameter cannot be specified when the specified T1 port (**t1port** parameter) on the HC-MIM card or E5-E1T1 card is in channel bridging mode.

The **t1tsel=recovered** parameter can be specified only when the specified T1 port (**t1port** parameter) on the HC-MIM card or E5-E1T1 card is in channel bridging mode.

The **force=yes** parameter must be specified to provision an odd-numbered T1 port to channel bridging mode on an HC-MIM card or an E5-E1T1 card if the adjacent next higher even-numbered port is already provisioned with a T1 interface.

Parameter values cannot be changed for the even-numbered T1 port interface (**t1port** parameter) in a channel bridged pair. The values must be changed in the odd-numbered port interface.

Before an odd-numbered T1 port (**t1port** parameter) on an HC-MIM card or E5-E1T1 card can be provisioned into channel bridging mode (**chanbrdg=on** parameter), all signaling links assigned to its next higher even-numbered adjacent T1 port must be deleted. See the **dlt-slk** command to delete the signaling links.

The fan feature bit must be on before HC-MIM cards can be used in an EAGLE 5 ISS shelf (see the **chg-feat** command). The system checks the fan feature bit when an HC-MIM card is present in the specified odd card location (**loc** parameter) and the **chanbrdg=on** parameter is specified.

HIPR cards must be equipped in card locations xy09 and xy10 (x is the frame, y is the shelf) on each EAGLE 5 ISS shelf that contains one or more HC-MIM cards or E5-E1T1 cards. The system checks

for HIPR cards when the **chanbrdg=on** parameter is specified for HC-MIM cards and E5-E1T1 cards.

The following card locations cannot be specified in the loc parameter: 1113, 1114, 1115, 1116, 1117, 1118 (OAM, TDM, MDAL cards), or xy09 and xy10 where x is the shelf and y is the slot (HMUX or HIPR cards). .

The **chanbrdg** parameter can be specified only for HC-MIM cards and E5-E1T1 cards.

The **chanbrdg=on** parameter cannot be specified if the T1 port (**t1port** parameter) has a timeslot for a channel card defined in its interface .

The **t1tsel=recovered** parameter cannot be specified for a T1 port (**t1port** parameter) on the HC-MIM or E5-E1T1 card if the T1 port status is channel bridged slave without specifying the **chanbrdg=on** parameter. The **chanbrdg=off** parameter cannot be specified for a T1 port (**t1port** parameter) on the HC-MIM or E5-E1T1 card if the T1 port timing is recovered without specifying the **t1tsel=line** parameter.

Line (slave) timing cannot be used with channel bridging. If the **t1tsel=line** parameter is specified for a T1 port (**t1port** parameter) on an HC-MIM card or E5-E1T1 card with T1 port status of channel bridged with external (master) timing, the **chanbrdg=off** parameter must also be specified. If the **chanbrdg=on** parameter is specified for a T1 port (**t1port** parameter) on an HC-MIM card or E5-E1T1 card that uses T1 port line (slave) timing, the **t1tsel=recovered** parameter or the **t1tsel=external** parameter must also be specified.

Notes

External timing is derived from the EAGLE 5 ISS High-Speed Master Clock (1.544 MHz for T1 or 2.048 MHz for E1); therefore, the Master Timing feature is required. Line timing is derived from its received data stream, if present.

Output

chg -t1: loc=1205: t1port=1: encode=ami: t1tsel=external

```
rlghncxa03w 04-01-20 09:07:58 EST EAGLE 31.3.0
CHG-T1: MASP A - COMPLTD
```

;

chg-th-alm

Change SCCP Alarm Thresholds

Use this command to change the following alarm threshold percentages:

- The alarm threshold percentages used by the system SCCP. The SCCP will alarm whenever the transactions-per-second (TPS) for the EAGLE 5 ISS (as a whole) exceeds the value set by this command.
- Level 1 and Level 2 threshold percentages for LNP TN, LRN, and NPANXX occupancy limits. Alarms occur whenever provisioning levels of the LNP TN, LRN, and NPANXX databases exceed the predetermined occupancy limits.
- Thermal operating percentages for the HC MIM, E5-E1T1, and E5-ENET cards. Alarms occur when the temperature of a card approaches or exceeds predetermined thermal operating limits.

NOTE: This command replaces the chg-th-sccp command, which is obsolete.

Keyword: chg-th-alm

Related Commands: rept-stat-sccp, rtrv-th-alm

Command Class: Database Administration

Parameters**:gttservlv1=** (optional)

The percentage for the SCCP GTT Service error ratio level 1 (lower) Threshold Alarm.

Range: 1-100**Default:** 10**:gttservlv2=** (optional)

The percentage for the SCCP GTT Service error ratio level 2 (upper) Threshold Alarm.

Range: 1-100The value for the **gttservlv2** parameter must be greater than the value for the **gttservlv1** parameter.**Default:** 20**:lnpdblvl1=** (optional)

The percentage for the TN Database provisioned level 1 (lower) Capacity Threshold Alarm.

Range: 1-100**Default:** 80**:lnpdblvl2=** (optional)

The percentage for the TN Database provisioned level 2 (upper) Capacity Threshold Alarm.

Range: 1-100The value of the **lnpdblvl2** parameter must be greater than the value of the **lnpdblvl1** parameter.**Default:** 90**:lnpdblvl2=** (optional)

The percentage for the LNP TN Database provisioned level 2 (upper) Capacity Threshold Alarm.

Range: 1-100The specified value must be greater than the **lnpdblvl1** parameter value.**Default:** 95**:nongttservlv1=** (optional)

The percentage for the SCCP Non-GTT Service (GPORT, GFLEX, EIR, LNPMR, LNPQS, WNPQS, TLNP, PLNPQS, INPMR, INPQS) error ratio level 1 (lower) Threshold Alarm.

Range: 1-100**Default:** 10**:nongttservlv1=** (optional)

The percentage for the SCCP Non-GTT Service (GPORT, GFLEX, EIR) error ratio level 1 (lower) Threshold Alarm.

Range: 1-100**Default:** 10**:nongttservlv2=** (optional)

The percentage for the SCCP Non-GTT Service (GPORT, GFLEX, EIR, LNPMR, LNPQS, WNPQS, TLNP, PLNPQS, INPMR, INPQS) error ratio level 2 (upper) Threshold Alarm.

Range: 1-100**Default:** 20**:nongttservlv2=** (optional)

The percentage for the SCCP Non-GTT Service (GPORT, GFLEX, EIR) error ratio level 2 (upper) Threshold Alarm.

Range: 1-100**Default:** 20

:sccpalcmtld= (optional)

The TPS calculation method used to determine if the TPS Threshold Alarm levels have been exceeded or not.

Range: **n, nplus1**

n — All In Service Normal cards are used in the TPS calculation.

nplus1 — All In Service Normal cards minus 1 card are used in the TPS calculation.

Default: **n**

:sccptpscap= (optional)

The percentage for the SCCP Load Capacity Threshold Alarm.

Range: **1-100**

Default: **80**

:thermallv1= (optional)

Thermal Alarm Level 1 as a percentage of a card's thermal limit.

Range: **73-92**

:thermallv2= (optional)

Thermal Alarm Level 2 as a percentage of a card's thermal limit.

Range: **74-100**

Example

chg-th-alm:lnptndblv1=85

chg-th-alm:sccptpscap=85

chg-th-alm:sccpalcmtld=nplus1

chg-th-alm:gtservlv1=25:gtservlv2=28

Dependencies

The values for Thermal Alarm Level 1 and Level 2 cannot be the same.

Each Level 1 parameter value must be less than its corresponding Level 2 parameter value.

Notes

To display the currently configured values for the Thermal Alarm Levels, use the **rtrv-th-alm** command.

HC MIM cards have a thermal operating limit of 82 degrees Celsius. The E5-E1T1 and E5-ENET cards have a thermal operating limit of 99 degrees Celsius.

The thermal threshold values represent a percentage of the thermal operating limit of a card.

Output

chg-th-alm:thermallv1=85

rlghncxa03w 06-05-07 11:43:04 EST EAGLE 35.0.0
CHG-TH-ALM: MASP A - COMPLTD

;

chg-th-sccp

Change SCCP Alarm Thresholds

Use this command to change the value used for the system SCCP TPS (transactions-per-second) threshold alarm. An alarm (UAM 0330) triggers when the TPS for the EAGLE 5 ISS system is greater than the value set by the **chg-th-sccp** command. The alarm is a warning that the system is approaching the point where it might start losing global title transactions.

NOTE: This command is obsolete. Use the chg-th-alm command for these functions.

Keyword: **chg-th-sccp**

Related Commands: **rept-stat-sccp, rtrv-th-sccp**

Command Class: Database Administration

Parameters

:ldcap= (mandatory)

Load capacity in percentages.

Range: **0 - 100**

Example

chg-th-sccp:ldcap=80

Dependencies

A threshold value must be set within the range of **0** to **100**.

Notes

It is recommended that the threshold be set at 80%, which is the system default value for the **ldcap** parameter. It is recommended that the threshold is not set any higher than 90%, to allow time to obtain additional SCCP cards and reprovision the system if the TPS capacity is reached. Also, setting the threshold at too low a level can cause excessive alarms.

Output

chg-th-sccp:ldcap=80

rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0

Command entered at terminal #4.

Command Executed

;

chg-trm

Change Terminal

Use the change terminal command to configure the operational characteristics of each of the 40 terminal ports used to connect modems, printers, and terminals to the system.

Keyword: **chg-trm**

Related Commands: **act-echo, canc-echo, chg-trm, dact-echo, inh-trm, rept-stat-trm, rmv-trm, rst-trm, rtrv-trm**

Command Class: Database Administration

Parameters

:trm= (mandatory)

The ID number of the terminal whose characteristics are to be changed.

Range: **1-40**

:all= (optional)

Specifies whether you want to see unsolicited messages of all types (TRAF, LINK, SA, DB, SYS, PU, LNPDB, LNPSUB, UIMRD, APPSERV, APPSS, CARD, CLK, DBG, GTT, GWS, MEAS, MON, MPS, SEAS, SLAN) in the scroll area.

Range: **yes, no**

yes—Receive all.

no—Receive none.

Default: **yes**—If **type=emsalm** is specified

Current value—if **type** parameter value is not **emsalm**

:appserv= (optional)

Specifies whether you want to see UAMs/UIMs assigned to the Application Server output group in the scroll area.

Range: **yes, no**

yes—Receive all.

no—Receive none.

Default: If **all** is specified—current **all** value

 If **all** is not specified—current **appserv** value.

 If **type=emsalm** is specified—**yes**

System

Default: **no**

:appss= (optional)

Specifies whether you want to see UAMs/UIMs assigned to the Application Subsystem output group in the scroll area

Range: **yes, no**

yes—Receive all.

no—Receive none.

Default: If **all** is specified—current **all** value

 If **all** is not specified—current **appss** value.

 If **type=emsalm** is specified—**yes**

System

Default: **no**

:baud= (optional)

The line speed (baud rate) for this terminal's serial port connection.

Range: **2400, 4800, 9600, 19200**

Default: If **type=oap**—**19200**

 If **type** is **not oap**—no change to current value.

System

Default: **9600**

:card= (optional)

Specifies whether you want to see UAMs/UIMs assigned to the Card output group in the scroll area.

Range: **yes, no**

yes—Receive all.

no—Receive none.

Default: If **all** is specified—current **all** value

 If **all** is not specified—current **card** value.

 If **type=emsalm** is specified—**yes**

System

Default: **no**

:clk= (optional)

Specifies whether you want to see UAMs/UIMs assigned to the Clock output group in the scroll area.

Range: **yes, no**

yes—Receive all.

no—Receive none.

Default: If **all** is specified—current **all** value

 If **all** is not specified—current **clk** value.

 If **type=emsalm** is specified—**yes**

:db= (optional)

Specifies whether you want to see database-related unsolicited messages in the scroll area.

Range: **yes, no**
 yes—Receive all.
 no—Receive none.

Default: If **all** is specified—current **all** value
 If **all** is not specified—current **db** value.
 If **type=emsalm** is specified—**yes**

System

Default: **no**

:dbg= (optional)

Specifies whether you want to see UAMs/UIMs assigned to the Debug output group in the scroll area.

Range: **yes, no**
 yes—Receive all.
 no—Receive none.

Default: If **all** is specified—current **all** value
 If **all** is not specified—current **dbg** value.
 If **type=emsalm** is specified—**yes**

System

Default: **no**

:dural= (optional)

Terminal lockout time. Specifies the length of time the terminal is disabled after each failed login/unlock attempt in excess of the threshold configured on the **mxinv** parameter. The value can be specified as seconds (*ss*); minutes and seconds (*mmss*); or hours, minutes, and seconds (*hmmss*).

Range: **0-999999**
 0-59 (*ss*)
 0-5959 (*mmss*)
 0-995959 (*hmmss*)
 999999

Default: Current value.

System

Default: **100** - 1 minute, 0 seconds

:fc= (optional)

The type of flow control used to regulate the flow of data between the system and an RS-232 connected device, so that no characters are lost (especially at high baud rates). The control setting of the system and the connected device must match.

Range: **hw, sw, both, none**
 hw—hardware flow control
 sw—software flow control
 both—hardware and software flow control
 none—neither hardware nor software flow control

Default: If **type=oap**—**sw**
 If **type** is **not oap**—no change to current value.

System

Default: **sw**

:gtt= (optional)

Specifies whether you want to see UAMs/UIMs assigned to the GTT output group in the scroll area.

Range: **yes, no**
 yes—Receive all.
 no—Receive none.

Default: If **all** is specified—current **all** value
 If **all** is not specified—current **gtt** value.

If **type=emsalm** is specified—**yes**

:gws= (optional)

Specifies whether you want to see UAMs/UIMs assigned to the GWS output group in the scroll area.

Range: **yes, no**

yes—Receive all.

no—Receive none.

Default: If **all** is specified—current **all** value
 If **all** is not specified—current **gws** value.
 If **type=emsalm** is specified—**yes**

System

Default: **no**

:link= (optional)

Specifies whether you want to see link maintenance-related unsolicited messages in the scroll area.

Range: **yes, no**

yes—Receive all.

no—Receive none.

Default: If **all** is specified—current **all** value
 If **all** is not specified—current **link** value.
 If **type=emsalm** is specified—**yes**

:lnpdb= (optional)

LNP database. Specifies whether you want to see LNP database-related autonomous messages in the scroll area.

Range: **yes, no**

yes—Receive all.

no—Receive none.

Default: If **all** is specified—current **all** value
 If **all** is not specified—current **lnpdb** value.
 If **type=emsalm** is specified—**yes**

System

Default: **no**

:lnpsub= (optional)

LNP subscription. Specifies whether you want to see LNP subscription-related autonomous messages in the scroll area.

Range: **yes, no**

yes—Receive all.

no—Receive none.

Default: If **all** is specified—current **all** value
 If **all** is not specified—current **lnpsub** value.
 If **type=emsalm** is specified—**yes**

System

Default: **no**

:meas= (optional)

Specifies whether you want to see UAMs/UIMs assigned to the Measurements Maintenance output group in the scroll area.

Range: **yes, no**

yes—Receive all.

no—Receive none.

Default: If **all** is specified—current **all** value
 If **all** is not specified—current **meas** value.
 If **type=emsalm** is specified—**yes**

System**Default:** **no****:mon=** (optional)

Specifies whether you want to see UAMs/UIMs assigned to the Monitor output group in the scroll area.

Range: **yes, no****yes**—Receive all.**no**—Receive none.**Default:** If **all** is specified—current **all** valueIf **all** is not specified—current **mon** value.If **type=emsalm** is specified—**yes****:mps=** (optional)

Specifies whether you want to see UAMs/UIMs assigned to the MPS output group in the scroll area.

Range: **yes, no****yes**—Receive all.**no**—Receive none.**Default:** If **all** is specified—current **all** valueIf **all** is not specified—current **mps** value.If **type=emsalm** is specified—**yes****:mxinv=** (optional)

Login/unlock failure threshold. When a login or unlock failure occurs on a terminal, a counter of successive login failures is incremented by one. After the increment, if the counter is greater than or equal to the mxinv parameter value, the system sends an information message to all system administrator ports and locks out the port temporarily. The port is locked out for an interval that is specified in the dural parameter.

To disable the info message and temporary lockout function for the terminal, specify **mxinv=0**.

Range: **0-9****Default:** Current value.**System****Default:** **5** - successive failed login/unlock attempts**:prty=** (optional)

The parity for this terminal's serial port connection.

Range: **none, even, odd****Default:** If **type=oap**—**even**If **type** is **not oap**—current value.**System****Default:** **even****:pu=** (optional)

Specifies whether you want to see program update-related unsolicited messages in the scroll area.

Range: **yes, no****yes**—Receive all.**no**—Receive none.**Default:** If **all** is specified—current **all** valueIf **all** is not specified—current **pu** value.If **type=emsalm** is specified—**yes****:sa=** (optional)

Specifies whether you want to see security administration-related unsolicited messages in the scroll area.

Range: **yes, no**
 yes—Receive all.
 no—Receive none.
Default: If **all** is specified—current **all** value
 If **all** is not specified—current **sa** value.
 If **type=emsalm** is specified—**yes**

:sb= (optional)

The number of stop bits used in communications with the terminal.

Range: **1-2**
Default: If **type=oap**—**1**
 If **type** is **not oap**—current value.

System

Default: **1**

:seas= (optional)

Specifies whether you want to see UAMs/UIMs assigned to the SEAS Maintenance output group in the scroll area.

Range: **yes, no**
 yes—Receive all.
 no—Receive none.
Default: If **all** is specified—current **all** value
 If **all** is not specified—current **seas** value.
 If **type=emsalm** is specified—**yes**

:slan= (optional)

Specifies whether you want to see UAMs/UIMs assigned to the SLAN Maintenance output group in the scroll area.

Range: **yes, no**
 yes—Receive all.
 no—Receive none.
Default: If **all** is specified—current **all** value
 If **all** is not specified—current **slan** value.
 If **type=emsalm** is specified—**yes**

System

Default: **no**

:sys= (optional)

Specifies whether you want to see system maintenance-related unsolicited messages in the scroll area.

Range: **yes, no**
 yes—Receive all.
 no—Receive none.
Default: If **all** is specified—current **all** value
 If **all** is not specified—current **sys** value.
 If **type=emsalm** is specified—**yes**

:tmout= (optional)

Maximum channel idle time. Specifies the maximum amount of time in minutes that a login session can remain idle (that is, no user input) on a terminal before being automatically logged off. To disable idle time monitoring for a terminal, specify **tmout=0**.

Range: **0-99**
Default: Current value.
System
Default: **30** - minutes

:traf= (optional)

Specifies whether you want to see traffic-related unsolicited messages displayed in the scroll area.

Range: **yes, no**

yes—Receive all.

no—Receive none.

Default: If **all** is specified—current **all** value
 If **all** is not specified—current **traf** value
 If **type=emsalm** is specified—**yes**

System

Default: **no**

:type= (optional)

The type of device being connected to this terminal.

Range: **vt320, ksr, oap, printer, sccs, mgmt, telnet, emsalm, none**

The **type=emsalm** parameter value is valid for terminals 1-40.

Only **telnet**, **emsalm**, and **none** are valid values for terminals 17 - 40.

Default: Current value.

System

Default: **vt320** - for terminals 1-16
 telnet - for terminals 17-40

:uimrd= (optional)

Specifies whether you want to see the unsolicited messages assigned to this group.

Range: **yes, no**

yes—Receive all.

no—Receive none.

Default: If **all** is specified—current **all** value
 If **all** is not specified—current **uimrd** value.
 If **type=emsalm** is specified—**yes**

System

Default: **no**

Example

chg-trm:trm=8:type=oap:all=yes

chg-trm:trm=2:all=yes

chg-trm:trm=13:type=ksr:baud=9600:uimrd=yes

chg-trm:trm=1:link=yes:sys=yes:db=yes:lnpdb=yes

chg-trm:trm=17:all=yes

chg-trm:trm=22:type=none

chg-trm:trm=22:type=emsalm

chg-trm:trm=10:link=yes:card=yes:clk=yes

chg-trm:trm=1:type=ksr:gtt=yes

chg-

trm:trm=2:appserv=no:appss=yes:card=yes:clk=no:dbg=no:gtt=yes:gws=no:meas=yes:mon=no:mps=yes:seas=no:slan=yes

Dependencies

At least one optional parameter must be specified.

The system requires that at least two terminals be configured as security administration terminals. If you have configured only two security administration terminals, you cannot change the **type**

parameter to a value that would make the terminal unusable (**oap**, **printer**, or **none**) because only one security administration terminal would remain.

The combined total line speed (baud rate) for all active terminal ports cannot exceed **168,000**. This value allows for 16 terminal to be configured at 9600 bps each.

If **prty** is set to **none**, do not set **type** to **vt320**. A VT320 terminal does not support 7-bit data bytes and no parity. (The number of data bits cannot be changed.)

If **prty** is set to **none**, do not set **type** to **scs**. The **type=scs** parameter and the **prty=none** parameter cannot be specified together in the command.

For terminals 1-16 the terminal **type** parameter value cannot be **telnet**.

For terminals 17 - 40, the terminal **type** parameter value can be only **telnet**, **emsalm**, or **none**.

The communications parameters (**baud**, **prty**, **sb**, **fc**) cannot be specified when the terminal **type** parameter value is **telnet**.

When the **type=telnet** parameter or the **type=emsalm** parameter is specified in the command for a telnet type terminal (IDs 17-40), an IPSM card must be equipped in the system. Parameters for a telnet type terminal cannot be changed unless an IPSM card has been added for the target terminal.

NOTE: If you install one IPSM card, telnet terminals 17-24 are available. If you install two IPSM cards, telnet terminal IDs 17-32 are available. If you install three IPSM cards, telnet terminal IDs 17-40 are available. If you remove an installed IPSM card, the eight terminal IDs that were assigned to that card are no longer available. For example, if you install three IPSM cards, and remove the second card that was installed, telnet terminal IDs 17-24 and 33-40 are available. To make the IDs consecutive again, you would need to remove and reinstall the third card that was previously installed. Then its available terminal IDs change from 33-40 to 25-32. You can enter the rtrv-trm command to display the available telnet terminal IDs.

Communications parameters (**type**, **baud**, **prty**, **sb**, **fc**) cannot be changed when the terminal is not inhibited. The message status (parameters **all**, **traf**, **link**, **sa**, **db**, **sys**, **uimrd**, and **pu**) can be changed on any terminal, including the one you are using, regardless of the port status (inhibited or allowed).

The port cannot be removed from service (**rmv-trm**) when the **type**, **baud**, **prty**, **sb**, and **fc** parameters are being changed.

The SEAS feature must be on before the **type=oap** parameter can be specified (see the **rtrv-feat** command output SEAS=ON entry).

The IP User Interface (Telnet) feature must be enabled and turned on before the **type=telnet** parameter (IDs 17-40) or the **type=emsalm** parameter (IDs 1-40) can be specified.

The LNP feature must be turned on before the **lnpdb** and **lnpsub** parameters can be specified. If the **all=yes** parameter is specified, and the LNP feature has not been turned on, the **lnpdb** and **lnpsub** values default to **no**.

A maximum of two OAP terminals (**type=oap** parameter) can be configured for SEAS.

Communication attributes (**baud**, **prty**, **sb**, **fc** parameters) cannot be specified when the **type=oap** parameter is specified.

Notes

Refer to Appendix D, "Unsolicited Output Message Groups," in the *Maintenance Manual* for a list of unsolicited output messages that you might see for each output group.

This command cannot be entered when an upgrade is in progress.

If your terminal has the auto-wrap feature, you must disable the feature to use the terminal on the system.

To disable the informational message and temporary port lockout feature for a terminal, specify the **mxinv=0** parameter.

To prevent a terminal from being disabled, specify the **dural=0** parameter.

To make the lockout period for a terminal indefinite, specify the **dural=999999** parameter. When disabled, a terminal remains disabled until the port is inhibited (**inh-trm** command) and then allowed (**alw-trm** command).

Terminal idle time monitoring and auto-logout applies only if the terminal **type** is **vt320**, **ksr**, or **scs**. The **chg-trm** command can be entered with a **tmout** parameter value for other terminal types, but it has no effect.

Using the terminal type of **none** (**type=none**) conveys to the terminal processor that a particular port is not connected or is no longer in use. The terminal processor does not service output queues for a terminal port that is configured as **type=none**.

When the terminal type for a terminal is changed to **type=emsalm**, the value for all output group parameters is set to **yes**.

When the terminal type for a terminal is changed from **type=emsalm** to another type, the current value for all output groups is not changed. A command must be entered to change one or more output group values to another value.

NOTE: Though the output groups are set to yes, terminals of type emsalm do not display any reports or any UIMs except "UIM 1083 system alive".

The number of data bits cannot be changed; it is set to 7.

Software flow control (XON and XOFF pacing), involves sending control codes between the system and the connected device.

Hardware flow control (RTS and CTS pacing) uses the RTS and CTS lines of the RS-232 interface to pause and restart the flow of data between the system and the connected device.

Software flow control is recommended if the connected device is a printer. Both software and hardware flow control are highly recommended if the connected device is a modem.

To connect a modem, specify the **type=vt320** parameter.

The **all** parameter cannot be specified in the command with the other message status parameters (**traf**, **link**, **sa**, **db**, **sys**, or **pu**). If the **all** parameter and other message status parameters are specified together in the command, the terminal is assigned the other specified message status parameters and the **all** parameter is ignored.

Output

```
chg-trm:trm=2:all=yes
rlghncxa03w 04-05-07 11:11:28 EST EAGLE 31.5.0
CHG-TRM: MASP A - COMPLTD
;
```

chg-ttmap

Change Translation Type Mapping

Use this command to change a mapped SS7 message translation type (TT) for a given gateway linkset name. With this command you can change the identification of the type of allowed global title translation in the SS7 message before and after translation type mapping. For example, suppose you are mapping the translation type 001 (before TT mapping) to 238 (after TT mapping). You can use this command to change that mapping to 001 (before) to 254 (after).

Keyword: **chg-ttmap**

Related Commands: **dlt-ttmap**, **ent-ttmap**, **rtrv-ttmap**

Command Class: Database Administration

Parameters**:ett=** (mandatory)

Translation type before mapping. The identification of the type of global title translation in the SS7 message *before* translation type mapping. This attribute is the decimal representation of the 1-octet binary field used by the SS7 protocol to identify the translation type.

Range: 0-255**:io=** (mandatory)

Incoming or outgoing. The system uses this parameter to indicate whether the translation type mapping data provisioned for the gateway linkset is for SS7 messages *received* or *sent* on the linkset.

Range: i, o

i—incoming

o—outgoing

:lsn= (mandatory)

Linkset name. The unique network identifier for the gateway linkset.

Range: aaaaaaaaa

1 alphabetic character followed by 9 alphanumeric characters

:mtt= (mandatory)

Mapped translation type. The identification of the type of global title translation in the SS7 message *after* translation type mapping. This attribute is the decimal representation of the 1-octet binary field used by the SS7 protocol to identify the translation type.

Range: 0-255**Example****chg-ttmap:lsn=nc001:io=o:ett=128:mtt=55****Dependencies**

The linkset must be defined.

Notes

None

Output**chg-ttmap:lsn=nc001:io=o:ett=128:mtt=55**

```
rlghncxa03w 04-01-22 10:37:07 EST EAGLE 31.3.0
CHG-TTMAP: MASP A - COMPLTD
```

```
TTMAP table for nc001 is (2 of 64) 3% full
```

```
;
```

chg-uaps**Change UA Parameter Set**

Use this command to change the UA parameter set.

Keyword: chg-uaps**Related Commands:** rtrv-uaps**Command Class:** Database Administration**Parameters****:set=** (mandatory)

UA parameter set to be changed.

Range: 1-10
Default: Current value

:parm= (optional)

Parameter number.

Range: 1-10
 1—ASP SNM Options
 2—ASP/AS Notifications
 3—UA Serviceability Options
 4-10—Unused
Default: Current value

:pvalue= (optional)

The numerical value that the parameter (**parm**) will be set to if specified. Each parameter value is 32 bits (decimal 4294967295); not all 32 bits are used for each parameter. Only the values of the used bits are evaluated to determine the parameter value.

If the default setting for one bit is ON and you want to turn ON another bit in addition, specify the value that turns both bits ON. To turn OFF a bit that is ON and leave other bits ON, specify the value that turns ON just the bits that you want to be on. See the Notes section for this command for an explanation of the meanings of the bit settings.

Range: 0-4294967295
 Enter a valid decimal or hexadecimal value shown in Table 5-33 for the **pvalue** parameter for the specified parameter (**parm**).

Table 5-33. Valid and Default UAPS Parameter Values

Parameter (parm)	To Turn On Only Bit(s)	Decimal pvalue	Hexadecimal pvalue	System Default
1. ASP SNM Options Bit 0 = Broadcast Bit 1 = Response Method Bit 6 = Broadcast Congestion Status Change Bits 2-5 and 7-31 = Unused	0	1	h'1	
	1	2	h'2	
	6	64	h'40	Off
	0, 1	3	h'3	On
	0, 6	65	h'41	
	1, 6	66	h'42	
	0, 1, 6	67	h'43	
2. ASP/AS Notifications Bit 0 = ASP ACTIVE Notifications Bit 1 = ASP INACTIVE Notifications Bit 2 = ASP AS State Query	0	1	h'1	
	1	2	h'2	
	2	4	h'4	
	0, 1	3	h'3	
	0, 2	5	h'5	

Table 5-33. Valid and Default UAPS Parameter Values

Parameter (parm)	To Turn On Only Bit(s)	Decimal pvalue	Hexadecimal pvalue	System Default
Bits 3-31 = Unused	1, 2	6	h'6	
	0, 1, 2	7	h'7	Off
3. UA Serviceability Options Bit 0 = UA Heartbeats Bits 1-31 = Unused	0	1	h'1	Off

Default: Current value

:srcset= (optional)

When specified, this source UAPS will be copied into the specified UAPS (**set**).

Range: 1-10

Default: Empty

:timer= (optional)

The Timer number within the UA parameter set.

Range: 1-10

1—Unused

2—False IP Connection Congestion Timer

3—UA Heartbeat Period Timer

4—UA Heartbeat Received Timer

5-10—Unused

Default: Current value

:tvalue= (optional)

The value that each timer will be set to. Though each timer value is 32 bits (decimal 4294967295), the **ss7ipgw** and **ipgwi** applications enforce 10-200 milliseconds for timer 1 and 0-30,000 milliseconds for timer 2.

Range: 10-60000

Timer 2—10-30000 milliseconds

Timer 3—100-60000 milliseconds

Timer 4—100-10000 milliseconds

Default: Current value

System

Default: Timer 2 - 3000 milliseconds
Timer 3 - 10000 milliseconds
Timer 4 - 5000 milliseconds

Example

The following example copies UA parameter set 1 into UA parameter set 2.

chg-uaps: set=2: srcset=1

The following example sets the Timer 2 value to 30 milliseconds.

chg-uaps:set=1:timer=2:tvalue=30

The following example sets the UA parameter set 2 value to hexadecimal 7, which turns on bits 0, 1, and 2.

chg-uaps:set=1:parm=2:pvalue=h'7

The following example sets the Timer 2 value to 30 milliseconds, and sets the value for UA parameter set 1 to decimal 64, which turns OFF bits 0 and 1 and turns ON only bit 6.

chg-uaps:set=2:timer=2:tvalue=30:parm=1:pvalue=64**Dependencies**

The **srcset** and **set** parameter values cannot be the same.

At least one of the **timer**, **parm**, and **srcset** optional parameters must be entered.

If the **srcset** parameter is specified, no other optional parameters can be entered in the command.

If the **parm** parameter is specified, the **pvalue** parameter must be specified.

If the **timer** parameter is specified, the **tvalue** parameter must be specified.

Notes

There are 10 UA parameter sets. Each UA parameter set has 10 timers and 10 optional bit-mapped parameters. The bit-mapped parameter values control SNM and extended UA notification message behavior.

Timer 2 is the False IP Connection Congestion Timer, which controls the maximum amount of time (in milliseconds) that an association will be allowed to remain congested before failing due to false connection congestion. This timer value is limited to 0-30,000 milliseconds by the IPGWx application. The default value is 3000 milliseconds. If the timer is configured to have a value greater than 30,000, then IPGWx treats the timer as configured with 30,000.

The bit-mapped parameters contain the following flags, which are set by using the **pvalue** parameter to turn the bits on or off in each bit map:

Broadcast—Controls broadcast phase SNM TFPs, TFRs and TFAs sent when a destination's status changes. If this flag is on (set to 1), SNM TFPs, TFRs, and TFAs will be broadcast to all associations and sockets assigned to routing keys associated with the destination's network and group code. The default is to enable all broadcast phase messages.

Response Method—Sending a SNM TFC/UPU as a reply to a message received on an association or a socket for an unavailable destination. If this bit is on (set to 1), the SNM response message is sent. The default is to allow the response to be sent.

Broadcast Congestion Status Change—Controls sending unsolicited congestion status changes. If this flag is on (set to 1) for an ASP, unsolicited congestion status messages are sent by the ASP when a destination's congestion status changes. This flag is applicable only if **ipgwabate** has been turned on with the **chg-sg-opts** command. The default is do not generate unsolicited congestion status changes.

ASP ACTIVE Notifications—Controls sending ASP-Active notifications. If this flag is on (set to 1), the Secure Gateway will, when an ASP transitions to Active, send a Notify message to all inactive and active ASPs in the AS of status type "Other" and a newly defined status ID of "ASP Activation". The ASP Activation notification message will include the ASP ID of the ASP that activated, and is transmitted only if the ASP ID is present. This notification is an extension to RFC3332 and not implemented for M3UA Version 8 adapters. The default is do not send ASP Active Notifications.

ASP INACTIVE Notifications—Controls sending ASP-Inactive notifications. If this flag is on (set to 1), the Secure Gateway will, when an ASP transitions to Inactive, send a Notify

message to all inactive and active ASPs in the AS of status type "Other" and a newly defined status ID of "ASP Inactivation". The ASP Inactivation notification message will include the ASP ID of the ASP that inactivated and is transmitted only if the ASP ID is present. This notification is an extension to RFC3332 and not implemented for M3UA Version 8 adapters. The default is do not send ASP Inactive Notifications.

ASP AS State Query—Controls sending ASP/AS State Notifications on request by ASP. If this flag is on (set to 1), the Secure Gateway will respond with ASP and AS state notifications if 1) the remote ASP sends ASP-UP or ASP-INACTIVE while the local ASP is in the ASP-INACTIVE state, or 2) the remote ASP sends ASP-ACTIVE while the local ASP is in the ASP-ACTIVE state. The default is do not send state notifications.

UA Heartbeats—Controls sending UA Heartbeats on request by a connection. If this flag is on (set to 1), Heartbeat messages are transmitted in the ASP-DOWN, ASP-ACTIVE and ASP-INACTIVE States on connections from the Secure Gateway to the far end.

Output

chg-uaps:set=2:srcset=1

```
rlghncxa03w 02-03-07 11:11:28 EST EAGLE 30.0.0
CHG-UAPS: MASP A - COMPLTD
```

;

chg-user

Change User

Use this command to change user access to commands, change user ID's, and change passwords.

Keyword: **chg-user**

Related Commands: **act-user, chg-pid, dact-user, dlt-user, ent-user, login, logout, rept-stat-user, rtrv-secu-user, rtrv-user**

Command Class: Security Administration

Parameters

:uid= (mandatory)

User ID

Range: *0ZZZZZZZZZZZZZZ*

1 alphabetic character followed by up to 15 alphanumeric characters

:all= (optional)

Specifies whether or not the user ID is assigned all non-configurable command classes (LINK, SA, SYS, PU, DB, DBG, LNP, LNPDB, LNPSUB).

Range: **yes, no**

Default: Current value

:cc1= (optional)

Configurable command class name (*ayy*), and an indicator (**-yes** or **-no**) to specify whether the User ID can enter commands assigned to the specified command class.

Range: *ayy*

Specify the parameter value in the format *ayy -no* or *ayy -yes*.

ayy—Configurable command class name of 1 alphabetic character followed by 2 alphanumeric characters

-no—Indicates that the command class is not allowed.

-yes—Indicates that the command class is allowed.

:cc2= (optional)

Configurable command class name (*ayy*), and an indicator (**-yes** or **-no**) to specify whether the User ID can enter commands assigned to the specified command class.

Range: *ayy*

Specify the parameter value in the format *ayy -no* or *ayy -yes*.

ayy—Configurable command class name of 1 alphabetic character followed by 2 alphanumeric characters

-no—Indicates that the command class is not allowed.

-yes—Indicates that the command class is allowed.

:cc3= (optional)

Configurable command class name (*ayy*), and an indicator (**-yes** or **-no**) to specify whether the User ID can enter commands assigned to the specified command class.

Range: *ayy*

Specify the parameter value in the format *ayy -no* or *ayy -yes*.

ayy—Configurable command class name of 1 alphabetic character followed by 2 alphanumeric characters

-no—Indicates that the command class is not allowed.

-yes—Indicates that the command class is allowed.

:cc4= (optional)

Configurable command class name (*ayy*), and an indicator (**-yes** or **-no**) to specify whether the User ID can enter commands assigned to the specified command class.

Range: *ayy*

Specify the parameter value in the format *ayy -no* or *ayy -yes*.

ayy—Configurable command class name of 1 alphabetic character followed by 2 alphanumeric characters

-no—Indicates that the command class is not allowed.

-yes—Indicates that the command class is allowed.

:cc5= (optional)

Configurable command class name (*ayy*), and an indicator (**-yes** or **-no**) to specify whether the User ID can enter commands assigned to the specified command class.

Range: *ayy*

Specify the parameter value in the format *ayy -no* or *ayy -yes*.

ayy—Configurable command class name of 1 alphabetic character followed by 2 alphanumeric characters

-no—Indicates that the command class is not allowed.

-yes—Indicates that the command class is allowed.

:cc6= (optional)

Configurable command class name (*ayy*), and an indicator (**-yes** or **-no**) to specify whether the User ID can enter commands assigned to the specified command class.

Range: *ayy*

Specify the parameter value in the format *ayy -no* or *ayy -yes*.

ayy—Configurable command class name of 1 alphabetic character followed by 2 alphanumeric characters

-no—Indicates that the command class is not allowed.

-yes—Indicates that the command class is allowed.

:cc7= (optional)

Configurable command class name (*ayy*), and an indicator (**-yes** or **-no**) to specify whether the User ID can enter commands assigned to the specified command class.

Range: *ayy*

Specify the parameter value in the format *ayy -no* or *ayy -yes*.

ayy—Configurable command class name of 1 alphabetic character followed by 2 alphanumeric characters

-no—Indicates that the command class is not allowed.

-yes—Indicates that the command class is allowed.

:cc8= (optional)

Configurable command class name (*ayy*), and an indicator (**-yes** or **-no**) to specify whether the User ID can enter commands assigned to the specified command class.

Range: *ayy*

Specify the parameter value in the format *ayy -no* or *ayy -yes*.

ayy—Configurable command class name of 1 alphabetic character followed by 2 alphanumeric characters

-no—Indicates that the command class is not allowed.

-yes—Indicates that the command class is allowed.

:db= (optional)

Access to all commands in command class Database Administration.

Range: **yes, no**

Default: Current value

:dbg= (optional)

Access to all commands in command class Debug.

Range: **yes, no**

Default: Current value

:link= (optional)

Access to all commands in command class Link Maintenance.

Range: **yes, no**

Default: Current value

:lnpbas= (optional)

Access to all commands in the command class LNP Basic

Range: **yes, no**

Default: Current value

:lnpdb= (optional)

Access to all commands in the command class LNP Database

Range: **yes, no**

Default: Current value

:lnpsub= (optional)

Access to all commands in the command class LNP Subscription

Range: **yes, no**

Default: Current value

:nuid= (optional)

New user ID

Range: *azzzzzzzzzzzzzzzzz*

1 alphabetic character followed by up to 15 alphanumeric characters

Default: Current value

:page= (optional)

The maximum age of the password, in days. The STP automatically prompts the user for a new password at login if the user's password is older than the value specified for the **page** parameter.

Range: 0-999 (days)

Default: Current value

:pid= (optional)

Password ID. Required only if changing the password of a user.

Range: yes, no

Default: Current value

:pu= (optional)

Access to all commands in command class Program Update.

Range: yes, no

Default: Current value

:revoke= (optional)

Revoke the user ID. The system rejects login attempts for a revoked user ID.

Range: yes, no

Default: Current value

:rstlsl= (optional)

Reset the user ID. Use this command to reset the last successful login date, for this user ID, to the current date. If the user ID has been prevented login for non-use, use the **rstlsl=yes** parameter to allow the user ID access again.

Range: yes, no

Default: Current value

:sa= (optional)

Access to all commands in command class Security Administration.

Range: yes, no

Default: Current value

:sys= (optional)

Access to all commands in command class System Maintenance.

Range: yes, no

Default: Current value

:uout= (optional)

User ID aging interval. The number of successive days a user ID can go unused (that is, no successful login) before the system denies login of that user ID.

Range: 0-999

Default: The value specified for the **uout** parameter on the **chg-secu-dflt** command

Example

chg-user:uid=john:nuid=johnmayer

chg-user:uid=john:nuid=john*mayer

chg-user:uid=john:db=yes

chg-user:uid=user123:cc1=dab-no:cc2=krb=yes

Dependencies

Passwords cannot be created or modified from a telnet terminal (terminal IDs 17-40) unless the OA&M IP Security Enhancements feature is turned on.

Changes to a user ID cannot be made while that user is logged on the system.

The **revoke=yes** parameter cannot be specified for a user ID with system administration authorization.

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before the **lnpbas**, **lnpdb**, or **lnpsub** parameter can be specified.

If the **all=yes** parameter is specified and the LNP feature has not been turned on, the **lnpbas**, **lnpdb**, and **lnpsub** parameter values default to **no**.

The Command Class Management feature must be enabled before a configurable command class name can be specified in the **cc1** - **cc8** parameters.

The values specified in the **cc1** - **cc8** parameters must be valid default (**u01-U32**) or provisioned configurable command class names.

Notes

When the **pid=yes** parameter is specified, the system issues a separate prompt for this password and disables character echo at the terminal so that the entered password is not displayed on the screen. After the password has been entered, the system issues a second prompt, and the password must be entered again. This feature ensures that no typing mistakes were made on the first entry. The password must adhere to all password provisioning rules as established by the **chg-secu-dflt** command. These rules are displayed on the screen when the password prompt is presented.

The current password is not required when assigning a new password.

Use the following rules for changing passwords:

- A new password cannot contain more than 12 characters.
- A new password must contain at least the number of characters that is specified in the **minlen** parameter of the **chg-secu-dflt** command.
- A new password must contain at least the number of alphabetic (**alpha** parameter), numeric (**num** parameter), and punctuation (**punc** parameter) characters that is specified in the **chg-secu-dflt** command.

A new password cannot contain the associated user ID.

As a default, the command class Basic is assigned to all users. If no other command class is assigned, the user still has access to commands in the Basic class.

Up to 8 configurable command class name parameters can be specified in one command. Additional commands can be entered to assign user access for more than 8 names. To assign user access for all 32 available configurable command class names, you could enter four commands with 8 names specified in each command.

Output

```
chg-user:uid=john:nuid=johnmayer
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
CHG-USER: MASP A - COMPLTD
;
```

chg-x25-dstn

Change X.25 Destination

Use this command to change the association of an X.25 network address with either an SS7 point code, or a subsystem within that point code. If the node is actually in the X.25 domain, the X.25 address is a real network address and the point code is a dummy point code. If the node is in the SS7 domain, the point code is a real SS7 point code and the X.25 address is a dummy address.

Keyword: chg-x25-dstn

Related Commands: dlt-x25-dstn, ent-x25-dstn, rtrv-x25-dstn

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:xaddr= (mandatory)

The X.25 network address of the X.25 destination entity or the SS7 node.

Range: 1-15 digits

:dpc= (optional)

The real SS7 point code assigned to a real SS7 node or the dummy point code for an X.25 destination entity, with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: dpca

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001-005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006-255.

The point code 000-000-000 is not a valid point code.

Default: Current value

:ssn= (optional)

The subsystem number of the destination that is assigned to the X.25 address or the SS7 address.

Range: 1-255

Default: Current value

Example

chg-x25-dstn:xaddr=205255864567721:dpc=133-013-001:ssn=9

chg-x25-dstn:xaddr=205255864567721:dpc=133-013-013

chg-x25-dstn:xaddr=205255864567721:ssn=3

Dependencies

At least one optional parameter must be specified.

There must be at least four digits in the X.25 address.

The X.25 address must already exist as an X.25 destination.

The X.25 address must not be a part of an X.25 route.

The DPC must exist in the destination point code table.

The X.25 SS7 ANSI destination point code must be a full point code (*ni-nc-ncm*).

Notes

None

Output

chg-x25-dstn:xaddr=205255864567721:dpc=133-013-001:ssn=9

```
rlghncxa03w 04-01-10 11:43:04 EST EAGLE 31.3.0
X.25 DSTN TABLE 45 % FULL
CHG-X25-DSTN: MASP A - COMPLTD
```

;

chg-x25-rte**Change X.25 Route**

Use this command to change the X.25 connection type of a given X.25 route. All LIMs with the **ss7gx25** GPL share this information. Even though these connections apply to only one card, they are used by all cards.

Keyword: **chg-x25-rte**

Related Commands: **dlt-x25-rte**, **ent-x25-rte**, **rtrv-x25-rte**

Command Class: Database Administration

Parameters

:saddr= (mandatory)

The alias X.25 address assigned to the SS7 destination entity on the SS7 side of the circuit.

Range: 1-15 digits

:xaddr= (mandatory)

The X.25 address assigned to the X.25 destination entity on the X.25 side of the circuit.

Range: 1-15 digits

:lc2nm= (optional)

Invokes SS7 MTP network management for failures and recoveries of logical channels.

Range: **yes, no**

Default: **no** if **rt=pc** is specified

:loc= (optional)

The card location containing the X.25 signaling link.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

Default: All card locations are displayed.

:port= (optional)

The port on the card containing the X.25 signaling link.

Range: **a**

:rt= (optional)

The type of routing to perform for messages originating in the SS7 domain and destined for the X.25 domain. Two types of routing are available: (1) route on X.25 destination point code (XPC), and (2) route using X.25 origination and destination point code combinations (PC).

Range: **xpc, pc**

Default: Current value

:type= (optional)

The type of X.25 connection that the link is expected to maintain.

Range: **svca, svcr**

svca—automatic virtual circuit

svcr—remote virtual circuit

Example

```
chg-x25-rte:xaddr=225255:saddr=133131:type=svca:loc=1205:port=a
chg-x25-rte:xaddr=303545:saddr=234908:type=svcr
chg-x25-rte:xaddr=225255:saddr=133131:rt=xpc
```

Dependencies

Each X.25 address must have at least four digits.

The combination of the two X.25 addresses must exist in the X.25 route table.

The number of SVCAs cannot exceed the maximum number of SVCs defined for the signaling link.

One of the following parameters must be specified: **type**, **rt**, or **lc2nm**.

If **lc2nm=yes** is specified, **rt=xpc** must be specified.

If the X.25 domain destination is an adjacent entity, **lc2nm=no** must be specified.

If **rt=xpc** is specified, the **xaddr** parameter's alias SS7 point code must be unique in the X.25 route table.

If the connection type is **svca** (**type=svca**), the **loc** parameter must be specified.

The new connection type (**type=svca** or **type=svcr**) must be different from the currently defined connection type. For example, if the current connection type is **svca** (**type=svca**), the new connection type must be **svcr** (**type=svcr**).

If the **port** parameter is specified, the **loc** parameter must be specified.

If the connection type of the X.25 route is **pvc** (shown in the TYPE field of the **rtrv-x25-rte** output), the X.25 route cannot be changed.

Notes

The **lc2nm** parameter does not generate MTP level 3 network management messages to the network. Instead, it uses level 3 network management procedures internally to reroute traffic to an alternate route. If the **lc2nm** parameter is not specified, traffic is discarded when routed to a failed logical channel.

Output

```
chg-x25-rte:xaddr=225255:saddr=133131:type=svca:loc=1205:port=a
```

```
rlghncxa03w 04-01-10 11:43:04 EST EAGLE 31.3.0
CHG-X25-RTE: MASP A - X.25 Route table 45% full
CHG-X25-RTE: MASP A - COMPLTD
```

```
;
```

chg-x25-slk

Change X.25 Signaling Link Parameters

Use this command to change any X.25 signaling link parameter.

Keyword: **chg-x25-slk**

Related Commands: **rtrv-x25-rte**, **rtrv-x25-slk**

Command Class: Database Administration

Parameters

:loc= (mandatory)

The card location containing the X.25 signaling link.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118,**

3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208,
4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218,
5301-5308, 5311-5318, 6101-6108, 6111-6118

Default: All card locations are displayed.

:port= (mandatory)

The port on the card containing the X.25 signaling link.

Range: a

Default: Only one port per LIM is supported for X.25.

:k= (optional)

The maximum number of outstanding I frames.

Range: 1-7

Default: Current value

System

Default: 7 - 7

:l3mode= (optional)

The logical layer 3 address of the connection

Range: dte, dce

Default: dte

:mps= (optional)

The maximum packet size (in bytes) allowed on this X.25 signaling link.

Range: 128, 256

Default: 256

:n1= (optional)

The maximum number of bits in a frame.

Range: 1080, 2104

Default: Current value

System

Default: 2104 - 2104

:n2= (optional)

The maximum number of retransmission attempts to complete a transmission.

Range: 3-15

Default: Current value

System

Default: 10 - 10

:pvc= (optional)

The total number of the permanent virtual circuits (PVCs) available on this X.25 signaling link.

Range: 0-255

Default: 0

:svc= (optional)

The total number of the switched virtual circuits (SVCs) available on this X.25 signaling link.

Range: 0-255

Default: 255 minus the value for the **pvc** parameter

:t1= (optional)

The amount of time to wait before retransmitting a frame.

Range: 3-10 seconds

Default: Current value

System

Default: 5 - 5

:win= (optional)

The number of packets allowed for a window on this X.25 signaling link.

Range: 1-7

Default: 3

Example

chg-x25-sl k: loc=1201:port=a:t1=3:n1=1080:n2=3:k=7

chg-x25-sl k: loc=1204:pvc=10:svc=10

Dependencies

The **limds0**, **limocu**, and **limv35** card types are the only valid card types for this command. These card types must be running the **ss7gx25** application.

The shelf and card must be equipped.

At least one of the optional parameters **t1**, **n1**, **n2**, **k**, **l3mode**, **pvc**, **svc**, **win**, or **mps** must be specified.

The sum of the values for the **pvc** and **svc** parameters must be greater than or equal to 1 and less than or equal to 255.

If the **mps** parameter is equal to 128, then the **n1** parameter must be equal to 1080.

The specified card must be out-of-service maintenance-disabled (OOS-MT-DSBLD) before the X.25 signaling link parameters can be changed. Enter the **rept-stat-card** command with the card location containing the X.25 signaling link that you want to change, to verify the state of the card.

The new quantity of PVCs cannot be greater than the number of logical channels currently assigned to the X.25 signaling link. Enter the **rtrv-x25-rte** command with the card location and port (**loc** and **port**) of the X.25 signaling link to verify the number of logical channels assigned to the X.25 signaling link. This is shown in the *LC* field of the **rtrv-x25-rte** output.

Notes

To add, remove, or change an X.25 destination, linkset, signaling link, or route, follow the procedures in the “X.25 Gateway Configuration” chapter of the *Database Administration Manual - Features*.

Output

chg-x25-sl k: loc=1201:port=a:t1=3:n1=1080:n2=3:k=7

```
rlghncxa03w 04-01-10 11:43:04 EST EAGLE 31.3.0
CHG-X25-SLK: MASP A - COMPLTD
```

;

chk-unref-ent

Check Unreferenced Entities

Use this command to check for unreferenced entities in the STP gateway screening entity sets.

Unreferenced entities are those entities not referenced by another entity using the next screening function identifier and next screening reference combination, or using the linkset screening reference.

Keyword: **chk-unref-ent**

Related Commands: **aud-data**, **chg-scr-aftpc**, **chg-scr-blkdpc**, **chg-scr-blkopc**, **chg-scr-cdpc**, **chg-scr-cgpa**, **chg-scr-destfld**, **chg-scr-dpc**, **chg-scr-opc**, **chg-scr-sio**, **chg-scr-tt**, **chg-scrset**, **dlt-scr-aftpc**, **dlt-scr-blkdpc**, **dlt-scr-blkopc**, **dlt-scr-cdpc**, **dlt-scr-cgpa**, **dlt-scr-destfld**, **dlt-scr-dpc**, **dlt-scr-opc**, **dlt-scr-sio**, **dlt-scr-tt**, **dlt-scrset**, **ent-scr-aftpc**, **ent-scr-blkdpc**, **ent-scr-blkopc**, **ent-scr-cdpc**, **ent-scr-cgpa**, **ent-scr-destfld**, **ent-scr-dpc**, **ent-scr-opc**, **ent-scr-sio**, **ent-scr-tt**, **ent-scrset**

Command Class: Database Administration

Parameters

:aftp= (optional)

Affected point code. Specifies whether you want to audit the affected PC/SSN entity set.

Range: **yes, no**

Default: **no**

:all= (optional)

All entity types. Specifies whether you want to audit all of the entity sets.

Range: **yes, no**

Default: **no**

:blkdp= (optional)

Blocked destination point code. Specifies whether you want to audit the blocked DPC entity set.

Range: **yes, no**

Default: **no**

:blkop= (optional)

Blocked originating point code. Specifies whether you want to audit the blocked OPC entity set.

Range: **yes, no**

Default: **no**

:cdpa= (optional)

Called party address. Specifies whether you want to audit the allowed CDPA entity set.

Range: **yes, no**

Default: **no**

:cgpa= (optional)

Calling party address. Specifies whether you want to audit the allowed CGPA entity set.

Range: **yes, no**

Default: **no**

:destfld= (optional)

Affected destination field. Specifies whether you want to audit the affected DESTFLD entity set.

Range: **yes, no**

Default: **no**

:dpc= (optional)

Destination point code. Specifies whether you want to audit the allowed DPC entity set.

Range: **yes, no**

Default: **no**

:isup= (optional)

ISUP message type. Specifies whether you want to audit the ISUP message type entity set.

Range: **yes, no**

Default: **no**

:opc= (optional)

Originating point code. Specifies whether you want to audit the allowed OPC entity set.

Range: **yes, no**

Default: **no**

:sio= (optional)

Service information octet. Specifies whether you want to audit the allowed SIO entity set.

Range: **yes, no**

Default: **no**

:tt= (optional)

Translation type. Specifies whether you want to audit the allowed TT entity set.

Range: **yes, no**

Default: **no**

Example

chk-unref-ent:opc=yes:dpc=yes:sio=yes

chk-unref-ent:all=yes

chk-unref-ent:all=yes:blkopc=no:blkdpc=no

Dependencies

At least one entity set name must be specified.

Notes

None

Output**chk-unref-ent:opc=yes:dpc=yes:sio=yes**

```

rlghncxa03w 04-01-18 08:29:15 EST EAGLE 31.3.0
ENTITY      UNREFERENCED
TYPE        ENTITIES
-----
OPC          <NONE>
DPC          DPC1
DPC          DPC2
SIO          <NONE>
;

```

chk-unref-ent:all=yes

```

rlghncxa03w 04-01-18 08:29:15 EST EAGLE 31.3.0
ENTITY      UNREFERENCED
TYPE        ENTITIES
-----
OPC          <NONE>
DPC          dpc1
              dpc2
BLKOPC       <NONE>
BLKDPC       <NONE>
SIO          <NONE>
CGPA         <NONE>
CDPA         <NONE>
TT           tt0-1
              tt-05
DESTFLD      <NONE>
AFTPC        <NONE>
ISUP         <NONE>
;

```

chk-unref-ent:all=yes:blkopc=no:blkdpc=no

```

rlghncxa03w 04-01-18 08:29:15 EST EAGLE 31.3.0
ENTITY      UNREFERENCED
TYPE        ENTITIES
-----
OPC          <NONE>
DPC          dpc1
              dpc2
SIO          <NONE>
CGPA         <NONE>
CDPA         <NONE>
TT           tt01
              tt05
AFTPC        <NONE>
;

```

Legend

ENTITY TYPE—This field displays which entity type is being checked.

UNREFERENCED ENTITIES—This field displays whether the entity type listed is referenced by another entity.

clr-imt-stats**Clear IMT Statistics**

Every card in the system has both a card location identifier (stenciled on the shelf and provided in all output) and an IMT address. Use this command to clear the following statistics:

- The IMT level 1 and level 2 statistics for specified IMT addresses and the hourly time period statistics for IMT errors.
- The card error statistics for HMUX or HIPR cards and the hourly time period statistics for HMUX or HIPR cards.
- All IMT, HMUX, and HIPR error and hourly time period statistics. When the hourly time period statistics for IMT errors, HMUX errors, or HIPR errors are cleared, the current hourly time period number is reset to 0 (zero) on all cards.

Keyword: `clr-imt-stats`

Related Commands: `conn-imt`, `disc-imt`, `rept-imt-info`, `rept-imt-lvl1`, `rept-imt-lvl2`, `rmv-imt`, `rst-imt`, `tst-imt`

Command Class: System Maintenance

Parameters

:all= (optional)

Clear all IMT, HMUX, and HIPR statistics.

Range: `yes`, `no`

Default: `no`

:e= (optional)

End address. This parameter specifies the IMT address of the last card in the range.

Range: `0-251`

(See the *Installation Manual - EAGLE 5 ISS* for an illustration with IMT addresses).

:eloc= (optional)

End location. Specifies the card location of the last card in the range.

Range: `1101-1113`, `1115`, `1201-1218`, `1301-1318`, `2101-2118`, `2201-2218`, `2301-2318`, `3101-3118`, `3201-3218`, `3301-3318`, `4101-4118`, `4201-4218`, `4301-4318`, `5101-5118`, `5201-5218`, `5301-5318`, `6101-6118`

Default: If `sloc` is specified—current `sloc` value

If `sloc` is not specified—`1115`, which corresponds to IMT address 251 (`e=251`).

:eshelf= (optional)

End shelf location for HMUX and HIPR statistics. This parameter specifies the shelf location of the last shelf in the range. (Both HMUX and HIPR statistics will be cleared if they exist in the range between and including the `sshelf` and `eshelf` locations).

Range: `1100`, `1200-6100`

Default: If `sshelf` is specified—current `sshelf` value.

If `sshelf` is not specified—`6100`.

:s= (optional)

Start address. This parameter specifies the IMT address of the first (or only) card in the range.

Range: `0-251` (See the *Installation Manual* of your current documentation set for an illustration with IMT addresses).

:sloc= (optional)

Start location. Specifies the card location of the first card in the range.

Range: `1101-1113`, `1115`, `1201-1218`, `1301-1318`, `2101-2118`, `2201-2218`, `2301-2318`, `3101-3118`, `3201-3218`, `3301-3318`, `4101-4118`, `4201-4218`, `4301-4318`, `5101-5118`, `5201-5218`, `5301-5318`, `6101-6118`

Default: If `eloc` is specified—current `eloc` value

If `eloc` is not specified—`1201`, which corresponds to IMT address 0 (`s=0`).

:sshelf= (optional)

Start shelf location for HMUX and HIPR statistics. This parameter specifies the shelf location of the first shelf in the range. (Both HMUX and HIPR statistics will be cleared if they exist in the range between and including the **sshelf** and **eshelf** locations).

Range: 1100, 1200-6100

Default: If **eshelf** is specified—current **eshelf** value.
If **eshelf** is not specified—1100.

Example

```
clr-imt-stats:s=00
```

Dependencies

The **clr-imt-stats** command cannot be entered if any of the following commands is running: **rept-imt-info**, **rept-imt-lvl1**, **rept-imt-lvl2**, **tst-imt**.

If the **s** and **e** parameters are specified, do not specify the **sloc** and **eloc** parameters; conversely, if the **sloc** and **eloc** parameters are specified, do not specify the **s** and **e** parameters.

This command cannot be entered during IMT statistics collection following an hourly boundary.

Either the start address (**s** parameter) or start location (**sloc** parameter) must be specified.

Notes

The **sloc** and **eloc** parameters allow individual **HMUX** and **HIPR** cards to be cleared.

The **s** and **e** parameters will *not* clear **HMUX** and **HIPR** cards.

The **sshelf** and **eshelf** parameters clear both **HMUX** and **HIPR** cards on bus A and bus B.

Output

```
clr-imt-stats:all=yes
rlghncxa03w 04-01-07 11:02:30 EST EAGLE 35.0.0
Clear IMT Statistics command(s) issued...
Command Completed.
;
```

conn-imt

Connect IMT

The interprocessor message transport bus (IMT bus) is the main communications artery between all subsystems in the system. Use this command to connect a manually disconnected card to the specified IMT bus. The card must have been manually disconnected from the bus previously by the **disc-imt** command. If the card was disconnected from the bus for other reasons, this command has no effect.

Keyword: **conn-imt**

Related Commands: **clr-imt-stats**, **disc-imt**, **rept-imt-lvl1**, **rept-imt-lvl2**, **rept-stat-imt**, **rmv-imt**, **rst-imt**

Command Class: System Maintenance

Parameters

:bus= (mandatory)

IMT bus to which the specified card is to be connected.

Range: a, b

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Example

conn-imt:loc=1201:bus=a

Dependencies

The card being reconnected must first be disconnected manually from the bus by using the **disc-imt** command.

This command cannot be entered during an IMT Fault Isolation Test.

Notes

This command has no effect if the card was disconnected from the IMT bus in any way other than manually using the **disc-imt** command.

Output

conn-imt:loc=1201:bus=a

```
rlghncxa03w 04-01-07 11:02:30 EST EAGLE 31.3.0
Connect IMT Bus A command issued to card 1201
```

```
rlghncxa03w 04-01-07 11:02:30 EST EAGLE 31.3.0
0100.0006 IMT Bus A Card connected to IMT
```

```
rlghncxa03w 04-01-07 11:02:30 EST EAGLE 31.3.0
3112.0006 CARD 1201 CCS7ITU Card connected to IMT
```

;

copy-disk

Copy Disk

Use this command to copy a mirror image of the active fixed disk to the standby fixed disk. When the fixed disk requires replacement, or needs to be repaired or updated, this command formats the standby fixed disk and copies the contents of the active fixed disk to the standby fixed disk.



CAUTION: Before entering the **copy-disk** command, contact Tekelec Technical Services at (888) FOR-TKLC. The Technical Services engineer may be able to propose a less intrusive method for copying to a fixed disk.



CAUTION: LNP database updates may be coming through an OAP terminal without maintenance people being aware of it. Before using this command, inhibit the OAP terminals to ensure that databases do not lose synchronization.



CAUTION: If the **copy-disk** command fails and the standby TDM boots continuously, insert a removable disk with the same release as the fixed disks in the MDAL. The standby MASP should successfully boot off the removable disk. After the MASP has booted completely, re-enter the **copy-disk** command.

Keyword: copy-disk

Related Commands: chg-db, copy-gpl, copy-meas,, format-disk, rept-stat-db

Command Class: System Maintenance

Parameters

:dloc= (mandatory)

This parameter must specify the location of the standby fixed disk. This is the destination drive for this function.

Range: 1114, 1116
(TDM)

:force= (optional)

This parameter provides some protection against data loss from copying over a fixed disk. If the target medium is recognized as a valid system medium, the **force=yes** parameter must be specified.

Range: yes, no
Default: no

:format= (optional)

This parameter provides the choice whether or not to format the standby fixed disk before executing the copy. If a format is not necessary, specifying **no** can save a significant amount of time.

Range: yes, no
Default: yes

:sloc= (optional)

This parameter must specify the location of the active fixed disk. This will be the source drive for this function.

Range: 1114, 1116
(TDM)

Default: The location of the active fixed disk

Example

copy-disk:sloc=1114:dloc=1116:force=yes

Dependencies



CAUTION: Do not turn off measurements at midnight because doing so can cause the loss of an entire day of measurements. Do not turn off measurements during the 30 minute measurements processing period, because this can result in the loss of the measurements for the 30 minute period being processed.

Measurements collection must be turned off or the **copy-disk** command cannot be executed. Do not issue the **chg-meas** command while the **copy-disk** command is in progress. This results in read and write errors, because the standby fixed disk is not accessible and the active fixed disk only allows read-only access.

OAM Measurements collection cannot be in progress when this command is entered. Retry the command after a period of waiting for the measurements collection to complete.

The **copy-disk** command reserves both the active and standby disks, preventing database updates for the duration of the command. Access is allowed for read-only; writing to the disk is prohibited.

All commands that affect the database are not allowed for the duration of the command. Attempts to use such commands are rejected, and an error message is displayed indicating that the command has been rejected because the **copy-disk** command is in use.

The EOAM GPL version that is running in the active OAM card location must be the same GPL version that is running in the standby OAM card location.

The **sloc** and **dloc** fixed disks must be available and compatible.

The **sloc** fixed disk must be coherent.

The **dloc** parameter must specify the standby fixed disk.

The **sloc** parameter must specify the active fixed disk.

The standby fixed disk cannot be initialized while un-uploaded security log entries exist.

The **force=yes** parameter is required if the destination medium is recognized as a system medium. This parameter is optional if the destination medium is not a system medium. Only media that contain the **dms.cfg** file are recognized as system media.

If the **force=yes** parameter is specified, the disk should not require low-level formatting, and the **format=no** parameter should also be specified.

Notes

The **format=no** parameter should be specified when upgrading a spare TDM. You should specify the **format=yes** parameter when there is a suspected hardware problem.

If the **copy-disk** command is initiated and the standby OAM initialization is not complete, command processing will be delayed. If standby initialization fails, the command proceeds to allow the standby TDM to recover from a previous **format-disk** or **copy-disk** failure. In such cases, the following messages appear:

```
Standby MASP has not finished initializing - please wait...
Standby MASP initialization timed out - continuing...
```

The **format=no** parameter should be specified when upgrading a spare TDM. the **format=yes** parameter should be specified when there is a suspected hardware problem.

If the **copy-disk** command is initiated and the standby OAM initialization is not complete, command processing will be delayed. If standby initialization fails, the command proceeds to allow the standby TDM to recover from a previous **format-disk** or **copy-disk** failure. In such cases, the following messages appear:

```
Standby MASP has not finished initializing - please wait...
Standby MASP initialization timed out - continuing...
```

When the **copy-disk** command is processing, the system cannot log other commands to the security log because the active fixed disk is set to read-only. During this time, commands that would alter the database fail when entered.

The performance time required to copy a fixed disk to another fixed disk varies depending on database size and system activity. This operation should typically take no longer than 2.5 hours. (If you are not performing the low-level format (**format=no**), the operation should take no longer than an hour.) If the **copy-disk** operation exceeds three hours, contact Tekelec Technical Services for assistance at (888) FOR-TKLC. If the **copy-disk** operation without the low-level format exceeds 1.5 hours, call Tekelec Technical Services.

Output

copy-disk:sloc=1114:dloc=1116:force=yes

```
rlghncxa03w 04-01-07 11:02:30 EST EAGLE 31.3.0
copy-disk:sloc=1114:dloc=1116:force=yes
Command entered at terminal #3.
```

```
Copy-disk (fixed): from active (1114) to standby (1116) started.
Extended processing required, please wait.
```

```
Copy-disk (fixed): from active (1114) to standby (1116) completed.
Measurements collection may be turned on now if desired.
```

copy-fts

Copy to or from the File Transfer Area

This command copies tables into or from the file transfer area (FTA).

Notes

This command is used to copy into the file transfer area or out of the file transfer area. The parameters **stbl**, **dfile**, **sfile**, and **dtbl** are used to describe the nature of the copy. A copy from a DMS table into the file transfer area would use the **stbl** (source table) and **dfile** (destination file) parameters. Thus, data would move from a table into a transfer area file. To copy from the file transfer area to a DMS table, use the **sfile** (source file) and **dtbl** (destination table) parameters. Any other combination of these 4 parameters is invalid.

Output

copy-fts:stbl=1:dfile="2F1.OUT":sloc=1114:dloc=1114

```
rlghncxa03w 04-01-05 14:59:10 EST EAGLE 31.3.0
copy-fts:stbl=1:dfile="2F1.OUT":sloc=1114:dloc=1114
Command entered at terminal #1.
;
rlghncxa03w 04-01-05 14:59:26 EST EAGLE 31.3.0
Copied Table 1 successfully from FIXED to F1.OUT in FTA.
;
rlghncxa03w 04-01-05 15:00:49 EST EAGLE 31.3.0
copy-fts:sfile=dms.cfg:dtbl=0:sloc=1114:dloc=1117:drv=remove
Command entered at terminal #1.
;
rlghncxa03w 04-01-05 15:01:12 EST EAGLE 31.3.0
Copied DMS.CFG successfully from FTA to Table 0 on REMOVABLE.
;
```

copy-gpl**Copy Generic Program Load**

Use this command to copy all approved GPLs from one drive to another. The GPLs can be copied only from the fixed disk on the active TDM to the removable cartridge, or from the removable cartridge to the fixed disk on the standby TDM.

Keyword: copy-gpl

Related Commands: act-gpl, alw-card, chg-gpl, init-card, init-sys, rept-stat-gpl, rtrv-gpl

Command Class: System Maintenance

Parameters

:dloc= (optional)

The destination location of the the GPLs to be copied.

Range: 1114, 1116, 1117

1114, 1116—The standby TDM

1117—The removable cartridge

Default: 1117

:sloc= (optional)

The source location of the the GPLs to be copied.

Range: 1114, 1116, 1117

1114, 1116—The active TDM

1117—The removable cartridge

Default: The location of the active TDM

Example

copy-gpl

copy-gpl:sloc=1117:dloc=1116

copy-gpl:sloc=1116

Dependencies

While this command is executing, the **chg-gpl** and **act-gpl** commands cannot be entered.

Notes

This command has no effect on the GPLs stored on other cards (for example, SCCP).

Output

Copying the GPLs from the fixed disk on the active TDM (card location 1114) to the removable cartridge.

copy-gpl:sloc=1114:dloc=1117

```
rlghncxa03w 04-01-07 00:57:31 EST EAGLE 31.3.0
COPY GPL: MASP A - COPY STARTS ON ACTIVE MASP
COPY GPL: MASP A - COPY TO REMOVABLE CARTRIDGE COMPLETE
;
```

Copying the GPLs from the removable cartridge to the fixed disk on the standby TDM (card location 1116).

copy-gpl:sloc=1117:dloc=1116

```
rlghncxa03w 04-01-07 00:57:31 EST EAGLE 31.3.0
COPY GPL: MASP B - COPY STARTS FROM REMOVABLE CARTRIDGE TO STANDBY TDM
COPY GPL: MASP B - COPY TO STANDBY TDM COMPLETE
;
```

copy-isupvar-attrib

Copy ISUP Variant Attribute

Use this command to copy one ISUP Variant table entry to another ISUP Variant table entry.

Keyword: copy-isupvar-attrib

Related Commands: chg-isupvar-attrib, ent-pstn-pres, rtrv-isupvar-attrib, rtrv-pstn-pres

Command Class: Database Administration

Parameters

:dpstncat= (mandatory)

The PSTN category identifying the destination Variant table entry where the source Variant table is being copied.

Range: 0-65535

:dpstnid= (mandatory)

The PSTN ID identifying the destination Variant table entry where the source Variant table is being copied.

Range: 0-65535

:pstncat= (mandatory)

The PSTN category identifying the source Variant table entry being copied.

Range: 0-65535

:pstnid= (mandatory)

The PSTN ID identifying the source Variant table entry being copied.

Range: 0-65535

Example

copy-isupvar-attrib:pstncat=1:pstnid=2:dpstncat=1: dpstnid=20

Dependencies

The **pstncat=1** and **pstnid=2** parameter combination is invalid.

Required controlled features must be enabled.

- ISUP Normalization controlled feature
- ON/OFF controlled feature for *Tekelec-defined* Variant
- Quantity controlled feature for *user-defined* Variant

The **pstncat** and **pstnid** values must have been previously defined with **ent-pstn-pres**.

The **dpstncat** and **dpstnid** values must have been previously defined with **ent-pstn-pres**.

Notes

The **copy-isupvar-attrib** command provides the user with an easy way to provision a new ISUP Variant table entry by copying all the data from another entry. Then the user changes the entry with the **chg-isupvar-attrib** command.

An ISUP Variant table entry exists for each Variant defined in the SG. Each entry contains ISUP message and parameter data specific to the ISUP protocol that Variant uses. A Variant is uniquely defined by its PSTN presentation value, consisting of a PSTN category and a PSTN ID.

The PSTN presentation is used to identify both the source and destination table entries. Both entries **must** be previously defined PSTN presentation values, such as either a *Tekelec-defined* PSTN or a *user-defined* PSTN by the **ent-pstn-pres** commands. Use the **rtrv-pstn-pres** command to display the **only** allowed values for the source and destination PSTNs.

If the source or destination Variant is a *Tekelec-defined* PSTN value, then its associated On/off control feature must be ENABLED.

The destination PSTN is not allowed to be normalized ISUP (etsiv3).

Output

The following example shows how to copy etsiv3 Variant to another Variant.

```
copy-isupvar-attrib:pstncat=1:pstnid=2:dpstncat=1:dpstnid=20
rlghncxa03w 04-01-07 00:57:31 EST EAGLE 31.3.0
COPY-ISUPVAR-ATTRIB: MASP A - COMPLTD
;
```

copy-meas

Copy Measurements

Use this command to copy all measurements tables on the active fixed disk to a measurements removable cartridge. Do this when you need to perform off-line analysis of the raw measurements data.

NOTE: This command is not supported on the Measurements Platform feature.

Keyword: copy-meas

Related Commands: chg-meas, rept-meas, rtrv-meas-sched

Command Class: System Maintenance

Parameters

None

Example

copy-meas

Dependencies

This command requires a removable cartridge formatted for measurements data. See the **format-disk** command for details on how to use the system to format cartridges.

A valid system measurements removable cartridge must be inserted in the MDAL removable cartridge drive.

Notes

To execute this command, measurement collection must be turned **off**. If measurement collection is on, enter the **chg-meas:collect=off** command to turn off measurement collection.

The *Maintenance Manual* provides a description of all measurement report parameters.

Table 5-34. Performance for the **copy-meas** command

Activity	Approximate Performance*
Copy the raw measurements data from the active fixed disk to the measurements removable cartridge.	2 minutes
* Minimum time and dependent on system activity.	

Output

copy-meas

COPY MEASUREMENTS: MASP A - COPY STARTS ON ACTIVE MASP
COPY MEASUREMENTS: MASP A - COPY TO REMOVABLE CARTRIDGE COMPLETE

copy-seculog

Copy Security Log Contents to FTA Area

Use this command to copy the contents of a security log to the file transfer area (FTA). If no parameters are specified, a file called **yymmddda.log** (see the description of the **dfile** parameter) is created in the FTA on the active fixed disk. The contents of the security log on the active fixed disk are copied into this file.

Keyword: copy-seculog

Related Commands: `act-file-trns`, `disp-fts-dir`, `dlt-fts`

Command Class: Security Administration

Parameters

:dfile= (optional)

Target file name. This parameter specifies the name of the file that is to be created in the FTA and initialized with the security log contents.

Range: zzzzzzzzzzzzzzzzzzzzzzzzzzzzzzzzzzzzzzz
1-32 characters

Default: If not specified, the file is named *yymmddx.log*, where *yymmdd* is the current year, month, and day, and *x* is either *a* or *s*, depending on whether the log on the active or standby fixed disk was copied.

:dloc= (optional)

Destination FTA. This parameter specifies which FTA is to receive the copy of the log.

Range: act, stb

act —Copies the log to the active fixed disk's FTA

stb—Copies the log to the standby fixed disk's FTA

Default: act

:slog= (optional)

Source log indicator. This parameter specifies which log is to be copied to the FTA.

Range: act, stb

act —Copies the log on the active fixed disk

stb —Copies the log on the standby fixed disk

Default: act

Example

```
copy-seculog
```

```
copy-seculog:dfile="somename.log"
```

```
copy-seculog:slog=stb
```

```
copy-seculog:slog=act
```

```
copy-seculog:slog=act:dloc=stb
```

Dependencies

No other security log command can be in progress when this command is entered.

No **copy-fta** command can be in progress when this command is entered.

Notes

For the **dfile** parameter, if the file name is not accepted by the system because it contains special characters such as blanks, colons, dashes, ampersands, or others; or because it does not start with an alphabetic character, enclose the file name in double quotes (Copies t) as in this example: Copies t.

Any scroll area failure message that can be produced by the **copy-fta** command can be produced also by the **copy-seculog** command.

Output

The following example shows that the log on the active fixed disk is copied to the FTA on the active fixed disk and given the default name (note the **a** in the log name).

copy-secu log

```
rlghncxa03w 04-01-04 15:59:06 EST EAGLE 31.3.0
Security log on TDM 1114 copied to file 960104a.log on TDM 1114
```

The following example shows that the log on the active fixed disk is copied to the FTA on the active fixed disk and given a user-specified name.

copy-secu log:dfile="somename.log"

```
rlghncxa03w 04-01-04 15:59:06 EST EAGLE 31.3.0
Security log on TDM 1116 copied to file somename.log on TDM 1114
```

The following example shows that the log on the standby fixed disk is copied to the FTA on the active fixed disk and given the default name (note the **s** in the log name).

copy-secu log:slog=stb

```
rlghncxa03w 04-01-04 15:59:06 EST EAGLE 31.3.0
Security log on TDM 1114 copied to file 960104s.log on TDM 1116
```

The following example shows that the copy of the log fails because a file already exists in the FTA with the same name.

copy-secu log:slog=act

```
rlghncxa03w 04-01-04 15:59:06 EST EAGLE 31.3.0
Command Failed - Destination File already exists in the File Transfer Area
```

The following example shows that the copy fails because there is not enough room in the FTA to contain the copy.

copy-secu log:slog=act:dloc=stb

```
rlghncxa03w 04-01-04 15:59:06 EST EAGLE 31.3.0
Command Failed - Not enough room exists in the File Transfer Area
```

dact-alm-trns**Deactivate Alarm Transfer**

Use this command to return all audible alarm indications to the local office.

Keyword: dact-alm-trns

Related Commands: act-alm-trns, rept-stat-clk, rept-stat-trbl, rls-alm, rtrv-obit, rtrv-trbl

Command Class: System Maintenance

Parameters

This command has no parameters.

Example

```
dact-alm-trns
```

Dependencies

None

Notes

After you enter **dact-alm-trns**, enter **rept-stat-alm** to verify the status of the alarms.

Output**dact-alm-trns**

```
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
Alarms returned to Local Maintenance Center
```

```
;
```

dact-cdl**Deactivate Command Driven Loopback**

Use this command to deactivate a previously initiated command driven loopback for testing a signaling link, if the test is active. If it is not active, the command will attempt to clear both near-end and far-end latched loopback points

Keyword: dact-cdl

Related Commands: act-cdl, act-lbp, dact-lbp, rept-stat-cdl, tst-slk

Command Class: Link Maintenance

Parameters

:link= (mandatory)

SS7 signaling ports. The signaling port to which the SS7 signaling link being tested is assigned.

Synonym: port

Range: a, b, a1-a31, b1-b31

Not all card types support all **link** parameter values.

See Table A-1 for valid **link** parameter range values for each type of card that can have assigned signaling links.

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Example

```
dact-cdl:loc=1205:link=b
```

Dependencies

The card location specified in the **loc** parameter must be equipped.

The signaling link specified in the **link** parameter must be equipped.

Link Fault Sectionalization (LFS) must not be running on the specified signaling link when this command is entered.

Command Driven Loopback testing is not available during upgrade.

A link diagnostic test is in progress on the signaling link specified in the **link** parameter, but it is not a Command Driven Loopback.

The card location specified in the **loc** parameter must be in service.

The signaling link specified in the **link** parameter must not be active.

The card location specified in the **loc** parameter cannot be reserved by the system.

Notes

None

Output

dact-cdl:loc=1205:link=b

```
tekelecstp 05-01-21 17:00:36 EST EAGLE5 33.0.0
Command Accepted: Stop Command Driven Loopback message is sent.
;

tekelecstp 05-01-21 17:00:36 EST EAGLE5 33.0.0
Command Completed.
;
```

dact-cmd**Deactivate Command**

This command halts processing and output of the commands listed in Table 5-35.

Used without the **trm** parameter, the **dact-cmd** command is entered on the same terminal that is currently running the command that you want to cancel.

Used with the **trm** parameter, the **dact-cmd** command is entered on a terminal other than the one that is currently running the command that you want to cancel.

Table 5-35. Commands For Which **dact-cmd** Aborts Processing and Output

Command		
rept-imt-info	rtrv-as	rtrv-map
rept-stat-as	rtrv-assoc	rtrv-mrn
rept-stat-asp	rtrv-asp	rtrv-obit (active OAM)
rept-stat-assoc	rtrv-cmd	rtrv-rte
rept-stat-card	rtrv-dcmps	rtrv-seculog
rept-stat-clk	rtrv-dstn	rtrv-secu-user
rept-stat-dstn	rtrv-gta	rtrv-slk
rept-stat-ls	rtrv-gtt	rtrv-tbl-capacity
rept-stat-rte	rtrv-lbp	rtrv-trbltx
rept-stat-slk	rtrv-log	rtrv-uaps
rtrv-appl-rtkey	rtrv-ls	
rtrv-appl-sock		

NOTE: The Basic command class allows use of this command without the **trm** parameter (for **dact-cmd**); the Security Administration command class is required for use of this command when the **trm** parameter is specified (**dact-cmd:trm=x**).

Keyword: dact-cmd

Related Commands: rept-imt-info, rept-stat-as, rept-stat-asp, rept-stat-assoc, rept-stat-card, rept-stat-dstn, rept-stat-ls, rept-stat-slk, rtrv-appl-rtkey, rtrv-appl-sock, rtrv-asp, rtrv-assoc, rtrv-dcmps, rtrv-dstn, rtrv-gta, rtrv-gtt, rtrv-log, rtrv-ls, rtrv-map,, rtrv-rte, rtrv-seculog, rtrv-slk, rtrv-trbltx, rtrv-uaps

Command Class: Basic

Parameters

:trm= (optional)

The terminal on which the command is to be canceled.

Range: 1-40

Example

dact -cmd

dact -cmd:trm=3

Dependencies

You cannot specify the **trm** parameter in a **dact-cmd** command that you enter on the same terminal that is running the command that you want to cancel. The terminal will return an error: system is busy.

The **dact-cmd:trm=** command requires the security administration command class for the terminal and for the user.

Notes

The **dact-cmd** command (without the **trm** parameter) must be entered on the same terminal that is running the command you want to cancel.

If the **dact-cmd** command is entered on a terminal that is not running a command, the **dact-cmd** command completes successfully without returning an error. Likewise, if the **dact-cmd:trm=** command is entered and there is no command running on the specified terminal, the **dact-cmd:trm=** command completes successfully without returning an error.

Command aborted on terminal 2.

You might still see some output after the abort message if output accumulated in the output queue before you issued the **dact-cmd** command. When you cancel a command, the cancellation should take no longer than 25 seconds to take effect.

The **F9** function key provides the same functionality as the **dact-cmd** command (without the **trm** parameter). On a terminal in KSR mode, pressing <CTRL>I, also provides the same function.

The **dact-cmd** and the **F9** function key cannot be used for pure SEAS commands.

If you try to cancel a command other than one listed in Table 5-35, the terminal accepts the command, but output and processing of the current command continue.

When the **dact-cmd** command is entered, a command status code of AB (command aborted) is logged in the security log as follows:

- When the **dact-cmd** (without the **trm** parameter) is entered, no entry is logged.
- When the **dact-cmd:trm=** command is entered, an entry is logged.
- When the **dact-cmd** (without the **trm** parameter) is entered as a SEAS flow-thru command, an entry is logged. The **dact-cmd:trm=** command is not allowed as a SEAS flow-thru command because the **dact-cmd:trm=** command belongs to the Security Administration Command Class.

For examples of the security log entries, see the **rtrv-seculog** command.

Output**dact -cmd**

```
rlghncxa03w 04-04-27 17:00:36 EST  EAGLE 31.6.0
dact-cmd
Command entered at terminal #2.
```

```
rlghncxa03w 04-04-27 17:00:36 EST  EAGLE 31.6.0
Command aborted on terminal 2.
```

```
;
```

dact -cmd:trm=2

```
rlghncxa03w 04-04-27 17:00:36 EST  EAGLE 31.6.0
dact-cmd:trm=2
Command entered at terminal #3.
```

```
rlghncxa03w 04-04-27 17:00:36 EST  EAGLE 31.6.0
Command aborted on terminal 2.
```

```
;
```

dact-echo**Deactivate Echo**

Use this command to halt the echoing of command responses from the user's terminal to other terminals or printers.

Keyword: dact-echo

Related Commands: act-echo, alw-trm, canc-echo, chg-trm, inh-trm, rept-stat-trm, rmv-trm, rst-trm, rtrv-trm

Command Class: Basic

Parameters

:trm= (optional)

The ID number of the terminal for which the echo is being canceled.

Range: 1-16

Default: Cancels all active echoes

Example

```
dact -echo
```

Dependencies

You cannot cancel the echo to the same terminal from which you are issuing the **dact-echo** command.

There must be an active echo (**act-echo**) to the terminal specified.

Notes

Only the echoing of command output responses can be halted by this command. To halt the printing of alarm and network messages, you must use the **chg-trm** command.

Output**dact -echo**

```
rlghncxa03w 04-01-07 11:11:28 EST  EAGLE 31.3.0
Command entered at terminal #6.
Scroll Area Output echo disabled to all terminals.
```

```
;
```

dact -echo:trm=7

```
rlghncxa03w 04-01-07 11:11:28 EST  EAGLE 31.3.0
Command entered at terminal #1.
Scroll Area Output echo disabled for terminal 7.
```

```
;
```

dact-lbp**Deactivate Loopback Point Test**

Use this command to deactivate a previously activated loopback point test, if a test is active. If no test is active, the command attempts to clear both near-end and far-end latched loopback points.

Keyword: **dact-lbp**

Related Commands: **act-lbp, chg-lbp, dlt-lbp, ent-lbp, rept-stat-lfs, rtrv-lbp**

Command Class: Link Maintenance

Parameters

:link= (mandatory)

SS7 signaling link. The signaling link for which the loopback point test is being deactivated.

Synonym: **port**

Range: **a, b, a1-a31, b1-b31**

Not all card types support all **link** parameter values.

See Table A-1 for valid **link** parameter range values for each type of card that can have a location specified in the **loc** parameter.

:loc= (mandatory)

Card location. The unique identifier of the card containing the signaling link on which loopback point testing is to be deactivated.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

Example

dact - lbp : loc=1205 : link=b

Dependencies

The specified signaling link must be equipped.

For clearing a remotely initiated loopback or LFS test stop, the card location (**loc** parameter) must be a **limds0**, **limt1**, or **limch** (associated with a **limt1**) card configured with either an **ss7ansi** or **ccs7itu** application.

The **dact-lbp** command cannot be entered until any previously issued **act-lbp** or **dact-lbp** command is accepted.

If an LFS test is about to complete, a new **dact-lbp** command cannot be entered until the test completes.

The **dact-lbp** command cannot be entered to cancel a signaling link test (a **tst-slk** test).

The **dact-lbp** command cannot be entered to cancel a Command Driven Loopback test.

The specified link is not found, and the max number of allowed LFS or signaling link tests are already in progress. At least one active LFS or signaling link test must be completed before this command can be entered again.

This command cannot be entered during upgrade.

The specified signaling link must not be active.

For clearing a remotely initiated loopback, the card location specified in the **loc** parameter must be equipped.

For clearing a remotely initiated loopback, The card location specified in the **loc** parameter must be in service (**IS-NR**).

For clearing a remotely initiated loopback, the card location specified in the **loc** parameter cannot be reserved by the system.

Notes

After the deactivation of loopback point testing has started, you cannot cancel the process.

If an LFS test is aborted by a card reset, it could leave the remote far-end loop-back condition active. Use the **dact-lbp** command to cancel LFS tests.

Output

The following example output is generated only when a latched loopback is cleared and when there were no active loopback tests in progress.

NOTE: This situation could occur even if there were no latched loopbacks to be cleared.

```
dact - lbp: loc=1205: link=b
rlghncxa03w 04-02-17 16:02:05 EST EAGLE5 33.0.0
LOC = 1205 LINK = B
CLEAR STATUS = PASS, loopback was cleared.
;
```

The following example output is generated only when a latched loopback could not be cleared when there were no active loopback tests in progress.

```
dact - lbp: loc=1205: link=b
rlghncxa03w 04-02-17 16:02:05 EST EAGLE5 33.0.0
LOC = 1205 LINK = B
CLEAR STATUS = ERROR, loopback could not be cleared.
;
```

dact-rstst

Deactivate Route Set Test

Use this command to request deactivation of the routeset test being performed by the LIMs running the **ss7ansi** application. The system verifies that the point code and the linkset exist, and that the specified linkset is in the routeset of the specified point code. If it is, then a request to stop routeset testing procedures for the specified destination-linkset combination is sent to the LIM.

Keyword: dact-rstst

Related Commands:

Command Class: System Maintenance

Parameters

:dpc= (mandatory)

The ANSI destination point code of the destination, x-list entry, or cluster whose routeset testing is to be stopped, with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: dpca

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001–005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006–255**.

The point code **000-000-000** is not a valid point code.

:lsn= (mandatory)

The name of the linkset associated with the destination point code that is to have routeset testing stopped.

Range: *ayyyyyyyyy*
 1 alphabetic character followed by 9 alphanumeric characters

Example

dact-rstst:dpc=1-2-*:lsn=lsn1a

dact-rstst:dpc=1-2-33:lsn=lsn1b

Dependencies

The specified DPC must be either provisioned or an x-list entry.

The specified linkset must be in the linkset table and in the DPC's routeset.

The destination address must be a full point code or a cluster point code specified as *ni-nc-**. A DPC cannot be specified as *ni-nc-*** or *ni-nc-**** for the **dact-rstst** command.

Notes

None

Output

dact-rstst:dpc=1-2-*:lsn=lsn1a

```
rlghncxa03w 04-01-05 16:40:40 EST  EAGLE 31.3.0
Stop routeset testing request sent to SNM (scroll area)
```

```
rlghncxa03w 04-01-05 16:40:40 EST  EAGLE 31.3.0
Command Completed.
```

;

dact-slk

Deactivate Signaling Link

Use this command to change the state of the specified link to OOS-MT-DSBLD (out-of-service maintenance-disabled).



CAUTION: This command impacts network performance, and should be used only during periods of low traffic.

Keyword: dact-slk

Related Commands: act-slk, blk-slk, dlt-slk, ent-slk, inh-slk, rept-stat-slk, rtrv-slk, tst-slk, ublk-slk, unhb-slk

Command Class: Link Maintenance

Parameters

:link= (mandatory)

Signaling link on the card specified in the **loc** parameter. The signaling links can be specified in any sequence or pattern.

Synonym: port

Range: **a, b, a1-a31, b1-b31**

Not all card types support all **link** parameter values.

See Table A-1 for valid **link** parameter range values for each type of card that can have a location specified in the **loc** parameter.

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

Example

dact -slk:loc=1301:link=a

Dependencies

A card location must be specified that is valid and defined in the database.

No other action command can be in progress when this command is entered.

The card must be equipped and must be one of the following cards:

- A LIM card running the **ss7ansi**, **ss7gx25**, **atmansi**, or **ccs7itu** application
- A DCM or SSEDCCM or E5-ENET card running the **ss7ipgw**, **ipgwi**, **iplim**, or **iplimi** application
- An E1/T1 MIM or HC MIM card running the **ss7ansi** or **ccs7itu** application
- An E1 ATM card running the **atmitu** application

The card must contain signaling links.

The signaling link must be equipped in the database.

The following **link** parameter values can be specified for the following cards that support more than 2 links per card:

- **a1-a3, b1-b3**—Multi-port LIM (MPL, MPL-T), SSEDCCM card running the **iplim** or **iplimi** application with links having **ipliml2=m2pa** or **ipliml2=saaltali**, E1/T1 MIM card
- **a1-a31, b1-b31**—HC-MIM card
- **a1-a15, b1-b15**—E5-E1T1 card
- **a1-a7, b1-b7**—E5-ENET card running the **iplim** or **iplimi** application that supports 16 links

The card must be equipped in the specified card location.

Notes

The *Installation Manual – EAGLE 5 ISS* provides an illustration of card locations.

After the **dact-slk** command is entered, verify the cancellation by issuing the **rept-stat-slk** command.

Output

```
dact -slk:loc=1301:link=a
rlghncxa03w 04-01-07 11:11:28 EST  EAGLE5 33.0.0
Deactivate Link message sent to card
;
```

dact-user

Deactivate User

Use this command to end a user session. The **logout** command has the same affect as the **dact-user** command.

Keyword: dact-user

Related Commands: act-user, chg-pid, chg-user, dlt-user, ent-user, login, logout, rept-stat-user, rtrv-secu-user, rtrv-user

Command Class: Basic

Parameters

This command has no parameters.

Example

dact-user

Dependencies

None

Notes

The **logout** or **canc-user** commands can be used in place of **dact-user**.

Output

Not applicable.

disc-imt

Disconnect IMT

The interprocessor message transport bus (IMT bus) is the main communications artery between all subsystems in the system. Use this command to disconnect a card from the specified IMT bus.

Keyword: disc-imt

Related Commands: clr-imt-stats, conn-imt, rept-imt-lvl1, rept-imt-lvl2, rept-stat-imt, rmv-imt, rst-imt

Command Class: System Maintenance

Parameters

:bus= (mandatory)

IMT bus to be disconnected from.

Range: a, b

:loc= (mandatory)

Card address. The card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Example

disc-imt:loc=1213:bus=b

Dependencies

This command cannot be entered during an IMT Fault Isolation Test. The card cannot be isolated from both IMT busses.

Notes

The card can be reconnected by issuing the **conn-imt** command, or by re-inserting the card. A software reset does not affect connect status. (The **init-card** command performs a software reset.)

Output**disc-imt:loc=1213:bus=b**

```

    rlghncxa03w 04-01-07 11:02:30 EST  EAGLE 31.3.0
    Disconnect IMT Bus B command issued to card 1213
;

```

disp-fta-dir**Display Contents of the File Transfer Area**

Use this command to display the files that are in the file transfer area (FTA) the layout of FTA, and the amount of free space in the FTA.

Keyword: disp-fta-dir**Related Commands:** act-file-trns, copy-fta, dlt-fta**Command Class:** System Maintenance**Parameters****:loc=** (optional)

The location of the fixed disk whose FTA is to be displayed.

Range: **1114, 1116**
 (TDMs)

Default: The active TDM location

Example**disp-fta-dir:loc=1114****Dependencies**

This command must display the files (along with deleted files and free slots) in the order in which they appear in the file transfer area.

The **loc** parameter must specify a TDM card.

Only one file transfer can be active at a time.

This command cannot be entered on a telnet terminal (IDs 17-40).

Notes

None

Output**disp-fta-dir:loc=1114**

```

    rlghncxa03w 05-07-01 16:21:12 EST  EAGLE 31.3.0
    File Transfer Area Directory of fixed disk 1114:

    FILENAME                LENGTH    LAST MODIFIED    LBA
    oam.elf                  1048576    05-07-01 16:51    40960
    <deleted>                 65536     - - - - - - - - - 43008
    sccp.elf                 1048576    05-07-01 18:30    43136
    <deleted>                 1048576    - - - - - - - - - 46704
    tbl213.out               640000     05-07-01 06:39    48752
    5 File(s)  21584896 bytes free
;

```

dlt-acg-mic**Delete ACG Manually Initiated Control**

Use this command to delete ACG controls that apply to certain queries. The control can apply to all queries or to specific query services and called party digits. A particular control is selected to be deleted by either specifying that it is the **type=all** control or specifying its service and digits.

Keyword: **dlt-acg-mic**

Related Commands: **chg-acg-mic**, **ent-acg-mic**, **rept-stat-lnp**, **rtrv-acg-mic**

Command Class: Database Administration

Parameters

:dgts= (optional)
 Digits
Range: 3-10 digits

:serv= (optional)
 Query service
Range: **ain**, **in**

:type= (optional)
 Type of control
Range: **all**, **sd**
Default: **sd**

Example

```
dlt-acg-mic:type=all
```

```
dlt-acg-mic:serv=ain:dgts=9194602132
```

Dependencies

If the **type=all** parameter is specified, optional parameters **serv** and **dgts** are not allowed.

If the **type=sd** parameter is specified, optional parameters **srv** and **dgts** are required.

If the **type=all** parameter is specified, a MIC with **type=all** must exist.

If the **type=sd** parameter is specified, a MIC with the same service and digits must exist.

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before this command can be entered.

The **dgts** parameter value must be 3 digits or 6-10 digits in length.

Notes

None

Output

```
dlt-acg-mic:type=all
```

```
rlghncxa03w 04-02-28 08:50:12 EST EAGLE 31.3.0
ACG MIC table is (10 of 256) 4% full of type SD
DLT-ACG-MIC: MASP A - COMPLTD
```

```
;
```

dlt-acg-noc**Delete ACG Node Overload Control**

Use this command to delete the definition of a node overload level. The definition is comprised of the threshold LNP query rates for node overload levels and the values for the Automatic Call

Gappings (ACG) to be sent when at the level. If a level is not defined, it is not used. Level 10 cannot be deleted.

Keyword: **dlt-acg-noc**

Related Commands: **chg-acg-noc, ent-acg-noc, rept-stat-lnp, rtrv-acg-noc**

Command Class: Database Administration

Parameters

:lvl= (mandatory)
Overload level.
Range: 1-9

Example

dlt-acg-noc:lvl=3

Dependencies

The specified overload level must be defined.

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before this command can be entered.

Notes

None

Output

dlt-acg-noc:lvl=3

```
rlghncxa03w 04-02-28 08:50:12 EST EAGLE 31.3.0
DLT-ACG-NOC: MASP A - COMPLTD
;
```

dlt-appl-rtkey

Delete Application Route Key Table

Use this command to delete static or dynamic entries from the Routing Key table. These entries are used to associate a routing key with a socket name. A static entry is created using the **ent-appl-rtkey** command. A dynamic entry is one created by receipt of a TALI message from the socket to which it applies.

There are three types of routing keys, as follows:

- DPC, SI, SSN routing keys, which are used to route SCCP messages
- DPC, SI routing keys, which are used to route non-SCCP and non-ISUP messages
- DPC, SI, CIC routing keys, which are used to route ISUP messages

Keyword: **dlt-appl-rtkey**

Related Commands: **ent-appl-rtkey, rtrv-appl-rtkey**

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:asname= (mandatory)
Application Server (AS) name; AS assigned to this routing key.

Range: *aaaaaaaaaaaaa*
Up to 15 alphanumeric characters; the first character must be a letter

:sname= (mandatory)

Name of socket. The routing key table and maintenance commands use these names to reference individual sockets.

Range: *aaaaaaaaaaaaa*
Up to 15 alphanumeric characters; the first character must be a letter

:cice= (optional)

The end range of circuit identification codes assigned to the routing key. Specify **cice** along with **cics** to identify the routing key to be changed. Valid only if **si=4, 5, or 13** and required if **si=4, 5, or 13**.

Range: **0-4294967295**
See Table A-4 for valid CIC values for specified SI and MSU types.

:cics= (optional)

The end range of circuit identification codes assigned to the routing key. Specify **cice** along with **cics** to identify the routing key to be changed. Valid only if **si=4, 5, or 13** and required if **si=4, 5, or 13**.

Range: **0-4294967295**
See Table A-4 for valid CIC values for specified SI and MSU types.

:dpc= (optional)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: **dpca**

Range: **000-255**
Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001–005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006–255**.

The point code **000-000-000** is not a valid point code.

:dpc/dpca/dpci/dpcn/dpcn24= (optional)

Destination point code.

:dpci= (optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255**
Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:dpcn= (optional)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:dpcn24= (optional)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:loc= (optional)

Card location. This parameter is used to delete socket associations for dynamic entries in the Routing Key table of the SS7IPGW card at the specified location.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

:opc= (optional)

ANSI originating point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Synonym: **opca**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:opc/opca/opci/opcn/opcn24= (optional)

Originating point code. Valid only if **si=4, 5, or 13** and required if **si=4, 5, or 13**.

:opci= (optional)

ITU international originating point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*)

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

:opcn= (optional)

ITU national originating point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfnti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:opcn24= (optional)

24-bit ITU national originating point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

:rcontext= (optional)

Identify a routing key by its routing context when a routing key needs to be deleted as an optional alternative to entering the **dpc/si/ssn/opc/cics/cice/type** key parameters.

The **loc** and **rcontext** parameters are not allowed together at the command line because the **loc** parameter is only used with dynamic (TALI-only) routing keys which do not support routing context.

Range: **0-4294967295**

:si= (optional)

The service indicator

Range: **0-15**

0-15 or equivalent text values:

Number = Text—Description

0 = snm—Signaling network management messages

1 = regtest—Signaling network testing and maintenance regular

2 = **spltest**—Signaling network testing and maintenance special
 3 = **sccp**—SCCP
 4 = **tup**—Telephone user part
 5 = **isup**—ISDN user part
 13 = **qbicc**

:ssn= (optional)

The subsystem number.

Range: 0-255

:type= (optional)

The type of routing key that is being changed.

Range: full, partial, default

Default: full

Example

```
dlt-appl-rtkey:sname=tekelec:si=3:ssn=255
```

```
dlt-appl-
```

```
rtkey:dpc=123-234-123:si=5:opc=122-124-125:cics=1:cice=1000:sname=socket3
```

```
dlt-appl-rtkey:loc=1105:dpc=6-6-1:si=3:ssn=5:sname=dynamicsock1
```

```
dlt-appl-rtkey:dpc=1-1-1:si=3:asname=as1:ssn=255
```

```
dlt-appl-
```

```
rtkey:dpcn24=10-100-10:si=5:sname=socket01:opc=10-100-11:cics=1:cice=100
```

```
dlt-appl-
```

```
rtkey:dpci=s-3-11-1:si=5:opci=s-4-11-2:cics=1:cice=1000:asname=asitu
```

```
dlt-appl-rtkey:rcontext=100
```

Dependencies

The SSN is valid and must be specified only when the **si=3** (or **sccp**) parameter is specified. When the **si=3** (or **sccp**) parameter is not specified, the **ssn** parameter must not be specified.

The value entered for the starting circuit identification code (**cics**) must be less than or equal to the value entered for the ending circuit identification code (**cice**).

A circuit identification code range (**cics** to **cice**) that overlaps an existing routing key cannot be specified.

When the DPC is ANSI and the **si=4** parameter is specified, a DPC/SI routing key must be specified (TUP is used only in an ITU network).

The **opc**, **cics**, and **cice** parameters are required and can be entered only if the **si** parameter value is 4, 5, or 13.

If the **si=4**, 5, or 13 (or **tup**, **isup**) parameter is specified, or the **qbicc** parameter is specified, a value must also be specified for the **opc**, **cics**, and **cice** parameters used to route ISUP messages. The **opc**, **cics**, and **cice** parameters can be specified only if the **si=4**, 5, or 13 (or **tup**, **isup**) parameter is specified, or if the **qbicc** parameter is specified.

Table A-4 shows valid CIC values for SI types 4, 5, and 13.

The routing key must be in the Routing Key table.

The socket name must be in the Socket table.

If the **asname** parameter is specified, the AS name must already be defined in the AS table. The AS name and parameters specified for a routing key must use an address format that is valid for the adapter type used by the ASP associations assigned to the AS.

When the **type=default** parameter is specified, the **sname** and **loc** parameters are allowed.

When the **type=full** parameter is specified, the **dpc** and **si** parameters must be specified.

The following types of partial routing keys are supported:

- DPC-SI-OPC (ignore CIC) can be used as a partial match key for CIC- based traffic.
- DPC-SI (ignore all other fields) can be used as a partial match key for CIC- based traffic or SCCP traffic.
- DPC only (ignore all other fields) can be used as a partial match for any type of traffic.
- SI only (ignore all other fields) can be used as a partial match for any type of traffic.

The following card locations are not valid for this command: 1113, 1115, 1117, 1118, and all xy09 and xy10 locations (where x is the frame and y is the shelf). The card must be equipped and in service.

The **loc** and **rcontext** parameters cannot be specified together in the command. The **loc** parameter is used only with dynamic (TALI-only) routing keys, which do not support routing context.

Notes

A specific routing key/socket name association can be deleted by specifying a fully qualified routing key (**dpc/dpca**, **si**, **ssn**, and **sname**). By default, socket associations in the static key entries are deleted using the **dlt-appl-rtkey** command. To delete a dynamic entry, use the **loc** parameter with the **dlt-appl-rtkey** command.

The originating point code (**opc**) and destination point code (**dpc**) must not specify a cluster route.

Group codes are required for ITU-N point codes (DPCN/OPCN) when the Duplicate Point Code feature is turned on.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-).

Output

```
dlt-appl-rtkey:sname=tekelec:si=3:ssn=255
```

```
rlghncxa03w 04-02-17 15:35:05 EST EAGLE 31.3.0
DLT-APPL-RTKEY: MASP A - COMPLTD
```

```
;
```

dlt-appl-sock

Delete Application Socket

Use this command to delete the Socket table entries. The Socket table is used to associate the local host/local port to a remote host/remote port.

Keyword: **dlt-appl-sock**

Related Commands: **chg-appl-sock**, **ent-appl-sock**, **rtrv-appl-sock**

Command Class: Database Administration

Parameters

:sname= (mandatory)

Name of socket. The routing key table and maintenance commands use these names to reference individual sockets.

Range: *aaaaaaaaaaaaaa*
Up to 15 alphanumeric characters; the first character must be a letter

Default: Delete all related sockets

Example

```
dlt-appl-sock:sname=tekelec
```

Dependencies

The socket specified in the **sname** parameter must be in an **open=no** state to modify table entries (**chg-appl-sock:open=no**).

An AS/socket entry cannot be deleted from the Socket table if it is assigned to a routing key.

Notes

None

Output

```
dlt-appl-sock:sname=tekelec
```

```
rlghncxa03w 04-02-17 15:35:05 EST EAGLE 31.3.0
DLT-APPL-SOCK: MASP A - COMPLTD
;
```

dlt-as**Delete Application Server**

Use this command to delete an AS.

Keyword: **dlt-as**

Related Commands: **chg-as**, **ent-as**, **rept-stat-as**, **rtrv-as**

Command Class: Database Administration

Parameters

:aname= (mandatory)

Name of the M3UA/SUA SCTP association to be deleted.

Range: *aaaaaaaaaaaaaa*

Up to 15 alphanumeric characters; the first character must be a letter.

:asname= (mandatory)

Application Server (AS) name; AS assigned to this routing key.

Range: *aaaaaaaaaaaaaa*

Up to 15 alphanumeric characters; the first character must be a letter

:aspname= (obsolete)

Name assigned to the ASP in the ASP table.

NOTE: This parameter is obsolete.

Range: *aaaaaaaaaaaaaa*

Up to 15 alphanumeric characters; the first character must be a letter.

Example

```
dlt-as:as=asx:aname=asxp1
```

Dependencies

An AS that is still assigned to a routing key cannot be deleted.

The connection state for the associations assigned to the AS must be **open=no** before the AS can be deleted.

The AS must be defined in the AS table.

The specified associaton name (**aname**) parameter must be defined in the AS.

Notes

None

Output

dlt-as:as=asx:as=asxp1

```
rlghncxa03w 04-02-17 15:35:05 EST EAGLE 31.3.0
DLT-AS: MASP A - COMPLTD
;
```

dlt-asp

Delete Application Server Process

Use this command to delete an Application Server Process (ASP).

NOTE: This command is obsolete.

Keyword: dlt-asp

Related Commands: ent-asp, rept-stat-asp, rtrv-asp

Command Class: Database Administration

Parameters

:aspname= (mandatory)

Name assigned to this ASP.

Range: ayyyyyyyyyyyyyy

Up to 15 alphanumeric characters; the first character must be a letter.

Example

dlt-asp:aspname=asxp1

Dependencies

The ASP must already be defined.

An ASP that is still assigned to an AS cannot be deleted.

Notes

None

Output

dlt-asp:aspname=asxp1

```
rlghncxa03w 04-02-17 15:35:05 EST EAGLE 31.3.0
DLT-ASP: MASP A - COMPLTD
;
```

dlt-assoc

Delete Association

Use this command to delete the SCTP associations from the IPAPSOCK table.

Keyword: dlt-assoc

Related Commands: chg-assoc, ent-assoc, rtrv-assoc

Command Class: Database Administration

Parameters**:aname=** (mandatory)

Name assigned to the association to be deleted.

Range: *aaaaaaaaaaaaa*

Up to 15 alphanumeric characters; the first character must be a letter

Example**dlt-assoc:aname=tekelec****Dependencies**The association name (**aname**) must already exist in the IP Socket/Association (IPAPSOCK) table.

An association that exists on any AS cannot be deleted from the IPAPSOCK table.

An AS assigned to a routing key cannot be deleted from the IPAPSOCK table.

The connection state must be **open=no** to delete the association from the IPAPSOCK table.**Notes**

None.

Output**dlt-assoc:aname=tekelec**

rlghncxa03w 04-02-17 15:35:05 EST EAGLE 31.3.0

DLT-ASSOC: MASP A - COMPLTD

;

dlt-card**Delete Card**

Use this command to remove a card entry from the system database.

Keyword: **dlt-card****Related Commands:** **init-card, rept-stat-card, rmv-card, rst-card, rtrv-card****Command Class:** Database Administration**Parameters****:loc=** (mandatory)

The card location as stenciled on the shelf of the system.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118****Example****dlt-card:loc=1201****Dependencies**The card location slot must be between **1** and **18**, but not **9** or **10**.The card location cannot be **1113–1118**.The shelf location must be **11xx, 12xx, 13xx, 21xx, 22xx, 23xx, 31xx, 32xx, 33xx, 41xx, 42xx, 43xx, 51xx, 52xx, 53xx, or 61xx**.

The shelf and card must be equipped.

Before this command can be entered, all TCP/IP data links assigned to the card must be deleted.

Before an E1 card or an E1/T1 MIM card used as an E1 card can be deleted, any E1 interfaces assigned to the card must be deleted.

Before an E1/T1 MIM card that is used as a T1 card can be deleted, any T1 interfaces assigned to the card must be deleted.

After the links are deleted, the card must be inhibited before it can be deleted. Use the **inh-card** command to set the card to the OOS-MT-DSBLD state.

Before this command can be entered, SS7 signaling links assigned to the card must be deleted.

Only one database change, action, backup, or restore can be in progress at a time.

Notes

None

Output

```
dlt-card:loc=1201
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
DLT-CARD: MASP A - COMPLTD
;
```

dlt-csl

Delete Common Screening List

Use this command to delete an existing entry from the Common Screening List (CSL). The Common Screening List commands are used to tailor certain types of general screening information to specific features.

Keyword: dlt-csl

Related Commands: chg-csl, ent-csl, rtrv-csl, rtrv-ctrl-feat

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:ds= (optional)

Digit string. This parameter specifies a unique string of digits that is used by the specified screening feature.

Either the **ds** parameter or the **pc** parameter must be specified. Both parameters cannot be specified in the same command.

Range: 1-15 digits

Valid digits are **0-9, a-f, A-F**.

1-15 digits—IDP Screening for Prepaid **insl** list

4 digits—IDP Screening for Prepaid **skts** list

1-15 digits—Prepaid IDP Query Relay **ccnc** list

1-5 digits—Prepaid IDP Query Relay **delpfx** list

1-6 digits—Prepaid IDP Query Relay **gta** list

1-4 digits—Prepaid IDP Query Relay **skbcsn** list

:feature= (optional)

Feature Name. The name of the enabled screening feature for which the command is entered. Enter the name as it appears in the **rtrv-ctrl-feat** command description output example.

Enter enough of the feature name to make the name unique if two features begin with the same word or acronym.

Either the **pn** parameter or the **feature** parameter must be specified to identify the feature.

Range: *abcdefghijklmnopqrstuvwxyz*
 1 alphabetic character followed by up to 24 optional alphanumeric characters, including spaces and special characters, enclosed in double quotation marks (" ").
 Enter enough of the feature name to make the name unique if two features begin with the same word or acronym.
 The following feature names are valid for this command:

- IDP Screening for Prepaid
- Prepaid IDP Query Relay

:list= (optional)

The name of the Common Screening List that is associated with the feature.

The **list** parameter must be specified when the feature uses more than one type of Common Screening List.

Range: **delpfx, gt, skbcm, ccnc, insl, skts**
delpfx—Delete Prefix List
gt—Global Title List
skbcm—SK+BCSM List
ccnc—CC+NC List
insl—In Network Subscriber List
skts—Service Key + Teleservice List

The following screening lists are valid for the indicated features:

- **insl, skts**—IDP Screening for Prepaid
- **ccnc, delpfx, gt, skbcm**—Prepaid IDP Query Relay

:pc= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: **pca**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001–005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006–255**.

The point code **000-000-000** is not a valid point code.

:pc/pca/pci/pcn/pcn24= (optional)

Point code. Either the **ds** parameter or the **pc** parameter must be specified in the command. Currently, there are no common screening list features that use point codes.

:pci= (optional)

ITU international point code with subfields *zone-area-id*.

Range: **0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

The point code **0-000-0** is not a valid point code.

zone—**0-7**

area—**000-255**

id—**0-7**

:pcn= (optional)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:pcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:pn= (optional)

Part Number. The 9-digit "893xxxxxx" part number of the feature for which the command is entered. The **rtrv-ctrl-feat** command description shows the part number in the command output example. Either the **pn** parameter or the **feature** parameter must be specified to identify the feature.

Range: **893000000-893999999**

The first 3 digits are **893**. Do not separate the digits with dashes or spaces.

The following part numbers are valid for this command:

- **893015501**—IDP Screening for Prepaid
- **893016001**—Prepaid IDP Query Relay

Example

```
dlt-csl:feature="Prepaid IDP Query Relay":list=ccnc:ds=123456
```

```
dlt-csl:pn=893016001:list=skbcsm:ds=4321
```

```
dlt-csl:feature="Prepaid IDP Query  
Relay":list=delpfx:ds=54321:p1=0
```

```
dlt-csl:pn=893016001:list=gt:ds=123456789abcdEF
```

```
dlt-csl:feature="IDP Screening for Prepaid":list=insl:ds=246810
```

dlt-csl:pn=893015501:list=skts:ds=36ab

Dependencies

An enabled feature must be specified using either a valid part number (**pn**) or feature name (**feature**). The specified feature must use a Common Screening List.

The specified feature name must be for a feature that uses a Common Screening List. The feature name must be specified as it appears in the **rtrv-ctrl-feat** command output example. Enough of the name must be specified to make the name unique when two features begin with the same word or acronym. The following features use a Common Screening List:

- IDP Screening for Prepaid
- Prepaid IDP Query Relay

The feature that is specified in the **feature** parameter must be enabled.

The **list** parameter must be specified for features that use more than one type of screening list.

The **list** parameter value must be valid for the specified screening feature. The following **list** parameter values are valid for the indicated feature:

- **insl, skts**—IDP Screening for Prepaid
- **gt, ccnc, delpfx, skbcsn**—Prepaid IDP Query Relay

The specified screening list entry must exist in the screening list that is used by the feature.

The following parameters are allowed with the indicated common screening list type:

- **list=gt—ds** parameter
- **list=ccnc—ds** parameter
- **list=delpfx—ds** and **p1** parameters
- **list=skbcsn—ds** parameter
- **list=insl—ds** parameter
- **list=skts—ds** parameter

Notes

None

Output

```
dlt-csl:pn=893016001:list=gt:ds=919556
tekelecstp 05-08-21 15:18:41 EST EAGLE 34.1.0
GT List table is (5 of 50) 10% full
DLT-CSL: MASP A - COMPLTD
;

dlt-csl:pn=893015501:list=insl:ds=123456789abcdEF
tekelecstp 05-08-21 15:18:41 EST EAGLE 34.3.0
INSL List table is (5 of 50) 10% full
DLT-CSL: MASP A - COMPLTD
;
```

dlt-cspc

Delete Concerned Signaling Point Code

Use this command to remove a CSPC or an entire CSPC group.

Keyword: dlt-cspc

Related Commands: ent-cspc, rtrv-cspc

Command Class: Database Administration

Parameters

One, but not both, of these optional parameters must be specified: **all**, **pc/pca/pci/pcn/pcn24**.

NOTE: See “Point Code Formats and Conversion” for a detailed description of point code formats, rules for specification, and examples.

:grp= (mandatory)

Group name

Range: ayyyyyyy

1 alphabetic character followed by up to 7 alphanumeric characters

:all= (optional)

Use this parameter to confirm that all entries for this concerned signaling point code group are to be removed.

Range: yes, no

Default: no

:pc= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Synonym: pca

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001–005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006–255.

The point code 000-000-000 is not a valid point code.

:pc/pca/pci/pcn/pcn24= (optional)

Concerned signaling point code.

:pci= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*)

Range: s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

:pcn= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-*

m2-m3-m4-gc). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:pcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

msa—000-255

ssa—000-255

sp—000-255

Example

dlt-cspc:grp=grp01:pc=144-201-001

dlt-cspc:grp=grp01:pci=s-144-201-001

dlt-cspc:grp=grp01:all=yes

Dependencies

A CPC group name must be specified. The specified group name must exist in the database.

The **grp** parameter and the **all=yes** parameter must be entered with no point code parameter, to remove a group and all of its point codes.

If a PC is specified, then the PC network type must match the group network type, and the PC must exist in the specified CPC group. The specified PC is removed from the CPC group.

Either a PC parameter or the **all=yes** parameter must be specified.

The Spare Point Code Support feature must be enabled before the spare PC prefix **s-** can be specified for an ITU-I or ITU-N point code.

A PC parameter cannot be entered together with the **all** parameter in the same command.

The specified CSPC group must not be referred to by any Mate Application entity.

If the Flexible GTT Load Sharing feature is not enabled, a CAUTION is displayed. When the feature is enabled, the command is rejected with message E4534.

Notes

The system issues a warning if a mate application entity could potentially use a group name that is being deleted.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (**s-**).

Output

```

dlt-cspc:grp=grp01:pci=2-2-2
tekelecstp 04-04-08 12:42:47 EST EAGLE 31.3.0
DLT-CSPC: MASP A - COMPLTD
;

```

dlt-dlk**Delete Data Link**

Use this command to remove a TCP/IP data link from the database. The TCP/IP data link is used for the STP LAN feature, connecting the system to a remote host for message processing.

Keyword: dlt-dlk

Related Commands: act-dlk, canc-dlk, ent-dlk, rept-stat-dlk, rtrv-dlk, tst-dlk

Command Class: Database Administration

Parameters

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Example

```
dlt-dlk:loc=1201
```

Dependencies

The ACM is the only card type that is valid for this command.

The shelf and card must be equipped.

The specified ACM must have a TCP/IP data link assigned to it.

The specified ACM and data link must be out-of-service maintenance-disabled (OOS-MT-DSBLD). Enter the **rept-stat-card** and **rept-stat-dlk** commands to verify the state of the ACM and data link.

Notes

None

Output

```

dlt-dlk:loc=1201

rlghncxa03w 04-02-10 11:43:02 EST EAGLE 31.3.0
DLT-DLK: MASP A - COMPLTD
;

```

dlt-dstn**Delete Destination**

Use this command to delete destinations from the Destination entity set after the STP no longer routes to those destinations.

Keyword: dlt-dstn

Related Commands: chg-dstn, chg-rte, dlt-rte, ent-dstn, ent-rte, rept-stat-dstn, rtrv-dstn, rtrv-rte

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:dpc= (mandatory)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: **dpca**

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001-005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006-255**.

The point code **000-000-000** is not a valid point code.

:dpc/dpca/dpci/dpcn/dpcn24= (mandatory)

Destination point code.

:dpci= (mandatory)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:dpcn= (mandatory)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code (*gc*) must be specified when the ITUDUPPC feature is turned on. The *prefix* indicates a spare point code, private point code, or private and spare point code.

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:dpcn24= (mandatory)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*. The *prefix* subfield indicates a private point code.

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p**-

msa—**000**-255

ssa—**000**-255

sp—**000**-255

Example

To delete destination 11-222-111:

dlt-dstn:dpc=111-222-111

To delete a network destination:

dlt-dstn:dpc=21-*-*

To delete destination 8112-ge:

dlt-dstn:dpcn=8112-ge

To delete ITU-N 24-bit destination 13-100-10:

dlt-dstn:dpcn24=13-100-10

To delete destination spare point code s-8112:

dlt-dstn:dpcn=s-8112

Dependencies

The destination address must be either a full point code, a cluster point code, or a network destination point code.

The format of the specified **dpcn** parameter must match the format for ITU national point codes that was assigned with the **chg-stpopts:npcfmti** parameter.

The specified destination point code must already exist in the Destination entity set.

The destination cannot have routes assigned to it.

The specified destination point code cannot already be defined as a remote application internal point code (IPC).

The **dpc** parameter must be defined as a destination point code.

The specified destination point code cannot already be defined as an adjacent point code or a secondary adjacent point code.

The specified destination cannot be referenced by SCCP as a destination point codes in the Mate Application table.

The specified destination cannot be referenced by SCCP as a destination point code in the Mated Relay Node (MRN) table.

If the X.25/SS7 Gateway feature is turned on, any X.25 destinations that reference the specified destination must be removed from the database before the specified destination can be removed from the database.

Network routing is valid only if the Network Routing (NRT) feature is turned on.

When using network routing, if the destination point code has a value of * in the *nc* subfield, the *ncm* subfield must also be * (for example, **dpc=21-*-***).

Notes

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (**s**-) and the private and spare point code subtype prefix (**ps**-). All of the point code types support the private (internal) point code subtype prefix (**p**-).

Output

The following example shows the display of the destination memory space accounting command completion response with the NCR, NRT, and CRMD features off (disabled) and all Routes and Routesets features off (disabled):

dlt-dstn:dpc=111-222-111

```
rlghncxa03w 04-08-17 15:35:05 EST EAGLE 31.8.0
Destination table is (10 of 2000) 1% full
Alias table is (8 of 12000) 1% full
DLT-DSTN: MASP A - COMPLTD
```

;

The following example shows the display of the destination memory space accounting command completion response with the NCR, NRT, and CRMD features off (disabled) and the DSTN5000 (5000 Routes) feature on:

dlt-dstn:dpc=111-222-111

```
rlghncxa03w 04-08-18 08:29:15 EST EAGLE 31.8.0
Destination table is (10 of 5000) 1% full
Alias table is (8 of 12000) 1% full
DLT-DSTN: MASP A - COMPLTD
```

;

The following example shows the display of the destination memory space accounting command completion response with one or more of the NCR, NRT, or CRMD features on and the DSTN5000 (5000 Routes) feature on:

dlt-dstn:dpc=111-222-111

```
rlghncxa03w 04-08-18 08:29:15 EST EAGLE 31.8.0
DESTINATION ENTRIES ALLOCATED: 5000
  FULL DPC(s): 9
  NETWORK DPC(s): 0
  CLUSTER DPC(s): 1
  TOTAL DPC(s): 10
  CAPACITY (% FULL): 1%
ALIASES ALLOCATED: 12000
  ALIASES USED: 8
  CAPACITY (% FULL): 1%
X-LIST ENTRIES ALLOCATED: 500
DLT-DSTN: MASP A - COMPLTD
```

;

The following example shows the display of the destination memory space accounting command completion response with the NCR, NRT, and CRMD features off (disabled) and the 6000 Routesets feature on:

dlt-dstn:dpc=111-222-111

```
rlghncxa03w 04-08-18 08:29:15 EST EAGLE 31.8.0
Destination table is (60 of 6000) 1% full
Alias table is (8 of 12000) 1% full
DLT-DSTN: MASP A - COMPLTD
```

;

The following example shows the display of the destination memory space accounting command completion response with one or more of the NCR, NRT, or CRMD features on and the 6000 Routesets feature on:

dlt-dstn:dpc=111-222-111

```
rlghncxa03w 04-08-18 08:29:15 EST EAGLE 31.8.0
DESTINATION ENTRIES ALLOCATED: 6000
  FULL DPC(s): 46
```

```

NETWORK DPC(s):          1
CLUSTER DPC(s):          1
TOTAL DPC(s):            12
CAPACITY (% FULL):       1%
ALIASES ALLOCATED:       12000
ALIASES USED:             8
CAPACITY (% FULL):       1%
X-LIST ENTRIES ALLOCATED: 500
DLT-DSTN: MASP A - COMPLTD
;

```

The following example shows the display of the destination memory space accounting command completion response with the NCR, NRT, and CRMD features off (disabled). When the 7000 Routesets quantity feature is on, the Destination table line shows "...of 7000" as it appears in the example. When the 8000 Routesets quantity feature is on, the Destination table line shows "...of 8000."

dlt-dstn:dpc=111-222-111

```

rlghncxa03w 04-08-18 08:29:15 EST EAGLE 31.8.0
Destination table is (10 of 7000) 1% full
Alias table is (8 of 8000) 1% full
DLT-DSTN: MASP A - COMPLTD
;

```

The following example shows the display of the destination memory space accounting command completion response with one or more of the NCR, NRT, or CRMD features on. When the 8000 Routesets quantity feature is on, the DESTINATION ENTRIES ALLOCATED line shows "8000" as it appears in the example. When the 7000 Routesets quantity feature is on, the DESTINATION ENTRIES ALLOCATED line shows "7000."

dlt-dstn:dpc=111-222-111

```

rlghncxa03w 04-08-18 08:29:15 EST EAGLE 31.8.0
DESTINATION ENTRIES ALLOCATED: 8000
FULL DPC(s):                  46
NETWORK DPC(s):               1
CLUSTER DPC(s):               1
TOTAL DPC(s):                 12
CAPACITY (% FULL):            1%
ALIASES ALLOCATED:            8000
ALIASES USED:                  8
CAPACITY (% FULL):            1%
X-LIST ENTRIES ALLOCATED:     500
DLT-DSTN: MASP A - COMPLTD
;

```

dlt-e1

Delete E1 Interface

Use this command to delete an interface for a 2-port E1 card, or for an E1/T1 MIM card, an HC MIM card, or an E5-E1T1 card used as an E1 card. The E1 port number on the card and the E1 card location in the EAGLE 5 ISS must be specified.

On an HC MIM card or an E5-E1T1 card, E1 ports 1, 3, 5, and 7 (master ports) can be independently channel bridged with their adjacent even-numbered (slave) ports 2, 4, 6, and 8 to allow non-signaling data pass-through. The slave port interface is automatically deleted with the command that deletes its master port interface.

Keyword: dlt-e1

Related Commands: chg-e1, ent-e1, rtrv-e1, tst-e1

Command Class: Database Administration

Parameters

:e1port= (mandatory)

E1 port number. The value must be an E1 port that has already been configured on the specified E1 card.

Range: **1-8**

Ports 3 - 8 can be specified only for HC MIM cards and E5-E1T1 cards.

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

Example

```
dlt-e1:loc=1205:e1port=1
```

```
dlt-e1:loc=1205:e1port=2
```

Dependencies

The specified card location (**loc** parameter) must be equipped.

The card in the specified card location (**loc** parameter) must be a **lime1** card type.

The port specified by the **e1port** parameter must be already equipped with an E1 interface.

All signaling links providing timeslots serviced by the specified E1 interface must be deleted before the E1 interface can be deleted. See the **dlt-slk** command to delete the signaling links providing the timeslots.

A channel bridged slave (even-numbered) port on an HC-MIM card or an E5-E1T1 card cannot be specified in the **e1port** parameter. To delete channel bridged port interfaces, specify the master (odd-numbered) port in the **e1port** parameter. The slave port interface is automatically deleted when its master port interface is deleted.

The following card locations cannot be specified in the **loc** parameter: 1113, 1114, 1115, 1116, 1117, 1118 (OAM , TDM, and MDAL cards), and xy09 and xy10 (x is the frame, y is the shelf for HMUX and HIPR cards).

Notes

None.

Output

```
dlt-e1:loc=1205:e1port=1
```

```
rlghncxa03w 04-02-20 09:07:58 EST EAGLE 31.3.0
dlt-E1: MASP A - COMPLTD
```

```
;
```

dlt-frm-pwr

dlt-frm-pwr

Use this command to delete the existing power threshold entry from the Frame Power Threshold table for the specified frame. After the power threshold value is deleted, the default power threshold value of 30 Amps is assumed for the specified frame.

Range: yes, no
Default: no

:loc= (optional)

The card location of the fixed disk containing the FTA.

Range: 1114, 1116
 (TDM)

Default: The location of the active TDM

Example

```
dlt-ftp:loc=1114:file="CAM.ELF"
dlt-ftp:loc=1114:file="CAM.ELF":force=yes
dlt-ftp:loc=1116:all=yes
```

Dependencies

Removing an individual file only frees up that file name for another transfer of that file.

The **all=yes** parameter must be specified when a specific filename is not supplied.

The **all=yes** parameter not only removes all files from the FTA, but frees up the space in the FTA.

When using DOS file names, if the file name contains a special character such as an underscore (_) or begins with a numeric, the file name must be in quotes (" "), for example, "92_name.ext".

Removing an individual file only frees up that file name for another transfer of that file.

The **force=yes** parameter must be specified to remove the last file in the FTA.

The **loc** parameter must specify a TDM card.

A specific filename and **all=yes** may not be specified at the same time.

Only one file transfer can be active at a time.

Notes

None

Output

```
dlt-ftp:file=oam.elf:loc=1114
rlghncxa03w 04-02-05 15:31:59 EST  EAGLE 31.3.0
File OAM.ELF deleted from File Transfer Area on fixed disk 1114.
;

dlt-ftp:all=yes:loc=1116
rlghncxa03w 04-02-05 15:33:32 EST  EAGLE 31.3.0
All files deleted from File Transfer Area on fixed disk 1116.
;
```

dlt-ftp-serv

Delete FTP Server Entry

Use this command to delete an entry for an FTP server from the FTP Server table.

Keyword: dlt-ftp-serv

Related Commands: chg-ftp-serv, ent-ftp-serv, rtrv-ftp-serv

Command Class: Database Administration

Parameters

:app= (mandatory)

The FTP Client application at the EAGLE 5 ISS STP that interfaces with the FTP Server.

Range: meas, user

meas — the Measurements Platform application
user — the FTP-based Table Retrieve Application (FTRA)

:ipaddr= (mandatory)

IP Address of the FTP Server.

Range: 4 numbers separated by dots, with each number in the range of 0-255.

Example

dlt-ftp-serv:app=meas:ipaddr=1.255.0.102

Dependencies

Both the **app** and **ipaddr** parameters must be entered in the command to delete an FTP server.

An entry must already exist in the FTP Server table for this application at the specified IP address.

The **app** parameter must specify an application that uses the FTP Support feature.

The **ipaddr** parameter must specify a valid IP address for the FTP server.

Notes

None

Output

dlt-ftp-serv:app=meas:ipaddr=1.255.0.102

```
rlghncxa03w 04-02-20 09:07:58 EST EAGLE 31.3.0
FTP SERV table is (1 of 10) 10% full
DLT-FTP-SERV: MASP A - COMPLTD
```

;

dlt-ftp-serv:app=user:ipaddr=1.255.0.102

```
rlghncxa03w 04-02-20 09:07:58 EST EAGLE 31.3.0
FTP SERV table is (0 of 10) 0% full
DLT-FTP-SERV: MASP A - COMPLTD
```

;

dlt-gsmmap-scrn

Delete GSM MAP Screening Entry

Use this command to delete the GSM Map Screening CgPA and CdPA entries that are used to filter out or allow SCCP messages containing Map Op-Codes, CGPA GTA+NPV+NAIV, CDPA GTA+NPV+NAIV, and forbidden parameters.

Keyword: dlt-gsmmap-scrn

Related Commands: chg-gsmmap-scrn, ent-gsmmap-scrn, rtrv-gsmmap-scrn

Command Class: Database Administration

Parameters

:cgsr= (mandatory)

CgPA Screening Reference.

Range: ayyy

1 alphabetic character followed by up to 3 optional alphanumeric characters

:opname= (mandatory)

The user-defined name for the operation code. The **opname** value references the operation code (**opcode**) defined with the **ent-gsms-opcode** command.

Range: ayyyyyy

Up to 8 alphanumeric characters

:cdsr= (optional)
 CdPA Screening Reference.
Range: *ayyy*
 1 alphabetic character followed by up to 3 optional alphanumeric characters

Example

```
dlt-gsmmap-scrn:opname=xyz:cgsr=fela:cdsr=fall
dlt-gsmmap-scrn:opname=xyz:cgsr=fela
```

Dependencies

The GSM Map Screening feature (see the **enable-ctrl-feat** command) must be enabled before this command can be entered.

The Enhanced GSM Map Screening (EGMS) feature must be enabled before the **cdsr** parameter can be specified.

The specified **cgsr** parameter value must exist in the database.

The specified **cdsr** parameter value must exist in the database.

A **cgpa** entry cannot be deleted if it is referred to by **cdpa** entries.

The specified **opname** parameter value must exist in the GSM Map Op-Code table.

Notes

Unlike GTT (Global Title Translation) entries, the GSM MAP screening commands do not support splits of ranges during deletion or changes of entries.

Output

```
dlt-gsmmap-scrn:opname=xyz:cgsr=fela:cdsr=fall
rlghncxa03w 04-02-29 08:51:12 EST EAGLE 31.4.0
GSM Map Screening table is (1 of 4000) 1% full
DLT-GSM MAP-SCRN: MASP A - COMPLTD
;
```

dlt-gsms-opcode

Delete GSM MAP Screening Operation Code

Use this command to delete GSM (Global System for Mobile Telecommunication) MAP (Mobile Application Part) screening operation codes and the default screening action for that operation code.

Keyword: **dlt-gsms-opcode**

Related Commands: **chg-gsms-opcode**, **ent-gsms-opcode**, **rtrv-gsms-opcode**

Command Class: Database Administration

Parameters

:opname= (mandatory)
 The user-defined name for the operation code. The **opname** value is defined with the **ent-gsms-opcode** command.
Range: *ayyyyyyy*
 Up to 8 alphanumeric characters

Example

```
dlt-gsms-opcode:opname=ati
```

Dependencies

The reserved word **none** cannot be specified as a value for the **opname** parameter.

The value specified for the **opname** parameter must exist in the GSM MAP Op-Code table.

The **opname** value being deleted cannot be referenced in the GSM MAP Screening table.

The GSM Map Screening feature must be enabled (see the **enable-ctrl-feat** command) before this command can be entered.

Notes

None

Output

```
dlt-gsms-opcode:opname=ati
rlghncxa03w 06-02-29 08:50:12 EST EAGLE 35.0.0
DLT-GSMS-OPCODE: MASP A - COMPLTD
;
```

dlt-gsmssn-scrn

Delete GSM Subsystem Number Screening Entry

Use this command to delete an SSN (subsystem number) from the GSM (Global System for Mobile Telecommunication) SSN screening table.

Keyword: dlt-gsmssn-scrn

Related Commands: ent-gsmssn-scrn, rtrv-gsmssn-scrn

Command Class: Database Administration

Parameters

:ssn= (mandatory)

Subsystem number.

Range: 000-255

:type= (mandatory)

Subsystem type.

Range: orig, dest

orig — The origination SSN

dest — The destination SSN

Example

This example deletes a destination subsystem of 255 from the GMS SSN screening table:

```
dlt-gsmssn-scrn:ssn=255:type=dest
```

Dependencies

The GSM Map Screening feature must be enabled (see the **enable-ctrl-feat** command) before this command can be entered.

A value for the **ssn/type** parameter combination must be specified that exists in the GSM SSN screening table.

Notes

None

Output

```
dlt-gsmssn-scrn:ssn=255:type=dest
rlghncxa03w 04-02-20 09:04:21 EST EAGLE 31.3.0
DLT-GSMSSN-SCRN: MASP A - COMPLTD
;
```

dlt-gta**Delete Global Title Address Information**

Use this command to delete the GTA (global title address) information applicable to a global title selector combination.

This command deletes the routing of SCCP messages for specified global title addresses from designated destinations and their subsystem numbers.

Keyword: dlt-gta

Related Commands: chg-gta, ent-gta, rtrv-gta

Command Class: Database Administration

Parameters

:gttsn= (mandatory)

GTT set name. A GTT set is an entity to which global title addresses and selectors are assigned.

Range: ayyyyyyyy

1 leading alphabetic and up to 8 following alphanumeric characters.

:cgpc= (optional)

ANSI CgPA point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Synonym: cgpa

Range: 000-255, *

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

The asterisk (*) value is not valid for the *ni* subfield.

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001–005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006–255.

When **chg-sid:pctype=ansi** is specified, *ni*-*-* is valid if *ni* = 006–255.

The point code 000-000-000 is not a valid point code.

:cgpci= (optional)

ITU international CgPA point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

:cgpcn= (optional)

ITU national CgPA point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: s-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:cgpcn24= (optional)

24-bit ITU national CgPA point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

:cgssn= (optional)

Starting CgPA subsystem number.

Range: 0-255

:ecgssn= (optional)

Ending CgPA subsystem number.

Range: 0-255

:egta= (optional)

End global title address.

Range: 1-21 digits

Default: Same as the specified **gta** value

:gta= (optional)

Start global title address.

Range: 1-21 digits

:opc= (optional)

ANSI originating point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: **opca**

Range: 000-255, *

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

The asterisk (*) value is not valid for the *ni* subfield.

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001-005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006-255.

When **chg-sid:pctype=ansi** is specified, *ni*-*-* is valid if *ni* = 006-255.

The point code 000-000-000 is not a valid point code.

:opci= (optional)

ITU international originating point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

:opcn= (optional)

ITU national originating point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: s-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:opcn24= (optional)

24-bit ITU national originating point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

Example

dlt-

gta:gttsn=setcdgta:gta=123456789012345678901:egta=223456789012345678901

dlt-gta:gttsn=t800:gta=919461:egta=919468

dlt-

gta:gttsn=setcggta:gta=323456789012345678901:egta=423456789012345678901

dlt-gta:gttsn=setcgpc:cgpc=001-001-001

dlt-gta:gttsn=setopc:opca=002-001-001

dlt-gta:gttsn=setcgssn:cgssn=100:ecgssn=200

Dependencies

The EGTT feature must be turned on before this command can be entered.

The **gttsn** parameter must be specified, may not have a value of **none**, and must match an existing **gttsn**.

The length of the specified **gta** parameter must match the number of digits provisioned for the specified GTT set (**gttsn**). If the VGTT (variable length GTT) feature is turned on, you can have up to 10 GTA lengths per GTT set. When you enter the **ent-gta** command to create entries, the software keeps track of the lengths and allows only ten different lengths. The global title address specified for the GTT set must have the same number of digits as an existing GTA.

The specified **gta/egta** range must exist for the specified GTT set in the STP active database. While an exact match is not required, you cannot specify an overlap with another range. If the range overlaps, an error is generated that displays a list of overlapped global title addresses. An example follows that shows what happens when the user attempts to enter a global title address range (such as 8005550000 to 8005559999) that overlaps an existing range. The overlapping links must match. If they do not, the error message displays the list of overlapped global title addresses:

The following GTA ranges overlap the input GTA range

```
START GTA      END GTA
8005550000     8005551999
8005552000     8005553999
8005554000     8005555999
DLT-GTA: MASP A - Command Aborted
```

If the **egta** parameter is specified, the **gta** and **egta** value must be the same length and the **egta** value must be greater than the **gta** value.

The GTT table cannot be full in case a delete command causes a split requiring more entries to be added.

Either the **cgpc/cgpca/cgpci/cgpcn/cgpcn24**, **opc/opca/opci/opcn/opcn24**, **cgssn**, or **gta** parameter must be specified.

If specified, the **ecgssn** parameter must be greater than the **cgssn** parameter.

The **cgssn** parameter cannot be specified as a wildcard (*).

The Origin-based SCCP Routing feature must be enabled when specifying the **cgpc/cgpca/cgpci/cgpcn/cgpcn24**, **opc/opca/opci/opcn/opcn24**, or **(e)cgssn** parameters.

The **gta** parameter must be specified if the GTTSN set type has a value of **cdgta** or **cggta**, and cannot be specified for other set types.

The **cgpc/cgpca/cgpci/cgpcn/cgpcn24** parameter must be specified if the GTTSN set type has a value of **cgpc**, and cannot be specified for other set types.

The **opc/opca/opci/opcn/opcn24** parameter must be specified if the GTTSN set type has a value of **opc**, and cannot be specified for other set types.

The **cgssn** parameter must be specified if the GTTSN set type has a value of **cgssn**, and cannot be specified for other set types.

If the specified GTT Set is an ANSI set, the **cgpc/cgpca** and **opc/opca** parameters must be valid ANSI point codes. If the specified GTT Set is an ITU set, the **cgpci/cgpcn/cgpcn24** and **opci/opcn/opcn24** parameters must be valid ITU point codes.

The range specified by the **cgssn** and **ecgssn** parameters must exist for the specified GTT set. An exact match is not required.

The point code specified by the **cgpc** or **opc** parameter must exist.

The range specified by the **cgssn** and **ecgssn** parameters cannot overlap a currently existing range for the specified GTT set.

The **cgpc**, **cgssn**, **gta**, and **opc** parameters are mutually exclusive. Each of these parameters must be specified individually in separate commands.

Notes

When the EGTT feature is turned on, the GTT Selector (**ent/chg/dlt/rtrv-gttset**), GTT Set (**ent/dlt/rtrv-gttset**), and GTA (**ent/chg/dlt/rtrv-gta**) commands replace the Translation Type (**ent/dlt/rtrv-tt**) and Global Title Translation (**ent/chg/dlt/rtrv-gtt**) commands. All data previously provisioned with these commands is maintained.

If a GTT is being deleted or changed and the point code (**dpc** or **rte**) is not found in the route table (unless the point code is the STP's true point code), the following message is displayed in the terminal scroll area:

NOTICE: No DPC and/or RTE found for GTT being deleted or changed.
The above situation may occur for the following reasons:

A database was upgraded from a release prior to EAGLE 5 ISS Release 27.1 or IP⁷ Secure Gateway Release 3.0 when GTT entries were not linked to the route table and the deletion of the **dpc** was permitted. The GTT referenced a **dpc/rte** that was deleted, and the enforce reference counts between the GTT and route tables were not updated.

- A serious problem occurred in which the reference count rules were not enforced and a **dpc** and/or **rte** were deleted while being referenced by a GTT entry. This indicates a software error; notify the Customer Care Center at (888) FOR-TKLC.

Output

dlt-gta:gtttn=libd:gta=9195554321

rlghncxa03w 04-02-20 09:04:21 EST EAGLE 31.3.0
DLT-GTA: MASP A - CMPLTD

;

dlt-gtcnv

Delete Global Title Conversion

Use this command to delete entries from the Default Global Title Conversion table. The particular entry to be deleted is identified by the direction in conjunction with the TTA or TTI, or with the TTI, NP, and NAI.

Keyword: dlt-gtcnv

Related Commands: chg-gtcnv, ent-gtcnv, rtrv-gtcnv

Command Class: Database Administration

Parameters

:dir= (mandatory)

Direction of conversion.

Range: atoi, itoa, both

atoi— ANSI to ITU conversion

itoa— ITU to ANSI conversion

both— Conversion in both directions

:nai= (optional)

Nature of Address Indicator. This parameter is mandatory when **gtixlat=24** is specified, and cannot be specified when **gtixlat=22** is specified.

Range: 0-63 *

Default: No change to current value

:np= (optional)

Numbering Plan. This parameter is mandatory when **gtixlat=24** is specified, and cannot be specified when **gtixlat=22** is specified.

Range: 0-15 *

Default: No change to current value

:tta= (optional)

ANSI translation type. This parameter is mandatory when **dir=atoi** or **dir=both** is specified.

Range: 0-255 *

Default: No change to current value

:tti= (optional)

ITU translation type. This parameter is required when **dir=atoi** is specified.

Range: 0-255 *

Default: No change to current value

Example

The following example deletes an ANSI-to-ITU entry using the TTA of 10 to identify the entry.

dlt-gtcnv:dir=atoi:tta=10

The following example deletes an ANSI-to-ITU entry using the TTA of 11 to identify the entry.

dlt-gtcnv:dir=atoi:tta=11

The following example deletes a ITU-to-ANSI entry using the TTI of 7, NAI of 8, and NP of 6 to identify the entry.

dlt-gtcnv:dir=ittoa:tti=7:nai=8:np=6

The following example deletes a BOTH (ANSI <-> ITU) entry using the TTI of 9 and TTA of 12 to identify the entry.

dlt-gtcnv:dir=both:tta=12:tti=9

The following example deletes a BOTH (ANSI <-> ITU) entry using the TTI of 7, NAI of 6, NP of 4, and TTA of 12 to identify the entry.

dlt-gtcnv:dir=both:tta=12:tti=7:np=4:nai=6

The following example deletes an ANSI-to-ITU default entry using the TTA of * to identify the entry.

dlt-gtcnv:dir=atoi:tta=*

The following example deletes an ITU-to-ANSI default entry using the TTI of *, NAI of * and NP of * to identify the entry.

dlt-gtcnv:dir=ittoa:tti=*:nai=*:np=*

Dependencies

The ANSI-ITU-China SCCP Conversion feature must be enabled before this command can be entered.

The entry that is to be deleted must exist in the database.

When **dir=atoi** is specified, the **tta** parameter must be specified.

When **dir=atoi** is specified, the **tta** parameter must be specified.

When **dir=atoi** is specified, **tti**, **nai**, and **np** parameters cannot be specified.

When **dir=ittoa** is specified, the **tti=*** parameter must be specified.

When **dir=ittoa** is specified, **nai** and **np** parameter values must be * if specified.

When **dir=both** is specified, at least the **tta** and **tti** parameters must be specified.

When **dir=both** is specified, asterisk values for other parameters cannot be specified.

If specified, the **nai** and **np** parameters must be specified together in the command.

When **gtixlat=22** and **dir=itua** are specified, asterisk entries cannot be specified. Specify **gtixlat=24** when **dir=itua** is specified and asterisk entries are specified.

Notes

To delete an ANSI-to-ITU entry, specify the direction (**dir**) and the TTA.

To delete an ITU-to-ANSI entry with a **gtixlat** of **22**, specify the direction (**dir**) and the TTI.

To delete an ITU-to-ANSI entry with a **gtixlat** of **24**, specify the direction (**dir**), TTI, NAI and NP.

To delete a BOTH (ANSI <-> ITU) entry with a **gtixlat** of **22**, specify the direction (**dir**), TTA and TTI.

To delete a BOTH (ANSI <-> ITU) entry with a **gtixlat** of **24**, specify the direction (**dir**), TTA, TTI, NP and NAI.

Output

dlt-gtcnv:dir=both:tta=12:tti=9

```
rlghncxa03w 03-03-18 08:50:12 EST EAGLE 31.3.0
DLT-GTCNV: MASP A - COMPLTD
```

;

dlt-gtt

Delete Global Title Translation

Use this command to remove the routing of messages for specified global title addresses from designated destinations and their subsystem numbers.

If the EGTT (Enhanced Global Title Translation) feature is turned on, the system will no longer accept GTT (Global Title Translation) and TT (Translation Type) commands. Refer to the new command sets that replace the GTT and TT commands:

- GTT Selector commands (**ent/chg/dlt/rtrv-gttset**)
- GTT Set commands (**ent/dlt/rtrv-gttset**)
- GTA commands (**ent/chg/dlt/rtrv-gta**).

Keyword: dlt-gtt

Related Commands: chg-gtt, ent-gtt, rtrv-gtt

Command Class: Database Administration

Parameters

At least one of these optional parameters must be specified: **ttn**, **type/typea/typei/typen/typen24**.

:gta= (mandatory)

Global title start address.

Range: 1-21 digits

:egta= (optional)

Global title end addresss.

Range: 1-21 digits

Default: egta same as gta

:ttn= (optional)

Translation type name.

Range: *ayyyyyyy*

1 alphabetic character followed by up to 7 alphanumeric characters

Default: No translation name is given

:type/typea/typei/typen/typen24= (optional)

Translation type identifies the translation type and network type. This parameter is the decimal representation of the 1-byte field used in SS7.

The **type** and **typea** parameters specify an ANSI network.

The **typei** parameter specifies an ITU-international network.

The **typen** parameter specifies an ITU-national network.

The **typen24** parameter specifies a 24-bit ITU-national network.

A translation type numeric value may be entered as ANSI type (**type** or **typea**) and also as an ITU type (**typei** or **typen**). However, they are separate entities.

The point code domain translation types for GTT are handled by the EAGLE 5 ISS protocol processing as either ANSI or ITU; therefore, ITU applies to ITU-I, ITU-I Spare, ITU-N, and ITU-N Spare. ITU-I includes ITU-I Spare, and ITU-N includes ITU-N Spare.

Range: **0-255**

Default: No translation type is specified

Example

dlt-gtt:type=252:ttn=lidb9:gta=408908:egta=408988

dlt-gtt:gta=919833:typen24=4

Dependencies

This EGTT feature must be turned on before this command can be entered.

If translation type is specified, it must exist in the database.

If the **ttn** parameter is specified, the name must correspond to a translation type entry.

If both **ttn** and **type** are specified, **ttn** must correspond to the given translation type.

The **type** or **ttn** parameter must be specified.

The **gta** length must equal the number of digits specified by the translation type. If the VGTT (variable length GTT) feature is turned on, you can have up to 10 GTA lengths per translation type. When you enter the **ent-gtt** command to create entries, the software keeps track of the lengths and allows only ten different lengths. The global title address specified for the translation type must then have the same number of digits as an existing GTA.

The global title address range as expressed by the **gta** and **egta** parameters must already exist in the global title translation.

The range, as specified by the **gta** and the **egta**, must be exactly the same as a current entry or be contained within an existing range in the GTT data for the specified translation type. If the range overlaps, an error is generated that displays a list of overlapped global title addresses. An example follows that shows what happens when the user attempts to delete a global title address range (such as 8005550000 to 8005559999) that overlaps an existing range. The overlapping links must match. If they do not, the error message displays the list of overlapped global title addresses:

The following GTA ranges overlap the input GTA range

START GTA	END GTA
8005550000	8005551999
8005552000	8005553999
8005554000	8005555999

DLT-GTT: MASP A - Command Aborted

If the address range as specified by the start and end global title addresses does not exactly match the existing range, the range is split. All addresses in the existing range that are outside of the specified range are used to create new ranges. The specified range is deleted.

Notes

None.

Output

```
dlt-gtt:type=252:ttn=lidb9:gta=408908:egta=408988
rlghncxa03w 04-01-07 11:43:07 EST EAGLE 31.3.0
DLT-GTT: MASP A - COMPLTD
;
```

dlt-gttset

Delete GTT Selectors

Use this command to delete an applicable global title translation (GTT) selector.

Keyword: dlt-gttset

Related Commands: chg-gttset, ent-gttset, rtrv-gttset

Command Class: Database Administration

Parameters

:gti/gtia/gtii/gtin/gtin24= (mandatory)

Global title indicator. For all EGTT selector commands, the domain is defined as **gti** and **gtia** (ANSI), **gtii** (ITU international), **gtin** (ITU national), and **gtin24** (24-bit ITU national).

For the selector commands, **gti** and **gtia** are equivalent; **gtii** and **gtin/gtin24** are mutually exclusive because the EGTT database does not distinguish between ITU national and ITU international translations. This means that while ITU-I and ITU-N selectors are stored separately, two separate ITU-I and ITU-N entries with the same selector values cannot exist. For example, if an entry with **gtii=2** and **tt=4** already exists, an entry of **gtin=2** and **tt=4** cannot be entered

Range: Supported value for ANSI: **gti=2** and **gtia=2**
Supported values for ITU: **gtii=2, 4** and **gtin/gtin24=2, 4**

:tt= (mandatory)

Translation type.

Range: **0-255**

:nai= (optional)

Nature of Address indicator. The Nature of Address indicator can be specified by supplying either a mnemonic value (**nai** parameter) or an explicit numeric value (**naiv** parameter). Either the **nai** parameter or the **naiv** parameter, but not both, can be specified in the command. Table A-5 shows the mapping between the **naiv** and the **nai** parameter values.

Range: **sub, rsvd, natl, intl, dflt**

:naiv= (optional)

Nature of Address indicator value. The Nature of Address indicator can be specified by supplying either a mnemonic value (**nai** parameter) or an explicit numeric value (**naiv** parameter). Either the **nai** parameter or the **naiv** parameter, but not both, can be specified in the command. Table A-5 shows the mapping between the **naiv** and the **nai** parameter values.

Range: 0-127

:np= (optional)

Numbering Plan. The numbering plan indicator can be specified by supplying either a mnemonic value (**np** parameter) or an explicit numeric value (**npv** parameter). Either the **np** parameter or the **npv** parameter, but not both, can be specified in the command. Table A-6 shows the mapping between the **npv** and the **np** parameter values.

Range: e164, generic, x121, f69, e210, e212, e214, private, dflt

:npv= (optional)

Numbering Plan value. The numbering plan indicator can be specified by supplying either a mnemonic value (**np** parameter) or an explicit numeric value (**npv** parameter). Either the **np** parameter or the **npv** parameter, but not both, can be specified in the command. Table A-6 shows the mapping between the **npv** and the **np** parameter values.

Range: 0-15

Example

```
dlt-gttset:gti=2:tt=10
```

```
dlt-gttset:gtin=4:tt=0:np=dflt:nai=dflt
```

Dependencies

The EGTT feature must be turned on before this command can be entered.

An entry must already exist that matches the **gti**, **tt**, and **np(v)** and **nai(v)** combination of parameters.

An entry must already exist that matches the **gtii**, **tt**, and **np(v)** and **nai(v)** combination of parameters.

An entry must already exist that matches the **gtin**, **tt**, and **np(v)** and **nai(v)** combination of parameters.

The specified **gttsn** value must exist for the specified **gtin24**, **tt**, **np/npv/nai/naiv** parameter combination.

The **np** and **npv** parameters cannot be specified together in the same command.

The **nai** and **naiv** parameters cannot be specified together in the same command.

The parameter values **gtia=4**, **gti/gtia/gtii/gtin/gtin24=1**, and **gti/gtia/gtii/gtin/gtin24=3** cannot be specified.

When the **gti/gtia/gtii/gtin/gtin24=2** parameter is specified, the **np/npv** and **nai/naiv** parameter combinations cannot be specified.

When the **gtii/gtin/gtin24=4** parameter is specified, an **np(v)** and **nai(v)** parameter combination must be specified. These parameters can be specified in any combination: **np** and **naiv**, **npv** and **nai**, **np** and **nai**, or **npv** and **naiv**.

If multiple **cgssn** and/or **selid** entries exist for a specified selector, the selector cannot be deleted.

Notes

When the EGTT feature is turned on, the GTT Selector (**ent/chg/dlt/rtrv-gttset**), GTT Set (**ent/dlt/rtrv-gttset**), and GTA (**ent/chg/dlt/rtrv-gta**) commands replace the Translation Type (**ent/dlt/rtrv-tt**) and Global Title Translation (**ent/chg/dlt/rtrv-gtt**) commands. All data previously provisioned with these commands is maintained.

Output

```
dlt-gttset:gti=2:tt=10
```

```
rlghncxa03w 04-02-18 08:54:41 EST EAGLE 31.3.0
```

```
DLT-GTTSEL: MASP A - CMLTD
```

```
;
```

dlt-gttset**Delete GTT Set**

Use this command to delete the specified global title translation set.

Keyword: **dlt-gttset**

Related Commands: **chg-gttset, chg-gttset, ent-gttset, rtrv-gttset**

Command Class: Database Administration

Parameters

:gttsn= (mandatory)

GTT set name. A GTT set is an entity to which global title addresses and selectors are assigned.

Range: *ayyyyyyy*

1 leading alphabetic and up to 8 following alphanumeric characters.

Example

dlt-gttset:gttsn=t800

Dependencies

The EGTT feature must be turned on before this command can be entered.

The **gttsn** parameter must be specified, cannot have a value of **none**, and must match an existing GTT set.

The specified GTT set cannot have any GTT selectors using it.

The specified GTT set cannot have the **gta**, **cgpc**, **cgssn**, or **opc** parameters assigned to it and cannot be used by any translation.

A GTT set cannot be deleted if it is being referenced by the SCCP Options table.

Notes

When the EGTT feature is turned on, the GTT Selector (**ent/chg/dlt/rtrv-gttset**), GTT Set (**ent/dlt/rtrv-gttset**), and GTA (**ent/chg/dlt/rtrv-gta**) commands replace the Translation Type (**ent/dlt/rtrv-tt**) and Global Title Translation (**ent/chg/dlt/rtrv-gtt**) commands. All data previously provisioned with these commands is maintained.

Output

dlt-gttset:gttsn=t800

rlghncxa03w 04-02-19 08:20:26 EST EAGLE 31.3.0

DLT-GTTSET: MASP A - CMLTD

;

dlt-gws-redirect**Delete Gateway Screening Redirect Command**

Use this command to delete the provisioning of the redirect function and subsequently to disable the gateway screening redirect function. After the gateway screening redirect function is disabled, you must use **ent-gws-redirect** to enable the function again.

Keyword: **dlt-gws-redirect**

Related Commands: **chg-gws-redirect, ent-gws-redirect,**

Command Class: Database Administration

Parameters

This command has no parameters.

Example

dlt-gws-redirect

Dependencies

The redirect function data that will be deleted (removed) with this command must exist in the database.

Notes

None

Output**dlt-gws-redirect**

```
rlghncxa03w 04-02-10 11:43:04 EST EAGLE 31.3.0
DLT-GWS-REDIRECT: MASP A - COMPLTD
;
```

dlt-home-smsc**Delete HOME SMSC Address**

Use this command to delete HOME SMSC specific addresses currently used to identify Short Message Service Centers in the database. This command updates the HOME SMSCADDR table.

Keyword: **dlt-home-smsc**

Related Commands: **ent-home-smsc**, **rtrv-home-smsc**

Command Class: Database Administration

Parameters

:smc= (mandatory)
Short Message Service Center address.
Range: 1-21 digits
1-21 hexadecimal digits

Example

dlt-home-smsc:smc=552611646

Dependencies

The Portability Check for Mobile Originated SMS (MNP SMS) feature must be enabled (**enable-home-smsc** command) before this command can be entered. (This controlled feature can be turned off with the **chg-ctrl-feat** command and the **dlt-home-smsc** command will still execute.)

The specified HOME SMSC address must exist in the HOME SMSCADDR table.

Notes

None

Output**dlt-home-smsc:smc=552611646**

```
rlghncxa03w 04-02-28 08:50:12 EST EAGLE 31.3.0
DLT-HOME-SMSC: MASP A - COMPLTD
;
```

dlt-homern**Delete Home Routing Number Prefix**

Use this command to delete a routing number prefix from the HOMERN table.

Keyword: **dlt-homern**

Related Commands: **ent-homern**, **rtrv-homern**

Command Class: Database Administration

Parameters

:rn= (mandatory)
The home routing number prefix
Range: 1-15 digits

Example

dlt-homern:rn=C441234

Dependencies

The INP feature or the G-Port feature must be turned on before this command can be entered.

The specified routing number must already exist in the HOMERN table.

A value of **none** cannot be specified for the **rn** parameter.

Notes

None

Output

```
dlt-homern:rn=C441234

rlghncxa03w 04-02-28 08:50:12 EST  EAGLE 31.3.0
HOMERN table is (1 of 100) 1% full
DLT-HOMERN: MASP A - COMPLTD

;
```

dlt-ip-host

Delete Internet Protocol Hostname

Use this command to delete entries from the IP Host table. The IP Host table defines the local and remote host names and their associated IP addresses.

Keyword: dlt-ip-host
Related Commands: ent-ip-host, rtrv-ip-host
Command Class: Database Administration

Parameters

:host= (mandatory)
Host name. This parameter identifies the logical name assigned to the host device.

Range: *////////////////////////////////////*
Any string of characters beginning with a letter and comprising up to 60 characters in length

Example

dlt-ip-host:host=gw100.nc.tekelec.com

Dependencies

Before an entry can be deleted from the IP host table, it must first be deleted from the IP Link table.

Before an entry can be deleted from the IP Host table, all application socket or association references to the hostname must be deleted.

Notes

None

Output

```

dlt-ip-host:host=gw100.nc.tekelec.com

rlghncxa03w 04-02-17 15:35:05 EST EAGLE 31.3.0
DLT-IP-HOST: MASP A - COMPLTD
;

```

dlt-ip-node**Delete IP Node**

Use this command to remove an IP node from the database that is directly connected to a TCP/IP data link used for the STP LAN feature. You can remove a particular connection, a particular application on a node, or an entire node.

Keyword: **dlt-ip-node**

Related Commands: **ent-ip-node**, **rtrv-ip-node**

Command Class: Database Administration

Parameters

:ipaddr= (mandatory)

The node's IP address. This is a TCP/IP address expressed in standard dot notation. IP addresses consist of the system's network number and the machine's unique host number. An example IP address is **192.126.100.5**, where **192.126.100** is the network number and **5** is the machine's host number.

Range: **1-223, 0-255**

4 numbers separated by dots

1-223—first number

0-255—the other three numbers

:force= (optional)

Whether or not to remove all applications associated with the node, thus removing the entire node from the database.

Range: **yes, no**

yes — Delete all connections to node

no — Delete specified application or connection

Default: **no**

:ipappl= (optional)

The IP application supported by the node.

Range: **stplan**

Default: Default value not given

:ipport= (optional)

The logical IP port that addresses the application on the node.

Range: **1024-5000**

Default: The logical IP port is not given.

:loc= (optional)

The card location as stenciled on the shelf of the system.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

Default: The card location is not given.

Example

To delete the connection for a TCP/IP link associated with an STPLAN on a specified location:

```
dlt-ip-node:ipaddr=193.4.201.50:ipappl=stplan:loc=1201
```

To delete the connection for a TCP/IP link associated with an IPPORT on a specified location:

```
dlt-ip-node:ipaddr=193.4.201.50:ipport=1024:loc=1201
```

To delete all connections for TCP/IP links associated with the STPLAN on all locations:

```
dlt-ip-node:ipaddr=193.4.201.50:ipappl=stplan
```

To delete the connection for TCP/IP links associated with an IPPORT:

```
dlt-ip-node:ipaddr=193.4.201.50:ipport=1024
```

To delete all connections for a TCP/IP link associated with any application on a specified location:

```
dlt-ip-node:ipaddr=193.4.201.50:loc=1201
```

To delete all connections for TCP/IP links associated with any application on any location:

```
dlt-ip-node:ipaddr=193.4.201.50:force=yes
```

Dependencies

The **force** parameter. must be specified to remove an entire node.

At least one of the following parameters must be specified: **ipappl**, **ipport**, **loc**, or **force=yes**.

If the **force=yes** parameter is specified, the **ipappl**, **ipport**, and **loc** parameters cannot be specified.

The **ipappl** and **ipport** parameters cannot be specified together in the command.

The ACM (shown by the entry ACMENET in the TYPE field in the **rtrv-card** command output) is the only valid card type for this command.

If the **loc** parameter is specified, the shelf and card must be equipped.

If the **loc** parameter is specified, the specified card must have a TCP/IP data link assigned to it.

If the **loc** parameter is specified, the IP port on the node must be assigned to the application for the specified TCP/IP data link.

If the **loc** and **ipaddr** parameters are specified, the specified IP address must match the IP address of the card location's remote IP node.

If the **loc** and **ipport** parameters are specified, the specified IP port must match the card location's remote IP port.

If the **loc** and **ipappl** parameters are specified, the specified IP application must match the card location's remote IP application.

The specified ACM (shown by the entry ACMENET in the TYPE field in the **rtrv-card** command output) must be out-of-service maintenance-disabled (OOS-MT-DSBLD). Enter the **rept-stat-card** command to verify the state of the ACM.

Notes

A particular application can be specified by giving either the application's name (**ipappl**) or its IP port (**ipport**) on the node.

Only Class A, Class B, and Class C IP addresses are supported by the STP LAN feature.

Output

```
dlt-ip-node:ipaddr=193.4.201.50:loc=1201

rlghncxa03w 04-02-10 11:43:04 EST EAGLE 31.3.0
Deleting multiple nodes on disk - please wait...
DLT-IP-NODE: MASP A - COMPLTD
;
```

dlt-ip-rte**Delete IP Route**

Use this command to delete a static IP route entry from the Static IP Route table (destination IP address, subnet mask, and gateway IP address) for the specified card.



CAUTION: The deletion of static IP routes can adversely affect IP connection oriented transports.

Keyword: **dlt-ip-rte**

Related Commands: **, rtrv-ip-lnk**

Command Class: Database Administration

Parameters

:dest= (mandatory)

Destination IP Address. The remote destination host or network destination IP Address that is to be removed.

Range: 4 numbers separated by dots, with each number in the range of **0–255**.
The IP address **0.0.0.0** is not valid.

:loc= (mandatory)

Card location. The unique identifier of a specific IP card in the system.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

:force= (optional)

A value of **yes** is required when the card is allowed and this command is to be completed.

Range: **yes, no**

Default: **no**

Example

```
dlt-ip-rte:loc=1301:dest=128.252.10.5
```

```
dlt-ip-rte:loc=1301:dest=128.252.10.5:force=yes
```

Dependencies

The **loc** parameter value must correspond to a DCM card or SSED CM card in the card table that is running the **ss7ipgw**, **ipgwi**, **iplim**, or **iplimi** application.

The specified destination IP address (**dest** parameter):

- Must not be the default route (0.0.0.0)
- Must not correspond to any loopback address (i.e. 127.X.X.X)

- Must not reside on this card's A or B network

The specified destination IP address must exist in the Static IP Route table.

The card in the location specified with the **loc** parameter should typically be inhibited for this command to complete successfully. The **force=yes** parameter is required when the card is allowed and the command is entered.

Notes

None

Output

dlt-ip-rte:loc=1301:dest=128.252.10.5

```
rlghncxa03w 04-02-17 15:35:05 EST EAGLE 31.3.0
DLT-IP-RTE: MASP A - COMPLTD
;
```

dlt-lbp

Delete Loopback Point

Use this command to delete one or all far-end loopback points maintained in the Link Fault Sectionalization table for testing data signaling link elements in a single CCS7 transmission path.

Keyword: dlt-lbp

Related Commands: act-lbp, chg-lbp, dact-lbp, ent-lbp, rtrv-lbp

Command Class: Database Administration

Parameters

:link= (mandatory)

SS7 signaling link. The SS7 signaling link that is to be tested.

Synonym: port

Range: a, b, a1-a31, b1-b31

Not all card types support all **link** parameter values.

See Table A-1 for valid **link** parameter range values for each type of card that can have assigned signaling link ports.

:loc= (mandatory)

Card location. The unique identifier of a the card containing the signaling link you want to use for loopback point testing.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

:all= (optional)

Deletes all loopback points for the specified signaling link or deletes only the link specified on the **lbp** parameter.

Range: yes

:lbp= (optional)

Loopback point ID. This parameter identifies a far-end loopback point that lies along an SS7 signaling link path between the STP and the target device (up to and including the target device).

Range: 1-32

Example

```
dlt - lbp: loc=1101: link=a: lbp=1
dlt - lbp: loc=1101: link=a: all=yes
```

Dependencies

At least one optional parameter must be specified.

The **lbp** parameter and the **all** parameter cannot be specified together in the command.

The Link Fault Sectionalization (LFS) feature must be on before this command can be entered.

The loopback point (LBP) must have been previously defined.

The card location (**loc** parameter) must identify a **limds0**, **limt1**, or **limch** (associated to a **limt1**) card configured with either an **ss7ansi** or **ccs7itu** application.

The card location specified in the **loc** parameter must be equipped.

The card location specified in the **loc** parameter cannot be reserved by the system

Notes

None

Output

```
dlt - lbp: loc=1101: link=a: lbp=1

rlghncxa03w 05-02-17 15:35:05 EST  EAGLE5 33.0.0
DLT-LBP: MASP A - COMPLTD
;
```

dlt-lnp-lrn**Delete LNP Location Routing Number**

Use this command to delete an existing location routing number (LRN) and its corresponding final overriding message relay global title translations from the database. You can delete an LRN only if it is not referenced by a 10-digit telephone number.

NOTE: This command is obsolete.

NOTE: If the LNP ELAP Configuration controlled feature is turned on, this command is no longer available. This function can be performed at the LSMS or using the ELAP user interface.

Keyword: dlt-lnp-lrn

Related Commands: chg-lnp-lrn, ent-lnp-lrn, rtrv-lnp-lrn

Command Class: LNP Database

Parameters

:lrn= (mandatory)

The location routing number.

Range: 10 digits
10 digits

:tt= (optional)

Translation type.

Range: 000-255

Default: delete all LRNs

Example

```
dlt-lnp-lrn:lrn=1234567890
```

```
dlt-lnp-lrn:lrn=1234567890:tt=16
```

Dependencies

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before this command can be entered.

Translation type (**tt** parameter) values cannot be specified that are associated with AIN, IN, PCS, LNPQS, or WNP LNP queries.

If the **tt** parameter is specified, then a single override translation is deleted.

In all cases, if an LRN is not referenced by a 10-digit TN, and the override translation being deleted is the last translation, then the entire LRN record is removed from the database. If the LRN is referenced by a 10-digit TN, the LRN cannot be removed.

When the **tt** parameter is specified, the TT service must be assigned to the LRN.

The TT must be reserved for LNP.

Notes

None

Output

```
dlt-lnp-lrn:lrn=1234567890
```

```
rlghncxa03w 04-02-18 08:50:12 EST EAGLE 31.3.0
DLT-LNP-LRN: MASP A - COMPLTD
```

```
;
```

dlt-lnp-npanxx**Delete LNP NPANXX**

Use this command to delete an LNP numbering plan area and exchange (NPANXX) and its associated LNP query or message relay default global title translations from the database.

NOTE: This command is obsolete.

NOTE: If the LNP ELAP Configuration controlled feature is turned on, this command is no longer available. This function can be performed at the LSMS or using the ELAP user interface.

Keyword: dlt-lnp-npanxx

Related Commands: chg-lnp-npanxx, ent-lnp-npanxx, rtrv-lnp-npanxx

Command Class: LNP Database

Parameters

:npanxx= (mandatory)
Numbering plan area.

:rmv= (optional)
Deletion type.
Range: all, alltt
Default: Removes all npanxx and all its translation types

:tt= (optional)
Translation type.
Range: 000-255

Default: All translation types

Example

```
dlt-lnp-npanxx:npanxx=001-010-100:tt=16
dlt-lnp-npanxx:npanxx=001-010-100:rmv=allttmr
dlt-lnp-npanxx:npanxx=001-010-100:rmv=all
```

Dependencies

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before this command can be entered.

Translation type (**tt** parameter) values cannot be specified that are associated with LNPQS, PCS, or WNP LNP queries.

Either all translation types can be deleted with one command (**rmv=alltt** parameter), or each translation type can be deleted individually (**tt** parameter).

Before a translation type (**tt** parameter) can be deleted, no translation type names (**ttn** parameter) can exist.

An NPANXX cannot be deleted until all of its translation types have been deleted.

If the **tt** parameter is specified, the corresponding default translation is removed only if the 10-digit ported translation type names for the NPANXX do not exist in the LNP database.

If the **rmv=alltt** parameter is specified, all default translations are removed only if the 10-digit ported directory numbers for this NPANXX do not exist in the LNP database.

Specifying the **rmv=alltt** parameter does not delete the NPANXX. Also, when the **tt** parameter is specified, you cannot delete the NPANXX.

Specifying the **rmv=all** parameter deletes the entire portable NPANXX record only if the 10-digit ported translation type numbers for this NPANXX do not exist and a telephone number-location routing number (TN-LRN) for this NPANXX does not exist.

When all 10-digit ported translation type numbers associated with this NPANXX are removed, the portable NPANXX can be removed either by specifying the **rmv=all** parameter or by not specifying any optional parameters.

This command can be entered several times for the same NPANXX to incrementally delete the default global title and eventually the NPANXX.

The **tt** and **rmv** parameters cannot be specified together in the same command.

The NPANXX must exist.

The NPANXX cannot be deleted if any associated 10-digit translation type numbers exist.

When the **tt** parameter is specified, the translation type must be assigned and must be a reserved service for LNP.

If message relay services exist, either the **tt** parameter or the **rmv** parameter must be specified.

When the **rmv=alltt** parameter is specified, at least one translation type must be assigned.

Notes

None

Output

```
dlt-lnp-npanxx:npanxx=001-010-100:tt=16

rlghncxa03w 04-02-18 08:50:12 EST EAGLE 31.3.0
DLT-LNP-NPANXX: MASP A - COMPLTD
;
```

dlt-lnp-serv**Delete LNP Service**

Use this command to delete from the database an LNP service or an alias translation type associated with an LNP service.

Keyword: **dlt-lnp-serv**

Related Commands: **chg-lnp-serv**, **ent-lnp-serv**, **rtrv-lnp-serv**

Command Class: Database Administration

Parameters

:serv= (mandatory)

Reserved service type name.

Range: **ain, in, pcs, wnp, class, lldb, cnam, isvm, lnpqs, wsmc, udf1, udf2, udf3, udf4**

:alias= (optional)

The alias translation type.

Range: **000-255**

Example

dlt-lnp-serv:serv=lldb

dlt-lnp-serv:serv=lldb:alias=236

Dependencies

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before the **dlt-lnp-serv** command can be entered.

The service type (**serv** parameter) must exist in the LNP database.

The service must not be referenced in the LNP database.

The **alias** that is specified must be associated with the LNP service that is specified in the command.

The value that is specified for the **alias** parameter must not already exist in the LNP database as a true translation type.

All aliases associated with the LNP service must be deleted before the service can be deleted.

Notes

When the LNP feature is on for up to 12 million TNs (see the **enable-ctrl-feat** command), the LNP services CLASS, CNAM, LIDB, and ISVM must be in the OAP configuration in the EAGLE 5 ISS database. You must update the OAP configuration (with the **act-oap-config** command) whenever you perform the following actions:

- Add LNP services to the database (with the **ent-lnp-serv** command).
- Remove services from the database (with the **dlt-lnp-serv** command).
- Change services (with the **chg-lnp-serv** command).

As a reminder, the following warning message is displayed:

CAUTION: LNP service TTs have changed, OAP configuration is required

Output

```

dlt-lnp-serv:serv=lidb
rlghncxa03w 02-11-29 16:40:40 EST EAGLE 30.0.0
DLT-LNP-SERV: MASP A - COMPLTD
Command Completed.
;

```

dlt-lnp-sp**Delete LNP Service Provider**

Use this command to remove an LNP service provider from the database.

NOTE: This command is obsolete.

NOTE: If the LNP ELAP Configuration controlled feature is turned on, this command is no longer available, and all LNP provisioning is performed at the LSMS.

Keyword: dlt-lnp-sp

Related Commands: ent-lnp-sp, rtrv-lnp-sp

Command Class: LNP Database

Parameters

:sp= (mandatory)
Service provider ID.
Range: xyyy
4 alphanumeric characters

Example

```
dlt-lnp-sp:sp=1234
```

Dependencies

The LNP feature must be turned **on** (see the **enable-ctrl-feat** command) before this command can be entered.

The service provider (**sp** parameter) must exist in the LNP database.

An LNP service provider cannot be deleted from the database if the service provider is referenced in the LNP database.

Notes

None

Output

```

dlt-lnp-sp:sp=1234

rlghncxa03w 04-01-05 16:40:40 EST EAGLE 31.3.0
DLT-LNP-SP: MASP A - COMPLTD
;

```

dlt-lnp-sub**Delete LNP 10-Digit Telephone Number
Subscription**

Use this command to remove the following items from the database: an LNP 10-digit ported telephone number (TN) message relay service, a pooled TN message relay service, an LRN, or the entire subscription.

NOTE: This command is obsolete.

NOTE: If the LNP ELAP Configuration controlled feature is turned on, this command is no longer available. This function can be performed at the LSMS or using the ELAP user interface.

Keyword: dlt-lnp-sub

Related Commands: chg-lnp-sub, ent-lnp-sub, rtrv-lnp-sub

Command Class: LNP Subscription

Parameters

:tn= (mandatory)

The telephone number.

Range: 10 digits

10 digits—To specify a single TN subscription

7 digits with 3 asterisks (***) appended—To pool a block of 1000 TNs

:rmv= (optional)

Deletion type.

Range: all, alltt, lrn

Default: Removes all LNP 10-digit ported telephone number (TN) message relay services and all their translation types

:tt= (optional)

Translation type.

Range: 000-255

Default: Delete all translation types

Example

```
dlt-lnp-sub:tn=1234567890
```

```
dlt-lnp-sub:tn=1234567890:rmv=alltt
```

```
dlt-lnp-sub:tn=1234567890:tt=16
```

```
dlt-lnp-sub:tn=1234567890:rmv=lrn
```

```
dlt-lnp-sub:tn=1234567890:rmv=all
```

```
dlt-lnp-sub:tn=1234567***
```

Dependencies

The LNP feature must be turned **on** (see the **enable-ctrl-feat** command) before this command can be entered.

For all cases, if the delete removes the last service (between message relay and LRN data), then the entire TN subscription is removed.

The **tt** and **rmv** parameters cannot be specified together in the command.

Translation type (**tt** parameter) values cannot be specified that are associated with AIN, IN, PCS, LNPQS, or WNP LNP queries.

If no options are specified, the default is to delete the entire TN subscription.

This command can be entered multiple times for the same TN to remove each TT.

The telephone number (**tn** parameter) range must not cross an NPANXX boundary.

The **tn** parameter value must exist or it must exist in a single range.

When the **rmv-lrn** parameter is specified, LRN must be assigned to the telephone number.

When the **tt** parameter is specified, the TT service must be assigned to the telephone number.

The translation type must be a reserved service for LNP.

If the **rmv=alltt** parameter is specified, the TT service must be assigned.

If message relay global title address with LRN is assigned to the telephone number, the message relay TT service must be deleted before the LRN can be removed.

Notes

The **rmv=alltt** parameter value is provided to remove all message relay translations and the entire TN subscription, if the LRN does not exist.

The **rmv=lrn** parameter option is provided to remove the LRN and the entire subscription, if message relay services (TT) do not exist.

The **rmv=all** parameter option is provided to remove the entire TN subscription record, including LRN and all message relay services.

The **tt** parameter is provided to delete a single message relay translation type, or to delete the entire TN subscription, if the LRN does not exist and **tt** is the last translation assigned.

Output

dlt - lnp - sub : tn=1234567890

```
rlghncxa03w 04-02-18 08:50:12 EST EAGLE 31.3.0
DLT-LNP-SUB: MASP A - COMPLTD
```

;

dlt-ls

Delete Linkset

Use this command to remove a linkset from the system database. A linkset is a group of signaling links carrying traffic to the same signaling point.

Keyword: **dlt-ls**

Related Commands: **chg-l3t, ent-ls, rept-stat-ls, rtrv-ls**

Command Class: Database Administration

Parameters

:lsn= (mandatory)

Linkset name. This parameter specifies the name of the linkset. Only one linkset name per command can be specified.

Range: *ayyyyyyyyy*
1 alphabetic character followed by up to 9 alphanumeric characters

Example

dlt - ls : lsn=lsna

Dependencies

The linkset must be in the database.

The linkset can be removed only if all links associated with the linkset have been removed.

The linkset can be removed only if the linkset is not referenced by any routeset.

The specified linkset cannot be deleted if it has or is a mate linkset.

A gateway linkset can be deleted only from a SEAS terminal, and not from a system terminal.

The linkset cannot be deleted if an SAPC entry is present for the linkset.

The linkset cannot be deleted if it is used by an exception route.

Notes

When a linkset is removed from the system database, the related entries are removed automatically from the translation type mapping table.

Output

```
dlt-ls:lsn=lsna
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
Link set table is (114 of 1024) 11% full
DLT-LS: MASP A - COMPLTD
;
```

dlt-map**Delete Mate Applications**

Use this command to remove mate application entries or groups. This command removes one or more entries from the remote point code subsystem number table.

Keyword: dlt-map

Related Commands: chg-map, ent-map, rtrv-map

Command Class: Database Administration

Parameters

At least one of these parameters must be specified: **all**, **ssn**.

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:pc= (mandatory)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: pca

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001-005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006-255**.

The point code **000-000-000** is not a valid point code.

:pc/pca/pci/pcn/pcn24= (mandatory)

Post-GTT-translated point code.

:pci= (mandatory)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*)

Range: s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

:pcn= (mandatory)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmt** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:pcn24= (mandatory)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

:all= (optional)

This parameter must be specified to remove all subsystem numbers associated with this point code. If this parameter is not specified, only the specified subsystem number is removed.

Range: **yes, no**

Default: **no**

:mapset= (optional)

The MAP set ID.

This parameter is mandatory if the Flexible GTT Load Sharing feature is enabled.

Range: **1-36000 dflt**

dflt—Default MAP set

Default: **dflt** - If the Flexible GTT Load Sharing feature is not enabled, the default value of the **mapset** parameter is **dflt**.

:ssn= (optional)

Subsystem Number.

Range: **2-255**

Default: The specified subsystem number is removed for the given point code.

Example

The following example deletes the single entry PC 1-1-1 with an SSN value of 123 from its mated group. If this is the last entry in the group then the PC is also deleted from the MAP tables:

dlt-map:pc=1-1-1: ssn=123

The following example deletes each entry of PC 1-1-1 and all SSNs associated with the PC from each of the PC/SSN mated groups. The PC is also deleted from the MAP tables:

dlt-map:pc=1-1-1:all=yes

The following command deletes subsystem 10 associated with spare PC 1-1-0 from the MAP table.

dlt-map:pci=s-1-1-0:ssn=10

The following example deletes subsystem 10 associated with PC 1-1-1 in MAP set 362.

dlt-map:pc=1-1-1:ssn=10:mapset=362

The following example deletes PC 1-1-1 along with all the subsystems associated with this PC in MAP set 362.

dlt-map:pc=1-1-1:all=yes:mapset=362

The following example deletes PC 1-1-2 along with all the subsystems associated with this PC in the default MAP set.

dlt-map:pc=1-1-2:all=yes:mapset=dflt

Dependencies

Either the **ssn** parameter or the **all** parameter can be specified, but not both.

If the **all=yes** parameter is specified, all SSNs for the given PC are removed.

The DPC of the primary subsystem must be a full PC.

The specified remote PC must exist in the MAP table.

The specified SSN must exist in the MAP table entity set associated with the specified remote PC.

The STP true PC assigned to an INP, LNP, or EIR subsystem cannot be deleted.

If the **pcn** parameter is specified, the format of the PC must match the format that was assigned with the **chg-stpopts:npcfmti** parameter.

If the Flexible GTT Load Sharing feature is not enabled, the **mapset** parameter must not be specified.

If the Flexible GTT Load Sharing feature is enabled, the **mapset** parameter must be specified.

The specified MAP set must exist in the database.

The specified PC/SSN/MAP set must already be provisioned in the MAP table.

If the **pc** and **mapset** parameters are specified, and the **all=yes** parameter is specified, then at least one entry for that PC/MAP set must exist in the MAP table.

If the **mapset** parameter is specified as having any value other than **dflt**, then the PC/SSN/MAP set must not be referenced from the GTT, GSM-MAP Opcode or GSM MAP Screening table entry.

Notes

In this command, only ITU-international and ITU national PCs support the spare point code subtype prefix (s-).

When the Flexible GTT Load Sharing feature is on, MAP load sharing sets are supported.

Output

dlt-map:pc=1-1-0:ssn=10:mapset=362

tekelecstp 06-05-27 11:11:12 EST EAGLE 35.0.0

DLT-MAP: MASP A - COMPLTD

;

dlt-mrn

Delete Mated Relay Node

Use this command to delete entries from the MRN table. A single command can delete one point code from the group, or delete the entire group.

Keyword: dlt-mrn

Related Commands: chg-mrn, ent-mrn, rtrv-mrn

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:all= (optional)

This parameter is used to delete the entire group of point codes that contains the specified point code in the MRN table.

Range: **yes**

:mrnset= (optional)

The MRN set ID.

Range: **1-3000 dflt**
 dflt—Default MRN set.

:pc= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: **pca**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001–005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006–255**.

The point code **000-000-000** is not a valid point code.

:pc/pca/pci/pcn/pcn24= (optional)

Post-GTT-translated point code.

:pc1= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: **pca1**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001–005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006–255**.

The point code **000-000-000** is not a valid point code.

The asterisk (*) value is not valid for the *ni* subfield.

:pc1/pca1/pci1/pcn1/pcn241= (optional)

Alternate post-GTT-translated point code.

:pc2= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: **pca2**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001–005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006–255**.

The point code **000-000-000** is not a valid point code.

:pc2/pca2/pci2/pcn2/pcn242= (optional)

Alternate post-GTT-translated point code.

:pc3= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: **pca3**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001–005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006–255**.

The point code **000-000-000** is not a valid point code.

:pc3/pca3/pci3/pcn3/pcn243= (optional)

Post-GTT-translated point code.

:pc4= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: **pca4**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001–005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006–255**.

The point code **000-000-000** is not a valid point code.

:pc4/pca4/pci4/pcn4/pcn244= (optional)

Alternate post-GTT-translated point code.

:pci= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*)

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:pci1= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*)

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:pci2= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*)

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:pci3= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*)

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:pci4= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*)

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:pcn= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:pcn1= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:pcn2= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:pcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000–255**

ssa—**000–255**

sp—**000–255**

:pcn241= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000–255**

ssa—**000–255**

sp—**000–255**

:pcn242= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000–255**

ssa—**000–255**

sp—**000–255**

:pcn243= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000–255**

ssa—**000–255**

sp—**000–255**

:pcn244= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000–255**

ssa—**000–255**

sp—**000–255**

:pcn3= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-*

m2-m3-m4-gc). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:pcn4= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmt** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

Example

The following example deletes the entire entry for the specified point code (the point code plus all of its associated point codes).

dlt-mrn:pc=1-1-0

The following example finds point codes 1-1-0 and 1-1-1, and deletes them from the group that contains them in the MRN table.

dlt-mrn:pc=1-1-0:pc1=1-1-1

The following example deletes from the MRN table the entire group of point codes that contains the specified point code.

dlt-mrn:pc=1-1-0:all=yes

The following examples include spare point codes.

dlt-mrn:pci=s-2-2-1

dlt-mrn:pcn=s-1-1-1-0235-aa

dlt-mrn:pc=1-1-9:mrnset=dflt

dlt-mrn:pc=1-1-9:mrnset=111

dlt-mrn:pc=1-1-1:pc1=1-1-9:mrnset=111

dlt-mrn:pc=1-1-9:All=yes:mrnset=111

Dependencies

At least one optional parameter must be specified.

Point codes must be the format set by the **npcfmt** parameter of the **chg-stpopts** command. (Use the **rtv-stpopts** command to display the STP option settings.)

A point code that is specified in the command must already exist in the MRN table.

One or more point codes in a group cannot be deleted if the deletion leaves only one point code remaining in the group. If one point code would remain in a group, then the entire group of point codes must be deleted.

The **mrnset** parameter can only be specified when the Flexible GTT Load Sharing feature is enabled.

If the Flexible GTT Load Sharing feature is enabled, then the specified PC must already exist in the specified MRN set.

The specified MRN set must already exist in the MRN table.

A specified MRN set or a PC in a MRN set cannot be deleted if it is referred to in the GTT2 table.

The **rtrv-gtt** and **rtrv-gta** commands can be used to display GT Translations.

Notes

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-).

The Flexible GTT Load Sharing feature and the Intermediate GTT Load Sharing feature used together support MRN sets for flexible intermediate GTT load sharing.

Output

```
dlt-mrn:pc=1-1-1:mrnset=111
tekelecstp 05-05-17 10:19:51 EST EAGLE 34.2.0
DLT-MRN : MASP A - COMPLTD
;
```

dlt-na

Delete Network Appearance

Use this command to delete a previously defined network appearance.

Keyword: **dlt-na**

Related Commands: **ent-na**, **rtrv-na**

Command Class: Database Administration

Parameters

:na= (mandatory)

Network appearance.

Range: **0-4294967295**

:type= (mandatory)

Type of the network appearance to be deleted.

Range: **ansi, itui, ituis, itun, ituns, itun24**

:gc= (optional)

Group Code of the network appearance.

Range: **yy**

2 alphabetic characters; valid values are **aa-zz**

Example

```
dlt-na:type=ansi:na=10
dlt-na:type=itui:na=11
dlt-na:type=itun:na=10
dlt-na:type=itun:na=11:gc=fr
dlt-na:type=ituis:na=4
```

Dependencies

Group Code (**gc**) is not allowed with network types **ansi** , **itui**, **ituis**, and **itun24**.

The specified network appearance must exist in the Network Appearance table

Notes

The ITUDUPPC feature must be turned on before a group code can be deleted for an ITU-N network type

Output

dlt-na:pstncat=5000:pstnid=1:force=yes

```
rlghncxa03w 04-02-20 09:07:58 EST EAGLE 31.3.0
DLT-NA: MASP A - COMPLTD
;
```

dlt-prefix

Delete Prefix

Use this command to delete a prefix based on the name of the feature, its prefix, and its prefix number.

Keyword: **dlt-prefix**

Related Commands: **chg-prefix**, **rtrv-ctrl-feat**, **rtrv-prefix**

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:feature= (mandatory)

Feature Name. This parameter specifies the name of an enabled controlled feature that is supported by this command. The parameter value must match the feature name as it is displayed in the **rtrv-ctrl-feat** command output.

Range: *abcdefghijklmnopqrstuvwxyz*

1 alphabetic character and up to 24 optional alphanumeric characters and spaces, enclosed in double quotation marks.

The parameter value is not case-sensitive; upper case or lower case or both can be entered.

Part or all of the feature name can be entered. If part of the feature name is specified, the entry must start with the first letter of the name, and must contain enough of the name to uniquely identify the feature. For example, there are two feature names that begin with "GSM MAP." Enter enough additional characters to identify which GSM MAP feature is being entered (at least "GSM MAP SR" to identify the "GSM MAP SRI Redirect" feature). This command supports the following controlled features:

- GSM MAP SRI Redirect
- ISUP NP for EPAP
- Prepaid IDP Query Relay

:prefix= (mandatory)

Prefix Value.

Range: 1-15 digits

1-15 hexadecimal digits; valid digits are **0-9**, **a-f**, **A-F**.

Default: Current value

:prefixnum= (mandatory)

Prefix Number. The prefix number identifies the prefix value to use for the specified feature name.

Range: 1-7

1-3 for GSM MAP SRI Redirect feature prefix values

1-5 for ISUP NP with EPAP feature prefix values

6 for the ISUP NP with EPAP feature Insertion Country Code

7 for the ISUP NP with EPAP feature Deletion Condition value

1 for the Prepaid IDP Query Relay International Insert Prefix

2 for the Prepaid IDP Query Relay National Insert Prefix

3 for the Prepaid IDP Query Relay Outgoing CDPN NAI

4 for the Prepaid IDP Query Relay CGPA DEF CC Check

Default: Current value

Example

Delete a prefix with prefix number 1 for the ISUP NP with EPAP feature.

dlt-prefix:feature="isup np with epap":prefix=1004:prefixnum=1

Delete a prefix with prefix number 2 and specify part of the GSM MAP SRI Redirect feature name.

dlt-prefix:feature="GSM MAP SRI":prefix=104:prefixnum=2

Dependencies

The specified feature name must be the name of an enabled controlled feature as it is displayed in the **rtrv-ctrl-feat** command output. The specified feature must be one of the following features that are supported by this command:

- GSM MAP SRI Redirect
- ISUP NP for EPAP
- Prepaid IDP Query Relay

The specified feature prefix value must already exist in the database.

The specified feature prefix value must be used by the specified feature in the database.

Notes

None

Output

dlt-prefix:feature="isup np with epap":prefix=1004:prefixnum=1

```
rlghncxa03w 04-09-20 09:04:14 EST EAGLE 31.11.0
DLT-PREFIX: MASP A - COMPLTD
```

;

dlt-pstn-pres

Delete PSTN Presentation

Use this command to delete a previously defined Public Switched Telephone Network (PSTN) presentation value.

Keyword: dlt-pstn-pres

Related Commands: ent-pstn-pres, rtrv-pstn-pres

Command Class: Database Administration

Parameters**:force=** (mandatory)The **force=yes** parameter must be specified to delete the PSTN presentation value.**Range:** **no, yes****:pstncat=** (mandatory)

PSTN category identifying the new Variant being defined.

Range: **0-65535****:pstnid=** (mandatory)

PSTN ID identifying the new Variant being defined.

Range: **0-65535****Example****dlt-pstn-pres:pstncat=5000:pstndesc="Mexican ISUP v1.8"****Dependencies**

The ISUP Normalization controlled feature must be enabled.

A controlled feature must exist for the **pstncat** and **pstnid** parameter combination.You cannot delete the PSTN presentation value with parameters **pstncat=1** and **pstnid=2**.The PSTN must have been previously defined with the **ent-pstn-pres** command.**Notes**The IP⁷ SG uses the PSTN presentation value, consisting of a PSTN category and a PSTN ID, to uniquely define an ISUP Variant.Use the **rtrv-pstn-pres** command to display the **only** allowed values for the PSTN category and ID being deleted.

The entry in the ISUP Variant table associated with the deleted PSTN will be marked as available.

The **dlt-pstn-pres** command causes all the ISUP parameters provisioned for the Variant with the **chg-isupvar-attrib** command to be deleted.Deleting the PSTN presentation value may cause a loss of traffic if SS7IP routing keys exist using that PSTN value. The user should use caution when performing this action. The user will also be required to use the **force** parameter.**Output**

```

dlt-pstn-pres:pstncat=5000:pstnid=1:force=yes
rlghncxa03w 04-01-07 11:43:04 EST  EAGLE 31.3.0
DLT-PSTN-PRES: MASP A - COMPLTD
;

```

dlt-rmt-appl**Delete Remote Application**

Use this command to remove remote application assignments from the database.

Keyword: **dlt-rmt-appl****Related Commands:** **ent-rmt-appl, rtrv-rmt-appl****Command Class:** Database Administration

Parameters

:ipc= (mandatory)

ANSI point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*). The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: ipca

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:ipc/ipca/ipci/ipcn/ipcn24= (mandatory)

End node's internal point code.

:ipci= (mandatory)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:ipcn= (mandatory)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:ipcn24= (mandatory)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* indicates a private point code (*prefix-msa-ssa-sp*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**
msa—**000–255**
ssa—**000–255**
sp—**000–255**

:si= (mandatory)

Service indicator value that designates which user part is assigned to IPC.

Range: **3-15**

:ssn= (optional)

SCCP subsystem number. Valid only if **si=3**. Use **ssn** as the starting value of the range if **ssne** is specified.

Range: **0-255**

:ssne= (optional)

Specifies the end range of subsystem number.

Range: **0-255**

Example

dlt-rmt-appl:ipc=0-0-1:si=3:ssn=5

dlt-rmt-appl:ipc=0-0-1:si=5

dlt-rmt-appl:ipcn24=1-100-1:si=5

dlt-rmt-appl:ipci=ps-2-2-2:si=5

Dependencies

Partial point codes are not allowed.

The **ssn** parameter is required if **si=3**.

The **ssn** and **ssne** parameters are not allowed unless **si=3**.

The **ssne** parameter value must be greater than the **ssn** parameter value.

The specified **ipc** must be previously defined in the Destination table.

The new entry cannot conflict with an existing entry.

The **ipc**, **si**, and **ssn...ssne** parameter values must all match a value in the Destination table.

Notes

To specify a range of subsystem numbers, specify the **ssn** parameter value as the start of the range and the **ssne** parameter value as the end of the range.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (**s-**) and the private and spare point code subtype prefix (**ps-**). All of the point code types support the private (internal) point code subtype prefix (**p-**).

Output

```
dlt-rmt-appl:ipc=0-0-1:si=3:ssn=5
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
DLT-RMT-APPL: MASP A - COMPLTD
;
```

dlt-rte

Delete Route

Use this command to remove either a single route or all routes from the system database.

Keyword: dlt-rte

Related Commands: ent-rte, rept-stat-dstn, rtrv-rte

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

At least one of the following optional parameters must be specified: **dpc/dpca/dpci/dpcn/dpcn24**, **cic**, **ilsn**, **si**.

:dpc= (mandatory)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: dpca

Range: p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001-005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006-255.

The point code 000-000-000 is not a valid point code.

:dpc/dpca/dpci/dpcn/dpcn24= (mandatory)

Destination point code.

:dpci= (mandatory)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: s-, p-, ps-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps-

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

:dpcn= (mandatory)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: s-, p-, ps-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps-

nnnnn—0-16383

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:dpcn24= (mandatory)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*. The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:all= (optional)

This parameter removes all destinations from the system database.

Range: **yes, no**

Default: **no**

:lsn= (optional)

Linkset name. This parameter specifies the name of the linkset associated with the route.

NOTE: This parameter must be specified when the all parameter is not specified, and cannot be specified when the all=yes parameter is specified.

Range: *ayyyyyyyyy*

1 alphabetic character followed by 9 alphanumeric characters

Default: No linkset name is specified

Example

Delete route to dpc 1-1-1 using linkset hq435326:

dlt-rte:dpc=1-1-1:lsn=hq435326

Delete all routes to dpc 2-2-2:

dlt-rte:dpc=2-2-2:all=yes

Delete all routes to dpc 21-*-*:

dlt-rte:dpc=21-*-*:all=yes

Delete route to dpcn=3-15-15-15-sp using link e1m2itun:

dlt-rte:dpcn=3-15-15-15-sp:lsn=e1m2itun

Delete route for dpcn24=10-100-14 using linkset we123624:

dlt-rte:dpcn24=10-100-14:lsn=we123624:rc=10

Delete route to private point code dpc=p-1-1-1 using linkset hq325426:

dlt-rte:dpc=p-1-1-1:lsn=hq325426

Delete all routes to private point code dpc=p-21-*-*:

dlt-rte:dpc=p-21-*-*:all=yes

Delete route to spare point code dpci=s-1-100-1 using linkset we123624:

dlt-rte:dpci=s-1-100-1:lsn=we123624

Dependencies

At least one optional parameter must be specified.

The DPC must be in the database.

If the **lsn** parameter is specified, the linkset must be defined as a route.

The **lsn** parameter cannot be specified with the **all=yes** parameter.

If the **all=no** parameter is specified, the **lsn** parameter must be specified.

The destination point code of a route must be a full point code (*ni-nc-ncm*) or a cluster point code (*ni-nc-**).

If the specified destination address is a full point code address (*ni-nc-ncm*) and is a member of a provisioned cluster (**ni-nc-***), whether the ordered routes can be deleted is determined by the destination address's NCAI (nested cluster allowed indicator). The NCAI (**ncai=yes/no**) is set with the **ncai** parameter of the **ent/chg-dstn** commands:

- If the NCAI is set to **no**, the ordered route cannot be deleted.
- If the NCAI is set to **yes**, then the destination address is a member of a provisioned nested cluster where the ordered routes of the provisioned members can be deleted. Deletion of the ordered routes of a provisioned member results in the provisioned member assuming the attributes of its cluster.

If the specified destination address is a network cluster address (**ni-nc-***), how the specified ordered route attributes are deleted is determined by the setting of the destination address's NCAI (nested cluster allowed indicator). The NCAI is set (**ncai=yes/no**) with the **ncai** parameter of the **ent/chg-dstn** commands.

- If the NCAI is set to **no**, the specified ordered route is deleted for each signaling point code having the same network identifier (NI) and network cluster (NC) codes.
- If the NCAI is set to **yes**, then the specified destination is a nested cluster where deletion of the cluster route will not delete the ordered route of the provisioned member.

If the **dpcn** parameter is specified, the format of the point code(s) must match the format you assigned with the **chg-stpopts:npcfmti** parameter.

The last route for the specified DPC being removed cannot be referenced by an X.25 route, a mated application, or a concerned signaling point code, depending on the feature configuration. If this route is removed and any of these references exist, those references will not be valid.

The last route to a destination referenced by an X.25 route cannot be deleted.

The last route to a destination referenced by the redirect function destination parameter cannot be deleted.

The last route to a destination point code that still exists in the Mated Node Relay (MRN) table cannot be deleted until the point code is deleted from the MRN table.

The last route to a destination point code that still exists in the Concerned Secondary Point Code (CSPC) table cannot be deleted until the point code is deleted from the CSPC table.

If a route to a destination in use by a GTT is the last route to that destination, the route cannot be deleted until one of the following actions is performed:

- Delete the GTT using the route's destination
- Change the route used by the GTT to a route using a different destination
- Add another route using the same destination

Network routing is only valid if the NRT feature is on. The NRT feature is turned on with the **chg-feat** command.

When using network routing, if the destination point code has a value of * in the *nc* field, the *ncm* field must also be * (for example, **dpc=21-*-***).

If all routes are to be deleted in a routeset, the routeset must not be empty.

The last route to a destination that contains exception routes cannot be deleted.

Notes

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (**s-**) and the private and spare point code subtype prefix (**ps-**). All of the point code types support the private (internal) point code subtype prefix (**p-**).

Output

dlt-rte:dpc=1-1-1:lsn=ls01

```
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
DLT-RTE: MASP A - COMPLTD
```

;

In the following example, the GTT and X.25 Gateway features are turned on.

dlt-rte:dpc=2-2-2:all=yes

```
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
WARNING - ROUTE MAY BE REFERENCED BY MAP, CSPC, OR X25 RTE.
DLT-RTE: MASP A - COMPLTD
```

;

In the following example, only the GTT feature is turned on.

dlt-rte:dpc=2-2-2:all=yes

```
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
WARNING - ROUTE MAY BE REFERENCED BY MAP OR CSPC.
DLT-RTE: MASP A - COMPLTD
```

;

In the following example, only the X.25 Gateway feature is turned on.

dlt-rte:dpc=2-2-2:all=yes

```
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
WARNING - ROUTE MAY BE REFERENCED BY X25 RTE.
DLT-RTE: MASP A - COMPLTD
```

;

dlt-rtx

Delete Exception Route

Use this command to delete an exception route entry. When parameters **all=yes** and **force=yes** are specified, all exception route entries associated with the destination point code are deleted.

Keyword: dlt-rtx

Related Commands: chg-rtx, ent-rtx, rtrv-rtx

Command Class: Database Administration

Parameters

:dpc= (mandatory)

ANSI destination point code with subfields *network indicator-network-cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Range: p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:dpci= (mandatory)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:dpcn= (mandatory)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:dpcn24= (mandatory)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:all= (optional)

Use the **all=yes** parameter with the **force=yes** parameter to delete all exception route entries associated with the DPC.

Range: **yes**

:cic= (optional)

Starting Circuit Identification Code. This parameter is used alone or together with the **ecic** parameter as exception routing criteria for the specified exception route.

Range: 0-16383

:ecic= (optional)

Ending Circuit Identification Code. This parameter, together with the **cic** parameter defines the CIC range that is used as exception routing criteria for the specified exception route.

Range: 16383

:force= (optional)

The **force** parameter is used with the **all=yes** parameter to delete all exception routes for the specified DPC.

Range: yes

:ilsn= (optional)

Incoming Link Set Name. This parameter contains the name of the originating linkset. The parameter value is used as part of the exception routing criteria for the specified exception route.

Range: ayyyyyyyyy

1 alphabetic character followed by up to 9 alphanumeric characters.

:lsn= (optional)

Linkset Name. This parameter provides the name of the linkset associated with the specified exception route.

Range: ayyyyyyyyy

1 alphabetic character followed by up to 9 alphanumeric characters.

:opc= (optional)

ANSI origination point code with subfields *network indicator-network-cluster-network cluster member* (*ni-nc-ncm*). The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Range: p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001-005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006-255.

The point code 000-000-000 is not a valid point code.

:opci= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: s-, p-, ps-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps-

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

:opcni= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-*

m2-m3-m4-gc). The prefix subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:opc24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:si= (optional)

Service Indicator. This parameter is used as part of the exception routing criteria for the specified exception route.

Range: **3-15**

Example

dlt-rtx:dpca=1-1-1:opc:2-3-3:lsn=lset1

dlt-rtx:dpca=1-2-1:si=3:lsn=lset2

dlt-rtx:dpca=1-3-1:ilsn=lset2:lsn=lset3

dlt-rtx:dpci=2-100-1:ilsn=lset2:lsn=lset4

dlt-rtx:dpci=2-100-1:si=5:lsn=lset5

dlt-rtx:dpci=2-100-1:si=6:all=yes:force=yes

dlt-rtx:dpci=2-100-1:opc=8-*-*:all=yes:force=yes

Dependencies

Only one of the **opc**, **ilsn**, **cic**, or **si** parameters can be specified for an exception route entry.

The **lsn** parameter must be specified if the **all** parameter is not specified.

If the **ecic** parameter is specified, the **cic** parameter must also be specified.

The **ecic** parameter value cannot be less than the **cic** parameter value.

The **opc** parameter value cannot be the same as the **dpc** parameter value.

The Origin-Based MTP Routing feature must be enabled and turned on before this command can be entered.

The linkset name, as defined by the **ilsn** or **lsn** parameter, must exist.

The specified combination of exception route parameter conditions must exist.

The **lsn** parameter cannot be specified if the **all=yes** parameter is specified.

To delete all exception routes for DPC per criteria, specify the **force=yes** and **all=yes** parameters.

Output

Delete a specific exception route.

```
dlt-rtx:dPCA=1-3-1:ilsn=lset2:lsn=lset3
stdcfg2b 06-05-19 18:20:11 EST EAGLE 35.0.0
DLT-RTX: MASP A - COMPLTD
```

Delete all exception routes for a specific exception criteria.

```
dlt-rtx:dpci=2-100-2:opc=8-*-*:all=yes:force=yes
stdcfg2b 06-05-19 18:20:11 EST EAGLE 35.0.0
DLT-RTX: MASP A - COMPLTD
```

dlt-sccp-serv

Delete SCCP Service

Use this command to remove entries from the SCCP Service table. The command may either remove a PC from a group or remove the entire group.

Keyword: dlt-sccp-serv

Related Commands: chg-sccp-serv, rtrv-sccp-serv

Command Class: Basic

Parameters

:serv= (mandatory)

The name of the service being deleted.

Range: gflex, gport

:all= (optional)

Deletes all point codes from a service.

Range: no, yes

:pc1= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001-005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006-255**.

The point code **000-000-000** is not a valid point code.

:pc1/pca1/pci1/pcn1/pcn241= (optional)

Post GTT-translated point code 1.

:pc2= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: pca2

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001-005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006–255**.

The point code **000-000-000** is not a valid point code.

:pc2/pca2/pci2/pcn2/pcn242= (optional)

Post GTT-translated point code 2.

:pc3= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: **pca3**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001–005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006–255**.

The point code **000-000-000** is not a valid point code.

:pc3/pca3/pci3/pcn3/pcn243= (optional)

Post GTT-translated point code 3.

:pc4= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001–005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006–255**.

The point code **000-000-000** is not a valid point code.

:pc4/pca4/pci4/pcn4/pcn244= (optional)

Post GTT-translated point code 4.

:pci1= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

:pci2= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

:pci3= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

:pci4= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

:pcn1= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: s-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:pcn2= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:pcn241= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:pcn242= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:pcn243= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:pcn244= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000–255**

ssa—**000–255**

sp—**000–255**

:pcn3= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfnti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:pcn4= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfnti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

Example

To delete a specified PC from the G-Port service:

dlt-sccp-serv:serv=gport:pca2=3-3-3

To delete all PCs from the G-Port service and to specify a network PC to delete:

dlt-sccp-serv:serv=gport:all=yes:pca1=1-1-1

Dependencies

At least one PC must be specified.

The specified PC must already exist in the SCCP Service table.

Notes

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (**s-**).

Output

```
dlt-sccp-serv:serv=gport:pca2=3-3-3
tekelecstp 05-12-20 08:54:59 EST EAGLE 35.0.0
DLT-SCCP-SRV: MASP A - COMPLTD
;
```

dlt-scr-aftpc

Delete Allowed Affected Point Code

Use this command to remove a specific screening reference in the allowed affected point code category.

Keyword: dlt-scr-aftpc

Related Commands: chg-scr-aftpc, ent-scr-aftpc, rtrv-scr-aftpc

Command Class: Database Administration

Parameters

:sr= (mandatory)

Screening reference. This parameter specifies the point code's unique screening reference name.

Range: ayy

1 alphabetic character followed by up to 3 alphanumeric characters

:ssn= (mandatory)

The subsystem number. An asterisk (*) indicates the full range of values from 1-255.

Range: 1-255 *

:area= (optional)

The ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from 000-255.

Range: 000-255 *

:id= (optional)

The ITU international ID. The parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from 0-7.

Range: 0-7 *

:msa= (optional)

The 24-bit ITU-national main signaling area (*msa*) value. It specifies the *msa* of the point code *msa-ssa-sp*. An asterisk (*) indicates the full range of values from 000-255.

Range: 000-255 *

:nc= (optional)

The network cluster (*nc*) value. This parameter specifies one or more *nc* values for the network indicator (*ni*) and network cluster member (*ncm*) values specified in the **ni** and **ncm** parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*. You can specify a single value or a range of values. An asterisk (*) indicates the full range of values from 000-255.

Range: 000-255 *

:ncm= (optional)

The network cluster member (*ncm*) value. This parameter specifies one or more **ncm** values for the network indicator (*ni*) and network cluster (*nc*) values identified in the **ni** and **nc** parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*. You can specify a single value or a range of values. An asterisk (*) indicates the full range of values from 000-255.

Range: 0-255 *

:ni= (optional)

The network indicator (*ni*) value. This parameter specifies one or more *ni* values for the network cluster (*nc*) and network cluster member (*ncm*) values identified in the **nc** and **ncm** parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*. You can specify a single value or a range of values. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 ***

:npc= (optional)

The ITU national point code. An asterisk (*) indicates the full range of values from **00000–16383**.

Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see “Converting ITU National Point Code Formats” in Appendix A for information on converting the point code format.

Range: **00000-16383 ***

:pcst= (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range: **none, s**

Default: **none**

:sp= (optional)

The 24-bit ITU national signaling point. This parameter specifies the signaling point (*sp*) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:ssa= (optional)

The 24-bit ITU national sub signaling area. This parameter specifies the sub signaling area (*ssa*) in the point code represented by the format *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:zone= (optional)

The ITU international zone. The parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7, ***

Example

dlt-scr-aftpc:sr=iec:ni=240:nc=010:ncm=010:ssn=012

dlt-scr-aftpc:sr=aft1:zone=1:area=2:id=3:ssn=1:pcst=s

Dependencies

A complete point code must be specified, and must be one, and only one of the four point code parameter combinations: **ni-nc-ncm**; **zone-area-id**; **msa-ssa-sp**; or **npc**.

The affected point code or point code range (given by **ni-nc-ncm/ssn** or **zone-area-id** or **msa-ssa-sp** or **npc**) to be removed from the table must already exist in the screening reference.

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

If asterisk values are specified, the range cannot overlap or contain any of the point code ranges that already exist in the allowed affected point code screening category.

If **zone=*** is specified, **area=*** and **id=*** must be specified.

If **area=*** is specified, **id=*** must be specified.

If **ssa=*** is specified, **sp=*** must be specified.

If **msa=*** is specified, **ssa=*** and **sp=*** must be specified.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc** parameter is specified as an asterisk (**nc=***), the **ncm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **ncm** parameter is specified as a single value, or a range other than the full range of **000–255**, the **ni** and the **nc** parameters must be specified with a single value.

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range **000–255**.

The character **c** is not a valid value for the **ni**, **nc**, **ncm**, **zone**, **area**, **id**, **msa**, **ssa**, **sp**, and **npc** parameters.

The specified screening reference (**sr**) must already exist in the database.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The spare point code subtype prefix (**s-**) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** parameter cannot be specified for ANSI and ITU-N24 point codes.

No AFTPC screening reference (**sr**) can be deleted that is referenced by an entity in another screening set.

You cannot remove the **sr**, **ni**, **nc**, **ncm**, and **ssn** parameters, or the **zone**, **area**, **id** and **npc** parameters, if they are the last entry in the screening reference and the screening reference is part of a screen set.

If only one entry exists, the **sr** must not be referenced by another screening table. If the **sr** is not referenced by another screening table, the entire screening table is deleted.

Notes

The asterisk is a parameter value indicating that the gateway screening process is screening all values for that parameter in the MSU. The asterisk parameter value does not mean that multiple entries whose values may be in the range implied by the asterisk will be removed. The only entry that will be removed by this command when the asterisk is specified as a parameter value is the entry that contains an asterisk as that parameter value.

For example, if the **dlt-scr-aftpc:sr=ied:ni=240:nc=010:ncm="":ssn=*** command is entered, the only entry that will be removed from the database is the entry in screening reference **ied** that contains the values **ni=240**, **nc=010**, **ncm=***, and **ssn=***. For an entry to be specified in this command with asterisks as parameter values, that entry must be shown in the **rtrv-scr-aftpc** output with asterisks as the same parameter values specified in the **dlt-scr-aftpc** command.

A range of values is specified by separating the values that define the range by two ampersands (**&&**); for example, **ni=025&&100** specifies all network indicators for ANSI point codes from **25** to **100**.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

```

dlt-scr-aftpc:sr=iec:ni=240:nc=010:ncm=010:ssn=012
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
DLT-SCR-AFTPC: SCREEN SET AFFECTED - IEC 25% FULL
DLT-SCR-AFTPC: MASP A - COMPLTD
;

```

Legend

DLT-SCR-AFTPC—The command entered that caused this output. This is echoed to the printer as a reference.

SCREEN SET AFFECTED—Identifies the screen set that was affected by the command. The screen set name is shown

% FULL—Indicates the relative size of the screen set.

dlt-scr-blkdpc**Delete Blocked DPC**

Use this command to remove a specific screening reference from the blocked DPC category. Deleting the last point code (**c-c-c**) also deletes the screening reference.

Keyword: dlt-scr-blkdpc

Related Commands: chg-scr-blkdpc, ent-scr-blkdpc, rtrv-scr-blkdpc

Command Class: Database Administration

Parameters

:sr= (mandatory)

Screening reference. This parameter specifies the point code's unique screening reference name.

Range: ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

:area= (optional)

The ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000–255**.

Range: 000-255 *, C

:id= (optional)

The ITU international ID. The parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: 0-7 *, C

:msa= (optional)

The 24-bit ITU-national main signaling area (*msa*) value. It specifies the *msa* of the point code represented by *msa-ssa-spt*. An asterisk (*) indicates the full range of values from **000–255**.

Range: 000-255 *, C

:nc= (optional)

The network cluster (*nc*) value. This parameter specifies one or more *nc* values for the network indicator (*ni*) and network cluster member (*ncm*) values specified in the **ni** and **ncm** parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*. You can specify a single value or a range of values. An asterisk (*) indicates the full range of values from **000–255**.

Range: 000-255 *, C

:ncm= (optional)

The network cluster member (*ncm*) value. This parameter specifies one or more *ncm* values for the network indicator (*ni*) and network cluster (*nc*) values identified in the **ni** and **nc** parameters. It

specifies the *ncm* of the point code represented by *ni-nc-ncm*. You can specify a single value or a range of values. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 *, C**

:ni= (optional)

The network indicator (*ni*) value. This parameter specifies one or more *ni* values for the network cluster (*nc*) and network cluster member (*ncm*) values identified in the **nc** and **ncm** parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*. You can specify a single value or a range of values. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 *, C**

:npc= (optional)

The ITU national point code. An asterisk (*) indicates the full range of values from **00000–16383**.

Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see “Converting ITU National Point Code Formats” in Appendix A for information on converting the point code format.

Range: **00000-16383 *, C**

:pcst= (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (**s-**).

Range: **none, s**

Default: **none**

:sp= (optional)

The 24-bit ITU national signaling point. This parameter specifies the signaling point (*sp*) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 *, C**

:ssa= (optional)

The 24-bit ITU national sub signaling area. This parameter specifies the sub signaling area (*ssa*) in the point code represented by the format *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 *, C**

:zone= (optional)

The ITU international zone. The parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7, *, C**

Example

dlt-scr-blkdpc:sr=iec:ni=240:nc=010:ncm=010

dlt-scr-blkdpc:sr=bdp1:npc=128:pcst=s

Dependencies

At least one optional parameter must be specified.

A complete point code must be specified, and must be one, and only one of the four point code parameter combinations: **ni-nc-ncm**; **zone-area-id**; **msa-ssa-sp** ; or **npc**.

The blocked DPC or blocked DPC range specified by **ni-nc-ncm**; **zone-area-id**; **msa-ssa-sp**; or the **npc** parameter must already exist in the specified screening reference.

The point code to delete cannot have the value **c-c-c** if there is another point code in the blocked screen reference. The last screen reference to be deleted must have **ni**, **zone**, **msa**, or **npc** equal to **c**.

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

If **msa=*** is specified, **ssa=*** and **sp=*** must be specified.

If **msa=c** is specified, either the character **c** must also be specified for the **ssa** and **sp** parameters or the **ssa** and **sp** parameters must not be specified. If the **ssa** and **sp** parameters are not specified when **msa=c** is specified, the **ssa** and **sp** values default to the character **c** in the database.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc** parameter is specified as an asterisk (**nc=***), the **ncm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **ncm** parameter is specified as a single value, or a range other than the full range of **000–255**, the **ni** and the **nc** parameters must be specified with a single value.

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range **000–255**.

If **ni=c** is specified, either the character **c** must also be specified for the **nc** and **ncm** parameters or the **nc** and **ncm** parameters must not be specified. If the **nc** and **ncm** parameters are not specified when **ni=c** is specified, the **nc** and **ncm** values default to the character **c** in the database.

The last screening reference (**sr**) entry cannot be deleted if it is referenced by another screen.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The spare point code subtype prefix (**s-**) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** parameter cannot be specified for ANSI and ITU-N24 point codes.

If **zone=c** is specified, either the character **c** must also be specified for the **area** and **id** parameters or the **area** and **id** parameters must not be specified. If the **area** and **id** parameters are not specified when **zone=c** is specified, the **area** and **id** values default to the character **c** in the database.

Notes

If the screening reference is not referenced by any other screen, and if all entries are removed, the entire screening reference can be removed using **ni-nc-ncm**, **zone-area-id**, or **msa-ssa-sp** equal to **c-c-c** or **npc=c**. If more than one entry exists, **ni-nc-ncm**, **zone-area-id**, **msa-ssa-sp**, or **npc** must not equal **c**.

The asterisk is a parameter value indicating that the gateway screening process is screening all values for that parameter in the MSU. The asterisk parameter value does not mean that multiple entries whose values may be in the range implied by the asterisk will be removed. The only entry that will be removed by this command when the asterisk is specified as a parameter value is the entry that contains an asterisk as that parameter value.

For example, if the **dlt-scr-blkdpc:sr=ied:ni=240:nc=010:ncm="":ssn=*** command is entered, the only entry that will be removed from the database is the entry in screening reference **iec** that contains the values **ni=240**, **nc=010**, **ncm=***, and **ssn=***. For an entry to be specified in this command with asterisks as parameter values, that entry must be shown in the **rtrv-scr-blkdpc** output with asterisks as the same parameter values specified in the **dlt-scr-blkdpc** command.

The asterisk (*) value cannot be specified with the character **c**. For example, a point code **c-c-*** is not allowed.

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, **ni=025&&100** specifies all network indicators for ANSI point codes from **25** to **100**.

The character **c** is used in the blocked DPC screens to allow the screening process to continue for messages with point codes that do not match any point codes in the blocked DPC screens. When screening for a blocked DPC and the point code being screened does not match any of the point codes in the blocked DPC screens, the message is not rejected and the screening process continues.

There must be an entry in each unique blocked DPC screening reference to allow the screening process to continue. This entry consists of a screening reference, point code, **nsfi**, and **nsr**. The point code is in the form of subfields *ni-nc-ncm*, *zone-area-id*, or *msa-ssa-sp* equal to **c-c-c** or **npc=c**. When the character **c** is specified, the **nsfi** and **nsr** parameters must be specified.

When the point code does not match any entries in the blocked DPC screens, the screening process is directed to the screening reference with the point code **c-c-c**. The **nsfi** and **nsr** in this entry are examined to determine the next step in the screening process.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

```
dlt-scr-blkdpc:sr=iec:ni=240:nc=010:ncm=010
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
DLT-SCR-BLKDPC: SCREEN SET AFFECTED - IEC 25% FULL
DLT-SCR-BLKDPC: MASP A - COMPLTD
;
```

Legend

DLT-SCR-BLKDPC—The command entered that caused this output. This is echoed to the printer as a reference.

SCREEN SET AFFECTED—Identifies the screen set that was affected by the command. The screen set name is provided.

% FULL—Indicates the relative size of the screen set.

dlt-scr-blkopc

Delete Blocked OPC

Use this command to remove a specific screening reference from the blocked OPC category.

Keyword: dlt-scr-blkopc

Related Commands: chg-scr-blkopc, ent-scr-blkopc, rtrv-scr-blkopc

Command Class: Database Administration

Parameters

:sr= (mandatory)

Screening reference. This parameter specifies the point code's unique screening reference name.

Range: ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

:area= (optional)

The ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000–255**.

Range: 000-255 *, C

:id= (optional)

The ITU international ID. The parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: 0-7 *

:msa= (optional)

The 24-bit ITU-national main signaling area (*msa*) value. It specifies the *msa* of the point code represented by *msa-ssa-spt*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255** *, C

:nc= (optional)

The network cluster (*nc*) value. This parameter specifies one or more *nc* values for the network indicator (*ni*) and network cluster member (*ncm*) values specified in the **ni** and **ncm** parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*. You can specify a single value or a range of values. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255** *, C

:ncm= (optional)

The network cluster member (*ncm*) value. This parameter specifies one or more *ncm* values for the network indicator (*ni*) and network cluster (*nc*) values identified in the **ni** and **nc** parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*. You can specify a single value or a range of values. An asterisk (*) indicates the full range of values from **000-255**.

Range: **0-255** *, C

:ni= (optional)

The network indicator (*ni*) value. This parameter specifies one or more *ni* values for the network cluster (*nc*) and network cluster member (*ncm*) values identified in the **nc** and **ncm** parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*. You can specify a single value or a range of values. An asterisk (*) indicates the full range of values from **000-255**.

Range: **0-255** *, C

:npc= (optional)

The ITU national point code. An asterisk (*) indicates the full range of values from **00000-16383**.

Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see “Converting ITU National Point Code Formats” in Appendix A for information on converting the point code format.

Range: **00000-16383** *, C

:pcst= (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range: **none**, s

Default: **none**

:sp= (optional)

The 24-bit ITU national signaling point. This parameter specifies the signaling point (*sp*) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255** *, C

:ssa= (optional)

The 24-bit ITU national sub signaling area. This parameter specifies the sub signaling area (*ssa*) in the point code represented by the format *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255** *, C

:zone= (optional)

The ITU international zone. The parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0-7**.

Range: **0-7** *, C

Example

```
dlt-scr-blkopc:sr=iec:ni=240:nc=010:ncm=010
```

```
dlt-scr-blkopc:sr=bop1:npc=128:pcst=s
```

Dependencies

A complete point code must be specified, and must be one and only one of the four point code parameter combinations: **ni-nc-ncm**; **zone-area-id**; **msa-ssa-sp**; or **npc**, except in the special case of entering **c** for "continue."

The blocked OPC specified by **ni-nc-ncm**; **zone-area-id**; **msa-ssa-sp**; or the **npc** parameter must already exist in the screening reference or within an existing range of OPCs.

The point code to delete cannot have the value **c-c-c** if there is another point code in the blocked screen reference. The last screen reference to be deleted must have **ni**, **zone**, **msa**, or **npc** equal to **c**.

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

If **msa=c** is specified, either the character **c** must also be specified for the **ssa** and **sp** parameters or the **ssa** and **sp** parameters must not be specified. If the **ssa** and **sp** parameters are not specified when **msa=c** is specified, the **ssa** and **sp** values default to the character **c** in the database.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc** parameter is specified as an asterisk (**nc=***), the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **ncm** parameter is specified as a single value, or a range other than the full range of **000-255**, the **ni** and the **nc** parameters must be specified with a single value.

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range **000-255**.

If **ni=c** is specified, either the character **c** must also be specified for the **nc** and **ncm** parameters or the **nc** and **ncm** parameters must not be specified. If the **nc** and **ncm** parameters are not specified when **ni=c** is specified, the **nc** and **ncm** values default to the character **c** in the database.

The spare point code subtype prefix (**s-**) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** parameter cannot be specified for ANSI and ITU-N24 point codes.

The Spare Point Code Support feature must be enabled before the **pcst** and **npcst** parameters can be specified.

The last screening reference (**sr**) entry cannot be deleted if it is referenced by another screen.

If **zone=c** is specified, either the character **c** must also be specified for the **area** and **id** parameters or the **area** and **id** parameters must not be specified. If the **area** and **id** parameters are not specified when **zone=c** is specified, the **area** and **id** values default to the character **c** in the database.

Notes

If the screening reference is not referenced by any other screen, and if all entries are removed, the entire screening reference can be removed using **ni-nc-ncm**, **zone-area-id**, or **msa-ssa-sp** equal to **c-c-c** or **npc=c**. If more than one entry exists, **ni-nc-ncm**, **zone-area-id**, **msa-ssa-sp**, or **npc** must not equal **c**.

The asterisk is a parameter value indicating that the gateway screening process is screening all values for that parameter in the MSU. The asterisk parameter value does not mean that multiple entries

whose values may be in the range implied by the asterisk will be removed. The only entry that will be removed by this command when the asterisk is specified as a parameter value is the entry that contains an asterisk as that parameter value.

For example, if the **dlt-scr-blkopc:sr=ied:ni=240:nc=010:nccm=":ssn=*** command is entered, the only entry that will be removed from the database is the entry in screening reference **ied** that contains the values **ni=240**, **nc=010**, **ncm=***, and **ssn=***. For an entry to be specified in this command with asterisks as parameter values, that entry must be shown in the **rtrv-scr-blkopc** output with asterisks as the same parameter values specified in the **dlt-scr-blkopc** command.

The asterisk (*) value cannot be specified with the character **c**. For example, a point code **c-c-*** is not allowed.

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, **ni=025&&100** specifies all network indicators for ANSI point codes from **25** to **100**.

The character **c** is used in the blocked OPC screens to allow the screening process to continue for messages with point codes that do not match any point codes in the blocked OPC screens. When screening for a blocked OPC and the point code being screened does not match any of the point codes in the blocked DPC screens, the message is not rejected and the screening process continues.

There must be an entry in each unique blocked OPC screening reference to allow the screening process to continue. This entry consists of a screening reference, point code, **nsfi**, and **nsr**. The point code is either **npc=c**, or in the form of subfields *ni-nc-ncm*, *zone-area-id*, or *msa-ssa-sp* equal to **c-c-c**. When the character **c** is specified, the **nsfi** and **nsr** must be specified.

When the point code does not match any entries in the blocked OPC screens, the screening process is directed to the screening reference with the point code **c-c-c**. The **nsfi** and **nsr** in this entry are examined to determine the next step in the screening process.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

```
dlt-scr-blkopc:sr=ied:ni=240:nc=010:ncm=010
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
DLT-SCR-BLKOPC: SCREEN SET AFFECTED - IEC 25% FULL
DLT-SCR-BLKOPC: MASP A - COMPLTD
;
```

Legend

DLT-SCR-BLKOPC—The command entered that caused this output. This is echoed to the printer as a reference.

SCREEN SET AFFECTED—Identifies the screen set that was affected by the command. The screen set name is shown.

% FULL—Indicates the relative size of the screen set.

dlt-scr-cdpa

Delete Allowed Called Party Address

Use this command to remove a specific screening reference from the allowed called party address category.

Keyword: **dlt-scr-cdpa**

Related Commands: **chg-scr-cdpa**, **ent-scr-cdpa**, **rtrv-scr-cdpa**

Command Class: Database Administration

Parameters

:sr= (mandatory)

Screening reference. This parameter specifies the point code's unique screening reference name.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

:ssn= (mandatory)

The subsystem number. An asterisk (*) indicates the full range of values from **1-255**.

Range: **1-255 ***

:area= (optional)

The ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 *, C**

:id= (optional)

The ITU international ID. The parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0-7**.

Range: **0-7, ***

:msa= (optional)

The 24-bit ITU national signaling point. This parameter specifies the signaling point (*sp*) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:nc= (optional)

The network cluster (*nc*) value. This parameter specifies one or more *nc* values for the network indicator (*ni*) and network cluster member (*ncm*) values specified in the **ni** and **ncm** parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*. You can specify a single value or a range of values. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:ncm= (optional)

The network cluster member (*ncm*) value. This parameter specifies one or more *ncm* values for the network indicator (*ni*) and network cluster (*nc*) values identified in the **ni** and **nc** parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*. You can specify a single value or a range of values. An asterisk (*) indicates the full range of values from **000-255**.

Range: **0-255 ***

:ni= (optional)

The network indicator (*ni*) value. This parameter specifies one or more *ni* values for the network cluster (*nc*) and network cluster member (*ncm*) values identified in the **nc** and **ncm** parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*. You can specify a single value or a range of values. An asterisk (*) indicates the full range of values from **000-255**.

Range: **0-255 ***

:npc= (optional)

The ITU national point code. An asterisk (*) indicates the full range of values from **00000-16383**.

Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see "Converting ITU National Point Code Formats" in Appendix A for information on converting the point code format.

Range: **00000-16383 *, C**

:pcst= (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range: none, s

Default: none

:scmgfid= (optional)

The SCCP management (SCMG) format ID, which consists of a one-octet field and uniquely defines the function and format of each SCMG message. You can specify a single value or a range of values. An asterisk (*) indicates the full range of values from 1–255.

Range: 1-255 *

:sp= (optional)

The 24-bit ITU national signaling point. This parameter specifies the signaling point (*sp*) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from 000-255.

Range: 000-255 *

:ssa= (optional)

The 24-bit ITU national sub signaling area. This parameter specifies the sub signaling area (*ssa*) in the point code represented by the format *msa-ssa-sp*. An asterisk (*) indicates the full range of values from 000-255.

Range: 000-255 *

:zone= (optional)

The ITU international zone. The parameter specifies the *zone* in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from 0–7.

Range: 0-7, *, C

Example

```
dlt-scr-cdpa:sr=iec:ni=240:nc=010:ncm=010:ssn=012
```

```
dlt-scr-
```

```
cgpa:sr=cgpa:zone=1:area=2:id=3:ssn=1:sccpmt=9:ri=:pcst=s
```

Dependencies

A complete point code must be specified, and must be one and only one of the four point code parameter combinations: **ni-nc-ncm**; **zone-area-id**; **msa-ssa-sp**; or **npc**, except in the special case of entering c for "continue."

The CDPA point code, **ssn**, and **scmgfid** to be removed must exist in the CDPA entity set.

ANSI point code value 000-000-000 and ITU-International point code value 0-000-0 are not allowed.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range 000–255

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc** parameter is specified as an asterisk (**nc=***), the **ncm** parameter must be specified as an asterisk or as the full range 000–255.

If the **ncm** parameter is specified as a single value, or a range other than the full range of 000–255, the **ni** and the **nc** parameters must be specified with a single value.

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range 000–255.

The specified screening reference (**sr**) must already exist in the database.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The spare point code subtype prefix (s-) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** parameter cannot be specified for ANSI and ITU-N24 point codes.

A CDPA screening reference (**sr**) cannot be deleted if it referenced by an entity in another screening set.

If the **ssn** parameter is a value other than **1**, the **scmgfid** parameter cannot be specified.

If the **ssn=1** parameter is specified, the **scmgfid** parameter must be specified.

Notes

If only one entry exists and is not referenced by another screening table, the entire screening table is removed.

The asterisk is a parameter value indicating that the gateway screening process is screening all values for that parameter in the MSU. The asterisk parameter value does not mean that multiple entries whose values may be in the range implied by the asterisk will be removed. The only entry that will be removed by this command when the asterisk is specified as a parameter value is the entry that contains an asterisk as that parameter value.

For example, if the **dlt-scr-cdpa:sr=iec:ni=240:nc=010:ncm="":ssn=*** command is entered, the only entry that will be removed from the database is the entry in screening reference **iec** that contains the values **ni=240**, **nc=010**, **ncm=***, and **ssn=***. For an entry to be specified in this command with asterisks as parameter values, that entry must be shown in the **rtrv-scr-cdpa** output with asterisks as the same parameter values specified in the **dlt-scr-cdpa** command.

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, **:ni=025&&100** specifies all network indicators for ANSI point codes from **25** to **100**.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

```
dlt-scr-cdpa:sr=iec:ni=240:nc=010:ncm=010:ssn=012
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
DLT-SCR-CDPA: SCREEN SET AFFECTED - IEC 25% FULL
DLT-SCR-CDPA: MASP A - COMPLTD
;
```

Legend

DLT-SCR-CDPA—The command entered that caused this output. This is echoed to the printer as a reference.

SCREEN SET AFFECTED—Identifies the screen set that was affected by the command. The screen set name is shown.

% FULL—Indicates the relative size of the screen set.

dlt-scr-cgpa

Delete Allowed Calling Party Address

Use this command to remove a specific screening reference from the allowed calling party address category.

Keyword: **dlt-scr-cgpa**

Related Commands: **chg-scr-cgpa**, **ent-scr-cgpa**, **rtrv-scr-cgpa**

Command Class: Database Administration

Parameters

:ri= (mandatory)

Routing indicator that provides routing instructions to the receiving signaling point. In gateway screening, messages may be screened based on the value of the routing indicator.

Range: **dpc, gt, ***

dpc — Allow a called party address with a routing indicator value of “DPC/SSN.”

gt — Screening stops and gateway screening is bypassed as a forced pass.

***** — Allow both routing indicator values.

:sccpmt= (mandatory)

The SCCP message type. You can specify a single value or a range of values. An asterisk (*) indicates the full range of values.

Range: **9, , *10, , *17, , *18, ***

9, * — UDT

10, * — UDTS

17, * — XUDT

18, * — XUDTS

:sr= (mandatory)

Screening reference. This parameter specifies the point code’s unique screening reference name.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

:ssn= (mandatory)

The subsystem number. An asterisk (*) indicates the full range of values from **1-255**.

Range: **1-255 ***

:area= (optional)

The ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:id= (optional)

The ITU international ID. The parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0-7**.

Range: **0-7, ***

:msa= (optional)

The 24-bit ITU-national main signaling area (*msa*) value. It specifies the *msa* of the point code represented by *msa-ssa-spt*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:nc= (optional)

The network cluster (*nc*) value. This parameter specifies one or more *nc* values for the network indicator (*ni*) and network cluster member (*ncm*) values specified in the **ni** and **ncm** parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*. You can specify a single value or a range of values. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:ncm= (optional)

The network cluster member (*ncm*) value. This parameter specifies one or more *ncm* values for the network indicator (*ni*) and network cluster (*nc*) values identified in the **ni** and **nc** parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*. You can specify a single value or a range of values. An asterisk (*) indicates the full range of values from **000-255**.

Range: **0-255 ***

:ni= (optional)

The network indicator (*ni*) value. This parameter specifies one or more *ni* values for the network cluster (*nc*) and network cluster member (*ncm*) values identified in the **nc** and **ncm** parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*. You can specify a single value or a range of values. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 ***

:npc= (optional)

The ITU national point code. An asterisk (*) indicates the full range of values from **00000–16383**.

Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see “Converting ITU National Point Code Formats” in Appendix A for information on converting the point code format.

Range: **00000-16383 ***

:pcst= (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (**s**-).

Range: **none, s**

Default: **none**

:scmgfid= (optional)

The SCCP management (SCMG) format ID, which consists of a one-octet field and uniquely defines the function and format of each SCMG message. You can specify a single value or a range of values. An asterisk (*) indicates the full range of values from **1–255**.

Range: **1-255 ***

:sp= (optional)

The 24-bit ITU national signaling point. This parameter specifies the signaling point (*sp*) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:ssa= (optional)

The 24-bit ITU national sub signaling area. This parameter specifies the sub signaling area (*ssa*) in the point code represented by the format *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:zone= (optional)

The ITU international zone. The parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7, ***

Example

dlt-scr-cgpa:sr=iec:ni=240:nc=010:ncm=010:ssn=012

dlt-scr-cgpa:sr=cdp1:ni=5:nc=5:ncm=5:ssn=1:ri=dpc:sccpmt=009

dlt-scr-

cgpa:sr=cgpa:zone=1:area=2:id=3:ssn=1:sccpmt=9:ri=:pcst=s

Dependencies

A complete point code must be specified, and must be one, and only one of the four point code parameter combinations: **ni-nc-ncm**; **zone-area-id**; **msa-ssa-sp** ; or **npc**.

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

The CGPA point code, **ri**, **ssn**, and **sccpmt** to be removed must exist in the CGPA entity set.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc** parameter is specified as an asterisk (**nc=***), the **ncm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **ncm** parameter is specified as a single value, or a range other than the full range of **000–255**, the **ni** and the **nc** parameters must be specified with a single value.

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range **000–255**.

The specified screening reference (**sr**) must already exist in the database.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The spare point code subtype prefix (**s-**) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** parameter cannot be specified for ANSI and ITU-N24 point codes.

A CDPA screening reference (**sr**) cannot be deleted if it is referenced by an entity in another screening set.

Notes

The asterisk is a parameter value indicating that the gateway screening process is screening all values for that parameter in the MSU. The asterisk parameter value does not mean that multiple entries whose values may be in the range implied by the asterisk will be removed. The only entry that will be removed by this command when the asterisk is specified as a parameter value is the entry that contains an asterisk as that parameter value.

For example, if the **dlt-scr-cgpa:sr=ied:ni=240:nc=010:ncm="":ssn=*** command is entered, the only entry that will be removed from the database is the entry in screening reference **ied** that contains the values **ni=240**, **nc=010**, **ncm=***, and **ssn=***. For an entry to be specified in this command with asterisks as parameter values, that entry must be shown in the **rtrv-scr-cgpa** output with asterisks as the same parameter values specified in the **dlt-scr-cgpa** command.

A range of values is specified by separating the values that define the range by two ampersands (**&&**); for example, **:ni=025&&100** specifies all network indicators for ANSI point codes from **25** to **100**.

The routing indicator in the calling party address provides routing instructions for the receiving signaling point. When the routing indicator specifies global title, the message is routed based on the global title digits. If the routing indicator specifies DPC, the message is routed based on the DPC/subsystem number in the calling party address.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

```

dlt-scr-cgpa:sr=iec:ni=240:nc=010:ncm=010:ssn=012
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
DLT-SCR-CGPA: SCREEN SET AFFECTED - IEC 25% FULL
DLT-SCR-CGPA: MASP A - COMPLTD
;

```

Legend

DLT-SCR-CGPA—The command entered that caused this output. This is echoed to the printer as a reference.

SCREEN SET AFFECTED—Identifies the screen set that was affected by the command. The screen set name is provided (such as IEC).

% FULL—Indicates the relative size of the screen set.

dlt-scr-destfld**Delete an Allowed DESTFLD**

Use this command to remove a specific screening reference from the allowed affected destination field (DESTFLD) category.

Keyword: **dlt-scr-destfld**

Related Commands: **chg-scr-destfld**, **ent-scr-destfld**, **rtrv-scr-destfld**

Command Class: Database Administration

Parameters

:sr= (mandatory)

Screening reference. This parameter specifies the point code's unique screening reference name.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

:area= (optional)

The ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:id= (optional)

The ITU international ID. The parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7 ***

:msa= (optional)

The 24-bit ITU-national main signaling area (*msa*) value. It specifies the *msa* of the point code represented by *msa-ssa-spt*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:nc= (optional)

The network cluster (*nc*) value. This parameter specifies one or more *nc* values for the network indicator (*ni*) and network cluster member (*ncm*) values specified in the **ni** and **ncm** parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:ncm= (optional)

The network cluster member (*ncm*) value. This parameter specifies one or more *ncm* values for the network indicator (*ni*) and network cluster (*nc*) values identified in the **ni** and **nc** parameters. It

specifies the *ncm* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 ***

:ni= (optional)

The network indicator (*ni*) value. This parameter specifies one or more *ni* values for the network cluster (*nc*) and network cluster member (*ncm*) values identified in the **nc** and **ncm** parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 ***

:npc= (optional)

The ITU national point code. An asterisk (*) indicates the full range of values from **00000–16383**.

Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see “Converting ITU National Point Code Formats” in Appendix A for information on converting the point code format.

Range: **00000-16383 ***

:pcst= (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range: **none, s**

Default: **none**

:sp= (optional)

The 24-bit ITU national signaling point. This parameter specifies the signaling point (*sp*) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:ssa= (optional)

The 24-bit ITU national sub signaling area. This parameter specifies the sub signaling area (*ssa*) in the point code represented by the format *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:zone= (optional)

The ITU international zone. The parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7, ***

Example

dlt-scr-destfld:sr=iec:ni=240:nc=010:ncm=010

dlt-scr-destfld:sr=dst1:zone=1:area=2:id=3:pcst=s

Dependencies

A complete point code must be specified, and must be one, and only one of the four point code parameter combinations: **ni-nc-ncm**; **zone-area-id**; **msa-ssa-sp** ; or **npc**.

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

If **zone=*** is specified, **area=*** and **id=*** must be specified.

If **area=*** is specified, **id=*** must be specified.

If **ssa=*** is specified, **sp=*** must be specified.

If **msa=*** is specified, **ssa=*** and **sp=*** must be specified.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc** parameter is specified as an asterisk (**nc=***), the **ncm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **ncm** parameter is specified as a single value, or a range other than the full range of **000–255**, the **ni** and the **nc** parameters must be specified with a single value.

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range **000–255**.

The DESTFLD specified by **ni-nc-ncm**, **zone-area-id**, **msa-ssa-sp**, or the **npc** parameter must already exist in the screening reference.

If only one entry exists, the **sr** must not be referenced by another screening table. If the **sr** is not referenced by another screening table, the entire screening table is deleted.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The spare point code subtype prefix (**s-**) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** parameter cannot be specified for ANSI and ITU-N24 point codes.

Notes

The asterisk is a parameter value indicating that the gateway screening process is screening all values for that parameter in the MSU. The asterisk parameter value does not mean that multiple entries whose values may be in the range implied by the asterisk will be removed. The only entry that will be removed by this command when the asterisk is specified as a parameter value is the entry that contains an asterisk as that parameter value.

For example, if the **dlt-scr-destfld:sr=ied:ni=240:nc=010:ncm="":ssn=*** command is entered, the only entry that will be removed from the database is the entry in screening reference **iec** that contains the values **ni=240**, **nc=010**, **ncm=***, and **ssn=***. For an entry to be specified in this command with asterisks as parameter values, that entry must be shown in the **rtrv-scr-destfld** output with asterisks as the same parameter values specified in the **dlt-scr-destfld** command.

A range of values is specified by separating the values that define the range by two ampersands (**&&**); for example, **:ni=025&&100** specifies all network indicators for ANSI point codes from **25** to **100**.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

dlt-scr-destfld:sr=iec:ni=240:nc=010:ncm=010

```
rlghncxa03w 04-02-13 11:49:47 EST EAGLE 31.3.0
DLT-SCR-DESTFLD: SCREEN SET AFFECTED - SS01 25% FULL
DLT-SCR-DESTFLD: MASP A - COMPLTD
```

;

dlt-scr-dpc

Delete Allowed DPC

Use this command to remove a specific screening reference from the allowed DPC category.

Keyword: dlt-scr-dpc

Related Commands: chg-scr-dpc, ent-scr-dpc, rtrv-scr-dpc

Command Class: Database Administration

Parameters

:sr= (mandatory)

Screening reference. This parameter specifies the point code's unique screening reference name.

Range: ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

:area= (optional)

The ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000–255**.

Range: 000-255 *

:id= (optional)

The ITU international ID. The parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: 0-7 *

:msa= (optional)

The 24-bit ITU-national main signaling area (*msa*) value. It specifies the *msa* of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000–255**.

Range: 000-255 *

:nc= (optional)

The network cluster (*nc*) value. This parameter specifies one or more *nc* values for the network indicator (*ni*) and network cluster member (*ncm*) values specified in the **ni** and **ncm** parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: 000-255 *

:ncm= (optional)

The network cluster member (*ncm*) value. This parameter specifies one or more *ncm* values for the network indicator (*ni*) and network cluster (*nc*) values identified in the **ni** and **nc** parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: 0-255 *

:ni= (optional)

The network indicator (*ni*) value. This parameter specifies one or more *ni* values for the network cluster (*nc*) and network cluster member (*ncm*) values identified in the **nc** and **ncm** parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: 0-255 *

:npc= (optional)

The ITU national point code. An asterisk (*) indicates the full range of values from **00000–16383**. Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see “Converting ITU National Point Code Formats” in Appendix A for information on converting the point code format.

Range: 00000-16383 *

:pcst= (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range: **none, s**

Default: **none**

:sp= (optional)

The 24-bit ITU national signaling point. This parameter specifies the signaling point (*sp*) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:ssa= (optional)

The 24-bit ITU national sub signaling area. This parameter specifies the sub signaling area (*ssa*) in the point code represented by the format *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:zone= (optional)

The ITU international zone. The parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0-7**.

Range: **0-7, ***

Example

dlt-scr-dpc:sr=iec:ni=240:nc=010:ncm=010

dlt-scr-dpc:sr=dpc1:npc=128:pcst=s

Dependencies

A complete point code must be specified, and must be one, and only one of the four point code parameter combinations: **ni-nc-ncm**; **zone-area-id**; **msa-ssa-sp** ; or **npc**.

The DPC specified by **ni-nc-ncm**, **zone-area-id**, **msa-ssa-sp**, or the **npc** parameter must already exist in the screening reference or within an existing range of DPCs.

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000-255**

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc** parameter is specified as an asterisk (**nc=***), the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **ncm** parameter is specified as a single value, or a range other than the full range of **000-255**, the **ni** and the **nc** parameters must be specified with a single value.

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range **000-255**.

If only one entry exists, the **sr** must not be referenced by another screening table. If the **sr** is not referenced by another screening table, the entire screening table is deleted.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The spare point code subtype prefix (s-) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** parameter cannot be specified for ANSI and ITU-N24 point codes.

Notes

The asterisk is a parameter value indicating that the gateway screening process is screening all values for that parameter in the MSU. The asterisk parameter value does not mean that multiple entries whose values may be in the range implied by the asterisk will be removed. The only entry that will be removed by this command when the asterisk is specified as a parameter value is the entry that contains an asterisk as that parameter value.

For example, if the **dlt-scr-dpc:sr=iec:ni=240:nc=010:nccm=":ssn=*** command is entered, the only entry that will be removed from the database is the entry in screening reference **iec** that contains the values **ni=240**, **nc=010**, **ncm=***, and **ssn=***. For an entry to be specified in this command with asterisks as parameter values, that entry must be shown in the **rtrv-scr-dpc** output with asterisks as the same parameter values specified in the **dlt-scr-dpc** command.

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, **ni=025&&100** specifies all network indicators for ANSI point codes from **25** to **100**.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

```
dlt-scr-dpc:sr=iec:ni=240:nc=010:ncm=010
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
DLT-SCR-DPC: SCREEN SET AFFECTED - IEC 25% FULL
DLT-SCR-DPC: MASP A - COMPLTD
;
```

Legend

DLT-SCR-DPC—The command entered that caused this output. This is echoed to the printer as a reference.

SCREEN SET AFFECTED—Identifies the screen set that was affected by the command. The screen set name is shown.

% FULL—Indicates the relative size of the screen set.

dlt-scr-isup

Delete Allowed ISUP Screening Reference

Use this command to delete an allowed ISUP screening reference from the Allowed ISUP entity set.

Keyword: **dlt-scr-isup**

Related Commands: **chg-scr-isup**, **ent-scr-isup**, **rtrv-scr-isup**

Command Class: Database Administration

Parameters

:isupmt/tupmt= (mandatory)

ISUP message type or TUP message type. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**. The **tupmt** parameter is not valid for SEAS.

Range: **000-255**

:sr= (mandatory)

Screening reference. This parameter specifies the point code's unique screening reference name.

Range: **ayyy**

1 alphabetic character followed by up to 3 alphanumeric characters

Example

```

dlt-scr-isup:sr=iec:isupmt=9
dlt-scr-isup:sr=iec:isupmt=1&&2
dlt-scr-isup:tupmt=1:sr=tu01

```

Dependencies

The specified **sr** must exist in the Allowed ISUP entity set.

The specified **isupmt** parameter or **tupmt** parameter value must already exist in the specified **sr**.

The last entry in the specified **sr** cannot be deleted if the entry is referenced by another screen.

Notes

An asterisk can be specified for a parameter value in the **chg-scr-isup** and **dlt-scr-isup** commands *only* if that parameter value was specified as an asterisk in the **ent-scr-isup** command to define the parameter value.

A range of values can be specified for the **isupmt** parameter or **tupmt** parameter, by separating the values that define the range by two ampersands (&&); for example, **:isupmt=025&&100** specifies all ISUP message types from **25** to **100**. The value to the left of the && must be less than the value to the right of the && in the range.

Output

No screen sets are listed in the following example, because the specified screening reference is not associated with any screen sets.

```

dlt-scr-isup:sr=iec:isupmt=9
tekelecstp 02-09-02 11:59:41 EST EAGLE 30.0.0
DLT-SCR-ISUP: MASP A - COMPLTD
;

```

No screen sets are listed in the following example, because the specified screening reference is not associated with any screen sets.

```

dlt-scr-isup:sr=iec:isupmt=1&&2
tekelecstp 02-09-02 12:00:30 EST EAGLE 30.0.0
DLT-SCR-ISUP: MASP A - COMPLTD
;

```

The following example lists the screen sets that are associated with the specified screening reference.

```

dlt-scr-isup:tupmt=1:sr=tu01
tekelecstp 03-11-02 12:00:30 EST EAGLE 31.3.0
Extended Processing Time Required -- Please Wait
Notice: The number of screensets affected is 2.
DLT-SCR-ISUP: SCREEN SET AFFECTED - ist1 1% FULL
DLT-SCR-ISUP: SCREEN SET AFFECTED - ist2 1% FULL
DLT-SCR-ISUP: MASP A - COMPLTD
;

```

dlt-scr-opc**Delete Allowed OPC**

Use this command to remove a specific screening reference from the allowed OPC category.

Keyword: **dlt-scr-opc**

Related Commands: **chg-scr-opc**, **ent-scr-opc**, **rtrv-scr-opc**

Command Class: Database Administration

Parameters

:sr= (mandatory)

Screening reference. This parameter specifies the point code's unique screening reference name.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

:area= (optional)

The ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:id= (optional)

The ITU international ID. The parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7, ***

:msa= (optional)

The 24-bit ITU-national main signaling area (*msa*) value. It specifies the *msa* of the point code represented by *msa-ssa-spt*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:nc= (optional)

The network cluster (*nc*) value. This parameter specifies one or more *nc* values for the network indicator (*ni*) and network cluster member (*ncm*) values specified in the **ni** and **ncm** parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:ncm= (optional)

The network cluster member (*ncm*) value. This parameter specifies one or more *ncm* values for the network indicator (*ni*) and network cluster (*nc*) values identified in the **ni** and **nc** parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*. You can specify a single value or a range of values. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 ***

:ni= (optional)

The network indicator (*ni*) value. This parameter specifies one or more *ni* values for the network cluster (*nc*) and network cluster member (*ncm*) values identified in the **nc** and **ncm** parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 ***

:npc= (optional)

The ITU national point code. An asterisk (*) indicates the full range of values from **00000–16383**.

Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see “Converting ITU National Point Code Formats” in Appendix A for information on converting the point code format.

Range: **00000-16383 ***

:pcst= (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (**s**).

Range: **none, s**

Default: none

:sp= (optional)

The 24-bit ITU national signaling point. This parameter specifies the signaling point (*sp*) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: 000-255 *

:ssa= (optional)

The 24-bit ITU national sub signaling area. This parameter specifies the sub signaling area (*ssa*) in the point code represented by the format *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: 000-255 *

:zone= (optional)

The ITU international zone. The parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0-7**.

Range: 0-7, *

Example

dlt-scr-opc:sr=iec:ni=240:nc=010:ncm=010

dlt-scr-opc:sr=opc1:npc=128:pcst=s

Dependencies

A complete point code must be specified, and must be one, and only one of the four point code parameter combinations: **ni-nc-ncm**; **zone-area-id**; **msa-ssa-sp** ; or **npc**.

The OPC specified by **ni-nc-ncm**; **zone-area-id**, **msa-ssa-sp**, or the **npc** parameter must not already exist in the screening reference or within an existing range of OPCs.

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000-255**

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc** parameter is specified as an asterisk (**nc=***), the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **ncm** parameter is specified as a single value, or a range other than the full range of **000-255**, the **ni** and the **nc** parameters must be specified with a single value.

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range **000-255**.

If only one entry exists, the **sr** must not be referenced by another screening table. If the **sr** is not referenced by another screening table, the entire screening table is deleted.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The spare point code subtype prefix (**s-**) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** parameter cannot be specified for ANSI and ITU-N24 point codes.

Notes

The asterisk is a parameter value indicating that the gateway screening process is screening all values for that parameter in the MSU. The asterisk parameter value does not mean that multiple entries whose values may be in the range implied by the asterisk will be removed. The only entry that will be removed by this command when the asterisk is specified as a parameter value is the entry that contains an asterisk as that parameter value.

For example, if the **dlt-scr-dpc:sr=ied:ni=240:nc=010:nccm=":ssn=*** command is entered, the only entry that will be removed from the database is the entry in screening reference **iec** that contains the values **ni=240**, **nc=010**, **ncm=***, and **ssn=***. For an entry to be specified in this command with asterisks as parameter values, that entry must be shown in the **rtrv-scr-dpc** output with asterisks as the same parameter values specified in the **dlt-scr-dpc** command.

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, **ni=025&&100** specifies all network indicators for ANSI point codes from **25** to **100**.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

```
dlt-scr-opc:sr=iec:ni=240:nc=010:ncm=010
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
DLT-SCR-OPC: SCREEN SET AFFECTED - IEC 25% FULL
DLT-SCR-OPC: MASP A - COMPLTD
;
```

Legend

DLT-SCR-OPC—The command entered that caused this output. This is echoed to the printer as a reference.

SCREEN SET AFFECTED—Identifies the screen set that was affected by the command. The screen set name is shown.

% FULL—Indicates the relative size of the screen set.

dlt-scr-sio

Delete Allowed SIO

Use this command to remove a specific screening reference from the allowed service indicator octet (SIO) category.

Keyword: **dlt-scr-sio**

Related Commands: **chg-scr-sio**, **ent-scr-sio**, **rtrv-scr-sio**

Command Class: Database Administration

Parameters

:nic= (mandatory)

The network indicator code identifies whether the message originated from an international (**0**) or national (**2**) network. You can specify a single value or a range of values. An asterisk (*****) indicates the full range of values from **0–3**.

Range: **0-3 ***

:pri= (mandatory)

New message priority. This parameter specifies the new message priority in the SIO. You can specify a single value or a range of values. An asterisk (*****) indicates the full range of values from **0–3**.

Range: **0-3 ***

Default: Current value

:si= (mandatory)

Service indicator. The service indicator identifies the type of message. The values are defined in Telcordia TR-NWT-000246.

Range: **00, 01- 15**

:sr= (mandatory)

Screening reference. This parameter specifies the point code's unique screening reference name.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

:h0= (optional)

This parameter is mandatory if the service indicator (*si*) value is **00**, **01**, **02**, or **03**. Otherwise, the **h0** parameter is undefined.

Range: **0-15 ***

Default: Current value or undefined

:h1= (optional)

This parameter is mandatory if the service indicator (*si*) value is **00**, **01**, **02**, or **03**. Otherwise, the **h1** parameter is undefined.

Range: **0-15 ***

Default: Current value or undefined

Example

dlt-scr-sio:sr=iec:nic=1:si=1:h0=4:h1=2:pri=*

dlt-scr-sio:sr=iec:nic=1:si=3:pri=2

Dependencies

The **nh0** and **nh1** parameters cannot be specified if the **nsi** parameter is specified and is not equal to **00**, **01**, or **02**.

The **sr**, **nic**, **si**, **pri**, and **h0/h1** parameters to be removed must be in the screening reference.

Table 5-36 shows the valid combinations of the **h0/h1** parameter:

Table 5-36. Valid Combinations for the **h0/h1** and **nh0/nh1** Parameters (**chg-scr-sio**)

If the h0 (nh0) parameter is specified as:	The h1 (nh1) parameter value can be specified as:
A single value	A single value
A single value	A range
A single value	An asterisk (*) entry
A range	An asterisk (*) entry
An asterisk (*) entry	An asterisk (*) entry

The **sr**, **nic**, **si**, **pri**, and **h0/h1** parameters cannot be removed if they are the last entry in the screening reference and the screening reference is part of a screen set.

Notes

The network identifier specifies whether the message originated from an international (**0**) or a national (**2**) network.

The asterisk is a parameter value indicating that the gateway screening process is screening all values for that parameter in the MSU. The asterisk parameter value does not mean that multiple entries whose values may be in the range implied by the asterisk will be removed. The only entry that will

be removed by this command when the asterisk is specified as a parameter value is the entry that contains an asterisk as that parameter value.

For example, if the **dlt-scr-sio:sr=ied:ni=240:nc=010:nccm=":ssn=*** command is entered, the only entry that will be removed from the database is the entry in screening reference **iec** that contains the values **ni=240**, **nc=010**, **ncm=***, and **ssn=***. For an entry to be specified in this command with asterisks as parameter values, that entry must be shown in the **rtrv-scr-sio** output with asterisks as the same parameter values specified in the **dlt-scr-sio** command.

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, **ni=025&&100** specifies all network indicators for ANSI point codes from **25** to **100**.

Output

```
dlt-scr-sio:sr=iec:nic=1:si=3:pri=2
rlghncxa03w 04-02-14 16:45:50 EST EAGLE 31.3.0
DLT-SCR-SIO: SCREEN SET AFFECTED - SS01 25% FULL
DLT-SCR-SIO: SCREEN SET AFFECTED - SS04 35% FULL
DLT-SCR-SIO: MASP A - COMPLTD
;
```

Legend

DLT-SCR-SIO—The command entered that caused this output. This is echoed to the printer as a reference.

SCREEN SET AFFECTED—Identifies the screen set that was affected by the command. The screen set name is provided.

% FULL—Indicates the relative size of the screen set.

dlt-scr-tt

Delete Allowed Translation Type

Use this command to remove a specific screening reference from the allowed translation type category.

Keyword: **dlt-scr-tt**

Related Commands: **chg-scr-tt**, **ent-scr-tt**, **rtrv-scr-tt**

Command Class: Database Administration

Parameters

:sr= (mandatory)

Screening reference. This parameter specifies the point code's unique screening reference name.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

:type= (mandatory)

Translation type. The translation type identifies the global title translation type value in the called party address. You can enter a single value or a range of values. An asterisk (*) indicates the full range of values from **0–255**.

Range: **000-255 ***

Example

```
dlt-scr-tt:sr=iec:type=012
```

Dependencies

The screening reference must exist.

You cannot remove the **sr** and **type** parameters if they are the last entry in the screening reference and the screening reference is part of a screen set.

The allowed **type** to be removed must already exist in the screening reference.

The single value or range specified for the allowed **type** to be deleted from the TT screen for the allowed TT screening reference must already exist in that TT screen.

Notes

The asterisk is a parameter value indicating that the gateway screening process is screening all values for that parameter in the MSU. The asterisk parameter value does not mean that multiple entries whose values may be in the range implied by the asterisk will be removed. The only entry that will be removed by this command when the asterisk is specified as a parameter value is the entry that contains an asterisk as that parameter value.

For example, if the **dlt-scr-tt:sr=ied:type=":ssn=*** command is entered, the only entry that will be removed from the database is the entry in screening reference **iec** that contains an asterisk as the value for the **type** parameter. For an entry to be specified in this command with an asterisk as the value for the **type** parameter, that entry must be shown in the **rtrv-scr-tt** output with an asterisk as the value for the **type** parameter.

Output

```
dlt-scr-tt:sr=iec:type=012
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
DLT-SCR-TT:  SCREEN SET AFFECTED - IEC  25% FULL
DLT-SCR-TT:  MASP A - COMPLTD
;
```

Legend

DLT-SCR-TT—The command entered that caused this output. This is echoed to the printer as a reference.

SCREEN SET AFFECTED—Identifies the screen set that was affected by the command. The screen set name is shown.

% FULL—Indicates the relative size of the screen set.

dlt-scrset

Delete Screen Set

Use this command to remove a screen set definition from the database. A screen set is a group of screening references that belong to various categories. This command does not remove any gateway screening tables.

Keyword: **dlt-scrset**

Related Commands: **chg-scrset**, **ent-scrset**, **rtrv-scrset**

Command Class: Database Administration

Parameters

:scrn= (mandatory)

Screen set name. Each screening reference must have a unique name.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

Example

```
dlt-scrset:scrn=nc27
```

Dependencies

The screen set name must exist.

Before the screen set can be removed, it must be removed from all linksets.

Notes

The system validates the command to ensure that the specified screen set name is in use.

Output

```
dlt-scrset:scrn=nc27
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
DLT-SCRSET: MASP A - COMPLTD
;
```

dlt-shlf

Delete Shelf

Use this command to remove a shelf from the system database.

Keyword: dlt-shlf

Related Commands: ent-shlf, rtrv-shlf

Command Class: Database Administration

Parameters

:loc= (mandatory)

The shelf location.

Range: 1200, 1300, 2100, 2200, 2300, 3100, 3200, 3300, 4100, 4200, 4300, 5100, 5200, 5300, 6100

Example

```
dlt-shlf:loc=2300
```

Dependencies

The equipment shelf must have been configured previously.

The equipment shelf must not have any cards configured for it.

If the equipment shelf is the only provisioned shelf in the frame and a frame power threshold entry is configured in the Frame Power Threshold table for the frame, the shelf cannot be deleted until the frame power threshold entry is deleted from the Frame Power Threshold table.

Notes

All shelves in the system can be removed, except the control shelf (**1100**).

Before a shelf can be removed from the database, all SS7 signaling links and TCP/IP data links must be deactivated and removed from the database. All TSMs must be placed out of service. All X.25 signaling links, and the X.25 routes assigned to them, must be removed from the database. Then all cards in the shelf must be removed from the database. See the *Database Administration Manual - SS7* for more information on shelf removal.

Refer to the *Installation - EAGLE 5 ISS* manual for an illustration of shelf locations.

Output

```
dlt-shlf:loc=2300
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
DLT-SHLF: MASP A - COMPLTD
;
```

dlt-slk**Delete Signaling Link**

Use this command to remove a signaling link from the system database.

Keyword: dlt-slk

Related Commands: act-slk, blk-slk, dact-slk, ent-slk, inh-slk, rept-stat-slk, rtrv-slk, tst-slk, ublk-slk, unhb-slk

Command Class: Database Administration

Parameters

:link= (mandatory)

Signaling link on the card specified in the **loc** parameter. The links can be specified in any sequence or pattern.

Synonym: port

Range: a, b, a1-a31, b1-b31

Not all card types support all **link** parameter values.

See Table A-1 for valid **link** parameter range values for each type of card that can have a location specified in the **loc** parameter.

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

:force= (optional)

This parameter must be used to remove the last link in a linkset without having to remove all of the routes that referenced the linkset.

Range: yes, no

Default: no

Example

```
dlt-slk:loc=1211:link=a
```

```
dlt-slk:loc=1201:link=b:force=yes
```

The following example deletes link a1 from a multi-port LIM, E1/T1 MIM, HC MIM, or E5-E1T1 card at card location 1205:

```
dlt-slk:loc=1205:link=a1
```

Dependencies

Card locations 1113 through 1118 cannot be specified.

The frame and shelf portions of the specified card location (**loc**) can be 11 through 13, 21 through 23; 31 through 33; 41 through 43; 51 through 53; and 61. (The card location is xyss, where x is the frame, y is the shelf, and ss is the slot.)

The following **link** parameter values can be specified for the following cards that support more than 2 links per card:

- **a1-a3, b1-b3**—Multi-port LIM (MPL, MPL-T), SSED CM card running the **iplim** or **iplimi** application with links having **ipliml2=m2pa** or **ipliml2=saaltali**, E1/T1 MIM card
- **a1-a31, b1-b31**—HC-MIM card

- **a1-a15, b1-b15**—E5-E1T1 card
- **a1-a7, b1-b7**—E5-ENET card running the **iplim** or **iplimi** application that supports 16 links

The **link** parameter values **a4-a7** and **b4-b7** can be specified for E5-ENET or HC MIM cards. The **link** parameter values **a8-a31 a4-a15** and **b8-b31 b4-b15** can be specified only for HC MIM and E5-E1T1 cards that are used as E1 cards or T1 cards. The **link** parameter values **a16-a31** and **b16-b31** can be specified only for HC MIM cards that are used as E1 cards or T1 cards. Links **a4-a31** and **b4-b31** cannot be specified for Channel cards.

Links **a16-a31** and **b16-b31** cannot be specified for even-numbered card locations. HC MIM cards are dual-slot cards. The links are assigned only to the cards in odd-numbered locations.

The specified link must exist in the database.

If the specified card is running the **ss7gx25**, **atmitu**, **atmansi**, **ipgwi**, or **ss7ipgw** GPL, only the value **a** for the **link** parameter can be specified.

The signaling link must be in the unavailable (UAV) state before it can be removed. Enter the **rept-stat-slk** command to verify the state of the signaling link.

The signaling link cannot have an active LFS test in progress when this command is entered to delete the link.

The **force=yes** parameter must be specified to remove the last signaling link in a linkset that is assigned to a route.

To remove the last signaling link on a card, the state of the card must be OOS-MT-DSBLD. Enter the **rept-stat-card** command to verify the state of the card.

The card must be inhibited before the last link on the card can be deleted.

An IPLIMx or IPGWx signaling link assigned to a local host cannot be deleted if it has a socket or association with connection status **open=yes**.

The slot portion of the specified card location (**loc**) can be **1** through **8** and **11** through **18**. Slots **09** and **10** cannot be specified. (The card location is xyss, where x is the frame, y is the shelf, and ss is the slot.)

Notes

This command disassociates the equipment of a link from a logical signaling link. The link must first be placed in the unavailable (UAV) state by entering the **chg-slk** (or **canc-slk**) command before this command can be used to disconnect it. Entering this command results in the link entity being deleted from the STP's link entity set. The link is then considered to be "disconnected." The link on the STP becomes unassigned (spare) but retains the existing equipment type and options; the link remains in the "equipped" provisioning state unless that state is changed by subsequent local craft activity. The link is also no longer associated with its assigned linkset.

Not every card location represents a signaling link. Be sure to address a signaling link in this command.

The *Installation Manual – EAGLE 5 ISS* provides an illustration of card locations.

Output

```
dlt-slk:loc=1211:link=a
rlghncxa03w 05-02-07 11:11:28 EST EAGLE5 33.0.0
DLT-SLK: MASP A - COMPLTD
;
```


dlt-spc**Delete Secondary Point Code**

Use this command to delete an SPC (secondary point code) from the database. Also use this command to change an SPC by first removing the SPC from the database and then using the **ent-spc** command to enter the new SPC value.

Keyword: dlt-spc

Related Commands: ent-spc, rtrv-spc

Command Class: Database Administration

Parameters

NOTE: See “Point Code Formats and Conversion” for a detailed description of point code formats, rules for specification, and examples.

:spc= (mandatory)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Synonym: spca

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001–005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006–255.

The point code 000-000-000 is not a valid point code.

:spc/spca/spci/spcn/pcn24= (mandatory)

Secondary point code.

:spci= (mandatory)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

:spcn= (mandatory)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: s-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:spcn24= (mandatory)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

Example

dlt -spc:spc=10-20-30

dlt -spc:spcn24=98-98-98

dlt -spc:spcn=s-12345

Dependencies

The Spare Point Code Support feature must be enabled before a spare point code (prefix **s-**) can be specified in the command.

A secondary point code that is referenced in the Destination table cannot be deleted.

Notes

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (**s-**). All of the point code types support the private (internal) point code subtype prefix (**p-**).

Output

dlt -spc:spc=10-20-30

```
rlghncxa03w 04-02-18 08:50:12 EST  EAGLE 31.3.0
Secondary Point Code table is (7 of 40) 17% full
DLT-SPC: MASP A - COMPLTD
```

;

dlt-split-npa

Delete Split NPANXX

Use this command to remove the NPANXX from the database. This command verifies that the NPANXX input is in a split-NPA condition with another NPANXX.

NOTE: This command is obsolete.

NOTE: If the LNP ELAP Configuration controlled feature is turned on, this command is no longer available. This function can be performed at the LSMS or using the ELAP user interface.

Keyword: dlt-split-npa

Related Commands: ent-split-npa, rtrv-split-npa

Command Class: LNP Database

Parameters

:npnxxx= (mandatory)

Numbering plan area.

Range: 6 digits

Example

dlt-split-npa:npnxx=214254

Dependencies

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before this command can be entered.

The NPANXX must exist and it must be already split.

Notes

None

Output

dlt-split-npa:npnxx=214254

```
rlghncxa03w 04-02-18 08:50:12 EST EAGLE 31.3.0
DLT-SPLIT-NPA: MASP A - COMPLTD
```

;

dlt-srvsel**Delete Service Selector**

Use this command to delete a service selector.

Keyword: dlt-srvsel

Related Commands: chg-srvsel, ent-srvsel, rtrv-srvsel

Command Class: Database Administration

Parameters

:gti/gtia/gtii/gtin/gtin24= (mandatory)

Global title indicator. For all service selector commands, the domain is defined as **gti** and **gtia** (ANSI), **gtii** (ITU international), and **gtin** (ITU national). For the service selector commands, **gti** and **gtia** are equivalent.

Range: 2, 4

Supported value for ANSI: **gti=2** and **gtia=2**

Supported values for ITU: **gtii=2**, **gtii=4**, **gtin=2**, **gtin=4**, **gtin24=2**, **gtin24=4**

:ssn= (mandatory)

Subsystem number.

Range: 0-255 *

:tt= (mandatory)

Translation type.

Range: 0-255

:nai= (optional)

Nature of Address indicator. The Nature of Address indicator can be specified by supplying either a mnemonic value (**nai** parameter) or an explicit numeric value (**naiv** parameter). Either the **nai** parameter or the **naiv** parameter, but not both, can be specified in the command. Table A-5 shows the mapping between the **naiv** and the **nai** parameter values.

Range: sub, rsvd, natl, intl

:naiv= (optional)

Nature of Address indicator value. The Nature of Address indicator can be specified by supplying either a mnemonic value (**nai** parameter) or an explicit numeric value (**naiv** parameter). Either the

nai parameter or the **naiv** parameter, but not both, can be specified in the command. Table A-5 shows the mapping between the **naiv** and the **nai** parameter values.

Range: 0-127

:np= (optional)

Numbering Plan. The numbering plan indicator can be specified by supplying either a mnemonic value (**np** parameter) or an explicit numeric value (**npv** parameter). Either the **np** parameter or the **npv** parameter, but not both, can be specified in the command. Table A-6 shows the mapping between the **npv** and the **np** parameter values.

Range: e164, generic, x121, f69, e210, e212, e214, private

:npv= (optional)

Numbering Plan value. The numbering plan can be specified by supplying either a mnemonic value (**np** parameter) or an explicit numeric value (**npv** parameter). Either the **np** parameter or the **npv** parameter, but not both, can be specified in the command. Table A-6 shows the mapping between the **npv** and the **np** parameter values.

Range: 0-15

Example

```
dlt-srvsel:gti=2:tt=10
dlt-srvsel:gtin=4:tt=0:np=e164:nai=sub
dlt-srvsel:gtin24=4:tt=4:np=e164:nai=intl
dlt-srvsel:gtii=4:tt=4:np=e164:nai=intl:ssn=9
dlt-srvsel:gtii=4:tt=5:np=e164:nai=intl:ssn=*
```

Dependencies

The G-Flex, G-Port, or INP feature must be turned on or the Equipment Identity Register (EIR) feature must be enabled before this command can be entered.

The **np** and **npv** parameters cannot be specified together.

The **nai** and **naiv** parameters cannot be specified together.

The value **4** is not valid for the **gti/gtia** parameters.

The values **1** and **3** are not valid for the **gti/gtia/gtii/gtin/gtin24** parameters.

When the **gtii/gtin/gtin24=4** parameter is specified, an **np(v)** and **nai(v)** parameter combination must be specified. These parameters can be specified in the following combinations: **np** and **naiv**, **npv** and **nai**, **np** and **nai**, or **npv** and **naiv**.

When the **gti/gtia/gtii/gtin/gtin24=2** parameter is specified, no **np(v)** and **nai(v)** parameter combinations can be specified.

An entry must already exist that matches the **gti/gtia/gtii/gtin/gtin24**, **tt**, **ssn**, and **np(v)** and **nai(v)** combination of parameters.

Notes

None

Output

```
dlt-srvsel:gti=2:tt=10

rlghncxa03w 04-01-05 16:40:40 EST EAGLE 31.3.0
Service Selector table is (114 of 1024) 11% full
DLT-SRVSEL: MASP A - COMPLTD
;
```

dlt-ss-appl**Delete Subsystem Application**

Use this command to remove the application from the LNP database.

Keyword: dlt-ss-appl

Related Commands: chg-ss-appl, ent-ss-appl, rtrv-ss-appl

Command Class: Database Administration

Parameters

:appl= (mandatory)

Application type.

Range: lnp, inp, eir

Example

dlt-ss-appl:appl=lnp

dlt-ss-appl:appl=inp

dlt-ss-appl:appl=eir

Dependencies

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before the **dlt-ss-appl:appl=lnp** command can be entered.

The INP feature must be turned on before the **dlt-ss-appl:appl=inp** command can be entered.

The Equipment Identity Register (EIR) feature must be turned on before the **dlt-ss-appl:appl=eir** command can be entered.

The application type (**appl** parameter) must exist in the SS-APPL table.

The subsystem must be inhibited before **status=offline** can be specified.

Notes

None

Output

dlt-ss-appl:appl=lnp

```
rlghncxa03w 04-01-05 16:40:40 EST EAGLE 31.3.0
DLT-SS-APPL: MASP A - COMPLTD
```

;

dlt-subnetid**Delete Subnet ID**

Use this command to delete a Subnet ID entry from the Subnet ID list, for the ISUP NP with EPAP feature.

Keyword: dlt-subnetid

Related Commands: ent-subnetid, rtrv-subnetid

Command Class: Database Administration

Parameters

:subnetid= (mandatory)

Subnet ID

Range: 1-15 digits

Example

```
dlt-subnetid:subnetid=886933
```

Dependencies

The value **none** cannot be specified for the **subnetid** parameter.

The specified Vendor ID entry must already exist in the SUBNETID table.

Notes

None.

Output

```
dlt-subnetid:subnetid=886933
rlghncxa03w 04-10-07 11:11:28 EST EAGLE 31.11.0
SUBNETID table is (6 of 50) 3% full
DLT-SUBNETID: MASP A - COMPLTD
;
```

dlt-t1**Delete T1 Interface**

Use this command to delete an interface for an E1/T1 MIM card, an HC-MIM card, or an E5-E1T1 card used as a T1 card. The T1 port number on the card and the T1 card location in the EAGLE 5 ISS must be specified.

On HC-MIM cards and E5-E1T1 cards, T1 ports 1, 3, 5, and 7 (master ports) can be independently channel bridged with their adjacent even numbered (slave) ports 2, 4, 6, and 8 to allow non-signaling data pass-through. The slave port interface is automatically deleted with the command that deletes its master port interface.

Keyword: **dlt-t1**

Related Commands: **chg-t1, ent-t1, rtrv-e1, tst-t1**

Command Class: Database Administration

Parameters

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

:t1port= (mandatory)

T1 card port number. The value must be a T1 port for which an interface has already been configured on the specified T1 card.

Range: **1-8**

Ports 3-8 are valid only for HC-MIM cards and E5-E1T1 cards.

Example

```
dlt-t1:loc=1205:etport=1
```

```
dlt-t1:loc=1205:t1port=2
```

Dependencies

The specified card location (**loc** parameter) must be equipped.

The card in the specified card location (**loc** parameter) must be a **limt1** card type.

The port specified by the **t1port** parameter must be already equipped with an T1 interface.

All signaling links providing timeslots serviced by the specified T1 interface must be deleted before the T1 interface can be deleted. Use the **dlt-slk** command to delete the signaling links providing the timeslots.

A channel bridged slave (even-numbered) port on an HC-MIM card or E5-E1T1 card cannot be specified in the **t1port** parameter. To delete channel bridged port interfaces, specify the master (odd-numbered) port in the **t1port** parameter. The slave port interface is automatically deleted when its master port interface is deleted.

The following card locations cannot be specified in the **loc** parameter: 1113, 1114, 1115, 1116 1117, 1118 (OAM, TDM, and MDAL cards), and xy09 and xy10 (x is the frame and y is the shelf for HMUX and HIPR cards).

Notes

None.

Output

```
dlt -t1: loc=1205: t1port=1
      rlghncxa03w 04-02-20 09:07:58 EST   EAGLE 31.3.0
      DLT-T1: MASP A - COMPLTD
;
```

dlt-tt

Delete Translation Type

Use this command to remove a translation type from the system database.

NOTE: If the EGTT (Enhanced Global Title Translation) feature is turned on in your system, the system will no longer accept GTT (Global Title Translation) and TT (Translation Type) commands. Refer to the new command sets that replace the GTT and TT commands: GTT Selector commands (ent/chg/dlt/rtrv-gttset), GTT Set commands (ent/dlt/rtrv-gttset), and GTA commands (ent/chg/dlt/rtrv-gta).

Keyword: dlt-tt

Related Commands: ent-tt, rtrv-tt

Command Class: Database Administration

Parameters

:alias= (optional)

The global title translation type

Range: 000-255

Default: No translation type given

:ttn= (optional)

Translation type name.

Range: ayyyyyyyy

1 alphabetic character followed by up to 7 alphanumeric characters

Default: No translation name is given

:type/typea/typeei/typen/typen24= (optional)

Type and **typea** specify an ANSI network, **typei** specifies an ITU-international network, **typen** specifies an ITU-national network, and **typen24** specifies a 24-bit ITU national network. A translation type numeric value may be entered as ANSI (**type** or **typea**) and also as an ITU type (**typei**, **typen**, or **typen24**). However, they are separate entities.

Range: 0-255

Default: No translation type is specified

Example

```
dlt-tt:type=230
dlt-tt:ttn=lidb
dlt-tt:type=230:ttn=lidb
dlt-tt:type=230:ttn=lidb:alias=030
```

Dependencies

This command is not valid when the EGTT feature is turned on.

Asterisk (*) parameter values are not allowed in this command.

To delete a translation type, the translation type, the translation name, or both, must be specified.

If the translation type is specified, it must already exist in the database for the network type.

If the translation name is specified, it must already exist in the database.

If the translation type is specified, it cannot be an **alias** value.

If both the translation type and translation name are specified, they must correspond.

The translation type cannot be deleted if there are current GTT entries that reference it.

To delete an **alias**, both the **alias** and the translation type must be specified, and both must already exist in the database for the network type.

If an **alias** is specified, it must be associated with the specified translation type and cannot be the value of an existing translation type.

Either the **type** parameter or **ttn** parameter must be specified.

If the **type** parameter is specified, the translation type must exist in the translation table. If the **type** or **ttn** parameter, or both, are specified, they must be the same as the values entered with the **ent-tt** command.

If the translation name is specified, it must be associated with a translation type.

If aliases exist, they must be removed from the database before the translation types can be removed.

Notes

If the specified translation type entry is not referenced by a current global title translation entry and does not have any aliases, the translation type entry is removed.

Output

```
dlt-tt:type=230

rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
DLT-TT: MASP A - COMPLTD
;
```

dlt-ttmap

Delete Translation Type Mapping

Use this command to delete from the database a mapped SS7 message translation type (TT) for a given gateway linkset name. For example, suppose you are mapping the translation type 001 (before TT mapping) to 238 (after TT mapping). You can use this command to delete that mapping from the database.

Keyword: dlt-ttmap

Related Commands: chg-ttmap, ent-ttmap, rtrv-ttmap

Command Class: Database Administration

Parameters**:lsn=** (mandatory)

Linkset name. The unique network identifier for the gateway linkset.

Range: aaaaaaaaa

1 alphabetic character followed by 9 alphanumeric characters

:ett= (optional)Translation type before mapping. The identification of the type of global title translation in the SS7 message *before* translation type mapping. This attribute is the decimal representation of the 1-octet binary field used by the SS7 protocol to identify the translation type.**Range:** 0-255**:io=** (optional)Incoming or outgoing. The system uses this parameter to indicate whether the translation type mapping data provisioned for the gateway linkset is for SS7 messages *received* or *sent* on the linkset.**Range:** i, o

i — incoming

o — outgoing

Default: Both incoming and outgoing**Example****dlt-ttmap:lsn=n c001:io=i:ett=128:mtt=55****Dependencies**

None

Notes

None

Output

```

dlt-ttmap:lsn=nc001:io=i:ett=128:mtt=55
rlghncxa03w 04-02-22 11:18:50 EST EAGLE 31.3.0
TTMAP table for nc001 is (2 of 64) 3% full
DLT-TTMAP: MASP A - COMPLTD
;

```

dlt-uim-acthresh**Delete Activity Level Threshold for STP UIM
Activity Reporting**

Use this command to clear the level of activity threshold that is used to report UIM messages.

Keyword: dlt-uim-acthresh**Related Commands:** rtrv-uim-acthresh, set-uim-acthresh**Command Class:** Database Administration**Parameters****:uimn=** (mandatory)

The UIM number.

Range: 1000-1499**Example**

Clears UIM number 1333 message threshold:

dlt-uim-acthresh:uimn=1333

Dependencies

The **uimn** parameter value must be a numeric value in the range of **1000–1499**.

The specified **uimn** value must exist in the UIM Threshold database table.

Notes

None

Output

dlt-uim-actthresh:uimn=1333

```
rlghncxa03w 04-02-01 08:50:12 EST EAGLE 31.3.0
DLT-UIM-ACTHRESH: MASP A - COMPLTD
;
```

dlt-user**Delete User**

Use this command to remove a user from the system database.

Keyword: **dlt-user**

Related Commands: **act-user, chg-pid, chg-user, dact-user, ent-user, login, logout, rept-stat-user, rtrv-secu-user, rtrv-user**

Command Class: Security Administration

Parameters

:uid= (mandatory)

User ID

Range: *azzzzzzzzzzzzzzz*

1 alphabetic character followed by up to 15 alphanumeric characters

Example

dlt-user:uid=terryjohnson

Dependencies

The first character must be a letter.

Notes

If the user being removed is logged onto the system, this command logs the user off immediately.

Output

dlt-user:uid=terryjohnson

```
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
DLT-USER: MASP A - COMPLTD
;
```

dlt-vendid**Delete Vendor ID**

Use this command to delete a Vendor ID entry from the Vendor ID list, for the GSM MAP SRI Redirect to Serving HLR feature.

Keyword: **dlt-vendid**

Related Commands: **ent-vendid, rtrv-vendid**

Command Class: Database Administration

Parameters

:vendid= (mandatory)
 Vendor ID
Range: 1-15 digits

Example

```
dlt -vendid:vendid=886933
```

Dependencies

The value **none** cannot be specified for the **vendid** parameter.
 The specified Vendor ID entry must already exist in the VendID table.

Notes

None.

Output

```
dlt -vendid:vendid=886933
rlghncxa03w 04-10-07 11:11:28 EST EAGLE 31.11.0
VENDID table is (6 of 200) 3% full
DLT-VENDID: MASP A - COMPLTD
;
```

dlt-x25-dstn**Delete X.25 Destination**

Use this command to remove the association of an X.25 network address with an SS7 point code.

Keyword: **dlt-x25-dstn**

Related Commands: **chg-x25-dstn**, **ent-x25-dstn**, **rtrv-x25-dstn**

Command Class: Database Administration

Parameters

:xaddr= (mandatory)
 The X.25 network address of the X.25 destination entity or the SS7 node.
Range: 1-15 digits

Example

```
dlt -x25-dstn:xaddr=205255864567721
```

Dependencies

An X.25 address must have a minimum of four digits.
 The X.25 address must already exist as an X.25 destination.
 The X.25 address cannot be assigned to an X.25 route.

Notes

None

Output

```
dlt -x25-dstn:xaddr=205255864567721

rlghncxa03w 04-02-10 11:43:04 EST EAGLE 31.3.0
X.25 DSTN TABLE 45 % FULL
DLT-X25-DSTN: MASP A - COMPLTD
;
```

dlt-x25-rte**Delete X.25 Route**

Use this command to remove X.25 routes from the database.

Keyword: dlt-x25-rte

Related Commands: chg-x25-rte, ent-x25-rte, rtrv-x25-rte

Command Class: Database Administration

Parameters

:saddr= (mandatory)

The alias X.25 address assigned to the SS7 destination entity on the SS7 side of the circuit.

Range: 1-15 digits

:xaddr= (mandatory)

The X.25 address assigned to the X.25 destination entity on the X.25 side of the circuit.

Range: 1-15 digits

Example

dlt-x25-rte:xaddr=225255:saddr=133131

Dependencies

Each X.25 address must have at least four digits.

The combination of the two X.25 addresses must be in the X.25 Routing table.

Notes

None

Output

dlt-x25-rte:xaddr=225255:saddr=133131

```
rlghncxa03w 04-02-10 11:43:04 EST EAGLE 31.3.0
DLT-X25-RTE: MASP A - X.25 Route table 45% full
DLT-X25-RTE: MASP A - COMPLTD
;
```

enable-ctrl-feat**Enable Controlled Feature**

Use this command to enable a controlled feature that the customer has purchased.

NOTE: The “LNP (Local Number Portability) feature” is turned on when the LNP ported TNs quantity is greater than 0 in the rtrv-ctrl-feat command output. An LNP ported TNs quantity feature access key has been enabled and turned on.

Keyword: enable-ctrl-feat

Related Commands: chg-ctrl-feat, rtrv-ctrl-feat

Command Class: Database Administration

Parameters

:fak= (mandatory)

Feature Access Key. This parameter specifies the Feature Access Key for the feature.

Range: ayyyyyyyyyyyy

13 alphanumeric characters; the first character must be a letter.

The feature access key cannot contain any special characters, including spaces and dashes. Upper-case characters are mapped to lower case.

:partnum= (mandatory)

Part number. This parameter specifies the part number for the feature.

Range: 893000000 - 893999999

Do not include dashes in the 9-digit number.

Example

enable-ctrl-feat:partnum=893xxxxxx:fak=xxxxxxxxxxxxxxxxxx

Dependencies



CAUTION

CAUTION: Never install or initialize MCAP cards in card slots 1113 and 1115 after GPSM-II cards are provisioned in these slots. Attempting to initialize MCAP cards after GPSM-II cards have been provisioned in slots 1113 and 1115 will cause a system outage. Before replacing an existing GPSM-II card in slot 1113 or slot 1115, contact Tekelec Customer Service.

The system serial number must be locked in the database before you can enter this command for the feature (see the **ent-serial-num** command).

The feature access key must be valid for the specified feature part number and for the system serial number.

A feature cannot be enabled with this command when the feature has already been enabled with a temporary feature access key, a permanently On feature access key, or a feature access key for a quantity that is greater than the quantity specified in the command.

A temporary feature access key can be enabled only one time for a feature. After the temporary feature access key expires, you must purchase the feature before you can enable a permanent feature access key for the feature.

A temporary feature access key cannot be enabled for features that do not allow a temporary feature access key. The following features allow a temporary feature access key:

- All ISUP Normalization features
- LNP Short Message Service (LNP SMS)
- Prepaid SMS Intercept Phase I (PPSMS)
- Intermediate GTT Load Sharing (IGTTLS)
- G-Port Circular Route Prevention
- Command Class Management
- IP User Interface (Telnet)
- Network Security Enhancement
- Port Check for Mobile Originated SMS
- ISNR Variant-Quantity features
- EAGLE OA&M IP Security
- LNP ELAP Configuration
- ANSI-ITU-China SCCP Conversion
- 15 Minute Measurements

If any of the G-Flex, G-Port, INP, or EIR features are turned on in the system, the maximum number of DSM cards allowed in the system is 25. If the system is running only GTT, the maximum number of DSM cards allowed in the system is 32.

The GTT feature must be on before the IDP Screening for Prepaid feature can be enabled.

If a TSM card is present in the system, the IDP Screening for Prepaid feature cannot be enabled.

The **partnum** parameter value must be 9 digits, without any dashes or spaces. The first 3 digits are **893**. The next 6 digits must be in the range **0-9**.

A valid system serial number must be entered in the database before this command can be entered for the feature (see the **ent-serial-num** command).

The LNP ELAP Configuration feature and the WNP feature must be turned on before the LNP SMS feature can be enabled.

The GTT feature must be turned on before the following features can be enabled:

- XGTT Table Expansion
- ELAP LNP Configuration
- All LNP feature (LNP ported TNs) quantities
- LNP 150,000 LRNs
- LNP 300,000 NPANXXs

For the XGTT (269,999 to 400,000 entries) feature, all SCCP GPLs must be running on TSM cards that have at least a 586K processor, or DSM cards, or a combination of TSM and DSM cards.

The XGTT Table Expansion feature with 1,000,000 entries requires all SCCP GPLs to be running on DSM cards.

For the XMAP (2000 and 3000 entries) feature, all SCCP GPLs must be running on TSM cards or a combination of TSM and DSM cards.

The DSTN5000 feature bit for the 5000 Routesets feature must be turned on before the 6000 Routesets feature, the 7000 Routesets feature, or the 8000 Routesets feature can be enabled.

The 7000 Routesets feature and the 8000 Routesets feature cannot be enabled when more than 8000 alias point codes are already assigned in the system.

The LNP feature (an LNP ported TNs quantity), the LNP 150,000 LRNs feature, and the LNP 300,000 NPANXX feature cannot be enabled when the GPORT feature bit is turned on. The GPORT feature bit cannot be turned on when the LNP feature (an LNP ported TNs quantity), the LNP 150,000 LRNs feature, or the LNP 300,000 NPANXXs feature is enabled.

The LNP feature (an LNP ported TNs quantity), the LNP 150,000 LRNs feature, and the LNP 300,000 NPANXX feature cannot be enabled when the INP feature bit is turned on. The INP feature bit cannot be turned on when the LNP feature (an LNP ported TNs quantity), the LNP 150,000 LRNs feature, or the LNP 300,000 NPANXXs feature is enabled.

The LNP feature (an LNP ported TNs quantity), the LNP 150,000 LRNs feature, and the LNP 300,000 NPANXX feature cannot be enabled when the GFLEX P feature bit is turned on. The GFLEX feature bit cannot be turned on when LNP feature (an LNP ported TNs quantity), the LNP 150,000 LRNs feature, or the LNP 300,000 NPANXXs feature is enabled.

The LNP feature (an LNP ported TNs quantity) must be enabled before the LNP 150,000 LRNs feature or the LNP 300,000 NPANXX feature can be enabled.

DSM cards running the **vsccp** application are required when the LNP feature, the 150,000 LNP LRNs feature, the 300,000 LNP NPANXXs feature, and the VGTT feature are turned on together in the system.

The LNP ELAP Configuration feature must be enabled, and turned on with the **chg-ctrl-feat** command, before the features for the following quantities can be enabled:

- The LNP feature for a quantity equal to or greater than 24 million TNs

- The 150,000 LNP LRNs feature
- The 300,000 NPANXXs feature

The LNP feature for 4 million TNs requires all TSM cards with a minimum of 512MB of memory.

The LNP feature for 6 million TNs requires all TSM cards with a minimum of 768MB of memory.

The LNP feature for 8 million TNs requires all TSM cards with a minimum of 1GB of memory.

The LNP feature for 12 million TNs requires all TSM cards or DSM cards with a minimum of 1GB of memory.

The LNP feature for 24 million TNs requires all DSM cards with a minimum of 2GB of memory.

The LNP feature for 36 million TNs requires all DSM cards with a minimum of 3GB of memory.

The LNP feature for LNP ported TNs quantities of 48 million TNs or greater requires all DSM cards with a minimum of 4GB of memory.

The 150,000 LNP LRNs feature requires all DSM cards with a minimum of 2GB of memory.

The 300,000 LNP NPANXXs feature requires all DSM cards with a minimum of 2GB of memory.

The LNP feature for 2 million TNs requires at least TSM cards with a minimum of 256MB of memory.

The GPORT feature bit must be turned on before the G-Port Circular Route Prevent feature or the Prepaid SMS Intercept Ph1 feature can be enabled.

The GTT feature must be turned on before the following features can be enabled:

- EIR (Equipment Identity Register) feature
- GSM (GSM Map Screening) feature

The EIR (Equipment Identity Register) feature cannot be enabled when the INP feature is turned on. The INP feature cannot be turned on when the EIR feature is enabled.

The EIR (Equipment Identity Register) feature cannot be enabled when the LNP feature is turned on. The LNP feature cannot be turned on when the EIR feature is enabled.

The EIR (Equipment Identity Register) feature cannot be enabled if any ASM cards or TSM cards are in the system. All DSM cards in the system must be at least 2 GB DSMs before the EIR feature can be enabled.

The ANSI-ITU-China SCCP Conversion feature cannot be enabled if the SCCPCNV (SCCP Conversion) feature bit or the TCAPCNV (TCAP Conversion) feature bit is turned on.

The ANSI-ITU-China SCCP Conversion feature requires TSM cards or DSM cards in the system.

The GSM Map Screening (GSM) feature must be turned on before the Enhanced GSM Map Screening (EGSM) feature can be enabled.

The Enhanced GSM Map Screening (EGSM) feature requires at least DSM cards that run the **vsccp** application.

The Enhanced GSM Map Screening (EGSM) feature must be turned on before the MTP MAP Screening feature can be enabled.

The Measurements Platform feature must be turned on and the Measurements Platform collection function must be enabled (see the **chg-measopts:platformenable=on** parameter) before the MTP MAP Screening feature can be enabled (at least one MCPM card must be active).

The Spare Point Code Support feature cannot be enabled if TALI sockets have been provisioned for an IPGWI card.

The 7000 Routesets and 8000 Routesets quantity keys can not be enabled if the number of provisioned alias destinations is greater than 8000.

The G-Port feature must be turned on before the following features can be enabled:

- Portability Check for Mobile Originated Short Message Service (MNP SMS)
- G-Port Circular Route Prevention
- Prepaid Short Message Service Intercept Phase 1 (PPSMS)
- ISUP NP with EPAP
- GSM MAP SRI Redirect for Serving HLR

The GWS (Gateway Screening) feature must be turned on before the ISUP NP with EPAP feature can be enabled.

The following features cannot be enabled if the **ansigflex** system option is enabled (see the **chg-stpopts** command):

- Equipment Identity Register (EIR)
- G-Port
- INP

Before an LNP ported TNs quantity greater than 96 million numbers can be enabled, an ELAP system that supports a quantity greater than 96 million numbers must be available to the EAGLE 5 ISS.

- The ELAP software must be at version 4.0 to support LNP ported TNs quantities greater than 96 million numbers and up to 120 million numbers.
- The ELAP software must be at version 5.0 or greater to support LNP ported TNs quantities greater than 120 million numbers. A quantity greater than 120 million numbers cannot be enabled until the ELAP is upgraded to the required software level, and the appropriate ELAP commands are issued to convert the 120 Million LNP Numbers database structure to the data compaction structure for more than 120 million numbers.

The **rept-stat-mps** command can be entered at the EAGLE 5 ISS to determine the ELAP software version.

The Flexible GTT Load-Sharing feature requires at least a DSM card with VSCCP application.

Before LNP ported TNs quantities greater than 96 million numbers can be enabled, an ELAP system must be available to validate its software version to the EAGLE 5 ISS.

The Enhanced GTT (EGTT) feature must be turned on before the Origin-based SCCP Routing feature can be enabled.

The Origin-based SCCP Routing feature cannot be enabled if the SCCP application is provisioned with an ASM card.

Notes

XGTT or XMAP (GTT or MAP Table Increase) Feature

After the XGTT feature is enabled, the feature cannot be disabled or turned off.

After the XMAP feature is enabled, the feature cannot be disabled or turned off.

1500 Links and 2000 Links Support

After the 1500 Links feature or the 2000 Links Support feature is enabled, the feature cannot be disabled or turned off.

IPGWx Signaling TPS

This quantity is the total maximum transactions per second (TPS) allowed for all IPGWx links in the system.

An alarm appears when the actual system IPGWx TPS exceeds a threshold that is a configurable percent of this maximum (see the **chg-sg-opts** command). The default threshold is 80% of the enabled maximum IPGWx Signaling TPS. The system clears the alarm when the system IPGWx TPS drops below the configured threshold.

A feature access key can be enabled for a greater IPGWx Signaling TPS quantity, but not for a smaller quantity. A default quantity of 200 TPS is enabled in the system.

A temporary feature access key is not allowed for the IPGWx Signaling TPS feature.

SE-HSL SLK Capacity

Table 5-37 lists the total number of signaling links that can be assigned to SE-HSL cards in the system when each SE-HSL SLK Capacity quantity feature access key is enabled.

Table 5-37. SE-HSL SLK Capacity Feature Quantities

Part Number	Maximum SE-HSL Links Allowed in the System
893-0130-01	4
893-0130-02	8
893-0130-03	16
893-0130-04	32
893-0130-05	40
893-0130-06	48
893-0130-07	56
893-0130-08	64

LNP 228 Million TNs, LNP 300,000 NPANXXs, LNP 150,000 LRNs, and LNP ELAP Configuration Features

Table 5-38 lists the types and memory capacity for the SCCP cards required by each LNP quantity feature.

Table 5-38. Minimum Hardware Required for LNP Quantity Features

Object / Capacity	Minimum Hardware	Feature Access Key
2 Million TNs	256 MB TSM	893-0110-01
4 Million TNs	512 MB TSM	893-0110-02
6 Million TNs	768 MB TSM	893-0110-03
8 Million TNs	1 GB TSM	893-0110-04
12 Million TNs	1 GB TSM or 1 GB DSM	893-0110-05
24 Million TNs	2 GB DSM	893-0110-06

Table 5-38. Minimum Hardware Required for LNP Quantity Features

Object / Capacity	Minimum Hardware	Feature Access Key
36 Million TNs	3 GB DSM	893-0110-07
48 Million TNs	4 GB DSM	893-0110-08
60 Million TNs	4 GB DSM	893-0110-09
72 Million TNs	4 GB DSM	893-0110-10
84 Million TNs	4 GB DSM	893-0110-11
96 Million TNs	4 GB DSM	893-0110-12
108 Million TNs	4 GB DSM	893-0110-13
120 Million TNs	4 GB DSM	893-0110-14
132 Million TNs	4 GB DSM	893-0110-15
144 Million TNs	4 GB DSM	893-0110-16
156 Million TNs	4 GB DSM	893-0110-17
168 Million TNs	4 GB DSM	893-0110-18
180 Million TNs	4 GB DSM	893-0110-19
192 Million TNs	4 GB DSM	893-0110-20
204 Million TNs	4 GB DSM	893-0110-21
216 Million TNs	4 GB DSM	893-0110-22
228 Million TNs	4 GB DSM	893-0110-23
150,000 NPANXXs	Any TSM or 1 GB DSM	893-0094-01
300,000 NPANXXs	2 GB DSM	893-0094-02
100,000 LRNs	Any TSM or 1 GB DSM	893-0105-05
150,000 LRNs	2 GB DSM	893-0105-01

The Flexible GTT Load Sharing feature allows a PC or PC/SSN combination to be provisioned in multiple load-sharing relationships for post-GTT load sharing of intermediate and final GTT traffic. Load sharing for intermediate GTT traffic requires the Intermediate GTT Load Sharing feature, which can be run in conjunction with the Flexible GTT Load Sharing feature. Intermediate GTT load sharing is performed through the MRN table, and the GTT destination is a PC. If both the Intermediate and Flexible GTT Load Sharing features are on, different load-sharing relationships can be defined between the same set of PCs, and different sets of destinations can contain the same PCs.

Load sharing for final GTT traffic is performed through the MAP table, and the GTT destination is a PC/SSN combination. If the Flexible GTT Load Sharing feature is on, different load-sharing relationships can be defined between the same set of PC/SSNs, and different sets of destinations can contain the same PC/SSN combinations.

Output

```
enable-ctrl-feat:partnum=893xxxxxx:fak=xxxxxxxxxxxxxx
rlghncxa03w 06-06-01 16:40:40 EST EAGLE 35.0.0
ENABLE-CTRL-FEAT: MASP A - COMPLTD
;
```

ent-acg-mic**Enter ACG Manually Initiated Control**

Use this command to assign Automatic Call Gapping (ACG) controls to certain queries. The control can apply to all queries or to specific query services and called party digits. If the EAGLE 5 ISS LNP query service receives a query to which a control applies, then the EAGLE 5 ISS sends an ACG component, encoded as configured, with the response.

Keyword: ent-acg-mic

Related Commands: chg-acg-mic, dlt-acg-mic, rept-stat-lnp, rtrv-acg-mic

Command Class: Database Administration

Parameters

:drtn= (mandatory)

Duration index. The amount of time that the ACG is in effect. This number is mapped to a time value at the LNP node. Refer to the chapter on Automatic Call Gapping configuration in the *LNP Feature Activation Guide* for a description of the use of the duration index.

Range: 1-13

Default: The current value

:aintvl= (optional)

AIN interval index

Range: 1-15

Default: The current value

:dgts= (optional)

Digits

Range: 3-10 digits

000-999, 000000-9999999999

:intvl= (optional)

IN Interval index. The amount of time between ACGs. This number is mapped to a time value for the LNP node. Refer to the chapter on Automatic Call Gapping configuration in the *LNP Feature Activation Guide* for a description of the use of the gap interval index.

Range: 0-15

Default: Current value

:nd= (optional)

Number of digits

Range: 3, 6-10

Default: The current value

:serv= (optional)

Query service

Range: ain, in

:type= (optional)

Type of control

Range: all, sd

Default: sd

Example

```
ent-acg-mic:type=all:nd=6:drtn=6:intvl=2:aintvl=7
ent-acg-mic:serv=ain:dgts=9194602132:drtn=13:aintvl=1
ent-acg-mic:type=sd:serv=in:dgts=919:drtn=8:intvl=3
```

Dependencies

If the **type=all** parameter is specified, the optional parameters **nd**, **intvl**, and **aintvl** must be specified.

If the **type=all** parameter is specified, the optional parameters **serv** and **dgts** cannot be specified.

If the **type=sd** parameter is specified, the optional parameters **serv** and **dgts** must be specified.

If the **type=sd** parameter is specified, the optional parameter **nd** cannot be specified.

If the **serv=in** parameter is specified, the optional parameter **aintvl** cannot be specified.

If the **serv=ain** parameter is specified, the optional parameter **intvl** cannot be specified.

If the **serv=in** parameter is specified, the optional parameter **intvl** must be specified.

If the **serv=ain** parameter is specified, the optional parameter **aintvl** must be specified.

The **dgts** parameter value must be specified as 3 or 6–10 digits.

The **nd** parameter value must be 3 or 6–10.

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before this command can be entered.

If the **type=all** parameter is specified, a manually initiated control (MIC) with the **type=all** parameter must not already exist.

If the **type=sd** parameter is specified, a MIC with the same service and digits must not already exist.

A maximum of 256 **type=sd** MICs are allowed.

Notes

None

Output

```
ent-acg-mic:type=all:nd=6:drtn=6:intvl=2:aintvl=7
rlghncxa03w 04-02-28 08:50:12 EST EAGLE 31.3.0
ACG MIC table is (11 of 256) 4% full of type SD
ENT-ACG-MIC: MASP A - COMPLTD
;
```

ent-acg-noc**Enter ACG Node Overload Control**

Use this command to enter the values for the automatic call gapping (ACG) controls that you want to send when you reach the specified node overload level. The definition is comprised of the threshold LNP query rates for node overload levels and the values for the ACG to be sent when at the level. If a level is not defined, it is not used. Level 10 is predefined.

Keyword: ent-acg-noc

Related Commands: chg-acg-noc, dlt-acg-noc, rept-stat-lnp, rtrv-acg-noc

Command Class: Database Administration

Parameters

:drtn= (mandatory)

Duration index. The amount of time that the ACG is in effect. This number is mapped to a time value at the LNP node. Refer to the chapter on Automatic Call Gapping configuration in the *LNP Feature Activation Guide* for a description of the use of the duration index.

Range: 1-13

Default: The current value

:intvl= (mandatory)

Interval index. The amount of time between ACGs. This number is mapped to a time value for the LNP node. Refer to the chapter on Automatic Call Gapping configuration in the *LNP Feature Activation Guide* for a description of the use of the gap interval index.

Range: 0-15

Default: Current value

:lvl= (mandatory)

Overload level.

Range: 1-9

:qr= (mandatory)

Query rate. The number of LNP queries, which define a particular overload level, in a 30-second period.

Range: 1-2147483647

:and= (optional)

AIN number of digits. The number of digits in the global title address of an AIN query.

Range: 6, 10

Default: 6

:ind= (optional)

IN number of digits. The number of digits in the global title address of an IN query.

Range: 6, 10

Default: 6

Example

```
ent-acg-noc:lvl=3:qr=300000:and=10:ind=6:drtn=6:intvl=3
```

Dependencies

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before the **ent-acg-noc** command can be entered.

Either **6** or **10** must be specified for the **and** parameters.

The specified overload level must not already be defined.

Either **6** or **10** must be specified for the **ind** parameters.

Notes

None

Output

```
ent-acg-noc:lvl=3:qr=300000:and=10:ind=6:drtn=6:intvl=3
rlghncxa03w 04-02-28 08:50:12 EST EAGLE 31.3.0
ENT-ACG-NOC: MASP A - COMPLTD
;
```

ent-appl-rtkey**Enter Application Route Key Table**

Use this command to configure static entries in the Routing Key table, which associates a routing key with a socket name.

There are three types of routing keys, as follows:

- DPC, SI, SSN routing keys, which are used to route SCCP messages
- DPC, SI routing keys, which are used to route non-SCCP and non-ISUP messages
- DPC, SI, CIC routing keys, which are used to route ISUP messages

Keyword: ent-appl-rtkey

Related Commands: dlt-appl-rtkey, rtrv-appl-rtkey

Command Class: Database Administration

Parameters

NOTE: See “Point Code Formats and Conversion” for a detailed description of point code formats, rules for specification, and examples.

:asname= (mandatory)

Application Server (AS) name assigned to this routing key.

Range: ayyyyyyyyyyyyyy

Up to 15 alphanumeric characters; the first character must be a letter

:sname= (mandatory)

Socket name as provisioned in the Socket table and associated with this routing key.

Range: ayyyyyyyyyyyyyy

Up to 15 alphanumeric characters; the first character must be a letter

:cice= (optional)

The end range of circuit identification codes assigned to the routing key.

Range: 0-4294967295

See Table A-4 for valid CIC values for specified SI and MSU types.

:cics= (optional)

The start range of circuit identification codes assigned to the routing key. This parameter is valid only if **si=4, 5, or 13** and is required if **si=4, 5, or 13** and **type=full**.

Range: 0-4294967295

See Table A-4 for valid CIC values for specified SI and MSU types.

:dpc= (optional)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: dpca

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001–005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006–255**.

The point code **000-000-000** is not a valid point code.

:dpc/dpca/dpci/dpcn/dpcn24= (optional)

Destination point code.

:dpci= (optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:dpcn= (optional)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:dpcn24= (optional)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:opc= (optional)

ANSI originating point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Synonym: **opca**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:opc/opca/opci/opcn/opcn24= (optional)

Originating point code. This parameter is valid only if **si=4**, **5**, or **13**, and is required when **si=4**, **5**, or **13** and **type=full**.

:opci= (optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*)

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:opcn= (optional)

New ITU national originating point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npfmt** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:opcn24= (optional)

24-bit ITU national originating point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:rcontext= (optional)

Routing Context. The routing context parameter can be used to assign a new routing context to a routing key. The routing context uniquely identifies the routing key.

- Routing context is mandatory for routing keys associated with SUA Application Servers.
- Routing context is optional for routing keys associated with M3UA Application Servers.
- Routing context is invalid for routing keys associated with TALI connections.

Range: 0-4294967295

:si= (optional)

Service indicator.

Range: 1-15

0-15 or equivalent text values:

Number = Text—Description

0 = **snm**—Signaling network management messages

1 = **regtest**—Signaling network testing and maintenance regular

2 = **spltest**—Signaling network testing and maintenance special

3 = **sccp**—SCCP

4 = **tup**—Telephone user part

5 = **isup**—ISDN user part

13 = **qbicc**

:ssn= (optional)

Subsystem number. This parameter is valid only if **si=3** and is required if **si=3** and **type=full**.

Range: 0-255

:type= (optional)

The type of routing key.

Range: full, partial, default

Default: full

Example

```
ent-appl-rtkey:dpc=123-230-245:si=3:ssn=250:sname=coname
```

```
ent-appl-rtkey:dpcn=2000-aa:si=5:sname=socket01:opcn=2001-aa:cics=1:cice=1000
```

```
ent-appl-rtkey:dpcn24=10-100-10:si=5:sname=socket01:opcn24=10-100-11:cics=1:cice=1000
```

```
ent-appl-rtkey:asname=suaas1:dpc=8-8-8:si=3:ssn=5:rcontext=100
```

```
ent-appl-rtkey:asname=suaas2:dpc=8-8-8:si=3:type=partial:rcontext=101
```

```
ent-appl-rtkey:asname=suaas3:dpc=8-8-8:type=partial:rcontext=102
```

```
ent-appl-rtkey:asname=suaas4:si= 3:type=partial:rcontext=103
```

```
ent-appl-rtkey:asname=suaas5:type=default:rcontext=104
```

```
ent-appl-rtkey:asname=m3uaas1:dpc=8-8-9:si=5:opc=3-3-3:cics=1:cice=100:rcontext=200
```

```
ent-appl-rtkey:asname=m3uaas2:dpc=8-8-9:si=5:opc=3-3-3:type=partial:rcontext=201
```

```
ent-appl-rtkey:asname=m3uaas3:dpc=8-8-9:si=5:type=partial:rcontext=202
```

```
ent-appl-rtkey:asname=m3uaas4:dpc=8-8-9:type=partial:rcontext=203
```

```
ent-appl-rtkey:asname=m3uaas5:si= 5:type=partial:rcontext=204
```

```
ent-appl-rtkey:asname=m3uaas6:type=default:rcontext=205
```

```

ent-appl-
rtkey:dpci=s-3-11-1:si=5:opci=s-4-11-1:cics=1:cice=1000:asname=as
itu
ent-appl-
rtkey:dpc=123-230-246:si=5:sname=sock1:opc=123-222-123:cics=1:cic
e=1000
ent-appl-rtkey:dpc=1-1-1:si=3:asname=as1:ssn=255
ent-appl-rt-appl-
rtkey:dpci=3-11-1:si=3:opci=4-11-1:cics=1:cice=1000:asname=asitu:
rcontext=7

```

Dependencies

The **srkq** parameter value in the **chg-sg-opts** command limits the maximum number of static routing keys that can be provisioned using the **ent-appl-rtkey** command.

- For **ss7ipgw** and **ipgwi** applications running on dual-slot DCM cards (870-1945-xx), there is a limit of 1000 routing keys in the system. The **chg-sg-opts** command will not allow the **srkq** parameter to be set to a value greater than 1000.
- For **ss7ipgw** and **ipgwi** applications running on SSED CM cards (870-2732-xx), there is a limit of 2500 routing keys in the system. See the **chg-sg-opts** command for parameter values that allow 2500 routing keys to be defined in the system.

The **ssn** parameter is valid only when the **si=3** (or **sccp**) parameter is specified. When the **si=3** (or **sccp**) parameter is not specified, the **ssn** parameter cannot be specified.

The value entered for the starting circuit identification code (**cics**) must be less than or equal to the value entered for the ending circuit identification code (**cice**).

The ISUP routing-over-IP feature must be turned on before a DPC/SI/CIC routing key to route ISUP messages can be specified. The ISUP routing-over-IP feature can be turned on by entering the command **chg-feat:ipisup=on**.

A circuit identification code range (**cics** to **cice**) cannot be specified that overlaps an existing routing key.

When the **si=4, 5, or 13** (or **tup, isup, or qbicc**) parameter is specified, the **opc**, **cics**, and **cice** parameters are required. The **opc**, **cics**, and **cice** parameters can be specified only if the **si=4, 5, or 13** parameter is specified. See Table A-4 for valid **cic** and **si** values for MSU types.

Partial point codes are not allowed; no asterisks can be specified in the routing key in the command.

Mixed point code types are not allowed; the types for the **opc** and **dpc** parameters must match.

A DPC/SI routing key must be specified when the DPC is ANSI and the **si=4** parameter is specified (TUP is used only in an ITU network).

Either the **asname** parameter or the **sname** parameter must be specified in this command.

TALI sockets cannot be specified (**sname**) for IPGWI cards when the Spare Point Code Support Feature is enabled.

When the **type=full** parameter is specified, the **dpc** and **si** parameters must also be specified.

When the **type=default** parameter is specified, the **sname** parameter is the only other parameter allowed.

The group codes for the **dpc** and **opc** parameter values must match when both parameters are entered in the command.

The **rcontext** parameter must be specified for routing keys that are associated with SUA Application Servers.

The specified **rcontext** parameter value must not already exist in the database.

If specified, the service indicator parameter must be **si=3** for routing keys that are associated with SUA Application Servers.

An AS cannot be simultaneously assigned to a routing key with routing contexts and routing keys without routing context.

To assign an M3UA or SUA association to multiple routing keys with routing context, the M3UA/SUA association must be assigned to more than one AS and each AS must be assigned to a routing key with routing context.

The AS name and parameters specified for a routing key must use an address format that is valid for the adapter type used by the ASP associations assigned to the AS.

Only the **sname**, **asname**, and **rcontext** parameters are allowed for a default routing key.

The spare point code prefix (**s-**) cannot be specified for routing key point codes in routing keys when the **sname** parameter is specified for TALI connections.

The following four types of partial routing keys are supported:

- DPC/SI/OPC (ignore CIC) can be used as a partial match key for CIC- based traffic.
- DPC/SI (ignore all other fields) can be used as a partial match key for CIC- based traffic or SCCP traffic.
- DPC only (ignore all other fields) can be used as a partial match for any type of traffic.
- SI only (ignore all other fields) can be used as a partial match for any type of traffic.

The DPC entered cannot be an APC or SAPC for an IPGWx linkset. Routing keys cannot be provisioned for the fake adjacent node.

Notes

The Routing Key table associates a routing key with a socket name or an Application Server (AS).

The routing key can be associated with up to 16 socket names or with 1 AS.

The originating point code (**opc**) and destination point code (**dpc**) must not specify a cluster route.

Group codes are required for ITU-N point codes and spare point codes (DPCN/OPCN) when the ITU Duplicate Point Code feature (ITUDUPPC) is turned on, and not allowed when the feature is off.

Routing key attributes for normalization and PSTN presentation will be set to default values (**pstncat=0, pstnid=0, norm=0**). Use the **chg-appl-rtkey** command to change routing key attributes.

Routing context is a routing key parameter that uniquely identifies routing keys. Routing context is mandatory for routing keys associated with SUA Application Servers, optional for routing keys associated with M3UA Application Servers, and invalid for routing keys associated with TALI connections. An AS cannot be simultaneously assigned to routing keys with routing contexts and routing keys without routing contexts.

An AS cannot be simultaneously assigned to a routing key with routing contexts and routing keys without routing contexts.

An AS can be associated with multiple routing keys that do not contain routing context. An AS can be associated with only 1 routing key with routing context. To assign an M3UA or SUA association to multiple routing keys with routing context, the M3UA/SUA association must be assigned to more than one AS and each AS must be assigned to a routing key with routing context.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-).

Output

```
ent-appl-rtkey:dpcn=2000-AA:si=5:sname=socket01:opcn=2001-  
AA:cics=1:cice=1000  
    rlgncxa03w 05-05-17 15:35:05 EST    EAGLE 34.0.0  
    ENT-APPL-RTKEY: MASP A - COMPLTD  
;
```

ent-appl-sock

Enter Application Socket

Use this command for the **iplim**, **iplimi**, **ss7ipgw**, or **ipgwi** application to configure the Socket table, which is used to associate the local host/local port to a remote host/remote port.

Keyword: ent-appl-sock

Related Commands: chg-appl-sock, dlt-appl-sock, rtrv-appl-sock

Command Class: Database Administration

Parameters

:lhost= (mandatory)

Local host name. The logical name assigned to the local host device.

[illegible]

a-z, A-Z, 0-9, -, .

Any string of characters beginning with a letter and comprising up to 60 characters in length

:sname= (mandatory)

Name of socket. The routing key table and maintenance commands use these names to reference individual sockets.

Range: *ayyyyyyyyyyyyyyy*

Up to 15 alphanumeric characters; the first character must be a letter

:lport= (optional)

The TCP port number for the local host.

Range: 1024-65535

System

Default: 0

:port= (optional)

The signaling link associated with this socket.

Range: a, b, a1, b1, a2, b2, a3, b3

Not all card types support all **port** parameter values.

See Table A-1 for valid **port** parameter range values for each type of card that can have signaling links.

Default: a

:rhost= (optional)

Remote host name. The logical name assigned to the remote host device.

[illegible]

a-z, A-Z, 0-9, -, . (any string of characters beginning with a letter and comprising up to 60 characters in length)

:rport= (optional)

The TCP port number of the remote host.

Range: 1024-65535

System
Default: 0

Example

```
ent-appl-sock:sname=socket1:lhost=gw105.nc.coname.com:lport=1030:rhost=gw100.nc.tekelec.com:rport=1030
```

Dependencies

The **port** parameter is used to associate a socket with a signaling link.

- Only port **a** is valid on cards that execute the **ss7ipgw** or **ipgwi** application.
- Ports **a** and **b** are valid on dual-slot DCM cards or SSEDCCM cards that execute the **iplim** or **iplimi** application and support 2 point-to-point links.
- Ports **a**, **b**, **a1**, **b1**, **a2**, **b2**, **a3**, and **b3** are valid only on SSEDCCM cards that execute the **iplim** or **iplimi** application and support 8 point-to-point links.

The allowed maximum is 2 sockets per local host on DCM or SSEDCCM IPLIMx cards that support 2 point-to-point links, and 8 sockets per local host on SSEDCCM IPLIMx cards that support 8 point-to-point links. (IPLIMx refers to cards that execute the **iplim** or **iplimi** application.)

The allowed maximum is 1 socket per signaling link on IPLIMx cards.

The allowed maximum is 50 sockets per local host on SS7IPGW or IPGWI cards.

The allowed maximum is 4000 IP connections per system.

TALI sockets cannot be defined for IPGWI cards when the Spare Point Code Support Feature is enabled.

The socket name (**sname**) must be unique (not already used).

The specified local host name must exist in the IP Host table.

The **rhost** value must exist in the IP Host table.

To assign a socket on an IPLIMx card for a local host, the signaling link associated with the signaling link port must have its **ipliml2** value set to **saaltali**.

The **lhost** parameter must be provisioned in the IP Host table as local to this EAGLE 5 ISS.

If the entered **lhost** corresponds to an IP address associated with the B Ethernet Interface hosted by a present dual-slot DCM card, an error will be generated. If the entered **lhost** corresponds to an IP address associated with the B Ethernet Interface hosted by a provisioned but not present dual-slot DCM card, the card will be auto-inhibited upon insertion of the card. If an SSEDCCM card is inserted, the card will be allowed to boot.

If port **a1**, **b1**, **a2**, **b2**, **a3**, or **b3** is entered for an **iplim** or **iplimi** application and a non-SSEDCCM card is inserted, the card will be auto-inhibited upon insertion of the card. If an SSEDCCM card is inserted, the card will be allowed to boot.

Notes

Two sockets can be provisioned for each DCM card that runs an **iplim** or **iplimi** application and supports 2 point-to-point links. One socket is associated with signaling link port **a** and one with signaling link port **b**. Both sockets use the same physical interface connection and the same IP address.

Eight sockets can be provisioned for each SSEDCCM card that runs an **iplim** or **iplimi** application and supports 8 point-to-point links. One socket is associated with each of ports **a**, **b**, **a1**, **b1**, **a2**, **b2**, **a3** and **b3**.

The Socket table is used to associate the Local Host/Local Port to a Remote Host/Remote Port. This fully specifies the connection.

The Socket table also contains fields that receive default values even though there are no parameters in the **ent-appl-sock** command for populating these fields. These fields and their default values are:

- open=no
- alw=yes
- server=yes
- dcmps=10
- rexmit=fixed
- rtt=60

Use the **chg-appl-sock** command if you want to enter a value other than the default value or if the host names entered are too long to fit on the command with the other parameters.

Output

```
ent - appl -
sock: sname=socket1: lhost=gw105.nc.coname.com: lport=1030 : rhost=gw1
00.nc.coname.com: rport=1030
      rlgncxa03w 04-02-17 15:35:05 EST  EAGLE 31.3.0
      ENT-APPL-SOCK: MASP A - COMPLTD
;
```

ent-as

Enter Application Server

Use this command to create an Application Server (AS) as a logical entity to serve a specific routing key. This command enters a new AS into the AS table and assigns an M3UA or SUA SCTP association to it, or assigns an M3UA or SUA SCTP association to an existing AS.

Keyword: ent-as

Related Commands: chg-as, dlt-as, rtrv-as

Command Class: Database Administration

Parameters

:aname= (mandatory)

Name of the M3UA or SUA SCTP association.

Range: ayyyyyyyyyyyyyy

Up to 15 alphanumeric characters; the first character must be a letter.

:asname= (mandatory)

Name of the Application Server (AS).

Range: ayyyyyyyyyyyyyy

Up to 15 alphanumeric characters; the first character must be a letter.

:aspname= (mandatory)

Name of the Application Server Process (ASP).

NOTE: This parameter can no longer be used.

Range: ayyyyyyyyyyyyyy

Up to 15 alphanumeric characters; the first character must be a letter.

Example

ent -as : asname=asx : aname=asxp1

Dependencies

The specified **aname** must exist in the IPAPSOCK table.

The adapter layer for each association assigned to the AS must be defined.

SUA Application Servers must have routing keys with assigned routing contexts.

The service indicator must be **si=3** for routing keys that are associated with SUA Application Servers.

The adapter layer must be the same for all M3UA/SUA associations assigned to the AS.

IPLIMx connections cannot reside in an AS.

Notes

The DCM card has 16 MB of memory. Socket/association limits are based on card memory as is the ratio of associations to sockets. This ratio, known as the trade ratio, defines the number of sockets that are equivalent to one association with respect to memory consumption.

By default the AS recovery timer value is set to 200 ms when an AS is entered. This value can be changed at any time using the **chg-as** command. The new timer value will be used the next time the AS enters the AS-Pending state.

The trade ratio states the quantity of associations to sockets that may be provisioned on a certain card, as follows:

Trade Ratio = a:s

Where:

a=association : s=socket

Table 5-39 shows the maximum sockets/associations per DCM card.

Table 5-39. Maximum Sockets/Associations per Card

Card Type	Socket to Assoc Ratio	Max Sockets	Max Associations
DCM	8:1	50	4

Output

```
ent -as : asame=asx : aname=asxp1
  rlgncxa03w 05-05-17 15:35:05 EST  EAGLE 34.0.0
  ENT-AS: MASP A - COMPLTD
;
```

ent-as**Enter Application Server Process**

Use this command to enter an Application Server Process (ASP) and bind an SCTP association with it. An ASP contains an SCTP endpoint and can be configured to process signaling traffic.

NOTE: This command is obsolete.

Keyword: ent-as

Related Commands: chg-as, dlt-as, rtrv-as

Command Class: Database Administration

:adapter= (optional)

The adapter layer for this association.

Range: **m3ua, sua, m2pa**

Default: **m3ua** if the **lhost** is an IPGWx card and the adapter type is not specified.
m2pa if the **lhost** is an IPLIMx card and the adapter type is not specified.

:alhost= (optional)

Name of alternate local host. When specified, this parameter configures the SCTP association as a multi-homed endpoint.

Range: **abcdefghijklmnopqrstuvwxyzABCDEFGHIJKLMNOPQRSTUVWXYZ0-9-., or none**

a-z, A-Z, 0-9, -, . or none

Any string of characters beginning with a letter and comprising up to 60 characters in length

none—the **alhost** is not configured; the SCTP association is configured as a uni-homed endpoint

:link= (optional)

The signaling link port for this association.

Synonym: **port**

Range: **a, b, a1, b1, a2, b2, a3, b3**

Not all card types support all **link** parameter values.

See Table A-1 for valid **link** parameter range values for each type of card that can have assigned signaling links.

Default: **a**

:lport= (optional)

The SCTP port number for the Local Host.

Range: **1024-65535**

Default: **0**

:m2patset= (optional)

The M2PA timer set assigned to this association.

Range: **1-20**

Default: **1**

:port= (optional)

The signaling link port for this association.

Range: **a, b, a1, b1, a2, b2, a3, b3**

Not all card types support all **port** parameter values.

See Table A-1 for valid **link** parameter range values for each type of card that can have assigned signaling links.

Default: **a**

:rhost= (optional)

Name of Remote Host as defined in the IP Host table.

Range: **abcdefghijklmnopqrstuvwxyzABCDEFGHIJKLMNOPQRSTUVWXYZ0-9-.,**

a-z, A-Z, 0-9, -, .

Any string of characters beginning with a letter and comprising up to 60 characters in length

:rport= (optional)

The SCTP port number for the Remote Host.

Range: **1024-65535**

Default: **0**

:uaps= (optional)

Specifies the User Adapter Parameter Set used by the M3UA or SUA association for various SNM message and notification response options.

Range: 1-10

Example

ent -

assoc:aname=assoc1:lhost=gw105.nc.tekelec.com:lport=1030 :rhost=gw100.nc.tekelec.com:rport=1030:adapter=m3ua

Dependencies

The association name (**aname**) must already exist in the IP Socket/Association (IPAPSOCK) table.

The hostnames specified in the **lhost** and **alhost** parameters must refer to different IP addresses.

The IP host names specified in the **lhost** and **alhost** parameters must exist in the IP Host table and must be provisioned as local to this EAGLE 5 ISS.

The hostnames specified in the **lhost** and **alhost** parameters must refer to IP addresses on the same IP card.

Only **port=a** can be specified if the card is running the **ss7ipgw** or **ipgwi** application.

Only **port=a** or **port=b** can be specified for the **port** parameter value if the card is a dual-slot DCM card running the **iplim** or **iplimi** application.

Ports **a, b, a1, b1, a2, b2, a3, and b3** can be specified if the card is an SSEDCCM card running the **iplim** or **iplimi** application.

To assign an association on an IPLIMx card for a local host, the signaling link associated with the signaling link port must have its **ipliml2= m2pa**.

If the **m2patset** parameter is specified, the **adapter** parameter value must be **m2pa**.

You cannot assign an association with **adapter=sua** or **m3ua** for an **lhost** on a card running the **iplim** or **iplimi** application.

Association connection parameters (**lhost, rhost, lport, rport**) must be unique.

The card location for the card associated with the **lhost** and **alhost** must exist in the IP Link table.

If the entered **lhost** or **alhost** corresponds to an IP address associated with the B Ethernet Interface hosted by a present dual-slot DCM card, an error will be generated. If the entered **lhost** or **alhost** corresponds to an IP address associated with the B Ethernet Interface hosted by a provisioned but not present DCM card, the card will be auto-inhibited upon insertion. If an SSEDCCM card is inserted, the card will be allowed to boot.

The allowed maximum is 1 association per signaling link on IPLIMx cards.

There is a maximum of 50 connections (association-to-AS assignments + sockets) per Local Host on IPGWx cards.

A maximum of 4000 connections (association-to-AS assignments + sockets) are allowed per system.

Notes

The IPAPSOCK table is used to associate the Local Host/Local Port to a Remote Host/Remote Port. This fully specifies the connection.

SCTP associations can be configured as either uni-homed or multi-homed endpoints. Uni-homed endpoints are SCTP associations configured with the **lhost** parameter specified and the **alhost** parameter not specified. In this case, the **lhost** represents an IP address that corresponds to either the A or B network of the IP application card (see **chg-ip-lnk**). Multi-homed endpoints are SCTP associations configured with both the **lhost** and **alhost** parameters specified. In this case, the **lhost**

represents an IP address corresponding to one of the networks (A or B) of the IP card while the **alhost** represents an IP address corresponding to the other network of the same IP card.

If a valid **lhost** parameter is specified that equates to a valid IP address, the **lhost** maps directly to a card location in the IP Link table, which can then determine the card's application (IPLIMx or SS7IPGWx). If the application is an IPLIMx, two additional validation checks are made:

- The **adapter** parameter value must equal **m3ua** or **m2pa**.
- The **ipliml2** value for the IPLIMx signaling link must be the same as the association **adapter** parameter value.
- The **ipliml2** value for an IPLIMx signaling link cannot be set to **m3ua**.

If the determination of the application running on the card or the signal link cannot be performed when the **ent-assoc** command is executed, the check will be performed by the **chg-assoc** command.

An association with an adapter value of **m2pa** cannot be assigned to an SS7IPGW or IPGWI host.

There are fields in the IPAPSOCK table that receive default values even though there are no parameters on this command for changing those fields. If a different value is desired, the **chg-assoc** command must be used. The **chg-assoc** command can also be used if the hostnames are too long to fit on the command line with other parameters. The fields in question and their default values are:

- open=no
- alw=no
- rmode=lin
- rmin=120
- rmax=800
- rtimes=10
- cwmin=3000
- ver=rfc
- istrms=2
- ostrms=2

For the M2PA RFC feature, when the application is IPLIMx and the **adapter=m2pa** parameter is specified, the supported M2PA version is set to M2PA RFC by default.

Output

```
ent-
assoc:aname=assoc1:lhost=gw105.nc.tekelec.com:lport=1030 :rhost=gw
100.nc.tekelec.com:rport=1030:adapter=m3ua
      rlghncxa03w 04-02-17 15:35:05 EST  EAGLE 31.3.0
ENT-ASSOC: MASP A - COMPLTD
;
```

ent-card

Enter Card

Use this command to add a card to the database. The card type and application specifies the function assigned to the card.

Keyword: ent-card

Related Commands: dlt-card, init-card, rept-stat-card, rmv-card, rst-card, rtrv-card

Command Class: Database Administration

Parameters

NOTE: See Table A-7 for information on valid card types and applications for cards that use the ent-card command.

:appl= (mandatory)

The application for this card.

Range: xxxxxxxx

atmansi—This application is used by the LIM cards to support the high-speed ATM signaling link feature.

atmitu—This application is used by the E1 ATM cards to support the high-speed E1 ATM signaling link

ccs7itu—This application is used by the LIM cards for ITU-TSS MTP functionality. It is also used for the 2-port E1 card, the E1/T1 MIM card, the HC MIM card, and the E5-E1T1 card.

ebdablm—This application is used by the TSM card for enhanced bulk download.

ebdadcm—This application is used by the DCM card to transmit the LSMS LNP database to the EAGLE 5 ISS at high speed over an ethernet connection for enhanced bulk download.

eroute—This application is used by the STC card for EAGLE 5 Integrated Monitoring Support functions.

gls—This application is used by the TSM cards for downloading gateway screening to LIM cards.

ipgwi—This application is used by the DCM card for TCP/IP point-to-point connectivity for ITU point codes. The system allows a maximum of 64 cards to be assigned the **ipgwi** application.

iplim—This application is used by the DCM card for TCP/IP point-to-point connectivity for ANSI point codes.

iplimi—This application is used by the DCM card for TCP/IP point-to-point connectivity for ITU point codes.

ips—This application is used by the IPSM card for the IP User Interface feature.

mcp—This application is used by the MCPM card for the Measurements Platform feature.

sccp—This application is used by the TSMs for the global title translation application.

ss7ansi—This application is used by the LIM cards, the E1/T1 MIM card, the HC MIM card, and the E5-E1T1 card for the MTP functionality.

ss7gx25—This application is used by the LIM cards to support X.25 functionality.

ss7ipgw—The application software for TCP/IP point-to-multipoint connectivity. The system allows a maximum of 64 cards to be assigned the **ss7ipgw** application.

stplan—This application is used by the ACM card to support the STP LAN application.

vsccp—This application is used by the DSM card to support the G-Flex, G-Port, INP, and LNP ELAP Configuration features. If the G-Flex, G-Port, INP, or LNP ELAP Configuration feature is not turned on, and a DSM card is present, the VSCCP GPL processes normal GTT traffic.

vxwslan—This application is used by the DCM card to support the STP LAN application.

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118,

3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

:type= (mandatory)

The type of hardware (daughterboard) being added.

Range: **acmenet, dcm, dsm, ipsm, limatm, limds0, lime1atm, limocu, limv35, lime1, limt1, limch, mcpm, stc, tsm**

acmenet— Data link card for the STP LAN feature. The application type (**appl**) for this card type is **stplan**.

dcm— Database Communications Module card to support the STP LAN and enhanced bulk download features. The application types (**appl**) for this card type are **ebdadcm** and **vxwslan**. The DCM card also runs either the **ss7ipgw**, **iplim**, **iplimi**, or **ipgwi** application.

dsm— Database Services Module card to support the G-Flex, G-Port, and INP features. The application type (**appl**) for this card type is **vsccp**.

ipsm— IP Services Module card to support the IP User Interface feature. The application type (**appl**) for this card type is **ips**.

limatm— High speed ATM signaling link. The application type (**appl**) for this card type is **atmansi**.

limds0— Signaling link with DS0 interface. For a two-port LIM, the application types (**appl**) for this card type are **ss7ansi**, **ss7gx25**, and **ccs7itu**. For a multi-port LIM, the application type (**appl**) for this card type is **ss7ansi**.

lime1atm— High speed E1 ATM signaling link. The application type (**appl**) for this card type is **atmitu**.

limocu— Signaling link with OCU interface. The application types (**appl**) for this card type are **ss7ansi**, **ss7gx25**, and **ccs7itu**.

limv35— Signaling link with V.35 interface. The application types (**appl**) for this card type are **ss7ansi**, **ss7gx25**, and **ccs7itu**.

lime1— E1 card or E1/T1 MIM card or HC MIM card or E5-E1T1 card used as an E1 card. The application types (**appl**) for this card type are **ss7ansi** and **ccs7itu**.

limt1— E1/T1 MIM card, HC MIM card, or an E5-E1T1 card used as a T1 card. The application types (**appl**) for this card type are **ss7ansi** and **ccs7itu**.

limch— E1 card or E1/T1 MIM card defined as a Channel card. The application types (**appl**) for this card type are **ss7ansi** and **ccs7itu**.

mcpm— Measurement Collection and Polling Module card used for the Measurements Platform feature. The application type for this card type is **mcp**.

stc— Sentinel Transport card used for the EAGLE 5 Integrated Monitoring Support feature. The application type for this card type is **eroute**.

tsm— Memory card for GTT, gateway screening, and the enhanced bulk download feature. The application types (**appl**) for this card type are **gls**, **sccp** and **ebdablm**.

:force= (optional)

If the **force=yes** parameter is used to add a LIM to the database, it is recommended that you add the required number of SCCP cards to the database after the LIM is added to avoid the loss of global title translation traffic.

Range: **yes, no**

Default: **no**

Example

```
ent-card:loc=1301:type=limocu:appl=ss7gx25
```

```
ent-card:loc=1201:type=tsm:appl=sccp
```

```
ent-card:loc=1302:type=acmenet:appl=stplan
```

```

ent-card:loc=1303:type=limv35:appl=ss7ansi
ent-card:loc=1204:type=limatm:appl=atmansi
ent-card:loc=1205:type=dcn:appl=iplim
ent-card:loc=1207:type=dcn:appl=ss7ipgw
ent-card:loc=1206:type=limatm:appl=atmansi:force=yes
ent-card:loc=1208:type=limatm:appl=atmansi:force=no
ent-card:loc=1211:type=dsn:appl=vsccp
ent-card:loc=1304:type=dcn:appl=iplimi
ent-card:loc=1206:type=limds0:appl=ss7ansi
ent-card:loc=1212:type=dcn:appl=ipgwi
ent-card:loc=1214:type=mcpm:appl=mcp
ent-card:loc=1215:type=stc:appl=eroute
ent-card:loc=1305:type=lime1:appl=ss7ansi
ent-card:loc=1205:type=lime1:appl=ccs7itu
ent-card:loc=1206:type=limch:appl=ccs7itu
ent-card:loc=1301:type=limt1:appl=ss7ansi
ent-card:loc=1306:type=lime1atm:appl=atmitu
ent-card:loc=1307:type=ipsm:appl=ips

```

Dependencies

NOTE: The LNP feature is "turned on" when an LNP ported TNs quantity is shown in the **rtv-ctrl-feat** command output. An LNP quantity feature access key has been enabled and turned on. See the **enable-ctrl-feat** and **chg-ctrl-feat** commands for more information about turning on the LNP feature.

For features that are enabled with the **enable-ctrl-feat** command, use the **rtv-ctrl-feat** command to verify whether a feature is enabled or turned on.

For features that are turned on with the **chg-feat** command, use the **rtv-feat** command to display the **on** or **off** status of the features.

Table A-7 shows the card names, the only valid card type (**type** parameter) and application (**appl** parameter) combinations, the card part numbers, and the maximum number of cards allowed in the database.

The card location must not be **1113-1118**, or xy **09** and xy **10** where x is the frame and y is the shelf.

The specified shelf location must be provisioned and present in the frame.

The specified card location cannot already be provisioned in the database.

The DSM card must be inserted into an odd-numbered location. The n+1 slot next to the DSM card must be empty, where **n** is the odd-numbered location (for example, if the DSM is in location 1101, then the 1102 slot must be empty and unprovisioned).

The Measurements Platform feature must be turned on before the command can be entered for an MCPM card (**:type=mcpm:appl=mcp**).

If the LNP ELAP Configuration feature is turned on, the following **appl** parameter values cannot be specified: **sccp**, **ebdablm**, or **ebdadcm**.

The following features require DSM cards running the **vsccp** application: Flexible GTT Load Sharing, G-Flex, INP, G-Port, EIR, Enhanced GSM MAP Screening (EGMS), and LNP ELAP Configuration.

The n+1 slot next to the DSM or HC-MIM card must be empty, where **n** is the odd-numbered location (for example, if the DSM is in location 1101, then the 1102 slot must be empty and unprovisioned).

The GTT feature must be turned on to specify the **appl=sccp** parameter or the **appl=vscpp** parameter.

The GWS feature must be turned on to specify the **appl=gl**s parameter.

The X25G feature must be turned on to specify the **appl=ss7gx25** parameter.

The LAN feature must be turned on to specify the **appl=stplan** and **appl=vxwslan** parameters.

The LNP feature must be turned on to specify **appl=ebdablm** and **appl=ebdadcm** parameters.

The XGTT feature with 1 million entries requires the **vscpp** application running on DSM cards.

The Enhanced GSM MAP Screening (EGMS) feature requires DSM cards running the **vscpp** application.

Table A-7 lists the maximum number of cards of each card type and application that are allowed in the system.

If any of the G-Flex, G-Port, INP, or EIR features are turned on in the system, the maximum number of DSM cards allowed in the system is 25. If the system is running only GTT, the maximum number of DSM cards allowed in the system is 32.

When the IDP Screening for Prepaid feature is enabled, TSM cards cannot be provisioned.

TSM cards running the **sccp** application cannot be provisioned when the Flexible GTT Load-Sharing feature is enabled. The Flexible GTT Load-Sharing feature requires DSM cards running the **vscpp** application.

When the Origin-based SCCP Routing feature is enabled, a TSM card with an SCCP application can't be provisioned. A DSM card with a VSCCP application must be used.

Notes

ITU Environment

Each SCCP card can handle the following number of transactions-per-second: 850 for a TSM and 1700 for a DSM.

When the **ent-card** command is entered to add a card that requests service from either an SCCP or VSCCP card, the EAGLE 5 ISS adds the current TPS level to the estimated TPS level for the new card. The EAGLE 5 ISS uses the following values to derive the TPS estimate: 53 for low-speed links (cards provisioned as SS7ANSI, CCS7ITU or SS7GX25 cards), 480 for ATM, and 1000 for IPLIM cards. The EAGLE 5 ISS then compares the sum to a user-configured threshold (SCCP TPS Threshold) that is set using the **chg-th-alm** command. The purpose of the SCCP TPS threshold is to generate an alarm if the threshold is exceeded. The SCCP TPS threshold also triggers an error message if the **ent-card** command is issued and the resulting TPS level (the current TPS plus the estimated TPS for the new card) would be greater than the configured threshold:

E3715: Cmd Rej - Insufficient #SCCP cards to support LIM - use FORCE=YES
The **force** parameter can be specified to add the card even if its addition would exceed the SCCP TPS threshold. If the **force=yes** parameter is specified, the command is accepted but the following warning message appears:

WARNING: System current rated TPS unable to support additional SS7 card = use FORCE=YES.

If the **force=yes** parameter is specified, it is recommended that the required number of SCCP cards be added to the database after the SS7 card is added. This action avoids the loss of GTT traffic. Another option is to add additional SCCP cards or to increase the SCCP TPS threshold, and then add the SS7 card. This action prevents the alarm from being triggered.

For additional information on using the **force** parameter, see Chapter 4, "System Administration" of the *Database Administration Manual - System Management*.

If the G-Flex, G-Port, INP or LNP ELAP Configuration feature is turned on, the system cannot contain a mix of SCCP and VSCCP card types.

ANSI Environment

In an ANSI environment with only the G-Flex feature turned on, only DSMs in the system and the **ansigflex** system option enabled, each VSCCP card can handle up to 1700 TPS.

The provisioning method of an MPL or MPL-T (multi-port LIM) and a two-port LIM is the same. The two-port LIM supports the LIMDS0, LIMOCU, or LIMV35 interface, and the **appl** value can be **ss7ansi**, **ccs7itu**, or **ss8gx25**. The MPL cards support only the LIMDS0 interface, and the **appl** value must be **ss7ansi**. The MPL cards support 8 ports, namely **a**, **b**, **a1**, **b1**, **a2**, **b2**, **a3**, and **b3**. The **rtrv-card** command displays the status of all ports of the MPL cards.

Use the **ent-card** command to set the card type for a 2-port E1 card or Channel card (**lime1** or **limch**) in the database. Do not use the DIP switches, if any exist on the E1 card.

The **type=stc** and **appl=eroute** parameters apply only when the EAGLE 5 Integrated Monitoring Support (E5IS) feature is turned on.

The SSEDCCM card occupies only one slot in an EAGLE 5 ISS shelf; the dual-slot DCM cards take two slots. The provisioning rules for DCM/STC cards allow provisioning of any slot where a DCM or STC card can physically be inserted. The slot located immediately to the right of an SSEDCCM card be provisioned.

Output

```
ent-card: loc=1206: type=limds0: appl=ss7ansi
rlghncxa03w 06-06-01 11:11:28 EST EAGLE 35.0.0
ENT-CARD: MASP A - COMPLTD
;
```

ent-csl**Enter Common Screening List**

Use this command to enter new screening data into the Common Screening List (CSL). The Common Screening List commands are used to tailor certain types of general screening information to specific features.

Keyword: ent-csl

Related Commands: chg-csl, dlt-csl, rtrv-csl, rtrv-ctrl-feat

Command Class: Database Administration

Parameters

NOTE: Either the **ds** parameter or the **pc** parameter must be specified in the command.

Currently, no features use the **pc** parameter.

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:ds= (optional)

Digit string. This parameter specifies a unique string of digits that is used by the specified screening feature.

Either the **ds** parameter or the **pc** parameter must be specified. Both parameters cannot be specified in the same command

Range: 1-15 digits

Valid digits are **0-9**, **a-f**, **A-F**.

4 digits—IDP Screening for Prepaid **skts** list

1-15 digits—IDP Screening for Prepaid **insl** list

1-15 digits—Prepaid IDP Query Relay **gt** list

1-6 digits—Prepaid IDP Query Relay **ccndc** list

1-5 digits—Prepaid IDP Query Relay **delpfx** list

1-4 digits—Prepaid IDP Query Relay **skbcsm** list**:feature=** (optional)

Feature Name. This parameter specifies the name of the enabled screening feature for which the command is entered. Enter the name as it appears in the **rtrv-ctrl-feat** command description output example.

Enter enough of the feature name to make the name unique if two features begin with the same word or acronym.

Either the **pn** parameter or the **feature** parameter must be specified to identify the feature.

Range: ayyyyyyyyyyyyyyyyyyyyyy

1 alphabetic character followed by up to 24 optional alphanumeric characters, including spaces and special characters, enclosed in double quotation marks (" ").

Enter enough of the feature name to make the name unique if two features begin with the same word or acronym.

The following feature names are valid for this command:

- IDP Screening for Prepaid
- Prepaid IDP Query Relay

:list= (optional)

This parameter specifies the name of the Common Screening List associated with the feature.

The **list** parameter must be specified when the feature uses more than one type of Common Screening List.

Range: **delpfx, gt, skbcsm, ccnc, skts, insl**

delpfx— Delete Prefix List

gt— Global Title List

skbcsm— SK+BCSM List

ccnc— CC+NC List

skts— SK+TS List

insl— In Network Subscriber List

The following screening lists are valid for the indicated features:

- **skts, insl**—IDP Screening for Prepaid feature
- **ccnc, delpfx, gt, skbcsm**—Prepaid IDP Query Relay feature

:p1= (optional)

Parameter value 1. The parameter value is specific to the feature and list name that use this parameter.

Range: 1 digits

Valid digit values are:

0-1—For the Prepaid IDP Query Relay feature **delpfx** list, where: **0**=National, **1**=International

:p2= (optional)

Parameter 2. The parameter value is specific to the feature and list name that use this parameter. No feature currently uses this parameter.

:p3= (optional)

Parameter 3. The parameter value is specific to the feature and list name that use this parameter. No feature currently uses this parameter.

:pc= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Synonym: **pca**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:pc/pca/pci/pcn/pcn24= (optional)

Point code. Either the **ds** parameter or the **pc** parameter must be specified for the command. Currently, there are no common screening list features that use point codes.

:pci= (optional)

ITU international point code with subfields *zone-area-id*.

Range: **0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

The point code **0-000-0** is not a valid point code.

zone—**0-7**

area—**000-255**

id—**0-7**

:pcn= (optional)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npfnti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:pcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:pn= (optional)

Part number. This parameter specifies the 9-digit "893xxxxxx" part number of the feature for which the command is entered. The **rtrv-ctrl-feat** command description shows the part number in the command output example.

Either the **pn** parameter or the **feature** parameter must be specified to identify the feature.

Range: 893000000-893999999

The first 3 digits are **893**. Do not separate the digits with dashes or spaces.

The following part numbers are valid for this command:

- **893015501**—IDP Screening for Prepaid
- **893016001**—Prepaid IDP Query Relay

Example

```
ent-csl:pn=893015501:list=gt:ds=123456789abcdEF
```

```
ent-csl:feature="Prepaid IDP Query Relay":list=ccnc:ds=123456
```

```
ent-csl:feature="Prepaid IDP Query Relay":list=skbcsm:ds=4321
```

```
ent-csl:feature="Prepaid IDP Query  
Relay":list=delpfx:ds=54321:p1=0
```

```
ent-csl:feature="IDP Screening for Prepaid":list=skts:ds=36ab
```

```
ent-csl:pn=893015001:list=insl:ds=123456789bcdEF
```

Dependencies

An enabled feature must be specified using either a valid part number (the **pn** parameter) or feature name (the **feature** parameter). The specified feature must use a Common Screening List.

The specified feature name must be for a feature that uses a Common Screening List. The feature name must be specified as it appears in the **rtrv-ctrl-feat** command output example. Enough of the name must be specified to make the name unique when two features begin with the same word or acronym. The following features use a Common Screening List:

- IDP Screening for Prepaid
- Prepaid IDP Query Relay

The feature that is specified in the **feature** parameter must be enabled.

The **list** parameter must be specified for features that use more than one type of screening list.

The **list** parameter value must be valid for the specified screening list feature. The following **list** parameter values are valid for the indicated feature:

- **skts, insl**—IDP Screening for Prepaid
- **gt, ccnc, delpfx, skbcsm**—Prepaid IDP Query Relay feature

The length of the digit string that is specified for the **ds** parameter must be valid for the screening feature and list type.

A valid **ds** parameter value is required for the specified feature and list type.

The following parameters are allowed with the indicated common screening list type:

- **list=gt**—**ds** parameter
- **list=ccnc**—**ds** parameter

- **list=delpfx**—**ds** and **p1** parameters
- **list=skbcm**—**ds** parameter
- **list=skts**—**ds** parameter
- **list=insl**—**ds** parameter

The leading digit pattern in the specified digit string (the **ds** parameter) must be unique in the specified screening list for the indicated feature:

- **skts** and **insl** lists—IDP Screening for Prepaid feature
- **gt** and **ccnc** lists—Prepaid IDP Query Relay feature

The specified **ds** parameter value must be valid for the specified screening list (**list** parameter).

The value that is specified for a common screening list parameter must be valid for the specified screening list feature.

Each list table is allowed to contain a maximum number of entries:

- IDP Screening for Prepaid feature
 - **insl** list—50 entries
 - **skts** list—25 entries
- Prepaid IDP Query Relay feature
 - **ccnc** list—20 entries
 - **delpfx** list—10 entries
 - **gt** list—50 entries
 - **skbcm** list—25 entries

Notes

None

Output

```
ent-csl:pn=893016001:list=gt:ds=123456789abcdEF
tekelecstp 05-08-21 15:18:41 EST EAGLE 34.1.0
GT List table is (1 of 50) 2% full
ENT-CSL: MASP A - COMPLTD
;
ent-csl:pn=893015501:list=insl:ds=123456789bcdEF
tekelecstp 05-08-21 15:18:41 EST EAGLE 34.3.0
INSL List table is (1 of 50) 2% full
ENT-CSL: MASP A - COMPLTD
;
```

ent-cspc

Enter Concerned Signaling Point Code

Use this command to add signaling points to a current broadcast signaling point code group. These point codes are notified of the receipt by the system of subsystem-prohibited (SSP) and subsystem-allowed (SSA) SS7 SCCP management messages from an application at an adjacent signaling point and subsystem. This command can also be used to add new groups to the table.

NOTE: The command must be entered first with the group only (no point code); then the command must be entered again with the group code and the point code.

Keyword: ent-cspc

Related Commands: dlt-cspc, rtrv-cspc

Command Class: Database Administration

Parameters

NOTE: See “Point Code Formats and Conversion” for a detailed description of point code formats, rules for specification, and examples.

:grp= (mandatory)

Name of the group. This parameter is a character string associated with this broadcast list.

Range: ayyyyyy

1 alphabetic character followed by up to 7 alphanumeric characters

:pc= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Synonym: pca

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001–005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006–255.

The point code 000-000-000 is not a valid point code.

:pc/pca/pci/pcn/pcn24= (optional)

Point code.

This parameter is mandatory when the group and point code are entered, after the group has been entered.

:pci= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*)

Range: s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

:pcn= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**
 Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).
prefix—**s-**
nnnnn—**0-16383**
gc—**aa-zz**
m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:pcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range: **p-, 000-255**
 Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).
prefix—**p-**
msa—**000-255**
ssa—**000-255**
sp—**000-255**

Example

When the ANSI-ITU-China SCCP Conversion feature is not on, a CSPC group can contain point codes of only one network type.

ent-cspc:grp=grp01:pc=144-201-001

ent-cspc:grp=group02:pcn24=10-100-10

When the ANSI-ITU-China SCCP Conversion feature is on, a CSPC group can contain point codes of more than one network type. ITU-N and ITU-N24 point codes are not allowed in the same group.

ent-cspc:grp=grp01

ent-cpsc:grp=grp01:pc=240-3-55

ent-cspc:grp=grp01:pci=7-233-5

ent-cspc:grp=grp01:pci=s-7-233-5

ent-cspc:grp=grp01:pcn24=234-56-245

Dependencies

Reserved words (for example, “**none**”) cannot be used to name a group.

The specified CSPC Broadcast group name must not exist if a point code is not specified. If the specified group name does not exist, and a point code is not specified, a new group is created.

The Spare Point Code Support feature must be enabled before the spare point code prefix **s-** can be specified for an ITU-I or ITU-N point code.

If the CSPC group name and a point code are specified, the group name must exist in the database.

The specified point code must exist in the Routing Table and cannot already exist in the specified group.

The destination point code must be a full point code (*ni-nc-ncm*).

The concerned signaling point code must have been specified previously as a full point code destination, or it must be a member of a previously specified cluster.

A maximum of 2550 Concerned Signaling Point Code Broadcast groups can be defined.

A maximum of 96 point codes can be defined for each group.

When the ANSI-ITU-China SCCP Conversion feature is not on, the first point code to be entered defines the network type for the group. All subsequent point codes for the group must be for the same network type. For example,

- **pc** and **pca** cause the group to be an ANSI group
- **pci** causes the group to be an ITU international group
- **pcn** causes the group to be an ITU national group
- **pcn24** causes the group to be a 24-bit ITU national group, which is administered as a subset of an ITU national group

When the ANSI-ITU-China SCCP Conversion feature is on, the point codes in a group can be of different network types. The only exception is that **pcn** and **pcn24** point codes are not allowed in the same group.

Notes

To broadcast SSPs and SSAs to one or more mated applications, each mate's point code must be added to the CSPC group. Otherwise the broadcast is not sent to the mate.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-).

Output

The command must be entered with just the **grp** parameter to define a new group in the database.

ent - cspc : grp=grp01

```
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
ENT-CSPC: MASP A - COMPLTD
;
```

The command must specify an existing group and a point code to add the point code to the group.

ent - cspc : grp=grp01 : pc=144-201-001

```
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
ENT-CSPC: MASP A - COMPLTD
;
```

ent-dlk

Enter Data Link

Use this command to add a TCP/IP data link to the database. The TCP/IP data link is used to send copies of SS7 MSUs (selected by the gateway screening feature) to a remote host for further processing.

Keyword: ent-dlk

Related Commands: act-dlk, canc-dlk, dlt-dlk, rept-stat-dlk, rtrv-dlk, tst-dlk

Command Class: Database Administration

Parameters

:ipaddr= (mandatory)

The TCP/IP data link's IP address. This is a TCP/IP address expressed in standard dot notation. IP addresses consist of the system's network number and the machine's unique host number. An example IP address is **192.126.100.5**, where **192.126.100** is the network number and **5** is the machine's host number.

Range: 1-223, 0-255

4 numbers separated by dots

1-223—first number

0-255—the other three numbers

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

Example

ent-dlk:loc=1201:ipaddr=196.3.202.45

Dependencies

The shelf and card must be equipped.

The IP address (**ipaddr**) cannot be in the TCP/IP link table and cannot be a TCP/IP node.

The specified card cannot contain any data links.

The specified card's status must be out of service maintenance disabled (OOS-MT-DSBLD). Enter the **rept-stat-card** command to verify the state of the card.

The specified TCP/IP data link cannot be in the database.

The specified card must be running the **stplan** GPL.

The Gateway Screening feature and the STP LAN feature must be turned on for this command to work.

The first octet of the IP Address must not be **127**, because **127** represents an IP address for loopback.

Notes

If the first octet of the IP address is **127**, an error message is issued because the number **127** represents a loopback address.

The value of the **ipaddr** parameter cannot match the TCP/IP default router's IP address (the **iprte** parameter of the **ent-ip-node** command).

Output

ent-dlk:loc=1201:ipaddr=196.3.202.45

```
rlghncxa03w 04-02-10 11:43:04 EST EAGLE 31.3.0
ENT-DLK: MASP A - COMPLTD
```

;

In the following example, the first octet of the IP address is **127**. An error message is issued because the number **127** represents a loopback address.

ent-dlk:loc=1201:ipaddr=127.3.202.45

```
rlghncxa03w 04-02-10 11:43:04 EST EAGLE 31.3.0
Command Rejected : First octet of IPADDR cannot be 127.
ENT-DLK: MASP A - COMPLTD
```

;

ent-dstn

Enter Destination

Use this command to add a destination address (a destination point code, capability point code, or network cluster address) and the associated destination attributes to the destination point code table.



CAUTION: When using the Network Routing feature, limited network management is provided for point codes not covered by full point code routing, Cluster Routing, or Nested Cluster Routing.

Keyword: ent-dstn

Related Commands: chg-dstn, chg-rte, dlt-dstn, dlt-rte, ent-rte, rept-stat-dstn, rtrv-dstn, rtrv-rte

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:dpc= (mandatory)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: dpca

Range: p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

When **chg-sid:pctype=ansi** is specified, *ni = 000* is not valid.

When **chg-sid:pctype=ansi** is specified, *nc = 000* is not valid if *ni = 001-005*.

When **chg-sid:pctype=ansi** is specified, *nc = 000* is valid if *ni = 006-255*.

The point code **000-000-000** is not a valid point code.

:dpc/dpca/dpci/dpcn/dpcn24= (mandatory)

Destination point code.

:dpci= (mandatory)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: s-, p-, ps-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps-

zone—0-7

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

:dpcn= (mandatory)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: s-, p-, ps-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:dpcn24= (mandatory)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*. The *prefix* indicates a private point code (*prefix-msa-ssa-sp*).

Range: p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

msa—000-255

ssa—000-255

sp—000-255

Default: No change to current value.

:aliasa= (optional)

ANSI alias point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. This parameter is not valid if an ANSI (**dpc** or **dpca**) point code is entered.

Range: 000-255, none

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001-005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006-255.

Enter **none** to delete the point code.

The point code 000-000-000 is not a valid point code.

:aliasa/aliasi/aliasn/aliasn24= (optional)

Alias point code.

:aliasi= (optional)

ITU international alias point code with subfields *zone-area-id*. This parameter is not valid if an ITU international (**dpci**) point code is entered. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

:aliasn= (optional)

ITU national alias point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible

point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn, prefix-nnnnn-gc, prefix-m1-m2-m3-m4, prefix-m1-m2-m3-m4-gc*). This parameter is not valid if an ITU international (**dpcn**) point code is entered.

Range: **s-**, **0-16383**, **aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:aliasn24= (optional)

24-bit ITU national alias point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*. This parameter is not valid if a 24-bit ITU national (**dpcn24**) point code is entered.

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:bei= (optional)

Broadcast exception indicator. This parameter specifies whether the STP broadcasts network management messages to adjacent signaling points. The network management messages contain information about the indicated cluster and any of that cluster's member signaling points that are on its exception list. The messages whose broadcast is determined by this parameter are:

- **TFP**—transfer prohibited
- **TCP**—transfer cluster prohibited

Range: **yes, no**

yes— Network management messages are not broadcast

no— Network management messages are broadcast

Default: **yes**— for DPCs in the X.25 domain or if the DPC is a member whose associated cluster destination has **bei=yes** specified.

no—for DPCs in the cluster or if the DPC is a member whose associated cluster destination has **bei=no** specified or the **bei** parameter is not specified.

:clli= (optional)

The Common Language Location Identifier assigned to this destination.

Range: *aaaaaaaaaa*

1 alphabetic character followed by 10 alphanumeric characters

Default: Null string

:domain= (optional)

The network in which the destination entity or node exists.

Range: **x25, ss7**

Default: **ss7**

:elei= (optional)

Exception-list exclusion indicator, for cluster destinations only. This parameter specifies whether the system *excludes* or *includes (maintains)* a dynamic status exception list (x-list) for each cluster route used to reach the member signaling points that make up the cluster.

Range: **yes, no**

yes — Do not maintain a dynamic status x-list

no — Maintain a dynamic status x-list

Default: **no**

:ipgwapc= (optional)

IP gateway adjacent point code indicator.

Range: **yes, no**

Default: **no**

:ncai= (optional)

Nested cluster allowed indicator. Specifies whether the route to the cluster point code can be different for provisioned members of the cluster. A point code is a member of a cluster point code if it has the same network identifier (NI) and network cluster (NC) values as the cluster point code. This parameter can be specified only for cluster point codes. Nested cluster routing is allowed if this parameter is set to **yes** and the CRMD and NCR features are turned on.

Range: **yes, no**

yes — The cluster point code is a nested cluster point code. Point codes that are members of this cluster point code can be assigned to route sets that are different from the route set assigned to the cluster point code.

no — The cluster point code is not a nested cluster point code. Point codes that are members of this cluster point code must be assigned to the same route set assigned to the cluster point code.

Default: **no**

:spc= (optional)

ANSI secondary point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*) .

Synonym: **spca**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001-005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006-255**.

The point code **000-000-000** is not a valid point code.

:spc/spca/spci/spcn/spcn24= (optional)

Secondary point code.

:spci= (optional)

ITU international secondary point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

zone—0-7

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

:spcn= (optional)

ITU national secondary point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:spcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

msa—000-255

ssa—000-255

sp—000-255

Example

To add destination 8-1-1 with clli of systest1:

ent-dstn:dpc=8-1-1:clli=systest1:bei=yes

To add destination 8-8-8 with ITU and national aliases:

ent-dstn:dpc=8-8-8:aliasi=1-2-3:aliasn=124

To add cluster 20-2-*:

ent-dstn:dpc=20-2-*:elei=yes:bei=yes

To add a destination with an SPC of 100-100-100:

ent-dstn:dpc=20-2-2:spc=100-100-100

To add nested cluster 21-2-*:

ent-dstn:dpc=21-2-*:elei=yes:bei=yes:ncai=yes

To add network routing destination 21-*-*:

ent-dstn:dpc=21-*-*

To add ITU national destination 7654 with a group code of fr and secondary point code of 7050:

ent-dstn:dpcn=7654-fr:spc=7050-fr

To add ITU-N 24-bit destination 15-100-10:

ent-dstn:dpcn24=15-100-10:bei=no

To add a 24-bit ITU-N destination with a 24-bit ITU-N secondary point code of 99-99-99:

ent-dstn:dpcn24=12-12-12:spcn24=99-99-99

To add destination 1-6-1 with a 24-bit ITU-N alias:

ent-dstn:dpci=1-6-1:aliasn24=4-4-4

To add private ANSI destination point code p-100-100-101:with spare point code alias s-1-123-1

ent -

dstn:dpcn=p-100-100-101:spcn=s-1-123-1:aliasn=128

To add spare ITU-I destination point code s-2-100-1 with ANSI alias point code 121-120-120 and ITU-N alias spare point code s-129:

ent -

dstn:dpci=s-2-100-1:spci=s-2-129-9:aliasa=121-120-120:aliasn=s-129

To add spare ITU-N destination point code s-231 with ITU-N secondary point code 129, ANSI alias point code 120-120-122, and ITU-I alias spare point code s-2-123-2:

ent-dstn:dpcn=s-231:spcn=129:aliasa=120-120-122:aliasi=s-2-123-2

Dependencies

NOTE: A *full point code* contains numerical values for all three segments of the point code.

A destination is defined with a mandatory true point code of one format, and two optional alias point codes that are of the other two formats. Alias point codes are used to provide alternate point codes for a particular destination. The true point code must be of the same format as the point code used for the self ID of the system and must match the format of the point code used for the destination node. For example, if the destination node uses an ANSI point code, then the true point code must be an ANSI point code.

The ANSI self-ID destination point code for the STP must be defined before ANSI destinations can be entered.

The ITU-I self-ID destination point code for the STP must be defined before ITU-I destinations can be entered.

The ITU-N self-ID destination point code for the STP must be defined before ITU-N destinations can be entered.

The 24-bit ITU-N self-ID destination point code for the STP must be defined before 24-bit ITU-N destinations can be entered. (See the **chg-sid** command.)

The Destination point code table can contain up to 2000 entries.

The destination address must be a full point code or a cluster point code.

The specified destination address cannot already exist in the Destination entity set.

A destination address cannot already be defined as an alias address.

The Spare Point Code Support feature must be enabled before the spare point code prefix **s-** can be specified for an ITU-I or ITU-N destination, secondary, or alias point code.

When a private point code is specified, the destination address must be a full point code.

The specified **dpc** value cannot match the point code, secondary point code, or capability point code of the system.

A destination can have up to two alias point codes. A destination alias point code type (ANSI, ITU-I, ITU-N, ITU-N24) must not match that destination's true point code type. If both alias point codes are defined, the point code types of the aliases must not match.

Alias point codes are supported only for destinations in the SS7 domain (**domain=ss7**).

Alias point codes are supported only for full point code destinations.

Alias point codes for destinations must be full point codes.

An alias point code cannot already be defined as a destination point code.

The format of the specified **dpcn** or **aliasn** parameter must match the format that was assigned with the **chg-stpopts:npctfmti** parameter.

When the 7000 Routesets or 8000 Routesets feature is enabled, the total number of provisioned aliases in the system cannot exceed 8000.

If an ANSI or ITU-I point code is specified, either the **aliasn** or the **aliasn24** parameter can be specified, but not both.

A 24-bit ITU-N point code cannot have:

- A 14-bit ITU-N alias point code
- An ANSI alias point code

A 24-bit ITU-National point code can have an ITU-I point code alias. This allows conversion of 14-bit ITU-I routing label to 24-bit routing label and vice versa.

An ITU-I point code can have either a 14-bit ITU-N alias or a 24-bit ITU-N alias, but not both.

A 14-bit ITU-N point code cannot have a 24-bit ITU-N alias point code.

An ANSI point code cannot have a 24-bit ITU-N alias point code.

The X.25/SS7 Gateway feature (X25G) feature must be turned on before the **domain=x25** parameter can be specified.

If the **dpci**, **dpcn**, or **dpcn24** parameter is specified, the **domain=x25** parameter cannot be specified.

Cluster destinations are not supported in the X.25 domain (**domain=x25**).

Cluster destinations are allowed only if the CRMD feature is turned on.

A cluster destination cannot be defined using the same network identifier (*ni*) and network cluster (*nc*) subfields of any previously defined alias ANSI point codes.

The CRMD (Cluster Routing and Management Diversity) and NCR (Nested Cluster Routing) features must be turned on before the **ncai** parameter can be specified.

If the **ncai** parameter is set to **yes**, the maximum number of provisioned nested clusters must be no greater than 500.

When a cluster point code is specified, the collection of signaling points sharing the same network identifier (*ni*) and network cluster (*nc*) subfields must have the same route set.

Cluster DPCs are not allowed to inherit cluster members that have routes with A or E linkset types.

Network routing is valid only if the Network Routing (NRT) feature is turned on.

When using network routing, if the destination point code has a value of * in the *nc* subfield, the *ncm* subfield must also be * (for example, **dpc=21-*-***).

The **ncai** parameter can be specified only for cluster destinations.

Alias ANSI point codes cannot have the same network identifier (*ni*) and network cluster (*nc*) subfields as a cluster point code that is already defined.

The CRMD feature must be turned on before the **elei** parameter can be specified.

The **elei** parameter can be specified only for cluster destinations (for example **dpc=ni-nc-***).

The **clli** of the destination point code cannot match the **clli** of the system.

A reserved word cannot be specified for the destination identifier (**clli**).

If the corresponding destination for the specified destination point code is an adjacent signaling point (matched a Far End point code in its linkset entity set), the **clli** of the specified destination point code cannot be assigned to any other destination address.

If the system is configured to use ANSI point codes, the network indicator value (*ni*) of the specified destination point code must be equal to or greater than **6** when the cluster value (*nc*) is **0**.

If specified, the **spc** parameter value must be already be configured as a secondary point code in the Secondary Point Code table.

If specified, the **spc** parameter value must be a full point code (except when **spc=none**).

If the **spc** parameter is specified, the **domain=ss7** parameter must be specified.

If the **spc** parameter is specified (except when **spc=none**), the specified destination point code (**dpc**) must be a full point code.

If the **spc** parameter is specified (except when **spc=none**), its network type must match the network type for the destination point code (**dpc**).

If an ITU national destination is provisioned and the ITUDUPPC feature is turned on, and if the destination does **not** use an SPC, the group code of the destination must be the same as the group code of the ITU national true point code. For example, if the ITU national true point code has a group code of **ee**, then you can add destinations with group codes of **ee** without using an SPC. Destinations with a group code of **ff**, however, must use an SPC with a group code of **ff**.

The Route table cannot be full.

If an ITU national destination is provisioned and the ITUDUPPC feature is turned on, and if the destination uses an SPC, then the group code of the destination must match the group code of the SPC. For example, if the ITU national true point code has a group code of **ee**, then you can add destinations with group codes of **ee** without using an SPC. Destinations with a group code of **ff**, however, must use an SPC with a group code of **ff**.

Notes

Upon initial installation of the system, the self point code must be entered before you enter any destination.

When you define a DPC with the unique destination signaling point of a provisioned cluster, the DPC automatically inherits the route set of its cluster if the **ncai** parameter is set to **no**. If the **ncai** parameter is set to **yes**, the provisioned members can have a different route set.

When you define a cluster point code for previously defined destination signaling points, the cluster automatically inherits the unique route set of its members.

For ITU national duplicate point codes, you cannot change a destination's group code. To move a destination from one group to another, provision a new destination that uses the new group code and delete the old destination.

The system requires that the destination point code of each routeset be entered in the database. For example, to enter 6000 routesets in the database, 6000 destination point codes must be entered in the database.

If you have turned on the 5000 Routes feature, prior to provisioning the additional routing table entries, you must issue the **chg-stpopts** command to specify the maximum number of allowed DPCs and dynamic x-list entries.

When the 6000, 7000, or 8000 Routesets feature is enabled, if you want to enter more than 2000 destination point codes, the maximum number of point codes that can be configured on the system must be changed to 6000, 7000, or 8000 respectively, using the **mtpdpcq** parameter of the **chg-stpopts** command.

In this command, only ITU-international and ITU national point codes and aliases support the spare point code subtype prefix (**s-**). Only ITU-international and ITU national point codes support the private and spare point code subtype prefix (**ps-**). All of the point code types support the private (internal) point code subtype prefix (**p-**). Aliases do not support the private (internal) point code prefix.

Output

The following example shows the display of the destination memory space accounting command completion response with the NCR, NRT, and CRMD features off (disabled) and all Routes and Routesets features off (disabled):

ent-dstn:dpc=8-8-8:aliasi=1-2-3:aliasn=124

```
rlghncxa03w 04-08-17 15:35:05 EST EAGLE 31.8.0
Destination table is (10 of 2000) 1% full
Alias table is (8 of 12000) 1% full
ENT-DSTN: MASP A - COMPLTD
```

;

The following example shows the display of the destination memory space accounting command completion response with the NCR, NRT, and CRMD features off (disabled) and the DSTN5000 (5000 Routes) feature on:

ent-dstn:dpc=8-8-8:aliasi=1-2-3:aliasn=124

```
rlghncxa03w 04-08-18 08:29:15 EST EAGLE 31.8.0
Destination table is (10 of 5000) 1% full
Alias table is (8 of 12000) 1% full
ENT-DSTN: MASP A - COMPLTD
```

;

The following example shows the display of the destination memory space accounting command completion response with one or more of the NCR, NRT, or CRMD features on and the DSTN5000 (5000 Routes) feature on:

ent-dstn:dpc=8-8-8:aliasi=1-2-3:aliasn=124

```
rlghncxa03w 04-08-18 08:29:15 EST EAGLE 31.8.0
DESTINATION ENTRIES ALLOCATED: 5000
FULL DPC(s): 9
NETWORK DPC(s): 0
CLUSTER DPC(s): 1
TOTAL DPC(s): 10
CAPACITY (% FULL): 1%
ALIASES ALLOCATED: 12000
ALIASES USED: 8
CAPACITY (% FULL): 1%
X-LIST ENTRIES ALLOCATED: 500
ENT-DSTN: MASP A - COMPLTD
```

;

The following example shows the display of the destination memory space accounting command completion response with the NCR, NRT, and CRMD features off (disabled) and the 6000 Routesets feature on:

ent-dstn:dpc=8-8-8:aliasi=1-2-3:aliasn=124

```
rlghncxa03w 04-08-18 08:29:15 EST EAGLE 31.8.0
Destination table is (60 of 6000) 1% full
Alias table is (8 of 12000) 1% full
ENT-DSTN: MASP A - COMPLTD
```

;

The following example shows the display of the destination memory space accounting command completion response with one or more of the NCR, NRT, or CRMD features on and the 6000 Routesets feature on:

ent-dstn:dpc=8-8-8:aliasi=1-2-3:aliasn=124

```
rlghncxa03w 04-08-18 08:29:15 EST EAGLE 31.8.0
DESTINATION ENTRIES ALLOCATED: 6000
FULL DPC(s): 46
```

```

NETWORK DPC(s):          1
CLUSTER DPC(s):          1
TOTAL DPC(s):            12
CAPACITY (% FULL):        1%
ALIASES ALLOCATED:        12000
ALIASES USED:             8
CAPACITY (% FULL):        1%
X-LIST ENTRIES ALLOCATED: 500
ENT-DSTN: MASP A - COMPLTD
;

```

The following example shows the display of the destination memory space accounting command completion response with the NCR, NRT, and CRMD features off (disabled). When the 7000 Routesets quantity feature is on, the Destination table line shows "...of 7000" as it appears in the example. When the 8000 Routesets quantity feature is on, the Destination table line shows "...of 8000."

ent-dstn:dpc=8-8-8:aliasi=1-2-3:aliasn=124

```

rlghncxa03w 04-08-18 08:29:15 EST EAGLE 31.8.0
Destination table is (60 of 7000) 1% full
Alias table is (8 of 8000) 1% full
ENT-DSTN: MASP A - COMPLTD
;

```

The following example shows the display of the destination memory space accounting command completion response with one or more of the NCR, NRT, or CRMD features on: When the 7000 Routesets quantity feature is on, the DESTINATION ENTRIES ALLOCATED line shows "8000" as it appears in the example. When the 7000 Routesets quantity feature is on, the DESTINATION ENTRIES ALLOCATED line shows "7000."

ent-dstn:dpc=8-8-8:aliasi=1-2-3:aliasn=124

```

rlghncxa03w 04-08-18 08:29:15 EST EAGLE 31.8.0
DESTINATION ENTRIES ALLOCATED: 8000
FULL DPC(s):                  9
NETWORK DPC(s):               0
CLUSTER DPC(s):               1
TOTAL DPC(s):                 10
CAPACITY (% FULL):             1%
ALIASES ALLOCATED:             8000
ALIASES USED:                  8
CAPACITY (% FULL):             1%
X-LIST ENTRIES ALLOCATED:      500
ENT-DSTN: MASP A - COMPLTD
;

```

ent-e1

Enter E1 Interface

Use this command to enter an interface into the system for a 2-port E1 card, an E1/T1 MIM card, an HC-MIM card used as an E1 card, an E5-E1T1 card used as an E1 card, an HC-MIM card used as an SE-HSL card, or an E5-E1T1 card used as an SE-HSL card. You must specify the E1 port number on the card and the E1 card location in the EAGLE 5 ISS.

CRC4, CAS, CCS, encoding, timing source, and NFAS signaling bit options can be set with the command parameters. Do not use the DIP switches, if any, on E1 and Channel cards to define the E1 interface.

The E1 card can have a DIP switch called E1BKEN, which is used to enable or disable data transmission on the E1 backplane. Because there is no command parameter that corresponds to the DIP switch, the default value of enabled is assumed. The backplane is enabled for data transmit and receive on E1 port number 1.

On an HC-MIM or E5-E1T1 card, E1 ports 1, 3, 5, and 7 (master ports) can be independently channel bridged with their adjacent even-numbered (slave) E1 ports 2, 4, 6, and 8 to allow non-signaling data pass-through.

Any of the 8 ports on an HC-MIM or E5-E1T1 card can be specified when the card is used as a standard HC-MIM or E5-E1T1 card respectively. No more than 2 ports on the HC-MIM or 1 port on the E5-E1T1 when used as an SE-HSL card can have defined E1 interfaces.

Keyword: **ent-e1**

Related Commands: **chg-e1, dlt-e1, rtrv-e1, tst-e1**

Command Class: Database Administration

Parameters

:e1port= (mandatory)

E1 card port number. The value must be a E1 port for which an interface has not been configured on the specified E1 card.

Range: **1-8**

Ports 3 through 8 can be specified only for HC-MIM and E5-E1T1 cards.

Any 2 of the 8 ports on an HC-MIM card can be specified when the card is used as an SE-HSL card.

Any 1 of the 8 ports on an E5-E1T1 card can be specified when the card is used as an SE-HSL card.

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

:cas= (optional)

CAS multiframing (**on**) or CCS (**off**) indicator.

Range: **on, off**

CAS cannot be specified for HC-MIM and E5-E1T1 cards.

Default: **off**

:chanbrdg= (optional)

Port bridging status. This parameter indicates whether an odd-numbered E1 port on an HC-MIM or E5-E1T1 card is channel bridged with its adjacent even-numbered E1 port for non-signaling data pass through.

Range: **on, off**

Default: **off**

:crc4= (optional)

CRC4 enable or disable indicator.

Range: **on, off**

Default: **on**

:e1tsel= (optional)

Timing source. This parameter indicates a master (**external**) or slave (**line**) timing source, or a timing source recovered from the paired master port for channel bridged slave ports.

Range: **line, external, recovered**

Default: **line**

:encode= (optional)

Indicator for use of HDB3 or AMI encoding/decoding.

Range: **hdb3, ami**

AMI encoding is not supported for the 2-port E1 card. AMI encoding is supported for E1/T1 MIM, HC-MIM, and E5-E1T1 cards that are used as an E1 card.

Default: **hdb3**

:linkclass= (optional)

Link class for links that are assigned to HC-MIM and E5-E1T1 cards ("channelized" links) or SE-HSL cards ("unchannelized" links).

Range: **chan, unchan**

Default: **chan**

:minsurate= (optional)

Minimum signal unit rate. This parameter indicates the minimum number of SUs present on a link uniformly distributed. This parameter is valid only when the **linkclass=unchan** parameter is specified for an SE-HSL card.

Range: **500-2000**

Default: **2000**

:si= (optional)

Value of two Spare International bits of NFAS data.

Range: **0-3**

Default: **0**

:sn= (optional)

Value of five Spare International bits of NFAS data.

Range: **0-31**

Default: **0**

Example

ent -

e1:loc=1205:e1port=1:crc4=off:cas=on:encode=hdb3:e1tsel=external:si=2:sn=12

ent - e1:loc=1205:e1port=2:cas=off:encode=ami

ent - e1:loc=1203:e1port=1:chanbrdg=on:e1tsel=recovered

ent - e1:loc=1203:e1port=3:chanbrdg=on:e1tsel=external

ent -

e1:loc=1203:crc4=on:e1port=2:encode=hdb3:e1tsel=line:linkclass=unchan:chan:minsrate=2000

Dependencies

The specified card location (**loc** parameter) must be equipped.

The card specified by the **loc** parameter must be a **lime1** card type.

The port specified by the **e1port** parameter must not already be equipped with an E1 interface.

The **cas=on** parameter cannot be specified if E1 ports **3 - 8** (**e1port** parameter) have been specified or if the **chanbrdg=on** parameter has been specified.

The **chanbrdg=on** and **cas=on** parameters cannot be specified when the **linkclass=unchan** parameter is specified. The **minsrate** parameter can be specified only when the **linkclass=unchan** parameter is specified.

The **chanbrdg=on** parameter can be specified only for HC-MIM and E5-E1T1 cards.

The **chanbrdg=on** parameter cannot be specified for even-numbered E1 ports (**e1port** parameter).

The timing source parameter **e1tsel** must be specified if the **chanbrdg=on** parameter is specified.

The **e1tsel=line** parameter cannot be specified for an E1 port (**e1port** parameter) when the **chanbrdg=on** parameter is specified.

The **e1tsel=recovered** parameter cannot be specified for an E1 port (**e1port** parameter) unless the **chanbrdg=on** parameter is specified.

Only 2 ports can be used for E1 interfaces on an HC-MIM card that is used as an SE-HSL card. Any 2 of the 8 ports can be used on the SE-HSL card.

When provisioning an odd-numbered E1 port (**e1port** parameter) on an HC-MIM card or an E5-E1T1 card to channel bridging mode using **chanbrdg=on** parameter, **force=yes** must be specified if the adjacent even-numbered port is already provisioned with an E1 interface.

All signaling links assigned to its adjacent even-numbered E1 port must be deleted before an odd-numbered E1 port (**e1port** parameter) on an HC-MIM and E5-E1T1 card can be provisioned into channel bridging mode using the **chanbrdg=on** parameter. Use the **dlt-slks** command to delete the signaling links.

The fan feature bit must be on before HC-MIM cards (used as E1 cards or as SE-HSL cards) can be used in an EAGLE 5 ISS shelf (see the **chg-feat** command). The system checks the fan feature bit when E1 ports **3** through **8** are specified.

HIPR cards must be equipped in card locations xy09 and xy10 (x is the frame, y is the shelf) on each EAGLE 5 ISS shelf that contains one or more HC-MIM or E5-E1T1 cards that are used as E1 cards or SE-HSL cards. The system checks for HIPR cards when E1 ports **3** through **8** (**e1port** parameter), **chanbrdg=on** or **linkclass=unchan** parameter is specified for HC-MIM and E5-E1T1 cards.

An SE-HSL feature quantity must be enabled before the **linkclass=unchan** parameter can be specified for an SE-HSL card. (See the **enable-ctrl-feat** command and the SEHSL SLK Capacity entry in the **rtv-ctrl-feat** command output example.)

The **linkclass=unchan** parameter can be specified only for HC-MIM and E5-E1T1 cards.

Channelized and unchannelized E1 ports (mixed mode) are not allowed on a single HC-MIM or E5-E1T1 card (the card cannot be used as an E1 card and an SE-HSL card at the same time).

Only 1 port can be used for E1 interfaces on an E5-E1T1 card that is used as an SE-HSL card. Any 1 of the 8 ports can be used on the SE-HSL card.

E1 ports **3 - 8** (**e1port** parameter) can be specified only for HC-MIM and E5-E1T1 cards.

The **encode=ami** parameter is supported only for the E1/T1 MIM, HC-MIM, and E5-E1T1 card used as an E1 card, and is not supported on the 2-port E1 card.

The **cas=on** parameter can not be specified for for HC-MIM and E5-E1T1 cards.

Notes

One or two E1 interfaces must be defined on an E1 card after the E1 and any associated Channel cards (types **lime1** and **limch**) are defined in the database (with the **ent-card** command), and before the signaling links and associated timeslots are defined for the E1 card and any associated Channel cards (with the **ent-slks** command).

For an SE-HSL card, the **minsrate** parameter indicates the least number of SUs present on a link uniformly distributed. The number of SUs present is:

- Without link traffic, the **minsrate** parameter value.
- With link traffic, the **minsrate** parameter value minus the number of MSUs.

When the **e1tsel=external** parameter is specified, a user-supplied BITS clock is required.

External timing is derived from the EAGLE High-Speed Master Clock (1.544 MHz for T1 or 2.048 MHz for E1); therefore, the Master Timing feature is required. Line timing is derived from its received data stream, if present.

Up to 8 E1 interfaces can be defined on an HC-MIM or E5-E1T1 card used as a E1 card after the E1 card type (**lime1**) is defined in the database (with the **ent-card** command), and before the signaling links and associated timeslots are defined for the E1 card .

On a HC-MIM or E5-E1T1 card, E1 ports 1, 3, 5, and 7 (master ports) can be independently channel bridged with their adjacent even-numbered (slave) ports 2, 4, 6, and 8 to allow non-signaling data pass-through. The **chanbrdg** parameter must be specified for the odd-numbered E1 port.

Output

```
ent -
e1: loc=1205:e1port=1:crc4=off:cas=on:encode=hdb3:e1tsel=external:
si=2:sn=12
    rlgncxa03w 04-02-20 09:07:58 EST  EAGLE 31.3.0
    ENT-E1: MASP A - COMPLTD
;
```

ent-frm-pwr

Enter Frame Power Threshold

Use this command to add a new entry into the Frame Power Threshold (FPT) table. The frame-level power threshold value in the table is compared with the current power consumption for a particular frame, and appropriate alarms are raised if current consumption exceeds the threshold limit. The entries in the Frame Power Threshold table contain a Frame ID and the corresponding power threshold value.

Keyword: ent-frm-pwr

Related Commands: chg-frm-pwr, dlt-frm-pwr, rtrv-frm-pwr, rtrv-stp

Command Class: Database Administration

Parameters

:frm= (mandatory)

Frame ID.

Range: cf00, ef00, ef01, ef02, ef03, ef04

cf00 — Control frame

ef00 — First extension frame

ef01 — Second extension frame

ef02 — Third extension frame

ef03 — Fourth extension frame

ef04 — Fifth extension frame

:thrshld= (optional)

Frame-level power threshold value, in Amps. This value is compared with the current power consumption for a particular frame, and the appropriate alarms are raised if current consumption exceeds the threshold limit.

Range: 30-65

Default: 30

Example

Enter the frame power threshold value for the first extension frame.

```
ent - frm-pwr : frm=ef00 : thrshld=55
```


Example

```
ent-ftp-
serv:app=meas:ipaddr=1.255.0.102:login=ftpmeas1:path=~meas:prio
=1
ent-ftp-serv:app=user:ipaddr=1.255.0.102:login=tekpersion1:path=~
\data":prio=1
```

Dependencies

A separate prompt appears for you to enter the FTP server password that will be used with the FTP Server Username (**login**). You must enter a password that is at least 1 and not more than 15 characters long. If you enter an invalid password (you press the Return key without entering a password, or you enter more than 15 characters), you must enter the entire command again to cause the password prompt to appear again. The password that you enter is not displayed as you enter it.

An entry for the specified application ID at the specified priority cannot already exist.

An entry for the specified application ID at the specified IP address cannot already exist.

The FTP Server table can contain entries for a maximum of 10 FTP servers. The number of FTP servers supported by an application might be less than 10. For an application, you cannot make entries for more than the maximum number of FTP servers supported by the application.

- The Measurements Platform application (**app=meas**) supports 2 FTP servers.
- The FTP-based Table Retrieve Application (FTRA) (**app=user**) supports 2 FTP servers.

The **app** parameter must specify an application that uses the FTP Support feature.

The **ipaddr** parameter must specify a valid IP address for the FTP server.

The **path** parameter value must be in a valid FTP path format.

The **prio** parameter specifies a priority for use of an FTP server by an application when the application has more than one FTP server defined in the table. Each FTP server defined for use by the application must have a priority from 1 to 10 assigned. The available FTP server with the highest priority (smallest number) will be used first by the application.

Notes

The same FTP server can be defined more than once, but the specified application must be different for each entry.

Output

```
ent-ftp-
serv:app=meas:ipaddr=1.255.0.102:login=ftpmeas1:path=~meas:prio
=1
    rlghncxa03w 04-02-20 09:07:58 EST  EAGLE 31.3.0
Enter Password:*****
    FTP SERV table is (1 of 10) 10% full
    ENT-FTP-SERV: MASP A - COMPLTD
;
ent-ftp-
serv:app=user:ipaddr=1.255.0.102:login=tekpersion1:path=~data":pr
io=1
    rlghncxa03w 04-02-20 09:07:58 EST  EAGLE 31.3.0
Enter Password:*****
    FTP SERV table is (2 of 10) 20% full
    ENT-FTP-SERV: MASP A - COMPLTD
;
```

ent-gsmmap-scrn**Enter GSM MAP Screening Entry**

Use this command to assign the GSM (Global System for Mobile Telecommunication) MAP (Mobile Application Part) screening entries that filter or allow TCAP messages for certain MAP operation codes. The messages are filtered or allowed based on CgPA GTA+NPV+NAIV, CdPA GTA+NPV+NAIV, and forbidden (**forbid**) parameters. Each CgPA entry is associated with one or more CdPA entries and one or more CgPA entries are associated with a MAP Opcode. This command provisions both CgPA and CdPA entries into the database.

Keyword: ent-gsmmap-scrn

Related Commands: chg-gsmmap-scrn, chg-map, dlt-gsmmap-scrn, dlt-map, rtrv-gsmmap-scrn, rtrv-map

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:cgsr= (mandatory)

The CGPA screening reference. CGSR uniquely identifies a CGPA entry for a specified OPNAME.

Range: ayyy

1 alphabetic character and up to 3 optional alphanumeric characters

:opname= (mandatory)

The user-defined name for the operation code. The **opname** value references the operation code (**opcode**) defined with the **ent-gsms-opcode** command. GSM Map Screening is performed on the specified address or addresses for the referenced operation code.

Range: ayyyyyyy

Up to 8 alphanumeric characters

:action= (optional)

The screening action to take if a message is forbidden as defined by the **forbid** parameter.

Range: **atierr**, **discard**, **dupdisc**, **duplicate**, **forward**, **pass**, **route**

atierr — An ATI (Any Time Interrogation) reject message is generated. This option is only valid for ATI MAP operation codes.

discard — The MSU is to be discarded.

dupdisc — Route the original message to the duplicate node. The original message will not be sent to the original node. If, however, the duplicate node is not available for routing, the MSU is routed to the original node.

duplicate — Route the message as normal to the original destination and route a copy of the original message to the duplicate node. If the MSU fails to route to the duplicate node, a UIM is generated indicating the duplicate routing failure.

forward — Route the original message to the forward node. The original message will not be sent to the original node. If, however, the forward node is not available for routing, the MSU is routed to the original node.

pass — Route the message as normal to the destination.

route — Route the message as normal to the original destination node; no UIM will be generated. The original destination is the node to which normal GTT would be sent if no GSM MAP actions are taken.

Default: **discard**

:cdsr= (optional)

The CDPA screening reference. CDSR uniquely identifies a CDPA entry for a specified combination of CGSR and OPNAME.

Range: *ayyy*
1 alphabetic character and up to 3 optional alphanumeric characters

:eaddr= (optional)

In association with **npv**, **naiv**, **cgsr**, and **cdsr**, it is for the ending CDPA address in the range to be screened.

Range: 1-15 digits
Valid digits are **0–9, a-f, A-F**

:forbid= (optional)

The forbidden parameter value. Indicates a forbidden parameter for the entered address. If a forbidden parameter is detected the message is rejected by the action defined by the **action** parameter.

Range: **all, none, state, location**

all — All parameters are forbidden. Take the specified screening action defined by the **action** parameter for messages arriving at the system.

none — None of the parameters are forbidden. Route the message to its destination.

state — Take the specified screening action defined by the **naction** parameter for messages arriving at the system that contain **state** as the forbidden parameter for the entered address/operation code combination. Note: The **state** parameter is valid only for GSM ATI messages.

location — Take the specified screening action defined by the **naction** parameter for messages arriving at the system that contain **location** as the forbidden parameter for the entered address/operation code combination. Note: The **location** parameter is valid only for GSM ATI messages.

Default: **all**

:force= (optional)

Check Mated Application Override. This parameter must be used to complete command execution if the **pc/pca/pci/pcn/pcn24** and **ssn** parameter combination specified in the command is not already defined in the SCCP Application entity set (Remote Point Code/Mated Application Table).

Range: **yes, no**

Default: **no**

:mapset= (optional)

The MAP set ID.

Range: **1-36000 dflt**
dflt—Default MAP set

:naiv= (optional)

Nature of Address value for the address or range of CgPA and CdPA addresses. If a message is screened and does not contain matching **npv** and **naiv** values, the message is rejected. The message is rejected with the default action defined by the **ent-gsms-opcode** command for the operation code (**opcode**) parameter entry referenced by the operation name (**opname**) parameter.

This parameter must be specified with the **npv** parameter.

Range: **0-127, ***

Default: *****

:npv= (optional)

Numbering Plan value for the address or range of CgPA and CdPA addresses. If a message is screened and does not contain matching **npv** and **naiv** values, the message is rejected. The message is rejected with the default action defined by the **ent-gsms-opcode** command for the operation code (**opcode**) parameter entry referenced by the operation name (**opname**) parameter.

This parameter must be specified with the **naiv** parameter.

Range: **0-15 ***

Default: *****

:pc= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Synonym: **pca**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:pc/pca/pci/pcn/pcn24= (optional)

Point code. The **pc/pca/pci/pcn/pcn24** and **nssn** parameters are used when the default screening action (**dfltact**) is **forward**, **duplicate**, or **dupdisc** (duplicate and discard). These parameters are used to enter the node to which the input message will be routed.

:pci= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:pcn= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:pcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

:saddr= (optional)

The starting origination address.

In association with the **npv**, **naiv**, and **cgsr** parameters, this parameter is for the single CGPA entry or the starting CGPA address in the range to be screened.

In association with the **npv**, **naiv**, and **cdsr** parameters, this parameter is for the single CDPA entry or the starting CDPA address in the range to be screened.

Range: 1-15 digits, *
Valid digits are **0–9, a-f, A-F**

Default: *

:ssn= (optional)

Subsystem Number. The **pc/pca/pci/pcn/pcn24** and **ssn** parameters are used when the screening action (**action**) is **forward**, **duplicate**, or **dupdisc** (duplicate and discard). These parameters allow the craftsman to change the defined node to which the input message will be routed.

Range: 002-255

Example

The following example adds a MAP opname of **ati** with a range of allowed addresses, defines a forbidden parameter for that range of addresses and an action to take if the forbidden parameter is detected, and sets the **npv** and **naiv** values. This example is wrapped to the next line for readability:

```
ent - gsmmap -  
scrn: saddr=919461: eaddr=919462: opname=ati: action=discard: forbid=s  
tate : npv=1: naiv=4: cgsr=fela
```

The following example adds a MAP opname of **ati** with a range of allowed addresses, defines a forbidden parameter for that range of addresses and an action to take if the forbidden parameter is detected, and sets the **npv** and **naiv** values. The command also defines an ITU International Point Code with Subsystem Number 5, and forbids by location messages that have an action of forward. This example is wrapped to the next line for readability:

```
ent - gsmmap -  
scrn: saddr=919461: eaddr=919462: opname=ati: action=forward: pci=1-1-  
1 : ssn=5: force=yes: forbid=location: cgsr=fela
```

The following example adds a MAP opname of **xyz** with an allowed hexadecimal address of **abcdefabcdefabc**, defines the action **discard** to take if a forbidden parameter is detected, and sets the **npv** and **naiv** values. The command also defines a CGSR of **fela**. This example is wrapped to the next line for readability:

```
ent - gsmmap -  
scrn: opname=xyz: saddr=abcdefabcdefabc: npv=10: naiv=10: cgsr=fela : ac  
tion=discard
```

```
ent - gsmmap -  
scrn: opname=test2: cgsr=t1: cdsr=cd3: saddr=125: pci=s-1-1-1: ssn=10 : a  
ction=duplicate
```

```
ent - gsmmap -  
scrn: opname=test2: cgsr=cg1: cdsr=cd1: saddr=125: pci=1-1-1: ssn=10: ac  
tion=duplicate: mapset=11
```

```
ent - gsmmap -
scrn:opname=test3:cgsr=cg2:cdsr=cd1:saddr=125:pc=1-1-2:ssn=10:ac
tion=dupdisc:mapset=df1t
```

Dependencies

The GSM Map Screening feature must be turned on (see the **enable-ctrl-feat** and **chg-ctrl-feat** commands) before this command can be entered.

The EGMS feature must be turned on before:

- The **saddr=*** parameter can be specified.
- Values for the **saddr** and **eaddr** parameters can contain hexadecimal digits.
- The **cdsr** parameter can be specified.
- The **pc/pca** parameter can be specified.

If the **eaddr** parameter is specified, the **saddr** parameter must be specified.

If the **eaddr** parameter is specified, then its value must contain the same number of digits as the value of the **saddr** parameter.

If the **eaddr** parameter is specified, its value must be greater than the **saddr** parameter value.

If the **saddr=*** parameter is specified, then the **eaddr** parameter cannot be specified.

If the **opname** parameter is specified, its value must exist in the GSM MAP Op-Code table.

A value of **state** or **location** cannot be specified for the **forbid** parameter unless the operation code (**opcode**) referenced by **opname** is **71**. The **opcode=71** parameter signifies an ATI MAP operation code.

The **action=atierr** parameter cannot be specified unless the operation code (**opcode**) referenced by the **opname** parameter is **71**. The **atierr** option is only valid for ATI MAP operation codes, and the **opcode=71** parameter signifies an ATI MAP operation code.

The GSM MAP Screening table cannot be full.

The GSM MAP Screening table must have at least two free entries to provision a CgPA entry, because a default wildcard CdPA entry is created for each CgPA entry.

If a single entry is specified for the CgPA/CdPA (the **eaddr** parameter is not specified), then the combination of **saddr/npv/naiv** and **opname** parameters must not already exist in the GSM MAP screening table.

If a range entry is specified for the CgPA/CdPA (the **eaddr** parameter is specified), then the **saddr/eaddr/npv/naiv** and **opname** combination must not already exist or overlap another range entry in the GSM MAP screening table.

If a CdPA entry is being created, then the CGSR must already exist for the specified OPNAME.

If a CgPA entry is being created, the CGSR cannot already exist for the specified OPNAME.

The specified **cdsr** cannot already exist for the specified **cgsr**.

If specified, the **pc/pca/pci/pcn/pcn24** parameter must be a full point code.

If the **action** parameter is specified and its value is **forward**, **duplicate**, or **dupdisc**, the **pc/pca/pci/pcn/pcn24** parameter and the **ssn** parameter must be specified.

The **pc/pca/pci/pcn/pcn24** parameter and the **ssn** parameter can be specified only if the **action** parameter is specified and its value is **forward**, **duplicate**, or **dupdisc**.

The **force** parameter can be specified only if the **pc/pca/pci/pcn/pcn24** parameter and the **ssn** parameter are specified.

If the **pc/pca/pci/pcn/pcn24** parameter and the **ssn** parameter are specified, and the **force** parameter is not specified as **yes**, then the PC/SSN must be populated in the SCCP Application entity set (Remote Point Code/MAP Table).

The values for the **npv** and **naiv** parameters must be either both numbers or both asterisks (*). The parameters cannot be specified as **:npv=*:naiv=9** or **:npv=9:naiv=***, for example.

If specified, the **pc/pca/pci/pcn/pcn24** parameter value must exist as a destination in the Ordered Route entity set or reside in a cluster (ANSI only) that exists as a destination in the Ordered Route entity set (for global title routing).

If the **action** parameter is specified as **forward**, **duplicate**, or **dupdisc**, then the **mapset** parameter must be specified.

If the **mapset** parameter is specified, then the **action** parameter must be specified as **forward**, **duplicate**, or **dupdisc**.

The Flexible GTT Load Sharing feature must be enabled before the **mapset** parameter can be specified.

The specified MAP set must exist.

If the value of the **mapset** parameter is not **dflt**, then the specified PC/SSN must exist in the specified MAP set.

If the **mapset=dflt** parameter is specified, and the **force** parameter is not specified as **yes**, then the specified PC/SSN must exist in the specified MAP set.

Notes

GSM screening entries are handled differently from other screening entries such as GWS (gateway screening) in the system database. The following differences apply to provisioning GSM screening entries:

- GSM screening entries can be either single entries or range entries.
- Single entries have precedence in screening over range entries. Thus the single entries are searched first and if a match is found, the range entries are never searched.
- Range entries can overlap single entries.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-).

Output

```
ent-gsmap-
scrn:opname=test2:cgsr=cg1:cdsr=cd1:saddr=125:pci=1-1-1:ssn=10:ac
tion=duplicate:mapset=11
tekelecstp 06-05-29 13:24:41 EST EAGLE 35.0.0
GSM Map Screening table is (1 of 4000) 1% full
ENT-GSMMAP-SCRN: MASP A - COMPLTD
;
```

ent-gsms-opcode

Enter GSM MAP Screening Operation Code

Use this command to assign the concerned GSM (Global System for Mobile Telecommunication) MAP (mobile application part) screening operation codes and the default screening action for the operation code. This command allows the craftsman to provision a list of all operation codes that the system uses in performing GSM screening.

Keyword: ent-gsms-opcode

Related Commands: chg-gsms-opcode, dlt-gsms-opcode, rtrv-gsms-opcode

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:opcode= (mandatory)

MAP operation code. This parameter refers to the actual decimal value of the MAP operation codes from the TCAP layer of GSM MAP messages.

Range: 0-255 *

If a decimal Map Opcode is not found in the database, then the asterisk (wildcard *), if provisioned, will constitute a match when screening the MSUs.

:opname= (mandatory)

Name for the operation code. The **opname** value is defined with the **ent-gsmmap-scrn** command.

Range: ayyyyyyy

Up to 8 alphanumeric characters

:dfltact= (optional)

Default screening action for a MAP operation code. The default screening action is used when a matching CGPA address+NPV+NAIV entry is not found in the GSM MAP screening table.

Range: **atierr, discard, dupdisc, duplicate, forward, pass, route**

atierr — Do not route the MSU. An ATI (Any Time Interrogation) reject message is generated. This option is only valid for ATI MAP operation codes.

discard — Do not route the MSU. The MSU is discarded (thrown away) and an appropriate UIM is issued.

dupdisc — Route the original message to the duplicate node. The original message will not be sent to the original node. If, however, the duplicate node is not available for routing, the MSU is routed to the original node.

duplicate — Route the message as normal to the original destination and route a copy of the original message to the duplicate node. If the MSU fails to route to the duplicate node, a UIM is generated indicating the duplicate routing failure.

forward — Route the original message to the forward node. The original message will not be sent to the original node. If, however, the forward node is not available for routing, the MSU is routed to the original node.

pass — Route the message as normal to the destination.

route — Route the message as normal to the original destination node; no UIM will be generated. The original destination is the node to which normal GTT would be sent if no GSM MAP actions are taken.

Default: **discard**

:force= (optional)

Check Mated Application Override. This parameter must be used to complete command execution if the **pc/pca/pci/pcn/pcn24** and **ssn** parameter combination specified in the command is not already defined in the SCCP Application entity set (Remote Point Code/Mated Application Table).

Range: **yes, no**

Default: **no**

:mapset= (optional)

The MAP set ID.

Range: **dflt, , dflt 1..36000, dflt**

dflt—Default MAP set

:pc= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Synonym: **pca**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001–005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006–255**.

The point code **000-000-000** is not a valid point code.

:pc/pca/pci/pcn/pcn24= (optional)

Point code. The **pc/pca/pci/ncn/pcn24** and **ssn** parameters are used when the default screening action (**dfltact**) is **forward**, **duplicate** or **dupdisc** (duplicate and discard). These parameters allow the craftsperson to change the defined node to which the input message will be routed.

:pci= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:pcn= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfnti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:pcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

:ssn= (optional)

Subsystem Number. The **pc/pca/ pci/pcn/pcn24** and **ssn** parameters are used when the default screening action (**dfltact**) is **forward**, **duplicate** or **dupdisc** (duplicate and discard). These parameters allow the craftsperson to change the defined node to which the input message will be routed.

Range: 002-255

Example

The following example adds a MAP operation code of 71 with a name of ati with a default action of discard:

```
ent - gsms - opcode : opcode=71 : opname=ati : dfltact=discard
```

The following example adds a MAP operation code of 71 with a name of ati with a default action of forward, an international point code of 1-1-1, a subsystem number of 5, and forces:

```
ent - gsms -  
opcode : opcode=71 : opname=ati : dfltact=forward : pci=1-1-1 : ssn=5 : force  
=yes
```

The following example adds a MAP operation code of 71 with a name of ati with a default action of duplicate, an international point code of 1-1-1, a subsystem number of 5, and forces:

```
ent - gsms -  
opcode : opcode=71 : opname=ati : dfltact=duplicate : pci=1-1-1 : ssn=5 : force  
=yes
```

The following example adds a MAP operation code of 71 with a name of ati with a default action of dupdisc, an international point code of 1-1-1, a subsystem number of 5, and forces:

```
ent - gsms -  
opcode : opcode=71 : opname=ati : dfltact=dupdisc : pci=1-1-1 : ssn=5 : force  
=yes
```

The following example adds a MAP operation code of * with a name of xyz with a default action of duplicate, an ANSI point code of 8-8-8, a subsystem number of 20:

```
ent - gsms -  
opcode : opcode=* : opname=xyz : pca=8-8-8 : dfltact=duplicate : ssn=20
```

The following example adds a MAP operation code of 22 with a name of ati with a default action of discard:

```
ent - gsms - opcode : opcode=22 : opname=ati : dfltact=discard
```

The following example shows a spare point code:

```
ent - gsms -  
opcode : opname=test3 : opcode=3 : pci=s-1-1-1 : dfltact=duplicate : ssn=10  
: force
```

The following example shows a MAP set value. The Flexible GTT Load Sharing feature is ON.

```
ent - gsms -  
opcode : opname=test3 : opcode=3 : pc=1-1-1 : dfltact=duplicate : ssn=10 : ma  
pset=7
```

The following example shows the Default MAP set value. The Flexible GTT Load Sharing feature is ON.

```
ent - gsms -
opcode : opname=ts4 : opcode=4 : pc=1-1-2 : dfltact=dupdisc : ssn=10 : mapset
=dflt
```

Dependencies

The GSM Map Screening feature (see the **enable-ctrl-feat** command) must be turned on before this command can be entered.

If the **dfltact** parameter is specified, then the **pass**, **discard**, **atierr**, **route**, **forward**, **duplicate**, or **dupdisc** value must be assigned.

The reserved word **none** cannot be specified as a value for the **opname** parameter.

The **pc/pca/pci/pcn/pcn24** and **ssn** parameters can be specified only if the **dfltact** parameter is specified and its value is **forward**, **duplicate**, or **dupdisc**.

If the **dfltact** parameter is specified with a value of **forward**, **duplicate**, or **dupdisc**, then a **pc/pca/pci/pcn/pcn24** parameter and the **ssn** parameter must be specified.

The **force** parameter can be specified only if a **pc/pca/pci/pcn/pcn24** parameter and the **ssn** parameter are specified.

The **dfltact=atierr** parameter cannot be specified unless the value of the operation code referenced by the **opname** parameter is **71**. The **atierr** option is valid only for ATI MAP operation codes, and the **opcode=71** parameter signifies an ATI MAP operation code.

The value specified for the **opcode** parameter cannot already exist in the GSM Map Op-Code table.

The value specified for the **opname** parameter cannot already be used in the GSM Map Op-Code table.

If the **pc/pca/pci/pcn/pcn24** parameter and the **ssn** parameter are specified, and the **force** parameter is not specified as **yes**, then the PC-SSN must exist in the SCCP Application entity set (Remote Point Code / Mated Application Table).

The Enhanced GSM Map Screening feature must be enabled and turned on before the **opcode=*** parameter can be specified.

If specified, the **pc/pca/pci/pcn/pcn24** parameter value must be a full point code.

If specified, the **pc/pca/pci/pcn/pcn24** parameter value must exist as a destination in the Ordered Route entity set or reside in a cluster (ANSI only) that exists as a destination in the Ordered Route entity set (for global title routing).

The Enhanced GSM Map Screening feature must be enabled and turned on when the PC/PCA is specified.

If the **mapset** parameter is specified, then the **dfltact** parameter must be specified as **forward**, **duplicate**, or **dupdisc**.

If the **dfltact** parameter is specified as **forward**, **duplicate**, or **dupdisc**, then the **mapset** parameter must be specified.

The Flexible GTT Load Sharing feature must be enabled before the **mapset** parameter can be specified.

The specified MAP set must exist.

If the **mapset** parameter is not specified as **dflt**, or if the **mapset=dflt** parameter is specified, and the **force** parameter is not specified as **yes**, then the specified PC/SSN must exist in the specified MAP set.

Notes

Origination Addresses are considered to be the SCCP CGPA address as well as the Numbering Plan and Nature of Address values.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-).

Output

```
ent-gsms-
opcode:opname=test3:opcode=3:pc=1-1-1:dfltact=duplicate:ssn=10:ma
pset=7
tekelecstp 06-05-29 13:21:58 EST EAGLE 35.0.0
ENT-GSMS-OPCODE: MASP A - COMPLTD
;
```

ent-gsmssn-scrn

Enter GSM Subsystem Number Screening Entry

Use this command to provision origination and destination SSNs (subsystem numbers) to be screened using the GSM (Global System for Mobile Telecommunication) MAP (mobile application part) screening feature. The value of the **ssn** parameter that is entered with this command is added to the GSM SSN screening table. All the MAP messages with the originating or destination **ssn** entered are screened using the GSM Map screening feature.

Keyword: ent-gsmssn-scrn

Related Commands: dlt-gsmssn-scrn, rtrv-gsmssn-scrn

Command Class: Database Administration

Parameters

:ssn= (mandatory)
Subsystem number.
Range: 000-255

:type= (mandatory)
Subsystem type.
Range: dest, orig
dest — The destination SSN
orig — The origination SSN

Example

The following example adds an originating subsystem of 10 to the GSM SSN Screening table:

```
ent-gsmssn-scrn:ssn=10:type=orig
```

Dependencies

The GSM Map Screening feature must be turned on (see the **enable-ctrl-feat** command) before this command can be entered.

A value for the **ssn** and **type** parameter combination cannot be specified that already exists in the GSM SSN screening table.

Notes

None

Output

```
ent-gsmssn-scrn:ssn=10:type=orig
rlghncxa03w 04-01-10 11:43:04 EST EAGLE 31.3.0
ENT-GSMSSN-SCRN: MASP A - COMPLTD
;
```

ent-gta**Enter Global Title Address Information
Command**

Use this command to specify the GTA (global title address) information for applicable global title selectors required to specify a global title entry.

This command adds the routing object (a destination address and a subsystem number) for messages requiring a global title translation. The translation is performed on the basis of the global title address (**gta**), global title indicator (**gti**), numbering plan (**np**), nature of address indicator (**nai**), and translation type (**tt**) of each SS7 SCCP message directed to the STP with a routing indicator of 0, indicating a GTT is required.

Keyword: ent-gta

Related Commands: chg-gta, dlt-gta, rtrv-gta

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:gttsn= (mandatory)

GTT set name. This parameter specifies the entity to which global title addresses and selectors are assigned.

Range: ayyyyyyyy

1 leading alphabetic and up to 8 following alphanumeric characters.

:pc= (mandatory)

ANSI point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*). The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: pca

Range: p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001-005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006-255.

The point code 000-000-000 is not a valid point code.

:pci= (mandatory)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: s-, p-, ps-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps-

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

:pcn= (mandatory)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:pcn24= (mandatory)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)* The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:xlat= (mandatory)

Translate indicator. This parameter specifies translation actions and routing actions.

Range: **dpc, dpcngt, dpcssn, udts, disc**

:ccgt= (optional)

Cancel called global title indicator.

Range: **yes, no**

Default: **no**

:cggtasn= (optional)

CgPA GTA GTT set name.

Range: *ayyyyyyy*

1 leading alphabetic character and up to 8 following alphanumeric characters.

:cgpc= (optional)

ANSI CgPA point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: **cgpca**

Range: **000-255, ***

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

The asterisk (*) value is not valid for the *ni* subfield.

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

When **chg-sid:pctype=ansi** is specified, *ni*-*-*** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:cgpci= (optional)

ITU international CgPA point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:cgpcn= (optional)

ITU national CgPA point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:cgpcn24= (optional)

24-bit ITU national CgPA point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:cgpcsn= (optional)

CgPA PC GTT set name.

Range: *ayyyyyyy*

1 leading alphabetic character and up to 8 following alphanumeric characters.

:cgssn= (optional)

Starting CgPA subsystem number.

Range: **0-255**

:cgssnsn= (optional)

CgPA subsystem number GTT set name.

Range: *ayyyyyyy*

1 leading alphabetic character and up to 8 following alphanumeric characters.

- :ecgssn=** (optional)
Ending CgPA subsystem number.
Range: **0-255**
- :egta=** (optional)
End global title address.
Range: 1-21 digits
Default: Same as the specified **gta** value
- :force=** (optional)
Check mated application override. This parameter must be used to complete command execution if the **pci/pcn** and **ssn** parameter combination specified in the command is not already defined in the SCCP Application entity set (Remote Point Code/Mated Application Table).
Range: **yes, no**
Default: **no**
- :gta=** (optional)
Start global title address.
Range: 1-21 digits
- :mapset=** (optional)
MAP set ID. This parameter specifies the Mated Application set ID.
Range: **1-36000 dflt**
 dflt—Default MAP set
- :mrnset=** (optional)
MRN set ID. This parameter specifies the Mated Relay Node set ID.
Range: **1-3000 none, dflt**
 dflt—Default MRN set.
 none—The GTA translation does not participate in any load sharing.
- :ngti=** (optional)
New GTI code. When the ANSI-ITU-China SCCP Conversion and MGTT features are on, and the Translated Point Code is of a different network type, this parameter specifies whether the new GTI translation format is GTI type 2 or GTI type 4.
Range: **2, 4**
- :nnai=** (optional)
New nature of address indicator. This parameter specifies the nature of address indicator with which to replace the received nature of address indicator.
Range: **0-127**
Default: **0xFFFF**
- :nnp=** (optional)
New numbering plan. This parameter specifies the numbering plan with which to replace the received numbering plan.
Range: **0-15**
Default: **0xFFFF**
- :npdd=** (optional)
New prefix digits to be deleted. This parameter specifies the new prefix digits to be deleted with which to replace the received prefix digits to be deleted.
Range: **0-21**
Default: **0**

:npds= (optional)

New prefix digits string. This parameter specifies the new prefix digits string with which to replace the received prefix digits string.

Range: 1-21 digits

Default: No digits

:nsdd= (optional)

New suffix digits to be deleted. This parameter specifies the new suffix digits to be deleted with which to replace the received suffix digits to be deleted.

Range: 0-21

Default: 0

:nsds= (optional)

New suffix digits string. This parameter identifies the new suffix digits string with which to replace the received suffix digits string.

Range: 1-21 digits

Default: No digits

:ntt= (optional)

New translation type. The point code domain translation types for EGTT are handled by the EAGLE 5 ISS protocol processing as either ANSI or ITU; therefore, ITU applies to ITU-I, ITU-I Spare, ITU-N, and ITU-N Spare. ITU-I includes ITU-I Spare, and ITU-N includes ITU-N Spare.

Range: 000-255

Default: No **ntt** value provided

:opc= (optional)

ANSI originating point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Range: 000-255, *

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

The asterisk (*) value is not valid for the *ni* subfield.

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001–005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006–255.

When **chg-sid:pctype=ansi** is specified, *ni-*-** is valid if *ni* = 006–255.

The point code 000-000-000 is not a valid point code.

:opci= (optional)

ITU international originating point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

:opcn= (optional)

ITU originating point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:opcn24= (optional)

24-bit ITU national originating point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:opcsn= (optional)

The OPC GTT set name.

Range: *ayyyyyyy*

1 leading alphabetic character and up to 8 following alphanumeric characters.

:ri= (optional)

Routing indicator.

Range: **gt, ssn**

gt—Allow a called party address with a routing indicator value of “global title.”

ssn—Allow a called party address with a routing indicator value of “DPC/SSN.”

:selid= (optional)

Selector ID.

Range: **0-65534**

:ssn= (optional)

New translated subsystem number.

Range: **002-255**

Default: No *ssn* value provided

Example

The lines in some examples are wrapped for readability:

ent-gta:gttsn=lidb:gta=9195554321:xlata=dpc:ri=gt:pc=001-255-253

ent-gta:gttsn=t800:gta=919460:xlata=dpc:ri=gt:pc=001-255-252

ent-

gta:gttsn=t800:gta=919461:egta=919468:xlata=dpc:ssn:ri=ssn:pc=001-255-252:ssn=254

```

ent-
gta:gttsn=setint000:gta=391951212000000:egta=391951212399999:xlat=
=dpcssn :ri=ssn:pci=1-253-1:ssn=255
ent-
gta:gttsn=imsi:gta=591975593000000:egta=591975593299999:xlat=dpcn
gt:ri=gt :pci=004-167-25:ntt=4
ent-
gta:gttsn=test:gta=100000:egta=199999:pca=1-1-1:ssn=123:xlat=dpcn
gt :ri=gt:npdd=2:nnp=3:nnai=120
ent-
gta:gttsn=test2:gta=123:egta=321:pcn=222:ssn=10:xlat=dpcngt :ri=gt
:npds=999:nnai=100
ent-
gta:xlat=dpcssn:ri=ssn:pcn24=8-8-8:gttsn=any:gta=919833:ssn=20
ent-
gta:xlat=dpcssn:ri=ssn:ssn=10:gta=12345678901:egta=23456789012 :nn
p=14:nnai=3:pcn=s-124:gttsn=setnat003
ent-
gta:xlat=dpcssn:ri=ssn:ssn=10:gta=12345688901:egta=23456889012 :nn
p=14:nnai=3:pcn=s-128-aa:gttsn=setnat003
ent-gta:gta=987666799012345678901:egta=987667321099765432101
xlat=dpcngt:ri=gt:pcn=s-124-aa:ntt=234:ccgt=no:
gttsn=setnat003:nnp=12:nnai=26
ent-
gta:xlat=dpcssn:ri=ssn:ssn=10:gta=13345688901:egta=24456889012 :nn
p=14:nnai=3:pci=s-1-230-2:gttsn=itui1
ent-
gta:gttsn=tbla:xlat=dpc:ri=gt:pc=1-1-1:gta=1234567700:mrnset=dfllt
ent-
gta:gttsn=tbla:xlat=dpc:ri=gt:pc=1-1-1:gta=1234567890:egta=223456
7890:mrnset=23
ent-
gta:gttsn=tbla:xlat=dpcngt:ri=gt:pc=1-1-2:gta=2345678901:egta=345
6789012:mrnset=54
ent-
gta:gttsn=tbla:xlat=dpcngt:ri=gt:pc=1-1-3:gta=3456789012:egta=456
7890123:mrnset=none

```

The following examples require the Flexible GTT Load Sharing feature to be ON.

```

ent-
gta:gttsn=tblx:xlat=dpcssn:ri=ssn:pc=1-1-1:gta=1234567890:egta=22
34567890:ssn=10:mapset=23
ent-gta:gttsn=tblx:xlat=dpc:ri=ssn:pc=2-2-2:gta=2345678911:egta=
3456789022:mapset=dfllt

```

Provisions Advanced CdPA GTA translations.

```

ent-
gta:gttsn=setcdgta:gta=123456789012345678901:egta=223456789012345
678901:

```

```

xlat=dpcssn:ri:ssn:pca=001-001-001:ssn=100:cggtasn=setcggtta:opcsn
=setopc
ent-
gta:gttsn=cdgta1:gta=133456789012345678901:egta=23345678901234567
8901:
xlat=dpcssn:ri:ssn:pca=001-001-001:ssn=100:selid=342:opcsn=setopc
ent-
gta:gttsn=setudts1:gta=423456789012345678901:egta=523456789012345
678901: xlat=udts
ent-
gta:gttsn=setcggtta:gta=323456789012345678901:egta=423456789012345
678901: xlat=dpcssn:ri:ssn:pca=001-001-001:ssn=20:cgssnsn=setcgssn
ent-
gta:gttsn=cggtadsc:gta=623456789012345678901:egta=623456789012345
678901: xlat=disc
ent-gta:gttsn=setcgpc:cgpca=001-001-001:xlat=dpcssn:ri:ssn:
pca=001-001-001:ssn=20:cgssnsn=setcgssn
ent-gta:gttsn=cgpcudt2:cgpca=001-001-009:xlat=udts
ent-gta:gttsn=setopc:opca=002-001-001:xlat=dpcssn:ri:ssn:
pca=001-001-001:ssn=20:cgssnsn=setcgssn
ent-gta:gttsn=opcdisc3:opca=002-001-001:xlat=disc
ent-gta:gttsn=setcgssn:cgssn=100:ecgssn=200:xlat=dpcssn:ri:ssn:
pca=001-001-001:ssn=20
ent-gta:gttsn=cgssnud3:cgssn=100:ecgssn=200:xlat=udts

```

Dependencies

The EGTT feature must be turned on before this command can be entered.

The MGTT feature must be turned on before the **nnp**, **nnai**, **ngti**, **nsdd**, **nsds**, **npdd**, and **npds** parameters can be specified.

The ANSI-ITU-China SCCP Conversion feature must be enabled and turned on before the **ngti** parameter can be specified.

The ANSI-ITU-China SCCP Conversion feature must be enabled and turned on before a translated PC that is of a different domain than the GTTSN can be specified.

The ANSI-ITU-China SCCP Conversion feature must be on before a translated PC and a translation type in different network types can be specified.

Asterisks cannot be specified for the **ssn**, **ri**, **cgssn**, or **ecgssn** parameters.

The **gttsn** parameter must be specified and must match an existing **gttsn**.

The **pc/pca/pci/pcn/pcn24** parameter cannot be out of range.

If the **egta** parameter is specified, then the values of the **gta** and **egta** parameters must be the same length.

The length of the specified **gta** parameter must match the number of digits provisioned for the specified GTT set (**gttsn**).

The maximum length of the resulting GTA string must not exceed 21 digits when translation is complete.

The specified **gta/egta** range must exist for the specified GTT set in the STP active database. While an exact match is not required, you cannot specify an overlap with another range. If the range overlaps, an error is generated that displays a list of overlapped global title addresses. An example follows that

shows what happens when the user attempts to enter a global title address range (such as 8005550000 to 8005559999) that overlaps an existing range. The overlapping links must match. If they do not, the error message displays the list of overlapped global title addresses:

```
The following GTA ranges overlap the input GTA range
START GTA      END GTA
8005550000     8005551999
8005552000     8005553999
8005554000     8005555999
ENT-GTA: MASP A - Command Aborted
```

The new translation type (**ntt** parameter) must match that of an existing ANSI GTT selector that is assigned to a GTT set (**gttsn** parameter).

The new translation type (**ntt** parameter) cannot already be defined as an alias.

If the ANSI-ITU-China SCCP Conversion feature is on, and the **ntt** parameter is specified, then the **ri=gt** parameter must be specified.

If the ANSI-ITU-China SCCP Conversion feature is on, then the **ntt** parameter can be specified only when the **xlat** parameter value is **dpc** or **dpcngt**.

The **ngti** parameter can be specified only when the translated point code and the translation type are in different domains, or are both in the ITU domain.

The **nsdd** and **nsds** parameters cannot be used in the same command with the **npdd** and **npds** parameters.

If the **ngti=4** parameter is specified, then the **nnp** and **nnai** parameters must be specified.

If the **ngti=4** parameter is specified, then the translated PC cannot be ANSI. For ANSI PCs, the GTI value must be **2**.

If the **ngti=2** parameter is specified, then the **nnp** and **nnai** parameters cannot be specified.

The **ccgt** and **ngti** parameters cannot be specified together in the command.

If the ANSI-ITU-China SCCP Conversion feature is not on and the specified GTT set is an ANSI set, then the **pc/pca** parameter must be a valid ANSI point code.

When the ANSI-ITU-China SCCP Conversion feature is not on and the specified GTT set is an ITU set, the **pci/pcn/pcn24** parameter must be a valid ITU point code.

If the **xlat=dpcngt** parameter is specified, then the **ri=gt** parameter must be specified.

If the **xlat=dpcngt** parameter is specified, then the **ntt** parameter must be specified.

If the **ntt** parameter is specified, then the **xlat=dpcngt** parameter must be specified.

If the **ssn** parameter is specified, then the **xlat=dpcssn** parameter must be specified.

If the **xlat=dpcssn** parameter is specified, then the **ssn** parameter must be specified.

If the value specified for the **pc/pca/pci/pcn/pcn24** parameter is the STP's true point code, the **xlat=dpcssn** and **ri=ssn** parameters must be specified.

If the value specified for the **pc/pca/pci/pcn/pcn24** parameter is the STP's true point code and the **ssn** parameter is specified, the **ssn** parameter must exist in the SS-APPL table.

Unless the PC is the STP true PC, the value specified for the **pc/pca/pci/pcn/pcn24** parameter must exist as a destination in the Route table or reside in a cluster that exists as a destination in the Route table (for global routing).

If a final GTT (the **ri=ssn** parameter) is specified with the **xlat=dpc** parameter and without the **force=yes** parameter, then the PC (**pc/pca/pci/pcn/pcn24**) must exist in the Remote Point Code/ MAP table. The **force=yes** parameter can be specified to execute the command when the PC is not in the table; the following warning message is displayed in the scroll area of the terminal:

```
CAUTION: DPC DOES NOT EXIST IN MATED APPLICATION TABLE.
```

If the **ccgt=yes** parameter is specified, then the **ri=ssn** parameter must be specified.

If the **pc/pca/pci/pcn/pcn24** parameter is any of the STP's PCs or CPCs, then the **ccgt=no** parameter must be specified.

If the XGTT feature is enabled, the GTT table can contain up to either 400,000 or 1,000,000 entries, depending on the controlled feature Part Number that is enabled. If XGTT is not enabled, the GTT table can contain up to 269,999 user entries. An error message is displayed if a command entry would result in more than the allowed maximum number of entries in the table.

If the **egta** parameter is specified, then the value of the **egta** parameter must be greater than or equal to the value of the **gta** parameter.

The GTT Set Name must not be **none**.

The **pc/pca/pci/pcn/pcn24** parameter must be a full PC.

If the VGTT (variable length GTT) feature is turned on, there can be up to 10 GTA lengths per GTT set. When the **ent-gta** command is entered to create entries, the software keeps track of the lengths and allows only 10 different lengths.

If the **ri=ssn** parameter is specified, then the **mrnset** parameter must not be specified.

If the Flexible GTT Load Sharing feature is enabled, then the specified PC must already exist in the specified MRN set.

The specified MRN set must already exist in the MRN table.

The **mrnset** parameter can only be specified when the Flexible GTT Load-Sharing feature is enabled.

If the **ri=gt** parameter is specified, then the **mrnset** parameter must be specified.

The **mapset** parameter can only be specified if the Flexible GTT Load Sharing feature is enabled, and the **ri=ssn** parameter is specified. If the **ri=ssn** parameter is specified, the **mapset** parameter must be specified. If the **ri=gt** parameter is specified, the **mapset** parameter cannot be specified.

The Flexible GTT Load Sharing feature must be enabled before the **mapset** parameter can be specified.

The specified PC and SSN must exist in the specified MAP set.

The specified MAP set must exist in the database.

If the **xlat=dpc** parameter is specified, and the **force** parameter is not specified as **yes**, then the specified PC and MAP set must exist in the MAP table.

Either the **gta**, **cgpc/cgpcac/cgpci/cgpcn/cgpcn24**, **opc/opca/opci/opcn/opcn24**, or **(e)cgssn** parameter must be specified.

The **cggtasn**, **cgpcsn**, and **selid** parameters are mutually exclusive.

If the **cgssnsn** parameter is specified, the **cggtasn**, **opcsn**, **cgpcsn**, and **selid** parameters cannot be specified.

If the **cgssn** parameter is specified, the **cggtasn**, **cgpcsn**, **cgssnsn**, **opcsn**, and **selid** parameters cannot be specified.

If the **ecgssn** parameter is specified, it must be greater than the **cgssn** parameter.

If the **xlat** parameter has a value of **udts** or **disc**, the only other optional parameters that can be specified are the **gta/egta**, **cgpc**, **opc**, or **cgssn/ecgssn** parameters.

If the **xlat** parameter has a value of **dpc**, **dpcngt**, or **dpcssn**, the **gta/egta**, **gcpc**, **opc**, **cgssn/ecgssn**, **pc/pca/pci/pcn/pcn24**, and **ri** parameters must be specified.

The Origin Based SCCP Routing feature must be enabled if the **cggtasn**, **cgpcsn**, **cgssnsn**, **opcsn**, **cgpc/cgpcac/cgpci/cgpcn/cgpcn24**, **opc/opca/opci/opcn/opcn24**, **(e)cgssn**, or **selid** parameters are specified, or if the **xlat** parameter has a value of **udts** or **discard**.

If the GTTSN set type has a value of **cdga** or **cgssn**, the **cgssnsn** parameter cannot be specified. If the GTTSN set type has a value of **cdgta**, the **cggtasn**, **cgpcsn**, or **opcsn** parameters must be specified. The GTA must be specified if the GTTSN set type has a value of **cdgta** or **cggta**. The GTA cannot be specified for other set types.

If the GTTSN set type has a value of **cgpc**, the **cgpc/cgpca/cgpci/cgpcn/cgpcn24** parameter must be specified. This parameter cannot be specified for other set types.

The **opc**, **opca**, **opci**, **opcn**, or **opcn24** parameter must be specified if the GTTSN set type has a value of **opc**. These parameters cannot be specified for other set types.

If the GTTSN set type has a value of **cgssn**, the **cgssn** parameter must be specified. The **cgssn** parameter cannot be specified for GTTSN of other types.

The CgPA subsystem number range cannot overlap a currently existing range for the specified GTT set.

The value specified for the GTT set name (the **gttsn** parameter) must match the corresponding type in the GTTSET table. The following GTT set names and matching GTT set types may be specified:

- GTT set name specified by the **cgssnsn** parameter must be type **cgssn**
- GTT set name specified by the **cggtasn** parameter must be the type **cggta**
- GTT set name specified by the **cgpcsn** parameter must be type **cgpc**
- GTT set name specified by the **opcsn** parameter must be type **opc**

If the specified GTT set is an ANSI set, the **cgpc/cgpca** and **opc/opca** parameters must be valid ANSI point codes. If the specified GTT set is an ITU set, the **cgpci/cgpcn/cgpcn24** and the **opci/opcn/opcn24** parameters must be valid ITU point codes.

The CgPC subsystem number set domain must be the same as the GTTSN set domain. If GTTSN set domain is ANSI, then the CgPC subsystem number set domain must be ANSI. If the GTTSN set domain is ITU, then the CgPC subsystem number set domain must be ITU.

The OPC subsystem number set domain must be the same as the GTTSN set domain. If the GTT subsystem number set domain is ANSI, then the OPC subsystem number set domain must be ANSI. If the GTT subsystem number set domain is ITU, then the OPC subsystem number set domain must be ITU.

The CGSSN number set domain and the CGGTA subsystem number set domain must be the same as the GTT subsystem number set domain. The possible values are ANSI or ITU.

The CGSSN range cannot overlap a currently existing range for the specified GTT set.

The **selid** parameter can be specified only if the GTTSN set type has a value of **cdgta**.

The specified **cgpc** or **opc** translation entry already exists.

The **cgpc**, **cgssn**, **gta**, and **opc** parameters are mutually exclusive. Each of these parameters must be specified individually in separate commands.

Notes

When the EGTT feature is turned on, the GTT Selector (**ent/chg/dlt/rtrv-gttset**), GTT Set (**ent/dlt/rtrv-gttset**), and GTA (**ent/chg/dlt/rtrv-gta**) commands replace the Translation Type (**ent/dlt/rtrv-tt**) and Global Title Translation (**ent/chg/dlt/rtrv-gtt**) commands. All data previously provisioned with these commands is maintained.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (**s-**) and the private and spare point code subtype prefix (**ps-**). All of the point code types support the private (internal) point code subtype prefix (**p-**).

When the Flexible GTT Load Sharing feature and the Intermediate GTT Load Sharing feature are on, multiple relationships can be defined among set of destination point codes in the MRN table, which already exists in the EAGLE 5 ISS. The relationship used in a particular translation is based on the GTA digits used for translation. The MRN set and the post-translation PC create a key that is used to perform lookups in the MRN table. The lookup results in a set of alternate PCs, one of which is selected, based on PC relative cost, to route the MSU in the most cost effective way.

When the Flexible GTT Load Sharing feature is enabled, multiple relationships can be defined among a set of PC/SSNs in the existing MAP table. The relationship used in a particular translation is based on the GTA digits used for translation.

When the Origin-based SCCP Routing feature is turned on, the CdPA GTA, CgPA GTA, CgPA PC, CgPA SSN, and OPC entries can be provisioned. When provisioning, the following rules apply:

- The Advanced CdPA GTA entry can associate with CgPA GTA set, CgPA PC set, or SELID and OPC set.
- The CgPA GTA, CgPA PC, or OPC entry can associate with the CgPA SSN set.
- The CgPA SSN entry cannot associate with any other GTT set.
- The Advanced CdPA GTA entry may contain SELID, which is (together with the CgPA information) derived from incoming MSU to search the Selector table again for the CgPA GTA or CgPA PC Set.

When the Origin-based SCCP Routing feature is enabled, the GTA and EGTA can be used for the CgPA translation as well as the CdPA GTA translation.

Output

```
ent-gta:gttsn=lidb:gta=9195554321:xlat=dpc:ri=gt:pc=001-255-253
rlghncxa03w 04-01-20 09:07:58 EST EAGLE 31.3.0
ENT-GTA: MASP A - CMPLTD
;

ent-
gta:gttsn=tblx:xlat=dpcssn:ri=ssn:pc=1-1-1:gta=1234567890:egta=22
34567890:ssn=10:mapset=23
tekelecstp 06-05-27 11:43:27 EST EAGLE 35.0.0
ENT-GTA: MASP A - COMPLTD
;
```

ent-gtcnv

Enter Global Title Conversion

Use this command to provision the Default Global Title Conversion table. The table is used during conversion for MTP-routed cross network SCCP UDT, UDTS and SCCP Management messages. It is also used during conversion for GT routed messages when a matching entry exists in the Global Title address table but the NGTI value is not provisioned.

Keyword: ent-gtcnv

Related Commands: chg-gtcnv, dlt-gtcnv, rtrv-gtcnv

Command Class: Database Administration

Parameters

:dir= (mandatory)

Direction of conversion.

Range: atoi, itoa, both

atoi — ANSI to ITU conversion

itoa — ITU to ANSI conversion

both — conversion in both directions

:gtixlat= (mandatory)

Global Title Indicator conversion. This parameter is expressed in the form of the ANSI GTI and the ITU GTI.

Range: 22, 24

22 — Converts an incoming ANSI GTI 2 to an outgoing ITU GTI 2 or an incoming ITU GTI 2 to an outgoing ANSI GTI 2

24 — Converts an incoming ANSI GTI 2 to an outgoing ITU GTI 4 or an incoming ITU GTI 4 to an outgoing ANSI GTI 2

:tta= (mandatory)

ANSI translation type.

Range: 0-255 *

:tti= (mandatory)

ITU translation type.

Range: 0-255 *

:nai= (optional)

Nature of Address Indicator. This parameter is mandatory when **gtixlat=24** is specified, and not specified when **gtixlat=22** is specified.

Range: 0-63 *

Default: Not set

:np= (optional)

Numbering Plan. This parameter is mandatory when **gtixlat=24** is specified, and not specified when **gtixlat=22** is specified.

Range: 0-15 *

Default: Not set

:npdd= (optional)

The number of New Prefix Digits to be Deleted, which will be replaced with the New Prefix Digits String (**npds**)

Range: 0-21

Default: 0

:npds= (optional)

The New Prefix Digits String with which to replace the received Prefix Digits String that is deleted (**npdd**).

Range: 1-21 digits

Valid digits are 0-9.

Default: No digits

:nsdd= (optional)

New Suffix Digits to be Deleted. This parameter identifies the New Suffix Digits to be Deleted with which to replace the received Suffix Digits to be Deleted.

Range: 0-21

Default: 0

:nsds= (optional)

New Suffix Digits String. This parameter identifies the New Suffix Digits String with which to replace the received Suffix Digits String.

Range: 1-21 digits

Default: No digits

Example

The following example assigns an entry used for ANSI to ITU conversion where the conversion is from GTI 2 to GTI 2.

ent-gtcnv:dir=atoi:gtixlat=22:tta=10:tti=5

The following example assigns an entry used for ANSI to ITU conversion where the conversion is from GTI 2 to GTI 4. The nsdd parameter specifies that the last 3 digits are to be removed from the end of the address digits, and the nsds parameter specifies that the digits 123 are to be appended to the end of the remaining address digits.

ent-gtcnv:dir=atoi:gtixlat=24:tta=11:tti=7:nai=8:np=6:nsdd=3:nsds=123

The following example assigns an entry used for ITU to ANSI conversion where the conversion is from GTI 2 to GTI 2. The npdd parameter specifies that the first 3 digits are to be deleted from the beginning of the address digits, and the npds parameter specifies that the digits 407 should be appended to the beginning of the remaining address digits.

ent-gtcnv:dir=itoe:gtixlat=22:tta=11:tti=7:npdd=3:npds=407

The following example assigns an entry used for ITU to ANSI conversion where the conversion is from GTI 2 to GTI 4. The nsds Parameter specifies that the digits 45667 are to be appended to the end of the address digits.

ent-gtcnv:dir=itoe:gtixlat=24:tta=11:tti=7:nai=8:np=6:nsds=45667

The following example assigns an entry used for ANSI/ITU conversion in both directions where the conversion is from GTI 2 to GTI 2.

ent-gtcnv:dir=both:gtixlat=22:tta=11:tti=7

The following example assigns an entry used for ANSI/ITU conversion where an incoming ANSI GTI 2 is converted to an outgoing ITU GTI 4 or an incoming ITU GTI 4 to an outgoing ANSI GTI 2.

ent-gtcnv:dir=both:gtixlat=24:tta=12:tti=9:nai=6:np=4

The following example assigns a default entry for ANSI to ITU conversion where the conversion is from GTI 2 to GTI 2.

ent-gtcnv:dir=atoi:gtixlat=24:tta=*:tti=4:nai=6:np=5

The following example assigns a default entry for ITU to ANSI where the conversion is from GTI 2 to GTI 4. The npds parameter specifies that the digits 919 are to be appended to the beginning of the address digits.

ent-gtcnv:dir=itoe:gtixlat=24:tta=17:tti=*:nai=*:np=*:npds=919

Dependencies

The ANSI-ITU-China SCCP Conversion feature must be turned on before this command can be entered.

If **gtixlat=22** is specified, the **nai** and **np** parameters cannot be specified.

If **gtixlat=24** is specified, the **nai** and **np** parameters must be specified.

When **dir=both** is specified, no asterisk (*) parameter values can be specified.

When **dir=atoi** is specified, the asterisk parameter value (*) can be specified only for the **tta** parameter.

When **dir=itoe** is specified, the asterisk parameter value (*) must be specified for the **tti**, **np**, and **nai** parameters.

The specified **dir**, **tta**, **tti**, **np**, and **nai** parameter combination cannot already exist in the database.

The **nsdd** and **nsds** parameters cannot be used in the same command with the **npdd** and **npds** parameters.

The Default Global Title Conversion table can contain a maximum of 1000 entries.

Notes

The use of asterisks (wildcards) is allowed only once for each direction of ANSI to ITU and ITU to ANSI. This provides a configurable default.

In the conversion direction of ANSI to ITU, an asterisk can be specified only for the ANSI **tta** parameter.

In the conversion direction of ITU to ANSI, the asterisk value must be specified for the **itu tti**, **np**, and **nai** parameters.

Asterisks are not allowed when conversion is in both directions (**dir=both**).

The suffix digit manipulation parameters **nsdd** and **nsds** cannot be specified in the same command with the prefix digit manipulation parameters **npdd** and **npds** parameters. The **npdd** and **nsdd** parameters specify how many digits to delete, if any, from the beginning or end respectively of the Global Title address digits. The **npds** and **nsds** parameters specify what digits, if any, to append to the beginning or end respectively of the Global Title address digits.

The **gtixlat** parameter is expressed in the form of the ANSI GTI and the ITU GTI. The **gtixlat** parameter is used to indicate the conversion of the Global Title Indicator between the ANSI and ITU standards. For example: A **gtixlat** value of **24** converts an incoming ANSI GTI 2 to an outgoing ITU GTI 4 or an incoming ITU GTI 4 to an outgoing ANSI GTI 2.

Output

```
ent -gtcnv:dir=atoi:gtixlat=22:tta=10:tti=5
rlghncxa03w 04-01-07 11:43:07 EST EAGLE 31.3.0
ENT-GTCNV: MASP A - COMPLTD
;
```

ent-gtt

Enter Global Title Translation

Use this command to add the routing object, DPC, and subsystem number for messages requiring global title translation. The translation is performed on the basis of the global title address (GTA) and translation type (TT) for each SS7 SCCP message directed to the STP's self-identity DPC or CPC with a routing indicator of 0, indicating a GTT is required.

If the EGTT (Enhanced Global Title Translation) feature is turned on in the system, the system will no longer accept **-gtt** (Global Title Translation) and **-tt** (Translation Type) commands. Refer to the new command sets that replace the **-gtt** and **-tt** commands:

- GTT Selector commands (**ent/chg/dlt/rtrv-gttset**)
- GTT Set commands (**ent/dlt/rtrv-gttset**)
- GTA commands (**ent/chg/dlt/rtrv-gta**).

See the "Notes" section of this command description for functions provided when various controlled features are turned on.

Keyword: **ent-gtt**

Related Commands: **chg-gtt**, **dlt-gtt**, **rtrv-gtt**

Command Class: Database Administration

Parameters

At least one of these parameters must be specified: **ttn**, **type/typea/typeei/typen/typen24**.

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:gta= (mandatory)

Global title start address. This parameter, along with the **egta** parameter, specifies all valid global titles for the given translation type to translate to the given **pc**, **ssn**, or **ngt**. These are the non-SS7 addresses transmitted to the STP for translation.

Range: 1-21 digits

:pc= (mandatory)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: **pca**

Range: **p-**, **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001-005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006-255**.

The point code **000-000-000** is not a valid point code.

:pc/pca/pci/pcn/pcn24= (mandatory)

Point code.

:pci= (mandatory)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-**, **p-**, **ps-**, **0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**, **p-**, **ps-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:pcn= (mandatory)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-**, **p-**, **ps-**, **0-16383**, **aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**, **p-**, **ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:pcn24= (mandatory)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)* The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Range: **p-**, **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:ri= (mandatory)

Route indicator. This parameter specifies whether a subsequent global title translation is required.

Range: **gt**, **ssn**

gt— Subsequent translation is required.

ssn— Subsequent translation is not required.

:xlat= (mandatory)

Translate indicator. This parameter specifies the type of global title translation to be performed.

Range: **dpc**, **dpcssn**, **dpcngt**

:egta= (optional)

Global title end address. This parameter, along with the **gta** parameter, specifies all valid global titles for the given translation type to translate to the given **pc**, **ssn**, or **ngt**. These are the non-SS7 addresses transmitted to the STP for translation.

Range: 1-21 digits

Default: **egta** same as **gta**

:force= (optional)

When a final GTT is specified, the DPC and subsystem number must be configured in the mated application table (**xlat=dpc** and **ri=ssn**). The **force=yes** parameter allows you to override this restriction.

Range: **yes**, **no**

Default: **no**

:mapset= (optional)

MAP set ID.

Range: **1-3600Q dflt**

dflt—Default MAP set

:mrnset= (optional)

MRN set ID.

Range: **1-3000 none, dflt**

dflt—Default MRN Set ID

none—Removes the specified MRN Set ID from the MRN table

:ngt= (optional)

New global title. This parameter specifies the type of global title translation with which to replace the received global title.

If the **xlat=dpcngt** parameter is specified, the **ngt** parameter must be specified. If the **xlat=dpcngt** parameter is not specified, the **ngt** parameter cannot be specified.

Range: 000-255

:ngti= (optional)

New global title indicator code. When the ANSI-ITU-China SCCP Conversion and MGTT features are on and the Translated Point Code is of a different network type, the **ngti** parameter specifies whether the new GTI translation format is GTI type 2 or GTI type 4.

Range: 2, 4

:nnai= (optional)

New nature of address indicator. This parameter specifies the nature of address indicator with which to replace the received nature of address indicator.

Range: 0-127

Default: 0xFFFF

:nnp= (optional)

New numbering plan. This parameter specifies the numbering plan with which to replace the received numbering plan.

Range: 0-15

Default: 0xFFFF

:npdd= (optional)

New prefix digits to be deleted. This parameter specifies the new prefix digits to be deleted with which to replace the received prefix digits to be deleted.

Range: 0-21

Default: 0

:npds= (optional)

New Prefix Digits String. This parameter identifies New Prefix Digits String with which to replace the received Prefix Digits String.

Range: 1-21 digits

Default: No digits

:nsdd= (optional)

New suffix digits to be deleted. This parameter specifies the new suffix digits to be deleted with which to replace the received suffix digits to be deleted.

Range: 0-21

Default: 0

:nsds= (optional)

New suffix digits string. This parameter specifies the new suffix digits string with which to replace the received suffix digits string.

Range: 1-21 digits

Default: No digits

:ssn= (optional)

Subsystem number. This parameter specifies the subsystem address that is to receive the message. If the **xlat=dpcngt** parameter is specified, the **ssn** parameter must be specified. If the **xlat=dpcngt** parameter is not specified, the **ssn** parameter cannot be specified.

Range: 002-255

:ttn= (optional)

Translation type name. The name is of local significance only, and is related to the translation type.

Range: ayyyyyy

1 alphabetic character followed by up to 7 alphanumeric characters

Default: No translation name is given

:type/typeea/typei/typen/typen24= (optional)

Translation type identifies the translation type and network type. This parameter is the decimal representation of the 1-byte field used in SS7.

The **type** and **typea** parameters specify an ANSI network.

The **typei** parameter specifies an ITU-international network.

The **typen** parameter specifies an ITU-national network.

The **typen24** parameter specifies a 24-bit ITU-national network.

A translation type numeric value may be entered as ANSI type (**type** or **typea**) and also as an ITU type (**typei** or **typen**). However, they are separate entities.

The point code domain translation types for GTT are handled by the EAGLE 5 ISS protocol processing as either ANSI or ITU; therefore, ITU applies to ITU-I, ITU-I Spare, ITU-N, and ITU-N Spare. ITU-I includes ITU-I Spare, and ITU-N includes ITU-N Spare.

Range: 000-255

Default: No translation type is specified

Example

The lines in the following examples are wrapped for readability:

ent -

gtt:type=3:gta=9195551212:egta=9195552000:xlat=dpcssn:ri=ssn:pc=001-255-255:ssn=255

ent -

gtt:ttn=lidb1:gta=9105551212:egta=9105554000:xlat=dpcngt:ri=gt:pc=001-255-254:ngt=4

ent-gtt:ttn=c800:gta=9195554321:xlat=dpc:ri=gt:pc=001-255-253

ent-gtt:type=4:gta=919460:xlat=dpc:ri=ssn:pc=001-255-252

ent-gtt:type=4:gta=919461:xlat=dpcssn:ri=gt:ssn=254

ent -

gtt:typea=210:ttn=test:gta=100000:egta=199999:pca=1-1-1:ssn=123:xlat=dpcngt:ri=gt:npdd=2:nnp=3:nnai=120

ent -

gtt:type=100:ttn=test2:gta=123:egta=321:pcn=222:ssn=10:xlat=dpcngt:ri=gt:npds=999:nnai=100

ent -

gtt:pcn24=8-8-8:gta=919833:xlat=dpcssn:ri=ssn:ssn=20:typen24=4

ent -

gtt:typea=100:ttn=test2:gta=123:egta=321:pci=2-2-2:ssn=10:xlat=dpcngt:ri=gt:nsdd=3:nsds=567:nnai=62:nnp=4:ngti=4

ent-gtt:xlat=dpcssn:ssn=10:ri=gt:pci=s-1-21-1:gta=123456:typei=3

ent-gtt:xlat=dpcssn:ssn=10:ri=gt:pcn=s-124:gta=123456:typen=3

ent-gtt:xlat=dpcssn:ssn=10:ri=gt:pcn=s-125-aa:gta=123456:typen=3

ent-gtt:type=1:xlat=dpc:ri=gt:pc=1-1-1:

gta=1234567890:egta=2234567890:mrnset=23

ent-gtt:type=1:xlat=dpcngt:ri=gt:pc=1-1-2:

gta=2345678901:egta=3456789012:mrnset=54

```

ent-gtt:type=1:xlatt=dpcngt:ri=gt:pc=1-1-3:
gta=3456789013:egta=3456789019:mrnset=dflt
ent-gtt:type=1:xlatt=dpcngt:ri=gt:pc=1-1-3:
gta=3456789012:egta=4567890123:mrnset=none
ent-
gtt:type=1:xlatt=dpcssn:ri=ssn:pc=1-1-1:gta=1234567890:egta=223456
7890:ssn=10:mapset=23
ent-
gtt:type=1:xlatt=dpcssn:ri=ssn:pc=2-2-2:gta=2345678911:egta=345678
9022:ssn=25:mapset=dflt

```

Dependencies

This command is not valid when the EGTT feature is turned on.

The end address must be greater than or equal to the start address.

The **pcn** parameter format must match the format that was assigned with the **chg-stpopts:npcfnti** parameter.

If the **xlatt=dpcngt** parameter is specified, the **ngt** parameter must be specified. If the **xlatt** parameter value is not **dpcngt**, the **ngt** parameter cannot be specified.

Point code entries must be full point codes. Partial point codes are not allowed.

The start global title address length must be equal to the number of digits specified by the given translation type. If the VGTT (variable length GTT) feature is turned on, then up to 10 GTA lengths per translation type can be provisioned. When the **ent-gtt** command is entered to create entries, the software keeps track of the lengths and allows only 10 different lengths. The global title address specified for the translation type must then have the same number of digits as an existing GTA.

If the end global title address is specified, then its length must equal the length of the start global title address.

The maximum length of the resulting GTA string must not exceed 21 digits when translation is complete.

The MGTT feature must be on before the **nnp**, **nnai**, **nsdd**, **nsds**, **npdd**, and **npds** parameters can be specified.

The **nsdd** and **nsds** parameters cannot be used in the same command with the **npdd** and **npds** parameters.

If the translation type is specified, then it must already exist and cannot be an alias.

If the translation type is ANSI (the **type** or **typea** parameter), then the **pc** parameter type must be ANSI (the **pc** or **pca** parameter). If the translation type is one of the ITU types (the **typei**, **typen**, or **typen24** parameter), then the **pc** parameter type can be one of the ITU types (the **pci**, **pcn**, or **pcn24** parameter).

The ANSI-ITU-China SCCP Conversion feature must be on before a translated point code and a translation type in different network types can be specified.

The **ngti** parameter can be specified only when the translated PC and the translation type are in different domains, or are both in the ITU domain.

If the **ngti=4** parameter is specified, then the **nnp** and **nnai** parameters must be specified.

If the **ngti=4** parameter is specified, then the translated PC cannot be ANSI. For ANSI PCs, the GTI value must be 2.

If the **ngti=2** parameter is specified, then the **nnp** and **nnai** parameters cannot be specified.

The range, as specified by the start and end global title addresses, cannot exist in the global title translation data for the specified translation type. Each range may be contained completely within a

previously defined range, in which case splitting is performed. However, if the ranges overlap, splitting cannot occur, the command is rejected, and a list of overlapped global title addresses is displayed. An example follows that shows what happens when the user attempts to enter a global title address range (such as 8005550000 to 8005559999) that overlaps an existing range. The overlapping links must match. If they do not, error message E2401 is generated displaying the list of overlapped global title addresses:

```
The following GTA ranges overlap the input GTA range
START GTA      END GTA
8005550000      8005551999
8005552000      8005553999
8005554000      8005555999
ENT-GTT: MASP A - Command Aborted
```

If a final GTT is specified with the **ri=ssn** parameter and the **xlat=dpc** parameter, and if the value of the **force** parameter is not **yes**, then the PC must be configured in the Remote Point Code/MAP Table.

If the **xlat=dpcssn** parameter is specified, then the point code and subsystem combination must be an existing subsystem in the subsystem table for the remote point code.

If the **xlat=dpcssn** parameter is specified, the **ssn** parameter must be specified. If the **xlat** parameter value is not **dpcssn**, the **ssn** parameter cannot be specified.

If the ANSI-ITU-China SCCP Conversion feature is not on, and the **xlat=dpcngt** parameter is specified, then a value for the **ngt** parameter must be specified, and the **ri=gt** parameter must be specified. If the value for the **xlat** parameter is not **dpcngt**, then a value for the **ngt** parameter cannot be specified.

If the ANSI-ITU-China SCCP Conversion feature is turned on, and the **ngt** parameter is specified, then the **ri=gt** parameter must be specified.

If the ANSI-ITU-China SCCP Conversion feature is not on, the **ngt** parameter can be specified only if the **xlat=dpcngt** parameter is specified.

If the ANSI-ITU-China SCCP Conversion feature is turned on, the **ngt** parameter can be specified only if the **xlat=dpc** or the **xlat=dpcngt** parameter is specified.

Table 5-40 shows the valid combinations for the **xlat**, **ri**, **ssn**, and **ngt** parameters. All other combinations are rejected.

Table 5-40. Valid ent-gtt Routing Parameter Combinations

XLAT Value	RI Value	Routing Action	SSN Value	NGT Value
DPC	GT	Translate DPC only and route on GT	Cannot specify	Cannot specify unless ANSI-ITU-China SCCP Conversion is enabled
DPC	SSN	Translate DPC only and route on SSN	Cannot specify	Cannot specify
DPCSSN	GT	Translate DPC and SSN and route on GT	Must specify	Cannot specify

Table 5-40. Valid **ent-gtt** Routing Parameter Combinations

XLAT Value	RI Value	Routing Action	SSN Value	NGT Value
DPCSSN	SSN	Translate DPC and SSN and route on SSN	Must specify	Cannot specify
DPCNGT	GT	Translate DPC , new translation type (TT), and route on GT	Cannot specify	Must specify

If the XGTT feature is enabled, then the GTT table can have up to either 400,000 or 1,000,000 entries, depending on the controlled feature Part Number that is enabled. If XGTT is not enabled, then the GTT table can contain up to 269,999 user entries.

To enter this command, the Remote Point Code table cannot be full.

To enter this command, the subsystem table for primary remote point codes cannot be full.

If the **ri=ssn** parameter is specified, the **mrnset** parameter must not be specified.

The specified PC must already exist in the specified MRN set if the Flexible GTT Load Sharing feature is enabled.

The specified MRN set must already exist in the MRN table.

The **mrnset** parameter can only be specified when the Flexible GTT Load Sharing feature is enabled.

If **ri=gt** is specified, the **mrnset** parameter must be specified.

If the **ri=gt** parameter is specified, then the **mapset** parameter cannot be specified.

If the Flexible GTT Loadsharing feature is not enabled, the **mapset** parameter cannot be specified.

The **mapset** parameter can only be specified if the Flexible GTT Load Sharing feature is enabled, and the **ri=ssn** parameter is specified. If the **ri=ssn** parameter is specified, the **mapset** parameter must be specified. If the **ri=gt** parameter is specified, the **mapset** parameter cannot be specified.

The specified PC and SSN must exist in the specified MAP set.

At least one entry must be provisioned in the specified MAP set in the MAP table.

If the **xlat=dpc** parameter is specified, and the **force** parameter is not specified as **yes**, then the specified PC and MAP set must exist in the MAP table.

The MAP table must be accessible.

Notes

The routing indicator provides routing instructions to the receiving signaling point. If the routing indicator specifies global title, global title translation then needs to be performed at another signaling point.

Up to 200,00 entries are allowed for an individual translation type if all SCCP cards are TSMs or DSMs.

The ANSI point code **0-0-0** and the ITU-I point code **0-000-0** are not valid point codes.

The EAGLE 5 ISS does not require a MAP table entry to be configured prior to provisioning a GTT entry. The EAGLE 5 ISS assumes that the GTT entry is for a solitary point code/subsystem and automatically creates a MAP entry for the point code/subsystem.

The suffix digit manipulation parameters **nsdd** and **nsds** are available only with the MGTT feature on. The **nsdd** and **nsds** suffix digit manipulation parameters cannot be specified together with the **npdd** and **npds** prefix digit manipulations parameters in the command.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (**s-**) and the private and spare point code subtype prefix (**ps-**). All of the point code types support the private (internal) point code subtype prefix (**p-**).

When the Flexible GTT Load Sharing feature and the Intermediate GTT Load Sharing feature are on, multiple relationships can be defined among a set of destination point codes in the MRN table that exists in the EAGLE 5 ISS. The relationship used in a particular translation is based on the GTA digits used for translation. The MRN set and the post-translation PC creates a key that is used to perform lookups in the MRN table. The lookup results in a set of alternate PCs, one of which is selected, based on the PCs relative cost, to route the MSU in the most cost-effective way.

When the FFGTTLS feature is turned on, multiple relationships can be defined among set of PC/SSNs in the existing MAP table. The relationship used in a particular translation is based on the GTA digits used for translation.

With the ANSI-ITU-China SCCP Conversion feature turned on, the Translated Point Code (**pc**, **pca**, **pci**, **pcn**, and **pcn24** parameters) can be of a different network type than the Translation Type (**type** parameter).

When the ANSI-ITU-China SCCP Conversion and MGTT features are on and the Translated Point Code is of a different network type, the **ngti** parameter specifies whether the new GTI translation format is GTI type 2 or GTI type 4.

When the MGTT feature is off, **ngti** cannot be specified and the Default GT Conversion Table is used for conversion. With the ANSI-ITU-China SCCP Conversion feature off, mixed network types are not allowed.

Output

```
ent -
gtt:type=1:xlat=dpcssn:ri:ssn:pc=1-1-1:gta=1234567890:egta=223456
7890:ssn=10:mapset=23
      tekelecstp 06-05-27 11:43:27 EST   EAGLE 35.0.0
      ENT-GTT: MASP A - COMPLTD
;
```

ent-gtttsel

Enter GTT Selectors

Use this command to assign applicable global title selectors to a GTT set (**gttsn**) for enhanced global title translations.

Keyword: ent-gtttsel

Related Commands: chg-gtttsel, dlt-gtttsel, rtrv-gtttsel

Command Class: Database Administration

Parameters

:gti/gtia/gtii/gtin/gtin24= (mandatory)

Global title indicator. For all EGTT selector commands, the domain is defined as **gti** and **gtia** (ANSI), **gtii** (ITU international), **gtin** (ITU national), and **gtin24** (24-bit ITU national).

For the selector commands, **gti** and **gtia** are equivalent; **gtii** and **gtin/gtin24** are mutually exclusive because the EGTT database does not distinguish between ITU national and ITU international translations. This means that while ITU-I and ITU-N selectors are stored separately, two separate ITU-I and ITU-N entries with the same selector values cannot exist. For example, if an entry with **gtii=2** and **tt=4** already exists, an entry of **gtin=2** and **tt=4** cannot be entered.

Range: 2, 4

Supported value for ANSI: **gti=2** and **gtia=2**

Supported values for ITU: **gtii=2, 4** and **gtin/gtin24=2, 4**

:tt= (mandatory)

Translation type.

Range: 0-255

:cdgtasn= (optional)

CdPA GTA GTT set name.

Range: ayyyyyyyy

1 leading alphabetic and up to 8 following alphanumeric characters.

:cggtasn= (optional)

CgPA GTA GTT set name.

Range: ayyyyyyyy

1 leading alphabetic and up to 8 following alphanumeric characters.

:cgpcsn= (optional)

CgPA PC GTT set name.

Range: ayyyyyyyy

1 leading alphabetic and up to 8 following alphanumeric characters.

:cgssn= (optional)

CgPA subsystem number.

Range: 0-255

:gttsn= (optional)

GTT set name. A GTT set is an entity to which global title addresses and selectors are assigned.

The **gttsn** parameter can only be specified if the Origin-based SCCP Routing feature is off.

Range: ayyyyyyyy

1 leading alphabetic and up to 8 following alphanumeric characters.

:nai= (optional)

Nature of address indicator. The nature of address indicator can be specified by a mnemonic value (**nai** parameter) or an explicit numeric value (**naiv** parameter). Either the **nai** parameter or the **naiv** parameter, but not both, can be specified. Table A-5 shows the mapping between the **naiv** and the **nai** parameter values.

Range: sub, rsvd, natl, intl, dflt

:naiv= (optional)

Nature of address indicator value. The nature of address indicator can be specified by a mnemonic value (**nai** parameter) or an explicit numeric value (**naiv** parameter). Either the **nai** parameter or the **naiv** parameter, but not both, can be specified. Table A-5 shows the mapping between the **naiv** and the **nai** parameter values.

Range: 0-127

:np= (optional)

Numbering plan. The numbering plan can be specified by a mnemonic value (**np** parameter) or an explicit numeric value (**npv** parameter). Either the **np** parameter or the **npv** parameter, but not both, can be specified. Table A-6 shows the mapping between the **npv** and the **np** parameter values.

Range: e164, generic, x121, f69, e210, e212, e214, private, dflt

:npv= (optional)

Numbering plan value. The numbering plan can be specified by a mnemonic value (**np** parameter) or an explicit numeric value (**npv** parameter). Either the **np** parameter or the **npv** parameter, but not both, can be specified. Table A-6 shows the mapping between the **npv** and the **np** parameter values.

Range: 0-15

:selid= (optional)

Selector ID.

Range: 0-65534

Example

```

ent-gttset:gtia=2:tt=9:gttsn=lidb
ent-gttset:gtia=2:tt=10:gttsn=t800
ent-gttset:gtia=2:tt=253:gttsn=setans253
ent-gttset:gtii=4:tt=0:np=e164:nai=intl:gttsn=setint000
ent-gttset:gtii=2:tt=0:gttsn=setint000
ent-gttset:gtin=4:tt=9:np=e214:nai=natl:gttsn=imsi
ent-gttset:gtii=4:tt=0:np=e164:nai=sub:gttsn=setint000

ent-
gttset:gtia=2:tt=20:cdgtasn=setcdgta:cggtasn=setcggta:cgssn=10:selid=0

ent-
gttset:gtia=2:tt=21:cgpcsn=setcgpc:cgssn=setcggta:cgssn=20:selid=1

ent-gttset:gtii=2:tt=40:cdgtasn=setcdgta:cgpcsn=setcgpc:cgssn=12
ent-gttset:gtii=2:tt=41:cgpcsn=setcgpc:cgssn=255:selid=65534
ent-gttset:gtin=4:tt=60:npv=5:naiv=5:cdgtasn=setcdgta
ent-gttset:gtin=4:tt=60:npv=5:naiv=6:cgpcsn=setcgpc:cgssn=112

```

Dependencies

The EGTT feature must be turned on before this command can be entered.

The **np** and **npv** parameters cannot be specified in the same command.

The **nai** and **naiv** parameters cannot be specified in the same command.

The **gtia=4**, **gti/gtia/gtii/gtin/gtin24=1**, and **gti/gtia/gtii/gtin/gtin24=3** parameters cannot be specified.

If the **gti/gtia/gtii/gtin/gtin24=2** parameter is specified, the **np/npv** and **nai/naiv** parameter combinations cannot be specified.

If the **gtii/gtin/gtin24=4** parameter is specified, an **np(v)** and **nai(v)** parameter combination must be specified. These parameters can be specified in any combination: **np** and **naiv**, **npv** and **nai**, **np** and **nai**, or **npv** and **naiv**.

For existing TTs with **gtii/gtin/gtin24=4**, the domain of the new entry must match the existing domain.

The **gttsn** parameter cannot have a value of **none**.

An entry cannot already exist that matches the **gti**, **tt**, and **np(v)** and **nai(v)** parameter combination for the specified CdPA selector.

An entry cannot already exist that matches the **gtii**, **tt**, and **np(v)** and **nai(v)** parameter combination for the specified CdPA selector.

An entry cannot already exist that matches the specified **gtin**, **tt**, and **np(v)** and **nai(v)** combination of parameters for the specified CdPA selector.

The **gttsn** value cannot already exist for the **gtin24**, **tt**, **np/npv/nai/naiv** parameter combination for the specified CdPA selector.

The network domain of the specified GTT selector must match the domain of the GTT set specified by the **cdgtasn** parameter or **gttsn** parameter, unless the network domain (**netdom** parameter) of the existing GTT set has a value of **cross**.

At least one of the **cdgtasn**, **cggtasn**, or **cgpcsn** parameters must be specified.

If the **cgssn** and/or the **selid** parameter is specified, the **cggtasn** or the **cgpcsn** parameter must be specified.

The GTT selector table must not have more than 5 **nai** entries per **tt-np** combination.

The Origin-based SCCP Routing feature must be enabled before the **cggtasn**, **cgpcsn**, **cgssn**, **selid**, or **cdgtasn** parameters can be specified.

The **cdgtasn** or **cgpcsn** parameter value cannot already exist for the specified **gtin24**, **tt**, **np/npv/ nai/naiv** parameter combination.

An entry cannot already exist that matches the **gtii**, **tt**, and **np(v)** and **nai(v)** parameter combination for the specified CgPA selector.

An entry cannot already exist that matches the specified **gti**, **tt**, and **np(v)** and **nai(v)** combination of parameters for the specified CgPA selector.

An entry cannot already exist that matches the **gtin**, **tt**, and **np(v)** and **nai(v)** parameter combination for the specified CgPA selector.

The SSNSELID Table cannot contain more than 10,000 entries.

The GTTSET network domain for the **cggtasn** and **cgpcsn** parameters must match the domain indicated by the **gti** parameter.

The set types for the **cggtasn** and **cgpcsn** parameters must match the set type of the corresponding entry in the GTT set table. For example, the **cggtasn** parameter should have a set type of **cggtta**, and the **cgpcsn** parameter should have a set type of **cgpc**.

The GTT set specified by the **cggtasn** and **cgpcsn** parameters must exist in the database before it is assigned to a GTT selector.

The **cggtasn** and **cgpcsn** parameters cannot be specified in the same command.

The **gttsn** parameter value must match the name of an existing GTT Set.

Notes

When the EGTT feature is turned on, the GTT Selector (**ent/chg/dlt/rtrv-gttset**), GTT Set (**ent/dlt/rtrv-gttset**), and GTA (**ent/chg/dlt/rtrv-gta**) commands replace the Translation Type (**ent/dlt/rtrv-tt**) and Global Title Translation (**ent/chg/dlt/rtrv-gtt**) commands. All data previously provisioned with these commands is maintained.

For **gtii/gtin=4**, although DFLT may appear in the **rtrv-gttset** output, **dflt** cannot be specified as value for the **np** or **nai** parameters when the **ent-gttset** command is entered. If a new GTT selector is specified that matches an existing GTT selector's **gti** and **tt** and the existing selector has **dflt** as the value for the **np** and/or **nai** parameters, a new entry is created with the new **np** and **nai** parameter values. The existing GTT selector entry with the **dflt** value is also retained. The **np/nai** parameter value **dflt** can be specified for the **chg/dlt/rtrv-gttset** commands.

The Origin-based SCCP Routing feature allows two GTT sets to be assigned to a GTT selector: **cdgtasn** and **cggtasn** or **cdgtasn** and **cgpcsn**. The **cggtasn** and **cgpcsn** GTT sets are mutually exclusive and cannot be assigned to the same GTT selector.

Output

```
ent-gttset:gtia=2:tt=9:gttsn=lidb
  rlgncxa03w 04-02-18 08:50:27 EST EAGLE 31.3.0
  ENT-GTTSEL: MASP A - CMPLTD
;
```

ent-gttset**Enter GTT Set**

Use this command to specify the attributes of a new GTT set (a set of global title translations). A GTT set consists of a GTT set name, the number of digits allocated for the GTA (global title address), the domain of the point codes used in the translation, and a pointer to a GTA tree. After the GTT set is provisioned, you can enter subsequent GTT Selector commands and GTA commands.

Keyword: **ent-gttset**

Related Commands: **chg-gttset, chg-gttset, dlt-gttset, rtrv-gttset**

Command Class: Database Administration

Parameters

:gttsn= (mandatory)

GTT set name. A GTT set is an entity to which global title addresses and selectors are assigned.

Range: *ayyyyyyy*

1 leading alphabetic character and up to 8 following alphanumeric characters.

:netdom= (mandatory)

Network domain. This command does not distinguish between ITU national or ITU international because the Enhanced Global Title Translation (EGTT) feature does not discriminate between the ITU-I and ITU-N translations.

The **netdom** parameter refers to the incoming message network domain.

Range: **ansi, itu, cross**

:ndgt= (optional)

Number of digits. This parameter specifies the number of digits required for GTAs (global title addresses) associated with this GTT set. This parameter is not valid if the VGTT (Variable Length GTT) feature is turned on or if the value of the **settype** parameter is **cgpc**, **cgssn**, or **opc**.

Range: **1-21**

Default: **6**

:settype= (optional)

GTT set type.

NOTE: This parameter is mandatory if the Origin-based SCCP Routing feature is on.

Range: **cdgta, cggta, cgpc, cgssn, opc**

Example

```
ent-gttset:gttsn=lidb:ndgt=10:netdom=ansient-
```

```
gttset:gttsn=t800:netdom=ansi
```

```
ent-gttset:gttsn=setint000:netdom=itu:ndgt=15
```

```
ent-gttset:gttsn=setcdgt:netdom=cross:ndgt=10:settype=cdgta
```

```
ent-gttset:gttsn=setcggta:netdom=ansi:ndgt=11:settype=cggta
```

```
ent-gttset:gttsn=setxyz:netdom=ansi:ndgt=11:settype=cggta
```

```
ent-gttset:gttsn=setopc:netdom=itu:settype=opc
```

```
ent-gttset:gttsn=setcgpc:netdom=ansi:settype=cgpc
```

```
ent-gttset:gttsn=setssn:netdom=ansi:settype=cgssn
```

Dependencies

The EGTT feature must be turned on before this command can be entered.

The GTT Set table cannot contain more than 2000 entries.

The **gttsn** parameter cannot have a value of **none**.

If the VGTT (Variable Length GTT) feature is turned on, the **ndgt** parameter cannot be specified.

The **gttsn** parameter must be specified and must not match an existing **gttsn**.

The **ndgt** parameter cannot be specified if the value of the specified **settype** parameter is **cgssn**, **opc**, or **cgpc**.

The **netdom=cross** parameter can be specified only if the **settype=cdgta** parameter is specified.

The Origin-based SCCP Routing feature must be turned on if the value of the **settype** parameter is **cggta**, **cgssn**, **opc**, or **cgpc**.

If the Origin-based SCCP Routing feature is enabled, the **settype** parameter is mandatory.

The ANSI-ITU-China SCCP Conversion feature must be enabled before the **netdom=cross** parameter can be specified.

The ANSI-ITU-China SCCP Conversion feature must be enabled before the **netdom=cross** parameter can be specified.

Notes

When the EGTT feature is turned on, the GTT Selector (**ent/chg/dlt/rtrv-gttset**), GTT Set (**ent/dlt/rtrv-gttset**), and GTA (**ent/chg/dlt/rtrv-gta**) commands replace the Translation Type (**ent/dlt/rtrv-tt**) and Global Title Translation (**ent/chg/dlt/rtrv-gtt**) commands. All data previously provisioned with these commands is maintained.

When the Origin-based SCCP Routing feature is turned on, VGTT is supported only for CdPA GTA and CgPA GTA. The **cross** network domain is supported only for CdPA GTA.

Output

```
ent-gttset:gttsn=lidb:ndgt=10:netdom=ansi
rlghncxa03w 04-02-19 08:20:17 EST EAGLE 31.3.0
GTT Set table is (114 of 950) 12% full
ENT-GTTSET: MASP A - CMLTD
;
```

ent-gws-redirect

Enter Gateway Screening Redirect Command

Use this command to provision the gateway screening redirect function. The Redirect table must be provisioned before configuring gateway screening to redirect received MSUs. The values that are specified with this command are stored in the Redirect table, and they are used to set the variable fields of the MSUs being redirected. For example, if the **ri=gt** parameter is specified, the value **gt** is set for the routing indicator in the called party address (CDPA) of the MSU being redirected.

Keyword: ent-gws-redirect

Related Commands: chg-gws-redirect, dlt-gws-redirect,

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:dpc= (mandatory)

Specifies the value used to set the ANSI destination point code field in the routing label of the MSU that is being redirected. The ANSI point code has subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: dpca

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001–005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006–255**.

The point code **000-000-000** is not a valid point code.

:dpc/dpca/dpci/dpcn/dpcn24= (mandatory)

Destination point code.

:dpci= (mandatory)

Specifies the value used to set the ITU international destination point code field in the routing label of the MSU that is being redirected. The point code has subfields *zone-area-id*.

Range: **0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

The point code **0-000-0** is not a valid point code.

zone—**0–7**

area—**000–255**

id—**0-7**

:dpcn= (mandatory)

Specifies the value used to set the ITU national destination point code field in the routing label of the MSU that is being redirected. The point code is in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) when the **chg-stpopts:npcfmti** flexible point code option is on. A group code (*gc*) must be specified when the ITUDUPPC feature is on (*nnnnn-gc*, *m1-m2-m3-m4-gc*).

Range: **0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:dpcn24= (mandatory)

Specifies the value used to set the 24-bit ITU national destination point code field in the routing label of the MSU that is being redirected. The point code has subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000–255**

ssa—**000–255**

sp—**000–255**

:gta= (mandatory)

Specifies the value used to set the global title address (dialed digits) in the SCCP called party address of the MSU being redirected.

Range: 1-21 digits

:ri= (mandatory)

Specifies the value used to set the routing indicator in the SCCP called party address of the MSU being redirected. Use the **gt** value to route by global title digits or use the **ssn** value to route by subsystem number.

Range: **gt, ssn**

:ssn= (mandatory)

Specifies the value used to set the subsystem number (SSN) in the SCCP called party address of the MSU being redirected. This number is the SSN of the SCP to which all MSUs meeting the redirect criteria are to be redirected.

Range: **000-255**

:ssn= (mandatory)

Identifies the type of the global title translation (GTT). It is the decimal representation of the 1-byte field used in SS7. This value is used to set the type of the GTT in the SCCP called party address of the MSU being redirected.

Range: **000-255**

:tt= (mandatory)

identifies the type of the Global Title Translation. It is the decimal representation of the 1-byte field used in SS7.

Range: **000-255**

:enabled= (optional)

Specifies whether MSUs that have passed gateway screening are to be redirected (**enabled=on**) or routed as normal (**enabled=off**).

Range: **on, off**

Default: **on**

Example

```
ent-gws-redirect:dpc=1-40-1:ri=gt:ssn=10:tt=1:gta=180833:enabled=on
```

```
ent-gws-redirect:dpc=1-40-1:ri=ssn:ssn=10:tt=1:gta=1800833:enabled=off
```

Dependencies

The **dpc/dpca/dpci/dpcn/dpcn24** parameter must be defined in the Destination table or defined as the STP site point code.

If the **dpc/dpca/dpci/dpcn/dpcn24** parameter is defined as a destination, it must have at least one route defined.

The redirect function data can be entered only once.

Notes

The SCCP screening functions (CGPA, TT, CDPA, and AFTPC) cannot select an MSU to be redirected.

Do not apply a Redirect Stop Action on the Adjacent Node point code for the BLKOPC and OPC screening functions.

Do not apply a Redirect Stop Action for an allowed DPC screen rule if the rule contains the self-identity point code of EAGLE 5 ISS where the screening rule is applied. This is because the redirection of SLTAs and SLTMs (Signal Link Test Messages and Acknowledgements) will not return to the originating EAGLE 5 ISS and will cause the link to fail.

If **gwsa=off** and **gwsn=off** are specified for all linksets, gateway screening and the GWS redirect function for the DTA feature are disabled.

Output

```
ent-gws-redirect:dpc=1-40-1:ri=gt:ssn=10:tt=1:gta=180833:enabled=
on
    rlghncxa03w 03-11-10 11:43:04 EST EAGLE 31.6.0
    ENT-GWS-REDIRECT: MASP A - COMPLTD
;
```

ent-home-smsc

Enter HOME SMSC Address

Use this command to enter HOME SMSC specific addresses, currently used to identify Short Message Service Centers in the database. This command updates the HOME SMSCADDR table.

Keyword: ent-home-smsc

Related Commands: dlt-home-smsc, rtrv-home-smsc

Command Class: Database Administration

Parameters

:smc= (mandatory)

Identifies the type of the Short Message Service Center address.

Range: 1-21 digits

1-21 hexadecimal digits. Valid digits are **0-9, a-f, A-F**

Example

```
ent-home-smsc:smc=256489
```

```
ent-home-smsc:smc=256489a98bccee56ad237
```

Dependencies

The Portability Check for Mobile Originated SMS (MNP SMS) controlled feature must be enabled (**enable-dtrl-feat** command) and turned on before this command can be entered.

The specified HOME SMSC address cannot already exist in the HOME SMSCADDR table.

The HOME SMSCADDR table can contain a maximum of 500 entries.

Notes

None

Output

```
ent-home-smsc:smc=256489
    rlghncxa03w 04-02-28 08:50:12 EST EAGLE 31.3.0
    ENT-HOME-SMSC: MASP A - COMPLTD
;
```

ent-homern

Enter Home Routing Number Prefix

Use this command to enter up to 100 routing number prefixes for the operating network into the HOMERN table.

Keyword: ent-homern

Related Commands: dlt-homern, rtrv-homern

Command Class: Database Administration

Parameters

:rn= (mandatory)
The home routing number prefix.
Range: 1-15 digits
1-15 hexadecimal digits (**0-9, a-f, A-F**)

Example

ent-homern:rn=C441234

Dependencies

The INP or G-Port feature must be turned on before this command can be entered.

The HOMERN table cannot be full.

The routing number must not already exist in the HOMERN table.

A value of **none** cannot be specified for the **rn** parameter.

Notes

None

Output

```
ent-homern:rn=C441234
  rlgncxa03w 04-01-28 08:50:12 EST EAGLE 31.3.0
  HOMERN table is (1 of 100) 1% full
  ENT-HOMERN: MASP A - COMPLTD
;
```

ent-ip-host

Enter Internet Protocol Hostname

Use this command to configure the IP Host table. The IP Host table defines local and remote host names for IP addresses.

Keyword: ent-ip-host
Related Commands: dlt-ip-host, rtrv-ip-host
Command Class: Database Administration

Parameters

:host= (mandatory)
Host name. The logical name of the device associated with the indicated IP address.

Range: *xxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxx*
(any string of characters beginning with a letter and comprising up to 60 characters in length)

:ipaddr= (mandatory)
The IP address associated with the host name. This is a TCP/IP address expressed in standard dot notation. IP addresses consist of the system's network number and the machine's unique host number. An example IP address is **192.126.100.5**, where **192.126.100** is the system's network number and **5** is the machine's host number.

Range: 4 numbers separated by dots, with each number in the range of **0-255**.

:type= (optional)
The residency attribute of the host entry.

Range: **local, remote**

local — The IP host name and IP address resides on the IP card in this EAGLE 5 ISS.

remote— The IP host name and IP address resides on equipment not in this EAGLE 5 ISS.

Default: **local**

Example

```
ent-ip-host:host=gw100.nc.tekelec.com:ipaddr=150.001.001.001
ent-ip-
host:host=gw100.nc.tekelec.com:ipaddr=150.001.001.001:type=local
```

Dependencies

The host name and IP address must be unique.

The Host table must have an empty element.

The IP address of the local host must exist in the IP Link table.

The IP address of the remote host must not exist in the IP Link table.

Notes

None

Output

```
ent-ip-
host:host=gw100.nc.tekelec.com:ipaddr=150.001.001.001:type=local
    rlgncxa03w 05-07-17 15:35:05 EST EAGLE 34.0.0
    ENT-IP-HOST: MASP A - COMPLTD
;
```

ent-ip-node

Enter IP Node

Use this command to define the IP address of a node that will be receiving messages from the STPLAN application.

Keyword: **ent-ip-node**

Related Commands: **dlt-ip-node**, **rtrv-ip-node**

Command Class: Database Administration

Parameters

:cap= (mandatory)

The maximum percentage of ethernet capacity for this node connection. This capacity is added to other connections to this node for the total capacity of the node.

Range: **0-100**

:ipaddr= (mandatory)

The node's IP address. This is a TCP/IP address expressed in standard dot notation. IP addresses consist of the system's network number and the machine's unique host number. An example IP address is **192.126.100.5**, where **192.126.100** is the network number and **5** is the machine's host number.

Range: **1-223, 0-255**

4 numbers separated by dots

1-223—first number

0-255—the other three numbers

:ipappl= (mandatory)

The IP application supported by the node.

Range: **stplan**

Default: Default value not given

:ipappl= (mandatory)

The IP application supported by the node.

Range: **stplan**

Default: Default value not given

:ipport= (mandatory)

The logical IP port that addresses the application on the node.

Range: **1024-5000**

Default: The logical IP port is not given.

:loc= (mandatory)

The card location as stenciled on the shelf of the system that contains the TCP/IP link that will be directly connected to the node.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

:iprte= (optional)

The default router IP address. This is a TCP/IP address expressed in standard dot notation. IP addresses consist of the system's network number and the machine's unique host number. An example IP address is **192.126.100.5**, where **192.126.100** is the network number and **5** is the machine's host number.

Range: **1-223, 0-255**

4 numbers separated by dots

1-223—first number

0-255—the other three numbers

Example

ent -ip-

node:ipaddr=13.49.210.50:ipappl=stplan:ipport=1024:loc=1201:cap=15:iprte=193.4.201.84

Dependencies

The ACM is the only valid card type for this command.

The shelf and card must be equipped.

The node IP address cannot be **127.x.x.x**, where **x** is a number from **1** to **254**.

The specified card location must be equipped with a TCP/IP data link.

The IP address must be unique to the TCP/IP link table and to the TCP/IP nodes.

Only one node can be connected for each data link and each application. The IP address, IP application, and card location combination must be unique in the database.

The IP port on each node cannot be assigned to another application. The IP address and IP port combination must always use the same IP application.

The class of the IP address (**ipaddr**) must match the class of the assigned TCP/IP data link's IP address. The system supports three classes of IP addresses, Class A, Class B, and Class C. Class A IP addresses can contain only the values **1** to **126** in the first field of the IP address. Class B IP addresses can contain only the values **128** to **191** in the first field of the IP address. Class C IP addresses can contain only the values **192** to **223** in the first field of the IP address.

The network portion of the IP address (**ipaddr**) must match the network portion of the IP address assigned to the TCP/IP data link. The network portion of the IP address is based on the class of the IP address. If the IP address is a Class A IP address, the first field is the network portion of the IP address. If the IP address is a Class B IP address, the first two fields are the network portion of the IP address. If the IP address is a Class C IP address, the first three fields are the network portion of the IP address.

If the network portion and class of the IP address of the TCP/IP node matches the class of the assigned TCP/IP data link's IP address, the **iprte** parameter cannot be specified. The **iprte** parameter can be specified only with the **ent-ip-node** command when the network portion and class of the TCP/IP node does not match the class of the assigned TCP/IP data link's IP address. The values of the **ipaddr** parameter, the IP address of the TCP/IP node, and the **iprte** parameter cannot be the same.

The capacity of all connections to the given node cannot be greater than 100%.

Notes

If the IP address is a Class A IP address, do not use the IP addresses **127.x.x.x**, where x is a number from 1 to 254. These addresses are reserved for loopback.

Output

```
ent-ip-
node:ipaddr=13.49.210.50:ipappl=stplan:ipport=1024:loc=1201:cap=1
5 :iprte=193.4.201.84
    rlgncxa03w 04-01-18 08:50:12 EST  EAGLE 31.3.0
    ENT-IP-NODE: OAM A - COMPLTD
;

ent-ip-
node:ipaddr=172.42.21.250:ipappl=stplan:ipport=1024:loc=1318:cap=
5 :iprte=127.24.2.150
    rlgncxa03w 04-01-18 08:50:51 EST  EAGLE 31.3.0
    IPRTE contains loopback address.
    ENT-IP-NODE: OAM A - COMPLTD
;
```

ent-ip-rte

Enter IP Route

Use this command to configure the destination IP address, subnet mask, and the gateway IP address for the specified card in the Static IP Route table.

Keyword: ent-ip-rte

Related Commands: dlt-ip-rte, rtrv-ip-rte

Command Class: Database Administration

Parameters

:dest= (mandatory)

Destination IP Address. The IP Address of a remote destination host or network to be reached.

Range: 4 numbers separated by dots, with each number in the range of 0–255.

The IP address 0.0.0.0 is not valid.

:gtwy= (mandatory)

Gateway IP Address. The IP address assigned to the gateway router that will properly forward IP datagrams with the destination IP address (**dest**) to the next-hop gateway router or final destination host.

Range: 4 numbers separated by dots, with each number in the range of 0–255.

The IP address 0.0.0.0 is not valid.

:loc= (mandatory)

Card location. The unique identifier of a specific IP card in the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

:submask= (mandatory)

The subnet mask of the destination IP address, in the form of an IP address with a restricted range of values. This parameter is required if the **ipaddr** parameter is entered.

Range: The value must be valid for the class of the entered IP address.

Table 5-41. Valid Subnet Mask Values

Valid for Class A Networks	Valid for Class A or B Networks	Valid for Class A, B, or C Networks
255.0.0.0	255.255.0.0	255.255.255.0
255.192.0.0	255.255.192.0	255.255.255.192
255.224.0.0	255.255.224.0	255.255.255.224
255.240.0.0	255.255.240.0	255.255.255.240
255.248.0.0	255.255.248.0	255.255.255.248
255.252.0.0	255.255.252.0	255.255.255.252
255.254.0.0	255.255.254.0	
255.255.128.0	255.255.255.128	

The value **255.255.255.255** must be specified if the destination IP address represents a host address.

If the destination IP address represents a network address, a value must be specified that identifies the network ID and host ID portions of the address.

Example

```
ent-ip-rte:loc=1301:dest=128.252.10.5:submask=255.255.255.255:
gtwy=140.188.13.33
```

```
ent-ip-
rte:loc=1301:dest=126.252.0.0:submask=255.255.0.0:gtwy=140.188.13
.34
```

Dependencies

The specified destination IP address (**dest** parameter):

- Must not be the default route (0.0.0.0)
- Must not correspond to any loopback address (i.e. 127.X.X.X)
- Must be unique per card

- Must not reside on this card's A or B local network

The specified gateway IP address (**gtwy** parameter):

- Must not be the default route (0.0.0.0)
- Must not correspond to any loopback address (i.e. 127.X.X.X)
- Must correspond to a host IP address that resides on this card's A or B local network

The IP address must be defined for the A or B network, or both, for the card before this command can be entered. (See the **chg-ip-card** command.)

Each destination IP address entered into the Static IP Route table must be unique for the card.

A maximum of 64 static IP routes can be defined for a card.

A maximum of 1024 static IP routes can be defined in the IP Route table.

The **loc** parameter value must correspond to a DCM or SSEDCM card running the **ss7ipgw**, **ipgwi**, **iplim**, or **iplimi** application.

The network address specified by the **dest** and **submask** parameters must be different from the network address specified by the **pvn** and **pvnmask** parameter of the NETOPTS table.

Notes

The Static IP Route table is used to store static IP route entries. Static routes are maintained across card initialization, failures, and reloads. These types of routes are used when the IP Layer cannot determine routes dynamically. Static IP route entries can be added or deleted dynamically.

Output

```
ent-ip-rte:loc=1301:dest=128.252.10.5:submask=255.255.255.255:
gtwy=140.188.13.33
```

```
rlghncxa03w 04-01-17 15:35:05 EST EAGLE 31.3.0
```

```
IP Route table is (1 of 256) 1% full
```

```
ENT-IP-RTE: MASP A - COMPLTD
```

```
;
```

ent-lbp

Enter Loopback Point

Use this command to assign a far-end loopback point for testing data signaling link elements in a SS7 transmission path.

Keyword: ent-lbp

Related Commands: act-lbp, chg-lbp, dact-lbp, dlt-lbp, rtrv-lbp

Command Class: Database Administration

Parameters

:lbp= (mandatory)

Loopback point ID. This parameter identifies a far-end loopback point that lies along an SS7 signaling link path between the STP and the target device (up to *and including* the target device).

Range: 1-32

:link= (mandatory)

SS7 signaling link. The SS7 signaling link that is to be tested.

Synonym: port

Range: **a, b, a1-a31, b1-b31**

Not all card types support all **link** parameter values.

See "Summary of Range Values for :link Parameter" for valid **link** parameter range values for each type of card that can have assigned signaling link ports.

:loc= (mandatory)

Card location. The unique identifier of a specific application subsystem located in the STP.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

:rle= (mandatory)

Remote link element. The link element to be looped back for testing.

Range: **ds0, ocu, csu, dsu, nei**

:cli= (optional)

The Common Language Location Identifier (CLLI) code, or other mnemonic identifier, used to refer to the given loopback point.

Range: **ayyyyyyyyyy**

1 alphabetic character followed by up to 10 alphanumeric characters.

:lfst= (optional)

Link fault sectionalization test. The type of link fault sectionalization loopback test to be performed.

Range: **lft, nlt**

lft—latching loopback test

nlt—nonlatching loopback test

:rep= (optional)

Repetition count. The number of link elements of the same type (not including the target device) that lie between the STP and the link element to be tested.

Range: **0-31**

Default: **0**—If the link element to be looped back for testing is NEI (**rle=nei** is specified)

0—If the LFS test is NLT (non-latched); **lfst=nlt** is specified

0—If no other LBP for this link has the same **rle** value

1-30—Next sequential number for subsequent loopback points of the link to be tested (**rle** is specified as anything but **nei**)

Example

ent -

lbp: loc=1101: link=a: lbp=1: rle=ds0: lfst=lft: rep=0: cli=r lghncxa05w

ent - lbp: loc=1101: port=a: lbp=2: rle=nei: lfst=lft

ent -

lbp: loc=1205: port=a1: lbp=1: rle=ds0: lfst=lft: cli=r lghncxa05w: rep=

1

Dependencies

The Link Fault Sectionalization (LFS) feature must be on before this command can be entered.

The card location (**loc** parameter) must be equipped.

The **rle=ds0** parameter and the **rle=nei** parameter cannot be specified when the **lfst=nlt** parameter is specified. The DS0 and Network Element Interface (NEI) link elements do not support non-latching loopbacks.

If the **rle=nei** parameter is specified, the **rep=0** parameter must be specified.

The **rep** parameter can be specified only if the **lfst=llt** parameter is specified.

Each specified **rep** parameter value must be greater than any previously specified **rep** value and less than any subsequent specified **rep** value.

The specified **cli** cannot be a reserved word.

The loopback point (LBP) cannot have been previously defined.

The value specified for the **lbp** parameter cannot exceed the **lbp** parameter value previously defined for a loopback point with **rle=nei** specified.

For each SS7 signaling link, only one loopback point with **rle=nei** specified can be defined.

The **rep** parameter must be specified if taking the default value results in duplicate **rep** values for loopback points.

The loopback point with **rle=nei** specified must be the terminating SS7 signaling link element.

The card location must contain a provisioned **limds0**, **limt1**, or **limch** (associated to a **limt1**) card that is running an **ss7ansi** or **ccs7itu** application.

The card location (**loc** parameter) must not be reserved by the system.

Notes

None

Output

```
ent- lbp: loc=1101: link=a: lbp=2: rle=nei: lfst=llt
      rlgncxa03w 05-02-17 15:35:05 EST EAGLE5 33.0.0
      ENT-LBP: MASP A - COMPLTD
;
```

ent-lnp-lrn

Enter LNP Location Routing Number

Use this command to enter a location routing number (LRN) and its corresponding message relay override global title translations into the database. This command updates the LNP LRN Table. This command can assign a maximum of two overriding message relay global title translations at a time. If an LRN already exists, only the newly defined override service is added.

NOTE: This command is obsolete.

NOTE: If the LNP ELAP Configuration feature is turned on, this command is no longer available. This function can be performed at the LSMS or using the ELAP user interface.

Keyword: ent-lnp-lrn

Related Commands: chg-lnp-lrn, dlt-lnp-lrn, rtrv-lnp-lrn

Command Class: LNP Database

Parameters

:lrn= (mandatory)

The location routing number.

Range: 10 digits

:nmrgt1= (optional)

New message relay global title entry 1. The arguments allow default global title translations to be incrementally changed by entering the **nmrgt1** and **nmrgt2** parameters several times. When **nmrgt1** or **nmrgt2** parameters are used, the argument values must *all* be entered and separated by a comma (,) or a dash (-) in the order *tt-pc-ssn-xlat-ri-ngt-rgta*.

Range: *tt-pc-ssn-xlat-ri-ngt-rgta*
tt—Translation type, in the range **000-255**
pc—ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

- When **chg-sid:pctype=ansi** is specified,
 - *ni*—**001-255**.
 - *nc*—**001-255** if *ni* = **001-005**.
 - *nc*—**000-255** if *ni* = **006-255**
 - *ncm*—**000-255**
- The point code **000-000-000** is not a valid point code.

ssn—Subsystem number, in the range **000-255**
xlat—Translate; valid values are **dpc**, **dpcssn**, **dpcngt**
ri—Routing indicator; valid values are **gt**, **ssn**
ngt—New global title translation; in the range **0-255**
rgta—Replace global title address (TN) with LRN; valid values are **yes**, **no**

:nmrgt2= (optional)

New message relay global title entry 2. The arguments allow default global title translations to be incrementally changed by entering the **nmrgt1** and **nmrgt2** parameters several times. When **nmrgt1** or **nmrgt2** parameters are used, the argument values must *all* be entered and separated by a comma (,) or a dash (-) in the order *tt-pc-ssn-xlat-ri-ngt-rgta*.

Range: *tt-pc-ssn-xlat-ri-ngt-rgta*
tt—Translation type, in the range **000-255**
pc—ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

- When **chg-sid:pctype=ansi** is specified,
 - *ni*—**001-255**.
 - *nc*—**001-255** if *ni* = **001-005**.
 - *nc*—**000-255** if *ni* = **006-255**
 - *ncm*—**000-255**
- The point code **000-000-000** is not a valid point code.

ssn—Subsystem number, in the range **000-255**
xlat—Translate; valid values are **dpc**, **dpcssn**, **dpcngt**
ri—Routing indicator; valid values are **gt**, **ssn**
ngt—New global title translation; in the range **0-255**
rgta—Replace global title address (TN) with LRN; valid values are **yes**, **no**

:sp= (optional)

Service provider ID.

Range: *xyyy*
 1-4 alphanumeric characters

Default: Null or current value.

Example

```
ent - lnp - lrn : lrn=1234567891 : sp=a123 : mrgt1=16-233-233-233-20-  
dpcssn-ssn-0-no
```

Dependencies

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before this command can be entered.

When **mrgt1** parameter or the **mrgt2** parameter is specified, the constituent values must be entered in this order: **tt, pc, ssn, xlat, ri, ngt, rgt**

An existing override service cannot be assigned to an existing LRN.

The same TT value cannot be specified more than once.

When the **xlat=dpcssn** parameter is specified, the **ssn** parameter value must not be zero.

When the **xlat** parameter is specified with a value other than **dpcssn**, **ssn=0** must be specified.

When a value other than **dpcngt** is specified for the **xlat** parameter, **ngt=0** must be specified.

When the **xlat=dpcngt** parameter is specified, the **ri=gt** parameter must be specified.

The point code must be an ANSI point code, and it must be a valid DPC (**0-0-0** is not a valid ANSI point code) that exists in the routing table. Point code entries must be full point codes. Partial point codes are not allowed.

The MRGT# message relay translation type must not already be assigned.

The MRGT# message relay translation type must be a reserved service for LNP.

The MRGT# message relay translation type must not be the TT associated with the AIN, IN, PCS, LNPQS, or WNP service.

The service provider must be specified if not already assigned, and it must match a service provider that is already assigned.

The LRN and SP tables must not be full.

Notes

The maximum number of service provider IDs allowed is 10,000.

The LNP EAGLE 5 ISS stores the 10-digit override global title NGT (new global title) value on a per service, point code, and subsystem combination basis. This design allows a user to always modify the NGT field for all LRNs assigned the same service, point code, and subsystem combination instantly with one command. Conversely, the LSMS stores the NGT field independently for each 10-digit override (LRN) global title translation entered.

When an NGT field is modified or assigned to a particular LNP 10-digit override global title translation (either via the LSMS interface or directly from an EAGLE 5 ISS terminal), every existing LRN entry in the LNP EAGLE 5 ISS with the same combination of service, point code, and subsystem will reflect that NGT. Because of this difference in how this information is stored on the LSMS versus how it is stored on the EAGLE 5 ISS, a user could get into a situation where the NGT values in the LSMS are not reflective of those stored in the EAGLE 5 ISS. The NGT value must be specified correctly every time a 10-digit override (LRN) global title translation is updated or the LNP service on the EAGLE 5 ISS could be seriously impacted.

Output

```
ent - lnp - lrn: lrn=1234567891: sp=a123: mrgt1=16-233-233-233-20-
dpcssn-ssn-0-no
  rlgncxa03w 04-02-18 08:50:12 EST EAGLE 31.3.0
  ENT-LNP-LRN: MASP A - COMPLTD
;
```

ent-lnp-npanxx**Enter LNP NPANXX**

Use this command to enter an LNP NPANXX and its associated LNP default global title translations into the database.

NOTE: This command is obsolete.

NOTE: If the LNP ELAP Configuration feature is turned on, this command is no longer available. This function can be performed at the LSMS or using the ELAP user interface.

Keyword: ent-lnp-npanxx

Related Commands: chg-lnp-npanxx, dlt-lnp-npanxx, rtrv-lnp-npanxx

Command Class: LNP Database

Parameters

NOTE: See “Point Code Formats and Conversion” for a detailed description of point code formats, rules for specification, and examples.

:npanxx= (mandatory)
Numbering plan area.
Range: 6 digits

:gt1= (optional)
Default global title entry 1.
Range: *tt, ni, nc, ncm, ssn, xlat, ri, ngt*
tt—translation type; value **0-255**
ni—network indicator; value **0-255**
nc—network cluster; value **0-255**
ncm—network cluster member; value **0-255**
ssn—subsystem number; value **0-255**
xlat—translate; value **dpc, dpcssn, dpcngt**
ri—route indicator; value **gt, ssn**
ngt—new global translation type; value **0-255**

:gt2= (optional)
Default global title entry 2.
Range: *tt, ni, nc, ncm, ssn, xlat, ri, ngt*
tt—translation type; value **0-255**
ni—network indicator; value **0-255**
nc—network cluster; value **0-255**
ncm—network cluster member; value **0-255**
ssn—subsystem number; value **0-255**
xlat—translate; value **dpc, dpcssn, dpcngt**
ri—route indicator; value **gt, ssn**

ngt—new global translation type; value **0-255**

:mr= (optional)

Message relay 10-digit TN search indication.

Range: **yes, no**

Default: **yes**

Example

```
ent - lnp - npanxx : npanxx=111111
```

```
ent - lnp - npanxx : npanxx=111111 : mr=no : gt1=16 - 233 - 233 - 233 - 0 - dpcngt -  
gt - 18
```

Dependencies

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before this command can be entered.

The MR portability indicator defaults to an active MR portable NPANXX indication.

Translation type values associated with PCS, LNPQS, or WNP LNP queries are not allowed to be administered as NPANXX default message relay global title translations.

If the NPANXX has already been created, at least one optional parameter must be specified.

The **mr** parameter applies only to message relay default global title translations, and means a 10-digit search for ported TN's is allowed for this NPANXX.

The **mr** parameter is valid only if message relay default global title translations are assigned.

The message relay global title must exist in the route table.

The LNP query default global title point code must exist in the route table, or must be the EAGLE 5 ISS true point code and LNP subsystem.

The **gt1** and **gt2** parameters can be used to administer default message relay or LNP query global title.

The **gt1** and **gt2** parameters translation type must not already be assigned, and they must be a reserved service for the LNP

The NPANXX table cannot be full.

The same translation type value cannot be specified more than once.

When the **xlat=dpcssn** parameter is specified, the **ssn** parameter value must not be zero.

When the **xlat** parameter is specified with a value other than **dpcssn**, **ssn=0** must be specified.

When a value other than **dpcngt** is specified for the **xlat** parameter, **ngt=0** must be specified.

When the **xlat=dpcngt** parameter is specified, **ri=gt** must be specified.

The point code must be an ANSI point code, and it must be a valid DPC (**0-0-0** is not a valid ANSI point code). Point code entries must be full point codes. Partial point codes are not allowed.

The subsystem number (**ssn**) parameter must be in the LNP database.

Notes

You can enter this command several times for the same NPANXX to incrementally add default global title translations.

The maximum number of NPANXX entries allowed is 150,000.

The LNP EAGLE 5 ISS stores the 6-digit default global title NGT (new global title) value on a per service, point code, and subsystem combination basis, not on an NPA-NXX basis. This design allows a user to modify the NGT field for all NPA-NXXs assigned the same service, point code, and

subsystem combination instantly with one command. Conversely, the LSMS stores the NGT field independently for each 6-digit default (NPA-NXX) global title translation entered.

When an NGT field is modified or assigned to a particular LNP 6-digit global title translation (either via the LSMS interface or directly from an EAGLE 5 ISS terminal), every existing NPA-NXX entry in the LNP EAGLE 5 ISS with the same combination of service, point code, and subsystem will reflect that NGT. Because of this difference in how this information is stored on the LSMS versus how it is stored on the EAGLE 5 ISS, a user could get into a situation where the NGT values in the LSMS are not reflective of those stored in the EAGLE 5 ISS. The NGT value must be specified correctly every time a 6-digit default (NPA-NXX) global title translation is updated or the LNP service on the EAGLE 5 ISS could be seriously impacted.

Output

```
ent - lnp-npanxx: npanxx=111111
rlghncxa03w 04-01-18 08:50:12 EST EAGLE 31.3.0
ENT-LNP-NPANXX: MASP A - COMPLTD
;
```

ent-lnp-serv

Enter LNP Service

Use this command to reserve an LNP translation type for a unique LNP service. The available services include up to five query services (**ain**, **in**, **pcs**, **lnpqs**, and **wnp**) and any combination of six message relay or user-defined services. Translation type names can also be defined and are defaulted to the corresponding reserved service type names.

A maximum of 10 LNP services can be assigned in systems with up to 12 million numbers, and a maximum of 14 LNP services can be assigned in systems with more than 12 million numbers (using ELAP). Two of these assigned services will always be reserved for administration of AIN and IN Translation Types. Administration of Message Relay user defined services will also be allowed.

Keyword: ent-lnp-serv

Related Commands: chg-lnp-serv, dlt-lnp-serv, rtrv-lnp-serv

Command Class: Database Administration

Parameters

:serv= (mandatory)

Reserved service type name.

Range: ain, in, pcs, wnp, class, lidb, cnam, isvm, lnps, wsmc, udf1, udf2, udf3, udf4

:alias= (optional)

The alias translation type.

Range: 000-255

:dv= (optional)

Digits valid.

Range: sccp, tcap

Default: sccp—If serv= class, lidb, cnam, isvm, wsmc, udf1, udf2, udf3, udf4
tcap—If serv= ain, in, pcs, wnp, lnps

:tt= (optional)

Translation type.

Range: 000-255

:ttm= (optional)

User defined TT name.

Range: *aaaaaaaa*
 1 to 8 alphabetic characters, the value **none** is not allowed.

Default: Reserved service type name (**serv** parameter)

Example

ent - lnp - serv : serv = lldb : tt = 16 : dv = tcap : ttn = mr lldb

Dependencies

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before this command can be entered.

To specify the **nserv=pcs** parameter, the PCS 1900 LNP (PLNP) feature must be turned on.

To specify the **nserv=wnp** parameter, the WNP feature must be turned on.

To specify the **serv=wsmc** parameter, the LNP SMS feature must be turned on.

The **tt** parameter, the **ttn** parameter, and the **dv** parameter cannot be specified in the same command with the **alias** parameter.

The **tt** parameter must be specified if the **alias** parameter is not specified in the command.

NONE is considered a reserved name; it cannot be used for a translation type name (**ttn** parameter).

The value for the **dv** parameter must be **scdp** when a user-defined service type value is specified for the **serv** parameter.

The value for the **dv** parameter must be **tcap** when the **lnpqs**, **ain**, **in**, **pcs**, or **wnp** value is specified for the **serv** parameter.

A reserved service type name can be specified for the **ttn** parameter only if it matches the **serv** parameter value.

Neither the translation type (**tt**) parameter nor the translation type name (**ttn**) parameter can already exist in the LNP database.

The service type (**serv**) parameter must not exist in the LNP database when you are assigning a true translation type (**tt**).

LNP database when you are assigning a true translation type (**tt**) parameter.

A maximum of 6 Message Relay services are allowed.

When an **alias** is specified in the command, the service type for the **alias** must already have a true translation type assigned.

When the **alias** parameter is specified, its value cannot already exist in the LNP database as a true translation type for this service.

When the **alias** parameter is specified, the specified alias cannot be in use.

When the **tt** parameter is specified, its value cannot already exist in the LNP database as an **alias** for this service.

Notes

Translation type names must be unique for LNP services.

A translation type name can be a reserved service type name only if it matches the specified service.

When the LNP feature is on for up to 12 million TNs (see the **enable-ctrl-feat** command), the LNP services CLASS, CNAM, LIDB, and ISVM must be in the OAP configuration in the EAGLE 5 ISS database. You must update the OAP configuration (with the **act-oap-config** command) whenever you perform the following actions:

- Add LNP services to the database (with the **ent-lnp-serv** command).

- Remove services from the database (with the **dlt-lnp-serv** command).
- Change services (with the **chg-lnp-serv** command).

As a reminder, the following warning message is displayed:

CAUTION: LNP service TTs have changed, OAP configuration is required

Output

```
ent - lnp - serv : serv = lldb : tt = 16 : dv = tcap : ttn = mr lldb
rlghncxa03w 02-11-18 08:50:12 EST EAGLE 30.0.0
ENT-LNP-SERV: MASP A - COMPLTD
;
```

ent-lnp-sp

Enter LNP Service Provider

Use this command to enter an LNP service provider.

NOTE: This command is obsolete.

NOTE: If the LNP ELAP Configuration feature is turned on, this command is no longer available, and all LNP provisioning is performed at the LSMS.

Keyword: ent-lnp-sp

Related Commands: dlt-lnp-sp, rtrv-lnp-sp

Command Class: LNP Database

Parameters

:sp= (mandatory)
Service provider ID
Range: xyyy
 1-4 alphanumeric characters

Example

```
ent - lnp - sp : sp = a123
```

Dependencies

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before this command can be entered.

The service provider must not already exist in the LNP database.

The LNP SP table cannot be full.

Notes

The maximum number of service provider IDs allowed is 10,000.

Output

```
ent - lnp - sp : sp = a123
rlghncxa03w 04-01-29 16:40:40 EST EAGLE 31.3.0
ENT-LNP-SP: MASP A - COMPLTD
;
```

ent-lnp-sub

Enter LNP 10-Digit TN Subscription

Use this command to enter an LNP 10-digit ported telephone number (TN) or a single pooled block of 1000 TNs along with the TN's related services into the database. Related services include LNP

query LRN and message relay global title information. You can assign a maximum of two services at a time: either one LRN and one MRGT# or two MRGT#s.

NOTE: This command is obsolete.

NOTE: If the LNP ELAP Configuration feature is turned on, this command is no longer available. This function can be performed at the LSMS or using the ELAP user interface.

Keyword: ent-lnp-sub

Related Commands: chg-lnp-sub, dlt-lnp-sub, rtrv-lnp-sub

Command Class: LNP Subscription

Parameters

:tn= (mandatory)

Telephone number.

Range: 10 digits

10 digits—To specify a single TN subscription

7 digits with 3 asterisks (***) appended—To pool a block of 1000 TNs

:lrn= (optional)

Location routing number.

Range: 10 digits

Default: Null or current value

:mrgt1= (optional)

Message relay global title entry number 1.

Range: *tt, ni, nc, ncm, ssn, xlat, ri, ngt, rgta*

tt—translation type; value **0-255**

ni—network indicator; value **0-255**

nc—network cluster; value **0-255**

ncm—network cluster member; value **0-255**

ssn—subsystem number; value **0-255**

xlat—translate; value **dpc, dpcssn, dpcngt**

ri—route indicator; value **gt, ssn**

ngt—new global translation type; value **0-255**

rgta—replace global title address with lrn; value **yes, no**

:mrgt2= (optional)

Message relay global title entry number 2.

The following arguments allow you to incrementally change default global title translations by entering the **mrgt1** and **mrgt2** parameters several times. When **mrgt1** or **mrgt2** parameters are used, the constituent values must *all* (mandatory) be entered and separated by a comma (,) or a dash (-) in the order **tt-pc-ssn-xlat-ri-ngt-rgta**.

Range: *tt, ni, nc, ncm, ssn, xlat, ri, ngt, rgta*

tt—translation type; value **0-255**

ni—network indicator; value **0-255**

nc—network cluster; value **0-255**

ncm—network cluster member; value **0-255**

ssn—subsystem number; value **0-255**

xlat—translate; value **dpc, dpcssn, dpcngt**

ri—route indicator; value **gt**, **ssn**
ngt—new global translation type; value **0-255**
rgta—replace global title address with lrn; value **yes**, **no**

:sp= (optional)
 Service provider ID.
Range: *xyyy*
 4 alphanumeric characters
Default: Null or current value.

Example

```
ent - lnp-
sub: tn=1234567890: sp=a123: lrn=1234567890 :mrgt1=16, 233-233-233, 0, d
pc, gt, 28, yes
ent - lnp-
sub: tn=1234567***: sp=a123: lrn=1234567890 :mrgt1=16, 233-233-233, 0, d
pc, gt, 28, yes
ent - lnp-
sub: tn=1234567000: etn=1234567999: sp=a123: lrn=1234567890 :mrgt1=16,
233-233-233, 0, dpc, gt, 28, yes
```

Dependencies

The LNP feature must be turned on (see the **enable-ctrl-feat command**) before this command can be entered.

When the **nmrgt1** or **nmrgt2** parameter is used, the constituent values must be entered in this order: **tt, pc, ssn, xlat, ri, ngt, rgta**

If the telephone number (**tn** parameter) already exists, the newly entered nonfinal message relay global title translation or LRN is added.

A command cannot be entered that assigns an existing TT service to an existing telephone number.

Translation type values associated with AIN, IN, PCS, LNPQS, or WNP LNP queries are not allowed as message relay global title translations.

This command automatically creates an NPANXX for a TN-LRN record if the NPANXX does not already exist.

A maximum of 6 message relay GTTs can be assigned per TN.

The same translation type value cannot be specified more than once.

When the **xlat=dpcssn** parameter is specified, the **ssn** parameter value must not be zero.

When a value other than **dpcssn** is specified for the **xlat** parameter, **ssn=0** must be specified.

When a value other than **dpcngt** is specified for the **xlat** parameter, **ngt=0** must be specified.

When the **xlat=dpcngt** parameter is specified, the **ri=gt** parameter must be specified.

Either the location routing number or global title entry number must be specified.

The point code must be a valid ANSI point code. Point code entries must be full point codes. Partial point codes are not allowed.

The MRGT# message relay translation type must not already be assigned.

The MRGT# message relay translation type must be a reserved service for LNP.

When the **lrn** parameter is specified, the LRN must not already be assigned.

The point code must exist in the route table.

The service provider ID must be specified if not already assigned.

The service provider ID specified must match the SP already assigned.
 If an MRGT# is specified, an NPANXX must exist.
 When **rgta=yes** is specified, the **lrn** parameter must be specified.
 The GT# message relay translation type must not already be assigned.
 The GT# message relay translation type must be reserved for LNP.
 The **tt** and **rmv** parameters cannot be specified together in the command.

Notes

You can enter this command several times for the same TN to incrementally add services.
 This command updates data normally administered from the NPAC.
 The maximum number of service provider IDs allowed is 10,000.
 Pooled TNs are allocated on an even 1000-block boundary and cannot cross an NPANXX's boundary. Specific ported TNs can overlap a pooled block and contain different routing.
 The LNP EAGLE 5 ISS stores the 10-digit subscription global title NGT (new global title) value on a per service, point code, and subsystem combination basis. This design allows a user to modify the NGT field for all 10-digit subscriptions assigned the same service, point code, and subsystem combination instantly with one command. Conversely, the LSMS stores the NGT field independently for each 10-digit subscription global title translation entered.
 When an NGT field is modified or assigned to a particular LNP 10-digit global title translation (either via the LSMS interface or directly from an EAGLE 5 ISS terminal), every existing subscription entry in the LNP EAGLE 5 ISS with the same combination of service, point code, and subsystem will reflect that NGT. Because of this difference in how this information is stored on the LSMS versus how it is stored on the EAGLE 5 ISS, a user could get into a situation where the NGT values in the LSMS are not reflective of those stored in the EAGLE 5 ISS. The NGT value must be specified correctly every time a 10-digit subscription global title translation is updated or the LNP service on the EAGLE 5 ISS could be seriously impacted.

Output

```
ent - lnp-
sub: tn=1234567890:sp=a123:lrn=1234567890 :mrgt1=16,233-233-233,0,d
pc,gt,28,yes
    rlgncxa03w 04-01-18 08:50:12 EST  EAGLE 31.3.0
    ENT-LNP-SUB: MASP A - COMPLTD
;
```

ent-ls

Enter Linkset

Use this command to add a linkset, with its assigned far-end point code and other linkset attributes, to the database.

Keyword: ent-ls

Related Commands: chg-ls, dlt-ls, rtrv-ls

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:apc= (mandatory)

ANSI point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*). The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: **apca**

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001-005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006-255**.

The point code **000-000-000** is not a valid point code.

:apc/apca/apci/apcn/apcn24= (mandatory)

Adjacent point code. The DPC of the adjacent signaling node at the far end of the linkset.

:apci= (mandatory)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:apcn= (mandatory)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:apcn24= (mandatory)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* indicates a private point code (*prefix-msa-ssa-sp*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000–255**

ssa—**000–255**

sp—**000–255**

:lsn= (mandatory)

Linkset name. Each linkset name must be unique in the system.

Range: *aaaaaaaa*

1 alphabetic character followed by up to 9 alphanumeric characters

:lst= (mandatory)

Linkset type of the specified linkset. This parameter specifies whether the specified link is an access link, bridge link, cross link, diagonal link, or extended link, as defined in Telcordia GR-246-CORE, T1.111.5.

Range: **a, b, c, d, e**

a — Access links

b — Bridge links

c — Cross links

d — Diagonal links

e — Extended links

:apctype= (optional)

ITU-N Adjacent Point Code Type. This parameter specifies the format that will be used for changeover and changeover acknowledgement messages.

Range: **itun, itunchina**

itun — ITU National Adjacent Point Code Type

itunchina — ITU National China Adjacent Point Code Type

Default: **itun**

:asl8= (optional)

Adjacent SLS 8-bit indicator. This parameter specifies whether the adjacent node is sending MSUs with 8-bit SLSs.

Range: **yes, no**

Default: **no**

:bei= (optional)

Broadcast exception indicator. This parameter specifies whether TFP (transfer prohibited) messages are allowed to be broadcast on the linkset.

Range: **yes, no**

yes — TFPs are not broadcast (for X.25).

no — TFPs are broadcast (for SS7).

Default: **yes**—for X.25

no—for SS7

:cli= (optional)

Far-end Common Language Location Identifier (CLLI). This parameter specifies the CLLI assigned to the linkset.

Range: *aaaaaaaa*

1 alphabetic character followed by up to 10 alphanumeric characters

Default: CLLI of the adjacent point code

:gsmscrn= (optional)

GSM MAP screening. This parameter specifies whether GSM MAP screening is allowed.

Range: on, off
Default: off

:gttmode= (optional)

Global title translation mode. This parameter selects a GTT Mode hierarchy for each link set.

Range: cd, cg, acdcd, acdcgcd, acdcdcg, cgacdcd, cgcd, sysdflt
Default: sysdflt

:gwsa= (optional)

Gateway screening action. This parameter specifies whether gateway screening (GWS) is on or off for the specified linkset.

Range: on, off
Default: on—if **scrn** is specified
 off—if **scrn** is not specified

:gwsd= (optional)

Gateway screening MSU discard. This parameter specifies whether the discarding of MSUs that bypass the gateway screening function due to load-shedding is on or off. This parameter is also used with the redirect function; MSUs that cannot be screened are discarded if **gwsd=on** is specified.

Range: on, off
Default: off

:gws= (optional)

Gateway screening messaging. This parameter specifies whether messages are generated for each message screened by gateway screening.

Range: on, off
Default: off

:ipgwapc= (optional)

IP gateway adjacent point code. Specifying **ipgwapc=yes** indicates that the linkset is entered for a card of application type SS7IPGW or IPGWI and the adjacent point code specified is an IP gateway adjacent point code.

Range: yes, no
Default: no

:iptps= (optional)

IPGWx Linkset TPS. The value of this parameter is a user-defined portion of the total enabled system IP Signaling TPS shown in the **rtrv-ctrl-feat** command output. This parameter is allowed and required only for IPGWx linksets (when **ipgwapc=yes** is specified).

The maximum range value for the iptps parameter is 188000 for future expansion. However, the maximum system IPGWx Signaling TPS capacity currently available is 112000.

Range: 100-112000
 The specified value must be divisible by 10.
 The sum of the **iptps** values assigned to all linksets in the system cannot exceed the enabled system IPGWx Signaling TPS value (see the **rtrv-ctrl-feat** command).

:itutfr= (optional)

ITU TFR (Transfer Restricted) procedure indicator. This parameter specifies whether the TFR procedure is on or off on a per-linkset basis. This parameter is valid for ITU national linksets only.

Range: on, off
Default: off

:l3tset= (optional)

Link timer set. This parameter value is the value that is defined with the **chg-l3t** command.

Range: 1
Default: 1

:lsusealm= (optional)

IPTPS linkset alarm threshold percent. This parameter specifies the percent of the linkset TPS (**iptps**) at which an alarm is generated to indicate that the actual linkset TPS is approaching the configured **iptps** value for the linkset.

Range: 10-100

Default: 100

:mtprse= (optional)

ANSI or ITU MTP Restart equipped. This parameter specifies whether the node adjacent to the linkset is equipped with MTP Restart.

Range: yes, no

yes — equipped

no — not equipped

Default: no

:multgc= (optional)

Multiple group codes. This parameter specifies whether multiple group codes can be specified.

Range: yes, no

Default: no

:nis= (optional)

Network Indicator Spare. This parameter specifies whether the Network Indicator Spare option is on or off for the specified linkset. When this option is enabled, the Network Spare value for network indicator for both ANSI and ITU-National (ITU-N) links is supported by the system.

Range: on, off

Default: off

:scrn= (optional)

Gateway screening screen set. This parameter specifies the gateway screening screen set assigned to this linkset.

Range: ayyy, none

1 alphabetic character followed by up to 3 alphanumeric characters, or **none**

none—Deletes screen set association with the linkset

:slkusealm= (optional)

IPTPS signaling link alarm threshold percent. This parameter specifies the percent of the link "fair share" TPS at which an alarm is generated to indicate that the actual link TPS is approaching the link's "fair share" of its linkset's configured TPS (**iptps**). The "fair share" of the linkset TPS for a link is the configured linkset TPS divided by the number of in-service links in the linkset.

Range: 10-100

Default: 80

:slsci= (optional)

5-bit to 8-bit SLS conversion indicator. This parameter specifies whether the 5-bit to 8-bit SLS conversion feature is used to select links for outgoing messages direct to the given linkset. When enabled, the system replaces any 5-bit SLS values contained in received messages, with a random 8-bit value before the 5-bit SLS values are used by the STP to select the outgoing link in that linkset.

Range: yes, no

yes — enabled

no — disabled

Default: no

:slsocbit= (optional)

Other CIC (Circuit Identification Code) Bit. If the SLSOCB feature is turned on, this parameter specifies whether the Other CIC Bit option is to be used during link selection. If the option

is to be used, specify which bit (5–16) of the CIC is to be used as the other CIC bit. During link selection, the specified bit acts as the most significant bit of the new SLS and bits 2 through 4 of the received CIC become the least significant bits of the new SLS. This parameter is used for ITU-ISUP messages. The SLS is not modified in the outgoing message. The following example shows a received CIC where bit 9 is the other CIC bit (**slsobit=9**). The new SLS is 0100.

16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
0	0	0	0	1	0	0	0	1	0	0	1	1	0	0	1
New SLS							0					1	0	0	

Range: 5-16 none

Default: none

:slrsb= (optional)

Rotated SLS (Signaling Link Selection) Bit. This parameter is used for ITU messages on a per-linkset basis to select the bit (1–4) to rotate as the new SLS LSB (Least Significant Bit). The SLS is not modified in the outgoing message. Table 5-42 shows how the rotation affects the four bits of the SLS during linkset selection:

Table 5-42. SLS Bit Rotation

If This Bit is Selected...	Then Bit Locations 4 3 2 1 Are Rotated To...	Description
Bit 4	3 2 1 4	SLS = 0110 becomes Rotated SLS = 1100 SLS = 1011 becomes Rotated SLS = 0111
Bit 3	2 1 4 3	SLS = 0110 becomes Rotated SLS = 1001 SLS = 1011 becomes Rotated SLS = 1110
Bit 2	1 4 3 2	SLS = 0110 becomes Rotated SLS = 0011 SLS = 1011 becomes Rotated SLS = 1101
Bit 1	No rotation is performed because bit 1 is the existing LSB	-

Range: 1-4

Default: 1

:sltset= (optional)

SLTM record. This parameter specifies the SLTM record to be associated with the linkset.

Range: 1-20

Default: 1 for ANSI

2 for ITU

Example

Adds linkset wy644368 with apc 144-201-1 with lstc:

ent - ls: lsn=wy644368:apc=144-201-001:lst=c

Adds linkset lsitua1 with apcn5-5-5-1 with lstc. The apcn parameter is using a four-part format where the maximum number of bits in each position is defined by the chg-stpopts:npcfmti parameter :

ent - ls: lsn=lsitua1:apcn=5-5-5-1:lst=c

In this example, the ITU national duplicate point code (ITUDUPPC) feature is turned on, so the ITU national point code contains a group code. Adds linkset exp123 with apcn2-3-4-5-aa, which has a duplicate point code group of aa and linkset type a:

ent - ls: lsn=exp123:apcn=2-3-4-5-aa:lst=a

Add a linkset in which all applicable MSUs arriving on the linkset are screened using the GSM MAP screening feature:

ent - ls: lsn=lsitu1:apcn=5000:lst=a:gmscrn=on

Adds a link set lsn24 with 24-bit ITU-N apcn2410-100-10 and linkset type a:

ent - ls: lsn=lsn24:apcn24=10-100-10:lst=a

Adds link set lsa2 with private APC p-1-2-4

ent - ls: lst=a: lsn=lsa2:apc=p-1-2-4

Adds link set lsn410234 with private and spare APCN ps-1-1-1-2047-aa::

ent - ls: lst=b: lsn=lsn410234:apcn=ps-1-1-1-2047-aa

Adds link set lsi00001 with spare APCI s-1-1-209-7:

ent - ls: lst=b: lsn=lsi00001:apci=s-1-1-209-7

Adds link set lsn24 with APCN24 10-100-10 with apcntype=itunchina and linkset type a.

ent - ls: lsn=lsn24:apcn24=10-100-10:lst=a:apcntype=itunchina

Adds link set lsa using the global title translation mode cgacdcd.

ent - ls: lsn=lsa:lst=a:apca=1-1-1:gttmode=cgacdcd

Dependencies

The adjacent point code must be a full point code.

The specified adjacent point code cannot exist as an alias point code.

If the **gwsa=on**, **gwsn=on**, and **gwsd=on** parameters are specified, the **scrn** parameter must be specified.

If the **apcn** parameter is specified, its format must match the format that was assigned with the **chg-stpopts:npcfmti** parameter.

The specified adjacent point code cannot be the same as the self-ID destination point code of the STP.

The specified adjacent point code cannot be the same as any self-ID capability point codes of the STP.

If the system is configured for ANSI formatted point codes, the network indicator value of the far-end point code parameter (**ni** parameter) must be **6** or greater when the cluster value is **0** (**nc** parameter).

The specified linkset name cannot already exist in the database.

The specified adjacent point code cannot be assigned to any other linkset.

Private (**p-**) and private and spare (**ps-**) point codes can be assigned only to IPGW linksets (the **ipgwapc=yes** parameter is specified).

The maximum number of linksets that can be defined in the system is 1024.

The specified far-end **cli** value cannot be assigned to any other linkset.

The specified screen set (**scrn** parameter) must exist in the database.

If the **gwsd=on** parameter is specified, the **gwsa=on** parameter must be specified.

If a destination point code matching the specified far-end point code exists, the far-end CLLI for the given linkset must match the destination identifier (DI) of that matching destination.

If the adjacent point code is in the X.25 domain, the **bei=yes** parameter must be specified or the **bei** parameter must be omitted from the command.

The specified adjacent point code cannot be referenced by an X.25 route that specifies the **lc2nm=yes** parameter.

The **slsci** parameter can be specified only for ANSI linksets.

The **mtprse** parameter can be specified only if the MTP Restart feature MTPRS (for ANSI) is turned on. The **rtrv-feat** command can be used to verify whether the feature is turned on (mtprs=yes in the output).

The **mtprse=yes** parameter is not valid for IPGW adjacent point code linksets (**ipgwapc=yes** parameter).

The **asl8=yes** parameter can be assigned only to an ANSI linkset (a linkset containing an adjacent point code in the SS7 domain).

The **apcntype** parameter can be specified only for ITU-N and ITU-N24 linksets.

The Other CIC (Circuit Identification Code) Bit Used feature (SLSOCB) feature must be turned on before the **slsobit** parameter can be specified.

The **slsobit** parameter is valid only for ITU linksets.

The **slsrbsb** parameter is valid only for ITU linksets.

The GSM Map Screening feature must be turned on (see the **enable-ctrl-feat** and **chg-ctrl-feat** commands) before the **gmscrn** parameter can be specified.

The **itutfr** parameter is valid only for ITU national linksets on the EAGLE 5 ISS STP.

The ITU National Duplicate Point Code (ITUDUPPC) feature must be turned on before the **multgc=yes** parameter can be specified.

The **multgc=yes** parameter is valid only for ITU-N or ITU-I point codes.

The **iptps** parameter must be specified for IPGWx linksets

The **iptps** parameter cannot be specified for linksets that are not IPGWx.

The specified **iptps** parameter value must be divisible by 10.

The total of the **iptps** parameter values for all linksets cannot exceed the IPGWx Signaling TPS feature quantity that is enabled in the system.

The **lsusealm** parameter cannot be specified for linksets that are not IPGWx.

The **slkusealm** parameter cannot be specified for linksets that are not IPGWx.

The Enhanced GSM Map Screening feature must be turned on before the **gmscrn=on** parameter can be specified for an ANSI linkset.

The **mtprse** parameter can be specified only if the MTP Restart feature ITUMTPRS (for ITU), is turned on. The **rtrv-feat** command can be used to verify whether the feature is turned on (itumtprs=yes in the output).

The **itutfr** parameter is valid only for ITU linksets on the IP⁷ Secure Gateway.

A point code cannot be assigned to a linkset as an APC if the point code has been provisioned with exception routes.

An APC cannot be assigned to an IPGWx linkset that is already assigned to a route involving another linkset.

The Origin-based SCCP Routing feature must be turned on before the **gttmode** parameter can have a value of **acddcd**, **cgacddcd**, **acdcgdc**, **acddcdcg**, **cgcd**, **dcg**, or **cg**.

A new IPGW link set cannot be entered if it contains an APC that is already configured in a routing key. An SAPC cannot be added to an existing IPGW link set if the new SAPC is already configured in a routing key.

Notes

Of the 1024 maximum linksets supported, up to 255 of the linksets can be gateway linksets.

The system supports a maximum of 700 links. If more than 700 linksets are defined, a maximum of 700 of the defined linksets can be in use at any one time.

The links that directly connect the system with an adjacent node are grouped into one or more linksets. A linkset can contain up to 8 (international standards) or 16 (national standards) signaling links, depending on how the system was configured when the network was created.

Each linkset must be assigned the same physical links at both ends of the link (local and adjacent signaling points) and each link must be assigned the same link number.

Signaling link acknowledgments (SLTA) are the same type of maintenance message as the SLTMs received on the link.

If the **gwsa=off** and **gwsn=off** parameters are specified, all MSUs are passed.

If the **gwsa=off** and **gwsn=off** parameters are specified for all linksets, gateway screening and the GWS redirect function for the DTA feature are disabled.

If the **gwsa=off** and **gwsn=on** parameters are specified, all MSUs pass, but MRNs are generated if an MSU matches a screening condition.

If the **gwsa=on** and **gwsn=off** parameters are specified, MSUs are screened but messages are not generated.

If the **gwsa=on** and **gwsn=on** parameters are specified, MSUs are screened and MRNs are generated at the rate of one MRN every 20 seconds per link.

If the **asl8=yes** parameter is specified with the **lst=a** parameter (a linkset containing access signaling links), this indicates that the originator of the MSUs is generating 8-bit SLs. For other linkset types, the **asl8=yes** parameter indicates that the adjacent STP is converting 5-bit SLs to 8-bit SLs. The SL in MSUs received by the system on a linkset that has the **asl8=yes** parameter assigned to it will not be converted. These MSUs are assumed to contain 8-bit SLs.

The Network Indicator Spare (**nis**) parameter can be specified only for ANSI and ITU-N links.

The **mtprse** parameter value can be specified independently of the value specified on the **mtprsi** parameter of the **chg-stpopts** command.

The MTP restart option (**mtprse**) is not a valid option on TCP/IP point-to-multipoint links (DCM cards equipped as SS7IPGW links).

When two linksets are used as a combined linkset, each linkset should have the same **slsci** and **asl8** values. MTP restart provides an orderly process for bringing signaling links back into service after the system has been isolated and restarted. A greater preference is given to restoring the STP to network service in an orderly fashion than to the speed of recovery. The time required is system dependent; Table 5-43 provides examples of some approximate times:

Table 5-43. Link Alignment Performance

System Size (Number of LIMs)	Link Alignment Delay (seconds)
up to 64	62
64 to 127	97
128 to 191	132
more than 191	167

The **slrsb** parameter alone does not provide an even distribution of ITU-ISUP messages across all links within a linkset. The system uses all four bits of the SLS to determine the actual link to route messages. Because the static bit is simply rotated within the SLS, all possible values of the SLS field will still not be realized. The **slsobit** parameter must also be specified to provide an even distribution across all links within the linkset. If both parameters are specified for a given linkset, the SLS field is processed in the following order.

1. The SLS is modified using the Other CIC Bit option.
2. The modified SLS is modified again using the Rotated SLS Bit option.
3. The modified SLS is used by the existing linkset and link selection algorithms to select a link.
4. The ISUP message is sent out the link containing the original, unmodified SLS field.

If the ITU National Duplicate Point Code (ITUDUPPC) feature is turned on, for each group that is defined, a separate ITU national C linkset must be provisioned. The C linkset is used as the alternate route for point codes in the group.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (**s-**) and the private and spare point code subtype prefix (**ps-**). All of the point code types support the private (internal) point code subtype prefix (**p-**).

The ITU National and ITU National China Adjacent Point Code types indicate the format that is used for changeover and changeover acknowledgement messages. China specifies a 16-bit field for data in changeover messages. The FSN occupies the first 12 bits. The trailing 4 bits are spare and are coded as 0. ITU uses a 24-bit field for data in the extended changeover/changeover acknowledgement messages. The FSN is encoded in the first 12 bits. The last 12 bits of the field are spare and are coded as zero.

Output

```
ent - ls: lsn=wy644368:apc=144-201-001:lst=c
rlghncxa03w 04-02-17 16:23:21 EST EAGLE 31.3.0
Link set table is (114 of 1024) 11% full
ENT-LS: MASP A - COMPLTD
;
```

ent-map

Enter Mate Applications

Use this command to allow the assignment of mated applications for use with SCCP network management. A mated application is used in the event the local application becomes unavailable.

NOTE: A MAP set is a logical grouping of a set of PC/SSNs that already exist in the EAGLE 5 ISS MAP table. The Flexible GTT Load Sharing feature allows a PC/SSN combination to be part of more than one load-sharing group, with each PC/

SSN combination defined by a different MAP set. When the Flexible and Intermediate GTT Load Sharing features are both enabled, all existing entries in the MAP table and all existing GTA translations in the GTT table with *ri=ssn* are stored in default MAP sets. Additional MAP sets can be provisioned, and GTT entries can be associated to the MAP sets.

Keyword: ent-map

Related Commands: chg-map, dlt-map, rtrv-map

Command Class: Database Administration

Parameters

NOTE: See “Point Code Formats and Conversion” for a detailed description of point code formats, rules for specification, and examples.

:pc= (mandatory)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: pca

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001–005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006–255.

The point code 000-000-000 is not a valid point code.

:pc/pca/pci/pcn/pcn24= (mandatory)

Primary remote point code.

:pci= (mandatory)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

:pcn= (mandatory)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: s-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-
nnnnn—0-16383
gc—aa-zz
m1-m2-m3-m4—0-14 for each member; values must sum to 14

:pcn24= (mandatory)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

:ssn= (mandatory)

Subsystem number. This parameter identifies the application's subsystem number. This attribute is composed of the decimal representation of the 1-byte field used in the SS7 protocol.

Range: 2-255

:grp= (optional)

Concerned point code broadcast list (CSPC) group name. This parameter specifies the name of a group of point codes that should be notified of the subsystem status. A different CSPC group can be assigned to each mated PC/SSN. For ANSI, the EAGLE 5 ISS broadcasts SSP or SSA to the mate subsystem only if the mate's point code is provisioned as part of the CSPC group to receive an SSP or SSA. This parameter must be provisioned for a node if the node is to receive SSP or SSA broadcasts, even if the node is a mated application.

Range: ayyyyyyy

1 alphabetic character followed by up to 7 alphanumeric characters

Default: No broadcast list for this mated application.

:mapset= (optional)

MAP set ID.

This parameter is mandatory when the Flexible GTT Loadsharing feature is enabled.

Range: dflt, new

Default: dflt - If the Flexible GTT Load Sharing feature is not enabled, the default value of the **mapset** parameter is **dflt**.

:materc= (optional)

Mate relative cost. The EAGLE 5 ISS determines the multiplicity mode based on the relative costs (the **rc** and **materc** parameters) of the subsystem. (See Notes for additional information on multiplicity modes.)

Range: 00-99

Default: 50

:mpc= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: mpca

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001–005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006–255**.

The point code **000-000-000** is not a valid point code.

Default: 000-000-000

:mpc/mpca/mpci/mpcn/mpcn24= (optional)

Mate remote point code.

:mpci= (optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

Default: 0-000-0

:mpcn= (optional)

ITU national point code with subfield ITU number (*nnnnn*). The *prefix* subfield indicates a spare point code.

Range: s-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

Default: 00000

:mpcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

Default: 000-000-000

:mrc= (optional)

Message routing under congestion. This parameter defines the handling of Class 0 messages during congestion conditions.

Range: yes, no

Default: yes—if ANSI

no—if ITU

:mssn= (optional)

Mate subsystem number. This parameter specifies the mate application's subsystem number. This attribute is the decimal representation of the one-byte field used in the SS7 protocol.

Range: 2-255

Default: Parameter is not used

:rc= (optional)

Relative cost. The EAGLE 5 ISS determines the multiplicity mode based on the relative costs (the **rc** and **materc** parameters) of the subsystem. (See Notes for additional information on multiplicity modes.)

Range: 00-99

Default: 10

:srm= (optional)

Subsystem routing messages. This parameter specifies whether subsystem routing messages (SBR, SNR) are transmitted between the mated applications.

Range: yes, no

Default: yes—if ANSI
no—if ITU

:sso= (optional)

Subsystem status option. This parameter specifies whether or not the PC/SSN is to initiate a subsystem test when a RESUME is received for the PC.

Range: on, off

Default: off

Example

As shown in the following example, the **rc** parameter is not required for a solitary pc/ssn pair. If the **rc** parameter is not specified, the relative cost defaults to 10.

ent-map:pc=1-1-1:ssn=10:grp=xyz

The following example enters both 1-1-0/10 and 1-1-1/10 into the map table. both the **rc** and **materc** parameter are required for this command, which defines a map group.

ent-

map:pc=1-1-0:ssn=10:rc=10:mpc=1-1-1:mssn=10:materc=20:grp=xyz:srm=on

The following example enters a solitary point code in the MAP table with the Subsystem Status Option (sso) set to on.

ent-map:pc=1-1-3:ssn=20:grp=abc:sso=on

The following commands enters a solitary point code in the MAP table with the Subsystem Status Option (sso) set to off.

ent-map:pc=2-2-2:ssn=20:grp=abc:sso=off

ent-map:pc=2-2-3:ssn=20:grp=abc

The following example sets the Subsystem Status Option (sso) set to on for the primary and mate.

ent-map:pc=1-1-4:ssn=10:rc=10:mpc=1-1-1:mssn=10:materc=20:sso=on

The following example sets the Subsystem Status Option (sso) set to off (default) for the primary and mate:

ent-map:pc=1-1-5:ssn=10:rc=10:mpc=1-1-2:mssn=10:materc=20:sso=off

The following command enters a solitary point code in the MAP table with the Subsystem Status Option (sso) set to off (the default).

ent-map:pc=1-1-6:ssn=10:rc=10:mpc=1-1-7:mssn=10:materc=20

The following example enters spare point codes 1-1-0 with rc=10 and 1-1-1 with rc=10 into the MAP table. Both the rc and materc parameters are required for this command, to define a MAP group.

ent -

**map:pci=s-1-1-0:ssn=10:rc=10:mpci=s-1-1-1:mssn=10:materc=20:grp=x
yz:srm=no**

The following example creates a new MAP set, and enters 1-1-1/10 and 1-1-2/20 into the newly created MAP set.

ent -

map:pc=1-1-1:ssn=10:rc=10:mpc=1-1-2:mssn=20:materc=20:mapset=new

The following example enters both 1-1-1/15 and 1-1-2/25 into the default MAP set.

ent -

map:pc=1-1-1:ssn=15:rc=10:mpc=1-1-2:mssn=25:materc=20:mapset=df lt

The following example creates a new MAP set and enters a solitary PC/SSN value of 1-1-1/10.

ent-map:pc=1-1-1:ssn=10:mapset=new

The following example enters a solitary PC/SSN of 1-1-1/15 into the default MAP set.

ent-map:pc=1-1-2:ssn=15:mapset=df lt

The following example creates a new MAP set and enters a solitary PC/SSN 1-1-1/10 with the subsystem option ON. It specifies the sso=on parameter for all instances of PC/SSN 1-1-4/10.

ent-map:pc=1-1-1:ssn=10:sso=on:mapset=new

The following example enters a solitary PC/SSN of 1-1-1/15 into the default MAP set with the subsystem option ON. The sso=on parameter is specified for all instances of PC/SSN 1-1-4/10.

ent-map:pc=1-1-3:ssn=15:sso=on:mapset=df lt

Dependencies

The **pc/ssn** pair must not already exist in the Mate Application entity set.

If an **mpc/mssn** pair is specified, that pair must not already exist in the Mate Application entity set and the **mpc** must already exist in the Routing table.

If the PC is entered as the **pc** or **pca** parameter, then the MPC, if specified, must be the **mpc** or **mpca** parameter, respectively. If the PC is entered as the **pci** or **pcn** parameter, then the MPC, if specified, must be the **mpci** or **mpcn** parameter, respectively.

ITU-I, ITU-N, ITU-I spare, and ITU-N spare true point codes must be entered with the same SSN.

If the ANSI-ITU-China SCCP Conversion feature is turned on, then the CPC broadcast group and PC network types can be mixed.

If the ANSI-ITU-China SCCP Conversion feature is not on,

- If the **pc** parameter is entered as **pc** or **pca**, then the specified PCs in the CPC broadcast group must have been entered as **pc** or **pca**.
- If the **pc** parameter is entered as **pci** or **pcn**, then the specified PCs in the CPC broadcast group must have been entered as **pci** or **pcn**, respectively.

If the PC values are ITU values (**pci** or **pcn** parameters), then the **srm=yes** parameter cannot be specified.

The primary remote point code must exist in the Routing table.

If an MPC is specified, then an MSSN must be specified.

If an MSSN or MPC is specified, then the MRC must be specified.

If a CSPC broadcast list group name is specified, it must already exist.

The Spare Point Code Support feature must be enabled before an ITU-I or ITU-N spare point code can be specified.

A maximum of 1024 unique remote point codes are allowed.

A maximum of 12 SSNs per remote point code can be entered.

The DPCs of the primary subsystem and the mate subsystem must be full PCs.

If the CRMD feature is on, then PCs in the MAP table must be full PC entries in the Routing table. Partial PCs are not allowed.

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before an EAGLE 5 ISS true point code and LNP subsystem can be specified.

If the **pcn** parameter or the **mpcn** parameter is specified, the format must match the format that was assigned with the **chg-stpopts:npclfnti** parameter.

The INP feature or the EIR feature must be turned on before a value that is a true point code can be specified for the **pcn** parameter.

The EIR feature must be turned on before a value that is a true point code can be specified for the **pci** parameter.

If a mate remote point code is specified, the mate remote point code must exist in the Routing table.

The **srn** or **mrc** parameters cannot be specified for a solitary PC/SSN pair entry.

If the **mpc** and **mssn** parameters are specified, the **materc** parameter must be specified.

If the **pc/ssn** and **mpc/mssn** parameter pairs are specified, then the **rc** parameter must be specified.

If the **mssn**, **materc**, and **rc** parameters are specified, then the **mpc** parameter must be specified.

If the **pc** parameter value is an EAGLE 5 ISS true point code, the subsystem must have a lower relative cost than all other mated subsystems in the group.

If the **pc** parameter value is equal to the true point code and the **materc** parameter is specified, the **rc** parameter value must be less than the **materc** parameter value.

If the **mpc** parameter value is equal to the true point code, the **rc** parameter value must be less than the **materc** parameter value.

The **sso** parameter cannot be specified with a point code value that is the system true point code.

A true point code cannot be routed to itself.

The mate point code (**pc**)/mate subsystem number (**mssn**) cannot be the same as the primary point code (**pc**)/primary subsystem number (**ssn**).

The point code (**pc**) must already exist in the Concerned Point Code (CSPC) group.

The number of MPC Subsystem entries must not exceed the table capacity.

If the Flexible GTT Load Sharing feature is not enabled, then the **mapset** parameter cannot be specified. If the Flexible GTT Load Sharing feature is enabled, then the **mapset** parameter must be specified.

The EAGLE 5 ISS True PC can be provisioned only in the default MAP set.

If the **mapset=dflt** parameter is specified, then the specified PC/SSN cannot exist in the default MAP Set.

If the **mapset=dflt** parameter is specified, then the specified MPC/MSSN cannot exist in the default MAP Set.

The MAP table cannot be full when the command is entered.

If the resulting multiplicity mode (MULT field) is SOL (Solitary) or SHR (Loadsharing), the **srn** parameter and the **mrc** parameter cannot be specified.

Notes

Up to 8 PC/SSN pairs can be entered into a mated PC/SSN group.

The EAGLE 5 ISS supports four multiplicity modes for nodes/subsystems. A description of each mode follows.

- When a PC/SSN pair is not replicated, the pair is in *solitary* mode. The subsystem acts as the only application, with no backup. If this subsystem fails, messages routed to it are discarded and SCCP management returns “Subsystem Unavailable” messages to the originator.
- A group of replicated PC/SSN pairs are in *dominant* mode if each PC/SSN pair in the group has a unique relative cost. The specified subsystem acts as the primary subsystem, while the mate subsystem acts as a backup. In the event of congestion, messages route to the mate subsystem. When the congestion subsides, messages are again routed to the primary (dominant) subsystem.
- A group of replicated PC/SSN pairs are in *load sharing* mode if each PC/SSN pair in the group has the same relative cost. All messages are evenly distributed at the SCCP level to all nodes/subsystems in the group. In the event of congestion or failure, the non-affected subsystem assumes the load of its failed or congested mate.
- The *combined load sharing/dominant* mode supports a combination of loadsharing and dominant mode and is new for the Weighted SCP Load Balancing feature. A group of PC/SSN pairs are in combined load sharing/dominant mode when at least two of the PC/SSN pairs have the same relative cost and another node subsystem in the group has a different relative cost. A combination of node accessibility and relative cost determines the preferred PC/SSN.

If the XMAP feature is enabled, the MAP table can have up to either 2000 or 3000 entries, depending on the controlled feature Part Number that is enabled. If XMAP is not enabled, the MAP table can contain up to 1024 user entries.

The **sso** parameter changes the initialization of the subsystem status (“prohibited” or “allowed”) for PC/SSN MAP entries. The EAGLE 5 ISS previously marked the subsystem status “allowed” for each PC/SSN entry. The **sso** parameter marks the subsystem status “prohibited” for each new entry that has **sso=on**. This causes the EAGLE 5 ISS to generate an SST to the remote point-code when an MTP-RESUME is received. Upon reception of an SSA, the subsystem status is marked “allowed”.

When the ANSI-ITU-China SCCP Conversion feature is turned on, the Concerned Point Code (CSPC) Group’s network type can be of a different network than the mated application’s network type. For example, the mated application’s network type could be ANSI and the CSPC Group could be ITU or mixed with ANSI, ITU, and ITUN concerned point codes.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-).

When the Flexible GTT Load Sharing feature is on, MAP load sharing sets are supported. Each set is identified by the **mapset** parameter.

Output

```

ent-map:pc=1-1-1:ssn=10:grp=xyz
  rlghncxa03w 04-01-07 11:43:04 EST  EAGLE 31.3.0
  ENT-MAP:  MASP A - COMPLTD
;

ent-
map:pc=1-1-1:ssn=10:rc=10:mpc=1-1-2:mssn=20:materc=20:mapset=new
  tekelecstp 06-06-01 15:28:46 EST  EAGLE 35.0.0

  New MAPSET Created : MAPSETID = 362
  ENT-MAP:  MASP A - COMPLTD
;

```

ent-mrn

Enter Mated Relay Node

Use the command to assign point codes to point code groups in the MRN table. The Intermediate GTT Loadsharing feature must be on before this command can be entered. If the Intermediate GTT Loadsharing feature AND the Flexible GTT Loadsharing feature are on, use this command to create a new MRN set, or to add entries to an existing MRN set.

NOTE: If only the Intermediate GTT Loadsharing feature is enabled and turned on, the MRN table can contain a maximum of 3000 entries. If both the Intermediate GTT Loadsharing and the Flexible GTT Loadsharing features are enabled, the MRN table can contain a maximum of 6000 entries.



CAUTION: If any entries are provisioned in the SCCP-SERV table, the maximum number of entries that the MRN table can contain is reduced by that amount. Check the rtrv-sccp-serv command output to see if entries exist in the SCCP-SERV table.

NOTE: An MRN set is a logical grouping of PCs that already exist in the EAGLE 5 ISS MRN table. The Intermediate GTT Loadsharing feature allows PCs to be part of more than one load-sharing group, with each PC defined by a different MRN set. When the Intermediate GTT Loadsharing feature is enabled, all existing entries in the MRN table and all existing GTA translations in the GTT table with ri=gt are stored in default MRN sets. Additional MRN sets can be provisioned, and GTT entries can be associated to the MRN sets.

Keyword: ent-mrn

Related Commands: chg-mrn, dlt-mrn, rtrv-mrn

Command Class: Database Administration

Parameters

NOTE: See “Point Code Formats and Conversion” for a detailed description of point code formats, rules for specification, and examples.

:pc= (mandatory)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-nm)*.

Synonym: pca

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001-005.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006–255**.
 The point code **000-000-000** is not a valid point code.

:pc/pca/pci/pcn/pcn24= (mandatory)
 Post-GTT-translated point code.

:pci= (mandatory)
 ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

:pcn= (mandatory)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:pcn24= (mandatory)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

:mrnset= (optional)

MRN set ID.

Range: **1-3000 dflt, new**

dflt—Default MRN set.

new—Create a new MRN set

:pc1= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Synonym: **pca1**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:pc1/pca1/pci1/pcn1/pcn241= (optional)

Alternate post-GTT-translated point code.

:pc2= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Synonym: **pca2**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:pc2/pca2/pci2/pcn2/pcn242= (optional)

Alternate post-GTT-translated point code.

:pc3= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Synonym: **pca3**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:pc3/pca3/pci3/pcn3/pcn243= (optional)

Alternate post-GTT-translated point code.

:pc4= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Synonym: **pca4**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001–005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006–255**.

The point code **000-000-000** is not a valid point code.

:pc4/pca4/pci4/pcn4/pcn244= (optional)

Alternate post-GTT-translated point code.

:pci1= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, (*prefix-zone-area-id*).

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:pci2= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:pci3= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:pci4= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:pcn1= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:pcn2= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:pcn241= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000–255**

sp—**000–255**

:pcn242= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000–255**

ssa—**000–255**

sp—**000–255**

:pcn243= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000–255**

ssa—**000–255**

sp—**000–255**

:pcn244= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000–255**

ssa—**000–255**

sp—**000–255**

:pcn3= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:pcn4= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code

option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:rc= (optional)

Relative cost. This parameter specifies the relative cost of the route for the post-GTT-translated point code.

Range: **0-99**

:rc1= (optional)

Relative cost. This parameter specifies the relative cost of the route for alternate post-GTT-translated point code 1.

Range: **0-99**

:rc2= (optional)

Relative cost. This parameter specifies the relative cost of the route for alternate post-GTT-translated point code 2.

Range: **0-99**

:rc3= (optional)

Relative cost. This parameter specifies the relative cost of the route for alternate post-GTT-translated point code 3.

Range: **0-99**

:rc4= (optional)

Relative cost. This parameter specifies the relative cost of the route for alternate post-GTT-translated point code 4.

Range: **0-99**

Example

The following example enters point code 1-1-0 into the MRN table with a relative cost of 10 and associates point code 1-1-1 with it as a point code with a relative cost of 20.

```
ent-mrn:pc=1-1-0:rc=10:pc1=1-1-1:rc1=20
```

The following example updates the group containing point code 1-1-0 in the MRN table, to add point code 1-1-2 with relative cost of 20 and point code 1-1-10 with relative cost of 30 to the group.

```
ent-mrn:pc=1-1-0:rc=10:pc1=1-1-1:rc1=20:pc2=1-1-10:rc2=30
```

```
ent-mrn:pci=s-2-2-1:rc=10:pci1=s-2-2-2:rc1=11:pci2=2-100-1:rc2=12
```

```
ent-mrn:pcn=s-1-1-1-123-aa:rc=1:pcn1=1-1-1-235-
```

```
aa:rc1=2:pcn2=s-1-1-1-235-aa:rc2=3
```

```
ent-mrn:pc=1-1-1:rc=10:pc1=1-1-2:rc1=10:mrnset=df1t
```

```
ent-
```

```
mrn:pc=1-1-1:rc=10:pc1=1-1-2:rc1=20:pc2=1-1-3:rc2=30:apc3=1-1-4:r
```

```
c3=40:apc4=1-1-5:rc4=50:mrnset=new
```

ent-mrn:pc=1-1-3:pc1=1-1-6:rc1=60:pc2=1-1-7:rc2=70:mrnset=111

Dependencies

The Intermediate Global Title Translation Loadsharing feature must be turned on before this command can be entered.

A new point code must have the same network type as existing point codes.

When a point code parameter is specified, its relative cost parameter must be specified.

Point codes cannot have the same value as the EAGLE 5 ISS SID.

The same point code value cannot be entered more than once in the MRN table.

Point codes must be the format set by the **npcfmti** parameter of the **chg-stpopts** command. (Use the **rtrv-stpopts** command to display the STP option settings.)

Remote point codes must already exist as destinations in the Ordered Route entity set or reside in a cluster destination for which ordered routes are specified.

A point code that is specified as new in the command must not already exist in the MRN table.

A maximum of 3000 point codes can be entered into the MRN table.

The Flexible GTT Loadsharing feature must be enabled before the **mrnset** parameter can be specified.

If the Flexible GTT Loadsharing feature is enabled, then the specified PC must already exist in the specified MRN set.

The specified MRN set must already exist in the MRN table.

Multiple groups can only exist in the default MRN set.

Each point code group can contain a maximum of 8 point codes.

Notes

The **ent-mrn** command cannot be used to change the relative cost value for a point code; the **chg-mrn** command must be used.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-).

Output

ent -

mrn:pc=1-1-1:rc=10:pc1=1-1-2:rc1=20:pc2=1-1-3:rc2=30:apc3=1-1-4:rc3=40:apc4=1-1-5:rc4=50:mrnset=new

tekelecstp 05-05-17 10:19:51 EST EAGLE 34.2.0

New MRNSET Created : MRNSETID = 112

ENT-MRN : MASP A - COMPLTD

;

ent-mrn:pc=1-1-0:rc=10:pc1=1-1-1:rc1=20

rlghncxa03w 04-02-20 09:07:58 EST EAGLE 31.3.0

ENT-MRN: MASP A - COMPLTD

;

ent-na

Enter Network Appearance

Use this command to enter a new network appearance in the Network Appearance table.

Keyword: **ent-na**

Related Commands: **dlt-na**, **rtrv-na**

Command Class: Database Administration

Parameters

:na= (mandatory)
 Network appearance.
Range: **0-4294967295**

:type= (mandatory)
 Type of the network appearance.
Range: **ansi, itu, ituis, itun, ituns, itun24**

:gc= (optional)
 Group Code of the network appearance.
Range: yy

Example

```
ent-na:type=ansi:na=10
ent-na:type=itui:na=11
ent-na:type=itun:na=10
ent-na:type=itun:na=11:gc=fr
ent-na:type=itun24:na=3
ent-na:type=ituis:na=4
```

Dependencies

The network appearance (**na**) must not already exist in the Network appearance table.

The Network Appearance table can contain a maximum of 45 entries.

Group Code (**gc**) must not already be equipped.

Group Code (**gc**) is not allowed with network types **ansi** , **itui**, **ituis**, and **itun24**.

Group Code (**gc**) is required for network type **itun** or **ituns** when the ITUDUPPC feature is turned on.

Group Code (**gc**) is not allowed for network type **itui** when the ITUDUPPC feature is turned off.

Group Code (**gc**) must be in the SID or SPC table.

The Spare Point Code Support feature must be enabled before the **ituis** or **ituns** network type can be specified.

The specified network appearance must exist in the Network Appearance table.

Notes

Network Appearance identifies the SS7 network context of the message, for the purposes of logically separating signaling traffic between the SGP and ASP over a common SCTP association. A unique network appearance value can be associated with ANSI, ITUI, 14-bit ITU-N or 24-bit ITU-N networks. When the ITUDUPPC (ITU National Duplicate Point Code) feature is turned on, network appearance can be associated with a specific 14-bit ITU-N group code.

Output

```
ent-na:type=ansi:na=10
  rlgncxa03w 04-02-20 09:07:58 EST  EAGLE 31.3.0
  ENT-NA: MASP A - COMPLTD
;
```

ent-pstn-pres

Enter PSTN Presentation

Use this command to define new Public Switched Telephone Network (PSTN) presentation values.

Keyword: ent-pstn-pres

Related Commands: chg-appl-rtkey, chg-isupvar-attrib, chg-pstn-pres, copy-isupvar-attrib, dlt-pstn-pres, rtrv-appl-rtkey, rtrv-isupvar-attrib, rtrv-pstn-pres

Command Class: Database Administration

Parameters

:pstncat= (mandatory)

PSTN category identifying the new Variant being defined.

Range: 0-65535

:pstnid= (mandatory)

PSTN ID identifying the new Variant being defined.

Range: 0-65535

:pstndesc= (optional)

A test description of the PSTN presentation value.

[illegible]

Any alphanumeric string of 0-31 characters in length, in double quotes

Default: Blank spaces

Example

ent-pstn-pres:pstncat=5000:pstndesc="Mexican ISUP vl.8"

Dependencies

Required controlled features must be enabled.

- ISUP Normalization feature
- ON/OFF controlled feature for *Tekelec-defined* Variant
- The Tekelec-defined Variants are listed in “Tekelec-defined ISUP Normalization Variants” in Appendix A.
- Quantity controlled feature for *user-defined* Variant

The combination of **pstncat** and **pstnid** values must be valid.

- A controlled feature must exist for the **pstncat/pstnid** combination.
- The **pstncat** and **pstnid** must not already be defined.
- The maximum number of Variants the system supports cannot be exceeded.

The quantity controlled feature must have available capacity.

You cannot exceed the maximum number of *user-defined* Variants associated with the quantity controlled feature.

Notes

The system uses the PSTN presentation value, consisting of a PSTN category and a PSTN ID, to uniquely define an ISUP Variant. The assignment of a new PSTN value also creates a new entry in the ISUP Variant table. The new PSTN value **must** be unique.

The **ent-pstn-pres** command is used to define values within the Tekelec-defined range (PSTN category 0-4095) as long as an associated ON/OFF control feature exists and its status is ENABLED.

The **ent-pstn-pres** command is used to define values within the user-defined range (PSTN category 4096-65535) as long as an associated ISUP normalization quantity control feature exists and its status is ENABLED and its capacity is not going to be exceeded.

The **ent-pstn-pres** command also creates a new entry in the ISUP Variant table initialized to default values. There **must** be an available entry in the table or this command will be rejected.

Output

The following output example defines a new *user-defined* PSTN presentation value.

```
ent-pstn-pres:pstncat=5000:pstnid=1:pstndesc="mexican isup v1.8"
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
ENT-PSTN-PRES: MASP A - COMPLTD
;
```

ent-rmt-appl

Enter Remote Application

Use this command to assign user parts to an internal point code that, in turn, assigns user parts to an End Office node.

Keyword: ent-rmt-appl

Related Commands: dlt-rmt-appl, rtrv-rmt-appl

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:ipc= (mandatory)

ANSI point code with subfields network indicator-network cluster-network cluster member (*ni-nc-ncm*). The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: ipca

Range: p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001-005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006-255.

The point code 000-000-000 is not a valid point code.

:ipc/ipca/ipci/ipcn/ipcn24= (mandatory)

End Node's internal point code.

:ipci= (mandatory)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: s-, p-, ps-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps-

zone—0-7

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

:ipcn= (mandatory)

ITU national point code with subfield ITU number (*nnnnn*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:ipcn24= (mandatory)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* indicates a private point code (*prefix-msa-ssa-sp*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

msa—000-255

ssa—000-255

sp—000-255

:si= (mandatory)

Service indicator value that designates which user part is assigned to the IPC.

Range: **3-15**

:ssn= (optional)

SCCP subsystem number. Valid **only** if **si=3**. Use **ssn** as the starting value of the range if **ssne** is specified.

Range: **0-255**

:ssne= (optional)

Specifies the end of the range of subsystem numbers.

Range: **0-255**

Example

```
ent-rmt-appl:ipc=0-0-1:si=3:ssn=5
```

```
ent-rmt-appl:ipc=0-0-1:si=3:ssn=5:ssne=100
```

```
ent-rmt-appl:ipc=0-0-1:si=5
```

```
ent-rmt-appl:ipcn24=1-100-1:si=5
```

```
ent-rmt-appl:ipc=p-1-1-1:si=3:ssn=5:ssne=102
```

```
ent-rmt-appl:ipci=ps-2-2-2:si=5
```

Dependencies

Partial point codes are not allowed.

The **ssn** parameter is required if **si=3**.

The **ssn** and **ssne** parameters are not allowed unless **si=3**.

The **ssne** parameter value must be greater than the **ssn** parameter value.

The specified IPC **must** be previously defined in the destination table.

The new entry cannot conflict with an existing entry.

Notes

To specify a range of subsystem numbers, specify the **ssn** parameter value as the start of the range and the **ssne** parameter value as the end of the range.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (**s-**) and the private and spare point code subtype prefix (**ps-**). All of the point code types support the private (internal) point code subtype prefix (**p-**).

Output

```
ent-rmt-appl:ipc=0-0-1:si=3:ssn=5
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
ENT-RMT-APPL: MASP A - COMPLTD
;
```

ent-rte

Enter Route

Use this command to add a route to the system.



CAUTION: When using the Network Routing feature, limited network management is provided for point codes not covered by full point code routing, Cluster Routing, or Nested Cluster Routing.

NOTE: A routeset is a collection of routes to a destination. Each routeset can have up to 6 routes, with 16 links on each route. An exception routeset is a collection of up to 6 exception routes that have the same DPC, exception class, and criteria.

Keyword: ent-rte

Related Commands: dlt-rte, rept-stat-dstn, rtrv-rte

Command Class: Database Administration

Parameters

NOTE: See “Point Code Formats and Conversion” for a detailed description of point code formats, rules for specification, and examples.

:dpc= (mandatory)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*). The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: dpca

Range: p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001-005.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:dpc/dpca/dpci/dpcn= (mandatory)

Destination point code.

:dpci= (mandatory)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:dpcn= (mandatory)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:dpcn24= (mandatory)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* indicates a private point code (*prefix-msa-ssa-sp*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:lsn= (mandatory)

The linkset name associated with this route.

Range: **ayyyyyyyyy**

1 alphabetic character followed by 9 alphanumeric characters

:rc= (mandatory)

The relative cost of the route

Range: **0-99**

:force= (optional)

This parameter allows a route to be added to the database even if the linkset to be assigned to the route does not have any signaling links in it.

Range: yes, no

Default: no

Example

Adds route for dpc1-1-1 to linkset we123642:

ent-rte:dpc=1-1-1:lsn=we123642:rc=25

Adds route for dpc21-*-* to linkset we123642:

ent-rte:dpc=21-*-*:lsn=we123642:rc=25

Adds route for dpcn2410-100-14 to linkset we123624:

ent-rte:dpcn24=10-100-14:lsn=we123624:rc=10

Adds route for private dpcp-1-1-1 to linkset we123642.

ent-rte:dpc=p-1-1-1:lsn=we123642:rc=25

Adds route for private and spare dpcnps-4082-ge to linkset e1ntitun.

ent-rte:dpc=ps-4082-ge:lsn=e1ntitun:rc=10

Adds route for private dpcn24p-10-100-14 to linkset we123642.

ent-rte:dpcn24=p-10-100-1:lsn=we123642:rc=10

Adds route for private and spare dpcis-1-100-1 to linkset ue123642.

ent-rte:dpci=s-10-100-1:lsn=ue123642:rc=10

Dependencies

All the linksets for the route must be defined, using the **ent-ls** command, before this command can be entered.

The **force=yes** parameter must be specified if a linkset is assigned to a route that has no links in it.

The DPC must be in the Destination Point Code table.

The destination point code of a route must be a full point code (*ni-nc-ncm*), a cluster point code (*ni-nc-**), or a network point code (*ni-*-**).

If the specified destination address is a full point code address (*ni-nc-ncm*) and is a member of a provisioned cluster (*ni-nc-**), whether ordered routes can be assigned is determined by the destination address's NCAI (nested cluster allowed indicator). The **ncai=yes/no** parameter is set with the **ncai** parameter of the **ent/chg-dstn** commands.

- If the **ncai=no** parameter is specified, destinations comprising a cluster inherit their ordered routes from the cluster.
- If the **ncai=yes** parameter is specified, then the destination address is a member of a provisioned nested cluster where ordered routes can be assigned to a provisioned member.

If the specified destination address is a network cluster address (*ni-nc-**), the assignment of the specified ordered route attributes is determined by the setting of the destination address's NCAI (nested cluster allowed indicator). The **ncai=yes/no** parameter is set with the **ncai** parameter of the **ent/chg-dstn** commands.

- If the **ncai=no** parameter is specified, the collection of signaling point codes having the same network identifier (the **ni** parameter) and network cluster (the **nc** parameter) code are assigned the specified ordered route.

- If the **ncai=yes** parameter is specified, then the specified destination is a network cluster address where provisioned members's signaling point codes can be assigned the same or different ordered routes from the cluster.

If the **dpcn** parameter is specified, the format of the point code(s) must match the format that was assigned with the **chg-stpopts:npcfmti** parameter.

Only IPGW routes are allowed for private point codes.

The route destination's type must match the route's linkset adjacent point code or the route's linkset secondary adjacent point code type.

If the ITU Duplicate Point Code feature is on, the group code must match for all linksets that are not IPGWx linksets.

A maximum of 6 routes can be defined for each DPC.

The linkset must be defined with at least one link.

A maximum of 2 linksets can be assigned with same cost (the **rc** parameter) value.

A linkset can be entered only once as a route for each destination.

If the specified destination address is a network cluster address (*ni-nc-**), the linkset type used in the route must be consistent with cluster routing; that is, the linkset must be a B, C, or D linkset.

Combined linksets are not allowed for X.25 destinations. In other words, routes of equal cost destined for X.25 domains are not allowed.

If the route is assigned a destination that is marked for the X.25 domain, then that destination must be assigned to at least one X.25 destination and the linkset assigned to that route must have an adjacent point code assigned to the X.25 domain.

If the route is assigned a destination that is marked for the SS7 domain, then the linkset assigned to that route must have an adjacent point code assigned to the SS7 domain.

All routes with ANSI DPCs must use ANSI linkset APCs. A route with an ITU-I DPC can go over an ITU-N APC and an ITU-N DPC can go over an ITU-I APC.

If the link set name (the **lsn** parameter) references a link set that has the **ipgwapc=yes** parameter specified, the DPC must not be a cluster route.

Network routing is valid only if the NRT feature is on. The NRT feature is turned on with the **chg-feat** command.

When using network routing, if the DPC has a value of * in the *nc* field, the *ncm* field must also be * (for example, **dpc= 21-*-***).

The STP shall ensure that the specified destination address does not correspond to the STP's own DPC as specified in its self-identity.

The STP shall ensure that the specified destination address does not correspond to any of the STP's capability codes as specified in its self-identity.

Only a single route can be assigned to an APC or SAPC for an IPGWx linkset. The entered route must include the APC or SAPC's IPGWx linkset with the destination equal to the APC or SAPC.

Notes

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (**s-**) and the private and spare point code subtype prefix (**ps-**). All of the point code types support the private (internal) point code subtype prefix (**p-**).

Output

```

ent-rtx:dpc=1-1-1:lsn=we123642:rc=25
  rlgncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
  ENT-RTE: MASP A - COMPLTD
;

```

ent-rtx**Enter Exception Route**

Use this command to enter an exception route entry. An exception route is associated with an entry in the Routing table. When the Origin-Based MTP Routing feature is enabled and turned on, the least cost route available for an MSU to be routed to a Destination Point Code over a specified linkset is used. See the *Database Administration - Features* manual for more information about determining routes for linksets.

Up to 6 routes can be defined to a single entry in the Routing table. Up to 8000 routesets can be defined for an STP. This total must include at least one normal route (not an exception route). The remaining 7999 routesets can include any combination of normal and exception routes.

NOTE: A routeset is a collection of routes to a destination. Each routeset can have up to 6 routes, with 16 links on each route. An exception routeset is a collection of up to 6 exception routes that have the same DPC, exception class, and criteria.

Keyword: ent-rtx

Related Commands: chg-rtx, dlt-rtx, rtrv-rtx

Command Class: Database Administration

Parameters

:dpc= (mandatory)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: dpca

Range: p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001-005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006-255.

The point code 000-000-000 is not a valid point code.

:dpci= (mandatory)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: s-, p-, ps-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps-

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

:dpcn= (mandatory)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmit** flexible point code option. A group code must be specified when the ITUDUPPDC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:dpcn24= (mandatory)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:lsn= (mandatory)

Linkset Name. This parameter specifies the name of the linkset that is associated with the specified exception route.

Range: **ayyyyyyyyy**

1 alphabetic character followed by up to 9 alphanumeric characters.

:rc= (mandatory)

Relative Cost. This parameter is the relative cost associated with the specified exception route.

Range: **0-99**

:cic= (optional)

Starting Circuit Identification Code. This parameter is used alone or together with the **ecic** parameter as exception routing criteria for the specified exception route.

Range: **0-16383**

:ecic= (optional)

Ending Circuit Identification Code. This parameter, together with the **cic** parameter, defines the CIC range that is used as exception routing criteria for the specified exception route.

Range: **0-16383**

:force= (optional)

The **force=yes** parameter must be specified when the **ilsn** parameter value is the same as the **lsn** parameter value.

Range: **yes**

:ilsn= (optional)

Incoming Link Set Name. This parameter contains the name of the originating linkset. The parameter value is used as part of the exception routing criteria for the specified exception route.

Range: *ayyyyyyyyy*
1 alphabetic character followed by up to 9 alphanumeric characters.

:opc= (optional)

ANSI origination point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*). The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: **opca**

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:opci= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps-

zone—0-7

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

:opcn= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npfmit** flexible point code option. A group code must be specified when the ITUDUPPDC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:opc24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

msa—000-255

ssa—000–255

sp—000–255

:si= (optional)

Service Indicator. This parameter is used as part of the exception routing criteria for the specified exception route.

Range: 3-15

Example

ent-rtx:dpca=1-1-1:opca=2-3-3:lsn=lsset1:rc=30

ent-rtx:dpca=1-2-1:s1=3:lsn=lsset2:rc=10

ent-rtx:dpca=1-3-1:ilsn=lsset2:lsn=lsset3:rc=20

ent-rtx:dpca=2-100-1:ilsn=lsset2:lsn=lsset4:rc=10

ent-rtx:dpca=2-100-1:si=5:lsn=lsset5:rc=50

Dependencies

Only one of the **opc**, **ilns**, **cic**, or **si** parameters can be specified for a exception route entry.

For an ANSI origination point code that is defined using asterisks (**nnn-*.***), the value of the *network identifier* subfield (*nnn*) must be greater than 5.

If the **ecic** parameter is specified, the **cic** parameter must also be specified.

The **ecic** parameter value cannot be less than the **cic** parameter value.

The **opc** parameter value cannot be the same as the **dpc** parameter value.

The Origin-Based MTP Routing feature must be enabled and turned on before this command can be entered.

The **dpc** parameter must already exist in the Route table.

A destination point code cannot be specified if it is already being used as an adjacent point code.

The linkset name, as defined by the **ilsn** or **lsn** parameter, must exist.

An exception route entry cannot already exist with the same input parameter values, other than the relative cost..

For the **opc**, **ilsn**, CIC range (**cic** and **ecic** parameter values are not identical), and **si** criteria, only one pair of identical exception route conditions, differing only in **lsn** assignment, can exist for a given DPC. For exception route conditions with a single CIC, there can be only one exception route per CIC value per DPC per route cost.

A maximum of 6 exception routes can be associated with the specified DPC and criteria.

A maximum total of 8000 exception routes and normal routes can be defined for the EAGLE 5 ISS. At least one route must be a normal (not exception) route. The remaining routes (up to 7999) can be all normal routes, all exception routes, or any combination of normal and exception routes.

The network domain of the APC in the linkset specified by the **lsn** parameter must be the same network domain of the specified DPC or its alias.

The APC/SAPC type and group code in the linkset specified by the **lsn** parameter must match the **dpc** parameter.

The specified CIC/ECIC range must not overlap an existing range.

The **force=yes** parameter must be specified when the **ilsn** parameter value is the same as the **lsn** parameter value.

The **opcn** parameter must be in the same ITU-N group as the **dpcn** parameter.

The Group Code of the APCN in the **ilsn** parameter must be the same as the Group Code of the **dpcn** parameter.

ANSI network routing and cluster point codes as OPC exception route criteria are not allowed for ITU destinations.

ITU point codes as OPC exception route criteria are not allowed for ANSI Network and Cluster destination.

Output

```
ent-rtx:dpci=2-100-1:si=5:lsn=lset5:rc=50
stdcfg2b 06-05-19 18:20:11 EST EAGLE 35.0.0
ENT-RTX: MASP A - COMPLTD
```

ent-scr-aftpc

Enter Allowed Affected Point Code

Use this command to add a specific allowed affected point code (AFTPC) screening reference in the AFTPC entity set.

Keyword: ent-scr-aftpc

Related Commands: chg-scr-aftpc, dlt-scr-aftpc, rtrv-scr-aftpc

Command Class: Database Administration

Parameters

NOTE: See “Point Code Formats and Conversion” for a detailed description of point code formats, rules for specification, and examples.

:nsfi= (mandatory)

This parameter specifies the next screening category that is used in the gateway screening process. If specified, the parameter value must be **stop**.

Range: stop

stop — The gateway screening process ends and the message proceeds through normal routing.

:sr= (mandatory)

Screening reference. This parameter specifies the point code's unique screening reference name.

Range: ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

:ssn= (mandatory)

The subsystem number. An asterisk (*) indicates the full range of values from 1-255.

Range: 1-255 *

:actname= (optional)

The name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: ayyyyy

1 alphabetic character followed by up to 5 alphanumeric characters.

:area= (optional)

The ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from 000-255.

Range: 000-255 *

:id= (optional)

The ITU international ID. The parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7, ***

:msa= (optional)

The 24-bit ITU-national main signaling area (msa) value. It specifies the **msa** of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:nc= (optional)

The network cluster (nc) value. This parameter specifies one or more nc values for the network indicator (ni) and network cluster member (ncm) values specified in the **ni** and **ncm** parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:ncm= (optional)

The network cluster member (ncm) value. This parameter specifies one or more ncm values for the network indicator (ni) and network cluster (nc) values identified in the **ni** and **nc** parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 ***

:ni= (optional)

The network indicator (ni) value. This parameter specifies one or more ni values for the network cluster (nc) and network cluster member (ncm) values identified in the **nc** and **ncm** parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 ***

:npc= (optional)

The ITU national point code. An asterisk (*) indicates the full range of values from **00000–16383**.

Range: **00000-16383 ***

NOTE: Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see “Converting ITU National Point Code Formats” for information on converting the point code format.

Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see “Converting ITU National Point Code Formats” in Appendix A for information on converting the point code format.

:nsp= (optional)

The new 24-bit ITU national signaling point (sp). It specifies the new **sp** of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 ***

:nsr= (optional)

Next screening reference (nsr). The parameter indicates which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. If **nsfi=stop**, the **nsr** parameter cannot be specified.

Range: *yyyy*

1 alphabetic character followed by up to 3 alphanumeric characters

Default: Current value

:pcst= (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range: none, s

Default: none

:sp= (optional)

The 24-bit ITU national signaling point. This parameter specifies the signaling point (sp) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: 000-255 *

:ssa= (optional)

The 24-bit ITU national sub signaling area. This parameter specifies the sub signaling area (ssa) in the point code represented by the format *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: 000-255 *

:zone= (optional)

The ITU international zone. The parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0-7**.

Range: 0-7, *

Example

```
ent-scr-aftpc:sr=iec:ni=240:nc=010:ncm=010:ssn=012:nsfi=stop
ent-scr-
aftpc:sr=iec:ni=240:nc=010:ncm=010:ssn=012:nsfi=stop:actname=copy
ent-scr-aftpc:nsfi=stop:sr=af01:ssn=1:msa=255:ssa=255:sp=255
ent-scr-aftpc:sr=aft1:zone=1:area=2:id=3:nsfi=stop:ssn=1:pcst=s
```

Dependencies

CAUTION: Even though gateway screening is in the screen test mode, as defined by the parameters **gwsa=off** and **gwsn=on**, the gateway screening action in the stop action set specified by the **actname** parameter of the screen set *will* be performed at the end of the screening process.

A complete point code must be specified, and must be one, and only one of the four point code parameter combinations: **ni-nc-ncm**; **zone-area-id**; **msa-ssa-sp**; or **npc**.

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

The value of the **actname** parameter must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the **ACT NAME** field of the **rtrv-gws-actset** command output.

The character **c** is not a valid value for the **ni**, **nc**, **ncm**, **zone**, **area**, **id**, **msa**, **ssa**, **sp**, and **npc** parameters.

If **zone=*** is specified, **area=*** and **id=*** must be specified.

If **area=*** is specified, **id=*** must be specified.

If **msa=*** is specified, **ssa=*** and **sp=*** must be specified.

If **ssa=*** is specified, **sp=*** must be specified.

If specified, the **nsfi** parameter value must be **stop**.

If the **nsfi=stop** parameter is specified, the **nsr** parameter cannot be specified.

If the screening reference exists (**sr**), the new affected point code and subsystem number to be added cannot already exist in the AFTPC entity set.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The spare point code subtype prefix (**s-**) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** and **npcst** parameters cannot be specified for ANSI and ITU-N24 point codes.

The Gateway Screening Rules table can contain a maximum of 372,600 rules.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc** parameter is specified as an asterisk (**nc=***), the **ncm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **ncm** parameter is specified as a single value, or a range other than the full range of **000–255**, the **ni** and the **nc** parameters must be specified with a single value.

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range **000–255**.

Notes

A range of values is specified by separating the values that define the range by two ampersands (**&&**); for example, **:ni=025&&100** specifies all network indicators for ANSI point codes from **25** to **100**.

If the screening reference is valid, but does not exist, a new AFTPC screen is created.

If the screening reference exists, a new rule is added to the AFTPC screening table.

If asterisks or ranges are specified for the allowed AFTPCs, nothing that matches the specified range of AFTPCs can already exist in the AFTPC screen for the screening reference.

If the screen set reaches 100% capacity (indicated by the 100% Full message), the system allows subsequent entries. An error occurs, however, when downloading the screen set to an LIM. Ensure that screen sets do not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

An asterisk cannot not be specified for a parameter value in this command unless an asterisk was specified for the parameter value in the original **ent-scr-aftpc** command.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** parameter indicates whether the specified point code has no subtype prefix to has the spare point code prefix.

Output

```

ent-scr-aftpc:sr=iec:ni=240:nc=010:ncm=010:ssn=012:nsfi=stop
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
ENT-SCR-AFTPC: SCREEN SET AFFECTED - IEC 25% FULL
ENT-SCR-AFTPC: MASP A - COMPLTD
;

```

Legend

ENT-SCR-AFTPC—The command entered that caused this output. This is echoed to the printer as a reference.

SCREEN SET AFFECTED - IEC—Identifies the screen set that was affected by the command. The screen set name is provided.

25% FULL—Indicates the relative size of the screen set.

ent-scr-blkdpc**Enter Blocked DPC**

Use this command to add a specific blocked destination point code (BLKDPC) screening reference, and associated attributes, to the BLKDPC's table. The associated attributes are: destination point code, next screening function identifier, and next screening reference. The destination point codes listed on this screen are prohibited from sending SS7 messages to the network.

Keyword: ent-scr-blkdpc

Related Commands: chg-scr-blkdpc, dlt-scr-blkdpc, rtrv-scr-blkdpc

Command Class: Database Administration

Parameters

:nsfi= (mandatory)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range: cgpa, destfld, fail, isup, stop

cgpa— Allowed CGPA is the next screening category.

destfld— Allowed destination field (DESTFLD) is the next screening category.

fail— Discard the received message.

isup— ISUP message type (ISUP) is the next screening category.

stop— The gateway screening process ends and the message proceeds through normal routing.

:sr= (mandatory)

Screening reference. This parameter specifies the point code's unique screening reference name.

Range: ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

:actname= (optional)

The name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: ayyyyy

1 alphabetic character followed by up to 5 alphanumeric characters.

:area= (optional)

The ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000–255**.

Range: 000-255 *

:id= (optional)

The ITU international ID. The parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7, ***

:msa= (optional)

The 24-bit ITU-national main signaling area (msa) value. It specifies the **msa** of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 *, C**

:nc= (optional)

The network cluster (nc) value. This parameter specifies one or more nc values for the network indicator (ni) and network cluster member (ncm) values specified in the **ni** and **ncm** parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 *, C**

:ncm= (optional)

The network cluster member (ncm) value. This parameter specifies one or more ncm values for the network indicator (ni) and network cluster (nc) values identified in the **ni** and **nc** parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 *, C**

:ni= (optional)

The network indicator (ni) value. This parameter specifies one or more ni values for the network cluster (nc) and network cluster member (ncm) values identified in the **nc** and **ncm** parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 *, C**

:npc= (optional)

The ITU national point code. An asterisk (*) indicates the full range of values from **00000–16383**.

Range: **00000-16383 *, C**

NOTE: Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see “Converting ITU National Point Code Formats” for information on converting the point code format.

:nsr= (optional)

The next screening reference parameter indicates which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. This parameter is mandatory if **nsfi** is other than **stop** or **fail**. The **nsr** parameter cannot be specified if **nsfi** is **stop** or **fail**.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

Default: No value given

:pcst= (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (**s-**).

Range: **none, s**

Default: **none**

:sp= (optional)

The 24-bit ITU national signaling point. This parameter specifies the signaling point (sp) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255** *, C

:ssa= (optional)

The 24-bit ITU national sub signaling area. This parameter specifies the sub signaling area (ssa) in the point code represented by the format *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255** *, C

:zone= (optional)

The ITU international zone. The parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0-7**.

Range: **0-7** *, C

Example

ent-scr-blkdpc:sr=iec:ni=c:nc=c:ncm=c:nsfi=cgpa:nsr=wrds

ent-scr-blkdpc:sr=iec:ni=c:nc=c:ncm=c:nsfi=stop

ent-scr-blkdpc:sr=iec:ni=c:nc=c:ncm=c:nsfi=stop:actname=copy

ent-scr-blkdpc:sr=iec:ni=240:nc=:ncm=:nsfi=fail

ent-scr-blkdpc:sr=bdp1:zone=1:area=2:id=3:nsfi=fail:pcst=none

ent-scr-blkdpc:sr=bdp1:zone=2:area=2:id=3:nsfi=fail:pcst=s

ent-scr-blkdpc:sr=bdp1:npc=128:nsfi=fail:pcst=s

Dependencies



CAUTION: Even though gateway screening is in the screen test mode, as defined by the parameters **gwsa=off** and **gws=on**, the gateway screening action in the stop action set specified by the **actname** parameter of the screen set will be performed at the end of the screening process.

The Gateway Screening Rules table can contain a maximum of 362, 700 rules.

A complete point code must be specified, and must be one and only one of the four point code parameter combinations: **ni-nc-ncm**; **zone-area-id**; **msa-ssa-sp**; or **npc**, except in the special case of entering **c** for "continue."

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

At least one optional parameter must be specified.

When a blocked DPC screen is created, the first entry for the **ni-nc-ncm zone-area-id**, or **msa-ssa-sp** must be **c-c-c** or **npc** must be **c**. Subsequent entries can be specific point codes.

If the **actname** parameter is specified, the **nsfi-stop** parameter must be specified.

The value of the **actname** parameter must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the **ACTNAME** field of the **rtrv-gws-actset** command output.

If **area=*** is specified, **id=*** must be specified.

If **msa=*** is specified, **ssa=*** and **sp=*** must be specified.

If **msa=c** is specified, either the character **c** must also be specified for the **ssa** and **sp** parameters or the **ssa** and **sp** parameters must not be specified. If the **ssa** and **sp** parameters are not specified when **msa=c** is specified, the **ssa** and **sp** values default to the character **c** in the database.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc** parameter is specified as an asterisk (**ni=***), the **ncm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **ncm** parameter is specified as a single value, or a range other than the full range of **000–255**, the **ni** and the **nc** parameters must be specified with a single value.

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range **000–255**.

If **ni=c** is specified, either the character **c** must also be specified for the **nc** and **ncm** parameters or the **nc** and **ncm** parameters must not be specified. If the **nc** and **ncm** parameters are not specified when **ni=c** is specified, the **nc** and **ncm** values default to the character **c** in the database.

If the specified **ni-nc-ncm** or **zone-area-id** or **msa-ssa-sp** is not equal to **c-c-c** or **npc** is not equal to **c**, **nsfi=fail** must be specified and the **nsr** parameter cannot be specified.

If the **nsfi** parameter has a value other than **stop** or **fail**, the **nsr** parameter must be specified and must exist.

The next screening function identifier (**nsfi**) and the next screening reference (**nsr**) must point to an existing screen, or the **nsfi** must be equal to **stop** and the **nsr** must not be specified.

If the specified screening reference (**sr**) does not exist:

- The **ni-nc-ncm zone-area-id** , or **msa-ssa-sp** must equal **c-c-c** or **npc** must equal **c**.
- The **nsfi** parameter cannot be **fail** .
- A new BLKDPC table is created.

If the specified screening reference (**sr**) exists:

- The **ni-nc-ncm zone-area-id** , or **msa-ssa-sp** must equal **c-c-c** or **npc** must not equal **c**.
- The **nsfi** parameter must be **fail** .
- The **nsr** parameter cannot be specified.
- The blocked DPC, given by **ni-nc-ncm** (or **zone-area-id** or **npc**), to be added to the BLKDPC screening table for the blocked DPC screening reference cannot exist as defined or within an existing range of DPCs.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The **pcst** parameter cannot be specified with **c** for a blocked screen reference (**sr**).

The spare point code subtype prefix (**s-**) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** parameter cannot be specified for ANSI and ITU-N24 point codes.

If **ssa=*** is specified, **sp=*** must be specified.

If **zone=*** is specified, **area=*** and **id=*** must be specified.

If **zone=c** is specified, either the character **c** must also be specified for the **area** and **id** parameters or the **area** and **id** parameters must not be specified. If the **area** and **id** parameters are not specified when **zone=c** is specified, the **area** and **id** values default to the character **c** in the database.

Notes

When a blocked DPC screening reference is created, the first entry for a point code must be **c-c-c**, or **c** for the **npc** parameter. Subsequent entries must be specific point codes.

The character **c** is used in the blocked DPC screens to allow the screening process to continue for messages with point codes that do not match any point codes in the blocked DPC screens. When screening for a blocked DPC and the point code being screened does not match any of the point codes in the blocked DPC screens, the message is not rejected and the screening process continues.

There must be an entry in the blocked DPC screens to allow the screening process to continue. This entry consists of a screening reference, point code, **nsfi**, and **nsr**. The point code is in the form of **npc=c** or of subfields equal to **c-c-c**. When the character **c** is specified, the **nsfi** and **nsr** parameters must be specified.

If the character **c** is specified for the parameters **ni-nc-ncm** or **zone-area-id** or **msa-ssa-sp**, the character **c** is the only value that can be specified for all three parameters. No other values can be used. For example, a point code **c-c-255** is not allowed. The point code must be **c-c-c**. The asterisk (*) value cannot be used with the character **c** (for example, a point code **c-c-*** is not allowed).

When the point code does not match any entries in the blocked DPC screens, the screening process is directed to the screening reference with the point code **c-c-c** or **npc=c**. The **nsfi** and **nsr** in this entry are examined to determine the next step in the screening process.

If the current **ni-nc-ncm** or **zone-area-id** or **msa-ssa-sp** is equal to **c-c-c** or **npc=c**, only the **nsfi** and **nsr** parameters can be changed. Otherwise, only the blocked DPC can be changed.

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, **: ni=025&&100** specifies all network indicators for ANSI point codes from 25 to 100.

An asterisk cannot not be specified for a parameter value in this command unless an asterisk was specified for the parameter value in the original **ent-scr-blkdpc** command.

If the screen set reaches 100% capacity (indicated by the 100% Full message), the system allows subsequent entries. An error occurs, however, when downloading the screen set to an LIM. Ensure that screen sets do not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

```
ent-scr-blkdpc:sr=iec:ni=c:nc=c:ncm=c:nsfi=cgpa:nsr=wrds5
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
ENT-SCR-BLKDPC: SCREEN SET AFFECTED - IEC 25% FULL
ENT-SCR-BLKDPC: MASP A - COMPLTD
;
```

Legend

ENT-SCR-BLKDPC—The command entered that caused this output. This is echoed to the printer as a reference.

SCREEN SET AFFECTED - SS01—Identifies the screen set that was affected by the command. The screen set name is provided.

25% FULL—Indicates the relative size of the screen set.

ent-scr-blkopc**Enter Blocked OPC**

Use this command to add a specific blocked originating point code (BLKOPC) screening reference and associated attributes OPC, **nsfi**, and **nsr** to the BLKOPC entity set. Any messages received on the link assigned to this screening reference that match the attributes in this table are blocked from entering the network.

Keyword: **ent-scr-blkopc**

Related Commands: **chg-scr-blkopc**, **dlt-scr-blkopc**, **rtrv-scr-blkopc**

Command Class: Database Administration

Parameters

:nsfi= (mandatory)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range: **blkdpc**, **cgpa**, **dpc**, **fail**, **sio**, **stop**

blkdpc— Blocked DPC is the next screening category.

cgpa— Allowed CGPA is the next screening category.

dpc— Allowed DPC is the next screening category.

fail— Discard the received message.

sio— Allowed SIO is the next screening category.

stop— The gateway screening process ends and the message proceeds through normal routing.

:sr= (mandatory)

Screening reference. This parameter specifies the point code's unique screening reference name.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

:actname= (optional)

The name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: *ayyyyy*

1 alphabetic character followed by up to 5 alphanumeric characters.

:area= (optional)

The ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255** *, C

:id= (optional)

The ITU international ID. The parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7** *, C

:msa= (optional)

The 24-bit ITU-national main signaling area (msa) value. It specifies the **msa** of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255** *, C

:nc= (optional)

The network cluster (nc) value. This parameter specifies one or more nc values for the network indicator (ni) and network cluster member (ncm) values specified in the **ni** and **ncm** parameters. It

specifies the *nc* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 *, C, && (Allow intervals)**

:ncm= (optional)

The network cluster member (ncm) value. This parameter specifies one or more ncm values for the network indicator (ni) and network cluster (nc) values identified in the **ni** and **nc** parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 *, C, && (Allow intervals)**

:ni= (optional)

The network indicator (ni) value. This parameter specifies one or more ni values for the network cluster (nc) and network cluster member (ncm) values identified in the **nc** and **ncm** parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 *, C, && (Allow intervals)**

:npc= (optional)

The ITU national point code. An asterisk (*) indicates the full range of values from **00000–16383**.

Range: **00000-16383 *, C**

NOTE: Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see “Converting ITU National Point Code Formats” in Appendix A for information on converting the point code format.

:nsr= (optional)

Next screening reference (nsr). The parameter indicates which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. If **nsfi=stop**, the **nsr** parameter cannot be specified.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

Default: No value given

:pcst= (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range: **none, s**

Default: **none**

:sp= (optional)

The 24-bit ITU national signaling point. This parameter specifies the signaling point (sp) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 *, C**

:ssa= (optional)

The 24-bit ITU national sub signaling area. This parameter specifies the sub signaling area (ssa) in the point code represented by the format *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 *, C**

:zone= (optional)

The ITU international zone. The parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7 *, C**

Example

```

ent-scr-blkopc:sr=iec:ni=c:nc=c:ncm=c:nsfi=cgpa:nsr=wrds
ent-scr-blkopc:sr=iec:ni=c:nc=c:ncm=c:nsfi=stop
ent-scr-blkopc:sr=iec:ni=c:nc=c:ncm=c:nsfi=stop:actname=copy
ent-scr-blkopc:sr=iec:ni=240:nc=:ncm=:nsfi=fail
ent-scr-blkopc:sr=bo30:nsfi=stop:msa=c:ssa=c:sp=c
ent-scr-blkopc:sr=bo30:nsfi=fail:msa=1:ssa=2:sp=3
ent-scr-blkopc:sr=bo30:nsfi=fail:msa=3:ssa=:sp=*
ent-scr-blkopc:sr=bo30:nsfi=fail:msa=255:ssa=2:sp=3
ent-scr-blkopc:sr=bop1:zone=1:area=2:id=3:nsfi=fail:pcst=none
ent-scr-blkopc:sr=bop1:zone=2:area=2:id=3:nsfi=fail:pcst=s
ent-scr-blkopc:sr=bop1:npc=128:nsfi=fail:pcst=s

```

Dependencies

CAUTION: Even though gateway screening is in the screen test mode, as defined by the parameters **gwsa=off** and **gwsn=on**, the gateway screening action in the stop action set specified by the **actname** parameter of the screen set *will* be performed at the end of the screening process.

The Gateway Screening Rules table can contain a maximum of 362,700 rules.

A complete point code must be specified, and must be one and only one of the four point code parameter combinations: **ni-nc-ncm**; **zone-area-id**; **msa-ssa-sp**; or **npc**, except in the special case of entering **c** for "continue."

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

At least one optional parameter must be specified.

When a blocked OPC screen is created, the first entry for the **ni-nc-ncm zone-area-id**, or **msa-ssa-sp** must be **c-c-c** or **npc** must be **c**. Subsequent entries can be specific point codes.

If asterisks or ranges are specified for the blocked OPCs, nothing that matches the specified range of blocked OPCs can already exist in the BLKOPC screening table for the screening reference.

If the **actname** parameter is specified, the **nsfi-stop** parameter must be specified.

The value of the **actname** parameter must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the **ACT NAME** field of the **rtrv-gws-actset** command output.

If **area=*** is specified, **id=*** must be specified.

If **msa=*** is specified, **ssa=*** and **sp=*** must be specified.

If **msa=c** is specified, either the character **c** must also be specified for the **ssa** and **sp** parameters or the **ssa** and **sp** parameters must not be specified. If the **ssa** and **sp** parameters are not specified when **msa=c** is specified, the **ssa** and **sp** values default to the character **c** in the database.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc** parameter is specified as an asterisk (**nc=***), the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **ncm** parameter is specified as a single value, or a range other than the full range of **000–255**, the **ni** and the **nc** parameters must be specified with a single value.

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range **000–255**.

If **ni=c** is specified, either the character **c** must also be specified for the **nc** and **ncm** parameters or the **nc** and **ncm** parameters must not be specified. If the **nc** and **ncm** parameters are not specified when **ni=c** is specified, the **nc** and **ncm** values default to the character **c** in the database.

If the specified **ni-nc-ncm** or **zone-area-id** or **msa-ssa-sp** is not equal to **c-c-c** or **npc** is not equal to **c**, **nsfi=fail** must be specified and the **nsr** parameter cannot be specified.

If the **nsfi** parameter has a value other than **stop** or **fail**, the **nsr** parameter must be specified and must exist.

The next screening function identifier (**nsfi**) and the next screening reference (**nsr**) must point to an existing screen, or the **nsfi** must be equal to **stop** and the **nsr** must not be specified.

If the specified screening reference (**sr**) does not exist:

- The **ni-nc-ncm**, **zone-area-id**, or **msa-ssa-sp** must equal **c-c-c** or **npc** must equal **c**.
- The **nsfi** parameter cannot be **fail**.
- A new BLKDPC table is created.

If the specified screening reference (**sr**) exists:

- The **ni-nc-ncm**, **zone-area-id**, or **msa-ssa-sp** must equal **c-c-c** or **npc** must not equal **c**.
- The **nsfi** parameter must be **fail**.
- The **nsr** parameter cannot be specified.
- The blocked OPC, specified by **ni-nc-ncm**, **zone-area-id**, **msa-ssa-sp**, or **npc**, to be added to the BLKOPC screening table for the blocked OPC screening reference cannot exist as defined or within an existing range of OPCs.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The **pcst** parameter cannot be specified with **c** for a blocked screen reference (**sr**).

The spare point code subtype prefix (**s-**) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** parameter cannot be specified for ANSI and ITU-N24 point codes.

If **ssa=*** is specified, **sp=*** must be specified.

If **zone=*** is specified, **area=*** and **id=*** must be specified.

If **zone=c** is specified, either the character **c** must also be specified for the **area** and **id** parameters or the **area** and **id** parameters must not be specified. If the **area** and **id** parameters are not specified when **zone=c** is specified, the **area** and **id** values default to the character **c** in the database.

Notes

When a blocked DPC screening reference is created, the first entry for a point code must be **c-c-c**, or **c** for the **npc** parameter. Subsequent entries must be specific point codes.

The character **c** is used in the blocked DPC screens to allow the screening process to continue for messages with point codes that do not match any point codes in the blocked DPC screens. When screening for a blocked DPC and the point code being screened does not match any of the point codes in the blocked DPC screens, the message is not rejected and the screening process continues.

There must be an entry in the blocked DPC screens to allow the screening process to continue. This entry consists of a screening reference, point code, **nsfi**, and **nsr**. The point code is in the form of **npc=c** or subfields equal to **c-c-c**. When the character **c** is specified, the **nsfi** and **nsr** parameters must be specified.

If the character **c** is specified for the parameters **ni-nc-ncm** or **zone-area-id** or **msa-ssa-sp**, the character **c** is the only value that can be specified for all three parameters. No other values can be used. For example, a point code **c-c-255** is not allowed. The point code must be **c-c-c**. The asterisk (*) value cannot be used with the character **c** (for example, a point code **c-c-*** is not allowed).

When the point code does not match any entries in the blocked DPC screens, the screening process is directed to the screening reference with the point code **c-c-c** or **npc=c**. The **nsfi** and **nsr** in this entry are examined to determine the next step in the screening process.

If the current **ni-nc-ncm** or **zone-area-id** or **msa-ssa-sp** is equal to **c-c-c** or **npc=c**, only the **nsfi** and **nsr** can be changed. Otherwise, only the blocked DPC can be changed.

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, **: ni=025&&100** specifies all network indicators for ANSI point codes from **25** to **100**.

An asterisk cannot not be specified for a parameter value in this command unless an asterisk was specified for the parameter value in the original **ent-scr-blkopc** command.

If the screen set reaches 100% capacity (indicated by the 100% Full message), the system allows subsequent entries. An error occurs, however, when downloading the screen set to an LIM. Ensure that screen sets do not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

```
ent-scr-blkopc: sr=iec: ni=c: nc=c: ncm=c: nsfi=cgpa: nsr=wrds
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
ENT-SCR-BLKOPC: SCREEN SET AFFECTED - IEC 25% FULL
ENT-SCR-BLKOPC: MASP A - COMPLTD
;
```

Legend

ENT-SCR-BLKOPC—The command entered that caused this output. This is echoed to the printer as a reference.

SCREEN SET AFFECTED - IEC—Identifies the screen set that was affected by the command. The screen set name is provided.

25% FULL—Indicates the relative size of the screen set.

ent-scr-cdpa

Enter Allowed Called Party Address

Use this command to add a specific allowed called party address (CDPA) screening reference in the CDPA entity set.

Keyword: **ent-scr-cdpa**

Related Commands: **chg-scr-cdpa**, **dlt-scr-cdpa**, **rtrv-scr-cdpa**

Command Class: Database Administration

Parameters

:nsfi= (mandatory)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range: **aftpc, stop**

aftpc — Allowed affected point code is the next screening category.

stop — The gateway screening process ends and the message proceeds through normal routing.

:sr= (mandatory)

Screening reference. This parameter specifies the point code's unique screening reference name.

:ssn= (mandatory)

The subsystem number. An asterisk (*) indicates the full range of values from **1-255**.

Range: **1-255 ***

:actname= (optional)

The name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: **ayyyyy**

1 alphabetic character followed by up to 5 alphanumeric characters.

:area= (optional)

The ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:id= (optional)

The ITU international ID. The parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0-7**.

Range: **0-7, ***

:msa= (optional)

The 24-bit ITU-national main signaling area (msa) value. It specifies the **msa** of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:nc= (optional)

The network cluster (nc) value. This parameter specifies one or more nc values for the network indicator (ni) and network cluster member (ncm) values specified in the **ni** and **ncm** parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:ncm= (optional)

The network cluster member (ncm) value. This parameter specifies one or more ncm values for the network indicator (ni) and network cluster (nc) values identified in the **ni** and **nc** parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000-255**.

Range: **0-255 ***

:ni= (optional)

The network indicator (ni) value. This parameter specifies one or more ni values for the network cluster (nc) and network cluster member (ncm) values identified in the **nc** and **ncm** parameters. It

specifies the *ni* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 ***

:npc= (optional)

The ITU national point code. An asterisk (*) indicates the full range of values from **00000–16383**.

Range: **00000-16383 ***

NOTE: Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see “Converting ITU National Point Code Formats” in Appendix A for information on converting the point code format.

:nsr= (optional)

Next screening reference (nsr). The parameter indicates which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. If **nsfi=stop**, the **nsr** parameter cannot be specified.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

Default: No value given

:pcst= (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range: **none, s**

Default: **none**

:scmgfid= (optional)

The SCMG Format ID. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **1–255**. The following SCCP message types are screened against the Allowed CDPA table and all others are passed: UDT, UDTS, XUDT, XUDTS.

Range: **1-255 ***

:sp= (optional)

The 24-bit ITU national signaling point. This parameter specifies the signaling point (sp) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:ssa= (optional)

The 24-bit ITU national sub signaling area. This parameter specifies the sub signaling area (ssa) in the point code represented by the format *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:zone= (optional)

The ITU international zone. The parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7, ***

Example

ent-scr-

cdpa: sr=iec: ni=240: nc=010: ncm=: ss=224: nsfi=aftp: nsr=wr5

ent-scr-

cdpa: sr=iec: ni=240: nc=010: ncm=: ss=224: nsfi=stop: actname=copy

ent-scr-

cdpa: sr=cdp1: zone=1: area=2: id=3: ss=1: nsfi=stop: scmgfid=1: pcst=s

Dependencies



CAUTION: Even though gateway screening is in the screen test mode, as defined by the parameters **gwsa=off** and **gws=on**, the gateway screening action in the stop action set specified by the **actname** parameter of the screen set *will* be performed at the end of the screening process.

The Gateway Screening Rules table can contain a maximum of 372,600 rules.

A complete point code must be specified, and must be one and only one of the four point code parameter combinations: **ni-nc-ncm**; **zone-area-id**; **msa-ssa-sp**; or **npc**, except in the special case of entering **c** for "continue."

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

At least one optional parameter must be specified.

The new CDPA entry to be added cannot match any specific, range, or asterisk entry already existing in the specified screening table.

The character **c** is not a valid value for the **ni**, **nc**, **ncm**, **zone**, **area**, **id**, **msa**, **ssa**, **sp**, and **npc** parameters.

The value of the **actname** parameter must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the **ACT NAME** field of the **rttrv-gws-actset** command output.

When the **actname** parameter is specified, the **nsfi=stop** parameter must be specified.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc** parameter is specified as an asterisk (**nc=***), the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **ncm** parameter is specified as a single value, or a range other than the full range of **000-255**, the **ni** and the **nc** parameters must be specified with a single value.

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range **000-255**.

If the **nnc** parameter is specified as a range, the **nncm** parameter must be specified as an asterisk or as the full range **000-255**.

When **nsfi=aftpc** is specified, the **ssn=1** parameter must be specified.

When **nsfi** is a value other than **stop**, the **nsr** parameter must be specified.

When **nsfi=stop** is specified, the **nsr** parameter cannot be specified.

When **ssn=1** is specified, the **scmgfid** parameter must be specified.

When **ssn** is not **1**, the **scmgfid** parameter cannot be specified.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The spare point code subtype prefix (**s-**) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** parameter cannot be specified for ANSI and ITU-N24 point codes.

Notes

If the screening reference is valid, but does not exist, a new CDPA screen is created.

If the screening reference exists, a new rule is added to the CDPA screening table.

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, **:ni=025&&100** specifies all network indicators for ANSI point codes from 25 to 100.

If the screen set reaches 100% capacity (indicated by the 100% Full message), the system will allow subsequent entries. An error will occur, however, when downloading the screen set to a LIM. Screen sets should not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

An asterisk cannot not be specified for a parameter value in this command unless an asterisk was specified for the parameter value in the original **ent-scr-cdpa** command.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

```
ent-scr-
cdpa: sr=iec: ni=240: nc=010: ncm=: ssn=224: nsfi=aftpc: nsr=wrds
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
ENT-SCR-CDPA: SCREEN SET AFFECTED - IEC 25% FULL
ENT-SCR-CDPA: MASP A - COMPLTD
;
```

Legend

ENT-SCR-CDPA—The command entered that caused this output. This is echoed to the printer as a reference.

SCREEN SET AFFECTED - IEC—Identifies the screen set that was affected by the command. The screen set name is provided.

25% FULL—Indicates the relative size of the screen set.

ent-scr-cgpa

Enter Allowed Calling Party Address

Use this command to add a specific allowed calling party address (CGPA) screening reference in the CGPA entity set.

Keyword: **ent-scr-cgpa**

Related Commands: **chg-scr-cgpa**, **dlt-scr-cgpa**, **rtrv-scr-cgpa**

Command Class: Database Administration

Parameters

:nsfi= (mandatory)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range: **cdpa**, **stop**, **tt**

cdpa— Allowed called party address is the next screening category.

stop— The gateway screening process ends and the message proceeds through normal routing.

tt— Allowed translation type is the next screening category.

:ri= (mandatory)

The routing indicator provides routing instructions to the receiving signaling point. In gateway screening, messages may be screened based on the value of the routing indicator.

Range: **dpc**, **gt**, *****

dpc— Allow a called party address with a routing indicator value of “DPC/SSN.”

gt— Screening stops and gateway screening is bypassed as a forced pass.
*****— A full range of values.

:sr= (mandatory)

Screening reference. This parameter specifies the point code's unique screening reference name.

Range: *ayyy*

1 alphabetic character followed by up to 3 optional alphanumeric characters

:ssn= (mandatory)

The subsystem number. An asterisk (*) indicates the full range of values from **1-255**.

Range: **1-255 ***

:actname= (optional)

The name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: *ayyyyy*

1 alphabetic character followed by up to 5 alphanumeric characters.

:area= (optional)

The ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:id= (optional)

The ITU international ID. The parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0-7**.

Range: **0-7 ***

:msa= (optional)

The 24-bit ITU-national main signaling area (msa) value. It specifies the **msa** of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:nc= (optional)

The network cluster (*nc*) value. This parameter specifies one or more *nc* values for the network indicator (*ni*) and network cluster member (*ncm*) values specified in the **ni** and **ncm** parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:ncm= (optional)

The network cluster member (*ncm*) value. This parameter specifies one or more *ncm* values for the network indicator (*ni*) and network cluster (*nc*) values identified in the **ni** and **nc** parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000-255**.

Range: **0-255 ***

:ni= (optional)

The network indicator (*ni*) value. This parameter specifies one or more *ni* values for the network cluster (*nc*) and network cluster member (*ncm*) values identified in the **nc** and **ncm** parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000-255**.

Range: **0-255 ***

:npc= (optional)

The ITU national point code. An asterisk (*) indicates the full range of values from **00000-16383**.

Range: 00000-16383 *

NOTE: Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see “Converting ITU National Point Code Formats” in Appendix A for information on converting the point code format.

:nsr= (optional)

Next screening reference (*nsr*). The parameter indicates which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. If **nsfi=stop**, the **nsr** parameter cannot be specified.

Range: ayyy
1 alphabetic character followed by up to 3 alphanumeric characters

Default: No value given.

:pcst= (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (**s-**).

Range: none, s

Default: none

:sccpmt= (optional)

The SCCP message type. An asterisk (*) indicates all possible allowed values.

Range: 9, * 10, * 17, * 18 *

9—UDT

10—UDTS

17—XUDT

18—XUDTS

Default: *

:sp= (optional)

The 24-bit ITU national signaling point. This parameter specifies the signaling point (*sp*) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from 000-255.

Range: 000-255 *

:ssa= (optional)

The 24-bit ITU national sub signaling area. This parameter specifies the sub signaling area (*ssa*) in the point code represented by the format *msa-ssa-sp*. An asterisk (*) indicates the full range of values from 000-255.

Range: 000-255 *

:zone= (optional)

The ITU international zone. The parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from 0-7.

Range: 0-7, *

Example

```
ent-scr-
cgpa:sr=iec:ni=240:nc=010:ncm=*:ssn=224:nsfi=aftpc:nsr=wrds:ri=dpc
```

```
ent-scr-
cgpa:sr=iec:ni=240:nc=010:ncm=*:ssn=224:nsfi=stop:ri=dpc:actname=
copy
```

```
ent-scr-
cgpa:sr=cdp1:ni=5:nc=5:ncm=5:ssn=1:ri=dpc:sccpmt=9:nsfi=sdpa:nsr=
cdp1
ent-scr-
cgpa:sr=cgpa:zone=1:area=2:id=3:ssn=1:sccpmt=9:ri=*:nsfi=stop:pcst=s
```

Dependencies



CAUTION: Even though gateway screening is in the screen test mode, as defined by the parameters **gwsa=off** and **gwsn=on**, the gateway screening action in the stop action set specified by the **actname** parameter of the screen set *will* be performed at the end of the screening process.

The Gateway Screening Rules table can contain a maximum of 372,600 rules.

A complete point code must be specified, and must be one, and only one of the four point code parameter combinations: **ni-nc-ncm**; **zone-area-id**; **msa-ssa-sp**; or **npc**.

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

The new CGPA point code, **ri**, **sccpmt**, and subsystem number (**ssn**) to be added can not already exist in the CGPA entity set.

The character **c** is not a valid value for the **ni**, **nc**, **ncm**, **zone**, **area**, **id**, **msa**, **ssa**, **sp**, and **npc** parameters.

The value of the **actname** parameter must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the *ACT NAME* field of the **rtrv-gws-actset** command output.

When the **actname** parameter is specified, the **nsfi=stop** parameter must be specified.

If **area=*** is specified, **id=*** must be specified.

If **msa=*** is specified, **ssa=*** and **sp=*** must be specified.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc** parameter is specified as an asterisk (**nc=***), the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **ncm** parameter is specified as a single value, or a range other than the full range of **000-255**, the **ni** and the **nc** parameters must be specified with a single value.

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range **000-255**.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The spare point code subtype prefix (**s-**) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** parameter cannot be specified for ANSI and ITU-N24 point codes.

The screen referenced by **nsfi** and **nsr** must already exist.

When **nsfi** is a value other than **stop**, the **nsr** parameter must be specified.

When **nsfi=stop** is specified, the **nsr** parameter cannot be specified.

The **nsfi=tt** parameter can be specified only if the **ri=gt** parameter or the **ri=*** parameter is specified.

The **nsfi=cdpa** parameter can be specified only if the **ri=dpc** parameter or the **ri=*** parameter is specified.

If **ssa=*** is specified, **sp=*** must be specified.

If **zone=*** is specified, **area=*** and **id=*** must be specified.

Notes

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, **:ni=025&&100** specifies all network indicators for ANSI point codes from 25 to 100.

If the screening reference is valid, but does not exist, a new CGPA screening table is created.

If the screening reference exists, a new rule is added to the CGPA screening table. Only one rule may exist for a given **ni-nc-ncm/ssn/ri/sccpmt** (or **zone-area-id** or **npc**) combination. This implies that for a given **ni-nc-ncm/ssn/ri/sccpmt** (or **zone-area-id** or **npc**), only one value of **ri** may be specified. The **ri** for a given combination can be **dpc**, **gt**, or *****, but not **dpc** and **gt** independently.

If the screen set reaches 100% capacity (indicated by the 100% Full message), the system will allow subsequent entries. An error will occur, however, when downloading the screen set to a LIM. Screen sets should not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

An asterisk cannot not be specified for a parameter value in this command unless an asterisk was specified for the parameter value in the original **ent-scr-cgpa** command.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

```
ent -scr -
cgpa: sr=iec: ni=240: nc=010: ncm=: ssn=224: nsfi=aftpc: nsr= wrd5: ri=dp
c
    rlgncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
    ENT-SCR-CGPA: SCREEN SET AFFECTED - IEC 25% FULL
    ENT-SCR-CGPA: MASP A - COMPLTD
;
```

Legend

ENT-SCR-CGPA—The command entered that caused this output. This is echoed to the printer as a reference.

SCREEN SET AFFECTED - IEC—Identifies the screen set that was affected by the command. The screen set name is provided.

25% FULL—Indicates the relative size of the screen set.

ent-scr-destfld

Add an Allowed DESTFLD

Use this command to add an allowed affected destination field (DESTFLD) screening reference and associated attributes (destination point code, next screening function identifier, and next screening reference) to the allowed DESTFLD entity set. One or more point codes can be associated with the allowed DESTFLD screening reference. MTP Network Management messages regarding the DESTFLDs listed in this entity set are accepted from another network.

Keyword: **ent-scr-destfld**

Related Commands: **chg-scr-destfld**, **dlt-scr-destfld**, **rtrv-scr-destfld**

Command Class: Database Administration

Parameters

:nsfi= (mandatory)

This parameter indicates that the gateway screening process should stop. If this parameter is specified for this command, it must have the value of **stop**.

Range: **stop**

stop— The gateway screening process ends and the message proceeds through normal routing.

:sr= (mandatory)

Screening reference. This parameter specifies the point code's unique screening reference name.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters.

:actname= (optional)

The name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: *ayyyyy*

1 alphabetic character followed by up to 5 alphanumeric characters.

:area= (optional)

The ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:id= (optional)

The ITU international ID. The parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7 ***

:msa= (optional)

The 24-bit ITU-national main signaling area (*msa*) value. It specifies the **msa** of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:nc= (optional)

The network cluster (*nc*) value. This parameter specifies one or more *nc* values for the network indicator (*ni*) and network cluster member (*ncm*) values specified in the **ni** and **ncm** parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:ncm= (optional)

The network cluster member (*ncm*) value. This parameter specifies one or more *ncm* values for the network indicator (*ni*) and network cluster (*nc*) values identified in the **ni** and **nc** parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 ***

:ni= (optional)

The network indicator (*ni*) value. This parameter specifies one or more *ni* values for the network cluster (*nc*) and network cluster member (*ncm*) values identified in the **nc** and **ncm** parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 ***

:npc= (optional)

The ITU national point code. An asterisk (*) indicates the full range of values from **00000–16383**.

Range: **00000-16383 ***

NOTE: Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see “Converting ITU National Point Code Formats” in Appendix A for information on converting the point code format.

:nsr= (optional)

Next screening reference (*nsr*). The parameter indicates which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. If **nsfi=stop**, the **nsr** parameter cannot be specified.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

Default: No value given

:pcst= (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (**s-**).

Range: **none, s**

Default: **none**

:sp= (optional)

The 24-bit ITU national signaling point. This parameter specifies the signaling point (*sp*) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:ssa= (optional)

The 24-bit ITU national sub signaling area. This parameter specifies the sub signaling area (*ssa*) in the point code represented by the format *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:zone= (optional)

The ITU international zone. The parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7, ***

Example

ent-scr-destfld:sr=iec:ni=240:nc=010:ncm=010-012:nsfi=stop

ent-scr-destfld:sr=iec1:ni=1:nc=1:ncm=1:nsfi=stop:actname=copy

ent-scr-destfld:sr=dst1:zone=1:area=2:id=3:nsfi=stop:pcst=s

Dependencies



CAUTION: Even though gateway screening is in the screen test mode, as defined by the parameters *gwsa=off* and *gwsn=on*, the gateway screening action in the stop action set specified by the *actname* parameter of the screen set *will* be performed at the end of the screening process.

The Gateway Screening Rules table can contain a maximum of 362,700 rules.

The destination point code specified by **ni-nc-ncm**, **zone-area-id**, **msa-ssa-sp**, or the **npc** parameter must not already exist in the screening reference or within an existing range of DPCs.

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

The **actname** parameter can be specified only when the **nsfi=stop** parameter is specified.

The value of the **actname** parameter must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the *ACT NAME* field of the **rtrv-gws-actset** command output.

If **area=*** is specified, **id=*** must be specified.

If **msa=*** is specified, **ssa=*** and **sp=*** must be specified.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc** parameter is specified as an asterisk (**nc=***), the **ncm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **ncm** parameter is specified as a single value, or a range other than the full range of **000–255**, the **ni** and the **nc** parameters must be specified with a single value.

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range **000–255**.

The **nsfi=stop** parameter must be specified in the command.

The **nsr** parameter cannot be specified for this command, because **nsfi=stop** must be specified. The **nsr** parameter cannot be specified when **nsfi=stop**.

If **ssa=*** is specified, **sp=*** must be specified.

If **zone=*** is specified, **area=*** and **id=*** must be specified.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The spare point code subtype prefix (**s-**) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** and **npcst** parameters cannot be specified for ANSI and ITU-N24 point codes.

Notes

A range of values is specified by separating the values that define the range by two ampersands (**&&**); for example, **:ni=025&&100** specifies all network indicators for ANSI point codes from **25** to **100**.

An asterisk cannot not be specified for a parameter value in this command unless an asterisk was specified for the parameter value in the original **ent-scr-destfld** command.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

ent-scr-destfld:sr=iec:ni=240:nc=010:ncm=010-012:nsfi=stop

```
rlghncxa03w 04-02-13 11:49:47 EST EAGLE 31.3.0
ENT-SCR-DESTFLD: SCREEN SET AFFECTED - IEC 25% FULL
ENT-SCR-DESTFLD: MASP A - COMPLTD
```

;

ent-scr-dpc

Enter Allowed DPC

Use this command to add an allowed DPC screening reference and associated attributes (destination point code, next screening function identifier, next screening function reference) to the allowed DPC

entity set. One or more DPCs may be associated with the allowed DPC screening reference. The DPCs listed in this entity set are allowed to receive SS7 messages from another network.

Keyword: **ent-scr-dpc**

Related Commands: **chg-scr-dpc, dlt-scr-dpc, rtrv-scr-dpc**

Command Class: Database Administration

Parameters

:nsfi= (mandatory)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range: **blkdpc, cgpa, destfld, isup, stop**

blkdpc— Blocked DPC is the next screening category.

cgpa— Allowed CGPA is the next screening category.

destfld— Allowed destination field (DESTFLD) is the next screening category.

isup— ISUP message type (ISUP) is the next screening category.

stop— The gateway screening process ends and the message proceeds through normal routing.

:sr= (mandatory)

The allowed DPC screening reference name. This parameter identifies a set of one or more allowed destination point codes.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters.

:actname= (optional)

The name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: *ayyyyy*

1 alphabetic character followed by up to 5 alphanumeric characters.

:area= (optional)

The ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:id= (optional)

The ITU international ID. The parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0-7**.

Range: **0-7, ***

:msa= (optional)

The 24-bit ITU-national main signaling area (msa) value. It specifies the **msa** of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:nc= (optional)

The network cluster (*nc*) value. This parameter specifies one or more *nc* values for the network indicator (*ni*) and network cluster member (*ncm*) values specified in the **ni** and **ncm** parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:ncm= (optional)

The network cluster member (*ncm*) value. This parameter specifies one or more *ncm* values for the network indicator (*ni*) and network cluster (*nc*) values identified in the **ni** and **nc** parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 ***

:ni= (optional)

The network indicator (*ni*) value. This parameter specifies one or more *ni* values for the network cluster (*nc*) and network cluster member (*ncm*) values identified in the **nc** and **ncm** parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 ***

:npc= (optional)

The ITU national point code. An asterisk (*) indicates the full range of values from **00000–16383**. Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see "Converting ITU National Point Code Formats" for information on converting the point code format.

Range: **00000-16383 ***

:nsr= (optional)

Next screening reference (*nsr*). The parameter indicates which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. If **nsfi=stop**, the **nsr** parameter cannot be specified.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

Default: No value given

:pcst= (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (**s-**).

Range: **none, s**

Default: **none**

:sp= (optional)

The 24-bit ITU national signaling point. This parameter specifies the signaling point (*sp*) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:ssa= (optional)

The 24-bit ITU national sub signaling area. This parameter specifies the sub signaling area (*ssa*) in the point code represented by the format *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:zone= (optional)

The ITU international zone. The parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7, *, C**

Example

ent-scr-dpc:sr=iec:ni=240:nc=010:ncm=010:nsfi=stop:actname=cncf

ent-scr-dpc:sr=iec:ni=240:nc=010:ncm=010:nsfi=blkdpc:nsr=bdp1

```
ent-scr-dpc:sr=dpc1:zone=1:area=2:id=3:nsfi=fail:pcst=none
ent-scr-dpc:sr=dpc1:zone=2:area=2:id=3:nsfi=fail:pcst=s
ent-scr-dpc:sr=dpc1:npc=128:nsfi=fail:pcst=s
```

Dependencies



CAUTION: Even though gateway screening is in the screen test mode, as defined by the parameters **gwsa=off** and **gws=on**, the gateway screening action in the stop action set specified by the **actname** parameter of the screen set *will* be performed at the end of the screening process.

The Gateway Screening Rules table can contain a maximum of 362,700 rules.

The destination point code specified by **ni-nc-ncm**, **zone-area-id**, **msa-ssa-sp**, or the **npc** parameter must not already exist in the screening reference or within an existing range of DPCs.

The **actname** parameter can be specified only when the **nsfi=stop** parameter is specified.

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

The value of the **actname** parameter must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the *ACT NAME* field of the **rtrv-gws-actset** command output.

If **area=*** is specified, **id=*** must be specified.

If **msa=*** is specified, **ssa=*** and **sp=*** must be specified.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc** parameter is specified as an asterisk (**nc=***), the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **ncm** parameter is specified as a single value, or a range other than the full range of **000-255**, the **ni** and the **nc** parameters must be specified with a single value.

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range **000-255**.

The next screening function identifier (**nsfi**) and the next screening reference (**nsr**) must point to an existing screen, or the **nsfi** must be equal to **stop** and the **nsr** must not be specified.

The **nsr** parameter must be specified if **nsfi** is not equal to **stop**.

If **ssa=*** is specified, **sp=*** must be specified.

If **zone=*** is specified, **area=*** and **id=*** must be specified.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The spare point code subtype prefix (**s-**) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** parameter cannot be specified for ANSI and ITU-N24 point codes.

Notes

When a DPC screening reference is created, the first entry for a point code must be **c-c-c**, or **c** for the **npc** parameter. Subsequent entries must be specific point codes.

The character **c** is used in the DPC screens to allow the screening process to continue for messages with point codes that do not match any point codes in the DPC screens. When screening for a DPC

and the point code being screened does not match any of the point codes in the DPC screens, the message is not rejected and the screening process continues.

There must be an entry in the DPC screens to allow the screening process to continue. This entry consists of a screening reference, point code, **nsfi**, and **nsr**. The point code is in the form of **npc=c** or subfields equal to **c-c-c**. When the character **c** is specified, the **nsfi** and **nsr** parameters must be specified.

If the character **c** is specified for the parameters **ni-nc-ncm** or **zone-area-id** or **msa-ssa-sp**, the character **c** is the only value that can be specified for all three parameters. No other values can be used. For example, a point code **c-c-255** is not allowed. The point code must be **c-c-c**. The asterisk (*) value cannot be used with the character **c** (for example, a point code **c-c-*** is not allowed).

When the point code does not match any entries in the blocked DPC screens, the screening process is directed to the screening reference with the point code **c-c-c** or **npc=c**. The **nsfi** and **nsr** in this entry are examined to determine the next step in the screening process.

If the current **ni-nc-ncm** or **zone-area-id** or **msa-ssa-sp** is equal to **c-c-c** or **npc=c**, only the **nsfi** and **nsr** can be changed. Otherwise, only the blocked DPC can be changed.

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, **: ni=025&&100** specifies all network indicators for ANSI point codes from 25 to 100.

An asterisk cannot not be specified for a parameter value in this command unless an asterisk was specified for the parameter value in the original **ent-scr-dpc** command.

If the screen set reaches 100% capacity (indicated by the 100% Full message), the system allows subsequent entries. An error occurs, however, when downloading the screen set to an LIM. Ensure that screen sets do not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

```
ent-scr-dpc:sr=iec:ni=240:nc=010:ncm=010:nsfi=stop:actname=cncf
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
ENT-SCR-DPC: SCREEN SET AFFECTED - IEC 25% FULL
ENT-SCR-DPC: MASP A - COMPLTD
;
```

Legend

ENT-SCR-DPC—Command entered that caused this output. This is echoed to the printer.

SCREEN SET AFFECTED - IEC—Identifies the screen set that was affected by the command. The screen set name is provided.

25% FULL—Indicates the relative size of the screen set.

ent-scr-isup

Enter Allowed ISUP Screening Reference

Use this command to add an allowed ISUP or TUP screening reference to the Allowed ISUP entity set. One or more message types can be associated with the allowed ISUP screening reference. The ISUP message types listed in this entity set are accepted from another network.

Keyword: ent-scr-isup

Related Commands: chg-scr-isup, dlt-scr-isup, rtrv-scr-isup

Command Class: Database Administration

Parameters

:isupmt/tupmt= (mandatory)

ISUP message type or TUP message type. A single value or range of values can be entered. An asterisk (*) indicates the entire range of **000-255**. TUP is not valid for SEAS.

Range: 000-255 *

:sr= (mandatory)

The the individual ISUP screening reference to which this rule will be added. If the specified **sr** does not exist, it will be created

Range: ayyy

1 alphabetic character followed by up to 3 alphanumeric characters.

:actname= (optional)

The name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: ayyyyy

1 alphabetic character followed by up to 5 alphanumeric characters.

:nsfi= (optional)

This parameter specifies the next screening category that is used in the gateway screening process. If specified, the parameter value must be **stop**.

Range: stop

stop — The gateway screening process ends and the message proceeds through normal routing.

:nsr= (optional)

Next screening reference. The parameter indicates which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. If **nsfi=stop**, the **nsr** parameter cannot be specified.

Range: ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Default: No value given

Example

ent-scr-isup:sr=iec:isupmt=1:nsfi=stop

ent-scr-isup:sr=iec:isupmt=9:nsfi=stop

ent-scr-isup:sr=ibig:isupmt=1&&128:nsfi=stop

ent-scr-isup:sr=iall:isupmt=*:nsfi=stop

ent-scr-isup:tupmt=20:sr=tu01:nsfi=stop

Dependencies

If the **actname** parameter is specified, the **nsfi-stop** parameter must be specified.

The value of the **actname** parameter must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the *ACT NAME* field of the **rtrv-gws-actset** command output.

The specified **isupmt** parameter or **tupmt** parameter value must not already exist in the specified **sr**.

If the **nsfi** parameter is specified, the value must be **stop**.

The **nsr** parameter cannot be specified if the **nsfi=stop** parameter is specified.

Notes

A range of values can be specified for the **isupmt** parameter or **tupmt** parameter, by separating the values that define the range by two ampersands (&&); for example, **:isupmt=025&&100** specifies all ISUP message types from **25** to **100**. The value to the left of the && must be less than the value to the right of the && in the range.

An asterisk cannot not be specified for a parameter value in this command unless an asterisk was specified for the parameter value in the original **ent-scr-isup** command.

TUP does not apply to SEAS. ISUP Message Type is the default.

To use TUP message type screening, an SIO screening reference with **si=04** (TUP) must exist in the SIO table. The TUP screening reference specifies the SIO screening reference as the next screening reference parameter (**nsr**) value.

To use ISUP message type screening, an SIO screening reference with **si=05** (ISUP) must exist in the SIO table. The ISUP screening reference specifies the ISUP SIO screening reference as the next screening reference parameter (**nsr**) value.

To screen for TUP and ISUP message types using a combined ISUP/TUP screen set, the SIO screening reference with **si=4** and the SIO screening reference with **si=5** must be two different screening references. The TUP screening reference specifies the SIO screening reference as the next screening reference parameter (**nsr**) value, and the ISUP screening reference specifies the SIO ISUP screening reference as the next screening reference parameter (**nsr**) value.

Output

When a screen reference is specified that is not yet associated with a screen set, the following output appears:

```
ent-scr-isup:sr=iec:isupmt=1:nsfi=stop
tekelecstp 04-09-02 09:39:13 EST EAGLE 31.3.0
ENT-SCR-ISUP: MASP A - COMPLTD
;
```

When a screen reference is specified that is already associated with one or more screen sets, the following output appears:

```
ent-scr-isup:tupmt=20:sr=tu01:nsfi=stop
tekelecstp 04-11-17 16:22:27 EST EAGLE 31.4.0
Extended Processing Time Required -- Please Wait
Notice: The number of screensets affected is 2.
ENT-SCR-ISUP: SCREEN SET AFFECTED - ist1 1% FULL
ENT-SCR-ISUP: SCREEN SET AFFECTED - ist2 1% FULL
ENT-SCR-ISUP: MASP A - COMPLTD
;
```

ent-scr-opc

Enter Allowed OPC

Use this command to add an allowed OPC screening reference and associated attributes (originating point code, next screening function identifier, next screening function reference) to the allowed OPC entity set. One or more OPCs may be associated with the allowed OPC screening reference. Each OPC listed in this entity set is allowed to send SS7 messages to the customer's network.

Keyword: ent-scr-opc

Related Commands: chg-scr-opc, dlt-scr-dpc, rtrv-scr-dpc

Command Class: Database Administration

Parameters

:nsfi= (mandatory)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range: **blkdpc, blkopc, cgpa, dpc, sio, stop**

blkdpc— Blocked DPC is the next screening category.

blkopc— Blocked OPC is the next screening category.

cgpa— Allowed CGPA is the next screening category.

dpc— Allowed DPC is the next screening category.

sio— Allowed SIO is the next screening category.

stop— The gateway screening process ends and the message proceeds through normal routing.

:sr= (mandatory)

Screening reference. This parameter identifies a set of one or more allowed OPCs.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

:actname= (optional)

The name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: *ayyyyy*

1 alphabetic character followed by up to 5 alphanumeric characters.

:area= (optional)

The ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:id= (optional)

The ITU international ID. The parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0-7**.

Range: **0-7, ***

:msa= (optional)

The 24-bit ITU-national main signaling area (*msa*) value. It specifies the **msa** of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:nc= (optional)

The network cluster (*nc*) value. This parameter specifies one or more nc values for the network indicator (*ni*) and network cluster member (*ncm*) values specified in the **ni** and **ncm** parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:ncm= (optional)

The network cluster member (*ncm*) value. This parameter specifies one or more ncm values for the network indicator (*ni*) and network cluster (*nc*) values identified in the **ni** and **nc** parameters. It

specifies the *ncm* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 ***

:ni= (optional)

The network indicator (*ni*) value. This parameter specifies one or more *ni* values for the network cluster (*nc*) and network cluster member (*ncm*) values identified in the **nc** and **ncm** parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 ***

:npc= (optional)

The ITU national point code. An asterisk (*) indicates the full range of values from **00000–16383**.

Range: **00000-16383 ***

NOTE: Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see “Converting ITU National Point Code Formats” in Appendix A for information on converting the point code format.

:nsr= (optional)

Next screening reference (*nsr*). The parameter indicates which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. If **nsfi=stop**, the **nsr** parameter cannot be specified.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

Default: No value given

:pcst= (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range: **none, s**

Default: **none**

:sp= (optional)

The 24-bit ITU national signaling point. This parameter specifies the signaling point (*sp*) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:ssa= (optional)

The 24-bit ITU national sub signaling area. This parameter specifies the sub signaling area (*ssa*) in the point code represented by the format *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:zone= (optional)

The ITU international zone. The parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7, ***

Example

ent-scr-opc:sr=iec:nsfi=stop

ent-scr-opc:sr=iec:ni=240:nsfi=sio:nsr=iec

ent-scr-opc:sr=iec:ni=240:nc=010:ncm=010:nsfi=stop:actname=copy

ent-scr-opc:sr=iec:ni=240:nc=010:ncm=010:nsfi=dpc:nsr=iec

```
ent-scr-opc:sr=opc1:zone=1:area=2:id=3:nsfi=fail:pcst=none
ent-scr-opc:sr=opc1:zone=2:area=2:id=3:nsfi=fail:pcst=s
ent-scr-opc:sr=opc1:npc=128:nsfi=fail:pcst=s
```

Dependencies



CAUTION: Even though gateway screening is in the screen test mode, as defined by the parameters **gwsa=off** and **gwsn=on**, the gateway screening action in the stop action set specified by the **actname** parameter of the screen set *will* be performed at the end of the screening process.

The Gateway Screening Rules table can contain a maximum of 362,700 rules.

A complete point code must be specified, and must be one, and only one of the four point code parameter combinations: **ni-nc-ncm**; **zone-area-id**; **msa-ssa-sp**; or **npc**.

The OPC specified by **ni-nc-ncm**, **zone-area-id**, **msa-ssa-sp**, or the **npc** parameter must already exist in the screening reference or within an existing range of OPCs.

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

The **actname** parameter can be specified only when the **nsfi=stop** parameter is specified.

The value of the **actname** parameter must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the **ACT NAME** field of the **rtrv-gws-actset** command output.

If **area=*** is specified, **id=*** must be specified.

If **msa=*** is specified, **ssa=*** and **sp=*** must be specified.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc** parameter is specified as an asterisk (**nc=***), the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **ncm** parameter is specified as a single value, or a range other than the full range of **000-255**, the **ni** and the **nc** parameters must be specified with a single value.

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range **000-255**.

The next screening function identifier (**nsfi**) and the next screening reference (**nsr**) must point to an existing screen, or the **nsfi** must be equal to **stop** and the **nsr** must not be specified.

The **nsr** parameter must be specified if **nsfi** is not equal to **stop**.

The **nsr** parameter must be specified if **nsfi** is not equal to **stop**.

If **ssa=*** is specified, **sp=*** must be specified.

If **zone=*** is specified, **area=*** and **id=*** must be specified.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The spare point code subtype prefix (**s-**) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** parameter cannot be specified for ANSI and ITU-N24 point codes.

Notes

When an OPC screening reference is created, the first entry for a point code must be **c-c-c**, or **c** for the **npc** parameter. Subsequent entries must be specific point codes.

The character **c** is used in the OPC screens to allow the screening process to continue for messages with point codes that do not match any point codes in the OPC screens. When screening for a DPC and the point code being screened does not match any of the point codes in the DPC screens, the message is not rejected and the screening process continues.

There must be an entry in the OPC screens to allow the screening process to continue. This entry consists of a screening reference, point code, **nsfi**, and **nsr**. The point code is in the form of **npc=c** or subfields equal to **c-c-c**. When the character **c** is specified, the **nsfi** and **nsr** parameters must be specified.

If the character **c** is specified for the parameters **ni-nc-ncm** or **zone-area-id** or **msa-ssa-sp**, the character **c** is the only value that can be specified for all three parameters. No other values can be used. For example, a point code **c-c-255** is not allowed. The point code must be **c-c-c**. The asterisk (*) value cannot be used with the character **c** (for example, a point code **c-c-*** is not allowed).

When the point code does not match any entries in the blocked OPC screens, the screening process is directed to the screening reference with the point code **c-c-c** or **npc=c**. The **nsfi** and **nsr** in this entry are examined to determine the next step in the screening process.

If the current **ni-nc-ncm** or **zone-area-id** or **msa-ssa-sp** is equal to **c-c-c** or **npc=c**, only the **nsfi** and **nsr** can be changed. Otherwise, only the OPC can be changed.

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, **: ni=025&&100** specifies all network indicators for ANSI point codes from **25** to **100**.

An asterisk cannot not be specified for a parameter value in this command unless an asterisk was specified for the parameter value in the original **ent-scr-opc** command.

If the screen set reaches 100% capacity (indicated by the 100% Full message), the system allows subsequent entries. An error occurs, however, when downloading the screen set to an LIM. Ensure that screen sets do not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

```
ent-scr-opc:sr=iec:nsfi=stop
  rlgncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
  ENT-SCR-OPC: SCREEN SET AFFECTED - IEC 25% FULL
  ENT-SCR-OPC: MASP A - COMPLTD
;
```

Legend

ENT-SCR-OPC—The command entered that caused this output. This is echoed to the printer as a reference.

SCREEN SET AFFECTED - IEC—Identifies the screen set that was affected by the command. The screen set name is provided.

25% FULL—Indicates the relative size of the screen set.

ent-scr-sio**Enter Allowed SIO**

Use this command to add an allowed SIO screening reference and associated attributes (network indicator, service indicator, message priority, H0 heading code, H1 heading code, next screening function identifier, next screening function reference) to the allowed SIO entity set.

NOTE: To use TUP message type screening, an SIO screening reference with si=04 (TUP) must be defined in the SIO table. This SIO screening reference is specified in the ent-scr-isup command as the next screening reference (nsr) value in a screening reference for TUP message types

Keyword: ent-scr-sio

Related Commands: chg-scr-sio, dlt-scr-sio, rtrv-scr-sio

Command Class: Database Administration

Parameters

:nic= (mandatory)

Network indicator code (NIC). This parameter specifies an NIC for the SIO screening reference specified in the **sr** parameter. The NIC is the last 2 bits of the subservice field of an SIO. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from 0–3.

Range: 0-3 *

:nsfi= (mandatory)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range: blkdp, cdpa, cgpa, destfld, dp, isup, stop

blkdp— Blocked DPC is the next screening category.

cgpa— Allowed CGPA is the next screening category.

destfld— Allowed destination field (DESTFLD) is the next screening category.

dp— Allowed DPC is the next screening category.

isup— ISUP message type (ISUP) is the next screening category.

stop— The gateway screening process ends and the message proceeds through normal routing.

:pri= (mandatory)

Message priority. This parameter specifies a single priority, or the beginning of a range of priorities for the SIO screening reference specified by the **sr** parameter. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from 0–3.

Range: 0-3 *

:si= (mandatory)

Service indicator. This parameter specifies an SI for the SIO screening reference specified in the **sr** parameter. The SI is the first 4 bits of an SIO. The SS7 code directs the message to the MTP-user at the destination code.

Range: 00-15

:sr= (mandatory)

The allowed SIO screening reference name. This parameter identifies a set of one or more **si/nic/pri** combinations.

Range: ayyy

1 alphabetic character followed by up to 5 alphanumeric characters.

:actname= (optional)

The name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: *ayyyyy*

1 alphabetic character followed by up to 5 alphanumeric characters.

:h0= (optional)

H0 heading code. This parameter specifies a new H0 heading code for the screening reference specified in the **sr** parameter. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0–15**.

Range: **0–15 ***

Default: Value given if **si** value is **00**, **01**, or **02**

:h1= (optional)

H1 Heading Code. This parameter specifies an H1 heading code for the screening reference specified in the **sr** parameter. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0–15**.

Range: **0–15 ***

Default: Value given if **si** value is **00**, **01**, or **02**

:nsr= (optional)

Next screening reference (NSR). The parameter indicates which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. If **nsfi=stop**, the **nsr** parameter cannot be specified.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

Default: No value given

Example

ent-scr-

sio:sr=iec:nic=1:si=1:h0=01&&03:h1=:pri=:nsfi=dpc:nsr=abc

ent-scr-sio:sr=iec:nic=1:si=3:pri=2:nsfi=stop

ent-scr-sio:sr=iec:nic=1:si=4:pri=3:nsfi=stop:actname=cncf

Dependencies



CAUTION: Even though gateway screening is in the screen test mode, as defined by the parameters **gwsa=off** and **gws=on**, the gateway screening action in the stop action set specified by the **actname** parameter of the screen set will be performed at the end of the screening process.

The **actname** parameter can be specified only when the **nsfi=stop** parameter is specified.

The value of the **actname** parameter must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the *ACT NAME* field of the **rtrv-gws-actset** command output.

If the **si** parameter is equal to **00**, **01**, or **02**, the **h0** and **h1** parameters must be specified. Otherwise, the **h0** parameter cannot be specified.

Table 5-44 shows the valid combinations of the **h0/h1** parameters:

Table 5-44. Valid Combinations for the **h0/h1** Parameters (**ent-scr-sio**)

If the h0 parameter is specified as:	The h1 parameter can be specified as:
A single value	A single value
A single value	A range
A single value	An asterisk (*) entry
A range	An asterisk (*) entry
An asterisk (*) entry	An asterisk (*) entry

When the **chg-scr-sio** command is entered with the **nh0** or **nh1** parameters, the specified values must be valid with the **h0** or **h1** values currently in the database.

If the screening reference exists, the **nic**, **si**, **h0/h1**, and priorities to be added to the allowed SIO entity set for the SIO screening reference cannot exist in that allowed SIO entity set.

If asterisks or ranges are specified for the heading codes, nothing that matches the combination of **nic**, **si**, and the specified heading codes can already exist in the allowed SIO entity set for the screening reference.

If the screening reference does not exist, a new screening reference for the allowed SIO entity set is created.

The **nsfi** and the **nsr** values to be added must point to one or more existing entities in another entity set or the **nsfi** parameter to be added must be equal to **stop** and the **nsr** to be added cannot be specified.

Use Table 5-45 to determine an acceptable combination of the **nsfi** and **si** parameters:

Table 5-45. Valid **ent-scr-sio nsfi** and **si** Parameter Combinations

If the nsfi parameter is...	...the si parameter must be:
destfl	00
cdpa	03
cgpa	03
isup	05

Use Table 5-46 to determine the acceptable combination of the specified parameter values:

Table 5-46. Additional Valid **ent-scr-sio** Parameter Combinations

si value:	nic value	pri value	h0 value:	h1 value:
00	s, *	s, *, r	s	s, *, r
00	s, *	s, *, r	*, r	*
01, 02	s, *	s, *, r	s	s, *, r
01, 02	s, *	s, *, r	*, r	*

Table 5-46. Additional Valid **ent-scr-sio** Parameter Combinations

si value:	nic value	pri value	h0 value:	h1 value:
03-15	s, *	s, *, r	u	u
Legend s = single value r = range * = asterisk u = unspecified				

Notes

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, **pri=0&&2** specifies all message priorities for the range **0** to **2**.

If the screen set reaches 100% capacity (indicated by the **100% Full** message), the system will allow subsequent entries. An error will occur, however, when downloading the screen set to a LIM. Screen sets should not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

To use TUP message type screening, an SIO screening reference with **si=04** (TUP) must be defined in the SIO table. To use ISUP message type screening, a rule with **si=05** (ISUP) must be defined in the SIO table. To use a combined ISUP/TUP screen set for TUP and ISUP message screening, the SIO screening reference with **si=4** and the SIO screening reference with **si=5** must be two different screening references.

The **h0** and **h1** parameters cannot be specified if **si** is not equal to **00**, **01**, or **02**.

An asterisk cannot not be specified for a parameter value in this command unless an asterisk was specified for the parameter value in the original **ent-scr-sio** command.

Output

```
ent-scr-
sio: sr=iec: nic=1: si=1: h0=01&&03: h1=: pri=: nsfi=dpc: nsr=abc
  rlgncxa03w 04-02-14 16:45:50 EST EAGLE 31.3.0
  ENT-SCR-SIO: SCREEN SET AFFECTED - SS01 25% FULL
  ENT-SCR-SIO: SCREEN SET AFFECTED - SS04 35% FULL
  ENT-SCR-SIO: MASP A - COMPLTD
;
```

Legend

ENT-SCR-SIO—The command entered that caused this output. This is echoed to the printer as a reference.

SCREEN SET AFFECTED - SS01—Identifies the screen set that was affected by the command. The screen set name is provided.

25% FULL—Indicates the relative size of the screen set.

ent-scr-tt**Enter Allowed Translation Type**

Use this command to add a specific allowed translation type (TT) screening reference in the TT entity set.

Keyword: ent-scr-tt

Related Commands: chg-scr-tt, dlt-scr-tt, rtrv-scr-tt

Command Class: Database Administration

Parameters

:nsfi= (mandatory)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range: **cdpa, stop**

cdpa— Allowed CDPA is the next screening category.

stop— The gateway screening process ends and the message proceeds through normal routing.

:sr= (mandatory)

Name of the screening reference.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

:type= (mandatory)

Translation type. The translation type identifies the global title translation type value in the called party address. It is the decimal representation of the 1-byte field used in SS7. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from 0–255.

Range: **000-255 ***

:actname= (optional)

The name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: *ayyyyy*

1 alphabetic character followed by up to 5 alphanumeric characters.

:nsr= (optional)

Next screening reference (nsr). The parameter indicates which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. This parameter is mandatory if **nsfi** is other than **stop**. The **nsr** parameter cannot be entered if **nsfi** is **stop**. If **nsfi=stop**, the **nsr** parameter cannot be specified.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

Default: No value given

Example

ent-scr-tt:sr=iec:type=012:nsfi=cdpa:nsr=wrds

ent-scr-tt:sr=iec:type=012:nsfi=stop:actname=copy

Dependencies



CAUTION

CAUTION: Even though gateway screening is in the screen test mode, as defined by the parameters **gwsa=off** and **gwsn=on**, the gateway screening action in the stop action set specified by the **actname** parameter of the screen set **will** be performed at the end of the screening process.

If the screening reference is valid, but does not exist, a new TT screen is created.

If the screening reference exists, a new rule is added to the TT screening table.

An asterisk cannot not be specified for a parameter value in this command unless an asterisk was specified for the parameter value in the original **ent-scr-tt** command.

If the **actname** parameter is specified, the **nsfi-stop** parameter must be specified.

The value of the **actname** parameter must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the *ACT NAME* field of the **rtrv-gws-actset** command output.

If the **nsfi=stop** parameter is specified, the **nsr** parameter cannot be specified.

If the **nsfi** parameter has a value other than **stop**, the **nsr** parameter must be specified.

If the **nsr** parameter is specified, the specified screening reference must exist.

If the screening reference (**sr**) exists, the single value or range specified for the allowed **type** to be added to the TT screen for the allowed TT screening reference must not already exist in that TT screen.

If an asterisk is specified for the allowed **type**, nothing can already exist in the TT screen for the screening reference.

Notes

If the screen set reaches 100% capacity (indicated by the 100% Full message), the system will allow subsequent entries. An error will occur, however, when downloading the screen set to a LIM. Screen sets should not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

Output

```
ent-scr-tt:sr=iec:type=012:nsfi=cdpa:nsr=wrds
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
ENT-SCR-TT: SCREEN SET AFFECTED - IEC 25% FULL
ENT-SCR-TT: MASP A - COMPLTD
;
```

Legend

ENT-SCR-TT—The command entered that caused this output. This is echoed to the printer as a reference.

SCREEN SET AFFECTED - IEC—Identifies the screen set that was affected by the command. The screen set name is provided.

25% FULL—Indicates the relative size of the screen set.

ent-scrset

Enter Screen Set

Use this command to create a new screen set and point it to its first screen. A screen set is a set of screens (filters) that can be assigned to a linkset. SS7 messages transmitted on a linkset assigned to a screen set require screening by the system, if screening is enabled.

Keyword: ent-scrset

Related Commands: chg-scrset, dlt-scrset, rtrv-scrset

Command Class: Database Administration

Parameters

:nsfi= (mandatory)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range: blkdp, blkopc, dpc, opc, sio, stop

blkdp—Blocked DPC is the next screening category.

blkopc — Blocked OPC is the next screening category.
dpc — Allowed DPC is the next screening category.
opc — Allowed OPC is the next screening category.
sio — Allowed SIO is the next screening category.
stop — The gateway screening process ends and the message proceeds through normal routing.

:scrn= (mandatory)

Screenset name.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

:actname= (optional)

The name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: *ayyyyy*

1 alphabetic character followed by up to 5 alphanumeric characters.

:destfld= (optional)

This parameter turns on and off the automatic allowed affected destination screening for network management messages against the routing table, self point codes, and capability point codes. When this parameter is **on**, the automatic screening is applied at the end of the provisioned screen set.

Range: **yes, no**

Default: **yes**

:nsr= (optional)

Next screening reference (**nsr**). The parameter indicates which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. If **nsfi=stop**, the **nsr** parameter cannot be specified.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

Default: No value given

Example

```
ent-scrset:scrn=ss01:nsfi=opc:nsr=iec
ent-scrset:scrn=ss02:nsfi=stop
ent-scrset:scrn=empt:nsfi=stop:destfld=yes
ent-scrset:scrn=scr1:nsfi=stop:actname=copy
```

Dependencies

Even though gateway screening is in the screen test mode, as defined by the parameters **gwsa=off** and **gwsn=on**, the gateway screening action in the stop action set specified by the **actname** parameter of the screen set *will* be performed at the end of the screening process.

The **actname** parameter can be specified only when the **nsfi=stop** parameter is specified.

The value of the **actname** parameter must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the **ACTNAME** field of the **rtrv-gws-actset** command output.

The **nsr** parameter cannot be entered if the **nsfi** parameter value equals **stop**.

The specified screen set name cannot be in use by another screen set.

A maximum of 63 user-defined screen sets can be defined in the database.

The next screening function identifier and the next screening reference to be added must point to one or more existing entities in another entity set. If this is not the case, the next screening function identifier added must equal **stop** and the next screening reference added cannot be specified.

The **nsr** parameter is required if the **nsfi** parameter value does not equal **stop**.

The Gateway Screening (GWS)/Global Title Translation (GTT) shared database resource (DBMM.TBL) may not be full.

Notes

Entering a new screen set may take a few minutes of processor time. The following message appears in the scroll area:

Extended processing time required-please wait

If the screen set reaches 100% capacity (indicated by the 100% Full message), the system will allow subsequent entries. An error will occur, however, when downloading the screen set to a LIM. Screen sets should not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

Output

```
ent - scrset : scrn=ss01 : nsfi=opc : nsr=iec
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
ENT-SCRSET: SCREEN SET AFFECTED - SS01 25% FULL
ENT-SCRSET: MASP A - COMPLTD
;
```

Legend

ENT-SCRSET—The command entered that caused this output. This is echoed to the printer as a reference.

SCREEN SET AFFECTED—Identifies the screen set that was affected by the command. The screen set name is shown.

% FULL—Indicates the relative size of the screen set.

ent-serial-num

Enter Serial Number

Use this command to enter the NT serial number into the database for an EAGLE STP IP7 Secure Gateway system.

You must enter the serial number at least once without specifying the **lock** parameter. As long as you enter the command without the **lock** parameter, you can enter the system serial number as many times as needed. After the correct serial number is entered, you must use the **lock=yes** parameter to lock the serial number table. You cannot change the serial number with administration commands after the table is locked.

Keyword: ent-serial-num

Related Commands: rtrv-serial-num

Command Class: Database Administration

Parameters

:serial= (mandatory)

The system NT Serial Number.

Range: aayyyyyyy

Up to 15 alphanumeric characters; mixed case is allowed.

The first two characters (the prefix) must be letters.

The remaining characters must be numbers.

The serial number cannot contain spaces or special characters.

:lock= (optional)

This parameter is used to lock the Serial Number table when the serial number is entered for the system.



CAUTION: After the serial number is locked, you cannot enter it again or change it in the database. You can use the command without the lock parameter to enter the serial number as many times as needed; then enter the command with the lock parameter and the correct serial number to lock the serial number table.

Range: yes

Default: Not locked

Example

```
ent -serial-num:serial=nt00000123
```

```
ent -serial-num:serial=nt00000123:lock=yes
```

Dependencies

The serial number must be entered at least once without specifying the **lock** parameter.

The system serial number that is entered when the **lock** parameter is specified must match the serial number that was previously entered in the Serial Number table by using the command without the **lock** parameter.

The system serial number cannot be entered again after the Serial Number table is locked.

Notes

None

Output

```
ent -serial-num:serial=nt00000123
```

```
rlghncxa03w 04-01-05 16:40:40 EST EAGLE 31.3.0
```

```
ENT-SERIAL-NUM: MASP A - COMPLTD
```

```
;
```

ent-shlf

Enter Shelf

Use this command to add an equipment shelf to the database.

Keyword: ent-shlf

Related Commands: dlt-shlf, rtrv-shlf

Command Class: Database Administration

Parameters

:loc= (mandatory)

The shelf location.

Range: 1200, 1300, 2100, 2200, 2300, 3100, 3200, 3300, 4100, 4200, 4300, 5100, 5200, 5300, 6100

:type= (mandatory)

The type of equipment shelf to be configured.

Range: ext

Example

```
ent -shlf:type=ext:loc=1200
```

Dependencies

The frame and shelf values of the shelf location parameter (**loc**) must be within the valid range (xyzz, where x=frame and y=shelf; zz is always 00 for this command).

The specified shelf location must not have been configured previously.

Notes

None

Output

```
ent-shlf:type=ext:loc=1200
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
ENT-SHLF: MASP A - COMPLTD
;
```

ent-sid

Enter Self Identification

Use this command to define additional true point codes for an STP. This command allows newly defined true point codes to be distributed to the cards without requiring system initialization.

Keyword: ent-sid

Related Commands: chg-sid, rtrv-sid

Command Class: Database Administration

Parameters

:pc= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: pca

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001-005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006-255.

The point code 000-000-000 is not a valid point code.

:pc/pca/pci/pcn/pcn24= (optional)

STP true point code.

:pci= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

:pcn= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:pcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

Example

To create a site identification STP PC for ITU-N and ITU-I:

ent-sid:pcn=123:pci=1-1-1

To create a site identification STP PC for ITU-N Spare and ITU-I Spare:

ent-sid:pcn=s-123:pci=s-1-1-1

Dependencies

At least one optional parameter must be specified.

The Spare Point Code Support feature must be enabled before an ITU-I or ITU-N spare point code can be specified.

If the system is configured for ANSI format point codes, the specified network indicator value (*ni*) of the **pc** parameter must be **6** or greater when the specified cluster value is **0** (*nc*).

Only the **pcn** parameter or the **pcn24** parameter can be specified in a command; both parameters cannot be specified in the same command.

The specified STP point code must not have been previously defined as a capability point code.

An STP point code cannot exist that is the same type (ANSI, ITU-I, ITU-N, ITU-N24, ITU-ISpare, or ITU-NSpare) as the specified STP point code.

The STP point code can be specified only as a full point code.

ITU-N STP destination point codes can be specified only as full point codes.

Notes

The SID Table can simultaneously contain the node's true point codes of any following point code types: ANSI, ITU-I, ITU-N or ITU-N24, ITU-ISpare, and ITU-NSpare. (Only ITU-N or ITU-N24, not both, can be defined in the SID Table.)

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-).

Output

```
ent-sid:pcn=123:pci=1-1-1
  rlghncxa03w 05-01-07 11:11:28 EST  EAGLE 31.12.0
  ENT-SID: MASP A - COMPLTD
;
```

ent-slk**Enter Signaling Link**

Use this command to add a low-speed or high-speed (ATM or IP) signaling link to a linkset in the database.

For 2-port E1 cards, E1/T1 MIM cards, HC-MIM cards, Channel cards, or E5-E1T1 cards, use this command to associate a signaling link and a timeslot with the E1 or T1 interface that will service the timeslot.

For HC-MIM cards used for SE-HSL links, use this command to assign links **a** and **b** on any 2 of the 8 HC-MIM card ports. For E5-E1T1 cards used for SE-HSL links, use this command to assign link **a** on any 1 of the 8 E5-E1T1 card ports.

Signaling links are the only elements in the database directly supported by a hardware device. When a link is added to a linkset, the link remains in the state OOS-MT-DSBLD (out of service maintenance disabled) until it is activated.

Up to 64 signaling links can be assigned to one HC-MIM card, allowing links **a**, **a1** through **a31**, **b**, and **b1** through **b31** to be provisioned. Up to 32 signaling links can be assigned to one E5-E1T1 card, allowing links **a**, **a1** through **a15**, **b**, and **b1** through **b15** to be provisioned.

NOTE: The link parameter has been added as a synonym for the port parameter. Either port or link can be used for a few more EAGLE 5 ISS releases; then the port parameter will be removed.

Keyword: ent-slk

Related Commands: act-slk, blk-slk, canc-slk, dact-slk, dlt-slk, inh-slk, rept-stat-slk, rtrv-slk, tst-slk, ublk-slk, unhb-slk

Command Class: Database Administration

Parameters

The following parameters are valid for all types of links: **loc**, **lsn**, **link**, **slc**, **bps**, **ecm**

The following parameters are valid for low-speed links: **llmode**, **l2tset**, **pcrn1**, **pcrn2**, **tset**

The following parameter is valid only for IP links: **ipliml2**

The following parameters are valid for ATM ANSI high-speed links: **atmtsel**, **ll**, **lpset**, **vci**, **vpi**

The following parameters are valid for E1 ATM links: **atmtsel**, **e1atmcrc4**, **e1atmsi**, **e1atmsn**, **lpset**, **vci**, **vpi**

The following parameters are valid for E1 links: **l2tset**, **pcrn1**, **pcrn2**, **e1loc**, **e1port**, **ts**

The following parameters are valid for T1 links: **l2tset**, **ecm**, **pcrn1**, **pcrn2**, **t1loc**, **t1port**, **ts**

The following parameters are valid for SE-HSL links: **l2tset**, **e1port**

:link= (mandatory)

The signaling link on the card specified in the **loc** parameter. The links can be specified in any sequence or pattern.

Synonym: **port**

Range: **a, b, a1-a31, b1-b31**

Not all card types support all **link** parameter values.

See Table A-1 for valid **link** parameter range values for each type of card that can have a location specified in the **loc** parameter.

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

If the signaling link is being assigned to an E1 or T1 card for a Channel card, specify the location of the Channel card. If the link is being assigned for the E1 or T1 card itself, specify the location of the E1 or T1 card.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

:lsn= (mandatory)

The name of the linkset. The linkset name must be unique.

Range: **aaaaaaaa**

1 alphabetic character followed by up to 9 alphanumeric characters

:slc= (mandatory)

The signaling link code.

The SLC must be unique within the linkset. It must be the same at both the system location and the distant node.

Range: **0-15**

:atmtsel= (optional)

ATM timing selector. The timing source for the ATM signaling link—internal, line, or external.

Internal timing is derived from an internal clock source operating at 1.544 MHz $\pm$ 200 Hz for ANSI links and 2.048 MHz $\pm$ 103 Hz for ITU links. External timing is derived from the High-Speed Master Clock (T1 or E1). Line timing is derived from its received data stream, if present.



CAUTION: The internal timing source is used for debug purposes only, and is not to be used for production operation.

If you are using the 2.048 MHz reference clock as the timing source for E1 signaling links, the **atmtsel=external** parameter must be specified for high-speed ATM signaling links. The **atmtsel** parameter is not valid in the command when the **e1loc** or **e1port** parameter is specified for an E1 signaling link. For information on the E1 interface, see Appendix A, “E1 Interface” in the *Database Administration Manual - SS7*.

Range: **external, internal, line**

Default: **line**

:bps= (optional)

The transmission rate for the link in bits per second. E1 links running at 56000 bps and 64000 bps are allowed in linksets with other links running at 56000 bps or 64000 bps, or both, in the same

linkset. T1 links running at 56000 bps or 64000 bps are allowed in linksets with other links that are running at 56000 bps or 64000 bps, or both. All other types of links in one linkset are required to have the same provisioned link speed. See Table 5-47

Range: 4800, 9600, 19200, 56000, 64000, 1544000, 1984000, 2048000
Default: 56000

:e1atmcrc4= (optional)

CRC4 multi-frame structure enable/disable indicator.

Range: on, off
Default: on

:e1atmsi= (optional)

Value of two Spare International bits of NFAS data.

Range: 0-3
Default: 3

:e1atmsn= (optional)

Value of five Spare National bits of NFAS data.

Range: 0-31
Default: 0

:e1loc= (optional)

Card location of an E1 card with an E1 interface that will service the link assigned for a Channel card. This parameter cannot be specified for an HC-MIM card.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

:e1port= (optional)

The port for the E1 interface on the E1 card to which a signaling link and timeslot are being assigned, or to which an SE-HSL link is being assigned.

Range: 1-8
 Ports 3 through 8 can be specified only for HC-MIM cards.
 Any 2, but no more than 2, of the 8 ports on an HC-MIM card can be specified when the card is used as an SE-HSL card.
Default: 1

:ecm= (optional)

Error correction method.

Range: basic, pcr
Default: basic

:ipliml2= (optional)

IPLIM level 2 stack.

Range: saaltali, m2pa
Default: m2pa

:l1mode= (optional)

The mode of operation used to select the link clocking source at layer 1. One end of a V.35 link must be DTE and the other end must be DCE.

Range: dte, dce
Default: dte

:l2tset= (optional)

Level 2 timer set. A signaling link can be assigned to any of the thirty timer sets.

Range: **1-30**
 1–10 for ANSI low speed links
 11–20 for ITU low speed links
 21–25 for ITUN China high speed links
 26–30 for ITUN Q703.A high speed links

Default: **1** for ANSI low speed links
 11 for ITU low speed links
 21 for ITUN China high speed links (SE-HSL link in a linkset defined with the **apcntype=ituchina** parameter)
 26 for ITUN Q703.A high speed links (SE-HSL link in a linkset defined with the **apcntype=itun** parameter)

:ll= (optional)

ATM line length in feet.

Range: **0-7**
 0—0-110 feet
 1—110-220 feet
 2—220-330 feet
 3—330-440 feet
 4—440-550 feet
 5—550-660 feet
 6—More than 660 feet
 7—Allows use of external line buildout networks

Default: **0**

:lpset= (optional)

Link parameter set identifier.

Range: **1-30**
Default: **1**—for ANSI
 21—for ITU

:pcrn1= (optional)

The threshold of the number of MSUs available for retransmission. If the error correction method being used is PCR and this threshold is reached, no new MSUs or FISUs are sent. The retransmission cycle is continued up to the last MSU entered into the retransmission buffer in the order in which they were originally transmitted.

Range: **1-127**
Default: **76**

:pcrn2= (optional)

The threshold of the number of MSU octets available for retransmission. If the error correction method being used is PCR, and this threshold is reached, no new MSUs or FISUs are sent. The retransmission cycle is continued up to the last MSU entered into the retransmission buffer in the order in which they were originally transmitted.

Range: **300-35500**
Default: **3800**

:t1loc= (optional)

Card location of a T1 card with a T1 interface that will service the signaling link assigned for a Channel card. This parameter cannot be specified for an HC-MIM card.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

:t1port= (optional)

The port for the T1 interface on the T1 card to which a signaling link and timeslot are being assigned.

Range: 1-8

Ports 3 through 8 can be specified only for HC-MIM cards.

Default: 1

:ts= (optional)

E1 timeslot for the assigned signaling link.

Range: 1-31

:ts= (optional)

T1 timeslot for the assigned signaling link.

Range: 1-24

:tset= (optional)

Transmitter signal element timing.

Range: on, off

Default: off

:vci= (optional)

Virtual channel identifier.

Range: 5, 32-65535

0-4 and 6-31 are reserved values; they cannot be specified in the command.

Default: 5

:vpi= (optional)

Virtual path identifier.

Range: 0-4095

Default: 0

Example

ent -

```
slk:loc=1201:link=a:slc=3:lsn=c1201001:l2tset=3:l1mode=dte:bps=64
000:ecm=basic
```

ent -

```
slk:loc=1201:link=a:slc=3:lsn=c1201001:l2tset=3:ecm=pcr:pcrn1=50:
pcrn2=4000
```

ent -

```
slk:loc=1302:link=a:slc=5:lsn=atm1302a:lpset=3:vci=10:vpi=15 :ll=0
:atmtsel=internal
```

ent -

```
slk:loc=1302:link=a:slc=5:lsn=atm1302a:lpset=3:vci=10:vpi=15 :ll=0
:atmtsel=external
```

The following example adds a link to linkset ls1 at 56 KB for a multi-port LIM:

```
ent-slk:loc=1205:link=a1:slc=0:lsn=ls1
```

The following example assigns a timeslot for the signaling link on an E1 card that uses E1 port 1.

```
ent-slk:loc=1206:link=a:slc=0:lsn=e1jwk:ts=1
```

The following example assigns a timeslot for a signaling link on an E1 card that uses E1 port 2.

ent-slk: loc=1205: link=b: slc=0: lsn=e1typ: ts=1: e1port=2

The following example assigns a timeslot for a signaling link on a Channel card in the location specified by the loc parameter. The Channel card is serviced by the E1 assigned to the E1 card in the location specified by the e1loc parameter.

ent-slk: loc=1206: link=a: slc=0: lsn=e1jwk: ts=2: e1loc=1205

The following example adds a timeslot for a signaling link on an E1/T1 MIM card using E1 port 2 and signaling link b2.

ent-slk: loc=1205: link=b2: slc=0: lsn=e1typ: ts=1: e1port=2

The following example adds a timeslot for a signaling link on an E1/T1 MIM card used as an E1 Channel card in card location 1206. The command specifies signaling link port a1. The E1 interface that services the Channel card is on the E1 card in card location 1205 (e1loc parameter).

ent-slk: loc=1206: link=a1: slc=1: lsn=e1jwk: ts=2: e1loc=1205

The following example adds a timeslot for a signaling link on an E1/T1 MIM card using signaling link a2. The T1 interface defaults to the interface defined for T1 port 1 (t1port parameter not specified)

ent-slk: loc=1207: link=a2: slc=0: lsn=t1jwk: bps=64000: ts=1

The following example adds a timeslot for a signaling link on an E1/T1 MIM card using T1 port 2 and signaling link b2.

ent-slk: loc=1207: link=b2: slc=0: lsn=t1typ: ts=1: t1port=2

The following example adds a timeslot for a signaling link on an E1/T1 MIM card used as an T1 Channel card in card location 1208. The command specifies signaling link a1. The T1 interface that services the Channel card is on the T1 card in card location 1207 (t1loc parameter).

ent -

slk: loc=1208: link=a3: slc=1: lsn=t1jwk: bps=64000: ts=2: t1loc=1207

The following example adds a signaling link to linkset ls1 at 2048000 bps for an E1 ATM card that will use the CRC4 multi-frame structure

ent -

slk: loc=1205: link=a: slc=0: lsn=ls1: bps=2048000: atm sel=line: e1atmcr c4=on

The following example adds a signaling link to link set e1e2a using the SAALTALI Level 2 stack.

ent-slk: loc=1301: link=a: lsn=e1e2a: slc=0: ipliml2=saaltali

The following example adds a link to link set ls1 at 56 Kbps for an HC-MIM card that is provisioned as an E1 card:

ent-slk: loc=1205: link=a31: slc=0: lsn=ls1: e1port=4: ts=4

The following example adds a link to link set l21 at 64 Kbps for an HC-MIM card that is provisioned as a T1 card:

ent-slk: loc=1207: link=b27: slc=3: lsn=ls2: t1port=8: ts=6: bps=64000

Dependencies

The slot portion of the specified card location (**loc**) can be **1 - 8** and **11 - 18**. Slots **09** and **10** cannot be specified. (The card location is xyss, where x is the frame, y is the shelf, and ss is the slot.)

Card locations **1113 - 1118** cannot be specified.

The frame and shelf portions of the specified card location (**loc**) can be **11 - 13**, **21 - 23**; **31 - 33**; **41 - 43**; **51 - 53**; and **61**. (The card location is xyss, where x is the frame, y is the shelf, and ss is the slot.)

The **pcrn1** parameter and the **pcrn2** parameter can be specified for the **ss7ansi** and **ccs7itu** applications only when the **ecm=pcr** parameter is specified.

Use Table 5-47 to select a valid transmission rate for the **bps** parameter.

Table 5-47. Transmission Rate for the **bps** Parameter

Card Application	bps Transmission Rate	Domain
ss7ansi	56000 or 64000	SS7
ss7gx25	4800, 9600, 19200, 56000, or 64000	X.25
ccs7itu	56000 or 64000	SS7
atmansi	1544000	SS7
ss7ansi, ccs7itu (SE-HSL cards)	1984000	SS7
atmitu	2048000	SS7

The value of the **bps** parameter must be **56000** or **64000** if the card application is **ss7ansi** or **ccs7itu** (except for SE-HSL cards, for which the **bps** parameter must be **1984000**).

The value of the **bps** parameter must be **56000** if the card type is either **limds0** or **limocu**.

The value of the **bps** parameter must be **1544000** if the card application is **atmansi**.

The value of the **bps** parameter can be **1544000** only if the card application is **atmansi**.

The value of the **bps** parameter must be **56000** if the card is a multi-port LIM.

The value of the **bps** parameter must be **2048000** if the card type is **lime1atm**.

The value of the **bps** parameter can be **2048000** only if the card application is **atmitu**.

The value of the **bps** parameter must be **1984000** if the card is an HC-MIM or E5-E1T1 card used for SE-HSL links (**linkclass=unchan** is specified in the E1 interface definition).

E1 links running at 56000 bps and 64000 bps are allowed in linksets with other links running at 56000 bps and 64000 bps in the same linkset. T1 links running at 56000 bps and 64000 bps are allowed in linksets with other links that are running at 56000 bps and 64000 bps links in the same linkset. In linksets that contain other types of links, all links in one linkset must use the same transmission rate.

The values **0 - 4** and **6 - 31** cannot be specified for the **vci** parameter; these values are reserved system values.

The linkset adjacent point code (APC) type must be the same as the card application type (ANSI or ITU).

The specified linkset name must exist in the database.

The value that is specified for the **slc** parameter cannot be in use for the specified linkset.

A card must be equipped in the specified card location.

The card in the specified card location must be a LIM or MIM and must exist.

The **e1port** parameter must be specified.

If the **e1port** parameter is not specified for an SE-HSL link, the value defaults to **1**. If the value of **1** has already been specified for a link, the error message will result.

The parameters that are specified for the command must be valid for the type of card in the specified card location.

When a low-speed link is assigned to a card (card application is not **atmansi** or **atmitu**), the ATM high-speed link and E1 ATM parameters (**atmtsel**, **e1atmcrc4**, **etatmsi**, **e1atmsn**, **ll**, **lpset**, **vci**, and **vpi**) cannot be specified.

When an ATM high-speed link is assigned to a card (card application is **atmansi**), the low-speed link parameters (**ecm**, **l1mode**, **l2set**, **pcrn1**, **pcrn2**, and **tset**) cannot be specified.

When an E1 ATM high-speed link is assigned to a card (card application is **atmitu**), the low-speed link parameters (**ecm**, **l1mode**, **l2set**, **pcrn1**, **pcrn2**, and **tset**) cannot be specified.

When an IP link is assigned to a card (card application is **ss7ipgw**, **ipgwi**, **iplim**, or **iplimi**), the following low-speed link parameters, ATM high-speed link parameters, and E1 ATM high-speed link parameters cannot be specified: **lpset**, **vci**, **vpi**, **ll**, **atmtsel**, **e1atmcrc4**, **e1atmsi**, **e1atmsn**, **ecm**, **l1mode**, **l2set**, **pcrn1**, **pcrn2**, and **tset**.

If the card application is **ss7gx25**, the **l2tset** parameter cannot be specified.

The following **link** parameter values can be specified for the following cards that support more than 2 links per card:

- **a1-a3, b1-b3**—Multi-port LIM (MPL, MPL-T), SSED CM card running the **iplim** or **iplimi** application with links having **ipliml2=m2pa** or **ipliml2=saaltali**, E1/T1 MIM card
- **a1-a31, b1-b31**—HC-MIM card
- **a1-a15, b1-b15**—E5-E1T1 card
- **a1-a7, b1-b7**—E5-ENET card running the **iplim** or **iplimi** application that supports 16 links

The **link** parameter values **a1**, **b1**, **a2**, **b2**, **a3**, and **b3** can be specified only when:

- The card type is **limds0**, and the card application is **ss7ansi**.
- The card type is **lime1**, **limt1**, or **limch**, and the card application is **ss7ansi** or **ccs7itu**.
- The card is an SSED CM, and the card application is **iplim** or **iplimi**.
- The card type is **lime1**, **limt1**, or **limch** (and the card is not an SE-HSL card), and the card application is **ss7ansi** or **ccs7itu**.
- The card type is E5-ENET running **iplim** or **iplimi**.

The **link** parameter values **a4-a7** and **b4-b7** can be specified for E5-ENET cards running the **iplim** or **iplimi** application. The **link** parameter values **a4-a15** and **b4-b15** can be specified only when the card type is **lime1** or **limt1** for HC-MIM and E5-E1T1 cards and the card application is **ss7ansi** or **ccs7itu**. The **link** parameter values **a4-a31** and **b4-b31** can be specified only when the card type is **lime1** or **limt1** for an HC-MIM card and the card application is **ss7ansi** or **ccs7itu**.

The **link** parameter values **a4-a15** and **b4-b15** can be specified only when the card type is **lime1** or **limt1** for either an E5-E1T1 card or an HC-MIM card that is used as an E1 or T1 card, and the card application is **ss7ansi** or **ccs7itu**. The **link** parameter values **a16-a31** and **b16-b31** can be specified only when the card type is **lime1** or **limt1** for an HC-MIM card that is used as an E1 or T1 card, and the card application is **ss7ansi** or **ccs7itu**. The **link** parameter values **a4-a31** and **b4-b31** cannot be specified for a Channel card or for an SE-HSL card. The **link** parameter values **a**, **b**, **a1-a7**, **b1-b7** are valid for E5-ENET cards running **iplim** or **iplimi** application.

HIPR cards must be in card locations **xy 09** and **xy 10** on any shelf that contains one or more HC-MIM, E5-E1T1, or E5-ENET cards. When **link** parameter values **a4-a31** and **b4-b31** are specified, the system verifies that HIPR cards are in card locations **xy 09** and **xy 10** on the same shelf with the specified HC-MIM, E5-E1T1, or E5-ENET card.

Links **a16-a31** and **b16-b31** cannot be specified for even-numbered card locations. HC-MIM cards are dual-slot cards. The links are assigned only to the cards in odd-numbered locations.

If the card application is **ss7gx25**, only the **link=a** parameter can be specified.

If the card application is **ss7ipgw** or **ipgwi**, only the **link=a** parameter can be specified.

The **tset** parameter can be specified only when the **l1mode=dce** parameter is specified. When the **l1mode=dce** parameter is specified and the **tset** parameter is not specified, the **tset** parameter value is set to **off**.

If the card is an HC-MIM used for SE-HSL links, only the **link=a** parameter or **link=b** parameter can be specified. If the card is an E5-E1T1 used for SE-HSL links, only the **link=a** parameter can be specified.

If the specified linkset has a mate linkset, only 1 SS7IPGW or IPGWI signaling link can be assigned to the specified linkset. The assigned link must be an SS7IPGW or IPGWI link.

Up to 8 IPGWx signaling links can be assigned to one linkset if the linkset is not mated.

When SCTP associations are provisioned for LHOSTs on a dual-slot DCM card that is running the **iplim** or **iplimi** application, only 2 point-to-point links can be assigned to the card. Only **link=a** or **link=b** can be specified.

If the card application is **atmansi** or **atmitu**, only the **link=a** parameter can be specified.

When an IP link is assigned to a card running card application **ss7ipgw**, the **lsn** parameter must reference a linkset that specifies an IP gateway adjacent point code (**ent-ls:ipgwapc=yes**).

When an IP link is assigned to a card running card application **ipgwi**, the **lsn** parameter must reference a linkset that specifies an IP gateway adjacent point code (**ent-ls:ipgwapc=yes**).

When an IP link is assigned to a card running card application **ipgwi**, the specified link set must be empty; only 1 IPGWI link can be assigned to a link set.

When the specified linkset name (**lsn**) is defined with the **ipgwapc=yes** parameter, the card application must be **ss7ipgw** or **ipgwi**.

When the specified linkset name (**lsn**) is defined with **multgc=yes**, all links assigned to the linkset must be of the same type (**ipgwi** links or **iplimi** links).

When the specified linkset name (**lsn**) is defined with **multgc=yes**, the card in the specified card location must be running the **ipgwi** or **iplimi** card application.

The **ipliml2** parameter can be specified only for IPLIM signaling links.

All IPLIM links assigned to the same linkset must be defined with the same **ipliml2** parameter value.

Linksets containing 24-bit ITU-N APCs or SAPCs cannot contain IPLIMI SAALTALI or E1 ATM links. These links do not support 24-bit ITU-N traffic.

Linksets with both 14-bit ITU-N and 24-bit ITU-N APCs or SAPCs can contain only IPGWI or IPLIMI M3UA links. These links support 14-bit ITU-N and 24-bit ITU-N traffic simultaneously.

A maximum of 1200, 1500, or 2000 links is allowed in the system. The maximum depends on the enabled Large System # Links quantity (see the **rtrv-ctrl-feat** command output). A feature access key is required to enable support for more than 1200 links. A mixture of ATM high-speed, E1 ATM high-speed, and low-speed signaling links is supported. If the addition of either a low-speed signaling link or an ATM high-speed signaling link exceeds the total number of low-speed and ATM high-speed signaling links allowed in the system, the **ent-slk** command is rejected.

HC-MIM and E5-E1T1 cards cannot be used as or with Channel cards. The **e1loc** and **t1loc** parameters cannot be specified for HC-MIM or E5-E1T1 cards.

When a card location is specified in the **loc** parameter for an E1 card, a T1 card, or a Channel card (card type **lime1**, **limt1**, or **limch**), a timeslot (**ts**) must be specified for the link. When a card location is specified for a Channel card (card type **limch**) assigned to an E1 interface, the **e1loc** parameter must be specified. When a card location is specified for a Channel card (card type **limch**) assigned to a T1 interface, the **t1loc** parameter must be specified.

A specific timeslot can be assigned in the **ts** parameter to only one E1 signaling link for the E1 interface that services that timeslot.

A specific timeslot can be assigned in the **ts** parameter to only one T1 signaling link for the T1 interface that services that timeslot.

The **ts** parameter value for a T1 link must be in the range **1-24**.

The **ts** parameter cannot be specified for HC-MIM or E5-E1T1 cards that are used for SE-HSL links (**linkclass=unchan** is specified in the E1 interface definition).

If the E1 interface has CAS multi-framing enabled for an E1 card or a Channel card, timeslot 16 cannot be specified.

When the **e1loc** parameter and the **e1port** parameter are specified together in the command, the **atmtsel** parameter cannot be specified.

If a card location is specified in the **loc** parameter for a Channel card (card type **limch**),

- The card in the location specified by the **e1loc** parameter must be an E1 card (card type **lime1**).
- When a Channel card location is specified in the **loc** parameter, the **e1loc** parameter must be specified to identify the associated E1 card. The specified E1 card must be equipped.
- The port specified in the **e1port** parameter must be equipped with an E1 interface for the card specified in the **e1loc** parameter.
- Port 1 must be specified (**e1port=1**) for the associated E1 card port.
- A Channel card (**e1loc** parameter) must be located on the same shelf with its associated E1 card (**loc** parameter).

If a card location is specified in the **loc** parameter for an E1 card (card type **lime1**),

- The **e1port** parameter can be specified to select either port 1 or port 2 for the E1 interface to service the signaling link on a 2-port E1 card or an E1/T1 MIM card. The default is port 1.
- The **e1port** parameter can be specified to select ports 1 - 8 for the E1 interface to service the signaling link on an HC-MIM or an E5-E1T1 card. The default is port 1.
- The E1 interface for the specified or default port must already be defined (see the **ent-e1** command).

The parameters **t1loc**, **t1port**, and **ts** are allowed only when entering a signaling link for an E1/T1 MIM used as a T1 or Channel card or for either an HC-MIM card or an E5-E1T1 card used as a T1 card. All V.35 and HSL parameters (**l1mode**, **l2tset**, **atmtsel**, **vci**, **vpi**, **ll**, and **tset**) are invalid when entering **T1** parameters.

If a card location is specified in the **loc** parameter for a T1 Channel card (card type **limch**),

- The card in the location specified by the **t1loc** parameter must be an E1/T1 MIM card used as a T1 card (card type **limt1**).
- When a Channel card location is specified in the **loc** parameter, the **t1loc** parameter must be specified to identify the associated T1 card. The specified T1 card must be equipped.
- The port specified in the **t1port** parameter must be equipped with a T1 interface for the card specified in the **t1loc** parameter.
- Port 1 must be specified (**t1port=1**) for the associated T1 card port.

- A Channel card (**t1loc** parameter) must be located on the same shelf with its associated T1 card (**loc** parameter).

If a card location is specified in the **loc** parameter for a T1 card (card type **limt1**),

- The **t1port** parameter can be specified to select either port 1 or port 2 for the T1 interface to service the signaling link on a 2-port E1 card or an E1/T1 MIM card. The default is port 1.
- The **t1port** parameter can be specified to select ports 1 - 8 for the T1 interface to service the signaling link on an HC-MIM or an E5-E1T1 card. The default is port 1.
- The T1 interface for the specified or default port must already be defined (see the **ent-t1** command).

If a card location is specified in the **loc** parameter for an HC-MIM card,

- A maximum of 64 links can be assigned to one HC-MIM card (see Table A-1).
- Signaling links cannot be assigned to channel-bridged even-numbered ports.
- An even-numbered port that is in channel-bridged to an odd-numbered port cannot be specified for assigning a signaling link.
- The fan feature bit must be turned on before links can be assigned to HC-MIM cards (see the **chg-feat** command). The system verifies that the fan feature bit is on when links **a4-a31** and **b4-b31** are assigned.
- HIPR cards must be in the xy09 and xy10 card locations (x is the frame, y is the shelf) in each shelf that contains one or more HC-MIM cards.

If a card location is specified in the **loc** parameter for an E5-E1T1 card,

- A maximum of 32 links can be assigned to one E5-E1T1 card (see Table A-1).
- Signaling links cannot be assigned to channel-bridged even-numbered ports.
- An even-numbered port that is channel-bridged to an odd-numbered port cannot be specified for assigning a signaling link.
- HIPR cards must be in the xy09 and xy10 card locations (x is the frame, y is the shelf) in each shelf that contains one or more E5-E1T1 cards.

An ANSI link (low-speed link) cannot be assigned to a card that is configured to support Synchronous E1 High Speed links (SE-HSL).

Notes

The **ll** parameter is not available in the SEAS database.

When a signaling link is assigned to a card that is running the **atmansi** application or the **atmitu** application, and the **bps**, **vci**, **vpi**, **e1atmcrc4**, **e1atmsi**, **e1atmsn**, **ll**, **atmsel**, and **lpset** parameters are not specified, the ATM default values are assigned for these parameters.

The MTP Level 2 timers (**l2tset** parameter) are not valid for IP links or for ATM links.

A link is *equipped* when it is physically operational, that is, when the hardware is in place that is needed to support the link .

Signaling Links for 2-port E1 Cards

If you are configuring signaling links for an E1 or Channel card, each signaling link must be associated with a timeslot assigned in the command. Each signaling link/timeslot assigned for an E1

card or a Channel card must be associated with an E1 interface that has been defined for one of the ports on the E1 card (see the **ent-e1** command).

Timeslots and signaling links are defined in the **ent-slk** command by a combination of card location (**loc** parameter), the signaling link that uses the timeslot, the signaling link port (a or b), the timeslot number, and the card location and port for the servicing E1 interface on the E1 card (**e1port** and **e1loc** parameters). Timeslot numbers must be unique to the E1 interface that services the timeslot; that is, the same timeslot cannot be assigned to the same E1 interface for different signaling links.

If the link and timeslot are for a Channel card, the Channel card location is specified in the **loc** parameter, and the associated E1 card is specified in the **e1loc** parameter.

If the link and timeslot are for the E1 card itself, the E1 card location is specified in the **loc** parameter, and the E1 interface port (1 or 2) that will service the link is specified in the **e1port** parameter.

The E1 card can service 2 timeslots assigned to signaling links for itself, and 1-31 timeslots assigned to signaling links for Channel cards on the same shelf. If the E1 card is not servicing any Channel cards, 2 links with associated timeslots can be defined—both on the interface on port 1, both on the interface on port 2, or 1 on the interface on each port. The links for any Channel cards serviced by the E1 card must be serviced by the interface on port 1. Each Channel card can have 1 or 2 links assigned to the E1 interface on port 1, for a total of 16 Channel cards and up to 31 links (Timeslot 0 cannot be used). All links for a Channel card must be assigned to the same E1 card. If the E1 card is servicing any Channel cards, the 2 links for the E1 card itself can be assigned to the interface on port 2 (which cannot service Channel card links and can service only 2 links).

Signaling Links for E1/T1 MIM Cards

One E1/T1 MIM card can be used for E1 card functions or T1 card functions, but not both at the same time. E1 cards and T1 cards can coexist in the same EAGLE 5 ISS.

If you are configuring signaling links for an E1, T1, or Channel card, each signaling link must be associated with a timeslot assigned in the command. Each signaling link/timeslot assigned for an E1, T1, or Channel card must be associated with an E1 or T1 interface that has been defined for one of the ports on the E1/T1 MIM card (see the **ent-e1** or **ent-t1** command).

Timeslots and signaling links are defined in the **ent-slk** command by a combination of card location (**loc** parameter), the signaling link that uses the timeslot, the signaling link port (**a**, **a1**, **a2**, **a3**, **b**, **b1**, **b2**, or **b3**), the timeslot number, and the card location and port for the servicing E1 or T1 interface on the E1 or T1 card (**e1loc** and **e1port** or **t1loc** and **t1port** parameters). Timeslot numbers must be unique to the E1 or T1 interface that services the timeslot; that is, the same timeslot cannot be assigned to the same E1 or T1 interface for different signaling links.

If the link and timeslot are for a Channel card, the Channel card location is specified in the **loc** parameter, and the associated E1 or T1 card is specified in the **e1loc** or **t1loc** parameter.

If the link and timeslot are for the E1 or T1 card itself, the E1 or T1 card location is specified in the **loc** parameter, and the E1 or T1 interface port (1 or 2) that will service the link is specified in the **e1port** or **t1port** parameter.

The E1/T1 MIM used as an E1 card can service 8 timeslots assigned to signaling links for itself, and 1-31 timeslots assigned to signaling links for Channel cards on the same shelf. If the E1 card is not servicing any Channel cards, 8 links with associated timeslots can be defined—all on the interface on port 1, all on the interface on port 2, or some on the interface on each port. If the E1 card is servicing Channel card links, the links for the E1 card itself can be assigned either to the port 1 interface or the port 2 interface. But for each E1 link assigned to the port 1 interface, the number of links is decreased by one that can be assigned to that port interface for a Channel card. All links for any Channel cards serviced by an the E1 card must be serviced by the interface on port 1. Each Channel card can have up to 8 links assigned to the E1 interface on port 1, for a total of up to 31 links (Timeslot 0 cannot be used). used.) All links for a Channel card must be assigned to the same E1

card. If the E1 card is servicing any Channel cards, the 8 links for the E1 card itself can all be assigned to the interface on port 2 (which cannot service Channel card links and can service only 8 links).

The E1/T1 MIM used as a T1 card can service 8 timeslots assigned to signaling links for itself, and 1-24 timeslots assigned to signaling links for Channel cards on the same shelf. If the T1 card is not servicing any Channel cards, 8 links with associated timeslots can be defined—all on the interface on port 1, all on the interface on port 2, or some on the interface on each port. If the T1 card is servicing Channel card links, the links for the T1 card itself can be assigned either to the port 1 interface or the port 2 interface. But for each T1 link assigned to the port 1 interface, the number of links is decreased by one that can be assigned to that port interface for a Channel card. All links for any Channel cards serviced by the T1 card must be serviced by the interface on port 1. Each Channel card can have up to 8 links assigned to the T1 interface on port 1, for a total of up to 24 links. All links for a Channel card must be assigned to the same T1 card. If the T1 card is servicing any Channel cards, the 8 links for the T1 card itself can all be assigned to the interface on port 2 (which cannot service Channel card links and can service only 8 links).

Signaling Links for HC-MIM Cards

An HC-MIM card can be used for E1 card functions or T1 card functions, but not both at the same time. E1 cards and T1 cards can coexist in the same EAGLE 5 ISS.

Each signaling link for an E1 card or a T1 card must be associated with a timeslot assigned in the **ent-slk** command. Each signaling link and timeslot assigned for an E1 card or a T1 card must be associated with an E1 or T1 interface that has been defined for one of the ports on the HC-MIM card (see the **ent-e1** command or the **ent-t1** command).

Timeslots and signaling links are defined in the **ent-slk** command by a combination of card location (**loc** parameter), the signaling link that uses the timeslot (**a**, **a 1-a31**, **b**, **b1-b31**), the timeslot number (**ts**), and the port for the servicing E1 or T1 interface on the E1 or T1 card (**e1port** or **t1port** parameter). Timeslot numbers must be unique to the E1 or T1 interface that services the timeslot; that is, the same timeslot cannot be assigned to the same E1 or T1 interface for more than one signaling link.

Each HC-MIM used as an E1 card can have up to 64 signaling links assigned to the card. Each E1 interface on an HC-MIM card can service 1-31 timeslots.

Each HC-MIM used as a T1 card can have up to 64 signaling links assigned to the card. Each T1 interface on an HC-MIM card can service 1-24 timeslots.

Signaling Links for E5-E1T1 Cards

An E5-E1T1 card can be used for E1 card functions or T1 card functions, but not both at the same time. E1 cards and T1 cards can coexist in the same EAGLE 5 ISS.

Each signaling link for an E1 card or a T1 card must be associated with a timeslot assigned in the **ent-slk** command. Each signaling link and timeslot assigned for an E1 card or a T1 card must be associated with an E1 or T1 interface that has been defined for one of the ports on the E5-E1T1 card (see the **ent-e1** command or the **ent-t1** command).

Timeslots and signaling links are defined in the **ent-slk** command by a combination of card location (**loc** parameter), the signaling link that uses the timeslot (**a**, **a 1-a15**, **b**, **b1-b15**), the timeslot number (**ts**), and the port for the servicing E1 or T1 interface on the E1 or T1 card (**e1port** or **t1port** parameter). Timeslot numbers must be unique to the E1 or T1 interface that services the timeslot; that is, the same timeslot cannot be assigned to the same E1 or T1 interface for more than one signaling link.

Each E5-E1T1 used as an E1 card can have up to 32 signaling links assigned to the card. Each E1 interface on an E5-E1T1 card can service 1-31 timeslots.

Each E5-E1T1 used as an T1 card can have up to 32 signaling links assigned to the card. Each T1 interface on an E5-E1T1 card can service 1-24 timeslots.

Output

```
ent -
slk:loc=1201:link=a:slc=3:lsn=c1201001:l2tset=3:l1mode=dte:bps=64
000:ecm=basic
      rlgncxa03w 05-02-07 11:11:28 EST  EAGLE5 33.0.0
      ENT-SLK: MASP A - COMPLTD
;
```

ent-spc

Enter Secondary Point Code

Use this command to enter an SPC (secondary point code) into the database.

Keyword: ent-spc

Related Commands: dlt-spc, rtrv-spc

Command Class: Database Administration

Parameters

:spc= (mandatory)

ANSI point code with subfields network indicator-network cluster-network cluster member (*ni-nc-ncm*).

Synonym: spca

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001–005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006–255.

The point code 000-000-000 is not a valid point code.

:spc/spca/spci/spcn/spcn24= (mandatory)

Secondary point code.

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:spci= (mandatory)

ITU international secondary point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

:spcn= (mandatory)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:spcn24= (mandatory)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

Example

The following example adds a secondary point code:

ent - spc : spc=10 - 20 - 30

The following example adds a 24-bit ITU-N secondary point code:

ent - spc : spcn24=99 - 99 - 99

The following example adds a spare ITU-N secondary point code:

ent - spc : spcn=s - 12345

Dependencies

The Spare Point Code Support feature must be enabled before a spare point code (prefix *s-*) can be specified in the command.

The specified secondary point code must be a full point code. A *full point code* contains numerical values for all three segments of the point code.

The point code **0-0-0** is not a valid ANSI or ITU-I secondary point code.

The specified secondary point code to be added must not already exist as a secondary point code.

A maximum of 40 secondary point codes may be defined.

The MPC feature must be turned on before a secondary point code can be added using this command.

The specified secondary point code must not already exist as a destination or an alias in the Destination table.

The specified secondary point code cannot match an existing true point code or capability point code in the Site Identification table.

Notes

If the **spcn** parameter is specified, its format must match the format that was assigned with the **chg-stpopts:npcfmt** parameter.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-).

Output

ent - spc : spc=10-20-30

```
rlghncxa03w 04-02-18 08:50:12 EST  EAGLE 31.3.0
Secondary Point Code table is (7 of 40) 17% full
ENT-SPC: MASP A - COMPLTD
```

;

ent-split-npa**Enter Split NPANXX**

Use this command to force two different NPANXXs to reference the same last 4-digit telephone number (TN) in the database. During this time, updates to either NPANXX will update the same last 4-digit entry of a 10-digit ported TN. All existing NPANXX data is copied automatically to the new NPANXX for the split.

NOTE: This command is obsolete.

NOTE: If the LNP ELAP Configuration feature is turned on, this command is no longer available. This function can be performed at the LSMS or using the ELAP user interface.

Keyword: ent-split-npa

Related Commands: dlt-split-npa, rtrv-split-npa

Command Class: LNP Database

Parameters

:nnpanxx= (mandatory)

New numbering plan area.

Range: 6 digits

:npnxx= (mandatory)

Numbering plan area.

Range: 6 digits

Example

ent-split-npa:npnxx=214254:nnpanxx=972254

Dependencies

The LNP feature must be turned **on** (see the **enable-ctrl-feat** command) before this command can be entered.

The NPANXX must not already be split.

Notes

The maximum number of NPANXX entries allowed is 150,000.

Output

```
ent-split-npa:npa:npa=214254:nnpanxx=972254
rlghncxa03w 04-02-18 08:50:12 EST EAGLE 31.3.0
ENT-SPLIT-NPA: MASP A - COMPLTD
;
```

ent-srvsel**Enter Service Selector**

Use this command to assign the applicable service selectors required to specify a service entry for DSM services.

Keyword: ent-srvsel

Related Commands: chg-srvsel, dlt-srvsel, rtrv-srvsel

Command Class: Database Administration

Parameters

:gti/gtia/gtii/gtin/gtin24= (mandatory)

Global title indicator. For all service selector commands, the domain is defined as **gti** and **gtia** (ANSI), **gtii** (ITU international), and **gtin** (ITU national). For the service selector commands, **gti** and **gtia** are equivalent.

Range: Supported value for ANSI: **gti=2** and **gtia=2**
Supported values for ITU: **gtii= 2, 4 ; gtin= 2, 4 ; gtin24 = 2, 4**

:serv= (mandatory)

DSM service.

NOTE: The **gport** service cannot be used for Prepaid SMS Intercept; use the **smsmr** service. The **gport** service cannot be used for Portability Check for Mobile Originated SMS; use the **mnpsms** service.

Range: **eir, gflex, gport, inpq, inpmr, mnpsms, smsmr, idps, idpr**

eir — Equipment Identity Register

gflex — GSM flexible numbering

gport — GSM number portability

inpq — INP query

inpmr — INP message relay

mnpsms — Portability Check for Mobile Originated SMS

smsmr — Prepaid SMS Intercept

idps — IDP Screening for Prepaid

idpr — Prepaid IDP Query Relay

:ssn= (mandatory)

Subsystem number.

Range: **10-255 ***

:tt= (mandatory)

Translation type.

Range: **10-255**

:nai= (optional)

Nature of Address indicator. The Nature of Address indicator can be specified by supplying either a mnemonic value (**nai** parameter) or an explicit numeric value (**naiv** parameter). Either the **nai** parameter or the **naiv** parameter, but not both, can be specified in the command. Table A-5 shows the mapping between the **naiv** and the **nai** parameter values.

Range: **1sub, rsvd, natl, intl**

:naiv= (optional)

Nature of Address indicator value. The Nature of Address indicator can be specified by supplying either a mnemonic value (**nai** parameter) or an explicit numeric value (**naiv** parameter). Either the **nai** parameter or the **naiv** parameter, but not both, can be specified in the command. Table A-5 shows the mapping between the **naiv** and the **nai** parameter values.

Range: 0 -127

:np= (optional)

Numbering Plan. The numbering plan can be specified by supplying either a mnemonic value (**np** parameter) or an explicit numeric value (**npv** parameter). Either the **np** parameter or the **npv** parameter, but not both, can be specified in the command. Table A-6 shows the mapping between the **npv** and the **np** parameter values.

Range: 1e164, generic, x121, f69, e210, e212, e214, private

:npv= (optional)

Numbering Plan value. The numbering plan can be specified by supplying either a mnemonic value (**np** parameter) or an explicit numeric value (**npv** parameter). Either the **np** parameter or the **npv** parameter, but not both, can be specified in the command. Table A-6 shows the mapping between the **npv** and the **np** parameter values.

Range: 10-15

:snai= (optional)

The service nature of address indicator.

Range: 1sub, natl, intl, rnidn, rnndn, rnsdn, ccrndn

natl — National significant number

intl — International number

rnidn — Routing number prefix and international dialed/directory number

rnndn — Routing number prefix and national dialed/directory number

rnsdn — Routing number prefix and subscriber dialed/directory number

ccrndn — Country code, routing number, and national directory number

sub —Subscriber number

:snp= (optional)

The service numbering plan.

Range: 1e164, e212, e214

Example

```
ent-srvsel:gtia=2:tt=9:snp=e212:snai=natl:serv=gflex
```

```
ent-srvsel:gtia=2:tt=10:snp=e164:snai=intl:serv=gflex
```

```
ent-srvsel:gtia=2:tt=253:snp=e214:snai=intl:serv=gflex
```

```
ent-srvsel:gtin=4:tt=0:npv=10:naiv=125:serv=inq
```

```
ent-
```

```
srvsel:gtin=4:tt=9:np=e214:nai=natl:snp=e164:snai=intl:serv=gflex
```

```
ent-
```

```
srvsel:gtii=4:tt=0:np=e164:nai=sub:snp=e164:snai=rnsdn:serv=inpnr
```

```
ent-
```

```
srvsel:gtii=4:tt=10:npv=10:naiv=125:snp=e164:snai=rnndn:serv=inqq
```

```
ent-
```

```
srvsel:gtii=4:tt=0:np=e164:nai=intl:serv=gport:snai=intl:snp=e164
```

```
ent-
```

```
srvsel:gtii=4:tt=0:np=e164:nai=128:serv=gport:snai=rnidn:snp=e164
```

```

ent-
srvsel:gtin24=4:tt=4:np=e164:nai=intl:serv=gport:snp=e164:snai=intl
ent-srvsel:gtii=4:tt=20:np=e164:nai=intl:serv=eir:ssn=*
ent-srvsel:gtii=4:tt=20:np=e164:nai=intl:serv=idpr:ssn=*
ent-
srvsel:gtin24=4:tt=4:np=e164:nai=intl:serv=gport:snp=e164:snai=intl:ssn=9
ent-srvsel:gtii=4:tt=4:np=e164:nai=intl:serv=eir:ssn=11
ent-
srvsel:gtii=4:tt=4:np=e164:nai=intl:serv=smsmr:snp=e164:snai=intl:ssn=10
ent-
srvsel:gtii=4:tt=4:np=e164:nai=intl:serv=mnpsms:snp=e164:snai=intl:ssn=255
ent-
srvsel:gtin=4:tt=9:np=e214:nai=natl:snp=e164:snai=intl:serv=gflex:ssn=250
ent-
srvsel:gtin=4:tt=100:np=e214:nai=natl:snp=e164:snai=intl:serv=gflex:ssn=*
ent-srvsel:gtii=4:tt=20:np=e164:nai=intl:serv=eir:ssn=*

```

Dependencies

The G-Flex feature must be turned on before the **serv=gflex** parameter can be specified.

The INP feature must be turned on before the **serv=inpqr** or **serv=inpq** parameter can be specified.

The G-Port feature must be turned on before the **serv=gport** parameter can be specified.

The Prepaid SMS Intercept Phase 1 feature must be turned on before the **serv=smsmr** parameter can be specified.

The Portability Check for Mobile Originated SMS feature must be turned on before the **serv=mnpsms** parameter can be specified.

The Equipment Identity Register (EIR) feature must be turned on before the **serv=eir** parameter can be specified.

The **np** and **npv** parameters cannot be specified together in the command.

The **nai** and **naiv** parameters cannot be specified together in the command.

The value **4** is not valid for the **gtia** parameter.

The values **1** and **3** are not valid for the **gti/gtia/gtii/gtin/gtin24** parameters.

When the **gti/gtia/gtii/gtin/gtin24=2** parameter is specified, no **np(v)** and **nai(v)** parameter combinations can be specified.

When the **gtii/gtin/gtin24=4** parameter is specified, an **np(v)** and **nai(v)** parameter combination must be specified. The parameters can be specified in these combinations: **np** and **naiv**, **npv** and **nai**, **np** and **nai**, or **npv** and **naiv**.

When the **serv** parameter value is **inpqr**, **inpq**, **gport**, **eir**, **mnpsms**, or **smsmr**, the **gtia** and **gti** parameters cannot be specified.

When the **serv=inpqr** parameter is specified, the **snp=e164** parameter must be specified.

When the **serv=inpq** parameter is specified, the **gtii** parameter cannot be specified.

When the **serv=gport** parameter is specified, the **gti/gtia** parameter cannot be specified.

When the **snai** parameter value **rnidn**, **rnndn**, or **rnsdn** is specified, a **serv** parameter value of **inpmr**, **gport**, **smsmr**, or **mnpsms** must be specified.

When the **serv** parameter value **gflex**, **gport**, **inpmr**, **mnpsms**, or **smsmr** is specified, the **snai** and **snp** parameters must be specified.

When the **serv** parameter value **inpq**, **idpr**, or **eir** is specified, the **snai** and **snp** parameters cannot be specified.

When the **snai=ccrndn** parameter is specified, the **serv** parameter value **gport**, **mnpsms**, or **smsmr** must be specified.

When the **serv** parameter value **gport**, **mnpsms**, or **smsmr** is specified, the **snp=e164** parameter must be specified.

An entry must not already exist that matches the new **gti/gtii/gtin/gtin24**, **tt**, **ssn**, **np(v)**, and **nai(v)** combination of parameters.

For the specified **gti/gtia/gtii/gtin**, **tt**, **np(v)**, **nai(v)**, and **ssn=*** parameters, an entry matching a specific **ssn** cannot already exist.

For the specified **gti/gtia/gtii/gtin**, **tt**, **np(v)**, **nai(v)**, and **ssn** parameters, an entry matching the **ssn=*** parameter cannot already exist.

An ITU Service Selector cannot be entered when the **ansigflex** STP option is enabled (see the **chg-stpotps** command)

The IDP Screening for Prepaid feature must be on before the **serv=idps** parameter can be specified.

When the **serv=idps** parameter is specified, supported mandatory parameters are **tt** , **serv** , **ssn** , **gtin** and **gtii** . Supported optional parameters are **np** and **nai** .

The Prepaid IDP Query Relay feature must be turned on before the **serv=idpr** parameter can be specified.

When the **serv=idpr** parameter is specified, the only valid mandatory service parameters are **tt**, **serv**, **ssn**, **gtii** and **gtin**. When the **serv=idpr** parameter is specified, the only valid optional parameters are **np** and **nai**.

Notes

Table 5-48 provides examples of acceptable and unacceptable parameter combinations for the **ent-srvsel** command:

Table 5-48. Examples of **ent-srvsel** Parameter Combinations

Command	Comments
ent-srvsel:gtii=2:tt=123:snai=natl:snp=e164:serv=gflex	Acceptable parameter combination
ent-srvsel:gtii=2:tt=123:np=e164: nai=intl:snai=natl:snp=e164 :serv=gflex	np(v) and nai(v) must not be specified when gtix=2

Table 5-48. Examples of **ent-srvsel** Parameter Combinations

Command	Comments
ent-srvsel:gtii=2:tt=123:npv=2: naiv=13:snai=natl:snp=e164 :serv=gflex	np(v) and nai(v) must not be specified when gtix=2
ent-srvsel:gtii=4:tt=123:snai=natl:snp=e164:serv=gflex	np(v) and nai(v) must be specified when gtii/n=4
ent-srvsel:gtii=4:tt=123:np=e164: snai=natl:snp=e164:serv=gflex	np(v) and nai(v) must be specified when gtii/n=4
ent-srvsel:gtii=4:tt=123:naiv=13: snai=natl:snp=e164:serv=gflex	np(v) and nai(v) must be specified when gtii/n=4
ent-srvsel:gtii=4:tt=123:np=e164:nai=sub:snai=natl:snp=e164:npv=2 :serv=gflex	np and npv must not be specified together
ent-srvsel:gtii=4:tt=123:nai=intl:naiv=13:np=e164:snai=natl:snp=e164 :serv=gflex	nai and naiv must not be specified together
ent-srvsel:gtii=4:tt=123:nai=intl:np=e164:snai=natl:snp=e164 :serv=gflex	Acceptable parameter combination
ent-srvsel:gtii=4:tt=123:naiv=13:npv=2:snai=natl:snp=e164:serv=gflex	Acceptable parameter combination

Output

```
ent-srvsel:gtia=2:tt=9:snp=e212:snai=natl:serv=gflex
rlghncxa03w 04-01-05 16:40:40 EST EAGLE 31.3.0
Service Selector table is (114 of 1024) 11% full
ENT-SRVSEL: MASP A - COMPLTD
;
```

ent-ss-appl**Enter Subsystem Application**

Use this command to reserve a subsystem number for an application and set the application status to be online or offline. You can define only one subsystem per application. The application must be unique.

Keyword: ent-ss-appl

Related Commands: chg-ss-appl, dlt-ss-appl, rtrv-ss-appl

Command Class: Database Administration

Parameters

:appl= (mandatory)

Application type.

Range: lnp, inp, eir

:ssn= (mandatory)

Primary subsystem number.

Range: 2-255

:stat= (optional)

Status.

Range: offline, online

Default: offline

Example

```
ent-ss-appl: appl=lnp:ssn=16:stat=online
```

```
ent-ss-appl: appl=inp:ssn=15:stat=offline
```

```
ent-ss-appl: appl=eir:ssn=11:stat=offline
```

Dependencies

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before the **ent-ss-appl:appl=lnp** command can be entered.

The INP feature must be turned on before the **ent-ss-appl:appl=inp** command can be entered.

The Equipment Identity Register (EIR) feature must be turned on before the **ent-ss-appl:appl=eir** command can be entered.

The specified application (**appl** parameter) must not already be assigned.

The maximum number of applications must not already be assigned.

For LNP, the STP true point code and LNP subsystem must exist in the MAP table.

For INP, the STP true point code and INP subsystem must exist in the MAP table.

For EIR, the STP true point code and EIR subsystem must exist in the MAP table.

Notes

If not specified, the application subsystem status defaults to **offline**. When the application is **offline**, the application subsystem is down.

The LNP application status applies to both message relay and LNP query.

Output

```
ent-ss-appl:appl=lnp:ssn=16:stat=online
rlghncxa03w 04-01-05 16:40:40 EST EAGLE 31.3.0
ENT-SS-APPL: MASP A - COMPLTD
;
```

ent-subnetid

Enter Subnet ID

Use this command to enter elements into the Subnet ID list, for the ISUP NP with EPAP feature. Each entry is identified by the Subnet ID and the Subnet number.

The Subnet ID length (**subnetidlen** parameter) must be entered first, before the command is entered the second time to enter the Subnet ID and Subnet Number.

Keyword: ent-subnetid

Related Commands: dlt-subnetid, rtrv-subnetid

Command Class: Database Administration

Parameters

:subnetid= (optional)

Vendor Subnet ID

Range: 1-15 digits

This number must contain the number of digits defined by the **subnetidlen** parameter value.

Valid digits are **0-9, a-f, A-F**.

:subnetidlen= (optional)

Subnet ID Length.

Range: 1-15

All Subnet IDs defined for the ISUP NP with EPAP feature must contain this number of digits.

:subnetnum= (optional)

Subnet Number. The Subnet Number is used as a reference to the prefix number for the ISUP NP with EPAP feature.

Range: 1-5

1—Corresponds to the prefix defined with prefix number 1 (see the **chg-prefix** command).

2—Corresponds to the prefix defined with prefix number 2 (see the **chg-prefix** command).

3—Corresponds to the prefix defined with prefix number 3 (see the **chg-prefix** command).

4—Corresponds to the prefix defined with prefix number 4 (see the **chg-prefix** command).

5—Corresponds to the prefix defined with prefix number 5 (see the **chg-prefix** command).

Example

```
ent-subnetid:subnetidlen=6
```

```
ent-subnetid:subnetid=886933:subnetnum=1
```

Dependencies

The value **none** cannot be specified for the **subnetid** parameter.

The ISUP NP with EPAP feature must be enabled before this command can be entered.

The SUBNETID table can contain a maximum of 50 entries.

The specified ID entry cannot already exist in the SUBNETID table.

All SUBNETID table entries must have the number of digits defined by the **subnetidlen** parameter value.

The prefix with the same prefix number as the specified Subnet Number must already be provisioned for the ISUP NP with EPA feature.

The Subnet ID length cannot be changed unless the SUBNETID table is empty. All Subnet IDs must be deleted from the table before a different Subnet ID length can be entered.

The Subnet ID length must be entered before any Subnet IDs can be defined.

The **subnetidlen** parameter cannot be specified in the same command with the **subnetid** and **subnetnum** parameters.

Either the **subnetidlen** parameter, or the **subnetid** and **subnetnum** parameters can be specified in one command.

Notes

None.

Output

The Subnet ID length must be entered first.

```
ent-subnetid:subnetidlen=6
  rlghncxa03w 04-10-07 11:11:28 EST  EAGLE 31.11.0
  ENT-SUBNETID: MASP A - COMPLTD
;
```

The first Subnet ID and Subnet number can be entered after the Subnet ID length has been entered.

```
ent-subnetid:subnetid=886933:subnetnum=1
  rlghncxa03w 04-10-07 11:11:28 EST  EAGLE 31.11.0
  VENDID table is (6 of 50) 11% full
  ENT-SUBNETID: MASP A - COMPLTD
;
```

ent-t1

Enter T1 Interface

Use this command to enter an interface for an E1/T1 MIM card, an HC-MIM card, or an E5-E1T1 card used as a T1 card. The T1 port number on the card and the T1 card location in the EAGLE 5 ISS must be specified.

Framing, line length, encoding, master/slave clocking options, and the signaling bit setting can be specified.

On an HC-MIM or E5-E1T1 card, T1 ports 1, 3, 5, and 7 (master ports) can be independently channel bridged with their adjacent even-numbered (slave) T1 ports 2, 4, 6, and 8 to allow non-signaling data pass-through. Any of the 8 ports on an HC-MIM or E5-E1T1 card can be specified.

Keyword: **ent-t1**

Related Commands: **chg-t1, dlt-t1, rtrv-t1, tst-t1**

Command Class: Database Administration

Parameters

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

:t1port= (mandatory)

T1 card port number. The value must be a T1 port for which an interface has not been configured on the specified T1 card.

Range: 1-8

Ports 3 through 8 can be specified only for HC-MIM and E5-E1T1 cards.

:chanbrdg= (optional)

Indicates whether an odd numbered port on an HC-MIM or E5-E1T1 card is channel bridged with its adjacent even numbered port for non-signaling data pass through.

Range: on, off

Default: off

:encode= (optional)

Indicator for use of B8ZS or AMI encoding/decoding.

Range: b8zs, ami

Default:

:framing= (optional)

Indicator for framing format.

Range: sf, esf

Default:

:ll= (optional)

T1 cable length in feet between the EAGLE 5 ISS and the connecting node.

Range: 0-655

Default: 133

:t1tsel= (optional)

Timing source. Indicates master (external) or slave (line) timing source, or timing source recovered from the paired master port for the channel bridged slave port.

Range: line, external, recovered

Default: line

Example

ent -

t1: loc=1205:t1port=1:encode=ami:t1tsel=external:framing=sf:ll=100

ent-t1: loc=1205:t1port=2:encode=b8zs:t1tsel=external:framing=esf

ent-t1: loc=1203:t1port=1:chanbrdg=on:t1tsel=recovered

ent-t1: loc=1203:t1port=3:chanbrdg=on:t1tsel=external

Dependencies

The specified card location (**loc** parameter) must be equipped.

The card specified by the **loc** parameter must be a **limt1** card type.

The port specified by the **t1port** parameter must not be already equipped with a T1 interface.

The **chanbrdg=on** parameter can be specified only for HC-MIM and E5-E1T1 cards.

The **chanbrdg=on** parameter cannot be specified for even-numbered T1 ports (**t1port** parameter).

The timing source parameter **t1tsel** must be specified if the **chanbrdg=on** parameter is specified.

The **t1tsel=line** parameter cannot be specified for a T1 port (**t1port** parameter) when the **chanbrdg=on** parameter is specified.

The **t1tsel=recovered** parameter cannot be specified for a T1 port (**t1port** parameter) unless the **chanbrdg=on** parameter is specified.

When provisioning an odd-numbered T1 port (**t1port** parameter) on an HC-MIM or E5-E1T1 card to channel bridging mode using the **chanbrdg=on** parameter, the **force=yes** parameter must be specified if the adjacent even-numbered port is already provisioned with a T1 interface.

All signaling links assigned to adjacent even-numbered T1 ports must be deleted before an odd-numbered T1 port (**t1port** parameter) on an HC-MIM or E5-E1T1 card can be provisioned into channel bridging mode using the **chanbrdg=on** parameter. See the **dlt-slk** command to delete the signaling links.

The fan feature bit must be on before HC-MIM cards can be used in an EAGLE 5 ISS shelf (see the **chg-feat** command). The system checks the fan feature bit when T1 ports **3 - 8** (**t1port** parameter) or **chanbrdg=on** parameter is specified and an HC-MIM card is present in the specified odd card location (**loc** parameter).

HIPR cards must be equipped in card locations xy09 and xy10 (x is the frame, y is the shelf) on each EAGLE 5 ISS shelf that contains one or more HC-MIM or E5-E1T1 cards. The system checks for HIPR cards when T1 ports **3 - 8** (**t1port** parameter) or **chanbrdg=on** parameter is specified for HC-MIM and E5-E1T1 cards.

T1 ports **3 - 8** (**t1port** parameter) can be specified only for HC-MIM and E5-E1T1 cards.

Notes

One or two T1 interfaces must be defined on an E1/T1 MIM card used as a T1 card after the T1 and any associated Channel card types (**limt1** and **limch**) are defined in the database (with the **ent-card** command), and before the signaling links and associated timeslots are defined for the T1 card and any associated Channel cards (with the **ent-slk** command).

External timing is derived from the EAGLE 5 ISS High-Speed Master Clock (1.544 MHz for T1 or 2.048 MHz for E1); therefore, the Master Timing feature is required. Line timing is derived from its received data stream, if present.

Up to 8 T1 interfaces can be defined on an HC-MIM or E5-E1T1 card used as a T1 card after the T1 card type (**limt1**) is defined in the database (with the **ent-card** command), and before the signaling links and associated timeslots are defined for the T1 card.

On a HC-MIM or E5-E1T1 card, T1 ports 1, 3, 5, and 7 (master ports) can be independently channel bridged with their adjacent even-numbered (slave) ports 2, 4, 6, and 8 to allow non-signaling data pass-through. The **chanbrdg** parameter must be specified for the odd-numbered T1 port.

Output

```
ent -
t1:loc=1205:t1port=1:encode=ami:t1tsel=external:framing=sf:ll=100
    rlgncxa03w 04-02-20 09:07:58 EST EAGLE 31.3.0
    ENT-T1: MASP A - COMPLTD
;
```

ent-tt

Enter Translation Type

Use this command to add a translation type to the system database.

NOTE: If the EGTT (Enhanced Global Title Translation) feature is turned on in the system, the system will no longer accept GTT (Global Title Translation) and TT (Translation Type) commands. Refer to the new command sets that replace the GTT and TT commands: GTT Selector commands (ent/chg/dlt/rtrv-gttset), GTT Set commands (ent/dlt/rtrv-gttset), and GTA commands (ent/chg/dlt/rtrv-gta).

Keyword: ent-tt

Related Commands: dlt-tt, rtrv-tt

Command Class: Database Administration

Parameters

:type/typea/typei/typen/typen24= (mandatory)

A translation type numeric value may be entered as ANSI type (**type** or **typea**) and also as an ITU type (**typei** or **typen**). However, they are separate entities.

Range: 000-255

Default: No translation type is specified

:alias= (optional)

The alias of the global title translation type

Range: 000-255

Default: No alias assignment is made.

:ndgt= (optional)

The number of digits contained in the global title translation. This parameter is not valid if the VGTT (variable length GTT) feature is turned on.

Range: 1-21

Default: 6

(not applicable if the VGTT feature is on)

:ttn= (optional)

Translation type name.

Range: ayyyyyyyyy

1 alphabetic character followed by up to 7 alphanumeric characters

Default: No translation name is given

Example

ent-tt:type=230:ttn=lidb:ndgt=5

ent-tt:type=230:ttn=lidb:alias=007

ent-tt:type=2:ndgt=5

ent-tt:type=3

Dependencies

This command is not valid when the EGTT feature is turned on.

Asterisk (*) parameter values are not allowed for this command.

The translation type specified by **type** or **typea** cannot already exist in the database containing the ANSI types. A translation type specified by **typei**, **typen**, or **typen24** cannot already exist in the database containing the ITU types.

The translation name cannot already exist in either the ANSI or ITU database.

If an alias is specified, the translation type must be specified and must already exist in the database for the network type. If the translation name is specified when defining an alias, the name must already be associated with the translation type.

The translated signaling point code must be a full point code (*ni-nc-ncm*).

The translated signaling point code must have been specified previously as a full point code destination, or it must be a member of a previously specified cluster.

The **alias** parameter and the **ndgt** parameter cannot be specified together in the command.

If an alias is specified, the **alias** value cannot already be defined as either a translation type or an alias for the respective (ANSI or ITU) type.

The translation type name must be unique.

The **ndgt** parameter is not valid if the VGTT (variable length GTT) feature is turned on.

Notes

The new translation type is entered into the translation type table along with the translation name and the number of digits used by the translation type.

The **ttn** parameter always refers to a translation type. Aliases do not have translation type names.

Output

```
ent -
t1:loc=1205:t1port=1:encode=ami:t1tsel=internal:external:framing=s
f:ll=100
    rlgncxa03w 04-01-07 11:43:04 EST  EAGLE 31.3.0
    ENT-TT: MASP A - COMPLTD
;
```

ent-ttmap

Enter Translation Type Mapping

Use this command to add a mapped SS7 message translation type (TT) for a given gateway linkset name. With this command you can add to the database the identification of the type of allowed global title translation in the SS7 message before and after translation type mapping. For example, you can use this command to add to the database that you want the SS7 message translation type 001 (before TT mapping) mapped to 254 (after TT mapping).

Keyword: ent-ttmap

Related Commands: chg-ttmap, dlt-ttmap, rtrv-ttmap

Command Class: Database Administration

Parameters

:ett= (mandatory)

Translation type before mapping. The identification of the type of global title translation in the SS7 message *before* translation type mapping. This attribute is the decimal representation of the 1-octet binary field used by the SS7 protocol to identify the translation type.

Range: 000-255

:io= (mandatory)

Incoming or outgoing. The system uses this parameter to indicate whether the translation type mapping data provisioned for the gateway linkset is for SS7 messages *received* or *sent* on the linkset.

Range: i, o
i — incoming
o — outgoing

:lsn= (mandatory)

Linkset name. The unique network identifier for the gateway linkset.

Range: ayyyyyyyyy
1 alphabetic character followed by 9 alphanumeric characters

:mtt= (mandatory)

Mapped translation type. The identification of the type of global title translation in the SS7 message *after* translation type mapping. This attribute is the decimal representation of the 1-octet binary field used by the SS7 protocol to identify the translation type.

Range: 000-255

Example

```
ent-ttmap:lsn=nc001:io=i:ett=128:mtt=16
```

Dependencies

The linkset must be defined.

The Translation Type Mapping table must not be full for the linkset specified in the **lsn** parameter.

Notes

None

Output

```
ent-ttmap:lsn=nc001:io=i:ett=128:mtt=16
rlghncxa03w 04-02-21 13:09:27 EST EAGLE 31.3.0
ENT-TTMAP: MASP A - COMPLTD

TTMAP table for nc001 is (2 of 64) 3% full
;
```

ent-user

Enter User

Use this command to add a user to the database. When you first enter the command, the system prompts you for the user's password, which must follow the administered password guidelines. For security reasons, the password is not displayed. After successfully entering a user password, you are prompted to verify it by entering it again.

Keyword: ent-user

Related Commands: act-user, chg-pid, chg-user, dact-user, dlt-user, login, logout, rept-stat-user, rtrv-secu-user, rtrv-user

Command Class: Security Administration

Parameters

:uid= (mandatory)

User ID

Range: azzzzzzzzzzzzzzzz

1 alphabetic character followed by up to 15 alphanumeric characters (including asterisks, single quotes, and commas)

:all= (optional)

Specifies whether or not the user ID is assigned all non-configurable command classes (LINK, SA, SYS, PU, DB, DBG, LNP, LNPDB, LNPSUB).

Range: yes, no

Default: no

:cc1= (optional)

Configurable command class name (*ayy*), and an indicator (**-yes** or **-no**) to specify whether the User ID can enter commands assigned to the specified command class.

Range: ayy

Specify the parameter value in the format *ayy* **-no** or *ayy* **-yes**.

ayy—Configurable command class name of 1 alphabetic character followed by 2 alphanumeric characters

-no—Indicates that the command class is not allowed.

-yes—Indicates that the command class is allowed.

:cc2= (optional)

Configurable command class name (*ayy*), and an indicator (**-yes** or **-no**) to specify whether the User ID can enter commands assigned to the specified command class.

Range: *ayy*

Specify the parameter value in the format *ayy* **-no** or *ayy* **-yes**.

ayy—Configurable command class name of 1 alphabetic character followed by 2 alphanumeric characters

-no—Indicates that the command class is not allowed.

-yes—Indicates that the command class is allowed.

:cc3= (optional)

Configurable command class name (*ayy*), and an indicator (**-yes** or **-no**) to specify whether the User ID can enter commands assigned to the specified command class.

Range: *configmdclassname*, *bool*

configmdclass—; value

bool—; value **yes**, **no**

:cc4= (optional)

Configurable command class name (*ayy*), and an indicator (**-yes** or **-no**) to specify whether the User ID can enter commands assigned to the specified command class.

Range: *ayy*

Specify the parameter value in the format *ayy* **-no** or *ayy* **-yes**.

ayy—Configurable command class name of 1 alphabetic character followed by 2 alphanumeric characters

-no—Indicates that the command class is not allowed.

-yes—Indicates that the command class is allowed.

:cc5= (optional)

Configurable command class name (*ayy*), and an indicator (**-yes** or **-no**) to specify whether the User ID can enter commands assigned to the specified command class.

Range: *ayy*

Specify the parameter value in the format *ayy* **-no** or *ayy* **-yes**.

ayy—Configurable command class name of 1 alphabetic character followed by 2 alphanumeric characters

-no—Indicates that the command class is not allowed.

-yes—Indicates that the command class is allowed.

:cc6= (optional)

Configurable command class name (*ayy*), and an indicator (**-yes** or **-no**) to specify whether the User ID can enter commands assigned to the specified command class.

Range: *ayy*

Specify the parameter value in the format *ayy* **-no** or *ayy* **-yes**.

ayy—Configurable command class name of 1 alphabetic character followed by 2 alphanumeric characters

-no—Indicates that the command class is not allowed.

-yes—Indicates that the command class is allowed.

:cc7= (optional)

Configurable command class name (*ayy*), and an indicator (**-yes** or **-no**) to specify whether the User ID can enter commands assigned to the specified command class.

Range: *ayy*

Specify the parameter value in the format *ayy* **-no** or *ayy* **-yes**.

ayy—Configurable command class name of 1 alphabetic character followed by 2 alphanumeric characters

-no—Indicates that the command class is not allowed.

-yes—Indicates that the command class is allowed.

:cc8= (optional)

Configurable command class name (*ayy*), and an indicator (**-yes** or **-no**) to specify whether the User ID can enter commands assigned to the specified command class.

Range: *ayy*

Specify the parameter value in the format *ayy* **-no** or *ayy* **-yes**.

ayy—Configurable command class name of 1 alphabetic character followed by 2 alphanumeric characters

-no—Indicates that the command class is not allowed.

-yes—Indicates that the command class is allowed.

:db= (optional)

Access to all commands in command class Database Administration.

Range: **yes, no**

Default: **no**

:dbg= (optional)

Access to all commands in command class Debug.

Range: **yes, no**

Default: **no**

:link= (optional)

Access to all commands in command class Link Maintenance.

Range: **yes, no**

Default: **no**

:lnpbas= (optional)

Access to all commands in the command class LNP Basic

Range: **yes, no**

Default: **no**

:lnpdb= (optional)

Access to all commands in the command class LNP Database

Range: **yes, no**

Default: **no**

:lnpsub= (optional)

Access to all commands in the command class LNP Subscription

Range: **yes, no**

Default: **no**

:page= (optional)

The maximum age of the password, in days. The STP automatically prompts the user for a new password at login if the user's password is older than the value specified for the **page** parameter.

Range: 0-999 days

Default: The value specified for the **page** parameter on the **chg-secu-dflt** command

:pu= (optional)

Access to all commands in command class Program Update.

Range: yes, no

Default: no

:revoke= (optional)

Revoke the user ID. The system rejects login attempts for a revoked user ID.

Range: yes, no

Default: no

:sa= (optional)

Access to all commands in command class Security Administration.

Range: yes, no

Default: no

:sys= (optional)

Access to all commands in command class System Maintenance.

Range: yes, no

Default: no

:uout= (optional)

User ID aging interval. The number of successive days a user ID can go unused (that is, no successful login) before the system denies login of that user ID.

Range: 0-999

Default: The value specified for the **uout** parameter on the **chg-secu-dflt** command

Example

```
ent-user:uid=john:db=yes
```

```
ent-user:uid=john*mayer:db=yes
```

```
ent-user:uid=user123:cc5=u21-yes:cc8=u32-yes
```

Dependencies

Passwords cannot be created or modified from a telnet terminal (terminal IDs 17-40) without the OA&M IP Security Enhancements feature turned on.

All new users are given access to the command class Basic as a default.

The specified user ID cannot already exist.

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before the **lnpbas**, **lnpdb**, and **lnpsub** parameters can be specified.

If the **all=yes** parameter is specified, and the LNP feature has not been turned on, the **lnpbas**, **lnpdb**, and **lnpsub** parameter values default to **no**.

The user IDs **seas** or **none** cannot be entered because they are reserved for system use. Up to 100 users can be entered.

The **revoke=yes** parameter cannot be specified for a user ID with system administration authorization.

The Command Class Management feature must be enabled before a configurable command class name can be specified in the **cc1-cc8** parameters.

The **cc1-cc8** parameter values must have valid default or provisioned configurable command class names. Default names are **u01-u32**.

Notes

To disable user ID aging, specify the **uout=0** parameter.

The *Database Administration Manual - System Management* provides a list of all commands allowed within each command class.

Up to 8 configurable command class name parameters can be specified in one command. Additional commands can be entered to assign user access for more than 8 names. To assign user access for all 32 available configurable command class names, four commands could be entered with 8 names specified in each command.

A password must be entered for the newly-created userID. The system issues a separate prompt for this password and disables character echo at the terminal so that the entered password is not displayed on the screen.

After the password has been entered, the system issues a second prompt, and the password must be entered again. This ensures that no typing mistakes were made on the first entry.

Use the following rules for creating passwords:

- A new password cannot contain more than 12 characters.
- A new password must contain at least the number of characters that is specified in the **minlen** parameter of the **chg-secu-dflt** command.
- A new password must contain at least the number of alphabetic (**alpha** parameter), numeric (**num** parameter), and punctuation (**punc** parameter) characters that is specified in the **chg-secu-dflt** command.
- A new password cannot contain the associated user ID.

Output

```
ent-user:uid=john*mayer:db=yes
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
ENT-USER: MASP A - COMPLTD
;
```

ent-vendid

Enter Vendor ID

Use this command to enter elements into the Vendor ID list, for the GSM MAP SRI Redirect to Serving HLR (also called GSM MAP SRI Redirect) feature. Each entry is identified by the Vendor ID and the Vendor number.

The Vendor ID length (**vendidlen** parameter) must be entered first, before the command is entered the second time to enter the Vendor ID and Vendor Number.

Keyword: ent-vendid

Related Commands: dlt-vendid, rtrv-vendid

Command Class: Database Administration

Parameters

:vendid= (optional)
Vendor ID
Range: 1-15 digits

:vendidlen= (optional)

Vendor ID Length. All Vendor IDs defined for the GSM MAP SRI Redirect for Serving HLR feature must contain this number of digits.

Range: **0-15**

:vendnum= (optional)

Vendor Number. The Vendor Number is used as a reference to the prefix for the GSM MAP SRI Redirect for Serving HLR feature.

Range: **1-3**

1—Corresponds to the prefix defined with prefix number 1 (see the **chg-prefix** command).

2—Corresponds to the prefix defined with prefix number 2 (see the **chg-prefix** command).

3—Corresponds to the prefix defined with prefix number 3 (see the **chg-prefix** command).

:vendtype= (optional)

Vendor Type. The Vendor Type is used with the GSM MAP SRI Redirect for Serving HLR feature to allow multiple networks for the same equipment vendor.

Range: **1-2**

Example

```
ent-vendidvend: len=6
```

```
ent-vendid:vendid=886933:vendnum=1:vendtype=1
```

Dependencies

The value **none** cannot be specified for the **vendid** parameter.

The GSM MAP SRI Redirect feature must be enabled before this command can be entered.

The VENDID table can contain a maximum of 200 entries.

The specified ID entry cannot already exist in the VENDID table.

All VENDID table entries must have the number of digits defined by the **vendidlen** parameter value.

The prefix with the same prefix number as the specified Vendor Number must already be provisioned for the GSM MAP SRI Redirect feature.

The Vendor ID length cannot be changed unless the VENDID table is empty. All Vendor IDs must be deleted from the table before a different Vendor ID length can be entered.

The Vendor ID length must be entered before any Vendor IDs can be defined.

The **vendidlen** parameter cannot be specified in the same command with the **vendid**, **vendidlen**, and **vendtype** parameters. Either the **vendidlen** parameter, or the **vendid**, **vendidlen**, and **vendtype** parameters can be specified in one command.

Notes

None.

Output

The Vendor ID length must be entered first, before any Vendor IDs can be entered.

```
ent-vendid:vendidlen=6
  rlghncxa03w 04-10-07 11:11:28 EST EAGLE 31.11.0
  ENT-VENDID: MASP A - COMPLTD
;

ent-vendid:venid=886933:vendnum=1:vendtype=1
  rlghncxa03w 04-10-07 11:11:28 EST EAGLE 31.11.0
  VENDID table is (6 of 200) 3% full
  ENT-VENDID: MASP A - COMPLTD
;
```

ent-x25-dstn**Enter X.25 Destination**

Use this command to associate an X.25 network address with an existing SS7 point code in the routing table, and optionally, a subsystem within that point code. If the node is actually in the X.25 domain, the X.25 address is a real network address and the point code is a dummy point code. If the node is in the SS7 domain, the point code is a real SS7 point code and the X.25 address is a dummy address.

Keyword: ent-x25-dstn

Related Commands: chg-x25-dstn, dlt-x25-dstn, rtrv-x25-dstn

Command Class: Database Administration

Parameters

:dpc= (mandatory)

This parameter is the real SS7 point code assigned to a real SS7 node or the dummy point code for an X.25 destination entity. The value for this parameter is a point code with subfields network indicator-network cluster-network cluster member (*ni-nc-ncm*).

Synonym: dpca

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001-005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006-255.

The point code 000-000-000 is not a valid point code.

:xaddr= (mandatory)

The X.25 network address of the X.25 destination entity or the SS7 node.

Range: 1-15 digits

:ssn= (optional)

The subsystem number of the destination that is assigned to the X.25 address or the SS7 address.

Range: 1-255

Default: 5

Example

```
ent-x25-dstn:xaddr=220525586456772:dpc=133-013-001:ssn=123
```

```
ent-x25-dstn:xaddr=255864567:dpc=033-001-013
```

Dependencies

- Each X.25 address must have at least four digits.
- The DPC must exist in the destination table.
- The X.25 SS7 ANSI destination point code must be a full point code (*ni-nc-ncm*).
- The X.25 address cannot exist in X.25 destination table.
- The maximum number of X.25 destinations is 1024.

Notes

None

Output

```
ent-x25-dstn:xaddr=220525586456772:dpc=133-013-001:ssn=123
rlghncxa03w 04-02-10 11:43:04 EST EAGLE 31.3.0
X.25 DSTN TABLE 45 % FULL
ENT-X25-DSTN: MASP A - COMPLTD
;
```

ent-x25-rte

Enter X.25 Route

Use this command to define the routing parameters needed by the gateway portion of the LIMs with the LIMs with the **ss7gx25** application for establishing a virtual circuit that is permanently maintained by the system STP.

Keyword: ent-x25-rte

Related Commands: chg-x25-rte, dlt-x25-rte, rtrv-x25-rte

Command Class: Database Administration

Parameters

:saddr= (mandatory)

The alias X.25 address assigned to the SS7 destination entity on the SS7 side of the circuit.

Range: 1-15 digits

:type= (mandatory)

The type of X.25 connection that the link is expected to maintain.

Range: pvc, svca, svcr

pvc — Permanent virtual circuit

svca — automatic virtual circuit

svcr — remote virtual circuit

:xaddr= (mandatory)

The X.25 address assigned to the X.25 destination entity on the X.25 side of the circuit.

Range: 1-15 digits

:lc= (optional)

The number of the logical channel on the X.25 signaling link to which the PVC connection is assigned.

This parameter is mandatory if the **type=pvc** parameter is specified. If the **type=svca** or **type=svcr** parameters are specified, the logical channel number is arbitrary and cannot be specified.

Range: 1-255

Default: The logical channel is not given.

:lc2nm= (optional)

Invokes SS7 MTP network management for failures and recoveries of logical channels.

Range: yes, no

Default: yes—if **rt=xpc** is specified

no—if **rt=pc** is specified

no—if **rt** is not specified

:loc= (optional)

The card location containing the X.25 signaling link that will maintain the connection. For an automatic virtual circuit, this link is the link on which the system STP initially attempts the connection. However, if this attempt fails, the connection may be established by the X.25 destination entity on any other link in this link's linkset.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Default: The card location is not given

:port= (optional)

The port on the card containing the X.25 signaling link.

Range: a

Default: The port is not given

:rt= (optional)

The type of routing to perform for messages originating in the SS7 domain and destined for the X.25 domain. Two types of routing are available: (1) Route on X.25 destination point code (XPC) and (2) Route using X.25 origination and destination point code combinations (PC).

Range: xpc, pc

Default: pc

Example

ent -x25-

rte:xaddr=225255:saddr=133131:type=pvc:loc=1201:port=a:lc=3

ent -x25-rte:xaddr=225255:saddr=133132:type=svca:loc=1201:port=a

ent -x25-rte:xaddr=225255:saddr=133132:type=svcr

ent -x25-rte:xaddr=225255:saddr=133132:type=svcr:rt=xpc:lc2nm=yes

Dependencies

Each X.25 address must have at least four digits.

The **limds0**, **limdscs**, **limocu** and **limv35** card types are the only valid card types for this command. These card types must be running the **ss7gx25** GPL type.

The shelf and card must be equipped.

The logical channel number cannot be specified if the connection type is an automatic virtual circuit or a remote virtual circuit (**type=svca** or **type=svcr**).

The logical channel number must be specified if the connection type is PVC (**type=pvc**).

If **lc2nm=yes** is specified, **rt=xpc** must be specified.

If the X.25 domain destination is an adjacent entity, **lc2nm=no** must be specified.

The **loc** and **port** parameters cannot be specified if the connection type is a remote switched virtual circuit (**type=svcr**). The far end initiates a remote switched virtual circuit and sends the system the location and port information.

The card location (**loc**) must be specified if the connection type is a permanent virtual circuit or an automatic virtual circuit (**type=pvc** or **type=svca**).

Each X.25 address must exist in X.25 destination table.

The X.25 address must be assigned to a destination in the X.25 domain.

The SS7 address must be assigned to a destination in the SS7 domain.

The combination of the two X.25 addresses must be unique in the X.25 route table.

The combination of point code/SSNs assigned to the two X.25 addresses must be unique in the X.25 route table.

The maximum number of X.25 routes in a system is 1024.

The point codes assigned to each of the X.25 destinations must also be assigned to routes.

The signaling link must be assigned to a LIM with the **ss7gx25** application.

The signaling link assigned to the X.25 route must be in the database and must be assigned to a linkset. The linkset must be assigned to a route associated with an X.25 destination and must contain an APC in the X.25 domain. This can be verified by entering the following commands:

- **rtrv-slk**—Displays the signaling links
- **rtrv-ls**—Displays the linksets
- **rtrv-rte**—Displays the routes
- **rtrv-x25-dstn**—Displays the X.25 destinations
- **rtrv-dstn**—Displays the destination point codes.

The logical channel number cannot be greater than the maximum number of permanent virtual circuits allowed for the signaling link. For example, if the total number of permanent virtual circuits allowed for the signaling link is 15, the logical channel number for this signaling link cannot be greater than 15.

The logical channel of the signaling link cannot already be assigned to an X.25 route.

The number of permanent virtual circuits cannot exceed the maximum number of permanent virtual circuits defined for the signaling link.

The number of automatic virtual circuits cannot exceed the maximum number of switched virtual circuits defined for the signaling link.

If **rt=xpc** is specified, the **xaddr** parameter's alias SS7 point code must be unique in the X.25 route table.

Notes

The connection can be one of three types, a permanent virtual circuit, an automatic virtual circuit, or a remote virtual circuit.

Permanent virtual circuits are permanent X.25 virtual connections between two signaling points established on one of the logical channels of an X.25 signaling link. This connection is setup by the network, therefore no setup is required by the system to establish a permanent virtual circuit connection.

Automatic virtual circuits are essentially the same as permanent virtual circuits, except that the connection must be established by either the system or the X.25 destination entity.

Remote virtual circuits are also essentially the same as automatic virtual circuits, except that the connection can be established only by the X.25 destination entity.

All LIMs with the **ss7gx25** application share this information. Even though these connections apply to only one card, they are used by all cards.

Output

```

ent -x25-
rte:xaddr=225255:saddr=133131:type=pvc:loc=1201:port=a:lc=3
  rlgncxa03w 04-02-10 11:43:04 EST EAGLE 31.3.0
  ENT-X25-RTE: MASP A - X.25 Route table 45% full
  ENT-X25-RTE: MASP A - COMPLTD
;

```

flash-card**Flash-Card**

Use this command to load all flash images (GPL) supported by a specified card. This command performs the same functions as the **init-flash** and the **act-flash** commands.

Keyword: flash-card

Related Commands: act-flash, init-flash

Command Class: System Maintenance

Parameters

:code= (mandatory)

The GPL type to be loaded.

Range: appr, trial

appr — Approved GPL

trial — Trial GPL

:loc= (mandatory)

Card address. The location of the card as stenciled on the shelf of the system.

Range: 1101-1112, (1113 and 1115 OAM), 1201-1218, 1301-1318, 2101-2118, 2201-2218, 2301-2318, 3101-3118, 3201-3218, 3301-3318, 4101-4118, 4201-4218, 4301-4318, 5101-5118, 5201-5218, 5301-5318, 6101-6118

:force= (optional)

This parameter is used to force the command to work on an IS-NR card. Links provisioned on the card are inhibited during command execution. The card and inhibited links are restored to their previous state when the command is completed.

Range: yes, no

Default: no

Example

```
flash-card:loc=1105:code=trial
```

```
flash-card:loc=1105:code=appr:force=yes
```

Dependencies

Cards do not have to be provisioned to use the **flash-card** command. However, if the specified card is provisioned and not inhibited, use of the **force** parameter is required.

The specified card locations must be running a flashable software image.

HMUX or HIPR cards are not supported.

If the even-numbered TDM (1114,1116) is specified, the flash occurs on the odd-numbered GPSM-II running OAM (1113,1115).

The specified card location cannot be the active MASP (either the active GPSM-II or the active TDM).

Notes

The specified card must be present and able to communicate over the IMT.

A card that is already running the specified code load cannot be reflashed using the **force** parameter. The **act-flash** and **init-flash** commands must then be used to reload the same code level.

Output

```

flash-card: loc=1105:code=appr:force=yes
tekelecstp 05-04-11 01:52:11 EST  EAGLE5 34.0.0
Flash Card: Downloading BLBIOS on card 1105.
;
tekelecstp 05-04-11 01:52:11 EST  EAGLE5 34.0.0
Flash Card: Card 1105 download BLBIOS complete.
;
tekelecstp 05-04-11 01:52:11 EST  EAGLE5 34.0.0
Flash Card: Downloading BLDIAG on card 1105.
;
tekelecstp 05-04-11 01:52:11 EST  EAGLE5 34.0.0
Flash Card: Card 1105 download BLDIAG complete.
;
tekelecstp 05-04-11 01:52:11 EST  EAGLE5 34.0.0
Flash Card: Downloading PLDE1T1 on card 1105.
;
tekelecstp 05-04-11 01:52:11 EST  EAGLE5 34.0.0
Flash Card: Card 1105 download PLDE1T1 complete.
;
tekelecstp 05-04-11 01:52:11 EST  EAGLE5 34.0.0
Flash Card: Downloading IMTPCI on card 1105.
;
tekelecstp 05-04-11 01:52:11 EST  EAGLE5 34.0.0
Flash Card: Card 1105 download IMTPCI complete.
;
tekelecstp 05-04-11 01:52:11 EST  EAGLE5 34.0.0
Flash Card: Downloading BLVXW on card 1105.
;
tekelecstp 05-04-11 01:52:11 EST  EAGLE5 34.0.0
Flash Card: Card 1105 download BLVXW complete.
;
tekelecstp 05-04-11 01:52:11 EST  EAGLE5 34.0.0
Flash Card: Downloading PLDPMC1 on card 1105.
;
tekelecstp 05-04-11 01:52:11 EST  EAGLE5 34.0.0
Flash Card: Card 1105 download PLDPMC1 complete.
;
tekelecstp 05-04-11 01:52:11 EST  EAGLE5 34.0.0
Flash Card: Activating BLBIOS on card 1105.
;
tekelecstp 05-04-11 01:52:11 EST  EAGLE5 34.0.0
Flash Card: Card 1105 activation BLBIOS complete.
;
tekelecstp 05-04-11 01:52:11 EST  EAGLE5 34.0.0
Flash Card: Activating BLDIAG on card 1105.
;
tekelecstp 05-04-11 01:52:11 EST  EAGLE5 34.0.0
Flash Card: Card 1105 activation BLDIAG complete.
;
tekelecstp 05-04-11 01:52:11 EST  EAGLE5 34.0.0
Flash Card: Activating PLDE1T1 on card 1105.
;
tekelecstp 05-04-11 01:52:11 EST  EAGLE5 34.0.0
Flash Card: Card 1105 activation PLDE1T1 complete.
;
tekelecstp 05-04-11 01:52:11 EST  EAGLE5 34.0.0
Flash Card: Activating IMTPCI on card 1105.
;
tekelecstp 05-04-11 01:52:11 EST  EAGLE5 34.0.0
Flash Card: Card 1105 activation IMTPCI complete.
;
tekelecstp 05-04-11 01:52:11 EST  EAGLE5 34.0.0
Flash Card: Activating BLVXW on card 1105.

```



```

;
tekelecstp 05-04-11 01:52:11 EST  EAGLE5 34.0.0
Flash Card: Card 1105 activation BLVXW complete.
;
tekelecstp 05-04-11 01:52:11 EST  EAGLE5 34.0.0
Flash Card: Activating PLDPMC1 on card 1105.
;
tekelecstp 05-04-11 01:52:11 EST  EAGLE5 34.0.0
Flash Card: Card 1105 activation PLDPMC1 complete.
;
tekelecstp 05-04-11 01:52:11 EST  EAGLE5 34.0.0
Flash Card: Downloading BLCPLD on card 1105.
;
tekelecstp 05-04-11 01:52:11 EST  EAGLE5 34.0.0
Flash Card: Card 1105 download BLCPLD complete.
;
tekelecstp 05-04-11 01:52:11 EST  EAGLE5 34.0.0
Flash Card: Activating BLCPLD on card 1105.
;
tekelecstp 05-04-11 01:52:11 EST  EAGLE5 34.0.0
Flash Card: Card 1105 activation BLCPLD complete.
;
tekelecstp 05-04-11 01:52:11 EST  EAGLE5 34.0.0
Command Completed.
;
tekelecstp 05-04-11 01:52:11 EST  EAGLE5 34.0.0
Flash Card: Canceling links on card 1105.
;
tekelecstp 05-04-11 01:52:11 EST  EAGLE5 34.0.0
Flash Card: Inhibiting card 1105.
;
tekelecstp 05-04-11 01:52:11 EST  EAGLE5 Rel 34.0.0
Flash Card: Downloading BPMPPL on card 1105.
;
tekelecstp 05-04-11 01:52:11 EST  EAGLE5 34.0.0
Flash Card: Card 1105 download BPMPPL complete.
;
tekelecstp 05-04-11 01:52:11 EST  EAGLE5 34.0.0
Flash Card: Allowing card 1105.
;
tekelecstp 05-04-11 01:52:11 EST  EAGLE5 34.0.0
Flash Card: Activating BPMPPL on card 1105.
;
tekelecstp 05-04-11 01:52:11 EST  EAGLE5 34.0.0
Flash Card: Card 1105 activation BPMPPL complete.
;
tekelecstp 05-04-11 01:52:11 EST  EAGLE5 34.0.0
Flash Card: Activating links on card 1105.
;
tekelecstp 05-04-11 01:52:11 EST  EAGLE5 34.0.0
Command Completed.
;

```

format-disk**Format Disk**

Use this command to format and initialize a system removable cartridge or standby Terminal Disk Module (TDM).

NOTE: The format-disk command leaves the disk unusable until the chg-db and copy-gpl commands are entered.

Keyword: format-disk

Related Commands: chg-db, copy-disk, copy-gpl, copy-meas,, rept-stat-db, rtrv-gpl

Command Class: System Maintenance

Parameters

:type= (mandatory)

The type of removable cartridge to format.

Range: **fixed, meas, system**

fixed — The standby fixed disk on the standby TDM

meas — The measurement cartridge

system — The system cartridge

:force= (optional)

This parameter provides some protection against data loss due to reformatting a used system removable cartridge.

Range: **yes, no**

Default: **no**

:low= (optional)

This parameter provides control over whether a low-level format will be performed on the target disk. Specifying **low=no** can be used to decrease formatting time.

Range: **yes, no**

Default: **yes**

:prtnggrp= (optional)

Partition group. This parameter indicates which disk partition group is to be formatted. Specifying the inactive group is relevant only when **type=fixed** is specified.



CAUTION: Do not enter the **format-disk:prtnggrp=inactive** command unless directed to by Tekelec Technical Services to avoid possible loss of a previously archived software release.

Range: **active, inactive**

Default: **active**

Example

format-disk:type=system

format-disk:type=meas:force=yes

Dependencies

The EOAM GPL version that is running in the active OAM card location must be the same GPL version that is running in the standby OAM card location.

To format a cartridge that already contains system data, the **force=yes** parameter must be specified.

The **force=yes** parameter must be specified if the cartridge to be formatted is recognized as a system removable cartridge. This parameter is optional if the cartridge is not recognized as a system removable cartridge. Only cartridges that have a **dms.cfg** file are recognized as system removable cartridges. A removable cartridge must be inserted and made ready before the **type=meas** or **type=system** parameter can be specified in the command.

Measurements collection must be inhibited during execution of the **format-disk** command. If measurements are not inhibited, **format-disk** cannot be executed.

- Do not enter the **chg-measopts:collect=on** command while the **format-disk** command is in progress. This results in read and write errors, because the standby disk is not accessible.

- Do not enter **format-disk** until the 30 minute measurements processing or the midnight measurements processing has completed, because inhibiting measurements during these periods results in the loss of measurement data for the period being processed.

OAM Measurements collection cannot be in progress when this command is entered. Retry the command after a period of waiting for the measurements collection to complete.

If the **force=yes** parameter is specified, the disk should not require low-level formatting, and the **format=no** parameter should be specified.

The card with the standby OAM must be available when this command is entered.

The standby fixed disk contains security log entries that have not yet been uploaded. Upload the log entries before formatting the disk to avoid loss of log data.

The **low=no** parameter must be specified when the **prtngrp** parameter is specified.

Notes

The **low=no** parameter should be specified when upgrading a spare TDM. The **low=yes** parameter should be specified when there is a suspected hardware problem.

When the **type=meas** parameter is specified, a measurements removable cartridge is built.

When the **type=system** parameter is specified, a system removable cartridge is built.

A system removable cartridge can contain only GPLs and the database. Measurement data cannot be placed on a system removable cartridge. After a system removable cartridge is formatted, the cartridge does not contain any data, but is ready to be used as the destination disk of the **copy-gpl** and **chg-db:action=backup:dest=remove** commands. The **copy-gpl** command copies all approved GPLs from the fixed disk on the active TDM to a system removable cartridge, providing a backup copy of the approved GPLs. The **chg-db:action=backup:dest=remove** command copies the database from the current partition of the fixed disk on the active TDM to a system removable cartridge, providing a backup copy of the database.

A measurements removable cartridge can contain only measurement data. Database information and GPLs cannot be placed on a measurements removable cartridge. After a measurements removable cartridge is formatted, the cartridge does not contain any data, but is ready to be used as the destination disk of the **copy-meas** command. The **copy-meas** command copies all measurement data from the fixed disk on the active TDM to a measurements removable cartridge for offline processing of the measurement data.

The database audit and GPL audit facilities are automatically disabled during execution of this command. When this command has completed (successful or not), the database and GPL audit facilities are automatically re-enabled.

All commands that affect the database are disallowed for the duration of the command. Attempts to use such commands are rejected, and an error message is displayed explaining that the command has been rejected.

During the upgrade process, files made obsolete by the upgrade process are deleted, freeing up disk space.

The format of magneto-optical removable cartridges allows the cartridges to be used in DOS/Windows environments in addition to being used on the system.

If the **format-disk** command is initiated and the standby OAM initialization is not complete, command processing is delayed. If standby initialization fails, the command proceeds to allow the standby TDM to recover from a previous **format-disk** or **copy-disk** failure. In such cases, the following messages appear:

Standby MASP has not finished initializing - please wait...

Standby MASP initialization timed out - continuing...

The **dms.cfg** file on either the active TDM or a system formatted removable cartridge is used by the **format-disk** command when formatting the target disk. The location of the **dms.cfg** file cannot be specified by the **format-disk** command. The value of the **type** parameter is used to determine the target disk to format and the location of the **dms.cfg** file on which to base the format. Table 5-49 shows the location of the **dms.cfg** file based on the value of the **type** parameter for the **format-disk** command.

Table 5-49. DMS.CFG File Location for format-disk Command

Value of the type Parameter	Target Disk (Card Location)	Location of the DMS.CFG File
fixed	Standby TDM (1114 or 1116)	Removable Cartridge (1117)
system	Removable Cartridge (1117)	Active TDM (1114 or 1116)
meas	Removable Cartridge (1117)	Active TDM (1114 or 1116)

The **format-disk** command can create a maximum disk partition size of 2047 Mbytes, based on a 16-bit cluster size. A cluster is composed of 64 512-Kilobyte sectors. The physical capacity of the disk being formatted determines the formatted size of the disk and the number of partitions created on the disk.

Table 5-50 shows the format capacities of each type of disk used on the system and the number of partitions created on each disk.

Table 5-50. Disk Format Capacity

Target Disk Type	Disk Location	Target Capacity	Number of Partitions	Formatted Size of the Partition
SyQuest Removable Cartridge	1117	256 Mbytes	1	256 Mbytes
Magneto-Optical Removable Cartridge	1117	1096 Mbytes*	1	1024 Mbytes
TDM	1114 or 1116	540 Mbytes	1	507 Mbytes
TDM	1114 or 1116	2 Gigabytes	1	2014 Mbytes
TDM	1114 or 1116	4 Gigabytes	2	2047 Mbytes
* The magneto-optical removable cartridge is a double-sided cartridge that contains 2.3 gigabytes of data, but only one side of the disk can be formatted and used when it is inserted into the removable cartridge drive. The target capacity given for the magneto-optical removable cartridge is for one side of the disk in the cartridge and is approximately one half of the total capacity of the magneto-optical removable cartridge.				

Output**format-disk:type=system**

```
rlghncxa03w 04-01-07 00:57:31 EST EAGLE 31.3.0
Format-disk of system removable cartridge started.
```

```
rlghncxa03w 04-01-07 00:57:31 EST EAGLE 31.3.0
Format-disk (removable cartridge) format in progress.
```

```
rlghncxa03w 04-01-07 00:57:31 EST EAGLE 31.3.0
Format-disk (removable cartridge) format in progress.
```

```
rlghncxa03w 04-01-07 00:57:31 EST EAGLE 31.3.0
Format-disk (removable cartridge) format is complete.
```

```
rlghncxa03w 04-01-07 00:57:31 EST EAGLE 31.3.0
Format-disk of system removable cartridge completed.
Measurements collection may be turned on now if desired.
```

```
;
```

format-disk:type=fixed:low=no:force=yes

```
rlghncxa03w 04-01-07 00:57:31 EST EAGLE 31.3.0
Format-disk of standby fixed disk started.
Extended processing required, please wait.
```

```
;
```

```
rlghncxa03w 04-01-07 00:57:31 EST EAGLE 31.3.0
Format-disk (fixed) format in progress.
```

```
rlghncxa03w 04-01-07 00:57:31 EST EAGLE 31.3.0
Format-disk (fixed) format is complete.
```

```
rlghncxa03w 04-01-07 00:57:31 EST EAGLE 31.3.0
Format-disk of standby fixed disk completed.
Measurements collection may be turned on now if desired.
```

```
;
```

inh-alm**Inhibit Alarm Reporting**

Use this command to inhibit the reporting of alarms for the given device. Inhibited alarms will not generate unsolicited output or cause alarm indicators to be turned on. All **rept-stat-xxx** commands continue to display the alarm with an indication that the device has its alarms inhibited.

The frame alarm LEDs are off for the inhibited alarm. This command does not affect the alarm counts on the VT320 banner. The fourth box on the right of the VT320 Control Area indicates the number of devices in the system with inhibited alarms.

Keyword: inh-alm

Related Commands: rept-stat-alm, rept-stat-card, rept-stat-cdt, rept-stat-dlk, rept-stat-dstn, rept-stat-ls, rept-stat-lsms, rept-stat-rte, rept-stat-rtx, rept-stat-seas, rept-stat-slk, rept-stat-sys, rept-stat-trbl, rept-stat-trm, rtrv-log, unhb-alm

Command Class: System Maintenance

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:dev= (mandatory)

Device. This parameter specifies the device where the reporting of alarms is to be inhibited.

Range: **applsock, as, card, cdt, clock, dlk, e1port, ls, lsmsconn, route, seasx25, slk, t1port, trm, rtx**
applsock— IP gateway application socket
as— IP gateway application Application Server
card— Cards in the database
cdt— Customer defined troubles
clock— System clock
dlk— TCP/IP data links
e1port— E1 port on E1/T1 MIM or HC MIM cards
ls— Linksets
lsmsconn— Communication link between the LSMS and the EMS
route— Route
seasx25— The SEAS X.25 links
slk— Signaling links
t1port— T1 port on E1/T1 MIM or HC MIM cards
trm— Terminals
rtx— Exception Route

:asname= (optional)

Gateway Application Server name. When used with the **dev=as** parameter, this parameter can be used to inhibit alarms for the named Application Server.

Range: *aaaaaaaaaaaaa*
 Up to 15 alphanumeric characters; the first character must be a letter.

:cic= (optional)

Starting Circuit Identification Code. This parameter is used with the **ecic** parameter to define the CIC range that is used as an exception routing criterion for the specified exception route.

Range: **0-16383**

:dpc= (optional)

ANSI destination point code with subfields network indicator-network cluster-network cluster member (*ni-nc-ncm*). The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: **dpca**

Range: **p-, 000-255, ***

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

The asterisk value (*) is not valid for the *ni* subfield.

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:dpc/dpca/dpci/dpcn/dpcn24= (optional)

Destination Point Code

:dpci= (optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:dpcn= (optional)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:dpcn24= (optional)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point*. The *prefix* subfield indicates a private point code.

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:dur= (optional)

Duration. The period for which the alarms are inhibited. If the **dur=temp** parameter is specified, the clearing of the event that caused an alarm also clears the alarm inhibit, and the alarms become uninhibited on the device.

Range: **perm, temp, timed**

perm— A permanent inhibition of an alarm.

temp— A temporary inhibition of an alarm.

timed— An inhibition of an alarm for a specified duration.

Default: **perm**

:e1port= (optional)

Port ID. The E1 port on the specified E1 card.

The **e1port** parameter is mandatory if the **dev=e1port** parameter is specified.

Range: 1-8

Ports 3 - 8 can be specified only for HC-MIM cards and E5-E1T1 cards.

:ecic= (optional)

Ending Circuit Identification Code. This parameter, together with the **cic** parameter, defines the CIC range that is used as exception routing criteria for the specified exception route.

Range: 0-16383

:edate= (optional)

Expiry date. The date on which a timed alarm inhibit expires, at the time specified in the **etime** parameter value.

The **edate** parameter is valid and required when the **dur=timed** parameter is specified.

Range: 101-991231

Specify the date in the format of *year*, followed by *month*, followed by *day* (*yymmdd*).

:etime= (optional)

Expiry time. The time at which a timed alarm inhibit expires, on the date specified in the **edate** parameter value.

The **etime** parameter is valid and required when the **dur=timed** parameter is specified.

Range: 0-2359

Specify the time in the format of *hour* followed by *minute* (*hhmm*).

:force= (optional)

Allows critical alarms to be inhibited on a device.

The **force** parameter is mandatory if the **lvl=crit** parameter is specified.

The **criticalminh** STP option must be turned on before the **force** parameter can be specified.

Range: yes, no

Default: no

:id= (optional)

Identification number of the customer-defined trouble (5 - 16). Customer-defined troubles 1 - 4 are generated critical alarms and cannot be specified as values for the **id** parameter.

Range: 5-16

:ilsn= (optional)

Incoming Link Set Name. This parameter contains the name of the originating linkset. The parameter value is used as part of the exception routing criteria for the specified exception route.

Range: ayyyyyyyy

1 alphabetic character followed by up to 9 alphanumeric characters

:link= (optional)

Signaling link on the card specified in the **loc** parameter.

Synonym: port

Range: a, b, a1-a31, b1-b31

a, b—For **dev=dlk**, **dev=slk** for a two-port LIM

a1, a2, b1, b2—For **dev=ndclk/seasx25/lsmconn**

a, b, a1, b1, a2, b2, a3, b3—For **dev=slk** for a multi-port LIM

a, b, a1-a31, b1-b31—For **dev=slk** for an HC MIM

:loc= (optional)

The card location as stenciled on the shelf of the system.

Range: 1101-1113, 1115, 1201-1218, 1301-1318, 2101-2118, 2201-2218, 2301-2318, 3101-3118, 3201-3218, 3301-3318, 4101-4118, 4201-4218, 4301-4318, 5101-5118, 5201-5218, 5301-5318, 6101-6118

:lsn= (optional)

Linkset name. The name of the linkset for which the report information is to be displayed.

Range: ayyyyyyyy
1 alphabetic character followed by up to 9 alphanumeric characters.

:lvl= (optional)

The alarm severity level (critical, major, or minor).

Range: crit, majr, minr

Default: majr

:opc= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*). The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: opca

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001–005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006–255.

The point code 000-000-000 is not a valid point code.

:opc/opca/opci/opcn/opcn24= (optional)

Origination point code.

:opci= (optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: s-, p-, ps-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps-

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

:opcn= (optional)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: s-, p-, ps-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**, **p-**, **ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:opc24= (optional)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*. The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:si= (optional)

Service Indicator. This parameter is used as the exception routing criterion for the specified exception route.

Range: **0-15**

:sname= (optional)

Gateway application socket. When used with the **dev=applsock** parameter, this parameter can be used to inhibit alarms for the named application socket.

Range: **aaaaaaaaaaaaa**

1 to 15 alphanumeric characters.

:t1port= (optional)

Port ID. This parameter is mandatory if the **dev=t1port** parameter is specified.

Range: **1-8**

Ports **3 - 8** can be specified only for HC MIM cards.

:trm= (optional)

Terminal ID. This parameter specifies the ID number of the terminal whose characteristics are to be retrieved and displayed.

Range: **1-40**

Example

```
inh-alm:dev=route:dpc=1-1-1:dur=perm:lvl=crit:force=yes
```

```
inh-alm:dev=rtx:dpc=1-101-1:opc=4-4-4
```

```
inh-
```

```
alm:dev=route:dpc=1-1-1:dur=timed:lvl=crit:edate=050515:etime=2300:force=yes
```

Dependencies

This command is not allowed in upgrade mode.

Table 5-51 shows the valid parameter combinations for the **inh-alm** command. The **dur** and **lvl** parameters are valid with all **dev** parameter values.

Table 5-51. Parameter Combinations for the **inh-alm** command

Value (:dev)	a	a	c	c	d	e	l	l	n	n	r	s	s	t	t
Device Parameter	p	s	a	d	l	l	s	s	d	d	o	e	l	l	r
	p	r	t	o	k	p	m	c	c	u	a	k	p	m	
	l	d	c	o	s	l	q	t	s						
	s		k	r	c	k	3	e	x						
	o			t	o				2						
	c				n				5						
	k				n										
No Parameters				x					x						
:asname	x														
:dpc/dpca/dpci/dpcn/dpcn24										x					
:id			x												
:loc		x			x	x							x	x	
:lsn							x								
:e1port=1-8						x									
:link=a, b					x								x		
:link=a, b, a1, a2, b1, b2, a3, a3													x		
:link=a1, a2, b1, b2								x	x			x			
:sname	x														
:t1port=1-8														x	
:trm															x

No other action command can be in progress when this command is entered.

The linkset specified by the **lsn** parameter must be equipped in the database.

This command will not execute while the signaling link is running either a Link Fault Sectionalization test or a Loopback test. An AST of LFS or LPBK must be cleared before signaling link alarms can be inhibited.

This command cannot be used to permanently inhibit XLIST point codes.

Before critical alarms can be inhibited, the STP option **criticalminh** must be enabled. The **chg-stpopts:criticalminh=yes** command enables this option.

Alarms cannot already be inhibited for the specified device.

When the **lvl=crit** parameter is specified, the **force=yes** parameter must be specified.

When the **dev=card** parameter is specified, the **loc** parameter must be specified.

When the **dev=dlk** parameter is specified, the **loc** parameter must be specified.

When the **dev=slk** parameter is specified, the **loc** parameter and the **link** parameter must be specified.

When the **dev=e1port** parameter is specified, the **loc** parameter and the **e1port** parameter must be specified.

When the **dev=t1port** parameter is specified, the **loc** parameter and the **t1port** parameter must be specified.

When the **dev=ls** parameter is specified, the **lsn** parameter must be specified.

When the **dev=trm** parameter is specified, the **trm** parameter must be specified.

When the **dev=cdt** parameter is specified, the **id** parameter must be specified.

When the **dev=seasx25** parameter is specified, the **link** parameter must be specified.

When the **dev=lsmsconn** parameter is specified, the **link** parameter must be specified.

When the **dev=route** parameter is specified, a **dpc/dpca/dpci/dpcn/dpcn24** parameter must be specified.

When the **dev=applsock** parameter is specified, the **sname** parameter must be specified.

When the **dev=as** parameter is specified, the **asname** parameter must be specified.

If the **sname** parameter is specified, the socket name must exist in the IPAPSOCK table.

If a point code parameter is specified, the point code must exist in the Routing table.

If the **dev=slk** parameter or **dev=dlk** parameter is specified, the specified **link** must exist in the database.

If the **dpcn** parameter is specified, its format must match the format that was assigned with the **chg-stpopts:npcfmti** parameter.

The card location that is specified in the **loc** parameter must be equipped.

The specified device type must be supported by the card in the specified card location.

The Origin-Based MTP Routing feature must be on before the **dev=rtx** parameter can be specified.

Permanant alarm inhibit is not allowed on the cluster PC because either the cluster or a member PC of the cluster is already alarm inhibited. Issue an **unhb-alm** command on the cluster PC or the member PC before issuing an **inh-alm** command on the cluster PC.

When the **dur=timed** parameter is specified, the **edate** and **etime** parameters must be specified.

When a **dur** parameter value other than **timed** is specified, the **edate** and **etime** parameters cannot be specified.

The **edate** parameter value must be a date equal to or later than the current system date. If the current system date is specified, the **etime** parameter value must a time later than the current system time.

If a date later than the current system date is specified, the **etime** parameter value can be any valid time in the format *hhmm*.

The **inh-alm** command cannot be used to change the level of inhibition on a device.

Notes

If critical alarms are inhibited, all alarms (critical, major, and minor) are disabled. Likewise, if major alarms are inhibited, both major and minor alarms are disabled.

The **dur** parameter allows alarms to be inhibited on a temporary basis. If a device has its alarms temporarily disabled, the device's alarms are automatically enabled after the alarm clears.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-) and the private and spare point code subtype prefix (ps-). All of the point code types support the private (internal) point code subtype prefix (p-).

Output

```

inh-alm:dev=route:dpc=1-1-1:dur=perm:lvl=crit
rlghncxa03w 04-02-23 13:20:59 EST EAGLE 31.3.0
Alarms are permanently inhibited.
;
rlghncxa03w 04-02-23 13:20:59 EST EAGLE 31.3.0
Command Completed.
;
inh-alm:dev=rtx:dpc=1-101-1:opc=4-4-4
stdcfg2b 06-05-27 20:20:35 EST EAGLE 35.0.0
Alarms are permanently inhibited
Command Completed.
;
inh-alm:dev=route:dpc=1-1-1:dur=timed:lvl=crit:edate=050515:etime=2300:force=yes
Command entered at terminal #3.
;
tekelecstp 06-05-27 13:20:59 EST Rel 35.0.0
Alarms are timed inhibited.
;
tekelecstp 06-05-27 13:20:59 EST Rel 35.0.0
Command Completed
;

```

inh-card**Inhibit Card**

Use this command to change the state of the card from in-service normal (IS-NR) to Out-of-Service Maintenance-Disabled (OOS-MT-DSBLD). A user can then test the DCM/LIM/ACM/TSM/DSM/GPSM-II/MIM card or physically remove it from the shelf.

Keyword: inh-card

Related Commands: alw-card, dlt-card, ent-card, init-card, rept-stat-card, rmv-card, rst-card, rtrv-card

Command Class: System Maintenance

Parameters

:loc= (mandatory)

Card address. The card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

:force= (optional)

Force indicator. This parameter is required for the following conditions:

- The specified card is the last card supporting a linkset, SCCP subsystem, MPS-to-DSM connection, E1, T1, Measurements Platform subsystem, or GLS
- The TDM contains a security log with un-uploaded entries or any other TDM process in progress
- The specified HC MIM card or E5-E1T1 card is in channel bridging mode

Range: yes, no

Default: no

Example

```
inh-card:loc=1101
```

```
inh-card:loc=1201:force=yes
```

Dependencies

No other action commands can be in progress when this command is entered.

The card must be a TSM, ACM, DCM, DSM, LIM, GPSM-II, E1/T1 MIM, HC MIM, or E5-E1T1.

The card location cannot be 1114, 1116, or 1117.

If the card is the only linkset, SCCP, or GLS card remaining, the **force=yes** parameter must be specified in the command to inhibit the card.

If the card contains signaling or data links, all links must be out of service (OOS-MT-DSBLD) before the card can be inhibited.

If the card is type **lime1**, all signaling links providing timeslots serviced by the E1 interfaces assigned to the card must be deactivated, unless **force=yes** is specified.

If the card is type **limt1**, all signaling links providing timeslots serviced by the T1 interfaces assigned to the card must be deactivated, unless **force=yes** is specified.

The shelf and card must be equipped.

If the specified card is the only in-service EMDCA-DCM or MPS-DSM, the **force=yes** parameter is required.

If the specified card is the only in-service TSM, LIM, or MCPM, the **force=yes** parameter is required.

If the specified HC-MIM or E5-E1T1 card is in channel bridging mode, the **force=yes** parameter is required.

If inhibiting the VSCCP card would cause less than 80% of the in-service normal (IS-NR) LIM cards to have VSCCP service (i.e., cause the system to enter an unstable loading mode), the **force=yes** parameter must be specified.

The card that is specified cannot be running the active OAM.

Notes

The function of this command is the same as the **rmv-card** command.

When this command is entered, the card is initialized and enters the OOS-MT-DSBLD state. It has no affect if the card is already OOS-MT-DSBLD.



CAUTION: This command can be used to disable Measurements Platform measurements collection after the collection function has been enabled with the `chg-measopts:platformenable=on` command. To disable collection, ALL MPCM cards in the system must be inhibited. THIS CAN RESULT IN LOSING ALL PAST MEASUREMENT DATA ON THE CARDS. Use the `alw-card` command to enable measurements collection after the MCPM cards have been inhibited.

Output

```
inh-card:loc=1101
```

```
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0  
Card has been inhibited.
```

```
;
```

inh-imt**Inhibit IMT**

The interprocessor message transport bus (IMT bus) is the main communications artery between all subsystems in the system. This command removes the IMT bus from service.



CAUTION: Use this command only when directed by Tekelec Technical Service at (888) FOR-TKLC.

Keyword: inh-imt

Related Commands: alw-imt, clr-imt-stats, conn-imt, disc-imt, rept-imt-lvl1, rept-imt-lvl2, rept-stat-imt, rmv-imt, rst-imt

Command Class: System Maintenance

Parameters

:bus= (mandatory)
IMT bus to be inhibited
Range: a, b

Example

inh-imt:bus=a

Dependencies

The function of this command is the same as the **rmv-imt** command.

The alternate IMT bus must be in-service normal (IS-NR) in order for the specified bus to be inhibited.

This command cannot be entered during an IMT Fault Isolation Test.

Notes

Cards not connected to the other IMT bus will reinitialize.

All traffic is rerouted to the alternate IMT bus.

Output

```
inh-imt:bus=a
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
Inhibit IMT Bus A command issued

rlghncxa03w 04-01-07 13:12:41 EST EAGLE 31.3.0
3116.0098 IMT BUS A IMT inhibited
;
```

inh-map-ss**Inhibit Mated Application Subsystem**

Use this command to shut down (inhibit) a mated application subsystem. The command requires a parameter specifying the SSN to be inhibited. Currently, the LNPQS, INPQS, and Equipment Identity Register (EIR) subsystems are the subsystems that may be inhibited. The specified subsystem attempts a coordinated shutdown. If the coordinated shutdown fails, a UIM is issued indicating the shutdown failed. If the **force** parameter is specified, the subsystem is forced to shut down, and a coordinated shutdown is not performed.



CAUTION: After the LNP subsystem is inhibited before performing an LNP ELAP bulk download, **chg-ss-appl:appl=lnp:nstat=offline** must be entered to ensure that the subsystem remains down through DSM card replacements and reloads.

Keyword: inh-map-ss

Related Commands: alw-map-ss, rept-stat-lnp, rept-stat-sccp

Command Class: System Maintenance

Parameters

:ssn= (mandatory)

The LNP, INP, or EIR subsystem number.

Range: 2-255

:force= (optional)

Force the shutdown of the LNP, INP, or EIR subsystem.

Range: yes, no

Default: no

Example

inh-map-ss:ssn=10

inh-map-ss:ssn=10:force=yes

Dependencies

The LNP feature (see the **enable-ctrl-feat** command) or the INP feature must be turned on, or the EIR feature must be enabled and turned on, before this command can be entered.

No other action command can be in progress when this command is entered.

The specified **ssn** parameter value must represent the LNPQS, INPQS, or EIR subsystem.

The EAGLE 5 ISS must be configured with at least one card running the **sccp** application.

Notes

If the LNPQS subsystem is disabled, any GTT requiring Message Relay is also disabled because they both use the same database. This causes the EAGLE 5 ISS to generate a TFP for the EAGLE 5 ISS CPCs. Traffic is then routed to the mate. If both Message Relay GTT and non Message Relay GTT use the same CPC, this could affect the GTT.

Table 5-52. Route Set Test When LNP is Offline

Network Management	Concerned PC	Network Management
RSP	CPC	TFA concerning CPC
RSP	LNP CPC	None
RSP	TPC	TFA concerning TPC
RSR	CPC	TFA concerning CPC
RSR	LNP CPC	TFP concerning LNP CPC
RSR	TPC	TFA concerning TPC

Table 5-53 shows what actions EAGLE 5 ISS takes when LNP is offline and a message arrives requiring LNP. This table assumes that SCCP cards are available.

Table 5-53. Receiving Messages when LNP is Offline

Routing Indicator in Incoming Message	DPC	Result of GTT	Message Handling	Network Management
rt-on-gt	Capability PC	rt-on-ssn, LNP subsystem	Reroute to mate	TFP concerning CPC
rt-on-gt	True PC	rt-on-ssn, LNP subsystem	Reroute to mate	None
rt-on-gt	Capability PC	Message Relay required	Generate UDTS	TFP concerning CPC
rt-on-gt	True PC	Message Relay required	Generate UDTS	None
rt-on-ssn	Capability PC	Not applicable	Generate UDTS	None
rt-on-ssn	True PC	Not applicable	Generate UDTS	SSP concerning True PC

Output**inh-map-ss:ssn=10:force=yes**

```
rlghncxa03w 04-02-24 10:37:22 EST EAGLE 31.0.0
Inhibit map subsystem command sent to all SCCP cards.
Command Completed.
```

;

inh-map-ss:ssn=30

```
rlghncxa03w 04-02-24 10:37:22 EST EAGLE5 31.0.0
Inhibit map subsystem command sent to all SCCP cards.
Command Completed.
```

;

inh-map-ss:ssn=30:force=yes

```
rlghncxa03w 04-02-24 10:37:22 EST EAGLE5 31.0.0
Inhibit map subsystem command sent to all SCCP cards.
Command Completed.
```

;

inh-map-ss:ssn=11

```
integrat40 04-02-24 10:37:22 EST EAGLE5 31.0.0
Inhibit map subsystem command sent to all SCCP cards.
Command Completed.
```

;

inh-map-ss:ssn=11:force=yes

```
integrat40 04-02-24 10:37:22 EST EAGLE5 31.0.0
Inhibit map subsystem command sent to all SCCP cards.
Command Completed.
```

;

inh-slk**Inhibit Signaling Link**

Use this command to prevent message signal units (MSU) from being transmitted on a specified, previously uninhibited signaling link.

NOTE: The signaling link's inhibited status is not preserved across a LIM reboot.

Keyword: inh-slk

Related Commands: act-slk, blk-slk, dact-slk, dlt-slk, ent-slk, rept-stat-slk, rtrv-slk, tst-slk, ublk-slk, unhb-slk

Command Class: Link Maintenance

Parameters

:link= (mandatory)

The signaling link on the card that is specified in the **loc** parameter. The links can be specified in any sequence or pattern.

Synonym: port

Range: a, b, a1-a31, b1-b31

Not all card types support all **link** parameter values.

See "Summary of Range Values for :link Parameter" for valid **link** parameter range values for each type of card that can have a location specified in the **loc** parameter.

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Example

inh-slk:loc=1307:link=b

Dependencies

A card location must be specified that is valid and defined in the database.

No other action command can be in progress when this command is entered.

The card must be equipped and must be one of the following cards:

- A LIM card running the **ss7ansi**, **ss7gx25**, **atmansi**, or **ccs7itu** application
- An E1 ATM card running the **atmitu** application
- A dual-slot DCM or EDCM card running the **iplim** or **iplimi** application with links having **ipliml2=saaltali**
- An SSEDCCM card running the **iplim** or **iplimi** application with links having **ipliml2=m2pa** or **ipliml2=saaltali**
- An E1/T1 MIM, an HC-MIM or an E5-E1T1 card running the **ss7ansi** or **ccs7itu** application
- An E5-ENET card running the **iplim** or **iplimi** application

This command cannot be entered for an IPLIMx signaling link that has an **ipliml2** parameter value of **m3ua**.

This command is not valid on TCP/IP point to multipoint links (DCM cards equipped as SS7IPGW links).

The card must contain signaling links.

The signaling link must be equipped in the database.

The **link** parameter values **a1**, **b1**, **a2**, **b2**, **a7**, and **b7** can be specified only for the following cards:

- A multi-port LIM card
- An SSEDCM card running the **iplim** or **iplimi** application with links having **ipliml2=m2pa** or **ipliml2=saaltali**
- An E1/T1 MIM card, an HC-MIM card, or an E5-E1T1 card.
- An E5-ENET card running the **iplim** or **iplimi** application that supports 16 links (**a**, **b**, **a1-a7**, **b1-b7**)

The link parameter values **a4-a15** and **b4-b15** can be specified only for the HC-MIM card and the E5-E1T1 card. The link parameter values **a16-a31** and **b16-b31** can be specified only for the HC MIM card.

This command is not valid on TCP/IP point-to-multipoint links (DCM cards equipped as IPGWI links).

Notes

If the link is already inhibited, the system does not execute the command.

If the link is aligned, it attempts to perform a changeover to alternate links. If it is not aligned, it cannot carry traffic.

If the link is the last link in the linkset, or if the node assigned to the link is inaccessible by another route, the inhibit request is denied. If a command request is denied, it is because the SS7 changeover procedure cannot take place.

If the **inh-slk** command is followed by the **init-card** command, the inhibition of the signaling link is not preserved after the **init-card** command completes.

Card locations are illustrated in the *Installation Manual – EAGLE 5 ISS*.

The **inh-slk** command might time out if a far-end remote does not respond to the inhibit message.

Output

```
inh-slk: loc=1301: link=a
rlghncxa03w 05-01-07 11:11:28 EST EAGLE5 33.0.0
Inhibit Link message sent to card
;
```

inh-trm

Inhibit Terminal

Use this command to set the primary state of a serial port to OOS-MT-DSBLD. It sets the secondary state to MANUAL. The serial port is not available to perform service functions. There is no outgoing traffic from the serial port, and all incoming traffic is ignored.

Keyword: **inh-trm**

Related Commands: **act-echo**, **alw-trm**, **canc-echo**, **chg-trm**, **dact-echo**, **rept-stat-trm**, **rmv-trm**, **rst-trm**, **rtrv-trm**

Command Class: System Maintenance

Parameters

:trm= (mandatory)

The ID of serial port to be inhibited

Range: **1-40**

:force= (optional)

Forces the removal of the specified terminal, even if it is the last in-service OAP port available.

Range: yes, no

Default: no

Example

```
inh-trm:trm=5
```

```
inh-trm:trm=1:force=yes
```

Dependencies

No other action command can be in progress when this command is entered.

The IP User Interface feature must be enabled before terminal ports 17 through 40 can be specified in the **trm** parameter.

The terminal specified by the **trm** parameter must be equipped.

The **force=yes** parameter must be specified to inhibit the last in-service OAP port.

This command cannot be used to inhibit the terminal from which the command is entered.

Notes

When inhibiting an already inhibited terminal, a warning message is echoed to the scroll area, but no action is taken.

Output

```
inh-trm:trm=5
```

```
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
```

```
Inhibit message sent to terminal
```

```
;
```

init-card

Initialize Card

Use this command to cause a soft reset of a card. It has the same result as a hard reset (card boots, application, and data load), except that connect status is not affected; that is, if a card is not connected, it stays that way.

When the command is issued to the OAM software, there is a 10-second wait before the card is reset. This wait period is intended to ensure that all database updates are complete before the card is reset.



CAUTION: When a LIME1 or LIMT1 card has associated channel cards (LIMCH) with provisioned links, the init-card command entered for the LIME1 or LIMT1 card causes all links on the associated channel cards to go out of service.

Keyword: init-card

Related Commands: dlt-card, ent-card, init-sys, rept-stat-card, rmv-card, rst-card, rtrv-card

Command Class: System Maintenance

Parameters

:appl= (optional)

Application. The type of application residing on the card.



CAUTION: Because the **appl** parameter causes all LIMs running the assigned application to reload, it should be used only during periods of low traffic.

Range: *xxxxxxxx*

- atmansi**—This application is used by the LIM cards to support the high-speed ATM signaling link feature.
- atmitu**—This application is used by the E1 ATM cards to support the high-speed E1 ATM signaling link feature.
- ccs7itu**—This application is used by the LIM cards for ITU-TSS MTP functionality.
- ebdablm**—This application is used by the TSM card for enhanced bulk download.
- ebdadcm**—This application is used by the DCM card to transmit the LSMS LNP database to the system at high speed over an ethernet connection for enhanced bulk download.
- eroute**—This application is used by the STC cards for the EAGLE 5 Integrated Monitoring Support feature.
- gls**—This application is used by the TSM cards for downloading gateway screening to LIM cards.
- ipgwi**—This application is used by the system to support ITU TCP/IP point-to-multipoint connectivity.
- iplim**—This application is used by the DCM card for TCP/IP point-to-point connectivity for ANSI point codes.
- iplimi**—This application is used by the DCM card for TCP/IP point-to-point connectivity for ITU point codes.
- ips**—This application is used by the IPSM card for the IP User Interface feature.
- oam**—This application is a software load that runs in a GPSM-II card in card slots 1113 and 1115.
- mcp**—This application is used by the MCPM card for the Measurements Platform feature.
- sccp**—This application is used by the TSM cards for the global title translation application.
- ss7ansi**—This application is used by the LIM cards for the MTP functionality.
- ss7gx25**—This application is used by the LIM cards to support X.25 functionality.
- ss7ipgw**—This application is used by the system to support TCP/IP point-to-multipoint connectivity.
- stplan**—This application is used by the ACM card to support the STP LAN application.
- vscpp**—This application is used by the DSM card to support the G-Flex, G-Port, INP, and LNP ELAP Configuration features. This application is used by the DSM card to support the G-Flex, G-Port, LNP ELAP Configuration, and INP features. If the G-Flex, G-Port, LNP ELAP Configuration, or INP feature is not turned on, and a DSM card is present, the VSCCP GPL processes normal GTT traffic.
- vxwslan**—This application is used by the DCM card to support the STP LAN application.
- all**—All cards are to be initialized.

Default: The application assigned to the card

:data= (optional)

High memory refresh. This parameter causes data to be reloaded to the specified card. This parameter is used to reload data if the LNP, G-Flex, G-Port, or INP feature is on. This parameter is applicable only to network cards containing the LNP database (SCCP, EBDABLM), or the MPS database (VSCCP).

Range: **refresh, persist**

refresh— Causes data to be reloaded to the specified card.

persist — Indicates that the database is not to be reloaded to the card. Used to request that the EAGLE 5 ISS perform a warm restart of the requested cards. The EAGLE 5 ISS performs various checks to ensure that all conditions necessary to initiate the warm restart are in place (for example, that the TSM/BLM card is present and ready and that the downloaded LNP database is coherent. The LNP database audit cannot be performed prior to the card reset.) The **force** parameter is required if all of the specified cards do not meet the warm restart requirements. During the card initialization and loading sequence, a warm restart is performed for all cards that meet the warm restart conditions.

Default: **refresh**

:force= (optional)

Force indicator. Enables the command to be processed under the following conditions:

- If **serial=yes** and all cards of the specified GPL type are not IS-NR or OOS-MT-DSBLD.
- If **data=persist** and all cards of the GPL type cannot maintain a persistent LNP database over the reset.
- If **initclk=yes** and the TDM card specified in the **loc** parameter is the only good HS clock source that is currently active. A temporary clock outage will occur.
- If **initclk=yes** and **appl=eoam** is specified (bitfiles on both TDMs will be initialized). A temporary clock outage will occur.

Range: **yes, no**

Default: **no**

:initclk= (optional)

Initialize TDM Bitfile indicator. If TDM reload would cause a system clock outage, the **initclk** parameter cannot be specified unless **force=yes** is also specified.



CAUTION: The resulting clock outage will probably cause loss of traffic on all links.

The following scenarios will cause such clock outages:

- Simplex MASP configuration (a system with a single TDM).
- Bad clock status on the remaining TDM.

Range: **yes, no**

If **initclk=yes** is specified with a single TDM card location, the bitfile for the specified TDM reloads.

If **initclk=yes** is specified with **appl=eoam** and **force=yes**, the bitfile reloads on both TDMs.

:loc= (optional)

Card address. The card location as stenciled on the shelf of the system.

Range: **1101-1108, 1111-1116, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2301-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

When the **initclk** parameter is not specified, the listed card locations are valid.

When the **initclk** parameter is specified with the **loc** parameter, only card locations **1113**, **1114**, **1115**, and **1116** are valid. Entering locations **1114** and **1116** results in the same action as entering **1113** and **1115**.

Default: All valid card locations are initialized.

:serial= (optional)

Controls the manner in which cards are initialized. If **serial=yes** is specified, cards of the specified GPL type are initialized one at a time. If **serial=no** is specified, cards of the specified GPL type are initialized simultaneously.

Range: yes, no

Default: no

Example

```
init-card:loc=1201
init-card:loc=1101:data=persist
init-card:loc=1113:initclk=yes
init-card:appl=eoam:initclk=yes:force=yes
```

Dependencies

The shelf and card must be equipped.

Either the **loc** or **appl** parameter, but not both parameters, must be specified in the command.

The following card locations (**loc** parameter) are not allowed for this command: **1117**, **1118**, and all xy09 and xy10 card locations (where x is the frame and y is the shelf).

If the **loc** parameter is specified with the **initclk** parameter, the **loc** parameter value must be card location **1113** or **1115**. If the **appl** parameter is specified with the **initclk** parameter, the **appl** parameter value must be **eoam**.

If TDM reload would cause system clocks to fail that are required to keep links active or TSCSYNC available, the **initclk** parameter cannot be specified unless **force=yes** is also specified.



CAUTION: The resulting clock outage will probably cause loss of traffic on all links.

Clocks are required in the following situations:

- When at least one DS0 card is provisioned, one BITS clocks is required.
- When a high speed link is being master-timed, at least one high speed clock is required.
- When TSCSYNC is turned on, both SYSTEM clocks (A&B) are required.

The **initclk** parameter can be specified only for TDM cards that support bitfile reloading (TDM-15 or later).

The **force** parameter must be specified for cards that are not the In-service Normal state.

The **serial** parameter is valid only when used with the **appl** parameter.

The **appl=all** parameter can be specified only when the **serial=yes** parameter is also specified.

If the **serial** parameter is specified, the value of the **appl** parameter must be one of the following: **atmansi**, **ccs7itu**, **gls**, **sccp**, **ss7ansi**, **ss7gx25**, **stplan**, or **all**.

If the **data=persist** parameter is specified and any SCCP or EBDABLM cards present in the system cannot maintain a persistent LNP database over the reset, the **force** parameter must be specified.

The **force** parameter can be specified only when the **initclk**, **appl**, and **data** parameters are specified.

The **data** parameter is valid only for SCCP and EBDABLM card locations or GPLs, or MPS database (VSCCP) card locations or GPLs.

Notes

The TDM card has a processor but no application.

The LNP (see the **enable-ctrl-feat** command), G-Flex, G-Port, or INP feature must be turned on before the **data** parameter can be specified.

Various conditions in the system can prevent the persistence of the LNP data on the SCCP/EBDABLM cards. When this occurs and the **force** parameter is not specified, the following error is generated:

```
E3849 Cmd Rej: Card(s) cannot warm restart - FORCE parameter required
Verifying card(s) persistent LNP database - please wait
The following cards require a full data download:
Card      Reason
----      -
zzzz      xxxxxxxx
```

where *zzzz* is the card requiring the full data download, and *xxxxxxx* is one of the values listed in Table 5-54

Table 5-54. Reason That Card Requires a Full Data Download

xxxxxxx value	Description
POWER ON	Power on reset
XILINX VERSION	M256 Xilinx version has changed
DB VERSION	LNP Database version has changed
DB LEVEL	Database level is not supported or difference exceeds incremental loading capability
DB STATUS	Database status is incoherent
HW ERROR	Hardware error bit checks on the card fail
AUDIT FAILED	Checksum comparisons of the LNP database fail
AUDIT TIMEOUT	LNP initialization audit timed out
NO AUDIT	Unable to perform LNP DB audit. LNP audit not on or excessive number of unknown checksums
USER REQUEST	User initiated init-card or init-sys command reload type cold
UNKNOWN	Unknown
OTHER	Other

Output

init-card:loc=1201

Init Card command issued to card 1201

3021.0013 * CARD 1201 CCS7ITU Card is isolated from the system

3022.0201 * SLK 1201,A lsnsspn2 SLK unavailable for traffic
SLC=0 FECLLI=-----3023.1201 * SLK 1201,B lsnstpi SLK unavailable for traffic
SLC=0 FECLLI=-----

;

init-card:apl=all:serial=yes

Command entered at terminal #3.

Init Card command issued to card 1201

* 3021.0013 * CARD 1201 SS7ANSI Card is isolated from the system

** 3022.0236 ** SLK 1201,A lsnsspn2 REPT-LKF: not aligned
SLC=0 FECLLI=----- CLASS=MTP2

3023.0014 CARD 1201 SS7ANSI Card is present

3024.0200 SLK 1201,A lsnsspn2 RCVRY-LKF: link available
SLC=0 FECLLI=----- CLASS=MTP2

Init Card command issued to card 1202

* 3026.0013 * CARD 1202 ATMANSI Card is isolated from the system

** 3026.0236 ** SLK 1202,A lsnsspn3 REPT-LKF: not aligned
SLC=0 FECLLI=----- CLASS=SAAL

3027.0014 CARD 1202 ATMANSI Card is present

3028.0200 SLK 1202,A lsnsspn3 RCVRY-LKF: link available
SLC=0 FECLLI=----- CLASS=SAAL

;

init-card:loc=1101:data=refresh

Command entered at terminal #10.

Init Card command issued to card 1101

** 1127.0013 ** CARD 1101 SCCP Card is isolated from the system
ASSY SN: 97361659

1128.0329 SCCP SYSTEM SCCP capacity normal, card(s) abnormal

1129.0014 CARD 1101 SCCP Card is present
ASSY SN: 973616591234.1238 SYSTEM INFO Full LNP database reload initiated:
CARD=1101 GPL=SCCP CAUSE=USER REQUEST
Report Date: 00-02-24 Time: 16:27:195402.1241 SYSTEM INFO REPT EVT: LNP Incremental Loading.
database levels loaded : 0 of 1145
Report Date: 00-02-24 Time: 16:52:041234.1239 SYSTEM INFO LNP updates inhibited: loading stability
Report Date: 00-02-24 Time: 16:52:07

1234.1240 SYSTEM INFO LNP updates allowed: loading stability

```

Report Date: 00-02-24   Time: 16:52:09

1130.0096      CARD 1101 SCCP           Card has been reloaded

1131.0328      SCCP SYSTEM              SCCP is available
;
init-card:loc=1115:initclk=yes
tekelecstp 04-07-17 13:01:59 EST  EAGLE 31.6.0
Init Card command issued to card 1115
;

tekelecstp 04-07-17 13:01:59 EST  EAGLE 31.6.0
* 3021.0013 * CARD 1115 EOAM         Card is isolated from the system
;

tekelecstp 04-07-17 13:03:10 EST  EAGLE 31.6.0
3022.0014      CARD 1115 EOAM         Card is present
      ASSY SN: 1216115
;

```

init-flash

Initialize Flash

Use this command to load the Board PROM to the inactive FLASH memory of a specified card or range of cards. When a card is reinitialized, it runs this version of the GPL in the card's inactive FLASH memory.

Keyword: **init-flash**

Related Commands: **act-flash**, **clr-imt-stats**, **flash-card**, **init-imt-gpl**, **rept-imt-info**, **rept-imt-lvl1**, **rept-imt-lvl2**, **tst-imt**

Command Class: System Maintenance

Parameters

:code= (mandatory)

The version of the GPL being loaded onto the card.

Range: **appr**, **trial**

appr — The approved GPL version

trial — The trial GPL version

:boot= (optional)

This parameter indicates whether the HC-MIM or EPM based card should boot or not boot after the command successfully completes.

Multiple images can be flashed without having to boot after each flash. If multiple images are being flashed to the HC-MIM or EPM based card, this parameter can be used to prevent the card from booting after each image is flashed. If multiple images are being flashed and the card is allowed to boot after each flash, an image that is not activated after the card boots will be lost on a subsequent reset of the card.

Range: **yes**, **no**

yes — Reboot the card after the command completes successfully

no — Do not reboot the card after the command completes successfully.

Default: **yes**

:eloc= (optional)

End location. Location of the last card of a range of cards to be initialized.

Range: **1101-1113**, **1115**, **1201-1218**, **1301-1318**, **2101-2118**, **2201-2218**, **2301-2318**, **3101-3118**, **3201-3218**, **3301-3318**, **4101-4118**, **4201-4218**, **4301-4318**, **5101-5118**, **5201-5218**, **5301-5318**, **6101-6118**

:force= (optional)

This parameter is required to force the TDM-GTI bitfile reload if a clock outage will occur when **initclk=yes** is specified.

Range: **yes, no**

Default: **no**

:gpl= (optional)

The flash GPL type that is running on the cards in the specified range of cards.

Range: **xyyyyyy**

1 alphabetic character followed by 6 alphanumeric characters. Valid GPLs are:

blbios, blbepm, blcpld, bldiag, bldiag6, blvxw6, bpdcm, bphcap, bphcapt, bphmux, bpmpl, bpmplt, hipr, imtpci, plde1t1, and pldpmc1.

:initclk= (optional)

If this parameter is specified for an EOAM card location (1113 or 1115), it determines whether or not the TDM-GTI bitfile should be reloaded, causing a clock initialization.

The command will be accepted if the TDM being initialized is a TDM-GTI and the following conditions are true:

- The card being flashed is in location 1113 or 1115.
- Any required clocks from the mate OAM are valid, or the **force=yes** parameter is used.

Range: **yes, no**

Default: **no**

:loc= (optional)

The location of a single card to be initialized.

Range: **1101-1113, 1115, 1201-1218, 1301-1318, 2101-2118, 2201-2218, 2301-2318, 3101-3118, 3201-3218, 3301-3318, 4101-4118, 4201-4218, 4301-4318, 5101-5118, 5201-5218, 5301-5318, 6101-6118**

:sloc= (optional)

Start location. Location of the first card of a range of cards to be initialized.

Range: **1101-1113, 1115, 1201-1218, 1301-1318, 2101-2118, 2201-2218, 2301-2318, 3101-3118, 3201-3218, 3301-3318, 4101-4118, 4201-4218, 4301-4318, 5101-5118, 5201-5218, 5301-5318, 6101-6118**

:appl= (obsolete)

This parameter is obsolete; use the **gpl** parameter.

The **appl** parameter has been replaced with the **gpl** parameter to more accurately indicate that a GPL, and not an application, is specified for the parameter value.

Example

```
init-flash:loc=1105:code=trial
```

```
init-flash:sloc=1101:eloc=1112:gpl=bpdcm:code=appr
```

```
init-flash:loc=1113:code=appr:initclk=yes
```

```
init-flash:loc=1115:code=appr:initclk=yes:force=yes
```

```
init-flash:loc=1115:code=trial:initclk=no
```

Dependencies

The specified card for this command must be an HCAP, HCAP-T, DCM, DSM, E1/T1 MIM, HC-MIM, GPSM-II, MPL, MPL-T or EPM based. An HMUX card or a HIPR card can be specified, but only for locations xy09 and xy10 (x is the frame and y is the shelf).

Each specified card does not have to be defined in the database, but it does have to be aligned on the IMT bus.

If the card in the specified card location is provisioned, the card must be inhibited before this command is entered (unless the card is an HMUX card or a HIPR card).

If the target card is HMUX or HIPR, both of the card locations specified in the **sloc** and **eloc** parameters must contain HMUX cards or HIPR cards on the same IMT bus. For HMUX or HIPR the bus is implicit based on the specified location. Location xy09 specifies HMUX or HIPR A Bus, and location xy10 specifies HMUX or HIPR B Bus (where x is the frame and y is the shelf). For example, **sloc=1109:eloc=6109** specifies all HMUX cards or HIPR cards on the A Bus only; **sloc=1110:eloc=6110** specifies all HMUX cards or HIPR cards on the B Bus only. HMUX cards or HIPR cards from both the A bus and B bus cannot be flash downloaded simultaneously.

If the target card is an HC-MIM or EPM based card, the **gpl** parameter must be specified when the **loc** parameter is specified.

The **boot** parameter can be specified only if the target is an HC-MIM or EPM based card.

The **boot** parameter cannot be specified for the **blcpld** HC-MIM GPL.

The **init-flash** command cannot be entered during an IMT statistics collection period following an hourly boundary (IMT performance monitoring).

A card location that contains the active MASP cannot be specified for the **loc**, **sloc**, or **eloc** parameter.

The provisioning subsystem mode (simple, duplex) must be established prior to executing the command.

The **loc** parameter cannot be specified with the **eloc** and **sloc** parameters.

Either the **loc** parameter or the **eloc** and **sloc** parameters must be specified.

If the **eloc** and **sloc** parameters are specified, the **gpl** parameter must be specified. The cards in the locations specified in the **sloc** and **eloc** parameters must be running the specified general program load (**gpl**). Other cards in the range of card locations can be running other GPLs, but will not be initialized. Only the cards within the range that are running the specified GPL will be initialized.

The **sloc** parameter value must be less than the **eloc** parameter value, when the two parameters are specified.

The specified card cannot be running an inactive flash GPL when the command is executed.

If **initclk** is specified, the card location parameter value must be **1113** or **1115**.

If TDM reload would cause a system clock outage, the **initclk** parameter cannot be specified unless **force=yes** is also specified.



CAUTION: The resulting clock outage will probably cause loss of traffic on all links.

The command will be accepted if the TDM being initialized is a TDM-GTI and the following conditions are true:

- The card being flashed is in location 1113 or 1115.
- Any required clocks from the mate OAM are valid, or the **force=yes** parameter is used.

The **initclk** parameter can be specified only for TDM cards that support bitfile reloading (TDM-15 or later).

EPM-based cards cannot support a valid trial version of the **blbepm** GPL and **blcpld** GPL at the same time. One of these GPLs must be downloaded and activated before the other one can be downloaded. The HC-MIM card cannot support a valid trial version of the **blbios** GPL and **blcpld** GPL at the same time. One of these GPLs must be downloaded and activated before the other one can be downloaded.

Notes

Card locations **1114**, **1116**, and **1117** are not valid and cannot be specified.

For the HC-MIM or EPM based cards, multiple images can be flashed without having to boot the card after each flash. If multiple images are being flashed to the card the **boot=no** parameter can be used to prevent the card from booting after each image is flashed. After flashing any number of images, the card can be reset either by entering the **init-flash** command with the **boot=yes** parameter or by entering the **init-card** command. If multiple images are being flashed and the card is allowed to boot after each flash, any images that are not activated after the card boots will be lost on a subsequent reset of the card.

Output

```
init-flash:loc=1105:code=trial
rlghncxa03w 04-01-05 13:05:05 EST EAGLE 31.3.0
FLASH Memory Downloading for card 1105 Started.

rlghncxa03w 04-01-05 13:05:05 EST EAGLE 31.3.0
BPHCAP Downloading for card 1105 Complete.

rlghncxa03w 04-01-05 13:05:05 EST EAGLE 31.3.0
Command Completed.
;
init-flash:sloc=1101:eloc=1112:gpl=bpdcn:code=appr
rlghncxa03w 05-01-02 13:05:05 EST EAGLE 33.0.0
FLASH Memory Download for cards 1101 - 1112 Started.
;
rlghncxa03w 05-01-02 13:05:05 EST EAGLE 33.0.0
FLASH Memory Download for cards 1101 - 1112 Completed.
LOC 1101 : PASSED
LOC 1102 : PASSED
LOC 1112 : PASSED

ALL CARD RESULTS PASSED
;
rlghncxa03w 05-01-02 13:05:05 EST EAGLE 33.0.0
Command Completed.
;
init-flash:loc=1113:code=appr:initclk=yes
rlghncxa03w 04-03-08 10:02:04 EST EAGLE 31.6.0
FLASH Memory Download for card 1113 Started.
;

rlghncxa03w 04-03-08 10:02:23 EST EAGLE 31.6.0
FLASH Memory Download for card 1113 Completed.
;
```

init-imt-gpl

Initialize IMT GPL

Use this command to load the specified IMT GPL software to the specified card and to reset that card. The application software is reloaded following IMT reset.

Keyword: `init-imt-gpl`

Related Commands: `alw-card`, `inh-card`, `init-card`, `rept-stat-card`

Command Class: System Maintenance

Parameters

:code= (mandatory)

Specifies which IMT GPL to load to the card.

Range: `appr`, `refresh`, `trial`

`appr` — The approved GPL version

`refresh` — Reload approved GPL version without card reset

`trial` — The trial GPL version

:loc= (optional)

Specifies the address of the card to be initialized.

Range: `1101-1108`, `1111-1112`, `1201-1208`, `1211-1218`, `1301-1308`, `1311-1318`, `2101-2108`, `2111-2118`, `2201-2208`, `2211-2218`, `2301-2308`, `2311-2318`, `3101-3108`, `3111-3118`, `3201-3208`, `3211-3218`, `3301-3308`, `3311-3318`, `4101-4108`, `4111-4118`, `4201-4208`, `4211-4218`, `4301-4308`, `4311-4318`, `5101-5108`, `5111-5118`, `5201-5208`, `5211-5218`, `5301-5308`, `5311-5318`, `6101-6108`, `6111-6118`

Default: All locations

Example

```
init-imt-gpl:loc=1201:code=trial
```

```
init-imt-gpl:code=refresh
```

```
init-imt-gpl:code=appr
```

Dependencies

The card location shelf must be within the allowed ranges as specified on the **loc** parameter. The shelf is the first two digits of the **loc** parameter.

The card location slot must be within the allowed ranges as specified on the **loc** parameter. The slot is the second two digits of the **loc** parameter.

The card location cannot contain a card with flash memory (HCAP, HCAP-T, DCM, MPL, MPL-T, HC MIM, HIPR, or HMUX).

When this command is entered, no other action command can be in progress.

If the **code=appr** parameter is specified, the **loc** parameter must be specified.

If the **code=trial** parameter is specified, the **loc** parameter must be specified, and the specified card location must be equipped and in service.

If the **code=appr** or the **code=refresh** parameter is specified, the card must be connected to at least one IMT bus and communicating with the active MASP when the command is entered.

The **init-imt-gpl** command cannot be entered if any of the following commands is running: **clr-imt-stats**, **rept-imt-info**, **rept-imt-lvl1**, **rept-imt-lvl2**, **tst-imt**.

This command must not be entered during IMT statistics collection following an hourly boundary.

Notes

None

Output

```

init-imt-gpl:loc=1201:code=trial
    rlgncxa03w 04-02-27 16:53:22 EST    EAGLE 31.3.0
    Initializing IMT GPL for card 1201.

    rlgncxa03w 04-02-27 16:53:22 EST    EAGLE 31.3.0
    * 0192.0013 * CARD 1201 SS7ANSI      Card is isolated from the system

    rlgncxa03w 04-02-27 16:53:22 EST    EAGLE 31.3.0
    0193.0014   CARD 1201 SS7ANSI      Card is present

    rlgncxa03w 04-02-27 16:53:22 EST    EAGLE 31.3.0
    0194.0096   CARD 1201 SS7ANSI      Card has been reloaded
;

```

init-mux**Initialize High-Speed Multiplexer**

Use this command to reset a single HMUX or HIPR card or all HMUX or HIPR cards on the specified HMUX or HIPR bus.

If the command is entered between the **init-flash** command and the **act-flash** command, the command boots the HMUX or HIPR processor and brings down the respective IMT bus temporarily (approximately 10 seconds) until the HMUX or HIPR card or cards come back into service.

If the command entry is not between the **init-flash** command and the **act-flash** command, the command boots the HMUX or HIPR processor without bringing down the respective IMT bus.

Keyword: **init-mux**

Related Commands: **act-flash**, **init-flash**

Command Class: System Maintenance

Parameters

:bus= (optional)

The HMUX or HIPR bus to be reset. All HMUX or HIPR cards on the specified bus will be reset.

Range: **a, b**

Default: **a**

:force= (optional)

Use this parameter to override normal safeguards. The **force=yes** parameter can be used to:

- Reset an entire HMUX or HIPR bus when the alternate bus is non-functional
- Reset one HMUX or HIPR card during a fault isolation test (**tst-imt**) command

Range: **yes, no**

Default: **no**

:loc= (optional)

The card location of a single HMUX or HIPR card to be reset.

Range: **1109-1110, 1209-1210, 1309-1310, 2109-2110, 2209-2210, 2309-2310, 3109-3110, 3209-3210, 3309-3310, 4109-4110, 4209-4210, 4309-4310, 5109-5110, 5209-5210, 5309-5310, 6109-6110**

Default: If not specified, all HMUX or HIPR cards on bus A or bus B are reset

Example

```
init-mux:bus=a
```

```
init-mux:loc=1109
```

Dependencies

An **act-flash** or **init-flash** command cannot be in progress when this command is entered.

Either the **bus** parameter or the **loc** parameter, but not both, must be specified.

This command is not allowed during an IMT Fault Isolation test (**tst-imt**), unless the **force=yes** parameter is specified.

This command is not allowed during the IMT statistics collection period following an hourly boundary (IMT performance monitoring).

Notes

None

Output

```
init-mux: loc=1109
rlghncxa03w 05-07-13 08:15:10 EST EAGLE 31.3.0
Command Completed.
;
```

init-network

Initialize the Network

Use this command to reset all the network cards. The network cards are ACMs, TSMs, and LIMs; that is, anything not part of the Maintenance and Administration Subsystem (MAS). This command resets all the network cards by reloading GPLs and data to the cards. Use of this command requires maintenance personnel to be located at the site.



CAUTION: Using this command causes network nodal isolation; however, if the network nodal isolation is less than two seconds, it may not be detected and may not be reported. Also, in some cases when network nodal isolation has been detected and a large number of maintenance troubles are being reported, the network nodal isolation message may not be reported. An alarm is generated, however.

Keyword: **init-network**

Related Commands:

Command Class: System Maintenance

Parameters

:force= (optional)
Force the resetting of all the network cards.
Range: **yes, no**
Default: **no**

Example

```
init-network
```

Dependencies

The MASP must be in either *Upgrade Phase 3* mode or *Full Function* mode. (See the “Notes” section for this command for more information.)

The system database must be coherent when this command is entered.

At least one card with either the **ss7ansi** or the **ccs7itu** application installed must exist with an in-service active signaling link.

The **force=yes** parameter must be specified to override the required four-card **ss7ansi** or **ccs7itu** configuration. The system then selects the best available of the remaining **ss7ansi** or **ccs7itu** cards.

Notes***Upgrade Phase 3***

Upgrade Phase 3 mode means that the MASPs are running GPLs that match the major revision defined for the approved GPLs, but the other network processors are only prepared to be upgraded.

Full Function

Full Function mode means that all MASPs are running GPLs that match the major revision defined for the approved GPLs. *Full Function* mode is the normal operating mode for the MASP.

Output

The command output scrolls into the scroll area of your display contiguously. However, for purposes of this example, each part has an explanation preceding it.

init-network

```
rlghncxa03w 06-05-27 08:15:10 EST EAGLE 35.0.0
(Reports the selection of an alternate card.)
rlghncxa03w 06-05-27 08:15:10 EST EAGLE 35.0.0
1234.1107 SYSTEM INFO INW ALT card as first to be preloaded
CARD=1201 GPL=SS7ANSI
Report Date: 06-05-27 Time: 16:29:15
```

Reports the selection of a main card.

init-network

```
rlghncxa03w 06-05-27 08:15:10 EST EAGLE 35.0.0
1234.1108 SYSTEM INFO INW MAIN card as last to be reset
CARD=1202 GPL=SS7ANSI
Report Date: 06-05-27 Time: 16:29:17
```

Reports that the card cross loading is inhibited.

init-network

```
rlghncxa03w 06-05-27 16:30:02 EST EAGLE 35.0.0
1234.1109 SYSTEM INFO Asserted DDL inhibition
CARD=1113 GPL=OAM
Report Date: 06-05-27 Time: 16:27:18
```

Reports that a card reset has been issued.

init-network

```
rlghncxa03w 06-05-27 16:30:02 EST EAGLE 35.0.0
1234.1110 SYSTEM INFO Card reset command issued
CARD=1204 GPL=SS7ANSI
Report Date: 06-05-27 Time: 16:30:18
```

Reports that a card is being allowed to load.

init-network

```
rlghncxa03w 06-05-27 16:30:02 EST EAGLE 35.0.0
1234.1111 SYSTEM INFO Allowing card to load
CARD=1204 GPL=SS7ANSI
Report Date: 06-05-27 Time: 16:30:18
```

Reports that INW is waiting for validation of card loading.

init-network

```
rlghncxa03w 06-05-27 16:30:02 EST EAGLE 35.0.0
1234.1112 SYSTEM INFO Waiting for validation of card loading
CARD=1204 GPL=SS7ANSI
Report Date: 06-05-27 Time: 16:30:18
```

Reports that INW has detected successful completion of card loading.

init-network

```
rlghncxa03w 06-05-27 16:30:02 EST EAGLE 35.0.0
1234.1113 SYSTEM INFO Detected card loaded
CARD=1204 GPL=SS7ANSI
Report Date: 06-05-27 Time: 16:30:18
```

Reports that INW has detected the reset or removal of a card.

init-network

```
rlghncxa03w 06-05-27 16:30:02 EST EAGLE 35.0.0
1234.1114 SYSTEM INFO Detected card reset or removed
CARD=1204 GPL=SS7ANSI
Report Date: 06-05-27 Time: 16:30:18
```

Reports that the card is being allowed to crossload.

init-network

```
rlghncxa03w 06-05-27 16:30:02 EST EAGLE 35.0.0
1234.1115    SYSTEM      INFO  Allowed card to skip DDL inhibited
              CARD=1204    GPL=SS7ANSI
              Report Date: 06-05-27 Time: 16:30:18
```

Reports that DDL inhibition has been removed.

init-network

```
rlghncxa03w 06-05-27 16:30:02 EST EAGLE 35.0.0
1234.1116    SYSTEM      INFO  Removed DDL inhibition
              CARD=1113    GPL=OAM
              Report Date: 06-05-27 Time: 16:30:18
```

If **init-network** is entered during an upgrade, reports that the upgrade is to continue.

init-network

```
rlghncxa03w 06-05-27 16:30:02 EST EAGLE 35.0.0
1234.1117    SYSTEM      INFO  Initialize OAMs to continue upgrade
              CARD=1113    GPL=OAM
              Report Date: 06-05-27 Time: 16:30:18
```

Reports that a card must be reset manually or removed.

init-network

```
rlghncxa03w 06-05-27 16:30:02 EST EAGLE 35.0.0
1234.1118    SYSTEM      INFO  Card must be manually reset/removed
              CARD=1204    GPL=SS7ANSI
              Report Date: 06-05-27 Time: 16:30:18
```

Reports that a card has failed to reset.

init-network

```
rlghncxa03w 06-05-27 16:30:02 EST EAGLE 35.0.0
1234.1119    SYSTEM      INFO  Card failed to reset
              CARD=1204    GPL=SS7ANSI
              Report Date: 06-05-27 Time: 16:30:18
```

Reports that a DDL inhibition assertion has failed.

init-network

```
rlghncxa03w 06-05-27 16:30:02 EST EAGLE 35.0.0
1234.1120    SYSTEM      INFO  Failed to assert DDL inhibition
              CARD=1113    GPL=OAM
              Report Date: 06-05-27 Time: 16:30:18
```

Reports that an internal error has stopped an **init-network**.

init-network

```
rlghncxa03w 06-05-27 16:30:02 EST EAGLE 35.0.0
Command Aborted : Internal error.
```

Reports that a failure to load a card has stopped an **init-network**.

init-network

```
rlghncxa03w 06-05-27 16:30:02 EST EAGLE 35.0.0
Command Aborted : Card 1206 failed to load.
```

init-oap

Initialize OAP Processor

Use this command to send a hardware signal to the indicated OSS/Application Processor (OAP), causing it to reset and reinitialize its operational software.

NOTE: This command cannot be used for EOAPs (Enhanced Operation System Support Application Processes).

Keyword: **init-oap**

Related Commands: **chg-trm, rept-stat-seas**

Command Class: System Maintenance

Parameters

:oap= (mandatory)

The OAP that is to be initialized. Any value (**a**, **b**, or **both**) can be specified, regardless of the actual or intended OAP configuration.

Range: **a, b, both**

:force= (optional)

If the specified OAP is operational (that is, if its state is IS-NR or IS-ANR), and it is the only operational OAP, then the **force=yes** parameter must be specified to reset it. If the specified OAP is not operational, then **force=yes** is not required.

Range: **yes, no**

Default: **no**

Example

```
init-oap:oap=a
```

```
init-oap:oap=b
```

```
init-oap:oap=both:force=yes
```

Dependencies

The SEAS feature must be turned on before this command can be entered.

No other action command can be in progress when this command is entered.

The **force=yes** parameter must be specified to reset the last OAP.

Notes

The EAGLE 5 ISS determines the OAP configuration (single vs. dual) by querying the OAP. If one or both of the OAPs are not operational, then the EAGLE 5 ISS might receive incorrect information about the OAP configuration. Furthermore, if no OAP terminals are defined, no OAP queries are sent, the OAM defaults to a single configuration, and this information may be incorrect.

To allow an OAP to be reset by an OAM not configured for it or when no OAP terminals are yet defined, the **init-oap** command can be used to specify either OAP or both OAPs, even if doing so conflicts with the actual OAP configuration.

Output

```
init-oap:oap=a
```

```
rlghncxa03w 05-07-01 16:40:40 EST  EAGLE 31.3.0
```

```
Initialization signal sent to OAP A
```

```
Command Completed.
```

```
init-oap:oap=both:force=yes
```

```
rlghncxa03w 05-07-01 16:40:40 EST  EAGLE 31.3.0
```

```
Initialization signal sent to OAP A
```

```
Initialization signal sent to OAP B
```

```
Command Completed.
```

In the following example, assume that the MDAL is malfunctioning when the command is entered.

```
init-oap:oap=b
```

```
rlghncxa03w 05-07-01 16:40:40 EST  EAGLE 31.3.0
```

```
Info: MDAL is not operational. OAP initialization may not occur.
```

```
Initialization signal sent to OAP B
```

```
Command Completed.
```

```
;
```

init-sys**Initialize System**

Use this command to reset all cards in the system (except HMUX and HIPR cards). Use this command also to log out the current users. When you first enter this command, a caution message is displayed in the scroll area requesting that you re-enter the command to confirm the operation. You have 30 seconds to re-enter the command. The only valid commands that you can enter after entering the **init-sys** command the *second* time are the commands **login** and **act-user**.



CAUTION: This command causes a complete system reload, and you should use it only during periods of low traffic. Use this command only when directed by Tekelec Technical Service at (888) FOR-TKLC.



CAUTION: When the **init-sys** command executes, the system does not retain the manually initiated state (for example, OOS-MT-DSBLD) for the signaling link, card, or the terminal. After the command executes, the system attempts to bring all provisioned links, cards, and terminals on line, including those that were previously out of service. You will need to manually put each device back into its previous state after the system is back on line. It is, therefore, advisable to print or electronically capture the output of the **rept-stat-slk**, **rept-stat-card**, and **rept-stat-trm** commands for reference prior to issuing the **init-sys** command. To restore a device to its previous state, issue the appropriate inhibit/deactivate command listed in this manual in the section for each of the above **rept-stat** commands.

Keyword: **init-sys**

Related Commands: **act-gpl**, **chg-db**, **chg-gpl**, **copy-gpl**, **copy-meas**, **rept-stat-db**

Command Class: System Maintenance

Parameters

:data= (optional)

High memory refresh. This parameter causes data to be reloaded to the specified card. This parameter is used to reload data if the LNP, G-Flex, G-Port, or INP feature is on. This parameter is applicable only to network cards containing the LNP database (SCCP, EBDABLM) or the MPS database (VSCCP).

Range: **refresh**, **persist**

refresh — Causes data to be reloaded to the specified card.

persist — Indicates that the database is not to be reloaded to the card. Used to request that the EAGLE 5 ISS perform a warm restart of the requested cards. The EAGLE 5 ISS performs various checks to ensure that all conditions necessary to initiate the warm restart are in place (for example, that the TSM/BLM card is present and ready and that the downloaded LNP database is coherent. The LNP database audit cannot be performed prior to the card reset.) The **force** parameter is required if all of the specified cards do not meet the warm restart requirements. During the card initialization and loading sequence, a warm restart is performed for all cards that meet the warm restart conditions.

Default: **refresh**

:force= (optional)

Allows the command to be processed if the **data=persist** parameter is specified and all the network cards containing the LNP database (SCCP, EBDABLM) cannot maintain a persistent LNP database over the reset.

Range: **yes**, **no**

Default: **no**

Example**init-sys****init-sys:data=persist****Dependencies**

When this command is entered, another **init-sys** command cannot be in progress on another port.

If the **data=persist** parameter is specified and any SCCP or EBDABLM cards present in the system cannot maintain a persistent LNP database over the reset, the **force** parameter must be specified.

The **force** parameter is valid only with the **data** parameter.

The LNP, G-Flex, G-Port, or INP feature must be turned on before the **data** parameter can be specified,

When the **init-sys** command is entered with parameters, the parameters that are entered the first time must be the same parameters that are entered the second time for the confirmation command.

Notes

When the **init-sys** command is entered the first time, you have 30 seconds to enter the command again. After the command is accepted, a delay of 10 seconds gives the system time to broadcast the information message regarding the system initialization.

From the time that the **init-sys** command is accepted, you must wait approximately two minutes before you can log into the system. If the system terminal is in the VT-100/VT-320 mode, the terminal display will be refreshed with nonzero alarm counts. During this 2-minute interval, an intermediate screen refresh caused by the MASPs' role change from active to standby, and from standby to active. This screen refresh is typically a partial refresh and the alarm indicators are set to zero.

If you are logged into the system in the KSR mode, you receive UAM 0009 (MASP became active) to indicate that you are now able to log into the system. UAM 0009 could be issued twice due to possible transient MASP role change (switching from active to standby). Following the execution of the **init-sys** command, the MASP that was active before the **init-sys** command was entered will be the active MASP when the system has finished reinitializing. TSM cards are reloaded only in the event of power failure or hardware reboot. The execution of this command does not require the TSM cards to be reloaded.

Various conditions in the system may prevent the persistence of the LNP data on the SCCP/EBDABLM cards. When this occurs and the **force** parameter is not specified, the following error is generated:

```
E3849 Cmd Rej: Card(s) cannot warm restart - FORCE parameter required
Verifying card(s) persistent LNP database - please wait
The following cards require a full data download:
Card      Reason
----      -
zzzz      xxxxxxxx
```

where **zzzz** is the card requiring the full data download, and **xxxxxx** is one of the values listed in Table 5-55

Table 5-55. Reason That Card Requires a Full Data Download

xxxxxxx value	Description
POWER ON	Power on reset
XILINX VERSION	M256 Xilinx version has changed

Table 5-55. Reason That Card Requires a Full Data Download

xxxxxxx value	Description
DB VERSION	LNP Database version has changed
DB LEVEL	Database level is not supported or difference exceeds incremental loading capability
DB STATUS	Database status is incoherent
HW ERROR	Hardware error bit checks on the card fail
AUDIT FAILED	Checksum comparisons of the LNP database fail
AUDIT TIMEOUT	LNP initialization audit timed out
NO AUDIT	Unable to perform LNP DB audit. LNP audit not on or excessive number of unknown checksums
USER REQUEST	User initiated init-card or init-sys command reload type cold
UNKNOWN	Unknown
OTHER	Other

When the OA&M IP Security feature is turned on, and an IPSM card is inserted and initialized for the first time or is removed, inserted, and initialized again, the "SSH Host Keys Regenerated" UIM is displayed. The UIM shows the generated SSH Host Key fingerprint that must be provided at the secure client in order for secure information transfer to occur. The SSH Host Key fingerprint is changed whenever power is lost and restored to an IPSM card.

```
rlghncxa03 03-07-11 07:05:00 EST EAGLE 30.2.0
0021.1493 CARD 1111 INFO SSH Host Keys Regenerated
DSA Server Host Key FTRA-formatted Fingerprint=
84 7c 92 8b c 7c ds 19 1c 6 4b de 5c 8f c5 4d
Report Date:03-07-11 Time:22:27:36
```

When the OA&M IP Security feature is turned on, and an IPSM card is restarted with this command, the "SSH Host Keys Loaded" UIM is displayed. The UIM shows the current SSH Host Key fingerprint. The SSH Host Key fingerprint is not changed if the IPSM card does not lose power.

```
rlghncxa03 01-07-11 07:05:00 EST EAGLE 30.2.0
0021.1493 CARD 1111 INFO SSH Host Keys Loaded
DSA Server Host Key FTRA-formatted Fingerprint=
84 7c 92 8b c 7c ds 19 1c 6 4b de 5c 8f c5 4d
Report Date:03-07-11 Time:22:27:36
```

Output

The following example shows what happens when you enter the **init-sys** command once and enter the **init-sys** command a second time within 30 seconds, causing the system to start resetting all of its cards.

init-sys

```
rlghncxa03w 04-01-07 07:05:00 EST  EAGLE 31.3.0
Command entered at terminal #3
```

```
rlghncxa03w 04-01-07 07:05:01 EST  EAGLE 31.3.0
CAUTION: This command causes a complete system reload, and
will result in traffic loss.
Re-enter command within 30 seconds to confirm.
```

init-sys

```
rlghncxa03w 04-01-07 07:05:16 EST  EAGLE 31.3.0
Command entered at terminal #3
```

```
rlghncxa03w 04-01-07 07:05:17 EST  EAGLE 31.3.0
Init System command issued at terminal #3
```

The following example shows what happens when you enter the **init-sys** command once and allow more than 30 seconds to pass with no other keyboard entry.

init-sys

```
rlghncxa03w 04-01-05 07:05:00 EST  EAGLE 31.3.0
Command entered at terminal #3.
```

```
rlghncxa03w 04-01-05 07:05:01 EST  EAGLE 31.3.0
CAUTION: This command causes a complete system reload, and
will result in traffic loss.
Re-enter command within 30 seconds to confirm.
```

```
rlghncxa03w 04-01-05 07:05:31 EST  EAGLE 31.3.0
Init System command aborted due to confirmation timeout
```

The following example shows what happens when you enter the **init-sys** command once and enter a different command (**rls-alm:lvl=minr**), letting the 30-second timer expire for the second entry of the **init-sys** command.

init-sys

```
rlghncxa03w 04-01-05 07:05:00 EST  EAGLE 31.3.0
Command entered at terminal #3
```

```
rlghncxa03w 04-01-05 07:05:01 EST  EAGLE 31.3.0
CAUTION: This command causes a complete system reload, and
will result in traffic loss.
Re-enter command within 30 seconds to confirm.
```

rls-alm:lvl=minr

```
rlghncxa03w 04-01-05 07:05:10 EST  EAGLE 31.3.0
Command entered at terminal #3
```

```
rlghncxa03w 04-01-05 07:05:11 EST  EAGLE 31.3.0
All the minor alarms are released
```

```
rlghncxa03w 04-01-05 07:05:12 EST  EAGLE 31.3.0
Command Completed
```

```
rlghncxa03w 04-01-05 07:05:31 EST  EAGLE 31.3.0
Init System command aborted due to confirmation timeout
```


The following example shows what happens when the **init-sys** command is entered twice within 30 seconds, and specifies the **data=persist** parameter to perform a warm restart of the requested cards without reloading the database to the cards.

init-sys:data=persist

```
rlghncxa03w 04-01-05 07:05:31 EST EAGLE 31.3.0
Command entered at terminal #3
```

```
rlghncxa03w 04-01-05 07:05:31 EST EAGLE 31.3.0
CAUTION: This command causes a complete system reload, and will result in
traffic loss.
Re-enter command within 30 seconds to confirm.
```

```
init-sys:data=persist
rlghncxa03w 04-01-05 07:05:31 EST EAGLE 31.3.0
Command entered at terminal #3
rlghncxa03w 04-01-05 07:05:31 EST EAGLE 31.3.0
Init System command issued at terminal #3
```

lock

Lock Keyboard

Use this command to lock a terminal's keyboard. When the keyboard is locked, the system accepts no keyboard commands other than the **unlock** command. The keyboard remains locked until the logged on user's login password is entered at the UNLOCK prompt. When the keyboard is locked, any idle terminal monitor in effect for the terminal is suspended temporarily.

Keyword: lock

Related Commands: unlock

Command Class: Basic

Parameters

This command has no parameters.

Example

lock

Dependencies

The terminal cannot be an OAP terminal.

The terminal cannot be an **mgmt** terminal used for Network Surveillance.

The terminal cannot be a **telnet** terminal (terminal IDs 17-40).

Notes

As an alternative, you can unlock a locked terminal by entering the **inh-trm** command, followed by the **alw-trm** command.

Output

lock

```
rlghncxa03w 04-02-17 16:02:05 EST EAGLE 31.3.0
Terminal keyboard is locked. Enter UNLOCK command to unlock.
;
```

login

Login

Use this command to log into the system. After you enter this command, the system requests a password. For security reasons, the password is not displayed at the terminal.

Keyword: login

Related Commands: act-user, chg-pid, chg-secu-dflt, chg-user, dact-user, dlt-user, ent-user, logout, rept-stat-user, rtrv-secu-dflt, rtrv-secu-user, rtrv-user

Command Class: Basic

Parameters

:uid= (mandatory)

User ID. The system prompts the user for a valid password after entering in this ID.

Range: azzzzzzzzzzzzzzzz

1 alphabetic character followed by up to 15 alphanumeric characters

Example

login:uid=john

Dependencies

All the following dependencies assume the appropriate features are turned **on**.

The user ID must not be logged in to another port already, and it must not be revoked.

The user ID must have been logged in successfully within the number of days specified on the **uout** parameter of the **ent-user** command.

If the OA&M IP Security Enhancements feature is not turned on, you cannot change the password at the prompt from an IP User Interface telnet terminal (IDs 17-40) when:

- It is the first time the user is logging in with the assigned Userid and password
- The password has expired because of aging out.
You must log in with a new Userid and password for the first time or change an expired password from a serial terminal (terminal IDs 1-16).

Use the following rules for creating passwords:

- A new password cannot contain more than 12 characters.
- A new password must contain at least the number of characters that you specify on the **minlen** parameter of the **chg-secu-dflt** command.
- A new password must contain at least the number of alphabetic (**alpha** parameter), numeric (**num** parameter), and punctuation (**punc** parameter) characters that you specify on the **chg-secu-dflt** command.
- A new password cannot contain the associated user ID.

Notes

The **act-user** command can be used in place of **login**. The **act-user** command has been provided in compliance with TL1 standards.

When a new system is shipped, the user ID and password are set to the system. These should be changed immediately to ensure system security.

Output

Not applicable.

logout

Logout

Use this command to end a user session. The **logout** command has the same affect as the **dact-user** and **canc-user** commands.

4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218,
5301-5308, 5311-5318, 6101-6108, 6111-6118

Example

```
pass:loc=1201:cmd="ping 198.89.1.2"
pass:loc=1201:cmd="help"
```

Dependencies

The **loc** parameter value must correspond to an SSEDCM card location, or for INP, a VSCCP card location. SS7IPGW, IPGWI, IPLIM, and IPLIMI card locations are valid.

Notes

See Chapter 7, "Pass-Through Commands" for information on pass-through commands.

Output

The following example is not definitive of the output of the **ping** command. It is intended to show how **pass** command output from a card might appear.

```
pass:loc=1201:cmd="ping 198.89.1.2"
rlghncxa03w 04-02-17 15:35:05 EST EAGLE 31.3.0
ping - Command Accepted by 1201.
PASS: MASP A - COMPLTD
;
OUTPUT FROM 1201:
Pinging 192.168.100.4 with 32 bytes of data:
Reply from 192.168.100.3: bytes=32 time<10ms TTL=255
Reply from 192.168.100.3: bytes=32 time<10ms TTL=255
Reply from 192.168.100.3: bytes=32 time=140ms TTL=255
Reply from 192.168.100.3: bytes=32 time=10ms TTL=255
ping - Command Completed.
END OUTPUT FROM 1201.
;
```

rept-ftp-meas

Report Measurements to FTP

Use this command to manually initiate generation and FTP transfer of a measurements report from the Measurements Platform MCPM to the customer's FTP server.

Keyword: **rept-ftp-meas**

Related Commands: **rept-meas**

Command Class: Link Maintenance

Parameters

:enttype= (mandatory)

Entity type to report on in the measurements report.

Range: **eir, link, lnkset, lnp, lsdestni, lsonismt, lsorigni, mapscrn, np, origni, origininc, stp, stplan, tt**
eir — Measurements for Equipment Identity Register
link — Measurements for signaling links
lnkset — Measurements for linksets
lnp — Measurements for local number portability
lsdestni — Measurements for linkset destination network identifiers
lsonismt — Measurements for ISUP message type screening
lsorigni — Measurements for linkset originating network identifiers
mapscrn — Measurements for GSM MAP message screening
np — Measurements for INP and G-Port

origni — Measurements for originating network identifiers greater than 5
origninc — Measurements for originating network identifiers (less than 5, small networks) for network clusters
stp — Measurements for all nodes
stplan — Measurements for TCP/IP links.
tt — Measurements for translation types

:type= (mandatory)

The measurement report type.

Range: **avl, avld, avldth, comp, gtwy, mtc, mtc, mtc, nm, rbase, systot**

avl — Availability measurements

avld — Daily availability measurements

avldth — Day to hour availability measurements.

comp — Component measurements

gtwy — Internetwork gateway-related data from the STP for ANSI and ITU measurements. ANSI gateway measurements are pegged on a per-linkset, per-Network Indicator basis, whereas ITU measurements are pegged on a per-linkset basis.

mtc — Daily maintenance measurements

mtcdth — Day-to-hour maintenance measurements

mtch — Hourly maintenance measurements

mtcs — Link/linkset maintenance status

nm — Network management, on-demand

rbase — Schedule-report type record base measurements

systot — STP system totals

:day= (optional)

Day of the week for the specified daily measurement report.

Range: **mon, tue, wed, thu, fri, sat, sun**

Default: If not specified, the previous single day is reported.

:hh= (optional)

The specific half-hour for the specified report. The entry implies the ending time for the collection interval. For example, the parameter **hh=0300** generates a report for the interval 2:30-3:00.

Range: **0000-2400**

hhmm where *hh* = **00-24** (hour) and *mm* = **00 or 30** (minute)

:period= (optional)

The relative period for the report.

Range: **active, last, specific**

:qh= (optional)

The specific quarter-hour for the specified report. The entry implies the ending time for the collection interval. For example, the parameter **qh=0315** generates a report for the interval **3:00-3:15**.

Range: **0000-2400**

hhmm where *hh* = **00-24** (hour) and *mm* = **00, 15, 30, or 45** (minute)

Example

```
rept-ftp-meas:type=systot:enttype=stp
```

```
rept-ftp-meas:type=mtch:enttype=lnp
```

Dependencies

Only one **rept-ftp-meas** command can be in progress at any one time.

The Measurements Platform feature must be turned on (**chg-feat** command) and the Measurements Platform collection function (**chg-measopts:platformenable=on** command) must be enabled before this command can be entered.

A primary MCPM card must be available when this command is entered.

The 15 Minute Measurements feature must be turned on and the 15 Minute Measurements collection option (**chg-measopts:collect15min=on** command) must be on before the **qh** parameter can be specified.

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before:

- The **mtchlnp=on** parameter or the **mtcdlnp=on** parameter can be specified
- Entity type **lnp** can be specified

The GSM Map Screening feature (see the **enable-ctrl-feat** and **chg-ctrl-feat** commands) must be turned on before

- The **mtcdmap=on** parameter can be specified.
- Entity type **mapscrn** can be specified

Either the G-Port feature or the INP feature must be turned on before

- The **mtchnp=on** parameter or the **mtcdnp=on** parameter can be specified
- Entity type **np** can be specified

The Equipment Identity Register (EIR) feature must be enabled and turned on before the **enttype=eir** parameter can be specified,.

The **hh** parameter must specify a half-hourly boundary (the end of the requested half-hour for the report) for valid report types (**mtcd** and **nm** are excluded with message “E2307: QH or HH is not valid for this TYPE”).

The **qh** parameter must specify a quarter-hourly boundary (the end of the requested quarter-hour for the report) for valid report types (**avld**, **mtcd**, **nm**, **rbase**, and **mtcs** are excluded with message “E2307: QH or HH is not valid for this TYPE”).

Hourly collection and report processing cannot be in progress when report type **mtch** is specified.

Day-to-hour collection and report processing cannot be in progress

- When report type **mtcd** is specified
- When report type **mtcdth** is specified

Daily collection and report processing cannot be in progress when report type **mtcd** is specified.

Half-hourly collection and report processing cannot be in progress when report type **comp**, **systot**, **avl**, or **gtwy** is specified.

Quarter-hourly collection and report processing cannot be in progress when report type **comp**, **systot**, **avl**, or **gtwy** is specified.

5-minute collection and report processing cannot be in progress when report type **nm** is specified.

The **mtcdth** report type is unavailable between midnight and 1:00 AM (0100).

The **day** parameter can be specified only for report type **mtcd** and entity types **eir**, **lnp**, **np**, and **mapscrn**.

The **hh** and **qh** parameters cannot be specified together in the command.

When the **period=last** parameter is specified, the **hh** parameter, the **qh** parameter, and the **day** parameter cannot be specified.

When the **period=active** parameter is specified, the **qh** parameter cannot be specified.

When the **period=specific** parameter is specified, the **hh** parameter, the **qh** parameter, or the **day** parameter must be specified.

A half-hour boundary must be specified for the **hh** parameter, except for report type **mtch**; an hourly boundary must be specified for report type **mtch**.

A quarter-hour boundary must be specified for the **qh** parameter, except for report type **mtch**; an hourly boundary must be specified for report type **mtch**.

Table 5-56 indicates with an X valid parameter combinations for measurements reports; invalid combinations will generate an error message.

Table 5-56. rept-ftp-meas Valid and Invalid Parameter Combinations

Parameter Value	:type Parameter Values											
	avl	avld	avldth	comp	gtwy	mtcd	mtchth	mtch	mtcs	nm	systot	rbase
:entity												
link	X	X	X	X		X	X		X		X	X
lnkset				X	X	X	X		X		X	X
lnp						X		X		X		
lsdestni					X							
lsorigni					X							
lsonismt					X							
mapscrn								X		X		
np						X		X		X		
origni					X							
origninc					X							
stp					X	X	X				X	X
stplan	X					X	X					
tt						X						
:period												
last	X	X	X	X	X	X	X	X		X	X	
specific	X			X	X	X		X			X	
active									X			X

Notes

None

Output

```
rept - ftp-meas:type=mtcd:enttype=lnp
rlghncxa03w 04-02-27 12:47:07 EST EAGLE 31.3.0
Measurement Reports will be generated to FTP

rlghncxa03w 04-02-27 12:47:07 EST EAGLE 31.3.0
REPT-FTP-MEAS command was successful.

;
```

rept-imt-info**Display IMT Error and Use Statistics**

Use this command to display the following statistics:

- The IMT bus error statistics currently stored in the IMT fault isolation hourly statistics
- The current IMT bus use statistics (Bus use is the percentage of the capacity of the IMT bus that is used for data during a particular time.)
- The HMUX and HIPR card error statistics

Keyword: **rept-imt-info**

Related Commands: **clr-imt-stats**, **init-imt-gpl**, **rept-imt-lvl1**, **rept-imt-lvl2**, **tst-imt**

Command Class: System Maintenance

Parameters

:report= (mandatory)

Type of report to generate.

Range: **err**, **util**, **hmutexerr**, **hiprerr**

err— Produces a report of the IMT bus error statistics

util— Produces a report of the IMT bus use (utilization) statistics

hmutexerr— Produces a report of the HMUX card error statistics

hiprerr— Produces a report of the HIPR card error statistics

:ebucket= (optional)

End bucket. Specifies the last one-hour time period (*bucket*) for which error statistics are reported.

This parameter cannot be specified when **report=util** is specified.

Range: **0-15**

Default: If **sbucket** is specified—current **sbucket** value; information for only that time period is displayed.

If **sbucket** is not specified—**15**, the report includes statistics for all 16 time periods

:eloc= (optional)

End location. Specifies the card location of the last card in the range for the report.

Range: **1101-1113**, **1115**, **1201-1218**, **1301-1318**, **2101-2118**, **2201-2218**, **2301-2318**,
3101-3118, **3201-3218**, **3301-3318**, **4101-4118**, **4201-4218**, **4301-4318**, **5101-5118**,
5201-5218, **5301-5318**, **6101-6118**

Default: If **sloc** is specified—current **sloc** value; displays information for one card

If **sloc** is not specified—**1115**, which corresponds to IMT address 251 (**e=251**); displays information for entire range of locations.

:erronly= (optional)

Use this parameter to filter output to display only non-zero counts in the error report.

This parameter can be specified only if **report=err** is specified.

Range: **yes**, **no**

Default: yes

:eshelf= (optional)

End shelf location for HMUX or HIPR statistics. This parameter specifies the shelf location of the last shelf in the range.

This parameter can be specified only if **report=hmuxerr** or **report=hiprerr** is specified.

Range: **1100, 1200, 1300, 2100, 2200, 2300, 3100, 3200, 3300, 4100, 4200, 4300, 5100, 5200, 5300, 6100**

Default: If **sshelf** is specified—current **sshelf** value.
If **sshelf** is not specified—**6100**, displays information for entire range of shelves.

:eslot= (optional)

Ending slot location for HIPR statistics for the cards in the HIPR shelf.

This parameter can be specified only if **report=hiprerr** is specified.

Range: **1-8, 11-18**

Default: If **sslot** is specified—current **sslot** value.
If **sslot** is not specified—not used.

:mode= (optional)

Display mode to use for error report.

This parameter can be specified only if **report=err** is specified.

Range: **full, stats, summary**

full—Displays information for each card along with a summary report

stats—Displays only individual card statistics

summary—Displays the summary portion of the report

Default: **summary**

:sbucket= (optional)

Start bucket. Specifies the first one-hour time period (bucket) for which error statistics are reported.

This parameter cannot be specified when **report=util** is specified.

Range: **0-15**

Default: **0**

:sloc= (optional)

Start location. Specifies the card location of the first card in the range for the report.

Range: **1101-1113, 1115, 1201-1218, 1301-1318, 2101-2118, 2201-2218, 2301-2318, 3101-3118, 3201-3218, 3301-3318, 4101-4118, 4201-4218, 4301-4318, 5101-5118, 5201-5218, 5301-5318, 6101-6118**

Default: If **eloc** is specified—current **eloc** value.
If **eloc** is not specified—**1201**, which corresponds to IMT address 0; displays information for entire range of card locations.

:sshelf= (optional)

Start shelf location for HMUX or HIPR statistics. This parameter specifies the shelf location of the first shelf in the range.

This parameter can be specified only if **report=hmuxerr** or **report=hiprerr** is specified.

Range: **1100, 1200, 1300, 2100, 2200, 2300, 3100, 3200, 3300, 4100, 4200, 4300, 5100, 5200, 5300, 6100**

Default: If **eshelf** is specified—current **eshelf** value.
If **eshelf** is not specified—**1100**, displays information for entire range of shelves.

:sslot= (optional)

Starting slot location for HIPR statistics for the cards in the HIPR shelf.

This parameter can be specified only if **report=hiprerr** is specified.

Range: 1-8, 11-18

Default: If **eslot** is specified—current **eslot** value.
If **eslot** is not specified—not used.

:trm= (optional)

The serial port (printer location) to which the report is to be sent.

Range: 1-16

Default: Report displays on the terminal where the command is issued

Example

```
rept-imt-info:report=err
rept-imt-info:report=err:sloc=1101:eloc=1102:mode=stats
rept-imt-info:report=err:sloc=1101:eloc=1102:mode=full:erronly=no
rept-imt-info:report=util
rept-imt-info:report=hmuxerr
rept-imt-info:report=hiprerr:sbucket=0
rept-imt-info:
report=hiprerr:sshelf=1100:sslot=1:eslot=2:sbucket=0
```

Dependencies

No related IMT command can be in progress when the **rept-imt-info** command is entered. Only one report can be active at a time.

This command cannot be entered at a telnet terminal (terminal ID 17-40).

The **rept-imt-info** command cannot be entered during an IMT statistics collection period following an hourly boundary (IMT performance monitoring).

The following **report** parameter combinations are not valid in the command:

- When the **report=util** parameter is specified, the **ebucket**, **erronly**, **mode**, and **sbucket** parameters cannot be specified.
- When the **report=hmuxerr** parameter or the **report=hiprerr** parameter is specified, the **erronly** and **mode** parameters cannot be specified.
- When the **report** parameter values **err**, **util**, and **hmuxerr** are specified, the **sslot** and **eslot** parameters cannot be specified.

The ending hourly time period cannot be less than the starting hourly time period. For example, **rept-imt-info:report=err:sbucket=5:ebucket=3** cannot be specified.

When the **sslot** and **eslot** parameters are specified, the **sshelf** parameter must be specified and the **eshelf** parameter cannot be specified (slot information is reported for a single shelf).

The **sshelf** and **eshelf** parameters can be specified only when the **report=hmuxerr** parameter or the **report=hiprerr** parameter is specified.

The HIPR card slots (**09** and **10**) cannot be specified for the **sslot** and **eslot** parameter values.

Notes

This command can be canceled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

IMT Bus Error Statistics: Each hourly time period (*bucket*) contains the IMT bus error statistics for a single hour. A total of 16 hourly time periods, numbered **0** to **15**, exist. Hourly time period **0** is the most-recent (current), and hourly time period **15** is the least-recent (oldest).

Each hour the statistics for the current hourly time period expire, and the hourly time periods advance. That is, after the advance, the statistics previously reported in hourly time period **0** are now reported in the hourly time period **1**, and so on. The statistics reported in the hourly time period **15** are no longer available after the change.

When a card is reinitialized, it begins collecting statistics in hourly time period **0** and changes to hourly time period **1** at the start of the next hour. Thus, the first statistics that a card collects after being reinitialized may be for a partial hour.

IMT Bus Use Statistics: The statistics are calculated for all cards in the specified range and summarized. Only the summarized statistics are displayed. *IMT bus use* is the percentage of the capacity of the IMT bus that is used for data during a particular time.

HMUX or HIPR Statistics (Bucket Summary): Each hourly time period (*bucket*) contains the HMUX or HIPR statistics for a single hour. A total of 16 hourly buckets, numbered **0** to **15**, exist. Bucket **0** is the most-recent (current) bucket; bucket **15** is the least-recent (oldest).

Each hour on the hour, the least-recent bucket expires and the hourly time periods advance. That is, after the advance, the statistics previously reported in bucket **0** are now reported in bucket **1**, and so on. The statistics that were reported in bucket **15** are no longer available after the change.

If a card booted within the past 16 hours, a message is displayed indicating that no data is available for that card. When a card boots, it starts to collect statistics in bucket **0**. It changes to bucket **1** at the start of the next hour. Thus, the first bucket of statistics that a card collects after booting might be for part of an hour.

A HIPR card stores the statistics separately for each card on its shelf. When the **sloc** and **eloc** parameters are specified, the HIPR card sends the statistics for each card to the OAM application for display. When the **sloc** and **eloc** parameters are not specified, the HIPR card sends an aggregate number to the OAM application to represent statistics for all cards on its shelf.

HMUX or HIPR Statistics (Cumulative): HMUX or HIPR cumulative statistics maintain running totals of the error count for each parameter from card initialization. The error counts can be cleared by entering a **clr-imt-stats:all=yes** command to clear all HMUX and HIPR cards, or a **clr-imt-stats** command to clear a specific card.

Table 5-57 explains the **rept-imt-info:report=hmuxerr** statistics.

"Excessive" is primarily determined by the operator, based upon:

- Overall system behavior
- Duration of time since the last statistics were taken
- Statistics of an individual card in relation to other cards

Table 5-57. Explanation of **rept-imt-info:report=hmuxerr** Statistics

IMT Statistic	Explanation Of Statistic	Probable Causes	Recommended Action
LOW SPEED STATS			
IMT Rx Packet CRC Error	Bad Checksum in received IMT packet. Usually caused by corrupted data. Detected by hardware.	Card insertion/ removal or boot. May occur infrequently in a normal system.	None if card has booted or was just inserted. Otherwise, call Tekelec Technical Services if count is excessive in relation to other cards.
IMT Rx Packet Format Error	Occurs when the Start of Message byte of the IMT packet is followed by unexpected data. Detected by hardware.	Card insertion/removal or boot.	None if card has booted or was just inserted. Otherwise call Tekelec Technical Services if count is excessive in relation to other cards.
IMT Rx Violation Error	Received an illegal character from the IMT. Detected by hardware.	Card insertion/removal or boot.	None if card has booted or was just inserted. Otherwise call Tekelec Technical Services if count is excessive in relation to other cards.
CPU Rx FIFO Full	HMUX's IMT interface is congested. Detected by hardware.	Indicates that data was received at a higher rate than could be processed	Call Tekelec Technical Services if count is excessive in relation to other HMUX cards.
CPU Rx FIFO Half Full	HMUX's IMT interface is becoming congested. Detected by hardware.	Indicates that data was received at a higher rate than could be switched for a short period.	None. FIFO half full is just an indication; no action is required.
CPU Rx FIFO Empty Before SOM	Occurs when valid packet data is read from the CPU Rx FIFO by the FPGA but the FPGA is unable to locate the beginning (SOM) of the packet before all the data was read.	The SOM was corrupted while being written into the CPU Rx FIFO from the low speed link.	None. This error will automatically empty the FIFO so that it is ready to continue receiving data. However, if the problem persists, there might be some type of FPGA problem that requires further investigation.
CPU Rx FIFO Empty	Occurs when valid packet data is read from the CPU Rx FIFO by the	The SOM was corrupted while being written into the CPU Rx FIFO or a	None. This error will automatically empty the FIFO so that it is ready to

Table 5-57. Explanation of **rept-imt-info:report=hmuxerr** Statistics

IMT Statistic	Explanation Of Statistic	Probable Causes	Recommended Action
Before EOM	FPGA but the FPGA is unable to locate the end (EOM) of the packet before all of the data was read.	partial packet was written into the FIFO from the low speed link.	continue receiving data. If the problem persists, some type of FPGA or high-speed link problem might require further investigation.
CPU Rx Packet SOM Before EOM	A Start of Message was received when an End of Message was expected from the IMT bus.	Packet was corrupted in the system (EOM lost) and has another packet appended to it.	None.
CPU Rx Packet CRC Error	Occurs when valid packet data is read from the CPU Rx FIFO by the FPGA and transferred to the processor memory, and the FPGA calculated CRC does NOT match the CRC word at the end of the packet.	The data was corrupted while being written into the CPU Rx FIFO, or data coming from the low speed link is corrupted.	None. If the problem persists, some type of FPGA or high-speed link problem might require further investigation.
DMA Terminal Count Interrupt	Received IMT packet length is longer than the max allowed. Detected by hardware.	Card insertion/removal or boot.	None if card has booted or was just inserted. Otherwise, call Tekelec Technical Services if count is excessive in relation to other cards.
CPU Tx Buffer EOB	A packet that was being transmitted from the CPU Tx Buffer did not have an EOM. Therefore, the full 512 bytes from the Tx buffer were transmitted.	The data was corrupted while being written into or being read from the FIFO.	None. If the problem persists, some type of FPGA problem might require further investigation.
CPU Tx Buffer Full	The Tx Buffer has had 512 bytes written to it and can accept no more.	A packet is being sent that is too large.	Write the EOM insert command to send the packet, write an abort command to reset the Tx buffer control interface, or issue a Tx Buffer reset from the processor.

Table 5-57. Explanation of **rept-imt-info:report=hmuxerr** Statistics

IMT Statistic	Explanation Of Statistic	Probable Causes	Recommended Action
CPU Tx Buffer Half Full	The Tx Buffer has had 256 bytes written to it.	256 bytes have been written to the Tx Buffer.	None.
IMT Bypass FIFO Full	The IMT Bypass FIFO has 32K bytes of data in it.	The low-speed link is experiencing very heavy traffic conditions, or the HMUX IMT Transmitter has been disabled or is not operating correctly.	Determine why IMT traffic is so heavy. Make sure the HMUX IMT Transmitter is enabled.
IMT Bypass FIFO Half Full	The IMT Bypass FIFO has 16K bytes of data in it.	The low-speed link is experiencing very heavy traffic conditions, or the HMUX IMT Transmitter has been disabled or is not operating correctly.	Determine why IMT traffic is so heavy. Make sure the HMUX IMT Transmitter is enabled. Under normal operation this condition should clear itself.
IMT Tx FIFO Full	HMUX's IMT Transmitter FIFO Full	TAXI transmitter logic for this channel is not operating properly.	Reset Tx FIFO. If all channels exhibit this problem, there might be an internal FPGA problem with the 125MHz clock.
IMT Tx FIFO Half Full	HMUX's IMT Transmitter Half FIFO Full	High burst rate or multiple large packet transmissions from IXP1250.	None
HIGH SPEED STATS			
IMT Rx Packet Format Error	Packet was received with a format error (for example, no EOM)	Packet was transmitted incorrectly or was corrupted by another device in the system.	None
IMT Rx Disparity Error	Fibre Channel transceiver received a disparity error on a character.	Noisy high-speed ring.	This is a hardware level issue. If the error persists, more detailed high-speed bus analysis is required.

Table 5-57. Explanation of **rept-imt-info:report=hmuxerr** Statistics

IMT Statistic	Explanation Of Statistic	Probable Causes	Recommended Action
IMT Rx Sync Lost Error	Fibre Channel transceiver is not receiving sync characters	Noisy high-speed ring. High-speed cable was disconnected. One of the HMUXs in the ring was removed.	This is a hardware level issue. If the error persists, more detailed high-speed bus analysis is required.
IMT Rx Code Word Error	Fibre Channel transceiver has received an invalid code word.	Noisy high-speed ring. Wrong command transmitted.	This is a hardware level issue. If the error persists, more detailed high-speed bus analysis is required.
CPU Receive FIFO Full	Communication CPU on the card is congested. Detected by hardware	Indicates that data was received at a higher rate than could be processed by the Communications processor.	Call Tekelec Technical Services if count is excessive in relation to other cards.
CPU Receive FIFO Half Full	Communication CPU on the card is becoming congested. Detected by hardware.	Indicates that data was received at a higher rate than could be processed for a short period.	None. FIFO half full is just an indication; no action is required.
CPU Rx FIFO Empty Before SOM	Occurs when valid packet data is read from the CPU Rx FIFO by the FPGA, but the FPGA is unable to locate the beginning (SOM) of the packet before all the data was read.	The SOM was corrupted while being written into the CPU Rx FIFO from the high speed link.	None. This error will automatically empty the FIFO so that it is ready to continue receiving data. However, if the problem persists, there might be some type of FPGA problem that requires further investigation.
CPU Rx FIFO Empty Before EOM	Occurs when valid packet data is read from the CPU Rx FIFO by the FPGA, but the FPGA is unable to locate the end (EOM) of the packet before all of the data was read.	The SOM was corrupted while being written into the CPU Rx FIFO, or a partial packet was written into the FIFO from the high speed link.	None. This error will automatically empty the FIFO so that it is ready to continue receiving data. If the problem persists, some type of FPGA or low-speed link problem might require further investigation.
CPU Rx Packet SOM	A Start of Message was received when an End of Message was expected	Packet was corrupted in the system (EOM lost)	None.

Table 5-57. Explanation of **rept-imt-info:report=hmuxerr** Statistics

IMT Statistic	Explanation Of Statistic	Probable Causes	Recommended Action
Before EOM	from the Fibre Channel bus.	and has another packet appended to it.	
CPU Rx Packet CRC Error	A packet received for this shelf contains a CRC error.	Packet was transmitted incorrectly or was corrupted by another device in the system.	Discard packet. If this problem persists, a more detailed analysis of the system is needed.
DMA Terminal Count Interrupt	Received IMT packet length (on Fibre Channel) is longer than the maximum allowed. Detected by hardware.	Card insertion/removal or boot.	None if card has booted or was just inserted. Otherwise call Tekelec Technical Services if count is excessive in relation to other cards.
CPU Tx Buffer EOB	A packet that was being transmitted from the CPU Tx Buffer did not have an EOM. Therefore, the full 512 bytes from the Tx buffer were transmitted.	The data was corrupted while being written into or being read from the FIFO.	None. If the problem persists, some type of FPGA problem might require further investigation.
CPU Tx Buffer Full	The Tx Buffer has had 512 bytes written to it and can accept no more.	A packet is being sent that is too large.	Write the EOM insert command to send the packet, write an abort command to reset the Tx buffer control interface, or issue a Tx Buffer reset from the processor.
CPU Tx FIFO Half Full	The Tx Buffer has had 256 bytes written to it.	256 bytes have been written to the Tx Buffer.	None.
IMT (High-speed) Bypass FIFO Full	The High-speed Bypass FIFO has 2K bytes of data in it.	The high-speed link is experiencing very heavy traffic conditions, or the HMUX High-speed Transmitter has been disabled or is not operating correctly.	Determine why high-speed traffic is so heavy. Make sure the HMUX High-speed Transmitter is enabled.
IMT (High-speed) Bypass	The High-speed Bypass FIFO has 1K bytes of data in it.	The high-speed link is experiencing very heavy traffic conditions or the HMUX High-speed	Determine why high-speed traffic is so heavy. Make sure HMUX High-speed Transmitter is

Table 5-57. Explanation of **rept-imt-info:report=hmuxerr** Statistics

IMT Statistic	Explanation Of Statistic	Probable Causes	Recommended Action
FIFO Half Full		Transmitter has been disabled or is not operating correctly.	enabled. Under normal operation this condition should clear itself.
IMT (High-speed) Rx FIFO Full	The High-speed Rx FIFO has 128K bytes of data in it.	The high-speed link is experiencing heavy traffic conditions. The Low-speed Transmitter is disabled, experiencing heavy traffic loads, or not operating correctly.	Determine why high-speed traffic is so heavy. Determine why low-speed traffic is so heavy. Make sure the HMUX Low-speed Transmitter is enabled.
IMT (High-speed) Rx FIFO Half Full	The High-speed Rx FIFO has 1K bytes of data in it.	The high-speed link is experiencing heavy traffic conditions. The Low-speed Transmitter is disabled, experiencing heavy traffic loads, or not operating correctly.	Determine why high-speed traffic is so heavy. Make sure the HMUX Low-speed Transmitter is enabled. Under normal operation this condition should clear itself.
MISC STATS			
Shelf ID UART Framing Error	UART Framing error received by HMUX in Shelf address data stream received from OAM.	Noisy or bad clock cable from Control Shelf to shelf in which error is reported.	Occasionally happens. This count should be low. Only if this count is VERY HIGH, bring it to the attention of Tekelec Technical Services.
Shelf ID UART Overrun Error	UART Overrun error received by HMUX in Shelf address data stream received from OAM.	Noisy or bad clock cable from Control Shelf to shelf in which error is reported.	Occasionally happens. This count should be low. Only if this count is VERY HIGH, bring it to the attention of Tekelec Technical Services.

Table 5-58 explains the **rept-imt-info:report=hiprerr** statistics.

"Excessive" is primarily determined by the operator, based upon:

- Overall system behavior
- Duration of time since the last statistics were taken
- Statistics of an individual card in relation to other cards

Table 5-58. Explanation of **rept-imt-info:report=hiprerr** Statistics

IMT Statistic	Explanation Of Statistic	Probable Causes	Recommended Action
LOW SPEED STATS			
IMT Rx Packet CRC Error	Bad Checksum in received IMT packet. Usually caused by corrupted data. Detected by hardware.	Card insertion, removal or boot. May occur infrequently in a normal system.	None if card has booted or was just inserted. Otherwise, call Tekelec Technical Services if count is excessive in relation to other cards.
IMT Rx Packet Format Error	Occurs when the Start of Message byte of the IMT packet is followed by unexpected data. Detected by hardware.	Card insertion/removal or boot.	None if card has booted or was just inserted. Otherwise call Tekelec Technical Services if count is excessive in relation to other cards.
IMT Rx Violation Error	Received an illegal character from the IMT. Detected by hardware.	Card insertion/removal or boot.	None if card has booted or was just inserted. Otherwise, call Tekelec Technical Services if count is excessive in relation to other cards.
IMT Rx Command Error	An invalid TAXI command detected in a received packet.	Packet was corrupted in the system.	None.
IMT Rx FIFO Full	HIPR's IMT interface is congested. Detected by hardware.	Indicates that data was received at a higher rate than could be processed	Call Tekelec Technical Services if count is excessive in relation to other HIPR cards.
IMT Rx FIFO Half Full	HIPR's IMT interface is becoming congested. Detected by hardware.	Indicates that data was received at a higher rate than could be switched for a short period.	None. FIFO half full is just an indication; no action is required.
IMT Tx FIFO Full	HIPR's IMT Transmitter FIFO Full	TAXI transmitter logic for this channel is not operating properly.	Reset Tx FIFO. If all channels exhibit this problem, there might be an internal FPGA problem with the 125MHz clock.
IMT Tx FIFO Half Full	HIPR's IMT Transmitter Half FIFO Full	High burst rate or multiple large packet	None

Table 5-58. Explanation of **rept-imt-info:report=hiprerr** Statistics

IMT Statistic	Explanation Of Statistic	Probable Causes	Recommended Action
		transmissions from IXP1250.	
HIGH SPEED STATS			
IMT Rx Packet Format Error	Packet was received with a format error (for example, no EOM)	Packet was transmitted incorrectly or was corrupted by another device in the system.	None
IMT Rx Disparity Error	Fibre Channel transceiver received a disparity error on a character.	Noisy high-speed ring.	This is hardware level issue. If the error persists, more detailed high-speed bus analysis is required.
IMT Rx Sync Lost Error	Fibre Channel transceiver is not receiving sync characters	Noisy high-speed ring. High-speed cable was disconnected. One of the HIPRs in the ring was removed.	This is hardware level issue. If the error persists, more detailed high-speed bus analysis is required.
IMT Rx Code Word Error	Fibre Channel transceiver has received an invalid code word.	Noisy high-speed ring. Wrong command transmitted.	This is hardware level issue. If the error persists, more detailed high-speed bus analysis is required.
IMT Rx Packet SOM Before EOM	A Start of Message was received when an End of Message was expected from the Fibre Channel bus.	Packet was corrupted in the system (EOM lost) and has another packet appended to it.	None.
IMT Rx Packet CRC Error	A packet received for this shelf contains a CRC error.	Packet was transmitted incorrectly or was corrupted by another device in the system	Discard packet. If this problem persists, a more detailed analysis of the system is needed.
IMT Bypass FIFO Full	The high-speed shelf bypass FIFO has been overflowed with data.	Fibre Channel transmit logic not operating correctly. Very high simultaneous data traffic rates on the high-speed ring and on the low-speed to high-speed path within the shelf.	System is operating above limits. Reduce data traffic. Reset FIFO.

Table 5-58. Explanation of **rept-imt-info:report=hiprerr** Statistics

IMT Statistic	Explanation Of Statistic	Probable Causes	Recommended Action
IMT Bypass FIFO Half Full	The high-speed shelf bypass FIFO is half full.	Data traffic burst on the high-speed bus.	None
IMT Rx FIFO Full	The 128k FIFO has been overflowed with data.	IXP1250 not removing data from FPGA.	Reset FIFO. Determine why IXP1250 not removing data.
IMT Rx FIFO Half Full	The 128k FIFO has gone half full with data.	Large burst of traffic on high-speed ring.	None
IMT Tx FIFO Full	The high-speed transmit FIFO has been overflowed with data.	The Fibre Channel transmit logic is not operating. The 106.25MHz is not operating. The data in the FIFO is incorrectly formatted (no EOM).	Reset Tx FIFO.
IMT Tx FIFO Half Full	The high-speed transmit FIFO is half full with data.	High burst rate or multiple large packet transmissions from IXP1250.	None
IXP Rx FIFO Full	IXP1250 FIFO has been overflowed with data.	IXP1250 not removing data from the FPGA. Data coming in faster than IXP1250 can process.	Reset the IXP1250 FIFO.
IXP Rx FIFO Half Full	IXP1250 FIFO is half full with data	Large burst of data on the high-speed ring.	None
MISC STATS			
Shelf ID UART Framing Error	UART Framing error received by HIPR in Shelf address data stream received from OAM.	Noisy or bad clock cable from Control Shelf to shelf in which error is reported.	Occasionally happens. This count should be low. Only if this count is VERY HIGH, bring it to the attention of Tekelec Technical Services.
Shelf ID UART Overrun Error	UART Overrun error received by HIPR in Shelf address data	Noisy or bad clock cable from Control Shelf to	Occasionally happens. This count should be low. Only if this count is

Table 5-58. Explanation of **rept-imt-info:report=hiprerr** Statistics

IMT Statistic	Explanation Of Statistic	Probable Causes	Recommended Action
	stream received from OAM.	shelf in which error is reported.	VERY HIGH, bring it to the attention of Tekelec Technical Services.

Output

rept-imt-info:report=err

rlghncxa03w 04-02-27 12:47:07 EST EAGLE 31.3.0

IMT Fault Isolation Error Statistics

=====

SUMMARY REPORT: Totals accumulated from all requested cards for all buckets

Statistic	Bus A Value	Bus B Value
Rcv CRC Err	12	1
Primary Ctl Rcv Err	23	3
Violation Err	34	5
CPU Rcv FIFO Full	45	12

;

rept-imt-info:report=err:sloc=1101:eloc=1102:mode=stats

rlghncxa03w 04-02-27 12:47:07 EST EAGLE 31.3.0

IMT Fault Isolation Error Statistics

Totals accumulated from all requested cards for each bucket

Bucket	Statistic	Bus A Value	Bus B Value
00	Rcv CRC Err	1	2
	Rcv Invalid Len	1012345678	0
	CPU Rcv FIFO Full	23	123

01 No errors in this bucket.

.

. (data continues for each hourly time period)

;

rept-imt-info:report=err:sloc=1101:eloc=1102:mode=full:erroronly=no

rlghncxa03w 04-02-27 12:47:07 EST EAGLE 31.3.0

IMT Fault Isolation Error Statistics

Totals accumulated from all requested cards for each bucket

Bucket	Statistic	Bus A Value	Bus B Value
00	Rcv CRC Err	0	0
	Rcv Format Err	0	0
	Rcv Invalid Len	1	0
	Primary Ctl Rcv Err	0	0
	Primary Ctl Tx Err	0	0
	Primary Ctl Sanity Err	0	0
	Violation Err	1	0
	IMT Rcv FIFO Half Full	0	0
	IMT Rcv FIFO Full	0	0
	CPU Rcv FIFO Half Full	0	0
	CPU Rcv FIFO Full	0	0
	MSU Retransmitted	0	0
	DMA Terminal Ct Intrpt	0	0
	SSU Pkts Txd	0	0
	SSU Pkts Rcvd	0	0
01	Rcv CRC Err	3	0
	Rcv Format Err	0	0
	Rcv Invalid Len	0	0
	Primary Ctl Rcv Err	0	0
	Primary Ctl Tx Err	0	0
	Primary Ctl Sanity Err	0	0
	Violation Err	0	0
	IMT Rcv FIFO Half Full	0	0
	IMT Rcv FIFO Full	0	0
	CPU Rcv FIFO Half Full	0	0

```

          CPU Rcv FIFO Full          0          0
          MSU Retransmitted          0          0
          DMA Terminal Ct Intrpt     0          0
          SSU Pkts Txd               0          0
          SSU Pkts Rcvd              0          0
.
(data continues for each hourly time period)
=====
SUMMARY REPORT: Totals accumulated from all requested cards for all buckets
Statistic          Bus A Value      Bus B Value
-----
Rcv CRC Err              3              0
Rcv Format Err            0              0
Rcv Invalid Len          1              0
Primary Ctl Rcv Err      1012345678      0
Primary Ctl Tx Err       0              0
Primary Ctl Sanity Err   0              0
Violation Err            1              0
IMT Rcv FIFO Half Full   0              0
IMT Rcv FIFO Full        0              0
CPU Rcv FIFO Half Full   23              0
CPU Rcv FIFO Full        0              0
MSU Retransmitted        0              0
DMA Terminal Ct Intrpt   0              0
SSU Pkts Txd             1              0
SSU Pkts Rcvd            0              0
;

```

rept-imt-info:report=util

```
rlghncxa03w 04-02-27 12:47:07 EST EAGLE 31.3.0
```

```
IMT Utilization Statistics
```

```
=====
SUMMARY REPORT: Combined statistics from all requested cards.
```

```
Statistic          Bus A Value      Bus B Value
-----
Utilization              10%              9%
Pkts Tx                 1234              613
Avg MSU Length (bytes)   73              152
;

```

Table 5-57 explains the meaning of each statistic that can be displayed in the **rept-imt-info:report=hmuxer r** output.

rept-imt-info:report=hmuxerr:sbucket=0

```
rlghncxa03w 04-02-27 12:47:07 EST EAGLE 31.3.0
```

```
HMUX SUMMARY REPORT: Summed across all requested shelves and buckets
```

```
HMUX Hourly Bucket Statistics
```

```
=====
Bucket    Low Speed Statistic          Bus A      Bus B
-----
  00      IMT Rx Packet CRC Error      0123456789 0123456789
          IMT Rx Packet Format Error 0123456789 0123456789
          IMT Rx Violation Error      0123456789 0123456789
          CPU Rx FIFO Full            0123456789 0123456789
          CPU Rx FIFO Half Full       0123456789 0123456789
          CPU Rx FIFO Empty Before SOM 0123456789 0123456789
          CPU Rx FIFO Empty Before EOM 0123456789 0123456789
          CPU Rx Packet SOM Before EOM 0123456789 0123456789
          CPU Rx Packet CRC Error      0123456789 0123456789
          DMA terminal count           0123456789 0123456789
          CPU Tx Buffer EOB            0123456789 0123456789
          CPU Tx Buffer Full           0123456789 0123456789

```

CPU Tx FIFO Half Full	0123456789	0123456789
IMT Bypass FIFO Full	0123456789	0123456789
IMT Bypass FIFO Half Full	0123456789	0123456789
IMT Rx FIFO Full	0123456789	0123456789
IMT Rx FIFO Half Full	0123456789	0123456789

High Speed Statistic	Bus A	Bus B
-----	-----	-----
IMT Rx Packet Format Error	0123456789	0123456789
IMT Rx Disparity Error	0123456789	0123456789
IMT Rx Sync Lost Error	0123456789	0123456789
IMT Rx Code Word Error	0123456789	0123456789
CPU Rx FIFO Full	0123456789	0123456789
CPU Rx FIFO Half Full	0123456789	0123456789
CPU Rx FIFO Empty Before SOM	0123456789	0123456789
CPU Rx FIFO Empty Before EOM	0123456789	0123456789
CPU Rx Packet SOM Before EOM	0123456789	0123456789
CPU Rx Packet CRC Error	0123456789	0123456789
DMA terminal count	0123456789	0123456789
CPU Tx Buffer EOB	0123456789	0123456789
CPU Tx Buffer Full	0123456789	0123456789
CPU Tx Buffer Half Full	0123456789	0123456789
IMT Bypass FIFO Full	0123456789	0123456789
IMT Bypass FIFO Half Full	0123456789	0123456789
IMT Rx FIFO Full	0123456789	0123456789
IMT Rx FIFO Half Full	0123456789	0123456789

Misc Speed Statistic	Bus A	Bus B
-----	-----	-----
Shelf ID UART Framing Error	0123456789	0123456789
Shelf ID UART Overrun Error	0123456789	0123456789

HMUX Cumulative Statistics

=====

Low Speed Statistic	Bus A	Bus B
-----	-----	-----
IMT Rx Packet CRC Error	0123456789	0123456789
IMT Rx Packet Format Error	0123456789	0123456789
IMT Rx Violation Error	0123456789	0123456789
CPU Rx FIFO Full	0123456789	0123456789
CPU Rx FIFO Half Full	0123456789	0123456789
CPU Rx FIFO Empty Before SOM	0123456789	0123456789
CPU Rx FIFO Empty Before EOM	0123456789	0123456789
CPU Rx Packet SOM Before EOM	0123456789	0123456789
CPU Rx Packet CRC Error	0123456789	0123456789
DMA terminal count	0123456789	0123456789
CPU Tx Buffer EOB	0123456789	0123456789
CPU Tx Buffer Full	0123456789	0123456789
CPU Tx FIFO Half Full	0123456789	0123456789
IMT Bypass FIFO Full	0123456789	0123456789
IMT Bypass FIFO Half Full	0123456789	0123456789
IMT Rx FIFO Full	0123456789	0123456789
IMT Rx FIFO Half Full	0123456789	0123456789

High Speed Statistic	Bus A	Bus B
-----	-----	-----
IMT Rx Packet Format Error	0123456789	0123456789
IMT Rx Disparity Error	0123456789	0123456789
IMT Rx Sync Lost Error	0123456789	0123456789
IMT Rx Code Word Error	0123456789	0123456789
CPU Rx FIFO Full	0123456789	0123456789
CPU Rx FIFO Half Full	0123456789	0123456789
CPU Rx FIFO Empty Before SOM	0123456789	0123456789


```

CPU Rx FIFO Empty Before EOM 0123456789 0123456789
CPU Rx Packet SOM Before EOM 0123456789 0123456789
CPU Rx Packet CRC Error      0123456789 0123456789
DMA terminal count           0123456789 0123456789
CPU Tx Buffer EOB             0123456789 0123456789
CPU Tx Buffer Full            0123456789 0123456789
CPU Tx Buffer Half Full       0123456789 0123456789
IMT Bypass FIFO Full         0123456789 0123456789
IMT Bypass FIFO Half Full    0123456789 0123456789
IMT Rx FIFO Full             0123456789 0123456789
IMT Rx FIFO Half Full        0123456789 0123456789

```

```

Misc Speed Statistic      Bus A      Bus B
-----
Shelf ID UART Framing Error 0123456789 0123456789
Shelf ID UART Overrun Error 0123456789 0123456789

```

```

rlghncxa03w 04-02-27 12:47:07 EST EAGLE 31.3.0
HMUX Maintenance Statistics

```

```

=====
HMUX SUMMARY REPORT: Summed across all requested shelves and buckets

```

Low Speed Statistic	Bucket Summary		Cumulative	
	Bus A	Bus B	Bus A	Bus B
-----	-----	-----	-----	-----
IMT Rx Packet CRC Error	0123456789	0123456789	0123456789	0987654321
IMT Rx Packet Format Error	0123456789	0123456789	0123456789	0987654321
IMT Rx Violation Error	0123456789	0123456789	0123456789	0987654321
CPU Rx FIFO Full	0123456789	0123456789	0123456789	0987654321
CPU Rx FIFO Half Full	0123456789	0123456789	0123456789	0987654321
CPU Rx FIFO Empty Before SOM	0123456789	0123456789	0123456789	0987654321
CPU Rx FIFO Empty Before EOM	0123456789	0123456789	0123456789	0987654321
CPU Rx Packet SOM Before EOM	0123456789	0123456789	0123456789	0987654321
CPU Rx Packet CRC Error	0123456789	0123456789	0123456789	0987654321
CPU Tx Buffer EOB	0123456789	0123456789	0123456789	0987654321
CPU Tx Buffer Full	0123456789	0123456789	0123456789	0987654321
CPU Tx FIFO Half Full	0123456789	0123456789	0123456789	0987654321
IMT Bypass FIFO Full	0123456789	0123456789	0123456789	0987654321
IMT Bypass FIFO Half Full	0123456789	0123456789	0123456789	0987654321
IMT Rx FIFO Full	0123456789	0123456789	0123456789	0987654321
IMT Rx FIFO Half Full	0123456789	0123456789	0123456789	0987654321
IMT Rx FIFO Sanity	0123456789	0123456789	0123456789	0987654321

High Speed Statistic	Bucket Summary		Cumulative	
	Bus A	Bus B	Bus A	Bus B
-----	-----	-----	-----	-----
IMT Rx Packet Format Error	0123456789	0123456789	0123456789	0987654321
IMT Rx Disparity Error	0123456789	0123456789	0123456789	0987654321
IMT Rx Sync Lost Error	0123456789	0123456789	0123456789	0987654321
IMT Rx Code Word Error	0123456789	0123456789	0123456789	0987654321
CPU Rx FIFO Full	0123456789	0123456789	0123456789	0987654321
CPU Rx FIFO Half Full	0123456789	0123456789	0123456789	0987654321
CPU Rx FIFO Empty Before SOM	0123456789	0123456789	0123456789	0987654321
CPU Rx FIFO Empty Before EOM	0123456789	0123456789	0123456789	0987654321
CPU Rx Packet SOM Before EOM	0123456789	0123456789	0123456789	0987654321
CPU Rx Packet CRC Error	0123456789	0123456789	0123456789	0987654321
CPU Tx Buffer EOB	0123456789	0123456789	0123456789	0987654321
CPU Tx Buffer Full	0123456789	0123456789	0123456789	0987654321
CPU Tx Buffer Half Full	0123456789	0123456789	0123456789	0987654321
IMT Bypass FIFO Full	0123456789	0123456789	0123456789	0987654321
IMT Bypass FIFO Half Full	0123456789	0123456789	0123456789	0987654321
IMT Bypass FIFO Sanity	0123456789	0123456789	0123456789	0987654321
IMT Rx FIFO Full	0123456789	0123456789	0123456789	0987654321

```
IMT Rx FIFO Half Full          0123456789 0123456789 0123456789 0987654321
```

```
Misc Statistic                  Bucket Summary                  Cumulative
                                Bus A      Bus B                  Bus A      Bus B
-----
Shelf ID UART Framing Error    0123456789 0123456789 0123456789 0987654321
Shelf ID UART Overrun Error    0123456789 0123456789 0123456789 0987654321
```

```
;
```

Table 5-58 explains the meaning of each statistic that can be displayed in the **rept-imt-info:report=hiprerr** output.

rept-imt-info:report=hiprerr:sbucket=0

```
tekelecstp 05-01-12 14:01:34 EST EAGLE 33.0.0
```

```
HIPR Maintenance Statistics
```

```
;
```

```
=====
HIPR SUMMARY REPORT: Summed across all requested shelves and buckets
```

```
HIPR Hourly Bucket Statistics
```

```
=====
```

BUCKET	LOC	Low Speed Statistic	Bus A	Bus B
00	---	-----	-----	-----
		IMT Rx Packet CRC Error	0123456789	0123456789
		IMT Rx Packet Format Error	0123456789	0123456789
		IMT Rx Violation Error	0123456789	0123456789
		IMT Rx Command Error	0123456789	0123456789
		IMT Rx Packet CRC Error	0123456789	0123456789
		IMT Rx FIFO Full	0123456789	0123456789
		IMT Rx FIFO Half Full	0123456789	0123456789
		IMT Tx FIFO Full	0123456789	0123456789
		IMT Tx FIFO Half Full	0123456789	0123456789
		High Speed Statistic	Bus A	Bus B
		-----	-----	-----
		IMT Rx Packet Format Err	0123456789	0123456789
		IMT Rx Disparity Error	0123456789	0123456789
		IMT Rx Sync Lost Error	0123456789	0123456789
		IMT Rx Code Word Error	0123456789	0123456789
		IMT Rx Packet SOM Before EOM	0123456789	0123456789
		IMT Rx Packet CRC Error	0123456789	0123456789
		IMT Bypass FIFO Full	0123456789	0123456789
		IMT Bypass FIFO Half Full	0123456789	0123456789
		IMT Rx FIFO Full	0123456789	0123456789
		IMT Rx FIFO Half Full	0123456789	0123456789
		IMT Tx FIFO Full	0123456789	0123456789
		IMT Tx FIFO Half Full	0123456789	0123456789
		IXP Rx FIFO Full	0123456789	0123456789
		IXP Rx FIFO Half Full	0123456789	0123456789
		Misc Statistic	Bus A	Bus B
		-----	-----	-----
		Shelf ID UART Framing Error	0123456789	0123456789
		Shelf ID UART Overrun Error	0123456789	0123456789

```
HIPR CUMULATIVE Statistics
```

```
=====
```

Low Speed Statistic	Bus A	Bus B
-----	-----	-----
IMT Rx Packet CRC Error	0123456789	0123456789
IMT Rx Packet Format Error	0123456789	0123456789
IMT Rx Violation Error	0123456789	0123456789
IMT Rx Command Error	0123456789	0123456789
IMT Rx Packet CRC Error	0123456789	0123456789

```

IMT Rx FIFO Full          0123456789 0123456789
IMT Rx FIFO Half Full     0123456789 0123456789
IMT Tx FIFO Full          0123456789 0123456789
IMT Tx FIFO Half Full     0123456789 0123456789

High Speed Statistic      Bus A      Bus B
-----
IMT Rx Packet Format Err  0123456789 0123456789
IMT Rx Disparity Error    0123456789 0123456789
IMT Rx Sync Lost Error    0123456789 0123456789
IMT Rx Code Word Error    0123456789 0123456789
IMT Rx Packet SOM Before EOM 0123456789 0123456789
IMT Rx Packet CRC Error   0123456789 0123456789
IMT Bypass FIFO Full      0123456789 0123456789
IMT Bypass FIFO Half Full 0123456789 0123456789
IMT Rx FIFO Full          0123456789 0123456789
IMT Rx FIFO Half Full     0123456789 0123456789
IMT Tx FIFO Full          0123456789 0123456789
IMT Tx FIFO Half Full     0123456789 0123456789
IXP Rx FIFO Full          0123456789 0123456789
IXP Rx FIFO Half Full     0123456789 0123456789

Misc Statistic            Bus A      Bus B
-----
Shelf ID UART Framing Error 0123456789 0123456789
Shelf ID UART Overrun Error 0123456789 0123456789

```

;

Table 5-58 explains the meaning of each statistic that can be displayed in the **rept-imt-info:report=hiprerr** output.

rept-imt-

info:report=hiprerr:sshelf=1100:sslot=1:eslot=2:sbucket=0

tekelecstp 05-01-12 14:01:34 EST EAGLE 33.0.0

HIPR Maintenance Statistics

;

=====

HIPR SUMMARY REPORT: Summed across all requested shelves and buckets

HIPR Hourly Bucket Statistics

=====

```

BUCKET LOC Low Speed Statistic      Bus A      Bus B
00      1101 -----
IMT Rx Packet CRC Error  0123456789 0123456789
IMT Rx Packet Format Error 0123456789 0123456789
IMT Rx Violation Error    0123456789 0123456789
IMT Rx Command Error      0123456789 0123456789
IMT Rx FIFO Full          0123456789 0123456789
IMT Rx FIFO Half Full     0123456789 0123456789
IMT Tx FIFO Full          0123456789 0123456789
IMT Tx FIFO Half Full     0123456789 0123456789

```

```

BUCKET LOC Low Speed Statistic      Bus A      Bus B
00      1102 -----
IMT Rx Packet CRC Error  0123456789 0123456789
IMT Rx Packet Format Error 0123456789 0123456789
IMT Rx Violation Error    0123456789 0123456789
IMT Rx Command Error      0123456789 0123456789
IMT Rx FIFO Full          0123456789 0123456789
IMT Rx FIFO Half Full     0123456789 0123456789
IMT Tx FIFO Full          0123456789 0123456789
IMT Tx FIFO Half Full     0123456789 0123456789

```

```

High Speed Statistic      Bus A      Bus B

```

```

-----
IMT Rx Packet Format Err 0123456789 0123456789
IMT Rx Disparity Error 0123456789 0123456789
IMT Rx Sync Lost Error 0123456789 0123456789
IMT Rx Code Word Error 0123456789 0123456789
IMT Rx Packet SOM Before EOM 0123456789 0123456789
IMT Rx Packet CRC Error 0123456789 0123456789
IMT Bypass FIFO Full 0123456789 0123456789
IMT Bypass FIFO Half Full 0123456789 0123456789
IMT Rx FIFO Full 0123456789 0123456789
IMT Rx FIFO Half Full 0123456789 0123456789
IMT Tx FIFO Full 0123456789 0123456789
IMT Tx FIFO Half Full 0123456789 0123456789
IXP Rx FIFO Full 0123456789 0123456789
IXP Rx FIFO Half Full 0123456789 0123456789

Misc Statistic          Bus A      Bus B
-----
Shelf ID UART Framing Error 0123456789 0123456789
Shelf ID UART Overrun Error 0123456789 0123456789

```

HIPR CUMULATIVE Statistics

```

=====
Low Speed Statistic          Bus A      Bus B
-----
IMT Rx Packet CRC Error 0123456789 0123456789
IMT Rx Packet Format Error 0123456789 0123456789
IMT Rx Violation Error 0123456789 0123456789
IMT Rx Command Error 0123456789 0123456789
IMT Rx FIFO Full 0123456789 0123456789
IMT Rx FIFO Half Full 0123456789 0123456789
IMT Tx FIFO Full 0123456789 0123456789
IMT Tx FIFO Half Full 0123456789 0123456789

High Speed Statistic          Bus A      Bus B
-----
IMT Rx Packet Format Err 0123456789 0123456789
IMT Rx Disparity Error 0123456789 0123456789
IMT Rx Sync Lost Error 0123456789 0123456789
IMT Rx Code Word Error 0123456789 0123456789
IMT Rx Packet SOM Before EOM 0123456789 0123456789
IMT Rx Packet CRC Error 0123456789 0123456789
IMT Bypass FIFO Full 0123456789 0123456789
IMT Bypass FIFO Half Full 0123456789 0123456789
IMT Rx FIFO Full 0123456789 0123456789
IMT Rx FIFO Half Full 0123456789 0123456789
IMT Tx FIFO Full 0123456789 0123456789
IMT Tx FIFO Half Full 0123456789 0123456789
IXP Rx FIFO Full 0123456789 0123456789
IXP Rx FIFO Half Full 0123456789 0123456789

Misc Statistic          Bus A      Bus B
-----
Shelf ID UART Framing Error 0123456789 0123456789
Shelf ID UART Overrun Error 0123456789 0123456789

```

;

Legend

IMT Statistics:

BUCKET—The hourly time periods (*buckets*) for which a report was requested.**STATISTIC**—The error statistic type for the IMT buses A and B.

BUS A VALUE—The number of occurrences of the type of error displayed in the STATISTIC column for the IMT bus A.

BUS B VALUE—The number of occurrences of the type of error displayed in the STATISTIC column for the IMT bus B.

LOW SPEED STATISTIC—The error statistic type for the low speed 125 Mbps secondary rings with HMUX cards installed on buses A (xy09 card locations) and B (xy10 card locations).

HIGH SPEED STATISTIC—The error statistic type for the high-speed 1 Gbps primary ring with HMUX cards installed on buses A (xy09 card locations) and B (xy10 card locations).

MISC SPEED STATISTICS—Shelf ID Universal Asynchronous Receiver Transmitter (UART) error counts on the HMUX cards installed on buses A (xy09 card locations) and B (xy10 card locations).

BUCKET SUMMARY—The error count for each parameter for one hour for HMUX cards installed on buses A (xy09 card locations) and B (xy10 card locations). (The count is for the most recent part of an hour if the card was booted within an hour of executing the **rept-imt-info** command.)

CUMULATIVE—The running total error count for each parameter since card initialization for HMUX cards installed on buses A (xy09 card locations) and B (xy10 card locations).

HMUX Statistics:

BUCKET—The hourly time periods (*buckets*) for which a report was requested.

LOW SPEED STATISTIC—The error statistic type for the low speed 125 Mbps secondary rings with HMUX cards installed on buses A (xy09 card locations) and B (xy10 card locations).

HIGH SPEED STATISTIC—The error statistic type for the high-speed 1 Gbps primary ring with HMUX cards installed on buses A (xy09 card locations) and B (xy10 card locations).

MISC SPEED STATISTIC—The miscellaneous error statistic type.

BUS A—The number of occurrences of the type of error displayed in the STATISTIC column for the IMT bus A.

BUS B—The number of occurrences of the type of error displayed in the STATISTIC column for the IMT bus B.

HIPR Statistics:

BUCKET—The hourly time periods (*buckets*) for which a report was requested.

LOC—The card location (shelf and slot) for which information is displayed.

LOW SPEED STATISTIC—The error statistic type for the low speed 125 Mbps secondary rings with HMUX cards installed on buses A (xy09 card locations) and B (xy10 card locations).

HIGH SPEED STATISTIC—The error statistic type for the high-speed 1 Gbps primary ring with HMUX cards installed on buses A (xy09 card locations) and B (xy10 card locations).

MISC SPEED STATISTIC—The miscellaneous error statistic type.

BUS A—The number of occurrences of the type of error displayed in the STATISTIC column for the IMT bus A.

BUS B—The number of occurrences of the type of error displayed in the STATISTIC column for the IMT bus B.

rept-imt-lvl1

Report IMT Level 1

Use this command to display the IMT level 1 statistics for a card or a range of cards. If more than one card is specified, a summary report of totals for all cards can be generated.

Keyword: rept-imt-lvl1

Related Commands: clr-imt-stats, conn-imt, disc-imt, rept-imt-info, rept-imt-lvl2, rept-stat-imt, rmv-imt, rst-imt, tst-imt

Command Class: System Maintenance

Parameters

:e= (optional)

End address. This parameter specifies the IMT address of the last card in the range. A decimal value or a hexadecimal value can be specified for this parameter (see Table 5-59 to map the values by card location).

Range: 0-251

The value can be specified in decimal (0-251) or hexadecimal (h'00-h'fb).

Default: If the start address (s) value is specified, the e parameter default value is the specified s parameter value.

If the s parameter is not specified, the e parameter is not specified and the sloc parameter must be specified.

:eloc= (optional)

End location. Specifies the card location of the last card in the range.

Range: 1101-1108, 1111-1113, 1115, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Default: If sloc is specified—current sloc value; displays information for one card

If sloc is not specified—1115, which corresponds to IMT address 251 (e=251); displays information for entire range of locations.

:r= (optional)

Report type value

Range: full, stats, summary

full—Displays information for each card along with a summary report.

stats—Displays only individual card statistics.

summary—Displays the summary portion of the report.

Default: full

:s= (optional)

Start address. This parameter specifies the IMT address of the first (or only) card in the range. A decimal value or a hexadecimal value can be specified for this parameter (see Table 5-59 to map the values by card location).

Range: 0-251

The value can be specified in decimal (0-251) or hexadecimal (h'00-h'fb).

:sloc= (optional)

Start location. Specifies the card location of the first card in the range.

Range: 1101-1108, 1111-1113, 1115, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Default: If eloc is specified—current eloc value

If eloc is not specified—1201, which corresponds to IMT address 0 (s=0).

:trm= (optional)

The serial port (printer location) where the report is to be sent.

Range: 1-16

Default: Report displays on the terminal where the command was issued

Example

rept-imt-lvl1:s=00:e=01

Dependencies

Only one report status command can be in progress at a time.

Either the start address (**s** parameter) or the start location (**sloc** parameter) must be specified.

This command cannot be entered during IMT statistics collection following an hourly boundary.

The **rept-imt-lvl1** command cannot be entered if any of the following commands is running: **clr-imt-stats**, **rept-imt-info**, **rept-imt-lvl2**, **tst-imt**.

If the **s** and **e** parameters are specified, the **sloc** and **eloc** parameters cannot be specified; conversely, if the **sloc** and **eloc** parameters are specified, the **s** and **e** parameters cannot be specified.

Notes

Table 5-59 maps each card location to the decimal and hexadecimal "Converting ITU National Point Code Formats" values that can be specified for the **s** and **e** parameters.

Table 5-59. Hexadecimal/Decimal Values for **s** and **e** parameters

Card Location	Hexadecimal Value	Decimal Value	Card Location	Hexadecimal Value	Decimal Value
Control Shelf 11					
1101	h'f0	240	1102	h'f1	241
1103	h'f2	242	1104	h'f3	243
1105	h'f4	244	1106	h'f5	245
1107	h'f6	246	1108	h'f7	247
1111	h'f8	248	1112	h'f9	249
1113	h'fa	250	1115	h'fb	251
Extension Shelf 12					
1201	h'00	0	1202	h'01	1
1203	h'02	2	1204	h'03	3
1205	h'04	4	1206	h'05	5
1207	h'06	6	1208	h'07	7
1211	h'08	8	1212	h'09	9
1213	h'0a	10	1214	h'0b	11

Table 5-59. Hexadecimal/Decimal Values for **s** and **e** parameters

Card Location	Hexadecimal Value	Decimal Value	Card Location	Hexadecimal Value	Decimal Value
1215	h'0c	12	1216	h'0d	13
1217	h'0e	14	1218	h'0f	15
Extension Shelf 13					
1301	h'10	16	1302	h'11	17
1303	h'12	18	1304	h'13	19
1305	h'14	20	1306	h'15	21
1307	h'16	22	1308	h'17	23
1311	h'18	24	1312	h'19	25
1313	h'1a	26	1314	h'1b	27
1315	h'1c	28	1316	h'1d	29
1317	h'1e	30	1318	h'1f	31
Extension Shelf 21					
2101	h'20	32	2102	h'21	33
2103	h'22	34	2104	h'23	35
2105	h'24	36	2106	h'25	37
2107	h'26	38	2108	h'27	39
2111	h'28	40	2112	h'29	41
2113	h'2a	42	2114	h'2b	43
2115	h'2c	44	2116	h'2d	45
2117	h'2e	46	2118	h'2f	47
Extension Shelf 22					
2201	h'30	48	2202	h'31	49
2203	h'32	50	2204	h'33	51
2205	h'34	52	2206	h'35	53
2207	h'36	54	2208	h'37	55
2211	h'38	56	2212	h'39	57
2213	h'3a	58	2214	h'3b	59
2215	h'3c	60	2216	h'3d	61

Table 5-59. Hexadecimal/Decimal Values for **s** and **e** parameters

Card Location	Hexadecimal Value	Decimal Value	Card Location	Hexadecimal Value	Decimal Value
2217	h'3e	62	2218	h'3f	63
Extension Shelf 23					
2301	h'40	64	2302	h'41	65
2303	h'42	66	2304	h'43	67
2305	h'44	68	2306	h'45	69
2307	h'46	70	2308	h'47	71
2311	h'48	72	2312	h'49	73
2313	h'4a	74	2314	h'4b	75
2315	h'4c	76	2316	h'4d	77
2317	h'4e	78	2318	h'4f	79
Extension Shelf 31					
3101	h'50	80	3102	h'51	81
3103	h'52	82	3104	h'53	83
3105	h'54	84	3106	h'55	85
3107	h'56	86	3108	h'57	87
3111	h'58	88	3112	h'59	89
3113	h'5a	90	3114	h'5b	91
3115	h'5c	92	3116	h'5d	93
3117	h'5e	94	3118	h'5f	95
Extension Shelf 32					
3201	h'60	96	3202	h'61	97
3203	h'62	98	3204	h'63	99
3205	h'64	100	3206	h'65	101
3207	h'66	102	3208	h'67	103
3211	h'68	104	3212	h'69	105
3213	h'6a	106	3214	h'6b	107
3215	h'6c	108	3216	h'6d	109
3217	h'6e	110	3218	h'6f	111

Table 5-59. Hexadecimal/Decimal Values for **s** and **e** parameters

Card Location	Hexadecimal Value	Decimal Value	Card Location	Hexadecimal Value	Decimal Value
Extension Shelf 33					
3301	h'70	112	3302	h'71	113
3303	h'72	114	3304	h'73	115
3305	h'74	116	3306	h'75	117
3307	h'76	118	3308	h'77	119
3311	h'78	120	3312	h'79	121
3313	h'7a	122	3314	h'7b	123
3315	h'7c	124	3316	h'7d	125
3317	h'7e	126	3318	h'7f	127
Extension Shelf 41					
4101	h'80	128	4102	h'81	129
4103	h'82	130	4104	h'83	131
4105	h'84	132	4106	h'85	133
4107	h'86	134	4108	h'87	135
4111	h'88	136	4112	h'89	137
4113	h'8a	138	4114	h'8b	139
4115	h'8c	140	4116	h'8d	141
4117	h'8e	142	4118	h'8f	143
Extension Shelf 42					
4201	h'90	144	4202	h'91	145
4203	h'92	146	4204	h'93	147
4205	h'94	148	4206	h'95	149
4207	h'96	150	4208	h'97	151
4211	h'98	152	4212	h'99	153
4213	h'9a	154	4214	h'9b	155
4215	h'9c	156	4216	h'9d	157
4217	h'9e	158	4218	h'9f	159
Extension Shelf 43					

Table 5-59. Hexadecimal/Decimal Values for **s** and **e** parameters

Card Location	Hexadecimal Value	Decimal Value	Card Location	Hexadecimal Value	Decimal Value
4301	h'a0	160	4302	h'a1	161
4303	h'a2	162	4304	h'a3	163
4305	h'a4	164	4306	h'a5	165
4307	h'a6	166	4308	h'a7	167
4311	h'a8	168	4312	h'a9	169
4313	h'aa	170	4314	h'ab	171
4315	h'ac	172	4316	h'ad	173
4317	h'ae	174	4318	h'af	175
Extension Shelf 51					
5101	h'b0	176	5102	h'b1	177
5103	h'b2	178	5104	h'b3	179
5105	h'b4	180	5106	h'b5	181
5107	h'b6	182	5108	h'b7	183
5111	h'b8	184	5112	h'b9	185
5113	h'ba	186	5114	h'bb	187
5115	h'bc	188	5116	h'bd	189
5117	h'be	190	5118	h'bf	191
Extension Shelf 52					
5201	h'c0	192	5202	h'c1	193
5203	h'c2	194	5204	h'c3	195
5205	h'c4	196	5206	h'c5	197
5207	h'c6	198	5208	h'c7	199
5211	h'c8	200	5212	h'c9	201
5213	h'ca	202	5214	h'cb	203
5215	h'cc	204	5216	h'cd	205
5217	h'ce	206	5218	h'cf	207
Extension Shelf 53					
5301	h'd0	208	5302	h'd1	209

Table 5-59. Hexadecimal/Decimal Values for **s** and **e** parameters

Card Location	Hexadecimal Value	Decimal Value	Card Location	Hexadecimal Value	Decimal Value
5303	h'd2	210	5304	h'd3	211
5305	h'd4	212	5306	h'd5	213
5307	h'd6	214	5308	h'd7	215
5311	h'd8	216	5312	h'd9	217
5313	h'da	218	5314	h'db	219
5315	h'dc	220	5316	h'dd	221
5317	h'de	222	5318	h'df	223
Extension Shelf 61					
6101	h'e0	224	6102	h'e1	225
6103	h'e2	226	6104	h'e3	227
6105	h'e4	228	6106	h'e5	229
6107	h'e6	230	6108	h'e7	231
6111	h'e8	232	6112	h'e9	233
6113	h'ea	234	6114	h'eb	235
6115	h'ec	236	6116	h'ed	237
6117	h'ee	238	6118	h'ef	239

Output

rept-imt-lvl1:s=00:e=01

rlghncxa03w 04-02-28 09:25:56 EST EAGLE 31.3.0

Retrieving data from cards...

;

rlghncxa03w 04-02-28 09:25:56 EST EAGLE 31.3.0

Card: H'0000 Elapsed Time (day - h:m:s): 0 - 00:08:31.2

Count	Bus A Value	Bus B Value
-----	-----	-----
Transmit Packet	0	0
Transmit Byte	0	0
Receive Packet	0	0
Receive Byte	0	0
Receive Packet with CRC Error	36	2
Receive Packet with Format Error	0	1
Receive Packet with Invalid Length	0	0
Primary Control Receive Error	0	0
Primary Control Transmit Error	0	0
Primary Control Sanity Error	0	0
Violation Error	291	2
CPU Receive FIFO Full	0	0
IMT Error Interrupt	0	0
Error Interrupt Overflow	0	0
DMA Terminal Count Interrupt	0	0
MSU Retransmitted	0	0
MSU Safety Packet	0	0
ASU Safety Packet	0	0
TSU Safety Packet	0	0
BSU Safety Packet	0	0
SSU Safety Packet	0	0;

Card: H'0001 Elapsed Time (day - h:m:s): 3 - 03:20:07.7

Count	Bus A Value	Bus B Value
-----	-----	-----
Transmit Packet	0	0
Transmit Byte	0	0
Receive Packet	0	0
Receive Byte	0	0
Receive Packet with CRC Error	14	2
Receive Packet with Format Error	0	0
Receive Packet with Invalid Length	0	0
Primary Control Receive Error	0	0
Primary Control Transmit Error	0	0
Primary Control Sanity Error	0	0
Violation Error	320	12
CPU Receive FIFO Full	0	0
IMT Receive FIFO Half Full	0	0
CPU Receive FIFO Half Full	0	0
DMA Terminal Count Interrupt	0	0
MSU Retransmitted	1	0
MSU Safety Packet	0	0
ASU Safety Packet	0	0
TSU Safety Packet	0	0
IMT Receive FIFO Full	0	0
SSU Safety Packet	0	0

;

rlghncxa03w 04-02-28 09:25:56 EST EAGLE 31.3.0

=====

SUMMARY REPORT: Totals accumulated from all requested cards

Count	Bus A Value	Bus B Value
-----	-----	-----
Transmit Packet	0	0
Transmit Byte	0	0
Receive Packet	0	0
Receive Byte	0	0
Receive Packet with CRC Error	50	4
Receive Packet with Format Error	0	1
Receive Packet with Invalid Length	0	0
Primary Control Receive Error	0	0
Primary Control Transmit Error	0	0
Primary Control Sanity Error	0	0
Violation Error	611	14
CPU Receive FIFO Full	0	0
IMT Receive FIFO Half Full	0	0
CPU Receive FIFO Half Full	0	0
DMA Terminal Count Interrupt	0	0
MSU Retransmitted	1	0
MSU Safety Packet	0	0
ASU Safety Packet	0	0
TSU Safety Packet	0	0
IMT Receive FIFO Full	0	0
SSU Safety Packet	0	0

;

END OF REPORT

;

Legend

CARD—The IMT address of the card in hexadecimal

ELAPSED TIME (day - h:m:s)—The amount of time that has elapsed since a card reset has occurred or the IMT statistics were cleared with the **clr-imt-stats** command. This is shown in the format **day - h:m:s**, where **day** is the number of days that have elapsed, and **h:m:s** is the amount of time in the current day in hours, minutes, and seconds (and tenths of seconds).

COUNT—The IMT level 1 statistics displayed in this report.

BUS A VALUE and **BUS B VALUE**—The values of the IMT level 1 statistics on IMT bus A and IMT bus B.

Table 5-60 describes the statistics that are shown in the report for each card and in the Summary of totals for all requested cards, and their possible causes and corrective actions.

"Excessive" count is primarily determined by the operator based upon:

- Overall system behavior
- Duration of time from when the last statistics were taken
- Statistics of an individual card in relation to other cards

The following types of Safety Packets are included in the counts:

SAFETY PACKET—When an IMT packet goes around the IMT, a pre determined value in the packet is decremented by each card. When this value reaches zero, the card that receives the value equal to zero logs this as a safety packet and removes the IMT packet from the IMT.

MESSAGE SIGNALING UNIT (MSU)—IMT packet containing data

ACKNOWLEDGEMENT SIGNALING UNIT (ASU)—**ack** for an MSU that is sent from the destination card back to the originating card.

TEST SIGNALING UNIT (TSU)—Typically used to keep the card on the bus. There are many types of TSU's one of which performs a heartbeat function.

BROADCAST SIGNALING UNIT (BSU)—Function is the same as an MSU except that each card will process the BSU and then copy it to the next card for processing. Used for IMT maintenance functions.

SAFETY SIGNALING UNIT (SSU)—Anytime a packet times out (Safety Packet), the card that logged a safety packet sends an SSU to make sure the originating card is still on the IMT bus.

Table 5-60. rept-imt-lvl1 Statistics Explanation

IMT Statistic	Explanation Of Statistic	Probable Causes	Recommended Action
Transmit Packet	Number of transmitted IMT packets	N/A	N/A
Transmit Byte	Number of transmitted IMT Bytes	N/A	N/A
Receive Packet	Number of received IMT Packets	N/A	N/A
Receive Byte	Number of received IMT Bytes	N/A	N/A
Receive Packet with CRC Error	Bad Checksum in received IMT packet. Usually caused by corrupted data. Detected by hardware	Card insertion, removal, or boot. Might occur infrequently in a normal system.	• None if card has booted or was just inserted. • Contact Tekelec Technical Services if count is excessive in relation to other cards.
Receive Packet with Format Error	Occurs when the Start of Message byte of the IMT packet is followed by unexpected data. Detected by hardware.	Card insertion, removal, or boot	• None if card has booted or was just inserted. • Contact Tekelec Technical Services if count is excessive in relation to other cards.
Receive Packet with Invalid Length	Card received an IMT packet where the actual length of the packet did not match the length indicated in the length field. Detected by software	Card insertion, removal, or boot	• None if card has booted or was just inserted. • Contact Tekelec Technical Services if count is excessive in relation to other cards.

Table 5-60. rept-imt-lvl1 Statistics Explanation

IMT Statistic	Explanation Of Statistic	Probable Causes	Recommended Action
Primary Control Receive Error	Corrupted packet. Detected by hardware	Card insertion, removal, or boot	• None if card has booted or was just inserted. • Contact Tekelec Technical Services if count is excessive in relation to other cards.
Primary Control Transmit Error	Transmitted IMT packet is greater than allowed size. Detected by hardware	Card insertion, removal, or boot	• None if card has booted or was just inserted. • Contact Tekelec Technical Services if count is excessive in relation to other cards.
Primary Control Sanity Error	Internal hardware monitoring self check failed. Detected by hardware	Generally indicates Bad hardware or corrupt packets.	• None if card has booted or was just inserted. • Contact Tekelec Technical Services if count is excessive in relation to other cards.
Violation Error	Received an illegal character from the IMT. Detected by hardware	Card insertion, removal, or boot	• None if card has booted or was just inserted. • Contact Tekelec Technical Services if count is excessive in relation to other cards.
CPU Receive FIFO Full	Communication CPU on the card is congested. Detected by hardware	Indicates that data was received at a higher rate than could be processed by the Communications processor.	Contact Tekelec Technical Services if count is excessive in relation to other cards.
IMT Receive FIFO Half Full	IMT interface on the card is becoming congested. Detected by hardware.	Indicates that data was received at a higher rate than could be switched for a short period.	None. FIFO Half Full is just an indication; no action is required.

Table 5-60. rept-imt-lvl1 Statistics Explanation

IMT Statistic	Explanation Of Statistic	Probable Causes	Recommended Action
CPU Receive FIFO Half Full	Communication CPU on the card is becoming congested. Detected by hardware	Indicates that data was received at a higher rate than could be processed for a short period.	None. FIFO Half Full is just an indication; no action is required.
DMA Terminal Count Interrupt	Received IMT packet length is longer than the max allowed. Detected by hardware	Card insertion, removal, or boot	• None if card has booted or was just inserted. • Contact Tekelec Technical Services if count is excessive in relation to other cards.
MSU Retransmitted	Retransmissions occur typically when an MSU goes around the IMT bus and times out (safety packet issued). Detected by software	Card insertion, removal, or boot. Might occur infrequently in a normal system.	• None if card has booted or was just inserted. • Contact Tekelec Technical Services if count is excessive in relation to other cards.
MSU Safety Packet	MSU has timed out on the IMT. Detected by hardware	Card insertion, removal, or boot	• None if card has booted or was just inserted. • Contact Tekelec Technical Services if count is excessive in relation to other cards.
ASU Safety Packet	ASU Unit has timed out on the IMT. Detected by hardware	Card insertion, removal, or boot	• None if card has booted or was just inserted. • Contact Tekelec Technical Services if count is excessive in relation to other cards.
TSU Safety Packet	TSU Unit has timed out on the IMT. Detected by hardware	Card insertion, removal, or boot	• None if card has booted or was just inserted. • Contact Tekelec Technical Services if count is excessive in relation to other cards.

Table 5-60. rept-imt-lvl1 Statistics Explanation

IMT Statistic	Explanation Of Statistic	Probable Causes	Recommended Action
BSU Safety Packet	BSU Unit has timed out on the IMT. Detected by hardware	Card insertion, removal, or boot	• None if card has booted or was just inserted. • Contact Tekelec Technical Services if count is excessive in relation to other cards.
SSU Safety Packet	SSU Unit has timed out on the IMT. Detected by hardware	Card insertion, removal, or boot	• None if card has booted or was just inserted. • Contact Tekelec Technical Services if count is excessive in relation to other cards.

rept-imt-lvl2**Report IMT Level 2**

Use this command to display the IMT level 2 statistics for a card. This report displays IMT traffic statistics for either one or both IMT busses in the system. The report can be filtered as follows:

- Report statistics between the source card (specified with the **loc** or **l** parameters), whose statistics pool is queried for report information, and another card (specified with the **sloc** or **s** parameter).
- Report statistics between the source card and a range of cards (specified with both the **sloc** and **eloc** or the **s** and **e** parameter combinations).

Keyword: rept-imt-lvl2

Related Commands: clr-imt-stats, conn-imt, disc-imt, rept-imt-info, rept-imt-lvl1, rept-stat-imt, rmv-imt, rst-imt, tst-imt

Command Class: System Maintenance

Parameters

:b= (optional)

IMT bus identification.

Range: a, b, both

a — Displays statistics for IMT bus A.

b — Displays statistics for IMT bus B.

both — Displays statistics for both IMT busses, A and B.

Default: both

:e= (optional)

End address. This parameter specifies the IMT address of the last card in the range. A decimal value or a hexadecimal value can be specified for this parameter (see Table 5-59 to map the values by card location).

Range: 0-251

The value can be specified in decimal (0-251) or hexadecimal (h'00-h'fb).

Default: If the s parameter is specified, the default is the s parameter value.
If the s parameter is not specified, the default is 251.

:eloc= (optional)

End location. Specifies the card location of the last card in the range.

Range: 1101-1108, 1111-1113, 1115, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Default: If sloc is specified—current sloc value; displays information for one card
If sloc is not specified—1115, which corresponds to IMT address 251 (e=251); displays information for entire range of locations.

:l= (optional)

Source card IMT address. The IMT address of the card whose statistics pool is to be queried for report information.

Range: 0-251

(See the *Installation Manual – EAGLE 5 ISS* for an illustration of the card locations.)

:loc= (optional)

Source card location. The location of the card whose "statistics pool" is to be queried for report information.

Range: 1101-1108, 1111-1113, 1115, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

:s= (optional)

Start address. This parameter specifies the IMT address of the first (or only) card in the range. A decimal value or a hexadecimal value can be specified for this parameter (see Table 5-59 to map the values by card location).

Range: 0-251

The value can be specified in decimal (0-251) or hexadecimal (h'00-h'fb).

Default: If e is specified—current l parameter value.
If e is not specified—0.

:sloc= (optional)

Start location. Specifies the card location of the first card in the range.

Range: 1101-1108, 1111-1113, 1115, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Default: If eloc is specified—current sloc value.
If eloc is not specified—IMT address 0 (s=0).

:trm= (optional)

The serial port (printer location) where the report is to be sent.

Range: 1-40

Default: The report displays on the terminal where the command was issued.

Example

```
rept-imt-lvl2:l=00:s=00:e=02:b=a
```

Dependencies

If the **s** and **e** parameters are specified, the **sloc** and **eloc** parameters cannot be specified; conversely, if the **sloc** and **eloc** parameters are specified, the **s** and **e** parameters cannot be specified.

The **rept-imt-lvl2** command cannot be entered if any of the following commands is running: **clr-imt-stats**, **rept-imt-info**, **rept-imt-lvl1**, **tst-imt**.

Either the source address (**l** parameter) or the source location (**loc** parameter) must be specified; but not both at the same time.

This command cannot be entered during IMT statistics collection following an hourly boundary.

Notes

None

Output

If the source card location falls within the range of cards specified with the **sloc** and **eloc** parameters or the **s** and **e** parameters, the output report for the source card will show zeros. The zeros are reported because the source card location does not use the IMT to communicate with itself and, therefore, does not report any values or pegs for traffic routed to itself. This command reports only the values or pegs received or transmitted across the IMT bus.

In the following example, the output for the source card location (**loc=1213**) is shown in column 0a (the equivalent card location expressed as a hexadecimal digit). The 0a column displays zeros because **loc=1213**, falls within the range specified for the start and end card location (**sloc=1211** and **eloc=1215**). (Note that the Receive FSN row displays a value of **1**, which is not a count, but rather the initial sequence number of the FSN that the source card location expects to receive). Columns 09 and 0b display zeros because these slots are not provisioned with any card (the adjacent card slots (08 and 0c) contain DCM cards).

rept-imt-lvl2:sloc=1211:eloc=1215:loc=1213

rlghncxa03w 04-02-28 09:26:34 EST EAGLE 31.3.0

Retrieving data from card...

Card: H'000a Bus: A

Field		08	09	0a	0b	0c
Link Status		ALGN	-OS-	ALGN	-OS-	ALGN
OS Count	(dec)	0	0	0	0	0
Transmit BSN	(dec)	84	0	0	0	0
Transmit FSN	(dec)	99	0	0	0	34
Receive BSN	(dec)	99	0	0	0	34
Receive FSN	(dec)	85	1	1	1	1
Unack Messages	(dec)	0	0	0	0	0
Invalid Length	(dec)	0	0	0	0	0
Invalid rx BSN	(dec)	0	0	0	0	0
Invalid rx FSN	(dec)	0	0	0	0	0
Invalid LSSU	(dec)	0	0	0	0	0
Invalid ASU	(dec)	0	0	0	0	0
RTB Address	(hex)	0000	0000	0000	0000	0000
Average ack time	(ms)	0	0	0	0	0
Minimum ack time	(ms)	0	0	0	0	0
Maximum ack time	(ms)	0	0	0	0	0

rlghncxa03w 04-02-28 09:26:34 EST EAGLE 31.3.0

Card: H'00f4 Bus: B

Field		f0	f1	f2	f3	f4	f5	f6	f7
Link Status		-OS-	-OS-	ALGN	ALGN	ALGN	-OS-	ALGN	-OS-
OS Count	(dec)	0	0	2	2	3	0	1	0
Transmit BSN	(dec)	0	0	0	0	0	0	0	0
Transmit FSN	(dec)	0	0	0	0	0	0	0	0
Receive BSN	(dec)	0	0	0	0	0	0	0	0
Receive FSN	(dec)	0	0	1	1	1	0	1	0
Unack Messages	(dec)	0	0	0	0	0	0	0	0
Invalid Length	(dec)	0	0	0	0	0	0	0	0
Invalid rx BSN	(dec)	0	0	0	0	0	0	0	0
Invalid rx FSN	(dec)	0	0	0	0	0	0	0	0
Invalid LSSU	(dec)	0	0	0	0	0	0	0	0
Invalid ASU	(dec)	0	0	0	0	0	0	0	0
RTB Address	(hex)	0000	0080	0100	0180	0200	0280	0300	0380
Average ack time	(ms)	0	0	0	0	0	0	0	0
Minimum ack time	(ms)	0	0	0	0	0	0	1	1
Maximum ack time	(ms)	2	2	3	3	3	3	3	3

END OF REPORT

;

Legend

CARD—The IMT address of the card location specified by the **I** parameter in this command in hexadecimal.

BUS—The IMT bus for which the IMT level 2 statistics are being reported.

FIELD—The IMT level 2 statistics displayed in this report.

00 - EF—The IMT address of the cards on the IMT bus in hexadecimal.

LINK STATUS—The status of the link, either ALGN (aligned) or OS (out of service).

OS COUNT—The number of times the link has cycled between being aligned and being out of service.

TRANSMIT BSN—The number of BSNs transmitted.

TRANSMIT FSN—The number of FSNs transmitted.

RECEIVE BSN—The number of BSNs received.

RECEIVE FSN—The sequence number for the next FSN that the source card location expects to receive.

UNACK MESSAGES—The number of unacknowledged messages received.

INVALID LENGTH—The number of messages received with invalid length indicators.

INVALID RX BSN—The number of invalid BSNs received.

INVALID RX FSN—The number of invalid FSNs received.

INVALID LSSU—The number of invalid LSSUs received.

INVALID ASU—The number of invalid ASUs received.

RTB ADDRESS—The address of the retransmission buffer, in hexadecimal.

AVERAGE ACK TIME—The average amount of time for an acknowledgment, in milliseconds.

MINIMUM ACK TIME—The minimum amount of time for an acknowledgment, in milliseconds.

MAXIMUM ACK TIME—The maximum amount of time for an acknowledgment, in milliseconds.

rept-meas**Report Measurements**

Use this command to generate measurement reports on demand. The reports display on the UI terminal, and are not transferred to the customer FTP server when the Measurements Platform feature is enabled.

ITU gateway measurements are done for **stp** and, on a per-linkset basis, for **lnkset**, **lsonismt**, **lsdestni**, and **lsorigni** entity types.

Keyword: **rept-meas**

Related Commands: **chg-meas**, **copy-meas**, **rept-ftp-meas**, **rtrv-meas-sched**

Command Class: Link Maintenance

Parameters

:enttype= (mandatory)

The entity type to report on.

Range: **link**, **lnkset**, **lnp**, **lsdestni**, **lsonismt**, **lsorigni**, **mapscrn**, **np**, **origni**, **origininc**, **stp**, **stplan**, **tt**

link — Measurements for signaling links

lnkset — Measurements for linksets

lnp — Measurements for local number portability

lsdestni — Measurements for linkset destination network identifiers

lsonismt — Measurements for ISUP message type screening
lsorigni — Measurements for linkset originating network identifiers
mapscrn — Measurements for GSM MAP message screening
np — Measurements for INP and G-Port
origni — Measurements for originating network identifiers greater than 5
origninc — Measurements for originating network identifiers (less than 5, small networks) for network clusters
stp — Measurements for all nodes
stplan — Measurements for TCP/IP links.
tt — Measurements for translation types

:type= (mandatory)

The type of measurement report.

Range: **avl, avld, avldth, comp, gtwy, mtcd, mtcddth, mtch, mtcs, nm, rbase, systot**

avl — Availability measurements

avld — Daily availability measurements

avldth — Day to hour availability measurements.

comp — Component measurements

gtwy — Internetwork gateway-related data from the STP for ANSI and ITU measurements. ANSI gateway measurements are pegged on a per-linkset, per-Network Indicator basis, whereas ITU measurements are pegged on a per-linkset basis.

mtcd — Daily maintenance measurements

mtcdth — Day-to-hour maintenance measurements

mtch — Hourly maintenance measurements

mtcs — Link/linkset maintenance status

nm — Network management, on-demand

rbase — Schedule-report type record base measurements

systot — STP system totals

:appl= (optional)

The GPL to report measurements on. This parameter can be used only with the **stplan-avl (enttype=stplan:type=avl)** measurement report. The **rtrv-gpl:gpl=all** command can be entered to list all valid applications.

Range: *xxxxxxxx*

Default: No value given.

:day= (optional)

The specific day of the week for daily LNP measurement reports.

Range: **mon, tue, wed, thu, fri, sat, sun**

Default: The previous single day report is generated.

:hh= (optional)

The specific half-hour interval. The **hh** parameter implies the ending time for the collection interval; for example, **hh=0300** generates a report for **2:30-3:00**.

Range: *hhmm* where *hh* = **00-24** (hour) and *mm* = **00** or **30** (minute)

Default: The **hh** parameter value is not given.

:link= (optional)

The link on the card specified in the **loc** parameter

Synonym: **port**

Range: **a, b, a1-a31, b1-b31**

Not all card types support all **link** parameter values.

See Table A-1 for valid **link** parameter range values for each type of card that can have assigned signaling link ports.

Default: The **link** parameter value is not given.

:loc= (optional)

The card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Default: The **loc** parameter value is not given.

:lsn= (optional)

The name of the linkset for which link or linkset measurements are reported.

Range: ayyyyyyyyy
1 alphabetic character followed by up to 9 alphanumeric characters

Default: The **lsn** value is not given.

:nc= (optional)

The network cluster for the specified GTWY measurement report.

Range: 0-255

Default: The **nc** parameter value is not given.

:ni= (optional)

The network indicator for the specified GTWY measurement report.

Range: 1-255

Default: The **ni** parameter value is not given.

:nzo= (optional)

Print non-zero measurements only.

Range: yes, no

Default: yes for types **avl**, **avld**, and **avldth**.
This parameter is not used with the other report types.

:period= (optional)

The relative time period to report.

Range: last, specific, active, all
last— The previous collection interval
specific— A specific half-hourly interval (specified with the **hh** parameter)
active— The current collection interval
all— All collection intervals.

Default: The **period** parameter value is not given.

:qh= (optional)

The specific quarter-hour interval. The **qh** parameter implies the ending time for the collection interval; for example, **qh=0315** generates a report for 3:00-3:15.

Range: hhmm where hh = 00-24 (hour) and mm = 00, 15, 30, or 45 (minute)

Default: The **qh** value is not given.

:trm= (optional)

The serial port (printer location) where the report is to be sent.

Range: 1-16

Default: The **trm** value is not given.

:tt= (optional)

A specific translation type to be reported.

Range: 0-255

Default: The **tt** parameter value is not given.

Example

```

rept-meas:type=systot:enttype=stp
rept-meas:type=comp:enttype=lnkset:lsn=sp1
rept-meas:enttype=link:type=avl:loc=1201:link=a
rept-meas:enttype=lnp:type=mtcd
rept-meas:enttype=lnp:type=mtch:period=last
rept-meas:enttype=lnp:type=mtch:period=specific:hh=1300
rept-meas:enttype=lnp:type=mtcd:period=specific:day=tue
rept-meas:enttype=stplan:type=avl:appl=atmansi
rept-meas:type=systot:enttype=tt:tt=26
rept-meas:type=mtcd:enttype=mapscrn
rept-meas:type=mtch:enttype=mapscrn

```

Dependencies

Only one **rept-meas** command can be in progress at any one time.

The valid parameter combinations depend on the report type specified. These combinations are shown in Table 5-61. An X in a cell indicates that the parameter is valid for the report type shown.

When the Enhanced GSM MAP Screening (EGMS) feature is turned on, this command cannot be used to generate EGMS measurements reports.

The entity specified by the **loc**, **port**, or **lsn** parameter must be in the database.

The link specified by the **loc** and **link** parameters must already be defined in the database.

When **enttype=link** is specified, the card in the location specified by the **loc** parameter must be a LIM.

Hourly collection and report processing cannot be in progress when report type **mtch** is specified.

Quarter-hourly collection and report processing cannot be in progress when report type **comp**, **systot**, **avl**, or **gtwy** is specified.

The **mtcdth** report type is unavailable between midnight and 1:00 AM (0100).

Day-to-hour collection and report processing cannot be in progress

- When report type **mtcd** is specified
- When report type **mtcdth** is specified

Daily collection and report processing cannot be in progress when report type **mtcd** is specified.

Half-hourly collection and report processing cannot be in progress when report type **comp**, **systot**, **avl**, or **gtwy** is specified.

5-minute collection and report processing cannot be in progress when report type **nm** is specified.

When **enttype=lnp**, only **mtcd** and **mtch** can be specified for the **type** parameter.

If **nc** is specified for **enttype=origninc** reports, **ni** must also be specified.

If **ni** is specified for **enttype=origni** reports, measurements data must be available at the time the command is entered.

The **day** parameter can be specified only for report type **mtcd** and entity types **lnp** and **mapscrn**.

The **period=all** parameter can be specified only for **type=avl** and **enttype=lnp:type=mtcd** reports.

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before the **enttype=lnp** parameter can be specified.

The GSM Map Screening feature (see the **enable-ctrl-feat** and **chg-ctrl-feat** commands) must be turned on before the **enttype=mapscrn** parameter can be specified.

Either the G-Port feature or the INP feature must be turned on before the **entity=np** parameter can be specified.

A primary MCPM card must be available when the Measurements Platform collection option is enabled and this command is entered.

The 15 Minute Measurements feature must be turned on and the 15 Minute Measurements collection option must be on before the **qh** parameter can be specified.

The **qh** parameter must specify a quarter-hourly boundary (the end of the requested quarter-hour for the report) for valid report types (**avld**, **mtcd**, **nm**, **rbase**, and **mtcs** are excluded with message "E2307: QH or HH is not valid for this TYPE").

The **hh** parameter must specify a half-hourly boundary (the end of the requested half-hour for the report) for valid report types (**mtcd** and **nm** are excluded with message "E2307: QH or HH is not valid for this TYPE").

The **hh** and **qh** parameters cannot be specified together in the command.

When the **period=last** parameter is specified, the **hh** parameter, the **qh** parameter, or the **day** parameter cannot be specified.

When the **period=active** parameter or the **period=all** parameter is specified, the **hh** and **qh** parameters cannot be specified.

When the **period=specific** parameter is specified, the **hh** parameter, the **qh** parameter, or the **day** parameter must be specified. The **hh**, **qh**, and **day** parameters can be specified only if the **period=specific** parameter is specified.

A half-hour boundary must be specified for the **hh** parameter, except for report type **mtch**; an hourly boundary must be specified for report type **mtch** (that is, only half hours ending in **00**, such as **0100**, **0200** or **0300**).

A quarter-hour boundary must be specified for the **qh** parameter, except for report type **mtch**; an hourly boundary must be specified for report type **mtch** (that is, only quarter hours ending in **00**, such as **0100**, **0200** or **0300**).

The **hh** parameter and the **qh** parameter cannot be specified when report type **avld**, **mtcd**, **nm**, **rbase**, or **mtcs** is specified.

If the **link** parameter is specified, the **loc** parameter must be specified.

The **lsn** parameter cannot be specified in the same command with the **loc** parameter or the **port** parameter.

When entity type **link** is specified, either the **loc** and **port** parameters or the **lsn** parameter must be specified.

The **appl** parameter can be specified only when the **enttype=stplan** and the **type=avl** parameters are specified.

When the **appl** parameter is specified, the **period=active** parameter and the **period=all** parameter cannot be specified.

The **period=active** parameter cannot be specified when the **enttype=stp** parameter or the **enttype=tt** parameter is specified.

The **ni** parameter cannot be specified for ITU linksets (for **enttype=lsdestni** and **enttype=lsorigni** reports)

The **lsn** parameter cannot be specified with the following parameters: **enttype=stp/tt/stplan/origni/origininc/lnp/np/mapscrn** or **type=systot**.

For entity type **lnkset**, the **lsn** parameter must be specified, regardless of whether the value of the **lsn** parameter is an ANSI or an ITU linkset.

For entity type **avl**, if **period=all** is specified, the **loc** and **port** parameters must be specified.

The **nzo** parameter is used only for entity types **avl**, **avld**, and **avldth**.

The **loc** and **lnkset** parameters cannot be specified in the same command. Either the **loc** parameter or the **lnkset** parameters can be specified, but not both. For example, the following command is not a valid parameter combination: **rept-meas:type=mtcd:enttype=link:loc=1211:link=a:lnkset=nc2785**

The **appl** and **loc** parameters cannot be specified in the same command line.

When **enttype=lnp**, the **trm** parameter cannot be specified because LNP measurements can be written only to the FTA. To retrieve this data, use the procedure described with the **act-file-trns** command information.

For the **stplan-avl** reports (**enttype=stplan** and **type=avl** parameters), if the **appl** parameter is specified, the **period=active** and **period=all** parameters cannot be specified.

The **type=systot** and **loc** parameters cannot be specified in the same command line.

When **enttype=lnp** and **type=mtch**, only **last** and **specific** can be specified for the **period** parameter.

When **enttype=lnp**, **nzo=yes** cannot be specified.

When **enttype=lnp**, the **appl**, **loc**, **port**, **lsn**, **ni**, and **nc** parameters cannot be specified.

The **tt** parameter must be specified when **enttype=tt**. The only time the **tt** parameter is valid is when it is specified with **enttype=tt**.

If the **type=gtwy:enttype=lsorigni/lsdestni/lsnismt** parameter combination is specified, the **ni** parameter cannot be specified for ITU linksets. The **ni** parameter is allowed only for ANSI linksets.

If the **type=gtwy:enttype=stp** parameter combination is specified, no additional parameters may be specified.

If the **type=gtwy:enttype=lsdestni** parameter combination is specified for an ITU linkset, only the **lsn** parameter can be specified.

If the **type=gtwy:enttype=lsorigni** parameter combination is specified for an ITU linkset, only the **lsn** parameter can be specified.

If the **type=gtwy:enttype=lsnismt** parameter combination is specified for an ITU linkset, only the **lsn** parameter can be specified.

Table 5-61. Valid Parameter Combinations for the **type** Parameter

Parameter Value	Report Types (type parameter)												
	systot	comp	mtcd	mtcdth	mtch	mtcs	nm	avl	avld	avldth	gtwy	rbase	
enttype=													
stp	X		X	X		X					X	X	
link		X	X	X		X	X	X	X	X		X	
lnkset		X	X	X		X	X				X	X	
lnp			X		X								
tt	X												
stplan	X		X	X				X					

Table 5-61. Valid Parameter Combinations for the **type** Parameter

Parameter Value	Report Types (type parameter)												
	systot	comp	mtcd	mtcdth	mtch	mtcs	nm	avl	avld	avldth	gtwy	rbase	
origni											X		
origninc											X		
lsdestni											X		
lsonismt											X		
lsoigni											X		
np			X		X								
mapscrm			X		X								
period=													
last	X	X	X	X	X		X	X	X	X	X		
specific	X	X			X			X			X		
active		X				X	X	X				X	
all			X					X					
nzo								X	X	X			

Notes

The *Maintenance Manual* provides a description of all report parameters.

INP, GSM MAP screening, and LNP measurements are sent to the FTA (file transfer area) rather than to the EAGLE 5 ISS terminal. Refer to Chapter 2 of the *Maintenance Manual* for procedural information on accessing the FTA.

If an on-demand report is requested while the collection for that interval is in progress, the requested report will not be generated. The **rept-meas** command must be entered again.

For the entity types **avld** and **avldth**, if no link or linkset is specified, all links are reported.

Output

rept-meas:type=systot:enttype=stp

```
rlghncxa03w 06-05-27 16:53:22 EST EAGLE 35.0.0
Measurements Report will be generated.
rlghncxa03w 06-05-27 16:53:22 EST EAGLE 35.0.0
TYPE OF REPORT: STP SYSTEM TOTAL MEASUREMENTS ON STP
REPORT PERIOD: LAST
REPORT INTERVAL: 06-05-27 12:00:00 THRU 12:29:59
```

STP-SYSTOT MEASUREMENTS

```

ORIGMSUS = 425, TRMDMSUS = 420, THRSWMSU = 730980,
ORMSUOCT = 8490, TRMSUOCT = 8400, TSMSUOCT = 14619600,
DURINTFL = 0, DTAMSULOST = 0, MSINVDPC = 5,
MSINVSIO = 0, OMSINVDPC = 0, MSINVLNK = 0,
MSINVSIF = 0, MSNACDPC = 5, MSINVSLC = 0,
GTTPERFD = 0, GTTUNONS = 0, GTTUN1NT = 0,
0,
MSSCCPFL = 0, MSULOST1 = 0, MSULOST2 = 0,
MSULOST3 = 0, MSULOST4 = 0, MSULOST5 = 0,
CRSYSAL = 1, MASYSAL = 2, MISYSAL = 9,
XLXTSPACE = 0, XLXTELEI = 0, MSUDSCRD = 0,
OVSZMSG = 0, GFGTMATCH = 0, GFGTNOMCH = 0,
GFGTNOLKUP = 0, MSUSCCPFLR = 0, NMSCCPMH = 4567,
PKSCCPMH = 38495, MSSCCPDISC = 23, IDPRMSERR = 2,
IDPRMSFAIL = 12, IDPRMSRCV = 8374, IDPRMSSUCC = 8360,
MSIDPNOMCH = 0, MSIDPMATCH = 0
;

```

```
rlghncxa03w 06-05-27 16:53:22 EST EAGLE 35.0.0
END OF HALF-HOURLY STP-SYSTOT MEASUREMENT REPORT
```

rept-meas:type=comp:enttype=lnkset:lsn=xy212

```
rlghncxa03w 03-07-27 16:53:22 EST EAGLE 31.3.0
Measurements Report will be generated.
rlghncxa03w 03-07-27 16:53:22 EST EAGLE 31.3.0
TYPE OF REPORT: COMPONENT MEASUREMENTS ON LNKSET
REPORT PERIOD: LAST
REPORT INTERVAL: 03-07-16 10:00:00 THRU 10:29:59
```

LNKSET-COMP MEASUREMENTS: lsn1 (SAAL)

```

MSUTRAN = 120755, MSURECVD = 147190, OCTTRAN = 2415100,
OCTRECVD = 2943800, MSUSRGTT = 0, OCTRCGTT = 0,
TDLSINAC = 0, MSGWSDSLIM = 0, ZTTMAPO = 0,
ZTTMAPI = 0, ATMNDCTRN = 0, ATMNDCRCV = 0,
SDUSTRAN = 0, SDURECVD = 0, SDURETRN = 0,
MTPMSCNVTD = 0, GTTMSCNVTD = 0
;

```

```
rlghncxa03w 03-07-27 16:53:22 EST EAGLE 31.3.0
LNKSET-COMP MEASUREMENTS: lsn2
```

```

MSUTRAN = 120740, MSURECVD = 147196, OCTTRAN = 2414790,
OCTRECVD = 2943920, MSUSRGTT = 0, OCTRCGTT = 0,
TDLSINAC = 0, MSGWSDSLIM = 0, ZTTMAPO = 0,
ZTTMAPI = 0, MTPMSCNVTD = 0, GTTMSCNVTD = 0
;

```

```
rlghncxa03w 03-07-27 16:53:22 EST EAGLE 31.3.0
LNKSET-COMP MEASUREMENTS: lsn3
```

```

MSUTRAN = 144895, MSURECVD = 147190, OCTTRAN = 2897900,
OCTRECVD = 2943800, MSUSRGTT = 0, OCTRCGTT = 0,
TDLSINAC = 0, MSGWSDSLIM = 0, ZTTMAPO = 0,

```

```

ZTTMAPI      =      0, MTPMSCNVTD =      0, GTTMSCNVTD =      0
;
rlghncxa03w 03-07-27 16:53:22 EST   EAGLE 31.3.0
MSUTRAN      =      0, MSURECVD   =      0, OCTTRAN    =      0,
OCTRECVD     =      0, MSUSRGTT  =      0, OCTRCGTT    =      0,
TDLSINAC     =      0, MSGWSDSLIM =      0, ZTTMAPO    =      0,
ZTTMAPI      =      0, ATMNDCTRN  =      0, ATMNDCRCV   =      0,
SDUSTRAN     =      0, SDURECVD   =      0, SDURETRN    =      0,
MTPMSCNVTD   =      0, GTTMSCNVTD =      0
;
rlghncxa03w 03-07-27 16:53:22 EST   EAGLE 31.3.0
END OF HALF-HOURLY LNKSET-COMP MEASUREMENT REPORT
;

```

rept-meas:type=comp:enttype=link:lsn=ls1201a0

```

rlghncxa03w 04-03-28 01:00:04 EST   EAGLE 31.4.0
TYPE OF REPORT: COMPONENT MEASUREMENTS ON LINK
REPORT PERIOD: LAST
REPORT INTERVAL: 04-03-28 00:30:00 THRU 00:59:59

LINK-COMP MEASUREMENTS: LOC: 1201, PORT: A , LSN: e2m1s1

These measurements are from 04-03-28, 00:30:00 through 00:59:59.
MSUTRAN      =      20, MSURECVD   =      20, MSURETRN    =      0,
OCTRETRN     =      0, OCTTRAN    =      400, OCTRECVD     =      400,
MTCEUSG      =      0, DURLKOTG   =      0, MSUSRGTT    =      0,
OCTRCGTT     =      0, TDCNGLV1   =      0, TDCNGLV2     =      0,
TDCNGLV3     =      0, ECCNGLV1   =      0, ECCNGLV2     =      0,
ECCNGLV3     =      0, MSUDISC0    =      0, MSUDISC1     =      0,
MSUDISC2     =      0, MSUDISC3    =      0, LNKAVAIL      =      183,
NMGWSDSABL   =      0
;
rlghncxa03w 04-03-28 01:00:05 EST   EAGLE 31.4.0
LINK-COMP MEASUREMENTS: LOC: 1201, PORT: B , LSN: e2m1s2

These measurements are from 04-03-28, 00:30:00 through 00:59:59.
MSUTRAN      =      20, MSURECVD   =      20, MSURETRN    =      0,
OCTRETRN     =      0, OCTTRAN    =      400, OCTRECVD     =      400,
MTCEUSG      =      0, DURLKOTG   =      0, MSUSRGTT    =      0,
OCTRCGTT     =      0, TDCNGLV1   =      0, TDCNGLV2     =      0,
TDCNGLV3     =      0, ECCNGLV1   =      0, ECCNGLV2     =      0,
ECCNGLV3     =      0, MSUDISC0    =      0, MSUDISC1     =      0,
MSUDISC2     =      0, MSUDISC3    =      0, LNKAVAIL      =      183,
NMGWSDSABL   =      0
;
rlghncxa03w 04-03-28 01:00:05 EST   EAGLE 31.4.0
LINK-COMP MEASUREMENTS: LOC: 1202, PORT: B , LSN: e2m1s3 (SAAL)

These measurements are from 04-03-28, 00:30:00 through 00:59:59.
MSUTRAN      =      5, MSURECVD   =      1, OCTTRAN    =      89,
OCTRECVD     =      17, MTCEUSG   =      0, DURLKOTG     =      117,
MSUSRGTT     =      0, OCTRCGTT   =      0, TDCNGLV1     =      0,
TDCNGLV2     =      0, TDCNGLV3   =      0, ECCNGLV1     =      0,
ECCNGLV2     =      0, ECCNGLV3   =      0, MSUDISC0      =      0,
MSUDISC1     =      0, MSUDISC2    =      0, MSUDISC3      =      0,
LNKAVAIL     =      1684, NMGWSDSABL =      0, ATMNDCTRN    =      16845,
ATMNDCRCV    =      16841, SDUSTRAN =      16845, SDURECVD    =      16841,
SDURETRN     =      0
;
rlghncxa03w 04-03-28 01:00:06 EST   EAGLE 31.4.0

```

```

END OF HALF-HOURLY LINK-COMP MEASUREMENT REPORT
;
rept-meas:enttype=link:type=avl:loc=1201:link=a
rlghncxa03w 02-03-27 16:53:22 EST EAGLE 30.0.0
Measurements Report will be generated.

rlghncxa03w 02-03-27 16:53:22 EST EAGLE 30.0.0
TYPE OF REPORT: AVAILABILITY MEASUREMENTS ON LINK
REPORT PERIOD: LAST
REPORT INTERVAL: 02-03-06, 10:30:00 THROUGH 10:59:59

LINK-AVL MEASUREMENTS: LOC: 1201, PORT: A , LSN: lsn123

These measurements are from 02-03-06, 10:30:00 through 10:59:59.
WARNING - measurement data represents an incomplete interval.
SUSRECVD = 1161096, SUSTRAN = 1164935

rlghncxa03w 02-03-27 16:53:22 EST EAGLE 30.0.0
END OF ON-DEMAND LINK-AVL MEASUREMENT REPORT
;
rept-meas:type=avl:enttype=link:loc=1201:link=a:nzo=no
rlghncxa03w 2-03-06 11:01:35 EST EAGLE 30.0.0
Measurements Report will be generated.

rlghncxa03w 02-03-06 11:01:35 EST EAGLE 30.0.0
TYPE OF REPORT: AVAILABILITY MEASUREMENTS ON LINK
REPORT PERIOD: LAST
REPORT INTERVAL: 02-03-06, 10:30:00 THROUGH 10:59:59

LINK-AVL MEASUREMENTS: LOC: 1201, PORT: A , LSN: lsn123

These measurements are from 02-03-06, 10:30:00 through 10:59:59.
WARNING - measurement data represents an incomplete interval.
NEARMGINH = 0, FARMGINH = 0, NMDCLFLR = 0,
DRDCLFLR = 0, SURCVERR = 0, DRLNKINH = 0,
NDCLFABN = 0, NDCLFSYNC = 0, NDCLFXDA = 0,
NDCLFXER = 0, NDCLFXDC = 0, NDCLFALP = 0,
NDCLFINTR = 0, NMFEPRO = 0, NMLCLPRO = 0,
DRFEPRO = 0, DRLCLPRO = 0, SUSRECVD = 1161096,
SUSTRAN = 1164935

rlghncxa03w 02-03-06 11:01:35 EST EAGLE 30.0.0
END OF ON-DEMAND LINK-AVL MEASUREMENT REPORT
;

```

In the following example, the final counts also show ITU measurement data.

```

rept-meas:type=gtwy:enttype=stp
rlghncxa03w 01-03-05 11:01:35 EST EAGLE 28.1.0
TYPE OF REPORT: GATEWAY MEASUREMENTS ON STP
REPORT PERIOD: LAST
REPORT INTERVAL: 01-03-05, 12:00:00 THROUGH 12:29:59

STP-GTWY MEASUREMENTS

These measurements are from 01-03-05, 12:00:00 through 12:29:59.
TTMAPPF = 450, GTTPFDIC = 0, MSUDSCRD = 880,
MSURJOPC = 0, MSURJDPC = 0, MSURJSIO = 0,
MSURJCPA = 0, MSURJAPC = 0, MSURJPCS = 779,
MSURJDST = 230, MSURJTT = 0, MSURJDSN = 0,
MSURJTFC = 0, MSURJSRT = 0
01
rlghncxa03w 00-03-05 11:01:35 EST EAGLE 28.1.0

```

END OF ON-DEMAND STP-GTWY MEASUREMENT REPORT

;

The following example specifies an ANSI gateway linkset for the **lsn** parameter with the **enttype=lsdestni** parameter:

rept-meas:type=gtwy:enttype=lsdestni:lsn=ls1201:ni=5

rlghncxa03w 04-02-19 12:30:16 EST EAGLE 31.3.0
 TYPE OF REPORT: GATEWAY MEASUREMENTS ON LSDESTNI
 REPORT PERIOD: LAST
 REPORT INTERVAL: 04-02-19, 12:00:00 THROUGH 12:29:59

LSDESTNI-GTWY MEASUREMENTS: LSN: ls1201, NI: 5

These measurements are from 04-02-19, 12:00:00 through 12:29:59.
 MSURCVNA = 5040000, OCTRCVNA = 201600K, MSUTRNNA = 834033,
 OCTTRNNA = 14757021, TFCGTRAN = 0

;

rlghncxa03w 04-02-19 12:30:18 EST EAGLE 31.3.0
 END OF ON-DEMAND LSDESTNI-GTWY MEASUREMENT REPORT

;

The following example specifies an ITU gateway linkset for the **lsn** parameter with the **enttype=lnkset** parameter. The output format is the same as for an ANSI gateway linkset:

rept-meas:type=gtwy:enttype=lnkset:lsn=lsnitu

rlghncxa03w 00-03-06 11:01:35 EST EAGLE 29.0.0
 TYPE OF REPORT: GATEWAY MEASUREMENTS ON LINKSET
 REPORT PERIOD: LAST
 REPORT INTERVAL: 00-03-05, 13:00:00 THROUGH 13:29:59

LINKSET-GTWY MEASUREMENTS: lsnitu

These measurements are from 00-03-05, 13:00:00 through 13:29:59.
 TFPTRAN = 0, TFPRECD = 5790, TFRTRAN = 0,
 TFRRECD = 0, TFATRAN = 5810, TFARECD = 0,
 SRSTTRAN = 0, SRSTRECD = 0, SLTRECD = 0,
 SRSCTRAN = 0, SRSCRECD = 0, TSTMTRCD = 0,
 SSPTRAN = 330, SSPRECD = 0, SSATRAN = 0,
 SSARECD = 520, SSTTRAN = 0, SSTRECD = 0

rlghncxa03w 00-03-06 11:01:35 EST EAGLE 29.0.0
 END OF ON-DEMAND LINKSET-GTWY MEASUREMENT REPORT

;

The following example specifies an ITU gateway linkset for the **lsn** parameter with the **enttype=lsdestni** parameter. The output format is the same as for an ANSI gateway linkset. For ITU linksets, the **ni** parameter is not applicable.

rept-meas:type=gtwy:enttype=lsdestni:lsn=lsnitu

rlghncxa03w 04-02-06 11:01:35 EST EAGLE 31.3.0
 TYPE OF REPORT: GATEWAY MEASUREMENTS ON LSDESTNI
 REPORT PERIOD: LAST
 REPORT INTERVAL: 04-02-05, 12:00:00 THROUGH 12:29:59

LSDESTNI-GTWY MEASUREMENTS: ITU LSN: lsnitu

These measurements are from 04-02-05, 12:00:00 through 12:29:59.
 MSURCVNA = 5040000, OCTRCVNA = 201600K, MSUTRNNA = 834033,
 OCTTRNNA = 14757021, TFCGTRAN = 0

rlghncxa03w 04-02-06 11:01:35 EST EAGLE 31.3.0


```
END OF ON-DEMAND LSDESTNI-GTWY MEASUREMENT REPORT
```

```
;
```

The following example specifies an ITU gateway linkset for the **lsn** parameter with the **enttype=lsorigni** parameter. The output format is the same as for an ANSI gateway linkset:

```
rept-meas:type=gtwy:enttype=lsorigni:lsn=lsnitu
```

```
rlghncxa03w 04-02-06 11:01:35 EST EAGLE 31.3.0
TYPE OF REPORT: GATEWAY MEASUREMENTS ON LSORIGNI
REPORT PERIOD: LAST
REPORT INTERVAL: 04-02-05, 11:30:00 THROUGH 11:59:59
```

```
LSORIGNI-GTWY MEASUREMENTS: ITU LSN: lsnitu
```

```
These measurements are from 04-02-05, 11:30:00 through 11:59:59.
```

```
TFCRECD      =      0, MSURJOPC      =      834033, MSURJDPC      =      834034,
MSURJCPA      = 14757021, MSURJAPC      = 14757039, MSURJPCS      =      0,
MSURJTFC      =      0, MSURJSRT      =      0, MSUDSCRD      =      0,
MSURJSIO      =      0, MSURJDST      =      0, MSURJTT      =      0,
MSURJDSN      =      0
```

```
rlghncxa03w 04-02-06 11:01:35 EST EAGLE 31.3.0
END OF ON-DEMAND LSORIGNI-GTWY MEASUREMENT REPORT
```

```
;
```

The following example specifies an ANSI gateway linkset for the **lsn** parameter where **enttype=lsnismt**. The output format is the same as for an ITU gateway linkset:

```
rept-meas:type=gtwy:enttype=lsnismt:lsn=ls1201a:ni=43
```

```
rlghncxa03w 02-12-06 11:01:35 EST EAGLE 30.0.0
TYPE OF REPORT: GATEWAY MEASUREMENTS ON LSONISMT
REPORT PERIOD: LAST
REPORT INTERVAL: 02-12-19, 12:00:00 THROUGH 12:29:59
```

```
LSONISMT-GTWY MEASUREMENTS: LSN: ls1201a, NI: 43, ISMT: 6
```

```
These measurements are from 02-12-19, 12:00:00 through 12:29:59.
MSUISPMT      =      45397
```

```
;
```

```
LSONISMT-GTWY MEASUREMENTS: LSN: ls1201a, NI: 43, ISMT: 7
```

```
These measurements are from 02-12-19, 12:00:00 through 12:29:59.
MSUISPMT      =      61423
```

```
;
```

```
rlghncxa03w 02-12-06 11:01:35 EST EAGLE 30.0.0
END OF ON-DEMAND LSONISMT-GTWY MEASUREMENT REPORT
```

```
;
```

The following example shows output when measurements files are sent to the FTA area:

```
rept-meas:type=mtcd:enttype=mapscrn
```

```
rlghncxa03w 04-02-06 11:01:35 EST EAGLE 31.3.0
Measurement Reports will be generated to active File Transfer Area.
MTCD MAPSCRN SYSTEM report generated to mon_map.csv in FTA.
MTCD MAPSCRN PER-SERVER report generated to mon_serv.csv in FTA.
```

```
;
```

Legend

TYPE OF REPORT—The type of report, defined by the **type** and **enttype** parameters.

REPORT PERIOD—The date and the time period for which the report was generated.

REPORT INTERVAL—The time period for which the report was generated.

LINK-AVL MEASUREMENTS: LOC—For the link reports (in this example the availability report), the card location, port, and linkset name of the link for which the report is being generated.

LINK-COMP MEASUREMENTS: LOC—For the link reports (in this example the components report), the card location, port, and linkset name of the link for which the report is being generated.

LINKSET-COMP MEASUREMENTS—For the linkset components report, the name of the linkset for which the report was generated.

STPLAN-AVL MEASUREMENTS: LOC—For the STPLAN availability reports, the card location for which the report is being generated.

<ENTITY>-GTWY MEASUREMENTS—For Gateway Measurements reports, where the **entity** value will be one of the following: STP, LNKSET, ORIGNI, ORIGININC, LSDESTNI, LSONISMT, LSORIGNI, depending on what is being reported.

The remainder of the items displayed are the measurements that were made. For more information about these measurements, refer to the *Maintenance Manual*.

rept-stat-alm

Report Status Alarm

Use this command to provide status of all alarms.

Keyword: **rept-stat-alm**

Related Commands: **dact-alm-trns**, **rept-stat-clk**, **rept-stat-trbl**, **rtrv-obit**, **rtrv-trbl**

Command Class: System Maintenance

Parameters

:cli= (optional)

CLLI string. This parameter allows the user to see only alarms that pertain to a particular CLI.

Range: *aaaaaaaaaa*

:dev= (optional)

Device. This parameter provides the type of device for which alarms are displayed. The **display=inhb** parameter must be specified when this parameter is specified.

Range: **applsock**, **as**, **card**, **cdt**, **clock**, **dlk**, **ls**, **lsmconn**, **route**, **seasx25**, **slk**, **trm**, **rtx**

:display= (optional)

Type of alarms to be displayed. When the **disply=inhb** parameter is specified, the Alarm Inhibit Report appears in the command output and provides information about inhibited alarms in the system. The **dev** parameter can be specified with this parameter to display the Alarm Inhibit Report for a specific device type.

Range: **inhb**

:dur= (optional)

Duration. This parameter indicates whether to display permanently inhibited alarms, temporarily inhibited alarms, or timed inhibited alarms. This parameter is valid only when the **display=inhb** parameter is specified.

Range: **perm**, **temp**, **timed**

:edate= (optional)

Expiry date. This parameter allows the user to see timed alarm inhibits that will expire on the specified date.

Range: **101-991231**

Specify the date in the format *year*, followed by *month*, followed by *day*.

Example

```
rept-stat-alm
rept-stat-alm:display=inhb:dev=card
rept-stat-alm:display=inhb:dur=timed
rept-stat-alm:display=inhb:dur=timed:edate=040520
rept-stat-alm:display=inhb:clli=slkset1:dev=ls
rept-stat-alm:display=inhb
rept-stat-alm:display=inhb:dur=timed
rept-stat-alm:display=inhb:dur=timed:edate=040520
rept-stat-alm:display=inhb:clli=slkset1:dev=ls
```

Dependencies

No other **rept-stat-xxx** command can be in progress when this command is entered.

The **dur** parameter can be specified only if the **display=inhb** parameter is specified.

The **dur** parameter can be specified only if the **display=inhb** parameter is specified.

The **edate** parameter can be specified only if the **dur=timed** parameter is specified.

The **dev** parameter can have only the values **slk**, **ls**, or **route** if the **clli** parameter is specified.

The **dur** parameter must be compatible with the specified device.

The **dev** parameter can be specified only if the **display=inhb** parameter is specified.

The specified **clli** parameter value must exist in the DSTN table.

The **dur** parameter value must be **timed** if the **edate** parameter is specified.

Notes

None

Output

The following example shows output when the system is clean and before a maintenance baseline has been established:

rept-stat-alm

```
rlghncxa03w 06-05-27 15:00:53 EST EAGLE 35.0.0
ALARM TRANSFER= LMC
ALARM MODE CRIT= SILENT MAJR= SILENT MINR= SILENT
ALARM FRAME 1 CRIT= 0 MAJR= 0 MINR= 0
ALARM FRAME 2 CRIT= 0 MAJR= 0 MINR= 0
ALARM FRAME 3 CRIT= 0 MAJR= 0 MINR= 0
ALARM FRAME 4 CRIT= 0 MAJR= 0 MINR= 0
ALARM FRAME 5 CRIT= 0 MAJR= 0 MINR= 0
ALARM FRAME 6 CRIT= 0 MAJR= 0 MINR= 0
ALARM FRAME OAP CRIT= 0 MAJR= 0 MINR= 0
ALARM FRAME GPF CRIT= 0 MAJR= 0 MINR= 0
TOTAL ALARMS CRIT= 0 MAJR= 0 MINR= 0
PERM. INH. ALARMS CRIT= 0 MAJR= 0 MINR= 0
TEMP. INH. ALARMS CRIT= 0 MAJR= 0 MINR= 0
TIMED. INH. ALARMS CRIT= 0 MAJR= 0 MINR= 0
ACTIVE ALARMS CRIT= 0 MAJR= 0 MINR= 0
```

Command Completed.

;

The following example shows output after critical and minor alarms are generated. Major alarms still show SILENT:

rept-stat-alm

```
rlghncxa03w 06-05-27 15:00:53 EST EAGLE 35.0.0
ALARM TRANSFER= LMC
ALARM MODE CRIT= AUDIBLE MAJR= SILENT MINR= AUDIBLE
ALARM FRAME 1 CRIT= 7 MAJR= 0 MINR= 10
ALARM FRAME 2 CRIT= 0 MAJR= 0 MINR= 0
ALARM FRAME 3 CRIT= 0 MAJR= 0 MINR= 0
ALARM FRAME 4 CRIT= 0 MAJR= 0 MINR= 0
ALARM FRAME 5 CRIT= 0 MAJR= 0 MINR= 0
ALARM FRAME 6 CRIT= 0 MAJR= 0 MINR= 0
ALARM FRAME OAP CRIT= 0 MAJR= 0 MINR= 0
ALARM FRAME GPF CRIT= 0 MAJR= 0 MINR= 0
PERM. INH. ALARMS CRIT= 2 MAJR= 0 MINR= 0
TEMP. INH. ALARMS CRIT= 3 MAJR= 0 MINR= 0
TIMED. INH. ALARMS CRIT= 0 MAJR= 0 MINR= 0
ACTIVE ALARMS CRIT= 2 MAJR= 0 MINR= 10
TOTAL ALARMS CRIT= 7 MAJR= 0 MINR= 10
```

Command Completed.

;

The following example shows inhibited alarms:

rept-stat-alm

```
rlghncxa03w 06-05-27 15:00:53 EST EAGLE 35.0.0
ALARM TRANSFER= RMC
ALARM MODE CRIT= AUDIBLE MAJR= SILENT MINR= AUDIBLE
ALARM FRAME 1 CRIT= 3 MAJR= 16 MINR= 22
ALARM FRAME 2 CRIT= 0 MAJR= 0 MINR= 0
ALARM FRAME 3 CRIT= 0 MAJR= 0 MINR= 0
ALARM FRAME 4 CRIT= 0 MAJR= 0 MINR= 0
ALARM FRAME 5 CRIT= 0 MAJR= 0 MINR= 0
ALARM FRAME 6 CRIT= 0 MAJR= 0 MINR= 0
ALARM FRAME OAP CRIT= 0 MAJR= 0 MINR= 0
ALARM FRAME GPF CRIT= 1 MAJR= 2 MINR= 1
```

```

PERM. INH. ALARMS  CRIT= 0          MAJR= 10          MINR= 0
TEMP. INH. ALARMS  CRIT= 0          MAJR= 8           MINR= 0
TIMED. INH. ALARMS CRIT= 0          MAJR= 0           MINR= 0
ACTIVE ALARMS      CRIT= 4          MAJR= 0           MINR= 22
TOTAL ALARMS       CRIT= 4          MAJR= 18          MINR= 23

```

Command Completed.

;

The following example includes the Alarm Inhibit report for the card in location 1301.

rept-stat-alm:display=inhb:dev=card

```

rlghncxa03w 06-05-27 15:00:53 EST EAGLE 35.0.0
ALARM TRANSFER= RMC
ALARM MODE      CRIT= SILENT      MAJR= SILENT      MINR= SILENT
ALARM FRAME 1   CRIT= 11         MAJR= 24         MINR= 17
ALARM FRAME 2   CRIT= 0          MAJR= 0           MINR= 0
ALARM FRAME 3   CRIT= 0          MAJR= 0           MINR= 0
ALARM FRAME 4   CRIT= 0          MAJR= 0           MINR= 0
ALARM FRAME 5   CRIT= 0          MAJR= 0           MINR= 0
ALARM FRAME 6   CRIT= 0          MAJR= 0           MINR= 0
ALARM FRAME OAP CRIT= 1          MAJR= 6           MINR= 1
PERM. INH. ALARMS CRIT= 0        MAJR= 4           MINR= 2
TEMP. INH. ALARMS CRIT= 1        MAJR= 3           MINR= 1
TIMED. INH. ALARMS CRIT= 0        MAJR= 0           MINR= 0
ACTIVE ALARMS    CRIT= 11        MAJR= 23          MINR= 15
TOTAL ALARMS     CRIT= 13        MAJR= 30          MINR= 18

```

ALARM INHIBIT REPORT

DEVICE	DEVICE IDENTIFIER	DURATION	INH LVL	ALM LVL	DATE	TIME
CARD	1301	PERM	MAJR	MAJR	---	---

Command Completed.

;

The following example includes the Alarm Inhibit report for multiple device types. It includes point codes with point code subtype prefixes, and exception routes that require a second line of display to uniquely identify the exception class/criteria of the routes. A plus sign (+) following the alarm level indicates that the current alarm is not inhibited because the level of the inhibit is less than the level of the alarm.

rept-stat-alm:display=inhb

```

rlghncxa03w 06-05-27 15:00:53 EST EAGLE 35.0.0
ALARM TRANSFER= RMC
ALARM MODE      CRIT= SILENT      MAJR= SILENT      MINR= SILENT
ALARM FRAME 1   CRIT= 11         MAJR= 24         MINR= 17
ALARM FRAME 2   CRIT= 0          MAJR= 0           MINR= 0
ALARM FRAME 3   CRIT= 0          MAJR= 0           MINR= 0
ALARM FRAME 4   CRIT= 0          MAJR= 0           MINR= 0
ALARM FRAME 5   CRIT= 0          MAJR= 0           MINR= 0
ALARM FRAME 6   CRIT= 0          MAJR= 0           MINR= 0
ALARM FRAME OAP CRIT= 1          MAJR= 6           MINR= 1
PERM. INH. ALARMS CRIT= 0        MAJR= 11          MINR= 3
TEMP. INH. ALARMS CRIT= 4        MAJR= 1           MINR= 1
TIMED. INH. ALARMS CRIT= 0        MAJR= 1           MINR= 0
ACTIVE ALARMS    CRIT= 11        MAJR= 23          MINR= 15
TOTAL ALARMS     CRIT= 15        MAJR= 36          MINR= 19

```

ALARM INHIBIT REPORT

DEVICE	DEVICE IDENTIFIER	DURATION	INH LVL	ALM LVL	DATE	TIME
CARD	1301	PERM	MAJR	MAJR	---	---

SLK	1101,A	PERM	MAJR	MAJR	---	---
LS	ls1	PERM	MAJR	MAJR	---	---
TERM	10	PERM	MINR	MINR	---	---
CLOCK	----	PERM	MAJR	----	---	---
DLK	1305,A	PERM	MAJR	MINR	---	---
CDT	1	PERM	MAJR	----	---	---
SEASX25	A1	TEMP	MAJR	MAJR	---	---
LSMSCONN	A1	TEMP	CRIT	MAJR	---	---
ROUTE	004-004-002	PERM	MINR	CRIT+	---	---
ROUTE	s-004-004-004	PERM	MAJR	CRIT+	---	---
ROUTE	ps-004-005-006	TEMP	CRIT	CRIT	---	---
NDCLK	DCM A 1301	TEMP	CRIT	MAJR	---	---
NDCQ3	EMAP	TEMP	CRIT	MINR	---	---
APPLSOCK	sock1234567890	PERM	MINR	MAJR+	---	---
AS	asname12345678	PERM	MAJR	MAJR	---	---
E1PORT	1101,1	PERM	MAJR	MAJR	---	---
T1PORT	1301,3	PERM	MAJR	MAJR	---	---
RTX	002-101-001	PERM	MAJR	CRIT+	---	---
	OPCN24= 003-100-001					
RTX	002-102-005	TIMED	MAJR	CRIT+	06-06-01	17:00
	OPCA = 006-001-002					

Command Completed.

;

The following example displays timed inhibited alarm information.

rept-stat-alm:display=inhb:dur=timed

```
rlghncxa03w 06-05-27 15:00:53 EST EAGLE 35.0.0
ALARM TRANSFER= RMC
ALARM MODE      CRIT= SILENT      MAJR= SILENT      MINR= SILENT
ALARM FRAME 1   CRIT= 5           MAJR= 3           MINR= 6
ALARM FRAME 2   CRIT= 0           MAJR= 0           MINR= 0
ALARM FRAME 3   CRIT= 0           MAJR= 0           MINR= 0
ALARM FRAME 4   CRIT= 0           MAJR= 0           MINR= 0
ALARM FRAME 5   CRIT= 0           MAJR= 0           MINR= 0
ALARM FRAME 6   CRIT= 0           MAJR= 0           MINR= 0
ALARM FRAME OAP CRIT= 0           MAJR= 0           MINR= 0
PERM. INH. ALARMS CRIT= 0           MAJR= 0           MINR= 0
TEMP. INH. ALARMS CRIT= 0           MAJR= 0           MINR= 0
TIMED. INH. ALARMS CRIT= 1           MAJR= 2           MINR= 1
ACTIVE ALARMS    CRIT= 4           MAJR= 1           MINR= 5
TOTAL ALARMS     CRIT= 5           MAJR= 3           MINR= 6
```

ALARM INHIBIT REPORT

DEVICE	ELEMENT	DUR	INH	LVL	CUR	LVL	DATE	TIME
ROUTE	ps-004-005-006	TIMED	CRIT		CRIT		040303	1000
E1PORT	1101,1	TIMED	MAJR		MAJR		040302	1200
T1PORT	1301,3	TIMED	MAJR		MAJR		040301	1100
APPLSOCK	sock1234567890	TIMED	MINR		MAJR		040304	1100

Command Completed.

;

The following example displays timed inhibited alarm information for alarms that will expire on the specified date.

rept-stat-alm:display=inhb:dur=timed:edate=040520

```
rlghncxa03w 06-05-27 15:00:53 EST EAGLE 35.0.0
ALARM TRANSFER= RMC
ALARM MODE      CRIT= SILENT      MAJR= SILENT      MINR= SILENT
ALARM FRAME 1   CRIT= 5           MAJR= 3           MINR= 6
ALARM FRAME 2   CRIT= 0           MAJR= 0           MINR= 0
ALARM FRAME 3   CRIT= 0           MAJR= 0           MINR= 0
ALARM FRAME 4   CRIT= 0           MAJR= 0           MINR= 0
```

ALARM	FRAME 5	CRIT=	0	MAJR=	0	MINR=	0
ALARM	FRAME 6	CRIT=	0	MAJR=	0	MINR=	0
ALARM	FRAME OAP	CRIT=	0	MAJR=	0	MINR=	0
PERM. INH. ALARMS		CRIT=	0	MAJR=	0	MINR=	0
TEMP. INH. ALARMS		CRIT=	0	MAJR=	0	MINR=	0
TIMED. INH. ALARMS		CRIT=	1	MAJR=	2	MINR=	1
ACTIVE ALARMS		CRIT=	4	MAJR=	1	MINR=	5
TOTAL ALARMS		CRIT=	5	MAJR=	3	MINR=	6

ALARM INHIBIT REPORT

DEVICE	ELEMENT	DUR	INH LVL	CUR LVL	DATE	TIME
ROUTE	ps-004-005-006	TIMED	CRIT	CRIT	040520	1000
E1PORT	1101,1	TIMED	MAJR	MAJR	040520	1200

Command Completed.

;

The following example displays inhibited alarm information for the linksets with the specified CLLI.

rept-stat-alm:display=inhb:clli=slkset1:dev=ls

```
rlghncxa03w 06-05-27 15:00:53 EST EAGLE 35.0.0
ALARM TRANSFER= RMC
ALARM MODE      CRIT= SILENT      MAJR= SILENT      MINR= SILENT
ALARM FRAME 1   CRIT= 5           MAJR= 3           MINR= 6
ALARM FRAME 2   CRIT= 0           MAJR= 0           MINR= 0
ALARM FRAME 3   CRIT= 0           MAJR= 0           MINR= 0
ALARM FRAME 4   CRIT= 0           MAJR= 0           MINR= 0
ALARM FRAME 5   CRIT= 0           MAJR= 0           MINR= 0
ALARM FRAME 6   CRIT= 0           MAJR= 0           MINR= 0
ALARM FRAME OAP CRIT= 0           MAJR= 0           MINR= 0
PERM. INH. ALARMS CRIT= 0           MAJR= 0           MINR= 0
TEMP. INH. ALARMS CRIT= 0           MAJR= 0           MINR= 0
TIMED. INH. ALARMS CRIT= 1           MAJR= 2           MINR= 1
ACTIVE ALARMS    CRIT= 4           MAJR= 1           MINR= 5
TOTAL ALARMS     CRIT= 5           MAJR= 3           MINR= 6
```

ALARM INHIBIT REPORT

DEVICE	ELEMENT	DUR	INH LVL	CUR LVL	DATE	TIME
LS	slkset1	TIMED	MAJR	MAJR	040302	1200

Command Completed.

;

The following example displays timed inhibited alarm information.

rept-stat-alm:display=inhb:dur=timed

```
rlghncxa03w 06-05-27 15:00:53 EST EAGLE 35.0.0
ALARM TRANSFER= RMC
ALARM MODE      CRIT= SILENT      MAJR= SILENT      MINR= SILENT
ALARM FRAME 1   CRIT= 5           MAJR= 3           MINR= 6
ALARM FRAME 2   CRIT= 0           MAJR= 0           MINR= 0
ALARM FRAME 3   CRIT= 0           MAJR= 0           MINR= 0
ALARM FRAME 4   CRIT= 0           MAJR= 0           MINR= 0
ALARM FRAME 5   CRIT= 0           MAJR= 0           MINR= 0
ALARM FRAME 6   CRIT= 0           MAJR= 0           MINR= 0
ALARM FRAME OAP CRIT= 0           MAJR= 0           MINR= 0
PERM. INH. ALARMS CRIT= 0           MAJR= 0           MINR= 0
TEMP. INH. ALARMS CRIT= 0           MAJR= 0           MINR= 0
TIMED. INH. ALARMS CRIT= 1           MAJR= 2           MINR= 1
ACTIVE ALARMS    CRIT= 4           MAJR= 1           MINR= 5
TOTAL ALARMS     CRIT= 5           MAJR= 3           MINR= 6
```

ALARM INHIBIT REPORT

```

-----
DEVICE    DEVICE IDENTIFIER    DURATION    INH LVL    ALM LVL    DATE    TIME
-----
ROUTE ps-004-005-006          TIMED       CRIT       CRIT       06-08-01 1000
E1PORT 1101,1                  TIMED       MAJR       MAJR       06-10-05 1200
T1PORT 1301,3                  TIMED       MAJR       MAJR       06-08-01 1100
APPLSOCK sock1234567890       TIMED       MINR       MAJR       06-10-05 1100

```

Command Completed.

;

The following example displays timed inhibited alarm information for alarms that will expire on the specified date.

rept-stat-alm:display=inhb:dur=timed:edate=061001

```

upg1040403 06-05-27 14:09:58 EST EAGLE 35.0.0
ALARM TRANSFER= RMC
ALARM MODE      CRIT= SILENT      MAJR= SILENT      MINR= SILENT
ALARM FRAME 1   CRIT= 5           MAJR= 3           MINR= 6
ALARM FRAME 2   CRIT= 0           MAJR= 0           MINR= 0
ALARM FRAME 3   CRIT= 0           MAJR= 0           MINR= 0
ALARM FRAME 4   CRIT= 0           MAJR= 0           MINR= 0
ALARM FRAME 5   CRIT= 0           MAJR= 0           MINR= 0
ALARM FRAME 6   CRIT= 0           MAJR= 0           MINR= 0
ALARM FRAME OAP CRIT= 0           MAJR= 0           MINR= 0
PERM. INH. ALARMS CRIT= 0           MAJR= 0           MINR= 0
TEMP. INH. ALARMS CRIT= 0           MAJR= 0           MINR= 0
TIMED. INH. ALARMS CRIT= 1           MAJR= 2           MINR= 1
ACTIVE ALARMS    CRIT= 4           MAJR= 1           MINR= 5
TOTAL ALARMS     CRIT= 5           MAJR= 3           MINR= 6

```

ALARM INHIBIT REPORT

```

-----
DEVICE    DEVICE IDENTIFIER    DURATION    INH LVL    ALM LVL    DATE    TIME
-----
ROUTE ps-004-005-006          TIMED       CRIT       CRIT       06-10-01 1000
E1PORT 1101,1                  TIMED       MAJR       MAJR       06-10-01 1200

```

Command Completed.

;

The following example displays inhibited alarm information for the linksets with the specified CLLI.

rept-stat-alm:display=inhb:clli=slkset1:dev=ls

```

upg1040403 06-05-27 14:09:58 EST EAGLE 35.0.0
ALARM TRANSFER= RMC
ALARM MODE      CRIT= SILENT      MAJR= SILENT      MINR= SILENT
ALARM FRAME 1   CRIT= 5           MAJR= 3           MINR= 6
ALARM FRAME 2   CRIT= 0           MAJR= 0           MINR= 0
ALARM FRAME 3   CRIT= 0           MAJR= 0           MINR= 0
ALARM FRAME 4   CRIT= 0           MAJR= 0           MINR= 0
ALARM FRAME 5   CRIT= 0           MAJR= 0           MINR= 0
ALARM FRAME 6   CRIT= 0           MAJR= 0           MINR= 0
ALARM FRAME OAP CRIT= 0           MAJR= 0           MINR= 0
PERM. INH. ALARMS CRIT= 0           MAJR= 0           MINR= 0
TEMP. INH. ALARMS CRIT= 0           MAJR= 0           MINR= 0
TIMED. INH. ALARMS CRIT= 1           MAJR= 2           MINR= 1
ACTIVE ALARMS    CRIT= 4           MAJR= 1           MINR= 5
TOTAL ALARMS     CRIT= 5           MAJR= 3           MINR= 6

```

ALARM INHIBIT REPORT

```

-----
DEVICE    DEVICE IDENTIFIER    DURATION    INH LVL    ALM LVL    DATE    TIME
-----
LS        slkset1          TIMED       MAJR       MAJR       06-10-01 1200

```


Command Completed.

Legend

ALARM TRANSFER—The destination of the alarms. LMC=Local Maintenance Center, RMC=Remote Maintenance Center.

ALARM MODE—Displays whether the critical, major, and minor alarms are silent or audible

ALARM FRAME 1—The number of critical, major, and minor alarms detected in the control frame CF-00 (frame 1).

ALARM FRAME 2—The number of critical, major, and minor alarms detected in extension frame EF-00 (frame 2).

ALARM FRAME 3—The number of critical, major, and minor alarms detected in extension frame EF-01 (frame 3).

ALARM FRAME 4—The number of critical, major, and minor alarms detected in extension frame EF-02 (frame 4).

ALARM FRAME 5—The number of critical, major, and minor alarms detected in extension frame EF-03 (frame 5).

ALARM FRAME 6—The number of critical, major, and minor alarms detected in extension frame EF-04 (frame 6).

ALARM FRAME OAP—The number of critical, major, and minor alarms detected in the OAP Frame.

ALARM FRAME GPF—The number of critical, major, and minor alarms detected at the MPS (multi-purpose server). If the LNP ELAP Configuration feature is turned on, the number includes alarms for any applications running on the MPS. If the G-Flex, G-Port, or INP feature is turned on, the number includes alarms for any applications running on the GSM subsystem and the DSM/EPAP links.

PERM. INH. ALARMS—The number of alarms that are permanently inhibited per alarm level.

TEMP. INH. ALARMS—The number of alarms that are temporarily inhibited per alarm level.

TIMED. INH. ALARMS—The number of alarms that are timed inhibited per alarm level.

ACTIVE ALARMS—The number of alarms still active per alarm level.

TOTAL ALARMS—The total number of alarms per alarm level. The inhibited alarm count plus the active alarm count equals the total alarm count.

CRIT—Critical alarms with silent/audible indicator.

MAJOR—Major alarms with silent/audible indicator.

MINOR—Minor alarms with silent/audible indicator.

Alarm Inhibit Report:

DEVICE—The device for which alarms are currently inhibited. Only devices that are alarm inhibited are shown.

ELEMENT—The element of the device for which alarms are inhibited (such as card location, port, routing key, socket or association name)

DURATION—Indicates whether the device is alarm inhibited permanently or temporarily or for a specific length of time

INH LVL—Level in which devices are alarm inhibited (Critical, Major, Minor). The **inh-alm** command defaults the level to Major. Devices cannot be alarm inhibited at a critical level unless the **chg-stpopt** command **critalminh** parameter is turned on.

Notes

This command displays the primary states (PST) and the secondary state (SST). Primary states are:

IS-NR—In-service normal

IS-ANR—In-service abnormal (congested)

OOS-MT—Out of service

OOS-MT-DSBLD—Out-of-service maintenance-disabled (provisioned to be out of service by closing, prohibiting, or deactivation)

Secondary states are:

ALMINH—Alarm inhibited

OOS—Out-of-service

NEA—Near-end allowed

FEA—Far-end allowed

NEP—Near-end prohibited

FEP—Far-end prohibited

Output**rept-stat-applsock**

```
rlghncxa03w 04-02-17 15:35:05 EST EAGLE 31.3.0
SOCKET          PST          SST
socred          OOS-MT      ALMINH
socyellow       IS-ANR      ----
socblue         OOS-MT-DSBLD ----
Command Completed
```

;

rept-stat-applsock

```
rlghncxa03w 04-02-17 15:35:05 EST EAGLE 31.3.0
SOCKET          PST          SST
ipg11051        IS-NR        NEA-FEA
ipg11071        IS-NR        NEA-FEA
ipl1201         IS-NR        NEA-FEA
Command Completed.
```

;

rept-stat-applsock: link=b

```
rlghncxa03w 04-02-17 15:35:05 EST EAGLE 34.0.0
SOCKET          PST          SST
ipl1201b        IS-NR        NEA-FEA
Command Completed.
```

;

rept-stat-as**Report Status AS Association**

Use this command to generate a report of the Application Server (AS) association status.

Keyword: rept-stat-as

Related Commands: chg-as, ent-as, rtrv-as

Command Class: System Maintenance

Parameters

:aname= (optional)

Association name to report on. When the **aname** parameter is specified, the **rept-stat-as** command will report the ASP states for a given association in all of the AS's that it is assigned to.

Range: aaaaaaaaaaaaaa

Up to 15 alphanumeric characters; the first character must be a letter.

:asname= (optional)

Application Server name; the AS name to report on. When the **asame** parameter is specified, the **rept-stat-as** command will report the PST, SST, ASP state, and ASP-ID for each association in the AS.

Range: aaaaaaaaaaaaaa

Up to 15 alphanumeric characters; the first character must be a letter

Example

rept-stat-as

Dependencies

If an association is specified in the command, the specified association must exist in the AS table.

Notes

This command can be canceled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

If the command is specified without a parameter, status for all AS associations is displayed.

This command displays the following states: ACTIVE, UP, DOWN, PENDING.

Output

rept-stat-as

```
rlghncxa03w 04-02-04 12:57:21 EST EAGLE 34.0.0
ASNAME      PST      SST
m3ua0001    OOS-MT    AS-INACTIVE
m3ua0002    IS-NR     AS-ACTIVE
m3ua0003    OOS-MT-DSBLD AS-DOWN
m3ua0004    IS-ANR    AS-PENDING
```

Command Completed.

;

rept-stat-as:asname=m3ua0001

```
rlghncxa03w 05-02-04 12:57:21 EST EAGLE 34.0.0
ASNAME      PST      SST
m3ua0001    OOS-MT    AS-INACTIVE

ANAME      PST      SST      ASP STATE      ASPID
m3ua_1301  OOS-MT-DSBLD  ---      ASP-DOWN        undefined
m3ua_1302  OOS-MT        CONNECTING  ASP-DOWN        undefined
m3ua_1303  IS-NR         ESTABLISHED ASP-INACTIVE    123456789
```

Command Completed.

;

rept-stat-as:aname=m3ua_1303

```
rlghncxa03w 05-02-04 12:57:21 EST EAGLE 34.0.0
ASNAME      ANAME      ASP STATE
m3ua0001    m3ua_1303  ASP-INACTIVE
m3ua0002    m3ua_1303  ASP-ACTIVE
m3ua0003    m3ua_1303  ASP-DOWN
```

Command Completed.

;

rept-stat-asp**Report Status ASP**

Use this command to generate a report of the Application Server Process (ASP) status.

NOTE: This command is obsolete.

Keyword: rept-stat-asp

Related Commands: ent-asp, rtrv-asp

Command Class: System Maintenance

Parameters

:aspname= (optional)

Application Server Process (ASP) name to report on.

Range: ayyyyyyyyyyyyyy

Up to 15 alphanumeric characters; the first character must be a letter.

Example

rept-stat-asp

Dependencies

If an ASP name is specified in the command, the specified name must exist in the ASP table.

Notes

This command can be canceled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

If the command is specified without a parameter, status for all ASPs is displayed.

This command displays the following states: ACTIVE, DOWN, UP.

Output

rept-stat-asp

```

    rlgncxa03w 05-07-04 12:57:21 EST EAGLE 30.0.0
      ASP      ASP ID      PST      SST
    asp1      0x00000001    IS-NR    ASP-ACTIVE
    asp2      undefined     OOS-MT    CONNECTING
    asp3      0x00000003    OOS-MT    ASP-INACTIVE
    asp4      undefined     OOS-MT    ASP-INACTIVE
    asp5      undefined     OOS-MT    ASP-DOWN
  Command Completed.
;

```

rept-stat-assoc

Report Status SCTP Association

Use this command to generate a report of the SCTP association's status.

Keyword: rept-stat-assoc

Related Commands: chg-assoc, ent-assoc, rtrv-assoc

Command Class: System Maintenance

Parameters

:aname= (optional)

Name of association to report on.

Range: *ayyyyyyyyyyyyyyyyy*

Up to 15 alphanumeric characters; the first character must be a letter

:lhost= (optional)

The Local Host name as defined in the IP Host table.

[illegible]

A string of characters up to 60 characters in length. The first character must be a letter.

Valid characters are **a-z**, **A-Z**, **0-9**, - (dash), and . (period).

:link= (optional)

The signaling link associated with this socket.

Synonym: port

Range: a, b, a1-a7, b1-b7

Not all card types support all **link** parameter values.

See Table A-1 for valid **link** parameter range values for each type of card that can have assigned signaling links ports.

:rhost= (optional)

Name of Remote Host as defined in the IP Host table.

[illegible]

A string of characters up to 60 characters in length. The first character must be a letter.

Valid characters are **a-z**, **A-Z**, **0-9**, - (dash), and . (period).

Example

rept-stat-assoc

```
rept-stat-assoc:aname= a23456789012345
```

Dependencies

If an association is specified in the command, the specified association must exist in the AS table.

Notes

This command can be canceled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

This command displays the primary states (PST) and the secondary state (SST).

Primary states are:

IS-NR—In-service normal

IS-ANR—In-service abnormal (congested)

OOS-MT—Out of service

OOS-MT-DSBLD—Out-of-service maintenance-disabled (provisioned to be out of service by closing, prohibiting, or deactivation)

Secondary states are:

ASP ACTIVE—(Not valid for M2PA associations)

ASP DOWN—(Not valid for M2PA associations)

ASP UP—(Not valid for M2PA associations)

Connecting

Established—Valid only for M2PA associations

Output

rept-stat-assoc

0	1	2	3	4	5	6	7
12345678901234567890123456789012345678901234567890123456789012345678							
		CARD	IPLNK				
ANAME	LOC	PORT	LINK	PST		SST	ASPID
a23456789012345	1105	A	A	IS-NR		ESTABLISHED	0
b23456789012345	1105	B	B	IS-NR		ESTABLISHED	1
c23456789012345	1107	A,B	A1	OOS-MT		CONNECTING	4294967295

Command Completed.

The following example displays the resulting output when the **aname** parameter is specified:

rept-stat-assoc:aname= a23456789012345

0	1	2	3	4	5	6	7
12345678901234567890123456789012345678901234567890123456789012345678							
		CARD	IPLNK				
ANAME	LOC	PORT	LINK	PST		SST	ASPID
a23456789012345	1105	A	A	IS-NR		ESTABLISHED	4294967295

ASNAME	ANAME	ASP-STATE
m3ua0001	a23456789012345	ASP-DOWN
m3ua0002	a23456789012345	ASP-DOWN
m3ua0003	a23456789012345	ASP-DOWN
m3ua0004	a23456789012345	ASP-DOWN
m3ua0005	a23456789012345	ASP-DOWN
m3ua0006	a23456789012345	ASP-DOWN
m3ua0007	a23456789012345	ASP-DOWN
m3ua0008	a23456789012345	ASP-DOWN
m3ua0009	a23456789012345	ASP-DOWN
m3ua0010	a23456789012345	ASP-DOWN
m3ua0011	a23456789012345	ASP-DOWN
m3ua0012	a23456789012345	ASP-DOWN
m3ua0013	a23456789012345	ASP-DOWN
m3ua0014	a23456789012345	ASP-DOWN
m3ua0015	a23456789012345	ASP-DOWN
m3ua0016	a23456789012345	ASP-DOWN
m3ua0017	a23456789012345	ASP-DOWN
m3ua0018	a23456789012345	ASP-DOWN
m3ua0019	a23456789012345	ASP-DOWN
m3ua0020	a23456789012345	ASP-DOWN
m3ua0021	a23456789012345	ASP-DOWN
m3ua0022	a23456789012345	ASP-DOWN
m3ua0023	a23456789012345	ASP-DOWN
m3ua0024	a23456789012345	ASP-DOWN
m3ua0025	a23456789012345	ASP-DOWN
m3ua0026	a23456789012345	ASP-DOWN
m3ua0027	a23456789012345	ASP-DOWN
m3ua0028	a23456789012345	ASP-DOWN
m3ua0029	a23456789012345	ASP-DOWN
m3ua0030	a23456789012345	ASP-DOWN
m3ua0031	a23456789012345	ASP-DOWN
m3ua0032	a23456789012345	ASP-DOWN
m3ua0033	a23456789012345	ASP-DOWN
m3ua0034	a23456789012345	ASP-DOWN
m3ua0035	a23456789012345	ASP-DOWN
m3ua0036	a23456789012345	ASP-DOWN
m3ua0037	a23456789012345	ASP-DOWN
m3ua0038	a23456789012345	ASP-DOWN
m3ua0039	a23456789012345	ASP-DOWN
m3ua0040	a23456789012345	ASP-DOWN
m3ua0041	a23456789012345	ASP-DOWN

m3ua0042	a23456789012345	ASP-DOWN
m3ua0043	a23456789012345	ASP-DOWN
m3ua0044	a23456789012345	ASP-DOWN
m3ua0045	a23456789012345	ASP-DOWN
m3ua0046	a23456789012345	ASP-DOWN
m3ua0047	a23456789012345	ASP-DOWN
m3ua0048	a23456789012345	ASP-DOWN
m3ua0049	a23456789012345	ASP-DOWN
m3ua0050	a23456789012345	ASP-DOWN

Command Completed.

rept-stat-card

Report Status Card

Use this command to display the card status and maintenance activity states. The output includes card location, the GPL version being used by the card, device type, device primary state, device secondary state, and device associated state.

Keyword: **rept-stat-card**

Related Commands: **dlt-card**, **ent-card**, **init-card**, **rmv-card**, **rst-card**, **rtrv-card**

Command Class: System Maintenance

Parameters

:appl= (optional)

Application. This parameter is used to report the status of cards running the specified application.

Range: xxxxyyyy

atmansi—The application is used by the LIM cards to support the ATM high-speed signaling link feature.

atmitu—The application is used by the E1 ATM cards to support the E1 ATM high-speed signaling link feature.

ccs7itu—This application is used by the LIM cards, the E1/T1 MIM card, and the HC-MIM card for ITU-TSS MTP functionality.

ebdablm—This application is used by the TSM card for enhanced bulk download.

ebdadcm—This application is used by the DCM card to transmit the LSMS LNP database to the EAGLE 5 ISS at high speed over an ethernet connection for enhanced bulk download.

eroute—This EAGLE Router application is used by the STC card for the EAGLE Support for application Sentinel feature.

gls—This application is used by the TSM cards for downloading gateway screening to LIM cards.

ipgwi—This application is used by the DCM card for CMIP/OSI measurement collection interface.

eroute —This EAGLE Router application is used by the STC card for the EAGLE 5 Integrated Monitoring Support TCP/IP point-to-point connectivity for ITU point codes. The system allows a maximum of 2 cards to be assigned the **ipgwi** application.

iplim —This application is used by the DCM card for TCP/IP point-to-point connectivity for ANSI point codes. The system allows a maximum of 41 cards to be assigned the **iplim** or **iplimi** application if a maximum of 700 links are assigned in the system. The system allows a maximum of 100 cards to be assigned the **iplim** or **iplimi** application if between 701 and 2000 links are assigned in the system.

iplimi —This application is used by the DCM card for TCP/IP point-to-point connectivity for ITU point codes. The system allows a maximum of 41 cards to be assigned the **iplimi** or **iplim** application if a maximum of 700 links are assigned in the

system. The system allows a maximum of 100 cards to be assigned the **iplim** or **iplimi** application if between 701 and 2000 links are assigned in the system.

ips—This application is used by the IPSM card for the IP User Interface feature.

mcp—This application is used by the MCPM card for the Measurements Platform application.

sccp—This application is used by the TSM cards for the global title translation application.

ss7ansi—This application is used by the LIM cards, the E1/T1 MIM card, and the HC-MIM card for the MTP functionality.

ss7gx25—This application is used by the LIM cards to support X.25 functionality.

ss7ipgw—The application software for TCP/IP point-to-multipoint connectivity. The system allows a maximum of 2 cards to be assigned the **ss7ipgw** application.

stplan—This application is used by the ACM card to support the STPLAN application.

vscpp—This application is used by the DSM card to support the G-Flex, G-Port, INP, and LNP ELAP Configuration features. If the G-Flex, G-Port, INP, or LNP ELAP Configuration feature is not turned on, and a DSM card is present, the VSCCP GPL processes normal GTT traffic.

vxwslan—This application is used by the DCM card to support the STPLAN application.

:links= (optional)

Filter specification. Report the maximum number of links, only equipped links, or only unequipped links on the card in the specified card location (**loc**).

Range: **all, equip, unequip**

all— Reports the maximum number of links available on the card in the specified **loc**

equip— Reports only links that are equipped

unequip— Reports only links that are unequipped

Default: **equip**

:loc= (optional)

Card address. The card location as stenciled on the shelf of the system.

Range: **1101-1117, 1201-1218, 1301-1318, 2101-2118, 2201-2218, 2301-2318, 3101-3118, 3201-3218, 3301-3318, 4101-4118, 4201-4218, 4301-4318, 5101-5118, 5201-5218, 5301-5318, 6101-6118**

Default: A status of all cards is displayed.

:mode= (optional)

Mode. The type of report to display (full or summary).

Range: **full**

Default: A summary report is displayed.

:stat= (optional)

Primary state filter. This parameter cannot be used with the **loc** or **mode** parameters. This filter allows printing of cards in a specified state (all in-service cards, for example).

Range: **all, alminh, anr, dsbld, mt, nr**

all— All of the primary states

alminh— Alarms inhibited

anr— In service abnormal (IS-ANR)

dsbld— Out of service maintenance disabled (OOS-MT-DSBLD)

mt— Out of service maintenance (OOS-MT)

nr— In service normal (IS-NR)

Default: **all**

Example

```
rept-stat-card
rept-stat-card:loc=1201
rept-stat-card:loc=1106:mode=full
rept-stat-card:loc=1201:mode=full
rept-stat-card:stat=alminh
rept-stat-card:loc=1109:mode=full
rept-stat-card:appl=ss7ansi
rept-stat-card:loc=1205:links=equip:mode=full
```

Dependencies

No other command can be in progress when this command is entered.

The **mode** parameter can be specified only when the **loc** parameter is specified.

Only one of the **loc** parameter, the **stat** parameter, and the **appl** parameter can be specified in the command.

The shelf and card must be equipped.

Notes

ATM, SS7 LIM, and X.25 cards show TVG results for SNM (signaling network management), SCCP, and SLAN traffic. SCCP cards show only SNM traffic statistics for TVG.

This command can be canceled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

The **mode=full** parameter gives more information than the summary report.

In the output, the SCCP service card field shows which TSM is providing the specified card with GTT service.

The group ticket voucher (TVG) status for low-speed signaling links, ATM high-speed signaling links, and TSMs is displayed when the **mode=full** and **loc** parameters are specified. The status displayed is for the previous 5 minutes and the previous 24 hours.

A plus (+) symbol in the output indicates that the flash GPL (**bphcap**, **bphcapt**, **bpmpl**, **bpmplt**, or the **bpdcm**) currently being run has not yet been activated on the card.

E1 alarms are displayed in the alarm status field. When the **mode=full** parameter is specified, separate fields display status information from the UAM for each E1 interface on the card. For each E1 interface, the display shows the highest priority E1 failure that exists on that E1 card. When no E1 errors exist, the clearing E1 UAM text is displayed. When an E1 interface is not assigned to the card, no output is generated for that E1 position.

T1 alarms are displayed in the alarm status field. When the **mode=full** parameter is specified, separate fields display status information from the UAM for each T1 interface on the card. For each T1 interface, the display shows the highest priority T1 failure that exists on that T1 card. When no T1 errors exist, the clearing T1 UAM text is displayed. When an T1 interface is not assigned to the card, no output is generated for that T1 position.

If the **links** parameter is set to **all**, 64 links are displayed.

If the **links=unequip** parameter is specified, but the card has not been intalled or loaded, 64 unequipped links are displayed.

If the **links=unequip** parameter is specified, and the card is or has been installed or loaded, the number of links displayed is equal to 64 minus the provisioned links.

If the **links=equip** parameter is specified, only provisioned links are displayed.

Output

The clock status fields are reported when the **mode=full** report is selected. The clock status report includes a CLOCK A, CLOCK B, and CLOCK I status. The High Speed clock status report (displayed for ATM, E1 and T1 cards) includes HS CLOCK A, HS CLOCK B, and HS CLOCK I. The valid values for each clock status are ----, **Idle**, **Active**, and **Fault**. The meanings of these values are:

---- (dashes)—Undefined, card must be OOS

Idle—Clock is available but is not being used by the card

Active—Clock is available and is being used by the card

Fault—Clock is unavailable

Idle and **Active** are shown when the CLK or HS CLK distribution to the card is good. The **Active** value does not denote that the card is actually using the clock source for link alignment. Use the **rt rv-slk**, **rtrv-e1**, and **rtrv-t1** commands to determine what clock source each card is using for link alignment.

rept-stat-card

```
rlghncxa03w 05-01-04 12:57:21 EST EAGLE5 33.0.0
CARD  VERSION      TYPE      APPL      PST          SST          AST
1101  125-020-000    TSM       GLS       IS-NR        Active       -----
1102  125-020-000    TSM       SCCP      IS-NR        Active       -----
1103  125-020-000    DSM       VSCCP     IS-NR        Active       -----
1105  125-020-000    DSM       VSCCP     IS-NR        Active       -----
1107  125-020-000    STC       EROUTE    IS-NR        Active       -----
1109  125-020-000    HMUX      BPHMUX    IS-NR        Active       -----
1110  125-020-000    HMUX      BPHMUX    IS-NR        Active       -----
1111  125-020-000    IPSM      IPS        IS-NR        Active       -----
1113  070-019-002    GPSM      EOAM       IS-NR        Standby      -----
1114  -----          TDM              IS-NR        Active       -----
1115  070-019-002    GPSM      EOAM       IS-NR        Active       -----
1116  -----          TDM              IS-NR        Active       -----
1117  -----          MDAL              IS-NR        Active       -----
1201  125-020-000    LIME1     SS7ANSI    IS-NR        Active       -----
1202  -----          LIMCH     SS7ANSI    OOS-MT-DSBLD Manual       -----
1203  125-020-000    LIMCH     SS7ANSI    IS-NR        Active       -----
1209  125-020-000    HMUX      BPHMUX    IS-NR        Active       -----
1210  125-020-000    HMUX      BPHMUX    IS-NR        Active       -----
1301  048-019-022    LIME1     SS7ANSI    IS-NR        Active       -----
1303  125-022-000    LIME1     SS7ANSI    IS-NR        Active       M BIP ERR
1305  125-022-000    LIME1     CCS7ITU    IS-NR        Active       M BIP ERR
1309  125-017-000    HIPR      HIPR       IS-NR        Active       -----
1310  125-017-000    HIPR      HIPR       IS-NR        Active       -----
1311  125-020-000    STC       EROUTE    IS-NR        Active       -----
Command Completed.
```

;

This example displays the card status for the GPSM-II of MASP A located in slot 1113, which is currently active.

rept-stat-card: loc=1113:mode=full

```
tekelecstp 06-05-29 12:15:95 EST EAGLE 35.0.0
CARD  VERSION      TYPE      GPL      PST          SST          AST
1113  126-004-000    GPSM      EOAM      IS-NR        Active       -----
ALARM STATUS      = No Alarms.
BPDCM GPL version = 126-004-000
IMT BUS A         = Conn
IMT BUS B         = Conn
CLOCK A           = Active
CLOCK B           = Idle
CLOCK I           = Idle
MBD BIP STATUS    = Valid
```

```

MOTHER BOARD ID   = GPSM2
DBD STATUS         = Valid
DBD TYPE           = MEM
DBD MEMORY SIZE    = 1024M
HW VERIFICATION CODE = ----
TROUBLE TEXT VER.  = Rev 1.6
Command Completed.

```

;

rept-stat-card:loc=1201

```

rlghncxa03w 05-07-04 15:10:19 EST EAGLE 30.0.0
CARD  VERSION   TYPE   APPL   PST           SST           AST
1201  101-006-000 LIMDS0  SS7ANSI  IS-NR         Active        -----
ALARM STATUS      = No Alarms.
IMT  VERSION      = 101-006-000
PROM  VERSION     = 023-002-000
IMT BUS A         = Conn
IMT BUS B         = Conn
SLK A  PST        = 00S-MT           LS=ls1201      CLLI=-----
SLK B  PST        = 00S-MT           LS=ls1201      CLLI=-----
PORT A Connection = CONN
PORT B Connection = CONN
Command Completed

```

;

rept-stat-card:stat=alminh

```

rlghncxa03w 04-02-04 12:57:21 EST EAGLE 31.6.0
CARD  VERSION   TYPE   APPL   PST           SST           AST
1211  023-001-000 LIMATM ATMANSI  IS-NR         Active        ALMINH
1212  023-001-000 TSM     SCCP     IS-NR         Active        ALMINH
Command Completed.

```

;

The following example shows the high-speed clock status that is displayed for ATMANSI cards.

rept-stat-card:loc=1106:mode=full

```

tekelecstp 06-05-21 11:55:03 EST EAGLE 35.0.0
CARD  VERSION   TYPE   GPL   PST           SST           AST
1106  126-004-000 LIMATM  ATMANSI  IS-NR         Active        -----
ALARM STATUS      = No Alarms.
BPHCAP  GPL version = 125-031-022
IMT BUS A         = Conn
IMT BUS B         = Conn
CLOCK A           = Active
CLOCK B           = Idle
CLOCK I           = Idle
HS CLOCK A        = Active
HS CLOCK B        = Fault
HS CLOCK I        = Idle
MBD BIP STATUS    = Valid
MOTHER BOARD ID   = HCAP
DBD STATUS        = Valid
DBD TYPE          = None
DBD MEMORY SIZE    = 0M
HW VERIFICATION CODE = ----
SIGNALING LINK STATUS
SLK  PST          LS          CLLI
TVG STATUS
SNM   TVG RESULT  = 24 hr: -----, 5 min: -----
SLAN  TVG RESULT  = 24 hr: -----, 5 min: -----
SCCP  TVG RESULT  = 24 hr: -----, 5 min: -----
INM   TVG RESULT  = 24 hr: -----, 5 min: -----
Command Completed.

```

;

The following example shows the socket status, which appears in output for all card types only when the EAGLE 5 Integrated Monitoring Support feature is turned on.

rept-stat-card:loc=1101

```
rlghncxa03w 02-02-04 12:57:21 EST EAGLE 30.0.0
CARD  VERSION      TYPE      APPL      PST      SST      AST
1101  114-003-000  LIMATM  ATMANSI  IS-NR    Active  -----
ALARM STATUS      = No Alarms
BPHCAP GPL version = 002-109-010
IMT BUS A         = Conn
IMT BUS B         = Conn
SLK A  PST        = IS-NR          LS=lsa1101  CLLI=-----
SOCKET A = INACTIVE
Command Completed.
```

;

The following example shows the level of completion (as a percentage in the AST column) for a card that is performing a warm restart and is currently data loading. The percentage indicates the percentage of tables that have been downloaded for GPLs that support a persistent LNP database (**sccp**, **ebdablm**).

rept-stat-card:loc=1101

```
rlghncxa03w 04-02-18 16:46:07 EDT EAGLE 31.6.0
CARD  VERSION      TYPE      APPL      PST      SST      AST
1101  -----  TSM      SCCP      IS-ANR    Standby  96%
ALARM STATUS      = No Alarms.
IMT  VERSION      = 026-013-000
PROM  VERSION      = 022-005-000
IMT BUS A         = Conn
IMT BUS B         = Conn
SCCP % OCCUP      = 0%
Command Completed.
```

;

The following example shows the output for a multi-port LIM (location 1203) card. The GPL column, which displays the GPL running on the card, enables you to differentiate between the two-port LIMDS0 and the multi-port LIM. A multi-port LIM always displays SS7ML in the GPL column. When the parameter **mode=full**, the mother board ID is displayed. The MIM type is displayed for multi-port LIM cards, while the PROM type is displayed for dual-port cards.

rept-stat-card:loc=1203:mode=full

```
tekelecstp 06-05-21 11:19:03 EST EAGLE 35.0.0
CARD  VERSION      TYPE      APPL      PST      SST      AST
1203  125-053-068  LIMT1   SS7ML    IS-NR    Active  -----
ALARM STATUS      = * 0022 Clock B for card failed
BPMLPT GPL version = 125-047-000
IMT BUS A         = Conn
IMT BUS B         = Conn
CLOCK A           = Active
CLOCK B           = Fault
CLOCK I           = Idle
HS CLOCK A        = Fault
HS CLOCK B        = Fault
HS CLOCK I        = Idle
MBD BIP STATUS    = VALID
MOTHER BOARD ID   = MIM
DBD STATUS        = Valid
DBD TYPE          = None
DBD MEMORY SIZE   = 0M
HW VERIFICATION CODE = ----
SIGNALING LINK STATUS
SLK  PST          LS          CLLI
A    OOS-MT       ls1203a0  tk1cb1203a0
B    OOS-MT       ls1203a0  tk1cb1203a0
A1   OOS-MT       ls1203a1  tk1cb1203a1
B1   OOS-MT       ls1203a1  tk1cb1203a1
```

```

A2      OOS-MT          ls1203a2      tklcb1203a2
B2      OOS-MT          ls1203a2      tklcb1203a2
A3      OOS-MT          ls1203a3      tklcb1203a3
B3      OOS-MT          ls1203a3      tklcb1203a3
TVG STATUS
SNM     TVG RESULT     = 24 hr: -----, 5 min: -----
SLAN    TVG RESULT     = 24 hr: -----, 5 min: -----
SCCP    TVG RESULT     = 24 hr: -----, 5 min: -----
INM     TVG RESULT     = 24 hr: -----, 5 min: -----
Command Completed.

```

;

The following example includes output for an E1 card and a Channel card (card types **lime1** and **limch**).

rept-stat-card

```

rlghncxa03w 05-07-04 15:10:19 EST EAGLE 31.6.0
CARD VERSION      TYPE  APPL    PST      SST      AST
1113 104-002-000  GPST  EOAM     IS-NR     Active    -----
1114 -----      TDM   -----  IS-NR     Active    -----
1115 -----      GPST  EOAM     OOS-MT    Isolated  -----
1116 -----      TDM   -----  OOT-MT    Isolated  -----
1201 104-002-000  LIMV35 CCS7ITU  IS-NR     Active    -----
1202 104-001-000  LIME1  CCS7ITU  IS-NR     Active    -----
1203 104-001-000  LIMCH  CCS7ITU  IS-NR     Active    -----
1212 104-001-000  TSM    SCCP     IS-NR     Active    -----
Command Completed.

```

;

The following example shows output for an E1 Channel card (card type **limch**).

rept-stat-card: loc-1203:mode=full

```

rlghncxa03w 05-07-04 15:10:19 EST EAGLE 30.0.0
CARD VERSION      TYPE  APPL    PST      SST      AST
1203 104-001-000  LIMCH  CCS7ITU  IS-NR     Active    -----
ALARM STATUS      = * 0022 Clock B for card failed
IMT VERSION        = 104-001-000
PROM VERSION       = 023-001-000
IMT BUS A          = Conn
IMT BUS B          = Conn
CLOCK A            = Active
CLOCK B            = Fault
CLOCK I            = Idle
MBD BIP STATUS     = valid
DB STATUS          = valid
DBD MEMORY SIZE    = 0M
SLK A PST          = IS-NR          LS=lsnsspn2  CLLI=-----
SLK B PST          = IS-NR          LS=lsnstpi  CLLI=-----
SNM TVG RESULT     = 24 hr: -----, 5 min: -----
Command Completed.

```

;

The following example shows output for a specific E1 card card type **lime1**).

rept-stat-card: loc=1203:mode=full

```

rlghncxa03w 05-07-04 15:10:19 EST EAGLE 30.0.0
CARD VERSION      TYPE  APPL    PST      SST      AST
1203 025-001-000  LIME1  CCS7ITU  IS-NR     Active    -----
ALARM STATUS      = REPT-E1F:FAC-E1 Port 2 AIS detected
IMT VERSION        = 025-001-000
PROM VERSION       = 023-001-000
IMT BUS A          = Conn
IMT BUS B          = Conn
CLOCK A            = Active
CLOCK B            = Fault
CLOCK I            = Idle
MBD BIP STATUS     = valid
DB STATUS          = valid

```



```

DBD MEMORY SIZE      = 0M
SLK A   PST          = IS-NR          LS=lsnsspn2   CLLI=-----
SLK B   PST          = IS-NR          LS=lsnstpi    CLLI=-----
SNM   TVG RESULT     = 24 hr: -----, 5 min: -----
E1 PORT #1           = RCVRY-E1F: E1 Port 1 available
E1 PORT #2           = REPT-E1F:FAC-E1 Port 2 AIS detected
Command Completed.

```

The following example includes HC-MIM cards (TYPE is LIME1, APPL is the SS7ANSI) and HIPR cards.

rept-stat-card

```

rlghncxa03w 05-02-04 15:10:19 EST EAGLE5 33.0.0
CARD  VERSION  TYPE    APPL    PST      SST      AST
1109  125-016-000 HMUX    BPHMUX  IS-NR    Active   -----
1110  125-016-000 HMUX    BPHMUX  IS-NR    Active   -----
1113  125-020-000 GPSM    EOAM     IS-NR    Standby  -----
1114  -----    TDM      IS-NR    Active   -----
1115  125-020-000 GPSM    EOAM     IS-NR    Active   -----
1116  -----    TDM      IS-NR    Active   -----
1117  -----    MDAL     IS-NR    Active   -----
1209  125-016-000 HMUX    BPHMUX  IS-NR    Active   -----
1210  125-016-000 HMUX    BPHMUX  IS-NR    Active   -----
1301  125-020-000 LIME1   SS7ANSI  IS-NR    Active   -----
1303  125-020-000 LIME1   CCS7ITU  IS-NR    Active   -----
1305  125-020-000 LIME1   SS7ANSI  IS-NR    Active   -----
1307  125-020-000 LIME1   CCS7ITU  IS-NR    Active   -----
1309  125-016-000 HIPR    HIPR     IS-NR    Active   -----
1310  023-018-006 HIPR    HIPR     IS-NR    Active   -----

```

The following example shows output for a specific HC-MIM card (TYPE is LIME1, APPL is SS7ANSI).

rept-stat-card:loc=1301

```

rlghncxa03w 05-02-04 15:10:19 EST EAGLE5 33.0.0
CARD  VERSION  TYPE    APPL    PST      SST      AST
1301  125-020-000 LIME1   SS7ANSI  IS-NR    Active   -----
ALARM STATUS      = No Alarms.
IMTPCI  GPL version = 125-020-000
BLCPLD  GPL version = 125-020-000
BLDIAG  GPL version = 125-020-000
BLBIOS  GPL version = 125-020-000
BLVXW   GPL version = 125-020-000
PLDE1T1 GPL version = 125-020-000
PLDPMC1 GPL version = 125-020-000
IMT BUS A      = Conn
IMT BUS B      = Conn
SIGNALING LINK STATUS
SLK   PST      LS      CLLI
A     IS-NR    lsa1301  -----
B     IS-NR    lsa1301  -----
Command Completed.

```

The following example shows all cards that are running the CCS7ITU application.

rept-stat-card:appl=ccs7itu

```

rlghncxa03w 05-02-04 15:10:19 EST EAGLE5 33.0.0
CARD  VERSION  TYPE    APPL    PST      SST      AST
1201  118-020-000 LIM0CU  CCS7ITU  IS-NR    Active   -----
1202  118-020-000 LIMDS0  CCS7ITU  IS-NR    Active   M BIP ERR
1205  118-020-000 LIME1   CCS7ITU  IS-NR    Active   M BIP ERR
Command Completed.

```

The following example lists all possible links on an HC MIM card. Only link A is equipped.

rept-stat-card: loc=1205: links=all

```
rlghncxa03w 05-02-04 15:10:19 EST EAGLE5 33.0.0
CARD  VERSION      TYPE      APPL      PST      SST      AST
1205  060-002-004  LIME1    SS7ANSI   IS-NR     Active   -----
ALARM STATUS      = No Alarms.
BPMLT  GPL version = 002-103-004
IMT BUS A          = Conn
IMT BUS B          = Conn
SIGNALING LINK STATUS
  SLK  PST          LS          CLLI          E5IS
  A    OOS-MT       ls111         -----    INACTIVE
  B    OOS-MA       -----    -----    INACTIVE
  A1   OOS-MA       -----    -----    INACTIVE
  B1   OOS-MA       -----    -----    INACTIVE
  A2   OOS-MA       -----    -----    INACTIVE
  B2   OOS-MA       -----    -----    INACTIVE
  A3   OOS-MA       -----    -----    INACTIVE
  B3   OOS-MA       -----    -----    INACTIVE
```

Command Completed.

;

The following example lists all equipped links on the specified HC MIM card.

rept-stat-card: loc-=1205: links=equip

```
rlghncxa03w 05-02-04 15:10:19 EST EAGLE5 33.0.0
CARD  VERSION      TYPE      APPL      PST      SST      AST
1205  060-002-004  LIME1    SS7ML     IS-NR     Active   -----
ALARM STATUS      = No Alarms.
BPMLT  GPL version = 002-103-004
IMT BUS A          = Conn
IMT BUS B          = Conn
SIGNALING LINK STATUS
  SLK  PST          LS          CLLI          E5IS
  A    OOS-MT       ls111         -----    INACTIVE
```

Command Completed.

;

The following example shows only the unequipped links on the specified HC MIM card.

rept-stat-card: loc=1205: links=unequip

```
rlghncxa03w 05-02-04 15:10:19 EST EAGLE5 33.0.0
CARD  VERSION      TYPE      APPL      PST      SST      AST
1205  060-002-004  LIME1    SS7ANSI   IS-NR     Active   -----
ALARM STATUS      = No Alarms.
BPMLT  GPL version = 002-103-004
IMT BUS A          = Conn
IMT BUS B          = Conn
SIGNALING LINK STATUS
  SLK  PST          LS          CLLI          E5IS
  B    OOS-MA       -----    -----    INACTIVE
  A1   OOS-MA       -----    -----    INACTIVE
  B1   OOS-MA       -----    -----    INACTIVE
  A2   OOS-MA       -----    -----    INACTIVE
  B2   OOS-MA       -----    -----    INACTIVE
  A3   OOS-MA       -----    -----    INACTIVE
  B3   OOS-MA       -----    -----    INACTIVE
```

Command Completed.

;

The following example shows details (**mode=full**) for the specified HC MIM card.

rept-stat-card: loc=1205: mode=full

```
rlghncxa03w 06-06-01 16:46:07 EST EAGLE 35.0.0
CARD  VERSION      TYPE      GPL      PST      SST      AST
1205  126-004-000  LIME1    SS7HC    IS-NR     Active   -----
ALARM STATUS      = No Alarms.
```

```

IMTPCI  GPL version = 126-002-000
BLVXW   GPL version = 075-000-005
BLDIAG  GPL version = 125-039-000
BLBIOS  GPL version = 125-039-000
BLCPLD  GPL version = 125-039-000
PLDPMC1 GPL version = 125-039-000
PLDE1T1 GPL version = 125-039-000
IMT BUS A      = Conn
IMT BUS B      = Conn
CLOCK A       = Active
CLOCK B       = Idle
CLOCK I       = Idle
HS CLOCK A    = Active
HS CLOCK B    = Idle
HS CLOCK I    = Idle
MBD BIP STATUS = Valid
MOTHER BOARD ID = HC BLADE
DBD STATUS    = Valid
DBD TYPE      = E1T1
DBD MEMORY SIZE = 512M
HW VERIFICATION CODE = ----
CURRENT TEMPERATURE = 42C (108F)      [ALARM TEMP: 75C (167F)]
PEAK TEMPERATURE:   = 43C (110F)      [06-02-24 08:21]
SIGNALING LINK STATUS
      SLK   PST           LS           CLLI
      B31   OOS-MT-DSBLD   lsa0         -----
TVG STATUS
SNM      TVG RESULT = 24 hr: G-----, 5 min: -----
SLAN     TVG RESULT = 24 hr: -----, 5 min: -----
SCCP     TVG RESULT = 24 hr: -----, 5 min: -----
INM      TVG RESULT = 24 hr: G-----, 5 min: -----

```

Command Completed.

;

The following example shows details (**mode=full**) and all possible links on the specified HC MIM card. Only link A is equipped.

rept-stat-card:loc=1205:mode=full:links=all

```

rlghncxa03w 05-02-04 15:10:19 EST EAGLE5 33.0.0
CARD  VERSION      TYPE      APPL      PST      SST      AST
1205  060-002-004  LIME1    SS7ANSI  IS-NR    Active    -----
ALARM STATUS      = No Alarms.
BPMLT  GPL version = 002-103-004
IMT BUS A      = Conn
IMT BUS B      = Conn
CLOCK A       = Idle
CLOCK B       = Active
CLOCK I       = Idle
HS CLOCK A    = Fault
HS CLOCK B    = Fault
HS CLOCK I    = Idle
MBD BIP STATUS = valid
DB STATUS     = valid
DBD MEMORY SIZE = 0M
HW VERIFICATION CODE = ----
SIGNALING LINK STATUS
      SLK   PST           LS           CLLI           E5IS
      A     OOS-MT       ls111         -----      INACTIVE
      B     OOS-MA         -----      INACTIVE
      A1    OOS-MA         -----      INACTIVE
      B1    OOS-MA         -----      INACTIVE
      A2    OOS-MA         -----      INACTIVE
      B2    OOS-MA         -----      INACTIVE
      A3    OOS-MA         -----      INACTIVE
      B3    OOS-MA         -----      INACTIVE

```

```

TVG STATUS
SNM     TVG RESULT  = 24 hr: -----, 5 min: -----
SLAN    TVG RESULT  = 24 hr: -----, 5 min: -----
SCCP    TVG RESULT  = 24 hr: -----, 5 min: -----
EROUTE  TVG RESULT  = 24 hr: -----, 5 min: -----
INM     TVG RESULT  = 24 hr: -----, 5 min: -----
Command Completed.

```

;

The following example shows details (**mode=full**) for the specified HMUX card.

rept-stat-card:loc=1109:mode=full

```

rlghncxa03w 05-07-04 15:10:19 EST EAGLE 30.0.0
CARD  VERSION  TYPE    APPL    PST      SST      AST
1109  239-009-010 HMUX    BPHMUX  IS-NR     Active    -----
ALARM STATUS      = No Alarms
TRIAL  VERSION    = 101-009-000
FPGA  VERSION    = 022-005
TROUBLE TEXT VER. = Rev 101.2
Command Completed.

```

;

The following example includes output for E1/T1 MIM cards used as E1, T1, and Channel cards (card types **lime1**, **limt1**, and **limch**).

rept-stat-card:loc=1204:mode=full

```

rlghncxa03w 05-07-04 15:10:19 EST EAGLE 30.0.0
CARD  VERSION  TYPE    APPL    PST      SST      AST
1204  025-001-000 LIME1    SS7ANSI  IS-NR     Active    -----
ALARM STATUS      = REPT-E1F:FAC-E1 Port 2 AIS detected
IMT  VERSION      = 025-001-000
PROM VERSION      = 023-001-000
IMT  BUS A        = Conn
IMT  BUS B        = Conn
CLOCK A           = Active
CLOCK B           = Fault
CLOCK I           = Idle
HS  CLOCK A       = Active
HS  CLOCK B       = Idle
HS  CLOCK I       = Idle
MBD  BIP STATUS   = valid
DB  STATUS        = valid
DBD  MEMORY SIZE  = 0M
SLK  A  PST       = IS-NR          LS=lsne1ln1  CLLI=-----
SLK  A1 PST       = IS-NR          LS=lsne1ln2  CLLI=-----
SLK  A2 PST       = IS-NR          LS=lsne1ln3  CLLI=-----
SLK  A3 PST       = IS-NR          LS=lsne1ln4  CLLI=-----
SLK  B  PST       = IS-NR          LS=lsne1ln5  CLLI=-----
SLK  B1 PST       = IS-NR          LS=lsne1ln6  CLLI=-----
SLK  B2 PST       = IS-NR          LS=lsne1ln7  CLLI=-----
SLK  B3 PST       = IS-NR          LS=lsne1ln8  CLLI=-----
SNM   TVG RESULT  = 24 hr: -----, 5 min: -----
E1  PORT #1       = RCVRY-E1F: E1 Port 1 available
E1  PORT #2       = REPT-E1F:FAC-E1 Port 2 AIS detected
Command Completed.

```

;

The following example includes details (**mode=full**) for the specified E1/T1 MIM card used as E1 card (card type **lime1**).

retp-stat-card:loc=1204:mode=full

```

rept-stat-card:loc=1204:mode=full
rlghncxa03w 05-07-04 15:10:19 EST EAGLE 30.0.0
CARD  VERSION  TYPE    APPL    PST      SST      AST
1204  025-001-000 LIME1    SS7ANSI  IS-NR     Active    -----
ALARM STATUS      = REPT-E1F:FAC-E1 Port 2 AIS detected
IMT  VERSION      = 025-001-000
PROM VERSION      = 023-001-000

```

```

IMT BUS A      = Conn
IMT BUS B      = Conn
CLOCK A        = Active
CLOCK B        = Fault
CLOCK I        = Idle
HS CLOCK A     = Active
HS CLOCK B     = Idle
HS CLOCK I     = Idle
MBD BIP STATUS = valid
DB STATUS      = valid
DBD MEMORY SIZE = 0M
SLK A  PST     = IS-NR      LS=lsne1ln1  CLLI=-----
SLK A1 PST     = IS-NR      LS=lsne1ln2  CLLI=-----
SLK A2 PST     = IS-NR      LS=lsne1ln3  CLLI=-----
SLK A3 PST     = IS-NR      LS=lsne1ln4  CLLI=-----
SLK B  PST     = IS-NR      LS=lsne1ln5  CLLI=-----
SLK B1 PST     = IS-NR      LS=lsne1ln6  CLLI=-----
SLK B2 PST     = IS-NR      LS=lsne1ln7  CLLI=-----
SLK B3 PST     = IS-NR      LS=lsne1ln8  CLLI=-----
SNM TVG RESULT = 24 hr: -----, 5 min: -----
E1 PORT #1     = RCVRY-E1F: E1 Port 1 available
E1 PORT #2     = REPT-E1F:FAC-E1 Port 2 AIS detected
Command Completed

```

;

The following example shows details (**mode=full**) for the specified E1/T1 MIM card used as a T1 card.

rept-stat-card: loc=1202:mode=full

```

rlghncxa03w 05-07-04 15:10:19 EST EAGLE 30.0.0
CARD VERSION      TYPE  APPL  PST      SST      AST
1202 025-001-000 LIMT1 CCS7ITU IS-NR      Active    -----
ALARM STATUS      = REPT-T1F:FAC-T1 Port 2 AIS detected
IMT VERSION       = 025-001-000
PROM VERSION      = 023-001-000
IMT BUS A         = Conn
IMT BUS B         = Conn
CLOCK A           = Active
CLOCK B           = Fault
CLOCK I           = Idle
HS CLOCK A        = Active
HS CLOCK B        = Idle
HS CLOCK I        = Idle
MBD BIP STATUS    = valid
DB STATUS         = valid
DBD MEMORY SIZE   = 0M
SLK A  PST        = IS-NR      LS=lsnsspn2  CLLI=-----
SLK A1 PST        = IS-NR      LS=lsnt1ln1  CLLI=-----
SLK B  PST        = IS-NR      LS=lsnstpi   CLLI=-----
SLK B3 PST        = IS-NR      LS=lsnstpi   CLLI=-----
SNM TVG RESULT    = 24 hr: -----, 5 min: -----
T1 PORT #1        = RCVRY-T1F: T1 Port 1 available
T1 PORT #2        = REPT-T1F:FAC-T1 Port 2 AIS detected
Command Completed

```

;

The following example shows details for the specified E1/T1 card used as a channel card.

rept-stat-card: loc=1203:mode=full

```

rlghncxa03w 05-07-04 15:10:19 EST EAGLE 30.0.0
CARD VERSION      TYPE  APPL  PST      SST      AST
1203 025-001-000 LIMCH CCS7ITU IS-NR      Active    -----
ALARM STATUS      = No Alarms.
IMT VERSION       = 025-001-000
PROM VERSION      = 023-001-000
IMT BUS A         = Conn

```

```

IMT BUS B      = Conn
CLOCK A        = Active
CLOCK B        = Fault
CLOCK I        = Idle
MBD BIP STATUS = valid
DB STATUS      = valid
DBD MEMORY SIZE = 0M
SLK A  PST     = IS-NR      LS=lsnsspn2  CLLI=-----
SLK A1 PST     = IS-NR      LS=lsnt1ln1  CLLI=-----
SLK B  PST     = IS-NR      LS=lsnstpi   CLLI=-----
SLK B3 PST     = IS-NR      LS=lsnstpi   CLLI=-----
SNM TVG RESULT = 24 hr: -----, 5 min: -----
Command Completed

```

;

The following example shows output for the specified STC card used by the EAGLE 5 Integrated Monitoring Support feature.

rept-stat-card:loc=1107

```

rlghncxa03w 04-02-04 15:10:19 EST EAGLE 31.3.0
CARD  VERSION  TYPE    APPL    PST      SST      AST
1107  100-015-000 STC      EROUTE  IS-NR      Active    -----
ALARM STATUS      = No Alarms.
BPDCM GPL version = 002-108-000
IMT BUS A         = Conn
IMT BUS B         = Conn
CARDS DENIED EROUTE SERVICE: 1104
EROUTE % OCCUP    = 0%
NTP broadcast     = valid
Command Completed.

```

;

The following example shows details (**mode=full**) for the specified STC card used by the EAGLE 5 Integrated Monitoring Support feature.

rept-stat-card:loc=1107:mode=full

```

rlghncxa03w 04-02-04 15:10:19 EST EAGLE 31.3.0
CARD  VERSION  TYPE    APPL    PST      SST      AST
1107  100-015-000 STC      EROUTE  IS-NR      Active    -----
ALARM STATUS      = No Alarms.
BPDCM GPL version = 002-108-000
IMT BUS A         = Conn
IMT BUS B         = Conn
CLOCK A           = Active
CLOCK B           = Idle
CLOCK I           = Idle
MBD BIP STATUS    = valid
DB STATUS         = valid
DBD MEMORY SIZE   = 0M
EROUTE % OCCUP    = 0%
SOCKET A = INACTIVE
Command Completed.

```

;

The following example shows output for the specified MCPM card used by the Measurements Platform feature.

rept-stat-card:loc=1105

```

rlghncxa03w 04-02-04 15:10:19 EST EAGLE 31.3.0
CARD  VERSION  TYPE    APPL    PST      SST      AST
1105  111-001-000 MCPM     MCP      IS-NR      Idle      -----
ALARM STATUS      = ** 0084 MCP A IP CONNECTION UNAVAILABLE
IMT VERSION       = 104-001-000
PROM VERSION      = 023-000-000
IMT BUS A         = Conn
IMT BUS B         = Conn
MCP IP CONNECTION          OOS-MT      Unavail

```

Command Completed.

;

The following example shows details (**mode=full**) for the specified MPCM card that is running the MCP application for the Measurements Platform feature.

rept-stat-card: loc=1105:mode=full

```
rlghncxa03w 04-02-04 15:10:19 EST EAGLE 31.3.0
CARD VERSION      TYPE      APPL      PST      SST      AST
1105 111-001-000  MCPM      MCP      IS-NR      Active    -----
  ALARM STATUS      = No Alarms
  IMT VERSION        = 104-001-000
  PROM VERSION       = 023-001-000
  IMT BUS A          = Conn
  IMT BUS B          = Conn
  CLOCK A            = Active
  CLOCK B            = Fault
  CLOCK I            = Idle
  MBD BIP STATUS     = valid
  DB STATUS          = valid
  DBD MEMORY SIZE    = 2048M
  MCP IP CONNECTION      IS-NR      Available
Command Completed.
```

;

The following example shows output for the GPSM-II card that is running the EOAM application in card location 1113.

rept-stat-card: loc=1113:mode=full

```
rlghncxa03w 02-02-04 15:10:19 EST EAGLE 30.0.0
CARD VERSION      TYPE      APPL      PST      SST      AST
1113 111-017-000  GPSM      EOAM      IS-NR      Active    -----
  ALARM STATUS      = No Alarms.
  IMT VERSION        = 111-001-000
  PROM VERSION       = 111-001-000
  IMT BUS A          = Conn
  IMT BUS B          = Conn
  CLOCK A            = Active
  CLOCK B            = Idle
  CLOCK I            = Idle
  MBD BIP STATUS     = valid
  DB STATUS          = valid
  DBD MEMORY SIZE    = 256M
  TROUBLE TEXT VER.  = Rev 1.6
Command Completed.
```

;

The following example shows output for a card that is running the IPLIM application.

rept-stat-card: loc=1213

```
rlghncxa03w 05-07-04 15:10:19 EST EAGLE 30.0.0
CARD VERSION      TYPE      APPL      PST      SST      AST
1213 001-002-000  DCM      IPLIM      IS-NR      Active    -----
  ALARM STATUS      = No Alarms.
  BPDCM GPL         = 001-001-000+
  IMT BUS A          = Conn
  IMT BUS B          = Conn
  SLK A PST          = IS-NR      LS=lsnsspn2  CLLI=-----
  SNM TVG RESULT     = 24 hr: -----, 5 min: -----
Command Completed.
```

;

The following example includes a card that is running the IPGWI application.

rept-stat-card

```
rlghncxa03w 05-07-04 15:10:19 EST EAGLE 30.0.0
CARD VERSION      TYPE      APPL      PST      SST      AST
1109 023-102-000  HMUX      BPHMUX      IS-NR      Active    -----
1110 023-102-000  HMUX      BPHMUX      IS-NR      Active    -----
1113 003-001-000  GPSM      EOAM      IS-NR      Active    -----
```

```

1114 ----- TDM ----- IS-NR Active -----
1115 ----- GSM EOAM OOS-MT Isolated -----
1116 ----- TDM ----- OOT-MT Isolated -----
1117 ----- MDAL ----- IS-NR Active -----
1201 003-001-000 LIM0CU CCS7ITU IS-NR Active -----
1202 003-001-000 LIMDS0 CCS7ITU IS-NR Active M BIP ERR
1203 003-001-000 LIMDS0 SS7ANSI IS-NR Active -----
1205 003-001-000 LIMDS0 CCS7ITU IS-NR Active M BIP ERR
1207 003-001-000 LIMATM ATMANSI IS-NR Active -----
1209 023-102-000 HMUX BPHMUX IS-NR Active -----
1210 023-102-000 HMUX BPHMUX IS-NR Active -----
1211 003-001-000 LIMATM ATMANSI IS-NR Active ALMINH
1212 003-001-000 TSM SCCP IS-NR Active ALMINH
1213 003-001-000 DCM IPLIM IS-NR Active -----
1215 003-001-000 DCM SS7IPGW IS-NR Active -----
1217 003-001-000 DCM IPLIMI IS-NR Active -----
1301 003-001-000 DCM IPGWI IS-NR Active -----
1309 023-102-000 HMUX BPHMUX IS-NR Active -----
1310 023-102-000 HMUX BPHMUX IS-NR Active -----
Command Completed.

```

;

The following example shows details (**mode=full**) for a card that is running the IPGWI application.

rept-stat-card:loc=1301:mode=full

```

rept-stat-card:loc=1301:mode=full
rlghncxa03w 05-07-04 15:10:19 EST EAGLE 30.0.0
CARD VERSION TYPE APPL PST SST AST
1301 003-001-000 DCM IPGWI IS-NR Active -----
ALARM STATUS = No Alarms.
BPDCM GPL = 003-001-000
IMT BUS A = Conn
IMT BUS B = Conn
CLOCK A = Active
CLOCK B = Idle
CLOCK I = idle
MBD BIP STATUS = valid
DB STATUS = valid
DBD MEMORY SIZE = 0M
SLK A PST = IS-NR LS=lsnsspn2 CLI=-----
SCCP TVG RESULT = 24 hr: GDNHSI, 5 min: GDNHSI
SLAN TVG RESULT = 24 hr: -D-H-I, 5 min: -D-H-I
SNM TVG RESULT = 24 hr: GDNHSI, 5 min: -----
Command Completed.

```

;

The following example shows output for an E1 ATM card running the ATMITU application.

rept-stat-card:loc=1201

```

tekelecstp 01-03-25 10:02:42 EST EAGLE 30.0.0
CARD VERSION TYPE APPL PST SST AST
1201 114-002-000 LIME1ATM ATMITU IS-NR Active -----
ALARM STATUS = No Alarms.
IMT BUS A = Conn
IMT BUS B = Conn
Slk A PST = IS-NR LS=lsnsspn2 CLI=-----
Command Completed.

```

;

The following example shows output for an E1 ATM card running the ATMITU application. The EAGLE 5 Integrated Monitoring Support application is on in the system.

rept-stat-card:loc=1201

```

tekelecstp 01-03-25 10:02:42 EST EAGLE 30.0.0
CARD VERSION TYPE APPL PST SST AST
1201 114-003-000 LIME1ATM ATMITU IS-NR Active -----
ALARM STATUS = No Alarms.
IMT BUS A = Conn
IMT BUS B = Conn

```



```

Slk A PST          = IS-NR          LS-lsnssp2
CLLI=-----
  SENTINEL SOCKET A = INACTIVE
  Command Completed.
;

```

The following example shows output for an IPSM card running the IPS application.

rept-stat-card:loc=1105

```

tekelecstp 04-02-25 10:02:42 EST EAGLE 31.3.0
CARD  VERSION      TYPE      APPL      PST          SST          AST
1105  028-013-026  IPSM      IPS      IS-NR        Active       -----
  ALARM STATUS      = No Alarms.
  BPDCM  GPL version = 002-123-012
  IMT BUS A          = Conn
  IMT BUS B          = Conn
  Command Completed.
;

```

The following example shows a Hardware Verification Code for an auto-inhibited card. The HW VERIFICATION CODE field is shown only in the **mode=full** report. "-----" is shown in the HW VERIFICATION CODE field for cards with valid hardware detected. A numerical value is shown when invalid hardware is detected, and all such cards will be auto-inhibited. The numerical values are listed in Table 5-62. The MDAL and HMUX cards do not display the field in **mode=full** reports on their locations.

rept-stat-card:loc=1108:mode=full

```

tekelecstp 02-09-30 09:41:08 EST EAGLE 30.0.0
CARD  VERSION      TYPE      APPL      PST          SST          AST
1108  118-021-000  DSM      VSCCP     OOS-MT-DSBLD MEA       -----
  ALARM STATUS      = ** 441 Incorrect Motherboard - CPU
  IMT  VERSION      = 118-021-000
  PROM VERSION      = 028-002-001
  IMT BUS A          = Disc
  IMT BUS B          = Conn
  CLOCK A            = Idle
  CLOCK B            = Active
  CLOCK I            = Idle
  MBD BIP STATUS     = valid
  DB STATUS          = valid
  DBD MEMORY SIZE    = 1024M
  HW VERIFICATION CODE = 004
  SCCP % OCCUP       = 0%
  SNM  TVG RESULT    = 24 hr: -----, 5 min: -----
  Command Completed.
;

```

The following example shows output for an E5-ENET card running the IPGHC application.

rept-stat-card:mode=full:loc=1305

```

rlghncxa03w 06-06-01 16:46:07 EST EAGLE 35.0.0
CARD  VERSION      TYPE      GPL      PST          SST          AST
1305  028-005-002  DCM      IPGHC     IS-NR        Active       -----
  ALARM STATUS      = No Alarms.
  IMTPCI  GPL version = 222-000-008
  BLVXW6  GPL version = 126-005-000
  BLDIAG6 GPL version = 098-002-001
  BLBEPM  GPL version = 089-003-000
  BLCPLD  GPL version = 126-002-000
  IMT BUS A          = Conn
  IMT BUS B          = Conn
  CLOCK A            = Active
  CLOCK B            = Idle
  CLOCK I            = Idle
  MBD BIP STATUS     = Valid
  MOTHER BOARD ID    = EPM A

```

```

DBD STATUS           = Valid
DBD TYPE              = 1G ENET
DBD MEMORY SIZE       = 512M
HW VERIFICATION CODE = ----
CURRENT TEMPERATURE   = 34C ( 94F)      [ALARM TEMP: 75C (167F)]
PEAK TEMPERATURE:     = 34C ( 94F)      [06-04-05 09:34]
SIGNALING LINK STATUS
  SLK   PST           LS           CLLI
  A     IS-NR         ls1305       -----
TVG STATUS
  SNM    TVG RESULT   = 24 hr: G-----, 5 min: -----
  SLAN   TVG RESULT   = 24 hr: GD-----, 5 min: GD-----
  SCCP   TVG RESULT   = 24 hr: -----, 5 min: -----
  INM    TVG RESULT   = 24 hr: G-----, 5 min: -----

```

Command Completed.

;

The following example shows output for an IPGWx card.

rept-stat-card:loc=1305:mode=full

```

eagle10212 06-01-05 15:11:35 EST EAGLE 35.0.0
CARD  VERSION  TYPE      APPL      PST      SST      AST
1305   125-056-000 EDCM      SS7IPGW  IS-NR      Active    -----
  ALARM STATUS           = No Alarms.
  BPDCM  GPL version = 125-047-000
  IMT BUS A              = Conn
  IMT BUS B              = Conn
  CLOCK A                = Active
  CLOCK B                = Idle
  CLOCK I                = Idle
  MBD BIP STATUS         = valid
  DB STATUS              = valid
  DBD MEMORY SIZE        = 0M
  HW VERIFICATION CODE = ----
SIGNALING LINK STATUS
  SLK   PST           LS           CLLI
  A     IS-NR         ls1305       -----
IPLNK STATUS
  IPLNK IPADDR          STATUS
  A     192.168.54.18    UP
  B     192.168.54.22    DOWN
ASSOCIATION STATUS
  ANAME          PST      SST      ASPID
  longassocname1 IS-NR    ESTABLISHED undefined
  ipgwa102       IS-NR    ESTABLISHED undefined
APPLSOCK STATUS
  SOCKET          PST      SST
  ipg1315s1       IS-NR    NEA-FEA
  ipg1317s1       IS-NR    NEA-FEA
TVG STATUS
  SNM    TVG RESULT   = 24 hr: -----, 5 min: -----
  SLAN   TVG RESULT   = 24 hr: -----, 5 min: -----
  SCCP   TVG RESULT   = 24 hr: -----, 5 min: -----
  INM    TVG RESULT   = 24 hr: -----, 5 min: -----

```

Command Completed.

The following example shows output for an IPLIMx card.

rept-stat-card:loc=1301:mode=full

```

eagle10212 06-01-05 15:39:11 EST EAGLE 35.0.0
CARD  VERSION  TYPE      APPL      PST      SST      AST
1301   125-056-000 EDCM      IPLIM     IS-NR      Active    -----
  ALARM STATUS           = No Alarms.
  BPDCM  GPL version = 090-047-019
  IMT BUS A              = Conn

```

```

IMT BUS B          = Conn
CLOCK A            = Active
CLOCK B            = Idle
CLOCK I            = Idle
MBD BIP STATUS     = valid
DB STATUS          = valid
DBD MEMORY SIZE    = 0M
HW VERIFICATION CODE=----
SIGNALING LINK STATUS
  SLK   PST          LS          CLLI
  A     IS-NR        e3e4        -----
  B     IS-NR        e3e4        -----
  A1    IS-NR        e3e4        -----
  B1    IS-NR        e3e4        -----
  A2    IS-NR        e3e4        -----
  B2    IS-NR        e3e4        -----
  A3    IS-NR        e3e4        -----
  B3    IS-NR        e3e4        -----
IPLNK STATUS
  IPLNK IPADDR        STATUS
  A     192.168.54.18  UP
  B     192.168.54.22  DOWN
ASSOCIATION STATUS
  ANAME          PST   SST
  longassocname1 IS-NR  ESTABLISHED
APPLSOCK STATUS
  SOCKET        PST   SST
  ipl1315s1     IS-NR  NEA-FEA
  ipl1317s1     IS-NR  NEA-FEA
TVG STATUS
  SNM   TVG RESULT   = 24 hr: -----, 5 min: -----
  SLAN   TVG RESULT   = 24 hr: GD-----, 5 min: GD-----
  SCCP   TVG RESULT   = 24 hr: GD-----, 5 min: GD-----
  INM    TVG RESULT   = 24 hr: -----, 5 min: -----

```

Command Completed.

The following example shows output when the IPLNK, associations or applsocks entries for the card have not yet been provisioned. The APPLSOCK header and status will not appear in the output if there are no sockets configured in the table.

rept-stat-card:loc=1305:mode=full

```

eagle10212 06-01-05 15:11:35 EST EAGLE 35.0.0
CARD  VERSION  TYPE      APPL      PST      SST      AST
1305  125-056-000 EDCM      SS7IPGW  IS-NR      Active    -----
ALARM STATUS      = No Alarms.
BPDCM  GPL version = 125-047-000
IMT BUS A          = Conn
IMT BUS B          = Conn
CLOCK A            = Active
CLOCK B            = Idle
CLOCK I            = Idle
MBD BIP STATUS     = valid
DB STATUS          = valid
DBD MEMORY SIZE    = 0M
HW VERIFICATION CODE=----
SIGNALING LINK STATUS
  SLK   PST          LS          CLLI
  A     IS-NR        ls1305        -----
IPLNK STATUS
  IPLNK IPADDR        STATUS
  A     -----      ----
  B     -----      ----
ASSOCIATION STATUS
  ANAME          PST   SST      ASPID

```

```

TVG STATUS
SNM   TVG RESULT = 24 hr: -----, 5 min: -----
SLAN  TVG RESULT = 24 hr: -----, 5 min: -----
SCCP  TVG RESULT = 24 hr: -----, 5 min: -----
INM   TVG RESULT = 24 hr: -----, 5 min: -----

```

Command Completed.

The following example shows output for an IPLIMx card with the EAGLE 5 Integrated Monitoring Support (E5IS) feature on.

rept-stat-card:loc=1301

```

rlghncxa03w 06-06-01 16:43:42 EST EAGLE 35.0.0
CARD  VERSION      TYPE      GPL      PST      SST      AST
1301  082-000-039  EDCM      IPLIM      IS-NR      Active    -----
ALARM STATUS      = No Alarms.
BPDCM  GPL version = 126-002-000
IMT BUS A          = Conn
IMT BUS B          = Disc
SIGNALING LINK STATUS
SLK   PST          LS          CLLI          E5IS
A     IS-NR        ls1m2pa    -----    INACTIVE
B     OOS-MT       ls1m2pa    -----    INACTIVE
A1    OOS-MT       ls1m2pa    -----    INACTIVE
B1    OOS-MT       ls1m2pa    -----    INACTIVE
A2    OOS-MT       ls1m2pa    -----    INACTIVE
B2    OOS-MT       ls1m2pa    -----    INACTIVE
A3    OOS-MT       ls1m2pa    -----    INACTIVE
B3    OOS-MT       ls1m2pa    -----    INACTIVE

```

Command Completed.

;

The following example shows all cards that are running the **iplimi** application.

rept-stat-card:appl=iplimi

```

tklcl1180601 06-08-07 10:00:41 EST EAGLE5 35.1.0
CARD  VERSION      TYPE      GPL      PST      SST      AST
2214  126-025-000  EDCM      IPLIMI      IS-NR      Active    -----
2313  126-025-000  EDCM      IPLIMI      IS-NR      Active    -----
3114  126-025-000  EDCM      IPLIMI      IS-NR      Active    -----
3116  126-025-000  EDCM      IPLIMI      IS-NR      Active    -----
4305  126-025-000  EDCM      IPLIMI      IS-NR      Active    -----
4308  126-025-000  EDCM      IPLIMI      IS-NR      Active    -----
4318  126-025-000  EDCM      IPLIMI      IS-NR      Active    -----
5208  126-025-000  EDCM      IPLIMI      IS-NR      Active    -----
5302  028-023-016  EDCM      IPLIMI      IS-NR      Active    -----
5304  126-025-000  EDCM      IPLIMI      IS-NR      Active    -----
5306  126-025-000  EDCM      IPLIMI      IS-NR      Active    -----
5307  126-025-000  EDCM      IPLIMI      IS-NR      Active    -----
5311  126-025-000  EDCM      IPLIMI      IS-NR      Active    -----
5312  126-025-000  EDCM      IPLIMI      IS-NR      Active    -----
5314  126-025-000  EDCM      IPLIMI      IS-NR      Active    -----
5318  126-025-000  EDCM      IPLIMI      IS-NR      Active    -----

```

Command Completed.

;

Legend

- CARD—The location of the card.
- VERSION—The version number of the application loaded on the card. Dashes (- - - -) in the version column indicate one of the following conditions about the card:
 - The card is configured but is not physically present in the system.

- The card does not run a GPL, such as TDM or MDAL cards.
- The card is IS-ANR or is in the process of being loaded.
- TYPE—The card type entered in the database. (The DCM and SSEDCCM cards show card type DCM.)
- APPL—The application loaded on this card.
- PST—The primary state of the card. The possible values are described in "Possible Values for PST/SST/AST".
- SST—The secondary state of the card. The possible values are described in "Possible Values for PST/SST/AST".
- AST—The associated state of the card. The possible values are described in "Possible Values for PST/SST/AST".

The group ticket voucher status is displayed in these fields: SCCP TVG RESULT (for SCCP messages), SLAN TVG RESULT (for STPLAN messages), and SNM TVG RESULT (for SNM messages). Group ticket voucher status output is displayed as a series of these letters:

G—Service Granted. Indicates normal system behavior.

D—Service Denied. Indicates an overload, but the group ticket voucher hardware and software are working correctly.

N—No granter in the system. For GTT or STPLAN traffic, there can be no SCCP cards or STPLAN in the system. If there are SCCP cards or STPLAN in the system, then a serious failure is indicated (hardware or software bug or hardware failure).

H—Hardware time-out. Indicates the hardware timed out waiting for a group ticket voucher packet to return. Group ticket voucher packets can be lost when a card is plugged in or booted. This is a serious condition if cards have not been connecting or disconnecting from the IMT. If this occurs, the IMT must be scrubbed (see the Scrub IMT procedure in the *Maintenance Manual*) or the card must be replaced..

S—Software time-out. No result was ever returned from hardware, indicating a probable hardware failure.

I—Invalid result from hardware. If this occurs, the IMT must be scrubbed (see the Scrub IMT procedure in the *Maintenance Manual*) or the card must be replaced.

The HW VERIFICATION CODE field is shown only in the mode=full report. ----- is shown in the HW VERIFICATION CODE field for cards with valid hardware detected. One of the following numerical values is shown when invalid hardware is detected, and all such cards will be auto-inhibited.

* It is possible that the card will continually boot in these cases, before the alarm is ever displayed.

Table 5-62. Auto-Inhibit Hardware Verification Codes

HW Verification Code	Card or Application Code	Description	Associated UAM Code
002*	VSCCP	VSCCP card equipped with non-DSM MPS feature is on	99
003*	VSCCP	VSCCP card equipped with non-DSM LNP and VGTT feature is on	99

Table 5-62. Auto-Inhibit Hardware Verification Codes

HW Verification Code	Card or Application Code	Description	Associated UAM Code
004*	VSCCP	VSCCP card equipped with non-DSM XGTT 1,000,000 is on	99
005*	VSCCP	VSCCP card equipped w/non-DSM when EGMS enabled	99
050	VSCCP	VSCCP card equipped with no daughterboards	99
051	VSCCP	VSCCP card equipped with less than 4GB when LNP ported TNs key equal to or greater than 48 million is on	422
052	VSCCP	VSCCP card equipped with less than 3GB when LNP ported TNs key equal to or greater than 36 million is on	422
053	VSCCP	VSCCP card equipped with less than 2GB when LNP NPAXXX 150,000 or LNP LRN 100,000 feature key is on	422
054	SCCP, EBDA	SCCP card or EBDA card with less than 2GB when LNP ported TNs key equal to 24 million is on	422
055	SCCP, EBDA	SCCP card or EBDA card DB memory insufficient for LNP ported TNs key equal to 4 million (Requires a minimum of 512 MB)	422
056	SCCP, EBDA	SCCP card or EBDA card DB memory insufficient for LNP ported TNs key equal to 6 million (Requires a minimum of 768 MB)	422
057	SCCP, EBDA	SCCP card or EBDA card DB memory insufficient for LNP ported TNs key equal to 8-12 million (Requires a minimum of 1024 MB)	422
058	SCCP	SCCP card equipped with less than 256K or greater than the MAX of extended memory.	422

Table 5-62. Auto-Inhibit Hardware Verification Codes

HW Verification Code	Card or Application Code	Description	Associated UAM Code
059	VSCCP	MPS database has been detected to exceed capacity of DSM extended memory (only for GPORT, GFLEX, INP, EIR features). UAMs 281, 283, and 285 are used for LNP and LNP ELAP Configuration features.	422
100	SS7IPGW, IPGWI	DCM with IP connection on B port only when debug enabled	276
101	SS7IPGW, IPGWI, IPLIM, IPLIMI	DCM only supports SLK link A and B -or- EDCM only supports SLK link A-A3 and B-B3 -or- E5-ENET only supports SLK link A-7 and B-7	276
102*	SS7IPGW, IPGWI	Non-DCM detected in slot	99
103	SS7IPGW, IPGWI, IPLIM, IPLIMI	DCM does not support >2 associations (IPLIMx)-OR-DCM does not support >4 associations (IPGWx) -or- EDCM does not support >8 associations (IPLIMx) -or- EDCM does not support >50 associations (IPGWx) -or- E5-ENET does not support >16 associations (IPLIMx) -or- E5-ENET does not support >50 associations (IPGWx)	276

Table 5-62. Auto-Inhibit Hardware Verification Codes

HW Verification Code	Card or Application Code	Description	Associated UAM Code
104	SS7IPGW, IPGWI, IPLIM, IPLIMI	DCM does not support >2 sockets (IPLIMx) -or- DCM does not support >50 sockets (IPGWx) -or- EDCM does not support >8 sockets (IPLIMx) -or- EDCM does not support >50 sockets (IPGWx) -or- E5-ENET does not support >0 sockets (IPLIMx) -or- E5-ENET does not support >0 sockets (IPGWx)	276
105	SS7IPGW, IPGWI, IPLIM, IPLIMI	DCM does not support >2 (sockets + associations) (IPLIMx) -or- DCM does not support >50 (sockets + assoc*) (IPGWx) -or- EDCM does not support >8 (sockets + associations) (IPLIMx) -or- EDCM does not support >50 (sockets + associations) (IPGWx) Note: *assoc = 8 X associations	276

Table 5-62. Auto-Inhibit Hardware Verification Codes

HW Verification Code	Card or Application Code	Description	Associated UAM Code
106	SS7IPGW, IPGWI, IPLIM, IPLIMI	DCM does not support >64Kb SCTP buffers (IPLIMx) -or- DCM does not support >64Kb SCTP buffers (IPGWx) -or- EDCM does not support >1600Kb SCTP buffers (IPLIMx) -or- EDCM does not support >800Kb SCTP buffers (IPGWx) -or- E5-ENET does not support >3200Kb SCTP buffers (IPLIMx) -or- E5-ENET does not support >3200Kb SCTP buffers (IPGWx)	276
110	SS7IPGW, IPGWI	(SRKQ = DRKQ > 1000) not supported on DCM.	276
119	LIME1	2-port E1 card provisioned with signaling link greater than B (A1-B3).	297
120	LIMDS0	2-port LIM card provisioned with signaling link greater than B (A1-B3).	297
121	LIME1	2-port LIM card does not support MIM with E1 port AMI encoding provisioned.	297
122	MIM	Card is not a MIM - provisioned as a T1 card or as a T1 channel card associated with a T1 interface.	99
123	MPL	MPL cannot run with port A or B provisioned for speeds not equal to 56K.	297
124	MIM, HC-MIM	Card is not a MIM or HC-MIM and is provisioned as a T1 card.	99
125	MIM, MPL	MIM or MPL card with a signaling link greater than B3 provisioned.	297

Table 5-62. Auto-Inhibit Hardware Verification Codes

HW Verification Code	Card or Application Code	Description	Associated UAM Code
126	LIME1	2-port E1 card with a signaling link provisioned on E1/T1 port 2-7.	297
127	MIM	MIM card with a signaling link provisioned on E1/T1 port 2-7.	297
128	HC-MIM	Fan feature bit must be on for HC-MIM cards.	43
129	HC-MIM, E5-E1T1	Card does not support CAS framing.	297
130	LIME1, MIM	Card is not a LIME1 or MIM and is provisioned as an E1 channel card.	99
131	HC-MIM, E5-E1T1	Card has channel bridging mode active but is not running supported high capacity GPL	297
132	MPL	Card is not a LIME1 or MIM and is provisioned as an E1 card.	99
133	LIME1, LIMDS0, MIM, MPL	Card cannot support unchannelized mode.	99
134	E5-E1T1	E5-E1T1 card with SLK provisioned on link greater than 15.	99
135	E5-E1T1	E5-E1T1 card supports only 1 SE-HSL link	276
140	MCP	MCP card not running with D2G memory.	422
141	IPS	IPSM card not running with D2G memory.	422
150	ASM	Card is obsolete.	47

Table 5-62. Auto-Inhibit Hardware Verification Codes

HW Verification Code	Card or Application Code	Description	Associated UAM Code
160	MCP	MCP card has incorrect motherboard. The application must run on an EDSM card.	441
180	IPLIM, SCCP, SS7ANSI	IPLIM card equipped w/ double slot DCM with MOBR on -or- SCCP card equipped with DCM with MOBR on -or- SS7ANSI card equipped with one of the following with MOBR on: LIMDS0/LIMV35/LIMOCU/LIM-AINF/ILA/EILA/LIME1	441

rept-stat-cdl**Report Command Driven Loopback Status**

Use this command to generate a report of the signaling links currently in Command Driven Loopback (CDL) testing, including the amount of time the link has been in CDL testing.

Command Driven Loopback is the ability to locally drive a signaling link into a manual line loopback. The data received on the signaling link is echoed (transmitted) back. This is effectively the reverse of the **tst-slk:loopback=lxvr**, which loops the transmitted data back to the receive.

Keyword: rept-stat-cdl

Related Commands: act-cdl, dact-cdl

Command Class: Link Maintenance

Parameters

:link= (optional)

SS7 signaling links. The signaling links that is being tested.

Synonym: port

Range: a, b, a1-a31, b1-b31

Not all card types support all **link** parameter values.

See Table A-1 for valid **link** parameter range values for each type of card that can have assigned signaling link ports.

Default: All signaling links that are in CDL testing are displayed.

:loc= (optional)

The card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Default: All cards containing signaling links that are in CDL testing are displayed.

:loopback= (optional)

Loopback test type.

Range: **line, payload**

The **payload** value is valid only on LIM-ATM and E1-ATM cards.

Default: All loopback tests are displayed.

Example

```
rept-stat-cdl
```

```
rept-stat-cdl:loc=1201
```

```
rept-stat-cdl:loc=1203:link=a
```

```
rept-stat-cdl:loopback=payload
```

Dependencies

If the **link** parameter is specified, the **loc** parameter must be specified.

The card location specified in the **loc** parameter must be equipped.

The signaling link specified in the **link** parameter must be equipped.

This command is not available during upgrade.

The card location specified in the **loc** parameter cannot be reserved by the system.

Notes

This command can be canceled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information

Output

```
rept-stat-cdl
```

```
tekelecstp 03-11-27 01:29:06 EST EAGLE 31.3.0
SLK      CDL      CDL-TIME
1102,A1   LINE      00:04:01
1201,A     PAYLOAD  01:04:11
1203,A     LINE      00:22:21
1203,B     LINE      20:04:01
1208,A     LINE      01:05:22
1211,A     PAYLOAD  00:14:01
;
```

Legend

SLK—The card and assigned signaling link that is in CDL testing.

CDL—Command Driven Loopback test type (LINE or PAYLOAD).

CDL-TIME—The time that the signaling link has been in CDL testing. This value can be up to 99:59:59. The test can run longer than 100 hours, but this field will not record times longer than 100 hours.

rept-stat-cdt

Report Status Customer Defined Troubles

Use this command to display the customer-defined troubles. The Customer-Definable Alarms feature can be used to connect up to 10 external devices to the system for alarm reporting. These devices are defined in the system database as customer-defined troubles, and they are monitored so that any change in the state of these devices is reported as an unsolicited alarm message (UAM).

Keyword: rept-stat-cdt

Related Commands: act-alm-trns, canc-alm-trns, dact-alm-trns, rept-stat-clk, rept-stat-trbl, rls-alm, rtrv-obit, rtrv-trbl

Command Class: System Maintenance

Parameters

This command has no parameters.

Example

rept-stat-cdt

Dependencies

No other status command can be in progress when this command is entered.

Notes

These troubles are customer-defined and configured by the factory.

Output

rept-stat-cdt

```
rlghncxa03w 04-01-07 20:20:43 EST EAGLE 31.3.0
ID          ALARM STATUS
1    *C 0058 Critical Customer Trouble detected
2    *C 0050 Critical Holdover Clock trouble detected
3    *C 0058 Critical Customer Trouble detected
4    *C 0058 Critical Customer Trouble detected
5    I ** 0059 Major Customer Trouble detected
6    ** 0052 Major Holdover Clock trouble detected
7    ** 0059 Major Customer Trouble detected
8    ** 0059 Major Customer Trouble detected
9    I * 0060 Minor Customer Trouble detected
10   * 0054 Minor Holdover Clock trouble detected
11   * 0060 Minor Customer Trouble detected
12   * 0060 Minor Customer Trouble detected
13   * 0060 Minor Customer Trouble detected
14   I * 0060 Minor Customer Trouble detected
15   * 0060 Minor Customer Trouble detected
16   * 0060 Minor Customer Trouble detected
;
```

Legend

ID—The customer defined trouble ID number followed by the status of the customer-defined trouble.

ALARM STATUS—The status of the alarm for the specified device.

rept-stat-clk

Report Status Clock

Use this command to display the clock status summary for cards in the system.

Keyword: rept-stat-clk

Related Commands: rept-stat-card, rept-stat-dstn, rept-stat-imt, rept-stat-ls, rept-stat-sccp, rept-stat-slk, rept-stat-trbl

Command Class: System Maintenance

Parameters

:mode= (optional)

Display mode. When **mode=full** is specified, the "Cards with bad clock source" section of the report is displayed

Range: **full**

Example

```
rept-stat-clk
```

Dependencies

No other **rept-stat-xxx** command can be in progress when this command is entered.

Notes

The clock status report includes a CLOCK A, CLOCK B, and CLOCK I status. The High Speed clock status report (displayed for ATM, E1-ATM, and E1/T1 MIM cards) includes HS CLOCK A, HS CLOCK B, and HS CLOCK I.

The Time Slot Counter Synchronization (TSC) clock is displayed only if the Time Slot Counter Synchronization (TSCSYNC) feature is turned on. See the **chg-feat** command.

HS clock sections are displayed only when at least 1 HS clock capable card is provisioned, or when the TDM type is TDM-GTI and the TSC Synchronization feature has been turned on. The HS clock sections of the report are the HS PRIMARY CLK, HS SECONDARY CLK, HS CLK TYPE, and HS CLK LINELEN fields at the top of the report; the HS SYSTEM CLOCK section; and the HS clock columns in the **mode=full** "Cards with bad clock source" section.

HS clock capable cards are those that can support a link provisioned to use HS Master Timing (including ATMANSI, ATMITU, and E1/T1 MIM cards). The clock status values are the same as those listed in the **rept-stat-card:mode=full:loc=xxx** report.

The "Cards with bad clock source" section is displayed when the **mode=full** report is specified. When HS clock A and B status is included in this section, cards that cannot be provisioned to use HS Master Timing display dashes for HS clock A and B status. The valid values for each clock status are:

-----Undefined, card must be OOS

Idle—Clock is available but is not being used by the card

Active—Clock is available and is being used by the card, but does not mean that the card is using the clock for link alignment. Use the **rtrv-slk**, **rtrv-e1**, and **rtrv-t1** commands to determine what clock source each card is using for link alignment.

Fault—Clock is unavailable

Output

The following example shows output when **mode=full** is not specified, with no HS clock sections, and when the TSCSYNC feature is not on:

rept-stat-clk

```
rlghncxa03w 04-04-07 08:51:31 EST EAGLE 31.6.0
CARD LOC = 1114 (Active )      CARD LOC = 1116 (Isolated )
PRIMARY BITS = Active          PRIMARY BITS = -----
SECONDARY BITS = Fault         SECONDARY BITS = -----

                                PST          SST          AST
SYSTEM CLOCK                   OOS-MT          Fault         -----
ALARM STATUS = No Alarms.
# Cards using CLK A = 4        # Cards with bad CLK A = 0
# Cards using CLK B = 0        # Cards with bad CLK B = 4
# Cards using CLK I = 0

Command Completed.
```

;

The following example shows output when **mode=full** is specified, with no HS clock sections, and the TSCSYNC feature is not on:

```
rlghncxa03w 04-04-07 08:51:31 EST EAGLE 31.6.0
CARD LOC = 1114 (Active )      CARD LOC = 1116 (Isolated )
PRIMARY BITS = Active          PRIMARY BITS = -----
SECONDARY BITS = Fault         SECONDARY BITS = -----

                                PST          SST          AST
SYSTEM CLOCK                   OOS-MT          Fault         -----
ALARM STATUS = No Alarms.
# Cards using CLK A = 4        # Cards with bad CLK A = 0
# Cards using CLK B = 0        # Cards with bad CLK B = 4
# Cards using CLK I = 0

Cards with bad clock source:
CARD          CLK A      CLK B
1103          Active     Fault
1104          Active     Fault
1106          Active     Fault
1113          Active     Fault

Command Completed.
```

;

If the Time Slot Counter Synchronization feature (TSCSYNC) is turned on, the output includes the TSC clock status.

rept-stat-clk

```
rlghncxa03w 04-04-07 08:51:31 EST EAGLE 31.6.0
CARD LOC = 1114 (Active )      CARD LOC = 1116 (Isolated )
PRIMARY BITS = Active          PRIMARY BITS = -----
SECONDARY BITS = Fault         SECONDARY BITS = -----
TSC CLOCK      = Clock A      TSC CLOCK      = -----

                                PST          SST          AST
SYSTEM CLOCK                   OOS-MT          Fault         -----
ALARM STATUS = No Alarms.
# Cards using CLK A = 4        # Cards with bad CLK A = 0
# Cards using CLK B = 0        # Cards with bad CLK B = 4
# Cards using CLK I = 0

Command Completed.
```

;

The following example includes output that appears when **mode=full** is not specified; at least one HS clock capable card is provisioned, or the TDM cards are TDM-GTI cards (TDM-15 or later) and the TSCSYNC feature is turned on:

rept-stat-clk

```
rlghncxa03w 04-04-07 08:51:31 EST EAGLE 31.6.0
CARD LOC = 1114 (Active )   CARD LOC = 1116 (Isolated )
PRIMARY BITS   = Active     PRIMARY BITS   = -----
SECONDARY BITS = Idle       SECONDARY BITS = -----
HS PRIMARY CLK = Active     HS PRIMARY CLK = -----
HS SECONDARY CLK = Idle     HS SECONDARY CLK = -----
HS CLK TYPE    = E1 UNFRAMED HS CLK TYPE    = -----
HS CLK LINELEN = SHORThAUL  HS CLK LINELEN = -----
TSC CLOCK      = Unavail    TSC CLOCK      = -----

                                PST      SST      AST
                                OOS-MT   Fault    -----
SYSTEM CLOCK
ALARM STATUS = No Alarms.
# Cards using CLK A = 4      # Cards with bad CLK A = 1
# Cards using CLK B = 0      # Cards with bad CLK B = 5
# Cards using CLK I = 1

                                PST      SST      AST
                                IS-NR    Idle     -----
HS SYSTEM CLOCK
# Cards using HS CLK A = 0    # Cards with bad HS CLK A = 1
# Cards using HS CLK B = 0    # Cards with bad HS CLK B = 1
# Cards using HS CLK I = 0
```

;

The following example includes output that appears when **mode=full** is not specified; at least one HS clock capable card is provisioned and the TSCSYNC feature is not turned on:

rept-stat-clk

```
rlghncxa03w 04-04-07 08:51:31 EST EAGLE 31.6.0
CARD LOC= 1114 (Active )   CARD LOC= 1116 (Isolated )
PRIMARY BITS   = Active     PRIMARY BITS   = -----
SECONDARY BITS = Idle       SECONDARY BITS = -----
HS PRIMARY CLK = Active     HS PRIMARY CLK = -----
HS SECONDARY CLK = Idle     HS SECONDARY CLK = -----
HS CLK TYPE    = E1 UNFRAMED HS CLK TYPE    = -----
HS CLK LINELEN = SHORThAUL  HS CLK LINELEN = -----

                                PST      SST      AST
                                IS-NR    ACTIVE   ALMINH
SYSTEM CLOCK
ALARM STATUS = No Alarms.
# Cards using CLK A = 9      # Cards with bad CLK A = 0
# Cards using CLK B = 0      # Cards with bad CLK B = 9
# Cards using CLK I = 0

                                PST      SST      AST
                                IS-NR    ACTIVE   ALMINH
HS SYSTEM CLOCK
ALARM STATUS = No Alarms.
# Cards using HSCLK A = 1    # Cards with bad HSCLK A = 0
# Cards using HSCLK B = 0    # Cards with bad HSCLK B = 2
# Cards using HSCLK I = 0
Command Completed.
```

;

The following example includes output that appears when **mode=full** is specified; at least one HS clock capable card is provisioned, or the TDM cards are TDM-GTI cards (TDM-15 or later) and the TSCSYNC feature is turned on:

rept-stat-clk:mode=full

```

rlghncxa03w 04-04-07 08:51:31 EST EAGLE 31.6.0
CARD LOC = 1114 (Active )   CARD LOC = 1116 (Isolated )
PRIMARY BITS = Active      PRIMARY BITS = -----
SECONDARY BITS = Idle      SECONDARY BITS = -----
HS PRIMARY CLK = Active    HS PRIMARY CLK = -----
HS SECONDARY CLK = Idle    HS SECONDARY CLK = -----
HS CLK TYPE = E1 UNFRAMED HS CLK TYPE = -----
HS CLK LINELEN = SHORThAUL HS CLK LINELEN = -----
TSC CLOCK = Unavail       TSC CLOCK = -----

SYSTEM CLOCK                PST          SST          AST
OOS-MT                      Fault        -----
ALARM STATUS = No Alarms.
# Cards using CLK A = 4     # Cards with bad CLK A = 1
# Cards using CLK B = 0     # Cards with bad CLK B = 5
# Cards using CLK I = 1

HS SYSTEM CLOCK             PST          SST          AST
IS-NR                      Idle        -----
ALARM STATUS = No Alarms.
# Cards using HS CLK A = 0  # Cards with bad HS CLK A = 1
# Cards using HS CLK B = 0  # Cards with bad HS CLK B = 1
# Cards using HS CLK I = 0

Cards with bad clock source:
CARD      CLK A      CLK B      HS CLK A      HS CLK B
1103      Active     Fault      -----      -----
1104      Active     Fault      Fault         Fault
1106      Active     Fault      -----      -----
1113      Active     Fault      -----      -----
1205      Fault      Fault      -----      -----

Command Completed.
;

```

Legend

CARD LOC—The card location of the TDM and the status of the MASP

PRIMARY BITS—The status of the primary BITS clock

SECONDARY BITS—The status of the secondary BITS clock

HS PRIMARY CLK—The status of the high-speed primary clock

HS SECONDARY CLK—The status of the high-speed secondary clock

Possible values for HS PRIMARY CLK and HS SECONDARY CLK status are:

---- (dashes)—Undefined or not applicable

ACTIVE—High-speed primary clock is valid and is the current reference being distributed by TDMx to all system shelves.

FAULT—High-speed primary clock source from TDMx is currently invalid.

IDLE—High-speed primary clock is valid, the high-speed secondary clock is the current reference being distributed by TDMx to all system shelves.

HS CLK TYPE—HS clock source (see the **chg-stpopts** command)

HS CLK LINELEN—HS clock line length (see the **chg-stpopts** command)

TSC CLOCK—The status of the Time Slot Counter Synchronization (TSC) clock; appears only when the TSCSYNC feature is turned on.

SYSTEM CLOCK—System clock status

PST—The primary state of the clock. The possible values are described in "Possible Values for PST/SST/AST".

SST—The secondary state of the clock. The possible values are described in "Possible Values for PST/SST/AST".

AST—The associated state of the clock. The possible values are described in "Possible Values for PST/SST/AST".

ALARM STATUS—System clock alarms; "No alarms" is shown when there are no alarms.

CARDS USING CLK A, B, I—The number of cards using clock A, clock B, and clock I.

CARDS WITH BAD CLK A, B—The number of cards using clock A or clock B, when clock A or B is bad.

HS SYSTEM CLOCK—HS system clock status

PST—The primary state of the clock. The possible values are described in "Possible Values for PST/SST/AST".

SST—The secondary state of the clock. The possible values are described in "Possible Values for PST/SST/AST".

AST—The associated state of the clock. The possible values are described in "Possible Values for PST/SST/AST".

ALARM STATUS—HS System clock alarms; "No alarms" is shown when there are no alarms.

CARDS USING HSCLK A, B, I—The number of cards using high-speed clock A, B, and I.

NOTE: The value for the internal high-speed clock (# Cards using HSCLK I) is generated differently from the internal system clock (Cards using CLK I). The internal high speed clock is generated by the XILINX on the ATM applique's card. The internal system clock is generated by TDMx when both BITS clock sources are invalid and then distributed to all system shelves.

The use of HSCLK I is not automatic when both the high-speed primary and secondary clocks are invalid. A LIM-ATM card must be provisioned (with the **ent-slk:atmtsel=internal** parameter) to use the high-speed internal clock.

CARDS WITH BAD HSCLK A, B—The number of cards using high-speed clock A or B, when high-speed clock A or B is bad.

rept-stat-cluster

Report Status Cluster-Related DPC

Use this command to report summary status and statistical information for all provisioned clusters. Use this command also to report detailed routeset information for a specific cluster, provisioned cluster member, or dynamically-created x-list entry.

NOTE: This command does not support 24-bit ITU national point codes.

Keyword: rept-stat-cluster

Related Commands: chg-feat, chg-stpopts, rept-stat-cluster, rtrv-stpopts

Command Class: System Maintenance

Parameters

:dpc= (optional)

ANSI destination point code of the cluster whose status is to be reported, with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (prefix-ni-nc-ncm).

Synonym: dpca

Range: **p-**, 000-255, *

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

The asterisk value (*) is not valid for the *ni* subfield.

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001–005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006–255**.

The point code **000-000-000** is not a valid point code.

Default: Display summary for all provisioned clusters

:mode= (optional)

The type of display. Specify **mode=full** to display additional information for the specified DPC.

Range: **full**

Default: Display summary report

:stat= (optional)

This parameter reports on destinations whose status is the same as the state indicated by the parameter.

Range: **all, alminh, anr, dsbld, mt, nr**

all— All of the primary states

alminh— Alarms inhibited

anr— In service abnormal (IS-ANR)

dsbld— Out of service maintenance disabled (OOS-MT-DSBLD)

mt— Out of service maintenance (OOS-MT)

nr— In service normal (IS-NR)

Default: **all**

Example

```
rept-stat-cluster
```

```
rept-stat-cluster:stat=alminh
```

```
rept-stat-cluster:stat=MT
```

```
rept-stat-cluster:dpc=20-2-*
```

```
rept-stat-cluster:dpc=20-2-*:mode=full
```

```
rept-stat-cluster:dpc=20-2-5
```

Dependencies

If the **mode=full** parameter is specified, the **dpc/dpca** parameter must be specified.

The **stat** parameter cannot be specified with the **dpc/dpca** parameter in the command.

The Cluster Routing and Management Diversity (CRMD) feature must be turned on before this command can be entered.

The specified DPC must exist.

If a DPC is specified, it must be an x-list entry, a cluster DPC, or a member of a provisioned cluster.

The destination address must be a full point code or a cluster point code specified as *ni-nc-**. A DPC as *ni-nc-*** or *ni-nc-**** cannot be specified for the **rept-stat-cluster** command.

In this command, the point codes support only the private (internal) point code subtype prefix (**p-**).

Notes

If no parameters are specified, a summary report is produced, showing all provisioned clusters and their status.

If an FPC corresponding to a provisioned cluster member or an x-list entry is specified, then the status of only the specified FPC, along with routeset status, is displayed.

If a cluster destination is specified on the **dpc/dpca** parameter, then the status of the cluster and the routesets that have been defined for that cluster is displayed.

If the **mode=full** parameter and a DPC are specified, the Route/Destination table is searched, and all entries (cluster DPCs, provisioned cluster member DPCs, and x-list DPCs) belonging to the parent cluster are displayed along with their status. Also, if circular routing is in effect for the DPC, information useful in diagnosing and correcting the situation is displayed.

In the summary report, and in the detailed output when a cluster DPC is being reported, the number of provisioned members of the cluster, and the number of x-list entries that have been created for the cluster, are reported in the PROV and X-LIST columns, respectively.

When detailed information for an x-list entry is being reported, the reasons that the x-list entry was created, and the amount of time remaining on the x-list expiration timer, if applicable, in the format hh:mm is shown in the X-REASON and X-TIME columns, respectively. In x-list entries for which the expiration timer is not applicable, dashes "-----" are displayed.

Output

When no parameters are specified, summary information for all of the defined cluster DPCs is shown. Note that the report shows the number of provisioned and x-list members of each cluster.

rept-stat-cluster

```
rlghncxa03w 04-01-07 08:51:31 EST EAGLE 34.0.0
  DPCA      ORIG  PST   SST   AST   PROV  XLIST
  020-002-* CLUST IS-NR Allowed ACCESS 2      3
  020-020-* CLUST IS-NR Allowed ACCESS 3      5
  020-021-* CLUST OOS-MT Prohibit INACCESS 5      2
  020-022-* CLUST IS-NR Allowed ALMINH 2      3
```

Command Completed.

;

When a provisioned cluster member DPC is specified, the report shows status information for the specified DPC plus route information.

rept-stat-cluster:dpc=20-2-1

```
rlghncxa03w 04-01-07 08:51:31 EST EAGLE 34.0.0
  DPCA      ORIG  PST   SST   AST
  020-002-001 PROV IS-ANR Restrict ACCESS
ALARM STATUS = No Alarms.
RTE COST LSN APCA LS STAT NON-ADJ ROUTE STAT
1 10 lsnppp 003-003-003 Allowed Allowed Allowed
2 -- ----- ***_***_*** ----- -----
3 -- ----- ***_***_*** ----- -----
4 -- ----- ***_***_*** ----- -----
5 -- ----- ***_***_*** ----- -----
6 -- ----- ***_***_*** ----- -----
```

Command Completed.

;

When a specific cluster DPC is specified, the report shows count information about the cluster's provisioned and x-list members, plus the route information.

rept-stat-cluster:dpc=20-2-*

```
rlghncxa03w 04-01-07 08:51:31 EST EAGLE 34.0.0
  DPCA      ORIG  PST   SST   AST   PROV  X-LIST
  020-002-* CLUST IS-NR Allowed ACCESS 2      3
ALARM STATUS = No Alarms.
RTE COST LSN APCA LS STAT NON-ADJ ROUTE STAT
1 10 lsnppp 003-003-003 Allowed Allowed Allowed
2 -- ----- ***_***_*** ----- -----
3 -- ----- ***_***_*** ----- -----
4 -- ----- ***_***_*** ----- -----
5 -- ----- ***_***_*** ----- -----
6 -- ----- ***_***_*** ----- -----
```

Command Completed.

;

When an x-list cluster member DPC is specified, the report shows x-list related information (X-REASON, X-TIME) plus the route information. The output report identifies the specified DPC as an x-list DPC.

rept-stat-cluster:dpc=20-2-5

```
rlghncxa03w 04-01-07 08:51:31 EST EAGLE 34.0.0
  DPCA      ORIG  PST   SST   AST   X-REASON X-TIME
  020-002-005 X-LIST IS-ANR Restrict ACCESS RT      08:20
ALARM STATUS = No Alarms.
```

RTE	COST	LSN	APCA	LS STAT	NON-ADJ	ROUTE STAT
1	10	lsnppp	003-003-003	Allowed	Allowed	Allowed
2	--	-----	***_***_***	-----	-----	-----
3	--	-----	***_***_***	-----	-----	-----
4	--	-----	***_***_***	-----	-----	-----
5	--	-----	***_***_***	-----	-----	-----
6	--	-----	***_***_***	-----	-----	-----

Command Completed.

;

Specifying a cluster **dpc** and **mode=full** expands the report to show summary status information for all of the provisioned and x-list DPCs that are members of the specified cluster.

rept-stat-cluster:dpc=20-2-*:mode=full

```
rlghncxa03w 04-01-07 08:51:31 EST EAGLE 34.0.0
DPCA          ORIG      PST      SST      AST      PROV  X-LIST
020-002-*     CLUST    IS-NR    Allowed  ACCESS    2      3
ALARM STATUS   = No Alarms.
RTE  COST  LSN      APCA          LS STAT    NON-ADJ    ROUTE STAT
1    10    lsnppp    003-003-003  Allowed    Allowed    Allowed
2    --    -----    ***_***_***  -----    -----    -----
3    --    -----    ***_***_***  -----    -----    -----
4    --    -----    ***_***_***  -----    -----    -----
5    --    -----    ***_***_***  -----    -----    -----
6    --    -----    ***_***_***  -----    -----    -----
DPCA          ORIG      PST      SST      AST      X-REASON  X-TIME
020-002-*     CLUST    IS-NR    Allowed  ACCESS    -----    -----
020-002-001   PROV      OOS-MT   Prohibit  INACCESS  -----    -----
020-002-002   PROV      IS-ANR   Restrict  ACCESS    -----    -----
020-002-126   X-LIST    IS-ANR   Restrict  ACCESS    RT         08:20
020-002-127   X-LIST    OOS-MT   Prohibit  INACCESS  CR         -----
020-002-128   X-LIST    IS-ANR   Restrict  ACCESS    CG RT      05:40
CIRCULAR ROUTING
XMIT LSN= ----- RC=--
RCV  LSN= -----
MEMBER = ***_***_***
```

Command Completed.

;

When the **stat** parameter is specified, only those clusters having a primary state (PST) matching the specified value are reported.

rept-stat-cluster:stat=alminh

```
rlghncxa03w 04-01-07 08:51:31 EST EAGLE 34.0.0
DPCA          ORIG      PST      SST      AST      PROV  XLIST
020-022-*     CLUST    IS-NR    Allowed  ALMINH    2      3
```

Command Completed.

;

If a circular routing alarm is raised for a cluster member DPC, specifying the **dpc** and **mode=full** parameters displays information pertinent to the cluster member that is experiencing the circular routing condition. This information may be useful in correcting the problem.

rept-stat-cluster:dpc=20-2-127:mode=full

```
rlghncxa03w 04-01-07 08:51:31 EST EAGLE 34.0.0
DPCA          ORIG      PST      SST      AST
020-002-127   PROV      OOS-MT   Prohibit  INACCESS
ALARM STATUS   = *C 0319 Circular routing detected
RTE  COST  LSN      APCA          LS STAT    NON-ADJ    ROUTE STAT
1    10    lsnppp    003-003-003  Allowed    Allowed    Allowed
2    --    -----    ***_***_***  -----    -----    -----
```

```

3  --  -----  ***_***_***  -----  -----  -----
4  --  -----  ***_***_***  -----  -----  -----
5  --  -----  ***_***_***  -----  -----  -----
6  --  -----  ***_***_***  -----  -----  -----
DPCA      ORIG      PST      SST      AST      X-REASON  X-TIME
020-002-*  CLUST     IS-NR     Allowed  ACCESS    -----  -----
020-002-001 PROV      OOS-MT    Prohibit ACCESS    -----  -----
020-002-002 PROV      IS-ANR    Restrict ACCESS    -----  -----
020-002-126 X-LIST    IS-ANR    Restrict ACCESS    RT      08:20
020-002-127 X-LIST    OOS-MT    Prohibit INACCESS  CG CR    -----
020-002-128 X-LIST    IS-ANR    Restrict ACCESS    CR CG RT 05:40
CIRCULAR ROUTING
XMIT LSN= lsnppp RC=--
RCV LSN= lsn01a
MEMBER   = ***_***_***

```

Command Completed.

;

If a circular routing alarm is raised for a cluster DPC (that is, no x-list entry could be created for the cluster member), then specifying the **dpc** and **mode=full** parameters displays information pertinent to the cluster member that is experiencing the circular routing condition. This information may be useful in correcting the problem. The value for the MEMBER field in this example represents the cluster member that had the circular routing condition. This is the same member for which an x-list entry could not be created.

NOTE: The circular routing member information shown in this output report displays as *-***-*** if the specified destination point code is not a cluster destination point code or the information is not known by maintenance at the time the report is generated.**

rept-stat-cluster:dpc=20-2-*:mode=full

```

rlghncxa03w 04-01-07 08:51:31 EST EAGLE 34.0.0
DPCA      ORIG      PST      SST      AST      PROV  X-LIST
020-002-*  CLUST     IS-NR     Allowed  ACCESS    2      3
ALARM STATUS = *C 0319 Circular routing detected
RTE COST  LSN      APCA      LS STAT  NON-ADJ  ROUTE STAT
1  10  lsnppp  003-003-003 Allowed  Allowed  Allowed
2  --  -----  ***_***_***  -----  -----  -----
3  --  -----  ***_***_***  -----  -----  -----
4  --  -----  ***_***_***  -----  -----  -----
5  --  -----  ***_***_***  -----  -----  -----
6  --  -----  ***_***_***  -----  -----  -----
DPCA      ORIG      PST      SST      AST      X-REASON  X-TIME
020-002-*  CLUST     IS-NR     Allowed  ACCESS    -----  -----
020-002-001 PROV      OOS-MT    Prohibit INACCESS  -----  -----
020-002-002 PROV      IS-ANR    Restrict ACCESS    -----  -----
020-002-126 X-LIST    IS-ANR    Restrict ACCESS    RT      08:20
020-002-127 X-LIST    OOS-MT    Prohibit INACCESS  CR      -----
020-002-128 X-LIST    IS-ANR    Restrict ACCESS    CG RT   05:40
CIRCULAR ROUTING
XMIT LSN= lsnppp RC=--
RCV LSN= lsn01a
MEMBER   = 020-002-129

```

Command Completed.

;

The following example includes private point codes:

rept-stat-cluster:dpc=20-2-*:mode=full

```

rlghncxa03w 05-01-06 10:09:59 EST EAGLE 34.0.0
DPCA      ORIG      PST      SST      AST      PROV  XLIST
020-002-*  CLUST     OOS-MT    Idle    INACCESS  0      0
ALARM STATUS = No Alarms.

```

```

RTE COST  LSN          APCA          LS STAT  NON-ADJ  ROUTE STAT
1   10    ls11345678  p-001-001-003  Allowed  Allowed  Allowed
2   --    -----  ---***_***_***  -----  -----  -----
3   --    -----  ---***_***_***  -----  -----  -----
4   --    -----  ---***_***_***  -----  -----  -----
5   --    -----  ---***_***_***  -----  -----  -----
6   --    -----  ---***_***_***  -----  -----  -----
DPCA      ORIG  PST    SST    AST    X-REASON  X-TIME
020-002-* CLUST  IS-NR  Allowed ACCESS  -----  -----
p-020-002-001 PROV  OOS-MT Prohibit INACCESS -----  -----
p-020-002-002 PROV  IS-ANR Restrict ACCESS  -----  -----
020-002-126 X-LIST IS-ANR Restrict ACCESS  RT      08:20
020-002-127 X-LIST OOS-MT Prohibit INACCESS CR      -----
020-002-128 X-LIST IS-ANR Restrict ACCESS  CG RT   05:40
CIRCULAR ROUTING INFO:
XMIT LSN=----- RC=--
RCV  LSN=-----
MEMBER =-----

```

Command Completed.

;

Legend

ORIG—Indicates the origination of the destination point code being reported. The possible values that can appear in the column are:

CLUST—Entry is a provisioned cluster (*ni-nc-**) DPC

PROV—Entry is a provisioned cluster member (*ni-nc-ncm*)

X-LIST—Entry is a non-provisioned (i.e. dynamically-created) x-list cluster member

PST—The primary state of the cluster. The possible values are described in "Possible Values for PST/SST/AST".

SST—The secondary state of the cluster. The possible values are described in "Possible Values for PST/SST/AST".

AST—The associated state of the cluster. The possible values are described in "Possible Values for PST/SST/AST".

X-REASON—Indicates the reasons that the X-LIST entries currently exist. The two-letter indicator values that can appear in this column are:

RT—X-LIST entry created due to routing

CG—X-LIST entry created due to congestion

CR—X-LIST entry created due to circular routing

The circular routing transmit/receive linkset information shown in the **mode=full** detailed output report displays as "-----" if no circular routing alarm exists for the DPC or the information is not known by maintenance at the time the report is generated.

rept-stat-db

Report Status Database

Use this command to display a report showing various status indicators for the active and standby OAM database and the status of the database on each of the network cards.

When the G-Flex, G-Port, INP, or LNP ELAP Configuration feature is turned on, the status of the MPS databases and VSCCP cards is displayed.

Keyword: rept-stat-db

Related Commands: chg-db, copy-meas,

Command Class: Database Administration

Parameters

:db= (optional)

The report section or sections to display in the output. The content of each section depends on the specified or default value of the **display** parameter, MPS output appears only if a feature that uses the MPS is turned on in the system (G-Flex, G-Port, INP, or the LNP ELAP Configuration controlled feature).

Range: **all, mps, stp**

all — Displays database and card output for both the STP and MPS report sections.

mps — Displays only the database and card output for the MPS report section.

stp — Displays only the database and card output for the STP report section.

Default: **all**

:display= (optional)

The type of output

Range: **all, brief, except, version**

all — Displays the operational status of all databases (MASP A, MASP B, and MDAL) and all cards equipped in the database on the system.

brief — Displays the operational status of the databases in the active and standby MASP, and of the MPS databases if a feature that uses the MPS is turned on.

except — Displays the operational status information contained in the **display=brief** output along with the cards whose database level does not match the active fixed disk current partition or active MPS database.

version — Displays all of the same information that is displayed with the **display=all** parameter except that the individual database status column is replaced with the database format version and status. In addition, details of the status of the backup databases are displayed for MASP cards. No version information is shown for MPS databases; use the **rept-stat-mps** command.

Default: **brief**

:loc= (optional)

The card location as stenciled on the shelf of the system.

Range: **1101-1108, 1111-1112, 1114, 1116, 1117, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

Example

```
rept-stat-db
```

```
rept-stat-db:display=brief
```

```
rept-stat-db:display=except
```

```
rept-stat-db:display=all
```

```
rept-stat-db:display=version
```

```
rept-stat-db:loc=1207
```

```
rept-stat-db:db=all
```

```
rept-stat-db:db=stp
```

```
rept-stat-db:db=mps
```

Dependencies

The **display** and **loc** parameters cannot be specified at the same time.

The **db** and **loc** parameters cannot be specified at the same time.

The following card locations are not valid for this command: 1113, 1115, and all xy09 and xy10 locations (where x is the frame and y is the shelf).

The G-Flex, G-Port, INP, EIR, or LNP ELAP Configuration feature must be turned on before the **db=mps** parameter can be specified.

Notes

If the **display** parameter, the **db** parameter, or the **loc** parameter is specified and the database for a particular card location is not accessible, hyphens are displayed in place of the data.

The output of the **rept-stat-db** command with no parameters specified or with the **display=brief** parameter shows the following information:

- Activity status of both the active and standby MASP, the date and time the last backup was performed on the removable cartridge (if inserted) and the fixed disk backup partition, coherency, the number of updates (level) to the backup partition of the fixed disk, and the current partition of the fixed disk
- If the G-Flex, G-Port, EIR, or INP feature is turned on, EPAP A and EPAP B database status followed by VSCCP card database status
- If the LNP ELAP Configuration controlled feature feature is turned on, ELAP A and ELAP B database status followed by VSCCP card database status

The output of the **rept-stat-db** command with the **display=except** parameter shows the coherency and the number of updates for all the cards whose database level does not match the active fixed disk current partition, reference database level, or is incoherent. All databases that are not accessible are also displayed. In addition, the time stamp for the last database update is displayed for every card.

The output of the **rept-stat-db** command with the **display=all** parameter shows the coherency and the number of updates for all of the distributed databases. In addition, the time stamp for the last database update is displayed for every card.

The output of the **rept-stat-db** command with the **display=version** parameter shows the coherency and the number of updates for the active and standby databases, along with the database version and the operational status of each of these databases. If the LNP feature is turned on (see the **enable-ctrl-feat** command), the version of the LNP database is shown. No version is shown for EPAP or ELAP databases; use the **rept-stat-mps** command to display version information for these databases.

The output of the **rept-stat-db** command with the **loc** parameter specifying an equipped card shows the coherency and the number of updates to its database. In addition, the time stamp for the last database update is displayed for the specific card location.

The **db** parameter is used to limit the output of the **rept-stat-db** command to either just the EAGLE STP information or just the MPS information. The information is displayed as indicated by the **display** parameter value (**display=version** is not valid for **db=mps**; the command does not display the MPS database versions). The default **db** parameter value is **all**, which displays the information for the STP and MPS databases and cards as indicated by the **display** parameter value.

Output

The report for the specified card is displayed. The report shows that the disk is OFF-LINE indicating the disk has been dismounted. This is not necessarily a problem.

rept-stat-db:loc=1114

CARD/APPL	LOC	C	T	LEVEL	TIME LAST UPDATE	EXCEPTION
TDM-CRNT	1114	-	-	-	-	OFF-LINE
TDM-BKUP	1114	-	-	-	-	-

;

The report for the specified VSCCP (DSM) card used for EPAP or ELAP is displayed. The G-Flex, G-Port, EIR, INP or LNP ELAP Configuration feature is turned on in the system.

rept-stat-db:loc=1201

CARD/APPL	LOC	C	T	LEVEL	TIME LAST UPDATE	EXCEPTION
VSCCP	1201	Y	N	12	02-01-29 08:53:48	-

EAGLE RTDB REPORT

CARD/APPL	LOC	C	BIRTHDATE	LEVEL	EXCEPTION
VSCCP	1201	Y	02-01-29 16:12:50	12345	-

;

The database in the following example has no errors, as indicated by the OK status. The G-Flex, G-Port, EIR, INP, and LNP ELAP Configuration features are not turned on in the system.

rept-stat-db

```
tekelecstp 02-10-29 08:38:25 NZST EAGLE 30.0.0
DATABASE STATUS: >> OK <<
      TDM 1114 ( ACTV )
      C   LEVEL   TIME LAST BACKUP
      - - - - -
FD BKUP Y       11 02-10-29 08:20:13 NZST
FD CRNT Y       11
      MDAL 1117
      - - - - -
RD BKUP Y       1 02-10-24 15:44:20 NZST
```

;

The database in the following example has no errors, as indicated by the OK status. The G-Flex, G-Port, EIR, INP, and LNP ELAP Configuration features are not turned on in the system.

rept-stat-db:display=all

```
tekelecstp 02-10-29 08:39:24 NZST EAGLE 31.0.0
DATABASE STATUS: >> OK <<
      TDM 1114 ( ACTV )
      C   LEVEL   TIME LAST BACKUP
      - - - - -
FD BKUP Y       11 02-10-29 08:20:13 NZST
FD CRNT Y       11
      MDAL 1117
      - - - - -
RD BKUP Y       1 02-10-24 15:44:20 NZST
CARD/APPL  LOC  C  T  LEVEL   TIME LAST UPDATE  EXCEPTION
-----
SS7ANSI    1102 Y  N  11      02-10-29 08:04:00      -
SS7ANSI    1103 Y  N  11      02-10-29 08:04:00      -
VSCCP      1105 Y  N  11      02-10-29 08:04:00      -
```

```

STPLAN      1107  Y  N  11      02-10-29 08:04:00      -
TDM-CRNT    1114  Y  N  11      02-10-29 08:04:00      -
TDM-BKUP     1114  Y  -  11      02-10-29 08:04:00      -
TDM-CRNT    1116  Y  N  11      02-10-29 08:04:00      -
TDM-BKUP     1116  Y  -  11      02-10-29 08:04:00      -
MDAL         1117  Y  -   1      02-10-24 15:06:29  DIFF LEVEL
VSCCP        1201  Y  N  11      02-10-29 08:04:00      -
VSCCP        1203  Y  N  11      02-10-29 08:04:00      -

```

;

The database in the following example has no errors, as indicated by the OK status. The G-Flex, G-Port, EIR, INP, and LNP ELAP Configuration features are not turned on in the system.

NOTE: The rept-stat-db command does not display version information for MPS databases. Use the rept-stat-mps command to display the MPS database version information.

rept-stat-db:display=version

```

tekelecstp 02-10-29 08:51:21 NZST EAGLE 31.0.0
rept-stat-db:display=version
Command entered at terminal #4.
DATABASE STATUS: >> OK <<
      TDM 1114 ( ACTV )      TDM 1116 ( STDBY )
      C  LEVEL    TIME LAST BACKUP      C  LEVEL    TIME LAST BACKUP
-----
FD BKUP Y         11 02-10-29 08:20:13 NZST Y         11 02-10-29 08:20:13 NZST
FD CRNT Y         11
MDAL 1117
-----
RD BKUP Y         1 02-10-24 15:44:20 NZST

```

;

The database in the following example has no errors, as indicated by the OK status. The LNP feature is turned on in the system (see the **enable-ctrl-feat** command).

rept-stat-db:display=version

```

tekelecstp 02-10-29 08:51:21 NZST EAGLE 30.0.0
rept-stat-db:display=version
Command entered at terminal #4.
DATABASE STATUS: >> OK <<
      TDM 1114 ( ACTV )      TDM 1116 ( STDBY )
      C  LEVEL    TIME LAST BACKUP      C  LEVEL    TIME LAST BACKUP
-----
FD BKUP Y         11 02-10-29 08:20:13 NZST Y         11 02-10-29 08:20:13 NZST
FD CRNT Y         11
MDAL 1117
-----
RD BKUP Y         1 02-10-24 15:44:20 NZST
CARD/APPL  LOC  C  T  LEVEL    TIME LAST UPDATE    VERSION STATUS
-----
TDM-CRNT    1114  Y  N  11      02-10-29 08:04:00    111-000-000  NORMAL
LNP
TDM-BKUP    1114  Y  -  11      02-10-29 08:04:00    111-000-000  NORMAL
LNP
TDM-CRNT    1116  Y  N  11      02-10-29 08:04:00    111-000-000  NORMAL
LNP
TDM-BKUP    1116  Y  -  11      02-10-29 08:04:00    111-000-000  NORMAL
LNP
MDAL        1117  Y  -   1      02-10-24 15:06:29    114-000-000  NORMAL
LNP

```

;

The database in the following example has no errors, as indicated by the OK status. The G-Flex, G-Port, EIR, INP, and LNP ELAP Configuration features are not turned on in the system.

rept-stat-db:display=except

tekelecstp 02-10-29 08:55:54 NZST EAGLE 31.0.0

rept-stat-db:display=except

Command entered at terminal #4.

DATABASE STATUS: >> OK <<

TDM 1114 (ACTV)				TDM 1116 (STDBY)			
C	LEVEL	TIME	LAST BACKUP	C	LEVEL	TIME	LAST BACKUP
FD BKUP Y	11	02-10-29 08:20:13	NZST	Y	11	02-10-29 08:20:13	NZST
FD CRNT Y	12			Y	12		
MDAL 1117							

RD BKUP Y	CARD/APPL	LOC	C	T	LEVEL	TIME	LAST UPDATE	EXCEPTION
SS7ANSI	1103	Y	N	10		02-10-29 08:03:48	DIFF	LEVEL
TDM-BKUP	1114	Y	-	11		02-10-29 08:04:00	DIFF	LEVEL
TDM-BKUP	1116	Y	-	11		02-10-29 08:04:00	DIFF	LEVEL
MDAL	1117	Y	-	1		02-10-24 15:06:29	DIFF	LEVEL

;

The database in the following example has no errors, as indicated by the OK status. The LNP ELAP Configuration controlled feature is enabled and turned on (see the **enable-ctrl-feat** command) in the system, and ELAP is being used.

rept-stat-db

tekelecstp 02-10-29 08:39:24 NZST EAGLE 30.0.0

rept-stat-db

Command entered at terminal #4.

DATABASE STATUS: >> OK <<

TDM 1114 (ACTV)				TDM 1116 (STDBY)			
C	LEVEL	TIME	LAST BACKUP	C	LEVEL	TIME	LAST BACKUP
FD BKUP Y	11	02-10-29 08:20:13	NZST	Y	11	02-10-29 08:20:13	NZST
FD CRNT Y	11			Y	11		
MDAL 1117							

RD BKUP Y	C	T	LEVEL	TIME	LAST UPDATE	EXCEPTION
RTDB	Y		02-10-29 08:20:04	12345	-	
RTDB-EAGLE			02-10-29 08:20:04	12345	-	

ELAP A (ACTV)				ELAP B (STDBY)				
C	BIRTHDATE	LEVEL	EXCEPTION	C	BIRTHDATE	LEVEL	EXCEPTION	
RTDB	Y	02-10-29 08:20:04	12345	-	RTDB	Y	02-10-29 08:20:04	12345
RTDB-EAGLE		02-10-29 08:20:04	12345	-	RTDB-EAGLE		02-10-29 08:20:04	12345

;

The database in the following example has no errors, as indicated by the OK status. The LNP ELAP Configuration controlled feature is enabled and turned on (see the **enable-ctrl-feat** command) in the system, and ELAP is being used.

rept-stat-db:display=all

tekelecstp 02-10-29 08:39:24 NZST EAGLE 30.0.0

rept-stat-db:display=all

Command entered at terminal #4.

DATABASE STATUS: >> OK <<

TDM 1114 (ACTV)				TDM 1116 (STDBY)			
C	LEVEL	TIME	LAST BACKUP	C	LEVEL	TIME	LAST BACKUP
FD BKUP Y	11	02-10-29 08:20:13	NZST	Y	11	02-10-29 08:20:13	NZST

```

FD CRNT Y      11                      Y      11
      MDAL 1117
      - - - - -
RD BKUP Y      1 02-10-24 15:44:20 NZST
CARD/APPL LOC C T LEVEL TIME LAST UPDATE EXCEPTION
- - - - -
SS7ANSI 1102 Y N 11 02-10-29 08:04:00 -
SS7ANSI 1103 Y N 11 02-10-29 08:04:00 -
VSCCP 1105 Y N 11 02-10-29 08:04:00 -
STPLAN 1107 Y N 11 02-10-29 08:04:00 -
TDM-CRNT 1114 Y N 11 02-10-29 08:04:00 -
TDM-BKUP 1114 Y - 11 02-10-29 08:04:00 -
TDM-CRNT 1116 Y N 11 02-10-29 08:04:00 -
TDM-BKUP 1116 Y - 11 02-10-29 08:04:00 -
MDAL 1117 Y - 1 02-10-24 15:06:29 DIFF LEVEL
VSCCP 1201 Y N 11 02-10-29 08:04:00 -
VSCCP 1203 Y N 11 02-10-29 08:04:00 -

      ELAP A ( ACTV )
      C BIRTHDATE LEVEL EXCEPTION
      - - - - -
RTDB Y 02-10-29 08:20:04 12345 -
RTDB-EAGLE 02-10-29 08:20:04 12345 -

      ELAP B ( STDBY )
      C BIRTHDATE LEVEL EXCEPTION
      - - - - -
RTDB Y 02-10-29 08:20:04 12345 -
RTDB-EAGLE 02-10-29 08:20:04 12345 -

      EAGLE RTDB REPORT
CARD/APPL LOC C BIRTHDATE LEVEL EXCEPTION
- - - - -
VSCCP 1201 Y 02-10-29 08:20:04 12345 -
VSCCP 1203 Y 02-10-29 08:20:04 12345 -
VSCCP 1105 Y 02-10-29 08:20:04 12345 -

```

The database in the following example has no errors, as indicated by the OK status. The LNP ELAP Configuration controlled feature is enabled and turned on (see the **enable-ctrl-feat** command) in the system, and ELAP is being used.

rept-stat-db:display=except

```

tekelecstp 02-10-29 08:55:54 NZST EAGLE 30.0.0
rept-stat-db:display=except
Command entered at terminal #4.
DATABASE STATUS: >> OK <<

      TDM 1114 ( ACTV )
      C LEVEL TIME LAST BACKUP
      - - - - -
FD BKUP Y      11 02-10-29 08:20:13 NZST Y      11 02-10-29 08:20:13 NZST
FD CRNT Y      12
      MDAL 1117
      - - - - -
RD BKUP Y      1 02-10-24 15:44:20 NZST
CARD/APPL LOC C T LEVEL TIME LAST UPDATE EXCEPTION
- - - - -
SS7ANSI 1103 Y N 10 02-10-29 08:03:48 DIFF LEVEL
TDM-BKUP 1114 Y - 11 02-10-29 08:04:00 DIFF LEVEL
TDM-BKUP 1116 Y - 11 02-10-29 08:04:00 DIFF LEVEL
MDAL 1117 Y - 1 02-10-24 15:06:29 DIFF LEVEL

      ELAP A ( ACTV )
      C BIRTHDATE LEVEL EXCEPTION
      - - - - -
RTDB Y 02-10-29 08:20:04 12345 -
RTDB-EAGLE Y 02-10-29 08:20:04 12345 -

```

```

                                ELAP B ( STDBY )
                                C  BIRTHDATE          LEVEL          EXCEPTION
                                -  - - - - - - - - - - - - - - - - - - -
RTDB                          Y  02-10-29 08:20:04      12345          -
RTDB-EAGLE                    Y  02-10-29 08:20:04      12345          -

                                EAGLE RTDB REPORT
                                CARD/APPL  LOC  C  BIRTHDATE          LEVEL          EXCEPTION
                                -  - - - - - - - - - - - - - - - - - - -
VSCCP                        1203  Y  02-10-29 08:20:04      12340      DIFF LEVEL
;

```

The database in the following example has no errors, as indicated by the OK status. The G-Flex, G-Port, EIR, or INP feature is turned on in the system, and EPAP is being used.

rept-stat-db

```

tekelecstp 02-10-29 08:39:24 NZST EAGLE 31.0.0
rept-stat-db
Command entered at terminal #4.
DATABASE STATUS: >> OK <<
                                TDM 1114 ( ACTV )
                                C  LEVEL      TIME LAST BACKUP
                                -  - - - - - - - - - - - - - - - - - - -
FD BKUP Y                      11 02-10-29 08:20:13 NZST
FD CRNT Y                      11
MDAL 1117
- - - - -
RD BKUP Y                      1 02-10-24 15:44:20 NZST
                                EPAP A ( ACTV )
                                C  BIRTHDATE          LEVEL          EXCEPTION
                                -  - - - - - - - - - - - - - - - - - - -
PDB                          Y  02-10-29 08:20:04      12345          -
RTDB                         Y  02-10-29 08:20:04      12345          -
RTDB-EAGLE                   Y  02-10-29 08:20:04      12345          -
                                EPAP B ( STDBY )
                                C  BIRTHDATE          LEVEL          EXCEPTION
                                -  - - - - - - - - - - - - - - - - - - -
PDB                          Y  02-10-29 08:20:04      12345          -
RTDB                         Y  02-10-29 08:20:04      12345          -
RTDB-EAGLE                   Y  02-10-29 08:20:04      12345          -
;

```

The database in the following example has no errors, as indicated by the OK status. The G-Flex, G-Port, EIR, or INP feature is turned on in the system, and EPAP is being used.

rept-stat-db:display=all

```

tekelecstp 02-10-29 08:39:24 NZST EAGLE 31.0.0
DATABASE STATUS: >> OK <<
                                TDM 1114 ( ACTV )
                                C  LEVEL      TIME LAST BACKUP
                                -  - - - - - - - - - - - - - - - - - - -
FD BKUP Y                      11 02-10-29 08:20:13 NZST
FD CRNT Y                      11
MDAL 1117
- - - - -
RD BKUP Y                      1 02-10-24 15:44:20 NZST
                                CARD/APPL  LOC  C  T  LEVEL      TIME LAST UPDATE  EXCEPTION
                                -  - - - - - - - - - - - - - - - - - - -
SS7ANSI                      1102  Y  N  11      02-10-29 08:04:00      -
SS7ANSI                      1103  Y  N  11      02-10-29 08:04:00      -
STPLAN                       1107  Y  N  11      02-10-29 08:04:00      -
TDM-CRNT                     1114  Y  N  11      02-10-29 08:04:00      -
TDM-BKUP                     1114  Y  -  11      02-10-29 08:04:00      -

```

```

TDM-CRNT 1116 Y N 11 02-10-29 08:04:00 -
TDM-BKUP 1116 Y - 11 02-10-29 08:04:00 -
MDAL 1117 Y - 1 02-10-24 15:06:29 DIFF LEVEL
VSCCP 1201 Y N 11 02-10-29 08:04:00 -
VSCCP 1203 Y N 11 02-10-29 08:04:00 -
      EPAP A ( ACTV )
      C BIRTHDATE LEVEL EXCEPTION
      - - - - -
PDB Y 02-10-29 08:20:04 12345 -
RTDB Y 02-10-29 08:20:04 12345 -
RTDB-EAGLE Y 02-10-29 08:20:04 12345 -
      EPAP B ( STDBY )
      C BIRTHDATE LEVEL EXCEPTION
      - - - - -
PDB Y 02-10-29 08:20:04 12345 -
RTDB Y 02-10-29 08:20:04 12345 -
RTDB-EAGLE Y 02-10-29 08:20:04 12345 -
      EAGLE RTDB REPORT
CARD/APPL LOC C BIRTHDATE LEVEL EXCEPTION
-----
VSCCP 1201 Y 02-10-29 08:20:04 12345 -
VSCCP 1203 Y 02-10-29 08:20:04 12345 -
VSCCP 1105 Y 02-10-29 08:20:04 12345 -
;

```

The database in the following example has no errors, as indicated by the OK status. The G-Flex, G-Port, EIR, or INP feature is turned on in the system, and EPAP is being used.

rept-stat-db:display=except

```

tekelecstp 02-10-29 08:55:54 NZST EAGLE 31.0.0
rept-stat-db:display=except
Command entered at terminal #4.
DATABASE STATUS: >> OK <<
      TDM 1114 ( ACTV )      TDM 1116 ( STDBY )
      C LEVEL TIME LAST BACKUP C LEVEL TIME LAST BACKUP
      - - - - -
FD BKUP Y 11 02-10-29 08:20:13 NZST Y 11 02-10-29 08:20:13 NZST
FD CRNT Y 12 Y 12
      MDAL 1117
      - - - - -
RD BKUP Y 1 02-10-24 15:44:20 NZST
CARD/APPL LOC C T LEVEL TIME LAST UPDATE EXCEPTION
-----
SS7ANSI 1103 Y N 10 02-10-29 08:03:48 DIFF LEVEL
TDM-BKUP 1114 Y - 11 02-10-29 08:04:00 DIFF LEVEL
TDM-BKUP 1116 Y - 11 02-10-29 08:04:00 DIFF LEVEL
MDAL 1117 Y - 1 02-10-24 15:06:29 DIFF LEVEL
      EPAP A ( ACTV )
      C BIRTHDATE LEVEL EXCEPTION
      - - - - -
PDB Y 02-10-29 08:20:04 12345 -
RTDB Y 02-10-29 08:20:04 12345 -
RTDB-EAGLE Y 02-10-29 08:20:04 12345 -
      EPAP B ( STDBY )
      C BIRTHDATE LEVEL EXCEPTION
      - - - - -
PDB Y 02-10-29 08:20:04 12345 -
RTDB Y 02-10-29 08:20:04 12345 -
RTDB-EAGLE Y 02-10-29 08:20:04 12345 -
      EAGLE RTDB REPORT
CARD/APPL LOC C BIRTHDATE LEVEL EXCEPTION
-----
VSCCP 1203 Y 02-10-29 08:20:04 12340 DIFF LEVEL
;

```


The database in the following example has no errors, as indicated by the OK status. The G-Flex, G-Port, EIR, INP, and LNP ELAP Configuration features are not turned on in the system.

rept-stat-db:db=stp

```
tekelecstp 02-10-29 08:39:24 NZST EAGLE 31.0.0
rept-stat-db:db=stp
Command entered at terminal #4.
DATABASE STATUS: >> OK <<
      TDM 1114 ( ACTV )          TDM 1116 ( STDBY)
      C  LEVEL    TIME LAST BACKUP  C  LEVEL    TIME LAST BACKUP
      - - - - -
FD BKUP Y        11 02-10-29 08:20:13 NZST Y        11 02-10-29 08:20:13 NZST
FD CRNT Y        11
MDAL 1117
- - - - -
RD BKUP Y        1 02-10-24 15:44:20 NZST
;
```

The database in the following example has no errors, as indicated by the OK status. The G-Flex, G-Port, EIR, INP, and LNP ELAP Configuration features are not turned on in the system.

rept-stat-db:display=all:db=stp

```
tekelecstp 02-10-29 08:39:24 NZST EAGLE 31.0.0
rept-stat-db:display=all:db=stp
Command entered at terminal #4.
DATABASE STATUS: >> OK <<
      TDM 1114 ( ACTV )          TDM 1116 ( STDBY)
      C  LEVEL    TIME LAST BACKUP  C  LEVEL    TIME LAST BACKUP
      - - - - -
FD BKUP Y        11 02-10-29 08:20:13 NZST Y        11 02-10-29 08:20:13 NZST
FD CRNT Y        11
MDAL 1117
- - - - -
RD BKUP Y        1 02-10-24 15:44:20 NZST
CARD/APPL  LOC  C  T  LEVEL          TIME LAST UPDATE  EXCEPTION
- - - - -
SS7ANSI    1102 Y  N  11             02-10-29 08:04:00      -
SS7ANSI    1103 Y  N  11             02-10-29 08:04:00      -
VSCCP      1105 Y  N  11             02-10-29 08:04:00      -
STPLAN     1107 Y  N  11             02-10-29 08:04:00      -
TDM-CRNT   1114 Y  N  11             02-10-29 08:04:00      -
TDM-BKUP   1114 Y  -  11             02-10-29 08:04:00      -
TDM-CRNT   1116 Y  N  11             02-10-29 08:04:00      -
TDM-BKUP   1116 Y  -  11             02-10-29 08:04:00      -
MDAL       1117 Y  -  1             02-10-24 15:06:29  DIFF LEVEL
VSCCP      1201 Y  N  11             02-10-29 08:04:00      -
VSCCP      1203 Y  N  11             02-10-29 08:04:00      -
;
```

The database in the following example has no errors, as indicated by the OK status. The G-Flex, G-Port, EIR, INP, and LNP ELAP Configuration features are not turned on in the system.

rept-stat-db:display=except:db=stp

```
tekelecstp 02-10-29 08:55:54 NZST EAGLE 31.0.0
rept-stat-db:display=except:db=stp
Command entered at terminal #4.
DATABASE STATUS: >> OK <<
      TDM 1114 ( ACTV )          TDM 1116 ( STDBY)
      C  LEVEL    TIME LAST BACKUP  C  LEVEL    TIME LAST BACKUP
      - - - - -
FD BKUP Y        11 02-10-29 08:20:13 NZST Y        11 02-10-29 08:20:13 NZST
FD CRNT Y        12
MDAL 1117
- - - - -
```

```

RD BKUP Y      1 02-10-24 15:44:20 NZST
CARD/APPL LOC C T LEVEL TIME LAST UPDATE EXCEPTION
-----
SS7ANSI 1103 Y N 10      02-10-29 08:03:48 DIFF LEVEL
TDM-BKUP 1114 Y - 11      02-10-29 08:04:00 DIFF LEVEL
TDM-BKUP 1116 Y - 11      02-10-29 08:04:00 DIFF LEVEL
MDAL     1117 Y - 1       02-10-24 15:06:29 DIFF LEVEL

```

;

The LNP ELAP Configuration controlled feature is enabled and turned on (see the **enable-ctrl-feat** command) in the system, and ELAP is being used.

rept-stat-db:db=mps

```
tekelecstp 02-10-29 08:55:54 NZST EAGLE 30.0.0
```

```
rept-stat-db:db=mps
```

```
Command entered at terminal #4.
```

```

ELAP A ( ACTV )
C BIRTHDATE LEVEL EXCEPTION
-----
RTDB Y 02-10-29 08:20:04 12345 -
RTDB-EAGLE 02-10-29 08:20:04 12345 -
ELAP B ( STDBY )
C BIRTHDATE LEVEL EXCEPTION
-----
RTDB Y 02-10-29 08:20:04 12345 -
RTDB-EAGLE 02-10-29 08:20:04 12345 -

```

;

The LNP ELAP Configuration controlled feature is enabled and turned on (see the **enable-ctrl-feat** command) in the system, and ELAP is being used. Card 1203 indicates a value 12 in the exception column. The value indicates the number of times that the Corruption Cross Correction function has corrected the card during the time that the card has been in service. More specifically, the card has encountered 12 corrupted records and has subsequently repaired them. This value persists until the card is reset.

rept-stat-db:display=all:db=mps

```
tekelecstp 02-10-29 08:55:54 NZST EAGLE 31.6.0
```

```
rept-stat-db:display=all:db=mps
```

```
Command entered at terminal #4.
```

```

ELAP A ( ACTV )
C BIRTHDATE LEVEL EXCEPTION
-----
RTDB Y 02-10-29 08:20:04 12345 -
RTDB-EAGLE 02-10-29 08:20:04 12345 -
ELAP B ( STDBY )
C BIRTHDATE LEVEL EXCEPTION
-----
RTDB Y 02-10-29 08:20:04 12345 -
RTDB-EAGLE 02-10-29 08:20:04 12345 -
EAGLE RTDB REPORT
CARD/APPL LOC C BIRTHDATE LEVEL EXCEPTION IN-SRVC
-----
VSCCP 1201 Y 02-10-29 08:20:04 12345 - 10d 23h 21m
VSCCP 1203 Y 02-10-29 08:20:04 12345 12 10d 23h 21m
VSCCP 1105 Y 02-10-29 08:20:04 12345 - 5d 3h 1m

VSCCP 1201 Y 02-10-29 08:20:04 12345 -
VSCCP 1203 Y 02-10-29 08:20:04 12345 -
VSCCP 1105 Y 02-10-29 08:20:04 12345 -

```

;

;

The LNP ELAP Configuration controlled feature is enabled and turned on (see the **enable-ctrl-feat** command) in the system, and ELAP is being used.

rept-stat-db:display=except:db=mps

tekelecstp 02-10-29 08:55:54 NZST EAGLE 31.6.0

rept-stat-db:display=all:db=mps

Command entered at terminal #4.

```

          ELAP A ( ACTV )
            C BIRTHDATE          LEVEL          EXCEPTION
            - - - - -
RTDB          Y 02-10-29 08:20:04      12345          -
RTDB-EAGLE    Y 02-10-29 08:20:04      12345          -

          ELAP B ( STDBY )
            C BIRTHDATE          LEVEL          EXCEPTION
            - - - - -
RTDB          Y 02-10-29 08:20:04      12345          -
RTDB-EAGLE    Y 02-10-29 08:20:04      12345          -

          EAGLE RTDB REPORT
CARD/APPL LOC C BIRTHDATE          LEVEL          EXCEPTION      IN-SRVC
-----
VSCCP      1203 Y 02-10-29 08:20:04      12340      DIFF LEVEL      10d 23h 21m
;

```

The G-Flex, G-Port, EIR, or INP feature is turned on in the system, and EPAP is being used.

rept-stat-db:db=mps

tekelecstp 02-10-29 08:55:54 NZST EAGLE 31.0.0

rept-stat-db:db=mps

Command entered at terminal #4.

```

          EPAP A ( ACTV )
            C BIRTHDATE          LEVEL          EXCEPTION
            - - - - -
PDB          Y 02-10-29 08:20:04      12345          -
RTDB          Y 02-10-29 08:20:04      12345          -
RTDB-EAGLE    Y 02-10-29 08:20:04      12345          -

          EPAP B ( STDBY )
            C BIRTHDATE          LEVEL          EXCEPTION
            - - - - -
PDB          Y 02-10-29 08:20:04      12345          -
RTDB          Y 02-10-29 08:20:04      12345          -
RTDB-EAGLE    Y 02-10-29 08:20:04      12345          -
;

```

The G-Flex, G-Port, EIR, or INP feature is turned on in the system, and EPAP is being used.

rept-stat-db:display=all:db=mps

tekelecstp 02-10-29 08:55:54 NZST EAGLE 31.6.0

rept-stat-db:display=all:db=mps

Command entered at terminal #4.

```

          EPAP A ( ACTV )
            C BIRTHDATE          LEVEL          EXCEPTION
            - - - - -
PDB          Y 02-10-29 08:20:04      12345          -
RTDB          Y 02-10-29 08:20:04      12345          -
RTDB-EAGLE    Y 02-10-29 08:20:04      12345          -

          EPAP B ( STDBY )
            C BIRTHDATE          LEVEL          EXCEPTION
            - - - - -
PDB          Y 02-10-29 08:20:04      12345          -
RTDB          Y 02-10-29 08:20:04      12345          -
RTDB-EAGLE    Y 02-10-29 08:20:04      12345          -

```

```

          EAGLE RTDB REPORT
CARD/APPL LOC C BIRTHDATE LEVEL EXCEPTION IN-SRVC
-----
VSCCP      1201 Y 02-10-29 08:20:04 12345 - 10d 23h 21m
VSCCP      1203 Y 02-10-29 08:20:04 12345 - 10d 23h 21m
VSCCP      1105 Y 02-10-29 08:20:04 12345 - 5d 3h 1m
;

```

The G-Flex, G-Port, EIR, or INP feature is turned on in the system, and EPAP is being used.

rept-stat-db:display=except:db=mps

```

tekelecstp 02-10-29 08:55:54 NZST EAGLE 31.6.0
rept-stat-db:display=except:db=mps
Command entered at terminal #4.

```

```

          EPAP A ( ACTV )
          C BIRTHDATE LEVEL EXCEPTION
          - - - - -
PDB          Y 02-10-29 08:20:04 12345 -
RTDB         Y 02-10-29 08:20:04 12345 -
RTDB-EAGLE   Y 02-10-29 08:20:04 12345 -

```

```

          EPAP B ( STDBY )
          C BIRTHDATE LEVEL EXCEPTION
          - - - - -
PDB          Y 02-10-29 08:20:04 12345 -
RTDB         Y 02-10-29 08:20:04 12345 -
RTDB-EAGLE   Y 02-10-29 08:20:04 12345 -

```

```

          EAGLE RTDB REPORT
CARD/APPL LOC C BIRTHDATE LEVEL EXCEPTION IN-SRVC
-----
VSCCP      1203 Y 02-10-39 08:20:04 12340 DIFF LEVEL 10d 23h 21m
;

```

Legend

DATABASE STATUS—An indication of any database alarms on the MASP. This indicator is not used with the **loc** parameter output.

>> **OK**<<—There are no database alarms

>>**NOT OK**<<—Database alarms are present

(ACTV MASP)—The specified MASP is the active processor. This is not used with the **loc** parameter output.

(STDBY MASP)—The specified MASP is the standby processor. This is not used with the **loc** parameter output.

(NOACCS)—The specified processor is not accessible. This is not used with the **loc** parameter output.

C—An indicator of whether the database is coherent.

LEVEL—The number of updates made to the database partitions.

TIME LAST BACKUP—The date and time the last change was performed on the removable cartridges (if inserted) and the backup partition of the fixed disk. This field is not used with the **loc** parameter output.

RD BKUP—Removable cartridge backup partition.

FD BKUP—Fixed disk backup partition.

FD CRNT—Fixed disk current partition. This field is not used with the **loc** parameter output.

DIFF CONTENTS—The specified database's contents are different when compared to the other database in that partition.

DIFF LEVEL—The specified database's level does not match the level of the current partition of the active fixed disk (**FD CRNT**).

DIFF TIME—The specified database's level matches the level of the current partition of the active fixed disk (**FD CRNT**), but the time that the database was updated, when compared to the current partition of the active fixed disk (**FD CRNT**), is different. This exception indicator appears only if the time and date stamp in an update packet or in memory becomes corrupted.

CORRUPTED—The specified database is corrupted.

INCOHERENT—The specified database is incoherent.

EXCEPTION—The following values can appear:

- The condition of the specified database with which the system has detected a problem. These conditions are: **DIFF CONTENTS**, **DIFF LEVEL**, **DIFF TIME**, **CORRUPTED**, and **INCOHERENT**. A “-” indicates that the database was not accessible. A blank entry indicates that the database has no problems. This field is used with the **display=except**, **display=all**, and **loc** parameter outputs.
- A value that indicates the number of times that the Corruption Cross Correction function has corrected the card during the time that the card has been in service. This value persists until the card is reset.

IN-SRVC—The length of time that the card has been in service.

CARD/APPL—The card type or the application assigned to the card specified in the **LOC** field. This field is not used with the **display=brief** (default) parameter output.

TDM-BKUP—Backup partition on the fixed disk on the TDM.

TDM-CRNT—Current partition on the fixed disk on the TDM.

LOC—The card location of the database. This field is not used with the **display=brief** (default) parameter output.

T—An indicator of whether the specified database is in transition. A database is in transition when the database for the link interface module (LIM) or TSM is in the process of being loaded with the new screen set information after an update to the database, and the database has not reached the current reported database level. This field is not used with the **display=brief** (default) parameter output.

TIME LAST BACKUP—The date and time the last change was performed on the specified card and its associated database. A dash (–) in this field for the fixed drive (FD) or removable drive (RD) indicates that no backup has been created on that drive. This field is not used with the **display=brief** (default) parameter output.

VERSION—The version number of each database (including the LNP database if the LNP feature is on).

xxx-xxx-xxx—The version number of the database.

UNKNOWN—The **rept-stat-db** command can show the version number only for a database that is version 20.0.0 or later. Any database version that is earlier than version 20.0.0 cannot be determined and UNKNOWN is displayed for the database version number.

A dash “-” —The database is not available. This field is used only with the **display=version** parameter output.

STATUS—The operational status of the database version. This field is used only with the **display=version** parameter output.

NORMAL—The database version is fully operational.

Blank entry—A blank entry indicates that the database is not available or is unknown. A numeric value indicates that the database is invalid. The value displayed is the status value found in the field and is for diagnostic purposes.

BIRTHDATE—The date and time of creation for the database.

EPAP A (ACTV)—The active EAGLE Provisioning Application Processor. This section of the report appears only if the G-Port, G-Flex, EIR, or INP features are turned on.

PDB—The provisioning database status information.

RTDB—The provisioning database status information that was used to create the resident real-time database. The RTDB information may be different than the PDB information if the PDB has been reloaded, or if the RTDB has not been loaded from the PDB. If the RTDB birthdate is different than the PDB or if the level is too old to be able to resynchronize the databases, then a "Reload Required" alarm is generated.

RTDB-EAGLE—The EPAP resident real-time database status information. This database is downloaded to DSM cards. If the birthdate or level do not match the DSM card, then the DSM card generates an alarm. The RTDB database is reloaded from the PDB, and the birthdate and level are reset and do not match the database status information. This database status mismatch condition indicates an abnormal condition that requires DSM cards to be reloaded.

EPAP B (STDBY)—The standby EAGLE Provisioning Application Processor. This section of the report appears only if the G-Port, G-Flex, EIR, or INP features are turned on.

PDB—The provisioning database status information.

RTDB—The provisioning database status information that was used to create the resident real-time database. The RTDB information may be different than the PDB information if the PDB has been reloaded, or if the RTDB has not been loaded from the PDB. If the RTDB birthdate is different than the PDB or if the level is too old to be able to resynchronize the databases, then a "Reload Required" alarm is generated.

RTDB-EAGLE—The EPAP resident real-time database status information. This database is downloaded to DSM cards. If the birthdate or level do not match the DSM card, then the DSM card generates an alarm. The RTDB database is reloaded from the PDB, and the birthdate and level are reset and do not match the database status information. This database status mismatch condition indicates an abnormal condition that requires DSM cards to be reloaded.

ELAP A (ACTV)—The active EAGLE LNP Application Processor. This section of the report appears only if the LNP ELAP Configuration controlled feature (see the **enable-ctrl-feat** command) is turned on.

RTDB-EAGLE—The ELAP resident real-time database status information. This database is downloaded to DSM cards. If the birthdate or level do not match the DSM card, then the DSM card generates an alarm.

TIME LAST UPDATE—The date and time of the last update of the RTDB database from the LSMS.

ELAP B (STDBY)—The standby EAGLE LNP Application Processor. This section of the report appears only if the LNP ELAP Configuration controlled feature (see the **enable-ctrl-feat** command) is turned on.

RTDB-EAGLE—The ELAP resident real-time database status information. This database is downloaded to DSM cards. If the birthdate or level do not match the DSM card, then the DSM card generates an alarm.

TIME LAST UPDATE—The date and time of the last update of the RTDB database from the LSMS.

rept-stat-dlk

Report Status Data Link

Use this command to show the status of the TCP/IP data links. The secondary state (SST) of the TCP/IP data links shows whether the link is available, unavailable, or manually removed from service.

Keyword: **rept-stat-dlk**

Related Commands: **act-dlk, canc-dlk, dlt-dlk, ent-dlk, rtrv-dlk, tst-dlk**

Command Class: System Maintenance

Parameters

:loc= (optional)

The card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Default: All data links are shown.

Example

rept-stat-dlk

rept-stat-dlk:loc=1104

Dependencies

No other **rept-stat-xxx** command can be in progress when this command is entered.

The ACM is the only valid card type for this command.

The shelf and card must be equipped.

The specified card must have a TCP/IP data link assigned to it.

Only one data link port on the ACM is supported. Reports are generated only on port A of the card.

Notes

None

Output**rept-stat-dlk**

```

rlghncxa03w 04-02-27 17:00:36 EST   EAGLE 31.3.0
DLK          PST          SST          AST
1104         IS-NR        Avail        ----
1206         IS-NR        Avail        ALMINH
Command Completed.

```

;

rept-stat-dlk:loc=1104

```

rlghncxa03w 04-02-27 17:00:36 EST   EAGLE 31.3.0
DLK          PST          SST          AST
1104         IS-NR        Avail        ----
ALARM STATUS      = No Alarms.
Command Completed.

```

;

Legend

DLK—The card location of the TCP/IP data link

PST—The primary state of the TCP/IP data link. The possible values are described in "Possible Values for PST/SST/AST".

SST—The secondary state of the TCP/IP data link. The possible values are described in "Possible Values for PST/SST/AST".

AST—The associated state of the TCP/IP data link. The possible values are described in "Possible Values for PST/SST/AST".

rept-stat-dstn**Report Status Destination**

Use this command to generate a report of the MTP point code status for provisioned point codes. Any provisioned destination can be specified, including a cluster destination (*ni-nc-**) or a network destination (*ni-*-**).

Keyword: **rept-stat-dstn**

Related Commands: **chg-dstn, chg-rte, dlt-dstn, dlt-rte, ent-dstn, ent-rte, rept-stat-rte, rtrv-dstn, rtrv-rte**

Command Class: System Maintenance

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:dpc= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: **dpca**

Range: **p-, 000-255, *, **, *****

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

The asterisk values *****, ******, and ******* are not valid for the *ni* subfield.

If ****** or ******* is specified for the *nc* subfield, either *****, ******, or ******* must be specified for the *ncm* subfield.

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

When **chg-sid:pctype=ansi** is specified, *ni*-*-*** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:dpc/dpca/dpci/dpcn/dpcn24= (optional)

Destination point code.

:dpci= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:dpcn= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:dpcn24= (optional)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:mode= (optional)

The type of display to produce. This parameter displays the point code's subsystem status along with the normal output.

Range: **full, rtx**

full— Comprehensive display of point code status, including rtx. If entered with a point code, status for that point code is displayed, including each route in the associated routeset. If specified without a point code, the status of all routesets is displayed.

rtx— Displays exception route status, other than circular routing, if the Origin-based MTP Routing feature is on.

Default: A summary report is displayed.

:stat= (optional)

The primary state filter. This parameter lets you choose the state of the destination for which you want a report. In other words, if you want a report for all destinations whose state is DSBLD, specify **:stat=dsbld**.

Range: **all, alminh, anr, dsbld, mt, nr**

all— All of the primary states

alminh— Alarms inhibited

anr— In service abnormal (IS-ANR)

dsbld— Out of service maintenance disabled (OOS-MT-DSBLD)

mt— Out of service maintenance (OOS-MT)

nr— In service normal (IS-NR)

Default: **all**

Example

```
rept-stat-dstn
rept-stat-dstn:dpci=2-004-1:mode=full
rept-stat-dstn:dpc=9-3-6:mode=full
rept-stat-dstn:dpc=9-3-*:mode=full
rept-stat-dstn:dpc=9-3-*
rept-stat-dstn:dpc=9-3-**
rept-stat-dstn:dpc=9-3-***
rept-stat-dstn:dpc=9-3-***:stat=mt
rept-stat-dstn:dpc:9-4-***:stat=alminh
rept-stat-dstn:dpc=9-3-*:mode=rtx
rept-stat-dstn:mode=full
rept-stat-dstn:mode=rtx
```

Dependencies

No other **rept-stat-xxx** command can be in progress when this command is entered.

If a **dpc** parameter is specified, it must be the true destination point code (not an alias) and it must be defined in the database.

A summary report is displayed if the **stat** parameter is specified.

The **stat** parameter can be specified with the **dpc** parameter only if the **dpc** parameter specifies one of the *ni-nc-** formats.

An x-list DPC cannot be specified in the **dpc** parameter.

If the **dpcn** parameter is specified, its format must match the format that was assigned with the **chg-stpopts:npcfmt** parameter.

The **mode=rtx** parameter cannot be specified unless the Origin-Based MTP Routing feature is enabled and on.

Notes

This command can be canceled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

This command does not report the x-list point codes. Use the **rept-stat-cluster** command for a report of x-list point codes.

If the **mode=rtx** parameter is specified with a specific DPC, additional linkset, route and exception route information associated with the specified DPC is displayed.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (**s-**) and the private and spare point code subtype prefix (**ps-**). All of the point code types support the private (internal) point code subtype prefix (**p-**).

Table 5-63 provides a summary description of the reports that are produced by the various DPC parameter syntaxes.

Table 5-63. Summary of DPC Parameter Syntaxes

DPC format	Meaning
rept-stat-dstn:dpc=ni-nc-ncm	Requests a report for fully provisioned destination <i>ni-nc-ncm</i> .
rept-stat-dstn:dpc= ni-*-*	Requests a report for provisioned network destination with the specified network indicator. Note that if * is specified in the <i>nc</i> field, * must be specified in the <i>ncm</i> field.
rept-stat-dstn:dpc= ni-**-*	Requests a report for the full network cluster for the specified <i>ni</i> .
rept-stat-dstn:dpc= ni-***-*	Requests a report for the full network cluster and the network cluster address (if any) for the specified <i>ni</i> .
rept-stat-dstn:dpc= ni-nc-*	Requests a report for provisioned cluster destination <i>ni-nc-*</i> .
rept-stat-dstn:dpc= ni-nc-**	Requests a report showing all destinations whose network (<i>ni</i>) and cluster (<i>nc</i>) components match those specified. Note, however, that the network cluster address on <i>ni-nc-*</i> (if it exists) is not reported.
rept-stat-dstn:dpc= ni-nc-***	Requests a report showing all destinations whose network (<i>ni</i>) and cluster (<i>nc</i>) components match those specified. The network cluster address <i>ni-nc-*</i> (if it exists) is also reported.
rept-stat-dstn:dpcn24=msa-ssa-sp	Requests a report for fully provisioned 24-bit destination <i>main signaling area-sub signaling area-signaling point</i> .

If the **mode=rtx** parameter is specified without a specific DPC, then status is provided for all exception route sets.

If the **mode=full** parameter is specified with a specific DPC, additional linkset, route and exception route information associated with the specified destination is displayed, along with information that can be used to correct circular routing. If the **mode=full** parameter is specified without a specific DPC, then status provided for all regular and exception route sets.

Output

If the **dpc** parameter is not specified:

- If the **mode** parameter is not specified, the command output lists the status of all provisioned DPCs (route sets) in the system,
- If the **mode=rtx** parameter is specified, the command output lists the status of only those DPCs against which exception routes have been provisioned, and the status of the provisioned exception route sets associated with each DPCs.
- If the **mode=full** parameter is specified, the command output lists the status of all provisioned DPCs in the system, and the status of the provisioned exception route sets, if any, associated with each DPC.

If the **dpc** parameter is specified:

- If the **mode** parameter is not specified, the command output lists the status of all provisioned routes in the route set specified by that DPC.
- If the **mode=rtx** parameter is specified, the command output lists the status of all provisioned routes in the route set specified by that DPC, and the status of all provisioned exception route sets associated with that DPC.
- If the **mode=full** parameter is specified, the command output lists the status of all provisioned routes in the route set specified by that DPC, the status of all provisioned exception route sets associated with that DPC, any aliases associated with that DPC, and circular routing alarm information if any for that DPC.

The following example shows a private adjacent point code:

rept-stat-dstn:mode=full:dpc=1-1-2

```
rlghncxa03w 05-01-07 13:30:00 EST EAGLE 31.12.0
DPCA          PST          SST          AST
001-001-002    00S-MT      Idle         INACCESS
ALARM STATUS
= No Alarms.
RTE COST  LSN          APCA          LS STAT  NON-ADJ  ROUTE STAT
1   01   ls11234567    001-001-002  Prohibit Allowed  Prohibit
2   02   ls12345678    p-001-001-002 Prohibit Allowed  Prohibit
3   --   -----      -***-***-***  -----  -----  -----
4   --   -----      -***-***-***  -----  -----  -----
5   --   -----      -***-***-***  -----  -----  -----
6   --   -----      -***-***-***  -----  -----  -----
SSN  SUBSYSTEM STATUS

ALIASA      ALIASN      ALIASI
000-000-001 -----
CIRCULAR ROUTING INFO:
XMIT LSN=----- RC=--
RCV  LSN=-----
MEMBER =-----
Command Completed.
;
```

The following example shows how, when no parameters are specified, summary information for all provisioned cluster and noncluster DPCs is reported.

rept-stat-dstn

```
rlghncxa03w 04-07-07 14:59:11 EST EAGLE 31.9.0
DPCA          PST          SST          AST
```

```

009-000-000      IS-ANR      Allowed  ACCESS
009-003- *      IS-ANR      Allowed  ACCESS
009-003-006      OOS-MT      Prohibit  INACCESS
009-003-001      IS-NR      Allowed  ACCESS
009-003-002      IS-NR      Allowed  ACCESS
009-003-003      OOS-MT      Prohibit  INACCESS
009-004-006      IS-NR      Allowed  ALMINH
004-002-002      IS-NR      Allowed  ACCESS
006-000-000      IS-ANR      Allowed  ACCESS
007-001-001      IS-NR      Allowed  ACCESS
101-033- *      IS-NR      Allowed  ACCESS

DPCI             PST         SST      AST
2-004-1          IS-NR      Allowed  ACCESS
2-004-3          IS-ANR      Allowed  ACCESS
2-004-2          IS-ANR      Allowed  ACCESS
2-004-4          IS-NR      Allowed  ACCESS

DPCN             PST         SST      AST
02096           IS-NR      Allowed  ACCESS
02097           IS-ANR      Allowed  ACCESS
02098           OOS-MT      Prohibit  INACCESS
02099           OOS-MT      Prohibit  INACCESS
Command Completed.
;

```

The following example shows that specifying a cluster destination on the **dpc** parameter shows the cluster status and routeset information. Note that information on cluster members (both provisioned and x-list) is not shown. Use **rept-stat-cluster** to obtain this information.

rept-stat-dstn:dpc=9-3-*

```

rlghncxa03w 04-07-07 14:59:11 EST  EAGLE 31.
DPCA             PST         SST      AST
009-003- *      IS-NR      Allowed  ACCESS
ALARM STATUS    = No Alarms.
RTE  COST  LSN  APCA      LS STAT  NON-ADJ  ROUTE STAT
1   10  lsnstpa  042-036-123  Allowed  Allowed  Allowed
2   20  lsnstpb  092-240-103  Allowed  Allowed  Allowed
3   30  lsnstpc  128-101-022  Allowed  Allowed  Allowed
4   --  -----  ***_***_***  -----  -----  -----
5   --  -----  ***_***_***  -----  -----  -----
6   --  -----  ***_***_***  -----  -----  -----
;

```

The following example shows how specifying either an FPC or cluster destination for which circular routing has been detected, along with the **mode=full** parameter, displays the name of the linkset on which the circular routing test message was transmitted. It also displays the linkset on which the circularly routed message was received. This information may be useful in correcting the circular routing situation.

rept-stat-dstn:dpc=9-3-6:mode=full

```

rlghncxa03w 04-07-07 14:59:11 EST  EAGLE 31.9.0
DPCA             PST         SST      AST
009-003-006      OOS-MT      Prohibit  INACCESS
ALARM STATUS    = = *C  xxxx Circular routing detected
RTE  COST  LSN  APCA      LS STAT  NON-ADJ  ROUTE STAT
1   10  lsnstpa  042-036-123  Allowed  Allowed  Allowed
2   20  lsnstpb  092-240-103  Allowed  Allowed  Allowed
3   30  lsnstpc  128-101-022  Allowed  Allowed  Allowed
4   --  -----  ***_***_***  -----  -----  -----
5   --  -----  ***_***_***  -----  -----  -----
6   --  -----  ***_***_***  -----  -----  -----

```

```

SSN    SUBSYSTEM STATUS

ALIASA      ALIASN      ALIASI
-----
CIRCULAR ROUTING
  XMIT LSN= lsnstpb
  RCV  LSN= lsn01a
  MEMBER= ***_***_***
Command Completed.

```

The following example shows a typical report when a cluster destination and **mode=full** was specified. The interpretation of the circular routing status for cluster destinations is slightly different from an FPC's.

rept-stat-dstn:dpc=9-3-*:mode=full

```

rlghncxa03w 04-07-07 14:59:11 EST EAGLE 31.9.0
DPCA          PST          SST          AST
009-003-*     IS-NR        Allowed    ACCESS
ALARM STATUS   = *C xxxx Circular routing detected
RTE COST  LSN      APCA          LS STAT  NON-ADJ  ROUTE STAT
1   10   lsnstpa   042-036-123  Allowed   Allowed   Allowed
2   20   lsnstpb   092-240-103  Allowed   Allowed   Allowed
3   30   lsnstpc   128-101-022  Allowed   Allowed   Allowed
4   --   -----   ***_***_***  -----   -----   -----
5   --   -----   ***_***_***  -----   -----   -----
6   --   -----   ***_***_***  -----   -----   -----
SSN    SUBSYSTEM STATUS
ALIASA      ALIASN      ALIASI
-----
CIRCULAR ROUTING INFO:
  XMIT LSN=lsnstpb  RC=20
  RCV  LSN=lsn01a
  MEMBER= 009-003-006
Command Completed.
;

```

The following example shows how **rept-stat-dstn** displays the circular routing alarm for a cluster destination. Note that a circular routing alarm for a cluster destination indicates that circular routing was detected for a member of the cluster, but no x-list entry could be created for that cluster. Note, also, that circular routing detected on a cluster destination does not automatically force the output to display the status of the cluster as “OOS-MT Prohibit INACCESS” as it does for an FPC destination.

rept-stat-dstn:dpc=9-3-*

```

rlghncxa03w 04-07-07 14:59:11 EST EAGLE 31.9.0
DPCA          PST          SST          AST
009-003-*     IS-NR        Allowed    ACCESS
ALARM STATUS   = *C xxxx Circular routing detected
RTE COST  LSN      APCA          LS STAT  NON-ADJ  ROUTE STAT
1   10   lsnstpa   042-036-123  Allowed   Allowed   Allowed
2   20   lsnstpb   092-240-103  Allowed   Allowed   Allowed
3   30   lsnstpc   128-101-022  Allowed   Allowed   Allowed
4   --   -----   ***_***_***  -----   -----   -----
5   --   -----   ***_***_***  -----   -----   -----
6   --   -----   ***_***_***  -----   -----   -----
Command Completed.
;

```

The following example shows how **rept-stat-dstn** displays a subsystem information header but no subsystem information, just as it would if an FPC is specified for which no subsystems are defined. In addition, because aliases cannot be defined for cluster destinations, this report shows only an empty header, just as it does when an FPC is specified for which no aliases are defined. Note that the circular

routing information portion of the **mode=full** report displays “-----” for the linkset names when no circular routing condition exists for the DPC.

rept-stat-dstn:dpc=9-3-*:mode=full

```
rlghncxa03w 04-07-07 14:59:11 EST EAGLE 31.9.0
DPCA          PST          SST          AST
009-003-*     IS-NR        Allowed     ACCESS
ALARM STATUS   = No Alarms.
RTE COST  LSN      APCA          LS STAT  NON-ADJ  ROUTE STAT
1*  10  lsnstpa  042-036-123  Allowed  Allowed  Allowed
2   20  lsnstpb  092-240-103  Allowed  Allowed  Allowed
3   30  lsnstpc  128-101-022  Allowed  Allowed  Allowed
4   --  -----  ***_***_***  -----  -----  -----
5   --  -----  ***_***_***  -----  -----  -----
6   --  -----  ***_***_***  -----  -----  -----
SSN    SUBSYSTEM STATUS

ALIASA          ALIASN          ALIASI
-----

CIRCULAR ROUTING
XMIT LSN= -----
RCV  LSN= -----
MEMBER= ***_***_***
Command Completed.
;
```

The following example shows how specifying the **stat** parameter along with the **ni-nc-***** or **ni-nc-***** DPC formats causes the output summary report to include only those destinations whose status matches the state specified.

rept-stat-dstn:dpc=9-4-***:stat=alminh

```
rlghncxa03w 04-02-31 13:30:00 EST EAGLE 31.9.0
DPCA          PST          SST          AST
009-004-006   IS-NR        Allowed     ALMINH
Command Completed.
;
```

The following example shows a retrieval specifying an ITU national point code where the **chg-stpopts:npcfmti** parameter has been set to **1-1-1-11**:

rept-stat-dstn:dpcn=1-1-1-1000

```
rlghncxa03w 04-02-31 13:30:00 EST EAGLE 31.3.0
CAUTION : Node isolated...route status out of date!
DPCN          PST          SST          AST
1-1-1-1000    OOS-MT        Prohibit   INACCESS
ALARM STATUS   = *C 0313 DPC is prohibited
RTE COST  LSN      APCN          LS STAT  NON-ADJ  ROUTE STAT
1   10  lsitu    1-1-1-1000  Prohibit  Allowed  Prohibit
2   --  -----  ***_***_***  -----  -----  -----
3   --  -----  ***_***_***  -----  -----  -----
4   --  -----  ***_***_***  -----  -----  -----
5   --  -----  ***_***_***  -----  -----  -----
6   --  -----  ***_***_***  -----  -----  -----
Command Completed.
;
```

The asterisks in the space after the route numbers in the following examples indicate which route (or combined route) is carrying traffic.

rept-stat-dstn:dpc=1-1-1

```

tekelecstp 04-09-24 09:19:04 EST EAGLE 31.9.0
DPCA          PST          SST          AST
001-001-001   IS-NR        Allowed    ACCESS
ALARM STATUS   = No Alarms.
RTE COST  LSN          APCA          LS STAT  NON-ADJ  ROUTE STAT
1*  05    lse1e1       001-001-001   Allowed  Allowed  Allowed
2*  05    lse1e2       001-002-001   Allowed  Allowed  Allowed
3   10    lse1e3       001-003-001   Allowed  Allowed  Allowed
4   --    -----     ***_***_***   -----  -----  -----
5   --    -----     ***_***_***   -----  -----  -----
6   --    -----     ***_***_***   -----  -----  -----

```

Command Completed.

;

No asterisk appears after the route number in the following example; no routes were carrying traffic at the time.

rept-stat-dstn:dpc=1-1-1

```

tekelecstp 04-09-24 09:19:04 EST EAGLE 31.9.0
DPCA          PST          SST          AST
001-001-001   OOS-MT       Prohibit  INACCESS
ALARM STATUS   = *C 0313 DPC is prohibited
RTE COST  LSN          APCA          LS STAT  NON-ADJ  ROUTE STAT
1   05    lse1e1       001-001-001   Prohibit  Allowed  Prohibit
2   05    lse1e2       001-002-001   Prohibit  Allowed  Prohibit
3   10    lse1e3       001-003-001   Prohibit  Allowed  Prohibit
4   --    -----     ***_***_***   -----  -----  -----
5   --    -----     ***_***_***   -----  -----  -----
6   --    -----     ***_***_***   -----  -----  -----

```

Command Completed.

;

In the following example, the primary route is not carrying traffic.

rept-stat-dstn:dpc=1-1-1

```

tekelecstp 04-09-24 09:19:04 EST EAGLE 31.9.0
DPCA          PST          SST          AST
001-001-001   IS-ANR       Restrict  ACCESS
ALARM STATUS   = *C 0334 DPC Subsystem is Abnormal
RTE COST  LSN          APCA          LS STAT  NON-ADJ  ROUTE STAT
1   05    lse1e1       001-001-001   Prohibit  Allowed  Prohibit
2   05    lse1e2       001-002-001   Prohibit  Allowed  Prohibit
3*  10    lse1e3       001-003-001   Allowed  Allowed  Allowed
4   --    -----     ***_***_***   -----  -----  -----
5   --    -----     ***_***_***   -----  -----  -----
6   --    -----     ***_***_***   -----  -----  -----

```

Command Completed.

;

In the following example, the Origin-Based MTP Routing feature is enabled and on. This permits the execution of the **rept-stat-dstn** command in **rtx** mode, which displays all exception route sets provisioned against the specified DPC, as shown:

rept-stat-dstn:dpc=9-3-*:mode=rtx

```

tekelecstp 06-06-01 16:21:39 EST EAGLE 35.0.0
DPCA          PST          SST          AST
009-003-*     IS-NR        Allowed    ACCESS
ALARM STATUS   = No Alarms.
RTE COST  LSN          APCA          LS STAT  NON ADJ  ROUTE STAT
1   10    lsnstpa      042-36-23   Allowed  Allowed  Allowed
2   20    lsnstpb      092-40-03   Allowed  Allowed  Allowed
3   30    lsnstpc      128-01-22   Prohibit  Prohibit  Allowed
4   --    -----     ***_***_**   -----  -----  -----

```

```

5  --  -----  ***_**_**  -----  -----  -----
6  --  -----  ***_**_**  -----  -----  -----

```

Exception Routes:

OPCA	PST	SST	AST
001-001-001	IS-NR	Allowed	ACCESS
ILSN	PST	SST	AST
lsnstpy	IS-NR	Allowed	ACCESS

Command Completed.

If the Origin-Based MTP Routing feature is enabled and on, any exception routes provisioned against the specified DPC are displayed in **full** mode, as shown:

rept-stat-dstn:dpc=9-3-*:mode=full

```

tekelecstp 06-06-01 16:21:39 EST  EAGLE 35.0.0
  DPCA          PST          SST          AST
  009-003-006   00S-MT      Prohibit  INACCESS
ALARM STATUS    = = *C 0319 REPT-MTLP-DET: Circ rte det(cong)
RTE COST  LSN   APCA          LS STAT   NON ADJ   ROUTE STAT
1   10  lsnstpa  042-036-123  Allowed   Allowed   Allowed
2   20  lsnstpb  092-240-103  Allowed   Allowed   Allowed
3   30  lsnstpc  128-101-022  Allowed   Allowed   Allowed
4   --  -----  ***_***_***  -----  -----  -----
5   --  -----  ***_***_***  -----  -----  -----
6   --  -----  ***_***_***  -----  -----  -----
SSN   SUBSYSTEM STATUS

ALIASA          ALIASN          ALIASI
-----
CIRCULAR ROUTING INFO:
  XMIT LSN=lsnstpb  RC=20
  RCV  LSN=lsn01a
  MEMBER =-----

```

Exception Routes:

OPCA	PST	SST	AST
001-001-001	IS-NR	Allowed	ACCESS
ILSN			
lsnstpy	IS-NR	Allowed	ACCESS

Command Completed.

If the Origin-Based MTP Routing feature is enabled and on and **full** mode is specified, all provisioned exception route sets are displayed in addition to the regular route sets, as shown by the following example:

rept-stat-dstn:mode=full

```

tekelecstp 06-06-01 14:06:10 EST  EAGLE 35.0.0
  DPCA          PST          SST          AST
  004-004-004   00S-MT      Idle      INACCESS

  OPCA          PST          SST          AST
  001-001-001   IS-NR      Allowed   ACCESS

  ILSN          PST          SST          AST
  lsnstpy       IS-NR      Allowed   ACCESS

  DPCN          PST          SST          AST
  00001         IS-NR      Allowed   ACCESS

  SI            PST          SST          AST

```

10	IS-NR	Allowed	ACCESS
00002	IS-NR	Allowed	ACCESS
00005	OOS-MT	Prohibit	INACCESS
00004	OOS-MT	Prohibit	INACCESS
DPCN24	PST	SST	AST
DPCI	PST	SST	AST

Command Completed.

If the Origin-Based MTP Routing feature is enabled and on, then **rtx** mode is permitted for the command, and all provisioned exception routes are displayed, as shown by the following example:

rept-stat-rte:mode=rtx

```
tekelecstp 06-06-01 14:06:10 EST EAGLE 35.0.0
  DPCA          PST          SST          AST
  004-004-004   OOS-MT      Idle         INACCESS

  OPCA
  001-001-001   IS-NR       Allowed   ACCESS

  ILSN
  lsnstpy       IS-NR       Allowed   ACCESS

  DPCN          PST          SST          AST
  00001         IS-NR       Allowed   ACCESS

  SI
  10            IS-NR       Allowed   ACCESS
```

Legend

DPC/DPCA—The ANSI destination point code of the route

DPCN—The ITU-TSS national destination point code of the route

DPCN24—The 24-bit ITU national destination point code of the route

DPCI—The ITU-TSS international destination point code of the route

OPC/OPCA—The ANSI origination point code as exception routing criterion of the exception route

OPCN—The ITU-TSS national origination point code as exception routing criterion of the exception route

OPCN24—The 24-bit ITU national origination point code as exception routing criterion of the exception route

OPCI—The ITU-TSS international origination point code as exception routing criterion of the exception route

ILSN—The originating linkset as exception routing criterion of the exception route

CIC—Starting Circuit Identification Code used as the exception routing criterion for this exception route

ECIC—Ending Circuit Identification Code together with CIC defines the CIC range that is used as exception routing criterion for this exception route.

PST—The primary state of the subsystem. The possible values are described in "Possible Values for PST/SST/AST".

SST—The secondary state of the subsystem. The possible values are described in "Possible Values for PST/SST/AST".

AST—The associated state of the subsystem. The possible values are described in "Possible Values for PST/SST/AST".

rept-stat-e1

Report Status E1

Use this command to display the E1 port status and signaling link status for cards with provisioned E1 ports.

Keyword: **rept-stat-e1**

Related Commands:

Command Class: System Maintenance

Parameters

:e1port= (optional)

The E1 port number. When this parameter is specified, only the information for the specified E1 port on the card in the specified card location is displayed.

Range: **1-8**

Ports 3 through 8 can be specified only for HC-MIM cards.

:loc= (optional)

Card location. The unique identifier of a specific **lime1** card located in the STP.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

Default: Information for all **lime1** cards is reported.

Example

rept-stat-e1

Dependencies

No other **rept-stat-xxx** command can be in progress when this command is entered.

The **loc** parameter must be specified when the **e1port** parameter is specified.

The active TDM location cannot be specified in the **loc** parameter.

Card locations 1117 and 1118 and the HMUX or HIPR card locations (xy09 and xy10 where x is the frame and y is the shelf) cannot be specified in the **loc** parameter.

Notes

Specifying the command without any parameters displays E1 port status for all cards with provisioned E1 ports.

If the **loc** parameter is specified, status is displayed for all E1 ports provisioned on the card in the specified location.

If the **loc** and **e1port** parameters are specified, the E1 port status summary is displayed for all E1 ports provisioned on the card in the specified location, followed by the status of all signaling links assigned to the specified E1 port on the card.

Output

When no parameters are specified in the command, E1 port status is displayed for all cards with provisioned E1 ports. Ports 3 through 8 are on HC-MIM cards only.

rept-stat-e1

```
rlghncxa03w 05-01-04 07:01:08 EST EAGLE5 33.0.0
LOC    E1PORT    PST          SST          AST
1203   1         IS-NR        Avail        PARENT
1203   2         IS-NR        Avail        PAIRED
1203   3         IS-NR        Avail        -----
1203   7         OOS-MT       Unavail      -----
1207   1         IS-NR        Avail        -----
1207   2         IS-NR        Avail        -----
Command Completed.
```

;

When the **loc** parameter is specified, status is displayed for all E1 ports provisioned on the card in the specified location.

rept-stat-e1: loc=1203

```
rlghncxa03w 05-01-04 07:01:08 EST EAGLE5 33.0.0
LOC    E1PORT    PST          SST          AST
1203   1         IS-NR        Avail        PARENT
1203   2         IS-NR        Avail        PAIRED
1203   3         IS-NR        Avail        -----
1203   7         OOS-MT       Unavail      -----
Command Completed.
```

;

When the **loc** and **e1port** parameters are specified, the E1 port status summary is displayed for all E1 ports provisioned on the card in the specified location, followed by the status of all signaling links assigned to the specified E1 port on the card.

rept-stat-e1: loc=1203:e1port=1

```
rlghncxa03w 05-01-04 07:01:08 EST EAGLE5 33.0.0
LOC    E1PORT    PST          SST          AST
1203   1         IS-NR        Avail        PARENT
ALARM STATUS      = No Alarms.
UNAVAIL REASON    = --
SLK    TS    PST          SST          AST
A       1    IS-NR        Avail        ---
A1      2    IS-NR        Avail        ---
Command Completed.
```

;

rept-stat-e1: loc=1203:e1port=2

```
rlghncxa03w 05-01-04 07:01:08 EST EAGLE5 33.0.0
LOC    E1PORT    PST          SST          AST
1203   2         IS-NR        Avail        PAIRED
ALARM STATUS      = No Alarms.
UNAVAIL REASON    = --
Command Completed.
```

;

Legend

LOC—Card location

E1PORT—Number of the E1 port provisioned on the card in the specified location.

PST—The primary state of the card. The possible values are described in “Possible Values for PST/SST/AST”.

SST—The secondary state of the card. The possible values are described in “Possible Values for PST/SST/AST”.

AST—The associated state of the card. The possible values are described in “Possible Values for PST/SST/AST”. The values **PARENT** and **PAIRED** refer to odd and even adjacent ports on the card that are provisioned in channel bridging mode.

ALARM STATUS—Either "No Alarms" or current alarm number and text

UNAVAIL REASON—Reason for the E1 port being unavailable

SLK—Signaling link assigned to the E1 port

TS—Timeslot assigned to the signaling link

PST—The primary state of the signaling link. The possible values are described in "Possible Values for PST/SST/AST".

SST—The secondary state of the signaling link. The possible values are described in "Possible Values for PST/SST/AST".

AST—The associated state of the signaling link. The possible values are described in "Possible Values for PST/SST/AST".

rept-stat-eroute

Report Status EROUTE

Use this command to display the status of the STC cards that run the **eroute** application for the EAGLE 5 Integrated Monitoring Support (E5IS) feature.

Keyword: **rept-stat-eroute**

Related Commands:

Command Class: System Maintenance

Parameters

:loc= (optional)

Card location. The unique identifier of a specific STC card located in the STP.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Default: All STC cards are reported.

:mode= (optional)

Mode of reporting for the command. When **mode=perf** is specified, only subsystem performance information is displayed.

Range: **perf**

Default: None.

Example

```
rept-stat-eroute
```

```
rept-stat-eroute:mode=perf
```

```
rept-stat-eroute:loc=1213
```

Dependencies

The **mode** and **loc** parameters cannot be specified in the same command.

No other **rept-stat-xxx** command can be in progress when this command is entered.

At least one STC card running the **eroute** application must be configured before this command can be entered.

Notes

When the **loc** parameter is specified, only the card information for the specified card is displayed.

When the **mode=perf** parameter is specified, only subsystem performance information is displayed.

Output

When no parameters are specified in the command, the report shows card, subsystem, and alarm information.

rept-stat-eroute

```
rlghncxa03w 04-02-04 07:01:08 EST EAGLE 31.3.0
EROUTE SUBSYSTEM REPORT IS-ANR          Busy          -----
STC Cards Configured= 8  Cards IS-NR= 4
EISCOPY BIT = ON
System Threshold = 80% Total Capacity
System Peak EROUTE Load:                8000 Buffers/Sec
System Total EROUTE Capacity:            9600 Buffers/Sec
SYSTEM ALARM STATUS = * 0472 EROUTE System Threshold Exceeded
```

CARD	VERSION	PST	SST	AST	TVG USAGE	CPU USAGE
1205	236-024-005	IS-NR	Active	-----	22%	33%
1211	236-024-005	IS-NR	Active	-----	22%	33%
1303	255-255-255	OOS-MT	Isolated	-----	0%	0%
1311	255-255-255	OOS-MT	Isolated	-----	0%	0%
1313	255-255-255	OOS-MT	Isolated	-----	0%	0%
2211	236-024-005	IS-ANR	Active	-----	0%	0%
2213	236-024-005	IS-NR	Active	-----	22%	33%
1105	236-024-005	IS-NR	Active	-----	22%	33%

```
EROUTE Service Average TVG Capacity = 22% Average CPU Capacity = 33%
Command Completed.
```

;

rept-stat-eroute

```
rlghncxa03w 04-02-04 07:01:08 EST EAGLE 31.3.0
EROUTE SUBSYSTEM REPORT IS-ANR          Busy          -----
STC Cards Configured= 2  Cards IS-NR= 2
EISCOPY BIT = ON
System Threshold = 80% Total Capacity
System Peak EROUTE Load:                4800 Buffers/Sec
System Total EROUTE Capacity:            4800 Buffers/Sec

SYSTEM ALARM STATUS = * 0472 EROUTE System Threshold Exceeded
```

CARD	VERSION	PST	SST	AST	TVG USAGE	CPU USAGE
1213	111-024-000	IS-NR	Active	-----	80%	53%
1105	111-024-000	IS-NR	Active	-----	80%	53%

```
EROUTE Service Average TVG Capacity = 80% Average CPU Capacity = 53%
Command Completed.
```

;

When **mode=perf** is specified in the command, only subsystem performance information is displayed. The CARDS DENIED EROUTE SERVICE line appears only if there is at least one card that is denied service when the command is entered.

rept-stat-eroute:mode=perf

```
rlghncxa03w 04-02-04 07:01:08 EST EAGLE 31.3.0
EROUTE SUBSYSTEM REPORT IS-ANR          Ovrflw=1       -----
STC Cards Configured= 1  Cards IS-NR= 1
EISCOPY BIT = ON
System Threshold = 80% Total Capacity
System Peak EROUTE Load:                8000 Buffers/Sec
System Total EROUTE Capacity:            9600 Buffers/Sec
```


SYSTEM ALARM STATUS = * 0482 Card(s) have been denied EROUTE service

STATISTICS

```
=====
CARD      CPU USAGE   TVG RATE
-----
```

```
1213      33%         1000
-----
```

AVERAGE TVG USAGE = 22%

AVERAGE CPU USAGE = 33%

TOTAL TVG RATE = 8000

STATISTICS FOR PAST 30 SECONDS

```
=====
TOTAL TVG:          8000
```

```
TOTAL EROUTE:       0
```

CARDS DENIED EROUTE SERVICE: 1302, 1305

Command Completed.

;

rept-stat-eroute:mode=perf

rlghncxa03w 04-02-04 07:01:08 EST EAGLE 31.3.0

EROUTE SUBSYSTEM REPORT IS-ANR Busy -----

STC Cards Configured= 2 Cards IS-NR= 2

EISCOPY BIT = ON

System Threshold = 80% Total Capacity

System Peak EROUTE Load: 4800 Buffers/Sec

System Total EROUTE Capacity: 4800 Buffers/Sec

SYSTEM ALARM STATUS = * 0472 EROUTE System Threshold Exceeded

STATISTICS

```
=====
CARD      CPU USAGE   TVG RATE
-----
```

```
1213      53%         1920
```

```
1105      53%         1920
-----
```

AVERAGE TVG Capacity = 80%

AVERAGE CPU USAGE = 53%

TOTAL TVG RATE = 3840

Command Completed.

;

When the **loc** parameter is specified in the command, information only for the specified card is displayed.

rept-stat-eroute:loc=1213

rlghncxa03w 04-02-04 07:01:08 EST EAGLE 31.3.0

```
CARD  VERSION      TYPE    PST      SST      AST
-----
```

```
1213  227-023-002  STC      IS-NR      Active    -----
```

CARD ALARM STATUS = * 0480 Timestamp Invalid

TOTAL CPU USAGE = 0%

Command Completed.

;

Legend

When no parameters are specified in the command, the following information appears in the report:

EROUTE SUBSYSTEM REPORT—State of the subsystem

STC CARDS CONFIGURED—Number of STC cards configured in the system

CARDS IS-NR—Number of STC cards in IS-NR state

EISCOPY BIT—Indicates whether EIS copy function is turned On or Off

SYSTEM THRESHOLD—% of system total capacity being used

SYSTEM PEAK EROUTE LOAD—Current load in Buffers/Sec

SYSTEM TOTAL EROUTE CAPACITY—Total capacity in Buffers/Sec

SYSTEM ALARM STATUS—Either "No Alarms" or current alarm number and text

CARD—Card location

VERSION—The version number of the GPL loaded on the card. Dashes (- - - -) in the version column indicate one of the following conditions about the card:

- The card does not run a GPL, such as TDM or MDAL cards.
- The card is configured but is not physically present in the system.
- The card is IS-ANR or is in the process of being loaded.

TYPE—The card type entered in the database.

PST—The primary state of the card. The possible values are described in "Possible Values for PST/SST/AST".

SST—The secondary state of the card. The possible values are described in "Possible Values for PST/SST/AST".

AST—The associated state of the card. The possible values are described in "Possible Values for PST/SST/AST".

EROUTE SERVICE AVERAGE TVG CAPACITY—%

AVERAGE CPU CAPACITY—%

When **mode=perf** is specified, the following performance statistics are displayed:

STATISTICS

CARD—Card location

CPU USAGE—%

TVG RATE

AVERAGE TVG USAGE—%

AVERAGE CPU CAPACITY—%

TOTAL TVG RATE

STATISTICS FOR PAST 30 SECONDS

TOTAL TVG

TOTAL EROUTE

When the **loc** parameter is specified in the command, only card information for the specified card is displayed: CARD, VERSION, TYPE, PST, SST, and AST as shown above, and the following information:

CARD ALARM STATUS—Either "No alarms" or current alarm number and text

TOTAL CPU USAGE—%

rept-stat-gpl**Report Status Generic Program Load**

Use this command to display the version of GPLs currently running for an application, plus the approved and trial versions of the GPL that will run if the card is restarted.

Keyword: **rept-stat-gpl**

Related Commands: **act-gpl, alw-card, chg-gpl, copy-gpl, init-card, init-sys, rtrv-gpl**

Command Class: Program Update

Parameters

:display= (optional)

Display mode. Specifies whether the report displays only application GPL data for all cards, or both IMT and application GPL data.

Range: **all, brief**

Default: **brief**

:gpl= (optional)

The type of GPL to report on.

Range: *aaaaaaaa*

atmansi—The GPL is used by the LIM cards to support the high-speed ATM signaling link feature.

atmitu—The GPL is used by the E1 ATM cards to support the high-speed E1 ATM signaling link feature.

blbios—A flash GPL containing the BIOS ROM image on HC-MIM cards that are used for E1 or T1 signaling links.

blcpld—A flash GPL containing the bit files for the CPLD on HC-MIM cards that are used for E1 or T1 signaling links.

bldiag—A flash GPL containing the diagnostic code on HC-MIM cards that are used for E1 or T1 signaling links.

blvxw—A flash GPL containing the VxWorks operating system on HC-MIM cards that are used for E1 or T1 signaling links.

bpdcm—This GPL is used in communications in the **init-flash** process.

bphcap—This GPL is used to support Board PROM for HCAP flash memory.

bphcapt—This GPL is used to support Board PROM for HCAP-T flash memory.

bphmux—This GPL is used to support Board PROM for HMUX flash memory.

bpmpl—This GPL is used to support Board PROM for MPL flash memory.

bpmplt—This GPL is used to support Board PROM for E1/T1 flash memory and Board PROM for the MPL-T flash memory.

ccs7itu—This GPL is used by the LIM cards for ITU-TSS MTP functionality.

cdu—This GPL is used in the card manufacturing process for testing, and when directed by Tekelec Technical Services.

ebdablm—This GPL is used by the TSM cards for enhanced bulk download.

ebdaclm—This GPL is used by the DCM card to transmit the LSMS LNP database to the EAGLE 5 ISS at high speed over an Ethernet connection for enhanced bulk download.

emap—This GPL is the software that is running on the EOAP used for the GR-376 feature. This GPL transfers the System Release ID table from the removable cartridge to the fixed disk. This GPL is used to alert the craftsman when the EOAP GPLs are not compatible with an EAGLE 5 ISS release.

emdc—This GPL is used by the DCM card for CMIP/OSI measurement collection interface as defined by Telcordia GR-376.

eroute—This GPL is used by the STC cards for for the EAGLE Support for Integrated Sentinel feature.

gls—This GPL is used by the TSM cards for downloading gateway screening to LIM cards.

hipr—The communication software used on the High Speed IMT Packet Router (HIPR) card.

imt—This GPL is the communication processor on the logical processing element (LPE).

imtpci—The communication software that operates the IMT bus on HC-MIM cards.

ipgwi—This GPL is used by the DCM card for TCP/IP point-to-point connectivity for ITU point codes.

iplim—This GPL is used by the DCM card for TCP/IP point-to-point connectivity for ANSI point codes.

iplimi—This GPL is used by the DCM card for TCP/IP point-to-point connectivity for ITU point codes.

ips—This GPL is used by the IPSM card for the IP User Interface feature.

mcp—This GPL is used by the MCPM card for the Measurements Platform feature.

plde1t1—This GPL is used to support Board PROM for HC-MIM flash memory.

pldpmc1—This GPL is used to support Board PROM for HC-MIM flash memory.

sccp—This GPL is used by the TSM cards for the global title translation application.

ss7ansi—This GPL is used by the LIM cards for the MTP functionality.

ss7gx25—This GPL is used by the LIM cards to support X.25 functionality.

ss7hc—This GPL is used to support the functionality for the HC-MIM (High Capacity Multi-Channel Interface Module) card. The HC-MIM card runs either the **ss7ansi** or **cc7itu** application; the **ss7hc** GPL allows the card to support up to 64 signaling links for E1 and T1 functionality.

ss7ipgw—This GPL is used by the DCM card to support TCP/IP point-to-multipoint connectivity.

ss7ml—This GPL is used to support the functionality for the multi-port LIM (MPL or MPL-T) card. The MPL cards run only the **ss7ansi** application on a LIMDS0 card (as specified with the **ent-card:type=limds0:appl=ss7ansi** command); the **ss7ml** GPL allows the card to support eight signaling link ports rather than the usual two ports for LIM cards. The MPL cards support only the DS0 interface.

stplan—This GPL is used by the ACM card to support the STPLAN application.

vcdu—This GPL is used in the card manufacturing process for testing, and when directed by Tekelec Technical Services.

vsccp—This GPL is used by the DSM card to support the G-Flex, G-Port, LNP ELAP Configuration, and INP features. If the G-Flex, G-Port, LNP ELAP Configuration, or INP feature is not turned on, and a DSM card is present, the VSCCP GPL processes normal GTT traffic.

vxwslan—This GPL is used by the DCM card to support the STPLAN application.

iplhc—This GPL is used by the E5-ENET card for TCP/IP point-to-point connectivity for both ANSI and ITU point codes.

ipghc—This GPL is used by the E5-ENET card to support TCP/IP point-to-multipoint connectivity for both ANSI and ITU point codes.

ss7epm—This GPL is used by the E5-E1T1 cards to support the MTP functionality for both ANSI and ITU applications; the **ss7epm** GPL allows the card to support up to 32 signaling links for E1 and T1 functionality.

blbepm—A flash GPL containing the BIOS ROM image on EPM cards.

blvxw6—A flash GPL containing the VxWorks operating system on EPM cards.

bldiag6—A flash GPL containing the diagnostic code on EPM cards.

Default: all GPL types

:loc= (optional)

Target card address. Displays the versions of all GPLs running at the specified card location. For HC-MIM cards this includes all non-activated flash GPLs. For non-HC-MIM cards, there is no additional data; this parameter simply limits the report to the target card address.

Range: 1101-1108, 1111-1113, 1115, 1201-1208, 1211-1212, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

:appl= (obsolete)

This parameter is obsolete; use the **gpl** parameter.

The **appl** parameter has been replaced with the **gpl** parameter to more accurately indicate that a GPL, and not an application, is specified for the parameter value.

Example

```
rept-stat-gpl
rept-stat-gpl:display=all
rept-stat-gpl:loc=1201
rept-stat-gpl:gpl=ss7ansi
rept-stat-gpl:gpl=oam
rept-stat-gpl:gpl=imt
rept-stat-gpl:gpl=bphmux
rept-stat-gpl:gpl=ss7ml
rept-stat-gpl:gpl=hipr
rept-stat-gpl:gpl=ss7hc
rept-stat-gpl:gpl=iplhc
rept-stat-gpl:gpl=ipghc
rept-stat-gpl:gpl=ss7epm
rept-stat-gpl:gpl=blbepm
rept-stat-gpl:gpl=blvxw6
```

rept-stat-gpl:gpl=bldiag6**Dependencies**

No other **rept-stat-xxxx** command can be in progress when this command is entered.

None of the following parameters can be specified together in the same command: **display=all** parameter, **loc** parameter, **gpl** parameter.

Notes

To check the version of the EPAP or ELAP application, use the **rept-stat-mps** command.

When this command is entered, information is displayed only for the cards that are IS-NR or IS-ANR.

Use the **chg-gpl** command to turn auditing on and off.

Use the **rtrv-gpl** command to display the audit state.

The approved GPL is the GPL that resides on the active fixed disk and was made the approved version by specifying the GPL version number while executing the **act-gpl** command.

The trial GPL is the version of the GPL that was downloaded from the removable cartridge, but not activated by the **act-gpl** command.

When the **act-gpl** command is executed, the version specified becomes the approved GPL and the previously approved GPL becomes the trial GPL.

If any card is not running the active MASP system release version of a GPL, "ALM" is displayed to indicate that the card is in GPL alarm condition.

If GPL auditing is on, a minor alarm is shown, and "ALM" is displayed for each APPROVED GPL (**rtrv-gpl**) and for each RUNNING GPL (**rept-stat-gpl**) that does not match the GPL in the RELEASE column of the **rtrv-gpl** command output. If GPL auditing is off, the minor alarm is not activated, but "ALM" is displayed for each GPL that does not match the GPL in the RELEASE column.

If no **gpl** parameter is specified, the approved and trial versions for all GPLs are displayed.

If a GPL is not found, a version of "-----" is displayed. This should happen only for utility and OAM GPLs when the cartridge is not inserted. A utility trial version is never displayed because it can never be run.

If the removable cartridge is inserted, an "*" (asterisk) is displayed next to the OAM trial version. The asterisk serves as a reminder that the trial version of a GPL is loaded when the card that is running the OAM is restarted. All other cards load their approved versions of GPLs when they are restarted.

If a card is inhibited, "-----" is displayed for the running version.

When the **gpl** parameter is not specified, the default is to display all application GPLs that are running on provisioned cards. The flashable GPLs (those loaded on the card by using the **init-flash** command) are not displayed.

When the **gpl=imt** parameter is specified, only the IMT GPLs for each configured card connected to the IMT are displayed.

A plus (+) symbol in the output when the **gpl** parameter value **blbios**, **blcpld**, **bldiag**, **blvxw**, **bphcap**, **bphcapt**, **bpmpl**, **bpmplt**, **bpdcm**, **imtpci**, **plde1t1**, **pldpmc1**, **blbepm**, **blvxw6**, and **blidiag6** is specified indicates that the GPL currently being run has not yet been activated on the card.

When a GPL is specified in the **gpl** parameter, the specified GPL for each card connected to the IMT is displayed.

Output

The output of the **rept-stat-gpl** command is site-specific and configuration-specific. The following output examples show typical output for the commands that are entered; the output that is shown can differ from output that appears for a particular system.

The following example shows output that includes an MPL or MPL-T (multi-port LIM) card at location 1105. The GPL column, which displays the GPL running on the card, enables you to differentiate between the two-port LIMDS0 card and the multi-port LIM card. If an MPL or MPL-T card is running in the system, SS7ML appears in the GPL column. If a two-port LIMDS0 card is running in the system, SS7ANSI appears in the GPL column.

This output appears when no parameters are defined. All GPLs for the card are listed.

rept-stat-gpl

```
rlghncxa03w 05-01-04 07:01:08 EST EAGLE 33.0.0
GPL      CARD      RUNNING      APPROVED      TRIAL
EOAM     1113      025-002-000      025-002-000      -----
EOAM     1115      025-002-000      025-002-000      -----
SCCP     1212      025-001-000      025-001-000      025-001-000
VSCCP    1103      026-001-000      026-001-000      026-001-000
CCS7ITU  1201      025-001-000      025-001-000      025-001-000
CCS7ITU  1202      025-001-000      025-001-000      025-001-000
ATMANSI  1205      025-001-000      025-001-000      025-001-000
ATMANSI  1211      025-001-000      025-001-000      025-001-000
SS7ANSI  1203      025-001-000      025-001-000      025-001-000
SS7ANSI  1207      025-001-000      025-001-000      025-001-000
IPLIM    1213      025-001-000      025-001-000      025-001-000
SS7IPGW  1215      025-001-000      025-001-000      025-001-000
SS7ML    1105      027-001-000      027-001-000      027-001-000
OAP      A          025-001-000      025-001-000      -----
OAP      B          025-001-001 ALM  025-001-000      -----
Command Completed.
```

;

The following example appears for the UTILITY GPL, whether the cartridge is inserted or not inserted.

rept-stat-gpl:gpl=utility

```
rlghncxa03w 05-01-07 10:23:93 EST EAGLE 33.0.0
GPL      CARD      RUNNING      APPROVED      TRIAL
UTILITY  1101      101-016-000      101-016-000      -----
Command Completed.
```

;

The following example shows all provisioned cards that are running the SS7ANSI GPL.

rept-stat-gpl:gpl=ss7ansi

```
rlghncxa03w 05-01-07 10:23:93 EST EAGLE 33.0.0
GPL      CARD      RUNNING      APPROVED      TRIAL
SS7ANSI  1102      101-016-000      101-016-000      101-016-000
SS7ANSI  1103      101-016-000      101-016-000      101-016-000
SS7ANSI  1201      101-016-000      101-016-000      101-016-000
SS7ANSI  1202      101-016-000      101-016-000      101-016-000
SS7ANSI  1207      101-016-000      101-016-000      101-016-000
SS7ANSI  1208      101-016-000      101-016-000      101-016-000
SS7ANSI  1214      101-016-000      101-016-000      101-016-000
SS7ANSI  1215      101-016-000      101-016-000      101-016-000
SS7ANSI  1216      101-016-000      101-016-000      101-016-000
SS7ANSI  1217      101-016-000      101-016-000      101-016-000
Command Completed.
```

;

The following example lists cards that are running the IMT GPL.

rept-stat-gpl:gpl=imt

```
rlghncxa03w 05-01-07 10:23:93 EST EAGLE 33.0.0
GPL      CARD      RUNNING      APPROVED      TRIAL
IMT      1101      101-016-000      -----      -----
IMT      1102      101-016-000      -----      -----
IMT      1103      101-016-000      -----      -----
IMT      1105      101-016-000      -----      -----
IMT      1113      101-016-000      -----      -----
IMT      1115      101-016-000      -----      -----
IMT      1201      101-016-000      -----      -----
IMT      1202      101-016-000      -----      -----
IMT      1203      101-016-000      -----      -----
IMT      1213      101-016-000      -----      -----
IMT      1214      101-016-000      -----      -----
IMT      1215      101-016-000      -----      -----
Command Completed.
```

;

In the following example, card 3108 is running the older, approved GPL. Cards 2108 and 2208 are each running a new nonapproved version. Card 2108 has had this version activated, and card 2208 is still running this version in a trial mode (a + appears following the ALM indicator).

rept-stat-gpl:gpl=bphcap

```
rlghncxa03w 05-01-07 10:23:93 EST EAGLE 33.0.0
GPL      CARD      RUNNING      APPROVED      TRIAL
BPHCAP   2108      101-005-001 ALM      101-016-000      101-005-001
BPHCAP   2208      101-005-001 ALM+    101-016-000      101-005-001
BPHCAP   3108      101-016-000      101-016-000      101-005-001
Command Completed.
```

;

Output for the BPHMUX or HIPR GPLs shows the GPL that is running on each card in slots 09 and 10 on each provisioned shelf. The following example shows the output for the HIPR GPL.

rept-stat-gpl:gpl=hipr

```
rlghncxa03w 05-01-04 07:01:08 EST EAGLE5 33.0.0
GPL      CARD      RUNNING      APPROVED      TRIAL
HIPR     1109      118-020-000      118-020-000      118-020-000
HIPR     1110      118-020-000      118-020-000      -----
HIPR     1209      118-020-000      118-020-000      118-020-000
HIPR     1210      118-020-000      118-020-000      -----
Command Completed.
```

;

The following example shows the EOAM GPL that is running on the cards in locations 1113 and 1115.

rept-stat-gpl:gpl=eoam

```
rlghncxa03w 05-01-07 10:23:93 EST EAGLE 33.0.0
GPL      CARD      RUNNING      APPROVED      TRIAL
EOAM     1113      028-002-000      028-002-000      -
EOAM     1115      028-002-000      028-002-000      -
Command Completed.
```

;

The following example specifies the **display=all** parameter to display both IMT and application GPL information.

The example also contains asterisks with the following meanings:

- * The SS7ML entry in the GPL column at location 1105 indicates that a multi-port LIM, as opposed to a two-port LIM, is running on the system. Both cards are provisioned in the database with the **ss7ansi** application so that the two-port LIM can be replaced without having

to reprovision the database, but the MPL and MPL-T run the **ss7ml** GPL to support 8 signaling link ports.

- ** The OAP entries appear only if an OAP is provisioned and running. Systems that use two OAPs show two entries for the OAP: OAP A and OAP B.

rept-stat-gpl:display=all

```
rlghncxa03w 05-01-07 10:23:93 EST EAGLE 33.0.0
GPL      CARD      RUNNING      APPROVED      TRIAL
EOAM     1113      027-002-000    027-002-000    -----
           IMT      027-001-000    027-001-000    210-001-003
EOAM     1115      027-002-000    027-002-000    -----
           IMT      027-001-000    027-001-000    210-001-003
SCCP     1212      027-001-000    027-001-000    027-001-000
           IMT      027-001-000    027-001-000    210-001-003
CCS7ITU  1201      027-001-000    027-001-000    027-001-000
           IMT      027-001-000    027-001-000    210-001-003
ATMANSI  1203      027-001-000    027-001-000    027-001-000
           BPHCAP    027-001-000    027-001-000    210-001-003
SS7ML*   1105      027-001-000    027-001-000    027-001-000
           BPMPPL    230-001-001    230-001-001    230-001-001
IPLIM    1213      027-001-000    027-001-000    027-001-000
           BPDCM     027-001-000    027-001-000    210-001-003
SS7IPGW  1215      027-001-000    027-001-000    027-001-000
           BPDCM     210-001-003  ALM+ 027-001-000    210-001-003
BPHMUX   1109      027-005-000    027-005-000    027-005-000
BPHMUX   1110      027-005-000    027-005-000    027-005-000
BPHMUX   1209      027-005-000    027-005-000    027-005-000
BPHMUX   1210      027-005-000    027-005-000    027-005-000
OAP**    A        027-001-000    027-001-000    -----
OAP**    B        027-001-001  ALM  027-001-000    -----
Command Completed.
```

;

The following example specifies the **display=all** parameter to display both IMT and application GPL information. The example includes an HC-MIM card in the system.

rept-stat-gpl:display=all

```
rlghncxa03w 05-01-07 10:23:93 EST EAGLE5 33.0.0
GPL Auditing ON

GPL      CARD      RUNNING      APPROVED      TRIAL
EOAM     1113      125-002-000  ALM  125-001-000    125-002-000  *
           BPDCM     002-126-000    002-126-000    002-126-000
EOAM     1115      125-002-000  ALM  125-001-000    125-001-000  *
           BPDCM     002-123-020  ALM  002-126-000    002-126-000
SS7ANSI  1205      125-001-000    125-001-000    125-002-000
           IMT      125-001-000    125-001-000    125-002-000
GLS      1106      125-001-000    125-001-000    125-002-000
           IMT      125-001-000    125-001-000    125-002-000
UTILITY  1101      125-001-000    125-001-000    -----
           IMT      125-001-000    125-001-000    125-002-000
SS7GX25  1206      125-001-000    125-001-000    125-002-000
           IMT      125-001-000    125-001-000    125-002-000
EBDADCM  1217      125-001-000    125-001-000    125-002-000
           BPDCM     002-126-001  ALM  002-126-000    002-126-000
SS7IPGW  1213      125-001-000    125-001-000    125-002-000
           BPDCM     002-125-002  ALM  002-126-000    002-126-000
VSCCP    1111      125-001-000    125-001-000    125-002-000
           BPDCM     002-125-002  ALM  002-126-000    002-126-000
BPHMUX   1109      125-001-000    125-001-000    125-002-000
BPHMUX   1110      125-001-000    125-001-000    125-002-000
BPHMUX   1209      125-001-000    125-001-000    125-002-000
BPHMUX   1210      125-001-000    125-001-000    125-002-000
MPLGA    1102      125-001-000    125-001-000    125-002-000
```

```

          BPMPL          125-001-000          125-001-000          125-002-000
SS7HC      1215          125-001-000          125-001-000          125-002-000
          IMTPCI          125-001-000          125-001-000          125-002-000
          BLBIOS          125-001-000          125-001-000          125-002-000
          BLCPLD          125-001-000          125-001-000          125-002-000
          BLVXW           125-001-000          125-001-000          125-002-000
          BLDIAG          125-001-000          125-001-000          125-002-000
          PLDE1T1         125-001-000          125-001-000          125-002-000
          PLDPMC1         125-001-000          125-001-000          125-002-000
Command Completed.

```

;

The following example shows output when the **loc** parameter is specified for an HC-MIM card.

The following notes explain the last six lines of this example:

1. IMTPCI has been downloaded with the **init-flash** command, the card has reset, and IMTPCI was activated normally with the **act-flash** command.
2. BLBIOS has been downloaded with the **init-flash** command, but the card has not been initialized. The inactive version will load when the card is next initialized.
3. BLVXW has been downloaded with the **init-flash** command, the card has been reset. BLVXW was activated with the **act-flash** command, but it is not the approved version on the TDM.
4. BLDIAG has been downloaded with the **init-flash** command, and the card has been reset; the inactive version is running. The ALM indicates that it is not the approved version and the '+' indicates that it has not been activated yet. The '*' next to the active version indicates that if the card resets again, the active version will run.
5. PLDE1T1 has been downloaded with the **init-flash** command and the card has been reset, but the GPL has not been activated yet. This is the same condition as Note 4, except that there is no alarm condition.

rept-stat-gpl: loc=1203

```

rlghncxa03w 05-01-07 10:23:93 EST  EAGLE5 33.0.0
GPL Auditing  ON

GPL      CARD      RUNNING          APPROVED          TRIAL
SS7HC      1203      125-001-000          125-001-000          125-001-000
          IMTPCI          125-001-000          125-001-000          125-001-000
          BLBIOS          125-001-000          125-001-000          125-001-000
          BLCPLD          125-001-000          125-001-000          125-001-000
          BLVXW           125-001-000          125-001-000          125-001-000
          BLDIAG          125-001-000          125-001-000          125-001-000
          PLDE1T1         125-001-000          125-001-000          125-001-000

          IMTPCI          125-001-000          125-002-000 *  ----- Note 1
          BLBIOS          125-001-000          125-001-000          125-003-000 *  Note 2
          BLCPLD          125-001-000          125-001-000 *  -----
          BLVXW           125-002-000ALM          125-002-000 *  ----- Note 3
          BLDIAG          125-003-000ALM+          125-002-000 *  125-003-000 Note 4

          PLDE1T1         125-001-000   +   125-002-000 *  125-001-000 Note 5
Command Completed.

```

;

The following example shows output when the **loc** parameter is specified for a card that is not an HC-MIM card.

rept-stat-gpl: loc=1217

```

rlghncxa03w 05-01-07 10:23:93 EST  EAGLE 33.0.0
GPL Auditing  ON

```

```

      GPL      CARD      RUNNING      APPROVED      TRIAL
      ATMANSI  1217      125-001-000    125-001-000    125-001-000
      BPHCAP   125-001-000    125-001-000    125-001-000
      Command Completed.
;
rept-stat-gpl:gpl=iplhc
eagle10115 06-04-04 13:27:20 EST EAGLE 35.0.0
GPL Auditing ON

      GPL      CARD      RUNNING      APPROVED      TRIAL
      IPLHC    1303      097-003-000    097-003-000    028-003-011
      Command Completed.
;
rept-stat-gpl:gpl=ipghc
eagle10115 06-04-04 13:27:58 EST EAGLE 35.0.0
GPL Auditing ON

      GPL      CARD      RUNNING      APPROVED      TRIAL
      IPGHC    1305      097-003-009    097-003-009    097-003-001
      IPGHC    1307      097-003-009    097-003-009    097-003-001
      Command Completed.
;

```

Legend

GPL—The type of GPL associated with the cards in the display.

CARD—The card location.

RUNNING—The GPL version the card is running. If the card is not running the active MASP system release GPL, ALM appears after the GPL version number in this column.

APPROVED—The GPL version that is the approved GPL.

TRIAL—The GPL version that is the trial GPL.

ACTIVE—The GPL version that has been downloaded using the **init-flash** command and activated using the **act-flash** command..

INACTIVE—The GPL version that has been downloaded using the **init-flash** command but has not been activated using the **act-flash** command..

----- (dashes)—GPL is not present at the specified location.

*—The trial version will run if the card boots. (Shown to the right of the TRIAL column)

ALM—An alarm indicator showing that the system has an approved GPL that is not the GPL required for this software release according to the active MASP system release table.

+—The currently running flash GPL has not been activated. (Shown between the RUNNING and APPROVED columns)

rept-stat-imt**Report IMT Status**

The interprocessor message transport bus (IMT bus) is the main communications artery between all subsystems in the system. Use this command to display the primary, secondary, and associated maintenance states of the IMT bus. The primary state indicates whether the bus is normal, abnormal, or OOS for maintenance activity. The secondary state indicates the active/inhibited status of a card for a particular IMT bus.

Keyword: rept-stat-imt

Related Commands: clr-imt-stats, conn-imt, disc-imt, rept-imt-lvl1, rept-imt-lvl2, rmv-imt, rst-imt

Command Class: System Maintenance

Parameters

:mode= (optional)

Use this parameter to provide additional output listing the cards that currently have IMT alarm conditions outstanding. The additional output is repeated for each IMT bus following the bus status information. If no alarms are active on a given bus, no additional output is generated.

Range: full

Default: "not full"

Example

```
rept-stat-imt
```

```
rept-stat-imt:mode=full
```

Dependencies

No other **rept-stat-xxx** command can be in progress when this command is entered.

Notes

The card locations are stored only by the active MASP. The information is lost if the system switches from the active to the standby MASP.

The trouble locations are displayed sorted by card location.

Output**rept-stat-imt**

```

rlghncxa03w 04-02-27 16:50:24 EST EAGLE 31.3.0
IMT  PST          SST          AST
A    IS-NR        Active       -----
ALARM STATUS      = No alarms

IMT  PST          SST          AST
B    IS-ANR       Fault        -----
ALARM STATUS      = ** 0108 Major IMT Failure Detected

```

Command Completed.

;

rept-stat-imt:mode=full

```

rlghncxa03w 04-02-23 13:10:30 EST EAGLE 31.3.0
IMT  PST          SST          AST
A    IS-NR        Active       -----
ALARM STATUS      = No Alarms.

IMT  PST          SST          AST
B    OOS-MT-DSBLD Fault        -----
ALARM STATUS      = ** 0108 Major IMT failure detected.

```

CARDS WITH ACTIVE IMT B ALARMS:

CARD	DATE	TIME
1102	04-02-23	11:59:23
1103	04-02-23	12:01:23
1204	04-02-23	23:14:07
1205	04-02-23	23:14:07
1206	04-02-23	23:14:07

Command Completed.

;

Legend

IMT—IMT bus A or IMT bus B.

PST—The primary state of the subsystem. The possible values are described in "Possible Values for PST/SST/AST".

SST—The secondary state of the subsystem. The possible values are described in "Possible Values for PST/SST/AST".

AST—The associated state of the subsystem. The possible values are described in "Possible Values for PST/SST/AST".

ALARM STATUS—A listing of any trouble text alarm messages that have been generated for the specified IMT bus.

*****—Minor Alarm

******—Major Alarm

***C**—Critical Alarm

The states of the IMT bus are combined from the PST and the SST as shown in Table 5-64.

Table 5-64. IMT Bus States

PST	SST	Definition
IS-NR	Active	The IMT bus is operating normally.
IS-ANR	Fault	The IMT bus has had a failure on at least one but not all cards.
IS-ANR	Manual	The IMT bus is inhibited, but some cards have been connected to it.
OOS-MT	Fault	The IMT bus has a failure on all cards.
OOS-MT-DSBLD	Manual	The IMT bus is inhibited and no cards are connected to it.

rept-stat-iptps**Report Status IPGWx TPS Utilization**

Use this command to display current and peak IPGWx TPS usage for each IPGWx linkset in the system or for each IPGWx link in the IPGWx linkset.

Keyword: **rept-stat-iptps**

Related Commands: **chg-ctrl-feat, chg-ls, chg-sg-opts, enable-ctrl-feat, ent-ls, rtrv-ctrl-feat, rtrv-ls, rtrv-sg-opts**

Command Class: System Maintenance

Parameters

:lsn= (optional)

Linkset name. The name of the linkset for which the report information is to be displayed.

Range: *ayyyyyyyy*

1 alphabetic character followed by up to 9 alphanumeric characters

Default: All linksets are displayed

:peakreset= (optional)

Reset peak values to the current TPS values.

Range: **yes, no**

Default: **no**

Example

```
rept-stat-iptps
```

```
rept-stat-iptps:lsn=lsgw1101
```

```
rept-stat-iptps:peakreset=yes
```

Dependencies

This command cannot be entered for linksets that are not IPGWx linksets.

The specified linkset name must exist in the database.

Notes

Traffic peak data are stored only in OAM memory and are not preserved when the card that is running the OAM boots, or in the case of an active/standby switchover.

Output

The **rept-stat-iptps** command reports on IPGWx system and linkset IP TPS. The report includes the following information for the system and for each IPGWx linkset:

- Configured IPGWx IP TPS alarm threshold
- Configured IPGWx IP TPS
- Current IPGWx IP TPS transmit and receive usage for 15 seconds
- Peak IPGWx IP TPS transmit and receive usage and timestamp for all 15 second periods since last reset

When **lsn** is specified, the command reports the same information for the individual links in the linkset.

When **peakreset=yes** is specified, the command resets all the stored peak values to the current actual usage for each link, and recalculates linkset and system peaks before reporting usage.

When **lsn** is specified with **peakreset=yes**, the command recalculates peaks for the specified linkset and resets all the stored peak values to the current actual usage for each link contained in the linkset before reporting usage.

NOTE: The peaks for transmit and receive, and for link, linkset and system IPGWx IP TPS may all occur at different times.

NOTE: The IP TPS System value shown in the rept-stat-iptps command may contain one extra MSU. Because the alarm calculations are implemented using integer math, there is the potential for rounding to occur at each entity (link, linkset, system) when the IP TPS value for the entity is not evenly divisible by 15. This could occur when performing an IPTPS report for multiple linksets in the system or a linkset that has more than one link configured.

rept-stat-iptps

```
rlghncxa03w 03-05-06 09:49:20 EST EAGLE 31.6.0
```

IP TPS USAGE REPORT

	THRESH	CONFIG		TPS	PEAK	PEAKTIMESTAMP

SYSTEM						
CLLI1234567	100%	100000	TX:	4127	4550	03-05-05 09:49:19
			RCV:	3962	4450	03-05-05 09:49:19

LSN						
LSGW1101	80%	4000	TX:	3700	4000	03-05-05 09:49:19
			RCV:	3650	4000	03-05-05 09:49:19
LSGW1103	80%	500	TX:	427	550	03-05-05 09:49:19
			RCV:	312	450	03-05-05 09:49:19

Command Completed.

;

rept-stat-iptps: lsn=lsqw1101

```
rlghncxa03w 03-05-06 09:49:20 EST EAGLE 31.6.0
```

IP TPS USAGE REPORT

	THRESH	CONFIG		TPS	PEAK	PEAKTIMESTAMP

LSN						
LSGW1101	100%	188000	TX:	800	800	03-05-05 09:49:19

```

-----
RCV:      800      800 03-05-05 09:49:19
-----
LOC  PORT
1101  A      80%  ---- TX:      800      800 03-05-05 09:49:19
                                RCV:      800      800 03-05-05 09:49:19
1103  A      80%  ---- TX:      800      800 03-05-05 09:49:19
                                RCV:      800      800 03-05-05 09:49:19
-----

```

Command Completed.

;

rept-stat-iptps:peakreset=yes

```

rlghncxa03w 03-05-06 09:49:20 EST  EAGLE 31.6.0
IP TPS USAGE REPORT

```

```

-----
THRESH  CONFIG      TPS      PEAK      PEAKTIMESTAMP
-----
SYSTEM
CLLI1234567 100% 100000 TX:      4427      4427 03-05-05 09:49:19
                                RCV:      4312      4312 03-05-05 09:49:19
-----
LSN
LSN1234567   80%   4000 TX:      4000      4000 03-05-05 09:49:19
                                RCV:      4000      4000 03-05-05 09:49:19
LSGW1103     80%    500 TX:       427       427 03-05-05 09:49:19
                                RCV:       312       312 03-05-05 09:49:19
-----

```

Command Completed.

;

Legend

SYSTEM—CLLI of the EAGLE 5 ISS

THRESH—The system threshold at which an alarm will be generated to indicate that the actual system TPS is approaching the enabled system TPS quantity (**iptpsalmthresh** value as shown in **rtrv-sg-opts** output).

CONFIG—The enabled system IP Signaling TPS quantity as shown in **rtrv-ctrl-feat** output.

TPS—The current transmit (TX) and receive (RCV) TPS for 15 seconds.

PEAK—The peak transmit (TX) and receive (RCV) TPS usage for all 15 second periods since the last peak reset.

PEAKTIMESTAMP—The date and time that the displayed transmit and receive TPS peaks occurred.

LSN—The linkset name.

THRESH—The **threshold at which an alarm will be generated to indicate that the actual linkset TPS is approaching the configured linkset iptps value** (**lsusealm** value as shown in **rtrv-ls** output).

CONFIG—The **iptps** value as shown in **rtrv-ls** output.

TPS—The current transmit (TX) and receive (RCV) TPS for 15 seconds.

PEAK—The peak transmit (TX) and receive (RCV) TPS usage for all 15 second periods since the last peak reset.

PEAKTIMESTAMP—The date and time that the displayed transmit and receive TPS peaks occurred.

When a linkset name is specified (**lsn**), the IPGWx TPS information is displayed for the specified linkset and for each link in the linkset.

LSN—The linkset name.

THRESH—The **threshold at which an alarm will be generated to indicate that the actual linkset TPS is approaching the configured linkset iptps value** (**lsusealm** value as shown in **rtrv-ls** output).

CONFIG—The **iptps** value as shown in **rtrv-ls** output

TPS—The current transmit (TX) and receive (RCV) TPS for 15 seconds.

PEAK—The peak transmit (TX) and receive (RCV) TPS usage for all 15 second periods since the last peak reset.

PEAKTIMESTAMP—The date and time that the displayed transmit and receive TPS peaks occurred.

LOC—Location of the card that contains a displayed link in the linkset.

PORT—A signaling link in the linkset.

THRESH—The **slkusethresh** value as shown in **rtrv-ls** output

CONFIG—Dashes (-----). There is no configurable TPS for links.

TPS—The current transmit (TX) and receive (RCV) TPS for 15 seconds.

PEAK—The peak transmit (TX) and receive (RCV) TPS usage for all 15 second periods since the last peak reset.

PEAKTIMESTAMP—The date and time that the displayed transmit and receive TPS peaks occurred.

rept-stat-lfs

Report LFS Test Status

Use this command to generate a report of all the SS7 links that are under LFS test. Along with the link identification information, the command output lists the current LBP, the test pattern, the maximum bit-errors threshold, the bit-errors since the beginning of this test, the maximum test time, and the time elapsed since the beginning of the test.

Keyword: **rept-stat-lfs**

Related Commands: **rept-stat-slk**

Command Class: Link Maintenance

Parameters

:link= (optional)

The signaling link port on the card specified in the **loc** parameter.

Synonym: **port**

Range: **a, b, a1-a31, b1-b31**

Not all card types support all **link** parameter values.

See Table A-1 for valid **link** parameter range values for each type of card that can have assigned signaling link ports.

:loc= (optional)

This parameter is mandatory when the **port** parameter is specified.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1212, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208,**

4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218,
5301-5308, 5311-5318, 6101-6108, 6111-6118

Example

```
rept-stat-lfs
```

```
rept-stat-lfs:loc=1201
```

```
rept-stat-lfs:loc=1201:link=a1
```

Dependencies

The LFS feature must be turned on before this command can be entered.

The card location specified in the **loc** parameter must be equipped.

The signaling link that is specified in the **link** parameter must be assigned to the card in the **loc** parameter location.

Card locations 1113, 1114, 1115, 1116, 1117, 1118, and all xy09 and xy10 locations (x is the frame and y is the shelf) cannot be specified in the loc parameter.

The card location (**loc** parameter) must be a **limds0**, **limt1**, or **limch** (associated with a **limt1**) card configured with either an **ss7ansi** or **ccs7itu** application.

If the **link** parameter is specified, the **loc** parameter must be specified.

This command cannot be entered during upgrade.

Notes

This command can be canceled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

Output

If no parameters are specified, all links that are in LFS test are displayed.

rept-stat-lfs

```
rlghncxa03w 04-02-27 16:50:24 EST EAGLE 31.3.0
SLK      LBP  PATTERN      MAX-ERRORS  BIT_ERRORS  MAX-TIME  TEST-TIME
1201,A    5   B0247          56          30  01:00:00  00:00:50
1202,A    3   B511          56          27  01:00:00  00:01:05
1203,A    1   OCTET          56          12  01:00:00  00:02:07
1204,A    6   ALTERNATE       56          28  01:00:00  00:04:08
1205,A    2   B0247          56          36  01:00:00  00:03:05
1206,A    1   B0247          56          15  01:00:00  00:06:06
1207,A    3   B0247          56          19  01:00:00  00:02:04
1208,A    5   B0247          56          23  01:00:00  00:04:01
;
```

If only the **loc** parameter is specified, all links in LFS test on the specified card are displayed.

rept-stat-lfs:loc=1208

```
rlghncxa03w 04-02-27 16:50:24 EST EAGLE 31.3.0
SLK      LBP  PATTERN      MAX-ERRORS  BIT_ERRORS  MAX-TIME  TEST-TIME
1208,A    5   B0247          56          23  01:00:00  00:04:01
1208,B1   4   B0247          56          23  01:00:00  00:08:01
;
```

If the **loc** and **link** parameters are specified, only the specified link on the specified card is displayed.

rept-stat-lfs:loc=1208:link=a

```
rlghncxa03w 04-02-27 16:50:24 EST EAGLE 31.3.0
SLK      LBP  PATTERN      MAX-ERRORS  BIT_ERRORS  MAX-TIME  TEST-TIME
1208,A    5   B0247          56          23  01:00:00  00:04:01
;
```

Legend

SLK—The signaling link identifier; same as **loc** and **link** parameters of **act-lbp** command.

LBP—The loopback point of this test; same as **lbp** parameter of **act-lbp** command.

PATTERN—The test pattern; same as **pattern** parameter of **act-lbp** command.

MAX-

ERRORS—The bit-error threshold allowed for this LFS test; same as **maxerr** parameter of **act-lbp** command.

BIT_ERRORS—Number of bit-errors since the beginning of this test.

MAX-TIME—The time window for testing each loop-back point; same as **time** parameter of **act-lbp** command.

TEST-TIME—Amount of time the test has run.

rept-stat-lnp**LNP Status Report**

Use this command to generate a report of the local number portability (LNP) status information.

When the **rept-stat-lnp** command is entered with no parameters, a summary of the LNP status of all equipped SCCP cards is provided. This summary includes Global Title Translation (GTT) and LNP function status for every SCCP card, as well as LNPQS system information.

When the **loc** parameter is specified, a detailed status of LNP information for the specified SCCP card is provided. These detailed reports include information for each of the following functions: Global Title Translation (GTT), LNP Message Relay (LNPMR), LNP Query Service (LNPQS), Personal Communication Service LNP Query Service (PLNPQS) (if the PLNP feature is turned on), Wireless LNP Query Service (WNPQS) (if the WNP feature is turned on), Triggerless LNP (TLNP) (if the TLNP feature is turned on), and Automatic Call Gap (ACG).

When the **card=sccp all** parameter is specified, a detailed status of LNP information for all SCCP cards is provided.

Keyword: **rept-stat-lnp**

Related Commands: **chg-th-alm, rept-stat-sccp, rtrv-th-alm**

Command Class: System Maintenance

Parameters

:card= (optional)

Specify **card=sccp-all** to display a report of the LNP status of all equipped SCCP cards. The **card** parameter is not valid with the **loc** parameter.

Range: **sccp-all**

:loc= (optional)

The card location as stenciled on the shelf of the EAGLE 5 ISS. The **loc** parameter is not valid with the **card** parameter.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

Default: A summary for all cards is displayed.

Example

```
rept-stat-lnp
```

```
rept-stat-lnp:card=sccp-all
```

```
rept-stat-lnp:loc=1106
```

Dependencies

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before this command can be entered.

Only one optional parameter can be specified in the command. The **card** and **loc** parameters cannot be specified together in the same command.

The only valid value for the **card** parameter is **sccp-all**.

No other **rept-stat-xxx** command can be in progress when this command is issued.

At least one SCCP card must be configured in the system.

The card location (**loc** parameter) must identify a configured TSM card running the **sccp** application.

Notes

The error information on this report is based on 30-second intervals. The values for number of errors and total messages are for the last 30-second period. The usage information is also updated once every 30 seconds.

When the **rept-stat-lnp** command is entered with no parameters, a summary of the LNP subsystem status is reported, followed by a summary of the LNP status of all equipped SCCP cards. This

summary includes global title translation (GTT) and LNP function status for every SCCP card, as well as LNPQS system information. The GTT status is either ACT (active) or SWDL (software loading). The LNP status is either ACT, OFFLINE, or SWDL. LNPQS system information is then provided in the following fields:

- The SSN STATUS and MATE SSN STATUS fields show the state of the LNP subsystems: Prohibited, Restricted, or Allowed.
- The ACG OVERLOAD LEVEL field shows the ACG node overload control level used by the system.
- The system average MIC usage is expressed as a percentage of the number of MICs sent by all cards, divided by the number of responses sent by all cards.

The **rept-stat-lnp** command also provides a summary of the following system-wide LNP statistics.

- The average GTT usage is expressed as the average percentage of GTT usage per card.
- The average LNPMR usage is expressed as the average percentage of LNPMR usage per card.
- The average LNPQS usage is expressed as the average percentage of LNPQS usage per card.
- The average WNPQS usage is expressed as the average percentage of WNPQS usage per card. WNPQS information is displayed only if the WNP feature is turned on.
- The average PLNPQS usage is expressed as the average percentage of PLNPQS usage per card. PLNPQS information is displayed only if the PCS 1900 Number Portability feature (PLNP) is turned on.
- The average CPU usage is expressed as the average percentage of CPU usage per card.
- The total number of GTT, LNPMR, LNPQS, WNPQS (if turned on), TLNP (if turned on), and PLNPQS (if turned on) errors for corresponding messages received across all cards.

When the **rept-stat-lnp** command is entered for a specific card (for example, **rept-stat-lnp:loc=xxxx**), status information for the card at the specified location is provided, followed by the alarm status and detailed LNP status information and statistics for each LNP function.

- GTT STATUS, either ACT (active) or SWDL (software loading).
- GTT USAGE, expressed as a percentage of the amount of CPU used to process GTT messages during the last 30 seconds by the specified card.
- GTT ERRORS, the number of GTT errors detected for the total number of GTT messages received by the specified card.
- LNPMR STATUS, either ACT (active), OFFLINE, or SWDL (software loading).
- LNPMR USAGE, expressed as a percentage of the amount of CPU used to process LNP message relay messages during the last 30 seconds by the specified card.
- LNPMR ERRORS, the number of LNP message relay errors detected for the total number of LNP message relay messages received by the specified card.
- LNPQS STATUS, either ACT (active), OFFLINE, and SWDL (software loading).
- LNPQS USAGE, expressed as a percentage of the amount of CPU used to process LNP query messages during the last 30 seconds by the specified card.
- LNPQS ERRORS, the number of LNP query errors detected for the total number of LNP query messages received by the specified card.
- WNPQS STATUS, either ACT (active), OFFLINE, and SWDL (software loading).

- WNPQS USAGE, expressed as a percentage of the amount of CPU used to process WNP query messages during the last 30 seconds by the specified card.
- WNPQS ERRORS, the number of WNP query errors detected for the total number of WNP query messages received by the specified card.

NOTE: IS-41 LNP Queries with a TT associated with the LNPQS service are pegged as IS-41 LNP Queries with a TT associated with the WNP service under the WNPQS counter. The WNPQS STATUS, WNPQS USAGE, and WNPQS ERRORS fields are displayed only if the Wireless Number Portability feature is ON.

- PLNPQS STATUS, either ACT (active), OFFLINE, and SWDL (software loading).
- PLNPQS USAGE, expressed as the amount of CPU used to process PCS 1900 LNP Query messages over the last 30-second period by the specific card.
- PLNPQS ERRORS, the number of PCS query errors detected for the total number of PCS query messages received by the specified card.

NOTE: PCS 1900 LNP Queries with a TT associated with the LNPQS service are processed and pegged as IN LNP Queries under the LNPQS counter. The PLNPQS STATUS, PLNPQS USAGE, and PLNPQS ERRORS fields are displayed only if the PCS 1900 Number Portability (PLNP) feature is ON.

- TLNP STATUS, either ACT (active), OFFLINE, and SWDL (software loading).
- TLNP USAGE, expressed as a percentage of the amount of CPU used to process Triggerless LNP Encapsulated IAM messages over the last 30-second period by the specific card.
- TLNP ERRORS, the number of TLNP query errors detected for the total number of TLNP query messages received by the specified card.

NOTE: The TLNP STATUS, TLNP USAGE, and TLNP ERRORS fields are displayed only if the Triggerless LNP (TLNP) feature is ON.

- ACG OVERLOAD LEVEL, the ACG node overload control level being used by the system.
- MIC USAGE, expressed as a percentage of the number of MICs sent by the specific card divided by the number of responses sent by the specified card during the last 30 seconds.
- CPU USAGE, expressed as a percentage of the amount of CPU used to process messages by the specified card during the last 30 seconds.

When the **:card=sccp-all** parameter is specified, detailed information is provided about the status of all SCCP cards. The information displayed in the output is the same as that displayed for the **:loc=xxxx** parameter.

Output

In the following example, the WNP, PLNP, and TLNP features are off.

rept-stat-lnp

```
rlghncxa03w 02-11-24 10:37:22 EST EAGLE 30.0.0
LNP SUBSYSTEM REPORT 00S-MT-DSBLD Active -----
LNP Cards Configured= 3
CARD PST SST GTT STATUS LNP STATUS CPU USAGE
1106 IS-NR Active ACT OFFLINE 10%
1201 IS-NR Active ACT OFFLINE 12%
1310 00S-MT-DSBLD Manual -----
```

LNPQS:

```
SSN STATUS = Prohibited MATE SSN STATUS = Allowed
ACG: OVERLOAD LEVEL = 0 MIC UASGE = 0%
```

AVERAGE USAGE:

```
GTT = 13% LNPMT = 0% LNPQS = 0%
```

```
AVERAGE CPU USAGE = 11%
```

TOTAL ERRORS:

```
GTT: 0 out of 2000
LNPMT: 0 out of 0
LNPQS: 0 out of 0
```

```
Command Completed
```

```
;
```

In the following example, the WNP, PLNP, and TLNP features are on.

rept-stat-lnp

```
rlghncxa03w 02-11-07 08:50:14 EST EAGLE 30.0.0
LNP SUBSYSTEM REPORT IS-ANR Active -----
ASSUMING MATE'S LOAD
LNP Cards Configured= 5
CARD PST SST GTT STATUS LNP STATUS CPU USAGE
1106 IS-NR Active ACT ACT 23%
1201 IS-ANR Standby SWDL SWDL 0%
1205 00S-MT-DSBLD Manual ----- 0%
1302 00S-MT FLT ----- 0%
1310 IS-ANR Standby ACT SWDL 0%
```

LNPQS:

```
SSN STATUS = Allowed MATE SSN STATUS = Prohibited
ACG: OVERLOAD LEVEL = 0 MIC USAGE = 100%
```

AVERAGE USAGE:

```
GTT = 13% LNPMT = 0% LNPQS = 0%
WNPQS = 0% TLNP = 10% PLNPQS = 0%
```

```
AVERAGE CPU USAGE = 23%
```

TOTAL ERRORS:

```
GTT: 1 out of 2000
LNPMT: 0 out of 0
LNPQS: 1 out of 500
WNPQS: 0 out of 0
PLNPQS: 0 out of 0
TLNP: 1 out of 500
```

```
Command Completed.
```

```
;
```

In the following example, the WNP, PLNP and TLNP features are on.

rept-stat-lnp:loc=1106

```

rlghncxa03w 04-04-24 10:37:22 EST EAGLE 31.6.0
CARD  VERSION      TYPE      PST      SST      AST
1106  021-101-000  TSM      IS-NR      Active    -----
ALARM STATUS      = No Alarms.
GTT:  STATUS = ACT      USAGE = 10%  ERRORS:  1 out of 1000
LNPMR: STATUS = ACT      USAGE = 13%  ERRORS:  0 out of 1300
LNPQS: STATUS = ACT      USAGE = 20%  ERRORS:  1 out of 2000
WNPQS: STATUS = ACT      USAGE = 0%   ERRORS:  0 out of   0
PLNPQS:STATUS = ACT      USAGE = 0%   ERRORS:  0 out of   0
TLNP:  STATUS = ACT      USAGE = 0%   ERRORS:  0 out of   0
ACG:   OVERLOAD LEVEL = 0    MIC USAGE = 100%
CPU USAGE = 43%
Command Completed.

```

;

LNP status command using the **card=** parameter**rept-stat-lnp:card=sccp-all**

```

tklcl1190601 06-04-05 13:45:02 EST EAGLE5 35.0.0
CARD  VERSION      PST      SST      AST
1205  038-003-013  IS-NR      Active    DB_DIFF
ALARM STATUS      = ** 0451 RTDB reload is required
GTT:  STATUS = ACT      USAGE = 0%   ERRORS:  0 of   0
LNPMR: STATUS = ACT      USAGE = 0%   ERRORS:  0 of   0
LNPQS: STATUS = ACT      USAGE = 0%   ERRORS:  0 of   0
WNPQS: STATUS = ACT      USAGE = 0%   ERRORS:  0 of   0
TLNP:  STATUS = ACT      USAGE = 0%   ERRORS:  0 of   0
PLNPQS:STATUS = ACT      USAGE = 0%   ERRORS:  0 of   0
ACG:   OVERLOAD LEVEL = 0    MIC USAGE = 0%
CPU USAGE = 5%

```

```

CARD  VERSION      PST      SST      AST
1317  038-003-013  IS-NR      Active    DB_DIFF
ALARM STATUS      = ** 0451 RTDB reload is required
GTT:  STATUS = ACT      USAGE = 0%   ERRORS:  0 of   0
LNPMR: STATUS = ACT      USAGE = 0%   ERRORS:  0 of   0
LNPQS: STATUS = ACT      USAGE = 0%   ERRORS:  0 of   0
WNPQS: STATUS = ACT      USAGE = 0%   ERRORS:  0 of   0
TLNP:  STATUS = ACT      USAGE = 0%   ERRORS:  0 of   0
PLNPQS:STATUS = ACT      USAGE = 0%   ERRORS:  0 of   0
ACG:   OVERLOAD LEVEL = 0    MIC USAGE = 0%
CPU USAGE = 5%

```

```

CARD  VERSION      PST      SST      AST
2213  038-003-013  IS-NR      Active    DB_DIFF
ALARM STATUS      = ** 0451 RTDB reload is required
GTT:  STATUS = ACT      USAGE = 0%   ERRORS:  0 of   0
LNPMR: STATUS = ACT      USAGE = 0%   ERRORS:  0 of   0
LNPQS: STATUS = ACT      USAGE = 0%   ERRORS:  0 of   0
WNPQS: STATUS = ACT      USAGE = 0%   ERRORS:  0 of   0
TLNP:  STATUS = ACT      USAGE = 0%   ERRORS:  0 of   0
PLNPQS:STATUS = ACT      USAGE = 0%   ERRORS:  0 of   0
ACG:   OVERLOAD LEVEL = 0    MIC USAGE = 0%
CPU USAGE = 5%

```

```

CARD  VERSION      PST      SST      AST
2215  -----      00S-MT-DSBLD  Manual    -----
ALARM STATUS      = No Alarms.
GTT:  STATUS = -----  USAGE = 0%   ERRORS:  0 of   0
LNPMR: STATUS = -----  USAGE = 0%   ERRORS:  0 of   0
LNPQS: STATUS = -----  USAGE = 0%   ERRORS:  0 of   0
WNPQS: STATUS = -----  USAGE = 0%   ERRORS:  0 of   0
TLNP:  STATUS = -----  USAGE = 0%   ERRORS:  0 of   0
PLNPQS:STATUS = -----  USAGE = 0%   ERRORS:  0 of   0

```


ACG: OVERLOAD LEVEL = 0 MIC USAGE = 0%
CPU USAGE = 0%

CARD	VERSION	PST	SST	AST
2217	038-003-013	IS-NR	Active	DB_DIFF
ALARM STATUS = ** 0451 RTDB reload is required				
GTT:	STATUS = ACT	USAGE = 0%	ERRORS:	0 of 0
LNPMR:	STATUS = ACT	USAGE = 0%	ERRORS:	0 of 0
LNPQS:	STATUS = ACT	USAGE = 0%	ERRORS:	0 of 0
WNPQS:	STATUS = ACT	USAGE = 0%	ERRORS:	0 of 0
TLNP:	STATUS = ACT	USAGE = 0%	ERRORS:	0 of 0
PLNPQS:	STATUS = ACT	USAGE = 0%	ERRORS:	0 of 0
ACG: OVERLOAD LEVEL = 0 MIC USAGE = 0%				
CPU USAGE = 5%				

CARD	VERSION	PST	SST	AST
2317	-----	OOS-MT	Isolated	-----
ALARM STATUS = ** 0013 Card is isolated from the system				
GTT:	STATUS = -----	USAGE = 0%	ERRORS:	0 of 0
LNPMR:	STATUS = -----	USAGE = 0%	ERRORS:	0 of 0
LNPQS:	STATUS = -----	USAGE = 0%	ERRORS:	0 of 0
WNPQS:	STATUS = -----	USAGE = 0%	ERRORS:	0 of 0
TLNP:	STATUS = -----	USAGE = 0%	ERRORS:	0 of 0
PLNPQS:	STATUS = -----	USAGE = 0%	ERRORS:	0 of 0
ACG: OVERLOAD LEVEL = 0 MIC USAGE = 0%				
CPU USAGE = 0%				

CARD	VERSION	PST	SST	AST
1105	038-003-013	IS-NR	Active	DB_DIFF
ALARM STATUS = ** 0451 RTDB reload is required				
GTT:	STATUS = ACT	USAGE = 0%	ERRORS:	0 of 0
LNPMR:	STATUS = ACT	USAGE = 0%	ERRORS:	0 of 0
LNPQS:	STATUS = ACT	USAGE = 1%	ERRORS:	0 of 1003
WNPQS:	STATUS = ACT	USAGE = 0%	ERRORS:	0 of 0
TLNP:	STATUS = ACT	USAGE = 0%	ERRORS:	0 of 0
PLNPQS:	STATUS = ACT	USAGE = 0%	ERRORS:	0 of 0
ACG: OVERLOAD LEVEL = 0 MIC USAGE = 0%				
CPU USAGE = 7%				

Command Completed.

;

In the following example, an LNP feature (LNP ported TNs) quantity greater than 120 million numbers is enabled and the WNP, PLNP and TLNP features are on.

rept-stat-lnp

Integrat40 05-07-24 10:37:22 EST EAGLE5 34.0.0

CARD	PST	SST	GTT STATUS	LNP STATUS	CPU USAGE
1106	IS-NR	Active	ACT	ACT	23%
1201	IS-ANR	Standby	SWDL	SWDL	0%
1205	OOS-MT-DSBLD	Manual	-----	-----	0%
1302	OOS-MT	FLT	-----	-----	0%
1310	IS-ANR	Standby	ACT	SWDL	0%

LNPQS:
SSN STATUS = Allowed MATE SSN STATUS = Prohibited
ACG: OVERLOAD LEVEL = 0 MIC USAGE = 100%

AVERAGE USAGE:
GTT = 13% LNPMR = 0% LNPQS = 0%
WNPQS = 0% TLNP = 10% PLNPQS = 0%
AVERAGE CPU USAGE = 23%
TOTAL ERRORS:

```

GTT:      1 out of 2000
LNPMR:    0 out of 0
LNPQS:    0 out of 0
WNPQS:    0 out of 0
PLNPQS:   0 out of 0
TLNP:     1 out of 500

PROVISIONED TABLE QTY:
TN:       76800000 of 96000000 ( 80%)
NPA:      135000 of 150000 ( 90%)
LRN:      90000 of 100000 ( 90%)
Command Completed.
;

```

Legend

CARD—The locations of the SCCP cards.

VERSION—The version number of the GPL the cards are running.

TYPE—The type of SCCP card.

PST—The primary state of the card. The possible values are described in "Possible Values for PST/SST/AST" in Appendix A.

SST—The secondary state of the card. The possible values are described in "Possible Values for PST/SST/AST" in Appendix A.

AST—The associated state of the card. The possible values are described in "Possible Values for PST/SST/AST" in Appendix A.

rept-stat-ls

Report Status Linkset

Use this command to generate a report of the status of the MTP linksets. When a specific linkset is requested, the output displays a list of the links in the linkset and their secondary status. Output is generated for each of the 16 signaling link codes (SLC).

Keyword: **rept-stat-ls**

Related Commands: **chg-l3t, dlt-ls, ent-ls, rtrv-ls**

Command Class: System Maintenance

Parameters

:lsn= (optional)

Linkset name. The name of the linkset for which the report information is to be displayed.

Range: **ayyyyyyyyy**

1 alphabetic character followed by up to 9 alphanumeric characters

Default: All linksets are displayed

:stat= (optional)

The primary state filter. This parameter indicates the state of the linksets for which a report will be displayed. For example, to display a report for all linksets whose state is DSBLD, specify the **stat=dsbld** parameter.

Range: **all, alminh, anr, dsbld, mt, nr**

all— All of the primary states

alminh— Alarms inhibited

anr— In-Service-Abnormal (IS-ANR)

dsbld— Out-of-Service-Maintenance-Disabled (OOS-MT-DSBLD)

mt— Out-of-Service-Maintenance (OOS-MT)

nr— In-Service-Normal (IS-NR)

Default: **all**

Example**rept-stat-ls****rept-stat-ls:lsn=lsnstpa****Dependencies**

No other **rept-stat-xxx** command can be in progress when this command is entered.

The linkset specified by the **lsn** parameter must be equipped in the database.

Notes

This command can be canceled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

If no link is equipped for the SLC, the output is “____ UEQ.”

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (**s-**) and the private and spare point code subtype prefix (**ps-**). All of the point code types support the private (internal) point code subtype prefix (**p-**).

Output

rept-stat-ls

```

eagle10207 02-08-23 10:09:59 EST EAGLE 30.0.0
LSN      APCA      PST      SST      AST
ls11234567 001-001-002    00S-MT    Prohibit  GWS
ls11345678 001-001-003    00S-MT    Prohibit  -----
ls11345679 001-001-004    00S-MT    Idle      -----
ls1134567  001-001-005    00S-MT    Prohibit  -----
ls113456  001-001-006    00S-MT    Prohibit  -----
ls11345  001-001-007    00S-MT    Prohibit  GWS
ls113467 001-001-008    00S-MT    Prohibit  -----
ls1134  001-001-009    00S-MT    Prohibit  -----
ls987  009-008-007    00S-MT    Idle      -----
z  009-008-009    00S-MT    Idle      -----
cap8  008-008-008    00S-MT    Idle      -----

LSN      APCN      PST      SST      AST
lsnational 16383-aa    00S-MT    Idle      -----

LSN      APCN24    PST      SST      AST

LSN      APCI      PST      SST      AST
Command Completed.

```

;

rept-stat-ls:lsn=lsnstpa

```

rlghncxa03w 04-02-27 14:59:11 EST EAGLE 31.3.0
LSN      APCA      PST      SST      AST
lsnstpa  110-15-08  IS-NR      Allowed  -----
ALARM STATUS      = No Alarms.
SCRSET  = ----
GWSA    = ----
GWSM    = ----
GWSD    = ----
SLC  SLK      SST      SLC  SLK      SST
0   1207,A  Avail      8   ----,-  UEQ
1   1203,A  Avail      9   ----,-  UEQ
2   1103,B  LPBK      10  ----,-  UEQ
3   ----,-  UEQ        11  ----,-  UEQ
4   ----,-  UEQ        12  ----,-  UEQ
5   ----,-  UEQ        13  ----,-  UEQ
6   ----,-  UEQ        14  ----,-  UEQ
7   ----,-  UEQ        15  ----,-  UEQ
Command Completed.

```

;

The following example includes output for linksets that contain 24-bit ITU-N adjacent point codes.

rept-stat-ls

```

tekelecstp 02-03-20 21:22:04 EST EAGLE 31.0.0
LSN      APCA      PST      SST      AST
lsansi  001-005-001  00S-MT    Prohibit  -----

LSN      APCN      PST      SST      AST

LSN      APCN24    PST      SST      AST
ls24  004-004-004  00S-MT    Prohibit  -----
test20 020-020-020  00S-MT    Idle      -----

LSN      APCI      PST      SST      AST
Command Completed.

```

;

The following example includes output for linksets that contain spare and private adjacent point codes.

rept-stat-ls

```
tekelecstp 02-03-20 21:22:04 EST EAGLE 31.12.0
LSN          APCA          PST          SST          AST
ls11234567   001-001-002     00S-MT     Prohibit     GWS
ls11345678   001-001-003     00S-MT     Prohibit     -----
ls11345679   001-001-004     00S-MT     Idle         -----
ls1134567    001-001-005     00S-MT     Prohibit     -----
ls113456     001-001-006     00S-MT     Prohibit     -----
ls11345      p-001-001-007     00S-MT     Prohibit     GWS
ls113467     001-001-008     00S-MT     Prohibit     -----
ls1134       p-001-001-009     00S-MT     Prohibit     -----
ls987        009-008-007     00S-MT     Idle         -----
z            009-008-009     00S-MT     Idle         -----
cap8         008-008-008     00S-MT     Idle         -----

LSN          APCN          PST          SST          AST
lsnational   s-09-14-05-3-ab     00S-MT     Idle         -----

LSN          APCN24         PST          SST          AST

LSN          APCI          PST          SST          AST
Command Completed.
```

;

Legend

LSN—The name of the linkset

APCA/APCI/APCN/APCN24—The adjacent point code of the linkset (ANSI, ITU-I, ITU-N, ITU-N 24-bit)

PST—The primary state of the linkset. The possible values are described in "Possible Values for PST/SST/AST".

SST—The secondary state of the linkset. The possible values are described in "Possible Values for PST/SST/AST".

AST—The associated state of the linkset. The possible values are described in "Possible Values for PST/SST/AST".

ALARM STATUS—A listing of any trouble text alarm messages that have been generated for the specified card.

SCRN—The name of the gateway screening screen set associated with the linkset.

GWSA—Shows whether gateway screening is used for the specified linkset.

GWSM—Shows whether gateway screening messaging is turned on for the specified linkset.

GWSD—Shows whether the discarding of MSUs that bypass the gateway screening function due to load-shedding is turned on.

SLC—The signaling link codes associated with the links that are contained in the specified linkset.

SLK—The signaling links that are contained in the linkset, shown by the card location containing the signaling link and the port on the card containing the signaling link.

rept-stat-lsms

Report the Status of LSMS

Use this command to generate a summary report of the status of the Local Service Management System (LSMS) subsystem on the EAGLE 5 ISS.

NOTE: This command is obsolete.

NOTE: If the LNP ELAP Configuration feature is turned on in the system, the **rept-stat-lsms** command is no longer available. Instead, use the **rept-stat-mps** command.

Keyword: **rept-stat-lsms**

Related Commands: **alw-trm**, **chg-trm**, **inh-trm**, **rept-stat-seas**, **rept-stat-sys**, **rept-stat-trbl**, **rept-stat-trm**

Command Class: System Maintenance

Parameters

This command has no parameters.

Example

rept-stat-lsms

Dependencies

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before this command can be entered.

The **rept-stat-lsms** command is not available when the LNP ELAP Configuration feature is turned on. The **rept-stat-mps** command must be entered.

No other **rept-stat-xxx** command can be in progress when this command is entered.

Notes

None

Output**rept-stat-lsms**

```

rlghncxa03w 04-02-17 14:59:11 EST EAGLE 31.3.0
                                GPL          PST          SST          AST
-----
LSMS SYSTEM                    IS-ANR          Restricted  -----
TDM Port           6          IS-NR          Active      -----
OAP                A    220-001-000  OOS-MT      Isolated    -----
OAP                B    -----    OOS-MT      Isolated    -----
LSMS Conn          A1          IS-NR          Active      -----
LSMS Conn          B1          OOS-MT      Fault       -----

LSMS SYSTEM ALARM STATUS = ** 0362 LSMS is at min service limit
OAP A        ALARM STATUS = No Alarms.
OAP B        ALARM STATUS = ** 0341 OAP unavailable
LSMS Conn A1 ALARM STATUS = No Alarms.
LSMS Conn B1 ALARM STATUS = ** 0359 LSMS connection unavailable

Command Completed.
;

```

Legend

GPL—Generic program load number of the subsystem component.

PST—The primary state of the subsystem. The possible values are described in "Possible Values for PST/SST/AST".

SST—The secondary state of the subsystem. The possible values are described in "Possible Values for PST/SST/AST".

AST—The associated state of the subsystem. The possible values are described in "Possible Values for PST/SST/AST".

rept-stat-meas**Report Measurement Status**

Use this command to report the status of the Measurements Subsystem, including card location and state, alarm level, and subsystem state.

Keyword: **rept-stat-meas**

Related Commands: **rept-stat-card**

Command Class: System Maintenance

Parameters

This command has no parameters.

Example

```
rept-stat-meas
```

Dependencies

The Measurements Platform feature must be turned on prior to issuing this command.

At least one MCPM card must be configured in the system.

No other **rept-stat-xxx** commands can be in progress when this command is issued.

Notes

The MCPM card status is independent of the IP Network Link status (Port A). The card can be IS-NR even if the network link has failed.

The version of the GPL is shown in the command output if the MCPM card is in the IS-NR or IS-ANR state. (The **rept-stat-card** command will not show the GPL version if the card is ISANR.)

Output

rept-stat-meas

```

                                PST           SST           AST
MEAS SS                        OOS-MT       Fault       -----

ALARM STATUS =    ** 0516  MEAS degraded with card out of service

CARD  VERSION          TYPE  PST           SST           AST
1107  P 101-9-000      MCPM  IS-NR       Active       -----
      IP Link A                IS-NR       Active       Available
1109  101-9-000      MCPM  OOS-MT       Fault       -----
      IP Link A                OOS-MT       Fault       Unavailable

CARD 1107 ALARM STATUS = No Alarms
CARD 1109 ALARM STATUS = Card is isolated from the system
Command Completed.
;

```

Legend

VERSION—The version number of the GPL that the specified MCPM card is running. The version is shown if the card is in the IS-NR or IS-ANR state.

TYPE—MCPM; the card that is running the Measurements Subsystem application.

PST—The primary state of the Measurements Subsystem or card. The possible values are described in "Possible Values for PST/SST/AST".

SST—The secondary state of the Measurements Subsystem or card. The possible values are described in "Possible Values for PST/SST/AST".

AST—The associated state of the Measurements Subsystem or card. The possible values are described in "Possible Values for PST/SST/AST".

MEAS SS—The Measurements Subsystem application running on the MCPM card.

ALARM STATUS—A listing of any trouble text alarm messages that have been generated for the MCPM and the applications running on the MCPM.

CARD—The location of the MCPM card. The MCPM card with the letter "P" to the right of its card location is the primary MCPM. The primary MCPM transfers scheduled measurements report files to the primary FTP server. When the primary state (PST) of the MCPM is IS-NR, the secondary state (SST) indicates whether the MCPM is active or standby.

CARD XXXX ALARM STATUS—A listing of any trouble text alarm messages that have been generated for the card.

rept-stat-mps

Report the MPS Status

Use this command to display the overall status of the application running on the MPS (multi-purpose server).

- If the LNP ELAP Configuration feature is turned on, the status of the ELAP (EAGLE LNP Application Processor) subsystem is displayed.

- If the INP (INAP number portability) feature is turned on, the status of the EPAP (EAGLE Provisioning Application Processor) subsystem is displayed.
- If the G-Port (GSM mobile number portability) feature or G-Flex (GSM flexible numbering) feature is turned on, the status of the GSM (Global System for Mobile Telecommunications) and the EPAP (EAGLE Provisioning Application Processor) is displayed.
- If the EIR (Equipment Identity Register) feature is enabled and turned on, the status of the EIR component on the card is displayed.

Keyword: rept-stat-mps

Related Commands: rept-stat-card, rept-stat-sccp

Command Class: System Maintenance

Parameters

:loc= (optional)

The card location of the VSCCP card to be reported on, as stenciled on the shelf of the EAGLE 5 ISS.

Range: 1101-1108, 1111-1117, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Example

rept-stat-mps:loc=1106

Dependencies

The card location specified in the **loc** parameter, must contain a VSCCP card.

The INP, G-Port, G-Flex, Equipment Identity Register (EIR), or LNP ELAP Configuration feature must be on before this command can be entered.

At least one VSCCP card must be configured in the system before this command can be entered.

To specify the **rept-stat-mps** command, no other **rept-stat-xxxx** command can be in progress.

Notes

When the MPS does not have an alarm on it, the **rept-stat-mps** report indicates in the SST field of the report which MPS is the active and which is the standby. When the MPS has an alarm on it, the SST field shows "Fault," and the Active/Standby information is displayed in the AST field as long as there is an alarm. After the alarm clears, the Active/Standby information appears in the SST field as before.

Output

The following example shows the possible system response if the G-Flex or G-Port feature and the INP feature are turned on:

rept-stat-mps

```
rlghncxa03w 04-01-07 10:23:93 EST EAGLE 31.3.0
                                VERSION      PST      SST      AST
EPAP A                          027-015-000  IS-NR      Active    -----
CRITICAL PLATFORM      ALARM DATA = No Alarms
MAJOR   PLATFORM      ALARM DATA = No Alarms
MINOR   PLATFORM      ALARM DATA = No Alarms
CRITICAL APPLICATION  ALARM DATA = No Alarms
MAJOR   APPLICATION  ALARM DATA = No Alarms
MINOR   APPLICATION  ALARM DATA = No Alarms
          ALARM STATUS = No Alarms

                                VERSION      PST      SST      AST
EPAP B                          027-015-000  OOS-MT      Fault     Standby
CRITICAL PLATFORM      ALARM DATA = No Alarms
MAJOR   PLATFORM      ALARM DATA = h'0123456789ABCDEF
MINOR   PLATFORM      ALARM DATA = h'0123456789ABCDEF
CRITICAL APPLICATION  ALARM DATA = No Alarms
MAJOR   APPLICATION  ALARM DATA = h'0123456789ABCDEF
MINOR   APPLICATION  ALARM DATA = No Alarms
          ALARM STATUS = ** 0371 Major Platform Failure(s)

CARD  PST      SST      GSM STAT  INP STAT
1106 P IS-NR    Active    ACT      ACT
1201  IS-ANR    Active    SWDL     SWDL
1205  OOS-MT-DSBLD Manual    -----
1302  OOS-MT    Isolated  -----
1310  IS-ANR    Standby   SWDL     SWDL

CARD 1106 ALARM STATUS = No Alarms
      DSM PORT A:      ALARM STATUS      = No Alarms
      DSM PORT B:      ALARM STATUS      = No Alarms
CARD 1201 ALARM STATUS = No Alarms
      DSM PORT A:      ALARM STATUS      = ** 0084 IP Connection Unavailable
      DSM PORT B:      ALARM STATUS      = ** 0084 IP Connection Unavailable
CARD 1205 ALARM STATUS = No Alarms
      DSM PORT A:      ALARM STATUS      = ** 0084 IP Connection Unavailable
      DSM PORT B:      ALARM STATUS      = ** 0084 IP Connection Unavailable
CARD 1302 ALARM STATUS = ** 0013 Card is isolated from the system
      DSM PORT A:      ALARM STATUS      = ** 0084 IP Connection Unavailable
      DSM PORT B:      ALARM STATUS      = ** 0084 IP Connection Unavailable
CARD 1310 ALARM STATUS = No Alarms
      DSM PORT A:      ALARM STATUS      = ** 0084 IP Connection Unavailable
      DSM PORT B:      ALARM STATUS      = ** 0084 IP Connection Unavailable
Command Completed.
```

;

The following example shows the possible system response if the G-Flex or G-Port feature is turned on and the INP feature is off:

rept-stat-mps

```
rlghncxa03w 04-01-07 10:23:93 EST EAGLE 31.3.0
                                VERSION      PST      SST      AST
EPAP A                          027-015-000  IS-NR      Active    -----
CRITICAL PLATFORM      ALARM DATA = No Alarms
MAJOR   PLATFORM      ALARM DATA = No Alarms
MINOR   PLATFORM      ALARM DATA = No Alarms
CRITICAL APPLICATION  ALARM DATA = No Alarms
MAJOR   APPLICATION  ALARM DATA = No Alarms
```

```
MINOR    APPLICATION ALARM DATA = No Alarms
ALARM STATUS = No Alarms
```

```

                VERSION      PST      SST      AST
EPAP B          027-015-000  00S-MT   Fault   Standby
CRITICAL PLATFORM ALARM DATA = No Alarms
MAJOR   PLATFORM ALARM DATA = h'0123456789ABCDEF
MINOR   PLATFORM ALARM DATA = h'0123456789ABCDEF
CRITICAL APPLICATION ALARM DATA = No Alarms
MAJOR   APPLICATION ALARM DATA = h'0123456789ABCDEF
MINOR   APPLICATION ALARM DATA = No Alarms
ALARM STATUS = ** 0371 Major Platform Failure(s)
```

```

CARD  PST      SST      GSM STAT
1106 P IS-NR    Active   ACT
1201  IS-ANR    Active   SWDL
1205  00S-MT-DSBLD Manual  -----
1302  00S-MT    Isolated -----
1310  IS-ANR    Standby  SWDL
```

```

CARD 1106 ALARM STATUS = No Alarms
  DSM PORT A: ALARM STATUS = No Alarms
  DSM PORT B: ALARM STATUS = No Alarms
CARD 1201 ALARM STATUS = No Alarms
  DSM PORT A: ALARM STATUS = ** 0084 IP Connection Unavailable
  DSM PORT B: ALARM STATUS = ** 0084 IP Connection Unavailable
CARD 1205 ALARM STATUS = No Alarms
  DSM PORT A: ALARM STATUS = ** 0084 IP Connection Unavailable
  DSM PORT B: ALARM STATUS = ** 0084 IP Connection Unavailable
CARD 1302 ALARM STATUS = ** 0013 Card is isolated from the system
  DSM PORT A: ALARM STATUS = ** 0084 IP Connection Unavailable
  DSM PORT B: ALARM STATUS = ** 0084 IP Connection Unavailable
CARD 1310 ALARM STATUS = No Alarms
  DSM PORT A: ALARM STATUS = ** 0084 IP Connection Unavailable
  DSM PORT B: ALARM STATUS = ** 0084 IP Connection Unavailable
Command Completed.
```

```
;
```

The following example shows the possible system response if the G-Flex and G-Port features are turned off and the INP feature is turned on:

rept-stat-mps

```
rlghncxa03w 04-01-07 10:23:93 EST EAGLE 31.3.0
```

```

                VERSION      PST      SST      AST
EPAP A          027-015-000  IS-NR    Active   -----
CRITICAL PLATFORM ALARM DATA = No Alarms
MAJOR   PLATFORM ALARM DATA = No Alarms
MINOR   PLATFORM ALARM DATA = No Alarms
CRITICAL APPLICATION ALARM DATA = No Alarms
MAJOR   APPLICATION ALARM DATA = No Alarms
MINOR   APPLICATION ALARM DATA = No Alarms
ALARM STATUS = No Alarms
```

```

                VERSION      PST      SST      AST
EPAP B          027-015-000  IS-NR    Standby  -----
CRITICAL PLATFORM ALARM DATA = No Alarms
MAJOR   PLATFORM ALARM DATA = No Alarms
MINOR   PLATFORM ALARM DATA = No Alarms
CRITICAL APPLICATION ALARM DATA = No Alarms
MAJOR   APPLICATION ALARM DATA = No Alarms
MINOR   APPLICATION ALARM DATA = No Alarms
ALARM STATUS = No Alarms
```

```

CARD  PST      SST      INP STAT
1106 P IS-NR    Active   ACT
```

```

1201  IS-ANR      Active    SWDL
1205  OOS-MT-DSBLD Manual    -----
1302  OOS-MT      Isolated  -----
1310  IS-ANR      Standby   SWDL
CARD 1106 ALARM STATUS = No Alarms
  DSM PORT A:      ALARM STATUS      = No Alarms
  DSM PORT B:      ALARM STATUS      = No Alarms
CARD 1201 ALARM STATUS = No Alarms
  DSM PORT A:      ALARM STATUS      = ** 0084 IP Connection Unavailable
  DSM PORT B:      ALARM STATUS      = ** 0084 IP Connection Unavailable
CARD 1205 ALARM STATUS = No Alarms
  DSM PORT A:      ALARM STATUS      = ** 0084 IP Connection Unavailable
  DSM PORT B:      ALARM STATUS      = ** 0084 IP Connection Unavailable
CARD 1302 ALARM STATUS = ** 0013 Card is isolated from the system
  DSM PORT A:      ALARM STATUS      = ** 0084 IP Connection Unavailable
  DSM PORT B:      ALARM STATUS      = ** 0084 IP Connection Unavailable
CARD 1310 ALARM STATUS = No Alarms
  DSM PORT A:      ALARM STATUS      = ** 0084 IP Connection Unavailable
  DSM PORT B:      ALARM STATUS      = ** 0084 IP Connection Unavailable
Command Completed.

```

;

The following example shows the possible system response if the LNP ELAP Configuration feature is turned on:

rept-stat-mps

```

rlghncxa03w 04-01-07 10:23:93 EST  EAGLE 31.3.0
                                VERSION      PST      SST      AST
ELAP A              027-015-000  OOS-MT      Fault    Standby
CRITICAL PLATFORM   ALARM DATA = No Alarms
MAJOR   PLATFORM    ALARM DATA = h'0123456789ABCDEF
MINOR   PLATFORM    ALARM DATA = h'0123456789ABCDEF
CRITICAL APPLICATION ALARM DATA = No Alarms
MAJOR   APPLICATION ALARM DATA = h'0123456789ABCDEF
MINOR   APPLICATION ALARM DATA = No Alarms
        ALARM STATUS = ** 0371 Major Platform Failure(s)

                                VERSION      PST      SST      AST
ELAP B              027-015-000  OOS-MT      Fault    Active
CRITICAL PLATFORM   ALARM DATA = No Alarms
MAJOR   PLATFORM    ALARM DATA = No Alarms
MINOR   PLATFORM    ALARM DATA = No Alarms
CRITICAL APPLICATION ALARM DATA = h'0123456789ABCDEF
MAJOR   APPLICATION ALARM DATA = h'0123456789ABCDEF
MINOR   APPLICATION ALARM DATA = No Alarms
        ALARM STATUS = *C 0373 Critical Application Failure(s)

CARD  PST      SST      LNP STAT
1106 P IS-NR    Active    ACT
1201  IS-ANR    Active    SWDL
1205  OOS-MT-DSBLD Manual    -----
1302  OOS-MT    Isolated  -----
1310  IS-ANR    Standby   SWDL

CARD 1106 ALARM STATUS = No Alarms
  DSM PORT A:      ALARM STATUS      = No Alarms
  DSM PORT B:      ALARM STATUS      = No Alarms
CARD 1201 ALARM STATUS = No Alarms
  DSM PORT A:      ALARM STATUS      = ** 0084 IP Connection Unavailable
  DSM PORT B:      ALARM STATUS      = ** 0084 IP Connection Unavailable
CARD 1205 ALARM STATUS = No Alarms
  DSM PORT A:      ALARM STATUS      = ** 0084 IP Connection Unavailable
  DSM PORT B:      ALARM STATUS      = ** 0084 IP Connection Unavailable
CARD 1302 ALARM STATUS = ** 0013 Card is isolated from the system
  DSM PORT A:      ALARM STATUS      = ** 0084 IP Connection Unavailable
  DSM PORT B:      ALARM STATUS      = ** 0084 IP Connection Unavailable

```

```

CARD 1310 ALARM STATUS = No Alarms
  DSM PORT A:      ALARM STATUS      = ** 0084 IP Connection Unavailable
  DSM PORT B:      ALARM STATUS      = ** 0084 IP Connection Unavailable
Command Completed.

```

;

The following example shows the possible system response if the EIR feature is enabled and turned on:

rept-stat-mps

```

rlghncxa03w 03-06-24 10:37:22 EST  EAGLE 31.0.0
                                VERSION      PST      SST      AST
EPAP A                          027-015-000  IS-NR      Active   -----
CRITICAL PLATFORM      ALARM DATA = No Alarms
MAJOR   PLATFORM      ALARM DATA = No Alarms
MINOR   PLATFORM      ALARM DATA = No Alarms
CRITICAL APPLICATION  ALARM DATA = No Alarms
MAJOR   APPLICATION  ALARM DATA = No Alarms
MINOR   APPLICATION  ALARM DATA = No Alarms
ALARM STATUS = No Alarms

                                VERSION      PST      SST      AST
EPAP B                          027-015-000  OOS-MT      Fault    Standby
CRITICAL PLATFORM      ALARM DATA = No Alarms
MAJOR   PLATFORM      ALARM DATA = h'0123456789ABCDEF
MINOR   PLATFORM      ALARM DATA = h'0123456789ABCDEF
CRITICAL APPLICATION  ALARM DATA = No Alarms
MAJOR   APPLICATION  ALARM DATA = h'0123456789ABCDEF
MINOR   APPLICATION  ALARM DATA = No Alarms
ALARM STATUS = ** 0371 Major Platform Failure(s)

CARD  PST      SST      EIR STAT
1106 P IS-NR    Active   ACT
1201  IS-ANR    Active   SWDL
1205  OOS-MT-DSBLD Manual  -----
1302  OOS-MT    Isolated -----
1310  IS-ANR    Standby  SWDL

CARD 1106 ALARM STATUS = No Alarms
  DSM PORT A:      ALARM STATUS      = No Alarms
  DSM PORT B:      ALARM STATUS      = No Alarms
CARD 1201 ALARM STATUS = No Alarms
  DSM PORT A:      ALARM STATUS      = ** 0084 IP Connection Unavailable
  DSM PORT B:      ALARM STATUS      = ** 0084 IP Connection Unavailable
CARD 1205 ALARM STATUS = No Alarms
  DSM PORT A:      ALARM STATUS      = ** 0084 IP Connection Unavailable
  DSM PORT B:      ALARM STATUS      = ** 0084 IP Connection Unavailable
CARD 1302 ALARM STATUS = ** 0013 Card is isolated from the system
  DSM PORT A:      ALARM STATUS      = ** 0084 IP Connection Unavailable
  DSM PORT B:      ALARM STATUS      = ** 0084 IP Connection Unavailable
CARD 1310 ALARM STATUS = No Alarms
  DSM PORT A:      ALARM STATUS      = ** 0084 IP Connection Unavailable
  DSM PORT B:      ALARM STATUS      = ** 0084 IP Connection Unavailable
Command Completed.

```

;

The following example shows the possible system response if the EIR feature is enabled and turned on, and the G-Port or G-Flex feature is turned on:

rept-stat-mps

```

rlghncxa03w 03-06-24 10:37:22 EST  EAGLE 31.0.0
                                VERSION      PST      SST      AST
EPAP A                          027-015-000  IS-NR      Active   -----
CRITICAL PLATFORM      ALARM DATA = No Alarms
MAJOR   PLATFORM      ALARM DATA = No Alarms
MINOR   PLATFORM      ALARM DATA = No Alarms
CRITICAL APPLICATION  ALARM DATA = No Alarms

```

```

MAJOR    APPLICATION ALARM DATA = No Alarms
MINOR    APPLICATION ALARM DATA = No Alarms
          ALARM STATUS = No Alarms

```

```

          VERSION      PST      SST      AST
EPAP B    027-015-000  OOS-MT    Fault    Standby
CRITICAL PLATFORM  ALARM DATA = No Alarms
MAJOR    PLATFORM  ALARM DATA = h'0123456789ABCDEF
MINOR    PLATFORM  ALARM DATA = h'0123456789ABCDEF
CRITICAL APPLICATION ALARM DATA = No Alarms
MAJOR    APPLICATION ALARM DATA = h'0123456789ABCDEF
MINOR    APPLICATION ALARM DATA = No Alarms
          ALARM STATUS = ** 0371 Major Platform Failure(s)

```

```

CARD  PST      SST      GSM STAT  EIR STAT
1106 P IS-NR    Active    ACT      ACT
1201  IS-ANR    Active    SWDL     SWDL
1205  OOS-MT-DSBLD Manual    -----
1302  OOS-MT    Isolated  -----
1310  IS-ANR    Standby   SWDL     SWDL

```

```

CARD 1106 ALARM STATUS = No Alarms
  DSM PORT A:    ALARM STATUS      = No Alarms
  DSM PORT B:    ALARM STATUS      = No Alarms
CARD 1201 ALARM STATUS = No Alarms
  DSM PORT A:    ALARM STATUS      = ** 0084 IP Connection Unavailable
  DSM PORT B:    ALARM STATUS      = ** 0084 IP Connection Unavailable
CARD 1205 ALARM STATUS = No Alarms
  DSM PORT A:    ALARM STATUS      = ** 0084 IP Connection Unavailable
  DSM PORT B:    ALARM STATUS      = ** 0084 IP Connection Unavailable
CARD 1302 ALARM STATUS = ** 0013 Card is isolated from the system
  DSM PORT A:    ALARM STATUS      = ** 0084 IP Connection Unavailable
  DSM PORT B:    ALARM STATUS      = ** 0084 IP Connection Unavailable
CARD 1310 ALARM STATUS = No Alarms
  DSM PORT A:    ALARM STATUS      = ** 0084 IP Connection Unavailable
  DSM PORT B:    ALARM STATUS      = ** 0084 IP Connection Unavailable
Command Completed.

```

;

The following example shows the possible system response when a specific DSM card is queried:

rept-stat-mps:loc=1205

```

rlghncxa03w 04-01-07 10:23:93 EST EAGLE 31.3.0
CARD  VERSION      TYPE      PST      SST      AST
1205  -----      DSM      OOS-MT-DSBLD  Manual    -----
      DSM PORT A      OOS-MT      Unavail    -----
          ALARM STATUS      = ** 0084 IP Connection Unavailable
      DSM PORT B      OOS-MT      Unavail    -----
          ALARM STATUS      = ** 0084 IP Connection Unavailable
      INP STAT      = -----
      CARD ALARM STATUS = No Alarms.
      DSM MEMORY USAGE = 0%
Command Completed.

```

;

The following example shows the possible system response if a specific DSM card is queried and the EIR feature is enabled and turned on:

rept-stat-mps:loc=1205

```

rlghncxa03w 03-10-24 10:37:22 EST EAGLE 31.0.0
CARD  VERSION      TYPE      PST      SST      AST
1205  -----      DSM      OOS-MT-DSBLD  Manual    -----
      DSM PORT A      OOS-MT      Unavail    -----
          ALARM STATUS      = ** 0084 IP Connection Unavailable
      DSM PORT B      OOS-MT      Unavail    -----
          ALARM STATUS      = ** 0084 IP Connection Unavailable
      EIR STAT      = -----

```

```

CARD ALARM STATUS = No Alarms.
DSM MEMORY USAGE = 0%
Command Completed.

```

```
;
```

The following example shows the possible system response if a specific DSM card is queried and the EIR feature is enabled and turned on:

rept-stat-mps: loc=1205

```

rlghncxa03w 03-10-24 10:37:22 EST EAGLE 31.0.0
CARD   VERSION      TYPE    PST              SST              AST
1205   -----      DSM     OOS-MT-DSBLD    Manual          -----
      DSM PORT A              OOS-MT          Unavail         -----
              ALARM STATUS    = ** 0084 IP Connection Unavailable
      DSM PORT B              OOS-MT          Unavail         -----
              ALARM STATUS    = ** 0084 IP Connection Unavailable
GSM STAT              = -----
EIR STAT              = -----
CARD ALARM STATUS    = No Alarms.
DSM MEMORY USAGE     = 0%
Command Completed.

```

```
;
```

The following example shows the possible system response if INP and GPORT or GFLEX feature bits turned on.

rept-stat-mps

```

Integrat40 01-10-24 10:37:22 EST EAGLE5 34.0.0
              VERSION      PST              SST              AST
EPAP A              027-015-000    IS-NR          Active          -----
      CRITICAL PLATFORM    ALARM DATA = No Alarms
      MAJOR   PLATFORM    ALARM DATA = No Alarms
      MINOR   PLATFORM    ALARM DATA = No Alarms
      CRITICAL APPLICATION  ALARM DATA = No Alarms
      MAJOR   APPLICATION  ALARM DATA = No Alarms
      MINOR   APPLICATION  ALARM DATA = No Alarms
              ALARM STATUS = No Alarms

              VERSION      PST              SST              AST
EPAP B              027-015-000    OOS-MT          Fault          Standby
      CRITICAL PLATFORM    ALARM DATA = No Alarms
      MAJOR   PLATFORM    ALARM DATA = h'0123456789ABCDEF
      MINOR   PLATFORM    ALARM DATA = h'0123456789ABCDEF
      CRITICAL APPLICATION  ALARM DATA = No Alarms
      MAJOR   APPLICATION  ALARM DATA = h'0123456789ABCDEF
      MINOR   APPLICATION  ALARM DATA = No Alarms
              ALARM STATUS = ** 0371 Major Platform Failure(s)

CARD   PST          SST          GSM STAT    INP STAT
1106 P IS-NR        Active      ACT          ACT
1201 IS-ANR         Active      SWDL         SWDL
1205 OOS-MT-DSBLD   Manual     -----
1302 OOS-MT         Isolated   -----
1310 IS-ANR         Standby    SWDL         SWDL

CARD 1106 ALARM STATUS = No Alarms
      DSM PORT A:      ALARM STATUS    = No Alarms
      DSM PORT B:      ALARM STATUS    = No Alarms
CARD 1201 ALARM STATUS = No Alarms
      DSM PORT A:      ALARM STATUS    = ** 0084 IP Connection Unavailable
              Failed Channels: Prov Dnld TCP UDP
      DSM PORT B:      ALARM STATUS    = ** 0084 IP Connection Unavailable
              Failed Channels: Prov UDP
CARD 1205 ALARM STATUS = No Alarms
      DSM PORT A:      ALARM STATUS    = ** 0084 IP Connection Unavailable
              Failed Channels: Prov Dnld TCP UDP
      DSM PORT B:      ALARM STATUS    = ** 0084 IP Connection Unavailable

```

```

Failed Channels: Prov Dnld TCP UDP
CARD 1302 ALARM STATUS = ** 0013 Card is isolated from the system
DSM PORT A: ALARM STATUS = ** 0084 IP Connection Unavailable
Failed Channels: Prov Dnld TCP UDP
DSM PORT B: ALARM STATUS = ** 0084 IP Connection Unavailable
Failed Channels: Prov Dnld TCP UDP
CARD 1310 ALARM STATUS = No Alarms
DSM PORT A: ALARM STATUS = ** 0084 IP Connection Unavailable
Failed Channels: Dnld TCP UDP
DSM PORT B: ALARM STATUS = ** 0084 IP Connection Unavailable
Failed Channels: Prov Dnld TCP

```

Command Completed.

;

The following example shows the possible system response when the EIR feature key is enabled and turned on, and the GFLEX or GPORT feature bits are turned on.

The following example also shows that DSM Port A has an IP Connection Unavailable alarm due to failed channels Dnld, TCP, and UDP. DSM Port B has an IP Connection Unavailable alarm due to failed channels Dnld and TCP.

rept-stat-mps:loc=1205

```

Integrat40 05-05-24 10:37:22 EST EAGLE5 34.0.0
CARD VERSION TYPE PST SST AST
1205 ----- DSM OOS-MT-DSBLD Manual -----
DSM PORT A OOS-MT Unavail -----
ALARM STATUS = ** 0084 IP Connection Unavailable
DSM PORT B OOS-MT Unavail -----
ALARM STATUS = ** 0084 IP Connection Unavailable
GSM STAT = -----
EIR STAT = -----
CARD ALARM STATUS = No Alarms.
DSM MEMORY USAGE = 0%
Command Completed.

```

;

The following example shows the possible system response with the INP and GPORT or GFLEX feature bits turned on.

rept-stat-mps

```

Integrat40 01-10-24 10:37:22 EST EAGLE5 34.0.0
VERSION PST SST AST
EPAP A 027-015-000 IS-NR Active -----
CRITICAL PLATFORM ALARM DATA = No Alarms
MAJOR PLATFORM ALARM DATA = No Alarms
MINOR PLATFORM ALARM DATA = No Alarms
CRITICAL APPLICATION ALARM DATA = No Alarms
MAJOR APPLICATION ALARM DATA = No Alarms
MINOR APPLICATION ALARM DATA = No Alarms
ALARM STATUS = No Alarms

VERSION PST SST AST
EPAP B 027-015-000 OOS-MT Fault Standby
CRITICAL PLATFORM ALARM DATA = No Alarms
MAJOR PLATFORM ALARM DATA = h'0123456789ABCDEF
MINOR PLATFORM ALARM DATA = h'0123456789ABCDEF
CRITICAL APPLICATION ALARM DATA = No Alarms
MAJOR APPLICATION ALARM DATA = h'0123456789ABCDEF
MINOR APPLICATION ALARM DATA = No Alarms
ALARM STATUS = ** 0371 Major Platform Failure(s)

CARD PST SST GSM STAT INP STAT
1106 P IS-NR Active ACT ACT
1201 IS-ANR Active SWDL SWDL
1205 OOS-MT-DSBLD Manual -----

```



```

1302  OOS-MT      Isolated  -----  -----
1310  IS-ANR      Standby   SWDL      SWDL

CARD 1106 ALARM STATUS = No Alarms
  DSM PORT A:      ALARM STATUS      = No Alarms
  DSM PORT B:      ALARM STATUS      = No Alarms
CARD 1201 ALARM STATUS = No Alarms
  DSM PORT A:      ALARM STATUS      = ** 0084 IP Connection Unavailable
  Failed Channels: Prov Dnld TCP UDP
  DSM PORT B:      ALARM STATUS      = ** 0084 IP Connection Unavailable
  Failed Channels: Prov UDP
CARD 1205 ALARM STATUS = No Alarms
  DSM PORT A:      ALARM STATUS      = ** 0084 IP Connection Unavailable
  Failed Channels: Prov Dnld TCP UDP
  DSM PORT B:      ALARM STATUS      = ** 0084 IP Connection Unavailable
  Failed Channels: Prov Dnld TCP UDP
CARD 1302 ALARM STATUS = ** 0013 Card is isolated from the system
  DSM PORT A:      ALARM STATUS      = ** 0084 IP Connection Unavailable
  Failed Channels: Prov Dnld TCP UDP
  DSM PORT B:      ALARM STATUS      = ** 0084 IP Connection Unavailable
  Failed Channels: Prov Dnld TCP UDP
CARD 1310 ALARM STATUS = No Alarms
  DSM PORT A:      ALARM STATUS      = ** 0084 IP Connection Unavailable
  Failed Channels: Dnld TCP UDP
  DSM PORT B:      ALARM STATUS      = ** 0084 IP Connection Unavailable
  Failed Channels: Prov Dnld TCP

```

Command Completed.

;

Legend

CARD—The location of the VSCCP card. The VSCCP card with the designator “P” to the right of its card location is the primary DSM as selected by the active ELAP/EPAP. The primary DSM provides the ELAP/EPAP status to the OAM. When the primary state (PST) of the ELAP/EPAP is IS-NR, the secondary state (SST) indicates whether the ELAP/EPAP is active or standby.

VERSION—The version number of the GPL that the specified ELAP/EPAP or card is running.

PST—The primary state of the ELAP/EPAP or card. The possible values are described in "Possible Values for PST/SST/AST".

SST—The secondary state of the ELAP/EPAP or card. The possible values are described in "Possible Values for PST/SST/AST".

AST—The associated state of the ELAP/EPAP or card. The possible values are described in "Possible Values for PST/SST/AST".

EPAP/ELAP A/B—The application running on the MPS (multi-purpose server) platform. If the LNP ELAP Configuration feature is turned on, the output shows ELAP A/B. If INP, G-Flex, or G-Port is turned on, the output shows EPAP A/B.

ALARM STATUS—A listing of any trouble text alarm messages that have been generated for the MPS and the applications running on the MPS. Each alarm is listed as a 16-character hexadecimal string where each bit represents a unique platform or application alarm. To decode the string, use the procedure in the EPAP Administration Manual or the *ELAP Administration Manual*. There are 6 categories of MPS alarms:

- Critical platform alarm data
- Major platform alarm data
- Minor platform alarm data
- Critical application alarm data

- Major application alarm data
- Minor application alarm data

GSM STAT—The possible states are either ACT (active) or SWDL (indicates that the GSM component on that card is currently inactive until the software download completes). The GSM STAT information is not displayed if the G-Port and G-Flex features are turned off.

INP STAT—The possible states of INP status include ACT (active), OFFL (offline) and SWDL (indicates that the INP component on that card is currently inactive until the software download completes). The INP STAT information is not displayed if the INP feature is turned off.

LNP STAT—The possible states of LNP status include ACT (active), OFFL (offline) and SWDL (indicates that the LNP component on that card is currently inactive until the software download completes). The LNP STAT information is not displayed if the LNP ELAP Configuration feature is turned off.

EIR STAT—The possible states of EIR Status include ACT (active), OFFL (offline), and SWDL (Indicates the EIR component on that card is currently inactive until software download completes). The EIR STAT information is not displayed if the EIR feature is not enabled.

DSM MEMORY USAGE—The percentage of DSM memory used to store the ELAP/EPAP database.

For EPAP, the percentage of the card memory is displayed. For example, 50% of the memory on a 2G DSM card means that 1G is used.

For ELAP/LNP, the percentage that is displayed depends on the enabled or default feature access key (FAK) quantity for LNP ported TNs, LNP ported LRNs, and LNP ported NPANXXs in the system (see the **rtv-ctrl-feat** command output). The percentage is the greatest of: 1) TNs provisioned divided by LNP ported TNs FAK quantity, 2) LRNs provisioned divided by LNP ported LRNs FAK quantity, or 3) NPANXXs provisioned divided by LNP ported NPANXXs FAK quantity.

CARD XXXX ALARM STATUS—A listing of any trouble text alarm messages that have been generated for the card.

DSM PORT A/B—A listing of any trouble text alarm messages that have been generated for the port on the card.

IP CONNECTION UNAVAILABLE—Indicates the failed channels on those ports with IP Connection Unavailable alarms. The possible channels reported are:

- Prov—RTDB Provisioning Channel
- Dnld—RTDB Download Channel
- TCP—Transmission Control Protocol Channel
- UDP—User Datagram Protocol Channel

rept-stat-mux

Report the MPS Status

Use this command to list all the HMUX and HIPR cards, their location, and their status.

Keyword: **rept-stat-mux**

Related Commands: **rept-stat-card**

Command Class: System Maintenance

Parameters

This command has no parameters.

Example

rept-stat-mux

Dependencies

None

Notes

None

Output

rept-stat-mux

rlghncxa03w 04-09-07 10:23:93 EST EAGLE 32.0.0

CARD	TYPE	PST	SST	AST
1109	HMUX	IS-NR	Active	ALMINH
1110	HMUX	IS-NR	Active	-----
1209	HIPR	IS-NR	Active	ALMINH
1210	HIPR	IS-NR	Active	-----

Command Completed.

;

Legend

CARD—The HMUX or HIPR card location.

TYPE—The type of card (HMUX or HIPR).

PST—The primary state of the card. The possible values are described in "Possible Values for PST/SST/AST" in Appendix A.

SST—The secondary state of the card. The possible values are described in "Possible Values for PST/SST/AST" in Appendix A.

AST—The associated state of the card. The possible values are described in "Possible Values for PST/SST/AST" in Appendix A.

rept-stat-ndc**Report Status of NDC system**

Use this command to generate a summary report of the status of the NDC subsystem on the EAGLE 5 ISS. The connectivity status for each DCM and its mated EMAP/NDC QAF devices are reported. Additionally, an alarm status summary is printed if any alarms exist.

The status summary includes the status of the following:

- EMDC-DCM to EMAP IP link(s)
- The NDC agent
- The NDC agent-to-manager association and IP link

NOTE: This command is obsolete.

Keyword: rept-stat-ndc

Related Commands: rept-stat-alm, rept-stat-card, rept-stat-trbl

Command Class: System Maintenance

Parameters

This command has no parameters.

Example

rept-stat-ndc

Dependencies

No other **rept-stat-xxx** command can be in progress when this command is issued.

The NDC system must be configured with the EMDC cards defined in the system.

Notes

If the direct DCM to EMAP IP connection is unavailable the EMAP related statuses (NDC Agent, EMAP IP connection, and Q.3 association) are unknown and are shown in the output as dashes.

Output**rept-stat-ndc**

```

rlghncxa03w 04-02-18 16:46:07 EDT EAGLE 31.3.0
NDC SUBSYSTEM REPORT   OOS-MT      Fault      -----
NDC Cards Configured= 2  Cards IS-NR= 2
CARD  VERSION      TYPE      APPL      PST      SST      AST
-----
1215   219-009-000  DCM      EMDC      IS-NR     Active    -----
DCM A IP CONNECTION      IS-NR     Avail     -----
EMAP A IP CONNECTION      -----    -----    -----
EMAP  NDC Q3 Association  -----    -----    -----
EMAP A NDC Agent          -----    -----    -----

EMAP A GPL version = -----

1217   219-009-000  DCM      EMDC      IS-NR     Idle      -----
DCM B IP CONNECTION      IS-NR     Avail     -----
EMAP B IP CONNECTION      -----    -----    -----
EMAP  NDC Q3 Association  -----    -----    -----
EMAP B NDC Agent          -----    -----    -----

EMAP B GPL version = -----

DCM-DCM IP CONNECTION      IS-NR     Avail     -----
EMAP-EMAP Serial Connection -----    -----    -----

ALARM STATUS
3538.0179  * EMAP      NDC Q.3 association is Unavailable
3537.0084  ** EMAP A    IP Connection Unavailable
3536.0084  ** EMAP B    IP Connection Unavailable
3539.0181  *C NDC SYSTEM  NDC Subsystem is not available
Command Completed.
;

```

rept-stat-rte**Report Status Route**

This command displays the signaling route status for a particular destination.

Keyword: **rept-stat-rte**

Related Commands: **dlt-rte, ent-rte, rept-stat-dstn, rtrv-rte**

Command Class: System Maintenance

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:dpc= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*). The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: **dpca**

Range: **p-**, **000-255**, *****, ******, *******

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

The asterisk values *****, ******, and ******* are not valid for the *ni* subfield.

If ****** or ******* is specified for the *nc* subfield, either *****, ******, or ******* must be specified for the *ncm* subfield.

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

When **chg-sid:pctype=ansi** is specified, *ni*-*-***** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:dpc/dpca/dpci/dpcn/dpcn24= (optional)

Destination point code.

:dpci= (optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-**, **p-**, **ps-**, **0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**, **p-**, **ps-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:dpcn= (optional)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-**, **p-**, **ps-**, **0-16383**, **aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**, **p-**, **ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:dpcn24= (optional)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*. The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

msa—000-255

ssa—000-255

sp—000-255

:mode= (optional)

The type of display to produce. This parameter displays the point code's subsystem status along with the normal output.

Range: **full, rtx**

full—Comprehensive display of point code status, including rtx. If entered with a point code, status for that point code is displayed, including each route in the associated routeset. If specified without a point code, status of all routesets is displayed.

rtx—Displays exception route status, other than circular routing, if the Origin-based MTP Routing feature is on.

Default: The point code's subsystem status is not displayed.

:stat= (optional)

The primary state filter. This parameter displays all entries with the specified primary state filter.

Range: **nr, anr, mt, dsbld, all**

nr—In service normal

anr—In service abnormal

mt—Out of service maintenance

dsbld—Out of service maintenance disabled

all—All primary states

Default: All primary states are displayed.

Example

```
rept-stat-rte
rept-stat-rte:dpc=5-25-0
rept-stat-rte:dpci=5-5-0:mode=full
rept-stat-rte:dpci=5-5-0:mode=rtx
rept-stat-rte:mode=rtx
rept-stat-rte:mode=full
rept-stat-rte:dpc=5-25-**
```

Dependencies

If the **dpcn** parameter is specified, its format must match the format that was assigned with the **chg-stpopts:npcfmt** parameter.

An x-list DPC cannot be specified in the **dpc** parameter.

The **mode** parameter and a **dpc/dpca/dpci/dpcn/dpcn24** parameters cannot be specified together in the command if the point code parameter specifies one of the *nnn-ccc-*** or *nnn-ccc-**** formats.

The **stat** parameter and a **dpc/dpca/dpci/dpcn/dpcn24** parameter can be specified together in the command only if the point code parameter specifies one of the *nnn-ccc-*** or *nnn-ccc-**** formats.

The **mode** parameter can be specified only if a **dpc/dpca/dpci/dpcn/dpcn24** parameter is specified.

No other **rept-stat-xxxx** command can be in progress when this command is entered.

If a **dpc/dpca/dpci/dpcn/dpcn24** parameter is specified, the value must be the true point code of the destination and the value must already be defined in the database.

The **mode=rtx** parameter cannot be specified unless the Origin-Based MTP Routing feature is enabled and on.

Notes

Each DPC can have up to six routes associated with it.

This command's functions are now performed by **rept-stat-dstn** and this command will be deleted in a future software release.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (**s-**) and the private and spare point code subtype prefix (**ps-**). All of the point code types support the private (internal) point code subtype prefix (**p-**).

Table 5-65 provides a summary description of the reports that are produced by the various DPC parameter syntaxes.

Table 5-65. Summary of DPC Parameter Syntaxes

DPC format	Meaning
rept-stat-rte:dpc=ni-nc-ncm	Requests a report for fully provisioned destination <i>ni-nc-ncm</i> .
rept-stat-rte:dpc= ni-*-*	Requests a report for provisioned network destination with the specified network indicator. Note that if * is specified in the <i>nc</i> field, * must be specified in the <i>ncm</i> field.
rept-stat-rte:dpc= ni-**-*	Requests a report for the full network cluster for the specified <i>ni</i> .
rept-stat-rte:dpc= ni-***-*	Requests a report for the full network cluster and the network cluster address (if any) for the specified <i>ni</i> .
rept-stat-rte:dpc= ni-nc-*	Requests a report for provisioned cluster destination <i>ni-nc-*</i> .
rept-stat-rte:dpc= ni-nc-**	Requests a report showing all destinations whose network (<i>ni</i>) and cluster (<i>nc</i>) components match those specified. Note, however, that the network cluster address on <i>ni-nc-*</i> (if it exists) is not reported.
rept-stat-rte:dpc= ni-nc-***	Requests a report showing all destinations whose network (<i>ni</i>) and cluster (<i>nc</i>) components match those specified.

Table 5-65. Summary of DPC Parameter Syntaxes

DPC format	Meaning
	The network cluster address <i>ni-nc-*</i> (if it exists) is also reported.
rept-stat-rte:dpcn24=msa-ssa-sp	Requests a report for fully provisioned 24-bit destination <i>main signaling area-sub signaling area-signaling point</i> .

This command can be cancelled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

Output

If the **dpc** parameter is not specified:

- If the **mode** parameter is not specified, the command output lists the status of all provisioned DPCs (route sets) in the system,
- If the **mode=rtx** parameter is specified, the command output lists the status of only those DPCs against which exception routes have been provisioned, and the status of the provisioned exception route sets associated with each DPCs.
- If the **mode=full** parameter is specified, the command output lists the status of all provisioned DPCs in the system, and the status of the provisioned exception route sets, if any, associated with each DPC.

If the **dpc** parameter is specified:

- If the **mode** parameter is not specified, the command output lists the status of all provisioned routes in the route set specified by that DPC.
- If the **mode=rtx** parameter is specified, the command output lists the status of all provisioned routes in the route set specified by that DPC, and the status of all provisioned exception route sets associated with that DPC.
- If the **mode=full** parameter is specified, the command output lists the status of all provisioned routes in the route set specified by that DPC, the status of all provisioned exception route sets associated with that DPC, any aliases associated with that DPC, and circular routing alarm information if any for that DPC.

The following example shows how, when no parameters are specified, summary information for all provisioned cluster and noncluster DPCs is reported.

rept-stat-rte

```

rlghncxa03w 04-01-07 14:59:11 EST EAGLE 31.3.0
  DPCA          PST          SST          AST
  009-000-000   IS-ANR       Allowed   ACCESS
  009-003-*     IS-ANR       Allowed   ACCESS
  009-003-006   OOS-MT      Prohibit  INACCESS
  009-003-001   IS-NR       Allowed   ACCESS
  009-003-002   IS-NR       Allowed   ACCESS
  009-003-003   OOS-MT      Prohibit  INACCESS
  009-004-006   IS-NR       Allowed   ALMINH
  004-002-002   IS-NR       Allowed   ACCESS
  006-000-000   IS-ANR       Allowed   ACCESS
  007-001-001   IS-NR       Allowed   ACCESS
  101-033-*     IS-NR       Allowed   ACCESS

  DPCI          PST          SST          AST
  2-004-1       IS-NR       Allowed   ACCESS
  2-004-3       IS-ANR       Allowed   ACCESS
  2-004-2       IS-ANR       Allowed   ACCESS
  2-004-4       IS-NR       Allowed   ACCESS

  DPCN          PST          SST          AST
  02096         IS-NR       Allowed   ACCESS
  02097         IS-ANR       Allowed   ACCESS
  02098         OOS-MT      Prohibit  INACCESS
  02099         OOS-MT      Prohibit  INACCESS
Command Completed.
;
```

The following example shows that specifying a cluster destination on the **dpc** parameter shows the cluster status and routeset information. Note that information on cluster members (both provisioned and x-list) is not shown. Use **rept-stat-cluster** to obtain this information.

rept-stat-rte:dpc=9-3-*

```
rlghncxa03w 04-07-07 14:59:11 EST EAGLE 31.9.0
  DPCA          PST          SST          AST
  009-003-*     IS-NR        Allowed     ACCESS
ALARM STATUS    = No Alarms.
RTE COST  LSN      APCA          LS STAT  NON-ADJ  ROUTE STAT
1*  10  lsnstpa    042-036-123  Allowed  Allowed  Allowed
2   20  lsnstpb    092-240-103  Allowed  Allowed  Allowed
3   30  lsnstpc    128-101-022  Allowed  Allowed  Allowed
4   --  -----   ***_***_***  -----  -----  -----
5   --  -----   ***_***_***  -----  -----  -----
6   --  -----   ***_***_***  -----  -----  -----
;
```

The following example shows how specifying either an FPC or cluster destination for which circular routing has been detected, along with the **mode=full** parameter, displays the name of the linkset on which the circular routing test message was transmitted. It also displays the linkset on which the circularly routed message was received. This information may be useful in correcting the circular routing situation.

rept-stat-rte:dpc=9-3-6:mode=full

```
rlghncxa03w 04-01-07 14:59:11 EST EAGLE 31.3.0
  DPCA          PST          SST          AST
  009-003-006   OOS-MT        Prohibit   INACCESS
ALARM STATUS    = = *C xxxx Circular routing detected
RTE COST  LSN      APCA          LS STAT  NON-ADJ  ROUTE STAT
1   10  lsnstpa    042-036-123  Allowed  Allowed  Allowed
2   20  lsnstpb    092-240-103  Allowed  Allowed  Allowed
3   30  lsnstpc    128-101-022  Allowed  Allowed  Allowed
4   --  -----   ***_***_***  -----  -----  -----
5   --  -----   ***_***_***  -----  -----  -----
6   --  -----   ***_***_***  -----  -----  -----
SSN      SUBSYSTEM STATUS

ALIASA          ALIASN          ALIASI
-----
CIRCULAR ROUTING
  XMIT LSN= lsnstpb
  RCV LSN= lsn01a
MEMBER= ***_***_***
Command Completed.
;
```

The following example shows a typical report when a cluster destination and **mode=full** was specified. The interpretation of the circular routing status for cluster destinations is slightly different from the status for full point code destinations.

rept-stat-rte:dpc=9-3-*:mode=full

```
rlghncxa03w 04-01-07 14:59:11 EST EAGLE 31.3.0
  DPCA          PST          SST          AST
  009-003-*     IS-NR        Allowed     ACCESS
ALARM STATUS    = *C xxxx Circular routing detected
RTE COST  LSN      APCA          LS STAT  NON-ADJ  ROUTE STAT
1   10  lsnstpa    042-036-123  Allowed  Allowed  Allowed
2   20  lsnstpb    092-240-103  Allowed  Allowed  Allowed
3   30  lsnstpc    128-101-022  Allowed  Allowed  Allowed
4   --  -----   ***_***_***  -----  -----  -----
5   --  -----   ***_***_***  -----  -----  -----
```

```

6  --  -----  ***_***_***  -----  -----  -----
SSN  SUBSYSTEM STATUS
ALIASA      ALIASN      ALIASI
-----
CIRCULAR ROUTING INFO:
XMIT LSN=lsnstpb  RC=20
RCV  LSN=lsn01a
MEMBER= 009-003-006
Command Completed.
;

```

The following example shows how **rept-stat-rte** displays the circular routing alarm for a cluster destination. Note that a circular routing alarm for a cluster destination indicates that circular routing was detected for a member of the cluster, but no x-list entry could be created for that cluster. Note, also, that circular routing detected on a cluster destination does not automatically force the output to display the status of the cluster as “OOS-MT Prohibit INACCESS” as it does for a full point code destination.

rept-stat-rte:dpc=9-3-*

```

rlghncxa03w 04-01-07 14:59:11 EST  EAGLE 31.3.0
DPCA          PST          SST          AST
009-003-*     IS-NR       Allowed  ACCESS
ALARM STATUS   = *C  xxxx Circular routing detected
RTE COST  LSN  APCA      LS STAT  NON-ADJ  ROUTE STAT
1   10  lsnstpa  042-036-123  Allowed  Allowed  Allowed
2   20  lsnstpb  092-240-103  Allowed  Allowed  Allowed
3   30  lsnstpc  128-101-022  Allowed  Allowed  Allowed
4   --  -----  ***_***_***  -----  -----  -----
5   --  -----  ***_***_***  -----  -----  -----
6   --  -----  ***_***_***  -----  -----  -----
Command Completed.
;

```

The following example shows how **rept-stat-rte** displays a subsystem information header but no subsystem information, just as it would if an FPC is specified for which no subsystems are defined. In addition, because aliases cannot be defined for cluster destinations, this report shows only an empty header, just as it does when an FPC is specified for which no aliases are defined. Note that the circular routing information portion of the **mode=full** report displays “-----” for the linkset names when no circular routing condition exists for the DPC.

rept-stat-rte:dpc=9-3-*:mode=full

```

rlghncxa03w 04-07-07 14:59:11 EST  EAGLE 31.9.0
DPCA          PST          SST          AST
009-003-*     IS-NR       Allowed  ACCESS
ALARM STATUS   = No Alarms.
RTE COST  LSN  APCA      LS STAT  NON-ADJ  ROUTE STAT
1*  10  lsnstpa  042-036-123  Allowed  Allowed  Allowed
2   20  lsnstpb  092-240-103  Allowed  Allowed  Allowed
3   30  lsnstpc  128-101-022  Allowed  Allowed  Allowed
4   --  -----  ***_***_***  -----  -----  -----
5   --  -----  ***_***_***  -----  -----  -----
6   --  -----  ***_***_***  -----  -----  -----
SSN  SUBSYSTEM STATUS
ALIASA      ALIASN      ALIASI
-----
CIRCULAR ROUTING
XMIT LSN= -----
RCV  LSN= -----
MEMBER= ***_***_***
Command Completed.
;

```

The following example shows how specifying the **stat** parameter along with the *ni-nc-** or *ni-nc-**** DPC formats causes the output summary report to include only those destinations whose status matches the state specified.

rept-stat-rte:dpc=9-4-***:stat=alminh

```
rlghncxa03w 04-02-31 13:30:00 EST EAGLE 31.3.0
  DPCA          PST          SST          AST
  009-004-006   IS-NR       Allowed    ALMINH
Command Completed.
;
```

The following example shows a retrieval specifying an ITU national point code where the **chg-stpopts:npcfmti** parameter has been set to **1-1-1-11**:

rept-stat-rte:dpcn=1-1-1-1000

```
rlghncxa03w 04-02-31 13:30:00 EST EAGLE 31.3.0
CAUTION : Node isolated...route status out of date!
  DPCN          PST          SST          AST
  1-1-1-1000    00S-MT      Prohibit  INACCESS
ALARM STATUS    = *C 0313 DPC is prohibited
RTE COST  LSN      APCN          LS STAT  NON-ADJ  ROUTE STAT
1  10  lsitu      1-1-1-1000  Prohibit  Allowed  Prohibit
2  --  -----  ***_***_***  -----  -----  -----
3  --  -----  ***_***_***  -----  -----  -----
4  --  -----  ***_***_***  -----  -----  -----
5  --  -----  ***_***_***  -----  -----  -----
6  --  -----  ***_***_***  -----  -----  -----
Command Completed.
;
```

The following example shows a private adjacent point code:

rept-stat-rte:mode=full:dpc=1-1-2

```
rlghncxa03w 05-01-07 13:30:00 EST EAGLE 31.12.0
  DPCA          PST          SST          AST
  001-001-002    00S-MT      Idle      INACCESS
ALARM STATUS    = No Alarms.
RTE COST  LSN      APCA          LS STAT  NON-ADJ  ROUTE STAT
1  01  ls11234567  001-001-002  Prohibit  Allowed  Prohibit
2  02  ls12345678  p-001-001-002  Prohibit  Allowed  Prohibit
3  --  -----  ---***_***_***  -----  -----  -----
4  --  -----  ---***_***_***  -----  -----  -----
5  --  -----  ---***_***_***  -----  -----  -----
6  --  -----  ---***_***_***  -----  -----  -----
SSN      SUBSYSTEM STATUS

  ALIASA          ALIASN          ALIASI
  000-000-001    -----  -----
CIRCULAR ROUTING INFO:
  XMIT LSN=-----  RC=--
  RCV LSN=-----
  MEMBER =-----
Command Completed.
;
```

The asterisks in the space after the route numbers in the following examples indicate which route (or combined route) is carrying traffic.

rept-stat-rte:dpc=1-1-1

```
tekelecstp 04-09-24 09:19:04 EST EAGLE 31.9.0
  DPCA          PST          SST          AST
  001-001-001    IS-NR       Allowed    ACCESS
ALARM STATUS    = No Alarms.
```

RTE	COST	LSN	APCA	LS STAT	NON-ADJ	ROUTE STAT
1*	05	lse1e1	001-001-001	Allowed	Allowed	Allowed
2*	05	lse1e2	001-002-001	Allowed	Allowed	Allowed
3	10	lse1e3	001-003-001	Allowed	Allowed	Allowed
4	--	-----	***_***_***	-----	-----	-----
5	--	-----	***_***_***	-----	-----	-----
6	--	-----	***_***_***	-----	-----	-----

Command Completed.

;

No asterisk appears after the route number in the following example; no routes were carrying traffic at the time.

rept-stat-rte:dpc=1-1-1

```
tekelecstp 06-05-24 09:19:04 EST EAGLE 35.0.0
  DPCA      PST      SST      AST
  001-001-001  OOS-MT  Prohibit  INACCESS
ALARM STATUS = *C 0313 DPC is prohibited
RTE COST  LSN      APCA      LS STAT  NON-ADJ  ROUTE STAT
1  05  lse1e1  001-001-001  Prohibit  Allowed  Prohibit
2  05  lse1e2  001-002-001  Prohibit  Allowed  Prohibit
3  10  lse1e3  001-003-001  Prohibit  Allowed  Prohibit
4  --  -----  ***_***_***  -----  -----  -----
5  --  -----  ***_***_***  -----  -----  -----
6  --  -----  ***_***_***  -----  -----  -----
```

Command Completed.

;

In the following example, the primary route is not carrying traffic.

rept-stat-rte:dpc=1-1-1

```
tekelecstp 06-05-24 09:19:04 EST EAGLE 35.0.0
  DPCA      PST      SST      AST
  001-001-001  IS-ANR  Restrict  ACCESS
ALARM STATUS = *C 0334 DPC Subsystem is Abnormal
RTE COST  LSN      APCA      LS STAT  NON-ADJ  ROUTE STAT
1  05  lse1e1  001-001-001  Prohibit  Allowed  Prohibit
2  05  lse1e2  001-002-001  Prohibit  Allowed  Prohibit
3* 10  lse1e3  001-003-001  Allowed   Allowed  Allowed
4  --  -----  ***_***_***  -----  -----  -----
5  --  -----  ***_***_***  -----  -----  -----
6  --  -----  ***_***_***  -----  -----  -----
```

Command Completed.

;

In the following example, Origin-Based MTP Routing feature is enabled and on. This permits the execution of the **rept-stat-rte** command in **rtx** mode, which displays all exception route sets provisioned against the specified DPC, as shown:

rept-stat-rte:dpc=9-3-*:mode=rtx

```
tekelecstp 06-06-01 16:21:39 EST EAGLE 35.0.0
  DPCA      PST      SST      AST
  009-003-*  IS-NR      Allowed  ACCESS
ALARM STATUS = No Alarms.
RTE COST  LSN      APCA      LS STAT  NON ADJ  ROUTE STAT
1  10  lsnstpa  042-36-23  Allowed  Allowed  Allowed
2  20  lsnstpb  092-40-03  Allowed  Allowed  Allowed
3  30  lsnstpc  128-01-22  Prohibit  Prohibit  Allowed
4  --  -----  ***_***_***  -----  -----  -----
5  --  -----  ***_***_***  -----  -----  -----
6  --  -----  ***_***_***  -----  -----  -----
```

Exception Routes:

OPCA	PST	SST	AST

001-001-001	IS-NR	Allowed	ACCESS

ILSN	PST	SST	AST
lsnstpy	IS-NR	Allowed	ACCESS

Command Completed.

If the Origin-Based MTP Routing feature is enabled and on, any provisioned exception routes provisioned against the specified DPC are also displayed in **full** mode, as shown:

rept-stat-rte:dpc=9-3-*:mode=full

```
tekelecstp 06-06-01 16:21:39 EST EAGLE 35.0.0
  DPCA          PST          SST          AST
  009-003-006   00S-MT      Prohibit    INACCESS
ALARM STATUS    = = *C 0319 REPT-MTLP-DET: Circ rte det(cong)
RTE COST  LSN   APCA          LS STAT    NON ADJ    ROUTE STAT
  1   10  lsnstpa 042-036-123 Allowed    Allowed    Allowed
  2   20  lsnstpb 092-240-103 Allowed    Allowed    Allowed
  3   30  lsnstpc 128-101-022 Allowed    Allowed    Allowed
  4   --  ----- ***_***_*** -----
  5   --  ----- ***_***_*** -----
  6   --  ----- ***_***_*** -----
SSN  SUBSYSTEM STATUS
```

ALIASA	ALIASN	ALIASI
-----	-----	-----

```
CIRCULAR ROUTING INFO:
  XMIT LSN=lsnstpb RC=20
  RCV  LSN=lsn01a
  MEMBER =-----
```

Exception Routes:

OPCA	PST	SST	AST
001-001-001	IS-NR	Allowed	ACCESS
ILSN			
lsnstpy	IS-NR	Allowed	ACCESS

Command Completed.

;

If the Origin-Based MTP Routing feature supporting exception routes is enabled and on and **full** mode is specified, all provisioned exception route sets are displayed in addition to the regular route sets, as shown by the following example:

rept-stat-rte:mode=full

```
tekelecstp 06-06-01 14:06:10 EST EAGLE 35.0.0
  DPCA          PST          SST          AST
  004-004-004   00S-MT      Idle        INACCESS

  OPCA          PST          SST          AST
  001-001-001   IS-NR      Allowed    ACCESS

  ILSN          PST          SST          AST
  lsnstpy       IS-NR      Allowed    ACCESS

  DPCN          PST          SST          AST
  00001         IS-NR      Allowed    ACCESS

  SI            PST          SST          AST
  10           IS-NR      Allowed    ACCESS

  00002         IS-NR      Allowed    ACCESS
  00005         00S-MT      Prohibit   INACCESS
```

00004	OOS-MT	Prohibit	INACCESS
DPCN24	PST	SST	AST
DPCI	PST	SST	AST

Command Completed.

;

If the Origin-Based MTP Routing feature is enabled and on, then **rtx** mode is permitted for the command, and all provisioned exception routes are displayed, as shown by the following example:

rept-stat-rte:mode=rtx

```
tekelecstp 06-06-01 14:06:10 EST EAGLE 35.0.0
  DPCA          PST          SST          AST
  004-004-004   OOS-MT      Idle         INACCESS

  OPCA
  001-001-001   IS-NR       Allowed    ACCESS

  ILSN
  lsnstpy       IS-NR       Allowed    ACCESS

  DPCN          PST          SST          AST
  00001         IS-NR       Allowed    ACCESS

  SI
  10            IS-NR       Allowed    ACCESS
```

Command Completed.

;

Legend

DPC/DPCA—The ANSI destination point code of the route

DPCN—The ITU-TSS national destination point code of the route

DPCN24—The 24-bit ITU national destination point code of the route

DPCI—The ITU-TSS international destination point code of the route

OPC/OPCA—The ANSI origination point code as exception routing criterion of the exception route

OPCN—The ITU-TSS national origination point code as exception routing criterion of the exception route

OPCN24—The 24-bit ITU national origination point code as exception routing criterion of the exception route

OPCI—The ITU-TSS international origination point code as exception routing criterion of the exception route

ILS—The originating linkset as exception routing criterion of the exception route

CIC—Starting Circuit Identification Code used as the exception routing criterion for this exception route

ECIC—Ending Circuit Identification Code together with CIC defines the CIC range that is used as exception routing criterion for this exception route.

PST—The primary state of the subsystem. The possible values are described in "Possible Values for PST/SST/AST".

SST—The secondary state of the subsystem. The possible values are described in "Possible Values for PST/SST/AST".

AST—The associated state of the subsystem. The possible values are described in "Possible Values for PST/SST/AST".

rept-stat-rtkey

Report the Status of Routing Keys

Use this command to generate a summary report of the status of the system routing keys.

Keyword: **rept-stat-rtkey**

Related Commands: **chg-appl-rtkey, dlt-appl-rtkey, ent-appl-rtkey, rtrv-appl-rtkey**

Command Class: System Maintenance

Parameters

This command has no parameters.

Example

rept-stat-rtkey

Dependencies

None

Notes

The report generated by the **rept-stat-rtkey** command contains the following information:

- The maximum of static entries (SRKQ) in the routing key table
- The current number of static routing key entries and socket associations provisioned in the routing key table
- The percentage of the static routing key table entries that is provisioned
- The maximum number of dynamic entries of each SS7IPGW or IPGWI card's routing key table (DRKQ) and maximum number of socket associations available in each SS7IPGW or IPGWI card's dynamic routing key table
- The current number of routing key entries and socket associations provisioned in each SS7IPGW or IPGWI card's dynamic routing key table
- The percentage of each SS7IPGW or IPGWI card's dynamic routing key table that is provisioned

Output

rept-stat-rtkey

```
rlghncxa03w 04-02-17 14:59:11 EST EAGLE 31.3.0
SRKQ = 250 DRKQ = 300
```

```
Static Route Key table is (50 of 250) 20% full
1105 Route Key table is (25 of 250) 10% full
1107 Route Key table is (25 of 250) 10% full
```

```
Static Route Key Socket Association table is (80 of 4000) 2% full
1105 Route Key Socket Association table is (40 of 4000) 1% full
1107 Route Key Socket Association table is (40 of 4000) 1% full
```

```
Command Completed.
```

```
;
```


rept-stat-rtx**Report Status Exception Route**

Use this command to display the signaling route status for one or more exception routes to a particular destination.

Keyword: rept-stat-rtx

Related Commands: dlt-rtx, ent-rtx, rtrv-rtx

Command Class: System Maintenance

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:cic= (optional)

Starting Circuit Identification Code. This parameter is used alone or together with the **ecic** parameter as exception routing criteria for the specified exception route.

Range: 0-16383

:dpc= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: dpca

Range: p-, 000-255, *, **, ***

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

The asterisk values *, **, and *** are not valid for the *ni* subfield.

If ** or *** is specified for the *nc* subfield, either *, **, or *** must be specified for the *ncm* subfield.

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001-005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006-255.

When **chg-sid:pctype=ansi** is specified, *ni-*-** is valid if *ni* = 006-255.

The point code 000-000-000 is not a valid point code.

:dpc/dpca/dpci/dpcn/dpcn24= (optional)

Destination point code.

:dpci= (optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: s-, p-, ps-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps-

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

:dpcn= (optional)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:dpcn24= (optional)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:ecic= (optional)

Ending Circuit Identification Code. This parameter, together with the **cic** parameter, defines the CIC range that is used as exception routing criteria for the specified exception route.

Range: **0-16383**

:ilsn= (optional)

Incoming Link Set Name. This parameter contains the name of the originating linkset. The parameter value is used as part of the exception routing criteria for the specified exception route.

Range: **ayyyyyyyyy**

1 alphabetic character followed by up to 9 alphanumeric characters.

:opc= (optional)

Origination point code. ANSI point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*). The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: **opca**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:opc/opca/opci/opcn/opcn24= (optional)

Origination point code.

:opci= (optional)

Origination Point Code. ITU international origination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:opcn= (optional)

Origination Point Code. ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-**

stpopts:npcfnti flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:opcn24= (optional)

Origination Point Code. 24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* indicates a private point code (*prefix-msa-ssa-sp*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:si= (optional)

Service Indicator. This parameter is used as part of the exception routing criteria for the specified exception route.

Range: **0-15**

Example

rept-stat-rtx

rept-stat-rtx:dpc=1-101-1

rept-stat-rtx:dpc=1-101-1:opc=1-2-1

Dependencies

If the **dpcn** parameter is specified, its format must match the format that was assigned with the **chg-stpopts:npcfmti** parameter.

Notes

Each exception route set can have up to 6 associated routes.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (**s-**) and the private and spare point code subtype prefix (**ps-**). All of the point code types support the private (internal) point code subtype prefix (**p-**).

The following table provides a summary description of the reports that are produced by specifying various **rept-stat-rtx** parameters.

Format	Meaning
rept-stat-rtx:dpc=ni-nc-ncm :si=n	Requests a status report of the exception route set for fully provisioned destination <i>ni-nc-ncm</i> , which uses the specified value <i>n</i> of the exception route class si as criterion.
rept-stat-rtx:dpc= ni-nc-ncm	Requests a status report of all exception route sets for fully provisioned destination <i>ni-nc-ncm</i> , regardless of the exception route class(es) used as criterion.
rept-stat-rtx:dpc= ni-nc-*	Requests a status report of all exception route sets for provisioned cluster destination <i>ni-nc-*</i> , regardless of the exception route class(es) used as criterion.
rept-stat-rtx	Requests a status report of all exception route sets for provisioned destinations, regardless of the exception route class(es) used as criterion

This command can be cancelled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

Output

The following command provides the status of all exception route sets provisioned in the system, sorted by DPC.

rept-stat-rtx

```
stdcfg2b 06-03-24 01:54:32 EST EAGLE 35.0.0
```

DPCA	PST	SST	AST
001-101-001	IS-NR	Allowed	ACCESS
OPCA			
001-002-001	IS-ANR	Restrict	ACCESS
SI			
10	OOS-MT	Prohibit	ACCESS
12	OOS-MT	Prohibit	ACCESS
DPCA			
004-101-001	IS-NR	Allowed	ACCESS
SI			
10	IS-NR	Allowed	ACCESS
DPCA			
007-101-001	OOS-MT	Prohibit	INACCESS
OPCA			
003-001-020	OOS-MT	Prohibit	INACCESS

Command Completed.

The following command displays the status of exception route sets provisioned against a particular DPC.

rept-stat-rtx:dpc=1-101-1

```
stdcfg2b 06-03-24 01:54:32 EST EAGLE 35.0.0
```

DPCA	PST	SST	AST
001-101-001	IS-NR	Allowed	ACCESS
OPCA			
001-002-001	IS-ANR	Restrict	ACCESS
SI			
10	OOS-MT	Prohibit	ACCESS
12	OOS-MT	Prohibit	ACCESS

Command Completed.

The following command displays detailed status and alarm information for a specific exception route set provisioned against a DPC.

rept-stat-rtx:dpc=1-101-1:opc=1-2-1

```
stdcfg2b 06-03-24 02:11:31 EST EAGLE 35.0.0
```

DPCA	OPCA	PST	SST	AST
001-101-001	001-002-001	IS-ANR	Restrict	ACCESS
ALARM STATUS = * 0533 RTX is restricted				
RTE COST	LSN	APCA	LS STAT	NON-ADJ
1 09	e2e7	007-001-000	Prohibit	Allowed
2* 10	e2e4	004-001-000	Allowed	Allowed
3 --	-----	***_***_***	-----	-----
4 --	-----	***_***_***	-----	-----
5 --	-----	***_***_***	-----	-----
ROUTE STAT				
Prohibit				
Allowed				

```

6  --  -----  _*_**_**_*_*_*  -----  -----
Command Completed.
;

```

Legend

DPC/DPCA—The ANSI destination point code of the exception route

DPCN—The ITU-TSS national destination point code of the exception route

DPCN24—The 24-bit ITU national destination point code of the exception route

DPCI—The ITU-TSS international destination point code of the exception route

OPC/OPCA—The ANSI origination point code as exception routing criterion of the exception route

OPCN—The ITU-TSS national origination point code as exception routing criterion of the exception route

OPCN24—The 24-bit ITU national origination point code as exception routing criterion of the exception route

OPCI—The ITU-TSS international origination point code as exception routing criterion of the exception route

ILSN—The originating linkset as exception routing criterion of the exception route

CIC —Starting Circuit Identification Code used as the exception routing criterion for this exception route

ECIC—Ending Circuit Identification Code together with CIC defines the CIC range that is used as exception routing criterion for this exception route.

SI—Service Indicator used as the exception routing criterion for this exception route

PST—The primary state of the subsystem. The possible values are described in "Possible Values for PST/SST/AST".

SST—The secondary state of the subsystem. The possible values are described in "Possible Values for PST/SST/AST".

AST—The associated state of the subsystem. The possible values are described in "Possible Values for PST/SST/AST".

rept-stat-sccp

Report Status SCCP

Use this command to display the following types of reports:

- **rept-stat-sccp** (with no parameters)—displays the status of the SCCP and VSCCP cards and the GTT (Global Title Translation), G-Flex (GSM Flexible Numbering), G-Port (GSM Mobile Number Portability), INP (INAP-based Number Portability), and EIR (Equipment Identity Register) services executing on those cards. This command also displays any cards that are denied SCCP service.
- **rept-stat-sccp:mode=perf**—targets the general SCCP traffic performance for both SCCP and VSCCP cards. The report supplies message rates for group ticket voucher (TVG) performance.
- **rept-stat-sccp:loc=nnnn**—provides a detailed view of the status of SCCP services provided by a specific SCCP/VSCCP card. Fields are omitted if an associated feature is not turned on.

NOTE: The **rept-stat-sccp** and **rept-stat-sccp:mode=perf** reports include the status of TSM and DSM cards but do not differentiate between these card types.

NOTE: To retrieve traffic statistics for the LNP feature, use the **rept-stat-lnp** command.

Keyword: **rept-stat-sccp**

Related Commands: **chg-th-alm**, **rtrv-th-alm**

Command Class: System Maintenance

Parameters

:loc= (optional)

Card Address. Use this parameter to specify the location of the SCCP/VSCCP card to be reported on.

Range: 1101-1108, 1111-1117, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Default: Report a summary of all cards.

:mode= (optional)

Use this parameter to provide extended performance information, including output about group ticket voucher (TVG) performance and message rates for direct assignments.

Range: **perf**

Default: No extended performance information is displayed.

Example

```
rept-stat-sccp
```

```
rept-stat-sccp:mode=perf
```

```
rept-stat-sccp:loc=1106
```

Dependencies

No other **rept-stat-xxx** command can be in progress when this command is entered.

At least one SCCP or VSCCP card must be configured in the system before this command can be entered.

Only one optional parameter at a time can be specified in the command.

If the **loc** parameter is specified, the **loc** parameter value must be the card location of a VSCCP card.

Notes

None

Output

The following example displays output when the LNP, WNP, TLNP, and PLNP features are turned on, and the G-Flex, G-Port, INP, and EIR features are turned off.

rept-stat-sccp

```
tklc1190601 06-09-18 16:31:14 EST EAGLE5 36.0.0
SCCP SUBSYSTEM REPORT IS-NR Active -----
SCCP ALARM STATUS = No Alarms

SCCP Cards Configured= 7      Cards IS-NR= 7
System Daily Peak SCCP Load    0      TPS 06-09-18 00:00:17
System Overall Peak SCCP Load  2908    TPS 06-09-07 13:28:36
System Total SCCP Capacity     11900    TPS (11900 max SCCP Capacity)
System SCCP Capacity Calc. Method (N)
System TPS Alarm Threshold     9520     TPS ( 80% System N SCCP Capacity)

CARD   VERSION      PST           SST           AST           MSU   CPU
                USAGE  USAGE
-----
1205 P 126-027-000  IS-NR         Active        -----    0%   5%
1317   126-027-000  IS-NR         Active        -----    0%   5%
2213   126-027-000  IS-NR         Active        -----    0%   5%
2215   126-027-000  IS-NR         Active        -----    0%   6%
2217   126-027-000  IS-NR         Active        -----    0%   5%
2317   126-027-000  IS-NR         Active        -----    0%   5%
1105   126-027-000  IS-NR         Active        -----    0%   6%
-----
SCCP Service Average MSU Capacity = 0%   Average CPU Capacity = 5%

AVERAGE CPU USAGE PER SERVICE:
GTT   = 0%

TOTAL SERVICE STATISTICS:

SERVICE    SUCCESS    ERRORS    FAIL    REROUTE\    FORWARD    TOTAL
            GTT      RATIO    WARNINGS  TO GTT
GTT:         0        0        0%      -          -          0
LNPMR:       0        0        0%      -          -          0
LNPQS:       0        0        0%      -          -          0
WNPQS:       0        0        0%      -          -          0
TLNP:        0        0        0%      -          -          0
PLNPQS:      0        0        0%      -          -          0
```

Command Completed.

;

The following example displays output when the G-Flex, G-Port, and EIR features are turned on and the INP, LNP, WNP, TLNP, and PLNP features are turned off. The **ansigflex** system option is disabled.

rept-stat-sccp

```
tklc1170501 06-09-18 10:16:24 EST EAGLE5 36.0.0
SCCP SUBSYSTEM REPORT IS-NR Active -----
SCCP ALARM STATUS = No Alarms
EIR SUBSYSTEM REPORT IS-NR Active -----
EIR:  SSN STATUS = Allowed MATE SSN STATUS = -----
EIR ALARM STATUS = No Alarms
GFLEX SERVICE REPORT IS-NR Active -----
GFLEX ALARM STATUS = No Alarms
GPORT SERVICE REPORT IS-NR Active -----
GPORT ALARM STATUS = No Alarms

SCCP Cards Configured=25      Cards IS-NR=25
System Daily Peak SCCP Load    15639  TPS 06-09-18 06:14:24
System Overall Peak SCCP Load  21062  TPS 06-09-15 14:24:38
```



```

System Total SCCP Capacity      21250  TPS (21250  max SCCP Capacity)
System SCCP Capacity Calc. Method (N)
System TPS Alarm Threshold      17000  TPS ( 80% System  N SCCP Capacity)

```

CARD	VERSION	PST	SST	AST	MSU USAGE	CPU USAGE
1217	126-030-000	IS-NR	Active	-----	100%	45%
1317	126-030-000	IS-NR	Active	-----	100%	51%
2217	126-030-000	IS-NR	Active	-----	100%	42%
3201	126-030-000	IS-NR	Active	-----	54%	25%
3203	126-030-000	IS-NR	Active	-----	55%	25%
3205	126-030-000	IS-NR	Active	-----	57%	27%
3207	126-030-000	IS-NR	Active	-----	69%	29%
3211	126-030-000	IS-NR	Active	-----	85%	35%
3213	126-030-000	IS-NR	Active	-----	94%	37%
3215	126-030-000	IS-NR	Active	-----	86%	35%
3217	126-030-000	IS-NR	Active	-----	74%	31%
4217	126-030-000	IS-NR	Active	-----	64%	28%
4317	126-030-000	IS-NR	Active	-----	100%	41%
5117	126-030-000	IS-NR	Active	-----	100%	40%
5317	126-030-000	IS-NR	Active	-----	56%	25%
6101 P	126-030-000	IS-NR	Active	-----	57%	32%
6103	126-030-000	IS-NR	Active	-----	63%	27%
6105	126-030-000	IS-NR	Active	-----	69%	37%
6107	126-030-000	IS-NR	Active	-----	66%	29%
6111	126-030-000	IS-NR	Active	-----	59%	27%
6113	126-030-000	IS-NR	Active	-----	55%	34%
6115	126-030-000	IS-NR	Active	-----	55%	26%
6117	126-030-000	IS-NR	Active	-----	54%	26%
1105	126-030-000	IS-NR	Active	-----	55%	26%
1107	126-030-000	IS-NR	Active	-----	55%	26%

SCCP Service Average MSU Capacity = 71% Average CPU Capacity = 32%

AVERAGE CPU USAGE PER SERVICE:

GTT = 1% GFLEX = 4% GPORT = 0%

EIR = 20%

TOTAL SERVICE STATISTICS:

SERVICE	SUCCESS	ERRORS	FAIL RATIO	REROUTE\ WARNINGS	FORWARD TO GTT	TOTAL
GTT:	3510	15	0%	-	-	3525
GFLEX:	100043	0	0%	0	0	100043
GPORT:	312203	0	0%	15	1879	314097
EIR:	45832	0	0%	-	-	45832

Command Completed.

;

The following example displays output when the GTT feature is turned on, and the G-Flex, G-Port, INP, EIR, LNP, WNP, TLNP, and PLNP features are turned off. Card 1107 is a DSM with a capacity of 1700 TPS when only the GTT feature is turned on, and card 1111 is a TSM with a capacity of 850 TPS.

rept-stat-sccp

```

tekelecstp 06-09-18 11:32:54 EST  EAGLE5 36.0.0
SCCP SUBSYSTEM REPORT IS-NR      Active      -----
SCCP ALARM STATUS = No Alarms

```

```

SCCP Cards Configured= 2      Cards IS-NR= 2
System Daily Peak SCCP Load   8      TPS 06-09-18 00:00:00
System Overall Peak SCCP Load  8      TPS 06-09-15 15:28:36
System Total SCCP Capacity     2550   TPS (2550   max SCCP Capacity)
System SCCP Capacity Calc. Method (N)

```

System TPS Alarm Threshold 2040 TPS (80% System N SCCP Capacity)

CARD	VERSION	PST	SST	AST	MSU USAGE	CPU USAGE

1107	127-008-000	IS-NR	Active	-----	1%	3%
1111	127-008-000	IS-NR	Active	-----	1%	3%

SCCP Service Average MSU Capacity = 1% Average CPU Capacity = 3%

AVERAGE CPU USAGE PER SERVICE:

GTT = 1%

TOTAL SERVICE STATISTICS:

SERVICE	SUCCESS	ERRORS	FAIL RATIO	REROUTE\ WARNINGS	FORWARD TO GTT	TOTAL
GTT:	226	0	0%	-	-	226

Command Completed.

;

The following example displays output when **mode=perf**, the LNP, WNP, TLNP, and PLNP features are turned on, and the G-Flex, G-Port, INP, and EIR features are turned off.

rept-stat-sccp:mode=perf

tklc1190601 06-09-18 16:31:26 EST EAGLE5 36.0.0

SCCP SUBSYSTEM REPORT IS-NR Active -----

SCCP ALARM STATUS = No Alarms

SCCP Cards Configured= 7 Cards IS-NR= 7

System Daily Peak SCCP Load 0 TPS 06-09-18 00:00:17

System Overall Peak SCCP Load 2908 TPS 06-09-07 13:28:36

System Total SCCP Capacity 11900 TPS (11900 max SCCP Capacity)

System SCCP Capacity Calc. Method (N)

System TPS Alarm Threshold 9520 TPS (80% System N SCCP Capacity)

TPS STATISTICS

CARD	CPU USAGE	TOTAL MSU RATE	CLASS 0 TVG RATE	CLASS 1 TVG RATE
1205	5%	0	0	0
1317	5%	0	0	0
2213	5%	0	0	0
2215	6%	0	0	0
2217	5%	0	0	0
2317	5%	0	0	0
1105	6%	0	0	0

AVERAGE MSU USAGE = 0%

AVERAGE CPU USAGE = 5%

TOTAL MSU RATE = 0

STATISTICS FOR PAST 30 SECONDS

TOTAL MSUS: 0

TOTAL ERRORS: 0

HIGHEST 01 OVERALL DAILY PEAKS LAST 01 DAILY PEAK SCCP LOADS

2908	TPS 06-09-07 13:28:36	0	TPS 06-09-18 00:00:17

Command Completed.

;

The following example displays output when **mode=perf**, the G-Flex, G-Port, and EIR features are turned on, and the INP, LNP, WNP, TLNP, and PLNP features are turned off. The **ansigflex** system option is disabled.

rept-stat-sccp:mode=perf

```
tklcl1170501 06-09-18 10:16:35 EST EAGLE5 36.0.0
SCCP SUBSYSTEM REPORT IS-NR      Active      -----
      SCCP ALARM STATUS = No Alarms
GFLEX SERVICE REPORT IS-NR      Active      -----
      GFLEX ALARM STATUS = No Alarms
GPORT SERVICE REPORT IS-NR      Active      -----
      GPORT ALARM STATUS = No Alarms

SCCP Cards Configured=25          Cards IS-NR=25
System Daily Peak SCCP Load      15639 TPS 06-09-18 06:14:24
System Overall Peak SCCP Load    21062 TPS 06-09-15 14:24:38
System Total SCCP Capacity        21250 TPS (21250 max SCCP Capacity)
System SCCP Capacity Calc. Method (N)
System TPS Alarm Threshold        17000 TPS ( 80% System N SCCP Capacity)
```

TPS STATISTICS

```
=====
CARD      CPU      TOTAL      CLASS 0      CLASS 1
          USAGE    MSU RATE   TVG RATE    TVG RATE
-----
1217      45%       935        935          0
1317      51%       878        878          0
2217      42%       907        907          0
3201      25%       465        465          0
3203      25%       467        467          0
3205      27%       489        489          0
3207      29%       589        589          0
3211      35%       718        718          0
3213      37%       792        792          0
3215      35%       742        742          0
3217      31%       624        624          0
4217      28%       534        534          0
4317      41%       923        923          0
5117      40%       869        869          0
5317      25%       478        478          0
6101      32%       488        488          0
6103      27%       539        539          0
6105      37%       586        586          0
6107      29%       612        612          0
6111      27%       494        494          0
6113      34%       459        459          0
6115      26%       465        465          0
6117      26%       466        466          0
1105      26%       468        468          0
1107      26%       469        469          0
-----
```

```
AVERAGE MSU USAGE = 71%
AVERAGE CPU USAGE = 32%
TOTAL MSU RATE      = 15460
```

STATISTICS FOR PAST 30 SECONDS

```
=====
TOTAL MSUS:          463497
TOTAL ERRORS:         15
```

```
HIGHEST 10 OVERALL DAILY PEAKS          LAST 10 DAILY PEAK SCCP LOADS
=====
21062 TPS 06-09-15 14:24:38          15639 TPS 06-09-18 06:14:24
15639 TPS 06-09-18 06:14:24          15631 TPS 06-09-17 23:15:48
15631 TPS 06-09-17 23:15:48          15617 TPS 06-09-16 16:46:59
```

```

15617 TPS 06-09-16 16:46:59      21062 TPS 06-09-15 14:24:38
12963 TPS 06-09-13 08:41:28      10130 TPS 06-09-14 03:35:32
12904 TPS 06-09-09 00:39:46      12963 TPS 06-09-13 08:41:28
12588 TPS 06-09-08 21:08:38      11983 TPS 06-09-12 01:47:50
11983 TPS 06-09-12 01:47:50      11963 TPS 06-09-11 09:36:59
11964 TPS 06-09-10 07:07:24      11964 TPS 06-09-10 07:07:24
11963 TPS 06-09-11 09:36:59      12904 TPS 06-09-09 00:39:46

```

Command Completed.

;

The following example displays output when **mode=perf**, the G-Flex, G-Port, and INP features are turned on, and the EIR, LNP, WNP, TLNP, and PLNP features are turned off. The **ansigflex** system option is disabled.

rept-stat-sccp:mode=perf

```

tklc1091301 07-01-08 23:44:44 EST EAGLE5 36.0.0
SCCP SUBSYSTEM REPORT IS-NR      Active      -----
      SCCP ALARM STATUS = No Alarms
GFLEX SERVICE REPORT IS-NR      Active      -----
      GFLEX ALARM STATUS = No Alarms
MNP SERVICE REPORT IS-NR      Active      -----
      MNP ALARM STATUS  = No Alarms

SCCP Cards Configured= 4      Cards IS-NR= 4
System Daily Peak SCCP Load      0      TPS 07-01-08 22:45:38
System Overall Peak SCCP Load      0      TPS 00-00-00 00:00:00
System Total SCCP Capacity      3400      TPS (3400 max SCCP Capacity)
System SCCP Capacity Calc. Method (N)
System TPS Alarm Threshold      2720      TPS ( 80% System N SCCP Capacity)

```

TPS STATISTICS

```

=====
CARD      CPU      TOTAL      CLASS 0      CLASS 1
          USAGE    MSU RATE  TVG RATE  TVG RATE
-----
2113      5%        0          0          0
2213      5%        0          0          0
2217      5%        0          0          0
2317      5%        0          0          0
-----

```

```

AVERAGE MSU USAGE = 0%
AVERAGE CPU USAGE = 5%
TOTAL MSU RATE     = 0

```

STATISTICS FOR PAST 30 SECONDS

```

=====
TOTAL MSUS:      0
TOTAL ERRORS:    0

```

HIGHEST 01 OVERALL DAILY PEAKS LAST 01 DAILY PEAK SCCP LOADS

```

=====
0      TPS 00-00-00 00:00:00      0      TPS 07-01-08 22:45:38

```

Command Completed.

;

The following example shows the output when **mode=perf**, the GTT feature is turned on, and the G-Flex, G-Port, INP, EIR, LNP, WNP, TLNP, and PLNP features are turned off. Card 1107 is a DSM with a capacity of 1700 TPS with only GTT on, and 1111 is a TSM with a capacity of 850 TPS.

rept-stat-sccp:mode=perf

```

tklc1091301 06-09-18 11:33:09 EST EAGLE5 36.0.0
SCCP SUBSYSTEM REPORT IS-NR      Active      -----
      SCCP ALARM STATUS = No Alarms

```

```

SCCP Cards Configured= 2      Cards IS-NR= 2
System Daily Peak SCCP Load      8      TPS 06-09-18 00:00:00
System Overall Peak SCCP Load    8      TPS 06-09-15 15:28:36
System Total SCCP Capacity        2550   TPS (2550 max SCCP Capacity)
System SCCP Capacity Calc. Method (N)
System TPS Alarm Threshold        2040   TPS ( 80% System N SCCP Capacity)

```

TPS STATISTICS

```

=====
CARD    CPU      TOTAL    CLASS 0    CLASS 1
        USAGE    MSU RATE  TVG RATE  TVG RATE
-----
1107    3%        4        4         0
1111    4%        4        4         0
-----
AVERAGE MSU USAGE = 1%
AVERAGE CPU USAGE = 3%
TOTAL MSU RATE     = 8

```

STATISTICS FOR PAST 30 SECONDS

```

=====
TOTAL MSUS:          226
TOTAL ERRORS:        0

```

```

HIGHEST 04 OVERALL DAILY PEAKS      LAST 04 DAILY PEAK SCCP LOADS
=====
8      TPS 06-09-15 15:28:36          8      TPS 06-09-18 00:00:00
8      TPS 06-09-15 15:28:37          8      TPS 06-09-17 00:00:01
8      TPS 06-09-17 00:00:01          8      TPS 06-09-16 00:00:00
8      TPS 06-09-18 00:00:00          8      TPS 06-09-15 15:28:37

```

Command Completed.

;

The following example displays output for a specified card when the LNP, WNP, TLNP, and PLNP features are turned on, and the G-Flex, G-Port, INP, and EIR features are turned off.

rept-stat-sccp: loc=1105

```

tklc1190601 06-09-18 16:31:46 EST EAGLE5 36.0.0
CARD  VERSION    TYPE    PST      SST      AST
1105  126-027-000 DSM     IS-NR    Active   -----
CARD ALARM STATUS = ** 0901 Card DB load timeout, check GLS card
  GTT:   STAT = ACT      CPU USAGE = 0%
                        -----
                        TOTAL    = 0%

```

CARD SERVICE STATISTICS

```

SERVICE    SUCCESS    ERRORS    WARNINGS    FORWARD TO GTT    TOTAL
GTT:        0         0         -           -                0

```

Command Completed.

;

The following example displays output for a specified card when the G-Flex, G-Port, and EIR features are turned on, and the INP, LNP, WNP, TLNP, and PLNP features are turned off. The **ansigflex** system option is disabled.

rept-stat-sccp: loc=1105

```

tklc1170501 06-09-18 10:16:51 EST EAGLE5 36.0.0
CARD  VERSION    TYPE    PST      SST      AST
1105  126-030-000 DSM     IS-NR    Active   -----
CARD ALARM STATUS = No Alarms.
  GTT:   STAT = ACT      CPU USAGE = 1%
  GFLEX: STAT = ACT      CPU USAGE = 3%
  GPORT: STAT = ACT      CPU USAGE = 9%
  EIR:   STAT = ACT      CPU USAGE = 2%
  -----

```

TOTAL = 15%

CARD SERVICE STATISTICS

SERVICE	SUCCESS	ERRORS	WARNINGS	FORWARD TO GTT	TOTAL
GTT:	153	2	-	-	155
GFLEX:	2582	0	0	0	2582
GPORT:	8171	0	1	102	8274
EIR:	3089	0	-	-	3089

Command Completed.

;

Legend

This section defines the fields of the three **rept-stat-sccp** reports:

- **rept-stat-sccp** with no parameters
- **rept-stat-sccp:mode=perf**
- **rept-stat-sccp:loc= nnnn**

A dash (-) in an output field indicates that the statistic does not apply.

NOTE: The ERRORS and TOTAL ERRORS fields indicate that errors have occurred for SCCP cards in the system. Refer to UIMs generated by the system for the specific errors, and refer to the *Maintenance Manual* for error explanations and recovery procedures.

Report Type: rept-stat-sccp with no parameters

SCCP SUBSYSTEM REPORT, INPQ/EIR SUBSYSTEM REPORT—The summaries of the SCCP subsystem, INPQ (INP Query) subsystem, and EIR subsystem status. Information about the status of GSM, INPMR (INP Message Relay), and EIR services is provided in the SCCP subsystem status summary report. The INPQ subsystem status is displayed only if the INP feature bit is turned on. The EIR subsystem status is displayed only if the EIR feature key is enabled and turned on. The ALARM STATUS for the SCCP and INPQ/EIR Subsystems is displayed in this section of the report.

SCCP CARDS CONFIGURED—The number of SCCP/VSCCP cards provisioned.

CARD IS-NR—The number of SCCP/VSCCP cards that can be used by the system (status is in-service normal, IS-NR).

SYSTEM TPS ALARM THRESHOLD—The percentage of traffic that when reached triggers an alarm to warn that the EAGLE 5 ISS is approaching the total system SCCP transactions-per-second (TPS) capacity. This value is set by the **chg-th-alm** command.

SYSTEM PEAK SCCP LOAD—The highest SCCP transactions-per-second (TPS) processed by the EAGLE 5 ISS.

SYSTEM TOTAL SCCP CAPACITY—The current total system SCCP transactions-per-second (TPS) capacity. This value is the sum of the maximum capacity of all active SCCP cards. When the ansigflex system option is enabled in an ANSI system, the maximum capacity of each DSM is 1700 TPS.

CARD—The card location of the TSMs running the SCCP application and of the DSMs running the VSCCP application.

P—When G-Flex, G-Port, or INP is turned on or EIR is enabled and turned on, a P indicates the primary DSM. The primary DSM provides the MPS status to the EAGLE 5 ISS. This indicator is displayed between the card location and the GPL version.

VERSION—The version number of the SCCP/VSCCP GPL the card is running.

PST—The primary state of the card. The possible values are described in "Possible Values for PST/SST/AST".

SST—The secondary state of the card. The possible values are described in "Possible Values for PST/SST/AST".

AST—The associated state of the card. The possible values are described in "Possible Values for PST/SST/AST".

MSU USAGE—The percentage of the maximum number of MSUS (850 MSUS per second) received by each card during the last 30 seconds.

CPU USAGE—The percentage of the amount of CPU used by each card during the last 30 seconds to process messages and to handle other foreground and background tasks.

SCCP SERVICE AVERAGE MSU CAPACITY—The average MSU capacity used over the last 30-second interval. This field includes all services provided by the SCCP/VSCCP cards.

AVERAGE CPU CAPACITY—The average CPU capacity used over the last 30-second interval. This field includes all services provided by the SCCP/VSCCP cards.

AVERAGE CPU USAGE PER SERVICE—A system-wide view of the service traffic composition. This report is available only if the G-Flex, G-Port, or INP feature is turned on or if the EIR feature is enabled and turned on. Fields are omitted if the associated feature is not turned on. The services include GTT, EIR, G-Flex, INPQ, G-Port, and INPMR.

TOTAL SERVICE STATISTICS—A system-wide view of per-service statistics. This report is available only if the G-Flex, G-Port, or INP feature is turned on or if the EIR feature is enabled and turned on. Fields are omitted if the associated feature is not turned on.

An "A" in the field indicates that the statistic does not apply.

The report tracks the following information:

SERVICE—The services include GTT, EIR, G-Flex, INPQ, G-Port, and INPMR.

SUCCESS—The total number of successful messages processed by the specified card for each service. Applies to all services.

ERRORS—The total number of messages with errors for each service. Applies to all services.

WARNINGS—The total number of messages that output UIM warnings and were forwarded to GTT by the specified card for G-Flex, G-Port, and INPMR.

FORWARD TO GTT—The total number of messages that could not find a match in the MPS (Multi-Purpose Server) database (did not produce any errors or warnings) and were successfully forwarded to GTT by the specified card for G-Flex, G-Port, and INPMR.

Report Type: **rept-stat-sccp:mode=perf**

The report displays general SCCP traffic performance for both SCCP and VSCCP cards and supplies message rates for TVG.

NOTE: This report includes the status of TSM and DSM cards, but does not differentiate between these card types.

SCCP SUBSYSTEM REPORT—The summary status of the SCCP subsystem, and the SCCP Alarm Status.

SCCP CARDS CONFIGURED—The number of SCCP/VSCCP cards provisioned.

CARD IS-NR—The number of SCCP/VSCCP cards that can be used by the system (status is in-service normal, IS-NR).

SYSTEM TPS ALARM THRESHOLD—The percentage of traffic that when reached triggers an alarm to warn that the EAGLE 5 ISS is approaching the total system SCCP transactions-per-second (TPS) capacity. This value is set by the **chg-th-alm** command.

SYSTEM PEAK SCCP LOAD—The highest SCCP transactions-per-second (TPS) processed by the EAGLE 5 ISS.

SYSTEM TOTAL SCCP CAPACITY—The current total system SCCP transactions-per-second (TPS) capacity. This value is the sum of the maximum capacity of all active SCCP cards.

TPS STATISTICS—The section of the report that provides TPS statistics on each SCCP or VSCCP card.

CARD—The card location of the TSM cards running the SCCP application and of the DSMs running the VSCCP application.

CPU USAGE—The percentage of the amount of CPU used to process messages by each card during the last 30 seconds.

TOTAL MSU RATE—The total number of messages processed per second. This and the other message rates are obtained from statistics maintained by the SCCP or VSCCP card for the last 30-second period.

CLASS 0 AND CLASS 1 TVG RATE—The number of messages per second received.

The next section of the **rept-stat-sccp:mode=perf** report provides system-wide SCCP traffic statistics.

AVERAGE MSU USAGE—The total of the MSU usage fields from each SCCP card divided by the number of active SCCP cards.

AVERAGE CPU USAGE—The total of the CPU usage fields from each SCCP card divided by the number of active SCCP cards.

TOTAL MSU RATE—The sum of all GTT, EIR, G-Flex, G-Port, and INP MSUs processed by all active SCCP cards.

STATISTICS FOR PAST 30 SECONDS—statistics that represent the last 30-second period.

TOTAL MSUS—The sum of all transactions on all active SCCP cards.

TOTAL ERRORS—The sum of all errors on all active SCCP cards.

Report Type: **rept-stat-sccp:loc=nnnn**

CARD—The card location of the TSM running the SCCP application or of the DSM running the VSCCP application.

VERSION—The version number of the GPL the card is running.

TYPE—The type (TSM/DSM) of the card.

PST—The primary state of the card. The possible values are described in "Possible Values for PST/SST/AST".

SST—The secondary state of the card. The possible values are described in "Possible Values for PST/SST/AST".

AST—The associated state of the card. The possible values are described in "Possible Values for PST/SST/AST".

CARD ALARM STATUS—If there are no card alarms present, this field displays No Alarms.

The next section of the **rept-stat-sccp:loc=nnnn** report supplies the status of the individual services provided by the card and the associated CPU usage for the service. Fields are omitted if the associated feature is not turned on.

GTT: STAT—Possible values are ACTIVE and SWDL (software loading).

GFLEX: STAT—Possible values are ACTIVE and SWDL (software loading).

GPORT: STAT—Possible values are ACTIVE and SWDL (software loading).

INPMR: STAT—Possible values are ACTIVE, OFFLINE, and SWDL (software loading).

INPQ: STAT—Possible values are ACTIVE, OFFLINE, and SWDL (software loading).

EIR: STAT—Possible values are ACTIVE, OFFLINE and SWDL (software loading).

TOTAL—The sum of the CPU usage for the services running over the previous 30-second period.

CARD SERVICE STATISTICS—The card service statistics for the specified card. This report is available only if the G-Flex, G-Port, or INP feature is turned on, or the EIR feature is enabled and turned on. Fields are omitted if their associated feature is not turned on. The report tracks the following:

SERVICE—The services include GTT, EIR, G-Flex, G-Port, INPQ, and INPMR.

SUCCESS—The total number of successful messages processed by the specified card for each service. Applies to all services.

ERRORS—The total number of messages with errors for each service. Applies to all services.

WARNINGS—The total number of messages that output UIM warnings and were forwarded to GTT by the specified card for EIR, G-Flex, G-Port, and INPMR.

FORWARD TO GTT—The total number of messages that could not find a match in the MPS database (did not produce any errors or warnings) and were successfully forwarded to GTT by the specified card for EIR, G-Flex, G-Port, and INPMR.

rept-stat-seas

Report Status SEAS Command

Use this command to generate a summary report of the status of the SEAS subsystem on the EAGLE 5 ISS. This command reports single OSS/Application Processor (OAP) or dual OAP configuration status, depending on the OAP hardware configuration used. See the *Maintenance Manual* for information about the SEAS alarms.

Keyword: **rept-stat-seas**

Related Commands: **alw-trm**, **chg-trm**, **inh-trm**, **rept-stat-sys**, **rept-stat-trbl**, **rept-stat-trm**

Command Class: System Maintenance

Parameters

This command has no parameters.

Example

rept-stat-seas

Dependencies

The SEAS feature must be turned on prior to using this command.

At least one OAP terminal must be defined using the **chg-trm** command.

No other **rept-stat-xxx** command can be in progress when this command is entered.

Notes

None

Output**rept-stat-seas**

```

rlghncxa03w 04-02-04 15:59:06 EST EAGLE 31.3.0
SEAS Subsystem Report      IS-NR      Active  -----
SEAS Interfaces Configured = 2  Interfaces IS-NR = 2
                                GPL        PST        SST        AST
-----
SEAS SYSTEM                  IS-NR      Active  -----
TDM Port          4          IS-NR      Active  -----
TDM Port          10         IS-NR      Active  -----
OAP               A         250-001-000 IS-NR      Active  -----
OAP               B         250-001-000 IS-NR      Active  -----
X.25 Link         A1        IS-NR      Active  -----
X.25 Link         B1        IS-NR      Active  -----

SEAS SYSTEM  ALARM STATUS = No Alarms.
OAP A        ALARM STATUS = No Alarms.
OAP B        ALARM STATUS = No Alarms.
X25 Link A1  ALARM STATUS = No Alarms.
X25 Link A2  ALARM STATUS = No Alarms.
X25 Link B1  ALARM STATUS = No Alarms.
X25 Link B2  ALARM STATUS = No Alarms.

X25 A1 PVCs IS-NR      = 1,2,3
X25 A1 PVCs OOS-MT    = ---
X25 B1 PVCs IS-NR      = 1,2,3
X25 B1 PVCs OOS-MT    = ---

X25 A2 PVCs IS-NR      = 1,2,3
X25 A2 PVCs OOS-MT    = ---
X25 B2 PVCs IS-NR      = 1,2,3
X25 B2 PVCs OOS-MT    = ---
Command Completed.
;

```

Legend

SEAS COMPONENT—The name of the subsystem component.

PST—The primary state of the subsystem. The possible values are described in "Possible Values for PST/SST/AST".

SST—The secondary state of the subsystem. The possible values are described in "Possible Values for PST/SST/AST".

AST—The associated state of the subsystem. The possible values are described in "Possible Values for PST/SST/AST".

rept-stat-seculog**Display Security Log Status Information**

Use this command to display the following information about the security log on the active and standby OAMs:

- The active or standby status of each log
- The number of new (that is, not uploaded) entries in each log
- The percentage of log space used by those new entries
- Whether overflow has occurred since the last upload
- Whether a recording failure has occurred since the last upload

- The date and time of the oldest and newest records in the log
- The date and time when the last successful upload of the log occurred

Keyword: `rept-stat-seculog`

Related Commands: `chg-attr-seculog`, `rtrv-attr-seculog`

Command Class: Security Administration

Parameters

This command has no parameters.

Example

`rept-stat-seculog`

Dependencies

No other security log command can be in progress when this command is entered.

Notes

The %FULL field displays the amount of space in the log taken up by new (not uploaded) entries. That number is obtained by dividing the number displayed in the ENTRIES field by the overall storage capacity of the log (10,000 entries). Because the log stays full of entries at all times, new entries overwrite existing entries.

The percentage full computed is rounded up to the next integer with one exception: the value of 100 is not displayed until the log is truly 100% full.

The log capacity is 10,000 records. To determine how many more commands can be logged before an overflow condition occurs, subtract the value displayed in the ENTRIES field from 10,000.

The status of the active OAM's log is always reported first in the output report, followed by the status of the standby log; in other words, they are not *necessarily* displayed numerically by the location number.

The report displays dates in the format *yy-mm-dd*, where *yy* is the year, *mm* is the month, and *dd* is the date. The report displays times in the format of *hh:mm:ss*, where *hh* is hours, *mm* is minutes, and *ss* is seconds.

Output

The following example shows the normal security log state. All of the un-uploaded records appear in the log on the active OAM.

rept-stat-seculog

```
rlghncxa03w 05-07-29 16:40:40 EST EAGLE 28.1.0
-- SINCE LAST UPLOAD -- OLDEST NEWEST LAST
LOC  ROLE   ENTRIES %FULL OFLO FAIL RECORD  RECORD  UPLOAD
1114 Active  8312    84    No   No   96-08-12 05-07-04 05-07-16
                                     11:23:56 15:59:06 14:02:22

1116 Standby 0         0    No   No   96-09-12 05-07-30 05-07-30
                                     11:24:12 14:00:06 14:02:13
```

;

The following example shows an abnormal situation. The active security log is full and has overflowed.

rept-stat-seculog

```
rlghncxa03w 05-07-29 16:40:40 EST EAGLE 28.1.0
-- SINCE LAST UPLOAD -- OLDEST NEWEST LAST
LOC  ROLE   ENTRIES %FULL OFLO FAIL RECORD  RECORD  UPLOAD
1114 Active 10000    100 Yes  No   96-08-12 05-07-04 05-07-16
                                     11:23:56 15:59:06 14:02:22

1116 Standby 0         0    No   No   96-09-12 05-07-30 05-07-30
                                     11:24:12 14:00:06 14:02:13
```

;

The following example shows what happens when both logs contain un-uploaded entries. The standby log on 1116 should be uploaded.

rept-stat-seculog

```
rlghncxa03w 05-07-29 16:40:40 EST EAGLE 28.1.0
-- SINCE LAST UPLOAD -- OLDEST NEWEST LAST
LOC  ROLE   ENTRIES %FULL OFLO FAIL RECORD  RECORD  UPLOAD
1114 Active  8312    84    No   No   96-08-12 05-07-04 05-07-16
                                     11:23:56 15:59:06 14:02:22

1116 Standby 693      7    No   No   96-09-12 05-07-30 05-07-30
                                     11:24:12 14:00:06 14:02:13
```

;

The following example shows how, if data cannot be retrieved from the standby OAM (for example, in simplex mode), blanks (-----) are displayed.

rept-stat-seculog

```
rlghncxa03w 05-07-29 16:40:40 EST EAGLE 28.1.0
-- SINCE LAST UPLOAD -- OLDEST NEWEST LAST
LOC  ROLE   ENTRIES %FULL OFLO FAIL RECORD  RECORD  UPLOAD
1114 Active  8312    83    No   No   96-08-12 05-07-04 05-07-16
                                     11:23:56 15:59:06 14:02:22

1116 Standby ----- --- --- --- -----
```

;

Legend

LOC—The address of the TDM card (with the hard disk on it) that contains the log. It is always the card at location 1114 or 1116.

ROLE—The current role of the security log at that location. This value is always the same as the role of the OAM associated with the TDM card: **active** or **standby**.

-- **SINCE LAST UPLOAD**—This heading applies to the four columns directly below it on the output. It indicates that the fields below display information obtained since the last upload.

ENTRIES—Shows how many un-uploaded commands are currently recorded in the log. This value resets to 0 (zero) when the log is uploaded using **copy-seculog**.

%FULL—Shows, as a percentage, how much space in the log the ENTRIES field value occupies.

OFLO—The overflow indicator. Overflow is what happens if the log is not uploaded periodically: new entries start overwriting un-uploaded entries. This field displays **No** if no overflow has occurred and **Yes** if overflow has occurred.

FAIL—The failed indicator. This field displays **No** if no logging failure has occurred. It displays **Yes** to indicate that a logging failure has occurred that has prevented one or more entries from being recorded in the log successfully.

NOTE: Whether the system is able to set the logging failure flag in the security log header depends on the nature of the failure. If a **copy-disk** command is processing, the system sets the flag when the **copy-disk** command finishes processing. However, if the active fixed disk fails for some reason, or the security log happens to be in a bad sector that develops, the system is unable to set the logging failure flag.

OLDEST RECORD/NEWEST RECORD—The date and time recorded in the oldest and newest record in the log. Allows the administrator to know the time period that the log covers. The log records all commands that were issued between 6/3/96 at 13:45:03 up to 8/5/96 at 06:58:55. The **NEWEST RECORD** for the active log is the current date, because the log will have recorded the **rept-stat-seculog** command that was just entered to produce the report.

LAST UPLOAD—The date and time when the log was last uploaded successfully. That is, the **copy-seculog** command successfully copied the log to the FTA.

rept-stat-slan

Report Status of the STPLAN

Use this command to generate a summary report of the status of the ACMs that make up the STPLAN subsystem.

Keyword: **rept-stat-slan**

Related Commands: **rept-stat-alm**, **rept-stat-card**, **rept-stat-dlk**, **rept-stat-imt**, **rept-stat-sys**, **rept-stat-trbl**

Command Class: System Maintenance

Parameters

:mode= (optional)

Use this parameter to provide extended performance information, including group ticket voucher (TVG) message rates.

Range: **perf**

Default: No extended performance information is displayed

Example

```
rept-stat-slan
```

```
rept-stat-slan:mode=perf
```

Dependencies

No other **rept-stat-xxx** commands can be in progress when this command is entered.

A warning is issued if at least one ACM is not configured.

Notes

The HOST CAP. field value is obtained by averaging the usage percentages for the data links from each ACM to the host.

The EAGLE CAP. field value is obtained by averaging the usage percentages for the ACM traffic received from LIMs.

The system level usage for host capacity (the AVERAGE USAGE PER HOST CAPACITY field in the **rept-stat-slan** output) is obtained by averaging the usage percentages for the data links to the host from each ACM.

The EAGLE 5 ISS level usage for ACM capacity (the AVERAGE USAGE PER EAGLE CAPACITY field in the **rept-stat-slan** output) is obtained by averaging the usage percentages for the ACM traffic received from LIMs.

Output

The following example shows output with at least one ACM in an IS-NR state:

rept-stat-slan

```
rlghncxa03w 04-02-27 16:53:22 EST EAGLE 31.3.0
SLAN Subsystem Report IS-NR Active -----
SLAN Cards Configured= 2 Cards IS-NR= 2
CARD VERSION PST SST AST HOST Cap. EAGLE Cap.
-----
1206 021-010-000 IS-NR Active ---- 42% 16%
1104 021-010-000 IS-NR Active ALMINH 36% 12%
-----
AVERAGE USAGE per HOST CAPACITY = 39%
AVERAGE USAGE per EAGLE CAPACITY = 14%
CARDS DENIED SLAN SERVICE:
1101, 1204
Command Completed.
```

;

rept-stat-slan:mode=perf

```
rlghncxa03w 04-02-04 13:36:07 EST EAGLE 31.3.0
SLAN Subsystem Report IS-NR Active -----
SLAN Cards Configured= 3 Cards IS-NR= 3
CARD HOST EAGLE TVG
CAP CAP RATE
-----
1101 50% 30% 140
1102 55% 33% 435
1103 47% 28% 435
-----
AVERAGE USAGE per HOST CAPACITY = 51%
AVERAGE USAGE per EAGLE CAPACITY = 30%
Command Completed.
```

;

Legend

SLAN SUBSYSTEM REPORT—The status of the STPLAN subsystem.

STPLAN CARDS CONFIGURED—The number of ACMs, used by the STPLAN, contained in the system.

CARDS IS_NR—The number of ACMs contained in the system whose status is in service normal (IS-NR).

CARD—The locations of the ACMs.

VERSION—The version number of the STPLAN GPL the cards are running.

PST—The primary state of the ACMs. The possible values are described in "Possible Values for PST/SST/AST".

SST—The secondary state of the ACMs. The possible values are described in "Possible Values for PST/SST/AST".

AST—The associated state of the ACMs. The possible values are described in "Possible Values for PST/SST/AST".

HOST CAP—The amount of traffic being sent to the host from each ACM, expressed as a percentage of the total amount of traffic that can be sent to the host.

EAGLE CAP—The amount of traffic being sent to each ACM that is received from the LIMs, expressed as a percentage of the total amount of traffic that can be sent to the ACM.

AVERAGE USAGE PER HOST CAPACITY The amount of traffic being sent to all hosts from all ACMs, expressed as a percentage of the total amount of traffic that can be sent to all hosts from all ACMs.

AVERAGE USAGE PER EAGLE CAPACITY—The amount of traffic being sent to all ACMs that is received from the LIMs, expressed as a percentage of the total amount of traffic that can be sent to all ACMs.

CARDS DENIED SLAN SERVICE—The card locations that cannot use the STPLAN application.

CARDS DISABLED COPY SERVICE—The card locations that cannot use the stop and copy action of the gateway screening feature.

Instead of displaying the VERSION , PST , SST , AST , HOST CAP , EAGLE CAP, and CARDS DENIED SLAN SERVICE fields, the report displayed with the **rept-stat-slan:mode=perf** command shows these fields:

HOST CAP—The average of the usage percentages for the TCP/IP data links to the host from each ACM.

EAGLE CAP—The average of the usage percentages for the ACM traffic received from the LIMs.

TVG RATE—The number of messages per second received from all SS7 links, and any other group ticket voucher paced message source. It is obtained from statistics maintained by the ACM for the last 30-second period.

AVERAGE USAGE PER HOST CAPACITY—The amount of traffic being sent to all hosts from all ACMs, expressed as a percentage of the total amount of traffic that can be sent to all hosts from all ACMs.

AVERAGE USAGE PER EAGLE CAPACITY—The amount of traffic being sent to all ACMs that is received from the LIMs, expressed as a percentage of the total amount of traffic that can be sent to all ACMs.

rept-stat-slk

Report Status Signaling Link

Use this command to generate a report of the MTP signaling links status. The secondary state (SST) indicates whether the link is available, unavailable, or manually removed from service.

Use this command to generate a separate report of status of the E1 associated with a signaling link. The status includes the **e1loc** parameter (card location of the E1 card) and the UAM text. If the E1 association is not provisioned, “E1 association unknown” is displayed. If the card is not type **lime1** or **limch**, no E1 output is generated.

Use this command to generate a separate report of status of the T1 associated with a signaling link. The status includes the **t1loc** parameter (card location of the T1 card) and the UAM text. If the card is not type **limt1** or **limch**, no T1 output is generated.

Keyword: **rept-stat-slk**

Related Commands: **act-slk, blk-slk, dact-slk, dlt-slk, ent-slk, inh-slk, rtrv-slk, tst-slk, ublk-slk, unhb-slk**

Command Class: System Maintenance

Parameters

:l2stats= (optional)

Report L2 status

Range: **align, both, brief, no, service**

align— Display alignment data only

both— Display alignment and service data

brief — Display up to 10 alignment events only
no — Do not display level 2 status information
service — Display service data only

Default: **no**

:link= (optional)

The signaling link on the card specified in the **loc** parameter. The linkss can be specified in any sequence or pattern.

Synonym: **port**

Range: **a, b, a1-a31, b1-b31**

Not all card types support all **link** parameter values.

See Table A-1 for valid **link** parameter range values for each type of card that can have assigned signaling link ports.

Default: Display all

:loc= (optional)

The card location as stenciled on the shelf of the system.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

Default: All cards containing signaling links are displayed.

:stat= (optional)

A report on cards whose status is the same as the state indicated by the parameter

Range: **all, alminh, anr, dsbld, mt, nr**

all — All of the primary states

alminh — Alarms inhibited

anr — In-Service-Abnormal (IS-ANR)

dsbld — Out-of-Service-Maintenance-Disabled (OOS-MT-DSBLD)

mt — Out-of-Service-Maintenance (OOS-MT)

nr — In-Service-Normal (IS-NR)

Default: Display all

Example

```
rept-stat-slk
```

```
rept-stat-slk:loc=1201:link=a
```

```
rept-stat-slk:stat=alminh
```

```
rept-stat-slk:loc=1203:link=b:L2stats=both
```

```
rept-stat-slk:loc=1203:link=b:L2stats=brief
```

Dependencies

No other **rept-stat-xxx** command can be in progress when this command is entered.

If the **loc** parameter or the **link** parameter is specified, the **stat** parameter cannot be specified.

When the **loc** parameter is specified, the **link** parameter must be specified.

The card must be equipped and must be one of the following cards:

- A LIM card running the **ss7ansi**, **ss7gx25**, **atmansi**, or **ccs7itu** application
- An E1 ATM card running the **atmitu** application

- A DCM or SSEDCCM or E5-ENET card running the **ss7ipgw**, **ipgwi**, **iplim**, or **iplimi** application
- An E1/T1 MIM card or HC MIM card running the **ss7ansi** or **ccs7itu** application

The location specified by the **loc** parameter cannot be one of those reserved for non-LIM or non-DCM cards.

The signaling link must be an SS7 signaling link to display level 2 statistics (**l2stats**).

On TCP/IP point-to-multipoint links (DCM cards equipped as SS7IPGW or IPGWI links), **l2stats** output is not available.

The following **link** parameter values can be specified for the following cards that support more than 2 links per card:

- **a1-a3, b1-b3**—Multi-port LIM (MPL, MPL-T), SSEDCCM card running the **iplim** or **iplimi** application with links having **ipliml2=m2pa** or **ipliml2=saaltali**, E1/T1 MIM card
- **a1-a31, b1-b31**—HC-MIM card
- **a1-a15, b1-b15**—E5-E1T1 card
- **a1-a7, b1-b7**—E5-ENET card running the **iplim** or **iplimi** application that supports 16 links

The specified signaling link must be provisioned in the database.

A card location that is valid and defined in the database must be specified.

Notes

Not every card location represents a signaling link. Be sure to address a signaling link in this command.

This command can be canceled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

The *Installation Manual – EAGLE 5 ISS* provides an illustration of card locations.

Output

rept-stat-slk

```
rlghncxa03w 04-02-27 17:00:36 EST EAGLE 31.3.0
SLK      LSN      CLLI      PST      SST      AST
1201,A   lsnsspn2  -----  IS-NR      Avail    ----
1201,B   lsnstpi   -----  IS-NR      Avail    ----
1202,A   lsnstpn   -----  IS-NR      Avail    ----
1202,B   lsnstpi   -----  IS-NR      Avail    ----
1203,A   lsnstpa   -----  IS-NR      Avail    ----
1203,B   lsnscpa   -----  IS-NR      Avail    ----
1205,A   lsnscpi   -----  IS-NR      Avail    ----
1205,B   lsnsspi1  -----  IS-NR      Avail    ----
1207,A   lsnstpa   -----  IS-NR      Avail    ----
1207,B   lsnsspa1  -----  IS-NR      Avail    ----
1211,A   lsnstpn   -----  IS-NR      Avail    ----
1211,B   lsnsspn1  -----  IS-NR      Avail    ----
Command Completed.
```

;

rept-stat-slk:loc=1201:link=a

```
rlghncxa03w 04-02-04 13:06:25 EST EAGLE 31.3.0
SLK      LSN      CLLI      PST      SST      AST
1201,A   lsnsspn2  -----  OOS-MT      Unavail  ----
ALARM STATUS = * 0213 REPT-LKF: received SIOS
UNAVAIL REASON = PE NA
Command Completed.
```

;

rept-stat-slk:loc=1213:link=a

```
rlghncxa03w 04-02-27 17:00:36 EST EAGLE 31.3.0
SLK      LSN      CLLI      PST      SST      AST
1201,A   lsnsspn2  -----  OOS-MT-DSBLD  LPBK      LFS
ALARM STATUS = * 0236 REPT-LKS: not aligned
UNAVAIL REASON = NA (can be any of those listed below)
Command Completed.
```

;

rept-stat-slk:stat=alminh

```
rlghncxa03w 04-02-23 12:57:50 EST EAGLE 31.3.0
SLK      LSN      CLLI      PST      SST      AST
1205,A   lsnscpi   -----  IS-NR      Avail    ALMINH
1211,A   lsnstpn   -----  IS-NR      Avail    ALMINH
Command Completed.
```

;

The following example shows output that includes a multi-port LIM:

rept-stat-slk

```
rlghncxa03w 04-02-23 12:57:50 EST EAGLE 31.3.0
SLK      LSN      CLLI      PST      SST      AST
1201,A   lsnsspn2  -----  IS-NR      Avail    ----
1201,B   lsnstpi   -----  IS-NR      Avail    ----
1202,A   lsnstpn   -----  IS-NR      Avail    ----
1202,B   lsnstpi   -----  IS-NR      Avail    ----
1203,A   lsnstpa   -----  IS-NR      Avail    ----
1203,B   lsnscpa   -----  IS-NR      Avail    ----
1203,A1  lsnstpi   -----  IS-NR      Avail    ----
1203,B1  lsnscpi   -----  IS-NR      Avail    ----
1203,A2  lsnstpb   -----  IS-NR      Avail    ----
1203,B2  lsnscpb   -----  IS-NR      Avail    ----
1203,A3  lsnstpc   -----  IS-NR      Avail    ----
1203,B3  lsnscpc   -----  IS-NR      Avail    ----
1205,A   lsnscpi   -----  IS-NR      Avail    ALMINH
1205,B   lsnsspi1  -----  IS-NR      Avail    ----
1207,A   lsnstpa   -----  IS-NR      Avail    ----
```

```

1207,B lsnsspa1 ----- IS-NR Avail ----
1211,A lsnstpn ----- OOS-MT Unavail ALMINH
1211,B lsnsspn1 ----- OOS-MT Unavail ----
Command Completed.

```

;

rept-stat-slk:loc=1203:link=a:L2stats=both

```

rlghncxa03w 04-02-04 13:06:25 EST EAGLE 31.3.0
SLK      LSN      CLLI      PST      SST      AST
1203,A lsnsspn2 ----- OOS-MT-DSBLD Unavail ----
  ALARM STATUS = ** 0236 REPT-LKS: not aligned
  UNAVAIL REASON = NA
Event Type      Timestamp
SSCOP State     Idle 04-02-04 10:04:23.000
SSCOP State     Outgoing Conn. Pending 04-02-04 10:04:23.000
SSCOP State     Incoming Conn. Pending 04-02-04 10:05:31.100
SSCOP State     Outgoing Disc. Pending 04-02-04 10:05:31.100
SSCOP State     Outgoing Resync Pending 04-02-04 10:05:31.105
SSCOP State     Incoming Resync Pending 04-02-04 10:05:31.105
SSCOP State     Outgoing Recovery Pending 04-02-04 10:05:46.425
SSCOP State     Recovery Response Pending 04-02-04 10:05:46.430
SSCOP State     Incoming Recovery Pending 04-02-04 10:05:46.430
SSCOP State     Data Transfer Ready 04-02-04 10:06:02.110
SSCF State      OOS Idle 04-02-04 10:06:02.120
SSCF State      OOS ODP 04-02-04 10:06:02.885
SSCF State      Alignment Idle 04-02-04 10:06:53.625
SSCF State      Alignment OCP 04-02-04 10:07:14.000
SSCF State      Alignment ODP 04-02-04 10:07:14.000
SSCF State      In Service/Data Transfer Ready 04-02-04 10:08:01.760
SSCF State      Proving Data Transfer Ready 04-02-04 10:08:01.760
SSCF State      Aligned/Ready Data Transfer Ready 04-02-04 10:04:23.000
MAAL State      OOS 04-02-04 10:04:23.000
MAAL State      Alignment 04-02-04 10:05:31.100
MAAL State      Proving 04-02-04 10:05:31.100
MAAL State      Aligned/Ready 04-02-04 10:05:31.105
MAAL State      In Service 04-02-04 10:05:31.105
SSCOP Receive   BGN 04-02-04 10:05:46.425
SSCOP Receive   BGAK 04-02-04 10:05:46.430
SSCOP Receive   END 04-02-04 10:05:46.430
SSCOP Receive   ENDAK 04-02-04 10:06:02.110
SSCOP Receive   RS 04-02-04 10:06:02.120
SSCOP Receive   RSAK 04-02-04 10:06:02.885
SSCOP Receive   BGREJ 04-02-04 10:06:53.625
SSCOP Receive   SD 04-02-04 10:07:14.000
SSCOP Transmit  ER 04-02-04 10:07:14.000
SSCOP Transmit  POLL 04-02-04 10:08:01.760
SSCOP Transmit  STAT 04-02-04 10:08:01.760
SSCOP Transmit  USTAT 04-02-04 10:04:23.000
SSCOP Transmit  UD 04-02-04 10:04:23.000
SSCOP Transmit  MD 04-02-04 10:05:31.100
SSCOP Transmit  ERAK 04-02-04 10:05:31.100
SSCF Receive   Out of Service 04-02-04 10:05:31.105
SSCF Receive   Processor Outage 04-02-04 10:05:31.105
SSCF Receive   In Service 04-02-04 10:05:46.425
SSCF Receive   Normal 04-02-04 10:05:46.430
SSCF Receive   Emergency 04-02-04 10:05:46.430
SSCF Transmit  Alignment Not Successful 04-02-04 10:06:02.110
SSCF Transmit  Mgmt Initiated 04-02-04 10:06:02.120
SSCF Transmit  Protocol Error 04-02-04 10:06:02.885
SSCF Transmit  Proving Not Successful 04-02-04 10:06:53.625
Special Event   LCD 04-02-04 10:05:46.425
Special Event   LCD Cleared 04-02-04 10:05:46.430
Special Event   LOF 04-02-04 10:05:46.430
Special Event   LOF Cleared 04-02-04 10:06:02.110
Special Event   LOS 04-02-04 10:06:02.120
Special Event   LOS Cleared 04-02-04 10:06:02.885

```

```
Special Event   Too Many Interrupts           04-02-04 10:06:53.625
```

```
Service Event                                     Timestamp
Timer_No_Credit expired                         04-02-04 05:40:10.160
ERM link failure                               04-02-04 10:02:02.125
Timer_No_Response expired                     04-02-04 10:15:02.125
C00 received                                  04-02-04 10:22:02.125
Stop Commanded                                04-02-04 10:32:02.125
LP0                                             04-02-04 10:42:02.125
RP0                                             04-02-04 10:43:02.125
Remote OOS                                     04-02-04 10:44:02.125
Remote PE                                     04-02-04 10:45:02.125
Remote Mgmt Initiated                         04-02-04 10:46:02.125
Failed SLT                                    04-02-04 10:47:02.125
LCD                                             04-02-04 10:48:02.125
LOS                                             04-02-04 10:49:02.125
LOF                                             04-02-04 10:52:02.125
Too many interrupts                           04-02-04 10:53:02.125
In Service                                    04-02-04 10:54:01.760
Command Completed.
```

```
;
```

rept-stat-slk:loc=1203:link=b:L2stats=brief

```
rlghncxa03w 04-02-23 13:06:25 EST EAGLE 31.3.0
SLK      LSN      CLLI      PST      SST      AST
1203,B   lsnsspn2  -----  IS-NR      Avail     ----
ALARM STATUS      = No Alarms
UNAVAIL REASON    = --
```

```
Event Type      Event                Timestamp
Transmit        SIOS                97-10-31 10:04:23.000
State           Out of Service       97-10-31 10:04:23.000
State           Initial Align      97-10-31 10:05:31.100
State           Idle                97-10-31 10:05:31.100
Transmit        SIO                 97-10-31 10:05:31.105
State           Not Aligned         97-10-31 10:05:31.105
State           T2 Expired          97-10-31 10:05:46.425
Command Completed.
```

```
;
```

The following example shows output for an E1 interface associated with a link:

rept-stat-slk:loc=1201:link=a

```
rlghncxa03w 04-02-23 13:06:25 EST EAGLE 31.3.0
SLK      LSN      CLLI      PST      SST      AST
1201,A   e5m6s4   -----  OOS-MT      Unavail     -----
ALARM STATUS      = No Alarms
UNAVAIL REASON    = --
E1 STATUS         = 1201, REPT-E1F:FAC-E1 Port 1 LOS failure
Command Completed.
```

```
;
```

The following example shows output for when the E1 interface is not associated with a link:

rept-stat-slk:loc=1201:link=a

```
rlghncxa03w 04-02-23 13:06:25 EST EAGLE 31.3.0
SLK      LSN      CLLI      PST      SST      AST
1201,A   e5m6s4   -----  OOS-MT      Unavail     -----
ALARM STATUS      = No Alarms
UNAVAIL REASON    = --
E1 status         = E1 association unknown
Command Completed.
```

```
;
```

The following example shows output for a T1 interface associated with a link:

rept-stat-slk:loc=1201:link=a

```

rlghncxa03w 04-02-23 13:06:25 EST EAGLE 31.3.0
SLK      LSN      CLLI      PST      SST      AST
1201,A   e5m6s4   -----  OOS-MT      Unavail  -----
ALARM STATUS      = No Alarms
UNAVAIL REASON    = --
T1 STATUS         = 1201, REPT-E1F:FAC-T1 Port 1 LOS failure
Command Completed.

```

;

The following example shows output for an E1 ATM card:

rept-stat-slk:loc=1101:link=a

```

rlghncxa03w 04-02-23 13:06:25 EST EAGLE 31.3.0
SLK      LSN      CLLI      PST      SST      AST
1101,A   atmitu1   -----  OOS-MT-DSBLD Manual  -----
ALARM STATUS      = ** 0236 REPT-LKF: not aligned
UNAVAIL REASON    = NA
Command Completed.

```

;

The following example shows output for an 8-point IPLIM card:

rept-stat-slk:loc=1301

```

rlghncxa03w 04-02-23 13:06:25 EST EAGLE 31.3.0
SLK      LSN      CLLI      PST      SST      AST
1301,A   lsnip     -----  OOS-MT-DSBLD Unavail  -----
1301,B   lsnip     -----  OOS-MT-DSBLD Unavail  -----
1301,A1  lsnip     -----  OOS-MT-DSBLD Unavail  -----
1301,B1  lsnip     -----  OOS-MT-DSBLD Unavail  -----
1301,A2  lsnip     -----  OOS-MT-DSBLD Unavail  -----
1301,B2  lsnip     -----  OOS-MT-DSBLD Unavail  -----
1301,A3  lsnip     -----  OOS-MT-DSBLD Unavail  -----
1301,B3  lsnip     -----  OOS-MT-DSBLD Unavail  -----

ALARM STATUS      = ** 0224 REPT-LKS: not aligned
UNAVAIL REASON    = NA
Command Completed.

```

;

Legend

SLK—The card location and the signaling link.

LSN—The name of the linkset that contains the signaling link.

CLLI—The CLLI code of the destination STP of the signaling link.

PST—The primary state of the signaling link. The possible values are described in "Possible Values for PST/SST/AST".

SST—The secondary state of the signaling link. The possible values are described in "Possible Values for PST/SST/AST".

AST—The associated state of the signaling link. The possible values are described in "Possible Values for PST/SST/AST".

ALARM STATUS—The trouble text alarm message that was generated for the specified signaling link.

UNAVAIL REASON—The reason that the signaling link is unavailable. More than one unavailable reason may be listed:

BSNR—The signaling link received 2 of 3 invalid BSNs.

CNGT—The signaling link has a remote congestion time-out.

COO—A changeover order was received.

FC—The signaling link is unavailable because of false congestion restart.

FE—The signaling link is in far end loopback mode.

FIBR—The signaling link received 2 of 3 invalid FIBs.

INTR—Too many link interrupts were received.

LB—The signaling link has been blocked locally.

LD—The signaling link received incomplete data.

LI—The signaling link has been inhibited locally.

NA—The signaling link is not aligned.

PF—The signaling link failed the proving period.

RB—The signaling link has been blocked remotely.

RD(xx.xxx)—The signaling link is unavailable because of a restart delay to prevent signaling link oscillation. The number in parentheses indicates the amount of time, in seconds, remaining in the restart delay period. The link is restarted automatically after this amount of time has elapsed.

RL—The signaling link is in remote near end loopback mode.

RMI—The signaling link has been inhibited remotely.

SIE—An unexpected SIE was received.

SIN—An unexpected SIN was received.

SIO—An unexpected SIO was received.

SIOS—An unexpected SIOS was received.

SLTF—Link test failed.

T1NR—The level-2 T1 (not ready) timer expired.

T1R—The level-2 T1 (ready) timer expired.

T2—The level-2 T2 timer expired.

T3—The level-2 T3 timer expired.

X25FL—An X25 link failed.

XDA—The signaling link did not receive an acknowledgment in time.

XER—The SUERM threshold was exceeded.—

---The card is ISOLATED or the links are available.

The following are reasons that the ATM high-speed signaling link is unavailable:

TNC—Timer No Credit expired - The remote node has held the node in a no-credit state for too long. The far end office should be contacted to determine the cause of the link congestion.

TNR—Timer No Response expired - The far end is taking too long to acknowledge the messages sent to it by the near end. The far end office should be contacted to determine the cause for the excessive delay in acknowledging PDUs.

LPO—Local Processor Outage - Indicates a spontaneous or management-initiated processor outage. The user needs to determine whether the outage was spontaneous or management-initiated on the near end.

RPO—Remote Processor Outage - The far end has sent PDUs causing processor outage. The far end office should be contacted to determine the reason for the processor outage.

ROOS—Remote Out of Service - The far end has sent PDUs causing a link to become out of service. The far end office should be contacted to determine the reason for taking the link out of service.

RPE—Remote Protocol Error - The far end has sent PDUs declaring a protocol error. The far end office should be contacted to determine the details about the protocol error.

RMIR—Remote Management Initiated Release - The far end has sent PDUs releasing the link. The far end office should be contacted to determine the reason for releasing the link.

LCD—Level 1 facility outage: Loss of Cell Delineation

LOF—Level 1 facility outage: Loss of Frame

LOS—Level 1 facility outage: Loss of Signal

EVENT TYPE—The type of event being logged:

RECEIVE—When a signal unit is received.

TRANSMIT—When a signal unit is transmitted.

STATE—When an internal SS7 Level 2 state changes or a special event occurs that would either end alignment or cause the link to fail.

EVENT—The specific event being logged: (1) if a signal unit is being received or transmitted, the specific signal unit is displayed; (2) if the event being logged is a state change, the new state is displayed; (3) If neither (1) nor (2) is displayed, the link or alignment failure reason is displayed.

SERVICE EVENT—The service activity of the link; for example, In Service. Anything other than In Service is a description of a link failure.

TIMESTAMP—The time event processed by the system as follows:

YY-MM-DD HH:MM:SS.TTT, where

YY—The last 2 digits of the year (range 00–99)

MM—The month (range 01–12)

DD—The day of month (range 00–31)

HH—The hour of day (range 00–59)

MM—The minute of the hour (range 00–59)

ss—The seconds of the minute (range 00–59)

TTT—Milliseconds of the second (range 000–995 in increments of 5)

E1 STATUS—The status of the E1 interface associated with the link; the status includes the card location (**e1loc**) and the UAM text. If the E1 association is not provisioned, “E1 association unknown” is displayed. If the card is not type **lime1** or **limch**, no E1 output is displayed.

T1 STATUS—The status of the T1 interface associated with the link; the status includes the card location (**e1loc**) and the UAM text. If the card is not type **limt1** or **limch**, no T1 output is displayed.

rept-stat-sys

Report Status System

Use this command to display a summary report of the status of the main system entities. Use this display to determine where the troubles are in the system. The display shows the number of these items that are in service (IS-NR) and how many are in another state (IS-ANR, OOS-MT, OOS-MT-DSBLD).

NOTE: VSCCP cards are included in SCCP card status.

Keyword: rept-stat-sys

Related Commands: rept-stat-alm, rept-stat-applsock, rept-stat-card, rept-stat-clk, rept-stat-cluster, rept-stat-dstn, rept-stat-imt, rept-stat-ls, rept-stat-meas, rept-stat-mps, rept-stat-seas, rept-stat-slk, rept-stat-trbl, rept-stat-xlist

Command Class: System Maintenance

Parameters

This command has no parameters.

Example

rept-stat-sys

Dependencies

No other **rept-stat-xxx** command can be in progress when this command is entered.

Notes

None

Output

The following example shows the output when no features are turned on in the system and only the cards in locations 1109-1110 and 1113-1118 are installed.

rept-stat-sys

```
tekelecstp 06-05-27 15:30:42 EST EAGLE 35.0.0
MAINTENANCE STATUS REPORT
Maintenance Baseline established.
Routing Baseline established.
SCCP Baseline established.
ALARMS:      CRIT=      2    MAJR=      2    MINR=      0    INH=      0
OAM 1113      IS-NR      Active      INH=      0
OAM 1115      IS-NR      Standby      INH=      0
LIM      CARD IS-NR=      0    Other=      0    INH=      0
X25      CARD IS-NR=      0    Other=      0    INH=      0
SCCP      CARD IS-NR=      0    Other=      0    INH=      0
GLS      CARD IS-NR=      0    Other=      0    INH=      0
SLAN      CARD IS-NR=      0    Other=      0    INH=      0
VXWLAN      CARD IS-NR=      0    Other=      0    INH=      0
EMDC      CARD IS-NR=      0    Other=      0    INH=      0
SS7IPGW      CARD IS-NR=      0    Other=      0    INH=      0
IPGWI      CARD IS-NR=      0    Other=      0    INH=      0
IPLIM      CARD IS-NR=      0    Other=      0    INH=      0
IPLIMI      CARD IS-NR=      0    Other=      0    INH=      0
HMUX      CARD IS-NR=      0    Other=      0    INH=      0
MCPM      CARD IS-NR=      0    Other=      0    INH=      0
EROUTE      CARD IS-NR=      0    Other=      0    INH=      0
CLOCK      IS-NR=      2    Other=      0    INH=      0
IMT      IS-NR=      2    Other=      0
SLK      IS-NR=      0    Other=      0    INH=      0
DLK      IS-NR=      0    Other=      0    INH=      0
LINK SET      IS-NR=      0    Other=      0    INH=      0
NDC IP LK      IS-NR=      0    Other=      0    INH=      0
DSM IP LK      IS-NR=      0    Other=      0    INH=      0
MCPM IP LK      IS-NR=      0    Other=      0    INH=      0
APPLSOCK      IS-NR=      0    Other=      0    INH=      0
SCTP ASSOC      IS-NR=      0    Other=      0    INH=      0
APPL SERVER      IS-NR=      0    Other=      0    INH=      0
SS7 DPC      IS-NR=      0    Other=      0    INH=      0
X25 DPC      IS-NR=      0    Other=      0    INH=      0
CLUST DPC      IS-NR=      0    Other=      0    INH=      0
RTX      IS-NR=      0    Other=      0    INH=      0
XLIST DPC      IS-NR=      0    Other=      0
DPC SS      Actv =      0    Other=      0
SEAS SS      IS-NR=      0    Other=      2
SEAS X25      IS-NR=      0    Other=      2    INH=      0
LSMS SS      IS-NR=      0    Other=      2
LSMS Conn      IS-NR=      0    Other=      2    INH=      0
TERMINAL      IS-NR=     16    Other=      0    INH=      0
MPS      IS-NR=      0    Other=      0
;
```

The following example shows the output when various features are turned on in the system. (Your output will not show all of these entries; some features are mutually exclusive in the system.)

Some entries appear as follows:

- When the Measurements Platform feature is not turned on and no MCPM cards are in the IS-NR state in the system, the MCPM and MCPM IP LK values are zero and the MEAS SS entry does not appear.

- When one or more MCPM cards have been installed and allowed, the MCPM CARD entry shows the number of MCPM cards that are in each state.
- When the Measurements Platform feature is turned on and the Measurements Platform collection option is enabled, the MEAS SS entry appears.
- When the Measurements Platform collection function has been enabled (**chg-measopts=platformenable=on**), the MCPM IP LK entry shows the number of links that are functioning for the MCPM cards, and the MEAS SS entry appears.
- When the MTP Origin Based Routing (MOBR) feature is not turned on, and/or no exception routes have been provisioned, the RTX value is zero.
- When the OA&M IP Security Enhancement feature is turned on, the SECURITY SS entry appears.
- When the Equipment Identity Register (EIR) feature is turned on, the EIR SS entry appears.

rept-stat-sys

rlghncxa03w 05-01-27 16:53:22 EST EAGLE5 33.0.0

MAINTENANCE STATUS REPORT

Maintenance Baseline established.

Routing Baseline established.

SCCP Baseline established.

ALARMS:	CRIT=	9	MAJR=	10	MINR=	3	INH=	2
OAM 1113	IS-NR		Active				INH=	0
OAM 1115	IS-NR		Standby				INH=	0
LIM	CARD IS-NR=	3	Other=		0		INH=	0
X25	CARD IS-NR=	0	Other=		0		INH=	0
SCCP	CARD IS-NR=	3	Other=		0		INH=	0
GLS	CARD IS-NR=	0	Other=		0		INH=	0
SLAN	CARD IS-NR=	0	Other=		0		INH=	0
VXWLAN	CARD IS-NR=	0	Other=		0		INH=	0
EMDC	CARD IS-NR=	0	Other=		0		INH=	0
SS7IPGW	CARD IS-NR=	0	Other=		0		INH=	0
IPGWI	CARD IS-NR=	0	Other=		0		INH=	0
IPLIM	CARD IS-NR=	0	Other=		0		INH=	0
IPLIMI	CARD IS-NR=	0	Other=		0		INH=	0
HMUX	CARD IS-NR=	0	Other=		0		INH=	0
HIPR	IS-NR=	2	Other=		0		INH=	0
IMT	IS-NR=	2	Other=		0			
SLK	IS-NR=	0	Other=		6		INH=	0
DLK	IS-NR=	0	Other=		0		INH=	0
LINK SET	IS-NR=	0	Other=		4		INH=	0
NDC IP LK	IS-NR=	4	Other=		0		INH=	0
DSM IP LK	IS-NR=	0	Other=		0		INH=	0
MCPM	CARD IS-NR=	0	Other=		0		INH=	0
EROUTE	CARD IS-NR=	0	Other=		0		INH=	0
CLOCK	IS-NR=	2	Other=		0		INH=	0
HS CLOCK	IS-NR=	2	Other=		0		INH=	0
MCPM IP LK	IS-NR=	2	Other=		0		INH=	0
APPLSOCK	IS-NR=	0	Other=		0		INH=	0
SCTP ASSOC	IS-NR=	0	Other=		0		INH=	0
APPL SERVER	IS-NR=	0	Other=		0		INH=	0
SS7 DPC	IS-NR=	0	Other=		6		INH=	0
X25 DPC	IS-NR=	0	Other=		0		INH=	0
CLUST DPC	IS-NR=	0	Other=		1		INH=	0
RTX	IS-NR=	2	Other=		1		INH=	0
XLIST DPC	IS-NR=	0	Other=		0			
DPC SS	Actv =	0	Other=		0			
SEAS SS	IS-NR=	0	Other=		2			
SEAS X25	IS-NR=	0	Other=		2		INH=	0
LSMS SS	IS-NR=	0	Other=		2			
LSMS Conn	IS-NR=	0	Other=		2		INH=	0

```

      TERMINAL      IS-NR=  2   Other=      14      INH=      0
      MPS           IS-NR=  2   Other=       0
      SECURITY SS   IS-NR=  1   Other=       0
      EIR SS        IS-NR=  1   Other=       0
;

```

Legend

INH—The number of devices within each device type that have their alarms inhibited.

ALARMS—The number of critical (**CRIT**), major (**MAJR**), and minor (**MINR**) alarms on the system when this command was executed and the count of alarm inhibited (**INH**) devices for cards, links, linksets, terminals, and SEAS X.25 links and terminals.

OAM—The status of each of the cards that are running the OAM (1113 and 1115).

LIM CARD—The status of the LIM cards.

X25 CARD—The status of the SS7GX25 cards.

SCCP CARD—The status of the SCCP subsystem cards. VSCCP cards are included in the SCCP card status.

GLS CARD—The status of the GLS subsystem cards.

SLAN CARD—The status of the STPLAN subsystem cards.

VXWSLAN CARD—The status of the VXW STPLAN subsystem cards.

EMDC CARD—The status of the EMDC cards.

SS7IPGW CARD—The status of the SS7IPGW cards.

IPGWI CARD—The status of the IPGWI cards.

IPLIM CARD—The status of the IPLIM cards.

IPLIMI CARD—The status of the IPLIMI cards.

HMUX CARD—The status of the HMUX cards.

HIPR CARD—The status of the HIPR cards.

MCPM CARD—The status of the MCPM cards.

EROUTE CARD—The status of the EROUTE cards.

CLOCK—The status of the system clocks.

HS CLOCK—The status of the high-speed clocks.

IMT—The status of the IMT system.

SLK—The status of the SS7, IPGWI, and X.25 signaling links in the system.

DLK—The status of the TCP/IP data links in the system.

LINK SET—The status of the linksets in the system.

NDC IP LK—The status of the NDC IP linksets.

DSM IP LK—The status of the DSM IP linksets.

MCPM IP LK—The status of the MCPM IP links.

APPLSOCK—The status of the application sockets.

SCTP ASSOC—The status of the SCTP associations.

APPL SERVER—The status of the Application Servers.

SS7 DPC—Summary information only for provisioned DPCs that are not in clusters.

X25 DPC—The status of the destination point codes in the X.25 domain.

CLUST DPC—Summary information for provisioned cluster DPCs only.

RTX--Summary information for provisioned exception routes only.

XLIST DPC—Summary information for X-LIST DPC entries only.

DPC SS—Summary information for the DPC subsystem.

SCCP SS—The status of the SCCP subsystem.

XLIST SS—Summary information for SEAS Subsystem X.25 Links to SEAC.

SEAS SS—The status of the SEAS subsystem.

LSMS SS—The status of the LSMS subsystem.

MEAS SS—The status of the Measurements subsystem (for Measurements Platform).

SEAS X25—The status of the SEAS X.25 signaling links.

LSMS Conn—Summary information on the communication link between the LSMS and the EMS.

NDC SS—The status of the NDC subsystem.

NDC Q3—Summary information on Q.3 association status.

MPS—Summary information on the MPS.

TERMINAL—The status of the terminals.

SECURITY SS—EAGLE OA&M IP Security subsystem status.

EIR SS—Equipment Identity Register subsystem status.

rept-stat-t1

Report Status T1

Use this command to display the T1 port status and signaling link status for cards with provisioned T1 ports.

Keyword: **rept-stat-t1**

Related Commands:

Command Class: System Maintenance

Parameters

:loc= (optional)

Card address. The unique identifier of a specific **limt1** card located in the STP.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

Default: Information for all **limt1** cards is reported.

:t1port= (optional)

The T1 port number. When this parameter is specified, information is displayed only for the specified T1 port on the card in the specified card location.

Range: **1-8**

Ports 3 through 8 can be specified only for HC-MIM cards.

Example

rept-stat-t1

rept-stat-t1:loc=1203

rept-stat-t1:loc=1203:t1port=1

Dependencies

No other **rept-stat-xxx** command can be in progress when this command is entered.

The **loc** parameter must be specified when the **t1port** parameter is specified.

The active TDM location cannot be specified in the **loc** parameter.

Card locations 1117 and 1118 and the HMUX or HIPR card locations (xy09 and xy10 where x is the frame and y is the shelf) cannot be specified in the **loc** parameter.

Notes

Specifying the command without any parameters displays T1 port status for all cards with provisioned T1 ports.

If the **loc** parameter is specified, status is displayed for all T1 ports provisioned on the card in the specified location.

If the **loc** and **t1port** parameters are specified, the T1 port status summary is displayed for all T1 ports provisioned on the card in the specified location, followed by the status of all signaling links assigned to the specified T1 port on the card.

Output

When no parameters are specified in the command, T1 port status is displayed for all cards with provisioned T1 ports. Ports 3 through 8 are on HC-MIM cards only.

rept-stat-t1

```
rlghncxa03w 05-01-04 07:01:08 EST EAGLE5 33.0.0
LOC   T1PORT   PST           SST           AST
1203  1         IS-NR         Avail        BRGD MSTR
1203  2         IS-NR         Avail        BRGD SLAV
1203  3         IS-NR         Avail        -----
1203  7         OOS-MT        Unavail      -----
1207  1         IS-NR         Avail        -----
1207  2         IS-NR         Avail        -----
Command Completed.
```

;

When the **loc** parameter is specified, status is displayed for all T1 ports provisioned on the card in the specified location.

rept-stat-t1: loc=1203

```
rlghncxa03w 05-01-04 07:01:08 EST EAGLE5 33.0.0
LOC   T1PORT   PST           SST           AST
1203  1         IS-NR         Avail        BRGD MSTR
1203  2         IS-NR         Avail        BRGD SLAV
1203  3         IS-NR         Avail        -----
1203  7         OOS-MT        Unavail      -----
Command Completed.
```

;

When the **loc** and **t1port** parameters are specified, the T1 port status summary is displayed for all T1 ports provisioned on the card in the specified location, followed by the status of all signaling links assigned to the specified T1 port on the card.

rept-stat-t1: loc=1203: t1port=1

```
rlghncxa03w 05-01-04 07:01:08 EST EAGLE5 33.0.0
LOC   T1PORT   PST           SST           AST
1203  1         IS-NR         Avail        BRGD MSTR
ALARM STATUS      = No Alarms.
UNAVAIL REASON    = --
SLK   TS   PST           SST           AST
A      1   IS-NR         Avail        ---
A1     2   IS-NR         Avail        ---
Command Completed.
```

;

rept-stat-t1: loc=1203: e1port=2

```
rlghncxa03w 05-01-04 07:01:08 EST EAGLE5 33.0.0
LOC   T1PORT   PST           SST           AST
1203  2         IS-NR         Avail        BRGD SLAV
ALARM STATUS      = No Alarms.
UNAVAIL REASON    = --
Command Completed.
```

;

Legend

LOC—Card location

T1PORT—Number of the T1 port provisioned on the card in the specified location.

PST—The primary state of the card. The possible values are described in "Possible Values for PST/SST/AST".

SST—The secondary state of the card. The possible values are described in "Possible Values for PST/SST/AST".

AST—The associated state of the card. The possible values are described in "Possible Values for PST/SST/AST". The values **PARENT** and **PAIRED** refer to odd and even adjacent ports on the card that are provisioned in channel bridging mode.

ALARM STATUS—Either "No Alarms" or current alarm number and text

UNAVAIL REASON—Reason for the T1 port being unavailable

SLK—Signaling link assigned to the T1 port

TS—Timeslot assigned to the signaling link

PST—The primary state of the signaling link. The possible values are described in "Possible Values for PST/SST/AST".

SST—The secondary state of the signaling link. The possible values are described in "Possible Values for PST/SST/AST".

AST—The associated state of the signaling link. The possible values are described in "Possible Values for PST/SST/AST".

rept-stat-trbl

Report Status Trouble

Use this command to display a summary report of all the device trouble notifications that are logged currently in the OAM's RAM storage area.

Keyword: **rept-stat-trbl**

Related Commands: **act-alm-trns**, **dact-alm-trns**, **rept-stat-alm**, **rept-stat-clk**, **rls-alm**, **rtrv-obit**, **rtrv-trbl**

Command Class: System Maintenance

Parameters

:display= (optional)

Display type of alarms to be reported.

Range: **act**, **all**, **inhb**, **timestamp**

act— Display only active alarms

all— Display all alarms with no timestamps

inhb— Display only inhibited alarms

timestamp— Display all alarms with the date and time when the alarm was logged. Timestamps appear in the output only when the **display=timestamp** parameter is specified.

Default: **all**

:level= (optional)

The alarm level of the alarms to be displayed

Range: **crit**, **majr**, **minor**

Default: All alarms are displayed

Example

```
rept-stat-trbl
```

```
rept-stat-trbl:level=majr
```

```
rept-stat-trbl:display=inhb
```

```
rept-stat-trbl:display=timestamp
```


Dependencies

No other **rept-stat-xxx** command can be in progress when this command is entered.

Notes

None

Output

The following example lists all devices that could appear. Your output will not be exactly the same; all devices and alarms cannot coexist in the system.

rept-stat-trbl

```

rlghncxa03w 02-03-07 09:50:17 EST EAGLE5 34.0.0
SEQN UAM AL DEVICE ELEMENT TROUBLE TEXT
0002.0143 * CARD 1113 OAM System release GPL(s) not approved
0003.0313 *C DPC s-010-010-003 DPC is prohibited
0004.0313 *C DPC 010-010-004 DPC is prohibited
0005.0313 *C DPC ps-010-010-005 DPC is prohibited
0006.0313 *C DPC s-252-010-003 DPC is prohibited
0008.0313 *C DPC 252-010-004 DPC is prohibited
0009.0313 *C DPC 252-011-* DPC is prohibited
0010.0318 ** LSN lsn4 REPT-LKST0: link set prohibited
0011.0176 * SECULOG 1116 Stdbby security log - upload required
0019.0236 *C T1PORT 1301,1 REPT-T1F:FAC-T1 LOS failure
0021.0318 ** LSN lsn1 REPT-LKST0: link set prohibited
0022.0318 ** LSN lsn2 REPT-LKST0: link set prohibited
0023.0318 ** LSN lsn3 REPT-LKST0: link set prohibited
0024.0236 ** SLK 1315,A ls11234567 REPT-LKF: not aligned
0025.0236 ** SLK 1316,A ls11345678 REPT-LKF: not aligned
0028.0313 *C DPC 252-010-001 DPC is prohibited
0029.0308 *C SYSTEM Node isolated due to SLK failures
0036.0455 *C EIR SYSTEM EIR Subsystem is not available
3102.0435 *C LNP SYSTEM LNP Subsystem is disabled
3536.0084 ** EMAP B 7100 IP Connection Unavailable
3537.0084 ** DLK 1215, A MCP IP Connection Unavailable
3538.0179 * EMAP NDC Q.3 association is Unavailable
0002.0143 * CARD 1113 OAM System release GPL(s) not approved
0003.0313 *C DPC s-010-010-003 DPC is prohibited
0004.0313 *C DPC 010-010-004 DPC is prohibited
0005.0313 *C DPC ps-010-010-005 DPC is prohibited
0006.0313 *C DPC s-252-010-003 DPC is prohibited
0008.0313 *C DPC 252-010-004 DPC is prohibited
0009.0313 *C DPC 252-011-* DPC is prohibited
0010.0318 ** LSN lsn4 REPT-LKST0: link set prohibited
0011.0176 * SECULOG 1116 Stdbby security log - upload required
0019.0236 *C T1PORT 1301,1 REPT-T1F:FAC-T1 LOS failure
0021.0318 ** LSN lsn1 REPT-LKST0: link set prohibited
0022.0318 ** LSN lsn2 REPT-LKST0: link set prohibited
0023.0318 ** LSN lsn3 REPT-LKST0: link set prohibited
0024.0236 ** SLK 1315,A ls11234567 REPT-LKF: not aligned
0025.0236 ** SLK 1316,A ls11345678 REPT-LKF: not aligned
0028.0313 *C DPC 252-010-001 DPC is prohibited
0029.0308 *C SYSTEM Node isolated due to SLK failures
0036.0455 *C EIR SYSTEM EIR Subsystem is not available
3102.0435 *C LNP SYSTEM LNP Subsystem is disabled
3536.0084 ** EMAP B 7100 IP Connection Unavailable
3537.0084 ** DLK 1215, A MCP IP Connection Unavailable
3538.0179 * EMAP NDC Q.3 association is Unavailable
3539.0181 *C NDC SYSTEM NDC Subsystem is not available
3540.0203 ** SLK 1201,A lsn1 REPT-LKF: lost data
3541.0203 ** SLK 1201,B lsn4 REPT-LKF: lost data
3542.0203 ** SLK 1202,A lsn2 REPT-LKF: lost data
3543.0203 ** SLK 1202,B lsn4 REPT-LKF: lost data
3544.0202 ** SLK 1203,A lsn3 REPT-LKF: HWP - too many link
interrupts
3545.0202 ** SLK 1203,B lsn4 REPT-LKF: HWP - too many link
interrupts
2353.0022 * CARD 1107 MCP Clock B for card failed, Clock A normal
3587.0048 * TERMINAL 1 Terminal failed
0007.0110 * IMT SYSTEM Failure detected on one IMT bus

```

```

2343.0002 * GPL SYSTEM BPDCM      Card is not running approved GPL
4321.0321 * XLIST                  X-LIST occupancy threshold exceeded
0046.0344 * SEAS X25 Link A1       SEAS PVC unavailable
0045.0348 * SEAS SYSTEM           SEAS is at min service limit
0011.0176 * SECULOG 1116          Stdby security log -- upload required
3538.0179 * EMAP                  NDC Q.3 association is Unavailable
4121.0398 * INP SYSTEM            Local Subsystem normal,card(s) abnormal
2354.0516 * MEAS SYSTEM           Degraded Mode - 1 card failed
3589.0013 ** CARD 1103 SS7ANSI     Card is isolated from the system
2358.0013 ** CARD 1111 MCP         Card is isolated from the system
3590.0013 ** CARD 1115 OAM         Card is isolated from the system
3590.0514 ** CARD 1115 EOAM        Standby MASP is inhibited
0006.0108 ** IMT BUS A            Major IMT failure detected
                                Card 1105, 1113, 1115
0012.0390 ** CARD 1109 HMUX        Illegal Address Error
0046.0155 * DLK 1104,A1           STPLAN connection unavailable
3591.0208 ** SLK 1101,A    ls1     REPT-LKF: APF - lvl-2 T2 expired
3592.0208 ** SLK 1101,B    ls2     REPT-LKF: APF - lvl-2 T2 expired
3593.0202 ** SLK 1102,B2  lsname489+ REPT-LKF: HWP -too many link interrupts
3594.0236 ** SLK 1103,A    ls3     REPT-LKF: not aligned
3595.0236 ** SLK 1103,B    ls4     REPT-LKF: not aligned
3596.0084 ** DLK 1111,A    MCP      IP Connection Unavailable
0024.0236 ** SLK 1315,A    ls11234567 REPT-LKF: not aligned
0025.0236 ** SLK 1316,A    ls11345678 REPT-LKF: not aligned
0943.0318 ** LSN ls1             REPT-LKST0: link set prohibited
0945.0318 ** LSN ls2             REPT-LKST0: link set prohibited
0948.0318 ** LSN ls4             REPT-LKST0: link set prohibited
1234.0082 ** FUSE PANEL 11xx      Alarm in Fuse Panel
0012.0341 ** OAP                A    OAP unavailable
0134.0084 ** IP7 LONGSOCKETNAME1  IP Connection Unavailable
3537.0084 ** DLK 1215,A    MCP      IP Connection Unavailable
3537.0084 ** DSM 1315,A              IP Connection Unavailable
3536.0084 ** EMAP B        7100     IP Connection Unavailable
0133.0277 ** IP7 as1              AS Unavailable
0003.0313 *C DPC    s-010-010-003   DPC is prohibited
0004.0313 *C DPC      010-010-004   DPC is prohibited
0005.0313 *C DPC ps-010-010-005     DPC is prohibited
0028.0313 *C DPC      252-010-001   DPC is prohibited
0006.0313 *C DPC    s-252-010-003   DPC is prohibited
0008.0313 *C DPC      252-010-004   DPC is prohibited
0009.0313 *C DPC      252-011-*     DPC is prohibited
2120.0058 *C CDT    1               Critical customer trouble detected
0029.0308 *C SYSTEM              Node isolated due to SLK failures
0040.0128 *C CLOCK SYSTEM        All clocks have failed
0050 1114 * HS CLOCK SYSTEM       Clock selection mismatch
2109.0331 *C SCCP SYSTEM         SCCP is not available
2110.0292 *C GLS SYSTEM          GLS is not available
1234.0153 *C SLAN SYSTEM         STPLAN not available
0009.0041 *C LSMS Connection  A1    LNP DB Maintenance Required
0056.0356 *C LSMS SYSTEM         LSMS unavailable
0041.0197 *C CLOCK SYSTEM        All High Speed Clocks have failed
0056.0356 *C LSMS SYSTEM         LSMS unavailable
0041.0197 *C CLOCK SYSTEM        All High Speed Clocks have failed
3102.0435 *C LNP SYSTEM          LNP Subsystem is disabled
3539.0181 *C NDC SYSTEM          NDC Subsystem is not available
0036.0455 *C EIR SYSTEM          EIR Subsystem is not available
0019.0236 *C T1PORT 1301,1       REPT-T1F:FAC-T1  LOS failure
4521.0370 *C MPS A               Critical Platform Failure(s)
0045.0469 *C EROUTE SYSTEM       All STC cards Unavailable
5648.0382 ** E1PORT 1201,2       REPT-E1F:FAC-E1  LOF failure
0047.0392 ** SECURITY SYSTEM 1211 OA&M IP Security feature status is OFF
0036.0455 *C EIR SYSTEM          EIR Subsystem is not available
1235 0114 ** IP TPS SYSTEM       System IP TPS threshold exceeded
Command Completed.

```

;

rept-stat-trbl:display=act:level=majr

```

rlghncxa03w 02-03-07 09:50:17 EST EAGLE 30.0.0
Searching devices for alarms...
;

rlghncxa03w 02-03-07 09:50:17 EST EAGLE 30.0.0
SEQN UAM AL DEVICE ELEMENT TROUBLE TEXT
3540.0203 ** SLK 1201,A lsn1 REPT-LKF: lost data
3541.0203 ** SLK 1201,B lsn4 REPT-LKF: lost data
3542.0203 ** SLK 1202,A lsn2 REPT-LKF: lost data
3543.0203 ** SLK 1202,B lsn4 REPT-LKF: lost data
3544.0202 ** SLK 1203,A lsn3 REPT-LKF: HWP -too many link interrupts
3545.0202 ** SLK 1203,A1 lsn4 REPT-LKF: HWP -too many link interrupts
3545.0202 ** SLK 1203,B2 lsn4 REPT-LKF: HWP -too many link interrupts
0022.0318 ** LSN lsn2 REPT-LKST0: link set prohibited
0023.0318 ** LSN lsn3 REPT-LKST0: link set prohibited
0010.0318 ** LSN lsn4 REPT-LKST0: link set prohibited
Command Completed.
;

```

rept-stat-trbl:display=inhb:level=majr

```

rlghncxa03w 02-03-07 09:50:17 EST EAGLE 30.0.0
Searching devices for alarms...
;

rlghncxa03w 02-03-07 09:50:17 EST EAGLE 30.0.0
SEQN UAM AL DEVICE ELEMENT TROUBLE TEXT
0021.0318I** LSN lsn1 REPT-LKST0: link set prohibited
Command Completed.
;

```

The following example shows output when the **display=timestamp** parameter is specified.

rept-stat-trbl:display=timestamp

```

rlghncxa03w 04-04-07 09:50:17 EST EAGLE 31.6.0
Searching devices for alarms...
;

tekelecstp 04-04-07 09:50:17 EST EAGLE 31.6.0
SEQN UAM AL DEVICE ELEMENT TROUBLE TEXT
0003.0048 * TERMINAL 1 Terminal failed
04-1-27 15:19:25
0004.0048 * TERMINAL 2 Terminal failed
04-1-27 15:19:25
0005.0048 * TERMINAL 4 Terminal failed
04-1-27 15:19:25
0006.0002 * GPL SYSTEM EOAM Card is not running approved GPL
04-1-27 15:19:25
0007.0176 * SECULOG 1116 Stdby security log -- upload required
04-1-27 15:19:25
0008.0013 ** CARD 1103 VSCCP Card is isolated from the system
04-15-27 15:19:25
0009.0438 *C SYSTEM Degraded Mode, Invalid OAM HW config
04-1-27 15:19:27
0010.0331 *C SCCP SYSTEM SCCP is not available
04-1-27 15:19:25
Command Completed.
;

```

Legend

In the AL column:

*—Minor Alarm

**—Major Alarm

*C—Critical Alarm

I—Inhibited Alarm

rept-stat-trm

Report Status Terminal

Use this command to display the status of the terminal ports. The device primary, secondary, and associated state information is displayed along with the terminal identification number.

Keyword: `rept-stat-trm`

Related Commands: `act-echo`, `alw-trm`, `chg-trm`, `dact-echo`, `inh-trm`, `rmv-trm`, `rst-trm`, `rtrv-trm`

Command Class: System Maintenance

Parameters

:trm= (optional)

The terminal ID. The ID of the terminal port that is to be reported.

Range: 1-40

Default: Display status of all terminal ports

Example

`rept-stat-trm`

`rept-stat-trm:trm=5`

Dependencies

No other `rept-stat-xxx` command can be in progress when this command is entered.

Notes

None

Output

The following example shows output when the IP User Interface is not turned on:

rept-stat-trm

```
tekelecstp 03-03-31 13:02:16 EST EAGLE 30.0.0
TRM  PST      SST      AST
1    IS-NR     Active    -----
2    IS-NR     Active    -----
3    IS-NR     Active    -----
4    IS-NR     Active    -----
5    IS-NR     Active    -----
6    IS-NR     Active    -----
7    IS-NR     Active    -----
8    IS-NR     Active    -----
9    IS-NR     Active    -----
10   IS-NR     Active    -----
11   IS-NR     Active    -----
12   IS-NR     Active    -----
13   IS-NR     Active    -----
14   IS-NR     Active    -----
15   IS-NR     Active    -----
16   IS-NR     Active    -----
Command Completed.
```

;

The following example shows output when the IP User Interface is turned on and 3 IPSM cards are in the system:

rept-stat-trm

```
rlghncxa03w 04-01-07 09:50:17 EST EAGLE 31.3.0
TRM  PST      SST      AST
1    IS-NR     Active    -----
2    IS-NR     Active    -----
3    IS-NR     Active    ALMINH
4    IS-NR     Active    -----
5    OOS-MT-DSBLD Manual    -----
6    IS-NR     Active    -----
7    IS-NR     Active    -----
8    IS-NR     Active    -----
9    IS-NR     Active    -----
10   IS-NR     Active    -----
11   IS-NR     Active    ALMINH
12   IS-NR     Active    -----
13   IS-NR     Active    -----
14   OOS-MT     Fault     -----
15   IS-NR     Active    -----
16   IS-NR     Active    -----
17   IS-NR     Active    -----
18   IS-NR     Active    -----
19   IS-NR     Active    -----
20   OOS-MT-DSBLD Manual    -----
21   IS-NR     Idle       -----
22   IS-NR     Idle       -----
23   IS-NR     Idle       -----
24   IS-NR     Idle       -----
25   IS-NR     Active    -----
26   IS-NR     Active    -----
27   IS-NR     Active    -----
28   IS-NR     Active    -----
29   IS-NR     Active    -----
30   IS-NR     Active    -----
31   IS-NR     Active    -----
32   IS-NR     Active    -----
```

```

33    IS-NR      Active      -----
34    IS-NR      Active      -----
35    IS-NR      Active      -----
36    IS-NR      Active      -----
37    IS-NR      Active      -----
38    IS-NR      Active      -----
39    IS-NR      Active      -----
40    IS-NR      Active      -----
Command Completed.
;

rept-stat-trm:trm=5
rlghncxa03w 04-01-07 09:50:17 EST  EAGLE 31.3.0
TRM  PST          SST          AST
5    IS-NR      Active      -----
Command Completed.
;
```

Legend

TRM—The ID of the terminal port.

PST—The primary state of the terminal ports. The possible values are described in "Possible Values for PST/SST/AST".

SST—The secondary state of the terminal ports. The possible values are described in "Possible Values for PST/SST/AST".

AST—The associated state of the terminal ports. The possible values are described in "Possible Values for PST/SST/AST".

rept-stat-tstslk**Report Signaling Link Test Status**

Use this command to generate a report of the status of the MTP signaling links currently under test.

Keyword: **rept-stat-tstslk**

Related Commands: **tst-slks**

Command Class: Link Maintenance

Parameters

:link= (optional)

SS7 signaling links. The SS7 signaling link that is being tested.

Synonym: **port**

Range: **a, b, a1-a31, b1-b31**

Not all card types support all **link** parameter values.

See Table A-1 for valid **link** parameter range values for each type of card that can have assigned signaling link ports.

:loc= (optional)

The card location as stenciled on the shelf of the system.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

:loopback= (optional)

Loopback test type.

Range: **sltc, lxvr, oam, line, payload**

Example

```
rept-stat-tstslk
rept-stat-tstslk:loc=1201
rept-stat-tstslk:loc=1203:link=a
rept-stat-tstslk:loopback=lxvr
```

Dependencies

The card location specified in the **loc** parameter must be equipped.

The signaling link specified in the **link** parameter must be equipped.

If the **link** parameter is specified, the **loc** parameter must be specified.

The signaling link specified in the **link** parameter must be an SS7 signaling link.

This command cannot be entered for cards with **ss7ipgw** signaling links.

This command cannot be entered for cards with **ipgwi** signaling links.

The card location specified in the **loc** parameter cannot be reserved by the system.

This command cannot be entered during upgrade.

Notes

None

Output

If no parameters are specified, all links in test are displayed.

If only the **loc** parameter is specified, all links in test on the specified card are displayed.

If the **loc** and **link** parameters are specified, the specified link on the specified card is displayed.

If the **loopback** parameter is specified, all links in the specified type of loopback test are displayed.

rept-stat-tstslk

```
tekelecstp 04-01-07 10:05:28 EST EAGLE 31.3.0
SLK      LOOPBACK    MAX-TIME    TEST-TIME
1102,A1   SLTC         01:00:00    00:04:01
1201,A    OAM          02:00:00    01:04:11
1203,A    LXVR         00:50:00    00:22:21
1203,B    LXVR         24:00:00    20:04:01
1208,A    PAYLOAD      01:10:00    01:05:22
1211,A    LINE         21:30:00    00:14:01
;
```

Legend

SLK—Card and signaling link that are being tested.

LOOPBACK—Type of loopback test being run.

MAX-TIME—Maximum length of time for the test to run, as specified in the **tst-slk** command **time** parameter.

TEST-TIME—The length of time that the test has been running when this command was entered.

rept-stat-user**Report Status User**

Use this command to show which users are logged into the system. It shows user names, terminal identification numbers, when the last valid command was issued, and the current state of the last command entered.

Keyword: rept-stat-user

Related Commands: act-user, chg-pid, chg-user, dact-user, dlt-user, ent-user, login, logout, rtrv-secu-user, rtrv-user

Command Class: Basic

Parameters

This command has no parameters.

Example

rept-stat-user

Dependencies

None

Notes

None

Output

rept-stat-user

```
rlghncxa03w 04-01-07 09:12:15 EST EAGLE 31.3.0
REPT-STAT-USER COMPLTD
USER ID   TERM#  IDLE SINCE      COMMAND      STATE
frodo      3    04-01-07 08:12:23  rept-stat-card  IDLE
jethro     5    04-01-07 09:15:14  rtrv-bip      IDLE
obadiah    7    04-01-07 10:06:22  rept-stat-user PROCESSING
;
```

Legend

USER ID—The user ID of the users logged onto the system.

TERM #—The OAP terminal that the user's terminal is connected to.

IDLE SINCE—The date and time of day that the user last entered a command.

COMMAND—The last command the user entered.

STATE—The state of the command the user last entered.

rept-stat-xlist

Report Status X-List Storage Area Statistics

Use this command to report statistics related to the storage of x-list entries. X-list entries reside in the routing table and are dynamically created for individual members of clusters whenever one or more routes to that cluster member become more restrictive than the corresponding routes to the cluster.

The following information is reported:

- The number of routing table positions reserved for x-list entries
- The current number of x-list entries
- The percentage of space in the x-list reserved area currently in use
- The percentage of x-list space that must be in use before an alarm is issued

Keyword: rept-stat-xlist

Related Commands: chg-stpopts, rept-stat-cluster, rtrv-stpopts

Command Class: System Maintenance

Parameters

This command has no parameters.

Example

rept-stat-xlist

Dependencies

The Cluster Routing and Management Diversity (CRMD) feature must be turned on before using this command.

Notes

The statistics reported by this command are those gathered during periodic polling by the maintenance subsystem. They might differ slightly from the instantaneous values at the time the command was issued.

The following rules are used to compute the *Current X-LIST occupancy* percentage value that is displayed in the output report:

- The percentage value that is displayed is computed as follows:

$$[(\text{current x-list entries}) / (\text{allocated x-list space})] * 100$$
- Non-integer percentages will be rounded up to the next highest integer (for example, 23.5% becomes 24%), with the exception of the situation described in the next rule.
- 100% is not displayed until the current *X-LIST* entries value exactly equals the allocated *X-LIST* space (for example, 99.1% is not rounded up to 100%).

Output**rept-stat-xlist**

```
rlghncxa03w 04-02-18 03:32:42 EST   EAGLE 31.3.0
Allocated X-LIST space      = 500
Current X-LIST entries      = 156
Current X-LIST occupancy    = 31 %(see "Notes")
X-LIST occupancy threshold = 80 %
;
```

rept-x25-meas**Report X.25 Measurements**

Use this command to display the X.25 signaling link measurements. The X.25 signaling link is used in cellular networks to transport TCAP signaling messages from one mobile switching center (MSC) to another.

Keyword: rept-x25-meas

Related Commands: rept-stat-alm, rept-stat-dstn, rept-stat-imt, rept-stat-ls, rept-stat-slk, rept-stat-sys, rept-stat-trbl

Command Class: Link Maintenance

Parameters

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208,

**4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218,
5301-5308, 5311-5318, 6101-6108, 6111-6118**

(Refer to the *Installation Manual – EAGLE 5 ISS* for card location information.)

:action= (optional)

This parameter is used to reset the measurements counters for an X25 link.

Range: **reset, none**

Default: **none**

:port= (optional)

The port on the card specified in the **loc** parameter

Range: **a**

Example

rept-x25-meas:loc=1211:port=a

rept-x25-meas:loc=1211:port=a:action=reset

Dependencies

No other action command can be in progress when this command is entered.

The specified signaling link must be equipped and assigned to a LIM configured with the ss7gx25 GPL.

Notes

None

Output**rept-x25-meas: loc=1211:port=a**

```
rlghncxa03w 04-02-18 03:32:42 EST EAGLE 31.3.0
X.25 MEASUREMENTS REPORT: CARD LOC: 1211; PORT:A
Time counters were last reset: 04-02-18; 02:32:78
```

Link counts:

```
Hardware errors = 0      CRC Errors= 150   Inits= 3
```

Level 2 counts:

```
Total recvd = 168321    FRMR recvd = 1   DISC recvd = 0
Total xmit = 171002     Re-xmit = 15000
```

Level 3 counts:

```
Total recvd = 101218    RESTART recvd = 5   DIAG/INT/REG recvd = 0
Total xmit = 122381     Re-xmit = 50   Discarded = 0
```

Logical Channel Status & Counts:

```
#SVC defined = 80      #SVC in use = 72   SVCs all in use =10
#PVC defined = 40      #PVC in use = 40
```

Number of times SVC Control Timers have expired:

```
T1 = 0   T2 = 0   T4 = 2   T5 = 0   T6 = 0 T7 = 0   T8 = 100
Command Completed.
```

;

Legend**Link Counts**

HARDWARE ERRORS—The number of signaling link hardware errors.

CRC ERRORS—The number of signaling link CRC errors.

INITS—The number of signaling link initializations.

Level 2 Counts

TOTAL RECVD—The total number of frames received.

FRMR RECVD—The number of frame reject frames received.

DISC RECVD—The number of disconnect frames received.

TOTAL XMIT—The total number of frames transmitted.

RE-XMIT—The number of frames re-transmitted.

Level 3 Counts

TOTAL RECVD—The total number of packets received.

RESTART RECVD—The number of restarts received.

DIAG/INT/REJ RECVD—The number of diagnostic, interrupt, or reject packets received.

TOTAL XMIT—The total number of packets transmitted.

RE-XMIT—The number of packets retransmitted.

DISCARDED—The number of messages discarded because the transmit queue is full.

Logical Channel Status and Counts

#SVC DEFINED—The total number of switched virtual circuits (SVCs).

#SVC IN USE—The number of SVCs being used.

SVCs ALL IN USE—The number of times that all SVCs have been in use.

#PVC DEFINED—The total number of permanent virtual circuits (PVCs).

#PVC IN USE—The number of PVCs being used.

Number of times SVC control timers have expired

T1—SVC control timer T1

T2—SVC control timer T2

T4—SVC control timer T4

T5—SVC control timer T5

T6—SVC control timer T6

T7—SVC control timer T7

T8—SVC control timer T8

rls-alm

Release Alarm

Use this command to silence audible alarms. Entering this command also causes the alarm status on terminals to stop blinking (though they continue showing an alarm condition).

Keyword: **rls-alm**

Related Commands: **act-alm-trns**, **dact-alm-trns**, **rept-stat-alm**, **rept-stat-clk**, **rept-stat-trbl**, **rtrv-obit**, **rtrv-trbl**

Command Class: System Maintenance

Parameters

:lvl= (optional)

The alarm level

Range: **crit**, **majr**, **minor**

Default: All alarms are cleared

Example

```
rls-alm
```

```
rls-alm : lvl = crit
```

Dependencies

No other action command can be in progress when this command is entered.

Notes

This command has no effect on visual alarm indicators on the fuse and alarm panel (FAP) or on the cabinet side panel.

Any alarms that occur after the execution of this command activate audible alarms again.

Output

```
rls-alm
```

```
rlghncxa03w 04-01-07 09:27:24 EST EAGLE 31.3.0
```

```
rls-alm
```

```
Command entered at terminal #8.
```

```
;
```

rmv-card**Remove Card**

Use this command to change the state of the card to Out of Service - Maintenance Disabled (OOS-MT-DSBLD), enabling a technician to test a LIM, TSM, or ACM, or physically remove it from the shelf.

Keyword: **rmv-card**

Related Commands: **dlt-card, ent-card, init-card, rept-stat-card, rst-card, rtrv-card**

Command Class: System Maintenance

Parameters

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

Refer to the *Installation Manual – EAGLE 5 ISS* for card location information.

:force= (optional)

This parameter is required if the card is the last GLS or SCCP card.

Range: **yes, no**

Default: **no**

Example

rmv-card:loc=1101

rmv-card:loc=1201:force=yes

Dependencies

The following card locations are not valid for this command: 1113, 1114, 1115, 1116, 1117, 1118, and all xy09 and xy10 locations (where x is the frame and y is the shelf).

The shelf and card must be equipped.

If the card is a LIM, all signaling links assigned to the card must be placed out of service before the command can be entered.

The **force** parameter is required to force the last GLS or SCCP out of service.

If the card is an ACM, all TCP/IP data links assigned to it must be placed out of service.

Notes

The function of this command is the same as the **inh-card** command.

When this command is executed, the card boots and enters the OOS-MT-DSBLD state. It has no affect if the card is already OOS-MT-DSBLD.

The command is rejected if you attempt to inhibit a LIM that has active signaling links. The links must be cancelled, using the **dact-slk** command, before the command is accepted.

Inhibiting an TSM running the SCCP application affects GTT service. SCCP messages requiring global title translation are not routed, and an error message is returned to the originator.

Inhibiting an TSM running the GLS application has no immediate affect on the system. These cards are used only when loading gateway screening to the LIMs.

The command is rejected if you attempt to inhibit an ACM that has active TCP/IP data links. The TCP/IP data links must be cancelled, using the **canc-dlk** command, before the command is accepted.

Output

```
rmv-card: loc=1101
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
Card has been inhibited.
;
```

rmv-imt

Remove IMT

The interprocessor message transport bus (IMT bus) is the main communications artery between all subsystems in the system. Use this command to remove the IMT bus from service.



CAUTION: Use this command only when directed by Tekelec Technical Services at (888) FOR-TKLC.

Keyword: **rmv-imt**

Related Commands: **clr-imt-stats**, **conn-imt**, **disc-imt**, **rept-imt-lvl1**, **rept-imt-lvl2**, **rept-stat-imt**, **rst-imt**

Command Class: System Maintenance

Parameters

:bus= (mandatory)
The IMT bus to be inhibited.
Range: a, b

Example

```
rmv-imt: bus=a
```

Dependencies

The function of this command is the same as the **inh-imt** command.

The alternate IMT bus must be in-service normal (IS-NR) in order for the specified bus to be inhibited.

This command cannot be entered during an IMT Fault Isolation Test.

Notes

Cards that are not connected to the other IMT bus will reinitialize.

All traffic is rerouted to the other IMT bus.

Output**rmv-imt:bus=a**

```

rlghncxa03w 04-01-07 09:22:31 EST EAGLE 31.3.0
* 0014.0203 * SLK 1205,A nc00027 slk not aligned

rlghncxa03w 04-01-07 09:22:31 EST EAGLE 31.3.0
Inhibit IMT Bus A command issued

rlghncxa03w 04-01-07 09:22:31 EST EAGLE 31.3.0
* 00120.1203 * SLK 1205,B nc00027 slk not aligned

rlghncxa21w 04-01-07 09:22:31 EST EAGLE 31.3.0
0016.0096 CARD 1205 SS7ANSI card has been reloaded

rlghncxa21w 04-01-07 09:22:31 EST EAGLE 31.3.0
0017.0236 SLK 1205,A nc00027 slk is attempting to align

rlghncxa21w 04-01-07 09:22:31 EST EAGLE 31.3.0
0018.0236 SLK 1205,B nc00027 slk is attempting to align

rlghncxa21w 04-01-07 09:22:32 est EAGLE 31.3.0
0019.0098 imt bus a imt inhibited

rlghncxa21w 04-01-07 09:22:32 est EAGLE 31.3.0
* 0020.0107 * imt bus a minor imt failure detected

rlghncxa21w 04-01-07 09:22:32 EST EAGLE 31.3.0
** 0021.0108 ** IMT BUS A major imt failure detected

rlghncxa21w 04-01-07 09:22:33 EST EAGLE 31.3.0
0022.0026 CARD 1205 SS7ANSI clocks a and b for card normal
;

```

rmv-trm**Remove Terminal**

Use this command to set the primary state of a serial port to OOS-MT-DSBLD (OUT-OF-SERVICE-MAINTENANCE-DISABLED), and to set the secondary state to MANUAL. The serial port is not available to perform service functions. There is no outgoing traffic from the serial port; all incoming traffic is ignored.

Keyword: **rmv-trm**

Related Commands: **act-echo, alw-trm, canc-echo, chg-trm, dact-echo, inh-trm, rept-stat-trm, rst-trm, rtrv-trm**

Command Class: System Maintenance

Parameters

:trm= (mandatory)

The ID of the serial port to be inhibited.

Range: 1-40

:force= (optional)

Force the removal of this terminal, even if it is the last in-service OAP terminal available.

Range: yes, no

Default: no

Example

rmv-trm:port=5

rmv-trm:trm=1:force=yes

Dependencies

No other action command can be in progress when this command is entered.

The IP User Interface feature must be enabled before terminal ports 17 through 40 can be specified in the **trm** parameter.

The terminal specified by the **trm** parameter must be equipped.

To inhibit the last in-service OAP terminal, the **force=yes** parameter must be specified.

You cannot inhibit the terminal from which this command was entered.

Notes

When removing a terminal that has already been removed, a warning message is echoed to the scroll area but no action is taken.

Output

```
rmv-trm
rlghncxa03w 04-01-07 11:11:28 EST  EAGLE 31.3.0
Inhibit message sent to terminal
;
```

rst-card

Reset Card

Use this command to change the card from OOS-MT-DSBLD (Out-of-Service-Maintenance-Disabled) to IS-NR (In-Service-Normal) if the loading is successful. If the loading fails, the card status is OOS-MT (Out-of-Service-Maintenance).

Keyword: **rst-card**

Related Commands: **dlt-card, ent-card, init-card, rept-stat-card, rmv-card, rtrv-card**

Command Class: System Maintenance

Parameters

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

:code= (optional)

The GPL type to be loaded.

Range: **appr, trial, utility**

appr — Approved GPL

trial — Trial GPL

utility — Utility GPL, used primarily by the factory for loading special GPLs for testing purposes

Default: No GPL type is given.

:data= (optional)

High memory refresh. This parameter causes data to be reloaded to the specified card. This parameter is used to reload LNP data if the LNP feature is on. This parameter is applicable only to network cards containing the LNP database (SCCP, EBDABLM).

Various conditions in the system may prevent the persistence of the LNP data on the SCCP/EBDABLM cards.

Range: **refresh, persist**

refresh — Causes data to be reloaded to the specified card.

persist — Indicates that the LNP database is not to be reloaded to the card. Used to request that the EAGLE 5 ISS perform a warm restart of the requested cards. The EAGLE 5 ISS performs various checks to ensure that all conditions necessary to initiate the warm restart are in place (for example, that the TSM/BLM card is present and ready and that the downloaded LNP database is coherent. The LNP database audit cannot be performed prior to the card reset). During the card initialization and loading sequence, a warm restart is performed if the card meets the warm restart conditions.

Default: **refresh**

Example

rst-card:loc=2301:code=trial

rst-card:loc=1101:data=persist

Dependencies

The following card locations are not valid for this command: 1113, 1114, 1115, 1116, 1117, 1118, and all xy09 and xy10 locations (where x is the frame and y is the shelf).

The shelf and card must be equipped.

If the card is a LIM, it must have a signaling link assigned to it before it can be allowed.

No other action command can be in progress when this command is entered.

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before the **data** parameter can be specified.

The **data** parameter is valid ONLY for SCCP and EBDABLM card locations or GPLs.

Notes

The function of this command is the same as the **alw-card** command.

The *Installation Manual – EAGLE 5 ISS* provides an illustration of card locations.

The system previously supported the **data** parameter for reloading GTT data. The system does not support persistent GTT data loading, and the **data** parameter is now used in support of the warm restart feature.

When the OA&M IP Security feature is turned on, and an IPSM card is inserted and initialized for the first time or is removed, inserted, and initialized again, the "SSH Host Keys Regenerated" UIM is displayed. The UIM shows the generated SSH Host Key fingerprint that must be provided at the secure client in order for secure information transfer to occur. The SSH Host Key fingerprint is changed whenever power is lost and restored to an IPSM card.

```
rlghncxa03 03-07-11 07:05:00 EST EAGLE 30.2.0 0021.1493 CARD 1111 INFO
SSH Host Keys Regenerated DSA Server Host Key FTRA-formatted Fingerprint=
84 7c 92 8b c 7c ds 19 1c 6 4b de 5c 8f c5 4d Report Date:03-07-11 Time:
22:27:36
```

When the OA&M IP Security feature is turned on, and an IPSM card is restarted with this command, the "SSH Host Keys Loaded" UIM is displayed. The UIM shows the current SSH Host Key fingerprint. The SSH Host Key fingerprint is not changed if the IPSM card does not lose power.

```
rlghncxa03 03-07-11 07:05:00 EST EAGLE 30.2.0 0021.1493 CARD 1111 INFO
SSH Host Keys Loaded DSA Server Host Key FTRA-formatted Fingerprint= 84
7c 92 8b c 7c ds 19 1c 6 4b de 5c 8f c5 4d Report Date:03-07-11 Time:
22:27:36
```

Output

```
rst-card:loc=2301:code=trial
      rlgncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
      Card has been allowed.
;
```

rst-dstn**Reset Destination Circular Routing Status**

Use this command to request that the circular routing status for the specified destination be reset (turned OFF). The destination that is specified can be a full point code (FPC), a cluster point code (for example, *ni-nc-**), or an x-list point code. The system clears the circular routing status for the specified destination and then clears any outstanding circular routing alarm for the destination.

NOTE: This command does not support 24-bit ITU national point codes.

Keyword: rst-dstn

Related Commands: chg-stpopts, rept-stat-cluster, rept-stat-dstn, rtrv-stpopts

Command Class: System Maintenance

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:dpc= (mandatory)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: dpca

Range: p-, 000-255, *

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

The asterisk value (*) is not valid for the *ni* subfield.

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001–005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006–255.

The point code 000-000-000 is not a valid point code.

Example

```
rst-dstn:dpc=1-2-*
```

```
rst-dstn:dpc=20-2-5
```

```
rst-dstn:dpc=p-20-2-5
```

Dependencies

The specified DPC must be either provisioned or an x-list entry.

The destination address must be a full point code or a cluster point code specified as *ni-nc-**. A DPC as *ni-nc-*** or *ni-nc-**** cannot be specified for the **rst-dstn** command.

Notes

In this command, the point codes support only the private (internal) point code subtype prefix (p-).

Output

```

rst-dstn:dpc=1-2-*
  rlghncxa03w 04-01-05 06:52:20 EST  EAGLE 31.3.0
  Destination reset command sent to SNM (scroll area)

  rlghncxa03w 04-01-05 06:52:20 EST  EAGLE 31.3.0
  Command Completed.
;

rst-dstn:dpc=20-2-5
  rlghncxa03w 04-02-29 16:40:40 EST  EAGLE 31.3.0
  Destination reset command sent to SNM (scroll area)

  rlghncxa03w 04-01-05 16:40:40 EST  EAGLE 31.3.0
  Command Completed.
;

```

rst-imt**Reset IMT**

The interprocessor message transport bus (IMT bus) is the main communications artery between all subsystems in the system. Use this command to change the state of the specified IMT bus from OOS-MT-DSBLD (out of service maintenance disabled) to IS-NR (in service normal), if the command is successful. If the command fails, the status is IS-ANR (in service abnormal).

Keyword: **rst-imt**

Related Commands: **clr-imt-stats**, **conn-imt**, **disc-imt**, **rept-imt-lvl1**, **rept-imt-lvl2**, **rept-stat-imt**, **rmv-imt**

Command Class: System Maintenance

Parameters

:bus= (mandatory)
The IMT bus to be returned to service.
Range: **a, b**

Example

```
rst-imt:bus=a
```

Dependencies

None

Notes

The function of this command is the same as the **alw-imt** command.

This command returns an inhibited IMT bus to service.

Output

```

rst-imt:bus=a
  rlghncxa03w 04-01-07 11:02:30 EST  EAGLE 31.3.0
  Allow IMT Bus A command issued.

  rlghncxa03w 04-01-07 11:02:30 EST  EAGLE 31.3.0
  0100.0097    IMT   BUS A          IMT allowed
;

```

rst-trm**Reset Terminal**

Use this command to return the specified serial port to the state IS-NR (in-service-normal) from the state OOS-MT-DSBLD (Out-of-Service-Maintenance-Disabled) if the command is successful. If the command is not successful, the terminal's state is OOS-MT (Out-of-Service-Maintenance).

Keyword: **rst-trm**

Related Commands: **act-echo, alw-trm, canc-echo, chg-trm, dact-echo, inh-trm, rept-stat-trm, rmv-trm, rtrv-trm**

Command Class: System Maintenance

Parameters

:trm= (mandatory)

ID of the serial port to be put into service.

Range: **1-40**

Example

```
rst-trm:trm=5
```

```
rst-trm:trm=12
```

Dependencies

No other action command can be in progress when this command is entered.

The IP User Interface feature must be enabled before terminal ports 17 through 40 can be specified in the **trm** parameter.

The terminal specified by the **trm** parameter must be equipped.

Anyone logged in to the terminal specified by this command is logged off when this command is executed. For the user to continue working on the specified terminal, the user must log on to that terminal again.

Notes

The function of this command is the same as the **alw-trm** command.

When you attempt to return to service a terminal already in service, a warning message is echoed to the scroll area but no action is taken.

Output

```
rst-trm:trm=12
```

```
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
Allow message sent to terminal
```

```
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
1062.0046      TERMINAL      12      Terminal Enabled
```

```
;
```

rtrv-acg-mic**Display ACG Manually Initiated Control**

Use this command to display the values of ACG controls assigned to certain queries. The control can apply to all queries or to specific query services and called party digits. A set of controls is selected to be displayed by specifying the type of controls (**type** parameter), the service (**serv** parameter), and the digits (**dgts** parameter).

Keyword: **rtrv-acg-mic**

Related Commands: **chg-acg-mic, dlt-acg-mic, ent-acg-mic, rept-stat-lnp**

Command Class: Database Administration

Parameters

:dgts= (optional)

Digits

Range: 3 digits, 6-10 digits

Valid values are **000-999, 000000-9999999999**

:serv= (optional)

Query service

Range: **ain, in**

:type= (optional)

Type of control

Range: **all, sd**

Example

Display all MICs:

rtrv-acg-mic

Display the MIC(s) that apply to particular services and digits:

rtrv-acg-mic:type=sd

Display the MIC(s) that apply to AIN queries:

rtrv-acg-mic:serv=ain

Display the MIC(s) that apply to IN queries for 919-460-xxxx:

rtrv-acg-mic:serv=in:dgts=919460

Dependencies

If the **type=all** parameter is specified, optional parameters **serv** and **dgts** cannot be specified.

The **dgts** parameter value must be specified as 3 digits or 6-10 digits.

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before the **rtrv-acg-mic** command can be entered.

Notes

None

Output

```

rtrv-acg-mic:type=sd
rlghncxa03w 04-01-28 08:50:12 EST EAGLE 31.3.0
TYPE=ALL
ND  INTVL  AINTVL  DRTN
6   4      7      8
TYPE=SD
DGTS          SERV  INTVL  AINTVL  DRTN
704461        AIN   -      8      7
919460         IN   6      -      7
9194602132     AIN   -      7      8
9194602132     IN   4      -      8
919461         IN   6      -      7

ACG MIC table is (11 of 256) 4% full of type SD
RTRV-ACG-MIC: MASP A - COMPLTD
;

```

The following example shows how the memory space accounting command completion response is used for **type=all**:

```

rtrv-acg-mic:type=all
rlghncxa03w 04-01-28 08:50:12 EST EAGLE 31.3.0
TYPE=ALL
ND  INTVL  AINTVL  DRTN
6   4      7      8
TYPE=SD
DGTS          SERV  INTVL  AINTVL  DRTN
919460         IN   6      -      7
9194602132     IN   4      -      8

ACG MIC table is (5 of 256) 2% full of type SD
RTRV-ACG-MIC: MASP A - COMPLTD
;

```

Legend

AINTVL—New AIN interval index

DGTS—Digits

DRTN—New duration index

INTVL—New IN interval index

ND—New number of digits

SERV—Query service

rtrv-acg-noc**Display ACG Node Overload Control**

Use this command to display the definitions of node overload levels. The definition is comprised of the threshold LNP query rates for node overload levels and the values for the Automatic Call Gappings (ACG) to be sent when at the overload level.

Keyword: **rtrv-acg-noc**

Related Commands: **chg-acg-noc, dlt-acg-noc, ent-acg-noc, rept-stat-lnp**

Command Class: Database Administration

Parameters

:lvl= (optional)
Overload level
Range: **1-10**

Example

```
rtrv-acg-noc
rtrv-acg-noc:lvl=3
```

Dependencies

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before this command can be entered.

Notes

None

Output

The following example displays all defined overload levels:

```
rtrv-acg-noc
rlghncxa03w 04-01-28 08:50:12 EST EAGLE 31.3.0
LVL QR          AND  IND  INTVL  DRTN
3   600000      10   6    3       6
4   750000      6    6    5       7
10  2147483647  10   10   15      13
RTRV-ACG-NOC: MASP A - COMPLTD
;
```

The following example displays overload level 3:

```
rtrv-acg-noc:lvl=3
rlghncxa03w 04-01-28 08:50:12 EST EAGLE 31.3.0
LVL QR          AND  IND  INTVL  DRTN
3   600000      10   10   3       6
RTRV-ACG-NOC: MASP A - COMPLTD
;
```

Legend

LVL—Overload level

QR—Query rate

AND—AIN number of digits

IND—IN number of digits

INTVL—Interval index

DRTN—Duration index

rtrv-appl-rtkey**Retrieve Application Route Key Table**

Use this command to retrieve information from the Routing Key table. A routing key entry associates a routing key with up to 16 socket names with a limit of 1000 routing keys per system (if there are any dual-slot DCMs) or 2500 routing keys per system (if there are SSED CMs).

- DPC, SI, SSN routing keys, which are used to route SCCP messages
- DPC, SI routing keys, which are used to route non-SCCP and non-ISUP messages
- DPC, SI, CIC routing keys, which are used to route ISUP messages

Keyword: rtrv-appl-rtkey

Related Commands: chg-appl-rtkey, dlt-appl-rtkey, ent-appl-rtkey

Command Class: Database Administration

Parameters

NOTE: See for a detailed description of point code formats, rules for specification, and examples.

:asname= (mandatory)

Application Server (AS) name assigned to this routing key.

Range: ayyyyyyyyyyyyyy

Up to 15 alphanumeric characters; the first character must be a letter

:cice= (optional)

The end range of circuit identification codes assigned to the routing key.

Range: See Table A-4 for valid CIC values for specified SI and MSU types.

:cics= (optional)

The start range of circuit identification codes assigned to the routing key.

Range: See Table A-4 for valid CIC values for specified SI and MSU types.

:display= (optional)

Indicates the scope of the display, whether it is a brief display or full display. The output includes the type and location of the card, the data collection being audited, and a message indicating the overall status. This parameter applies only to STP databases.

Range: all, brief

all — The KEY and the ATTRIBUTE sections of the routing key are displayed

brief — Only the KEY section of the routing key is displayed

Default: brief

:dpc= (optional)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: dpca

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001-005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006-255**.

The point code **000-000-000** is not a valid point code.

:dpc/dpca/dpci/dpcn/dpcn24= (optional)

Destination point code.

:dpci= (optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*)

Range: s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

:dpcn= (optional)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: s-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:dpcn24= (optional)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

:loc= (optional)

Card location for retrieval of dynamic routing key entries.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

:mode= (optional)

Specifies whether to retrieve static keys only, dynamic keys only, or both static and dynamic keys.

Range: static, dynamic, both

Default: both

:norm= (optional)

Normalization process enabled/disabled indicator for MSUs using the routing key

Range: yes, no

:num= (optional)

The number of entries to display.

Range: 1-10000

Default: 50

:opc= (optional)

ANSI originating point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: **opca**

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001–005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006–255.

The point code 000-000-000 is not a valid point code.

:opc/opca/opci/opcn/opcn24= (optional)

Originating point code.

:opci= (optional)

ITU international originating point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*)

Range: s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

:opcn= (optional)

ITU national originating point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: s-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:opcn24= (optional)

24-bit ITU national originating point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000–255**

ssa—**000–255**

sp—**000–255**

:pstncat= (optional)

PSTN Category assigned to the routing key

Range: **0-65535**

:pstnid= (optional)

PSTN ID assigned to the routing key

Range: **0-65535**

:rcontext= (optional)

Routing Context. The **rcontext** parameter is used to display the routing key with the specified routing context.

Range: **0-4294967295**

:si= (optional)

Service indicator.

Range: **0-15**

The following equivalent text values can be specified:

Number = Text—Description

0 = snm—Signaling network management messages

1 = regtest—Signaling network testing and maintenance regular

2 = spltest—Signaling network testing and maintenance special

3 = sccp—SCCP

4 = tup—Telephone user part

5 = isup—ISDN user part

13 = qbicc

:sname= (optional)

Socket name as provisioned in the Socket table and associated with this routing key.

Range: aaaaaaaaaaaaa

Up to 15 alphanumeric characters; the first character must be a letter

:ssn= (optional)

Subsystem number.

Range: **0-255**

:type= (optional)

The type of routing key.

Range: **all, full, partial, default**

Default: **all**

Example

```

rtrv-appl-rtkey
rtrv-appl-rtkey:dpc=123-234-255:si=3:ssn=123:sname=socket1
rtrv-appl-rtkey:sname=socket2
rtrv-appl-rtkey:dpc=123-234-255:si=3:mode=static
rtrv-appl-rtkey:dpc=123-234-255
rtrv-appl-rtkey:cics=1:cice=1000:num=3
rtrv-appl-rtkey:cice=19:mode=dynamic:loc=1107
rtrv-appl-rtkey:opc=122-124-125:mode=static
rtrv-appl-rtkey:type=partial:mode=both:loc=1107
rtrv-appl-rtkey:display=all
rtrv-appl-rtkey:rcontext=7

```

Dependencies

The **ssn** parameter is valid only when the **si=3** (or **sccp**) parameter is specified. If the **si=3** (or **sccp**) parameter is not specified, the **ssn** parameter cannot be specified.

The value specified for the starting circuit identification code (**cics**) must be less than or equal to the value entered for the ending circuit identification code (**cice**).

A circuit identification code range (**cics** to **cice**) that overlaps an existing routing key cannot be specified.

The **ssn** parameter cannot be specified when **opc**, **cics**, and **cice** are specified. See Table 5-6 for valid parameter combinations.

When the DPC is ANSI and the **si=4** parameter is specified, a DPC/SI routing key must be specified (TUP is used only in an ITU network).

The **opc**, **cics**, and **cice** parameters are allowed with the **si** parameter only when **si** equals **4**, **5**, or **13** (or **tup**, **isup**, or **qbicc**). Table A-4 shows valid CIC values for SI types 4, 5, and 13.

The following card locations (**loc** parameter) are not valid for this command: 1113, 1114, 1115, 1116, 1117, 1118, and all xy09 and xy10 locations (where x is the frame and y is the shelf). The card must be equipped and in service.

When the **mode=static** parameter is specified, the **loc** parameter cannot be specified.

Table A-4 shows valid CIC values for SI types 4, 5, and 13.

When a default routing key is specified, only the **sname** parameter is allowed.

The following types of partial routing keys are supported:

- The following types of partial routing keys are supported:
- DPC/SI/OPC (ignore CIC) can be used as a partial match key for CIC- based traffic.
- DPC/SI (ignore all other fields) can be used as a partial match key for CIC- based traffic or SCCP traffic.
- DPC only (ignore all other fields) can be used as a partial match for any type of traffic.
- SI only (ignore all other fields) can be used as a partial match for any type of traffic.

Notes

This command can be canceled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

Static routing keys are stored on disk and a copy of the table is loaded to each SS7IPGW card. Dynamic routing key entries are provisioned through IP requests and are unique to each SS7IPGW card. The type of routing key entries to be retrieved (static or dynamic) is controlled by the **loc** and **mode** parameters. Specifying a card location (**loc**) causes dynamic routing key entries to be retrieved from that location only. If **mode=both** is specified, specifying **loc** has no effect on the retrieval of static routing key entries.

Group codes are required for ITU-N point codes (DPCN/OPCN) when the Duplicate Point Code feature is turned on.

The **display=all** parameter must be specified to display the assigned routing context value for the routing key.

In this command, the point codes support only the spare point code subtype prefix (**s-**).

Output

rtrv-appl-rtkey

```

rlghncxa03w 06-04-17 15:35:05 EST EAGLE 35.0.0
KEY:LOC      DPC          SI SSN OPC          CICS      CICE
  STATIC 001-006-003 ** *** ***** ***** *****

RCONTEXT      DPC          SI ADPTR ASNAME          TYPE      LOC
1234567891    005-001-001    5 M3UA  LONGASNAME00001  FULL      STATIC
-----      005-001-002    * M3UA  LONGASNAME00002  PARTIAL   STATIC
1234567893    005-001-003    3 SUA   LONGASNAME00003  FULL      STATIC
-----      005-001-004    5 TALI  -----          FULL      1101

RCONTEXT      DPCI          SI ADPTR ASNAME          TYPE      LOC
1234567893    s-5-011-2        3 SUA   LONGASNAME00003  FULL      STATIC
1234567894      5-011-2        3 SUA   LONGASNAME00004  PARTIAL   STATIC

RCONTEXT      DPCN          SI ADPTR ASNAME          TYPE      LOC
1234567895    s-16383          3 M3UA  LONGASNAME00005  FULL      STATIC
1234567896      16383          3 SUA   LONGASNAME00006  FULL      STATIC

RCONTEXT      DPCN24         SI ADPTR ASNAME          TYPE      LOC
1234567897    005-001-002      5 M3UA  LONGASNAME00007  PARTIAL   STATIC

RCONTEXT      DPC          SI ADPTR ASNAME          TYPE      LOC
-----      *****          5 TALI  -----          PARTIAL   1101
1234567898    *****          ** M3UA  LONGASNAME00008  DEFAULT   STATIC

STATIC Route Key table is (10 of 500)2% full
1305  Route Key table is (0 of 500) 0% full
1307  Route Key table is (0 of 500) 0% full

STATIC Route Key Socket Association table is (10 of 8000)2% full
1305  Route Key Socket Association table is (0 of 8000) 0% full
1307  Route Key Socket Association table is (0 of 8000) 0% full
;

```

The following example shows output when the 2500 Routing Keys feature is enabled. The maximum number of routing keys allowed in the system is 2500. The maximum number of entries in the Static Route Key Socket Association table is 40,000.

rtrv-appl-rtkey

```

eagle10212 06-04-10 10:50:28 EST EAGLE 35.0.0

RCONTEXT      DPC          SI ADPTR ASNAME          TYPE      LOC
1234567891    005-001-001    5 M3UA  LONGASNAME00001  FULL      STATIC
-----      005-001-002    * M3UA  LONGASNAME00002  PARTIAL   STATIC

STATIC Route Key table is (2 of 2500) 1% full
1305  Route Key table is (0 of 2500) 0% full
1307  Route Key table is (0 of 2500) 0% full

STATIC Route Key Socket Association table is (2 of 8000) 1% full
1305  Route Key Socket Association table is (0 of 8000) 0% full
1307  Route Key Socket Association table is (0 of 8000) 0% full
;

rtrv-appl-rtkey:asname=ipg1315as1
eagle10212 06-04-10 10:50:28 EST EAGLE 35.0.0

RCONTEXT      DPCI          SI ADPTR ASNAME          TYPE      LOC
1234567894      5-011-2        3 SUA   LONGASNAME00004  PARTIAL   STATIC

```

```

STATIC Route Key table is (2 of 500) 1% full
1305 Route Key table is (0 of 500) 0% full
1307 Route Key table is (0 of 500) 0% full

STATIC Route Key Socket Association table is (2 of 8000) 1% full
1305 Route Key Socket Association table is (0 of 8000) 0% full
1307 Route Key Socket Association table is (0 of 8000) 0% full

```

;

The following example shows:

- A routing key with routing context that is assigned to an SUA Application Server.
- A routing key with routing context that is assigned to an M3UA Application Server.

A routing key without routing context that is assigned to a TALI connection. (Routing context is not valid for TALI connections).

rtrv-appl-rtkey:display=all

```
eagle10212 06-04-10 10:50:28 EST EAGLE 35.0.0
```

```

RCONTEXT  DPC          SI SSN OPC          CICS          CICE          LOC
1234567890 001-001-001  3 *** ***** ***** ***** ***** STATIC

```

```

ADPTR  TYPE      ASNAME
SUA    FULL      LONGASNAME00001

```

ANAMES

```

LONGASSOCNAME01 LONGASSOCNAME02 LONGASSOCNAME03 LONGASSOCNAME04
LONGASSOCNAME05 LONGASSOCNAME06 LONGASSOCNAME07 LONGASSOCNAME08
LONGASSOCNAME09 LONGASSOCNAME10 LONGASSOCNAME11 LONGASSOCNAME12
LONGASSOCNAME13 LONGASSOCNAME14 LONGASSOCNAME15 LONGASSOCNAME16

```

```

RCONTEXT  DPC          SI SSN OPC          CICS          CICE          LOC
1234567891 001-001-001  ** *** ***** ***** ***** ***** STATIC

```

```

ADPTR  TYPE      ASNAME
M3UA   PARTIAL    LONGASNAME00001

```

ANAMES

```

LONGASSOCNAME01 LONGASSOCNAME02 LONGASSOCNAME03 LONGASSOCNAME04
LONGASSOCNAME05 LONGASSOCNAME06 LONGASSOCNAME07 LONGASSOCNAME08
LONGASSOCNAME09 LONGASSOCNAME10 LONGASSOCNAME11 LONGASSOCNAME12
LONGASSOCNAME13 LONGASSOCNAME14 LONGASSOCNAME15 LONGASSOCNAME16

```

```

RCONTEXT  DPC          SI SSN OPC          CICS          CICE          LOC
-----  ***** ** *** ***** ***** ***** ***** 1101

```

```

ADPTR  TYPE      PSTNCAT  PSTNID  NORM  DUP
TALI   DEFAULT    0        0      N     N

```

SNAMEs

```

LONGSOCKNAME001 LONGSOCKNAME002 LONGSOCKNAME003 LONGSOCKNAME004
LONGSOCKNAME005 LONGSOCKNAME006 LONGSOCKNAME007 LONGSOCKNAME006
LONGSOCKNAME009 LONGSOCKNAME010 LONGSOCKNAME011 LONGSOCKNAME012
LONGSOCKNAME013 LONGSOCKNAME014 LONGSOCKNAME015 LONGSOCKNAME015

```

```

STATIC Route Key table is (3 of 500) 1% full
1305 Route Key table is (0 of 500) 0% full
1307 Route Key table is (0 of 500) 0% full

```


STATIC	Route	Key	Socket	Association table is (3 of 8000)	1% full
1305	Route	Key	Socket	Association table is (0 of 8000)	0% full
1307	Route	Key	Socket	Association table is (0 of 8000)	0% full

rtrv-appl-sock

Retrieve Application Socket

Use this command to retrieve the configuration data from the Socket table. The Socket table is used to associate the local host/local port to a remote host/remote port.

Keyword: rtrv-appl-sock

Related Commands: `chg-appl-sock`, `dlt-appl-sock`, `ent-appl-sock`

Command Class: Database Administration

Parameters

:lhost= (optional)

Local host name. The logical name assigned to the local host device.

[illegible]

a-z, A-Z, 0-9, -, . (any string of characters beginning with a letter and comprising up to 60 characters in length)

Default: Retrieve all

:link= (optional)

The signaling link associated with this socket.

Synonym: port

Range: a, b, a1, b1, a2, b2, a3, b3

Not all card types support all **link** parameter values.

See Table A-1 for valid **link** parameter range values for each type of card that can have assigned signaling links ports.

Default: Retrieve all

:rhost= (optional)

Remote host name. The logical name assigned to the remote host device.

[illegible]

a-z, A-Z, 0-9, -, . (any string of characters beginning with a letter and comprising up to 60 characters in length)

Default: Retrieve all

:sname= (optional)

Name of socket. The routing key table and maintenance commands use these names to reference individual sockets.

Range: *ayyyyyyyyyyyyyyy*

Up to 15 alphanumeric characters; the first character must be a letter

Default: All information for all sockets is retrieved

Example

```
rtrv-appl-sock:sname=swbel32
```

Dependencies

The **lhost**, **rhost**, and **sname** parameters must conform to the specified naming conventions.

Notes

This command can be canceled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

Output

rtrv-appl-sock:sname=swbel32

```

rlghncxa03w 05-05-17 15:35:05 EST EAGLE5 34.0.0
SNAME SWBEL32
LHOST GW105.NC.TEKELEC.COM
LPORT 1030
SERVER YES
RHOST GW100.NCD_ECONOMIC_DEVELOPMENT.SOUTHEASTERN_COORIDOR_ASH.GOV
RPORT 2345
OPEN YES
ALW YES
DCMPS 1
PORT A
REXMIT FIXED
RTT 60
IP Appl Sock table is (4 of 250) 1% full
;

```

rtrv-appl-sock:lhost=gw105.nc.tekelec.com

```

rlghncxa03w 05-05-17 15:35:05 EST EAGLE5 34.0.0
SNAME SOCKET2
LHOST GW105.NC.TEKELEC.COM
LPORT 1030
SERVER YES
RHOST GW100.NC.TEKELEC.COM
RPORT 2345
OPEN YES
ALW YES
DCMPS 1
PORT A
REXMIT MOD
RTT 250

```

```

SNAME SOCKET3
LHOST GW105.NC.TEKELEC.COM
LPORT 1030
SERVER YES
RHOST GW106.NC.TEKELEC.COM
RPORT 2346
OPEN YES
ALW YES
DCMPS 1
PORT A
REXMIT BSD
RTT ----

```

```

IP Appl Sock table is (4 of 250) 1% full
;

```

rtrv-appl-sock

```

rlghncxa03w 05-05-17 15:35:05 EST EAGLE5 34.0.0
SNAME SOCKET1
LHOST GW105.NC.TEKELEC.COM
LPORT 1030
SERVER YES
RHOST GW100.NC.TEKELEC.COM
RPORT 2345
OPEN YES
ALW YES
DCMPS 1
PORT A
REXMIT FIXED
RTT 500

```

```

SNAME SOCKET2
  LHOST GW108.NC.TEKELEC.COM
  LPORT 1035
  SERVER YES
  RHOST GW102.NC.TEKELEC.COM
  RPORT 2360
  OPEN YES
  ALW YES
  DCMPS 1
  PORT B
  REXMIT MOD
  RTT 250

```

IP Appl Sock table is (4 of 250) 1% full;

rtrv-appl-sock

```
rlghncxa03w 04-07-17 15:35:05 EST EAGLE 31.6.0
```

```

SNAME socket1
  LINK A
  LHOST GW105.NC.TEKELEC.COM
  RHOST GW100.NC.TEKELEC.COM
  LPORT 1035      RPORT 2361
  SERVER YES      DCMPS 1
  REXMIT BSD      RTT ----
  OPEN YES        ALW YES

```

```

SNAME socket2
  LINK B
  LHOST GW108.NC.TEKELEC.COM
  RHOST GW102.NC.TEKELEC.COM
  LPORT 1035      RPORT 2360
  SERVER YES      DCMPS 1
  REXMIT BSD      RTT ----
  OPEN YES        ALW YES

```

IP Appl Sock/Assoc table is (4 of 4000) 1% full

;

rtrv-appl-sock: link=b1

```
rlghncxa03w 05-05-17 15:35:05 EST EAGLE5 34.0.0
```

```

SNAME SOCKET2
  LHOST GW108.NC.TEKELEC.COM
  LPORT 1035
  SERVER YES
  RHOST GW102.NC.TEKELEC.COM
  RPORT 2360
  OPEN YES
  ALW YES
  DCMPS 1
  PORT B
  REXMIT MOD
  RTT 250

```

IP Appl Sock table is (4 of 250) 1% full

;

Legend

ALW—Whether or not to the socket is allowed to carry SS7 traffic, **YES** or **NO**.

DCMPS—The parameter set used by this socket, 1 to **10**.

LHOST—The local host name.

LINK—The signaling link associated with this socket.

LPORT—The local port name.

OPEN—Whether or not the connection manager is to open this socket if the socket is operational, YES or NO.

REXMIT—Retransmission mode to use on socket when packet loss is detected; BSD, FIXED or MOD.

RHOST—The remote host name.

RPORT—The remote port name.

RTT—Expected Round Trip Time for socket when REXMIT is FIXED or MOD.

SERVER—The role of the local socket in the client/server relationship. If YES, the server is the local side. If NO, the client is the local side.

SNAME—The socket name.

rtrv-as

Retrieve Application Server

Use this command to retrieve the characteristics of one or all Application Servers from the AS table.

Keyword: rtrv-as

Related Commands: chg-as, dlt-as, ent-as, rept-stat-as

Command Class: Database Administration

Parameters

:aname= (optional)

Name of the association.

Range: ayyyyyyyyyyyyyy

Up to 15 alphanumeric characters; the first character must be a letter.

Default: Retrieve all

:asname= (optional)

Name of the Application Server.

Range: ayyyyyyyyyyyyyy

Up to 15 alphanumeric characters; the first character must be a letter.

Example

```
rtrv-as
```

```
rtrv-as:aname=as1
```

Dependencies

None

Notes

This command can be canceled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

Output

```
rtrv-as
rlghncxa03w 05-06-05 08:40:18 EST EAGLE5 34.0.0
AS Name      Mode      Tr ms    Association Names
m3ua_as1     LOADSHARE 2000     m3ua_assoc1
              m3ua_assoc1
sua_as1      OVERRIDE 200      sua_assoc1
              sua_assoc2
AS Table is (2 of 250) 1% full
;
```

rtrv-asp**Retrieve Application Server Process**

Use this command to retrieve the characteristics of one or all Application Server Processes from the ASP table.

NOTE: This command is obsolete.

Keyword: rtrv-asp

Related Commands: chg-asp, dlt-asp, ent-asp,

Command Class: Database Administration

Parameters

:aspname= (mandatory)

Name of the Application Server Process (ASP).

Range: aaaaaaaaaaaaaa

Up to 15 alphanumeric characters; the first character must be a letter.

Example

rtrv-asp

Dependencies

None

Notes

This command can be canceled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

Output

rtrv-asp

```
rlghncxa03w 03-07-04 08:40:18 EST EAGLE 31.6.0
ASP          Association          UAPS
ASP1         sock1                1
ASP2         sock2                1
ASP3         sock3                1
```

ASP Table is (3 of 4000) 1% full

;

rtrv-asp

```
rlghncxa03w 03-07-04 08:40:18 EST EAGLE 31.6.0

ASP          Association          UAPS
asp01        asoc01              10
asp02        asoc02              10
```

ASP Table is (2 of 4000) 1% full

;

rtrv-assoc**Retrieve Association**

Use this command to retrieve the configuration data from the IP Socket/Association (IPAPSOCK) table.

Keyword: rtrv-assoc

Related Commands: chg-assoc, dlt-assoc, ent-assoc, rept-stat-assoc

Command Class: Database Administration

Parameters

:adapter= (optional)

The adapter layer for this association.

Range: **m3ua, sua, m2pa**

Default: Retrieve all

:alhost= (optional)

Alternate local host name as defined in the IP Host table.

Range: **aaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaa**

a–z, A–Z, 0–9, -, . —any string of characters beginning with a letter and comprising up to 60 characters in length.

Default: Retrieve all

:aname= (optional)

Name assigned to this association (in IPAPSOCK table).

Range: **aaaaaaaaaaaaaaaa**

Up to 15 alphanumeric characters; the first character must be a letter.

Default: Retrieve all

:display= (optional)

An optional display parameter can be specified in order to display either all or brief reports for associations. The default mode is “brief” if this parameter is not entered at the command line.

Range: **brief, all**

:lhost= (optional)

The local host name as defined in the IP Host table.

Range: **aaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaa**

a–z, A–Z, 0–9, -, . —any string of characters beginning with a letter and comprising up to 60 characters in length

Default: Retrieve all

:link= (optional)

The signaling link for this association.

Range: **a, b, a1, b1, a2, b2, a7, b7**

Not all card types support all **link** parameter values.

See Table A-1 for valid **link** parameter range values for each type of card that can have assigned signaling links.

:loc= (optional)

Card location that is stenciled on the shelf of the EAGLE 5 ISS..

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

:rhost= (optional)

Name of Remote Host as defined in the IP Host table.

Range: **aaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaa**

a–z, A–Z, 0–9, -, . (any string of characters beginning with a letter and comprising up to 60 characters in length)

Default: Retrieve all

Example

```
rtrv-assoc
```

```
rtrv-assoc:aname=swbel32
```

```
rtrv-assoc:lhost=gw105.nc.tekelec.com:adapter=sua
```

Dependencies

None

Notes

This command can be canceled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

The IPAPSOCK table is used to associate the Local Host/Local Port to a Remote Host/Remote Port. When the command is entered with the **aname**, **lhost**, or **alhost** parameters, the output displays SCTP buffer usage information (used and total buffer space on the card).

Output

The following example with the **aname** parameter shows buffer usage (used and total buffer space) and card location information.

rtrv-assoc:aname=ipl1311a

eagle10115 06-03-27 09:48:36 EST EAGLE 35.0.0

```

ANAME ipl1311a
LINK      A
ADAPTER   M2PA          VER      M2PA RFC
LHOST     e1011501.1311a
ALHOST    ---
RHOST     e1011001.1303a
LPORT     1311          RPORT     1303
ISTRMS    2            OSTRMS    2            BUFSIZE  200
RMODE     LIN          RMIN      120          RMAX     800
RTIMES    10          CWMIN     3000         M2PATSET 1
OPEN      YES          ALW       YES

```

IP Appl Sock/Assoc table is (10 of 4000) 1% full
 Assoc Buffer Space Used (400 KB of 1600 KB) on LOC = 1311

;

The following example with the **lhost** parameter shows buffer usage (used and total buffer space) and card location information.

rtrv-assoc:lhost=e1011501.1311a

eagle10115 06-03-27 09:52:33 EST EAGLE 35.0.0

```

ANAME ipl1311a
LINK      A
ADAPTER   M2PA          VER      M2PA RFC
LHOST     e1011501.1311a
ALHOST    ---
RHOST     e1011001.1303a
LPORT     1311          RPORT     1303
ISTRMS    2            OSTRMS    2            BUFSIZE  200
RMODE     LIN          RMIN      120          RMAX     800
RTIMES    10          CWMIN     3000         M2PATSET 1
OPEN      YES          ALW       YES

```

```

ANAME ipl1311b
LINK      B
ADAPTER   M2PA          VER      M2PA RFC
LHOST     e1011501.1311a
ALHOST    ---
RHOST     e1011001.1303a
LPORT     1312          RPORT     1312
ISTRMS    2            OSTRMS    2            BUFSIZE  200
RMODE     LIN          RMIN      120          RMAX     800
RTIMES    10          CWMIN     3000         M2PATSET 1
OPEN      YES          ALW       YES

```

IP Appl Sock/Assoc table is (10 of 4000) 1% full
 Assoc Buffer Space Used (400 KB of 1600 KB) on LOC = 1311

;

rtrv-assoc:display=brief or rtrv-assoc

```

0      1      2      3      4      5      6      7
1234567890123456789012345678901234567890123456789012345678
CARD IPLNK
ANAME          LOC  PORT  LINK ADAPTER LPORT RPORT OPEN ALW
a23456789012345 1305 A    A    M3UA   20000 30000 YES  YES

```



```

b23456789012345 1305 B      A      M3UA      20001 30001 NO    NO
c23456789012345 1307 A      A      SUA       20002 30002 YES   YES
d23456789012345 1307 B      A      M3UA      20003 30003 NO    NO
e23456789012345 1315 A      A      SUA       20004 30004 YES   YES
f23456789012345 1315 A,B    A      M3UA      20005 30005 YES   YES
g23456789012345 1317 B,A    A      SUA       20006 30006 YES   YES

```

rtrv-assoc:loc=1305:display=all

```

0      1      2      3      4      5      6      7
1234567890123456789012345678901234567890123456789012345678

```

```

ANAME ipg1305a1
LOC      1305      IPLNK PORT  A,B      LINK  A
ADAPTER  M3UA      VER      M3UA RFC
LHOST    e1001501.1105a
ALHOST    ---
RHOST     labsun10215p0
LPORT     2000      RPORT     2000
ISTRMS    2         OSTRMS    2
RMODE     LIN      RMIN      120      RMAX    800
RTIMES    10       CWMIN     3000     UAPS    10
OPEN      NO       ALW       NO

```

```

ANAME ipg1305a2
LOC      1305      IPLNK PORT  A      LINK  A
ADAPTER  SUA       VER      SUA RFC
LHOST    e1001501.1105a
ALHOST    ---
RHOST     labsun10215p0
LPORT     4000      RPORT     4000
ISTRMS    2         OSTRMS    2
RMODE     LIN      RMIN      120      RMAX    800
RTIMES    10       CWMIN     3000     UAPS    10
OPEN      NO       ALW       NO

```

The following is an example of a report with the **aname** parameter specified:

rtrv-assoc:aname=ipg1105a1

```

ANAME ipg1105a1
LOC      1105      IPLNK PORT  A      LINK  A
ADAPTER  M3UA      VER      M3UA RFC
LHOST    e1001501.1101a
ALHOST    ---
RHOST     labsun10215p0
LPORT     2222      RPORT     2222
ISTRMS    2         OSTRMS    2
RMODE     LIN      RMIN      120      RMAX    800
RTIMES    10       CWMIN     3000     UAPS    10
OPEN      YES      ALW       YES

```

```

ASNAMES
xxxxxxxxxxxxxxxxx1 xxxxxxxxxxxxxxxxxxx2 xxxxxxxxxxxxxxxxxxx3
...
xxxxxxxxxxxxxxxxx46 xxxxxxxxxxxxxxxxxxx47 xxxxxxxxxxxxxxxxxxx48
xxxxxxxxxxxxxxxxx49 xxxxxxxxxxxxxxxxxxx50

```

rtrv-assoc

```

rlghncxa03w 06-01-18 08:16:14 EST EAGLE 34.3.0
rtrv-assoc
Command entered at terminal #4.

```

```

ANAME ipl1301a
LINK      A
ADAPTER  M2PA      VER      M2PA DRAFT 6
LHOST     e1021201.1301a
ALHOST     ---
RHOST     e1021301.1301a
LPORT     1301      RPORT     1301

```

ISTRMS	2	OSTRMS	2		
RMODE	LIN	RMIN	120	RMAX	800
RTIMES	10	CWMIN	3000	M2PATSET	1
OPEN	NO	ALW	NO		

```

ANAME ipl1301b
LINK      B
ADAPTER   M2PA          VER      M2PA RFC
LHOST     e1021201.1301a
ALHOST    ---
RHOST     e1021301.1301a
LPORT     1302          RPORT    1302
ISTRMS    2             OSTRMS   2
RMODE     LIN           RMIN      120      RMAX      800
RTIMES    10            CWMIN     3000     M2PATSET  1
OPEN      YES           ALW       YES

```

```

ANAME ipg1305a1
LINK      A
ADAPTER   M3UA          VER      M3UA RFC
LHOST     e1021201.1307a
ALHOST    ---
RHOST     e1021301.1305a
LPORT     2050          RPORT    2050
ISTRMS    2             OSTRMS   2
RMODE     LIN           RMIN      120      RMAX      800
RTIMES    10            CWMIN     3000     UAPS       10
OPEN      NO            ALW       NO

```

```

ANAME ipg1307a1
LINK      A
ADAPTER   SUA           VER      SUA RFC
LHOST     e1021201.1307a
ALHOST    ---
RHOST     e1021301.1307a
LPORT     3050          RPORT    3050
ISTRMS    2             OSTRMS   2
RMODE     LIN           RMIN      120      RMAX      800
RTIMES    10            CWMIN     3000     UAPS       10
OPEN      NO            ALW       NO

```

IP Appl Sock/Assoc table is (4 of 4000) 1% full

;

rtrv-assoc:adapter=m2pa

rlghncxa03w 06-01-18 08:16:14 EST EAGLE 34.3.0

rtrv-assoc:adapter=m2pa

Command entered at terminal #4

```

ANAME ipl1301a
LINK      A
ADAPTER   M2PA          VER      M2PA DRAFT 6
LHOST     e1021201.1301a
ALHOST    ---
RHOST     e1021301.1301a
LPORT     1301          RPORT    1301
ISTRMS    2             OSTRMS   2
RMODE     LIN           RMIN      120      RMAX      800
RTIMES    10            CWMIN     3000     M2PATSET  1
OPEN      NO            ALW       NO

```

```

ANAME ipl1301b
LINK      B
ADAPTER   M2PA          VER      M2PA RFC

```

```

        LHOST      e1021201.1301a
        ALHOST     ---
        RHOST      e1021301.1301a
        LPORT      1302          RPORT      1302
        ISTRMS     2             OSTRMS     2
        RMODE      LIN           RMIN       120          RMAX       800
        RTIMES     10           CWMIN      3000         M2PATSET  1
        OPEN       YES          ALW        YES

IP Appl Sock/Assoc table is (4 of 4000) 1% full

;
rtrv-assoc:adapter=sua
rlghncxa03w 06-01-18 08:16:14 EST  EAGLE 34.3.0
rtrv-assoc:adapter=sua
Command entered at terminal #4

ANAME ipg1307a1
LINK      A
ADAPTER   SUA          VER          SUA RFC
LHOST     e1021201.1307a
ALHOST    ---
RHOST     e1021301.1307a
LPORT     3050          RPORT      3050
ISTRMS    2            OSTRMS     2
RMODE     LIN           RMIN       120          RMAX       800
RTIMES    10           CWMIN      3000         UAPS       10
OPEN      NO           ALW        NO

IP Appl Sock/Assoc table is (4 of 4000) 1% full

;

```

rtrv-atm-lps**Retrieve ATM Link Parameter Set**

Use this command to display the parameter values for the ATM link parameter sets in the database configured with the **chg-atm-lps** command, along with the non-configurable ATM parameters.

Keyword: **rtrv-atm-lps**

Related Commands: **chg-atm-lps**

Command Class: Database Administration

Parameters

:lpset= (optional)

The ATM link parameter set to be displayed.

Range: **1-30**

Default: All ATM link parameter sets are displayed

Example

```
rtrv-atm-lps:lpset=5
```

```
rtrv-atm-lps
```

Dependencies

None

Notes

None

Output

NOTE: Dashes (--) in the FC NR and FC BC fields indicate that this implementation is not supported on ATM high-speed signaling links.

rtrv-atm-lps:lpset=5

rlghncxa03w 04-01-04 08:40:18 EST EAGLE 31.3.0
ATM LINK PARAMETER SET TIMERS AND PARAMETERS (TIMERS IN SECONDS)

					SSCOP PARAMETERS				
LPSET	MAXCC	MAXPD	MAXSTAT	TMR CC	TMR KALIVE	TMR NORSP	TMR POLL	TMR IDLE	
5	4	500	67	0.2	0.125	1.5	0.150	0.125	

				SSCF-NNI PARAMETERS	
TMRT1	TMRT2	TMRT3	N1		
05.0	120.0	0.000925	64552		

						SAAL PARAMETERS	
MAX NRP	TMR SREC	TNRNO CRED	TMR ERM	N BLK	TMR PROV		
1	3600	1.5	0.125	3	0600.0		

								NONCONFIGURABLE PARAMETERS	
SDU SIZE	UU SIZE	FC N	FC NR	FC BC	TSUP	TLOSS	ERMSM	THRES	
272	4	9	--	--	120	1.3	0.1	0.244	

;

rtrv-atm-lps

rlghncxa03w 04-01-04 08:40:18 EST EAGLE 31.3.0

					SSCOP PARAMETERS				
LPSET	MAXCC	MAXPD	MAXSTAT	TMR CC	TMR KALIVE	TMR NORSP	TMR POLL	TMR IDLE	
1	4	500	67	0.2	0.125	1.5	0.150	0.125	
2	4	500	67	0.2	0.125	1.5	0.150	0.125	
3	4	500	67	0.2	0.125	1.5	0.150	0.125	
4	4	500	67	0.2	0.125	1.5	0.150	0.125	
5	4	500	67	0.2	0.125	1.5	0.150	0.125	
6	4	500	67	0.2	0.125	1.5	0.150	0.125	
7	4	500	67	0.2	0.125	1.5	0.150	0.125	
8	4	500	67	0.2	0.125	1.5	0.150	0.125	
9	4	500	67	0.2	0.125	1.5	0.150	0.125	
10	4	500	67	0.2	0.125	1.5	0.150	0.125	
11	4	500	67	0.2	0.125	1.5	0.150	0.125	
12	4	500	67	0.2	0.125	1.5	0.150	0.125	
13	4	500	67	0.2	0.125	1.5	0.150	0.125	
14	4	500	67	0.2	0.125	1.5	0.150	0.125	
15	4	500	67	0.2	0.125	1.5	0.150	0.125	
16	4	500	67	0.2	0.125	1.5	0.150	0.125	
17	4	500	67	0.2	0.125	1.5	0.150	0.125	
18	4	500	67	0.2	0.125	1.5	0.150	0.125	
19	4	500	67	0.2	0.125	1.5	0.150	0.125	
20	4	500	67	0.2	0.1	1.5	0.1	0.1	

				SSCF-NNI PARAMETERS	
LPSET	TMRT1	TMRT2	TMRT3	N1	
1	05.0	015.0	0.000925	64552	
2	05.0	120.0	0.000925	64552	
3	05.0	120.0	0.000925	64552	
4	15.0	010.0	0.000925	64552	
5	05.0	120.0	0.000925	500	
6	05.0	015.0	0.000925	64552	
7	05.0	120.0	0.000925	64552	

8	05.0	120.0	0.000925	64552
9	15.0	010.0	0.000925	64552
10	05.0	015.0	0.000925	64552
11	05.0	120.0	0.000925	64552
12	05.0	120.0	0.000925	64552
13	15.0	010.0	0.000925	64552
14	05.0	015.0	0.000925	64552
15	05.0	120.0	0.000925	64552
16	05.0	120.0	0.000925	64552
17	15.0	010.0	0.000925	64552
18	05.0	015.0	0.000925	64552
19	05.0	120.0	0.000925	64552
20	05.0	120.0	0.000925	64552

SAAL PARAMETERS						
LPSET	MAX NRP	TMR SREC	TNRNO CRED	TMR ERM	N BLK	TMR PROV
1	1	3600	1.5	0.125	3	1200.0
2	1	3600	1.5	0.125	3	1000.0
3	1	60	1.5	0.125	3	0600.0
4	1	3600	1.5	0.125	3	0600.0
5	1	3600	1.5	0.125	3	0600.0
6	1	3600	1.5	0.125	3	1200.0
7	1	3600	1.5	0.125	3	1000.0
8	1	60	1.5	0.125	3	0600.0
9	1	3600	1.5	0.125	3	0600.0
10	1	3600	1.5	0.125	3	0600.0
11	1	3600	1.5	0.125	3	1200.0
12	1	3600	1.5	0.125	3	1000.0
13	1	60	1.5	0.125	3	0600.0
14	1	3600	1.5	0.125	3	0600.0
15	1	3600	1.5	0.125	3	0600.0
16	1	3600	1.5	0.125	3	1200.0
17	1	3600	1.5	0.125	3	1000.0
18	1	60	1.5	0.125	3	0600.0
19	1	3600	1.5	0.125	3	0600.0
20	1	3600	1.5	0.125	3	0600.0

NONCONFIGURABLE PARAMETERS									
SDU SIZE	UU SIZE	N	FC NR	FC BC	TSUP	TLOSS	ERMSM	THRES	
272	4	9	--	--	120	1.3	0.1	0.244	

;

rtrv-atm-lps:lpset=25

tekelecstp 04-01-05 08:40:18 EST EAGLE 31.3.0

ATM LINK PARAMETER SET TIMERS AND PARAMETERS (TIMERS IN SECONDS)

SSCOP PARAMETERS								
LPSET	MAXCC	MAXPD	MAXSTAT	TMR CC	TMR KALIVE	TMR NORSP	TMR POLL	TMR IDLE
25	4	500	67	0.2	0.125	1.5	0.150	0.125

SSCF-NNI PARAMETERS				
TMRT1	TMRT2	TMRT3	N1	
05.0	120.0	0.000925	64552	

SAAL PARAMETERS					
MAX NRP	TMR SREC	TNRNO CRED	TMR ERM	N BLK	TMR PROV
0	3600	1.5	0.125	3	0600.0

NONCONFIGURABLE PARAMETERS									
SDU SIZE	UU SIZE	N	FC NR	FC BC	TSUP	TLOSS	ERMSM	THRES	

```

                272   4       9   --   --   120   1.3       0.1       0.244
;
rtrv-atm-lps
tekelecstp 04-01-05 08:40:18 EST EAGLE 31.3.0
ATM LINK PARAMETER SET TIMERS AND PARAMETERS (TIMERS IN SECONDS)

                                SSCOP PARAMETERS
                                TMR   TMR   TMR   TMR   TMR
                                CC   KALIVE NORSP POLL  IDLE
LPSET  MAXCC  MAXPD  MAXSTAT  CC   KALIVE NORSP POLL  IDLE
1       4      500    67       0.2  0.125  1.5    0.150  0.125
.
.
20      4      500    67       0.2  0.1    1.5    0.1    0.1
21      4      500    67       0.2  0.1    1.5    0.1    0.1
.
.
30      4      500    67       0.2  0.1    1.5    0.1    0.1

                                SSCF-NNI PARAMETERS
                                N1
LPSET  TMRT1  TMRT2  TMRT3  N1
1       05.0   015.0  0.000925  64552
.
.
20      5      30    0.000925  64552
21      5     120    0.000925  1000
.
.
30      5     120    0.000925  64552

                                SAAL PARAMETERS
                                TMR   N   TMR
                                SREC  BLK  PROV
LPSET  MAX   TMR   TNRNO  TMR   N   TMR
       NRP   SREC  CRED   ERM   BLK  PROV
1       1    3600  1.5    0.125  3    1200.0
.
.
20      1    3600  1.5    0.125  3    0600.0
21      0    3600  1.5    0.125  3    1200.0
.
.
30      0    3600  1.5    0.125  3    0600.0

                                NONCONFIGURABLE PARAMETERS
                                SDU   UU   FC   FC
                                SIZE  SIZE N  NR  BC  TSUP  TLOSS  ERSM  THRES
272    4    9   --   --   120   1.3   0.1   0.244
;

```

Legend

LPSET—The link parameter set being changed, **1** to **30**. The system default value for this parameter is **1** for ANSI and **21** for ITU.

ACTION—Copy a set of ATM signaling link parameters from one parameter set to another. The value of this parameter is **copy**. If this parameter is not specified, then the copy action cannot take place.

SCRLPSET—The ATM signaling link parameter set used as a source for the **action=copy** parameter. This parameter can only be specified with the **action=copy** parameter.

MAXCC—The maximum number of transmissions of a BGN, END, ER, or RS PDU. The value of this parameter is from 1 to 10 PDUs. The system default value is 4 PDUs.

MAXPD—The maximum number of SD PDUs that can be sent before a POLL is sent. The value of this parameter is from 5 to 2120 PDUs. The system default value is 500 PDUs.

MAXSTAT—The maximum number of list elements in a STAT PDU. The value of this parameter is from 3 to 67 PDUs. The system default value is 67 PDUs.

TMRCC—The timer, in seconds, used during the connection phase to guard against unacknowledged BGN, END, ER or RS PDUs. The value of this parameter is from .1 to 2 seconds. The system default value is .2 seconds.

TMRKALIVE—The timer, in seconds, used during the transient phase when no SD PDUs are being sent to keep connection up. The value of this parameter is from .025 to .5 seconds. The system default value is .1 seconds.

TMRNOSP—The timer, in seconds, used to check that STAT PDUs are arriving often enough. The value of this parameter is from .5 to 2 seconds. The system default value is 1.5 seconds.

TMRPOLL—The timer, in seconds, used to guarantee that POLL PDUs are sent often enough. The value of this parameter is from .025 to .5 seconds. The system default value is .1 seconds.

TMRIDLE—The timer, in seconds, used during the idle phase when no SD PDUs are being sent to limit time in the idle phase. The value of this parameter is from .025 to 1 seconds. The system default value is .1 seconds.

TMRT1—The time, in seconds, between a link release action and the next link reestablish action during alignment. The value of this parameter is from 1 to 15 seconds. The system default value is 5 seconds.

TMRT2—The total time, in seconds, that SSCF will attempt alignment. The value of this parameter is from 15 to 180 seconds. The system default value is 120 seconds for ANSI and 30 seconds for ITU.

TMRT3—The time, in seconds, between proving PDUs. The value of this parameter is from .00045 to .023 seconds. The system default value is .000925 seconds.

N1—The number of PDUs sent during proving. The value of this parameter is from 500 to 64552 PDUs. The system default value is 64552 PDUs for ANSI and 1000 PDUs for ITU.

MAXNRP—The maximum number of retransmitted PDUs during proving. The value of this parameter is from 1 to 10 PDUs. The system default value is 1 PDU for ANSI and 0 PDUs for ITU.

TMRSREC—The timer, in seconds, used to prohibit closely spaced SSCOP recoveries from occurring. The value of this parameter from is 60 to 10800 seconds. The system default value is 3600 seconds.

TMRNOCRED—The timer, in seconds, used when the no credit exists and PDUs are available to be sent. The value of this parameter is from 1 to 6 seconds. The system default value is 1.5 seconds.

TMRERM—The error rate monitor interval, in seconds. The value of this parameter is from .025 to .5 seconds. The system default value is .1 seconds.

NBLK—The number of monitoring intervals per block. The value of this parameter is from 1 to 10. The system default value is 3.

TMRPROV—The timer, in seconds, used to monitor the status of a link after it is placed into service. The value of this parameter from 60 to 1200 seconds. The system default value is 600 seconds.

SDU SIZE—The SSCOP SDU size (set to 272 octets).

UU SIZE—The SCOP UU size (set to 4 octets).

N—The monitoring intervals spanning a .4 second error event (set to 9).

FC NR—The fixed credit increment value.

FC BC—The fixed credit allocation frequency.

TSUP—The superblock timer for layer management, in seconds.

TLOSS—The loss timer for layer management, in seconds.

ERMSM—The error rate monitor smoothing factor.

THRES—The error rate monitor threshold.

rtrv-atm-prm

Retrieve ATM Parameters

Use this command to display system-wide non-configurable ATM layer parameters for each ATM high-speed signaling link. The data displayed includes the ATM interface parameters and the ATM traffic descriptor values.

Keyword: **rtrv-atm-prm**

Related Commands: **rtrv-atm-lps**

Command Class: Database Administration

Parameters

This command has no parameters.

Example

rtrv-atm-prm

Dependencies

None

Notes

None

Output**rtrv-atm-prm**

```

tekelecstp 04-02-05 08:40:18 EST EAGLE 31.3.0
DS1 DS1 E1 E1 MAX MAX VCI VPI
PCR SCR PCR SCR BT CDVT QOS VPCs VCCs BITS BITS
3622 3622 4528 4528 210 100 3 0 1 16 12
;

```

Legend

The ATM traffic descriptors are displayed in the following fields:

BT—Burst tolerance. The number of consecutive cells on the VCL permitted on the ATM interface by the enforcement process, given the PCR and the line speed.

CDVT—The amount of cell delay variation for the VCL in the network ingress direction.

PCR—The maximum or peak cell rate for the VCL (virtual channel link) T1 is for ANSI and E1 is for ITU.

QOS—Quality of service. The performance objectives that must be met by the ATM VCL when it must discard cells during enforcement of the traffic parameters.

SCR—The average or sustainable cell rate supported on the VCL. T1 is for ANSI and E1 is for ITU.

The ATM interface parameters are displayed in the following fields:

MAX VCCs—The maximum number of simultaneously active Virtual Circuit Connections (VCCs) supported.

MAX VPCs—The maximum number of simultaneously active Virtual Path Connections (VPCs) supported (by the ATM interface).

VCI BITS—The number of allocated VCI bits to be used in the VPIs in the ATM cells for the VCLs supported on the ATM interface.

VPI BITS—The number of bits to be used in the VPIs in the ATM cells for the VPLs terminated on the ATM interface.

rtrv-attr-seculog**Display Security Log Characteristic**

Use this command to display security log attributes that were configured using the **chg-attr-seculog** command.

Keyword: **rtrv-attr-seculog**

Related Commands: **chg-attr-seculog**

Command Class: Security Administration

Parameters

This command has no parameters.

Example

```
rtrv-attr-seculog
```

Dependencies

None

Notes

None

Output

```

rtrv-attr-secu log
  rlgncxa03w 04-01-07 08:16:17 EST  EAGLE 31.3.0
  Security log attributes
  -----
  UPLDALM      yes
  UPSLG        80
;

```

rtrv-bip**Retrieve Board Identification PROMs**

Use this command to show the board identification PROM (BIP) data for a specified card (main assembly or applique) and location.

The following information is displayed for both main assemblies and appliques: board part number, board revision, serial number (7, 8, 11, 12, or 14 digits), manufacturing location and date, and the software match ID.

For main assemblies, the port A ethernet address (if ENT01 record exists) and port B ethernet address (if ENT02 record exists) is also displayed.

For appliques, the applique type and ethernet address (if the applique type is ENET and ENT01 record exists) are also displayed.

**CAUTION**

CAUTION: To have the rtrv-bip command display MAC addresses, the daughterboard must have a type of ENET.

Keyword: rtrv-bip

Related Commands: ,, tst-bip

Command Class: System Maintenance

Parameters

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: 1101–1108, 1111–1113, 1115, 1201–1208, 1211–1218, 1301–1308, 1311–1318, 2101–2108, 2111–2118, 2201–2208, 2211–2218, 2301–2308, 2311–2318, 3101–3108, 3111–3118, 3201–3208, 3211–3218, 3301–3308, 3311–3318, 4101–4108, 4111–4118, 4201–4208, 4211–4218, 4301–4308, 4311–4318, 5101–5108, 5111–5118, 5201–5208, 5211–5218, 5301–5308, 5311–5318, 6101–6108, 6111–6118
 HMUX and HIPR locations are not valid.

:type= (mandatory)

The type of board at the specified location whose BIP information is to be displayed.

Range: mbd, dbd
 mbd — Main assembly
 dbd — Applique

Example

```
rtrv-bip:loc=1201:type=mbd
```

```
rtrv-bip:loc=1201:type=dbd
```

Dependencies

The card location frame, shelf, and slot must be within the allowed range.

The card location must be valid for the command.

The board type **type=dbd** parameter is not valid for card type GPSM-II, HCAP, ATM or DCM. HMUX and HIPR cards do not contain BIP information.

Notes

The **tst-bip** command verifies that the PROM is good by writing to and reading from the PROM. The **rtrv-bip** command shows the level of the BIP, as well as the board part number, the revision number, and the serial number. If the **rtrv-bip** command fails, this indicates that communication to the card has failed, and you might need to replace the card. Contact Tekelec Technical Service at (888) FOR-TKLC to find out if the card can be reprogrammed.

Output

(7-digit serial number of a main assembly card manufactured on the eleventh week of 1993)

rtrv-bip:type=mbd:loc=1201

rlghncxa03w 04-01-04 08:16:20 EST EAGLE 31.3.0

Location: 1201 MBD

Part Number: 850-0187-03
Revision: G2
Serial Number: 3110195

Manufactured at: Calabasas
Week/Year: 11/1993

Software Match ID: EG 001

END OF REPORT

;

(7-digit serial number of a DS0 applique manufactured on the tenth week of 1993)

rtrv-bip:loc=1201:type=dbd

rlghncxa03w 04-01-04 08:16:20 EST EAGLE 31.3.0

Location: 1201 - DBD

Part Number: 850-0196-01
Revision: B1
Serial Number: 3100138

Manufactured at: Calabasas
Week/Year: 10/1993

Software Match ID: EG - 001
Daughterboard Type: DS0

END OF REPORT

;

(8-digit serial number of a main assembly card manufactured on the eleventh week of 1998)

rtrv-bip:loc=1201:type=mbd

rlghncxa03w 04-01-04 08:16:17 EST EAGLE 31.3.0

-
Location: 1201 - MBD

Part Number: 850-0187-03
Revision: G2
Serial Number: 98110195

Manufactured at: Calabasas
Week/Year: 11/1998

Software Match ID: EG - 001

-
END OF REPORT

;

(11-digit serial number of a main assembly card manufactured on the eleventh week of 2002)

rtrv-bip:loc=1201:type=mbd

rlghncxa03w 04-01-04 08:16:17 EST EAGLE 31.3.0

-
Location: 1201 MBD

Part Number: 850-0187-03
Revision: G2
Serial Number: 10202110195

Manufactured at: Calabasas
Week/Year: 11/2002

Software Match ID: EG 001

```

-
END OF REPORT
;
(12-digit serial number of a main assembly card manufactured on the eleventh week of 1998)

rtrv-bip:loc=1201:type=mbd
rlghncxa03w 04-01-04 08:16:17 EST EAGLE 31.3.0
-
Location: 1201 MBD

Part Number: 850-0187-03      Manufactured at: Calabasas
Revision:    G2                Week/Year:      11/1998
Serial Number: 1029811a0195

Software Match ID: EG 001
-
END OF REPORT
;
(14-digit serial number with ethernet port A and B records manufactured on the eleventh week of
2001)

```

```

rtrv-bip:type=mbd:loc=1201
rlghncxa03w 04-02-04 08:16:17 EST EAGLE 31.3.0
-----
Location: 1201 - MBD

Part Number: 850-0187-03      Manufactured at: Calabasas
Revision:    G2                Week/Year:      11/2001
Serial Number: 102200111a0195

Software Match ID: EG - 001

Ethernet Port A Address: 00001704000C
Ethernet Port B Address: 000017040
-----
END OF REPORT
;

```

The following example shows output when the daughterboard is of type ENET.

```

rtrv-bip:loc=1111:type=dbd
Command Accepted - Processing

06-06-09 10:43:51 EST EAGLE 35.0.0
rtrv-bip:loc=1111:type=dbd
Command entered at terminal #3.
;

06-06-09 10:43:51 EST EAGLE 35.0.0
-----
Location: 1111 - DBD

Part Number: 850064602      Manufactured at: Calabasas
Revision:    A                Week/Year:      05/2005
Serial Number: 10205055052

Software Match ID: EG - 001
DBD Type: Ethernet
Ethernet ENT01 Address: 000a17000280
Ethernet ENT02 Address: 000a17000281
Ethernet ENT03 Address: 000a1700026c
Ethernet ENT04 Address: 000a1700026d
-----
;END OF REPORT

```

;

Legend

LOCATION—The card location and board type for the BIP information.

PART NUMBER—The part number of the card in the specified card location.

REVISION—The hardware version of the card.

SERIAL NUMBER—The serial number (7, 8, 11, 12, or 14 digits) of the card. Table 5-66 shows the serial number formats.

Table 5-66. Serial Number Formats

Serial Numbers	Formats
7-digit serial number	ywwxxxx
8-digit serial number	yywwxxxx
11-digit serial number	nnnyywwxxxx
12-digit serial number	nnnyyww*xxxx
14-digit serial number	nnnyyyww*xxxx
Legend y = year digit (0–9) w = week digit (0–9) n = product identifier digit (0–9) x = serial number digit (0–F hexadecimal) * = special character (0–9, a–z, or A–Z, alphanumeric characters)	

SOFTWARE MATCH ID—This field is used to check hardware and software compatibility.

DAUGHTERBOARD TYPE—The type of applique.

MANUFACTURED AT—The factory location where the card was manufactured.

WEEK/YEAR—The week (1–52) and the year (4 digits) that the card was manufactured.

rtrv-card**Retrieve Card**

Use this command to display the information about a card. The command displays the card type, the application the card is running, the linkset name, the signaling links, and the signaling link codes. If no parameter is specified, the command displays information for all cards defined by the **ent-card** command. If the **loc** parameter is specified, the command displays information for the specified card only.

Keyword: rtrv-card

Related Commands: dlt-card, ent-card, init-card, rept-stat-card, rmv-card, rst-card

Command Class: Database Administration

Parameters

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1117, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Default: Retrieve all

:links= (optional)

Links Provision Status. For the card in the location specified by the **loc** parameter, all links, only equipped links, or only unequipped links are displayed. If the parameter is not specified, only the equipped links are displayed.

Range: all, equip, unequip

all — Display all possible links for the card.

equip — Display only links that are equipped on the card.

unequip — Display only links that are allowed but not equipped on the card.

Default: equip

Example

```
rtrv-card
```

```
rtrv-card:loc=1205
```

Dependencies

The card location slot must be between **1** and **16** and not **9** or **10**.

The card location cannot be **1114**, **1116**, **1117**, or **1118**.

The shelf location must be **11xx**, **12xx**, **13xx**, **21xx**, **22xx**, **23xx**, **31xx**, **32xx**, **33xx**, **41xx**, **42xx**, **43xx**, **51xx**, **52xx**, **53xx**, or **61xx**.

The specified card location must be equipped in the database.

Notes

The provisioning method of an MPL or MPL-T (multi-port LIM) and a two-port LIM running the **ss7ansi** application is the same, as is the function that the two cards perform. Both cards are provisioned with the **ss7ansi** application to allow the MPLs to replace a two-port LIM without having to reprovision the LIM in the database. The MPLs support only the LIMDS0 interface, and the **appl** value must be **ss7ansi**. The MPLs run the **ss7ml** GPL (see the **rept-stat-gpl** command), which allows the MPL cards to support eight signaling link ports. The **rtrv-card** command displays the status of all ports of the MPL card and displays its application as **ss7ansi**.

The provisioning method of an E1/T1 MIM (Multi-Channel Interface Module) and a two-port E1 card running the **ss7ansi** or **ccs7itu** application is the same, as is the function that the two cards perform. Both cards are provisioned with the **ss7ansi** or **ccs7itu** application to allow the E1/T1 MIM card to replace a two-port E1 card without having to reprovision the E1 card in the database. The **appl** value can be **ss7ansi** or **ccs7itu**. The E1/T1 MIM runs the **ss7ml** GPL (see the **rept-stat-gpl** command), which allows the card to support eight signaling link ports. The **rtrv-card** command displays the status of all ports of the E1/T1 card and displays its application as **ss7ansi** or **ccs7itu**.

Output

rtrv-card

```

rlghncxa03w 04-07-15 16:34:56 EST EAGLE 31.6.0
CARD   TYPE      APPL      LSET NAME      LINK SLC LSET NAME      LINK SLC
1101   TSM        SCCP      ----- A    -- ----- B    --
1102   TSM        GLS       ----- A    -- ----- B    --
1103   ACMENET    STPLAN   ----- A    -- ----- B    --
1104   ACMENET    STPLAN   ----- A    -- ----- B    --
1113   GPSM       OAM
1114   TDM-A
1115   GPSM       OAM
1116   TDM-B
1117   MDAL
1201   LIMV35     CCS7ITU   lsn156         A    0    lsn1234        B    1
1205   LIME1      CCS7ITU   e1lim1         A    0    ----- B    --
                        ----- A1   -- ----- B1   --
                        ----- A2   -- ----- B2   --
                        ----- A3   -- ----- B3   --
1206   LIMCH      CCS7ITU   e1lim1         A    1    ----- B    --
                        ----- A1   -- ----- B1   --
                        ----- A2   -- ----- B2   --
                        ----- A3   -- ----- B3   --
1207   LIME1      SS7ANSI   e1lsn1         A    0    e1jwk4         B    1
                        e1lsn2         A1   2    e1jwk3         B1   2
                        e1lsn3         A2   4    e1jwk2         B2   15
                        ----- A3   -- e1jwk1         B3   16
1208   LIMCH      SS7ANSI   e1jwk5         A    8    e1lsn1         B    1
                        e1jwk6         A1   9    e1lsn7         B1   13
                        e1jwk7         A2   10   e1lsn6         B2   14
                        e1jwk8         A3   10   e1lsn5         B3   15
1211   LIMT1      SS7ANSI   t1lsn1         A    0    t1lsn1         B    1
                        ----- A1   -- t1lsn1         B1   2
                        t1lsn5         A2   0    t1lsn6         B2   6
                        t1lsn7         A3   13   ----- B3   --
1212   LIMCH      SS7ANSI   t1lsn1         A    3    t1lsn13        B    10
                        t1lsn10        A1   16   t1lsn14        B1   10
                        t1lsn11        A2   1    t1lsn15        B2   4
                        t1lsn12        A3   8    ----- B3   --
;

```

The following example shows a retrieval by the specified card location:

rtrv-card:loc=1205

```

rlghncxa03w 04-01-15 16:34:56 EST EAGLE 31.3.0
CARD   TYPE      APPL      LSET NAME      LINK SLC LSET NAME      LINK SLC
1205   LIMDS0     SS7ANSI   LS1            A    0    LS1            B    1
                        LS1            A1   2    LS1            B1   3
                        LS1            A2   4    LS1            B2   5
                        LS1            A3   6    LS1            B3   7
;

```

The following example shows the output for a 2-port E1 card:

rtrv-card:loc=1205

```

rlghncxa03w 04-01-15 16:34:56 EST EAGLE 31.3.0
CARD   TYPE      APPL      LSET NAME      LINK SLC LSET NAME      LINK SLC
1205   LIME1      CCS7ITU   e1lim1         A    0    ----- B    --
                        ----- A1   -- ----- B1   --
                        ----- A2   -- ----- B2   --
                        ----- A3   -- ----- B3   --
;

```


The following example shows the output for an E1/T1 MIM card used as E1 card:

rtrv-card: loc=1207

```
rlghncxa03w 04-01-15 16:34:56 EST EAGLE 31.3.0
CARD  TYPE      APPL      LSET NAME      LINK SLC  LSET NAME      LINK SLC
1207  LIME1      SS7ANSI    e1lsn1         A    0    e1jwk4         B    1
                      e1lsn2         A1   2    e1jwk3         B1   2
                      e1lsn3         A2   4    e1jwk2         B2  15
                      ----- A3   --    e1jwk1         B3  16
```

;

The following example shows the output for an E1/T1 MIM cards used as a T1 card.

rtrv-card: loc=1211

```
rlghncxa03w 04-01-15 16:34:56 EST EAGLE 31.3.0
CARD  TYPE      APPL      LSET NAME      LINK SLC  LSET NAME      LINK SLC
1211  LIMT1      SS7ANSI    t1lsn1         A    0    t1lsn1         B    1
                      ----- A1   --    t1lsn1         B1   2
                      t1lsn5         A2   0    t1lsn6         B2   6
                      t1lsn7         A3  13    ----- B3   --
```

;

The following example shows the output when MPL or MPL-T (multi-port LIM) cards are provisioned on the system:

rtrv-card

```
rlghncxa03w 03-03-15 16:34:56 EST EAGLE 30.0.0
CARD  TYPE      APPL      LSET NAME      LINK SLC  LSET NAME      LINK SLC
1201  LIMDS0      SS7ANSI    LS1            A    0    LS1            B    1
                      LS1            A1   2    LS1            B1   3
                      LS1            A2   4    LS1            B2   5
                      LS1            A3   6    LS1            B3   7
1202  LIMDS0      SS7ANSI    LS2            A    0    LS3            B    0
                      ----- A1   --    LS3            B1   1
                      LS2            A2   1    LS2            B2   2
                      ----- A3   --    ----- B3   --
1203  LIMDS0      SS7GX25    LS4            A    0    LS4            B    1
1204  LIMATM      ATMANSI    LS5            A    0    ----- B    --
1205  DCM          IPLIM      ----- A    --    LS6            B    0
1102  DSM          VSCCP      ----- A    --    ----- B    --
1113  GPSM          OAM
1114  TDM-A
1115  GPSM          OAM
1116  TDM-B
1117  MDAL
1303  DCM          IPGWI      ipgwitun       A    00    ----- B    --
```

;

The following example shows the output when an MCPM card for the Measurements Platform feature is provisioned on the system:

rtrv-card: loc=1205

```
rlghncxa03w 04-01-15 16:34:56 EST EAGLE 31.3.0
CARD  TYPE      APPL      LSET NAME      LINK SLC  LSET NAME      LINK SLC
1205  MCPM        MCP        ----- A    00    ----- B    --
```

;

The following example shows the output when an IPGWI card is provisioned on the system:

rtrv-card: loc=1205

```
rlghncxa03w 04-01-15 16:34:56 EST EAGLE 31.3.0
CARD  TYPE      APPL      LSET NAME      LINK SLC  LSET NAME      LINK SLC
1303  DCM          IPGWI      ipgwitun       A    00    ----- B    --
```

;

The following example shows the output when an STC card for the EAGLE 5 Integrated Monitoring Support feature is provisioned on the system:

rtrv-card: loc=1205

```
rlghncxa03w 04-01-15 16:34:56 EST EAGLE 31.3.0
CARD   TYPE      APPL      LSET NAME      LINK SLC LSET NAME      LINK SLC
1205   STC        EROUTE    lsntest1       A    00  lsntest2       B    01
;
```

The following example shows the output for an SSEDCCM card are used as IPLIM to 8 Points card:

rtrv-card: loc=1205

```
rlghncxa03w 04-01-15 16:34:56 EST EAGLE 31.3.0
CARD   TYPE      APPL      LSET NAME      LINK SLC LSET NAME      LINK SLC
1205   DCM        IPLIM      LS6             A    0   LS6             B    1
                        LS6             A1   2   LS6             B1   3
                        LS6             A2   4   LS6             B2   5
                        LS6             A3   6   LS6             B3   7
;
```

The following example includes an SSEDCCM cards used as an IPLIM to 8 Points card:

rtrv-card

```
rlghncxa03w 03-03-15 16:34:56 EST EAGLE 30.0.0
CARD   TYPE      APPL      LSET NAME      LINK SLC LSET NAME      LINK SLC
1201   LIMDS0     SS7ANSI    LS1             A    0   LS1             B    1
                        LS1             A1   2   LS1             B1   3
                        LS1             A2   4   LS1             B2   5
                        LS1             A3   6   LS1             B3   7
1202   LIMDS0     SS7ANSI    LS2             A    0   LS3             B    0
                        ----- A1   --  LS3             B1   1
                        LS2             A2   1   LS2             B2   2
                        ----- A3   --  ----- B3   --
1203   LIMDS0     SS7GX25    LS4             A    0   LS4             B    1
1204   LIMATM     ATMANSI    LS5             A    0   ----- B    --
1205   DCM        IPLIM      LS6             A    0   LS6             B    1
                        LS6             A1   1   LS6             B1   2
                        LS6             A2   4   LS6             B2   5
                        LS6             A3   6   LS6             B3   7
1102   DSM        VSCCP      ----- A    --  ----- B    --
1113   GPSM       OAM
1114   TDM-A
1115   GPSM       OAM
1116   TDM-B
1117   MDAL
;
```

The following example includes an IPSM card:

rtrv-card

```
rlghncxa03w 04-01-15 16:34:56 EST EAGLE 31.3.0
CARD   TYPE      APPL      LSET NAME      LINK SLC LSET NAME      LINK SLC
1201   LIMDS0     SS7ANSI    LS1             A    0   LS1             B    1
1202   LIMDS0     SS7ANSI    LS2             A    0   LS3             B    0
                        ----- A1   --  LS3             B1   1
                        LS2             A2   1   LS2             B2   2
                        ----- A3   --  ----- B3   --
1203   LIMDS0     SS7GX25    LS4             A    0   LS4             B    1
1204   LIMATM     ATMANSI    LS5             A    0   ----- B    --
1205   DCM        IPLIM      LS6             A    0   LS6             B    1
1103   IPSM       IPS
1113   GPSM       OAM
1114   TDM-A
1115   GPSM       OAM
```

```

1116 TDM-B
1117 MDAL

```

```
;
```

The following example includes an SSEDCCM card used as an IPLIM to 8 Points card:

rtrv-card

```

tekelecstp 04-01-17 15:09:32 EST EAGLE 31.3.0
CARD  TYPE      APPL      LSET NAME      LINK SLC  LSET NAME      LINK SLC
1201  LIMDS0     SS7ANSI    LS1           A    0    LS1           B    1
           LS1           A1   2    LS1           B1   3
           LS1           A2   4    LS1           B2   5
           LS1           A3   6    LS1           B3   7
1204  LIME1ATM   ATMITU     LS2           A    0    -----      --   --
1205  LIMATM     ATMANSI    LS5           A    0    -----      --   --
1113  GPSM       OAM
1114  TDM-A
1115  GPSM       OAM
1116  TDM-B
1117  MDAL

```

```
;
```

The following example shows the output for an SSEDCCM card are used as an IPLIM to 8 Points card:

rtrv-card: loc=1204

```

tekelecstp 04-01-17 15:09:32 EST EAGLE 31.3.0
CARD  TYPE      APPL      LSET NAME      LINK SLC  LSET NAME      LINK SLC
1204  LIME1ATM   ATMITU     LS2           A    0    -----      --   --

```

```
;
```

Legend

CARD—The card location as stenciled on the shelf of the system.

TYPE—The type of card. (The DCM and SSEDCCM cards are card type DCM).

APPL—The application associated with each card in the display.

LSET NAME—The linkset name associated with the cards in the display.

LINK

—The signaling link associated with the linkset. If the card is an MPL or MPL-T (TYPE is **limds0**, APPL is **ss7ansi**) or an E1/T1 MIM (TYPE can be **lime1**, **limt1**, or **limch**; APPL can be **ss7ansi** or **ccs7itu**), the card can support 8 ports (**a**, **a1**, **a2**, **a3**, **b**, **b1**, **b2**, and **b3**).

SLC—The signaling link code.

rtrv-cmd

Retrieve Command Attributes

Use this command to retrieve the list of command classes to which a command is assigned. You can retrieve output for one command, commands in one command class, or all commands.

Keyword: **rtrv-cmd**

Related Commands: **chg-cmd**

Command Class: Basic

Parameters

:class= (optional)

The command class whose attributes are to be retrieved.

Range: *ayyyyy*

One alphabetic character followed by up to 5 additional alphanumeric characters.

Output

The following example shows the command classes to which the **rept-stat-slk** command is assigned (non-configurable class **sys** and user-configured classes **u01**, **u02**, **krb**, and **u11**):

```
rtrv-cmd:cmd="rept-stat-slk"
    eagle10404 04-01-22 16:30:56 EST EAGLE 31.3.0
    cmd          CLASS
    rept-stat-slk sys, u01, u02, krb, u11
;

```

The following example shows the commands assigned to user-configured command class **krb**:

```
rtrv-cmd:class=krb
    eagle10404 04-01-22 16:30:56 EST EAGLE 31.3.0
    CMD          CLASS
    rept-stat-slk sys, u01, u02, krb, u11
    act-slk       link, u09, krb
    ent-user      sa, krb, abc, u23
    alw-card      sys, u09 dab, krb
;

rtrv-cmd:class=link
    eagle10404 04-01-22 16:30:56 EST EAGLE 31.3.0
    CMD          CLASS
    alw-slk       link, u11
    unhb-slk      link
    inh-slk       link, abc
    rtrv-meas-sched link, abc, def
    act-lbp       link
    act-dlk       link
    act-slk       link
    act-lpo       link
    blk-slk       link, abc, u23, u31
    dact-lbp      link
    canc-dlk      link
    cancel-lpo    link, u01, u02, u03, u04, u05, u06, u07, u08, u09, u10,
    u11, u12, u13
    cancel-slk    link
    ublk-slk      link, u01, u02, u03, u04, u05, u06, u07, u08, u09, u10,
    u11, u12, u13, u14, u15, u16, u17, u18, u19, u20, u21,
    u22, u23, u24, u25, u26, u27, u28, u29, u30, u31, u32
    rept-x25-meas link
    rept-meas     link
    chg-meas      link
    tst-dlk       link, krb
    tst-slk       link
;

rtrv-cmd
    eagle10404 04-01-22 16:30:56 EST EAGLE 31.3.0
    CMD          CLASS
    alw-slk       link, u11
    ent-user      sa
    unhb-slk      link
    rtrv-attr-secalog sa, u31
    inh-slk       link, abc
    rtrv-meas-sched link, abc, def
    act-lbp       link
    act-dlk       link
    act-slk       link
    rtrv-secalog  sa, abc, def, ghi
    act-lpo       link

```

```

blk-slk          link, abc, u23, u31
dact-lbp         link
canc-dlk         link
inh-card         sys
canc-lpo         link, u01, u02, u03, u04, u05, u06, u07, u08, u09, u10,
                u11, u12, u13
canc-slk         link
ublk-slk         link, u01, u02, u03, u04, u05, u06, u07, u08, u09, u10,
                u11, u12, u13, u14, u15, u16, u17, u18, u19, u20, u21,
                u22, u23, u24, u25, u26, u27, u28, u29, u30, u31, u32
rept-x25-meas    link
inh-trm          sys, krb
rept-meas        link
ent-lnp-sub      lnpsub, u22
.
.
.
chg-meas         link
tst-dlk          link, krb
tst-slk          link
;

```

rtrv-cmdclass

Retrieve Command Class

Use this command to retrieve the name and description of one command class or all command classes.

Keyword: **rtrv-cmdclass**

Related Commands: **chg-cmdclass**

Command Class: Basic

Parameters

:class= (optional)

The command class whose name and description are to be retrieved.

Range: *ayyyyy*

1 alphabetic character followed by up to 5 alphanumeric characters

Example

```
rtrv-cmdclass: class=krb
```

```
rtrv-cmdclass
```

Dependencies

The Command Class Management feature must be enabled and turned on before a configurable command class name can be specified in the **class** parameter.

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before command classes LNPBAS, LNPDB, and LNPSUB can be specified in the **class** parameter.

The value of the **class** parameter must be a valid configurable or non-configurable command class name.

Notes

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before classes LNPBAS, LNPDB, and LNPSUB will appear in the command output.

The Command Class Management feature must be enabled and turned on before configurable command classes will appear in the command output.

Output

In the following examples, the classes u01, u03, u05, and u32 are default configurable command class names. The classes krb and dab are user-assigned configurable command class names; the user changed default configurable command class name u02 to krb and changed default configurable command class name u04 to dab. The descriptions of classes krb and dab were entered with the **descr** parameter when the class names were changed with the **chg-cmdclass** command.

```
rtrv-cmdclass: class=krb
eagle10404 04-01-22 16:30:56 EST EAGLE 31.3.0
class          descr
krb            my command class description
;

rtrv-cmdclass
eagle10404 04-01-22 16:30:56 EST EAGLE 31.3.0
class          descr
link           link maintenance commands
sa             security administration commands
sys            system maintenance commands
.
.
.
u01            configurable command class 1
krb            my command class description
u03            configurable command class 3
dab            your command class description
u05            configurable command class 5
.
.
.
u32            configurable command class 32
;
```

rtrv-csl

Retrieve Common Screening List

Use this command to retrieve all Common Screening List (CSL) entries for a specified feature, a list of screening entries for the specified feature and screening list name, or a specific DS or PC value for a particular feature and screening list name. The Common Screening List commands are used to tailor certain types of general screening information to specific features.

Keyword: **rtrv-csl**

Related Commands: **dlt-csl, ent-csl, rtrv-csl, rtrv-ctrl-feat**

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:ds= (optional)

Digit string. This parameter specifies a unique string of digits that is used by the specified screening feature.

Either the **ds** parameter or the **pc** parameter must be specified. Both parameters cannot be specified in the same command.

Range: 1-15 digits

Valid digits are **0-9, a-f, A-F**.

- 1-15 digits—Prepaid IDP Query Relay **ccnc** list
- 1-5 digits—Prepaid IDP Query Relay **delpfx** list
- 1-6 digits—Prepaid IDP Query Relay **gta** list
- 1-4 digits—Prepaid IDP Query Relay **skbcsm** list
- 4 digits—IDP Screening for Prepaid **skts** list
- 1-15 digits—IDP Screening for Prepaid **insl** list

:feature= (optional)

Feature Name. The name of the enabled screening feature for which the command is entered. Enter the name as it appears in the **rtrv-ctrl-feat** command description output example.

Enter enough of the feature name to make the name unique if two features begin with the same word or acronym.

Either the **pn** parameter or the **feature** parameter must be specified to identify the feature.

Range:

abcdefghijklmnopqrstuvwxyz

1 alphabetic character followed by up to 24 optional alphanumeric characters, including spaces and special characters, enclosed in double quotation marks (" ").

Enter enough of the feature name to make the name unique if two features begin with the same word or acronym.

The following feature names are valid for this command:

- Prepaid IDP Query Relay
- IDP Screening for Prepaid.

:list= (optional)

The name of the Common Screening List that is associated with the feature.

The **list** parameter must be specified when the feature uses more than one type of Common Screening List.

Range:

delpfx, gt, skbcsm, ccnc, skts, insl

delpfx—Delete Prefix List

gt—Global Title List

skbcsm—SK+BCSM List

ccnc—CC+NC List

skts—SK+TS List

insl—In Network Subscriber List

The following screening lists are valid for the indicated features:

- **ccndc, delpfx, gt, skbcsm**—Prepaid IDP Query Relay
- **skts, insl**—IDP Screening for Prepaid feature

:pc= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: pca

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001–005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006–255**.

The point code **000-000-000** is not a valid point code.

:pc/pca/pci/pcn/pcn24= (optional)

Point code. Either the *ds* or *pc* parameter must be specified for the command. Currently, there are no common screening list features that use point codes.

:pci= (optional)

ITU international point code with subfields *zone-area-id*.

Range: **0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

The point code **0-000-0** is not a valid point code.

zone—**0–7**

area—**000–255**

id—**0-7**

:pcn= (optional)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:pcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000–255**

ssa—**000–255**

sp—**000–255**

:pn= (optional)

Part Number. The 9-digit "893xxxxxx" part number of the feature for which the command is entered. The **rtrv-ctrl-feat** command description shows the part number in the command output example.

Either the **pn** parameter or the **feature** parameter must be specified to identify the feature.

Range: **893000000-893999999**

The first 3 digits are **893**. Do not separate the digits with dashes or spaces.

The following part numbers are valid for this command:

- **893016001**—Prepaid IDP Query Relay feature
- **893015501**—IDP Screening for Prepaid feature

Example

```
rtrv-csl
rtrv-csl:feature="Prepaid IDP Query Relay":list=ccnc:ds=456789
rtrv-csl:feature="Prepaid IDP Query Relay":list=ccnc
rtrv-csl:feature="IDP Screening for
Prepaid":list=insl:ds=123456789bcdEF
```

Dependencies

The specified feature name must be for a feature that uses a Common Screening List. The feature name must be specified as it appears in the **rtrv-ctrl-feat** command output example. Enough of the name must be specified to make the name unique when two features begin with the same word or acronym. The following features use a Common Screening List:

- IDP Screening for Prepaid
- Prepaid IDP Query Relay

The **list** parameter value must be valid for the specified screening feature. The following **list** parameter values are valid for the indicated feature:

- **skts** , **insl** —IDP Screening for Prepaid
- **gt**, **ccndc**, **delpfx**, **skbcsn**—Prepaid IDP Query Relay

The following parameters are allowed with the indicated common screening list type:

- **list=gt—ds** parameter
- **list=ccndc—ds** parameter
- **list=delpfx—ds** and **p1** parameters
- **list=skbcsn—ds** parameter
- **list=skts—ds** parameter
- **list=insl—ds** parameter

Notes

None

Output

Retrieve all screening entries for all screening lists for all enabled screening list features.

rtrv-csl

tekelecstp 05-08-21 15:18:41 EST EAGLE 34.1.0

Prepaid IDP Query Relay

SK+BCSM List

DS

3104

3212

4323

5434

6545

7566

SK+BCSM List table is (6 of 25) 24% full

Prepaid IDP Query Relay

GT List

DS

234

354

678

765

789

987

GT List table is (6 of 50) 12% full

Prepaid IDP Query Relay

Delete Prefix List

DS

543

678

765

879

890

Delete Prefix List table is (5 of 10) 50% full

Prepaid IDP Query Relay

CC+NC List

DS

7848

24574

67547

224723

656354

546535

CC+NC List table is (6 of 20) 30% full

IDP Screening for Prepaid

SK+TS List

DS

1233

1234

SK+TS List table is (2 of 25) 8% full

```
IDP Screening for Prepaid
INSL List
DS
```

```
-----
1233
1235
```

```
INSL List table is (3 of 50) 6% full
```

```
;
```

Retrieve the specified screening entry for the the specified feature and screening list.

rtrv-csl:feature="Prepaid IDP Query Relay":list=ccnc:ds=456789

```
tekelecstp 05-07-12 08:45:21 EST EAGLE 34.1.0
Prepaid IDP Query Relay
CC+NC List
DS
```

```
-----
456789
```

```
CC+NC List table is (1 of 20) 5% full
```

```
;
```

Retreive all screening entries for the specified feature and screening list.

rtrv-csl:feature="Prepaid IDP Query Relay":list=ccnc

```
tekelecstp 05-07-12 08:44:50 EST EAGLE 35.0.0
Prepaid IDP Query Relay
CC+NC List
DS
```

```
-----
123
456789
754532
```

```
CC+NC List table is (3 of 20) 15% full
```

```
;
```

Retrieve screening entries for all screening lists for the specified feature.

rtrv-csl:feature="Prepaid IDP Query Relay"

```
tekelecstp 05-07-12 08:44:50 EST EAGLE 34.1.0
Prepaid IDP Query Relay
CC+NC List
DS
```

```
-----
123
456789
754532
```

```
CC+NC List table is (3 of 20) 15% full
```

```
Prepaid IDP Query Relay
Delete Prefix List
DS
```

```
-----
45678
75453
```

```
Delete Prefix List table is (2 of 10) 20% full
```

```
Prepaid IDP Query Relay
GT List
DS
```

```
-----
```

```

4567890123abcde

GT List table is (1 of 50) 2% full

Prepaid IDP Query Relay
SK+BCSM List
DS
-----
4321
8765

SK+BCSM List table is (2 of 25) 8% full

;

rtrv-csl:feature="IDP Screening for Prepaid"
tekelecstp 05-07-12 08:44:50 EST EAGLE 34.3.0

IDP Screening for Prepaid
SK+TS List
DS
-----
1233
1234

SK+TS List table is (2 of 25) 8% full

IDP Screening for Prepaid
INSL List
DS
-----
1233
1235
123456789012345

INSL List table is (3 of 50) 6% full

;

rtrv-csl:feature="IDP Screening for Prepaid":list=skts
tekelecstp 05-07-12 08:44:50 EST EAGLE 34.3.0

IDP Screening for Prepaid
SK+TS List
DS
-----
1233
1234

SK+TS List table is (2 of 25) 8% full

;

```

rtrv-cspc**Retrieve Concerned Signaling Point Code**

Use this command to show one or more lists of concerned signaling point codes that are to be notified when subsystem-prohibited or subsystem-allowed messages are received for an associated mate application.

Keyword: rtrv-cspc

Related Commands: dlt-cspc, ent-cspc

Command Class: Database Administration

Parameters

:grp= (optional)

Group name

Range: ayyyyyyy

1 alphabetic character followed by up to 7 alphanumeric characters

Default: Retrieve all.

Example

rtrv-cspc

rtrv-cspc:grp=grp01

Dependencies

If specified, the group name must exist in the database.

Notes

If no group parameter is specified, a summary list of group names is displayed with an indication of network type and a percent full indication for each group.

Output

When the ANSI-ITU-China SCCP Conversion feature is on, point codes from mixed domains are allowed in a group.

rtrv-cspc

```
rlghncxa03w 04-01-07 11:43:02 EST EAGLE 31.3.0
CSPC GRP    NETWORK                PERCENT FULL
Grp01      ANSI                    2%
Grp02      ANSI, ITU, ITU-N24      3%
Grp03      ITU                    2%
;
```

When the Spare Point Code Support feature is on, groups can include spare point codes with the **s-** prefix. The ANSI-ITU-China SCCP Conversion feature is on in this example.

rtrv-cspc:grp=grp02

```
rlghncxa03w 05-01-07 11:43:02 EST EAGLE 31.12.0
CSPC GRP    PC                    Type
GRP02      001-012-123            A
           001-012-124            A
           7-089-0                I
           s-2-021-4              I
           s-00789                N
;
```

When the ANSI-ITU-China SCCP Conversion feature is not on, point codes from only one domain are allowed in a group.

rtrv-cspc

```
rlghncxa03w 04-01-07 11:43:02 EST EAGLE 31.3.0
CSPC GRP    NETWORK                PERCENT FULL
Grp01      ANSI                    2%
Grp03      ITU                    2%
;
```

When the Spare Point Code Support feature is on, groups can include spare point codes with the **s-** prefix. The ANSI-ITU-China SCCP Conversion feature is not on in this example.

rtrv-cspc:grp=groupi

```
rlghncxa03w 05-01-07 11:43:02 EST EAGLE 31.12.0
CSPC GRP    PCI
groupi      7-089-0
           s-2-021-4
;
```

Legend

CSPC PC TABLE IS 15% FULL—The relative size of the CSPC point code tables.

CSPC GRP—The name of the CSPC broadcast group.

NETWORK—The network type or types associated with the point code or codes in the group. (When no parameters are specified in the command, only the groups are listed. The **grp** parameter must be specified to list the point codes in the specified group.)

PERCENT FULL—The relative size of the CSPC broadcast group.

PC—The point codes that make up the CSPC broadcast group.

TYPE—The network type of the point code in the group. (The **grp** parameter is specified in the command to list the point codes in the specified group.)

rtrv-ctrl-feat**Retrieve Controlled Feature**

Use this command to retrieve the status of feature access key controlled features that are purchased and enabled in the system.

Keyword: **rtrv-ctrl-feat**

Related Commands: **chg-ctrl-feat, enable-ctrl-feat**

Command Class: Database Administration

Parameters

:enable= (optional)

Retrieve controlled features that are enabled with either temporary feature access keys or permanent feature access keys.

Range: **temp, perm**

Default: Retrieve controlled features for both temporary and permanent feature access keys

:expired= (optional)

Retrieve controlled features with expired temporary feature access keys.

Range: **yes, no**

Default: **no**

:partnum= (optional)

The Part Number to retrieve or the command.

Range: **893000000 - 893999999**

Do not include dashes in the 9-digit number.

Default: Retrieve all controlled features

:status= (optional)

Retrieve features with the specified status (On or Off).

Range: **on, off**

Default: Retrieve features with On and Off status

Example

```
rtrv-ctrl-feat
```

```
rtrv-ctrl-feat:partnum=893000110
```

```
rtrv-ctrl-feat:enable=perm
```

Dependencies

None

Notes

When the **enable=perm** parameter is specified, the **expired** parameter value is understood to be **no**.

The product feature access keys (EAGLE5, EAGLE, and IP⁷) are not mutually exclusive. The hierarchy for product feature access keys is EAGLE5, then EAGLE, then IP⁷. This means that if the EAGLE5 feature access key is on, the product is EAGLE5 regardless of the setting of the other product feature access keys. Some features require that a specific product feature access key is enabled and turned on.

For systems being upgraded, the product feature access key for the specific product is turned on. For example, upgrading from an EAGLE 5 ISS release in a system that uses no EAGLE 5 features to a release that uses at least one EAGLE 5 feature causes the EAGLE 5 product key to be enabled and turned on during the conversion.

For new installation, no product feature access keys are on. The appropriate key for the highest required product in the hierarchy must be enabled and turned on.

Output

The following output examples will differ from the output shown at your terminal and might include features that are not supported in your system. A feature must be purchased before you can enable the feature and turn the feature on. If you are not sure whether you have purchased a feature, contact your Tekelec Sales Representative or Account Representative.

If a Part Number (**partnum** parameter) is entered that belongs to a feature associated with quantity, the output will show which quantity is currently enabled on the system, even if the specified Part Number is for a different quantity. The output will also include the temporary enabled information, if applicable.

rtrv-ctrl-feat

```
rlghncxa03w 06-05-29 16:40:40 EST EAGLE5 35.1.0
The following features have been permanently enabled:
Feature Name          Partnum    Status  Quantity
IPGWx Signaling TPS   893012805  on      2000
HC-MIM SLk Capacity   893012707  on       64
ISUP Normalization    893000201  on      ----
Command Class Management 893005801  on      ----
LNP Short Message Service 893006601  on      ----
Prepaid SMS Intercept Ph1 893006701  on      ----
Intermed GTT Load Sharing 893006901  on      ----
G-Port Circ Route Prevent 893007001  on      ----
XGTT Table Expansion   893006101  on    400000
XMAP Table Expansion   893007710  on     3000
Large System # Links   893005910  on     2000
Routesets              893006403  on     8000
EAGLE5 Product         893007101  on      ----
EAGLE Product          893007201  off     ----
IP7 Product            893007301  off     ----
Network Security Enhance 893009101  off     ----
Telnet                 893005701  on      ----
Port Chk for MO SMS    893009301  on      ----
LNP ELAP Configuration 893010901  on      ----
LNP ported TNs         893011023  on   228000000
LNP ported LRNs        893010501  on    150000
LNP ported NPANXXs     893009402  on    300000
15 Minute Measurements 893012101  off     ----
EIR                    893012301  on      ----
EAGLE OA&M IP Security  893400001  off     ----
SCCP Conversion        893012001  on      ----
SE-HSL SLK Capacity    893013005  on       64
GSM Map Screening (GMS) 893013201  on      ----
Enhanced GMS (EGMS)    893012401  on      ----
MTP MAP Screening      893013501  on      ----
Spare Point Code Support 893013601  on      ----
GSM MAP SRI Redirect    893014001  on      ----
ISUP NP with EPAP       893013801  on      ----
Origin-Based MTP Routing 893014201  on      ----
Prepaid IDP Query Relay 893016001  on      ----
IDP Screening for Prepaid 893015501  on      ----
Flexible GTT Load-Sharing 893015401  on      ----
Origin Based SCCP Routing 893014301  on      ----
```

The following features have been temporarily enabled:

Feature Name	Partnum	Status	Quantity	Trial Period Left
G-Port Circ Route Prevent	893007001	On	----	20 days 8 hrs 57 mins

The following features have expired temporary keys:

Feature Name	Part Num

```

OnOffFeatV
;
rtrv-ctrl-feat:partnum=893012805
rlghncxa03w 04-07-29 16:40:40 EST EAGLE 31.6.0
The following features have been permanently enabled:
Feature Name          Partnum    Status  Quantity
IPGWx Signaling TPS   893012805  on      2000

The following features have been temporarily enabled:
Feature Name          Partnum    Status  Quantity  Trial Period Left
Zero entries found.

The following features have expired temporary keys:
Feature Name          Part Num
Zero entries found.
;
rtrv-ctrl-feat:enable=perm
rlghncxa03w 06-05-29 16:40:40 EST EAGLE5 35.1.0
The following features have been permanently enabled:
Feature Name          Partnum    Status  Quantity
15 Minute Measurements 893012101  off     ----
Command Class Management 893005801  on      ----
EAGLE OA&M IP Security  893400001  off     ----
EAGLE Product         893007201  on      ----
EAGLE5 Product        893007101  off     ----
EIR                   893012301  on      ----
Enhanced GMS (EGMS)    893012401  on      ----
G-Port Circ Route Prevent 893007001  on      ----
GSM Map Screening (GMS) 893013201  on      ----
Intermed GTT Load Sharing 893006901  on      ----
IP7 Product           893007301  on      ----
IPGWx Signaling TPS   893012805  on      2000
ISUP Normalization     893000201  on      ----
Large System # Links   893005910  on      2000
LNP ELAP Configuration 893010901  on      ----
LNP ported LRNs        893010501  on      150000
LNP ported NPANXXs     893009402  on      300000
LNP ported TNs         893011023  on      228000000
LNP Short Message Service 893006601  on      ----
MTP MAP Screening      893013501  on      ----
Network Security Enhance 893009101  on      ----
Port Chk for MO SMS    893009301  on      ----
Prepaid SMS Intercept Ph1 893006701  on      ----
Routesets              893006401  on      6000
SCCP Conversion        893012001  on      ----
SE-HSL SLK Capacity    893013005  on      32
Spare Point Code Support 893013601  on      ----
Flexible GTT Load-Sharing 893015401  on      ----
Telnet                 893005701  on      ----
XGTT Table Expansion   893006101  on      400000
XMAP Table Expansion   893007710  on      3000
Origin-Based MTP Routing 893014201  on      ----
Prepaid IDP Query Relay 893016001  on      ----
IDP Screening for Prepaid 893015501  on      ----
Origin Based SCCP Routing 893014301  on      ----
;
rtrv-ctrl-feat:enable=temp
rlghncxa03w 04-07-29 16:40:40 EST EAGLE 31.6.0
The following features have been temporarily enabled:
Feature Name          Partnum    Status  Quantity  Trial Period Left
G-Port Circ Route Prevent 893007001  On      ----  20 days 8 hrs 57 mins

```

```

The following features have expired temporary keys:
Feature Name      Part Num
OnOffFeatV       893492401

;
rtrv-ctrl-feat:expired=yes
rlghncxa03w 04-02-29 16:40:40 EST  EAGLE 31.3.0
The following features have expired temporary keys:
Feature Name      Part Num
OnOffFeatV       893492401

;

```

rtrv-dcmps**Retrieve Database Communication Module
Parameter Set**

Use this command to retrieve the sets of generic timers and parameters that can be used by any system application.

Keyword: **rtrv-dcmps**

Related Commands: **chg-dcmps**

Command Class: Database Administration

Parameters

:set= (optional)
The set number.
Range: **1-10**
Default: All parameter sets are displayed

Example

```
rtrv-dcmps:set=1
```

Dependencies

None

Notes

This command can be canceled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

Output

rtrv-dcmps:set=1

rlghncxa03w 04-02-17 15:35:05 EST EAGLE 31.3.0

SET	TIMER	TVALUE	PARM	PVALUE
1	1	1200	1	1200
1	2	1400	2	1200
1	3	1400	3	4800
1	4	1400	4	12000
1	5	1600	5	1200
1	6	1800	6	1200
1	7	2000	7	1200
1	8	4000	8	1200
1	9	4294967295	9	4294967295
1	10	6000	10	1200

TIMER 1: TALI T1 Timer, time (mS) between sending of TEST msgs by NE
TVALUE : Valid Range: 32-bits

TIMER 2: TALI T2 Timer, time (mS) to wait for response to TEST msg
TVALUE : Valid Range: 32-bits

TIMER 3: TALI T3 Timer, time (mS) to continue processing rcv'd service
msgs after NE is prohibited
TVALUE : Valid Range: 32-bits

TIMER 4: TALI T4 Timer, time (mS) between sending of MONI msgs by NE
TVALUE : Valid Range: 32-bits

PARM 1: Type of Service (TOS), IP header socket option
PVALUE : Valid Range: lowest 8-bits

PARM 2: Nagle's Algorithm, TCP socket option
PVALUE : Valid Range: lowest bit: 0 = Disable Nagle, 1 = Enable Nagle

PARM 3: Default SORP Flags socket option. Each bit is used as an
enabled/disabled flag for a particular socket option.
PVALUE : Valid Range: 32-bits

BIT	BIT VALUE
0=Broadcast Phase MTPP Primitives;	0=Disabled , 1=Enabled
1=Response Method MTPP Primitives;	0=Disabled , 1=Enabled
2=SCCP with MTP;	0=Disabled , 1=Enabled
3=ISUP via MTP;	0=Disabled , 1=Enabled
4=Group Code in MTPP;	0=Disabled , 1=Enabled
5=Use XSRV;	0=Disabled , 1=Enabled
6-31=Reserved	

;

rtrv-dlk**Retrieve Data Link**

Use this command to show the parameters of a TCP/IP data link.

Keyword: rtrv-dlk

Related Commands: act-dlk, canc-dlk, dlt-dlk, ent-dlk, rept-stat-dlk, tst-dlk

Command Class: Database Administration

Parameters

:ipaddr= (mandatory)

The TCP/IP data link's IP address. This is a TCP/IP address expressed in standard dot notation. IP addresses consist of the system's network number and the machine's unique host number. An example IP address is **192.126.100.5**, where **192.126.100** is the network number and **5** is the machine's host number.

Range: 1-223, 0-255
4 numbers separated by dots
1-223—first number
0-255—the other three numbers
Default: Display all.

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118
Default: All TCP/IP data links are shown.

Example

```
rtrv-dlk
rtrv-dlk:loc=1201
rtrv-dlk:ipaddr=193.4.201.34
```

Dependencies

This command can be entered with no parameters or with one of the optional parameters **loc** or **ipaddr**; however, both **loc** and **ipaddr** cannot be specified in the same command.

The shelf and card must be equipped.

The specified card must have a TCP/IP data link assigned to it.

If the **ipaddr** parameter is specified, the IP address must be assigned to a TCP/IP data link.

Notes

None

Output**rtrv-dlk**

```
rlghncxa03w 04-02-19 21:16:37 EST EAGLE 31.3.0
LOC IPADDR
1201 193.4.201.34
1202 193.4.201.35
1203 193.4.201.36
1204 193.4.201.37
1205 193.4.201.38
1206 193.4.201.39
1301 193.4.201.40
```

;

rtrv-dlk:loc=1201

```
rlghncxa03w 04-02-19 21:16:37 EST EAGLE 31.3.0
LOC IPADDR
1201 193.4.201.34
```

;

rtrv-dlk:ipaddr=193.4.201.38

```
rlghncxa03w 04-02-19 21:16:37 EST EAGLE 31.3.0
LOC IPADDR
1205 193.4.201.38
```

;

In the following example, the specified IP address is not assigned to a TCP/IP data link.

rtrv-dlk:ipaddr=193.4.201.28

```
rlghncxa03w 04-02-19 21:16:48 EST EAGLE 31.3.0
LOC IPADDR
IPADDR not assigned to a TCP/IP Link.
```

;

In the following example, there are no TCP/IP data links in the database.

rtrv-dlk

```
rlghncxa03w 04-02-19 21:16:48 EST EAGLE 31.3.0
LOC IPADDR
No TCP/IP Links are defined in the database.
```

;

In the following example, the specified IP address is assigned to a TCP/IP node instead of a TCP/IP data link.

rtrv-dlk:ipaddr=193.4.201.63

```
rlghncxa03w 04-02-19 21:16:48 EST EAGLE 31.3.0
LOC IPADDR
IPADDR assigned to a TCP/IP Node.
```

;

Legend

IPADDR—The IP address associated with the interface on the data link.

LOC—The card location containing the data link.

rtrv-dstn**Retrieve Destination**

Use this command to show the destination point code entries in the Destination point code table.

Keyword: rtrv-dstn

Related Commands: chg-dstn, chg-rte, dlt-dstn, dlt-rte, ent-dstn, ent-rte, rept-stat-dstn, rtrv-rte

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:aliasa= (optional)

ANSI alias point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Range: 000-255, *

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

The asterisk (*) value is not valid for the *ni* subfield.

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001–005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006–255.

When **chg-sid:pctype=ansi** is specified, *ni*-*-* is valid if *ni* = 006–255.

The point code 000-000-000 is not a valid point code.

:aliasa/aliasi/aliasn/aliasn24= (optional)

Alias point code.

:aliasi= (optional)

ITU international alias point code with subfields *zone-area-id*. This parameter is not valid if an ITU international (**dpci**) point code is entered. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

:aliasn= (optional)

ITU national alias point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmtti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: s-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:aliasn24= (optional)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:cli= (optional)

Common Language Location Identifier. This parameter specifies the Common Language Location Identifier assigned to the link.

Range: *aaaaaaaaaa*

1 alphabetic character followed by 10 alphanumeric characters

Default: **none**

:dpc= (optional)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: **dpca**

Range: **p-, 000-255, *, **, *****

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

The asterisk values *****, ******, and ******* are not valid for the *ni* subfield.

If ****** or ******* is specified for the *nc* subfield, either *****, ******, or ******* must be specified for the *ncm* subfield.

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

When **chg-sid:pctype=ansi** is specified, *ni*-*-***** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:dpc/dpca/dpci/dpcn/dpcn24= (optional)

Destination point code.

:dpci= (optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:dpcn= (optional)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz, ***

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

An asterisk (*) can be specified for the node (*nnnnn* or every member of a flexible point code) or for the group code (*gc*) only when group codes are present in the point codes.

An asterisk (*) can be specified either for the node or for the group code, but not both.

prefix—**s-, p-, ps-**

nnnnn—**0-16383, ***

gc—**aa-zz, ***

m1-m2-m3-m4—**0-14** for each member; values must sum to 14; or ***-*-*** when the point code includes a group code.

:dpcn24= (optional)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:msar= (optional)

Memory space accounting report. When the NRT feature or the CRMD feature, or both, is turned on, this parameter specifies whether summary or detail destination table memory space accounting information is displayed. The **summary** report or the **detail** report appears following the destination information that is requested by entering the command with or without other parameters. The **only** parameter value displays a detail destination table memory space accounting report without any other destination information. If neither feature is on, only the summary report information is displayed; the detail report information cannot be displayed.

Range: **detail, only, summary**

Default: **detail**—if **rtrv-dstn** is entered with no parameters
summary—if **rtrv-dstn** is entered with parameters

:ncai= (optional)

Nested cluster allowed indicator. This parameter specifies whether the route to the cluster point code can be different for provisioned members of the cluster and whether clusters with nested cluster point codes (**ncai=yes**), or clusters that do not allow nested cluster point codes (**ncai=no**) are displayed.

Range: **yes, no**

yes—Display clusters with the **ncai** set to **yes**

no—Display clusters with the **ncai** set to **no**

:pcst= (optional)

Point code subtype. If selected, this parameter causes the command to display only point codes with no subtype prefix or only point codes of a specified subtype.

Range: **none, p, ps, s**

none— Display only point codes without subtype prefixes

p— Display only private point codes (subtype prefix **p**-)

ps— Display only private and spare point codes (subtype prefix **ps**-)

s— Display only spare point codes (subtype prefix **s**-)

:pctype= (optional)

Point code domain. This parameter causes the command to display only the point codes of the specified domain type.

Range: **ansi, itui, itun, itun24**

ansi— Display only ANSI point codes

itui— Display only ITU International point codes

itun— Display only ITU National point codes

itun24— Display only 24-bit ITU National point codes

:spc= (optional)

ANSI secondary point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: **spca**

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001-005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006-255**.

The point code **000-000-000** is not a valid point code.

:spc/spca/spci/spcn/spcn24= (optional)

Secondary point code.

:spci= (optional)

ITU international secondary point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:spcn= (optional)

ITU national secondary point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private

and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:spcn24= (optional)

24-bit ITU national secondary point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

Example

The following example displays all encountered destination point codes that are members of network cluster 20-2 as well as the cluster address:

rtrv-dstn:dpca=20-2-***

The following example displays the destination with an ANSI alias of 222-200-200:

rtrv-dstn:aliasa=222-200-200

The following example displays all encountered ANSI alias destination point codes that have a network indicator (ni) of 222 and a network cluster (nc) of 200:

rtrv-dstn:aliasa=222-200-**

The following example displays the destination with a CLLI of rlghncbb001:

rtrv-dstn:clli=rlghncbb001

The following example displays the secondary point code 6-6-6:

rtrv-dstn:spc=6-6-6

The following example displays the retrieval of clusters with ncai set to yes:

rtrv-dstn:ncai=yes

The following example displays a single cluster (the NRT feature must be turned on):

rtrv-dstn:dpc=010-*-*

The following example displays a single ITU national destination (the ITUDUPPC feature must be turned on):

rtrv-dstn:dpcn=3-15-15-15-fr:spc=1-15-15-15-fr

The following example displays all ITU national group codes by duplicate point code:

rtrv-dstn:dpcn=2050-*

The following example displays all ITU national point codes within a group code:

rtrv-dstn:dpcn=*-fr

The following example displays 24-bit ITU national point code 15-100-10:

rtrv-dstn:dpcn24=15-100-10

The following example displays 24-bit ITU national secondary point code 99-99-99:

rtrv-dstn:spcn24=99-99-99

The following example displays 24-bit ITU national alias point code 4-4-4:

rtrv-dstn:aliasn24=4-4-4

The following example displays a private point code:

rtrv-dstn:dpca=p-12-12-12

The following examples display a private and spare point code:

rtrv-dstn:dpcn=ps-123

rtrv-dstn:dpci=ps-1-234-1

The following example displays all ANSI private point codes:

rtrv-dstn:pctype=ansi:pcst=p

The following example displays all ITU international spare point codes:

rtrv-dstn:pctype=itui:pcst=s

The following example displays all ITU national private and spare point codes:

rtrv-dstn:pctype=itun:pcst=ps

The following example displays all 24-bit ITU national private point codes:

rtrv-dstn:pctype=itun24:pcst=p

The following example displays all ANSI point codes that do not have point code subtype prefixes:

rtrv-dstn:pctype=ansi

The following example displays all ITU international point codes that do not have point code subtype prefixes:

rtrv-dstn:pctype=itui

The following example displays all ITU national point codes that do not have point code subtype prefixes:

rtrv-dstn:pctype=itun

The following example displays all 24-bit ITU national point codes that do not have point code subtype prefixes:

rtrv-dstn:pctype=itun24

The following example displays all point codes that do not have point code subtype prefixes:

rtrv-dstn:pcst=none

The following example displays all private point codes:

rtrv-dstn:pcst=p

The following example displays all spare point codes:

rtrv-dstn:pcst=s

The following example displays all private and spare point codes:

rtrv-dstn:pcst=ps

Dependencies

NOTE: A *full point code* contains numerical values for all three segments of the point code.

Only one destination point code parameter, or one alias point code parameter, or one CLLI parameter can be specified in the command; these parameters cannot be specified together in the command.

The specified destination address must already be defined in the Destination point code table.

If the **dpcn** parameter or the **aliasn** parameter is specified, the format must match the format that was assigned with the **chg-stpopts:npcfmti** parameter.

If specified (except when **spc=none**), the secondary point code must be a full point code.

Cluster destinations are allowed only if the Cluster Routing Management and Diversity (CRMD) feature is turned on.

Alias point codes must be specified as full point codes.

If specified, the **clli** parameter value must already be defined in the Route table.

When the **msar=only** parameter is specified, no other parameters can be specified in the command.

Network routing is valid only if the Network Routing (NRT) feature is turned on.

When using network routing, if the destination point code has a value of * in the *nc* subfield, the *ncm* subfield must also be * (for example, **dpc=21-*-***).

The **pcst** parameter value **s** or **ps** cannot be specified when the **pctype** value **ansi** or **itun24** is specified.

The **pctype** and **pcst** parameters cannot be specified in the same command with the destination point code, alias point code, secondary point code, **clli**, **msar=only**, and **ncai** parameters.

The **clli** parameter value cannot be **none**.

Notes

This command can be canceled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

In this command, only ITU-international and ITU national point codes and aliases support the spare point code subtype prefix (**s-**). Only ITU-international and ITU national point codes support the private and spare point code subtype prefix (**ps-**). All of the point code types support the private (internal) point code subtype prefix (**p-**). Aliases do not support the private (internal) point code prefix.

Table 5-67 provides a summary description of the reports that are produced by the various DPC parameter syntaxes.

Table 5-67. Summary of DPC Parameter Syntaxes

DPC format	Meaning
rtrv-dstn:dpc=ni-nc-ncm	Requests a report for fully provisioned destination <i>ni-nc-ncm</i> .
rtrv-dstn:dpc= ni-*-*	Requests a report for provisioned network destination with the specified network indicator. Note that if * is specified in the <i>nc</i> field, * must be specified in the <i>ncm</i> field.
rtrv-dstn:dpc= ni-***-	Requests a report for the full network cluster for the specified <i>ni</i> .

Table 5-67. Summary of DPC Parameter Syntaxes

DPC format	Meaning
rtrv-dstn:dpc= <i>ni-***-*</i>	Requests a report for the full network cluster and the network cluster address (if any) for the specified <i>ni</i> .
rtrv-dstn:dpc= <i>ni-nc-*</i>	Requests a report for provisioned cluster destination <i>ni-nc-*</i> .
rtrv-dstn:dpc= <i>ni-nc-**</i>	Requests a report showing all destinations whose network (<i>ni</i>) and cluster (<i>nc</i>) components match those specified. Note, however, that the network cluster address on <i>ni-nc-*</i> (if it exists) is not reported.
rtrv-dstn:dpc= <i>ni-nc-***</i>	Requests a report showing all destinations whose network (<i>ni</i>) and cluster (<i>nc</i>) components match those specified. The network cluster address <i>ni-nc-*</i> (if it exists) is also reported.
rtrv-dstn:dpcn24= <i>msa-ssa-sp</i>	Requests a report for fully provisioned 24-bit ITU-N destination <i>main signaling area-sub signaling area-signaling point</i> .

Asterisks in ANSI Point Codes

Two asterisks in the *ncm* subfield of a cluster point code produces a summary report that shows all point code destinations residing in the given cluster (for example, **20-2-****). This does not include the specified cluster point code (for example, **20-2-***).

Three asterisks in the *ncm* subfield of a cluster point code (for example, **20-2-*****) produces a summary report that shows all point code destinations residing in the given network cluster. The specified cluster point code is also displayed if it exists.

If the linkset name is specified (**lsn** parameter) and the **dpc/dpca** parameter *ncm* subfield is specified with asterisks, all route entries are displayed that have the specified linkset and that match the specified **dpc/dpca** parameter subfield values.

Asterisks in ITU-N Duplicate Point Codes and Flexible Format Point Codes

When the ITU Duplicate Point Code (ITUDUPPC) feature is on,

- An asterisk (*) can be specified for the group code of an ITU-N duplicate point code to display all ITU-N point codes that have the specified node value (for example, **10101-***).
- An asterisk (*) can be specified for the node of an ITU-N duplicate point code to display all ITU-N point codes that have the specified group code value (for example, ***-ab**).

When the ITUDUPPC feature is on and the STP flexible point code option (**npcfmti**) is used to change the ITU-N point format to four members (*m1-m2-m3-m4-gc*),

- An asterisk (*) can be specified for the group code of an ITU-N flexible point code to display all ITU-N point codes that have the specified point code value (for example, **15-15-15-3-***).
- An asterisk (*) can be specified for every member of the ITU-N flexible point code to display all ITU-N flexible point codes that have the same group code (for example, ***-*-*-*-ab** is valid; ***-15-*-*-*ab** is not valid).

Output

Destination Table Memory Space Accounting Information

Each output example for this command shows the display of destination table memory space accounting information. The **msar** parameter value and the NCR, NRT, CRMD, and Origin-based MTP Routing feature settings determine whether a summary report or a detail report is displayed.

Summary Report

When the NCR, NRT, CRMD, and Origin-based MTP Routing features are off, the summary report is displayed when the command is entered with and without parameters specified and for all of the **msar** parameter values. The detail report cannot be displayed. The summary information appears at the end of the requested destination information, or appears without any other destination information when the **msar=only** parameter is specified.

When one or more of the NCR, NRT, CRMD, and Origin-based MTP Routing features are on, the summary report is displayed:

- When the command is entered with one or more parameters to select the specific destination information to be displayed. The summary information appears at the end of the requested destination information. (The **msar=summary** parameter value is the default in this case.)
- When the command is entered with only the **msar=summary** parameter specified. The summary information appears at the end of the destination information.

The maximum number of destinations that can be provisioned depends on the Routes and Routesets quantity features that are on in the system (see the **rtrv-feat** dstn5000 entry and the **rtrv-ctrl-feat** Routesets entry). The **chg-stpopts** command **mtpdpcq** parameter must be set to the value of the Routes or Routesets quantity feature to allow the maximum number of destinations to be provisioned.

The number currently provisioned is the value x, the allowed maximum is the value y, and the table percent full is the value z shown in the following first line of the summary report:

Destination table is (x of y) z% full

- When no Routes or Routesets quantity features are on in the system, a maximum of 2000 destinations can be provisioned.
- When the DSTN5000 (5000 Routes) feature bit is on, a maximum of 5000 destinations can be provisioned.
- When the 6000, 7000, or 8000 Routesets quantity feature is enabled, a maximum of the corresponding number of destinations can be provisioned.

The maximum number of aliases that can be provisioned depends on the quantity features that are on in the system (see the **rtrv-feat** dstn5000 entry and the **rtrv-ctrl-feat** Routesets entry). The number currently provisioned is the x value, the allowed maximum is the y value, and the table percent full is the z value shown in the following second line of the summary report:

Alias table is (x of y) z% full

- When no Routes or Routesets quantity features are on in the system, a maximum of 12000 aliases can be provisioned.
- When the DSTN5000 feature bit is on, a maximum of 12000 aliases can be provisioned.
- When the 6000 Routesets feature quantity is enabled, a maximum of 12000 aliases can be provisioned.

- When the 7000, or 8000 Routesets quantity feature is enabled, a maximum of 8000 aliases can be provisioned.

Detail Report

When the NCR, NRT, CRMD, and Origin-based MTP Routing features are off, the detail report cannot be displayed.

When one or more of the NCR, NRT, CRMD, or Origin-based MTP Routing features are on, the detail report is displayed:

- When the command is entered with no parameters. The detail report appears at the end of the destination information. (The **msar=detail** parameter value is the default in this case.)
- When the **msar=detail** parameter is specified with one or more other parameters to select the specific destination information to be displayed. The detail report appears at the end of the requested destination information.
- When the **msar=only** parameter is specified. The detail report appears with no other destination information.

The maximum number of destinations that can be provisioned depends on the Routes and Routesets quantity features that are on in the system (see the **rtrv-feat** dstn5000 entry and the **rtrv-ctrl-feat** Routesets entry). The **chg-stpopts mtpdpcq** parameter must be set to the value of the quantity feature to allow the maximum number of destinations to be provisioned. The possible maximum numbers of destinations are described in the *Summary Report* section.

In the example of the detail report, the allowed maximum number of destinations is the DESTINATION ENTRIES ALLOCATED value. The list of values under the allocated value includes the TOTAL DPCs currently provisioned and the Destination table CAPACITY (% FULL).

The allowed maximum number of aliases is the ALIASES ALLOCATED value. The list of values under the allocated value include the current number of ALIASES USED and the Aliases table CAPACITY (% FULL). The possible maximum numbers of aliases are described in the *Summary Report* section.

The following example shows destination table memory space accounting information contained in a summary report. In the example, the **msar=only** parameter is specified and the NCR, NRT, CRMD, and Origin-based MTP Routing features are all off. The Summary Report information appears without any other destination information.

```
rtrv-dstn:msar=only
  rlgncxa03w 06-06-01 16:02:05 EST EAGLE 35.0.0
  Destination table is (0 of 2000) 0% full
  Alias table is (0 of 12000) 0% full
  RTRV-DSTN: MASP A - COMPLTD
;
```

The following example shows the destination table memory space accounting information contained in a detail report. In the following example, the **msar=only** parameter is specified and one or more of the NCR, NRT, CRMD or Origin-based MTP Routing features are on. The Detail Report information appears without any other destination information.

```
rtrv-dstn:msar=only
  tklc1191001 06-05-11 07:56:44 EST EAGLE5 35.0.0
  DESTINATION ENTRIES ALLOCATED: 6000
    FULL DPC(s): 664
    EXCEPTION DPC(s): 5272
    NETWORK DPC(s): 1
    CLUSTER DPC(s): 1
    TOTAL DPC(s): 5938
```

```

CAPACITY (% FULL):          99%
ALIASES ALLOCATED:          12000
ALIASES USED:                1185
CAPACITY (% FULL):          10%
X-LIST ENTRIES ALLOCATED:    500

```

;

The following example shows the display of an empty Destination table when the NCR, NRT, and CRMD features are off and no Routes or Routesets quantity features are on.

rtrv-dstn

```
rlghncxa03w 04-09-17 16:02:05 EST EAGLE 31.8.0
```

DPCA	CLLI	BEI	ELEI	ALIASI	ALIASN/N24	DOMAIN
DPCI	CLLI	BEI	ELEI	ALIASA	ALIASN/N24	DOMAIN
DPCN	CLLI	BEI	ELEI	ALIASA	ALIASI	DOMAIN
DPCN24	CLLI	BEI	ELEI	ALIASA	ALIASI	DOMAIN

No destinations meeting the requested criteria were found

```

Destination table is (0 of 2000) 0% full
Alias table is (0 of 12000) 0% full
RTRV-DSTN: MASP A - COMPLTD

```

;

The following example shows the display of an empty Destination table when one or more of the NCR, NRT, or CRMD features are turned on and no Routes or Routesets features are on.

rtrv-dstn

```
rlghncxa03w 04-09-17 16:02:05 EST EAGLE 31.8.0
```

DPCA	CLLI	BEI	ELEI	ALIASI	ALIASN/N24	DOMAIN
DPCI	CLLI	BEI	ELEI	ALIASA	ALIASN/N24	DOMAIN
DPCN	CLLI	BEI	ELEI	ALIASA	ALIASI	DOMAIN
DPCN24	CLLI	BEI	ELEI	ALIASA	ALIASI	DOMAIN

No destinations meeting the requested criteria were found

```

DESTINATION ENTRIES ALLOCATED: 2000
FULL DPC(s):                    0
NETWORK DPC(s):                 0
CLUSTER DPC(s):                 0
TOTAL DPC(s):                   0
CAPACITY (% FULL):              0%
ALIASES ALLOCATED:              12000
ALIASES USED:                    0
CAPACITY (% FULL):              0%
X-LIST ENTRIES ALLOCATED:        500
RTRV-DSTN: MASP A - COMPLTD

```

;

The following example shows a display of all provisioned destinations.

rtrv-dstn

```
tklc1191001 06-05-11 08:02:13 EST EAGLE5 35.0.0
```

DPCA	CLLI	BEI	ELEI	ALIASI	ALIASN/N24	DOMAIN
008-030-008	stpa038a	no	---	-----	-----	SS7
006-010-006	stpc016a	no	---	-----	-----	SS7
042-052-012	tklca4212a2	no	---	4-075-2	4-075-2-aa	SS7
042-054-012	tklca4212a4	no	---	4-077-2	4-077-2-aa	SS7

Commands

rtrv-dstn

042-056-012	tklca4212a6	no	---	4-079-2	4-079-2-aa	SS7
255-*-*	mobrncr001a	---	---	-----	-----	SS7
255-225-*	mobrncr002a	no	no	-----	-----	SS7
225-225-199	mobrnte001a	no	---	7-255-7	7-255-7-aa	SS7
DPCI	CLLI	BEI	ELEI	ALIASA	ALIASN/N24	DOMAIN
7-030-7	stpa037i	no	---	-----	-----	SS7
s-7-030-7	-----	no	---	-----	-----	SS7
5-010-5	stpc015i	no	---	-----	-----	SS7
s-5-010-5	-----	no	---	-----	-----	SS7
5-090-5	stpd095i	no	---	-----	-----	SS7
s-5-090-5	-----	no	---	-----	-----	SS7
5-011-5	sc1c016i	no	---	-----	-----	SS7
s-5-011-5	-----	no	---	-----	-----	SS7
7-032-7	sc2a039i	no	---	-----	-----	SS7
s-7-032-7	-----	no	---	-----	-----	SS7
7-033-7	sc3a040i	no	---	-----	-----	SS7
s-7-033-7	-----	no	---	-----	-----	SS7
1-177-2	tklcb1207i0	no	---	012-095-007	1-177-2-aa	SS7
1-179-2	tklcb1207i2	no	---	012-097-007	1-179-2-aa	SS7
1-181-2	tklcb1207i4	no	---	012-099-007	1-181-2-aa	SS7
1-183-2	tklcb1207i6	no	---	012-101-007	1-183-2-aa	SS7
1-185-2	tklcb1208i0	no	---	012-096-008	1-185-2-aa	SS7
1-187-2	tklcb1208i2	no	---	012-098-008	1-187-2-aa	SS7
1-189-2	tklcb1208i4	no	---	012-100-008	1-189-2-aa	SS7
1-191-2	tklcb1208i6	no	---	012-102-008	1-191-2-aa	SS7
DPCN	CLLI	BEI	ELEI	ALIASA	ALIASI	DOMAIN
7-030-7-aa	stpa037n	no	---	-----	-----	SS7
s-7-030-7-aa	-----	no	---	-----	-----	SS7
5-010-5-aa	stpc015n	no	---	-----	-----	SS7
s-5-010-5-aa	-----	no	---	-----	-----	SS7
5-090-5-aa	stpd095n	no	---	-----	-----	SS7
s-5-090-5-aa	-----	no	---	-----	-----	SS7
7-032-7-aa	sc2a039n	no	---	-----	-----	SS7
s-7-032-7-aa	-----	no	---	-----	-----	SS7
1-161-2-aa	tklcb1205n0	no	---	012-093-005	s-2-003-4	SS7
1-163-2-aa	tklcb1205n2	no	---	012-095-005	1-163-2	SS7
1-165-2-aa	tklcb1205n4	no	---	012-097-005	1-165-2	SS7
1-167-2-aa	tklcb1205n6	no	---	012-099-005	1-167-2	SS7
1-169-2-aa	tklcb1206n0	no	---	012-094-006	1-169-2	SS7
1-171-2-aa	tklcb1206n2	no	---	012-096-006	1-171-2	SS7
1-173-2-aa	tklcb1206n4	no	---	012-098-006	1-173-2	SS7
1-175-2-aa	tklcb1206n6	no	---	012-100-006	1-175-2	SS7
2-233-1-aa	tklcb2116n0	no	---	021-104-016	2-233-1	SS7
2-235-1-aa	tklcb2116n2	no	---	021-106-016	2-235-1	SS7
2-237-1-aa	tklcb2116n4	no	---	021-108-016	2-237-1	SS7
2-239-1-aa	tklcb2116n6	no	---	021-110-016	2-239-1	SS7
2-233-2-aa	tklcb2216n0	no	---	022-104-016	2-233-2	SS7
2-235-2-aa	tklcb2216n2	no	---	022-106-016	2-235-2	SS7
2-237-2-aa	tklcb2216n4	no	---	022-108-016	2-237-2	SS7
2-239-2-aa	tklcb2216n6	no	---	022-110-016	2-239-2	SS7
1-193-2-aa	tklcb1211n0	no	---	012-099-011	1-193-2	SS7
1-195-2-aa	tklcb1211n2	no	---	012-101-011	1-195-2	SS7
1-197-2-aa	tklcb1211n4	no	---	012-103-011	1-197-2	SS7
1-199-2-aa	tklcb1211n6	no	---	012-105-011	1-199-2	SS7
1-241-2-aa	tklcb1217n0	no	---	012-105-017	1-241-2	SS7
1-243-2-aa	tklcb1217n2	no	---	012-107-017	1-243-2	SS7
1-245-2-aa	tklcb1217n4	no	---	012-109-017	1-245-2	SS7
1-247-2-aa	tklcb1217n6	no	---	012-111-017	1-247-2	SS7
1-249-2-aa	tklcb1218n0	no	---	012-106-018	1-249-2	SS7
1-251-2-aa	tklcb1218n2	no	---	012-108-018	1-251-2	SS7
1-253-2-aa	tklcb1218n4	no	---	012-110-018	1-253-2	SS7
1-255-2-aa	tklcb1218n6	no	---	012-112-018	1-255-2	SS7
2-169-2-aa	tklcb2206n0	no	---	022-094-006	2-169-2	SS7

2-177-2-aa	tklcb2207n0	no	---	022-095-007	2-177-2	SS7
2-185-2-aa	tklcb2208n0	no	---	022-096-008	2-185-2	SS7
2-193-2-aa	tklcb2211n0	no	---	022-099-011	2-193-2	SS7
1-177-1-aa	tklcb1107n0	no	---	011-095-007	1-177-1	SS7
p-1-061-4-aa	gwvpc1107n0	no	---	-----	-----	SS7
2-225-2-aa	tklcb2215n0	no	---	022-103-015	2-225-2	SS7
p-1-060-2-aa	gwvpc2215n0	no	---	-----	-----	SS7
2-161-1-aa	tklcb2105n0	no	---	021-093-005	2-161-1	SS7
2-209-1-aa	tklcb2113n0	no	---	021-101-013	2-209-1	SS7
2-225-1-aa	tklcb2115n0	no	---	021-103-015	2-225-1	SS7
2-225-3-aa	tklcb2315n0	no	---	023-103-015	2-225-3	SS7
6-131-2-aa	sc2a039i00	no	---	-----	-----	SS7
s-6-131-2-aa	sc2a039i02	no	---	-----	-----	SS7
s-6-135-2-aa	sc2a039n01	no	---	-----	-----	SS7
p-6-132-2-aa	sc3a040i01	no	---	-----	-----	SS7
p-6-132-2-ms	sc3a040i02	no	---	-----	-----	SS7
ps-6-132-2-aa	sc3a040i04	no	---	-----	-----	SS7
ps-6-132-2-ms	sc3a040i05	no	---	-----	-----	SS7
6-129-2-aa	stpa037i00	no	---	-----	-----	SS7
s-6-129-2-aa	stpa037i02	no	---	-----	-----	SS7
s-6-133-2-aa	stpa037n01	no	---	-----	-----	SS7
6-146-2-aa	sc1c016i00	no	---	-----	-----	SS7
6-146-2-ms	sc1c016i01	no	---	-----	-----	SS7
s-6-146-2-aa	sc1c016i03	no	---	-----	-----	SS7
s-6-146-2-ms	sc1c016i04	no	---	-----	-----	SS7
6-145-2-aa	stpc015i00	no	---	-----	-----	SS7
s-6-145-2-aa	stpc015i02	no	---	-----	-----	SS7
s-6-149-2-aa	stpc015n01	no	---	-----	-----	SS7
6-153-2-aa	stpd095i00	no	---	-----	-----	SS7
6-153-2-ms	stpd095i01	no	---	-----	-----	SS7
s-6-153-2-aa	stpd095i03	no	---	-----	-----	SS7
s-6-153-2-ms	stpd095i04	no	---	-----	-----	SS7
s-6-157-2-aa	stpd095n01	no	---	-----	-----	SS7
2-049-2-aa	tklca2207n0	no	---	022-045-007	2-049-2	SS7
2-051-2-aa	tklca2207n2	no	---	022-047-007	2-051-2	SS7
DPCN24	CLLI	BEI	ELEI	ALIASA	ALIASI	DOMAIN
008-030-008	stpa038c	no	---	-----	-----	SS7
006-010-006	stpc016c	no	---	-----	-----	SS7
006-090-006	stpd096c	no	---	-----	-----	SS7
006-132-002	sc3a040i00	no	---	-----	-----	SS7
DESTINATION ENTRIES ALLOCATED:			6000			
FULL DPC(s):			664			
EXCEPTION DPC(s):			5272			
NETWORK DPC(s):			1			
CLUSTER DPC(s):			1			
TOTAL DPC(s):			5938			
CAPACITY (% FULL):			99%			
ALIASES ALLOCATED:			12000			
ALIASES USED:			1185			
CAPACITY (% FULL):			10%			
X-LIST ENTRIES ALLOCATED:			500			

;

The following example appears when the single SPC assigned to an ANSI destination point code is requested.

rtrv-dstn:spc=1-56-2

```

rlghncxa03w 04-09-17 16:02:05 EST  EAGLE 31.8.0
  DPCA      CLLI      BEI  ELEI  ALIASI      ALIASN/N24      DOMAIN
001-056-002 -----  no   ---   1-056-2      16000      SS7
          SPC      NCAI
          001-056-005  no

```

```

Destination table is (12 of 2000) 1% full
Alias table is (4 of 12000) 1% full
RTRV-DSTN: MASP A - COMPLTD
;

```

The following example shows the display of a destination by SPC where multiple destinations are assigned to the specified SPC.

rtrv-dstn:spc=001-056-005

```

rlghncxa03w 04-09-17 16:02:05 EST EAGLE 31.8.0
DPCA          CLLI          BEI ELEI  ALIASI          ALIASN/N24  DOMAIN
001-056-002   ----- no   ---  1-056-2          16000          SS7

                SPC          NCAI
                001-056-005  ----

001-056-003   ----- no   ---  1-056-2          16000          SS7

                SPC          NCAI
                001-056-005  ----

```

```

Destination table is (11 of 2000) 1% full
Alias table is (4 of 12000) 1% full
RTRV-DSTN: MASP A - COMPLTD
;

```

The following example displays the retrieval of clusters with the **ncai** parameter set to **yes**.

rtrv-dstn:ncai=yes

```

rlghncxa03w 04-09-17 16:02:05 EST EAGLE 31.8.0
DPCI          CLLI          BEI ELEI  ALIASA          ALIASN/N24  DOMAIN
010-010-*     ----- no   no   -----          -----          SS7

                SPC          NCAI
                ----- yes

010-001-*     ----- yes yes -----          -----          SS7

                SPC          NCAI
                ----- yes

```

```

Destination table is (11 of 2000) 1% full
Alias table is (4 of 12000) 1% full
RTRV-DSTN: MASP A - COMPLTD
;

```

The following example displays the retrieval of a single cluster with the **ncai** parameter set to **yes**.

rtrv-dstn:dpc=010-010-*

```

rlghncxa03w 04-09-17 16:02:05 EST EAGLE 31.8.0
DPCI          CLLI          BEI ELEI  ALIASA          ALIASN/N24  DOMAIN
010-010-*     ----- no   no   -----          -----          SS7

                SPC          NCAI
                ----- yes

```

```

Destination table is (11 of 2000) 1% full
Alias table is (4 of 12000) 1% full
RTRV-DSTN: MASP A - COMPLTD
;

```

The following example displays the retrieval of clusters with the **ncai** parameter set to **no**.

rtrv-dstn:ncai=no

```

rlghncxa03w 04-09-17 16:02:05 EST EAGLE 31.8.0
DPCI          CLLI          BEI  ELEI  ALIASA          ALIASN/N24          DOMAIN
040-010-*      -----      no   no    -----      -----      SS7
                  SPC          NCAI
                  -----      no

040-001-*      -----      yes yes  -----      -----      SS7
                  SPC          NCAI
                  -----      no

```

Destination table is (11 of 2000) 1% full

Alias table is (4 of 12000) 1% full

RTRV-DSTN: MASP A - COMPLTD

;

The following example displays a single cluster with the NRT feature turned on.

rtrv-dstn:dpc=010-*-*

```

rlghncxa03w 04-09-17 16:02:05 EST EAGLE 31.8.0
DPCI          CLLI          BEI  ELEI  ALIASA          ALIASN/N24          DOMAIN
010-*-*      -----      no   no    -----      -----      SS7
                  SPC          NCAI
                  -----      no

```

Destination table is (11 of 2000) 1% full

Alias table is (4 of 12000) 1% full

RTRV-DSTN: MASP A - COMPLTD

;

The following example displays a single ITU national destination with the ITUDUPPC (ITU Duplicate Point Code) feature turned on:

rtrv-dstn:dpcn=3-15-15-15-fr:spc=1-15-15-15-fr

```

rlghncxa03w 04-09-17 16:02:05 EST EAGLE 31.8.0
DPCN          CLLI          BEI  ELEI  ALIASA          ALIASI          DOMAIN
3-15-15-15-FR -----      no   ---  -----      -----      SS7
                  SPC          NCAI
1-15-15-15-FR ---

```

Destination table is (11 of 2000) 1% full

Alias table is (4 of 12000) 1% full

RTRV-DSTN: MASP A - COMPLTD

;

The following example displays all ITU national group codes by duplicate point code:

rtrv-dstn:dpcn=2050-*

```

rlghncxa03w 04-09-17 16:02:05 EST EAGLE 31.8.0
DPCN          CLLI          BEI  ELEI  ALIASA          ALIASI          DOMAIN
2050-AA      -----      no   ---  -----      -----      SS7
                  SPC          NCAI
                  -----      ---

2050-AF      -----      yes  ---  -----      -----      SS7
                  SPC          NCAI
4081-AF      -----      ---

2050-FR      -----      no   ---  -----      -----      SS7
                  SPC          NCAI
4083-FR      -----      ---

```

```

Destination table is (11 of 2000) 1% full
Alias table is (4 of 12000) 1% full
RTRV-DSTN: MASP A - COMPLTD

```

```
;
```

The following example displays all ITU national point codes within a group code:

rtrv-dstn:dpcn=-fr

```

rlghncxa03w 04-09-17 16:02:05 EST EAGLE 31.8.0
DPCN          CLLI          BEI  ELEI  ALIASA          ALIASI          DOMAIN
2050-FR       -----      no   ---   -----      -----      SS7
              SPC              NCAI
              4082-FR         ----
DPCN          CLLI          BEI  ELEI  ALIASA          ALIASI          DOMAIN
4080-FR       -----      no   ---   -----      -----      SS7
              SPC              NCAI
              4082-FR         ----
DPCN          CLLI          BEI  ELEI  ALIASA          ALIASI          DOMAIN
7040-FR       -----      no   ---   -----      -----      SS7
              SPC              NCAI
              4082-FR         ----

```

```

Destination table is (11 of 2000) 1% full
Alias table is (4 of 12000) 1% full
RTRV-DSTN: MASP A - COMPLTD

```

```
;
```

The following example displays a single cluster with the NRT feature turned on and with the DSTN5000 feature turned on.

rtrv-dstn:dpc=010-*-*

```

rlghncxa03w 04-09-17 16:02:05 EST EAGLE 31.8.0
DPCI          CLLI          BEI  ELEI  ALIASA          ALIASN/N24      DOMAIN
010-*-*       -----      no   no   -----      -----      SS7
              SPC              NCAI
              -----      no

```

```

Destination table is (3 of 6000) 1% full
Alias table is (4 of 12000) 1% full
RTRV-DSTN: MASP A - COMPLTD

```

```
;
```

The following example shows output when the 6000 Routesets feature is turned on and the CRMD feature is on:

rtrv-dstn

```

rlghncxa03w 04-09-17 16:02:05 EST EAGLE 31.8.0
DPCA          CLLI          BEI  ELEI  ALIASI          ALIASN/N24      DOMAIN
003-003-003   -----      no   ---   -----      -----      SS7
004-004-004   -----      no   ---   -----      -----      SS7
005-005-005   -----      no   ---   -----      -----      SS7
008-001-*     -----      no   no   -----      -----      SS7

DPCI          CLLI          BEI  ELEI  ALIASA          ALIASN          DOMAIN
DPCN          CLLI          BEI  ELEI  ALIASA          ALIASI          DOMAIN

DESTINATION ENTRIES ALLOCATED:  6000
FULL DPC(s):                      3
NETWORK DPC(s):                    0
CLUSTER DPC(s):                     1
TOTAL DPC(s):                       4

```

```

CAPACITY (% FULL):          1%
ALIASES ALLOCATED:          12000
ALIASES USED:                0
CAPACITY (% FULL):          0%
X-LIST ENTRIES ALLOCATED:    500
RTRV-DSTN: MASP A - COMPLTD

```

;

The following example shows output for a specific DPC when the 6000 Routesets feature is turned on and the CRMD feature is on:

rtrv-dstn:dpc=8-1-*

```

rlghncxa03w 04-09-17 16:02:05 EST EAGLE 31.8.0
DPCA          CLLI          BEI ELEI  ALIASI      ALIASN/N24  DOMAIN
008-001-*    ----- no    no    -----      -----  SS7

          SPC          NCAI
          ----- no

```

```

Destination table is (4 of 6000) 1% full
Alias table is (0 of 12000) 0% full
RTRV-DSTN: MASP A - COMPLTD

```

;

The following example displays a 24-bit ITU-N destination point code with a 24-bit ITU-N secondary point code assigned to it:

rtrv-dstn:dpcn24=12-12-12

```

rlghncxa03w 04-09-17 16:02:05 EST EAGLE 31.8.0
DPCN24       CLLI          BEI ELEI  ALIASI      DOMAIN
012-012-012 ----- no    ---  -----      SS7

          SPC          NCAI
          099-099-099  ----

```

```

Destination table is (1 of 2000) 1% full
Alias table is (0 of 12000) 0% full
RTRV-DSTN: MASP A - COMPLTD

```

;

```

Destination table is (1 of 2000) 1% full
Alias table is (0 of 12000) 0% full
RTRV-DSTN: MASP A - COMPLTD

```

;

The following example displays a specific 24-bit ITU-N alias point code:

rtrv-dstn:aliasn24=4-4-4

```

rlghncxa03w 04-09-17 16:02:05 EST EAGLE 31.8.0
DPCI          CLLI          BEI ELEI  ALIASA      ALIASN/N24  DOMAIN
1-006-1      ----- no    ---  -----      004-004-004  SS7

          SPC          NCAI
          ----- ----

```

```

Destination table is (1 of 2000) 1% full
Alias table is (1 of 12000) 1% full
RTRV-DSTN: MASP A - COMPLTD

```

;

The following example displays an ANSI destination point code with a 24-bit ITU-N alias point code:

rtrv-dstn:alias24=10-2-2

```

rlghncxa03w 04-09-17 16:02:05 EST EAGLE 31.8.0
DPCA          CLLI          BEI ELEI  ALIASI          ALIASN/N24  DOMAIN
010-002-002   ----- no   ---  -----  016-123-031  SS7

          SPC          NCAI
          -----  ----

```

```

Destination table is (1 of 2000) 1% full
Alias table is (1 of 12000) 1% full
RTRV-DSTN: MASP A - COMPLTD

```

;

```

Destination table is (1 of 2000) 1% full
Alias table is (1 of 12000) 1% full
RTRV-DSTN: MASP A - COMPLTD

```

;

The following example displays all destinations in the database, including a 24-bit ITU-N destination:

rtrv-dstn

```

rlghncxa03w 04-09-17 16:02:05 EST EAGLE 31.8.0
DPCA          CLLI          BEI ELEI  ALIASI          ALIASN/N24  DOMAIN
101-006-231   ----- no   ---  -----  209-113-045  SS7

DPCI          CLLI          BEI ELEI  ALIASA          ALIASN/N24  DOMAIN
1-006-1       ----- no   ---  -----  009-009-009  SS7

DPCN          CLLI          BEI ELEI  ALIASA          ALIASI          DOMAIN
012-012-012   ----- no   ---  -----  5-005-5      SS7

```

```

Destination table is (3 of 2000) 1% full
Alias table is (3 of 12000) 1% full
RTRV-DSTN: MASP A - COMPLTD

```

;

The following example shows output for a linkset that contains a private pint code.

rtrv-dstn:dpci=ps-5-120-1

```

tekelecstp 05-01-20 21:22:04 EST EAGLE 31.12.0
DPCI          CLLI          BEI ELEI  ALIASA          ALIASN/N24  DOMAIN

ps-5-120-1    ----- no   ---  -----  -----  SS7

          SPC          NCAI
          -----  ----

```

```

Destination table is (65 of 2000) 3% full

```

;

The following example specifies the **pctype=ansi** parameter and the **pcst=none** parameter to display only ANSI point codes with no subtype prefixes.

rtrv-dstn:pctype=ansi:pcst=none

```

tekelecstp 05-01-20 21:22:04 EST EAGLE 31.12.0

DPCA          CLLI          BEI ELEI  ALIASI          ALIASN/N24  DOMAIN

001-001-002   ----- no   ---  -----  -----  SS7
008-001-001   systest1    no   ---  -----  -----  SS7
020-001-*     systest2    no   no  -----  -----  SS7

```

100-101-001	-----	no	---	1-190-1	-----	SS7
100-101-002	-----	no	---	1-012-1	-----	SS7
100-101-003	-----	no	---		0-0-0-0123-aa	SS7
100-101-004	-----	no	---		0-0-0-0123-aa	SS7
012-230-001	-----	no	---			SS7
123-134-014	-----	no	---			SS7

```

DESTINATION ENTRIES ALLOCATED: 2000
FULL DPC(s): 64
NETWORK DPC(s): 0
CLUSTER DPC(s): 1
TOTAL DPC(s): 65
CAPACITY (% FULL): 3%
X-LIST ENTRIES ALLOCATED: 500

```

;

The following example specifies the **pctype=ansi** parameter and the **pcst=p** parameter to display only ANSI point codes with the private point code subtype prefix (**p-**).

rtrv-dstn:pctype=ansi:pcst=p

```

tekelecstp 05-01-20 21:22:04 EST EAGLE 31.12.0
  DPCA      CLLI      BEI  ELEI  ALIASI      ALIASN/N24  DOMAIN
p-001-002-004 ----- no  --- -----
p-002-200-001 ----- no  --- -----
p-002-003-001 ----- no  --- -----
p-001-002-005 ----- no  --- -----
p-001-002-006 ----- no  --- -----
p-001-002-007 ----- no  --- -----
p-001-002-008 ----- no  --- -----
p-012-230-001 ----- no  --- -----
p-123-134-014 ----- no  --- -----
p-129-234-001 ----- no  --- -----

```

```

DESTINATION ENTRIES ALLOCATED: 2000
FULL DPC(s): 64
NETWORK DPC(s): 0
CLUSTER DPC(s): 1
TOTAL DPC(s): 65
CAPACITY (% FULL): 3%
X-LIST ENTRIES ALLOCATED: 500

```

;

The following example specifies the **pctype=itui** parameter and the **pcst=s** parameter to display only ITU-I point codes with the spare point code subtype prefix (**s-**).

rtrv-dstn:pctype=itui:pcst=s

```

tekelecstp 05-01-20 21:22:04 EST EAGLE 31.12.0
  DPCI      CLLI      BEI  ELEI  ALIASA      ALIASN/N24  DOMAIN
s-2-002-1   ----- no  --- -----
s-2-002-2   ----- no  --- 001-001-003 -----
s-1-002-3   ----- no  --- -----
s-2-100-1   ----- no  --- -----
s-7-100-1   ----- no  --- -----
s-2-012-1   ----- no  --- -----
s-3-134-1   ----- no  --- -----
s-5-120-1   ----- no  --- -----

```

```

DESTINATION ENTRIES ALLOCATED: 2000
FULL DPC(s): 64
NETWORK DPC(s): 0
CLUSTER DPC(s): 1
TOTAL DPC(s): 65
CAPACITY (% FULL): 3%

```

X-LIST ENTRIES ALLOCATED: 500

;

The following example specifies the **pctype=itun** parameter and the **pcst=p** parameter to display only ITU-N point codes with the private point code subtype prefix (**p-**).

rtrv-dstn:pctype=itun:pcst=p

tekelecstp	05-01-20	21:22:04	EST	EAGLE	31.12.0			
DPCN	CLLI	BEI	ELEI	ALIASA	ALIASI	DOMAIN		
p-0-0-0-0323-aa	-----	no	---	-----	-----	SS7		
p-0-0-0-1298-aa	-----	no	---	-----	-----	SS7		
p-1-1-0-0057-aa	-----	no	---	-----	-----	SS7		
p-1-1-1-0058-aa	-----	no	---	-----	-----	SS7		
p-1-1-1-0059-aa	-----	no	---	-----	-----	SS7		
p-1-1-1-0060-aa	-----	no	---	-----	-----	SS7		
p-1-1-1-0061-aa	-----	no	---	-----	-----	SS7		
p-1-1-1-0125-aa	-----	no	---	-----	-----	SS7		
p-1-1-1-0125-xy	-----	no	---	-----	-----	SS7		
p-1-1-1-0126-xy	-----	no	---	-----	-----	SS7		
p-1-1-1-0126-aa	-----	no	---	-----	-----	SS7		
p-1-1-1-0127-bb	-----	no	---	-----	-----	SS7		

DESTINATION ENTRIES ALLOCATED: 2000

FULL DPC(s): 64
 NETWORK DPC(s): 0
 CLUSTER DPC(s): 1
 TOTAL DPC(s): 65
 CAPACITY (% FULL): 3%

X-LIST ENTRIES ALLOCATED: 500

;

The following example specifies the **pctype=itun** parameter and the **pcst=ps** parameter to display only ITU-N point codes with the private and spare point code subtype prefix (**ps-**).

rtrv-dstn:pctype=itun:pcst=ps

tekelecstp	05-01-20	21:22:04	EST	EAGLE	31.12.0			
DPCN	CLLI	BEI	ELEI	ALIASA	ALIASI	DOMAIN		
ps-1-1-1-2047-aa	-----	no	---	100-120-120	s-1-123-1	SS7		
ps-1-1-1-2046-aa	-----	no	---	-----	-----	SS7		
ps-1-1-1-2045-aa	-----	no	---	-----	-----	SS7		
ps-1-1-1-2044-aa	-----	no	---	-----	-----	SS7		
ps-0-0-0-0323-aa	-----	no	---	-----	-----	SS7		
ps-0-0-0-1298-aa	-----	no	---	-----	-----	SS7		
ps-1-1-1-0059-aa	-----	no	---	-----	-----	SS7		
ps-1-1-1-0234-aa	wearehereto	yes	---	-----	-----	SS7		
ps-1-1-1-0235-aa	longcllinam	yes	---	-----	-----	SS7		

DESTINATION ENTRIES ALLOCATED: 2000

FULL DPC(s): 64
 NETWORK DPC(s): 0
 CLUSTER DPC(s): 1
 TOTAL DPC(s): 65
 CAPACITY (% FULL): 3%

X-LIST ENTRIES ALLOCATED: 500

;

The following example specifies the **pctype=ansi** to display only ANSI point codes.

rtrv-dstn:pctype=ansi

tekelecstp	05-01-20	21:22:04	EST	EAGLE	31.12.0			
DPCA	CLLI	BEI	ELEI	ALIASI	ALIASN/N24	DOMAIN		
001-001-002	-----	no	---	-----	-----	SS7		
p-001-002-004	-----	no	---	-----	-----	SS7		
008-001-001	sytest1	no	---	-----	-----	SS7		

020-001-*	systest2	no	no	-----	-----	SS7
100-101-001	-----	no	---	1-190-1	-----	SS7
100-101-002	-----	no	---	s-1-012-1	-----	SS7
100-101-003	-----	no	---	-----	0-0-0-0123-aa	SS7
100-101-004	-----	no	---	-----	s-0-0-0-0123-aa	SS7
p-002-200-001	-----	no	---	-----	-----	SS7
p-002-003-001	-----	no	---	-----	-----	SS7
p-001-002-005	-----	no	---	-----	-----	SS7
p-001-002-006	-----	no	---	-----	-----	SS7
p-001-002-007	-----	no	---	-----	-----	SS7
p-001-002-008	-----	no	---	-----	-----	SS7
p-012-230-001	-----	no	---	-----	-----	SS7
012-230-001	-----	no	---	-----	-----	SS7
p-123-134-014	-----	no	---	-----	-----	SS7
123-134-014	-----	no	---	-----	-----	SS7
p-129-234-001	-----	no	---	-----	-----	SS7

```

DESTINATION ENTRIES ALLOCATED: 2000
FULL DPC(s): 64
NETWORK DPC(s): 0
CLUSTER DPC(s): 1
TOTAL DPC(s): 65
CAPACITY (% FULL): 3%
X-LIST ENTRIES ALLOCATED: 500

```

;

The following example specifies the **pctype=itui** parameter to display only ITU-I point codes.

rtrv-dstn:pctype=itui

tekelecstp	05-01-20 21:22:04	EST	EAGLE	31.12.0		
DPCI	CLLI	BEI	ELEI	ALIASA	ALIASN/N24	DOMAIN
s-2-002-1	-----	no	---	-----	-----	SS7
s-2-002-2	-----	no	---	001-001-003	-----	SS7
s-1-002-3	-----	no	---	-----	-----	SS7
ps-2-100-1	-----	no	---	-----	-----	SS7
s-2-100-1	-----	no	---	-----	-----	SS7
2-100-1	-----	no	---	-----	-----	SS7
p-2-120-1	-----	no	---	-----	-----	SS7
p-7-100-1	-----	no	---	-----	-----	SS7
s-7-100-1	-----	no	---	-----	-----	SS7
ps-7-129-2	-----	no	---	-----	-----	SS7
ps-4-012-1	-----	no	---	-----	-----	SS7
p-2-012-1	-----	no	---	-----	-----	SS7
s-2-012-1	-----	no	---	-----	-----	SS7
s-3-134-1	-----	no	---	-----	-----	SS7
p-3-134-1	-----	no	---	-----	-----	SS7
ps-3-134-1	-----	no	---	-----	-----	SS7
ps-5-120-1	-----	no	---	-----	-----	SS7
s-5-120-1	-----	no	---	-----	-----	SS7
p-5-120-1	-----	no	---	-----	-----	SS7

```

DESTINATION ENTRIES ALLOCATED: 2000
FULL DPC(s): 64
NETWORK DPC(s): 0
CLUSTER DPC(s): 1
TOTAL DPC(s): 65
CAPACITY (% FULL): 3%
X-LIST ENTRIES ALLOCATED: 500

```

;

The following example specifies the **pctype=itun** parameter to display only ITU-N point codes.

rtrv-dstn:pctype=itun

```
tekelecstp 05-01-20 21:22:04 EST EAGLE 31.12.0
```

DPCN	CLLI	BEI	ELEI	ALIASA	ALIASI	DOMAIN
ps-1-1-1-2047-aa	-----	no	---	100-120-120	s-1-123-1	SS7
ps-1-1-1-2046-aa	-----	no	---	-----	-----	SS7
ps-1-1-1-2045-aa	-----	no	---	-----	-----	SS7
ps-1-1-1-2044-aa	-----	no	---	-----	-----	SS7
ps-0-0-0-0323-aa	-----	no	---	-----	-----	SS7
s-0-0-0-0323-aa	-----	no	---	-----	-----	SS7
p-0-0-0-0323-aa	-----	no	---	-----	-----	SS7
0-0-0-0323-aa	-----	no	---	-----	-----	SS7
0-0-0-1298-aa	-----	no	---	-----	-----	SS7
p-0-0-0-1298-aa	-----	no	---	-----	-----	SS7
s-0-0-0-1298-aa	-----	no	---	-----	-----	SS7
ps-0-0-0-1298-aa	-----	no	---	-----	-----	SS7
p-1-1-0-0057-aa	-----	no	---	-----	-----	SS7
p-1-1-1-0058-aa	-----	no	---	-----	-----	SS7
p-1-1-1-0059-aa	-----	no	---	-----	-----	SS7
ps-1-1-1-0059-aa	-----	no	---	-----	-----	SS7
p-1-1-1-0060-aa	-----	no	---	-----	-----	SS7
p-1-1-1-0061-aa	-----	no	---	-----	-----	SS7
p-1-1-1-0125-aa	-----	no	---	-----	-----	SS7
p-1-1-1-0125-xy	-----	no	---	-----	-----	SS7
p-1-1-1-0126-xy	-----	no	---	-----	-----	SS7
p-1-1-1-0126-aa	-----	no	---	-----	-----	SS7
p-1-1-1-0127-bb	-----	no	---	-----	-----	SS7
ps-1-1-1-0234-aa	wearehereto	yes	---	-----	-----	SS7
ps-1-1-1-0235-aa	longcclinam	yes	---	-----	-----	SS7
1-1-1-0235-aa	-----	no	---	-----	-----	SS7
s-1-1-1-0235-aa	-----	no	---	-----	-----	SS7

DESTINATION ENTRIES ALLOCATED: 2000
 FULL DPC(s): 64
 NETWORK DPC(s): 0
 CLUSTER DPC(s): 1
 TOTAL DPC(s): 65
 CAPACITY (% FULL): 3%
 X-LIST ENTRIES ALLOCATED: 500

;

The following example specifies the **pcst=none** parameter to display only point codes that have no point code subtype prefix.

rtrv-dstn:pcst=none

```
tekelecstp 05-01-20 21:22:04 EST EAGLE 31.12.0
```

DPCA	CLLI	BEI	ELEI	ALIASI	ALIASN/N24	DOMAIN
001-001-002	-----	no	---	-----	-----	SS7
008-001-001	systest1	no	---	-----	-----	SS7
020-001-*	systest2	no	no	-----	-----	SS7
100-101-001	-----	no	---	1-190-1	-----	SS7
100-101-002	-----	no	---	s-1-012-1	-----	SS7
100-101-003	-----	no	---	-----	0-0-0-0123-aa	SS7
100-101-004	-----	no	---	-----	s-0-0-0-0123-aa	SS7
012-230-001	-----	no	---	-----	-----	SS7
123-134-014	-----	no	---	-----	-----	SS7

DPCI	CLLI	BEI	ELEI	ALIASA	ALIASN/N24	DOMAIN
2-100-1	-----	no	---	-----	-----	SS7

DPCN	CLLI	BEI	ELEI	ALIASA	ALIASI	DOMAIN
0-0-0-0323-aa	-----	no	---	-----	-----	SS7
0-0-0-1298-aa	-----	no	---	-----	-----	SS7
1-1-1-0235-aa	-----	no	---	-----	-----	SS7

```

DPCN24      CLI      BEI  ELEI  ALIASA      ALIASI      DOMAIN

DESTINATION ENTRIES ALLOCATED:  2000
FULL DPC(s):                      64
NETWORK DPC(s):                    0
CLUSTER DPC(s):                     1
TOTAL DPC(s):                      65
CAPACITY (% FULL):                  3%
X-LIST ENTRIES ALLOCATED:          500

```

;

The following example specifies the **pcst=s** parameter to display only point codes with the spare point code subtype prefix (s-).

rtrv-dstn:pcst=s

```

tekelecstp 05-01-20 21:22:04 EST  EAGLE 31.12.0
DPCA      CLI      BEI  ELEI  ALIASI      ALIASN/N24  DOMAIN

DPCI      CLI      BEI  ELEI  ALIASA      ALIASN/N24  DOMAIN

s-2-002-1  -----  no   ---  -----  -----  SS7
s-2-002-2  -----  no   ---  001-001-003 -----  SS7
s-1-002-3  -----  no   ---  -----  -----  SS7
s-2-100-1  -----  no   ---  -----  -----  SS7
s-7-100-1  -----  no   ---  -----  -----  SS7
s-2-012-1  -----  no   ---  -----  -----  SS7
s-3-134-1  -----  no   ---  -----  -----  SS7
s-5-120-1  -----  no   ---  -----  -----  SS7

DPCN      CLI      BEI  ELEI  ALIASA      ALIASI      DOMAIN

s-0-0-0-0323-aa -----  no   ---  -----  -----  SS7
s-0-0-0-1298-aa -----  no   ---  -----  -----  SS7
s-1-1-1-0235-aa -----  no   ---  -----  -----  SS7

DPCN24      CLI      BEI  ELEI  ALIASA      ALIASI      DOMAIN

```

```

DESTINATION ENTRIES ALLOCATED:  2000
FULL DPC(s):                      64
NETWORK DPC(s):                    0
CLUSTER DPC(s):                     1
TOTAL DPC(s):                      65
CAPACITY (% FULL):                  3%
X-LIST ENTRIES ALLOCATED:          500

```

;

The following example specifies the **pcst=p** parameter to display only point codes with the private point code subtype prefix (p-).

rtrv-dstn:pcst=p

```

tekelecstp 05-01-20 21:22:04 EST  EAGLE 31.12.0
DPCA      CLI      BEI  ELEI  ALIASI      ALIASN/N24  DOMAIN

p-001-002-004 -----  no   ---  -----  -----  SS7
p-002-200-001 -----  no   ---  -----  -----  SS7
p-002-003-001 -----  no   ---  -----  -----  SS7
p-001-002-005 -----  no   ---  -----  -----  SS7
p-001-002-006 -----  no   ---  -----  -----  SS7
p-001-002-007 -----  no   ---  -----  -----  SS7
p-001-002-008 -----  no   ---  -----  -----  SS7
p-012-230-001 -----  no   ---  -----  -----  SS7
p-123-134-014 -----  no   ---  -----  -----  SS7
p-129-234-001 -----  no   ---  -----  -----  SS7

```

DPCI	CLLI	BEI	ELEI	ALIASA	ALIASN/N24	DOMAIN
p-2-120-1	-----	no	---	-----	-----	SS7
p-7-100-1	-----	no	---	-----	-----	SS7
p-2-012-1	-----	no	---	-----	-----	SS7
p-3-134-1	-----	no	---	-----	-----	SS7
p-5-120-1	-----	no	---	-----	-----	SS7

DPCN	CLLI	BEI	ELEI	ALIASA	ALIASI	DOMAIN
p-0-0-0-0323-aa	-----	no	---	-----	-----	SS7
p-0-0-0-1298-aa	-----	no	---	-----	-----	SS7
p-1-1-0-0057-aa	-----	no	---	-----	-----	SS7
p-1-1-1-0058-aa	-----	no	---	-----	-----	SS7
p-1-1-1-0059-aa	-----	no	---	-----	-----	SS7
p-1-1-1-0060-aa	-----	no	---	-----	-----	SS7
p-1-1-1-0061-aa	-----	no	---	-----	-----	SS7
p-1-1-1-0125-aa	-----	no	---	-----	-----	SS7
p-1-1-1-0125-xy	-----	no	---	-----	-----	SS7
p-1-1-1-0126-xy	-----	no	---	-----	-----	SS7
p-1-1-1-0126-aa	-----	no	---	-----	-----	SS7
p-1-1-1-0127-bb	-----	no	---	-----	-----	SS7

DPCN24	CLLI	BEI	ELEI	ALIASA	ALIASI	DOMAIN

```

DESTINATION ENTRIES ALLOCATED: 2000
FULL DPC(s): 64
NETWORK DPC(s): 0
CLUSTER DPC(s): 1
TOTAL DPC(s): 65
CAPACITY (% FULL): 3%
X-LIST ENTRIES ALLOCATED: 500

```

;

The following example specifies the **pcst=ps** parameter to display only point codes with the private and spare point code subtype prefix (**ps-**).

rtrv-dstn:pcst=ps

```

tekelecstp 05-01-20 21:22:04 EST EAGLE 31.12.0
DPCA CLLI BEI ELEI ALIASI ALIASN/N24 DOMAIN

```

DPCI	CLLI	BEI	ELEI	ALIASA	ALIASN/N24	DOMAIN
ps-2-100-1	-----	no	---	-----	-----	SS7
ps-7-129-2	-----	no	---	-----	-----	SS7
ps-4-012-1	-----	no	---	-----	-----	SS7
ps-3-134-1	-----	no	---	-----	-----	SS7
ps-5-120-1	-----	no	---	-----	-----	SS7

DPCN	CLLI	BEI	ELEI	ALIASA	ALIASI	DOMAIN
ps-1-1-1-2047-aa	-----	no	---	100-120-120	s-1-123-1	SS7
ps-1-1-1-2046-aa	-----	no	---	-----	-----	SS7
ps-1-1-1-2045-aa	-----	no	---	-----	-----	SS7
ps-1-1-1-2044-aa	-----	no	---	-----	-----	SS7
ps-0-0-0-0323-aa	-----	no	---	-----	-----	SS7
ps-0-0-0-1298-aa	-----	no	---	-----	-----	SS7
ps-1-1-1-0059-aa	-----	no	---	-----	-----	SS7
ps-1-1-1-0234-aa	wearehereto	yes	---	-----	-----	SS7
ps-1-1-1-0235-aa	longcllinam	yes	---	-----	-----	SS7

DPCN24	CLLI	BEI	ELEI	ALIASA	ALIASI	DOMAIN

```

DESTINATION ENTRIES ALLOCATED: 2000
FULL DPC(s): 64
NETWORK DPC(s): 0
CLUSTER DPC(s): 1
TOTAL DPC(s): 65
CAPACITY (% FULL): 3%
X-LIST ENTRIES ALLOCATED: 500

```

;

The following example includes point codes with the spare (s-), private (p-), and private and spare (ps-) point code subtype prefixes.

rtrv-dstn

```

tekelecstp 05-01-20 21:22:04 EST EAGLE 31.12.0
  DPCA          CLLI          BEI ELEI  ALIASI          ALIASN/N24  DOMAIN
001-001-002    ----- no  --- -----          -----  SS7
p-001-002-004  ----- no  --- -----          -----  SS7
008-001-001    systest1    no  --- -----          -----  SS7
020-001-*      systest2    no  no  -----          -----  SS7
100-101-001    ----- no  ---  1-190-1          -----  SS7
100-101-002    ----- no  ---  s-1-012-1          -----  SS7
100-101-003    ----- no  --- -----          0-0-0-0123-aa  SS7
100-101-004    ----- no  --- -----          s-0-0-0-0123-aa  SS7

```

```

  DPCI          CLLI          BEI ELEI  ALIASA          ALIASN/N24  DOMAIN
s-2-002-1      ----- no  --- -----          -----  SS7
s-2-002-2      ----- no  ---  001-001-003          -----  SS7
s-1-002-3      ----- no  --- -----          -----  SS7
ps-2-100-1     ----- no  --- -----          -----  SS7
s-2-100-1      ----- no  --- -----          -----  SS7
2-100-1        ----- no  --- -----          -----  SS7

```

```

  DPCN          CLLI          BEI ELEI  ALIASA          ALIASI          DOMAIN
ps-1-1-1-2047-aa ----- no  ---  100-120-120  s-1-123-1  SS7
s-0-0-0-0323-aa ----- no  --- -----          -----  SS7
p-0-0-0-0323-aa ----- no  --- -----          -----  SS7
0-0-0-0323-aa  ----- no  --- -----          -----  SS7
ps-1-1-1-0234-aa wearehereto yes --- -----          -----  SS7

```

```

  DPCN24        CLLI          BEI ELEI  ALIASA          ALIASI          DOMAIN

```

```

DESTINATION ENTRIES ALLOCATED: 2000
FULL DPC(s): 64
NETWORK DPC(s): 0
CLUSTER DPC(s): 1
TOTAL DPC(s): 65
CAPACITY (% FULL): 3%
X-LIST ENTRIES ALLOCATED: 500

```

;

The following example appears when an ANSI destination point code with a single SPC assigned to it is requested.

rtrv-dstn:dpca=001-056-005

```

rlghncxa03w 04-09-17 16:02:05 EST EAGLE 31.8.0
  DPCA          CLLI          BEI ELEI  ALIASI          ALIASN/N24  DOMAIN
001-056-002    ----- no  ---  1-056-2          16000      SS7
                SPC          NCAI

```



```
001-056-005    no
```

```
Destination table is (12 of 2000) 1% full
Alias table is (4 of 12000) 1% full
RTRV-DSTN: MASP A - COMPLTD
```

```
;
```

The following example displays a 24-bit ITU-N secondary point code assigned to a 24-bit ITU-N destination point code:

rtrv-dstn:spcn24=99-99-99

```
rlghncxa03w 04-09-17 16:02:05 EST EAGLE 31.8.0
DPCN24      CLLI      BEI ELEI      ALIASI      DOMAIN
012-012-012 ----- no  ---      -----      SS7

SPC          NCAI
099-099-099 ----
```

```
Destination table is (1 of 2000) 1% full
Alias table is (0 of 12000) 0% full
RTRV-DSTN: MASP A - COMPLTD
```

```
;
```

The following example displays a summary report that shows all point code destinations that are members of the given network (20-**-*). This does not include the specified network routing point code (20-002-*).

rtrv-dstn:dpca=20--***

```
rlghncxa03w 06-06-01 21:16:37 EST EAGLE5 35.0.0
DPCA        CLLI      BEI ELEI      ALIASA      ALIASN/N24      DOMAIN
020-002-*   rlghncbb101 no  ---      -----      -----      SS7
020-002-045 rlghncbb101 no  ---      -----      -----      SS7
020-002-050 rlghncbb101 no  ---      -----      -----      SS7

SPC          NCAI
-----      no
```

```
Destination table is (11 of 2000) 1% full
Alias table is (4 of 12000) 1% full
RTRV-DSTN: MASP A - COMPLTD
```

```
;
```

The following example displays a summary report that shows all point code destinations residing in the given cluster (20-2-**). This does not include the specified cluster point code (20-2-*).

rtrv-dstn:dpc=20-2-**

```
rlghncxa03w 06-06-01 21:16:37 EST EAGLE5 35.0.0
DPCA        CLLI      BEI ELEI      ALIASA      ALIASN/N24      DOMAIN
020-002-045 rlghncbb100 no  ---      -----      -----      SS7
020-002-050 rlghncbb100 no  ---      -----      -----      SS7

SPC          NCAI
-----      no
```

```
Destination table is (11 of 2000) 1% full
Alias table is (4 of 12000) 1% full
RTRV-DSTN: MASP A - COMPLTD
```

```
;
```

The following example displays a summary report that shows all point code destinations residing in the given network including the specified network routing point code (20-**-*).

rtrv-dstn:dpca=020-*-***

```
rlghncxa03w 06-06-01 21:16:37 EST EAGLE5 35.0.0
DPCA        CLLI      BEI ELEI      ALIASA      ALIASN/N24      DOMAIN
020-**-*    rlghncbb001 yes yes -----      -----      SS7
020-002-*    rlghncbb000 no  ---      -----      -----      SS7
020-002-045  rlghncbb100 no  ---      -----      -----      SS7
```

```
020-002-050    rlghncbb100 no  ---  -----  -----  SS7
```

```
SPC            NCAI
-----      no
```

```
Destination table is (11 of 2000) 1% full
Alias table is (4 of 12000) 1% full
RTRV-DSTN: MASP A - COMPLTD
```

```
;
```

The following example displays a summary report that shows all point code destinations residing in the given network cluster including the specified cluster point code (**20-2-***), but not including the network routing point code (**20-*-***).

rtrv-dstn:dpc=20-2-***

```
rlghncxa03w 06-06-01 21:16:37 EST EAGLE5 35.0.0
DPCA        CLLI        BEI  ELEI  ALIASA        ALIASN/N24        DOMAIN
020-002-*    rlghncbb000 no  ---  -----  -----  SS7
020-002-045  rlghncbb100 no  ---  -----  -----  SS7
020-002-050  rlghncbb100 no  ---  -----  -----  SS7
```

```
SPC            NCAI
-----      no
```

```
Destination table is (11 of 2000) 1% full
Alias table is (4 of 12000) 1% full
RTRV-DSTN: MASP A - COMPLTD
```

```
;
```

Legend

DPC/DPCA/DPCI/DPCN/DPCN24—Destination point code.

CLLI—Command Language Location Indicator.

BEI—Broadcast Exception Indicator.

ELEI—Cluster Exception-List Exclusion Indicator.

NCAI—Nested Cluster Allowed Indicator.

ALIASA/ALIASI/ALIASN/ALIASN24—Alias point code.

SPC—Secondary point code.

DOMAIN—Destination Entity Domain.

rtrv-e1

Retrieve E1 Information

Use this command to retrieve information for a specified E1 interface or for all E1 interfaces that have been defined by the **ent-e1** command for a 2-port E1 card, an E1/T1 card, an HC-MIM card, an E5-E1T1 card that is used as an E1 card, or an HC-MIM card or E5-E1T1 card used as an SE-HSL card. The following information can be retrieved: card location, E1 port number, CRC4, CAS/CCS, encoding/decoding, channel bridging, timing source, international NFAS data, and national NFAS data.

Keyword: **rtrv-e1**

Related Commands: **chg-e1, dlt-e1, ent-e1, tst-e1**

Command Class: Database Administration

Parameters

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Default: If not specified, all E1 card locations are listed.

:e1port= (optional)

E1 port number. The value must be an E1 port that has already been configured with an E1 interface on the specified E1 card.

Range: 1-8

Ports 3 - 8 can be specified only for HC-MIM and E5-E1T1 cards.

Default: If not specified, all E1 ports are listed.

Example

rtrv-e1

rtrv-e1:loc=1307:e1port=2

rtrv-e1:loc=1311:e1port=1

Dependencies

The **loc** and **e1port** parameters must both be specified if any parameters are specified for the command.

The specified card location (**loc** parameter) must be equipped.

The card in the specified card location (**loc** parameter) must be a **lime1** card type.

The port specified by the **e1port** parameter must be already equipped with an E1 interface.

Notes

None.

Output

The following example shows HC-MIM cards used as E1 cards. Cards with CHANBRDG=MASTER or CHANBRDG=SLAVE have 2 ports configured in channel bridging mode to allow non-signaling data pass-through.

rtrv-e1

```
rlghncxa03w 05-01-20 09:07:58 EST EAGLE5 33.0.0
E1
LOC  PORT  CRC4  CAS  ENCODE  E1TSEL  SI  SN  CHANBRDG  CLASS  RATE
1307  7      ON   OFF  HDB3    LINE      0  0  -----  CHAN  ----
1307  8      ON   OFF  HDB3    LINE      0  0  -----  CHAN  ----
1311  1      OFF  OFF  AMI     EXTERNAL  3  6  MASTER   CHAN  ----
1311  2      OFF  OFF  AMI     EXTERNAL  3  6  SLAVE    CHAN  ----
1311  5      OFF  OFF  AMI     RECOVERED 3  6  MASTER   CHAN  ----
1311  6      OFF  OFF  AMI     RECOVERED 3  6  SLAVE    CHAN  ----
;
```

The following example shows time slot entries (TSx) for the E1 card.

rtrv-e1:loc=1307:e1port=7

```
rlghncxa03w 05-01-20 09:07:58 EST EAGLE5 33.0.0
E1
LOC  PORT  CRC4  CAS  ENCODE  E1TSEL  SI  SN  CHANBRDG  CLASS  RATE
1307  7      ON   OFF  HDB3    LINE      0  0  -----  CHAN  ----

TS0  (N/A)    TS8  -----  TS16 -----  TS24 -----
TS1  -----  TS9  -----  TS17 -----  TS25 -----
TS2  -----  TS10 -----  TS18 -----  TS26 -----
TS3  -----  TS11 -----  TS19 -----  TS27 -----
TS4  -----  TS12 1307,A  TS20 -----  TS28 -----
TS5  -----  TS13 -----  TS21 -----  TS29 -----
TS6  -----  TS14 -----  TS22 -----  TS30 -----
TS7  -----  TS15 -----  TS23 -----  TS31 -----
;
```

The following example shows information for port 7 for the E1 card in card location 1311. Port 8 is channel bridged with port 7 on this card for non-signaling data pass through.

rtrv-e1:loc=1311:e1port=7

```
rlghncxa03w 05-01-20 09:07:58 EST EAGLE5 33.0.0
E1
LOC  PORT  CRC4  CAS  ENCODE  E1TSEL  SI  SN  CHANBRDG  CLASS  RATE
1311  7      OFF  OFF  AMI     EXTERNAL  3  6  MASTER   CHAN  ----

TS0  (N/A)    TS8  -----  TS16 -----  TS24 -----
TS1  -----  TS9  -----  TS17 1311,B31  TS25 -----
TS2  -----  TS10 -----  TS18 -----  TS26 -----
TS3  -----  TS11 -----  TS19 -----  TS27 -----
TS4  -----  TS12 1311,A  TS20 -----  TS28 -----
TS5  -----  TS13 -----  TS21 1311,A24  TS29 -----
TS6  -----  TS14 -----  TS22 -----  TS30 -----
TS7  -----  TS15 -----  TS23 -----  TS31 -----
;
```

The following example shows information for port 8 for the E1 card in card location 1311. Port 8 is channel bridged with port 7 on this card for non-signaling data pass through.

rtrv-e1:loc=1311:e1port=8

```
rlghncxa03w 05-01-20 09:07:58 EST EAGLE5 33.0.0
E1
LOC  PORT  CRC4  CAS  ENCODE  E1TSEL  SI  SN  CHANBRDG  CLASS  RATE
1311  8      OFF  OFF  AMI     EXTERNAL  3  6  SLAVE    CHAN  ----
```

;

The following example shows information for the card in location 1307, which has an SE-HSL link. Time slot entries (TSx) are not shown for cards with SE-HSL links because time slots are not configured for "unchannelized" cards.

rtrv-e1:loc=1307:e1port=7

rlghncxa03w 05-05-20 09:07:58 EST EAGLE5 34.0.0

E1									LINK	MINSU
LOC	PORT	CRC4	CAS	ENCODE	E1TSEL	SI	SN	CHANBRDG	CLASS	RATE
1307	7	ON	---	HDB3	LINE	--	--	-----	UNCHAN	1000

;

The following example shows HC-MIM cards used as E1 cards. Cards with LINKCLASS=UNCHAN have SE-HSL links.

rtrv-e1

rlghncxa03w 05-01-20 09:07:58 EST EAGLE5 34.0.0

E1									LINK	MINSU
LOC	PORT	CRC4	CAS	ENCODE	E1TSEL	SI	SN	CHANBRDG	CLASS	RATE
1307	7	ON	---	HDB3	LINE	--	--	-----	UNCHAN	1000
1307	8	ON	---	HDB3	LINE	--	--	-----	UNCHAN	2000
1311	1	OFF	ON	AMI	LINE	1	1	-----	CHAN	----

;

Legend

LOC—E1 card location in an EAGLE 5 ISS shelf.

E1PORT—E1 port number on an E1 card.

CRC4—CRC4 indicator.

CAS—CAS/CRC indicator (**on** = CAS is used; **off** = CRC is used).

ENCODE—Indicator for use of HDB3 or AMI encoding/decoding.

E1TSEL—E1 timing source indicator (**external** = master timing source; **line** = slave timing source; **recovered** = the timing source for the even-numbered port in a channel bridged pair is recovered from the odd-numbered port of the pair.)

SI—Value of two Spare International bits of NFAS data.

SN—Value of five Spare National bits of NFAS data.

CHANBRDG—Indicates whether an odd numbered port is not channel bridged with its adjacent even numbered port for non-signaling data pass through (dashes), or the port is the odd-numbered channel bridged port on the card (MASTER), or the port is the even-numbered channel bridged port on the card (SLAVE) on an HC-MIM or E5-E1T1 card.

LINKCHAN—Indicates whether an HC-MIM or E5-E1T1 card is used as a "channelized" E1 Card (CHAN) or an "unchannelized" SE-HSL card (UNCHAN).

MINSURATE—Minimum number of signaling units present on a link uniformly distributed. A value appears in this field only when the LINKCHAN field value is UNCHAN.

TSx—Timeslot.

rtrv-eisopts**Retrieve EAGLE Support for Integrated Sentinel Options**

Use this command to retrieve the status (on or off) of the copy function for the EAGLE 5 Integrated Monitoring Support (E5IS) feature.

Keyword: rtrv-eisopts

Related Commands: chg-eisopts

Command Class: Security Administration

Parameters

This command has no parameters.

Example

rtrv-eisopts

Dependencies

The EAGLE 5 Integrated Monitoring Support (E5IS) feature must be turned on before this command can be entered.

Notes

None

Output

rtrv-eisopts

```
rlghncxa03w 04-02-20 09:07:58 EST EAGLE 31.3.0
EISOPTION
```

```
-----
```

```
EISCOPY                ON
```

```
;
```

rtrv-feat

Retrieve Feature

Use this command to show the status of optional features in the system that are controlled with the **chg-feat** command.

Keyword: rtrv-feat

Related Commands: chg-feat

Command Class: Program Update

Parameters

This command has no parameters.

Example

rtrv-feat

Dependencies

None

Notes

None

Output



CAUTION

CAUTION: The following output example may differ from the output shown at your terminal and may include unsupported features. A feature must be purchased before you turn the feature on. If you are not sure whether you have purchased a feature, contact your Tekelec Sales Representative or Account Representative. After you turn on a feature with the **chg-feat** command, you cannot turn it off.

rtrv-feat

```
rlghncxa03w 04-01-28 11:34:04 EST EAGLE 31.3.0
EAGLE FEATURE LIST
```

GTT	= on	GWS	= off	NRT	= off
X25G	= off	LAN	= off	CRMD	= off
SEAS	= off	LFS	= off	MTPRS	= off
FAN	= off	DSTN5000	= off	WNP	= off
CNCF	= off	TLNP	= off	SCCPCNV	= off
TCAPCNV	= off	IPISUP	= off	DYNRTK	= off
X252000	= off	INP	= off	PLNP	= off
NCR	= off	ITUMTPRS	= off	SLSOCB	= off
EGTT	= off	VGTT	= off	MGTT	= off
MPC	= off	ITUDUPPC	= off	GFLEX	= off
GPORT	= off	MEASPLAT	= off	TSCSYNC	= off
E5IS	= off				

;

Legend

GTT—The Global Title Translation feature

GWS—The Gateway Screening feature

NRT—Network Routing feature

X25G—The X.25/SS7 Gateway feature

LAN—The STPLAN feature

CRMD—The Cluster Routing and Management Diversity feature

SEAS—The Signaling Engineering Administration System feature

LFS—The Link Fault Sectionalization feature

MTPRS—The ANSI MTP Restart feature

FAN—The Cooling Fan feature

DSTN5000—The DSTN5000 (5000 Routes) feature

WNP—The Wireless Number Portability feature

CNCF—The Calling Name Conversion Facility with Redirect Capability feature

TLNP—The Triggerless Local Number Portability feature

IPISUP—The ISUP Routing over IP feature

DYNRTK—The Dynamic Routing Key feature

SCCPCNV—The SCCP Conversion feature

TCAPCNV—The TCAP Conversion feature

GFLEX—The GSM Flexible Numbering feature

X252000—The 2000 X.25 Routes and Destinations feature

PLNP—The PCS 1900 Number Portability feature

NCR—The Nested Cluster Routing feature

ITUMTPRS—ITU MTP Restart feature
SLSOCB—Other CIC Bit Used feature
EGTT—The Enhanced Global Title Translation feature
VGTT—Variable Length GTT feature
MGTT—The Global Title Modifications feature
MPC—The Multiple Point Code feature
INP—The INAP Number Portability feature
ITUDUPPC—The ITU National Duplicate Point Code feature
GPORT—The GSM Mobile Number Portability feature
TSCSYNC—The Time Slot Counter Synchronization (TSC) feature
E5IS—The EAGLE 5 Integrated Monitoring Support feature
MEASPLAT—The Measurements Platform feature

rtrv-frm-pwr

Retrieve Frame Power Threshold

Use this command to retrieve a list of entries for all provisioned frames or the entry for the specified frame from the Frame Power Threshold (FPT) table. The command displays only provisioned entries for provisioned frames.

Keyword: **rtrv-frm-pwr**

Related Commands: **chg-frm-pwr**, **dlt-frm-pwr**, **ent-frm-pwr**, **rtrv-stp**

Command Class: Database Administration

Parameters

:frm= (optional)

Frame ID. The command displays the FPT table entry for the specified provisioned frame.

Range: **cf00**, **ef00**, **ef01**, **ef02**, **ef03**, **ef04**

cf00—Control frame

ef00—First extension frame

ef01—Second extension frame

ef02—Third extension frame

ef03—Fourth extension frame

ef04—Fifth extension frame

Example

Retrieve all provisioned Frame Power Threshold table entries.

rtrv-frm-pwr

Retrieve Frame Power Threshold table entries for the control frame (frm=cf00)..

rtrv-frm-pwr:frm=cf00

Dependencies

The **frm** parameter value must specify a provisioned frame.

The **frm** parameter value must specify a frame that has a Frame Power Threshold entry provisioned in the FPT table.

Notes

If no parameter is specified in the command, all provisioned FPT table entries are displayed.

If the frm parameter is specified, the FPT entry corresponding to the specified frame is displayed.

Output

Retrieve all Frame Power Threshold table entries.

rtrv-frm-pwr

tekelecstp 06-04-11 12:38:01 EST EAGLE 35.0.0

Frame	Power Threshold (Amps)
cf00	56
ef00	36
ef01	40

FRAME POWER THRESHOLD table is (3 of 10) 30% full;
RTRV-FRM-PWR: MASP A - COMPLTD

;

Retrieve the Frame Power Threshold table entry for the control shelf only.

rtrv-frm-pwr:frm=cf00

tekelecstp 06-04-11 12:38:01 EST EAGLE 35.0.0

Frame	Power Threshold (Amps)
cf00	56

FRAME POWER THRESHOLD table is (3 of 10) 30% full;
RTRV-FRM-PWR: MASP A - COMPLTD

;

rtrv-ftp-serv

Retrieve FTP Server Entry

Use this command to retrieve an entry for an FTP server from the FTP Server table or all entries in the FTP Server table.

Keyword: rtrv-ftp-serv

Related Commands: chg-ftp-serv, dlt-ftp-serv, ent-ftp-serv

Command Class: Database Administration

Parameters

:app= (optional)

The FTP Client application that interfaces with the FTP Server.

Range: meas, user

meas — the Measurements Platform application

user — the FTP-based Table Retrieve Application (FTRA)

:ipaddr= (optional)

IP Address of the FTP Server.

Range: 4 numbers separated by dots, with each number in the range of 0-255.

4 numbers separated by dots, with each number in the range of 000-255.

:mode= (optional)

Full or brief report indicator.

Range: full, brief

Default: brief

Example

rtrv-ftp-serv

```
rtrv-ftp-serv:app=meas:ipaddr=1.255.0.100
rtrv-ftp-serv:mode=brief
rtrv-ftp-serv:app-meas
rtrv-ftp-serv:ipaddr=1.255.0.100
rtrv-ftp-serv:mode=full
```

Dependencies

The **app** parameter must specify an application that uses the FTP Support feature.

The **ipaddr** parameter must specify a valid IP address for the FTP server.

The **mode** parameter allows you to display either the full 100 characters of the path string for each entry (**mode=full**), or the first 29 characters of the path string for each entry (**mode=brief**). The default is **brief**.

Notes

The LOGIN and PATH are displayed in mixed case.

Output

The following examples show output when the EAGLE OA&M IP Security feature is not enabled:

rtrv-ftp-serv:app=meas:ipaddr=1.255.0.100

rlghncxa03w 04-02-28 11:34:04 EST EAGLE 31.3.0

APP	IPADDR	LOGIN	PRI0	PATH
meas	1.255.0.100	ftpmeas3	3	~ftpmeas3\files

FTP SERV table is (1 of 10) 10% full

;

rtrv-ftp-serv:mode=brief

rlghncxa03w 04-02-28 11:34:04 EST EAGLE 31.3.0

APP	IPADDR	LOGIN	PRI0	PATH
meas	1.255.0.100	ftpmeas3	3	~ftpmeas3\files
meas	1.255.0.101	ftpmeas2	2	\home\ftpmeas2\public
user	1.255.0.100	tekiperson1	1	\share

FTP SERV table is (3 of 10) 20% full

;

rtrv-ftp-serv:app=meas

rlghncxa03w 04-02-28 11:34:04 EST EAGLE 31.3.0.

APP	IPADDR	LOGIN	PRI0	PATH
meas	1.255.0.100	ftpmeas3	3	~ftpmeas3\files
meas	1.255.0.101	ftpmeas2	2	\home\ftpmeas2\public

FTP SERV table is (2 of 10) 20% full

;

rtrv-ftp-serv:ipaddr=1.255.0.100

rlghncxa03w 04-02-28 11:34:04 EST EAGLE 31.3.0.

APP	IPADDR	LOGIN	PRI0	PATH
meas	1.255.0.100	ftpmeas3	3	~ftpmeas3\files
user	1.255.0.100	tekiperson1	1	\share

FTP SERV table is (2 of 10) 20% full

;

rtrv-ftp-serv:mode=full

rlghncxa03w 04-02-28 11:34:04 EST EAGLE 31.3.0.

APP	IPADDR	LOGIN	PRI0	PATH
meas	1.255.0.100	ftpmeas3	3	~ftpmeas3\files
meas	1.255.0.101	ftpmeas2	5	\tmp\measurements\backup\data\path\that\goes\on\and\on\and\on\and\keeps\on scrolling\to\new\line
user	1.255.0.100	tekiperson1	1	\share

```
FTP SERV table is (3 of 10) 30% full
```

```
;
```

The following example shows output when the EAGLE OA&M IP Security feature is enabled and turned off:

rtrv-ftp-serv:mode=full

```
tekelecstp 04-07-15 12:41:58 EST EAGLE 31.6.0
```

```
FTP Client Security: OFF
```

APP	IPADDR	LOGIN	PRI0
meas	1.255.0.100	ftpmeas3	3
Path:	~ftpmeas3/files		
meas	1.255.0.101	ftpmeas2	5
Path:	/tmp/measurements/backup/data/path/that/goes/on/and/on/and/on/and/keeps/on/scrolling/to/new/line		
user	1.255.0.100	teperson1	1
Path:	\share		

```
FTP SERV table is (3 of 10) 30% full
```

```
;
```

The following example shows output when the EAGLE OA&M IP Security feature is turned on:

rtrv-ftp-serv:mode=full

```
tekelecstp 04-07-15 12:41:58 EST EAGLE 31.6.0
```

```
FTP Client Security: ON
```

APP	IPADDR	LOGIN	PRI0
meas	1.255.0.100	ftpmeas3	3
Path:	~ftpmeas3/files		
meas	1.255.0.101	ftpmeas2	5
Path:	/tmp/measurements/backup/data/path/that/goes/on/and/on/and/on/and/keeps/on/scrolling/to/new/line		
user	1.255.0.100	teperson1	1
Path:	\share		

```
FTP SERV table is (3 of 10) 30% full
```

```
;
```

rtrv-gpl

Retrieve Generic Program Load

Use this command to show the version numbers of the GPLs stored on each fixed disk (TDM) or removable cartridge (MDAL, if available) and the system release table stored on each fixed disk

Keyword: **rtrv-gpl**

Related Commands: **act-gpl, act-gpl, chg-gpl, chg-gpl, copy-gpl, rept-stat-gpl, rept-stat-gpl**

Command Class: Program Update

Parameters

:gpl= (optional)

The type of GPL to report on.

Range: *ayyyyyyy*

atmansi—The GPL is used by the LIM cards to support the high-speed ATM signaling link feature.

atmitu—The GPL is used by the E1 ATM cards to support the high-speed E1 ATM signaling link feature.

blbios—A flash GPL containing the BIOS ROM image on HC-MIM cards that are used for E1 or T1 signaling links.

blcpld—A flash GPL containing the bit files for the CPLD on HC-MIM cards that are used for E1 or T1 signaling links.

bldiag—A flash GPL containing the diagnostic code on HC-MIM cards that are used for E1 or T1 signaling links.

blvxw—A flash GPL containing the VxWorks operating system on HC-MIM cards that are used for E1 or T1 signaling links.

bpdcm—This GPL is used in communications in the **init-flash** process.

bphcap—This GPL is used to support Board PROM for HCAP flash memory.

bphcapt—This GPL is used to support Board PROM for HCAP-T flash memory.

bphmux—This GPL is used to support Board PROM for HMUX flash memory.

bpmpl—This GPL is used to support Board PROM for MPL flash memory.

bpmplt—This GPL is used to support Board PROM for E1/T1 flash memory and Board PROM for the MPL-T flash memory.

ccs7itu—This GPL is used by the LIM cards for ITU-TSS MTP functionality.

cdu—This GPL is used in the card manufacturing process for testing, and when directed by Tekelec Technical Services.

ebdablm—This GPL is used by the TSM cards for enhanced bulk download.

ebdaclm—This GPL is used by the DCM card to transmit the LSMS LNP database to the EAGLE 5 ISS at high speed over an Ethernet connection for enhanced bulk download.

eroute—This GPL is used by the STC cards for for the EAGLE 5 Integrated Monitoring Support feature.

gls—This GPL is used by the TSM cards for downloading gateway screening to LIM cards.

hipr—The communication software used on the High Speed IMT Packet Router (HIPR) card.

imt—This GPL is the communication processor on the logical processing element (LPE).

imtpci—The communication software that operates the IMT bus on HC-MIM cards.

ipgwi—This GPL is used by the DCM card for TCP/IP point-to-point connectivity for ITU point codes.

iplim—This GPL is used by the DCM card for TCP/IP point-to-point connectivity for ANSI point codes.

iplimi—This GPL is used by the DCM card for TCP/IP point-to-point connectivity for ITU point codes.

ips—This GPL is used by the IPSM card for the IP User Interface feature.

mcp—This GPL is used by the MCPM card for the Measurements Platform feature.

plde1t1—This GPL is used to support Board PROM for HC-MIM flash memory.

pldpmc1—This GPL is used to support Board PROM for HC-MIM flash memory.

sccp—This GPL is used by the TSM cards for the global title translation application.

ss7ansi—This GPL is used by the LIM cards for the MTP functionality.

ss7gx25—This GPL is used by the LIM cards to support X.25 functionality.

ss7hc—This GPL is used to support the functionality for the HC-MIM (High Capacity Multi-Channel Interface Module) card. The HC-MIM card runs either the **ss7ansi** or **cc7itu** application; the **ss7hc** GPL allows the card to support up to 64 signaling links for E1 and T1 functionality.

ss7ipgw—This GPL is used by the DCM card to support TCP/IP point-to-multipoint connectivity.

ss7ml—This GPL is used to support the functionality for the multi-port LIM (MPL or MPL-T) card. The MPL cards run only the **ss7ansi** application on a LIMDS0 card (as

specified with the **ent-card:type=limds0:appl=ss7ansi** command); the **ss7ml** GPL allows the card to support eight signaling link ports rather than the usual two ports for LIM cards. The MPL cards support only the DS0 interface.

stplan—This GPL is used by the ACM card to support the STPLAN application.

vcdu—This GPL is used in the card manufacturing process for testing, and when directed by Tekelec Technical Services.

vscpp—This GPL is used by the DSM card to support the G-Flex, G-Port, LNP ELAP Configuration, and INP features. If the G-Flex, G-Port, LNP ELAP Configuration, or INP feature is not turned on, and a DSM card is present, the VSCCP GPL processes normal GTT traffic.

vxwslan—This GPL is used by the DCM card to support the STPLAN application.

iplhc—This GPL is used by the E5-ENET card for TCP/IP point-to-point connectivity for both ANSI and ITU point codes.

ipghc—This GPL is used by the E5-ENET card to support TCP/IP point-to-multipoint connectivity for both ANSI and ITU point codes.

ss7epm—This GPL is used by the E5-E1T1 cards to support the MTP functionality for both ANSI and ITU applications; the **ss7epm** GPL allows the card to support up to 32 signaling links for E1 and T1 functionality.

blbepm—A flash GPL containing the BIOS ROM image on EPM cards.

blvxw6—A flash GPL containing the VxWorks operating system on EPM cards.

bldiag6—A flash GPL containing the diagnostic code on EPM cards.

Default: Display all

:appl= (obsolete)

This parameter is obsolete. Use the **gpl** parameter.

The **appl** parameter has been replaced with the **gpl** parameter to more accurately indicate that a GPL, and not an application, is specified for the parameter value

Example

```
rtrv-gpl
rtrv-gpl:gpl=vscpp
rtrv-gpl:gpl=ss7hc
rtrv-gpl:gpl=atmansi
rtrv-gpl:gpl=vscpp
rtrv-gpl:gpl=bpmp1
rtrv-gpl:gpl=bphmux
rtrv-gpl:gpl=hipr
rtrv-gpl:gpl=ss7ml
rtrv-gpl:gpl=mcp
rtrv-gpl:gpl=bpmp1t
rtrv-gpl:gpl=atmitu
rtrv-gpl:gpl=bphcapt
rtrv-gpl:gpl=ss7hc
rtrv-gpl:gpl=blbios
rtrv-gpl:gpl=blcp1d
rtrv-gpl:gpl=bldiag
rtrv-gpl:gpl=intpci
```

```
rtrv-gpl:gpl=pldeltl  
rtrv-gpl:gpl=pldpmc1  
rtrv-gpl:gpl=blvxw  
rtrv-gpl:gpl=ss7ansi  
rtrv-gpl:gpl=gl
```

Notes

To check the version of the EPAP or ELAP application, use the **rept-stat-mps** command.

If no application is specified, the approved and trial versions for all GPLs are shown, as well as the release table and removable GPL.

The approved GPL is the GPL that resides on the fixed disk and was made the approved version by specifying the GPL version number while executing the **act-gpl** command.

The trial GPL is the version of the GPL that was downloaded from the removable cartridge, but not activated by the **act-gpl** command.

When the **act-gpl** command is executed, the version specified in the command becomes the approved GPL and the previously approved GPL becomes the trial GPL.

If a GPL is not found, a version of "-----" is shown. This should happen only for the utility and OAM GPL trial versions on the fixed disk and for all GPLs on the removable when the removable cartridge is not inserted.

If the approved GPL version does not match the GPL version shown in the ACTIVE MASP RELEASE column, an alarm is activated.

A minor alarm is shown, and ALM is displayed for each APPROVED GPL (**rtrv-gpl**) and for each RUNNING GPL (**rept-stat-gpl**) that does not match the GPL in the RELEASE column of the **rtrv-gpl** command output. The minor alarm is not activated, but ALM is displayed for each GPL that does not match the GPL in the RELEASE column.

ALM is always displayed when the approved version does not match the release version. You cannot turn off *fixed disk auditing*. The auditing state shown here is for the **rept-stat-gpl** command. You can turn on and off *running version auditing*.

A GPL audit cannot be in progress when this command is entered.

Output

The following example lists all possible GPLs that can be shown in the output when no GPL is specified. All of these GPLs will not appear in the output for your system, because all GPLs are not valid in the same system.

* The entries marked with an asterisk appear in the output only if an OAP is provisioned and running. Systems that use two OAPs will show two entries for the OAP: OAP A and OAP B.

rtrv-gpl

```
rlghncxa03w 06-06-01 11:34:04 EST EAGLE 35.0.0
GPL      CARD  RELEASE      APPROVED      TRIAL      REMOVE TRIAL
EOAM     1114   125-003-000  125-003-000   125-003-000 125-003-000
EOAM     1116   125-003-000  125-003-000   -----
SS7ANSI  1114   125-002-000  125-002-000   125-002-000 125-002-000
SS7ANSI  1116   125-002-000  125-002-000   125-002-000 -----
SCCP     1114   125-002-000  125-002-000   125-002-000 125-002-000
SCCP     1116   125-002-000  125-002-000   125-002-000 -----
GLS      1114   125-002-000  125-002-000   125-002-000 125-002-000
GLS      1116   125-002-000  125-002-000   125-002-000 -----
CDU      1114   125-000-000  125-000-000   125-000-000 125-002-000
CDU      1116   125-000-000  125-000-000   125-002-000 -----
CCS7ITU  1114   125-002-000  125-002-000   125-002-000 125-002-000
CCS7ITU  1116   125-002-000  125-002-000   125-002-000 -----
SS7GX25  1114   125-001-000  125-001-000   125-001-000 125-001-000
SS7GX25  1116   125-001-000  125-001-000   125-001-000 -----
STPLAN   1114   125-001-000  125-001-000   125-001-000 125-001-000
STPLAN   1116   125-001-000  125-001-000   125-001-000 -----
IMT      1114   125-001-000  125-001-000   125-001-000 125-001-000
IMT      1116   125-001-000  125-001-000   125-001-000 -----
ATMANSI  1114   125-002-000  125-002-000   125-002-000 125-002-000
ATMANSI  1116   125-002-000  125-002-000   125-002-000 -----
BPHCAP   1114   125-001-000  125-001-000   125-001-000 125-001-000
BPHCAP   1116   125-001-000  125-001-000   125-001-000 -----
BPDCM    1114   125-001-000  125-001-000   125-001-000 125-001-000
BPDCM    1116   125-001-000  125-001-000   125-001-000 -----
EBDABLM  1114   125-001-000  125-001-000   125-001-000 125-001-000
EBDABLM  1116   125-001-000  125-001-000   125-001-000 -----
EBDADCM  1114   125-001-000  125-001-000   125-001-000 125-001-000
EBDADCM  1116   125-001-000  125-001-000   125-001-000 -----
VXWSLAN  1114   125-001-000  125-001-000   125-001-000 125-001-000
VXWSLAN  1116   125-001-000  125-001-000   125-001-000 -----
IPLIM    1114   125-002-000  125-002-000   125-002-000 125-002-000
IPLIM    1116   125-002-000  125-002-000   125-002-000 -----
IPLIMI   1114   125-002-000  125-002-000   125-002-000 125-002-000
IPLIMI   1116   125-002-000  125-002-000   125-002-000 -----
SS7IPGW  1114   125-002-000  125-002-000   125-002-000 125-002-000
SS7IPGW  1116   125-002-000  125-002-000   125-002-000 -----
VSCCP    1114   125-002-000  125-002-000   125-002-000 125-002-000
VSCCP    1116   125-002-000  125-002-000   125-002-000 -----
ATMITU   1114   125-001-000  125-001-000   125-001-000 125-001-000
ATMITU   1116   125-001-000  125-001-000   125-001-000 -----
VCDU     1114   125-000-000  125-000-000   125-000-000 125-002-000
VCDU     1116   125-000-000  125-000-000   125-002-000 -----
BPMPPL   1114   125-001-000  125-001-000   125-001-000 125-001-000
BPMPPL   1116   125-001-000  125-001-000   125-001-000 -----
SS7ML    1114   125-001-000  125-001-000   125-001-000 125-001-000
SS7ML    1116   125-001-000  125-001-000   125-001-000 -----
BPHMUX   1114   125-001-000  125-005-000   125-005-000 125-005-000
BPHMUX   1116   125-001-000  125-005-000   125-005-000 -----
IPGWI    1114   125-001-000  125-001-000   125-001-000 125-001-000
IPGWI    1116   125-001-000  125-001-000   125-001-000 -----
IPS      1114   125-001-000  125-001-000   125-001-000 125-001-000
IPS      1116   125-001-000  125-001-000   125-001-000 -----
```


EROUTE	1114	125-001-000	125-001-000	125-001-000	125-001-000
EROUTE	1116	125-001-000	125-001-000	125-001-000	-----
BPMPLT	1114	002-103-001	002-103-001	002-103-001	125-001-000
BPMPLT	1116	002-103-001	002-103-001	002-103-001	-----
MCP	1114	125-001-000	125-001-000	125-001-000	125-001-000
MCP	1116	125-001-000	125-001-000	125-001-000	-----
BPHCAPT	1114	002-116-003	002-116-003	002-116-003	125-001-000
BPHCAPT	1116	002-116-003	002-116-003	002-116-003	-----
MPLG	1114	125-001-000	125-001-000	125-001-000	125-001-000
MPLG	1116	125-001-000	125-001-000	125-001-000	-----
HIPR	1114	125-001-000	125-005-000	125-005-000	125-005-000
HIPR	1116	125-001-000	125-005-000	125-005-000	-----
SS7HC	1114	125-001-000	125-001-000	125-001-000	125-001-000
SS7HC	1116	125-001-000	125-001-000	125-001-000	-----
BLCPLD	1114	125-001-000	125-001-000	125-001-000	125-001-000
BLCPLD	1116	125-001-000	125-001-000	125-001-000	-----
BLDIAG	1114	125-001-000	125-001-000	125-001-000	125-001-000
BLDIAG	1116	125-001-000	125-001-000	125-001-000	-----
PLDE1T1	1114	125-001-000	125-001-000	125-001-000	125-001-000
PLDE1T1	1116	125-001-000	125-001-000	125-001-000	-----
PLDPMC1	1114	125-001-000	125-001-000	125-001-000	125-001-000
PLDPMC1	1116	125-001-000	125-001-000	125-001-000	-----
BLBIOS	1114	125-001-000	125-001-000	125-001-000	125-001-000
BLBIOS	1116	125-001-000	125-001-000	125-001-000	-----
BLVXW	1114	125-001-000	125-001-000	125-001-000	125-001-000
BLVXW	1116	125-001-000	125-001-000	125-001-000	-----
IMTPCI	1114	125-001-000	125-001-000	125-001-000	125-001-000
IMTPCI	1116	125-001-000	125-001-000	125-001-000	-----
PLSIFB	1114	125-001-000	125-005-000	125-005-000	125-005-000
PLSIFB	1116	125-001-000	125-005-000	125-005-000	-----
OAP*	A	125-001-000	125-001-000	-----	125-002-000
OAP*	B	125-001-000	125-002-000	ALM	-----
IPLHC	1114	097-003-000	097-003-000	028-003-011	097-003-000
IPLHC	1116	097-003-000	097-003-000	028-003-011	-----
IPGHC	1114	097-003-000	097-003-009	ALM	097-003-001
IPGHC	1116	097-003-000	097-003-009	ALM	097-003-001
SS7EPM	1114	126-005-000	126-005-000	126-005-000	-----
SS7EPM	1116	126-005-000	126-005-000	126-005-000	126-005-000
BLBEPM	1114	126-005-000	126-005-000	126-005-000	-----
BLBEPM	1116	126-005-000	126-005-000	126-005-000	126-005-000
BLVXW6	1114	126-005-000	126-005-000	126-005-000	-----
BLVXW6	1116	126-005-000	126-005-000	126-005-000	126-005-000
BLDIAG6	1114	126-005-000	126-005-000	126-005-000	-----
BLDIAG6	1116	126-005-000	126-005-000	126-005-000	126-005-000

;

In the following example, card location 1115 is the active MASP and the cartridge is inserted.

rtrv-gpl:gpl=utility

```
rlghncxa03w 04-01-05 11:34:04 EST EAGLE 31.3.0
GPL Auditing ON
```

GPL	CARD	RELEASE	APPROVED	TRIAL	REMOVE TRIAL
UTILITY	1114	101-016-000	101-016-000	-----	-----
UTILITY	1116	101-016-000	101-016-000	-----	101-016-000

;

When a GPL is specified in this command, the output is in the following format. The specified GPL is shown in the GPL column.

rtrv-gpl:gpl=hipr

```
rlghncxa03w 05-01-04 07:01:08 EST EAGLE5 33.0.0
GPL Auditing ON
```

GPL	CARD	RELEASE	APPROVED	TRIAL	REMOVE TRIAL
HIPR	1114	118-020-000	118-020-000	118-020-000	118-020-000

```

      HIPR      1116  118-020-000  118-020-000      118-020-000  -----
;

```

Legend

GPL—The type of GPL associated with each card in the display

APPROVED—The GPL version that is the approved GPL.

CARD—The card location.

RELEASE—version number of each GPL that is required to be installed and approved for a specific release of software for the system.

REMOVE TRIAL—The GPL version that is on the removable cartridge.

TRIAL—**THE GPL VERSION THAT IS THE TRIAL GPL.**

-----GPL is not present at the specified location.

ALM—An alarm indicator showing that the system has an approved GPL that is not the GPL required for this software release according to the active MASP system release table.

CORRUPTED—Data audit has determined that the GPL is corrupted.

rtrv-gsmmap-scrn

Retrieve GSM MAP Screening Entry

Use this command to retrieve the GSM (Global System for Mobile Telecommunication) MAP (Mobile Application Part) Screening CgPA and CdPA entries and their attributes from the active system database.

Keyword: rtrv-gsmmap-scrn

Related Commands: chg-gsmmap-scrn, dlt-gsmmap-scrn, ent-gsmmap-scrn

Command Class: Database Administration

Parameters

:opname= (mandatory)

The user-defined name for the operation code. The **opname** value references the operation code (**opcode**) defined with the **ent-gsms-opcode** command.

Range: ayyyyyy
Up to 8 alphanumeric characters

:action= (optional)

The screening action to take if a message is forbidden as defined by the **forbid** parameter.

Range: pass, discard, atterr, route, forward, duplicate, dupdisc

pass—Route the message as normal to the destination.

discard—The MSU is to be discarded.

atterr—An ATI (Any Time Interrogation) reject message is generated. This option is only valid for ATI MAP operation codes.

route—Route the message as normal to the original destination node; no UIM will be generated. The original destination is the node to which normal GTT would be sent if no GSM MAP actions are taken.

forward—Route the original message to the forward node. The original message will not be sent to the original node. If, however, the forward node is not available for routing, the MSU is routed to the original node.

duplicate—Route the message as normal to the original destination and route a copy of the original message to the duplicate node. If the MSU fails to route to the duplicate node, a UIM is generated indicating the duplicate routing failure.

dupdisc—Route the original message to the duplicate node. The original message will not be sent to the original node. If, however, the duplicate node is not available for routing, the MSU is routed to the original node.

Default: Display all screening actions

:cdsr= (optional)

CdPA Screening Reference.

Range: *ayyy*

1 alphabetic character followed by up to 3 optional alphanumeric characters

:cgsr= (optional)

CgPA Screening Reference.

Range: *ayyy*

1 alphabetic character followed by up to 3 optional alphanumeric characters

:eaddr= (optional)

The ending origination address, in association with **npv** and **naiv** for the CGPA address to be screened.

Range: 1-15 digits

1–15 hexadecimal digits. Valid digits are **0–9, a-f, A-F**

:forbid= (optional)

The forbidden parameter value. Indicates a forbidden parameter for the entered address. If a forbidden parameter is detected the message is rejected by the action defined by the **action** parameter.

Range: **all, location, none, state**

all—All parameters are forbidden. Take the specified screening action defined by the **action** parameter for messages arriving at the system.

location—Take the specified screening action defined by the **action** parameter for messages arriving at the system that contain **location** as the forbidden parameter value for the entered address/operation code combination. Note: The **location** value is valid only for GSM ATI messages.

none—None of the parameters are forbidden. Route the message to its destination.

state—Take the specified screening action defined by the **action** parameter for messages arriving at the system that contain **state** as the forbidden parameter value for the entered address/operation code combination. Note: The **state** value is valid only for GSM ATI messages.

Default: Display all forbidden parameter values

:mapset= (optional)

The MAP set ID.

Range: **1-36000 dflt**

dflt—Default MAP set

:naiv= (optional)

Nature of Address value for the address or range of CgPA and CdPA addresses. When this parameter is specified, the **npv** parameter must be specified.

Range: **0-127, ***

:npv= (optional)

Numbering Plan value for the address or range of CgPA and CdPA addresses.

When this parameter is specified, the **naiv** parameter must be specified.

Range: **0-15 ***

:saddr= (optional)

The starting origination address, in association with **npv** and **naiv** for the single entry or range of entries of the CGPA address to be screened.

Range: 1-15 digits, *
 1-15 hexadecimal digits. Valid digits are 0-9, a-f, and A-F
Default: *

Example

The following example retrieves all CgPA entries for the specified opname:

rtrv-gsmmap-scrn:opname=ati

The following example retrieves the specified CgPA range entry for the specified opname:

rtrv-gsmmap-scrn:opname=ati:saddr=9194620000000000:eaddr=9194630000000000

The following example retrieves all CdPA entries for the specified cgsr:

rtrv-gsmmap-scrn:opname=xyz:cgsr=fela

The following example retrieves the specified cdsr entry for the specified cgsr:

rtrv-gsmmap-scrn:opname=xyz:cgsr=fela:cdsr=cal4

The following example retrieves a MAP set when the Flexible GTT Load Sharing feature is on.

rtrv-gsmmap-scrn:opname=abc:mapset=9

Dependencies

The GSM Map Screening feature (see the **enable-ctrl-feat** command) must be enabled before this command can be entered.

The Enhanced GSM Map Screening (EGMS) feature must be enabled before:

- The **cgsr** parameter can be specified.
- The **cdsr** parameter can be specified.
- The **saddr=*** parameter can be specified.
- The **saddr** and **eaddr** parameters can contain hexadecimal digits.

The specified **opname** parameter value must exist in the GSM Map Op-Code table.

If the **eaddr** parameter is specified, its value must contain the same number of digits as the **saddr** parameter value.

If the **eaddr** parameter is specified, its value must be greater than the **saddr** parameter value.

If the **eaddr** parameter is specified, the **saddr** parameter must be specified.

If the **saddr=*** parameter is specified, then the **eaddr** parameter cannot be specified.

If the **saddr** parameter is specified, the **cgsr** and **cdsr** parameters cannot be specified.

The **saddr**, **npv**, and **naiv** parameters must be specified together in the command.

If any of the **saddr/eaddr/npv/naiv** and **cdsr** parameters are specified, then the **forbid** and **action** parameters cannot be specified.

A value of **state** or **location** cannot be specified for the **forbid** parameter unless the operation code referenced by the **opname** parameter is **71**. The **forbid** option is only valid for ATI MAP operation codes, and the **opcode=71** parameter signifies an ATI MAP operation code.

The **action=atierr** parameter cannot be specified unless the operation code referenced by the **opname** parameter is **71**. The **atierr** option is only valid for ATI MAP operation codes, and the **opcode=71** parameter signifies an ATI MAP operation code.

If the **cdsr** parameter is specified, then the **cgsr** parameter must be specified.

The specified **cgsr** parameter value must exist in the database.

The specified **cdsr** parameter value must exist in the database.

The Flexible GTT Load Sharing feature must be enabled before the **mapset** parameter can be specified.

The specified MAP set must exist.

Notes

None

Output

GSM MAP Screening single entries and range entries shown in separate sections of the output. All single entries are shown first in a summary report; all range entries follow.

rtrv-gsmmap-scrn:opname=xyz

tekelecstp 03-10-30 10:33:28 EST EAGLE 31.3.0

Single CgPA Entries for OPNAME: xyz

```
-----
SADDR          NPV NAIV FORBID ACTION PCA          SSN CGSR
SADDR          NPV NAIV FORBID ACTION PCI          SSN CGSR
SADDR          NPV NAIV FORBID ACTION PCN          SSN CGSR
*              3    20   all    dup    1234        100 fal1
SADDR          NPV NAIV FORBID ACTION PCN24         SSN CGSR
SADDR          NPV NAIV FORBID ACTION CGSR
abcdefabcdefabc *   *    all    disc   cal3
*              2    20   all    disc   fal2
```

Range CgPA Entries for OPNAME: xyz

```
-----
SADDR          EADDR          NPV NAIV FORBID ACTION PCA          SSN CGSR
123456789012345 234567890123456 3    40   all    fwd    001-001-001 200 fela
123456789012345 234567890123456 5    60   all    fwd    001-001-001 200 fell
SADDR          EADDR          NPV NAIV FORBID ACTION PCI          SSN CGSR
SADDR          EADDR          NPV NAIV FORBID ACTION PCN          SSN CGSR
SADDR          EADDR          NPV NAIV FORBID ACTION PCN24         SSN CGSR
SADDR          EADDR          NPV NAIV FORBID ACTION CGSR
```

GSM MAP Screening Table (10 of 4000) is 1% full

;

rtrv-gsmmap-scrn:opname=test2

tekelecstp 05-01-07 10:33:28 EST EAGLE 31.12.0

Single CgPA Entries for OPNAME: test2

```
-----
SADDR          NP NAI FORBD ACT          PCA          SSN CGSR
434            *   *    all    dupl      002-002-003    111 t8
SADDR          NP NAI FORBD ACT          PCI          SSN CGSR
123            *   *    all    dupl      s-1-001-1      10  t1
456            *   *    all    dupl      s-1-001-1      10  t2
*              *   *    all    dupl      1-001-1        10  t3
SADDR          NP NAI FORBD ACT          PCN          SSN CGSR
234            *   *    all    dupl      0-020-6-1-aa   255 t6
334            *   *    all    dupl      s-0-020-6-1-aa 254 t7
991            *   *    all    dupl      2-003-3-1-aa   255 t20
998            *   *    all    dupl      s-2-003-3-1-aa 255 t12
999            *   *    all    dupl      2-003-3-1-aa   255 t10
SADDR          NP NAI FORBD ACT          PCN24         SSN CGSR
```

```
SADDR      NP NAI FORBD ACT  CGSR
466        *  *   none  disc  t9
```

Range CgPA Entries for OPNAME: test2

```
SADDR      EADDR      NP NAI FORBD ACT      PCA      SSN CGSR
623456789012345 643210987654321 *  *   all  fwd      002-002-003  111 ansi
```

```
SADDR      EADDR      NP NAI FORBD ACT      PCI      SSN CGSR
123456      987654      *  *   all  dupl      1-001-1      10  t4
1123456     1987654     *  *   all  dupdc    s-1-001-1    10  t5
```

```
SADDR      EADDR      NP NAI FORBD ACT      PCN      SSN CGSR
782         783         1 127 all  dupl      2-003-3-1-aa 255 t22
777         779         *  *   all  dupl      2-003-3-1-aa 255 t14
780         781         *  *   all  dupl      2-003-3-1-aa 255 t21
800         801         *  *   all  dupl      s-2-003-3-1-aa 255 t15
2123456     2987654     *  *   all  dupdc    s-0-020-6-1-aa 254 pcn1
3123456     3987654     *  *   all  dupdc    0-020-6-1-aa 255 pcn2
123456789012345 543210987654321 *  *   all  fwd      s-0-020-6-1-aa 254 pcn3
```

```
SADDR      EADDR      NP NAI FORBD ACT      PCN24     SSN CSGR
```

```
SADDR      EADDR      NP NAI FORBD ACT  CGSR
623456     643210     3 17  all  disc  nopc
```

GSM MAP Screening Table (55 of 4000) is 1% full

;

The following example shows the output when the Flexible GTT Load Sharing feature is on.

rtrv-gsmmap-scrn:opname=abc

tekelecstp 06-06-01 13:24:41 EST EAGLE 35.0.0

Single CgPA Entries for OPNAME: abc

```
SADDR      NP NAI FORBD ACT      PCA      SSN CGSR MAPSET
92856      *  *   all  dupdc    001-001-001 100 a  DFLT
92556      *  *   all  fwd      001-001-001 6  abc 24562
92546      *  *   all  fwd      001-001-001 5  abcd 9
```

```
SADDR      NP NAI FORBD ACT      PCI      SSN CGSR MAPSET
```

```
SADDR      NP NAI FORBD ACT      PCN      SSN CGSR MAPSET
```

```
SADDR      NP NAI FORBD ACT      PCN24     SSN CGSR
MAPSET
```

```
SADDR      NP NAI FORBD ACT  CGSR
123456789098765 *  *   all  pass  cal3
```

Range CgPA Entries for OPNAME: abc

```
SADDR      EADDR      NP NAI FORBD ACT      PCA      SSN CGSR
1234567     2345676     *  *   all  fwd      001-001-001 20  fela
MAPSET = DFLT
```

```

3234567      3345678      *      *      all      dupl      001-001-001  30      b
MAPSET = 9

```

SADDR	EADDR	NP	NAI	FORBD	ACT	PCI	SSN	CGSR
SADDR	EADDR	NP	NAI	FORBD	ACT	PCN	SSN	CGSR
SADDR	EADDR	NP	NAI	FORBD	ACT	PCN24	SSN	CGSR
SADDR	EADDR	NP	NAI	FORBD	ACT	CGSR		

GSM MAP Screening Table (9 of 4000) is 1% full

;

The following example shows the output for a specific MAP set. The Flexible GTT Load Sharing feature is on.

rtrv-gsmmap-scrn:opname=abc:mapset=9

tekelecstp 06-06-01 13:24:41 EST EAGLE 35.0.0

Single CgPA Entries for OPNAME=abc

SADDR	NP	NAI	FORBD	ACT	PCA	SSN	CGSR	MAPSET
92546	*	*	all	fwd	001-001-001	5	abc	9
SADDR	NP	NAI	FORBD	ACT	PCI	SSN	CGSR	MAPSET
SADDR	NP	NAI	FORBD	ACT	PCN	SSN	CGSR	MAPSET
SADDR	NP	NAI	FORBD	ACT	PCN24	SSN	CGSR	MAPSET

Range CgPA Entries for OPNAME=abc

SADDR	EADDR	NP	NAI	FORBD	ACT	PCA	SSN	CGSR
3234567	3345678	*	*	all	dupl	001-001-001	30	b
SADDR	EADDR	NP	NAI	FORBD	ACT	PCI	SSN	CGSR
SADDR	EADDR	NP	NAI	FORBD	ACT	PCN	SSN	CGSR
SADDR	EADDR	NP	NAI	FORBD	ACT	PCN24	SSN	CGSR

GSM MAP Screening Table (9 of 4000) is 1% full

;

Legend

SINGLE ENTRIES/RANGE ENTRIES—GSM MAP screening single entries and range entries are output in separate sections of the retrieval report. All single entries are output first during a summary report and then all range entries follow.

CgPA—Calling Party Address entry

CdPA—Called Party Address entry

OPNAME—User-defined MAP operation code name.

SADDR—Start origination address.

EADDR—End origination address. This column is displayed for range entries only.

NPV—Numbering plan value.

NAIV—Nature of address indicator value.

FORBID or **FORBD**—Indicates a forbidden parameter for the entered address. If a forbidden parameter is detected the message is rejected by the action defined by the **action** parameter. (Some values are abbreviated; for example, locat means **location**.)

ACTION or **ACT**—Screening action, if forbidden. Possible actions are pass, discard (disc), atterr, route, forward, duplicate (dupl), and dupdisc.

PC or **PCA**—ANSI Point Code
PCI—ITU International Point Code
PCN—ITU National Point Code
PCN24—24-bit ITU National Point Code
SSN—Subsystem Number
CGSR—CgPA Screening Reference
CDSR—CdPA Screening Reference
MAPSET—MAP set

rtrv-gsmopts

Retrieve GSM System Options

Use this command to display all GSM (Global System for Mobile Telecommunication) system options from the database.

Keyword: **rtrv-gsmopts**

Related Commands: **chg-gsmopts**

Command Class: Database Administration

Parameters

This command has no parameters.

Example

rtrv-gsmopts

Dependencies

The G-Flex feature or G-Port feature must be turned on, or the Equipment Identity Register (EIR) feature must be enabled, before this command can be entered.

Notes

None

Output

The following examples show the output if the G-Flex feature is turned on. The second example includes values for CCNC and MCCMNC.

rtrv-gsmopts

```
rlghncxa03w 04-04-20 09:04:14 EST EAGLE 31.6.0
```

GSM OPTIONS

```
-----
DEFMCC      = NONE
DEFMNC      = NONE
SRFADDR     = NONE
MSRNDIG     = RN
DEFMAPVR    = 1
IS412GSM    = NONE
```

```
;
```

rtrv-gsmopts

```
rlghncxa03w 04-04-20 09:04:14 EST EAGLE 31.6.0
```

GSM OPTIONS

```
-----
DEFMCC      = NONE
DEFMNC      = NONE
SRFADDR     = NONE
MSRNDIG     = RN
DEFMAPVR    = 1
CCNC=33322123 MCCMNC=21434
IS412GSM    = NONE
```

```
;
```

The following examples show the output if the G-Port feature is turned on. The second example includes the Server Prefix digits. The SERVERPFX field does not appear when the G-Port feature is not on and when the Server Prefix string is not provisioned (set to **none**).

rtrv-gsmopts

```
rlghncxa03w 04-04-20 09:04:14 EST EAGLE 31.6.0
```

GSM OPTIONS

```
-----
DEFMCC      = NONE
DEFMNC      = NONE
SRFADDR     = 123456789abcdef
MSRNDIG     = RN
DEFMAPVR    = 1
SRIDN       = TCAP
IS412GSM    = 0123456789abcde
```

```
;
```

rtrv-gsmopts

```
rlghncxa03w 04-09-02 09:04:14 EST EAGLE 31.6.3
```

GSM OPTIONS

```
-----
DEFMCC      = NONE
DEFMNC      = NONE
SRFADDR     = 123456789abcdef
MSRNDIG     = RN
DEFMAPVR    = 1
SRIDN       = TCAP
IS412GSM    = 0123456789abcde
MSISDNTRUNC = 3
```

```

SERVERPFX  = 0000
;

```

The following examples show the output if the Prepaid Short Message Service (PPSMS) feature is turned on. The second example includes spare points codes that can be defined when the ITU Spare Point Code Support feature is on.

rtrv-gsmopts

```

rlghncxa03w 03-08-20 09:04:14 EST  EAGLE 31.6.0
GSM OPTIONS
-----
DEFMCC      = 214
DEFMNC      = 34
MSRNDIG     = RN
DEFMAPVR    = 1
SRIDN       = TCAP
PPSMSRI1    = SSN
PPSMSRI2    = GT
PPSMSPCI1   = 1-1-1
PPMSPCN2    = -----
PPMSGTA     = 1112223333,
              2223334444,
              ABCDEF123456ABC
IS412GSM    = 0123456789abcde
;

```

rtrv-gsmopts

```

rlghncxa03w 05-01-07 09:04:14 EST  EAGLE 31.12.0
GSM OPTIONS
-----
DEFMCC      = 214
DEFMNC      = 34
MSRNDIG     = RN
DEFMAPVR    = 1
SRIDN       = TCAP
PPSMSRI1    = SSN
PPSMSRI2    = GT
PPSMSPCI1   = s-1-104-0
PPMSPCN2    = 1-101-1
PPMSGTA     = NONE
IS412GSM    = NONE
;

```

The following example shows the output if the Equipment Identity Register (EIR) feature is turned on.

rtrv-gsmopts

```

tekelecstp 03-07-08 14:53:59 EST  EAGLE5 31.0.0
GSM OPTIONS
-----
DEFMCC      = NONE
DEFMNC      = NONE
SRFADDR     = NONE
MSRNDIG     = RN
IS412GSM    = NONE
DEFMAPVR    = 1
EIRGRSP     = BLKLST
EIRRSPTYPE  = TYPE2
EIRIMSICLK  = ON
;

```

The following example includes multiple country code entries and no MSISDN truncation digits.

rtrv-gsmopts

```
tekelecstp 04-04-08 14:53:59 EST EAGLE 31.6.0
GSM OPTIONS
```

```
-----
DEFMCC      = NONE
DEFMNC      = NONE
SRFADDR     = NONE
MSRNDIG     = RN
IS412GSM    = NONE
DEFMAPVR    = 1
IS412GSM    = NONE
MULTCC      = 2
MULTCC      = 4
MULTCC      = 5
MULTCC      = 20
MULTCC      = 119
MULTCC      = 121
MULTCC      = 123
MULTCC      = 124
MSISDNTRUNC = 0
```

```
;
```

Legend

DEFMCC—E212 default mobile country code.

DEFMNC—E212 default mobile network code.

CCNC—E214 country code and network code.

MCCMNC—E212 mobile country code and mobile network code.

SRFADDR—Entity address of the MNP_SRF node.

SRFNAI—The nature of address indicator value of the MNP_SRF.

SRFNP—The numbering plan value of the MNP_SRF.

MSRNDIG—The routing number to be used as is or to be concatenated with the MSISDN.

MSRNNAI—The nature of address indicator value for the MSRN.

MSRNNP—The numbering plan value for the MSRN.

SRIDN—Send Routing Information Dialed Number location.

PPSMSRI1—A routing indicator for an Intelligent Network (IN) platform used by Prepaid Short Message Service Intercept (PPSMS) for credit checking.

PPSMSRI2—A routing indicator for an Intelligent Network (IN) platform used by Prepaid Short Message Service Intercept (PPSMS).

PPSMSPCI1—An ITU international point code for an IN platform used by PPSMS.

PPSMSPCI2—An ITU international point code for an IN platform used by PPSMS.

PPSMSPCN1—An ITU national point code for an IN platform used by PPSMS.

PPSMSPCN2—An ITU national point code for an IN platform used by PPSMS.

PPSMMSGTA—Entity addresses for up to 3 IN platforms used by PPSMS.

IS412GSM—IS-41 to GSM Migration prefix.

EIRGRSP—Equipment Identity Register Global Response status.

EIRRSPTYPE—Equipment Identity Register Global Response Type.

EIRIMSICHK—Equipment Identity Register IMSI Check status.

MULTCC—Multiple country code list entry.

MSISDNTRUNC—Number of digits to delete from the beginning of the National MSISDN (MSISDN without Country Code) before formulating the MSRN parameter of the SRI-ack response.

SERVERPFX—Server prefix for IS-41 to GSM Migration SRI Redirect.

rtrv-gsms-opcode

Retrieve GSM MAP Screening Operation Code

Use this command to retrieve the concerned GSM (Global System for Mobile Telecommunication) MAP (Mobile Application Part) screening operation codes and the default screening action for the operation code. This command allows the craftsperson to verify a list of all operation codes or a single operation code that the system uses in performing GSM Map Screening.

Keyword: **rtrv-gsms-opcode**

Related Commands: **chg-gsms-opcode**, **dlt-gsms-opcode**, **ent-gsms-opcode**

Command Class: Database Administration

Parameters

:mapset= (optional)

The MAP set ID.

Range: **1-36000 dflt**

dflt—Default MAP set

:opcode= (optional)

MAP operation code.

Range: **0-255 ***

Default: Display all MAP operation codes

:opname= (optional)

The user-defined name for the operation code. The **opname** value is defined with the **ent-gsms-opcode** command.

Range: **aaaaaaaa**

Up to 8 alphanumeric characters

Default: Display all operation code names

Example

```
rtrv-gsms-opcode
```

```
rtrv-gsms-opcode:opname=ati
```

Dependencies

The GSM Map Screening feature (see the **enable-ctrl-feat** command) must be enabled before this command can be entered.

The EGMS feature must be enabled and turned on before:

- The **opcode=*** can be specified.
- An **opname** parameter can be specified that refers to an **opcode=*** parameter.

The **opcode** parameter and the **opname** parameter cannot be specified together in the same command.

The specified **opname** parameter must exist in the GSM MAP Op-Code table.

The Flexible GTT Load Sharing feature must be enabled before the **mapset** parameter can be specified.

The specified MAP set must exist.

rtrv-gsms-opcode

Commands

Notes

None

Output

rtrv-gsms-opcode

```
rlghncxa03w 04-02-10 11:43:04 EST EAGLE 31.3.0
```

OPCODE	OPNAME	DFLTACT	PCA	SSN
*	xyz	duplicate	009-009-009	3

OPCODE	OPNAME	DFLTACT	PCI	SSN

OPCODE	OPNAME	DFLTACT	PCN	SSN

OPCODE	OPNAME	DFLTACT	PCN24	SSN

OPCODE	OPNAME	DFLTACT

GSMMS OPCODE Table (1 of 257) is 1% full

RTRV-GSMS-OPCODE: MASP A - COMPLTD

;

rtrv-gsms-opcode:opname=ati

```
rlghncxa03w 04-02-10 11:43:04 EST EAGLE 31.3.0
```

OPCODE	OPNAME	DFLTACT
71	ati	atierr

GSM Map Op-Code Table is (1 of 257) 1% full

RTRV-GSMS-OPCODE: MASP A - COMPLTD

;

rtrv-gsms-opcode:opname=atl

```
rlghncxa03w 04-02-10 11:43:04 EST EAGLE 31.3.0
```

OPCODE	OPNAME	DFLTACT	PCI	SSN
71	atl	forward	7-100-6	5

GSM Map Op-Code Table is (1 of 257) 1% full

RTRV-GSMS-OPCODE: MASP A - COMPLTD

;

rtrv-gsms-opcode:opname=atl

```
rlghncxa03w 04-02-10 11:43:04 EST EAGLE 31.3.0
```

OPCODE	OPNAME	DFLTACT	PCN	SSN
72	atl	forward	12345	5

GSM Map Op-Code Table is (1 of 257) 1% full

RTRV-GSMS-OPCODE: MASP A - COMPLTD

;

The following example shows output for a 24-bit ITU national point code:

rtrv-gsms-opcode:opname=ati

```
tekelecstp 04-01-07 11:50:25 EST EAGLE 31.3.0
```

OPCODE	OPNAME	DFLTACT	PCN24	SSN
2	ati	duplicate	008-008-008	20

GSMMS OPCODE Table (1 of 257) is 1% full

;

The following example includes a spare point code:

rtrv-gsms-opcode

```
tekelecstp 05-01-07 11:50:25 EST EAGLE 31.12.0
```

OPCODE	OPNAME	DFLTACT	PCA	SSN
6	test6	dupl	002-002-003	10

OPCODE	OPNAME	DFLTACT	PCI	SSN

2	test2	dupl	1-001-1	10
3	test3	dupl	s-1-001-1	10
OPCODE	OPNAME	DFLTACT	PCN	SSN
OPCODE	OPNAME	DFLTACT	PCN24	SSN
4	test4	dupl	003-003-003	10
OPCODE	OPNAME	DFLTACT		
7	test7	disc		
8	test8	disc		
9	test9	disc		

GSMS OPCODE Table (7 of 257) is 3% full

;

The following example shows the output when the Flexible GTT Load Sharing feature is on.

rtrv-gsms-opcode

```
tekelecstp 06-05-29 13:21:58 EST EAGLE 35.0.0
OPCODE OPNAME DFLTACT PCA SSN MAPSET
6 test6 dupdc 001-002-003 10 DFLT
7 test7 fwd 001-002-002 25 7

OPCODE OPNAME DFLTACT PCI SSN MAPSET
OPCODE OPNAME DFLTACT PCN SSN MAPSET
OPCODE OPNAME DFLTACT PCN24 SSN MAPSET

OPCODE OPNAME DFLTACT
8 test7 pass
9 test8 disc
10 test9 route
```

GSMS OPCODE Table (5 of 257) is 2% full

;

The following example shows output for a specific MAP set. The Flexible GTT Load Sharing feature is on.

rtrv-gsms-opcode:mapset=7

```
tekelecstp 06-05-29 13:21:58 EST EAGLE 35.0.0
OPCODE OPNAME DFLTACT PCA SSN MAPSET
7 test7 fwd 001-002-002 25 7

OPCODE OPNAME DFLTACT PCI SSN MAPSET
OPCODE OPNAME DFLTACT PCN SSN MAPSET
OPCODE OPNAME DFLTACT PCN24 SSN MAPSET
```

GSMS OPCODE Table (5 of 257) is 2% full

;

Legend

OPCODE—MAP operation code.

OPNAME—The user-defined name of operation code.

DFLTACT—The default screening action.

PCA—ANSI Point Code.

PCI—ITU International Point Code.

PCN—ITU National Point Code.

PCN24—24-bit ITU National Point Code.

SSN—Subsystem Number.

MAPSET—MAP set.

rtrv-gsmssn-scrn

Retrieve GSM Subsystem Number Screening Entry

Use this command to retrieve all or single subsystem numbers in the GSM SSN screening table.

Keyword: rtrv-gsmssn-scrn

Related Commands: dlt-gsmssn-scrn, ent-gsmssn-scrn

Command Class: Database Administration

Parameters

:ssn= (optional)

Subsystem number.

Range: 000-255

Default: Display all

:type= (optional)

Subsystem type.

Range: orig, dest

orig—The origination SSN

dest—The destination SSN

Default: Display all

Example

```
rtrv-gsmssn-scrn
```

```
rtrv-gsmssn-scrn:ssn=0:type=dest
```

Dependencies

The GSM Map Screening feature must be enabled (see the **enable-ctrl-feat** command) before this command can be entered.

Notes

If specified, the **ssn/type** parameter combination must exist in the GSM SSN screening table. If the value does not exist, the following message is displayed:

```
SSN ORIG DEST
```

```
No matching entries with the specified criteria found.
```

Output**rtrv-gsmssn-scrn:ssn=2:type=dest**

```
rlghncxa03w 04-02-20 09:07:58 EST EAGLE 31.3.0
SSN ORIG DEST
002 No Yes
GSMMS SSN table is (2 of 512) 1% full
RTRV-GSMSSN-SCRN: MASP A - COMPLTD
```

;

rtrv-gsmssn-scrn:ssn=10:type=orig

```
rlghncxa03w 04-02-20 09:07:58 EST EAGLE 31.3.0
SSN ORIG DEST
010 Yes Yes
GSMMS SSN table is (256 of 512) 50% full
RTRV-GSMSSN-SCRN: MASP A - COMPLTD
```

;

rtrv-gsmssn-scrn

```
rlghncxa03w 04-02-20 09:07:58 EST EAGLE 31.3.0
SSN ORIG DEST
002 Yes No
010 Yes Yes
GSMMS SSN table is (2 of 512) 1% full
RTRV-GSMSSN-SCRN: MASP A - COMPLTD
```

;

Legend

SSN—Subsystem number.

ORIG—Specifies whether the subsystem type is origination (yes) or not (no).

DEST—Specifies whether the subsystem type is destination (yes) or not (no).

rtrv-gta**Retrieve Global Title Address Information**

Use this command to display a list of the GTA (global title address) information applicable to the specified GTT set. This list can be filtered using a number of parameters. The report that is displayed contains two records (the percentage full and number-of-cells-used field) that give the total entries in the GTT table without regard to the selector specified.

This command obtains the routing object (destination address and subsystem number), relative cost, and routing indicator assigned to that object for specified GTAs (global title addresses) or ranges of GTAs with a given GTT set.

NOTE: When the ANSI-ITU-China SCCP Conversion feature is enabled, entries that are provisioned with the xlat=dpc parameter, and that have specified the ntt parameter, are displayed with a xlat parameter value of dpcngt.

Keyword: rtrv-gta

Related Commands: chg-gta, dlt-gta, ent-gta

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:cgpc= (optional)

ANSI CgPA point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Synonym: **cgpa**

Range: **000-255, ***

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

The asterisk (*) value is not valid for the *ni* subfield.

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

When **chg-sid:pctype=ansi** is specified, *ni*-*-* is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:cgpci= (optional)

ITU international CgPA point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

:cgpcn= (optional)

ITU national CgPA point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npfcmnti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:cgpcn24= (optional)

24-bit ITU national CgPA point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000–255**

ssa—**000–255**

sp—**000–255**

:cgssn= (optional)

Starting CgPA subsystem number.

Range: **0-255**

:ecgssn= (optional)

Ending CgPA subsystem number.

Range: **0-255**

:egta= (optional)

End Global Title Address.

Range: 1-21 digits

Default: The first **gta** entry for the given GTT selector

:force= (optional)

Display more than 1000 entries.

Range: **yes, no**

Default: **no**

:gta= (optional)

Start global title address.

Range: 1-21 digits

Default: The first **gta** entry for the given GTT selector

:gttsn= (optional)

GTT set name. A GTT set is an entity to which global title addresses and selectors are assigned.

Range: *ayyyyyyy*

1 leading alphabetic and up to 8 following alphanumeric characters.

:num= (optional)

Number of entries to display.

Range: **1-65535**

Default: **1**—if **gta** is specified

20—if **gta** is not specified

:opc= (optional)

ANSI originating point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Synonym: **opca**

Range: **000-255, ***

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

The asterisk (*) value is not valid for the *ni* subfield.

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001–005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006–255**.

When **chg-sid:pctype=ansi** is specified, *ni-*-** is valid if *ni* = **006–255**.

The point code **000-000-000** is not a valid point code.

:opci= (optional)

ITU international originating point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

:opcn= (optional)

ITU national originating point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:opcn24= (optional)

24-bit ITU originating point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

:pc= (optional)

ANSI point code in the form of *network indicator-network cluster-network cluster member* (*ni-nc-ncm*). . The *prefix* subfield indicates a private point code *prefix-ni-nc-ncm*).

Synonym: **pca**

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:pci= (optional)

ITU international point code in the form of *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:pcn= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:pcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:pctype= (optional)

Point code type. This parameter can be specified only when the ANSI-ITU-China SCCP Conversion feature is enabled, to retrieve a single type of point code among mixed types of point code provisioned for a Translation Type.

Range: **ansi, itui, itun, itun24, ituis, ituns**

Default: Display all point code types

:ssn= (optional)

Subsystem number.

Range: **002-255**

Default: Display all

Example

```

rtrv-gta:gttsn=t800:num=65535:force=yes
rtrv-gta:gttsn=t800:pc=8-1-1:ssn=222:gta=9195551212
rtrv-
gta:gttsn=t800:ssn=222:gta=9000000000:egta=9762429999:num=65535:force=yes
rtrv-gta:gttsn=ntoa23:pctype=ansi
rtrv-gta:gttsn=atoi22:pctype=itui
rtrv-gta:gttsn=aton21:pctype=itun
rtrv-gta:gttsn=ntin24:pctype=itun24
rtrv-gta:gttsn=setnat003:pcn=s-129-aa
rtrv-gta:gttsn=setnat003:gta=987658321198765432101:pcn=s-128-aa
rtrv-gta:gttsn=tbla
rtrv-gta:gttsn=tbla:pc=1-1-1

```

Dependencies

The EGTT feature must be turned on before this command can be entered.

The ANSI-ITU-China SCCP Conversion feature must be enabled before the **pctype** parameter can be specified.

The **ssn**, **cgssn**, and **ecgssn** parameters cannot have a wildcard (*) value.

The **gttsn** parameter must be specified, cannot have a value of **none**, and must match an existing **gttsn**.

When the ANSI-ITU-China SCCP Conversion feature is not on and the specified GTT set is an ANSI set, the **pc/pca** parameter must be a valid ANSI point code.

When the ANSI-ITU-China SCCP Conversion feature is not on and the specified GTT set is an ITU set, the **pci/pcn/pcn24** parameter must be a valid ITU point code.

If the **egta** parameter is specified, the **gta** parameter must be specified. The **gta** and **egta** parameters must be the same length, and the value for the **egta** parameter must be greater than the value for the **gta** parameter.

If the specified **num** parameter value is greater than **1000**, the **force=yes** parameter must be specified.

The number of digits in the specified **gta** parameter must be at least the number of digits provisioned for the specified GTT set (**gttsn**). If the VGTT (variable length GTT) feature is turned on, there can be up to 10 GTA lengths per GTT set. When the **ent-gta** command is entered to create entries, the software keeps track of the lengths and allows only 10 different lengths.

If the Flexible GTT Load Sharing feature is not enabled, then the **mapset** parameter cannot be specified.

At least one entry must be provisioned in the specified MAP set in the MAP table.

The **(e)gta**, **cgpc/cgpc/cgpci/cgpcn/cgpcn24**, and **opc/opca/opci/opcn/opcn24**, and **(e)cgssn** parameters are mutually exclusive.

If the **ecgssn** parameter is specified, the **cgssn** parameter must be specified, and the **ecgssn** parameter must be greater than the **cgssn** parameter.

The Origin-based SCCP Routing feature must be enabled when specifying the **cgpc/cgpc/cgpci/cgpcn/cgpcn24**, **opc/opca/opci/opcn/opcn24**, or **(e)cgssn** parameters or when specifying the **xlat** parameter with a value of **udts** or **discard**.

The **gta** parameter can be specified only if the GTTSN set type has a value of **cdgta** or **cggta**.

The **cgpc/cgpca/cgpci/cgpcn/cgpcn24** parameter may be specified only if the GTTSN set type has a value of **cgpc**.

The **opc/opca/opci/opcn/opcn24** parameter may be specified only if the GTTSN set type has a value of **opc**.

The **cgssn** parameter may be specified only if the GTTSN set type has a value of **cgssn**.

If the specified GTT Set is an ANSI set, the **cgpc/cgpca** and **opc/opca** parameters must be valid ANSI point codes. If the specified GTT Set is an ITU set, the **cgpci/cgpcn/cgpcn24** and **opci/opcn/opcn24** parameters must be valid ITU point codes.

The range specified by the **(e)cgssn** parameters must exist for the specified GTT set. An exact match is not required.

Notes

The percentage full and number of cells used report that is provided with a **rtrv-gta** command reflects the total entries in the GTA table without regard to the selector specified.

When the EGTT feature is turned on, the GTT Selector (**ent/chg/dlt/rtrv-gttset**), GTT Set (**ent/dlt/rtrv-gttset**), and GTA (**ent/chg/dlt/rtrv-gta**) commands replace the Translation Type (**ent/dlt/rtrv-tt**) and Global Title Translation (**ent/chg/dlt/rtrv-gtt**) commands. All data previously provisioned with these commands is maintained.

This command can be canceled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

If the **rtrv-gta** command is entered with only the **gta** parameter, a match would be an entry containing the same number of digits, or more digits, for the GTT set. For example, if **gta=8005556666** is specified, the six-digit GTT set **800555** would be a match. If the VGTT feature is turned on and the **egta** parameter is specified, all matching entries regardless of length are displayed.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (**s-**) and the private and spare point code subtype prefix (**ps-**). All of the point code types support the private (internal) point code subtype prefix (**p-**).

The point code domain translation types for EGTT are handled by the EAGLE 5 ISS protocol processing as either ANSI or ITU; therefore, ITU applies to ITU-I, ITU-I Spare, ITU-N, and ITU-N Spare. ITU-I includes ITU-I Spare, and ITU-N includes ITU-N Spare.

Output

NOTE: The Start GTA (gta) and End GTA (egta) fields are sized according to the ndgt parameter value. Because all GTAs for a GTT Set are the same size, this helps the appearance of the display. If all 21 digits are used, an entry will not fit on a single line. If two lines per entry are used, the size of the report would double, being inefficient for large reports. It is not anticipated that more than 15 digits will be used in the immediate future, but displaying GTAs longer than 19 digits will cause the line to wrap around to the next line.

Retrieve all GTAs for the specified GTT Set:

NOTE: The Start GTA (gta) and End GTA (egta) fields are sized according to the ndgt parameter value. Because all GTAs for a GTT Set are the same size, this helps the appearance of the display. If all 21 digits are used, an entry will not fit on a single line. If two lines per entry are used, the size of the report would double, being inefficient for large reports. It is not anticipated that more than 15 digits will be used in the immediate future, but displaying GTAs longer than 19 digits will cause the line to wrap around to the next.

rtrv-gta:gttsn=t800:num=65535:force=yes

rlghncxa03w 06-06-01 08:29:15 EST EAGLE 35.0.0

GTTSN NETDOM NDGT

t800 ansi 10

GTA TABLE IS 1 % FULL (17 Of 269999)

START GTA	END GTA	XLAT	RI	PCA	SSN	CCGT	NTT
8005550000	8005551999	dpcssn	ssn	001-254-255	255	no	---
8005552000	8005553999	dpc	gt	001-254-255	255	no	---
8005554000	8005555999	dpcngt	gt	001-254-255	255	no	123
8005556000	8005557999	dpcssn	ssn	001-254-255	255	no	---
8005558000	8005559999	dpcssn	ssn	001-254-255	255	yes	---
9195551212		dpcssn	ssn	008-001-001	222	no	---
9762428487		dpcssn	ssn	001-254-255	222	no	---
9766423277		dpcssn	ssn	001-254-255	222	no	---
9769388928		dpcssn	ssn	001-254-255	222	no	---

;

Retrieve the specific GTAs containing the specified **pc/ssn/gta** combination for the specified GTT Set:

rtrv-gta:gttsn=t800:pc=8-1-1:ssn=222:gta=9195551212

rlghncxa03w 06-05-10 08:29:15 EST EAGLE 35.0.0

GTTSN NETDOM NDGT

t800 ansi 10

GTA TABLE IS 1 % FULL (17 Of 269999)

START GTA	END GTA	XLAT	RI	PCA	SSN	CCGT	NTT
9195551212		dpcssn	ssn	008-001-001	222	no	---

;

Retrieve all GTAs containing the specified **ssn** and within the specified **gta** range for the specified GTT Set:

rtrv-

gta:gttsn=t800:ssn=222:gta=9000000000:egta=9762429999:num=65535:force=yes

rlghncxa03w 04-02-18 08:29:15 EST EAGLE 31.3.0

GTTSN NETDOM NDGT

t800 ansi 10

GTA TABLE IS 1 % FULL (17 Of 269999)

START GTA	END GTA	XLAT	RI	PCA	SSN	CCGT	NTT
9195551212		dpcssn	ssn	008-001-001	222	no	---

```

9762428487          dpcssn ssn 001-254-255 222 no   ---
;

```

Retrieve all GTAs for the specified GTT Set when the VGTT feature is turned on:

rtrv-gta:gttsn=t800:num=65535:force=yes

```

rlghncxa03w 04-02-18 08:29:15 EST  EAGLE 31.3.0
GTTSN      NETDOM  NDGT
t800      ansi    3,10
GTA TABLE IS  1 % FULL  (17 of 269999)

START GTA  END GTA  XLAT  RI  PCA          SSN CCGT NTT
800          dpcssn ssn 001-253-001 222 no   ---
9195551212   dpcssn ssn 008-001-001 222 no   ---
9762428487   dpcssn ssn 001-254-255 222 no   ---
9766423277   dpcssn ssn 001-254-255 222 no   ---
9769388928   dpcssn ssn 001-254-255 222 no   ---
8005550000 8005551999 dpcssn ssn 001-254-255 255 no   ---
8005552000 8005553999 dpc  gt  001-254-255 255 no   ---
8005554000 8005555999 dpcngt gt 001-254-255 255 no  123
8005556000 8005557999 dpcssn ssn 001-254-255 255 no   ---
8005558000 8005559999 dpcssn ssn 001-254-255 255 yes  ---
;

```

The following example shows a retrieve with the MGTT **nnp**, **nnai**, **npdd**, and **npds** parameter values:

rtrv-gta:gttsn=ansi

```

rlghncxa03w 04-02-18 08:29:15 EST  EAGLE 31.3.0
GTTSN      NETDOM  NDGT
t800      ansi    10
GTA TABLE IS  1 % FULL  (17 of 269999)

START GTA  END GTA  XLAT  RI  PCA          SSN CCGT NTT
8005550000 8005551999 dpcssn ssn 001-254-255 255 no   ---
8005552000 8005553999 dpc  gt  001-254-255 255 no   ---
                        NNP=3 NNAI=120 NPDD=3 NPDS=345
8005554000 8005555999 dpcngt gt 001-254-255 255 no  123
8005558000 8005559999 dpcssn ssn 001-254-255 255 yes  ---
9195551212   dpcssn ssn 008-001-001 222 no   ---
9762428487   dpcssn ssn 001-254-255 222 no   ---
                        NNP=3 NNAI=100 NPDD=3 NPDS=345
9766423277   dpcssn ssn 001-254-255 222 no   ---
;

```

The following example shows output when the GTT table can contain up to 1, 000,000 entries:

rtrv-gta:gttsn=ansi

```

rlghncxa03w 04-02-18 08:29:15 EST  EAGLE 31.3.0
GTTSN      NETDOM  NDGT
t800      ansi    10
GTA TABLE IS  1 % FULL  (17 of 1000000)

START GTA  END GTA  XLAT  RI  PCA          SSN CCGT NTT
8005550000 8005551999 DPCSSN SSN 001-254-255 255 no   ---
8005552000 8005553999 DPCNGT GT  001-254-255 255 no  123
                        NNP=3 NNAI=120 NPDD=3 NPDS=345
8005554000 8005555999 DPCNGT GT  001-254-255 255 no  123
8005558000 8005559999 DPCSSN SSN 001-254-255 255 yes  ---
9195551212   DPCSSN SSN 008-001-001 222 no   ---
9762428487   DPCNGT GT  001-254-255 222 no  123
                        NNP=3 NNAI=100 NPDD=3 NPDS=345
9766423277   DPCSSN SSN 001-254-255 222 no   ---
;

```

The following examples show output when the ANSI-ITU-China SCCP Conversion feature is enabled and the **pctype** parameter is specified.

rtrv-gta:gttsn=ntoa23:pctype=ansi

```
rlghncxa03w 04-02-18 08:29:15 EST EAGLE 31.3.0
GTTSN      NETDOM  NDGT
ntoa23     itu     4
GTT TABLE IS 1 % FULL (36 of 269999)

START GTA  END GTA  XLAT  RI  PC          SSN CCGT NTT
1899      1899      DPCNGT GT 010-002-002 --- no 37
      NNP=  NNAI=  NPDD=0 NPDS=
      NGTI=2
```

;

rtrv-gta:gttsn=atoi22:pctype=itui

```
rlghncxa03w 04-02-18 08:29:15 EST EAGLE 31.3.0
GTTSN      NETDOM  NDGT
atoi22     ansi    9
GTT TABLE IS 1 % FULL (36 of 269999)

START GTA  END GTA  XLAT  RI  ITUI PC          SSN CCGT NTT
991001200 991001300 DPCNGT GT 7-001-4 --- no 4
      NNP=  NNAI=  NPDD=0 NPDS=
      NGTI=2
```

;

rtrv-gta:gttsn=aton21:pctype=itun

```
rlghncxa03w 04-02-18 08:29:15 EST EAGLE 31.3.0
GTTSN      NETDOM  NDGT
aton21     ansi    2
GTT TABLE IS 1 % FULL (36 of 269999)

START GTA  END GTA  XLAT  RI  ITUN PC          SSN CCGT NTT
80         89       DPCSSN SSN 15441 45 no ---
```

;

rtrv-gta:gttsn=ntin24:pctype=itun24

```
rlghncxa03w 04-02-18 08:29:15 EST EAGLE 31.3.0
GTTSN      NETDOM  NDGT
ntin24     itu     10
GTA TABLE IS 1 % FULL (36 of 269999)

START GTA  END GTA  XLAT  RI  ITUN24 PC  SSN CCGT NTT
8006550000 8006551999 DPCSSN SSN 100-120-003 255 no ---
```

;

The following examples include spare point codes:

rtrv-gta:gttsn=setnat003

```
rlghncxa03w 05-01-18 08:29:15 EST EAGLE 31.12.0
GTTSN      NETDOM  NDGT
setnat003  itu     6,11,21
GTT TABLE IS 1 % FULL (10 of 269999)

START GTA          END GTA          XLAT  RI  PC
123456            123456            DPCSSN GT  s-00128-aa
      SSN=10 CCGT=no NTT=---
      NNP=12 NNAI=125 NPDD=21 NPDS=125498679012426556356
      NGTI=
234567            234567            DPCNGT GT  s-00124-aa
      SSN=--- CCGT=no NTT=255
```

```

234568          234568          DPC    GT    s-00124-aa
      SSN=0    CCGT=no    NTT=---
234569          234569          DPC    GT    s-00124-aa
      SSN=0    CCGT=no    NTT=---
      NNP=13   NNAI=120   NPDD=21   NPDS=125498679012426556356
      NGTI=
12345678901     23456789012     DPCSSN SSN    s-00124-aa
      SSN=10   CCGT=no    NTT=---
      NNP=14   NNAI=3     NPDD=0     NPDS=
      NGTI=
334569467213456789012 334569478932012345678 DPC    GT    s-00124-aa
      SSN=0    CCGT=no    NTT=---
      NNP=13   NNAI=120   NPDD=21   NPDS=125498679012426556356
      NGTI=
987656789012345678901 987657321098765432101 DPCNGT GT    s-00124-aa
      SSN=---   CCGT=no    NTT=234
      NNP=12   NNAI=26    NPDD=0     NPDS=
      NGTI=
987658321198765432101 987658321198765432101 DPCNGT GT    s-00128-aa
      SSN=---   CCGT=no    NTT=235
      NNP=1     NNAI=127   NPDD=0     NPDS=987657878901234567891
      NGTI=4
987658321198765432102 990123456789012345678 DPCNGT GT    s-00124-aa
      SSN=---   CCGT=no    NTT=235
      NNP=1     NNAI=127   NPDD=0     NPDS=987657878901234567891
      NGTI=4

```

;

rtrv-gta:gttsn=setnat003:pcn=s-129-aa

rlghncxa03w 05-01-18 08:29:15 EST EAGLE 31.12.0

GTTSN NETDOM NDGT

setnat003 itu 6,11,21

GTT TABLE IS 1 % FULL (11 of 269999)

```

START GTA          END GTA          XLAT    RI      PC
987658321198765432102 987658321198765432102 DPCNGT GT    s-00129-aa
      SSN=---   CCGT=no    NTT=235
      NNP=1     NNAI=127   NPDD=0     NPDS=987657878901234567891
      NGTI=4

```

;

rtrv-gta:gttsn=setnat003:ssn=10

rlghncxa03w 05-01-18 08:29:15 EST EAGLE 31.12.0

GTTSN NETDOM NDGT

setnat003 itu 6,11,21

GTT TABLE IS 1 % FULL (11 of 269999)

```

START GTA          END GTA          XLAT    RI      PC
123456             123456             DPCSSN GT    s-00128-aa
      SSN=10   CCGT=no    NTT=---
      NNP=12   NNAI=125   NPDD=21   NPDS=125498679012426556356
      NGTI=
12345678901        23456789012        DPCSSN SSN    s-00124-aa
      SSN=10   CCGT=no    NTT=---
      NNP=14   NNAI=3     NPDD=0     NPDS=
      NGTI=

```

;

rtrv-gta:gttsn=setnat003:gta=987658321198765432101:pcn=s-128-aa

rlghncxa03w 05-01-18 08:29:15 EST EAGLE 31.12.0

GTTSN NETDOM NDGT

setnat003 itu 6,11,21

```
GTT TABLE IS 1 % FULL (11 of 269999)
```

```
START GTA          END GTA          XLAT  RI      PC
987658321198765432101 987658321198765432101 DPCNGT GT  s-00128-aa
SSN=--- CCGT=no NTT=235
NNP=1 NNAI=127 NPDD=0 NPDS=987657878901234567891
NGTI=4
```

```
;
```

The following example shows an MRN set. The Flexible GTT Load-Sharing feature and the Intermediate GTT Load Sharing feature are on.

rtrv-gta:gttsn=setssnn

```
tekelecstp 06-05-10 09:49:42 EST EAGLE 35.0.0
GTTSN      NETDOM  NDGT
setssnn    ---- -
GTT TABLE IS 1 % FULL (1 of 269999)
```

```
START GTA  END GTA  XLAT  RI      PCA
1111111111 1111111111 DPC   GT      001-001-003
MRNSET=1    SSN=0    CCGT=no NTT=---
```

```
;
```

The following example shows an MRN set value of NONE. The Flexible GTT Load-Sharing feature and Intermediate GTT Load Sharing features are on.

rtrv-gta:gttsn=seta

```
tekelecstp 06-05-10 09:49:42 EST EAGLE 35.0.0
rtrv-gta:gttsn=seta
Command entered at terminal #4.
GTTSN      NETDOM  NDGT
setssnn    ---- -
GTT TABLE IS 1 % FULL (1 of 269999)
```

```
START GTA  END GTA  XLAT  RI      PCA
5555555556 5555555556 DPC   GT      001-001-002
MRNSET=NONE SSN=0    CCGT=no NTT=---
```

```
;
```

The following example shows a MAP set. The Flexible GTT Load Sharing feature is enabled.

rtrv-gta:gttsn=tbla

```
tekelecstp 06-05-10 14:51:59 EST EAGLE 35.0.0

GTTSN      NETDOM  NDGT
tbla       ansi    6,10
GTT TABLE IS 1 % FULL (3 of 269999)
```

```
START GTA  END GTA  XLAT  RI      PCA
234567     234567   DPCSSN GT      001-001-001
MRNSET=DFLT SSN=10  CCGT=no NTT=---
9810012345 9850012345 DPCSSN SSN    001-001-001
MAPSET=DFLT SSN=10  CCGT=no NTT=---
```

```
;
```

The following example retrieves a CdPA GTA entry and an Advanced CdPA GTA entry.

rtrv-gta:gttsn=setcdpa

```
tekelecstp 06-03-10 09:49:42 EST EAGLE 35.0.0
rtrv-gta:gttsn=setcdpa
Command entered at terminal #4.
GTTSN      NETDOM  NDGT
setcdpa    itu     6
GTT TABLE IS 1 % FULL (15 of 269999)
```

```
START GTA          END GTA          XLAT  RI      PC
106399             106489             DPCNGT GT      1-200-1
SSN=--- CCGT=no NTT=17
```

```

NNP=1  NNAI=45  NPDD=5  NPDS=654321678901234567891
NGTI=4
CGGTASN=SETCG1      CGPCSN=-----  SELID=-----  OPCS=-----
306399              306489              DPCNGT  GT      1-200-1
SSN=--- CCGT=no  NTT=17
NNP=1  NNAI=45  NPDD=5  NPDS=654321678901234567891
NGTI=4
CGGTASN=-----  CGPCSN=CGPCSET01  SELID=-----  OPCS=OPCSET001
400000              406489              UDS
500000              506489              DISC
600001              600009              DPCSSN  SSN      -----
SSN=125 CCGT=no  NTT=17
NNP=1  NNAI=45  NPDD=5  NPDS=654321678901234567891
NGTI=4
CGGTASN=-----  CGPCSN=-----  SELID=65500  OPCS=OPCSET001

```

;

The following example retrieves a CgPA GTA entry.

rtrv-gta:gttsn=setcgpa

```

tekelecstp 06-03-10 09:49:42 EST  EAGLE 35.0.0
rtrv-gta:gttsn=setcgpa
Command entered at terminal #4.
GTTSN      NETDOM  NDGT
setcgpa    itu     6
GTT TABLE IS  1 % FULL (15 of 269999)

START GTA          END GTA          XLAT    RI      PC
406399            406489            DPCNGT  GT      1-200-1
SSN=--- CCGT=no  NTT=17
NNP=1  NNAI=45  NSDD=9  NSDS=754321678901234567891
NGTI=4
CGSSNSN=SETCGSSN1
906399            906489            DISC

```

;

The following example retrieves a CgPA PC entry.

rtrv-gta:gttsn=setcgpc

```

tekelecstp 06-03-10 09:49:42 EST  EAGLE 35.0.0
rtrv-gta:gttsn=setcgpc
Command entered at terminal #4.
GTTSN      NETDOM  NDGT
setcgpc    ansi    -
GTT TABLE IS  1 % FULL (5 of 269999)

CgPA PC          XLAT    RI      PC
001-012-255      DPCNGT  GT      1-200-1
SSN=--- CCGT=no  NTT=17
NNP=1  NNAI=45  NSDD=9  NSDS=754321678901234567891
NGTI=4
CGSSNSN=SETCGSSN2
255-010-*        UDS
101-*-*          DPCNGT  GT      1-200-1
SSN=--- CCGT=no  NTT=17
NNP=1  NNAI=45  NSDD=9  NSDS=754321678901234567891
NGTI=4
CGSSNSN=SETCGSSN2

```

;

The following example retrieves an OPC entry.

rtrv-gta:gttsn=setopc

```

tekelecstp 06-03-10 09:49:42 EST  EAGLE 35.0.0
rtrv-gta:gttsn=setcgpc
Command entered at terminal #4.
GTTSN      NETDOM  NDGT

```

```

setopc      ansi      -
GTT TABLE IS 1 % FULL (5 of 269999)

      OPC              XLAT  RI      PC
s-001-012-255(A)      DPCNGT GT    s-1-200-1
      SSN=--- CCGT=no NTT=17
      NNP=1  NNAI=45 NSDD=9  NSDS=754321678901234567891
      NGTI=4
      CGSSNSN=SETCGSSN3
      224-*-(N24)      UDTs
;

```

The following example retrieves a CgPA SSN entry.

rtrv-gta:gttsn=setssnn

```

tekelecstp 06-03-10 09:49:42 EST EAGLE 35.0.0
rtrv-gta:gttsn=setcgpc
Command entered at terminal #4.
GTTSN      NETDOM  NDGT
setssnn    itu      -
GTT TABLE IS 1 % FULL (5 of 269999)

      START SSN      END SSN      XLAT  RI      PC
      100            200            DPCNGT GT    1-200-1
      SSN=--- CCGT=no NTT=17
      NNP=1  NNAI=45 NSDD=9  NSDS=754321678901234567891
      NGTI=4
      220            230            DISC
;

```

In the following example, the network domain is set to **cross**.

rtrv-gta:gttsn=ansiset1

```

tekelecstp 06-06-01 15:22:08 EST EAGLE 35.0.0
GTTSN      NETDOM  NDGT
ansiset1   cross   6
GTT TABLE IS 1 % FULL (1 of 269999)

      START GTA END GTA  XLAT  RI  PC      SSN CCGT NTT
      123456    123456    DPCSSN SSN 001-001-002 110 no  ---
;

```

The following example shows output when the Flexible GTT Load Sharing feature is enabled.

rtrv-gta:gttsn=tblb

```

golla 06-07-20 08:27:18 EST EAGLE 35.0.0
rtrv-gta:gttsn=tblb
Command entered at terminal #4.

      GTTSN      NETDOM  NDGT
tblb      ansi      6
GTT TABLE IS 1 % FULL (6 of 269999)

      START GTA END GTA  XLAT  RI  PCA
      123456    123456    DPC    GT    003-003-003
      MRNSET=DFLT SSN=--- CCGT=no NTT=---
      123457    123457    DPCSSN SSN 003-003-003
      MAPSET=DFLT SSN=2   CCGT=no NTT=---
;

```

Legend

GTTSN—The GTT set name. A GTT set is an entity to which global title addresses and selectors are assigned.

NETDOM—The network domain.

NDGT—The number of digits required for GTAs associated with this set.

START GTA—The start global title address.

END GTA—The end global title address.

XLAT—The translate indicator.

RI—The routing indicator.

PC, PCA, ITU PC, ITUI PC, ITUN PC, ITUN24 PC—Translated point code.

SSN—The translated subsystem number.

CCGT—The cancel called global title indicator.

NNP —New Numbering Plan.

NNAI —New Nature of Address Indicator.

NPDD —New Prefix Digits to be Deleted.

NPDS —New Prefix Digits String.

NTT—The new translation type.

MRN —Mated Relay Node.

MRNSET —MRN set.

rtrv-gtcnv

Retrieve Global Title Conversion

Use this command to display entries in the Default Global Title Conversion table.

Keyword: rtrv-gtcnv

Related Commands: chg-gtcnv, dlt-gtcnv, ent-gtcnv

Command Class: Database Administration

Parameters

:dir= (optional)

Direction of conversion.

Range: atoi, itoa, both

atoi—ANSI to ITU conversion

itoa—ITU to ANSI conversion

both—Conversion in both directions

:gtixlat= (optional)

Global Title Indicator conversion. This parameter is expressed in the form of the ANSI GTI and the ITU GTI.

Range: 22, 24

22—Converts an incoming ANSI GTI 2 to an outgoing ITU GTI 2 or an incoming ITU GTI 2 to an outgoing ANSI GTI 2

24—Converts an incoming ANSI GTI 2 to an outgoing ITU GTI 4 or an incoming ITU GTI 4 to an outgoing ANSI GTI 2

:nai= (optional)

Nature of Address Indicator.

Range: 0-63 *

:np= (optional)

Numbering Plan.

Range: 0-15 *

:tta= (optional)

ANSI translation type.

Range: 0-255 *

:tti= (optional)
ITU translation type.
Range: 0-255 *

Example

rtrv-gtcnv

Dependencies

The ANSI-ITU-China SCCP Conversion feature must be enabled before the command can be entered.

Notes

None

Output

rtrv-gtcnv

rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0

TYPEA TTN NDGT

3 c800

10

GTT TABLE IS 1 % FULL (9 of 269999)

START GTA	END GTA	XLAT	RI	PCA	SSN	NGT
9195551212		DPCSSN	SSN	008-001-001	222	---
8005550000	8005551999	DPCSSN	SSN	001-254-255	255	---
8005552000	8005553999	DPC	GT	001-254-255	255	---
8005554000	8005555999	NGT	GT	001-254-255	255	123
8005556000	8005557999	DPCSSN	SSN	001-254-255	255	---
8005558000	8005559999	DPCSSN	SSN	001-254-255	255	---
9762428487		DPCSSN	SSN	001-254-255	222	---
9766423277		DPCSSN	SSN	001-254-255	222	---
9769388928		DPCSSN	SSN	001-254-255	222	---

;

Legend

TYPE/TYPEA/TYPEI/TYPEN /TYPEN24 —The translation type.

TTN—The translation name.

NDGT—The number of digits.

rtrv-gtt

Retrieve Global Title Translation

Use this command to show one or more entries from the GTT Data and the Translation Type tables. The report that is displayed contains two records (the percentage full and number-of-cells-used field) that give the total entries in the GTT table without regard to the **type** parameter specified.

If the EGTT (Enhanced Global Title Translation) feature is turned on in the system, the system will no longer accept **-gtt** (Global Title Translation) and **-tt** (Translation Type) commands. Refer to the new command sets that replace the **-gtt** and **-tt** commands:

- GTT Selector commands (**ent/chg/dlt/rtrv-gttsel**)
- GTT Set commands (**ent/dlt/rtrv-gttset**)
- GTA commands (**ent/chg/dlt/rtrv-gta**)

Keyword: rtrv-gtt

Related Commands: chg-gtt, dlt-gtt, ent-gtt

Command Class: Database Administration

Parameters

At least one of these parameters must be specified: **ttn**, **type/typea/typeei/typen/typen24**.

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:egta= (optional)

Global title end address.

Range: 1-21 digits

Default: If the **gta** parameter is specified, the **egta** parameter default value is the specified **gta** parameter value.

:force= (optional)

This parameter allows the user to display more than 1000 entries. This parameter is used to prevent inadvertent displays of extremely large amounts of information, which could take many hours.

Range: yes, no

Default: no

:gta= (optional)

Global title start address.

Range: 1-21 digits

Default: The first GTT entry for the given translation type.

:mapset= (optional)

The MAP set ID.

Range: 1-36000 **dflt**
dflt—Default MAP set

:num= (optional)

This parameter allows the user to specify the number of entries to be shown.

Range: 1-65535
1-1000—If **force=yes** is not specified
1-65535—If **force=yes** is specified

Default: 1 (if **gta** is specified),
20 (if **gta** is not specified).

:pc= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: **pca**

Range: p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001-005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006-255**.

The point code **000-000-000** is not a valid point code.

Default: Display all

:pc/pca/pci/pcn/pcn24= (optional)

Point code.

:pci= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

Default: Display all

:pcn= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmt** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

Default: Display all

:pcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* subfield indicates a private point code *prefix-ni-nc-ncm*(*prefix-ni-nc-ncm*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

Default: Display all

:pctype= (optional)

Point code type. This parameter can be specified, only when the ANSI-ITU-China SCCP Conversion feature is enabled, to retrieve a single type of point code among mixed types of point code provisioned for a Translation Type.

Range: **ansi, itui, itun, itun24**

Default: Display all

:ssn= (optional)

Subsystem number. This parameter identifies the subsystem address that is to receive the message.

Range: 002-255

Default: Display all

:ttn= (optional)

Translation name.

Range: ayyyyyyy

1 alphabetic character followed by up to 7 alphanumeric characters

Default: None given

:type/typea/typei/typen/typen24= (optional)

Translation type identifies the translation type and network type. This parameter is the decimal representation of the 1-byte field used in SS7.

The **type** and **typea** parameters specify an ANSI network.

The **typei** parameter specifies an ITU-international network.

The **typen** parameter specifies an ITU-national network.

The **typen24** parameter specifies a 24-bit ITU-national network.

A translation type numeric value can be entered as ANSI (**type** or **typea**) and also as an ITU type (**typei** or **typen**). However, they are separate entities.

The point code domain translation types for GTT are handled by the EAGLE 5 ISS protocol processing as either ANSI or ITU; therefore, ITU applies to ITU-I, ITU-I Spare, ITU-N, and ITU-N Spare. ITU-I includes ITU-I Spare, and ITU-N includes ITU-N Spare.

Range: 0-255

Default: None given

Example

```
rtrv-gtt:type=5:ttn=lidb1:gta=919555
```

```
rtrv-gtt:type=5:gta=919555
```

```
rtrv-gtt:type=5:gta=919555:num=2500:force=yes
```

```
rtrv-gtt:typen24=0
```

```
rtrv-gtt:typei=7:pctype=ansi
```

```
rtrv-gtt:typen=106:pctype=itui
```

```
rtrv-gtt:type=55:pctype=itun
```

```
rtrv-gtt:type=9:pctype=itun24
```

```
rtrv-gtt:typei=4:pci=s-1-24-1
```

```
rtrv-gtt:typen=3:pcn=s-124
```

```
rtrv-gtt:ttn=tbla
```

```
rtrv-gtt:ttn=tbla:mapset=1
```

Dependencies

If the EGTT feature is turned on, then the **rtrv-gtt** command cannot be entered.

The ANSI-ITU-China SCCP Conversion feature must be enabled before the **pctype** parameter can be specified.

If the **pcn** parameter is specified, its format must match the format that was assigned with the **chg-stpopts:npcfmti** parameter.

If the TT is specified, then it must already exist.

If the TTN is specified, then it must correspond to a given type entry. If both the TT and TTN are specified, the TTN must correspond to the given TT.

If the **gta** parameter is not specified, the first entry in the global title translation table corresponding to the translation type is the first entry shown.

If the **gta** and **egta** parameters are specified, then the entry that matches the **gta** parameter, or is the nearest entry below the **gta** parameter, is the first entry shown for the specified range.

The number of entries to be shown (the **num** parameter) can be specified for any valid combination of parameters.

If the **num** and **gta** parameters are not specified, then up to 20 entries are shown.

If the **gta** parameter is specified, but the **num** parameter is not specified, then only one entry is shown, if it is in the database.

If the **num** parameter is specified, then the number of entries shown is the lesser of the number of entries in the table from the defined starting point to the end, or the value of the **num** parameter.

If the value of the **num** parameter exceeds **1000**, then the **force=yes** parameter must be specified.

Either the **type** parameter or the **ttn** parameter must be specified.

An asterisk cannot be specified for the **ssn** parameter value.

The translated point code (**pc/pca/pci/pcn/pcn24** parameter) must be a full point code.

If the **egta** parameter is specified, the **gta** parameter must be specified.

If the system is defined as an ANSI system, the **pc/pca** parameter must be specified as a valid ANSI point code.

The network type (ANSI, ITU-I, ITU-N, or 24-bit ITU-N) of the Translation Type and the Translated Point Code must be the same.

The ANSI-ITU-China SCCP Conversion feature must be on before a translated point code and a translation type in different network types can be specified.

The number of digits in the specified **gta** parameter must be at least the number of digits provisioned for the given translation type. If the VGTT (variable length GTT) feature is turned on, there can be up to 10 GTA lengths per translation type. When the **ent-gtt** command is entered to create entries, the software keeps track of the lengths and allows only ten different lengths.

The TT cannot be an alias.

The Flexible GTT Load Sharing feature must be enabled before the **mapset** parameter can be specified.

The specified MAP set must exist in the database.

Notes

If the **rtrv-gtt** command is entered with only the **gta** parameter, a match would be an entry containing the same number of digits, or more digits, for the translation type. For example, if **gta=8005556666** is specified, the six-digit translation type **800555** would be a match. If the VGTT feature is turned on and the **egta** parameter is specified, all matching entries regardless of length are displayed.

This command can be canceled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

If you do not know either the translation type or the translation type name, use the **rtrv-tt** command to obtain type and name.

Due to the size of these tables (up to 270,000 possible entries), a limit (65,535) is placed on the number of entries that can be printed at one time.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (**s-**) and the private and spare point code subtype prefix (**ps-**). All of the point code types support the private (internal) point code subtype prefix (**p-**).

Output

rtrv-gtt:type=10:num=65535:force=yes

rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0

TYPEA TTN NDGT

3 c800 10

GTT TABLE IS 1 % FULL (9 of 269999)

START GTA	END GTA	XLAT	RI	PCA	SSN	NGT
9195551212				DPCSSN	SSN 008-001-001	222 ---
8005550000	8005551999	DPCSSN	SSN	001-254-255	255 ---	
8005552000	8005553999	DPC	GT	001-254-255	255 ---	
8005554000	8005555999	NGT	GT	001-254-255	255 123	
8005556000	8005557999	DPCSSN	SSN	001-254-255	255 ---	
8005558000	8005559999	DPCSSN	SSN	001-254-255	255 ---	
9762428487		DPCSSN	SSN	001-254-255	222 ---	
9766423277		DPCSSN	SSN	001-254-255	222 ---	
9769388928		DPCSSN	SSN	001-254-255	222 ---	

;

rtrv-gtt:type=10:dpc=8-1-1:ssn=222:gta=9195551212

rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0

TYPEA TTN NDGT

3 c800 10

GTT TABLE IS 1 % FULL (9 of 269999)

START GTA	END GTA	XLAT	RI	PCA	SSN	NGT
9195551212		DPCSSN	SSN	008-001-001	222 ---	

;

rtrv-**gtt:type=10:ssn=222:gta=9000000000:egta=9762429999:num=65535:force=yes**

rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0

TYPEA TTN NDGT

3 c800 10

GTT TABLE IS 1 % FULL (9 of 269999)

START GTA	END GTA	XLAT	RI	PCA	SSN	NGT
9195551212		DPCSSN	SSN	008-001-001	222 ---	
9762428487		DPCSSN	SSN	001-254-255	222 ---	

;

rtrv-gtt:typen=10

rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0

TYPEN TTN NDGT

10 ----- 6

GTT TABLE IS 1 % FULL (9 of 269999)

START GTA	END GTA	XLAT	RI	ITU PC	SSN	NGT
123456	123456	DPC	GT	0500-1-0-1	---	---

;

The following example shows a retrieval of all GTTs for a specified translation when the VGTT (variable length GTT) feature is turned on:

rtrv-gtt:type=10:num=65535:force=yes

rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0

TYPEA TTN NDGT

10 c800 6, 8, 10

GTT TABLE IS 1 % FULL (17 of 269999)

START GTA	END GTA	XLAT	RI	PCA	SSN	NGT
976242		DPCSSN	SSN	001-254-255	222 ---	
976642		DPCSSN	SSN	001-254-255	222 ---	
976938		DPCSSN	SSN	001-254-255	222 ---	
80055500	80055519	DPCSSN	SSN	001-254-255	255 ---	
80055520	80055539	DPC	GT	001-254-255	255 ---	
80055540	80055559	NGT	GT	001-254-255	255 123	

```

80055560      80055579      DPCSSN SSN 001-254-255 255 ---
80055580      80055599      DPCSSN SSN 001-254-255 255 ---
9195551212    8005551999    DPCSSN SSN 008-001-001 222 ---
8005550000    8005553999    DPCSSN SSN 001-254-255 255 ---
8005552000    8005555999    DPC      GT  001-254-255 255 ---
8005554000    8005557999    NGT      GT  001-254-255 255 123
8005556000    8005559999    DPCSSN SSN 001-254-255 255 ---
8005558000    8005559999    DPCSSN SSN 001-254-255 255 ---
9762428487    DPCSSN SSN 001-254-255 222 ---
9766423277    DPCSSN SSN 001-254-255 222 ---
9769388928    DPCSSN SSN 001-254-255 222 ---
;

```

The following example shows output containing MGTT **nnp**, **nnai**, **npdd**, and **npds** parameter values:

rtrv-gtt:type=7

```

rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
TYPEA      TTN      NDGT
7          isvm      3,6,7,10
GTT TABLE IS 1 % FULL (17 of 269999)

START GTA      END GTA      XLAT  RI  PCA      SSN NGT
564            564            DPCSSN SSN 248-006-015 245 ---
                    NNP=3 NNAI=100 NPDD=3 NPDS=345
641            641            DPCSSN SSN 248-006-015 245 ---
589234         598744         DPCSSN SSN 248-006-015 245 ---
                    NNP=10 NNAI=50 NPDD=3 NPDS=345
648392         659832         DPCSSN SSN 248-006-015 245 ---
;

```

The following example shows output when the GTT table can contain up to 1,000,000 entries:

rtrv-gtt:type=7

```

rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
TYPEA      TTN      NDGT
7          isvm      3,6,7,10
GTT TABLE IS 1 % FULL (17 of 1000000)

START GTA      END GTA      XLAT  RI  PCA      SSN NGT
564            564            DPCNGT GT 248-006-015 245 123
                    NNP=3 NNAI=100 NPDD=3 NPDS=345
641            641            DPCNGT GT 248-006-015 245 123
589234         598744         DPCNGT GT 248-006-015 245 123
                    NNP=10 NNAI=50 NPDD=3 NPDS=345
648392         659832         DPCSSN SSN 248-006-015 245 ---
;

```

The following example shows output for a 24-bit ITU-N point code translation type of 4:

rtrv-gtt:typen24=4

```

rlghncxa03w 03-03-07 11:43:04 EST EAGLE 31.0.0
TYPEN24     TTN      NDGT
4           - - - - - 6
GTT TABLE IS 1 % FULL (1 of 269999)

START GTA      END GTA      XLAT  RI  ITU PC      SSN NGT
919833         919833         DPCSSN SSN 008-008-008 20 ---
;

```

The following example shows output when the ANSI-ITU-China SCCP Conversion feature is enabled, with suffix digits and new GTI code parameter values.

NOTE: When the ANSI-ITU-China SCCP Conversion feature is enabled, entries that are provisioned with xlat=dpc where ngt has been specified are displayed with an xlat of dpcngt.

rtrv-gtt:type=7

```
rlghncxa03w 03-11-07 11:43:04 EST EAGLE 31.3.0
TYPEI   TTN      NDGT
7       isvm      3,6,7,10
GTT TABLE IS    1 % FULL    (17 of 1000000)

START GTA          END GTA          XLAT  RI  PC          SSN NGT
564                564                DPCNGT GT 002-136-005 245 123
NPN=3 NNAI=100 NSDD=3 NSDS=345
NGTI=4
641                641                DPCNGT GT 23456          245 123
NGTI=2
589234            598744            DPCNGT GT 3-006-1        245 123
NPN=10 NNAI=50 NPDD=3 NPDS=345
NGTI=4
648392            659832            DPCSSN SSN 007-006-005 245 ---
;
```

The following example shows output when the ANSI-ITU-China SCCP Conversion feature is enabled and the **pctype=ansi** parameter is specified.

rtrv-gtt:typei=7:pctype=ansi

```
rlghncxa03w 03-11-07 11:43:04 EST EAGLE 31.3.0
TYPEI   TTN      NDGT
7       isvm      3,6,7,10
GTT TABLE IS    1 % FULL    (17 of 1000000)

START GTA          END GTA          XLAT  RI  PCA          SSN NGT
564                564                DPCNGT GT 002-136-005 245 123
NPN=3 NNAI=100 NSDD=3 NSDS=345
NGTI=4
648392            659832            DPCSSN SSN 007-006-005 245 ---
;
```

The following example shows output when the ANSI-ITU-China SCCP Conversion feature is enabled and the **pctype=itui** parameter is specified.

rtrv-gtt:typen=106:pctype=itui

```
rlghncxa03w 03-11-07 11:43:04 EST EAGLE 31.3.0
TYPEN   TTN      NDGT
106     ntoi43    6
GTT TABLE IS    1 % FULL    (17 of 1000000)

START GTA          END GTA          XLAT  RI  ITUI PC          SSN NGT
300006            300006            DPCNGT GT 6-002-3        --- 33
NPN=6 NNAI=7 NPDD=0 NPDS=
NGTI=4
;
```

The following example shows output when the ANSI-ITU-China SCCP Conversion feature is enabled and the **pctype=itun** parameter is specified.

rtrv-gtt:type=55:pctype=itun

```
rlghncxa03w 03-11-07 11:43:04 EST EAGLE 31.3.0
TYPEA   TTN      NDGT
55      aton44    7
GTT TABLE IS    1 % FULL    (17 of 1000000)

START GTA          END GTA          XLAT  RI  ITUN PC          SSN NGT
6543210            6543210            DPCNGT GT 12341          --- 42
NPN=3 NNAI=1 NPDD=0 NPDS=
```

NGTI=4

;

The following example shows output when the ANSI-ITU-China SCCP Conversion feature is enabled and the **pctype=itun24** parameter is specified.

rtrv-gtt:type=9:pctype=itun24

```
rlghncxa03w 03-11-07 11:43:04 EST EAGLE 31.3.0
TYPE      TTN      NDGT
7         isvm     3,6,7,10
GTT TABLE IS    1 % FULL    (17 of 1000000)

START GTA      END GTA      XLAT  RI  ITUN24 PC      SSN NGT
764            864          DPCNGT GT  002-136-005  245 123
                        NNP=3 NNAI=100 NSDD=3 NSDS=345
                        NGTI=4
668392         689832      DPCSSN SSN 007-006-005  245 ---
```

;

rtrv-gtt:typen=3

```
rlghncxa03w 05-01-07 11:43:04 EST EAGLE 31.12.0
TYPEN      TTN      NDGT
3          - - - - - 6,21
GTT TABLE IS    1 % FULL (6 of 269999)

START GTA      END GTA      XLAT  RI  ITU PC
123456         123456      DPCSSN GT  s-00124-aa
      SSN=10 NGT=---
      NNP=12 NNAI=125 NPDD=21 NPDS=125498679012426556356
      NGTI=
234567         234567      DPCNGT GT  s-00124-aa
      SSN=--- NGT=255

234568         234568      DPC      GT  s-00124-aa
      SSN=--- NGT=---

234569         234569      DPC      GT  s-00124-aa
      SSN=--- NGT=---
      NNP=13 NNAI=120 NPDD=21 NPDS=125498679012426556356
      NGTI=
334569467213456789012 334569478932012345678 DPC      GT  s-00124-aa
      SSN=--- NGT=---
      NNP=13 NNAI=120 NPDD=21 NPDS=125498679012426556356
      NGTI=
```

;

rtrv-gtt:typen=3:pcn=s-124-aa

```
rlghncxa03w 05-01-07 11:43:04 EST EAGLE 31.12.0
TYPEN      TTN      NDGT
3          - - - - - 6,21
GTT TABLE IS    1 % FULL (6 of 269999)

START GTA      END GTA      XLAT  RI  ITU PC
123456         123456      DPCSSN GT  s-00124-aa
      SSN=10 NGT=---
      NNP=12 NNAI=125 NPDD=21 NPDS=125498679012426556356
      NGTI=
234567         234567      DPCNGT GT  s-00124-aa
      SSN=--- NGT=255

234568         234568      DPC      GT  s-00124-aa
      SSN=--- NGT=---

234569         234569      DPC      GT  s-00124-aa
      SSN=--- NGT=---
```

```

NNP=13 NNAI=120 NPDD=21 NPDS=125498679012426556356
NGTI=
334569467213456789012 334569478932012345678 DPC GT s-00124-aa
SSN=--- NGT=---
NNP=13 NNAI=120 NPDD=21 NPDS=125498679012426556356
NGTI=

```

;

rtrv-gtt:typen=3:ssn=104

```
rlghncxa03w 05-01-07 11:43:04 EST EAGLE 31.12.0
```

```

TYPE  TTN      NDGT
3      - - - - - 6

```

```

GTT TABLE IS 1 % FULL (5 of 269999)

```

```

START GTA      END GTA      XLAT  RI      ITU PC
123456         123456         DPCSSN GT  s-00124-aa

```

```
SSN=10 NGT=---
```

```

NNP=12 NNAI=125 NPDD=21 NPDS=125498679012426556356
NGTI=

```

;

rtrv-gtt:typen=3:gta=234569

```
rlghncxa03w 05-01-07 11:43:04 EST EAGLE 31.12.0
```

```

TYPE  TTN      NDGT
3      - - - - - 6

```

```

GTT TABLE IS 1 % FULL (5 of 269999)

```

```

START GTA      END GTA      XLAT  RI      ITU PC
234569         234569         DPC   GT  s-00124-aa

```

```
SSN=--- NGT=---
```

```

NNP=13 NNAI=120 NPDD=21 NPDS=125498679012426556356
NGTI=

```

;

In the following example, the Flexible GTT Load Sharing feature is not on.

rtrv-gtt:ttn=tbla

```
tekelecstp 06-05-10 15:50:49 EST EAGLE 35.0.0
```

```

TYPEA  TTN      NDGT
10     tbla     6

```

```

GTT TABLE IS 1 % FULL (2 of 269999)

```

```

START GTA      END GTA      XLAT  RI      PCA
123456         123456         DPC   GT    001-001-001

```

```
SSN=--- NGT=---
```

```

234567         234567         DPCSSN SSN  001-001-001

```

```
SSN=2 NGT=---
```

;

The following example shows an MRN set value of NONE. The Flexible GTT Load-Sharing feature and the Intermediate GTT Load Sharing feature are on.

rtrv-gtt:ttn= tbl1

```
tekelecstp 06-05-10 13:54:32 EST EAGLE 35.0.0
```

```

TYPEA  TTN      NDGT
1      tbl1     10

```

```

GTT TABLE IS 1 % FULL (1 of 269999)

```

```

START GTA      END GTA      XLAT  RI      PCA
1234567890     1234567890     DPC   GT    001-001-002

```

```
MRNSET=NONE SSN=--- NGT=---
```

;

The following example shows an MRN set. The Flexible GTT Load-Sharing feature and the Intermediate GTT Load Sharing feature are on.

rtrv-gtt:ttn= tbl2

```
tekelecstp 06-05-10 13:54:32 EST EAGLE 35.0.0
TYPEA      TTN      NDGT
1          tbl2      10
GTT TABLE IS 1 % FULL (1 of 269999)

START GTA      END GTA      XLAT  RI  PCA
2345678901     2345678901    DPC   GT  001-001-001
MRNSET=1      SSN=--- NGT=---
```

The following example shows output when the Flexible GTT Load Sharing feature and the Origin-based SCCP feature are on.

rtrv-gtt:ttn=tbla

```
tekelecstp 06-05-10 14:51:59 EST EAGLE 35.0.0

GTTSN      NETDOM  NDGT
tbla       ansi    6,10
tk
START GTA  END GTA  XLAT  RI  PCA
234567     234567   DPCSSN GT  001-001-001
MRNSET=DFLT SSN=10  CCGT=no NTT=---
CGGTASN=----- CGPCSN=----- SELID=----- OPCS=-----
9810012345 9850012345 DPCSSN SSN 001-001-001
MAPSET=DFLT SSN=10  CCGT=no NTT=---
CGGTASN=----- CGPCSN=----- SELID=----- OPCS=-----
```

Legend

TYPE/TYPERA/TYPERI/TYPEN /TYPEN24 —The translation type.

TTN—The translation name.

NDGT—The number of digits.

GTT TABLE IS 10% FULL—The relative size of the GTT table.

x OF y—Number of entries in the table (x) and the maximum number of entries configured for the table (y)

START GTA—Global title start address.

END GTA—Global title end address.

XLAT—Translate indicator.

RI—Route indicator.

PC, PCA, ITU PC, ITUI PC, ITUN PC, ITUN24 PC—Point code.

SSN—Subsystem number.

NGT—New global title translation type. This field identifies the type of global title translation that replaces the original type.

NNP—New Numbering Plan.

NNAI—New Nature of Address Indicator.

NPDD—New Prefix Digits to be Deleted.

NPDS—New Prefix Digits String.

NSDD—New Suffix Digits to be Deleted.

NSDS—New Suffix Digits String

NGTI—New GTI code. When the ANSI-ITU-China SCCP Conversion and MGTT features are on and the Translated Point Code is of a different network type, the *NGTI* value indicates whether the new GTI translation format is GTI type 2 or GTI type 4.

MRN— Mated Relay Node

MRNSET —MRN set

MAPSET—MAP set

rtrv-gttsel

Retrieve GTT Selectors

Use this command to display a list of administered global title selector combinations required for a global title entry. The list can be filtered by using various parameter combinations.

Keyword: **rtrv-gttsel**

Related Commands: **chg-gttsel, dlt-gttsel, ent-gttsel**

Command Class: Database Administration

Parameters

:gti/gtia/gtii/gtin/gtin24= (mandatory)

Global title indicator. For all EGTT selector commands, the domain is defined as **gti** and **gtia** (ANSI), **gtii** (ITU international), **gtin** (ITU national), and **gtin24** (24-bit ITU national).

For the selector commands, **gti** and **gtia** are equivalent; **gtii** and **gtin /gtin24** are mutually exclusive because the EGTT database does not distinguish between ITU national and ITU international translations. This means that while ITU-I and ITU-N selectors are stored separately, two separate ITU-I and ITU-N entries with the same selector values cannot exist. For example, if an entry with **gtii=2** and **tt=4** already exists, an entry of **gtin=2** and **tt=4** cannot be entered.

Range: Supported value for ANSI: **gti=2** and **gtia=2**
Supported values for ITU: **gtii=2, 4** and **gtin /gtin24=2, 4**

Default: Display all

:cdgtasn= (optional)

CdPA GTA GTT set name.

Range: *ayyyyyyy*
1 leading alphabetic character and up to 8 following alphanumeric characters.

:cggtasn= (optional)

CgPA GTA GTT set name.

Range: *ayyyyyyy*
1 leading alphabetic character and up to 8 following alphanumeric characters.

:cgpcsn= (optional)

CdPA PC GTT set name.

Range: *ayyyyyyy*
1 leading alphabetic character and up to 8 following alphanumeric characters.

:cgssn= (optional)

CgPA subsystem number.

Range: **0-255**

:gttsn= (optional)

GTT set name. A GTT set is an entity to which global title addresses and selectors are assigned. The **gttsn** parameter can only be specified if the Origin-based SCCP Routing feature is off.

Range: *ayyyyyyy*
1 leading alphabetic and up to 8 following alphanumeric characters.

Default: Display all

:nai= (optional)

Nature of Address indicator. The Nature of Address indicator can be specified by supplying either a mnemonic value (**nai** parameter) or an explicit numeric value (**naiv** parameter). Either the **nai** parameter or the **naiv** parameter, but not both, can be specified in the command. Table A-5 shows the mapping between the **naiv** and the **nai** parameter values.

Range: sub, rsvd, natl, intl, dflt

Default: Display all

:naiv= (optional)

Nature of Address indicator value. The Nature of Address indicator can be specified by supplying either a mnemonic value (**nai** parameter) or an explicit numeric value (**naiv** parameter). Either the **nai** parameter or the **naiv** parameter, but not both, can be specified in the command. Table A-5 shows the mapping between the **naiv** and the **nai** parameter values.

Range: 0-127

Default: Display all

:np= (optional)

Numbering Plan. The numbering plan can be specified by supplying either a mnemonic value (**np** parameter) or an explicit numeric value (**npv** parameter). Either the **np** parameter or the **npv** parameter, but not both, can be specified in the command. Table A-6 shows the mapping between the **npv** and the **np** parameter values.

Range: e164, generic, x121, f69, e210, e212, e214, private, dflt

Default: Display all

:npv= (optional)

Numbering Plan value. The numbering plan can be specified by supplying either a mnemonic value (**np** parameter) or an explicit numeric value (**npv** parameter). Either the **np** parameter or the **npv** parameter, but not both, can be specified in the command. Table A-6 shows the mapping between the **npv** and the **np** parameter values.

Range: 0-15

Default: Display all

:selid= (optional)

Selector ID.

Range: 0-65534

:tt= (optional)

Translation type.

Range: 0-255

Default: Display all

Example

```
rtrv-gtttsel
rtrv-gtttsel:gtii=2
rtrv-gtttsel:tt=0:np=e164
rtrv-gtttsel:gti=2:tt=10
rtrv-gtttsel:gttsn=setint000
```

Dependencies

The EGTT feature must be turned on before this command can be entered.

An entry that matches exactly the specified combination of **gti**, **tt**, **np/npv**, **nai/naiv**, and **gttsn** must be specified. If no match is found, the following message is displayed in the scroll area of the terminal: No GTT Selectors matching the specified criteria were found.

The specified **gttsn** value must exist for the specified **gtin24**, **tt**, **np/npv/nai/naiv** parameter combination.

The **np** and **npv** parameters cannot be specified together in the same command.

The **nai** and **naiv** parameters cannot be specified together in the same command.

The parameter values **gtia=4**, **gti/gtia/gtii/gtin/gtin24=1**, and **gti/gtia/gtii/gtin/gtin24=3** cannot be specified.

When the **gti/gtia/gtii/gtin/gtin24=2** parameter is specified, the **np/npv** and **nai/naiv** parameter combinations cannot be specified.

If the **cgssn** parameter and/or the **selid** parameter is specified, neither the **cggtasn** parameter nor the **cgpcsn** parameter can be specified.

The Origin-based SCCP Routing feature must be enabled if the **cggtasn**, **cgpcsn**, **cgssn**, **cdgtasn**, or **selid** parameters are specified.

The GTT set specified by the **cggtasn** or **cgpcsn** parameter must exist in the database before it is assigned to a GTT selector.

The set type of the **cggtasn** parameter or the **cgpcsn** parameter must match the set type of the corresponding entry in the GTT set table. For example, the **cggtasn** parameter should have a set type of **cggt**, and the **cgpcsn** parameter should have a set type of **cgpc**.

The **cdgtasn** parameter cannot be specified if the **gti=2** and **tt** parameters are specified, or if the **gti=4** and the **tt**, **np/npv**, and **nai/naiv** parameters are specified.

Notes

When the EGTT feature is turned on, the GTT Selector (**ent/chg/dlt/rtrv-gttset**), GTT Set (**ent/dlt/rtrv-gttset**), and GTA (**ent/chg/dlt/rtrv-gta**) commands replace the Translation Type (**ent/dlt/rtrv-tt**) and Global Title Translation (**ent/chg/dlt/rtrv-gtt**) commands. All data previously provisioned with these commands is maintained.

Output

Retrieve all GTT selectors:

rtrv-gttset

```
rlghncxa03w 04-02-18 08:29:15 EST EAGLE 31.3.0
GTIA TT NP NAI GTTSN
2 0 -- --- setans000
2 9 -- --- lidb
2 10 -- --- t800
2 253 -- --- t800

GTII TT NP NAI GTTSN
2 0 -- --- setint000
2 9 -- --- imsi
2 18 -- --- imsi
4 0 e164 sub setint000
4 0 dflt dflt setint000
4 9 dflt dflt imsi
4 18 dflt dflt imsi
4 128 13 123 abcd12345
4 254 private rsvd setint000

GTIN TT NP NAI GTTSN
2 2 -- --- setnat002
4 2 dflt dflt setnat002
4 223 f69 intl setint000
;
```

Retrieve all GTT selectors containing the specified GTI value:

rtrv-gttset:gtii=2

```
rlghncxa03w 04-02-18 08:29:15 EST EAGLE 31.3.0
GTII TT NP NAI GTTSN
2 0 -- --- setint000
2 9 -- --- imsi
2 18 -- --- imsi
;
```

Retrieve all GTT selectors containing the specified TT and NP values:

rtrv-gttset:tt=0:np=e164

```
rlghncxa03w 04-02-18 08:29:15 EST EAGLE 31.3.0
GTII TT NP NAI GTTSN
4 0 e164 sub setint000
4 0 dflt dflt setint000
;
```

Retrieve a specific GTT selector:

rtrv-gttset:gti=2:tt=10

```
rlghncxa03w 04-02-18 08:29:15 EST EAGLE 31.3.0
GTIA TT NP NAI GTTSN
2 10 -- --- t800
;
```

Retrieve all GTT selectors using a specified GTT set name:

rtrv-gttset:gttsn=setin000

```
rlghncxa03w 04-02-18 08:29:15 EST EAGLE 31.3.0
GTII TT NP NAI GTTSN
2 0 -- --- setin000
4 0 e164 sub setin000
4 0 dflt dflt setin000
4 254 private rsvd setin000
```



```

      GTIN  TT   NP      NAI   GTTSN
      4     223 f69      intl  setin000
;
rtrv-gttset
      tekelecstp 03-03-31 15:09:45 EST  EAGLE 31.0.0
      GTIN24 TT      NP      NAI   GTTSN
      2       2     --      ---  any
      2       4     --      ---  set24n004
;

```

Retrieve all GTT Selectors when the Origin-based SCCP Routing feature is enabled:

```

rtrv-gttset
      tekelecstp 06-06-01 08:29:15 EST  EAGLE 35.0.0
      GTII TT      NP      NAI   CDGTASN  CGGTASN  CGPCSN  CGSSN SELID
      2     0     --      ---  gtti00001  cgpa001  -----  120  65534
      4     0     e164    sub  gtti00001  -----  cgpc001  1    0
      4     0     dflt    dflt s2i000    -----  -----  ---  -----
      4     254  private  rsvd -----  cggta03  -----  2    65533

      GTIN  TT   NP      NAI   CDGTASN  CGGTASN  CGPCSN  CGSSN SELID
      4     223 f69      intl  spi00001  -----  cgpc001  255  123
;

```

Retrieve all GTT selectors for a specified GTT set and global title indicator:

```

rtrv-gttset:cdgtasn=gtti00001
      tekelecstp 06-06-01 08:29:15 EST  EAGLE 35.0.0
      GTII TT      NP      NAI   CDGTASN  CGGTASN  CGPCSN  CGSSN SELID
      2     0     --      ---  gtti00001  cgpa001  -----  120  65534
      4     0     e164    sub  gtti00001  -----  cgpc001  1    0
;

```

Retrieve all GTT Selectors for a specified GTT set:

```

rtrv-gttset:cdgtasn=cgpa001
      tekelecstp 06-06-01 08:29:15 EST  EAGLE 35.0.0
      GTII TT      NP      NAI   CDGTASN  CGGTASN  CGPCSN  CGSSN SELID
      2     0     --      ---  gtti000    cgpa001  -----  120  65534
;

```

Retrieve all GTT Selectors for a specified GTT set and selector ID:

```

rtrv-gttset:cdgtasn=gtti00001:selid=0
      tekelecstp 06-06-01 08:29:15 EST  EAGLE 35.0.0
      GTII TT      NP      NAI   CDGTASN  CGGTASN  CGPCSN  CGSSN SELID
      4     0     e164    sub  gtti00001  -----  cgpc001  1    0
;

```

Retrieve all GTT Selectors for a specified GTT set and subsystem number:

```

rtrv-gttset:cdgtasn=gtti00001:cgssn=120
      tekelecstp 06-06-01 08:29:15 EST  EAGLE 35.0.0
      GTII TT      NP      NAI   CDGTASN  CGGTASN  CGPCSN  CGSSN SELID
      2     0     --      ---  gtti00001  cgpa001  -----  120  65534
;

```

Legend

GTI/GTIA/GTII/GTIN/GTIN24—The global title indicator.

TT—The translation type.

NP—The number plan.

NAI—The nature of address indicator.

GTTSN—The GTT set name. A GTT set is an entity to which global title addresses and selectors are assigned.

rtrv-gttset**Retrieve GTT Set**

Use this command to display a list of administered GTT sets. This list can be filtered by using the parameters shown.

Keyword: **rtrv-gttset**

Related Commands: **chg-gttset, dlt-gttset, ent-gttset**

Command Class: Database Administration

Parameters

:gttsn= (optional)

GTT set name. A GTT set is an entity to which global title addresses and selectors are assigned.

Range: *aaaaaaaa*

1 leading alphabetic and up to 8 following alphanumeric characters.

:netdom= (optional)

Network domain. This command does not distinguish between ITU National or ITU International because the Enhanced Global Title Translation feature does not discriminate between the ITU-I and ITU-N translations.

Range: **ansi, itu, cross**

Default: Display all

:settype= (optional)

GTT set type.

Range: **cdgta, cggta, cgpc, cgssn, opc**

Default: Display all

Example

```
rtrv-gttset
```

```
rtrv-gttset:netdom=ansi
```

```
rtrv-gttset:gttsn=t800
```

Dependencies

The EGTT feature must be turned on before this command can be entered.

If the **gttsn** parameter is specified, it cannot have a value of **none**, and must match an existing **gttsn**.

If the **netdom** parameter is specified, at least one entry must exist that exactly matches the specified value. Otherwise, the following error message appears in the scroll area:

```
No GTT Sets matching the specified criteria were found.
```

The **netdom=cross** parameter is valid only if the **settype=cdgta** parameter is specified.

If the **gttsn** parameter is specified, the **settype** and **netdom** parameters cannot be specified.

The Origin-based SCCP Routing feature must be enabled if the value of the **settype** parameter is **cggta, cgssn, opc, or cgpc**.

The ANSI-ITU-China SCCP Conversion feature must be turned on before the **netdom=cross** parameter can be specified.

Notes

When the EGTT feature is turned on, the GTT Selector (**ent/chg/dlt/rtrv-gttset**), GTT Set (**ent/dlt/rtrv-gttset**), and GTA (**ent/chg/dlt/rtrv-gta**) commands replace the Translation Type (**ent/dlt/rtrv-**

tt) and Global Title Translation (**ent/chg/dlt/rtrv-gtt**) commands. All data previously provisioned with these commands is maintained.

When the Origin-based SCCP Routing feature is turned on, the **settype** parameter is displayed regardless of feature key status. If the feature key is not enabled, the **settyp=cdgta** parameter (default value) is displayed.

Output

Retrieve all GTT sets:

rtrv-gttset

```
rlghncxa03w 04-02-19 08:16:15 EST EAGLE 31.3.0
GTTSN      NETDOM      NDGT
lidx       ansi        10
t800       ansi        6
s_i000     itu         15
imsi       itu         15
abcd1234   itu         12
```

;

Retrieve all GTT sets containing the specified **netdom** value:

rtrv-gttset:netdom=ansi

```
rlghncxa03w 04-02-19 08:16:15 EST EAGLE 31.3.0
GTTSN      NETDOM      NDGT
lidx       ansi        10
t800       ansi        6
```

;

Retrieve a specific GTT set:

rtrv-gttset:gttsn=t800

```
rlghncxa03w 04-02-19 08:16:15 EST EAGLE 31.3.0
GTTSN      NETDOM      NDGT
t800       ansi        6
```

;

Retrieve all GTT sets when the VGTT (Variable Length GTT) feature is turned on:

rtrv-gttset

```
rlghncxa03w 04-02-19 08:16:15 EST EAGLE 31.3.0
GTTSN      NETDOM      NDGT
lidx       ansi        3,7,10
t800       ansi        4,6
s_i000     itu         10,15
imsi       itu         10,15
abcd1234   itu         12
```

;

Retrieves GTT sets for a specified GTT set type when the Origin-based SCCP Routing feature is turned on.

rtrv-gttset:settype=cgpc

```
rlghncxa03w 06-05-14 08:10:20 EST EAGLE 35.0.0
GTTSN      NETDOM      SETTYPE  NDGT
pc00       ansi        CGPC      -
pc01       ansi        CGPC      -
pc02       itu         CGPC      -
pc03       ansi        CGPC      -
pc04       ansi        CGPC      -
pc05       ansi        CGPC      -
```

;

Retrieve all GTT sets when the Origin-based SCCP Routing feature is turned on.

rtrv-gttset

```
rlghncxa03w 06-05-14 08:10:20 EST EAGLE 35.0.0
GTTSN      NETDOM      SETTYPE  NDGT
Pc10       cross       CDGTA     6,8,10,17
Pc11       ansi        CGGTA     10
Pc12       itu         CGPC      -
Pc13       itu         CGSSN     -
Pc14       ansi        OPC       -
```

```

Pc15      ansi      CGPC      -
;
Retrieve all GTT sets when the ANSI-ITU-China SCCP Conversion feature is on and ANSI/ITU
Translation is used for an entry with a network domain of cross:

```

rtrv-gttset

```

rlghncxa03w 06-08-18 08:29:15 EST  EAGLE 35.0.0
GTTSN      NETDOM  NDGT
lidx       ansi    10
t800       ansi    6
s_i000     itu     15
imsi       itu     15
abcd1234   cross   12
;

```

Legend

GTTSN—The GTT set name. A GTT set is an entity to which global title addresses and selectors are assigned.

NETDOM—The network domain.

SETTYPE—The GTT set type.

NDGT—The number of digits required for GTAs associated with this set.

rtrv-gtw-stp**Retrieve Gateway STP Parameters**

Use this command to display the level 3 ANSI transfer control status (TFCSTAT) parameter. This value is the level 3 control status used on a TFC message received from an ITU node destined for an ANSI node.

Keyword: **rtrv-gtw-stp**

Related Commands: **chg-gtw-stp**

Command Class: Database Administration

Parameters

This command has no parameters.

Example

```
rtrv-gtw-stp
```

Dependencies

None

Notes

None

Output

```

rtrv-gtw-stp
rlghncxa03w 03-03-11 11:34:04 EST  EAGLE 31.3.0
TFCSTAT
1
;

```

rtrv-gtwy-acthresh**Retrieve the Gateway Screening Activity Threshold**

Use this command to display the current values for the SS7 message rejection thresholds occurring because of the gateway screening process.

Keyword: rtrv-gtwy-acthresh

Related Commands: set-gtwy-acthresh

Command Class: Database Administration

Parameters

:lsn= (optional)

Linkset name.

Range: ayyyyyyyyy

1 alphabetic character followed by up to 9 alphanumeric characters

Default: Display all

Example

rtrv-gtwy-acthresh: lsn=wy644368

rtrv-gtwy-acthresh

Dependencies

The specified linkset must exist in the gateway linkset entity set of the requesting system.

The linkset specified must exist in the active database.

At least one optional parameter must be specified.

Notes

None

Output

The following example shows the display of the thresholds of all linksets:

rtrv-gtwy-acthresh

```
rlghncxa03w 04-02-18 08:50:12 EST EAGLE 31.3.0
LSN      REJ      RECV      INTRVL
WY644368 10        1000      10
WY234456 25        2000      20
LN123445 -          -         -
LN123556 25        2500      30
OP239900 -          5         5
```

;

The following example shows the display of the linkset **wy644368** rejection thresholds:

rtrv-gtwy-acthresh: lsn=wy644368

```
rlghncxa03w 04-02-18 08:50:12 EST EAGLE 31.3.0
LSN      REJ      RECV      INTRVL
wy644368 10        1000      10
```

:

Legend

LSN—Linkset name.

REJ—Reject threshold.

RECV—Received message threshold.

INTRVL—Monitor interval.

rtrv-gtwy-prmtrs**Retrieve Gateway Parameters**

Use this command to display the STP values that limit the display of certain notification messages that could become excessive. Only the values set by the **set-scrrej-prmtrs** command are displayed.

Keyword: **rtrv-gtwy-prmtrs**

Related Commands: **set-scrrej-prmtrs**

Command Class: Database Administration

Parameters

This command has no parameters.

Example

rtrv-gtwy-prmtrs

Dependencies

None

Notes

None

Output

rtrv-gtwy-prmtrs

```
rlghncxa03w 04-02-18 08:50:12 EST EAGLE 31.3.0
LIMIT INTRVL
1000 15
;
```

Legend

LIMIT—The threshold not to be exceeded.

INTRVL—Monitor interval. The examination period, in minutes, during which the gateway screening activity thresholds are to be tested.

rtrv-gws-actset**Retrieve Gateway Screening Stop Action Sets**

Use this command to display the values defined for gateway screening stop actions.

Keyword: **rtrv-gws-actset**

Related Commands: **chg-gws-actset**

Command Class: Database Administration

Parameters

:actid= (optional)

The identification number of the gateway screening stop action.

Range: **4-16**

Default: Display all

:actname= (optional)

The name of the gateway screening stop action set.

Range: *ayyyy*

One alphabetic character followed by up to five alphanumeric characters.

Default: Display all

Example

```

rtrv-gws-actset
rtrv-gws-actset:actname=cr
rtrv-gws-actset:actid=6

```

Dependencies

Either **actname** or **actid** can be specified, but not both.

Notes

If neither **actname** nor **actid** are specified with the **rtrv-gws-actset** command, all gateway screening stop actions are displayed.

Output

(with 6 gateway screening stop action sets defined)

rtrv-gws-actset

```

rlghncxa03w 03-03-07 00:57:31 EST EAGLE 31.3.0
ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT
ID   NAME  1    2    3    4    5    6    7    8    9    10
--   ---
1    copy  copy
2    rdct  rdct
3    cr    copy rdct
4    crcncf copy cncf rdct
5    cncf  cncf
6    cfrd  cncf rdct

```

GWS action set table is (6 of 16) 38% full

;

rtrv-gws-actset:actname=cr

```

rlghncxa03w 03-03-07 00:57:31 EST EAGLE 31.3.0
ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT
ID   NAME  1    2    3    4    5    6    7    8    9    10
--   ---
3    cr    copy rdct

```

GWS action set table is (6 of 16) 38% full

;

rtrv-gws-actset:actid=6

```

rlghncxa03w 03-03-07 00:57:31 EST EAGLE 31.3.0
ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT
ID   NAME  1    2    3    4    5    6    7    8    9    10
--   ---
6    cfrd  cncf rdct

```

GWS action set table is (6 of 16) 38% full

;

rtrv-gws-redirect**Retrieve Gateway Screening Redirect**

Use this command to display the provisioning data for the redirect function. The parameters and values that are retrieved using this command are stored in the Redirect table, and they are used to set the variable fields of the MSUs being redirected.

Keyword: **rtrv-gws-redirect**

Related Commands: **chg-gws-redirect**, **dlt-gws-redirect**, **ent-gws-redirect**

Command Class: Database Administration

Parameters

This command has no parameters.

Example

rtrv-gws-redirect

Dependencies

None

Notes

None

Output

```
rtrv-gws-redirect
rlghncxa03w 03-11-10 11:43:04 EST EAGLE 31.6.0
ENABLED DPCA          RI  SSN  TT   GTA
on      001-030-001 SSN  10   25   1800833
;

rtrv-gws-redirect
rlghncxa03w 03-11-10 11:43:04 EST EAGLE 31.6.0
ENABLED DPCI          RI  SSN  TT   GTA
on      1-001-1      SSN  10   25   1800833
;

rtrv-gws-redirect
rlghncxa03w 03-11-10 11:43:04 EST EAGLE 31.6.0
ENABLED DPCN          RI  SSN  TT   GTA
on      10234        SSN  10   25   1800833
;

rtrv-gws-redirect
rlghncxa03w 03-11-10 11:43:04 EST EAGLE 31.6.0
ENABLED DPCN24        RI  SSN  TT   GTA
on      001-030-001 SSN  10   25   1800833
;
```

In the following example, the gateway screening redirect function is not enabled.

```
rtrv-gws-redirect
rlghncxa03w 03-11-10 11:43:04 EST EAGLE 31.6.0
ENABLED DPCA          RI  SSN  TT   GTA
Redirect function data is not provisioned.
;
```

Legend

ENABLED—Indicates whether the gateway screening redirect function is on or off

DPCA/DPCI/DPCN/DPCN24—The destination point code that the message is being redirected to.

RI—The routing indicator for the redirected message

SSN—The subsystem to which the redirected message is bound for.

TT—The translation type of the global title translation

GTA—The global title translation address

rtrv-home-smsc**Retrieve HOME SMSC Address**

Use this command to retrieve HOME SMSC specific addresses currently used to identify Short Message Service Centers in the database. This command reads the HOME SMSCADDR table.

Keyword: **rtrv-home-smsc**

Related Commands: **dlt-home-smsc**, **ent-home-smsc**

Command Class: Database Administration

Parameters

:force= (optional)

Display more than 50 entries.

Range: **yes, no**

Default: **no**

:num= (optional)

Number of entries to display. The **force** parameter must also be specified to display more than 50 entries.

Range: **0-500**

Default: **50**

:smsc= (optional)

Short Message Service Center address.

Range: 1-21 digits

1-21 hexadecimal digits

Example

rtrv-home-smsc

rtrv-home-smsc:smsc=552611646

rtrv-home-smsc:num=100:force=yes

Dependencies

The Portability Check for Mobile Originated SMS (MNP SMS) feature must be enabled (see the **enable-ctrl-feat** command) before this command can be entered. (This controlled feature can be turned off with the **chg-ctrl-feat** command and the **rtrv-home-smsc** command will still execute.)

When the specified **num** parameter value is greater than 50, the **force=yes** parameter must also be specified.

Notes

None

Output

rtrv-home-smsc

```
rlghncxa03w 03-03-28 08:50:12 EST EAGLE 31.3.0
SMSC ADDRESS
```

```
13214564894498
55231465465434
5465455655656456
```

```
HOME SMSC ADDRESS TABLE IS 1 % FULL (3 of 500)
```

```
;
```

rtrv-homern**Retrieve Home Routing Number Prefix List**

Use this command to retrieve a list of routing number prefixes that belong to the operating network.

Keyword: **rtrv-homern**

Related Commands: **dlt-homern**, **ent-homern**

Command Class: Database Administration

Parameters

This command has no parameters.

Example

rtrv-homern

Dependencies

To enter the **rtrv-homern** command, the INP or G-Port feature must be turned on.

Notes

None

Output

```
rtrv-homern
rlghncxa03w 03-03-28 08:50:12 EST EAGLE 31.3.0
RN
-----
216780909087654
76345098
abc
abc1234
c10234567
cabade

HOMERN table is (6 of 100) 6% full
;
```

Legend

RN—Routing Number

rtrv-inpopts**Retrieve INP Options**

Use this command to retrieve INP-specific options.

Keyword: **rtrv-inpopts**

Related Commands: **chg-inpopts**

Command Class: Database Administration

Parameters

This command has no parameters.

Example

rtrv-inpopts

Dependencies

The INP feature must be turned on before this command can be entered.

Notes

If no DRANAI value or DRANAIV value has been provisioned, the command output displays the DRANAIV default value of 126.

If either the DRANAI value or DRANAIV value has been provisioned, the DRANAI mnemonic string for the provisioned value is displayed.

If no DRANP value or DRANPV value has been provisioned, the command output displays the DRANP default mnemonic value of E164.

If either the DRANP value or DRANPV value has been provisioned, the DRANP mnemonic string for the provisioned value is displayed.

The command output displays each CDPNPFX value with its associated DLTPFX setting.

The command output displays each CDPNNAI value with its associated SNAI value.

Output

The following example shows output with default INP options.

rtrv-inopts

```
rlghncxa03w 05-02-17 15:35:05 EST EAGLE 34.1.0
INP OPTIONS
```

```
-----
DRANAIV      = 126
DRANP        = E164
DRA          = RNDN
SPRESTYPE    = CONTINUE
```

```
CDPNPFX      DLTPFX
-----      ---
```

```
CDPNNAI      SNAI
---          ----
```

```
;
```

The following example shows output with some INP options provisioned.

rtrv-inopts

```
rlghncxa03w 05-02-17 15:35:05 EST EAGLE 34.1.0
INP OPTIONS
```

```
-----
DRANAIV      = 126
DRANP        = E164
DRA          = CCRNDN
SPRESTYPE    = CONTINUE
```

```
CDPNPFX      DLTPFX
-----      ---
```

```
CDPNNAI      SNAI
---          ----
127          unknown
```

```
;
```

The following example shows the provisioned DRANAI value of UNKNOWN.

rtrv-inopts

```
tekelecstp 05-02-16 09:41:29 EST EAGLE 34.1.0
INP OPTIONS
```

```
-----
DRANAI       = UNKNOWN
DRANP        = E164
DRA          = RNDN
SPRESTYPE    = CONTINUE
```

```
CDPNPFX      DLTPFX
-----      ---
```

```
CDPNNAI      SNAI
---          ----
```

```
;
```

Legend

DRANAI—The nature of address indicator for the destination routing address.

DRANPV—The numbering plan value for the destination routing address.

DRA—The destination routing address.

CDPNPFX—The Called Party Number Prefix.

DLTPFX—The Delete Prefix

CDPNNAI—The Called Party Number Nature of Address Indicator.

SNAI—The Service Nature of Address Indicator

SPRESTYPE—The INP option to send a "Connect" message or a "Continue" message when IDP messages are received for INP services, the DN digits match, and the HLR ID is present.

rtrv-ip-card

Retrieve Internet Protocol Card

Use this command to retrieve IP networking parameters for a given card.

Keyword: rtrv-ip-card

Related Commands: chg-ip-card

Command Class: Database Administration

Parameters

:loc= (optional)

Card location. The unique identifier of a specific application subsystem located in the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Example

```
rtrv-ip-card:loc=1211
```

```
rtrv-ip-card
```

Dependencies

The **loc** parameter value must correspond to a DCM card in the card table.

Notes

None

Output

```

rtrv-ip-card: loc=1211
  rlgncxa03w 04-02-17 15:35:05 EST EAGLE 31.3.0
  LOC 1211
    SRCHORDR  LOCAL
    DNSA      150.123.123.123
    DNSB      -----
    DEFROUTER -----
    DOMAIN    NC.TEKELEC.COM
;
rtrv-ip-card
  rlgncxa03w 04-02-17 15:35:05 EST EAGLE 31.3.0
  LOC 1211
    SRCHORDR  LOCAL
    DNSA      150.1.1.1
    DNSB      -----
    DEFROUTER -----
    DOMAIN    NC.TEKELEC.COM

  LOC 1213
    SRCHORDR  LOCAL
    DNSA      150.1.1.1
    DNSB      -----
    DEFROUTER 150.1.1.25
    DOMAIN    NC.TEKELEC.COM

  LOC 1301
    SRCHORDR  SRVRONLY
    DNSA      150.1.1.10
    DNSB      150.1.1.28
    DEFROUTER -----
    DOMAIN    NC.TEKELEC.COM
;

```

Legend

LOC—The card location.

SRCHORDR—The Host table search order. LOCAL indicates that the Local Host table is searched first. SRVR indicates that the Domain server is searched first. SRVRONLY indicates that only the Domain server is searched.

DNSA—The IP address of Domain Server A.

DNSB—The IP address of Domain Server B.

DEFROUTER—The IP address for the default router.

DOMAIN—The Domain name of the Domain server.

rtrv-ip-host**Retrieve Internet Protocol Hostname**

Use this command to retrieve the IP Host table. The Host table defines local host names for IP addresses.

Keyword: **rtrv-ip-host**

Related Commands: **dlt-ip-host**, **ent-ip-host**

Command Class: Database Administration

rtrv-ip-lnk**Retrieve Internet Protocol Link**

Use this command to retrieve the IP link table.

Keyword: **rtrv-ip-lnk**

Related Commands: **chg-ip-lnk**

Command Class: Database Administration

Parameters

:loc= (optional)

Card location. The unique identifier of a specific application subsystem located in the system.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

Default: All card location link data are displayed.

:port= (optional)

Ethernet interface port ID.

Range: **a, b**

Default: All IP link port data associated with all ports on the card are displayed.

Example

rtrv-ip-lnk:loc=1211:port=a

rtrv-ip-lnk:loc=1211

rtrv-ip-lnk

Dependencies

The **loc** parameter value must correspond to a DCM card in the card table.

Notes

None

Output**rtrv-ip-lnk**

```
rlghncxa03w 04-02-17 15:35:05 EST EAGLE 31.3.0
LOC  PORT  IPADDR          SUBMASK          DUPLEX  SPEED  MACTYPE  AUTO  MCAST
1211  A     150.123.123.123    255.255.255.0     HALF    10     DIX      NO   YES
1211  B     150.123.123.124    255.255.255.0     HALF    10     DIX      NO   NO
1213  A     150.123.123.125    255.255.255.0     ----    ---    DIX      YES  NO
1213  B     150.123.123.126    255.255.255.0     ----    ---    DIX      YES  NO
1215  A     150.123.123.127    255.255.255.0     FULL    100    DIX      NO   YES
1215  B     150.123.123.128    255.255.255.0     FULL    100    DIX      NO   NO
```

IP-Link table is (6 of 512) 1% full

;

rtrv-ip-lnk:loc=1211

```
rlghncxa03w 04-02-17 15:35:05 EST EAGLE 31.3.0
LOC  PORT  IPADDR          SUBMASK          DUPLEX  SPEED  MACTYPE  AUTO  MCAST
1211  A     150.123.123.123    255.255.255.0     HALF    10     DIX      NO   NO
1211  B     150.123.123.124    255.255.255.0     HALF    10     DIX      NO   NO
```

;

rtrv-ip-lnk:loc=1211:port=a

```
rlghncxa03w 04-02-17 15:35:05 EST EAGLE 31.3.0
LOC  PORT  IPADDR          SUBMASK          DUPLEX  SPEED  MACTYPE  AUTO  MCAST
1211  A     150.123.123.123    255.255.255.0     HALF    10     DIX      NO   NO
```

;

Legend

LOC—The card location.

PORT—The Ethernet interface port ID, **A** or **B**.

IPADDR—The IP address for the specified port.

SUBMASK—The subnet mask of the IP interface.

DUPLEX—The mode of operation of the interface, **HALF** or **FULL**.

SPEED—The bandwidth for the interface in megabits per second, **10** or **100**.

MACTYPE—The Media Access Control Type of the interface, **DIX** or **802.3**, where **DIX** indicates the Digital/Inter/Xerox *de facto* standard for ethernet and **802.3** indicates the IEEE standard number 802.3.

AUTO—Whether or not to automatically determine duplex and speed. If **YES**, duplex and speed are automatically determined. If **NO**, duplex and speed are not automatically determined.

MCAST—Multicast Control. Enables or disables multicast support for the interface. This parameter is necessary for INP, G-Port, and G-Flex to establish the connection from the DSM card to the MPS system.

rtrv-ip-node**Retrieve IP Node**

Use this command to display one or more nodes that are directly connected to a TCP/IP data link. A particular connection can be displayed, a particular application on a node can be displayed, or an entire node can be displayed. If an entire node is displayed, no parameters are required to perform this action. A particular application can be specified by giving either the application's name or its IP port on the node.

Keyword: rtrv-ip-node

Related Commands: dlt-ip-node, ent-ip-node

Command Class: Database Administration

Parameters

:ipaddr= (optional)

The remote host's IP address. This is a TCP/IP address expressed in standard dot notation. IP addresses consist of the system's network number and the machine's unique host number. An example IP address is **192.126.100.5**, where **192.126.100** is the network number and **5** is the machine's host number.

Range: 1-223, 0-255

4 numbers separated by dots

1-223—first number

0-255—the other three numbers

Default: Display all

:ipappl= (optional)

The IP application supported by the node.

Range: stplan

:ipport= (optional)

The logical IP port that addresses the application on the node.

Range: 1024-5000

Default: Display all

:iprte= (optional)

The default router's IP address. This is a TCP/IP address expressed in standard dot notation. IP addresses consist of the system's network number and the machine's unique host number. An example IP address is **192.126.100.5**, where **192.126.100** is the network number and **5** is the machine's host number.

Range: 1-223, 0-255

4 numbers separated by dots

1-223—first number

0-255—the other three numbers

Default: Display all

:loc= (optional)

The card location as stenciled on the shelf of the system that contains the TCP/IP link that will be directly connected to the node.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Default: Display all

Example

rtrv-ip-node

rtrv-ip-node:ipappl=stplan

rtrv-ip-node:ipaddr=193.4.201.50

rtrv-ip-node:ipaddr=193.4.201.50:ipport=1024

```
rtrv-ip-node:loc=1201  
rtrv-ip-node:ipaddr=193.4.201.50:ipport=1022  
rtrv-ip-node:ipaddr=193.4.111.55
```

Dependencies

If the **ipappl**, **ipport**, or **loc** parameter is specified, the others cannot be specified.

The **ipport** parameter can be specified only if the **ipaddr** parameter is specified.

The ACM is the only valid card type for this command.

The shelf and card must be equipped.

If the **loc** parameter is specified, the card location must be equipped with a TCP/IP data link.

If the **ipaddr** parameter is specified, that IP address must be in the TCP/IP data link table.

If the **ipappl** parameter is specified, that IP application must be in the TCP/IP data link table.

If the **iprte** parameter is not specified, then all TCP/IP nodes meeting the display criteria are displayed. If the TCP/IP node has no TCP/IP router assigned to it, dashes are displayed in the IPRTE field.

Notes

None

Output

rtrv-ip-node

```
rlghncxa03w 04-02-04 21:16:43 EST EAGLE 31.3.0
IPADDR      IPPORT  IPAPPL  LOC   CAP  IPRTE
193.4.201.50 1024    stplan 1201  10%  --
193.4.201.50 1024    stplan 1202  10%  --
193.4.201.50 1024    stplan 1203  20%  --
193.4.202.30 2000    stplan 1204  40%  193.4.201.1
194.5.198.74 3000    stplan 1205  40%  193.4.201.1
197.4.217.39 4000    stplan 1206  40%  197.4.216.1
```

;

rtrv-ip-node:ipappl=stplan

```
rlghncxa03w 04-02-04 21:16:43 EST EAGLE 31.3.0
IPADDR      IPPORT  IPAPPL  LOC   CAP  IPRTE
193.4.201.50 1024    stplan 1201  10%  --
193.4.201.50 1024    stplan 1202  10%  --
193.4.201.50 1024    stplan 1203  20%  --
193.4.202.30 2000    stplan 1204  40%  193.4.201.1
194.5.198.74 3000    stplan 1205  40%  193.4.201.1
197.4.217.39 4000    stplan 1206  40%  197.4.216.1
```

;

rtrv-ip-node:ipaddr=193.4.201.50

```
rlghncxa03w 04-02-04 21:16:43 EST EAGLE 31.3.0
IPADDR      IPPORT  IPAPPL  LOC   CAP  IPRTE
193.4.201.50 1024    stplan 1201  10%  --
193.4.201.50 1024    stplan 1202  10%  --
193.4.201.50 1024    stplan 1203  20%  --
```

;

rtrv-ip-node:ipaddr=193.4.201.50:ipport=1024

```
rlghncxa03w 04-02-04 21:16:43 EST EAGLE 31.3.0
IPADDR      IPPORT  IPAPPL  LOC   CAP  IPRTE
193.4.201.50 1024    stplan 1201  10%  --
193.4.201.50 1024    stplan 1202  10%  --
193.4.201.50 1024    stplan 1203  20%  --
```

;

rtrv-ip-node:loc=1201

```
rlghncxa03w 04-02-04 21:16:43 EST EAGLE 31.3.0
IPADDR      IPPORT  IPAPPL  LOC   CAP  IPRTE
193.4.201.50 1024    stplan 1201  10%  --
```

;

rtrv-ip-node:ipaddr=193.4.201.50:ipport=1022

```
rlghncxa03w 04-02-04 21:16:43 EST EAGLE 31.3.0
IPADDR      IPPORT  IPAPPL  LOC   CAP  IPRTE
IPPORT on Node not connected to any TCP/IP link.
```

;

rtrv-ip-node:ipaddr=193.4.111.55

```
rlghncxa03w 04-02-04 21:16:43 EST EAGLE 31.3.0
IPADDR      IPPORT  IPAPPL  LOC   CAP  IPRTE
IPADDR not connected to any TCP/IP Link.
```

;

Legend**IPADDR**—The remote host's IP address.**IPPORT**—The logical IP port to address the application on the node.**IPAPPL**—The IP application supported by the node.

LOC—The card location as stenciled on the shelf of the system that contains the TCP/IP link that will be directly connected to the node.

CAP—The maximum percentage of ethernet capacity for this node connection.

IPRTE—The default router's IP address.

rtrv-ip-rte

Retrieve IP Route

Use this command to display all static IP route entries in the Static IP Route table, or the entries for a specific card (destination IP addresses, subnet masks, and gateway IP addresses), or the entries for a specific destination IP address, or the entries for a specific gateway IP address.

Keyword: **rtrv-ip-rte**

Related Commands: **, ent-ip-rte**

Command Class: Database Administration

Parameters

:dest= (optional)

Destination IP Address. The IP Address of a remote destination host or network.

Range: 4 numbers separated by dots, with each number in the range of **0–255**.

The IP address **0.0.0.0** is not valid.

:gtwy= (optional)

Gateway IP Address. The IP address assigned to the gateway router that will properly forward IP datagrams with the destination IP address (dest) to the next-hop gateway router or final destination host.

Range: 4 numbers separated by dots, with each number in the range of **0–255**.

The IP address **0.0.0.0** is not valid.

:loc= (optional)

Card location. The unique identifier of a specific IP card in the system.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

Example

```
rtrv-ip-rte
```

```
rtrv-ip-rte:loc=1301
```

```
rtrv-ip-rte:dest=128.252.10.5
```

```
rtrv-ip-rte:gtwy=140.190.15.3
```

Dependencies

Only one optional parameter can be specified in a single command.

The **loc** parameter value must correspond to a DCM card or SSED CM card in the card table that is running the **ss7ipgw**, **ipgwi**, **iplim**, or **iplimi** application. The B network is used only on SSED CM cards.

The specified destination IP address (**dest** parameter):

- Must not be the default route (**0.0.0.0**)

- Must not correspond to any loopback address (i.e. 127.X.X.X)

The specified gateway IP address (**gtwy** parameter):

- Must not be the default route (**0.0.0.0**)
- Must not correspond to any loopback address (i.e. 127.X.X.X)

Notes

None

Output

rtrv-ip-rte

```
rlghncxa03w 04-01-07 09:50:17 EST EAGLE 34.0.0
LOC  DEST          SUBMASK          GTWY
1301 128.252.10.5    255.255.255.255 140.188.13.33
1301 128.252.0.0       255.255.0.0     140.188.13.34
1301 150.10.1.1        255.255.255.255 140.190.15.3
1303 192.168.10.1     255.255.255.255 150.190.15.23
1303 192.168.0.0       255.255.0.0     150.190.15.24
```

IP Route table is (5 of 1024) 1% full

;

rtrv-ip-rte:loc=1301

```
rlghncxa03w 04-01-07 09:50:17 EST EAGLE 34.0.0
LOC  DEST          SUBMASK          GTWY
1301 128.252.10.5    255.255.255.255 140.188.13.33
1301 128.252.0.0     255.255.0.0     140.188.13.34
1301 150.10.1.1      255.255.255.255 140.190.15.3
```

IP Route table is (5 of 1024) 1% full

;

rtrv-ip-rte:dest=128.252.10.5

```
rlghncxa03w 04-01-07 09:50:17 EST EAGLE 24.0.0
LOC  DEST          SUBMASK          GTWY
1301 128.252.10.5    255.255.255.255 140.188.13.33
```

IP Route table is (5 of 1024) 1% full

;

rtrv-ip-rte:gtwy=140.190.15.3

```
rlghncxa03w 04-01-07 09:50:17 EST EAGLE 34.0.0
LOC  DEST          SUBMASK          GTWY
1301 150.10.1.1      255.255.255.255 140.190.15.3
```

IP Route table is (5 of 1024) 1% full

;

rtrv-isupvar-attrb

Retrieve ISUP Variant Attribute

Use this command to retrieve the attributes of ISUP variant table entries.

Keyword: rtrv-isupvar-attrb

Related Commands: chg-isupvar-attrb, copy-isupvar-attrb, rtrv-pstn-pres

Command Class: Database Administration

Parameters

:display= (optional)

Display indicates which information in the variant entry will be displayed.

Range: **brief, full**

Default: **brief**

:msgcode= (optional)

The ISUP message type code entered to identify a specific ISUP message that is going to have its attributes changed.

Range: **0-255**

The value can be specified in decimal (**0-255**) or hexadecimal (**h'00-h'ff**).

:parmcode= (optional)

The ISUP parameter code entered to identify a specific ISUP parameter that is going to have its attributes changed.

Range: **0-255**

The value can be specified in decimal (**0-255**) or hexadecimal (**h'00-h'ff**).

:pstncat= (optional)

The PSTN category assigned to the variant entry being retrieved.

Range: **0-65535**

:pstnid= (optional)

The PSTN ID identifying the sourcevariant table entry being copied.

Range: **0-65535**

Example

```
rtrv-isupvar-attrib:pstncat=65535:pstnid=65535:msgcode=4
```

```
rtrv-isupvar-attrib:pstncat=1:pstnid=5:parmcode=h'20
```

Dependencies

The **pstncat=1** and **pstnid=2** parameter combination is invalid.

Required controlled features must be enabled.

- ISUP Normalization controlled feature
- ON/OFF controlled feature for Tekelec-defined Variant

The Tekelec-defined Variants are listed in "Tekelec-defined ISUP Normalization Variants".

- Quantity controlled feature for user-defined Variant

The **pstncat** and **pstnid** values must have been previously defined with **ent-pstn-pres**.

The **dpstncat** and **dpstnid** values must have been previously defined with **ent-pstn-pres**.

Notes

The **copy-isupvar-attrib** command provides the user with an easy way to provision a new ISUP variant table entry by copying all the data from another entry. Then the user changes the entry with the **chg-isupvar-attrib** command.

An ISUP variant table entry exists for each variant defined in the SG. Each entry contains ISUP message and parameter data specific to the ISUP protocol that variant uses. A variant is uniquely defined by its PSTN presentation value, consisting of a PSTN category and a PSTN ID.

The PSTN presentation is used to identify both the source and destination table entries. Both entries **must** be previously defined PSTN presentation values, such as either a Tekelec-defined PSTN or a user-defined PSTN by the **ent-pstn-pres** commands. Use the **rtrv-pstn-pres** command to display the **only** allowed values for the source and destination PSTNs.

If the source or destination variant is a Tekelec-defined PSTN value, then its associated ON/OFF control feature must be ENABLED.

The following is an example of a possible output displaying all supported parameters for a specified message in a variant.

```
PSTNCAT PSTNID MSGCODE ATTRIB ACTION 00001 00005 04h DEFINED CONVERT
MSGCODE PARMCODE TYPE ORDER ACTION 04h --- --- - CONVERT 10h MF 1 NONE 08h
MF 2 NONE 09h MV 1 CONVERT FEh MV 2 NONE 00h OPT - NONE 01h OPT - NONE 04h
OPT - NONE 0Fh OPT - PASSTHRU
```

Output

The following example displays one message in the specified variant.

rtrv-isupvar-attrib:pstncat=65535:pstnid=65535:msgcode=4

```
PSTNCAT PSTNID MSGCODE ATTRIB ACTION
65535 65535 04h DEFINED PASSTHRU
```

ISUP variant table is (5 of 20) 25% full

;

Legend

PSTNCAT—The PSTN category identifying the source variant table entry being copied.

PSTNID—The PSTN ID identifying the source variant table entry being copied.

DPSTNCAT —The PSTN category identifying the destination variant table entry where the source variant table is being copied.

DPSTNID—The PSTN ID identifying the destination variant table entry where the source variant table is being copied.

rtrv-l2t

Retrieve Level 2 Timers

Use this command to display the values of the SS7 MTP Level 2 timers. The SS7 MTP level 2 timers are organized in 30 timer sets of 8 timer values each. The 30 timer sets have been grouped and system default values have been initialized by specification (ANSI, ITU, High Speed for China, and High Speed for Q.703 Annex A). Each timer set is administered individually by the **chg-l2t** command. The **ent-slk** command associates links with timer sets. Each assigned link is associated with one of the 30 timer sets.

Keyword: **rtrv-l2t**

Related Commands: , **rtrv-slk**

Command Class: Database Administration

Parameters

:l2set= (optional)

Level 2 timer set identifier, or timer set number. Up to 30 different sets of SS7 MTP Level 2 timer sets can be defined. The **ent-slk** command can be used to assign an SS7 signaling link to any one of the 30 timer sets.

Range: **1-30**

Default: Display all timer sets.

Example

```
rtrv-l2t
```

```
rtrv-l2t:l2tset=3
```

Dependencies

None

Notes

The timer values are shown in the output for this command in seconds, even though they were specified in milliseconds in the **chg-l2t** command.

Output

rtrv-l2t

rlghncxa03w 05-02-07 09:50:17 EST EAGLE5 34.0.0

L2T TIMERS (IN SECONDS)

L2TSET	T1	T2	T3	T4NPP	T4EPP	T5	T6	T7
1	13.0	11.5	11.5	2.3	0.60	0.10	4.0	1.5
2	13.0	11.5	11.5	2.3	0.60	0.10	4.0	1.5
3	13.0	11.5	11.5	2.3	0.60	0.10	4.0	1.5
4	13.0	11.5	11.5	2.3	0.60	0.10	4.0	1.5
5	13.0	11.5	11.5	2.3	0.60	0.10	4.0	1.5
6	13.0	11.5	11.5	2.3	0.60	0.10	4.0	1.5
7	13.0	11.5	11.5	2.3	0.60	0.10	4.0	1.5
8	13.0	11.5	11.5	2.3	0.60	0.10	4.0	1.5
9	13.0	11.5	11.5	2.3	0.60	0.10	4.0	1.5
10	13.0	11.5	11.5	2.3	0.60	0.10	4.0	1.5
11	40.0	30.0	2.0	8.2	0.50	0.10	4.0	1.5
12	40.0	30.0	2.0	8.2	0.50	0.10	4.0	1.5
13	40.0	30.0	2.0	8.2	0.50	0.10	4.0	1.5
14	40.0	30.0	2.0	8.2	0.50	0.10	4.0	1.5
15	40.0	30.0	2.0	8.2	0.50	0.10	4.0	1.5
16	40.0	30.0	2.0	8.2	0.50	0.10	4.0	1.5
17	40.0	30.0	2.0	8.2	0.50	0.10	4.0	1.5
18	40.0	30.0	2.0	8.2	0.50	0.10	4.0	1.5
19	40.0	30.0	2.0	8.2	0.50	0.10	4.0	1.5
20	40.0	30.0	2.0	8.2	0.50	0.10	4.0	1.5
21	150.0	130.0	1.0	30.0	0.50	0.10	5.0	0.8
22	150.0	130.0	1.0	30.0	0.50	0.10	5.0	0.8
23	150.0	130.0	1.0	30.0	0.50	0.10	5.0	0.8
24	150.0	130.0	1.0	30.0	0.50	0.10	5.0	0.8
25	150.0	130.0	1.0	30.0	0.50	0.10	5.0	0.8
26	300.0	130.0	1.0	30.0	0.50	0.10	5.0	0.8
27	300.0	130.0	1.0	30.0	0.50	0.10	5.0	0.8
28	300.0	130.0	1.0	30.0	0.50	0.10	5.0	0.8
29	300.0	130.0	1.0	30.0	0.50	0.10	5.0	0.8
30	300.0	130.0	1.0	30.0	0.50	0.10	5.0	0.8

;

If the **l2tset** parameter is specified (for example, **rtrv-l2t:l2tset=1**), the timer values for the specified timer set are shown.

rtrv-l2t:l2tset=1

rlghncxa03w 04-01-07 09:50:17 EST EAGLE 31.3.0

L2T TIMERS (IN SECONDS)

L2TSET	T1	T2	T3	T4NPP	T4EPP	T5	T6	T7
1	13.0	11.5	11.5	3.3	1.0	0.5	10.0	1.5

;

Legend**L2TSET**—The SS7 MTP Level 2 timer set identifier or number**T1**—Aligned ready**T2**—Not aligned**T3**—Aligned**T4NPP**—Proving period normal**T4EPP**—Proving period Emergency**T5**—Sending SIB**T6**—Remote congestion**T7**—Excessive delay of acknowledgment

rtrv-l3t**Retrieve Level 3 Timers**

Use this command to show values of the SS7 level 3 timers. The timers are grouped into sets that are assigned to linksets.

Keyword: **rtrv-l3t**

Related Commands: **chg-l2t**, **chg-l3t**, **ent-ls**, **rtrv-l2t**, **rtrv-ls**

Command Class: Database Administration

Parameters

:l3set= (optional)

Level 3 timer set table. Only one level 3 timer set table can be defined. The timer set can then be assigned to a linkset using the **ent-ls** or **chg-l3t** command.

Range: **1**

Default: Display table

Example

```
rtrv-l3t:l3tset=1
```

Dependencies

Only one timer set is supported in this release.

Notes

The timer output for this command is in seconds, even though it could have been entered in milliseconds on the **chg-l3t** command.

Output

rtrv-l3t:l3tset=1

rlghncxa03w 04-02-17 16:03:12 EST EAGLE 31.3.0

LEVEL 3 TIMERS (IN SECONDS)

L3TSET	T1	T2	T3	T4	T5	T6	T7
1	0.8	1.4	0.8	0.8	0.8	0.8	1.0
	T8	T9	T10	T11	T12	T13	T14
	0.8	--	30.0	30.0	0.8	0.8	2.0
	T15	T16	T17	T18	IT18	T19	IT19
	3.0	1.4	0.8	10.0	19.0	480.0	67.0
	T20/IT22	IT20	T21/IT23	IT21	T22	T23	T24
	90.0	59.0	90.0	63.0	10.0	10.0	10.0
	T25	T26	T27	T28	T29	T30	T31
	30.0	12.0	--	3.0	60.0	30.0	60.0
	T32						
	60.0						

;

Legend**L3TSET**—The level 3 timer set table.**T1**—The delay, in seconds, to avoid message missequencing on changeover. Also used as the ITU MTP restart isolation timer.**T2**—The amount of time, in seconds, to wait for changeover acknowledgment.**T3**—Time controlled diversion – the delay, in seconds, to avoid missequencing on changeback.**T4**—The amount of time, in seconds, to wait for changeback acknowledgment, first attempt.**T5**—The amount of time, in seconds, to wait for changeback acknowledgment, second attempt.**T6**—The delay, in seconds, to avoid message missequencing on controlled rerouting.**T7**—The amount of time, in seconds, to wait for signaling data link connection acknowledgment.**T8**—The transfer-prohibited inhibited timer (transient solution).**T10**—The amount of time, in seconds, to wait before repeating the signaling-route-set-test message.**T11**—The transfer-restricted timer.**T12**—The amount of time, in seconds, to wait for uninhibit acknowledgment.**T13**—The amount of time, in seconds, to wait for force uninhibit.**T14**—The amount of time, in seconds, to wait for inhibition acknowledgment.**T15**—The amount of time, in seconds, to wait before repeating the signaling-route-set-congestion test.**T16**—The amount of time, in seconds, to wait for route-set-congestion status update.**T17**—The delay, in seconds, to avoid oscillation of initial alignment failure and link restart.**T18**—The repeat TFR once by response method timers.**IT18**—The timer within an STP whose MTP restarts to supervise the receipt of routing information and the activation of the link and link set. The amount of time, in seconds, to wait for links to align and to receive TRAs from all adjacent nodes.**T19**—The failed link craft referral timer.

IT19—The amount of time, in seconds, for the supervision timer to wait during MTP restart to avoid ping-pong of TFP, TFR1, and TRA messages.

T20/IT22—The amount of time, in seconds, to wait before repeating the local inhibit test.

IT20—The amount of time, in seconds, to wait overall for the MTP restart at the signaling point whose MTP restarts.

T21/IT23—The amount of time, in seconds, to wait before repeating the remote inhibit test.

IT21—The overall MTP restart timer at a signaling point adjacent to one whose MTP restarts.

T22—The timer at the restarting STP. The amount of time, in seconds, to wait for signaling links to become available.

T23—The timer at the restarting STP. Starting after T22, the amount of time, in seconds, to wait to receive all TRA messages.

T24—The timer at the restarting STP with transfer function. Starting after T23, the amount of time, in seconds, to wait to broadcast all TRA messages.

T25—The timer at the adjacent and restarting STPs. The amount of time, in seconds, to wait for a TRA message (may be started at level 2).

T26—The timer at the restarting STP. The amount of time, in seconds, to wait to repeat a TRW message.

T28—The timer at the STP adjacent to the restarting STP. The amount of time, in seconds, to wait for a TRW message.

T29—The timer started when a TRA message is sent in response to an unexpected TRA or TRW. Also, the timer started when traffic is resumed without receipt of a TRA message.

T30—The timer used to limit the sending of TFPs/TFRs in response to an unexpected TRA or TRW message.

T31—The false link congestion detection timer.

T32—The link oscillation timer—Procedure A.

rtrv-lbp

Retrieve Loopback Point Attributes

Use this command to retrieve the current value of a far-end loopback point maintained in the link fault sectionalization table.

Keyword: rtrv-lbp

Related Commands: act-lbp, chg-lbp, dact-lbp, dlt-lbp, ent-lbp

Command Class: Database Administration

Parameters

:lbp= (optional)

Loopback point ID. This parameter identifies a far-end loopback point that lies along an SS7 signaling link path between the STP and the target device (up to and including the target device).

Range: 1-32

Default: Display all

:link= (optional)

SS7 signaling link. The SS7 signaling link that is to be tested.

Synonym: port

Range: a, b, a1-a31, b1-b31

Not all card types support all **link** parameter values.

See Table A-1 for valid **link** parameter range values for each type of card that can have assigned signaling links.

Default: Display all

:loc= (optional)

Card location. The unique identifier of a specific application subsystem located in the STP.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Default: All card locations.

Example

```
rtrv-lbp
```

```
rtrv-lbp:loc=1202
```

```
rtrv-lbp:loc=1202:link=a
```

```
rtrv-lbp:loc=1202:link=a:lbp=3
```

Dependencies

The Link Fault Sectionalization (LFS) feature must be on before this command can be entered.

The card location specified in the **loc** parameter cannot be reserved by the system.

If the **link** parameter is specified, the **loc** parameter must be specified. If the **lbp** parameter is specified, both the **loc** parameter and the **link** parameter must be specified.

The card location (**loc** parameter) must identify a provisioned **limds0**, **limt1**, or **limch** (associated to a **limt1**) card configured with either an **ss7ansi** or **ccs7itu** application.

The card location specified in the **loc** parameter must be equipped.

Notes

This command can be canceled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

Output

The following example displays the attributes for all the loopback points for SS7 links assigned to the STP:

rtrv-lbp

```

rlghncxa03w 04-02-17 16:02:05 EST EAGLE 31.3.0
LOC  PORTLINK  LBP  RLE  REP  CLLI  LFST
1101  A      1   DS0  0  -----  LLT
      7   OCU  0  -----  NLT
      9   NEI  0  -----  LLT

1102  A      2   DS0  0  -----  LLT
      3   DS0  4  -----  LLT
      4   NEI  0  -----  LLT

1102  B      1   DS0  0  -----  LLT
      6   NEI  0  -----  LLT

1215  A      1   DS0  0  -----  LLT
      3   DS0  4  -----  LLT
      5   DS0  5  -----  LLT
      7   DS0  8  -----  LLT
      9   NEI  0  -----  LLT
;

```

The following example displays the attributes for all the loopback points for the SS7 links A and B of the LIM card residing in the first frame, first shelf, and second slot of the STP:

rtrv-lbp:loc=1202

```

rlghncxa03w 04-02-17 16:02:05 EST EAGLE 31.3.0
LOC  LINK  LBP  RLE  REP  CLLI  LFST
1102  A      2   DS0  0  -----  LLT
      3   DS0  4  -----  LLT
      4   NEI  0  -----  LLT

1102  B      1   DS0  0  -----  LLT
      6   NEI  0  -----  LLT
;

```

The following example displays the attributes for all the loopback points for the SS7 link A of the LIM card residing in the first frame, first shelf, and second slot of the STP:

rtrv-lbp:loc=1202:link=a

```

rlghncxa03w 04-02-17 16:02:05 EST EAGLE 31.3.0
LOC  LINK  LBP  RLE  REP  CLLI  LFST
1102  A      2   DS0  0  -----  LLT
      3   DS0  4  -----  LLT
      4   NEI  0  -----  LLT
;

```

The following example displays the attributes for loopback point 3 for the SS7 link A of the LIM card residing in the first frame, first shelf, and second slot of the STP:

rtrv-lbp:loc=1202:link=a:lbp=3

```

rlghncxa03w 04-02-17 16:02:05 EST EAGLE 31.3.0
LOC  LINK  LBP  RLE  REP  CLLI  LFST
1102  A      3   DS0  4  -----  LLT
;

```

The following example displays the attributes for all the loopback points for the SS7 link A of the LIM card residing in the first frame, first shelf, and second slot of the STP. However, no loopback points have been provisioned.


```

rtrv-lbp:loc=1202:link=a
      rlgncxa03w 04-02-17 16:02:05 EST  EAGLE 31.3.0
      LOC  LINK  LBP  RLE  REP  CLLI                                LFST

      No loopback points meeting the requested criteria were found
;

```

rtrv-lnp-dbts

Retrieve LNP Database Time Stamp

Use this command to retrieve the LNP database time stamp corresponding to the latest LNP Database update applied by the LSMS.

NOTE: This command is obsolete.

Keyword: rtrv-lnp-dbts

Related Commands:

Command Class: LNP Database

Parameters

This command has no parameters.

Example

```
rtrv-lnp-dbts
```

Dependencies

The LNP feature must be turned on prior to using this command (see the **enable-ctrl-feat** and **chg-ctrl-feat** commands).

Notes

The timestamp that this command displays is updated during the importation of an LNP database created by the LSMS (using the command and parameter **chg-db:action=import**). It is also updated whenever the database is modified as a result of an **upd-lnp-10dt** command received from the LSMS. Note that not all LNP DB update commands received from the LSMS cause the timestamp to be updated (only **upd-lnp-10dt**). LNP database updates caused by commands issued from EAGLE 5 ISS terminals do not cause the timestamp to be updated.

ACTV (active) or STDBY (standby) is displayed for the 1114/1116 disks to indicate the role of the associated MASP. If the disk is not accessible, then NOACCS is displayed.

The timestamp that is displayed is the verbatim timestamp as provided by the LSMS. This timestamp is normally a 14-character date/time in the format: `yyyymmddhhmmss`. The timestamp is displayed exactly as received by the LSMS without additional reformatting.

Output**rtrv-lnp-dbts**

	TDM 1114 (ACTV) TIME LAST UPDATE	TDM 1116 (STDBY) TIME LAST UPDATE
FD BKUP	19971218114204	19971218114204
FD CRNT	19971218114204	19971218114204
MDAL 1117		
RD BKUP	19971218104204	

;

(with the standby MASP and removable cartridge not available)

rtrv-lnp-dbts

	TDM 1114 (ACTV) TIME LAST UPDATE	TDM 1116 (NOACCS) TIME LAST UPDATE
FD BKUP	19971218114204	-
FD CRNT	19971218114204	-
MDAL 1117		
RD BKUP	-	

;

Legend**(ACTV)**—The specified MASP is the active processor.**(STDBY)**—The specified MASP is the standby processor.**(NOACCS)**—The specified processor is not accessible.**RD BKUP**—Removable cartridge backup partition.**FD BKUP**—Fixed disk backup partition.**FD CRNT**—Fixed disk current partition.**TIME LAST UPDATE**—The date and time the last change was performed on the specified card and its associated database.

—The database is not available.

rtrv-lnp-dpcer**Retrieve LNP DPC Exception Report**

Use this command to generate a report of LNP subscriptions in the database that have not been assigned to a route. If **tn** is specified, the generated report shows telephone number (TN) subscriptions accepted from the Local Service Management System (LSMS) which contain a translation type (TT) for which no destination point code (DPC) exists in the LNP database. If **tn** is not specified, the report shows a list of TT-DPCs that have not been assigned a route.

NOTE: This command is obsolete.**NOTE: If the LNP ELAP Configuration feature is turned on, this command is no longer available.****Keyword:** rtrv-lnp-dpcer**Related Commands:** canc-lnp-dpcer**Command Class:** LNP Basic

Parameters

NOTE: This command does not support 24-bit ITU national point codes.

:dpc= (optional)

The ANSI destination point code, in the form of *network indicator-network cluster-network cluster member (ni-nc-ncm)*, associated with a **tn** that does not have a route assigned to it.

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001–005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006–255.

The point code 000-000-000 is not a valid point code.

Default: Information is displayed for all DPCs associated with the specified parameters.

:etn= (optional)

The end number of the range of telephone numbers on which to base the report.

Range: 10 digits

To specify a single TN subscription—10 digits

To pool a block of 1000 TNs— 7 digits with 3 asterisks (***) appended

:force= (optional)

Allows for the report to be displayed when **num** is specified as greater than 50, or when the range of numbers specified with **tn** and **etn** results in output of over 50 entries.

Range: yes, no

Default: no

:num= (optional)

The maximum number of database entries to display.

Range: 1-12000000

Default: 50

:tn= (optional)

The telephone number, or start number of the range of telephone numbers, on which to base the report.

Range: 10 digits

To specify a single TN subscription—10 digits

To pool a block of 1000 TNs— 7 digits with 3 asterisks (***) appended

:tt= (optional)

The translation type on which to base the report.

Range: 0-255

Default: Information is displayed for all translation types associated with the specified parameters.

Example

```
rtrv-lnp-dpcer
```

```
rtrv-lnp-dpcer:tn=9191234567:tt=16:dpc=100-100-100
```

```
rtrv-lnp-dpcer:tn=1111111000:etn=1999999999:num=250:force=yes
```

```
rtrv-lnp-dpcer:tn-9194605***
```

Dependencies

The LNP feature must be turned on prior to using this command (see the **enable-ctrl-feat** and **chg-ctrl-feat** commands).

If **tn** is specified, the generated report shows TN subscriptions accepted from the LSMS which contain a TT for which no DPC exists in the LNP database. If **tn** is not specified, the report shows a list of TT-DPCs that have not been assigned a route.

If translation type (**tt**) is specified along with **tn**, the TT value must not be associated with an AIN or IN query service.

If **tt** is specified, the TT value must not be a WNP or LNPQS query service, or an LNP alias.

If the **tt** and **dpc** parameters are both specified, output is reported only if both criteria are matched.

If a single subscription contains multiple TTs with a missing DPC, multiple entries are displayed in the report.

Notes

Specifying a **tn** of **tn/etn** range is not recommended when using the **rtrv-lnp-dpcer** command. When a **tn** or **tn/etn** range is not specified, a report is generated based on translation types. The execution time of a translation type based report is much shorter, and the data is more useful for identifying DPCs in the LNP entries that do not have routes assigned.

Because the processing time for this report can be extremely long, the **canc-lnp-dpcer** command can be entered to cancel the report.

The REFCNT field in the output indicates the number of DPCs being referenced or used in the database.

By specifying a **tn/etn** range, it is possible for the Numbering Plan Area (NPANXX) ranges to cross boundaries (for example, 9195551111–9605551111).

Output

The following example shows a specific telephone number with a specific translation type whose destination point code is not assigned to a route.

rtrv-lnp-dpcer:tn=9191234567:tt=16:dpc=100-100-100

```
rlghncxa03w 04-02-14:23:37 EST EAGLE 31.3.0
TN          TT    DPC
9191234567  16    100-100-100
```

;

The following example shows the first 250 telephone numbers found in the specified range that have translation types whose destination point codes are not assigned to a route.

rtrv-lnp-dpcer:tn=1111111000:etn=1999999999:num=250:force=yes

```
rlghncxa03w 04-02-14:23:37 EST EAGLE 31.3.0
TN          TT    DPC
1111111110  10    100-100-100
                25    100-130-105
1111111111  35    200-123-434
1111111***  10    100-100-100
                35    200-123-434
1111111200  13    001-001-002
. . .
1234567890  45    003-002-001
```

Report terminated - output length limitation (NUM=250) reached.

;

The following example shows the first 20 entries of a specified translation type whose destination point code is not assigned to a route.

rtrv-lnp-dpcer:tt=15:num=20

```
rlghncxa03w 04-02-14:23:37 EST EAGLE 31.3.0
TT    DPC          REFCNT
15    001-001-001  4294
15    100-100-100  100
```

```
. . .
15    002-002-002  99
```

Report terminated - output length limitation (NUM=20) reached.

;

The following example shows the first 100 translation types containing a specific destination point code that is not assigned to a route. The report was then canceled with the **canc-lnp-dpcer** command.

rtrv-lnp-dpcer:dpc=012-012-012

```
rlghncxa03w 04-02-14:23:37 EST EAGLE 31.3.0
TT    DPC          REFCNT
15    012-012-012  299
20    012-012-012  10004
35    012-012-012   3
```

```
. . .
255   012-012-012  520597
```

Report terminated by the CANCEL-LNP-DPCER command.

;

The following example shows the command output when the search criteria were not found.

rtrv-lnp-dpcer:tn=143-34-87:tt=30:dpc=255-255-255

```
rlghncxa03w 04-02-14:23:37 EST EAGLE 31.3.0
TN          TT    DPC
No entry exists matching the requested criteria
```

;

The following example shows the output when the command is specified with no parameters and all the destination point codes are assigned to routes.

rtrv-lnp-dpcer

```
rlghncxa03w 04-02-14:23:37 EST EAGLE 31.3.0
TT DPC REF CNT
```

No entries found

;

rtrv-lnp-lrn

Retrieve LNP Location Routing Number

Use this command to display all LRNs and their associated final overriding message relay global title translations from the database.

NOTE: This command is obsolete.

NOTE: If the LNP ELAP Configuration feature is turned on, this command is no longer available, and all LNP provisioning is performed at the LSMS or using the ELAP user interface.

Keyword: rtrv-lnp-lrn

Related Commands: chg-lnp-lrn, dlt-lnp-lrn, ent-lnp-lrn

Command Class: LNP Basic

Parameters

:elrn= (optional)

End range location routing number.

Range: 10 digits

Default: Same value as the **lrn** parameter

:force= (optional)

This parameter is used to display more than 50 entries in the report.

Range: yes, no

Default: no

:lrn= (optional)

Location routing number.

Range: 10 digits

:num= (optional)

Number of entries to be displayed. This parameter specifies how many records you want to display (potentially within a given range). Use this parameter to prevent inadvertent displays of extremely large amounts of information.

Range: 1-100, 000

Default: 1, 50

1—If the **lrn** parameter is specified and the **elrn** parameter is not specified.

50—In all other cases.

:sp= (optional)

Service provider. Use this parameter to limit the displays to LRN records found matching the specified value.

Range: xyyy

Four alphanumeric characters.

Default: Display all LRNs in the database.

Example

```
rtrv-lnp-lrn:num=30
rtrv-lnp-lrn:lrn=9093350000
rtrv-lnp-lrn:lrn=9093350000:elrn=9093359999:num=80:force=yes
rtrv-lnp-
lrn:lrn=1234567890:elrn=1234569999:num=80:force=yes:sp=1234
```

Dependencies

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before this command can be entered.

The **num** parameter value defaults to **50** if not specified.

If the specified **num** parameter value is greater than 50, the **force=yes** parameter must be specified.

If the **elrn** parameter is specified, the **lrn** parameter value must be specified.

The **elrn** parameter value must be greater than the **lrn** parameter value.

Notes

None

Output

The following example shows how to display the first 30 LRNs in the database:

rtrv-lnp-lrn:num=30

```
rlghncxa03w 04-02-28 14:23:37 EST EAGLE 31.3.0
LRN      SP      TT      XLAT      RI      PCA      SSN
9093350000 a909  16      DPCSSN    SSN      001-001-001 20
          18      DPCSSN    SSN      002-002-002 30
          19      DPCSSN    SSN      002-002-004 20

9093350099 b123  --      -----  ---      -----  --
9193370000 a123  --      -----  ---      -----  --
```

LRN table is 1% full

;

The following example shows how to display a specific LRN:

rtrv-lnp-lrn:lrn=9093350000

```
rlghncxa03w 04-02-28 14:23:37 EST EAGLE 31.3.0
LRN      SP      TT      XLAT      RI      PCA      SSN
9093350000 a123  16      DPCSSN    SSN      001-001-001 20
          18      DPCSSN    SSN      002-002-002 30
          19      DPCSSN    SSN      002-002-004 20
```

```
9093350099 a243  --      -----  ---      -----  --
```

LRN table is 58% full

;

The following example shows how to display the first 80 records in the given LRN range:

rtrv-lnp-lrn:lrn=9093350000:elrn=9093359999:num=80:force=yes

```
rlghncxa03w 04-02-28 14:23:37 EST EAGLE 31.3.0
LRN      SP      TT      XLAT      RI      PCA      SSN
9093350000 90933599 16      DPCSSN    SSN      001-001-001 20
          18      DPCSSN    SSN      002-002-002 30
          19      DPCSSN    SSN      002-002-004 20
```

```
9093350099 90933500 --      -----  ---      -----  --
```

LRN TABLE IS 58% FULL

;

The following example shows how to display the first 80 records matching the specified SP and within the specified range:

rtrv-lnp-**lrn:lrn=1234567890:elrn=1234569999:num=80:force=yes:sp=a123**

```
rlghncxa03w 04-02-28 14:23:37 EST EAGLE 31.3.0
LRN      SP      TT      XLAT      RI      PCA      SSN
1234567899 a123  16      DPCSSN    SSN      001-001-001 20
          18      DPCSSN    SSN      002-002-002 30
          19      DPCSSN    SSN      002-002-004 20
```

LRN table is 58% full

;

Legend

LRN—Location routing number

SP—Service provider

TT—Translation type
XLAT—Translate
RI—Routing indicator
PCA—ANSI destination point code
SSN—Subsystem number

rtrv-lnp-npanxx

Retrieve LNP NPANXX

Use this command to retrieve all ported LNP NPANXXs and their associated message relay and LNP query default global title translations from the database. Use the **num** parameter to prevent inadvertent displays of extremely large amounts of information, because this action can require several hours.

NOTE: This command is obsolete.

NOTE: If the LNP ELAP Configuration feature is turned on, this command is no longer available. This function can be performed using the ELAP user interface.

Keyword: rtrv-lnp-npanxx

Related Commands: chg-lnp-npanxx, dlt-lnp-npanxx, ent-lnp-npanxx

Command Class: LNP Basic

Parameters

:enpanxx= (optional)

End range numbering plan area and exchange.

Range: 6 digits

Default: Display all npanxx entries

:force= (optional)

This parameter is used to display more than 50 entries.

Range: yes, no

Default: no

:npanxx= (optional)

Numbering plan area and exchange.

Range: 6 digits

Default: Display all npanxx entries

:num= (optional)

Number of entries to be shown. This parameter determines how many records you want to display (potentially within a given range). Use this parameter to prevent inadvertent displays of extremely large amounts of information.

Range: 1–50, if **force=yes** is not specified

1–50000, if **force=yes** is specified

Default: 1—if **npanxx** is specified and **enpanxx** is not specified

50—all other cases

Example

rtrv-lnp-npanxx:npanxx=909335

Dependencies

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before the **rtrv-lnp-npanxx** command can be entered.

If a value is specified for the **num** parameter that is greater than 50, the **force=yes** parameter must be specified.

If the **enpanxx** parameter is specified, the **npanxx** parameter must be specified.

The **enpanxx** parameter value must be greater than the **npanxx** parameter value.

Notes

Translation type values cannot be retrieved that are associated with AIN or IN LNP queries as NPANXX default message relay global title translations.

Output

To retrieve a single NPANXX:

rtrv-lnp-npanxx:npanxx=909335

```
rlghncxa03w 04-02-28 14:23:37 EST EAGLE 31.3.0
NPANXX MR LRN TT XLAT RI PCA SSN NGT
909335 yes yes 16 DPC GT 001-001-001 0 ---
          18 DPCNGT GT 002-002-002 0 10
          19 DPCSSN SSN 002-002-004 20 ---
```

NPANXX TABLE IS 58% FULL

;

To retrieve the first 50 NPANXXs:

rtrv-lnp-npanxx

```
rlghncxa03w 04-02-28 14:23:37 EST EAGLE 31.3.0
NPANXX MR LRN TT XLAT RI PCA SSN NGT
909335 yes yes 16 DPC GT 001-001-001 0 ---
          18 DPCNGT GT 002-002-002 0 10
          19 DPCSSN SSN 002-002-004 20 ---
```

```
909336 yes yes 16 DPC GT 001-001-001 0 ---
```

NPANXX TABLE IS 1% FULL

;

To retrieve the first 100 NPANXX:

rtrv-lnp-npanxx:num=100: force=yes

```
rlghncxa03w 04-02-28 14:23:37 EST EAGLE 31.3.0
NPANXX MR LRN TT XLAT RI PCA SSN NGT
909335 yes yes 16 DPC GT 001-001-001 0 ---
          18 DPCNGT GT 002-002-002 0 10
          19 DPCSSN SSN 002-002-004 20 ---
```

```
909336 yes yes 16 DPC GT 001-001-001 0 ---
```

NPANXX TABLE IS 1% FULL

;

To retrieve the first 50 records in a large range of NPANXX:

rtrv-lnp-npanxx:npanxx=555555: enpanxx=666666

```
rlghncxa03w 04-02-28 14:23:37 EST EAGLE 31.3.0
NPANXX MR LRN TT XLAT RI PCA SSN NGT
909335 Y Y 16 DPC GT 001-001-001 0 ---
          18 DPCNGT GT 002-002-002 0 10
          19 DPCSSN SSN 002-002-004 20 ---
```

```
909336 Y Y 16 DPC GT 001-001-001 0 ---
```

NPANXX TABLE IS 1% FULL

;

To retrieve the first 10000 records in a large range of NPANXX:

rtrv-lnp-npanxx:npanxx=555555: enpanxx=999999: num=10000: force=yes

```
rlghncxa03w 04-02-28 14:23:37 EST EAGLE 31.3.0
NPANXX MR LRN TT XLAT RI PCA SSN NGT
909335 Y Y 16 DPC GT 001-001-001 0 ---
          18 DPCNGT GT 002-002-002 0 10
          19 DPCSSN SSN 002-002-004 20 ---
```

```

          909336   Y   Y   16   SSN       GT       001-001-001       0   ---
NPANXX TABLE IS 1% FULL
;

```

Legend

NPANXX—Numbering plan area and exchange

MR—Message relay 10-digit TN search indication

LRN—Location routing number

TT—Translation type

XLAT—Translate

RI—Routing indicator

PCA—ANSI point code

SSN—Subsystem number

NGT—New global title translation type

rtrv-lnp-serv**Retrieve LNP Service**

Use this command to retrieve all LNP services. This command displays the assigned translation type, translation type name, service type, LNP digit validity indication, and TT aliases.

Keyword: **rtrv-lnp-serv**

Related Commands: **chg-lnp-serv**, **dlt-lnp-serv**, **ent-lnp-serv**

Command Class: Database Administration

Parameters

This command has no parameters.

Example

```
rtrv-lnp-serv
```

Dependencies

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before this command can be entered.

Notes

None

Output**rtrv-lnp-serv**

```

rlghncxa03w 02-11-28 14:42:38 EST EAGLE 30.0.0
SERV  TT  TTN      DV  ALIAS
AIN    15  AINGTE   TCAP 235
                236
LIDB   20  LIDB     SCCP ---
WNP    22  WNP      TCAP ---
LNPQS  11  LNPQS    TCAP ---
PCS    12  PCS      TCAP ---
CLASS  25  CLASSGTE SCCP ---
UDF1   201 UDF1     SCCP ---

```

LNP-SERV TABLE IS 2% FULL (7 of 256)

;

If the LNP SMS feature is turned on and provisioned, the WSMSC entry is included:

rtrv-lnp-serv

```

rlghncxa03w 02-11-28 14:42:38 EST EAGLE 30.0.0
SERV  TT  TTN      DV  ALIAS
AIN    15  AINGTE   TCAP 235
                236
LIDB   20  LIDB     SCCP ---
WNP    22  WNP      TCAP ---
LNPQS  11  LNPQS    TCAP ---
PCS    12  PCS      TCAP ---
CLASS  25  CLASSGTE SCCP ---
WSMSC  55  WSMSC    SCCP ---
UDF1   201 UDF1     SCCP ---

```

LNP-SERV TABLE IS 2% FULL (8 of 256)

;

If the LNP SMS feature is not turned on but is provisioned, the output includes the WSMSC entry with an asterisk:

rtrv-lnp-serv

```

rlghncxa03w 02-11-28 14:42:38 EST EAGLE 30.0.0
SERV  TT  TTN      DV  ALIAS
AIN    15  AINGTE   TCAP 235
                236
LIDB   20  LIDB     SCCP ---
WNP    22  WNP      TCAP ---
LNPQS  11  LNPQS    TCAP ---
PCS    12  PCS      TCAP ---
CLASS  25  CLASSGTE SCCP ---
WSMSC* 55  WSMSC    SCCP ---
UDF1   201 UDF1     SCCP ---

```

LNP-SERV TABLE IS 2% FULL (8 of 256)

;

Legend

SERV—Reserved service type name.

TT—Translation type

TTN—Translation type name

DV—Digits valid

ALIAS—Alias translation type

rtrv-lnp-sp**Retrieve LNP Service Provider**

Use this command to retrieve all LNP service provider information from the database.

NOTE: This command is obsolete.

NOTE: If the LNP ELAP Configuration feature is turned on, this command is no longer available. This function can be performed using the ELAP user interface.

Keyword: rtrv-lnp-sp

Related Commands: dlt-lnp-sp, ent-lnp-sp

Command Class: LNP Basic

Parameters

:force= (optional)

Use this parameter to prevent display of extremely large amounts of data. This parameter is required if a value greater than **50** is specified for the **num** parameter.

Range: yes, no

Default: no

:num= (optional)

The number of records to be displayed.

Range: 1-10000

Default: 1—if only the **sp** parameter is specified
50—if no parameters are specified

:sp= (optional)

The service provider ID.

Range: xyyy

1–4 alphanumeric characters.

Default: Display all

Example

rtrv-lnp-sp

rtrv-lnp-sp:sp=abjj

rtrv-lnp-sp:num=10:sp=a123

Dependencies

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before the **rtrv-lnp-sp** command can be entered.

The **force=yes** parameter must be specified when the value of the **num** parameter is greater than **50**.

Notes

If the **num** and **sp** parameters are specified with the **rtrv-lnp-sp** command, the number of service provider IDs specified by the **num** parameter is displayed, with the service provider ID specified by the **sp** parameter displayed first.

Output

In the following examples, the Service Provider ID table contains 11 entries.

rtrv-lnp-sp

```
rlghncxa03w 04-01-07 00:57:31 EST EAGLE 31.3.0
SP
a123
b123
c123
d123
e123
f123
g123
h123
i123
j123
tklc
SP TABLE IS (11 of 10000) 1% FULL
```

;

rtrv-lnp-sp:sp=abjj

```
rlghncxa03w 04-01-07 00:57:31 EST EAGLE 31.3.0
SP
abjj
SP TABLE IS (11 of 10000) 1% FULL
```

;

In the following example, the Service Provider ID table contains 1000 entries; 10 entries are displayed.

rtrv-lnp-sp:num=10:sp=a123

```
rlghncxa03w 04-01-07 00:57:31 EST EAGLE 31.3.0
SP
a123
b123
c123
d123
e123
f123
g123
h123
i123
j123
SP TABLE IS (1000 of 10000) 10% FULL
```

;

rtrv-lnp-sub**Retrieve LNP 10-digit Subscription**

Use this command to retrieve all LNP 10-digit ported telephone numbers (TN), and their assigned services, from the database. Subscriptions cannot be retrieved across NPANXX boundaries.

NOTE: This command is obsolete.

NOTE: If the LNP ELAP Configuration feature is turned on, this command is no longer available. This function can be performed using the ELAP user interface.



CAUTION: Using the rtrv-lnp-sub command to generate this report could affect the rate at which the LNP data can be updated in the EAGLE 5 ISS by two telephone numbers per second. To avoid the delay, use the rtrv-lnp-tnrpt command instead.

NOTE: This command displays the ptype value. For range or ptype-specific retrievals, use the rtrv-lnp-tnrpt command.

Keyword: rtrv-lnp-sub

Related Commands: chg-lnp-sub, dlt-lnp-sub, ent-lnp-sub

Command Class: LNP Basic

Parameters

:tn= (mandatory)

Telephone number.

Range: 10 digits

To specify a single TN subscription

7 digits with 3 asterisks (***) appended—To pool a block of 1000 TNs

:etn= (optional)

The end range telephone number.

Range: 10 digits

To specify a single TN subscription

7 digits with 3 asterisks (***) appended—To pool a block of 1000 TNs

Default: Display same parameter value as the **tn** parameter.

:force= (optional)

This parameter is used to display more than 50 entries.

Range: yes, no

Default: no

:lrn= (optional)

Location routing number.

Range: 10 digits

Default: Display all

:num= (optional)

The number of entries to be shown. This parameter determines how many records you want to display (potentially within a given TN range). Use this parameter to prevent inadvertent displays of extremely large amounts of information.

Range: 1-10000

1-50, if the **force=yes** parameter is not specified

1-10000, if the **force=yes** parameter is specified

Default: 1—if only the **tn** parameter is specified and the **etn** parameter is not specified

50—if no parameters are specified

:ptype= (optional)

Local number portability type.

Range: none, pool

none—Displays entries of all non-pooled subscriptions

pool—Pooled block number port

Default: none

:sp= (optional)

The service provider.

Range: xyyy

4 alphanumeric characters.

Default: Display all

:tt= (optional)

The translation type.

Range: 0-255
Default: Display all

Example

```
rtrv-lnp-sub:tn=9093351111
rtrv-lnp-sub:tn=9093350000:etn=910933659999:num=60:force=yes
rtrv-lnp-sub:tn=1234567890:etn=1234569999:tt=16
rtrv-lnp-sub:tn=1234567890:etn=1234569999:sp=1234:num=20
rtrv-lnp-
sub:tn=1234567890:etn=1234569999:lrn=1234567891:num=100:force=yes
:ptype=pool
```

Dependencies

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before this command can be entered.

The **num** parameter defaults to **50** if not specified.

When the specified **num** parameter value is greater than **50**, the **force=yes** parameter must be specified.

Translation type values associated with AIN, IN, LNPQS, PCS, or WNP LNP queries are not allowed for retrievals.

The **etn** parameter value must be greater than the **tn** parameter value.

The **tn** parameter range must not cross NPANXX boundaries.

The translation type and service provider must be in the LNP database.

The translation type value must be a reserved service for LNP.

The LRN must exist in the database.

Notes

The **tt**, **sp**, and **lrn** parameters are provided to limit the displays to subscription records found matching their specified values. Combinations of these parameters are allowed.

Output

Retrieve a single TN:

rtrv-lnp-sub:tn=9093351111

```
rlghncxa03w 04-02-28 14:23:37 EST EAGLE 31.3.0
TN          SP      LRN          PTYPE
9093351111  a123    1234567890    none
  TT  XLAT   RI    PCA          SSN  NGT  RGTA
   16  DPC    GT   001-001-001  0    0   yes
   18  DPCNGT GT   002-002-002  0   10   no
SERVICE PROVIDER TABLE IS 5% FULL
LRN TABLE IS 60% FULL
MESSAGE RELAY TABLE IS 75% FULL
NPANXX TABLE IS 80% FULL
PORTED TN TABLE IS 90% FULL
SCCP CARDS CONFIGURED TO SUPPORT A MAXIMUM OF 500000 PORTED TNs
;
```

Retrieve first 60 records in the given TN range:

rtrv-lnp-sub:tn=9093350000:etn=910933659999:num=60:force=yes

```
rlghncxa03w 04-02-28 14:23:37 EST EAGLE 31.3.0
TN          SP      LRN          PTYPE
9093351111  a123    1234567890    none
9093351***  abcd    4567890123    pool
9093352456  1234    9876543211    none
9093352555  4321    9877733333    none
9093354***  abcd    4567890123    pool

  TT  XLAT   RI    PCA          SSN  NGT  RGTA
   16  DPC    GT   001-001-001  0    0   yes
   18  DPCNGT GT   002-002-002  0   10   no

9193361111  a123    1234567891    pool

  TT  XLAT   RI    PCA          SSN  NGT  RGTA
   17  DPCNGT GT   001-001-002  0   10   yes

SERVICE PROVIDER TABLE IS 5% FULL
LRN TABLE IS 60% FULL
MESSAGE RELAY TABLE IS 75% FULL
NPANXX TABLE IS 80% FULL
PORTED TN TABLE IS 90% FULL
SCCP CARDS CONFIGURED TO SUPPORT A MAXIMUM OF 500000 PORTED TNs
;
```

Retrieve the first 50 TNs in the range which are assigned the specified TT value:

rtrv-lnp-sub:tn=1234567890:etn=1234569*:tt=16**

```
rlghncxa03w 04-02-28 14:23:37 EST EAGLE 31.3.0
TN          SP      LRN          PTYPE
1234567***  a123    1234567890    pool

  TT  XLAT   RI    PCA          SSN  NGT  RGTA
   16  DPC    GT   001-001-001  0    0   yes
   18  DPCNGT GT   002-002-002  0   10   no

SERVICE PROVIDER TABLE IS 5% FULL
LRN TABLE IS 60% FULL
MESSAGE RELAY TABLE IS 75% FULL
NPANXX TABLE IS 80% FULL
PORTED TN TABLE IS 90% FULL
```

```

      SCCP CARDS CONFIGURED TO SUPPORT A MAXIMUM OF 500000 PORTED TNs
;
Retrieve the first 20 subscriptions in the range which are assigned the specified SP value:

```

rtrv-lnp-sub:tn=1234567890:etn=1234569999:sp=12345678:num=20

```

rlghncxa03w 04-02-28 14:23:37 EST EAGLE 31.3.0
TN          SP      LRN          PTYPE
1234567***  a123    1234567891    pool

```

```

      TT  XLAT      RI      PCA          SSN  NGT  RGTA
      17  DPCNGT   GT      001-001-002   0    10   yes

```

```

SERVICE PROVIDER TABLE IS 5% FULL
LRN TABLE IS 60% FULL
MESSAGE RELAY TABLE IS 75% FULL
NPANXX TABLE IS 80% FULL
PORTED TN TABLE IS 90% FULL
SCCP CARDS CONFIGURED TO SUPPORT A MAXIMUM OF 500000 PORTED TNs
;

```

NOTE: The following message is appended to the report to convey that further subscriptions exist for other portable TNs that meet the specified criteria, but were not reported due to the limit set by the num parameter:

Further subscriptions exist that remain to be reported.

```

SERVICE PROVIDER TABLE IS 5% FULL
LRN TABLE IS 60% FULL
MESSAGE RELAY TABLE IS 75% FULL
NPANXX TABLE IS 80% FULL
PORTED TN TABLE IS 90% FULL
SCCP CARDS CONFIGURED TO SUPPORT A MAXIMUM OF 500000 PORTED TNs
;

```

Retrieve by **ptype**: It is recommended that range or ptype-specific retrievals use the rtrv-lnp-tnrpt command.

rtrv-lnp-sub:ptype=pool:tn=9093351111:etn=9093352222:num=10

```

rlghncxa03w 04-02-28 14:23:37 EST EAGLE 31.3.0
TN          SP      LRN          PTYPE
9093351***  a123    1234567890    pool

```

```

      TT  XLAT      RI      PCA          SSN  NGT  RGTA
      16  DPC      GT      001-001-001   0    0    yes
      18  DPCNGT   GT      002-002-002   0    10   no

```

```

SERVICE PROVIDER TABLE IS 5% FULL
LRN TABLE IS 60% FULL
MESSAGE RELAY TABLE IS 75% FULL
NPANXX TABLE IS 80% FULL
PORTED TN TABLE IS 90% FULL
SCCP CARDS CONFIGURED TO SUPPORT A MAXIMUM OF 500000 PORTED TNs
;

```

Legend

TN—Telephone number
ETN—The end range telephone number
SP—The service provider
LRN—The location routing number
PTYPE—The local number portability type
TT—The translation type
XLAT—Translate

RI—The routing indicator

PCA—The ANSI point code

SSN—The subsystem number

NGT—The new global title translation type

RGTA—The replacement global title address (TN) with an LRN

rtrv-lnp-tnrpt

Retrieve LNP Subscription Version Data

Use this command to retrieve and display LNP subscription data based on the LNP type.

NOTE: This command is obsolete.

NOTE: If the LNP ELAP Configuration feature is turned on, this command is no longer available. Subscription data can be retrieved by TN using the ELAP user interface. The output indicates the LNP type.



CAUTION: The **rtrv-lnp-sub** command can also be used to generate this report, but doing so could impact updating the LNP data in the EAGLE 5 ISS at a rate of two telephone numbers per second. Using the **rtrv-lnp-tnrpt** command eliminates the impact on updating the LNP data.

Keyword: **rtrv-lnp-tnrpt**

Related Commands: **canc-lnp-tnrpt**

Command Class: LNP Basic

Parameters

:etn= (optional)

The end range telephone number.

Range: 10 digits

To specify a single TN subscription

7 digits with 3 asterisks (***) appended—To pool a block of 1000 TNs

Default: Display same parameter value as the **tn** parameter.

:force= (optional)

This parameter is used to display more than 50 entries.

Range: **yes, no**

Default: **no**

:num= (optional)

The number of entries to be shown. This parameter determines how many records you want to display (potentially within a given TN range). Use this parameter to prevent inadvertent displays of extremely large amounts of information.

Range: **1-12, 000, 000**

1-50—if the **force=yes** parameter is not specified

1-12,000,000—if the **force=yes** parameter is specified

Default: **1**—if only the **tn** parameter is specified and the **etn** parameter is not specified

50—all other cases

:ptype= (optional)

Specifies the local number portability type to display.

Range: **none, pool**

none—Displays entries of all non-pooled subscriptions

pool—Pooled block number port

Default: Both pooled and non-pooled TNs are retrieved

:tn= (optional)
 Telephone number.
Range: 10 digits
 To specify a single TN subscription
 7 digits with 3 asterisks (***) appended—To pool a block of 1000 TNs

Example

```
rtrv-lnp-tnrpt:ptype=pool
rtrv-lnp-
tnrpt:tn=9093350000:etn=9193369***:num=60:force=yes:ptype=pool
```

Dependencies

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before this command can be entered.

Another **rtrv-lnp-tnrpt** command cannot be in progress when this command is entered.

The **num** parameter defaults to **50** if not specified.

When the specified **num** parameter value is greater than **50**, the **force=yes** parameter must be specified.

The **etn** parameter value must be greater than the **tn** parameter value.

If the **etn** parameter is specified, then the **tn** parameter must be specified.

Notes

If a range of telephone numbers is specified, it is possible for the NPANXX ranges to cross boundaries.

Output

Retrieve by **ptype**:

```
rtrv-lnp-tnrpt:ptype=pool
rlghncxa03w 04-02-28 14:23:37 EST EAGLE 31.3.0
TN          PTYPE
9093351***  pool
;
```

Retrieve the first 60 records in the given range with **ptype=pool**:

```
rtrv-lnp-
tnrpt:tn=9093350000:etn=9193369999:num=60:force=yes:ptype=pool
rlghncxa03w 04-02-28 14:23:37 EST EAGLE 31.3.0
TN          PTYPE
9093351***  pool
9193361***  pool
;
```

Retrieve first 60 records in the given TN range:

```
rtrv-lnp-tnrpt:tn=9093350000:etn=9193369999:num=60:force=yes
rlghncxa03w 04-02-28 14:23:37 EST EAGLE 31.3.0
TN          PTYPE
9093351***  pool
9093358123  none
9193361432  none
9193361***  pool
;
```

rtrv-lnp-ttmap**Retrieve LNP Translation Type Mapping**

Use this command to retrieve all LNP MRGTs or all LNP MRGTs for a given TT, TT-PC-SSN, or TT-DPC combination.

NOTE: This command does not support 24-bit ITU national point codes.

Keyword: rtrv-lnp-ttmap

Related Commands: chg-lnp-ttmap, ent-lnp-sub

Command Class: LNP Basic

Parameters

:force= (optional)

Forcible value.

Range: yes, no

Default: no

:num= (optional)

Number of entries to be displayed. This parameter specifies how many records you want to display (potentially within a given range). Use this parameter to prevent inadvertent displays of extremely large amounts of information.

Range: 1-52, 000

Default: 50

:pc= (optional)

ANSI destination point code in the form of *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: pca

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001-005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006-255.

The point code 000-000-000 is not a valid point code.

Default: Display all

:tt= (optional)

The translation type.

Range: 0-255

Default: Display all

Example

```
rtrv-lnp-ttmap:tt=16:pc=100-100-100
```

```
rtrv-lnp-ttmap
```

```
rtrv-lnp-ttmap:tt=15:num=20
```

```
rtrv-lnp-ttmap:dpc=1-1-1:num=100:force=yes
```

Dependencies

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before this command can be entered.

If the **pc/pca** parameter is specified, the **tt** parameter must be specified.

The translation type must be in the LNP database.

If the specified **num** parameter value is greater than **50**, the **force=yes** parameter must be specified.

Translation type values associated with AIN or IN LNP queries are not allowed for retrievals.

Notes

Use the **tt** and **dpc** parameters to limit the displays to LNP MRGT records found matching their specified values. Combinations of these parameters are allowed.

Output

The following example shows how to retrieve an LNP GT:

```
rtrv-lnp-ttmap:tt=16:pc=100-100-100
rlghncxa03w 04-02-14:23:37 EST EAGLE 31.3.0
TT PCA          NGT  RGTA
16 100-100-100 28  YES

Message Relay Table is 1% full
;
```

The following example shows how to retrieve the first 50 LNP GTs assigned to the specified TT value:

```
rtrv-lnp-ttmap
rlghncxa03w 04-02-28 14:23:37 EST EAGLE 31.3.0
TT PCA          NGT  RGTA
16 001-001-001 0   YES
16 100-100-100 28  YES
.
.
18 002-002-002 10  NO
Message Relay Table is 1% full
;
```

The following example shows how to retrieve the first 20 LNP GTs assigned to the specified TT value:

```
rtrv-lnp-ttmap:tt=15:num=20
rlghncxa03w 04-02-28 14:23:37 EST EAGLE 31.3.0
TT PCA          NGT  RGTA
15 001-001-002 10  NO
.
.
15 001-001-005 10  YES
Message Relay Table is 1% full
;
```

The following example shows how to retrieve the first 100 LNP GTs assigned to the specified DPC value:

```
rtrv-lnp-ttmap:dpc=1-1-1:num=100:force=yes
rlghncxa03w 04-02-28 14:23:37 EST EAGLE 31.3.0
TT PCA          NGT  RGTA
16 001-001-001 0   NO
18 001-001-001 10  NO
.
.
.
Message Relay Table is 75% full
;
```

Legend

TT—The translation type.

PCA—The ANSI point code.

NGT—The new global title translation type.

RGTA—The replacement GTA treatment.

rtrv-lnpopts**Retrieve LNP System Options**

Use this command to display all the LNP-specific system options from the database.

Keyword: **rtrv-lnpopts**

Related Commands: **chg-lnpopts**

Command Class: Database Administration

Parameters

This command has no parameters.

Example

rtrv-lnpopts

Dependencies

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before this command can be entered.

Notes

None

Output

The following example shows the JIPPROV and JIPDIGITS fields that appear when the Triggerless LNP feature is turned on.

The WSMSC10DIG field appears when the LNP SMS feature is turned on.

rtrv-lnpopts

```

    AMASLPID    = 123456789
    INCSLP      = yes
    AMATYPE     = 003
    AMAFEATID   = 010
    CIC         = 1369
    AUD         = on
    SP          = a123
    FRCSMPLX    = no
    ADMHIPRI    = yes
    GTWYSTP     = yes
    JIPPROV     = yes
    JIPDIGITS   = 919460
    CCP         = no
    SERVPORT    = no
    WQREDRCT    = off
    WSMSC10DIG  = yes
;

```

Legend

AMASLPID—AMA slip ID

INCSLP—Whether the AMA slip ID included in the response

AMATYPE—AMA call type

AMAFEATID—AMA feature ID

CIC—Carrier identification code

AUD—Audit indicator

SP—Service provider ID

FRCSMPLX—Allow simplex database updates indicator

ADMHIPRI—Indicator that LNP database administration has the highest priority of all administration

GTWYSTP—Indicator that LNP system is also configured as a Gateway STP

JIPPROV—Indicator of whether a Jurisdictional Information Parameter (JIP) value is to be added to the IAM

JIPDIGITS—The Jurisdictional Information Parameter value

CCP—Copy Charge Parameters

SERVPORT—Service Portability

WQREDRCT—Wireless queries directed to default GTT

WSMS10DIG—SCCP GTA length indicator for 10 or 11 digits

rtrv-log**Display Records from the Log**

Use this command to retrieve records from the active or standby Alarm and UIM logs generated by the Maintenance system. This command selects these records based on a span of time or a specific log file index.

Keyword: rtrv-log

Related Commands:

Command Class: System Maintenance

Parameters

:dir= (optional)

Direction in which to obtain entries from within the log (forward or backward) for displaying. See the Dependencies and Notes sections for usage information.

Range: **fwd, bkwd**

fwd—Display entries from nearer the beginning of the log toward entries at the end of the log

bkwd—Display entries from nearer the end of the log toward entries at the beginning of the log

Default: **fwd**

:edate= (optional)

End date. Report only log entries that were created on or *before* the specified date (when **dir=fwd**), or only log entries that were created on or *after* the specified date (when **dir=bkwd**). See the Notes section for usage information.

Range: **000101-991231**

(in the form *yymmdd*, where *yy* is year, *mm* is month, and *dd* is day)

Default: Report log entries regardless of their creation date

:enum= (optional)

Ending Message Reference Number (MRN) for which to display entries. The ending Alarm or UIM number if specifying a range.

Range: **1-1499**

1-999—Alarms (UAMs)

1000-1499—UIMs

Default: If **enum** is not specified and:

If **snum** is specified, the default **enum** value is the same as the specified **snum** value.

If **snum** is not specified and **type** is **alarm** or not specified, **enum= 999**.

If **snum** is not specified and **type** is **all** or **uim**, **enum= 1499**.

:etime= (optional)

End time. Report only log entries that were created on or *before* the specified time (when **dir=fwd**), or only log entries that were created on or *after* the specified time (when **dir=bkwd**). See the Notes section for usage information.

Range: **000000-235959**

(in the form *yymmdd*, where *yy* is year, *mm* is month, and *dd* is day)

Default: Report log entries regardless of their creation time

:mode= (optional)

Log display mode; display all information or just summary information from each log entry.

Range: **brief, full**

brief—Display only the first “Summary” line of the log entry

full—Display all information available in the log entry

Default: **full**

:next= (optional)

Number of additional records to display using the same direction (**dir**) and filtering criteria of **outgrp**, **type**, **slog**, and **mode** that were used for the previous successful **rtrv-log** command at the same terminal. This parameter cannot be specified with any other parameters in the command. See the Dependencies and Notes sections for usage information.

Range: 1-65500

:num= (optional)

Number of records that can be displayed before the report is stopped.

Range: 1-65500

Default: 15

:outgrp= (optional)

Output Group to sort or filter the Alarms (UAMs) and/or UIMs on. This parameter cannot be specified when the **snum** parameter is specified.

Range: **all, appserv, appss, card, clk, db, dbg, gtt, gws, link, lnpsdb, lnpsub, meas, mon, mps, pu, sa, seas, slan, sys, traf**

all—Retrieve information for all Output Groups

appserv—Application Server

appss—Application Subsystem

card—Card

clk—Clock

db—Database

dbg—Debug

gtt—GTT Maintenance

gws—GWS Maintenance

link—Link Maintenance

lnpsdb—LNP Database

lnpsub—LNP Subsystem

meas—Measurements Maintenance

mon—Monitoring (Sentinel or IMF) Maintenance

mps—MPS Maintenance

pu—Program Update

sa—System Administration

seas—SEAS (Sentinel or IMF)

slan—SLAN Maintenance

sys—System Maintenance

traf—Traffic

Default: If the **next** parameter is not specified, the default is **all**.

If the **next** parameter is specified, the output is the same as the immediately previous successful **rtrv-log** command that was entered at the same terminal (and no **rtrv-log** command was entered at another terminal).

:sdate= (optional)

Start date. Report only log entries that were created on or *after* the specified date (when **dir=fwd**), or only log entries that were created on or *before* the specified date (when **dir=bkwd**). See the Notes section for usage information.

Range: 000101-991231

(in the form *yyymmdd*, where *yy* is year, *mm* is month, and *dd* is day)

Default: Report log entries regardless of their creation date

:slog= (optional)

Source of log. Which OAM's Maintenance log to access: active or standby.

Range: **act, stb**

act—Active OAM

stb—Standby OAM

Default: **act**

:snum= (optional)

A single Alarm or UIM Message Reference Number (MRN), or the starting Alarm or UIM MRN if specifying a range. This parameter cannot be specified when the **outgrp** parameter is specified.

Range: **1-1499**
 1-999—Alarms (UAMs)
 1000-1499—UIMs

Default: All entries for the specified **type** are displayed.
 If **type** is **all**, **alarm**, or not specified, **snum=1**.
 If **type** is **uim**, **snum=1000**.

:stime= (optional)

Start time. Report only log entries that were created on or *after* the specified time (when **dir=fwd**), or only log entries that were created on or *before* the specified time (when **dir=bkwd**). See the Notes section for usage information.

Range: **000000-235959**
 hhmmss—*hh*=hours (**00-23**), *mm*=minutes (**00-59**), *ss*=seconds (**00-59**)

Default: Report log entries regardless of their creation time

:type= (optional)

Type of Maintenance log to access for the report: alarms (UAMs), UIMs, or both logs (**all**).

Range: **all, alarm, uim**
Default: **alarm**

Example

```
rtrv-log:sdate=960715:stime=220000:num=50
rtrv-log:sdate=960715:stime=220000:num=50:snum=106
rtrv-log:sdate=960715:stime=220000:num=50:snum=106:enum=350
rtrv-log:sdate=960715:stime=220000:num=50:outgrp=slan:type=all
rtrv-log:next=100
```

Dependencies

No other **rtrv-log** command can already be in progress on the same OAM.

The initialization of the ELOG and UIM logs must be complete in the system before the **rtrv-log** command can be entered.

If both the **sdate** and **edate** parameters are specified,

- In the forward direction, the **sdate** value must be less than or equal to the **edate** value.
- In the backward direction, the **sdate** value must be greater than or equal to the **edate** value.

The month component of the **sdate** and **edate** parameters must be in the range **1-12**.

The day component of the **sdate** and **edate** parameters must be in the range **1-31** and must accurately reflect the number of days in the month and year indicated (see Notes section).

The seconds component of the **stime** and **etime** parameters must be in the range **00-59**.

The minutes component of the **stime** and **etime** parameters must be in the range **00-59**.

If the **sdate** parameter value is equal to the **edate** parameter value,

- In the forward direction, the **stime** value must be less than or equal to the **etime** value.
- In the backward direction, the **stime** value must be greater than or equal to the **etime** value.

The **sdate** parameter value plus the **stime** parameter value must be less than the current time and date combination.

If **dir=bkwd** is specified with a date and time range, **sdate/stime** must be greater than **edate/etime**.

When the **enum** parameter is specified, the **snum** parameter must be specified with a value less than or equal to the specified **enum** value.

The specified **enum** parameter value and the specified **snum** value must be within the same range: **1-999** for Alarms (UAMs) and **1000-1499** for UIMs.

The **type** parameter and the **snum/enum** parameters cannot be specified together in the command.

The **rtrv-log:next=** command must be entered on the same terminal where the previous successful **rtrv-log** command was entered in the system. No other parameters can be entered with the **next** parameter in the command.

The **rtrv-log:next=** command cannot be entered following a **rtrv-log** command that contained the **type=all** parameter. A **rtrv-log** command without the **type=all** parameter must be entered before the **rtrv-log::next=** command can be entered.

Because entries can be overwritten between the entry of a **rtrv-log** command without the **next** parameter and the entry of a **rtrv-log:next=** command, the **rtrv-log:next:** command might not execute successfully. Another **rtrv-log** command without the **next** parameter must be entered before the **rtrv-log:next:** command can be entered again,

Notes

This command can be canceled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

To accommodate the year 2000 and beyond, the two-digit year portion of dates is interpreted to be in the indicated century as follows:

years 95–99 = 1995 through 1999
years 00–94 = 2000 through 2094

This means that date 000101 (Jan. 1, 2000) is greater than 991231 (Dec. 31, 1999).

The day portion of any **sdate/edate** value entered must be in agreement with the month and year. The system issues error message E2252 if the day is found to be not valid (for example, 960631 is not a valid date). The system software and date/time hardware properly handle leap years and leap centuries. The year 2000 is a leap year.

When no date or time parameters are specified, the log display depends on the specified or default values of two other parameters: **num** and **dir**. The **num** parameter determines the maximum number of entries to display, and the **dir** parameter determines whether entries are displayed from the oldest end (**dir=fwd** or not specified) or the newest end (**dir=bkwd**).

When **sdate** is specified and **edate** is not specified in the forward direction, **edate** is defaulted to be the end of the log.

When **edate** is specified and **sdate** is not specified in the forward direction, **sdate** is defaulted to be the beginning of the log.

When **sdate** is specified and **edate** is not specified in the backward direction, **edate** is defaulted to be the beginning of the log.

When **edate** is specified and **sdate** is not specified in the backward direction, **sdate** is defaulted to be the end of the log.

When **stime** is specified and **etime** is not specified in the forward direction, **etime** is defaulted to **235959**.

When **etime** is specified and **stime** is not specified in the forward direction, **stime** is defaulted to **000000**.

When **stime** is specified and **etime** is not specified in the backward direction, **rtime** is defaulted to **000000**.

When **etime** is specified and **stime** is not specified in the backward direction, **stime** is defaulted to **235959**.

When **stime** or **etime** is specified but neither the **sdate** or **edate** parameters are specified, **sdate** and **edate** are each defaulted to the value **today**.

The **num** parameter is used to control the maximum number of entries to be displayed by one command.

The **dir** parameter is used to control whether preceding (older) or following (newer) records are displayed. In either output format, records are displayed in time order regardless of the retrieval control of the **dir** parameter.

Because logging does not stop while records are displaying, old records that were displayed can be overwritten before they are accessed again.

After the date or time is changed in the system, output records can show anomalies in the date-time stamp. An example of this occurs when the time is changed back—in this case records may show that an earlier time follows a later time in the log.

When no Output Group (**outgrp**) is specified, no sorting based on Output Groups and no additional Alarm/UIM breakdown into Output Group categories is done for the report. The log entries will be shown only in the forward or reverse chronological ordering of the logs.

When a unique Output Group (**outgrp**) is specified, the report is separated into Alarm and UIM categories, and the entries for the specified Output Group are shown in each category.

When **outgrp=all** is specified, the report is separated into Alarm and UIM categories, and the available entries in each category are listed by Output Group.

The **next** parameter is used to display a specified number of additional log records after the previous **rtrv-log** entry at the terminal. New records that are logged after the previous **rtrv-log** command was entered will not be displayed when the **rtrv-log:next=** command is entered. The **next** parameter is valid only under the following conditions:

- The **rtrv-log:next=** command is entered at the same terminal from which the previous **rtrv-log** command was entered. The previous **rtrv-log** command must not include the **type=all** parameter.
- No other terminal has issued a **rtrv-log** command after the **rtrv-log** command entered at the terminal from which the **rtrv-log:next=** command is entered.
- The **next** parameter is the only parameter specified in the **rtrv-log** command.
- There are still logs present that match the conditions (except **time/date/num**) specified in the previous **rtrv-log** command.

When either a single **snum** or range of **snum/enum** is specified, only those Alarms or UIMs within the specified range are displayed.

When **snum** is specified and **enum** is not specified, the **enum** value defaults to the specified **snum** value.

When **enum** is specified, an **snum** value must be specified that is less than or equal to the specified **enum** value.

If an **snum** is specified within the range **1-999**, its corresponding **enum** must be greater than or equal to the **snum** and also within the range of **1-999**.

If an **snum** is specified within the range **1000-1499**, its corresponding **enum** must be greater than or equal to the **snum** and also within the range of **1000-1499**.

When **enum** is not specified and the specified **snum** Alarm or UIM does not exist (is not currently used in the system), a scroll area message indicates that the **snum** value is out of range.

If **snum** and **enum** are specified and one or both specified Alarms and/or UIMs do not exist (are not currently used in the system), the report lists all existing Alarms and/or UIMs that exist within the specified range.

Output

In the following example, the sequence numbers that are replaced by the dashes (- - -) represent the UIMs that were discarded due to the UIM thresholding feature.

rtrv-log:type=uim:sdate=960715:stime=220000:num=50

rlghncxa03w 04-02-16 10:15:29 EST EAGLE 31.3.0

Card 1113; SYS REL= Rel 31.3.0; STP CLLI= ncralstp0001; Timezone= EST

**** Logged 99-07-16 01:03:09****

0001.1005 CARD 1105,B INFO GWS rcvd OPC that is not allowed

SIO=01 OPC=001-001-001 DPC=002-002-002

H0H1=000 AFTPC=003-003-003

TEST MODE

SR=scrib LSN=A1234567

Report Date: 99-07-16 Time: 01:00:01

**** Logged 99-07-16 01:03:34****

---.1004 CARD 1205,B INFO MTP rcvd unknown DPC

SIO=07 OPC=001-001-001 DPC=002-002-002

LSN=A1234567

Report Date: 99-07-16 Time: 01:01:00

**** Logged 99-07-16 01:03:55****

0014.1019 CARD 1103 INFO SCCP rcvd invalid UDTs msg

SIO=03 OPC=001-001-001 DPC=002-002-002

CDPA: SSN=005 TT=250

CGPA: SSN=000 TT=000

RETURN CAUSE=001

DATA=26 80 03 09 0e 06 09 00 fe 08 50 55

43 00

LSN=A1234567

Report Date: 99-07-16 Time: 01:00:05

;

The following example shows the records in the log created after 15 July 2003 at 10 PM up to a maximum of 50 records.

rtrv-log:sdate=030715:stime=220000:num=50

ncralstp00001 03-07-16 10:15:29 EST EAGLE 31.3.0

Card 1113; SYS REL= 31.3.0; STP CLLI= ncralstp00001; Timezone= EST

****03-07-15 22:03:09****

3159.0013 ** CARD 1207 CCS7ITU Card is isolated from the system

****03-07-15 22:03:11****

3160.0046 TERMINAL 10 Terminal enabled

****03-07-16 00:23:55****

3161.0200 SLK 1103,B RCVRY-LKF: link available

****03-07-16 01:42:18****

3162.0155 * DLK 2117,A STPLAN Connection unavailable

****03-07-16 01:43:51****

3163.0317 LSET A123456789 RCVRY-LKST0: linkset allowed

****03-07-16 02:35:16****

3164.0082 * FUSE PANEL 11xx Alarm in fuse panel

****03-07-16 03:00:23****

3165.0108 ** IMT BUS A Major IMT fault detected

****03-07-16 03:37:59****

3166.0292 *C GLS SYSTEM GLS is not available

****03-07-16 07:22:06****

3167.0313 *C DPC 021-005-000 DPC is prohibited

****03-07-16 09:33:17****

3168.0348 * SEAS SYSTEM SEAS is at minimum service

****03-07-16 09:34:01****

3169.0112 * IMT SYSTEM Major Failures detected on both

****03-07-16 09:35:07****

3170.0160 * CLOCK SYSTEM 1116-S clock failed

```

****03-07-16 09:36:34****
3171.0160 * CARD 1116 OAM          1116-S clock failed
****03-07-16 09:37:23****
3172.0065 * CLOCK                  Minor holdover clock trouble detected
****03-07-16 09:38:12****
3173.0308 *C SYSTEM                Node isolated due to SLK failure
****03-07-16 09:39:56****
3174.0331 *C SCCP SYSTEM            SCCP is not available
****03-07-16 09:40:15****
3175.0002 * GPL SYSTEM OAM         Card is not running approved GP
****03-07-16 09:41:34****
3176.0153 *C SLAN SYSTEM           STPLAN not available
****03-07-16 09:42:45****
3177.0060 * CDT 9                  Minor customer trouble detected
****03-07-16 09:43:52****
3178.0344 * SEAS X25 LINK A1       SEAS PVC unavailable
****03-07-16 09:44:18****
3179.0344 * SEAS OAP A             SEAS UAL unavailable
****03-07-16 09:45:29****
3180.0321 * XLIST                  X-LIST occupancy threshold Exceeded
****03-07-16 09:48:48****
3181.0175 * SECURITY 1114          LOGBUFROVL-SECULOG - upload required
****03-07-16 10:23:47****
0259.0084 ** DSM 1101,B           IP Connection Unavailable
Failed Channels: Prov Dnld TCP UDP
****03-07-16 10:25:41****
0069.0084 ** STC 1105,B           IP Connection Unavailable
ERROR STATUS: DHCP Lease. Physical Link.
;

UAM Report terminated - end of log reached.
END OF ALARM LOG REPORT.
;

```

The following example shows the records in the log created after 15 July 2003 at 10 PM for Alarm (UAM) 160.

```

rtrv-log:sdate=030715:stime=220000:num=50:snum=160
ncralstp00001 03-07-16 10:15:29 EST EAGLE 31.3.0
Card 1113; SYS REL= 31.3.0; STP CLLI= ncralstp00001; Timezone= EST

****03-07-16 09:35:07****
3170.0160 * CLOCK SYSTEM          1116-S clock failed
****03-07-16 09:36:34****
3171.0160 * CARD 1116 OAM          1116-S clock failed
;

UAM Report terminated - end of log reached.
END OF LOG REPORT.
;

```

The following example shows the records in the log created after 15 July 2003 at 10 PM that include Alarms (UAMs) 106 through 350.

```

rtrv-log:sdate=030715:stime=220000:num=50:snum=106:enum=350
ncralstp00001 03-07-16 10:15:29 EST EAGLE 31.3.0
Card 1113; SYS REL= 31.3.0; STP CLLI= ncralstp00001; Timezone= EST

****03-07-16 00:23:55****
3161.0200 SLK 1103,B              RCVRY-LKF: link available
****03-07-16 01:42:18****
3162.0155 * DLK 2117,A           STPLAN Exceededn unavailable
****03-07-16 01:43:51****
3163.0317 LSET A123456789         RCVRY-LKST0: linkset allowed
****03-07-16 03:00:23****

```

```

3165.0108 ** IMT BUS A          Major IMT fault detected
****03-07-16 03:37:59****
3166.0292 *C GLS SYSTEM        GLS is not available
****03-07-16 07:22:06****
3167.0313 *C DPC 021-005-000    DPC is prohibited
****03-07-16 09:33:17****
3168.0348 * SEAS SYSTEM        SEAS is at minimum service
****03-07-16 09:34:01****
3169.0112 * IMT SYSTEM          Major Failures detected on both
****03-07-16 09:35:07****
3170.0160 * CLOCK SYSTEM        1116-S clock failed
****03-07-16 09:36:34****
3171.0160 * CARD 1116 OAM       1116-S clock failed
****03-07-16 09:38:12****
3173.0308 *C SYSTEM            Node isolated due to SLK failure
****03-07-16 09:39:56****
3174.0331 *C SCCP SYSTEM        SCCP is not available
****03-07-16 09:41:34****
3176.0153 *C SLAN SYSTEM        STPLAN not available
****03-07-16 09:43:52****
3178.0344 * SEAS X25 LINK A1    SEAS PVC unavailable
****03-07-16 09:44:18****
3179.0344 * SEAS OAP A          SEAS UAL unavailable
****03-07-16 09:45:29****
3180.0321 * XLIST               X-LIST occupancy threshold Exceeded
****03-07-16 09:48:48****
3181.0175 * SECURITY 1114       LOGBUFROVL-SECULOG - upload required
;

UAM Report terminated - end of log reached.
END OF LOG REPORT.
;

```

The following example shows the records in the log created after 15 July 2003 at 10 PM for Alarms (UAMs) and UIMs in the SLAN Output Group.

rtrv-log:sdate=030715:stime=220000:num=50:outgrp=slan:type=all

ncralstp00001 03-07-16 10:15:29 EST EAGLE 31.3.0

Card 1113; SYS REL= 31.3.0; STP CLLI= ncralstp00001; Timezone= EST

Alarm Output Group - SLAN

****03-07-16 09:41:34****

3176.0153 *C SLAN SYSTEM STPLAN not available

UIM Output Group - SLAN

**** Logged 03-07-16 01:03:09****

0001.1005 CARD 1105,B INFO GWS rcvd OPC that is not allowed

SI0=01 OPC=001-001-001 DPC=002-002-002

H0H1=000 AFTPC=003-003-003

TEST MODE

SR=scrib LSN=A1234567

Report Date: 03-07-16 Time: 01:00:01

```

;
Report terminated - end of log reached.
END OF LOG REPORT.
;

```

The following example shows the records in the log in the backwards direction that were created between 12 June 2003 at 4:48:27 PM and 11 June 2003 at 10:00:45 PM for Alarms (UAMs).

rtrv-

log:dir=bkwd:stime=044827:sdate=030612:etime=100045:edate=030611

tekelecstp 03-06-23 04:10:12 EST EAGLE 31.3.0

Card 1115; SYS REL= 31.3.0. STP CLLI= tekelecstp; Timezone= EST

```

Report Initiated   - extended processing time required

****03-06-12  04:48:27****
5001.0009      CARD 1115 EOAM           MASP became active
****03-06-11  13:38:55****
5003.0002 *    GPL SYSTEM BPHMUX       Card is not running approved GPL
****03-06-11  13:38:55****
5002.0002 *    GPL SYSTEM BPDCM        Card is not running approved GPL
****03-06-11  13:36:04****
5001.0009      CARD 1115 EOAM           MASP became active
****03-06-11  12:15:29****
5001.0009      CARD 1115 EOAM           MASP became active
****03-06-11  11:19:51****
5001.0009      CARD 1115 EOAM           MASP became active
****03-06-11  10:00:46****
5019.0109      IMT SYSTEM               All IMT System level alarms cleared
****03-06-11  10:00:45****
5018.0106      IMT BUS B               IMT Bus alarm cleared
****03-06-11  10:00:45****
5017.0106      IMT BUS A               IMT Bus alarm cleared
****03-06-11  10:00:45****
5016.0014      CARD 1107 SS7ANSI       Card is present
          ASSY SN: 10200301518
****03-06-11  10:00:45****
5015.0111 **    IMT SYSTEM             Failure on both IMT A and IMT B
UAM Report terminated - 11 records displayed
END OF LOG REPORT.

```

;

The following example shows all the records in the log in the backwards direction (UAMs and UIMs).

rtrv-log:type=all

```

tekelecstp 06-01-06 09:16:20 EST  EAGLE 35.0.0
Card 1113; SYS REL= 35.0.0; STP CLLI=  tekelecstp; Timezone= ****

****06-01-06  09:06:49****
0002.0009      CARD 1113 EOAM           MASP became active
****06-01-06  09:11:16****
0004.0143 *    CARD 1113 EOAM           System release GPL(s) not approved
****06-01-06  09:13:54****
0005.0048 *    TERMINAL      4          Terminal failed
****06-01-06  09:13:59****
0006.0046      TERMINAL      2          Terminal enabled
UAM Report terminated - end of log reached

;

tekelecstp 06-01-06 09:16:22 **** EST  EAGLE 35.0.0
Card 1113; SYS REL= 35.0.0; STP CLLI=  tekelecstp; Timezone= ****

****Logged 06-01-06  09:10:43****
0003.1083      SYSTEM          INFO      REPT COND: system alive
          Report Date:06-01-06  Time:09:10:43
****Logged 06-01-06  09:15:43****
0007.1083      SYSTEM          INFO      REPT COND: system alive
          Report Date:06-01-06  Time:09:15:43
UIM Report terminated - end of log reached
END OF LOG REPORT.

```

;

rtrv-ls

Retrieve Linkset

Use this command to show the linkset information.

Keyword: **rtrv-ls**

Related Commands: **chg-ls, dlt-ls, rtrv-ls**

Command Class: Database Administration

Parameters

:itutfr= (optional)

ITU TFR (Transfer Restricted) procedure indicator. This parameter displays the linksets that have the specified value of the **itutfr** parameter.

This parameter is valid for ITU national linksets only.

Range: **on, off**

Default: Display all link sets

:lsn= (optional)

Linkset name

Range: ayyyyyyyyy

1 alphabetic character followed by up to 9 alphanumeric characters

Default: Display all link sets

:mtpsrse= (optional)

ANSI or ITU MTP Restart equipped. This parameter specifies whether the node adjacent to the linkset is equipped with MTP Restart.

Range: **yes, no**

yes — equipped

no — not equipped

Default: Display all link sets

:slsocbit= (optional)

Other CIC (Circuit Identification Code) Bit. This parameter displays all the linksets that have the **slsocbit** parameter set to a value from 5 to 16.

Range: *

* — Specifies all possible values (5-16)

Default: Display all link sets

:slsrsb= (optional)

Rotated SLS (Signaling Link Selection) Bit. This parameter displays the linksets with the specified rotated bit.

Range: **1-4**

Default: Display all link sets

Example

Display the attributes of all link sets:

rtrv-ls

Retrieve link set ls1:

rtrv-ls:lsn=ls1

Retrieve all link sets with the mtpsrse parameter set to yes:

rtrv-ls:mtpsrse=yes

Retrieve all link sets that use the slsocbit parameter with a value from 5 to 16:

rtrv-ls:slsocbit=*

Display a specified ITU linkset to view the settings for the slsrsb or slsocbit parameters:

rtrv-ls:lsn=lsitu

Retrieve all ITU national linksets that have the itutfr parameter set to on:

rtrv-ls:itutfr=on

Retrieve the specified ITU national linkset and display its setting for the itutfr parameter:

rtrv-ls:lsn=lsitun

Dependencies

The specified linkset must be in the database.

If the **slsocbit** or **slsrsb** parameter is specified, the **mtpsrse** parameter cannot be specified.

If the **lsn** parameter or the **itutfr** parameter is specified, the linkset name must be an ITU national linkset.

If the **lsn** parameter is specified, all other optional parameters are ignored. If the **lsn** parameter is not specified, only 1 optional parameter can be specified per command except for the combination of the **slsocbit** and **slsrsb** parameters.

Notes

This command can be canceled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

The CLLI, TFATCABMLQ, MTPRSE, and ASL8 fields are displayed only when a specific linkset is specified. The SLSOCBIT and SLSRSB fields are displayed only when a specific linkset is specified, and the linkset must be an ITU linkset.

If the **tfatcabmlq** parameter database value is **0** for a linkset, the value displayed is one-half the number of links assigned to the given linkset (or **1** if there are 3 or fewer links in the linkset).

When the **tfatcabmlq** parameter database value is **0**, the TFA/TCA broadcast minimum link quantity is calculated by the EAGLE 5 ISS to be either a minimum of **1** for linksets containing 3 or fewer links, or half of the number of links configured in the linkset for linksets containing more than 3 links. The calculated value is displayed in the **rtrv-ls** command output.

When the **tfatcabmlq** parameter value is set to a specific value greater than **0**, the EAGLE 5 ISS does not calculate a TFA/TCA broadcast minimum link quantity. The provisioned value is displayed in the **rtrv-ls** command output.

The EAGLE 5 ISS **ent-ls** command allows 10-character linkset names, but entering a linkset name through SEAS is still restricted to 8 characters. In SEAS, a specific linkset with a name greater than 8 characters (entered using the EAGLE 5 ISS command) cannot be retrieved by name. If an asterisk is used for the linkset name in the SEAS **vfyls** command, all linksets will be shown; however, the linkset names that are more than 8 characters will have only the first 8 characters shown. Therefore it may appear that there are duplicate linkset names in SEAS **vfyls** output, but all linkset names are actually unique.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (**s-**) and the private and spare point code subtype prefix (**ps-**). All of the point code types support the private (internal) point code subtype prefix (**p-**).

Output

The following example displays the attributes of all linksets.

rtrv-ls

tekelecstp 06-09-26 20:11:43 EST EAGLE 35.1.0

LSN	APCA	(SS7)	SCRN	SET	SET	BEI	LST	LNKS	ACT	MES	DIS	SLSCI	NIS
lsa1111	011-001-001	none	1	1	no	A	1	1	off	off	off	no	off
lsa1112	011-001-002	none	1	1	no	A	1	1	off	off	off	no	off
lsa1121	011-002-001	none	1	1	no	A	1	1	off	off	off	no	off
lsa1122	011-002-002	none	1	1	no	A	1	1	off	off	off	no	off
lsa111111	011-011-011	none	1	1	no	A	1	1	off	off	off	no	off

LSN	APCA	(X25)	SCRN	SET	SET	BEI	LST	LNKS	ACT	MES	DIS	SLSCI	NIS

LSN	APCI	(SS7)	SCRN	SET	SET	BEI	LST	LNKS	ACT	MES	DIS	SLSCI	NIS
lsi311	3-001-1	none	1	2	no	A	0	0	off	off	off	---	off

LSN	APCN	(SS7)	SCRN	SET	SET	BEI	LST	LNKS	ACT	MES	DIS	SLSCI	NIS

LSN	APCN24	(SS7)	SCRN	SET	SET	BEI	LST	LNKS	ACT	MES	DIS	SLSCI	NIS
lsn24	024-024-024	none	1	2	no	A	0	0	off	off	off	---	off

LSN (CHINA)	APCN	(SS7)	SCRN	SET	SET	BEI	LST	LNKS	ACT	MES	DIS	SLSCI	NIS

LSN (CHINA)	APCN24	(SS7)	SCRN	SET	SET	BEI	LST	LNKS	ACT	MES	DIS	SLSCI	NIS

Link set table is (7 of 1024) 1% full.

;

In the following example for the specified linkset:

- The TFATCABMLQ and MTPRSE fields are displayed only when a specific link set is specified.
- The SLSOCBIT and SLSRSB fields are not displayed for ANSI link sets.

rtrv-ls:lsn=ls1

tekelecstp 06-09-05 01:33:29 EST EAGLE 36.0.0

LSN	APCA	(SS7)	SCRN	SET	SET	BEI	LST	LNKS	ACT	MES	DIS	SLSCI	NIS
ls1	003-003-003	gws1	1	1	no	A	15	15	on	on	on	yes	off

CLLI	TFATCABMLQ	MTPRSE	ASL8	IPGWAPC
-----	7	---	no	no

IPGWAPC	MATELSN	IPTPS	LSUSEALM	SLKUSEALM
no	-----	---	---	---

L2T	L1	PCR	PCR

LOC	PORT	SLC	TYPE	SET	BPS	MODE	TSET	ECM	N1	N2
1101	A	0	LIMDS0	1	56000	---	---	BASIC	---	---
1201	A	5	IPLIM							

LOC	PORT	SLC	TYPE	LP SET	BPS	ATM TSEL	VCI	VPI	LL
1102	A	2	LIMATM	1	1544000	EXTERNAL	5	0	0

LOC	PORT	SLC	TYPE	LP SET	BPS	ATM TSEL	VCI	VPI	E1ATM CRC4	SI	SN
1205	A	6	LIME1	1	56000	BASIC	---	---	1205	1	1

LOC	PORT	SLC	TYPE	L2T SET	BPS	ECM	PCR N1	PCR N2	E1 LOC	E1 PORT	TS
1206	A	10	LIMT1	1	56000	BASIC	---	---	1206	1	1

Link set table is (7 of 1024) 1% full.

;

In the following example for a specified linkset:

- The TFATCABMLQ and MTPRSE fields are displayed only when a specific link set is specified. In this example, link set **XZ172261**'s TFACABMLQ and MTPRSE attribute values are "---" because these attributes are not supported for link sets terminating in the X.25 domain. The FE-PC of this link set has no CLLI; therefore the CLLI is shown as "-----".
- The SLSOCBIT and SLSRSB fields are not displayed for ANSI link sets.

rtrv-ls:lsn=xz172261

tekelecstp 06-09-05 01:33:29 EST EAGLE 36.0.0

LSN	APCA	(SS7)	SCRN	L3T SET	SLT SET	BEI	LST	LNKS	GWS ACT	GWS MES	GWS DIS	SLSCI	NIS
xz172261	240-021-000	scr1	1	1	yes	a	1	off	off	off	---	off	

CLLI	TFATCABMLQ	MTPRSE	ASL8
-----	--	---	----

IPGWAPC	MATELSN	IPTPS	LSUSEALM	SLKUSEALM
no	-----	---	---	---

LOC	PORT	SLC	TYPE	L2T SET	BPS	L1 MODE	TSET	ECM	PCR N1	PCR N2
1205	a	0	LIMV35	1	56000	---	---	BASIC	---	---

Link set table is (114 of 1024) 12% full

;

In the following example for the specified IPGW linkset:

- The MATELSN field is shown when a specific IP Gateway linkset is specified (IPGWAPC=yes).
- IPTPS, LSUSEALM, and SLKUSEALM values are shown when a specific IP Gateway linkset is specified (IPGWAPC=yes). The values shown are either the default values or the provisioned values if the default was changed.

rtrv-ls:lsn=ipgw3

tekelecstp 06-09-05 01:33:29 EST EAGLE 36.0.0

L3T	SLT	GWS	GWS	GWS


```

LSN          APCA  (SS7)  SCRN  SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
ipgw3        1-115-0      none  1  1  no  A   8   off off off  ---  on

CLLI          TFATCABMLQ MTPRSE ASL8 SLSRSB ITUTFR
-----      5          no    ---  1      off

IPGWAPC MATELSN IPTPS  LSUSEALM  SLKUSEALM
yes      ---    2000    100      80

LOC  LINK SLC TYPE      L2T      L1      PCR  PCR
SET  BPS  MODE TSET  ECM  N1  N2

LOC  LINK SLC TYPE      LP      ATM
SET  BPS  TSEL      VCI      VPI  LL

LOC  LINK SLC TYPE      LP      ATM
SET  BPS  TSEL      VCI  VPI  CRC4 SI SN

LOC  LINK SLC TYPE      IPLIML2

LOC  LINK SLC TYPE
1301 A   0  SS7IPGW
1302 A   1  SS7IPGW
1303 A   2  SS7IPGW
1304 A   3  SS7IPGW
1305 A   4  SS7IPGW
1306 A   5  SS7IPGW
1307 A   6  SS7IPGW
1308 A   7  SS7IPGW

LOC  LINK SLC TYPE      L2T      PCR  PCR  E1  E1
SET  BPS  ECM  N1  N2  LOC  PORT TS

LOC  LINK SLC TYPE      L2T      PCR  PCR  T1  T1
SET  BPS  ECM  N1  N2  LOC  PORT TS

```

Link set table is (10 of 1024) 1% full.

;

The following example displays all the linksets with the **mtprse** parameter set to **yes**. The output appears the same as the **rtrv-ls** output, but the command filters the output to display only the link sets that have the specified value of the **mtprse** parameter.

rtrv-ls:mtprse=yes

tekelecstp 06-09-05 01:33:29 EST EAGLE 36.0.0

```

LSN          APCA  (SS7)  SCRN  SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
wy644368     240-020-000 SEAS  1  1  yes a   4   off off off  no  off
wy644389     240-030-000 scr1  1  2  no  c   3   on  on  on   yes

LSN          APCA  (SS7)  SCRN  SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
xz172261     240-021-000 scr1  1  1  yes a   1   off off off  --- off

LSN          APCA  (SS7)  SCRN  SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
ia125167     1-111-1      scr1  1  1  yes a   1   off off off  --- off
ib237261     1-111-2      scr2  1  2  no  c   3   on  on  on   --- off
ic383726     1-111-3      scr3  1  3  yes c   5   off off off  --- off

LSN          APCA  (SS7)  SCRN  SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
nd147271     11111      scr1  1  1  yes a   1   off off off  --- off
ne238271     11112      scr2  1  2  no  c   3   on  on  on   --- on
nf373762     11113      scr3  1  3  yes c   5   off off off  --- off

```

Link set table is (114 of 1024) 12% full

;

The following example displays all the linksets with the **slsobit** parameter set to a value from 5 to 16. The output appears the same as the **rtrv-ls** output, but the command filters the output to display only the link sets that have the specified value of the **slsobit** parameter.

rtrv-ls:slsobit=*

tekelecstp 06-09-05 01:33:29 EST EAGLE 36.0.0

LSN	APCI	(SS7)	SCRN	L3T	SLT	BEI	LST	LNKS	ACT	MES	DIS	SLSCI	NIS
lsitu	1-067-0		none	1	2	no	C	1	off	off	off	---	---

Link set table is (114 of 1024) 12% full

;

The following example shows IPGWAPC information for a specific ANSI linkset.

rtrv-ls:lsn=ls1105

tekelecstp 06-09-05 01:33:29 EST EAGLE 36.0.0

LSN	APCA	(SS7)	SCRN	L3T	SLT	BEI	LST	LNKS	ACT	MES	DIS	SLSCI	NIS
ls1105	241-031-001		none	1	1	no	a	1	off	off	off	no	off

CLLI	TFATCABMLQ	MTPRSE	ASL8	IPGWAPC
-----	1	no	no	yes

LOC	PORT	SLC	TYPE	L2T	BPS	L1	TSET	ECM	PCR	PCR
				SET		MODE			N1	N2
1105	A	0	SS7IPGW							

LOC	PORT	SLC	TYPE	LP	BPS	ATM	VC1	VPI	LL
				SET		TSEL			

Link set table is (114 of 1024) 12% full.

;

The following example shows output that includes a multi-port LIM:

rtrv-ls:lsn=ls1

tekelecstp 06-09-05 01:33:29 EST EAGLE 36.0.0

LSN	APCA	(SS7)	SCRN	L3T	SLT	BEI	LST	LNKS	ACT	MES	DIS	SLSCI	NIS
LS1	240-020-000		none	1	2	no	C	8	off	off	off	no	off

CLLI	TFATCABMLQ	MTPRSE	ASL8	IPGWAPC
-----	4	no	no	no

LOC	PORT	SLC	TYPE	L2T	BPS	L1	TSET	ECM	PCR	PCR
				SET		MODE			N1	N2
1201	A	0	LIMDS0	1	56000	---	---	BASIC	---	---
1201	A3	1	LIMDS0	2	56000	---	---	BASIC	---	---
1202	A1	2	LIMDS0	3	56000	---	---	BASIC	---	---
1202	B	3	LIMDS0	4	56000	---	---	BASIC	---	---
1202	B1	4	LIMDS0	5	56000	---	---	BASIC	---	---
1202	A2	5	LIMDS0	6	56000	---	---	BASIC	---	---
1202	B2	6	LIMDS0	7	56000	---	---	BASIC	---	---
1202	B3	7	LIMDS0	8	56000	---	---	BASIC	---	---

LOC	PORT	SLC	TYPE	LP	BPS	ATM	VC1	VPI	LL
				SET		TSEL			

Link set table is (51 of 1024) 5% full.

;

The following example shows output that includes a multi-port LIM:

rtrv-ls:lsn=ls1

tekelecstp 06-09-05 01:33:29 EST EAGLE 36.0.0

LSN	APCA (SS7)	SCRN	L3T SET	SLT SET	BEI	LST	LNKS	GWS ACT	GWS MES	GWS DIS	SLSCI	NIS
LS1	240-020-000	none	1	2	no	C	8	off	off	off	no	off

CLLI	TFATCABMLQ	MTPRSE	ASL8	IPGWAPC
-----	4	no	no	no

LOC	PORT	SLC	TYPE	L2T SET	BPS	L1 MODE	TSET	ECM	PCR N1	PCR N2
1201	A	0	LIMDS0	1	56000	---	---	BASIC	---	---
1201	A3	1	LIMDS0	2	56000	---	---	BASIC	---	---
1202	A1	2	LIMDS0	3	56000	---	---	BASIC	---	---
1202	B	3	LIMDS0	4	56000	---	---	BASIC	---	---
1202	B1	4	LIMDS0	5	56000	---	---	BASIC	---	---
1202	A2	5	LIMDS0	6	56000	---	---	BASIC	---	---
1202	B2	6	LIMDS0	7	56000	---	---	BASIC	---	---
1202	B3	7	LIMDS0	8	56000	---	---	BASIC	---	---

LOC	PORT	SLC	TYPE	LP SET	BPS	ATM TSEL	VCI	VPI	LL

Link set table is (51 of 1024) 5% full.

;

The following example shows output that includes an E1 card.

rtrv-ls:lsn=ls1

tekelecstp 06-09-05 01:33:29 EST EAGLE 36.0.0

LSN	APCA (SS7)	SCRN	L3T SET	SLT SET	BEI	LST	LNKS	GWS ACT	GWS MES	GWS DIS	SLSCI	NIS
ls1	003-003-003	none	1	1	no	A	14	off	off	off	no	off

CLLI	TFATCABMLQ	MTPRSE	ASL8	IPGWAPC
-----	72	---	no	no

LOC	PORT	SLC	TYPE	L2T SET	BPS	L1 MODE	TSET	ECM	PCR N1	PCR N2
1101	B3	1	LIMDS0	1	56000	---	---	BASIC	---	---
1201	A	5	IPLIM							

LOC	PORT	SLC	TYPE	LP SET	BPS	ATM TSEL	VCI	VPI	LL
1103	A	3	LIMATM	1	1544000	EXTERNAL	5	0	0

LOC	PORT	SLC	TYPE	L2T SET	BPS	ECM	PCR N1	PCR N2	E1 LOC	E1 PORT	E1 TS
1205	A1	7	LIME1	1	56000	BASIC	---	---	1205	1	2

Link set table is (7 of 1024) 1% full.

;

The following example includes an IPLIMx to 8 Points card.

rtrv-ls:lsn=ls1

tekelecstp 06-09-18 01:33:29 EST EAGLE 36.0.0

LSN	APCA (SS7)	SCRN	L3T SET	SLT SET	BEI	LST	LNKS	GWS ACT	GWS MES	GWS DIS	SLSCI	NIS
ls1	003-003-003	gws1	1	1	no	A	15	on	on	on	yes	off

CLLI	TFATCABMLQ	MTPRSE	ASL8	IPGWAPC

```

----- 75          --- no no

LOC  PORT  SLC  TYPE      L2T      L1      PCR  PCR
1101 A      0  LIMDS0    SET  BPS  MODE TSET  ECM  N1  N2
                        1    56000  ---  ---  BASIC ---  -----

LOC  PORT  SLC  TYPE      LP      ATM      VCI  VPI  LL
1102 A      2  LIMATM    SET  BPS  TSEL  LINE  5    0    0

LOC  PORT  SLC  TYPE      LP      ATM      VCI  VPI  CRC4 SI SN
                        SET  BPS  TSEL  LINE  5    0    0

LOC  PORT  SLC  TYPE      IPLIML2
1201 A      5  IPLIM    SAALTALI

LOC  PORT  SLC  TYPE

LOC  PORT  SLC  TYPE      L2T      PCR  PCR  E1  E1
1205 A      6  LIME1    SET  BPS  ECM  N1  N2  LOC  PORT TS
                        1    56000  BASIC ---  ----- 1205 1    1

LOC  PORT  SLC  TYPE      L2T      PCR  PCR  T1  T1
1206 A      10 LIMT1    SET  BPS  ECM  N1  N2  LOC  PORT TS
                        1    56000  BASIC ---  ----- 1206 1    1

```

Link set table is (7 of 1024) 1% full.

;

The following example shows the GSMSCRN value for an ANSI linkset.

rtrv-ls:lsn=lsa

tekelecstp 06-09-05 01:33:29 EST EAGLE 36.0.0

```

LSN      APCA  (SS7)  SCRNL3T SLT      GWS GWS GWS
lsa      003-003-003  none  SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
                        1  1  no  A  0  off off off no  off

CLLI      TFATCABMLQ MTPRSE ASL8 GSMSCRN IPGWAPC
----- 1          --- no off no

LOC  PORT  SLC  TYPE      L2T      L1      PCR  PCR
                        SET  BPS  MODE TSET  ECM  N1  N2

LOC  PORT  SLC  TYPE      LP      ATM      VCI  VPI  LL
                        SET  BPS  TSEL  LINE  5    0    0

LOC  PORT  SLC  TYPE      LP      ATM      VCI  VPI  CRC4 SI SN
                        SET  BPS  TSEL  LINE  5    0    0

LOC  PORT  SLC  TYPE      IPLIML2

LOC  PORT  SLC  TYPE

LOC  PORT  SLC  TYPE      L2T      PCR  PCR  E1  E1
                        SET  BPS  ECM  N1  N2  LOC  PORT TS

LOC  PORT  SLC  TYPE      L2T      PCR  PCR  T1  T1
                        SET  BPS  ECM  N1  N2  LOC  PORT TS

```

Link set table is (3 of 1024) 1% full.

;

The adjacent point code (APCA/APCI/APCN) values shown in the following example include adjacent spare point codes (prefix **s-**), adjacent private point codes (prefix **p-**), and adjacent private and spare point codes (prefix **ps-**).

rtrv-ls

```
tekelecstp 06-09-05 10:12:31 EST EAGLE 36.0.0
```

LSN	APCA	(SS7)	SCRN	L3T	SLT	BEI	LST	LNKS	GWS	GWS	GWS	SLSCI	NIS
				SET	SET				ACT	MES	DIS		
lsa1	001-001-002		none	1	1	no	A	0	off	off	off	no	off
lsa2	p-001-002-004		none	1	1	no	A	0	off	off	off	no	off
lsa3	p-001-002-005		none	1	1	no	A	0	off	off	off	no	off

LSN	APCA	(X25)	SCRN	L3T	SLT	BEI	LST	LNKS	GWS	GWS	GWS	SLSCI	NIS
				SET	SET				ACT	MES	DIS		

LSN	APCI	(SS7)	SCRN	L3T	SLT	BEI	LST	LNKS	GWS	GWS	GWS	SLSCI	NIS
				SET	SET				ACT	MES	DIS		
lsn1	s-1-002-3		none	1	2	no	A	1	off	off	off	---	off
lsn2	s-2-002-2		none	1	2	no	A	1	off	off	off	---	off
lsn3	s-2-100-1		none	1	2	no	A	1	off	off	off	---	off
lsn4	s-2-012-1		none	1	2	no	A	1	off	off	off	---	off
lsn5	2-100-1		none	1	2	no	A	1	off	off	off	---	off
lsn6	s-3-134-1		none	1	2	no	A	1	off	off	off	---	off

LSN	APCN	(SS7)	SCRN	L3T	SLT	BEI	LST	LNKS	GWS	GWS	GWS	SLSCI	NIS
				SET	SET				ACT	MES	DIS		
lsn410234	ps-1-1-1-2047-aa		none	1	2	no	B	0	off	off	off	---	off
lsn410235	p-1-1-1-0059-aa		none	1	2	no	B	0	off	off	off	---	off
lsn4102356	ps-1-1-1-0234-aa		none	1	2	no	B	0	off	off	off	---	off

LSN	APCN24	(SS7)	SCRN	L3T	SLT	BEI	LST	LNKS	GWS	GWS	GWS	SLSCI	NIS
				SET	SET				ACT	MES	DIS		

LSN (CHINA)	APCN	(SS7)	SCRN	L3T	SLT	BEI	LST	LNKS	GWS	GWS	GWS	SLSCI	NIS
				SET	SET				ACT	MES	DIS		

LSN (CHINA)	APCN24	(SS7)	SCRN	L3T	SLT	BEI	LST	LNKS	GWS	GWS	GWS	SLSCI	NIS
				SET	SET				ACT	MES	DIS		

Link set table is (12 of 1024) 1% full.

;

Legend

LSN—The name of the linkset. When CHINA appears after the LSN heading, each linkset that is listed under the heading was defined with the **apcntype=itunchina** parameter specified.

APC/APCI/APCN/APCN24—The adjacent DPC of the linkset.

SCRN—The screen set assigned to the linkset.

L3TSET—The level 3 timer set value assigned to the linkset.

SLTSET—The SLTM record associated with the linkset.

BEI—The broadcast exception indicator. This field indicates whether TFP (transfer prohibited) messages are allowed to be broadcast on the linkset.

LST—The type of links in the linkset (access links, bridge links, etc.).

LNKS—The number of links in the linkset.

GWSA—Shows whether gateway screening is used on the specified linkset.

GWSM—Shows whether the display of messages generated for each screened message is turned on or off.

GWSD—Shows whether the gateway screening message discard function is turned on or off.

SLSCI—Shows whether the 5-to-8-bit SLS conversion feature is to be used to select links for outgoing messages directed to the given linkset.

NIS—Shows whether the Network Indicator Spare option is on or off for the specified linkset.

CLLI—The far end Common Language Location Identifier (CLLI).

TFATCABMLQ—Displays the minimum number of links in the given linkset (or in the combined linkset in which it resides) that must be available to user-part messages traffic in order for the STP to consider the first-choice ordered routes using that linkset as allowed rather than restricted.

MTPRSE—Shows whether the adjacent node is equipped with MTP restart.

ASL8—Shows whether the adjacent node is sending MSUs with 8-bit SLSSs.

MULTGC—Shows whether multiple group codes are allowed.

IPGWAPC—Shows whether the adjacent point code is an IP Gateway adjacent point code.

MATELSN—The name of the mate IP Gateway linkset.

IPTPS—Provisioned or default TPS for the specific IPGWx linkset. This value is a user-defined or default portion of the total enabled system IP Signaling TPS.

LSUSEALM—The percent of the linkset TPS (**iptps**) at which an alarm is generated to indicate that the actual linkset TPS is approaching the configured **iptps** value for the linkset.

SLKUSEALM—The percent of the link "fair share" TPS at which an alarm is generated to indicate that the actual link TPS is approaching the link's "fair share" of its linkset's configured TPS (**iptps**). The "fair share" of the linkset TPS for a link is the configured linkset TPS divided by the number of in-service links in the linkset.

LOC—The location of the card containing the signaling links that make up the linkset.

PORT—The port on the card containing the signaling link.

SLSOCBIT—The setting of the Other CIC (Circuit Identification Code) Bit.

SLRSB—The setting of the Rotated SLS (Signaling Link Selection) Bit.

GSMSCRN—Shows whether the GSM MAP screening indicator is turned on or off.

ITUTFR—Shows whether the ITU TFR procedure indicator is turned on or off.

L2TSET—The level 2 timer set value associated with the signaling link.

SLC—The signaling link code of the signaling link.

TYPE—The type of card.

BPS—The transmission rate for the link in bits per second.

L1MODE—The mode of operation used to select the link clocking source at layer 1.

TSET—An indicator of whether the transmitter signal element timing is on or off.

E1PORT—The E1 port with the E1 interface that services the link.

E1LOC—The card location of the E1 card with the E1 interface that services the link.

T1PORT—The T1 port with the T1 interface that services the link.

T1LOC—The card location of the T1 card with the T1 interface that services the link.

TS—The timeslot assigned to the link that is serviced by the E1 or T1 interface.

E1ATMCRC4—The indicator of whether CRC4 multi-frame structure is enabled or disabled.

E1ATMSI—Value of two Spare International bits of NFAS data.

E1ATMSN—Value of five Spare National bits of NFAS data.

rtrv-m2pa-tset**Retrieve M2PA Timer Set**

Use this command to retrieve either one M2PA timer set or all M2PA timer sets

Keyword: **rtrv-m2pa-tset**

Related Commands: **chg-m2pa-tset**

Command Class: Database Administration

Parameters

:tset= (optional)

The name of the M2PA timer set to be retrieved.

Range: **1-20**

:ver= (optional)

The M2PA version supported by the association.

Range: **d6, rfc**

Example

rtrv-m2pa-tset

rtrv-m2pa-tset:tset=1

Dependencies

None

Notes

If a timer set is not specified in the command, all timer sets are retrieved.

Output

rtrv-m2pa-tset:tset=1:ver=d6

rlghncxa03w 06-01-18 08:16:14 EST EAGLE 34.3.0
M2PA Draft 6 Timers (in msec, T16 in microsec)

TSET	T1	T2	T3	T4N	T4E	T5	T6	T7	T16	T17	T18
1	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000

;

rtrv-m2pa-tset:tset=1:ver=rfc

rlghncxa03w 06-01-18 08:16:14 EST EAGLE 34.3.0
M2PA RFC Timers (in msec, T16 in microsec)

TSET	T1	T2	T3	T4N	T4E	T5	T6	T7	T16	T17	T18
1	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000

;

rtrv-m2pa-tset:tset=1

rlghncxa03w 06-01-18 08:16:14 EST EAGLE 34.3.0
M2PA Draft 6 Timers (in msec, T16 in microsec)

TSET	T1	T2	T3	T4N	T4E	T5	T6	T7	T16	T17	T18
1	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000

M2PA RFC Timers (in msec, T16 in microsec)

TSET	T1	T2	T3	T4N	T4E	T5	T6	T7	T16	T17	T18
1	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000

;

rtrv-m2pa-tset:ver=d6

rlghncxa03w 06-01-18 08:16:14 EST EAGLE 34.3.0
M2PA Draft 6 Timers (in msec, T16 in microsec)

TSET	T1	T2	T3	T4N	T4E	T5	T6	T7	T16	T17	T18
1	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
2	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
3	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
4	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
5	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
6	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
7	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
8	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
9	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
10	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
11	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
12	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
13	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
14	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
15	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
16	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
17	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
18	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
19	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
20	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000

;

rtrv-m2pa-tset:ver=rfc

rlghncxa03w 06-01-18 08:16:14 EST EAGLE 34.3.0
M2PA RFC Timers (in msec, T16 in microsec)

Commands

rtrv-m2pa-tset

TSET	T1	T2	T3	T4N	T4E	T5	T6	T7	T16	T17	T18
1	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
2	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
3	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
4	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
5	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
6	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
7	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
8	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
9	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
10	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
11	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
12	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
13	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
14	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
15	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
16	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
17	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
18	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
19	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
20	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000

;

rtrv-m2pa-tset

rlghncxa03w 06-01-18 08:16:14 EST EAGLE 34.3.0
M2PA Draft 6 Timers (in msec)

TSET	T1	T2	T3	T4N	T4E	T5	T6	T7	T16	T17	T18
1	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
2	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
3	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
4	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
5	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
6	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
7	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
8	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
9	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
10	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
11	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
12	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
13	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
14	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
15	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
16	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
17	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
18	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
19	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
20	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000

M2PA RFC Timers (in msec, T16 in microsec)

TSET	T1	T2	T3	T4N	T4E	T5	T6	T7	T16	T17	T18
1	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
2	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
3	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
4	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
5	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
6	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
7	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
8	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
9	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
10	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
11	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
12	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
13	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000

14	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
15	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
16	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
17	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
18	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
19	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
20	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000

;

rtrv-map**Retrieve Mate Applications**

Use this command to show the mated application relationship information maintained by the system. This information is used to support the routing of SCCP management SSP/SSA messages.

Keyword: rtrv-map

Related Commands: chg-map, dlt-map, ent-map

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:mapset= (optional)

The MAP set ID.

Range: 1-36000 dflt

dflt—Default MAP set

Default: **dflt** - The default value of the **mapset** parameter is **dflt** only when the Flexible GTT Load Sharing feature is not enabled.

:pc= (optional)

ANSI point code in the form of *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: pca

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001-005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006-255**.

The point code **000-000-000** is not a valid point code.

:pc/pca/pci/pcn/pcn24= (optional)

Point code.

:pci= (optional)

ITU international point code in the form of *zone-area-id*.

Range: s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—**0-7**

The point code **0-000-0** is not a valid point code.

:pcn= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:pcn24= (optional)

24-bit ITU national point code in the form of *main signaling area-sub signaling area-signaling point*.

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:ssn= (optional)

Subsystem number

Range: **2-255**

Default: All subsystem numbers and their mates are shown for the given point code.

Example

rtrv-map:pc=10-10-10:ssn=10

rtrv-map:pcn=12345:ssn=5

rtrv-map:pc=10-10-10:ssn=10

rtrv-map:pcn=12345:ssn=5

rtrv-map:pcn24=12-12-12

rtrv-map

rtrv-map:mapset=dflt

rtrv-map:pc=1-1-3

rtrv-map:pc=1-1-3:ssn=10

rtrv-map:pc=1-1-1:ssn=10:mapset=362

rtrv-map:pc=1-1-2:ssn=10:mapset=dflt

rtrv-map:mapset=2

rtrv-map:pc=1-1-3:mapset=12

Dependencies

The value of the **pc/pca/pci/pcn/pcn24** parameter must already exist in the MAP entity set. All subsystem numbers for the specified PC and mate are displayed.

The remote PC must be specified as a full PC.

Asterisk entries are not allowed.

If an SSN is specified, the PC/SSN pair must exist in the MAP table. The PC/SSN entry and its mate are shown.

The DPC of the primary subsystem must be a full PC.

If the SSN is specified, then the remote PC must be specified.

The Flexible GTT Load Sharing feature must be enabled before the **mapset** parameter can be specified.

The specified MAP set must exist in the database.

If the PC and MAP set are specified, and the SSN is not specified, then at least one entry for that PC/MAP set must exist in the MAP table.

If the PC, SSN, and MAP set are specified, then they must already be provisioned in the MAP table.

Notes

This command can be canceled using the **F9** function key or the **canc-cmd** command. See the **canc-cmd** command for more information.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (**s-**).

When the Flexible GTT Load Sharing feature is enabled, MAP Load Sharing sets are supported. Each set is identified by a MAPSET field.

When the Flexible GTT Load Sharing feature is not enabled, the MAP set is not displayed and the display remains unchanged.

Output

All subsystem numbers for the specified point code and its mates are shown.

If no parameters are entered, all defined remote point codes (up to 1024) are shown.

rtrv-map

```
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
MAP TABLE IS 1 % FULL (1 of 3000)
```

PCA	SSN	RC	MPCA	MSSN	MATERC	SRM	MRC	GRP	NAME
001-001-001	5	10							

;

For the PCN, the **chg-stpopts** command **npcfmti** parameter is set to a one-part format.

rtrv-map

```
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
MAP TABLE IS 1 % FULL (1 of 3000)
```

PCN	SSN	RC	MPCN	MSSN	MATERC	SRM	MRC	GRP	NAME
12345	5	10	12347	5	20				

;

In the following example, the ITUDUPPC (ITU National Duplicate Point Code) feature is on and the Flexible ITU Nnational Point Code STP option is enabled.

rtrv-map

```
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
MAP TABLE IS 1 % FULL (2 of 3000)
```

PCI	SSN	RC	MPCI	MSSN	MATERC	SRM	MRC	GRP	NAME
128-10-6-1-ab	5	0							
128-10-6-1-ab	5	20	121-11-3-2-bb	250	99	---	---	xyz	
			121-11-3-2-bb	50	99	---	---	abcdefgh	

;

In the following example, the Subsystem Status Option (**sso**) is set to **on**, and the XMAP feature is enabled for a maximum of 3000 MAP table entries.

rtrv-map

```
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
MAP TABLE IS 1 % FULL (1 of 3000)
```

PCA	SSN	RC	MPCA	SSN	MATERC	MULT	SRM	MRC	GRP	NAME	SSO
002-002-002	10	10					YES	YES	-----	ON	
			002-002-003	20	10	SHR	YES	YES	-----	ON	

;

rtrv-map:pcn24=12-12-12

```
tekelecstp 03-03-11 11:11:34 EST EAGLE 31.0.0
MAP TABLE IS 1 % FULL (2 of 1024)
```

	PCN24	SSN	RC	MULT	MPCN24	MSSN	MATERC	MULT	SRM	MRC	GRP	NAME	SSO
SSO	012-012-012	10	5	DOM						NO	NO	-----	
OFF					023-023-023	10	10	DOM	NO	NO	-----	OFF	

;

The following example includes spare point codes (prefix s-):

rtrv-map

```
tekelecstp 05-01-11 11:11:34 EST EAGLE 31.12.0
MAP TABLE IS 1 % FULL (9 of 1024)
```

PCA	SSN	RC	MULT	MATE	SRM	MRC	GRP	NAME	SSO
001-102-001	110	5	SHR		YES	YES			OFF
002-001-000	110	5	SHR		YES	YES			OFF
003-001-000	110	5	SHR		YES	YES			OFF
002-001-000	10	20	SOL						OFF
003-101-001	10	30	DOM		YES	YES	abcdefgh		OFF
003-001-000	10	40	DOM		YES	YES	abcdefgh		OFF
007-101-001	254	10	SOL						OFF
007-101-001	255	10	COM		YES	YES			OFF
007-001-000	251	10	COM		YES	YES			OFF
007-001-000	249	10	COM		YES	YES			OFF
007-001-000	253	15	COM		YES	YES			OFF

```
MAP TABLE IS 1 % FULL (9 of 1024)
```

PCI	SSN	RC	MULT	MATE	SRM	MRC	GRP	NAME	SSO
s-1-128-6	55	10	SOL						OFF

```
MAP TABLE IS 1 % FULL (9 of 1024)
```

PCN	SSN	RC	MULT	MATE	SRM	MRC	GRP	NAME	SSO
03-00-01-2-aa	55	10	DOM		NO	NO			OFF
s-09-14-05-3-ab	45	99	DOM		NO	NO			OFF

;

The following example shows output when the Flexible GTT Load Sharing feature is not enabled.

rtrv-map

```
tekelecstp 06-05-27 10:43:08 EST EAGLE 35.0.0
MAP TABLE IS 1 % FULL (4 of 1024)
```

PCA	SSN	RC	MULT	MATE	SRM	MRC	GRP	NAME	SSO
001-001-001	10	25	SHR						OFF
001-001-004	20	25	SHR						OFF
001-001-003	30	10	COM		NO	NO			OFF
001-010-010	30	30	COM		NO	NO			OFF

```

                                001-001-004    15 30 COM  YES YES  ----- OFF
                                001-001-004    5 25 SHR                      --- --- ----- OFF
                                001-001-001    50 25 SHR  --- --- ----- OFF
;

```

rtrv-map

```

tekelecstp 06-05-27 10:43:08 EST  EAGLE 35.0.0
MAP TABLE IS 1 % FULL (12 of 36000)

```

```

PCA          SSN RC MULT |-----MATE-----| SRM MRC GRP NAME SSO
                                PCA          SSN RC MULT
MAPSET ID = DFLT
001-001-004    25 10 DOM                                YES YES ----- OFF
                                001-001-004    10 15 DOM  YES YES ----- OFF
MAPSET ID = 121
001-001-006    15 10 SOL                                --- --- ----- OFF
MAPSET ID = DFLT
001-001-002    55  5 DOM                                YES YES ----- OFF
                                001-001-002    15 15 DOM  YES YES ----- ON
                                001-001-003    25 20 DOM  YES YES ----- ON
                                001-001-002    40 35 DOM  YES YES ----- OFF
MAPSET ID = 362
001-001-002    50  5 DOM                                YES YES ----- OFF
                                001-001-002    10 15 DOM  YES YES ----- ON
                                001-001-003    20 20 DOM  YES YES ----- ON
                                001-001-002    40 35 DOM  YES YES ----- OFF
MAPSET ID = 325
001-001-07     5 10 SOL                                --- --- ----- OFF
;

```

rtrv-map:mapset=dflt

```

tekelecstp 06-05-27 11:12:08 EST  EAGLE 35.0.0
MAP TABLE IS 1 % FULL (12 of 36000)

```

```

PCA          SSN RC MULT |-----MATE-----| SRM MRC GRP NAME SSO
                                PCA          SSN RC MULT
MAPSET ID = DFLT
001-001-004    25 10 DOM                                YES YES ----- OFF
                                001-001-004    10 15 DOM  YES YES ----- OFF
001-001-002    55  5 DOM                                YES YES ----- OFF
                                001-001-002    15 15 DOM  YES YES ----- ON
                                001-001-003    25 20 DOM  YES YES ----- ON
                                001-001-002    40 35 DOM  YES YES ----- OFF
;

```

rtrv-map:pc=1-1-2:ssn=55:mapset=dflt

```

tekelecstp 06-05-27 11:50:22 EST  EAGLE 35.0.0
MAP TABLE IS 1 % FULL (12 of 36000)

```

```

PCA          SSN RC MULT |-----MATE-----| SRM MRC GRP NAME SSO
                                PCA          SSN RC MULT
MAPSET ID = DFLT
001-001-002    55  5 DOM                                YES YES ----- OFF
                                001-001-002    15 15 DOM  YES YES ----- ON
                                001-001-003    25 20 DOM  YES YES ----- ON
                                001-001-002    40 35 DOM  YES YES ----- OFF
;

```

rtrv-map:pc=1-1-2:ssn=50:mapset=362

tekelecstp 06-05-27 11:50:22 EST EAGLE 35.0.0

```

MAP TABLE IS 1 % FULL (5 of 36000)
PCA          SSN RC MULT |-----MATE-----| SRM MRC GRP NAME SSO
                PCA          SSN RC MULT
MAPSET ID = 362
001-001-002 50 5 DOM                YES YES ----- OFF
                001-001-002 10 15 DOM YES YES ----- ON
                001-001-003 20 20 DOM YES YES ----- ON
                001-001-002 40 35 DOM YES YES ----- OFF

```

;

Legend

PC/PCA/PCI/PCN/PCN24—This field identifies the point code of the SCP where the primary application resides.

SSN—This field identifies the applications subsystem number.

RC—This field identifies the relative cost of the point code/subsystem.

MULT—Multiplicity mode (Solitary, Loadsharing, Dominant, Combined) See the "Notes" section in the **chg-map** command description for an explanation of multiplicity modes.

MPC—This field identifies the point code of the SCP where the mate application resides.

MSSN—This field identifies the mate applications subsystem number.

MATERC—This field identifies the mate relative cost.

SRM—This field specifies whether subsystem routing messages are transmitted.

MRC—This field specifies whether message routing under congestion is on or off.

GRP NAME—This field identifies the name of a group of point codes (the broadcast list group name) that should be notified of the subsystem status.

SSO—Subsystem Status Option. Indicates the subsystem status ("prohibited" or "allowed") for PC/SSN MAP entries.

MAPSET—MAP set

rtrv-meas-sched**Retrieve Measurements Schedule**

Use this command to retrieve the current scheduled measurement report(s) and collection settings.

Keyword: **rtrv-meas-sched**

Related Commands: **chg-meas, rept-meas**

Command Class: Link Maintenance

Parameters

This command has no parameters.

Example

rtrv-meas-sched

Dependencies

None

Notes

None

Output

Output with measurement collection on.

rtrv-meas-sched

```
rlghncxa03w 04-02-27 07:19:51 EST EAGLE 31.3.0
COLLECT      = on
GTWYLSFLTR   = both
-----
SYSTOT-STP   = on
SYSTOT-TT    = off
SYSTOT-STPLAN = off
COMP-LNKSET  = on
COMP-LINK    = on
GTWY-STP     = on
GTWY-LNKSET  = on
MTCD-STP     = on
MTCD-LINK    = on
MTCD-STPLAN  = on
MTCD-LNKSET  = on
;
```

Output with measurement collection off. The parentheses () indicate that a setting is not in effect because collection is turned off.

rtrv-meas-sched

```
rlghncxa03w 04-02-27 07:19:51 EST EAGLE 31.3.0
COLLECT      = off
GTWYLSFLTR   = (both)
-----
SYSTOT-STP   = (off)
SYSTOT-TT    = (off)
SYSTOT-STPLAN = (off)
COMP-LNKSET  = (off)
COMP-LINK    = (off)
GTWY-STP     = (off)
GTWY-LNKSET  = (off)
MTCD-STP     = (on)
MTCD-LINK    = (on)
MTCD-STPLAN  = (on)
MTCD-LNKSET  = (on)
;
```

Legend

COLLECT—Shows whether measurement collection is on or off.

GTWYLSFLTR—Shows the setting that filters the linksets included in the GTWY report. The settings are as follows:

both—Only gateway linksets are included in the report to the terminal and SEAS.

stp—Only gateway linksets are included in the report to the terminal. All defined linksets are included in the report to SEAS.

seas—All defined linksets are included in the report to the terminal. Only gateway linksets are included in the report to SEAS.

none—All defined linksets are included in the report to the terminal and SEAS.

SYSTOT-STP—System total–STP measurement collection is on or off.

SYSTOT-TT—System total–translation type measurement collection is on or off.

SYSTOT-STPLAN—System total–STP LAN measurement collection is on or off.

COMP-LNKSET—Component-linkset measurement collection is on or off.

COMP-LINK—Component-link measurement collection is on or off.

GTWY-STP—Gateway administration-STP measurement report is on or off.

GTWY-LNKSET—Gateway administration-LNKSET measurement report is on or off.

MTCD-STP—Maintenance daily-STP measurement collection is on or off.

MTCD-LINK—Maintenance daily-link measurement collection is on or off.

MTCD-STPLAN—Maintenance daily-STP LAN measurement collection is on or off.

MTCD-LNKSET—Maintenance daily-LNKSET measurement report is on or off.

Refer to the *Maintenance Manual* for specific details on measurement reports.

rtrv-measopts

Retrieve Measurement Options

Use this command for the following functions:

- Show the enabled/disabled status of all FTP scheduled measurements reports
- Verify that the Measurements Platform has been enabled (PLATFORMENABLE setting)
- Verify that the 15 Minute Measurements collection option has been turned on (COLLECT15MIN setting)
- Verify that the CLI-based report file name option is turned on or off (CLLIBASEDNAME setting)

Keyword: rtrv-measopts

Related Commands: chg-measopts

Command Class: Link Maintenance

Parameters

This command has no parameters.

Example

```
rtrv-measopts
```

Dependencies

The Measurements Platform feature must be on before this command can be entered.

This command cannot be entered while in upgrade mode.

Notes

None

Output**rtrv-measopts**

```
rlghncxa03w 03-03-07 00:57:31 EST EAGLE 31.3.0
EAGLE MEASUREMENT OPTIONS LIST
```

```
PLATFORMENABLE =on
```

```
COLLECT15MIN   = off
```

```
CLLIBASEDNAME  = on
```

```
-----
SYSTOTSTP      = on
SYSTOTTT       = off
SYSTOTSTPLAN   = on
COMPLINK       = off
COMPLNKSET     = on
GTWYSTP        = on
GTWYLNKSET     = on
GTWYORIGNI     = on
GTWYORIGNINC   = on
GTWYLSORIGNI   = on
GTWYLSDESTNI   = off
GTWYLSONISMT   = off
```

```
MTCHLNP        = on
MTCHNP         = off
MTCHMAP        = off
MTCHEIR        = off
MTCDESTP       = on
MTCDLINK       = off
MTCDLNKSET     = off
MTCDESTPLAN    = on
MTCDLNP        = on
MTCDNP         = on
MTCMAP         = on
MTCDEIR        = on
NMSTP          = on
NMLINK         = on
NMLNKSET       = on
AVLLINK        = on
AVLSTPLAN      = on
AVLDLINK       = on
```

```
;
```

Legend

PLATFORMENABLE—Indicator that measurements collection is enabled or disabled when the Measurements Platform feature is turned on. See the **chg-measopts** command.

COLLECT15MIN—Indicator that 15 Minute Measurements collection is enabled or disabled when the 15 Minute Measurements feature is turned on. See the **chg-measopts** command **collect15min** parameter.

CLLIBASEDNAME—Indicator that the CLI-based file name option is turned on or off.

SYSTOTSTP—System Total measurements report for the entire STP.

SYSTOTTT—System Total report for Translation Type measurements.

SYSTOTSTPLAN—System Total report STP LAN measurements.

COMPLINK—Component measurements report for a single link.

COMPLNKSET—Component measurements report for a link set.

GTWYORIGNI—Gateway Administration measurements report per originating network (large network uniquely identified by NI only).

GTWYORIGNINC—Gateway Administration measurements report per originating network (small network identified by NI-NC).

GTWYLSORIGNI—Gateway Administration measurements report per link set and originating network.

GTWYLSDESTNI—Gateway Administration measurements report per link set and destination network.

GTWYLSONISMT—Gateway Administration measurements report per link set, per originating network, per ISUP message type.

MTCHEIR—Maintenance Hourly (marginal) measurements report for Equipment Identity Register

MTCHNP—Maintenance Hourly (marginal) measurements report for INP or G-Port.

MTCHLNP—Maintenance Hourly (marginal) measurements report for LNP.

MTCHMAP—Maintenance Hourly (marginal) measurements report for GSM Map Screening.

MTCDEIR—Maintenance Daily measurements report for Equipment Identity Register

MTC DSTP—Maintenance Daily measurements report for STP.

MTC DLNK—Maintenance Daily measurements report for links.

MTC DLNKSET—Maintenance Daily measurements report for linksets.

MTC DSTPLAN—Maintenance Daily measurements report for STPLAN.

MTC DLNP—Maintenance Daily measurements report for LNP.

MTC DNP—Maintenance Daily measurements report for INP or G-Port.

MTC DMAP—Maintenance Daily measurements report for GSM Map Screening.

NMLINK—Network Management measurements report for a single link.

NMLNKSET—Network Management measurements report for a link set.

NMSTP—Network Management measurements report for the entire STP.

AVLINK—Hourly Availability report for a single link.

AVLSTPLAN—Hourly Availability report for STP LAN.

AVLDLINK—Daily Availability report for a single link.

rtrv-mem

Retrieve Allocated Memory

Use this command to display the objects in the EAGLE 5 ISS database.

NOTE: This command is obsolete.

NOTE: If the LNP ELAP Configuration feature is turned on, this command is no longer available. This function can be performed using the ELAP user interface to View RTDB Status.

Keyword: rtrv-mem

Related Commands: alloc-mem

Command Class: System Maintenance

Parameters

:obj= (mandatory)

The type of database object to create.

Range: lnp4digit, all

Default: all

Example

rtrv-mem:obj=lnp4digit

Dependencies

The LNP feature must be on (see the **enable-ctrl-feat** command) before the **rtrv-mem** command can be executed.

Notes

None

Output

```
rtrv-mem
rlghncxa03w 03-03-07 00:57:31 EST  EAGLE 31.3.0
LNP 4DIGIT OBJECT  %FULL
-----
LNP_4DIG.TBL      100
LNP4DIG1.TBL      100
LNP4DIG2.TBL      100
LNP4DIG3.TBL      100
LNP4DIG4.TBL      100
LNP4DIG5.TBL      50

LNP 4DIGIT database is (11000000 of 12000000) 92% full

rlghncxa03w 03-03-07 00:57:31 EST  EAGLE 31.3.0
Memory retrieval complete.
;
```

Legend

LNP 4DIGIT OBJECT—The name of each LNP 4DIGIT database object

%FULL—The capacity of each LNP 4DIGIT database object expressed as a percentage of the maximum number of ported telephone numbers each LNP 4DIGIT database object can contain.

rtrv-mrn

Retrieve Mated Relay Node

Use this command to display the Mated Relay Node application relationship information maintained by the EAGLE 5 ISS. This information is used to support the routing of SCCP management SSP/SSA messages.

If the Intermediate GTT Load-Sharing Feature and the Flexible GTT Load-Sharing feature are enabled, use this command to retrieve MRN set information.

Keyword: **rtrv-mrn**

Related Commands: **chg-mrn, dlt-mrn, ent-mrn**

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:mrnset= (optional)

The MRN set ID.

Range: **1-3000 dflt**

dflt—Default MRN set

:pc= (optional)

ANSI point code in the form of *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: **pca**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001-005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006-255**.

The point code **000-000-000** is not a valid point code.

:pc/pca/pci/pcn/pcn24= (optional)

Post-GTT-translated point code.

:pci= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:pcn= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:pcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—000–255

sp—000–255

Example

The following example retrieves the stored information for all point code groups in the MRN table.

rtrv-mrn

The following example retrieves the stored information for the point code group that contains the specified point code.

rtrv-mrn:pc=1-1-2

rtrv-mrn:pci=s-2-2-1

rtrv-mrn:pcn=s-1-1-1-123-aa

rtrv-mrn

rtrv-mrn:mrnset=dflt

rtrv-mrn:pc=1-1-3:mrnset=dflt

rtrv-mrn:pc=1-1-3:mrnset=111

Dependencies

A point code that is specified in the command must already exist in the MRN table.

The **mrnset** parameter can only be specified when the Flexible GTT Load-Sharing feature is enabled.

If the Flexible GTT Load-Sharing feature is ON, then the PC and MRN set must be specified together.

The specified MRN set must already exist in the MRN table.

If the Flexible GTT Load Sharing feature is enabled, then the specified PC must already exist in the specified MRN set.

Notes

This command can be canceled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-).

Output

rtrv-mrn

```
rlghncxa03w 03-03-20 09:07:58 EST EAGLE 31.3.0
```

PC	RC
1-1-0	05
1-1-1	10
1-1-2	20
1-1-3	20
1-1-4	40

PC	RC
1-2-1	20
1-1-7	25
1-1-8	30
1-3-2	30

;

rtrv-mrn

```
rlghncxa03w 05-01-07 09:07:58 EST EAGLE 31.12.0
```

PCI	RC
s-2-002-1	10
s-2-002-2	11
s-2-100-1	12

PC	RC
s-1-1-1-0123-aa	1
s-1-1-1-0235-aa	2
s-1-1-1-0235-aa	3

;

rtrv-mrn:pc=1-1-2

```
rlghncxa03w 03-03-20 09:07:58 EST EAGLE 31.3.0
```

PC	RC
1-1-0	05
1-1-1	10
1-1-2	20
1-1-3	20
1-1-4	40

;

rtrv-mrn:pci=s-2-2-1

```
rlghncxa03w 05-01-07 09:07:58 EST EAGLE 31.12.0
```

PCI	RC
s-2-002-1	10
s-2-002-2	11
s-2-100-1	12

;

rtrv-mrn:pcn=s-1-1-1-123-aa

```
rlghncxa03w 05-01-07 09:07:58 EST EAGLE 31.12.0
```

PCN	RC
s-1-1-1-0123-aa	1
s-1-1-1-0235-aa	2
s-1-1-1-0235-aa	3

;

The following example shows output when the Flexible GTT Load Sharing feature is on.

rtrv-mrn

```
tekelecstp 06-06-01 11:22:38 EST EAGLE 35.0.0
MRNSET PC RC
DFLT 001-001-001 10
      001-001-002 20
      001-001-003 30

MRNSET PC RC
110 001-001-001 10
     001-001-005 20
     001-001-006 30
     001-001-003 40
     001-001-008 50

MRNSET PC RC
111 001-001-001 30
     001-001-005 30
     001-001-006 30
     001-001-003 30
     001-001-008 30

MRNSET PC RC
112 001-003-001 10
     001-003-002 10
     001-003-003 30
     001-003-004 30
     001-003-006 60
     001-003-007 60
     001-003-008 80
     001-003-009 80

MRNSET PCN RC
113 s-1-1-1-0123-aa 1
     s-1-1-1-0235-aa 2
     s-1-1-1-0235-aa 3
;
```

rtrv-mrn:pc=1-3-1:mrnset=111

```
tekelecstp 06-06-01 11:22:38 EST EAGLE 35.0.0
MRNSET PC RC
111 001-001-001 30
     001-001-005 30
     001-001-006 30
     001-001-003 30
     001-001-008 30
;
```

In the following example, the MRN table limit is 3000 entries; 768 entries are used as Mated Relay Nodes and 12 entries are used for SCCP-SERV reroute.

The MRN table capacity value is adjusted to subtract any point code values allocated to support the SCCP-SERV reroute service. Note for this example only a few of the 768 entries are reported to conserve space.

rtrv-mrn

```
tklcl090701 06-05-24 14:40:05 EST 34.3.0

PC RC
060-040-008 10
060-040-001 10
060-040-002 10
060-040-003 10
060-040-004 10
060-040-005 10
```

060-040-006	10
060-040-007	10

PCN	RC
16319-aa	10
16311-aa	20
16303-aa	30
16295-aa	40
16287-aa	50
16279-aa	60
16271-aa	70
16263-aa	80

PCN	RC
16383-aa	10
16375-aa	20
16367-aa	30
16359-aa	40
16351-aa	50
16343-aa	60
16335-aa	70
16327-aa	80

MRN table is (768 of 2988) 26% full

;

In the following example, the MRN table limit is 6000 entries; 768 entries are used as Mated Relay Nodes and 12 entries are used for SCCP-SERV reroute.

The MRN table capacity value is adjusted to subtract any point code values allocated to support the SCCP-SERV reroute service. Note for this example only a few of the 768 entries are reported to conserve space.

rtrv-mrn

tklc1090701 06-05-24 14:40:05 EST EAGLE 34.3.0

PC	RC
060-040-008	10
060-040-001	10
060-040-002	10
060-040-003	10
060-040-004	10
060-040-005	10
060-040-006	10
060-040-007	10

PCN	RC
16319-aa	10
16311-aa	20
16303-aa	30
16295-aa	40
16287-aa	50
16279-aa	60
16271-aa	70
16263-aa	80

PCN	RC
16383-aa	10
16375-aa	20
16367-aa	30
16359-aa	40
16351-aa	50
16343-aa	60
16335-aa	70

```

16327-aa      80
MRN table is (768 of 5988) 26% full
;

```

Legend**MRNSET**—MRN set ID**PC/PCI/PCN**—Point Code**RC**—Relative Cost**rtrv-na****Retrieve Network Appearance**

Use this command to display the configured network appearances.

Keyword: **rtrv-na****Related Commands:** **dlt-na, ent-na****Command Class:** Database Administration**Parameters**

This command has no parameters.

Example**rtrv-na****Dependencies**

None

Notes

None

Output

```

rtrv-na
rlghncxa03w 05-01-20 09:07:58 EST EAGLE 31.12.0
TYPE      GC      NA
ANSI      --      0
ITUI      --      1
ITUN      aa      2
ITUN24    --      3
ITUIS     4
ITUNS     bb      5
;

```

rtrv-netopts**Retrieve Network Options**

Use this command to retrieve the user-specified options for the IP networks used by the EAGLE 5 ISS. This command displays the Private Virtual Network (PVN) IP address and PVN subnet mask.

Keyword: **rtrv-netopts****Related Commands:** **chg-netopts****Command Class:** Database Administration

Parameters

This command has no parameters.

Example

rtrv-netopts

Dependencies

None

Notes

None

Output

rtrv-netopts

```
rlghncxa03w 03-03-20 09:07:58 EST EAGLE 31.3.0
NET OPTIONS
```

```
-----
PVN          172.20.50.0
PVNMASK      255.255.252.0
```

```
;
```

rtrv-oap-config**Retrieve OAP Configuration**

Use this command to display the OAP configuration information in the EAGLE 5 ISS database configured with the **chg-oap-config** command.

Keyword: **rtrv-oap-config**

Related Commands: **chg-oap-config**

Command Class: Database Administration

Parameters

This command has no parameters.

Example

rtrv-oap-config

Dependencies

The Local Number Portability feature or the SEAS feature must be on (an LNP ported TNs quantity of up to 12000000 in the **rtrv-ctrl-feat** command output or **seas=on** in the **rtrv-feat** command output) before the **rtrv-oap-config** command can be entered.

Notes

None

Output

The output of the **rtrv-oap-config** command displays different fields depending on whether the SEAS feature is on, the LNP feature is on, or both features are on as shown in the following output examples.

In the following example, the SEAS feature is on.

rtrv-oap-config

```
rlghncxa03w 03-03-07 00:57:31 EST EAGLE 31.3.0
OAP CONFIGURATION REPORT
DATA                OAP A                OAP B
Hostname            tekelec-8            tekelec-9
IP Address          128.132.064.015        128.132.064.016
IP Netmask          255.255.255.000        255.255.255.000
Default Router      128.132.064.001        128.132.064.001
Config              dual                  dual
SEAC CLLI           SEASNJPYRRC           SEASNJPYRRC
X25 Packet Size     7                      7
X25 Mode            DTE                      DTE
;
```

Legend

HOSTNAME—Host name of OAP A or OAP B.

IP ADDRESS—IP address of OAP A or OAP B.

IP NETMASK—The netmask for OAP A or OAP B.

DEFAULT ROUTER—The IP address of the default router assigned to OAP A or OAP B.

CONFIG—The number of OAPs configured (single or dual).

SEAC CLLI—The common language location identifier (CLLI) of the SEAC to which the OAP connects.

X25 PACKET SIZE—The X.25 package size for the link to the SEAC (7 or 8).

X25 MODE—The mode of the X.25 link to the SEAC (DTE or DTC).

ACTIVE LSMS—The LSMS associated with the OAP (main or shadow).

MAIN LSMS NSAP—The network service access point of the main LSMS.

MAIN LSMS SSEL—The session selector of the main LSMS.

MAIN LSMS PSEL—The presentation selector of the main LSMS.

SHADOW LSMS NSAP—The network service access point of the shadow LSMS.

SHADOW LSMS SSEL—The session selector of the shadow LSMS.

SHADOW LSMS PSEL—The presentation selector of the shadow LSMS.

rtrv-obit

Retrieve Obituary Report

Use this command to show the obituaries that were most recently logged in the system. The report shows the obituaries from either the active or standby OAM, and the report indicates which card and processor generated the obituary.

An obituary is a set of data that describes the status of the system just before a processor restarted due to a fault in hardware or software. The data includes a register and stack dump of the processor, card location, reporting module number, software code location, and class of the fault detected.

Keyword: rtrv-obit

Related Commands: act-alm-trns, dact-alm-trns, rept-stat-clk, rept-stat-trbl, rls-alm, rtrv-trbl

Command Class: System Maintenance

Parameters

:loc= (mandatory)

The address of the card that is running the OAM from which the obituary information is to be retrieved.

Range: 1113, 1115

:mode= (optional)

Display mode

Range: c, m

c—Continuous mode; shows obituaries already logged and new obituaries as they occur.

m—Manual mode; shows obituaries on demand only, when thsi command is entered.

Default: c

:num= (optional)

This parameter indicates how many obituaries to display.

Range: 1-150

Default: 150

Example

rtrv-obit:loc=1115:num=2

Dependencies

The obituary log on the specified OAM must contain at least one obituary; otherwise, the command is rejected.

If the **mode** parameter is specified without the **num** parameter, the entire log is displayed.

Only one **rtrv-obit** or **rtrv-trbl** command at a time can be in progress throughout the entire system.

The card location specified by the **loc** parameter must be either **1113** or **1115**.

If the **loc** parameter specifies the card that is running the standby OAM, that card must be available.

Notes

This command can be canceled using the **F9** function key or the **canc-cmd** command when the command is entered for the active OAM. See **canc-cmd** for more information.

In most situations, obituary reports are generated automatically when a card is reset. Automatic report generation can be turned off by selecting the **mode=m** parameter for manual mode.

The obituary from a 186 processor displays the register dump and a 16-word stack dump.

The obituary from a 486 processor is different from 186 because the register set is larger. Also, only 12 words of the stack are dumped for the 486.

The obituary from an IXP-based processor card (which include HIPR and HC MIM cards) contains significantly more information than an obituary from an x86-based processor card. The data in an IXP obituary will be spread over multiple system buffers, where each buffer is logged and printed as an independent obituary. Sequence numbers are displayed in the output so that it is clear which buffers comprise a given obituary. There is an overall sequence number, and a sequence number within each class (such as IXP register set or user data) of information.

Output

The following example shows output for two obituaries from an x86-based card.

rtrv-obit:loc=1115:num=2

```
rlghncxa03w 03-03-30 08:43:14 EST EAGLE 31.3.0
```

```
-----
STH: Received a BOOT 286-obituary reply for 1 restart(s)
```

```
Primary: Card 1203 Module 4608 Mod_loc 1 Class 0080
```

```
Register Dump :
```

```
FL=338e CS=4a9c IP=01c0
AX=0000 CX=0100 DX=21c1 BX=078a
SP=01a6 BP=01a6 SI=0fe4 DI=3ece
DS=dce8 ES=21c1 SS=336b
```

```
Stack Dump :
```

```
[SP+1E]=3ece [SP+16]=46cc [SP+0E]=0001 [SP+06]=0246
[SP+1C]=078a [SP+14]=dce8 [SP+0C]=4608 [SP+04]=338e
[SP+1A]=078a [SP+12]=078a [SP+0A]=0001 [SP+02]=4a9c
[SP+18]=0100 [SP+10]=336b [SP+08]=0080 [SP+00]=01c0
```

```
STH: Received a BOOT 486-obituary reply for 1 restart(s)
```

```
Primary: Card 1213 Module 0047 Mod_loc 5 Class 0241
```

```
Register Dump :
```

```
EFL=00000000 CS =0208 EIP=0003e75f SS =0060
EAX=0009a90b ECX=0009a915 EDX=00000000 EBX=00000000
ESP=000ddaf2 EBP=000ddb6c ESI=00090241 EDI=00141df8
DS =0060 ES =0060 FS =0060 GS =0060
```

```
Stack Dump :
```

```
[ESP+2E]=0009 [ESP+28]=1df8 [ESP+22]=0000 [ESP+1C]=a915
[ESP+2C]=a90b [ESP+26]=0009 [ESP+20]=0000 [ESP+1A]=0009
[ESP+2A]=0014 [ESP+24]=a8c0 [ESP+1E]=0009 [ESP+18]=a90b
```

```
User Data Dump :
```

```
0a 06 00 00 46 01 08 04 00 00 00 ....F.....
```

```
Report Date:03-03-04 Time:09:19:59
```

```
;
```

The following example shows output for six obituaries from an IXP-based card.

rtrv-obit:loc=1113:num=6

```
rlghncxa03w 03-01-23 08:43:14 EST EAGLE 30.0.0
```

```
-----
STH: Received a BOOT IMT-obituary reply for 1 restart(s)
```

```
Card 1209 Module TKS_SBFR.C Line 728 Class 01cc
```

```
StrongARM Core Register Dump (1 of 1): [Overall: 1 of 6]
```

```
r0 =00008b22 r1 =00004e72 r2 =0003e75f r3 =0060024a
r4 =0004a92b r5 =000019c5 r6 =0000a57c r7 =00005521
r8 =0000b1f7 r9 =0000836c r10=0000e251 r11=00141d42
r12=006055a3 sp =0000727c lr =0000003f pc =00006429
```

```
Report Date:03-01-23 Time:12:20:45
```

```
rlghncxa03w 03-01-23 08:43:14 EST EAGLE 30.0.0
```

```
-----
STH: Received a BOOT IMT-obituary reply for 1 restart(s)
```

```
Card 1209 Module TKS_SBFR.C Line 728 Class 01cc
```

```
StrongARM Core Stack Dump (1 of 1): [Overall: 2 of 6]
```

```
System Mode Stack:
```

```
0000 15a3a816 0012be0a 06000046 01080400 .....
0010 00a2342c 07f7b83a 15729dd2 05580601 .....
0020 1a22a616 7072b91a 46304a44 06887400 .....
0030 25a33b12 01a4ba22 17e03026 11483402 .....
0040 00130811 0033a30a 14008149 0cab6130 .....
```

```

0050 00000000 00000000 00000000 00000000 .....
0060 15a3a816 0012be0a 06000046 01080400 .....
0070 00a2342c 07f7b83a 15729dd2 05580601 .....
0080 1a22a616 7072b91a 46304a44 06887400 .....
Abort Mode Stack:
0000 25a33b12 01a4ba22 17e03026 11483402 .....
0010 00130811 0033a30a 14008149 0cab6130 .....
0020 1a22a616 7072b91a 46304a44 06887400 .....
0030 25a33b12 01a4ba22 17e03026 11483402 .....
0040 00130811 0033a30a 14008149 0cab6130 .....
0050 00000000 00000000 00000000 00000000 .....
0060 15a3a816 0012be0a 06000046 01080400 .....
Report Date:03-01-23 Time:12:20:45
-----

```

```

rlghncxa03w 03-01-23 08:43:14 EST EAGLE 30.0.0
-----

```

STH: Received a BOOT IMT-obituary reply for 1 restart(s)

Card 1209 Module TKS_SBFR.C Line 728 Class 01cc

IXP Register Dump (1 of 2): [Overall: 3 of 6]

```

***** FBI Registers: *****
IREG =00000000          SOP_SEQ1=00000000
SOP_SEQ2=0003e75f       ENQUEUE_SEQ1=0060024a
ENQUEUE_SEQ2=0060024a   THREAD_DONE_REG0=00600231
THREAD_DONE_REG1=00600231 RCV_RDY_CNT=000012d4
RCV_RDY_HI =0009a90b    RCV_RDY_LO=00000000
RCV_RDY_CTL=0009a915    RCV_CNTL=00000000
REC_FASTPORT_CTL =000ddaf2 FLOWCTL_MASK =000ddb6c
RDYBUS_SYN_CNT_DEF=00090241 SELF_DESTRUCT=00141df8
HASH_MULTIPLIER_64_HI=006011a3 HASH_MULTIPLIER_64_LO=00000000
HASH_MULTIPLIER_48_HI=006011a3 HASH_MULTIPLIER_48_LO=00000000
GET_CMD=00000000        XMIT_RDY_LO=00000000
XMIT_RDY_HI=00000000    XMIT_RDY_CTL=00000000
XMIT_PTR =0003e75f

```

***** SDRAM Registers: *****

```

SDRAM_CSR=0060024a      SDRAM_MEMCTL0=0060024a
SDRAM_MEMCTL1=00600231  DRAM_MEMINIT=00600231

```

***** StrongARM System Registers: *****

```

PLL_CFG=0060024a        GPIO_EN=0060024a
GPIO_DATA=00600231      RTC_DIV=00600231
RTC_INIT=000012d4       RTC_TVAL=0009a90b
RTC_CNTR=00000000       RTC_ALM=0009a915
UART_SR=0009a915        UART_CR=00000000
UART_DR=00090241        TIMER_1_LOAD=000ddb6c
TIMER_2_LOAD=00090241   TIMER_3_LOAD=00141df8
TIMER_4_LOAD=00000000   TIMER_1_VALUE=00000000
TIMER_2_VALUE=006011a3  TIMER_3_VALUE=00000000
TIMER_4_VALUE=00090241  TIMER_1_CONTROL=00141df8
TIMER_2_CONTROL=00000000 TIMER_3_CONTROL=00000000
TIMER_4_CONTROL=006011a3 FIQ=00000000
IRQ=00000000

```

***** PCI Configuration Space Registers: *****

```

PCI_VEN_DEV_ID=0060024a  PCI_CMD_STAT=0060024a
PCI_REV_CLASS=00600231  PCI_CACHE_LAT_HDR_BIST=00600231
PCI_MEM_BAR=000012d4    PCI_IO_BAR=0009a90b
PCI_DRAM_BAR=00000000    PCI_SUBSYS=0009a915
PCI_INT_LAT=0009a915

```

***** PCI Shared Control Registers: *****

```

CAP_PTR_EXT=00090241    PWR_MGMT=000ddb6c
IXP1200_RESET=00090241  PCI_OUT_INT_MASK=00141df8
I20_INB_FIFO=00000000   I20_OUTB_FIFO=00000000
MAILBOX_0=006011a3      MAILBOX_1=00000000
MAILBOX_2=006011a3      MAILBOX_3=00000000

```



```

DOORBELL=006011a3          DOORBELL_SETUP=00000000
***** PCI Control Registers: *****
CHAN_1_BYTE_COUNT=0060024a  CHAN_2_BYTE_COUNT=0060024a
CHAN_1_PCI_BAR=00600231     CHAN_2_PCI_BAR=00600231
CHAN_1_DRAM_ADDR=000012d4   CHAN_2_DRAM_ADDR=0009a90b
CHAN_1_DESC_PTR=00000000    CHAN_2_DESC_PTR=0009a915
CHAN_1_CONTROL=0009a915     CHAN_2_CONTROL=00000000
DMA_INF_MODE=00090241       CSR_BASE_ADDR_MASK=000ddb6c
DRAM_BASE_ADDR_MASK=000ac14c I20_INB_FLIST_HPTR=00141df8
I20_INB_PLIST_TPTR=006011a3 I20_OUTB_PLIST_HPTR =00000000
I20_OUTB_FLIST_TPTR =00000000 I20_INB_FLIST_CNT=00000000
I20_OUTB_PLIST_CNT =006011a3 I20_INB_PLIST_CNT =00000000
SA_CONTROL=00090241         PCI_ADDR_EXT=000ddb6c
DBELL_PCI_MASK=00090241     DBELL_SA_MASK=00141df8
IRQ_STATUS=00000000         FIQ_STATUS=00000000
IRQ_RAW_STATUS=006011a3     FIQ_RAW_STATUS=00000000
IRQ_ENABLE=006011a3         FIQ_ENABLE=00000000
***** Coprocessor 15 Registers: *****
ID_CHIP=0060024a           CONTROL_CP15=0060024a
TRANSLATION_TAB_BASE=00600231 DOMAIN_ACCESS_CONTROL=00600231
FAULT_STATUS=000012d4      FAULT_ADDRESS=0009a90b
CACHE_CONTROL_OPER=00000000 READ_BUFFER_OPER=0009a915
PROC_ID_VIRT_ADDR_MAP=00000000
DATA_BREAKPT_CONTROL_REG=0009a915
Report Date:03-01-23  Time:12:20:45
-----

rlghncxa03w 03-01-23 08:43:14 EST  EAGLE 30.0.0
-----

STH: Received a BOOT IMT-obituary reply for 1 restart(s)
Card 1209  Module TKS_SBFR.C  Line 728  Class 01cc
IXP Register Dump (2 of 2): [Overall: 4 of 6]
***** SRAM Registers: *****
SRAM_CSR=0060024a          SRAM_AUTO_BASE=0060024a
SRAM_AUTO_PTR=00600231     SRAM_AUTO_END=00600231
SRAM_TEST_MOD=000012d4    SRAM_SLOW_CONFIG=0009a90b
SRAM_BOOT_CONFIG=00000000 SRAM_SLOWPORT_CONFIG=0009a915
***** Microengine 0 Registers: *****
USTORE_DATA=0060024a       ALU_OUTPUT=0060024a
CTX_ENABLES=000012d4      CC_ENABLE=0009a90b
CTX_0_SIG_EVENTS=00090241  CTX_1_SIG_EVENTS=000ddb6c
CTX_2_SIG_EVENTS=00090241  CTX_3_SIG_EVENTS=00141df8
CTX_0_WAKEUP_EVENTS=00000000 CTX_1_WAKEUP_EVENTS=00000000
CTX_2_WAKEUP_EVENTS=006011a3 CTX_3_WAKEUP_EVENTS=00000000
CTX_ARB_CNTL=00600231
ACTIVE_CTX_STS:  SEG=1  ACNO=1  AB=0  ACTXPC: 38
CTX_0_STS:      SEG=1  ACNO=2  RR=0  CTX_PC:
245
CTX_1_STS:      SEG=0  ACNO=1  RR=1  CTX_PC:
15
CTX_2_STS:      SEG=0  ACNO=0  RR=0  CTX_PC:
75
CTX_3_STS:      SEG=1  ACNO=3  RR=1  CTX_PC:
132
***** Microengine 1 Registers: *****
USTORE_DATA=0060024a       ALU_OUTPUT=0060024a
CTX_ENABLES=000012d4      CC_ENABLE=0009a90b
CTX_0_SIG_EVENTS=00090241  CTX_1_SIG_EVENTS=000ddb6c
CTX_2_SIG_EVENTS=00090241  CTX_3_SIG_EVENTS=00141df8
CTX_0_WAKEUP_EVENTS=00000000 CTX_1_WAKEUP_EVENTS=00000000
CTX_2_WAKEUP_EVENTS=006011a3 CTX_3_WAKEUP_EVENTS=00000000
CTX_ARB_CNTL=00600231
ACTIVE_CTX_STS:  SEG=1  ACNO=1  AB=0  ACTXPC: 38
CTX_0_STS:      SEG=1  ACNO=2  RR=0  CTX_PC:
245

```

```

15      CTX_1_STS:      SEG=0    ACNO=1    RR=1    CTX_PC:
128      CTX_2_STS:      SEG=0    ACNO=0    RR=0    CTX_PC:
72      CTX_3_STS:      SEG=1    ACNO=3    RR=1    CTX_PC:

***** Microengine 2 Registers: *****
      USTORE_DATA=0060024a      ALU_OUTPUT=0060024a
      CTX_ENABLES=000012d4      CC_ENABLE=0009a90b
      CTX_0_SIG_EVENTS=00090241  CTX_1_SIG_EVENTS=000ddb6c
      CTX_2_SIG_EVENTS=00090241  CTX_3_SIG_EVENTS=00141df8
      CTX_0_WAKEUP_EVENTS=00000000  CTX_1_WAKEUP_EVENTS=00000000
      CTX_2_WAKEUP_EVENTS=006011a3  CTX_3_WAKEUP_EVENTS=00000000
      CTX_ARB_CNTL=00600231
      ACTIVE_CTX_STS:  SEG=1    ACNO=1    AB=0    ACTXPC: 38
      CTX_0_STS:      SEG=1    ACNO=2    RR=0    CTX_PC:

245      CTX_1_STS:      SEG=0    ACNO=1    RR=1    CTX_PC:
125      CTX_2_STS:      SEG=0    ACNO=0    RR=0    CTX_PC:
75      CTX_3_STS:      SEG=1    ACNO=3    RR=1    CTX_PC:
62

***** Microengine 3 Registers: *****
      USTORE_DATA=0060024a      ALU_OUTPUT=0060024a
      CTX_ENABLES=000012d4      CC_ENABLE=0009a90b
      CTX_0_SIG_EVENTS=00090241  CTX_1_SIG_EVENTS=000ddb6c
      CTX_2_SIG_EVENTS=00090241  CTX_3_SIG_EVENTS=00141df8
      CTX_0_WAKEUP_EVENTS=00000000  CTX_1_WAKEUP_EVENTS=00000000
      CTX_2_WAKEUP_EVENTS=006011a3  CTX_3_WAKEUP_EVENTS=00000000
      CTX_ARB_CNTL=00600231
      ACTIVE_CTX_STS:  SEG=1    ACNO=1    AB=0    ACTXPC: 38
      CTX_0_STS:      SEG=1    ACNO=2    RR=0    CTX_PC:

245      CTX_1_STS:      SEG=0    ACNO=1    RR=1    CTX_PC:
125      CTX_2_STS:      SEG=0    ACNO=0    RR=0    CTX_PC:
75      CTX_3_STS:      SEG=1    ACNO=3    RR=1    CTX_PC:
62

***** Microengine 4 Registers: *****
      USTORE_DATA=0060024a      ALU_OUTPUT=0060024a
      CTX_ENABLES=000012d4      CC_ENABLE=0009a90b
      CTX_0_SIG_EVENTS=00090241  CTX_1_SIG_EVENTS=000ddb6c
      CTX_2_SIG_EVENTS=00090241  CTX_3_SIG_EVENTS=00141df8
      CTX_0_WAKEUP_EVENTS=00000000  CTX_1_WAKEUP_EVENTS=00000000
      CTX_2_WAKEUP_EVENTS=006011a3  CTX_3_WAKEUP_EVENTS=00000000
      CTX_ARB_CNTL=00600231
      ACTIVE_CTX_STS:  SEG=1    ACNO=1    AB=0    ACTXPC: 38
      CTX_0_STS:      SEG=1    ACNO=2    RR=0    CTX_PC:

245      CTX_1_STS:      SEG=0    ACNO=1    RR=1    CTX_PC:
15      CTX_2_STS:      SEG=0    ACNO=0    RR=0    CTX_PC:
75      CTX_3_STS:      SEG=1    ACNO=3    RR=1    CTX_PC:
132

***** Microengine 5 Registers: *****
      USTORE_DATA=0060024a      ALU_OUTPUT=0060024a
      CTX_ENABLES=000012d4      CC_ENABLE=0009a90b
      CTX_0_SIG_EVENTS=00090241  CTX_1_SIG_EVENTS=000ddb6c
      CTX_2_SIG_EVENTS=00090241  CTX_3_SIG_EVENTS=00141df8
      CTX_0_WAKEUP_EVENTS=00000000  CTX_1_WAKEUP_EVENTS=00000000
      CTX_2_WAKEUP_EVENTS=006011a3  CTX_3_WAKEUP_EVENTS=00000000
      CTX_ARB_CNTL=00600231

```

```

                ACTIVE_CTX_STS:  SEG=1    ACNO=1    AB=0    ACTXPC: 38
                CTX_0_STS:       SEG=1    ACNO=2    RR=0    CTX_PC:
245
                CTX_1_STS:       SEG=0    ACNO=1    RR=1    CTX_PC:
15
                CTX_2_STS:       SEG=0    ACNO=0    RR=0    CTX_PC:
75
                CTX_3_STS:       SEG=1    ACNO=3    RR=1    CTX_PC:
132

```

Report Date:03-01-23 Time:12:20:45

rlghncxa03w 03-01-23 08:43:14 EST EAGLE 30.0.0

STH: Received a BOOT IMT-obituary reply for 1 restart(s)

Card 1209 Module TKS_SBFR.C Line 728 Class 01cc
User Data Dump (1 of 2): [Overall: 5 of 6]

0000	15a3a816	0012be0a	06000046	01080400	
0010	00a2342c	07f7b83a	15729dd2	05580601	
0020	1a22a616	7072b91a	46304a44	06887400	
0030	25a33b12	01a4ba22	17e03026	11483402	
0040	00130811	0033a30a	14008149	0cab6130	
0050	00000000	00000000	00000000	00000000	
0060	15a3a816	0012be0a	06000046	01080400	
0070	00a2342c	07f7b83a	15729dd2	05580601	
0080	1a22a616	7072b91a	46304a44	06887400	
0090	25a33b12	01a4ba22	17e03026	11483402	
00a0	00130811	0033a30a	14008149	0cab6130	
00b0	1a22a616	7072b91a	46304a44	06887400	
00c0	25a33b12	01a4ba22	17e03026	11483402	
00d0	00130811	0033a30a	14008149	0cab6130	
00e0	00000000	00000000	00000000	00000000	
00f0	15a3a816	0012be0a	06000046	01080400	
0100	00a2342c	07f7b83a	15729dd2	05580601	
0110	1a22a616	7072b91a	46304a44	06887400	
0120	25a33b12	01a4ba22	17e03026	11483402	
0130	25a33b12	01a4ba22	17e03026	11483402	
0140	00130811	0033a30a	14008149	0cab6130	
0150	00000000	00000000	00000000	00000000	
0160	15a3a816	0012be0a	06000046	01080400	
0170	00a2342c	07f7b83a	15729dd2	05580601	
0180	1a22a616	7072b91a	46304a44	06887400	
0190	25a33b12	01a4ba22	17e03026	11483402	
01a0	00130811	0033a30a	14008149	0cab6130	
01b0	1a22a616	7072b91a	46304a44	06887400	
01c0	25a33b12	01a4ba22	17e03026	11483402	

Report Date:03-01-23 Time:12:20:45

rlghncxa03w 03-01-23 08:43:14 EST EAGLE 30.0.0

STH: Received a BOOT IMT-obituary reply for 1 restart(s)

Card 1209 Module TKS_SBFR.C Line 728 Class 01cc
User Data Dump (2 of 2): [Overall: 6 of 6]

0000	15a3a816	0012be0a	06000046	01080400	
0010	00a2342c	07f7b83a	15729dd2	05580601	
0020	1a22a616	7072b91a	46304a44	06887400	
0030	25a33b12	01a4ba22	17e03026	11483402	
0040	00130811	0033a30a	14008149	0cab6130	
0050	00000000	00000000	00000000	00000000	
0060	15a3a816	0012be0a	06000046	01080400	
0070	00a2342c	07f7b83a	15729dd2	05580601	
0080	1a22a616	7072b91a	46304a44	06887400	
0090	25a33b12	01a4ba22	17e03026	11483402	
00a0	00130811	0033a30a	14008149	0cab6130	

```

00b0 1a22a616 7072b91a 46304a44 06887400 .....
00c0 25a33b12 01a4ba22 17e03026 11483402 .....
00d0 00130811 0033a30a 14008149 0cab6130 .....
00e0 00000000 00000000 00000000 00000000 .....
00f0 15a3a816 0012be0a 06000046 01080400 .....
0100 00a2342c 07f7b83a 15729dd2 05580601 .....
0110 1a22a616 7072b91a 46304a44 06887400 .....
0120 25a33b12 01a4ba22 17e03026 11483402 .....
Report Date:03-01-23 Time:12:20:45
-----

```

;

rtrv-obit:loc=1115

Command Accepted - Processing

```

stdcfg1b 05-06-13 16:32:30 EST EAGLE 34.0.0
NOTICE: Only 7 obit(s) to retrieve in the log.

```

;

```

stdcfg1b 05-06-13 16:32:30 EST EAGLE 34.0.0
-----

```

STH: Received a BOOT IMT-Obituary reply for restart

Card 1103 Module ATH_386A.ASM Line 988 Class 0400

Register Dump :

```

EFL=00000246 CS =0058 EIP=0041cf03 SS =0060
EAX=00000046 ECX=00000000 EDX=005245d9 EBX=00000001
ESP=00483f80 EBP=00483f88 ESI=00000000 EDI=00000000
DS =0060 ES =0060 FS =0060 GS =0060

```

Stack Dump :

```

[SP+1E]=0048 [SP+16]=0000 [SP+0E]=0041 [SP+06]=0000
[SP+1C]=3fd0 [SP+14]=0001 [SP+0C]=cecc [SP+04]=0000
[SP+1A]=0048 [SP+12]=0000 [SP+0A]=0048 [SP+02]=0041
[SP+18]=3fbc [SP+10]=0a0a [SP+08]=3f9c [SP+00]=e600

```

```

Report Date:05-06-10 Time:19:20:55
-----

```

;

```

stdcfg1b 05-06-13 16:32:31 EST EAGLE 34.0.0
-----

```

STH: Received a BOOT IMT-Obituary reply for restart

Card 1209 Module sds_arm_send Line 356 Class 0001

StrongARM Core Register Dump (1 of 1): [Overall: 1 of 6]

SYSTEM MODE REGISTERS:

```

r0 = 00116bd4 r1 = 00000164 r2 = 00000001 r3 = 00000003
r4 = 00f5f3f0 r5 = 00000000 r6 = 0000001f r7 = 001251a0
r8 = 00177be0 r9 = 10ffbfcc r10= 00118b74 r11= 00000000
r12= 642b0002 sp = 000cffa8 lr = 00116b88 pc = 00102424
cpsr=400000df

```

Register Dump 2 is empty

```

Report Date:05-06-13 Time:16:30:42
-----

```

;

```

stdcfg1b 05-06-13 16:32:33 EST EAGLE 34.0.0
-----

```

STH: Received a BOOT IMT-Obituary reply for restart

Card 1209 Module sds_arm_send Line 356 Class 0001

StrongARM Core Stack Dump (1 of 1): [Overall: 2 of 6]

```

SYSTEM MODE STACK (Length=192):
0000 00e00000 00000007 00e00000 00102ab0 .....*..
0010 00178698 00000000 000000f8 000cff08 .....
0020 00000001 00116bd4 00000164 00000001 .....k..d.....
0030 000cff68 00000000 00000000 0000001f h.....
0040 001251a0 00177be0 10ffbfcc 00118b74 .Q...{.....t...
0050 00000000 00102468 00000000 00000000 ....h$.....
0060 000cffa8 00116bd4 00000164 00000001 .....k..d.....
0070 00000003 00f5f3f0 00000000 0000001f .....
0080 001251a0 00177be0 10ffbfcc 00118b74 .Q...{.....t...
0090 00000000 642b0002 00116b88 00102424 .....+d.k..$$..
00a0 00000000 00000000 0000001f 00115e10 .....^..
00b0 00177c4c 00177bf0 0000001f 00125268 L|...{.....hR..

```

;

```

stdcfg1b 05-06-13 16:32:34 EST EAGLE 34.0.0
Stack Dump 2 is empty

```

```

Report Date:05-06-13 Time:16:30:42
-----

```

;

```

stdcfg1b 05-06-13 16:32:35 EST EAGLE 34.0.0
-----

```

```

STH: Received a BOOT IMT-Obituary reply for restart
Card 1209 Module sds_arm_send Line 356 Class 0001
User Data Dump (1 of 1): [Overall: 3 of 6]

```

```

User Data is empty

```

```

Report Date:05-06-13 Time:16:30:42
-----

```

;

```

stdcfg1b 05-06-13 16:32:36 EST EAGLE 34.0.0
-----

```

```

STH: Received a BOOT IMT-Obituary reply for restart
Card 1209 Module sds_arm_send Line 356 Class 0001
EP9312 Register Dump (1 of 2): [Overall: 4 of 6]

```

***** DMA Registers *****

DMA_CTRL_M2M0=	0608d40c	DMA_INTR_STAT_M2M0=	00000000
DMA_STAT_M2M0=	00000000	DMA_BCR0_M2M0=	0608d40c
DMA_BASE_SRC0_M2M0=	00000000	DMA_CRNT_SRC0_M2M0=	00000000
DMA_BASE_DSTN0_M2M0=	00000000	DMA_CRNT_DSTN0_M2M0=	00000000
DMA_BCR1_M2M0=	000001fc	DMA_BASE_SRC1_M2M0=	00000000
DMA_CRNT_SRC1_M2M0=	00000000	DMA_BASE_DSTN1_M2M0=	00000000
DMA_CRNT_DSTN1_M2M0=	00000000		
DMA_CTRL_M2M1=	0608d40c	DMA_INTR_STAT_M2M1=	00000000
DMA_STAT_M2M1=	00000000	DMA_BCR0_M2M1=	00000000
DMA_BASE_SRC0_M2M1=	00000000	DMA_CRNT_SRC0_M2M1=	00000000
DMA_BASE_DSTN0_M2M1=	00000000	DMA_CRNT_DSTN0_M2M1=	00000000
DMA_BCR1_M2M1=	00000000	DMA_BASE_SRC1_M2M1=	00000000
DMA_CRNT_SRC1_M2M1=	00000000	DMA_BASE_DSTN1_M2M1=	00000000
DMA_CRNT_DSTN1_M2M1=	00000000		
DMA_ACTIVE_INTR=	00000000		

***** TIMER Registers *****

TMR1_CURR_VALUE=	00000000	TMR1_CTRL_REG=	00000000
TMR1_LOAD_REG=	00000000	TMR2_CURR_VALUE=	00000000
TMR2_CTRL_REG=	00000000	TMR2_LOAD_REG=	00000000
TMR3_CURR_VALUE=	00000001	TMR3_CTRL_REG=	000000d5
TMR3_LOAD_REG=	00000001	TMR4_VALUE_LOW=	413c60f3
TMR4_VALUE_HI=	0000015f		

***** SYSCON Registers *****

PWRSTS=	4320ace3	PWRCNT=	0c000000
CLKSET1=	00a5a127	CLKSET2=	0003c317
SCRATCH0=	00000040	SCRATCH1=	00000000
DEVCFG=	6902090e	CHIP_ID=	34009213
SYSCFG=	340000d6	APB_WAIT=	00000001
ARB_REG=	00000000	VID_REG=	00000000
MIR_REG=	00000000	I2S_REG=	00000000
TCH_REG=	00000000		

***** GPIO Registers *****

PADR=	0000007f	PBDR=	000000e9
PCDR=	000000c0	PDDR=	000000c4
PEDR=	00000000	PFDR=	000000ff
PGDR=	00000002	PHDR=	0000007f
PADDR=	00000000	PBDDR=	00000009
PCDDR=	000000fb	PDDDR=	000000fb
PEDDR=	00000003	PFDDR=	00000000
PGDDR=	0000000c	PHDDR=	00000007
PA_TYPE1=	00000000	PB_TYPE1=	00000080
PF_TYPE1=	00000000	PA_TYPE2=	00000000
PB_TYPE2=	00000000	PF_TYPE2=	00000000
PA_INT_EN=	00000000	PB_INT_EN=	00000080
PF_INT_EN=	00000000	PA_RAW_STAT=	00000080
PB_RAW_STAT=	0000001f	PF_RAW_STAT=	00000000
PA_INT_STAT=	00000000	PB_INT_STAT=	00000000
PF_INT_STAT=	00000000	PA_DB=	00000000
PB_DB=	00000000	PF_DB=	00000000
EE_REG=	00000000		

***** Coprocessor 15 Registers *

ID_CODE_CP15_0=	41129200	CACHE_CODE_CP15_0=	0d172172
CONTROL_CP15_1=	c000107d	TRANS_BASE_TBL_CP15_2=	10ffc000
DOMAIN_ACCESS_CP15_3=	fffffffdf	FAULT_STATUS_CP15_5=	0000000d
FAULT_PREFETCH_CP15_5=	000000fa	FAULT_ADDR_CP15_6=	d3b765e8
CACHE_OPER_CP15_7=	00000000	TLB_OPER_CP15_8=	00000000
CACHE_LOCKDN_CP15_9=	00000000	ICACHE_LOCKDN_CP15_9=	00000000
D_TLB_LOCKDN_CP15_10=	00b00000	I_TLB_LOCKDN_CP15_10=	00200000
FCSE_PID_CP15_13=	00000000		

Report Date:05-06-13 Time:16:30:42

;

stdcfg1b 05-06-13 16:32:40 EST EAGLE 34.0.0

STH: Received a B00T IMT-Obituary reply for restart

Card 1209 Module sds_arm_send Line 356 Class 0001
 EP9312 Register Dump (2 of 2): [Overall: 5 of 6]

***** VIC Registers *****

VIC_1_IRQ_STATUS=	00000000	VIC_1_FIQ_STATUS=	00000000
VIC_1_RAW_INTR=	25000008	VIC_1_INT_SELECT=	00000000
VIC_1_INT_ENABLE=	00060000	VIC_1_SOFT_INT=	00000000
VIC_1_SOFT_INT_CLEAR=	00000000		
VIC_2_IRQ_STATUS=	00000000	VIC_2_FIQ_STATUS=	00000000
VIC_2_RAW_INTR=	0000021b	VIC_2_INT_SELECT=	00080000
VIC_2_INT_ENABLE=	08080004	VIC_2_SOFT_INT=	00000000
VIC_2_SOFT_INT_CLEAR=	00000000		

***** SMC Registers *****

BANK_CONFIG0=	70001c80	BANK_CONFIG1=	70001420
BANK_CONFIG2=	40001480	BANK_CONFIG3=	70000400

```

BANK_CONFIG6=          70001440          BANK_CONFIG7=          70001440

***** UART3 Registers *****
LINE_CTRL_LOW=         00000003         LINE_CTRL_MID=         00000000
LINE_CTRL_HIGH=        00000074         CTRL_REG=              00000001
STATUS_REG=            00000000         FLAGS_REG=            00000090
DATA_REG=              00000020

***** Watchdog Registers *****
WD0G_REG=              00806c69

Report Date:05-06-13   Time:16:30:42
-----
stdcfg1b 05-06-13 16:32:42 EST  EAGLE 34.0.0
-----
STH: Received a BOOT IMT-Obituary reply for restart
Card 1209  Module sds_arm_send  Line 356  Class 0001
SIFB Register Dump (1 of 1):    [Overall: 6 of 6]

***** BCM5630 Switch0 Registers *****
Switch0 Port0 Status= 00c06c00         Switch0 Port1 Status= 00c06c00
Switch0 Port2 Status= 00806c00         Switch0 Port3 Status= 00806c00
Switch0 Port4 Status= 00806c00         Switch0 Port5 Status= 00806c00
Switch0 Port6 Status= 00806c00         Switch0 Port7 Status= 00800000
Switch0 Port12 Status=00806c00

***** BCM5630 Switch1 Registers *****
Switch1 Port0 Status= 00806c00         Switch1 Port1 Status= 00806c00
Switch1 Port2 Status= 00806c00         Switch1 Port3 Status= 00806c00
Switch1 Port4 Status= 00806c00         Switch1 Port5 Status= 00806c00
Switch1 Port6 Status= 00806c00         Switch1 Port7 Status= 00806c00
Switch1 Port8 Status= 00806c00         Switch1 Port9 Status= 00806c00
Switch1 Port10 Status=00806c00         Switch1 Port11 Status=00800000
Switch1 Port12 Status=aaaaaa00

Report Date:05-06-13   Time:16:30:43
-----

```

rtrv-prefix

Retrieve Prefix

Use this command to retrieve provisioned prefix information for all supported features or for a specified feature.

Keyword: rtrv-prefix

Related Commands: `chg-prefix`, `dlt-prefix`, `rtrv-ctrl-feat`

Command Class: Database Administration

Parameters

:feature= (optional)

Feature Name. This parameter specifies the name of an enabled controlled feature that is supported by this command. The parameter value must match the feature name as it is displayed in the **rtv-ctrl-feat** command output.

[illegible]

1 alphabetic character and up to 24 optional alphanumeric characters and spaces, enclosed in double quotation marks.

The parameter value is not case-sensitive; upper case or lower case or both can be entered.

Part or all of the feature name can be entered. If part of the feature name is specified, the entry must start with the first letter of the name, and must contain enough of the name to uniquely identify the feature. For example, there are two feature names that begin with "GSM MAP." Enough additional characters to identify which GSM MAP feature is being entered (at least "GSM MAP SR" to identify the "GSM MAP SRI Redirect" feature). This command supports the following controlled features:

- GSM MAP SRI Redirect
- ISUP NP for EPAP
- Prepaid IDP Query Relay

Example

Retrieve provisioned prefix information for all supported features.

rtrv-prefix

Retrieve prefix information for the GSM MAP SRI Redirect feature.

rtrv-prefix:feature="GSM MAP SRI Redirect"

Dependencies

The specified feature name must be the name of an enabled controlled feature as it is displayed in the **rtrv-ctrl-feat** command output; The specified feature must be one of the following features that are supported by this command:

- GSM MAP SRI Redirect
- ISUP NP for EPAP
- Prepaid IDP Query Relay

Notes

None

Output

For all features, retrieve the provisioned prefix information. There is additional information displayed in the function column for prefix numbers 6 and 7 of the “ISUP NP with EPAP” feature and for all prefix numbers for the “Prepaid IDQ Query Relay” feature.

rtrv-prefix

```
rlghncxa03w 04-09-20 09:04:14 EST EAGLE 34.1.0
```

Feature	NUM	Prefix	Function
GSM MAP SRI Redirect	1	1a1a	
GSM MAP SRI Redirect	2	ffff	
GSM MAP SRI Redirect	3	1234	
ISUP NP with EPAP	1	3b4c	
ISUP NP with EPAP	6	886	Insertion Country Code
ISUP NP with EPAP	7	0	Deletion Condition
Prepaid IDQ Query Relay	1	123	Intl Insert Prefix
Prepaid IDQ Query Relay	2	456	Natl Insert Prefix
Prepaid IDQ Query Relay	3	1	CDPN NAI Incoming
Prepaid IDQ Query Relay	4	1	CGPA DEF CC Check On

```
FEATPFX table is (6 of 256) 2% full
```

```
;
```

For the “GSM MAP SRI Redirect” feature, retrieve the provisioned prefix information. The table capacity for the total number of entries in use is reported, not just the number of entries displayed. There is no additional information displayed in the Function column for this feature.

rtrv-prefix:feature="GSM MAP SRI Redirect"

```
rlghncxa03w 04-09-20 09:04:14 EST EAGLE 31.11.0
```

Feature	NUM	Prefix	Function
GSM MAP SRI Redirect	1	1a1a	
GSM MAP SRI Redirect	2	ffff	
GSM MAP SRI Redirect	3	1234	

```
FEATPFX table is (6 of 256) 2% full
```

```
;
```

rtrv-pstn-pres**Retrieve PSTN Presentation Parameters**

Use this command to display PSTN Presentation parameters supported by the IP⁷ Secure Gateway. This command provides a summary of the available values for the PSTNCAT and PSTNID parameters used in SS7 routing key commands and ISUP Normalization Administration commands.

Keyword: rtrv-pstn-pres

Related Commands: chg-appl-rtkey, chg-isupvar-attrb, chg-pstn-pres, dlt-pstn-pres, ent-pstn-pres, rtrv-appl-rtkey

Command Class: Database Administration

Parameters

This command has no parameters.

Example

```
rtrv-pstn-pres
```

Dependencies

The ISUP Normalization controlled feature must be enabled.

Notes

All the *Tekelec-defined* and *user-defined* PSTNs will be displayed.

An asterisk (*) will be displayed next to the PSTN Category for the following reasons:

- The ETSIV3 Variant before it has its controlled feature enabled
- Variants that are no longer useable. These are Variants that are disabled because their temporary feature key expired. The user should either get a permanent feature key for the Variant or use the **dlt-pstn-pres** command to remove the Variant.

Output**rtrv-pstn-pres**

```
rlghncxa03w 03-03-07 12:05:33 EST EAGLE 31.3.0
```

PSTNCAT Value(s)	PSTNCAT Description	Valid PSTNID Value(s) in PSTNCAT
0	Default value	0 = Default Value
1	PSTN formats supported by Tekelec IP7 SG ISUP	0 = Reserved 1 = ITU Q.767
	Normalization function	2 = ETSI V3 3 = UK PNO-ISC7 4 = GERMAN ISUP
2-4095	Reserved	--
4096-65535	User Defined	0-65535 = User Defined

```
;
```

rtrv-rmt-appl**Retrieve Remote Application**

Use this command to retrieve a list of remote application assignments.

Keyword: rtrv-rmt-appl

Related Commands: dlt-rmt-appl, ent-rmt-appl

Command Class: Database Administration

Parameters

This command has no parameters.

Example

```
rtrv-rmt-appl
```

Dependencies

None

Notes

None

Output**rtrv-rmt-appl**

```

rlghncxa03w 05-01-07 12:05:33 EST EAGLE 31.12.0
  IPCA          SI SSN
    003-003-003    3 100, 110-119, 200
                  5
  IPCI          SI SSN
    3-003-3        3 5, 50-100, 250
                  5

  IPCN          SI SSN
    16380          3 250
                  5

  IPCN24         SI SSN
    100-200-100    5

```

;

rtrv-rmt-appl

```

rlghncxa03w 05-01-07 12:05:33 EST EAGLE 31.12.0
  IPCA          SI SSN
    p-001-001-001    3 5-102

  IPCI          SI SSN
    ps-2-002-2       5

  IPCN          SI SSN
    s-16380          3 250

  IPCN24         SI SSN

```

;

Legend

IPC/IPCA/IPCI/PCN/PCN24—End node's internal point code.

SI—Service indicator value that designates which user part is assigned to the IPC.

SSN—SCCP subsystem number.

Point code subtype prefixes—

s- Spare point code

p- Private point code

ps- Private and spare point code

rtrv-rte**Retrieve Route**

This command is used to display the parameter information for the route entries in the database.

Asterisks can be specified to select and display only point codes that have the same point code subfields. See the Notes section for this command for details.

Keyword: **rtrv-rte**

Related Commands: **dlt-rte, ent-rte, rept-stat-dstn**

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:cli= (optional)

Common Language Location Identifier. This parameter specifies the Common Language Location Identifier assigned to the link.

Range: ayyyyyyyyyy
 1 alphabetic character followed by 10 alphanumeric characters

Default: No value given

:dpc= (optional)

ANSI destination point code with subfields network indicator-network cluster-network cluster member (*ni-nc-ncm*). The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: **dpca**

Range: p-, 000-255, *, **, ***
 Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).
 prefix—p-
 The asterisk values *, **, and *** are not valid for the *ni* subfield.
 If ** or *** is specified for the *nc* subfield, either *, **, or *** must be specified for the *ncm* subfield.
 When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.
 When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001-005.
 When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006-255.
 When **chg-sid:pctype=ansi** is specified, *ni*-*-* is valid if *ni* = 006-255.
 The point code 000-000-000 is not a valid point code.

:dpc/dpca/dpci/dpcn/dpcn24= (optional)

Destination point code.

:dpci= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: s-, p-, ps-, 0-255
 Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).
 prefix—s-, p-, ps-
 zone—0-7
 area—000-255
 id—0-7
 The point code 0-000-0 is not a valid point code.

:dpcn= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: s-, p-, ps-, 0-16383, aa-zz, *

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

An asterisk (*) can be specified for the node (*nnnnn* or every member of a flexible point code) or for the group code (*gc*) only when group codes are present in the point codes.

An asterisk (*) can be specified either for the node or for the group code, but not both.

prefix—**s**, **p**, **ps**

nnnnn—**0-16383**, *

gc—**aa-zz**, *

m1-m2-m3-m4—**0-14** for each member; values must sum to 14; or ***-*-*-*** when the point code includes a group code.

:dpcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*. The *prefix* indicates a private point code (*prefix-msa-ssa-sp*).

Range: **p**, **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:lsn= (optional)

Linkset name

Range: *aaaaaaaa*

1 alphabetic character followed by up to 9 alphanumeric characters

Default: Display all

:pcst= (optional)

Point code subtype. If selected, this parameter causes the command to display only the point codes that have no subtype prefix, or display only the point codes that have the specified subtype prefix.

Range: **none**, **s**, **p**, **ps**

none— Display all point codes that do not have subtype prefixes

s— Display only spare point codes

p— Display only private point codes

ps— Display only private and spare point codes

:pctype= (optional)

Point code domain. This parameter causes the command to display only the point codes of the specified domain type.

Range: **ansi**, **itui**, **itun**, **itun24**

Example

rtrv-rte

rtrv-rte:lsn=ls000001

rtrv-rte:dpc=240-012-004:lsn=ls000001

rtrv-rte:clli=dp1:lsn=ls000001

rtrv-rte:dpc=140-012-008

rtrv-rte:clli=dp1rtrv-rte

rtrv-rte:dpcn=3-15-15-15-fr

```

rtrv-rte:lsn=e1m3itun
rtrv-rte:dpcn24=10-100-14
rtrv-rte:pcst=s
rtrv-rte:pcst=none
rtrv-rte:pcst=p
rtrv-rte:pcst=ps
rtrv-rte:pctype=ansi
rtrv-rte:pctype=itun
rtrv-rte:pctype=itui:pcst=ps
rtrv-rte:pctype=itun24:pcst=none
rtrv-rte:dpc=1-1-**
rtrv-rte:dpc=1-1-***
rtrv-rte:dpc=1-**-*
rtrv-rte:dpc=1-***-*
rtrv-rte:dpc=1-**-*:lsn=ab64
rtrv-rte:dpc=1-**-*:lsn=xx64
rtrv-rte:dpcn=1000-*
rtrv-rte:dpcn=1000-*:lsn=dpcn64
rtrv-rte:dpcn=p-*aa
rtrv-rte:dpcn=s-9000-*

```

Dependencies

The DPC must be in the destination point code table.

If the **dpc** and **lsn** parameters are specified, the linkset name must be defined as a route.

If the **dpcn** parameter is specified, its format must match the format that was assigned with the **chg-stpopts** command **npcfmti** parameter.

The **pcst** parameter value **s** or **ps** cannot be specified when the **pctype** parameter value **ansi** or **itun24** is specified.

The **pctype** and **pcst** parameters cannot be specified in the same command with the destination point code, alias point code, secondary point code, **cli**, **msar=only**, and **ncai** parameters.

Network routing is valid only if the NRT feature is on. The NRT feature is turned on with the **chg-feat** command.

When using network routing, if the destination point code has a value of * in the NC field, the NCM field must also be * (for example, **dpc=21-*-***).

Notes

This command can be canceled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (**s-**) and the private and spare point code subtype prefix (**ps-**). All of the point code types support the private (internal) point code subtype prefix (**p-**).

Asterisks in ANSI Point Codes

Two asterisks in the *ncm* subfield of a cluster point code produces a summary report that shows all point code destinations residing in the given cluster (for example, **20-2-****). This does not include the specified cluster point code (for example, **20-2-***).

Three asterisks in the *ncm* subfield of a cluster point code (for example, **20-2-*****) produces a summary report that shows all point code destinations residing in the given network cluster. The specified cluster point code is also displayed if it exists.

If the linkset name is specified (**lsn** parameter) and the **dpc/dpca** parameter *ncm* subfield is specified with asterisks, all route entries are displayed that have the specified linkset and that match the specified **dpc/dpca** parameter subfield values.

Asterisks in ITU-N Duplicate Point Codes and Flexible Format Point Codes

When the ITU Duplicate Point Code (ITUDUPPC) feature is on,

- An asterisk (*) can be specified for the group code of an ITU-N duplicate point code to display all ITU-N point codes that have the specified node value (for example, **10101-***).
- An asterisk (*) can be specified for the node of an ITU-N duplicate point code to display all ITU-N point codes that have the specified group code value (for example, ***-ab**).

When the ITUDUPPC feature is on and the STP flexible point code option (**npcfnti**) is used to change the ITU-N point format to four members (*m1-m2-m3-m4-gc*),

- An asterisk (*) can be specified for the group code of an ITU-N flexible point code to display all ITU-N point codes that have the specified point code value (for example, **15-15-15-3-***).
- An asterisk (*) can be specified for every member of the ITU-N flexible point code to display all ITU-N flexible point codes that have the same group code (for example, ***-*-*-ab** is valid; ***-15-*-*-ab** is not valid).

Output

In the **rtrv-rte** command output examples, the point code prefixes **s-**, **p-**, and **ps-** indicate that the point code is a spare point code, a private point code, or a private and spare point, respectively.

rtrv-rte

```

rlghncxa03w 06-05-07 12:05:33 EST EAGLE 35.0.0
  DPCA          ALIASI      ALIASN/N24    LSN          RC      APCA
  001-001-001  -----
                                lsa1         4      001-001-001
                                RTX:No  CLLI=-----
  001-002-011    3-140-1    02001-aa    lsa21        1      001-002-001
                                RTX:Yes CLLI=-----
  001-002-012  -----
                                lsa21        2      001-002-001
                                RTX:Yes CLLI=-----
  002-001-001  -----
                                -----
                                RTX:No  CLLI=-----
  200-001-*      -----
                                lsa5         10     001-001-005
                                RTX:Yes CLLI=-----
  200-002-001    6-100-1    00301-aa    lsa5         10     001-001-005
                                RTX:Yes CLLI=-----
  200-001-001  -----
                                lsa5         10     001-001-005
                                RTX:No  CLLI=-----
  200-002-002  -----
                                lsa5         10     001-001-005
                                RTX:Yes CLLI=-----

  DPCI          ALIASN/N24    ALIASA      LSN          RC      APC
  4-001-1  -----
                                -----
                                RTX:No  CLLI=-----
  4-002-1  -----
                                lsi1         1      4-001-1
                                RTX:Yes CLLI=-----
  4-002-2  -----
                                lsi1         2      4-001-1
                                RTX:No  CLLI=-----
  7-001-1  -----
                                -----
                                RTX:No  CLLI=-----
  7-030-7  -----
                                stpa037i    10     7-030-7
                                sc2a039i    91     7-032-7
                                sc3a040i    92     p-0-252-0
                                RTX:No  CLLI=stpa037i

  DPCN          ALIASA      ALIASI      LSN          RC      APC
  00101-aa  -----
                                -----
                                RTX:No  CLLI=-----
  02001-xy  -----
                                -----
                                RTX:No  CLLI=-----
  02001-mn  -----
                                -----
                                RTX:No  CLLI=-----
  02002-xy  -----
                                lsnxy1         4      02001-xy
                                RTX:Yes CLLI=-----
  02002-mn  -----
                                lsnmn1        47     02001-mn
                                RTX:Yes CLLI=-----
  s-02002-xy  -----
                                lsnxys1         5      s-00101-xy
                                RTX:Yes CLLI=-----
  s-00101-xy  -----
                                -----
                                RTX:No  CLLI=-----
  s-02001-mn  -----
                                -----
                                RTX:No  CLLI=-----
  s-02002-mn  -----
                                lsnmns1        25     s-02001-mn
                                RTX:Yes CLLI=-----

  DPCN24        ALIASA      ALIASI      LSN          RC      APC

```

;

Output when the table is empty.

rtrv-rte

```

rlghncxa03w 06-05-07 12:05:33 EST EAGLE 35.0.0
DPCA          ALIASI      ALIASN/N24    LSN          RC      APCA

DPCI          ALIASN/N24    ALIASA      LSN          RC      APC

DPCN          ALIASA        ALIASI      LSN          RC      APC

DPCN24        ALIASA        ALIASI      LSN          RC      APC

```

;

rtrv-rte:lsn=ls2

```

rlghncxa03w 03-03-07 12:05:33 EST EAGLE 31.3.0
LSN          DPCA          RC
ls2          001-056-003 10

```

;

rtrv-rte:dpc=001-056-003:lsn=ls2

```

rlghncxa03w 03-03-07 12:05:33 EST EAGLE 31.3.0
LSN          DPCA          RC
ls2          001-056-003 10

```

;

In the following example, the **chg-stpopts:npcfmti** value is set to **7-4-3**.

rtrv-rte:dpcn=127-15-7

```

rlghncxa03w 02-03-07 12:05:33 EST EAGLE 30.0.0
DPCN          ALIASA        ALIASI      CLLI          LSN          RC APCN
127-15-7      -----      6-100-1      -----      ls1          10 100-10-2

```

;

In the following example, the **chg-stpopts:npcfmti** value is set to **11-1-1-1** and the ITUDUPPC feature is on.

rtrv-rte:lsn=ls3

```

rlghncxa03w 03-03-07 12:05:33 EST EAGLE 31.3.0
LSN          DPCN          RC
ls3          2000-1-1-1 10

```

;

In the following example, the **chg-stpopts:npcfmti** value is set to **2-4-4-4** and the ITUDUPPC feature is on.

rtrv-rte:dpcn=3-15-15-15-fr

```

rlghncxa03w 02-03-07 12:05:33 EST EAGLE 30.0.0
DPCN          ALIASA        ALIASI      CLLI          LSN          RC APCN
3-15-15-15-fr -----      -----      -----      e1m2itun    10 3-15-15-15-

```

fr

;

In the following example, the **chg-stpopts:npcfmti** value is set to **11-1-1-1** and the ITUDUPPC feature is on.

rtrv-rte:lsn=e1m3itun

```

rlghncxa03w 02-03-07 12:05:33 EST EAGLE 30.0.0
LSN          DPCN          RC
e1m3itun    2047-1-1-1-pe 10

```

;

The following example contains 24-bit ITU-N DPC **010-100-014**.

rtrv-rte:lsn=ls1013

```

rlghncxa03w 02-03-07 12:05:33 EST EAGLE 31.0.0
DPCA          ALIASI      ALIASN/N24    CLLI          LSN          RC APCN
001-001-002 -----      -----      -----      ls11234567 10 001-001-002

```

```

001-001-003 ----- ls11345678 10 001-001-003
001-001-004 ----- ls11345679 10 001-001-004
001-001-005 -----
001-001-006 -----
001-001-007 ----- sillyseas7 ls11345 10 001-001-007
001-001-008 ----- sillyseas8 ls113467 10 001-001-008
001-001-009 ----- sillyseas9 ls1134 10 001-001-009
020-002-* -----
001-003-001 -----
009-008-007 ----- seas987 -----
009-008-009 ----- seas989 -----
008-008-008 -----
111-222-111 -----
DPCI ALIASN/N24 ALIASA CLLI LSN RC APC
1-001-4 -----
7-255-7 -----
1-222-1 -----
DPCN24 ALIASA ALIASI CLLI LSN RC APC
010-100-014 ----- ls1013 10 010-100-001

```

;

The following example specifies the **pctype=ansi** parameter to display only ANSI point codes.

rtrv-rte:pctype=ansi

```

rlghncxa03w 05-01-07 12:05:33 EST EAGLE 31.12.0
DPCA ALIASI ALIASN/N24 LSN RC APCA
001-001-002 -----
p-001-002-004 -----
008-001-001 -----
020-001-* -----
100-101-001 1-190-1 -----
100-101-002 s-1-012-1 -----
100-101-003 ----- 0-0-0-0123-aa -----
100-101-004 ----- s-0-0-0-0123-aa -----
p-002-200-001 -----
p-002-003-001 -----
p-001-002-005 -----
p-001-002-006 -----
p-001-002-007 -----
p-001-002-008 -----
p-012-230-001 -----
012-230-001 -----
p-123-134-014 -----
123-134-014 -----
p-129-234-001 -----

```

;

The following example specifies the **pctype=itui** parameter to display only ITU-I point codes.

rtrv-rte:pctype=itui

```
rlghncxa03w 05-01-07 12:05:33 EST EAGLE 31.12.0
  DPCI      ALIASN/N24      ALIASA      LSN      RC      APC
s-2-002-1  -----
s-2-002-2  -----          001-001-003 -----
s-1-002-3  -----          lsn1      1      s-1-002-3
                               lsn4      1      s-2-012-1
                               lsn5      2      2-100-1
                               lsn6      3      s-3-134-1
                               lsn2     10      s-2-002-2
                               lsn3     13      s-2-100-1
                               CLLI=-----
ps-2-100-1 -----
s-2-100-1  -----
2-100-1    -----
p-2-120-1  -----
p-7-100-1  -----
s-7-100-1  -----
ps-7-129-2 -----
ps-4-012-1 -----
p-2-012-1  -----
s-2-012-1  -----
s-3-134-1  -----
p-3-134-1  -----
ps-3-134-1 -----
ps-5-120-1 -----
s-5-120-1  -----
p-5-120-1  -----
CLLI=-----
```

;

The following example specifies the **pctype=itun** parameter to display only ITU-N point codes.

rtrv-rte:pctype=itun

```
rlghncxa03w 05-01-07 12:05:33 EST EAGLE 31.12.0
  DPCN      ALIASA      ALIASI      LSN      RC      APC
ps-1-1-1-2047-aa 100-120-120 s-1-123-1 -----
ps-1-1-1-2046-aa -----
ps-1-1-1-2045-aa -----
ps-1-1-1-2044-aa -----
ps-0-0-0-0323-aa -----
s-0-0-0-0323-aa -----
CLLI=-----
```

```

p-0-0-0-0323-aa ----- CLLI=-----
0-0-0-0323-aa ----- CLLI=-----
0-0-0-1298-aa ----- CLLI=-----
p-0-0-0-1298-aa ----- CLLI=-----
s-0-0-0-1298-aa ----- CLLI=-----
ps-0-0-0-1298-aa ----- CLLI=-----
p-1-1-0-0057-aa ----- CLLI=-----
p-1-1-1-0058-aa ----- CLLI=-----
p-1-1-1-0059-aa ----- CLLI=-----
ps-1-1-1-0059-aa ----- CLLI=-----
p-1-1-1-0060-aa ----- CLLI=-----
p-1-1-1-0061-aa ----- CLLI=-----
p-1-1-1-0125-aa ----- CLLI=-----
p-1-1-1-0125-xy ----- CLLI=-----
p-1-1-1-0126-xy ----- CLLI=-----
p-1-1-1-0126-aa ----- CLLI=-----
p-1-1-1-0127-bb ----- CLLI=-----
ps-1-1-1-0234-aa ----- CLLI=wearehereto
ps-1-1-1-0235-aa ----- CLLI=longcclinam
1-1-1-0235-aa ----- CLLI=-----
s-1-1-1-0235-aa ----- CLLI=-----
ps-1-0-1-0123-aa ----- CLLI=-----
p-1-1-1-0122-aa ----- CLLI=-----
s-1-1-1-0122-aa ----- CLLI=-----
ps-1-1-1-0122-aa ----- CLLI=-----
ps-1-1-1-0123-aa ----- CLLI=-----
s-1-1-1-0123-aa ----- CLLI=-----
p-1-1-1-0123-aa ----- CLLI=-----

```

;

The following example specifies the **pctype=ansi** parameter and the **pcst=p** parameter to display ANSI point codes that have the private point code subtype prefix (**p-**).

rtrv-rte:pctype=ansi:pcst=p

```

rlghncxa03w 05-01-07 12:05:33 EST EAGLE 31.12.0
      DPCA          ALIASI      ALIASN/N24      LSN      RC      APCA

```

```

p-001-002-004 -----
p-002-200-001 -----
p-002-003-001 -----
p-001-002-005 -----
p-001-002-006 -----
p-001-002-007 -----
p-001-002-008 -----
p-012-230-001 -----
p-123-134-014 -----
p-129-234-001 -----

```

;

The following example specifies the **pctype=itui** parameter and the **pcst=ps** parameter to display ITU-I point codes that have the private and spare point code subtype prefix (**ps-**).

rtrv-rte:pctype=itui:pcst=ps

```

rlghncxa03w 05-01-07 12:05:33 EST EAGLE 31.12.0
  DPCI      ALIASN/N24      ALIASA      LSN      RC      APC
ps-2-100-1 -----
ps-7-129-2 -----
ps-4-012-1 -----
ps-3-134-1 -----
ps-5-120-1 -----

```

;

The following example specifies the **pctype=itun** parameter and the **pcst=s** parameter to display ITU-N point codes that have the spare point code subtype prefix (**s-**).

rtrv-rte:pctype=itun:pcst=s

```

rlghncxa03w 05-01-07 12:05:33 EST EAGLE 31.12.0
  DPCN      ALIASA      ALIASI      LSN      RC      APC
s-0-0-0-0323-aa -----
s-0-0-0-1298-aa -----
s-1-1-1-0235-aa -----
s-1-1-1-0122-aa -----
s-1-1-1-0123-aa -----

```

;

The following example specifies the **pcst=none** parameter to display all point codes that have no point code subtype prefix.

rtrv-rte:pcst=none

```

rlghncxa03w 05-01-07 12:05:33 EST EAGLE 31.12.0
  DPCA      ALIASI      ALIASN/N24      LSN      RC      APCA
001-001-002 -----

```

```

                                CLLI=-----
008-001-001 -----
                                CLLI=systest1
020-001-* -----
                                CLLI=systest2
100-101-001 1-190-1 -----
                                CLLI=-----
100-101-002 s-1-012-1 -----
                                CLLI=-----
100-101-003 ----- 0-0-0-0123-aa -----
                                CLLI=-----
100-101-004 ----- s-0-0-0-0123-aa -----
                                CLLI=-----
012-230-001 -----
                                CLLI=-----
123-134-014 -----
                                CLLI=-----

DPCI      ALIASN/N24      ALIASA      LSN      RC      APC
2-100-1 -----
                                CLLI=-----

DPCN      ALIASA      ALIASI      LSN      RC      APC
0-0-0-0323-aa -----
                                CLLI=-----
0-0-0-1298-aa -----
                                CLLI=-----
1-1-1-0235-aa -----
                                CLLI=-----

DPCN24      ALIASA      ALIASI      LSN      RC      APC

```

;

The following example specifies the **pcst=p** parameter to display all point codes that have the private point code subtype prefix (**p-**).

rtrv-rte:pcst=p

```

rlghncxa03w 05-01-07 12:05:33 EST EAGLE 31.12.0
DPCA      ALIASI      ALIASN/N24      LSN      RC      APCA
p-001-002-004 -----
                                CLLI=-----
p-002-200-001 -----
                                CLLI=-----
p-002-003-001 -----
                                CLLI=-----
p-001-002-005 -----
                                CLLI=-----
p-001-002-006 -----
                                CLLI=-----
p-001-002-007 -----
                                CLLI=-----
p-001-002-008 -----
                                CLLI=-----
p-012-230-001 -----
                                CLLI=-----
p-123-134-014 -----
                                CLLI=-----
p-129-234-001 -----
                                CLLI=-----

DPCI      ALIASN/N24      ALIASA      LSN      RC      APC
p-2-120-1 -----
                                CLLI=-----
p-7-100-1 -----
                                CLLI=-----

```

```

p-2-012-1 -----
p-3-134-1 -----
p-5-120-1 -----
CLLI=-----

DPCN      ALIASA      ALIASI  LSN      RC      APC
p-0-0-0-0323-aa -----
p-0-0-0-1298-aa -----
p-1-1-0-0057-aa -----
p-1-1-1-0058-aa -----
p-1-1-1-0059-aa -----
p-1-1-1-0060-aa -----
p-1-1-1-0061-aa -----
p-1-1-1-0125-aa -----
p-1-1-1-0125-xy -----
p-1-1-1-0126-xy -----
p-1-1-1-0126-aa -----
p-1-1-1-0127-bb -----
p-1-1-1-0122-aa -----
p-1-1-1-0123-aa -----
CLLI=-----

DPCN24      ALIASA      ALIASI  LSN      RC      APC

```

;

The following example specifies **pcst=s** parameter to display all point codes that have the spare point code subtype prefix (s-).

rtrv-rte:pcst=s

```

rlghncxa03w 05-01-07 12:05:33 EST EAGLE 31.12.0
DPCA      ALIASI      ALIASN/N24  LSN      RC      APC
DPCI      ALIASN/N24      ALIASA      LSN      RC      APC
s-2-002-1 -----
s-2-002-2 -----
s-1-002-3 -----
lsn1      1      s-1-002-3
lsn4      1      s-2-012-1
lsn5      2      2-100-1
lsn6      3      s-3-134-1
lsn2      10     s-2-002-2
lsn3      13     s-2-100-1
s-2-100-1 -----
s-7-100-1 -----
s-2-012-1 -----
CLLI=-----

```

```

s-3-134-1 -----
s-5-120-1 -----
CLLI=-----
CLLI=-----

DPCN      ALIASA      ALIASI  LSN      RC      APC
s-0-0-0-0323-aa -----
CLLI=-----
s-0-0-0-1298-aa -----
CLLI=-----
s-1-1-1-0235-aa -----
CLLI=-----
s-1-1-1-0122-aa -----
CLLI=-----
s-1-1-1-0123-aa -----
CLLI=-----

DPCN24      ALIASA      ALIASI  LSN      RC      APC

```

;

The following example specifies the **pcst=ps** parameter to display all point codes that have the private and spare point code subtype prefix (**ps-**).

rtrv-rte:pcst=ps

```

rlghncxa03w 05-01-07 12:05:33 EST EAGLE 31.12.0
DPCA      ALIASI      ALIASN/N24  LSN      RC      APCA
DPCI      ALIASN/N24      ALIASA      LSN      RC      APC
ps-2-100-1 -----
CLLI=-----
ps-7-129-2 -----
CLLI=-----
ps-4-012-1 -----
CLLI=-----
ps-3-134-1 -----
CLLI=-----
ps-5-120-1 -----
CLLI=-----

DPCN      ALIASA      ALIASI  LSN      RC      APC
ps-1-1-1-2047-aa 100-120-120 s-1-123-1 -----
CLLI=-----
ps-1-1-1-2046-aa -----
CLLI=-----
ps-1-1-1-2045-aa -----
CLLI=-----
ps-1-1-1-2044-aa -----
CLLI=-----
ps-0-0-0-0323-aa -----
CLLI=-----
ps-0-0-0-1298-aa -----
CLLI=-----
ps-1-1-1-0059-aa -----
CLLI=-----
ps-1-1-1-0234-aa -----
CLLI=wearehereto
ps-1-1-1-0235-aa -----
CLLI=longcclinam
ps-1-0-1-0123-aa -----
CLLI=-----
ps-1-1-1-0122-aa -----
CLLI=-----
ps-1-1-1-0123-aa -----
CLLI=-----

```



```

;
rtrv-rte:dpc=1-1-**
tekelecstp 06-05-06 09:13:32 EST EAGLE 35.0.0
rtrv-rte:dpc=1-1-**
Command entered at terminal #4.
  DPCA          ALIASI      ALIASN/N24    LSN      RC      APC
  001-001-001  -----
                                ab64      15      001-001-003
                                wy64      25      001-001-001
                                xy64      25      001-001-002
                                CLLI=-----
  001-001-002  -----
                                ab64      15      001-001-003
                                wy64      25      001-001-001
                                xy64      25      001-001-002
                                CLLI=-----
  001-001-003  -----
                                ab64      15      001-001-003
                                wy64      25      001-001-001
                                xy64      25      001-001-002
                                CLLI=-----
  001-001-005  -----
                                ab64      15      001-001-003
                                wy64      25      001-001-001
                                xy64      25      001-001-002
                                CLLI=-----
  001-001-008  -----
                                ab64      15      001-001-003
                                wy64      25      001-001-001
                                xy64      25      001-001-002
                                CLLI=-----
  001-001-006  -----
                                ab64      15      001-001-003
                                wy64      25      001-001-001
                                xy64      25      001-001-002
                                CLLI=-----
;
rtrv-rte:dpc=1-1-***
tekelecstp 06-05-06 09:13:34 EST EAGLE 35.0.0
rtrv-rte:dpc=1-1-***
Command entered at terminal #4.
  DPCA          ALIASI      ALIASN/N24    LSN      RC      APC
  001-001-001  -----
                                ab64      15      001-001-003
                                wy64      25      001-001-001
                                xy64      25      001-001-002
                                CLLI=-----
  001-001-002  -----
                                ab64      15      001-001-003
                                wy64      25      001-001-001
                                xy64      25      001-001-002
                                CLLI=-----
  001-001-003  -----
                                ab64      15      001-001-003
                                wy64      25      001-001-001
                                xy64      25      001-001-002
                                CLLI=-----
  001-001-*    -----
                                ab64      15      001-001-003
                                wy64      25      001-001-001
                                xy64      25      001-001-002
                                CLLI=-----
  001-001-005  -----
                                ab64      15      001-001-003
                                wy64      25      001-001-001
                                xy64      25      001-001-002
                                CLLI=-----
  001-001-008  -----
                                ab64      15      001-001-003
                                wy64      25      001-001-001
                                xy64      25      001-001-002
                                CLLI=-----
  001-001-006  -----
                                ab64      15      001-001-003

```

```

;
rtrv-rte:dpc=1-**-*
tekelecstp 06-05-06 09:12:57 EST EAGLE 35.0.0
rtrv-rte:dpc=1-**-*
Command entered at terminal #4.
  DPCA          ALIASI      ALIASN/N24    LSN      RC      APCA
  001-001-001  -----
                                ab64      15      001-001-003
                                wy64      25      001-001-001
                                xy64      25      001-001-002
                                CLLI=-----
  001-001-002  -----
                                ab64      15      001-001-003
                                wy64      25      001-001-001
                                xy64      25      001-001-002
                                CLLI=-----
  001-001-003  -----
                                ab64      15      001-001-003
                                wy64      25      001-001-001
                                xy64      25      001-001-002
                                CLLI=-----
  001-001-*    -----
                                ab64      15      001-001-003
                                wy64      25      001-001-001
                                xy64      25      001-001-002
                                CLLI=-----
  001-001-005  -----
                                ab64      15      001-001-003
                                wy64      25      001-001-001
                                xy64      25      001-001-002
                                CLLI=-----
  001-001-008  -----
                                ab64      15      001-001-003
                                wy64      25      001-001-001
                                xy64      25      001-001-002
                                CLLI=-----
  001-001-006  -----
                                ab64      15      001-001-003
                                wy64      25      001-001-001
                                xy64      25      001-001-002
                                CLLI=-----
  001-002-006  -----
                                wy64      25      001-001-001
                                CLLI=-----
  001-002-004  -----
                                wy64      25      001-001-001
                                CLLI=-----
  001-002-*    -----
                                wy64      25      001-001-001
                                CLLI=-----
  001-003-001  -----
                                xy64      10      001-001-002
                                CLLI=-----
  001-003-002  -----
                                wy64      10      001-001-001
                                xy64      10      001-001-002
                                CLLI=-----
  001-003-003  -----
                                xy64      10      001-001-002
                                CLLI=-----
;
rtrv-rte:dpc=1-***-*
tekelecstp 06-05-06 09:13:06 EST EAGLE 35.0.0
  DPCA          ALIASI      ALIASN/N24    LSN      RC      APCA
  001-001-001  -----
                                ab64      15      001-001-003
                                wy64      25      001-001-001
                                xy64      25      001-001-002
                                CLLI=-----
  001-001-002  -----
                                ab64      15      001-001-003
                                wy64      25      001-001-001
                                xy64      25      001-001-002
                                CLLI=-----
  001-001-003  -----
                                ab64      15      001-001-003
                                wy64      25      001-001-001

```

```

                                xy64      25      001-001-002
                                CLLI=-----
001-*-*  -----
                                CLLI=-----
001-001-*  -----
                                ab64      15      001-001-003
                                wy64      25      001-001-001
                                xy64      25      001-001-002
                                CLLI=-----
001-001-005 -----
                                ab64      15      001-001-003
                                wy64      25      001-001-001
                                xy64      25      001-001-002
                                CLLI=-----
001-001-008 -----
                                ab64      15      001-001-003
                                wy64      25      001-001-001
                                xy64      25      001-001-002
                                CLLI=-----
001-001-006 -----
                                ab64      15      001-001-003
                                wy64      25      001-001-001
                                xy64      25      001-001-002
                                CLLI=-----
001-002-006 -----
                                wy64      25      001-001-001
                                CLLI=-----
001-002-004 -----
                                wy64      25      001-001-001
                                CLLI=-----
001-002-*  -----
                                wy64      25      001-001-001
                                CLLI=-----
001-003-001 -----
                                xy64      10      001-001-002
                                CLLI=-----
001-003-002 -----
                                wy64      10      001-001-001
                                xy64      10      001-001-002
                                CLLI=-----
001-003-003 -----
                                xy64      10      001-001-002
                                CLLI=-----
;
rtrv-rte:dpc=1-**-*:lsn=ab64
tekelecstp 06-05-06 09:14:06 EST EAGLE 35.0.0
LSN          DPC          RC
ab64          001-001-001    15
              001-001-002    15
              001-001-003    15
              001-001-*      15
              001-001-005    15
              001-001-008    15
              001-001-006    15
;
rtrv-rte:dpc=1-**-*:lsn=xx64
tekelecstp 06-05-06 09:33:27 EST EAGLE 35.0.0
LSN          DPC          RC
No routes meeting the requested criteria were found
;
rtrv-rte:dpcn=1000-*
tekelecstp 06-05-06 10:26:39 EST EAGLE 35.0.0
DPCN          ALIASA          ALIASI  LSN          RC          APC
01000-aa      -----
                                dpcn64    10      01000-aa
                                dpcn2      30      04000-aa
                                CLLI=-----
01000-ac      -----
                                dpcn1      25      01000-ac
                                CLLI=-----
;
rtrv-rte:dpcn=1000-*:lsn=dpcn64
tekelecstp 06-05-06 10:38:05 EST EAGLE 35.0.0
LSN          DPC          RC

```

```

      dpcn64          01000-aa      10
;
rtrv-rte:dpcn=p-* -aa
      tekelecstp 06-05-06 10:43:05 EST EAGLE 35.0.0
      DPCN          ALIASA          ALIASI  LSN          RC      APC
      p-02254-aa    ----- p1          10      02300-aa
                                     CLLI=-----
      p-03278-aa    ----- p1          12      02300-aa
                                     CLLI=-----
;
rtrv-rte:dpcn=s-9000-*
      tekelecstp 06-05-06 10:54:05 EST EAGLE 35.0.0
      DPCN          ALIASA          ALIASI  LSN          RC      APC
      s-09000-aa    ----- sdpcn      10      s-05000-aa
                                     CLLI=-----
      s-09000-ab    ----- sdpcn1     1       s-03000-ab
                                     CLLI=-----
;

```

Legend

DPC, DPCA, DPCI, DPCN, DPCN24—The destination point code to be reached through this route.

ALIAS, ALIASA, ALIASI, ALIASN/N24—The alias associated with the route.

CLLI—The CLLI associated with the route.

LSN—The name of the linkset assigned to this route.

RC—The relative cost (priority) assigned to the route.

APC, APCA, APCI, APCN, APCN24—The point code of the STP or SSP that is directly adjacent to the linkset. The point code may or may not be the same as the destination point code assigned to this route.

rtrv-rtx**Retrieve Exception Route**

Use this command to retrieve one or more exception route entries. Because all parameters are optional, the retrieve examines the entire Route table to find all entries that match the specified parameters. Entries with CIC-ECIC range values that fall in the range specified by the **cic** and **ecic** parameters are displayed.

Keyword: **rtrv-rtx**

Related Commands: **dlt-rtx, ent-rtx**

Command Class: Database Administration

Parameters

:cic= (optional)

Starting Circuit Identification Code. This parameter is used alone or together with the **ecic** parameter as exception routing criteria for the specified exception route.

Range: **0-16383**

:class= (optional)

Exception routing class. This parameter causes all exception route sets provisioned for the specified class to be displayed.

Range: **opc, ilsn, cic, si**

:dpc= (optional)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: **dpca**

Range: **p-, 000-255, *, **, *****

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

The asterisk values *, **, and *** are not valid for the *ni* subfield.

If ** or *** is specified for the *nc* subfield, either *, **, or *** must be specified for the *ncm* subfield.

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

When **chg-sid:pctype=ansi** is specified, *ni-*-** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:dpci= (optional)

Destination Point Code. ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps-

zone—0-7

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

:dpcn= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified with the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz, ***

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

An asterisk (*) can be specified for the node (*nnnnn* or every member of a flexible point code) or for the group code (*gc*) only when group codes are present in the point codes.

An asterisk (*) can be specified either for the node or for the group code, but not both.

prefix—s-, p-, ps-

*nnnnn—0-16383, **

*gc—aa-zz, **

m1-m2-m3-m4—0-14 for each member; values must sum to 14; or **-*-*-** when the point code includes a group code.

:dpcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*. The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:ecic= (optional)

Ending Circuit Identification Code. This parameter, together with the **cic** parameter, defines the CIC range that is used as exception routing criteria for the specified exception route.

Range: **0-16383**

:ilsn= (optional)

Incoming Link Set Name. This parameter contains the name of the originating linkset. The parameter value is used as part of the exception routing criteria for the specified exception route.

Range: *ayyyyyyyyy*

1 alphabetic character followed by up to 9 alphanumeric characters.

:lsn= (optional)

Link Set Name. The linkset associated with the specified exception route.

Range: *ayyyyyyyyy*

1 alphabetic character followed by up to 9 alphanumeric characters.

:opc= (optional)

ANSI origination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Range: **p-, 000-255, *, **, *****

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

The asterisk values *****, ******, and ******* are not valid for the *ni* subfield.

If ****** or ******* is specified for the *nc* subfield, either *****, ******, or ******* must be specified for the *ncm* subfield.

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

When **chg-sid:pctype=ansi** is specified, *ni*-*- is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:opci= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

zone—**0-7**

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

:opc= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmt** flexible point code option. A group code must be specified with the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz, ***

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

An asterisk (*) can be specified for the node (*nnnnn* or every member of a flexible point code) or for the group code (*gc*) only when group codes are present in the point codes.

An asterisk (*) can be specified either for the node or for the group code, but not both.

prefix—s-, p-, ps-

nnnnn—0-16383, *

gc—aa-zz, *

m1-m2-m3-m4—0-14 for each member; values must sum to 14; or *-*-*-* when the point code includes a group code.

:opc24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

msa—000-255

ssa—000-255

sp—000-255

:si= (optional)

Service Indicator. This parameter is used as part of the exception routing criteria for the specified exception route.

Range: **3-15**

Example

rtrv-rtx:dpc=1-1-1

rtrv-rtx:opca=6-*-*

rtrv-rtx:ilsn=lset4

rtrv-rtx:si=5

rtrv-rtx:cic=0:ecic=16383

Dependencies

Only one of the **opc**, **ilsn**, **cic**, **si**, or **class** parameters can be specified.

If the **ecic** parameter is specified, the **cic** parameter must also be specified.

The **ecic** parameter value cannot be less than the **cic** parameter value.

The Origin-Based MTP Routing feature must be enabled and turned on before this command can be entered.

The linkset name, as defined by the **ilsn** or **lsn** parameter, must exist.

Notes

** can be used in the network cluster member (*ncm*) subfield of **dpc/dpca** and **opc/opca** parameters to retrieve all point codes residing in (members of) a given network cluster (*ni-nc*).

** can be used in the network cluster (*nc*) subfield of **dpc/dpca** and **opc/opca** parameters to retrieve all point codes residing in (members of) a given network (*ni*).

*** can be used in the network cluster member (*ncm*) subfield of **dpc/dpca/opc/opca** to retrieve all point codes residing in (members of) a given network cluster (*ni-nc*), and the network cluster address (if any).

*** can be used in the network cluster (*nc*) subfield of **dpc/dpca** and **opc/opca** to retrieve all point codes residing in (members of) a given network (*ni*), and the network address (if any).

* is allowed only for retrieves (for example, **rtrv-rtx:dpcn=*-aa** or **rtrv-rtx:opcnc=*-xy**) on ITU-N DPCs and ITU-N OPCs if the ITUDUPPC feature is on. ** and *** is not allowed for ITU-N DPCs and OPCs (for example, **dpcn=**-xy** is rejected). The node and group code cannot both be * (**dpcn=*.*** is rejected).

Output

Retrieve all provisioned exception routes.

rtrv-rtx

stdcfg2b 06-05-19 17:22:37 EST EAGLE 35.0.0

DPCA	RTX-CRITERIA	LSN	RC	APC
001-101-001	OPCA			
	001-001-001	e2e4	10	004-001-000
	001-001-001	e2e7	30	007-001-000
	001-001-001	e2m1s1	30	002-101-001
	001-001-001	e2m1s3	50	003-101-001
	001-001-001	e2m1s2	50	002-102-001
	002-001-000	e2e3	5	003-001-000
	002-001-000	e2e1	15	001-001-000
	002-002-002	e2e4	10	004-001-000
	002-002-002	e2e7	20	007-001-000
	002-002-002	e2m1s1	30	002-101-001
	002-002-002	e2m1s2	40	002-102-001
	002-002-002	e2m1s3	50	003-101-001
	002-002-002	e2e1	60	001-001-000
	002-101-001	e2e3	5	003-001-000
	002-101-001	e2e4	15	004-001-000
	003-003-003	e2e7	10	007-001-000
	003-003-003	e2m1s1	20	002-101-001
	003-003-003	e2m1s2	30	002-102-001
	003-003-003	e2m1s3	40	003-101-001
	003-003-003	e2e1	50	001-001-000
	003-003-003	e2e4	60	004-001-000
	004-004-004	e2m1s1	10	002-101-001
	004-004-004	e2m1s2	20	002-102-001
	004-004-004	e2m1s3	30	003-101-001
	004-004-004	e2e1	40	001-001-000
	004-004-004	e2e4	50	004-001-000
	004-004-004	e2e7	60	007-001-000
	005-005-005	e2m1s2	10	002-102-001
	005-005-005	e2m1s3	20	003-101-001
	005-005-005	e2e1	30	001-001-000
	005-005-005	e2e4	40	004-001-000
	005-005-005	e2e7	50	007-001-000
	005-005-005	e2m1s1	60	002-101-001
	006-006-006	e2m1s3	10	003-101-001
	006-006-006	e2e1	20	001-001-000
	006-006-006	e2e4	30	004-001-000
	006-006-006	e2e7	40	007-001-000
	006-006-006	e2m1s1	50	002-101-001
	006-006-006	e2m1s2	60	002-102-001
	007-001-000	e2e1	10	001-001-000
	020-030-050	e2e1	10	001-001-000
	021-021-021	e2e1	10	001-001-000
	006-* - *	e2e1	10	001-001-000
	006-* - *	e2e4	20	004-001-000
	006-* - *	e2e7	30	007-001-000
	006-007-*	e2e4	10	004-001-000
	ILSN			
	e2m1s1	e2e7	10	007-001-000
	e2m1s1	e2e1	20	001-001-000
	e2m1s1	e2e4	30	004-001-000
	e2m1s1	e2m1s3	40	003-101-001
	e2m1s1	e2m1s2	50	002-102-001
	e2m1s2	e2e4	10	004-001-000
	e2e7	e2e4	10	004-001-000

	e2e7	e2m1s1	20	002-101-001
	e2e7	e2m1s2	30	002-102-001
	e2e7	e2m1s3	30	003-101-001
	CIC - ECIC			
	0 1000	e2e1	10	001-001-000
	0 1000	e2e4	10	004-001-000
	0 1000	e2e7	30	007-001-000
	0 1000	e2m1s1	30	002-101-001
	0 1000	e2m1s2	50	002-102-001
	0 1000	e2m1s3	50	003-101-001
	1001 2000	e2e7	10	007-001-000
	1001 2000	e2m1s1	10	002-101-001
	1001 2000	e2m1s2	20	002-102-001
	1001 2000	e2m1s3	20	003-101-001
	1001 2000	e2e1	30	001-001-000
	1001 2000	e2e4	30	004-001-000
	2001 3000	e2m1s2	10	002-102-001
	2001 3000	e2m1s3	10	003-101-001
	2001 3000	e2e1	20	001-001-000
	2001 3000	e2e4	20	004-001-000
	2001 3000	e2e7	30	007-001-000
	2001 3000	e2m1s1	30	002-101-001
	SI			
	3	e2e4	10	004-001-000
	3	e2e7	20	007-001-000
	3	e2m1s1	30	002-101-001
	3	e2m1s2	40	002-102-001
	3	e2m1s3	50	003-101-001
	3	e2e1	60	001-001-000
	5	e2e1	10	001-001-000
	5	e2e4	10	004-001-000
	5	e2e7	20	007-001-000
	5	e2m1s1	20	002-101-001
	5	e2m1s2	30	002-102-001
	5	e2m1s3	30	003-101-001
002-102-005	OPCA			
	001-001-001	e2e7	10	007-001-000
	001-001-001	e2m1s2	10	002-102-001
	001-001-001	e2m1s3	40	003-101-001
	CIC - ECIC			
	3 3	e2m1s1	10	002-101-001
	4 10	e2e1	10	001-001-000
	4 10	e2e7	10	007-001-000
	SI			
	3	e2m1s1	10	002-101-001
100-100-001	OPCA			
	001-001-001	e2m1s2	10	002-102-001
	002-002-002	e2m1s1	10	002-101-001
DPCI	RTX-CRITERIA	LSN	RC	APC
1-070-1	OPCN			
	s-1-044-1-aa	ipc3	10	1-030-3
	s-1-099-1-aa	ipc2	10	1-030-2
	s-2-001-2-aa	ipc4	10	1-030-4
s-7-010-7	OPCA			
	007-001-000	npc1	10	1-010-1-aa

Commands

rtrv-rtx

	OPCN			
	1-050-1-aa	ipc1	10	1-030-1
	1-050-1-aa	ipc2	10	1-030-2
	1-050-1-aa	npc8	50	1-020-4-aa
	1-050-1-aa	npc1	50	1-010-1-aa
DPCN	RTX-CRITERIA	LSN	RC	APC
1-050-1-aa	OPCA			
	002-001-000	npc6	10	1-020-2-aa
	002-101-001	npc8	5	1-020-4-aa
	002-102-001	npc5	10	1-020-1-aa
	007-001-000	npc8	5	1-020-4-aa
	OPCI			
	1-040-1	npc3	10	1-010-3-aa
	1-040-1	ipc1	10	1-030-1
	2-001-1	ipc1	10	1-030-1
	OPCN			
	1-010-2-aa	npc3	5	1-010-3-aa
	1-010-2-aa	npc2	10	1-010-2-aa
	1-010-2-aa	npc4	20	1-010-4-aa
	1-020-1-aa	npc3	10	1-010-3-aa
	1-020-1-aa	npc4	55	1-010-4-aa
	1-020-1-aa	npc2	60	1-010-2-aa
	1-020-1-aa	npc7	60	1-020-3-aa
	1-020-1-aa	npc5	70	1-020-1-aa
	1-051-1-aa	npc8	10	1-020-4-aa
	2-001-2-aa	npc8	10	1-020-4-aa
	4-023-4-aa	npc3	10	1-010-3-aa
	OPCI			
	s-1-099-1	npc8	10	1-020-4-aa
	s-1-099-1	npc6	10	1-020-2-aa
	OPCN			
	s-1-099-1-aa	npc6	10	1-020-2-aa
	ILSN			
	npc1	npc6	6	1-020-2-aa
	npc2	npc7	5	1-020-3-aa
	ipc1	npc1	10	1-010-1-aa
	ipc1	npc2	20	1-010-2-aa
	ipc1	npc3	20	1-010-3-aa
	SI			
	3	npc8	10	1-020-4-aa
3-077-3-aa	OPCN			
	1-010-2-aa	npc2	10	1-010-2-aa
	ILSN			
	npc2	npc2	10	1-010-2-aa
DESTINATION ENTRIES ALLOCATED:	2000			
FULL DPC(s):	53			
EXCEPTION DPC(s):	51			
NETWORK DPC(s):	1			
CLUSTER DPC(s):	3			
TOTAL DPC(s):	108			
CAPACITY (% FULL):	5%			
ALIASES ALLOCATED:	12000			
ALIASES USED:	17			
CAPACITY (% FULL):	1%			

X-LIST ENTRIES ALLOCATED: 500

;

Retrieve all exception routes provisioned for a specific DPC.

rtrv-rtx:dpcn=1-50-1-aa

stdcfg2b 06-05-19 17:35:33 EST EAGLE 35.0.0

DPCN	RTX-CRITERIA	LSN	RC	APC
1-050-1-aa	OPCA			
	002-001-000	npc6	10	1-020-2-aa
	002-101-001	npc8	5	1-020-4-aa
	002-102-001	npc5	10	1-020-1-aa
	007-001-000	npc8	5	1-020-4-aa
	OPCI			
	1-040-1	npc3	10	1-010-3-aa
	1-040-1	ipc1	10	1-030-1
	2-001-1	ipc1	10	1-030-1
	OPCN			
	1-010-2-aa	npc3	5	1-010-3-aa
	1-010-2-aa	npc2	10	1-010-2-aa
	1-010-2-aa	npc4	20	1-010-4-aa
	1-020-1-aa	npc3	10	1-010-3-aa
	1-020-1-aa	npc4	55	1-010-4-aa
	1-020-1-aa	npc2	60	1-010-2-aa
	1-020-1-aa	npc7	60	1-020-3-aa
	1-020-1-aa	npc5	70	1-020-1-aa
	1-051-1-aa	npc8	10	1-020-4-aa
	2-001-2-aa	npc8	10	1-020-4-aa
	4-023-4-aa	npc3	10	1-010-3-aa
	OPCI			
	s-1-099-1	npc8	10	1-020-4-aa
	s-1-099-1	npc6	10	1-020-2-aa
	OPCN			
	s-1-099-1-aa	npc6	10	1-020-2-aa
	ILSN			
	npc1	npc6	6	1-020-2-aa
	npc2	npc7	5	1-020-3-aa
	ipc1	npc1	10	1-010-1-aa
	ipc1	npc2	20	1-010-2-aa
	ipc1	npc3	20	1-010-3-aa
	SI			
	3	npc8	10	1-020-4-aa

DESTINATION ENTRIES ALLOCATED: 2000

FULL DPC(s): 53

EXCEPTION DPC(s): 51

NETWORK DPC(s): 1

CLUSTER DPC(s): 3

TOTAL DPC(s): 108

CAPACITY (% FULL): 5%

ALIASES ALLOCATED: 12000

ALIASES USED: 17

CAPACITY (% FULL): 1%

X-LIST ENTRIES ALLOCATED: 500

;

Retrieve all provisioned exception routes for a specific exception criteria.

rtrv-rtx:dpcn=1-50-1-aa:opci=1-40-1

stdcfg2b 06-05-19 17:38:33 EST EAGLE 35.0.0

DPCN	RTX-CRITERIA	LSN	RC	APC
1-050-1-aa	OPCI			
	1-040-1	npc3	10	1-010-3-aa
	1-040-1	ipc1	10	1-030-1

DESTINATION ENTRIES ALLOCATED: 2000
 FULL DPC(s): 53
 EXCEPTION DPC(s): 51
 NETWORK DPC(s): 1
 CLUSTER DPC(s): 3
 TOTAL DPC(s): 108
 CAPACITY (% FULL): 5%
 ALIASES ALLOCATED: 12000
 ALIASES USED: 17
 CAPACITY (% FULL): 1%
 X-LIST ENTRIES ALLOCATED: 500

;

Retrive all provisioned exception routes for a specific exception criteria.

rtrv-rtx:dpcn=1-101-1:cic=0:ecic=1000

stdcfg2b 06-05-19 17:42:00 EST EAGLE 35.0.0

DPCA	RTX-CRITERIA	LSN	RC	APC
001-101-001	CIC - ECIC			
	0 1000	e2e1	10	001-001-000
	0 1000	e2e4	10	004-001-000
	0 1000	e2e7	30	007-001-000
	0 1000	e2m1s1	30	002-101-001
	0 1000	e2m1s2	50	002-102-001
	0 1000	e2m1s3	50	003-101-001

DESTINATION ENTRIES ALLOCATED: 2000
 FULL DPC(s): 53
 EXCEPTION DPC(s): 51
 NETWORK DPC(s): 1
 CLUSTER DPC(s): 3
 TOTAL DPC(s): 108
 CAPACITY (% FULL): 5%
 ALIASES ALLOCATED: 12000
 ALIASES USED: 17
 CAPACITY (% FULL): 1%
 X-LIST ENTRIES ALLOCATED: 500

;

Retrieve exception routes for a specific class.

rtrv-rtx:opc=1-1-1

stdcfg2b 06-05-19 17:43:55 EST EAGLE 35.0.0

DPCA	RTX-CRITERIA	LSN	RC	APC
001-101-001	OPCA			
	001-001-001	e2e4	10	004-001-000
	001-001-001	e2e7	30	007-001-000
	001-001-001	e2m1s1	30	002-101-001
	001-001-001	e2m1s3	50	003-101-001

```

                                001-001-001                e2m1s2    50    002-102-001

002-102-005  OPCA
              001-001-001                e2e7      10    007-001-000
              001-001-001                e2m1s2    10    002-102-001
              001-001-001                e2m1s3    40    003-101-001

100-100-001  OPCA
              001-001-001                e2m1s2    10    002-102-001

DESTINATION ENTRIES ALLOCATED:  2000
FULL DPC(s):                    53
EXCEPTION DPC(s):               51
NETWORK DPC(s):                 1
CLUSTER DPC(s):                 3
TOTAL DPC(s):                   108
CAPACITY (% FULL):              5%
ALIASES ALLOCATED:              12000
ALIASES USED:                   17
CAPACITY (% FULL):              1%
X-LIST ENTRIES ALLOCATED:       500
;

```

Retrieve excption routes for a specfic linkset.

rtrv-rtx:lsn=npc1

stdcfg2b 06-05-19 17:48:26 EST EAGLE 35.0.0

DPCI	RTX-CRITERIA	LSN	RC	APC
s-7-010-7	OPCA			
	007-001-000	npc1	10	1-010-1-aa
	OPCN			
	1-050-1-aa	npc1	50	1-010-1-aa
DPCN	RTX-CRITERIA	LSN	RC	APC
1-050-1-aa	ILSN			
	ipc1	npc1	10	1-010-1-aa

```

DESTINATION ENTRIES ALLOCATED:  2000
FULL DPC(s):                    53
EXCEPTION DPC(s):               51
NETWORK DPC(s):                 1
CLUSTER DPC(s):                 3
TOTAL DPC(s):                   108
CAPACITY (% FULL):              5%
ALIASES ALLOCATED:              12000
ALIASES USED:                   17
CAPACITY (% FULL):              1%
X-LIST ENTRIES ALLOCATED:       500
;

```

Retrieve exception routes for a network cluster members of a OPC.

rtrv-rtx:dpc=1-101-1:opc=6-**-*

stdcfg2b 06-05-19 17:54:20 EST EAGLE 35.0.0

DPCA	RTX-CRITERIA	LSN	RC	APC
001-101-001	OPCA			
	006-006-006	e2m1s3	10	003-101-001
	006-006-006	e2e1	20	001-001-000
	006-006-006	e2e4	30	004-001-000
	006-006-006	e2e7	40	007-001-000

```

                                006-006-006          e2m1s1      50      002-101-001
                                006-006-006          e2m1s2      60      002-102-001
                                006-007-*            e2e4        10      004-001-000

DESTINATION ENTRIES ALLOCATED:  2000
FULL DPC(s):                     53
EXCEPTION DPC(s):                51
NETWORK DPC(s):                  1
CLUSTER DPC(s):                  3
TOTAL DPC(s):                   108
CAPACITY (% FULL):               5%
ALIASES ALLOCATED:               12000
ALIASES USED:                    17
CAPACITY (% FULL):               1%
X-LIST ENTRIES ALLOCATED:        500
;

```

Retrieve exception routes for all cluster member plus itself of an OPC.

rtrv-rtx:dpc=1-101-1:opc=6-*-***

stdcfg2b 06-05-19 17:57:32 EST EAGLE 35.0.0

DPCA	RTX-CRITERIA	LSN	RC	APC
001-101-001	OPCA			
	006-006-006	e2m1s3	10	003-101-001
	006-006-006	e2e1	20	001-001-000
	006-006-006	e2e4	30	004-001-000
	006-006-006	e2e7	40	007-001-000
	006-006-006	e2m1s1	50	002-101-001
	006-006-006	e2m1s2	60	002-102-001
	006-*-*	e2e1	10	001-001-000
	006-*-*	e2e4	20	004-001-000
	006-*-*	e2e7	30	007-001-000
	006-007-*	e2e4	10	004-001-000

```

DESTINATION ENTRIES ALLOCATED:  2000
FULL DPC(s):                     53
EXCEPTION DPC(s):                51
NETWORK DPC(s):                  1
CLUSTER DPC(s):                  3
TOTAL DPC(s):                   108
CAPACITY (% FULL):               5%
ALIASES ALLOCATED:               12000
ALIASES USED:                    17
CAPACITY (% FULL):               1%
X-LIST ENTRIES ALLOCATED:        500
;

```

Retrieve route exceptions by criteria class.

rtrv-rtx:class=cic

tklc1191001 06-05-11 08:50:55 EST EAGLE5 35.0.0

DPCA	RTX-CRITERIA	LSN	RC	APC
225-225-184	CIC - ECIC			
	0 2499	ls1212a0	10	012-100-012
	0 2499	ls1212a2	20	012-102-012
	0 2499	ls1212a4	30	012-104-012
	0 2499	ls1212a6	40	012-106-012
	0 2499	ls1213a0	50	012-101-013
	0 2499	ls1213a2	60	012-103-013
	2500 4999	ls1212a4	10	012-104-012
	2500 4999	ls1212a6	10	012-106-012

DPCI	RTX-CRITERIA	LSN	RC	APC
7-224-7	CIC - ECIC			
	0 2499	ls1207i0	10	1-177-2
	0 2499	ls1207i2	20	1-179-2
	0 2499	ls1207i4	30	1-181-2
	0 2499	ls1207i6	40	1-183-2
	0 2499	ls1208i0	50	1-185-2
	0 2499	ls1208i2	60	1-187-2
	2500 4999	ls1207i4	10	1-181-2
	2500 4999	ls1207i6	10	1-183-2
	2500 4999	ls1208i0	20	1-185-2
	2500 4999	ls1208i2	20	1-187-2
	2500 4999	ls1208i4	30	1-189-2
	2500 4999	ls1208i6	30	1-191-2
	5000 7499	ls1208i0	10	1-185-2
	5000 7499	ls1208i2	20	1-187-2
	5000 7499	ls1208i4	30	1-189-2
DPCN	RTX-CRITERIA	LSN	RC	APC
	7-208-7-aa			
	CIC - ECIC			
	0 2499	ls1205n0	10	1-161-2-aa
	0 2499	ls1205n2	20	1-163-2-aa
	0 2499	ls1205n4	30	1-165-2-aa
	0 2499	ls1205n6	40	1-167-2-aa
7-223-7-aa	CIC - ECIC			
	0 2499	ls1205n2	10	1-163-2-aa
	0 2499	ls1205n4	20	1-165-2-aa
	0 2499	ls1205n6	30	1-167-2-aa
	0 2499	ls1206n0	40	1-169-2-aa
	0 2499	ls1206n2	50	1-171-2-aa
	0 2499	ls1206n4	60	1-173-2-aa
	2500 4999	ls1205n6	10	1-167-2-aa
	2500 4999	ls1206n0	10	1-169-2-aa
	2500 4999	ls1206n2	20	1-171-2-aa
	2500 4999	ls1206n4	20	1-173-2-aa
	2500 4999	ls1206n6	30	1-175-2-aa
	2500 4999	ls2116n0	30	2-233-1-aa
	5000 7499	ls1206n2	10	1-171-2-aa
	5000 7499	ls1206n4	20	1-173-2-aa
	5000 7499	ls1206n6	30	1-175-2-aa
	5000 7499	ls2116n0	40	2-233-1-aa
	5000 7499	ls2116n2	50	2-235-1-aa
	5000 7499	ls2116n4	60	2-237-1-aa
	7500 9999	ls1206n6	10	1-175-2-aa
	7500 9999	ls2116n0	10	2-233-1-aa
	7500 9999	ls2116n2	20	2-235-1-aa
	7500 9999	ls2116n4	20	2-237-1-aa
	7500 9999	ls2116n6	30	2-239-1-aa
	7500 9999	ls2216n0	30	2-233-2-aa
	10000 12499	ls2116n2	10	2-235-1-aa
	10000 12499	ls2116n4	20	2-237-1-aa
	10000 12499	ls2116n6	30	2-239-1-aa
	10000 12499	ls2216n0	40	2-233-2-aa
	10000 12499	ls2216n2	50	2-235-2-aa
	10000 12499	ls2216n4	60	2-237-2-aa
	12500 16383	ls2116n6	10	2-239-1-aa
	12500 16383	ls2216n0	10	2-233-2-aa
	12500 16383	ls2216n2	20	2-235-2-aa
	12500 16383	ls2216n4	20	2-237-2-aa
	12500 16383	ls2216n6	30	2-239-2-aa
	12500 16383	ls1205n0	30	1-161-2-aa


```

DESTINATION ENTRIES ALLOCATED:    6000
FULL DPC(s):                      664
EXCEPTION DPC(s):                 5272
NETWORK DPC(s):                   1
CLUSTER DPC(s):                   1
TOTAL DPC(s):                     5938
CAPACITY (% FULL):                99%
ALIASES ALLOCATED:                12000
ALIASES USED:                     1185
CAPACITY (% FULL):                10%
X-LIST ENTRIES ALLOCATED:         500
;

```

rtrv-sccp-serv**Retrieve SCCP Service**

Use this command to display the SCCP Service application relationship information maintained by the EAGLE 5 ISS.

Keyword: rtrv-sccp-serv

Related Commands: chg-sccp-serv, dlt-sccp-serv

Command Class: Basic

Parameters

:serv= (optional)

Name of the service to be retrieved.

Range: gflex, gport

Dependencies

The feature associated with the **serv** parameter must be enabled and turned on.

Notes

Point codes are grouped by service in the output.

Output

The following example displays output when no supporting features are turned on and the SCCP Service table is empty:

rtrv-sccp-serv

```
tekelecstp 05-12-20 08:28:48 EST  EAGLE 34.3.0
```

```
No Entries Found.
```

```
;
```

The following example displays output when the G-Port feature is turned on and the SCCP Service table is empty:

rtrv-sccp-serv

```
tekelecstp 05-12-20 08:31:24 EST  EAGLE 34.3.0
```

```
-----
Service      : GPORT
State        : Offline
GTT Option   : Yes
-----
```

```
;
```

The following example displays output when the G-Port and G-Flex features are turned on and the SCCP Service table is empty:

rtrv-sccp-serv

```
tekelecstp 05-12-20 08:32:58 EST  EAGLE 34.3.0
```

```
-----
Service      : GFLEX
State        : Offline
GTT Option   : Yes
-----
```

```
-----
Service      : GPORT
State        : Offline
GTT Option   : Yes
-----
```

```
;
```

The following example displays output when the G-Port service is ONLINE and the service set contains ANSI point codes:

rtrv-sccp-serv

```
tekelecstp 05-12-20 08:41:38 EST  EAGLE 34.3.0
```

```
-----
Service      : GFLEX
State        : Offline
GTT Option   : Yes
-----
```

```
-----
Service      : GPORT
State        : Online
GTT Option   : Yes
-----
```

```
-----
ANSI PC      RC
001-001-001  10
002-002-002  20
003-003-003  30
004-004-004  40
-----
```

```
;
```

The following example displays output when the GPORT service is ONLINE and there are ANSI and ITU-I point codes in the service set.

rtrv-sccp-serv

```
tekelecstp 05-12-20 08:51:53 EST EAGLE 34.3.0
```

```
-----
Service      : GFLEX
State        : Offline
GTT Option   : Yes
-----
```

```
-----
Service      : GPORT
State        : Online
GTT Option   : Yes
-----
```

```
ANSI PC      RC
001-001-001  10
002-002-002  20
003-003-003  30
004-004-004  40
```

```
ITUI PC      RC
2-002-2      10
3-003-3      10
```

;

The following example displays output from an SCCP service set that includes ITU-N spare point codes:

rtrv-sccp-serv

```
tekelecstp 06-01-09 13:53:51 EST EAGLE 34.3.0
```

```
-----
Service      : GFLEX
State        : Offline
GTT Option   : No
-----
```

```
ANSI PC      RC
001-003-004  01
```

```
ITUN SPARE   RC
s-00502      01
s-00503      01
```

```
-----
Service      : GPORT
State        : Offline
GTT Option   : Yes
-----
```

```
ANSI PC      RC
001-003-004  01
```

;

The following example displays output when the G-Port and G-Flex services are turned on and contain SCCP reroute point codes:

rtrv-sccp-serv

```
tklc1070501 06-02-08 08:30:37 EST EAGLE 34.3.0
```

```
-----
Service      : GFLEX
State        : Offline
GTT Option   : Yes
-----
```

ANSI PC	RC
070-040-001	10
070-040-002	10
070-040-003	10
070-040-004	10
070-040-005	10
070-040-006	10
070-040-007	10

ITUI PC	RC
4-200-0	10
4-200-1	10
4-200-2	10
4-200-3	10
4-200-4	10
4-200-5	10
4-200-6	10

ITUN PC	RC
2-101-0-aa	10
2-101-1-aa	10
2-101-2-aa	10
2-101-3-aa	10
2-101-0-bc	10
2-101-1-bc	10
2-101-2-bc	10

ITUI SPARE	RC
s-4-200-0	10
s-4-200-1	10
s-4-200-2	10
s-4-200-3	10
s-4-200-4	10
s-4-200-5	10
s-4-200-6	10

ITUN SPARE	RC
s-2-101-0-aa	10
s-2-101-1-aa	10
s-2-101-2-aa	10
s-2-101-3-aa	10
s-2-101-0-bc	10
s-2-101-1-bc	10
s-2-101-2-bc	10

ITUN24	RC
060-060-001	10
060-060-002	10
060-060-003	10
060-060-004	10
060-060-005	10
060-060-006	10
060-060-007	10

```

-----
Service      : GPORT
State       : Offline
GTT Option  : Yes
-----

```

ANSI PC	RC
070-050-001	10
070-050-002	10
070-050-003	10

```

070-050-004 10
070-050-005 10
070-050-006 10
070-050-007 10

ITUI PC      RC
4-201-0     10
4-201-1     10
4-201-2     10
4-201-3     10
4-201-4     10
4-201-5     10
4-201-6     10

ITUN PC      RC
2-102-0-aa  10
2-102-1-aa  10
2-102-2-aa  10
2-102-3-aa  10
2-102-0-bc  10
2-102-1-bc  10
2-102-2-bc  10

ITUI SPARE   RC
s-4-201-0    10
s-4-201-1    10
s-4-201-2    10
s-4-201-3    10
s-4-201-4    10
s-4-201-5    10
s-4-201-6    10

ITUN SPARE   RC
s-2-102-0-aa 10
s-2-102-1-aa 10
s-2-102-2-aa 10
s-2-102-3-aa 10
s-2-102-0-bc 10
s-2-102-1-bc 10
s-2-102-2-bc 10

ITUN24       RC
060-070-001  10
060-070-002  10
060-070-003  10
060-070-004  10
060-070-005  10
060-070-006  10
060-070-007  10

```

;

The **rtrv-sccp-serv** table capacity information is also reported by the **rtrv-tbl-capacity** command.

rtrv-sccp-serv

```
tklcl090701 06-05-24 14:55:09 EST EAGLE 34.3.0
```

```

-----
Service      : GFLEX
State        : Online
GTT Option   : Yes
-----

```

```

ANSI PC      RC
006-030-006  10

```

```
ITUI PC      RC
```

```
5-030-5      10
```

```
ITUN PC      RC
10485-bb     10
```

```
-----
Service      : GP0RT
State        : Online
GTT Option   : Yes
-----
```

```
ANSI PC      RC
006-030-006  10
```

```
ITUI PC      RC
5-030-5      10
```

```
ITUN PC      RC
10485-bb     10
```

```
SCCPSRV  table is (12 of 96) 13% full.
```

```
;
```

rtrv-sccpopts

Retrieve SCCP Options

Use this command to display the current value of one or more of the SCCP option indicators maintained in the STP options table.

Keyword: **rtrv-sccpopts**

Related Commands: **chg-sccpopts**

Command Class: Database Administration

Parameters

This command has no parameters.

Example

```
rtrv-sccpopts
```

Dependencies

None

Notes

The **dfltcgpcasn** and **dfltcgpcisn** parameters display only when the Origin-based SCCP Routing feature is enabled.

Output

The following example displays output when the Origin-based MTP Routing feature is enabled and turned on.

rtrv-sccopts

```
tekelecstp 06-03-16 14:07:11 EST EAGLE 35.0.0
```

SCCP OPTIONS

```
-----
CLASS1SEQ          off
MOBRSCCPOPC        MTP
```

```
;
```

The following example displays output when the GSM MAP Screening feature is enabled and turned on, and GSM MAP Screening is enabled for TCAP_Continue and TCAP_End messages.

rtrv-sccopts

```
tekelecstp 06-07-04 05:46:41 EST EAGLE 35.1.0
```

SCCP OPTIONS

```
-----
CLASS1SEQ          off
DFLTGTTMODE        CdPA
GMSTCAPCE          on
```

```
;
```

rtrv-scr-aftp**Retrieve Allowed Affected Point Code**

Use this command to show the allowed affected point code (AFTP) screening references in the AFTP entity set.

Keyword: **rtrv-scr-aftp**

Related Commands: **chg-scr-aftp**, **dlt-scr-aftp**, **ent-scr-aftp**

Command Class: Database Administration

Parameters

:actname= (optional)

The name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: *ayyyyy*, **none**

1 alphabetic character followed by up to 5 alphanumeric characters.

none—Display only those gateway screening rules that do not have a gateway screening stop action set assigned to them

:all= (optional)

Displays all AFTP screening references.

Range: **yes**, **no**

Default: **no**

:area= (optional)

The ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:id= (optional)

The ITU international ID. The parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7, ***

:msa= (optional)

The 24-bit ITU national main signaling area. The main signaling area is specified in the point code. The format of the point code is *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:nc= (optional)

The network cluster identifier value. This parameter restricts display to those entries containing this specific cluster of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0–255**.

Range: **0-255 ***

Default: Display all

:ncm= (optional)

The network cluster member identifier value. This parameter restricts display to those entries containing this specific cluster member of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0–255**.

Range: **0-255 ***

Default: Display all

:ni= (optional)

The network identifier value. This parameter restricts display to those entries containing this specific network of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0–255**.

Range: **0-255 ***

Default: Display all

:npc= (optional)

The ITU national point code. An asterisk (*) indicates the full range of values from **00000–16383**. Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see Appendix A for information on converting the point code format.

Range: **00000-16383 ***

:nsfi= (optional)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range: **stop**

stop—The gateway screening process ends and the message proceeds through normal routing.

Default: Display all

:nsr= (optional)

The next screening reference parameter indicates which screening reference in the specified screening category (**nsfi**) is to be used in the screening process.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

Default: Display all

:pcst= (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range: none, s

Default: none

:sp= (optional)

The 24-bit ITU national signaling point. This parameter specifies the signaling point (sp) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: 000-255 *

:sr= (optional)

The AFTPC screening reference name

Range: ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Default: Display all

:ssa= (optional)

The 24-bit ITU national sub signaling area. The sub signaling area is specified in the point code. The format of the point code is *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: 0-255 *

:ssn= (optional)

Subsystem number. An asterisk (*) indicates the full range of values from **0-255**.

Range: 1-255

Default: Display all.

:zone= (optional)

The ITU international zone. The parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0-7**.

Range: 0-7, *

Example

```
rtrv-scr-aftpc
```

```
rtrv-scr-aftpc:sr=iec:ni=240:nc=001:ncm=010&&014:ssn=012
```

```
rtrv-scr-aftpc:sr=iec
```

```
rtrv-scr-aftpc:all=yes
```

```
rtrv-scr-aftpc:sr=iec:ni=240:nc=001:ncm=010:ssn=012:actname=copy
```

```
rtrv-scr-aftpc:sr=aft1
```

```
rtrv-scr-aftpc:sr=aft1:zone=1:area=2:id=3:nsfi=stop:ssn=1:pcst=s
```

Dependencies

If the **nsfi** parameter is specified, the parameter value must be **stop**.

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

If **nc=*** is specified, **ncm=*** must be specified. If **ni=*** is specified, **nc=*** and **nc=*** must be specified. If **zone=*** is specified, **area=*** and **id=*** must be specified. If **area=*** is specified, **id=*** must be specified. If **msa=*** is specified, **ssa=*** and **sp=*** must be specified. If **ssa=*** is specified, **sp=*** must be specified.

The character **c** is not a valid value for the **ni**, **nc**, **ncm**, **zone**, **area**, **id**, **msa**, **ssa**, **sp**, and **npc** parameters.

The **nsr** parameter cannot be specified if the **actname** parameter is specified.

The **nsr** parameter cannot be specified if the **nsfi=stop** parameter is specified.

The value of the **actname** parameter must be defined in the gateway screening stop action table with the **chg-gws-actset** command. These values are shown in the ACT NAME field of the **rtrv-gws-actset** command output.

If the **actname** parameter is specified with the **sr** parameter, the specified value for the **actname** parameter must be assigned to that screening reference name.

If specified, the **sr** parameter value must exist in the AFTPC screen entity set.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The spare point code subtype prefix (s-) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** parameter cannot be specified for ANSI and ITU-N24 point codes.

Any specified **ni**, **nc**, **ncm**, **zone**, **area**, **id**, **msa**, **ssa**, **sp**, **nep**, **nsfi**, and **nsr** parameters must already exist in the AFTPC entity for the screening reference.

If the **pcst** parameter is specified, point codes with the specified subtype prefix (no prefix or s-) must exist in the database.

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

Notes

An asterisk as a parameter value in this command displays only entries that have an asterisk as the same parameter value in the entry.

A range of values is defined by separating the values that define the range by two ampersands (&&); for example, **ni=025&&100** specifies all network indicators for ANSI point codes from 25 to 100.

If no parameters are specified, a list of allowed AFTPC references is produced indicating whether they are referenced or not.

If only the **all=yes** parameter is specified, detailed information for every rule in every allowed AFTPC screening table is displayed.

If the **all** parameter is specified and other parameters are also specified, the **all** parameter is ignored.

The spare point code subtype prefix s- is supported only for ITU international and ITU national point codes. The **pcst** parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

rtrv-scr-aftpc

```

rlghncxa03w 03-03-13 13:12:38 EST EAGLE 31.3.0
SCREEN = ALLOWED AFTPC
SR   REF   RULES
IEC  YES    2
WRD2 YES    1
WRD3 NO     4
WRD4 YES    9

```

;

rtrv-scr-**aftpc:sr=iec:ni=240:nc=001:ncm=010&&014:ssn=012:actname=copy**

```

rlghncxa03w 03-03-14 15:23:18 EST EAGLE 31.3.0
SCREEN = ALLOWED AFTPC
SR   NI      NC      NCM      SSN      NSF1      NSR/ACT
IEC  240      001      010&&012  012      STOP      COPY

```

;

rtrv-scr-aftpc:sr=aft1:zone=1:area=2:id=3:nsfi=stop:ssn=1:pcst=s

```

tekelecstp 05-01-05 10:19:51 EST EAGLE 31.12.0
SCREEN = ALLOWED AFTPC
SR   ZONE  AREA  ID      SSN      NSF1      NSR/ACT
aft1 s-1    002    3      1      STOP      -----

```

;

rtrv-scr-aftpc:sr=aft1

```

tekelecstp 05-01-05 10:19:51 EST EAGLE 31.12.0
SCREEN = ALLOWED AFTPC
SR   ZONE  AREA  ID      SSN      NSF1      NSR/ACT
aft1 s-2    002    3      1      STOP      -----

SR   NPC
aft1 s-00128

```

;

Legend

For a summary report:

REF—This indicates whether a screen is referenced by another screen. If NO, the screen is not used. If you need a more detailed output, use the **rtrv-scr-blkdpc:all=yes** command, or specify the specific screening reference.

RULES—The number of screening rules in that screening table.

For a detailed report:

SCREEN = ALLOWED AFTPC—This is the screen type.

SR—This is used to identify the various screen sets being used. It can be up to four characters in length.

NI-NC-NCM—The point code referenced within the screen. For international point codes, these columns are ZONE - AREA - ID. For 24-bit ITU national point codes, these columns are MSA - SSA - SP. For national point codes, these columns become the single column NPC.

SSN—The subsystem number associated with the point code identified by *ni-nc-ncm*.

NSFI—The next screening category to be used.

NSR/ACT—The name of the next screening reference (NSR—up to four characters) or action to be taken (ACT—up to six characters), if the message passes this screen.

rtrv-scr-blkdpc

Retrieve Blocked DPC

Use this command to show the blocked destination point code (BLKDPC) screening references in the BLKDPC entity set.

Keyword: **rtrv-scr-blkdpc**

Related Commands: **chg-scr-blkdpc**, **dlt-scr-blkdpc**, **ent-scr-blkdpc**

Command Class: Database Administration

Parameters

:actname= (optional)

The name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: *ayyyyy*, **none**

1 alphabetic character followed by up to 5 alphanumeric characters.

none—Display only those gateway screening rules that do not have a gateway screening stop action set assigned to them

:all= (optional)

Displays all blocked DPC screening references.

Range: **yes**, **no**

Default: **no**

:area= (optional)

The ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255** *, C

:id= (optional)

The ITU international ID. The parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7**, *

:msa= (optional)

The 24-bit ITU national main signaling area. The main signaling area is specified in the point code. The format of the point code is *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255** *, C

:nc= (optional)

The network cluster identifier value. This parameter restricts display to those entries containing this specific cluster of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0–255**.

Range: **0-255** *, C

Default: Display all

:ncm= (optional)

The network cluster member identifier value. This parameter restricts display to those entries containing this specific cluster member of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0–255**.

Range: 0-255 *
Default: Display all

:ni= (optional)

The network identifier value. This parameter restricts display to those entries containing this specific network of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from 0–255.

Range: 0-255 *, C
Default: Display all

:npc= (optional)

The ITU national point code. An asterisk (*) indicates the full range of values from 00000–16383. Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see Appendix A for information on converting the point code format.

Range: 00000-16383 *, C

:nsfi= (optional)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range: cgpa, destfld, fail, isup, stop

cgpa—Allowed calling party address is the next screening category.

destfld—Allowed destination field (DESTFLD) is the next screening category.

fail—The received message should be discarded.

isup—ISUP message type (ISUP) is the next screening category.

stop—The gateway screening process ends and the message proceeds through normal routing.

Default: Display all

:nsr= (optional)

The next screening reference parameter indicates which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. This parameter is mandatory if **nsfi** is other than **stop** or **fail**. The **nsr** parameter cannot be entered if **nsfi** is **stop** or **fail**, or the **copy=yes** parameter is specified.

Range: ayyy
 1 alphabetic character followed by up to 3 alphanumeric characters

Default: Display all

:pcst= (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range: none, s

Default: none

:sp= (optional)

The 24-bit ITU national signaling point. This parameter specifies the signaling point (sp) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from 000-255.

Range: 000-255 *, C

:sr= (optional)

The BLKDPC screening reference name

Range: ayyy
 1 alphabetic character followed by up to 3 alphanumeric characters

Default: Display all.

:ssa= (optional)

The 24-bit ITU national sub signaling area. The sub signaling area is specified in the point code. The format of the point code is *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **0-255 *, C**

:zone= (optional)

The ITU international zone. The parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0-7**.

Range: **0-7, *, C**

Example

```
rtrv-scr-blkdpc
```

```
rtrv-scr-
```

```
blkdpc:sr=iec:ni=240:nc=001:ncm=010&&018:nsfi=stop:actname=rdct
```

```
rtrv-scr-blkdpc:sr=iec
```

```
rtrv-scr-blkdpc:all=yes
```

```
rtrv-scr-blkdpc:sr=bdp1:npc=128:nsfi=fail:pcst=s
```

Dependencies

A complete point code must be specified, and must be one and only one of the four point code parameter combinations: **ni-nc-ncm**; **zone-area-id**; **msa-ssa-sp**; or **npc**, except in the special case of entering **c** for "continue."

If **ni=c** is specified, either the character **c** must also be specified for the **nc** and **ncm** parameters or the **nc** and **ncm** parameters must not be specified. If the **nc** and **ncm** parameters are not specified when **ni=c** is specified, the **nc** and **ncm** values default to the character **c** in the database.

If **zone=c** is specified, either the character **c** must also be specified for the **area** and **id** parameters or the **area** and **id** parameters must not be specified. If the **area** and **id** parameters are not specified when **ni=c** is specified, the **area** and **id** values default to the character **c** in the database.

If **msa=c** is specified, either the character **c** must also be specified for the **ssa** and **sp** parameters or the **ssa** and **sp** parameters must not be specified. If the **ssa** and **sp** parameters are not specified when **ni=c** is specified, the **ssa** and **sp** values default to the character **c** in the database.

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

If **nc=*** is specified, **ncm=*** must be specified. If **area=*** is specified, **id=*** must be specified. If **zone=*** is specified, **area=*** and **id=*** must be specified. If **msa=*** is specified, **ssa=*** and **sp=*** must be specified. If **ssa=*** is specified, **sp=*** must be specified.

The **nsr** parameter cannot be specified if the specified **nsfi** parameter is **stop** or **fail**.

If the **actname** parameter is specified, the **nsr** parameter cannot be specified.

The **actname** parameter can be specified only when the **nsfi** parameter value is **stop**.

If the **actname** parameter is specified with the **sr** parameter, the specified value for the **actname** parameter must be assigned to that screening reference name.

The value of the **actname** parameter must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the ACT NAME field of the **rtrv-gws-actset** command output.

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range **000-255**.

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **ncm** parameter is specified as a single value, or a range other than the full range of **000–255**, the **ni** and the **nc** parameters must be specified with a single value.

If specified, the **sr** must already exist in the BLKDPC entity set.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The spare point code subtype prefix (s-) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** parameter cannot be specified for ANSI and ITU-N24 point codes.

Any specified **id** or **sp** parameter must already exist in the database.

If the **pcst** parameter is specified, point codes with the specified subtype prefix (no prefix or s-) must exist in the database.

Any specified **nc** parameter must already exist in the database

Any specified **ncm** parameter must already exist in the database

Any specified **zone** or **msa** parameter must already exist in the database.

Any specified **ni** parameter must already exist in the database

Any specified **nsr** parameter must already exist in the database

Any specified **nsfi** parameter must already exist in the database

Any specified **npc** parameter must already exist in the database

Any specified **area** or **ssa** parameter must already exist in the database.

Any specified **pcst** parameter must already exist in the database

Notes

If no parameters are specified, a list of blocked DPC screening references is displayed indicating whether they are referenced or not.

If only the **all=yes** parameter is specified, detailed information for every rule in every blocked DPC screening table is output.

If the **all** parameter is specified and other parameters are also specified, the **all** parameter is ignored.

An asterisk as a parameter value in this command displays only entries that have an asterisk as the same parameter value in the entry.

A range of values is specified by separating the values that define the range by two ampersands (**&&**); for example, **:ni=025&&100** specifies all network indicators for ANSI point codes from **25** to **100**.

The character **c** is used in the blocked DPC screens to allow the screening process to continue for messages with point codes that do not match any point codes in the blocked DPC screens. When screening for a blocked DPC and the point code being screened does not match any of the point codes in the blocked DPC screens, the message is not rejected and the screening process continues. There must be an entry in the blocked DPC screens to allow the screening process to continue. This entry consists of a screening reference, point code, **nsfi**, and **nsr**. The point code has the value **c-c-c**.

If the character **c** is specified for any subfield of a three-subfield point code, all three subfields must have the value **c**. No other values can be used. For example, a point code **c-c-255** is not allowed. The point code must be **c-c-c**. The asterisk (*) value cannot be used with the character **c** (for example, a point code **c-c-*** is not allowed).

In all cases, if **c** for "continue" is entered for the first subfield in the point code, the other subfields default to **c** in the database.

When the point code does not match any entries in the blocked DPC screens, the screening process is directed to the screening reference with the point code **c-c-c**. The **nsfi** and **nsr** in this entry are examined to determine the next step in the screening process.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output**rtrv-scr-blkdpc**

```

rlghncxa03w 03-03-13 13:12:38 EST EAGLE 31.3.0
SCREEN = BLOCKED DPC
SR   REF  RULES
IEC  YES   2
WRD2 YES   1
WRD3 NO    4
WRD4 YES   9

```

;

rtrv-scr-blkdpc:sr=iec:ni=240:nc=001:ncm=010&&018

```

rlghncxa03w 03-03-13 13:13:21 EST EAGLE 31.3.0
SCREEN = BLOCKED DPC
SR   NI      NC      NCM      NSF1      NSR/ACT
IEC  240     001     010&&020 STOP  -----

```

;

rtrv-scr-blkdpc:actname=rdct

```

rlghncxa03w 03-03-13 13:13:21 EST EAGLE 31.3.0
SCREEN = BLOCKED DPC
SR   NI      NC      NCM      NSF1      NSR/ACT
IEC  C       C       C       STOP    RDCT

```

;

rtrv-scr-blkdpc:nsr=is02

```

tekelecstp 02-08-30 09:25:54 EST EAGLE 30.0.0
rtrv-scr-blkdpc:nsr=is02
Command entered at terminal #4.
SCREEN = BLOCKED DPC
SR   NI      NC      NCM      NSF1      NSR/ACT
bdp3 C       C       C       ISUP    is02

```

;

rtrv-scr-blkdpc:sr=bdp1:npc=128:nsfi=fail

```

tekelecstp 05-01-25 15:57:51 EST EAGLE 31.12.0
SCREEN = BLOCKED DPC
SR   NPC      NSF1      NSR/ACT
bdp1 s-00128  FAIL  -----

```

;

Legend

For a summary report:

REF—This indicates whether a screen is referenced by another screen. If NO, the screen is not used. If you need a more detailed output, use the **rtrv-scr-blkdpc:all=yes** command, or specify the specific screening reference.

RULES—The number of screening rules in that screening table.

For a detailed report:

SCREEN = BLOCKED DPC—This is the screen type.

SR—This is used to identify the various screen sets being used. It can be up to four characters in length.

NI - NC - NCM—The point code referenced within the screen. For international point codes, these columns are ZONE - AREA - ID. For 24-bit ITU national point codes, these columns are MSA-SSA-SP. For national point codes, these columns become the single column NPC.

NSFI—The next screening category to be used.

NSR/ACT—The name of the next screening reference (NSR - up to four characters) or action to be taken (ACT - up to six characters), if the message passes this screen.

rtrv-scr-blkopc

Retrieve Blocked OPC

Use this command to show the blocked originating point code (BLKOPC) screening references in the BLKOPC entity set.

Keyword: rtrv-scr-blkopc

Related Commands: chg-scr-blkopc, dlt-scr-blkopc, ent-scr-blkopc

Command Class: Database Administration

Parameters

:actname= (optional)

The name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: ayyyyy, none

1 alphabetic character followed by up to 5 alphanumeric characters.

none—Display only those gateway screening rules that do not have a gateway screening stop action set assigned to them

:all= (optional)

Displays all blocked OPC screening references.

Range: yes, no

Default: no

:area= (optional)

The ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000–255**.

Range: 000-255 *, C

:id= (optional)

The ITU international ID. The parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: 0-7 *, C

:msa= (optional)

The 24-bit ITU national main signaling area. The main signaling area is specified in the point code. The format of the point code is *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000–255**.

Range: 000-255 *, C

:nc= (optional)

The network cluster identifier value. This parameter restricts display to those entries containing this specific cluster of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0–255**.

Range: 0-255 *, C

Default: Display all

:ncm= (optional)

The network cluster member identifier value. This parameter restricts display to those entries containing this specific cluster member of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0–255**.

Range: **0-255 *, C**

Default: Display all

:ni= (optional)

The network identifier value. This parameter restricts display to those entries containing this specific network of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0–255**.

Range: **0-255 *, C**

Default: Display all

:npc= (optional)

The ITU national point code. An asterisk (*) indicates the full range of values from **00000–16383**. Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see Appendix A for information on converting the point code format.

Range: **00000-16383 *, C**

:nsfi= (optional)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range: **cgpa, stop, fail, sio, dpc, blkdp**

cgpa—Allowed calling party address is the next screening category.

stop—The gateway screening process ends and the message proceeds through normal routing.

fail—The received message should be discarded.

sio—Allowed SIO is the next screening category.

dpc—Allowed DPC is the next screening category.

blkdp—Blocked DPC is the next screening category.

Default: Display all

:nsr= (optional)

The next screening reference parameter indicates which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. This parameter is mandatory if **nsfi** is other than **stop** or **fail**. The **nsr** parameter cannot be entered if **nsfi** is **stop** or **fail**, or the **copy=yes** parameter is specified.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

Default: Display all

:pcst= (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (**s-**).

Range: **none, s**

Default: **none**

:sp= (optional)

The 24-bit ITU national signaling point. This parameter specifies the signaling point (**sp**) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 *, C**

:sr= (optional)

The BLKOPC screening reference name

Range: *yyy*

1 alphabetic character followed by up to 3 alphanumeric characters

Default: Display all.

:ssa= (optional)

The 24-bit ITU national sub signaling area. The sub signaling area is specified in the point code. The format of the point code is *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **0-255** *, C

:zone= (optional)

The ITU international zone. The parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0-7**.

Range: **0-7** *, C

Example

rtrv-scr-blkopc

rtrv-scr-blkopc:sr=iec:ni=240:nc=001:ncm=010&&018:actname=copy

rtrv-scr-blkopc:sr=iec

rtrv-scr-blkopc:all=yes

rtrv-scr-blkopc:sr=bop1:npc=128:nsfi=fail

rtrv-scr-blkopc:sr=bop1:zone=2:area=2:id=3:nsfi=fail:pcst=s

Dependencies

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

Any specified **ni**, **nc**, **ncm**, **zone**, **area**, **id**, **msa**, **ssa**, **sp**, **npc**, **nsfi**, and **nsr** parameters must already exist in the database.

If the **pcst** parameter is specified, point codes with the specified subtype prefix (no prefix or s-) must exist in the database.

If **area=*** is specified, **id=*** must be specified. If **zone=*** is specified, **area=*** and **id=*** must be specified. If **msa=*** is specified, **ssa=*** and **sp=*** must be specified. If **ssa=*** is specified, **sp=*** must be specified.

The **nsr** parameter cannot be specified if the **actname** parameter is specified.

The **nsr** parameter cannot be specified if the specified **nsfi** parameter is **stop** or **fail**.

If the **actname** parameter is specified, the **nsfi=stop** parameter must be specified.

If the character **c** is specified for any subfield of a three-subfield point code, all three subfields must have the value **c**. No other values can be used. For example, a point code **c-c-255** is not allowed. The point code must be **c-c-c**. The asterisk (*) value cannot be used with the character **c** (for example, a point code **c-c-*** is not allowed).

- If **ni=c** is specified, **nc** and **ncm** values must either be **c** or not entered.
- If **zone=c** is specified, **area** and **id** values must either be **c** or not entered.
- If **msa=c** is specified, **ssa** and **sp** must either be **c** or not entered.

In all cases, if **c** for "continue" is entered for the first subfield in the point code, the other subfields default to **c** in the database.

The value of the **actname** parameter must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the ACT NAME field of the **rtrv-gws-actset** command output.

If the **actname** parameter is specified with the screening reference name parameter, the specified value for the **actname** parameter must be assigned to that screening reference name.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The spare point code subtype prefix (s-) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** parameter cannot be specified for ANSI and ITU-N24 point codes.

If **nc=*** is specified, **ncm=*** must be specified. If **ni=*** is specified, **nc=*** and **ncm=*** must be specified.

Notes

An asterisk as a parameter value in this command displays only entries that have an asterisk as the same parameter value in the entry.

If no parameters are specified, a list of blocked OPC references is displayed indicating whether they are referenced or not.

If only the **all=yes** parameter is specified, detailed information for every rule in every blocked OPC screening table is displayed.

If the **all** parameter is specified and other parameters are also specified, the **all** parameter is ignored.

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, **:ni=025&&100** specifies all network indicators for ANSI point codes from 25 to 100.

For point codes with three subfields, the value **c** (continue) is used as a place holder. In the event the point code is not found in this screen set, the continue value points to the **nsfi** and **nsr** to be applied next.

The character **c** is used in the blocked OPC screens to allow the screening process to continue for messages with point codes that do not match any point codes in the blocked OPC screens. When screening for a blocked OPC and the point code being screened does not match any of the point codes in the blocked OPC screens, the message is not rejected and the screening process continues. There must be an entry in the blocked OPC screens to allow the screening process to continue. This entry consists of a screening reference, point code, **nsfi**, and **nsr**. The point code **c-c-c**.

When the point code does not match any entries in the blocked OPC screens, the screening process is directed to the screening reference with the point code **c-c-c**. The **nsfi** and **nsr** in this entry are examined to determine the next step in the screening process.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

rtrv-scr-blkopc

```
rlghncxa03w 03-03-13 13:12:38 EST EAGLE 31.3.0
SCREEN = BLOCKED OPC
SR    REF    RULES
IEC   YES    2
WRD2  YES    1
WRD3  NO     4
WRD4  YES    9
```

;

rtrv-scr-blkopc:sr=iec:ni=240:nc=001:ncm=010&&018

```
rlghncxa03w 03-03-13 13:13:21 EST EAGLE 31.3.0
SCREEN = BLOCKED OPC
SR    NI      NC      NCM      NSF1    NSR/ACT
IEC   240     001     010&&020 FAIL    -----
```

;

rtrv-scr-blkopc:actname=cncf

```
rlghncxa03w 03-03-13 10:34:07 EST EAGLE 31.3.0
SCREEN = BLOCKED OPC
SR    NI      NC      NCM      NSF1    NSR/ACT
IEC   C       C       C       STOP    CNCF
```

;

rtrv-scr-blkopc:all=yes

```
rlghncxa03w 03-03-13 10:34:07 EST EAGLE 31.3.0
SCREEN = BLOCKED OPC
SR    NI      NC      NCM      NSF1    NSR/ACT
IEC   240     001     010     FAIL    -----
IEC   241     010     *       FAIL    -----

SR    ZONE    AREA    ID      NSF1    NSR/ACT
IEC   1       003     4       FAIL    -----
IEC   1       003     5       FAIL    -----

SR    NI      NC      NCM      NSF1    NSR/ACT
IEC   C       C       C       STOP    CRNCF

SR    NI      NC      NCM      NSF1    NSR/ACT
WRD2  243     015     001     FAIL    -----
WRD2  243     105     002     FAIL    -----
WRD2  C       C       C       STOP    CNCF
```

;

rtrv-scr-blkopc:sr=bo01:nsfi=sio:nsr=si01:msa=c:ssa=c:sp=c

```
tekelecstp 03-03-25 15:57:07 EST EAGLE 31.0.0
SCREEN = BLOCKED OPC
SR    MSA     SSA     SP      NSF1    NSR/ACT
bo01  C       C       C       SIO     si01
```

;

rtrv-scr-blkopc:sr=bop1

```
tekelecstp 05-01-25 15:57:07 EST EAGLE 31.12.0
SCREEN = BLOCKED OPC
SR    ZONE    AREA    ID      NSF1    NSR/ACT
bop1  s-2     002     3       FAIL    -----

SR    NPC
bop1  s-00128      NSF1    NSR/ACT
      FAIL    -----
```

SR	ZONE	AREA	ID	NSFI	NSR/ACT
bop1	C	C	C	STOP	-----

;

Legend

For a summary report:

REF—This indicates whether a screen is referenced by another screen. If NO, the screen is not used. If you need a more detailed output, use the **rtrv-scr-blkopc:all=yes** command, or specify the specific screening reference.

RULES—The number of screening rules in that screening table.

For a detailed report:

SCREEN = BLOCKED OPC—This is the screen type.

SR—This is used to identify the various screen sets being used. It can be up to four characters in length.

NI - NC - NCM—The point code referenced within the screen. For international point codes, these columns are ZONE - AREA - ID. For 24-bit ITU national point codes, these columns are MSA-SSA-SP. For national point codes, these columns become the single column NPC.

NSFI—The next screening category to be used.

NSR/ACT—The name of the next screening reference (NSR - up to four characters) or action to be taken (ACT - up to six characters), if the message passes this screen.

rtrv-scr-cdpa**Retrieve Allowed Called Party Address**

Use this command to show the allowed called party address (CDPA) screening references in the CDPA entity set.

Keyword: **rtrv-scr-cdpa**

Related Commands: **chg-scr-cdpa**, **dlt-scr-cdpa**, **ent-scr-cdpa**

Command Class: Database Administration

Parameters

:actname= (optional)

The name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: *ayyyyy*, **none**

1 alphabetic character followed by up to 5 alphanumeric characters.

none—Display only those gateway screening rules that do not have a gateway screening stop action set assigned to them

:all= (optional)

Displays all allowed CDPA screening references.

Range: **yes**, **no**

Default: **no**

:area= (optional)

The ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:id= (optional)

The ITU international ID. The parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7, ***

:msa= (optional)

The 24-bit ITU national main signaling area. The main signaling area is specified in the point code. The format of the point code is *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:nc= (optional)

The network cluster identifier value. This parameter restricts display to those entries containing this specific cluster of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0–255**.

Range: **0-255 ***

Default: Display all

:ncm= (optional)

The network cluster member identifier value. This parameter restricts display to those entries containing this specific cluster member of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0–255**.

Range: **0-255 ***

Default: Display all

:ni= (optional)

The network identifier value. This parameter restricts display to those entries containing this specific network of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0–255**.

Range: **0-255 ***

Default: Display all

:npc= (optional)

The ITU national point code. An asterisk (*) indicates the full range of values from **00000–16383**. Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see Appendix A for information on converting the point code format.

Range: **00000-16383 ***

:nsfi= (optional)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range: **aftpc, stop**

aftpc — Allowed affected point code is the next screening category

stop — The gateway screening process ends and the message proceeds through normal routing

Default: Display all

:nsr= (optional)

The next screening reference parameter indicates which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. This parameter is mandatory if **nsfi** is other than **stop** or **fail**. The **nsr** parameter cannot be entered if **nsfi** is **stop** or **fail**, or the **copy=yes** parameter is specified.

Range: **ayyy**

1 alphabetic character followed by up to 3 alphanumeric characters

Default: Display all

:scmgfid= (optional)

The SCCP management (SCMG) format ID, which consists of a 1-octet field and uniquely defines the function and format of each SCMG message. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **1-255**. The following SCCP message types are screened against the Allowed CDPA table and all others are passed: UDT, UDTS, XUDT, XUDTS

Range: 1-255 *

Default: All SCMG format IDs are shown.

:sp= (optional)

The 24-bit ITU national signaling point. This parameter specifies the signaling point (sp) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: 000-255 *

:sr= (optional)

Displays all allowed CDPA screening references.

Range: ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Default: Display all.

:ssa= (optional)

The 24-bit ITU national sub signaling area. The sub signaling area is specified in the point code. The format of the point code is *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: 0-255 *

:ssn= (optional)

Subsystem number. An asterisk (*) indicates the full range of values from **0-255**.

Range: 1-255

Default: Display all.

:zone= (optional)

The ITU international zone. The parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0-7**.

Range: 0-7, *

Example

```
rtrv-scr-cdpa
```

```
rtrv-scr-cdpa:sr=iec:ni=240:nc=001:ncm=010:ssn=001
```

```
rtrv-scr-cdpa:sr=iec:ni=240:nc=001:ssn=002&&005
```

```
rtrv-scr-cdpa:sr=iec
```

```
rtrv-scr-cdpa:sr=iec:actname=copy
```

```
rtrv-scr-
```

```
cdpa:sr=cdp1:zone=1:area=2:id=3:ssn=1:nsfi=stop:scmgfid=1:pcst=s
```

```
rtrv-scr-cdpa:sr=cdp1
```

Dependencies

If the **actname** parameter is specified, the **nsr** parameter cannot be specified.

If the **actname** parameter is specified, the **nsfi=stop** parameter must be specified.

The **nsr** parameter cannot be specified when **nsfi=stop**.

If **zone=*** is specified, **area=*** and **id=*** must be specified. If **area** is specified or respecified as an asterisk, **id** must also be an asterisk. If **msa=*** is specified, **ssa=*** and **sp=*** must be specified. If **ssa=*** is specified, **sp=*** must be specified.

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range **000–255**.

If the **nc** parameter is specified as an asterisk (**nc=***), the **ncm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **ncm** parameter is specified as a single value, or a range other than the full range of **000–255**, the **ni** and the **nc** parameters must be specified with a single value.

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

If the **actname** parameter is specified with the screening reference name parameter, the specified value for the **actname** parameter must be assigned to that screening reference name.

The value of the **actname** parameter must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the ACT NAME field of the **rtrv-gws-actset** command output.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The spare point code subtype prefix (**s-**) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** parameter cannot be specified for ANSI and ITU-N24 point codes.

Any specified **ni**, **nc**, **ncm**, **zone**, **area**, **id**, **msa**, **ssa**, **sp**, **ncp**, **nsfi**, **ri**, **ssn**, and **nsr** parameters must already exist in the CGPA entity for the screening reference.

If the **pcst** parameter is specified, point codes with the specified subtype prefix (no prefix or **s-**) must exist in the database.

The specified screening reference (**sr**) must be in the allowed CDPA entity set.

Notes

If no parameters are specified, the system displays a summary output.

If only the **all=yes** parameter is specified, the system displays a detailed output.

If the **all** parameter and any point code parameter are specified, the **all** parameter is ignored.

The REF column of the output of this command displays **YES** when the screen is referenced by another screen; otherwise, it displays **NO**.

An asterisk as a parameter value in this command displays only entries that have an asterisk as the same parameter value in the entry.

A range of values is specified by separating the values that define the range by two ampersands (**&&**); for example, **:ni=025&&100** specifies all network indicators for ANSI point codes from **25** to **100**.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

rtrv-scr-cdpa:sr=iec:ni=240:nc=001:ncm=010:ssn=001

rlghncxa03w 03-03-07 12:05:33 EST EAGLE 31.3.0

SCREEN = ALLOWED CDPA

SR	NI	NC	NCM	SSN	SCMGFID	NSFI	NSR/ACT
IEC	240	001	010	001	002&&003	STOP	-----

;

rtrv-scr-cdpa:sr=iec:ni=240:nc=001:ssn=002&&005

rlghncxa03w 03-03-07 12:05:33 EST EAGLE 31.3.0

SCREEN = ALLOWED CDPA

SR	NI	NC	NCM	SSN	SCMGFID	NSFI	NSR/ACT
IEC	240	001	010	002	-----	STOP	-----
IEC	240	001	011	002&&003	-----	STOP	-----

;

rtrv-scr-cdpa:sr=iec

rlghncxa03w 03-03-07 12:05:33 EST EAGLE 31.3.0

SCREEN = ALLOWED CDPA

SR	NI	NC	NCM	SSN	SCMGFID	NSFI	NSR/ACT
IEC	240	001	010	12	-----	STOP	-----
IEC	241	010	*	*	-----	AFTPC	IAFT

;

rtrv-scr-cdpa

rlghncxa03w 03-03-07 12:05:33 EST EAGLE 31.3.0

SCREEN = ALLOWED CDPA

SR	REF	RULES
IEC	YES	2
WRD2	YES	1
WRD4	YES	4

;

rtrv-scr-cdpa:sr=iec:actname=copy

rlghncxa03w 03-03-07 12:05:33 EST EAGLE 31.3.0

SCREEN = ALLOWED CDPA

SR	NI	NC	NCM	SSN	SCMGFID	NSFI	NSR/ACT
IEC	245	001	010	001	002&&003	STOP	COPY
IEC	246	001	010	001	002&&003	STOP	COPY

U0 - CNCF

;

rtrv-scr-

cdpa:sr=cdp1:zone=1:area=2:id=3:ssn=1:nsfi=stop:scmgfid=1:pcst=s

rlghncxa03w 05-01-07 12:05:33 EST EAGLE 31.12.0

SCREEN = ALLOWED CDPA

SR	ZONE	AREA	ID	SSN	SCMGFID	NSFI	NSR/ACT
cdp1	s-1	002	3	1	1	STOP	-----

;

rtrv-scr-cdpa:sr=cdp1

rlghncxa03w 05-01-07 12:05:33 EST EAGLE 31.12.0

SCREEN = ALLOWED CDPA

SR	ZONE	AREA	ID	SSN	SCMGFID	NSFI	NSR/ACT
cdp1	s-2	002	3	1	1	STOP	-----

SR	NPC	SSN	SCMGFID	NSFI	NSR/ACT

```

      cdp1  s-00128              1      1      STOP      -----
;

```

Legend

For a summary report:

REF—This indicates whether a screen is referenced by another screen. If NO, the screen is not used. If you need a more detailed output, use the **rtrv-scr-cdpa:all=yes** command, or specify the specific screening reference.

RULES—The number of screening rules in that screening table.

For a detailed report:

SCREEN = ALLOWED CDPA—This is the screen type.

SR—This is used to identify the various screen sets being used. It can be up to four characters in length.

NI - NC - NCM—The point code referenced within the screen. For international point codes, these columns are ZONE - AREA - ID. For 24-bit national point codes, these columns are MSA - SSA - SP. For national point codes, these columns become the single column NPC.

SSN—The subsystem number associated with the point code identified by the **ni-nc-ncm**.

SCMGFID—The SCMGFID format ID.

NSFI—The next screening category to be used.

NSR/ACT—The name of the next screening reference (NSR - up to four characters) or action to be taken (ACT - up to six characters), if the message passes this screen.

rtrv-scr-cgpa

Retrieve Allowed Calling Party Address

Use this command to show the allowed calling party address (CGPA) screening references in the CGPA entity set.

Keyword: rtrv-scr-cgpa

Related Commands: chg-scr-cgpa, dlt-scr-cgpa, ent-scr-cgpa

Command Class: Database Administration

Parameters

:actname= (optional)

The name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: ayyyyy, none

1 alphabetic character followed by up to 5 alphanumeric characters.

none—Display only those gateway screening rules that do not have a gateway screening stop action set assigned to them

:all= (optional)

Displays all allowed CGPA screening references.

Range: yes, no

Default: no

:area= (optional)

The ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000–255**.

Range: 000-255 *

:id= (optional)

The ITU international ID. The parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from 0–7.

Range: 0-7, *

:msa= (optional)

The 24-bit ITU national main signaling area. The main signaling area is specified in the point code. The format of the point code is *msa-ssa-sp*. An asterisk (*) indicates the full range of values from 000-255.

Range: 000-255 *

:nc= (optional)

The network cluster identifier value. This parameter restricts display to those entries containing this specific cluster of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from 0–255.

Range: 0-255 *

Default: Display all

:ncm= (optional)

The network cluster member identifier value. This parameter restricts display to those entries containing this specific cluster member of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from 0–255.

Range: 0-255 *

Default: Display all

:ni= (optional)

The network identifier value. This parameter restricts display to those entries containing this specific network of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from 0–255.

Range: 0-255 *

Default: Display all

:npc= (optional)

The ITU national point code. An asterisk (*) indicates the full range of values from 00000–16383. Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see Appendix A for information on converting the point code format.

Range: 00000-16383 *

:nsfi= (optional)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range: cdpa, stop, tt

cdpa—Allowed called party address point code is the next screening category.

stop—The gateway screening process ends and the message proceeds through normal routing.

tt—Allowed translation type point code is the next screening category.

Default: Display all

:nsr= (optional)

The next screening reference parameter indicates which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. This parameter is mandatory if **nsfi** is other than **stop** or **fail**. The **nsr** parameter cannot be entered if **nsfi** is **stop** or **fail**, or the **copy=yes** parameter is specified.

Range: *ayyy*
1 alphabetic character followed by up to 3 alphanumeric characters

Default: Display all

:ri= (optional)

The routing indicator provides routing instructions to the receiving signaling point. In gateway screening, messages may be screened based on the value of the routing indicator.

Range: **gt, dpc, ***
gt—Allow a called party address with a routing indicator value of "global title."
dpc—Allow a called party address with a routing indicator value of "DPC/SSN."
*****—Allow both routing indicator values.

Default: Display all

:sccpmt= (optional)

The SCCP message type. An asterisk (*) indicates all possible allowed values; that is, **9, 10, 17**, and **18**.

Range: **9, * 10, * 17, * 18***
9—UDT
10—UDTS
17—XUDT
18—XUDTS

Default: Display all SCCP message types

:sp= (optional)

The 24-bit ITU national signaling point. This parameter specifies the signaling point (sp) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:sr= (optional)

The CGPA screening reference name

Range: *ayyy*
1 alphabetic character followed by up to 3 alphanumeric characters

Default: Display all.

:ssa= (optional)

The 24-bit ITU national sub signaling area. The sub signaling area is specified in the point code. The format of the point code is *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **0-255 ***

:ssn= (optional)

Subsystem number. An asterisk (*) indicates the full range of values from **0-255**.

Range: **0-255**

Default: Display all.

:zone= (optional)

The ITU international zone. The parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0-7**.

Range: **0-7, ***

Example

```
rtrv-scr-cgpa:sr=iec:ni=240:nc=001:ncm=010:ssn=012
rtrv-scr-cgpa:sr=iec:ni=240:nc=001:ncm=010:actname=copy
rtrv-scr-cgpa:sr=cgp1
```

**rtrv-scr-
cgpa: sr=cgpa: zone=1: area=2: id=3: ssn=1: sccpmt=9: ri=*: nsfi=stop: pcs
t=s**

Dependencies

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range **000–255**.

If the **nc** parameter is specified as an asterisk (**nc=***), the **ncm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **ncm** parameter is specified as a single value, or a range other than the full range of **000–255**, the **ni** and the **nc** parameters must be specified with a single value.

If the **actname** parameter is specified, the **nsr** parameter cannot be specified.

If the **actname** parameter is specified, the **nsfi=stop** parameter must be specified.

If the **actname** parameter is specified with the screening reference name parameter, the specified value for the **actname** parameter must be assigned to that screening reference name.

The value of the **actname** parameter must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the ACT NAME field of the **rtrv-gws-actset** command output.

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

If **zone=*** is specified, **area=*** and **id=*** must be specified. If **area=*** is specified, **id=*** must be specified. If **msa=*** is specified, **ssa=*** and **sp=*** must be specified. If **ssa=*** is specified or re-specified, **sp=*** must also be specified.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The spare point code subtype prefix (**s-**) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** parameter cannot be specified for ANSI and ITU-N24 point codes.

Any specified **ni**, **nc**, **ncm**, **zone**, **area**, **id**, **msa**, **ssa**, **sp**, **nep**, **nsfi**, **ri**, **ssn**, and **nsr** parameters must already exist in the CGPA entity for the screening reference.

If the **pcst** parameter is specified, point codes with the specified subtype prefix (no prefix or **s-**) must exist in the database.

The specified screening reference (**sr**) must be in the allowed CGPA entity set.

Notes

If no parameters are specified, the system displays a summary output.

If only the **all=yes** parameter is specified, the system displays a detailed output.

If the **all** parameter and any point code parameter are specified, the **all** parameter is ignored.

An asterisk as a parameter value in this command displays only entries that have an asterisk as the same parameter value in the entry.

A range of values is specified by separating the values that define the range by two ampersands (**&&**); for example, **:ni=025&&100** specifies all network indicators for ANSI point codes from **25** to **100**.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

rtrv-scr-cgpa:sr=iec:ni=240:nc=001:ncm=010:ssn=012

rlghncxa03w 03-03-14 15:58:16 EST EAGLE 31.3.0

SCREEN = ALLOWED CGPA

SR	NI	NC	NCM	SSN	RI	SCCPMT	NSFI	NSR/ACT
IEC	240	001	010	012	DPC	009&&010	STOP	-----

;

rtrv-scr-cgpa:sr=iec:ni=240:nc=001-004:ri=dpc:sccpmt=000&&010

rlghncxa03w 03-03-14 15:58:16 EST EAGLE 31.3.0

SCREEN = ALLOWED CGPA

SR	NI	NC	NCM	SSN	RI	SCCPMT	NSFI	NSR/ACT
IEC	240	001	010	012	DPC	017&&018	STOP	-----
IEC	240	002&&003	*	004	DPC	009	STOP	-----

;

rtrv-scr-cgpa:actname=none

rlghncxa03w 03-03-14 15:58:16 EST EAGLE 31.3.0

SCREEN = ALLOWED CGPA

SR	NI	NC	NCM	SSN	RI	SCCPMT	NSFI	NSR/ACT
IEC	240	001	010	012	DPC	017	STOP	-----
IEC	240	001	010	014	GT	*	STOP	-----
IEC	241	002	011	014	GT	*	CDPA	CDP1

;

rtrv-scr-

cgpa:sr=cg01:nsfi=tt:nsr=tt01:ri=gt:ssn=1:sccpmt=9:msa=255:ssa=255:sp=255

tekelecstp 03-03-05 14:41:37 EST EAGLE 31.0.0

SCREEN = ALLOWED CGPA

SR	MSA	SSA	SP	NSFI	NSR/ACT		
cg01	255	255	255	1	GT 9	TT	tt01

;

rtrv-scr-

cgpa:sr=cgpa:zone=1:area=2:id=3:ssn=1:sccpmt=9:ri=*:nsfi=stop:pcst=s

tekelecstp 05-01-05 14:41:37 EST EAGLE 31.12.0

SCREEN = ALLOWED CGPA

SR	ZONE	AREA	ID	SSN	RI	SCCPMT	NSFI	NSR/ACT
cgpa	s-1	002	3	1	*	9	STOP	-----

;

rtrv-scr-cgpa:sr=cgp1

tekelecstp 05-01-05 14:41:37 EST EAGLE 31.12.0

SCREEN = ALLOWED CGPA

SR	ZONE	AREA	ID	SSN	RI	SCCPMT	NSFI	NSR/ACT
cgp1	s-2	002	3	1	*	*	STOP	-----

SR	NPC		SSN	RI	SCCPMT	NSFI	NSR/ACT
cgp1	s-00128		1	*	*	STOP	-----

;

Legend

For a summary report:

REF—This indicates whether a screen is referenced by another screen. If NO, the screen is not used. If you need a more detailed output, use the **rtrv-scr-cgpa:all=yes** command, or specify the specific screening reference.

RULES—The number of screening rules in that screening table.

For a detailed report:

SCREEN = ALLOWED CGPA—This is the screen type.

SR —This is used to identify the various screen sets being used. It can be up to four characters in length.

NI - NC - NCM—The point code referenced within the screen. For international point codes, these columns are ZONE - AREA - ID. For 24-bit ITU national point codes, these columns are MSA-SSA-SP. For national point codes, these columns become the single column NPC.

SSN—The subsystem number associated with the point code identified by the *ni-nc-ncm* .

RI—The routing indicator in the called party address.

SCCPMT—The SCCP message type.

NSFI—The next screening category to be used.

NSR/ACT—The name of the next screening reference (NSR - up to four characters) or action to be taken (ACT - up to six characters), if the message passes this screen.

rtrv-scr-destfld

Retrieve Allowed DESTFLDs

Use this command to show the attributes of one or more allowed affected destination field (DESTFLD) screening references and associated attributes (destination point code, next screening function identifier, next screening function reference) that are allowed to receive SS7 messages from another network.

Keyword: **rtrv-scr-destfld**

Related Commands: **chg-scr-destfld, dlt-scr-destfld, ent-scr-destfld**

Command Class: Database Administration

Parameters

:actname= (optional)

The name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: *ayyyyy*, **none**

1 alphabetic character followed by up to 5 alphanumeric characters.

none—Display only those gateway screening rules that do not have a gateway screening stop action set assigned to them

:all= (optional)

Displays all allowed DPC screening references.

Range: **yes, no**

Default: **no**

:area= (optional)

The ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

Default: Display all

:id= (optional)

The ITU international ID. The parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7 ***

Default: Display all

:msa= (optional)

The 24-bit ITU national main signaling area. The main signaling area is specified in the point code. The format of the point code is *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:nc= (optional)

The network cluster identifier value. This parameter restricts display to those entries containing this specific cluster of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0–255**.

Range: **0-255 ***

Default: Display all

:ncm= (optional)

The network cluster member identifier value. This parameter restricts display to those entries containing this specific cluster member of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0–255**.

Range: **0-255 ***

Default: Display all

:ni= (optional)

The network identifier value. This parameter restricts display to those entries containing this specific network of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0–255**.

Range: **0-255 ***

Default: Display all

:npc= (optional)

The ITU national point code. An asterisk (*) indicates the full range of values from **00000–16383**. Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see Appendix A for information on converting the point code format.

Range: **00000-16383 ***

:nsfi= (optional)

This parameter indicates that the gateway screening process should stop. If specified for this command, the parameter must have the value of **stop**. The value of **stop** means that the gateway screening process ends and the message proceeds through normal routing.

Range: **stop**

Default: Display all screening references

:nsr= (optional)

The next screening reference parameter indicates which screening reference in the specified screening category (**nsfi**) is to be used in the screening process.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

Default: Display all

:pcst= (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range: none, s

Default: none

:sp= (optional)

The 24-bit ITU national signaling point. This parameter specifies the signaling point (*sp*) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: 000-255 *

:sr= (optional)

The name of the individual DESTFLD screen to be displayed.

Range: ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Default: Display all.

:ssa= (optional)

The 24-bit ITU national sub signaling area. The sub signaling area is specified in the point code. The format of the point code is *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: 0-255 *, C

:zone= (optional)

The ITU international zone. The parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0-7**.

Range: 0-7 *, C

Example

```
rtrv-scr-destfld
```

```
rtrv-scr-destfld:sr=iec:ni=240:nc=001:ncm=010&&018
```

```
rtrv-scr-destfld:sr=iec:id=4:actname=cncf
```

```
rtrv-scr-destfld:all=yes
```

```
rtrv-scr-destfld:sr=dst1:zone=1:area=2:id=3:nsfi=stop:pcst=s
```

```
rtrv-scr-destfld:sr=dst1
```

Dependencies

If the **actname** parameter is specified, the **nsfi=stop** parameter must be specified.

If specified, the **nsfi** parameter value must equal **stop**.

The **nsr** parameter cannot be specified in the command.

If the **actname** parameter is specified, the **nsr** parameter cannot be specified.

The value of the **actname** parameter must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the ACT NAME field of the **rtrv-gws-actset** command output.

If the **actname** parameter is specified with the screening reference name parameter, the specified value for the **actname** parameter must be assigned to that screening reference name.

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range **000-255**.

If the **nc** parameter is specified as an asterisk (**nc=***), the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **ncm** parameter is specified as a single value, or a range other than the full range of **000–255**, the **ni** and the **nc** parameters must be specified with a single value.

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

If **zone=*** is specified, **area=*** and **id=*** must be specified.

If **area=*** is specified, **id=*** must be specified.

If **msa=*** is specified, **ssa=*** and **sp=*** must be specified.

If **ssa=*** is specified, **sp=*** must be specified.

The specified screening reference (**sr**) must be in the allowed DESTFLD entity set.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The spare point code subtype prefix (**s-**) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** parameter cannot be specified for ANSI and ITU-N24 point codes.

If the **pcst** parameter is specified, point codes with the specified subtype prefix (no prefix or **s-**) must exist in the database.

Any specified **area** or **ssa** parameter must already exist in the database.

Any specified **id** or **sp** parameter must already exist in the database.

Any specified **zone** or **msa** parameter must already exist in the database.

Any specified **nc** parameter must already exist in the database.

Any specified **ncm** parameter must already exist in the database.

Any specified **ni** parameter must already exist in the database.

Any specified **npc** parameter must already exist in the database.

Any specified **nsfi** parameter must already exist in the database.

Any specified **nsr** parameter must already exist in the database.

Any specified **pcst** parameter must already exist in the database.

Notes

If no parameters are specified, the system displays a summary output.

If only the **all=yes** parameter is specified, the system displays a detailed output.

If the **all** parameter and any point code parameter are specified, the **all** parameter is ignored.

The REF column of the output of this command displays **YES** when the screen is referenced by another screen; otherwise, it displays **NO**.

An asterisk as a parameter value in this command displays only entries that have an asterisk as the same parameter value in the entry.

A range of values is specified by separating the values that define the range by two ampersands (**&&**); for example, **ni=025&&100** specifies all network indicators for ANSI point codes from **25** to **100**.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

rtrv-scr-destfld

```

rlghncxa03w 03-03-13 13:12:38 EST  EAGLE 31.3.0
SCREEN = ALLOWED DESTFLD
SR    REF  RULES
IEC   YES   2
WRD2  YES   1
WRD3  NO    4
WRD4  YES   9

```

;

rtrv-scr-destfld:sr=iec:ni=240:nc=001:ncm=010&&018

```

rlghncxa03w 03-03-13 13:13:21 EST  EAGLE 31.3.0
SCREEN = ALLOWED DESTFLD
SR    NI      NC      NCM      NSFI   NSR/ACT
IEC   240     001     010&&020 STOP  -----

```

;

rtrv-scr-destfld:sr=iec:id=4:actname=cncf

```

rlghncxa03w 03-03-13 13:13:56 EST  EAGLE 31.3.0
SCREEN = ALLOWED DESTFLD
SR    ZONE    AREA    ID      NSFI   NSR/ACT
IEC   1       003     4       STOP  CNCF

```

;

rtrv-scr-destfld:all=yes

```

rlghncxa03w 03-03-13 13:14:18 EST  EAGLE 31.3.0
SCREEN = ALLOWED DESTFLD
SR    NI      NC      NCM      NSFI   NSR/ACT
IEC   240     001     010     STOP  CNCF
IEC   241     010     *       STOP  -----

SR    ZONE    AREA    ID      NSFI   NSR/ACT
IEC   1       003     4       STOP  -----
IEC   1       003     5       STOP  CR

SR    NPC
IEC   00235
IEC   00240
NSFI   NSR/ACT
STOP  CNCF
STOP  -----

```

;

rtrv-scr-destfld:sr=dst1:zone=1:area=2:id=3:nsfi=stop:pcst=s

```

tekelecstp 05-01-06 11:40:26 EST  EAGLE 31.12.0
SCREEN = ALLOWED DESTFLD
SR    ZONE    AREA    ID      NSFI   NSR/ACT
dst1  s-1     002     3       STOP  -----

```

;

rtrv-scr-destfld:sr=dst1

```

tekelecstp 05-01-06 11:40:26 EST  EAGLE 31.12.0
SCREEN = ALLOWED DESTFLD
SR    ZONE    AREA    ID      NSFI   NSR/ACT
dst1  s-1     002     3       STOP  -----

SR    NPC
dst1  s-00128
NSFI   NSR/ACT
STOP  -----

```

;

Legend

For a summary report:

REF—This indicates whether a screen is referenced by another screen. If NO, the screen is not used. If you need a more detailed output, use the **rtrv-scr-destfld:all=yes** command, or specify the specific screening reference.

RULES—The number of screening rules in that screening table.

For a detailed report:

- **SCREEN = ALLOWED DESTFLD**—This is the screen type.
- **SR**—This is used to identify the various screen sets being used. It can be up to four characters in length.
- **NI - NC - NCM**—The point code referenced within the screen. For international point codes, these columns are ZONE - AREA - ID. For 24-bit ITU national point codes, these columns are MSA-SSA-SP. For national point codes, these columns become the single column NPC.
- **NSFI**—The next screening category to be used.
- **NSR/ACT**—The name of the next screening reference (NSR - up to four characters) or action to be taken (ACT - up to six characters), if the message passes this screen.

rtrv-scr-dpc**Retrieve Allowed DPC**

Use this command to show the attributes of one or more allowed DPC screening references and associated attributes (destination point code, next screening function identifier, next screening function reference) that are allowed to receive SS7 messages from another network.

Keyword: **rtrv-scr-dpc**

Related Commands: **chg-scr-dpc, dlt-scr-dpc, ent-scr-dpc**

Command Class: Database Administration

Parameters

:actname= (optional)

The name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: *ayyyyy*, **none**

1 alphabetic character followed by up to 5 alphanumeric characters.

none—Display only those gateway screening rules that do not have a gateway screening stop action set assigned to them

:all= (optional)

Displays all allowed DPC screening references.

Range: **yes, no**

Default: **no**

:area= (optional)

The ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:id= (optional)

The ITU international ID. The parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7, ***

:msa= (optional)

The 24-bit ITU national main signaling area. The main signaling area is specified in the point code. The format of the point code is *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:nc= (optional)

The network cluster identifier value. This parameter restricts display to those entries containing this specific cluster of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0–255**.

Range: **0-255 *, C**

Default: Display all

:ncm= (optional)

The network cluster member identifier value. This parameter restricts display to those entries containing this specific cluster member of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0–255**.

Range: **0-255 ***

Default: Display all

:ni= (optional)

The network identifier value. This parameter restricts display to those entries containing this specific network of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0–255**.

Range: **0-255 ***

Default: Display all

:npc= (optional)

The ITU national point code. An asterisk (*) indicates the full range of values from **00000–16383**. Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see Appendix A for information on converting the point code format.

Range: **00000-16383 ***

:nsfi= (optional)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range: **blkdpc, cgpa, destfld, isup, stop**

blkdpc—Blocked DPC is the next screening category.

cgpa—Allowed calling party address is the next screening category.

destfld—Allowed destination field (DESTFLD) is the next screening category.

isup—ISUP message type (ISUP) is the next screening category.

stop—The gateway screening process ends and the message proceeds through normal routing.

Default: Display all screen references

:nsr= (optional)

The next screening reference parameter indicates which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. This parameter is mandatory if

nsfi is other than **stop** or **fail**. The **nsr** parameter cannot be entered if **nsfi** is **stop** or **fail**, or the **copy=yes** parameter is specified.

Range: *ayyy*
1 alphabetic character followed by up to 3 alphanumeric characters

Default: Display all

:pcst= (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (**s-**).

Range: **none, s**

Default: **none**

:sp= (optional)

The 24-bit ITU national signaling point. This parameter specifies the signaling point (**sp**) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:sr= (optional)

The allowed DPC screening reference name

Range: *ayyy*
1 alphabetic character followed by up to 3 alphanumeric characters

Default: Display all.

:ssa= (optional)

The 24-bit ITU national sub signaling area. The sub signaling area is specified in the point code. The format of the point code is *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **0-255 ***

:zone= (optional)

The ITU international zone. The parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0-7**.

Range: **0-7, ***

Example

rtrv-scr-dpc

rtrv-scr-dpc:sr=iec:ni=240:nc=001:ncm=010&&018

rtrv-scr-dpc:sr=iec:id=4

rtrv-scr-dpc:all=yes

rtrv-scr-dpc:all=yes:actname=cncf

rtrv-scr-dpc:sr=dpc1:npc=128:nsfi=stop:pcst=s

Dependencies

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

The specified screening reference (**sr**) must be in the allowed DPC entity set.

Any specified **ni** parameter must already exist in the allowed DPC entity for the screening reference.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The spare point code subtype prefix (**s-**) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** parameter cannot be specified for ANSI and ITU-N24 point codes.

If the **pcst** parameter is specified, point codes with the specified subtype prefix (no prefix or **s-**) must exist in the database.

If **ni=*** is specified, **nc=*** and **ncm=*** must be specified.

If **nc=*** is specified, **ncm=*** must be specified.

If **zone=*** is specified, **area=*** and **id=*** must be specified.

If **area=*** is specified, **id=*** must be specified.

If **msa=*** is specified, **ssa=*** and **sp=*** must be specified.

If **ssa=*** is specified, **sp=*** must be specified.

The **nsr** parameter cannot be specified if the specified **nsfi** parameter is **stop**.

The **nsr** parameter cannot be specified if the **actname** parameter is specified.

If the **actname** parameter is specified, the **nsfi=stop** parameter must be specified.

The value of the **actname** parameter must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the ACT NAME field of the **rtrv-gws-actset** command output.

If the **actname** parameter is specified with the screening reference name parameter, the specified value for the **actname** parameter must be assigned to that screening reference name.

Any specified **npc** parameter must already exist in the allowed DPC entity for the screening reference.

Any specified **ncm** parameter must already exist in the allowed DPC entity for the screening reference.

Any specified **nc** parameter must already exist in the allowed DPC entity for the screening reference.

Any specified **nsfi** parameter must already exist in the allowed DPC entity for the screening reference.

Any specified **nsr** parameter must already exist in the allowed DPC entity for the screening reference.

Any specified **pcst** parameter must already exist in the allowed DPC entity for the screening reference.

Any specified **area** or **ssa** parameter must already exist in the allowed DPC entity for the screening reference.

Any specified **id** or **sp** parameter must already exist in the allowed DPC entity for the screening reference.

Any specified **zone** or **msa** parameter must already exist in the allowed DPC entity for the screening reference.

Notes

If no parameters are specified, a list of allowed DPC references is displayed indicating whether they are referenced or not.

If a single allowed DPC screening reference is specified, the specified entity set requested is shown.

If **all=yes** and no other parameter is specified, detailed information for all of the screening reference entities in the allowed DPC entity set are shown.

If the **all** parameter is specified and other parameters are also specified, the **all** parameter is ignored.

An asterisk as a parameter value in this command displays only entries that have an asterisk as the same parameter value in the entry.

A range of values is specified by separating the values that define the range by two ampersands (**&&**); for example, **:ni=025&&100** specifies all network indicators for ANSI point codes from **25** to **100**.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

rtrv-scr-dpc

```

rlghncxa03w 03-03-13 13:12:38 EST  EAGLE 31.3.0
SCREEN = ALLOWED DPC
SR    REF  RULES
IEC   YES   2
WRD2  YES   1
WRD3  NO    4
WRD4  YES   9

```

;

rtrv-scr-dpc:sr=iec:ni=240:nc=001:ncm=010&&018

```

rlghncxa03w 03-03-13 13:13:21 EST  EAGLE 31.3.0
SCREEN = ALLOWED DPC
SR    NI      NC      NCM      NSFI      NSR/ACT
IEC   240     001     010&&020 STOP      -----

```

;

rtrv-scr-dpc:sr=iec:id=4

```

rlghncxa03w 03-03-13 13:13:56 EST  EAGLE 31.3.0
SCREEN = ALLOWED DPC
SR    ZONE    AREA    ID      NSFI      NSR/ACT
IEC   1       003     4       BLKOPC    blk1

```

;

rtrv-scr-dpc:all=yes

```

rlghncxa03w 03-03-13 13:14:18 EST  EAGLE 31.3.0
SCREEN = ALLOWED DPC
SR    NI      NC      NCM      NSFI      NSR/ACT
IEC   240     001     010     STOP      -----
IEC   241     010     *       CGPA      cg04

SR    ZONE    AREA    ID      NSFI      NSR/ACT
IEC   1       003     4       BLKDPC    blk1
IEC   1       003     5       STOP      -----

SR    NPC
IEC   00235      NSFI      NSR/ACT
IEC   00240      CGPA      cg04
IEC   00240      CGPA      cg01

```

;

rtrv-scr-dpc:sr=dpc1:actname=copy

```

rlghncxa03w 03-03-13 13:16:13 EST  EAGLE 31.3.0
SCREEN = ALLOWED DPC
SR    NI      NC      NCM      NSFI      NSR/ACT
dpc1  010     010     010     STOP      COPY
dpc1  010     010     012     STOP      COPY

```

;

rtrv-scr-dpc:sr=dpc1:npc=128:pcst=s

```

tekelecstp 05-01-06 11:29:11 EST  EAGLE 31.12.0
SCREEN = ALLOWED DPC
SR    NPC
dpc1  s-00128      NSFI      NSR/ACT
dpc1  s-00128      STOP      -----

```

;

rtrv-scr-dpc:sr=dpc1

```

tekelecstp 05-01-06 11:29:11 EST  EAGLE 31.12.0
SCREEN = ALLOWED DPC
SR    ZONE    AREA    ID      NSFI      NSR/ACT

```

```

dpc1  s-1      002      3      STOP      -----
SR      NPC
dpc1  s-00128      NSFI      NSR/ACT
                        STOP      -----

```

;

Legend

For a summary report:

REF—This indicates whether a screen is referenced by another screen. If NO, the screen is not used. If you need a more detailed output, use the **rtrv-scr-dpc:all=yes** command, or specify the specific screening reference.

RULES—The number of screening rules in that screening table.

For a detailed report:

SCREEN = ALLOWED DPC—This is the screen type.

SR—This is used to identify the various screen sets being used. It can be up to four characters in length.

NI - NC - NCM—The point code referenced within the screen. For international point codes, these columns are ZONE - AREA - ID. For 24-bit ITU national point codes, these columns are MSA-SSA-SP. For national point codes, these columns become the single column NPC.

NSFI—The next screening category to be used.

NSR/ACT—The name of the next screening reference (NSR - up to four characters) or action to be taken (ACT - up to six characters), if the message passes this screen.

rtrv-scr-isup

Retrieve Allowed ISUP Screening Reference

Use this command to display one allowed ISUP screening reference or all allowed ISUP screening references in the Allowed ISUP entity set.

Keyword: **rtrv-scr-isup**

Related Commands: **chg-scr-isup**, **dlt-scr-isup**, **ent-scr-isup**

Command Class: Database Administration

Parameters

:actname= (optional)

The name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: *ayyyyy*

1 alphabetic character followed by up to 5 alphanumeric characters.

:all= (optional)

This parameter is specified to display all allowed ISUP screening references in the Allowed ISUP entity set.

Range: **yes, no**

Default: **no**

:isupmt/tupmt= (optional)

ISUP message type or TUP message type in the specified entry. The **tupmt** parameter is not valid for SEAS. A single value or range of values can be entered. An asterisk (*) indicates the entire range of 0-255.

Range: 000-255 *

:nsfi= (optional)

This parameter specifies the next screening category that is used in the gateway screening process. If specified, the parameter must have the value of **stop**.

Range: **stop**

stop—The gateway screening process ends and the message proceeds through normal routing.

:nsr= (optional)

Next screening reference. The **nsr** parameter cannot be specified if **nsfi=stop** is specified.

Range: ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Default: No value given

:sr= (optional)

The individual ISUP screen to be displayed.

Range: ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Example

rtrv-scr-isup:sr=iec:isupmt=1:nisupmt=1&&2

rtrv-scr-isup:sr=tu01:tupmt=0&&255

Dependencies

If the **nsfi** parameter is specified, the value must be **stop**.

The **nsr** parameter cannot be specified if the **actname** parameter is specified.

The **nsr** parameter cannot be specified if the **nsfi=stop** parameter is specified.

If **sr** is specified, the value must exist in the database.

The value of the **actname** parameter must be defined in the gateway screening stop action table with the **chg-gws-actset** command. These values are shown in the ACT NAME field of the **rtrv-gws-actset** command output.

Notes

A range of values for the **isupmt** parameter or **tupmt** parameter can be specified by separating the values that define the range by two ampersands (&&); for example, **:isupmt=025&&100** specifies all ISUP message types from **25** to **100**. The value to the left of the && must be less than the value to the right of the && in the range.

An asterisk can be used for a parameter value in the **chg-scr-isup**, **rtrv-scr-isup**, and **rtrv-scr-isup** commands only if that parameter value was specified as an asterisk in the **ent-scr-isup** command to define the parameter value.

If no parameters are specified, a list of allowed ISUP references is produced indicating whether they are referenced or not.

Output

rtrv-scr-isup

```

tekelecstp 02-09-02 11:10:38 EST  EAGLE 30.0.0
SCREEN = ALLOWED ISUP
SR      REF      RULES
iall    NO        1
ibig    NO        1
iec     NO        2
is01    YES       1
is02    YES       1
isu     NO        1
isu1    NO        1
isu2    NO        1
isw1    NO        1

```

;

rtrv-scr-isup:sr=iall

```

tekelecstp 02-09-02 11:13:25 EST  EAGLE 30.0.0
SCREEN = ALLOWED ISUP
SR  ISUPMT  NSFI  NSR/ACT
iall *      STOP  -----

```

;

rtrv-scr-isup:sr=iec:isupmt=1&&9

```

tekelecstp 02-09-02 11:13:25 EST  EAGLE 30.0.0
SCREEN = ALLOWED ISUP
SR  ISUPMT  NSFI  NSR/ACT
iec 001&&002 STOP  -----
iec 009      STOP  -----

```

;

rtrv-scr-isup:isupmt=*

```

tekelecstp 02-09-02 11:13:25 EST  EAGLE 30.0.0
SCREEN = ALLOWED ISUP
SR  ISUPMT  NSFI  NSR/ACT
iall *      STOP  -----
isu2 *      STOP  -----
isw1 *      STOP  -----

```

;

rtrv-scr-isup:sr=tu01:tupmt=0&&255

```

tekelecstp 03-11-13 13:10:02 EST  EAGLE 31.4.0
SCREEN = ALLOWED ISUP
SR  ISUPMT  NSFI  NSR/ACT
      TUPMT/
tu01 002      STOP  -----

```

;

rtrv-scr-isup:all=yes

```

tekelecstp 02-09-13 13:10:02 EST  EAGLE 30.0.0
SCREEN = ALLOWED ISUP
SR  ISUPMT  NSFI  NSR/ACT
is01 001      STOP  -----
is02 001&&010 STOP  -----

```

```

is03 *          STOP      -----
;

```

Legend

REF—This indicates whether a screen is referenced by another screen. If NO, the screen is not used. If you need a more detailed output, use the **rtrv-scr-isup:all=yes** command, or specify the specific screening reference.

RULES—The number of screening rules in that screening table.

For a detailed report:

SCREEN = ALLOWED ISUP— This is the screen type.

SR—This is used to identify the various screen sets being used. It can be up to four characters in length.

ISUPMT/TUPMT—The ISUP message type or TUP Message type in the entry.

NSFI—The next screening category to be used.

NSR/ACT—The name of the next screening reference (NSR - up to four characters) or action to be taken (ACT - up to six characters), if the message passes this screen.

rtrv-scr-opc

Retrieve Allowed OPC

Use this command to show an allowed OPC screening reference and associated attributes (originating point code, next screening function identifier, next screening function reference).

Keyword: **rtrv-scr-opc**

Related Commands: **chg-scr-opc**, **dlt-scr-opc**, **ent-scr-opc**

Command Class: Database Administration

Parameters

:actname= (optional)

The name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: *ayyyyy*, **none**

1 alphabetic character followed by up to 5 alphanumeric characters.

none—Display only those gateway screening rules that do not have a gateway screening stop action set assigned to them

:all= (optional)

Displays all allowed OPC screening references.

Range: **yes**, **no**

Default: Display all

:area= (optional)

The ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255** *

:id= (optional)

The ITU international ID. The parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7**, *

:msa= (optional)

The 24-bit ITU national main signaling area. The main signaling area is specified in the point code. The format of the point code is *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:nc= (optional)

The network cluster identifier value. This parameter restricts display to those entries containing this specific cluster of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0-255**.

Range: **0-255 ***

Default: Display all

:ncm= (optional)

The network cluster member identifier value. This parameter restricts display to those entries containing this specific cluster member of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0-255**.

Range: **0-255 ***

Default: Display all

:ni= (optional)

The network identifier value. This parameter restricts display to those entries containing this specific network of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0-255**.

Range: **0-255 ***

Default: Display all

:npc= (optional)

The ITU national point code. An asterisk (*) indicates the full range of values from **00000-16383**. Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see Appendix A for information on converting the point code format.

Range: **00000-16383 ***

:nsfi= (optional)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range: **blkopc, sio, dpc, blkdpc, cgpa, stop**

blkopc—Blocked OPC is the next screening category.

sio—Allowed SIO is the next screening category

dpc—Allowed DPC is the next screening category.

blkdpc—Blocked DPC is the next screening category.

cgpa—Allowed calling party address is the next screening category.

stop—The gateway screening process ends and the message proceeds through normal routing.

Default: Display all screening referenes

:nsr= (optional)

The next screening reference parameter indicates which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. This parameter is mandatory if **nsfi** is other than **stop** or **fail**. The **nsr** parameter cannot be entered if **nsfi** is **stop** or **fail**, or the **copy=yes** parameter is specified.

Range: a yyy

1 alphabetic character followed by up to 3 alphanumeric characters

Default: Display all

:pcst= (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range: none, s

Default: none

:sp= (optional)

The 24-bit ITU national signaling point. This parameter specifies the signaling point (*sp*) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: 000-255 *

:sr= (optional)

The allowed OPC screening reference name

Range: ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Default: Display all.

:ssa= (optional)

The 24-bit ITU national sub signaling area. The sub signaling area is specified in the point code. The format of the point code is *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: 0-255 *

:zone= (optional)

The ITU international zone. The parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0-7**.

Range: 0-7, *, C

Example

rtrv-scr-opc

rtrv-scr-opc:sr=iec:ni=240:nc=001:ncm=010&&018

rtrv-scr-opc:sr=iec:id=4

rtrv-scr-opc:all=yes

rtrv-scr-opc:sr=opc1:actname=cr

rtrv-scr-opc:sr=opc1:npc=128:nsfi=fail:pcst=s

Dependencies

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

If **ni=*** is specified, **nc=*** and **ncm=*** must be specified.

If **nc=*** is specified, **ncm=*** must be specified.

If **zone=*** is specified, **area=*** and **id=*** must be specified.

If **area=*** is specified, **id=*** must be specified.

If **msa=*** is specified, **ssa=*** and **sp=*** must be specified.

If **ssa=*** is specified, **sp=*** must be specified.

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range **000-255**.

If the **nc** parameter is specified as an asterisk (**nc=***), the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **ncm** parameter is specified as a single value, or a range other than the full range of **000–255**, the **ni** and the **nc** parameters must be specified with a single value.

The **nsr** parameter cannot be specified if the **actname** parameter is specified.

If the **actname** parameter is specified, the **nsfi=stop** parameter must be specified.

The **nsr** parameter cannot be specified if the specified **nsfi** parameter is **stop**.

The value of the **actname** parameter must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the ACT NAME field of the **rtrv-gws-actset** command output.

If the **actname** parameter is specified with the screening reference name parameter, the specified value for the **actname** parameter must be assigned to that screening reference name.

The specified screening reference (**sr**) must be in the allowed OPC entity set.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The spare point code subtype prefix (**s-**) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** parameter cannot be specified for ANSI and ITU-N24 point codes.

If the **pcst** parameter is specified, point codes with the specified subtype prefix (no prefix or **s-**) must exist in the database.

Any specified **ni** parameter must already exist in the allowed OPC entity for the screening reference.

Any specified **nc** parameter must already exist in the allowed OPC entity for the screening reference.

Any specified **ncm** parameter must already exist in the allowed OPC entity for the screening reference.

Any specified **npc** parameter must already exist in the allowed OPC entity for the screening reference.

Any specified **nsfi** parameter must already exist in the allowed OPC entity for the screening reference.

Any specified **nsr** parameter must already exist in the allowed OPC entity for the screening reference.

Any specified **pcst** parameter must already exist in the allowed OPC entity for the screening reference.

Any specified **area** or **ssa** parameter must already exist in the allowed OPC entity for the screening reference.

Any specified **id** or **sp** parameter must already exist in the allowed OPC entity for the screening reference.

Any specified **zone** or **msa** parameter must already exist in the allowed OPC entity for the screening reference.

Notes

If no parameters are specified, a list of allowed OPC references is produced indicating whether they are referenced or not.

If a single allowed OPC screening reference is specified, the specified entity set requested is shown.

If **all=yes** and no other parameter is specified, detailed information for all of the screening reference entities in the allowed OPC entity set are shown.

If **all** is specified and other parameters are also specified, the **all** parameter is ignored.

An asterisk specified as a parameter value in this command displays only entries that have an asterisk as the same parameter value in the entry.

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, **:ni=025&&100** specifies all network indicators for ANSI point codes from **25** to **100**.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

rtrv-scr-opc

```
rlghncxa03w 03-03-13 13:12:38 EST EAGLE 31.3.0
SCREEN = ALLOWED OPC
```

SR	REF	RULES
IEC	YES	2
WRD2	YES	1
WRD3	NO	4
WRD4	YES	9

;

rtrv-scr-opc:sr=iec:ni=240:nc=001:ncm=010&&018

```
rlghncxa03w 03-03-13 13:13:21 EST EAGLE 31.3.0
SCREEN = ALLOWED OPC
```

SR	NI	NC	NCM	NSFI	NSR/ACT
IEC	240	001	010&&020	STOP	-----

;

rtrv-scr-opc:sr=iec:id=4

```
rlghncxa03w 03-03-13 13:13:56 EST EAGLE 31.3.0
SCREEN = ALLOWED OPC
```

SR	ZONE	AREA	ID	NSFI	NSR/ACT
IEC	1	003	4	BLKOPC	blk1

;

rtrv-scr-opc:all=yes

```
rlghncxa03w 03-03-13 13:14:18 EST EAGLE 31.3.0
SCREEN = ALLOWED OPC
```

SR	NI	NC	NCM	NSFI	NSR/ACT
IEC	240	001	010	STOP	-----
IEC	241	010	*	CGPA	cg04

SR	ZONE	AREA	ID	NSFI	NSR/ACT
IEC	1	003	4	BLKOPC	blk1
IEC	1	003	5	STOP	-----

SR	NPC	NSFI	NSR/ACT
IEC	00235	CGPA	cg04
IEC	00240	CGPA	cg01

SR	NI	NC	NCM	NSFI	NSR/ACT
WRD2	243	015	001	STOP	-----
WRD3	243	105	002	CGPA	WRD4

;

rtrv-scr-opc:sr=opc1:actname=cr

```
rlghncxa03w 03-03-13 13:16:13 EST EAGLE 31.3.0
SCREEN = ALLOWED OPC
```

SR	NI	NC	NCM	NSFI	NSR/ACT
opc1	010	010	010	STOP	CR
opc1	010	010	012	STOP	CR

;

rtrv-scr-opc:sr=op55

```
tekelecstp 03-03-06 11:30:42 EST EAGLE 31.0.0
SR MSA SSA SP NSFI NSR/ACT
op55 007 077 007 BLKOPC bo55
```

;

rtrv-scr-opc:sr=opc1:npc=128:nsfi=fail

```
tekelecstp 05-01-06 11:30:42 EST EAGLE 31.12.0
SR      NPC      NSFI    NSR/ACT
opc1   s-00128   FAIL    -----
```

;

Legend

For a summary report:

REF—This indicates whether a screen is referenced by another screen. If NO, the screen is not used. If you need a more detailed output, use the **rtrv-scr-opc:all=yes** command, or specify the specific screening reference.

RULES—The number of screening rules in that screening table.

For a detailed report:

SCREEN = ALLOWED OPC— This is the screen type.

SR—This is used to identify the various screen sets being used. It can be up to four characters in length.

NI - NC - NCM—The point code referenced within the screen. For international point codes, these columns are ZONE - AREA - ID. For 24-bit ITU national point codes, these columns are MSA-SSA-SP. For national point codes, these columns become the single column NPC.

NSFI—The next screening category to be used.

NSR/ACT—The name of the next screening reference (NSR - up to four characters) or action to be taken (ACT - up to six characters), if the message passes this screen.

rtrv-scr-sio

Retrieve Allowed SIO

Use this command to show the attributes of one or more **nic/si/h0/h1** combinations that are allowed for SS7 messages from another network.

Keyword: **rtrv-scr-sio**

Related Commands: **chg-scr-sio, dlt-scr-sio, ent-scr-sio**

Command Class: Database Administration

Parameters

:actname= (optional)

The name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: *ayyyyy*

1 alphabetic character followed by up to 5 alphanumeric characters.

none—Display only those gateway screening rules that do not have a gateway screening stop action set assigned to them

:all= (optional)

Displays all allowed SIO screening references.

Range: **yes, no**

Default: **no**

:h0= (optional)

H0 heading code. A single value or a range of values can be specified. An asterisk (*) indicates all possible values; that is, the entire range of **0–15**.

Range: **0-15 ***

Default: Display all

:h1= (optional)

H1 heading code. A single value or a range of values can be specified. An asterisk (*) indicates all possible values; that is, the entire range of **0–15**.

Range: **0-15 ***

Default: Display all

:nic= (optional)

The network indicator code. An asterisk (*) indicates all possible values; that is, the entire range of **0–3**.

Range: **0-3 ***

Default: Display all

:nsfi= (optional)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range: **blkdpc, cgpa, cdpa, destfld, dpc, isup, stop**

blkdpc—Blocked DPC is the next screening category.

cgpa—Allowed calling party address is the next screening category.

cdpa—Allowed called party address is the next screening category.

destfld—Allowed destination field (DESTFLD) is the next screening category.

dpc—Allowed DPC is the next screening category.

isup—ISUP message type (ISUP) is the next screening category.

stop—The gateway screening process ends and the message proceeds through normal routing.

Default: Display all screening references

:nsr= (optional)

The next screening reference parameter indicates which screening reference in the specified screening category (**nsfi**) is to be used in the screening process.

(optional; mandatory if **nsfi** is other than **stop**; cannot be entered if **nsfi=stop**)

Range: `ayyy`

1 alphabetic character followed by up to 3 alphanumeric characters

Default: Display all

:pri= (optional)

Message priority. A single value or a range of values can be specified. An asterisk (*) indicates all possible values; that is, the entire range of **0–3**.

Range: **0-3 ***

Default: Display all

:si= (optional)

The service indicator.

Range: **0-15, * ****

Default: Display all

:sr= (optional)

The allowed SIO screening reference name

Range: `ayyy`

1 alphabetic character followed by up to 3 alphanumeric characters

Default: Display all

Example

```
rtrv-scr-sio
rtrv-scr-sio:sr=iec:nic=1:si=3:pri=2&&3
rtrv-scr-sio:sr=sio1:nic=1:si=1
rtrv-scr-sio:sr=sio1:nic=1:si=1:h0=1:h1=*
rtrv-scr-sio:sr=sio1:si=1:h0=1:h1=1
rtrv-scr-sio:all=yes
rtrv-scr-sio:sr=iec:nic=1:si=1:actname=crncf
```

Dependencies

If the **si** parameter is not equal to **00**, **01**, or **02**, the **h0** and **h1** parameters cannot be specified.

If the **nic**, **si**, and **h0/h1** parameters are specified, the SIO screening reference must be in the allowed SIO entity set.

The network indicator code (**nic**) must be specified if the service indicator is specified.

The network indicator code (**nic**) and the service indicator (**si**) must be specified if the **h0** and **h1** parameters are specified.

If an asterisk value is specified for the **h0** parameter, the **h1** parameter cannot be specified.

If the **nsr** parameter is specified, **nsfi=stop** cannot be specified.

If the **actname** parameter is specified, **nsfi=stop** must be specified.

The **nsr** parameter cannot be specified if the **actname** parameter is specified.

If the **actname** parameter is specified with the screening reference name parameter, the specified value for the **actname** parameter must be assigned to that screening reference name.

The value of the **actname** parameter must be defined in the gateway screening stop action table with the **chg-gws-actset** command. These values are shown in the ACT NAME field of the **rtrv-gws-actset** command output.

If the **sr** parameters are specified, the SIO screening reference must be in the allowed SIO entity set.

Notes

An asterisk as a parameter value in this command displays only entries that have an asterisk as the same parameter value in the entry.

If no parameters are specified, a list of allowed SIO references is output indicating whether they are referenced or not.

If only the **all** parameter is specified and is **yes**, detailed information for every rule in every allowed SIO screening table is displayed.

If the **all** parameter is specified and other parameters are also specified, the **all** parameter is ignored.

Output

rtrv-scr-sio

SCREEN = ALLOWED SIO

SR REF RULES

S NO 1

s999 NO 1

si NO 1

si01 NO 1

si1 NO 1

sio1 NO 3

swl1 NO 1

swl2 NO 1

;

rtrv-scr-sio:sr=iec:nic=1:si=3:pri=2&&3

rlghncxa03w 03-03-15 08:36:43 EST EAGLE 31.3.0

SCREEN = ALLOWED SIO

SR NIC PRI SI H0 H1 NSF I NSR/ACT

IEC 1 0&&2 3 -- -- BLKDPC WDB2

IEC 1 3 3 -- -- DPC ABC2

;

rtrv-scr-**sio:sr=sio1:nic=1:si=1:h1=1:pri=1:h0=15:nsfi=blkdpc:nsr=bdp1**

rlghncxa03w 03-03-07 12:05:33 EST EAGLE 31.3.0

SCREEN = ALLOWED SIO

SR NIC PRI SI H0 H1 NSF I NSR/ACT

sio1 1 1 1 15 01 BLKDPC bdp1

;

rtrv-scr-sio:sr=sio1:h0=1:h1=1

rlghncxa03w 03-03-07 12:05:33 EST EAGLE 31.3.0

SCREEN = ALLOWED SIO

SR NIC PRI SI H0 H1 NSF I NSR/ACT

sio1 1 1 1 01 * STOP -----

sio1 2 1 1 01 * STOP -----

;

rtrv-scr-sio:sr=sio1:nic=1:si=1

rlghncxa03w 03-03-07 12:05:33 EST EAGLE 31.3.0

SCREEN = ALLOWED SIO

SR NIC PRI SI H0 H1 NSF I NSR/ACT

sio1 1 1 1 01 * STOP -----

sio1 1 1 1 02 01 STOP -----

;

rtrv-scr-sio:sr=sio1:nic=1:si=1:h0=1:h1=*

rlghncxa03w 03-03-07 12:05:33 EST EAGLE 31.3.0

SCREEN = ALLOWED SIO

SR NIC PRI SI H0 H1 NSF I NSR/ACT

sio1 1 1 1 01 * STOP -----

;

rtrv-scr-sio:sr=iec:nic=1:si=1:actname=crncf

rlghncxa03w 03-03-19 21:16:37 EST EAGLE 31.3.0

SCREEN = ALLOWED SIO

SR NIC PRI SI H0 H1 NSF I NSR/ACT

iec 1 1 1 15 01 STOP CRNCF

;

rtrv-scr-sio:si=5

```

tekelecstp 02-08-28 16:47:06 EST EAGLE 30.0.0
SCREEN = ALLOWED SIO
SR   NIC  PRI  SI  H0    H1    NSFI   NSR/ACT
si01 1    1    5  --    --    STOP   -----
si02 1    1    5  --    --    ISUP   is01

```

;

Legend

For a summary report:

SR—This is used to identify the various screen sets being used. It can be up to four characters in length.

REF—This indicates whether a screen is referenced by another screen. If NO, the screen is not used. If you need a more detailed output, use the **rtrv-scr-sio:all=yes** command, or specify the specific screening reference.

RULES—The number of screening rules in that screening table.

For a detailed report:

SCREEN = ALLOWED SIO—This is the screen type.

SR—This is used to identify the various screen sets being used. It can be up to four characters in length.

NIC—The network indicator code in the service information octet.

PRI—The priority of a single message or the beginning message priority in a range of priorities in the service information octet.

SI—The service indicator for the service information octet, which are the last two bits of the subservice field.

H0—The H0 heading code.

H1—The H1 heading code.

NSFI—The next screening category to be used.

NSR/ACT—The name of the next screening reference (**NSR** - up to four characters) or action to be taken (**ACT** - up to six characters), if the message passes this screen.

rtrv-scr-tt**Retrieve Allowed Translation Type**

Use this command to show the allowed translation type (TT) screening reference in the TT entity set.

Keyword: **rtrv-scr-tt**

Related Commands: **chg-scr-tt**, **dlt-scr-tt**, **ent-scr-tt**

Command Class: Database Administration

Parameters

:actname= (optional)

The name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: *ayyyyy*
1 alphabetic character followed by up to 5 alphanumeric characters.

none—Display only those gateway screening rules that do not have a gateway screening stop action set assigned to them

:all= (optional)

Displays all allowed TT screening references.

Range: **yes, no**

Default: **no**

:nsfi= (optional)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range: **cdpa, stop**

cdpa—Allowed called party address is the next screening category.

stop—The gateway screening process ends and the message proceeds through normal routing.

Default: Display all screening references

:nsr= (optional)

The next screening reference parameter indicates which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. This parameter is mandatory if **nsfi** is other than **stop**. The **nsr** parameter cannot be entered if **nsfi** is **stop**, or the **copy=yes** parameter is specified.

Range: `ayyy`

1 alphabetic character followed by up to 3 alphanumeric characters

Default: Display all

:sr= (optional)

The TT screening reference name

Range: `ayyy`

1 alphabetic character followed by up to 3 alphanumeric characters

Default: Display all

:type= (optional)

The translation type. The translation type identifies the global title translation type value in the called party address. It is the decimal representation of the 1-byte field used in SS7. A single value or a range of values can be specified.

Range: **1-255 ***

Default: Display all.

Example

```
rtrv-scr-tt
```

```
rtrv-scr-tt:sr=iec
```

```
rtrv-scr-tt:all=yes
```

```
rtrv-scr-tt:sr=iec:type=1&&15:actname=copy
```

Dependencies

If the **nsr** parameter is specified, **nsfi=stop** cannot be specified.

If the **actname** parameter is specified and **nsfi** is specified, the value specified for **nsfi** must be **stop**.

The value of the **actname** parameter must be defined in the gateway screening stop action table with the **chg-gws-actset** command. These values are shown in the ACT NAME field of the **rtrv-gws-actset** command output.

The **nsr** parameter cannot be specified if the **actname** parameter is specified.

If the **actname** parameter is specified with the screening reference name parameter, the specified value for the **actname** parameter must be assigned to that screening reference name.

The **copy** parameter is obsolete. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Notes

An asterisk as a parameter value in this command displays only entries that have an asterisk as the same parameter value in the entry.

If no parameters are specified, a list of allowed TT references is produced indicating whether they are referenced or not.

If only the **all** parameter is specified and is **yes**, detailed information for every rule in every allowed TT screening table is displayed.

If the **all** parameter is specified and other parameters are also specified, the **all** parameter is ignored.

Output**rtrv-scr-tt**

```

rlghncxa03w 03-03-07 12:05:33 EST EAGLE 31.3.0
SCREEN = ALLOWED TT
SR      REF  RULES
IEC     YES   2
WRD2    YES   1
WRD4    YES   4

```

;

rtrv-scr-tt:sr=iec

```

rlghncxa03w 03-03-07 12:05:33 EST EAGLE 31.3.0
SCREEN = ALLOWED TT
SR      TYPE   NSFI   NSR/ACT
IEC     005&&010 STOP   -----
IEC     012     STOP   -----
IEC     016     CDPA   IEC

```

;

rtrv-scr-tt:all=yes

```

rlghncxa03w 03-03-07 12:05:33 EST EAGLE 31.3.0
SCREEN = ALLOWED TT
SR      TYPE   NSFI   NSR/ACT
IEC     005&&010 STOP   -----
IEC     012     STOP   -----
IEC     016     CDPA   IEC
WRD2    243     STOP   -----
WRD4    *       STOP   -----

```

;

rtrv-scr-tt:sr=iec:type=1&&15:actname=copy

```

rlghncxa03w 03-03-15 08:54:35 EST EAGLE 31.3.0
SCREEN = ALLOWED TT
SR      TYPE   NSFI   NSR/ACT
IEC     005&&010 STOP   COPY
IEC     012     STOP   COPY

```

;

Legend

SCREEN = ALLOWED TT—This is the screen type.

SR—This is used to identify the various screen sets being used. It can be up to four characters in length.

REF—This indicates whether a screen is referenced by another screen. If NO, the screen is not used. If a more detailed output is needed, the **rtrv-scr-tt:all=yes** command should be used, or specify the specific screening reference.

TYPE—The translation type of that is allowed for global title translation.

NSFI—The next screening category to be used.

NSR/ACT—The name of the next screening reference (NSR - up to four characters) or action to be taken (ACT - up to six characters), if the message passes this screen.

rtrv-scrset**Retrieve Screen Set**

Use this command to show the attributes of one or more screen sets in the screen set entity set.

Keyword: rtrv-scrset

Related Commands: chg-scrset, dlt-scrset, ent-scrset

Command Class: Database Administration

Parameters

:actname= (optional)

The name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: ayyyyy

1 alphabetic character followed by up to 5 alphanumeric characters.

none—Display only those gateway screening rules that do not have a gateway screening stop action set assigned to them

:all= (optional)

Displays all screen sets (except “placeholder” screen sets that contain only one rule with **nsfi=stop** specified in the rule).

Range: yes, no

Default: no

:destfld= (optional)

This parameter displays the indicator that specifies whether to apply the automatic allowed affected destination screening for network management messages against the routing table, self point codes, and capability point codes. When this parameter is on in the screen set rule, the automatic screening is applied at the end of the provisioned screen set.

Range: yes, no

Default: Display all

:nsfi= (optional)

The values of this parameter indicate in the screen set rules the next screening category that is used in the gateway screening process, or that the gateway screening process should stop. In this command, information is displayed for one or more screen sets containing rules with the specified **nsfi** parameter value.

NOTE: When nsfi=stop is specified for this command, the command displays only the “placeholder” screen sets that have only one rule, with nsfi=stop specified in the rule. This is a way to locate those “placeholder” screen sets, so that you can add or change the rules to accomplish appropriate screening.

Range: opc, blkopc, sio, dpc, blkdpc, stop

opc—Display rules with Allowed OPC as the next screening category.

blkopc—Display rules with Blocked OPC as the next screening category.

sio—Display rules with Allowed SIO as the next screening category.

dpc—Display rules with Allowed DPC as the next screening category.

blkdpc—Display rules with Blocked DPC as the next screening category.

stop—Display only “placeholder” screen sets that have only one rule in the screen set, with **nsfi=stop** specified as the next screening category.

Default: Display all

:nsr= (optional)

The next screening reference parameter indicates which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. In this command, the **nsr** parameter is used to display information for one or more screen sets with rules that have the specified **nsr** parameter value.

Range: ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Default: Display all

:scrn= (optional)

The screen set name. When this parameter is specified, the information for only the specified screen set is displayed.

Range: xyyy

1 alphabetic character followed by up to 3 alphanumeric characters

Default: Display all

Example

```
rtrv-scrset
```

```
rtrv-scrset:scrn=scr1
```

```
rtrv-scrset:nsr=opc4
```

```
rtrv-scrset:nsfi=dpc
```

```
rtrv-scrset:actname=copy
```

Dependencies

The screen set name must already exist.

When the **actname** parameter is specified and the **nsfi** parameter is specified, the value specified for the **nsfi** parameter must be **stop**.

The **nsr** parameter cannot be specified if the **actname** parameter is specified.

If the **actname** parameter is specified with the screen set name parameter, the specified value for the **actname** parameter must be assigned to that screen set name.

The **nsr** parameter is required if the **nsfi** parameter value does not equal **stop**.

The **nsr** parameter cannot be entered if the **nsfi** parameter value equals **stop**.

Notes

If no parameters are specified for the **rtrv-scrset** command, the output shows all the screen sets, the screening function identifier of the root screening table, the screening reference of the root screening table, the memory usage (percentage), the number of entries in the screen set and the overall gateway screening statistics, followed by a summary of statistics for each screen set.

For the **rtrv-scrset:all=yes** command, the output consists of every screen set and every screening reference in each screen set (except “placeholder” screen sets that have only one rule with **nsfi=stop** specified in the rule). The **all=yes** and **nsfi=stop** parameters cannot be specified in the same command.

If the **scrn**, **nsfi**, or **nsr** parameter is entered, summary information for all screens that match the specified parameters is shown.

When the % FULL is over 100%, the screen is inaccessible. A screenset over 100% capacity size will not bind correctly. A screenset can become provisioned over capacity when linking one screen reference to another causes the size to become too large. To reduce a screenset that is over 100% capacity, screen rules must be deleted (see the **dlt-scr-xxx** commands)

Output

In the following example the % full is over 100% and the screen is inaccessible.

rtrv-scrset

```
rlghncxa03w 03-03-14 16:37:05 EST EAGLE 31.3.0
ENTIRE GWS DATABASE IS 1% FULL
CDPA + AFTPC TABLES ARE 0% FULL
SCREEN SET TABLE IS (2 OF 255) 2% FULL
THERE ARE 0 SEAS SCREEN SETS USED ( prefix 00nn )
THERE ARE 2 EAGLE SCREEN SETS USED
```

THE FOLLOWING ARE OVER 80% FULL:

SCRN	NSFI	NSR/ACT	FULL	RULES	TABLES	DESTFLD
scr1	OPC		101%	4093	2	Y

SCRN	NSFI	NSR/ACT	FULL	RULES	TABLES	DESTFLD
scr1	OPC	opc1	101%	4093	2	Y
scr2	OPC	opc2	1%	3	2	Y

;

rtrv-scrset:nsfi=opc

```
rlghncxa03w 03-03-14 16:37:54 EST EAGLE 31.3.0
SCRN NSFI NSR/ACT RULES DESTFLD
att1 OPC att1 111 Y
atx1 OPC atx1 2 Y
bam1 OPC bam1 3 Y
ctt1 OPC ctt1 1 Y
ctw1 OPC ctw 39 Y
mci1 OPC mci1 3 Y
wtl1 OPC wtl1 339 Y
```

;

rtrv-scrset:nsr=dpc3

```
rlghncxa03w 03-03-14 16:38:28 EST EAGLE 31.3.0
SCRN NSFI NSR/ACT RULES
ss01 DPC dpc3 3
ss02 DPC dpc3 3
ss03 DPC dpc3 3
ss04 DPC dpc3 3
ss05 DPC dpc3 3
```

;

rtrv-scrset:scrn=ss53

```
rlghncxa03w 03-03-14 16:39:04 EST EAGLE 31.3.0
SCRN NSFI NSR/ACT RULES DESTFLD
ss53 BLKDPC bkd2 2 Y
      CGPA cgp1 3
      TT tt1 3
      TT tt2 3
      TT tt3 4
      CDPA cdp1 3
      CDPA cdp2 3
      CDPA cdp3 4
      AFTPC end1 9
```

;

rtrv-scrset:scrn=gws1

```
e1070402 02-07-22 10:06:09 EST EAGLE 30.0.0
rtrv-scrset:scrn=gws1
Command entered at terminal #4.
```


SCRN	NSFI	NSR/ACT	RULES	DESTFLD
gws1	OPC	opc1	17	Y
	BLKOPC	bop1	1812	
	SIO	sio1	80	
	DPC	dpc1	17	
	BLKDPC	bdp1	1812	
	CGPA	cga1	34	
	TT	tt01	256	
	CDPA	cda1	17	
	CDPA	cdb1	6	
	AFTPC	apc1	17	
	ISUP	isu1	17	

;

Legend**SCRN**—The name of the screen set.**NSFI**—The next screening category to be used.**NSR/ACT**—The name of the next screening reference (NSR - up to four characters) or action to be taken (ACT - up to six characters), if the message passes this screen.**FULL**—The capacity of allowed memory a given screen set occupies, expressed as a percentage.**RULES**—The number of entries in the screen set.**TABLES**—The number of tables in the screen set.**DESTFLD**—Displays whether to apply the automatic allowed affected destination screening for network management messages against the routing table, self point codes, and capability point codes. When this parameter is on, the automatic screening is applied at the end of the provisioned screen set.**rtrv-secu-dflt****Display System-Wide Security-Related Defaults**

Use this command to display the current values of the various security-related parameters that have been configured with the **chg-secu-dflt** command.

Keyword: **rtrv-secu-dflt****Related Commands:** **chg-pid, chg-secu-dflt****Command Class:** Security Administration**Parameters****:msg=** (optional)

Use this parameter to specify whether the text of the login warning message is to be displayed also.

Range: **yes, no****Default:** **no****Example****rtrv-secu-dflt****rtrv-secu-dflt:msg=yes****Dependencies**

None

Notes

None

Output

```

rtrv-secu-dflt:msg=yes
rlghncxa03w 03-03-17 16:02:05 EST  EAGLE 31.3.0
-----
PAGE                60
UOUT                90
MULTLOG             NO
MINLEN              8
ALPHA               1
NUM                 1
PUNC                1
WARNING MESSAGE
-----
1:*****
2:**  NOTICE: This is a private computer system.      **
3:**  Unauthorized Access or use may lead to           **
4:**  prosecution.                                     **
5:**  03-03-01 Notice!!! Eagle will be upgraded between **
6:**                the hours of 2am-3am on 03-03-02.  **
7:**                                                    **
8:**  Today's happy message: Go with Tekelec!!         **
9:*****
10:" "
11:""
12:""
13:""
14:""
15:""
16:""
17:""
18:""
19:""
20:""
;

rtrv-secu-dflt
rlghncxa03w 03-03-17 16:02:05 EST  EAGLE 31.3.0
-----
PAGE                60
UOUT                90
MULTLOG             NO
MINLEN              8
ALPHA               1
NUM                 1
PUNC                1
;

```

Legend

PAGE—The default password aging interval for newly created user IDs

UOUT—The number of successive days a user ID can go unused (no successful login) before the system denies login.

MULTLOG—Indicates whether users can be logged on to multiple terminals at the same time

MINLEN—The minimum password length.

ALPHA—The minimum number of alphabetic characters (a–z) required in a new password.

NUM—The minimum number of numeric characters (0–9) required in a new password.

PUNC—The minimum number of punctuation characters required in a new password. A punctuation character is any character that is not an alphabetic or numeric character.

WARNING MESSAGE—The message displayed when a user has successfully logged in.

rtrv-secu-trm

Display Terminal Access Rights

Use this command to display the access rights for a terminal. Only a user with system security administration authority can change a terminal's access rights. Access rights determine whether a terminal or port has command access to the system.

Keyword: rtrv-secu-trm

Related Commands: chg-secu-trm

Command Class: Security Administration

Parameters

:trm= (optional)

Specifies the port about which information will be displayed.

Range: 1-16

Default: Display all

Example

```
rtrv-secu-trm
```

```
rtrv-secu-trm:trm=9
```

Dependencies

None

Notes

None

Output

The following example shows attributes of all terminals when the Command Class Management feature is off.

rtrv-secu-trm

```
rlghncxa03w 03-03-15 12:31:04 EST EAGLE 31.3.0
                                LNP LNP LNP
TRM  LINK SA  SYS PU  DB  DBG BAS DB  SUB
1    NO  NO YES NO  YES NO  YES YES NO
2    NO  YES NO  NO  NO  NO  YES NO NO
3    YES *** YES YES YES YES YES NO NO
4    NO  NO  NO  NO  NO  NO  YES NO YES
5    YES *** YES NO  YES YES YES YES YES
6    NO  NO  NO  NO  NO  NO  YES YES YES
.
.
.
16   NO  YES NO  NO  YES YES YES YES YES
;
```

The following example shows attributes of all terminals when the Command Class Management feature is on.

rtrv-secu-trm

```
rlghncxa03w 03-03-15 12:30:07 EST EAGLE 31.3.0
                                lnp lnp lnp
trm  link sa  sys pu  db  dbg bas db  sub
1    NO  NO YES NO  YES NO  YES YES NO
2    NO  YES NO  NO  NO  NO  YES NO NO
3    YES *** YES YES YES YES YES NO NO
4    NO  NO  NO  NO  NO  NO  YES NO YES
5    YES *** YES NO  YES YES YES YES YES
6    NO  NO  NO  NO  NO  NO  YES YES YES
.
.
.
16   NO  YES NO  NO  YES YES YES YES YES

trm  U01 U02 U03 U04 U05 U06 U07 U08 U09 U10 U11 U12 U13 U14 U15 U16
1    NO  NO YES NO  YES NO  YES YES NO  YES NO  NO  NO  NO YES NO
2    NO  YES NO  NO  NO  NO  YES NO  NO  NO  YES NO  YES NO  YES NO
3    YES NO  YES YES YES YES YES NO  NO  YES NO  NO  NO YES NO YES
4    NO  NO  NO  NO  NO  NO  YES NO  YES NO  YES NO  YES NO  YES NO
5    YES YES YES NO  YES YES YES YES YES YES NO  NO  NO YES NO YES
6    NO  NO  NO  NO  NO  NO  YES YES YES NO  YES NO  YES NO  YES NO
.
.
.
16   NO  YES NO  NO  YES YES YES YES YES YES YES YES NO  YES NO YES

trm  U17 U18 U19 U20 U21 U22 U23 U24 U25 U26 U27 U28 U29 U30 U31 U32
1    NO  NO YES NO  YES NO  YES YES NO  YES NO  NO  NO  YES NO YES
2    NO  NO  NO  NO  NO  NO  YES NO  YES NO  YES NO  YES NO  YES NO
3    YES YES YES NO  YES YES YES YES YES YES NO  NO  NO YES NO YES
4    NO  NO  NO  NO  NO  NO  YES YES YES NO  YES NO  YES NO  YES NO
5    NO  NO YES NO  YES NO  YES YES NO  YES NO  NO  NO  NO YES NO
6    NO  YES NO  NO  NO  NO  YES NO  NO  NO  YES NO  YES NO  YES NO
.
.
.
16   NO  YES NO  NO  YES YES YES YES NO  YES NO  YES NO  YES NO YES
;
```

The following example shows attributes of terminal 9; the Command Class Management feature is off.

rtrv-secu-trm:trm=9

```
rlghncxa03w 03-03-15 12:30:07 EST EAGLE 31.3.0
                                LNP LNP LNP
TRM   LINK SA  SYS PU   DB   DBG  BAS  DB  SUB
9     NO   NO  YES NO   YES  NO   YES  YES  YES
;
```

The following example shows attributes of terminal 9; the Command Class Management feature is on.

rtrv-secu-trm:trm=9

```
rlghncxa03w 03-03-15 12:30:07 EST EAGLE 31.3.0
                                LNP LNP LNP
TRM   LINK SA  SYS PU   DB   DBG  BAS  DB  SUB
9     NO   NO  YES NO   YES  NO   YES  YES  YES

trm   U01 U02 U03 U04 U05 U06 U07 U08 U09 U10 U11 U12 U13 U14 U15 U16
9     NO   NO  YES NO   YES NO   YES YES YES YES NO  YES NO  YES NO  YES

trm   U17 U18 U19 U20 U21 U22 U23 U24 U25 U26 U27 U28 U29 U30 U31 U32
9     NO   NO  YES YES YES YES YES YES YES YES YES YES YES NO  YES NO  NO
;
```

Legend

TRM—The ID number of the terminal whose characteristics are to be changed.

LINK—Shows whether the Link Maintenance class of commands is allowed for this terminal.

SA—Shows whether the Security Administration class of commands is allowed for this terminal.

SYS—Shows whether the System Maintenance class of commands is allowed for this terminal.

PU—Shows whether the Program Update class of commands is allowed for this terminal.

DB—Shows whether the Database class of commands is allowed for this terminal.

DBG—Shows whether the Debug class of commands is allowed for this terminal.

*******—Denotes a Security Administration port whose port type has been configured with a value of **oap**, **none**, or **printer**. These terminal types do not allow you to enter commands.

LNPBAS—Shows whether the LNP BASIC class of commands is allowed for this terminal.
(Appears only if LNP is turned on.)

LNPDB—Shows whether the LNP Database class of commands is allowed for this terminal.
(Appears only if LNP is turned on.)

LNPSUB—Shows whether the LNP Subscription class of commands is allowed for this terminal.
(Appears only if LNP is turned on.)

U01 - U32—Configurable command class default names. (If configured with a user-specified name, that name appears.)

rtrv-secu-user

Retrieve Security User

Use this command to show the security information for all users in the system.

Keyword: rtrv-secu-user

Related Commands: act-user, chg-pid, chg-user, dact-user, dlt-user, ent-user, login, logout, rept-stat-user, rtrv-user

Command Class: Security Administration

Parameters

:uid= (optional)

User ID

Range: *azzzzzzzzzzzzzzzzz*

1 alphabetic character followed by up to 15 alphanumeric characters

Default: Display all

Example

rtrv-secu-user : uid = rogers

Dependencies

If a user ID is specified, the user ID must exist in the UserID table.

Notes

Only the system administrator should have access to this command.

Passwords cannot be shown.

This command can be canceled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

Output

The following example shows a display when the LNP feature is turned on and the Command Class Management feature is not enabled:

rtrv-secu-user

```
rlghncxa03w 04-01-07 09:50:17 EST EAGLE 31.3.0
```

user id	age	page	uout	rev	link	sa	sys	pu	db	dbg	bas	db	sub
eagle1longname16	750	0	0	NO	YES	YES	YES	YES	YES	YES	YES	YES	YES

user id	age	page	uout	rev	link	sa	sys	pu	db	dbg	bas	db	sub
manny	36	60	60	NO	YES	YES	YES	YES	YES	YES	YES	YES	YES

user id	age	page	uout	rev	link	sa	sys	pu	db	dbg	bas	db	sub
moe	100	30	60	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES

user id	age	page	uout	rev	link	sa	sys	pu	db	dbg	bas	db	sub
jack	10	30	30	NO	YES	YES	YES	YES	YES	YES	YES	YES	YES

```
;
```

The following example shows a display when the LNP feature is turned on and the Command Class Management feature is enabled:

rtrv-secu-user

```
rlghncxa03w 04-01-07 09:50:17 EST EAGLE 31.3.0
```

user id	age	page	uout	rev	link	sa	sys	pu	db	dbg	bas	db	sub
eagle1longname16	750	0	0	NO	YES	YES	YES	YES	YES	YES	YES	YES	YES

u01	u02	u03	u04	u05	u06	u07	u08	u09	u10	u11	u12	u13	u14	u15	u16
YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO

u17	u18	u19	u20	u21	u22	u23	u24	u25	u26	u27	u28	u29	u30	u31	u32
YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO	NO	NO	YES

user id	age	page	uout	rev	link	sa	sys	pu	db	dbg	bas	db	sub
manny	36	60	60	NO	YES	YES	YES	YES	YES	YES	YES	YES	YES

u01	u02	u03	u04	u05	u06	u07	u08	u09	u10	u11	u12	u13	u14	u15	u16
NO	NO	NO	NO	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES

u17	u18	u19	u20	u21	u22	u23	u24	u25	u26	u27	u28	u29	u30	u31	u32
YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO	NO	NO	YES

user id	age	page	uout	rev	link	sa	sys	pu	db	dbg	bas	db	sub
moe	100	30	60	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES

u01	u02	u03	u04	u05	u06	u07	u08	u09	u10	u11	u12	u13	u14	u15	u16
YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO

u17	u18	u19	u20	u21	u22	u23	u24	u25	u26	u27	u28	u29	u30	u31	u32
YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO	NO

user id	age	page	uout	rev	link	sa	sys	pu	db	dbg	bas	db	sub

jack	10	30	30	NO	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES
u01	u02	u03	u04	u05	u06	u07	u08	u09	u10	u11	u12	u13	u14	u15	u16
YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES
u17	u18	u19	u20	u21	u22	u23	u24	u25	u26	u27	u28	u29	u30	u31	u32
YES	YES	YES	YES	YES	YES	NO	NO	NO	NO	YES	YES	YES	YES	YES	NO

The following example shows a display when the LNP feature is not turned on and the Command Class Management feature is not enabled:

rtrv-secu-user

rlghncxa03w	03-03-07	09:50:17	EST	EAGLE	31.3.0						
user_id		age	page	uout	rev	link	sa	sys	pu	db	dbg
eagle1	longname16	750	0	0	NO	YES	YES	YES	YES	YES	YES
user_id		age	page	uout	rev	link	sa	sys	pu	db	dbg
manny		36	60	60	NO	YES	YES	YES	YES	YES	YES
user_id		age	page	uout	rev	link	sa	sys	pu	db	dbg
moe		100	30	60	YES	YES	YES	YES	YES	YES	YES
user_id		age	page	uout	rev	link	sa	sys	pu	db	dbg
jack		10	30	30	NO	YES	YES	YES	YES	YES	YES

i

Legend

USER-ID—The name of the user

AGE—Shows the current age, in days, of the password associated with this user ID. If the password age is greater than 999 days, the value **999** is displayed.

PAGE—Shows the maximum password age established for this user ID. When AGE becomes greater than PAGE, the system forces the user to change the password at the next login. An asterisk (*) displayed after the value indicates that the system-wide default page parameter value, as configured on the **chg-secu-dflt** command, is in effect for the user ID.

UOUT—Shows the user ID aging interval, in days. If the user ID is not used (that is, no successful login) for longer than this interval, the system does not allow a login. An asterisk (*) displayed after the value indicates that the system-wide default **uout** parameter value, as configured on the **chg-secu-dflt** command, is in effect for the user ID.

REV—Shows whether the user ID is denied login (revoked). YES indicates that the user ID is revoked, NO indicates that the user ID is not revoked.

LINK —Shows whether the user has access to all commands in the Link Maintenance command class.

SA—Shows whether the user has access to all commands in the Security Administration command class.

SYS—Shows whether the user has access to all commands in the System Maintenance command class.

PU—Shows whether the user has access to all commands in the Program Update command class.

DB—Shows whether the user has access to all commands in the Database Administration command class.

DBG—Shows whether the user has access to all commands in the Debug command class.

If the Command Class Management feature is enabled, the following fields appear:

U01 - U32—Default configurable command class names. If user-defined names have been provisioned, they will appear instead of the default names.

If the LNP feature is turned on, the following fields are displayed:

LNPBAS—Shows whether the user has access to all commands in the LNP Basic command class.

LNPDDB—Shows whether the user has access to all commands in the LNP Database command class.

LNPSUB—Shows whether the user has access to all commands in the LNP Subscription command class.

rtrv-seculog

Generate Report from Security Log Contents

Use this command to retrieve the contents of a security log and display it to the user in the scroll area. Various reports can be produced by varying the values of the command parameters. By default, the report is generated from the log on the active fixed disk, although the **slog** parameter can be used to generate the report from the log on the standby fixed disk.

Keyword: rtrv-seculog

Related Commands:

Command Class: Security Administration

Parameters

:edate= (optional)

End date. Use this parameter to report log entries only if they were created on or before the specified date. If the **sdate** parameter is also specified, log entries are reported only if they were created for the date period specified by the **sdate** and **edate** combination.

Range: 000101-991231

(in the form *yymmdd*, where *yy* is year, *mm* is month, and *dd* is day)

The date must be specified with 6 digits. For example, enter 1/1/96 as **960101**.

Default: Report log entries regardless of their creation date

:etime= (optional)

End time. Use this parameter to report log entries only if they were created between midnight (00:00:00) and the time specified on this parameter. If the **stime** parameter is also specified, log entries are reported only if they were created in the time period specified by the **stime** and **etime** combination.

Range: 000000-235959

(in the form *yymmdd*, where *yy* is year, *mm* is month, and *dd* is day)

The time must be specified with 6 digits in a 24-hour format. For example, enter 1:05:03 P.M. as **130503**.

Default: Report log entries regardless of their creation time

:mode= (optional)

Use this parameter to produce a either full log report or an abbreviated log report.

Range: brief, full

brief—Causes only one line of output to be generated for each log entry reported. Some information in each reported log entry is not shown.

full—Produces a report showing multiple lines of output for each log record that is reported. This report displays more information from each log record (including the entire command) than the **mode=brief** report.

Default: brief

:num= (optional)

Maximum number of records to be displayed. This parameter specifies how many records are to be displayed before the report is terminated.

Range: 1-50, 000

Default: 500—if **mode=brief** is specified
250—if **mode=full** is not specified

:rectype= (optional)

Use this parameter to specify whether you want all records in the log to be considered for reporting or only new (that is, un-uploaded) records.

Range: new, both

new—The report generator scans only new (that is, un-uploaded) records when generating the report. Old records are not considered for reporting, even if they match the reporting criteria.

both—All records in the log are considered for reporting.

Default: new

:sdate= (optional)

Start date. Use this parameter to report log entries only if they were created on or after the specified date. If the **edate** parameter is also specified, log entries are reported only if they were created for the date period specified by the **sdate** and **edate** combination.

Range: 000101-991231

(in the form *yymmdd*, where *yy* is year, *mm* is month, and *dd* is day)

The date must be specified with 6 digits. For example, enter 1/1/96 as **960101**.

Default: Report log entries regardless of their creation date

:slog= (optional)

Source log indicator. This parameter specifies which log is to be copied to the FTA.

Range: act, stb

act—Specify **act** to produce the report from the log on the active MASP

stb—Specify **stb** to produce the report from the log on the standby MASP

Default: act

:stime= (optional)

Start time. Use this parameter to report log entries only if they were created between the time specified on this parameter and the end of the day (23:59:59) inclusive. If the **etime** parameter is also specified, log entries are reported only if they were created in the time period specified by the **stime** and **etime** combination.

Range: 000000-235959

The time must be specified with 6 digits in a 24-hour format (*hhmmss*). For example, enter 1:05:03 p.m. as **130503**.

hhmmss—*hh*=hours (**00-23**), *mm*=minutes (**00-59**), *ss*=seconds (**00-59**)

Default: Report log entries regardless of their creation time

:trm= (optional)

Terminal ID. Use this parameter to report only those log entries created by the specified terminal.

Range: 1-16

Default: Report log entries regardless of the associated terminal

:uid= (optional)

User ID. Use this parameter to report only those log entries created by the specified user ID. Specify **uid=seas** to report only those commands received on a SEAS terminal. Specify **uid=none** to report only those commands not associated with a user ID. For example, commands issued prior to login.

Range: azzzzzzzzzzzzzzzz

1 alphabetic character followed by up to 15 alphanumeric characters

Default: Display all

Example

```
rtrv-seculog:sdate=021496:edate=021596:num=7
```

```
rtrv-seculog:mode=full:sdate=021496:edate=021496:stime=062900:etime=063200
```

Dependencies

If both the **sdate** and **edate** parameters are specified, the date that is specified for the **sdate** parameter must be earlier than or equal to the date specified for the **edate** parameter.

If both the **stime** and **etime** parameters are specified, the time that is specified for the **stime** parameter must be earlier than or equal to the time specified for the **etime** parameter.

The month component of the **sdate** and **edate** parameter combination must be specified in the range **1–12**.

The day component of **sdate** and **edate** parameter combination must be specified in the range **1–31**. This value must accurately reflect the number of days in the month and year indicated. For example, **sdate=960631** is not a valid parameter value because June has only 30 days.

The second component of the **stime** and **etime** parameter combination must be specified in the range **00–59**.

The minute component of the **stime** and **etime** parameter combination must be specified in the range **00–59**.

No other security log command can be in progress when this command is entered.

Notes

To accommodate the year 2000 and beyond, the two-digit year portion of dates is interpreted to be in the indicated century as follows:

years 95–99 = 1995 through 1999

years 00–36 = 2000 through 2036

A consequence of this is that date 000101 (Jan 1, 2000) is greater than 991231 (December 31, 1999).

If the **mode=brief** parameter is specified and the output report has a plus (+) symbol appearing at the end of the command, the plus symbol indicates that more command characters are available to be displayed. Specify the **mode=full** parameter to see these additional characters.

In the **mode=full** output report, a plus (+) symbol appearing at the end of the command indicates the command is longer than 150 characters. Note that even in the uploaded log, each record in the log has room to record only 150 characters of the entered command. If the command is longer than 150 characters, then only the first 149 characters of the command and the plus symbol (to indicate that truncation has occurred) are recorded.

Security log size is limited to 50,000 records. Data from a query that exceeds the size limit of the security log cannot be displayed.

The system checks to ensure that the day portion of any **sdate/edate** value entered is in agreement with the month and year. It issues error message E2252 if the day is found to be invalid (for example, **960631** is not a valid date). The system software and date/time hardware properly handle leap years and leap centuries. The year 2000 is a leap year.

The system uses the **sdate/edate** and **stime/etime** parameters to select log records for reporting as follows:

- If the date on which the log record was created is not in the date range specified by the **sdate/edate** parameters, the record is not reported. The default **sdate** is the date of the oldest record in the log, and the default **edate** is the current date.
- If the time of day at which the log record was created is not in the time range specified by the **stime/etime** parameters, the record is not reported. The default **stime** is 00:00:00 (midnight), and the default **etime** is 23:59:59.
- Otherwise, the log record is reported, unless it is disqualified by other parameters such as **uid** or **trm**.

As an example, if the following command is entered, records are displayed for October 10, 1996 from 2:00 p.m. until 4:00 p.m., for October 11, 1996, from 2:00 p.m. until 4:00 p.m., and for October 12, 1996, from 2:00 p.m. until 4:00 p.m.

rtrv-seculog:sdate=961010:edate=961012:stime=140000:etime=160000

It takes the system approximately one minute to display 500 lines of data in the scroll area. To output a complete **mode=full** report (150,000 lines maximum) takes approximately 300 minutes. For this reason, the **num** parameter defaults to either **125 (mode=full)** or **500 (mode=brief)**, to prevent an excessively long process time, unless you deliberately choose a longer report.

This command can be canceled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

The following message appears in the scroll area if the **slog=stb** parameter is specified (either explicitly or by default) and the standby fixed disk is not available (for example, simplex mode).

Command Failed - unable to read security log

When the **rtrv-seculog** command is entered, one of the first things that the reporting function does is to examine the log overflowed and logging failure flags in the header of the specified log.

Depending on the nature of the information found, one of the following notices is displayed in the output:

Notice: Log overflow has occurred -- report may be incomplete.

Notice: Logging failure -- report may be incomplete.

Output

The following example shows how all records in the log created between 2/14/96 and 2/15/96 are to be displayed, up to a maximum of 9 records.

rtrv-seculog:sdate=960214:edate=960215:num=9

rlghncxa03w 96-02-14 06:32:20 EST EAGLE Release 34.0

Notice: Log overflow has occurred -- report may be incomplete.

Reporting parameters:

sdate = 960214

edate = 960215

num = 9

uid	trm	date	time	st	cmd
NONE	03	960214	063000	OK	login:uid=johnlamb
SEAS	15	960214	063010	OK	CHG-SLK::LSN123-03:123456:50,RCH::S+
johnlamb	03	960214	063021	OK	rept-stat-trbl
SEAS	15	960214	063032	OK	CHG-RTE::LSNABC-001001001:123456:55+
johnlamb	05	960215	064524	RJ	ent-crad:loc=1201:type=limds0:appl=+
johnlamb	05	960215	064528	OK	ent-card:loc=1201:type=limds0:appl=+
johnlamb	03	960215	063030	AB	rept-stat-card
johnlamb	03	960215	063031	OK	canc-cmd
johnlamb	05	960215	064533	OK	logout

Report terminated -- output length limitation (NUM=) reached.

9 records reported of 5613 records scanned.

END OF SECURITY LOG REPORT.

;

The following example shows that all records in the log created between 2/14/96 and 2/15/96 between the hours of 06:29:00 and 06:32:00 are to be displayed.

rtrv-

seculog:mode=full:sdate=960214:edate=960214:stime=062900:etime=063200

rlghncxa03w 96-02-14 06:32:20 EST EAGLE Release 34.0

Reporting parameters:

sdate = 960214

edate = 960214

stime = 062900

etime = 063200

uid	trm	date	time	result
NONE	05	960214	062912	E1234
Cmd: login:uid=eagle				
johnlamb	03	960214	063000	OK
Cmd: rept-stat-card				
SEAS	16	960214	063123	OK

Cmd:CHG-

SLK::LSN12345-12:123456:50,RCH::00S:::D,PRV123456-106-12,96-02-14-06-31-22;

Johnlamb 03 960214 063128 OK

Cmd:chg-lnp-lrn:lrn=1234567890:nmrgt1=255-255-255-255-dpcssn-ssn-255-yes:nmrgt2=255-255-255-255-dpcssn-ssn-255-yes:mrrgt3=255-255-255-255-dpcssn+

3 records reported of 50000 records scanned.

END OF SECURITY LOG REPORT.

;

Legend

UID—The user ID that issued the command. The value **SEAS** appears if the command was received on a SEAS port. The value **NONE** appears if no user ID was associated with the port at the time the command was logged.

TRM—The terminal ID of the terminal where the command was received.

DATE—The date when the log entry was made; that is, the date on which the command was received for execution.

TIME—The time when the log entry was made; that is, the time the command was received for execution. A 24-hour time format is used (for example, 1:00 p.m. = 130000).

ST—The two-letter shorthand notation of the command's status. The complete status can be obtained by re-entering the **rtrv-seculog** command and specifying the **mode=full** parameter. The status abbreviations are as follows:

- **AB**—Command aborted. Displayed when the **canc-cmd:trm** command is issued to abort the following commands: **rept-stat-card**, **rept-stat-dstn**, **rept-stat-ls**, **rept-stat-slk**, **rtrv-dstn**, **rtrv-gta**, **rtrv-gtt**, **rtrv-ls**, **rtrv-map**, **rtrv-rte**, **rtrv-seculog**, and **rtrv-slk**. An AB status indicates that processing and output of the command have been halted. This status is also displayed for SEAS flow-thru commands that are canceled with the **canc-cmd** (without the **trm** parameter).
- **RJ**—Command rejected. Displayed whenever the results value that would be displayed in the **mode=full** report would be one of the following:

Edddd
 FAILED
 rrrrrr/mmmmm

- **RL**—Retry later. The system is busy.
- **IP**—In Progress
- **OK**—Command successfully executed
- **TO**—Timed out.

CMD—The command that was recorded. In the **mode=brief** report, if the length of the recorded command is greater than or equal to 35 characters (as this much as can be displayed on a single line of the output report), then only the first 34 characters of the command are displayed, and the 35th character is displayed as a plus symbol (+) to indicate that more information is available in the log. Re-enter the **rtrv-seculog** command with the **mode=full** parameter to see the additional information. In the **mode=full** report, a plus symbol at the end of a command indicates that the command is longer than 150 characters.

rtrv-serial-num**Retrieve Serial Number**

Use this command to retrieve the NT serial number for the system.

Keyword: **rtrv-serial-num**

Related Commands: **ent-serial-num**

Command Class: Database Administration

Parameters

This command has no parameters.

Example

rtrv-serial-num

Dependencies

None

Notes

None

Output

Dashes appear if the serial number has not yet been entered into the database.

rtrv-serial-num

```
rlghncxa03w 03-03-29 16:40:40 EST EAGLE 31.3.0
System serial number = nt00001231
```

System serial number is locked.

```
rlghncxa03w 03-03-29 16:40:40 EST EAGLE 31.3.0
Command Completed
```

;

rtrv-sg-opts**Retrieve IP7 Secure Gateway Options**

Use this command to retrieve information about the currently chosen IP⁷ Secure Gateway protocol options.

Keyword: **rtrv-sg-opts**

Related Commands: **chg-sg-opts, rtrv-appl-rtkey**

Command Class: Database Administration

Parameters

This command has no parameters.

Example

rtrv-sg-opts

Dependencies

None

Notes

None

Output**rtrv-sg-opts**

```

rlghncxa03w 03-07-07 09:50:17 EST EAGLE 31.6.0
SYNC:          TALI
SRKQ:          250
DRKQ:          750
SNMPCONT:      john doe 555-123-4567
GETCOMM:       public
SETCOMM:       private
TRAPCOMM:      public
INHFEPALM:     YES
SCTPCSUM:      adler32
IPGWABATE:     NO
IPLIMABATE:    NO
IPTPSALMTHRESH: 100%
;

```

Legend

SYNC—The synchronization opcode used for messages sent by SS7IPGW cards (TALI or SASSI).

SRKQ—The static routing key quantity. The maximum number of routing key entries in the Static Routing Key table.

DRKQ—The dynamic routing key quantity. The maximum number of routing key entries in the Dynamic Routing Key table of each SS7IPGW card.

SNMPCONT—The system contact information for each DCM and SSED CM SNMP agent.

GETCOMM—The community name used for SNMP Get and GetNext request validations. This value applies for each DCM and SSED CM SNMP agent in the system.

SETCOMM—The community name used for SNMP Set request validation. This value applies for each DCM and SSED CM SNMP agent in the system.

TRAPCOMM—The community name to use when SNMP traps are generated. This value applies for each DCM and SSED CM SNMP agent in the system.

SCTPCSUM—SCTP checksum algorithm type (adler32 or crc32c).

IPGWABATE—Enabled (YES) or disabled (NO) IPGWx SS7 congestion abatement procedures.

IPLIMABATE—Enabled (YES) or disabled (NO) IPLIMx SS7 congestion abatement procedures.

IPTPSALMTHRESH—Alarm threshold percent at which system IPTPS alarms are generated. Can be set below 100 percent if "early warning" is desired.

rtrv-shlf**Retrieve Shelf**

Use this command to display the frames and shelves that are currently provisioned in the system. The type of shelf is also shown.

Keyword: **rtrv-shlf**

Related Commands: **dlt-shlf**, **ent-shlf**

Command Class: Database Administration

Parameters

:loc= (optional)

The shelf location.

Range: **1100, 1200, 1300, 2100, 2200, 2300, 3100, 3200, 3300, 4100, 4200, 4300, 5100, 5200, 5300, 6100**

Default: Display all configured locations

Example

rtrv-shlf

rtrv-shlf:loc=1300

rtrv-shlf:loc=2100

Dependencies

The frame and shelf values of the shelf location parameter (**loc**) must be within the valid range (xyzz, where x=frame and y=shelf; zz is always 00 for this command).

Notes

None

Output

The following example displays all configured STP equipment shelves.

rtrv-shlf

```
rlghncxa03w 04-01-07 09:50:17 EST EAGLE 31.3.0
SHELF DISPLAY
FRAME SHELF      TYPE
  1      1      CONTROL
  1      2      EXTENSION
  1      3      EXTENSION
  2      3      EXTENSION
```

;

The following example displays a specific STP equipment shelf.

rtrv-shlf: loc=1300

```
rlghncxa03w 04-01-07 09:50:17 EST EAGLE 31.3.0
SHELF DISPLAY LOCATION=1300
FRAME SHELF      TYPE
  1      3      EXTENSION
CARD   TYPE      APPL   LSET NAME   PORT SLC LSET NAME   PORT SLC
1301   LIMDS0    SS7ANSI  -----   --  --  -----   --  --
1302   LIMDS0    SS7ANSI  -----   --  --  -----   --  --
1303   LIMDS0    SS7ANSI  -----   --  --  -----   --  --
1304   LIMDS0    SS7ANSI  -----   --  --  -----   --  --
1305   LIMDS0    SS7ANSI  -----   --  --  -----   --  --
```

;

The following example displays a specific STP equipment shelf that is not configured (unequipped).

rtrv-shlf: loc=2100

```
rlghncxa03w 04-01-07 09:50:17 EST EAGLE 31.3.0
SHELF DISPLAY LOCATION=2100
FRAME SHELF      TYPE
```

This shelf is UNEQUIPPED in the database.

;

Legend

FRAME—The frame location of the shelf.

SHELF—The location of the shelf within the frame.

TYPE—The type of shelf.

CARD—Card location in the specified shelf.

TYPE—Card type

APPL—Application running on the card.

LSET NAME—Linkset name defined for the port on the card.

PORT—Port used by the linkset defined on the card.

SLC—Signaling link code for the linkset.

rtrv-sid**Retrieve Self Identification**

Use this command to retrieve site identification characteristics of the system. It shows the point code assigned to this system, the CLLI code of the system, the capability code of the STP, and the type of point codes supported by the system.

Keyword: rtrv-sid

Related Commands: chg-sid, ent-sid

Command Class: Security Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:cpc= (optional)

ANSI capability point code in the form of *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: cpca

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001–005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006–255.

The point code 000-000-000 is not a valid point code.

Default: Display all

:cpc/cpca/cpci/cpcn/cpcn24= (optional)

Capability point code. The code used by the SS7 protocol to identify a group of functionally related STPs in the signaling network to which the STP belongs.

:cpci= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

Default: Display all

:cpcn= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: s-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

Default: Display all

:cpcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

Default: Display all

:cpctype= (optional)

Capability point code type. Specify whether the CPC is for the STP or for LNP, INP, EIR, G-Port, or G-Flex.

Range: **stp, lnp, inp, eir, gport, gflex**

Default: **stp**

Example

```
rtrv-sid
```

```
rtrv-sid:cpcn=002-002-007
```

```
rtrv-sid:cpc=3-3-3
```

```
rtrv-sid:cpcn=001-001-001
```

```
rtrv-sid:cpctype=inp
```

```
rtrv-sid:cpci=2-100-4
```

```
rtrv-sid:cpcn24=33-33-33
```

```
rtrv-sid:cpcn=s-00456
```

Dependencies

The STP destination point codes and capability point codes can be specified only as full point codes.

The ANSI point code **0-0-0** and the ITU-I point code **0-000-0** are invalid for STP capability point codes.

If **cpctype** is **lnp**, the LNP feature must be turned on (see the **enable-ctrl-feat** command).

If **cpctype** is **inp**, the INP feature must be turned on.

If **cpctype** is **eir**, the Equipment Identity Register (EIR) feature must be enabled.

The Spare Point Code Support feature must be enabled before an ITU-I or ITU-N spare point code can be retrieved.

If the **cpcn** parameter is specified, the format of the specified point code must match the format that was assigned with the **chg-stpopts** command **npcfmti** parameter.

Notes

If the **cpc/cpca/cpci/cpcn/cpcn24** parameter is not specified, all site identification characteristics are displayed.

If the STP capability point code is specified and not provisioned, the report contains only the PCA, PCI, PCN or PCN24, CLLI, and PCTYPE fields, with the message:

Compatibility Point Code specified is not provisioned.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-).

Output

In the following output examples:

- When a 24-bit ITU-N site identification STP point code is configured, the PCN header is changed to PCN24.
- The **s-** point code prefix indicates an ITU national or international spare point code or spare capability point code.
- INP, LNP, and EIR capability point codes are indicated in parentheses after the capability point code header. STP capability point codes have no parentheses after the header.

The **rtrv-sid** command CPC output is sorted using three sort keys.

- The first sort key is by the **cpctype** service, ordered by: **stp** (own STP; unlabeled, **inp**, **eir**, **g flex**, then **gport**.
- The second sort key is by network type, ordered by: ANSI, ITU-I, ITU-N, then ITU-N24.
- The third sort key is by point code value, ordered low to high.

In the following output examples:

- When a 24-bit ITU-N site identification STP point code is configured, the PCN header is changed to PCN24.
- The **s-** point code prefix indicates an ITU national or international spare point code or spare capability point code.
- INP, LNP, EIR, G-Flex, and G-Port capability point codes are indicated in parentheses after the capability point code header.
- STP capability point codes have no parentheses after the header.

The examples show all site identification characteristics provisioned in the system at the time the command was entered.

The following example includes a 24-bit ITU-N site ID and a 24-bit ITU-N capability point code.

rtrv-sid

```
tekelecstp 04-06-14 15:18:11 EST EAGLE 31.12.0
  PCA          PCI          PCN24          CLLI          PCTYPE
  001-001-001  - - - - -  011-011-011  tekelecstp  ANSI

  CPCN24
  022-022-022
;
```

The following example shows all site identification characteristics provisioned in the system at the time the command was entered. The output includes spare point codes.

rtrv-sid

```
tekelecstp 04-06-14 15:18:11 EST EAGLE 31.12.0
  PCA          PCI          PCN          CLLI          PCTYPE
  005-067-000  1-023-4      01234          tekelecstp  ANSI
                   s-1-023-4      s-01234

  CPCI
  s-4-056-0

  CPCN
  s-00456
```

;

The following example shows a display of a particular STP capability point code.

rtrv-sid:cpc=5-5-4

```
rlghncxa03w 03-03-18 09:33:58 EST EAGLE 31.3.0
PCA          PCI          PCN          CLLI          PCTYPE
008-013-008  -----  -----  tklcstn14      OTHER

CPCA
005-005-004
```

;

The following example shows a particular LNP capability point code.

rtrv-sid:cpc=3-3-3

```
rlghncxa03w 03-03-10 09:33:58 EST EAGLE 31.3.0
PCA          PCI          PCN          CLLI          PCTYPE
008-013-008  -----  -----  tklcstn14      OTHER

CPCA (LNP)
003-003-003
```

;

The following example shows the message that appears when no match for the specified capability point code is found in the Site ID table.

rtrv-sid:cpc=100-100-100

```
rlghncxa03w 03-03-18 09:33:58 EST EAGLE 31.3.0
PCA          PCI          PCN          CLLI          PCTYPE
008-013-008  -----  -----  tklcstn14      OTHER
```

Capability Point Code specified is not provisioned.

;

The following example shows a display of a site identification STP point code with a group code (the ITUDUPPC feature must be on).

rtrv-sid

```
rlghncxa03w 03-03-18 09:33:58 EST EAGLE 31.3.0
PCA          PCI          PCN          CLLI          PCTYPE
008-013-008  -----  128-15-1-1-si tklcstn14      OTHER
```

;

The following example shows all provisioned INP capability point codes.

rtrv-sid:cpctype=inp

```
rlghncxa03w 03-03-18 09:33:58 EST EAGLE 31.3.0
PCA          PCI          PCN          CLLI          PCTYPE
-----  2-150-4      12345      tklcstn14      OTHER

CPCN (INP)
1234 34567

CPCI (INP)
3-050-2      4-100-3
```

;

The following example shows a specific INP capability point code.

rtrv-sid:cpci=2-100-4

```
rlghncxa03w 03-03-18 09:33:58 EST EAGLE 31.3.0
PCA          PCI          PCN          CLLI          PCTYPE
```

```

-----      1-200-3      -----      tklcstn14      OTHER

```

```

CPCI (INP)
2-100-4

```

```

;

```

The following example shows a specific 24-bit ITU-N capability point code.

rtrv-sid:cpcn24=33-33-33

```

rlghncxa03w 02-03-18 09:33:58 EST EAGLE 31.0.0
PCA          PCI          PCN24          CLLI          PCTYPE
001-001-001  -----      011-011-011      tekelecstp      ANSI

CPCN24
033-033-033

```

```

;

```

The following example shows all capability point codes with **cpctype=eir**.

rtrv-sid:cpctype=eir

```

rlghncxa03w 03-03-18 09:33:58 EST EAGLE 31.0.0
PCA          PCI          PCN24          CLLI          PCTYPE
001-001-001  2-020-1          PCN24          tekelecstp      ANSI

CPCI (EIR)
2-020-2

CPCN (EIR)
123

```

```

;

```

The following example contains capability point codes provisioned with **cpctype=gflex** and **cpctype=gport**.

rtrv-sid

```

tekelecstp 06-01-09 15:46:50 EST EAGLE 34.3.0
PCA          PCI          PCN          CLLI          PCTYPE
001-001-001  2-002-2          00333          tekelecstp      ANSI

CPCI (GFLEX)
2-002-3          2-002-4

CPCA (GPORT)
001-001-002          001-001-003

```

```

;

```

The following example displays point code output when the **cpctype=gflex** parameter is specified.

rtrv-sid:cpctype=gflex

```

tekelecstp 06-01-09 15:48:58 EST 34.3.0
PCA          PCI          PCN          CLLI          PCTYPE
001-001-001  2-002-2          00333          tekelecstp      ANSI

```

```

;

```

The following example displays point code output when the **cpctype=gport** parameter is specified.

rtrv-sid:cpctype=gport

```

tekelecstp 06-01-09 15:49:35 EST EAGLE 34.3.0
PCA          PCI          PCN          CLLI          PCTYPE
001-001-001  2-002-2          00333          tekelecstp      ANSI

```

```

;

```


rtrv-sid

```

tekelecstp 04-06-14 15:18:11 EST EAGLE 31.12.0
PCA          PCI          PCN          CLLI          PCTYPE
008-013-008  -----          -----          tklcstn14      OTHER

CPCA
005-005-002          005-005-004          005-005-005

CPCA (LNP)
005-005-002          005-005-004          005-005-005

```

;

The following example shows an EIR capability point code. The output includes spare point codes.

rtrv-sid:cpctype=eir

```

rlghncxa03w 05-01-07 09:33:58 EST EAGLE 31.12.0
PCA          PCI          PCN          CLLI          PCTYPE
005-067-000  1-023-4          01234          tekelecstp      ANSI
              s-1-023-4          s-01234

CPCI (EIR)
s-1-024-5

CPCN (EIR)
12346

```

;

The following example retrieves a specific spare ITU-N capability point code.

rtrv-sid:cpcn=s-00456

```

rlghncxa03w 05-01-07-18 09:33:58 EST EAGLE 31.12.0
PCA          PCI          PCN          CLLI          PCTYPE
005-067-000  1-023-4          01234          tekelecstp      ANSI
              s-1-023-4          s-01234

CPCN
s-00456

CPCN (EIR)
s-123

```

;

The following example retrieves all capability point codes with **cpctype=eir**, and contains spare point codes.

rtrv-sid:cpctype=eir

```

rlghncxa03w 05-01-07 09:33:58 EST EAGLE 31.12.0
PCA          PCI          PCN          CLLI          PCTYPE
005-067-000  1-023-4          01234          tekelecstp      ANSI
              s-1-023-4          s-01234

CPCI (EIR)
s-1-024-5

CPCN (EIR)
12346

```

;

Legend

PCA—The ANSI point code of the STP.

PCI—The ITU-TSS international point code of the STP.

PCN—The ITU-TSS national point code of the STP.

PCN24—The 24-bit ITU national point code of the STP.

CPCA—The ANSI capability point code used by the SS7 protocol to identify a group of functionally related STPs in the signaling network.

CPCN—The ITU-TSS national capability point code used by the SS7 protocol to identify a group of functionally related STPs in the signaling network.

CPCI—The ITU-TSS international capability point code used by the SS7 protocol to identify a group of functionally related STPs in the signaling network.

CPCN24—The ITU-TSS 24-bit national capability point code used by the SS7 protocol to identify a group of functionally related STPs in the signaling network.

(EIR)—The identified point code is an Equipment Identity Register (EIR) point code.

(INP)—The identified point code is an INAP Number Portability (INP) point code.

(LNP)—The identified point code is a local number portability (LNP) point code.

(GFLEX)—The identified point code is a G-Flex (GFLEX) point code.

(GPORT)—The identified point code is a G-Port (GPORT) point code.

CLLI—The common language location identifier of the STP

PCTYPE—The type of point code used by the STP. There are two types of point codes that the EAGLE 5 ISS STP can use, ANSI and OTHER. The value ANSI means the EAGLE 5 ISS STP supports point codes that meet the ANSI standard. The value OTHER means that the EAGLE 5 ISS STP supports point codes that do not meet the ANSI standard.

rtrv-slk

Retrieve Signaling Link

Use this command to show the parameters for low-speed signaling links, ATM high-speed signaling links, or both.

Keyword: rtrv-slk

Related Commands: act-slk, blk-slk, dact-slk, dlt-slk, ent-slk, inh-slk, rept-stat-slk, tst-slk, ublk-slk, unhb-slk

Command Class: Database Administration

Parameters

:class= (optional)

The class of links to be displayed.

Range: mtp2, saal, e1, t1

mtp2—Displays low-speed signaling link information only.

saal—Displays ATM high-speed signaling link information only.

e1—Displays signaling link information only for 2-port E1 cards, and E1/T1 cards and HC-MIM cards used as E1 cards or as SE-HSL cards.

t1—Displays signaling link information only for E1/T1 MIM cards and HC-MIM cards used as T1 cards.

Default: Display all signaling links

:link= (optional)

The signaling link on the card specified in the **loc** parameter. The links can be specified in any sequence or pattern.

Synonym: port

Range: a, b, a1-a31, b1-b31

Not all card types support all **link** parameter values.

See Table A-1 for valid **link** parameter range values for each type of card that can have assigned signaling links.

Default: Display all

:loc= (optional)

The card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Default: All signaling links are shown.

Example

```
rtrv-slk
rtrv-slk:loc=1202:link=a
rtrv-slk:class=saa1
rtrv-slk:loc=1302:link=a
rtrv-slk:class=e1
rtrv-slk:loc=1302:link=b2
rtrv-slk:class=mtp2
rtrv-slk:class=t1
rtrv-slk:loc=1303:link=a31
```

Dependencies

If the **link** parameter is specified, the **loc** parameter must be specified. The **loc** parameter can be specified without the **link** parameter.

The **loc** parameter or the **class** parameter, but not both, can be specified in the command.

The slot portion of the specified **loc** parameter must be **01** through **18**, except **09** and **10** cannot be specified (**loc= xyss**, where *x* is the frame, *y* is the shelf, and *ss* is the slot).

Card locations **1113** through **1118** cannot be specified for the **loc** parameter.

The frame and shelf portion of the specified **loc** parameter must be **11**, **12**, **13**, **21**, **22**, **23**, **31**, **32**, **33**, **41**, **42**, **43**, **51**, **52**, **53**, or **61** (**loc= xyss**, where *x* is the frame, *y* is the shelf, and *ss* is the slot).

The **limatm**, **lime1atm**, **limds0**, **limocu**, **limv35**, **lime1**, **limt1**, **limch**, and **dcm** card types are the only valid card types for this command.

The card must be a LIM, an E1/T1 MIM, or an HC-MIM.

The specified card location must be equipped.

The following **link** parameter values can be specified for the following cards that support more than 2 links per card:

- **a1-a3, b1-b3**—Multi-port LIM (MPL, MPL-T), SSEDCCM card running the **iplim** or **iplimi** application with links having **ipliml2=m2pa** or **ipliml2=saaltali**, E1/T1 MIM card
- **a1-a31, b1-b31**—HC-MIM card
- **a1-a15, b1-b15**—E5-E1T1 card
- **a1-a7, b1-b7**—E5-ENET card running the **iplim** or **iplimi** application that supports 16 links

The **link** parameter values **a4-a31** and **b4-b31** can be specified only for the HC-MIM card that is used as an E1 card or a T1 card. The **link** parameter values **a4-a31** and **b4-b31** cannot be specified for Channel cards.

The **link** parameter values **a4-a31** and **b4-b31** cannot be specified for even-numbered card locations.

If the card application is **ss7gx25**, **link=a** must be specified.

If the card application is **atmansi** or **atmitu**, **link=a** must be specified.

Notes

This command can be canceled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

Not every card location represents a signaling link. Be sure to address a signaling link in this command.

The *Installation Manual – EAGLE 5 ISS* provides an illustration of the card locations.

Output

rtrv-slks

```

tekelecstp 05-04-21 08:40:18 EST EAGLE5 33.0.0

LOC LINK LSN SLC TYPE SET BPS MODE TSET ECM N1 N2
1201 A lsn1201a 0 LIMDS0 1 56000 --- --- BASIC --- -----
1201 B lsn1201b 1 LIMDS0 1 56000 --- --- BASIC --- -----

LOC LINK LSN SLC TYPE SET BPS TSEL VCI VPI LL
1302 A atm1302a 5 LIMATM 3 1544000 EXTERNAL 35 15 0
1305 A atm1305a 5 LIMATM 5 1544000 LINE 5 0 0
1306 A lsetC 0 LIMATM 5 1544000 LINE 5 0 0

LOC LINK LSN SLC TYPE SET BPS TSEL VCI VPI E1ATM CRC4 SI
SN 1101 A LS1 0 LIME1ATM 21 2.048M LINE 5 0 ON 3 0
    1102 A LS1 1 LIME1ATM 23 2.048M EXTERNAL 65535 4095 OFF 3
31

LOC LINK LSN SLC TYPE SET BPS ECM PCR N1 N2 LOC PORT TS
1307 A e11307a 0 LIME1 1 64000 PCR 76 3800 1307 2 12
1311 A e11311a 0 LIME1 1 56000 BASIC --- ----- 1311 1 1
1311 B e11311b 0 LIME1 1 56000 BASIC --- ----- 1311 1 2

LOC LINK LSN SLC TYPE SET BPS ECM PCR N1 N2 LOC PORT TS
1308 A t11308a 0 LIMT1 1 56000 PCR 76 3800 1307 2 12
1312 A t11312a 1 LIMT1 1 56000 BASIC --- ----- 1311 1 1
1312 B t11312b 0 LIMT1 1 56000 BASIC --- ----- 1311 1 2

```

SLK table is (13 of 1200) 1% full

;

The following example shows output for a specific card location, which contains an SSEDCEM with 8 IPLIM links.

rtrv-slks: loc=1307

```

tekelecstp 05-04-21 08:40:18 EST EAGLE5 33.0.0
LOC LINK LSN SLC TYPE IPLIML2
1307 A lsetC 0 IPLIM SAALTALI
1307 B lsetC 1 IPLIM SAALTALI
1307 A1 lsetC 2 IPLIM SAALTALI
1307 B1 lsetC 3 IPLIM SAALTALI
1307 A2 lsetC 4 IPLIM SAALTALI
1307 B2 lsetC 5 IPLIM SAALTALI
1307 A3 lsetC 6 IPLIM SAALTALI
1307 B3 lsetC 7 IPLIM SAALTALI

```

;

The following example shows output for a specific card location, which contains an SSEDCEM with 4 SAALTALI IPLIM links and 4 M2PA IPLIM links.

rtrv-slks: loc=1307

```

tekelecstp 05-04-21 08:40:18 EST EAGLE5 33.0.0
LOC LINK LSN SLC TYPE IPLIML2
1307 A lsetC 0 IPLIM SAALTALI
1307 B lsetC 1 IPLIM SAALTALI
1307 A1 lsetC 2 IPLIM SAALTALI
1307 B1 lsetC 3 IPLIM SAALTALI
1307 A2 lsetC 4 IPLIM M2PA

```

```

1307 B2 lsetC      5 IPLIM M2PA
1307 A3 lsetC      6 IPLIM M2PA
1307 B3 lsetC      7 IPLIM M2PA

```

;

The following example includes signaling links assigned to an HC-MIM card used as an E1 card.

rtrv-slk:loc=1311

```

tekelecstp 05-04-08 16:22:25 EST EAGLE5 33.0.0
      L2T      PCR PCR  E1  E1
LOC  LINK LSN      SLC TYPE SET  BPS  ECM  N1  N2  LOC  PORT TS
1311 A  e11311a  0  LIME1  1  56000 BASIC --- 1311 1  1
1311 B  e11311b  0  LIME1  1  56000 BASIC --- 1311 1  2
1311 A1 e11311a  1  LIME1  1  56000 BASIC --- 1311 1  3
1311 B1 e11311b  1  LIME1  1  56000 BASIC --- 1311 2  4
1311 A2 e11311a  2  LIME1  1  56000 BASIC --- 1311 2  5
1311 B2 e11311b  3  LIME1  1  56000 BASIC --- 1311 3  6
1311 B3 e11311b  2  LIME1  1  56000 BASIC --- 1311 3  7
1311 A4 e11311b  4  LIME1  1  56000 BASIC --- 1311 4  14
1311 B6 e11311a  3  LIME1  1  56000 BASIC --- 1311 5  13
1311 A11 e11311b  5  LIME1  1  56000 BASIC --- 1311 5  12
1311 B17 e11311a  4  LIME1  1  56000 BASIC --- 1311 6  11
1311 A29 e11311b  6  LIME1  1  56000 BASIC --- 1311 7  10
1311 B31 e11311a  5  LIME1  1  56000 BASIC --- 1311 8  9

```

;

The following example includes signaling links assigned to an HC-MIM card used as a T1 card.

rtrv-slk:loc=1307

```

tekelecstp 05-04-08 16:22:25 EST EAGLE5 33.0.0
      L2T      PCR PCR  T1  T1
LOC  LINK LSN      SLC TYPE SET  BPS  ECM  N1  N2  LOC  PORT TS
1307 A  t11307  0  LIMT1  1  56000 BASIC --- 1307 2  12
1307 B  t11307  1  LIMT1  1  56000 BASIC --- 1307 1  1
1307 B1 t11307  2  LIMT1  1  56000 BASIC --- 1307 1  2
1307 A2 t11307  3  LIMT1  1  56000 BASIC --- 1307 1  3
1307 B3 t11307  4  LIMT1  1  56000 BASIC --- 1307 1  4
1307 A5 t11307  5  LIMT1  1  56000 BASIC --- 1307 1  5
1307 B8 t11307  6  LIMT1  1  56000 BASIC --- 1307 1  6
1307 B11 t11307  7  LIMT1  1  56000 BASIC --- 1307 1  7
1307 A21 t11307  8  LIMT1  1  56000 BASIC --- 1307 3  16
1307 B24 t11307  9  LIMT1  1  56000 BASIC --- 1307 4  17
1307 A25 t11307  10 LIMT1  1  56000 BASIC --- 1307 6  18
1307 B25 t11307  11 LIMT1  1  56000 BASIC --- 1307 6  19
1307 A27 t11307  12 LIMT1  1  56000 BASIC --- 1307 7  20
1307 B29 t11307  13 LIMT1  1  56000 BASIC --- 1307 8  21
1307 A31 t11307  14 LIMT1  1  56000 BASIC --- 1307 2  22
1307 B31 t11307  15 LIMT1  1  56000 BASIC --- 1307 1  23

```

;

The following example shows the signaling link **a31** assigned to an HC-MIM card used as a T1 card.

rtrv-slk:loc=1307:link=a31

```

tekelecstp 05-04-08 16:22:25 EST EAGLE5 33.0.0
      L2T      PCR PCR  T1  T1
LOC  LINK LSN      SLC TYPE SET  BPS  ECM  N1  N2  LOC  PORT TS
1307 A31 t11307  14 LIMT1  1  64000 BASIC --- 1307 2  22

```

;

The following example includes E1 signaling links assigned to HC-MIM cards. The link with BPS value 1984000 is an SE-HSL link.

rtrv-slkl

tekelecstp 05-04-08 16:22:25 EST EAGLE5 34.0.0

LOC	LINK	LSN	SLC	TYPE	L2T SET	BPS	L1 MODE	TSET	ECM	PCR N1	PCR N2

No Links Set up.

LOC	LINK	LSN	SLC	TYPE	LP SET	BPS	ATM TSEL	VCI	VPI	LL

No Links Set up.

LOC	LINK	LSN	SLC	TYPE	LP SET	BPS	ATM TSEL	VCI	VPI	E1ATM CRC4 SI SN

No Links Set up.

LOC	LINK	LSN	SLC	TYPE	IPLIML2

No Links Set up.

LOC	LINK	LSN	SLC	TYPE

No Links Set up.

LOC	LINK	LSN	SLC	TYPE	L2T SET	BPS	ECM	PCR N1	PCR N2	E1 LOC	E1 PORT	TS
1101	B	e1ls	0	LIME1	11	56000	BASIC	---	-----	1101	2	1
1102	A	e2ls	0	LIME1	21	1984000	BASIC	---	-----	1102	1	--

No Links Set up.

LOC	LINK	LSN	SLC	TYPE	L2T SET	BPS	ECM	PCR N1	PCR N2	T1 LOC	T1 PORT	TS

No Links Set up.

SLK table is (2 of 1200) 0% full.

;

The following example includes E1 signaling links assigned to HC-MIM cards. The link with BPS value 1984000 is an SE-HSL link.

rtrv-slkl: class=e1

tekelecstp 05-04-08 16:22:25 EST EAGLE5 34.0.0

LOC	PORT	LSN	SLC	TYPE	L2T SET	BPS	ECM	PCR N1	PCR N2	E1 LOC	E1 PORT	TS
1101	B	e1ls	0	LIME1	11	56000	BASIC	---	-----	1101	2	1
1102	A	e2ls	0	LIME1	21	1984000	BASIC	---	-----	1102	1	--

;

The following example shows the link information for an E5-ENET card.

rtrv-slkl: loc=1303

eagle10110 06-04-05 08:37:15 EST EAGLE 35.0.0

LOC	LINK	LSN	SLC	TYPE	IPLIML2
1303	A	e5e6	2	IPLIM	M2PA
1303	B	e5e6	6	IPLIM	M2PA

1303	A1	e5e6	1	IPLIM	M2PA
1303	B1	e5e6	9	IPLIM	M2PA
1303	B2	e5e6	10	IPLIM	M2PA
1303	A3	e5e6	3	IPLIM	M2PA
1303	B3	e5e6	11	IPLIM	M2PA
1303	A4	e5e6	4	IPLIM	M2PA
1303	B4	e5e6	12	IPLIM	M2PA
1303	A5	e5e6	5	IPLIM	M2PA
1303	B5	e5e6	13	IPLIM	M2PA
1303	B6	e5e6	14	IPLIM	M2PA
1303	A7	e5e6	7	IPLIM	M2PA
1303	B7	e5e6	15	IPLIM	M2PA

;

Command Executed

Legend**LOC**—The location of the card containing the signaling link.**LINK**—The signaling link assigned to the card.**LSN**—The name of the linkset containing the signaling link.**SLC**—The signaling link code of the signaling link.**TYPE**—The type of card.**L2TSET**—The number of the level 2 timer set associated with the signaling link.**BPS**—The transmission rate of the signaling link in bits per second.**L1MODE**—The mode of operation used to select the link clocking source at layer 1.**TSET**—An indicator of whether the transmitter signal element timing is on or off.**ECM**—The basic of PC for transmission.**PCRN1**—The MSU number.**PCRN2**—The octet number.**LPSET**—The ATM link parameter set identifier.**ATMTSEL**—The ATM timing selector. Possible values are as follows:**INTERNAL**—Derived from an internal clock source operating at 1.544 MHz $\pm$ 200 Hz (ANSI) or 2.048 MHz $\pm$ 103 Hz (ITU).**EXTERNAL**—Derived from the High-Speed Master Clock (T1 or E1).**LINE**—Derived from its received data stream, if present.**VCI**—The ATM virtual channel identifier.**VPI**—The ATM virtual path identifier.**LL**—The ATM line length.**E1PORT**—The E1 card port that has an E1 interface assigned to it.**E1LOC**—The card location of an E1 card with an E1 interface assigned to it.**T1PORT**—The T1 card port that has a T1 interface assigned to it.**T1LOC**—The card location of a T1 card with a T1 interface assigned to it.**TS**—The timeslot associated with the signaling link that is serviced by the E1 or T1 interface.**E1ATMCRC4**—E1 ATM card CRC4 multi-frame structure enable/disable indicator.**E1ATMSI**—Value of two Spare International bits of NFAS data for the E1 ATM card.**E1ATMSN**—Value of five Spare National bits of NFAS data for the E1 ATM card.

IPLIML2—IPLIM Level 2 stack (SAALTALI , M2PA, or M3UA)

rtrv-slt

Retrieve Signaling Link Test Message

Use this command to display the fields of an SLTM (signaling link test message) record in the SLTM table.

Keyword: rtrv-slt

Related Commands: chg-l3t, chg-slt, ent-ls, rtrv-ls

Command Class: Database Administration

Parameters

:enabled= (optional)

Displays the SLTM records that are either enabled (**on**) or disabled (**off**).

Range: on, off

Default: All SLTM records with the specified value for the enabled parameter are shown.

:sltset= (optional)

The signaling link test message (SLTM) record number in the SLTM table.

Range: 1-20

Default: Display all

Example

rtrv-slt

rtrv-slt:sltset=1

rtrv-slt:enabled=off

Dependencies

None

Notes

None

Output

rtrv-slt

```

rlghncxa03w 03-03-07 00:21:24 EST  EAGLE 31.3.0
SLTM PARAMETERS
SLTSET  T1    T2    MODE    ENABLED  PATTERN
1        9.0  60.0  SPECIAL  ON       AA2233445566778899AABBCCDDEEFF
2       12.0  30.0  SPECIAL  OFF      F01234BCDE
3        4.0  50.0  REGULAR  ON       CC2233445566778899AABBCCDDEEFF
4        6.0  90.0  SPECIAL  OFF      BB23446789BCABEFG
5        6.0  90.0  SPECIAL  OFF      BB23446789BCABEFG
6        6.0  90.0  SPECIAL  OFF      BB23446789BCABEFG
7        6.0  90.0  SPECIAL  OFF      BB23446789BCABEFG
8        6.0  90.0  SPECIAL  OFF      BB23446789BCABEFG
9        6.0  90.0  REGULAR  OFF      BB23446789BCABEFG
10       6.0  90.0  REGULAR  OFF      BB23446789BCABEFG
11       6.0  90.0  REGULAR  OFF      BB23446789BCABEFG
12       4.0  50.0  SPECIAL  ON       FFEEDDCCBBAA998877665544332211
13       4.0  50.0  SPECIAL  ON       EE22334455
14       6.0  90.0  SPECIAL  ON       AABBCCDD
15       6.0  90.0  REGULAR  ON       AABBCCDD
16       6.0  90.0  REGULAR  ON       AABBCCDD
17       6.0  90.0  REGULAR  ON       AABBCCDD
18       6.0  90.0  SPECIAL  ON       AABBCCDD
19       6.0  90.0  SPECIAL  ON       AABBCCDD
20       6.0  90.0  SPECIAL  ON       AABBCCDD

```

;

rtrv-slt:sltset=1

```

rlghncxa03w 03-03-07 00:21:24 EST  EAGLE 31.3.0
SLTM PARAMETERS
SLTSET  T1    T2    MODE    ENABLED  PATTERN
1        9.0  60.0  SPECIAL  ON       112233445566778899AABBCCDDEEFF

```

;

rtrv-slt:enabled=off

```

rlghncxa03w 03-03-07 00:21:24 EST  EAGLE 31.3.0
SLTM PARAMETERS
SLTSET  T1    T2    MODE    ENABLED  PATTERN
2       12.0  30.0  SPECIAL  OFF      F01234BCDE
4        6.0  90.0  SPECIAL  OFF      0123446789BCABEFG
5        6.0  90.0  SPECIAL  OFF      0123446789BCABEFG
6        6.0  90.0  SPECIAL  OFF      0123446789BCABEFG
7        6.0  90.0  SPECIAL  OFF      0123446789BCABEFG
8        6.0  90.0  SPECIAL  OFF      0123446789BCABEFG
9        6.0  90.0  REGULAR  OFF      0123446789BCABEFG
10       6.0  90.0  REGULAR  OFF      0123446789BCABEFG
11       6.0  90.0  REGULAR  OFF      0123446789BCABEFG

```

;

Legend

SLTSET—The signaling link test message record number in the SLTM table.

T1—The T1 timer value for the SLTM record.

T2—The T2 timer value for the SLTM record.

MODE—The SLTM mode to be used when sending test messages.

ENABLED—Indicates whether the signaling link test message is enabled.

PATTERN—The test pattern to be sent with a signaling link test message.

rtrv-spc**Retrieve Secondary Point Code**

Use this command to retrieve an SPC (secondary point code) from the active database.

Keyword: **rtrv-spc**

Related Commands: **dlt-spc**, **ent-spc**

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:spc= (optional)

ANSI point code in the form of *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: **spca**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:spc/spca/spci/spcn/spcn24= (optional)

The secondary point code.

:spci= (optional)

ITU international secondary point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:spcn= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:spcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

Example

rtrv-spc

rtrv-spc:spc=5-3-3

rtrv-spc:spcn24=98-98-98

rtrv-spc:spcn=s-00345

Dependencies

The MPC feature must be turned on before this command can be entered.

The Spare Point Code Support feature must be enabled before a spare point code (prefix **s-**) can be specified in the command.

Notes

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (**s-**).

Output

The following example shows the output for all provisioned secondary point codes. (SPC-N is a flexible point code format as defined with the **chg-stpopts:npcfmt** parameter).

rtrv-spc

```
rlghncxa03w 03-03-18 08:50:12 EST EAGLE 31.0.0
```

```
SPC (Secondary Point Codes)
```

```
SPCA
```

```
001-010-010
```

```
002-010-010
```

```
003-010-010
```

```
SPC-I
```

```
01-253-05
```

```
02-254-06
```

```
03-255-07
```

```
SPC-N
```

```
120-01-0-1
```

```
100-02-1-0
```

```
SPC-N24
```

```
099-099-099
```

```
Secondary Point Code table is (9 of 40) 25% full
```

```
;
```

The following example shows the output for all provisioned secondary point codes. Spare point codes are included in the output.

rtrv-spc

```
rlghncxa03w 05-01-18 08:50:12 EST EAGLE 31.12.0
```

```
SPC (Secondary Point Codes)
```

```
SPCA
```

```
001-001-001
```

```
001-123-003
```

```
SPC-I
```

```
1-001-1
```

```
s-1-001-1
```

```
2-003-4
```

```
s-4-003-4
```

```
SPC-N
```

```
00234
```

```
s-00345
```

```
SPC-N24
```

```
011-011-011
```

```
Secondary Point Code table is (9 of 40) 22% full.
```

```
;
```

The following example shows the only provisioned secondary point code, which is a 24-bit ITU-N secondary point code.

rtrv-spc

```
rlghncxa03w 05-03-18 08:50:12 EST EAGLE 31.0.0
```

```
SPC (Secondary Point Codes)
```

SPCA
none

SPC-I
none

SPC-N
none

SPC-N24
099-099-099

Secondary Point Code table is (1 of 40) 2% full.

;

The following example shows information for a specific ANSI secondary point code.

rtrv-spc:spc=5-3-3

rlghncxa03w 03-03-18 08:50:12 EST EAGLE 31.3.0
SPC (Secondary Point Codes)
005-003-003

Secondary Point Code table is (8 of 40) 25% full.

;

In the following example, the specified secondary point code is not provisioned.

rtrv-spc:spc=5-3-1

rlghncxa03w 03-03-18 08:50:12 EST EAGLE 31.3.0
SPC (Secondary Point Codes)

Secondary Point Code specified is not provisioned

Secondary Point Code table is (3 of 40) 8% full.

;

The following example shows information for a specific ITU-N secondary spare point code.

rtrv-spc:spcn=s-00345

rlghncxa03w 03-03-18 08:50:12 EST EAGLE 31.12.0
SPC (Secondary Point Codes)
s-00345

Secondary Point Code table is (2 of 40) 5% full.

;

The following example shows output for a specific 24-bit ITU-N ssecondary point code.

rtrv-spc:spcn24=98-98-98

rlghncxa03w 03-03-18 08:50:12 EST EAGLE 31.0.0
SPC (Secondary Point Codes)
098-098-098

Secondary Point Code table is (2 of 40) 5% full.

;

Legend

SPC—Secondary point code

SPCA—ANSI secondary point code

SPC-I—ITU international secondary point code

SPC-N—ITU national secondary point code

SPC-N24—24-bit ITU national secondary point code

rtrv-split-npa

Retrieve Split NPANXX

Use this command to display all NPANXXs existing in a split mode in the database.

NOTE: This command is obsolete.

NOTE: If the LNP ELAP Configuration feature is turned on, this command is no longer available. This function can be performed at the LSMS or using the ELAP user interface.

Keyword: rtrv-split-npa

Related Commands: dlt-split-npa, ent-split-npa

Command Class: LNP Basic

Parameters

:enpanxx= (optional)

End range numbering plan area and exchange.

Range: 6 digits

Default: Display all npanxx existing in a split mode in the database

:force= (optional)

Force command execution. The **force=yes** parameter must be specified when a value greater than 50 is specified for the **num** parameter, to display more than 50 entries in the command output.

Range: yes, no

Default: no

:npanxx= (optional)

Numbering plan area and exchange.

Range: 6 digits

Default: Display all npanxx existing in a split mode in the database

:num= (optional)

Number of entries to be shown.

Range: 1-50,000

Default: 1—if the **npanxx** parameter is specified

50—all other cases

Example

```
rtrv-split-npa
```

```
rtrv-split-npa:npanxx=909335
```

Dependencies

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before this command can be entered.

When the **enpanxx** parameter is specified, the **npanxx** parameter must be specified.

The **enpanxx** parameter value must be greater than the **npanxx** parameter value.

The **force=yes** parameter must be specified when the specified **num** parameter value is greater than 50.

Notes

None

Output**rtrv-split-npa**

```
rlghncxa03w 03-03-28 14:23:37 EST EAGLE 31.3.0
NPANXX  NNPANXX
909335  919336
919321  920461
```

;

rtrv-split-npa:npa=909335

```
rlghncxa03w 03-03-28 14:23:37 EST EAGLE 31.3.0
NPANXX  NEW NPANXX
909335  919336
```

;

Legend**NPANXX**—The NPANXXs currently in the database.**NEW NPANXX**—The new NPANXXs in the database.**rtrv-srvsel****Retrieve Service Selector**

Use this command to display a list of administered service selector combinations. The list can be filtered using various parameter combinations.

NOTE: The rtrv-srvsel operation may be lengthy because the service selector table can contain over 1,000 entries.

Keyword: rtrv-srvsel**Related Commands:** chg-srvsel, dlt-srvsel, ent-srvsel**Command Class:** Database Administration**Parameters****:force=** (optional)

The **force=yes** parameter must be specified when a **num** parameter value greater than **50** is specified to display more than 50 entries.

Range: yes, no**Default:** no**:gti/gtia/gtii/gtin/gtin24=** (optional)

Global title indicator. For all service selector commands, the domain is defined as **gti** and **gtia** (ANSI), **gtii** (ITU international), **gtin** (ITU national) and **gtin24** (24-bit ITU national). For the service selector commands, **gti** and **gtia** are equivalent.

Range: Supported value for ANSI: **gti=2** and **gtia=2**
Supported values for ITU: **gtii=2, 4; gtin=2, 4, gtin24=2, 4**

Default: Display all**:nai=** (optional)

Nature of Address indicator. The Nature of Address indicator can be specified by supplying either a mnemonic value (**nai** parameter) or an explicit numeric value (**naiv** parameter). Either the **nai** parameter or the **naiv** parameter, but not both, can be specified in the command. Table A-5 shows the mapping between the **naiv** and the **nai** parameter values.

Range: sub, rsvd, natl, intl**Default:** Display all

:naiv= (optional)

Nature of Address indicator value. The Nature of Address indicator can be specified by supplying either a mnemonic value (**nai** parameter) or an explicit numeric value (**naiv** parameter). Either the **nai** parameter or the **naiv** parameter, but not both, can be specified in the command. Table A-5 shows the mapping between the **naiv** and the **nai** parameter values.

Range: 0-127

Default: Display all

:np= (optional)

Numbering Plan. The numbering plan can be specified by supplying either a mnemonic value (**np** parameter) or an explicit numeric value (**npv** parameter). Either the **np** parameter or the **npv** parameter, but not both, can be specified in the command. Table A-6 shows the mapping between the **npv** and the **np** parameter values.

Range: e164, generic, x121, f69, e210, e212, e214, private

Default: Display all

:npv= (optional)

Numbering Plan value. The numbering plan can be specified by supplying either a mnemonic value (**np** parameter) or an explicit numeric value (**npv** parameter). Either the **np** parameter or the **npv** parameter, but not both, can be specified in the command. Table A-6 shows the mapping between the **npv** and the **np** parameter values.

Range: 0-15

Default: Display all

:num= (optional)

Number of entries to display. The **force=yes** parameter is required when this parameter value is specified greater than 50 entries.

Range: 0-20, 992

Default: 50

:serv= (optional)

The DSM service.

Range: eir, gflex, gport, inpq, inpmr, mnpsms, smsmr, idps, idpr

eir—Equipment Identity Register

gflex—GSM flexible numbering

gport—GSM number portability

inpq—INP query

inpmr—INP message relay

mnpsms—Portability Check for Mobile Originated SMS

smsmr—Prepaid SMS Intercept

idps—IDP Screening for Prepaid

idpr—Prepaid IDP Query Relay

Default: Display all

:snai= (optional)

The service nature of address indicator.

Range: sub, natl, intl, rnidn, rnndn, rnsdn, ccrndn

sub—Subscriber number

natl—National significant number

intl—International number

rnidn—Routing number prefix and international dialed/directory number

rnndn—Routing number prefix and national dialed/directory number

rnsdn—Routing number prefix and subscriber dialed/directory number

ccrndn—Country code, routing number, and national directory number

Default: Display all

:snp= (optional)
 The service numbering plan.
Range: **e164, e212, e214**
 e164—E.164 numbering plan
 e212—E.212 numbering plan
 e214—E.214 numbering plan
Default: Display all

:ssn= (optional)
 Subsystem number.
Range: **0-255 ***

:tt= (optional)
 Translation type.
Range: **0-255**
Default: Display all

Example

```
rtrv-srvsel
rtrv-srvsel:gtii=2
rtrv-srvsel:tt=0:np=e164
```

Dependencies

The G-Flex, G-Port, or INP feature must be turned on, or the Equipment Identity Register (EIR) feature must be enabled before this command can be entered.

The INP feature must be turned on before the **serv=inp~~mr~~** or **serv=inp~~q~~** parameter can be specified.

The G-Flex feature must be turned on before the **serv=gflex** parameter can be specified.

The G-Port feature must be turned on before the **serv=gport** parameter can be specified.

The **np** and **npv** parameters cannot be specified together in the command.

The **nai** and **naiv** parameters cannot be specified together in the command.

The values **1** and **3** are not valid for the **gti/gtia/gtii/gtin/gtin24** parameters.

The value **4** is not valid for the **gti/gtia** parameters.

When the **gti/gtia/gtii/gtin/gtin24=2** parameter is specified, no **np(v)** and **nai(v)** parameter combinations can be specified.

When a **serv** parameter value of **inp~~mr~~**, **inp~~q~~**, **gport**, **eir**, **smsmr**, or **mnpsms** is specified, the **gtia** and **gti** parameters cannot be specified.

When the **serv=inp~~mr~~** parameter is specified, the **snp** parameter must be **e164** if it is specified.

When an **snai** parameter value of **rnidn**, **rnndn**, or **rnsdn** is specified, the **serv** parameter value must be **inp~~mr~~**, **gport**, **smsmr**, or **mnpsms** if it is specified.

When the **serv=inp~~q~~** parameter is specified, the **gtii** parameter cannot be specified.

When an **snai** parameter value of **rnidn**, **rnndn**, or **rnsdn** is specified, the **serv=gflex** parameter cannot be specified.

When a **serv** parameter value of **inp~~q~~** or **eir** is specified, the **snp** and **snai** parameters cannot be specified.

When the **snai=ccr~~ndn~~** parameter is specified, a **serv** parameter value of **gport**, **smsmr**, or **mnpsms** must be specified.

When the specified **num** parameter value is greater than **50**, the **force=yes** parameter must be specified.

The Prepaid IDP Query Relay feature must be turned on before the **serv=idpr** parameter can be specified.

When the **serv=idpr** parameter is specified, the only valid mandatory service parameters are **tt**, **ssn** and **gti/gtia/gtin/gtii**. When the **serv=idpr** parameter is specified, the only valid optional parameters are **np** and **nai**.

The IDP Screening for Prepaid feature must be turned on before the **serv=idps** parameter can be specified.

Notes

None

Output

The following example displays all provisioned service selectors:

rtrv-srvsel

```
rlghncxa03w 00-03-29 16:40:40 EST EAGLE 31.3.0
GTIA TT NP NAI NPV NAIV SNP SNAI SERV
2 9 -- --- --- --- e212 intl gflex
2 10 -- --- --- --- e164 intl gflex
2 253 -- --- --- --- e214 natl gflex

GTII TT NP NAI NPV NAIV SNP SNAI SERV
2 0 -- --- --- --- e164 intl gflex
2 18 -- --- --- --- e164 rnsdn inpmr
4 0 e214 sub --- --- e214 sub gflex

GTIN TT NP NAI NPV NAIV SNP SNAI SERV
2 2 -- --- --- --- e164 intl gflex
2 9 -- --- --- --- --- inpq
4 2 e164 natl --- --- e164 rnndn inpmr
4 9 --- --- 10 128 --- --- inpq
;
```

The following example displays all service selectors containing the specified GTI value:

rtrv-srvsel:gtii=2

```
rlghncxa03w 00-03-29 16:40:40 EST EAGLE 31.3.0
GTII TT NP NAI NPV NAIV SNP SNAI SERV
2 0 -- --- --- --- e164 intl gflex
2 18 -- --- --- --- e164 rnidn inpmr
;
```

The following example displays all service selectors containing the specified **tt** and **np** values:

rtrv-srvsel:tt=0:np=e164

```
rlghncxa03w 00-03-29 16:40:40 EST EAGLE 31.3.0
GTII TT NP NAI NPV NAIV SNP SNAI SERV
4 0 e164 sub --- --- e164 sub gflex
;
```

The following example displays all service selectors containing the specified service:

rtrv-srvsel:serv=inpq

```
rlghncxa03w 00-03-29 16:40:40 EST EAGLE 31.3.0
GTIN TT NP NAI NPV NAIV SNP SNAI SERV
2 9 -- --- --- --- --- inpq
4 9 --- --- 10 128 --- --- inpq
;
```

The following example displays all service selectors containing the **gport** service:

rtrv-srvsel:serv=gport

```
rlghncxa03w 00-03-29 16:40:40 EST EAGLE 31.3.0
GTIN TT NP NAI NPV NAIV SNP SNAI SERV
4 0 e164 128 --- --- e164 ccrndn gport
;
```

The following example includes a **gtin24** entry:

rtrv-srvsel

```
rlghncxa03w 03-05-29 16:40:40 EST EAGLE 31.0.0
GTIN TT NP NAI NPV NAIV SNP SNAI SERV
4 4 e164 intl --- --- e164 intl gport

GTIN24 TT NP NAI NPV NAIV SNP SNAI SERV
4 4 e164 intl --- --- e164 intl gport
```

SRV SELECTOR table is (2 of 20992) 1 % full

;

The following examples display service selectors containing the **eir**, **smsmr**, **mnpsms** and **idps** services:

rtrv-srvsel

```
tekelecstp 03-03-28 15:43:22 EST EAGLE5 31.0.0
GTII TT NP NAI NPV NAIV SSN SNP SNAI SERV
4 1 e214 intl --- --- 3 --- --- eir
4 1 e214 intl --- --- 4 e164 intl gport
4 1 e214 intl --- --- 5 e164 intl smsmr
4 2 e214 intl --- --- 5 e164 intl mnpsms
4 2 e214 intl --- --- * --- --- eir
4 20 e164 intl --- --- 6 --- ---- idps
```

```
GTIN TT NP NAI NPV NAIV SSN SNP SNAI SERV
4 4 e214 natl --- --- --- e164 intl gflex
4 9 e214 natl --- --- --- e164 intl gflex
```

SRV SELECTOR table is (7 of 20992) 1 % full

;

rtrv-srvsel:ssn=3

```
tekelecstp 03-03-28 15:43:22 EST EAGLE5 31.0.0
GTII TT NP NAI NPV NAIV SSN SNP SNAI SERV
4 1 e214 intl --- --- 3 --- --- eir
```

SRV SELECTOR table is (4 of 20992) 1 % full

;

rtrv-srvsel:serv=eir

```
tekelecstp 03-03-28 15:43:22 EST EAGLE5 31.0.0
GTII TT NP NAI NPV NAIV SSN SNP SNAI SERV
4 1 e214 intl --- --- 3 --- --- eir
4 2 e214 intl --- --- * --- --- eir
```

SRV SELECTOR table is (4 of 20992) 1 % full

;

rtrv-srvsel

```
tekelecstp 05-08-17 17:05:51 EST 33.1.0
GTII TT NP NAI NPV NAIV SSN SNP SNAI SERV
4 20 e164 intl --- --- 123 ---- ---- idpr
```

SRV SELECTOR table is (1 of 20992) 1 % full

;

Legend

GTI/GTIA/GTII/GTIN/GTIN24—Global title indicator.

TT—Translation type.

NP—Numbering plan.

NAI—Nature of address indicator.

NPV—Numbering plan value.

NAIV—Nature of address indicator value.

SNP—Service numbering plan.

SNAI—Service nature of address indicator.

SERV—DSM service.

rtrv-ss-appl**Retrieve Subsystem Application**

Use this command to retrieve all applications from the database. The command displays the application type, subsystem number, and application status.

Keyword: **rtrv-ss-appl**

Related Commands: **chg-ss-appl**, **dlt-ss-appl**, **ent-ss-appl**

Command Class: Database Administration

Parameters

This command has no parameters.

Example

rtrv-ss-appl

Dependencies

The LNP feature (see the **enable-ctrl-feat** command) or the INP feature must be turned on, or the Equipmetn Identity Register (EIR) feature must be enabled, before this command can be entered.

Notes

None

Output

rtrv-ss-appl

```
rlghncxa03w 03-03-17 16:02:05 EST  EAGLE 31.3.0
APPL  SSN  STAT
LNP   15   online
SS-APPL table is (1 of 1) 100% full
```

;

rtrv-ss-appl

```
rlghncxa03w 03-03-17 16:02:05 EST  EAGLE 31.3.0
APPL  SSN  STAT
INP   15   online
```

```
SS-APPL table is (1 of 1) 100% full
```

;

rtrv-ss-appl

```
tekelecstp 03-06-28 14:42:38 EST  EAGLE 31.0.0
APPL  SSN  STAT
EIR   11   online
```

```
SS-APPL table is (1 of 1) 100% full
```

;

Legend

APPL—Application type

SSN—Subsystem number

STAT—Status

rtrv-ss7opts**Retrieve SS7 Options**

This command retrieves the current values of the SS7 option indicators maintained in the STP options table. SS7 options can modify normal handling of SS7 traffic.

Keyword: **rtrv-ss7opts**

Related Commands: **chg-ss7opts**

Command Class: Database Administration

Parameters

None

Example

rtrv-ss7opts

Dependencies

None

Notes

None

Output

rtrv-ss7opts

```
tekelecstp 04-08-28 14:42:38 EST EAGLE 31.9.0
SS7 OPTIONS
-----
LSRESTRICT          off
;
```

rtrv-stp**Retrieve STP Information**

Use this command to retrieve information related to the STP at which the command is entered.

The command can retrieve frame and card power consumption and threshold values (in Amps or milliAmps and Watts) for all provisioned frames or for a specified frame. (See the **ent-frm-pwr** command.)

The command can retrieve hardware configuration information (card location, board part number, revision, serial number, card type, card memory, GPL, and GPL version):

- For all provisioned STP frames and shelves
- For a specific provisioned frame
- For a specific provisioned shelf
- For a specific equipped card
- For all cards of the specified card type
- For all cards that contain the specified Board Part Number
- For all cards that are running the specified GPL or GPL version.

Keyword: **rtrv-stp**

Related Commands: **chg-frm-pwr**, **dlt-frm-pwr**, **ent-frm-pwr**, **rtrv-frm-pwr**

Command Class: Database Administration

Parameters

:display= (optional)

Display the power consumption and power threshold value for all provisioned frames or for one specific provisioned frame.

This parameter must be specified when the **frm** parameter is specified, to display the power information for one frame.

Range: **power**

power — Display frame power information in the command output.

:frm= (optional)

Frame ID. The command displays information for the specified provisioned frame.

Range: **cf00, ef00, ef01, ef02, ef03, ef04**

cf00 — Control Frame identifier

ef00 — Identifier for the first Extension Frame

ef01 — Identifier for the second Extension Frame

ef02 — Identifier for the third Extension Frame

ef03 — Identifier for the fourth Extension Frame

ef04 — Identifier for the fifth Extension Frame

:gpl= (optional)

Display hardware configuration information for all card locations equipped with cards that are running the specified GPL.

This parameter must be specified when the **ver** parameter is specified, to display information for a specific version of the GPL.

Range: *xyyyyyyy*

atmansi—The GPL is used by the LIM cards to support the high-speed ATM signaling link feature.

atmitu—The GPL is used by the E1 ATM cards to support the high-speed E1 ATM signaling link feature.

blbepm—A flash GPL containing the BIOS ROM image on EPM cards.

blbios—A flash GPL containing the BIOS ROM image on HC-MIM cards that are used for E1 or T1 signaling links.

blcpld—A flash GPL containing the bit files for the CPLD on HC-MIM cards that are used for E1 or T1 signaling links.

bldiag—A flash GPL containing the diagnostic code on HC-MIM cards that are used for E1 or T1 signaling links.

bldiag6—A flash GPL containing the diagnostic code on E5-E1T1 cards and E5-ENET cards.

blvxw—A flash GPL containing the VxWorks operating system on HC-MIM cards that are used for E1 or T1 signaling links.

blvxw6—A flash GPL containing the VxWorks operating system on E5-E1T1 cards and E5-ENET cards

bphmux—This GPL is used to support Board PROM for HMUX flash memory.

bphcap—This GPL is used to support Board PROM for HCAP flash memory.

bphcapt—This GPL is used to support Board PROM for HCAP-T flash memory.

bphmux—This GPL is used to support Board PROM for HMUX flash memory.

bpmpl—This GPL is used to support Board PROM for MPL flash memory.

bpmplt—This GPL is used to support Board PROM for E1/T1 flash memory and Board Prom for MPL-T flash memory.

ccs7itu—This GPL is used by the LIM cards for ITU-TSS MTP functions.

cdu—This GPL is used in the card manufacturing process.

ebdablm—This GPL is used by the TSM card for enhanced bulk download.

ebdadcm—This GPL is used by the DCM card to transmit the LSMS LNP database to the EAGLE 5 ISS at high speed over an ethernet connection for enhanced bulk download.

emdc—This GPL is used by the DCM card for CMIP/OSI measurement collection interface as defined by Telcordia GR-376.

eoam—This GPL is used by the GPSM-II card for enhanced OAM functions.

eroute—This GPL is used by the STC card to support integrated data acquisition for Sentinel and Integrated Message Feeder.

gls—This GPL is used by the TSM cards for downloading gateway screening to LIM cards.

hipr—The communication software used on the High Speed IMT Packet Router (HIPR) card.

imt—This GPL is the communication processor on the logical processing element (LPE).

imtpci—The communication software that operates the IMT bus on HC-MIM cards.

ipghc—This GPL is used by the E5-ENET card to support TCP/IP point-to-multipoint connectivity for both ANSI and ITU point codes.

ipgwi—This GPL is used by the DCM card for TCP/IP point-to-point connectivity for ITU point codes.

iplhc—This GPL is used by the E5-ENET card for TCP/IP point-to-point connectivity for both ANSI and ITU point codes.

iplim—This GPL is used by the DCM card for TCP/IP point-to-point connectivity for ANSI point codes.

iplimi—This GPL is used by the DCM card for TCP/IP point-to-point connectivity for ITU point codes.

ips—This GPL is used by the IPSM card for the IP User Interface feature.

mcp—This GPL is used by the MCPM card for the Measurements Platform feature.

plde1t1—A flash GPL that is used on HC-MIM cards for E1 and T1 signaling links.

pldpmc1—A flash GPL that is used on HC-MIM cards for E1 and T1 signaling links.

sccp—This GPL is used by the TSM card for the global title translation application.

ss7ansi—This GPL is used by the LIM cards for the MTP functionality.

ss7epm—This GPL is used by the E5-E1T1 cards to support the MTP functionality for both ANSI and ITU applications. The **ss7epm** GPL allows the card to support up to 32 signaling links for E1 and T1 functionality.

ss7gx25—This GPL is used by the LIM cards to support X.25 functionality.

ss7hc—This GPL is used to support the functionality for the HC-MIM (High Capacity Multi-Channel Interface Module) card. The HC-MIM card runs either the **ss7ansi** or **ccs7itu** application; the **ss7hc** GPL allows the card to support up to 64 signaling links for E1 and T1 functions.

ss7ipgw—This GPL is used by the system to support TCP/IP point-to-multipoint connectivity.

ss7ml—This GPL is used to support the functionality for the multi-port LIM (MPL or MPL-T) card and the E1/T1 MIM (Multi-Channel Interface Module) card. The MPL cards run only the **ss7ansi** application on a LIMDS0 card (as in the command **ent-card:type=limds0:appl=ss7ansi**); the **ss7ml** GPL allows the card to support 8 signaling links rather than the usual 2 links for LIM cards. The MPL cards support only the DS0 interface. The E1/T1 MIM card runs either the **ss7ansi** or **ccs7itu** application; the **ss7ml** GPL allows the card to support 8 signaling links for E1 and T1 functions. The older E1 card supports 2 signaling links for E1 functions.

stplan—This GPL is used by the ACM card to support the STP LAN application.

utility—This GPL is used by the factory for testing, and when directed by Tekelec Technical Services.

vcdu—This GPL is used in the card manufacturing process.

vsccp—This GPL is used by the DSM card to support the G-Flex, G-Port, INP, and LNP ELAP Configuration features. If the G-Flex, G-Port, INP, or LNP ELAP Configuration feature is not turned on, and a DSM card is present, the VSCCP GPL processes normal GTT traffic.

vxwslan—This GPL is used by the SSEDCCM card to support the STP LAN application.

:partnum= (optional)

Display the hardware configuration for all card locations that contain a card with the specified Board Part Number.

Range: *zzz-zzzz-zz*

Specify the Board Part Number in the format xxx-xxxx-xx. See the Hardware Baseline appendix in the Feature Notice for a list of Board Part Numbers that are supported for the EAGLE release.

:shelf= (optional)

Display the hardware configuration information for all card locations in the specified EAGLE shelf.

Range: **1100, 1200, 1300, 2100, 2200, 2300, 3100, 3200, 3300, 4100, 4200, 4300, 5100, 5200, 5300, 6100**

:type= (optional)

Display the hardware configuration information for all card locations that contain cards of the specified card type.

Range: **acmenet, dcm, dsm, ipsm, limatm, limatm, limch, limds0, lime1, lime1atm, limocu, limt1, limv35, mcpm, stc, tsm**

:ver= (optional)

Display the hardware configuration information for all the card locations that have cards with the specified GPL Type and the specified GPL Version. The version format is *major-minor-fix*.

Range: *major-minor-fix*

major—Range **0-255**

minor—Range **0-255**

fix—Range **0-255**

Example

Retrieve the frame power information for all provisioned frames of the STP.

rtrv-stp:display=power

Retrieve the card level power information for the control frame in the STP

rtrv-stp:display=power:frm=cf00

Retrieve the hardware configuration information for the STP control shelf (shelf 1100).

rtrv-stp:shelf=1100

Retrieve the hardware configuration information for all cards equipped in the STP that have the specified Board Part Number.

rtrv-stp:partnum=870-1275-01

Retrieve the hardware configuration information for all provisioned TSM cards in the STP.

rtrv-stp:type=tsm

Retrieve the hardware configuration information for all cards in the STP that are running the ss7ansi GPL..

rtrv-stp:gpl=ss7ansi

Retrieve the hardware configuration information for all cards in the STP that are running the ss7ansi GPL version 027-010-001..

rtrv-stp:gpl=ss7ansi:ver=027-010-000

Retrieve the hardware configuration information for all provisioned frames in the STP.

rtrv-stp**Dependencies**

The **display** parameter must be specified when the **frm** parameter is specified.

The **gpl** parameter must be specified when the **ver** parameter is specified.

Only one optional parameter can be specified in the command, except for the following parameter combinations:

- The **display** parameter must be specified when the **frm** parameter is specified.
- The **gpl** parameter must be specified when the **ver** parameter is specified.

The **frm** parameter value must specify a provisioned frame.

Notes

When the power threshold value has not been provisioned for a provisioned frame, the default frame power threshold value is displayed and prefixed with a plus sign (+).

For an un-provisioned card that is present in the frame, the card power consumption value is displayed prefixed with a plus sign (+).

For the TDM and MDAL cards in the Control Frame and for the MUX cards in all the frames, "TDM", "MDAL", or "MUX", respectively, is displayed as the Part Number of the card.

If the Board Part Number that is received in the BIP response from a particular card is not present in the Assembly Power table,

- The Part Number for the card is displayed prefixed by a plus sign (+)
- The default card power value of 1563 milliAmps is assumed and displayed for the card.

If board information is not available from a card,

- Dashes (-----) are displayed as the Part number for the card
- The default card power value of 1563 milliAmps is assumed and displayed for the card.

If a particular card location is empty (no card is present in that slot),

- "Empty" is displayed as the Part Number for the card

- A card power value of 0 is assumed and displayed.

For Standby GSM and TDM cards, “Unavailable” is displayed as the Part Number if either the Standby GSM card or TDM card is absent. In this case, the card power of the Active GSM card is shown for the card power of the Standby GSM card also.

Output

The following example shows the hardware configuration information for a specific shelf.

rtrv-stp:shelf=1100

tekelecstp 06-04-30 11:07:17 EST EAGLE 35.0.0

Card	Part Number	Rev	Serial Number	Type	DB	GPL	GPL Version
1101	870-1275-01	W	10245689323	DSM	4096M	VSCCP	027-010-000
1102	Empty						
1103	870-1788-03	A	10234658345	TSM	128M	GLS	027-010-000
1104	Empty						
1105	870-1339-06	A	10274568974	LIMATM	-	ATMANSI	027-010-000
1106	Empty			DSM		VSCCP	
1107	Empty						
1108	870-1456-05	A	10204764378	DCM	512M	SS7IPGW	027-010-000
1109	MUX					BPHMUX	027-345-000
1110	MUX					BPHMUX	027-345-000
1111	870-1788-05	A	10205734657	MCPM	4096M	MCP	027-010-000
1112	870-1789-04	A	10302135627	LIMDSO	-	SS7ANSI	027-010-000
1113	870-2360-01	A	10346357678	GPSM	1024M	EOAM	025-340-000
1114	TDM						
1115	Unavailable			GPSM		EOAM	
1116	Unavailable						
1117	MDAL						
1118	Empty						

Command Completed.

;

The following example shows the frame power information for all provisioned frames in the STP.

rtrv-stp:display=power

tekelecstp 06-04-30 11:07:17 EST EAGLE 35.0.0

Frame	Power Threshold (Amps)	Power Threshold (Watts)	Power Consumption (Amps)	Power Consumption (Watts)
CF00	45	2160	37.71	1810
EF00	40	1920	33.99	1631
EF01	35	1680	10.00	480
EF04	+30	+1440	14.06	675

Command Completed.

;

The following example shows the frame and card power information for the control frame in the system.

rtrv-stp:display=power:frm=cf00

tekelecstp 06-04-30 11:07:17 EST EAGLE 35.0.0

Frame	Power Threshold (Amps)	Power Threshold (Watts)	Power Consumption (Amps)	Power Consumption (Watts)
CF00	45	2160	37.71	1810

Card	Part Number	Revision	Power Consumption (MilliAmps)	Power Consumption (Watts)
1101	850-0484-01	E	313	15
1102	870-2372-01	J	521	25
1103	870-1289-04	K	313	15
1104	+ 870-2198-01	M	+ 1563	+ 75
1105	870-1984-05	M	+ 646	+ 31

1106	870-2372-01	J	521	25
1107	870-2061-01	K	542	26
1108	870-2061-01	K	+ 542	+ 26
1109	MUX		313	15
1110	MUX		313	15
1111	870-2061-01	B	542	26
1112	850-0419-03	C	521	25
1113	870-2360-01	B	625	30
1114	TDM		333	16
1115	Unavailable		625	30
1116	Unavailable		333	16
1117	MDAL		333	16
1118	Empty		0	0
1201	870-2061-01	A	542	26
1202	870-2061-01	A	542	26
1203	850-0549-01	A	313	15
1204	+ 870-2198-01	M	1563	75
1205	850-0549-01	A	313	15
1206	+ 870-2198-01	M	1563	75
1207	870-2371-02	E	625	30
1208	870-1293-02	B	521	25
1209	MUX		313	15
1210	MUX		313	15
1211	870-2061-01	D	542	26
1212	850-0549-01	A	313	15
1213	850-0549-01	A	313	15
1214	850-0549-01	A	313	15
1215	870-2061-01	C	542	26
1216	870-1945-03	D	646	31
1217	Empty		0	0
1218	870-2061-01	K	542	26
1301	870-1984-05	M	646	31
1302	850-0549-01	A	313	15
1303	+ 870-2198-01	M	1563	75
1304	870-2371-02	E	625	30
1305	870-2371-02	E	625	30
1306	850-0419-03	C	521	25
1307				
1308	870-2061-01	K	542	26
1309	MUX		313	15
1310	MUX		313	15
1311	850-0484-01	E	313	15
1312	+ 870-2198-01	M	+ 1563	+ 75
1313	-----		+ 1563	+ 75
1314	-----		1563	75
1315	Empty		0	0
1316	Empty		0	0
1317	Empty		0	0
1318	850-0419-03	C	521	25
FAN ASSYs Power Consumption			7812	375
Command Completed.				

;

The following example shows the frame and card power information for the specified extension frame.

rtrv-stp:display=power:frm=ef04

tekelecstp 06-04-30 11:07:17 EST EAGLE 35.0.0

Frame	Power Threshold		Power Consumption	
	(Amps)	(Watts)	(Amps)	(Watts)
-----	-----	-----	-----	-----
EF04	+30	+1440	14.06	675

Card	Part Number	Revision	Power Consumption (MilliAmps)	(Watts)
6101	870-1293-20	D	313	15
6102	870-1293-20	D	313	15
6103	870-2671-16	M	1563	75
6104	870-1293-20	D	313	15
6105	870-2061-01	K	542	26
6106	870-1984-05	M	646	31
6107	870-1984-05	M	646	31
6108	870-2372-01	J	521	25
6109	MUX		313	15
6110	MUX		313	15
6111	870-2061-01	A	542	26
6112	870-2061-01	A	542	26
6113	850-0549-01	A	+ 313	+ 15
6114	+ 870-2198-01	M	+ 1563	+ 75
6115	850-0549-01	A	313	15
6116	+ 870-2198-01	M	1563	75
6117	870-2371-02	E	625	30
6118	870-1293-02	B	521	25

FAN ASSYS Power Consumption 2604 125
Command Completed.

;

The following example shows the hardware configuration information for alll equipped DSM cards that contain the specified Board Part Number.

rtrv-stp:partnum=870-1275-01

tekelecstp 06-04-30 11:07:17 EST EAGLE 35.0.0

Card	Part Number	Rev	Serial Number	Type	DB	GPL	GPL Version
1101	870-1275-01	W	10245689323	DSM	4096M	VSCCP	027-010-000
1205	870-1275-01	W	10246789323	DSM	4096M	VSCCP	027-010-000
1307	870-1275-01	W	10204764378				

Command Completed.

;

The following example shows the hardware configuration information for all equipped HC MIM cards that have the specified Board Part Number.

rtrv-stp:partnum=870-2671-02

tekelecstp 06-04-30 11:07:17 EST EAGLE 35.0.0

Card	Part Number	Rev	Serial Number	Type	DB	GPL	GPL
1301	870-2671-02	C	10145689323	LIMT1	512M	SS7ANSI	
126-033-000							
1305	870-2671-02	C	10146789323	LIME1	512M	CCS7ITU	
126-033-000							
2107	870-2671-02	C	10104764378	LIMT1	512M	CCS7ITU	
126-033-000							

Command Completed.

;

The following example shows the hardware configuration information for all E5-E1T1 cards that have the specified Board Part Number.

rtrv-stp:partnum=870-1873-01

tekelecstp 06-04-30 11:07:17 EST EAGLE 35.0.0

Card Version	Part Number	Rev	Serial Number	Type	DB	GPL	GPL
1303	870-1873-01	C	10345689323	LIMT1	512M	SS7ANSI	
126-033-000							
1311	870-1873-01	C	10346789323	LIME1	512M	CCS7ITU	
126-034-000							
2205	870-1873-01	C	10304764378	LIMT1	512M	CCS7ITU	
126-034-000							

Command Completed.

;

Retrieve the hardware configuration information for all E5-ENET cards with the specified Board Part Number.

rtrv-stp:partnum=870-2212-02

tekelecstp 06-04-30 11:07:17 EST EAGLE 35.0.0

Card Version	Part Number	Rev	Serial Number	Type	DB	GPL	GPL
2101	870-2212-02	W	10245689321	DCM	512M	IPLIM	
126-035-000							
2103	870-2212-02	W	10246789321	DCM	512M	IPLIM	
126-035-000							
2112	870-2212-02	W	10204764371	DCM	512M	IPGWI	
126-037-000							

Command Completed.

;

Retrieve the hardware configuration information for all cards of the specified card type.

rtrv-stp:type=tsm

tekelecstp 06-04-30 11:07:17 EST EAGLE 35.0.0

Card	Part Number	Rev	Serial Number	Type	DB	GPL	GPL Version
1103	870-1788-03	A	10234658345	TSM	128M	GLS	027-010-000
1212	870-1788-03	A	10234632455	TSM	128M	GLS	027-010-000
2105				TSM		GLS	

Command Completed.

;

Retrieve the hardware configuration information for all cards that are running the specified GPL.

rtrv-stp:gpl=ss7ansi

tekelecstp 06-04-30 11:07:17 EST EAGLE 35.0.0

Card Version	Part Number	Rev	Serial Number	Type	DB	GPL	GPL
1112	870-1789-04	A	10302135627	LIMDS0	-	SS7ANSI	
027-010-000							


```

      1203  870-1789-04  A   10302135777   LIMDS0   -   SS7ANSI
027-010-000
      1216  870-1789-04  A   10302135655   LIMDS0   -   SS7ANSI
027-010-010
      1301  870-2671-02  C   10145689323   LIMT1    512M  SS7ANSI
126-033-000
      1303  870-1873-01  C   10345689323   LIMT1    512M  SS7ANSI
126-033-000

```

Command Completed.

;

Retrieve the hardware configuration information for all cards that are running the specified version of the specified GPL.

rtrv-stp:gpl=ss7ansi:ver=027-010-000

tekelecstp 06-04-30 11:07:17 EST EAGLE 35.0.0

Card Version	Part Number	Rev	Serial Number	Type	DB	GPL	GPL
-----	-----	---	-----	----	--	---	

1112	870-1789-04	A	10302135627	LIMDS0	-	SS7ANSI	
027-010-000							
1203	870-1789-04	A	10302135777	LIMDS0	-	SS7ANSI	
027-010-000							

Command Completed.

;

Retrieve the hardware configuration information for all cards that are running the specified version of the specified GPL.

rtrv-stp:gpl=ss7ansi:ver=126-033-000

tekelecstp 06-04-30 11:07:17 EST EAGLE 35.0.0

Card Version	Part Number	Rev	Serial Number	Type	DB	GPL	GPL
-----	-----	---	-----	----	--	---	

1301	870-2671-02	C	10145689323	LIMT1	512M	SS7ANSI	
126-033-000							
1303	870-1873-01	C	10345689323	LIMT1	512M	SS7ANSI	
126-033-000							

Command Completed.

;

Retrieve the hardware configuration information for all cards that are running the specified version of the specified GPL.

rtrv-stp:gpl=ccs7itu:ver=126-034-000

tekelecstp 06-04-30 11:07:17 EST EAGLE 35.0.0

Card Version	Part Number	Rev	Serial Number	Type	DB	GPL	GPL
-----	-----	---	-----	----	--	---	

1311	870-1873-01	C	10346789323	LIME1	512M	CCS7ITU	
126-034-000							
2205	870-1873-01	C	10304764378	LIMT1	512M	CCS7ITU	
126-034-000							

Command Completed.

;

Retrieve the hardware configuration information for all cards that are running the specified version of the specified GPL.

rtrv-stp:gpl=iplim:ver=126-035-000

tekelecstp 06-04-30 11:07:17 EST EAGLE 35.0.0

Card Version	Part Number	Rev	Serial Number	Type	DB	GPL	GPL
2101	870-2847-02	W	10245689321	DCM	512M	IPLIM	
2103	870-2847-02	W	10246789321	DCM	512M	IPLIM	

Command Completed.

;

Retrieve the hardware configuration information for all frames of the STP, without specifying any optional parameters in the command.

rtrv-stp

tekelecstp 06-04-30 11:07:17 EST EAGLE 35.0.0

Card	Part Number	Rev	Serial Number	Type	DB	GPL	GPL Version
1101	870-1275-01	W	10245689323	DSM	4096M	VSCCP	027-010-000
1102	Empty						
1103	870-1788-03	A	10234658345	TSM	128M	GLS	027-010-000
1104	Empty						
1105	870-1339-06	A	10274568974	LIMATM	-	ATMANSI	027-010-000
1106	Empty			DSM		VSCCP	
1107	Empty						
1108	870-1456-05	A	10204764378	DCM	512M	SS7IPGW	027-010-000
1109	MUX					BPHMUX	027-345-000
1110	MUX					BPHMUX	027-345-000
1111	870-1788-05	A	10205734657	MCPM	2048M	MCP	027-010-000
1112	870-1789-04	A	10302135627	LIMDS0	-	SS7ANSI	027-010-000
1113	870-2360-01	A	10346357678	GPSM	1024M	EOAM	025-340-000
1114	TDM						
1115	Unavailable			GPSM		EOAM	
1116	Unavailable						
1117	MDAL						
1118	Empty						
1201	870-1339-06	A	10245667974	LIMATM	-	ATMANSI	027-010-000
1202	Empty						
1203	870-1789-04	A	10302135777	LIMDS0	-	SS7ANSI	027-010-000
1204	Empty						
1205	870-1275-01	W	10246789323	DSM	4096M	VSCCP	027-010-000
1206	Empty			DCM		SS7IPGW	
1207	Empty			DCM	512M	SS7IPGW	027-010-000
1208	870-1456-05	A	10204764222	DCM	512M	BPHMUX	027-345-000
1209	MUX					BPHMUX	027-345-000
1210	MUX					MCP	027-010-000
1211	870-1788-05	A	10205737777	MCPM	2048M	MCP	027-010-000
1212	870-1788-03	A	10234632455	TSM	128M	GLS	027-010-000
1213	Empty						
1214	Auto-Inhibit			IPSM		IPS	
1215	870-1788-05	A	10205736734	MCPM	2048M	MCP	027-010-000
1216	870-1789-04	A	10302135655	LIMDS0	-	SS7ANSI	027-010-010
1217	Empty						
1218	Empty						

.

```
.
6118 870-2453-06 A 10444135655 LIMATM - ATMANSI 028-010-000
```

```
Command Completed.
```

```
;
```

Legend

FRAME—Frame ID for the control shelf or an extension shelf

POWER THRESHOLD—The power threshold (in Amps or Milliamps and Watts) at which an alarm is generated to indicate that power consumption is approaching a maximum allowed level. (See the **ent-frm-pwr** command.)

POWER CONSUMPTION—The current calculated power consumption (in Amps or Milliamps and Watts) of the frame or card

CARD—Card Location

PART NUMBER—Board Part Number

REV—Board Part Number revision

SERIAL NUMBER—Card serial number

TYPE—Card type

DB—Daughterboard memory

GPL—The GPL that is running on the card

GPL VERSION—The version of the GPL that is running on the card

rtrv-stpopts

Retrieve STP Options

Use this command to retrieve the current value of the system's node-level processing option indicators maintained in the system's options table.

Keyword: **rtrv-stpopts**

Related Commands: **chg-stpopts**

Command Class: Database Administration

Parameters

This command has no parameters.

Example

```
rtrv-stpopts
```

Dependencies

None

Notes

The timer output for this command is in milliseconds, even though the timer could have been entered in seconds on the **chg-stpopts** command.

Output

The following example displays MTP STP options with no affecting features on. Certain features that are shown in other examples control changes and additional options in this option list:

rtrv-stpopts

```
rlghncxa03w 04-04-17 16:02:05 EST EAGLE 31.6.0
STP OPTIONS
-----
MTPT31CTL          1
MTPLTI             yes
MTPLTCTDPCQ        3
MTPLTST            10000
MTPDPCQ            2000
TFATFRPR           1000
MTPLPRST           yes
MTPT10ALT          30000
UIMRD              yes
SLSCNV             perl5
CRITALMINH         yes
DISPACTALMS        no
NPCFMTI            14-0-0-0
RPTLNPMRSS         yes
RANDSLS            off
GR2878RGLBL       yes
RSTRDEV            on
HSCLKSRC            RS422
HSCLKGAIN          LONGHAUL
;
```

The following example displays all MTP STP options. The following list indicates which options appear in the output when the associated features are on:

NOTE: All options will not appear in actual output, because all features that cause these options to appear cannot be on in the system at the same time.

- Cluster Routing and Management Diversity (CRMD) feature—MTPXLQ, MTPXLET, MTPXLOT
- MTP Restart (MTPRS or ITUMTPRS) feature—MTPRSI, MTPRSIT
- 6000, 7000, or 8000 Routesets feature—MTPDPCQ=6000 or 7000 or 8000
- GSM MAP Screening (GSMSCRN) feature—GSMDFLT, GSMDECERR
- GSM Mobile Number Portability (G-Port) feature, INAP Number Portability (INP) feature, or GSM Flexible Numbering (G-Flex) feature—DEFCC, DEFNDC, DSMAUD
- GSM Flexible Numbering (G-Flex) feature—ANSIGFLEX
- Network Security (NSE) feature—SECMTPMATE, SECMTPSID, SECMTPSNM, SECSCCPSCMG
- ANSI-ITU-China SCCP Conversion (SCCP Conversion) feature—CNVCGDA, CNVCGDI, CNVCGDN, CNVCGDN24, GTCNVDFLT

rtrv-stpopts

```
rlghncxa03w 04-04-17 16:02:05 EST EAGLE 31.8.0
STP OPTIONS
-----
MTPT31CTL          1
MTPLTI             yes
MTPLTCTDPCQ        3
MTPLTST            10000
```

MTPXLQ	500
MTPXLET	0100
MTPXLOT	90%
MTPDPCQ	8000
TFATFRPR	1000
MTPRSI	yes
MTPRSIT	5000
MTPLRST	yes
MPT10ALT	30000
UIMRD	yes
SLSCNV	perl
CRITALMINH	yes
DISPACTALMS	no
NPCFMTI	14-0-0-0
GSMDFLT	PASS
GSMDECERR	PASS
DEFCC	49
DEFNDC	177
DSMAUD	no
RPTLNPMRSS	yes
RANDSLS	all
GR2878RGLBL	no
RSTRDEV	on
SECMTPMATE	off
SECMTPSID	off
SECMTPSNM	notify
SECSCCPSCMG	notify
CNVCGDA	yes
CNVCGDI	yes
CNVCGDN	yes
CNVCGDN24	yes
GTCNVDFLT	yes
ANSIGFLEX	yes
HSCLKSRC	RS422
HSCLKLL	LONGHAUL

;

Legend

MTPT31CTL—MTP T31 congestion trigger level. The signaling link congestion level at which the system starts the level 3 t31 timer. When the level 3 t31 timer expires, the associated signaling link is removed from service for realignment.

MTPLTI—MTP loop test indicator. Specifies whether the MTP loop detection procedures are enabled or disabled at the system.

MTPLTCTDPCQ—MTP loop test congestion trigger DPC quantity. The number of most frequently occurring DPCs to which the MTP loop test messages are to be sent when the MTP loop test is triggered by congestion.

MTPLTST—MTP loop test supervision timer. The amount of time, in milliseconds, that the MTP loop test detection procedures run when started.

MTPXLQ—MTP x-list quantity. The number of dynamic status exception list (x-list) entries the system maintains.

MTPXLET—MTP x-list expiration time. The maximum amount of time the system maintains an unreferenced dynamic status exception list (x-list) entry.

MTPXLOT—MTP x-list occupancy threshold. The dynamic status exception list (x-list) occupancy threshold at which the system raises a minor alarm. The threshold is expressed as a percentage of space available.

MTPDPCQ—MTP destination point code quantity. The maximum number of DPCs that can be provisioned in the system.

TFATFRPR—TFA/TFR pacing rate. The amount of time, in milliseconds, between partial broadcasts of up to 20 percent increments of the number of TFAs/TCAs or TFRs/TCRs to be broadcast by the STP when an affected destination becomes accessible using its primary route rather than an alternate route. The STP uses this pacing to prevent congestion on the newly-recovered linksets.

MTPRSIT—MTP Restart isolation timer. The minimum duration of node isolation, in milliseconds, before the MTP Restart procedure is deemed necessary.

MTPRSI—MTP Restart indicator. Specifies whether ANSI or ITU MTP Restart procedures are enabled or disabled at the STP.

MTPLPRST—MTP low priority route set test. Specifies whether low priority route set polling is enabled or disabled at the STP.

MTPT10ALT—MTP T10 alternate timer. Specifies the interval at which the STP performs a route set test on low priority routes.

SLSCNV—Per node SLS conversion indicator. Specifies whether SLS conversion is on, off, or performed per linkset (perls).

UIMRD—Unsolicited Information Message (UIM) redirect. Specifies whether specific UIMs are redirected to this output group.

CRITALMINH—Indicates whether the option that allows the inhibiting of critical alarms is enabled (yes) or disabled (no).

DISPACTALMS—Indicates whether to display active or total alarms in the alarm status area of the VT320 screen.

NPCFMTI—Defines how the ITU national point code is entered into the database and how it is displayed in any outputs from the system.

GSMDFLT—Indicates whether the GSM MAP screening default action is set to pass or discard.

GSMDECERR—Indicates whether the GSM MAP screening decode error action is set to pass or discard.

DEFCC—Defines the default country code.

DEFNDC—Defines the default network destination code.

DSMAUD—Indicates whether the DSM audit is running (on) or disabled (off).

RANDSLS—Displays the Random SLS setting.

RTPLNPMRSS—Displays the setting for reporting or suppressing UIM 1049 for LNP MR with missing subsystems.

GR2878RGLBL—Yes = use GR-2878-CORE HSL labels and data in SEAS output. No = HSL labels and data are not supported to SEAS.

RSTRDEV—Allow or disable restoration of device states when an **init-sys** command is executed, an OAM role changes, or a card reload occurs.

SECMTPMATE—Indicates Network Security screening for MTP messages received by an STP on a non-C-Link, with an OPC equal to the SID (True, Adjacent, or Capability) point code of its mate.

SECMTPSID—Indicates Network Security screening for MTP messages received at MTP3 containing an OPC equal to its own SID (OPC that is the True, Secondary, or Capability point code entered in the **chg-sid** command) that is not a route-set-congestion-message. The EAGLE 5 ISS should not receive a message with its own OPC unless the message is a result of a circular route test or is an SLTM when the far end is in loopback. (SLTM messages are not checked.)

SECMTPSNM—Indicates Network Security screening for MTP SNM messages. The EAGLE 5 ISS should not receive an MTP network management message unless:

- The OPC is an adjacent point code. (For all link types, this rule does not apply to UPU, TFC, and RCT messages.)
- The EAGLE 5 ISS has a route to the OPC of the MTP network management message on the linkset which the message was received.
- The EAGLE 5 ISS has a route to the destination field in the message (if applicable to the concerned message) on the linkset which the message was received. (For all link types, this rule is not applicable to RST messages.)

SESCCPSCMG—Indicates Network Security screening for SCCP SCMG messages. This value applies only to SSP and SOR messages. SSA, SST, SOG, SBR, SNR and SRT messages are not affected. The EAGLE 5 ISS should not receive an SCCP network management message unless:

- The EAGLE 5 ISS has a route to the OPC of the SCMG message on the linkset on which the message was received.
- The EAGLE 5 ISS has a route to the Affected Point Code (also called the Concerned Point Code in EAGLE 5 ISS) in the message on the linkset on which the message was received.

CNVCGDA—Indicates whether or not to discard the CGPA PC in ANSI SCCP messages if the PC or ALIAS PC of the destination network type is not defined.

CNVCGDI—Indicates whether or not to discard the CGPA PC in ITU-I SCCP messages if the PC or ALIAS PC of the destination network type is not defined.

CNVCGDN—Indicates whether or not to discard the CGPA PC in ITU-N SCCP messages if the PC or ALIAS PC of the destination network type is not defined.

CNVCGDN24—Indicates whether or not to discard the CGPA PC in 24-bit ITU-N SCCP messages if the PC or ALIAS PC of the destination network type is not defined.

ANSIGFLEX—Indicates enable or disable of ANSI G-Flex to execute at 1700 TPS per DSM card

GTcnvDflt—Indicates enable or disable of routing of SCCP messages using system defaults when an appropriate entry is not found in the Default GT Conversion table.

HSCLKLL—High speed master clock line length option (SHORTHAUL, LONGHAUL)

HSCLKSRC—High speed master clock source

rtrv-subnetid

Retrieve Subnet ID

Use this command to retrieve a list of Subnet ID entries from the SUBNETID table, for the ISUP NP with EPAP feature.

Keyword: rtrv-subnetid

Related Commands: dlt-subnetid, ent-subnetid

Command Class: Database Administration

Parameters

:subnetnum= (optional)

Subnet Number

Range: 1-5

Example

```
rtrv-subnetid
```

```
rtrv-subnetid : subnetnum = 1
```

Dependencies

The ISUP NP with EPAP feature must be enabled before this command can be entered.

Notes

None.

Output

When the command is entered with no parameter, the Subnet IDs for Subnet number 1 are listed in numerical order, followed by the Subnet IDs for Subnet number 2 in numerical order, and so on.

rtrv-subnetid

```
tekelecstp 04-09-21 16:11:21 EST EAGLE 31.11.0
```

ID	Subnet Number
886932	1
886936	1
886935	2
886938	2
886939	2

Subnetidlen = 6

SUBNETID table is (5 of 50) 3% full

;

When a Subnet number is specified, the Subnet IDs for the specified Subnet number are listed in numerical order. The table capacity line shows the total number of entries in use, not just the number of entries displayed.

rtrv-subnetid:subnetnum=2

```
tekelecstp 04-09-21 16:13:54 EST EAGLE 31.11.0
```

ID	Subnet Number
886935	2
886938	2
886939	2

Subnetidlen = 6

SUBNETID table is (5 of 50) 3% full

;

rtrv-t1

Retrieve T1 Information

Use this command to retrieve information for a specified T1 interface or for all T1 interfaces that have been defined by the **ent-t1** command for an E1/T1 card, an HC MIM card, or an E5-E1T1 card that is used as a T1 card. The following information can be retrieved: T1 port number, encoding/decoding, timing source, framing, channel bridging, and line length.

Keyword: **rtrv-t1**

Related Commands: **chg-t1, dlt-t1, ent-t1, tst-t1**

Command Class: Database Administration

Parameters

:loc= (optional)

The card location of a T1 card, as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Default: If not specified, all T1 card locations are listed.

:t1port= (optional)

T1 port number. The value must be a T1 port that has already been configured on the T1 card specified in the **loc** parameter.

Range: 1-8

Ports 3-8 are valid only for HC-MIM and E5-E1T1 cards.

Default: If not specified, all T1 ports are listed.

Example

```
rtrv-t1
```

```
rtrv-t1:loc=1307:t1port=2
```

```
rtrv-t1:loc=1311:t1port=1
```

Dependencies

The **loc** and **t1port** parameters must be specified together, if any parameters are specified for the command.

The specified card location (**loc** parameter) must be equipped.

The card specified by the **loc** parameter must be a **limt1** card type.

The specified port (**t1port** parameter) on the card in the specified card location (**loc** parameter) must already have a defined T1 interface.

Notes

None.

Output

rtrv-t1

```

rlghncxa03w 03-03-20 09:07:58 EST EAGLE 31.3.0
LOC  T1PORT ENCODE  T1TSEL  FRAMING  LL
1211 1      ami     external  esf      10
1307 2      b8zs    line      sf       133
1311 1      ami     external  esf      500

```

;

rtrv-t1:loc=1211:t1port=1

```

rlghncxa03w 03-03-20 09:07:58 EST EAGLE 31.3.0
LOC  T1PORT ENCODE  T1TSEL  FRAMING  LL
1211 1      ami     external  esf      133

```

```

TS1 1211,B2  TS9  -----  TS17 -----
TS2 1211,B   TS10 -----  TS18 -----
TS3 -----  TS11 -----  TS19 -----
TS4 -----  TS12 -----  TS20 -----
TS5 -----  TS13 -----  TS21 -----
TS6 -----  TS14 -----  TS22 -----
TS7 -----  TS15 -----  TS23 -----
TS8 -----  TS16 -----  TS24 -----

```

;

rtrv-t1:loc=1311:t1port=1

```

rlghncxa03w 03-03-20 09:07:58 EST EAGLE 31.3.0
LOC  T1PORT ENCODE  T1TSEL  FRAMING  LL
1211 1      ami     external  esf      100

```

```

TS1 1311,A   TS9  1313,B   TS17 -----
TS2 1311,A1  TS10 -----  TS18 -----
TS3 1311,B1  TS11 -----  TS19 -----
TS4 1311,B3  TS12 1313,B3  TS20 -----
TS5 1312,A   TS13 -----  TS21 -----
TS6 -----  TS14 -----  TS22 -----
TS7 1313.A   TS15 -----  TS23 -----
TS8 1313.A   TS16 -----  TS24 -----

```

;

The following example includes information for HC-MIM T1 cards. Ports 3 and 4, 5 and 6, and 7 and 8 on the card in location 1311 are channel-bridged pairs.

rtrv-t1

```

rlghncxa03w 05-04-20 09:07:58 EST EAGLE5 33.0.0
LOC  T1PORT ENCODE  T1TSEL  FRAMING  LL  CHANBRDG
1211 1      ami     external  esf      10  -----
1307 2      b8zs    line      sf       133  -----
1307 6      b8zs    line      sf       133  -----
1311 1      ami     external  esf      500  -----
1311 2      ami     external  esf      500  -----
1311 3      ami     external  esf      500  MASTER
1311 4      ami     external  esf      500  SLAVE
1311 5      ami     RECOVERED  esf      500  MASTER
1311 6      ami     RECOVERED  esf      500  SLAVE
1311 7      ami     recovered  sf       500  MASTER
1311 8      ami     recovered  sf       500  SLAVE

```

;

The following example shows information for the HC-MIM T1 card in location 1307.

rtrv-t1:loc=1307:t1port=7

```

rlghncxa03w 05-03-20 09:07:58 EST EAGLE 33.0.0
LOC  T1PORT ENCODE  T1TSEL  FRAMING  LL  CHANBRDG
1307 7      b8zs    line      sf       133  -----

```

```

TS1 1307,A    TS9 1307,B18 TS17 -----
TS2 1307,A1   TS10 ----- TS18 -----
TS3 1307,B1   TS11 ----- TS19 -----
TS4 1307,B3   TS12 1307,B31 TS20 -----
TS5 1307,A12  TS13 ----- TS21 -----
TS6 -----   TS14 ----- TS22 -----
TS7 1307,A21  TS15 ----- TS23 -----
TS8 1307,A31  TS16 ----- TS24 -----

```

;

The following example shows information for port 5 on the card in location 1311. Port 5 is the master port of a channel-bridged pair of ports (5 and 6) on the card.

rtrv-t1:loc=1311:t1port=5

```

rlghncxa03w 05-04-20 09:07:58 EST EAGLE5 33.0.0
LOC  T1PORT ENCODE T1TSEL FRAMING LL  CHANBRDG
1311 5      ami    RECOVERED esf    500 MASTER

```

```

TS1 1311,A    TS9 1311,B18 TS17 -----
TS2 1311,A1   TS10 ----- TS18 -----
TS3 1311,B1   TS11 ----- TS19 -----
TS4 1311,B3   TS12 1311,B31 TS20 -----
TS5 1311,A12  TS13 ----- TS21 -----
TS6 -----   TS14 ----- TS22 -----
TS7 1311,A21  TS15 ----- TS23 -----
TS8 1311,A31  TS16 ----- TS24 -----

```

;

The following example shows information for port 6 on the card in location 1311. Port 6 is channel bridged with port 5 for data pass-through.

rtrv-t1:loc=1311:t1port=6

```

rlghncxa03w 05-04-20 09:07:58 EST EAGLE5 33.0.0
LOC  T1PORT ENCODE T1TSEL FRAMING LL  CHANBRDG
1311 6      B8ZS   recovered SF     135 SLAVE

```

Card 1311, port 6 is channel bridged with port 5 for data pass through.

;

Legend

LOC—T1card location in an EAGLE 5 ISS shelf.

T1PORT—T1 port number on an T1 card.

ENCODE—Indicator for use of B8ZS or AMI encoding/decoding.

T1TSEL—T1 timing source indicator (**external** = master timing source; **line** = slave timing source; **recovered** = the timing source for the even-numbered port in a channel bridged pair is recovered from the odd-numbered port of the pair).

FRAMING—Framing format (SF or ESF).

LL—Line length; T1 cable length in feet between the EAGLE 5 ISS and the connecting node

CHANBRDG—Indicates whether an odd numbered port is not channel bridged with its adjacent even numbered port for non-signaling data pass through (dashes), or the port is the odd-numbered channel bridged port on the card (MASTER), or the port is the even-numbered channel bridged port on the card (SLAVE) on an HC-MIM or E5-E1T1 card.

TSx—Timeslot.

rtrv-tbl-capacity**Retrieve Table Capacity**

Use this command to retrieve table use capacity summary information. For each table listed, the number of table entry elements in use and the total allowed number of table elements is presented, along with a percent (%) full value.

Keyword: **rtrv-tbl-capacity**

Related Commands: **rept-stat-xlist**, **rtrv-appl-rtkey**, **rtrv-appl-sock**, **rtrv-as**, **rtrv-asp**, **rtrv-assoc**, **rtrv-dstn**, **rtrv-gta**, **rtrv-ls**, **rtrv-map**, **rtrv-scrset**, **rtrv-slk**, **rtrv-spc**, **rtrv-x25-dstn**, **rtrv-x25-slk**

Command Class: Database Administration

Parameters

This command has no parameters.

Example

rtrv-tbl-capacity

Dependencies

None

Notes

This command can be canceled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

XLIST table information is shown only if the CRMD feature is ON.

Secondary Point Code (SPC) table information is shown only if the MPC feature is ON.

If the EGTT feature is ON then table name is GTA instead of GTT.

Additional information for each listed table can be displayed using the commands listed in Table 5-68.

Though the ASP table entries are now part of the IPAPSOCK table, EAGLE 5 ISS command entry and output still appear as though they are separate tables. The **rtrv-tbl-capacity** command shows the number of ASPs in the 4000-entry IPAPSOCK table.

Table 5-68. Retrieve Commands for Additional Table Information

Command	Table name	Description of table
rept-stat-xlist	XLIST	Destination - Routeset Extension
rtrv-appl-sock	IPAPSOCK	IP Socket/Association
rtrv-appl-rtkey	IPRTKEY	IP Routing Key
rtrv-as	AS	Application Server
rtrv-assoc	IPAPSOCK	IP Socket/Association
rtrv-dstn	DSTN	Destination Routeset, Exception Routeset
rtrv-gta	GTA	Global Title Address
rtrv-gtt	GTT	Global Title Translation

Table 5-68. Retrieve Commands for Additional Table Information

Command	Table name	Description of table
rtrv-ip-lnk	IP-LNK	Internet Process Link
rtrv-ls	LS	Link Set
rtrv-map	MAP	Mated Application
rtrv-mrn	MRN	Mated Relay Node
rtrv-scrset	SCRSET	Gateway Screening Screen Set
rtrv-slk	SLK	Signal Link
rtrv-spc	SPC	Secondary Point Code
rtrv-x25-dstn	X25-DSTN	X.25 Destination
rtrv-x25-slk	X25-SLK	X.25 Signal Link

The MRN table capacity value is adjusted to subtract any point code values allocated to support the SCCP-SERV reroute service.

Output

The following example shows the output for the minimum table sizes in the system:

rtrv-tbl-capacity

```
tekelecstp 04-04-02 07:35:33 EST EAGLE 31.6.0

DSTN      table is (    200 of    2000) 10% full
XLIST     table is (      0 of     500)  0% full
X25-DSTN  table is (      0 of    1024)  0% full
SPC       table is (      0 of     40)   0% full
LS        table is (   512 of    1024) 50% full
SLK       table is (    48 of    1200)  4% full
X25-SLK   table is (      0 of     256)  0% full
IP-LNK    table is (    10 of     500)  2% full
MAP       table is (   256 of    1025) 25% full
GTT       table is (  2700 of  270000)  1% full
SCRSET    table is (    50 of     255) 20% full
AS        table is (     5 of     250)  2% full
ASP       table is (     5 of    4000)  2% full
RTEKEY    table is (     2 of    2500)  1% full
IPAPSOCK  table is (   324 of    4000)  8% full
;
```

The following example shows the output for the maximum table sizes in the system. For the DSTN, SLK, GTT, and MAP tables, maximum values depend on the enabled feature quantity value applicable to the table in the system.

rtrv-tbl-capacity

```
tekelecstp 04-04-02 07:35:33 EST EAGLE 31.8.0

DSTN      table is (    600 of   8000) 10% full
XLIST     table is (      0 of     500)  0% full
X25-DSTN  table is (      0 of    1024)  0% full
SPC       table is (      0 of     40)   0% full
LS        table is (   512 of    1024) 50% full
SLK       table is (  1501 of    1500) 75% full
X25-SLK   table is (      0 of     256)  0% full
IP-LNK    table is (    10 of     500)  2% full
MAP       table is (  1500 of    3000) 50% full
GTT       table is (1000000 of 1000000) 100% full
SCRSET    table is (    25 of     255) 10% full
AS        table is (     5 of     250)  2% full
ASP       table is (     5 of    4000)  2% full
RTEKEY    table is (     2 of    2500)  1% full
IPAPSOCK  table is (   324 of    4000)  8% full
;
```

In the following example, the MRN table limit is 3000 entries and 12 entries are used for SCCP-SERV reroute.

rtrv-tbl-capacity

```
tklcl090701 06-05-24 14:22:01 EST EAGLE 34.3.0

DSTN      table is (   5940 of   6000) 99% full
XLIST     table is (      0 of     500)  0% full
X25-DSTN  table is (      0 of    1024)  0% full
SPC       table is (     4 of     40) 10% full
LS        table is (   738 of    1024) 72% full
SLK       table is (   360 of    2000) 18% full
X25-SLK   table is (      0 of     256)  0% full
IP-LNK    table is (     6 of     512)  1% full
MAP       table is (   336 of    1024) 33% full
```

```

GTA      table is ( 269999 of 269999) 100% full
SSNSELID table is (    0 of 10000)  0% full
SCRSET   table is (   40 of   255)  16% full
RTEKEY   table is (    0 of  1000)  0% full
APPLSOCK table is (    0 of  4000)  0% full
AS       table is (    0 of   250)  0% full
MRN      table is (   768 of  2988)  26% full
SCCPSRV  table is (    12 of    96)  13% full

```

;

In the following example, the MRN table limit is 6000 entries and 12 entries are used for SCCP-SERV reroute.

rtrv-tbl-capacity

```
tklc1090701 06-05-24 14:22:01 EST EAGLE 34.3.0
```

```

DSTN      table is (   5940 of   6000)  99% full
XLIST     table is (    0 of    500)  0% full
X25-DSTN  table is (    0 of   1024)  0% full
SPC       table is (    4 of    40)  10% full
LS        table is (   738 of   1024)  72% full
SLK       table is (   360 of   2000)  18% full
X25-SLK   table is (    0 of    256)  0% full
IP-LNK    table is (    6 of    512)  1% full
MAP       table is (   336 of   1024)  33% full
GTA       table is ( 269999 of 269999) 100% full
SSNSELID  table is (    0 of  10000)  0% full
SCRSET    table is (   40 of   255)  16% full
RTEKEY    table is (    0 of  1000)  0% full
APPLSOCK  table is (    0 of  4000)  0% full
AS        table is (    0 of   250)  0% full
MRN       table is (   768 of  5988)  13% full
SCCPSRV   table is (    12 of    96)  13% full

```

;

Trm(#4) GPSM Enter UI command or 'exit':

rtrv-th-alm

Retrieve Alarm Thresholds

Use this command to retrieve following values

- Alarm threshold values for the system SCCP TPS
- Level 1 and Level 2 thresholds for generating alarms when provisioning levels of the TN, LRN, and LNP databases approach or exceed predetermined occupancy limits
- Thermal thresholds for generating alarms when HC-MIM, E5-E1T1, and E5-ENET card thermal limits are approached or exceeded

Keyword: rtrv-th-alm

Related Commands: chg-th-alm, rept-stat-sccp

Command Class: Database Administration

Parameters

This command has no parameters.

Example

rtrv-th-alm

Dependencies

Level 1 threshold values must be less than their corresponding level 2 threshold values

Notes

None

Output**rtrv-th-alm**

```
tekelecstp 06-05-23 13:14:44 EST EAGLE 35.0.0
Thermal Alarm Level 1:          92%
Thermal Alarm Level 2:          99%
SCCP TPS Threshold:             80%
SCCP Calculation Method:        N
LNP TN DB Alarm Level 1:        80%
LNP TN DB Alarm Level 2:        95%
GTT SCCP Service Alarm Level 1: 10%
GTT SCCP Service Alarm Level 2: 20%
Non-GTT SCCP Service Alarm Level 1: 10%
Non-GTT SCCP Service Alarm Level 2: 20%
RTRV-TH-ALM: MASP A - COMPLTD.
```

;

rtrv-th-sccp**Retrieve SCCP Alarm Thresholds**

Use this command to retrieve the value used for the system SCCP TPS (transactions-per-second) threshold alarm. An alarm triggers when the TPS for the EAGLE 5 ISS system is greater than the value set by the **chg-th-sccp** command.

NOTE: This command is obsolete. Use the rtrv-th-alm command for these functions.

Keyword: rtrv-th-sccp

Related Commands: chg-th-sccp, rept-stat-sccp

Command Class: Database Administration

Parameters

This command has no parameters.

Example

```
rtrv-th-sccp
```

Dependencies

None

Notes

None

Output**rtrv-th-sccp**

```
rlghncxa03w 03-03-07 11:43:13 EST EAGLE 31.3.0
Command entered at terminal #4.
SCCP TPS Threshold: 80 %
RTRV-TH-SCCP: MASP A - COMPLTD.
```

;

rtrv-trbl**Retrieve Trouble**

Use this command to display detailed information for one or more troubles that are currently logged into the system.

Keyword: **rtrv-trbl**

Related Commands: **act-alm-trns, dact-alm-trns, rept-stat-alm, rept-stat-clk, rept-stat-trbl, rls-alm, rtrv-obit**

Command Class: System Maintenance

Parameters

:loc= (mandatory)

The address of the card that is running the OAM from which logged trouble reports are to be displayed.

Range: **1113, 1115**

:mode= (optional)

Display mode

Range: **c, m**

c—Continuous mode; shows troubles already logged and new troubles as they occur.

m—Manual mode; shows troubles on demand only

Default: **c**

:num= (optional)

The number of entries to be shown. This parameter determines how many records you want to display (potentially within a given TN range). Use this parameter to prevent inadvertent displays of extremely large amounts of information.

Range: **1-12000000**

1-50 if the **force=yes** parameter is not specified

1-12000000 if the **force=yes** parameter is specified

Default: **1**—if only the **tn** parameter is specified and the **etn** parameter is not specified

50—all other cases

:num= (optional)

Indicates how many troubles to display.

Range: **1-99**

Default: **99**

Example

rtrv-trbl:loc=1113:num=2

Dependencies

At least one trouble must be in the trouble log, or the command is rejected.

Only one **rtrv-trbl** or **rtrv-obit** command can be in progress at a time.

If the **mode** parameter is specified without the **num** parameter, the entire log is displayed.

The card specified by the **loc** parameter must be **1113** or **1115**.

If the **loc** parameter specifies the card that is running the standby OAM, that card must be available.

Notes

When a trouble is generated in the system, it is logged into the RAM storage area of the active OAM. Each OAM can store up to 99 troubles in a queue. If the OAM resets, logged troubles are lost.

Output

The output from this command should be reviewed with a member of the Tekelec Technical Services Team. You can contact Tekelec Technical Services at (888) FOR-TKLC.

rtrv-trbl:loc=1113:num=2

```
rlghncxa03w 03-03-07 08:47:43 EST EAGLE 31.3.0
Card 1113 Module 0000 Mod_loc 0 Class 0000 Severity 0
Report Date:00-00-00 Time:00:00:00
```

```
rlghncxa03w 03-03-07 08:47:43 EST EAGLE 31.3.0
Card 1108 Module 8001 Mod_loc 6 Class 100A Severity 1
Report Date:03-03-04 Time:09:19:59
```

;

rtrv-trbltx

Retrieve Trouble Text Table Entries

Use this command to retrieve Alarm and UIM message information including MRN (message reference number), level (for Alarms), Output Group, and text.

The default report displays all Alarms (in numerical order) and then all UIMs.

The optional parameters can be used to:

- Display a range of Alarms or UIMs (ranges spanning both Alarms and UIMs are not supported)
- Search for Alarms, UIMs, or both message types matching a specific Output Group
- Sort all entries by Output Group

Keyword: rtrv-trbltx

Related Commands:

Command Class: Database Administration

Parameters

:enum= (optional)

The ending Message Reference Number (MRN) when specifying a range.

Range: 1-999 for Alarms, 1000-1499 for UIMs

Default: when **enum** is not specified,

If **snum** is specified, the **enum** value defaults to the specified **snum** value.

If **snum** is not specified and **type=all**, **type=uim**, or **type** not specified, the **enum** value defaults to **1499**

If **snum** is not specified and **type=alarm**, the **enum** value defaults to **999**

:outgrp= (optional)

The Output Group to sort or filter the Alarm/UIMs on.

Range: appserv, appss, card, clk, db, dbg, gtt, gws, link, lnldb, lnpsub, meas, mon, mps, pu, sa, seas, slan, sys, traf

appserv — Application Server

appss — Application Subsystem

card — Card

clk — Clock

db — Database

dbg — Debug
gtt — GTT Maintenance
gws — GWS Maintenance
link — Link Maintenance
lnpdb — LNP Database
lnpsub — LNP Subsystem
meas — Measurements Maintenance
mon — Monitoring (Sentinel or IMF) Maintenance
mps — MPS Maintenance
pu — Program Update
sa — System Administration
seas — SEAS (Sentinel or IMF)
slan — SLAN Maintenance
sys — System Maintenance
traf — Traffic
all — retrieve information for all Output Groups

Default: No sorting or filtering is done on Output Groups.

:snum= (optional)

A single Message Reference Number (MRN), or the starting MRN when specifying a range.

Range: 1-999 for Alarms, 1000-1499 for UIMs.

Default: All message entries for the specified **type** are displayed.
 For **type=all**, **type=alarm**, or **type** not specified—**snum** Default: 1
 For **type=uim**—**snum** Default: 1000

:type= (optional)

The type of trouble text entry—Alarm, UIM, or both types—to display.

Range: **all**, **alarm**, **uim**
all — Both types are displayed
alarm — Only Alarm entries are displayed
uim — Only UIM entries are displayed

Default: **all**

Example

```

rtrv-trbltx
rtrv-trbltx:type=alarm
rtrv-trbltx:type=uim
rtrv-trbltx:outgrp=sys
rtrv-trbltx:type=alarm:outgrp=all
rtrv-trbltx:snum=3
rtrv-trbltx:snum=1002
  
```

Dependencies

If **enum** is specified, **snum** must be specified in the command.

The specified **enum** value must be greater than the specified **snum** value.

The specified **enum** value must be in the same range as the specified **snum** value (1-999 for Alarms and 1000-1499 for UIMs). The range cannot span both types.

The specified **snum** and **enum** values must be in the range of the specified **type** (1-999 for Alarms and 1000-1499 for UIMs).

When the **outgrp** parameter is specified, the **snum** and **enum** parameters cannot be specified.

Notes

This command can be canceled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

To display a single Alarm or UIM, enter the Alarm or UIM MRN as the value of the **snum** parameter. Either do not specify the **enum** parameter or specify the **enum** parameter with the same value as the **snum** value.

If an unused MRN is specified as an **snum** parameter value, the header information is displayed without any Output Group header or MRN information.

If an **snum/enum** range is specified, and there are unused MRNs within that range, only the used MRNs are displayed.

Output

The following example shows output when the command has no parameters. All entries are not shown; the list is long:

rtrv-trbltx

```
ncralstp00001 03-07-16 10:15:29 EST EAGLE 31.3.0
```

Alarm Report

MRN	LEVEL	OUTPUT	GROUP	TEXT
0001	MAJR	SYS		Card has reset
0002	MINR	SYS		Card is not running approved GPL
0003	NONE	SYS		Alarm cleared for GPL
.				
.				
.				
0912	NONE	SYS		Dynamic database is now consistent

UIM Report

MRN	OUTPUT	GROUP	TEXT
1000	SYS		MTP rcvd UPU - user part is not SCCP
1001	SYS		MTP rcvd Transfer Controlled (TFC)
1002	SYS		MTP rcvd invalid TFC - status 0
.			
.			
.			
1499	SYS		Invalid MRN detected

END OF RTRV-TRBLTX REPORT.

;

The following example shows the display with **type=alarm**. All entries are not shown; the list is long:

rtrv-trbltx:type=alarm

```
ncralstp00001 03-07-16 10:15:29 EST EAGLE 31.3.0
```

Alarm Report

MRN	LEVEL	OUTPUT	GROUP	TEXT
0001	MAJR	SYS		Card has reset
0002	MINR	SYS		Card is not running approved GPL
0003	NONE	SYS		Alarm cleared for GPL
.				
.				
.				
0912	NONE	SYS		Dynamic database is now consistent

END OF RTRV-TRBLTX REPORT.

;

The following example shows the display with **type=uim**. All entries are not shown; the list is long:

rtrv-trbltx:type=uim

```
ncralstp00001 03-07-16 10:15:29 EST EAGLE 31.3.0
```

UIM Report

MRN	OUTPUT	GROUP	TEXT
1000	SYS		MTP rcvd UPU - user part is not SCCP
1001	SYS		MTP rcvd Transfer Controlled (TFC)

```

          1002          SYS          MTP rcvd invalid TFC - status 0
          .
          .
          1499          SYS          Invalid MRN detected
END OF RTRV-TRBLTX REPORT.
;

```

The following example shows the display with **outgrp=all**. The complete list of Alarms and UIMs is not shown; it is a long list; examples from each type and several Output Groups are shown.

NOTE: The output for outgrp=all:type=alarm includes all Output Groups in the Alarm Report only; the output for outgrp=all:type=uim includes all Output Groups in the UIM Report only.

rtrv-trbltx:outgrp=all

```
rlghncxa03w 06-05-27 08:15:10 EST EAGLE 35.0.0
```

Alarm Report

MRN	LEVEL	OUTPUT GROUP	TEXT

Output Group - SYS			
0001	MAJR	SYS	Card has reset
0002	MINR	SYS	Card is not running approved GPL
.			
.			
.			
0912	NONE	SYS	Dynamic database is now consistent
.			
.			
.			
Output Group - LINK			
0155	MINR	LINK	STPLAN connection unavailable
0156	NONE	LINK	STPLAN connection available
.			
0479	NONE	LINK	Link not Monitored
UIM Report			
MRN		OUTPUT GROUP	TEXT

Output Group - SYS			
1000		SYS	MTP rcvd UPU - user part is not SCCP
1001		SYS	MTP rcvd Transfer Controlled (TFC)
.			
.			
.			
1499		SYS	Invalid MRN detected
.			
.			
.			
Output Group - LINK			
13nn		LINK	Example text

```
END OF RTRV-TRBLTX REPORT.
```

```
;
```

The following example shows the display for **outgrp=sys**. All entries are not shown; the list is long:

rtrv-trbltx:type=alarm:outgrp=sys

```
ncralstp00001 03-07-16 10:15:29 EST EAGLE 31.3.0
```

Alarm Report

```

                MRN      LEVEL  OUTPUT GROUP      TEXT
-----
Output Group - SYS
0001    MAJR    SYS              Card has reset
0002    MINR    SYS              Card is not running approved GPL
.
.
.
0012    NONE    SYS              Dynamic database is now consistent

END OF RTRV-TRBLTX REPORT.
;

```

The following example shows the display for only Alarm MRN 3:

rtrv-trbltx:snum=3

```
ncralstp00001 03-07-16 10:15:29 EST  EAGLE 31.3.0
```

```
Card 1113; SYS REL= 31.3.0; STP CLLI= ncralstp00001; Timezone= EST
```

Alarm Report

```

                MRN      LEVEL  OUTPUT GROUP      TEXT
-----
0003    NONE    SYS              Alarm cleared for GPL

END OF RTRV-TRBLTX REPORT.
;

```

The following example shows the display for only UIM MRN 1002:

rtrv-trbltx:snum=1002

```
ncralstp00001 03-07-16 10:15:29 EST  EAGLE 31.3.0
```

UIM Report

```

                MRN      OUTPUT GROUP      TEXT
-----
1002              SYS              MTP rcvd invalid TFC - status 0

END OF RTRV-TRBLTX REPORT.
;

```

rtrv-trm

Retrieve Terminal

Use this command to show the port configuration for all TDM terminals or a specified terminal. These ports are used to connect modems, printers, and terminals to the system. This command displays the following information: device type, data transmission rate, parity, type of flow control used, number of stop bits, number of data bits, and the type of unsolicited messages to be received.

Keyword: **rtrv-trm**

Related Commands: **act-echo, canc-echo, chg-trm, dact-echo, inh-trm, rept-stat-trm, rmv-trm, rst-trm**

Command Class: Database Administration

Parameters

:trm= (optional)

Specifies the ID number of the terminal whose characteristics are to be retrieved and displayed.

Range: **1-40**

Default: Display all

Example

```
rtrv-trm:trm=3
```

```
rtrv-trm
```

Dependencies

The IP User Interface feature must be enabled and turned on, and at least one IPSM card must be equipped, before **telnet** or **emsalm** type terminals with IDs 17 - 40 can be specified.

The specified terminal must be equipped.

Notes

The LNPDB and LNPSUP columns in the output report will be displayed only if the LNP feature has been turned on (see the **enable-ctrl-feat** command).

Output

The following example, with the LNP feature turned on, shows the display of the terminal settings for terminal port 3, which is configured for a terminal:

rtrv-trm:trm=3

```
rlghncxa03w 03-11-01 16:02:08 EST EAGLE 31.3.0
TRM  TYPE    COMM      FC    TMOUT MXINV DURAL
3    KSR      9600-7-E-1 SW    60    0    00:00:00

                                LNP LNP
TRM  TRAF LINK SA  SYS PU  DB  DB  SUB UIMRD
3    YES  YES  YES YES YES YES YES YES YES YES

      APP  APP
TRM  SERV SS  CARD CLK DBG GTT GWS MEAS MON MPS SEAS SLAN
3    YES  YES YES  YES YES YES YES YES YES NO  NO
```

;

The following example, with the LNP feature turned off, shows the display of the terminal settings for terminal port 3, which is configured for a terminal:

rtrv-trm:trm=3

```
rlghncxa03w 03-11-01 16:02:08 EST EAGLE 31.3.0
TRM  TYPE    COMM      FC    TMOUT MXINV DURAL
3    KSR      9600-7-E-1 SW    60    0    00:00:00

TRM  TRAF LINK SA  SYS PU  DB  UIMRD
3    YES  YES  YES YES YES YES YES

      APP  APP
TRM  SERV SS  CARD CLK DBG GTT GWS MEAS MON MPS SEAS SLAN
3    YES  YES YES  YES YES YES YES YES YES NO  NO
```

;

The following example, with the LNP feature turned on, shows the display of the terminal settings for 16 terminal ports (no IPSM cards are equipped):

rtrv-trm

```
rlghncxa03w 03-11-01 16:02:08 EST EAGLE 31.3.0
TRM  TYPE    COMM      FC    TMOUT MXINV DURAL
1    VT320    9600-7-E-1 SW    60    5    99:59:59
2    VT320    9600-7-E-1 BOTH  60    5    INDEF
3    KSR      9600-7-E-1 SW    60    0    00:00:00
4    NONE     9600-7-E-1 SW    60    5    00:30:00
5    NONE     9600-7-E-1 SW    60    5    00:00:30
6    OAP      19200-7-E-1 SW    0     5    INDEF
7    VT320    9600-7-E-1 SW    60    5    99:59:59
8    VT320    9600-7-E-1 SW    60    5    INDEF
9    VT320    9600-7-E-1 SW    60    0    00:00:00
10   VT320    9600-7-E-1 SW    60    5    00:30:00
11   VT320    9600-7-E-1 NONE  60    5    00:00:30
12   NONE     19200-7-E-1 SW    0     5    INDEF
13   VT320    9600-7-E-1 SW    60    5    99:59:59
14   VT320    9600-7-E-1 SW    60    5    INDEF
15   VT320    9600-7-E-1 SW    60    0    00:00:00
16   VT320    9600-7-E-1 SW    60    5    00:30:00

                                LNP LNP
TRM  TRAF LINK SA  SYS PU  DB  DB  SUB UIMRD
1    YES  YES  YES YES YES YES YES YES YES YES
2    YES  YES  YES YES YES YES YES YES YES YES
3    YES  YES  YES YES YES YES YES YES YES YES
```

4	YES	YES	YES	YES	NO	YES	YES	YES	YES
5	YES	YES	YES	YES	YES	YES	YES	YES	YES
6	NO	YES	YES	YES	YES	YES	YES	YES	YES
7	NO	YES	YES	YES	YES	YES	YES	YES	YES
8	YES	YES	YES	YES	YES	YES	YES	YES	YES
9	YES	YES	YES	YES	YES	YES	YES	YES	YES
10	NO	NO	NO	NO	NO	NO	NO	NO	NO
11	NO	NO	NO	NO	NO	NO	NO	NO	NO
12	NO	NO	NO	NO	NO	NO	NO	NO	NO
13	NO	NO	NO	NO	NO	NO	NO	NO	NO
14	NO	NO	NO	NO	NO	NO	NO	NO	NO
15	NO	NO	NO	NO	NO	NO	NO	NO	NO
16	NO	NO	NO	NO	NO	NO	NO	NO	NO

	APP	APP										
TRM	SERV	SS	CARD	CLK	DBG	GTT	GWS	MEAS	MON	MPS	SEAS	SLAN
1	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
2	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
3	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
4	YES	YES	YES	YES	YES	NO	YES	YES	YES	YES	NO	NO
5	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
6	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
7	NO	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
8	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES
9	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES
10	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
11	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
12	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
13	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
14	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
15	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
16	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO

;

The following example, with the LNP feature turned off, shows the display of the terminal settings for 16 terminal ports (no IPSM cards are equipped):

rtrv-trm

```
rlghncxa03w 03-11-01 16:02:08 EST EAGLE 31.3.0
TRM  TYPE      COMM      FC      TMOUT  MXINV  DURAL
1    VT320      9600-7-E-1 SW      60      5      99:59:59
2    VT320      9600-7-E-1 BOTH    60      5      INDEF
3    KSR        9600-7-E-1 SW      60      0      00:00:00
4    NONE       9600-7-E-1 SW      60      5      00:30:00
5    NONE       9600-7-E-1 SW      60      5      00:00:30
6    OAP        19200-7-E-1 SW      0       5      INDEF
7    VT320      9600-7-E-1 SW      60      5      99:59:59
8    VT320      9600-7-E-1 SW      60      5      INDEF
9    VT320      9600-7-E-1 SW      60      0      00:00:00
10   VT320      9600-7-E-1 SW      60      5      00:30:00
11   VT320      9600-7-E-1 NONE    60      5      00:00:30
12   NONE       19200-7-E-1 SW      0       5      INDEF
13   VT320      9600-7-E-1 SW      60      5      99:59:59
14   VT320      9600-7-E-1 SW      60      5      INDEF
15   VT320      9600-7-E-1 SW      60      0      00:00:00
16   VT320      9600-7-E-1 SW      60      5      00:30:00
```

TRM	TRAF	LINK	SA	SYS	PU	DB	UIMRD
1	YES	YES	YES	YES	YES	YES	YES
2	YES	YES	YES	YES	YES	YES	YES
3	YES	YES	YES	YES	YES	YES	YES
4	YES	YES	YES	YES	YES	YES	YES
5	YES	YES	YES	YES	NO	YES	YES
6	NO	YES	YES	YES	YES	YES	YES
7	NO	YES	YES	YES	YES	YES	YES

8	YES	YES	YES	YES	YES	YES	YES
9	YES	YES	YES	YES	YES	YES	YES
10	NO	NO	NO	NO	NO	NO	NO
11	NO	NO	NO	NO	NO	NO	NO
12	NO	NO	NO	NO	NO	NO	NO
13	NO	NO	NO	NO	NO	NO	NO
14	NO	NO	NO	NO	NO	NO	NO
15	NO	NO	NO	NO	NO	NO	NO
16	NO	NO	NO	NO	NO	NO	NO

	APP	APP										
TRM	SERV	SS	CARD	CLK	DBG	GTT	GWS	MEAS	MON	MPS	SEAS	SLAN
1	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
2	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
3	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
4	YES	YES	YES	YES	YES	NO	YES	YES	YES	YES	NO	NO
5	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
6	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
7	NO	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
8	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES
9	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES
10	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
11	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
12	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
13	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
14	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
15	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
16	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO

;

The following example shows the display of the terminal settings for a **mgmt** terminal used for Network Surveillance:

rtrv-trm:trm=3

```
rlghncxa03w 03-11-01 16:02:08 EST EAGLE 31.3.0
TRM  TYPE      COMM      FC      TMOUT MXINV DURAL
3    MGMT      9600-7-E-1 SW      60      0      00:00:00
```

						LNP	LNP		
TRM	TRAF	LINK	SA	SYS	PU	DB	DB	SUB	UIMRD
3	YES	YES	YES	YES	YES	YES	YES	YES	YES

	APP	APP										
TRM	SERV	SS	CARD	CLK	DBG	GTT	GWS	MEAS	MON	MPS	SEAS	SLAN
3	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO

;

The following example shows the display of the terminal settings with the IP User Interface feature enabled and one IPSM card equipped:

rtrv-trm

```
rlghncxa03w 03-11-01 16:02:08 EST EAGLE 31.3.0
TRM  TYPE      COMM      FC      TMOUT MXINV DURAL
1    VT320      9600 -7-E-1 SW      0      5      00:01:00
2    VT320      9600 -7-E-1 SW      0      5      00:01:00
3    VT320      9600 -7-E-1 SW      0      5      00:01:00
4    KSR        9600 -7-E-1 SW      0      5      00:01:00
5    NONE       9600 -7-E-1 SW      30     5      00:01:00
6    NONE       9600 -7-E-1 SW      30     5      00:01:00
7    NONE       9600 -7-E-1 SW      30     5      00:01:00
8    NONE       9600 -7-E-1 SW      30     5      00:01:00
9    VT320      9600 -7-E-1 SW      0      5      00:01:00
10   VT320      9600 -7-E-1 SW      0      5      00:01:00
11   VT320      9600 -7-E-1 SW      0      5      00:01:00
12   KSR        9600 -7-E-1 SW      0      5      00:01:00
```

13	NONE	9600	-7-E-1 SW	30	5	00:01:00
14	NONE	9600	-7-E-1 SW	30	5	00:01:00
15	NONE	9600	-7-E-1 SW	30	5	00:01:00
16	NONE	9600	-7-E-1 SW	30	5	00:01:00

TRM	TYPE	LOC	TMOUT	MXINV	DURAL
17	TELNET	1201	60	5	00:30:00
18	TELNET	1201	60	5	00:30:00
19	TELNET	1201	60	5	00:30:00
20	TELNET	1201	60	5	00:30:00
21	TELNET	1201	60	5	00:30:00
22	TELNET	1201	60	5	00:30:00
23	TELNET	1201	60	5	00:30:00
24	TELNET	1201	60	5	00:30:00

;

TRM	TRAF	LINK	SA	SYS	PU	DB	DB	SUB	UIMRD
1	YES	YES	YES	YES	YES	YES	YES	YES	YES
2	YES	YES	YES	YES	YES	YES	YES	YES	YES
3	YES	YES	YES	YES	YES	YES	YES	YES	YES
4	YES	YES	YES	YES	NO	YES	YES	YES	YES
5	YES	YES	YES	YES	YES	YES	YES	YES	YES
6	NO	YES	YES	YES	YES	YES	YES	YES	YES
7	NO	YES	YES	YES	YES	YES	YES	YES	YES
8	YES	YES	YES	YES	YES	YES	YES	YES	YES
9	YES	YES	YES	YES	YES	YES	YES	YES	YES
10	NO	NO	NO	NO	NO	NO	NO	NO	NO
11	NO	NO	NO	NO	NO	NO	NO	NO	NO
12	NO	NO	NO	NO	NO	NO	NO	NO	NO
13	NO	NO	NO	NO	NO	NO	NO	NO	NO
14	NO	NO	NO	NO	NO	NO	NO	NO	NO
15	NO	NO	NO	NO	NO	NO	NO	NO	NO
16	NO	NO	NO	NO	NO	NO	NO	NO	NO
17	NO	NO	NO	NO	NO	NO	NO	NO	NO
18	NO	NO	NO	NO	NO	NO	NO	NO	NO
19	NO	NO	NO	NO	NO	NO	NO	NO	NO
20	NO	NO	NO	NO	NO	NO	NO	NO	NO
21	NO	NO	NO	NO	NO	NO	NO	NO	NO
22	NO	NO	NO	NO	NO	NO	NO	NO	NO
23	NO	NO	NO	NO	NO	NO	NO	NO	NO
24	NO	NO	NO	NO	NO	NO	NO	NO	NO

TRM	SERV	SS	CARD	CLK	DBG	GTT	GWS	MEAS	MON	MPS	SEAS	SLAN
1	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
2	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
3	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
4	YES	YES	YES	YES	YES	NO	YES	YES	YES	YES	NO	NO
5	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
6	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
7	NO	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
8	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES
9	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES
10	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
11	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
12	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
13	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
14	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
15	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
16	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
17	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
18	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
19	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO

```

20 NO NO NO NO NO NO NO NO NO NO NO NO
21 NO NO NO NO NO NO NO NO NO NO NO NO
22 NO NO NO NO NO NO NO NO NO NO NO NO
23 NO NO NO NO NO NO NO NO NO NO NO NO
24 NO NO NO NO NO NO NO NO NO NO NO NO

```

;

The following example shows the display of the terminal settings with the IP User Interface feature enabled and three IPSM cards equipped:

rtrv-trm

```

rlghncxa03w 03-11-01 16:02:08 EST EAGLE 31.3.0
TRM  TYPE      COMM      FC      TMOUT  MXINV  DURAL
1    VT320      9600    -7-E-1 SW    0      5      00:01:00
2    VT320      9600    -7-E-1 SW    0      5      00:01:00
3    VT320      9600    -7-E-1 SW    0      5      00:01:00
4    KSR        9600    -7-E-1 SW    0      5      00:01:00
5    NONE       9600    -7-E-1 SW    30     5      00:01:00
6    NONE       9600    -7-E-1 SW    30     5      00:01:00
7    NONE       9600    -7-E-1 SW    30     5      00:01:00
8    NONE       9600    -7-E-1 SW    30     5      00:01:00
9    VT320      9600    -7-E-1 SW    0      5      00:01:00
10   VT320      9600    -7-E-1 SW    0      5      00:01:00
11   VT320      9600    -7-E-1 SW    0      5      00:01:00
12   KSR        9600    -7-E-1 SW    0      5      00:01:00
13   NONE       9600    -7-E-1 SW    30     5      00:01:00
14   NONE       9600    -7-E-1 SW    30     5      00:01:00
15   NONE       9600    -7-E-1 SW    30     5      00:01:00
16   NONE       9600    -7-E-1 SW    30     5      00:01:00

```

```

TRM  TYPE      LOC      TMOUT  MXINV  DURAL
17   TELNET     1201      60     5      00:30:00
18   TELNET     1201      60     5      00:30:00
19   TELNET     1201      60     5      00:30:00
20   TELNET     1201      60     5      00:30:00
21   TELNET     1201      60     5      00:30:00
22   TELNET     1201      60     5      00:30:00
23   TELNET     1201      60     5      00:30:00
24   TELNET     1201      60     5      00:30:00
25   TELNET     1203      60     5      00:30:00
26   TELNET     1203      60     5      00:30:00
27   TELNET     1203      60     5      00:30:00
28   TELNET     1203      60     5      00:30:00
29   TELNET     1203      60     5      00:30:00
30   TELNET     1203      60     5      00:30:00
31   TELNET     1203      60     5      00:30:00
32   TELNET     1203      60     5      00:30:00
33   TELNET     1208      60     5      00:30:00
34   TELNET     1208      60     5      00:30:00
35   TELNET     1208      60     5      00:30:00
36   TELNET     1208      60     5      00:30:00
37   TELNET     1208      60     5      00:30:00
38   TELNET     1208      60     5      00:30:00
39   TELNET     1208      60     5      00:30:00
40   TELNET     1208      60     5      00:30:00

```

;

```

                                LNP  LNP
TRM  TRAF  LINK  SA  SYS  PU  DB  DB  SUB  UIMRD
1    YES  YES  YES  YES  YES  YES  YES  YES  YES
2    YES  YES  YES  YES  YES  YES  YES  YES  YES
3    YES  YES  YES  YES  YES  YES  YES  YES  YES
4    YES  YES  YES  YES  NO   YES  YES  YES  YES
5    YES  YES  YES  YES  YES  YES  YES  YES  YES
6    NO   YES  YES  YES  YES  YES  YES  YES  YES
7    NO   YES  YES  YES  YES  YES  YES  YES  YES

```

8	YES	YES	YES	YES	YES	YES	YES	YES	YES
9	YES	YES	YES	YES	YES	YES	YES	YES	YES
10	NO	NO	NO	NO	NO	NO	NO	NO	NO
11	NO	NO	NO	NO	NO	NO	NO	NO	NO
12	NO	NO	NO	NO	NO	NO	NO	NO	NO
13	NO	NO	NO	NO	NO	NO	NO	NO	NO
14	NO	NO	NO	NO	NO	NO	NO	NO	NO
15	NO	NO	NO	NO	NO	NO	NO	NO	NO
16	NO	NO	NO	NO	NO	NO	NO	NO	NO
17	NO	NO	NO	NO	NO	NO	NO	NO	NO
18	NO	NO	NO	NO	NO	NO	NO	NO	NO
19	NO	NO	NO	NO	NO	NO	NO	NO	NO
20	NO	NO	NO	NO	NO	NO	NO	NO	NO
21	NO	NO	NO	NO	NO	NO	NO	NO	NO
22	NO	NO	NO	NO	NO	NO	NO	NO	NO
23	NO	NO	NO	NO	NO	NO	NO	NO	NO
24	NO	NO	NO	NO	NO	NO	NO	NO	NO
25	NO	NO	NO	NO	NO	NO	NO	NO	NO
26	NO	NO	NO	NO	NO	NO	NO	NO	NO
27	NO	NO	NO	NO	NO	NO	NO	NO	NO
28	NO	NO	NO	NO	NO	NO	NO	NO	NO
29	NO	NO	NO	NO	NO	NO	NO	NO	NO
30	NO	NO	NO	NO	NO	NO	NO	NO	NO
31	NO	NO	NO	NO	NO	NO	NO	NO	NO
32	NO	NO	NO	NO	NO	NO	NO	NO	NO
33	NO	NO	NO	NO	NO	NO	NO	NO	NO
34	NO	NO	NO	NO	NO	NO	NO	NO	NO
35	NO	NO	NO	NO	NO	NO	NO	NO	NO
36	NO	NO	NO	NO	NO	NO	NO	NO	NO
37	NO	NO	NO	NO	NO	NO	NO	NO	NO
38	NO	NO	NO	NO	NO	NO	NO	NO	NO
39	NO	NO	NO	NO	NO	NO	NO	NO	NO
40	NO	NO	NO	NO	NO	NO	NO	NO	NO

	APP	APP											
TRM	SERV	SS	CARD	CLK	DBG	GTT	GWS	MEAS	MON	MPS	SEAS	SLAN	
1	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO	
2	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO	
3	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO	
4	YES	YES	YES	YES	YES	NO	YES	YES	YES	YES	NO	NO	
5	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO	
6	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO	
7	NO	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO	
8	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	
9	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	
10	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	
11	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	
12	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	
13	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	
14	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	
15	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	
16	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	
17	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	
18	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	
19	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	
20	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	
21	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	
22	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	
23	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	
24	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	
25	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	
26	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	
27	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	
28	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	
29	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	

```

30 NO NO NO NO NO NO NO NO NO NO NO NO
31 NO NO NO NO NO NO NO NO NO NO NO NO
32 NO NO NO NO NO NO NO NO NO NO NO NO
33 NO NO NO NO NO NO NO NO NO NO NO NO
34 NO NO NO NO NO NO NO NO NO NO NO NO
35 NO NO NO NO NO NO NO NO NO NO NO NO
36 NO NO NO NO NO NO NO NO NO NO NO NO
37 NO NO NO NO NO NO NO NO NO NO NO NO
38 NO NO NO NO NO NO NO NO NO NO NO NO
39 NO NO NO NO NO NO NO NO NO NO NO NO
40 NO NO NO NO NO NO NO NO NO NO NO NO

```

;

The following example shows the display of the terminal settings with the IP User Interface feature enabled and two IPSM cards equipped (the second IPSM card was removed):

rtrv-trm

```

r lghncxa03w 03-11-01 16:02:08 EST EAGLE 31.3.0
TRM  TYPE      COMM      FC      TMOUT  MXINV  DURAL
1    VT320     9600    -7-E-1 SW    0      5      00:01:00
2    VT320     9600    -7-E-1 SW    0      5      00:01:00
3    VT320     9600    -7-E-1 SW    0      5      00:01:00
4    KSR       9600    -7-E-1 SW    0      5      00:01:00
5    NONE      9600    -7-E-1 SW    30     5      00:01:00
6    NONE      9600    -7-E-1 SW    30     5      00:01:00
7    NONE      9600    -7-E-1 SW    30     5      00:01:00
8    NONE      9600    -7-E-1 SW    30     5      00:01:00
9    VT320     9600    -7-E-1 SW    0      5      00:01:00
10   VT320     9600    -7-E-1 SW    0      5      00:01:00
11   VT320     9600    -7-E-1 SW    0      5      00:01:00
12   KSR       9600    -7-E-1 SW    0      5      00:01:00
13   NONE      9600    -7-E-1 SW    30     5      00:01:00
14   NONE      9600    -7-E-1 SW    30     5      00:01:00
15   NONE      9600    -7-E-1 SW    30     5      00:01:00
16   NONE      9600    -7-E-1 SW    30     5      00:01:00

TRM  TYPE      LOC      TMOUT  MXINV  DURAL
17   TELNET    1201     60     5      00:30:00
18   TELNET    1201     60     5      00:30:00
19   TELNET    1201     60     5      00:30:00
20   TELNET    1201     60     5      00:30:00
21   TELNET    1201     60     5      00:30:00
22   TELNET    1201     60     5      00:30:00
23   TELNET    1201     60     5      00:30:00
24   TELNET    1201     60     5      00:30:00

33   TELNET    1208     60     5      00:30:00
34   TELNET    1208     60     5      00:30:00
35   TELNET    1208     60     5      00:30:00
36   TELNET    1208     60     5      00:30:00
37   TELNET    1208     60     5      00:30:00
38   TELNET    1208     60     5      00:30:00
39   TELNET    1208     60     5      00:30:00
40   TELNET    1208     60     5      00:30:00

```

;

```

                                LNP LNP
TRM  TRAF LINK SA  SYS PU  DB  DB  SUB  UIMRD
1    YES  YES  YES YES YES YES YES YES YES
2    YES  YES  YES YES YES YES YES YES YES
3    YES  YES  YES YES YES YES YES YES YES
4    YES  YES  YES YES NO  YES YES YES YES
5    YES  YES  YES YES YES YES YES YES YES
6    NO   YES  YES YES YES YES YES YES YES
7    NO   YES  YES YES YES YES YES YES YES

```

8	YES	YES	YES	YES	YES	YES	YES	YES	YES
9	YES	YES	YES	YES	YES	YES	YES	YES	YES
10	NO	NO	NO	NO	NO	NO	NO	NO	NO
11	NO	NO	NO	NO	NO	NO	NO	NO	NO
12	NO	NO	NO	NO	NO	NO	NO	NO	NO
13	NO	NO	NO	NO	NO	NO	NO	NO	NO
14	NO	NO	NO	NO	NO	NO	NO	NO	NO
15	NO	NO	NO	NO	NO	NO	NO	NO	NO
16	NO	NO	NO	NO	NO	NO	NO	NO	NO
17	NO	NO	NO	NO	NO	NO	NO	NO	NO
18	NO	NO	NO	NO	NO	NO	NO	NO	NO
19	NO	NO	NO	NO	NO	NO	NO	NO	NO
20	NO	NO	NO	NO	NO	NO	NO	NO	NO
21	NO	NO	NO	NO	NO	NO	NO	NO	NO
22	NO	NO	NO	NO	NO	NO	NO	NO	NO
23	NO	NO	NO	NO	NO	NO	NO	NO	NO
24	NO	NO	NO	NO	NO	NO	NO	NO	NO
33	NO	NO	NO	NO	NO	NO	NO	NO	NO
34	NO	NO	NO	NO	NO	NO	NO	NO	NO
35	NO	NO	NO	NO	NO	NO	NO	NO	NO
36	NO	NO	NO	NO	NO	NO	NO	NO	NO
37	NO	NO	NO	NO	NO	NO	NO	NO	NO
38	NO	NO	NO	NO	NO	NO	NO	NO	NO
39	NO	NO	NO	NO	NO	NO	NO	NO	NO
40	NO	NO	NO	NO	NO	NO	NO	NO	NO

	APP	APP										
TRM	SERV	SS	CARD	CLK	DBG	GTT	GWS	MEAS	MON	MPS	SEAS	SLAN
1	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
2	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
3	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
4	YES	YES	YES	YES	YES	NO	YES	YES	YES	YES	NO	NO
5	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
6	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
7	NO	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
8	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES
9	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES
10	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
11	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
12	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
13	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
14	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
15	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
16	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
17	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
18	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
19	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
20	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
21	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
22	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
23	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
24	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
33	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
34	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
35	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
36	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
37	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
38	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
39	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
40	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO

;

The following example shows the display of the terminal settings for **telnet** terminal 30:

rtrv-trm:trm=30

```
rlghncxa03w 03-11-01 16:02:08 EST EAGLE 31.3.0
TRM  TYPE    LOC      TMOUT MXINV DURAL
30   TELNET  1204      60    0    00:00:00

TRM  TRAF LINK SA  SYS PU  DB  UIMRD
30   YES  YES  YES YES YES YES YES

      APP  APP
TRM  SERV SS  CARD CLK DBG GTT GWS MEAS MON MPS SEAS SLAN
3    YES  YES  YES  YES YES YES YES YES YES YES NO  NO
```

;

The following example shows the display of the terminal settings with the IP User Interface feature enabled, one IPSM card equipped, and the OA&M IP Security Enhancements feature turned off:

rtrv-trm

```
rlghncxa03w 03-11-01 16:02:08 EST EAGLE 31.3.0
TRM  TYPE    COMM      FC  TMOUT MXINV DURAL
1    VT320    9600 -7-E-1 SW  0    5    00:01:00
2    VT320    9600 -7-E-1 SW  0    5    00:01:00
3    VT320    9600 -7-E-1 SW  0    5    00:01:00
4    KSR      9600 -7-E-1 SW  0    5    00:01:00
5    NONE     9600 -7-E-1 SW  30   5    00:01:00
6    NONE     9600 -7-E-1 SW  30   5    00:01:00
7    NONE     9600 -7-E-1 SW  30   5    00:01:00
8    NONE     9600 -7-E-1 SW  30   5    00:01:00
9    VT320    9600 -7-E-1 SW  0    5    00:01:00
10   VT320    9600 -7-E-1 SW  0    5    00:01:00
11   VT320    9600 -7-E-1 SW  0    5    00:01:00
12   KSR      9600 -7-E-1 SW  0    5    00:01:00
13   NONE     9600 -7-E-1 SW  30   5    00:01:00
14   NONE     9600 -7-E-1 SW  30   5    00:01:00
15   NONE     9600 -7-E-1 SW  30   5    00:01:00
16   NONE     9600 -7-E-1 SW  30   5    00:01:00

TRM  TYPE    LOC      TMOUT MXINV DURAL      SECURE
17   TELNET  1201      60    5    00:30:00    no
18   TELNET  1201      60    5    00:30:00    no
19   TELNET  1201      60    5    00:30:00    no
20   TELNET  1201      60    5    00:30:00    no
21   TELNET  1201      60    5    00:30:00    no
22   TELNET  1201      60    5    00:30:00    no
23   TELNET  1201      60    5    00:30:00    no
24   TELNET  1201      60    5    00:30:00    no
```

```

                                LNP LNP
TRM  TRAF LINK SA  SYS PU  DB  DB  SUB  UIMRD
1    YES  YES  YES YES YES YES YES YES YES
2    YES  YES  YES YES YES YES YES YES YES
3    YES  YES  YES YES YES YES YES YES YES
4    YES  YES  YES YES NO  YES YES YES YES
5    YES  YES  YES YES YES YES YES YES YES
6    NO   YES  YES YES YES YES YES YES YES
7    NO   YES  YES YES YES YES YES YES YES
8    YES  YES  YES YES YES YES YES YES YES
9    YES  YES  YES YES YES YES YES YES YES
10   NO   NO   NO  NO  NO  NO  NO  NO  NO
11   NO   NO   NO  NO  NO  NO  NO  NO  NO
12   NO   NO   NO  NO  NO  NO  NO  NO  NO
13   NO   NO   NO  NO  NO  NO  NO  NO  NO
14   NO   NO   NO  NO  NO  NO  NO  NO  NO
15   NO   NO   NO  NO  NO  NO  NO  NO  NO
```

16	NO	NO	NO	NO	NO	NO	NO	NO	NO
17	NO	NO	NO	NO	NO	NO	NO	NO	NO
18	NO	NO	NO	NO	NO	NO	NO	NO	NO
19	NO	NO	NO	NO	NO	NO	NO	NO	NO
20	NO	NO	NO	NO	NO	NO	NO	NO	NO
21	NO	NO	NO	NO	NO	NO	NO	NO	NO
22	NO	NO	NO	NO	NO	NO	NO	NO	NO
23	NO	NO	NO	NO	NO	NO	NO	NO	NO
24	NO	NO	NO	NO	NO	NO	NO	NO	NO

	APP	APP										
TRM	SERV	SS	CARD	CLK	DBG	GTT	GWS	MEAS	MON	MPS	SEAS	SLAN
1	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
2	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
3	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
4	YES	YES	YES	YES	YES	NO	YES	YES	YES	YES	NO	NO
5	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
6	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
7	NO	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
8	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES
9	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES
10	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
11	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
12	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
13	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
14	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
15	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
16	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
17	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
18	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
19	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
20	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
21	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
22	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
23	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
24	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO

;

The following example shows the display of the terminal settings with the IP User Interface feature enabled, one IPSM card equipped, and the OA&M IP Security Enhancements feature turned on:

rtrv-trm

```
rlghncxa03w 03-11-01 16:02:08 EST EAGLE 31.3.0
```

TRM	TYPE	COMM	FC	TMOUT	MXINV	DURAL
1	VT320	9600	-7-E-1 SW	0	5	00:01:00
2	VT320	9600	-7-E-1 SW	0	5	00:01:00
3	VT320	9600	-7-E-1 SW	0	5	00:01:00
4	KSR	9600	-7-E-1 SW	0	5	00:01:00
5	NONE	9600	-7-E-1 SW	30	5	00:01:00
6	NONE	9600	-7-E-1 SW	30	5	00:01:00
7	NONE	9600	-7-E-1 SW	30	5	00:01:00
8	NONE	9600	-7-E-1 SW	30	5	00:01:00
9	VT320	9600	-7-E-1 SW	0	5	00:01:00
10	VT320	9600	-7-E-1 SW	0	5	00:01:00
11	VT320	9600	-7-E-1 SW	0	5	00:01:00
12	KSR	9600	-7-E-1 SW	0	5	00:01:00
13	NONE	9600	-7-E-1 SW	30	5	00:01:00
14	NONE	9600	-7-E-1 SW	30	5	00:01:00
15	NONE	9600	-7-E-1 SW	30	5	00:01:00
16	NONE	9600	-7-E-1 SW	30	5	00:01:00

TRM	TYPE	LOC	TMOUT	MXINV	DURAL	SECURE
17	TELNET	1201	60	5	00:30:00	yes
18	TELNET	1201	60	5	00:30:00	yes

19	TELNET	1201		60	5	00:30:00	yes
20	TELNET	1201		60	5	00:30:00	yes
21	TELNET	1201		60	5	00:30:00	yes
22	TELNET	1201		60	5	00:30:00	yes
23	TELNET	1201		60	5	00:30:00	yes
24	TELNET	1201		60	5	00:30:00	yes

LNP LNP									
TRM	TRAF	LINK	SA	SYS	PU	DB	DB	SUB	UIMRD
1	YES	YES	YES	YES	YES	YES	YES	YES	YES
2	YES	YES	YES	YES	YES	YES	YES	YES	YES
3	YES	YES	YES	YES	YES	YES	YES	YES	YES
4	YES	YES	YES	YES	NO	YES	YES	YES	YES
5	YES	YES	YES	YES	YES	YES	YES	YES	YES
6	NO	YES	YES	YES	YES	YES	YES	YES	YES
7	NO	YES	YES	YES	YES	YES	YES	YES	YES
8	YES	YES	YES	YES	YES	YES	YES	YES	YES
9	YES	YES	YES	YES	YES	YES	YES	YES	YES
10	NO	NO	NO	NO	NO	NO	NO	NO	NO
11	NO	NO	NO	NO	NO	NO	NO	NO	NO
12	NO	NO	NO	NO	NO	NO	NO	NO	NO
13	NO	NO	NO	NO	NO	NO	NO	NO	NO
14	NO	NO	NO	NO	NO	NO	NO	NO	NO
15	NO	NO	NO	NO	NO	NO	NO	NO	NO
16	NO	NO	NO	NO	NO	NO	NO	NO	NO
17	NO	NO	NO	NO	NO	NO	NO	NO	NO
18	NO	NO	NO	NO	NO	NO	NO	NO	NO
19	NO	NO	NO	NO	NO	NO	NO	NO	NO
20	NO	NO	NO	NO	NO	NO	NO	NO	NO
21	NO	NO	NO	NO	NO	NO	NO	NO	NO
22	NO	NO	NO	NO	NO	NO	NO	NO	NO
23	NO	NO	NO	NO	NO	NO	NO	NO	NO
24	NO	NO	NO	NO	NO	NO	NO	NO	NO

APP APP												
TRM	SERV	SS	CARD	CLK	DBG	GTT	GWS	MEAS	MON	MPS	SEAS	SLAN
1	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
2	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
3	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
4	YES	YES	YES	YES	YES	NO	YES	YES	YES	YES	NO	NO
5	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
6	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
7	NO	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
8	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES
9	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES
10	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
11	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
12	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
13	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
14	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
15	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
16	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
17	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
18	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
19	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
20	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
21	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
22	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
23	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
24	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO

;

The following example shows the display of the terminal settings with an EMSALM type terminal on a serial terminal port. All output group settings default to YES when a terminal is set to type EMSALM.

rtrv-trm:trm=11

```

rlghncxa03w 04-03-01 16:02:08 EST EAGLE 31.5.0
TRM  TYPE      COMM      FC      TMOUT MXINV DURAL
11   EMSALM    9600 -7-E-1 SW      0      5      00:01:00

                                LNP LNP
TRM  TRAF LINK SA  SYS PU  DB  DB  SUB  UIMRD
11   YES  YES  YES YES YES YES YES YES  YES

      APP APP
TRM  SRV SS  CARD CLK DBG GTT GWS MEAS MON MPS SEAS SLAN
11   YES YES YES  YES YES YES YES YES YES YES YES YES
;

```

Legend

Part one of the **rtrv-trm** report contains these fields:

TRM—The TDM terminal port number associated with the output device.

TYPE—The type of output device that is connected.

COMM—This field is composed of four communication attributes in the format *baud-dbts-prty-sb*. The parts are:

BAUD—The serial port baud rate of the output device

DBTS—The number of data bits used by the output device

PRTY—The parity of the output device

SB—The number of stop bits used in communications with the output device

FC—The type of protocol used between the system and the output devices.

TMOUT—Shows the maximum amount of time (in minutes) that a login session can remain idle.

MXINV—Shows the login/unlock failure threshold.

DURAL—Shows the length of time (in seconds, minutes, and hours) the terminal is disabled after each failed login/unlock attempt in excess of the threshold configured with the **mxinv** parameter.

SECURE—Indicates whether the OA&M IP Security Enhancements feature is turned on or off for Telnet terminals.

Part two of the **rtrv-trm** report contains these fields:

TRM—The TDM terminal associated with the output device.

TRAF—Shows whether traffic-related unsolicited messages are received by the output device.

LINK—Shows whether link-related unsolicited messages are received by the output device.

SA—Shows whether security administration-related unsolicited messages are received by the output device.

SYS—Shows whether system maintenance-related unsolicited messages are received by the output device.

PU—Shows whether program update-related unsolicited messages are received by the output device.

DB—Shows whether database-related unsolicited messages are received by the output device.

UIMRD—Shows whether Unsolicited Information Messages (UIMs) specific to the group are received by the output device.

If the LNP feature is turned on, the following fields are displayed:

LNPDB—Shows whether LNP database-related unsolicited messages are received by the output device.

LNPSUB—Shows whether LNP subscription-related unsolicited messages are received by the output device.

Part three of the **rtrv-trm** report contains these fields:

APP SERV—Shows whether Application Server unsolicited messages are received by the output device.

APP SS—Shows whether Application Subsystem unsolicited messages are received by the output device.

CARD—Shows whether Card unsolicited messages are received by the output device.

CLK—Shows whether Clock unsolicited messages are received by the output device.

DBG—Shows whether Debug unsolicited messages are received by the output device.

GTT—Shows whether GTT unsolicited messages are received by the output device.

GWS—Shows whether GWS unsolicited messages are received by the output device.

MEAS—Shows whether Measurements Maintenance unsolicited messages are received by the output device.

MON—Shows whether Monitor unsolicited messages are received by the output device.

MPS—Shows whether MPS unsolicited messages are received by the output device.

SEAS—Shows whether SEAS Maintenance unsolicited messages are received by the output device.

SLAN—Shows whether STP LAN unsolicited messages are received by the output device.

rtrv-tt

Retrieve Translation Type

Use this command to show the translation types that are currently defined in the system database for global title translations.

NOTE: If the EGTT (Enhanced Global Title Translation) feature is turned on in your system, the system will no longer accept GTT (Global Title Translation) and TT (Translation Type) commands. Refer to the new command sets that replace the GTT and TT commands: GTT Selector commands (ent/chg/dlt/rtrv-gttset), GTT Set commands (ent/dlt/rtrv-gttset), and GTA commands (ent/chg/dlt/rtrv-gta).

Keyword: rtrv-tt

Related Commands: dlt-tt, ent-tt

Command Class: Database Administration

Parameters

:alias= (optional)

The alias of the global title translation type

Range: 0-255

Default: Display all

:ttn= (optional)

Translation type name.

Range: ayyyyyyyy

1 alphabetic character followed by up to 7 alphanumeric characters

Default: Display all

:type/typea/typei/typen/typen24= (optional)

A translation type numeric value may be entered as ANSI type (**type** or **typea**) and also as an ITU type (**typei** or **typen**). However, they are separate entities.

Range: 0-255

Default: No translation type is specified

Example

```
rtrv-tt
```

```
rtrv-tt:type=230
```

```
rtrv-tt:ttn=lidb
```

```
rtrv-tt:type=230:ttn=lidb
```

```
rtrv-tt:type=230:ttn=lidb:alias=012
```

Dependencies

This command is not valid when the EGTT feature is turned on.

Asterisk (*) parameter values are not allowed for this command.

The translation type must exist in the translation table. If either or both parameters are given, they must be the same as the values entered with the **ent-tt** command. If the translation name is specified, it must be associated with a translation type.

If a translation type is specified, it must already exist in the database for the network type and cannot be an alias.

If both translation type and translation type name are specified, the translation type name must correspond to the specified translation type.

If an alias is specified with a translation type and/or translation type name, the alias must exist in the database for the specified network type, and it cannot be a translation type.

If an alias is specified without a translation type or translation type name, the alias must exist in the database for at least one of the network types. If it exists, the entries and the mapped translation type entries that exist in the database for all network types are displayed.

Notes

If a translation type, translation type name, or both, are specified, the translation type entry and all aliases mapped to that translation type are displayed.

Output

rtrv-tt

tekelecstp 03-05-02 09:03:09 EST EAGLE 31.0.0

TYPEA TTN NDGT

130 lidb 5

180 ansi180 9

ALIAS TYPEA

1 130

7 130

10 180

TYPEI TTN NDGT

105 intlabc 15

119 intl119 18

ALIAS TYPEI

29 119

33 105

TYPEN TTN NDGT

204 natlxyz 8

210 natl210 21

ALIAS TYPEN

7 204

TYPEN24 TTN NDGT

;

rtrv-tt:type=130:ttn=LIDB

tekelecstp 03-11-02 09:06:38 EST EAGLE 30.0.0

TYPEA TTN NDGT

130 lidb 5

ALIAS TYPEA

1 130

7 130

;

rtrv-tt:ttn=intlabc

tekelecstp 03-11-02 09:19:34 EST EAGLE 30.0.0

TYPEI TTN NDGT

105 intlabc 15

ALIAS TYPEI

33 105

;

rtrv-tt:alias=7

tekelecstp 03-11-02 09:19:34 EST EAGLE 30.0.0

ALIAS TYPEA

7 130

ALIAS TYPEN

7 204

;

rtrv-tt

```

tekelecstp 03-05-02 09:19:34 EST EAGLE 31.0.0
TYPEA      TTN      NDGT

TYPEI      TTN      NDGT

TYPEN      TTN      NDGT

TYPEN24    TTN      NDGT
2          -----  6
4          first    6

```

;

Legend

TYPEA/TYPEI/TYPEN/TYPEN24—The global title translation type.

TTN—The name of the global title translation type.

NDGT—The number of digits in the global title translation type

ALIAS—The alias global title translation type.

rtrv-ttmap**Display Translation Type Mapping**

Use this command to display a mapped SS7 message translation type (TT) for a given gateway linkset name. This command can be used to display the identification of the type of allowed global title translation in the SS7 message before and after translation type mapping, see which linkset the mapping applies to, and see whether the mapping applies to incoming or outgoing messages.

Keyword: rtrv-ttmap

Related Commands: chg-ttmap, dlt-ttmap, ent-ttmap

Command Class: Database Administration

Parameters

:ett= (optional)

Translation type before mapping. The identification of the type of allowed global title translation in the SS7 message *prior to* translation type mapping. This attribute is the decimal representation of the 1-octet binary field used by the SS7 protocol to identify the translation type.

Range: 0-255

Default: Display all types allowed

:io= (optional)

Incoming or outgoing. The system uses this parameter to indicate whether the translation type mapping data provisioned for the gateway linkset is for SS7 messages *received* or *sent* on the linkset.

Range: i, o

i— incoming

o— outgoing

Default: Both incoming and outgoing

:lsn= (optional)

Linkset name

Range: ayyyyyyyyy

1 alphabetic character followed by up to 9 alphanumeric characters

Default: Display all

Example

```
rtrv-ttmap
rtrv-ttmap:lsn=nc001
rtrv-ttmap:lsn=nc001:io=i:ett=128
rtrv-ttmap:io=i:ett=128
rtrv-ttmap:ett=128
rtrv-ttmap:ett=40
```

Dependencies

The linkset must be defined.

The memory space accounting report (MSAR) is not produced when the **io** parameter, **ett** parameter, or both are specified, because the statistics presented may be misleading.

Notes

The order of display is by linkset index + I/O + ETT.

Output

rtrv-ttmap

```

rlghncxa03w 03-11-22 11:39:44 EST EAGLE 30.0.0
LSN          IO   ETT  MTT
nc001        I    047  032
nc001        I    128  055
nc001        I    238  128
nc001        I    254  016
nc001        O    016  254
nc001        O    128  238

```

TTMAP table for nc001 is (6 of 64) 9% full

```

nc002        I    128  055
nc002        I    238  128
nc002        O    128  238

```

TTMAP table for nc002 is (3 of 64) 5% full

```

lsi1         I    001  142
lsi1         O    142  001

```

TTMAP table for lsi1 is (2 of 64) 3% full

```

lsi2         I    238  128

```

TTMAP table for lsi2 is (1 of 64) 2% full

```

lsi3         I    254  016

```

TTMAP table for lsi3 is (1 of 64) 2% full

```

lsn1         O    016  254
lsn1         O    128  238

```

TTMAP table for lsn1 is (2 of 64) 3% full

```

lsn2         I    128  055
lsn2         I    238  128
lsn2         O    128  238

```

TTMAP table for lsn2 is (3 of 64) 5% full

;

rtrv-ttmap: lsn=nc001

```

rlghncxa03w 03-11-22 12:02:36 EST EAGLE 30.0.0
LSN          IO   ETT  MTT
nc001        I    047  032
nc001        I    128  055
nc001        I    238  128
nc001        I    254  016
nc001        O    016  254
nc001        O    128  238

```

TTMAP table for nc001 is (6 of 64) 9% full

;

rtrv-ttmap: lsn=nc001:io=i:ett=128

```

rlghncxa03w 03-11-22 12:04:21 EST EAGLE 30.0.0
LSN          IO   ETT  MTT
nc001        I    128  055

```

;

rtrv-ttmap:io=i:ett=128

```

rlghncxa03w 03-11-22 12:06:13 EST EAGLE 30.0.0
LSN          IO   ETT  MTT
nc001        I    128  055
nc002        I    128  055
lsn2         I    128  055

```

;

rtrv-ttmap:ett=128

```
rlghncxa03w 03-11-22 12:41:21 EST EAGLE 30.0.0
```

```
LSN          IO   ETT   MTT
```

```
nc001        I    128   055
```

```
nc001        0    128   238
```

```
nc002        I    128   055
```

```
nc002        0    128   238
```

```
lsn1         0    128   238
```

```
lsn2         I    128   055
```

```
lsn2         0    128   238
```

```
;
```

rtrv-ttmap:ett=40

```
rlghncxa03w 03-11-07 16:12:38 EST EAGLE 30.0.0
```

```
LSN          IO   ETT   MTT
```

```
No mapped translation types defined for ETT specified.
```

```
;
```

Legend

LSN—Linkset name

IO—Incoming or outgoing linkset

ETT—Translation type before mapping

MTT—Mapped translation type

rtrv-uaps**Retrieve UA Parameter Set**

Use this command to retrieve one UA parameter set or all UA parameter sets.

Keyword: **rtrv-uaps**

Related Commands: **chg-uaps**

Command Class: Database Administration

Parameters

:set= (optional)

UA parameter set to be displayed.

Range: **1-10**

Default: Display all

Example

```
rtrv-uaps
```

```
rtrv-uaps:set=1
```

Dependencies

None

Notes

This command can be canceled using the F9 function key or the **canc-cmd** command. See **canc-cmd** for more information.

Output

rtrv-uaps:set=1

rlghncxa03w 05-05-05 08:50:12 EST EAGLE5 34.0.0

SET	TIMER	TVALUE	PARM	PVALUE
1	1	0	1	3
1	2	3000	2	0
1	3	10000	3	1
1	4	5000	4	0
1	5	0	5	0
1	6	0	6	0
1	7	0	7	0
1	8	0	8	0
1	9	0	9	0
1	10	0	10	0

TIMER 2: False IP Connection Congestion Timer, max time an association can be congested before failing due to false congestion. SS7IPGW and IPGWI applications enforce 0-30000(ms).

TVALUE : Valid range = 32-bits

TIMER 3: UA Heartbeat Period Timer T(beat), time (ms) between sending of BEAT msgs by NE, SS7IPGW and IPGWI applications enforce 100(ms)-60000(ms).

TVALUE : Valid range = 32-bits

TIMER 4: UA Heartbeat Received Timer T(beat ack), timeout period for response BEAT ACK msgs by NE, SS7IPGW and IPGWI applications enforce 100(ms)-10000(ms).

TVALUE : Valid range = 32-bits

PARM 1: ASP SNM options. Each bit is used as an enabled/disabled flag for a particular ASP SNM option.

PVALUE : Valid range = 32-bits

BIT	BIT VALUE
0=Broadcast	0=Disabled , 1=Enabled
1=Response Method	0=Disabled , 1=Enabled
2-5=Reserved	
6=Broadcast Congestion Status Change	0=Disabled , 1=Enabled
7-31=Reserved	

PARM 2: ASP/AS Notification options. Each bit is used as an enabled/disabled flag for a particular ASP/AS Notification option.

PVALUE : Valid range = 32-bits

BIT	BIT VALUE
0=ASP Active Notifications	0=Disabled , 1=Enabled
1=ASP Inactive Notifications	0=Disabled , 1=Enabled
2=ASP AS State Query	0=Disabled , 1=Enabled
3-31=Reserved	

PARM 3: UA Serviceability Options. Each bit is used as an enabled/disabled flag for a particular UA serviceability option.

PVALUE : Valid range = 32-bits

BIT	BIT VALUE
0=UA Heartbeats	0=Disabled , 1=Enabled
1-31=Reserved	

rtrv-uim-acthresh**Retrieve Activity Level Threshold for STP UIM
Activity Reporting**

Use this command to query the UIM number, limit, and interval period parameters that are used to report the thresholding of UIM messages.

Keyword: **rtrv-uim-acthresh**

Related Commands: **dlt-uim-acthresh**, **set-uim-acthresh**

Command Class: Database Administration

Parameters

:uimn= (optional)

The UIM number.

Range: **1000-1499**

Default: Display all

Example

Display UIM number 1333 threshold:

rtrv-uim-acthresh:uimn=1333

Display the threshold for all UIMs that have been set:

rtrv-uim-acthresh

Dependencies

If specified, the **uimn** parameter value must be four numeric characters in the range **1000–1499**.

The **uimn** parameter value, if specified, must exist in the system Trouble Text Table.

Notes

None

Output

rtrv-uim-acthresh:uimn=1333

```
rlghncxa03w 03-11-01 08:50:12 EST EAGLE 31.3.0
UIMN      LIMIT      INTRVL
1333       100        5
The UIM Threshold Table is (1 of 499) 1% full.
```

rtrv-uim-acthresh

```
rlghncxa03w 03-11-01 08:50:12 EST EAGLE 31.3.0
UIMN      LIMIT      INTRVL
1333       100        5
1444       200       15
1155       50         30
The UIM Threshold Table is (3 of 499) 1% full.
```

rtrv-user**Retrieve User**

Use this command to show the information about the user currently logged on to the terminal from which this command was entered.

Keyword: **rtrv-user**

Related Commands: **act-user**, **chg-pid**, **chg-user**, **dact-user**, **dlt-user**, **ent-user**, **login**, **logout**, **rept-stat-user**, **rtrv-secu-user**

Command Class: Basic

Parameters

This command has no parameters.

Example

rtrv-user

Dependencies

This command cannot be entered from a SEAS terminal, because a SEAS terminal has no user ID associated with it.

Notes

The password is not shown.

This command shows the command class privileges for the user logged onto the system. No other users are shown.

All users have access to this command.

Output

The following example shows the display when the LNP feature is turned on and the Command Class Management feature is turned on:

rtrv-user

```
rlghncxca03w 03-11-07 09:50:17 EST EAGLE 31.3.0
user id      age page uout rev link sa  sys pu  db  dbg
manny              36 60  60  NO  YES  YES YES YES YES YES

u01 u02 u03 u04 u05 u06 u07 u08 u09 u10 u11 u12 u13 u14 u15 u16
NO  NO  NO  NO  YES YES YES YES YES YES YES YES YES YES YES YES YES

u17 u18 u19 u20 u21 u22 u23 u24 u25 u26 u27 u28 u29 u30 u31 u32
YES YES YES YES YES YES YES YES YES YES YES NO  NO  NO  NO  YES
```

;

The following example shows the display when the LNP feature is not turned on and the Command Class Management feature is not turned on:

rtrv-user

```
rlghncxca03w 03-11-07 09:50:17 EST EAGLE 31.3.0
USER ID      LINK  SA SYS  PU  DB DBG
eagle              YES YES YES YES YES YES

USER ID      AGE PAGE UOUT REV
eagle              750 0   0   NO
```

;

Legend

USER ID—The name of the user.

AGE—Shows the current age, in days, of the password associated with this user ID. If the password age is greater than 999 days, the value **999** is displayed.

PAGE—Shows the maximum password age established for this user ID. When AGE becomes greater than PAGE, the system forces the user to change the password at the next login. An asterisk (*) displayed after the value indicates that the system-wide default page parameter value, as configured on the **chg-secu-dflt** command, is in effect for the user ID.

UOUT—Shows the user ID aging interval, in days. If the user ID is not used (that is, no successful login) for longer than this interval, the system does not allow a login. An asterisk (*) displayed after the value indicates that the system-wide default uout parameter value, as configured on the **chg-secu-dflt** command, is in effect for the user ID.

REV—Shows whether the user ID is denied login (revoked). **YES** indicates that the user ID is revoked, **NO** indicates that the user ID is not revoked.

LINK—Shows whether the user has access to all commands in the Link Maintenance command class.

SA—Shows whether the user has access to all commands in the Security Administration command class.

SYS—Shows whether the user has access to all commands in the System Maintenance command class.

PU—Shows whether the user has access to all commands in the Program Update command class.

DB—Shows whether the user has access to all commands in the Database Administration command class.

DBG—Shows whether the user has access to all commands in the Debug command class.

If the Command Class Management feature is enabled and turned on, the following fields are displayed:

U01 - U32—Default configurable command class names. If user-defined names have been provisioned, they will appear instead of the default names.

If the LNP feature is turned on, the following fields are displayed:

LNPBAS—Shows whether the user has access to all commands in the LNP Basic command class.

LNPDB—Shows whether the user has access to all commands in the LNP Database command class.

LNPSUB—Shows whether the user has access to all commands in the LNP Subscription command class.

rtrv-vendid

Retrieve Vendor ID

Use this command to retrieve a list of Vendor ID entries from the VENDID table, for the GSM MAP SRI Redirect to Serving HLR feature.

Keyword: rtrv-vendid

Related Commands: dlt-vendid,

Command Class: Database Administration

Parameters

:vendnum= (optional)

Vendor Number

Range: 1-3

Example

```
rtrv-vendid
```

```
rtrv-vendid:vendnum=1
```

Dependencies

The GSM MAP SRI Redirect feature must be enabled before this command can be entered.

Notes

None.

Output

When the command is entered with no parameter, the Vendor Types are listed in numerical order. The Vendor Numbers for each Vendor Type are listed in numerical order, followed by the Vendor ID for each Vendor Number.

rtrv-vendid

```
tekelecstp 04-09-21 16:11:21 EST EAGLE 31.11.0
Vendor      Vendor      Vendor
Type        Number      ID
-----
1           1          123123123456789
1           1          1234567890abcde
1           2          112233445566778
1           2          214365870912543
2           3          098765432112345
2           3          098767890143251
```

VENDID table is (5 of 200) 3% full

;

When a Vendor number is specified, the Vendor Type and Vendor IDs for the specified Vendor number are listed in numerical order. The table capacity line shows the total number of entries in use, not just the number of entries displayed.

rtrv-vendid:vendnum=2

```
tekelecstp 04-09-21 16:13:54 EST EAGLE 31.11.0
Vendor      Vendor      Vendor
Type        Number      ID
-----
1           2          112233445566778
1           2          214365870912543
```

VENDID table is (5 of 200) 3% full

;

rtrv-x25-dstn**Retrieve X.25 Destination**

Use this command to show the associations between X.25 network addresses and SS7 point codes. If the node is actually in the X.25 domain, the X.25 address is a real network address and the point code is a dummy point code. If the node is in the SS7 domain, the point code is a real SS7 point code and the X.25 address is a dummy address. X.25 destinations are shown in order of entry.

Keyword: rtrv-x25-dstn

Related Commands: chg-x25-dstn, dlt-x25-dstn, ent-x25-dstn

Command Class: Database Administration

Parameters

:dpc= (optional)

Specifies the value used to set the destination point code field in the routing label of the MSU. The point code is an ANSI point code in the format of *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: dpca

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001–005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006–255**.

The point code **000-000-000** is not a valid point code.

:xaddr= (optional)

The X.25 network address of the X.25 destination entity or the SS7 node

Range: 1-15 digits

Default: Display all

Example

rtrv-x25-dstn

rtrv-x25-dstn:xaddr=220525586456772

rtrv-x25-dstn:dpc=133-13-1

Dependencies

If an X.25 address is specified, it must contain a minimum of four digits and must be in the X.25 destination table.

If a destination point code is specified, it must be assigned to at least one X.25 address.

The X.25 SS7 ANSI destination point code must be a full point code (ni-nc-ncm).

Notes

None

Output

rtrv-x25-dstn

```
tekelecstp 02-06-19 21:16:37 EST EAGLE 31.3.0
X25 ADDR      SS7 DPC      SSN  DOMAIN
220525586456772 133-013-001 002  X25
2342342325     251-001-004 236  SS7
23423423       251-001-001 112  SS7
423423045656767 251-001-003 112  X25
9342           251-001-004 234  X25
```

X.25 DSTN TABLE IS (5 of 1024) 1 % FULL

;

rtrv-x25-dstn:xaddr=220525586456772

```
tekelecstp 02-06-19 21:17:37 EST EAGLE 31.3.0
X25 ADDR      SS7 DPC      SSN  DOMAIN
220525586456772 133-013-001 002  X25
```

X.25 DSTN TABLE IS (5 of 1024) 1 % FULL

;

Legend

X25 ADDR—The X.25 address of the X.25 destination or the SS7 node

SS7 DPC—The SS7 destination point code.

SSN—The subsystem number associated with the SS7 DPC.

rtrv-x25-rte**Retrieve X.25 Route**

Use this command to show the routing parameters needed by the gateway portion of the LIMs with the **ss7gx25** application for establishing a virtual circuit that is permanently maintained by the system.

Keyword: **rtrv-x25-rte**

Related Commands: **chg-x25-rte, dlt-x25-rte, ent-x25-rte**

Command Class: Database Administration

Parameters

:lc= (optional)

The number of the logical channel on the X.25 signaling link that the PVC connection is assigned to. For automatic virtual circuits and remote virtual circuits, the logical channel number is arbitrary and cannot be specified.

Range: 1-255

Default: Display all

:lc2nm= (optional)

Generates network management for failures and recoveries of logical channels. When the logical channel being used to carry data fails, the Database Transport Access (DTA) feature requires that traffic be diverted to alternate routes. The Logical Channel to Network Management Mapping (LC2NM) feature handles this process.

Range: yes, no

Default: Display all

:loc= (optional)

The card location containing the X.25 signaling link that will sustain the connection. For an automatic virtual circuit, this link is the link on which the system initially attempts the connection. However, if this attempt fails, the connection may be established by the X.25 destination entity on any other link in this link's linkset.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Default: All card locations are shown.

:port= (optional)

The port on the card containing the X.25 signaling link.

Range: a

Default: a

:rt= (optional)

The type of routing to perform for messages originating in the SS7 domain and destined for the X.25 domain. Two types of routing are available: (1) route on X.25 destination point code (XPC), and (2) route using X.25 origination and destination point code combinations (PC).

Range: xpc, pc

Default: Display all

:saddr= (optional)

The alias X.25 address assigned to the SS7 destination entity on the SS7 side of the circuit.

Range: 1-15 digits

Default: All X.25 addresses assigned to the SS7 destination entity are shown.

:type= (optional)

The type of X.25 connection that the link is expected to maintain.

Range: **pvc, svca, svcr**

pvc—Permanent virtual circuit

svca—automatic virtual circuit

svcr—remote virtual circuit

Default: Display all

:xaddr= (optional)

The X.25 address assigned to the X.25 destination entity on the X.25 side of the circuit.

Range: 1-15 digits

Default: All X.25 addresses assigned to the SS7 destination entity are shown.

Example

```
rtrv-x25-rte
```

```
rtrv-x25-rte:xaddr=345454
```

```
rtrv-x25-rte:saddr=4545434
```

```
rtrv-x25-rte:xaddr=345454:saddr=4545434
```

```
rtrv-x25-rte:loc=1201:port=a:lc=2
```

```
rtrv-x25-rte:loc=1201:port=a
```

```
rtrv-x25-rte:type=avc
```

```
rtrv-x25-rte:rt=xpc
```

```
rtrv-x25-rte:lc2nm=no
```

Dependencies

Each X.25 address must have at least four digits.

If the **port** parameter is specified, the **loc** parameter must be specified.

If the **lc** parameter is specified, both the **loc** and **port** parameters must be specified.

The **limds0**, **limocu**, and **limv35** card types are the only valid card types for this command. These card types must be running the ss7gx25 GPL type.

The shelf and card must be equipped.

If **lc2nm=yes** is specified, **rt=pc** cannot be specified.

Notes

None

Output

rtrv-x25-rte

```

rlghncxa03w 03-11-19 21:16:37 EST EAGLE 31.3.0
X25 ADDR          SS7 ADDR          TYPE LOC  PORT  LC  RT   LC2NM
2510010011234567 342342341234567 pvc 1201  a    02 XPC YES
251001002          234234231          pvc 1201  a    04 PC  NO
51200105           34223422845          svca 1202  a    -- PC  NO
2510103            232330            pvc 1201  a    06 XPC YES
2510103            232330            svcr ----  -    -- PC  NO
2516019002         24247235          svca 3205  a    -- PC  NO
345454             4545434          svca 1201  a    -- PC  NO
X.25 ROUTE TABLE IS 30 % FULL

```

;

rtrv-x25-rte:xaddr=345454

```

rlghncxa03w 03-11-19 21:16:37 EST EAGLE 31.3.0
X25 ADDR          SS7 ADDR          TYPE LOC  PORT  LC  RT   LC2NM
345454            4545434          svca 1201  a    -- PC  NO
X.25 ROUTE TABLE IS 30 % FULL

```

;

rtrv-x25-rte:saddr=4545434

```

rlghncxa03w 03-11-19 21:16:37 EST EAGLE 31.3.0
X25 ADDR          SS7 ADDR          TYPE LOC  PORT  LC  RT   LC2NM
345454            4545434          svca 1201  a    -- PC  NO
X.25 ROUTE TABLE IS 30 % FULL

```

;

rtrv-x25-rte:xaddr=345454:saddr=4545434

```

rlghncxa03w 03-11-19 21:17:04 EST EAGLE 31.3.0
X25 ADDR          SS7 ADDR          TYPE LOC  PORT  LC  RT   LC2NM
345454            4545434          svca 1201  a    -- PC  NO
X.25 ROUTE TABLE IS 30 % FULL

```

;

rtrv-x25-rte:loc=1201:port=a:lc=2

```

rlghncxa03w 03-11-19 21:17:04 EST EAGLE 31.3.0
X25 ADDR          SS7 ADDR          TYPE LOC  PORT  LC  RT   LC2NM
2510010011234567 342342341234567 pvc 1201  a    02 PC  NO
X.25 ROUTE TABLE IS 30 % FULL

```

;

rtrv-x25-rte:loc=1201:port=a

```

rlghncxa03w 03-11-19 21:17:04 EST EAGLE 31.3.0
X25 ADDR          SS7 ADDR          TYPE LOC  PORT  LC  RT   LC2NM
2510010011234567 342342341234567 pvc 1201  a    02 PC  NO
251001002          234234231          pvc 1201  a    04 XPC YES
345454             4545434          svca 1201  a    -- PC  NO
X.25 ROUTE TABLE IS 30 % FULL

```

;

rtrv-x25-rte:type=svca

```

rlghncxa03w 03-11-19 21:16:37 EST EAGLE 31.3.0
X25 ADDR          SS7 ADDR          TYPE LOC  PORT  LC  RT   LC2NM
51200105           34223422845          svca 1202  a    -- PC  NO
2516019002         24247235          svca 3205  a    -- PC  NO
345454             4545434          svca 1201  a    -- PC  NO
X.25 ROUTE TABLE IS 30 % FULL

```

;

rtrv-x25-rte:type=svcr

```

rlghncxa03w 03-11-19 21:16:37 EST EAGLE 31.3.0
X25 ADDR          SS7 ADDR          TYPE LOC  PORT  LC  RT   LC2NM
2510103            232330            svcr ----  -    -- PC  NO
X.25 ROUTE TABLE IS 30 % FULL

```

;

Legend

X25 ADDR—The X.25 address assigned to the X.25 destination entity on the X.25 side of the circuit.

SS7 ADDR—The dummy X.25 address assigned to the SS7 destination entity on the SS7 side of the circuit.

TYPE—The X.25 connection type.

LOC—The card location of the X.25 signaling link.

PORT—The signaling link port on the card.

LC—The number of the logical channel on the X.25 signaling link that the PVC connection is assigned to.

RT—The type of routing to perform for messages originating in the SS7 domain and destined for the X.25 domain.

LC2NM—Whether the logical channel-to-network management function is enabled (**YES**) or disabled (**NO**).

rtrv-x25-slk**Retrieve X.25 Signaling Link Parameters**

Use this command to display the X.25 signaling link parameters.

Keyword: **rtrv-x25-slk**

Related Commands: **chg-x25-slk**

Command Class: Database Administration

Parameters

:loc= (optional)

The card location containing the X.25 signaling link.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

Default: All card locations are displayed.

:port= (optional)

The port on the card containing the X.25 signaling link.

Range: **a**

Example

rtrv-x25-slk

rtrv-x25-slk:loc=1204

rtrv-x25-slk:loc=1204:port=a

Dependencies

The **limds0**, **limocu**, and **limv35** card types are the only valid card types for this command. These card types must be running the **ss7gx25** GPL.

The shelf and card must be equipped.

The **port** parameter and the **loc** parameter must be specified together in the command.

Notes

None

Output**rtrv-x25-slk**

```
rlghncxa03w 02-06-10 11:43:04 EST EAGLE 29.0
LOC  PORT  T1  N1    N2  K  L3MODE  PVC  SVC  WIN  MPS
1201  A     10  2104  15  7  DCE     25  205  1   256
1202  A     9   1080  13  6  DTE     255  0    2   256
1203  A     8   2104  11  5  DCE     10   10   3   128
1204  A     7   1080  9   4  DTE     0    255  4   128
1205  A     6   2104  7   3  DCE     100  0    5   256
1206  A     5   1080  5   2  DTE     0    100  6   256
1207  A     4   2104  3   1  DCE     100  100  7   128
1208  A     3   1080  5   2  DTE     1    1    6   128
```

```
x25-slk table is (8 of 256) 3% full
```

```
;
```

rtrv-x25-slk:loc=1204

```
rlghncxa03w 03-11-19 21:16:37 EST EAGLE 31.3.0
LOC  PORT  T1  N1    N2  K  L3MODE  PVC  SVC  WIN  MPS
1204  A     7   1080  9   4  DTE     0    255  4   128
```

```
;
```

rtrv-x25-slk:loc=1201:port=a

```
rlghncxa03w 03-11-19 21:16:37 EST EAGLE 31.3.0
LOC  PORT  T1  N1    N2  K  L3MODE  PVC  SVC  WIN  MPS
1201  A     10  2104  15  7  DCE     25  205  1   256
```

```
;
```

Legend

LOC—The card location containing the X.25 signaling link.

PORT—The port on the card containing the X.25 signaling link.

T1—The amount of time to wait before retransmitting a frame.

N1—The maximum number of bits in a frame.

N2—The maximum number of retransmission attempts to complete a transmission.

K—The maximum number of outstanding I frames.

L3MODE—The logical layer 3 address of the connection

PVC—The total number of permanent virtual circuits (PVCs) available on this X.25 signaling link.

SVC—The total number of switched virtual circuits (automatic virtual circuits and remote virtual circuits) available on this X.25 signaling link.

WIN—The number of packets allowed for a window on this X.25 signaling link.

MPS—The maximum packet size (in bytes) allowed on this X.25 signaling link.

set-date**Set Date**

Use this command to set the date in the system.

Keyword: set-date

Related Commands: set-time

Command Class: Security Administration

Parameters**:date=** (mandatory)

The system date, to be reflected on all reports and output messages.

Range: 000101-991231(in the form *yymmdd*, where *yy*=year, *mm*=month, *dd*=day)**Example****set-date : date = 010307****Dependencies**

None

Notes

None

Output**set-date : date = 010307**rlghncxa03w 03-11-07 11:11:28 EST EAGLE 31.3.0
Date set complete.

;

set-gtwy-acthresh**Set Gateway Thresholds**

Use this command to set or change the level of activity thresholds to be used when reporting gateway screening activity. The STP reports screening activity only if the threshold is set and only if the threshold is reached. The thresholds are set on a linkset basis.

Keyword: set-gtwy-acthresh**Related Commands:** rtrv-gtwy-acthresh**Command Class:** Database Administration**Parameters****:intrvl=** (mandatory)

Monitor interval. The examination period, in minutes, during which the gateway screening activity thresholds are to be tested.

Range: 5, 10, 15, 20, 30

System Default: 0 (this value indicates that thresholds are not set)

:lsn= (mandatory)

Linkset name

Range: ayyyyyyyyy

1 alphabetic character followed by up to 9 alphanumeric characters

:recv= (optional)

Received message threshold. The threshold for MSUs received on the gateway linkset.

Range: 0-999999**Default:** The current value**System****Default:** 0 - 0**:rej=** (optional)

Reject threshold. The threshold for MSUs rejected on the gateway linkset because of screening.

Range: 0-999999

Default: The current value
System
Default: 0 - 0

Example

The following example shows how to set the linkset wy644368 rejection threshold to 100, with a 15 minute interval.

set-gtwy-acthresh: lsn=wy644368:rej=100:intrvl=15

The following example shows how to set the linkset wy644368 message threshold to 1000 and the rejection threshold to 300, with an interval of 20 minutes.

set-gtwy-acthresh: lsn=wy644368:intrv=20:rej=300:recv=1000

The following example shows how to set the linkset wy644368 so that no activity messages are produced.

set-gtwy-acthresh: lsn=wy644368:intrv=5:rej=0:recv=0

Dependencies

At least one optional parameter must be specified.

The linkset specified must exist in the gateway linkset entity set of the requesting system.

The linkset specified must exist in the active database.

The value specified for INTRVL parameter is not one of 5, 10, 15, 20 or 30 minutes.

Notes

None

Output

set-gtwy-acthresh: lsn=wy644368:rej=100:intrvl=15

```
rlghncxa03w 03-11-18 08:50:12 EST EAGLE 31.3.0
SET-GTWY-TRSHLD: MASP A - COMPLTD
```

;

set-scrrej-prmtrs

Set Parameters for SS7 Message-Rejection Reporting

Use this command to change the STP values that limit the display of MSUs rejected because of gateway screening notification messages that could become excessive. The new values overwrite the existing values.

Keyword: set-scrrej-prmtrs

Related Commands: rtrv-gtwy-acthresh, rtrv-gtwy-prmtrs, set-gtwy-acthresh

Command Class: Database Administration

Parameters

:intrvl= (mandatory)

Monitor interval. The examination period, in minutes, during which the gateway screening activity thresholds are to be tested.

Range: 5, 10, 15, 20, 30

System

Default: 5 - 5

:limit= (mandatory)

Threshold not to be exceeded.

Range: 0-999999
System
Default: 9999 - 9999

Example

```
set-scrrej-prmtrs:limit=200:intrvl=10
```

Dependencies

The value specified for INTRVL parameter is not one of 5, 10, 15, 20 or 30 minutes.

Notes

None

Output

```
set-scrrej-prmtrs:limit=200:intrvl=10
```

```
rlghncxa03w 03-11-18 08:50:12 EST EAGLE 31.3.0
SET-SCRREJ-PRMTRS: MASP A - COMPLTD
```

```
;
```

set-time**Set Time**

Use this command to set the system clock. The clock is used to determine when measurements collection takes place as well as several other time-driven events.

Keyword: set-time

Related Commands: set-date

Command Class: Security Administration

Parameters

:time= (mandatory)

The system time that is to be reflected on all reports and output messages.

Range: 0000-2359

hhmm where hh = 00-23 (hour) and mm = 00-59 (minute)

:tz= (optional)

The time zone

Range: est, edt, cst, cdt, mst, mdt, pst, pdt, hst, hdt, ast, adt, gmt, wet, west, utc, bst, cet, cest, met, mest, fwt, fst, eet, eest, sast, msk, msd, ist, idt, cct, awst, awdt, rok, acst, acdt, aest, aedt, nzst, nzdt, akst, akdt, nst, ndt, bra

The time zones are described in Table 5-69.

Default: Current value

Table 5-69. Time Zones Set by the **set-time** command

Abbreviation	Time Zone	Abbreviation	Time Zone
est	Eastern Standard Time	edt	Eastern Daylight Time
cst	Central Standard Time	cdt	Central Daylight Time
mst	Mountain Standard Time	mdt	Mountain Daylight Time
pst	Pacific Standard Time	pdt	Pacific Daylight Time

Table 5-69. Time Zones Set by the **set-time** command

Abbreviation	Time Zone	Abbreviation	Time Zone
hst	Hawaiian Standard Time	hdt	Hawaiian Daylight Time
ast	Atlantic Standard Time	adt	Atlantic Daylight Time
gmt	Greenwich Mean Time	wet	Western European Time
west	Western European Summer Time	utc	Universal Time Coordinated
bst	British Summer Time	cet	Central European Time
cest	Central European Summer Time	met	Middle European Time
mest	Middle European Summer Time	fwf	French Winter Time
fst	French Summer Time	eet	Eastern European Time
eest	Eastern European Summer Time	sast	South African Standard Time
msk	Moscow Time	msd	Moscow Summer Time
ist	India Standard Time	idt	India Daylight Time
cct	China Coast Time	awst	Australian Western Standard Time
awdt	Australian Western Daylight Time	rok	Republic of Korea
acst	Australian Central Standard Time	acdt	Australian Central Daylight Time
aest	Australian Eastern Standard Time	aedt	Australian Eastern Daylight Time
nzst	New Zealand Standard Time	nzdt	New Zealand Daylight Time
akst	Alaska Standard Time	akdt	Alaska Daylight Time
nst	Newfoundland Standard Time	ndt	Newfoundland Daylight Time
bra	Brazil Standard Time		

Example

```
set-time:time=1432:tz=est
```

Dependencies

None

Notes

None

Output

```
set-time:time=1432:tz=est
rlghncxa03w 02-11-07 14:32:28 EST EAGLE 30.0.0
Time set complete.
;
```

set-uim-acthresh**Set Activity Level Thresholds for STP UIM
Activity Reporting**

Use this command to set or change the level-of-activity threshold for reporting UIM messages. The system suppresses the generation of UIM messages when message generation exceeds the threshold that was defined for the interval period. The values are set within five seconds after the command was entered. Any previous count is cleared and the new or changed threshold and limit is enforced. Refer to “Configuring the UIM Threshold” in the *Database Administration Manual – System Management* for more information about UIM threshold configuration.

Keyword: set-uim-acthresh

Related Commands: dlt-uim-acthresh, rtrv-uim-acthresh

Command Class: Database Administration

Parameters

:intrvl= (mandatory)

The monitor interval in minutes.

Range: 5, 10, 15, 20, 25, 30

Default: Current value

:uimn= (mandatory)

The UIM number.

Range: 1000-1499

:force= (optional)

Required to set the **limit** parameter to 0 for a given interval.

**CAUTION**

CAUTION: Setting the limit to 0 turns off all occurrences of the specified UIM. Use this manner of creating thresholds only if you are certain you have specified the correct UIM.

Range: yes, no

Default: no **force** specified

:limit= (optional)

The message threshold.



CAUTION: Setting the limit to 0 will turn off all occurrences of the specified UIM. This can be dangerous if the wrong UIM number is specified by mistake. It is highly recommended that thresholds for UIMs are not set in this manner, but the ability is provided for certain extreme cases. The force parameter must be specified to set the limit to 0, and an additional scroll area message is issued.

Range: 0-9999

Default: Current value

Example

Sets UIM number 1333 threshold to 100 in a 5-minute interval:

set-uim-acthresh:uimn=1333:limit=100:intrvl=5

Sets UIM number 1444 threshold to 200 in a 15-minute interval:

set-uim-acthresh:uimn=1444:limit=200:intrvl=15

Dependencies

At least one optional parameter must be specified.

The **uimn** parameter value must be a numeric value in the range **1000–1499**.

The **limit** parameter value must be a numeric value in the range **0–9999**.

The **intrvl** parameter value must be one or two numeric characters with the following values: **5, 10, 15, 20, 25, 30**.

The **force=yes** parameter must be specified to set the **limit** parameter to **0** for a given interval. Setting the **limit** to **0** turns off all occurrences of the specified UIM. See the cautions under the **force** and **limit** parameters.

When creating a new UIM threshold, both the **limit** and **intrvl** parameters must be specified.

The specified **uimn** parameter value must exist in the system Trouble Text table.

Notes

None

Output

set-uim-acthresh:uimn=1333:limit=100:intrvl=5

```
rlghncxa03w 03-11-01 08:50:12 EST EAGLE 31.3.0
SET-UIM-ACTHRESH: MASP A - COMPLTD
```

;

tst-bip

Test Board Identification PROM

Use this command to test each byte of the specified board identification PROM (BIP) by reading and writing to the PROM. The test is performed for both the main assembly and applique BIPs.

Keyword: **tst-bip**

Related Commands: **„ rtrv-bip**

Command Class: System Maintenance

Parameters

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: **1101–1108, 1111–1113, 1115, 1201–1208, 1211–1218, 1301–1308, 1311–1318, 2101–2108, 2111–2118, 2201–2208, 2211–2218, 2301–2308, 2311–2318, 3101–3108, 3111–3118, 3201–3208, 3211–3218, 3301–3308, 3311–3318, 4101–4108, 4111–4118,**

4201–4208, 4211–4218, 4301–4308, 4311–4318, 5101–5108, 5111–5118, 5201–5208,
5211–5218, 5301–5308, 5311–5318, 6101–6108, 6111–6118
HMUX and HIPR locations are not valid.

Example

tst-bip:loc=1211

Dependencies

The card location, frame, shelf, or slot must be within the allowed range.

The card location must be valid for the command.

The board type **type=dbd** parameter is not valid for card type GPSM-II, HCAP, ATM or DCM.
HMUX and HIPR cards do not contain BIP information.

The card specified by the **loc** parameter must be equipped in the database.

The card specified by the **loc** parameter must be in the OOS-MT-DSBLD state prior to BIP testing.

Notes

The specified card must be inhibited.

The **tst-bip** command verifies that the PROM is good by writing and reading to the PROM. The **rtrv-bip** command show the level of the BIP, as well as the board part number, the revision number, and the serial number. If the **rtrv-bip** command fails, this indicates that communications to the card has failed, and the card should be replaced.

Output

tst-bip:loc=1211

```
rlghncxa03w 03-11-07 16:19:08 EST EAGLE 31.3.0
Test Board Identification PROM Location: 1211 - MBD Packet: 1
-----
BIP Passed

rlghncxa03w 03-11-07 16:19:08 EST EAGLE 31.3.0
Test Board Identification PROM Location: 1211 - DBD Packet: 1
-----
BIP Passed
;
```

tst-disk

Test Disk

Use this command prior to an upgrade, or as a diagnostic tool, to test the integrity of an EAGLE 5 ISS disk, fixed (TDM) or removable (MDAL), at the specified location. The test is non-intrusive and non-destructive to the disk. A read-only test is executed for all logical blocks (LBAs) used on the specified target disk and a report identifying any bad or questionable LBAs is output.

Keyword: **tst-disk**

Related Commands: **copy-disk**

Command Class: System Maintenance

Parameters

:loc= (mandatory)

The location of the disk to be tested.

Range: **1114, 1116, 1117**

:partition= (optional)

Portion of disk to be tested. This parameter specifies the individual physical disk partition (1, 2, 3, or 4) or all defined partitions for a given disk size up to a maximum of 4 partitions.

Range: **1, 2, 3, 4, all**

1, 2, 3, 4—Tests the specified existing partition on the disk. Only the number or numbers for the partition or partitions that exist on the disk are valid. (For example, if the disk size allows only 2 partitions, **partition=3** and **partition=4** are invalid for that disk.)

all—Tests all existing partitions on the fixed disk or on one side of the removable disk

Default: **all**

Example

tst-disk:loc=1116

Dependencies

The card in the specified location (**loc**) must be a TDM or MDAL card.

The disk to be tested must be in service.

If a TDM location is specified, the TDM cannot be reserved (as when a copy-disk command is running).

The target drive must have low level format.

The **tst-disk** command can be run simultaneously on both TDMs, if entered from different terminals.

The removable disk can be tested simultaneously with the standby TDM but not with the active TDM.

To test the removable disk when **loc=1117** is specified, the disk must be inserted in the removable cartridge drive on the MDAL card.

The **partition=3** and **partition=4** values are invalid for a 4GB fixed drive. The only valid value for the 2.3 GB and 4.1 GB removable disks is **partition=1**. An error message will be generated for a disk that has been Formatted (**format-disk** command) but does not yet contain a DOS directory structure (created with the **copy-disk** command) when **partition= 1, 2, 3, 4, or all** is specified.

Notes

A physical fixed (TDM) or removable (MDAL) disk is formatted and given a DOS directory structure to define the number of physical partitions that the disk size can accommodate. (The logical partitions that contain database, backup, GPL, and measurements files are placed in these physical partitions, with no correlation between the physical numbers and the logical contents.)

For a fixed TDM disk, the **partition** parameter specifies the individual partition (1, 2, 3, or 4) or all existing partitions to be tested.

- One partition = 2 GB.
- The 4 GB drive contains two 2 GB partitions.
- The 9 GB drive and the 18 GB drive each contain four 2 GB partitions.
- The 9 GB drive contains four 2 GB partitions.
- Any disk space beyond the four 2 GB partitions is unused disk space (and always has been due to EAGLE DISK FAT structure used).

For a removable MDAL disk, each side of the disk will contain the maximum number of partitions (up to 4) that the disk size can accommodate. Only one side of the disk is tested with one **tst-disk** command. For example, a 2.3 GB removable disk has one partition on each side that is slightly larger than 1 GB. A 4.1 GB removable disk has one 2 GB partition on each side. Only **tst-disk:partition=1** is valid for either of these disks.

The **partition=all** value implies that testing starts with the first partition, then second, and so on, until the last existing disk partition is detected without skipping any non-existing or defined partitions.

Table 5-70 outlines execution time estimates based on disk capacity.

Table 5-70. Test Disk Execution Times

Capacity	Nominal Execution Time	Maximum Execution Time for 100% Errors
4.0 GB	40 minutes	27.5 hours
9.0 GB	1 hour 45 minutes	(Not determined)
18 GB	30 minutes (partition=1) 5 hours (partition=disk) depending on amount of disk tested and EAGLE 5 ISS provisioning/ activity	(Not determined)
2.3 GB Magneto Optical Removable	18 minutes	7.4 hours
4.1 GB Magneto Optical Removable	25 minutes (requires 806 MDAL)	7.4 hours
507 MB	5 minutes	3.4 hours
2.0 GB	20 minutes	13.5 hours
4.0 GB	40 minutes	27.5 hours
Magneto Optical Removable	20 minutes	7.4 hours
SyQuest Removable	10 minutes	2 hours

Nominal times for **tst-disk** command execution depend on the capacity of the disk being tested and assume that few or no errors are found. Maximum execution times are based on disk capacity, retry count, and retry delay. Each read error and retry may cause a delay of up to three seconds. If a TDM has 100% error sectors, the MASP will likely reset, terminating the disk test. A termination and reset will not occur, however, when testing the removable cartridge.

Because of the intense, sustained disk activity created when **tst-disk** is executed, concurrently performing other disk-based activities, such as prolonged LNP command entry or database backups, will result in performance degradation up to twice the usual execution time.

Because of the extended processing time required for large disks, a progress message is displayed every five minutes providing the current LBA and the total LBA count for the partition.

Specific errors are reported for the first 10 error occurrences. Thereafter, only the error count is tracked and summary results are reported upon completion.

Output

```

tst-disk:loc=1116
  rlghncxa03w 03-11-27 11:40:02 EST  EAGLE 31.3.0
  TST-DISK of all partitions initiated for TDM 1116
;

  rlghncxa03w 03-11-27 11:40:02 EST  EAGLE 31.3.0
  TST-DISK: TDM 1116 in progress 868680 of 4124735 LBA read
;

  rlghncxa03w 03-11-27 11:40:02 EST  EAGLE 31.3.0
  TST-DISK Error: TDM 1116 LBA range 4124706 - 4124960
  Check Condition: DISK_NOT_READY
  TST-DISK results for TDM 1116
  Total LBAs = 4124735    LBA size = 512
  Retries    = 1    Errors    = 1
  Command Completed
;

tst-disk:loc=1116:partition=2
  rlghncxa03w 03-11-27 11:40:02 EST  EAGLE 31.3.0
  TST-DISK on Partition 2 initiated for TDM 1116
;

  rlghncxa03w 03-11-27 11:40:02 EST  EAGLE 31.3.0
  TST-DISK: TDM 1116 in progress 1234567 of 4194304 LBA read
;

  rlghncxa03w 03-11-27 11:40:02 EST  EAGLE 31.3.0
  TST-DISK Error: TDM 1116 LBA range 4194304 - 4194558
                                (NOTE: w/i 2nd disk partition)
  Check Condition: DISK_NOT_READY
  TST-DISK results for TDM 1116
  Total LBAs = 4194304    LBA size = 512
  Retries    = 1    Errors    = 1
  Command Completed
;

```

tst-dlk**Test Data Link**

Use this command to test the specified TCP/IP data link. The TCP/IP data link is tested with an ethernet test that is an echo test type called ping.

Keyword: **tst-dlk**

Related Commands: **act-dlk, canc-dlk, dlt-dlk, ent-dlk, rept-stat-dlk, rtrv-dlk**

Command Class: Link Maintenance

Parameters

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

:type= (mandatory)

The type of test to run.

Range: **ping**

:ipaddr= (optional)

The IP address of the remote host. This is a TCP/IP address expressed in standard dot notation. IP addresses consist of the system's network number and the machine's unique host number. An example IP address is **192.126.100.5**, where **192.126.100** is the network number and **5** is the machine's host number.

Range: 1-223, 0-255

4 numbers separated by dots

1-223—first number

0-255—the other three numbers

Default: Host IP

:rc= (optional)

The number of times the test is repeated.

Range: 1-15

Default: 1

Example

tst-dlk: loc=1206:type=ping

Dependencies

No other action command can be in progress when this command is entered.

The card location must contain an ACM.

The shelf and card must be equipped.

The specified card must have a TCP/IP data link assigned to it.

If a test repeat count (**rc**) is not entered, the test is not repeated.

If a data link test is in progress, another data link test cannot be started.

Notes

None

Output

tst-dlk: loc=1206:type=ping

```
rlghncxa03w 03-11-27 17:00:36 EST EAGLE 31.3.0
Command Accepted: Test Link message is sent.
```

```
rlghncxa03w 03-11-27 17:00:36 EST EAGLE 31.3.0
Command Completed.
```

```
rlghncxa03w 03-11-27 17:00:36 EST EAGLE 31.3.0
1310.1132 CARD 1206 INFO STPLAN DLK ping test completed
TESTS REQUESTED= 1 PASSED COUNT= 1 FAILED COUNT= 0
AVR RND TRIP= 10 MAX RND TRIP=10 MIN RND TRIP=10
HOST IPADDR=198.089.040.069
```

;

tst-e1**Test E1 Port**

Use this command to test HC-MIM and E5-E1T1 E1 ports. The loopback parameter provides the ability to select local transceiver (**lxvr**) and line loopback tests.

The **tst-e1** command is rejected if a loopback test is not compatible with the port type.

Keyword: **tst-e1**

Related Commands: **chg-e1, dlt-e1, ent-e1, rtrv-e1**

Command Class: System Maintenance

Parameters

:e1port= (mandatory)

E1 port number. The value must be an E1 port that has already been configured with an E1 interface on the specified HC-MIM or E5-E1T1 E1 card.

Range: **1-8**

Ports 3 - 8 can be specified only for HC-MIM and E5-E1T1 cards.

:loc= (mandatory)

Card location. The HC-MIM or E5-E1T1 card location as stenciled on the shelf of the system.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

:action= (optional)

Indicator of command action to stop or start a test.

Range: **start, stop**

Default: **start**

:loopback= (optional)

Select loopback test type.

Range: **line, lxvr**

Default: **lxvr**

Example

tst-e1:e1port=1:loc=1203:loopback=lxvr

tst-e1:e1port=1:loc=1203:action=stop

Dependencies

This command cannot be entered during upgrade.

The card in the specified card location (**loc** parameter) must be an HC-MIM or E5-E1T1 card with card type **lime1**.

The card in the specified card location (**loc** parameter) must be equipped.

The card in the specified card location (**loc** parameter) must be in service.

The specified E1 port (**e1port** parameter) on the card (**loc** parameter) must have a defined E1 interface.

All signaling links that provide timeslots serviced by E1 interfaces on the specified card (**loc** parameter) must be deactivated before this command can be entered. None of the signaling links can be running link diagnostic tests (**tst-slkl** and **act-cdl**) when this command is entered.

Only one port test can be running on an E1 port (**e1port** parameter) at one time.

When the **action=stop** parameter is specified, the **loopback** parameter cannot be specified.

The **action=stop** parameter can be specified only when a port test is running.

Notes

This command can be used for only HC-MIM and E5-E1T1 card ports.

Only one port test can be performed at a time on an E1 port. When a port test is in progress on an E1 port, subsequent test requests are rejected.

Output

tst-e1:e1port=1:loc=1203:loopback=lxvr

```
rlghncxa03w 05-01-07 16:19:08 EST EAGLE5 33.0.0
Command Accepted: Test Port message is sent.
```

;

```
rlghncxa03w 05-01-07 16:19:08 EST EAGLE5 33.0.0
Command Completed.
```

;

tst-e1:e1port=1:loc=1203:action=stop

```
rlghncxa03w 05-01-07 16:19:08 EST EAGLE5 33.0.0
Command Accepted: Stop Port test message is sent.
```

;

```
rlghncxa03w 05-01-07 16:19:08 EST EAGLE5 33.0.0
Command Completed.
```

;

tst-imt

Test IMT Bus

The interprocessor message transport bus (IMT bus) is the main communications artery between all subsystems in the system. Use this command to determine the location of faults on a failed or abnormal IMT bus. The alternate bus state must be IS-NR. The target bus state must be OOS-MT-DSBLD. Notice: IMT Fault test terminated. Non-Standard cabling or IMT Bus-X state change detected.

NOTE: At least one card must be populated in each EAGLE 5 ISS shelf to allow tst-imt the opportunity to successfully execute. The card does not need to be a provisioned card; the card must be in IS-NR state on both IMT busses before the tst-imt command is entered. If an empty shelf does exist in the EAGLE 5 ISS, the following text is displayed when you try to run tst-imt:

Keyword: tst-imt

Related Commands: clr-imt-stats, init-imt-gpl, rept-imt-lvl1, rept-imt-lvl2

Command Class: System Maintenance

Parameters

:bus= (mandatory)

The IMT bus to test.

Range: a, b

Example

tst-imt:bus=a

tst-imt:bus=b

Dependencies

A related IMT command must not be in progress. Only one fault isolation test can be active at a time.

This command cannot be entered if the alternate bus is other than in service - normal (IS-NR).

This command cannot be entered if the target bus is other than out of service - maintenance disabled (OOS-MT-DSBLD).

This command cannot be entered during the IMT statistics collection period following an hourly boundary (IMT performance monitoring).

Notes

Probable causes are listed in order of most probable to least probable. The listed components should be replaced in order listed by the output of the **tst-imt** command.

Multiple, masking points of failure can occur in the same bus segment. Such faults are reported as a single bus segment fault. Because running this command on a system with no IMT bus faults prints an indication that no faults were found, you can iteratively replace components and run this test until all components in the segment are ruled out.

A detection of an IMT address mismatch indicates a faulty backplane or card.

A detection of an inconsistency with a particular card's IMT card list indicates an error of unknown origin, probably due to one or more lost messages.

When the **tst-imt** command completes, either through normal termination of the command or because the command was ended for another reason, you must administratively enable the target bus. If all faults have meanwhile been isolated and corrected, the target bus becomes operational.

When a fault is detected, the possible error sources are listed in order from the most likely to the least likely. This ordering is based on operational experience.

Output

Connectivity test fails

tst-imt:bus=a

```
rlghncxa03w 03-11-27 12:47:07 EST EAGLE 31.3.0
IMT Fault Isolation Bus A
Fault Location    Probable Cause  Failure(s)
Bus 1218-1301    HIPR 1209
                  HIPR 1309
                  Card 1218
                  Card 1301
                  Cable connecting Shelves 1200 and 1300 on Bus A
                  Backplane 1200
                  Backplane 1300
                                     Connectivity Test Failed
Bus 1304-1305    HIPR 1309
                  Card 1304
                  Card 1305
                  Backplane 1300
                                     Connectivity Test Failed
```

;

Pass-through test fails.

tst-imt:bus=a

```
rlghncxa03w 03-11-27 12:47:07 EST EAGLE 31.3.0
IMT Fault Isolation Bus B
Fault Location    Probable Cause  Failure(s)
Card 1201         Card 1201
                                     Pass-through Test Failed
Card 1301         Card 1301
                                     Pass-through Test Failed
```

;

All tests pass.

tst-imt:bus=b

```
rlghncxa03w 03-11-27 12:47:07 EST EAGLE 31.3.0
IMT Fault Isolation Bus B
Fault Location    Probable Cause  Failure(s)
No Faults Found
                                     All Tests Passed.
```

;

tst-slk**Test Signaling Link**

Use this command for testing signaling links. The **loopback** parameter on the **tst-slk** command provides the ability to select from among the following loopback tests: local transceiver (**lxvr**), **oam**, **line**, **payload**, and either low-speed signaling links or ATM high-speed signaling links (**sltc**).

- The **tst-slk** command is not valid on TCP/IP point-to-multipoint links (DCM cards equipped as SS7IPGW and IPGWI links).
- For low-speed links, the **lxvr** and **sltc** tests are allowed.
- On LIM-ATMs, the **lxvr**, **sltc**, **payload**, **line**, and **oam** tests are allowed.
- On TCP/IP point-to-point links (DCM cards equipped as IPLIM or IPLIMI links), **sltc** is the only supported test. The **sltc** test is allowed only for links configured with **ipliml2=saaltali** or **ipliml2-m2pa**.
- On E1/T1 MIM cards, the **sltc** test is the only supported test.

- On E1 ATM card (**atmitu** application), the **lxvr**, **oam**, and **sltc** tests are allowed.

See Appendix A for information about loopback testing commands and functions.

Keyword: **tst-slk**

Related Commands: **act-lpo**, **act-slk**, **blk-slk**, **canc-lpo**, **canc-slk**, **dact-slk**, **inh-slk**, **rept-stat-tstslk**, **rtrv-slk**, **ublk-slk**, **unhb-slk**

Command Class: Link Maintenance

Parameters

:link= (mandatory)

The signaling link on the card specified in the **loc** parameter. The links can be specified in any sequence or pattern.

Synonym: **port**

Range: **a, b, a1-a31, b1-b31**

Not all card types support all **link** parameter values.

See Table A-1 for valid **link** parameter range values for each type of card that can have a location specified in the **loc** parameter.

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

:action= (optional)

Indicator of command action to stop or start a test.

Range: **start, stop**

Default: **start**

:force= (optional)

The **force=yes** parameter must be specified to start a test when there are 256 or more tests already running.

Range: **yes, no**

Default: **no**

:loopback= (optional)

Specifies the type of loopback test to run.

Range: **line, lxvr, oam, payload, sltc**

line — This test is similar to the payload loopback test, but the data transmitted to the remote system is received by the remote system's ATM driver. This test is prohibited for the E1 ATM card.

lxvr — Loopback at the local transceiver without involving the remote STP. For the ADS0, AINF, AOCU, and AV35 appliques, the MTP-2 protocol stack and ISCC hardware are tested. For AATM applique and DS1 interface, the AATM hardware, ATM level 2 protocol stack, and AAL5CP portion of ATM driver are tested.

oam — Messages are passed between local and remote systems to guarantee that the ATMM portion of ATM driver is functioning.

payload — This test is similar to the local transceiver loopback test. The wire is also tested because the loopback is at the remote's DS1 interface instead of the local's DS1 interface. This test is prohibited for the E1 ATM card.

sltc— This test can be run on either the low-speed signaling links or the ATM high-speed signaling links. This is the only test that is supported for links on the E1/T1 MIM card, and for **saaltali** and **m2pa** links on IPLIMx cards.

Default: **sltc**

:time= (optional)

The time duration for testing the link.

Range: **1-240000**

hhmmss—*hh*=hours (**00-24**), *mm*=minutes (**00-59**), *ss*=seconds (**00-59**)

For example, **time=1** or **time=000001** is one second; **time=240000** is 24 hours;

time=200 or **time=000200** is 2 minutes.

Default: **1**

Example

```
tst-slk:loc=1203:link=a
```

```
tst-slk:loc=1203:link=a:loopback=lxvr
```

```
tst-slk:loc=1205:link=b:time=000200:force=yes:action=start
```

```
tst-slk:loc=1205:link=b:action=stop
```

```
tst-slk:loc=1205:link=b:time=200
```

Dependencies

A card location that is valid and defined in the database must be specified.

The card must be equipped and in service, and must be one of the following cards:

- A LIM card running the **ss7ansi**, **ss7gx25**, **atmansi**, or **ccs7itu** application
- An E1 ATM card running the **atmitu** application
- A dual-slot DCM or EDCM card running the **iplim** or **iplimi** application with links having **ipliml2=saaltali**
- An SSEDCCM card running the **iplim** or **iplimi** application with links having **ipliml2=m2pa** or **ipliml2=saaltali**
- An E1/T1 MIM card or an HC-MIM card running the **ss7ansi** or **ccs7itu** application
- An E5-ENET card running the **iplim** or **iplimi** application

The following **link** parameter values can be specified for the following cards that support more than 2 links per card:

- **a1-a3, b1-b3**—Multi-port LIM (MPL, MPL-T), SSEDCCM card running the **iplim** or **iplimi** application with links having **ipliml2=m2pa** or **ipliml2=saaltali**, E1/T1 MIM card
- **a1-a31, b1-b31**—HC-MIM card
- **a1-a15, b1-b15**—E5-E1T1 card
- **a1-a7, b1-b7**—E5-ENET card running the **iplim** or **iplimi** application that supports 16 links

If the signaling link is an ATM HSL signaling link, only the **link=a** parameter can be specified.

This command is not supported for cards running the **ss7ipgw** and **ipgwi** applications.

This command cannot be entered for an IPLIMx signaling link that has an **ipliml2** parameter setting of **m3ua**.

For IPLIMx signaling links having an **ipliml2** parameter setting of **saaltali** or **m2pa**, only the **loopback=sltc** test is allowed.

The **payload** and **line** values are not valid for the **loopback** parameter when the card is an E1 ATM. Only the **sltc** test can be run on card types **lime1**, **limt1**, and **limch**.

The card must contain the specified signaling link.

The specified signaling link must be provisioned in the database.

The specified signaling link must be an SS7 signaling link.

The signaling link that is used for LFS (Link Fault Sectionalization) testing cannot be active.

The previously entered command for a link test must be accepted before another link test command can be entered.

This command cannot be entered if the LFS test is running on the specified link.

The specified link cannot be in Command Driven Loopback (CDL) when this command is entered. The link must be removed from CDL before this command can be entered for the link. (See the **act-cdl** and **dact-cdl** commands).

The **force=yes** parameter must be specified to start a test when 256 or more tests are already running in the system.

This command cannot be entered if the maximum number of LFS or link tests are already running in the system. At least one active test must complete before the command can be entered again.

Only one link test can be running on a signaling link at one time.

The **action=stop** parameter cannot be specified when there is no active link test running on the specified link.

When the **action=stop** parameter is specified, the **loopback**, **time**, and **force** parameters cannot be specified.

Notes

The **lxvr** and **sltc** loopback tests can be run on low-speed signaling links. All the loopback tests can be run on the ATM high-speed signaling links.

This command cannot be used with X.25 signaling links.

Output

If the card is inhibited, not in service, the following message appears when you try to test the links on the card:

tst-slk:loc=1203:link=a

```
rlghncxa03w 03-11-07 16:19:08 EST EAGLE 31.3.0
Command Rejected : Card is not in service.
```

;

tst-slk:loc=1205:link=b:time=000200:force=yes:action=start

```
tekelecstp 03-11-27 16:15:20 EST EAGLE 31.3.0
tst-slk:loc=1205:link=b:time=000200:force=yes:action=start
Command Accepted: Test Link message is sent.
```

;

```
tekelecstp 03-11-27 16:15:22 EST EAGLE 31.3.0
Command Completed.
```

;

```
tekelecstp 03-11-27 16:22:25 EST EAGLE 31.3.0
LOC = 1205 Link = B LSN = ls12345678 Start time = 16:22:25
LOOPBACK = SLTC TIME = 00:02:00
TEST STATUS = Loopback success
```

;

tst-slk:loc=1205:link=b:action=stop

```
tekelecstp 03-11-27 16:15:20 EST EAGLE 31.3.0
tst-slk:loc=1205:link=b:action=stop
Command Accepted: Stop Test Link message is sent.
```

;

```
tekelecstp 03-11-27 16:15:22 EST EAGLE 31.3.0
Command Completed.
```

;

```
tekelecstp 03-11-27 16:22:25 EST EAGLE 31.3.0
LOC = 1205 Link = B LSN = ls12345678 Start time = 16:22:25
LOOPBACK = LXVR TIME = 00:01:00
TEST STATUS = Loopback cleared
```

;

tst-slk:loc=1205:link=b:time=200

```
tekelecstp 03-11-27 16:15:20 EST EAGLE 31.3.0
tst-slk:loc=1205:link=b:time=200
Command Accepted: Stop Test Link message is sent.
```

;

```
tekelecstp 03-11-27 16:15:22 EST EAGLE 31.3.0
Command Completed.
```

;

```
tekelecstp 03-11-27 16:22:25 EST EAGLE 31.3.0
LOC = 1205 Link = B LSN = ls12345678 Start time = 16:22:25
LOOPBACK = SLTC TIME = 00:00:53
TEST STATUS = Loopback failed
```

;

Legend

LOC—Card location that contains the signaling being tested.

LINK—Signaling link being tested on the card.

LSN—Name of the linkset that contains the link being tested.

START TIME—Time that the test started.

LOOPBACK—Type of loopback test being run.

TIME—Length of time that the test ran. This value can exceed the value that was specified in the **time** parameter if the test requires more than the specified time to complete.

TEST STATUS—

- When a **tst-slk** command with **action=start** (specified or default) is entered, any one of the following *TEST STATUS* values can appear:
 - Loopback success
 - Loopback failed
 - Loopback aborted
 - Loopback in-progress
 - Loopback prevented
 - Loopback invalid
- When a **tst-slk** command with **action=stop** is entered, any one of the following *TEST STATUS* values can appear:
 - Loopback cleared
 - Loopback could not be cleared

tst-t1

Test T1 Port

Use this command to test T1 Ports on the HC-MIM and E5-E1T1 cards. The loopback parameter provides the ability to select local transceiver (**lxvr**) and line loopback tests.

The **tst-t1** command is rejected if a loopback test is not compatible with the port type.

Keyword: **tst-t1**

Related Commands: **chg-t1, dlt-t1, ent-t1, rtrv-t1**

Command Class: System Maintenance

Parameters

:loc= (mandatory)

Card location. The HC-MIM or E5-E1T1 card location as stenciled on the shelf of the system.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

:t1port= (mandatory)

T1 port number. The value must be a T1 port that has already been configured with a T1 interface on the specified HC-MIM or E5-E1T1 T1 card.

Range: **1-8**

Ports 3 - 8 can be specified only for HC-MIM and E5-E1T1 cards.

:action= (optional)
 Indicator of command action to stop or start a test.
Range: **start, stop**
Default: **start**

:loopback= (optional)
 Select loopback test type.
Range: **line, lxvr**
Default: **lxvr**

Example

```
tst-t1:t1port=1:loc=1203:loopback=lxvr
tst-t1:t1port=1:loc=1203:action=stop
```

Dependencies

This command cannot be entered during upgrade.

The card in the specified card location (**loc** parameter) must be an HC-MIM or E5-E1T1 card with card type **limt1**.

The card in the specified card location (**loc** parameter) must be equipped.

The card in the specified card location (**loc** parameter) must be in service.

The specified T1 port (**t1port** parameter) on the card (**loc** parameter) must have a defined T1 interface.

All signaling links that provide timeslots serviced by T1 interfaces on the specified card (**loc** parameter) must be deactivated before this command can be entered. None of the signaling links can be running link diagnostic tests (**tst-sl**k and **act-cdl** commands) when this command is entered.

Only one port test can be running on a T1 port (**t1port** parameter) at one time.

When the **action=stop** parameter is specified, the **loopback** parameter cannot be specified.

The **action=stop** parameter can be specified only when a port test is running.

Notes

This command can be used only for HC-MIM and E5-E1T1 card ports.

Only one port test can be performed at a time on a T1 port. When a port test is in progress on a T1 port, subsequent test requests are rejected.

Output

```
tst-t1:t1port=1:loc=1203:loopback=lxvr

rlghncxa03w 05-01-07 16:19:08 EST  EAGLE5 33.0.0
Command Accepted: Test Port message is sent.
;
rlghncxa03w 05-01-07 16:19:08 EST  EAGLE5 33.0.0
Command Completed.
;

tst-t1:t1port=1:loc=1203:action=stop

rlghncxa03w 05-01-07 16:19:08 EST  EAGLE5 33.0.0
Command Accepted: Stop Port test message is sent.
;

tekelecstp 03-12-16 14:31:23 EST  EAGLE5 33.0.0
Command Completed.
;
```

ublk-slk**Unblock Signaling Link**

Use this command to cancel a local processor outage (LPO) and restore the link to its previous state. Link status signal units (LSSU) with status of processor outage are stopped, and the link begins sending MSUs again.

NOTE: The signaling link's blocked status is not preserved across a LIM reboot.

Keyword: ublk-slk

Related Commands: act-lpo, blk-slk, canc-lpo

Command Class: Link Maintenance

Parameters

:link= (mandatory)

The signaling link on the card specified in the **loc** parameter. The signaling links can be specified in any sequence or pattern.

Synonym: port

Range: a, b, a1-a31, b1-b31

Not all card types support all **link** parameter values.

See Table A-1 for valid **link** parameter range values for each type of card that can have a location specified in the **loc** parameter.

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Example

ublk-slk:loc=2311:link=b

Dependencies

A card location that is valid and defined in the database must be specified.

No other action command can be in progress when this command is entered.

The card must be equipped and must be one of the following cards:

- A LIM card running the **ss7ansi**, **ss7gx25**, **atmansi**, or **ccs7itu** application
- An E1 ATM card running the **atmitu** application
- An SSED CM card running the **iplim** or **iplimi** application with links having **ipliml2=m2pa**
- An E1/T1 MIM card or an HC-MIM card running the **ss7ansi** or **ccs7itu** application
- An E5-ENET card running the **iplim** or **iplimi** application
- An E1/T1 MIM, an HC-MIM or and E5-E1T1 card running the **ss7ansi** or **ccs7itu** application

This command can be entered only for IPLIMx signaling links that have an **ipliml2** parameter setting of **m2pa**.

The **ublk-slk** command is not valid for DCM cards with **ss7ipgw** or **ipgwi** TCP/IP links.

The card must contain signaling links.

The signaling link must be equipped in the database.

The following **link** parameter values can be specified for the following cards that support more than 2 links per card:

- **a1-a3, b1-b3**—Multi-port LIM (MPL, MPL-T), SSEDCCM card running the **iplim** or **iplimi** application with links having **ipliml2=m2pa** or **ipliml2=saaltali**, E1/T1 MIM card
- **a1-a31, b1-b31**—HC-MIM card
- **a1-a15, b1-b15**—E5-E1T1 card
- **a1-a7, b1-b7**—E5-ENET card running the **iplim** or **iplimi** application that supports 16 links

Notes

Unblocking a signaling link removes a Level 2 failure resulting from a **blk-slk** of an ATM high-speed signaling link.

The function of this command is the same as the **canc-lpo** command.

The *Installation Manual – EAGLE 5 ISS* provides an illustration of card locations.

Output

```
ublk-slk:loc=2311:link=b
rlghncxa03w 03-03-07 11:11:28 EST EAGLE 31.3.0
Local processor outage being cleared.
;
ublk-slk:loc=1113:link=a
rlghncxa03w 03-03-07 11:11:28 EST EAGLE 31.3.0
Command Rejected : Location is not valid for command.
;
```

unhb-alm

Restore Alarm Reporting

Use this command to restore the reporting of alarms for the given device.

Keyword: unhb-alm

Related Commands: inh-alm, rept-stat-alm, rept-stat-card, rept-stat-cdt, rept-stat-dlk, rept-stat-dstn, rept-stat-ls, rept-stat-lsms, rept-stat-rte, rept-stat-rtx, rept-stat-seas, rept-stat-slk, rept-stat-sys, rept-stat-trbl, rept-stat-trm, rtrv-log

Command Class: System Maintenance

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:dev= (mandatory)

Device. This parameter specifies the device where the reporting of alarms is to be restored.

Range: **applsock**, **as**, **card**, **cdt**, **clock**, **dlk**, **e1port**, **ls**, **lsmsconn**, **route**, **seasx25**, **slk**, **t1port**, **trm**, **rtx**
applsock— IP gateway application socket
as— IP gateway application Application Server
card— Cards in the database
cdt— Customer defined troubles
clock— System clock
dlk— The IP ports on the VSCCP, EROUTE, SLAN, VXWSLAN and MCP application cards.
e1port— E1 port on E1/T1 MIM or HC-MIM cards
ls— Linksets

lsmsconn — Communication link between the LSMS and the EMS
route — Route
seasx25 — SEAS X.25 links
slk — Signaling links
t1port — T1 port on E1/T1 MIM or HC-MIM cards
trm — Terminals
rtx — Exception Route

:asname= (optional)

Gateway Application Server name. When used with the **dev=as** parameter, this parameter can be used to uninhibit alarms for the named Application Server.

Range: *aaaaaaaaaaaaa*

Up to 15 alphanumeric characters; the first character must be a letter

:cic= (optional)

Starting Circuit Identification Code. This parameter is used alone or together with the **ecic** parameter to define the CIC range, which is used as an exception routing criterion for the specified exception route.

Range: **0-16383**

:dpc= (optional)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: **dpca**

Range: **p-, 000-255, ***

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

The asterisk value (*) is not valid for the *ni* subfield.

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:dpc/dpca/dpci/dpcn/dpcn24= (optional)

Destination point code for inhibiting alarms for routes.

:dpci= (optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:dpcn= (optional)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible

point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:dpcn24= (optional)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point*. The *prefix* subfield indicates a private point code.

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:e1port= (optional)

Port ID. This parameter specifies the E1 port on the specified HC-MIM card. This parameter is mandatory if **dev=e1port** is specified.

Range: **1-8**

Ports 3 through 8 can be specified only for HC-MIM cards.

:ecic= (optional)

Ending Circuit Identification Code. This parameter is used with the **cic** parameter to define the CIC range, which is used as an exception routing criterion for the specified exception route.

Range: **0-16383**

:id= (optional)

Customer Defined Trouble (CDT) ID. Customer Defined Trouble IDs 1 through 4 are generated critical alarms. Because critical alarms cannot be turned off, Customer Defined Trouble IDs 1 through 4 cannot be specified as values for the **id** parameter. This parameter is mandatory if **dev=cdt** is specified.

Range: **5-16**

:ilsn= (optional)

Incoming Link Set Name. This parameter contains the name of the originating linkset. The parameter value is used as part of the exception routing criteria for the specified exception route.

Range: *ayyyyyyy*

1 alphabetic character followed by up to 9 alphanumeric characters

:link= (optional)

Signaling link on the card specified in the **loc** parameter.

Synonym: **port**

Range: **a, b, a1-a31, b1-b31**

a, b—For **dev=dlk**, **dev=slk** for a two-port LIM

a1, a2, b1, b2—For **dev=seasx25/lmsconn**

a, b, a1, b1, a2, b2, a3, b3—For **dev=slk** for a multi-port LIM
a, b, a1-a31, b1-b31—For **dev=slk** for an HC-MIM

:loc= (optional)

The card location as stenciled on the shelf of the system.

Range: **1101-1113, 1115, 1201-1218, 1301-1318, 2101-2118, 2201-2218, 2301-2318, 3101-3118, 3201-3218, 3301-3318, 4101-4118, 4201-4218, 4301-4318, 5101-5118, 5201-5218, 5301-5318, 6101-6118**

:lsn= (optional)

Linkset name. The name of the linkset containing the device where alarm reporting is to be restored.

Range: ayyyyyyyyy
 1 alphabetic character followed by up to 9 alphanumeric characters

:opc= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*). The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: **opca**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:opc/opca/opci/opcn/opcn24= (optional)

Origination point code

:opci= (optional)

ITU international origination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:opcn= (optional)

ITU national origination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:opc_n24= (optional)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*. The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range: p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

msa—000-255

ssa—000-255

sp—000-255

:si= (optional)

Service Indicator. This parameter is used as the exception routing criterion for the specified exception route.

Range: 0-15

:sname= (optional)

Gateway application socket. When used with the **dev=applsock** parameter, this parameter can be used to uninhibit alarms for the named IP⁷ application socket.

Range: ayyyyyyyyyyyyyy

1 to 15 alphanumeric characters

:t1port= (optional)

Port ID. T1 port on the specified HC-MIM card. This parameter is mandatory if **dev=t1port** is specified.

Range: 1-8

Ports 3 through 8 can be specified only for HC-MIM cards.

:trm= (optional)

Terminal ID. This parameter specifies the ID number of the terminal whose alarms are to be uninhibited.

Range: 1-40

Default: Report displays on the terminal where the command was issued.

Example

unhb-alm:dev=route:dpc=1-1-1

unhb-alm:dpc=1-101-1:opc=4-4-4:dev=rtx

Dependencies

This command is not allowed in upgrade mode.

No other action command can be in progress when this command is entered.

When the **dev=card** parameter is specified, the **loc** parameter must be specified.

When the **dev=dlk** parameter is specified, the **loc** parameter must be specified.

When the **dev=slk** parameter is specified, the **loc** parameter and the **link** parameter must be specified.

When the **dev=e1port** parameter is specified, the **loc** parameter and the **e1port** parameter must be specified.

When the **dev=t1port** parameter is specified, the **loc** parameter and the **t1port** parameter must be specified.

When the **dev=ls** parameter is specified, the **lsn** parameter must be specified.

When the **dev=trm** parameter is specified, the **trm** parameter must be specified.

When the **dev=cdt** parameter is specified, the **id** parameter must be specified.

When the **dev=seasx25** parameter is specified, the **link** parameter must be specified.

When the **dev=lsmsconn** parameter is specified, the **link** parameter must be specified.

When the **dev=route** parameter is specified, a **dpc/dpca/dpci/dpcn/dpcn24** parameter must be specified.

When the **dev=applsock** parameter is specified, the **sname** parameter must be specified.

When the **dev=as** parameter is specified, the **asname** parameter must be specified.

The linkset specified by the **lsn** parameter must be equipped in the database.

If the **dpcn** parameter is specified, its format must match the format that was assigned with the **chg-stpopts:npcfmti** parameter.

If the **dev=slk** parameter or **dev=dlk** parameter is specified, the specified **link** must exist in the database.

Table 5-71 shows the valid parameter combinations for the **unhb-alm** command.

Table 5-71. Parameter Combinations for the **unhb-alm** command

Value (:dev)	a	a	c	c	d	e	l	l	n	n	r	s	s	t	t
Device Parameter	p	s	a	d	l	l	s	s	d	d	o	e	l	l	r
	p	r	t	o	k	p	m	c	c	u	a	k	p	m	
	l	d	c	k	r	c	k	3	e	x	r	t			
	s														
	o				t						2				
	c										5				
	k						n								
No Parameters					x					x					
:asname		x													
:dpc/dpca/dpci/dpcn/dpcn24											x				
:id				x											
:loc			x			x	x						x	x	
:lsn							x								
:e1port=1-8						x									
:link=a, b						x							x		
:link=a, b, a1, a2, b1, b2, a3, a3													x		
:link=a1, a2, b1, b2								x	x			x			

Table 5-71. Parameter Combinations for the **unhb-alm** command

Value (:dev)	a	a	c	c	d	e	l	l	n	n	r	s	s	t	t
Device Parameter	p	s	a	d	l	l	s	s	d	d	o	e	l	l	r
	p	r	t	o	k	p	m	c	c	u	a	k	p	m	
	l	d	c	o	s	l	q	t	s	o					
	s		k	r	c	k	3	e	x	r					
	o			t	o				2	t					
	c				n				5						
	k				n										
:link=a, b, a1-a31, b1-b31						X								X	
:sname	X														
:t1port=1-8														X	
:trm															X

If the **sname** parameter is specified, the socket name must exist in the IPAPSOCK table.

If a point code parameter is specified, the point code must exist in the Routing table.

The card location that is specified in the **loc** parameter must be equipped.

The specified device type must be supported by the card in the specified card location.

The Origin-Based MTP Routing feature must be enabled and turned on before specifying the **dev=rtx** parameter.

Notes

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-) and the private and spare point code subtype prefix (ps-). All of the point code types support the private (internal) point code subtype prefix (p-).

Output

unhb-alm:dev=route:dpc=1-1-1

```
rlghncxa03w 03-03-23 13:20:59 EST EAGLE 31.3.0
Alarms are inhibited.
```

```
rlghncxa03w 03-03-23 13:20:59 EST EAGLE 31.3.0
Command Completed.
```

;

unhb-alm:dpc=1-101-1:opc=4-4-4:dev=rtx

```
stdcfg2b 06-05-27 20:22:02 EST EAGLE 35.0.0
Alarms are enabled
Command Completed.
```

;

unhb-slk

Uninhibit Signaling Link

Use this command to return an inhibited signaling link to service. If the link was aligned when it was inhibited, a changeover occurred. This command causes a changeback on the specified link. MSUs are transmitted on the link after the changeback is issued.

NOTE: The signaling link's inhibited status is not preserved across a LIM reboot.

Keyword: unhb-slk

Related Commands: act-slk, blk-slk, dact-slk, dlt-slk, ent-slk, inh-slk, rept-stat-slk, rtrv-slk, tst-slk, ublk-slk

Command Class: Link Maintenance

Parameters

:link= (mandatory)

The signaling link on the card specified in the **loc** parameter. The signaling links can be specified in any sequence or pattern.

Synonym: port

Range: a, b, a1-a31, b1-b31

Not all card types support all **link** parameter values.

See Table A-1 for valid **link** parameter range values for each type of card that can have a location specified in the **loc** parameter.

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Example

unhb-slk:loc=1301:link=a

Dependencies

A card location that is valid and defined in the database must be specified.

No other action command can be in progress when this command is entered.

The card must be equipped and must be one of the following cards:

- A LIM card running the **ss7ansi**, **ss7gx25**, **atmansi**, or **ccs7itu** application
- An E1 ATM card running the **atmitu** application
- A dual-slot DCM or EDCM card running the **iplim** or **iplimi** application with links having **ipliml2=saaltali**
- An SSEDCCM card running the **iplim** or **iplimi** application with links having **ipliml2=m2pa** or **ipliml2=saaltali**
- An E1/T1 MIM, an HC-MIM or an E5-E1T1 card running the **ss7ansi** or **ccs7itu** application
- An E5-ENET card running the **iplim** or **iplimi** application

The card must contain signaling links.

The signaling link must be equipped in the database.

The **link** parameter values **a1**, **b1**, **a2**, **b2**, **a3**, and **b3** can be specified only for the following cards:

- A multi-port LIM card
- An SSEDCCM card running the **iplim** or **iplimi** application that supports 8 points
- An E1/T1 MIM card, an HC-MIM card, or an E5-E1T1 card

The inhibit and uninhibit actions are valid for links on IPLIMx SSEDcMs that have **ipliml2=m2pa** or **ipliml2=saaltali**, and for links on IPLIMx EDCMs and DCMs that have **ipliml2=saaltali**.

The **link** parameter values **a1**, **b1**, **a2**, **b2**, **a3**, and **b3** can be specified only for the following cards:

- A multi-port LIM card
- An SSEDcM card running the **iplim** or **iplimi** application that supports 8 points
- An E1/T1 MIM card, an HC-MIM card, or an E5-E1T1 card
- An E5-ENET running the **iplim** or **iplimi** application that supports 16 links (**a**, **b**, **a1-a7**, **b1-b7**)

Notes

This command is not valid on TCP/IP point to multipoint links (DCM cards equipped as SS7IPGW or IPGWI links). TCP/IP point to point links (IPLIM and IPLIMI) can be uninhibited.

The function of this command is the same as the **canc-lpo** command.

The *Installation Manual – EAGLE 5 ISS* provides an illustration of card locations.

Output

```
unhb-slk:loc=1301:link=a
rlghncxa03w 03-03-23 13:20:59 EST EAGLE 31.3.0
Allow Link message sent to card
;
```

unlock

Unlock Keyboard

Use this command to unlock a previously locked terminal keyboard. Anyone attempting to use the keyboard is prompted to enter the password of the currently logged-in user.

Keyword: **unlock**

Related Commands: **lock**

Command Class: Basic

Parameters

This command has no parameters.

Example

```
unlock
```

Dependencies

You must enter the password of the logged in user to unlock the keyboard.

This command is valid only if the keyboard is locked.

The port must not be in an unlock disabled state because of excessive successive unlock failures.

Notes

None

Output

```
unlock
Enter LOGIN password to unlock keyboard :
```

Pass-Through Commands

This chapter introduces the pass-through commands and describes the command conventions. The pass-through commands are listed in alphabetical order starting on page 7-2.

Introduction

The pass-through commands are used within the **pass** command (see Chapter 5). Pass-through commands are passed through the OAM and sent to individual cards for processing. Pass-through commands reduce the need to add card-specific and application-specific code to the OAM build.

Command Conventions

The following is an example of a **pass** command:

```
pass:loc=1201:cmd="connmgr -c"
```

The **cmd** parameter contains the pass-through command (**connmgr -c**) within the double quotes.

Pass-through commands consist of two types of tokens: command name and command options. Tokens are whitespace-delimited and null-terminated. The generalized format of a pass-through command is:

```
command_name option1 option2....option n-1.... option n
```

In the example, the *command_name* is '**connmgr**' and the option is '-c'.

Options and option parameters are made up of a specific character string or a variable. The variable is to be replaced with a value selected from a range of values. Option variables and option parameter variables are underlined. For example, the **arp** command option **-d** has the parameter variable **IP address**. Specify the IP address as in the command **arp -d 192.9.200.44**. Do not enter the underlined text; enter a value instead.

Help information for each pass-through command can be obtained by using the option **-h** on any command.

arp**Address Resolution Protocol**

This command is used to display and modify the internet to ethernet address translation tables used by the address resolution protocol.

Keyword: arp

Command Class: IP Stack Maintenance

Options

Options and option parameters that are underlined indicate that a value must be specified for that option or parameter. For example, the arp command option **-d** has the parameter IP address. The IP address must be specified for which an ARP entry will be deleted, as in the command **arp -d 192.9.200.44**. Do not enter the underlined option or parameter; enter a value for the information represented by the underlined option or parameter.

-a

This option displays all entries in the ARP table.

-d IP address

This option deletes an ARP entry for the specified IP address.

The IP address is a TCP/IP address expressed in standard “dot notation.” IP addresses consist of the system’s network number and the machine’s unique host number. An example IP address is **192.9.200.44**, where **192.9.200** is the network number and **44** is the machine’s host number.

Range:

4 numbers separated by dots, with each number in the range of **0-255**.

-f

This option flushes all entries from the ARP table.

-h

This option displays help (usage) information for the command.

-s IP address MAC address

This option creates an ARP entry for the specified IP address and ethernet address.

Range:

4 numbers separated by dots, with each number in the range of **0-255**.

The IP address is a TCP/IP address expressed in standard “dot notation.” IP addresses consist of the system’s network number and the machine’s unique host number. For example, **192.9.200.44**, where **192.9.200** is the network number and **44** is the machine’s host number.

Range:

6 hexadecimal numbers separated by colons; each number in the range **0 - FF**.

The MAC (media access control) address is an ethernet address with the format **x:x:x:x:x:x**, where **x** is a hexadecimal integer from **0** to **FF**. For example, **08:00:20:1b:0f:f2**.

Example

```
arp -a
```

```
arp -s 192.9.200.44 08:00:20:1b:0f:f2
```

```
arp -d 192.9.200.44
```

```
arp -f
```

Dependencies

Only one of the options can be specified at a time.

The **arp** command with no options displays all of the current ARP cache entries.

Notes

The **arp** command is executed through the **pass** command.

Output

pass:loc=1105:cmd="arp" or

pass:loc=1105:cmd="arp -h"

```
rlghncxa03w 04-07-27 08:10:00 EST EAGLE5 31.6.0
PASS: Command sent to card
;
rlghncxa03w 04-07-27 08:10:00 EST EAGLE5 31.6.0

Usage: arp [-a] [-d ipaddr] [-f] [-h] [-s ipaddr enetaddr]

Options:
-a      Display All entries in ARP table
-d      Delete specified entry (ipaddr) from ARP table
-f      Flush all entries from ARP table
-h      Displays this message
-s      Set ARP table entry to associate ipaddr with enetaddr
enetaddr x:x:x:x:x:x
ipaddr   d.d.d.d
;
rlghncxa03w 04-07-27 08:10:01 EST EAGLE5 31.6.0

ARP command complete
;
```

pass:loc=1105:cmd="arp -s 192.168.100.234 11:22:33:44:55:66"

Command Accepted - Processing

```
rlghncxa03w 04-07-27 08:11:08 EST EAGLE5 31.6.0
pass:loc=1105:cmd="arp -s 192.168.100.234 11:22:33:44:55:66"
Command entered at terminal #1.
;
rlghncxa03w 04-07-27 08:11:08 EST EAGLE5 31.6.0
PASS: Command sent to card
;
rlghncxa03w 04-07-27 08:11:08 EST EAGLE5 31.6.0

ARP: 192.168.100.234 (11:22:33:44:55:66) added
;
rlghncxa03w 04-07-27 08:11:09 EST EAGLE5 31.6.0

ARP command complete
;
```

pass:loc=1105:cmd="arp -a"

Command Accepted - Processing

```

    rlghncxa03w 04-07-27 08:11:18 EST  EAGLE5 31.6.0
    pass:loc=1105:cmd="arp -a"
    Command entered at terminal #1.
;
    rlghncxa03w 04-07-27 08:11:18 EST  EAGLE5 31.6.0
    PASS: Command sent to card
;
    RLGHCXA03WRLGHNCXA03W 04-07-27 08:11:18 EST  EAGLE5 31.6.0

    LINK LEVEL ARP TABLE
    destination      gateway              flags  Refcnt  Use      Interface
    -----
    192.168.55.250    00:e0:16:9b:0d:86  405    1        0        seeq1
    192.168.100.234   11:22:33:44:55:66  c05    0        0        seeq0
    -----
;
    rlghncxa03w 04-07-27 08:11:19 EST  EAGLE5 31.6.0
    ARP command complete
;

```

pass:loc=1105:cmd="arp -f"

Command Accepted - Processing

```

    rlghncxa03w 04-07-27 08:11:38 EST  EAGLE5 31.6.0
    pass:loc=1105:cmd="arp -f"
    Command entered at terminal #1.
;
    rlghncxa03w 04-07-27 08:11:38 EST  EAGLE5 31.6.0
    PASS: Command sent to card
;
    rlghncxa03w 04-07-27 08:11:38 EST  EAGLE5 31.6.0
    ARP: ARP table flushed
;
    rlghncxa03w 04-07-27 08:11:38 EST  EAGLE5 31.6.0

    ARP command complete
;

```

pass:loc=1105:cmd="arp -d 192.111.111.222"

```
E3780 Cmd Rej: Syntax Error Found

    rlgncxa03w 04-07-27 08:26:37 EST  EAGLE5 31.6.0
    pass:loc=1105:cmd="arp -d 192.111.111.222"
    Command entered at terminal #1.
;
    rlgncxa03w 04-07-27 08:26:37 EST  EAGLE5 31.6.0
    PASS: Command sent to card
;
    rlgncxa03w 04-07-27 08:26:37 EST  EAGLE5 31.6.0
    ARP: entry not deleted
;
    rlgncxa03w 04-07-27 08:26:37 EST  EAGLE5 31.6.0

    ARP command complete
;
```

aslog

SCTP Application Server Log

This command is used to display the state changes for a specified Application Server (AS).

Keyword: **aslog**

Command Class: Application Maintenance

Options

Options and option parameters that are underlined indicate that a value must be specified for that option or parameter. For example, the **aslog** command has the parameter asname. The Application Server name must be specified for which the log will be displayed, as in the command **aslog as1**. Do not enter the underlined option or parameter; enter a value for the information represented by the underlined option or parameter.

asname

This option specifies the Association Server name for the display.

-h

This option displays help (usage) information for the command.

Example

aslog as1

Dependencies

None

Notes

None

Output

```

pass:loc=1105:cmd="aslog as1"

Command Accepted - Processing

    rlghncxa03w 00-01-27 08:10:00 EST  EAGLE5 31.6.0
    pass:loc=1105:cmd="aslog as1"
    Command entered at terminal #3.
;
    rlghncxa03w 00-01-27 08:10:00 EST  EAGLE5 31.6.0
    PASS: Command sent to card
;
    rlghncxa03w 00-01-27 08:10:00 EST  EAGLE5 31.6.0
    ASLOG command in progress
;
    rlghncxa03w 00-01-27 08:10:00 EST  EAGLE5 31.6.0

ASLOG: AS history log

ASLOG: AS state history log

    Date          Time          AS Event
    -----
    65-05-31    22:27:29.075    Transition to AS-Down
    65-05-31    22:27:29.080    Transition to AS-Active Override
    65-05-31    22:38:24.050    Transition to AS-Active Override

ASLOG command complete
;

```

asplog**SCTP Application Server Process Log**

NOTE: This command is obsolete. The functions have been updated and moved to the ualog command.

This command is used to display the UA state history for a specified Application Server Process (ASP).

Keyword: **asplog**

Command Class: Application Maintenance

Options

Options and option parameters that are underlined indicate that a value must be specified for that option or parameter. For example, the **asplog** command has the parameter asp name. The Application Server Process must be specified for which the log will be displayed, as in the command **asplog s7000**. Do not enter the underlined option or parameter; enter a value for the information represented by the underlined option or parameter.

asp name

This option specifies the Application Server Process name for the display.

-h

This option displays help (usage) information for the command.

-i event group

This option includes groups of events in the state machine history.

Range: **service, ua**

-x event group

This option excludes groups of events from the state machine history.

Range: service, ua

Example

asplog s7000

Dependencies

None

Notes

None

Output

In this example, transmitted notification, ASP Inactivation (RFC Extension) , ASP Activation (RFC Extension) and ASP Failure Notification events are shown.

pass:loc=1105:cmd="asplog s7000"

```
Command entered at terminal #3.
;
rlghncxa03w 02-09-27 08:10:00 EST  EAGLE5 31.6.0
PASS: Command sent to card
;
rlghncxa03w 02-09-27 08:10:00 EST  EAGLE5 31.6.0
ASPL0G command in progress
;
```

```
rlghncxa03w 02-09-27 08:10:00 EST EAGLE5 31.6.0
```

```
ASPLLOG: ASP history log
```

```
ASPLLOG: ASP state history log
        UA version: 01
        ASP ID:0x00000002
        UA Adapter Implemented: M3UA RFC
        Current settings: -i service ua
```

Date	Time	ASP Event
02-08-01	17:17:46.700	ASP Created
02-08-01	17:17:46.780	AS Created
02-08-01	17:17:46.820	Transition to OOS
02-08-01	17:17:46.940	Management Socket Open
02-08-01	17:17:46.940	Transition to Connecting
02-08-01	17:17:47.500	Socket Allowed for Traffic
02-08-01	17:17:49.375	Socket Connection Established
02-08-01	17:17:49.375	Transition to ASP-DOWN
02-08-01	17:17:49.390	ASPUP PDU Received (ASP ID = 0x00000002)
02-08-01	17:17:49.390	ASPUPACK PDU Transmitted
02-08-01	17:17:49.390	Transition to ASP-INACTIVE LOADSHARE
02-08-01	17:17:49.390	AS INACTIVE NTFY PDU Transmitted
02-08-01	17:17:49.405	ASPACTIVE PDU Received
02-08-01	17:17:49.405	ASPACTIVEACK PDU Transmitted
02-08-01	17:17:49.405	Transition to ASP-ACTIVE LOADSHARE
02-08-01	17:17:49.405	AS ACTIVE NTFY PDU Transmitted
02-08-01	17:17:50.405	ASP INACT NTFY PDU Transmitted (ASP ID =0x00000005)
02-08-01	17:17:50.405	ASP ACT NTFY PDU Transmitted (ASP ID =0x00000005)
02-08-01	17:17:52.730	ASP FAILURE NTFY PDU Transmitted (ASP ID =0x00000003)

```
ASPLLOG command complete
```

```
;
```

The following output example shows output when User Adapter SUA RFC is implemented:

pass:loc=1303:cmd="asplog s7000"

```

rlghncxa03w 04-10-19 08:10:00 EST EAGLE5 31.10.0
PASS: Command sent to card
;

rlghncxa03w 04-10-19 08:10:00 EST EAGLE5 31.10.0

ASPL0G command in progress

;
rlghncxa03w 04-10-19 08:10:00 EST EAGLE5 31.10.0
ASPL0G: ASP state history log
      UA Version: 01
      ASP ID: 0x00000007
      User Adapter Implemented: SUA RFC
      Current settings: -i service ua

Date       Time       Event
-----
04-11-09   18:56:06.515   IP Conn Established
04-11-09   18:56:06.515   Transition to ASP-DOWN
04-11-09   18:56:41.595   ASPUP PDU Received (ASP ID=0x00000007)
04-11-09   18:56:41.595   ASPUPACK PDU Transmitted
04-11-09   18:56:41.595   Transition to ASP-INACTIVE LOADSHARE
04-11-09   18:56:41.595   AS INACTIVE NTFY PDU Transmitted (RC=0000000023)
04-11-09   18:56:41.595   ASPACTIVE PDU Received (RC=none)
04-11-09   18:56:41.595   ASPACTIVEACK PDU Transmitted (RC=0000000023)
04-11-09   18:56:41.595   Transition to ASP-ACTIVE LOADSHARE
04-11-09   18:56:41.595   AS ACTIVE NTFY PDU Transmitted (RC=0000000023)

ASPL0G: command complete
;

```

When a received M3UA or SUA PDU contains errors, a response error message is transmitted containing an error code. Error codes are recorded to and displayed in the **asplog** output only when the UA peer-to-peer message logging option (**-i ua**) is enabled.

The following output example shows error code 0x0000015:

pass:loc=1303:cmd="asplog asp1303a"

```

    rlghncxa03w 00-01-27 08:10:00 EST  EAGLE5 31.6.0
    PASS: Command sent to card
;

    rlghncxa03w 00-01-27 08:10:00 EST  EAGLE5 31.6.0

    ASPLOG command in progress

;

    rlghncxa03w 00-01-27 08:10:00 EST  EAGLE5 31.6.0

    ASPLOG: ASP state history log
            UA Version: 01
            ASP ID:undefined
            UA Adapter Implemented: M3UA_RFC
            Current settings: -i service ua

    Date      Time      Socket Event
    -----
    02-08-01  17:17:46.940  Management Socket Open
    02-08-01  17:17:46.940  Transition to Connecting
    02-08-01  17:17:49.375  Socket Connection Established
    02-08-01  17:17:49.375  Transition to ASP-DOWN
    02-08-01  17:17:49.390  ASPUP PDU Received (ASP ID = undefined)
    02-08-01  17:17:49.390  ASPUPACK PDU Transmitted
    02-08-01  17:17:49.390  Transition to ASP-INACTIVE LOADSHARE
    02-08-01  17:17:49.390  AS INACTIVE NTFY PDU Transmitted
    02-08-01  17:17:49.405  ASPACTIVE PDU Received
    02-08-01  17:17:49.405  ASPACTIVEACK PDU Transmitted
    02-08-01  17:17:49.405  Transition to ASP-ACTIVE LOADSHARE
    02-08-01  17:17:49.405  AS ACTIVE NTFY PDU Transmitted
    02-08-01  17:17:49.450  DAUD PDU Received
    02-08-01  17:17:49.480  ERR PDU Transmitted (0x00000015)

    ASPLOG command complete
;

```

Error Codes

NOTE: The following error codes are not used in M3UA: 0x02, 0x08, 0x1a, 0x1b, 0x1c, 0x10, 0x17, and 0x18

The following error codes can appear in the error messages:

0x01—Invalid Version

A message was received with an invalid or unsupported version. The error message contains the supported version in the Common Header.

0x03—Unsupported Message Class

A message was received with an unexpected or unsupported Message Class.

0x04—Unsupported Message Type

A message was received with an unexpected or unsupported Message Type.

0x05—Unsupported Traffic Handling Mode

This error is sent by a Signaling Gateway Process (SGP) if an Application Server Process (ASP) sends an ASP Active message with an unsupported Traffic Mode Type or a Traffic

Mode Type that is inconsistent with the currently configured mode for the Application Server (AS).

0x06—Unexpected Message

This error message can be sent if a defined and recognized message is received that is not expected in the current state. In some cases the ASP might silently discard the message and not send an error message. Silent discard is used by an ASP if it received a DATA message from a signaling point while the ASP is in the ASP-INACTIVE state. If the unexpected message contains Routing Context, the Routing Context can be included in the error message.

0x07—Protocol Error

This error message is sent for any protocol anomaly, such as reception of a parameter that is syntactically correct but unexpected in the current situation.

0x09—Invalid Stream Identifier

A message is received on an unexpected SCTP stream (for example, a Management message was received on a stream other than 0).

0x0d—Refused - Management Blocking

An ASP Up or ASP Active message is received and the request is refused for management reasons (such as management lockout). If this error is in response to an ASP Active message, the Routing Context in the ASP Active message can be included in the error message.

0x0e—ASP Identifier Required

This error message is sent by an SGP in response to an ASP Up message that does not contain an ASP Identifier parameter when the SGP requires one. The ASP should resend the ASP Up message with an ASP Identifier.

0x0f—Invalid ASP Identifier

This error message is sent by an SGP in response to an ASP Up message with an invalid (for example, non-unique) ASP Identifier

0x11—Invalid Parameter Value

A message is received with an invalid parameter value (for example, a DUPU message was received with a Mask value other than 0).

0x12—Parameter Field Error

A message is received with a parameter that has a wrong length field.

0x13—Unexpected Parameter

A message contains an invalid parameter.

0x14—Destination Status Unknown

This error message can be sent if a DAUD is received at a Signaling Gateway (SG) asking for the availability/congestion status of a destination, and the SG does not provide the status (as in the case when the sender is not authorized to know the status). For this error, each invalid or unauthorized Point Code is included along with the Network Appearance and/or Routing Context associated with the Point Code.

0x15—Invalid Network Appearance

This error message is sent by an SGP if an ASP sends a message with an invalid (unconfigured) Network Appearance value. For this error, the invalid (unconfigured) Network Appearance is included in the Network Appearance parameter.

0x16—Missing Parameter

A message is received, and a mandatory parameter is not included in the message.

0x19—Invalid Routing Context

A message is received from a peer with an invalid (unconfigured) Routing Context value. The invalid Routing Context is included in the error message.

0x1a—No Configured AS for ASP

A message is received from a peer without a Routing Context parameter, and it is not known by configuration data which Application Servers are referenced.

assocrtt

SCTP Association Round Trip Time

This command is used to display the SCTP round trip times for a specified association. Minimum, maximum, and average times are kept for each open association. The Retransmission Mode (RFC or LIN) and the configured Minimum and Maximum Retransmission Timeout limits are also displayed.

Keyword: `assocrtt`

Command Class: Application Maintenance

Options

Options and option parameters that are underlined indicate that a value must be specified for that option or parameter. For example, the `assocrtt` command has the parameter aname. The association name must be specified for which the information will be displayed, as in the command `assocrtt c7000`. Do not enter the underlined option or parameter; enter a value for the information represented by the underlined option or parameter.

aname

This option specifies the association name for the display.

-r

This option resets all statistics for the specified association name.

Example

```
assocrtt c7000
```

```
assocrtt c7000 -r
```

Dependencies

None

Notes

This command does not indicate whether or not the socket is congested.

Output**pass:loc=1105:cmd="assocrtt" or****pass:loc=1105:cmd="assocrtt -h"**

```

      Command entered at terminal #1.
;
      rlghncxa03w 00-01-27 08:10:00 EST  EAGLE5 31.6.0
      PASS: Command sent to card
;
      rlghncxa03w 00-01-27 08:10:00 EST  EAGLE5 31.6.0

      Usage: ASOCRTT sockname [-r] [-h]
      Options:
          -r          Resets rtt data for specified association
          -h          Displays this message
;
      rlghncxa03w 00-01-27 08:10:00 EST  EAGLE5 31.6.0
      ASSocrtt command complete
;

pass:loc=1105:cmd="assocrtt c7000"

Command Accepted - Processing

      rlghncxa03w 00-01-27 08:10:00 EST  EAGLE5 31.6.0
      pass:loc=1105:cmd="assocrtt c7000"
      Command entered at terminal #1.
;
      rlghncxa03w 00-01-27 08:10:00 EST  EAGLE5 31.6.0
      PASS: Command sent to card
;
      rlghncxa03w 00-01-27 08:10:00 EST  EAGLE5 31.6.0

      ASSOCRTT: Association round trip time report (in milliseconds)

      Retransmission Configuration
          Retransmission Mode          : LIN
          Minimum RTO      : 120
          Maximum RTO      : 800

      Traffic Round-Trip Times

          Minimum round-trip time      : 5
          Maximum round-trip time      : 120
          Weighted Average round-trip time : 10
          Last recorded round-trip time  : 10
;
      Measured Congested Traffic Round-Trip Times

          Minimum round-trip time      : 0
          Maximum round-trip time      : 0
          Weighted Average round-trip time : 0
          Last recorded round-trip time  : 0
;
      rlghncxa03w 00-01-27 08:10:01 EST  EAGLE5 31.6.0
      ASSOCRTT command complete
;

```

pass:loc=1105:cmd="assocrtt c7000 -r"

```

    Command entered at terminal #1.
;
  rlghncxa03w 00-01-27 08:10:01 EST  EAGLE5 31.6.0
  PASS: Command sent to card
;
  rlghncxa03w 00-01-27 08:10:01 EST  EAGLE5 31.6.0

  ASSocrtt: Association round-trip time report (in milliseconds)

  Retransmission Configuration
    Retransmission Mode           : RFC
    Minimum RT0      : 120
    Maximum RT0      : 800

  Traffic Round-Trip Times

    Minimum round-trip time      : 5
    Maximum round-trip time      : 120
    Weighted Average round-trip time : 10
    Last recorded round-trip time  : 10

  Measured Congested Traffic Round-Trip Times

    Minimum round-trip time      : 0
    Maximum round-trip time      : 0
    Weighted Average round-trip time : 0
    Last recorded round-trip time  : 0
;
  rlghncxa03w 00-01-27 08:10:01 EST  EAGLE5 31.6.0
  ASSocrtt command complete
;

```

connmgr

Connection Manager

This command is used to generate reports about the status of the connection manager.

Keyword: **connmgr**

Command Class: Application Maintenance

Options

-c

This option displays client information for all client connections.

-d

This option displays a connection manager data summary.

-h

This option displays help (usage) information for the command.

-i

This option displays SCTP instance and association data.

-l

This option displays the connection manager event log.

-n

This option displays the SCTP notification log.

-r

This option resets the connection manager event log.

-s

This option displays information for all server sockets.

Example

connmgr -r

connmgr -c

connmgr -s

Dependencies

Only one of the options can be specified at a time.

If no options are specified, usage information is displayed.

Notes

The **connmgr** command is executed through the **pass** command.

Output

pass:loc=1107:cmd="connmgr" or

pass:loc=1107:cmd="connmgr -h"

Command Accepted - Processing

```

rlghncxa03w 04-07-02 15:29:46 EST  EAGLE5 31.6.0
pass:loc=1107:cmd="connmgr -h"
Command entered at terminal #1.
;
rlghncxa03w 04-07-02 15:29:46 EST  EAGLE5 31.6.0
PASS: Command sent to card
;
rlghncxa03w 04-07-02 15:29:46 EST  EAGLE5 31.6.0
Usage: CONNMGR [-c] [-d] [-h] [-i] [-l] [-n] [-r] [-s]
Options:
  -c    Display socket client data
  -d    Display connection manager data summary
  -h    Displays this message
  -i    Displays SCTP instance and association data
  -l    Display the connection manager event log
  -n    Displays the SCTP notification log
  -r    Reset the connection manager event log
  -s    Display socket server data
;
```

pass:loc=1107:cmd="connmgr -c"

Command Accepted - Processing

```

rlghncxa03w 04-07-02 15:30:50 EST  EAGLE5 31.6.0
pass:loc=1107:cmd="connmgr -c"
Command entered at terminal #1.
;
rlghncxa03w 04-07-02 15:30:50 EST  EAGLE5 31.6.0
PASS: Command sent to card
;
rlghncxa03w 04-07-02 15:30:50 EST  EAGLE5 31.6.0
CONNMGR: command being processed
;
rlghncxa03w 04-07-02 15:30:50 EST  EAGLE5 31.6.0
CONNMGR: Connection Manager Client Data
task_id  client state lport cfg opn cn_atmpt cn_made
-----
0113D2C0 lnk-dact      5026   1   0           0           0
0113C118 lnk-dact      5027   1   0           0           0
0113AF70 lnk-dact      5028   1   0           0           0
01139DC8 lnk-dact      5029   1   0           0           0
01138C20 lnk-dact      5030   1   0           0           0

CONNMGR command complete
;

```

pass:loc=1103:cmd="connmgr -c"

The following example includes the slk column, which can show signaling link port B only for for IPLIMx cards.

Command Accepted - Processing

```

rlghncxa03w 04-07-02 15:30:50 EST  EAGLE5 31.6.0
pass:loc=1103:cmd="connmgr -c"
Command entered at terminal #4.
;
rlghncxa03w 04-07-02 15:30:50 EST  EAGLE5 31.6.0
PASS: Command sent to card
;
rlghncxa03w 04-07-02 15:30:50 EST  EAGLE5 31.6.0
CONNMGR: command being processed
;
rlghncxa03w 04-07-02 15:30:50 EST  EAGLE5 31.6.0
task_id  client state slk lport cfg opn cn_atmpt cn_made
CONNMGR: Connection Manager Client Data
-----
01024E78 connected    A  1103   1   1           1           1

CONNMGR command complete
;

```

pass:loc=1107:cmd="connmgr -d"

The Connection Manager Data Summary displays all provisioned signaling link ports.

In the following example, signaling link port (slk) B is valid only for IPLIMx cards.

Command Accepted - Processing

```

rlghncxa03w 04-07-02 15:37:12 EST EAGLE5 31.6.0
pass:loc=1107:cmd="connmgr -d"
Command entered at terminal #1.
;
rlghncxa03w 04-07-02 15:37:12 EST EAGLE5 31.6.0
PASS: Command sent to card
;
rlghncxa03w 04-07-02 15:37:12 EST EAGLE5 31.6.0
CONNMGR: command being processed
;
rlghncxa03w 04-07-02 15:37:12 EST EAGLE5 31.6.0
CONNMGR: Connection Manager Data Summary
slk  link state  srv  cli  opn sock  inst  opn assoc
-----
A   active      1    0          1    0          0
B   active      0    0          0    1          1

CONNMGR command complete
;

```

pass:loc=1301:cmd="connmgr -i"

Command Accepted - Processing

```

eagle10213 04-07-22 08:49:37 GMT EAGLE5 31.6.0
pass:loc=1301:cmd="connmgr -i"
Command entered at terminal #4.
;
eagle10213 04-07-22 08:49:37 GMT EAGLE5 31.6.0
PASS: Command sent to card
;
eagle10213 04-07-22 08:49:37 GMT EAGLE5 31.6.0

CONNMGR command being processed
;
eagle10213 04-07-22 08:49:37 GMT EAGLE5 31.6.0
CONNMGR: Connection Manager Instance Data
inst id  lport  cfg  est  tot grntd  tot rfsd
-----
021B7880  1301    2    2          0          0

CONNMGR command complete
;

```

pass:loc=1107:cmd="connmgr -l"

Command Accepted - Processing

```

rlghncxa03w 04-07-02 15:35:28 EST  EAGLE5 31.6.0
pass:loc=1107:cmd="connmgr -l"
Command entered at terminal #1.
;
rlghncxa03w 04-07-02 15:35:28 EST  EAGLE5 31.6.0
PASS: Command sent to card
;
rlghncxa03w 04-07-02 15:35:28 EST  EAGLE5 31.6.0
CONNMGR: command being processed
;
rlghncxa03w 04-07-02 15:35:28 EST  EAGLE5 31.6.0
CONNMGR: Connection Manager Event Log
04-07-03 13:17:40.730 conn-rcvd  5005 from 192.168.100.174:5005
04-07-03 13:17:40.735 conn-rfsd  lnk-not-actv  5005 192.168.100.174
04-07-03 13:17:40.850 conn-rcvd  5006 from 192.168.100.174:5006
04-07-03 13:17:40.855 conn-rfsd  lnk-not-actv  5006 192.168.100.174
04-07-03 13:17:40.910 conn-rcvd  5002 from 192.168.100.174:5002
04-07-03 13:17:40.915 conn-rfsd  lnk-not-actv  5002 192.168.100.174
04-07-03 13:17:40.950 conn-rcvd  5004 from 192.168.100.174:5004
04-07-03 13:17:40.955 conn-rfsd  lnk-not-actv  5004 192.168.100.174

CONNMGR command complete
;

```

pass:loc=1103:cmd="connmgr -l"

Command Accepted - Processing

```

rlghncxa03w 04-07-02 15:35:28 EST  EAGLE5 31.6.0
pass:loc=1103:cmd="connmgr -l"
Command entered at terminal #4.
;
rlghncxa03w 04-07-02 15:35:28 EST  EAGLE5 31.6.0
PASS: Command sent to card
;
rlghncxa03w 04-07-02 15:35:28 EST  EAGLE5 31.6.0
CONNMGR: command being processed
;
rlghncxa03w 04-07-02 15:35:28 EST  EAGLE5 31.6.0
CONNMGR: Connection Manager Event Log
00-01-13 13:17:40.170 sock-add   ipl1103
00-01-13 13:17:40.885 lnk-act    Port A
00-01-13 13:17:40.080 conn-made  ipl1101

CONNMGR command complete
;

```


pass:loc=1301:cmd="connmgr -n"

Command Accepted - Processing

```
eagle10213 04-07-22 08:50:04 GMT EAGLE5 31.6.0
pass:loc=1301:cmd="connmgr -n"
Command entered at terminal #4.
```

;

```
eagle10213 04-07-22 08:50:04 GMT EAGLE5 31.6.0
PASS: Command sent to card
```

;

```
eagle10213 04-07-22 08:50:04 GMT EAGLE5 31.6.0
```

```
CONNMGR command being processed
```

;

```
eagle10213 04-07-22 08:50:04 GMT EAGLE5 31.6.0
CONNMGR: Connection Manager SCTP Notification Log
04-07-21 18:06:34.860 assoc-up   ipl1301a from 192.168.110.17:1301
04-07-21 18:06:49.620 assoc-up   ipl1301b from 192.168.110.18:1303
04-07-21 18:07:54.185 assoc-down ipl1301b from 192.168.110.18:1303
04-07-21 18:09:21.990 assoc-up   ipl1301b from 192.168.110.18:1303
```

```
CONNMGR command complete
```

;

pass:loc=1107:cmd="connmgr -r"

Command Accepted - Processing

```
rlghncxa03w 04-07-02 15:36:18 EST EAGLE5 31.6.0
pass:loc=1107:cmd="connmgr -r"
Command entered at terminal #1.
```

;

```
rlghncxa03w 04-07-02 15:36:18 EST EAGLE5 31.6.0
PASS: Command sent to card
```

;

```
rlghncxa03w 04-07-02 15:36:18 EST EAGLE5 31.6.0
CONNMGR: command being processed
```

;

```
rlghncxa03w 04-07-02 15:36:18 EST EAGLE5 31.6.0
CONNMGR command complete
```

;

pass:loc=1107:cmd="connmgr -s"

Command Accepted - Processing

```

rlghncxa03w 04-07-02 15:39:54 EST  EAGLE5 31.6.0
pass:loc=1107:cmd="connmgr -s"
Command entered at terminal #1.
;
rlghncxa03w 04-07-02 15:39:54 EST  EAGLE5 31.6.0
PASS: Command sent to card
;
rlghncxa03w 04-07-02 15:40:02 EST  EAGLE5 31.6.0
CONNMGR: command being processed
;
rlghncxa03w 04-07-02 15:40:03 EST  EAGLE5 31.6.0
CONNMGR: Connection Manager Server Data
task_id  server state lport cfg opn cn_grntd cn_rfsd
-----
0114FEE8 listening    5001   1   1         2       546
0114ED40 listening    5002   1   1         2       434
0114DB98 listening    5003   1   1         2       539
0114C9F0 listening    5004   1   1         2       542
0114B848 listening    5005   1   1         2       539
0114A6A0 listening    5006   1   1         2       549
011494F8 listening    5007   1   0         0       548
01148350 listening    5008   1   1         2       560
011471A8 listening    5009   1   1         2       523
01146000 listening    5010   1   1         2       532
01144E58 listening    5011   1   1         2       534
01143CB0 listening    5012   1   1         2       481
01142B08 listening    5013   1   1         2       474
01141960 listening    5014   1   1         2       521
011407B8 listening    5015   1   0         2       515
0113F610 listening    5016   5   0        14      2741
0113E468 listening    5017   5   0        11      2723

CONNMGR command complete
;

```

```
pass:loc=1103:cmd="connmgr -s"
```

```
Command Accepted - Processing
```

```

rlghncxa03w 04-07-02 15:39:54 EST  EAGLE5 31.6.0
pass:loc=1103:cmd="connmgr -s"
Command entered at terminal #4.
;
rlghncxa03w 04-07-02 15:39:54 EST  EAGLE5 31.6.0
PASS: Command sent to card
;
rlghncxa03w 04-07-02 15:40:02 EST  EAGLE5 31.6.0
CONNMGR: command being processed
;
rlghncxa03w 04-07-02 15:40:03 EST  EAGLE5 31.6.0
CONNMGR: Connection Manager Server Data
task_id  server state slk lport cfg opn cn_grntd cn_rfsd
-----
CONNMGR command complete
;
```

drklog

Dynamic Routing Key History Log

Use this command to report the dynamic routing key provisioning history. The most recent 100 dynamic routing key provisioning events are kept in a log.

The default mode of operation for this command, with no options specified, is to print all available entries in the log (up to 100 entries) regardless of the sockets and routing keys involved. The **-n**, **-k**, and **-s** options can act as filters that affect which entries are displayed as output.

NOTE: The drklog command is supported only on DCM cards running the ss7ipgw or ipgwi application.

NOTE: The drklog command does not support spare point codes.

Keyword: drklog

Command Class: Application Maintenance

Options

Options and option parameters that are underlined indicate that a value must be specified for that option or parameter. For example, the **drklog** command option **-p** has the parameter point code type. Specify the point code type of the routing key that follows the **-k** option, as in the command **drklog -p 100-100-100**. Do not enter the underlined option or parameter; enter a value for the information represented by the underlined option or parameter.

-h

This option is used to provide help information for the command.

-k rtkey

This option is used to display only entries pertaining to a specified routing key.

The rtkey variable is optional when used with **-t default**, and mandatory for all other cases.

The routing key is specified as a single parameter with up to five colon-separated fields. The subsystem is not specified when SI is not equal to 3.

The following are valid formats for the routing key that follows the **-k** option in the command:

n-c-m:s:n - For DPC, SI, SSN type routing keys. The network, cluster and member (*n-c-m*) are in the range **0-255**. The service indicator (*s*) is **3** or **sccp**. The subsystem (*n*) is in the range **0-255**.

n-c-m:s - For DPC, SI, type routing keys. The network, cluster and member (*n-c-m*) are in the range **0-255**. The service indicator (*s*) is in the range **0-2**, **4**, or **6-15**. There is no subsystem. As a default, counts for all routing keys within the option combination are displayed.

n-c-m:s:no-co-mo:cs:ce - For DPC, SI, CIC type routing keys. The DPC network, cluster and member (*n-c-m*) are in the range **0-255**. The service indicator (*s*) is **5** or **isup**. There is no subsystem. The OPC network, cluster and member (*no-co-mo*) are in the range **0-255**. The starting circuit identification code (*cs*) and ending circuit identification code (*ce*) are in the range **0** to **16363**.

NOTE: ISUP routing keys can be specified using the same CIC value for CICS and CICE. All entries in the log for the specified CIC value (or any portion of the CIC range) will be displayed.

-n number

This option is used to display a specific number of the most recent entries.

-p

This option is used to display the point code type.

-s socket name

This option is used to display entries for the specified socket name only.

Range:

Up to 15 alphanumeric characters

Default: Counts for all IP application sockets within the option combination

-t

keytype

This option is used to display the type of routing key.

Example

drklog

drklog -s socyellow

drklog -k 5-5-5:3:4

drklog -n 3

drklog -k 7-7-7:5:8-8-8:175:200 -s socket25 -n 1

drklog -c itun24 -k 12-145-10:5:12-145-12:100:300 -n 2

Dependencies

At least one option must be specified.

Notes

The **drklog** command is executed through the **pass** command.

The **drklog** command is valid for **ss7ipgw** and **ipgwi** cards; it is not valid for **iplim** and **iplimi** cards.

Combinations of the **-k**, **-n**, and **-s** options provide log information based on the entered combination. These options do not affect the contents of the log; they affect only what is displayed by the command.

TALI routing key registration and deregistration requests that are discarded because of a full request queue are not stored in the log. The total number of discards can be reported using the **msucount** command.

Output

The output for each **drklog** entry consists of the following components:

- Date and time: when the registration or deregistration event occurred
- Type of operation (including Enter, Delete, Resize, and Split)
- Socket involved
- Success/Failure Indication
- Routing key involved (with indication of the point code type - ANSI/ITUI/ITUN/ITUN24, and the type of key - full/partial/default)
- Other pertinent routing key information (such as split CIC value or resize CIC values)
- Routing key attribute values (PSTN Category, PSTN ID, Norm flag) specified in the registration request. Only values that are specified in the registration request are shown in the **drklog** entry. No value is shown if the registration does not specify a change to these routing key attribute values.

NOTE: Either brief or full help reports can be displayed. A full help report is generated by adding the -h full option to the command line.

Example of a brief help report:

pass:loc=1105:cmd="drklog -h"

```

0          1          2          3          4          5          6          7

123456789012345678901234567890123456789012345678901234567890123456789012345678;
Usage: DRKLOG [-n number] [-s socket name]
              [-k [rtkey] [-p pctype] [-t keytype]]
              [[-h [full]]]

Options:
-n number      Displays most recent 'number' of entries

-s socket name Displays entries affecting specified socket name
-k rtkey       routing key report using MTP3 parameters
               rtkey :: ([dpc][:si][:opc | :ssn][:cics][:cice])
-p             pctype:: (ANSI, ITUI, ITUN, ITUN24, ITUIS, ITUNS)
-t             routing key type
               keytype :: (<full>, partial, default)
-h            display command help (brief or full)

```

Example of a full report

pass:loc=1105:cmd="drklog -h full"

```

0          1          2          3          4          5          6          7
12345678901234567890123456789012345678901234567890123456789012345678
Usage: drklog [-n number] [-s socket name]
              [-k [rtkey] [-p pctype] [-t keytype]]
              [[-h [full]]]

```

Options: -n displays most recent 'number' of entries
 -s displays entries affecting specified socket name
 -k routing key report using MTP3 parameters
 rtkey :: ([dpc][:si][:opc | :ssn][:cics][:cice])
 -p pctype :: (ANSI, ITUI, ITUN, ITUN24, ITUIS, ITUNS)
 -t routing key type
 keytype :: (<full>, partial, default)
 -h display command help (brief or full)

-k option details:

Use the -p option along with -k to specify the SS7 network domain and point code format for the network. The SS7IPGW default pctype is ANSI. The IPGWI default pctype is ITUI.

Network	PC Format	Notes
ANSI	N-C-M	
ITUN	N	Non-Spare ITU National, no group code
ITUN	N-GC	Non-Spare ITU National with group code
ITUI	Z-A-I	Non-Spare ITU International
ITUN24	N-C-M	Non-Spare ITU National, 24-bits
ITUNS	N	Spare ITU National, no group code
ITUNS	N-GC	Spare ITU National with group code
ITUIS	Z-A-I	Spare ITU International

Use the -t option along with -k to specify certain MTP3 and user part MSU fields as wildcards for the routing key.

SS7 Traffic Partition	RTKEY Parameter Example
Any User Part to DPC 1-1-1	-k 1-1-1 -t partial
SCCP to DPC 1-1-1	-k 1-1-1:3 -t partial
ISUP to DPC 1-1-1	-k 1-1-1:5 -t partial
TUP to DPC 1-1-1	-k 1-1-1:4 -t partial
QBICC to DPC 1-1-1	-k 1-1-1:13 -t partial
SI [0-2,6-12,14,15] to DPC 1-1-1	-k 1-1-1:<SI>
SCCP SSN 5 to DPC 1-1-1	-k 1-1-1:3:5
ISUP to DPC 1-1-1 from OPC 2-2-2	-k 1-1-1:5:2-2-2 -t partial
TUP to DPC 1-1-1 from OPC 2-2-2	-k 1-1-1:4:2-2-2 -t partial
QBICC to DPC 1-1-1 from OPC 2-2-2	-k 1-1-1:13:2-2-2 -t partial
ISUP CIC 1 to 1-1-1 from 2-2-2	-k 1-1-1:5:2-2-2:1
TUP CIC 1 to 1-1-1 from 2-2-2	-k 1-1-1:4:2-2-2:1
QBICC CIC 1 to 1-1-1 from 2-2-2	-k 1-1-1:13:2-2-2:1
ISUP CIC 0-5 to 1-1-1 from 2-2-2	-k 1-1-1:5:2-2-2:0:5
TUP CIC 0-5 to 1-1-1 from 2-2-2	-k 1-1-1:4:2-2-2:0:5
QBICC CIC 0-5 to 1-1-1 from 2-2-2	-k 1-1-1:13:2-2-2:0:5
Default Routing Key	-k -t default

Example of basic **drklog** with no filtering options, including entries for ANSI fully specified routing keys, partial keys, and default keys:

pass:loc=1105:cmd="drklog"

Command Accepted - Processing

```

rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0
pass:loc=1105:cmd="drklog"
Command entered at terminal #1.
;

rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0
PASS: Command sent to card
;

rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0
DRKLOG command in progress
;

rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0

DRKLOG: Dynamic route key history log
99-11-27  10:01:33.570 SOCKET000000025:Enter full ANSI key      Success
                    key=5-5-5:3:4
99-11-27  10:04:21.765 SOCKET000000026:Enter full ANSI key      Success
                    key=7-7-7:5:8-8-8:100:200
99-11-27  10:04:55.405 SOCKET000000012:Enter full ANSI key      Error(4)
                    key=0-0-0:0
                    pstncat=4096  pstnid=1      norm=0
99-11-27  10:06:45.860 SOCKET000000010:Override Partial ANSI key Success
                    key=5-5-5:5:*:*:~
99-11-27  10:07:15.020 SOCKET000000011:Override Partial ANSI key Success
                    key=5-5-5:3:*
99-11-27  10:07:15.022 SOCKET000000011:Enter Partial SI-only key Success
                    key=*:3:*
                    pstncat=4097  pstnid=1      norm=0
99-11-27  10:07:15.320 SOCKET000000011:Enter Partial ANSI key      Success
                    key=7-7-7:*
                    pstncat=4098  pstnid=1      norm=0
99-11-27  10:07:15.622 SOCKET000000011:Enter Default key      Success
                    Default Key
                    pstncat=4099  pstnid=1      norm=0

DRKLOG command complete
;

```

Example of basic **drklog** with no filtering options, including entries for ITUI and ITUN fully specified routing keys, partial keys, and default keys:

pass:loc=1107:cmd="drklog"

Command Accepted - Processing

```
rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0
pass:loc=1107:cmd="drklog"
Command entered at terminal #1.
```

;

```
rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0
PASS: Command sent to card
```

;

```
rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0
DRKLOG command in progress
```

;

```
rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0
```

DRKLOG: Dynamic route key history log

99-11-27	10:06:12.030	SOCKET00000026:Delete Full ITUI key	Success
		key=2-145-5:3:4	
99-11-27	10:06:13.030	SOCKET00000025:Resize Full ITUI key	Success
		key=2-78-1:5:3-87-3:100:200	
		ncics=100:ncice=150	
99-11-27	10:06:17.860	SOCKET00000025:Split Full ITUI key	Success
		key=2345-gr:5:3456:100:150	
		split=125	
99-11-27	10:06:53.860	SOCKET00000110:Override Partial ITUI key	Success
		key=1-151-69:5:2-141-3:*:*	
99-11-27	10:07:54.020	SOCKET00000111:Enter Partial ITUI key	Success
		key=6-132-5:3:*	
		pstncat=1 pstnid=1 norm=0	
99-11-27	10:07:55.022	SOCKET00000111:Enter Partial ITUI key	Success
		key=*:5	
		pstncat=0 pstnid=1 norm=0	
99-11-27	10:07:57.320	SOCKET00000111:Enter Partial ITUI key	Success
		key=4-231-7:*	
99-11-27	10:07:59.622	SOCKET00000121:Enter Default key	Success
		Default Key	
		pstncat=4099 pstnid=1 norm=0	
99-11-27	11:06:45.860	SOCKET00000210:Enter Partial ITUN key	Success
		key=555-uk:5:666:*:*	
		pstncat=1 pstnid=3 norm=1	
99-11-27	11:07:15.020	SOCKET00000211:Enter Partial ITUN key	Success
		key=555-gr:5:*:*:	
		pstncat=1 pstnid=4 norm=1	
99-11-27	11:07:15.022	SOCKET00000211:Enter Partial SI-only key	Success
		key=*:13	
		pstncat=0 pstnid=0 norm=0	
99-11-27	11:07:15.320	SOCKET00000211:Enter Partial ITUN key	Success
		key=8888-uk:*	
		pstncat=0 pstnid=0 norm=0	
99-11-27	11:07:15.622	SOCKET00000271:Enter Default key	Success
		Default Key	
		pstncat=4099 pstnid=0 norm=0	

DRKLOG command complete

;

Example of **drklog** with socket filter (only entries with SOCKET11):

pass:loc=1105:cmd="drklog -s socket000000011"

Command Accepted - Processing

```

rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0
pass:loc=1105:cmd="drklog"
Command entered at terminal #1.
;

rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0
PASS: Command sent to card
;

rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0
DRKLOG command in progress
;

rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0

DRKLOG: Dynamic route key history log
99-11-27  10:07:15.020 SOCKET000000011:Enter Partial ANSI key      Success
                    key=5-5-5:3:*
99-11-27  10:07:15.022 SOCKET000000011:Enter Partial SI-only key  Success
                    key=*:3
99-11-27  10:07:15.320 SOCKET000000011:Enter Partial ANSI key      Success
                    key=7-7-7:*
99-11-27  10:07:15.622 SOCKET000000011:Enter Default key          Success
                    Default Key
                    pstncat=4099  pstnid=1      norm=0

DRKLOG command complete
;

Example of drklog with routing key filtering option (only entries with ITUI full key
2-45-1:5:4-223-2:123:345):
```

pass:loc=1107:cmd="drklog -p ITUI -k 2-45-1:5:4-223-2:123:345"

Command Accepted - Processing

```

rlghncxa03w 06-06-01 11:31:09 EST  EAGLE5 35.0.0
pass:loc=1107:cmd="drklog -p ITUI -k 2-45-1:5:4-223-2:123:345"
Command entered at terminal #1.
;

rlghncxa03w 06-06-01 11:31:09 EST  EAGLE5 35.0.0
PASS: Command sent to card
;

rlghncxa03w 06-06-01 11:31:09 EST  EAGLE5 35.0.0
DRKLOG command in progress
;

rlghncxa03w 06-06-01 11:31:09 EST  EAGLE5 35.0.0

DRKLOG: Dynamic route key history log

06-06-01  10:06:12.030 SOCKET000000026:Enter Full ITUI key      Success
                        key=2-45-1:5:4-223-2:123:345
                        pstncat=1      pstnid=2      norm=1
06-06-01  10:06:31.530 SOCKET000000028:Enter Full ITUI key      Success
                        key=2-45-1:5:4-223-2:123:345
                        pstncat=1      pstnid=2      norm=1
06-06-01  10:06:12.030 SOCKET000000044:Enter full ITUI key      Success
                        key=2-45-1:5:4-223-2:123:345
                        pstncat=1      pstnid=2      norm=0
06-06-01  11:33:21.550 SOCKET000000026:Override Full ITUI key    Success
                        key=2-45-1:5:4-223-2:123:345

DRKLOG command complete
;

```

Example of **drklog** with same routing key filter as the previous example, and with a request to display only the 2 most recent events:

pass:loc=1107:cmd="drklog -p ITUI -k 2-45-1:5:4-223-2:123:345 -n 2"

Command Accepted - Processing

```

rlghncxa03w 06-06-01 11:31:09 EST  EAGLE5 35.0.0
pass:loc=1107:cmd="drklog -p ITUI -k 2-45-1:5:4-223-2:123:345 -n 2"
Command entered at terminal #1.
;

rlghncxa03w 06-06-01 11:31:09 EST  EAGLE5 35.0.0
PASS: Command sent to card
;

rlghncxa03w 06-06-01 11:31:09 EST  EAGLE5 35.0.0
DRKLOG command in progress
;

rlghncxa03w 06-06-01 11:31:09 EST  EAGLE5 35.0.0

DRKLOG: Dynamic route key history log
06-06-01  10:06:12.030 SOCKET000000044:Enter Full ITUI key      Success
                        key=2-45-1:5:4-223-2:123:345
                        pstncat=1      pstnid=2      norm=1
06-06-01  11:33:21.550 SOCKET000000026:Override Full ITUI key   Success
                        key=2-45-1:5:4-223-2:123:345
                        pstncat=1      pstnid=2      norm=1

DRKLOG command complete
;

```

Example of **drklog** with routing key filtering option for a partial routing key (only entries with ANSI partial key 5-5-5:*.*:*; ignore CIC and OPC for ISUP traffic):

pass:loc=1107:cmd="drklog -p ANSI -k 5-5-5:5"

Command Accepted - Processing

```

r1ghncxa03w 06-06-01 11:31:09 EST EAGLE5 35.0.0
pass:loc=1107:cmd="drklog -p ANSI -k 5-5-5:5"
Command entered at terminal #1.
;

r1ghncxa03w 06-06-01 11:31:09 EST EAGLE5 35.0.0
PASS: Command sent to card
;

r1ghncxa03w 06-06-01 11:31:09 EST EAGLE5 35.0.0
DRKLOG command in progress
;

r1ghncxa03w 06-06-01 11:31:09 EST EAGLE5 35.0.0

DRKLOG: Dynamic route key history log

06-06-01 10:06:12.030 SOCKET0000000026:Delete Partial ANSI key Success
                        key=5-5-5:5:*:*:~*
06-06-01 10:06:31.530 SOCKET0000000028:Enter Partial ANSI key Success
                        key=5-5-5:5:*:*:~*
06-06-01 10:06:12.030 SOCKET0000000044:Enter Partial ANSI key Success
                        key=5-5-5:5:*:*:~*
                        pstncat=0      pstnid=0      norm=0
06-06-01 11:33:21.550 SOCKET0000000026:Override Partial ANSI key Success
                        key=5-5-5:5:*:*:~*

DRKLOG command complete
;

```

Example of **drklog** with a full ITUN24 routing key filter with a request to display only the 2 most recent events.

pass:loc=1101:cmd="drklog -p ITUN24 -k 12-145-10:5:12-145-12:100:300 -n 2"

Command Accepted - Processing

```

rlghncxa03w 06-06-01 11:31:09 EST  EAGLE5 35.0.0
  pass:loc=1101:cmd="drklog -p ITUN24 -k 12-145-10:5:12-145-12:100:300 -n 2"
  Command entered at terminal #1.
;

rlghncxa03w 06-06-01 11:31:09 EST  EAGLE5 35.0.0
  PASS: Command sent to card
;

rlghncxa03w 06-06-01 11:31:09 EST  EAGLE5 35.0.0
  DRKLOG command in progress
;

rlghncxa03w 06-06-01 11:31:09 EST  EAGLE5 35.0.0

  DRKLOG: Dynamic route key history log

06-06-01  10:06:12.030 SOCKET000000044:Enter Full ITUN24 key      Success
                                key=12-145-10:5:12-145-12:100:300
                                pstncat=0      pstnid=0      norm=0
06-06-01  11:33:21.550 SOCKET000000026:Override Full ITUN24 key  Success
                                key=12-145-10:5:12-145-12:100:300
                                pstncat=0      pstnid=0      norm=0

  DRKLOG command complete
;

```

Other drklog output examples:

pass:loc=1105:cmd="drklog -k 3:5-5-5:4"

Command Accepted - Processing

```

    rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0
    pass:loc=1105:cmd="drklog -k 3:5-5-5:4"
    Command entered at terminal #1.
;
    rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0
    PASS: Command sent to card
;

    rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0
    DRKLOG command in progress
;
    rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0

    DRKLOG: Dynamic route key history log
99-11-27  10:01:33.570  Enter      SOCKET25          Success
                        key=3:5-5-5:4
99-11-27  10:06:45.860  Override  SOCKET10          Success
                        key=3:5-5-5:4
99-11-27  10:07:15.020  Enter      SOCKET11          Success
                        key=3:5-5-5:4

    DRKLOG command complete
;

```

pass:loc=1105:cmd="drklog -k 5:7-7-7:8-8-8:100:200"

Command Accepted - Processing

```

    rlghncxa03w 05-07-29 11:31:09 EST  EAGLE5 31.6.0
    pass:loc=1105:cmd="drklog -k 5:7-7-7:8-8-8:100:200"
    Command entered at terminal #1.
;
    rlghncxa03w 05-07-29 11:31:09 EST  EAGLE5 31.6.0
    PASS: Command sent to card
;

    rlghncxa03w 05-07-29 11:31:09 EST  EAGLE5 31.6.0
    DRKLOG command in progress
;
    rlghncxa03w 05-07-29 11:31:09 EST  EAGLE5 31.6.0

    DRKLOG: Dynamic route key history log
99-11-27  10:04:21.765  Enter      SOCKET26          Success
                        key=5:7-7-7:8-8-8:100:200
99-11-27  10:06:13.030  Resize     SOCKET25          Success
                        key=5:7-7-7:8-8-8:100:200
                        ncics=100:ncice=150
99-11-27  10:06:17.860  Split      SOCKET25          Success
                        key=5:7-7-7:8-8-8:100:150
                        split=125

    DRKLOG command complete
;

```

pass:loc=1105:cmd="drklog -k 5:7-7-7:8-8-8:175:200 -s socket25 -n 1"

```

Command Accepted - Processing

    rlgncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0
    pass:loc=1105:cmd="drklog -k 5:7-7-7:8-8-8:175:200 -s socket25 -n 1"
    Command entered at terminal #1.
;
    rlgncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0
    PASS: Command sent to card
;
    rlgncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0
    DRKLOG command in progress
;
    rlgncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0

DRKLOG: Dynamic route key history log

99-11-27  10:06:13.030  Resize      SOCKET25      Success
                        key=5:7-7-7:8-8-8:100:200
                        ncics=100:ncice=150

DRKLOG command complete
;

```

ftptest

FTP Test

Use this command to send a test file to a configured FTP server that is used for the Measurements Platform feature

Keyword: **ftptest**

Command Class: System Maintenance

Options

Options and option parameters that are underlined indicate that a value must be specified for that option or parameter. For example, the **ftptest** command option **-a** has the parameter **appl**. The FTP registered application to be tested can be specified, as in the command **ftptest -a meas**. Do not enter the underlined option or parameter; enter a value for the information represented by the underlined option or parameter.

-h

This option provides help information for the command.

-a appl

This option specifies the FTP registered application to be tested.

Range: meas

meas—The Measurements Platform application

Example

```
ftptest
```

```
ftptest -h
```

```
ftptest -a meas
```

Dependencies

None

Notes

The **ftptest** command is executed through the **pass** command.

The specified card location must have an IP port configured to an FTP server using the **ent-ftp-serv** command, and the card must have its IP port configured using the **chg-ip-lnk** command.

Output

```
pass:loc=1105:cmd="ftptest-h"
```

or

```
pass:loc=1105:cmd="ftptest"
```

Command Accepted - Processing

```
rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0
pass:loc=1215:cmd="ftptest -h"
Command entered at terminal #3.
;

rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0
PASS: Command sent to card
;

rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0

Usage: ftptest -a appl [-h]

Options:
  -a appl  FTP client application name
  -h       Displays this message
;

rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0

FTPTEST: Command Complete
;
```


pass:loc=1105:cmd="ftptest -a meas"

```

PASS: Command sent to card
;

rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0

FTPTEST: Command In Progress

;

rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0
FTP Interface Test
  Test Results: PASS
  Server IP:    10.25.61.71
  FTP Error:    0
  File Error:   0
  Segment:      190004a2
  Diag Msg:
FTPTEST: Command Complete

;

```

The following example shows the error occurs if the wrong password is specified in the **ent-ftp-serv** command for the application specified in the **ftptest** command.

pass:loc=1215:cmd="ftptest -a meas"

```

rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0
PASS: Command sent to card
;

rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0

FTPTEST: Command In Progress

;

rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0
FTP Interface Test
  Test Results: FAIL
  Server IP:    0.0.0.0
  FTP Error:    530
  Segment:      190004dd
  Diag Msg:     Server Connection Error
FTPTEST: Command Complete

;

```

linkinfo

Link State and Event Log

This command is used to display the state of a signaling link and to retrieve/clear a specified event log for a signaling link. The signaling link is any valid signaling link provisioned for the card, and can be any one of the following: **a**, **a1**, **a2**, **a3**, **b**, **b1**, **b2**, or **b3**. This command is supported only for the IPLIMx GPLs.

Keyword: **linkinfo**

Command Class: Application Maintenance

Options

Options and option parameters that are underlined indicate that a value must be specified for that option or parameter. For example, the **linkinfo** command option **-i** has the parameter event. The event to be included in the report can be specified, as in the command **linkinfo a -a -i m2pa**. Do not enter the underlined option or parameter; enter a value for the information represented by the underlined option or parameter.

-h

This option provides help information for the command.

port

This option specifies the signaling link port.

Range: a, b, a1, b1, a2, b2, a3, b3

-a

This option displays the adapter layer interface (ALI) log for the specified signaling link.

-i event

This option includes (does not filter) a link event in the log.

Range: ali, all, data, l2l3, l3l2, m2pa, state

all—include all events

-l

This option displays the IPLIM ALI event log for the specified signaling link

-m

This option displays acknowledgment times on an M2PA connection (minimum, maximum, weighted average, last recorded).

-r

This option resets (clears) the event log for the specified signaling link. This option is valid only with the **-a** option or **-l** option.

-s

This option displays the state information for the specified signaling link

-v

This option displays the link event filter configuration.

-x event

This option excludes (filters) a link event in the log.

Range: ali, all, data, l2l3, l3l2, m2pa, state

all—exclude all events

Example

Provide help information for the command.

pass:loc=1301:cmd="linkinfo -h"

Display the ALI event log for signaling link **a1**.

pass:loc=1301:cmd="linkinfo a1 -a"

Display the IPLIM application event log for signaling link **a1**.

pass:loc=1301:cmd="linkinfo a1 -l"

Reset/clear the link event log for signaling link **a1**.

pass:loc=1301:cmd="linkinfo a1 -l -r"

Display the state information for signaling link **a1**.

pass:loc=1301:cmd="linkinfo a1 -s"

Display acknowledgement times for an M2PA connection on signaling link **b1**.

pass:loc=3315:cmd="linkinfo b1 -m"

Dependencies

None

Notes

None

Output

Example of help for using the command:

pass:loc=1301:cmd="linkinfo" or

pass:loc=1301:cmd="linkinfo -h"

```
rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0
PASS: Command sent to card
;

rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0
Usage: LINKINFO port [-a [-r]] [-h] [-l [-r]] [-m [-r]] [-s] [-v]
Options:
  port      Signaling link port: a, b, a1, b1, a2, b2, a3, b3
  -a        Display the ALI event log for a signaling link
  -h        Displays this message
  -i event  Include (do not filter) a link event type in the log
             where 'event' is: ali, all, data, l2l3, l3l2,
             m2pa, state
  -l        Displays the event log for a signaling link
  -m        Display Link Measurements
  -r        Resets the specified event log for a signaling link
  -s        Displays the state information for a signaling link
  -v        View the link event filter configuration
  -x event  Exclude (filter) a link event type from the log
             where 'event' is: ali, all, data, l2l3, l3l2,
             m2pa, state
;

rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0

LINKINFO command complete
;
```

The following example illustrates a request to display the adapter layer interface (ALI) event log for signaling link **a1** and association **ipl1301a** that has been provisioned with signaling link **a1**.

pass:loc=1301:cmd="linkinfo a1 -a"

```

rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0
PASS: Command sent to card
;

rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0

LINKINFO command being processed

;

rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0
IPLIM Adapter Layer Events for Port a1:
04-07-29 10:23:48.525 IP_CONN_OPENED
04-07-29 10:36:09.465 IP_CONN_CONNECTED
04-07-29 10:36:09.465 IP_CONN_ALLOWED

end of report

;

```

The following example illustrates a request to display the **iplim** ALI event log for signaling link **a1** and the association **ipl1301a** that has been provisioned with signaling link **a1**.

pass:loc=1301:cmd="linkinfo a1 -I"

```

rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0
PASS: Command sent to card
;

rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0

LINKINFO command being processed

;

rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0
IPLIM Adapter Layer Events for Port a1:
04-07-29 10:36:40.240 IP_CONN_ALLOWED
04-07-29 10:36:40.240 IP_CONN_OPENED
04-07-29 10:36:40.240 LINK_STATE_OOS
04-07-29 10:36:50.935 L3_L2_START
04-07-29 10:37:18.890 IP_CONN_CONNECTED
04-07-29 10:37:18.900 LINK_STATE_AIP
04-07-29 10:37:18.900 M2PA_LSA_RCVD
04-07-29 10:37:18.915 LINK_STATE_PROVING
04-07-29 10:37:18.915 M2PA_LSPN_RCVD
04-07-29 10:37:19.453 M2PA_T4_EXPD
04-07-29 10:37:20.565 M2PA_LSPN_RCVD
04-07-29 10:37:21.785 M2PA_T4_EXPD
04-07-29 10:37:22.565 M2PA_LSPN_RCVD
04-07-29 10:37:23.785 M2PA_T4_EXPD
04-07-29 10:37:24.565 M2PA_LSPN_RCVD
04-07-29 10:37:25.785 M2PA_T4_EXPD
04-07-29 10:37:26.385 M2PA_LSPN_RCVD
04-07-29 10:37:27.576 M2PA_T2_EXPD
04-07-29 10:37:27.585 LINK_STATE_READY
04-07-29 10:37:30.123 M2PA_LSR_RCVD
04-07-29 10:36:32.095 LINK_STATE_INS

end of report

;

```

The following example illustrates a **linkinfo** request to reset/clear the link event log for signaling link **a1**.

pass:loc=1301:cmd="linkinfo a1 -l -r"

```
rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0
PASS: Command sent to card
;

rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0

LINKINFO command being processed
;

rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0
LINKINFO command complete
;
```

The following example illustrates a **linkinfo** request to display acknowledgement times for an IPLIMx M2PA connection on signaling link **b1**.

pass:loc=1301:cmd="linkinfo b1 -m"

```
rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0
PASS: Command sent to card
;

rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0

LINKINFO: Command In Progress
;

rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0
IPLIMx M2PA Measurements Information for Port B1

Measured M2PA Traffic Acknowledgement Times

      Minimum acknowledge time      : 14
      Maximum acknowledge time      : 35
      Weighted Average acknowledge time: 17
      Last recorded acknowledge time : 20

end of report
;

rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0
;
```

The following example illustrates a **linkinfo** request to display the state information for signaling link **a1**.

pass:loc=1301:cmd="linkinfo a1 -s"

```

rlghncxa03w 03-07-29 11:31:09 EST  EAGLE5 30.0.0
PASS: Command sent to card
;

rlghncxa03w 03-07-29 11:31:09 EST  EAGLE5 30.0.0

LINKINFO command being processed
;

rlghncxa03w 03-07-29 11:31:09 EST  EAGLE5 30.0.0
SLK      LINKINFO STATE
1301,A1  OOS      CONNECTING

end of report
;
rlghncxa03w 03-07-29 11:31:09 EST  EAGLE5 30.0.0
LINKINFO command complete
;

```

msucount

Message Signaling Unit (MSU) Count

This command is used to report the count of SS7 MSUs and bytes that pass through links, routing keys, and IP connections. These counts can be reported and reset at the same time to get accurate counts for longer periods of time. In addition to MSUs transmitted and received, the **msucount** command also reports statistics on packets related to MTP Primitives and on discarded transmit and receive data.

Keyword: **msucount**

Command Class: Application Maintenance

Options

Options and option parameters that are underlined indicate that a value must be specified for that option or parameter. For example, the **msucount** command option **-l** has the parameter **port**. The link for which counts will be displayed can be specified, as in the command **msucount -l a1**. Do not enter the underlined option or parameter; enter a value for the information represented by the underlined option or parameter.

-a

This option is used to display IP connection statistics for a specific association. When **-a aname** is specified on the same line as **-k rtkey**, the output is assumed to be routing key output. When **-a aname** is specified on the command line without **-k rtkey**, association statistics output is generated.

-h

This option is used to provide help information for the command.

-d

This option is used to report dynamic routing keys (IPGWx application only).

Default: Static

-f

This option is used to display a full report (IPGWx application only).

-k rtkey

This option is used to specify the routing key for which the counts will be displayed. The routing key is specified as a single parameter with up to five colon-separated fields. The subsystem is not specified when SI is not equal to 3.

The **-p** modifier can be specified to identify the point code type of the routing key that follows the **-k** option in the command.

The **rtkey** variable is optional when used with **-t default**, and mandatory for all other cases.

If the same routing key exists as both a static and dynamic routing key, the **-k** option will report the counts associated with the dynamic entry in the Routing Key table only.

The following formats are valid for the routing key that follows the **-k** option in the command:

- **n-c-m:s:n**—For DPC, SI, SSN type routing keys. The network, cluster and member (*n-c-m*) are in the range **0-255**. The service indicator (*s*) is **3** or **sccp**. The subsystem (*n*) is in the range **0-255**.
- **n-c-m:s**—For DPC, SI, type routing keys. The network, cluster and member (*n-c-m*) are in the range **0-255**. The service indicator (*s*) is in the range **0-2**, **4**, or **6-15**. There is no subsystem. As a default, counts for all routing keys within the option combination are displayed.
- **n-c-m:s:no-co-mo:cs:ce**—For DPC, SI, CIC type routing keys. The DPC network, cluster and member (*n-c-m*) are in the range **0-255**. The service indicator (*s*) is **5** or **isup**. There is no subsystem. The OPC network, cluster and member (*no-co-mo*) are in the range **0-255**. The starting circuit identification code (*cs*) and ending circuit identification code (*ce*) are in the range **0** to **16363**.

-l link

This option is used to display counts for links. The link report optionally allows display of link statistics for a specified port.

The link report contains data, per link, for MSUs (tx/rcv), MSU bytes (tx/rcv), MGMT msgs (tx/rcv), and discarded data (tx/rcv).

Range: a, b, a1, b1, a2, b2, a3, b3

Ports **a1**, **b1**, **a2**, **b2**, **a3**, and **b3** are allowed only on SSED CM IPLIMx cards.

If a port is not specified, **msucount** displays link statistics for port **a** for IPGWx links, and port **a** and port **b** for IPLIMx links.

The **msucount** link statistics report contains all zeros for a port that is valid for the card and application type but is unequipped.

-p point code type

This option modifier can be specified along with the **-k** option to identify the point code type (ANSI, ITU international, ITU-national, 24-bit ITU national, ITU international spare, and ITU national spare) in the routing key that follows the **-k** option in the command.

Range: ansi, itui, itun, itun24, ituis, ituns

-r

This option is used with other options to reset counts at the same time of reporting them.

-s name

This option is used to display socket reports for the specified IP connection.

Range:

Up to 15 alphanumeric characters

Default: Counts for all IP connections within the option combination

-t keytype

This option is used to display the routing key type (IPGWx only).

-x rc

The routing context is an index that uniquely defines a routing key associated with an SUA or M3UA AS. The **-x** option is used as an alternative to the **-k** option to identify the routing key by specifying its routing context in the command line.

NOTE: The -x rc option can only be used to specify routing keys containing M3UA/SUA associations.

Example

Link counts only. Displays brief count for signaling link **a** for IPGWx. Displays counts for all equipped signaling links for IPLIMx.

msucount -l

Link counts only, for signaling link port **a1**.

msucount -l a1

Full/detail report for signaling link **a** for IPGWx.

msucount -l -f

Counts for the specified socket only.

msucount -s socyellow

Counts for the specified association only.

msucount -a association name

Counts for first matching routing key

msucount -k 10-10-10:3:16

Counts for matching dynamic routing key

msucount -k 10-10-10:3:16 -d

Counts for the routing key report using the routing context.

msucount -x 5

Counts for the first matching routing key and an associated socket

msucount -s socket name -k rtkey

Counts for first matching routing key and an associated association.

msucount -a association name -k rtkey

Counts for the default routing key

msucount -k -t default

Counts for a matching partial routing key.

msucount -k 3-3-3 -t partial

Counts for counts for link only. Displays brief report for signaling link **a** for IPGWx. Displays counts for all equipped signaling links for IPLIMx.

msucount

Full/detail report for signaling link **A** for IPGWx.

msucount -h full

Resets the signaling link count measurements.

msucount -r

Brief version of help text.

msucount -h

Full version of help text.

msucount -h full

Counts for link and first matching routing key

msucount -l -k 10-10-10:3:16

Counts for first matching routing key and an associated IP connection

msucount -s socyellow -k 10-10-10:3:16

Use with other parameters to display and reset counts. Valid with the above combinations.

msucount -l -r**msucount -r****msucount -s sock1 -r****msucount -x 5 -r**

The following examples provide a correct syntax to specify partial or default keys, or to specify a key by routing context.

pass:loc=1105:cmd="msucount -k 5-5-1:5:6-6-6 -t partial

pass:loc=1105:cmd="msucount -k 5-5-1:5 -t partial"

pass:loc=1105:cmd="msucount -k 5-5-1:3 -t partial

pass:loc=1105:cmd="msucount -p ITUI -t partial -k 1-235-1"

pass:loc=1105:cmd="msucount -p ITUN -t partial -k 2351"

pass:loc=1105:cmd="msucount -p ITUN -t partial -k 2351-gr

pass:loc=1105:cmd="msucount -t partial -k :2 "

pass:loc=1105:cmd="msucount -k -t default"

pass:loc=1105:cmd="msucount -d -k -t default "

pass:loc=1105:cmd="msucount -p ITUN24 -t partial -k 10-235-1"

pass:loc=1105:cmd="msucount -p ITUN24 -t partial -k 10-235-1"

Examples of other valid routing key inputs:

pass:loc=1105:cmd="msucount -r -k 5-5-6:5:5-5-7:1:1000"

pass:loc=1105:cmd="msucount -r -p ITUI -k 5-5-6:4:5-5-7:1:1000"

pass:loc=1105:cmd="msucount -r -p ITUI -k 5-5-6:5:5-5-7:1:1000"

pass:loc=1105:cmd="msucount -p ITUI -k 5-5-1:3:5 -s c7000 -r"

pass:loc=1105:cmd="msucount -r -s c7050 -p ITUN -k 2860:3:5 -l"

pass:loc=1105:cmd="msucount -k 5-5-1:3:5 -a assoc1"

pass:loc=1105:cmd="msucount -p ITUN -k 3838:3:5 -s c7000"

pass:loc=1105:cmd="msucount -p ITUI -k 1-34-4:3:105 -s c7001"

pass:loc=1105:cmd="msucount -r -p ITUN24 -k 15-105-16:5:15-105-17:1:1000"

Dependencies

At least one option must be specified.

Notes

The **msucount** command is executed through the **pass** command.

Combinations of the **-l**, **-a**, **-s**, **-k**, **-t** and **-x** options provide count information based on the entered combination.

If no parameters are specified, then the **-l** brief report is output.

Multiple reports are not supported with the IP Signaling Serviceability feature.

For the SS7IPGW and IPGWI GPLs, 3 types of reports can be generated: the link report, the routing key report, and the IP connection statistics report. For the IPLIM/IPLIMI card, the routing key report is not supported.

The 3 reports are the following:

1. The link report (**-l** option) contains statistics per link—data about MSUs (transmit/receive), MSU bytes (transmit/receive), MGMT messages (transmit/receive), and discarded data (transmit/receive).
2. The routing key report (**-k** option) contains statistics for a specific routing key—data about MSUs (transmit), MSU bytes (transmit), and discards on the transmit path for the routing key. A list of one or more IP connections associated with the routing key, with the MSU and MSU bytes counts for each connection, is also displayed. If **-s sname** or **-a aname** is in the same input command with **-k rtkey**, only the connection association data for the specified connection is displayed. When **-s sname** and **-a aname** is not specified with **-k rtkey**, all connection associations are listed. If **-x rc** is specified, only the connection association data for the specified routing context is displayed.
The **-p** (point code type) modifier option can be used with the **-k** option to specify the point code type of the routing key that follows the **-k** option in the command.
For the **-k** options, the routing key must be an exact match of a routing key that exists in the static or dynamic Routing Key tables. If the same routing key exists in both the static and dynamic Routing Key tables, the **-k** option displays the counts associated with the entry in the dynamic Routing Key table only.
3. The IP connection statistic report (**-s sname** or **-a aname** option) contains statistics for a specified IP connection—data about MSUs (transmit/receive), MSU bytes (transmit/receive), and discarded data (transmit/receive).
When the **-s sname** or **-a aname** option is specified in the command with the **-k** option, the output type is assumed to be routing key output.
When the **-s sname** option is specified in the command without the **-k** option, the IP connection statistic report is generated.
When **-a aname** is specified on the command line without **-k**, association statistics output is generated.

All 3 report types (IPGWx only) can display individual transmit MSUs that were discarded at layer 2. The first 32 bytes of the MSU transmit data that is discarded is stored beginning at the SIO bytes. If the MSU is not 32 bytes long, the remaining bytes are set to 0.

The link and IP connection statistics reports can display individual receive packets that were discarded at layer 2. Portions of the TALI packets for the receive MSUs that the SS7IPGW application discards are stored beginning with the 12 bytes of the TALI header., and followed by the service

data. If the storage space is larger than the service data, the extra bytes are set to 0. The TALI packet is stored instead of the MSU so that it is not necessary to construct an MTP3 header for packets that are discarded for reasons such as bad link state, bad SCCP message type, no calling or called party, or bad SIO for an ISUP message.

The reset option (**-r**) resets the specified measurements. This option can be added to any command.

Output

In the examples that follow, the hexadecimal output for discarded *transmit* data represents data stored beginning at the SIO bytes through the first 32 bytes of the MSU. If the MSU was less than 32 bytes, the remaining bytes are represented by zeros.

Hexadecimal output for discarded *receive* data represents data stored beginning at the TALI header. (A TALI header can have a sync code of either TALI or SASI). This data is used to store portions of the TALI packets for received MSUs that the SS7IPGW APPL layer decides to discard.

Stored *receive* data takes the following format:

First 12 bytes = TALI header.

Bytes 13-x = Service data, beginning with the first byte of service data based on the received TALI operations code. If the storage space is greater than the size of the service data, the remaining bytes are zeroed.

Output Specific to SS7IPGW and IPGWI

Either brief or full help reports can be displayed. A full help report is generated by adding the **full** (**-f**) option to the command line.

Example of a brief help report:

pass:loc=1105:cmd="msucount -h"

```
0          1          2          3          4          5          6          7
12345678901234567890123456789012345678901234567890123456789012345678
```

```
Usage: msucount [ [-l [link]] |
                  [[-a aname] | [-s sname]]
                  [[-x rc] | [-k [rtkey] [-p pctype] [-t keytype] [-d]]] ]
                  [-f] [-r] [-h [full]]
```

```
Options: -l  display signaling link report
          -a  display association report
          -s  display socket report
          -x  routing key report using routing context
          -k  routing key report using MTP3 parameters
              rtkey :: ([dpc][:si][:opc | :ssn][:cics][:cice])
          -p  pctype :: (ANSI, ITUI, ITUN, ITUN24, ITUIS, ITUNS)
          -t  routing key type
              keytype :: (<full>, partial, default)
          -d  display dynamic routing key
          -f  display full report
          -r  resets the specified counts
          -h  display command help (brief or full)
```

Example of a full help report.

pass:loc=1105:cmd="msucount -h full"

```

0          1          2          3          4          5          6          7
12345678901234567890123456789012345678901234567890123456789012345678
Usage: msucount [ [-l [link]] |
                [[-a aname] | [-s sname]]
                [[-x rc] | [-k [rtkey] [-p pctype] [-t keytype] [-d]]] ]
                [-f] [-r] [-h [full]]

```

Options:

- l display signaling link report
- a display association report
- s display socket report
- x routing key report using routing context
- k routing key report using MTP3 parameters
rtkey :: ([dpc][:si][:opc | :ssn][:cics][:cice])
- p pctype :: (ANSI, ITUI, ITUN, ITUN24, ITUIS, ITUNS)
- t routing key type
keytype :: (<full>, partial, default)
- d display dynamic routing key
- f display full report
- r resets the specified counts
- h display command help (brief or full)

-k option details:

Use the -p option along with -k to specify the SS7 network domain and point code format for the network. The SS7IPGW default pctype is ANSI. The IPGWI default pctype is ITUI.

Network	PC Format	Notes
ANSI	N-C-M	
ITUN	N	Non-Spare ITU National, no group code
ITUN	N-GC	Non-Spare ITU National with group code
ITUI	Z-A-I	Non-Spare ITU International
ITUN24	N-C-M	Non-Spare ITU National, 24-bits
ITUNS	N	Spare ITU National, no group code
ITUNS	N-GC	Spare ITU National with group code
ITUIS	Z-A-I	Spare ITU International

Use the -t option along with -k to specify certain MTP3 and user part MSU fields as wildcards for the routing key.

SS7 Traffic Partition	RTKEY Parameter Example
Any User Part to DPC 1-1-1	-k 1-1-1 -t partial
SCCP to DPC 1-1-1	-k 1-1-1:3 -t partial
ISUP to DPC 1-1-1	-k 1-1-1:5 -t partial
TUP to DPC 1-1-1	-k 1-1-1:4 -t partial
QBICC to DPC 1-1-1	-k 1-1-1:13 -t partial
SI [0-2,6-12,14,15] to DPC 1-1-1	-k 1-1-1:SI
SCCP SSN 5 to DPC 1-1-1	-k 1-1-1:3:5
ISUP to DPC 1-1-1 from OPC 2-2-2	-k 1-1-1:5:2-2-2 -t partial
TUP to DPC 1-1-1 from OPC 2-2-2	-k 1-1-1:4:2-2-2 -t partial
QBICC to DPC 1-1-1 from OPC 2-2-2	-k 1-1-1:13:2-2-2 -t partial
ISUP CIC 1 to 1-1-1 from 2-2-2	-k 1-1-1:5:2-2-2:1
TUP CIC 1 to 1-1-1 from 2-2-2	-k 1-1-1:4:2-2-2:1
QBICC CIC 1 to 1-1-1 from 2-2-2	-k 1-1-1:13:2-2-2:1
ISUP CIC 0-5 to 1-1-1 from 2-2-2	-k 1-1-1:5:2-2-2:0:5
TUP CIC 0-5 to 1-1-1 from 2-2-2	-k 1-1-1:4:2-2-2:0:5
QBICC CIC 0-5 to 1-1-1 from 2-2-2	-k 1-1-1:13:2-2-2:0:5
Default Routing Key	-k -t default

A brief version for the link measurement report can be specified for IPGWx. If no parameters are specified for a link measurements report, then a brief report is displayed. The brief report does not display the transmit/receive discard counts.

Example of a brief link measurements report:

pass:loc=1305:cmd="msucount"

or

pass:loc=1305:cmd="msucount -l"

```
0          1          2          3          4          5          6          7
12345678901234567890123456789012345678901234567890123456789012345678
MSUCOUNT: MSU Count Report

-----
Link Measurements (Link A)
-----

Transmit Counts                                Receive Counts
-----
rate  msus      bytes      rate  msus      bytes
-----
2000   4294967295  4294967295  2000   4294967295  4294967295

MTP Primitive (MTPP) counts                    Reroute Counts
-----
sent pdus  rcvd pdus  dscrd pdus  sent msus  rcvd msus
-----
4294967295  4294967295  4294967295  4294967295  4294967295

END of Report
```

Example of a full link measurements report:

pass:loc=1305:cmd="msucount -f"

or

pass:loc=1305:cmd="msucount -l -f"

```

0          1          2          3          4          5          6          7
12345678901234567890123456789012345678901234567890123456789012345678
MSUCOUNT: MSU Count Report

```

```

-----
Link Measurements (Link A)
-----

```

```

Transmit Counts
-----

```

```

rate    msus          bytes
-----
2000    4294967295    4294967295

```

```

Receive Counts
-----

```

```

rate    msus          bytes
-----
2000    4294967295    4294967295

```

```

MTP Primitive (MTPP) Counts
-----

```

```

sent pdus  rcvd pdus  dscrd pdus
-----
4294967295 4294967295 4294967295

```

```

Reroute Counts
-----

```

```

sent msus  rcvd msus
-----
4294967295 4294967295

```

```

Dynamic Rtkey (RKRK) Counts
-----

```

```

rcvd pdus  dscrd pdus  updates
-----
4294967295 4294967295 4294967295

```

```

Transmit Discard Counts
-----

```

```

reason                      count
-----
no ss7 rtbl entry           4294967295
no ss7 rtkey                 4294967295
no conn avail to pc          4294967295
no conn avail to rtkey       4294967295
congested connection         4294967295
sccp msg type                 4294967295
sccp class                    4294967295
circular rte                  4294967295
normalization error           4294967295
invalid traffic type           4294967295
M3UA conversion error         4294967295
SUA conversion error           4294967295
AS-Pending overflow           4294967295
AS timer Tr expiry            4294967295
reroute failure               4294967295
unexpected for APC             4294967295

```

```

Receive Discard Counts
-----

```

```

reason                      count
-----
link state                    4294967295
sccp msg type                  4294967295
sccp class                      4294967295
sccp called party              4294967295
sccp calling party             4294967295
isup sio                       4294967295
normalization error             4294967295
error in XSRV packet            4294967295
M3UA PDU error                  4294967295
SUA PDU error                   4294967295
invalid rcontext                4294967295

```

```

Stored Transmit Discard Data
-----

```

```

83 01 05 05 0a 01 03 bf 09 80 03 08 0d 05 c3 07
01 05 05 05 c3 07 0a 01 03 08 e2 06 c7 04 13 10

```

```

Stored Receive Discard Data
-----

```

```

53 41 53 49 73 63 63 70 1a 00 09 01 03 08 0d 05
c3 05 0a 01 03 05 c3 05 01 05 05 08 e2 06 c7 04

```

```

END of Report

```

```

;

```

Example of an output report when all counts are zero:

pass:loc=1305:cmd="msucount -f"

or

pass:loc=1305:cmd="msucount -l -f"

```

0          1          2          3          4          5          6          7
12345678901234567890123456789012345678901234567890123456789012345678
MSUCOUNT: MSU Count Report
-----
Link Measurements (Link A)
-----
Transmit Counts                      Receive Counts
-----
rate  msus      bytes                rate  msus      bytes
-----
00000 00000      00000                00000 00000      00000

MTP Primitive (MTPP) Counts          Reroute Counts
-----
sent pdus  rcvd pdus  dscrd pdus  sent msus  rcvd msus
-----
00000      00000      00000          00000      00000

Dynamic Rtkey (RKRP) Counts
-----
rcvd pdus  dscrd pdus  updates
-----
00000      00000      00000

Transmit Discard Counts              Receive Discard Counts
-----
reason                      count                reason                      count
-----
no transmit discard counts      no receive discard counts

Stored Transmit Discard Data
-----
no stored transmit discard data
Stored Receive Discard Data
-----
no stored receive discard data

END of Report

```

Routing Key Report Output Examples

The routing key report contains data about MSUs (tx), MSU bytes (tx), and discards on the transmit path for the routing key. A list of one or more connections associated with the routing key, with the MSU and MSU bytes counts for each connection, is also presented. If **-s sname** or **-a aname** is in the same input command with **-k rtkey**, only the connection association data for the specified connection is displayed. When **-s sname** and **-a aname** is not specified with **-k rtkey**, all connection

associations are listed. If **-x rc** is specified, only the connection association data for the specified routing context is displayed.

NOTE: For IPGWx, -k rtkey is optional when used with -t default, and mandatory for all other cases.

The report output itself does not display the routing key that was entered, other than an exact copy of the command line being generated as part of the output. The only indication in the output as to which key was found is the indication as to whether the key was in the dynamic Routing Key table or the static Routing Key table.

Partial routing keys (where some fields in the MSU are ignored with respect to finding a routing key to use for the MSU) and default keys can be specified in the command. The output does not change for these key types; the only difference is the routing key syntax (**-p**, **-d**) that must be processed as part of identifying the partial and default keys. (See the Example section of this command description for syntax examples.)

Example of a routing key report for an ANSI routing key that specifies the dynamic Routing Key table:

pass:loc=1105:cmd="msucount -k 5-5-1:3: -t partial -d"

or

pass:loc=1105:cmd="msucount -k 5-5-1:3 -p ANSI -t partial -d"

```

0          1          2          3          4          5          6          7
12345678901234567890123456789012345678901234567890123456789012345678
MSUCOUNT: MSU Count Report
-----
Routing Key Measurements for Dynamic Routing Key
-----
Transmit Counts
-----
tx bytes                4294967295
tx msus                 4294967295

Transmit Discard Counts
-----
sccp msg type           4294967295
sccp class              4294967295
normalization error     4294967295
invalid traffic type    4294967295

Associated IP Connection          tx bytes      tx msus
-----
c7000                4294967295      4294967295
c7050                4294967295      4294967295
c7052                4294967295      4294967295
c7054                4294967295      4294967295

Stored Transmit Discard Data
-----
83 01 05 05 0a 01 03 94 09 01 03 08 0d 05 c3 05
01 05 05 05 c3 05 0a 01 03 08 e2 06 c7 04 28 10

END of Report
;

```

Example of an ITU-I routing key report (only 1 specific socket association or socket is displayed):

pass:loc=1105:cmd="msucount -p ITUI -k 5-5-1:3:5 -a c7000"

or

pass:loc=1105:cmd="msucount -p ITUI -k 5-5-1:3:5 -s c7000

```

0          1          2          3          4          5          6          7
12345678901234567890123456789012345678901234567890123456789012345678
MSUCOUNT: MSU Count Report

-----
Routing Key Measurements for Static Routing Key
-----

Transmit Counts
-----
tx bytes:                        4294967295
tx msus:                         4294967295

Transmit Discard Counts
-----
sccp msg type                    4294967295
sccp class                       4294967295
normalization error              4294967295
invalid traffic type             4294967295

Associated IP Connection          tx bytes      tx msus
-----
c7000                            4294967295    4294967295

Stored Transmit Discard Data
-----
83 01 05 05 0a 01 03 94 09 01 03 08 0d 05 c3 05
01 05 05 05 c3 05 0a 01 03 08 e2 06 c7 04 28 10

END of Report
;

```

Example of a routing key report when the routing context =5 (because a table is not specified, the key is searched for in the Static table).

pass:loc=1105:cmd="msucount -x 5"

```

0          1          2          3          4          5          6          7
12345678901234567890123456789012345678901234567890123456789012345678
MSUCOUNT: MSU Count Report

```

```

-----
Routing Key Measurements for Static Routing Key
-----

```

```

Transmit Counts
-----

```

```

tx bytes          4294967295
tx msus           4294967295

```

```

Transmit Discard Counts
-----

```

```

sccp msg type          4294967295
sccp class              4294967295
normalization error     4294967295
invalid traffic type     4294967295

```

Associated IP Connection	tx bytes	tx msus
c7000	4294967295	4294967295
c7050	4294967295	4294967295
c7052	4294967295	4294967295
c7054	4294967295	4294967295

```

Stored Transmit Discard Data
-----

```

```

83 01 05 05 0a 01 03 94 09 01 03 08 0d 05 c3 05
01 05 05 05 c3 05 0a 01 03 08 e2 06 c7 04 28 10

```

```

END of Report

```

```

;

```

Example of an ITU-N routing key report:

- Command when the ITUDUPPC feature is OFF (default)

```
pass:loc=1105:cmd="msucount -p -k 2860:3:5"
```

Command Accepted - Processing

```

rlghncxa03w 06-06-01 11:33:40 EST EAGLE5 35.0.0
pass:loc=1105:cmd="msucount -p ITUN -k 2860-aa:3:5"
Command entered at terminal #1.

```

```

;

```

- Command when the ITUDUPPC feature is ON (a 2-letter group code must be specified)

```
pass:loc=1105:cmd="msucount -p ITUN -k 2860-gr:3:5"
```

Command Accepted - Processing

```

rlghncxa03w 06-06-01 11:33:40 EST EAGLE5 35.0.0
pass:loc=1105:cmd="msucount -p ITUN -k 2860-gr:3:5"
Command entered at terminal #1.

```

```

;

```

- The remainder of the ITUN routing key report is the same for both the **on** and **off** settings of the ITUDUPPC feature:

```

rlghncxa03w 06-06-01 11:33:40 EST  EAGLE5 35.0.0
PASS: Command sent to card
;

rlghncxa03w 06-06-01 11:33:40 EST  EAGLE5 35.0.0
MSUCOUNT: Command In Progress
;

rlghncxa03w 06-06-01 11:33:40 EST  EAGLE5 35.0.0
MSUCOUNT: MSU Count Report

-----
Routing Key Measurements for Static Routing Key
-----

Transmit Counts
-----
tx bytes:                                00000
tx msus:                                00000

Transmit Discard Counts
-----
discarded tx due to sccp msg type:        00000
discarded tx due to sccp class:          00000
discarded tx due to normalization error:  00000
discarded tx due to invalid traffic type: 00000

Associated IP Connection          tx bytes      tx  msus
-----
c7000                            00000000    00000000
c7050                            00000000    00000000
c7052                            00000000    00000000
c7054                            00000000    00000000

Stored Transmit Discard Data
-----
no stored transmit discard data

END of Report
;

```

IP Connection Report

Example of an IP Connection report for an association or a socket (both share the same report output).

pass:loc=1105:cmd="msucount -s c7050"

or

pass:loc=1105:cmd="msucount -a c7050"

```

0          1          2          3          4          5          6          7
12345678901234567890123456789012345678901234567890123456789012345678
MSUCOUNT: MSU Count Report

-----
IP Connection Measurements
-----

Receive Counts                      Transmit Counts
-----
msus                               bytes    msus                               bytes
-----
4294967295                        4294967295  4294967295                        4294967295

Receive Discard Counts              Transmit Discard Counts
-----

-----
reason                             count    reason                             count
-----
link state                         4294967295  sccp msg type                      4294967295
sccp msg type                      4294967295  sccp class                         4294967295
sccp class                         4294967295  normalization error               4294967295
sccp called party                  4294967295  invalid traffic type              4294967295
sccp calling party                 4294967295  M3UA conversion error             4294967295
isup sio                           4294967295  SUA conversion error              4294967295
normalization error                4294967295
error in XSRV packet               4294967295
M3UA PDU error                     4294967295
SUA PDU error                      4294967295
invalid rcontext                   4294967295

Stored Transmit Discard Data
-----
no stored transmit discard data

Stored Receive Discard Data
-----
53 41 53 49 69 73 6f 74 11 00 87 0a 01 03 01 05
05 00 01 02 03 04 05 06 07 08 09 00 00 00 00 00

END of Report
;

```

Output Specific to IPLIM and IPLIMI

NOTE: The routing key report is not supported for IPLIMx applications. The -k, -t, -p, -d, -x options are not supported because the IPLIMx card does not use routing keys and does not support dynamic routing key registration.

NOTE: The IPLIM reports include all equipped signaling links instead of just ports A and B. These reports include the transmit/receive counts alongside each other for the link case.

Example of help for using the command:

pass:loc=1103:cmd="msucount -h" or

pass:loc=1103:cmd="msucount"

```
Usage: msucount [ [-l [link]] |
                 [[-a aname] | [-s sname]] ]
                 [-r] [-h]

Options: -l  display signaling link report
         -a  display association report
         -s  display socket report
         -r  resets the specified counts
         -h  display command help
```

MSUCOUNT command complete

;

Example of a link report for an IPLIMx card with 2 SAALTALI or M2PA links:

The report does not contain MTPP or RKRP MGMT statistics, because those capabilities are not supported on the IPLIMx applications. The report also does not contain tx/rcv discard data, because there are no discards performed at layer 2 of the IPLIMx applications. The IPLIMx card can also contain 2 links per card; the output contains link data for each link.

pass:loc=1301:cmd="msucount"

or

pass:loc=1301:cmd="msucount -l"

MSUCOUNT: MSU Count Report

SLK Transmit counts				SLK Receive counts		
slk	rate	msus	bytes	rate	msus	bytes
A	2000	4294967295	4294967295	2000	4294967295	4294967295
B	2000	4294967295	4294967295	2000	4294967295	4294967295
A1	2000	4294967295	4294967295	2000	4294967295	4294967295
B1	2000	4294967295	4294967295	2000	4294967295	4294967295
A2	0000	0000000000	0000000000	0000	0000000000	0000000000

END of Report

The following is an output example for signaling link **a1** on an IPLIMx card:

pass:loc=1103:cmd="msucount -l a1"

MSUCOUNT: MSU Count Report

SLK Transmit counts				SLK Receive counts		
slk	rate	msus	bytes	rate	msus	bytes
A1	2000	4294967295	4294967295	2000	4294967295	4294967295

END of Report

Example of an IP connection statistics report. The IPLIMx IP connection report does not contain **tx/rcv** discard data, because there are no discards performed at layer 2 of the IPLIMx applications.

pass:loc=1105:cmd="msucount -s c7050"

or

pass:loc=1105:cmd="msucount -a c7050"

```

      MSUCOUNT: Command In Progress
0      1      2      3      4      5      6      7
1234567890123456789012345678901234567890123456789012345678
      MSUCOUNT: MSU Count Report

-----
      IP Connection Measurements
-----

      Transmit Counts                      Receive Counts
      -----
      msus              bytes              msus              bytes
      -----
      4294967295        4294967295        4294967295        4294967295

      END of Report

```

Enhanced Reset Option

The reset option resets the specified measurements without displaying **msucount** output. The default is to reset the link measurements report.

Example displays resetting link measurements:

pass:loc=1305:cmd="msucount -l -r"

or

pass:loc=1305:cmd="msucount -r"

```

eagle10212 06-06-01 08:50:47 EST  EAGLE 35.0.0

      MSUCOUNT: MSU Count Report

      Link measurements have been reset.

      MSUCOUNT: command complete

```

Example displays resetting IP connections:

pass:loc=1305:cmd="msucount -s - sock1 -r"

```

eagle10212 06-01-05 08:50:47 EST  EAGLE 35.0.0

      MSUCOUNT: MSU Count Report

      IP Connection measurements have been reset.

      MSUCOUNT: command complete

```

Example displays resetting Routing Key measurements:

```
pass:loc=1305:cmd="msucount -x -5 -r"
```

```
eagle10212 06-01-05 08:50:47 EST EAGLE 35.0.0
```

```
MSUCOUNT: MSU Count Report
```

```
Routing Key measurements have been reset.
```

```
MSUCOUNT: command complete
```

msuroute

Message Signaling Unit (MSU) Routing Information

This command is used to provide a list of all routing keys currently configured on an SS7IPGW/ IPGWI card that could be used to route a particular MSU. With 3 types of routing keys (fully specified, partial and default) and 2 types of routing key tables (static and dynamic) the complexity associated with figuring out how a particular MSU would be routed at any point in time is not trivial. This command provides output to help determine how MSUs will be routed based on current conditions.

Keyword: **msuroute**

Command Class: Application Maintenance

Options

Options and option parameters that are underlined indicate that a value must be specified for that option or parameter. For example, the **msuroute** command option **-k** has the parameter rtkey. The *full routing key* must be specified for the MSU for which the summary will be displayed, as in the command **msuroute -k 5-5-5:5:6-6-6:1100**. Do not enter the underlined option or parameter; enter a value for the information represented by the underlined option or parameter.

-d

This option is used to report dynamic routing keys.

-h

This option is used to provide help information for the command.

-k rtkey

This option is mandatory in the command to specify the full routing key for the MSU for which the summary will be displayed. The routing key is specified as a single parameter with up to five colon-separated fields. The subsystem is not specified when SI is not equal to **3**.

The **-p point code type** modifier is used to identify the format of the routing key that follows the **-k** option in the command.

The following are valid formats for the routing key that follows the **-k** option in the command:

- **n-c-m:s:n**—For DPC, SI, SSN type routing keys. The network, cluster and member (n-c-m) are in the range **0-255**. The service indicator (s) is **3** or **sccp**. The subsystem (n) is in the range **0-255**.
- **n-c-m:s**—For DPC, SI, type routing keys. The network, cluster and member (n-c-m) are in the range **0-255**. The service indicator (s) is in the range **0-2**, **4**, or **6-15**. There is no subsystem.
- **n-c-m:s:no-co-mo:cs:ce**—For DPC, SI, CIC type routing keys. The DPC network, cluster and member (n-c-m) are in the range **0-255**. The service indicator (s) is **5** or **isup**. There is no subsystem. The OPC network, cluster and member (no-co-mo) are in the range **0-255**. The starting circuit identification code (cs) and ending circuit identification code (ce) are in the range **0** to **16363**.

-p point code type

This option modifier is used to identify the point code type (ANSI, ITU international, ITU national, ITU international spare, ITu national spare) in the routing key that follows the **-k** option in the command.

Range: ansi, itui, itun, itun24, ituis, ituns

Default: ansi

-x routing context

This option modifier is used to display the routing key report using routing context.

Example

```
msuroute -h
msuroute -p ansi -k 5-5-5:5:6-6-6:1100
msuroute -p ansi -k 5-5-5:5:6-6-6:1100:1100
msuroute -k 5-5-5:5:6-6-6:1100
msuroute -k 5-5-5:5:6-6-6:1100:1100
msuroute -p ansi -k 5-5-5:8
msuroute -p itun -k 345:5:678:100:200
msuroute -p itun -k 345-gr:5:678-gr:100:200
msuroute -p itun24 -k 10-200-10:5:10-200-1:1:100
```

Dependencies

The **-k** option must be specified in the command, and must specify a full routing key.

This command is not supported for IPLIM/IPLIMI cards.

Notes

The **msuroute** command is executed through the pass command.

The **-p point code type** modifier option can be used with the **-k** option to specify the format of the routing key that follows the **-k** option in the command.

Output

The output for each **msuroute** command consists of a list of all of the routing keys that exist on the IPGWx card that could be used to route the MSU. The list of routing keys is presented in the hierarchical search order in which the keys would be used. The list of routing keys indicates keys that have IP connections available for traffic, and indicates which routing key would currently be used to route the MSU (marked with ***).

For the routing key that is selected to route the MSU, the list of IP connections associated with the key is also displayed.

NOTE: Most of the following output examples show command entries for ANSI MSUs. Because, other than echoing the input command back to the screen, there is nothing in the output that contains specific fields from any configured keys. The output would not be different if the user entered ITUI MSUs instead of ANSI MSUs.

Either brief or full help reports can be displayed. A full help report is generated by adding the **-h full** option to the command line.

Example of a brief help report:

pass:loc=1105:cmd="msuroute -h"

Command Accepted - Processing

```
Usage: msuroute [ [-x rc] | [-k [rtkey] [-p pctype] [-d]] ]
           [-h [full]]
```

```
Options: -x routing key report using routing context
         -k routing key report using MTP3 parameters
           rtkey :: ([dpc][:si][:opc | :ssn][:cics][:cice])
         -p pctype :: (ANSI, ITUI, ITUN, ITUN24, ITUIS, ITUNS)
         -d display dynamic routing key
         -h display command help (brief or full)
```

;

Example of a full help report:

pass:loc=1305:cmd="msuroute -h full"

```
0          1          2          3          4          5          6          7
12345678901234567890123456789012345678901234567890123456789012345678
Usage: msuroute [ [-x rc] | [-k [rtkey] [-p pctype] [-d]] ]
           [-h [full]]
```

```
Options: -x routing key report using routing context
         -k routing key report using MTP3 parameters
           rtkey :: dpc:si:opc:cics:cice | dpc:si:ssn | dpc:si
         -p pctype :: (ANSI, ITUI, ITUN, ITUN24, ITUIS, ITUNS)
         -d display dynamic routing key
         -h display command help (brief or full)
```

-k option details:

Use the -p option along with -k to specify the SS7 network domain and point code format for the network. The SS7IPGW default pctype is ANSI. The IPGW1 default pctype is ITUI.

Network	PC Format	Notes
ANSI	N-C-M	
ITUN	N	Non-Spare ITU National, no group code
ITUN	N-GC	Non-Spare ITU National with group code
ITUI	Z-A-I	Non-Spare ITU International
ITUN24	N-C-M	Non-Spare ITU National, 24-bits
ITUNS	N	Spare ITU National, no group code
ITUNS	N-GC	Spare ITU National with group code
ITUIS	Z-A-I	Spare ITU International

SS7 Traffic Partition	RTKEY Parameter Example
SCCP SSN 5 to DPC 1-1-1	-k 1-1-1:3:5
ISUP CIC 1 to 1-1-1 from 2-2-2	-k 1-1-1:5:2-2-2:1
TUP CIC 1 to 1-1-1 from 2-2-2	-k 1-1-1:4:2-2-2:1
QBICC CIC 1 to 1-1-1 from 2-2-2	-k 1-1-1:13:2-2-2:1
ISUP CIC 0-5 to 1-1-1 from 2-2-2	-k 1-1-1:5:2-2-2:0:5
TUP CIC 0-5 to 1-1-1 from 2-2-2	-k 1-1-1:4:2-2-2:0:5
QBICC CIC 0-5 to 1-1-1 from 2-2-2	-k 1-1-1:13:2-2-2:0:5

;

```
eagle10212 06-06-01 12:56:46 EST EAGLE 35.0.0
MSURROUTE command complete
```

Example of **msuroute** output for an ANSI CIC-based MSU, showing at least 1 routing key of every key type in the search hierarchy configured on the 1105 card. Only key types that are configured on the card will be listed in the display.

pass:loc=1105:cmd="msuroute -p ANSI -k 5-5-5:6-6-6:1100"

Command Accepted - Processing

```

r lghncxa03w 06-06-01 11:31:09 EST  EAGLE5 35.0.0
pass:loc=1105:cmd="msuroute -x ANSI -k 5-5-5:6-6-6:1100"
Command entered at terminal #1.
;

r lghncxa03w 06-06-01 11:31:09 EST  EAGLE5 35.0.0
PASS: Command sent to card
;

r lghncxa03w 06-06-01 11:31:09 EST  EAGLE5 35.0.0
MSURROUTE command in progress
;

r lghncxa03w 04-04-29 11:31:09 EST  EAGLE5 31.6.0

TABLE  KEYTYPE                #ConnCfgd  #ConnAvail  RTKEY USED
DYN     FULL                    1           0           no
DYN     PARTIAL: IGNORE-CIC     2           0           no
DYN     PARTIAL: IGNORE-CIC+OPC 1           0           no
DYN     PARTIAL: DPC-SI ONLY    3           3           yes
DYN     PARTIAL: DPC ONLY       2           2           no
DYN     PARTIAL: SI ONLY        4           0           no
DYN     DEFAULT                 4           4           no
STATIC  FULL                    12          4           no
STATIC  PARTIAL: IGNORE-CIC     3           0           no
STATIC  PARTIAL: IGNORE-CIC+OPC 2           0           no
STATIC  PARTIAL: DPC-SI ONLY    3           2           no
STATIC  PARTIAL: DPC ONLY       2           2           no
STATIC  PARTIAL: SI ONLY        1           0           no
STATIC  DEFAULT                 2           0           no

IP Connections Associated with the RTKEY USED
Name                               Avail?
Vox1                               yes
Mgc2                               yes
Mgc24                             yes

MSURROUTE command complete
;

```

Example of **msuroute** output for an ANSI SCCP MSU. Several of the key types in the search hierarchy are not configured on the 1105 card, and therefore are not part of the output (for example, dynamic or static full key and dynamic or static partial SI only). Only key types that are configured on the card will be listed in the display.

pass:loc=1105:cmd="msuroute -p ANSI -k 5-5-5:3:34"

Command Accepted - Processing

```

rlghncxa03w 06-06-01 11:31:09 EST EAGLE5 35.0.0
pass:loc=1105:cmd="msuroute -p ANSI -k 5-5-5:3:34"
Command entered at terminal #1.
;

rlghncxa03w 06-06-01 11:31:09 EST EAGLE5 35.0.0
PASS: Command sent to card
;

rlghncxa03w 06-06-01 11:31:09 EST EAGLE5 35.0.0
MSURROUTE command in progress
;

rlghncxa03w 06-06-01 11:31:09 EST EAGLE5 35.0.0
TABLE  KEYTYPE                #ConnCfgd  #ConnAvail  RTKEY USED
DYN     PARTIAL: DPC-SI ONLY    3           2           yes
DYN     PARTIAL: DPC ONLY      2           2           no
DYN     DEFAULT                4           4           no
STATIC  PARTIAL: DPC-SI ONLY    3           2           no
STATIC  PARTIAL: DPC ONLY      2           2           no
STATIC  DEFAULT                2           0           no

SocketsIP Connections Associated with the RTKEY USED
Name                                     Avail?
Scpsandiego                             no
scpdenver                               yes
scpkansascity                           yes

MSURROUTE command complete
;

```

Example of **msuroute** output for an ANSI MSU with SI=8:

pass:loc=1105:cmd="msuroute -p ANSI -k 5-5-5:8"

Command Accepted - Processing

```

r lghncxa03w 06-06-01 11:31:09 EST  EAGLE5 35.0.0
pass:loc=1105:cmd="msuroute -p ANSI -k 5-5-5:8"
Command entered at terminal #1.
;

r lghncxa03w 06-06-01 11:31:09 EST  EAGLE5 35.0.0
PASS: Command sent to card
;

r lghncxa03w 06-06-01 11:31:09 EST  EAGLE5 35.0.0
MSURROUTE command in progress
;

r lghncxa03w 06-06-01 11:31:09 EST  EAGLE5 35.0.0

TABLE  KEYTYPE                #ConnCfgd  #ConnAvail  RTKEY USED
DYN     FULL                    7           0           no
DYN     PARTIAL: DPC ONLY       2           2           yes
DYN     PARTIAL: SI ONLY       2           0           no
DYN     DEFAULT                 4           4           no
STATIC  FULL                   11          0           no
STATIC  PARTIAL: DPC ONLY       2           2           no
STATIC  PARTIAL: SI ONLY       1           0           no
STATIC  DEFAULT                 2           0           no

IP Connections Associated with the RTKEY USED
Name                               Avail?
SI8sock1                           yes
SI8sock2                           yes

MSURROUTE command complete
;

```

Examples of **msuroute** output for an ITUN and an ITUN24 MSU with SI=5. The output format is the same for all four commands.

The ITUDUPPC feature is OFF (default):

pass:loc=1105:cmd="msuroute -p itun -k 345:5:678:100:200"

The ITUDUPPC feature is ON (the 2-letter group code must be specified with the DPC and OPC)

pass:loc=1105:cmd="msuroute -p itun -k 345-gr:5:678-gr:100:200"

An ITUN24 MSU with SI=5:

pass:loc=1105:cmd="msuroute -p itun24 -k 10-200-10:5:10-200-1:1:100"

An ITU-I Spare MSU with SI=5:

msuroute -p ituis -k 3-11-1:5:4-11-1:5:5

```

Command Accepted - Processing

rlghncxa03w 06-06-01 11:31:09 EST EAGLE5 35.0.0
pass:loc=1105:cmd="msuroute -p ITUN -k 345:678:100:200"
Command entered at terminal #1.
;

rlghncxa03w 06-06-01 11:31:09 EST EAGLE5 35.0.0
PASS: Command sent to card
;

rlghncxa03w 06-06-01 11:31:09 EST EAGLE5 35.0.0
MSURROUTE command in progress
;

rlghncxa03w 06-06-01 11:31:09 EST EAGLE5 35.0.0
TABLE  KEYTYPE                #ConnCfgd  #ConnAvail  RTKEY USED
DYN     FULL                   1          0           no
DYN     PARTIAL: IGNORE CIC    2          0           no
DYN     PARTIAL: IGNORE CIC+OPC 1          0           no
DYN     PARTIAL: DPC-SI ONLY   3          3           yes
DYN     PARTIAL: DPC ONLY      2          2           no
DYN     PARTIAL: SI ONLY       4          0           no
DYN     DEFAULT                4          4           no
STATIC  FULL                   12         4           no
STATIC  PARTIAL: IGNORE-CIC    3          0           no
STATIC  PARTIAL: IGNORE-CIC+OPC 2          0           no
STATIC  PARTIAL: DPC-SI ONLY   3          2           no
STATIC  PARTIAL: DPC ONLY      2          2           no
STATIC  PARTIAL: SI ONLY       1          0           no
STATIC  DEFAULT                2          0           no

IP Connections Associated with the RTKEY USED
Name                               Avail?
Vox1                               yes
Mgc2                               yes
Mgc24                             yes

MSURROUTE command complete
;

```

msutrace

MSU Trace

This command provides filter and trace capability for MSUs passing through the IP⁷ GPLs. This command provides a view of MSU data as it exists in the PSTN network and its corresponding format as it exists in the IP network.

Keyword: **msutrace**

Command Class: Application Maintenance

Options

Options and option parameters that are underlined indicate that a value must be specified for that option or parameter. For example, the **msutrace** command option **-a** has the parameter action. The action that the command is to take can be specified, as in the command **msutrace -a acttrace**. Do not enter the underlined option or parameter; enter a value for the information represented by the underlined option or parameter.

-a action

Action option.

Range: acttrace, clrtrace, dacttrace, chgfilter**acttrace**—Activate (turn on) MSU tracing**clrtrace**—Clear all data from trace buffers**dacttrace**—Deactivate (turn off) MSU tracing**chgfilter**—Change filter used to indicate which MSUs are placed in the trace buffers**-g get option**

The get option.

Range: config, trace**config**—Displays the current **msutrace** settings: trace ON/OFF status, filter settings, and trace buffers used/available**trace**—Displays contents of trace buffers containing captured MSU data**-h help**

This option is used to display help information about this command.

Range: fullIf **full** is specified, the detailed version of the help information is displayed.If **full** is not specified (just **-h**), the simple version of the help information is displayed.**-m mode**

This option is used to indicate which MSUs are captured.

Range: normerr, all**normerr**—trace only MSUs with normalization errors**all**—trace all MSUs regardless of MSU contents**-p point code type**

This option is used to specify which type of point code (ANSI, ITU international, ITU national, 24-bit ITU national, ITU-I spare, or ITU-N spare) is contained in the filter key, when the key contains a DPC or OPC.

Range: ansi, itui, itun, itun24, ituis, ituns**Default: ansi****-k filter key**The **-k**, **-c**, and **-p** options are used to specify the filter key used to determine which MSUs will have data placed in the trace buffers.**Range:****-k filter key [-p] [-c pcType]**The syntax for the **filter key** portion of the **-k filter key** option is specified as a single string parameter with up to five colon-separated fields. The **filter key** can contain one or more of the following fields:*n-c-m*—represents an ANSI DPC in the format *network-cluster-member**no-co-mo*—represents an ANSI OPC in the format *network-cluster-member**z-a-i*—represents an ITU-I DPC in the format *zone-area-id**zo-ao-io zone-area-id*—represents an ITU-I OPC in the format*msa-ssa-sp*—represents a 24-bit ITU-N DPC in the format *main signaling area-sub signaling area-signaling point**nnnnn*—represents an ITU-N DPC*nnnnn-gc*—represents an ITU-N DPC with Group Code when the Duplicate Point Code feature is ON*no*—represents an ITU-N OPC*no-gc*—represents an ITU-N OPC with Group Code when the Duplicate Point Code feature is ON*s*—represents an SI (Service Indicator)*cs*—represents a CIC Start value (start of the CIC range)*ce*—represents a CIC End value (end of the CIC range)

n—represents an SSN (Subsystem Number)

The following examples show valid formats:

- *n-c-m:s:n*—For DPC, SI, SSN type routing keys. The network, cluster and member (*n-c-m*) are in the range **0-255**. The service indicator (*s*) is **3** or **sccp**. The subsystem (*n*) is in the range **0-255**.
- *n-c-m:s*—For DPC, SI type routing keys. The network, cluster and member (*n-c-m*) are in the range **0-255**. The service indicator (*s*) is in the range **0-2**, **4**, or **6-15**. There is no subsystem number. As a default, counts for all routing keys within the option combination are displayed.
- *n-c-m:s:no-co-mo:cs:ce*—For DPC, SI, CIC type routing keys. The DPC network, cluster and member (*n-c-m*) are in the range **0-255**. The service indicator (*s*) is **5** or **isup**. There is no subsystem. The OPC network, cluster and member (*no-co-mo*) are in the range **0-255**. The starting circuit identification code (*cs*) and ending circuit identification code (*ce*) are in the range **0** to **16363**.
- *z-a-i*—For DPCN and DPCI routing keys, the zone, area and ID (*z-a-i*) are in the range of **000-007** (zone and ID) and **000-255** (area).
- *msa-ssa-sp*—For 24-bit DPCN routing keys, the main signaling area, sub signaling area and signaling point (*msa-ssa-sp*) are in the range of **000-255**.

-t

This option is used to denote the routing key type (IPGWx only).

-x rc

This option is used to generate a routing key report using routing context.

Example

```
pass:loc=1105:cmd="msutrace -h"
```

```
pass:loc=1105:cmd="msutrace -h full"
```

```
pass:loc=1105:cmd="msutrace -g config"
```

```
pass:loc=1315:cmd="msutrace -g trace"
```

```
pass:loc=1105:cmd="msutrace -a clrtrace"
```

```
pass:loc=1105:cmd="msutrace -a acttrace"
```

```
pass:loc=1105:cmd="msutrace -a chgfilter -p ansi -k 3-3-3:5:4-4-4:10:1000"
```

```
pass:loc=1105:cmd="msutrace -a chgfilter -p itui -t partial -k 1-3-3:5:2-4-4"
```

```
pass:loc=1105:cmd="msutrace -a chgfilter -p itun -t partial -k 1536:5"
```

```
pass:loc=1105:cmd="msutrace -a chgfilter -m normerr"
```

```
pass:loc=1105:cmd="msutrace -a chgfilter -m all"
```

Dependencies

If no options are specified, the simple version of the help information is displayed.

The point code type defaults to ANSI when the **-p** option is not specified.

The **-p** option is allowed only on key types that contain a DPC or OPC.

Notes

The **msutrace** command is executed through the **pass** command.

The **msutrace** command captures the data portion of the PSTN packet, starting at the SIO bytes.

The **msutrace** command captures the entire TALI, M3UA, or SUA packet. This includes the TALI, M3UA, or SUA header and additional data stored inside system buffer chain elements. The **msutrace** command currently does not support the trace and capture of TALI MTP Primitives or M3UA / SUA SSNM (Class 2) messages.

The **msutrace** command captures data in trace buffers. If the set of trace buffers becomes full with captured MSU data after MSU tracing is activated, no more data capturing will take place. The **-a clrtrace** option must be specified to reset (clear) the content of the trace buffers. After the trace buffers are empty again, **msutrace** will restart capturing qualified MSUs.

If MSU tracing is activated with the **-a acttrace** option before a properly formatted filter key is entered, **msutrace** will not capture any data due to lack of a proper filter. When the **-a chgfilter** option is specified to enter a properly formatted filter; **msutrace** will start capturing qualified MSUs.

Output

NOTE: The msutrace pass command exists on the IPLIM/IPLIMI cards as a debug-only pass command. All command syntax and output are identical to the SS7IPGW and IPGWI commands described in this section.

Both brief and full versions of IPGW reports can be requested. A full report is requested by including the **-f** in the command line.

Example of a brief help report:

pass:loc=1305:cmd="msutrace -h"

```

0          1          2          3          4          5          6          7
12345678901234567890123456789012345678901234567890123456789012345678
Usage: msutrace [-a action_cmd] [-g get_cmd]
               [ [-x rc] | [-k [rtkey] [-p pctype] [-t keytype]] ]
               [-m mode] [-h [full]]

Options:
  -a  action_cmd: an Action Command
  -g  get_cmd: a Get Command
  -x  routing key report using routing context
  -k  routing key report using MTP3 parameters
      rtkey :: ([dpc][:si][:opc | :ssn][:cics][:cice])
  -p  pctype :: (ANSI, ITUI, ITUN, ITUN24, ITUIS, ITUNS)
  -t  routing key type
      keytype :: (<full>, partial, default)
  -m  mode: mode for qualifying MSUs captured=[normerr | all]
  -h  displays this message (brief or full)

get_cmd:      [config | trace]
config        config
trace         trace

action_cmd:   [acttrace | chgfilter | clrtrace | dacttrace]
acttrace      acttrace
chgfilter     chgfilter [<fltrkey>] | [-m mode] (at least 1 required)
clrtrace      clrtrace
dacttrace     dacttrace

<fltrkey>:    [ [-x rc] | [-k [rtkey] [-p pctype] [-t keytype]] ]
              (see 'msutrace -h full' for complete description)

MSUTRACE command complete
;

```


Example of a full help report:

pass:loc=1305:cmd="msutrace -h full"

```

0          1          2          3          4          5          6          7
12345678901234567890123456789012345678901234567890123456789012345678
Usage: msutrace [-a action_cmd] [-g get_cmd]
               [-x rc] | [-k [rtkey] [-p pctype] [-t keytype]] ]
               [-m mode] [-h [full]]

```

Options:

```

-a  action_cmd: an Action Command
-g  get_cmd: a Get Command
-x  routing key report using routing context
-k  routing key report using MTP3 parameters
    rtkey :: ([dpc][:si][:opc | :ssn][:cics][:cice])
-p  pctype :: (ANSI, ITUI, ITUN, ITUN24, ITUIS, ITUNS)
-t  routing key type
    keytype :: (<full>, partial, default)
-m  mode: mode for qualifying MSUs captured=[normerr | all]
-h  displays this message (brief or full)

```

```

get_cmd:      [config | trace]
config        Display the current MSUTRACE settings:
               trace On/Off status, filter settings, and
               trace buffers used/available.
               ex: msutrace -g config

```

```

trace         Display content of trace buffers containing captured
               MSU data
               ex: msutrace -g trace

```

```

action_cmd:   [acttrace | chgfilter | clrtrace | dacttrace]
acttrace      Activate (turn-on) MSU-tracing.
               ex: msutrace -a acttrace

```

```

chgfilter     Change filter used to qualify which MSUs are placed in
               trace buffers:
               ex: To only trace MSUs with Normalization errors.
                   msutrace -a chgfilter -m normerr
               ex: To trace all MSUs regardless of error conditions:
                   msutrace -a chgfilter -m all
               ex: To trace MSUs based on MSU content:
                   msutrace -a chgfilter <fltrkey>

```

```

clrtrace      Clear all data from trace buffers.
               ex: msutrace -a clrtrace

```

```

dacttrace     Deactivate (turn-off) MSU-tracing.
               ex: msutrace -a dacttrace

```

-k option details:

Use the -p option along with -k to specify the SS7 network domain and point code format for the network. The SS7IPGW default pctype is ANSI. The IPGWI and IPLIMI default pctype is ITUI.

Network	PC Format	Notes
-----	-----	-----
ANSI	N-C-M	
ITUN	N	Non-Spare ITU National, no group code
ITUN	N-GC	Non-Spare ITU National with group code
ITUI	Z-A-I	Non-Spare ITU International
ITUN24	N-C-M	Non-Spare ITU National, 24-bits
ITUNS	N	Spare ITU National, no group code
ITUNS	N-GC	Spare ITU National with group code
ITUIS	Z-A-I	Spare ITU International

Use the -t option along with -k to specify certain MTP3 and user part MSU fields as wildcards for the routing key.

SS7 Traffic Partition	RTKEY Parameter Example
Any User Part to DPC 1-1-1	-k 1-1-1 -t partial
SCCP to DPC 1-1-1	-k 1-1-1:3 -t partial
ISUP to DPC 1-1-1	-k 1-1-1:5 -t partial
TUP to DPC 1-1-1	-k 1-1-1:4 -t partial
QBICC to DPC 1-1-1	-k 1-1-1:13 -t partial
SI [0-2,6-12,14,15] to DPC 1-1-1	-k 1-1-1:SI
SCCP SSN 5 to DPC 1-1-1	-k 1-1-1:3:5
ISUP to DPC 1-1-1 from OPC 2-2-2	-k 1-1-1:5:2-2-2 -t partial
TUP to DPC 1-1-1 from OPC 2-2-2	-k 1-1-1:4:2-2-2 -t partial
QBICC to DPC 1-1-1 from OPC 2-2-2	-k 1-1-1:13:2-2-2 -t partial
ISUP CIC 1 to 1-1-1 from 2-2-2	-k 1-1-1:5:2-2-2:1
TUP CIC 1 to 1-1-1 from 2-2-2	-k 1-1-1:4:2-2-2:1
QBICC CIC 1 to 1-1-1 from 2-2-2	-k 1-1-1:13:2-2-2:1
ISUP CIC 0-5 to 1-1-1 from 2-2-2	-k 1-1-1:5:2-2-2:0:5
TUP CIC 0-5 to 1-1-1 from 2-2-2	-k 1-1-1:4:2-2-2:0:5
QBICC CIC 0-5 to 1-1-1 from 2-2-2	-k 1-1-1:13:2-2-2:0:5
Default Routing Key	-k -t default

```
eagle10212 06-01-16 11:01:02 EST EAGLE 35.0.0
```

```
MSUTRACE command complete
```

Get the current settings of the **msutrace** command options: trace ON/OFF status, filter settings, and trace buffers that are used and available.

```
pass:loc=1105:cmd="msutrace -g config"
```

```
Command Accepted - Processing
```

```

eagle20003 99-11-27 10:16:57 EST EAGLE5 31.6.0
pass:loc=1105:cmd="msutrace -g config"
Command entered at terminal #1.
;
eagle20003 99-11-27 10:16:57 EST EAGLE5 31.6.0
PASS: Command sent to card
;
eagle20003 99-11-27 10:16:57 EST EAGLE5 31.6.0
MSUTRACE command in progress
;
eagle20003 99-11-27 10:16:57 EST EAGLE5 31.6.0
MSUTRACE configurations

Trace = On

Trace buffers: 2 of 3 contain captured MSU data

MSUTRACE: filter settings
DPCA      SI SSN OPCA      CICS      CICE      MODE
055-055-055 13 *** 016-006-006 1234567890 1234567890 normerr
;
eagle20003 99-11-27 10:16:57 EST EAGLE5 31.6.0
MSUTRACE command complete
;

```

Get the current settings of the **msutrace** command options: trace ON/OFF status, filter settings, and trace buffers that are used and available, when the filter key specifies an ITU-I spare point code.

pass:loc=1105:cmd="msutrace -g config"

Command Accepted - Processing

```

eagle20003 05-01-27 10:16:03 EST  EAGLE5 31.12.0
pass:loc=1105:cmd="msutrace -g config"
Command entered at terminal #1.
;
eagle20003 05-01-27 10:16:03 EST  EAGLE5 31.12.0
PASS: Command sent to card
;
eagle20003 05-01-27 10:16:03 EST  EAGLE5 31.12.0
MSUTRACE command in progress
;
eagle20003 05-01-27 10:16:03 EST  EAGLE5 31.12.0
MSUTRACE configurations

Trace = On

Trace buffers: 3 of 3 USED

MSUTRACE: filter settings
      DPCI      SI SSN      OPCI      CICS      CICE      MODE
s-2-011-1      2   ***      ****      ****      ****      all
;
eagle20003 05-01-27 10:16:03 EST  EAGLE5 31.12.0
MSUTRACE command complete
;

```

Retrieve contents of the trace buffers. In this TALI example, there are 2 stored trace buffers:

pass:loc=1315:cmd="msutrace -g trace"

Command Accepted - Processing

eagle10202 01-01-19 10:20:56 GMT EAGLE5 31.6.0
pass:loc=1315:cmd="msutrace -g trace"
Command entered at terminal #4.

;

eagle10202 01-01-19 10:20:56 GMT EAGLE5 31.6.0
PASS: Command sent to card

;

eagle10202 01-01-19 10:20:56 GMT EAGLE5 31.6.0
MSUTRACE command in progress

;

eagle10202 01-01-19 10:20:56 GMT EAGLE5 31.6.0

BUFFER: 0

Filter used:

DPCN	SI	SSN	OPCN	CICS	CICE	MODE
02137	**	***	****	****	****	any

Timestamp: 01-01-19 10:19:14.520
Direction: Rx
Error Code: 19

PSTN DATA

IP DATA

54 41 4c 49 78 73 72 76 ac 00 78 6e 72 6d 00 00	TALIXsrv..xnm..
02 61 61 04 00 01 00 00 00 00 00 00 00 00 02	.aa.....
85 00 85 59 48 16 a4 00 00 41 00 00 00 00 02	...YH...A.....
0e 0c 00 00 00 00 00 00 00 00 00 00 00 0a 0a	
00 00 00 00 00 00 00 00 00 00 08 01 00 1a 04 00	
00 00 00 0b 0a 00 00 00 00 00 00 00 00 00 13	
02 00 01 28 0a 00 00 00 00 00 00 00 00 00 2a	...(.....*
01 00 20 03 7e 01 00 03 01 00 1d 02 00 80 c0 0b	~.....
00 00 00 00 00 00 00 00 00 00 00 c1 09 00 00 00	
00 00 00 00 00 00 39 02 00 00 3f 0a 00 00 00 00	9...?.....
00 00 00 00 00 00 00 03 0c 00 04 00 01 00 fc 00	
04 00 0e 02 00 00	

BUFFER: 1

Filter used:

DPCN	SI	SSN	OPCN	CICS	CICE	MODE
02137	05	***	04185	0	100	any

Timestamp: 01-01-19 10:19:32.470
Direction: Rx
Error Code: 0

PSTN DATA

```

85 59 48 16 64 00 00 01 00 00 00 00 02 0e 0c .YH.d.....
00 00 00 00 00 00 00 00 00 00 00 00 0a 0a 00 00 .....
00 00 00 00 00 00 00 00 08 01 00 1a 04 00 00 00 .....
00 0b 0a 00 00 00 00 00 00 00 00 00 00 13 02 00 .....
01 28 0a 00 00 00 00 00 00 00 00 00 2a 01 00 .(.....*..
20 03 7e 01 00 03 01 00 1d 02 00 80 c0 0b 00 00 ..~.....
00 00 00 00 00 00 00 00 00 c1 09 00 00 00 00 00 .....
00 00 00 00 39 02 00 00 3f 0a 00 00 00 00 00 00 ....9...?.....
00 00 00 00 fc 02 00 00 00 .....

```

IP DATA

```

54 41 4c 49 78 73 72 76 ac 00 78 6e 72 6d 00 00 TALIXsrv..xnm..
02 61 61 04 00 01 00 00 00 00 00 00 00 00 00 02 .aa.....
85 00 85 59 48 16 64 00 00 01 00 00 00 00 00 02 ...YH.d.....
0e 0c 00 00 00 00 00 00 00 00 00 00 00 0a 0a .....
00 00 00 00 00 00 00 00 00 00 08 01 00 1a 04 00 .....
00 00 00 0b 0a 00 00 00 00 00 00 00 00 00 13 .....
02 00 01 28 0a 00 00 00 00 00 00 00 00 00 2a ...(......*
01 00 20 03 7e 01 00 03 01 00 1d 02 00 80 c0 0b ....~.....
00 00 00 00 00 00 00 00 00 00 00 c1 09 00 00 00 .....
00 00 00 00 00 00 39 02 00 00 3f 0a 00 00 00 00 ....9...?.....
00 00 00 00 00 00 03 0c 00 04 00 01 00 fc 00 .....
04 00 0e 02 00 00 .....

```

BUFFER: 2-----
Filter used:

DPCN	SI	SSN	OPCN	CICS	CICE	MODE
02137	05	***	04185	0	100	normerr

Timestamp: 01-01-19 10:20:53.305

Direction: Rx

Error Code: 19

PSTN DATA

IP DATA

```

54 41 4c 49 78 73 72 76 ac 00 78 6e 72 6d 00 00 TALIXsrv..xnm..
02 61 61 04 00 01 00 00 00 00 00 00 00 00 00 02 .aa.....
85 00 85 59 48 16 a4 00 00 41 00 00 00 00 00 02 ...YH...A.....
0e 0c 00 00 00 00 00 00 00 00 00 00 00 0a 0a .....
00 00 00 00 00 00 00 00 00 00 08 01 00 1a 04 00 .....
00 00 00 0b 0a 00 00 00 00 00 00 00 00 00 13 .....
02 00 01 28 0a 00 00 00 00 00 00 00 00 00 2a ...(......*
01 00 20 03 7e 01 00 03 01 00 1d 02 00 80 c0 0b ....~.....
00 00 00 00 00 00 00 00 00 00 00 c1 09 00 00 00 .....
00 00 00 00 00 00 39 02 00 00 3f 0a 00 00 00 00 ....9...?.....
00 00 00 00 00 00 03 0c 00 04 00 01 00 fc 00 .....
04 00 0e 02 00 00 .....

```

MSUTRACE command complete

;

Retrieve contents of the trace buffers. The following example contains 1 stored trace buffer for a transmitted M3UA PDU.

pass:loc=1303:cmd="msutrace -g trace"

Command Accepted - Processing

```

eagle10202 01-01-19 10:20:56 GMT EAGLE5 31.6.0
pass:loc=1303:cmd="msutrace -g trace"
Command entered at terminal #4.
;

eagle10202 01-01-19 10:20:56 GMT EAGLE5 31.6.0
PASS: Command sent to card
;

eagle10202 01-01-19 10:20:56 GMT EAGLE5 31.6.0

MSUTRACE command in progress
;

eagle10202 01-01-19 10:20:56 GMT EAGLE5 31.6.0

-----
BUFFER:  0
-----
Filter used:

DPCA          SI SSN OPCA          CICS          CICE          MODE
001-001-001 5   *** 001-001-002 0             100          all

Timestamp: 02-06-07 08:40:29.435
Direction: Tx
Error Code:  0

PSTN DATA
-----
85 01 01 01 02 01 01 b2 00 00 01 00 00 00 00 03 .....
05 00 02 80 80 0d 00 00 21 43 65 87 09 21 43 65 .....!Ce..!Ce
87 09 01 .....

IP DATA
-----
01 00 01 01 00 00 00 3c 02 00 00 08 00 00 00 01 .....<.....
02 10 00 2b 00 01 01 02 00 01 01 01 05 02 00 b2 ...+.....
00 00 01 00 00 00 00 03 05 00 02 80 80 0d 00 00 .....
21 43 65 87 09 21 43 65 87 09 01 00 !Ce..!Ce....

MSUTRACE command complete
;

```

Retrieve contents of the trace buffers with ITU-I spare point codes. The following example contains 3 stored trace buffers.

pass:loc=1317:cmd="msutrace -g trace"

Command Accepted - Processing

```

eagle20003 05-01-27 10:16:03 EST EAGLE5 31.12.0
pass:loc=1317:cmd="msutrace -g trace"
Command entered at terminal #4.
;

eagle20003 05-01-27 10:16:03 EST EAGLE5 31.12.0
PASS: Command sent to card
;

eagle20003 05-01-27 10:16:03 EST EAGLE5 31.12.0

MSUTRACE command in progress
;

eagle20003 05-01-27 10:16:03 EST EAGLE5 31.12.0

-----
BUFFER:  0
-----
Filter used:

      DPCI      SI SSN      OPCI      CICS      CICE      MODE
s-2-011-1      2   ***      ****      ****      ****      all

Timestamp: 05-01-26 10:33:14.330
Direction: Tx
Error Code: 0

PSTN DATA
-----
02 59 50 16 a2 80 03 83 ce 46 0a 00 00 00      .YP.....F....

IP DATA
-----
54 41 4c 49 6d 74 70 33 0e 00 02 59 50 16 a2 80      TALImtp3...YP...
03 83 ce 46 0a 00 00 00      ...F....

-----
BUFFER:  1
-----
Filter used:

      DPCI      SI SSN      OPCI      CICS      CICE      MODE
s-2-011-1      2   ***      ****      ****      ****      all

Timestamp: 05-01-26 10:33:14.335
Direction: Tx
Error Code: 0

PSTN DATA
-----
02 59 50 16 a2 80 84 04 c8 46 0a 00 00 00      .YP.....F....

IP DATA
-----
54 41 4c 49 6d 74 70 33 0e 00 02 59 50 16 a2 80      TALImtp3...YP...
84 04 c8 46 0a 00 00 00      ...F....

-----
BUFFER:  2

```

Filter used:

DPCI	SI	SSN	OPCI	CICS	CICE	MODE
s-2-011-1	2	***	****	****	****	all

Timestamp: 05-01-26 10:33:14.340

Direction: Tx

Error Code: 0

PSTN DATA

02 59 50 16 f2 80 01 81 c1 46 0f 00 00 00 .YP.....F....

IP DATA

54 41 4c 49 6d 74 70 33 0e 00 02 59 50 16 f2 80 TALImp3...YP...
01 81 c1 46 0f 00 00 00 ...F....

MSUTRACE command complete

;

Clear the contents of the trace buffers:

pass:loc=1105:cmd="msutrace -a clrtrace"

Command Accepted - Processing

eagle20003 99-11-27 10:16:57 EST EAGLE5 31.6.0
pass:loc=1105:cmd="msutrace -a clrtrace"

Command entered at terminal #1.

;

eagle20003 99-11-27 10:16:57 EST EAGLE5 31.6.0
PASS: Command sent to card

;

eagle20003 99-11-27 10:16:57 EST EAGLE5 31.6.0
MSUTRACE command in progress

;

eagle20003 99-11-27 10:16:57 EST EAGLE5 31.6.0
MSUTRACE command completed

;

Activate MSU tracing:

pass:loc=1105:cmd="msutrace -a acttrace"

Command Accepted - Processing

eagle20003 99-11-27 10:16:57 EST EAGLE5 31.6.0
pass:loc=1105:cmd="msutrace -a acttrace"

Command entered at terminal #1.

;

eagle20003 99-11-27 10:16:57 EST EAGLE5 31.6.0
PASS: Command sent to card

;

eagle20003 99-11-27 10:16:57 EST EAGLE5 31.6.0
MSUTRACE command in progress

;

eagle20003 99-11-27 10:16:57 EST EAGLE5 31.6.0
MSUTRACE command completed

;

Deactivate MSU tracing:

pass:loc=1105:cmd="msutrace -a dacttrace"

Command Accepted - Processing

```
eagle20003 99-11-27 10:16:57 EST EAGLE5 31.6.0
pass:loc=1105:cmd="msutrace -a dacttrace"
Command entered at terminal #1.
;
eagle20003 99-11-27 10:16:57 EST EAGLE5 31.6.0
PASS: Command sent to card
;
eagle20003 99-11-27 10:16:57 EST EAGLE5 31.6.0
MSUTRACE command in progress
4.0.0
eagle20003 99-11-27 10:16:57 EST EAGLE5 31.6.0
MSUTRACE command completed
;
```

Examples for Entering a Filter Key

The output shown at the end of the following command examples is the same for each example, except for the echo of the entered command.

Command with the **-a chgfilter** option to insert a fully specified ANSI PC CIC filter key.

This filter key qualifies for capture MSUs with the following properties:

- DPC = 3-3-3 (ANSI)
- SI = 5
- OPC = 4-4-4 (ANSI)
- CIC = [10..1000]

pass:loc=1105:cmd="msutrace -a chgfilter -p ansi -k 3-3-3:5:4-4-4:10:1000"

Command with the **-a chgfilter** option to insert a fully specified ANSI SCCP filter.

This filter key qualifies for capture MSUs with the following properties:

- DPC = 3-3-3 (ANSI)
- SI = 3
- SSN = 230

pass:loc=1105:cmd="msutrace -a chgfilter -k 3-3-3:3:230"

Command with the **-a chgfilter** option to insert a fully specified ANSI DPC SI filter key.

This filter key qualifies for capture MSUs with the following properties:

- DPC = 3-3-3 (ANSI)
- SI = 6

pass:loc=1105:cmd="msutrace -a chgfilter -k 3-3-3:6"

Command with the **-a chgfilter** option to insert a fully specified ITUN24 PC CIC filter key.

This filter key qualifies for capture MSUs with the following properties:

- DPC = 13-103-3 (ITUN24)

- SI = 5
- OPC = 14-104-4 (ITUN24)
- CIC = [10..1000]

pass:loc=1105:cmd="msutrace -a chgfilter -p itun24 -k 13-103-3:5:14-104-4:10:1000"

Command with the **-a chgfilter** option to insert a partial ITUI DPC SI OPC filter key.

This filter key qualifies for capture MSUs with the following properties:

- DPC = 1-3-3 (ITUI)
- SI = 5
- OPC = 2-4-4 (ITUI)

pass:loc=1105:cmd="msutrace -a chgfilter -p itui -k 1-3-3:5:2-4-4"

Command with the **-a chgfilter** option to insert a partial DPC SI ITUN PC filter key, with the Duplicate Point Code feature turned off:

This filter key qualifies for capture MSUs with the following properties:

- DPC = 1536 (ITUN)
- SI = 5

pass:loc=1105:cmd="msutrace -a chgfilter -p itun -k 1536:5"

Command with the **-a chgfilter** option to insert a partial DPC SI ITUN PC filter key, with the Duplicate Point Code feature turned on:

This filter key qualifies for capture MSUs with the following properties:

- DPC = 1536-bb (ITUN)
- SI = 5

pass:loc=1105:cmd="msutrace -a chgfilter -p itun -k 1536-bb:5"

Command with the **-a chgfilter** option to insert a partial ANSI DPC filter key.

This filter key qualifies for capture MSUs with the following properties:

- DPC = 3-3-3 (ANSI)

pass:loc=1105:cmd="msutrace -a chgfilter -k 3-3-3"

Command with the **-a chgfilter** option to insert a partial SI filter key. Because no DPC or OPC field is specified, point code type does not have to be indicated.

This filter key qualifies for capture MSUs with the following properties:

- SI = 5

This filter key qualifies for capture MSUs with the following properties:

- DPC = 13-113-3 (ITUN24)

pass:loc=1105:cmd="msutrace -a chgfilter -p itun24 -k 13-113-3"

Command Accepted - Processing

```
eagle20003 06-06-01 10:16:57 EST EAGLE5 35.0.0
pass:loc=1105:cmd="msutrace -a chgfilter -p ansi -k 3-3-3:5:4-4-4:10:1000"
Command entered at terminal #1.
;
eagle20003 99-11-27 10:16:57 EST EAGLE5 31.6.0
PASS: Command sent to card
;
eagle20003 99-11-27 10:16:57 EST EAGLE5 31.6.0
MSUTRACE command in progress
;
eagle20003 99-11-27 10:16:57 EST EAGLE5 31.6.0
MSUTRACE command completed
;
```

The following commands include the **-m mode** option to change the trace capture mode.

Mode to have a 'capture-on-normalization error' property such that only MSUs with normalization processing errors are traced:

pass:loc=1105:cmd="msutrace -a chgfilter -m normerr"

Set a default filter key and the filter's mode at the same time:

pass:loc=1105:cmd="msutrace -a chgfilter -k -t default -m all"

Command Accepted - Processing

```
eagle20003 99-11-27 10:16:57 EST EAGLE5 31.6.0
pass:loc=1105:cmd="msutrace -a chgfilter -k -t default -m all"
Command entered at terminal #1.
;
eagle20003 99-11-27 10:16:57 EST EAGLE5 31.6.0
PASS: Command sent to card
;
eagle20003 99-11-27 10:16:57 EST EAGLE5 31.6.0
MSUTRACE command in progress
;
eagle20003 99-11-27 10:16:57 EST EAGLE5 31.6.0
MSUTRACE command completed
;
```

The following commands insert a partial DPC-SI filter key with ITU-I spare point code and show the **msutrace getfilter** command output with the filter key after the **chgfilter** command is processed to completion.

This filter key will qualify MSUs with at least the following properties:

- DPCI = (ITU-I Spare) 2-11-1
- SI=5

pass:loc=1317:cmd="msutrace -a chgfilter -p ituis -k 2-11-1:5"

Command Accepted - Processing

```
eagle20003 06-06-01 10:16:03 EST EAGLE5 35.5.0
pass:loc=1317:cmd="msutrace -a chgfilter -p ituis -k 2-11-1:5"
Command entered at terminal #1.
;
eagle20003 06-06-01 10:16:03 EST EAGLE5 35.5.0
PASS: Command sent to card
;
eagle20003 06-06-01 10:16:03 EST EAGLE5 35.5.0
MSUTRACE command in progress
;
eagle20003 06-06-01 10:16:03 EST EAGLE5 35.5.0
MSUTRACE command completed
;
```

pass:loc=1317:cmd="msutrace -g config"

Command Accepted - Processing

```
eagle20003 05-01-27 10:16:03 EST EAGLE5 31.12.0
pass:loc=1317:cmd="msutrace -g config"
;
eagle20003 05-01-27 10:16:03 EST EAGLE5 31.12.0
PASS: Command sent to card
;
eagle20003 05-01-27 10:16:03 EST EAGLE5 31.12.0
MSUTRACE command in progress
;
eagle20003 05-01-27 10:16:03 EST EAGLE5 31.12.0
MSUTRACE configurations

Trace = On

Trace buffers: 3 of 3 USED

MSUTRACE: filter settings
      DPCI      SI SSN      OPCI      CICS      CICE      MODE
s-2-011-1      5   ***      ****      ****      ****      all
;
eagle20003 05-01-27 10:16:03 EST EAGLE5 31.12.0
MSUTRACE command complete
;
```

The following commands insert a full DPC-SI-OPC filter key with an ITU-N spare point code when the Duplicate Point Code feature is on, and show the **msutrace getfilter** command output with the filter key after the **chgfilter** command is processed to completion.

This filter key will qualify MSUs with at least the following properties:

- DPC = (ITU-N Spare) 6234-aa
- SI=5
- OPC=(ITU-N Spare) 6233-aa
- CICS=1
- CICE=200

pass:loc=1315:cmd="msutrace -a chgfilter -p ITUNS -k 6234-aa:5:6233-aa:1:200"

Command Accepted - Processing

```
eagle20003 06-06-01 10:16:03 EST EAGLE5 35.0.0
pass:loc=1315:cmd="msutrace -a chgfilter -p ITUNS -k
6234-aa:5:6233-aa:1:200"
Command entered at terminal #1.
;
eagle20003 06-06-01 10:16:03 EST EAGLE5 35.0.0
PASS: Command sent to card
;
eagle20003 06-06-01 10:16:03 EST EAGLE5 35.0.0
MSUTRACE command in progress
;
eagle20003 06-06-01 10:16:03 EST EAGLE5 35.0.0
MSUTRACE command completed
;
```

pass:loc=1317:cmd="msutrace -g config"

Command Accepted - Processing

```
eagle20003 05-01-27 10:16:03 EST EAGLE5 31.12.0
pass:loc=1317:cmd="msutrace -g config"
Command entered at terminal #1.
;
eagle20003 05-01-27 10:16:03 EST EAGLE5 31.12.0
PASS: Command sent to card
;
eagle20003 05-01-27 10:16:03 EST EAGLE5 31.12.0
MSUTRACE command in progress
;
eagle20003 05-01-27 10:16:03 EST EAGLE5 31.12.0
MSUTRACE configurations

Trace = On

Trace buffers: 0 of 3 USED

MSUTRACE: filter settings
      DPCN      SI SSN      OPCI      CICS      CICE      MODE
s-6234-aa      5   ***      s-6233-aa      ****      ****      all
;
eagle20003 05-01-27 10:16:03 EST EAGLE5 31.12.0
MSUTRACE command complete
;
```

netstat

Network Statistics

This command is used to display network statistics from the TCP/IP stack. This command allows troubleshooting of network interface and routing configuration problems within the private EPAP-DSM IP network.

Keyword: netstat

Command Class: IP Stack Maintenance

Options

Options and option parameters that are underlined indicate that a value must be specified for that option or parameter. For example, the **netstat** command option **-m** has the parameter buffer pool. The pool for which information will be displayed can be specified, as in the command **netstat -m sys**. Do not enter the underlined option or parameter; enter a value for the information represented by the underlined option or parameter.

-a

This option displays socket information for all protocols.

-h

This options provides help information for the command.

-i

This option displays interface information for all interfaces.

-m buffer pool

This option displays buffer pool information for the specified pool.

Range: data, sys, dd

data—SENS protocol stack data buffer pool

sys—system buffer pool

dd—Ethernet device driver buffer pool

Default: All three buffer pools are displayed.

-p protocol

This option displays information for the specified protocol.

Range: tcp, udp, ip, icmp, sctp

tcp—transmission control protocol

udp—user datagram protocol

ip—internet protocol

icmp—internet control message protocol

sctp—stream control transmission protocol

Default: None

-r

This option displays the Route table.

Example

```
netstat -i
```

```
netstat -a
```

```
netstat -p tcp
```

```
netstat -m
```

```
netstat -m sys
```

```
netstat -r
```

Dependencies

Only one of the options can be specified at a time.

Notes

The **netstat** command is executed through the **pass** command.

Output**pass: loc=1105: cmd="netstat" or****pass: loc=1105: cmd="netstat -h"**

Command Accepted - Processing

```

rlghncxa03w 03-07-27 07:58:52 EST  EAGLE5 30.0.0
pass: loc=1105: cmd="netstat"
Command entered at terminal #1.
;
rlghncxa03w 03-07-27 07:58:52 EST  EAGLE5 30.0.0
PASS: Command sent to card
;
rlghncxa03w 03-07-27 07:58:52 EST  EAGLE5 30.0.0
Usage: netstat [-a] [-i] [-h] [-m data|sys|dd] [-p icmp|ip|tcp|udp|sctp] [-r]

Options:
-a      display socket information for all protocols
-h      Displays this message
-i      display interface information for all interfaces
-m      display buffer pool information for 1 of the system pools
-p      display socket information for 1 of the protocols
-r      display the route table information
;
rlghncxa03w 03-07-27 07:58:54 EST  EAGLE5 30.0.0

NETSTAT command complete
;

```

pass:loc=1105:cmd="netstat -a"

Command Accepted - Processing

```

rlghncxa03w 04-07-27 07:59:12 EST  EAGLE5 31.6.0
pass:loc=1105:cmd="netstat -a"
Command entered at terminal #1.
;
rlghncxa03w 04-07-27 07:59:12 EST  EAGLE5 31.6.0
PASS: Command sent to card
;
rlghncxa03w 04-07-27 07:59:12 EST  EAGLE5 31.6.0
Active Internet connections (including servers)
                                Local Address
PCB      Proto Recv-Q Send-Q Foreign Address      (state)
-----
11df510  TCP          0      0          0.0.0.0.111  LISTEN
                                0.0.0.0.0
11df384  UDP          0      0          0.0.0.0.1008
                                0.0.0.0.0
11df48c  UDP          0      0          0.0.0.0.111
                                0.0.0.0.0
;
rlghncxa03w 04-07-27 07:59:14 EST  EAGLE5 31.6.0

NETSTAT command complete
;

```


pass:loc=1105:cmd="netstat -i"

```

rlghncxa03w 04-07-27 07:59:20 EST EAGLE5 31.6.0
pass:loc=1105:cmd="netstat -i"
Command entered at terminal #1.
;
rlghncxa03w 04-07-27 07:59:20 EST EAGLE5 31.6.0
PASS: Command sent to card
;
rlghncxa03w 04-07-27 07:59:20 EST EAGLE5 31.6.0
lo (unit number 0):
  Flags: (0x8069) UP LOOPBACK MULTICAST ARP RUNNING 10MB HDX DIX
  Type: SOFTWARE_LOOPBACK
  Internet address: 127.0.0.1
  Netmask 0xff000000 Subnetmask 0xff000000
  Metric is 0
  Maximum Transfer Unit size is 32768
  6 packets received; 6 packets sent
  0 multicast packets received
  0 multicast packets sent
  0 input errors; 0 output errors
  0 collisions; 0 dropped
seeq (unit number 0):
  Flags: (0x63) UP BROADCAST ARP RUNNING 10MB HDX DIX
  Type: ETHERNET_CSMACD
  Internet address: 192.168.100.112
  Broadcast address: 192.168.100.255
  Netmask 0xffffffff Subnetmask 0xffffffff
  Ethernet address is 00:00:17:04:00:61
  Metric is 0
  Maximum Transfer Unit size is 1500
  5 packets received; 1 packets sent
  5 multicast packets received
  0 multicast packets sent
  0 input errors; 0 output errors
  0 collisions; 0 dropped
seeq (unit number 1):
  Flags: (0x63) UP BROADCAST ARP RUNNING 10MB HDX DIX
  Type: ETHERNET_CSMACD
  Internet address: 192.168.55.112
  Broadcast address: 192.168.55.255
  Netmask 0xffffffff Subnetmask 0xffffffff
  Ethernet address is 00:00:17:04:00:62
  Metric is 0
  Maximum Transfer Unit size is 1500
  28 packets received; 16 packets sent
  13 multicast packets received
  0 multicast packets sent
  0 input errors; 0 output errors
  0 collisions; 0 dropped
;
rlghncxa03w 04-07-27 07:59:25 EST EAGLE5 31.6.0

NETSTAT command complete
;

```

pass:loc=1105:cmd="netstat -m data"

Command Accepted - Processing

```

rlghncxa03w 04-07-27 07:59:56 EST  EAGLE5 31.6.0
pass:loc=1105:cmd="netstat -m data"
Command entered at terminal #1.
;
rlghncxa03w 04-07-27 07:59:56 EST  EAGLE5 31.6.0
PASS: Command sent to card
;
rlghncxa03w 04-07-27 07:59:56 EST  EAGLE5 31.6.0
type          number
-----
FREE          :    9553
DATA          :      0
HEADER        :      0
SOCKET        :      0
PCB           :      0
RTABLE        :      0
HTABLE        :      0
ATABLE        :      0
SONAME        :      0
ZOMBIE        :      0
SOOPTS        :      0
FTABLE        :      0
RIGHTS        :      0
IFADDR        :      0
CONTROL       :      0
OOBDATA       :      0
IPMOPTS       :      0
IPMADDR       :      0
IFMADDR       :      0
MRTABLE       :      0
TOTAL         :    9553
number of mbufs: 9553
number of times failed to find space: 0
number of times waited for space: 0
number of times drained protocols for space: 0
-----
CLUSTER POOL TABLE
-----
size      clusters  free      usage
-----
64         1000      1000       41
128        1250      1250      848
256        1250      1250       0
512         200       200       0
1024        100       100       0
2048         20        20       0
-----
;
rlghncxa03w 04-07-27 08:00:01 EST  EAGLE5 31.6.0

NETSTAT command complete
;

```

pass:loc=1105:cmd="netstat -m sys"

Command Accepted - Processing

```

rlghncxa03w 04-07-27 08:00:14 EST  EAGLE5 31.6.0
pass:loc=1105:cmd="netstat -m sys"
Command entered at terminal #1.
;
rlghncxa03w 04-07-27 08:00:14 EST  EAGLE5 31.6.0
PASS: Command sent to card
;
rlghncxa03w 04-07-27 08:00:14 EST  EAGLE5 31.6.0
type          number
-----
FREE   :      3069
DATA   :         0
HEADER :         0
SOCKET :         3
PCB    :         4
RTABLE :        17
HTABLE :         0
ATABLE :         0
SONAME :         0
ZOMBIE :         0
SOOPTS :         0
FTABLE :         0
RIGHTS :         0
IFADDR :         6
CONTROL :        0
OOBDATA :        0
IPMOPTS :        0
IPMADDR :         1
IFMADDR :         0
MRTABLE :         0
TOTAL   :      3100
number of mbufs: 3100
number of times failed to find space: 0
number of times waited for space: 0
number of times drained protocols for space: 0
-----
CLUSTER POOL TABLE
-----
size      clusters  free      usage
-----
64         650       640        12
128        200       188        33
256        500       494         6
512        200       197        24
-----
;
rlghncxa03w 04-07-27 08:00:19 EST  EAGLE5 31.6.0
NETSTAT command complete
;

```

pass:loc=1105:cmd="netstat -m dd"

Command Accepted - Processing

```
;
  rlghncxa03w 04-07-27 08:00:24 EST  EAGLE5 31.6.0
  pass:loc=1105:cmd="netstat -m dd"
  Command entered at terminal #1.
;
  rlghncxa03w 04-07-27 08:00:24 EST  EAGLE5 31.6.0
  PASS: Command sent to card
;
  rlghncxa03w 04-07-27 08:00:24 EST  EAGLE5 31.6.0
```

END-0 Buffer Pool

CLUSTER POOL TABLE

size	clusters	free	usage
1528	80	77	10

END-1 Buffer Pool

CLUSTER POOL TABLE

size	clusters	free	usage
1528	80	72	58

```
;
  rlghncxa03w 04-07-27 08:00:27 EST  EAGLE5 31.6.0

  NETSTAT command complete
;
```

pass:loc=1105:cmd="netstat -p icmp"

```
Command Accepted - Processing
;
  rlghncxa03w 04-07-27 08:00:29 EST  EAGLE5 31.6.0
0966.1083      SYSTEM      INFO    REPT COND: system alive
          Report Date:05-07-27  Time:08:00:29
;
  rlghncxa03w 04-07-27 08:00:37 EST  EAGLE5 31.6.0
PASS: Command sent to card
;
  rlghncxa03w 04-07-27 08:00:38 EST  EAGLE5 31.6.0
ICMP:
  1 call to icmp_error
  0 error not generated because old message was icmp
  Output histogram:
    destination unreachable: 1
  0 message with bad code fields
  0 message < minimum length
  0 bad checksum
  0 message with bad length
  Input histogram:
    echo reply: 6
    destination unreachable: 1
  0 message response generated
;
  rlghncxa03w 05-07-27 08:00:39 EST  EAGLE5 31.6.0

NETSTAT command complete
;
```

pass:loc=1105:cmd="netstat -p ip"

Command Accepted - Processing

```

rlghncxa03w 04-07-27 08:00:44 EST  EAGLE5 31.6.0
pass:loc=1105:cmd="netstat -p ip"
Command entered at terminal #1.
;
rlghncxa03w 04-07-27 08:00:44 EST  EAGLE5 31.6.0
PASS: Command sent to card
;
rlghncxa03w 04-07-27 08:00:44 EST  EAGLE5 31.6.0
IP:
    48 total
    0 badsum
    0 tooshort
    0 toosmall
    0 badhlen
    0 badlen
    0 infragments
    0 fragdropped
    0 fragtimeout
    0 forward
    14 cantforward
    0 redirectsent
    1 unknownprotocol
    0 nobuffers
    0 reassembled
    0 outfragments
    0 noroute
;
rlghncxa03w 04-07-27 08:00:46 EST  EAGLE5 31.6.0

NETSTAT command complete
;
```

pass:loc=1105:cmd="netstat -p tcp"

Command Accepted - Processing

```

rlghncxa03w 04-07-27 08:00:54 EST  EAGLE5 31.6.0
pass:loc=1105:cmd="netstat -p tcp"
Command entered at terminal #1.
;
rlghncxa03w 04-07-27 08:00:54 EST  EAGLE5 31.6.0
PASS: Command sent to card
;
rlghncxa03w 04-07-27 08:00:54 EST  EAGLE5 31.6.0
TCP:
  0 packet sent
    0 data packet (0 byte)
    0 data packet (0 byte) retransmitted
    0 ack-only packet (0 delayed)
    0 URG only packet
    0 window probe packet
    0 window update packet
    0 control packet
  0 packet received
    0 ack (for 0 byte)
    0 duplicate ack
    0 ack for unsent data
    0 packet (0 byte) received in-sequence
    0 completely duplicate packet (0 byte)
    0 packet with some dup. data (0 byte duped)
    0 out-of-order packet (0 byte)
    0 packet (0 byte) of data after window
    0 window probe
    0 window update packet
    0 packet received after close
    0 discarded for bad checksum
    0 discarded for bad header offset field
    0 discarded because packet too short
  0 connection request
  0 connection accept
  0 connection established (including accepts)
  0 connection closed (including 0 drop)
  0 embryonic connection dropped
  0 segment updated rtt (of 0 attempt)
  0 retransmit timeout
    0 connection dropped by rexmit timeout
  0 persist timeout
  0 keepalive timeout
    0 keepalive probe sent
    0 connection dropped by keepalive
  0 pcb cache lookup failed
;
rlghncxa03w 05-07-27 08:00:58 EST  EAGLE5 31.6.0

NETSTAT command complete
;

```

pass:loc=1105:cmd="netstat -p udp"

```
Command Accepted - Processing
  rlghncxa03w 05-07-27 08:01:05 EST  EAGLE5 31.6.0
  pass:loc=1105:cmd="netstat -p udp"
  Command entered at terminal #1.
;
  rlghncxa03w 05-07-27 08:01:05 EST  EAGLE5 31.6.0
  PASS: Command sent to card
;
  rlghncxa03w 05-07-27 08:01:05 EST  EAGLE5 31.6.0
  UDP:
    42 total packets
    29 input packets
    13 output packets
    0 incomplete header
    0 bad data length field
    0 bad checksum
    16 broadcasts received with no ports
    0 full socket
    13 pcb cache lookups failed
    1 pcb hash lookup failed
;
  rlghncxa03w 05-07-27 08:01:07 EST  EAGLE5 31.6.0
  NETSTAT command complete
;
```


pass:loc=1305:cmd="netstat -p sctp"

Command Accepted - Processing

```
eagle10110 03-08-30 14:18:27 EDT EAGLE5 30.0.0
pass:loc=1305:cmd="netstat -p sctp"
Command entered at terminal #4.
```

;

```
eagle10110 03-08-30 14:18:27 EDT EAGLE5 30.0.0
PASS: Command sent to card
```

;

```
eagle10110 03-08-30 14:18:27 EDT EAGLE5 30.0.0
```

SCTP:

```
ip packets sent..... 1474882
  ip packets sent with data chunk..... 306354
  control chunks (excluding retransmissions)..... 1172759
  ordered data chunks (excluding retransmissions).. 1534350
  unordered data chunks (excluding retransmissions) 0
  user messages fragmented due to MTU..... 0
  retransmit data chunks sent..... 4
  sacks sent..... 496302
  send failed..... 0
ip packets received..... 1816035
  ip packets received with data chunk..... 989957
  control chunks (excluding duplicates)..... 833141
  ordered data chunks (excluding duplicates)..... 989968
  unordered data chunks (excluding duplicates).... 0
  user messages reassembled..... 0
  data chunks read..... 988601
  duplicate tsns received..... 0
  sacks received..... 153763
  gap ack blocks received..... 0
  out of the blue..... 4
  with invalid checksum..... 0
connections established..... 2954
  by upper layer..... 0
  by remote endpoint..... 2958
connections terminated..... 4
  ungracefully..... 2952
  gracefully..... 0
associations dropped due to retransmits..... 0
consecutive retransmit timeouts..... 4
retransmit timer count..... 6
fast retransmit count..... 0
heartbeat requests received..... 330275
heartbeat acks received..... 340239
heartbeat requests sent..... 340258
associations supported..... 50
milliseconds cookie life at 4-way start-up handshake. 5000
retransmission attempts allowed at start-up phase.... 8
```

;

```
eagle10110 03-08-30 14:18:32 EDT EAGLE5 30.0.0
```

NETSTAT command complete

pass:loc=1105:cmd="netstat -r"

Command Accepted - Processing
 rlghncxa03w 04-07-27 08:01:14 EST EAGLE5 31.6.0
 pass:loc=1105:cmd="netstat -r"
 Command entered at terminal #1.

```
;
  rlghncxa03w 04-07-27 08:01:14 EST EAGLE5 31.6.0
  PASS: Command sent to card
;
  rlghncxa03w 04-07-27 08:01:14 EST EAGLE5 31.6.0
```

ROUTE NET TABLE

destination	gateway	flags	Refcnt	Use	Interface
0.0.0.0	192.168.55.250	3	0	14	seeq1
192.168.55.0	192.168.55.112	101	0	0	seeq1
192.168.100.0	192.168.100.112	101	0	0	seeq0

ROUTE HOST TABLE

destination	gateway	flags	Refcnt	Use	Interface
127.0.0.1	127.0.0.1	5	1	6	lo0

```
;
  rlghncxa03w 04-07-27 08:01:15 EST EAGLE5 31.6.0

  NETSTAT command complete
;
```

```
pass:loc=1105:cmd="netstat -f"
```

```
Command Accepted - Processing
;
    rlgncxa03w 04-07-27 08:01:38 EST  EAGLE5 31.6.0
    pass:loc=1105:cmd="netstat -f"
    Command entered at terminal #1.
;
    rlgncxa03w 04-07-27 08:01:38 EST  EAGLE5 31.6.0
    PASS: Command sent to card
;
    rlgncxa03w 04-07-27 08:01:38 EST  EAGLE5 31.6.0

Usage: netstat [-a] [-i] [-h] [-m data|sys|dd] [-p icmp|ip|tcp|udp] [-r]

Options:
    -a      display socket information for all protocols
    -h      Displays this message
    -i      display interface information for all interfaces
    -m      display buffer pool information for 1 of the system pools
    -p      display socket information for 1 of the protocols
    -r      display the route table information
;
    rlgncxa03w 04-07-27 08:01:39 EST  EAGLE5 31.6.0

NETSTAT command complete
;
```

nslookup

Nameserver Lookup

This command returns the IP address for a given hostname, or returns a hostname for a given IP address.

Keyword: nslookup

Command Class: IP Stack Maintenance

Options

Options and option parameters that are underlined indicate that a value must be specified for that option or parameter. For example, the **nslookup** command has the option destination. An IP address or hostname can be specified for the destination, as in the commands **nslookup 192.168.100.3** and **nslookup dcm1107a**. Do not enter the underlined option or parameter; enter a value for the information represented by the underlined option or parameter.

destination

The destination can be either an IP address or hostname.

IP address

The IP address is a TCP/IP address expressed in standard "dot notation." IP addresses consist of the system's network number and the machine's unique host number. An example IP address is **192.9.200.44**, where **192.9.200** is the network number and **44** is the machine's host number.

Range:

4 numbers separated by dots, with each number in the range of **0-255**.

hostname

Hostname. This parameter identifies the logical name assigned to the device with the IP address indicated.

Range:

a-z, A-Z, 0-9, -, . (any string of characters beginning with a letter and comprising up to 60 characters in length)

-h

This options provides help information for the command.

Example

```
nslookup 192.9.200.44
```

```
nslookup nc.tekelec.com
```

Dependencies

The actual **nslookup** text string must be followed by a destination (either a hostname or IP address).

Notes

The **nslookup** command is executed through the **pass** command.

Output

```
pass:loc=1105:cmd="nslookup"
```

or

```
pass:loc=1105:cmd="nslookup -h"
```

```
Command Accepted - Processing
rlghncxa03w 04-07-27 08:43:21 EST  EAGLE5 31.6.0
pass:loc=1105:cmd="nslookup"
Command entered at terminal #1.
;
rlghncxa03w 04-07-27 08:43:21 EST  EAGLE5 31.6.0
PASS: Command sent to card
;
rlghncxa03w 04-07-27 08:43:21 EST  EAGLE5 31.6.0

Usage: nslookup [hostname|ipaddr]
Options:
    hostname  String name
    ipaddr    d.d.d.d
;
rlghncxa03w 04-07-27 08:43:22 EST  EAGLE5 31.6.0
NSLOOKUP command complete
;
```

pass:loc=1105:cmd="nslookup dcm1107a"

```
Command Accepted - Processing
  rlghncxa03w 04-07-27 08:43:46 EST  EAGLE5 31.6.0
  pass:loc=1105:cmd="nslookup dcm1107a"
  Command entered at terminal #1.
;
  rlghncxa03w 04-07-27 08:43:46 EST  EAGLE5 31.6.0
  PASS: Command sent to card
;
  rlghncxa03w 04-07-27 08:43:46 EST  EAGLE5 31.6.0

  NSLOOKUP command in progress
;
  rlghncxa03w 04-07-27 08:43:46 EST  EAGLE5 31.6.0

  Configured Domain Name Data

  DNSA = 192.168.100.3
  DNSB = 0.0.0.0
  Domain Name = nc.tekelec.com
  Search Order = LOCAL First

  Resolving host name - dcm1107a

  Host Table entry
    dcm1107a - 192.168.100.113
  DNS Server - No entry exists

  Currently using Host Table entry

  NSLOOKUP command complete
;
```

pass:loc=1105:cmd="nslookup 192.168.100.3"

Command Accepted - Processing

```

rlghncxa03w 04-07-27 13:21:49 EST  EAGLE5 31.6.0
pass:loc=1105:cmd="nslookup 192.168.100.3"
Command entered at terminal #1.
;
rlghncxa03w 04-07-27 13:21:49 EST  EAGLE5 31.6.0
PASS: Command sent to card
;
rlghncxa03w 04-07-27 13:21:49 EST  EAGLE5 31.6.0

NSLOOKUP command in progress
;
rlghncxa03w 04-07-27 13:21:49 EST  EAGLE5 31.6.0

Configured Domain Name Data

DNSA = 192.168.100.3
DNSB = 0.0.0.0
Domain Name = nc.tekelec.com
Search Order = LOCAL First

Resolving IP address - 192.168.100.3

Host Table - No entry exists
DNS Server
    tekral.nc.tekelec.com - 192.168.100.3

Currently using DNS Server entry

NSLOOKUP command complete
;

```

ping

Packet Internetwork Groper

This command is used to test for the presence of hosts on the network. This command is invoked with a destination (either a hostname or IP address).

Keyword: ping

Command Class: IP Stack Maintenance

Options

Options and option parameters that are underlined indicate that a value must be specified for that option or parameter. For example, the **ping** command has the option destination. An IP address or hostname can be specified for the destination, as in the commands **ping 192.9.200.44** and **ping nc.tekelec.com**. Do not enter the underlined option or parameter; enter a value for the information represented by the underlined option or parameter.

destination

The destination can be either an IP address or hostname.

IP address

The IP address is a TCP/IP address expressed in standard “dot notation.” IP addresses consist of the system’s network number and the machine’s unique host number. An example IP address is **192.9.200.44**, where **192.9.200** is the network number and **44** is the machine’s host number.

Range:

4 numbers separated by dots, with each number in the range of **0-255**.

hostname

Hostname. This parameter identifies the logical name assigned to the device with the IP address indicated.

Range:

any string of characters beginning with a letter and comprising ('a'..'z', 'A'..'Z', '0'..'9', '-', '.') up to 120 characters in length.

-i

This option specifies the number of ping requests to send.

Range: 1 - 5

Default: 3

-n

This option specifies the size of message to use in test.

Range: 12 - 2048

Default: 64

-h

This options provides help information for the command.

Example

```
ping 192.9.200.44
```

```
ping nc.tekelec.com
```

```
ping 192.9.200.44 -i 5 -n 2048
```

Dependencies

The actual **ping** text string must be followed by a destination (either a hostname or IP address) prior to the options.

Notes

The **ping** command is executed through the **pass** command.

Output**pass:loc=1105:cmd="ping" or****pass:loc=1105:cmd="ping -h"**

Command Accepted - Processing

```

rlghncxa03w 04-07-27 08:29:35 EST  EAGLE5 31.6.0
pass:loc=1105:cmd="ping"
Command entered at terminal #1.
;
rlghncxa03w 04-07-27 08:29:35 EST  EAGLE5 31.6.0
PASS: Command sent to card
;
rlghncxa03w 04-07-27 08:29:35 EST  EAGLE5 31.6.0

Usage: ping <hostname | ipaddr> [-h] [-i size] [-n count]
Options:
  -h           Displays this message
  -i count     Number of pings to send. Range=1..5. Default=3.
  -n sizet     Sets size of ICMP echo packet. Range=12..2048. Default=64.
  hostname     Name of machine to ping
  ipaddr       IP Address of machine to ping (d.d.d.d)
;
rlghncxa03w 04-07-27 08:29:36 EST  EAGLE5 31.6.0

PING command complete
;

```

pass:loc=1105:cmd="ping tekral"

Command Accepted - Processing

```

rlghncxa03w 04-07-27 08:30:16 EST  EAGLE5 31.6.0
pass:loc=1105:cmd="ping tekral"
Command entered at terminal #1.
;
rlghncxa03w 04-07-27 08:30:16 EST  EAGLE5 31.6.0
PASS: Command sent to card
;
rlghncxa03w 04-07-27 08:30:16 EST  EAGLE5 31.6.0
PING command in progress
;
rlghncxa03w 04-07-27 08:30:18 EST  EAGLE5 31.6.0
PING tekral (192.168.100.3): 56 data bytes
64 bytes from tekral.nc.tekelec.com (192.168.100.3):icmp_seq=0.time=5. ms
64 bytes from tekral.nc.tekelec.com (192.168.100.3):icmp_seq=1.time=0. ms
64 bytes from tekral.nc.tekelec.com (192.168.100.3):icmp_seq=2.time=0. ms
----tekral PING Statistics----
3 packets transmitted, 3 packets received, 0% packet loss
round-trip (ms)  min/avg/max = 0/1/5
PING command complete
;

```


pass:loc=1105:cmd="ping 192.168.100.3"

Command Accepted - Processing

```

rlghncxa03w 04-07-27 08:30:44 EST EAGLE5 31.6.0
pass:loc=1105:cmd="ping 192.168.100.3"
Command entered at terminal #1.
;
rlghncxa03w 04-07-27 08:30:44 EST EAGLE5 31.6.0
PASS: Command sent to card
;
rlghncxa03w 04-07-27 08:30:44 EST EAGLE5 31.6.0

PING command in progress
;
rlghncxa03w 04-07-27 08:30:46 EST EAGLE5 31.6.0
PING 192.168.100.3: 56 data bytes
64 bytes from tekral.nc.tekelec.com (192.168.100.3):icmp_seq=0.time=5. ms
64 bytes from tekral.nc.tekelec.com (192.168.100.3):icmp_seq=1.time=0. ms
64 bytes from tekral.nc.tekelec.com (192.168.100.3):icmp_seq=2.time=0. ms
----192.168.100.3 PING Statistics----
3 packets transmitted, 3 packets received, 0% packet loss
round-trip (ms) min/avg/max = 0/1/5

PING command complete
;

```

pass:loc=1105:cmd="ping tekral -i 2"

Command Accepted - Processing

```

rlghncxa03w 04-07-27 08:31:46 EST EAGLE5 31.6.0
pass:loc=1105:cmd="ping tekral -i 2"
Command entered at terminal #1.
;
rlghncxa03w 04-07-27 08:31:46 EST EAGLE5 31.6.0
PASS: Command sent to card
;
rlghncxa03w 04-07-27 08:31:46 EST EAGLE5 31.6.0

PING command in progress
;
rlghncxa03w 04-07-27 08:31:47 EST EAGLE5 31.6.0
PING tekral (192.168.100.3): 56 data bytes
64 bytes from tekral.nc.tekelec.com(192.168.100.3):icmp_seq=0.time=10. ms
64 bytes from tekral.nc.tekelec.com(192.168.100.3):icmp_seq=1.time=0. ms
----tekral PING Statistics----
2 packets transmitted, 2 packets received, 0% packet loss
round-trip (ms) min/avg/max = 0/5/10

PING command complete
;

```

pass:loc=1105:cmd="ping tekral -i 1"

Command Accepted - Processing

```
rlghncxa03w 04-07-27 08:31:55 EST EAGLE5 31.6.0
pass:loc=1105:cmd="ping tekral -i 1"
Command entered at terminal #1.
;
rlghncxa03w 04-07-27 08:31:55 EST EAGLE5 31.6.0
PASS: Command sent to card
;
rlghncxa03w 04-07-27 08:31:55 EST EAGLE5 31.6.0

PING command in progress
;
rlghncxa03w 04-07-27 08:31:55 EST EAGLE5 31.6.0

PING: tekral is alive

PING command complete
;
```

pass:loc=1105:cmd="ping tekral -i 2 -n 200"

E3780 Cmd Rej: Syntax Error Found

```
rlghncxa03w 04-07-27 08:32:09 EST EAGLE5 31.6.0
pass:loc=1105:cmd="ping tekral -i 2 -n 200"
Command entered at terminal #1.
;
rlghncxa03w 04-07-27 08:32:09 EST EAGLE5 31.6.0
PASS: Command sent to card
;
rlghncxa03w 04-07-27 08:32:09 EST EAGLE5 31.6.0

PING command in progress
;
rlghncxa03w 04-07-27 08:32:10 EST EAGLE5 31.6.0
PING tekral (192.168.100.3): 192 data bytes
200 bytes from tekral.nc.tekelec.com(192.168.100.3):icmp_seq=0.time=5. ms
200 bytes from tekral.nc.tekelec.com(192.168.100.3):icmp_seq=1.time=0. ms
----tekral PING Statistics----
2 packets transmitted, 2 packets received, 0% packet loss
round-trip (ms) min/avg/max = 0/2/5

PING command complete
;
```

NOTE: In the above example, the response shows eight bytes less than the entry (192 as opposed to 200) because the ping command may use eight bytes automatically.

This command is used to test for the presence of hosts on the network. This command is invoked with a destination (either a hostname or IP address).

Keyword: sctp

Command Class: IP Stack Maintenance

Options

Options and option parameters that are underlined indicate that a value must be specified for that option or parameter. For example, the **sctp** command option **-g** has the parameter command flag **pegs -p port**. The local port can be specified for the association for which peg counts are retrieved, as in the command **sctp -g pegs -p 200 -i 1**. Do not enter the underlined option or parameter; enter a value for the information represented by the underlined option or parameter.

-a aname

This option is used to retrieve the measurements and information for a specific association..

-r

This option is used to reset specified measurements. The associated report is not displayed.

-h

This option is used to display help information for the command. Either brief or full help reports can be generated.

Example

sctp -a aname

sctp -p port

sctp -r -a aname

sctp

Dependencies

Only one of the options can be specified at a time.

Notes

None

Output

Either brief or full help reports can be displayed. A full help report is generated by adding the **-h full** option to the command line.

Example brief help report:

pass:loc=1305:cmd="sctp -h"

```

0          1          2          3          4          5          6          7
12345678901234567890123456789012345678901234567890123456789012345678
Usage: sctp [ [-a aname] | [-p port]] [-r] [-h [full] ]
```

Options:

```

(no parameters) display list of SCTP ports
-a aname         display association report
-p port         display SCTP port report
-r               reset specified SCTP measurements
-h               display command help (brief or full)
```

Example of a full help report:

pass:loc=1307:cmd="sctp -h full"

```

0          1          2          3          4          5          6          7
12345678901234567890123456789012345678901234567890123456789012345678
Usage: sctp [ [-a aname] | [-p port]] [-r] [-h [full]] ]

```

Options:

```

(no parameters) display list of Sctp ports
-a aname         display association report
-p port          display Sctp port report
-r              reset specified Sctp measurements
-h              display command help (brief or full)

```

no parameters

Summary list of all Sctp ports. To list all the Sctp ports issue the following command:
sctp

-a aname option details

Retrieves detailed information and measurements for a specific association. For example the following Sctp command will get the measurements and detailed information for the association with association name=assoc1.

```
sctp -a assoc1
```

-p port option details

Retrieves detailed information for a specified Sctp port. For example the following Sctp command will get the detailed information for local Sctp port 200.

```
sctp -p 200
```

-r option details

Resets specified Sctp Measurements. See examples below.

Resets measurements for specified association:

```
sctp -r -a assoc
```

Resets measurements for all associations with local Sctp port 2000:

```
sctp -r -p 2000
```

Resets measurements for all ports/associations:

```
sctp -r
```

Example summary list of all Sctp ports. All Sctp ports and number of associations associated with each port is displayed.

pass:loc=1307:cmd="sctp"

```

rlghncxa03w 06-06-01 08:32:09 EST  EAGLE5 35.0.0
Local   Local IP      Num of
Port    Address          Assoc
7001    192.168.110.35     1
2222    192.168.110.12 3
        192.168.112.12

```

;

```
rlghncxa03w 06-06-01 08:32:09 EST  EAGLE5 35.0.0
```

Sctp command complete

;

Example specific Sctp association information and measurements:

pass:loc=1307:cmd="sctp -a assoc1"

Aname	Local	Local	Remote	Remote
	IP Address	Port	Address	Port
Assoc1	192.168.110.12	2222	192.168.112.4	5555
	192.168.112.12			

Configuration	State
Retransmission Mode = LIN	State = OPEN
Min. Retransmission Timeout = 10	ULP association id = 18
Max. Retransmission Timeout = 800	Number of nets = 2
Max. Number of Retries = 10	Inbound Streams = 1
Min. Congestion Window = 3000	Outbound Streams = 2
Inbound Streams = 2	
Outbound Streams = 2	

Nets Data

IP Address	192.168.112.4	State	Reachable
Port	7777	Primary	YES
MTU	1500	cwnd	16384
ssthresh	16384	RTO	120

IP Address	192.168.113.5	State	Reachable
Port	7777	Primary	NO
MTU	1500	cwnd	16384
ssthresh	16384	RTO	120

```

Last Net Sent To = 192.168.112.4
Last Net Rcvd From = 192.168.112.4
Over All Error Count = 0
    Peers Rwnd = 13880
    My Rwnd = 16384
    Max Window = 16384
    Initial Seq Number = 24130
    Next Sending Seq Number = 124686
    Last Acked Seq Number = 124669
Maximum Outbound Char Count = 16384
Current Outbound Char Count = 2112
    Number Unsent Char Count = 0
    Outbound Data Chunk Count = 16
        Number Unsent = 0
    Number To Retransmit = 0

    ip datagrams rcvd = 155402
ip datagrams with data chunks rcvd = 120844
    data chunks rcvd = 367908
    data chunks read = 367900
    dup tsns rcvd = 8
    sacks rcvd = 38734
    gap ack blocks rcvd = 3
    heartbeat requests rcvd = 135
    heartbeat acks rcvd = 52
    heartbeat requests sent = 52
    ip datagrams sent = 129254
ip datagrams with data chunks sent = 73084
    data chunks sent = 396330
retransmit data chunks sent = 135
    sacks sent = 64872
    send failed = 0
    retransmit timer count = 0
    consecutive retransmit timeouts = 0
RTT between RMIN and RMAX inclusive = 6
    RTT greater than RMAX = 0
    fast retransmit count = 135

```

```

    recv timer count = 0
    heartbeat timer count = 244
    none left tosend = 0
    none left rwnd gate = 5
    none left cwnd gate = 8

```

SCTP command complete

;

Example SCTP port measurements:

pass:loc=1307:cmd="sctp -p 2222"

```
rlghncxa03w 06-06-01 08:32:09 EST EAGLE5 35.0.0
```

Local Port	Local IP Address	Num of Assoc
2222	192.168.110.12	3
	192.168.112.12	

Assoc ID	Local IP Address	Local Port	Primary Address	Remote Address	Remote Port
1	192.168.110.12	2222	192.168.112.4	5555	
	192.168.112.12				
2	192.168.110.12	2222	192.168.112.4	6666	
	192.168.112.12				
3	192.168.110.12	2222	192.168.112.4	7777	
	192.168.112.12				

```

    no.of inqueued msgs = 0
    max mtu = 1500
    max init times = 8
    max size reassembly = 1048576
    default rwnd value = 16384
    pre-open streams = 1
    ip datagram counter = 2781

```

Timer Values:	seconds	millisecs
INIT	1	0
RECV	0	200
SEND	1	0
SHUTDOWN	0	300
HEARTBEAT	0	500
PMTU	600	0

;

SCTP command complete

;

Example resets association measurements:

pass:loc=1307:cmd="sctp -r -a aname"

```
rlghncxa03w 06-06-01 08:32:09 EST EAGLE5 35.0.0
PASS: Command sent to card
```

Association measurements have been reset.

SCTP command complete

Example resets port measurements:

pass:loc=1307:cmd="sctp -r -p port"

```
rlghncxa03w 06-06-01 08:32:09 EST EAGLE5 35.0.0
PASS: Command sent to card
```

Port measurements have been reset.

SCTP command complete

Example resets all measurements:

pass:loc=1307:cmd="sctp -r"

```
rlghncxa03w 06-06-01 08:32:09 EST EAGLE5 35.0.0
PASS: Command sent to card
```

All measurements have been reset.

SCTP command complete

sockrtt

Socket Round Trip Time

This command is used to report and reset the round-trip time statistics for application sockets. Minimum, maximum, and average times are kept for each open socket. The Retransmission Mode (BSD, FIXED, or MOD) and the Fixed Round Trip Time are also displayed.

Keyword: **sockrtt**

Command Class: Application Maintenance

Options

Options and option parameters that are underlined indicate that a value must be specified for that option or parameter. For example, the **sockrtt** command has the option socket name. The socket name must be specified for which statistics will be displayed, as in the command **sockrtt socyellow**. Do not enter the underlined option or parameter; enter a value for the information represented by the underlined option or parameter.

socket name

This option is **mandatory** and specifies the socket name for which statistics are to be displayed.

Range:

up to 15 alphanumeric characters.

-r

This option resets all statistics for the given socket name.

-h

This option provides help information for the command.

Example

sockrtt

sockrtt -h

sockrtt socyellow

sockrtt socyellow -r

Dependencies

None

Notes

The **sockrtt** command is executed through the **pass** command.

Output

pass:loc=1105:cmd="sockrtt" or

pass:loc=1105:cmd="sockrtt -h"

Command Accepted - Processing

```

    rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
    PASS: Command sent to card
;
    rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
    Usage: SOCKRTT sockname [-r] [-h]
    Options:
        -r          Resets rtt data for specified socket
        -h          Displays this message
;
    rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
    SOCKRTT command complete
;

```

pass:loc=1105:cmd="sockrtt c7000"

Command Accepted - Processing

```

    rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
    PASS: Command sent to card
;
    rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0

    SOCKRTT: Socket round-trip time report (in milliseconds)

    Configured Traffic Round-Trip Time
        Retransmission Mode          : FIXED
        Fixed Round Trip Time        : 250

    Measured Normal Traffic Round-Trip Times

        Minimum round-trip time      : 5
        Maximum round-trip time      : 195
        Weighted Average round-trip time : 10
        Last recorded round-trip time : 10

    Measured Congested Traffic Round-Trip Times

        Minimum round-trip time      : 0
        Maximum round-trip time      : 0
        Weighted Average round-trip time : 0
        Last recorded round-trip time : 0
;
    rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
    SOCKRTT command complete
;

```


pass:loc=1105:cmd="sockrtt c7000 -r"

Command Accepted - Processing

```

rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
pass:loc=1105:cmd="sockrtt c7000 -r"
Command entered at terminal #1.
;
rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
PASS: Command sent to card
;
rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0

SOCKRTT: Socket round-trip time report (in milliseconds)

Configured Traffic Round-Trip Time
  Retransmission Mode           : FIXED
  Fixed Round Trip Time         : 250

Measured Normal Traffic Round-Trip Times

  Minimum round-trip time       : 0
  Maximum round-trip time       : 0
  Weighted Average round-trip time : 0
  Last recorded round-trip time  : 0

Measured Congested Traffic Round-Trip Times

  Minimum round-trip time       : 0
  Maximum round-trip time       : 0
  Weighted Average round-trip time : 0
  Last recorded round-trip time  : 0
;
rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
SOCKRTT command complete
;

```

sockstate

Socket State

This command is used to report the TALI state machine history for the specified socket name.

Keyword: **sockstate**

Command Class: Application Maintenance

Options

Options and option parameters that are underlined indicate that a value must be specified for that option or parameter. For example, the **sockstate** command has the option socket name. The socket name must be specified for which history will be displayed, as in the command **sockstate c7000**. Do not enter the underlined option or parameter; enter a value for the information represented by the underlined option or parameter.

socket name

This **mandatory** option specifies the socket name for which the history is to be displayed.

Range:

Up to 15 alphanumeric characters

-i service

This option is used to include SS7 service messages in the display of the TALI state machine history.

-i tali

This option is used to include TALI peer-to-peer messages in the display of the TALI state machine history.

-x service

This option is used to exclude SS7 service messages in the display of the TALI state machine history.

-x tali

This option is used to exclude TALI peer-to-peer messages in the display of the TALI state machine history

-h

This option provides help information for the command.

Example

sockstate

sockstate c7000

sockstate c7000 -i tali

Dependencies

None

Notes

The **sockstate** command is executed through the **pass** command.

State machine history is kept in a circular buffer in memory.

Output

pass:loc=1105:cmd="sockstate" or

pass:loc=1105:cmd="sockstate -h"

Command Accepted - Processing

```

    rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
    pass:loc=1105:cmd="sockstate"
    Command entered at terminal #1.
;
    rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
    PASS: Command sent to card
;
    rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
    Usage: SOCKSTATE sockname [-h] [-i service tali] [-x service tali]
    Options:
    -h          Displays this message
    -i service  Include SS7 service messages in sockstate log
    -i tali     Include TALI peer-to-peer messages in sockstate log
    -x service  Exclude SS7 service messages from sockstate log (default)
    -x tali     Exclude TALI peer-to-peer messages from sockstate log (default)
;
    rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0

    SOCKSTATE command complete
;

```

pass:loc=1105:cmd="sockstate c7000 -i tali"

Command Accepted - Processing

```

    rlgncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
    pass:loc=1105:cmd="sockstate c7000 -i tali"
    Command entered at terminal #1.
;
    rlgncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
    PASS: Command sent to card
;
    rlgncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
    SOCKSTATE command in progress
;
    rlgncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0

    SOCKSTATE: Socket state history log
                Current settings: -i tali
                                -x service

    SOCKSTATE command complete
;

```

pass:loc=1105:cmd="sockstate c7000 -i service"

Command Accepted - Processing

```

    rlgncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
    pass:loc=1105:cmd="sockstate c7000 -i service"
    Command entered at terminal #1.
;
    rlgncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
    PASS: Command sent to card
;
    rlgncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
    SOCKSTATE command in progress
;
    rlgncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0

    SOCKSTATE: Socket state history log
                Current settings: -i service tali

    SOCKSTATE command complete
;

```

pass:loc=1105:cmd="sockstate c7000"

Command Accepted - Processing

```

rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
pass:loc=1105:cmd="sockstate c7000"
Command entered at terminal #1.
;
rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
PASS: Command sent to card
;
rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
SOCKSTATE command in progress
;
rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0

SOCKSTATE: Socket state history log
Current settings: -i service tali
MTP Primitives broadcast phase: enabled
MTP Primitives response method: enabled
SCCP with MTP3: disabled
ISUP via MTP3: disabled
XSRV Framing: enabled
MTPP with Group Code: enabled
Near End TALI version: 3.0
Far End TALI version: 3.0
Negotiated TALI version: 3.0

Date      Time      Socket Event
=====
05-07-27  10:01:33.570  Socket Created
05-07-27  10:04:21.765  Socket Allowed for Traffic
05-07-27  10:04:55.405  Management Socket Open
05-07-27  10:06:12.030  Link Activated
05-07-27  10:06:12.030  Transition to Connecting
05-07-27  10:06:17.860  Socket Connection Established
05-07-27  10:06:17.860  Transition to NEA-FEP
05-07-27  10:06:17.865  Transition to NEA-FEA
05-07-27  10:16:57.190  Monitor Message Transmitted
05-07-27  10:16:57.200  Monitor-Ack Message Received
05-07-27  10:16:58.170  Test Message Transmitted
05-07-27  10:16:58.180  Allow Message Received

      . . . .

05-07-27  10:20:55.285  SCCP MSU Transmitted
05-07-27  10:20:55.290  SCCP MSU Received
05-07-27  10:20:55.480  Test Message Transmitted
05-07-27  10:20:55.480  Allow Message Received
05-07-27  10:20:55.890  SCCP MSU Transmitted

SOCKSTATE command complete

```

tracerroute

IP Tracing Utility

This command is used to determine the path taken by a UDP message to a specified remote host. The command can be invoked with either a hostname or IP address.

Keyword: tracerroute

Command Class: IP Stack Maintenance

Options

Options and option parameters that are underlined indicate that a value must be specified for that option or parameter. For example, the **traceroute** command has the option IP address. The IP address can be specified for the remote host to which the UDP message is sent, as in the command **traceroute 208.55.20.177**. Do not enter the underlined option or parameter; enter a value for the information represented by the underlined option or parameter.

IP address

The IP address is a TCP/IP address expressed in standard “dot notation.” IP addresses consist of the system’s network number and the machine’s unique host number. An example IP address is **192.9.200.44**, where **192.9.200** is the network number and **44** is the machine’s host number.

Range:

4 numbers separated by dots, with each number in the range of **0-255**.

hostname

Hostname. This parameter identifies the logical name assigned to the device with the IP address indicated.

Range:

String of characters, beginning with a letter, up to 120 characters in length. Valid characters are **a-z**, **A-Z**, **0-9**, **-** (hyphen), **.** (period)

-h

This option provides help information for the command.

-m maximum hops

This option specifies the maximum number of hops before the trace is terminated.

Range: 1-30

Default: 10

-n

This option specifies that only the IP Address of each host will be displayed (not the hostname).

-p port

This option provides the user port number.

Range: 1-65535

Default: 33434

Example

```
traceroute
```

```
traceroute www.remotedest.com
```

```
traceroute www.remotedest.com -m 20
```

```
traceroute www.remotedest.com -m 20 -n
```

```
traceroute 208.55.20.177
```

```
traceroute 208.55.20.177 -m 20 -p 40000
```

Dependencies

If a Domain Name is specified, either the Domain Name must exist in the IP Host table or the Domain Name Server A or B must be provisioned.

Notes

The **traceroute** command is executed through the **pass** command.

Output

The following example illustrates the help information for the command.

pass:loc=1103:cmd="traceroute" or

pass:loc=1103:cmd="traceroute -h"

```

Command entered at terminal #1.
;

rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
PASS: Command sent to card
;

rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0

Usage: traceroute <hostname | ipaddr> [-h] [-m maxhops] [-n] [-p port]
Options:
  -h           Displays this message
  -m maxhops   Maximum number of hops to destination.  Range=1..30. Default= 10.
  -n names     Inhibits the display of intermediate host names
  -p port      Port number. Range=1..65535. Default=33434.
  hostname     Name of machine to trace
  ipaddr       IP Address of machine to trace (d.d.d.d)
Errors:
  *           Timeout
  !N          Unreachable Network
  !H          Unreachable Host
  !?nn        Unknown Failure (nn = ICMP Code)
;

rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0

TRACEROUTE command complete

```

The following example illustrates a **traceroute** request to host **www.remotedest.com**. A maximum of 20 hops has been specified. Three packets are sent to each hop, with the time for each sample displayed. Intermediate host names are also displayed.

```
pass:loc=1103:cmd="traceroute www.remotedest.com -m 20"
```

```

Command entered at terminal #1.
;

rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
PASS: Command sent to card
;

rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0

TRACEROUTE command in progress
;

rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
;

rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
Traceroute to www.remotedest.com (208.55.20.177),
  20 hops max, 100 byte packets
 1    5ms    5ms    5ms  216-187-242-57.ded.btitelecom.net (216.187.242.57)
 2   25ms   25ms   85ms  216-187-251-74.ded.btitelecom.net (216.187.251.74)
 3   25ms   25ms   25ms  bti-rdu-c1-rtr.btitelecom.net (208.216.228.254)
 4   30ms   25ms   25ms  Serial4-1-0.GW2.RDU1.ALTER.NET (157.130.34.93)
 5   35ms   35ms   40ms  178.ATM2-0.XR1.DCA1.ALTER.NET (146.188.162.50)
 6   40ms   40ms   35ms  195.at-2-0-0.XR1.DCA6.ALTER.NET (152.63.33.22)
 7   40ms   40ms   40ms  0.so-1-3-0.XL1.DCA6.ALTER.NET (152.63.35.114)
 8   40ms   40ms   40ms  POS6-0.BR3.DCA6.ALTER.NET (152.63.38.117)
 9   40ms   40ms   40ms  a3-0.uunet.mclnva02.us.bb.verio.net (204.255.169.90)
10   75ms   75ms   75ms  p16-0-0-0.r00.atlnga03.us.bb.verio.net (129.250.2.49)
11   95ms   95ms   95ms  p4-0-2-0.r01.bcrftl01.us.bb.verio.net (129.250.4.54)
12   95ms   95ms   95ms  ge-1-1.r01.border.boca.verio.net (129.250.28.52)
13   95ms   95ms   95ms  ge-8-1.r01.edge.boca.verio.net (208.55.254.9)
14   95ms   95ms   95ms  www.remotedest.com (208.55.20.177)

TRACEROUTE command complete
;

```

The following example illustrates a **traceroute** request to host **www.remotedest.com**. No maximum number of hops has been specified. Intermediate host names are displayed. The display terminates after 10 hops.

pass:loc=1103:cmd="tracert www.remotedest.com"

```

Command entered at terminal #1.
;

rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
PASS: Command sent to card
;

rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0

TRACEROUTE command in progress

;

rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
;

rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
Traceroute to www.remotedest.com (208.55.20.177),
  10 hops max, 100 byte packets
 1    5ms    5ms    5ms  216-187-242-57.ded.bttelecom.net (216.187.242.57)
 2   25ms   25ms   25ms  216-187-251-74.ded.bttelecom.net (216.187.251.74)
 3   25ms   25ms   25ms  bti-rdu-c1-rtr.bttelecom.net (208.216.228.254)
 4   25ms   25ms   25ms  157.130.34.93 (157.130.34.93)
 5   35ms   40ms   40ms  178.ATM2-0.XR1.DCA1.ALTER.NET (146.188.162.50)
 6   40ms   35ms   45ms  195.at-2-0-0.XR1.DCA6.ALTER.NET (152.63.33.22)
 7   45ms   40ms   40ms  0.so-1-3-0.XL1.DCA6.ALTER.NET (152.63.35.114)
 8   40ms   35ms   35ms  POS6-0.BR3.DCA6.ALTER.NET (152.63.38.117)
 9   40ms   40ms   40ms  a3-0.uunet.mclnva02.us.bb.verio.net (204.255.169.90)
10   75ms   75ms   80ms  p16-0-0-0.r00.atlna03.us.bb.verio.net (129.250.2.49)
Maximum number of hops reached

TRACEROUTE command complete

;

```

The following example illustrates a **tracert** request to host IP address **208.55.20.177**. No maximum number of hops has been specified. Intermediate host names are displayed. The display terminates after 10 hops.

pass:loc=1103:cmd="traceroute 208.55.20.177"

```

Command entered at terminal #1.
;

rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
PASS: Command sent to card
;

rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0

TRACEROUTE command in progress
;

rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
Traceroute to www.remotedest.com (208.55.20.177),
    10 hops max, 100 byte packets
 1   5ms    5ms    5ms  216-187-242-57.ded.btitelecom.net (216.187.242.57)
 2   55ms   260ms  300ms 216-187-251-74.ded.btitelecom.net (216.187.251.74)
 3   25ms   25ms   25ms bti-rdu-c1-rtr.btitelecom.net (208.216.228.254)
 4   25ms   25ms   25ms Serial4-1-0.GW2.RDU1.ALTER.NET (157.130.34.93)
 5   40ms   35ms   35ms 178.ATM2-0.XR1.DCA1.ALTER.NET (146.188.162.50)
 6   40ms   35ms   40ms 195.at-2-0-0.XR1.DCA6.ALTER.NET (152.63.33.22)
 7   35ms   40ms   40ms 0.so-1-3-0.XL1.DCA6.ALTER.NET (152.63.35.114)
 8   40ms   35ms   40ms POS6-0.BR3.DCA6.ALTER.NET (152.63.38.117)
 9   40ms   40ms   40ms a3-0.uunet.mclnva02.us.bb.verio.net (204.255.169.90)
10   75ms   75ms   75ms p16-0-0-0.r00.atlna03.us.bb.verio.net (129.250.2.49)
)
Maximum number of hops reached

TRACEROUTE command complete
;

```

The following example illustrates a **traceroute** request to host IP address **208.55.20.177**. A maximum of 20 hops has been specified. Intermediate host names are displayed.

pass:loc=1103:cmd="tracert 208.55.20.177 -m 20"

```

Command entered at terminal #1.
;

rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
PASS: Command sent to card
;

rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0

TRACEROUTE command in progress

;

rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
;

rlghncxa03w 05-07-27 08:32:34 EST  EAGLE5 31.6.0
Traceroute to www.remotedest.com (208.55.20.177),
  20 hops max, 100 byte packets
 1    5ms    5ms    5ms 216-187-242-57.ded.bttelecom.net (216.187.242.57)
 2   25ms   25ms   25ms 216-187-251-74.ded.bttelecom.net (216.187.251.74)
 3   25ms   25ms   25ms bti-rdu-c1-rtr.bttelecom.net (208.216.228.254)
 4   25ms   25ms   25ms Serial4-1-0.GW2.RDU1.ALTER.NET (157.130.34.93)
 5   35ms   35ms   35ms 178.ATM2-0.XR1.DCA1.ALTER.NET (146.188.162.50)
 6   35ms   40ms   35ms 195.at-2-0-0.XR1.DCA6.ALTER.NET (152.63.33.22)
 7   35ms   35ms   35ms 0.so-1-3-0.XL1.DCA6.ALTER.NET (152.63.35.114)
 8   40ms   35ms   35ms POS6-0.BR3.DCA6.ALTER.NET (152.63.38.117)
 9   40ms   40ms   40ms a3-0.uunet.mclnva02.us.bb.verio.net (204.255.169.90)
10   75ms   75ms   75ms p16-0-0-0.r00.atlna03.us.bb.verio.net(129.250.2.49)
11   95ms   95ms   95ms p4-0-2-0.r01.bcrftl01.us.bb.verio.net (129.250.4.54)
12   95ms   95ms   95ms ge-1-1.r01.border.boca.verio.net (129.250.28.52)
13   95ms   95ms   95ms ge-8-1.r01.edge.boca.verio.net (208.55.254.9)
14   95ms   95ms   95ms www.remotedest.com (208.55.20.177)

TRACEROUTE command complete
;

```

The following example illustrates a **tracert** request to host IP address **208.55.20.177**. A maximum of 20 hops has been specified. Intermediate host names are not displayed because the **-n** option is specified.

pass:loc=1103:cmd="traceroute 208.55.20.177 -m 20 -n"

```

Command entered at terminal #1.
;
  rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
PASS: Command sent to card
;

  rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0

TRACEROUTE command in progress
;

  rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0

;

  rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
Traceroute to www.remotedest.com (208.55.20.177),
      20 hops max, 100 byte packets
 1    5ms    5ms    5ms  216.187.242.57
 2   25ms   25ms   25ms  216.187.251.74
 3   25ms   25ms   25ms  208.216.228.254
 4   30ms   30ms   30ms  157.130.34.93
 5   35ms   40ms   40ms  146.188.162.50
 6   40ms   40ms   40ms  152.63.33.22
 7   40ms   45ms   40ms  152.63.35.114
 8   40ms   40ms   35ms  152.63.38.117
 9   40ms   40ms   40ms  204.255.169.90
10   75ms   75ms   75ms  129.250.2.49
11   95ms   95ms   95ms  129.250.4.54
12   95ms   95ms   95ms  129.250.28.52
13   95ms   95ms   95ms  208.55.254.9
14  110ms  100ms   95ms  208.55.20.177

TRACEROUTE command complete
;

```

The following example illustrates a **traceroute** request to host IP address **www.remotedest.com**. A maximum of 20 hops has been specified. Intermediate host names are not displayed because the **-n** option is specified.

pass:loc=1103:cmd="tracert www.remotedest.com -m 20 -n"

```

Command entered at terminal #1.
;
  rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
PASS: Command sent to card
;

  rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0

TRACEROUTE command in progress
;

  rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
;

  rlghncxa03w 05-07-27 08:32:34 EST  EAGLE5 31.6.0
Traceroute to www.remotedest.com (208.55.20.177),
    20 hops max, 100 byte packets
 1    5ms    5ms    5ms  216.187.242.57
 2   25ms   25ms   25ms  216.187.251.74
 3   25ms   25ms   25ms  208.216.228.254
 4   30ms   30ms   30ms  157.130.34.93
 5   35ms   40ms   40ms  146.188.162.50
 6   40ms   40ms   40ms  152.63.33.22
 7   40ms   45ms   40ms  152.63.35.114
 8   40ms   40ms   35ms  152.63.38.117
 9   40ms   40ms   40ms  204.255.169.90
10   75ms   75ms   75ms  129.250.2.49
11   95ms   95ms   95ms  129.250.4.54
12   95ms   95ms   95ms  129.250.28.52
13   95ms   95ms   95ms  208.55.254.9
14  110ms  100ms   95ms  208.55.20.177

TRACEROUTE command complete
;

```

The following example illustrates a **tracert** request to host IP address **208.55.20.177**. A maximum of 20 hops has been specified. Intermediate host names are displayed. Application Port 40000 is used.

pass:loc=1103:cmd="tracert 208.55.20.177 -m 20 -p 40000"

```

Command entered at terminal #1.
;

  rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
PASS: Command sent to card
;

  rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0

TRACEROUTE command in progress
;

  rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
;

```

```

rlghncxa03w 04-07-27 08:32:34 EST EAGLE5 31.6.0
Traceroute to www.remotedest.com (208.55.20.177),
  20 hops max, 100 byte packets
 1  5ms    5ms    5ms  216.187-242-57.ded.btitelecom.net (216.187.242.57)
 2  25ms   25ms   25ms  216.187-251-74.ded.btitelecom.net (216.187.251.74)
 3  25ms   25ms   25ms  208.216.228.254 (208.216.228.254)
 4  25ms   25ms   25ms  157.130.34.93 (157.130.34.93)
 5  35ms   40ms   40ms  178.ATM2-0.XR1.DCA1.ALTER.NET (146.188.162.50)
 6  45ms   35ms   40ms  195.at-2-0-0.XR1.DCA6.ALTER.NET (152.63.33.22)
 7  35ms   40ms   40ms  0.so-1-3-0.XL1.DCA6.ALTER.NET (152.63.35.114)
 8  40ms   35ms   40ms  POS6-0.BR3.DCA6.ALTER.NET (152.63.38.117)
 9  40ms   40ms   40ms  a3-0.uunet.mclnva02.us.bb.verio.net (204.255.169.90)
10  75ms   75ms   75ms  p16-0-0-0.r00.atlnga03.us.bb.verio.net(129.250.2.49)
11  95ms   95ms   95ms  p4-0-2-0.r01.bcrftl01.us.bb.verio.net (129.250.4.54)
12  95ms   95ms   95ms  ge-1-1.r01.border.boca.verio.net (129.250.28.52)
13  95ms   95ms   95ms  ge-8-1.r01.edge.boca.verio.net (208.55.254.9)
14  95ms   95ms   95ms  www.remotedest.com (208.55.20.177)

```

TRACEROUTE command complete

;

The following example illustrates a traceroute request to host IP address 204.202.136.31. A maximum of 20 hops has been specified. Intermediate host names are displayed. Several timeouts occur. Finally, an ICMP error is received (in this case, an unknown response with an ICMP code = 13), and the command is terminated immediately.

pass:loc=1103:cmd="traceroute 204.202.136.31 -m 20"

Command entered at terminal #1.

;

```

rlghncxa03w 04-07-27 08:32:34 EST EAGLE5 31.6.0
PASS: Command sent to card

```

;

```

rlghncxa03w 04-07-27 08:32:34 EST EAGLE5 31.6.0

```

TRACEROUTE command in progress

;

```

rlghncxa03w 04-07-27 08:32:34 EST EAGLE5 31.6.0

```

;

```

rlghncxa03w 04-07-27 08:32:34 EST EAGLE 31.6.0
Traceroute to 204.202.136.31 (204.202.136.31),
    20 hops max, 100 byte packets
 1   5ms    5ms    5ms  216-187-242-57.ded.btitelecom.net (216.187.242.57)
 2   25ms   25ms   25ms  216-187-251-74.ded.btitelecom.net (216.187.251.74)
 3   25ms   25ms   25ms  bti-rdu-c1-rtr.btitelecom.net (208.216.228.254)
 4   25ms   25ms   25ms  Serial4-1-0.GW2.RDU1.ALTER.NET (157.130.34.93)
 5   35ms   40ms   35ms  178.ATM2-0.XR1.DCA1.ALTER.NET (146.188.162.50)
 6   40ms   35ms   35ms  195.at-1-0-0.TR1.DCA6.ALTER.NET (152.63.33.206)
 7  110ms  115ms  115ms  121.at-1-1-0.TR1.SEA1.ALTER.NET (146.188.140.74)
 8  110ms  115ms  115ms  299.ATM7-0.XR1.SEA1.ALTER.NET (146.188.200.109)
 9  115ms  115ms  115ms  195.ATM5-0.GW5.SEA1.ALTER.NET (146.188.201.57)
10  110ms  110ms  110ms  waltdisney1-OC12-gw.customer.alter.net(157.130.182.30)
11  110ms  115ms  110ms  204.202.138.71 (204.202.138.71)
12   *      *      *      Request timed out
13  !?13           Unreachable

TRACEROUTE command complete
;

```

ualog

User Adapter Log

Use this command to report on the user adapter (UA) state machine history for a specified association name. State machine history is kept in a circular buffer in memory. The **-i** and **-x** options are used to include or exclude groups of events from the state machine history.

Keyword: **ualog**

Command Class: Application Maintenance

Options

Options and option parameters that are underlined indicate that a value must be specified for that option or parameter. For example, the **ualog** command has the parameter aname. The association name must be specified for which the user adapter log will be displayed, as in the command **ualog s7000**. Do not enter the underlined option or parameter; enter a value for the information represented by the underlined option or parameter.

aname

This option specifies the association name for the display.

-h

This option displays help (usage) information for the command.

-i event group

This option includes groups of events in the state machine history.

Range: service, ua

-x event group

This option excludes groups of events from the state machine history.

Range: service, ua

Example

```
pass:loc=1105:cmd="ualog s7000"
```

Dependencies

None

Notes

None

Output**pass:loc=1105:cmd="ualog s7000"**

```

rlghncxa03w 05-07-27 08:10:00 EST EAGLE5 34.0.0
PASS: Command sent to card
;
rlghncxa03w 05-07-27 08:10:00 EST EAGLE5 34.0.0
UALOG command in progress
;
rlghncxa03w 05-07-27 08:10:00 EST EAGLE5 34.0.0
Date      Time      ASP Event
-----
05-07-27 17:17:46.940 Management Socket Open
05-07-27 17:17:46.940 Transition to Connecting
05-07-27 17:17:47.500 Socket Allowed for Traffic
05-07-27 17:17:49.375 Socket Connection Established
05-07-27 17:17:49.375 Transition to ASP-DOWN
05-07-27 17:17:49.390 ASPUP PDU Received (ASP ID = 0x00000002)
05-07-27 17:17:49.390 ASPUPACK PDU Transmitted
05-07-27 17:17:49.390 Transition to ASP-INACTIVE LOADSHARE (RC=none)
05-07-27 17:17:49.390 AS INACTIVE NTFY PDU Transmitted (RC=none)
05-07-27 17:17:49.405 ASPACTIVE PDU Received (RC=none)
05-07-27 17:17:49.405 ASPACTIVEACK PDU Transmitted (RC=none)
05-07-27 17:17:49.405 Transition to ASP-ACTIVE LOADSHARE (RC=none)
05-07-27 17:17:49.405 AS ACTIVE NTFY PDU Transmitted (RC=none)
05-07-27 17:17:50.405 ASP INACT NTFY PDU Transmitted (ASP ID = 0x00000005)
05-07-27 17:17:50.405 ASP ACT NTFY PDU Transmitted (ASP ID = 0x00000005)
05-07-27 17:17:52.730 ASP FAILURE NTFY PDU Transmitted (ASP ID = 0x00000003)

UALOG command complete
;

```

pass:loc=1105:cmd="ualog s7000"

Command Accepted - Processing

```
rlghncxa03w 05-07-27 08:10:00 EST EAGLE5 34.0.0
pass:loc=1105:cmd="ualog s7000"
```

;

```
rlghncxa03w 05-07-27 08:10:00 EST EAGLE5 34.0.0
PASS: Command sent to card
```

;

```
rlghncxa03w 05-07-27 08:10:00 EST EAGLE5 34.0.0
```

UALOG command in progress

;

```
rlghncxa03w 05-07-27 08:10:00 EST EAGLE5 34.0.0
```

```
UALOG: User Adapter state history log
      UA Version: 01
      ASP ID: 0x00000007
      User Adapter Implemented: SUA RFC
      Current settings: -i service ua
```

Date	Time	Event
05-07-27	19:45:33.265	CLDT PDU Transmitted(RC=0000000001)
05-07-27	19:48:07.490	ASPINACTIVE PDU Received(RC=none)
05-07-27	19:48:07.490	ASPINACTIVEACK PDU Transmitted(RC=0000000002)
05-07-27	19:48:07.490	Transition to ASP-INACTIVE LOADSHARE(RC=0000000002)
05-07-27	19:48:07.490	AS PENDING NTFY PDU Transmitted(RC=0000000002)
05-07-27	19:48:07.500	AS INACTIVE NTFY PDU Transmitted(RC=0000000002)
05-07-27	19:48:19.730	ASPACTIVE PDU Received(RC=0000000001)
05-07-27	19:48:19.730	ASPACTIVEACK PDU Transmitted(RC=0000000001)
05-07-27	19:48:19.730	Transition to ASP-ACTIVE LOADSHARE(RC=0000000001)
05-07-27	19:48:19.730	AS ACTIVE NTFY PDU Transmitted(RC=0000000001)

UALOG: command complete

;

When a M3UA or SUA PDU is received that contains one or more errors, a response error message is transmitted containing an error code. Error codes are recorded to and displayed in the UALOG only when the UA peer-to-peer message logging option is enabled (**-i ua**), as shown in the following example.:


```
pass:loc=1315:cmd="ualog assoc1315a1"
```

```
Command Accepted - Processing
```

```

rlghncxa03w 05-07-27 08:10:00 EST EAGLE5 34.0.0
pass:loc=1315:cmd="ualog assoc1315a1"
Command entered at terminal #3.
;

rlghncxa03w 05-07-27 08:10:00 EST EAGLE5 34.0.0
PASS: Command sent to card
;

rlghncxa03w 05-07-27 08:10:00 EST EAGLE5 34.0.0

UALOG command in progress
;

rlghncxa03w 05-07-27 08:10:00 EST EAGLE5 34.0.0

UALOG: User Adapter state history log
      UA Version: 01
      ASP ID:undefined
      User Adapter Implemented: M3UA RFC
      Current settings: -i service ua

Date      Time      Socket Event
-----
05-07-27  17:17:46.940  Management Socket Open
05-07-27  17:17:46.940  Transition to Connecting
05-07-27  17:17:49.375  Socket Connection Established
05-07-27  17:17:49.375  Transition to ASP-DOWN
05-07-27  17:17:49.390  ASPUP PDU Received (ASP ID = undefined)
05-07-27  17:17:49.390  ASPUPACK PDU Transmitted
05-07-27  17:17:49.390  Transition to ASP-INACTIVE LOADSHARE
05-07-27  17:17:49.390  AS INACTIVE NTFY PDU Transmitted
05-07-27  17:17:49.405  ASPACTIVE PDU Received
05-07-27  17:17:49.405  ASPACTIVEACK PDU Transmitted
05-07-27  17:17:49.405  Transition to ASP-ACTIVE LOADSHARE
05-07-27  17:17:49.405  AS ACTIVE NTFY PDU Transmitted
05-07-27  17:17:49.450  DAUD PDU Received
05-07-27  17:17:49.480  ERR PDU Transmitted (0x00000015)

UALOG command complete
;
```

Error Codes

NOTE: The following error codes are not used in M3UA: 0x02, 0x08, 0x1a, 0x1b, 0x1c, 0x10, 0x17, and 0x18

The following error codes can appear in the error messages:

0x01—Invalid Version

A message was received with an invalid or unsupported version. The error message contains the supported version in the Common Header.

0x03—Unsupported Message Class

A message was received with an unexpected or unsupported Message Class.

0x04—Unsupported Message Type

A message was received with an unexpected or unsupported Message Type.

0x05—Unsupported Traffic Handling Mode

This error is sent by a Signaling Gateway Process (SGP) if an Application Server Process (ASP) sends an ASP Active message with an unsupported Traffic Mode Type or a Traffic Mode Type that is inconsistent with the currently configured mode for the Application Server (AS).

0x06—Unexpected Message

This error message can be sent if a defined and recognized message is received that is not expected in the current state. In some cases the ASP might silently discard the message and not send an error message. Silent discard is used by an ASP if it received a DATA message from a signaling point while the ASP is in the ASP-INACTIVE state. If the unexpected message contains Routing Context, the Routing Context can be included in the error message.

0x07—Protocol Error

This error message is sent for any protocol anomaly, such as reception of a parameter that is syntactically correct but unexpected in the current situation.

0x09—Invalid Stream Identifier

A message is received on an unexpected SCTP stream (for example, a Management message was received on a stream other than 0).

0x0d—Refused - Management Blocking

An ASP Up or ASP Active message is received and the request is refused for management reasons (such as management lockout). If this error is in response to an ASP Active message, the Routing Context in the ASP Active message can be included in the error message.

0x0e—ASP Identifier Required

This error message is sent by an SGP in response to an ASP Up message that does not contain an ASP Identifier parameter when the SGP requires one. The ASP should resend the ASP Up message with an ASP Identifier.

0x0f—Invalid ASP Identifier

This error message is sent by an SGP in response to an ASP Up message with an invalid (for example, non-unique) ASP Identifier

0x11—Invalid Parameter Value

A message is received with an invalid parameter value (for example, a DUPU message was received with a Mask value other than 0).

0x12—Parameter Field Error

A message is received with a parameter that has a wrong length field.

0x13—Unexpected Parameter

A message contains an invalid parameter.

0x14—Destination Status Unknown

This error message can be sent if a DAUD is received at a Signaling Gateway (SG) asking for the availability/congestion status of a destination, and the SG does not provide the status (as in the case when the sender is not authorized to know the status). For this error, each invalid or unauthorized Point Code is included along with the Network Appearance and/or Routing Context associated with the Point Code.

0x15—Invalid Network Appearance

This error message is sent by an SGP if an ASP sends a message with an invalid (unconfigured) Network Appearance value. For this error, the invalid (unconfigured) Network Appearance is included in the Network Appearance parameter.

0x16—Missing Parameter

A message is received, and a mandatory parameter is not included in the message.

0x19—Invalid Routing Context

A message is received from a peer with an invalid (unconfigured) Routing Context value.
The invalid Routing Context is included in the error message.

0x1a—No Configured AS for ASP

A message is received from a peer without a Routing Context parameter, and it is not known by configuration data which Application Servers are referenced.

Reference Information

Summary of Range Values for :link Parameter.....	A-2
Possible Values for PST/SST/AST.....	A-3
PST.....	A-3
SST.....	A-4
AST.....	A-4
Point Code Formats and Conversion.....	A-5
ANSI Point Codes.....	A-5
ITU International Point Codes.....	A-8
ITU National Point Codes.....	A-9
Converting ITU National Point Code Formats.....	A-9
Introduction.....	A-9
Converting Single Number ITU National Point Codes.....	A-10
Converting Multiple-Part ITU National Point Codes.....	A-11
24-bit ITU-National Point Codes.....	A-11
Spare and Private Point Code Subtype Prefixes.....	A-12
Valid CIC Ranges for SI and MSU Types in Routing Key Static Entries.....	A-14
NAIV/NAI Mapping.....	A-15
NPV/NP Mapping.....	A-15
Cards that use the ent-card Command.....	A-16
Summary of Loopback Testing Commands and Functions.....	A-20
Tekelec-defined ISUP Normalization Variants.....	A-31

Summary of Range Values for :link Parameter

Table A-1 lists the valid **link** parameter range values signaling links assigned to each type of card for which a location can be specified in the command **loc** parameter. The commands that use these values refer to this table in their **link** parameter description.

NOTE: The link parameter is a synonym for the port parameter in signaling link definitions for a few EAGLE 5 ISS releases. Then the port parameter will be removed.

Table A-1. Summary of Ranges for **link** Parameter

Card	Link	Supported Application
Two-port LIM	A	All supported link applications. The two-port LIM supports the DS0 , OCU , V35 , ATM , E1 ATM , or E1 interface.
Two-port LIM	B	All supported link applications except ss7gx25 (X.25 signaling link), atmansi (ATM high-speed signaling link), atmitu (E1 ATM high-speed signaling link), or ss7ipgw and ipgwi (IP signaling link). The iplim and iplimi applications support sockets, M3UA/SCTP associations, or M2PA/SCTP associations on ports on dual-slot DCMs.
Multi-port LIM	A, B, A1, B1, A2, B2, A3, B3	The ss7ml GPL with DS0 interface at 56 Kb running the ss7ansi application only.
E1/T1 MIM	A, B, A1, B1, A2, B2, A3, B3	The ss7ml GPL running the ss7ansi or ccs7itu application.
IPLIMx with 8 Points (SSEDCM)	A, B, A1, B1, A2, B2, A3, B3	The iplim and iplimi GPLs running the iplim and iplimi applications with sockets, M2PA/SCTP associations, or M3UA/SCTP associations.
HC-MIM	A, B, A1-A31, B1-B31	Runs the ss7ansi or ccs7itu application. A maximum of 64 links can be assigned to each HC-MIM card.
HC-MIM for SE-HSL	A, B	Runs the ss7ansi or ccs7itu application. A maximum of 2 SE-HSL links can be assigned to a card.
E5-ENET	A, B, A1-A7, B1-B7	The iplim and iplimi GPLs running the iplim and iplimi applications with sockets, M2PA/SCTP associations, or M3UA/SCTP associations.

Table A-1. Summary of Ranges for **link** Parameter

Card	Link	Supported Application
E5-E1T1	A, B, A1-A15, B1-B15	Runs the ss7ansi or ccs7itu application. A maximum of 32 links can be assigned to each E5-E1T1 card.
E5-E1T1 for SE-HSL	A, B	Runs the ss7ansi or ccs7itu application. Only 1 SE-HSL link can be assigned to a card.

Possible Values for PST/SST/AST

This section lists the possible values for the primary state (PST), secondary state (SST), and associated state (AST) shown in the output of Report Status (rept-stat-) and Retrieve (rtrv-) commands.

Status can apply to the following types of entities (not all values are possible for every entity type):

card	terminal port
clock	serial port
cluster	but
TCP/IP data link signaling link	
subsystem	linkset
EPAP/ELAP	ACM

PST

Primary state possible values are the following:

IS-ANR—(In Service - Abnormal) The entity is in service but only able to perform a limited subset of its normal service functions.

IS-NR—(In Service - Normal) The entity is in service and handling all its normal service functions.

OOS-MA—(Out Of Service - Memory Administration) The entity is out of service because it has not been equipped.

OOS-MT—(Out Of Service - Maintenance) The entity is out of service and is not available to perform its normal service function. The maintenance system is actively working to restore the entity to service.

OOS-MT-DSBLD—(Out Of Service - Maintenance -Disabled) The entity is out of service and the maintenance system is preventing the entity from performing its normal service function.

SST

Secondary state possible values are the following:

ACTIVE—(Active) The entity is currently in use and is handling its normal service function as the primary service provider. (Master) The entity is currently in a master state in relation to its redundant unit.

ALLOWED—(Allowed) The entity is handling its normal service function.

AVAIL—(Available) Entity service is available to another entity.

BLOCKED—(Blocked) The entity has been manually prohibited from handling traffic.

BUSY—(Busy) The entity is handling the maximum traffic capacity and has no spare capacity for new service requests.

CONN—(Connect) The card's entity status is in connected state.

DISC—(Disconnect) The card's entity status is in disconnected state.

FAULT—(Fault) The entity has failed.

IDLE—(Idle) The entity is in use and has spare capacity for service. For a telnet terminal, this indicates a "ready for connection" status.

INHIBITED—(Inhibited) The entity has been manually prevented from performing its normal service function.

ISOLATED—(Isolated) The entity cannot be detected through software or hardware.

MANUAL—(Manual) The entity has manually been removed from service and is not carrying any traffic.

OVFLW-1—(Overflow) One entity cannot provide service to another entity due to service denial.

PROHIBIT—(Prohibited) The entity is not handling traffic because of a failure in the network.

RESTRICT—(Restricted) The traffic the entity is handling is restricted. The normal capacity or configuration is not being used because of a failure in the network. The normal capacity, functionality or configuration of an entity may be restricted during loading or synching of data. This can occur when the Measurements Platform has not yet been enabled.

STANDBY—(Standby) The entity is currently in use and is handling its normal service function as an alternate service provider if the primary service provider failed. For an IPSM card, Standby is the state just prior to Ready, while the card completes initializations.

STANDBY—(Slave) The entity is currently in a slave state in relation to its redundant unit.

TEST—(Test) The entity is currently in a test state.

UNAVAIL—(Unavailable) Entity service is unavailable to another entity.

UEQ—(Unequipped) The entity is not equipped.

UNBLOCKED—(Unblocked) The entity is handling its normal service function.

AST

Associated state possible values are the following:

----- (Blank)—The field may be left blank.

ACCESS—(Accessible) Traffic is being carried between the local entity and an adjacent, or remote, service provider. A full connection has been completed.

ACTIVE—(Active) The entity is currently in use and is handling its normal service function as the primary service provider. (This appears as an AST for the MPS when there is an alarm on it.)

ALMINH—(Alarm Inhibited) The alarm has been inhibited.

BIP ERROR—(Board Identity Prom) The entity has both daughterboard and motherboard prom error.

DB DIFF—(Database Different) The entity has a database difference.

D BIP ERR—(Daughterboard Identity Prom) The entity has a daughterboard prom error.

ENET FLT—(Ethernet fault) An Ethernet fault exists.

GWS—(Gateway Screening) Linkset has gateway screening. See the **rept-stat-ls** command.

INACCESS—(Inaccessible) Traffic is not being carried from the local entity to another service provider. A breakdown in a complete circuit has been detected.

LOCAL—(Local) Entity has become locally isolated.

M BIP ERR—(Motherboard Identity Prom) The entity has a motherboard prom error.

MPS UNAVL—The DSM card cannot communicate to an MPS.

STANDBY—(Standby) The entity is currently in use and is handling its normal service function as an alternate service provider if the primary service provider failed. (This appears as an AST for the MPS when there is an alarm on it.)

XX%—(Progress indicator for cards that are performing a warm restart and are currently data loading. Shows the percentage of tables that have been downloaded for GPLs that support a persistent LNP database (**sccp**, **ebdablm**).

Point Code Formats and Conversion

Many of the commands used for database configuration use point codes. This section describes the point code formats that the system supports. If you need additional information or procedural information, refer to the *Database Administration Manual - SS7*.

The system supports four different point code formats:

- ANSI point codes
- ITU International point codes
- ITU National point codes
- ITU National 24-bit point codes

Each format is described in further detail in the following sections.

ANSI Point Codes

ANSI point codes are made up of three groups of digits called the network indicator (*ni*), network cluster (*nc*), and network cluster member (*ncm*). The values for ANSI point codes depend on the value of the **pctype** parameter of the **chg-sid** command, either **ansi** or **other**.

If the **chg-sid:pctype** parameter is set to **ansi**, the range of values for an ANSI point code is as follows:

ni—**001-255**

nc—**001-255** (if *ni* = **001-005**)

—000-255, * (if *ni* = 006-255)
ncm—000-255

The following rules apply to provisioning ANSI point codes if the **chg-sid:pctype=ansi** parameter is specified:

- An *ni* value of **0** is not allowed (for example, **dpc=0-1-1** and **dpc=0-0-0** are not valid point codes).
- If the *ni* value is **1, 2, 3, 4**, or **5**, then the *nc* value cannot be **0** (for example, **dpc=5-0-1** is rejected).
- If the *ni* value is **1, 2, 3, 4**, or **5**, then network routing point codes are not allowed (for example, **dpc=4-*-*** is rejected).

If the **chg-sid:pctype** parameter is set to **other**, the ANSI point codes do not meet ANSI standards. The range of values for these ANSI point codes is as follows:

ni—000-255
nc—000-255, *
ncm —000-255, *

The following rules apply to provisioning ANSI point code if the **chg-sid:pctype=other** parameter is specified:

- An *ni* value of **0** is allowed, however **dpc=0-0-0** is rejected (for example, **dpc=0-1-1** is accepted).
- The *nc* value can be **0** for all values of *ni* (for example, **dpc=5-0-1** is accepted).
- Network routing point codes are allowed for all values of *ni* (for example, **dpc=4-*-*** is accepted).

An ANSI point code containing all zeros (**0-0-0**) is not a valid point code and cannot be entered into the database.

ANSI point codes support the Private (Internal) Point Code subtype prefix (**p-**). The prefix can be specified before the point code subfield values to indicate a Private Point Code (**p-5-0-1**, for example). See “Spare and Private Point Code Subtype Prefixes” on page A-12.

NOTE: Point codes specified by many commands, including those for site identification, routing keys, and LNP, are required to be full point codes. The asterisk values are not valid in the commands that specify these point codes. The command Dependencies sections identify the point codes that must be full point codes in the commands.

A range of values for a subfield is specified by separating the values that define the range by two ampersands (&&); for example, **ni=025&&100** specifies all network indicators for ANSI point codes from **25** through **100**.

The asterisk (*) point code value indicates a single cluster address for a cluster point code (for example, **20-2-***) or a network routing destination (**20-*-***). If * is used for the *nc* subfield, then * must be also be used for the *ncm* subfield.

A double asterisk (**) and a triple asterisk (***) can also be used for the *nc* and *ncm* subfields of the ANSI point code, but only for the **rtrv-dstn**, **rept-stat-dstn**, **rtrv-rte**, and **rept-stat-rte** commands. If *, **, or *** is used for the *nc* subfield, then *, **, or *** must be used for the *ncm* field

A double asterisk in the *nc* subfield of a network routing point code produces a summary report that shows all point code destinations that are members of the given network (**20-**-***). This includes the specified network routing point code (**20-002-***). The following example shows a command with two asterisks in the *nc* field of a network routing point code.

rtrv-dstn:dpca=20--***

```
rlghncxa03w 04-02-30 21:16:37 GMT EAGLE5 35.0.0
DPCA          CLLI          BEI ELEI  ALIASA          ALIASN/N24  DOMAIN
020-002-*    rlghncbb101 no   ---  -----  -----  SS7
020-002-045  rlghncbb101 no   ---  -----  -----  SS7
020-002-050  rlghncbb101 no   ---  -----  -----  SS7
```

```
SPC          NCAI
-----  no
```

```
Destination table is (11 of 2000) 1% full
Alias table is (4 of 12000) 1% full
RTRV-DSTN: MASP A - COMPLTD
```

;

A double asterisk in the *ncm* subfield of a cluster point code produces a summary report that shows all point code destinations residing in the given cluster (**20-2-**-***). This does not include the specified cluster point code (**20-2-***). The following example shows a command with two asterisks in the *ncm* subfield of a cluster point code.

rtrv-dstn:dpca=20-2--***

```
rlghncxa03w 04-02-30 21:16:37 GMT EAGLE5 31.8.0
DPCA          CLLI          BEI ELEI  ALIASA          ALIASN/N24  DOMAIN
020-002-045  rlghncbb100 no   ---  -----  -----  SS7
020-002-050  rlghncbb100 no   ---  -----  -----  SS7
```

```
SPC          NCAI
-----  no
```

```
Destination table is (11 of 2000) 1% full
Alias table is (4 of 12000) 1% full
RTRV-DSTN: MASP A - COMPLTD
```

;

Three asterisks in the *nc* subfield of the point code (**20-***-***) produces a summary report that shows all point code destinations residing in the given network including the specified network routing point code (**20-***-***). The following example shows a command with three asterisks in the *nc* subfield of a network routing point code.

rtrv-dstn:dpca=20-*-***

```

rlghncxa03w 04-02-30 21:16:37 GMT EAGLE5 31.8.0
DPCA        CLLI        BEI ELEI  ALIASI  ALIASN  DOMAIN
020-*-*     rlghncbb001 yes yes  -----  -----  SS7
020-002-*   rlghncbb001 yes yes  -----  -----  SS7
020-002-045 rlghncbb101 no  ---  -----  -----  SS7
020-002-050 rlghncbb101 no  ---  -----  -----  SS7

          SPC          NCAI
          -----      no

Destination table is (11 of 2000) 1% full
Alias table is (4 of 12000) 1% full
RTRV-DSTN: MASP A - COMPLTD
;

```

Three asterisks in the *ncm* subfield of a cluster point code (**20-2-*****) produces a summary report that shows all point code destinations residing in the given network cluster including the specified cluster point code (**20-2-***), but not including the network routing point code (**20-*-***). The following example shows a command with three asterisks in the *ncm* subfield of a cluster point code.

rtrv-dstn:dPCA=20-2-***

```

rlghncxa03w 04-02-30 21:16:37 GMT EAGLE5 31.8.0
DPCA        CLLI        BEI ELEI  ALIASA  ALIASN/N24  DOMAIN
020-002-*   rlghncbb000 no  ---  -----  -----  SS7
020-002-045 rlghncbb100 no  ---  -----  -----  SS7
020-002-050 rlghncbb100 no  ---  -----  -----  SS7

          SPC          NCAI
          -----      no

Destination table is (11 of 2000) 1% full
Alias table is (4 of 12000) 1% full
RTRV-DSTN: MASP A - COMPLTD
;

```

ITU International Point Codes

The ITU international point codes are made up of three groups of digits called *zone*, *area*, and *id*. The range of values for ITU International point codes are:

zone—**0-7**

area—**000-255**

id—**0-7**

An ITU international point code containing all zeros (**0-000-0**) is not a valid point code and cannot be entered into the database.

ITU international point codes support the Spare Point Code subtype prefix (**s-**). The prefix can be specified before the point code subfield values to indicate a Spare Point Code (**s-5-222-1**, for example). See “Spare and Private Point Code Subtype Prefixes” on page A-12.

ITU National Point Codes

The ITU national point code is a 14-bit integer. The point codes can be a single number up to five digits, or two, three, or four numbers (members) separated by dashes.

If the ITU National Duplicate Point Code (ITUDUPPC) feature is on, ITU national point codes can have group codes assigned to them. The point code is a 1- to 5-digit number. The group code is a two-character field ranging from **aa** to **zz** that is entered as the last subfield of the point code and is separated by a dash from the rest of the point code. An example is **12345-az**.

If the flexible point codes option is enabled (see the **chg-stpopts** command, **:npcfmti** parameter), an ITU national point code format consists of 2, 3, or 4 numbers separated by dashes (formatted as *m1-m2-m3-m4*). When the ITUDUPPC feature is also on, the format is *m1-m2-m3-m4-gc* with a group code. If one of the *m1*, *m2*, *m3*, *m4* members is set to zero bits, no value is entered for that position in the point code. For example, if the **npcfmti** parameter value is set to **3-8-3-0**, valid point codes would be **1-100-1-aa** with a group code, or **7-255-7** with no group code. See the tables in the **chg-stpopts** command description for valid member values and additional examples.

The following ranges of values are valid:

nnnnn—**0–16383**

nnnnn-gc—**0–16363**; group code is *aa-zz* (the ITUDUPPC feature must be on)

m1-m2-m3-m4—Each member represents the number of bits allowed in the corresponding position for a flexible ITU national point code. The range of each member is from **0** to **14**. Each member must be specified; the member value of **0** indicates that the position is not specified in the flexible point code. The sum of the member values must equal 14.

m1-m2-m3-m4-gc—Each member represents the number of bits allowed in the corresponding position for a flexible ITU national point code. The range of each member is from **0** to **14**. Each member must be specified; the member value of **0** indicates that the position is not specified in the flexible point code. The sum of the member values must equal 14. Group code is *aa-zz* (the ITUDUPPC feature must be on).

An asterisk value (*) is allowed only for the **rtrv-dstn** and **rtrv-rte** commands to retrieve ITU-N DPCs if the ITUDUPPC feature is on (for point codes with group codes). The node and group code cannot both be *. For example, **dpcn=12345-*** and **dpcn=**aa** are allowed, but **dpcn=**-*** is not allowed.

If flexible point codes are also used, all valid *m1*, *m2*, *m3*, and *m4* must all be either a number or an *. For example, **1-100-1-aa** and ***-*-*-aa** are allowed, but **1-*-*-aa** is not allowed.

ITU national point codes support the Spare Point Code subtype prefix (**s-**). The prefix can be specified before the point code subfield values to indicate a Spare Point Code (**s-12345** or **s-1-3-5-5-gc**, for example). See “Spare and Private Point Code Subtype Prefixes” on page A-12.

Converting ITU National Point Code Formats

Introduction

Gateway screening only allows ITU national point codes to be provisioned in the database by the enter, delete, or change gateway screening commands, and displayed by the gateway screening retrieve commands as a single number. If a format other than a single number (**14-0-0-0**) for the ITU national point code has been defined by the **npcfmti** parameter of the **chg-stpopts** command, the

ITU national point code must be converted into a single number so that it can be used by gateway screening.

For example, the format of the ITU national point code is **4-4-4-2** and you would like to add point code **7-7-7-1** into the allowed OPC screen. The point code **7-7-7-1** would have to be converted to a single number so that the point code can be added to the allowed OPC screen. To determine what multiple-part ITU national point code is represented by the single number ITU national point code in the gateway screening table, the single number point code must be converted to a multiple-part point code.

To convert a single number ITU national point code to a multiple-part point code, go to “Converting Single Number ITU National Point Codes” on page A-10.

To convert a multiple-part ITU national point code to a single number point code, go to “Converting Multiple-Part ITU National Point Codes” on page A-11.

For a definition of the different formats that can be used for ITU national point codes, see “ITU National Point Codes” on page A-8.

Converting Single Number ITU National Point Codes

To make this conversion, you will need to know the format of the ITU national point code. This can be verified in the NPCFMTI field of the **rtrv-stpopts** command output. For this example, the ITU national point codes **14781** and **695** are converted to point codes using the **3-8-3-0** format.

Convert a single number ITU national point code to a multiple-part ITU national point code as follows.

Procedure - Converting a Single Number ITU national point code to a multiple-part ITU national point code

- 1 Convert the point code to a binary number. This can be done with most scientific calculators. The number **14781** converts to the binary number 11100110111101.
The number **695** converts to the binary number 1010110111.

NOTE: Make sure the binary number contains 14 digits. If it does not, add leading zeros to the binary number to bring the total number of digits in the number to 14.

In this example, the binary equivalent for the decimal number 695 (1010110111) contains 10 digits; four zeros must be added to the beginning of the binary number. The resulting binary number is now 00001010110111.

- 2 Divide the binary number into the number of parts required by the format of the ITU national point code. For this example, the format is **3-8-3-0**. Because the last part of the point code format is **0**, the point code format contains only three parts. Divide the point code into three parts, the first part of the point code contains the first three digits of the 14-digit binary number, the second part of the point code contains the next eight digits of the 14-digit binary number, and the third part of the point code contains the last three digits of the 14-digit binary number. For this example, the binary numbers would be divided like this:

11100110111101 = 111 00110111 101
00001010110111 = 000 01010110 111

- 3 Convert each part of the point code into a decimal number using the same scientific calculator used in step 1 and separate each part of the point code with dashes. The results are as follows.

111 00110111 101 = 7-55-5

000 01010110 111 = 0-86-7

When the ITU national point codes are converted from single numbers to multiple-part point codes, the resulting value of the multiple-part point code depends on the point code format specified by the **npcfmti** parameter of the **chg-stpopts** command. When converting the single number point code **14781** to the point code format **3-8-3-0**, the resulting point code value is **7-55-5**. If point code **14781** is converted to the point code format **4-4-4-2**, the resulting point code value is **14-6-15-1**.

Converting Multiple-Part ITU National Point Codes

To make this conversion, you will need to know the format of the ITU national point code. This can be verified in the **npcfmti** field of the **rtrv-stpopts** command output. For this example, the ITU national point codes **7-55-5** and **0-86-7**, using the **3-8-3-0** point code format, are converted into a single number.

Convert multiple-part ITU national point codes to a single number as follows.

Procedure - Converting Multiple-Part ITU National Point Codes to a Single Number

- 1 Convert each part of the point code into a binary number using a scientific calculator. The results are as follows.

7-55-5 = 111 00110111 101

0-86-7 = 000 01010110 111

- 2 Combine each part of the point code into a single binary number as follows.

111 00110111 101 = 11100110111101

000 01010110 111 = 00001010110111

NOTE: If the binary number has any zeros at the beginning of the number, remove these zeros as they are not necessary.

In this example, the binary equivalent for the point code **0-86-7** (00001010110111) contains four zeros at the beginning of the binary number. When the leading zeros are removed from the binary number, the resulting binary number is now 1010110111.

- 3 Convert the binary number to a decimal number using the same scientific calculator used in step 1.

The binary number 11100110111101 converts to the decimal number **14781**.

The binary number 1010110111 converts to the decimal number **695**.

24-bit ITU-National Point Codes

The 24-bit ITU national point codes are made up of three groups of digits called *main signaling area*, *sub signaling area*, and *signaling point*. The valid values for 24-bit ITU national point codes are:

main signaling area —**000-255**

sub signaling area —**000-255**

signaling point—**000-255**

24-bit ITU national point codes support the Private (Internal) Point Code subtype prefix (**p-**). The prefix can be specified before the point code field values to indicate a Private Point Code (**p-2055-222-2011**, for example). See “Spare and Private Point Code Subtype Prefixes” on page A-12.

Spare and Private Point Code Subtype Prefixes

The Spare Point Code Support feature and the Internal Point Code Support feature provide optional point code subtype prefixes. The Spare Point Code feature must be enabled before a point code subtype prefix can be specified for a point code.

NOTE: The SEAS interface does not support point code subtype prefixes.

The values **p-**, **s-**, and **ps-** are valid point code subtype prefixes. The dash “-” separates the point code subtype prefix from the remainder of the point code. The prefixes are displayed in lower case. The syntax for the remainder of the point code remains the same.

The Spare Point Code prefix (**s-**) applies only to ITU-I and ITU-N point code domains (ITU-N24 point codes do not support the Spare Point Code prefix), to allow the EAGLE 5 ISS to fully support ITU National and International Spare Point Codes. Table A-3 lists the commands that support the Spare Point Code subtype prefix.

The Private (Internal) Point Code prefix (**p-**) applies to all point code domain types (including ITU-N24 point codes), to allow messages destined to the End Office Node to be routed from the inbound LIM to the outbound IPGWx. Table A-3 on page A-14 lists the commands that support the Private Point Code subtype prefix.

The subtype prefix **ps-** can be specified when the point code parameter supports both the spare and private point code prefixes.

Table A-2. Commands that support the Spare Point Code Prefix

Command	Description	Applicable Point Code Parameters
alm	Alarm	dpci and dpcn
appl-rtkey	Application Route Key	dpci and dpcn ; opci and opcn
cspc	Concerned Signaling Point Code	pci and pcn
dstn	Destination	spci and spcn ; dpci and dpcn ; and to Alias combinations, as shown in Figure 1.
ent-trace	Enter Trace	dpci and dpcn ; opci and opcn
gsmmap-scrn	GSM MAP Screening	npci and npcn
gsmopts	GSM Options	ppsmspci1 , ppsmspci2 , ppsmspcn1 , ppsmspcn2
gsms-opcode	GSM Short Message Services OP-Code	pci and pcn
gtt/gta	Global Title Translation/Global Title Address	pci and pcn

Table A-2. Commands that support the Spare Point Code Prefix

Command	Description	Applicable Point Code Parameters
ls	Linkset	apci and apcn
map	Mated Application	pci and pcn ; mpci and mpcn
mrn	Mated Relay Node	pci and pcn ; pci1 and pcn1 ; pci2 and pcn2 ; pci3 and pcn3 ; pci4 and pcn4
na	Network Appearance	type=ituis , type=ituns
pass	Pass Commands	Syntax for routing keys
rmt-appl	Remote Application	ipci and ipcn
rte	Route	dpci and dpcn
scr-aftpc	Gateway Screening Allowed Affected Point Code	pcst and pctype
scr-blkdp	Gateway Screening Blocked Destination Point Code	pcst and pctype
scr-blkop	Gateway Screening Blocked Origination Point Code	pcst and pctype
scr-cdpa	Gateway Screening Called Party (CDPA PC Destination) Point Code	pcst and pctype
scr-cgpa	Gateway Screening Calling Party (Origination) Point Code	pcst and pctype
scr-destfld	Gateway Screening Affected Destination (Concerned) Point Code	pcst and pctype
scr-dpc	Gateway Screening Destination Point Code	pcst and pctype
scr-opc	Gateway Screening Origination Point Code	pcst and pctype
sid	Site ID	True pci and pcn ; cpci and cpn ; ncpci and ncpn .
spc	Secondary Point Code	spci and spcn

Table A-3. Commands that support the Private Point Code Prefix

Command	Description	Applicable Point Code Parameters
dstn	Destination	spci and spcn ; dpc , dpca , dpci , and dpcn Does not apply to Aliases
ls	Linkset	If ipgwapc = yes , apc , apcn , apci , and apcn
gtt/gta	Global Title Translation	pc , pca , pci , and pcn
inh/unhb-alm	Destination alarm inhibit	dpc , dpca , dpci , and dpcn
rept-stat-cluster	Report Cluster Status	dpc and dpca
rept-stat-dstn	Report Destination Status	dpc , dpca , dpci , and dpcn
rmt-appl	Remote Application	ipc , ipca , ipci , and ipcn
rst-dstn	Restore Destination	dpc and dpca
rte	Route	dpc , dpca , dpci , and dpcn

Valid CIC Ranges for SI and MSU Types in Routing Key Static Entries

Table A-4 lists the valid CIC ranges for use with SI and MSU types in Routing Key table static entries.

Table A-4. Valid CIC Ranges for SI and MSU Types

SI	MSU for ANSI DPC	MSU for ITU DPC	Comments
4 (TUP)	N/A	CIC is 12 bits. Range is 0-4095.	The TUP protocol is used only in ITU networks.
5 (ISUP)	CIC is 14 bits. Range is 0-16383.	CIC is 12 bits. Range is 0-4095.	
13 (QBICC)	CIC is 32 bits. Range is 0-4294967295.		

NAIV/NAI Mapping

Table A-5 shows the mapping between the **naiv** and the **nai** parameters.

Table A-5. NAIV/NAI Mapping

NAIV	NAI	Description
0	–	Unknown
1	Sub	Subscriber Number
2	Rsvd	Reserved for national use
3	Natl	National significant number
4	Intl	International number
5–127	–	Spare

NPV/NP Mapping

Table A-6 shows the mapping between the **npv** and the **np** parameters.

Table A-6. NPV/NP Mapping

NPV	NP	Description
0	–	Unknown
1	E164	ISDN/telephony numbering plan
2	Generic	Generic numbering plan
3	X121	Data numbering plan
4	F69	Telex numbering plan
5	E210	Maritime mobile numbering plan
6	E212	Land mobile numbering plan
7	E214	ISDN/mobile numbering plan
8	Private	Private network or network-specific numbering plan
9–15	–	Spare

Cards that use the ent-card Command

Table A-7 contains information about cards that use the **ent-card** command for provisioning.

Table A-7. Valid **ent-card** Applications (**appl**) and Card Types (**type**)

Card Name (as shown on card label)	Part Number	Card Type (:type)	Application Type (:appl)	Maximum Cards in the Database
ACM-ENET	870-1008-02 870-1008-03 870-1008-04 870-1008-05	acmenet	stplan	32
DCM	870-1945-01 870-1945-02 870-1945-03 870-1984-01	dcm stc	ebdadcm vwxslan iplim iplimi ss7ipgw ipgwi eroute	1 for ebdadcm 32 for vwxslan 41 for iplim or iplimi Total of 64 ss7ipgw , ipgwi , or combination 32 for eroute (minimum of 17 for 500 links)
DCM (SSEDCM)	870-2372-01 870-2372-08 / 870-2372-13 (R)^ 870-2372-01	dcm stc	vwxslan iplim iplimi ss7ipgw ipgwi eroute	32 for vwxslan 100 for iplim or iplimi Total of 64 ss7ipgw , ipgwi , or combination 32 for eroute (minimum of 14 for 500 links)
EDCM-A (SSEDCM)	870-2508-01 / 870-2508-02 (R)	dcm stc	vwxslan iplim, iplimi ss7ipgw, ipgwi eroute	32 for vwxslan 100 for iplim or iplimi Total of 64 ss7ipgw , ipgwi , or combination 32 for eroute (minimum of 14 for 500 links)

Table A-7. Valid ent-card Applications (appl) and Card Types (type)

Card Name (as shown on card label)	Part Number	Card Type (:type)	Application Type (:appl)	Maximum Cards in the Database
DSM***	870-1984-02 870-1984-03 870-1984-05 870-1984-06 870-1984-08 870-1984-07 / 870-1984-13 (R) 870-1984-09 / 870-1984-15 (R)	dsm	vsccp gls	25 for vsccp 32 for 50,000 GTT (no MPS-based features on) 8 for gls
DSM 1G	870-2371-02 870-2371-06 870-2371-08 / 870-2371-13 (R)	ipsm	ips	3
EDSM 2G*	870-2372-03 870-2372-07 870-2372-09 / 870-2372-14 (R)	mcpm	mcp	250
E1/T1 MIM††	870-2198-01 870-2198-02 870-2198-03 870-2198-04 / 870-2198-07 (R)	lime1 limt1 limch	ss7ansi ccs7itu	250 for each application
E1 ATM	870-2455-01 870-2455-02 870-2455-05 / 870-2455-05 (R)	lime1atm	atmitu	115
E5-E1T1††	870-1873-02 / 870-1873-03 (R)	lime1 limt1	ss7ansi ccs7itu	250 for each application
E5-ENET	870-2212-02 / 870-2212-03 (R)	dcm	ss7ipgw ipgwi	Total of 64 ss7ipgw, ipgwi, or combination
EILA	870-2049-01 870-2049-02	limds0 limocu limv35	ss7ansi ss7gx25 ccs7itu	250 for each application

Table A-7. Valid **ent-card** Applications (**appl**) and Card Types (**type**)

Card Name (as shown on card label)	Part Number	Card Type (:type)	Application Type (:appl)	Maximum Cards in the Database
HC-MIM††	870-2671-01 / 870-2671-03 (R) 870-2671-02 / 870-2671-04 (R)	lime1 limt1	ss7ansi ccs7itu	125 for each application
ILA	870-1484-01 870-1484-02	limds0 limocu limv35	ss7ansi ss7gx25 ccs7itu	250 for each application
LIM** or LIM-AINF	870-1014-01 870-1014-02 870-1014-03 870-1014-04 870-1014-05 870-1014-06 870-1488-01 870-1488-02 870-1488-03 870-1488-04 870-1488-05 870-1488-06	limds0 limocu limv35	ss7ansi ss7gx25 ccs7itu	250 for each application
LIM-ATM	870-1293-02 870-1293-03 870-1293-06 870-1293-07 870-1293-08 870-1293010 / 870-1293-13 (R)	limatm	atmansi	115
LIM-DS0	870-1009-02 870-1009-03 870-1009-04 870-1485-01 870-1485-02 870-1485-03	limds0	ss7ansi ss7gx25 ccs7itu	250 for each application

Table A-7. Valid ent-card Applications (appl) and Card Types (type)

Card Name (as shown on card label)	Part Number	Card Type (:type)	Application Type (:appl)	Maximum Cards in the Database
LIM-E1††	870-1379-01	limocu limds0 limv35 lime1 limch	ss7ansi ccs7itu	250 for each application
LIM-OCU	870-1010-03 870-1010-04 870-1010-05 870-1486-02 870-1486-03 870-1486-04	limocu	ss7ansi ss7gx25 ccs7itu	250 for each application
LIM-V.35	870-1012-02 870-1012-03 870-1012-04 870-1487-01 870-1487-02 870-1487-03	limv35	ss7ansi ss7gx25 ccs7itu	250 for each application
MPL	870-2061-01 870-2061-03 870-2061-04 / 870-2061-06 (R)	limds0	ss7ansi	250 for ss7ansi
MPL-T	870-2061-02	limds0	ss7ansi	250 for ss7ansi
TSM-256†	870-1289-02 870-1289-03 870-1289-04 / 870-1289-06 (R)	tsm	sccp gls ebdablm	25 for sccp 8 for gls 1 for ebdablm
TSM-512	870-1290-02 870-1290-03 870-1290-04	tsm	sccp gls ebdablm	25 for sccp 8 for gls 1 for ebdablm
TSM-768	870-1291-02 870-1291-03 870-1291-04	tsm	sccp gls ebdablm	25 for sccp 8 for gls 1 for ebdablm

Table A-7. Valid ent-card Applications (appl) and Card Types (type)

Card Name (as shown on card label)	Part Number	Card Type (:type)	Application Type (:appl)	Maximum Cards in the Database
TSM-1024	870-1292-02 870-1292-03 870-1292-04	tsm	sccp gls ebdablm	25 for sccp 8 for gls 1 for ebdablm
* Though the system allows 250 MCPM cards, practical usage is 2. ** A LIM, EILA, or ILA is a link interface module using the AINF interface and can be installed in place of the LIM-DS0A, LIM-OCU, or LIM-V.35. It is configured in the database as either a LIM-DS0A, LIM-OCU, or LIM-V.35 card. *** If any MPS-based features are running in the system, up to 25 DSMs are allowed in the system. If only GTT is running, up to 32 DSMs can be used in the system with the 50,000 GTT feature. † TSMs or DSMs are required for the LNP feature. For more information about turning the LNP feature on, refer to the <i>LNP Feature Activation Guide</i> and the <i>Database Administration - LNP Manual</i>. †† For the E1 or T1 interface, either SS7 application (SS7ANSI or CCS7ITU) can be assigned to these cards. For more information on the E1 or T1 interface go to Chapter 3 “System Administration Procedures” in the <i>Database Administration Manual - SS7</i>. Part numbers followed by (R) are ROHS numbers. These numbers are equivalent to the non-ROHS numbers that they are paired with.				

Summary of Loopback Testing Commands and Functions

The following section, Table A-8 on page A-18, Table A-9 on page A-22, and Figure A-1 on page A-26 summarize the loopback testing commands and functions in the system.

The **tst-slk** command provides several methods for testing signaling links. The **loopback** parameter on the **tst-slk** command provides the ability to select **lxvr** (local transceiver), **oam**, **line**, **payload**, and **sltc** loopback tests. The **tst-slk** command will be rejected if a loopback test is not compatible with the link type.

- For low-speed links, the **lxvr** and **sltc** tests are allowed.
- For high-speed links (ATM), the **lxvr**, **oam**, **line**, **payload**, and **sltc** tests are allowed.
- For SS7IPGW and IPGWI DCMs, the **tst-slk** command is not supported.
- For IPLIMx DCMs, only the **loopback=sltc** test is allowed, and is allowed only for links having IPLIML2 types of SAALTALI or M2PA.
- For LIME1, LIMT1 and LIMCH cards, only the **loopback=sltc** test is allowed.

The **act-lbp** command activates test on one or more loopback points for testing data signaling link elements in one CCS7 transmission path. The maximum number of loopback points is 32.

For a single loopback point test, the parameters can be entered on the command line. If the parameters are not entered at the command line, the LFS database is used. For multiple loopback point tests, the LFS database must be used.

The **ent-lbp** command is used to create the loopback points in the LFS database. The LBPs may be entered in any order.

See the command descriptions in this manual for details on entering parameters and using the commands.

Table A-8. Loopback Testing Commands and Functions—LIME1 and LIMT1 Cards

Command/Function	LIME1 (within a channel)	T1 MIM (within a channel)	E1 MIM (within a channel)	T1 HC- MIM	E1 HC- MIM	Testing Limits
ent-lbp OAM Database for Multiple LFS points per LFS tests No impact on actual link behavior other than allowing multiple points.	n/a	Yes	n/a	Yes	n/a	32 points per card no limit on # of cards
act/dact-lbp EAGLE initiated Level 1 DS0 LFS tests Link State—Link is down Equipment tested—Level 1 element(s) in a signaling path Purpose—Test the error rates of a signaling path Description—Sends loopback code to establish loopback, then performs BERT test for a specified period of time. Typical use—To validate signaling path has acceptable error rate.	n/a	Yes	n/a	Yes	n/a	1024 concurrent tests per system 1 test per card
Remote Loopback FAR END initiated DS0 LFS Test Link State—Link can be up or down Equipment tested—Near end hardware up to level 2 (LXVR)	n/a	Yes	n/a	Yes	n/a	no limit on # of cards

Table A-8. Loopback Testing Commands and Functions—LIME1 and LIMT1 Cards

Command/Function	LIME1 (within a channel)	T1 MIM (within a channel)	E1 MIM (within a channel)	T1 HC- MIM	E1 HC- MIM	Testing Limits
and far end hardware level 1 interface Purpose—Auto—loopback a BERT test to the far end Description—When receiving a loopback code, deactivate the link and go into loopback Typical use—used to remotely test the far end with standard DS0 BERT tests						
tst-slk SLTC <i>EAGLE initiated</i> <i>Level 3 SS7 SLT</i> Link State—Link is up Equipment tested—Near and far end up to Level 3 Purpose—Test the entire path to the far end at Level 3 Description—This will send an SLTM out and expects an SLTA back. Typical use—To validate connectivity of a signaling path.	Yes	Yes	Yes	Yes	Yes	1024 concurrent link tests per system
tst-slk OAM <i>EAGLE initiated</i> <i>Level 1 ATM test</i> Link State—Link is down Equipment tested—Near and far end level 1 software and hardware including all hardware on the cards Purpose—Test the entire near and far end level 1 hardware by exchanging ATM cells Description—Sends OAM cells out to far end for 60 seconds if no errors, or 2	Yes	n/a	n/a	n/a	n/a	1024 concurrent link tests per system

Table A-8. Loopback Testing Commands and Functions—LIME1 and LIMT1 Cards

Command/Function	LIME1 (within a channel)	T1 MIM (within a channel)	E1 MIM (within a channel)	T1 HC- MIM	E1 HC- MIM	Testing Limits
minutes when errors are received. Typical use—Verifies ATM cells can be exchanged between 2 signaling points						
tst-slk LINE <i>EAGLE initiated</i> <i>Level 1-2 ATM test</i> Link State—Link is down Equipment tested—Near end hardware up to level 2 (LXVR) and far end hardware level 1 interface Purpose—Hardware continuity check between near and far end Description—The following steps occur: 1. Device under test (DUT) sends T1 bit-oriented code (BOC) to remote device 2. Remote device receives BOC and programs hardware 3. DUT attempts level 2 alignment 4. If link aligns (level 2), test passes, else test fails 5. DUT sends BOC to remote device to remove loopback 6. Remote device receives BOC and re-programs hardware	n/a	n/a	n/a	n/a	n/a	1024 concurrent link tests per system
NOTE: Note: If the DUT boots in the middle of sequence, the remote device just needs to have the link activated or de-						

Table A-8. Loopback Testing Commands and Functions—LIME1 and LIMT1 Cards

Command/Function	LIME1 (within a channel)	T1 MIM (within a channel)	E1 MIM (within a channel)	T1 HC- MIM	E1 HC- MIM	Testing Limits
activated and it returns to the original programming. Typical use—Used for a link in line timing to check continuity from the near end level 2 hardware to the level 1 interface at the far end						
tst-slk PAYLOAD <i>EAGLE</i> <i>initiated Level 1-2 ATM test</i> Link State-Link is down Equipment tested—Near end hardware up to level 2 (LXVR) and far end hardware level 1 interface Purpose—Hardware continuity check between near and far end Description—The following steps occur: 1. Device under test (DUT) sends T1 bit oriented code (BOC) to remote device 2. Remote device receives BOC and programs hardware 3. DUT attempts level 2 alignment 4. If link aligns (level 2), test passes, else test fails 5. DUT sends BOC to remote device to remove loopback 6. Remote device receives BOC and re-programs hardware Typical use—used for a link in master timing to check continuity from the near end level 2	n/a	n/a	n/a	n/a	n/a	1024 concurrent link tests per system

Table A-8. Loopback Testing Commands and Functions—LIME1 and LIMT1 Cards

Command/Function	LIME1 (within a channel)	T1 MIM (within a channel)	E1 MIM (within a channel)	T1 HC- MIM	E1 HC- MIM	Testing Limits
hardware to the level 1 interface at the far end						
tst-slk LXVR <i>EAGLE</i> <i>initiated Level 1 Internal card</i> <i>loopback</i> Link State—Link is down Equipment tested—Local card Purpose—Test the near end card only Description—This will test the near end card up through level 2. Typical use—To validate the card on the Eagle as good	Yes	Yes	Yes	No	No	1024 concurrent link tests per system

Table A-9. Loopback Testing Commands and Functions—LIM and ATM Cards

Command/Function	DS0 MPL	OCU	V. 35	E1- ATM	T1- ATM	IPLIM	IPGW	Testing Limits
ent-lbp OAM <i>Database for</i> <i>Multiple LFS points per LFS</i> <i>tests</i> No impact on actual link behavior other than allowing multiple points.	Yes	No	No	n/a	n/a	n/a	n/a	32 points per card no limit on # of cards
act/dact-lbp <i>EAGLE</i> <i>initiated Level 1 DS0 LFS</i> <i>tests</i> Link State—Link is down Equipment tested—Level 1 element(s) in a signaling path Purpose—Test the error rates of a signaling path Description—Sends loopback code to establish loopback, then performs	Yes	No	No	n/a	n/a	n/a	n/a	1024 concurrent tests per system 1 test per card

Table A-9. Loopback Testing Commands and Functions—LIM and ATM Cards

Command/Function	DS0 MPL	OCU	V. 35	E1- ATM	T1- ATM	IPLIM	IPGW	Testing Limits
BERT test for a specified period of time. Typical use—To validate signaling path has acceptable error rate.								
Remote Loopback FAR <i>END initiated DS0 LFS Test</i> Link State—Link can be up or down Equipment tested—Near end hardware up to level 2 (LXVR) and far end hardware level 1 interface Purpose-Auto—loopback a BERT test to the far end Description—When receiving a loopback code, deactivate the link and go into loopback Typical use—used to remotely test the far end with standard DS0 BERT tests	Yes	Yes	No	n/a	n/a	n/a	n/a	no limit on # of cards
tst-slk SLTC <i>EAGLE</i> <i>initiated Level 3 SS7 SLT</i> Link State—Link is up Equipment tested—Near and far end up to Level 3 Purpose—Test the entire path to the far end at Level 3 Description—This will send an SLTM out and expects an SLTA back. Typical use—To validate connectivity of a signaling path.	Yes	Yes	Yes	Yes	Yes	Yes(not M3UA)	n/a	1024 concurrent link tests per system

Table A-9. Loopback Testing Commands and Functions—LIM and ATM Cards

Command/Function	DS0 MPL	OCU	V. 35	E1- ATM	T1- ATM	IPLIM	IPGW	Testing Limits
tst-slk OAM EAGLE <i>initiated Level 1 ATM test</i> Link State—Link is down Equipment tested—Near and far end level 1 software and hardware including all hardware on the cards Purpose—Test the entire near and far end level 1 hardware by exchanging ATM cells Description—Sends OAM cells out to far end for 60 seconds if no errors, or 2 minutes when errors are received. Typical use—Verifies ATM cells can be exchanged between 2 signaling points	n/a	n/a	n/a	Yes	n/a	n/a	n/a	1024 concurrent link tests per system
tst-slk LINE EAGLE <i>initiated Level 1-2 ATM test</i> Link State—Link is down Equipment tested—Near end hardware up to level 2 (LXVR) and far end hardware level 1 interface Purpose—Hardware continuity check between near and far end Description—The following steps occur: 1. Device under test (DUT) sends T1 bit-oriented code (BOC) to remote device 2. Remote device receives BOC and programs hardware 3. DUT attempts level 2 alignment	n/a	n/a	n/a	n/a	Yes	n/a	n/a	1024 concurrent link tests per system


Table A-9. Loopback Testing Commands and Functions—LIM and ATM Cards

Command/Function	DS0 MPL	OCU	V. 35	E1- ATM	T1- ATM	IPLIM	IPGW	Testing Limits
4. If link aligns (level 2), test passes, else test fails 5. DUT sends BOC to remote device to remove loopback 6. Remote device receives BOC and re-programs hardware								
NOTE: Note: If the DUT boots in the middle of sequence, the remote device just needs to have the link activated or de-activated and it returns to the original programming. Typical use—Used for a link in line timing to check continuity from the near end level 2 hardware to the level 1 interface at the far end								
tst-slk PAYLOAD <i>EAGLE</i> <i>initiated Level 1-2 ATM test</i> Link State-Link is down Equipment tested—Near end hardware up to level 2 (LXVR) and far end hardware level 1 interface Purpose—Hardware continuity check between near and far end Description—The following steps occur: 1. Device under test (DUT) sends T1 bit oriented code (BOC) to remote device 2. Remote device receives BOC and programs hardware	n/a	n/a	n/a	n/a	Yes	n/a	n/a	1024 concurrent link tests per system

Table A-9. Loopback Testing Commands and Functions—LIM and ATM Cards

Command/Function	DS0 MPL	OCU	V. 35	E1- ATM	T1- ATM	IPLIM	IPGW	Testing Limits
3. DUT attempts level 2 alignment 4. If link aligns (level 2), test passes, else test fails 5. DUT sends BOC to remote device to remove loopback 6. Remote device receives BOC and re-programs hardware Typical use—used for a link in master timing to check continuity from the near end level 2 hardware to the level 1 interface at the far end								
tst-slk LXVR EAGLE <i>initiated Level 1 Internal card loopback</i> Link State—Link is down Equipment tested—Local card Purpose—Test the near end card only Description—This will test the near end card up through level 2. Typical use—To validate the card on the Eagle as good	Yes	Yes	Yes	Yes	Yes	No	No	1024 concurrent link tests per system

Figure A-1. ATM Loopback Tests

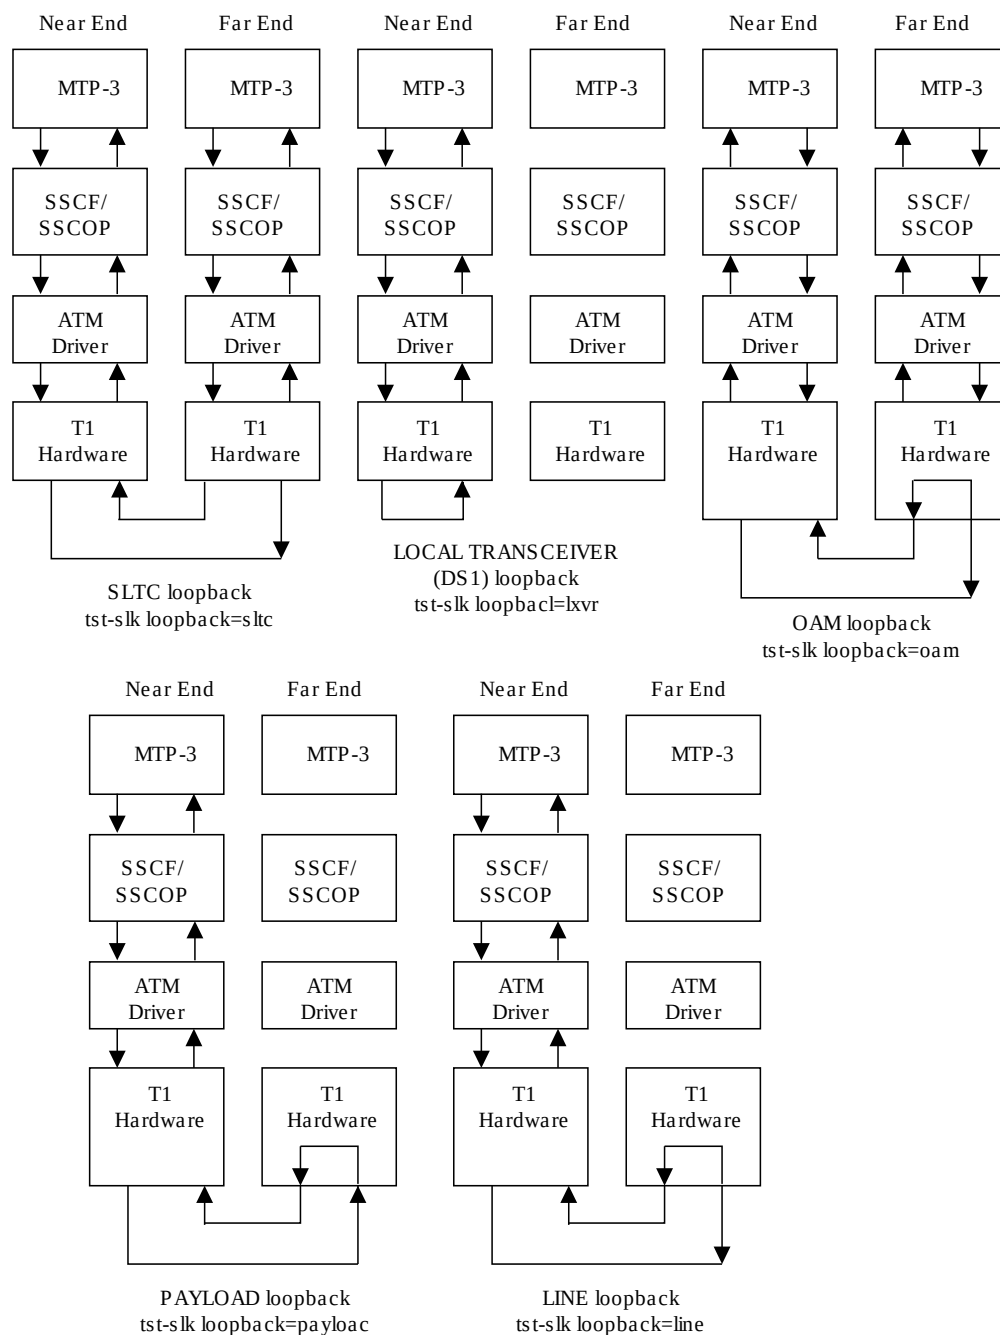

Tekelec-defined ISUP Normalization Variants

Table A-10 lists the available Tekelec-defined ISUP Normalization Variants, Feature Part Numbers, PSTN Categories, and PSTN IDs.

Table A-10. Tekelec-defined ISUP Normalization Variants

ISUP Variant	Part No.	PSTN Category	PSTN ID
ISUP Normalization	893000201	1	*
ITU Q.767 Normalization	893000501	1	1
ESTI V3 Normalization	893000601	1	2
UK PNO-ISC7 Normalization	893000401	1	3
German ISUP Normalization	893000301	1	4
French ISUP Normalization	893-0007-01	1	5
Sweden ISUP Normalization	893-0008-01	1	6
Belgium ISUP Normalization	893-0009-01	1	7
Netherlands ISUP Normalization	893-0010-01	1	8
Switzerland ISUP Normalization	893-0011-01	1	9
Austria ISUP Normalization	893-0012-01	1	10
Italy ISUP Normalization	893-0013-01	1	11
Ireland ISUP Normalization	893-0014-01	1	12
India ISUP Normalization	893-0015-01	1	13
Malaysia ISUP Normalization	893-0016-01	1	14
Vietnam ISUP Normalization	893-0017-01	1	15
South Africa ISUP Normalization	893-0018-01	1	16
Argentina ISUP Normalization	893-0019-01	1	17
Chile ISUP Normalization	893-0020-01	1	18
Venezuela ISUP Normalization	893-0021-01	1	19
Mexico ISUP Normalization	893-0022-01	1	20
Brazil ISUP Normalization	893-0023-01	1	21
Spain ISUP Normalization	893-0024-01	1	22
Colombia ISUP Normalization	893-0025-01	1	23

Table A-10. Tekelec-defined ISUP Normalization Variants

ISUP Variant	Part No.	PSTN Category	PSTN ID
Peru ISUP Normalization	893-0026-01	1	24
Hong Kong ISUP Normalization	893-0027-01	1	25
China ISUP Normalization	893-0028-01	1	26
Japan ISUP Normalization	893-0029-01	1	27
Korea ISUP Normalization	893-0030-01	1	28
Taiwan ISUP Normalization	893-0031-01	1	29
Philippines ISUP Normalization	893-0032-01	1	30
Singapore ISUP Normalization	893-0033-01	1	31
Australia ISUP Normalization	893-0034-01	1	32
Reserved for future definition by Tekelec		2 through 4095	
Available for user-defined categories		4095 through 65535	

B

Acronyms and Abbreviations

AAL	ATM Adaptation Layer
AAL5	ATM Adaptation Layer 5
AAL5CP	ATM Adaptation Layer 5 Common Port
AATM	ATM Applique
ACG	Automatic Call Gapping
ACM	Application Communications Module
ADJ DPC	Adjacent Destination Point Code
AI	Address Indicator
AIN	Advanced Intelligent Network
AINF	Application Interface Applique
ANSI	American National Standards Institute
AP	Application Processor
APC	Adjacent Point Code
ARP	Address Resolution Protocol
AS	Application Server; a logical entity serving a specific Routing Key
ASM	Application Services Module
ASP	Application Server Process
ATI	Any Time Interrogation
ATM	Asynchronous Transfer Mode
ATMANSI	The application software for the ATM (high-speed) SS7 signaling links
ATM HSL	Asynchronous Transfer Mode High Speed Link
ATMM	ATM Layer Management
AVL	Availability Measurements report
AVLD	Daily Availability measurements report
AVLDTH	Day-to-Hour Availability measurements report
BCSM	Basic Call State Model
BIP	Board Identification PROM
BITS	Building Integrated Timing System
BLM	Bulk Load Module
BPHCAP	The application software used by the application processor and the IMT processor of the LIMATM
BPDCM	The application software for flash memory management on the DCM card.
BSD	Berkeley Software Distribution
BSN	Backward Sequence Number
CAS	Channel Associated Signaling
CCM	Command Class Management
CCS	Common Channel Signaling
CCS7	Common Channel Signaling System #7

CCS7ITU	The application software for the ITU SS7 signaling links
CDPA	Called Party Address
CDPN	Called Party Number
CGPA	Calling Party Address
CF	Control Frame
CIC	Circuit Identification Code
CLLI	Common Language Location Identifier
CLU	Network Cluster
CM	Cluster Management
CNCF	Calling Name Conversion Facility
CP	Communication Processor
CPU	Central Processing Unit
CRC	Cyclic Redundancy Check
CRMD	Cluster Routing and Management Diversity
CRP	Circular Route Prevention
CSL	Common Screening List
CSPC	Concerned Signaling Point Code Group
CSU	Channel Service Unit
DB	Database
DCM	Database Communications Module
DIP	Dual In-Line Package
DIX	Digital/Intel/Xerox de facto standard for Ethernet Media Access Control Type
DN	Dialed or Directory Number
DPC	Destination Point Code
DRAM	Dynamic Random Access Memory
DS0	Digital Signal Level - 0
DSM	Database Services Module
DSU	Data Service Unit
DTA	Database Transport Access
E5IS	Eagle 5 Integrated Monitoring Support
EBDA	Enhanced Bulk Download and Audit
EDR	Efficient Data Representation
EF	Extension Frame
EGTT	Enhanced Global Title Translation
EIA	Electronic Industries Association
EILA	Enhanced Integrated LIM Applique
EIR	Equipment Identity Register
ELAP	Eagle LNP Application Processor
EMP	Eagle Monitoring Protocol
EMSALM	Element Management System Alarm Monitor
ENET	Ethernet
EOAM	Enhanced Operations, Administration, and Maintenance
EOAP	Enhanced OSS Application Process
EPAP	Eagle Provisioning Application Processor
EPM	Embedded Processor Module (E5-E1T1 and E5-ENET cards are EPM-based cards)
EPROM	Erasable PROM
ESP	Extended Services Platform
FAK	Feature Access Key
FAP	Fuse and Alarm Panel
FAS	Frame Alignment Signal
FISU	Fill In Signal Unit
FPBA	Frame Power Budget Alarm
FPCR	Full Point Code Routing
FPT	Frame Power Threshold

Acronyms and Abbreviations

FSN	Forward Sequence Number
FTA	File Transfer Area
FTP	File Transfer Protocol
FTRA	FTP-based Table Retrieve Application
GDB	GSM Real-Time Database
G-Flex	GSM Flexible Numbering
G-Port	GSM Mobile Number Portability
GLS	Generic Loading Service
GMSC	Gateway MSC
GPL	Generic Program Load
GPSM	General Purpose Service Module
GSL	Generic Software Load
GSM	Global System for Mobile Communications
GTA	Global Title Address
GTI	Global Title Indicator
GTT	Global Title Translation
GTWY	Gateway Administration measurements report
GWS	Gateway Screening
GWSA	Gateway Screening Application
GWSM	Gateway Screening Messages
HC-MIM	High Capacity Multi-Channel Interface Module
HDB3	High Density Bipolar 3 encoding
HIPR	High Speed IMT Packet Router
HLR	Home Location Register
HOMERN	Home Network Routing Number Prefix
HMUX	High-Speed Multiplexer
HRN	Home Routing Number
HSL	High-Speed Links
IAM	Initial Address Message
IC	Integrated Circuit
ICMP	Internet Control Message Protocol
ID	Identity
IDP	Initial Detection Point
IEC	International Escape Code
IETF	Internet Engineering Task Force
IGM	IS41 GSM Migration
IGTTLS	Intermediate Global Title Translation Load Sharing
IL	Incremental loading
ILA	Integrated LIM Applique
IMEI	International Mobile Equipment Identifier
IMF	Integrated Message Feeder
IMSI	International Mobile Station Identifier
IMT	Inter-processor Message Transport
IN	Intelligent Network
INAP	Intelligent Network Application Part
INET	Internet
INH	Inhibit
INP	INAP-based Number Portability
INSL	In-Network Subscriber List
IP	Internet Protocol
IPGWI	An ITU version of SS7IPGW
IPGWx	Point to multi-point IP Transport GPL, referring to SS7IPGW (ANSI) and IPGWI (ITU)

IPLIM	The application software used by the DCM card for TCP/IP point-to-point connectivity for ANSI point codes.
IPLIMI	The application software used by the DCM card for TCP/IP point-to-point connectivity for ITU point codes.
IPLIMx	Point to point IP Transport GPL, referring to IPLIM (ANSI) and IPLIMI (ITU)
IPMX	IMT Power and Multiplexer
IPS	Internet Protocol Services
IPSM	Internet Protocol Services Module
IS-41	Interim Standard 41, same as and interchangeable with ANSI-41
IS-ANR	In Service - Abnormal
ISDN	Integrated Services Digital Network
IS-NR	In Service - Normal
ISUP	ISDN User Part
ITU	International Telecommunications Union
ITUDUPPC	ITU National Duplicate Point Code
JIP	Jurisdiction Indicator Parameter
LAN	Local Area Network
LB	Load Balancing
LBP	Loop Back Point
LC	Logical channel
LED	Light Emitting Diode
LFS	Link Fault Sectionalization
LIM	Link Interface Module
LIM-AINF	Link Interface Module with the AINF interface
LIM-ATM	LIM with ATM interface
LIM-DS0	LIM with DS0 Applique
LIM-E1	LIM with E1 Applique
LIM-OCU	LIM with Office Channel Unit Applique
LIM-V35	LIM with V35 Interface
LNP	Local Number Portability
LNPMR	LNP Message Relay
LNPQS	LNP Query Service
LNP SMS	LNP Short Message Service
LPE	Logical Processing Element
LPO	Link Processor Outage
LRN	Location Routing Number
LS	Link Set
LSA	Link Status Alignment
LSB	Least Significant Bit (bit 1)
LSL	Low-Speed Link
LSMS	Local Service Management System
LSN	Link Set Name
LSO	Link Status out of Service
LSPE	Link Status Proving Emergency
LSPN	Link Status Proving Normal
LSR	Link Status Ready
LSSU	Link Status Signal Unit
M2PA	SS7 MTP2-User Peer-to-Peer Adaptation Layer
M3UA	SS7 MTP3-User Adaptation Layer
MAAL	Management ATM Adaptation Layer
MAP	Mobile Application Part
MAPSCRN	GSM MAP Screening measurements report
MCAP	MAS Communication Application Processor Card
MCC	Mobile Country Code

Acronyms and Abbreviations

MCM	Maintenance Communication Module
MCP	Measurement Collection Processor
MCPM	Measurement Collection and Polling Module
MDAL	Maintenance Disk and Alarm (card)
MDN	Mobile Dialed Number
MGT	Mobile Global Title
MGTT	Modified Global Title Translation
MF	Miscellaneous Frame
MIM	Multi-Channel Interface Module
MIN	Mobile Identification Number
MLPRST	MTP Low Priority Route Set
MNP	Mobile Number Portability
MNP SMS	Portability Check for Mobile Originated SMS
MNP-SRF	Signaling Relay Function for support of Mobile Number Portability
MPC	Multiple Point Code feature
MPL	Multi-port LIM
MPS	Multi-Purpose Server
MR	Message Relay
MRN	Message Reference Number Mated Relay Node
MS	Mobile Station
MSB	Most Significant Bit
MSC	Mobile Switching Center
MSAR	Memory space accounting reporting
MSISDN	Mobile Station ISDN Number or Mobile Switching ISDN Number
MSRN	Mobile Station Roaming Number
MSU	Message Signal Unit
MTCD	Maintenance Daily measurements report
MTCDTH	Maintenance Day-to-Hour measurements report
MTCH	Maintenance Hourly (marginal) measurements report
MTCS	Maintenance Status (link/link set) measurements report
MTP	Message Transfer Part
MTP2	Message Transfer Part, Level 2
NAI	Nature of Address Indicator
NCAI	Nested Cluster Allowed Indicator
NCR	Nested Cluster Routing
NEC	National Escape Code
NFAS	Non-Frame Alignment Signal
NI	Network Indicator
NIC	Network Information Center
NID	Network Identification
NM	Network Management
NP	Number Plan
NPA	Numbering Plan Area
NPAC	Number Portability Administration Center
NPANXX	Numbering Plan Area and Exchange
NRT	Network Routing
NSAP	Network Service Access Point
NSE	Network Security Enhancement
NSFI	Next Screening Function Indicator
NSP	Network Services Part
NSPC	New Secondary Point Code
OAM	Operations, Administration, and Maintenance
OAP	Operation System Support Application Processor
OAMP	Operations, Administration and Maintenance Part

OCU	Office Channel Unit
OOS-MA	Out of Service - Memory Administration
OOS-MT	Out of Service - Maintenance
OOS-MT-DSBLD	Out of Service - Maintenance Disabled
OPC	Origination Point Code
OPCODE	Operation Code
OPNAME	Operation Name
OSI	Open Systems Interconnection
OSS	Operations Systems Support
PC	Point Code
PCR	Preventive Cyclic Retransmission
PCS	Personal Communications Service (North American GSM)
PDBA	Provisioning Database Application
PDBI	Provisioning Database Interface
PDN	Packet Data Network
PDS	Persistent Device States
PLNP	PCS 1900 LNP
PLNPQS	LNPQS support provided for PLNP
PPSMS	Prepaid Short Message Service Intercept
PROM	Programmable Read-Only Memory
PSEL	Presentation Selector
PST	Primary State for Maintenance
PSTN	Public Switched Telephone Network
PVC	Permanent Virtual Circuit
PVN	Private Virtual Network
Q3	Q.3 Protocol
RAM	Random Access Memory
RBASE	Record Base measurements report
RC	Relative Cost
RI	Routing Indicator
RFC	Request for Comments
RMC	Remote Maintenance Center
RMTTP	Reliable Multicast Transport Protocol
RN	Routing Number
RTDB	DSM Real-time database
RTT	Round Trip Time
SAAL	Signaling ATM Adaptation Layer
SAPC	Secondary Adjacent Point Code
SCCP	Signaling Connection Control Part
SCM	System Configuration Manager
SCMG	SCCP Management
SCP	Service Control Point
SCRSET	Screen Set
SCSI	Small Computer System Interface
SCTP	Stream Control Transmission Protocol
SE-HSL	Synchronous E1 High Speed Link
SEAS	Signaling Engineering and Administration System
SIB	Status Indication "Busy"
SIE	Status Indication "Emergency" Alignment
SIN	Status Indication "Normal Alignment"
SIO	Service Information Octet
SIO	Status Indication "Out of Alignment"
SIOS	Status Indication "Out of Service"
SK	Service Key

Acronyms and Abbreviations

SKTS	Service Key/TeleService List
SLK	Signaling Link
SLS	Signaling Link Selection
SLSCI	Signaling Link Conversion Indicator
SLTA	Signaling Link Test Acknowledgement
SLTM	Signaling Link Test Message
SMS	Short Message Service
SMSC	Short Message Service Center
SMSMR	Prepaid Short Message Service
SNAI	Service Nature of Address Indicator
SNM	Signaling Network Management
SNR	Subsystem Normal Routing
SOR	Support for Optimal Routing
SORP	Socket Option Registration Primitive
SPC	Secondary Point Code Signaling Point Code
SRF	Signaling Relay Function
SRI	Send Routing Information
SRVSEL	Service Selector
SS7	Signaling System #7
SS7ANSI	The application software for the ANSI SS7 signaling links
SS7GX25	The application software for the X.25/SS7 gateway feature
SS7IPGW	The application software used by the DCM card for TCP/IP point-to-multipoint capability
SSA	Subsystem Allowed (An SCCP management message)
SSEL	Session Selector
SSN	SS7 Subsystem Number
SSP	Service Switching Point
SSU	Status Signal Unit
ST	Stop Digit—BCD value 15 (0xF)—used to indicate the end of dialing in some applications
STC	Sentinel Transport Card
STP	Signal Transfer Point
STP LAN	The application software for the STP LAN feature
SUA	SS7 SCCP-User Adaptation Layer
SVC	Switched Virtual Circuit
TALI	Transport Adapter Layer Interface (RFC 3094)
TCP	Transmission Control Protocol
TCAP	Transaction Capabilities Application Part
TDM	Terminal Disk Module
TFA	Transfer Allowed
TFC	Transfer Congested (traffic)
TFP	Transfer Prohibited
TFR	Transfer Restricted
TLNP	Triggerless LNP
TOS	Type of Service
TPS	Transactions Per Second
TRA	Traffic Restarting Allowed
TRBL	Trouble
TRW	Traffic Restarting Waiting
TSC	Time Slot Counter Synchronization
TSM	Translation Services Module
TT	Translation Type
TUP	Telephone User Part
TV	Ticket Voucher

Acronyms and Abbreviations

TVG	Group Ticket Voucher
UA	IETF User Adaptation Layers
UAM	Unsolicited Alarm Message
UART	Universal Asynchronous Receiver - Transmit
UDP	User Datagram Protocol
UDTS	Unit Data Transfer Service
UI	User Interface
UID	User ID
UIM	Unsolicited Informational Message
UPD	Update
VGTT	Variable Length GTT
VLR	Visitor Location Register
VMSC	Voice Mail Service Center Visited Mobile Switching Center
VSCCP	VxWorks Signaling Connection Control Part
WNP	Wireless Number Portability
WNPQS	Wireless Number Portability Query Service
X.25 DE	X.25 Destination Entity
XGTT	Expanded GTT (GTT Table Expansion)
XMAP	Expanded MAP Table

Index

act-alm-trns 5-1
act-cdl 5-2
act-dlk 5-3
act-echo 5-4
act-file-trns 5-5
act-flash 5-7
act-ftp-trns 5-10
act-gpl 5-11
action commands 4-8
act-lbp 5-14
act-lpo 5-20
act-oap-config 5-21
act-slk 5-25
act-upgrade 0
act-user 5-27
administration of User IDs and passwords 4-15
alarm levels 4-2
alloc-mem 5-28
alw-card 5-29
alw-imt 5-32
alw-map-ss 5-33
alw-slk 5-34
alw-trm 5-35
arp 6-2
arp 6-2
arrow key operations, terminal 4-11
aslog 6-5
aslog 6-5
asplog 6-6
asplog 6-6
assocrtt 6-12
assocrtt 6-12
AST possible values A-3
aud-data 5-36
banner format, output 4-14
blk-slk 5-40
canc-alm-trns 5-42
canc-cmd 5-42
canc-dlk 5-44
canc-echo 5-45
canc-lnp-dpcer 5-46
canc-lnp-tnrpt 5-47
canc-lpo 5-47
canc-slk 5-49
canc-user 5-50
cdu 0
chg-acg-mic 5-50
chg-acg-noc 5-52
chg-appl-rtkey 5-53
chg-appl-sock 5-63
chg-as 5-66
chg-asp 5-67
chg-assoc 5-68
chg-atm-lps 5-73
chg-attr-seculog 5-76
chg-bip-fld 0
chg-bip-rec 0
chg-cmd 5-77
chg-cmdclass 5-80
chg-csl 5-81
chg-ctrl-feat 5-85
chg-db 5-88
chg-dcmps 5-98
chg-dstn 5-99
chg-e1 5-108
chg-eisopts 5-111
chg-feat 5-112
chg-frm-pwr 5-121
chg-ftp-serv 5-122
chg-gpl 5-124
chg-gsmmap-scrn 5-127
chg-gsmopts 5-132
chg-gsms-opcode 5-141
chg-gta 5-144
chg-gtcnv 5-157
chg-gtt 5-159
chg-gttset 5-168
chg-gttset 5-172
chg-gtw-stp 5-173
chg-gws-actset 5-173
chg-gws-redirect 5-177
chg-inpopts 5-179
chg-ip-card 5-184
chg-ip-lnk 5-186
chg-isupvar-attrib 5-189
chg-l2t 5-193
chg-l3t 5-196
chg-lbp 5-203
chg-lnp-lrn 5-205
chg-lnp-npanxx 5-207
chg-lnpopts 5-215
chg-lnp-refnum 0
chg-lnp-serv 5-209
chg-lnp-sub 5-211
chg-lnp-ttmap 5-214
chg-ls 5-218

Index

- chg-m2pa-tset 5-230
- chg-map 5-233
- chg-meas 5-240
- chg-measopts 5-242
- chg-mrn 5-248
- chg-netopts 5-256
- chg-oap-config 5-257
- chg-pid 5-262
- chg-prefix 5-262
- chg-pstn-pres 5-265
- chg-rte 5-267
- chg-rtx 5-270
- chg-sccpopts 5-280
- chg-sccp-serv 5-274
- chg-scr-aftpc 5-282
- chg-scr-blkdpc 5-287
- chg-scr-blkopc 5-293
- chg-scr-cdpa 5-300
- chg-scr-cgpa 5-305
- chg-scr-destfld 5-311
- chg-scr-dpc 5-316
- chg-scr-isup 5-321
- chg-scr-opc 5-323
- chg-scrset 5-335
- chg-scr-sio 5-328
- chg-scr-tt 5-333
- chg-secu-dflt 5-337
- chg-secu-trm 5-342
- chg-sg-opts 5-346
- chg-sid 5-351
- chg-slt 5-360
- chg-srvsel 5-361
- chg-ss7opts 5-366
- chg-ss-appl 5-365
- chg-stpopts 5-367
- chg-t1 5-380
- chg-tbl 0
- chg-th-alm 5-382
- chg-th-sccp 5-384
- chg-trm 5-385
- chg-ttmap 5-393
- chg-uaps 5-394
- chg-user 5-398
- chg-x25-dstn 5-402
- chg-x25-rte 5-404
- chg-x25-slk 5-405
- chk-unref-ent 5-407
- classes, command 4-16
- clr-disk-stats 0
- clr-imt-stats 5-410
- Command Aborted messages 4-14
- Command Accepted messages 4-13
- command classes, configuration of 4-16
- Command Completed messages 4-13
- Command Executed messages 4-13
- Command Failed messages 4-13
- Command Rejected messages, summary 4-13
- Command Response messages 4-14
- commands
 - about 4-8
 - command classes 4-16
 - keywords 4-9
 - output banner format 4-14
 - parameters 4-9
 - reports and output message types generated by 4-13
- commands
 - duplicate parameters in 4-9
- commands, action 4-8
- commands, entering 4-8
- commands, functions performed by 4-8
- configuration
 - of command classes 4-16
 - of terminals and printers 4-2
- conn-imt 5-412
- connmgr 6-14
- connmgr 6-14
- Converting ITU National Point Code Formats A-9
- copy-disk 5-413
- copy-fta 5-415
- copy-gpl 5-417
- copy-isupvar-attrib 5-418
- copy-meas 5-419
- copy-seculog 5-420
- copy-tbl 0
- critical alarms 4-2
- dact-alm-trns 5-422
- dact-cdl 5-423
- dact-cmd 5-424
- dact-echo 5-426
- dact-lbp 5-426
- dact-rstst 5-428
- dact-slk 5-429
- dact-user 5-430
- disc-imt 5-431
- disk drives, removable cartridge 4-2
- disp-bip 0
- disp-bp 0
- disp-disk-dir 0
- disp-disk-stats 0
- disp-fta-dir 5-432
- disp-lba 0
- disp-mem 0
- dlt-acg-mic 5-432
- dlt-acg-noc 5-433
- dlt-appl-rtkey 5-434
- dlt-appl-sock 5-439
- dlt-as 5-440

- dlt-asp 5-441
- dlt-assoc 5-441
- dlt-bp 0
- dlt-card 5-442
- dlt-csl 5-443
- dlt-cspc 5-446
- dlt-dlk 5-449
- dlt-dstn 5-449
- dlt-e1 5-453
- dlt-frm-pwr 5-454
- dlt-fta 5-455
- dlt-ftp-serv 5-456
- dlt-gsmmap-scrn 5-457
- dlt-gsms-opcode 5-458
- dlt-gsmssn-scrn 5-459
- dlt-gta 5-459
- dlt-gtcnv 5-464
- dlt-gtt 5-466
- dlt-gttset 5-468
- dlt-gttset 5-469
- dlt-gws-redirect 5-470
- dlt-homern 5-471
- dlt-home-smsc 5-471
- dlt-ip-host 5-472
- dlt-ip-node 5-473
- dlt-ip-rte 5-475
- dlt-lbp 5-476
- dlt-lnp-lm 5-477
- dlt-lnp-npanxx 5-478
- dlt-lnp-serv 5-479
- dlt-lnp-sp 5-481
- dlt-lnp-sub 5-481
- dlt-ls 5-483
- dlt-map 5-484
- dlt-mrn 5-486
- dlt-na 5-493
- dlt-prefix 5-494
- dlt-pstn-pres 5-495
- dlt-rmt-appl 5-496
- dlt-rte 5-498
- dlt-rtx 5-502
- dlt-sccp-serv 5-506
- dlt-scr-aftpc 5-511
- dlt-scr-blkdpc 5-514
- dlt-scr-blkopc 5-517
- dlt-scr-cdpa 5-520
- dlt-scr-cgpa 5-523
- dlt-scr-destfld 5-527
- dlt-scr-dpc 5-529
- dlt-scr-isup 5-532
- dlt-scr-opc 5-533
- dlt-scrset 5-539
- dlt-scr-sio 5-536
- dlt-scr-tt 5-538
- dlt-shlf 5-540
- dlt-slk 5-540
- dlt-spc 5-542
- dlt-split-npa 5-544
- dlt-srvsel 5-545
- dlt-ss-appl 5-546
- dlt-subnetid 5-547
- dlt-t1 5-548
- dlt-tt 5-549
- dlt-ttmap 5-550
- dlt-uim-acthresh 5-551
- dlt-user 5-552
- dlt-vendid 5-552
- dlt-x25-dstn 5-553
- dlt-x25-rte 5-553
- documentation
 - admonishments 1-8
- drklog 6-21
- drklog 6-21
- duplicate parameters in command 4-9
- Element Management System Alarm Monitor (EMSALM) 4-7
- Element Management System Alarm Monitor (EMSALM) 4-7
- EMSALM terminals 4-7
- EMSALM terminals 4-7
- enable-ctrl-feat 5-554
- ent-acg-mic 5-561
- ent-acg-noc 5-562
- ent-appl-rtkey 5-563
- ent-appl-sock 5-570
- ent-as 5-572
- ent-asp 5-573
- ent-assoc 5-574
- ent-bp 0
- ent-card 5-577
- ent-csl 5-582
- ent-cspc 5-586
- ent-dlk 5-589
- ent-dstn 5-590
- ent-e1 5-601
- entering commands 4-8
- ent-frm-pwr 5-605
- ent-ftp-serv 5-606
- ent-gsmmap-scrn 5-607
- ent-gsms-opcode 5-613
- ent-gsmssn-scrn 5-618
- ent-gta 5-618
- ent-gtcnv 5-630
- ent-gtt 5-633
- ent-gttset 5-641
- ent-gttset 5-644
- ent-gws-redirect 5-646
- ent-homern 5-649

Index

ent-home-smsc 5-649
ent-ip-host 5-650
ent-ip-node 5-651
ent-ip-rte 5-653
ent-lbp 5-655
ent-lnp-lrn 5-657
ent-lnp-npanxx 5-660
ent-lnp-serv 5-662
ent-lnp-sp 5-664
ent-lnp-sub 5-664
ent-ls 5-667
ent-map 5-676
ent-mrn 5-684
ent-na 5-691
ent-pstn-pres 5-692
ent-rmt-appl 5-694
ent-rte 5-696
ent-rtx 5-700
ent-scr-aftpc 5-704
ent-scr-blkdpc 5-708
ent-scr-blkopc 5-712
ent-scr-cdpa 5-717
ent-scr-cgpa 5-721
ent-scr-destfld 5-725
ent-scr-dpc 5-728
ent-scr-isup 5-732
ent-scr-opc 5-734
ent-scrset 5-744
ent-scr-sio 5-738
ent-scr-tt 5-742
ent-serial-num 5-746
ent-shlf 5-747
ent-sid 5-748
ent-slk 5-750
ent-spc 5-763
ent-split-npa 5-765
ent-srvsel 5-766
ent-ss-appl 5-771
ent-subnetid 5-772
ent-t1 5-773
ent-trace 0
ent-tt 5-775
ent-ttmap 5-777
ent-user 5-778
ent-vendid 5-782
ent-x25-dstn 5-784
ent-x25-rte 5-785
expired password procedure 4-20
flash-card 5-788
format, output banner 4-14
format-disk 5-791
ftptest 6-33
ftptest 6-33
GPSM-II card IMASP) 4-1
I/O devices 4-2
inh-alm 5-795
inh-card 5-803
inhibited alarms 4-3
inh-imt 5-804
inh-map-ss 5-805
inh-slk 5-807
inh-trm 5-809
init-card 5-810
init-flash 5-816
init-imt-gpl 5-819
init-mux 5-821
init-network 5-822
init-oap 5-825
init-sys 5-826
intrusion alert 4-17
keyboard functions 4-9
key sequences
 KSR terminal 4-9
 VT320 terminal 4-9
keywords, command 4-9
KSR function on VT320 terminals 4-4
KSR terminals
 function on VT320 devices 4-4
 key sequences 4-9
linkinfo 6-35
linkinfo 6-35
link Parameter, Summary of Range Values for A-2
lock 5-831
login 5-831
 procedure for password expired 4-20
 procedure for User ID-password already being
 used 4-20
 procedure for User ID-password not accepted
 4-18
 procedure to change password at first login 4-19
 security checks 4-16
logout 5-832
logout procedure 4-22
Maintenance and Administration Subsystem
 Processors - See MASP cards 4-1
Maintenance Disk and Alarm card - See MDAL card
 4-1
major alarms 4-2
MASP cards 4-1
MDAL card
 function of 4-1
 removable cartridge drive 4-2
minor alarms 4-2
msucount 6-40
msucount 6-40
msuroute 6-57
msuroute 6-57
msutrace 6-63

- msutrace 6-63
- netstat 6-80
- netstat 6-80
- nslookup 6-93
- nslookup 6-93
- output banner format 4-14
- output groups, unsolicited messages 4-14
- output messages, types of 4-13
- parameters, command 4-9
- pass 5-833
- Pass-Through Commands 6-1
- password
 - change at first login 4-19
 - change expired at login 4-20
- passwords, rules for administering 4-15
- ping 6-96
- ping 6-96
- ping 6-100
- printers
 - configuration of 4-2
 - connection to TDM 4-3
 - directing 4-14
- procedures
 - logout 4-22
- procedures, login
 - change password at first login 4-19
 - password expired 4-20
 - User ID-password already being used 4-20
 - User ID-password not accepted 4-18
- PST/AST/SST possible values A-3
- related publications 1-3
- removable cartridge disk drives 4-2
- rept-ftp-meas 5-834
- rept-imt-info 5-838
- rept-imt-lvl1 5-859
- rept-imt-lvl2 5-872
- rept-meas 5-876
- rept-stat-alm 5-888
- rept-stat-applsock 5-896
- rept-stat-as 5-897
- rept-stat-asp 5-899
- rept-stat-assoc 5-900
- rept-stat-card 5-903
- rept-stat-cdl 5-929
- rept-stat-cdt 5-930
- rept-stat-clk 5-931
- rept-stat-cluster 5-936
- rept-stat-db 5-942
- rept-stat-dlk 5-957
- rept-stat-dstn 5-958
- rept-stat-e1 5-970
- rept-stat-eroute 5-972
- rept-stat-gpl 5-976
- rept-stat-imt 5-985
- rept-stat-iptps 5-988
- rept-stat-lfs 5-991
- rept-stat-lnp 5-993
- rept-stat-ls 5-1000
- rept-stat-lsms 5-1003
- rept-stat-meas 5-1005
- rept-stat-mps 5-1006
- rept-stat-mux 5-1016
- rept-stat-ndc 5-1017
- rept-stat-rte 5-1018
- rept-stat-rtkey 5-1030
- rept-stat-rtx 5-1030
- rept-stat-sccp 5-1036
- rept-stat-seas 5-1047
- rept-stat-seculog 5-1048
- rept-stat-slan 5-1051
- rept-stat-slk 5-1054
- rept-stat-sys 5-1062
- rept-stat-t1 5-1067
- rept-stat-trbl 5-1070
- rept-stat-trm 5-1075
- rept-stat-tstslk 5-1077
- rept-stat-user 5-1078
- rept-stat-xlist 5-1079
- rept-x25-meas 5-1080
- Response Messages 4-14
- rls-alm 5-1083
- rmv-card 5-1083
- rmv-imt 5-1085
- rmv-trm 5-1086
- rst-card 5-1087
- rst-dstn 5-1089
- rst-imt 5-1090
- rst-trm 5-1090
- rtrv-acg-mic 5-1091
- rtrv-acg-noc 5-1093
- rtrv-appl-rtkey 5-1094
- rtrv-appl-sock 5-1103
- rtrv-as 5-1106
- rtrv-asp 5-1106
- rtrv-assoc 5-1107
- rtrv-atm-lps 5-1113
- rtrv-atm-prm 5-1118
- rtrv-attr-seculog 5-1119
- rtrv-bip 5-1120
- rtrv-card 5-1124
- rtrv-cmd 5-1129
- rtrv-cmdclass 5-1132
- rtrv-csl 5-1133
- rtrv-cspc 5-1139
- rtrv-ctrl-feat 5-1141
- rtrv-dcmps 5-1146
- rtrv-dlk 5-1147
- rtrv-dstn 5-1149

Index

rtrv-e1 5-1176
rtrv-eisopts 5-1179
rtrv-feat 5-1180
rtrv-frn-pwr 5-1182
rtrv-ftp-serv 5-1183
rtrv-gpl 5-1186
rtrv-gsmmap-scrn 5-1192
rtrv-gsmopts 5-1199
rtrv-gsms-opcode 5-1203
rtrv-gsmssn-scrn 5-1207
rtrv-gta 5-1208
rtrv-gtcnv 5-1222
rtrv-gtt 5-1223
rtrv-gttset 5-1235
rtrv-gttset 5-1239
rtrv-gtw-stp 5-1243
rtrv-gtwy-acthresh 5-1243
rtrv-gtwy-prmtrs 5-1244
rtrv-gws-actset 5-1245
rtrv-gws-redirect 5-1246
rtrv-homern 5-1248
rtrv-home-smsc 5-1247
rtrv-inopts 5-1249
rtrv-ip-card 5-1252
rtrv-ip-host 5-1253
rtrv-ip-lnk 5-1254
rtrv-ip-node 5-1256
rtrv-ip-rte 5-1260
rtrv-isupvar-attrb 5-1261
rtrv-l2t 5-1263
rtrv-l3t 5-1265
rtrv-lbp 5-1268
rtrv-lnp-dbts 5-1271
rtrv-lnp-dpcer 5-1272
rtrv-lnp-lrn 5-1276
rtrv-lnp-npanxx 5-1279
rtrv-lnpopts 5-1294
rtrv-lnp-serv 5-1282
rtrv-lnp-sp 5-1283
rtrv-lnp-sub 5-1285
rtrv-lnp-tnrpt 5-1290
rtrv-lnp-ttmap 5-1291
rtrv-log 5-1296
rtrv-ls 5-1306
rtrv-m2pa-tset 5-1316
rtrv-map 5-1320
rtrv-measopts 5-1328
rtrv-meas-sched 5-1326
rtrv-mem 5-1330
rtrv-mrn 5-1331
rtrv-na 5-1337
rtrv-netopts 5-1337
rtrv-oap-config 5-1338
rtrv-obit 5-1339
rtrv-prefix 5-1349
rtrv-pstn-pres 5-1351
rtrv-rmt-appl 5-1352
rtrv-rte 5-1353
rtrv-rtx 5-1370
rtrv-sccpopts 5-1388
rtrv-sccp-serv 5-1383
rtrv-scr-aftpc 5-1389
rtrv-scr-blkdpc 5-1394
rtrv-scr-blkopc 5-1400
rtrv-scr-cdpa 5-1405
rtrv-scr-cgpa 5-1410
rtrv-scr-destfld 5-1416
rtrv-scr-dpc 5-1421
rtrv-scr-isup 5-1427
rtrv-scr-opc 5-1430
rtrv-scrset 5-1443
rtrv-scr-sio 5-1436
rtrv-scr-tt 5-1440
rtrv-secu-dflt 5-1447
rtrv-seculog 5-1455
rtrv-secu-trm 5-1449
rtrv-secu-user 5-1451
rtrv-serial-num 5-1460
rtrv-sg-opts 5-1461
rtrv-shlf 5-1462
rtrv-sid 5-1464
rtrv-slk 5-1472
rtrv-slt 5-1479
rtrv-spc 5-1480
rtrv-split-npa 5-1485
rtrv-srvsel 5-1486
rtrv-ss7opts 5-1492
rtrv-ss-appl 5-1491
rtrv-stp 5-1493
rtrv-stpopts 5-1505
rtrv-subnetid 5-1509
rtrv-t1 5-1510
rtrv-tbl-capacity 5-1513
rtrv-th-alm 5-1517
rtrv-th-sccp 5-1518
rtrv-trbl 5-1518
rtrv-trbltx 5-1520
rtrv-trm 5-1525
rtrv-tt 5-1539
rtrv-ttmap 5-1542
rtrv-uaps 5-1545
rtrv-uim-acthresh 5-1546
rtrv-user 5-1547
rtrv-vendid 5-1550
rtrv-x25-dstn 5-1551
rtrv-x25-rte 5-1552
rtrv-x25-slk 5-1556
sctp 6-100

- send-msg 0
- set-date 5-1557
- set-gtwy-acthresh 5-1558
- set-mem 0
- set-scrrej-prmtrs 5-1559
- set-time 5-1560
- set-uim-acthresh 5-1562
- sockrtt 6-105
- sockrtt 6-105
- sockstate 6-107
- sockstate 6-107
- SST possible values A-3
- system security
 - command classes 4-16
 - intrusion alert 4-17
 - login security checks 4-16
- TDM card
 - as part of MASP 4-1
 - connection of terminals and printers to 4-3
- telnet terminals 4-4
- terminal disk module - See TDM card 4-1
- terminals
 - arrow key operations 4-11
 - configuration of 4-2
 - connection to TDM 4-3
 - directing unsolicited messages to 4-14
 - EMSALM 4-7
 - EMSALM 4-7
 - telnet 4-4
 - VT320 4-2
- traceroute 6-110
- traceroute 6-110
- tst-bip 5-1563
- tst-disk 5-1564
- tst-dlk 5-1567
- tst-e1 5-1568
- tst-imt 5-1570
- tst-slk 5-1572
- tst-t1 5-1577
- ualog 6-120
- ualog 6-120
- ublk-slk 5-1578
- unhb-alm 5-1580
- unhb-slk 5-1586
- unlock 5-1588
- unsolicited messages
 - definition 4-14
 - output groups 4-14
- User IDs
 - already in use at login 4-20
 - not accepted at login 4-18
 - rules for administering 4-15
- User Names - See User IDs 4-15
- vfy-lnp-refnum 0
- VT320 terminals 4-2
 - key sequences 4-9
 - KSR function on 4-4

