

Tekelec EAGLE[®] 5
Integrated Signaling System

Release 40.1

Commands Manual

910-5544-001 Rev B

April 2009



TEKELEC

Copyright 2009 Tekelec®

All Rights Reserved.

Printed in U.S.A.

Notice

Information in this documentation is subject to change without notice. Unauthorized use or copying of this documentation can result in civil or criminal penalties.

Any export of Tekelec products is subject to the export controls of the United States and the other countries where Tekelec has operations.

No part of this documentation may be reproduced, translated, or transmitted in any form or by any means, electronic or mechanical, including photocopying or recording, for any purpose without the express written permission of an authorized representative of Tekelec.

Other product names used herein are for identification purposes only, and may be trademarks of their respective companies.

RoHS 5/6 - As of July 1, 2006, all products that comprise new installations shipped to European Union member countries will comply with the EU Directive 2002/95/EC "RoHS" (Restriction of Hazardous Substances). The exemption for lead-based solder described in the Annex will be exercised. RoHS 5/6 compliant components will have unique part numbers as reflected in the associated hardware and installation manuals.

WEEE - All products shipped to European Union member countries comply with the EU Directive 2002/96/EC, Waste Electronic and Electrical Equipment. All components that are WEEE compliant will be appropriately marked. For more information regarding Tekelec's WEEE program, contact your sales representative.

Trademarks

The Tekelec logo, EAGLE, G-Flex, G-Port, IP7, IP7Edge, and IP7 Secure Gateway are registered trademarks of Tekelec. TekServer, A-Port, and V-Flex are trademarks of Tekelec. All other trademarks are the property of their respective owners.

Patents

This product is covered by one or more of the following U.S. and foreign patents:

U.S. Patent Numbers:

5,732,213; 5,953,404; 6,115,746; 6,167,129; 6,324,183; 6,327,350; 6,456,845; 6,606,379; 6,639,981; 6,647,113; 6,662,017; 6,735,441; 6,745,041; 6,765,990; 6,795,546; 6,819,932; 6,836,477; 6,839,423; 6,885,872; 6,901,262; 6,914,973; 6,940,866; 6,944,184; 6,954,526; 6,954,794; 6,959,076; 6,965,592; 6,967,956; 6,968,048; 6,970,542; 6,987,781; 6,987,849; 6,990,089; 6,990,347; 6,993,038; 7,002,988; 7,020,707; 7,031,340; 7,035,239; 7,035,387; 7,043,000; 7,043,001; 7,043,002; 7,046,667; 7,050,456; 7,050,562; 7,054,422; 7,068,773; 7,072,678; 7,075,331; 7,079,524; 7,088,728; 7,092,505; 7,108,468; 7,110,780; 7,113,581; 7,113,781; 7,117,411; 7,123,710; 7,127,057; 7,133,420; 7,136,477; 7,139,388; 7,145,875; 7,146,181; 7,155,206; 7,155,243; 7,155,505; 7,155,512; 7,181,194; 7,190,702; 7,190,772; 7,190,959; 7,197,036; 7,206,394; 7,215,748; 7,219,264; 7,222,192; 7,227,927; 7,231,024;

7,242,695; 7,254,391; 7,260,086; 7,260,207; 7,283,969; 7,286,516; 7,286,647; 7,286,839; 7,295,579; 7,299,050;
7,301,910; 7,304,957; 7,318,091; 7,319,857; 7,327,670

Foreign Patent Numbers:

EP1062792; EP1308054; EP1247378; EP1303994; EP1252788; EP1161819; EP1177660; EP1169829;
EP1135905; EP1364520; EP1192758; EP1240772; EP1173969; CA2352246

Ordering Information

For additional copies of this document, contact your Tekelec sales representative.

Table of Contents

Chapter 1. Introduction

Overview.....	1-1
Where to Find Information in This Manual.....	1-2
Scope and Audience.....	1-3
Related Publications.....	1-3
Customer Care Center.....	1-3
Documentation Packaging, Delivery, and Updates.....	1-5
Documentation Admonishments.....	1-6
Locate Product Documentation on the Customer Support Site on the Customer Support Site.....	1-6

Chapter 2. Alphabetical List of Commands

Chapter 3. Commands Listed by Class

Chapter 4. Using Commands

Introduction.....	4-1
Maintenance and Administration Subsystem.....	4-1
Legacy Control Cards.....	4-1
General Purpose Service Module II (GPSM-II) Card.....	4-2
Terminal Disk Module (TDM) Card.....	4-2
Maintenance Disk and Alarm (MDAL) Card.....	4-2
E5-based Control Cards.....	4-2
Maintenance Communication Application Processor (E5- MCAP) Card	4-2
Terminal Disk Module (E5-TDM) Card.....	4-3
Maintenance Disk and Alarm (E5-MDAL) Card.....	4-3
Input/Output Devices	4-3
Terminals and Printers.....	4-3
Terminal and Printer Connections.....	4-5
KSR Function on VT320 Terminal Devices.....	4-5
KSR Configuration.....	4-5
Changing the Mode Of Operation.....	4-5
Requirements.....	4-6
Telnet Terminals.....	4-6
SEAS Terminals.....	4-8
Element Management System Alarm Monitor Terminals.....	4-8
About Commands.....	4-9
Entering Commands.....	4-9
Action Commands.....	4-9
Command Keywords and Parameters	4-10
Keyboard Functions.....	4-11
Arrow Key Operation.....	4-13

Up Arrow Key.....	4-13
Down Arrow Key.....	4-14
Right Arrow Key.....	4-14
Left Arrow Key.....	4-14
Command Output and Messages.....	4-15
Command Output Banners.....	4-16
System Security.....	4-17
Rules for User ID and Password Administration.....	4-17
Command Classes.....	4-18
Login Security Checks.....	4-18
Intrusion Alert.....	4-18
Login Procedure.....	4-19
Login Error Messages.....	4-22
Logout Procedure	4-23

Chapter 5. Commands

Chapter 6. Debug Commands

Chapter 7. Pass-Through Commands

Introduction.....	7-1
Command Conventions.....	7-1

Appendix A. Reference Information

Summary of Range Values for :link Parameter.....	A-2
Possible Values for PST/SST/AST.....	A-3
PST.....	A-3
SST.....	A-4
AST.....	A-4
Point Code Formats and Conversion.....	A-5
ANSI Point Codes.....	A-6
ITU International Point Codes.....	A-7
ITU National Point Codes.....	A-7
Converting ITU National Point Code Formats.....	A-8
Introduction.....	A-8
Converting Single Number ITU National Point Codes.....	A-9
Converting Multiple-Part ITU National Point Codes.....	A-9
24-bit ITU-National Point Codes.....	A-10
Spare and Private Point Code Subtype Prefixes.....	A-10
Valid CIC Ranges for SI and MSU Types in Routing Key Static Entries.....	A-13
NAIV/NAI Mapping.....	A-13
NPV/NP Mapping.....	A-14
Cards that use the ent-card Command.....	A-14
Summary of Loopback Testing Commands and Functions.....	A-19

Appendix B. Acronyms and Abbreviations

Index

List of Figures

Figure 4-1.	System Terminal User Display.....	4-4
Figure 4-2.	Telnet Terminal Selection and Login.....	4-7
Figure 4-3.	Output Banner Format.....	4-16
Figure 5-1.	Eagle Input and Internal Clocks with TDM-GTI.....	5-75
Figure 5-2.	The chg-db:action=backup:dest=fixed Command.....	5-91
Figure 5-3.	The chg-db:action=restore:src=fixed Command.....	5-92
Figure 5-4.	The chg-db:action=backup:dest=remove Command.....	5-93
Figure 5-5.	The chg-db:action=repair Command.....	5-93
Figure 5-6.	The chg-db:action=restore:src=remove Command.....	5-94
Figure 5-7.	Remote Backup or Restore.....	5-94
Figure 5-8.	Prefix Table References.....	5-344
Figure A-1.	ATM Loopback Tests.....	A-29

List of Tables

Table 1-1. Manual Organization.....	1-2
Table 4-1. Action Commands and Their Associated System Entity	4-10
Table 4-2. Keyboard Functions.....	4-11
Table 5-1. Parameters That Must Be Provisioned Prior to Updating OAP for SEAS	5-23
Table 5-2. Other Data Required for Updating the OAP Configuration.....	5-24
Table 5-3. Performance Impact of act-oap-config parameters	5-25
Table 5-4. Commands for which canc-cmd Halts Processing and Output.....	5-43
Table 5-5. Valid Parameter Combinations for Routing Key Types using the chg-appl-rtkey command.	5-58
Table 5-6. IP Signaling Capacities.....	5-65
Table 5-7. Alias Combination Matrix.....	5-103
Table 5-8. Link Alignment Performance.....	5-122
Table 5-9. EIR Response Type (eirrsptype) Values.....	5-139
Table 5-10. Valid Parameter Combinations for the chg-gtt Routing Parameters	5-180
Table 5-11. Gateway Screening Stop Action Definitions.....	5-189
Table 5-12. DRANAIV/DRANAI Mapping.....	5-196
Table 5-13. DRANPV/DRANP Mapping.....	5-197
Table 5-14. Examples of parameter combinations for the chg-inpopts command	5-199
Table 5-15. Valid Subnet Mask Values.....	5-202
Table 5-16. Valid Subnet Mask Values.....	5-206
Table 5-17. Default Subnet Mask Values.....	5-206
Table 5-18. Incoming SLS Bit Rotation	5-254
Table 5-19. SLS Bit Rotation	5-258
Table 5-20. Link Alignment Performance.....	5-266
Table 5-21. Maximum limit of True PC entries.....	5-282
Table 5-22. Allowed PC and Alternate RI Mate PC Combinations.....	5-283
Table 5-23. Impacts on Data Collection of Turning On the 15 Minute Measurements Option	5-295
Table 5-24. Allowed PC and Alternate RI Mate PC Combinations.....	5-307
Table 5-25. Valid PVN Subnet Mask Values.....	5-312
Table 5-26. Acceptable nsfi and si parameter combinations (chg-scr-sio)....	5-412
Table 5-27. Valid combinations for the h0/h1 andnh0/nh1 parameters (chg-scr-sio).....	5-412
Table 5-28. Additional Valid chg-scr-sio Parameter Combinations.....	5-413
Table 5-29. NAIV/NAI Mapping.....	5-444
Table 5-30. NP/NPV Mapping.....	5-444
Table 5-31. NPCFMTI Parameter - ITU National Point Code Values.....	5-456
Table 5-32. Point Code Format Examples.....	5-456
Table 5-33. Valid and Default UAPS Parameter Values	5-489

Table 5-34. DRANAIV/DRANAI Mapping.....	5-499
Table 5-35. DRANPV/DRANP Mapping	5-499
Table 5-36. Performance for the copy-meas command.....	5-521
Table 5-37. Commands For Which dact-cmd Aborts Processing and Output.....	5-524
Table 5-38. Valid Combinations for the h0/h1 and nh0/nh1 Parameters (chg-scr-sio).....	5-643
Table 5-39. SE-HSL SLK Capacity Feature Quantities.....	5-671
Table 5-40. Minimum Hardware Required for LNP Quantity Features	5-671
Table 5-41. Proxy Point Codes Feature Quantities.....	5-673
Table 5-42. Maximum Sockets/Associations per Card.....	5-685
Table 5-43. Valid ent-gtt Routing Parameter Combinations.....	5-762
Table 5-44. Valid Subnet Mask Values.....	5-778
Table 5-45. Incoming SLS Bit Rotation.....	5-788
Table 5-46. SLS Bit Rotation.....	5-792
Table 5-47. Link Alignment Performance.....	5-799
Table 5-48. Maximum limit of True PCs entries.....	5-808
Table 5-49. Valid Combinations for the h0/h1 Parameters (ent-scr-sio).....	5-889
Table 5-50. Valid ent-scr-sionsfi and si Parameter Combinations.....	5-889
Table 5-51. Additional Valid ent-scr-sio Parameter Combinations.....	5-890
Table 5-52. Transmission Rate for the bps Parameter.....	5-905
Table 5-53. DMS.CFG File Location for format-disk Command.....	5-946
Table 5-54. Disk Format Capacity	5-947
Table 5-55. Parameter Combinations for the inh-alm command	5-953
Table 5-56. Route Set Test When LNP is Offline.....	5-959
Table 5-57. Receiving Messages when LNP is Offline	5-960
Table 5-58. rept-ftp-meas Valid and Invalid Parameter Combinations.....	5-990
Table 5-59. Explanation of rept-imt-info:report=hmuxerr Statistics	5-995
Table 5-60. Explanation of rept-imt-info:report=hiprerr Statistics	5-1001
Table 5-61. Hexadecimal/Decimal Values for s and e parameters	5-1014
Table 5-62. rept-imt-lvl1 Statistics Explanation	5-1022
Table 5-63. Valid Parameter Combinations for the type Parameter	5-1037
Table 5-64. Auto-Inhibit Hardware Verification Codes.....	5-1087
Table 5-65. Summary of DPC Parameter Syntaxes	5-1128
Table 5-66. IMT Bus States	5-1159
Table 5-67. Summary of DPC Parameter Syntaxes.....	5-1204
Table 5-68. Summary of DPC Parameter Syntaxes	5-1205
Table 5-69. Serial Number Formats.....	5-1334
Table 5-70. Summary of DPC Parameter Syntaxes	5-1383
Table 5-71. Retrieve Commands for Additional Table Information	5-1806
Table 5-72. Time Zones Set by the set-time command	5-1865
Table 5-73. Test Disk Execution Times	5-1871
Table 5-74. Valid PROT and FEAT Combinations.....	5-1880
Table 5-75. Parameter Combinations for the unhb-alm command	5-1901
Table 6-1. Actions with Corresponding Upgrade Phase.....	6-3
Table 6-2. Subrange Parameters for cmd Keywords.....	6-8
Table 6-3. Parameter/Card Type Filters for MSUs.....	6-44
Table A-1. Summary of Ranges for link Parameter.....	A-2
Table A-2. Commands that support the Spare Point Code Prefix.....	A-11

Table A-3. Commands that support the Private Point Code Prefix.....	A-12
Table A-4. Valid CIC Ranges for SI and MSU Types.....	A-13
Table A-5. NAIV/NAI Mapping.....	A-13
Table A-6. NPV/NP Mapping.....	A-14
Table A-7. Valid ent-card Applications (appl) and Card Types (type).....	A-14
Table A-8. Loopback Testing Commands and Functions—LIME1 and LIMT1 Cards.....	A-20
Table A-9. Loopback Testing Commands and Functions—LIM and ATM Cards.....	A-24

Introduction

Overview.....	1-1
Where to Find Information in This Manual.....	1-2
Scope and Audience.....	1-3
Related Publications.....	1-3
Customer Care Center.....	1-3
Documentation Packaging, Delivery, and Updates.....	1-5
Documentation Admonishments.....	1-6
Locate Product Documentation on the Customer Support Site on the Customer Support Site.....	1-6

Overview

The *Commands Manual* provides a description of all commands used in the EAGLE 5 Integrated Signaling System (ISS) and LNP. The EAGLE 5 ISS includes the IP⁷ Secure Gateway and the IP⁷ Front End. The use of the term “the system” indicates that the information is common to all of the functions of the EAGLE 5 ISS. Differences are indicated for the specific product, as appropriate.

NOTE: The IP⁷ Front End configuration is a stand-alone single-shelf IP⁷ Secure Gateway. When using this manual, consider IP⁷ Front End and IP⁷ Secure Gateway as functional equivalents with the IP⁷ Front End limited to a single shelf configuration.

Commands are entered at a terminal to perform system operations such as displaying the system status, administering system security, and maintaining the database. Error messages are displayed to provide information about problems encountered when a command is entered.

Where to Find Information in This Manual

Table 1-1 shows how this manual is organized.

NOTE: Throughout this manual, reference to the OAP (Operation System Support Application Processor) applies also to the EOAP (Enhanced Operation System Support Application Process).

Table 1-1. Manual Organization

Chapter Number and Title	Description
Chapter 1, "Introduction"	The organization of this manual The audience References to other Tekelec documentation Customer assistance Documentation packaging, delivery, and updates Safety admonishments
Chapter 2, "Alphabetical List of Commands"	An alphabetical list of the system commands and the corresponding page number for each command description in this manual
Chapter 3, "Commands Listed by Class"	List of the system commands arranged by command class
Chapter 4, "Using Commands"	Descriptions of system terminals, printers, MASP cards, and MDAL cards Keyboard functions Command class administration Definitions of types of command output and messages Procedures for logging into and logging out of the system
Chapter 5, "Commands"	Descriptions of the commands used in the system
Chapter 6, "Debug Commands"	Descriptions of debug commands used in troubleshooting and debugging the system
Chapter 7, "Pass-Through Commands"	Descriptions of the command strings used within the pass command to gather card- and application-specific information
Appendix A, "Reference Information"	Information that is referred to in more than one command description (including signaling link ports, point code formats and

Table 1-1. Manual Organization

Chapter Number and Title	Description
	usage rules, device status, loopback testing, and ISUP Normalization Variants) How to convert an ITU national point code from the format specified by the chg-stpopts:npcfmti parameter into a single number so that it can be used by gateway screening. Summary of loopback testing functions
Appendix B, "Acronyms and Abbreviations"	List of acronyms and abbreviations used in the document
Index	Alphabetic listing of commands and other information, with page references.

Scope and Audience

This manual is intended for those who maintain and do database administration on the Tekelec Signaling Products and LNP. It is assumed that the user is familiar with the SS7 network and its associated protocols. The manual describes commands used in the system, and it contains a special section on debug commands and their descriptions.

Debug commands are a special group of commands used in troubleshooting and debugging the system. These commands are intended for Tekelec Technical Services personnel and authorized engineering personnel in the operating companies. The use of these commands is restricted to those personnel who have access to the "Debug" command class.

Related Publications

The *Commands Manual* is part of and refers to several of the manuals in the EAGLE 5 ISS documentation set. The manuals are listed and described in the *Related Publications* manual, which is included in the *Release Documentation* on the DVD and is published separately on the Customer Support web site:

Customer Care Center

The Tekelec Customer Care Center is your initial point of contact for all product support needs. A representative takes your call or email, creates a Customer Service Request (CSR) and directs your requests to the Tekelec Technical Assistance Center (TAC). Each CSR includes an individual tracking number. Together with TAC Engineers, the representative will help you resolve your request.

The Customer Care Center is available 24 hours a day, 7 days a week, 365 days a year, and is linked to TAC Engineers around the globe.

Tekelec TAC Engineers are available to provide solutions to your technical questions and issues 7 days a week, 24 hours a day. After a CSR is issued, the TAC Engineer determines the classification of the trouble. If a critical problem exists, emergency procedures are initiated. If the problem is not

critical, normal support procedures apply. A primary Technical Engineer is assigned to work on the CSR and provide a solution to the problem. The CSR is closed when the problem is resolved.

Tekelec Technical Assistance Centers are located around the globe in the following locations:

Tekelec - Global

Email (All Regions): support@tekelec.com

- USA and Canada
Phone:
1-888-FOR-TKLC or 1-888-367-8552 (toll-free, within continental USA and Canada)
1-919-460-2150 (outside continental USA and Canada)
TAC Regional Support Office Hours:
8:00 a.m. through 5:00 p.m. (GMT minus 5 hours), Monday through Friday, excluding holidays
- Central and Latin America (CALA)
Phone:
USA access code +1-800-658-5454, then 1-888-FOR-TKLC or 1-888-367-8552 (toll-free)
TAC Regional Support Office Hours (except Brazil):
10:00 a.m. through 7:00 p.m. (GMT minus 6 hours), Monday through Friday, excluding holidays
 - Argentina
Phone:
0-800-555-5246 (toll-free)
 - Brazil
Phone:
0-800-891-4341 (toll-free)
TAC Regional Support Office Hours:
8:30 a.m. through 6:30 p.m. (GMT minus 3 hours), Monday through Friday, excluding holidays
 - Chile
Phone:
1230-020-555-5468
 - Columbia
Phone:
01-800-912-0537
 - Dominican Republic
Phone:
1-888-367-8552
 - Mexico
Phone:
001-888-367-8552
 - Peru
Phone:
0800-53-087

- Puerto Rico
Phone:
1-888-367-8552 (1-888-FOR-TKLC)
- Venezuela
Phone:
0800-176-6497
- Europe, Middle East, and Africa
 - Signaling
Phone:
+44 1784 467 804 (within UK)
TAC Regional Support Office Hours:
8:00 a.m. through 7:00 p.m. (GMT), Monday through Friday, excluding holidays
 - Software Solutions
Phone:
+33 3 89 33 54 00
TAC Regional Support Office Hours:
8:00 a.m. through 7:00 p.m. (GMT), Monday through Friday, excluding holidays
- Asia
 - India
Phone:
+91 124 436 8552 or +91 124 436 8553
TAC Regional Support Office Hours:
10:00 a.m. through 7:00 p.m. (GMT plus 5 1/2 hours), Monday through Saturday, excluding holidays
 - Singapore
Phone:
+65 6796 2288
TAC Regional Support Office Hours:
9:00 a.m. through 6:00 p.m. (GMT plus 8 hours), Monday through Friday, excluding holidays

Documentation Packaging, Delivery, and Updates

Customer documentation is provided with each system in accordance with the contract agreements. It is updated whenever significant changes that affect system operation or configuration are made. Updates may be issued as an addendum, or a reissue of the affected documentation.

The document part number appears on the title page along with the current revision of the document and the date of publication. The bottom of each page contains the document part number and date of publication.

Two types of releases are major software releases and maintenance releases. Maintenance releases are issued as addenda with a title page and change bars. On the changed pages, the date and document part number are changed. On any unchanged pages that accompany the changed pages, the date and document part number is unchanged.

When the software release has a minimum effect on documentation, we provide an addendum. The addendum provides an instruction page, a new title page, a change history page, and replacement chapters with the date of publication, the document part number, and change bars.

If a new release has a major impact on documentation, such as a new feature, the entire documentation set is reissued with a new part number and a new release number.

Documentation Admonishments

Admonishments are icons and text that may appear in this and other Tekelec manuals. Admonishments alert the reader to assure personal safety, to minimize possible service interruptions, and to warn of the potential for equipment damage.

The following admonishments, listed in descending order of priority, are used in Tekelec manuals.



TOPPLE: This icon and text indicate the possibility of equipment damage and personal injury from toppling.



DANGER: This icon and text indicate the possibility of *personal injury*.



WARNING: This icon and text indicate the possibility of *equipment damage*.



CAUTION: This icon and text indicate the possibility of *service interruption*.

Locate Product Documentation on the Customer Support Site on the Customer Support Site

Access to Tekelec's Customer Support site is restricted to current Tekelec customers only. This section describes how to log into Tekelec's Customer Support site and locate a document. Viewing the document requires Adobe Acrobat Reader, which can be downloaded at www.adobe.com.

1. Log into Tekelec's new Customer Support site at support.tekelec.com . NOTE: If you have not registered for this new site, click the Register Here link. Have your customer number available. The response time for registration requests is 24 to 48 hours.
2. Click the Product Support tab.
3. Use the Search field to locate a document by its part number, release number, document name, or document type. The Search field accepts both full and partial entries.
4. Click a subject folder to browse through a list of related files.
5. To download a file to your location, right-click the file name and select Save Target As.

NOTE: Customers may print a reasonable number of each manual for their own use.

Alphabetical List of Commands

Introduction

This chapter contains an alphabetical list of the Tekelec Signaling Products (Eagle STP, IP⁷ Secure Gateway, and IP⁷ Front End) commands and the page number where each command is described in this manual.

Commands

act-alm-trns.....	5-1	chg-acg-noc.....	5-52
act-cdl.....	5-2	chg-appl-rtkey.....	5-53
act-dlk.....	5-3	chg-as.....	5-60
act-echo.....	5-4	chg-assoc.....	5-61
act-file-trns.....	5-5	chg-atinpqopts.....	5-66
act-flash.....	5-8	chg-atm-lps.....	5-69
act-ftp-trns.....	5-11	chg-attr-seculog.....	5-72
act-gpl.....	5-12	chg-clkopts.....	5-73
act-lbp.....	5-15	chg-cmd.....	5-75
act-lpo.....	5-21	chg-cmdclass.....	5-78
act-oap-config.....	5-23	chg-csl.....	5-79
act-slk.....	5-26	chg-ctrl-feat.....	5-83
act-user.....	5-28	chg-db.....	5-90
alw-card.....	5-29	chg-dstn.....	5-96
alw-imt.....	5-32	chg-e1.....	5-111
alw-map-ss.....	5-33	chg-eisopts.....	5-114
alw-slk.....	5-33	chg-feat.....	5-115
alw-trm.....	5-35	chg-frm-pwr.....	5-123
aud-data.....	5-36	chg-ftp-serv.....	5-125
blk-slk.....	5-40	chg-gpl.....	5-126
canc-alm-trns.....	5-42	chg-gsm-msg.....	5-130
canc-cmd.....	5-43	chg-gsmmap-scrn.....	5-133
canc-dlk.....	5-45	chg-gsmopts.....	5-138
canc-echo.....	5-46	chg-gsms-opcode.....	5-146
canc-lpo.....	5-46	chg-gsmsmsopts.....	5-150
canc-slk.....	5-48	chg-gta.....	5-157
canc-user.....	5-49	chg-gtcnv.....	5-171
chg-acg-mic.....	5-50	chg-gtt.....	5-174
		chg-gttset.....	5-187
		chg-gtw-stp.....	5-188

Commands

Alphabetical List of Commands

chg-gws-actset.....	5-189	chg-srvsel.....	5-443
chg-gws-redirect.....	5-192	chg-ss-appl.....	5-448
chg-inopts.....	5-195	chg-ss7opts.....	5-449
chg-ip-card.....	5-201	chg-stpopts.....	5-451
chg-ip-lnk.....	5-204	chg-t1.....	5-464
chg-is41-msg.....	5-208	chg-th-alm.....	5-466
chg-is41opts.....	5-211	chg-tifopts.....	5-468
chg-is41smsopts.....	5-216	chg-tinopts.....	5-471
chg-isup-msg.....	5-222	chg-trm.....	5-473
chg-l2t.....	5-224	chg-ttmap.....	5-483
chg-l3t.....	5-227	chg-ttr-msg.....	5-484
chg-lbp.....	5-234	chg-ttropts.....	5-486
chg-lnp-serv.....	5-236	chg-uaps.....	5-488
chg-lnp-ttmap.....	5-238	chg-user.....	5-492
chg-lnopts.....	5-239	chg-vflx-cd.....	5-497
chg-loopset.....	5-242	chg-vflx-opts.....	5-498
chg-ls.....	5-250	chg-vflx-rn.....	5-501
chg-lsopts.....	5-268	chg-vflx-vmsid.....	5-502
chg-m2pa-tset.....	5-271	chg-x25-dstn.....	5-504
chg-map.....	5-273	chg-x25-rte.....	5-505
chg-meas.....	5-285	chg-x25-slk.....	5-507
chg-measopts.....	5-287	chk-unref-ent.....	5-509
chg-mrn.....	5-295	clr-imt-stats.....	5-511
chg-mtc-measopts.....	5-308	conn-imt.....	5-513
chg-netopts.....	5-312	copy-disk.....	5-514
chg-npp-as.....	5-314	copy-fta.....	5-516
chg-npp-serv.....	5-327	copy-gpl.....	5-518
chg-npp-srs.....	5-331	copy-meas.....	5-520
chg-oap-config.....	5-333	copy-seculog.....	5-521
chg-pid.....	5-337	dact-alm-trns.....	5-523
chg-ppsopts.....	5-338	dact-cdl.....	5-523
chg-prefix.....	5-342	dact-cmd.....	5-524
chg-rte.....	5-345	dact-echo.....	5-526
chg-rtx.....	5-348	dact-lbp.....	5-527
chg-sccp-serv.....	5-352	dact-rstst.....	5-529
chg-sccpopts.....	5-359	dact-slk.....	5-530
chg-scr-aftpc.....	5-362	dact-user.....	5-532
chg-scr-blkdpc.....	5-368	disc-imt.....	5-532
chg-scr-blkopc.....	5-374	disp-fta-dir.....	5-533
chg-scr-cdpa.....	5-380	dlt-acg-mic.....	5-534
chg-scr-cgpa.....	5-386	dlt-acg-noc.....	5-535
chg-scr-destfld.....	5-392	dlt-appl-rtkey.....	5-535
chg-scr-dpc.....	5-397	dlt-as.....	5-540
chg-scr-isup.....	5-402	dlt-assoc.....	5-541
chg-scr-opc.....	5-404	dlt-card.....	5-541
chg-scr-sio.....	5-409	dlt-csl.....	5-542
chg-scr-tt.....	5-414	dlt-cspc.....	5-546
chg-scrset.....	5-416	dlt-dlk.....	5-549
chg-seas-config.....	5-418	dlt-dstn.....	5-549
chg-secu-dflt.....	5-420	dlt-e1.....	5-554
chg-secu-trm.....	5-425	dlt-frm-pwr.....	5-556
chg-sg-opts.....	5-429	dlt-fta.....	5-556
chg-sid.....	5-432	dlt-ftp-serv.....	5-557
chg-slt.....	5-442	dlt-gserv-data.....	5-558

dlt-gsmmap-scrn.....	5-560	dlt-vflx-vmsid.....	5-660
dlt-gsms-opcode.....	5-561	dlt-x25-dstn.....	5-660
dlt-gsmssn-scrn.....	5-562	dlt-x25-rte.....	5-661
dlt-gta.....	5-563	enable-ctrl-feat.....	5-661
dlt-gtcnv.....	5-568	ent-acg-mic.....	5-676
dlt-gtt.....	5-569	ent-acg-noc.....	5-677
dlt-gttset.....	5-572	ent-appl-rtkey.....	5-679
dlt-gttset.....	5-574	ent-as.....	5-684
dlt-gws-redirect.....	5-574	ent-assoc.....	5-685
dlt-home-smisc.....	5-575	ent-card.....	5-688
dlt-homern.....	5-576	ent-csl.....	5-696
dlt-ip-host.....	5-576	ent-cspc.....	5-701
dlt-ip-node.....	5-577	ent-dlk.....	5-703
dlt-ip-rte.....	5-579	ent-dstn.....	5-705
dlt-lbp.....	5-580	ent-e1.....	5-719
dlt-lnp-serv.....	5-581	ent-frn-pwr.....	5-722
dlt-loopset.....	5-582	ent-ftp-serv.....	5-724
dlt-ls.....	5-584	ent-gserv-data.....	5-726
dlt-map.....	5-585	ent-gsmmap-scrn.....	5-728
dlt-mrn.....	5-589	ent-gsms-opcode.....	5-734
dlt-na.....	5-597	ent-gsmssn-scrn.....	5-739
dlt-npp-as.....	5-598	ent-gta.....	5-740
dlt-npp-srs.....	5-599	ent-gtcnv.....	5-753
dlt-prefix.....	5-600	ent-gtt.....	5-756
dlt-rmt-appl.....	5-601	ent-gttset.....	5-765
dlt-rte.....	5-603	ent-gttset.....	5-769
dlt-rtx.....	5-607	ent-gws-redirect.....	5-770
dlt-sccp-serv.....	5-611	ent-home-smisc.....	5-773
dlt-scr-aftpc.....	5-616	ent-homern.....	5-773
dlt-scr-blkdpc.....	5-619	ent-ip-host.....	5-774
dlt-scr-blkopc.....	5-622	ent-ip-node.....	5-775
dlt-scr-cdpa.....	5-626	ent-ip-rte.....	5-777
dlt-scr-cgpa.....	5-629	ent-lbp.....	5-779
dlt-scr-destfld.....	5-632	ent-lnp-serv.....	5-781
dlt-scr-dpc.....	5-635	ent-loopset.....	5-783
dlt-scr-isup.....	5-638	ent-ls.....	5-785
dlt-scr-opc.....	5-639	ent-map.....	5-800
dlt-scr-sio.....	5-642	ent-mrn.....	5-811
dlt-scr-tt.....	5-644	ent-na.....	5-824
dlt-scrset.....	5-645	ent-npp-as.....	5-825
dlt-shlf.....	5-646	ent-npp-srs.....	5-839
dlt-slk.....	5-646	ent-rmt-appl.....	5-841
dlt-spc.....	5-649	ent-rte.....	5-843
dlt-srvsel.....	5-650	ent-rtx.....	5-847
dlt-ss-appl.....	5-652	ent-scr-aftpc.....	5-852
dlt-subnetid.....	5-653	ent-scr-blkdpc.....	5-856
dlt-t1.....	5-653	ent-scr-blkopc.....	5-860
dlt-tt.....	5-654	ent-scr-cdpa.....	5-865
dlt-ttmap.....	5-656	ent-scr-cgpa.....	5-869
dlt-uim-acthresh.....	5-657	ent-scr-destfld.....	5-873
dlt-user.....	5-657	ent-scr-dpc.....	5-876
dlt-vendid.....	5-658	ent-scr-isup.....	5-881
dlt-vflx-cd.....	5-658	ent-scr-opc.....	5-883
dlt-vflx-rn.....	5-659	ent-scr-sio.....	5-887

ent-scr-tt.....	5-891	rept-stat-dlk.....	5-1124
ent-scrset.....	5-893	rept-stat-dstn.....	5-1125
ent-serial-num.....	5-895	rept-stat-e1.....	5-1137
ent-shlf.....	5-896	rept-stat-enet.....	5-1139
ent-sid.....	5-897	rept-stat-eroute.....	5-1140
ent-slk.....	5-899	rept-stat-gpl.....	5-1145
ent-spc.....	5-913	rept-stat-imt.....	5-1158
ent-srvsel.....	5-915	rept-stat-iptps.....	5-1160
ent-ss-appl.....	5-918	rept-stat-lfs.....	5-1164
ent-subnetid.....	5-920	rept-stat-lnp.....	5-1165
ent-t1.....	5-921	rept-stat-ls.....	5-1174
ent-tt.....	5-924	rept-stat-meas.....	5-1181
ent-ttmap.....	5-925	rept-stat-mon.....	5-1183
ent-user.....	5-926	rept-stat-mps.....	5-1189
ent-vendid.....	5-930	rept-stat-mux.....	5-1195
ent-vflx-cd.....	5-932	rept-stat-rtd.....	5-1196
ent-vflx-rn.....	5-933	rept-stat-rte.....	5-1201
ent-vflx-vmsid.....	5-934	rept-stat-rtkey.....	5-1223
ent-x25-dstn.....	5-936	rept-stat-rtx.....	5-1223
ent-x25-rte.....	5-937	rept-stat-sccp.....	5-1229
flash-card.....	5-940	rept-stat-seas.....	5-1255
format-disk.....	5-943	rept-stat-seculog.....	5-1257
inh-alm.....	5-948	rept-stat-slan.....	5-1259
inh-card.....	5-956	rept-stat-slk.....	5-1262
inh-imt.....	5-958	rept-stat-sys.....	5-1270
inh-map-ss.....	5-959	rept-stat-t1.....	5-1275
inh-slk.....	5-961	rept-stat-trbl.....	5-1278
inh-trm.....	5-962	rept-stat-trm.....	5-1283
init-card.....	5-963	rept-stat-tstslk.....	5-1285
init-flash.....	5-969	rept-stat-user.....	5-1287
init-imt-gpl.....	5-973	rept-stat-xlist.....	5-1287
init-mux.....	5-974	rept-x25-meas.....	5-1288
init-network.....	5-975	rls-alm.....	5-1291
init-oap.....	5-978	rmv-card.....	5-1292
init-sys.....	5-980	rmv-imt.....	5-1293
lock.....	5-983	rmv-trm.....	5-1294
login.....	5-983	rst-card.....	5-1295
logout.....	5-984	rst-dstn.....	5-1296
pass.....	5-985	rst-imt.....	5-1298
rept-ftp-meas.....	5-987	rst-trm.....	5-1298
rept-imt-info.....	5-991	rtrv-acg-mic.....	5-1299
rept-imt-lvl1.....	5-1012	rtrv-acg-noc.....	5-1301
rept-imt-lvl2.....	5-1027	rtrv-appl-rtkey.....	5-1302
rept-meas.....	5-1031	rtrv-as.....	5-1309
rept-stat-alm.....	5-1046	rtrv-assoc.....	5-1310
rept-stat-applsock.....	5-1053	rtrv-atinpqopts.....	5-1320
rept-stat-as.....	5-1055	rtrv-atm-lps.....	5-1321
rept-stat-assoc.....	5-1056	rtrv-atm-prm.....	5-1327
rept-stat-card.....	5-1059	rtrv-attr-seculog.....	5-1328
rept-stat-cdl.....	5-1092	rtrv-bip.....	5-1329
rept-stat-cdt.....	5-1094	rtrv-card.....	5-1335
rept-stat-clk.....	5-1095	rtrv-clkopts.....	5-1344
rept-stat-cluster.....	5-1102	rtrv-cmd.....	5-1344
rept-stat-db.....	5-1108	rtrv-cmdclass.....	5-1347

Alphabetical List of Commands**Commands**

rtrv-csl.....	5-1348	rtrv-mrn.....	5-1590
rtrv-cspc.....	5-1356	rtrv-mtc-measopts.....	5-1596
rtrv-ctrl-feat.....	5-1359	rtrv-na.....	5-1598
rtrv-data-rtdb.....	5-1364	rtrv-netopts.....	5-1599
rtrv-dlk.....	5-1372	rtrv-npp-as.....	5-1600
rtrv-dstn.....	5-1375	rtrv-npp-serv.....	5-1601
rtrv-e1.....	5-1408	rtrv-npp-srs.....	5-1604
rtrv-eisopts.....	5-1411	rtrv-oap-config.....	5-1606
rtrv-feat.....	5-1412	rtrv-obit.....	5-1607
rtrv-frn-pwr.....	5-1414	rtrv-ppsopts.....	5-1618
rtrv-ftp-serv.....	5-1415	rtrv-prefix.....	5-1623
rtrv-gpl.....	5-1419	rtrv-rmt-appl.....	5-1624
rtrv-gserv-data.....	5-1425	rtrv-rte.....	5-1625
rtrv-gsm-msg.....	5-1428	rtrv-rtx.....	5-1660
rtrv-gsmmap-scrn.....	5-1429	rtrv-sccp-serv.....	5-1669
rtrv-gsmopts.....	5-1438	rtrv-sccpopts.....	5-1672
rtrv-gsms-opcode.....	5-1442	rtrv-scr-aftpc.....	5-1674
rtrv-gsmsmsopts.....	5-1447	rtrv-scr-blkdpc.....	5-1680
rtrv-gsmssn-scrn.....	5-1448	rtrv-scr-blkopc.....	5-1686
rtrv-gta.....	5-1449	rtrv-scr-cdpa.....	5-1691
rtrv-gtcnv.....	5-1470	rtrv-scr-cgpa.....	5-1696
rtrv-gtt.....	5-1472	rtrv-scr-destfld.....	5-1702
rtrv-gttset.....	5-1488	rtrv-scr-dpc.....	5-1708
rtrv-gttset.....	5-1494	rtrv-scr-isup.....	5-1714
rtrv-gtw-stp.....	5-1497	rtrv-scr-opc.....	5-1717
rtrv-gtwy-acthresh.....	5-1497	rtrv-scr-sio.....	5-1723
rtrv-gtwy-prmtrs.....	5-1499	rtrv-scr-tt.....	5-1727
rtrv-gws-actset.....	5-1499	rtrv-scrset.....	5-1730
rtrv-gws-redirect.....	5-1500	rtrv-seas-config.....	5-1734
rtrv-home-smsc.....	5-1502	rtrv-secu-dflt.....	5-1735
rtrv-homern.....	5-1503	rtrv-secu-trm.....	5-1737
rtrv-inopts.....	5-1503	rtrv-secu-user.....	5-1739
rtrv-ip-card.....	5-1506	rtrv-seculog.....	5-1742
rtrv-ip-host.....	5-1509	rtrv-serial-num.....	5-1749
rtrv-ip-lnk.....	5-1510	rtrv-sg-opts.....	5-1749
rtrv-ip-node.....	5-1512	rtrv-shlf.....	5-1750
rtrv-ip-rte.....	5-1516	rtrv-sid.....	5-1752
rtrv-is41-msg.....	5-1517	rtrv-slk.....	5-1761
rtrv-is41opts.....	5-1518	rtrv-slt.....	5-1767
rtrv-is41smsopts.....	5-1519	rtrv-spc.....	5-1769
rtrv-isup-msg.....	5-1520	rtrv-srvsel.....	5-1773
rtrv-l2t.....	5-1522	rtrv-ss-appl.....	5-1780
rtrv-l3t.....	5-1525	rtrv-ss7opts.....	5-1780
rtrv-lbp.....	5-1527	rtrv-stp.....	5-1781
rtrv-lnp-serv.....	5-1530	rtrv-stpopts.....	5-1796
rtrv-lnp-ttmap.....	5-1532	rtrv-subnetid.....	5-1801
rtrv-lnpopts.....	5-1535	rtrv-t1.....	5-1803
rtrv-log.....	5-1536	rtrv-tbl-capacity.....	5-1806
rtrv-loopset.....	5-1547	rtrv-th-alm.....	5-1809
rtrv-ls.....	5-1550	rtrv-tifopts.....	5-1809
rtrv-m2pa-tset.....	5-1572	rtrv-tinopts.....	5-1810
rtrv-map.....	5-1575	rtrv-trbl.....	5-1811
rtrv-meas-sched.....	5-1585	rtrv-trbltx.....	5-1812
rtrv-measopts.....	5-1588	rtrv-trm.....	5-1817

rtvr-tt.....	5-1832
rtvr-ttmap.....	5-1835
rtvr-ttr-msg.....	5-1838
rtvr-ttropts.....	5-1839
rtvr-uaps.....	5-1839
rtvr-uim-acthresh.....	5-1842
rtvr-user.....	5-1842
rtvr-vendid.....	5-1845
rtvr-vflx-cd.....	5-1846
rtvr-vflx-opts.....	5-1849
rtvr-vflx-rn.....	5-1850
rtvr-vflx-vmssid.....	5-1853
rtvr-x25-dstn.....	5-1856
rtvr-x25-rte.....	5-1857
rtvr-x25-slk.....	5-1861
set-date.....	5-1862
set-gtwy-acthresh.....	5-1863
set-scrrej-prmtrs.....	5-1864
set-time.....	5-1865
set-uim-acthresh.....	5-1867
tst-bip.....	5-1868
tst-disk.....	5-1869
tst-dlk.....	5-1873
tst-e1.....	5-1874
tst-imt.....	5-1876
tst-msg.....	5-1878
tst-npp-msg.....	5-1885
tst-slk.....	5-1888
tst-t1.....	5-1893
ublk-slk.....	5-1894
unhb-alm.....	5-1896
unhb-slk.....	5-1903
unlock.....	5-1905

Debug Commands

act-upgrade.....	6-1
cdu.....	6-6
chg-bip-fld.....	6-13
chg-bip-rec.....	6-14
chg-tbl.....	6-16
chg-upgrade-config.....	6-18
clr-disk-stats.....	6-19
copy-tbl.....	6-19
disp-bip.....	6-21
disp-bp.....	6-23
disp-disk-dir.....	6-26
disp-disk-stats.....	6-31
disp-lba.....	6-32
disp-mem.....	6-34
disp-trace.....	6-36
dlt-bp.....	6-37
dlt-trace.....	6-38
ent-bp.....	6-39

ent-trace.....	6-44
rtvr-upgrade-config.....	6-60
send-msg.....	6-60
set-mem.....	6-63

Pass-Through Commands

arp.....	7-2
aslog.....	7-5
asplog.....	7-6
assocrtt.....	7-12
connmgr.....	7-14
ftptest.....	7-21
linkinfo.....	7-23
msucount.....	7-33
msuroute.....	7-64
msutrace.....	7-70
netstat.....	7-91
nslookup.....	7-126
ping.....	7-129
sctp.....	7-133
sockrtt.....	7-142
soipdata.....	7-145
soiplog.....	7-147
traceroute.....	7-149
ualog.....	7-159

Commands Listed by Class

Introduction

This chapter provides lists of the available non-configurable command classes and an alphabetical list of the commands allowed in each class. The command class Basic is automatically given to all users and terminals as a default.

Basic

act-echo.....	5-4
act-user.....	5-28
canc-echo.....	5-46
canc-user.....	5-49
chg-pid.....	5-337
dact-cmd.....	5-524
dact-echo.....	5-526
dact-user.....	5-532
dlt-sccp-serv.....	5-611
lock.....	5-983
login.....	5-983
logout.....	5-984
rept-stat-user.....	5-1287
rtrv-cmd.....	5-1344
rtrv-cmdclass.....	5-1347
rtrv-sccp-serv.....	5-1669
rtrv-user.....	5-1842
unlock.....	5-1905

Database Administration

act-ftp-trns.....	5-11
act-lbp.....	5-15
act-oap-config.....	5-23
chg-acg-mic.....	5-50
chg-acg-noc.....	5-52
chg-appl-rtkey.....	5-53
chg-as.....	5-60

chg-assoc.....	5-61
chg-atinpqopts.....	5-66
chg-atm-lps.....	5-69
chg-clkopts.....	5-73
chg-csl.....	5-79
chg-ctrl-feat.....	5-83
chg-dstn.....	5-96
chg-e1.....	5-111
chg-frm-pwr.....	5-123
chg-ftp-serv.....	5-125
chg-gsm-msg.....	5-130
chg-gsmmap-scrn.....	5-133
chg-gsmopts.....	5-138
chg-gsms-opcode.....	5-146
chg-gsmsmsopts.....	5-150
chg-gta.....	5-157
chg-gtcnv.....	5-171
chg-gtt.....	5-174
chg-gttset.....	5-183
chg-gttset.....	5-187
chg-gtw-stp.....	5-188
chg-gws-actset.....	5-189
chg-gws-redirect.....	5-192
chg-inpopts.....	5-195
chg-ip-card.....	5-201
chg-ip-lnk.....	5-204
chg-is41-msg.....	5-208
chg-is41opts.....	5-211
chg-is41smsopts.....	5-216
chg-isup-msg.....	5-222
chg-l2t.....	5-224

chg-l3t.....	5-227	chg-x25-rte.....	5-505
chg-lbp.....	5-234	chg-x25-slk.....	5-507
chg-lnp-serv.....	5-236	chk-unref-ent.....	5-509
chg-lnpopts.....	5-239	dlt-acg-mic.....	5-534
chg-loopset.....	5-242	dlt-acg-noc.....	5-535
chg-ls.....	5-250	dlt-appl-rtkey.....	5-535
chg-lsopts.....	5-268	dlt-as.....	5-540
chg-m2pa-tset.....	5-271	dlt-assoc.....	5-541
chg-map.....	5-273	dlt-card.....	5-541
chg-mrn.....	5-295	dlt-csl.....	5-542
chg-netopts.....	5-312	dlt-cspc.....	5-546
chg-npp-as.....	5-314	dlt-dlk.....	5-549
chg-npp-serv.....	5-327	dlt-dstn.....	5-549
chg-npp-srs.....	5-331	dlt-e1.....	5-554
chg-oap-config.....	5-333	dlt-frm-pwr.....	5-556
chg-ppsopts.....	5-338	dlt-ftp-serv.....	5-557
chg-prefix.....	5-342	dlt-gserv-data.....	5-558
chg-rte.....	5-345	dlt-gsmmap-scrn.....	5-560
chg-rtx.....	5-348	dlt-gsms-opcode.....	5-561
chg-sccp-serv.....	5-352	dlt-gsmssn-scrn.....	5-562
chg-sccpopts.....	5-359	dlt-gta.....	5-563
chg-scr-aftpc.....	5-362	dlt-gtcnv.....	5-568
chg-scr-blkdpc.....	5-368	dlt-gtt.....	5-569
chg-scr-blkopc.....	5-374	dlt-gttset.....	5-572
chg-scr-cdpa.....	5-380	dlt-gttset.....	5-574
chg-scr-cgpa.....	5-386	dlt-gws-redirect.....	5-574
chg-scr-destfld.....	5-392	dlt-home-smsc.....	5-575
chg-scr-dpc.....	5-397	dlt-homern.....	5-576
chg-scr-isup.....	5-402	dlt-ip-host.....	5-576
chg-scr-opc.....	5-404	dlt-ip-node.....	5-577
chg-scr-sio.....	5-409	dlt-ip-rte.....	5-579
chg-scr-tt.....	5-414	dlt-lbp.....	5-580
chg-scrset.....	5-416	dlt-lnp-serv.....	5-581
chg-sg-opts.....	5-429	dlt-loopset.....	5-582
chg-sid.....	5-432	dlt-ls.....	5-584
chg-slt.....	5-442	dlt-map.....	5-585
chg-srvsel.....	5-443	dlt-mrn.....	5-589
chg-ss-appl.....	5-448	dlt-na.....	5-597
chg-ss7opts.....	5-449	dlt-npp-as.....	5-598
chg-stpopts.....	5-451	dlt-npp-srs.....	5-599
chg-t1.....	5-464	dlt-prefix.....	5-600
chg-th-alm.....	5-466	dlt-rmt-appl.....	5-601
chg-tifopts.....	5-468	dlt-rte.....	5-603
chg-tinopts.....	5-471	dlt-rtx.....	5-607
chg-trm.....	5-473	dlt-scr-aftpc.....	5-616
chg-ttmap.....	5-483	dlt-scr-blkdpc.....	5-619
chg-ttr-msg.....	5-484	dlt-scr-blkopc.....	5-622
chg-ttropts.....	5-486	dlt-scr-cdpa.....	5-626
chg-uaps.....	5-488	dlt-scr-cgpa.....	5-629
chg-vflx-cd.....	5-497	dlt-scr-destfld.....	5-632
chg-vflx-opts.....	5-498	dlt-scr-dpc.....	5-635
chg-vflx-rn.....	5-501	dlt-scr-isup.....	5-638
chg-vflx-vmssid.....	5-502	dlt-scr-opc.....	5-639
chg-x25-dstn.....	5-504	dlt-scr-sio.....	5-642

dlt-scr-tt.....	5-644	ent-npp-as.....	5-825
dlt-scrset.....	5-645	ent-npp-srs.....	5-839
dlt-shlf.....	5-646	ent-rmt-appl.....	5-841
dlt-slk.....	5-646	ent-rte.....	5-843
dlt-spc.....	5-649	ent-rtx.....	5-847
dlt-srvsel.....	5-650	ent-scr-aftpc.....	5-852
dlt-ss-appl.....	5-652	ent-scr-blkdpc.....	5-856
dlt-subnetid.....	5-653	ent-scr-blkopc.....	5-860
dlt-t1.....	5-653	ent-scr-cdpa.....	5-865
dlt-tt.....	5-654	ent-scr-cgpa.....	5-869
dlt-ttmap.....	5-656	ent-scr-destfld.....	5-873
dlt-uim-acthresh.....	5-657	ent-scr-dpc.....	5-876
dlt-vendid.....	5-658	ent-scr-isup.....	5-881
dlt-vflx-cd.....	5-658	ent-scr-opc.....	5-883
dlt-vflx-rn.....	5-659	ent-scr-sio.....	5-887
dlt-vflx-vmsid.....	5-660	ent-scr-tt.....	5-891
dlt-x25-dstn.....	5-660	ent-scrset.....	5-893
dlt-x25-rte.....	5-661	ent-serial-num.....	5-895
enable-ctrl-feat.....	5-661	ent-shlf.....	5-896
ent-acg-mic.....	5-676	ent-sid.....	5-897
ent-acg-noc.....	5-677	ent-slk.....	5-899
ent-appl-rtkey.....	5-679	ent-spc.....	5-913
ent-as.....	5-684	ent-srvsel.....	5-915
ent-assoc.....	5-685	ent-ss-appl.....	5-918
ent-card.....	5-688	ent-subnetid.....	5-920
ent-csl.....	5-696	ent-t1.....	5-921
ent-cspc.....	5-701	ent-tt.....	5-924
ent-dlk.....	5-703	ent-ttmap.....	5-925
ent-dstn.....	5-705	ent-vendid.....	5-930
ent-e1.....	5-719	ent-vflx-cd.....	5-932
ent-frm-pwr.....	5-722	ent-vflx-rn.....	5-933
ent-ftp-serv.....	5-724	ent-vflx-vmsid.....	5-934
ent-gserv-data.....	5-726	ent-x25-dstn.....	5-936
ent-gsmmap-scrn.....	5-728	ent-x25-rte.....	5-937
ent-gsms-opcode.....	5-734	rept-stat-db.....	5-1108
ent-gsmssn-scrn.....	5-739	rtrv-acg-mic.....	5-1299
ent-gta.....	5-740	rtrv-acg-noc.....	5-1301
ent-gtcnv.....	5-753	rtrv-appl-rtkey.....	5-1302
ent-gtt.....	5-756	rtrv-as.....	5-1309
ent-gttset.....	5-765	rtrv-assoc.....	5-1310
ent-gttset.....	5-769	rtrv-atinpqopts.....	5-1320
ent-gws-redirect.....	5-770	rtrv-atm-lps.....	5-1321
ent-home-smisc.....	5-773	rtrv-atm-prm.....	5-1327
ent-homern.....	5-773	rtrv-card.....	5-1335
ent-ip-host.....	5-774	rtrv-clkopts.....	5-1344
ent-ip-node.....	5-775	rtrv-csl.....	5-1348
ent-ip-rte.....	5-777	rtrv-cspc.....	5-1356
ent-lbp.....	5-779	rtrv-ctrl-feat.....	5-1359
ent-lnp-serv.....	5-781	rtrv-data-rtdb.....	5-1364
ent-loopset.....	5-783	rtrv-dlk.....	5-1372
ent-ls.....	5-785	rtrv-dstn.....	5-1375
ent-map.....	5-800	rtrv-e1.....	5-1408
ent-mrn.....	5-811	rtrv-frm-pwr.....	5-1414
ent-na.....	5-824	rtrv-ftp-serv.....	5-1415

rtrv-gserv-data.....	5-1425	rtrv-scr-cdpa.....	5-1691
rtrv-gsm-msg.....	5-1428	rtrv-scr-cgpa.....	5-1696
rtrv-gsmmap-scrn.....	5-1429	rtrv-scr-destfld.....	5-1702
rtrv-gsmopts.....	5-1438	rtrv-scr-dpc.....	5-1708
rtrv-gsms-opcode.....	5-1442	rtrv-scr-isup.....	5-1714
rtrv-gsmsmsopts.....	5-1447	rtrv-scr-opc.....	5-1717
rtrv-gsmssn-scrn.....	5-1448	rtrv-scr-sio.....	5-1723
rtrv-gta.....	5-1449	rtrv-scr-tt.....	5-1727
rtrv-gtcnv.....	5-1470	rtrv-scrset.....	5-1730
rtrv-gtt.....	5-1472	rtrv-seas-config.....	5-1734
rtrv-gttset.....	5-1488	rtrv-serial-num.....	5-1749
rtrv-gttset.....	5-1494	rtrv-sg-opts.....	5-1749
rtrv-gtw-stp.....	5-1497	rtrv-shlf.....	5-1750
rtrv-gtwy-acthresh.....	5-1497	rtrv-slk.....	5-1761
rtrv-gtwy-prmtrs.....	5-1499	rtrv-slt.....	5-1767
rtrv-gws-actset.....	5-1499	rtrv-spc.....	5-1769
rtrv-gws-redirect.....	5-1500	rtrv-srvsel.....	5-1773
rtrv-home-smsc.....	5-1502	rtrv-ss-appl.....	5-1780
rtrv-homern.....	5-1503	rtrv-ss7opts.....	5-1780
rtrv-inopts.....	5-1503	rtrv-stp.....	5-1781
rtrv-ip-card.....	5-1506	rtrv-stpopts.....	5-1796
rtrv-ip-host.....	5-1509	rtrv-subnetid.....	5-1801
rtrv-ip-lnk.....	5-1510	rtrv-t1.....	5-1803
rtrv-ip-node.....	5-1512	rtrv-tbl-capacity.....	5-1806
rtrv-ip-rte.....	5-1516	rtrv-th-alm.....	5-1809
rtrv-is41-msg.....	5-1517	rtrv-tifopts.....	5-1809
rtrv-is41opts.....	5-1518	rtrv-tinopts.....	5-1810
rtrv-is41smsopts.....	5-1519	rtrv-trbltx.....	5-1812
rtrv-isup-msg.....	5-1520	rtrv-trm.....	5-1817
rtrv-l2t.....	5-1522	rtrv-tt.....	5-1832
rtrv-l3t.....	5-1525	rtrv-ttmap.....	5-1835
rtrv-lbp.....	5-1527	rtrv-ttr-msg.....	5-1838
rtrv-lnp-serv.....	5-1530	rtrv-ttropts.....	5-1839
rtrv-lnpopts.....	5-1535	rtrv-uaps.....	5-1839
rtrv-loopset.....	5-1547	rtrv-uim-acthresh.....	5-1842
rtrv-ls.....	5-1550	rtrv-vendid.....	5-1845
rtrv-m2pa-tset.....	5-1572	rtrv-vflx-cd.....	5-1846
rtrv-map.....	5-1575	rtrv-vflx-opts.....	5-1849
rtrv-mrn.....	5-1590	rtrv-vflx-rn.....	5-1850
rtrv-na.....	5-1598	rtrv-vflx-vmssid.....	5-1853
rtrv-netopts.....	5-1599	rtrv-x25-dstn.....	5-1856
rtrv-npp-as.....	5-1600	rtrv-x25-rte.....	5-1857
rtrv-npp-serv.....	5-1601	rtrv-x25-slk.....	5-1861
rtrv-npp-srs.....	5-1604	set-gtwy-acthresh.....	5-1863
rtrv-oap-config.....	5-1606	set-scrrej-prmtrs.....	5-1864
rtrv-ppsopts.....	5-1618	set-uim-acthresh.....	5-1867
rtrv-prefix.....	5-1623	tst-msg.....	5-1878
rtrv-rmt-appl.....	5-1624	tst-npp-msg.....	5-1885
rtrv-rte.....	5-1625		
rtrv-rtx.....	5-1660		
rtrv-sccpopts.....	5-1672		
rtrv-scr-aftpc.....	5-1674		
rtrv-scr-blkdpcc.....	5-1680		
rtrv-scr-blkopc.....	5-1686		

System Maintenance

act-alm-trns.....	5-1
act-file-trns.....	5-5
act-flash.....	5-8

alw-card.....	5-29
alw-imt.....	5-32
alw-map-ss.....	5-33
alw-trm.....	5-35
aud-data.....	5-36
canc-alm-trns.....	5-42
chg-db.....	5-90
chg-seas-config.....	5-418
clr-imt-stats.....	5-511
conn-imt.....	5-513
copy-disk.....	5-514
copy-fts.....	5-516
copy-gpl.....	5-518
copy-meas.....	5-520
dact-alm-trns.....	5-523
dact-rstst.....	5-529
disc-imt.....	5-532
disp-fts-dir.....	5-533
dlt-fts.....	5-556
flash-card.....	5-940
format-disk.....	5-943
inh-alm.....	5-948
inh-card.....	5-956
inh-imt.....	5-958
inh-map-ss.....	5-959
inh-trm.....	5-962
init-card.....	5-963
init-flash.....	5-969
init-imt-gpl.....	5-973
init-mux.....	5-974
init-network.....	5-975
init-oap.....	5-978
init-sys.....	5-980
pass.....	5-985
rept-imt-info.....	5-991
rept-imt-lvl1.....	5-1012
rept-imt-lvl2.....	5-1027
rept-stat-alm.....	5-1046
rept-stat-applsock.....	5-1053
rept-stat-as.....	5-1055
rept-stat-assoc.....	5-1056
rept-stat-card.....	5-1059
rept-stat-cdt.....	5-1094
rept-stat-clk.....	5-1095
rept-stat-cluster.....	5-1102
rept-stat-dlk.....	5-1124
rept-stat-dstn.....	5-1125
rept-stat-e1.....	5-1137
rept-stat-enet.....	5-1139
rept-stat-eroute.....	5-1140
rept-stat-imt.....	5-1158
rept-stat-iptps.....	5-1160
rept-stat-lnp.....	5-1165
rept-stat-ls.....	5-1174

rept-stat-meas.....	5-1181
rept-stat-mon.....	5-1183
rept-stat-mps.....	5-1189
rept-stat-mux.....	5-1195
rept-stat-rtd.....	5-1196
rept-stat-rte.....	5-1201
rept-stat-rtkey.....	5-1223
rept-stat-rtx.....	5-1223
rept-stat-sccp.....	5-1229
rept-stat-seas.....	5-1255
rept-stat-slan.....	5-1259
rept-stat-slk.....	5-1262
rept-stat-sys.....	5-1270
rept-stat-t1.....	5-1275
rept-stat-trbl.....	5-1278
rept-stat-trm.....	5-1283
rept-stat-xlist.....	5-1287
rls-alm.....	5-1291
rmv-card.....	5-1292
rmv-imt.....	5-1293
rmv-trm.....	5-1294
rst-card.....	5-1295
rst-dstn.....	5-1296
rst-imt.....	5-1298
rst-trm.....	5-1298
rtrv-bip.....	5-1329
rtrv-log.....	5-1536
rtrv-obit.....	5-1607
rtrv-trbl.....	5-1811
tst-bip.....	5-1868
tst-disk.....	5-1869
tst-e1.....	5-1874
tst-imt.....	5-1876
tst-t1.....	5-1893
unhb-alm.....	5-1896

Link Maintenance

act-cdl.....	5-2
act-dlk.....	5-3
act-lpo.....	5-21
act-slk.....	5-26
alw-slk.....	5-33
blk-slk.....	5-40
canc-dlk.....	5-45
canc-lpo.....	5-46
canc-slk.....	5-48
chg-meas.....	5-285
chg-measopts.....	5-287
chg-mtc-measopts.....	5-308
dact-cdl.....	5-523
dact-lbp.....	5-527
dact-slk.....	5-530
inh-slk.....	5-961

rept-ftp-meas.....	5-987
rept-meas.....	5-1031
rept-stat-cdl.....	5-1092
rept-stat-lfs.....	5-1164
rept-stat-tstslk.....	5-1285
rept-x25-meas.....	5-1288
rtrv-meas-sched.....	5-1585
rtrv-measopts.....	5-1588
rtrv-mtc-measopts.....	5-1596
tst-dlk.....	5-1873
tst-slk.....	5-1888
ublk-slk.....	5-1894
unhb-slk.....	5-1903

Program Update

act-gpl.....	5-12
chg-feat.....	5-115
chg-gpl.....	5-126
rept-stat-gpl.....	5-1145
rtrv-feat.....	5-1412
rtrv-gpl.....	5-1419

Security Administration

canc-cmd.....	5-43
chg-attr-secu-log.....	5-72
chg-cmd.....	5-75
chg-cmdclass.....	5-78
chg-eisopts.....	5-114
chg-secu-dflt.....	5-420
chg-secu-trm.....	5-425
chg-user.....	5-492
copy-secu-log.....	5-521
dlt-user.....	5-657
ent-user.....	5-926
rept-stat-secu-log.....	5-1257
rtrv-attr-secu-log.....	5-1328
rtrv-eisopts.....	5-1411
rtrv-secu-dflt.....	5-1735
rtrv-secu-trm.....	5-1737
rtrv-secu-user.....	5-1739
rtrv-secu-log.....	5-1742
rtrv-sid.....	5-1752
set-date.....	5-1862
set-time.....	5-1865

LNP Basic

rtrv-lnp-ttmap.....	5-1532

LNP Database

chg-lnp-ttmap.....	5-238

LNP Subscription

Debug

act-upgrade.....	6-1
cdu.....	6-6
chg-bip-fld.....	6-13
chg-bip-rec.....	6-14
chg-tbl.....	6-16
chg-upgrade-config.....	6-18
clr-disk-stats.....	6-19
copy-tbl.....	6-19
disp-bip.....	6-21
disp-bp.....	6-23
disp-disk-dir.....	6-26
disp-disk-stats.....	6-31
disp-lba.....	6-32
disp-mem.....	6-34
disp-trace.....	6-36
dlt-bp.....	6-37
dlt-trace.....	6-38
ent-bp.....	6-39
ent-trace.....	6-44
rtrv-upgrade-config.....	6-60
send-msg.....	6-60
set-mem.....	6-63

Pass-Through

arp.....	7-2
aslog.....	7-5
asplog.....	7-6
assocrtt.....	7-12
connmgr.....	7-14
ftptest.....	7-21
linkinfo.....	7-23
msucount.....	7-33
msuroute.....	7-64
msutrace.....	7-70
netstat.....	7-91
nslookup.....	7-126
ping.....	7-129
sctp.....	7-133
sockrtt.....	7-142
soipdata.....	7-145
soiplog.....	7-147
traceroute.....	7-149
ualog.....	7-159

Using Commands

Introduction

This chapter provides the following information:

- A description of the system's Maintenance and Administration Subsystem
- A description of the system's input and output devices
- A description of how to enter commands
- The procedures for logging into and out of the system

This chapter is intended to assist personnel responsible for the system.

Maintenance and Administration Subsystem

The Maintenance and Administration Subsystem (MAS) is the central management point for the EAGLE 5 ISS. The MAS provides user interface, maintenance communication, peripheral services, alarm processing, system disk interface, and measurements. Management and redundancy is provided by use of two separate subsystem processors.

The MAS resides on two separate sets of Maintenance and Administration Subsystem Processor (MASP) cards and a Maintenance Disk and Alarm card (collectively referred to as control cards). The control cards are located in slots 1113 through 1118 of the EAGLE 5 ISS Control Shelf. The control cards can be either E5-based cards or legacy cards.

NOTE: During normal operation, the E5-based control cards and legacy control cards cannot be mixed in one EAGLE 5 ISS control shelf.

Legacy Control Cards

The legacy set of EAGLE 5 ISS control cards consists of the following cards:

- Two MASP card sets; each set contains two cards:
 - A General Purpose Service Module II card
 - A Terminal Disk Module card

- One Maintenance Disk and Alarm (MDAL) card

General Purpose Service Module II (GPSM-II) Card

Each GPSM-II card contains the Communications Processor and the Applications Processor and provides connections to the IMT bus. The card controls the maintenance and database administration activity and performs both application and communication processing. GPSM-II cards are located in slots 1113 and 1115 of the control shelf.

Terminal Disk Module (TDM) Card

Each TDM card provides the Terminal Processor for the 16 I/O ports, and interfaces to the Maintenance Disk and Alarm (MDAL) card. The TDM card also distributes Composite Clocks and High Speed Master clocks throughout the EAGLE 5 ISS, and distributes Shelf ID to the EAGLE 5 ISS. Each TDM card contains one fixed drive that is used to store primary and backup system databases, measurements, and Generic Program Loads (GPLs). The TDM cards are located in slots 1114 and 1116 of the control shelf.

Maintenance Disk and Alarm (MDAL) Card

The MDAL card processes alarm requests and provides fan control. There is only one MDAL card in a control card set. Critical, major, and minor system alarms are provided for up to 6 individual frames. In addition to the 3 system alarms, the E5-MDAL card provides the system audible alarm. The E5-MDAL card provides control of fans on a per-frame basis and allows for each fan relay to be set individually. The MDAL card contains a removable cartridge drive; the cartridge is used for installing new software; backing up the system software, the application software, and the database; and for downloading data for off-line processing. The MDAL card is located in slots 1117 and 1118 of the control shelf.

E5-based Control Cards

The E5-based set of EAGLE 5 ISS control cards consists of the following cards:

- Two Maintenance and Administration Subsystem Processor cards (E5-MASP cards). Each dual-slot E5-MASP card is made up of two modules:
 - Maintenance Communication Application Processor (E5-MCAP) card
 - Terminal Disk Module (E5-TDM) card
- One Maintenance Disk and Alarm card (E5-MDAL card)

Maintenance Communication Application Processor (E5-MCAP) Card

The E5-MCAP card contains the Communications Processor and Applications Processor and provides connections to the IMT bus. The card controls the maintenance and database administration activity and performs both application and communication processing. E5-MCAP cards are located in slots 1113 and 1115 of the control shelf.

Each E5-MCAP card contains one latched USB port for use with removable flash media (“thumb drive”), and one flush-mounted USB port for use with a plug-in “credit card” flash drive. The removable media drive is used to install and back up customer data. The credit card drive is used for upgrade and could be used for disaster recovery.

Terminal Disk Module (E5-TDM) Card

The E5-TDM card provides the Terminal Processor for the 16 I/O ports, and interfaces to the Maintenance Disk and Alarm (E5-MDAL) card and fixed disk storage. The E5-TDM card also distributes Composite Clocks and High Speed Master clocks throughout the EAGLE 5 ISS, and distributes Shelf ID to the EAGLE 5 ISS. Each E5-TDM card contains one fixed SATA drive that is used to store primary and backup system databases, measurements, and Generic Program Loads (GPLs). E5-TDM cards are located in slots 1114 and 1116 of the control shelf.

Maintenance Disk and Alarm (E5-MDAL) Card

The E5-MDAL card processes alarm requests and provides fan control. There is only one E5-MDAL card in a control card set. Critical, major, and minor system alarms are provided for up to 6 individual frames. In addition to the 3 system alarms, the E5-MDAL card provides the system audible alarm. The E5-MDAL card provides control of fans on a per-frame basis, and allows for each fan relay to be set individually. The E5-MDAL card does not contain a removable cartridge drive; drives for removable media are located on the E5-MCAP card. The E5-MDAL card is located in slots 1117 and 1118 of the control shelf.

Input/Output Devices

There are two types of Input/Output (I/O) devices: terminals and printers. All I/O devices are connected to the system through the control shelf backplane. Each I/O device is described in terms of its function and its connection to the system. Refer to the *Installation Manual - EAGLE 5 ISS* for backplane connection information.

Terminals and Printers

The EAGLE 5 ISS uses VT320 terminals for maintenance and database administration. The EAGLE 5 ISS also can be configured to communicate with the SEAS interface (OAP). The terminals enable you to enter information into or receive information from the system. The system is capable of communicating with terminals at data rates from 2400 to 19,200 baud, using the ASCII character set.

You must configure terminals to operate with the system. You also must set printers (and modems) for hardware flow control. To do this, enable Data Terminal Ready (DTR) through your terminal's configuration menu. A modem also must have DCD set on "high." If your terminal has the auto-wrap feature, ensure that it is disabled before using your terminal on the system.

For information on the setup values for printers and terminals on the system, see the **chg-trm** command.

Terminals provide the following capabilities:

- Command input and output
- Continuous alarm states
- Event/Error messages


You enter commands at the terminal to perform system operations such as displaying the system status, administering system security, and maintaining the database.

An example of a terminal screen is shown in Figure 4-1. Note that the alarm status area is labeled either Total Alarm Status or Active Alarm Status depending on how the VT320 terminal is configured. See the **chg-stpopts** command description for configuration information.

Alarms are displayed in the alarm status area of the terminal screen. The alarm levels are as follows:

- Critical – Indicates a severe, service-affecting condition has occurred and that immediate corrective action is needed, regardless of the time of day or the day of the week.
- Major – Indicates a serious disruption of service or the failure of important circuits is taking place. These troubles require attention and response to restore or maintain system capability.
- Minor – Indicates a trouble, but one that does not have a serious affect on service.
- Inhibited – Indicates a device in the system with an inhibited alarm. A temporarily or permanently inhibited alarm does not generate unsolicited output or cause alarm indicators to be turned on. See the **inh-alm** command description for information on inhibited alarms.

Figure 4-1. System Terminal User Display

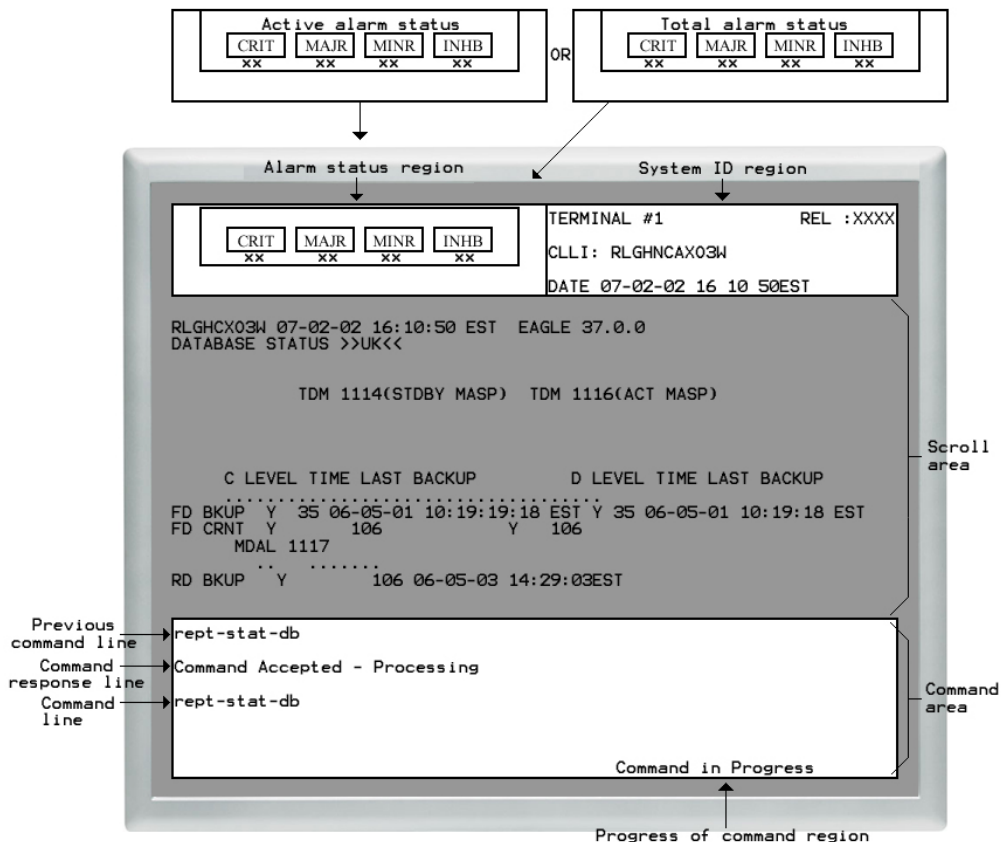

Event/Error messages also are issued to terminals to report system conditions or events. If the condition or event affects service, an alarm is issued along with an Event/Error message. Event/Error messages are displayed in the scroll area of the terminal screen.

Use the command line region of the terminal display () to enter commands. The command line region consists of two lines. Each of these lines can hold up to 80 characters. If you enter a command of more than 80 characters in length, the command appears on both lines. When you press the Enter

key, only the first 80 characters are displayed in the previous command line, followed by a message on the command response line showing the status of the command. The remaining characters have not been rejected; they are not displayed due to line length limitations. If you recall the command by pressing the Up arrow key or Down arrow key, all the characters in the command are displayed. For a description of the arrow key functions, see Table 4-2.

Terminal and Printer Connections

Terminals and printers are connected to the Terminal Disk Module (TDM), using the control shelf backplane. The TDM also provides Keyboard Send and Receive (KSR) function. See "KSR Function on VT320 Terminal Devices" on page 4-5 for more information on the KSR function. A description of the TDM can be found in the *Installation Manual - EAGLE 5 ISS*.

KSR Function on VT320 Terminal Devices

The terminals can use the keyboard send and receive (KSR) mode of operation. KSR refers to a device or mode of operation that prints or displays all received data. The KSR mode of operation typically supports a teletype printer, but in the system, it also supports a video display unit and keyboard.

The KSR feature enables you to attach a dumb terminal device or teletype printer to the system's I/O ports or emulate KSR mode of operation on a VT320. KSR enhances the system's dial-up administration functions by allowing faster throughput, because the screen formatting characters associated with the VT320 mode of operation need not be transmitted.

KSR Configuration

This feature allows you to configure the operational characteristics of system's I/O serial ports to support KSR terminal devices. See Table 4-2 for a list of the keyboard functions used by the KSR feature. For information on configuring a serial I/O port for KSR operation, see the *Database Administration Manual - SS7*.

Changing the Mode Of Operation

Before you attempt to change the mode of operation of the terminal, you *must* follow the "Changing the Terminal Characteristics" procedure found in the *Database Administration Manual - SS7*. You must perform this procedure from another terminal.

You can change the mode of operation of the terminal by pressing the **F11** key. The **F11** key instructs the system to mimic a KSR. Command line editing operates exactly like the VT320.

The KSR emulation resembles a printer when in operation. The entire screen is used for output. Before you enter a command, press <Ctrl-A>. The command prompt (>) is displayed. Enter a carriage return to signify the end of command entry.

While in the KSR mode, all output to the video display unit is buffered. When any character is entered from the terminal, a one-minute timer is started and data reception from the system is stopped. The system responds to the command with the appropriate response, then resumes sending data where it left off.

If a carriage return is not received during command entry, a time-out occurs and the system resumes sending data to the terminal.

Requirements

The KSR function operates on any combination of terminal type assignments for the 16 available terminal ports.

Telnet Terminals

Telnet is a user command using the underlying TCP/IP protocol for accessing remote computers. Telnet provides a connection from a remote (client) to a host (server) computer; the client keyboard and monitor (or window) act as if physically attached to the host computer. Remote users log on as if they were local users with whatever privileges may have been granted to the specific applications and data on the remote computer. Remote users, after they log in, can use the same services as a local user.

The IP User Interface feature permits any standard telnet client to act as an EAGLE 5 ISS terminal. This IP-based access provides a standard interface through which EAGLE 5 ISS commands are entered from a telnet session to the EAGLE 5 ISS. The EAGLE 5 ISS then provides command responses back to the remote telnet terminal.

Up to 3 IPSM cards in the EAGLE 5 ISS, with IP connectivity, enable telnet clients to connect from anywhere on the customer's IP LAN. The EAGLE 5 ISS must be on the customer's LAN or WAN. Each IPSM card provides 8 telnet terminal ports (IDs 17-24 for the first card installed, 25-32 for the second card installed, and 33-40 for the third card installed), which are automatically made available when the card is installed and provisioned. See the **chg-trm** command description in this manual for more information about configuring telnet terminals. Refer to the "Adding an IPSM" procedure in the Database Administration Manual for information on configuring the IPSM.

From the telnet client, the remote user connect to any one of the equipped IPSM cards available by entering the command **telnet** *<IP address>*. For example,

```
telnet 192.168.1.100
```

The remote user then selects a terminal number from a list of available terminals. If an incorrect terminal number (one not listed in the prompt) is selected, the prompt appears again. (After three incorrect tries, the session is closed.) After the session is accepted, an EAGLE 5 ISS welcome message appears. At this point, broadcast messages (if provisioned) will begin to appear. See Figure 4-2.

Figure 4-2. Telnet Terminal Selection and Login

```

Telnet - [None]
Connect Edit Terminal Help
telnet 192.169.1.100

Connected..
Welcome to Eagle.

Select a terminal from the list below:
(17, 18, 19, 22, 24)
> 21
21 is not a valid selection.

Select a terminal from the list below:
(17, 18, 19, 22, 24)
> 17
Connection established as terminal 17.

      eagle10110 01-10-15 09:56:00 GMT Rel 29.0.0-40.27.0
      7630.0046   TERMINAL    17           Terminal enabled
;

> login:uid=eagle

Enter Password :

Command Accepted - Processing

      eagle10110 01-10-15 10:00:16 GMT Rel 29.0.0-40.27.0
      login:uid=eagle
      Command entered at terminal #17.
;

      eagle10110 01-10-15 10:00:18 GMT Rel 29.0.0-40.27.0
      User logged in on terminal 17.
;

      eagle10110 01-10-15 10:00:18 GMT Rel 29.0.0-40.27.0
      NOTICE: This is a private computer system.
      Unauthorized access or use may lead to prosecution.
      0 LOGIN failures since last successful LOGIN
      Last successful LOGIN was on port 3 on 01-10-15 @ 09:59:51

```

After a connection is made, the remote user can log in using a pre-provisioned user ID and password. (The user ID and password must be provisioned from an existing serial terminal.) The **login** command can be typed directly, without typing <Ctrl-A> first.

An EAGLE 5 ISS serial terminal emulating a Keyboard Send/Receive (KSR) device is normally in *display mode* (where outgoing messages are displayed). In order to enter a command, the user must interrupt the display by holding down the Ctrl key and typing an “a” (the ATTENTION or Ctrl-A key sequence). When the terminal controller receives an ATTENTION, it enters a *command entry mode*. The output text is temporarily halted, and the prompt symbol “>” appears.

The telnet terminal enters *command entry mode* when any key is pressed; <Ctrl-A> is not needed.

After the login is accepted and the user presses a key to receive the standard EAGLE 5 ISS command line prompt, all EAGLE 5 ISS commands assigned to that user ID are now accessible.

The display of broadcast messages can be interrupted with any keystroke, and will resume after a command is entered or a set timeout expires. When in command entry mode, the telnet server holds any outgoing messages in a buffer while a command is entered. A command entry is completed by pressing the Enter key.

The telnet server waits up to 60 seconds between keystrokes for the command text to be completed, before timing out and resuming the broadcast display. If the command entry times out, and output resumes, the incomplete command text might scroll off the screen. Even though the incomplete command was not executed, it is saved as an entry in the command buffer. This incomplete command will be displayed again when any key is pressed. The command string can be finished by continuing the typing where it was interrupted. Pressing the Enter key submits this command as usual.

Broadcast messages are held in a buffer from the time a key is pressed, until the command is complete (timed out, aborted, cancelled, or rejected). This is to allow command responses to be completely displayed. After the command completes, broadcast messages (if provisioned) will resume. The IPSM card buffer will hold up to 30 minutes of broadcast output before discarding the oldest messages.

When the user enters the **logout** command to end the telnet session, the user is logged off of the EAGLE 5 ISS, but the port remains assigned to the EAGLE 5 ISS telnet terminal. If the active port connection is lost for a reason such as hardware fault or system interruption, the telnet server resets affected ports, the session is closed, and the user ID is logged off.

The OA&M IP Security Enhancement feature provides secure connections to the EAGLE 5 ISS. Refer to Appendix B of the Database Administration Manual - System Management for information on using the PuTTY client to make a secure telnet connection.

SEAS Terminals

The SEAS Over IP feature introduces a TCP/IP-based interface for SEAS. The SEAS interface constitutes the path between the EAGLE 5 ISS and a Common Channel Signaling Message Router (CCS MR). The EAGLE 5 ISS uses the IP User Interface feature and E5-IPSM cards instead of EOAP to provide the paths for each SEAS TCP/IP link.

The E5-IPSM card allows one of the eight IP terminals to function as a SEAS terminal and provide connectivity between the CCS MR and the EAGLE 5 ISS. The E5-IPSM card also continues to provide the EAGLE 5 ISS with generic IP-based services, such as Telnet and FTP on the remaining seven IP terminals.

A maximum of 2 SEAS terminals can be configured in the EAGLE 5 ISS.

The **chg-trm:type=seas** command can be entered for terminals 17 - 40 when all conditions for a terminal to be set as a SEAS terminal are met.

The SEAS output group cannot be turned off for a SEAS terminal.

Element Management System Alarm Monitor Terminals

Element Management System Alarm Monitor (EMSALM) terminals display UAM alarm set and clear messages and the UIM 1083 "system alive" messages only. No other messages (including reports and other UIMs) are displayed. EMSALM terminals are designed to display alarm messages only. EMSALM terminals are not restricted in any other way. They can accept login, and commands; however these operations may interfere with alarm monitoring and should be performed on an alternate terminal.

Serial port terminal IDs 1-16 can be assigned as EMSALM terminals. These EMSALM terminals are a refinement of the KSR terminal, and contain all the KSR terminal communication parameters.

Telnet terminal IDs 17-40 can be assigned as EMSALM terminals when the IP User Interface feature is enabled and turned on and up to 3 IPSM cards are equipped in the system (see "Telnet Terminals" on page 4-6). These EMSALM terminals have all of the functions of a telnet type terminal.

When the **chg-trm** command is entered to change a terminal to the EMSALM type, all output group parameter values for that terminal default to YES, even if they were set to NO before the change. Even though an output group is set to YES for an EMSALM terminal, no reports or UIMS other than UIM 1083 will appear for that output group. Individual output group values can be changed to NO by entering another **chg-trm** command for an EMSALM terminal (do this only with caution; it can cause loss of UAM alarm messages at the EMSALM terminal).

When the **chg-trm** command is entered to change a terminal from type EMSALM to another type, the output group values remain unchanged. A **chg-trm** command can be entered to change output group settings.

About Commands

Commands allow you to interact with the system to perform specific functions. Commands are available to perform the following functions:

- Obtain system status and operational status
- Modify system configuration
- Obtain measurement reports

The following sections describe how to enter commands through a system terminal. Command correction, keywords, parameters, and syntax are described.

Entering Commands

All commands are entered at the command prompt (>), located in the bottom window of the terminal display. After entering a command, you must press the **Enter** key. When the command has executed (an output message appears in the display to indicate execution), you can enter another command. The **F9** function key allows you to interrupt a running command; however, you cannot enter another command until the running command completes its operation.

Commands are not case sensitive; therefore, either uppercase or lowercase characters can be used. Intermixing (using both upper and lower case) characters does not create an error message, but you must use the correct command syntax.

Action Commands

Throughout this manual, the term "action command" is used in the description of some dependencies, as in the sentence "No other action command can be in progress when this command is entered."

Action commands are used to effect changes to the state of entities within the system, such as cards and signaling links. For example, you use the **inh-card** command to change the state of the card to Out-of Service - Maintenance Disabled (OOS-MT-DSBLD).

Table 4-1 lists the action commands and shows which type of system entity they are associated with.

Table 4-1. Action Commands and Their Associated System Entity

Action Commands	System Entity
act-slk, alw-slk, canc-slk, dact-slk, inh-slk, unhb-slk, blk-slk, ublk-slk, tst-slk	Link Commands
act-alm-trns, canc-alm-trns, rls-alm	Alarm Commands
alw-trm, inh-trm	Terminal Commands
alw-card, inh-card, rmv-card, rst-card	Card Commands

Command Keywords and Parameters

Commands consist of two parts: keywords and parameters. Keywords identify the principal action to be performed by the system, and consist of one to three words. Most commands also require parameters to further define the command operation.

Parameters are entered after the keyword. Each parameter must be separated from the keyword or the previous parameter with a colon. If a parameter has multiple values, the values entered are discrete and must be separated with a hyphen or comma. The parameters can be entered in any order.

Some command parameters have built-in default values that are used if a value is not specified. To accept a default value, press **Enter** after the desired keyword and parameters have been entered.

Use the following delimiters when entering commands:

- : —separates parameters
- or , —separates multiple values within a parameter block
- = —use as delimiter between the parameter and input value

The following is an example of a command entry:

```
> dact-slk:loc=1101:port=a
```

The keyword in the above example is **dact-slk** (Deactivate Signaling Link). The first parameter for this command is **loc=1101** (the actual card location in the system for the link being cancelled, based on equipment location). The second parameter is **port=a**. This parameter signifies which signaling link port on the card in the designated location has the link that is to be cancelled.

If an error is made while typing commands, use the **Delete** key to make corrections, one character at a time.

NOTE: If the same parameter is entered more than once in a command, the system accepts the last parameter value that was entered. Any values for the parameter that were entered earlier in the command are ignored.

Keyboard Functions

Some keyboard functions used with commands are described in the previous section. Keyboard functions available for use with commands are listed in Table 4-2. Arrow key functions are further described following the table.

Table 4-2. Keyboard Functions

VT320 Key Sequence	KSR Key Sequence	Description
↑	↑	The Up arrow key recalls the previous commands entered at the prompt, one command at a time. The Up arrow key scrolls backwards through up to 10 commands for a KSR, VT320, or SCCS terminal, and up to 20 commands for an IP UI telnet terminal. See page 4-13 for a description of the Up arrow key functions.
←	←	The Left arrow key backspaces the underline cursor without erasing.
↓	↓	The Down arrow key recalls the previous command entered at the prompt, one parameter at a time. If the Up arrow key is pressed and more than one command has been entered in the session, pressing the Down arrow key displays one previously entered command at a time. The Down arrow key scrolls forward through up to 10 commands for KSR, VT320, and SCCS terminals and up to 20 commands for IP UI telnet terminals. See page 4-14 for a description of the down arrow key functions.
→	→	The Right arrow key recalls the last command entered at the prompt, one character at a time.
F6	F6	The F6 Function key refreshes the terminal screen, including any characters already input on the command line and the command response line.
F7	F7	The F7 Function key clears the scroll buffer. This enables a user to stop useless information from passing to the scroll region of the system terminal.
F8	F8	The F8 function key enables you to stop and restart the scrolling of information on the terminal screen.

Table 4-2. Keyboard Functions

VT320 Key Sequence	KSR Key Sequence	Description
F9	F9	The F9 Function key allows you to interrupt a running command so that you can enter another command. Output and processing of the interrupted command continue. Pressing F9 is the same as issuing the canc-cmd command with no parameters. The commands that can be interrupted by pressing F9 are listed in the description of the canc-cmd command. If the terminal is running one of the listed commands and you press F9, output and processing are cancelled. This function works only on the same terminal that is running the command you want to cancel. To cancel a command from another terminal, use the canc-cmd:trm= command (see the canc-cmd command description).
F10	F10	The F10 Function key displays help information for the last command that was entered, including parameters, parameter formats, and the command class.
F11	F11	The F11 Function key allows you to toggle the terminal's mode of operation from VT320 to KSR and from KSR to VT320. This function key has no effect on IP UI telnet terminals.
Not Available	Control-A	Control-A allows you to enter a command in the KSR mode.
Control-S	Control-S	Used with the <i>sw</i> or <i>both</i> flow control (see the chg-trm command description for more information), this key sequence sends the XOFF character to temporarily stop sending data.
Control-Q	Control-Q	Used with the <i>sw</i> or <i>both</i> flow control (see the chg-trm command description for more information), this key sequence sends the XON character to resume sending data.
Ins	Ins	When Insert is toggled on, typed characters are inserted into the command line, moving existing characters to the right. When toggled off, typed characters overwrite existing characters.

Table 4-2. Keyboard Functions

VT320 Key Sequence	KSR Key Sequence	Description
Del	Del	Deletes one character at a time from the right; the cursor stays in position.
Backspace	Backspace	Deletes a character and moves the cursor one space to the left.

Arrow Key Operation

The arrow keys are used to move the cursor to a different position in a command, and to display part or all of a command that was previously entered.

On KSR, VT320, and SCCS terminals, you can scroll through the last 10 commands that were entered at the terminal during the session. On IP UI telnet terminals, you can scroll through the last 20 commands that were entered at the terminal during the session. Part or all of one command at a time is displayed. When you have scrolled through the complete list of up to 10 or 20 commands, the scrolling wraps back to the beginning of the list.

The list of previously entered commands is cleared when a terminal is inhibited and allowed (**inh-trm:trm=xx** and **alw-trm:trm=xx**) and when a file transfer is initialized with the **act-file-trns** command.

There are two modes of command recall for Up and Down arrow keys:

- **Edit Mode**
Edit Mode includes any key operation that changes the command at the prompt, such as the Delete key, the Back Space key, or an alphanumeric key. Pressing one of these keys to enter or change a command puts the terminal into Edit Mode. Pressing the Enter key (or carriage return) takes the terminal out of Edit Mode.
- **Non-edit Mode**
Pressing the Enter key (or carriage return) puts the terminal into Non-edit Mode. A terminal remains in Non-edit Mode when you press an arrow key, a Function key, or the Insert key, which do not change the command at the prompt. When you press a key that changes the command, the terminal goes into Edit Mode until you press the Enter key again.

Up Arrow Key

The Up arrow key is used to recall up to the last 10 commands (KSR, VT320, and SCCS terminals) or the last 20 commands (IP UI telnet terminals) entered at the prompt during the session.

In Edit Mode

- You enter 3 characters of a command at the prompt and press the Up arrow key. If the previous command was 6 characters long, then the last 3 characters of the previous command are recalled and displayed after the 3 characters that you entered at the prompt.
- You enter 10 characters of a command at the prompt and press the Up arrow key. If the previous command was 6 characters long, none of the previous command is displayed. The command that you entered remains as you entered it at the prompt.

- Entering part or all of a command at the prompt puts the terminal into Edit Mode. In Edit Mode, the last (or previous) command is recalled only if the command length of the last command is greater than the command at the prompt. For example,;

In Non-edit Mode

- When you have pressed the Enter key and there is no command at the prompt, or you have pressed the Insert key or a Function key, the terminal is in Non-edit Mode.
- When you press the Up arrow key in Non-edit Mode, and you have entered at least one previous command, the last command that you entered is displayed at the prompt. Pressing the Up arrow key again clears the command at the prompt (if any) and displays the next previous command that you entered (if any). By continuing to press the Up arrow key, you can scroll backwards through the last 10 commands (KSR, VT320, and SCCS terminals) or the last 20 commands (IP UI telnet terminals) that you entered at the terminal. The display wraps back to the most recent of the entered commands when all of the available commands have been recalled. The terminal remains in Non-edit Mode until you press a key that changes the displayed command.

Down Arrow Key

In Edit Mode, the Down arrow key recalls the last command that was entered at the terminal, one parameter at a time. The recalled parameter is displayed at the end of the entry that currently appears at the prompt.

In Non-edit Mode:

- If the Up arrow has not been pressed just before pressing the Down arrow key, the Down arrow key recalls the last command that was entered at the terminal, one parameter at a time.
- If the Up arrow key is the last key that was pressed before the Down arrow key is pressed, the Down arrow key scrolls forward through the last 10 commands (KSR, VT320, and SCCS terminals) or last 20 commands (IP UI telnet terminals), displaying one complete command each time the key is pressed. The scrolling wraps to the beginning of the list when all of the available commands have been displayed.

Right Arrow Key

Each time the Right arrow key is pressed, one character of the last command is recalled and the cursor moves one position to the right. When the last command is completely displayed, pressing the Right arrow key does not cause any cursor movement or character display.

Left Arrow Key

The Left arrow key moves the underline cursor one position to the left without erasing the character. The underline cursor can be moved until it reaches the first character at the left of the command. If

the Left arrow key is pressed again after the cursor reaches the first character of the command, the bell sounds.

Command Output and Messages

Reports and outputs generated through retrieve or report status commands are followed by a semi-colon (;) to signify the end of the output (this is in compliance with TL1 standards).

The following types of output messages are used on the system:

- **Command Accepted—Processing:** The command has been accepted by the application's command handler as syntactically correct. This message is displayed in the command area of the terminal display.
- **Command Completed—**The command has been entered, and the system has completed processing. This message is displayed in the scroll area of the terminal display.
- **Command Executed—**The command has been entered, and the system has completed processing. This message is displayed in the command area of the terminal display.
- **Command Failed—**The command was executed but failed due to an external reason, such as the link is not equipped or a disk drive is unable to communicate. The reason for the failure is included in this message.
- **Command Rejected—**The command syntax could be incorrect, or a parameter value is incorrect (semantic error). This message is displayed in the command area of the terminal display. The reason for rejecting the command (command syntax or incorrect parameter value) is included in this message.
- **Command Aborted—**The command syntax and the parameter values are ok, but for some reason the command was aborted (for example, a disk drive is inaccessible). This message is displayed in the scroll area of the terminal display.
- **Command Response Messages—**A command is entered at the terminal, and the response to that command is echoed on that same terminal. These messages are displayed in the scroll area of the terminal display.
- **Unsolicited Messages—**An example of unsolicited messages are the messages delivered in response to alarm conditions. These messages are displayed in the scroll area of the terminal display.

The unsolicited messages can be directed to a specific terminal or printer by using the **chg-trm** command to assign one or more of the following groups of unsolicited output messages to the specified terminal or printer.

Application Server	Application Subsystem
Card	Clock
Debug	Global Title Translation
Gateway Screening	Measurements Maintenance
Monitor	MPS
SEAS Maintenance	SLAN Maintenance
System Maintenance	Security Administration

Traffic Measurements	Database Administration
Link Maintenance	Program Update
LNP Database Administration	LNP Subscription


To configure a terminal to receive unsolicited LNP database administration and LNP subscription messages, the LNP feature must be turned on (see the **enable-ctrl-feat** command).

Command Output Banners

When a command is executed in the system, one or more banner lines appear in the output that is displayed for the command.

page 4-16 shows the general format of an output banner.

Figure 4-3. Output Banner Format

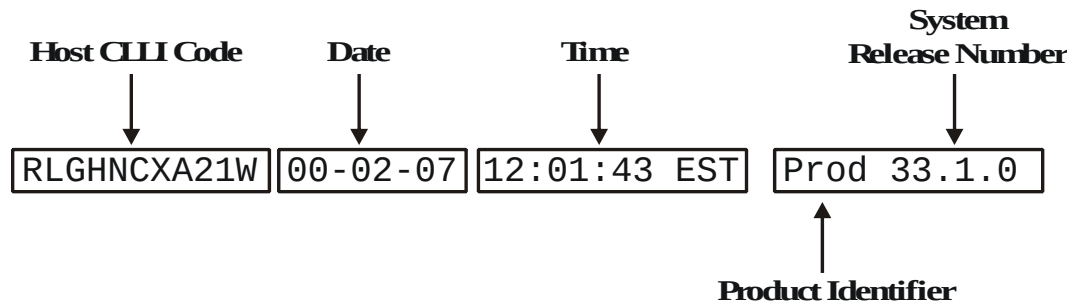

The following fields appear in each output banner:

- **Host CLI code**—a maximum of one alphabetic character and ten alphanumeric characters. The CLI code uniquely identifies the system in terms of its physical location. The CLI code must be unique among all elements in the system. The CLI code contains the following information:
 - City—4 characters
 - State— 2 characters
 - Building— 2 characters
 - Equipment type —3 characters
- Date—year-month-day
- Time—hour: minute: second time zone
- System Release Number— contains a product identifier and the version ID number. The product identifier, which is shown as 'Prod' in Figure 4-3 and the output examples in this manual, can appear as "EAGLE" or "EAGLE5" depending on which product key is turned on in the system (see the **rtrv-ctrl-feat** output example). If one or more "EAGLE 5" features are enabled in the system, the EAGLE5 product key must also be turned on and EAGLE5 will appear in the banner. If there are no "EAGLE 5" features enabled in the system, the EAGLE product key will be turned on and EAGLE will appear in the banner. (If both the EAGLE5 and EAGLE product keys are enabled, the EAGLE5 product key should be turned on and appear in the banner).

The version ID number identifies the GPL set that is specific to the software release that is expected to be installed on the system as approved loads. The format of the version ID number is *maj.min.maint*, defined as follows:

- *maj*—the major release ID
- *min*—the minor release ID
- *maint*—the maintenance release ID

System Security

User IDs and passwords protect the system from unauthorized entry into the system and enhance system security. To enter the system through a terminal, a user must enter a valid user ID and password at the system prompt, and the user ID and password must be authorized for use together. A user ID identifies a user to the system.

To maintain the security of the system, passwords should be changed periodically and user IDs should be deleted whenever there is a personnel change.

When prompted to enter a new password, a different password should be provided. This is the responsibility of the user, and is not enforced by the EAGLE 5 ISS.

Rules for User ID and Password Administration

The rules for administering User IDs and passwords are:

- The maximum number of user ID-password combinations is 100.
- The maximum length of the user ID is 16 characters.
- The maximum length of the password is 12 characters; the minimum length is site provisionable using the **chg-secu-dflt** command, and it can be from 1 – 12 characters long.
- User IDs and passwords may contain any printable characters except the characters used as command delimiters: colon (:), comma (,), hyphen (-), or equal sign (=).
- Each user ID must begin with an alpha character.
- A password must contain:
 - At least as many characters as specified on the **minlen** parameter of the **chg-secu-dflt** command
 - At least as many alphabetic characters as specified on the **alpha** parameter of the **chg-secu-dflt** command
 - At least as many numeric characters as specified on the **num** parameter of the **chg-secu-dflt** command
 - At least as many punctuation characters as specified on the **punc** parameter of the **chg-secu-dflt** command
- A password must not contain the associated user ID.

Command Classes

Each user ID and password combination is assigned to one or more command classes to control the set of commands that a user may enter.

There are 8 unique non-configurable command classes: Basic, Database Administration, Debug, Link Maintenance, Program Update, Security Administration, System Maintenance, and LNP Basic. (The Basic command class is assigned to all users as a default.)

There are 32 available configurable command classes. See the **chg-cmd** command description and the **chg-cmdclass** command description for information about naming and assigning commands to configurable command classes.

See the **chg-user** command description or the **ent-user** command description for more information on configuring user IDs and passwords and assigning command classes.

Login Security Checks

To aid in system security, the system maintains a record of when a password was last changed and requires a user to change the password when it is older than the site-specified maximum password age. The system also keeps track of the elapsed time between successful logins. If the time between successful logins exceeds the site-specified maximum, a user is not allowed access to the system. The site systems administrator also has the ability to revoke a user ID.

When a user first logs into the system, the default unauthorized user warning is displayed as follows

```
NOTICE: This is a private computer system.
```

```
Unauthorized access or use may lead to prosecution.
```

Additional security is available for the system in that multiple logins using the same user ID are prohibited.

Intrusion Alert

To alert the system administrator to a possible attempt by an unauthorized person trying to log into the system, the system issues a scroll area message. When 5 or more consecutive attempts to log into the system have failed, the following scroll area message is sent to all terminal ports that can receive unsolicited Security Administration messages:

```
Info: xxxxxxxxxx successive LOGIN failures on port pp
```

Where:

xxxxxxx is the number of consecutive login failures on the port (1 – 4,294,967,295)

pp is the terminal port (1 – 40) on which the login attempts were made

When the attempt to log into the system is successful after a series of failed consecutive login attempts, or if the active MASP reboots, the count of failed consecutive login attempts for that port is reset to 0.

Attempts to log into the system that are not completed normally, are not considered login attempts and are not included in the count of failed consecutive login attempts. For example, while prompting

for a password you might use the **F9** key to abort the command, or errors might occur when the system is looking up a user ID or password.

Login Procedure

The commands described in this manual are entered at a terminal connected to the system. Before you can enter most of the commands, you must enter the **login** command to log into the system and open a user session. You must enter the login command with a valid user ID and password combination. When the system accepts your user ID and password as valid, you can enter commands at the terminal in the user session.

The first procedure in this section explains how to log into the system using the **login** command.

The procedures that follow the login procedure explain how to handle common situations that can arise when you log into the system.

- You must change the password the first time that you log in with a new user ID and password.
- The user ID and password that you enter are not accepted as valid.
- Your password has expired and must be changed.
- Someone else has already logged on with your user ID and password; the system does not allow the same ID and password to be used on two terminals at the same time.

NOTE: You can enter the **act-user** command instead of the **login** command.

Procedure - Log into the System for a User Session

- 1 At the system prompt (>), enter the **login** command with your user ID.
-

- 2 Press the **Enter** key.
The following message appears:

Enter Password:

- 3 At the system prompt, type your password.
For security reasons, the password is not displayed on the terminal screen.
-

- 4 Press the **Enter** key.
Follow the remaining steps to complete this procedure or to go to another procedure, depending on the system response to validation of your user ID and password.
-

- 5 If your user ID and password combination are accepted and the following messages appear in the terminal input/command response region, the terminal is available for a user session.

Command Accepted-Processing
Command Executed

This procedure is complete.

- 6 If your user ID and password combination are not accepted and the following message appears, go to ""Procedure - Your User ID and Password were not Accepted" on page 4-18.

E2757 Cmd Rej: Invalid UserID/Password Combination

- 7 If you entered a new user ID and password combination for the first time, the following message appears, go to page 4-20 .

Enter new password (password must be changed) :

- 8 If you entered your user ID and password combination and your password has expired, the following message appears, go to page 4-21 .

Enter new password (password has expired and must be changed) :

- 9 If you entered your user ID and password combination and they are already being used at another terminal, the following message appears. Go to page 4-22 .

E2750 Cmd Rej: UserID already logged on (or is logging on) another port

Procedure - Your User ID and Password were not Accepted

- 1 This procedure outlines the steps to follow when you attempt to log into the system and your user ID and password combination are not accepted.
When you entered the **login** command with your user ID and entered your password at the system prompt, the following message appeared:

E2757 Cmd Rej: Invalid UserID/Password Combination

When this message is displayed, the terminal also presents a message describing the login attempt and the time and date the attempt occurred.

- 2 Verify that you have the correct user ID and password.
Return to the login procedure, and log in again with the correct user ID and password.
If the problem occurs again, contact your System Administrator.
-

Procedure - You Must Change Your Password

- 1 This situation can occur when you first log in after the system administrator uses the **ent-user** command to enter a new user ID and password combination, or when you first log in after the **chg-user:pid=yes** command has been entered.
When you entered the **login** command with your user ID and entered your password at the system prompt, the following message appeared:

Enter new password (password must be changed) :

Type a new password, following your site guidelines.

For security reasons, the password is not displayed on the terminal screen.

- 2 Press the **Enter** key.

The system checks the password to ensure that it meets your site's password complexity requirements.

- 3 If your password does not meet your site's password complexity requirements, the system displays a message based on the password violation (see page 4-22 for a list of possible messages).

The login process ends.

Decide on a new password, and start the login procedure again.

- 4 If your password meets the complexity requirements, the following message appears:

Verify Password:

Type the exact password again that you entered in Step 1

For security reasons, the password is not displayed on the terminal screen.

- 5 Press the **Enter** key.
-

- 6 If the user ID and password combination are accepted and the following messages appear in the terminal input/command response region, the terminal is available for a user session

Command Accepted-Processing
Command Executed

- 7 Record your new password in a secure location.
-

Procedure - Your Password has Expired

- 1 When you entered the **login** command with your user ID and entered your password at the system prompt, the following message appeared:

Enter new password (password has expired and must be changed) :

Type a new password, following your site guidelines.

For security reasons, the password is not displayed on the terminal screen.

- 2 Press the **Enter** key.
The system checks the password to ensure that it adheres to your site's password complexity requirements.
-

- 3 If your password does not meet your site's password complexity requirements, the system displays a message based on the password violation (see page 4-22 for a list of possible messages).

The login process ends.

Decide on a new password, and start the login procedure again.

- 4 If your password meets the complexity requirements, the following message appears:

Verify Password:

Type the exact password again that you entered in Step 1

For security reasons, the password is not displayed on the terminal screen.

5 Press the **Enter** key.

6 If the user ID and password combination are accepted and the following messages appear in the terminal input/command response region, the terminal is available for a user session

Command Accepted-Processing
Command Executed

7 Record your new password in a secure location.

Procedure - Your User ID is Already Being Used

1 When you entered the **login** command with your user ID and entered your password at the system prompt, the following message appeared:

E2750 Cmd Rej: UserID already logged on (or is logging on) another port

The following information is displayed in the scroll area:

Info: UID is currently logged on (or is logging on) to port yy.

where yy is in the range of 1 - 40.

2 Find the terminal at port yy, and log off your user ID at that workstation.
See page 4-23 .

3 Return to your terminal and log into the system again.

Login Error Messages

- E2262 Cmd Rej: Password too long, 12 maximum
- E2263 Cmd Rej: Password does not contain enough characters
- E2264 Cmd Rej: Password verification failed
- E2750 Cmd Rej: UserID already logged on (or is logging on) another port
- E2751 Cmd Rej: UserID has been revoked
- E2752 Cmd Rej: UserID has become obsolete and cannot be used
- E2753 Cmd Rej: Password does not contain enough alphabetic characters
- E2754 Cmd Rej: Password does not contain enough numeric characters
- E2755 Cmd Rej: Password does not contain enough punctuation characters
- E2756 Cmd Rej: Failed reading the password table

- E2757 Cmd Rej: Invalid userID/password combination
- E2758 Cmd Rej: ALPHA+NUM+PUNC must not be greater than 12
- E2759 Cmd Rej: Revocation of security admin userID not allowed
- E2760 Cmd Rej: Failed reading the security defaults table
- E2761 Cmd Rej: Password cannot contain userID

See the **chg-secu-dflt** command description for information on different options the system administrator has for configuring the system for password requirements.

The following is an example of the information that might be displayed in the scroll area, depending on your site's configuration:

New password must contain

- from 8 to 12 characters
- at least 1 alphabetic character(s) (a – z)
- at least 1 numeric character(s) (0 – 9)
- at least 1 punctuation character(s) (for example, \$%#@#)

Logout Procedure

When a terminal session is completed, you perform the following logout procedure to log out of the system. The terminal returns to an input idle state.

NOTE: You can use the `dact-user` command instead of the `logout` command.

Procedure - Log Out Of the System

- 1 At the system prompt (>), enter the **logout** command.
- 2 Press the **Enter** key.
The following messages appear on the terminal screen to confirm command completion:

```
Command Accepted-Processing
Command Executed
```

Commands

Introduction

This chapter contains commands that are not pass-through or debug commands. The commands are listed in alphabetical order starting on page 5-1 .

For each command listed in this chapter, the following information is given:

- A description of the command
- The command syntax
- A list of related commands
- The command class to which the command belongs
- A description of the command parameters
- An example of the command usage
- Rules, dependencies, and notes relevant to the command
- Sample command output

act-alm-trns

Activate Alarm Transfer

Use this command to transfer all alarm indications from the local office to the remote maintenance center.

Keyword: `act-alm-trns`

Related Commands: `dact-alm-trns`, `rept-stat-clk`, `rept-stat-trbl`, `rtrv-obit`, `rtrv-trbl`

Command Class: System Maintenance

Parameters

This command has no parameters.

Example

`act-alm-trns`

Dependencies

No other action command can be in progress when this command is entered.

Notes

After this command is entered, use the **rept-stat-alm** command to verify the **act-alm-trns** action.

New alarms cause the local maintenance center audible alarms to sound for a short period.

Output**act-alm-trns**

```
rlghncxa03w 04-01-09:50:17 EST EAGLE 31.3.0
Alarms transferred to Remote Maintenance Center
Command Completed.
```

```
;
```

act-cdl**Activate Command Driven Loopback**

Use this command to initiate a command driven loopback for testing a signaling link.

Command Driven Loopback is the ability to locally drive a signaling link into a manual line loopback. The data received on the signaling link is echoed (transmitted) back. This is effectively the reverse of the **tst-slk:loopback=lxvr**, which loops the transmitted data back to the receiver.

Keyword: act-cdl

Related Commands: act-lbp, dact-cdl, dact-lbp, rept-stat-cdl, tst-slk

Command Class: Link Maintenance

Parameters

:link= (mandatory)

SS7 signaling links. The SS7 signaling link to be tested.

Synonym: port

Range: a, b, a1-a31, b1-b31

Not all card types support all **link** parameter values.

See "Summary of Range Values for :link Parameter" for valid link parameter range values for each type of card that can have assigned signaling links.

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

:loopback= (optional)

Loopback test type.

Range: line, payload

The **payload** value is valid only on LIM-ATM and E1-ATM cards.

Default: line

Example

```
act-cdl:loc=1205:link=b
```

Dependencies

The card location specified in the **loc** parameter must be equipped.

The signaling link specified in the **link** parameter must be equipped.

LFS must not be running on the specified signaling link when this command is entered. The LFS processing must be stopped or must be allowed to complete before this command can be entered.

The **loopback=payload** parameter is valid only for LIM-ATM and E1-ATM cards.

Command Driven Loopback testing is not available during upgrade.

A Command Driven Loopback test cannot be in progress on the specified link when this command is entered.

A **tst-slk** command cannot be in progress on the specified link when this command is entered. The **tst-slk** processing must be stopped or must be allowed to complete before this command can be entered.

The card location specified in the **loc** parameter must be in the In-Service-Normal (IS-NR) state.

The card location specified in the **loc** parameter must support Command Driven Loopback testing.

The signaling link specified in the **link** parameter must not be active.

The card location specified in the **loc** parameter cannot be reserved by the system.

Notes

None

Output

act-cdl:loc=1205:link=b

```
tekelecstp 05-01-21 17:00:36 EST EAGLE5 33.0.0
Command Accepted: Command Driven Loopback message is sent.
```

;

```
tekelecstp 05-01-21 17:00:36 EST EAGLE5 33.0.0
Command Completed.
```

;

act-dlk

Activate Data Link

Use this command to activate a TCP/IP data link and put that data link into service. The state of the TCP/IP data link is changed from out of service maintenance disabled (OOS-MT-DSBLD) to in service normal (IS-NR).

Keyword: act-dlk

Related Commands: canc-dlk, dlt-dlk, ent-dlk, rept-stat-dlk, rtrv-dlk, tst-dlk

Command Class: Link Maintenance

Parameters

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Example

act-dlk:loc=1308

Dependencies

No other action command can be in progress when this command is entered.

The shelf and card must be equipped.

The card location must contain an ACM card.
 The card location, frame, shelf, or slot must be within the allowed range.
 The signaling link must be equipped in the database.
 A card location that is valid and defined in the database must be specified.
 The card in the specified card location (**loc** parameter) must be in service.
 The **ipaddr** parameter must specify a valid IP address.

Notes

None

Output

```
act-dlk:loc=1308
rlghncxa03w 04-01-17:00:36 EST EAGLE 31.3.0
Activate Link message sent to card.
Command Completed.
;
```

act-echo

Activate Echo

Use this command to force responses from the scroll area of a terminal to be printed to a specified terminal or printer. The command supports one terminal echoing to many terminals or many terminals echoing to one terminal.



CAUTION

CAUTION: Exercise restraint in using this command, because excessive echoing can cause a loss of output at the receiving terminal.

Keyword: act-echo

Related Commands: chg-trm, dact-echo, rept-stat-trm, rmv-trm, rst-trm, rtrv-trm

Command Class: Basic

Parameters

:trm= (mandatory)
 Serial port number.
Range: 1-16

Example

```
act-echo:trm=3
```

Dependencies

If a terminal is already echoing to a specified terminal, the **act-echo** command cannot be entered to echo the terminal's output to that same terminal.

Echo is not allowed to the terminal from which the command is issued.

Echo is not allowed to or from IP User Interface telnet ports (terminals 17-40).

Echo is not allowed to an OAP port.

Terminal output cannot be echoed to a terminal that is inhibited.

Terminal parameter must be specified.

Notes

This command can be used to echo only command output responses to a terminal. For alarm and network messages to be sent to a terminal, the **chg-trm** command must be used.

To echo output to a destination port, a user must be logged in at the destination port. The following warning message appears in the scroll area of the issuing terminal if echo is attempted to a terminal that has no user logged in:

No user logged in at Terminal X. No echo will occur until a user logs in.
where X is the **trm** parameter value specified in the **act-echo** command.

Output**act-echo:trm=2**

```
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
act-echo:trm=2
Command entered at terminal #1.
```

```
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
Scroll Area Output is echoed to terminal 2.
```

Caution: Loss of output may occur if too many terminals are echoed.

;

act-echo:trm=3

```
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
act-echo:trm=3
Command entered at terminal #1.
```

```
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
Scroll Area Output is echoed to terminal 2.
Scroll Area Output is echoed to terminal 3.
```

Caution: Loss of output may occur if too many terminals are echoed.

;

act-file-trns**Activate File Transfer**

This command starts a file transfer between the system and a remote computer.

Keyword: act-file-trns

Related Commands: copy-fts, disp-fts-dir, dlt-fts

Command Class: System Maintenance

Parameters

:loc= (optional)

The location of the fixed disk to or from which the file is to be uploaded or downloaded.

Range: 1114, 1116

Active and standby TDM locations

Default: The active TDM location

:retries= (optional)

The number of times the system retries a packet before giving up.

Range: 1-20

Default: 10

:timeout= (optional)

The number of seconds the system waits for a packet before sending a negative acknowledgment or retransmitting the previous packet. This parameter also specifies the number of seconds to wait for a transfer initiation message from the remote computer.

Range: 1-120

Default: 30

Example

act-file-trns:loc=1113

Dependencies

The **loc** parameter must specify a TDM card.

Only one file transfer can be active at a time.

This command cannot be entered on a telnet terminal (IDs 17-40).

Notes

Output messages indicating transfer initiated and transfer terminated (whether successful or not) are sent to the output devices in the Security Administration output group.

LNP Measurements

When used to output LNP measurements, the **rept-meas** command sends data to the FTA. Extracting LNP measurements from the FTA requires:

- A computer with a VT320 or KSR connection to the system
- A communication program that both emulates VT terminals and supports Kermit file transfer
- A spreadsheet program that can import Comma Separated Value (CSV) text files

A PC running ProComm© for Windows and Microsoft Excel© can be used.

Use the following procedure to collect LNP measurements.

Procedure - Extracting LNP Measurements from the FTA

- 1 Enter the following command to display the contents of the FTA:

disp-fta-dir:loc=xxxx

Where **xxxx** = the active TDM (**1114** or **1116**)

- 2 Enter the following command to delete any existing files from the FTA:

dlt-fta:loc=xxxx:all=yes

Where **xxxx** = the active TDM (**1114** or **1116**)

- 3 Enter the command to send LNP daily measurements to the FTA. For example:

rept-meas:enttype=lnp:type=mtcd

- 4 Enter the following command to activate the file transfer:

act-file-trns:loc=xxxx

Where **xxxx** = the active TDM (**1114** or **1116**)

- 5 Enter the following command to display a list of the files transferred to the FTA in step 4:

disp-fta-dir:loc=xxxx

Where **xxxx** = the active TDM (**1114** or **1116**)

- 6 Use the **get** command from within the communications program configured to run Kermit in ASCII mode to transfer the desired files (with the .csv suffixes) to the PC. For example:

> **get mday_lnp.csv**

> **get mday_ssp.csv**

> **get mday_lrn.csv**

> **get mday_npa.csv**

> **finish**

- 7 Run a spreadsheet program and open each of the collected files to view the LNP measurement data.
-

- 8 After all files are successfully transferred and confirmed, enter the following command to remove the files from the FTA:

dlt-fta:loc=xxxx:all=yes

Where **xxxx** = the active TDM (**1114** or **1116**)

Output

Normal session output to non-Security Administration user's terminal.

act-file-trns:loc=1114:timeout=20:retries=2

rlghncxa03w 04-01-05 14:37:05 EST EAGLE 31.3.0

act-file-trns:loc=1114:timeout=20:retries=2

Command entered at terminal #1.

;

rlghncxa03w 04-01-05 14:37:05 EST EAGLE 31.3.0

Awaiting File Transfer with remote.

Please initiate binary Kermit session on local computer

;

rlghncxa03w 04-01-05 14:38:33 EST EAGLE 31.3.0

File Transfer : 0 file(s) DOWNLOADED from location 1114 successfully

File Transfer : 1 file(s) UPLOADED to location 1114 successfully

File Transfer : Kermit Session terminated NORMALLY

Normal session output to Security Administration group terminals.

act-file-trns:loc=1114:timeout=20:retries=2

rlghncxa03w 04-01-05 14:40:42 EST EAGLE 31.3.0

File Transfer : INITIATED on terminal #1

;

rlghncxa03w 04-01-05 14:41:07 EST EAGLE 31.3.0

File Transfer: 511_byte.bin UPLOADED to location 1114 successfully.

;

rlghncxa03w 04-01-05 14:41:44 EST EAGLE 31.3.0

File Transfer : terminated NORMALLY on terminal #1

Normal session output to Security Administration user's terminal.

act-file-trns:loc=1114:timeout=20:retries=2

rlghncxa03w 04-01-05 14:42:51 EST EAGLE 31.3.0

act-file-trns:loc=1114:timeout=20:retries=2

Command entered at terminal #1.

;

rlghncxa03w 04-01-05 14:43:29 EST EAGLE 31.3.0

File Transfer : INITIATED on terminal #1

;

rlghncxa03w 04-01-05 14:43:53 EST EAGLE 31.3.0

Awaiting File Transfer with remote.

Please initiate binary Kermit session on local computer

rlghncxa03w 04-01-05 14:44:19 EST EAGLE 31.3.0

File Transfer: 511_byte.bin UPLOADED to location 1114 successfully.

;

rlghncxa03w 04-01-05 14:44:52 EST EAGLE 31.3.0

File Transfer : 0 file(s) DOWNLOADED from location 1114 successfully

File Transfer : 1 file(s) UPLOADED to location 1114 successfully

File Transfer : Kermit Session terminated NORMALLY

;

rlghncxa03w 04-01-05 14:45:31 EST EAGLE 31.3.0

File Transfer : terminated NORMALLY on terminal #1

;

act-flash**Activate Flash**

Use this command to activate the trial FLASH GPL that is currently running on one target card or on a range of cards.

Keyword: act-flash

Related Commands: clr-imt-stats, flash-card, init-flash, init-imt-gpl, rept-imt-info, rept-imt-lvl1, rept-imt-lvl2, tst-imt

Command Class: System Maintenance

Parameters

:eloc= (optional)

End location. This parameter specifies the location of the last card of a range of cards to be activated.

Range: **1101-1113, 1115, 1201-1218, 1301-1318, 2101-2118, 2201-2218, 2301-2318, 3101-3118, 3201-3218, 3301-3318, 4101-4118, 4201-4218, 4301-4318, 5101-5118, 5201-5218, 5301-5318, 6101-6118**

:gpl= (optional)

Generic program load. This parameter specifies the flash GPL type that is running on the cards in the specified range of cards.

This parameter must be specified for cards that have more than one flash image (GPL).

Range: *ayyyyyyy*

1 alphabetic character followed by up to 6 alphanumeric characters.

Valid GPLs are: **blbios**, **blbepm**, **blbsmg**, **blcpld**, **bldiag6**, **blmcap**, **blrom1**, **blvxw6**, **bpdcm**, **bpdcm2**, **bphcap**, **bphcapt**, **bphmux**, **bpmpl**, **bpmp1t**, **hipr**, **imtpci**, and **pldpmc1**.

The **bldiag** and **blvxw** flash GPLs are no longer supported.

:loc= (optional)

Location. This parameter specifies the location of a single target card.

Range: **1101-1113, 1115, 1201-1218, 1301-1318, 2101-2118, 2201-2218, 2301-2318, 3101-3118, 3201-3218, 3301-3318, 4101-4118, 4201-4218, 4301-4318, 5101-5118, 5201-5218, 5301-5318, 6101-6118**

:sloc= (optional)

Start location. This parameter specifies the location of the first card of a range of cards to be activated.

Range: **1101-1113, 1115, 1201-1218, 1301-1318, 2101-2118, 2201-2218, 2301-2318, 3101-3118, 3201-3218, 3301-3318, 4101-4118, 4201-4218, 4301-4318, 5101-5118, 5201-5218, 5301-5318, 6101-6118**

Example

act - flash : loc=1105

act - flash : sloc=1101 : eloc=1112 : gpl=bpmpl

Dependencies

The card, or cards, in the specified location or range of locations for this command must be actively running a flash GPL in *trial* mode.

The allowed cards are HCAP, HCAP-T, DCM, E1/T1 MIM, E5-ENET, HC-MIM, E5-E1T1, E5-TSM, E5-IPSM, E5-MCAP, GPSM-II, MPL, or Service Module. Card locations xy09 and xy10 (x is the frame, y is the shelf) can be specified only for HMUX or HIPR cards.

Each specified card does not have to be defined in the database, but it does have to be aligned on the IMT bus.

If the target is HMUX or HIPR, both of the card locations specified in the **sloc** and **eloc** parameters must contain HMUX or HIPR cards on the same IMT bus. For HMUX or HIPR the bus is implicit based on the specified location. Location xy09 specifies HMUX or HIPR IMT-A Bus, and location xy10 specifies HMUX or HIPR IMT-B Bus. For example, **sloc=1109:eloc=6109** specifies all HMUX or HIPR cards on the IMT-A Bus only; **sloc=1110:eloc=6110** specifies all HMUX or HIPR cards on the IMT-B Bus only. HMUX or HIPR cards from both the IMT-A bus and IMT-B bus cannot be flash downloaded simultaneously.

The card must be running an inactive flash GPL when this command is executed.

The provisioning subsystem mode (simple, duplex) must be established prior to executing the command.

The **loc** parameter cannot be specified with the **eloc** and **sloc** parameters.

Either the **loc** parameter or the **eloc** and **sloc** parameters must be specified.

The **eloc** and **sloc** parameters must be specified together in the command; one parameter cannot be specified without the other parameter.

The **sloc** parameter value cannot be greater than the **eloc** parameter value.

The cards in the specified **sloc** and **eloc** card locations must be present and able to communicate over the IMT. The cards do not have to be provisioned in the database.

The **gpl** parameter must be specified if the **eloc** and **sloc** parameters are specified.

The **gpl** parameter must be specified for cards that have more than one flash image (GPL).

The cards in the locations specified in the **sloc** and **eloc** parameters must be running the specified general program load (**gpl**). Other cards in the range of card locations can be running other GPLs, but will not be activated. Only the cards within the range that are running the specified GPL will be activated.

A card that is the active MASP cannot be specified for the **loc**, **sloc**, or **eloc** parameter.

No other action command can be in progress when this command is entered.

A card location that is valid and defined in the database must be specified.

The cards specified in the **sloc** and **eloc** location parameters must be running the specified general program load (gpl).

Notes

None

Output

act - flash : loc=1105

```
rlghncxa03w 04-01-04 13:05:05 EST  EAGLE 31.3.0
FLASH Memory Activation for card 1105 Started.
```

```
;
```

```
rlghncxa03w 04-01-04 13:05:05 EST  EAGLE 31.3.0
FLASH Memory Activation for card 1105 Completed.
```

```
;
```

```
rlghncxa03w 04-01-04 13:05:05 EST  EAGLE 31.3.0
Command Completed.
```

```
;
```

act - flash : sloc=1101 : eloc=1112 : gpl=bpmp1

```
rlghncxa03w 05-01-04 13:05:05 EST  EAGLE 33.0.0
FLASH Memory Activation for cards 1101 - 1112 Started.
```

```
;
```

```
rlghncxa03w 05-01-04 13:05:05 EST  EAGLE 33.0.0
FLASH Activation for cards 1101 - 1112 Completed.
LOC 1101 : PASSED
LOC 1102 : PASSED
LOC 1112 : PASSED
```

```
ALL CARD RESULTS PASSED
```

```
;
```

```
rlghncxa03w 05-01-04 13:05:05 EST  EAGLE 33.0.0
Command Completed.
```

```
;
```


act-ftp-trns**Activate FTP Transfer**

Use this command to activate an FTP transfer to send database tables from the system to the customer's FTP server.

NOTE: This command is not for customer use. It is for Tekelec use only.

Keyword: act-ftp-trns

Related Commands:

Command Class: Database Administration

Parameters

:action= (mandatory)

This parameter specifies the operation that the command is to perform.

Range: put

:filetype= (mandatory)

This parameter specifies the EAGLE 5 ISS table type to be transferred.

Range: mtp, gtt, gws, vflex, all

mtp—Transfer all Message Transfer Part tables

gtt—Transfer all Global Title Translation tables

gws—Transfer all Gateway Screening tables

vflex—Transfer all V-Flex tables

all—Transfer all of the types of tables

Example

act-ftp-trns:action=put:filetype=gtt

Dependencies

An **act-ftp-trns** command cannot be entered if another file transfer is already in progress.

Both the **action** and **filetype** parameters must be specified in the command.

The FTP Server table must contain at least one FTP server entry that specifies the **user** application

Notes

This command communicates with the **user** application, defined in the FTP Server table. The IP address and server details necessary for an FTP transfer are also stored in the FTP Server table. One such **user** application is the FTP-based Table Retrieve Application (FTRA). Refer to the *FTP-Based Table Retrieve Application (FTRA) User Guide* for the **user** application to configure an FTP Server table entry.

Output

The sections ending in "Copy-table COMPLETE" and "FTP file transfer SUCCESSFUL" appear for each table that is transferred. Each table name is shown as tablexxx.tbl, where xxx indicates the name of the specific table.

act-ftp-trns:action=put:filetype=gtt

```
tekelecstp 04-01-05 08:50:12 EST  EAGLE 31.3.0
FTP command sent to IPSM card - Processing
;

tekelecstp 04-01-05 08:50:12 EST  EAGLE 31.3.0
Copy-table started - tablexxx.tbl
Copy-table COMPLETE.
;

tekelecstp 04-01-05 08:50:12 EST  EAGLE 31.3.0
FTP file transfer started - tablexxx.tbl
FTP file transfer SUCCESSFUL.
;

tekelecstp 04-01-05 08:50:12 EST  EAGLE 31.3.0
FTP transfer COMPLETE.
;
```

act-gpl**Activate Generic Program Load**

Use this command to change the status of the trial GPL from "trial" to "approved." The status of the previously approved GPL is changed to "trial."

Keyword: act-gpl

Related Commands: chg-gpl, copy-gpl, rept-stat-gpl, rtrv-gpl

Command Class: Program Update

Parameters

:gpl= (mandatory)

Generic program load. This parameter specifies the name of the GPL identifier to be moved from "trial" to "approved" status on the disk.

Range: ayyyyyy

1 alphabetic character followed by up to 6 alphanumeric characters. Valid GPLs are:
atmansi—The GPL is used by the LIM cards to support the high-speed ATM signaling link feature.

atmhc—This GPL is used to support the functionality for the E5-ATM card. The E5-ATM card runs either the ATMANSI or ATMITU application. The **atmhc** GPL allows the card to support up to 2 signaling links.

atmitu—The GPL is used by the E1 ATM cards to support the high-speed E1 ATM signaling link feature.

blbepm—A flash GPL containing the BIOS ROM image on E5-E1T1 cards and E5-ENET cards.

blbios—A flash GPL containing the BIOS ROM image on HC-MIM cards that are used for E1 or T1 signaling links.

blbsmg—A flash GPL containing the BIOS ROM image on E5-SM4G cards.

blcpld—A flash GPL containing the bit files for the CPLD on HC-MIM, E5-E1T1, and E5-ENET cards that are used for E1 or T1 signaling links.

bldiag6—A flash GPL containing the diagnostic code on E5-E1T1 cards, HC-MIM cards, and E5-ENET cards.

blmcap—A flash GPL containing a tar image with all code required on E5-MCAP cards.

blvxw6—A flash GPL containing the VxWorks operating system on E5-E1T1 cards, HC-MIM cards, and E5-ENET cards.

blrom1—A flash GPL containing the bootloader code for VxWorks operating system on HC-MIM cards.

bpdcm—This GPL is used in support the flash memory Board PROM for DCM, DSM, and GPSM boards, original design.

bpdcm2—This GPL is used in support the flash memory Board PROM for DCM and GPSM boards, revised design.

bphcap—This GPL is used to support Board PROM for HCAP flash memory.

bphcapt—This GPL is used to support Board PROM for HCAP-T flash memory.

bphmux—This GPL is used to support Board PROM for HMUX flash memory.

bpmpl—This GPL is used to support Board PROM for MPL flash memory.

bpmlt—This GPL is used to support Board PROM for E1/T1 flash memory and Board Prom for MPL-T flash memory.

ccs7itu—This GPL is used by the LIM cards for ITU-TSS MTP functionality.

cdu—This GPL is used in the card manufacturing process.

eoam—This GPL is used by the GPSM-II card for enhanced OAM functions.

eroute—This GPL is used by the STC card for EAGLE 5 Integrated Monitoring Support functions.

erthc—This GPL is used by the E5-ENET card when the card acts as an STC card (E5-STC card) for EAGLE 5 Integrated Monitoring Support functions.

gls—This GPL is used by the TSM cards for downloading gateway screening to LIM cards.

glshc—This GPL is used by the E5-TSM card for downloading gateway screening to LIM and SCCP cards.

hipr—The communication software used on the High Speed IMT Packet Router (HIPR) card.

imt—This GPL is the communication processor on the logical processing element (LPE).

imtpci—The communication software that operates the IMT bus on HC-MIM, E5-E1T1, and E5-ENET cards.

ipghc—This GPL is used by the E5-ENET card to support TCP/IP point-to-multipoint connectivity for ANSI and ITU point codes.

ipgwi—This GPL is used by the SSEDCEM card for TCP/IP point-to-point connectivity for ITU point codes.

iplhc—This GPL is used by the E5-ENET card for TCP/IP point-to-point connectivity for ANSI and ITU point codes.

iplim—This GPL is used by the SSEDCEM card for TCP/IP point-to-point connectivity for ANSI point codes.

iplimi—This GPL is used by the SSEDCEM card for TCP/IP point-to-point connectivity for ITU point codes.

ips—This GPL is used by the IPSM card for the IP User Interface feature.

ipsg—This GPL is used by the E5-ENET card to support the combined functionality of IPLIMx M2PA and IPGWx M3UA.

ipshc—This GPL is used by the E5-IPSM card to support the IPS application.

mcp—This GPL is used by the MCPM card for the Measurements Platform feature.

oamhc—This GPL is used by the E5-MCAP card for enhanced OAM functions.

pldpmc1—A flash GPL that is used on HC-MIM and E5-E1T1 cards for E1 and T1 signaling links.

sccp—This GPL is used by the TSM cards for the global title translation application. If the E5-SM4G card is present, then the **sccp** GPL processes normal GTT traffic.

sccphc—This GPL is used by the E5-SM4G cards to support the EPAP-based features and the LNP ELAP Configuration feature. If no EPAP-based or LNP ELAP Configuration feature is turned on, and if an E5-SM4G card is present, then the sccphc GPL processes normal GTT traffic.

ss7ansi—This GPL is used by the LIM cards for the MTP functionality.

ss7gx25—This GPL is used by the LIM cards to support X.25 functionality.

ss7hc—This GPL is used to support the functionality for the HC-MIM (High Capacity Multi-Channel Interface Module) card or the E5-E1T1 card. The HC-MIM card and the E5-E1T1 card run either the SS7ANSI or CCS7ITU application; this GPL allows the card to support up to 64 signaling links for E1 and T1 functions.

ss7ipgw—This GPL is used by the SSEDCCM card to support TCP/IP point-to-multipoint connectivity.

ss7ml—This GPL is used to support the functionality for the multi-port LIM (MPL) card and the E1/T1 MIM (Multi-Channel Interface Module) card. The MPL cards run only the SS7ANSI application on a LIMDS0 card (as in the command `ent-card:type=limds0:appl=ss7ansi`); the ss7ml GPL allows the card to support 8 signaling links rather than the usual 2 links for LIM cards. The MPL cards support only the DS0 interface. The E1/T1 MIM card runs either the SS7ANSI or CCS7ITU application; the ss7ml GPL allows the card to support 8 signaling links for E1 and T1 functions.

stplan—This GPL is used by the ACM card to support the STP LAN application.

utility—This GPL is used by the factory for testing, and when directed by your Customer Care Center.

vcdu—This GPL is used in the card manufacturing process.

vsccp—This GPL is used by Service Module cards to support the EPAP-based and the LNP ELAP Configuration features. If no EPAP-based or LNP ELAP Configuration feature is turned on, and if a Service Module card is present, then the vsccp GPL processes normal GTT traffic.

vxwslan—This GPL is used by the SSEDCCM card to support the STP LAN application. The **bldiag** and **blvxw** flash GPLs are no longer supported.

:ver= (mandatory)

Version. This parameter specifies the version number of the GPL to be activated, with subfields the format of *major-minor-fix* separated by dashes.

Range: *major-minor-fix*

Specify a value in the range **0–255** for each subfield of the GPL version number (*major-minor-fix*).

Example

```
act-gpl:gpl=ss7hc:ver=125-1-0
```

```
act-gpl:gpl=slanhc:ver=128-2-0
```

```
act-gpl:gpl=erthc:ver=128-2-0
```

```
act-gpl:gpl=ipshc:ver=128-1-0
```

act-gpl:gpl=sccphc:ver=128-1-0

act-gpl:gpl=ipsg:ver=129-1-0

act-gpl:gpl=atmhc:ver=125-1-0

Dependencies

No other activate, change, copy, or retrieve GPL commands, nor a GPL audit, can be in progress when this command is entered.

Notes

Test the trial GPL by loading to a card before activating the GPL. Activating the GPL changes it from *trial* to *approved*.

The generic program load is committed on the active system and on the standby system.

Trial GPLs are downloaded to cards manually. Only approved GPLs can be downloaded to cards by the system.

Use the **rtrv-gpl** command to determine the version of the GPL.

Output

The output indicates that the specified GPL is activated on each TDM card.

act-gpl:gpl=ss7hc:ver=125-1-0

tekelecstp 05-01-03 16:53:23 EST EAGLE5 33.0.0

SS7HC activate to 1114 completed

SS7HC activate to 1116 completed

;

The number of "cards of x complete" represents the total number of cards that can communicate on the IMT at the instant that this information is displayed.

act-gpl:appl=imt:ver=21-2-0

tekelecstp 05-04-24 06:54:39 EST EAGLE 34.0.0

IMT activate on 1114 completed

IMT activate on 1116 completed

;

tekelecstp 05-04-24 06:54:41 EST EAGLE 34.0.0

5402. 1105 SYSTEM INFO REPT-EVT:IMT GPL reloading.

1 card(s) of 25 complete.

Report Date: 05-04-24 Time: 06:54:41

;

tekelecstp 05-04-24 06:55:11 EST EAGLE 34.0.0

5403. 1106 SYSTEM INFO REPT-COND:IMT GPL reloading.

11 card(s) of 25 complete.

Report Date: 05-04-24 Time: 06:55:11

;

act-lbp

Activate Loopback Point Test

Use this command to activate one or more loopback point tests for testing data signaling link elements in an SS7 transmission path. Use this command to:

- Activate a test for a specified loopback point that is defined in the LFS database table
- Activate a test for one loopback point that is not defined in the LFS database table
- Activate tests for all loopback points that have been defined in the LFS database table. See "Summary of Loopback Testing Commands and Functions" for information about loopback testing commands and functions.

The **ent-lbp** command can be used to define a maximum of 32 loopback points in the LFS database table.

Keyword: act-lbp

Related Commands: chg-lbp, dact-lbp, dlt-lbp, rept-stat-lfs, rtrv-lbp

Command Class: Database Administration

Parameters

To activate a test for a single loopback point that is defined in the LFS database table, specify the loopback point number in the **lbp** parameter and do not specify any of the **lfst**, **rle**, **rep**, and **cli** parameters in the command. Information from the LFS database is used to activate the test for the specified loopback point.

To activate a test for a single loopback point that is not defined in the LFS database table, specify one or more of the **lfst**, **rle**, **rep**, and **cli** parameters in the command. (If the **cli** parameter is not specified, the **cli** value is blank, a null string. If the **rep** parameter is not specified, the default value is 0.)

To activate tests for all loopback points that are defined in the LFS database, do not specify any of the **lbp**, **lfst**, **rle**, **rep**, and **cli** parameters in the command. Information from the LFS database table is used to activate tests for all defined loopback points.

:link= (mandatory)

SS7 signaling link. This parameter specifies the SS7 signaling link to be tested.

Synonym: port

Range: a, b, a1-a31, b1-b31

Not all card types support all **link** parameter values.

See "Summary of Range Values for :link Parameter" for valid **link** parameter range values for each type of card that can have assigned signaling link ports.

:loc= (mandatory)

Location. This parameter specifies the unique identifier of the card containing the signaling link to use for loopback point testing.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

:cli= (optional)

Common language location identifier. This parameter specifies the CILLI code or other mnemonic identifier, used to refer to the given loopback point.

Range: ayyyyyyyyyy

1 alphabetic character followed by up to 10 alphanumeric characters

Default: If the **rle**, **lfst**, or **rep** parameter is specified—null string (blank)

If the **rle**, **lfst**, or **rep** parameter is not specified—the value in the LFS database

:data= (optional)

This parameter specifies the data used with the *octet* or *alternate* patterns.

Range: 1-255

Default: 255

:force= (optional)

The **force=yes** parameter must be specified to start a test when there are 256 or more tests already running.

Range: yes, no

Default: **no**

:lbp= (optional)

Loopback point ID. This parameter specifies a far-end loopback point that lies along an SS7 signaling link path between the STP and the target device (up to *and including* the target device).

Range: **1-32**

Default: If the **rle**, **cli**, **rep**, or **lfst** parameter is specified, the default is **1**.

If the **rle**, **cli**, **rep**, and **lfst** parameters are not specified, the default is all loopback points found in the LFS database (up to 32 loopback points), as shown in the **rtrv-lbp** command output.

:lfst= (optional)

Link fault sectionalization test. This parameter specifies the type of link fault sectionalization loopback test to be performed.

This parameter is mandatory if the **rle**, **cli**, or **rep** parameter is specified.

Range: **LLT, MLT, NLT**

LLT — latching loopback test; a software latch is set at the test point to reverse everything that is received and return it to the sender until the test is complete

MLT — manual latch loopback test; an external hardware latch has been set to reverse everything that is received and return it to the sender until the test is complete (for equipment that cannot set a software latch for the test)

NLT — nonlatching loopback test; no permanent latch is set. Loopback codes are alternated with test data until the test is complete.

Default: The value in the LFS database, as shown in the **rtrv-lbp** command output

:maxerr= (optional)

The bit error threshold. This parameter specifies the actual number of errors allowed for a specific time period during which loopback testing is being performed. If this threshold is exceeded, the *TEST STATUS* field in the output report indicates an error.

Range: **0-4838400**

Default: **56**

:pattern= (optional)

This parameter specifies the type of test pattern used to perform the LFS test.

Range: **b2047, b511, octet, alternate**

b2047 — 047-bit Bert pattern sent until it is stopped by software

b511 — 511-bit Bert pattern sent until it is stopped by software

octet — Data (from the **data** parameter) sent continuously until it is stopped by software

alternate — Alternately, a count of 100 octets of the specified data (from the **data** parameter) followed by 100 octets of **0**, sent until it is stopped by the software

The **octet** and **alternate** values are valid only when **lfst=llt** is specified.

Default: **b2047**

:rep= (optional)

Repetition count. This parameter specifies the number of link elements of the same type (not including the target device) that lie between the STP and the link element to be tested.

Range: **0-31**

Default: If the **rle**, **cli**, **rep**, or **lfst** parameter is specified, the default is **0**.

If the **rle**, **cli**, **rep**, or **lfst** parameter is not specified, the default is the value in the LFS database, as shown in the **rtrv-lbp** command output.

:rle= (optional)

Remote link element. This parameter specifies the link element to be looped back for testing.

This parameter is mandatory if the **lfst**, **cli**, or **rep** parameter is specified.

Range: **ds0, ocu, csu, dsu, nei**

Default: The value from the LFS database, as shown in the **rtrv-lbp** command output

:time= (optional)

This parameter specifies the length of time the test must be run in order to determine success or failure. If the number of errors that actually occur during this time exceeds the threshold set by the **maxerr** parameter, the loopback test is identified as a failure.

Range: 1-240000

hhmmss—*hh*=hours (00-24), *mm*=minutes (00-59), *ss*=seconds (00-59)

For example, **time=1** or **time=000001** is one second; **time=240000** is 24 hours;

time=200 or **time=000200** is 2 minutes

Default: 1 second

Example

Activate tests for all loopback points that are defined in the LFS database table:

```
act - lbp:loc=1205:link=b:pattern=alternate:maxerr=10:time=000200
```

Activate a test for a single loopback point that is not defined in the LFS database table:

```
act - lbp:loc=1205:link=b:lbp=1:rle=ds0:lfst=llt:clli=rlghncxa05w
```

```
act -
```

```
lbp:loc=1205:link=b:lbp=1:rle=ds0:lfst=llt:clli=rlghncxa05w:pattern=octet:data=h'ff
```

```
act -
```

```
lbp:loc=1205:link=b:lbp=1:rle=ds0:lfst=llt:clli=rlghncxa05w:maxerr=40:time=12000
```

Activate a test for a single loopback point that is defined in the LFS database table:

```
act -
```

```
lbp:loc=1205:link=b:lbp=3:pattern=alternate:maxerr=10:time=000200
```

Dependencies

The Link Fault Sectionalization (LFS) feature must be on before this command can be entered.

If the **rle=nei** parameter is specified, the **rep=0** parameter must be specified.

The **rep** parameter can be specified only if the **lfst=llt** parameter is specified.

The **rle=ds0** or the **rle=nei** parameter cannot be specified if the **lfst=nlt** parameter is specified. The DS0 and Network Element Interface (NEI) link elements do not support non-latching loopbacks.

If one or more of the **rle**, **rep**, **lfst**, or **clli** parameters are specified, the database is not used to look up their values; therefore, the **lfst** and **rle** parameters must be specified when the **rep** or **clli** parameter is specified.

The **data** parameter can be specified only if the **pattern=octet** parameter or **pattern=alternate** parameter is specified.

The **pattern=octet** and **pattern=alternate** parameters cannot be specified for non-latching tests (**rle=nlt**).

The card location (**loc** parameter) must contain a provisioned and equipped **limds0**, **limt1**, or **limch** (associated with a **limt1**) card configured with either an **ss7ansi** or **ccs7itu** application.

The card in the **loc** parameter location must be in the In-Service-Normal state.

The signaling link that is used for LFS testing must be equipped, and must be deactivated before this command is entered.

The loopback points (LBPs) must have been previously defined in the database.

Only one LFS test can be active on a signaling link at a time.

This command cannot be entered for a signaling link LFS test when the maximum number of LFS tests are active for the card. At least one LFS test must complete before this command can be entered again.

On LIM-AINF, LIM-ILA, LIM-EILA, and MPL cards (type LIMDS0 cards), only one LFS test can be active on a card at a time.

On the following cards, up to 8 LFS tests can be active on a card at a time:

- E1/T1 MIM cards or HC-MIM cards used as T1 cards
- E1/T1 MIM cards used as LIMCH cards associated with a T1 card
- MPL-T cards (type LIMDS0)

This command cannot be entered when the maximum combined total number of LFS and link tests (1024) are in progress in the system. At least one test must complete before this command can be entered again.

The **force=yes** parameter must be specified to activate a test when there are 256 or more tests already running in the system.

The specified signaling link must not be running a **tst-slk** test when this command is entered. The **tst-slk** test must be stopped or allowed to complete before this command can be entered for the link.

The specified signaling link must not be in Command Driven Loopback (CDL) when this command is entered. The link must be removed from CDL before this command can be entered for the link.

This command cannot be entered for a link that is already blocked by another link diagnostic test. The test must be canceled or allowed to complete before this command can be entered for the link.

LFS testing is not available during upgrade.

The maximum number of loopback point entries allowed in the LFS table is 32.

Notes

The **act-lbp** command is not supported for **limatm** cards.

If an LFS test is aborted by a card reset, it can leave the remote far-end loopback condition active. Use the **dact-lbp** command to cancel LFS tests.

The E1/T1 MIM card and the HC-MIM card support this command on up to 8 T1 channels at a time; the command is not supported for E1.

The test can terminate with the status "ERROR, bit error exceeded threshold" for two reasons.

- The number of cumulative bit errors exceeds the specified **maxerr** parameter value.
- The number of bit errors for one second reaches or exceeds 255, without considering the **maxerr** parameter value.

Output

The LFS report is displayed when the LFS test completes.

The following example shows how the test failed because the bit error rate exceeded the threshold. Here the **maxerr=10** parameter is used for a test time of 2 minutes. Because more than 10 errors occurred within 2 minutes, the test is considered a failure and the **TEST STATUS** field displays the cause. The parameter values are applied to each loopback point. The **maxerr** value is per test, not cumulative for all tests.

act - lbp:loc=1205:link=b:pattern=alternate:maxerr=10:time=002000

```
tekelecstp 05-01-21 17:00:36 EST EAGLE5 33.0.0
LOC = 1205 Link = B LSN = ls11345678 Start time = 11:10:34
```

PATTERN = ALTERNATE DATA= FF MAXERR = 10 TIME = 00:02:00

TEST STATUS = ERROR, bit error exceeded threshold.

LBP	CLLI	RLE	REP	LFST	BIT_ERROR	ERRORED_SEC	DURATION
2	rlghncxa05w	DS0	0	LLT	0	0	00:02:00
3	-----	OCU	0	NLT	8	2	00:02:00
5	-----	NEI	0	LLT	15	1	00:01:20

;

In the following example, the test failed because the loopback could not be established.

act - lbp:loc=1205:link=b:pattern=alternate:maxerr=10:time=000200

```
tekelecstp 05-01-21 17:00:36 EST EAGLE5 33.0.0
LOC = 1205 Link = B LSN = ----- Start time = 11:10:34
```

PATTERN = ALTERNATE DATA= FF MAXERR = 10 TIME = 00:02:00

TEST STATUS = ERROR, loopback was not established.

LBP	CLLI	RLE	REP	LFST	BIT_ERROR	ERRORED_SEC	DURATION
1	rlghncxa05w	DS0	0	LLT	0	0	00:00:00

;

Legend

LOC—Card location that contains the signaling being tested.

LINK—Signaling link that is being tested on the card.

LSN—Name of the linkset that contains the link being tested.

START TIME—Time that the test started.

PATTERN—Type of test pattern used to perform the LFS test.

DATA—Data used with the **octet** or **alternate** patterns.

MAXERR—Bit error threshold; actual number of errors allowed for the specific time period during which loopback testing is being performed. If this threshold is exceeded in the specified time period, the **TEST STATUS** field in the output report indicates an error.

TIME—Specified length of time to run the test in order to determine success or failure. If the number of errors that actually occur during this time exceeds the threshold set by the **maxerr** parameter, the loopback test is identified as a failure.

TEST STATUS—Any one of the following **TEST STATUS** values can appear:

- PASS
- ERROR, LFS HARDWARE is not available.
- ERROR, loopback could not be established.

- ERROR, bit error exceeded threshold.
- ERROR, LFS test aborted.
- ERROR, LFS hardware failed.

LBP—Loopback point used to perform the LFS test.

CLLI—Common Language Location Identifier (CLLI) code, or other mnemonic identifier, used to refer to the given loopback point.

RLE—Remote link element to be looped back for testing.

REP—Repetition count. The number of link elements of the same type (not including the target device) that lie between the STP and the link element to be tested.

LFST—Type of link fault sectionalization loopback test to be performed.

BIT_ERROR—The number of bit errors observed during the test.

ERRORED_SEC—The number of seconds that contained bit errors during the test. (Bit errors are sampled once per second; each sample that contains bit errors adds one second to this count.)

DURATION—Length of time that the test actually ran for the loopback point. For successful test, the TIME and the DURATION should be the same. If a test ran for less than the specified amount of time, the DURATION will be less than the TIME.

act-lpo

Activate Local Processor Outage

Use this command to force a processor outage on the specified link. The system begins sending link status signal units (LSSUs) with a status of SIPO to the adjacent signaling point. Level 2 status remains in service, except when the link is an ATM high-speed signaling link.

NOTE: The signaling link's blocked status is not preserved across a LIM reboot.

Keyword: act-lpo

Related Commands: blk-slk, canc-lpo, rept-stat-slk, ublk-slk

Command Class: Link Maintenance

Parameters

:link= (mandatory)

The signaling link on the card specified in the **loc** parameter. The links can be specified in any sequence or pattern.

Synonym: port

Range: a, b, a1-a31, b1-b31

Not all card types support all **link** parameter values.

See "Summary of Range Values for :link Parameter" for valid **link** parameter range values for each type of card that can have assigned signaling links.

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Example

act - lpo : loc=1101 : link=a

Dependencies

A card location that is valid and defined in the database must be specified.

No other action command can be in progress when this command is entered.

This command can be entered for IPLIMx signaling links only when they have an **ipliml2** parameter setting of **m2pa**.

This command is not valid for SSEDCCM cards or E5-ENET cards with SS7IPGW or IPGWI TCP/IP links.

The card must contain signaling links.

The signaling link must be equipped in the database.

The **link** parameter values **a1**, **b1**, **a2**, **b2**, **a3**, and **b3** can be specified only for the following cards:

- A multi-port LIM
- An E1/T1 MIM
- An HC MIM

This command is not valid for links belonging to proxy linksets.

The card must be equipped and must be one of the following cards:

- An E1 ATM card running the **atmitu** application
- An E1/T1 MIM, E5-E1T1, or HC MIM card running the **ss7ansi** or **ccs7itu** application
- An E5 ATM card running the **atmansi** or **atmitu** application
- An E5-ENET card running the **ipsg** application
- An E5-ENET card or SSEDCCM card running the **iplim** or **iplimi** application with links having **ipliml2=m2pa**
- A LIM card running the **ss7ansi**, **ss7gx25**, or **ccs7itu** application
- A LIM ATM card running the **atmansi** application

Notes

The function of this command is the same as the **blk-slk** command.

This command generates an alarm.

If the **act-lpo** command is followed by the **init-card** command, the local processor outage is not preserved after the **init-card** command completes.

The *Installation Manual - EAGLE 5 ISS* provides an illustration of card locations.

If the **blk-slk** or **act-lpo** command is issued for an IPSEG signaling link, then one of the following events occurs:

- IPSEG-M2PA signaling link—MTP3 local processor outage is initiated.
- IPSEG-M3UA signaling link—The link is prohibited from entering service by rejecting received AS-ACTIVE messages.

Output

act - lpo: loc=1101: link=a

```
tekelecstp 05-01-21 17:00:36 EST EAGLE5 33.0.0
Local processor outage being set.
```

```
tekelecstp 05-01-21 17:00:36 EST EAGLE5 33.0.0
* 0014.0208 * SLK 1101,A nc00027 slk local blocked
```

act-oap-config**Activate OAP Configuration**

Use this command to update the OAPs with the configuration data entered into the EAGLE 5 ISS database with the **chg-oap-config** command.

The **act-oap-config** command also sends the EAGLE 5 ISS Site ID to the OAPs. See the **chg-sid**, **ent-lnp-serv**, and **chg-lnp-serv** commands for more information.



CAUTION

CAUTION: Before the **act-oap-config** command can be entered, the EAGLE 5 ISS database must be provisioned with required data for the SEAS feature, depending on which of those features are turned on. If this information is left blank or incorrectly provisioned, and the **act-oap-config** command is entered, the OAP may lose SEAS connectivity. The requirements are discussed in the Dependencies section for this command.

Keyword: act-oap-config

Related Commands: chg-lnp-serv, chg-oap-config, chg-sid, dlt-lnp-serv, ent-lnp-serv, rtrv-lnp-serv, rtrv-oap-config, rtrv-sid

Command Class: Database Administration

Parameters

:force= (optional)

Force the EAGLE 5 ISS to provision only one OAP in a dual OAP configuration.

Range: yes, no

Default: no

:oap= (optional)

The OAP being updated.

Range: a, b, all

Default: all

Example

act-oap-config:oap=a:force=yes

Dependencies

Table 5-1 shows the fields of the **rtrv-oap-config** command output that must be configured depending on which feature is on. Table 5-1 also shows the parameters of the **chg-oap-config** command that are used to configure the OAP configuration data.

If the required information for a feature has already been configured in the EAGLE 5 ISS database, you do not have to re-enter all the parameters for that feature when you make a change. It is mandatory, however, that the configuration data in the EAGLE 5 ISS and the OAP database match.

Table 5-1. Parameters That Must Be Provisioned Prior to Updating OAP for SEAS

Feature	Fields Displayed	Required Entry before Configuration can be sent to the OAP	chg-oap-config Parameter
SEAS	SEAC CLLI	An entry is required if the SEAS feature is on.	seaccli
	X25 Packet Size	An entry is required if the SEAS feature is on.	x25ps
	X25 Mode	An entry is required if the SEAS feature is on.	x25mode
	Hostname	An entry is required.	aname and bname
	IP Netmask	An entry may be required depending on the network configuration.	anmask and bnmask
	Default Router	An entry may be required depending on the network configuration.	arouter and brouter
	Config	An entry is required.	cfg

Table 5-2 shows other data not shown in the **rtrv-oap-config** command output that must be provisioned in the database before the OAP configuration can be updated.

Table 5-2. Other Data Required for Updating the OAP Configuration

Feature	Data Required Before an OAP can be Updated
SEAS	EAGLE 5 ISS CLLI - configured with the cli parameter of the chg-sid command

To keep OAP parameters in sync with the EAGLE 5 ISS, a checksum is created using all of the OAP configuration data stored on the EAGLE 5 ISS (shown in Table 5-1 and Table 5-2). The OAP also calculates this checksum based on the data it has. The OAP returns this checksum every 5 seconds. The EAGLE 5 ISS compares the checksums and generates the following alarm within 10 seconds of any mismatch.

```
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
```

```
* nnnn.0364 * OAP A Configuration data checksum mismatch
```

The alarm is cleared when a maintenance poll returns a checksum that matches the EAGLE 5 ISS' checksum, indicating that the databases are back in sync. The EAGLE 5 ISS clears the alarm within five seconds. The following UAM clears the alarm:

```
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
```

```
nnnn.0365 OAP A Configuration data checksum alarm cleared
```

If the **oap=a**, **oap=b**, or **oap=all** parameter is specified with the **act-oap-config** command, then the link from the EAGLE 5 ISS to the specified OAP must be in service.

If the **oap=a** or **oap=b** parameter is specified, the **force=yes** parameter must be specified.

The SEAS Over IP feature must be turned off before this command can be entered.

Notes

To configure the OAP from the EAGLE 5 ISS, the procedure "Configuring the OAP from the EAGLE 5 ISS STP Terminal" in the *System Manual – EOAP* is recommended.

It is recommended that only one OAP be updated at a time. Although the **act-oap-config** command completes immediately on the EAGLE 5 ISS, processing on the OAP may take over 10 minutes depending on which parameters changed and which OAP hardware is installed. Also, whenever some parameters are changed, the OAP reboots to use the new data. The reboot interrupts the connection between that OAP and the SEAC. By updating only one OAP at a time, the EAGLE 5 ISS and the SEAC will not be isolated, as one OAP is always connected to the SEAC.

Table 5-3 shows the fields of the **rtrv-oap-config** command output that must be configured depending on which feature is on. Table 5-3 also shows the parameters of the **chg-oap-config** command that are used to configure the OAP configuration data.

Table 5-3. Performance Impact of act-oap-config parameters

Configured Parameter Group	OAP Action					
	Restart Q3 Links	Restart Q3 and SEAS Links	Bring Down, Rebuild, Bring Up Q3 and SEAS Links:	Bring Down Q3 and SEAS Links; Reboot OAP	Bring Down and Rebuild Q3 and SEAS Links; Reboot OAP	Total Time Required (in seconds)
Group A serv	X					≤ 65
Group B x25ps, x25mode		X				≤ 260
Group C clli, seaccli			X			≤ 320
Group D aname/bname aipaddr/bipaddr anmask, bnmask arouter/brouter				X		≤ 560
Group A and B		X				≤ 260
Group A and C			X			≤ 320
Group A and D				X		≤ 560
Group A, B, and C			X			≤ 320
Group A, B, and D				X		≤ 560

Table 5-3. Performance Impact of **act-oap-config** parameters

Configured Parameter Group	OAP Action					
	Restart Q3 Links	Restart Q3 and SEAS Links	Bring Down, Rebuild, Bring Up Q3 and SEAS Links:	Bring Down Q3 and SEAS Links; Reboot OAP	Bring Down and Rebuild Q3 and SEAS Links; Reboot OAP	Total Time Required (in seconds)
Group A, C, and D			X	X		≤ 620
Group B and C			X			≤ 320
Group B and D			X	X		≤ 620
Group B, C, and D			X	X		≤ 620
Group C and D					X	≤ 620

The OAP is named and addressed according to the terminal port number on the EAGLE 5 ISS control shelf backplane that the OAP is connected to. The terminal ports are numbered from MMI 0 to MMI 15. OAP A is connected to the lower numbered terminal port and OAP B is connected to the higher numbered terminal port. If the terminal port connections for the OAPs change, the names for OAPs A and B could be reversed. For example, OAP A is connected to MMI 3 and OAP B is connected to MMI 9. At some later time, OAP A is moved from MMI 3 to MMI 12. Because of this move, OAP A is now OAP B, and what was OAP B is now OAP A.

Output

```
act-oap-config:oap=a:force=yes
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
ACT-OAP-CONFIG: MASP A - COMPLTD
;
```

act-slk

Activate Signaling Link

Use this command to change the link from OOS-MT-DSBLD (Out-of-Service-Maintenance-Disabled) to IS-NR (In-Service-Normal).

NOTE: The signaling link's activated status is preserved across a card reboot.

Keyword: act-slk

Related Commands: blk-slk, dact-slk, dlt-slk, ent-slk, inh-slk, rept-stat-slk, rtrv-slk, tst-slk, ublk-slk, unhb-slk

Command Class: Link Maintenance

Parameters

:link= (mandatory)

The signaling link on the card specified in the **loc** parameter. The links can be specified in any sequence or pattern.

Synonym: port

Range: **a, b, a1-a31, b-b31**

Not all card types support all **link** parameter values.

See "Summary of Range Values for :link Parameter" for valid **link** parameter range values for each type of card that can have a location specified in the **loc** parameter.

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

Example

act-slk:loc=1301:link=a

Dependencies

The card must be equipped and must be one of the following cards:

- An E1 ATM card running the **atmitu** application
- An E1/T1 MIM, E5-E1T1, or HC MIM card running the **ss7ansi** or **ccs7itu** application
- An E5 ATM card running the **atmansi** or **atmitu** application
- An E5-ENET card running the **ipsg** application
- An E5-ENET card or SSEDCCM card running the **iplim** or **iplimi** application with links having **ipliml2=m2pa**
- A LIM card running the **ss7ansi**, **ss7gx25**, or **ccs7itu** application
- A LIM ATM card running the **atmansi** application

This command cannot be entered while the **tst-slk** command is in progress.

A card location that is defined in the database must be specified.

The card must contain signaling links.

No other action command can be in progress when this command is entered.

The specified signaling link must be provisioned in the database.

The following **link** parameter values can be specified for the following cards that support more than 2 links per card:

- **a1-a3, b1-b3**—Multi-port LIM (MPL), SSEDCCM card running the **iplim** or **iplimi** application with links having **ipliml2=m2pa**, E1/T1 MIM card
- **a1-a31, b1-b31**—HC-MIM card
- **a1-a15, b1-b15**—E5-E1T1 card
- **a1-a7, b1-b7**—E5-ENET card running the **iplim** or **iplimi** application that supports 16 links
- **a1-a15, b1-b15**—E5-ENET card running the **ipsg** application

The specified card location must be equipped in the database.

Notes

The *Installation Manual - EAGLE 5 ISS* provides an illustration of card locations.

Output

```
act-slk:loc=1301:link=a
tekelecstp 05-01-21 17:00:36 EST EAGLE5 33.0.0
Activate Link message sent to card
;
```

act-user**Activate User**

This command is an alternate to the **login** command. Use this command to log into the system. After this command is entered, the system requests a password. For security reasons the password is not echoed to the terminal.

Keyword: act-user

Related Commands: chg-pid, chg-user, dact-user, dlt-user, ent-user, login, logout, rept-stat-user, rtrv-secu-user, rtrv-user

Command Class: Basic

Parameters

:uid= (mandatory)

User ID. The system prompts you for a valid password after this ID is entered.

Range: azzzzzzzzzzzzzzzz

1 alphabetic character followed by up to 15 alphanumeric characters; the first character must be a letter.

Example

```
act-user:uid=john
```

Dependencies

The first character of the user ID must be a letter.

Notes

CAUTION

CAUTION: If the OA&P IP Security Enhancements feature is not turned on, a serial terminal (terminals 1-16) must be used to log in with a new Userid and password for the first time or to change an expired password. The OA&M IP Security Enhancements feature must be turned on before you can change the password at the prompt from an IP User Interface telnet terminal (IDs 17-40) when:

- It is the first time the user is logging in with the assigned Userid and password.
- The password has expired because of aging out.

The **login** command can be used instead of **act-user**. The command **act-user** has been provided in accordance with OTGR standards.

When a new system is shipped, the user ID and password are set to the system. Change these immediately to ensure system security.

The OAP is named and addressed according to the terminal port number on the EAGLE 5 ISS control shelf backplane that the OAP is connected to. The terminal ports are numbered from MMI 0 to MMI 15. OAP A is connected to the lower numbered terminal port and OAP B is connected to the higher numbered terminal port. If the terminal port connections for the OAPs change, the names for OAPs A and B could be reversed. For example, OAP A is connected to MMI 3 and OAP B is connected to MMI 9. At some later time, OAP A is moved from MMI 3 to MMI 12. Because of this move, OAP A is now OAP B, and what was OAP B is now OAP A.

Output

Not applicable.

alw-card**Allow Card**

Use this command to change the card from OOS-MT-DSBLD (Out-of-Service-Maintenance-Disabled) to IS-NR (In-Service-Normal) if the loading is successful.

Keyword: **alw-card**

Related Commands: **dlt-card**, **ent-card**, **inh-card**, **init-card**, **rept-stat-card**, **rmv-card**, **rst-card**, **rtrv-card**

Command Class: System Maintenance

Parameters

:loc= (mandatory)

Location. This parameter specifies the card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1113, 1115, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

:code= (optional)

This parameter specifies the GPL type to be loaded.



CAUTION: Do not enter the **pktgen** or utility values for this parameter unless instructed to do so by Tekelec personnel.

Range: **appr**, **pktgen**, **trial**, **utility**

appr — Downloads the approved GPL

pktgen — Downloads the **pktgen** GPL for the appropriate hardware type. This GPL is to be used only for engineering test purposes and must not be used in customer installations without engineering oversight.

trial — Downloads the trial GPL

utility — Downloads the CDU or VCDU GPL for the appropriate hardware type. This GPL is used primarily by the factory for testing purposes.

After the **pktgen** GPL is initially downloaded to a card by the **alw-card** command, the **pktgen** GPL will continue to be downloaded to the card until another **alw-card** command is issued.

Default: **appr**

:data= (optional)

High memory refresh. This parameter causes data to be reloaded to the specified card. This parameter is used to reload data if the G-Flex, G-Port, INP, or V-Flex feature is turned on or the ATINP feature is enabled (see the **enable-ctrl-feat** and **chg-ctrl-feat** commands). This parameter is applicable only to network cards containing the MPS database (VSCCP).

NOTE: Various conditions in the system may prevent the persistence of the data on the cards.

Range: **refresh**, **persist**

refresh — Causes data to be reloaded to the specified card.

persist — Indicates that the database is not to be reloaded to the card. This parameter is used to request that the EAGLE 5 ISS perform a warm restart of the requested cards. The EAGLE 5 ISS performs various checks to ensure that all conditions necessary to

initiate the warm restart are in place. During the card initialization and loading sequence, a warm restart is performed if the card meets the warm restart conditions, as described in the Notes section of this command.

Default: **refresh**

Example

alw-card: loc=2301:code=trial

alw-card: loc=1101:data=persist

Dependencies

The active and standby TDM card locations and the card location that is running the active OAM cannot be specified in the **loc** parameter.

The shelf and card must be equipped.

No other action command can be in progress when this command is entered.

The G-Flex, G-Port, INP, LNP, or V-Flex feature must be turned on, or the ATINP feature must be enabled before the **data** parameter can be specified.

The **data** parameter is valid only for SCCP card locations or GPLs, or MPS database (VSCCP) card locations or GPLs.

A card that is the active MASP cannot be specified for the **loc** parameter.

A card location that is valid and defined in the database must be specified.

Notes

The function of this command is the same as the **rst-card** command.

The *Installation Manual - EAGLE 5 ISS* provides an illustration of card locations.

The system previously supported the **data** parameter for reloading GTT data. The system does not support persistent GTT data loading, and the **data** parameter is now used in support of a warm restart feature.

A number of reasons exist for not being able to warm restart. If none of these conditions exists, a warm restart is possible and will be attempted following a SCCP or VSCCP card reset.

- The following conditions require a full data reload:
 - **AUDIT FAILED**—The checksum comparisons of the LNP database failed during card initialization. Data on the card is determined to be corrupted after the reset (was not yet detected by normal auditing).
 - **AUDIT TIMEOUT**—The LNP initialization audit timed out (software failure).
 - **DB LEVEL**—The database level is not supported, or the difference exceeds incremental loading capability. This condition is caused by the reset of OAMs or if the number of updates exceeds the incremental loading capability.
 - **DB STATUS**—The database status of the card is incoherent at the time of a reset. This condition can be caused by a failed network card update or a reset during a database update to the card.
 - **DB VERSION**—The LNP Database version has changed from the previous version. An import, or bulk downloads (**chg-db**), or changes from release to release may alter the database version.
 - **HW ERROR**—The hardware error bit checks on the card failed during card initialization.

- **NO AUDIT**—Unable to perform an LNP audit. The LNP audit is not on (for example, LNP options has **audit=off**). This condition can occur if the rate of LNP updates exceeds the ability of the LNP audit to compute checksums (excessive unknown checksums). This condition is more likely on a small database where there are fewer checksums. The percentage of known checksums must be 99% or more. The percentage is based on the number of checksums in use, which is smaller for small databases (such as two million TNs or fewer).
 - **POWER ON**—A power on reset (the card is pulled and reinserted).
 - **UNKNOWN/OTHER**—An unknown or other type of software failure.
 - **USER REQUEST**—A user-initiated **init-card** or **init-sys** command **reload type=cold**. The default restart type for these commands is a cold or full LNP data reload. The user must specify **data=persist** for a warm restart on command.
 - **XILINX VERSION**—The M256 Xilinx program version has changed from the previous version.
- The following conditions require an MCPM card cold restart:
 - **DB STATUS**—The database status of the card is incoherent at the time of a reset. This condition can be caused by a failed network card update or a reset during a database update to the card.
 - **MEAS DB**—A measurements database Init failure or corruption.
 - **POWER ON**—A power on reset (card is pulled and reinserted).
 - **UNKNOWN/OTHER**—An unknown or other type of software failure.
 - **XILINX VERSION**—The D1G Xilinx program version has changed from previous version.



CAUTION **CAUTION: This command can be used to enable Measurements Platform measurements collection after the collection function has been disabled with the inh-card command for ALL MCPM cards in the system. To enable collection, at least 1 MCPM card must be allowed in the system. Disabling collection by inhibiting all MCPM cards CAN RESULT IN LOSING ALL PAST MEASUREMENT DATA ON THE CARDS.**

When the OA&M IP Security feature is turned on, and an IPSM card is inserted and initialized for the first time or is removed, inserted, and initialized again, the "SSH Host Keys Regenerated" UIM is displayed. The UIM shows the generated SSH Host Key fingerprint that must be provided at the secure client in order for secure information transfer to occur. The SSH Host Key fingerprint is changed whenever power is lost and restored to an IPSM card.

```
rlghncxa03 03-07-11 07:05:00 EST EAGLE 30.2.0
```

```
0021.1493 CARD 1111 INFO SSH Host Keys Regenerated
```

```
84 7c 92 8b c 7c ds 19 1c 6 4b de 5c 8f c5 4d
```

```
Report Date:03-07-11 Time:22:27:36
```

When the OA&M IP Security feature is turned on, and an IPSM card is restarted with this command, the "SSH Host Keys Loaded" UIM is displayed. The UIM shows the current SSH Host Key fingerprint. The SSH Host Key fingerprint is not changed if the IPSM card does not lose power.

```
rlghncxa03 03-07-11 07:05:00 EST EAGLE 30.2.0
0021.1493 CARD 1111 INFO SSH Host Keys Regenerated
DSA Server Host Key FTRA-formatted Fingerprint=
84 7c 92 8b c 7c ds 19 1c 6 4b de 5c 8f c5 4d
Report Date:03-07-11 Time:22:27:36
If a location for an E1/T1 MIM card (type lime1, limt1, or limch), HC-MIM card (type lime1 or limt1), E5-E1T1 card (type lime1 or limt1), or E5-ATM card (type limatm or lime1atm) is specified, then at least one signaling link must be provisioned for that card before it can be allowed.
```

Output

```
alw-card:loc=2301:code=trial
rlghncxa03w 06-06-01 11:11:28 EST EAGLE 35.0.0
Card has been allowed.
;
```

alw-imt

Allow IMT

Use this command to change the state of the specified Interprocessor Message Transport (IMT) bus from OOS-MT-DSBLD (Out-of-Service-Maintenance-Disabled) to IS-NR (In-Service-Normal), if the command is successful. If the command fails, the status is IS-ANR (In-Service-Abnormal). The IMT bus is comprised of two 125 Mbps counter-rotating serial busses. If one bus fails, the other immediately assumes control of all messages.

Keyword: **alw-imt**

Related Commands: **clr-imt-stats**, **conn-imt**, **disc-imt**, **inh-imt**, **rept-imt-lvl1**, **rept-imt-lvl2**, **rept-stat-imt**, **rmv-imt**, **rst-imt**, **tst-imt**

Command Class: System Maintenance

Parameters

:bus= (mandatory)
This parameter specifies the IMT bus whose status you want to change.
Range: **a, b**

Example

```
alw-imt:bus=a
```

Dependencies

This command cannot be entered during an IMT Fault Isolation Test.

Notes

This command returns an inhibited IMT bus to service.

The function of this command is the same as the **rst-imt** command.

See the **tst-imt** command to determine the location of faults on a failed or abnormal IMT bus.

Output

```
alw-imt:bus=a
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
Allow IMT Bus A command issued.

rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
0100.0097 IMT BUS A Imt allowed
;
```

alw-map-ss**Allow Mated Application Subsystem**

Use this command to activate a subsystem and bring it online. Currently, the ATINPQ, EIR, INP, INPQS, LNP, LNPQS, and V-Flex subsystems can be allowed and inhibited.

Keyword: **alw-map-ss**

Related Commands: **inh-map-ss, rept-stat-lnp, rept-stat-sccp**

Command Class: System Maintenance

Parameters

:ssn= (mandatory)

Subsystem number. This parameter specifies the ATINPQ, EIR, INP, LNP, or V-Flex subsystem number.

Range: 2-255

Example

alw-map-ss : ssn=10

Dependencies

No other action command can be in progress when this command is entered.

The EAGLE 5 ISS must be configured with at least one TSM card running the **sccp** application or one Service Module card running the **vsccp** application.

The ATINP, EIR, INP, LNP, or V-Flex feature must be turned on before this command can be entered.

The value specified for the **ssn** parameter must be the ATINPQ, EIR, INP, LNP, or V-Flex subsystem number.

The LNPQ subsystem must be online in the database before this command can be entered.

The V-Flex subsystem must be online in the database before this command can be entered.

The ATINPQ subsystem must be online in the database before this command can be entered.

The INP subsystem must be online in the database before this command can be entered.

The EIR subsystem must be online in the database before this command can be entered.

Notes

None

Output

alw-map-ss : ssn=11

```
integrat40 00-05-24 10:37:22 EST EAGLE5 31.0.0
Allow map subsystem command sent to all SCCP cards.
Command Completed.
```

;

alw-slk**Allow Signaling Link**

Use this command to return an inhibited signaling link to service. If the link was aligned when it was inhibited, a changeover occurred. This command causes a changeback on the specified link. MSUs are transmitted on the link after the changeback is issued.

NOTE: The signaling link's inhibited status is not preserved across a card reboot.

Keyword: alw-slk

Related Commands: act-slk, blk-slk, canc-slk, dact-slk, dlt-slk, ent-slk, inh-slk, rept-stat-slk, rtrv-slk, tst-slk, ublk-slk, unhb-slk

Command Class: Link Maintenance

Parameters

:link= (mandatory)

This parameter specifies the signaling link defined on the card specified in the **loc** parameter. The links can be specified in any sequence or pattern.

Synonym: port

Range: a, b, a1-a31, b1-b31

Not all card types support all **link** parameter values.

See "Summary of Range Values for :link Parameter" for valid **link** parameter range values for each type of card that can have a location specified in the **loc** parameter.

:loc= (mandatory)

Location. This parameter specifies the card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Example

alw-slk:loc=1301:link=b

Dependencies

A card location that is valid and defined in the database must be specified.

No other action command can be in progress when this command is entered.

The card must contain signaling links.

The signaling link must be equipped in the database.

The following **link** parameter values can be specified for the following cards that support more than 2 links per card:

- **a1-a3, b1-b3**—Multi-port LIM (MPL), SSEDCCM card running the **iplim** or **iplimi** application with links having **ipliml2=m2pa**, E1/T1 MIM card
- **a1-a31, b1-b31**—HC-MIM card
- **a1-a15, b1-b15**—E5-E1T1 card
- **a1-a7, b1-b7**—E5-ENET card running the **iplim** or **iplimi** application that supports 16 links.
- **a1-a15, b1-b15**—E5-ENET card running the **ipsg** application

This command is not valid on TCP/IP point to multipoint links (SSEDCCM cards or E5-ENET cards equipped as IPGWI or SS7IPGW links).

The card that contains the specified signaling link must be equipped in the specified card location.

The card in the specified card location cannot be a TDM card, an MDAL card, an HMUX or HIPR card, or the cards running the OAM application.

If IPSPG-M3UA signaling links are used, then this command cannot be entered.

Notes

The function of this command is the same as the **unhb-slk** command.

Not every card location represents a signaling link. Be sure to address a signaling link in this command.

The *Installation Manual - EAGLE 5 ISS* provides an illustration of card locations.

Output

```
alw-slk:loc=1301:link=b
tekelecstp 05-01-21 17:00:36 EST EAGLE5 33.0.0
Allow Link message sent to card
;
```

alw-trm

Allow Terminal

Use this command to return the specified serial port to the state IS-NR (in-service normal) from the state OOS-MT-DSBLD (out-of-service maintenance-disabled) if the command is successful. If the command is not successful, the terminal's state is OOS-MT (out-of-service maintenance).

Keyword: **alw-trm**

Related Commands: **act-echo, canc-echo, chg-trm, dact-echo, inh-trm, rept-stat-trm, rmv-trm, rst-trm, rtrv-trm**

Command Class: System Maintenance

Parameters

:trm= (mandatory)

This parameter specifies the ID of the serial or telnet port to be put into service.

Range: 1-40

Example

```
alw-trm:trm=5
alw-trm:trm=23
```

Dependencies

No other action command can be in progress when this command is entered.

The IP User Interface feature must be enabled before terminal ports 17 through 40 can be specified in the **trm** parameter.

The terminal specified by the **trm** parameter must be equipped.

If a SEAS terminal is configured, then the IP address for the associated E5-IPSM card must be specified before this command can be entered.

The SEAS Over IP feature must be turned on before a SEAS terminal can be specified.

The specified SEAS terminal cannot be auto-inhibited.

If a critical thermal alarm is raised against the E5-IPSM card hosting the terminal, then the specified Telnet terminal cannot be returned to the IS-NR state.

Notes

The function of this command is the same as the **rst-trm** command.

When you attempt to return to service a terminal that is already in service, a warning message is echoed to the scroll area but no action is taken.

If a SEAS terminal is configured, then the corresponding card must be an E5-IPSM card, and the SEAS Over IP feature must be turned on before the SEAS terminal is allowed. The SEAS terminal is auto-inhibited if the IP Address for the corresponding E5-IPSM card is invalid.

Output

```

alw-trm:trm=12
  rlghncxa03w 04-01-07 11:11:28 EST  EAGLE 31.3.0
  Allow message sent to terminal

  rlghncxa03w 04-01-07 11:11:28 EST  EAGLE 31.3.0
  1062.0046      TERMINAL      12      Terminal Enabled
;

```

aud-data

Audit Data

Use this command to perform a data audit, which is used to determine the integrity of the database. The data audit is separate from the GPL audit, which determines if a specified GPL is at the correct version level.

Keyword: aud-data

Related Commands: rept-stat-db, rtrv-gpl

Command Class: System Maintenance

Parameters

:display= (optional)

Indicates the scope of the display, whether it is a brief display or full display. The output includes the type and location of the card, the data collection being audited, and a message indicating the overall status. This parameter applies only to STP databases.

Range: all, brief, except

all—Contains the actual checksum values (in hexadecimal) and details for each individual GPL and each subset of the current and backup database

brief—Contains data collections for the current database, the backup database on the fixed disk and the approved and trial GPLs

except—Contains the same as **display=all**, except that only the GPLs or database subsets with problems are displayed

Default: brief

Example

```
aud-data:display=all
```

Dependencies

Only one **aud-data** command can be in progress at a time.

Notes

The standby OAM must be available when the **aud-data** command commences so that the standby OAM can receive the signal to begin auditing. If the standby OAM is not available when **aud-data** is issued, then the following messages are issued:

```

Extended Processing Time Required
Standby MASP is (or was) not available at audit start.

```

The above messages may also appear if the standby OAM is not available when the hourly periodic audit, which uses the **aud-data** command, automatically starts. Because the standby OAM is not performing any auditing, no audit results for the standby OAM are displayed in the audit report. Instead, the standby's audit results are as follows:

```
No information currently available
```

If an auditing cycle completes on either the active or standby OAM and does not produce the full set of expected results (i.e., checksums), the following message appears:

Audit results may be incomplete

The audit results may be missing some of the checksums that would normally be displayed (:display=all or :display=except). The results may also contain summary status information (:display=brief) that might have been calculated differently had some of the missing checksums been available. This condition can be caused if the audit results for the backup database are missing, probably because a backup database has not been created.

If the "Audit results may be incomplete" message appears in the audit report, perform the following procedure:

Procedure - Audit Data

- 1 Ensure that the standby OAM is online and ready.
 - 2 Enter the following command to ensure that a backup database has been created:
rept-stat-db
If no backup has ever been created, the output shows the fixed disk backup (FD BKUP) database at level 1. There will be no information under the heading " Time Last Backup."
 - 3 If necessary, create a backup on the fixed disk by entering the following command:
chg-db:action=backup:dest=fixed
 - 4 Re-enter the **aud-data** command.
-

If the standby OAM does not run an audit cycle and no audit information is available, the following message appears:

Audit results are not available

This condition is probably caused by the standby OAM rebooting while an audit cycle is underway. If this message appears, ensure that the standby OAM is available and re-enter the **aud-data** command. Ensure that the standby OAM remains up (is not rebooted) for the duration of the audit cycle.

Output

The following example shows a full display. This example applies only to STP databases.

aud-data:display=all

```
rlghncxa03w 04-01-07 10:39:04 EST EAGLE 31.3.0
DATA AUDIT COMPLETE
CARD      LOC  DATA      STATUS  NEW CS  OLD CS  REF CS
TDM-ACTV  1114  CRNT MTP    SUBSET  OK      H'ffaf H'ffaf H'ffaf
          CRNT GTT    SUBSET  OK      H'5864 H'5864 H'5864
          CRNT GWS    SUBSET  OK      H'd089 H'd089 H'd089
          CRNT MISC   SUBSET  OK      H'2735 H'2735 H'2735
          CRNT DBMM   SUBSET  OK      H'1001 H'1001 H'1001
          BKUP MTP    SUBSET  OK      H'2b85 H'2b85 H'2b85
          BKUP GTT    SUBSET  OK      H'5864 H'5864 H'5864
          BKUP GWS    SUBSET  OK      H'd089 H'd089 H'd089
          BKUP MISC   SUBSET  OK      H'5af1 H'5af1 H'5af1
          BKUP DBMM   SUBSET  OK      H'1001 H'1001 H'1001
          APPR SS7ANSI GPL      OK      H'1372 H'1372 H'1372
          APPR SCCP    GPL      OK      H'9251 H'9251 H'9251
          TRI  SCCP    GPL      OK      H'9251 H'9251 H'9251
          APPR GLS     GPL      OK      H'8887 H'8887 H'8887
          TRI  GLS     GPL      OK      H'8887 H'8887 H'8887
          APPR UTILITY GPL      OK      H'18de H'18de H'18de
          TRI  UTILITY GPL      OK      H'18de H'18de H'18de
          APPR SS7GX25 GPL      OK      H'9251 H'9251 H'9251
          TRI  SS7GX25 GPL      OK      H'610c H'610c H'610c
          APPR STPLAN  GPL      OK      H'93bf H'93bf H'93bf
          TRI  STPLAN  GPL      OK      H'93bf H'93bf H'93bf
          APPR                OK      H'b6c6 H'b6c6 H'b6c6
          TRI                OK      H'b6c6 H'b6c6 H'b6c6

rlghncxa03w 04-01-07 10:39:04 EST EAGLE 31.3.0
DATA AUDIT COMPLETE
CARD      LOC  DATA      STATUS  NEW CS  OLD CS  REF CS
TDM-STDBY 1116  CRNT MTP    SUBSET  OK      H'ffaf H'ffaf H'ffaf
          CRNT GTT    SUBSET  OK      H'5864 H'5864 H'5864
          CRNT GWS    SUBSET  OK      H'd089 H'd089 H'd089
          CRNT MISC   SUBSET  OK      H'2735 H'2735 H'2735
          CRNT DBMM   SUBSET  OK      H'1001 H'1001 H'1001
          BKUP MTP    SUBSET  OK      H'2b85 H'2b85 H'2b85
          BKUP GTT    SUBSET  OK      H'5864 H'5864 H'5864
          BKUP GWS    SUBSET  OK      H'd089 H'd089 H'd089
          BKUP MISC   SUBSET  OK      H'5af1 H'5af1 H'5af1
          BKUP DBMM   SUBSET  OK      H'1001 H'1001 H'1001
          APPR SS7ANSI GPL      OK      H'1372 H'1372 H'1372
          APPR SCCP    GPL      OK      H'9251 H'9251 H'9251
          TRI  SCCP    GPL      OK      H'9251 H'9251 H'9251
          APPR GLS     GPL      OK      H'8887 H'8887 H'8887
          TRI  GLS     GPL      OK      H'8887 H'8887 H'8887
          APPR UTILITY GPL      OK      H'18de H'18de H'18de
          TRI  UTILITY GPL      OK      H'18de H'18de H'18de
          APPR SS7GX25 GPL      OK      H'9251 H'9251 H'9251
          TRI  SS7GX25 GPL      OK      H'610c H'610c H'610c
          APPR STPLAN  GPL      OK      H'93bf H'93bf H'93bf
          TRI  STPLAN  GPL      OK      H'93bf H'93bf H'93bf
          APPR                OK      H'b6c6 H'b6c6 H'b6c6
          TRI                OK      H'b6c6 H'b6c6 H'b6c6
```

;

The following example applies only to STP databases.

aud-data:display=except

```
rlghncxa03w 04-01-07 10:39:01 EST EAGLE 31.3.0
Extended Processing Time Required
Results will be displayed on completion
```

```
rlghncxa03w 04-01-07 10:39:04 EST EAGLE 31.3.0
DATA AUDIT COMPLETE
CARD      LOC      DATA      STATUS      NEW CS OLD CS REF CS
TDM-ACTV  1116    CRNT MTP      SUBSET    DIFFERENT    H'aaaa H'aaaa H'cccc
              CRNT GTT      SUBSET    CORRUPTED    H'aaaa H'bbbb H'aaaa
              APPR MCM      GPL        CORRUPTED    H'4321 H'3456 H'4321
              APPR GLS      GPL        CORRUPTED    H'4321 H'3456 H'4321
              APPR SCCP    GPL        CORRUPTED    H'4321 H'3456 H'4321
```

```
rlghncxa03w 04-01-07 10:39:01 EST EAGLE 31.3.0
Extended Processing Time Required
Results will be displayed on completion
```

```
rlghncxa03w 04-01-07 10:39:04 EST EAGLE 31.3.0
DATA AUDIT COMPLETE
CARD      LOC      DATA      STATUS      NEW CS OLD CS REF CS
TDM-STDBY 1114    CRNT MTP      SUBSET    DIFFERENT    H'aaaa H'aaaa H'cccc
              CRNT GTT      SUBSET    CORRUPTED    H'aaaa H'bbbb H'aaaa
              APPR MCM      GPL        CORRUPTED    H'4321 H'3456 H'4321
              APPR GLS      GPL        CORRUPTED    H'4321 H'3456 H'4321
              APPR SCCP    GPL        CORRUPTED    H'4321 H'3456 H'4321
```

;

The following example shows a brief display. This example applies only to STP databases.

aud-data or aud-data:display=brief

```
rlghncxa03w 04-01-07 10:39:01 EST EAGLE 31.3.0
CARD      LOC      DATA      STATUS
TDM-ACTV  1114    CRNT DB      OK
              BKUP DB      OK
              GPLS      OK
```

```
rlghncxa03w 04-01-07 10:39:01 EST EAGLE 31.3.0
DATA AUDIT COMPLETE:
```

```
CARD      LOC      DATA      STATUS
TDM-STDBY 1116    CRNT DB      OK
              BKUP DB      OK
              GPLS      OK
```

;

Legend

CARD—The card type

DATA—The type of data being audited:

APPR—The approved GPL

BKUP—The database in the backup partition

CCS7ITU—The CCS7ITU GPL

CRNT—The database in the current partition

DBMM—The database management mechanism database

GLS—The GLS GPL

GTT—The global title translation database

GWS—The gateway screening database

MISC—The miscellaneous system configuration database
MTP—The message transfer part database (links, linksets, routing tables)
OAM—The OAM GPL
SCCP—The SCCP GPL
SS7ANSI—The SS7ANSI GPL
SS7GX25—The SS7GX25 GPL
SUBSET or GPL—Indicates whether the data is a part of the database or a generic program load.
TRI—The trial GPL

LOC—The location of the card
NEW CS—The new checksum value calculated by this command
OLD CS—The checksum value stored in the database or GPL
REF CS—The reference checksum value stored on the active MASP
STATUS—The status of the database or GPL, as one of the following conditions:

- **CORRUPTED**—The database or GPL has been changed by some abnormal process. The GPL cannot be used
- **DIFFERENT**—The database or GPL contains information that is not consistent with the reference database or GPL
- **OK**—The database or GPL is not corrupted and contains the same information as the reference database or GPL

blk-slk

Block Signaling Link

Use this command to force a local processor outage (LPO) on the specified link. The system begins sending link status signal units (LSSU) with status of processor outage (SIPO) to the adjacent signaling point.



CAUTION: Maintenance personnel should use this command only to block MSUs from being sent to the system. Level 2 status remains in service, except when the link is an ATM high-speed signaling link.

NOTE: The signaling link's blocked status is not preserved across a card reboot.

Keyword: blk-slk

Related Commands: blk-slk, canc-lpo, rept-stat-slk, ublk-slk

Command Class: Link Maintenance

Parameters

:link= (mandatory)

This parameter specifies the signaling link defined on the card specified in the **loc** parameter. The links can be specified in any sequence or pattern.

Synonym: port

Range: a, b, a1-a31, b1-b31

Not all card types support all **link** parameter values.

See "Summary of Range Values for :link Parameter" for valid **link** parameter range values for each type of card that can have a location specified in the **loc** parameter.

:loc= (mandatory)

Location. This parameter specifies the card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Example

```
blk-slk:loc=2311:link=a
```

```
blk-slk:loc=2312:link=a
```

Dependencies

A card location that is valid and defined in the database must be specified.

No other action command can be in progress when this command is entered.

The card must contain signaling links.

The signaling link must be equipped in the database.

The following **link** parameter values can be specified for the following cards that support more than 2 links per card:

- **a1-a3, b1-b3**—Multi-port LIM (MPL) or SSEDCCM card running the **iplim** or **iplimi** application with links having **ipliml2=m2pa**, E1/T1 MIM card
- **a1-a31, b1-b31**—HC-MIM card
- **a1-a15, b1-b15**—E5-E1T1 card
- **a1-a7, b1-b7**—E5-ENET card running the **iplim** or **iplimi** application that supports 16 links.
- **a1-a15, b1-b15**—E5-ENET card running the **ipsg** application

The card that contains the specified signaling link must be equipped in the specified card location.

The card in the specified card location cannot be a TDM card, an MDAL card, an HMUX or HIPR card, or the cards running the OAM application.

If the card in the specified card location is an SSEDCCM card running the **iplim** application, the specified link must have an **ipliml2** parameter value of **m2pa** (see the **ent-slk** command).

This command is not valid for links belonging to proxy linksets.

This command is not valid for SSEDCCM cards or E5-ENET cards with SS7IPGW or IPGWI TCP/IP links.

Notes

The function of this command is the same as the **act-lpo** command.

This command generates a minor alarm. Refer to the *Maintenance Manual* for information on MRNs 0201 and 0208.

If the **blk-slk** command is followed by the **init-card** command, the signaling link blockage is not preserved after the **init-card** command completes.

The *Installation Manual - EAGLE 5 ISS* provides an illustration of card locations.

If the **blk-slk** or **act-lpo** command is issued for an IPSP signaling link, then one of the following events occurs:

- IPSP-M2PA signaling link—MTP3 local processor outage is initiated.

- IPSC-M3UA signaling link—The link is prohibited from entering service by rejecting received AS-ACTIVE messages.

Output

```
blk-slkl:loc=2311:link=a
tekelecstp 05-01-21 17:00:36 EST EAGLE5 33.0.0
Local processor outage being set.
;
```

In the following example, no signaling link has been defined for link a.

```
blk-slkl:loc=2312:link=a
tekelecstp 05-01-21 17:00:36 EST EAGLE5 33.0.0
Link is UNEQUIPPED in the database.
Local processor outage being set.
;
```

In the following example, slot 55 in the card location is not valid.

```
blk-slkl:loc=2355:link=a
tekelecstp 05-01-21 17:00:36 EST EAGLE5 33.0.0
Command Rejected: Slot ID out of range
;
```

canc-alm-trns

Cancel Alarm Transfer

Use this command to return all audible alarm indications to the local office.

Keyword: **canc-alm-trns**

Related Commands: **act-alm-trns**, **dact-alm-trns**, **rept-stat-cdt**, **rept-stat-clk**, **rept-stat-trbl**, **rls-alm**, **rtrv-obit**, **rtrv-trbl**

Command Class: System Maintenance

Parameters

This command has no parameters.

Example

```
canc-alm-trns
```

Dependencies

No other action commands can be in progress when this command is entered.

Notes

No other action command can be in progress when this command is entered.

The function of this command is the same as the **dact-alm-trns** command.

After the **canc-alm-trns** command is entered, the **rept-stat-alm** command can be entered to verify the status of the alarms.

Output

```
canc-alm-trns
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
Alarms returned to Local Maintenance Center
Command Completed.
;
```


canc-cmd**Cancel Command**

This command halts processing and output of the commands listed in Table 5-4.

Table 5-4. Commands for which **canc-cmd** Halts Processing and Output

Commands		
rept-imt-info	rtrv-as	rtrv-obit (active OAM)
rept-stat-applsock	rtrv-assoc	rtrv-rte
rept-stat-as	rtrv-cmd	rtrv-seculog
rept-stat-assoc	rtrv-dcmps	rtrv-secu-user
rept-stat-card	rtrv-dstn	rtrv-slk
rept-stat-clk	rtrv-gta	rtrv-tbl-capacity
rept-stat-dstn	rtrv-gtt	rtrv-trbltx
rept-stat-ls	rtrv-lbp	rtrv-uaps
rept-stat-rte	rtrv-log	rtrv-vflx-cd
rept-stat-slk	rtrv-ls	rtrv-vflx-rn
rept-stat-trbl	rtrv-map	rtrv-vflx-vm sid
rtrv-appl-rtkey	rtrv-mrn	

When using the **canc-cmd** command without the **trm** parameter, enter the command on the same terminal that is currently running the command you want to cancel.

When using the **canc-cmd** command with the **trm** parameter, enter the command on a terminal other than the one that is currently running the command you want to cancel.

NOTE: The Basic command class allows use of this command without the **trm** parameter (**dact-cmd**); the Security Administration command class is required for use of this command when the **trm** parameter is specified (**dact-cmd:trm=x**).

Keyword: **canc-cmd**

Related Commands: **rept-imt-info**, **rept-stat-assoc**, **rept-stat-card**, **rept-stat-dstn**, **rept-stat-ls**, **rept-stat-rte**, **rept-stat-slk**, **rtrv-appl-rtkey**, **rtrv-assoc**, **rtrv-dstn**, **rtrv-gta**, **rtrv-gtt**, **rtrv-log**, **rtrv-ls**, **rtrv-map**, **rtrv-rte**, **rtrv-seculog**, **rtrv-slk**, **rtrv-trbltx**, **rtrv-uaps**, **rtrv-vflx-cd**, **rtrv-vflx-rn**, **rtrv-vflx-vm sid**

Command Class: Security Administration

Parameters

:trm= (optional)

The terminal on which the command is to be canceled.

Range: 1-40

Example

canc - cmd

canc - cmd : trm=3

Dependencies

The **trm** parameter cannot be specified in a **canc-cmd** command that is entered on the same terminal that is running the command that is to be cancelled. The terminal will return an error: system is busy.

The **canc-cmd:trm=** command requires the Security Administration command class for the terminal and for the user.

The **canc-cmd:trm** command requires a Security Administration command class for the terminal.

Notes

The **canc-cmd** command (without the **trm** parameter) must be entered on the same terminal that is running the command to be cancelled.

If the **canc-cmd** command is entered on a terminal that is not running a command, the **canc-cmd** command completes successfully without returning an error. Likewise, if the **canc-cmd:trm=** command is entered and there is no command running on the specified terminal, the **canc-cmd:trm=** command completes successfully without returning an error.

When the **canc-cmd** with no parameter is entered, a scroll area message appears to indicate that the command has been cancelled. For example:

Command aborted on terminal 2.

Some output can still appear after the above abort message if output accumulated in the output queue before the **canc-cmd** command was entered. When a command is cancelled, the cancellation should take no longer than 25 seconds to take effect.

The **F9** function key provides the same function as the **canc-cmd** command (without the **trm** parameter). On a terminal in KSR mode, pressing <CTRL>**I** also provides the same function.

The **canc-cmd** and the **F9** function key cannot be used for pure SEAS commands.

If **canc-cmd** is entered to cancel a command other than ones listed in Table 5-4, the terminal will accept another command, but output and processing of the current command continue.

When **canc-cmd** is entered, a command status code of **AB** (command aborted) is logged in the security log as follows:

- When the **canc-cmd** (without the **trm** parameter) is entered, no entry is logged.
- When the **canc-cmd:trm=** command is entered, an entry is logged.
- When the **canc-cmd** command (without the **trm** parameter) is entered as a SEAS flow-thru command, an entry is logged. The **canc-cmd:trm=** command is not allowed as a SEAS flow-thru command because the **canc-cmd:trm=** command belongs to the Security Administration Command Class.

For examples of the security log entries, see the **rtrv-seculog** command.

Output**canc-cmd**

```
rlghncxa03w 04-07-27 17:00:36 EST EAGLE 31.6.0
canc-cmd
Command entered at terminal #2.
```

```
rlghncxa03w 04-07-27 17:00:36 EST EAGLE 31.6.0
Command aborted on terminal 2.
```

```
;
```

canc-cmd:trm=2

```
rlghncxa03w 04-07-27 17:00:36 EST EAGLE 31.6.0
canc-cmd:trm=2
Command entered at terminal #3.
```

```
rlghncxa03w 04-07-27 17:00:36 EST EAGLE 31.6.0
Command aborted on terminal 2.
```

```
;
```

canc-dlk**Cancel Data Link**

Use this command to remove a TCP/IP data link from service. The state of the TCP/IP data link is changed from in service normal (IS-NR) to out of service maintenance disabled (OOS-MT-DSBLD).

Keyword: **canc-dlk**

Related Commands: **act-dlk, dlt-dlk, ent-dlk, rept-stat-dlk, rtrv-dlk, tst-dlk**

Command Class: Link Maintenance

Parameters

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

Example

canc-dlk:loc=1308

Dependencies

No other action command can be in progress when this command is entered.

The shelf and card must be equipped.

The card location must contain an ACM card.

The card location, frame, shelf, or slot must be within the allowed range.

The signaling link must be equipped in the database.

A card location that is valid and defined in the database must be specified.

Notes

None

Output

```

canc-dlk:loc=1308
rlghncxa03w 04-01-27 17:00:36 EST  EAGLE 31.3.0
Deactivate Link message sent to card.
Command Completed.
;

```

canc-echo**Cancel Echo**

Use this command to halt the echoing of command responses from the user's terminal to other terminals or printers.

Keyword: **canc-echo**

Related Commands: **act-echo, alw-trm, chg-trm, dact-echo, inh-trm, rept-stat-trm, rmv-trm, rst-trm, rtrv-trm**

Command Class: Basic

Parameters

:trm= (optional)
 The ID number of the terminal for which the echo is being canceled.
Range: **1-16**
Default: Cancels all active echoes

Example

```

canc-echo
canc-echo:trm=7

```

Dependencies

The echo cannot be cancelled to the same terminal from which the **canc-echo** command is entered. An **act-echo** command must be active at the specified terminal before this command can be entered to cancel the echo.

Notes

Only the echoing of command output responses can be halted by this command. To halt the printing of alarm and network messages, the **chg-trm** command must be used.

Output

```

canc-echo
rlghncxa03w 04-01-07 11:11:28 EST  EAGLE 31.3.0
canc-echo
Command entered at terminal #6.
Scroll Area Output echo disabled to all terminals.
;
canc-echo:trm=7
rlghncxa03w 04-01-07 11:11:28 EST  EAGLE 31.3.0
canc-echo:trm=7
Command entered at terminal #6
Scroll Area Output echo disabled for terminal 7.
;

```

canc-lpo**Cancel Local Processor Outage**

Use this command to cancel a processor outage and restore the link to its previous state. LSSUs with status of processor outage are terminated, and the link begins sending MSUs.

NOTE: The signaling link's blocked status is not preserved across a card reboot.

Keyword: **canc-lpo**

Related Commands: **act-lpo, blk-slk, ublk-slk**

Command Class: Link Maintenance

Parameters

:link= (mandatory)

The signaling link defined on the card specified in the **loc** parameter. The links can be specified in any sequence or pattern.

Synonym: **port**

Range: **a, b, a1-a31, b1-b31**

Not all card types support all **link** parameter values.

See "Summary of Range Values for :link Parameter" for valid **link** parameter range values for each type of card that can have a location specified in the **loc** parameter.

:loc= (mandatory)

The address of the card containing the signaling link to be unblocked.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

Example

canc - lpo : loc=2311 : link=b

Dependencies

A card location must be specified that is valid and defined in the database.

No other action command can be in progress when this command is entered.

The card must be equipped and must be one of the following cards:

- A LIM card running the **ss7ansi**, **ss7gx25**, **atmansi**, or **ccs7itu** application
- An E1 ATM card running the **atmitu** application
- An SSEDCEM or E5-ENET card running the **iplim** or **iplimi** application with links having **ipliml2=m2pa**
- An E1/T1 MIM card or an HC MIM card running the **ss7ansi** or **ccs7itu** application
- An E5-ENET card running the **ipsg** application

This command cannot be entered for IPLIMx signaling links that have an **ipliml2** parameter setting that is not **m2pa**.

This command is not valid for SSEDCEM cards or E5-ENET cards with SS7IPGW or IPGWI TCP/IP links.

The card must contain signaling links.

The signaling link must be equipped in the database.

The **link** parameter values **a1, b1, a2, b2, a3, and b3** can be specified only for the following cards:

- A multi-port LIM
- An E1/T1 MIM or an HC MIM

This command is not valid for links belonging to proxy linksets.

Notes

The function of this command is the same as the **ublk-slk** command.

Unblocking a signaling link removes a Level 2 failure resulting from a **blk-slk** of an ATM high-speed signaling link.

The *Installation Manual - EAGLE 5 ISS* provides an illustration of card locations.

Output

canc -lpo:loc=2311:link=a

```
tekelecstp 05-01-21 17:00:36 EST EAGLE5 33.0.0
Local processor outage being cleared.
```

;

In the following example, card location 1113 is not valid:

canc -lpo:loc=1113:link=a

```
tekelecstp 05-01-21 17:00:36 EST EAGLE5 33.0.0
Command Rejected : Location is not valid for command
```

;

canc-slk

Cancel Signaling Link

Use this command to change the state of the specified link to OOS-MT-DSBLD (Out-Of-Service Maintenance Disabled).



CAUTION

CAUTION: This command impacts network performance and should be used only during periods of low traffic.

Keyword: **canc-slk**

Related Commands: **act-slk, alw-slk, blk-slk, dact-slk, dlt-slk, ent-slk, inh-slk, rept-stat-slk, rtrv-slk, tst-slk, ublk-slk, unhb-slk**

Command Class: Link Maintenance

Parameters

:link= (mandatory)

Signaling link defined on the card specified in the **loc** parameter. The links can be specified in any sequence or pattern.

Synonym: **port**

Range: **a, b, a1-a31, b1-b31**

Not all card types support all **link** parameter values.

See "Summary of Range Values for :link Parameter" for valid **link** parameter range values for each type of card that can have a location specified in the **loc** parameter.

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

Example

canc -slk:loc=1301:link=a

Dependencies

A card location must be specified that is valid and defined in the database.

No other action command can be in progress when this command is entered.

The card must contain signaling links.

The signaling link must be equipped in the database.

The following **link** parameter values can be specified for the following cards that support more than 2 links per card:

- **a1-a3, b1-b3**—Multi-port LIM (MPL) or SSEDCCM card running the **iplim** or **iplimi** application with links having **ipliml2=m2pa**, E1/T1 MIM card
- **a1-a31, b1-b31**—HC-MIM card
- **a1-a15, b1-b15**—E5-E1T1 card
- **a1-a7, b1-b7**—E5-ENET card running the **iplim** or **iplimi** application that supports 16 links
- **a1-a15, b1-b15**—E5-ENET card running the **ipsg** application

The card that contains the specified signaling link must be equipped in the specified card location.

The card in the specified card location cannot be a TDM card, an MDAL card, an HMUX or HIPR card, or the cards running the OAM application.

Notes

Not every card location represents a signaling link. Be sure to address a signaling link in this command.

The *Installation Manual - EAGLE 5 ISS* provides an illustration of card locations.

After the **canc-slk** command is entered, the **rept-stat-slk** command can be entered to verify the cancellation.

Output

```
canc -slk:loc=1301:link=a
rlghncxa03w 05-02-07 11:11:28 EST  EAGLE5 33.0.0
Deactivate Link message sent to card
;
```

canc-user**Cancel User**

Use this command to end a user session. The **dact-echo** or **logout** command has the same affect as the **canc-user** command.

Keyword: **canc-user**

Related Commands: **act-user, chg-pid, chg-user, dact-user, dlt-user, ent-user, login, logout, rept-stat-user, rtrv-secu-user, rtrv-user**

Command Class: Basic

Parameters

This command has no parameters.

Example

canc-user

Dependencies

None

Notes

The **dact-echo** or **logout** commands can be used in place of **canc-user**.

Output

Not applicable.

chg-acg-mic**Change ACG Manually Initiated Control**

Use this command to change the values of ACG controls assigned to certain queries. The control can apply to all queries or to specific query services and called party digits. A particular control is selected to be changed by either specifying that it is the **type=all** control or specifying its service and digits.

Keyword: **chg-acg-mic**

Related Commands: **dlt-acg-mic**, **ent-acg-mic**, **rept-stat-lnp**, **rtrv-acg-mic**

Command Class: Database Administration

Parameters

:aintvl= (optional)

AIN interval index

Range: **1-15**

Default: The current value

:dgts= (optional)

Digits

Range: **000-999, 000000-9999999999**

Specify 3 digits or 6-10 digits.

:drtn= (optional)

Duration index. The amount of time that the ACG is in effect. This number is mapped to a time value at the LNP node. Refer to the chapter on Automatic Call Gapping (AGC) configuration in the *LNP Feature Activation Guide* for a description of the use of the duration index.

Range: **1-13**

Default: The current value

:intvl= (optional)

Interval index. The amount of time between ACGs. This number is mapped to a time value for the LNP node. Refer to the chapter on Automatic Call Gapping configuration in the *LNP Feature Activation Guide* for a description of the use of the gap interval index.

Range: **0-15**

Default: Current value

:nd= (optional)

New number of digits

Range: **3, 6-10**

Default: The current value

:serv= (optional)
 Query service
Range: **ain, in**

:type= (optional)
 Type of control
Range: **all, sd**
Default: **sd**

Example

To change the type=all MIC to use 3 digits:

chg-acg-mic:type=all:nd=3

To change the MIC for AIN queries for 919-460-2132 to use an interval index of 15:

chg-acg-mic:serv=ain:dgts=9194602132:aintvl=15

To change the MIC for IN queries for 919-xxx-xxxx to use a duration index of 9 and an interval index of 5:

chg-acg-mic:serv=in:dgts=919:drtn=9:intvl=5

Dependencies

If the **type=all** parameter is specified, at least one optional parameter (**nd**, **drtn**, **intvl**, or **aintvl**) must be specified.

If the **type=all** parameter is specified, optional parameters **serv** and **dgts** cannot be specified.

If the **type=sd** parameter is specified, optional parameters **serv** and **dgts** must be specified.

If the **type=sd** parameter is specified, optional parameter **nd** cannot be specified.

If the **serv=ain** parameter is specified, at least one optional parameter (**drtn** or **aintvl**) must be specified.

If the **serv=ain** parameter is specified, optional parameter **intvl** cannot be specified.

If the **serv=in** parameter is specified, at least one optional parameter (**drtn** or **intvl**) must be specified.

If the **serv=in** parameter is specified, optional parameter **aintvl** cannot be specified.

The **dgts** parameter value must be either 3 digits in the range **000-999** or 6-10 digits in the range **000000-9999999999**.

The **nd** parameter value must be **3** or **6-10** to indicate the number of new digits.

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before this command can be entered.

If the **type=all** parameter is specified, a MIC with **type=all** must exist.

If the **type=sd** parameter is specified, a MIC with the same service and digits must exist.

Notes

None

Output

```
chg-acg-mic:type=all:nd=31
rlghncxa03w 04-01-28 08:50:12 EST EAGLE 31.3.0
ACG MIC table is (11 of 256) 4% full of type SD
CHG-ACG-MIC: MASP A - COMPLTD
;
```

chg-acg-noc**Change ACG Node Overload Control**

Use this command to change the definition of a node overload level. The definition is comprised of the threshold LNP query rates for node overload levels and the values for the automatic call gappings (ACG) to be sent when at the specified level.

Keyword: **chg-acg-noc**

Related Commands: **dlt-acg-noc**, **ent-acg-noc**, **rept-stat-lnp**, **rtrv-acg-noc**

Command Class: Database Administration

Parameters

:lvl= (mandatory)
Overload level.
Range: **1-10**

:and= (optional)
AIN number of digits. The number of digits in the global title address of an AIN query.
Range: **6, 10**
Default: The current value

:drtn= (optional)
Duration index. The amount of time that the ACG is in effect. This number is mapped to a time value at the LNP node. Refer to the chapter on Automatic Call Gapping (ACG) configuration in the *LNP Feature Activation Guide* for a description of the use of the duration index.
Range: **1-13**
Default: The current value

:ind= (optional)
IN number of digits. The number of digits in the global title address of an IN query.
Range: **6, 10**
Default: The current value

:intvl= (optional)
Interval index. The amount of time between ACGs. This number is mapped to a time value for the LNP node. Refer to the chapter on Automatic Call Gapping configuration in the *LNP Feature Activation Guide* for a description of the use of the gap interval index.
Range: **0-15**
Default: The current value

:qr= (optional)
Query rate. The number of LNP queries, which define a particular overload level, in a 30-second period.
Range: **1-2147483647**
Default: The current value

Example

To change level 10's query rate and AIN number of digits:

chg-acg-noc:lvl=10:qr=900000:and=6

To change level 3's duration and interval indexes:

chg-acg-noc:lvl=3:drtn=7:intvl=3

Dependencies

At least one optional parameter must be specified.

The **and** parameter value must be either **6** or **10**.

The specified overload level must be defined.

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before this command can be entered.

The **ind** parameter value must be either **6** or **10**.

Notes

None

Output

```
chg-acg-noc:lvl=10:qr=900000:and=6
rlghncxa03w 03-02-28 08:50:12 EST EAGLE 28.1.0
CHG-ACG-NOC: MASP A - COMPLTD
;
```

chg-appl-rtkey

Change Static Routing Key Table Entries

Use this command to change static entries in the Routing Key table. Only one attribute can be changed at a time.

Keyword: chg-appl-rtkey

Related Commands: dlt-appl-rtkey, ent-appl-rtkey, rtrv-appl-rtkey

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

NOTE: The following parameters are no longer available: nasname, norm, nsname, pstncat, pstnid

:cice= (optional)

The end range of circuit identification codes assigned to the routing key. Specify the **cice** and **cics** parameters to identify the routing key to be changed. The **cice** parameter is mandatory and valid only if the **si** parameter has a value of **4**, **5**, or **13**.

Range: 0-4294967295

See Table A-4 for valid CIC values for specified SI and MSU types.

:cics= (optional)

The start range of circuit identification codes assigned to the routing key. Specify the **cics** and **cice** parameters to identify the routing key to be changed. The **cics** parameter is mandatory and valid only if the **si** parameter has a value of **4**, **5**, or **13**.

Range: 0-4294967295

See Table A-4 for valid CIC values for specified SI and MSU types.

:dpc= (optional)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: dpca

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001-005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006–255**.

The point code **000-000-000** is not a valid point code.

:dpc/dpca/dpci/dpcn/dpcn24= (optional)

Destination point code.

:dpci= (optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*)

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

:dpcn= (optional)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:dpcn24= (optional)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

:ncice= (optional)

The new end range of circuit identification codes assigned to the routing key. Specify the **ncice** and/or **ncics** parameter to change the range of the circuit identification codes assigned to the routing key. The **ncice** parameter is valid only if **si=4, 5, or 13** and is not valid if the **split** parameter is specified.

Range: **0-4294967295**

See Table A-4 for valid CIC values for specified SI and MSU types.

:ncics= (optional)

The new start range of circuit identification codes assigned to the routing key. Specify the **ncics** and/or **ncice** parameter to change the range of the circuit identification codes assigned to the routing key. The **ncics** parameter is valid only if **si=4, 5, or 13** and is not valid with the **split** parameter.

Range: **0-4294967295**

See Table A-4 for valid CIC values for specified SI and MSU types.

:nrcontext= (optional)

This parameter modifies the routing context value assigned to this routing key.

Routing context is mandatory for routing keys associated with SUA Application Servers. Routing context is optional for routing keys associated with M3UA Application Servers.

An AS can be associated with only 1 routing key with routing context. An AS can be associated with multiple routing keys that do not contain routing context. An AS cannot be simultaneously assigned to a routing key with routing contexts and to routing keys without routing contexts.

Range: **0-4294967295**

:opc= (optional)

ANSI originating point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: **opca**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001-005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006-255**.

The point code **000-000-000** is not a valid point code.

:opc/opca/opci/opcn/opcn24= (optional)

Originating point code. Valid only if **si=4, 5, or 13** and required if **si=4, 5, or 13**.

:opci= (optional)

ITU international originating point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*)

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:opcn= (optional)

ITU national originating point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npfcmfi** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn, prefix-nnnnn-gc, prefix-m1-m2-m3-m4, prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:opcn24= (optional)

24-bit ITU national originating point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

:rcontext= (optional)

This parameter specifies a routing key by its routing context when a routing key needs to be changed as an optional alternative to entering the **dpc/si/ssn/opc/cics/cice/type** parameters.

The **split** parameter cannot be specified if this parameter is specified. (Split operations are invalid for routing keys with routing context.)

Range: 0-4294967295

:si= (optional)

The service indicator.

Range: 0-15

0-15 or equivalent text values:

Number = Text—Description

0 = **snm**—Signaling network management messages

1 = **regtest**—Signaling network testing and maintenance regular

2 = **spltest**—Signaling network testing and maintenance special

3 = **sccp**—SCCP

4 = **tup**—Telephone user part

5 = **isup**—ISDN user part

13 = **qbicc**

See Table A-4 and Table 5-5 for valid **si** values in combination with other parameters.

:split= (optional)

The CIC value where the routing key with the specified CICS and CICE range will be split. The specified routing key is split into two entries with adjacent CIC ranges. The existing routing key retains the range of CICs that is lower than the **split** value. The value of **split** minus 1 is used as the end range for this entry. The range of CICs assigned to the original entry is the values of **cics** to **split** minus 1.

A new routing key entry is created with the high end of the original range. The **split** value is used as the start of the CIC range for this entry. The range of CICs assigned to the new entry is the values of **split** to **cice**.

This parameter is valid only if **si=4, 5, or 13** and is not valid with **ncics** or **ncice**. See Table A-4 and Table 5-5.

Range: 0-16363

:ssn= (optional)
 Subsystem number. This parameter is mandatory and valid only if the **si=3** parameter is specified.
Range: 0-255

:type= (optional)
 Type of routing key.
Range: full, partial, default
Default: full

Example

```
chg-appl-
rtkey:dpc=123-230-245:si=5:opc=123-230-244:cics=1:cice=100:split=
50

chg-appl-
rtkey:dpc=123-230-245:si=5:opc=123-230-244:cics=1:cice=50:ncice=1
00

chg-appl-
rtkey:dpcn24=10-100-10:si=5:opc=10-100-11:cics=1:cice=100:ncic
e=200

chg-appl-rtkey:dpc=8-8-8:si=3:ssn=5:rcontext=500

chg-appl-
rtkey:dpci=s-3-11-1:si=5:opci=s-4-11-1:cics=1:cice=1000:ncice=500

chg-appl-rtkey:rcontext=5:ncice=100

chg-appl-rtkey:rcontext=1:nrcontext=2
```

Dependencies

Optional parameters that must be specified with the **chg-appl-rtkey** command depend on the type of routing key being changed. See Table 5-5 for valid parameter combinations.

The **srkq** parameter value in the **chg-sg-opts** command limits the maximum number of static routing keys that can be provisioned using the **ent-appl-rtkey** command. For **ss7ipgw** and **ipgwi** applications running on SSED CM cards (870-2732-xx) or E5-ENET cards (870-2212-xx), there is a limit of 2500 routing keys in the system. See the **chg-sg-opts** command for parameter values that allow 2500 routing keys to be defined in the system.

The subsystem number is mandatory and valid only when the **si=3** (or **sccp**) parameter is specified; if the **si** parameter does not equal 3 (or **sccp**), the **ssn** parameter cannot be specified.

The value entered for the starting circuit identification code (**cics**) must be less than or equal to the value entered for the ending circuit identification code (**cice**).

The value entered for the new starting circuit identification code (**ncics**) must be less than or equal to the value entered for the new ending circuit identification code (**ncice**).

A circuit identification code range (**cics** to **cice**) cannot be specified that overlaps an existing routing key.

When **si=4**, **5**, or **13** (or **tup**, **isup**, or **qbicc**), the **opc**, **cics**, and **cice** parameters are required. The **opc**, **cics**, and **cice** parameters can be specified only if **si=4**, **5**, or **13**.

The value entered for the circuit identification code split range (**split**) must be greater than the value entered for the starting circuit identification code (**cics**) and less than or equal to the value entered for the ending circuit identification code (**cice**).

The value entered for the new starting circuit identification code (**ncics**) must be less than or equal to the value entered for the ending circuit identification code (**cice**) when the new ending circuit identification code (**ncice**) is not specified.

The value entered for the new ending circuit identification code (**ncice**) must be greater than or equal to the value entered for the starting circuit identification code (**cics**) when the new starting circuit identification code (**ncics**) is not specified.

The **split**, **ncics**, and **ncice** parameters are not allowed with the **si** parameter unless the **si=4**, **5**, or **13** (or **tup**, **isup**, or **qbicc**) parameter is specified.

A DPC/SI routing key must be specified when the DPC is ANSI and the **si=4** parameter is specified (TUP is used only in an ITU network).

Table A-4 shows valid CIC values for SI types **4**, **5**, and **13**.

Partial point codes are not allowed; no asterisks can be specified in the point codes in the command.

Mixed point code types are not allowed; **opc** and **dpc** types must match.

When the **type=partial** or **type=default** parameters are specified, the **split** and **resize** parameters are not supported.

When the **type=full** parameter is specified, the **dpc** and **si** parameters must be specified.

The following types of partial routing keys are supported:

- DPC-SI-OPC (ignore CIC) can be used as a partial match key for CIC- based traffic.
- DPC-SI (ignore all other fields) can be used as a partial match key for CIC- based traffic or SCCP traffic.
- DPC only (ignore all other fields) can be used as a partial match for any type of traffic.
- SI only (ignore all other fields) can be used as a partial match for any type of traffic.

If the **rcontext** parameter is specified, then the **split**, **ncics** and **ncice** parameters cannot be specified.

The **rcontext** parameter must be specified for routing keys that are associated with SUA Application Servers.

The specified **rcontext** parameter value must already exist in the database.

If specified, the service indicator parameter must be **si=3** for routing keys that are associated with SUA Application Servers.

An AS cannot be simultaneously assigned to a routing key with routing contexts and routing keys without routing context. To assign an M3UA or SUA association to multiple routing keys with routing context, the M3UA/SUA association must be assigned to more than one AS, and each AS must be assigned to a routing key with routing context.

The AS name and parameters specified for a routing key must use an address format that is valid for the adapter type assigned to the AS.

Table 5-5. Valid Parameter Combinations for Routing Key Types using the **chg-appl-rtkey** command.

Action	dpc	si	ssn	opc	cics	cice	ncics	ncice	split	type
Split CIC Range	X	X		X	X	X			X	full
Re-size CIC Range	X	X		X	X	X	X	X		full
Socket Name Override (SI=ISUP or 5)	X	X		X	X	X				full

Table 5-5. Valid Parameter Combinations for Routing Key Types using the **chg-appl-rtkey** command.

Action	dpc	si	ssn	opc	cics	cice	ncics	ncice	split	type
Socket Name Override (SI = SCCP or 3)	X	X	X							full
Socket Name Override (SI = not 3, 4, 5, or 13)	X	X								full
Socket Name Override (SI = 4, 5, or 13)	X	X		X						partial
Socket Name Override (SI = 3, 4, 5 or 13)	X	X								partial
Socket Name Override SI-only key		X								partial
Socket Name Override DPC-only key	X									partial
Socket Name Overrride Default key										default

The value of the **nrcontext** parameter cannot be changed for a routing key if the **rcontext** parameter has not been configured for that routing key.

The attributes that are required to change a routing key must be specified in the command.

Notes

A routing key entry associates a routing key with a socket name or Application Server (AS) name.

The parameters **dpc**, **si**, **ssn**, **opc**, **cics**, and **cice** are used to identify the routing key to be changed.

The parameters **split**, **ncics**, and **ncice** are used to specify new values for the routing key.

The **opc**, **cics**, and **cice** parameters are not required for partial routing keys.

The **cics**, **cice**, **ncice**, **ncice**, and **split** parameters are valid and required when **si=4** and ITU DPCs (**dpca**, **dpca**) are specified. These parameters are not valid when an ANSI DPC (**dpc**, **dpca**) is specified and **si=4**.

The following changes can be made for routing keys. Only one of these changes is allowed per command.

- A routing key can be split into two entries with adjacent CIC ranges. The resulting entries retain the socket associations of the original entry.
- The range of CICs assigned to a routing key can be changed as long as it does not overlap another routing key. The new entry retains the socket associations of the original entry.

Group codes are required for ITU-N point codes (DPCN/OPCN) when the Duplicate Point Code feature is turned on.

Routing context is a routing key parameter that uniquely identifies routing keys. Routing context is mandatory for routing keys associated with SUA Application Servers and optional for routing keys associated with M3UA Application Servers.

An AS cannot be simultaneously assigned to a routing key with routing contexts and routing keys without routing contexts.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-).

Output

```

chg-appl-rtkey:dpc=123-230-245:si=3:ssn=250:nsname=socket5
  rlgncxa03w 04-01-28 08:50:12 EST EAGLE 31.3.0
  CHG-APPL-RTKEY: MASP A - COMPLTD
;

```

chg-as**Change Application Server**

Use this command to change the characteristics of an existing Application Server (AS).

Keyword: **chg-as**

Related Commands: **dlt-as**, **ent-as**, **rept-stat-as**, **rtrv-as**

Command Class: Database Administration

Parameters

:asname= (mandatory)

This parameter specifies the application Server (AS) name in the AS table.

Range: *aaaaaaaaaaaaa*

Up to 15 alphanumeric characters; the first character must be a letter.

:mode= (optional)

This parameter specifies the traffic mode assigned to this AS.

Range: **loadshare**, **override**

The **mode=override** parameter is not valid for SUA associations assigned to the AS.

Default: No change from current value

System

Default: **loadshare**

:tr= (optional)

This parameter specifies the recovery timer value for this AS, in milliseconds.

Range: **10 - 2000**

Default: No change from current value

System

Default: **200**

Example

```
chg-as:asname=asx:mode=override
```

Dependencies

The AS name (**asname**) must already exist in the AS table.

Association connection parameters must be unique.

The connection state for all associations assigned to the AS must be **open=no** before the **mode** parameter can be changed.

The override traffic mode is not supported for SUA associations.

Notes

By default the AS recovery timer value is set to 200 ms when an AS is entered. This value can be changed at any time using the **chg-as** command. The new timer value will be used the next time the AS enters the AS-Pending state.

Output**chg-as:aname=asx:mode=override**

```
rlghncxa03w 04-01-17 15:35:05 EST EAGLE 31.3.0
CHG-AS: MASP A - COMPLTD
```

;

chg-assoc**Change Association**

Use this command to configure existing SCTP associations in the IPAPSOCK table.

Keyword: **chg-assoc**

Related Commands: **dlt-assoc, ent-assoc, rept-stat-assoc, rtrv-assoc**

Command Class: Database Administration

Parameters

:aname= (mandatory)

Name assigned to this association (in IPAPSOCK table).

Range: *aaaaaaaaaaaaa*

Up to 15 alphanumeric characters; the first character must be a letter.

:lhost= (mandatory)

Local host name. This parameter specifies the local host name as defined in the IP Host table.

Range: *aaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaa*

Any string of characters beginning with a letter and comprising up to 60 characters in length.

Valid characters are **0-9, a-z, A-Z, -** (dash), **.** (period).

Default: No change in current value.

:adapter= (optional)

The adapter layer for this association.

Range: **m3ua, sua, m2pa**

Default: Current value

System

Default: **m3ua**

:alhost= (optional)

Alternate local host name. This parameter configures the SCTP association as a multi-homed endpoint.

Range: *aaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaa, none*

Any string of characters beginning with a letter and comprising up to 60 characters in length

Valid characters are **a-z, A-Z, 0-9, -** (dash), **.** (period)

none—The alhost is not configured; the SCTP association is configured as a uni-homed endpoint.

:alw= (optional)

The parameter specifies whether the connection manager should allow or disallow the association to carry SS7 traffic.

Range: **yes, no**

yes— The connection manager is to allow the association to carry SS7 traffic.

no— The connection manager is to prohibit the association from carrying SS7 traffic.

Default: No change in current value

System**Default:** **no****:bufsize=** (optional)

Association buffer size in Kilobytes.

Range: **8-400****:cwmmin=** (optional)

Minimum congestion window. This parameter specifies the minimum and initial sizes, in bytes, of the association's congestion window.

Range: **1500-409600****Default:** No change in current value**System****Default:** **3000****:istrms=** (optional)

SCTP Inbound Stream Value. A 16-bit unsigned integer that defines the number of streams the sender allows the peer end to create in this association.

Range: **1-2****System****Default:** **2****:link=** (optional)

The signaling link for this association.

Synonym: **port****Range:** **a, b, a1-a31, b1-b31**Not all card types support all **link** parameter values.See "Summary of Range Values for :link Parameter" for valid **link** parameter range values for each type of card that can have assigned signaling links.**Default:** Current value.**:lport=** (optional)

Local port. This parameter specifies the SCTP port number for the local host.

Range: **1024-65535****Default:** Current value.**:m2patset=** (optional)

The M2PA timer set assigned to this association.

Range: **1-20****Default:** **1****:open=** (optional)

Connection state (open or closed) that the connection manager is to put the association in when the socket is operational.

Range: **yes, no****yes** — The connection manager is to open the association if the association is operational.**no** — The connection manager will not open the association.**Default:** No change in current value**System****Default:** **no****:ostrms=** (optional)

SCTP Outbound Stream Value. This parameter specifies the 16-bit unsigned integer that defines the number of streams the sender wants to create in this association.

Range: **1-2**

System

Default: 2

:rhost= (optional)

Remote host. This parameter specifies the name of the remote host as defined in the IP Host table.

[illegible]

Any string of characters beginning with a letter and comprising up to 60 characters in length.

Valid characters are **a-z, A-Z, 0-9, - (dash), . (period)**

Default: Current value.

:rmax= (optional)

Maximum retransmission timeout. This parameter specifies the maximum value of the calculated retransmission timeout in milliseconds.

Range: 10-1000

Default: No change in current value

System

Default: 800

:rmin= (optional)

Minimum retransmission timeout. This parameter specifies the minimum value of the calculated retransmission timeout in milliseconds.

Range: 10-1000

Default: No change in current value

System

Default: 120

:rmode= (optional)

Retransmission mode. This parameter specifies the retransmission policy used when packet loss is detected.

Range: lin, rfc

lin — The Tekelec Linear Retransmission Policy where each retransmission timeout value is the same as the initial transmission timeout, and only the slow start algorithm is used for congestion control.

rfc—Standard RFC 2960 algorithm in the retransmission delay doubles after each retransmission. The RFC 2960 standard for congestion control is also used.

Default: No change in current value

System

Default: `lin`

:rport= (optional)

Remote port. This parameter specifies the SCTP port number for the remote host.

Range: 1024-65535

Default: Current value.

:rtimes= (optional)

Maximum retransmission retries. This parameter specifies the number of times a data retransmission will occur before closing the association.

Range: 1-12

Default: No change in current value.

System

Default: 10

:rtxtthr= (optional)

Retransmission threshold. This parameter specifies the value of the retransmission threshold to tune the IP Connection Excess Retransmits alarm.

Range: 0-65535

Default: 0

:uaps= (optional)

User adapter parameter set. This parameter specifies the set used by the M3UA or SUA association for various SNM message and notification response options.

Range: 1-10

:ver= (optional)

Version. This parameter specifies the M2PA version supported by the association.

The M2PA version is valid only for associations with the **adapter=m2pa** parameter specified.

Range: d6, rfc

Example

chg-

assoc:aname=a1:lhost=gw105.nc.tekelec.com:lport=1030:rhost=gw100.nc.tekelec.com:rport=1030:open=yes:alw=yes:uaps=10

chg-assoc:aname=m3ua03:rtxtthr=65535

Dependencies

At least one optional parameter must be specified.

The association name (**aname**) must already exist in the IP Socket/Association (IPAPSOCK) table.

An association's connection parameters (**lhost**, **rhost**, **lport**, **rport**) must be unique.

The connection state must be **open=no** to change **lhost**, **rhost**, **lport**, **rport**, **port**, **alhost**, **adapter**, **m2patset**, **istrms**, **ostrms**, **rmode**, **rmin**, **rmax**, **rtimes**, **cwmin**, and **bufsize** parameters.

To specify the **open=yes** parameter, the values must be specified for all parameters that are required to fully specify the connection (**lhost**, **lport**, **rhost**, and **rport**). Specifying the **open=no** parameter requires only the **aname** parameter and at least one other optional parameter.

The value of the **uaps** parameter can be changed for an association if the **open=yes** parameter is specified.

The host name specified by the **lhost** parameter must exist in the IP Host table and must be provisioned as local to this EAGLE 5 ISS.

The hostnames specified in the **lhost** and **alhost** parameters must refer to different IP addresses.

The hostnames specified in the **lhost** and **alhost** parameters must refer to IP addresses on the same IP card.

An association with **adapter=sua** or **m3ua** cannot be specified for an **lhost** on a card running the **iplim** or **iplimi** application. An association with **adapter=m2pa** cannot be specified for an **lhost** on a card running the **ss7ipgw** or **ipgwi** application. An association with **adapter=sua** cannot be specified for an **lhost** on a card running the **ipsig** application.

Before **open=yes** can be specified for an association, the local host must have a signaling link assigned to its associated signaling link port.

An association's **lhost** and **alhost** cannot be assigned to a card's Ethernet interface B.

The adapter layer cannot be changed for an association that is already associated with an Application Server (AS).

Before the local host can be changed, the new local host must have a signaling link assigned to its associated signaling link port.

The **link** parameter values **a**, **b**, **a1-a3**, and **b1-b3** can be specified only if the card is an SSED CM card running the **iplim** or **iplimi** application. The **link** parameter values **a**, **b**, **a1-a7**, and **b1-b7** can be specified only if the card is an E5-ENET card running the **iplim** or **iplimi** application.

The card location for the card associated with the **lhost** and **alhost** must exist in the IP Link table.

The allowed maximum is 1 association per signaling link on IPLIMx cards.

A maximum of 50 connections (association-to-AS assignments) can be specified per local host on IPGWx cards.

A maximum of 4000 connections (association-to-AS assignments + sockets) are allowed per system.

Table 5-6 shows the IP signaling capacities per DCM Class card (SSED CM / E5-ENET).

Table 5-6. IP Signaling Capacities

Appl	Cards Per System	SS7 Links Per Card	IP Connections Per Card Link	Total Connections
IPLIMx	100	8 (SSED CM) 16(E5-ENET)	8 (SSED CM) 16 (E5-ENET)	800 (SSED CM) 1600 (E5-ENET)
IPGWx	64	1	50	3200
IPSG	64	1	50	3200
ENET	100	32	16	1600
System				4000

- Eagle OAM enforces “Cards per System” in the above table on a per Application basis. Engineering rules do not support all IP Signaling Applications provisioned at their max card count simultaneously.
- OAM enforces a maximum of 4000 IP connections per Eagle.

The **rmin** parameter value must be less than or equal to the **rmax** parameter value.

The **cwmin** parameter value must be less than or equal to the **bufsize** parameter value.

To assign an association on an IPLIMx card for a local host, the association must have an adapter parameter value that is the same as the **ipliml2** setting of its assigned signaling link. An association having an adapter value of **m2pa** must be assigned to an IPLIM signaling link having an **ipliml2** value of **m2pa**.

If the **m2patset** parameter is specified, the **adapter=m2pa** parameter must be specified.

The trade ratio states the quantity of associations to sockets that may be provisioned on a certain card, as follows:

Trade Ratio = a:s

Where: a=associations and s=sockets

The requested buffer size increase cannot exceed available buffer space on the card. Use the **rtrv-assoc** command with the **aname**, **lhost**, or **alhost** parameter to display used and total buffer space on the card.

The **ver** parameter can only be specified if the **adapter=m2pa** parameter is specified.

If the **lhost** parameter is specified for an E5-ENET card running the **ipsg** application, then the **link** parameter cannot be specified.

If an IP SG card is being used, and if the association is referenced by a signaling link, then new values cannot be specified for the **lhost** or **adapter** parameters.

An IP SG card can contain a maximum of 32 associations.

If the value specified for the **aname** parameter refers to an M3UA association on an IP SG card, then the **alw** parameter cannot be specified.

The value specified for the **lhost** parameter cannot change the local host for the association from an IPLIMx or IPGWx card to an IP SG card or from an IP SG card to an IPLIMx or IPGWx card.

Notes

The command that is entered cannot exceed a total of 150 characters in length.

The IPAPSOCK table is used to associate the Local Host/Local Port to a Remote Host/Remote Port. This fully specifies the connection.

If the **open=yes** parameter is specified, the association's **lhost** and **lport** configuration must not match that of any open association.

If the card's application is **iplim** or **iplimi**,

- The **adapter** parameter value must equal **m2pa**.
- The **ipliml2** value for the assigned signaling link must equal **m2pa**.

An association with an **adapter** value of **m2pa** cannot be assigned to an SS7IPGW or IPGWI host.

The M2PA version is supported if the application is IPLIMx and the **adapter=m2pa** parameter is specified. When changing the association adapter type to **m2pa** and a version is not specified, the **m2pa=rfc** value is assigned by default.

Output

```
chg-
assoc:aname=a1:lhost=gw105.nc.tekelec.com:lport=1030:rport=1030:u
aps=10:rhost=gw100.nc.tekelec.com:open=yes:alw=yes
    rlgncxa03w 04-01-17 15:35:05 EST EAGLE 31.3.0
    CHG-ASSOC: MASP A - COMPLTD
;
```

chg-atinpqopts

Change ATINP Options

Use this command to provision ATINP-specific data. This command updates the ATINPQOPTS table.

NOTE: The ATINP feature must be enabled before this command can be entered.

Keyword: **chg-atinpqopts**

Related Commands: **rtrv-atinpqopts**

Command Class: Database Administration

Parameters

:atiackimsi= (optional)

ATIACK IMSI parameter for ATI ACK response message. This parameter specifies formatting of IMSI digits in the ATI ACK response message. The result of formatting determines whether the IMSI parameter will be included in the response.

Range: **srfimsi, asd, none**

srfimsi — If an entity was found during lookup and SRFIMSI was provisioned in the entity, then include the IMSI parameter and encode the IMSI digits as the SRFIMSI.

asd — If an entity was found during RTDB lookup and ASD (Additional Subscriber Data) was provisioned in the EPAP entity, then include the IMSI parameter and encode the IMSI digits as ASD.

none — Do not include the IMSI parameter in the response message.

Default: **none**

:atiackmsisdn= (optional)

MSISDN parameter for ATI ACK response message. This parameter specifies the formatting of MSISDN parameter in the ATI ACK response message. The result of formatting determines whether the MSISDN parameter will be included in the response.

Range: **msisdn, asd, asddlmsisdn, none**

msisdn — Include the MSISDN parameter in the ATI ACK response and encode MSISDN digits as the MSISDN from the incoming ATI query.

asd — If an entity was found during RTDB lookup and ASD (Additional Subscriber Data) was provisioned in the entity, then include the MSISDN parameter and encode the MSISDN digits as ASD.

asddlmsisdn — Include the MSISDN parameter in the ATI ACK response and encode MSISDN digits as ASD + delimiter (**atidlm**) + MSISDN. ASD is encoded if an entity is found and ASD is provisioned. The specified outbound message digits delimiter (**atidlm**) value is encoded if the value is not **none**. MSISDN is encoded as the MSISDN from the incoming ATI query.

none — Do not include the MSISDN parameter in the response message.

Default: **msisdn**

:atiackrn= (optional)

Routing number parameter for ATI ACK response message. This parameter specifies the formatting of the routing number parameter in the ATI ACK response message. The result of formatting determines whether the routing number parameter will be included in the response.

Range: **rn, rnsp, asddlmrnsp, rnspdlmasd, srfimsi, srfimsidlm, asddlmsrfimsi, none**

rn — Routing number.

rnsp — Routing number or signaling point.

asddlmrnsp — ASD, delimiter and routing number or signaling point.

Format routing number digits as ASD (if supported and available from lookup entity) + **atidlm** (if not **none**) + entity digits (as described in the **atiackrn=rnsp** parameter).

rnspdlmasd — Routing number or signaling point, delimiter, ASD

Format routing number digits as entity digits (as described in **atiackrn=rnsp**) + delimiter (if **atidlm** is not **none**) + ASD (if supported and available from lookup entity).

srfimsi — Encode routing number digits as SRFIMSI configured in the entity data.

If SRFIMSI was not found (MSISDN not found in RTDB lookup, or MSISDN found but no entity found, or entity found but SRFIMSI not configured) then the routing number will not be included in the response message.

srfimsidlm — SRFIMSI, delimiter, ASD

Encode routing number digits as SRFIMSI + delimiter (if **atidlm** is not **none**) + ASD (if supported and available from lookup entity). SRFIMSI is encoded as described in the **atiackrn=srfimsi** option.

asddlmsrfimsi — ASD, delimiter, SRFIMSI

Encode routing number as ASD (if supported and available from lookup entity) + delimiter (if **atidlm** is not **none**) + SRFIMSI(encoded as specified in the **atiackrn=srfimsi** parameter).

none — Do not include the Routing Number field in the response.

Default: **rn**

:atidfltrn= (optional)

Default Routing Number. This parameter specifies the routing number to be used in outgoing message formats while encoding outgoing digit formats in the ATI ACK response in cases where an RN is not returned from an RTDB lookup.

Range: 1-15 digits, **none**
Valid digits are **0-9, A-F, a-f**.

Default: **none**

:atidlm= (optional)

Outbound message digits delimiter. This delimiter is used in outgoing message formats while encoding outbound digits in the ATI ACK response. This option can be set to **none** at any time by the user.

Range: 1-15 digits, **none**
Valid digits are **0-9, A-F, a-f**.

Default: **none**

:atinptype= (optional)

Number Portability Type. This parameter indicates what is considered to be a successful RTDB lookup.

Range: **any, always**
any — MSISDN lookup is considered successful when any match is found (RN, SP, PublicDN, PrivateDN, match with no entity, or entity type is GRN or VMS and portability type is **none (0xff)**.
always — The lookup is always considered to be successful whether an MSISDN was found or not found in the RTDB.

Default: **any**

:entitylen= (optional)

Entity Length. This parameter indicates the maximum number of digits to be used from entity data (SRFIMSI or entity ID) in the specified encoding format.

Range: **1-15 none**
none - SRFIMSI or entity ID will be used without modification in the specified **atiackrn** parameter format.

Default: **none**

:snai= (optional)

Service NAI. This parameter specifies the number conditioning that is performed on the MSISDN digits in the incoming ATI query message before RTDB lookup is performed.

Range: **intl, nat, nai**
intl — Number conditioning is not performed.
nat — The default country code (defined in the **chg-stpopts** command **defcc** parameter) is pre-pended to the MSISDN before RTDB lookup.
nai — The NAI from the MSISDN in the incoming ATI query is used to perform number conditioning.. If the message NAI is International (0x1) or Network Specific Number (0x3) , then no conditioning is performed. In all other cases, the default country code (defined in the **chg-stpopts** command **defcc** parameter) is pre-pended to the MSISDN before RTDB lookup.

Default: **nai**

Example

The following command specifies that the outbound message delimiter will not be used in outgoing message formats.

chg-atinpqopts:atidlm=none

The following command specifies that the NAI of the incoming MSISDN digits will be considered to be National, and specifies that the IMSI parameter will not be included in the ATI ACK response message.

chg-atinpqopts:snai=nai:atiackimsi=none

The following command specifies that the lookup is always considered to be successful, and specifies that the NAI of the incoming MSISDN digits will be considered to be National.

chg-atinpqopts:atinptype=always:snai=nat

The following command specifies that the Routing Number field will not be included in the response, and that the MSISDN in the ATI ACK response will be encoded as the ASD.

chg-atinpqopts:atiackrn=none:atiackmsisdn=asd

The following command specifies that the Routing Number field will not be included in the response.

chg-atinpqopts:atiackrn=none

Dependencies

At least one optional parameter must be specified.

The ATINP feature must be enabled before this command can be entered.

The EGLEOPTS table is corrupt or cannot be found.

Output

```
chg-atinpqopts:atidlm=none
tekelecstp 08-01-11 11:34:04 EST EAGLE 39.2.0
CHG-ATINPQOPTS: MASP A - COMPLTD
;
```

chg-atm-lps**Change ATM Link Parameter Set**

Use this command to configure a link parameter set with timers and other parameters used by the system to provide level 2 functions for each ATM high-speed signaling link.

Use this command also to copy values from **lpset 20** and **30**, as well as any **lpset** to another. The **action=copy** and **srclpset=x** parameters provide this capability.

Keyword: chg-atm-lps

Related Commands: ent-slk, rtrv-atm-lps

Command Class: Database Administration

Parameters

NOTE: Unless specified, the system default values are meant for both ANSI (T1) and ITU (E1) standards.

:lpset= (mandatory)

The link parameter set being changed. Sets **1** through **19** and **21** through **29** can be configured by the user. Link parameter sets **20** and **30** are not configurable, but are used to contain the recommended default values for a set.

Range: 1-19, 21-29

- Default:** **1** for ANSI
 21 for ITU
- :action=** (optional)
This parameter copies a set of ATM signaling link parameters from one set to another.
Range: **copy**
Default: No change to the current value
- :maxcc=** (optional)
The maximum number of transmissions of BGN, END, ER, or RS PDU.
Range: **1-10**
Default: **4**
- :maxnrp=** (optional)
The maximum number of retransmitted PDUs during proving.
Range: **0-10**
Default: **1** for ANSI
 0 for ITU
- :maxpd=** (optional)
The maximum number of SD PDUs that can be sent before a POLL is sent.
Range: **5-2120**
Default: **500**
- :maxstat=** (optional)
The maximum number of list elements in a STAT PDU.
Range: **3-67**
Default: **67**
- :n1=** (optional)
The number of PDUs sent during proving.
Range: **500-64552**
Default: **64552** for ANSI
 1000 for ITU
- :nblk=** (optional)
The number of monitoring intervals per block.
Range: **1-10**
Default: **3**
- :srclpset=** (optional)
The source **lpset** for a **copy** action. This parameter can be specified only with the **action=copy** parameter.
Range: **1-30**
- :tmrcc=** (optional)
The timer, in milliseconds, used during the connection phase to guard against unacknowledged BGN, END, ER or RS PDUs.
Range: **100-2000**
Default: **200**
- :tmrerm=** (optional)
The error rate monitor interval, in milliseconds.
Range: **25-500**
Default: **100**

:tmridle= (optional)

The timer, in milliseconds, used during the idle phase when no SD PDUs are being sent to limit time in the idle phase.

Range: 25-1000

Default: 100

:tmrkalive= (optional)

The timer, in milliseconds, used during the transient phase when no SD PDUs are being sent to keep connection up.

Range: 25-500

Default: 100

:tmrnocred= (optional)

The timer, in milliseconds, used when the no credit exists and PDUs are available to be sent.

Range: 1000-6000

Default: 1500

:tmrnorsp= (optional)

The timer, in milliseconds, used to check that STAT PDUs are arriving often enough.

Range: 500-2000

Default: 1500

:tmrpoll= (optional)

The timer, in milliseconds, used to guarantee that POLL PDUs are sent often enough.

Range: 25-500

Default: 100

:tmrprov= (optional)

The timer, in milliseconds, used to monitor the status of a link after it is placed into service.

Range: 60000-120000

Default: 60000

:tmrsrec= (optional)

The timer, in milliseconds, used to prohibit closely spaced SSCOP recoveries from occurring.

Range: 60000-10800000

Default: 3600000

:tmrt1= (optional)

The time, in milliseconds, between link release action and the next link reestablish action during alignment.

Range: 1000-15000

Default: 5000

:tmrt2= (optional)

The total time, in milliseconds, that SSCF will attempt alignment.

Range: 15000-180000

Default: 120000 for ANSI
30000 for ITU (E1)

:tmrt3= (optional)

The time, in microseconds, between proving PDUs.

Range: 450-23000

Default: 925

Example

chg-atm-lps:lpset=5:tmrprov=1000:tmridle=55

chg-atm-lps:lpset=3:src:lpset=5:action=copy

Dependencies

The values in link parameter sets **20** and **30** are the system default values. They cannot be changed but can be copied to another link parameter set.

The values of the **lpset** and **src:lpset** parameters cannot be the same.

The **action** and **src:lpset** parameters must be specified together.

If **action=copy** is specified, only the **lpset** and **src:lpset** parameters can be specified.

At least one optional parameter must be specified.

Notes

The **lpset** values **20** and **30** are non-configurable and contain the default values for ANSI and ITU ATM standards respectively. The **lpset** values **1** through **19** and **21** through **29** are configurable and initialized to the default values for ANSI and ITU standards respectively.

If no parameter value for **lpset** is included when the **ent-slk** command is entered, the system default value of **1** is assigned for ANSI links and the system default value of **21** is assigned for ITU links.

All timer values for link parameter sets are initialized to the system default values.

Output

chg-atm-lps:lpset=5:tmrprov=1000:tmridle=55

```
rlghncxa03w 04-01-05 16:40:40 EST EAGLE 31.3.0
CHG-ATM-LPS: MASP A - COMPLTD
;
```

chg-attr-seculog

Change the Security Log Characteristics

Use this command to modify various attributes that affect the operation of the security logging feature. These attributes include:

- Enabling or disabling the raising of alarms when the log needs uploading
- Specifying the log percentage full threshold at which an *upload required* alarm is raised for the active security log.

Keyword: **chg-attr-seculog**

Related Commands: **rtrv-attr-seculog**

Command Class: Security Administration

Parameters

:upldalm= (optional)

Enable or disable log alarms that pertain to uploading of the security log.

Range: **yes, no**

yes—Enables the log alarms pertaining to uploading of the log, as follows:

- Upload required
- Log overflowed
- Standby log contains greater than 0 un-uploaded entries

no—Prevents the log alarms from being raised when these conditions occur. Should the alarm already be raised when **no** is specified, the alarm is lowered.

Default: No change to the current value

:upslg= (optional)

Percent full threshold. This parameter specifies the percent full threshold for the security logs. If the **upldalm=yes** parameter is configured, an alarm is raised for the security log when the *%full* field (as displayed using the **rept-stat-seculog** command) in the log, on the active OAM, reaches or exceeds the value specified for **upslg**. This alarm indicates that the administrator must upload the log.

Range: 1-99

Default: No change to the current value

Example

```
chg-attr-seculog:upslg=80:upldalm=yes
```

Dependencies

At least one optional parameter must be specified.

Notes

None

Output

```
chg-attr-seculog:upslg=80:upldalm=yes
```

```
rlghncxa03w 04-01-05 16:40:40 EST EAGLE 31.3.0
CHG-ATTR-SECULOG: MASP B - COMPLTD
```

```
;
```

chg-clkopts

Change Clock Options

Use this command to perform a software update of the clock elements and settings.

Keyword: **chg-clkopts**

Related Commands: **rtrv-clkopts**

Command Class: Database Administration

Parameters

:clock= (mandatory)

This parameter specifies the clock that is to be updated.

Range: **primary, secondary, all**

primary — The primary clock

secondary — The secondary clock

all — All clocks

E5-TDM cards must be installed before a value of **primary** or **secondary** can be specified.

:force= (optional)

The **force=yes** parameter is used to change the **hsclksrc** parameter value when the TDMs are reporting that the high speed system clocks are currently valid.

Range: **yes**

:hsckll= (optional)

High speed master clock line length.

Range: **longhaul, shorthaul**

longhaul — Gain is high for long haul

shorthaul — Gain is low for short haul

Default: No change to the current value

System**Default:** **longhaul****:hsclksrc=** (optional)

High speed master clock source. The **force=yes** parameter must be specified with this parameter to change the clock source when the TDMs are reporting that the high speed system clocks are currently valid.



CAUTION: Changing the high speed master clock source can result in clock outage and loss of traffic on all links, if the new source type does not match the provisioned source for the E1 or T1 cards (what is actually plugged into the backplane).

Range: **rs422, e1framed, e1unframed, t1framed, t1unframed****rs422** — RS-422 clock source**e1framed** — E1 Framed clock source**e1unframed** — E1 Unframed clock source**t1framed** — T1 Framed clock source**t1unframed** — T1 Unframed clock source**Default:** No change to the current value**System****Default:** **rs422****Example****chg-clkopts:clock=primary:hsclksrc=t1framed****chg-clkopts:clock=all:hsclksrc=rs422:force=yes****chg-clkopts:hsclkll=shorthaul:clock=secondary****Dependencies**

The STPOPTS table is corrupt or cannot be found.

The parameters entered are not compatible with the card where the clock resides.


If the **hsclksrc** and **clock=all** parameters are specified, and the high speed clocks are reporting, then the **force=yes** parameter must be specified.

The **hsclksrc=rs422** parameter must be specified. The **hsclksrc** parameter values **t1unframed**, **t1framed**, **e1unframed**, and **e1framed** cannot be specified if either TDM is a version that does not support the Global Timing Interface feature (both TDMs must be TDM-15 or later (including E5-TDM), with the Global Timing Interface loaded). The **hsclkll** parameter cannot be specified if either TDM is a version that does not support the Global Timing Interface feature (both TDMs must be TDM-15 or later (including E5-TDM), with the Global Timing Interface loaded).

Notes***Eagle Clocks with TDM-GTI***

Figure 5-1 shows a general schematic of clocking, without any of the redundant backup features, in the EAGLE 5 ISS with the TDM-GTI card. Low and high speed reference clocks can be plugged into the control shelf backplane as input clocks. The TDM card uses these input clocks as timing references to generate the low and high speed clocks that are distributed to the cards in the EAGLE 5 ISS STP. These distributed clocks are used for various purposes depending on what types of links or features are provisioned.

Figure 5-1. Eagle Input and Internal Clocks with TDM-GTI

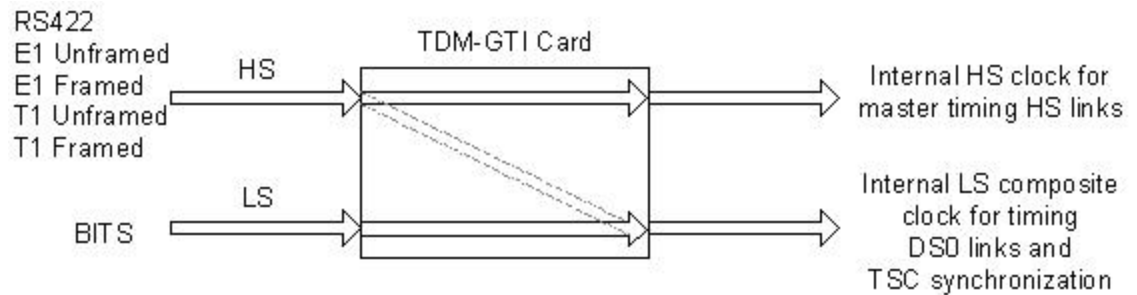

The high speed clock that is distributed to the cards in the EAGLE 5 ISS is used as the timing source only for high speed links that have been provisioned to use master timing. This clock can be derived only from the high speed input clock. Prior to TDM-GTI card, the high speed input clock could be only the RS422 type. The TDM-GTI card allows the clock to be recovered from a framed or unframed E1 or T1 signal interface.

The low speed composite clock that is distributed to the cards in the EAGLE 5 ISS is used for timing DS0 links and for the Time Slot Counter Synchronization (TSCSYNC) feature that is required for the Sentinel and IMF products. Prior to TDM-GTI this low speed clock could be generated only from a BITS clock source plugged into the control shelf backplane. TDM-GTI can generate this low speed internal clock from the high speed input clock source, with the following restriction:

- When DS0 cards are provisioned in the system, the internal low speed clock can be generated only from a BITS clock as it is without TDM-GTI.
- When no DS0 cards are present and the BITS clocks are present and valid, the internal low speed clock is generated from the BITS clocks.
- When no DS0 cards are present and the BITS clocks are not present or not valid, the internal low speed clock is generated from the high speed input clock.

Output

chg-clkopts:clock=primary:hscclksrc=t1framed

e5oam 09-01-01 17:25:22 MST EAGLE 5 ISS 40.1.0

CHG-CLKOPTS: MASP B - COMPLTD

;

chg-cmd

Change Command Attributes

Use this command to change the attributes of a command.

Keyword: chg-cmd

Related Commands: `rtrv-cmd`

Command Class: Security Administration

Parameters

:cmd= (mandatory)

The command whose attributes are to be changed.

Range: zzzzzzzzzzzzzzzzzzzzzzzzzzzzzzz

One alphabetic character followed by up to 19 additional alphanumeric characters.

:class1= (optional)

Configurable command class name (*ayy*), and indicator (**-yes** or **-no**) to specify whether the command class is allowed.

Range: *ayy*

Specify the parameter value in the format *ayy* **-no** or *ayy* **-yes**.

ayy—Configurable command class name of 1 alphabetic character followed by 2 alphanumeric characters

-no—Indicates that the command class is not allowed.

-yes—Indicates that the command class is allowed.

Default: No change to current value

:class2= (optional)

Configurable command class name (*ayy*), and indicator (**-yes** or **-no**) to specify whether the command class is allowed.

Range: *ayy*

Specify the parameter value in the format *ayy* **-no** or *ayy* **-yes**.

ayy—Configurable command class name of 1 alphabetic character followed by 2 alphanumeric characters

-no—Indicates that the command class is not allowed.

-yes—Indicates that the command class is allowed.

:class3= (optional)

Configurable command class name (*ayy*), and indicator (**-yes** or **-no**) to specify whether the command class is allowed

Range: *ayy*

Specify the parameter value in the format *ayy* **-no** or *ayy* **-yes**.

ayy—Configurable command class name of 1 alphabetic character followed by 2 alphanumeric characters

-no—Indicates that the command class is not allowed.

-yes—Indicates that the command class is allowed.

:class4= (optional)

Configurable command class name (*ayy*), and indicator (**-yes** or **-no**) to specify whether the command class is allowed

Range: *ayy*

Specify the parameter value in the format *ayy* **-no** or *ayy* **-yes**.

ayy—Configurable command class name of 1 alphabetic character followed by 2 alphanumeric characters

-no—Indicates that the command class is not allowed.

-yes—Indicates that the command class is allowed.

:class5= (optional)

Configurable command class name (*ayy*), and indicator (**-yes** or **-no**) to specify whether the command class is allowed.

Range: *ayy*

Specify the parameter value in the format *ayy* **-no** or *ayy* **-yes**.

ayy—Configurable command class name of 1 alphabetic character followed by 2 alphanumeric characters

-no—Indicates that the command class is not allowed.

-yes—Indicates that the command class is allowed.

:class6= (optional)

Configurable command class name (*ayy*), and indicator (**-yes** or **-no**) to specify whether the command class is allowed.

Range: *ayy*

Specify the parameter value in the format *ayy* **-no** or *ayy* **-yes**.

ayy—Configurable command class name of 1 alphabetic character followed by 2 alphanumeric characters

-no—Indicates that the command class is not allowed.

-yes—Indicates that the command class is allowed.

:class7= (optional)

Configurable command class name (*ayy*), and indicator (**-yes** or **-no**) to specify whether the command class is allowed.

Range: *ayy*

Specify the parameter value in the format *ayy* **-no** or *ayy* **-yes**.

ayy—Configurable command class name of 1 alphabetic character followed by 2 alphanumeric characters

-no—Indicates that the command class is not allowed.

-yes—Indicates that the command class is allowed.

:class8= (optional)

Configurable command class name (*ayy*), and indicator (**-yes** or **-no**) to specify whether the command class is allowed

Range: *ayy*

Specify the parameter value in the format *ayy* **-no** or *ayy* **-yes**.

ayy—Configurable command class name of 1 alphabetic character followed by 2 alphanumeric characters

-no—Indicates that the command class is not allowed.

-yes—Indicates that the command class is allowed.

Example

chg-cmd:cmd=ent-rte:class1=u11=yes

chg-cmd:cmd=rept-stat-slk:class7=dab=no

Dependencies

At least one optional parameter must be specified.

The Command Class Management feature must be enabled before this command can be entered.

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before a command from the LNPBAS class can be specified.

The **cmd** parameter value must be a valid system command.

The **class1** - **class8** parameter values must be valid default or provisioned configurable command class names.

The **login** command is available to all users and therefore cannot be assigned to a configurable class. If the **login** command is used as a parameter, it will be rejected.

- IDP Screening for Prepaid
- Prepaid IDP Query Relay
- TIF Number Portability
- V-Flex

NOTE: If the TINP feature was enabled before upgrading to Release 39.2, then the TIF Number Portability value can be used to access functionality for the TINP feature. If TINP was not enabled prior to upgrade, then the TIF Number Portability value accesses functionality for only the TIF Number Portability feature.

:list= (optional)

This parameter specifies the name of the Common Screening List that is associated with the feature.

NOTE: The list parameter must be specified when the feature uses more than one type of Common Screening List.

Range: **gt, skbcsm, ccnc, skts, insl, acscode, esccode, npflgrst, vmpfx**

gt— Global Title List

skbcsm— SK+BCSM List

ccnc— CC+NC List

skts— SK+TS List

insl— In Network Subscriber List

acscode— Access Code List

esccode— Escape Code List

npflgrst— NP Flag Reset List

vmpfx— Voice Mail Prefix List

The following screening lists are valid for the indicated features:

- **skts, insl**—IDP Screening for Prepaid
- **ccnc, gt, skbcsm**—Prepaid IDP Query Relay
- **npflgrst**—TIF Number Portability
- **acscode, esccode, npflgrst**—TINP
- **vmpfx**—V-Flex

:p1= (optional)

Parameter value 1. The parameter value is specific to the feature and list name that use this parameter.

:p2= (optional)

Parameter 2. The parameter value is specific to the feature and list name that use this parameter. No feature currently uses this parameter.

:p3= (optional)

Parameter 3. The parameter value is specific to the feature and list name that use this parameter. No feature currently uses this parameter.

:pc= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: **pca**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001–005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006–255**.

The point code **000-000-000** is not a valid point code.

:pc/pca/pci/pcn/pcn24= (optional)

Point code. Either the **ds** parameter or a point code parameter must be specified.

:pci= (optional)

ITU international point code with subfields *zone-area-id*.

Range: **0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

The point code **0-000-0** is not a valid point code.

zone—**0–7**

area—**000–255**

id—**0-7**

:pcn= (optional)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfnti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:pcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000–255**

ssa—**000–255**

sp—**000–255**

:pn= (optional)

Part Number. The 9-digit "893xxxxxx" part number of the feature for which the command is entered. The **rtv-ctrl-feat** command description shows the part number in the command output example.

NOTE: Either the **pn** parameter or the **feature** parameter must be specified to identify the feature.

Range: 893000000-893999999

The first 3 digits are **893**. Do not separate the digits with dashes or spaces. The following part numbers are valid for this command:

- 893015501—IDP Screening for Prepaid
- 893016001—Prepaid IDP Query Relay
- 893018901—TIF Number Portability
- 893016701—V-Flex

NOTE: If the TINP feature was enabled before upgrading to Release 39.2, then part number 893018901 can be used to access functionality for the TINP feature. If TINP was not enabled prior to upgrade, then part number 893018901 accesses functionality for only the TIF Number Portability feature.

Example

```
chg-csl:feature="IDP Screening for
Prepaid":list=insl:ds=123456789bcdEF
chg-csl:pn=893018901:list=esccode:ds=23ffac
chg-csl:pn=893018901:list=npflgrst:pca=1-1-1
chg-csl:feature="VFLEX":list=vmpfx:ds=123456789abcdEF
chg-csl:feature="TIF Number Portability"list=npflgrst:pci=1-253-3
```

Dependencies

An enabled feature must be specified using either a valid part number (**pn**) or feature name (**feature**). The specified feature must use a Common Screening List.

The feature that is specified by the **feature** parameter must already be enabled.

The **list** parameter must be specified for features that use more than one type of screening list.

The value specified for the **list** parameter must be valid for the specified screening feature. The following **list** parameter values are valid for the indicated feature:

- **insl, skts**—IDP Screening for Prepaid
- **gt, ccnc, skbcm**—Prepaid IDP Query Relay
- **npflgrst**—TIF Number Portability
- **acscode, esccode, npflgrst**—TINP
- **vmpfx**—V-Flex feature

The specified screening list entry must exist in the screening list that is used by the feature.

The length of the digit string that is specified for the **ds** parameter must be valid for the screening feature and list type.

A valid **ds** parameter value is required for the specified feature and list type.

The following parameters are allowed with the indicated common screening list type:

- **list=gt—ds** parameter
- **list=ccnc—ds** parameter

- **list=skbcsm**—**ds** parameter
- **list=skts**—**ds** parameter
- **list=insl**—**ds** parameter
- **list=acscode**—**ds** and **p1** parameters
- **list=esccode**—**ds** parameter
- **list=vmpfx**—**ds** parameter
- **list=npflgrst**—**pc/pca/pci/pcn/pcn24** parameter

The leading digit pattern of the value specified for the **ds** parameter must be unique in the specified screening list for the indicated feature.

The **chg-tinpopts:iamact=release** command must be entered before the **p1=1** or the **p1=release** parameter and the **list=acscode** parameter can be specified.

The **pc** and **ds** parameters cannot be specified together in the command.

The value specified for the **feature** parameter must be valid feature name for a feature that uses a Common Screening List. The feature name must be specified as it appears in the **rtrv-ctrl-feat** command output. Enough of the name must be specified to make the name unique when two features begin with the same word or acronym.

Notes

None

Output

```
chg-csl:feature="IDP Screening for
Prepaid":list=insl:ds=123456789bcdEF
tekelecstp 05-08-21 15:18:41 EST EAGLE 34.3.0
INSL List table is (5 of 25) 20% full
CHG-CSL: MASP A - COMPLTD
;
chg-csl:pn=893016701:list=vmpfx:ds=123456789abcdEF
tekelecstp 08-05-22 14:31:53 EST EAGLE 39.0.0
VM Prefix List table is (1 of 100) 1% full
CHG-CSL: MASP A - COMPLTD
;
```

chg-ctrl-feat

Change Controlled Feature

Use this command for controlled features that have been purchased and enabled with the **enable-ctrl-feat** command to:

- Turn on or turn off On/Off features
- Turn on Permanently On features (they cannot be turned off after they have been turned on)

Use this command when the system station shows an expired temporary key and the administrator wants to clear the CRITICAL system alarm without purchasing a permanent Feature Access Key.

Keyword: **chg-ctrl-feat**

Related Commands: **enable-ctrl-feat**, **rtrv-ctrl-feat**

Command Class: Database Administration

Parameters

:partnum= (mandatory)

Part number. This parameter specifies the part number for the feature.

Range: **893000000 - 893999999**

Do not include dashes in the 9-digit number.

:alarm= (optional)

Clears alarms when temporary feature keys have expired.

Range: **clear**

:status= (optional)

Changes the operational status of the feature.

Range: **on, off**

Default: No change in current status

Example

chg-ctrl-feat:partnum=893xxxxxx:status=on

chg-ctrl-feat:partnum=893xxxxxx:alarm=clear

Dependencies

The controlled feature specified by the **partnum** parameter must be enabled (see the **enable-ctrl-feat** command) before this command can be entered.

One of the optional parameters, but not both, must be specified in the command.

To use this command to turn off a feature, the Part Number specified in the command must be for one of the following On/Off features that is currently on. (A Permanently On feature is turned on with this command; after the feature has been turned on, it cannot be turned off with this command):

- 893006601 LNP Short Message Service (LNP SMS)
- 893006701 Prepaid SMS Intercept Phase 1 (PPSMS)
- 893006901 Intermediate GTT Load Sharing (IGTTLS)
- 893015401 Flexible GTT Load Sharing (FGTTLS)
- 893007001 MNP Circular Route Prevention
- 893005801 Command Class Management
- 893005701 IP User Interface (Telnet)
- 893009101 Network Security Enhancement
- 893009301 Portability Check for Mobile Originated SMS
- 893400001 EAGLE OA&M IP Security
- 893013501 MTP Map Screening
- 893018401 Large BICC MSU Support for IP Signaling
- 893017601 Circ Route Auto-Recovery
- 893018101 Enhanced Far-End Loopback
- 893018801 SEAS over IP
- 893018001 1100 TPS/DSM for ITU NP
- 893022101 ATI Number Portability Query (ATINP)

- 893026201 MO SMS IS41-to-GSM Migration
- 893025701 IDPR ASD
- 893025601 IDPR GRN
- 893024501 TIF ASD
- 893025501 TIF GRN
- 893026701 MO SMS ASD
- 893026601 MO SMS GRN
- 893027401 GTT Load Sharing with Alternate Routing Indicator (GTT LS ARI)
- 893024601 MO SMS B-Party Routing

Turning on a feature that is already on or turning off a feature that is already off has no effect.

Before the LNP ELAP Configuration feature can be turned on, all cards that are running the **sccp** application must be deleted.

The GTT feature must be turned on (see the **chg-feat** command) before the following features can be turned on:

- Intermediate Global Title Translation Load-Sharing (IGTTLS)
- LNP ELAP Configuration
- SCCP Loop Detection

All IPSM cards in the system must be inhibited before the IP User Interface (Telnet) feature can be turned on or off.

All IPSM cards in the system must be inhibited before the EAGLE OA&M IP Security Enhancements feature can be turned on or off.

The **mtplprst** option must be enabled (see the **chg-stpopts** command) before the Origin-based MTP Routing feature can be turned on.

Before the Intermediate Global Title Translation Load Sharing (IGTTLS) feature can be turned on, each SCCP card in the system must have at least a 586 processor.

Only one of the optional parameters, not both, can be specified in the command.

After a Permanently On feature is turned on, it cannot be turned off with this command. All controlled features with quantity feature access keys (like LNP ported TNs) and the following features are Permanently On features:

- 15 Minute Measurements
- Advanced GTT Modification (AMGTT)
- Advanced GTT Modification Called Party Only (AMGTT CdPA Only)
- Advanced GTT Modification Calling Party Upgrade (AMGTT CgPA Upgrade)
- ANSI-41 INP Query
- ANSI-41 Mobile Number Portability (A-Port)
- ANSI-ITU-China SCCP Conversion
- E5-SM4G Throughput Capacity
- Enhanced GSM MAP Screening (EGMS)

- Equipment Identity Register (EIR)
- G-Flex MAP Layer Routing
- G-Port SRI Query for Prepaid
- GSM Flexible Numbering (G-Flex)
- GSM MAP Screening (GMS)
- GSM MAP SRI Redirect for Serving HLR
- GSM Mobile Number Portability (G-Port)
- Hex Digit Support for GTT
- IDP Screening for Prepaid
- INP
- IS41 GSM Migration (IGM)
- ISUP NP with EPAP
- ITUN-ANSI SMS Conversion
- LNP ELAP Configuration
- MO-based GSM SMS NP
- MO-based IS41 SMS NP
- MT-Based GSM SMS NP
- MT-Based GSM MMS NP
- MT-Based IS41 SMS NP
- MTP Msgs for Prepaid Apps (MTPR)
- Multiple Linkset to a Single Adjacent Point Code
- Origin-Based MTP Routing
- Origin-based SCCP Routing
- Prepaid IDP Query Relay
- SCCP Loop Detection
- Spare Point Code Support
- Transaction-based GTT Loadsharing (TBGTTLS)
- Triggerless ISUP Number Portability (TINP)
- ITU TCAP LRN Query (LRNQT)
- Voice Mail Router (V-Flex)
- SLS Bit Rotation by Incoming Linkset (ISLSBR)
- TIF Number Portability
- TIF SCS Forwarding
- TIF Simple Number Substitution
- Weighted GTT Loadsharing (WGTTLS)

The **partnum** parameter value must be 9 digits, without any dashes or spaces. The first three digits are **893**. The next six digits can be **0-9**.

Before the 15 Minute Measurements feature can be turned on,

1. The Measurements Platform feature must be turned on (see the **chg-feat** command).
2. The Measurements Platform Enabled option must be enabled (see the **chg-measopts** command).

Before the 15 Minute Measurements feature can be turned on, at least one MCPM card must be in the IS-NR state in the system.

The 15 Minute Measurements feature cannot be turned on when 30 minute measurements collection is in progress.

The Global Title Translation (GTT) feature must be turned on (using the **gtt=on** parameter for the **chg-feat** command) before the Intelligent Network Application Part (INAP) Number-based Portability (INP) feature or the ANSI-41 INP Query (AINPQ) feature can be turned on.

Each provisioned Service Module card must have at least 4G memory before the AINPQ feature can be turned on.

The A-Port, G-Port, or IGM feature must be turned on before the MNP Circular Route Prevention feature can be turned on.

The G-Port feature requires Service Module cards running the **vsccp** application.

The GTT feature must be turned on before the G-Port feature can be turned on.

The SEAS Over IP feature must be enabled before it can be turned on.

The SEASCLI must be provisioned (see the **chg-seas-config** command) before the SEAS Over IP feature can be turned on.

At least one SEAS terminal must be configured (see the **chg-trm** command) before the SEAS Over IP feature can be turned on.

The IP address of at least one E5-IPSM card associated with a SEAS terminal must be configured before the SEAS Over IP feature can be turned on.

The IP User Interface feature must be turned on before the SEAS Over IP feature can be turned on.

The **login** and **hname** parameters must be provisioned (see the **chg-seas-config** command) before the SEAS Over IP feature can be turned on.

If the SEAS Over IP feature is turned on, then the IP User Interface feature cannot be turned off.

All card locations that correspond to SEAS terminals must be provisioned with E5-IPSM cards before the SEAS Over IP feature can be turned on.

The A-Port feature must be turned on before the MT-Based IS41 SMS NP feature can be turned on.

The G-Port feature must be turned on before the MT-Based GSM SMS NP feature can be turned on.

The **defcc** system option (see the **chg-stpropts** command) must be provisioned before the MT-Based GSM SMS NP feature or the MT-Based IS41 SMS NP feature can be turned on.

The **defmcc** GSM option (see the **chg-gsmopts** command) must be provisioned before the MT-Based GSM SMS NP feature can be turned on.

The MT-Based GSM SMS NP feature must be turned on before the MT-Based GSM MMS NP feature can be turned on.

The IDPRCDPN NPP service must be provisioned before the Prepaid IDP Query Relay feature can be turned on.

The **defcc** system option (see the **chg-stpropts** command) must be provisioned before the ATINP feature can be turned on.

The **defcc** and **defndc** system options (see the **chg-stpropts** command) must be provisioned before the V-Flex feature can be turned on.

The EIR (Equipment Identity Register) feature cannot be turned on if the INP or AINPQ feature is turned on. The INP or AINPQ feature cannot be turned on if the EIR feature is turned on.

The Prepaid IDP Query Relay feature must be turned on before the IDPR ASD or IDPR GRN feature can be turned on.

The **matchseq=dn** parameter must be specified (see the **chg-tifopts** command) before the TIF GRN feature can be turned on.

The **matchseq=dn** parameter must be specified (see the **chg-tifopts** command) before the TIF ASD feature can be turned on.

The GTT LS ARI feature must be turned off before the IGTTLS feature can be turned off.

Notes

All terminals that are configured as SEAS are automatically allowed or inhibited when the SEAS Over IP feature is turned on or off, respectively.

Output

```

chg-ctrl-feat:partnum=893xxxxxx:status=on
tekelecstp 06-07-26 14:47:49 EST EAGLE 36.0.0
chg-ctrl-feat:partnum=893xxxxxx:status=on
Command entered at terminal #4.
CHG-CTRL-FEAT: MASP A - COMPLTD
;
chg-ctrl-feat:partnum=893xxxxxx:alarm=clear
tekelecstp 06-07-26 14:47:49 EST EAGLE 36.0.0
chg-ctrl-feat:partnum=893xxxxxx:alarm=clear
Command entered at terminal #4.
CHG-CTRL-FEAT: MASP A - COMPLTD
;
tekelecstp 06-07-26 14:47:49 EST EAGLE 36.0.0
0367.0181 * SYSTEM Temp Key(s) expiration alarm cleared.
;

```

The following example displays the output that results when the 1100 TPS/DSM for ITU NP feature is on, and the **chg-ctrl-feat** command is re-entered within 30 seconds for confirmation.

```

chg-ctrl-feat:partnum=893018001:status=on
tekelecstp 06-07-26 14:47:49 EST EAGLE 36.0.0
chg-ctrl-feat :partnum=893018001:status=on
Command entered at terminal #4.
CAUTION: Rated TPS for this feature supports an engineered GTT
traffic mix of no more than 70 percent EPAP-based traffic.
Re-enter the command within 30 seconds to confirm change.
CHG-CTRL-FEAT: MASP A - Command Aborted

```

Command is re-entered within 30 seconds

```

chg-ctrl-feat :partnum=893018001:status=on

```

```

tekelecstp 06-07-26 14:47:58 EST EAGLE 36.0.0
chg-ctrl-feat :partnum=893018001:status=on
Command entered at terminal #4.
CHG-CTRL-FEAT: MASP A - COMPLTD

```

The following example displays the output that results when the 1100 TPS/DSM for ITU NP feature is on, and the **chg-ctrl-feat** command is not re-entered within 30 seconds.

```

chg-ctrl-feat:partnum=893018001:status=on
tekelecstp 06-07-26 14:47:49 EST EAGLE 36.0.0
chg-ctrl-feat :partnum=893018001:status=on
Command entered at terminal #4.
CAUTION: Rated TPS for this feature supports an engineered GTT
traffic mix of no more than 70 percent EPAP-based traffic.
Re-enter the command within 30 seconds to confirm change.
CHG-CTRL-FEAT: MASP A - Command Aborted

```

Command is not re-entered within 30 seconds.
CHG-CTRL-FEAT command aborted due to confirmation timeout.

The following example displays the output that results when the 1100 TPS/DSM for ITU NP feature is not on, and the **chg-ctrl-feat** command is re-entered within 30 seconds for confirmation.

```

chg-ctrl-feat:partnum=893018001:status=off
tekelecstp 06-07-26 14:47:49 EST EAGLE 36.0.0
chg-ctrl-feat :partnum=893018001:status=off
Command entered at terminal #4.
CAUTION: This command decreases the total TPS of the
SCCP system from 1100 to 850 TPS for each DSM.
Re-enter the command within 30 seconds to confirm.
CHG-CTRL-FEAT: MASP A - Command Aborted

```

Command is re-entered within 30 seconds

```
chg-ctrl-feat :partnum=893018001:status=off

tekelecstp 06-07-26 14:47:58 EST EAGLE 36.0.0
chg-ctrl-feat :partnum=893018001:status=off
Command entered at terminal #4.
CHG-CTRL-FEAT: MASP A - COMPLTD
```

chg-db

Change Database

Use this command to manipulate elements of the database.



CAUTION: When this command is entered, all other database operations are locked out while the command executes.



CAUTION: The cards that run both the active and standby OAM reboot whenever the restore operation completes successfully. When a database is repaired successfully, the card with the standby OAM reboots. This action purges old database data from memory and reloads the MASPs with the new data. When the card with the active OAM reboots, all terminals reinitialize, automatically logging off all users. Depending on the new database, the terminals may be initialized to a different configuration, and user IDs and passwords may change.

Keyword: chg-db

Related Commands: copy-meas, rept-stat-db

Command Class: System Maintenance

Parameters

NOTE: The removable cartridge is used with legacy MDAL cards. The removable drive and credit card drive are used with E5-MCAP cards.

:action= (mandatory)

The database management action.

Range: backup, repair, restore

backup— Copies the database from the current data partitions to the backup partitions on both fixed disks, the backup partition on the removable cartridge, the removable drive or credit card drive, or to a compressed tar file on a remote FTP server. If the destination is the server a database file with the following naming convention will be created: 'CLLI string' - 'Release number string' - 'yymmddhh'.tar.gz (tekelecstp-37.5.0-08012212.tar.gz)

repair— Copies the current and backup databases from the active to the standby fixed disk.

restore— Copies the backup partitions to the current data partitions on both fixed disks, or copies the database from the removable cartridge or drive, credit card drive, or the remote FTP server to the current partitions on both fixed disks.



CAUTION: The action=restore parameter initiates an emergency recovery procedure and requires the init-sys command to download the restored database to all the cards in the system.

:dest= (optional)

Destination. This parameter specifies the destination disk for the database backup.

Range: remove, fixed, server, usb

remove— Back up the database to a removable cartridge or drive

fixed— Back up the database to a fixed disk

server— Back up the database to a remote server

usb — Back up the database to a credit card drive

Default: **fixed**

:file= (optional)
 This parameter specifies the name of the TAR file on the remote server that contains the database to be restored to the system.
 The **src=server** parameter must be specified before this parameter can be specified.

Range: `yyyyyyyyyyyyyyyyyyyyyyyyyyyyyyyyyyyyyyyyyyyyyyyyyyyyyyyy`
 Up to 45 alphanumeric characters

:src= (optional)
 Source. This parameter specifies the source used to restore the database.

Range: **remove, fixed, server, usb**
remove — Restore the database from a removable cartridge or drive
fixed — Restore the database from the fixed disk
server — Restore the database from a remote server
usb — Restore the database from a credit card drive

Default: **fixed**

Example

```
chg-db:action=backup:dest=server
chg-db:action=backup:dest=remove
chg-db:action=restore:src=fixed
chg-db:action=restore:src=remove
chg-db:action=repair
chg-
db:action=restore:src=server:file="CLLI-37.5.0-08012212.tar.gz"
```

Dependencies


The **chg-db** command cannot be entered while the system is in upgrade mode.

When a removable disk is involved in the operation, the removable disk must meet the following criteria:

- Be accessible and ready in the drive.
- Be formatted as a system removable disk, not a measurement removable disk.

The **dest** parameter can be specified only when **action=backup**. If the **dest=fixed** parameter is specified, or the **dest** parameter is not specified, the database on the current partition of the fixed disk is copied to the backup partition of the fixed disk. This action is shown in Figure 5-2.


Figure 5-2. The **chg-db:action=backup:dest=fixed** Command

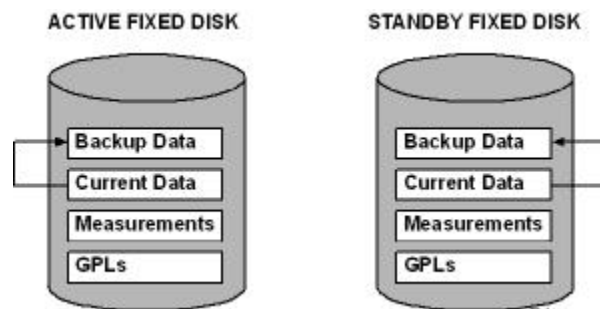

The current database partition of both fixed disks must be free of integrity violations (for example, incoherency, inconsistency, and data corruption) when **action=backup** is specified.

The **src** parameter can be used only when **action=restore**. To restore the database, if the **src=fixed** parameter is specified or the **src** parameter is not specified, the backup partition of each fixed disk is copied to the current partition of the fixed disk. This action is shown in Figure 5-3.

Figure 5-3. The **chg-db:action=restore:src=fixed** Command

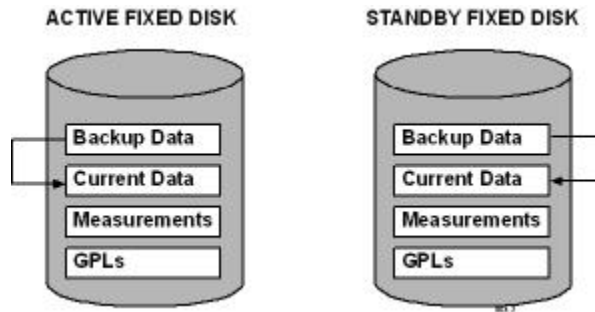

The backup database partition of both fixed disks must be coherent when **chg-db:action=restore:src=fixed** is specified.

The database on the removable cartridge or drive must be coherent when **action=restore:src=remove** is specified.

The current and backup database partitions of the active fixed disk must be free of integrity violations (for example, incoherency and data corruption) when **action=repair** is specified.

When the **action=repair/restore/repair** parameter is specified, the database(s) serving as the source of data for the operation must be free of integrity violations (for example, incoherency and data corruption).

All databases involved in the operation must contain a valid database version information.

The **action=restore** parameter and the **src=server** parameter must be specified before the **file** parameter can be specified. If the **src=server** parameter is specified, then the **file** parameter must be specified.

The DB application server must be provisioned (see the **ent-ftp-serv** command) before the **chg-db:action=backup:dest=server** or **chg-db:action=restore:src=server** command can be entered.

An E5-IPSM card must be provisioned before the **chg-db:action=restore:src=server** or **chg-db:action=backup:dest=server** commands can be entered.

The standby MASP must be in the Active state before the **chg-db** command can be entered.

An E5-MCAP card must be installed before the **src=usb** parameter can be specified.

An E5-MCAP card must be installed before the **dest=usb** parameter can be specified.

If the **src=usb** or **dest=usb** parameter is specified, then a credit card drive must be inserted into the Active OAM flush-mounted USB port.

If the **action=restore** and **src=remove** parameters are specified, and an E5-MCAP card is installed, then the active and standby removable drives must be installed in the latched USB port, coherent, and at the same database level.

The value specified for the **file** parameter must have the correct extension.

Notes

When the **chg-db** command is entered with the **action=backup** parameter, the following message appears when an audit is in progress:


Command In Progress: waiting for database audit to complete

The command executes when the audit is finished.

For **chg-db** command activities using the **backup**, **restore** and **repair** parameter values, the performance time varies depending on the number of records allocated for the database, system activity, and system setup. These operations should typically take no longer than 30 minutes. If one of these operations exceeds one hour, contact Tekelec Technical Services for assistance at (888) FOR-TKLC.


If the **dest=remove** parameter is specified on the GPSM-II card, the database on the current partition of the active fixed disk is copied to the removable cartridge in the MDAL. This action is shown in Figure 5-4.

Figure 5-4. The **chg-db:action=backup:dest=remove** Command

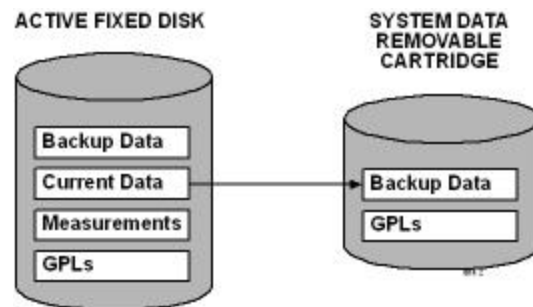


If the **action=repair** parameter is specified, the current and backup database partitions are copied from the active fixed disk to the standby fixed disk. This action is shown in Figure 5-5.

Figure 5-5. The **chg-db:action=repair** Command

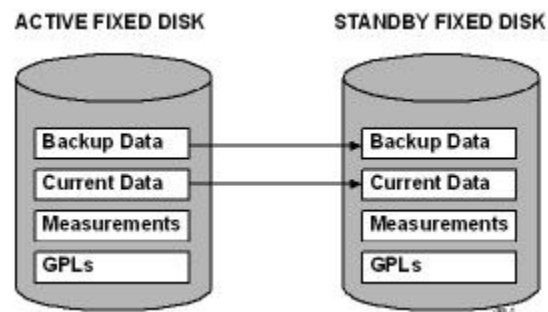

If the **src=remove** parameter is specified on the GPSM-II card, the database on the removable cartridge is copied to the current partitions on both the active and standby fixed disks. This action is shown in Figure 5-6.

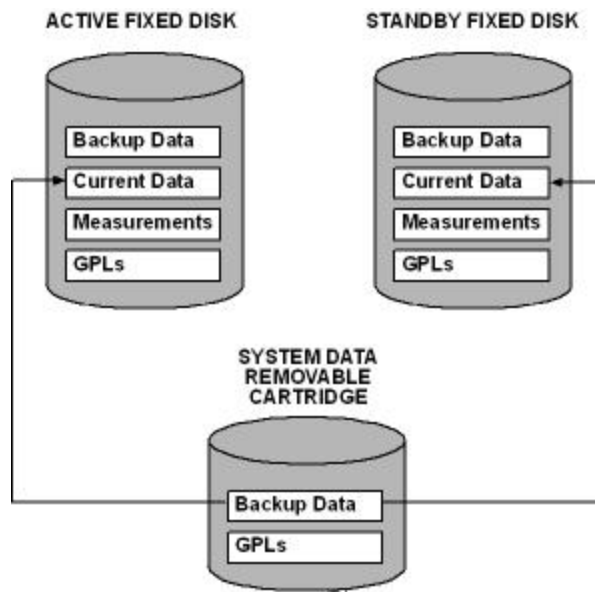
Figure 5-6. The **chg-db:action=restore:src=remove** Command

If the **src=remove** parameter is specified for an E5-MCAP card, the database on both removable drives (in each latched USB slot) is copied to the current partitions on each associated fixed disk. If the **dest=remove** parameter is specified for an E5-MCAP card, the database on the current partition of each fixed disk is copied to the removable drive in both latched USB slots. If only the active OAM has a removable drive, then only the current partition on the active OAM is copied to the removable drive in the active OAM latched USB slot.

If the **chg-db:action=restore:src=server:filename=xxxxxx.tar** or **chg-db:action=backup:dest=server** command is entered, the database partitions are copied from or to the remote server application through an E5-IPSM card. This action is shown in Figure 5-7.

If the **chg-db:action=restore:src=usb** or **chg-db:action=backup:dest=usb** command is entered, the database partitions are copied from or to the credit card drive (inserted in the active OAM's flush mount USB slot). This action is shown in Figure 5-7.

Figure 5-7. Remote Backup or Restore

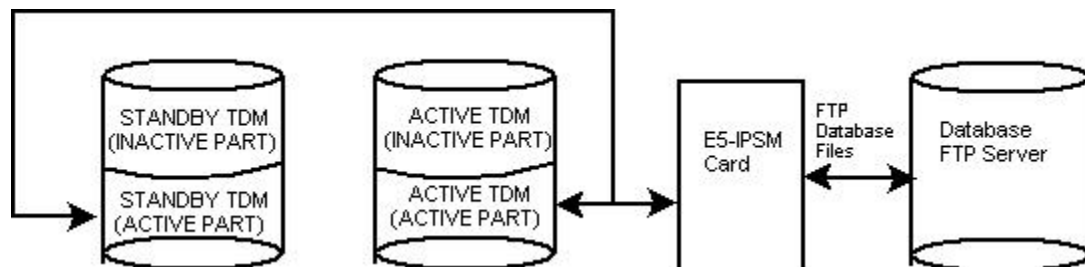

Output

The output of the various actions of the **chg-db** command is shown in the following examples. Messages such as UIMs might appear at your terminal.

chg-db:action=backup

```
BACKUP (FIXED): MASP B - Backup starts on active MASP.
BACKUP (FIXED): MASP B - Backup on active MASP to fixed disk complete.
BACKUP (FIXED): MASP B - Backup starts on standby MASP.
BACKUP (FIXED): Backup on standby MASP to fixed disk complete.
```

chg-db:action=restore

```
RESTORE (FIXED): MASP A - Restore starts on active MASP.
RESTORE (FIXED): MASP A - Restore from fixed disk on active MASP complete.
RESTORE (FIXED): MASP A - Restore starts on standby MASP.
RESTORE (FIXED): MASP A - Restore from fixed disk on standby MASP complete.
RESTORE (FIXED): MASP A - MASP(s) will reboot to load data.
```

chg-db:action=backup:dest=remove

```
BACKUP (REMOVABLE) : MASP A - Backup starts on active MASP.
BACKUP (REMOVABLE) : MASP A - Backup to removable cartridge complete.
```

chg-db:action=backup:dest=fixed

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

chg-db:action=restore:src=remove

```
RESTORE (REMOVABLE) : MASP A - Restore starts on active MASP.
RESTORE (REMOVABLE) : MASP A - Restore starts on standby MASP.
RESTORE (REMOVABLE) : MASP A - MASP(s) will reboot to load data.
RESTORE (REMOVABLE) : MASP A - Restore from removable cartridge complete.
```

chg-db:action=restore:src=fixed

```
RESTORE (FIXED) : MASP A - Restore starts on active MASP.
RESTORE (FIXED) : MASP A - Restore from fixed disk on active MASP complete.
RESTORE (FIXED) : MASP A - Restore starts on standby MASP.
RESTORE (FIXED) : MASP A - MASP(s) will reboot to load data.
RESTORE (FIXED) : MASP A - Restore from fixed disk on stdby MASP complete.
```

chg-db:action=repair

```
REPAIR: MASP A - Repair starts on standby MASP.
REPAIR: MASP A - Standby MASP will reboot to load data.
REPAIR: MASP A - Repair from fixed disk complete.
```

chg-db:action=backup:dest=server

```
BACKUP (SERVER): MASP A - Backup starts on active MASP.
BACKUP (SERVER) : Copy Database to card memory for processing.
BACKUP (SERVER) : Compress Database before archiving.
BACKUP (SERVER) : Send database archive to server.
BACKUP (SERVER): MASP A - Backup to remote server complete.
```

chg-

db:action=restore:src=server:file="CLLI-37.5.0-08011112.tar.gz"

```
RESTORE (SERVER) : Retrieve database archive from server.
RESTORE (SERVER) : Validate database archive.
RESTORE (SERVER) : Restore starts on active MASP.
RESTORE (SERVER) : Restore from server on active MASP complete.
RESTORE (SERVER) : Restore starts on standby MASP.
RESTORE (SERVER) : Restore from server on standby MASP complete.
RESTORE (SERVER) : MASP(s) will reboot to load data.
```

chg-dstn**Change Destination**

Use this command to change the characteristics of the point codes that are considered destinations from this signal transfer point (STP). A destination does not have to be an adjacent signaling point, but the system must be able to route traffic to this destination.

Keyword: **chg-dstn**

Related Commands: **chg-rte, dlt-dstn, dlt-rte, ent-dstn, ent-rte, rept-stat-dstn, rtrv-dstn, rtrv-rte**

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:dpc= (mandatory)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: **dpca**

Range: **p-, 000-255, ***

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

The asterisk value (*) is not valid for the *ni* subfield.

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001–005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006–255**.

The point code **000-000-000** is not a valid point code.

:dpc/dpca/dpci/dpcn/dpcn24= (mandatory)

Destination point code.

:dpci= (mandatory)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps-

zone—0-7

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

:dpcn= (mandatory)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn, prefix-nnnnn-gc, prefix-m1-m2-m3-m4, prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:dpcn24= (mandatory)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*. The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:aliasa= (optional)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Range: **000-255, none**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

Enter **none** to delete the point code.

The point code **000-000-000** is not a valid point code.

:aliasa/aliasi/aliasn/aliasn24= (optional)

Alias point code.

:aliasi= (optional)

ITU international alias point code list with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

If an ITU international destination (**dpci**) point code is entered, the **dpci** and **aliasi** *prefix* subfields cannot be the same, (both spare or both non-spare). Up to 2 comma-delimited entries can be entered in the point code list.

Range: **s-, 0-255, none**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

zone—**0-7**

area—**000-255**

id—**0-7**

Enter **none** to delete the point code.

The point code **0-000-0** is not a valid point code.

:aliasn= (optional)

ITU national alias point code list in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

If an ITU national destination (**dpcn**) point code is entered, then the **dpcn** and **aliasn** *prefix* subfields cannot be the same (both spare or both non-spare). Up to 2 comma-delimited entries can be entered in the point code list.

Range: **s-, 0-16383, aa-zz, none**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

Enter **none** to delete the point code.

:aliasn24= (optional)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255, none**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

Enter **none** to delete the point code.

:bei= (optional)

Broadcast exception indicator. This parameter specifies whether the STP broadcasts network management messages to adjacent signaling points. The network management messages contain information about the indicated cluster and any of that cluster's member signaling points that are on its exception list. The messages whose broadcast is determined by this parameter are:

- **TFP**—transfer prohibited
- **TCP**—transfer cluster prohibited

Range: **yes, no**

yes — Network management messages are not broadcast

no — Network management messages are broadcast

Default: No change to the current value

:clli= (optional)

The Common Language Location Identifier assigned to this destination.

Range: *ayyyyyyyyyyy*

1 alphabetic character followed by 10 alphanumeric characters

Default: No change to the current value

:elei= (optional)

Exception-list exclusion indicator, for cluster destinations only. This parameter specifies whether the system *excludes* or *includes (maintains)* a dynamic status exception list (x-list) for each cluster route used to reach the member signaling points that make up the cluster.

Range: **yes, no**

yes — Do not maintain a dynamic status x-list

no — Maintain a dynamic status x-list

Default: No change to current value.

:ncai= (optional)

Nested cluster allowed indicator. Specifies whether the route to the cluster point code can be different for provisioned members of the cluster. A point code is a member of a cluster point code if it has the same network identifier (NI) and network cluster (NC) values as the cluster point code. This parameter can only be specified for cluster point codes. Nested cluster routing is allowed if this parameter is set to **yes** and the CRMD and NCR features are turned on.

Range: **yes, no**

yes — The cluster point code is a nested cluster point code. Point codes that are members of this cluster point code can be assigned to route sets that are different from the route set assigned to the cluster point code.

no — The cluster point code is not a nested cluster point code. Point codes that are members of this cluster point code must be assigned to the same route set assigned to the cluster point code.

Default: Current value.

:prx= (optional)

Proxy point code indicator. This parameter specifies whether a destination point code is used as a proxy point code.

Range: **yes, no**

yes — The destination point code is used as a proxy point code.

no — The destination point code is not used as a proxy point code.

Default: No change in current value.

:spc= (optional)

ANSI secondary point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: **spca****Range:** **p-, 000-255, none**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid for *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

Enter **none** to delete the point code.

The point code **000-000-000** is not a valid point code.

Default: No change.

:spc/spca/spci/spcn/spcn24= (optional)

Secondary point code.

:spci= (optional)

ITU international secondary point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range:

Default: No change.

:spcn= (optional)

ITU national secondary point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range:

Default: No change.

:spcn24= (optional)

24-bit ITU national secondary point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range:

Example

To change the clli of destination 111-222-111 to rlghncxa01a:

chg-dstn:dpc=111-222-111:clli=rlghncxa01a

To change the exception-list exclusion indicator for cluster 20-2-* to yes:

chg-dstn:dpc=20-2-*:elei=yes

To change an existing destination to contain an SPC:

chg-dstn:dpc=20-2-2:spc=5-5-5

To change Nested Cluster Allowed Indicator for cluster 20-2-* to yes:

chg-dstn:dpc=20-2-*:ncai=yes

To change a network destination:

chg-dstn:dpc=25-*-*:clli=tklc

To change the bei parameter value of ITU national destination 8111-aa to yes:

chg-dstn:dpcn=8111-aa:bei=yes

To change the bei parameter value of 24-bit ITU-N destination 15-100-10 to yes:

chg-dstn:dpcn24=15-100-10:bei=yes

To change an existing 24-bit ITU-N destination to contain a 24-bit ITU-N SPC:

chg-dstn:dpcn24=12-12-12:spcn24=25-25-25

To change ITU-I spare destination point code s-2-100-1 to contain an ITU-I spare secondary point code, ANSI alias, and ITU-N spare alias:

chg-dstn:dpci=s-2-100-1:spci=s-2-129-9:aliasa=121-120-120:aliasn=s-129

To prevent a destination point code from being used as a proxy point code:

chg-dstn:dpc=11-11-11:prx=no

To change ITU-I spare destination point code s-5-60-3 to add ITU-N non-spare and spare aliases:

chg-dstn:dpci=s-5-60-3:aliasn=10723-gr,s-10723-gr

To change ITU-I spare destination point code s-5-60-5 to add ITU-N spare and ITU-I non-spare aliases:

chg-dstn:dpci=s-5-60-5:aliasn=s-10725-gr:aliasi=5-60-5

Dependencies

NOTE: A *full point code* contains numerical values for all three segments of the point code.

At least one optional parameter must be specified.

The specified destination point code value must already be defined in the Destination point code table.

The destination address must be a full point code, a network destination, or a cluster point code.

The ANSI self-ID destination point code for the STP must be defined before ANSI destinations can be changed.

The ITU-I self-ID destination point code for the STP must be defined before ITU-I destinations can be changed.

The ITU-N self-ID destination point code for the STP must be defined before ITU-N destinations can be changed.

The Spare Point Code Support feature must be enabled before the spare point code prefix **s-** can be specified for an ITU-I or ITU-N destination, secondary, or alias point code.

If the **dpcn** or **aliasn** parameter is specified, the format must match the format that was assigned with the **chg-stpopts:npfcmfi** parameter.

When the 7000 Routesets or 8000 Routesets feature quantity is enabled, the total number of provisioned aliases in the system cannot exceed 8000.

Alias point codes are allowed only for full point code destinations.

Alias point codes for destinations must be full point codes.

A specified alias type cannot already be defined as a destination address. The **aliasa** and **dpca** parameters cannot be specified together in the command. The **aliasi** and **dpci** parameters and the **aliasn** and **dpcn** parameters cannot be specified together in the command if the *prefix* subfields are the same (both are spare or both are non-spare).

Alias ANSI point codes cannot be members of a cluster or network destination.

The specified alias network type must be different from the destination point code network type.

A 24-bit ITU-N point code cannot have a 14-bit ITU-N alias point code or an ANSI alias point code.

A 24-bit ITU-National point code can have an ITU-I point code alias. This allows conversion of 14-bit ITU-I routing label to 24-bit routing label and vice versa.

A 14-bit ITU-N point code cannot have a 24-bit ITU-N alias point code.

An ANSI point code cannot have a 24-bit ITU-N alias point code.

If an ITU-I point code is specified, either the **aliasn** or the **aliasn24** parameter can be specified, but not both.

Cluster destinations are allowed only if the CRMD feature is turned on.

The **ncai** parameter can be specified only for cluster destinations.

The **elei** parameter can be specified only for cluster destinations (for example, **dpc=ni-nc-***).

The **bei** parameter can be specified only for cluster destinations.

The NCR (Nested Cluster Routing) feature must be turned on before the **ncai** parameter can be specified.

Network routing is valid only if the Network Routing (NRT) feature is turned on.

When using network routing, if the destination point code has a value of * in the *nc* subfield, the *ncm* subfield must also be * (for example, **dpc=21-*.***).

If a provisioned nested cluster point code is being changed to a non-nested cluster point code (**ncai=no**), previously provisioned members of the cluster must have the same route set.

If a provisioned non-nested cluster point code is being changed to a nested cluster point code (**ncai=yes**), the maximum number of provisioned nested clusters must be no greater than 500.

If specified, the **spc** parameter value must already be configured as a secondary point code in the Secondary Point Code table.

The value specified for the **spc** parameter must be a full point code.

If the **spc** parameter is specified, the **domain=ss7** parameter must be specified.

If the **spc** parameter is specified, then the value specified for the **dpc** parameter must be a full point code.

The network type of the value specified for the **spc** parameter must match the network type of the value specified for the **dpc** parameter.

If a new **cli** for the destination point code is specified, it cannot match the **cli** of the system.

If the corresponding destination for the specified destination point code is an adjacent signaling point (matched a Far End point code in its linkset entity set), the **cli** of the specified destination point code cannot be assigned to any other destination address.

Alias point codes are supported only for destinations in the SS7 domain (**domain=ss7**).

A reserved word cannot be specified for the destination identifier (**cli**).

If the destination does *not* use an SPC, the group code of the destination must be the same as the group code of the ITU national true point code.

If the destination uses an SPC, then the group code of the destination must match the group code of the SPC.

If an ITU national destination is being changed and the ITUDUPPC feature is turned on, this applies depending on whether the destination uses an SPC (secondary point code). For example, if the ITU national true point code has a group code of **ee**, then destinations with group codes of **ee** can be added without using an SPC. Destinations with a group code of **ff**, however, must use an SPC with a group code of **ff**.

ICNP feature must be enabled and turned on in order to specify the **icnpxlat**, **cgpafmt**, and **cdpafmt** parameters.

Alias point codes cannot already be defined as another destination.

The value specified for the **spc** parameter cannot already be specified as a secondary point code for the destination point code.

The Proxy Point Code feature must be enabled before the **prx** parameter can be specified.

If the **prx=yes** parameter is specified, then the value of the **dpc** parameter must be a full point code.

If the value of the **dpc** parameter is used as a proxy point code, then the **prx=no** parameter cannot be specified.

The number of proxy destinations cannot exceed the value allowed by the enabled Proxy Point Code quantity feature.

If the **prx=yes** parameter is specified, then the **spc/spca/spci/spcn/spcn24** parameter cannot be specified.

If the value of the **dpc** parameter is a private point code, then the **prx=yes** parameter cannot be specified.

The total number of proxy destinations cannot exceed the total capacity (100) of the Proxy Point Code feature.

If an IPGW linkset is used, then the **prx=yes** parameter cannot be specified.

The value specified for the **spc** parameter must differ from the secondary point code of the destination/route entry specified by the **dpc** parameter.

A maximum of two aliases can be specified per destination.

If the **dpci** parameter is specified, then a combination of ITUI and ANSI aliases cannot be specified.

If the **dpcn** parameter is specified, then a combination of ITUN and ANSI aliases cannot be specified.

Two ITUI or two ITUN aliases can be specified for the same destination point code only if the aliases have different prefixes. One alias must be spare and one non-spare.

Notes

The **domain** parameter of a destination (see the **ent-dstn** command) cannot be changed with this command. To change the **domain** parameter, the destination must be removed with the **dlt-dstn** command and re-entered with the **ent-dstn** command.

In this command, only ITU-international and ITU national point codes and aliases support the spare point code subtype prefix (**s-**). Only ITU-international and ITU national point codes support the private and spare point code subtype prefix (**ps-**). All of the point code types support the private (internal) point code subtype prefix (**p-**). Aliases do not support the private (internal) point code prefix.

The value specified for the **dpc** parameter must be a full point code in order to be used as a proxy point code. Cluster point codes and private point codes cannot be used as proxy point codes.

Invalid usage of **none** with **aliasi** and **aliasn**:

- **alias=none,none** parser code expects **none** to be the last argument
- **alias=none,pointcode** parser code expects **none** to be the last argument
- **alias=,pointcode** invalid usage of command separator

Alias Combination Matrix

Table 5-7. Alias Combination Matrix

	specified			result	
destination	aliasN	aliasI	aliasA	alias1	alias2
ANSI		none		0	
		pci		pci	
	none				0
	pcn				pcn
	pcn24				pcn24
	none	none		0	0
	none	pci		pci	0
	pcn	none		0	pcn

Table 5-7. Alias Combination Matrix

	specified			result	
	pcn24	none		0	pcn24
	pcn	pci		pci	pcn
	pcn24	pci		pci	pcn24
ITUI			none	0a	
			pca	pca	
		none		0i	
		pci		pci	
		none	none	0a,i	
		none	pca	pca	
		pci	none	pci	
		pci	pca	E5074	
	none			0n	0
	pcn			0n	pcn
	pcn, none			0n	pcn
	pcn1, pcn2			pcn2	pcn1
	pcn24				pcn24
	none		none	0a,n	0
	none		pca	pca	0
	pcn		none	0a,n	pcn
	pcn		pca	pca	pcn
	pcn, none		none	0a,n	0
	pcn, none		pca	0a,n	pcn
	pcn1, pcn2		none	pcn1	pcn2
	pcn1, pcn2		pca	E5001	
	pcn24		none	0a	pcn24
	pcn24		pca	pca	pcn24
	none	none		0i,n	0
	none	pci		pci	0

Table 5-7. Alias Combination Matrix

	specified			result	
	pcn	none		0i,n	pcn
	pcn	pci		pci	pcn
	pcn, none	none		0i,n	pcn
	pcn, none	pci		pci	pcn
	pcn1, pcn2	none		pcn2	pcn1
	pcn1, pcn2	pci		E5001	
	pcn24	none		0i	pcn24
	pcn24	pci		pci	pcn24
	none	none	none	0a,i,n	0
	none	none	pca	pca	0
	none	pci	none	pci	0
	none	pci	pca	E5074	
	pcn	none	none	0a,i,n	pcn
	pcn	none	pca	pca	pcn
	pcn	pci	none	pci	pcn
	pcn	pci	pca	E5001	
	pcn, none	none	none	0a,i,n	pcn
	pcn, none	none	pca	pca	pcn
	pcn, none	pci	none	pci	pcn
	pcn, none	pci	pca	E5001	
	pcn2, pcn1	none	none	pcn2	pcn1
	pcn2, pcn1	none	pca	E5001	
	pcn2, pcn1	pci	none	E5001	
	pcn2, pcn1	pci	pca	E5001	
	pcn24	none	none	0a,i	pcn24
	pcn24	none	pca	pca	pcn
	pcn24	pci	none	pca	pcn
	pcn24	pci	pca	E5001	

Table 5-7. Alias Combination Matrix

	specified			result	
ITUN			none	0a	
			pca	pca	
		none			0
		pci			pci
		pci, none		0i	pci
		pci1, pci2		pci2	pci1
		none	none	0a,i	0
		none	pca	pca	0
		pci	none	0a	pci
		pci	pca	pca	pci
		pci, none	none	0,a,i	pci
		pci, none	pca	pca	pci
		pci1, pci2	none	pci2	pci1
		pci1, pci2	pca	E5001	
	none			0n	
	pcn			pcn	
	pcn24			pcn24	
	none		none	0,a,n	
	none		pca	pca	
	pcn		none	pcn	
	pcn		pca	E5074	
	pcn24		none	pcn24	
	pcn24		pca	E5074	
	none	none		0,i,n	0
	none	pci		0,i,n	pci
	none	pci, none		0,i,n	pci
	none	pci1, pci2		pci2	pci1
	pcn	none		pcn	0

Table 5-7. Alias Combination Matrix

	specified			result	
	pcn	pci		pcn	pci
	pcn	pci, none		pcn	pci
	pcn	pci1, pci2		E5001	
	pcn24	none		pcn24	0
	pcn24	pci		pcn24	pci
	pcn24	pci	none	pcn24	pci
	pcn24	pci1, pci2		E5001	
	none	none	none	0a,i,n	0
	none	none	pca	pca	0
	none	pci	none	0a,i,n	pci
	none	pci	pca	pca	pci
	none	pci, none	none	0a,i,n	0
	none	pci, none	pca	pca	pci
	none	pci, pci2	none	pci2	pci1
	none	pci, pci2	pca	E5001	
	pcn	none	none	pcn	0
	pcn	none	pca	E5074	
	pcn	pci	none	pcn	pci
	pcn	pci	pca	E5001	
	pcn	pci, none	none	pcn	pci
	pcn	pci, none	pca	E5001	
	pcn	pci1, pci2	none	E5001	
	pcn	pci1, pci2	pca	E5001	
	pcn24	none	none	pcn24	0
	pcn24	none	pca	E5074	
	pcn24	pci	none	pcn24	pci
	pcn24	pci	pca	E5001	
	pcn24	pci, none	none	pcn24	pci

Table 5-7. Alias Combination Matrix

	specified			result	
	pcn24	pci, none	pca	E5001	
	pcn24	pci1, pci2	none	E5001	
	pcn24	pci1, pci2	pca	E5001	
ITUN24			none	0	
			pca	pca	
		none			none
		pci			pci
		none	none	0	0
		none	pca	pca	0
		pci	none	0	pci
		pci	pca	pca	pci

Legend:

0—clear alias if provisioned regardless of its pointcode type

0A—clear alias if provisioned and pointcode is ANSI

0I—clear alias if provisioned and pointcode is ITUI

0N—clear alias if provisioned and pointcode is ITUN

0A,I—clear alias if provisioned and pointcode is ANSI or ITUI

0A,N—clear alias if provisioned and pointcode is ANSI or ITUN

0I,N—clear alias if provisioned and pointcode is ITUI or ITUN

0A,I,N—clear alias if provisioned and pointcode is ANSI or ITUI or ITUN

Output

The following example shows the display of the destination memory space accounting command completion response with the NCR, NRT, and CRMD features off (disabled) and all Routes and Routesets features off (disabled):

```
chg-dstn:dpca=111-222-111:aliasn=321
rlghncxa03w 04-08-17 15:35:05 EST EAGLE 31.8.0
Destination table is (10 of 2000) 1% full
Destination table is (10 of 2000) 1% full
Alias table is (8 of 12000) 1% full
CHG-DSTN: MASP A - COMPLTD
;
```

The following example shows the display of the destination memory space accounting command completion response with the NCR, NRT, and CRMD features off (disabled) and the 5000 Routes feature on:

```
chg-dstn:dpca=111-222-111:aliasn=321
rlghncxa03w 04-08-18 08:29:15 EST EAGLE 31.8.0
Destination table is (10 of 5000) 1% full
Alias table is (8 of 12000) 1% full
CHG-DSTN: MASP A - COMPLTD
;
```

The following example shows the display of the destination memory space accounting command completion response with one or more of the NCR, NRT, or CRMD features on and the DSTN5000 (5000 Routes) feature on:

```
chg-dstn:dpca=111-222-111:aliasn=321
rlghncxa03w 04-08-18 08:29:15 EST EAGLE 31.8.0
DESTINATION ENTRIES ALLOCATED: 5000
FULL DPC(s): 9
NETWORK DPC(s): 0
CLUSTER DPC(s): 1
TOTAL DPC(s): 10
CAPACITY (% FULL): 1%
ALIASES ALLOCATED: 12000
ALIASES USED: 8
CAPACITY (% FULL): 1%
X-LIST ENTRIES ALLOCATED: 500
CHG-DSTN: MASP A - COMPLTD
;
```

The following example shows the display of the destination memory space accounting command completion response with the NCR, NRT, and CRMD features off (disabled) and the 6000 Routesets feature on:

```
chg-dstn:dpca=111-222-111:aliasn=321
rlghncxa03w 04-08-18 08:29:15 EST EAGLE 31.8.0
Destination table is (60 of 6000) 1% full
Alias table is (8 of 12000) 1% full
CHG-DSTN: MASP A - COMPLTD
;
```

The following example shows the display of the destination memory space accounting command completion response with one or more of the NCR, NRT, or CRMD features and the 6000 Routesets feature on:

```
chg-dstn:dpca=111-222-111:aliasn=321
rlghncxa03w 04-08-18 08:29:15 EST EAGLE 31.8.0
DESTINATION ENTRIES ALLOCATED: 6000
```

```

FULL DPC(s):                46
NETWORK DPC(s):              1
CLUSTER DPC(s):              1
TOTAL DPC(s):                12
CAPACITY (% FULL):           1%
ALIASES ALLOCATED:           12000
ALIASES USED:                 8
CAPACITY (% FULL):           1%
X-LIST ENTRIES ALLOCATED:     500
CHG-DSTN: MASP A - COMPLTD
;

```

The following example shows the display of the destination memory space accounting command completion response with the NCR, NRT, and CRMD features off (disabled). When the 7000 Routesets quantity feature is on, the Destination table line shows "...of 7000" as it appears in the example. When the 8000 Routesets quantity feature is on, the Destination table line shows "...of 8000."

chg-dstn:dpca=111-222-111:aliasn=321

```

rlghncxa03w 04-08-18 08:29:15 EST EAGLE 31.8.0
Destination table is (60 of 7000) 1% full
Alias table is (8 of 8000) 1% full
CHG-DSTN: MASP A - COMPLTD
;

```

The following example shows the display of the destination memory space accounting command completion response with one or more of the NCR, NRT, or CRMD features on: When the 7000 Routesets quantity feature is on, the DESTINATION ENTRIES ALLOCATED line shows "8000" as it appears in the example. When the 7000 Routesets quantity feature is on, the DESTINATION ENTRIES ALLOCATED line shows "7000."

chg-dstn:dpca=111-222-111:aliasn=321

```

rlghncxa03w 04-08-18 08:29:15 EST EAGLE 31.8.0
DESTINATION ENTRIES ALLOCATED: 8000
FULL DPC(s):                  9
NETWORK DPC(s):               0
CLUSTER DPC(s):               1
TOTAL DPC(s):                 10
CAPACITY (% FULL):            1%
ALIASES ALLOCATED:             8000
ALIASES USED:                  8
CAPACITY (% FULL):            1%
X-LIST ENTRIES ALLOCATED:     500
CHG-DSTN: MASP A - COMPLTD
;

```

The following example displays the destination memory space accounting command completion response with one or more of the NCR, NRT, or CRMD features on. In this example, a destination is defined as a proxy point code.

chg-dstn:dpc=1-1-1:prx=yes

```

tekelecstp 07-03-05 17:34:18 EST EAGLE 37.5.0
DESTINATION ENTRIES ALLOCATED: 2000
FULL DPC(s):                  27
EXCEPTION DPC(s):             0
NETWORK DPC(s):               1
CLUSTER DPC(s):               1
PROXY DPC(s):                 1
TOTAL DPC(s):                 30
CAPACITY (% FULL):            2%
ALIASES ALLOCATED:             12000
ALIASES USED:                  0
CAPACITY (% FULL):            0%
X-LIST ENTRIES ALLOCATED:     500

```

```
CHG-DSTN: MASP A - COMPLTD
;
```

The following example displays the output that results if the secondary point code is changed.

chg-dstn:dpc=1-1-1:spc-144-23-48

```
tekelecstp 07-03-05 17:34:18 EST EAGLE 37.5.0
CAUTION: Dstn's SPC has changed - verify remote node's route.
DESTINATION ENTRIES ALLOCATED: 2000
FULL DPC(s): 27
EXCEPTION DPC(s): 0
NETWORK DPC(s): 1
CLUSTER DPC(s): 1
PROXY DPC(s): 1
TOTAL DPC(s): 30
CAPACITY (% FULL): 2%
ALIASES ALLOCATED: 12000
ALIASES USED: 0
CAPACITY (% FULL): 0%
X-LIST ENTRIES ALLOCATED: 500
CHG-DSTN: MASP A - COMPLTD
;
```

chg-e1

Change E1 Interface

Use this command to change an interface for an E1 card in the system:

- A 2-port E1 card
- An E1/T1 MIM card
- An HC-MIM card used as an E1 card or an SE-HSL card
- An E5-E1T1 card used as an E1 card or an SE-HSL card

The E1 port number on the card and the E1 card location in the system must be specified.

The CRC4, CAS, CCS, encoding, timing source, and NFAS signaling bit options can be set.

On HC-MIM and E5-E1T1 cards, E1 ports 1, 3, 5, and 7 (master ports) can be independently channel bridged with their adjacent even-numbered E1 ports 2, 4, 6, and 8 (slave ports) to allow non-signaling data pass-through.

Keyword: **chg-e1**

Related Commands: **dlt-e1, ent-e1, rtrv-e1, tst-e1**

Command Class: Database Administration

Parameters

:e1port= (mandatory)

E1 port number. The value must be an E1 port that has already been configured with an E1 interface on the specified E1 card.

Range: **1-8**

Ports 3 - 8 can be specified only for HC-MIM and E5-E1T1 cards.

Any 2 of the 8 ports on an HC-MIM card can be specified when the card is used as an SE-HSL card.

Any 1 of the 8 ports on an E5-E1T1 card can be specified when the card is used as an SE-HSL card.

:loc= (mandatory)

Card address. The card location as stenciled on the shelf of the system.

- Range:** 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118
- :cas=** (optional)
CAS (**on**) or CCS (**off**) indicator.
Range: **on, off**
CAS cannot be specified for HC-MIM cards or E5-E1T1 cards.
Default: No change in current value
- :chanbrdg=** (optional)
Port bridging status. This parameter indicates whether an odd-numbered E1 port on either an HC-MIM card or an E5-E1T1 card is channel bridged with its adjacent even-numbered E1 port for non-signaling data pass through.
Range: **on, off**
Default: **off**
- :crc4=** (optional)
CRC4 enable or disable indicator.
Range: **on, off**
Default: No change in current value
- :e1tsel=** (optional)
Timing source. This parameter indicates a master (**external**) or slave (**line**) timing source, or a timing source recovered from the paired master port for channel bridged slave ports.
Range: **line, external, recovered**
Default: No change in current value
- :encode=** (optional)
Indicator for use of HDB3 or AMI encoding/decoding.
Range: **hdb3, ami**
AMI encoding is not supported for the 2-port E1 card. AMI encoding is supported for the E1/T1 MIM card, the HC MIM card, or the E5-E1T1 card used as an E1 card.
Default: No change in current value
- :minsurate=** (optional)
Minimum signal unit rate. This parameter indicates the minimum number of SUs present on a link that are uniformly distributed. This parameter is valid only when the **linkclass=unchan** parameter is specified in the E1 interface.
Range: **500-2000**
Default: No change in current value.
- :si=** (optional)
Value of two Spare International bits of NFAS data.
Range: **0-3**
Default: No change in current value
- :sn=** (optional)
Value of five Spare International bits of NFAS data.
Range: **0-31**
Default: No change in current value

Example

```

chg-
e1:loc=1205:e1port=1:crc4=off:cas=on:encode=hdb3:e1tsel=external:
si=2:sn=12

chg-e1:loc=1205:e1port=2:cas=off:encode=ami
chg-e1:loc=1205:e1port=3:chanbrdg=on:e1tsel=recovered
chg-e1:loc=1205:e1port=1:minsrate=1000

```

Dependencies

At least one optional parameter must be specified.

The specified card location (**loc** parameter) must be equipped.

The card specified by the **loc** parameter must be a **lime1** card type.

The port specified by the **e1port** parameter must already be equipped with an E1 interface.

All signaling links serviced by the specified E1 card must be deactivated before the values for the **crc4**, **cas**, **encode**, and **e1tsel** parameters can be changed.

The **cas=on** parameter cannot be specified when timeslot 16 on the E1 card is being used by a signaling link.

The **cas=on** parameter cannot be specified for HC-MIM or E5-E1T1 cards.

The **encode=ami** parameter is supported only for the E1/T1 MIM card, HC-MIM card, or E5-E1T1 card used as an E1 card. The parameter is not supported for the 2-port E1 card.

The **chanbrdg** parameter can be specified only for HC-MIM cards and E5-E1T1 cards used as E1 cards (not as SE-HSL cards).

The **chanbrdg=on** parameter cannot be specified for even-numbered E1 ports on the HC-MIM cards and E5-E1T1 cards.

The timing source parameter **e1tsel** must be specified if **chanbrdg=on** is specified.

The **e1tsel=line** parameter cannot be specified if the specified HC-MIM port or E5-E1T1 E1 port is in channel bridging mode.

The **e1tsel=recovered** parameter can be specified only if the specified HC-MIM port or E5-E1T1 E1 port is in channel bridging mode.

When provisioning an odd-numbered E1 port of an HC-MIM card or E5-E1T1 card to channel bridging mode, **force=yes** must be specified if the adjacent even-numbered port is already provisioned.

The **minsrate** parameter can be specified only when the **linkclass=unchan** parameter is specified.

The **chanbrdg=on** parameter cannot be specified when the **linkclass=unchan** parameter is specified.

The **cas=on** parameter cannot be specified when the **linkclass=unchan** parameter is specified.

Channelized and un-channelized E1 ports (mixed mode) are not allowed on a single HC-MIM card or E5-E1T1 card. A card cannot be used as an SE-HSL card and either an HC-MIM card or an E5-E1T1 card at the same time.

All signaling links assigned to their adjacent even numbered ports must be deleted before provisioning the port into channel bridging mode.

The specified port cannot be changed since it is bridged with its adjacent odd numbered port (master port). The master port should be changed instead.

Notes

When **e1tsel=external** is specified, a user-supplied BITS clock is required.

External timing is derived from the EAGLE 5 ISS High-Speed Master Clock (1.544 MHz for T1 or 2.048 MHz for E1); therefore, the Master Timing feature is required. Line timing is derived from its received data stream, if present.

Output

chg-e1:loc=1205:e1port=2:cas=off:encode=ami

```
rlghncxa03w 04-01-20 09:07:58 EST EAGLE 31.3.0
CHG-E1: MASP A - COMPLTD
```

;

chg-eisopts

Change Eagle Support for Integrated Sentinel Options

Use this command to enable and disable the copy functions that are associated with the EAGLE 5 Integrated Monitoring Support (E5IS) feature.

Keyword: **chg-eisopts**

Related Commands: **rtrv-eisopts**

Command Class: Security Administration

Parameters

:eiscopy= (optional)

System-wide control for MSU, alarm, and event copy to the ESP.

Range: **on, off**

Default: No change to the current value

System

Default: **off**

:fcmode= (optional)

This parameter specifies a system-wide control to enable or disable monitoring on FC-capable cards.

Range: **stc, fcopy, off**

stc — STC monitoring is performed on FC-capable cards

fcopy — FC monitoring is performed on FC-capable cards

off — Monitoring is not performed on FC-capable cards.

Default: No change to the current value

System **stc** - If Integrated Monitoring is turned on for the first time, and the **eiscopy=on**

Default: parameter has been specified, then the system default for the **fcmode** parameter is **stc**. If the **eiscopy=off** parameter has been specified, then the system default value is **off**.

Example

chg-eisopts:eiscopy=on

chg-eisopts:fcmode=fcopy

Dependencies

At least one parameter must be specified.

The Eagle 5 Support for Integrated Sentinel (E5IS) feature must be turned on before this command can be entered

Before the E5IS copy function can be enabled, at least 2 STC cards must be installed and in the IS-NR state in the system.

The **eiscopy=on** parameter must be specified before a value of **stc** or **fcopy** can be specified for the **fcmode** parameter.

The **fcmode=off** parameter must be specified before the **eiscopy=off** parameter can be specified. The **fcmode=off** parameter must be specified to change the value of the **fcmode** parameter between **stc** and **fcopy**.

At least one FC-capable card must be installed and in the IS-NR state before the **fcmode=fcopy** parameter can be specified.

Notes

Fast Copy Cards

A card that can run the Fast Copy interface is referred to as an *FC-capable* card. Currently, E5-ENET cards running the **ipsg** application are the only supported FC-capable cards. After the **fcmode=fcopy** parameter is specified, the card is referred to as an *FC-enabled* card.

Output

chg-eisopts:fcmode=fcopy

```
rlghncxa03w 08-12-11 09:07:58 EST  EAGLE 40.1.0
CHG-EISOPTS: MASP A - COMPLTD
```

;

chg-feat

Change Feature

Use this command to activate the optional features available on the system.

You must purchase a feature before you turn the feature on. If you are not sure whether you have purchased a feature, contact your Tekelec Sales Representative or Account Representative.



CAUTION

CAUTION: The features are off when you install the system. After they are turned on with this command, they cannot be turned off.

Keyword: chg-feat

Related Commands: rtrv-feat

Command Class: Program Update

Parameters

:cnf= (optional)

This parameter turns on the Calling Name Conversion Facility (CNCF) feature.

Range: on

Default: No change in current value.

System

Default: off

:crmd= (optional)

This parameter turns on the Cluster Routing and Management Diversity (CRMD) feature.

Range: on

Default: No change in current value.

System

Default: off

:dstn5000= (optional)

This parameter turns on the 5000 Routes feature.

Range: on

Default: No change in current value.

System

Default: off

:e5is= (optional)

This parameter turns on the EAGLE 5 Integrated Monitoring Support (E5IS) feature. This feature cannot be turned on until the Time Slot Counter Synchronization (TSC) feature used with GPSM-II cards is turned on (**tscsync=on**). The **e5is** parameter and the **tscsync** parameter can be specified in the same **chg-feat** command to turn both features on at the same time.

Range: **on**

Default: No change in current value.

System

Default: **off**

:egt= (optional)

This parameter turns on the Enhanced Global Title Translation (EGTT) feature.

Range: **on**

Default: No change in current value.

System

Default: **off**

:fan= (optional)

This parameter turns on the cooling fan feature.

Range: **on**

Default: No change in current value.

System

Default: **off**

:gtt= (optional)

This parameter turns on the Global Title Translation (GTT) feature.

Range: **on**

Default: No change in current value.

System

Default: **off**

:gws= (optional)

This parameter turns on the Gateway Screening (GWS) feature.

Range: **on**

Default: No change in current value.

System

Default: **off**

:ipisup= (optional)

This parameter turns on the ISUP Routing Over IP (IPISUP) feature.

Range: **on**

Default: No change in current value.

System

Default: **off**

:ituduppc= (optional)

This parameter turns on the ITU National Duplicate Point Code (ITUDUPPC) feature.

Range: **on**

Default: No change in current value.

System

Default: **off**

:itumtprs= (optional)

This parameter turns on the ITU MTP Restart feature.

Range: **on**

Default: No change in current value.

System

Default: off

:lan= (optional)

This parameter turns on the STP LAN feature.

Range: on

Default: No change in current value.

System

Default: off

:lfs= (optional)

This parameter turns on the Link Fault Sectionalization (LFS) feature.

Range: on

Default: No change in current value.

System

Default: off

:measplat= (optional)

This parameter turns on the Measurements Platform feature. The **chg-measopts:platformenable=on** command must be entered to enable the Measurement Platform collection function (which cannot be disabled after it is enabled in the system).

Range: on

Default: No change in current value.

System

Default: off

:mpc= (optional)

This parameter turns on the Multiple Point Code (MPC) feature.

Range: on

Default: No change in current value.

System

Default: off

:mtprs= (optional)

This parameter turns on the ANSI MTP Restart feature.

Range: on

Default: No change in current value.

System

Default: off

:ncr= (optional)

This parameter turns on the Nested Cluster Routing (NCR) feature.

Range: on

Default: No change in current value.

System

Default: off

:nrt= (optional)

This parameter turns on the Network Routing feature.

Range: on



CAUTION: When using the Network Routing feature, limited network management is provided for point codes not covered by full point code routing, Cluster Routing, or Nested Cluster Routing.

Default: No change in current value.
System
Default: **off**

:plnp= (optional)

This parameter turns on the PCS (Personal Communication Service) 1900 Number Portability feature.

Range: **on**
Default: No change in current value.
System
Default: **off**

:sccpcnv= (optional)

This parameter turns on the SCCP Conversion feature.

Range: **on**
Default: No change in current value.
System
Default: **off**

:seas= (optional)

This parameter turns on the Signaling Engineering Administration System (SEAS) feature.

Range: **on**
Default: No change in current value.
System
Default: **off**

:slsob= (optional)

This parameter turns on the Other CIC (Circuit Identification Code) Bit Used feature.

Range: **on**
Default: No change in current value.
System
Default: **off**

:tcapcnv= (optional)

This parameter turns on the TCAP Conversion feature.

Range: **on**
Default: No change in current value.
System
Default: **off**

:tlnp= (optional)

This parameter turns on the Triggerless Local Number Portability (TLNP) feature.

Range: **on**
Default: No change in current value.
System
Default: **off**

:tscsync= (optional)

This parameter turns on the Time Slot Counter Synchronization (TSC) feature that is used with GSM-II cards. This feature is required, along with use of STC cards, for the EAGLE 5 Integrated Monitoring Support feature (**e5is=on**).

Range: **on**
Default: No change in current value.
System
Default: **off**

:vgtt= (optional)

This parameter turns on the Variable Length GTT (VGTT) feature.

Range: **on**

Default: No change in current value.

System

Default: **off**

:wnp= (optional)

This parameter turns on the Wireless Number Portability (WNP) feature.

Range: **on**

Default: No change in current value.

System

Default: **off**

:x252000= (optional)

This parameter turns on the 2000 X.25 Routes and Destinations feature.

Range: **on**

Default: No change in current value.

System

Default: **off**

:x25g= (optional)

This parameter turns on the X.25/SS7 Gateway feature.

Range: **on**

Default: No change in current value.

System

Default: **off**

:gflex= (obsolete)

This parameter turns on the GSM flexible numbering (G-Flex) feature.

This parameter is obsolete.

Range: **on**

Default: No change in current value.

System

Default: **off**

:mgtt= (obsolete)

This parameter turns on the Modified Global Title Translation (MGTT) feature. The MGTT feature replaces the PRFXDLGT feature.

This parameter is obsolete.

Range: **on**

Default: No change in current value.

System

Default: **off**

Example

chg-feat:gtt=on

chg-feat:gws=on:cncf=on

chg-feat:gtt=on:gws=on:crmd=on:x25g=on:lan=on:lfs=on

chg-feat:sccpcnv=on:tcapcnv=on

chg-feat:tscsync=on:e5is=on

Dependencies

NOTE: The "LNP feature" is turned on when the LNP ported TNs quantity appears in the `rtvr-ctrl-feat` command output. An LNP quantity feature access key has been enabled and turned on. See the `enable-ctrl-feat` and `chg-ctrl-feat` commands for more information about turning on the LNP feature.

At least one optional parameter must be specified.

The Gateway Screening feature must be turned on (**gws=on**) before the following features can be turned on:

- The STP LAN feature (**lan=on**)
- The CNCF feature (**cncf=on**)

The SCCP Conversion feature must be on (**sccpcnv=on**) before the TCAP Conversion feature can be turned on (**tcapcnv=on**).

The LNP feature must be turned on before the following features can be turned on:

- The Wireless Number Portability feature (**wnp=on**)
- The PCS 1900 LNP feature (**plnp=on**)

The LNP feature must be turned on and the Gateway Screening feature must be turned on (**gws=on**) before the Triggerless LNP feature can be turned on (**tlnp=on**).

The X.25/SS7 Gateway feature must be turned on (**x25g=on**) before the 2000 X.25 Routes and Destinations feature can be turned on (**x252000=on**).

The Cluster Routing and Management Diversity (CRMD) feature must be turned on (**crmd=on**) before the Nested Cluster Routing (NCR) feature can be turned on (**ncr=on**).

The Global Title Translation (GTT) feature must be turned on (**gtt=on**) before the Enhanced Global Title Translation (EGTT) feature (**egtt=on**) can be turned on. When the EGTT feature is turned on, three command sets—the GTT Selector (**ent/chg/dlt/rtrv-gttset**), GTT Set (**ent/dlt/rtrv-gttset**), and GTA (**ent/chg/dlt/rtrv-gta**) commands—are used instead of the Translation Type and Global Title Translation command sets—**ent/dlt/rtrv-tt**, and **ent/chg/dlt/rtrv-gtt**. All data previously provisioned with the GTT commands is maintained.

The Multiple Point Code (MPC) feature must be turned on (**mpc=on**) before the ITU National Duplicate Point Code (ITUDUPPC) feature can be turned on (**ituduppc=on**).

The Global Title Translation (GTT) feature must be turned on (**gtt=on**) before the Variable Length GTT (VGTT) feature (**vgtt=on**) can be turned on.

To turn on both the VGTT and LNP features requires that the system has all Service Module cards. To turn on both the VGTT and EGTT features requires that the system has TSM cards or Service Module cards. The VGTT feature requires TSM cards or Service Module cards in the system.

Both cards that run the OAM must be GPSM-II cards before the Time Slot Counter Synchronization (TSC) feature (**tscsync** parameter) can be turned on.



CAUTION: Never install or initialize MCAP cards in card slots 1113 and 1115 after GPSM-II cards are provisioned in these slots. Attempting to initialize MCAP cards after GPSM-II cards have been provisioned in slots 1113 and 1115 will cause a system outage. Before replacing an existing GPSM-II card in slot 1113 or 1115, contact Tekelec Customer Service.

The Time Slot Counter Synchronization (TSC) feature (**tscsync** parameter) must be turned on before the EAGLE 5 Integrated Monitoring Support feature (**e5is** parameter) can be turned on. The two parameters can be specified in the same **chg-feat** command to turn them both on at the same time.

The SCCP and TCAP conversion features (SCCPCNV and TCAPCNV) cannot be turned on when the ANSI-ITU-China SCCP Conversion feature is enabled (see the **enable-ctrl-feat** command).

The EGTT feature requires TSM cards or Service Module cards in the system.

The Gateway Screening feature (GWS) must be turned on (**gws=on**) before Calling Number Conversion Facility (CNCF) feature can be turned on.

The Global Title Translation (GTT) feature must be turned on (**gtt=on**) before the Prefix Deletion of GT feature can be turned on.

The Variable length Global Title Translation (VGTT) feature cannot be turned on if any SCCP card is running on a 486 processor.

The Global Title Translation GTT) feature (**gtt=on**) must be turned on before Global System for Mobile Screening (GSM) feature can be enabled.

The HMUXTVG system option must be turned on before the Eagle 5 Integrated Monitoring Support feature (e5is parameter) can be turned on.

Notes

This command is not allowed in upgrade mode.

After a feature bit is turned on, it cannot be turned off. Take care in turning on features that are not used in the network configuration.

The Calling Name Conversion Facility (CNCF) feature provides a conversion of ISUP IAM messages. The facility uses the following two versions of calling name identification presentation (CNIP) for calling name information delivery:

- The nonstandard, proprietary ISUP party information (PIP) parameter.
- The ANSI standard ISUP generic name (GN) parameter.

The conversion either replaces the PIP parameter with the GN parameter or the GN parameter with the PIP parameter in the ISUP IAM message. The user can set up GWS screens to apply the CNCF feature on a per-point-code or range-of-point-code basis.

The Cluster Routing and Management Diversity (CRMD) feature allows the system to configure one route set to an entire cluster of destinations, thus enabling the system to manage and switch traffic to more end nodes.

The Global Title Translation (GTT) feature allows the system to provide translation of the global title digits located in the called party address of an SCCP message. The translation consists of a point code and subsystem number. This feature requires TSMs or DSMs loaded with the SCCP application.

The Enhanced Global Title Translation (EGTT) feature provides enhancements to the way the system performs GTT for both ITU and ANSI messages. The feature allows the combination of domain (ANSI or ITU), global title indicator (GTI), translation type (TT), numbering plan (NP), and nature of address indicator (NAI) selectors to be used to select a translation table when the system receives a message requiring EGTT. The feature also allows inclusion of the translated subsystem number (SSN) in the called party address (CDPA) and inclusion of the originating point code (OPC) in the calling party address (CGPA). The feature also provides deletion capability of the GT (global title) in the CDPA.

The Gateway Screening (GWS) feature allows the system to screen specific message types with selected parameters from entering the network through this STP. This feature requires TSM cards loaded with the GLS application.

The STP LAN feature allows selected SS7 messages to be copied and sent to a remote host over an ethernet LAN using the TCP/IP protocol. This feature also requires the gateway screening feature and application communication modules (ACMs).

The Triggerless LNP (TLNP) feature gives service providers a method to route calls to ported numbers without having to upgrade their signaling switch (end office or mobile switching center) software. This feature uses the gateway screening stop action TLNP to intercept through-switched ISUP messages on the LIM.

The Link Fault Sectionalization (LFS) feature allows the system to perform a series of far end loopback tests that identify faulty segments of an SS7 transmission path up to and including the remote network element.

The ANSI MTP Restart (MTPRS) feature provides an orderly process for bringing signaling links back into service after the system has been isolated and restarted. A greater preference is given to restoring the STP to network service in an orderly fashion than to the speed of recovery. The time required is system dependent; Table 5-8 provides examples of some approximate times.

Table 5-8. Link Alignment Performance

System Size (No. of LIMs)	Link Alignment Delay (seconds)
Up to 64	62
64 to 127	97
128 to 191	132
More than 191	167

The ITU MTP Restart (ITUMTPRS) feature provides MTP restart support for ITU networks and extends the system's ANSI MTP restart support to mixed ITU and ANSI networks. The performance of ITU MTP Restart is comparable to the performance of ANSI MTP Restart.

SEAS interface support allows the system to interface with the Signaling Engineering and Administration System (SEAS).

The X.25/SS7 Gateway (X25G) feature allows cellular providers to connect their X.25 signaling networks to other providers SS7 network.

The SCCP and TCAP conversion features (SCCPCNV and TCAPCNV) allow the system to convert MTP-routed SCCP and TCAP messages from ANSI to ITU format and to convert ITU formatted messages to ANSI.

The PCS 1900 LNP (PLNP) feature provides for LNP query/response in a PCS wireless environment using the LRN method to support Service Provider Number Portability.

The Nested Cluster Routing (NCR) feature allows the system to support full point code entries on different routes within a cluster.

The Other CIC (Circuit Identification Code) Bit Used feature is one of two methods provided as ITU SLS enhancements for distributing the load across links in a combined and single linkset. The Other CIC Bit Used feature lets the system derive the LSB (Least Significant Bit) from bits 2 through 4 of the CIC to serve as the three lower bits of the SLS (Signaling Link Selection) and one other bit of the CIC to serve as the MSB (Most Significant Bit) of the SLS. The SLSOCB feature applies only to ITU-ISUP messages. The other method of distributing the load is rotation of the four bits of the SLS to change the LSB of the SLS. For additional information on bit rotation, see the **ent-ls** command.

The Network Routing (NR) feature allows provisioning of a single routeset to be used for all MSUs destined to members of that network.

The DSTN5000 (5000 Routes) feature provides the ability to administer up to 5000 routes on the system. If **dstn5000=on**, the values of the **mtpdpcq** (destination point code) and **mtpxlq** (exception list entries) parameters of the **chg-stpopts** command can total **5500**. Otherwise, the sum total for **mtpdpcq** and **mtpxlq** cannot exceed **2500**. The Cluster Routing and Management Diversity (CRMD) feature must be turned on before the **mtpxlq** parameter can be specified.

The MPC (Multiple Point Code) feature enables the user to use SPCs (secondary point codes) in addition to the true point codes that the EAGLE 5 ISS uses. The SPCs are used for provisioning and routing as if they were the true point code of the EAGLE 5 ISS. SPCs can be provisioned in any of the three domains (ANSI, ITU-N, and ITU-I). SPCs are supported for any type of link.

The ITUDUPPC (ITU National Duplicate Point Code) feature allows an EAGLE 5 ISS mated pair to route traffic for two or more countries that may have overlapping point code values.

The VGTT (Variable Length GTT) feature provides the ability to provision global title entries of varying lengths to a single translation type or GTT set. Users are able to assign global title entries of up to 10 different lengths to a single translation type or GTT set.

The Time Slot Counter Synchronization (TSCSYNC) feature allows the system's A (Active) and B (Standby) internal clocks to be synchronized by the GPSM-II card that is running the standby OAM.

The EAGLE 5 Integrated Monitoring Support feature provides an Ethernet interface between the EAGLE 5 ISS and the Sentinel Extended Services Platform (ESP) or the Integrated Message Feeder (IMF), to eliminate the need for cabling between each SS7 link and the ESP or IMF to monitor SS7 traffic.

The Measurements Platform feature provides a dedicated processor for collecting and reporting STP, LNP, INP, G-Flex, and G-Port Measurements data, with support for EAGLE 5 ISS growth to more than 700 links.

Output

chg-feat:gtt=on

```
rlghncxa03w 04-01-11 11:34:04 EST EAGLE 31.3.0
CHG-FEAT: MASP A - COMPLD
;
```

chg-frm-pwr

chg-frm-pwr

Use this command to change the power threshold value in the Frame Power Threshold table for a specified frame.

The entries in the Frame Power Threshold table contain a Frame ID and the corresponding power threshold value.

You can use the following commands to display the threshold and calculated maximum power consumption for the frames in the system.

- The **rtrv-frm-pwr** command displays the current provisioned frame power threshold for each provisioned frame.
- The **rtrv-stp:display=power** command displays the provisioned frame power threshold for each provisioned frame, and displays the maximum calculated power consumption for each frame, based on card population.

- The **rtrv-stp:display=power:frm=xxxx** command displays the provisioned frame power threshold for the specified frame, the maximum calculated power consumption for the frame based on card population, and the maximum power consumption for each card in the frame and for a fan assembly for each shelf.

NOTE: The frame-level power threshold value needs to be determined from the capacity in Amps of the fuse alarm panel (FAP) for the frame. Contact your site engineer to determine the FAP capacity.

Keyword: chg-frm-pwr

Related Commands: dlt-frm-pwr, ent-frm-pwr, rtrv-frm-pwr, rtrv-stp

Command Class: Database Administration

Parameters

:frm= (mandatory)

Frame ID

Range: cf00, ef00, ef01, ef02, ef03, ef04

cf00 — Control frame

ef00 — First extension frame

ef01 — Second extension frame

ef02 — Third extension frame

ef03 — Fourth extension frame

ef04 — Fifth extension frame

:thrshld= (mandatory)

Threshold. This parameter specifies the frame-level power threshold, in Amps. This value is compared with the current calculated maximum power consumption for the frame (use the **rtrv-stp:display=power:frm=** command to obtain the maximum power consumption value), and the appropriate alarms are raised if that power consumption exceeds the threshold limit.

The value of the **thrshld** parameter needs to be determined from the capacity of the fuse alarm panel (FAP) for the frame. Contact your site engineer to determine the frame FAP capacity.

Range: 30-65

Default: 30

Example

Change the frame power threshold value for the first extension frame.

chg-frm-pwr:frm=ef00:thrshld=58

Dependencies

A power threshold value must already be provisioned for the specified frame.

Notes

The maximum calculated power for a frame is based on the cards that are populated in the system, and includes a fan tray assembly for every shelf (the system cannot detect the presence or absence of a fan tray, and assumes presence for the calculation). These values are typically much higher than the actual power being drawn; the values cannot be used as a gauge of the actual power consumption of the EAGLE 5 ISS.

Output

chg-frm-pwr:frm=ef00:thrshld=58

```
tekelecstp 06-06-01 15:18:41 EST EAGLE 35.0.0
FRAME POWER THRESHOLD table is (4 of 10) 40% full
CHG-FRM-PWR: MASP A - COMPLTD
```

;

chg-ftp-serv

Change FTP Server Entry

Use this command to change an entry for an FTP server in the FTP Server table.

NOTE: Though the user parameter value is available, it is not for customer use unless directed by Tekelec Technical Support. The FTP-based Table Retrieve Application (FTRA) sends the necessary FTP Server information to the system, and the system overwrites any entry that is already in the FTP Server table for that server.

Keyword: chg-ftp-serv

Related Commands: `dlt-ftp-serv`, `ent-ftp-serv`, `rtrv-ftp-serv`

Command Class: Database Administration

Parameters

:app= (mandatory)

Application. This parameter specifies the FTP Client application that interfaces with the FTP server.

Range: meas, user, db, dist

meas—Measurements Platform application

user—FTP-based Table Retrieve Application (FTRA)

db— Database Backup\Restore application

dist—EAGLE 5 ISS Software Release Distribution application

:ipaddr= (mandatory)

IP Address of the FTP Server.

Range: 4 numbers separated by dots, with each number in the range of 0-255.

:login= (optional)

FTP Server Username (A prompt for entering a password appears on a separate line.)

Range: *zzzzzzzzzzzzzzzzzz*

1 to 15 alphanumeric characters; mixed-case is allowed

:path= (optional)

FTP path used to locate the file that will be sent.

Range: *////////////////////////////////////*
////////

Up to 100 characters; mixed-case string in double quotes with valid FTP path format

Default: User's home directory

:prio= (optional)

Priority of this FTP server when there is more than one FTP Server for this application.

Range: 1 - 10

Example

chq-ftp-

```
serv:app=meas:ipaddr=1.255.0.102:login=ftpmeas1:path="~/meas":prio=1
```

```
chg-ftp-serv:app=user:ipaddr=1.255.0.102:login=tekperson1:path=~\data":prio=1
```

Dependencies

At least one optional parameter must be specified.

The **app** parameter must specify an application that uses the FTP Support feature.

The **ipaddr** parameter must specify a valid IP address for the FTP server.

The **path** parameter value must be in a valid FTP path format.

The **prio** parameter specifies a priority for use of an FTP server by an application when the application has more than one FTP server defined in the table. Each FTP server defined for use by the application must have a priority from 1 to 10 assigned. The available FTP server with the highest priority (smallest number) will be used first by the application.

If the **login** parameter is specified, a separate prompt appears for entry of the FTP server password. You must enter a password that is at least 1 and not more than 15 characters long. If an invalid password is entered or the Return key is pressed without entering a password, the entire command must be entered again to cause the password prompt to appear again. The password is not displayed as it is entered.

An entry for the specified application ID at the specified priority cannot already exist.

The FTP server entry to be changed with this command must already exist in the FTP Server table for the specified IP address and application.

Notes

The same FTP server can be defined more than once, but the specified application must be different for each entry.

Output

```
chg-ftp-serv:app=meas:ipaddr=1.255.0.102:path="-ftpmeas1"
rlghncxa03w 04-01-20 09:07:58 EST EAGLE 31.3.0
CHG-FTP-SERV: MASP A - COMPLTD
;

chg-ftp-serv:app=meas:ipaddr=1.255.0.102:login=ftpmeas1
rlghncxa03w 04-01-20 09:07:58 EST EAGLE 31.3.0
Enter Password:*****
CHG-FTP-SERV: MASP A - COMPLTD
;

chg-ftp-serv:app=user:ipaddr=1.22.10.2:prio=3
rlghncxa03w 04-01-20 09:07:58 EST EAGLE 31.3.0
CHG-FTP-SERV: MASP A - COMPLTD
;
```

chg-gpl

Change Generic Program Load

Use this command to copy a generic program load from the system removable cartridge or drive to the destination active and standby system disks as a "trial" version. The system release identification file is uploaded from the system removable cartridge or drive to the active and standby fixed drives along with each GPL. This command also provides a parameter to turn GPL auditing "on" and "off".

Keyword: chg-gpl

Related Commands: act-gpl, alw-card, copy-gpl, init-card, init-sys, rept-stat-gpl, rtrv-gpl

Command Class: Program Update

Parameters

:gpl= (mandatory)

Generic program load. This parameter specifies the name of the GPL identifier to be moved from "trial" to "approved" status on cartridge or drive to the disk.

Range: ayyyyyy

1 alphabetic character followed by up to 6 alphanumeric characters. Valid GPLs are:
atmansi—The GPL is used by the LIM cards to support the high-speed ATM signaling link feature.

atmhc—This GPL is used to support the functionality for the E5-ATM card. The E5-ATM card runs either the ATMANSI or ATMITU application. The **atmhc** GPL allows the card to support up to 2 signaling links.

atmitu—The GPL is used by the E1 ATM cards to support the high-speed E1 ATM signaling link feature.

blbepm—A flash GPL containing the BIOS ROM image on E5-E1T1 cards and E5-ENET cards.

blbios—A flash GPL containing the BIOS ROM image on HC-MIM cards that are used for E1 or T1 signaling links.

blbsmg—A flash GPL containing the BIOS ROM image on E5-SM4G cards.

blcpld—A flash GPL containing the bit files for the CPLD on HC-MIM, E5-E1T1, and E5-ENET cards that are used for E1 or T1 signaling links.

bldiag6—A flash GPL containing the diagnostic code on E5-E1T1 cards, HC-MIM cards, and E5-ENET cards.

blmcap—A flash GPL containing a tar image with all code required on E5-MCAP cards.

blvxw6—A flash GPL containing the VxWorks operating system on E5-E1T1 cards, HC-MIM cards, and E5-ENET cards.

blrom1—A flash GPL containing the bootloader code for VxWorks operating system on HC-MIM cards.

bpdcm—This GPL is used in support the flash memory Board PROM for DCM, DSM, and GPSM boards, original design.

bpdcm2—This GPL is used in support the flash memory Board PROM for DCM and GPSM boards, revised design.

bphcap—This GPL is used to support Board PROM for HCAP flash memory.

bphcapt—This GPL is used to support Board PROM for HCAP-T flash memory.

bphmux—This GPL is used to support Board PROM for HMUX flash memory.

bpmpl—This GPL is used to support Board PROM for MPL flash memory.

bpmplt—This GPL is used to support Board PROM for E1/T1 flash memory and Board Prom for MPL-T flash memory.

ccs7itu—This GPL is used by the LIM cards for ITU-TSS MTP functionality.

cdu—This GPL is used in the card manufacturing process.

eoam—This GPL is used by the GPSM-II card for enhanced OAM functions.

eroute—This GPL is used by the STC card for EAGLE 5 Integrated Monitoring Support functions.

erthc—This GPL is used by the E5-ENET card when the card acts as an STC card (E5-STC card) for EAGLE 5 Integrated Monitoring Support functions.

gls—This GPL is used by the TSM cards for downloading gateway screening to LIM cards.

glshc—This GPL is used by the E5-TSM card for downloading gateway screening to LIM and SCCP cards.

hipr—The communication software used on the High Speed IMT Packet Router (HIPR) card.

imt—This GPL is the communication processor on the logical processing element (LPE).

imtpci—The communication software that operates the IMT bus on HC-MIM, E5-E1T1, and E5-ENET cards.

ipghc—This GPL is used by the E5-ENET card to support TCP/IP point-to-multipoint connectivity for ANSI and ITU point codes.

ipgwi—This GPL is used by the SSEDCCM card for TCP/IP point-to-point connectivity for ITU point codes.

iplhc—This GPL is used by the E5-ENET card for TCP/IP point-to-point connectivity for ANSI and ITU point codes.

iplim—This GPL is used by the SSEDCCM card for TCP/IP point-to-point connectivity for ANSI point codes.

iplimi—This GPL is used by the SSEDCCM card for TCP/IP point-to-point connectivity for ITU point codes.

ips—This GPL is used by the IPSM card for the IP User Interface feature.

ipsg—This GPL is used by the E5-ENET card to support the combined functionality of IPLIMx M2PA and IPGWx M3UA.

ipshc—This GPL is used by the E5-IPSM card to support the IPS application.

mcp—This GPL is used by the MCPM card for the Measurements Platform feature.

oamhc—This GPL is used by the E5-MCAP card for enhanced OAM functions.

pldpmc1—A flash GPL that is used on HC-MIM and E5-E1T1 cards for E1 and T1 signaling links.

sccp—This GPL is used by the TSM cards for the global title translation application. If the E5-SM4G card is present, then the **sccp** GPL processes normal GTT traffic.

sccphc—This GPL is used by the E5-SM4G cards to support the EPAP-based features and the LNP ELAP Configuration feature. If no EPAP-based or LNP ELAP Configuration feature is turned on, and if an E5-SM4G card is present, then the sccphc GPL processes normal GTT traffic.

ss7ansi—This GPL is used by the LIM cards for the MTP functionality.

ss7gx25—This GPL is used by the LIM cards to support X.25 functionality.

ss7hc—This GPL is used to support the functionality for the HC-MIM (High Capacity Multi-Channel Interface Module) card or the E5-E1T1 card. The HC-MIM card and the E5-E1T1 card run either the SS7ANSI or CCS7ITU application; this GPL allows the card to support up to 64 signaling links for E1 and T1 functions.

ss7ipgw—This GPL is used by the SSEDCCM card to support TCP/IP point-to-multipoint connectivity.

ss7ml—This GPL is used to support the functionality for the multi-port LIM (MPL) card and the E1/T1 MIM (Multi-Channel Interface Module) card. The MPL cards run only the SS7ANSI application on a LIMDS0 card (as in the command `ent-card:type=limds0:appl=ss7ansi`); the ss7ml GPL allows the card to support 8 signaling links rather than the usual 2 links for LIM cards. The MPL cards support only the DS0 interface. The E1/T1 MIM card runs either the SS7ANSI or CCS7ITU application; the ss7ml GPL allows the card to support 8 signaling links for E1 and T1 functions.

stplan—This GPL is used by the ACM card to support the STP LAN application.

utility—This GPL is used by the factory for testing, and when directed by your Customer Care Center.

vcdu—This GPL is used in the card manufacturing process.

vsccp—This GPL is used by Service Module cards to support the EPAP-based and the LNP ELAP Configuration features. If no EPAP-based or LNP ELAP Configuration feature is turned on, and if a Service Module card is present, then the vsccp GPL processes normal GTT traffic.

vxwslan—This GPL is used by the SSEDCCM card to support the STP LAN application.

The **bldiag** and **blvxw** flash GPLs are no longer supported.

:audit= (optional)

This parameter specifies whether the active MASP system release running version is to be audited every 90 seconds. The audit state is preserved through a system restart or power up.

NOTE: When audit is turned off, the system release audit process is stopped. The detection, marking, and reporting of corrupt GPLs is continuous and not affected by turning audit off.

Range: **on, off**

Default: **on**

:src= (optional)

Source drive. This parameter specifies the identification of the disk containing the GPL to be copied

Range: **remove, usb**

remove — The removable cartridge or drive

usb — The credit card drive

:ver= (optional)

Version number of the GPL, in the form of *major-minor-fix*.

Range: *major-minor-fix*

Specify a valid value for each component of the version number, in the range **0-255**

Example

```
chg-gpl:audit=on
```

```
chg-gpl:gpl=atmitu:ver=114-1-0
```

```
chg-gpl:gpl=sccphc:ver=128-1-0
```

```
chg-gpl:gpl=ipsg:ver=129-1-0
```

```
chg-gpl:gpl=atmhc:ver=125-1-0
```

Dependencies

No other activate, change, copy, or retrieve GPL command can be in progress when this command is entered.

If either the **ver** or the **gpl** parameter is specified, both parameters must be specified.

The **audit** parameter, or the **ver** and **gpl** parameters together, or the **audit**, **ver**, and **gpl** parameters together must be specified.

An E5-MCAP card must be installed before the **src=usb** parameter can be specified.

A credit card drive must be inserted in the Active OAM.

Notes

If there is a failure changing the active system, the operation is stopped. If there is a failure changing the standby system, the active system is still updated.

A removable cartridge or drive must be inserted into the removable cartridge drive or latched USB port, initialized, and formatted as a system disk.

Use the **rtrv-gpl** command to determine the version number and audit state of a GPL.

The **ver** and **gpl** parameters are mandatory if a generic program load is being uploaded from a removable cartridge.

The **audit** parameter is required only when turning GPL auditing on or off and the **ver** and **gpl** parameters are optional.

When the **audit** parameter is set to **off**, the system release audit process is stopped. The detection, marking, and reporting of corrupt GPLs is continuous and not affected by turning audit off.

Output

The output for a successful command execution is in the following format; the name of the uploaded GPL is shown for card locations 1114 and 1116.

```
chg-gpl:gpl=ss7hc:ver=125-1-0
rlghncxa03w 09-03-01 11:43:04 EST EAGLE 40.1.0
SS7HC upload to 1114 completed
SS7HC upload to 1116 completed
System Release ID table upload to 1116 completed
System Release ID table upload to 1114 completed
```

;

The following example shows an error in the upload.

```
chg-gpl:gpl=bphcap:ver=101-014-000
rlghncxa03w 06-06-01 11:43:04 EST EAGLE 35.0.0
BPHCAP corrupted on 1117 removable: mismatched checksums
;
```

chg-gsm-msg

Change GSM test message

Use this command to provision GSM test messages. These messages are used by the MO SMS NPP Test Tool to test MO-based GSM SMS message processing by the NPP.

Keyword: chg-gsm-msg

Related Commands: rtrv-gsm-msg, tst-msg

Command Class: Database Administration

Parameters

:msgn= (mandatory)

Message number. This parameter specifies the GSM message number to be changed.

Range: 1-10

:active= (optional)

This parameter specifies whether the GSM test message is sent to the network card for processing.

Range: yes, no

yes — The message is sent to the network card.

no — The message is not sent to the network card.

Default: No change to the current value

System

Default: no

:cdpadgts= (optional)

Called party address digits. This parameter specifies the SCCP CdPA digits for the GSM test message.

Range: 1-15 digits

1 - 15 hexadecimal digits. Valid digits are **0-9, a-f, A-F**.

Default: No change to the current value

System

Default: 0123456789abcde

:cdpagti= (optional)

Called party address global title indicator. This parameter specifies the SCCP CdPA GT for the GSM test message.

Range: 0-15

Default: No change to the current value

System**Default: 4****:cdpagtnai= (optional)**

Called party address global title nature of address indicator. This parameter specifies the SCCP CdPA GT NAI for the GSM test message.

Range: 0-127**Default:** No change to the current value**System****Default: 4****:cdpndgts= (optional)**

Called party number digits. This parameter specifies the TCAP CdPN (*SM-RP-UI TP-DA*) digits for the GSM test message.

Range: 1-20 digits**Default:** No change to the current value**System****Default: 01234567890abcde****:cdpnnai= (optional)**

Called party number nature of address indicator. This parameter specifies the TCAP CdPN (*SM-RP-UI TP-DA*) NAI for the GSM test message.

Range: 0-7**Default:** No change to the current value**System****Default: 1****:cdpnp= (optional)**

Called party numbering plan. This parameter specifies the TCAP CdPN (*SM-RP-UI TP-DA*) NP for the GSM test message.

Range: 0-15**Default:** No change to the current value**System****Default: 1****:cgpadgts= (optional)**

Calling party address digits. This parameter specifies the SCCP CgPA digits for the GSM test message.

Range: 1-15 digitsRange is 1 - 15 hexadecimal digits. Valid digits are **0-9, a-f, A-F**.**Default:** No change to the current value**System****Default: 0123456789abcde****:cgpagti= (optional)**

Calling party address global title indicator. This parameter specifies the SCCP CgPA GT for the GSM test message.

Range: 0-15**Default:** No change to the current value.**System****Default: 4****:cgpagtnai= (optional)**

Calling party address global title nature of address indicator. This parameter specifies the SCCP CgPA GT NAI for the GSM test message.

Range: 0-127
Default: No change to the current value
System
Default: 4

:cgpndgts= (optional)

Calling party number digits. This parameter specifies the TCAP CgPN (*SM-RP-OA MSISDN*) for the GSM test message.

Range: 1-21 digits
Default: No change to the current value
System
Default: 01234567890abcde

:cgpn nai= (optional)

Calling party number nature of address indicator. This parameter specifies the TCAP CgPN (*SM-RP-OA MSISDN*) NAI for the GSM test message.

Range: 0-7
Default: No change to the current value
System
Default: 1

:cgpnnp= (optional)

Calling party numbering plan. This parameter specifies the TCAP CgPN (*SM-RP-OA MSISDN*) NP for the GSM test message.

Range: 0-15
Default: No change in the current value.
System
Default: 1

:reset= (optional)

This parameter resets all of the parameters to their system default values.

Range: **yes, no**
yes — Message parameters are reset to their default values
no — None of the message parameters are reset.
Default: No change to the current value

Example

```
chg-gsm-  
msg:msgn=1:cdpnai=4:cdpadgts=12457896abcd:cgpnai=2:cgpndgts=919  
818541560  
chg-gsm-msg:msgn=1:reset=yes
```

Dependencies

The TSTMSG table is corrupt or cannot be found.

If the **reset** parameter is specified, then no other parameter can be specified.

Output

```
chg-gsm-msg:msgn=1:cdpnai=4:cdpndgts=987654321:cgpnai=4  
tekelecstp 09-03-02 10:46:51 EST EAGLE 40.1.0  
CHG-GSM-MSG: MASP A - COMPLTD  
  
;
```

chg-gsmmap-scrn**Change GSM MAP Screening Entry**

Use this command to change the attributes (**nforbid**, **npc/npca/npci/npcn/npcn24**, **nssn**, **ncgsr**, **ncdsr**, **naction**, **nri** and **ntt**) of GSM Map Screening CgPA and CdPA entries that are used to filter out or allow SCCP messages containing Map Op-Codes, CgPA GTA+NPV+NAIV, CdPA GTA+NPV+NAIV, and forbidden parameters.

Keyword: **chg-gsmmap-scrn**

Related Commands: **dlt-gsmmap-scrn**, **ent-gsmmap-scrn**, **rtrv-gsmmap-scrn**

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:cgsr= (mandatory)

CgPA Screening Reference.

Range: *ayyy*

1 alphabetic character followed by up to 3 optional alphanumeric characters

:opname= (mandatory)

The user-defined name for the operation code. The **opname** value references the operation code (**opcode**) defined with the **ent-gsms-opcode** command. GSM MAP Screening is performed on the specified address or addresses for the referenced operation code.

Range: *ayyyyyyy*

Up to 8 alphanumeric characters

:cdsr= (optional)

CdPA Screening Reference.

Range: *ayyy*

1 alphabetic character followed by up to 3 optional alphanumeric characters

:force= (optional)

Check Mated Application Override. This parameter must be used to complete command execution if the **npc/npca/npci/npcn** and **nssn** parameter combination specified in the command is not already defined in the SCCP Application entity set (Remote Point Code/Mated Application Table).

Range: **yes, no**

Default: **no**

:naction= (optional)

The new screening action to take if a message is forbidden as defined by the **forbid** parameter.

Range: **atierr, discard, dupdisc, duplicate, forward, pass, route**

atierr — Do not route the MSU. An ATI (Any Time Interrogation) reject message is generated to the originator. This value is valid only for ATI MAP operation codes.

discard — Do not route the MSU. The MSU is discarded (thrown away) and an appropriate UIM is issued.

dupdisc — Route the original message to the duplicate node. The original message will not be sent to the original node. If, however, the duplicate node is not available for routing, the MSU is discarded.

duplicate — Route the message as normal to the original destination and route a copy of the original message to the duplicate node. If the MSU fails to route to the duplicate node, a UIM is generated indicating the duplicate routing failure.

forward — Route the original message to the forward node. The original message will not be sent to the original node. If, however, the forward node is not available for routing, the MSU is routed to the original node.

pass— Route the message as normal to the destination; a UIM will be issued. This is intended to be a test mode and is recommended when setting up GSM Map Screening during the initial phase to assure that no MSUs will be inadvertently thrown away.

route— Route the message as normal to the original destination node; no UIM will be generated. The original destination is the node to which normal GTT would be sent if no GSM MAP actions are taken.

Default: No change to current value

:ncdsr= (optional)

The new CDPA Screening Reference.

Range: *ayyy*

1 alphabetic character followed by up to 3 optional alphanumeric characters

:ncgsr= (optional)

The new CGPA Screening Reference.

Range: *ayyy*

1 alphabetic character followed by up to 3 optional alphanumeric characters

:nforbid= (optional)

The new forbidden parameter value. Indicates a forbidden parameter for the specified entry. If a forbidden parameter is detected, the message is handled with the action defined by the **action/naction** parameter.

Range: **all, none, state, location**

all—All parameters are forbidden. Take the specified screening action defined by the **naction** parameter for messages arriving at the system.

none—None of the parameters are forbidden. Route the message to its destination.

state—Take the specified screening action defined by the **naction** parameter for messages arriving at the system that contain **state** as the forbidden parameter for the entered address/operation code combination. **Note:** The **state** parameter is valid only for GSM ATI messages.

location—Take the specified screening action defined by the **naction** parameter for messages arriving at the system that contain **location** as the forbidden parameter for the entered address/operation code combination. **Note:** The **location** parameter is valid only for GSM ATI messages.

Default: No change to current value

:nmapset= (optional)

The new MAP set ID.

Range: **1-36000 dflt**

dflt—Default MAP set

Default: No change to the MAP set value.

:npc= (optional)

New ANSI point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Synonym: **npca**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001-005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006-255**.

The point code **000-000-000** is not a valid point code.

:npc/npc/npci/npcn/npcn24= (optional)

New point code. The **npc/npc/npci/npcn/npcn24** and **nssn** parameters are used when the new screening action (**naction**) is **forward**, **duplicate**, or **dupdisc** (duplicate and discard). These parameters allow the craftsperson to change the defined node to which the input message will be routed.

:npci= (optional)

New ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

:npcn= (optional)

New ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfnti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:npcn24= (optional)

New 24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

:nri= (optional)

New routing indicator. This parameter specifies whether a subsequent global title translation is required.

This parameter can be specified only if the screening action is **forward**, **duplicate** or **dupdisc**.

Range: **gt, ssn**

:nssn= (optional)

New Subsystem Number. The **npc/npc/npci/npcn/npcn24** and **nssn** parameters are used when the new screening action (**naction**) is **forward**, **duplicate**, or **dupdisc** (duplicate and discard). These

parameters allow the craftsperson to change the defined node to which the input message will be routed.

Range: 002 - 255 none

Default: No change to the existing value

:ntt= (optional)

New translation type. This parameter specifies the value that the CdPA TT is set to as the result of Enhanced GSM Map Screening.

This parameter can be specified only if the screening action is forward, duplicate, or dupdisc.

Range: 0-255 none

Default: No change to the existing value

Example

```
chg-gsmmap-scrn:opname=xyz:cgsr=fela:naction=pass
```

```
chg-gsmmap-scrn:opname=xyz:cgsr=fela:cdsr=fall:naction=discard
```

```
chg-gsmmap-scrn:opname=test2:cgsr=pcn1:npcn=s-333:nssn=254
```

```
chg-gsmmap-
```

```
scrn:opname=test1:naction=forward:npc=2-2-2:nssn=20:nmapset=12
```

```
chg-gsmmap-
```

```
scrn:opname=test2:naction=duplicate:npc=1-1-2:nssn=20:cgsr=cg1:nmapset=dfll
```

```
chg-gsmmap-scrn:opname=test3:cgsr=ad:nri=ssn
```

```
chg-gsmmap-scrn:opname=test4:cgsr=ksl:ntt=12
```

Dependencies

At least one optional parameter must be specified.

If the **cdsr** parameter is specified, at least one additional optional parameter must be specified.

If the **ncdsr** parameter is specified, then the **cdsr** parameter must be specified.

If the **cdsr** parameter is specified, then the **ncgsr** parameter cannot be specified.

The **ncgsr** parameter and the **ncdsr** parameter cannot be specified together in the same command.

The specified **cgsr** parameter value must exist in the database.

The specified **cdsr** parameter value must exist in the database.

The specified **ncgsr** parameter value cannot already exist in the database.

The specified **ncdsr** parameter value cannot already exist in the database.

The GSM Map Screening feature (see the **enable-ctrl-feat** command) must be turned on before this command can be entered.

The Enhanced GSM Map Screening (EGMS) feature must be turned on before the **cdsr**, **ncdsr**, **pc**, and **pca** parameters can be specified.

The specified **opname** parameter value must exist in the GSM Map Op-Code table.

A value of **state** or **location** cannot be specified for the **nforbid** parameter unless the operation code (**opcode**) referenced by the **opname** parameter is **71**. The **opcode=71** parameter signifies an ATI MAP operation code.

A value of **atierr** cannot be specified for the **naction** parameter unless the operation code (**opcode**) referenced by **opname** is **71**. The **atierr** option is valid only for ATI MAP operation codes; **opcode=71** signifies an ATI MAP operation code.

If specified, the **npc/npca/npci/npcn/npcn24** parameter must be a full point code.

If the **naction** parameter is specified, and its value is **forward**, **duplicate**, or **dupdisc**, then the **npc/npc/npci/npci/npcn24** parameter and the **nssn** parameter must be specified.

The **force** parameter can be specified only if the **npc/npci/npci/npci/npcn24** parameter and the **nssn** parameter are specified.

If the **npc/npci/npci/npci/npcn24** parameter and the **nssn** parameter are specified, and the **force** parameter is not specified as **yes**, the PC-SSN must be populated in the SCCP Application entity set (Remote Point Code / Mated Application Table).

If specified, the **npc/npci/npci/npci/npcn24** parameter value must exist as a destination in the Ordered Route entity set (ANSI only), or must reside in a cluster that exists as a destination in the Ordered Route entity set (for global title routing).

The **npc/npci/npci/npci/npcn24** and **nssn** parameters can be specified only if the **naction** parameter is specified and its value is **forward**, **duplicate**, or **dupdisc**.

If the value of the **naction** parameter is **forward**, **duplicate**, or **dupdisc**, then the **nmapset** parameter must be specified.

The **naction** parameter must have a value of **forward**, **duplicate**, or **dupdisc** before the **npc/npci/npci/npci/npcn24**, **nssn**, **nri**, **ntt**, or **naction** parameters can be specified. If the **naction** parameter has a value of **forward**, **duplicate**, or **dupdisc**, then the **npc/npci/npci/npci/npcn24** parameter and the **nssn** parameter must be specified.

The Flexible GTT Load Sharing feature must be enabled before the **nmapset** parameter can be specified.

The specified new MAP set must exist in the MAP table.

If the value of the **nmapset** parameter is not **dflt**, or if the **nmapset=dflt** parameter is specified, but the value of the **force** parameter is not **yes**, then the values for the **npc** and **nssn** parameters must exist in the new MAP set.

If the **nmapset**, **nri**, or **ntt** parameter is specified, and the **naction** parameter is not specified, then the **action** parameter (see the **ent-gsmmap-scrn** command) must have a value of **forward**, **duplicate**, or **dupdisc**.

The **force** parameter can be specified only if the **nmapset** parameter is specified.

If the value of the **naction** parameter is **forward**, **duplicate**, or **dupdisc**, then the value specified for the **npc/npci/npci/npci/npcn24** parameter cannot be associated with a proxy point code.

If the **nri=ssn** parameter is specified, then the **nssn=none** parameter cannot be specified.

If the **nforbid=none** parameter is specified, then the **naction** parameter must have a value of **pass**.

Notes

Unlike GTT (Global Title Translation) entries, the GSM MAP Screening commands do not support splits of ranges during deletion or changes of entries.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-).

Output

```

chg-gsmmap-
scrn:opname=test2:naction=duplicate:npc=1-1-2:nssn=20:cgsr=cg1:nm
apset=dflt
    tekelecstp 06-05-29 13:24:41 EST  EAGLE 35.0.0
    GSM Map Screening table is (3 of 4000) 1% full
    CHG-GSM MAP-SCRN: MASP A - COMPLTD
;

chg-gsmmap-scrn:opname=test3:cgsr=ad:nri=ssn
    tekelecstp 08-01-18 17:34:53 EST  EAGLE 38.0.0
    GSM Map Screening Table (4 of 4000) is 1% full
    CHG-GSM MAP-SCRN: MASP A - COMPLTD
;

chg-gsmmap-scrn:opname=test4:cgsr=ksl:ntt=12
    tekelecstp 08-08-20 19:13:01 EST  EAGLE 39.2.0
    GSM MAP Screening Table (1 of 4000) is 1% full
    CHG-GSM MAP-SCRN: MASP A - COMPLTD
;

```

chg-gsmopts

Change GSM System Options

Use this command to enter GSM (Global System for Mobile Telecommunications) system options in the database. This command updates the GSMSOPTS Table.

Keyword: chg-gsmopts

Related Commands: chg-gsmsmsopts, rtrv-gsmopts, rtrv-gsmsmsopts

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

NOTE: The following parameters are no longer available in this command: mosmsdnfmt, mosmsdnai, mosmsfwd, mosmsgta, mosmsnai, mosmssa, mosmstype, mtmsmsi, mtmsn, mtmsnakerr, mtmsn, mtmsackn, mtmschksrc, mtmsmsi, mtmsn, mtmsdltr, mtmsdltrv, mtmsnakerr, mtmmstype, mtmmsackn, and mtmmmsgta. Use the chg-gsmsmsopts command to modify these parameters.

:ccnc= (optional)

E214 country code and network code. The G-Flex feature must be turned on before this parameter can be specified.

This parameter is mandatory if the **mccmnc** parameter is specified.

Range: 2-8 digits

Default: No change to current value

:defmapvr= (optional)

Default MAP version. The G-Port feature or the IS41 GSM Migration feature must be enabled before this parameter can be specified.

Range: 1-3

Default: No change to the current value

System

Default: 1

:defmcc= (optional)

E212 default mobile country code. The G-Flex feature or the G-Port feature must be turned on or the MT-Based GSM SMS NP feature must be enabled before this parameter can be specified.

Range: 3 digits, **none**

Valid digits are **0-9, A-F, a-f**.

none—Deletes the current value for the **defmcc** parameter.

Default: No change to the current value

System

Default: **none**

:defmnc= (optional)

E212 default mobile network code. The G-Flex feature must be turned on before this parameter can be specified.

Range: 1-4 digits, **none**

Valid digits are **0-9, A-F, a-f**.

none—Deletes the current value for the **defmnc** parameter.

Default: No change to the current value

System

Default: **none**

:eirgrsp= (optional)

Equipment Identity Register (EIR) Global Response status. The EIR feature must be enabled and turned on before this parameter can be specified. When a value other than **off** is specified, EIR responds according to the specified value.

Range: **off, whitelst, graylst, blklst, unknown**

off—EIR Global Response is not used.

whitelst—Indicates that the IMEI is “valid” and registration should be allowed for this handset.

graylst—Indicates that the IMEI is “questionable.” Registration should be allowed, but the event is logged in the EIR log and a special measurement peg is incremented.

blklst—Indicates that the IMEI is “invalid” and registration should not be allowed for this handset.

unknown—Indicates that the IMEI is not in the White list, the Gray list, or the Black list and registration should not be allowed for this handset.

Default: No change to the current value

System

Default: **off**

:eirimschk= (optional)

Equipment Identity Register (EIR) IMSI Check status. This parameter is not valid for IMEI ranges.

Range: **on, off**

Default: No change to the current value

System

Default: **off**

:eirrsptype= (optional)

Equipment Identity Register (EIR) Response Type. The EIR feature must be turned on before this parameter can be specified.

Range: **type1, type2, type3**

Table 5-9 contains information to help you choose the value for this parameter.

Table 5-9. EIR Response Type (**eirrsptype**) Values

Presence in List			EIR Response Type		
White	Gray	Black	Type 1	Type 2	Type 3
X			in white list	in white list	in white list
X	X		in gray list	in gray list	in gray list
X	X	X	in black list	in black list	in black list
X		X	in black list	in black list	in black list
	X		in gray list	in gray list	unknown
	X	X	in black list	in black list	unknown
		X	in black list	in black list	unknown
			in white list*	unknown*	unknown*

* This entry in the table indicates that there has been no match found for the IMEI in an incoming message within the database.

Default: No change to the current value

System

Default: **type1**

:gflexmaplayerrtg= (optional)

G-Flex MAP layer routing status. This parameter specifies whether G-Flex MAP layer routing is performed. The G-flex MAP Layer Routing feature must be enabled and turned on before this parameter can be specified.

Range: **on, off**

Default: No change to current value

System

Default: **off**

:gsm2is41= (optional)

GSM to IS41 migration prefix. The IS41 GSM Migration (IGM) feature must be turned on before this parameter can be specified.

Range: 1-15 digits, **none**

Valid digits are **0-9, A-F, a-f**.

none—Deletes the current value of the **gsm2is41** parameter.

Default: No change to the current value

System

Default: **none**

:is412gsm= (optional)

IS-41 to GSM migration prefix. To specify this parameter, the G-Port feature must be turned on.

Range: Valid digits are **0-9, A-F, a-f**.

none—Deletes the current value of the **is412gsm** parameter.

:is412gsm= (optional)

IS41 to GSM migration prefix. The IGM feature must be turned on before this parameter can be specified.

Range: 1-15 digits, **none**
Valid digits are **0-9, A-F, a-f**.
none—Deletes the current value of the **is412gsm** parameter.

Default: No change to the current value

System

Default: **none**

:mccmnc= (optional)

E212 mobile country code and mobile network code. The G-Flex feature must be turned on before this parameter can be specified.

This parameter is mandatory if the **ccnc** parameter is specified.

Range: 4-7 digits, **none**
Valid digits are **0-9, A-F, a-f**.
none—Deletes the current **mccmnc** and **ccnc** parameter combination entry.

Default: No change to current value

:migrpfx= (optional)

Migration prefix. This parameter specifies whether the database routing number (RN) or the GSM to IS-41 Migration prefix is used as the source for the prefix in the SRI ACK response message for a migrated subscriber.

The IGM feature must be enabled before this parameter can be specified. The G-Port feature must be turned on before the **migrpfx=multiple** parameter can be specified.

Range: **single, multiple**
single— The RN from the RTDB lookup is not used as the prefix in the SRI Ack. If the **gsm2is41** parameter has a value other than **none**, then that value is used as the prefix in the SRI Ack Response.
multiple— The RN from the database lookup is used as the prefix in the SRI Ack response.

Default: No change to the current value

System **single** - A value of **single** is the system default value for a new system, or for a system that upgraded to 36.0 without the IGM feature being turned on. If the IGM feature was turned on before upgrade to 36.0, then a value of **multiple** is hardcoded as the system default value.

Default:

:msisdntrunc= (optional)

MS ISDN truncation digits. Specifies number of digits to delete from the beginning of the National MSISDN (MSISDN without Country Code) before formulating the MSRN parameter of the SRI-ack response. The G-Port feature or the IGM feature must be enabled before this parameter can be specified.

Range: **0-5**

Default: No change to current value

System

Default: **0**

:msrndig= (optional)

The routing number to be used as is or to be concatenated with the MSISDN. The G-Port feature or the IGM feature must be enabled before this parameter can be specified.

Range: **rn, rndn, ccrndn, rnccdn, rnasd, asdrn, rnasddn, asdrndn, ccrnasddn, ccasdrndn, rnasdcdn, asdrnccdn**
rn— Routing number
rndn— Routing number prefix and the international DN (dialed/directory number)
ccrndn— Country code, routing number, and national directory number
rnccdn— Routing number, country code and directory number
rnasd— Routing number and additional subscriber data
asdrn— Additional subscriber data and routing number

rnasddn— Routing number, additional subscriber data, and directory number
asdrndn— Additional subscriber data, routing number, and directory number
ccrnasddn— Country code, routing number, additional subscriber data, and directory number
ccasdrndn— Country code, additional subscriber data, routing number and directory number
rnasdccdn— Routing number, additional subscriber data, country code, and directory number
asdrnccdn— Additional subscriber data, routing number, country code, and directory number

Default: No change to the current value

System

Default: **rn**

:msrnnai= (optional)

The nature of address indicator value for the MSRN. The G-Port feature or the IGM feature must be enabled before this parameter can be specified.

This parameter is mandatory if the **msrnnp** parameter is specified.

Range: **0-7**

0—Unknown Nature of Address
1—International Number
2—National Significant Number
3—Network Specific Number
4—Subscriber Number
5—Reserved for national use
6—Abbreviated Number
7—Reserved for extension

Default: No change to current value

:msrnnp= (optional)

The numbering plan value for the MSRN. The G-Port feature or the IGM feature must be enabled before this parameter can be specified.

This parameter is mandatory if the **msrnnai** parameter is specified.

Range: **0-15**

Default: No change to current value

:multcc= (optional)

Multiple country code.

NOTE: The G-Port or IGM feature must be enabled or the V-Flex feature must be turned on before this parameter can be specified.

Range: 1-3 digits
Valid digits are **0-9, A-F, a-f**.

Default: No change to current value

:nmultcc= (optional)

New multiple country code. This parameter changes the **multcc** value to the specified **nmultcc** value, or deletes the **multcc** value if **nmultcc=none** is specified.

NOTE: The G-Port or IGM feature must be enabled or the V-Flex feature must be turned on before this parameter can be specified.

Range: 1-3 digits, **none**
Valid digits are **0-9, A-F, a-f**.
none—Deletes the specified **multcc** value from the multiple country code list.

Default: No change to current value

:nppmsgta= (optional)

New entity address of an Intelligent Network (IN) platform for the Prepaid SMS Intercept Phase 1 (PPSMS) feature. The PPSMS feature must be turned on before this parameter can be specified.

Range: Valid digits are **0-9, A-F, a-f**.

none—Deletes the specified **nppmsgta** parameter value.

:serverpfx= (optional)

Server SRI prefix. The G-Port feature or the IGM feature must be enabled before this parameter can be specified.

Range: 1-4 digits, **none**

Valid digits are **0-9, A-F, a-f**.

none—No Server SRI prefix is provisioned

Default: No change to current value

System

Default: **none**

:srfaddr= (optional)

Entity address of the MNP_SRF node. The G-Port feature or the IGM feature must be enabled before this parameter can be specified.

This parameter is mandatory if the **srfnai** and **srfnp** parameters are specified.

Range: 1-15 digits, **none**

Valid digits are **0-9, A-F, a-f**.

none—Deletes the current value for the **srfaddr** parameter.

Default: No change to current value

System

Default: **none**

:srfnai= (optional)

The nature of address indicator value of the MNP_SRF. The G-Port feature or the IGM feature must be enabled before this parameter can be specified.

This parameter is mandatory if the **srfaddr** and **srfnp** parameters are specified.

Range: **0-127**

Default: No change to current value

:srfnp= (optional)

The numbering plan value of the MNP_SRF. The G-Port feature or the IGM feature must be enabled before this parameter can be specified.

This parameter is mandatory if the **srfnai** and **srfaddr** parameters are specified.

Range: **0-15**

Default: No change to current value

:sridn= (optional)

The Send Routing Information Dialed Number location. The G-Port feature or the IGM feature must be enabled before this parameter can be specified.

Range: **tcap, sccp**

Default: No change to current value

System

Default: **tcap**

:sridnnotfound= (optional)

This parameter specifies the processing that is used when G-Port encounters an RTDB query result that indicates that the specified directory number is not known.

Range: **gtt, srinack**

gtt—GTT is performed on the message for routing to an HLR

srinack— an SRI negative acknowledgement is generated and returned to the calling party

Default: No change to the current value

System

Default: gtt

Example

```
chg-
gsmopts:msisdntrunc=1:srfaddr=123456789abcdef:srfnai=0:srfnp=0
chg-gsmopts:msrnnai=1:msrnp=1:msrndig=ccrndn:defmapvr=2
chg-gsmopts:sridn=sccp
chg-gsmopts:is412gsm=1234:gsm2is41=1234
chg-gsmopts:serverpfx=1000
chg-gsmopts:multcc=011
chg-gsmopts:multcc=011:nmultcc=11
chg-gsmopts:ccnc=33322123:mccmnc=21434
chg-gsmopts:eirimsichk=on:eirsptype=type2:eirgrsp=blk1st
chg-gsmopts:migrpfx=multiple
chg-gsmopts:sridnnotfound=srinack
chg-gsmopts:defmcc=214:defmnc=34
chg-gsmopts:msrndig=rnasd
```

Dependencies

At least one parameter must be specified.

The G-Flex feature must be turned on before the **defmnc**, **ccnc**, or **mccmnc** parameter can be specified.

The G-Port feature or IGM feature must be enabled before the following parameters can be specified: **defmapvr**, **srfaddr**, **msrndig**, **msrnnai**, **sridn**, **msisdntrunc**, **is412gsm**, **gsm2is41**, **serverpfx**.

An **is412gsm** parameter value must exist in the database before the **serverpfx** parameter can be specified.

The **serverpfx** value must be set to **none** in the database before the **is412gsm** value can be set to **none**.

The EIR feature must be enabled and turned on before the following parameters can be specified: **eirgrsp**, **eirsptype**, **eirimsichk**.

The **ccnc** and **mccmnc** parameter values must be specified together in the command.

A maximum of 10 **ccnc** records can exist in the database.

The value specified for the **ccnc** parameter cannot already exist in the database unless the **mccmnc=none** parameter is specified.

The **srfaddr**, **srfnai**, and **srfnp** parameters must be specified together in the command.

The **msrnnai** and **msrnp** parameters must be specified together in the command.

The value specified for the **ccnc** parameter must already exist in the database if the **mccmnc=none** parameter is specified.

A maximum of 10 entries can be defined in the multiple country code list (in addition to the STP options **defcc** value).

A multiple country code cannot be entered when the STP options **defcc** value is none. A **defcc** value must first be defined before the first multiple country code can be entered. See the **chg-stpopts** command.

If the **multcc** parameter is specified to enter a new value in the multiple country code list, then the value specified for the parameter cannot already exist in the list.

The value specified for the **nmultcc** parameter cannot already exist in the multiple country code list.

If the **multcc** and **nmultcc** parameters are specified to change the specified **multcc** value to the specified **nmultcc** value, then the specified **multcc** value must already exist in the multiple country code list.

The specified **multcc** and **nmultcc** values cannot already be defined as the STP options **defcc** parameter value.

The IGM feature must be enabled before the **is412gsm**, **gsm2is41**, or **migrpfx** parameter can be specified.

The G-Port, IGM, MO-based GSM SMS, MO-based IS41 SMS, or MO SMS IS41-to-GSM Migration feature must be enabled, or the G-Flex, EIR, or V-Flex feature must be turned on before this command can be entered.

The G-Port or IGM feature must be enabled or the V-Flex feature must be turned on before the **multcc** and **nmultcc** parameters can be specified.

The G-Flex MAP Layer Routing feature must be enabled and turned on before the **gflexmaplayererrtg** parameter can be specified.

The G-Flex feature or G-Port feature must be turned on or the MT-Based GSM SMS NP feature must be enabled before the **defmcc** parameter can be specified.

If the MT-Based GSM SMS NP feature is turned on, then the **defmcc=none** parameter cannot be specified.

The **nmultcc** and **multcc** parameters must be specified together in the command.

If the **multcc** parameter is specified to enter a new value in the multiple country list, then the specified value cannot already exist in the list.

The IGM or MO SMS IS41-to-GSM Migration feature must be enabled before the **is412gsm** parameter can be specified.

The G-Port feature must be enabled before the **sridnnotfound** parameter can be specified.

The G-Port feature must be turned on before the **migrpfx=multiple** parameter can be specified.

The EGLEOPTS table is corrupt or cannot be found.

Notes

The **sridn** parameter can be used with the G-Port feature only or with the G-Port feature and the MNP Circular Route Prevention feature. Refer to the *Feature Manual - G-Port* for more information.

If the IGM feature was turned on prior to upgrade to Release 36.0, then the migration prefix is hard-coded to a value of **multiple**. After upgrade, if the **chg-gsmopts:migrpfx=single** command is used to change the migration prefix to **single**, then the G-Port feature must be turned on before the migration prefix can be changed back to **multiple** (**chg-gsmopts:migrpfx=multiple**).

Output

```
chg-gsmopts:msrnnai=1:msrnp=1:msrndig=ccrndn:defmapvr=2
tekelecstp 08-05-01 10:19:51 EST EAGLE 39.0.0
CHG-GSMOPTS: MASP A - COMPLTD
```

;

chg-gsms-opcode**Change GSM MAP Screening Operation Code**

Use this command to change the attributes of the GSM (Global System for Mobile Telecommunication) MAP (mobile application part) screening operation codes. The command allows you to change the default screening action and the operation-code name for a specific operation code.

Keyword: **chg-gsms-opcode**

Related Commands: **dlt-gsms-opcode**, **ent-gsms-opcode**, **rtrv-gsms-opcode**

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:opname= (mandatory)

Operation code name. This parameter specifies the user-defined name for the operation code. The **opname** value is defined with the **ent-gsms-opcode** command.

Range: *ayyyyyyy*
Up to 8 alphanumeric characters

:force= (optional)

Check Mated Application Override. This parameter must be used to complete command execution if the **npc/npca/npai/npcn/npcn24** and **nssn** parameter combination specified in the command is not already defined in the SCCP Application entity set (Remote Point Code/Mated Application Table).

Range: **yes, no**

Default: **no**

:ndfltact= (optional)

New default screening action.

Range: **pass, discard, atierr, route, forward, duplicate, dupdisc**

pass—Route the message as normal to the destination; a UIM will be issued. This is intended to be a test mode and is recommended when setting up GSM Map Screening during the initial phase to assure that no MSUs will be inadvertently thrown away.

discard—Do not route the MSU. The MSU is discarded (thrown away) and an appropriate UIM is issued.

atierr—Do not route the MSU. An ATI (Any Time Interrogation) reject message is generated to the originator. This value is valid only for ATI MAP operation codes.

route—Route the message as normal to the original destination node; no UIM will be generated. The original destination is the node to which normal GTT would be sent if no GSM MAP actions are taken.

forward—Route the original message to the forward node. The original message will not be sent to the original node. If, however, the forward node is not available for routing, the MSU is routed to the original node.

duplicate—Route the message as normal to the original destination and route a copy of the original message to the duplicate node. If the MSU fails to route to the duplicate node, a UIM is generated indicating the duplicate routing failure.

dupdisc—Route the original message to the duplicate node. The original message will not be sent to the original node. If, however, the duplicate node is not available for routing, the MSU is discarded.

Default: No change to the existing value

:nmapset= (optional)

New MAP set ID.

Range: 1-36000 dflt
dflt—Default MAP set

:nopname= (optional)

This parameter specifies the new user-defined name for the operation code.

Range: ayyyyyy
Up to 8 alphanumeric characters

Default: No change to current value

:npc= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Synonym: npca

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001–005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006–255.

The point code 000-000-000 is not a valid point code.

:npc/npca/npci/npcn/npcn24= (optional)

New point code. The **npc/npca/npci/npcn/npcn24** and **nssn** parameters are used when the default screening action (**dfltact**) is **forward**, **duplicate**, or **dupdisc** (duplicate and discard). These parameters allow the craftsperson to change the defined node to which the input message will be routed.

:npci= (optional)

New ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

:npcn= (optional)

New ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfnti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: s-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:npcn24= (optional)

New 24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:nri= (optional)

New routing indicator. This parameter specifies whether a subsequent global title translation is required.

This parameter can be specified only when the screening action is **forward**, **duplicate** or **dupdisc**.

Range: **gt, ssn**

:nssn= (optional)

New Subsystem Number. The **npc/npc/npci/npcn/npcn24** and **nssn** parameters are used when the new default screening action (**ndfltact**) is **forward**, **duplicate**, or **dupdisc** (duplicate and discard). These parameters allow the craftsperson to change the defined node to which the input message will be routed.

Range: **002 - 255 none**

Default: No change to the existing value

:ntt= (optional)

New translation type. This parameter specifies the value that the CdPA TT is set to as the result of Enhanced GSM Map Screening.

This parameter can be specified only if the screening action is forward, duplicate, or dupdisc.

Range: **0-255 none**

Default: No change to the existing value

Example

chg-gsms-opcode:opname=ati:ndfltact=atierr

chg-gsms-

opcode:opname=ati:ndfltact=forward:npci=1-1-1:nssn=5:force=yes

chg-gsms-opcode:opname=xyz:npc=9-9-9:nssn=3

chg-gsms-opcode:opname=test2:npci=s-1-1-1

chg-gsms-

opcode:opname=test2:ndfltact=dupdisc:npci=1-1-1:nssn=5:nmapset=8

chg-gsms-

opcode:opname=ts4:ndfltact=forward:npc=1-1-2:nssn=5:nmapset=dflt

chg-gsms-opcode:opname=test:nri=ssn

chg-gsms-opcode:opname=test4:ntt=12

Dependencies

At least one optional parameter must be specified.

If the **ndfltact** parameter is specified and its value is **forward**, **duplicate**, or **dupdisc**, the **npc/npc/npci/npci/npcn/npcn24** and **nssn** parameters must be specified.

The reserved word **none** cannot be specified as a value for the **opname** parameter or **nopname** parameter.

If the **npc/npc/npci/npci/npcn/npcn24** and **nssn** parameters are specified with the **ndfltact** parameter, the **ndfltact** parameter value must be **forward**, **duplicate**, or **dupdisc**.

The **force** parameter can be specified only if the **npc/npc/npci/npci/npcn/npcn24** parameter and the **nssn** parameter are specified.

The value specified for the **opname** parameter must already exist in the GSM Map Op-Code table.

The GSM Map Screening feature (see the **enable-ctrl-feat** command) must be turned on before this command can be entered.

The EGMS feature must be enabled and turned on before the **npc** or **npca** parameters can be specified.

The **ndfltact=atierr** parameter cannot be specified unless the value of the operation code referenced by the **opcode** parameter is **71**. The **atierr** option is valid only for ATI MAP operation codes, and the **opcode=71** parameter signifies an ATI MAP operation code.

If specified, the **npc/npc/npci/npci/npcn/npcn24** parameter value must be a full point code.

If the **npc/npc/npci/npci/npcn/npcn24** parameter and the **nssn** parameter are specified, and the **force** parameter is not specified as **yes**, the PC-SSN must be populated in the SCCP Application entity set (Remote Point Code / Mated Application Table).

If specified, the **npc/npc/npci/npci/npcn/npcn24** parameter value must exist as a destination in the Ordered Route entity set or reside in a cluster (ANSI only) that exists as a destination in the Ordered Route entity set (for global title routing).

The **nmapset** parameter must be specified if the value of the **ndfltact** parameter is **forward**, **duplicate**, or **dupdisc**.

If the **ndfltact** parameter is specified with the **nmapset**, **nri**, or **ntt** parameters, or the **pc** or **ssn** parameters, then the **ndfltact** parameter must have a value of **forward**, **duplicate**, or **dupdisc**.

The **force** parameter can be specified only if the **nmapset** parameter is specified.

The Flexible GTT Load Sharing feature must be enabled before the **nmapset** parameter can be specified.

The specified new MAP set must exist.

If the **nmapset=dflt** parameter is not specified, or the **nmapset=dflt** parameter is specified, but the **force=yes** parameter is not specified, then the new PC and new SSN must exist in the new MAP set.

If the **nmapset**, **nri**, or **ntt** parameter is specified, and the **ndfltact** parameter is not specified, then the **ndfltact** parameter must have a previously provisioned value of **forward**, **duplicate**, or **dupdisc**.

If the value of the **ndfltact** parameter is **forward**, **duplicate**, or **dupdisc**, then the value specified for the **npc/npc/npci/npci/npcn/npcn24** parameter cannot be associated with a proxy point code.

If the **nri=ssn** parameter is specified, then the **ssn=none** parameter cannot be specified.

Notes

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-).

Output

```

chg-gsms-
opcode:opname=ts4:ndfltact=forward:npc=1-1-2:nssn=5:nmapset=dflt
tekelecstp 06-06-01 10:19:51 EST EAGLE 35.0.0
CHG-GSMS-OPCODE: MASP A - COMPLTD
;
chg-gsms-opcode:opname=test:nri=ssn
tekelecstp 08-01-18 17:32:16 EST EAGLE 38.0.0
CHG-GSM-OPCODE: MASP A - COMPLTD
;
chg-gsms-opcode:opname=test4:ntt=12
tekelecstp 08-08-20 19:13:01 EST EAGLE 39.2.0
CHG-GSM-OPCODE: MASP A - COMPLTD
;

```

chg-gsmsmsopts**Change GSM SMS System Options**

Use this command to enter GSM SMS system options in the database. This command updates the GSMSMSOPTS table.

Keyword: chg-gsmsmsopts

Related Commands: chg-gsmopts, rtrv-gsmopts, rtrv-gsmsmsopts

Command Class: Database Administration

Parameters

NOTE: The parameters for the chg-gsmsmsopts command are dependent on various MO-based or MT-based features. The features and their associated parameters are as follows:

- **MO SMS ASD**—mosmsfwd, mosmsgta, mosmssa, mosmsnai, and mosmaclen
- **MO SMS B-Party Routing**—bpartygttsn and mosmsgttdig
- **MO SMS GRN**—mosmsfwd, mosmsgta, mosmssa, mosmsnai, and mosmaclen
- **MO-based GSM SMS NP**—mosmsfwd, mosmsgta, mosmssa, mosmstype, mosmsnai, mosmsdigmat, mosmstcapseg, and mosmaclen
- **MT-based GSM MMS NP**—mtmmsackn, mtmmsgta, and mtmmstype
- **MT-based GSM SMS NP**—mtsmsackn, mtsmsdltr, mtsmsdltrv, mtsmsimsi, mtsmsnni, mtsmsnakerr, mtsmschksrc, and mtmsmstype
- **Portability Check for MO SMS**—mosmsdigmat and mosmstcapseg
- **Prepaid SMS Intercept Ph1**—mosmssa, mosmsnai, and mosmaclen

NOTE: As of Release 40.1, the mosmsdnfmt and mosmsdnai parameters are obsolete.

:bpartygttsn= (optional)

MO SMS B-Party Routing GTT Set name. This parameter specifies the GTT set where Global Title Translation lookup on B-Party digits is performed.

Range: ayyyyyyyy

1 leading alphabetic and up to 8 following alphanumeric characters.

Default: No change to the current value

System

Default: none

:mosmsaclen= (optional)

This parameter specifies the number of the digits that are taken from the MO SMS CgPA and used as the Area Code in the MO SMS CdPA.

Range: 0-8

Default: No change to the current value

System

Default: 0

:mosmsdigmat= (optional)

MO-based SMS Home SMSC match. This parameter specifies the method used by the Portability Check for MO SMS or the MO-based GSM SMS NP feature to find a Home SMSC match.

Range: exact, bestfit

exact — The system searches for an exact match of digits in the HomeSMSC Table.

bestfit — The system searches for a match on the leading digits of an incoming message with any provisioned entry in HomeSMSC table if an exact match is not found.

Default: No change to the current value

System

Default: exact

:mosmsfwd= (optional)

MO-based SMS forward. This parameter specifies whether the value of the SCCP CDPA in the MO-based SMS message is modified to the GTA value that is specified by the **mosmsgta** parameter.

Range: yes, no

yes — The SCCP CDPA value is modified.

no — The SCCP CDPA value is not modified.

The **mosmsgta** parameter must be specified before the **mosmsfwd=yes** parameter can be specified.

Default: No change to the current value

System

Default: no

:mosmsgta= (optional)

MO-based SMS GTA. This parameter specifies the GTA value that is used to replace the SCCP CDPA value in the MO-based SMS message.

Range: 5-21 digits, none

Default: No change to the current value

System

Default: none

:mosmsgttdig= (optional)

MO SMS B-Party Routing GTT digits. This parameter specifies the digits that are used for Global Title Translation.

Range: sccpcdpa, mapbparty

sccpcdpa — The SCCP CdPA is used for GTT.

mapbparty — The MAP B-Party number is used for GTT.

Default: No change to the current value

System

Default: sccpcdpa

:mosmsnai= (optional)

MO-based SMS NAI. This parameter specifies the number conditioning that is performed on the SMS message destination address before lookup in the number portability database is performed.

Range: intl, nai, nat, unknown

intl — Number is treated as INTL for number conditioning.

nai — The NAI from the SMS message is used to perform number conditioning.
nat — Number is treated as NATL for number conditioning.
unknown — Number is treated as UNKNOWN for number conditioning.

Default: No change to the current value

System

Default: **intl**

:mosmssa= (optional)

MO-based SMS sub-address. This parameter specifies whether sub-address is searched in the SMS called party (destination address).

Range: **yes, no**

yes — Sub-address is searched in the SMS called party.

no — Sub-address is not searched in the SMS called party.

Default: No change to the current value

System

Default: **no**

:mosmstcapseg= (optional)

MO-based SMS TCAP Segmentation for GSM. This parameter specifies whether Mobile-Originated segmented TCAP messages are supported.

Range: **on, off**

on — Segmented messages are supported.

off — Segmented messages are not supported.

Default: No change to the current value

System

Default: **off**

:mosmstype= (optional)

MO-based SMS type. This parameter specifies the value of the entity type that indicates that a successful lookup occurred in the number portability database.

Range: **sp, rn, sprn, all**

sp — signaling point

rn — routing number

sprn — Lookup is successful if the value of the entity type is **sp** or **rn**.

all — Lookup is successful if the value of the entity type is **sp** or **rn**, or if no entity type is found.

Default: No change to the current value

System

Default: **sprn**

:mtmmsackn= (optional)

MT-Based MMS acknowledgement. This parameter specifies the message that is generated in response to a successful number portability database lookup for an SRI_SM message from a Home MMSC.

Range: **ack, nack**

ack — SRI_SM_ACK message

nack — SRI_SM_NACK (Return Error) message

Default: No change to the current value

System

Default: **ack**

:mtmmsgta= (optional)

MT-Based MMS GTA. This parameter specifies the GTA that is compared with the SCCP CgPA GTA of an SRI_SM message to determine whether the originator of the message is a Home MMSC.

Range: 5-21 digits, **none**
Valid digits are **0-9, A-F, a-f**.
none—Deletes the current value of the **mtmmsgta** parameter.

Default: No change to the current value

System

Default: **none**

:mtmmstype= (optional)

MT-Based MMS type. This parameter specifies the value of the entity type that indicates that a successful lookup occurred in the number portability database.

Range: **sp, rn, sprn, all, nonsp**
sp— signalling point
rn— routing number
sprn— **sp** or **rn**
all— **sp, rn**, or DN with no entity
nonsp— **rn** or DN with no entity

Default: No change to the current value

System

Default: **rn**

:mtsmsackn= (optional)

MT-Based SMS acknowledgement. This parameter specifies the message that is generated in response to a successful number portability database lookup for an SRI_SM message from a Home SMSC.

Range: **ack, nack**
ack— SRI_SM_ACK message
nack— SRI_SM_NACK (Return Error) message

Default: No change to the current value

System

Default: **ack**

:mtsmschksrc= (optional)

MT-Based SMS check source. This parameter specifies whether the SCCP CgPA GTA of a SRI_SM message is validated to determine if the source of the message is a Home SMSC.

Range: **yes, no**
yes— The SCCP CgPA GTA of an SRI_SM message is validated.
no— The SCCP CgPA GTA of an SRI_SM message is not validated.

If the **mtsmschksrc=yes** parameter is specified, and if the incoming SRI_SM message has SCCP CgPA GTA, then the SCCP CgPA GTA must be found in the Home SMSC list for the source of the message to be considered a Home SMSC. If the message is not found in the Home SMSC list, then the MT-Based GSM SMS NP feature does not process the message.

If the **mtsmschksrc=no** parameter is specified, or if SCCP CgPA GTA does not exist in the incoming message, then the source of the message is considered to be a Home SMSC, and the MT-Based GSM SMS NP feature considers the message for processing.

Default: No change to the current value

System

Default: **no**

:mtsmsdltr= (optional)

MT-Based SMS delimiter. This parameter specifies whether to insert a delimiter digit string before or after the routing number (RN) if the RN is used in the outbound digit format. The delimiter string that is inserted is determined by the **mtsmsdltrv** parameter.

Range: **no, prern, postrn**

no — A delimiter digit string is not inserted.
prern — A delimiter digit string is inserted before the RN.
postrn — A delimiter digit string is inserted after the RN.

Default: No change to the current value

System

Default: **no**

:mtsmsdltrv= (optional)

MT-Based SMS delimiter value. This parameter specifies the delimiter digit string that is inserted before or after the RN when the RN is used in the outbound digit format.

This parameter must be specified if the value specified for the **mtsmsdltr** parameter is **prern** or **postrn**.

Range: 1-5 digits, **none**
Valid digits are **0-9, A-F, a-f**.

Default: No change to the current value

System

Default: **none**

:mtsmsimsi= (optional)

MT-Based SMS IMSI. This parameter specifies the required format of digits that are encoded in the “IMSI” parameter of the SRI_SM response message.

Range: **rn, rndn, ccrndn, dn, srfimsi, mccrndn**
rn — routing number
rndn — routing number and the international dialed or directory number
ccrndn — country code, routing number, and national directory or dialed number
dn — directory or dialed number
srfimsi — IMSI is encoded as the “SRFIMSI” parameter from the number portability database.
mccrndn — mobile country code, routing number, and directory or dialed number

Default: No change to the current value

System

Default: **mccrndn**

:mtsmsnakerr= (optional)

MT-Based SMS negative acknowledgement error. This parameter specifies the TCAP error choice code used in the NACK response message generated for SRI_SM messages.

Range: **0-255**
Default: No change to the current value
System
Default: **1**

:mtsmsnni= (optional)

MT-Based SMS network node indicator. This parameter specifies the required format of digits that are encoded in the “Network Node Number” parameter of the SRI_SM response message.

Range: **rn, rndn, ccrndn, dn, srfimsi, mccrndn, none**
rn — routing number
rndn — routing number and the international dialed or directory number
ccrndn — country code, routing number, and national directory or dialed number
dn — Directory or Dialed Number
srfimsi — IMSI is encoded as the “SRFIMSI” parameter from the number portability database.
mccrndn — mobile country code, routing number, and directory or dialed number.
none — The Network Node Number parameter is not encoded in the response message.

Default: No change to the current value

System**Default:** **rn****:mtsmstype=** (optional)

MT-Based SMS type. This parameter specifies the value of the entity type that indicates that a successful lookup occurred in the number portability database for messages that are modified by the MT-Based GSM SMS NP feature.

Range: **sp, rn, sprn, all, nonsp****sp** — signalling point**rn** — routing number**sprn** — **sp** or **rn****all** — **sp, rn**, or DN with no entity**nonsp** — **rn** or DN with no entity**Default:** No change to the current value**System****Default:** **rn****:mosmsdnfmt=** (obsolete)

MO-based SMS directory number format. This parameter specifies the format for the digits in the outgoing message.

This parameter is Obsolete.

Range: **rn, rndn, ccrndn****rn** — routing number (RN is used if available, otherwise DN is used)**rndn** — routing number+directory number**ccrndn** — country code + routing number + directory number**Default:** **rndn****:mosmsdnnai=** (obsolete)

MO-based SMS directory number NAI. This parameter specifies the NAI that is used in the outgoing message.

This parameter is Obsolete.

This parameter modifies only the NAI field of the message.

Range: **0-7, none****0**—unknown nature of address**1**—international number**2**—national significant number**3**—network specific number**4**—subscriber number**5**—reserved for national use**6**—abbreviated number**7**—reserved for extension**none**—The NAI from the incoming message is used.**Default:** **none****Example**

```
chg-gsmsmsopts:mosmsnai=intl:mosmstype=sp:mosmssa=no
```

```
chg-gsmsmsopts:mosmsfwd=no:mosmsgta=987654321
```

```
chg-  
gsmsmsopts:mtsmsnakerr=55:mtsmsimsi=dn:mtsmsnni=rndn:mtsmstype=sp  
rn
```

```
chg-  
gsmsmsopts:mtsmsackn=nack:mtsmsdltr=no:mtsmsdltrv=125:mtsmschksrc  
=no
```

```
chg-gsmsmsopts:mtmsgta=51111:mtmmstype=sp:mtmmsackn=nack
```

```
chg-gsmsmsopts:mosmsdigmat=bestfit
```

```
chg-gsmsmsopts:bpartygttsn=setint001:mosmsgttldig=mapbparty
```

```
chg-gsmsmsopts:mosmsac len=4
```

The following example sets the GSM SMS option when the Portability Check for MO SMS or MO-based GSM SMS NP feature is turned on.

```
chg-gsmsmsopts:mosmstcapseg=on
```

Dependencies

At least one parameter must be specified.

The Hex Digit Support for GTT feature must be enabled before a hexadecimal value for the **mosmsgta** parameter can be specified.

The **mosmsgta** parameter must be specified before the **mosmsfwd=yes** parameter can be specified.

The **mtsmsdltrv** parameter must be provisioned before a value of **prern** or **postrn** can be specified for the **mtsmsdltr** parameter.

The value specified for the **bpartygttsn** parameter must match the name of an existing GTT Set.

The **mosmsgttldig=sccpcdpa** parameter must be specified before the **bpartygttsn=none** parameter can be specified.

The GTT set specified for the **bpartygttsn** parameter must have **settype=cdgta** (see the **ent-gttset** command).

If the **bpartygttsn=none** parameter is specified, then the **mosmsgttldig=mapbparty** parameter cannot be specified.

The GTT Set table is corrupt or cannot be found.

The EGLEOPTS table is corrupt or cannot be found.

The MO-based GSM SMS NP, MO SMS ASD, or MO SMS GRN feature must be enabled before the **mosmsfwd** or **mosmsgta** parameter can be specified.

The Portability Check for MO SMS feature or the MO-based GSM SMS NP feature must be turned on before the **mosmsdigmat** or **mosmstcapseg** parameter can be specified.

The MT-Based GSM SMS NP feature must be enabled before the **mtsmsimsi**, **mtsmsnni**, **mtmmstype**, **mtsmsackn**, **mtsmsdltr**, **mtsmsdltrv**, **mtmsnakerr**, or **mtsmschksrc** parameters can be specified.

The MT-Based GSM MMS NP feature must be enabled before the **mtmsgta**, **mtmmstype**, or **mtmmsackn** parameters can be specified.

The MO SMS B-Party Routing feature must be enabled before the **bpartygttsn** or **mosmsgttldig** parameter can be specified.

The MO-based GSM SMS NP feature must be enabled before the **mosmstype** parameter can be specified.

The MO SMS ASD, MO SMS GRN, MO-based GSM SMS NP, or Prepaid SMS Intercept Ph feature must be enabled before the **mosmsac len**, **mosmsnai**, or **mosmssa** parameter can be specified.

If a digit string value has already been specified for the **mosmsgta** or **mtsmsdltrv** parameter, then a value of **none** cannot be specified subsequently for that parameter.

Notes

The **mosmstcapseg** parameter is turned off automatically if the Portability Check for MO SMS feature is turned off or the temporary FAK for the feature expires, and the MO-based GSM SMS NP feature is not enabled.

Output

```
chg-gsmsmsopts:mosmstcapseg=on:mosmsdigmat=bestfit
rlghncxa03w 08-04-20 03:05:15 EST EAGLE 39.0.0
CHG-GSMSMSOPTS: MASP A - COMPLTD
;
```

chg-gta

Change Global Title Address Information

Use this command to change the global title address information (GTA) for applicable global title selectors required to specify a global title entry.

This command changes the routing objects for messages requiring global title translations. The specified point code, subsystem number, MRN set ID, and routing indicator overwrite the existing data values.

When the Intermediate GTT Load Sharing feature and the Flexible GTT Load Sharing feature are both on, multiple relationships can be defined among a set of destination point codes in the existing MRN table. The relationship used in a particular translation is based on the GTA digits used for translation. The MRN Set ID and the post-translation PC create a key that is used to perform a lookup in the MRN table. This lookup results in a set of alternate PCs from which a PC is selected, based on relative cost, to route the MSU in most cost-effective way.

Keyword: **chg-gta**

Related Commands: **dlt-gta, ent-gta, rtrv-gta**

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:gttsn= (mandatory)

GTT set name. A GTT set is an entity to which global title addresses and selectors are assigned.

Range: *aaaaaaaa*

1 leading alphabetic and up to 8 following alphanumeric characters.

:ccgt= (optional)

Cancel called global title indicator.

Range: **yes, no**

Default: No change to **ccgt** value

:cggtasn= (optional)

CgPA GTA GTT set name.

Range: *aaaaaaaa, none*

1 leading alphabetic and up to 8 following alphanumeric characters.

none—Set names do not point to the CgGTA set.

:cggtmod= (optional)

Calling party GT modification indicator. This parameter specifies whether calling party global title modification is required.

Range: yes, no
Default: no

:cgpc= (optional)

ANSI CgPA point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Synonym: cgpc

Range: 000-255, *

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

The asterisk (*) value is not valid for the *ni* subfield.

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001–005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006–255.

When **chg-sid:pctype=ansi** is specified, *ni*-*-* is valid if *ni* = 006–255.

The point code 000-000-000 is not a valid point code.

:cgpci= (optional)

ITU international CgPA point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

:cgpcn= (optional)

ITU national CgPA point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npclfnti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: s-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:cgpcn24= (optional)

24-bit ITU national CgPA point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—**000–255**

sp—**000–255**

:cgpcsn= (optional)

CgPA GTA GTT set name.

Range: *aaaaaaaa*, **none**

1 leading alphabetic character and up to 8 following alphanumeric characters.

none—Set names do not point to the CgPA set.

:cgssn= (optional)

The subsystem number of the start CgPA.

Range: **0-255**

:cgssnsn= (optional)

CgPA SSN GTT set name.

Range: *aaaaaaaa*, **none**

1 leading alphabetic and up to 8 following alphanumeric characters.

none—Set names do not point to the CgSSN set.

:ecgssn= (optional)

Subsystem number of the end CgPA.

Range: **0-255**

:egta= (optional)

End global title address. This parameter specifies the end of a range of global title digits.

Range: 1-21 digits

If the Hex Digit Support for GTT feature is not enabled and on, the range is 1-21 decimal digits; valid digits are **0-9**.

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are **0-9, a-f, A-F**.

Default: Same as the specified **gta** value

:force= (optional)

Check mated application override.

Range: **yes, no**

Default: **no**

:gta= (optional)

Global title address. This parameter specifies the beginning of a range of global title digits.

Range: 1-21 digits

If the Hex Digit Support for GTT feature is not enabled and on, the range is 1-21 decimal digits; valid digits are **0-9**.

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are **0-9, a-f, A-F**.

:loopset= (optional)

SCCP loopset name. This parameter associates a translation set with a loopset.

Range: *aaaaaaaa*, **none**

One leading alphabetic character and up to 7 following alphanumeric characters.

none—Disassociates the translation set from all loopsets.

:mapset= (optional)

MAP set ID. This parameter specifies the Mated Application set ID.

Range: **1-36000 dflt**

dflt—Default MAP set

:mrnset= (optional)

MRN set ID. This parameter specifies the Mated Relay Node set ID.

Range: 1-3000 none, dflt

dflt—Default MRN set

none—The GTA translation does not participate in any load sharing.

:ngti= (optional)

New GTI code. When the ANSI-ITU-China SCCP Conversion and AMGTT features are on and the Translated Point Code is of a different network type, this parameter specifies whether the new GTI translation format is GTI type 2 or GTI type 4.

Range: 2, 4

:nnai= (optional)

New nature of address indicator. This parameter specifies the nature of address indicator that will replace the received nature of address indicator.

Range: 0-127

Default: If the **rmgtt=no** parameter is specified, there is no change to the current value.

If the **rmgtt=yes** parameter is specified, the value resets to a default of 0.

:nnp= (optional)

New numbering plan. This parameter specifies the numbering plan that will replace the received numbering plan.

Range: 0-15

Default: If the **rmgtt=no** parameter is specified, there is no change to the current value.

If the **rmgtt=yes** parameter is specified, the value resets to a default of 0xFFFF.

:npdd= (optional)

New prefix digits to be deleted. This parameter specifies the new prefix digits to be deleted that will replace the received prefix digits to be deleted.

Range: 0-21

Default: If the **rmgtt=no** parameter is specified, there is no change to the current value.

If the **rmgtt=yes** parameter is specified, the value resets to a default of 0xFFFF.

:npds= (optional)

New prefix digits string. This parameter specifies the new prefix digits string that will replace the received prefix digits string.

Range: 1-21 digits

If the Hex Digit Support for GTT feature is not enabled and on, the range is 1 - 21 decimal digits; valid digits are 0-9.

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are 0-9, a-f, A-F.

Default: If **:rmgtt=no** is specified, no change to current value

If **:rmgtt=yes** is specified, resets to default value of no digits.

:nsdd= (optional)

New suffix digits to be deleted. This parameter identifies the new suffix digits to be deleted that will replace the received suffix digits to be deleted.

Range: 0-21

Default: 0

:nsds= (optional)

New suffix digits string. This parameter specifies the new suffix digits string that will replace the received suffix digits string.

Range: 1-21 digits
 If the Hex Digit Support for GTT feature is not enabled and on, the range is 1 - 21 decimal digits; valid digits are **0-9**.
 If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are **0-9, a-f, A-F**.
Default: No digits

:ntt= (optional)

New translation type. The point code domain translation types for EGTT are handled by the EAGLE 5 ISS protocol processing as either ANSI or ITU; therefore, ITU applies to ITU-I, ITU-I Spare, ITU-N, and ITU-N Spare. ITU-I includes ITU-I Spare, and ITU-N includes ITU-N Spare.

Range: **000-255**

Default: If the **xlat** parameter does not change from **dpcngt**—No change to the current value.
 If the **xlat** parameter changes from **dpcngt**—The **ntt** parameter value is removed.

:opc= (optional)

ANSI originating point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: **opca**

Range: **000-255, ***

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

The asterisk (*) value is not valid for the *ni* subfield.

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

When **chg-sid:pctype=ansi** is specified, *ni*-*-*** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:opci= (optional)

ITU international originating point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:opcn= (optional)

ITU national originating point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npfnti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:opc24= (optional)

24-bit ITU national originating point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:opcsn= (optional)

The new OPC GTT set name.

Range: *ayyyyyyy*, **none**

1 leading alphabetic character and up to 8 following alphanumeric characters.

:pc= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: **pca**

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:pci= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:pcn= (optional)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private

and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:pcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*. The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

Default: No change to current value.

:ri= (optional)

Routing indicator.

Range: **gt, ssn**

Default: No change to current value.

:rmgtt= (optional)

Reset MGTT. This parameter resets all GT Modification fields to default values before applying values for other parameters in the command.

Range: **yes, no**

Default: **no**

:selid= (optional)

Selector ID.

Range: **0-65534 none**

:split= (optional)

Split or change an existing GTA range.

Range: **yes, no**

yes—Splits the existing GTA range.

no—Changes the existing GTA range.

Default: **yes**

:ssn= (optional)

Subsystem number.

Range: **002-255**

Default: If the **xlat** parameter is not changed to **dpcngt**—No change to current value.

If the **xlat** parameter is changed to **dpcngt**—The **ssn** parameter value is removed.

:xlat= (optional)

Translate indicator. This parameter is used to specify translation actions and routing actions.

Range: **dpc, dpcngt, dpcssn, udts, disc**

Default: No change to current value.

Example

chg-
gta:gttsn=lidb:gta=9195554321:xlai=dpcssn:ri=ssn:pc=001-255-252:sn=254

chg-
gta:gttsn=test:gta=100000:egta=199999:pca=1-1-1:xlai=dpcngt:ri=gt:rmgtt=yes :nnp=3:nnai=120

chg-gta:gttsn=setnat003:gta=987658321198765432102:pcn=s-129

chg-gta:gttsn=itui1:gta=987658321198765432112:pci=s-1-210-1

chg-gta:gttsn=setnat003:gta=987658321198765432122:pcn=s-128-aa

The following examples require the Flexible GTT Load Sharing feature to be ON.

chg-
gta:gttsn=setmap:gta=2345678901:egta=3456789012:ri=ssn:PC=1-1-3:sn=225:mapset=2

chg-
gta:gttsn=setmap:gta=2345678911:egta=3456789022:ri=ssn:PC=2-2-2:sn=221:mapset=df lt

In the following example, the database contains a GTA range [5556000-5558000], but no part of the GTA range [5558001-5559000] exists. The command deletes the GTA range [5556000-5558000] from the database and adds two new GTA ranges [5556000-5556799] and [5556800-5559000].

chg-gta:gttsn=tst1:gta=5556800:egta=5559000:split=yes

The following command deletes the GTA range [5556000-5556799] from the database and adds a new GTA range [5556200-5556500] to the database. All the parameters for specified GTA range [5556200-5556500] have the same values as that of the deleted [5556000-5556799] GTA range, except the pc parameter that is assigned the specified value of 1-1-2.

chg-gta:gttsn=tst1:gta=5556200:egta=5556500:pc=1-1-2:split=no

The following command deletes the GTA range [5556200-5556500] from the database and adds two new GTA ranges [5556200-5556400] and [5556401-5556500] to the database.

chg-gta:gttsn=tst1:gta=5556401:egta=5556500

The following example specifies the default MRN set.

chg-gta:gttsn=setmrn:gta=1234567880:pc=1-1-2:mrnset=df lt

The following example specifies the mrnset=none parameter to remove the MRN set ID.

chg-
gta:gttsn=setmrn:gta=1234567890:egta=2234567890:pc=1-1-2:mrnset=none

The following example specifies MRN set ID 2.

chg-
gta:gttsn=setmrn:gta=2345678901:egta=3456789012:pc=1-1-3:mrnset=2

chg-
gta:gttsn=setcdgta:gta=123456789012345678901:egta=223456789012345678901:cggtasn=cggtas1:opcsn=opc1

chg-
gta:gttsn=setcdgta:gta=123456789012345678901:egta=223456789012345678901:selid=1024:opcsn=opc1

```
chg-
gta:gttsn=setcdgta:gta=123456789012345678901:egta=223456789012345
678901:cggtasn=none
```

```
chg-
gta:gttsn:setcggtta:gta=323456789012345678901:egta=323456789012345
678901:cgssnsn=none
```

```
chg-gta:gttsn=setopc:opca=002-001-001:xlat=dpcssn:ri=ssn:
pca=001-001-001:ssn=20:cgssnsn=setcgssnsn
```

```
chg-gta:gttsn=setcgpc:cgpca=001-001-001:xlat=dpcssn:ri=ssn:
pca=001-001-001:ssn=20:cgssnsn=setcgssn
```

```
chg-gta:gttsn=setcgssn:cgssn=100:ecgssn=200:xlat=dpcssn:ri=ssn:
pca=001-001-001:ssn=20
```

```
chg-gta:gttsn=set1:gta=2543:egta=2943:xlat=disc
```

```
chg-gta:gttsn=set2:cgpc=1-2-*:xlat=udts
```

```
chg-gta:gttsn=set3:opcn=2543:xlat=udts
```

```
chg-gta:gttsn=set4:cgssn=25:ecgssn=29:xlat=disc
```

The following example specifies hexadecimal digits for the gta, egta, and npds parameters.

```
chg-gta:gttsn=set1:gta=abcd:egta=abce:npds=fab
```

```
chg-
gta:gttsn=setmap:gta=2345678901:egta=3456789012:ri=ssn:pc=1-1-3:s
sn=225:mapset=2:loopset=raleigh1
```

The following example specifies that calling party GT modification is required.

```
chg-gta:gttsn=setans004:cggtmod=yes:gta=981234
```

Dependencies

The EGTT feature must be turned on before this command can be entered.

The AMGTT feature must be turned on before the **rmgtt**, **nnp**, **nnai**, **ngti**, **nsdd**, **nsds**, **npdd**, and **npds** parameters can be specified.

The ANSI-ITU-China SCCP Conversion feature must be enabled and turned on before the **ngti** parameter can be specified.

The ANSI-ITU-China SCCP Conversion feature must be enabled and turned on before a translated point code that is of a different domain than the **gttsn** can be specified.

The **nsdd**, **nsds**, **npdd**, and **npds** parameters cannot be changed with this command. Use the **rmgtt** parameter to reset all GT Modification entry values to their default values, and enter the command again to specify new GT Modification parameter values.

At least one optional parameter must be specified.

The **ssn**, **ri**, **cgssn**, or **ecgssn** parameters cannot have an asterisk (*) as a value.

The **gttsn** parameter cannot have a value of **none**.

The point code specified for the **pc** parameter must be a full point code.

If the **egta** parameter is specified, the values of the **gta** and **egta** parameters must be the same length.

If the **ngti=4** parameter is specified, the **nnp** and **nnai** parameters must be specified.

If the **ngti=4** parameter is specified, the translated point code cannot be ANSI. For ANSI point codes, the GTI value must be 2.

If the **ngti=2** parameter is specified, the **nnp** and **nnai** parameters cannot be specified.

If the **ccgt** parameter is specified, the **ngti** parameter cannot be specified. If the **ngti** parameter is specified, the **ccgt** parameter cannot be specified.

If the ANSI-ITU-China SCCP Conversion feature is not on, and the specified GTT set is an ANSI set, then the **pc/pca** parameter must be a valid ANSI point code.

If the ANSI-ITU-China SCCP Conversion feature is not on, and the specified GTT set is an ITU set, the **pci/pcn/pcn24** parameter must be a valid ITU point code.

The length of the specified **gta** parameter must match the number of digits provisioned for the specified GTT set (**gttsn**). If the VGTT (variable length GTT) feature is turned on, then there can be up to 10 GTA lengths per GTT set. When the **ent-gta** command is entered to create entries, the software keeps track of the lengths and allows only 10 different lengths. The global title address specified for the GTT set must have the same number of digits as an existing GTA.

The specified **gta/egta** range must exist for the specified GTT set in the STP active database. While an exact match is not required, an overlap with another range cannot be specified. If the range overlaps, an error is generated that displays a list of overlapped global title addresses. An example follows that shows what happens when the user attempts to enter a range (such as 8005550000 to 8005559999) that overlaps an existing range. The overlapping links must match. If they do not, error message E2401 is generated displaying the list of overlapped global title addresses:

The following GTA ranges overlap the input GTA range

```
START GTA END GTA
8005550000 8005551999
8005552000 8005553999
8005554000 8005555999
CHG-GTA: MASP A - Command Aborted
```

If the ANSI-ITU-China SCCP Conversion feature is not on, the **ntt** parameter can be specified only when the **xlat=dpcngt** parameter is specified.

If the ANSI-ITU-China SCCP Conversion feature is on, the **ntt** parameter can be specified only when the value of the **xlat** parameter is **dpc** or **dpcngt**.

If the ANSI-ITU-China SCCP Conversion feature is on, and the **ntt** parameter is specified, the **ri=gt** parameter must be specified.

The **ngti** parameter can be specified only when the translated point code and the translation type are in different domains, or are both in the ITU domain.

If the **xlat=dpcngt** parameter is specified, the **ntt** parameter must be specified.

If a new or existing **xlat=dpcngt** parameter is specified, a new or existing **ri=gt** parameter must be specified.

If the **ssn** parameter is specified, a new or existing **xlat=dpcssn** parameter must be specified.

If the **xlat=dpcssn** parameter is specified, the **ssn** parameter must be specified.

If the **pc/pca/pci/pcn/pcn24** parameter is specified, and the point code is the STP true point code, then the value of the new or existing **xlat** parameter must be **dpcssn**, and the new or existing value of the **ri** parameter must be **ssn**.

If the **pc/pca/pci/pcn/pcn24** parameter, **ssn** parameter, or both, are specified, and the point code is the STP true point code, the **ssn** value must exist in the SS-APPL table.

If the **pc/pca/pci/pcn** parameter is specified, then it must exist as a destination in the Route table or reside in a cluster that exists as a destination in the Route table (for global routing) unless the point code is the STP's true point code.

If new or existing **ri=ssn** and **xlat=dpc** parameters are specified, and the **pc/pca/pci/pcn/pcn24** parameter is not specified, then the existing PC must exist in the Remote Point Code/MAP table, unless the **force=yes** parameter is specified.

If new or existing **ri=ssn**, **xlat=dpc**, and **pc/pca/pci/pcn/pcn24** parameters are specified, the new point code must exist in the Remote Point Code/MAP table, unless the **force=yes** parameter is specified.

If a new or existing **ccgt=yes** parameter is specified, a new or existing **ri=ssn** parameter must be specified.

If a new or existing **ri=gt** parameter is specified, a new or existing **ccgt=no** parameter must be specified.

If the new or existing **pc/pca/pci/pcn/pcn24** parameter is an STP PC or CPC, the **ccgt=no** parameter must be specified.

If the **rmgtt** parameter is specified, the **nnp**, **nnai**, **ngti**, **nsdd**, **nsds**, **npdd**, and **npds** parameters cannot be specified.

If new or existing **ri=ssn** and **xlat=dpcssn** parameters are specified, a new or existing **xlat=dpcssn** parameter must exist in the Remote Point Code/MAP table, unless the **force=yes** parameter is specified.

The GTT table cannot be full.

If the **ri=gt** parameter is specified, the **mrnset** parameter must be specified. If the **ri=gt** parameter is not specified, the **mrnset** parameter cannot be specified.

If the Flexible GTT Load Sharing feature is enabled, the specified PC must already exist in the specified MRN set.

The specified MRN set must already exist in the MRN table.

If the Flexible GTT Load Sharing feature is enabled, the specified PC must exist in the MRN set.

The Flexible GTT Load Sharing feature must be enabled before the **mrnset** parameter can be specified.

If the **ri=gt** parameter is specified, the **mrnset** parameter must be specified. If the **ri=ssn** parameter is specified, the **mrnset** parameter cannot be specified.

The SEAS command can operate only on the default MRN set or the default MAP set.

If the **ri=ssn** parameter is specified, the **mapset** parameter must be specified. If the **ri=gt** parameter is specified, the **mapset** parameter cannot be specified. Note: The **mapset** parameter can only be specified if the Flexible GTT Load Sharing feature is enabled.

The Flexible GTT Load Sharing feature must be enabled before the **mapset** parameter can be specified.

The specified MAP set must exist in the database.

The specified or previously provisioned PC/SSN must exist in the specified or previously provisioned MAP set.

The SEAS command cannot operate on any MAP set other than the default MAP set.

If the **xlat=dpc** parameter is specified, and the value of the **force** parameter is not **yes**, then the point code and MAP set must exist in the MAP table.

The specified GTA must occur within an existing GTA range in the specified GTT Set.

Either the **gta**, **cgpc/cgpca/cgpci/cgpcn/cgpcn24**, **opc/opca/opci/opcn/opcn24** or **cgssn** parameter must be specified.

If the **cgssnsn** parameter is specified, the **cggtasn**, **opcsn**, **cgpcsn**, and **selid** parameters cannot be specified.

If the **cgssn** parameter is specified, the **cggtasn**, **cgpcsn**, **cgssnsn**, **opcsn**, and **selid** parameters cannot be specified.

The **cgpc/cgpca/cgpci/cgpcn/cgpcn24** and **opc/opca/opci/opcn/opcn24** parameters must have values within the valid range for each subfield.

If the **ecgssn** parameter is specified, its value must be greater than the value of the **cgssn** parameter.

If the **gta** parameter is specified, then the **ecgssn** parameter cannot be specified. If the **cgpc** parameter is specified, then the **gta** and **ecgssn** parameters cannot be specified. If the **opc** parameter is specified, then the **gta** and **ecgssn** parameters cannot be specified. If the **cgssn** parameter is specified, then the **gta** parameter cannot be specified. If the **xlat** parameter has a value of **udts** or **disc**, then the **gta/egta**, **cgpc**, **opc**, or **cgssn/ecgssn** parameters are the only other optional parameters that can be specified. If the **cgpc** or **opc** parameter is specified, the **egta**, **ecgssn**, and **split** parameters cannot be specified. If the **cgssn** parameter is specified, the **egta** and **split** parameters cannot be specified.

The Origin-based SCCP Routing feature must be enabled before the **cggtasn**, **cgpcsn**, **cgssnsn**, **opcsn**, **cgpc/cgpca/cgpci/cgpcn/cgpcn24**, **opc/opca/opci/opcn/opcn24**, **(e)cgssn**, or **selid** parameters are specified or before the **xlat** parameter is specified with a value of **udts** or **discard**.

The **cgssnsn** parameter cannot be specified if the GTTSN set type has a value of **cdgta/cgssn**. The **cggtasn**, **cgpcsn**, or **opcsn** parameters cannot be specified if the GTTSN set type does not have a value of **cdgta**.

The **cggtasn**, **cgpcsn**, and **selid** parameters are mutually exclusive. A translation entry has only one valid value of the three at any given time. If one of the parameters has a valid value, and the entry is changed to set another one to a valid value, the first parameter must be changed to have a value of **none**.

The **gta** parameter must be specified if the GTTSN set type has a value of **cdga** or **cggta**. The **gta** parameter cannot be specified for other set types.

The **cgpc/cgpca/cgpci/cgpcn/cgpcn24** parameter must be specified if the GTTSN set type has a value of **cgpc**. The **cgpc/cgpca/cgpci/cgpcn/cgpcn24** parameter cannot be specified for other set types.

The **opc/opca/opci/opcn/opcn24** parameter must be specified if the GTTSN set type has a value of **opc**. The **opc/opca/opci/opcn/opcn24** cannot be specified for other set types.

The **cgssn** parameter must be specified if the GTTSN set type is **cgssn**. The **cgssn** parameter cannot be specified for other set types.

The range specified by the **cgssn/ecgssn** parameters cannot overlap a currently existing range for the specified GTT set.

The value specified for the GTT set name (the **gttsn** parameter) must match the corresponding type in the GTTSET table. The following GTT set names and matching GTT set types may be specified:

- GTT set name specified by the **cgssnsn** parameter must be type **cgssn**
- GTT set name specified by the **cggtasn** parameter must be the type **cggta**
- GTT set name specified by the **cgpcsn** parameter must be type **cgpc**
- GTT set name specified by the **opcsn** parameter must be type **opc**

If the specified GTT set is an ANSI set, the **cgpc/cgpca** and **opc/opca** parameters must be valid ANSI point codes. If the specified GTT set is an ITU set, the **cgpci/cgpcn/cgpcn24** and **opci/opcn/opcn24** parameters must be valid ITU point codes.

The set domain of the **cgpcsn** parameter must be the same as the set domain of the **gttsn** parameter. For example, if the set domain of the **gttsn** parameter is ANSI, then the set domain of the **cgpcsn** parameter must be ANSI. If the set domain of the **gttsn** parameter is ITU, then the set domain of the **cgpcsn** parameter must be ITU.

The set domain of the **opcsn** parameter must be the same as the set domain of the **gttsn** parameter. For example, if the set domain of the **gttsn** parameter is ANSI, then the set domain of the **opcsn** parameter must be ANSI. If the set domain of the **gttsn** parameter is ITU, then the set domain of the **opcsn** parameter must be ITU.

The set domain of the **cgssnsn** parameter must be the same as the set domain of the **gttsn** parameter. For example, if the set domain of the **gttsn** parameter is ANSI, then the set domain of the **cgssnsn** parameter must be ANSI. If the set domain of the **gttsn** parameter is ITU, then the set domain of the **cgssnsn** parameter must be ITU.

The set domain of the **cggtasn** parameter must be the same as the set domain of the **gttsn** parameter. For example, if the set domain of the **gttsn** parameter is ANSI, then the set domain of the **cggtasn** parameter must be ANSI. If the set domain of the **gttsn** parameter is ITU, then the set domain of the **cggtasn** parameter must be ITU.

The range specified by the **cgssn/ecgssn** parameters must exist for the specified GTT set in the STP active data base. An exact match is not required.

If the value of the **xlat** parameter is changed from **udts** or **disc** to **dpc**, **dpcngt**, or **dpcssn**, the **gta/egta**, **cgpc**, **opc**, **cgssn/ecgssn**, **pc/pca/pci/pn/pcn24**, and **ri** parameters must be specified. If the value of the **xlat** parameter is **udts** or **disc**, changing the PC or other fields requires the **xlat** parameter value to be changed to a value other than **udts** or **disc**.

The **selid** parameter can be specified only if the GTTSN set type has a value of **cdgta**.

The point code specified by the **cgpc** or **opc** parameter must exist.

The **cgpc**, **cgssn**, **gta**, and **opc** parameters are mutually exclusive. Each of these parameters must be specified individually in separate commands.

The Hex Digit Support for GTT feature must be enabled and on before hexadecimal digits can be specified for the **gta**, **egta**, **npds**, or **nsds** parameters.

The SCCP Loop Detection feature must be enabled before the **loopset** parameter can be specified.

The value of the **loopset** parameter must already exist in the database.

The point codes specified for the **pc**, **cgpc** and **opc** parameters cannot be out of range.

If the **egta** parameter is specified, the value of the **egta** parameter must be greater than value of the **gta** parameter.

The value specified for the **pc** parameter cannot be associated with a proxy point code.

The AMGTT feature or the AMGTT CgPA Upgrade feature must be turned on before the **cggtmod** parameter can be specified.

The value specified for the **gttsn** parameter must match the name of an existing GTT Set.

Notes

The maximum length of the resulting GTA string must not exceed 21 digits when translation is complete.

If the EGTT feature is turned on, then the GTT Selector (**ent/chg/dlt/rtrv-gttset**), GTT Set (**ent/dlt/rtrv-gttset**), and GTA (**ent/chg/dlt/rtrv-gta**) commands replace the Translation Type (**ent/dlt/rtrv-tt**) and Global Title Translation (**ent/chg/dlt/rtrv-gtt**) commands. All data previously provisioned with these commands is maintained.

If a GTT is being deleted or changed and the point code (**dpc** or **rte**) is not found in the route table (unless the point code is the STP's true point code), then the following message is displayed in the terminal scroll area:

NOTICE: No DPC and/or RTE found for GTT being deleted or changed.

The above situation may occur for the following reasons:

- A database was upgraded from a release prior to EAGLE 5 ISS Release 27.1 or IP⁷ Secure Gateway Release 3.0 when GTT entries were not linked to the route table and the deletion of the **dpc** was permitted. The GTT referenced a **dpc/rte** that was deleted, and the enforce reference counts between the GTT and route tables were not updated.
- A serious problem occurred in which the reference count rules were not enforced and a **dpc** and/or **rte** were deleted while being referenced by a GTT entry. This indicates a software error; notify the Customer Care Center at (888) FOR-TKLC.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix **s-** and the private and spare point code subtype prefix (**ps-**). All of the point code types support the private (internal) point code subtype prefix (**p-**).

When the Flexible GTT Load Sharing feature and the Intermediate GTT Load Sharing feature are on, multiple relationships can be defined among a set of destination point codes in the existing MRN table. The relationship used in a particular translation is based on the GTA digits used for translation. The **mrnset** parameter and the post-translation PC create a key that is used to perform a lookup in the MRN table. This lookup results in a set of alternate PCs, from which a PC is selected, based on relative cost, to route the MSU in most cost-effective way.

When the Flexible GTT Load Sharing feature is turned on, multiple relationships can be defined among a set of PC/SSN pairs in the existing MAP table. The relationship used in a particular translation is based on the GTA digits used for translation.

When the Origin-based SCCP Routing feature is enabled, the CdPA GTA entry can be provisioned in addition to the CgPA GTA, CgPA PC, CgPA SSN, and OPC entries. When provisioning, the Advanced CdPA GTA entry can associate with the CgPA GTA set or the CgPA PC set, the SELID and/or OPC set; the CgPA GTA, CgPA PC, or OPC can associate with the CgPA SSN set; the CgPA SSN cannot associate with any other GTT set. The Advanced CdPA GTA entry may contain the selector ID along with CgPA information present in the MSU to search the Selector table again for the CgPA GTA or CgPA PC Set.

A loopset consists of a set of point codes that form a routing loop in the network. If the SCCP Loop Detection feature is enabled, then the loopset can be associated with or disassociated from specified translation entries. Loopsets that are associated with translation entries are checked during intermediate and final GTT traffic routing. If a loop exists, then the system can be notified with or without discarding the associated traffic.

The maximum length of the resulting GTA string must not exceed 21 digits when translation is complete.

If the range specified by the **gta** and **egta** parameters does not exactly match the existing range, then the existing range is split. All addresses in the existing range that are outside the range specified by the **gta** and **egta** parameters retain the original **xlai**, **ri**, **pc**, **ssn**, and **ngt** parameters. A new range is created that is bounded by the **gta** and **egta** parameters. The new range contains new values for the **xlai**, **ri**, **pc**, **ssn**, and **ngt** parameters that are present in the command, while retaining parameter values from the previous range that do not have corresponding new values in the command.

To change existing **nsdd**, **nsds**, **npdd**, and **npds** parameter values, enter the command with the **rmgtt** parameter to reset the GT Modification values, and enter the command with new **nnp** and **nnai** or **npdd** and **npds** parameter values.

Output

```
chg-gta:gttsn=setans004:cggtmod=yes:gta=981234
```

```
tekelecstp 08-02-24 17:29:06 EST EAGLE 38.0.0
```

```
CHG-GTA: MASP A - COMPLTD
```

```
;
```


chg-gtcnv**Change Global Title Conversion**

Use this command to change entries in the Default Global Title Conversion table. A table entry is identified by the direction and either the **tta** parameter, the **tti** parameter, or the **tti/np/nai** parameter combination. The Notes section for this command describes rules for changing entry information.

Keyword: **chg-gtcnv**

Related Commands: **dlt-gtcnv**, **ent-gtcnv**, **rtrv-gtcnv**

Command Class: Database Administration

Parameters

:dir= (mandatory)

Direction of conversion.

Range: **atoi, itoa, both**

atoi—ANSI to ITU conversion

itoa—ITU to ANSI conversion

both—Conversion in both directions

:nai= (optional)

Nature of address indicator. This parameter is mandatory when **gtixlat=24** is specified, and cannot be specified when **gtixlat=22** is specified.

Range: **0-63 ***

Default: No change to current value

:np= (optional)

Numbering plan. This parameter is mandatory when **gtixlat=24** is specified, and cannot be specified when **gtixlat=22** is specified.

Range: **0-15 ***

Default: No change to current value

:npdd= (optional)

New prefix digits to be deleted. This parameter specifies the number of new prefix digits to be deleted. These digits will be replaced with the new prefix digits string (**npds**).

Range: **0-21**

Default: No change to current value

:npds= (optional)

New prefix digits string. This parameter specifies the new prefix digits string that will replace the received prefix digits.

Range: 1-21 digits

If the Hex Digit Support for GTT feature is not enabled and on, the range is 1 - 21 decimal digits; valid digits are **0-9**.

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are **0-9, a-f, A-F**.

Default: No change to current value

:nsdd= (optional)

New suffix digits to be deleted. This parameter specifies the number of new suffix digits to be deleted. These digits will be replaced with the new suffix digits string (**nsds**).

Range: **0-21**

Default: No change to current value

:nsds= (optional)

New suffix digits string. This parameter specifies the new suffix digits string that will replace the received suffix digits.

Range: 1-21 digits
 If the Hex Digit Support for GTT feature is not enabled and on, the range is 1 - 21 decimal digits; valid digits are **0-9**.
 If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are **0-9, a-f, A-F**.
Default: No change to current value

:rdmod= (optional)

Reset digit modifiers (**npdd** and **npds** or **nsdd** and **nsds**) values to "no digit modification."

Range: **yes, no**
yes—Reset the **npdd** and **npds** parameter or **nsdd** and **nsds** parameter values.
no—Do not reset the **npdd** and **npds** parameter or **nsdd** and **nsds** parameter values.
Default: No change to current value

:tta= (optional)

ANSI translation type. This parameter is mandatory when **dir=atoi** or **dir=both** is specified.

Range: **0-255 ***
Default: No change to current value

:tti= (optional)

ITU translation type. This parameter is mandatory when **dir=atoi** is specified.

Range: **0-255 ***
Default: No change to current value

Example

The following example changes a **dir=atoi** entry's current **tti** value to 5.

chg-gtcnv:dir=atoi:tta=10:tti=5

The following example changes a **dir=atoi** entry's current **tti**, **nai**, and **np** values to 7, 8, and 6 respectively, and either changes or adds the **nsdd** and **nsds** values.

chg-gtcnv:dir=atoi:tta=11:tti=7:nai=8:np=6:nsdd=3:nsds=123

The following example changes a **dir=itoe** entry's current **tta** value to 11, and either changes or adds the **npdd** and **npds** values.

chg-gtcnv:dir=itoe:tta=11:tti=7:npdd=3:npds=123

The following example changes a **dir=itoe** entry's current **tta** value to 12, and either changes or adds the **nsdd** and **nsds** values.

chg-gtcnv:dir=itoe:tta=12:tti=7:nai=8:np=6:nsdd=5:nsds=45667

The following example adds or changes a **dir=both** entry's **nsdd** and **nsds** values.

chg-gtcnv:dir=both:tta=12:tti=33:nsdd=3:nsds=456

The following example changes a default **dir=atoi** entry's current **tti** value to 9, and either changes or adds the **nsdd** and **NSDS** values.

chg-gtcnv:dir=atoi:tta=*:tti=9:nsdd=1:nsds=9

The following example changes a default **dir=atoi** entry's current **tti**, **nai**, and **np** value to 4, 6, and 5 respectively.

chg-gtcnv:dir=atoi:tta=*:tti=4:nai=6:np=5

The following example changes a default **dir=itoe** entry's current **tta** value to 17, and either changes or adds the **npdd** and **npds** values.

chg-gtcnv:dir=itoe:tta=17:tti=*:nai=*:np=*:npdd=3:npds=123

The following example resets existing **npdd/npds** or **nsdd/nsds** values to "no digit modification."

chg-gtcnv:dir=both:tta=12:tti=11:rdmod=yes

The following example specifies hexadecimal digits for the **nsds** parameter.

chg-gtcnv:dir=atoi:tta=*:tti=4:npdd=3:npds=abc1234fed

Dependencies

The ANSI-ITU-China SCCP Conversion feature must be turned on before this command can be entered.

If the **dir=atoi** parameter is specified, the **tta** parameter must be specified.

If the **dir=both** parameter is specified, at least the **tta** and **tti** parameters must be specified.

If the **dir=both** parameter is specified, asterisk parameter values (*) cannot be specified.

If the **dir=atoi** parameter is specified, the asterisk parameter value (*) can be specified only for the **tta** parameter.

If the **dir=itua** parameter is specified, the asterisk parameter value (*) must be specified for the **tti**, **np**, and **nai** parameters.

If the **dir=itua** and **gtixlat=22** parameters are specified, asterisk parameter values (*) cannot be specified. The **gtixlat=24** parameter must be specified with asterisk parameter values when the **dir=itua** parameter is specified.

The specified **dir**, **tta**, **tti**, **np**, and **nai** parameter combination cannot already exist in the database.

If the **nsdd** and **nsds** parameters are specified, the **npdd** and **npds** parameters cannot be specified.

The Default Global Title Conversion table can contain a maximum of 1000 entries.

The Hex Digit Support for GTT feature must be enabled and on before hexadecimal digits can be specified for the **npds** and **nsds** parameters.

Notes

The use of asterisks (wildcards) is allowed only once for each direction of ANSI to ITU and ITU to ANSI. This provides a configurable default.

In the conversion direction of ANSI to ITU, an asterisk can be specified only for the ANSI **tta** parameter.

In the conversion direction of ITU to ANSI, the asterisk value must be specified for the **itu tti**, **np**, and **nai** parameters.

Asterisks are not allowed when conversion is in both directions (**dir=both**).

The suffix digit manipulation parameters **nsdd** and **nsds** cannot be specified in the same command with the prefix digit manipulation parameters **npdd** and **npds** parameters. The **npdd** and **nsdd** parameters specify how many digits to delete, if any, from the beginning or end respectively of the Global Title address digits. The **npds** and **nsds** parameters specify what digits, if any, to append to the beginning or end respectively of the Global Title address digits.

The **gtixlat** parameter is expressed in the form of the ANSI GTI and the ITU GTI. The **gtixlat** parameter is used to indicate the conversion of the Global Title Indicator between the ANSI and ITU standards. For example: A **gtixlat** value of **24** converts an incoming ANSI GTI2 to an outgoing ITU GTI 4 or an incoming ITU GTI 4 to an outgoing ANSI GTI2.

Output

```
chg-gtcnv:dir=atoi:gtixlat=22:tta=10:tti=5
rlghncxa03w 03-11-07 11:43:07 EST EAGLE 31.3.0
CHG-GTCNV: MASP A - COMPLTD
;
```

chg-gtt**Change Global Title Translation**

Use this command to change the routing objects for messages requiring global title translation. The global title addresses remain unchanged.

If the EGTT (Enhanced Global Title Translation) feature is turned on, the system will no longer accept GTT (Global Title Translation) and TT (Translation Type) commands. Refer to the new command sets that replace the GTT and TT commands:

- GTT Selector commands (**ent/chg/dlt/rtrv-gttset**)
- GTT Set commands (**ent/dlt/rtrv-gttset**)
- GTA commands (**ent/chg/dlt/rtrv-gta**).

See the "Notes" section in this command description for functions provided when various controlled features are turned on.

Keyword: **chg-gtt**

Related Commands: **dlt-gtt, ent-gtt, rtrv-gtt**

Command Class: Database Administration

Parameters

At least one of these parameters must be specified: **pc/pca/pci/pcn/pcn24, ri, ssn, ttn, type/typea/typei/typen/typen24, xlat**.

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:gta= (mandatory)

Global title address. This parameter specifies the beginning of a range of global title digits.

Range: 1-21 digits

If the Hex Digit Support for GTT feature is not enabled and on, the range is 1 - 21 decimal digits; valid digits are **0-9**.

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are **0-9, a-f, A-F**.

:cggtmod= (optional)

Calling party GT modification indicator. This parameter specifies whether calling party global title modification is required.

Range: **yes, no**

Default: **no**

:egta= (optional)

End global title address. This parameter specifies the end of a range of global title digits.

Range: 1-21 digits

If the Hex Digit Support for GTT feature is not enabled and on, the range is 1 - 21 decimal digits; valid digits are **0-9**.

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are **0-9, a-f, A-F**.

Default: **egta** same as **gta**

:loopset= (optional)

SCCP loopset name. This parameter associates a translation set with a loopset.

Range: *ayyyyyyy*, **none**
 1 alphabetic character followed by up to 7 alphanumeric characters.
none—Disassociates the translation set from all loopsets.

:mapset= (optional)

MAP set ID. This parameter specifies the Mated Application set ID.

Range: **1-36000 dflt**
dflt—Default MAP set

:mrnset= (optional)

MRN set ID. This parameter specifies the Mated Relay Node set ID.

Range: **1-3000 none, dflt**
dflt—Default MRN set
none—The GTT translation does not participate in any load sharing

:ngt= (optional)

New global title

Range: **000-255**
Default: If the value for the **xlat** parameter changes from **dpcngt**, the **ngt** parameter is removed.
 If the value for the **xlat** parameter does not change from **dpcngt**, there is no change to the **ngt** parameter value.

:ngti= (optional)

New GTI code. When the ANSI-ITU-China SCCP Conversion and AMGTT features are ON and the Translated Point Code is of a different network type, the **ngti** parameter specifies whether the new GTI translation format is GTI type 2 or GTI type 4.

Range: **2, 4**

:nnai= (optional)

New nature of address indicator. This parameter specifies the nature of address indicator that will replace the received nature of address indicator.

Range: **0-127**
Default: If the **rmgtt=no** parameter is specified, there is no change to the current value.
 If the **rmgtt=yes** parameter is specified, the value resets to a default of **0**.

:nnp= (optional)

New numbering plan. This parameter identifies the numbering plan that will replace the received numbering plan.

Range: **0-15**
Default: If the **rmgtt=no** parameter is specified, there is no change to the current value.
 If the **rmgtt=yes** parameter is specified, the value resets to a default of **0xFFFF**.

:npdd= (optional)

New prefix digits to be deleted. This parameter identifies the new prefix digits to be deleted that will replace the received prefix digits to be deleted.

Range: **0-21**
Default: If the **rmgtt=no** parameter is specified, no change to the current value.
 If the **rmgtt=yes** parameter is specified, the value resets to a default of **0xFFFF**.

:npds= (optional)

New prefix digits string. This parameter specifies the new prefix digits string that will replace the received prefix digits string.

Range: 1-21 digits
 If the Hex Digit Support for GTT feature is not enabled and on, the range is 1 - 21 decimal digits; valid digits are **0-9**.

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are **0-9, a-f, A-F**.

Default: If the **rmgtt=no** parameter is specified, there is no change to the current value.
If the **rmgtt=yes** parameter is specified, the value resets to a default of no digits.

:nsdd= (optional)

New suffix digits to be deleted. This parameter identifies the new suffix digits to be deleted that will replace the received suffix digits to be deleted.

Range: **0-21**

Default: **0**

:nsds= (optional)

New suffix digits string. This parameter specifies the new new suffix digits string that will replace the received suffix digits string

Range: 1-21 digits

If the Hex Digit Support for GTT feature is not enabled and on, the range is 1 - 21 decimal digits; valid digits are **0-9**.

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are **0-9, a-f, A-F**.

Default: No digits

:pc= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: **pca**

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001-005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006-255**.

The point code **000-000-000** is not a valid point code.

:pc/pca/pci/pcn/pcn24= (optional)

Point code.

:pci= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps-

zone—0-7

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

:pcn= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-*

m2-m3-m4-gc). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:pcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)* The *prefix* subfield indicates a private point code *prefix-ni-nc-ncm*.(*prefix-ni-nc-ncm*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:ri= (optional)

Routing Indicator. This parameter provides routing instructions to the receiving signaling point. In gateway screening, messages may be screened based on the value of the routing indicator.

Range: **gt, ssn**

gt— Allow a called party address with a routing indicator value of **global title**.

ssn— Allow a called party address with a routing indicator value of **dpc/ssn**.

Default: No change in current value.

:rmgtt= (optional)

This parameter resets all GT modification fields to default values before applying values for other parameters in the command.

Range: **yes, no**

Default: **no**

:split= (optional)

Split or change an existing GTA range.

Range: **yes, no**

yes— Split the existing GTA range.

no— Change the existing GTA range.

Default: **yes**

:ssn= (optional)

Subsystem number.

Range: **002-255**

Default: If the **xlat=dpcngt** parameter is specified, there is no change to the current value.

If the **xlat=dpcngt** parameter is not specified, the **ssn** parameter is removed.

:ttn= (optional)

Translation type name.

Range: **aaaaaaaa**

1 alphabetic character followed by up to 7 alphanumeric characters

Default: No translation name is given

:type/typea/typei/typen/typen24= (optional)

Translation type. This parameter identifies the translation type and network type. This parameter is the decimal representation of the 1-byte field used in SS7.

The **type** and **typea** parameters specify an ANSI network.

The **typei** parameter specifies an ITU-international network.

The **typen** parameter specifies an ITU-national network.

The **typen24** parameter specifies a 24-bit ITU-national network.

A translation type numeric value may be entered as ANSI type (**type** or **typea**) and also as an ITU type (**typei** or **typen**). However, they are separate entities.

The point code domain translation types for GTT are handled by the EAGLE 5 ISS protocol processing as either ANSI or ITU; therefore, ITU applies to ITU-I, ITU-I Spare, ITU-N, and ITU-N Spare. ITU-I includes ITU-I Spare, and ITU-N includes ITU-N Spare.

Range: 0-255

Default: No translation type is specified

:xlat= (optional)

Translate indicator. This parameter specifies translation actions and routing actions.

Range: dpc, dpcssn, dpcngt

Default: No change in current value.

Example

chg-

gtt:type=5:gta=9195551212:egta=9195551999:xlat=dpcssn:ri:ssn:pc=255-002-001:ssn=255

chg-

gtt:ttt=lidb2:gta=9197771212:egta=9197771999:xlat=dpcngt:ri=gt:pc=255-002-001:ngt=3

chg-gtt:ttt=lidb6:gta=910777:pc=255-002-002

chg-gtt:

type=10:gta=8005553232:egta=8005554000:rmgtt=yes:nnp=3:npdd=5

chg-

gtt:type=11:gta=8005553232:egta=8005554000:nnai=4:nnp=4:nsdd=5:nsds=2341:ngti=4

chg-gtt:gta=123456:pci=s-1-129-7:typei=41

chg-gtt:gta=223456:pcn=s-128-aa:typen=3

chg-

gtt:ttt=setmrn:gta=1234567890:egta=2234567890:pc=1-1-2:mrnset=none

chg-

gtt:ttt=setmrn:gta=2234567891:egta=2234567892:pc=1-1-2:mrnset=default

chg-

gtt:ttt=setmrn:gta=2345678901:egta=3456789012:pc=1-1-3:mrnset=2

The following examples require the Flexible GTT Load Sharing feature to be ON.


```
chg-
gtt:tt=setmap:gta=2345678901:egta=3456789012:ri=ssn:pc=1-1-3:ssn
=10:mapset=2
```

```
chg-
gtt:tt=setmap:gta=2345678911:egta=3456789022:ri=ssn:pc=2-2-2:ssn
=6:mapset=df1t
```

The database contains a GTA range [5556000-5558000], but no part of the GTA range [5558001-5559000] exists. The following command deletes the GTA range [5556000-5558000] from the database and adds a new GTA range [5556800-5559000] to the database.

```
chg-gtt:tt=tst1:gta=5556800:egta=5559000:split=no
```

The following command deletes the GTA range [5556800-5559000] from the database and adds three new GTA ranges [5556800-5556899], [5556900-5557000] and [5557001-5559000] to the database.

```
chg-gtt:tt=tst1:gta=5556900:egta=5557000
```

The following example specifies hexadecimal digits for the gta, egta, and nsds parameters.

```
chg-
gtt:type=1:xlat=dpcssn:ri=ssn:ssn=10:pc=1-1-1:gta=df3456789012345
678906:egta=df345678901234567890a:nsds=EF012345DF012
```

```
chg-
gtt:tt=setmap:gta=2345678901:egta=3456789012:ri=ssn:pc=1-1-3:ssn
=10:mapset=2:loopset=none
```

The following example specifies that calling party GT modification is required.

```
chg-gtt:gta=981234:type=4:cggtmod=yes
```

Dependencies

This command is not valid when the EGTT feature is turned on.

If the **pcn** parameter is specified, its format must match the format that was assigned with the **chg-stpopts:npcfmt** parameter.

The value of the **tt** parameter must correspond to a value of the **type/typea/typei/typen/typen24** parameter.

The value of the **tt** parameter must exist in the Translation Type table.

The network type (ANSI, ITU-I, ITU-N, or 24-bit ITU-N) of the translation type and the translated point code must be the same.

The ANSI-ITU-China SCCP Conversion feature must be enabled before the **ngti** parameter can be specified.

If the **xlat=dpc**, **ri=ssn**, and **pc/pca/pci/pcn** parameters are specified, then the point code must exist in the MAP table.

If the new or existing **xlat** parameter value is **dpc**, the new or existing **ri** parameter value is **ssn**, and the **pc/pca/pci/pcn** parameter is not specified, a point code must exist in the Remote Point Code/ MAP table.

If the **xlat** parameter value is changed from **dpcssn** to **dpc** or **dpcngt**, a new **ssn** parameter value cannot be specified, and the current **ssn** parameter value must be removed.

If the new **xlat** parameter value is **dpcssn**, and the current **ssn** parameter value has been removed, a new **ssn** parameter value must be specified.

The start **gta** length must equal the number of digits specified by the translation type. If the VGTT (variable length GTT) feature is turned on, then up to 10 GTA lengths per translation type are allowed. When the **ent-gtt** command is entered to create entries, the software keeps track of the lengths and

allows only ten different lengths. The global title address specified for the translation type must then have the same number of digits as an existing GTA.

If the **rmgtt** parameter is specified, then the **nnp**, **nnai**, **nsdd**, **nsds**, **npdd**, and **npds** parameters cannot be specified.

The AMGTT feature must be turned on before the **rmgtt**, **nnp**, **nnai**, **nsdd**, **nsds**, **npdd**, and **npds** parameters can be specified.

If the **nsdd** and **nsds** parameters are specified, the **npdd** and **npds** parameters cannot be specified.

The **ngti** parameter can be specified only when the translated point code and the translation type are in different domains, or are both in the ITU domain.

If the **ngti=4** parameter is specified, the **nnp** and **nnai** parameters must be specified.

If the **ngti=4** parameter is specified, the translated point code cannot be ANSI. For ANSI point codes, the GTI value must be 2.

If the **ngti=2** parameter is specified, the **nnp** and **nnai** parameters cannot be specified.

If the **egta** parameter is specified, the length must equal the length of the start **gta**.

If the **egta** parameter is specified, the value must be greater than the value specified for the **gta** parameter.

The range of global title addresses to be changed, as specified by the start and end global title addresses, must match exactly or be contained within an existing range in the global title translation data for the specified translation type.

The new **gta-egta** range cannot include the **gta** or the **egta** of an existing range. However, the new global title address range can completely fall within an existing global title address range. If the range overlaps, an error is generated that displays a list of overlapped global title addresses. An example follows that shows what happens when the user attempts to enter a global title address range (such as 8005550000 to 8005559999) that overlaps an existing range. The overlapping links must match. If they do not, the error message displays the list of overlapped global title addresses:

The following GTA ranges overlap the input GTA range

```
START GTA END GTA
8005550000 8005551999
8005552000 8005553999
8005554000 8005555999
CHG-GTT: MASP A - Command Aborted
```

If the **xlat=dpcngt** parameter is not specified, then the **ngt** parameter cannot be specified.

If the new **xlat** parameter value is **dpcngt**, and the current **ngt** parameter value has been removed, a new **ngt** parameter value must be specified.

If the ANSI-ITU-China SCCP Conversion feature is on, the **ngt** parameter can be specified only if the **xlat=dpc** parameter or the **xlat=dpcngt** parameter is specified.

If the ANSI-ITU-China SCCP Conversion feature is turned on, and the **ngt** parameter is specified, the **ri=gt** parameter must be specified.

The **tt** parameter cannot be specified with a value that has been defined as an alias for another translation type.

Either the **type** parameter or the **ttt** parameter must be specified.

Point code entries must be full point codes. Partial point codes are not allowed.

Table 5-10 shows the valid combinations for the **xlat**, **ri**, **ssn**, and **ngt** parameters. All other combinations are rejected.

Table 5-10. Valid Parameter Combinations for the **chg-gtt** Routing Parameters

New or Existing XLAT Value	New or Existing RI Value	Routing Action	SSN Value	NGT Value
DPC	GT	Translate DPC only and route on GT	Cannot be specified. The current database entry is removed.	Cannot be specified unless ANSI-ITU-China SCCP Conversion is enabled. The current database entry is removed.
DPC	SSN	Translate DPC only and route on SSN	Cannot be specified. The current database entry is removed.	Cannot be specified. The current database entry is removed.
DPCSSN	GT	Translate DPC and SSN and route on GT	Must be specified.	Cannot be specified. The current database entry is removed.
DPCSSN	SSN	Translate DPC and SSN and route on SSN	Must be specified.	Cannot be specified. The current database entry is removed.
DPCNGT	GT	Translate DPC , new translation type (TT), and route on GT	Cannot be specified. The current database entry is removed.	Must be specified.

If the **ri=ssn** parameter is specified, the **mrnset** parameter cannot be specified.

If the Flexible GTT Load Sharing feature is enabled, the point code must already exist in the specified MRN set.

The specified MRN set must already exist in the MRN table.

The Flexible GTT Load-Sharing feature must be enabled before the **mrnset** parameter can be specified.

The SEAS command is not allowed to operate on any other MRN set except the default MRN set.

The **mapset** parameter can only be specified if the Flexible GTT Load Sharing feature is enabled, and the **ri=ssn** parameter is specified. If the **ri=ssn** parameter is specified, the **mapset** parameter must be specified. If the **ri=gt** parameter is specified, the **mapset** parameter cannot be specified.

If the Flexible GTT Load Sharing feature is not enabled, the **mapset** parameter cannot be specified.

At least one entry must be provisioned in the specified MAP set in the MAP table.

The specified or previously provisioned point code and subsystem number must exist in the specified or previously provisioned MAP set.

The SEAS command cannot operate on any MAP set other than the default MAP set.

The specified GTA must lie within an existing GTA range in the specified GTT Set.

The specified GTA range must not overlap with any other existing GTA range in the specified GTT Set.

If the Flexible GTT Load Sharing feature is enabled, then the specified PC must exist in the MRN set.

If the **ri=gt** parameter is specified, the **mapset** parameter cannot be specified.

The Hex Digit Support for GTT feature must be enabled and on before hexadecimal digits can be specified for the **gta**, **egta**, **npds**, or **nsds** parameters.

The SCCP Loop Detection feature must be enabled before the **loopset** parameter can be specified.

The value of the **loopset** parameter must already exist in the database.

The SCCP Loop Detection feature must be enabled before the **loopset** parameter can be specified.

The value of the **loopset** parameter must exist in the Loopset table.

If the **ri=gt** parameter is specified, the **mrnset** parameter must be specified.

The new or existing **pc** or **ssn** combination must exist as a mated application.

The GTT table cannot be full.

If the value of the **pc/pca/pci/pcn/pcn24** parameter is the True Point Code, then the **xlat=dpcssn** parameter and the **ri=ssn** parameter must be specified.

If the **ssn** parameter is specified, and if the value of the **pc/pca/pci/pcn/pcn24** parameter is the True Point Code, then the value of the **ssn** parameter must exist in the SS-APPL table.

The value of the **pc/pca/pci/pcn/pcn24** parameter must exist as a destination in the ordered route entity set or must reside in a cluster (ANSI only) that exists as a destination in the ordered route entity set.

If the **xlat=dpcngt** and **ri=gt** parameters are specified, then the **ngt** parameter must be specified.

If the **xlat=dpcssn** and **ri=gt** parameters are specified, then the **ssn** parameter must be specified.

The **xlat=dpcssn** parameter must be specified before the **ssn** parameter can be specified.

If the **xlat=dpcngt** parameter is specified, then the **ri=gt** parameter must be specified.

The **gta** length is not defined for the specified translation type entity.

The **tt** parameter and the **pc/pca/pci/pcn/pcn24** parameter must have matching network types.

The value of the **typei** parameter must exist in the Translation Type table.

The value of the **typen** parameter must exist in the Translation Type table.

If the **tt** parameter is not specified, then the value of the **ttn** parameter must match the value of a **tt** parameter in the STP database.

The value of the **pc/pca/pci/pcn/pcn24** parameter cannot be out of range.

The value of the **ssn** or **ri** parameter cannot be a wildcard (*).

At least one optional parameter must be specified.

The value specified for the **pc** parameter cannot be associated with a proxy point code.

The AMGTT feature or the AMGTT CgPA Upgrade feature must be turned on before the **cggmod** parameter can be specified.

Notes

The specified DPC, SSN, relative cost, and routing indicator will overwrite the existing data values in the table.

In this command, only ITU-international and ITU-national point codes support the spare point code subtype prefix (**s-**) and the private and spare point code subtype prefix (**ps-**). All of the point code types support the private (internal) point code subtype prefix (**p-**).

When the Intermediate GTT Load Sharing feature and the Flexible GTT Load Sharing feature are on, multiple relationships can be defined among a set of destination point codes in the existing MRN table. The relationship used in a particular translation is based on the GTA digits used for translation. The MRN Set and the post-translation PC formulate a key used as a lookup in the MRN table. The MRN table lookup results in a set of alternate PCs, one of which is selected (based on relative cost) to route the MSU in the most cost effective way.

When the Flexible GTT Load Sharing feature is turned on, multiple relationships among a set of PCs and SSNs in the existing MAP table are supported. The relationship used in a particular translation is based on the GTA digits used for translation. The MAP set ID and PC/SSN formulate a key that is used to perform lookup tasks in the MAP table. The lookup results in a set of mate PC/SSNs, one of which is selected to route the MSU in the most cost effective way.

If the ANSI-ITU-China SCCP Conversion feature is turned on, then the Translated Point Code (**pc**, **pca**, **pci**, **pcn**, and **pcn24** parameters) can be of a different network type than the Translation Type (**type** parameter).

If the ANSI-ITU-China SCCP Conversion and AMGTT features are turned on, and the Translated Point Code is of a different network type, then the **ngti** parameter specifies whether the new GTI translation format is GTI type 2 or GTI type 4.

If the AMGTT feature is turned OFF, then the **ngti** parameter cannot be specified and the Default GT Conversion Table is used for conversion. If the ANSI-ITU-China SCCP Conversion feature is turned OFF, then mixed network types are not allowed.

A loopset consists of a set of point codes that form a routing loop in the network. If the SCCP Loop Detection feature is enabled, then the loopset can be associated with or disassociated from specified translation entries. Loopsets that are associated with translation entries are checked during intermediate and final GTT traffic routing. If a loop exists, then the system can be notified with or without discarding the associated traffic.

The maximum length of the resulting GTA string must not exceed 21 digits when translation is complete.

If the range specified by the **gta** and **egta** parameters does not exactly match the existing range, then the existing range is split. All addresses in the existing range that are outside the range specified by the **gta** and **egta** parameters retain the original **xlat**, **ri**, **pc**, **ssn**, and **ngt** parameters.

A new range is created that is bounded by the **gta** and **egta** parameters. The new range contains new values for the **xlat**, **ri**, **pc**, **ssn**, and **ngt** parameters that are present in the command, while retaining parameter values from the previous range that do not have corresponding new values in the command.

To change existing **nsdd**, **nsds**, **npdd**, and **npds** parameter values, enter the command with the **rmgtt** parameter to reset the GT Modification values, and enter the command with new **nnp** and **nnai** or **npdd** and **npds** parameter values.

Output

```
chg-gtt:gta=981234:type=4:cggtmod=yes
tekelecstp 08-02-24 17:29:06 EST EAGLE 38.0.0
CHG-GTT: MASP A - COMPLTD
;
```

chg-gttssel

Change GTT Selectors

Use this command to change the global title translation (GTT) set (**gttsn**) linked with an existing **gti**, **tt**, **np/npv**, and **nai/naiv** combination.

Keyword: chg-gttset

Related Commands: dlt-gttset, ent-gttset, rtrv-gttset

Command Class: Database Administration

Parameters

:gti/gtia/gtii/gtin/gtin24= (mandatory)

Global title indicator. For all EGTT selector commands, the domain is defined as **gti** and **gtia** (ANSI), **gtii** (ITU international), **gtin** (ITU national), and **gtin24** (24-bit ITU national).

For the selector commands, **gti** and **gtia** are equivalent; **gtii** and **gtin/gtin24** are mutually exclusive because the EGTT database does not distinguish between ITU national and ITU international translations. This means that while ITU-I and ITU-N selectors are stored separately, two separate ITU-I and ITU-N entries with the same selector values cannot exist. For example, if an entry with **gtii=2** and **tt=4** already exists, an entry with **gtin=2** and **tt=4** cannot be entered.

Range: Supported value for ANSI: **gti=2** and **gtia=2**
Supported values for ITU: **gtii=2, 4** and **gtin/gtin24=2, 4**

:tt= (mandatory)

Translation type.

Range: **0-255**

:cdgtasn= (optional)

CgPA GTA GTT set name.

Range: *aaaaaaaa*, **none**
1 leading alphabetic character and up to 8 following alphanumeric characters.
none—Set names do not point to the CdGTA set.

:cggtasn= (optional)

CgPA GTA GTT set name.

Range: *aaaaaaaa*, **none**
1 leading alphabetic character and up to 8 following alphanumeric characters.
none—Set names do not point to the CgGTA set.

:cgpcsn= (optional)

CgPA PC GTT set name.

Range: *aaaaaaaa*, **none**
1 leading alphabetic character and up to 8 following alphanumeric characters.
none—Set names do not point to the CgPC set.

:cgssn= (optional)

CgPA subsystem number.

Range: **0-255**

:gttsn= (optional)

GTT set name. A GTT set is an entity to which global title addresses and selectors are assigned. The **gttsn** parameter can be specified only if the Origin-based SCCP Routing feature is off.

Range: *aaaaaaaa*
1 leading alphabetic character and up to 8 following alphanumeric characters.

:nai= (optional)

Nature of Address indicator. The Nature of Address indicator can be specified by supplying either a mnemonic value (**nai** parameter) or an explicit numeric value (**naiv** parameter). Either the **nai** parameter or the **naiv** parameter, but not both, can be specified in the command. Table A-5 shows the mapping between the **naiv** and the **nai** parameter values.

Range: **sub, rsvd, natl, intl, dflt**

:naiv= (optional)

Nature of Address indicator value. The Nature of Address indicator can be specified by supplying either a mnemonic value (**nai** parameter) or an explicit numeric value (**naiv** parameter). Either the **nai** parameter or the **naiv** parameter, but not both, can be specified in the command. Table A-5 shows the mapping between the **naiv** and the **nai** parameter values.

Range: 0-127

:np= (optional)

Numbering Plan. The numbering plan can be specified by supplying either a mnemonic value (**np** parameter) or an explicit numeric value (**npv** parameter). Either the **np** parameter or the **npv** parameter, but not both, can be specified in the command. Table A-6 shows the mapping between the **npv** and the **np** parameter values.

Range: e164, generic, x121, f69, e210, e212, e214, private, dflt

:npv= (optional)

Numbering Plan value. The numbering plan indicator can be specified by supplying either a mnemonic value (**np** parameter) or an explicit numeric value (**npv** parameter). Either the **np** parameter or the **npv** parameter, but not both, can be specified in the command. Table A-6 shows the mapping between the **npv** and the **np** parameter values.

Range: 0-15

:selid= (optional)

Selector ID.

Range: 0-65534

Example

chg-

gttsel:gtii=2:tt=40:cdgtasn=setcggtta:cgpcsn=none:cgssn=10:selid=12

chg-gttset:gtia=2:tt=253:gttsn=newansi

chg-gttset:gtin=4:tt=0:np=dflt:nai=dflt:gttsn=setint000

The following example would change the selectors (gtii=4, tt=5, npv=1, naiv=2) linked with GTTSN ansi1 so that the selectors are linked with ansi2 (assuming that ansi2 is an existing GTT set in the database):

chg-gttset:gtii=4:tt=5:npv=1:naiv=2:gttsn=ansi2

chg-

gttsel:gtin=4:tt=60:npv=5:naiv=5:cgpcsn=setcgpc:selid=100:cgssn=10

Dependencies

The EGTT feature must be turned on before this command can be entered.

At least one parameter value must be changed in the command.

The **np** and **npv** parameters cannot be specified together in the same command.

The **nai** and **naiv** parameters cannot be specified together in the same command.

The parameter values **gtia=4**, **gti/gtia/gtii/gtin24=1**, and **gti/gtia/gtii/gtin24=3** cannot be specified.

When the **gti/gtia/gtin/gtin24=2** parameter is specified, the **np/npv** and **nai/naiv** parameter combinations cannot be specified.

When the **gtii/gtin/gtin24=4** parameter is specified, an **np(v)** and **nai(v)** parameter combination must be specified. These parameters can be specified in any combination: **np** and **naiv**, **npv** and **nai**, **np** and **nai**, or **npv** and **naiv**.

The **gttsn** parameter must be specified, cannot have a value of **none**, and must match an existing **gttsn**.

If two set names are specified, one of the names can have a value of **none**, but not both. A GTT selector must contain at least one GTT set.

An entry must already exist that matches the **gti**, **tt**, and **np(v)** and **nai(v)** combination of parameters.

An entry must already exist that matches the **gtin**, **tt**, and **np(v)** and **nai(v)** combination of parameters.

An entry must already exist that matches the **gtin**, **tt**, and **np(v)** and **nai(v)** combination of parameters.

The specified **gttsn** value must exist for the specified **gtin24**, **tt**, **np/npv/nai/naiv** parameter combination.

The network domain (ANSI or ITU) must match that of the existing GTT Set entry specified by the **gttsn** parameter.

A maximum of 5 **nai** entries per **tt-np** combination is allowed in the GTT Selector table.

At least one set name, as indicated by the **cdgtasn**, **cggtasn**, or **cgpcsn** parameter, must be specified.

If the **cgssn** parameter and/or the **selid** parameter is specified, the **cggtasn** parameter or the **cgpcsn** parameter must be specified.

The value specified for the **cdgtasn** or **gttsn** parameter must match the name of an existing GTT set.

The **cdgtasn** parameter and the **cggtasn** or **cgpcsn** parameter cannot both have a value of **none**.

The network domain of the specified GTT selector must match that of the GTT set specified by the **cdgtasn** or **gttsn** parameter, unless the domain of the existing GTT set is **cross**.

The Origin-based SCCP Routing feature must be enabled when the **cggtasn**, **cgpcsn**, **cgssn**, or **selid** parameters are specified.

The values for the **cdgtasn**, **cgpcsn**, or **cggtasn** parameters do not match the corresponding entries in the GTT set table.

The specified **cgssn** parameter and/or the **selid** parameter must already exist in the SSNSELID table.

The GTT set specified by the **cggtasn** parameter or the **cgpcsn** parameter must already exist in the database before being assigned to a GTT selector.

The network domain of the CGGTASN or CGPCSN GTT set doesn't match the domain indicated by the **gti** parameter.

The set type specified by the **cggtasn** or **cgpcsn** parameter must match the set type of the corresponding entry in the GTT set table. For example, the **cggtasn** parameter should have a set type of **cggt**, and the **cgpcsn** parameter should have a set type of **cgpc**.

The network domain (ANSI or ITU) of the specified GTT selector must match the domain of the new GTT set, specified by the **cdgtasn** parameter, unless the domain of the new GTT set has a value of **cross**.

The **cggtasn** and **cgpcsn** parameters cannot be specified in the same command.

A value of **none** cannot be specified for the **cggtasn** parameter or the **cgpcsn** parameter if the GTT Selector contains only one GTT set. A GTT selector must point to at least one GTT set.

A value of **none** cannot be specified for the **cdgtasn** parameter if the **gttsn** parameter specifies the only GTTSET associated with that selector.

The GTT set specified by the **cdgtasn** or **gttsn** parameter must have a set type of **cdgta** (see the **ent-gttset** command).

Notes

When the EGTT feature is turned on, the GTT Selector (**ent/chg/dlt/rtrv-gttset**), GTT Set (**ent/dlt/rtrv-gttset**), and GTA (**ent/chg/dlt/rtrv-gta**) commands replace the Translation Type (**ent/dlt/rtrv-tt**) and Global Title Translation (**ent/chg/dlt/rtrv-gtt**) commands. All data previously provisioned with these commands is maintained.

The entry that matches the specified parameter combination is assigned to the specified **gttsn**.

When the Origin-based SCCP Routing feature is enabled, two GTT sets, either the **cdgtasn/cggtasn** or the **cdgtasn/cgpcsn**, can be assigned to a GTT selector. The **cggtasn** and **cgpcsn** GTT sets are mutually exclusive and cannot be assigned to the same GTT selector.

When the value of the **cggtasn/cgpcsn** GTT set is specified as **none**, that combination (domain, **tt**, **gti**, **np/np_i**, **na/ani**, **cgssn**, and **selid**) are deleted from the database. At any point of time, each provisioned selector must have at least one GTT set.

Output

```
chg-gttset:gti=2:tt=10:gttsn=t800
```

```
rlghncxa03w 04-01-18 08:50:12 EST EAGLE 31.3.0
GTT Selector table is (114 of 1024) 11% full
CHG-GTTSEL: MASP A - CMLTD
```

```
;
```

chg-gttset**Change GTT Set**

Use this command to specify the attributes to change for an existing set of global title translations.

Keyword: **chg-gttset**

Related Commands: **dlt-gttset**, **ent-gttset**, **rtrv-gttset**

Command Class: Database Administration

Parameters

:gttsn= (mandatory)

GTT set name. A GTT set is an entity to which global title addresses and selectors are assigned.

Range: *ayyyyyyy*

1 alphabetic character followed by up to 8 alphanumeric characters.

:ndgt= (optional)

Number of digits. This parameter specifies the number of digits required for GTAs (global title addresses) associated with this GTT set. This parameter is not valid if the VGTT (Variable Length GTT) feature is turned on or if the value of the **settype** parameter is **cgpc**, **cgssn**, or **opc**.

Range: **1-21**

:netdom= (optional)

Network domain. This command does not distinguish between ITU national or ITU international because the Enhanced Global Title Translation (EGTT) feature does not discriminate between the ITU-I and ITU-N translations.

NOTE: The **netdom** parameter refers to the incoming message network domain.

Range: **cross**

Example

```
chg-gttset:gttsn=lidb:netdom=cross
```

```
chg-gttset:gttsn=setxyz:netdom=cross:ndgt=10
```

Dependencies

The **gttsn=none** parameter cannot be specified.

The specified **netdom** parameter value must be **cross**. This command cannot be used to change the **netdom** setting from **cross** to **ansi** or **itu**.

The **ndgt** parameter cannot be specified if the value of the specified **settype** parameter is **cgssn**, **cgpc**, or **opc**.

The EGTT feature must be turned on prior to using this command.

The value specified for the **gttsn** parameter must match the name of an existing GTT Set.

If the VGTT feature is turned on, the **ndgt** parameter cannot be specified.

The ANSI-ITU-China SCCP Conversion feature must be turned on before the **netdom** parameter can be specified.

If GTAs are assigned to the GTT set, the **ndgt** parameter cannot be specified.

The **netdom=cross** parameter can be specified only if the **settype=cdgta** parameter is specified.

Output

```
chg-gttset:gttsn=lidb:netdom=cross
rlghncxa03w 06-06-01 08:50:12 EST EAGLE 35.0.0
CHG-GTTSET: MASP A - COMPLTD
```

chg-gtw-stp

Change Gateway Parameters

Use this command to modify the level 3 ANSI transfer control status (TFCSTAT) when converted from ITU to ANSI.

Keyword: chg-gtw-stp

Related Commands: rtrv-gtw-stp

Command Class: Database Administration

Parameters

:tfcstat= (mandatory)

This parameter identifies the desired level 3 control status on a TFC message received from an ITU node destined for an ANSI node.

Range: 1-3

Example

```
chg-gtw-stp:tfcstat=1
```

Dependencies

None

Notes

None

Output

```
chg-gtw-stp:tfcstat=1
rlghncxa03w 04-01-11 11:34:04 EST EAGLE 31.3.0
CHG-GTW-STP: MASP A - COMPLTD
;
```

chg-gws-actset**Change Gateway Screening Stop Action Sets**

Use this command to configure the gateway screening stop action sets in the system database. Stop action sets are used to define the actions performed on the Message Sending Units (MSUs) that pass the gateway screening process. The gateway screening stop action table contains a maximum of 16 stop action sets, with each stop action set containing a maximum of 10 stop actions. The first three gateway screening stop action sets (**actid=1**, **actid=2**, and **actid=3**) are already defined with the existing gateway screening stop actions shown in Table 5-11.

Table 5-11. Gateway Screening Stop Action Definitions

Gateway Screening Stop Action ID	Gateway Screening Stop Action Set Name	Stop Action 1	Stop Action 2	Action Performed by the system
1	copy	copy	—	Copy the MSU for the STP LAN feature.
2	rdct	rdct	—	Redirect the MSU for the DTA feature.
3	cr	copy	rdct	Copy the MSU for the STP LAN feature and redirect the MSU for the DTA feature.



CAUTION: Even though gateway screening is in the screen test mode, as defined by the parameters **gwsa=off** and **gwsn=on** in the **chg-ls** command, the gateway screening action in the stop action set *will* be performed at the end of the screening process.

Keyword: chg-gws-actset

Related Commands: rtrv-gws-actset

Command Class: Database Administration

Parameters

Each of the **tif**, **tif2**, and **tif3** stop actions represents a specific TIF service. These services are provisioned using the **chg-npp-serv** command.

:actid= (mandatory)

The identification number of the gateway screening stop action set.

Range: 4-16

:act1= (optional)

Stop action 1.

Range: cncf, copy, none, rdct, tlnp, tinp, tif, tif2, tif3

Default: No change to the existing value.

:act10= (optional)

Stop action 10.

Range: cncf, copy, none, rdct, tlnp, tinp, tif, tif2, tif3

Default: No change to the existing value.

- :act2=** (optional)
 Stop action 2.
Range: **cncf, copy, none, rdct, tlnp, tinp, tif, tif2, tif3**
Default: No change to the existing value.
- :act3=** (optional)
 Stop action 3.
Range: **cncf, copy, none, rdct, tlnp, tinp, tif, tif2, tif3**
Default: No change to the existing value.
- :act4=** (optional)
 Stop action 4.
Range: **cncf, copy, none, rdct, tlnp, tinp, tif, tif2, tif3**
Default: No change to the existing value.
- :act5=** (optional)
 Stop action 5.
Range: **cncf, copy, none, rdct, tlnp, tinp, tif, tif2, tif3**
Default: No change to the existing value.
- :act6=** (optional)
 Stop action 6.
Range: **cncf, copy, none, rdct, tlnp, tinp, tif, tif2, tif3**
Default: No change to the existing value.
- :act7=** (optional)
 Stop action 7.
Range: **cncf, copy, none, rdct, tlnp, tinp, tif, tif2, tif3**
Default: No change to the existing value.
- :act8=** (optional)
 Stop action 8.
Range: **cncf, copy, none, rdct, tlnp, tinp, tif, tif2, tif3**
Default: No change to the existing value.
- :act9=** (optional)
 Stop action 9.
Range: **cncf, copy, none, rdct, tlnp, tinp, tif, tif2, tif3**
Default: No change to the existing value.
- :actname=** (optional)
 The name of the gateway screening stop action set.
 This parameter is mandatory when you first enter an action set.
Range: **ayyyyy**
 One alphabetic character followed by up to five alphanumeric characters.
Default: No change to the existing value.
- :all=** (optional)
 The **all=none** parameter clears all of the actions in the specified stop action set, and deletes the stop action set.
Range: **none**
Default: Undefined
- :force=** (optional)
 Use the **force=yes** parameter when erasing the action set or changing the action name.
Range: **yes**

Example

chg-gws-actset:actid=4:actname=cncf:act1=cncf

Dependencies

At least one optional parameter must be specified.

If **all=none** is specified, no other optional parameters can be specified.

The reserved word *none* cannot be used for the **actname** parameter.

The **force=yes** parameter must be specified to change an existing stop action.

If **cncf** is specified for **act1** through **act10**, the Calling Name Conversion Feature (CNCF) must be on. Use the **rtrv-feat** command to determine whether CNCF is on or off. If off, CNCF can be turned on with the **chg-feat** command. Note also that Gateway Screening (GWS) must be on before CNCF can be turned on.

To provision a Gateway Screening TLNP stop action (**tlnp**), either the TLNP feature must be turned on or the ISUP NP with EPAP feature must be enabled.

If **tlnp** is specified for **act1** through **act10** for Triggerless LNP in the system,

- The Triggerless LNP feature (TLNP) must be on. Use the **rtrv-feat** command to determine whether TLNP is on or off. If TLNP is off, TLNP can be turned on with the **chg-feat** command. (Verify that TLNP has been purchased for your system before you turn it on.)
- The LNP (Local Number Portability) and GWS (Gateway Screening) features must be on before TLNP can be turned on. See the **enable-ctrl-feat** command and the **chg-feat** command.

If **tlnp** is specified for **act1** through **act10** with the ISUP NP with EPAP feature in the system,

- The ISUP NP with EPAP feature must be enabled. Use the **rtrv-ctrl-feat** command to determine whether the ISUP NP with EPAP feature is enabled. The feature is listed in the output if it is enabled. If the ISUP NP with EPAP feature does not appear in the output, you must purchase it and receive the feature access key before you can enable it with the **enable-ctrl-feat** command.
- The G-Port and GWS (Gateway Screening) features must be on before the ISUP NP with EPAP feature can be enabled. See the **chg-feat** command.

A specific gateway screening stop action (**cncf**, **copy**, **none**, **rdct**, **tif**, **tif2**, **tif3**, **tlnp**, **tinp**) can be specified for one and only one gateway screening stop action parameter for each gateway screening stop action set.

If a value is entered for the **actname** parameter, the value must be unique. Note that the **actname** parameter is *mandatory* when you first enter a gateway screening stop action set in the database and *optional* thereafter.

If **copy** is specified for an action set, it must be specified in stop action 1 (**act1**). A parameter value of **copy** cannot be specified for **act2** through **act10**.

If the redirect gateway screening action (**rdct**) is specified with other gateway screening stop actions, it must be specified with the last gateway screening stop action parameter specified for the command.

The **tlnp** (Triggerless LNP) gateway screening stop action cannot be specified in the same action set with either the **cncf** (Calling Name Conversion Facility) or **rdct** (Redirect) gateway screening stop actions.

The **tinp** (Triggerless ISUP NP) gateway screening stop action cannot be specified in the same action set with the **cncf** (Calling Name Conversion Facility) gateway screening stop action.

The TINP feature must have been enabled before upgrading to Release 39.2 or later before the **tinp** stop action can be specified.

At least one TIF feature must be enabled before the **tif**, **tif2**, or **tif3** stop action can be specified.

Only one of the **tif**, **tif2**, **tif3**, **tlnp**, **tinp**, and **rdct** stop actions can be specified in the command.

If specified, the **tif**, **tif2**, **tif3**, **tlnp**, **tinp**, or **rdct** stop action must be the last stop action in the command.

Notes

The gateway screening stop action 1 (**act1**) is the first stop action to be performed, and the gateway screening stop action 10 (**act10**) is the last stop action to be performed on the MSU. These parameters can have the following values:

- **cncf**—Convert the PIP parameter with the GN parameter or the GN parameter with the PIP parameter in the ISUP IAM message for the Calling Name Conversion Facility feature.
- **copy**—Copy the MSU for the STP LAN feature.
- **none**—No action is performed on the MSU.
- **rdct**—Redirect the MSU for the DTA feature
- **tif**—Apply TIF processing to MSU.
- **tif2**—Apply TIF processing to MSU.
- **tif3**—Apply TIF processing to MSU.
- **tinp**—ISUP IAMs that pass gateway screening are intercepted by the Triggerless ISUP NP equipped EAGLE 5 ISS and converted to include the RN if the call is to a ported number. This gateway screening stop action applies only to the Triggerless ISUP NP feature.
- **tlnp**—ISUP IAMs that pass gateway screening are intercepted by the Triggerless LNP equipped EAGLE 5 ISS and converted to include the LRN if the call is to a ported number. This gateway screening stop action applies only to the Triggerless LNP feature.

Output

```
chg-gws-actset:actid=4:actname=cncf:act1=cncf
rlghncxa03w 04-01-10 11:43:04 EST EAGLE 31.3.0
CAUTION: GWS action set may be referenced by one or more GWS rules
CHG-GWS-ACTSET: MASP A - COMPLTD
;
```

chg-gws-redirect

Change Gateway Screening Redirect

Use this command to change the provisioning data for the redirect function. The values that are specified for this command are stored in the Redirect table, and they are used to set the variable fields of the MSUs being redirected. For example, if the **ri=gt** parameter is specified, the value **gt** is set for the routing indicator in the called party address (CDPA) of the MSU being redirected.

Keyword: **chg-gws-redirect**

Related Commands: **dlt-gws-redirect**, **ent-gws-redirect**,

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:dpc= (optional)

Specifies the value used to set the ANSI destination point code field in the routing label of the MSU that is being redirected. The point code has subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Synonym: **dpca**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

Default: Current value.

:dpc/dpca/dpci/dpcn/dpcn24= (optional)

Destination point code.

:dpci= (optional)

Specifies the value used to set the ITU international destination point code field in the routing label of the MSU that is being redirected. The point code has subfields *zone-area-id*.

Range: **0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

The point code **0-000-0** is not a valid point code.

zone—**0-7**

area—**000-255**

id—**0-7**

Default: Current value.

:dpcn= (optional)

Specifies the value used to set the ITU national destination point code field in the routing label of the MSU that is being redirected. The point code is in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) when the **chg-stpopts:npfmti** flexible point code option is on. A group code (*gc*) must be specified when the ITUDUPPC feature is on (*nnnnn-gc*, *m1-m2-m3-m4-gc*).

Range: **0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

Default: Current value.

:dpcn24= (optional)

Specifies the value used to set the 24-bit ITU national destination point code field in the routing label of the MSU that is being redirected. The point code has subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

Default: Current value.

:enabled= (optional)

Specifies whether MSUs that have passed gateway screening are to be redirected (**enabled=on**) or routed as normal (**enabled=off**).

Range: on, off

Default: Current value.

:gta= (optional)

Specifies the value used to set the global title address (dialed digits) in the SCCP called party address of the MSU being redirected.

Range: 1-21 digits

:ri= (optional)

Specifies the value used to set the routing indicator in the SCCP called party address of the MSU being redirected. Use the **gt** value to route by global title digits or use the **ssn** value to route by subsystem number.

Range: gt, ssn

Default: Current value

:ssn= (optional)

Specifies the value used to set the subsystem number (SSN) in the SCCP called party address of the MSU being redirected. This number is the SSN of the SCP to which all MSUs meeting the redirect criteria are to be redirected.

Range: 0-255

Default: Current value

:tt= (optional)

Identifies the type of the global title translation (GTT). It is the decimal representation of the 1-byte field used in SS7. This value is used to set the type of the GTT in the SCCP called party address of the MSU being redirected.

Range: 0-255

Default: Current value

Example

```
chg-gws-redirect:dpc=111-222-111:ri=gt:ssn=10:tt=1:gta=180833:enabled=on
```

```
chg-gws-redirect:dpc=111-222-111:ri=ssn:ssn=10:tt=1:gta=1800833:enabled=off
```

```
chg-gws-redirect:enabled=off
```

Dependencies

At least one optional parameter must be specified.

The **dpc/dpca/dpci/dpcn/dpcn24** parameter must be defined in the Destination table or defined as the STP site point code.

If the **dpc/dpca/dpci/dpcn/dpcn24** parameter is defined as a destination, at least one route must be defined.

The redirect function data must exist in the database before it can be changed with this command.

Notes

None

Output

chg-gws-redirect:dpc=111-222-111:ri=gt:ssn=10:tt=1:gta=180833:enabled=on

```
rlghncxa03w 04-07-10 11:43:04 EST EAGLE 31.6.0
CHG-GWS-REDIRECT: MASP A - COMPLTD
```

;

chg-inpopts

Change INP Options Command

Use this command to provision INP-specific data. This command updates the INPOPTS table.

Keyword: **chg-inpopts**

Related Commands: **rtrv-inpopts**

Command Class: Database Administration

Parameters

:cdpnmai= (optional)

Called Party Number Nature of Address indicator.

Range: **0-127**

The following **cdpnmai** parameter values are valid for the indicated feature:

- **1** (Subscriber), **2** (Unknown), **3** (National), **4** (International) and **5** (Network)—INP feature
- **0** (National) and **1** (International)—ANSI-41 INP Query (AINPQ) feature

Default: Current value

:cdpnpx= (optional)

Called Party Number Prefix.

Range: 1-15 digits

Valid digits are **0-9, A-F, a-f**.

Default: Current value

:dltpfx= (optional)

Delete prefix.

Range: **yes, no**

Default: **no**

:dra= (optional)

The destination routing address.

Range: **rndn, rn, ccrndn, rnnecdn, homerndn, rnasd, asdrn, rnasddn, asdrndn, ccrnasddn, asdrnccdn, ccasdrndn, rnasdccdn, rnasdnecdn, asdrnnecdn**

rndn— Supports RN + [CDPNPFX] + DN in the INP "CONNECT" or AINPQ "Return Result" response messages.

rn— Supports Routing Number in the INP "CONNECT" or AINPQ "Return Result" response messages.

ccrndn— Supports [CDPNPFX] +CC + RN + DN in the INP "CONNECT" or AINPQ "Return Result" response messages.

rnnecdn— Supports RN+ [CDPNPFX]+ NEC+ DN in the INP "CONNECT" or AINPQ "Return Result" response messages.

homerndn— Supports Home Routing Number in the INP "CONNECT" or AINPQ "Return Result" response messages.

rnasd— Supports RN+ ASD in the INP "CONNECT" or AINPQ "Return Result" response messages.

asdrn— Supports ASD+RN in the INP "CONNECT" or AINPQ "Return Result" response messages.

rnasddn— Supports RN +ASD+ [CDPNPFX] + DN in the INP "CONNECT" or AINPQ "Return Result" response messages.

asdrndn— Supports ASD+ RN + [CDPNPFX] + DN in the INP "CONNECT" or AINPQ "Return Result" response messages.

ccrnasddn— Supports [CDPNPFX] +CC + RN + ASD+DN in the INP "CONNECT" or AINPQ "Return Result" response messages.

asdrnccdn— Supports ASD+ RN+ [CDPNPFX]+ CC+ DN in the INP "CONNECT" or AINPQ "Return Result" response messages.

ccasdrndn— Supports [CDPNPFX] +CC + ASD + RN+DN in the INP "CONNECT" or AINPQ "Return Result" response messages.

rnasdccdn— Supports RN + ASD + [CDPNPFX] +CC + DN in the INP "CONNECT" or AINPQ "Return Result" response messages.

rnasdnecdn— Supports RN+ ASD + [CDPNPFX]+ NEC+ DN in the INP "CONNECT" or AINPQ "Return Result" response messages.

asdrnnecdn— Supports ASD + RN+ [CDPNPFX]+ NEC+ DN in the INP "CONNECT" or AINPQ "Return Result" response messages.

Default: Current value

:dranai= (optional)

The Nature of Address indicator.

Range: **sub, unknown, natl, intl, ntwk**

NOTE: The nature of address indicator parameters (**dranaiv** or **dranai**) can be specified by supplying either a mnemonic or an explicit value. At no time may both the mnemonic and the explicit value be specified at the same time for the same parameter. Either the **dranaiv** or **dranai** parameter can be specified. Table 5-12 shows the mapping between the **drnaiv** and the **drnai** parameters.

Table 5-12. DRANAIV/DRANAI Mapping

dranaiv	dranai	Description
1	sub	Subscriber Number
2	unknown	Unknown
3	natl	National significant number
4	intl	International number

Table 5-12. DRANAIV/DRANAI Mapping

dranaiv	dranai	Description
5	ntwk	Network
The mnemonic's list is different from the list for the Service Selector commands because the INAP destination routing address uses ISUP values instead of SCCP values.		

Default: Current value

:dranaiv= (optional)

The Nature of Address indicator value.

The nature of address indicator parameters (**dranaiv** or **dranai**) can be specified by supplying either a mnemonic or an explicit value. At no time may both the mnemonic and the explicit value be specified at the same time for the same parameter. Either the **dranaiv** or **dranai** parameter can be specified. Table 5-12 shows the mapping between the **dranaiv** and the **drnai** parameters.

Range: 0-127

:dranp= (optional)

The numbering plan.

NOTE: The nature of address indicator parameters (dranaiv or dranai) can be specified by supplying either a mnemonic or an explicit value. At no time may both the mnemonic and the explicit value be specified at the same time for the same parameter. Either the dranpv or dranp parameter can be specified. Table 5-13 shows the mapping between the dranpv and the dranp parameters.

Range: e164, x121, f69

Default: Current value

:dranpv= (optional)

The numbering plan value. See Table 5-13.

NOTE: The numbering plan parameters (dranpv or dranp) can be specified by supplying either a mnemonic or an explicit value. At no time may both the mnemonic and the explicit value be specified at the same time for the same parameter. Either the dranpv or dranp parameter can be specified. Table 5-13 shows the mapping between the dranpv and the dranp parameters

Table 5-13. DRANPV/DRANP Mapping

dranpv	dranp	Description
1	E164	ISDN/telephony numbering plan
3	X121	Data numbering plan
4	F69	Telex numbering plan
Several of the numbering plan mnemonics that apply to the Service Selector commands are not in this list because they do not apply to INAP destination routing addresses.		

Range: 1-7

Default: Current value

:ncdnpfx= (optional)

The New Called Party Number Prefix.

Range: 1-15 digits, **none**
Valid digits are **0-9, a-f, A-F**.

:nec= (optional)

National Escape Code.

Range: 1-5 digits, **none**
Valid digits are **0-9, A-F, a-f**.
Default: **None**.

:snai= (optional)

The Service Nature of Address indicator.

Range: **sub, natl, intl, none, unknown**
Default: Current value

:sprestyle= (optional)

INP option that indicates the type of message the EAGLE 5 ISS is to send when an IDP message is received for INP service, the DN digits match, and the HLR ID is present.

Range: **connect, continue**
connect— The EAGLE 5 ISS sends a “Connect” message (for the INP feature) or a “Return Results with Digits” message (for an AINPQ feature).
continue— The EAGLE 5 ISS sends a “Continue” message (for the INP feature) or a “Return Results without Digits” message (for the AINPQ feature).
Default: **continue**

Example

```
chg-inpopts:dra=rn:dranp=e164:dranai=intl
chg-inpopts:dranp=f69:dranai=sub:dra=rndn
chg-inpopts:dra=rn:dranp=e164:dranai=intl:cdpnpfx=fac:dltprfx=yes
chg-inpopts:dranp=f69:dranai=sub:dra=rndn:cdpnpfx=200
chg-
inpopts:dranp=f69:dranai=sub:dra=rndn:cdpnpfx=200:ncdnpfx=3abcde
f :dltprfx=yes
chg-
inpopts:dranp=f69:dranai=sub:dra=rndn:cdpnpfx=3abcdef:ncdnpfx=no
ne
chg-
inpopts:dranp=f69:dranai=sub:dra=rndn:cdpnpfx=fed123:dltprfx=no
chg-
inpopts:dra=rn:dranp=e164:dranai=intl:cdpnpfx=fac:dltprfx=yes:cdpn
nai=50 :snai=intl
chg-
inpopts:dra=rndn:dranp=x121:dranai=intl:cdpnpfx=fac:dltprfx=no:cdp
nnai=1 :snai=natl
chg-
inpopts:dra=rn:dranp=e164:dranai=intl:cdpnpfx=fac:dltprfx=yes:cdpn
nai=70 :snai=sub
```

```

chg-
inpopts:dra=rn:dranp=e164:dranai=intl:cdpnpx=fac:dltpx=no:cdpnn
ai=1 :snai=none
chg-inpopts:sprestype=connect
chg-inpopts:dra=rnnecdn:nec=abcd1
chg-inpopts:dra=rnnecdn:nec=0
chg-inpopts:dra=homern:dranp=e164:dranai=intl
chg-inpopts:dra=rnasd:nec=0
chg-inpopts:dra=asdrndn:dranp=e164:dranai=intl
chg-
inpopts:dra=asdrnccdn:dranp=e164:dranai=intl:cdpnpx=fac:dltpx=y
es
chg-inpopts:dra=rnasdnecdn:nec=0

```

Dependencies

At least one optional parameter must be specified.

The **dranp** and **dranpv** parameters cannot be specified together in the command.

The **dranai** and **dranaiv** parameters cannot be specified together in the command.

If the **ncdpnpx** or **dltpx** parameter is specified, the **cdpnpx** parameter must be specified.

A value of **none** cannot be specified for the **cdpnpx** parameter.

If the **ncdpnpx=none** parameter is specified, then the **dltpx** parameter cannot be specified.

The specified Called Party Number Prefix (**cdpnpx** parameter) must exist in the INPOPTS table.

The specified New Called Party Number Prefix (**ncdpnpx** parameter) must not already exist in the INPOPTS table.

A maximum of 5 Called Party Number Nature of Address values is allowed.

The **cdpnai** and **snai** parameters must be specified together in the command.

If this command is entered to delete a Called Party Number Nature of Address value from the INPOPTS table (for example, if the command is entered with **:cdpnai=1:ssnai=none**), then the value for the **cdpnai** parameter must exist in the INPOPTS table.

The National Escape Code (**nec** parameter) can contain between 1 and 5 digits. Otherwise the value is **none**.

The INP or AINPQ feature must be turned on before the **chg-inpopts** command can be entered.

A maximum of 40 Called Party Number Prefix values can be provisioned.

If the **nec=none** parameter is specified, then the **asdrnecdn**, **rnasdnecdn**, and **rnnecdn** parameters cannot be specified.

Notes

Table 5-14 provides examples of **dranp**/**dranpv**, **dranai**/**dranaiv**, **cdpnpx**/**ncdpnpx**/**dltpx**, **cdpnai**/**snai** and **dra**/**nec** parameter combinations.

Table 5-14. Examples of parameter combinations for the **chg-inpopts** command

Command	Comments
chg-inpopts:dranai=sub:dranaiv=1:dra=rn	dranai and dranaiv cannot be specified together.
chg-inpopts:dranp=e164:dranpv=1:dra=rndn	dranp and dranpv cannot be specified together.
chg-inpopts:dranp=e164:dranaiv=4:dranpv=1	dranp and dranpv cannot be specified together.
chg-inpopts:dranai=sub:dranaiv=1:dranpv=5	dranai and dranaiv cannot be specified together
chg-inpopts:dranp:=e164:dranai=sub:dranpv=1	dranp and dranpv cannot be specified together.
chg-inpopts:dranai=natl:dranaiv=3:dranp=e164	dranai and dranaiv cannot be specified together.
chg-inpopts:dranai=sub:dranp=f69:dra=rndn	Okay
chg-inpopts:dranp=e164:dranaiv=10:dra=rn	Okay
chg-inpopts:dranai=sub:dranpv=3	Okay
chg-inpopts:dranpv=4:dranaiv=20	Okay
chg-inpopts:dltpfx=yes	cdpnpx must be specified.
chg-inpopts:ncdpnpx=1:dltpfx=yes	cdpnpx must be specified.
chg-inpopts:cdpnpx=none:dltpfx=yes	cdpnpx=none is not valid.
chg-inpopts:cdpnpx=1:dltpfx=yes	Okay
chg-inpopts:cdpnpx=1:ncdpnpx=none:dltpfx=yes	dltpfx must not be specified when ncdpnpx=none .
chg-inpopts:cdpnpx=2a3b4c5d6e7f	Okay
chg-inpopts:cdpnpx=2:ncdpnpx=3:dltpfx=yes	Okay
chg-inpopts:cdpnai=1	cdpnai and snai must be specified together.
chg-inpopts:snai=intl	cdpnai and snai must be specified together.
chg-inpopts:cdpnai=1:snai=intl	Okay
chg-inpopts:cdpnai=1:snai=sub	Okay
chg-inpopts:cdpnai=70:snai=sub	Okay

Table 5-14. Examples of parameter combinations for the **chg-inopts** command

Command	Comments
chg-inopts:dra=ccrndn	Okay
chg-inopts:cdpnnai=5:snai=unknown	Okay
chg-inopts:dra=rnnecdn:nec=none	nec cannot be none for provisioning dra=rnnecdn
chg-inopts:dra=rnasdnecdn:nec=none	nec cannot be none for provisioning dra=rnasdnecdn
chg-inopts:dra=asdrnnecdn:nec=none	nec cannot be none for provisioning dra=asdrnnecdn
chg-inopts:dra=rnasd:nec=0	Okay
chg-inopts:dra=rnasdnecdn:nec=0	Okay
chg-inopts:dra=asdrnnecdn:nec=0	Okay
chg-inopts:dra=asdrndn:dranp=e164:dranai=intl	Okay

Output

```
chg-inopts:dra=rnasd:nec=0
tekelecstp 08-09-03 15:15:44 EST EAGLE 39.2.0
CHG-INOPTS: MASP A - COMPLTD
;
```

Legend

ASD—The Additional Subscriber Data

CC—The E.164 Country Code

CDPNNAI—The Called Party Number Nature of Address Indicator

CDPNPFX—The Called Party Number Prefix

DLTPFX—The Delete Prefix

DRA—The destination routing address

DRANAI—The nature of address indicator for the destination routing address

DRANPV—The numbering plan value for the destination routing address

NEC—The National Escape Code

PFX—The PFX is the CdPN digits stripped during number conditioning that matched with the configured INOPTS:CDPNPFX. This is re-inserted only if DLTPFX=NO.

SNAI—The Service Nature of Address Indicator

SPRESTYPE—The INP option to send a "Connect" message or a "Continue" message when IDP messages are received for INP services, the DN digits match, and the HLR ID is present

chg-ip-card**Change Internet Protocol Card**

Use this command to provision IP networking parameters for a given card.

Keyword: chg-ip-card

Related Commands: chg-sg-opts, rtrv-ip-card

Command Class: Database Administration

Parameters

:loc= (mandatory)

Card location. The unique identifier of a specific application subsystem located in the STP.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

:bipaddr= (optional)

Bonded Port IP address. This parameter specifies an IP address for the card in the specified location.

Range: 4 numbers separated by dots, with each number in the range of 0-255.
A value of 0.0.0.0 removes the IP address.

Default: No change to the current value

:bpsubmask= (optional)

Bonded Port IP submask.

Range: The value must be valid for the class of the entered IP address.

Table 5-15. Valid Subnet Mask Values

Valid for Class A Networks	Valid for Class A or B Networks	Valid for Class A, B, or C Networks
255.0.0.0	255.255.0.0	255.255.255.0
255.192.0.0	255.255.192.0	255.255.255.192
255.224.0.0	255.255.224.0	255.255.255.224
255.240.0.0	255.255.240.0	255.255.255.240
255.248.0.0	255.255.248.0	255.255.255.248
255.252.0.0	255.255.252.0	255.255.255.252
255.254.0.0	255.255.254.0	
255.255.128.0	255.255.255.128	

:defrouter= (optional)

Default router IP address. This is a TCP/IP address expressed in standard dot notation. IP addresses consist of the system's network number and the machine's unique host number. An example IP address is 192.126.100.5, where 192.126.100 is the network number and 5 is the machine's host number.

Range: 4 numbers separated by dots, with each number in the range of 0-255.
A value of 0.0.0.0 will remove an IP address from this parameter.

Default: No change to the parameter value

System**Default:** 0.0.0.0**:dnسا=** (optional)

The IP address for Domain Name Server A. This is a TCP/IP address expressed in standard dot notation. IP addresses consist of the system's network number and the machine's unique host number. An example IP address is 192.126.100.5, where 192.126.100 is the network number and 5 is the machine's host number.

Range: 4 numbers separated by dots, with each number in the range of 0-255.

A value of 0.0.0.0 will remove an IP address from this parameter.

Default: No change to the parameter value.

System**Default:** 0.0.0.0**:dnسب=** (optional)

The IP address for Domain Name Server B. This is a TCP/IP address expressed in standard dot notation. IP addresses consist of the system's network number and the machine's unique host number. An example IP address is 192.126.100.5, where 192.126.100 is the network number and 5 is the machine's host number.

Range: 4 numbers separated by dots, with each number in the range of 0-255.

A value of 0.0.0.0 will remove an IP address from this parameter.

Default: No change to the parameter value.

System**Default:** 0.0.0.0**:domain=** (optional)

Domain name of the Domain server.

Range:
 ~~~~~  
 ~~~~~

Any string of characters beginning with a letter and comprising up to 120 characters in length.

Valid characters are a-z, A-Z, 0-9, - (dash), . (period).

Default: No change to the parameter value.

System**Default:** Null**:rstdomain=** (optional)

Reset Domain Name. This parameter is used to reset the Domain Name to a NULL value.

Range: yes, no

yes—reset Domain Name to a NULL value

no—Domain Name does not change

Default: no

:sctpcsum= (optional)

SCTP checksum algorithm. This parameter specifies the configured SCTP checksum algorithm for a specific card.

The system-wide setting for the SCTP checksum algorithm type (see the **chg-sg-opts** command) takes precedence over the setting for an individual card. The **chg-sg-opts:sctpcsum=percard** command must be entered before the **chg-ip-card:sctpcsum=** command can be entered.

Range: Adler32, CRC32C

System**Default:** CRC32C

:srchordr= (optional)
 Host table search order.

Range: **local, srvr, srvronly**
 local—Local host table is searched first.
 srvr—Domain Server is searched first.
 srvronly—Only the Domain Server is searched.

Default: No change to the parameter value

System

Default: No search

Example

```
chg-ip-  
card: loc=1211:dnsc=150.1.1.1:domain=nc.tekelec.com:defrouter=150.  
1.1.105  
chg-ip-card: loc=1107:sctpcsum=adler32
```

Dependencies

At least one optional parameter must be specified.

The value specified for the **loc** parameter must correspond to the location of a card that can run an IP application (other than the **eroute** application, which is not supported by this command). For a list of the cards and their associated applications, see Table A-7.

The card in the location specified by the **loc** parameter must be inhibited before this command can be entered.

If the **domain** parameter is specified, the **rstdomain** parameter cannot be specified.

The **defrouter** IP address must be local to the Ethernet A network or Ethernet B network for the card. The B network can be used only on SSEDCCM cards.

If the card in the location specified by the **loc** parameter is not an E5-SM4G card, or if a DSM card is provisioned in the system, then the **bpipaddr** and **bpsubmask** parameters cannot be specified.

The IP address specified by the **bpipaddr** and **bpsubmask** parameters must be unique.

The **bpipaddr** parameter must be specified before the **bpsubmask** parameter can be specified.

A valid value must be specified for the **bpsubmask** parameter.

If the **bpipaddr** parameter is specified, then the **bpsubmask** parameter must be specified.

The **chg-sg-opts:sctpcsum=percard** command must be entered before the **sctpcsum** parameter can be specified in the **chg-ip-card** command.

Notes

The Domain Name has a 120 character limitation.

Output

```
chg-ip-  
card: loc=1211:dnsc=150.1.1.1:domain=nc.tekelec.com:defrouter=150.  
1.1.105:sctpcsum=adler32  
    rlghncxa03w 08-02-22 15:35:05 EST  EAGLE 38.0.0  
    CHG-IP-CARD: MASP A - COMPLTD  
;
```

chg-ip-lnk

Change Internet Protocol Link

Use this command to provision the IP link table.

Keyword: chg-ip-lnk

Related Commands: rtrv-ip-lnk

Command Class: Database Administration

Parameters

:loc= (mandatory)

Card location. The unique identifier of a specific application subsystem located in the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

:port= (mandatory)

Ethernet interface Port ID.

Range: a, b

Port **b** is not valid for SS7IPGW and IPGWI applications with Application Sockets.

:auto= (optional)

Tells hardware whether to automatically determine duplex and speed.

Range: yes, no

yes — Automatically determines duplex and speed

no — Do not automatically determine duplex and speed

Default: No change to the parameter value

System

Default: no

:duplex= (optional)

This is the mode of operation of the interface.

Range: half, full

half — Half duplex

full — Full duplex

Default: No change to the parameter value

System

Default: full

:ipaddr= (optional)

The IP address for the specified port. This is a TCP/IP address expressed in standard dot notation. IP addresses consist of the system's network number and the machine's unique host number. An example IP address is 192.126.100.5, where 192.126.100 is the network number and 5 is the machine's host number.

Range: 4 numbers separated by dots, with each number in the range of 0-255.

A value of 0.0.0.0 will remove an IP address from this parameter.

Default: No change to the parameter value.

System

Default: 0.0.0.0

:mactype= (optional)

The Media Access Control Type of the interface.

Range: 802.3, dix

802.3 — The IEEE standard number 802.3 for Ethernet 1

dix — The Digital/Inter/Xerox *de facto* standard for Ethernet 2

Default: No change to the parameter value

System**Default:** **dix****:mcast=** (optional)

Multicast Control. This parameter enables or disables multicast support for the interface. This parameter is necessary for INP, G-Port, and G-Flex to establish the connection from the Service Module card to the MPS system.

Range: **yes, no**

yes — Multicasting is enabled on the interface and the sending and receiving of multicast frames is allowed.

no — All multicast frames are silently dropped.

System**Default:** **no****:speed=** (optional)

The bandwidth for the interface in megabits per second

Range: **10, 100****Default:** No change to the parameter value**System****Default:** **100****:submask=** (optional)

The subnet mask of the IP interface in the form of an IP address with a restricted range of values. This parameter is mandatory when the **ipaddr** parameter is specified.

Range: The value must be valid for the class of the entered IP address.**Table 5-16.** Valid Subnet Mask Values

Valid for Class A Networks	Valid for Class A or B Networks	Valid for Class A, B, or C Networks
255.0.0.0	255.255.0.0	255.255.255.0
255.192.0.0	255.255.192.0	255.255.255.192
255.224.0.0	255.255.224.0	255.255.255.224
255.240.0.0	255.255.240.0	255.255.255.240
255.248.0.0	255.255.248.0	255.255.255.248
255.252.0.0	255.255.252.0	255.255.255.252
255.254.0.0	255.255.254.0	
255.255.128.0	255.255.255.128	

Default: If **ipaddr** is not specified, there is no change to the parameter value.

When a host's IP address is known, the default subnet mask should be chosen according to Table 5-17.

Table 5-17. Default Subnet Mask Values

Network Class	IP Network Address Range	Default Subnet Mask
A	1.0.0.0 to 127.0.0.0	255.0.0.0
B	128.0.0.0 to 191.255.0.0	255.255.0.0
C	192.0.0.0 to 223.255.255.0	255.255.255.0

System
Default: 0.0.0.0

Example

chg-ip-lnk:loc=1211:port=A

Dependencies

The IP address must be entered in the IP Host table using the **ent-ip-host** command before it can be entered in the IP Link table using the **chg-ip-lnk** command.

Each IP address entered into the IP Link table must be unique.

At least one optional parameter must be specified.

If the **auto** parameter is entered, then the **duplex** and **speed** parameters are not allowed.

The value specified for the **loc** parameter must correspond to the location of a card that can run an IP application (other than the **eroute** application, which is not supported by this command). For a list of the cards and their associated applications, see Table A-7.

The card in the location specified by the **loc** parameter must be inhibited before this command can be entered.

For SS7IPGW and IPGWI, Application Sockets on port **b** are not allowed.

The local **ipaddr** and **submask** values of either the A or B network cannot be changed to an address that represents a different network if a default router and/or other gateway routers are assigned to the current local network (display with **rtrv-ip-card** and **rtrv-ip-rte**).

The local IP address cannot be changed if the current or new local host has open sockets or associations (the **open** parameter set to **yes** with the **ent-assoc** or **chg-assoc** command).

The IP address of an existing IP link entry in the IP Link table cannot be changed if it exists in the IP Host table.

An IP link entry must be provisioned in the IP Link table before an IP host entry can be provisioned with a corresponding IP address in the IP Host table.

The IP host entry must be deleted from the IP Host table before an IP link entry can be deleted from the IP Link table.

An existing IP link entry in the IP Link table cannot be deleted (**ipaddr=0.0.0.0**) if it exists in the IP Host table.

The IP network address specified by the **ipaddr** and **submask** parameters must be different from the IP and fast copy network address specified by the **pvn** and **pvnmask**, **fcna** and **fcnamask**, and **fcnb** and **fcnbmask** parameters in the NETOPTS table.

Notes

None

Output**chg-ip-lnk:loc=1211:port=a**

```

r1ghncxa03w 04-01-17 15:35:05 EST EAGLE 31.3.0
CHG-IP-LNK: MASP A - COMPLTD
;

```

chg-is41-msg**Change IS41 test message**

Use this command to provision IS41 test messages. These messages are used by the MO SMS NPP Test Tool to test MO-based IS41 SMS message processing by the NPP.

Keyword: **chg-is41-msg**

Related Commands: **rtrv-is41-msg, tst-msg**

Command Class: Database Administration

Parameters

:msgn= (mandatory)

Message number. This parameter specifies the test message number that will be changed.

Range: **1-10**

:active= (optional)

This parameter specifies whether the IS41 MOSMS message can be sent to the network card for processing.

Range: **yes, no**

yes— The message is sent to the network card.

no— The message is not sent to the network card.

Default: No change to the current value

System

Default: **no**

:cdpadgts= (optional)

Called party address digits. This parameter specifies the SCCP CdPA digits for the IS41 test message.

Range: 1-15 digits

1 - 15 hexadecimal digits. Valid digits are **0-9, a-f, A-F**.

Default: No change to the current value

System

Default: **0123456789abcde**

:cdpagti= (optional)

Called party address global title indicator. This parameter specifies the SCCP CdPA GT for the IS41 test message.

Range: **0-15**

Default: No change to the current value

System

Default: **4**

:cdpagtnai= (optional)

Called party address global title nature of address indicator. This parameter specifies the SCCP CdPA GT NAI for the IS41 test message.

Range: **0-127**

Default: No change to the current value

System

Default: **4**

:cdpndgts= (optional)

Called party number digits. This parameter specifies the TCAP CdPN (*SMS_DA* / *SMS_ODA*) digits for the IS41 test message.

Range: 1-21 digits

Default: No change to the current value

System

Default: 01234567890abcde

:cdpnnes= (optional)

Called party number encoding scheme. This parameter specifies the TCAP CdPN (*SMS_DA* / *SMS_ODA*) encoding scheme for the IS41 test message

Range: 0-15

Default: No change to the current value

System

Default: 1

:cdpnnai= (optional)

Called party number nature of address indicator. This parameter specifies the TCAP CdPN (*SMS_DA* / *SMS_ODA*) NAI for the IS41 test message.

Range: 0-1

Default: No change to the current value

System

Default: 1

:cdpnpn= (optional)

Called party numbering plan. This parameter specifies the TCAP CdPN (*SMS_DA* / *SMS_ODA*) NP for the IS41 test message.

Range: 0-15

Default: No change to the current value

System

Default: 2

:cgpadgts= (optional)

Calling party address digits. This parameter specifies the SCCP CgPA digits for the IS41 MOSMS message.

Range: 1-15 digits

Range is 1 - 15 hexadecimal digits. Valid digits are **0-9, a-f, A-F**.

Default: No change to the current value

System

Default: 0123456789abcde

:cgpagti= (optional)

Calling party address global title indicator. This parameter specifies the SCCP CgPA GT for the IS41 test message.

Range: 0-15

Default: No change to the current value

System

Default: 4

:cgpagnai= (optional)

Calling party address global title nature of address indicator. This parameter specifies the SCCP CgPA GT NAI for the IS41 test message.

Range: 0-127

Default: No change to the current value

System**Default:** 4**:cgpdgts=** (optional)

Calling party number digits. This parameter specifies the TCAP CgPN (*SMS_OOA*) digits for the IS41 test message.

Range: 1-21 digits**Default:** No change to the current value**System****Default:** 01234567890abcde**:cgpnesc=** (optional)

Calling party number encoding scheme. This parameter specifies the TCAP CgPN (*SMS_OOA*) encoding scheme for the IS41 test message

Range: 0-15**Default:** No change to the current value**System****Default:** 1**:cgpnnai=** (optional)

Calling party number nature of address indicator. This parameter specifies the TCAP CgPN (*SMS_OOA*) NAI for the IS41 test message.

Range: 0-1**Default:** No change to the current value**System****Default:** 1**:cgpnnp=** (optional)

Calling party numbering plan. This parameter specifies the TCAP CgPN (*SMS_OOA*) NP for the IS41 test message.

Range: 0-15**Default:** No change in the current value**System****Default:** 2**:reset=** (optional)

This parameter resets all of the parameters to their default values.

Range: yes, no**yes** — All of the message parameters are reset to their default values.**no** — None of the message parameters are reset.**Default:** No change to the current value**Example**

```
chg-is41-msg:msgn=1:cdpnai=1:cdpadgts=12457896abcd:cgpnai=1
```

```
chg-is41-msg:msgn=1:cdpnai=1:cgpdgts=981123456
```

Dependencies

The TSTMSG table is corrupt or cannot be found.

If the **reset** parameter is specified, then no other parameters can be specified.

Default: **no**

:mscmktid= (optional)

MSCID market ID. This parameter specifies the value that will be encoded in the Market ID section of the **mscid** parameter for a response LOCREQ message.

Range: **0-65535**

Default: **0**

:mscswitch= (optional)

MSCID market ID switch. This parameter specifies the value that will be encoded in the Market ID Switch section of the **mscid** parameter for a response LOCREQ message.

Range: **0-255**

Default: **0**

:mtplocreqlen= (optional)

This parameter specifies the number of terminating called party digits to extract from the LOCREQ message.

Range: **5-15**

Default: **15**

System

Default: **0**

:mtplocreqnai= (optional)

MTP-routed LOCREQ nature of address indicator. This parameter specifies how the Called Party from the TCAP layer of a received MTP-routed LOCREQ message will be interpreted.

Range: **ccrndn, frmsg, intl, natl, rnidn, rnndn, rnsdn, sub, locreqlen**

ccrndn — Country code, routing number, and national directory number

frmsg — Incoming message value.

intl — International number

natl — National number

rnidn — Routing number prefix and international dialed/directory number

rnndn — Routing number prefix and national dialed/directory number

rnsdn — Routing number prefix and subscriber dialed/directory number

sub — Subscriber number

locreqlen — Number of terminating called party digits specified by the **locreqlen** parameter

Default: **frmsg**

:nec= (optional)

National escape code. This parameter specifies the national escape code that a received LOCREQ message can contain and have lookup performed.

Range: **1-5 digits, none**

none — Removes the NEC from the received LOCREQ message before database lookup.

Default: **none**

:rspcdpapcp= (optional)

Response called party point code present. This parameter specifies the point code present bit that will encode the SCCP CdPA GTA of a LOCREQ response message.

Range: **off, on, frmsg**

off — The response will not contain a point code present bit.

on — The point code in the SCCP CgPA of the received LOCREQ message will be used. If no point code is present, the originating point code in the MTP Routing Label will be used.

frmsg — The point code present bit from the received message will be used. Override does not occur.

Default: **off**

:rspcdpari= (optional)

Response called party routing indicator. This parameter specifies the value of the routing indicator bit that will encode the SCCP CdPA GTA of a LOCREQ response message.

Range: **frmsg, gt, ssn**

frmsg— The received message routing indicator bit will be used. Override does not occur.

gt— The GTA digits in the SCCP CgPA GTA of the received message will be used. If no GTA digits are present in the SCCP CgPA GTA, override will occur according to the **cdpari=ssn** parameter.

ssn— The SCCP CgPA of the received message will be used.

Default: **frmsg**

:rspcgpanai= (optional)

Response calling party nature of address indicator. This parameter specifies the nature of address (NAI) that will encode the SCCP CgPA GTA of a LOCREQ response message.

Range: **0-127, none**

none—The NAI value in the SCCP CdPA of the received message will be used. Override does not occur.

Default: **none**

:rspcgpanp= (optional)

Response calling party numbering plan. This parameter specifies the numbering plan (NP) that will encode the SCCP CgPA GTA of a LOCREQ response message.

Range: **0-15, none**

none—The NP in SCCP CdPA of the received message will be used. Override does not occur.

Default: **none**

:rspcgpapcp= (optional)

Response calling party point code present. This parameter specifies the point code present bit that will encode the SCCP CgPA GTA of a LOCREQ response message.

Range: **frmsg, on, off**

frmsg— The point code present bit from the received message will be used.

on— The point code in the SCCP CdPA of the incoming LOCREQ message will be used. If no point code is present, the destination point code in the MTP Routing Label will be used.

off— The response message will not contain a point code present bit.

Default: **frmsg**

:rspcgpari= (optional)

Response calling party routing indicator. This parameter specifies the routing indicator bit that will encode the SCCP CgPA GTA of a LOCREQ response message.

Range: **frmsg, gt, ssn**

frmsg— The value from the received message will be used. Override does not occur.

gt— The GTA digits in the SCCP CdPA GTA of the received message will be used. If no GTA digits are present, override occurs according to the **cgpari=ssn** parameter.

ssn— The SCCP CdPA of the received message will be used.

Default: **frmsg**

:rspcgpatt= (optional)

Response calling party translation type. This parameter specifies the translation type (TT) that will encode the SCCP CgPA GTA of a LOCREQ response message.

Range: **0-255 none**
none—The TT in the SCCP CdPA of the received message will be used. Override does not occur.

Default: **none**

:rspdig= (optional)

Routing number. This parameter specifies the digit encoding format of the TCAP Outgoing Called Party parameter for a LOCREQ response message.

The routing number will be used as is or concatenated with the Called Party Number. The routing number format will be used on a per EAGLE 5 ISS node basis.

Range: **ccrndn, hrnrndn, rn, rndn**
ccrndn — Country Code + RN + DN
hrnrndn — HomeRN + RN + DN
rndn — RN + DN

Default: **rn**

:rspdigtype= (optional)

Response digit type. This parameter specifies the value that will encode the Digit Type field in the TCAP Outgoing Called Party parameter of a LOCREQ response message.

Range: **0-255**

Default: **6**

:rspmin= (optional)

Response LOCREQ MIN parameter encoding. This parameter specifies how the **min** parameter of a LOCREQ response message will be encoded.

Range: **homern, nothomern, tendelhomern, tenhomern, tenzero**
homern — The exact number of digits, with home RN prefix, as encoded in the Called Party of the received LOCREQ message.
nothomern — The exact number of digits, without home RN prefix, as encoded in the Called Party of the received LOCREQ message.
tendelhomern — The leading 10 digits of the Called Party of the received LOCREQ message after deleting the home RN prefix, if it exists.
tenhomern — The leading 10 digits the Called Party of the received LOCREQ message without deletion of the home RN prefix.
tenzero — 10 digits filled with 0.

Default: **homern**

:rspnon= (optional)

MSRN nature of number. This parameter specifies the nature of number value that will encode the TCAP Outgoing Called Party parameter of a LOCREQ response message.

Range: **0-255 none**
none—The NAI value in the Digits[Dialed] parameter of a received LOCREQ message is used.

Default: **none**

:rspnp= (optional)

MSRN numbering plan. This parameter specifies the numbering plan that will encode the TCAP Outgoing Called Party parameter of the LOCREQ response message.

Range: **0-15 none**
2—Telephony Numbering

Default: **2**

:rspparm= (optional)

Response parameter. This parameter specifies the TCAP parameter that will encode the RN and/or DN information for a LOCREQ response message.

This value encodes the DigitType field of the TerminationList, RoutingDigits, or Digits[Destination] on a per EAGLE 5 ISS node basis.

Range: **ddigit, rtdigit, tlist**
ddigit — Digits[Destination].
rtdigit — Routingdigits
tlist — Termination list (Default)
Default: **tlist**

:smsreqbypass= (optional)

This parameter specifies whether a received SMSREQ message that passes the MNP Service Selector (**serv=mnp** parameter in the **chg-sccp-serv** command) will undergo A-Port message processing.

Range: **yes, no**
yes — Bypass A-Port.
no — Do not bypass A-Port.
Default: **no**

:tcapsnai= (optional)

This parameter specifies how the Called Party from the TCAP layer of a received LOCREQ message will be interpreted.

Range: **ccrndn, frmsg, intl, natl, rnidn, rnrndn, rnsdn, sub**
ccrndn — Country code, routing number, and national directory number
frmsg — Incoming message value
intl — International number
natl — National number
rnidn — Routing number prefix and international dialed/directory number
rnrndn — Routing number prefix and national dialed/directory number
rnsdn — Routing number prefix and subscriber dialed/directory number
sub — Subscriber number
Default: **frmsg**

Example

```
chg-is41opts:iec=12345:nec=12345:rspcgpari=gt:rspcdpari=gt
chg-is41opts:rspnon=1:tcapsnai=sub:mscmktid=78
chg-
is41opts:locreqdn=tcap:rspcgpapcp=frmsg:rspnp=14:rspmin=tendelhom
ern
chg-is41opts:smsreqbypass=yes:rspcdpapcp=off
chg-is41opts:rspcgpanai=120:rspcgpanp=5:rspcgpatt=25
chg-is41opts:mtplocreqnai=intl:rspparm=tlist:rspdig=rn
chg-is41opts:rspnon=25:mscmktid=535:mscswitch=55
chg-is41opts:esnmfg=159:esnsn=7215:rspdigtype=67:locreqrmhrn=yes
```

Dependencies

The A-Port or IS41 GSM Migration (IGM) feature must be enabled before this command can be entered.

The EGLEOPTS table is corrupt or cannot be found.

Output

```

chg-is41opts:smsreqbypass=yes
tekelecstp 06-09-11 15:13:20 EST EAGLE 36.0.0
Command entered at terminal #4.
CHG-IS410PTS: MASP A - COMPLTD

```

;

chg-is41smsopts**Change IS41 SMS System Options**

Use this command to enter IS41 SMS system options in the database. This command updates the IS41SMSOPTS table.

Keyword: chg-is41smsopts

Related Commands: chg-is41opts, rtrv-is41opts, rtrv-is41smsopts

Command Class: Database Administration

Parameters

NOTE: The parameters for the chg-is41smsopts command are dependent on various MO-based or MT-based features. The features and their associated parameters are as follows:

- **MO SMS ASD**—modaparam, mosmsnai, and mosmsaclen
- **MO SMS B-Party Routing**—bpartygttsn, modaparam, and mosmsgttdig
- **MO SMS GRN**—modaparam, mosmsnai, and mosmsaclen
- **MO SMS IS41-to-GSM Migration**—moigmpfx, mosmsdigmat, modaparam, mosmsnai, and mosmsaclen
- **MO-based IS41 SMS NP**—mosmstype, mosmsnai, modaparam, mosmsdigmat, and mosmsaclen
- **MT-based IS41 SMS NP**—mtsmsdnfmt, mtmsmstype, mtmsmparm, mtmsmdltr, mtmsmdltrv, mtmsackn, mtmsesn, mtmsssn, mtmsnakerr, mtmsdigtype, and mtmschksrc

NOTE: As of Release 40.1, the mosmsdnai and mosmsdnfmt parameters are obsolete.

:bpartygttsn= (optional)

MO SMS B-Party Routing GTT Set name. This parameter specifies the GTT set where Global Title Translation lookup on B-Party digits is performed.

Range: ayyyyyyyy
1 leading alphabetic and up to 8 following alphanumeric characters.

Default: No change to the current value

System

Default: none

:modaparam= (optional)

This parameter specifies whether the SMS_DestinationAddress or SMS_OriginalDestinationAddress parameter from the IS41 SMDPP message is used for conditioning, lookup, and modification for the MO-based IS41 SMS NP and MO SMS IS41-to-GSM Migration features.

Range: da, oda
da — Destination Address
oda — Original Destination Address

Default: No change to the current value
System
Default: **da**

:moigmpfx= (optional)

MO SMS IS41-to-GSM migration prefix. This parameter specifies whether the MO SMS IS41-to-GSM Migration feature uses digits from the RTDB network entity (NE) associated with the B number or the **is412gsm** parameter (see the **chg-gsmopts** command) as a prefix to modify the destination address in the outgoing SMDPP.

Range: **ne, is412gsm**
ne — The RTDB NE data associated with the B number is used for prefixing.
is412gsm — The provisioned IS412GSM migration prefix is used for prefixing.
Default: No change to the current value
System
Default: **ne**

:mosmsaclen= (optional)

This parameter specifies the number of the digits that are taken from the MO SMS CgPA and used as the Area Code in the MO SMS CdPA.

Range: **0-8**
Default: No change to the current value
System
Default: **0**

:mosmsdigmat= (optional)

This parameter specifies that the “HomeSMSC Match with Digits” search option can be used with the MO-based IS41 SMS NP and MO SMS IS41-to-GSM Migration features.

Range: **exact, bestfit, bypass**
exact — The system searches for an exact match of digits in the HomeSMSC Table.
bestfit — The system searches for a match on the leading digits of an incoming message with any provisioned entry in HomeSMSC table if an exact match is not found.
bypass — The HomeSMSC search is not performed.
Default: No change to the current value
System
Default: **exact**

:mosmsgttdig= (optional)

MO SMS B-Party Routing GTT digit. This parameter specifies the digits that are used for Global Title Translation.

Range: **sccpcdpa, mapbparty**
sccpcdpa — The SCCP CdPA is used for GTT.
mapbparty — The MAP B-Party number is used for GTT.
Default: No change to the current value
System
Default: **sccpcdpa**

:mosmsnai= (optional)

MO-based SMS Nature Address Indicator. This parameter specifies the number conditioning that is performed on the SMS_DestinationAddress digits in the SMDPP message before lookup in the number portability database is performed.

Range: **intl, nai, nat, unknown**
intl — Number is treated as INTL for number conditioning.
nai — The NAI from the SMS_DestinationAddress parameter in the SMDPP message is used to perform number conditioning

nat — Number is treated as NATL for number conditioning.
unknown — Number is treated as UNKNOWN for number conditioning.

Default: No change to the current value

System

Default: **intl**

:mosmstype= (optional)

MO-based SMS type. This parameter specifies the value of the entity type that indicates that a successful lookup occurred in the number portability database.

Range: **sp, rn, sprn, all**

sp — signalling point

rn — routing number

sprn — Lookup is successful if the value of the entity type is **sp** or **rn**.

all — Lookup is successful if the value of the entity type is **sp** or **rn**, or if no entity type is found.

Default: No change to the current value

System

Default: **sprn**

:mtsmsackn= (optional)

MT-Based SMS acknowledgement. This parameter specifies the message that is generated in response to a successful number portability database lookup for an SMSREQ message from a Home SMSC.

Range: **ack, nack**

ack — SMSREQ_ACK message

nack — SMSREQ_NACK (Return Error) message

Default: **No change to current value.**

System

Default: **ack**

:mtmschksrc= (optional)

MT-Based SMS check source. This parameter specifies whether the SCCP CgPA GTA of a SMSREQ message is validated to determine whether the source of the message is a Home SMSC.

Range: **yes, no**

yes — The SCCP CgPA GTA of an SMSREQ message is validated.

no — The SCCP CgPA GTA of an SMSREQ message is not validated.

If the **mtmschksrc=yes** parameter is specified, and if the incoming SMSREQ message has SCCP CgPA GTA, then the SCCP CgPA GTA must be found in the Home SMSC list for the source of the message to be considered a Home SMSC. If the message is not found in the Home SMSC list, then the MT-Based IS41 SMS NP feature does not process the message.

If the **mtmschksrc=no** parameter is specified, or if SCCP CgPA GTA does not exist in the incoming message, then the source of the message is considered to be a Home SMSC, and the MT-Based IS41 SMS NP feature considers the message for processing.

Default: No change to current value

System

Default: **no**

:mtmsdigtype= (optional)

MT-Based SMS digit type. This parameter specifies the value that is used to encode the "Type of digits" field in the SMS_Address parameter of an SMSREQ ACK message.

Range: **0-255**

Default: No change to the current value

System

Default: **6**

:mtsmsdltr= (optional)

MT-Based SMS delimiter. This parameter specifies whether to insert a delimiter string before or after the routing number (RN) when the RN is used in the **mtsmsdnfmt** digits.

The delimiter string that is inserted is determined by the **mtsmsdltr** parameter.

Range: **no, prern, postrn**

no — A delimiter string is not inserted.

prern — A delimiter digit string is inserted before the RN.

postrn — A delimiter digit string is inserted after the RN.

Default: No change to the current value

System

Default: **no**

:mtsmsdltrv= (optional)

MT-Based SMS delimiter value. This parameter specifies the delimiter digit string that is inserted before or after the RN when the RN is used in the **mtsmsdnfmt** digits.

This parameter must be specified if the value specified for the **mtsmsdltr** parameter is **prern** or **postrn**.

Range: 1-5 digits, **none**

Valid digits are **0-9, A-F, a-f**.

Default: No change to the current value

System

Default: **none**

:mtsmsdnfmt= (optional)

MT-Based SMS DN format. This parameter specifies the required format of digits to be encoded in the "SMS_Address" parameter of the SMSREQ response.

Range: **rn, rndn, ccrndn, dn, srfimsi**

rn — routing number

rndn — routing number and the international dialed/directory number

ccrndn — country code, routing number, and national directory/dialed number

dn — directory or dialed number

srfimsi — IMSI is encoded as the "SRFIMSI" parameter from the number portability database.

Default: No change to the current value

System

Default: **rndn**

:mtsmsesn= (optional)

MT-Based SMS electronic serial number. This parameter specifies whether to encode the ESN parameter while generating the SMSREQ response message.

Range: **no, yes**

no — The ESN parameter is not encoded.

yes — The ESN parameter is encoded.

Default: No change to the current value

System

Default: **no**

:mtsmsnakerr= (optional)

MT-Based SMS negative acknowledgement error. This parameter specifies the TCAP access denied reason to be included in the NACK response message that is generated for SMSREQ messages.

Range: **0-255**

Default: No change to the current value.

System

Default: **5**

:mtsmsparm= (optional)

MT-Based SMS parameter. This parameter specifies the format that is used to encode the "SMS_Address" parameter of an SMSREQ response message.

Range: **digit, pcssn**

digit — DIGIT format

pcssn — PCSSN format

Default: No change to the current value

System

Default: **digit**

:mtsmsssn= (optional)

MT-Based SMS subsystem number. This parameter specifies the SSN that is encoded in "SMS_Address" field, if the **:mtsmsparm=pcssn** parameter is specified, and the SSN entry is not found in the entity.

Range: **2-255**

Default: No change to the current value

System

Default: **6**

:mtsmstype= (optional)

MT-Based SMS type. This parameter specifies the entity type that indicates a successful lookup occurred in the number portability database.

Range: **sp, rn, sprn, all, nonsp**

sp — signalling point

rn — routing number

sprn — **sp** or **rn**

all — **sp, rn**, or DN with no entity

nonsp — **rn** or DN with no entity

Default: No change to the current value

System

Default: **rn**

:mosmsdnfmt= (obsolete)

MO-based SMS directory number format. This parameter specifies the format for the digits in the outgoing message.

Range: **rn, rndn, ccrndn**

rn — routing number (RN is used if available, otherwise DN is used)

rndn — routing number+directory number

ccrndn — country code + routing number + directory number

Default: **rndn**

:mosmsdnnai= (obsolete)

MO-based SMS directory number NAI. This parameter specifies the NAI that is used in the outgoing message.

NOTE: This parameter is Obsolete.

The **:mosmsdnnai** parameter modifies only the three least significant bits of the NAI field of the message. Each value of this parameter represents a specific configuration of the three bits.

Range: **0-15 none**

0—national number, presentation allowed, number available

1—international number, presentation allowed, number available

2—national number, presentation restricted, number available

3—international number, presentation restricted, number available

4—national number, presentation allowed, number not available
 5—international number, presentation allowed, number not available
 6—national number, presentation restricted, number not available
 7—international number, presentation restricted, number not available
 8—national number, presentation allowed, number available
 9—international number, presentation allowed, number available
 10—national number, presentation restricted, number available
 11—international number, presentation restricted, number available
 12—national number, presentation allowed, number not available
 13—international number, presentation allowed, number not available
 14—national number, presentation restricted, number not available
 15—international number, presentation restricted, number not available
none—The NAI from the incoming message is used.

Default: none

Example

The following example sets the IS41 SMS options when MO SMS ASD or MO SMS GRN feature is enabled:

chg-is41smsopts:modaparam=da:mosmsnai=intl:mosmsac len=3

The following example sets the IS41 SMS options when the MT-based IS41 SMS NP feature is enabled:

chg-is41smsopts:mtsmdltr=no:mtsmsparm=digit

The following example sets the IS41 SMS options when the MT-based IS41 SMS NP feature is enabled:

chg-is41smsopts:mtsmdltrv=9854:mtsmsackn=nack:mtsmesen=no

The following example sets the IS41 SMS options when the MT-based IS41 SMS NP feature is enabled:

chg-is41smsopts:mtsmsssn=2:mtsmsnakerr=55:mtsmdigtype=25

The following example sets the IS41 SMS options when the MT-based IS41 SMS NP feature is enabled:

chg-is41smsopts:mtsmschksrc=no

The following example sets the IS41 SMS options when the MO SMS B-Party Routing feature is enabled:

chg-is41smsopts:bpartygttsn=setintl:mosmsgttldig=mapbparty

The following example sets the IS41 SMS options when the MT-based IS41 SMS NP feature is enabled:

chg-is41smsopts:mtsmdnfmt=dn:mtsmstype=sp

The following example sets the IS41 SMS options when the MO-based IS41 SMS NP feature is enabled:

chg-is41smsopts:mosmstype=sp:mosmsnai=intl:mosmsdigmat=exact:modaparam=da:mosmsac len=3

The following example sets the IS41 SMS options when the MO SMS IS41-to-GSM Migration feature is enabled.

chg-is41smsopts:mosmsdigmat=exact:moigmpfx=is412gsm:modaparam=da:mosmsnai=intl:mosmsac len=3

The following example sets the Area Code Length, when MO-based IS41 SMS NP, MO SMS IS41-to-GSM Migr , MO SMS ASD or MO SMS GRN feature is enabled:

chg-is41smsopts:mosmsaclen=5

Dependencies

At least one parameter must be specified.

The **mtsmsdltrv** parameter must be specified before a value of **prern** or **postrn** can be specified for the **mtsmsdltr** parameter.

The value specified for the **bpartygttsn** parameter must match the name of an existing GTT Set.

The **mosmsgttdig=sccpcdpa** parameter must be specified before the **bpartygttsn=none** parameter can be specified.

The GTT set specified for the **bpartygttsn** parameter must have **settype=cdgta** (see the **ent-gttset** command).

If the **bpartygttsn=none** parameter is specified, then the **mosmsgttdig=mapbparty** parameter cannot be specified.

The GTT Set table is corrupt or cannot be found.

The EGLEOPTS table is corrupt or cannot be found.

The MT-Based IS41 SMS NP feature must be enabled before the **mtsmsdnfmt**, **mtsmstype**, **mtsmsparm**, **mtsmsdltr**, **mtsmsdltrv**, **mtsmsackn**, **mtsmsesn**, **mtsmsssn**, **mtmsnakerr**, **mtmsdigtype** or **mtmschksrc** parameters can be specified.

The MO SMS IS41-to-GSM Migration feature must be enabled before the **moigmpfx** parameter can be specified.

The MO SMS B-Party Routing feature must be enabled before the **bpartygttsn** or **mosmsgttdig** parameter can be specified.

The MO-based IS41 SMS NP or MO SMS IS41-to-GSM Migration feature must be enabled before the **mosmsdigmat** parameter can be specified.

The MO-based IS41 SMS NP feature must be enabled before the **mosmstype** parameter can be specified.

The MO-based IS41 SMS NP, MO SMS IS41-to-GSM Migration, MO SMS ASD, or MO SMS GRN feature must be enabled before the **modaparam**, **mosmsnai**, or **mosmsaclen** parameter can be specified. The **modaparam** parameter can also be specified if the MO SMS B-Party Routing feature is enabled.

Output

```
chg-is41smsopts:mtsmsackn=ack
tekelecstp 08-05-11 13:11:27 EST EAGLE 39.0.0
CHG-IS41SMSOPTS: MASP A - COMPLTD
;
```

chg-isup-msg

Change ISUP Message

Use this command to enter or change specific parameters of an ISUP test message in the TESTMSG table. The TIF Test Tool processes ISUP test messages to verify the TIF and NPP provisioned configuration in the system.

Keyword: **chg-isup-msg**

Related Commands: **rtrv-isup-msg**, **tst-msg**

Command Class: Database Administration

Parameters

:msgn= (mandatory)

Test message number. This parameter specifies the ISUP test message number for which parameters are being changed in the TESTMSG table.

Range: 1-10

:active= (optional)

Active. This parameter sets the *Active* field of the specified ISUP test message.

Range: no, yes

no — Do not send the message to the network card for processing.

yes — Send the message to the network card for processing.

Default: no

:cdpndgts= (optional)

Called Party Number digits. This parameter specifies the value for the CdPN digits in the specified ISUP test message.

Range: 1-32 digits

1 - 32 hexadecimal digits. Valid digits are **0-9, a-f, A-F**.

Default: No change to the current value

:cdpnnai= (optional)

Called Party Number Nature of Address Indicator. This parameter specifies the value for the CdPN NAI in the specified ISUP test message.

Range: 0-127

Default: No change to the current value

:cgpnecat= (optional)

Calling Party Number Category. This parameter specifies the value of the CgPN Category in the specified ISUP test message.

Range: 0-255

Default: 0

:cgpndgts= (optional)

Calling Party Number digits. This parameter specifies the value for the CgPN digits in the specified ISUP test message.

Range: 1-32 digits

1 - 32 hexadecimal digits. Valid digits are **0-9, a-f, A-F**.

Default: No change to the current value

:cgpnnai= (optional)

Calling Party Number Nature of Address Indicator. This parameter specifies the value of the CgPN NAI in the specified ISUP test message.

Range: 0-127

Default: No change to the current value

:nmbits= (optional)

NM Bits. This parameter specifies the value of the NM bits in the specified ISUP test message. The NM bits are used to determine whether a number portability lookup has already been performed in the network.

Range: 0-3

0-1—Portability has not been performed.

2—The number is not ported.

3—The number is ported.

Default: 0

Example

```
chg-isup-
msg:msgn=1:active=yes:nmbits=1:cgpnsgts=987654321:cdpnsgts=923487
:cdpnai=125
chg-isup-msg:msgn=6:cgpnsgts=200:cdpnai=23
```

Dependencies

At least one of the optional parameters must be specified.

At least one TIF feature must be enabled before this command can be entered.

Output

```
chg-isup-msg:msgn=10:active=yes:nmbits=1
tekelecstp 08-07-24 10:37:20 EST EAGLE 39.2.0
CHG-ISUP-MSG: MASP A - COMPLTD
;
```

chg-l2t

Change Level 2 Timers

Use this command to change the values of the SS7 MTP level 2 timers. These timers are organized in 30 timer sets of 9 timer values each. The timer sets are grouped and system default values are initialized by specification (ANSI, ITU, High Speed for China, and High Speed for Q.703 Annex A). Each timer set is administered individually by this command. The **ent-slk** command is used to assign an SS7 signaling link to any of the timer sets. Each assigned link is associated with a timer set.

Keyword: chg-l2t

Related Commands: ent-slk, rtrv-l2t, rtrv-slk

Command Class: Database Administration

Parameters

:l2tset= (mandatory)

Level 2 timer set identifier, or timer set number. Up to 30 different timer sets can be defined. A signaling link may be assigned to any one of the 30 timer sets.

Range: 1-30

1-10 for ANSI links

11-20 for low-speed ITU links

21-25 for China high speed links

26-30 for Q.703 Annex A high speed links

:nodata= (optional)

This parameter specifies a value for the NODATA timer.

The NODATA timer measures the amount of time, in milliseconds, that must pass with no transmissions on a link before the EAGLE 5 ISS interprets the condition as a link failure or terminal equipment failure and initiates changeover procedures.

Range: 100-500

Default: No change to the current value

System

Default: 100

:t1= (optional)

Timer 1—Aligned/ready

Range: 5000-350000

For ANSI timer sets 1-10—5000-20000 milliseconds

For ITU timer sets 11–20—~~40000–50000~~ milliseconds
 For China timer sets 21–25—~~25000–350000~~ milliseconds
 For Q.703 Annex A timer sets 26–30—~~25000–350000~~ milliseconds
Default: No change to the current value

System

Default: For ANSI timer sets 1–10—~~13000~~ milliseconds
 For ITU timer sets 11–20—~~40000~~ milliseconds
 For China timer sets 21–25—~~150000~~ milliseconds
 For Q.703 Annex A timer sets 26–30—~~300000~~ milliseconds

:t2= (optional)

Timer 2—Not aligned

Range: ~~5000–150000~~

For ANSI timer sets 1–10—~~5000–30000~~ milliseconds
 For ITU timer sets 11–20—~~5000–150000~~ milliseconds
 For China timer sets 21–25—~~5000–150000~~ milliseconds
 For Q.703 Annex A timer sets 26–30—~~5000–150000~~ milliseconds

Default: No change to the current value

System

Default: For ANSI timer sets 1–10—~~11500~~ milliseconds
 For ITU timer sets 11–20—~~30000~~ milliseconds
 For China timer sets 21–25—~~130000~~ milliseconds
 For Q.703 Annex A timer sets 26–30—~~130000~~ milliseconds

:t3= (optional)

Timer 3—Aligned

Range: ~~5000–20000~~

For ANSI timer sets 1–10—~~5000–30000~~ milliseconds
 For ITU timer sets 11–20—~~1000–2000~~ milliseconds
 For China timer sets 21–25—~~1000–2000~~ milliseconds
 For Q.703 Annex A timer sets 26–30—~~1000–2000~~ milliseconds

Default: No change to the current value

System

Default: For ANSI timer sets 1–10—~~11500~~ milliseconds
 For ITU timer sets 11–20—~~2000~~ milliseconds
 For China timer sets 21–25—~~1000~~ milliseconds
 For Q.703 Annex A timer sets 26–30—~~1000~~ milliseconds

:t4epp= (optional)

Timer 4—Proving period Emergency

Range: ~~200–1000~~

For ANSI timer sets 1–10—~~200–1000~~ milliseconds
 For ITU timer sets 11–20—~~400–600~~ milliseconds
 For China timer sets 21–25—~~400–600~~ milliseconds
 For Q.703 Annex A timer sets 26–30—~~400–600~~ milliseconds

Default: No change to the current value

System

Default: For ANSI timer sets 1–10—~~600~~ milliseconds
 For ITU timer sets 11–20—~~500~~ milliseconds
 For China timer sets 21–25—~~500~~ milliseconds
 For Q.703 Annex A timer sets 26–30—~~500~~ milliseconds

:t4npp= (optional)

Timer 4— Proving period normal

Range: **500-70000**
 For ANSI timer sets 1–10—**500–5000** milliseconds
 For ITU timer sets 11–20—**7500–9500** milliseconds
 For China timer sets 21–25—**3000–70000** milliseconds
 For Q.703 Annex A timer sets 26–30—**3000–70000** milliseconds

Default: No change to the current value

System

Default: For ANSI timer sets 1–10—**2300** milliseconds
 For ITU timer sets 11–20—**8200** milliseconds
 For China timer sets 21–25—**30000** milliseconds
 For Q.703 Annex A timer sets 26–30—**30000** milliseconds

:t5= (optional)
 Timer 5—Sending SIB

Range: **40-500**
 For ANSI timer sets 1–10—**40–500** milliseconds
 For ITU timer sets 11–20—**80–120** milliseconds
 For China timer sets 21–25—**80–120** milliseconds
 For Q.703 Annex A timer sets 26–30—**80–120** milliseconds

Default: No change to the current value

System

Default: For ANSI timer sets 1–10—**100** milliseconds
 For ITU timer sets 11–20—**100** milliseconds
 For China timer sets 21–25—**100** milliseconds
 For Q.703 Annex A timer sets 26–30—**100** milliseconds

:t6= (optional)
 Timer 6—Remote congestion

Range: **1000-10000**
 For ANSI timer sets 1–10—**1000–10000** milliseconds
 For ITU timer sets 11–20—**3000–6000** milliseconds
 For China timer sets 21–25—**3000–6000** milliseconds
 For Q.703 Annex A timer sets 26–30—**3000–6000** milliseconds

Default: No change to the current value

System

Default: For ANSI timer sets 1–10—**4000** milliseconds
 For ITU timer sets 11–20—**4000** milliseconds
 For China timer sets 21–25—**5000** milliseconds
 For Q.703 Annex A timer sets 26–30—**5000** milliseconds

:t7= (optional)
 Timer 7—Excessive delay of acknowledgment

Range: **200-3000**
 For ANSI timer sets 1–10—**200–3000** milliseconds
 For ITU timer sets 11–20—**500–2000** milliseconds
 For China timer sets 21–25—**500–2000** milliseconds
 For Q.703 Annex A timer sets 26–30—**500–2000** milliseconds

Default: No change to the current value

System

Default: For ANSI timer sets 1–10—**1500** milliseconds
 For ITU timer sets 11–20—**1500** milliseconds
 For China timer sets 21–25—**800** milliseconds
 For Q.703 Annex A timer sets 26–30—**800** milliseconds

Example

```
chg-l2t:l2tset=1:t1=5400
```

```
chg-l2t:l2tset=21:t4epp=600:t5=90:t6=3500:t7=1900
```

```
chg-l2t:l2tset=1:nodata=200
```

Dependencies

At least one optional parameter must be specified.

The value specified for the **nodata** parameter must be between **100** and **500** milliseconds.

Notes

ANSI timer defaults are within the Telcordia recommended ranges.

ITU timer defaults are within ITU Q.703 white book recommended ranges.

If the value specified for the **nodata** parameter is greater than 200 milliseconds, then the following message appears:



CAUTION: WARNING: If NODATA timer value is greater than 200ms, links could go into congestion before link failure is declared

Output

```
chg-l2t:l2tset=21:t4epp=600:t5=90:t6=3500:t7=1900
```

```
rlghncxa03w 05-02-07 11:11:28 EST EAGLE5 34.0.0
CHG-L2T: MASP A - COMPLTD
```

```
;
```

```
chg-l2t:l2tset=1:nodata=200
```

```
tekelecstp 08-05-02 16:36:09 EST EAGLE 39.0.0
CHG-L2T: MASP A - COMPLTD
```

chg-l3t**Change Level 3 Timers**

Use this command to change the SS7 MTP level 3 timers. The SS7 MTP level 3 timers are organized in a timer set of 21 values each. Only one timer set is administered by this command. Each linkset is associated with the SS7 MTP level 3 Timer set. The linkset and timer set association is assigned with the link administration commands.

Keyword: chg-l3t

Related Commands: chg-l2t, rtrv-l2t, rtrv-l3t

Command Class: Database Administration

Parameters

NOTE: You can enter seconds or milliseconds for the timer values. If seconds are entered, the timer value must contain at least one decimal place, but it can contain up to three decimal places. If you do not use decimal places, the system accepts the value as milliseconds. Be aware that the rtrv-l3t command always displays the output in seconds, not milliseconds.

:l3tset= (mandatory)

Timer set table. Only one timer set table exists. All SS7 signaling links use the SS7 MTP level 3 timer set table.

Range: 1

:it18= (optional)

For ITU networks.

Timer 18—Timer within a signaling point whose MTP restarts to supervise the receipt of routing information and the activation of the link and link set; in seconds.

Range: 19.0-50.0

Default: No change to the current value.

System

Default: 50.0

:it19= (optional)

For ITU networks.

Timer 19—Supervision timer during MTP restart to avoid ping-pong of TFP, TFR1, and TRA messages; in seconds.

Range: 67.0-69.0

Default: No change to the current value

System

Default: 67.0

:it20= (optional)

For ITU networks.

Timer 20—Overall MTP restart timer at the signaling point whose MTP restarts; in seconds.

Range: 59.0-61.0

Default: No change to the current value.

System

Default: 59.0

:it21= (optional)

For ITU networks.

Timer 21—Overall MTP restart timer at a signaling point adjacent to one whose MTP restarts; in seconds.

Range: 63.0-65.0

Default: No change to the current value.

System

Default: 63.0

:it22= (optional)

For ITU networks.

Timer 22—Waiting to repeat local inhibit test; in seconds.

Range: 180.0-360.0

Default: No change to the current value

System

Default: 90.0

:it23= (optional)

For ITU networks.

Timer 23—Waiting to repeat remote inhibit test; in seconds.

Range: 180.0-360.0

Default: No change to the current value

System

Default: 90.0

:t1= (optional)

For ANSI or ITU networks.

Timer 1—Changeover delay in seconds. Also used as isolation timer for ITU MTP Restart.

Range: 0.1-2.0

Default: No change to the current value

System

Default: 0.8

:t10= (optional)

For ANSI or ITU networks.

Timer 10—Wait to repeat signaling route set test (SRST) message; in seconds.

Range: 20.0-90.0

Default: No change to the current value

System

Default: 30.0

:t11= (optional)

For ANSI or ITU networks.

Timer 11—Transfer restricted; in seconds.

Range: 1.0-90.0

Default: No change to the current value System

System

Default: 30.0

:t12= (optional)

For ANSI or ITU networks.

Timer 12—Wait for uninhibit acknowledgment; in seconds.

Range: 0.1-2.0

Default: No change to the current value

System

Default: 0.8

:t13= (optional)

For ANSI or ITU networks.

Timer 13—Wait for force uninhibit; in seconds.

Range: 0.1-2.0

Default: No change to the current value.

System

Default: 0.8

:t14= (optional)

For ANSI or ITU networks.

Timer 14—Wait for inhibit acknowledgment; in seconds.

Range: 0.2-4.0

Default: No change to the current value

System

Default: 2.0

:t15= (optional)

For ANSI or ITU networks.

Timer 15—Wait for repeat route set congestion test (RSCT); in seconds.

- Range:** 0.2-4.0
Default: No change to the current value
System
Default: 3.0
- :t16=** (optional)
For ANSI or ITU networks.
Timer 16—Wait for route set congestion test (RSCT) update; in seconds.
Range: 0.2-3.0
Default: No change to the current value
System
Default: 1.4
- :t17=** (optional)
For ANSI or ITU networks.
Timer 17—Delay to avoid oscillation of initial alignment failure; in seconds.
Range: 0.5-2.0
Default: No change to the current value
System
Default: 0.8
- :t18=** (optional)
For ANSI networks.
Timer 18—Repeat transfer restricted (TFR) once by response method; in seconds.
Range: 2.0-20.0
Default: No change to the current value
System
Default: 10.0
- :t19=** (optional)
For ANSI networks.
Timer 19—Failed link craft referral timer; in seconds.
Range: 30.0-600.0
Default: No change to the current value.
System
Default: 480
- :t2=** (optional)
For ANSI or ITU networks.
Timer 2—Wait for changeover acknowledge (COA); in seconds.
Range: 0.1-3.0
Default: No change to the current value
System
Default: 1.4
- :t20=** (optional)
For ANSI networks.
Timer 20—Repeat local inhibit test; in seconds.
Range: 90.0-120.0
Default: No change to the current value
System
Default: 90.0

:t21= (optional)

For ANSI networks.

Timer 21—Repeat remote inhibit test; in seconds.

Range: 90.0-120.0

Default: No change to the current value

System

Default: 90.0

:t22= (optional)

For ANSI networks.

Timer 22—Timer at restarting STP, waiting for signaling links to become available; in seconds.

Range: 10.0-60.0

Default: No change to the current value.

System

Default: 10.0

:t23= (optional)

For ANSI networks.

Timer 23—Timer at restarting STP, started after T22, waiting to receive all TRA messages; in seconds.

Range: 9.0-100.0

Default: No change to the current value.

System

Default: 10.0

:t24= (optional)

For ANSI networks.

Timer 24—Timer at restarting STP with transfer function, started after T23, waiting to broadcast all TRA messages; in seconds.

Range: 9.0-60.0

Default: No change to the current value.

System

Default: 10.0

:t25= (optional)

For ANSI networks.

Timer 25—Timer at adjacent STP and restarting STP, waiting for TRA message; may be started at level 2; in seconds.

Range: 30.0-35.0

Default: No change to the current value

System

Default: 30.0

:t26= (optional)

For ANSI networks.

Timer 26—Timer at restarting STP, waiting to repeat TRW message; in seconds.

Range: 12.0-15.0

Default: No change to the current value.

System

Default: 12.0

:t28= (optional)

For ANSI networks.

Timer 28—Timer at STP adjacent to restarting STP, waiting for TRW message; in seconds.

Range: 3.0-35.0

Default: No change to the current value

System

Default: 3.0

:t29= (optional)

For ANSI networks.

Timer 29—Timer started when a TRA is sent in response to an unexpected TRA or TRW; also, started when traffic resumed without receipt of TRA; in seconds.

Range: 60.0-65.0

Default: No change to the current value

System

Default: 60.0

:t3= (optional)

For ANSI or ITU networks.

Timer 3—Time controlled diversion on changeback; in seconds.

Range: 0.1-2.0

Default: No change to the current value

System

Default: 0.8

:t30= (optional)

For ANSI networks.

Timer 30—Timer to limit sending of TFPs/TFRs in response to an unexpected TRA or TRW; in seconds.

Range: 30.0-35.0

Default: No change to the current value

System

Default: 30.0

:t31= (optional)

For ANSI networks.

Timer 31—False link congestion detection; in seconds.

Range: 10.0-120.0

Default: No change to the current value.

System

Default: 60.0

:t32= (optional)

For ANSI networks.

Timer 32—Link oscillation timer – Procedure A; in seconds.

Range: 60.0-120.0

Default: No change to the current value.

System

Default: 60.0

:t4= (optional)

For ANSI or ITU networks.

Timer 4—Wait for changeback acknowledge (CBA) #1; in seconds.

Range: 0.1-2.0

Default: No change to the current value

System

Default: 0.8

:t5= (optional)

For ANSI or ITU networks.

Timer 5—Wait for changeback acknowledge (CBA) #2; in seconds.

Range: 0.1-2.0

Default: No change to the current value

System

Default: 0.8

:t6= (optional)

For ANSI or ITU networks.

Timer 6—Controlled reroute; in seconds.

Range: 0.1-2.0

Default: No change to the current value

System

Default: 0.8

:t7= (optional)

For ANSI or ITU networks.

Timer 7—Signaling data link connection (SDLC) acknowledged; in seconds.

Range: 0.1-3.0

Default: No change to the current value.

System

Default: 1.0

:t8= (optional)

For ANSI or ITU networks.

Timer 8—Transfer prohibited (TFP) inhibit; in seconds.

Range: 0.5-2.0

Default: No change to the current value.

System

Default: 0.8

Example

chg-l3t:l3tset=1:t1=800

chg-l3t:l3tset=1:t5=800:t6=800:t32=70000

Dependencies

The minimum parameter requirement is the table number and at least one timer specified.

Do not specify T20 and IT22 pairs of timers together because one value overrides the other.

Do not specify T21 and IT23 pairs of timers together because one value overrides the other.

Notes

The command line allows 157 characters. Some SS7 MTP level 3 timer changes may exceed this limit. Multiple entries of this command may be required in such cases.

Timer 9 is not currently supported in the SS7 protocol, and has been omitted from this manual. The command will support this timer when it has been defined in the protocol.

The default values are within the Telcordia recommended ranges.

Output

chg-l3t:l3tset=1:t1=800

```
rlghncxa03w 04-01-07 08:40:50 EST EAGLE 31.3.0
CHG-L3T: MASP A - COMPLTD
;
```

chg-lbp

Change Loopback Point's Attribute Values

Use this command to change a far-end loopback point's attribute values maintained in the link fault sectionalization table.

Keyword: **chg-lbp**

Related Commands: **act-lbp, dact-lbp, dlt-lbp, ent-lbp, rtrv-lbp**

Command Class: Database Administration

Parameters

:lbp= (mandatory)

Loopback point ID. This parameter identifies a far-end loopback point that lies along an SS7 signaling link path between the STP and the target device (up to *and including* the target device).

Range: **1-32**

:link= (mandatory)

SS7 signaling links. The SS7 signaling link to be tested.

Synonym: **port**

Range: **a, b, a1-a31, b1-b31**

Not all card types support all **link** parameter values.

See "Summary of Range Values for :link Parameter" for valid **link** parameter range values for each type of card that can have assigned signaling links.

:loc= (mandatory)

Card location. The unique identifier of a specific application subsystem located in the STP.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

:cli= (optional)

Common Language Location Identifier (CLLI) code. This parameter specifies the CLLI or other mnemonic identifier used to refer to the given loopback point.

Range: **ayyyyyyyyyy**

1 alphabetic character followed by up to 23 alphanumeric characters

Default: No change to the cli value

:lft= (optional)

Link fault sectionalization test. The type of link fault sectionalization loopback test to be performed.

Range: **lft, nlt**

lft—latching loopback test

nlt—nonlatching loopback test

:rep= (optional)

Repetition count. The number of link elements of the same type (not including the target device) that lie between the STP and the link element to be tested.

Range: 0-31

Default: No change unless:

0—The link element to be looped back for testing is NEI (**rle=nei** is specified)

0—The type of link fault sectionalization test is NLT (**lfst=nlt** is specified)

0—The type of link fault sectionalization test is NLT (**lfst=nlt** is specified)

0—The new remote link element is the first loopback point of the link to be tested

1-30—Next sequential number for subsequent loopback points of the link to be tested

:rle= (optional)

Remote link element. The link element to be looped back for testing.

Range: ds0, ocu, csu, dsu, nei

Default: No change to the rle value

Example

chg-lbp:loc=1101:link=a:lbp=1:rle=ds0:lfst=llt

Dependencies

The Link Fault Sectionalization (LFS) feature must be on before using this command.

At least one optional parameter must be specified.

The card location specified in the **loc** parameter cannot be reserved by the system.

The card location (**loc** parameter) must identify a provisioned **limds0**, **limit1**, or **limch** (associated to a **limit1**) card configured with either an **ss7ansi** or **ccs7itu** application.

The CLLI cannot be a reserved word.

The **rep** parameter value that is specified for this loopback point (LBP) must be greater than the **rep** parameter value of any previously defined LBP and less than the **rep** parameter value of any subsequently defined LBP.

The **rep** parameter must be specified if the default value is a duplicate of the **rep** parameter value of any previously defined loopback point.

The LBP must have been previously defined.

The **rep** parameter can be specified only if the **lfst=llt** parameter is specified.

If the **rle=nei** parameter is specified, the **rep=0** parameter must be specified.

The **rle=ds0** or the **rle=nei** parameter cannot be specified if the **lfst=nlt** parameter is specified. The DS0 and Network Element Interface (NEI) link elements do not support non-latching loopbacks.

For each SS7 signaling link, you can define only one loopback point with **rle=nei** specified; and that loopback point must be the terminating SS7 signaling link component.

For each SS7 signaling link, the loopback point with **rle=nei** specified must be the terminating SS7 signaling link component.

The card location specified in the **loc** parameter must be equipped.

Notes

None

Output

```
chg- lbp: loc=1101:port=a: lbp=1: r le=ds0: lfst=llt
```

```
rlghncxa03w 05-01-17 15:35:05 EST EAGLE5 33.0.0
CHG-LBP: MASP A - COMPLTD
```

```
;
```

chg-lnp-serv**Change LNP Service**

Use this command to change an existing LNP service. You can specify a new translation type, digit validity indicator, and translation type name for the existing service. A new translation type name of **none** defaults the name back to the reserved service type name.

Keyword: **chg-lnp-serv**

Related Commands: **dlt-lnp-serv**, **ent-lnp-serv**, **rtrv-lnp-serv**

Command Class: Database Administration

Parameters

NOTE: All alias translation types must be removed before the service can be moved to another translation type.

:ndv= (optional)

New digits valid.

Range: **sccp**, **tcap**

Default: The current value

:nserv= (optional)

New reserved service type name.

Range: **ain**, **in**, **pcs**, **wnp**, **class**, **lidb**, **cnam**, **isvm**, **lnpqs**, **wsmcsc**, **udf1**, **udf2**, **udf3**, **udf4**, **lrnqt**

Default: The current value

:ntt= (optional)

New translation type.

Range: **0-255**

Default: The current value

:nttn= (optional)

User defined TT name.

Range: **ayyyyyyyyy**, **none**

1 to 8 alphabetic characters, or **none**

Default: If **none** is specified, the default value is the reserved service type name (**serv** parameter).
If **none** is not specified, no change to current value.

:serv= (optional)

Reserved service type name.

Range: **ain**, **in**, **pcs**, **wnp**, **class**, **lidb**, **cnam**, **isvm**, **lnpqs**, **wsmcsc**, **udf1**, **udf2**, **udf3**, **udf4**, **lrnqt**

Default: The current value

:tt= (optional)

Translation type.

Range: **0-255**

Default: The current value

Example

```
chg-lnp-serv:serv=lidb:ntt=22, ndv=tcap:nttn=mr lidb
chg-lnp-serv:tt=11:nserv=lnpqs
chg-lnp-serv:tt=239:nserv=lrnqt
```

Dependencies

The LNP feature must be turned on before this command can be entered (see the **enable-ctrl-feat** and **chg-ctrl-feat** commands).

The LNP feature is "turned on" when a value for the LNP ported TNs quantity is shown in the **rtrv-ctrl-feat** command output.

The LNP SMS feature must be turned on before the **serv=wsmc** parameter can be specified.

The PCS 1900 LNP (PLNP) feature must be turned on before the **nserv=pcs** parameter can be specified.

The WNP feature must be turned on before the **nserv=wnp** parameter can be specified.

The **serv** parameter or the **tt** parameter must be specified in the command.

The value of the **ntt** parameter cannot already exist in the LNP database.

The value of the **nttn** parameter cannot already exist in the LNP database.

The value of the **serv** parameter must already exist in the LNP database.

The **nserv** and **tt** parameters must be specified together in the command. If these parameters are specified, then no other parameter can be specified in the command. If the value specified for the **tt** or **nserv** parameter is already associated with the **class**, **lidb**, **cnam**, **isvm**, **wsmc**, **udf1**, **udf2**, **udf3**, or **udf4** service, then a value of **lnpqs**, **ain**, **in**, **wnp**, or **pcs** cannot be specified for the **nserv** or **tt** parameter, respectively. The **tt** and **ntt** parameters cannot be specified together in the command.

The value of the **ndv** parameter cannot match the parameter of the **dv** parameter.

An LNP alias cannot be specified as the value for the **ntt** parameter.

All LNP aliases for the value of the **serv** parameter must be removed from the LNP database before the **serv** parameter can be specified.

A reserved service type name can be specified for the **nttn** parameter only if the name matches the existing service (**serv** parameter)

If a value of **udf1**, **udf2**, **udf3**, or **udf4** is specified for the **serv** parameter, then the **ndv=sccp** parameter must be specified.

If a value of **lnpqs**, **ain**, **in**, **pcs**, **wnp**, or **lrnqt** is specified for the **serv** parameter, then the **ndv=tcap** parameter must be specified.

If the **serv** parameter is specified, then the **ntt**, **nttn**, or **ndv** parameter must be specified. If the **tt** parameter is specified, then the **nserv** parameter must be specified.

The LRNQT feature must be turned on (see the **chg-ctrl-feat** command) before the **(n)serv=lrnqt** parameter can be specified.

A maximum of 6 Message Relay services are allowed.

The values entered or referenced in the command create an invalid DV or SERV.

If a user-defined type is specified as a value for the **nserv** parameter or was specified for the **serv** parameter (see the **ent-lnp-serv** command), then a value of **sccp** must have been specified for the **dv** parameter or must be specified for the **ndv** parameter.

If a value of **wnp**, **ain**, **pcs**, **in**, or **lnpqs** is specified for the **nserv** parameter or was specified for the **serv** parameter, then a value of **tcap** must have been specified for the **dv** parameter or must be specified for the **ndv** parameter.

Notes

None

Output

```
chg-lnp-serv:serv=ldb:ntt=22:ndv=tcap:nttn=mrldb
rlghncxa03w 02-11-18 08:50:12 EST EAGLE 30.0.0
CHG-LNP-SERV: MASP A - COMPLTD
;
```

chg-lnp-ttmap

Change LNP Translation Type Mapping

Use this command to create, change, or disable the existing message relay global title (MRGT) LNP GT entry for a group of existing telephone numbers (TN) in the database. This command allows you to specify a translation type and global title address treatment of different service providers according to the DPC configured in the message relay (MR) global title translation (GTT) table.

NOTE: As of Release 40.1, this command is obsolete.

Keyword: chg-lnp-ttmap

Related Commands: rtrv-lnp-ttmap

Command Class: LNP Database

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:pc= (mandatory)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: pca

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001-005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006-255**.

The point code **000-000-000** is not a valid point code.

:tt= (mandatory)

Translation type.

Range: 0-255

:nngt= (optional)

New new global title translation type.

Range: 0-255 none

Default: No change to current value

:nrgta= (optional)

New replacement **gta** treatment.

Range: yes, no

Default: No change to current value

Example

chg-lnp-ttmap:tt=16:pc=233-233-233:nngt=28

Dependencies

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before this command can be entered.

At least one optional parameter must be specified.

The **tt** cannot be an LNP alias.

The point code (**pc/pca** parameter) must exist in the routing table.

Notes

Entering this command one time affects all of the TNs that reference the specified DPC in their default MR GTT or MR GTT respectively.

If the **nngt** parameter is specified, the **xlat=dpcnngt** and **ri=gt** parameter values must be specified. If they are not specified, they are changed to those values.

The **nrgta** parameter assumes an associated LRN is specified. If no LRN is specified, the real-time database displays *not found* information.

If the **nrgta** or **ngt** parameter is specified, it performs a global database assignment of **ngt** or **rgta** to the specified translation type and point code combination in the database.

Output

chg-lnp-ttmap:tt=16:pc=233-233-233:nngt=28

```
rlghncxa03w 04-01-05 16:40:40 EST EAGLE 31.3.0
CHG-LNP-TTMAP: MASP A - COMPLTD
```

;

chg-lnpopts

Change LNP System Options

Use this command to enter LNP-specific system options in the database. This command updates the LNPOPTS table.

Keyword: **chg-lnpopts**

Related Commands: **rtrv-lnpopts**

Command Class: Database Administration

Parameters

NOTE: As of Release 40.1 the **aud** parameter is obsolete.

:admhipri= (optional)

Give LNP database administration the highest administrative priority in the system.

Range: **yes, no**

Default: The current value.

:amactype= (optional)

AMA call type.

Range: 3 digits

Default: The current value.

:amafeatid= (optional)

AMA feature ID.

Range: 3 digits
Default: The current value.

:amaslpid= (optional)

AMA slip ID.

Range: 9 digits
Default: The current value.

:ccp= (optional)

Copy charge parameters. When this parameter is enabled (**ccp=yes**), the EAGLE 5 ISS copies the Charge Number and Charge Party Station type from an LNP AIN query (if present) to the LNP AIN Response message.

Range: **yes, no**
Default: The current value.

:cic= (optional)

Carrier identification code.

Range: 3-4 digits
Default: The current value.

:frcsmplx= (optional)

Allow simplex database updates.

Range: **yes, no**
Default: The current value.

:gtwystp= (optional)

Indicates that the LNP system is also configured as a Gateway STP.

Range: **yes, no**
Default: The current value.

:incslp= (optional)

Include AMA slip ID in the response.

Range: **yes, no**
Default: The current value.

:jipdigits= (optional)

The Jurisdictional Information Parameter value.

Range: 6 digits
Default: The current value.

:jipprv= (optional)

Determines whether a Jurisdictional Information Parameter value is to be added to the IAM.

Range: **yes, no**
Default: The current value.

:servport= (optional)

Service portability.

Range: **yes, no**
yes— This is a protocol setting that allows splitting services between TN and LRN override records. This setting lets the EAGLE LNP craftsperson update LRN overrides for message relay services that are to be supported in the network. The EAGLE 5 ISS then uses the TN gateway point code (NPAC subscription data) for message relay services the CLEC wants to provide.
no— If no LRN override services are provisioned, then the TN's gateway point codes (NPAC subscription data) are used to route queries out of the network. If one or more LRN override services are provisioned, the TN is considered to be ported into the network. In this case, if an LRN override service is requested and the LRN has other

services administered, but the requested service is not provisioned, then a UDTs response for the service is provided.

Default: The current value

:sp= (optional)

Service provider ID.

Range: xyyy
 4 alphanumeric characters

Default: The current value.

:wqredrct= (optional)

Wireless queries directed to default GTT.

Range: **on, off**

on — This setting allows the GTT functionality to treat any wireless LNP (WNP and PCS) queries that require GT as a normal GTT.

off — This setting routes all wireless LNP queries (WNP and PCS) that require GT directly to the local subsystem.

Default: the current value

:wsmsc10dig= (optional)

SCCP GTA digit length indicator for 10 or 11 digits.

Range: **yes, no**

yes — The system verifies that either 10 or 11 digits are present in the CDPA GTA. If 11 digits are present, the first digit is stripped to derive 10 digits for LNP SMS translation. If 10 digits are present, all 10 digits are used for LNP SMS translation.

no — The system verifies that 11 digits (plus a padded 0 digit) are present in the CDPA GTA. If 11 digits are present, the system strips the first digit and considers only 10 digits for LNP SMS translation.

Default: the current value

:aud= (obsolete)

Audit indicator.

Range: **on, off**

Default: The current value.

Example

```
chg-lnpopts:amaslpid=123456789
```

```
chg-lnpopts:amactype=003
```

```
chg-lnpopts:amafeatid=010
```

```
chg-lnpopts:incslp=yes
```

```
chg-lnpopts:cic=1369
```

```
chg-lnpopts:aud=on
```

```
chg-lnpopts:sp=1234
```

```
chg-lnpopts:jipdigits=919460
```

```
chg-lnpopts:jipprv=yes
```

```
chg-lnpopts:frcsmplx=yes
```

```
chg-lnpopts:admhipri=yes
```

```
chg-lnpopts:gtwystp=yes
```

```
chg-lnpopts:ccp=yes
```

```
chg-lnpopts:servport=yes
```

```
chg-lnpopts:wqredrct=off
chg-lnpopts:wsmc10dig=yes
```

Dependencies

At least one optional parameter must be specified.

The LNP feature (see the **enable-ctrl-feat** command) and the Triggerless LNP (TLNP) feature must be turned on before this command can be entered.

The Triggerless LNP feature must be turned on before the **jipprv** and the **jipdigits** parameters can be specified.

The LNP SMS feature must be turned on before the **wsmc10dig** parameter can be specified.

The LNP feature (see the **enable-ctrl-feat** command) must be turned on before this command can be entered.

The INP feature must be turned on before the **lrndgts**, **tndgts**, **dra**, or **naiv** parameters can be specified.

The WNP or PCS feature must be turned on before the **wqredrct** parameter can be specified.

Notes

The **frscmplx** parameter is used to force the system in a forced simplex mode. In this mode, simplex updates are accepted by the active OAM if the standby OAM is in one of the following states: incoherent, diff level, or unstable.

If the **admhipri** parameter is set to **yes**, LNP database administration can starve out normal STP updates during LNP administration of 2 TNs per second. If the parameter is set to **no**, then STP and LNP updates receive the same priority. Depending on the system activity level, the performance of LNP updates may be reduced.

If the **gtwystp** parameter is set to **yes**, the LNP system is also configured as a gateway STP. The NPAC sends down capability point codes without routes. In this configuration, the system does not output a warning (UIM 1176) about capability point codes or true point codes without routes.

Output

```
chg-lnpopts:amaslpid=123456789

rlghncxa03w 04-01-07 00:57:31 EST EAGLE 31.3.0
CHG-LNPOPTS: MASP A - COMPLTD
;
```

chg-loopset

Change Loop Set command

Use this command to change the loopset data in the database. This command updates the Loopset Table. A single instance of the **chg-loopset** command can be used to append up to 6 point codes to the loopset (a loopset can contain a total of 12 point codes), replace all data in the loopset, or change one or two point codes in the loopset.

Keyword: **chg-loopset**

Related Commands: **dlt-loopset**, **ent-loopset**, **rtrv-loopset**

Command Class: Database Administration

Parameters

:name= (mandatory)

Loopset name. This parameter specifies an entry in the Loopset table.

The **name=none** parameter cannot be specified.

Range: *ayyyyyyy*
 1 alphabetic and up to 7 alphanumeric characters.

:apcl= (optional)

ANSI appending point code list with subfields *network indicator-network cluster-network cluster member (ninc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*). This parameter allows up to 6 comma-delimited entries in the point code list.

Synonym: **apcla**

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:apcli= (optional)

ITU international appending point code list with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*). This parameter allows up to 6 comma delimited entries in the point code list.

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps-

zone—0-7

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

:apcln= (optional)

ITU national appending point code list in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*). This parameter allows up to 6 comma-delimited entries in the point code list.

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:apcln24= (optional)

24-bit ITU national appending point code list with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*. This parameter allows up to 6 comma-delimited entries in the point code list.

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:force= (optional)

The **force=yes** parameter must be specified to modify a loopset that is being used by GTT.

Range: **yes**

:mode= (optional)

Mode of operation. This parameter specifies whether the message is discarded when an SCCP loop is detected.

Range: **notify, discard**

notify—Generates a UIM without discarding the message.

discard—Generates a UIM and discards the message.

:npc1= (optional)

ANSI new point code 1 with subfields *network indicator-network cluster-network cluster member* (*ninc-ncm*). The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: **npc1a**

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001-005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006-255**.

The point code **000-000-000** is not a valid point code.

:npc1i= (optional)

ITU international new point code 1 with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:npc1n= (optional)

ITU national new point code 1 in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npfnti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:npc1n24= (optional)

24-bit ITU national new point code 1 with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:npc2= (optional)

ANSI new point code 2 with subfields *network indicator-network cluster-network cluster member (ninc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: **npc2a**

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:npc2i= (optional)

ITU international new point code 2 with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:npc2n= (optional)

ITU national new point code 2 in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:npc2n24= (optional)

24-bit ITU national new point code 2 with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:pc1= (optional)

ANSI point code 1 with subfields *network indicator-network cluster-network cluster member (ninc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: **pc1a**

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:pc1i= (optional)

ITU international point code 1 with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:pc1n= (optional)

ITU national point code 1 in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:pc1n24= (optional)

24-bit ITU national point code 1 with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:pc2= (optional)

ANSI point code 2 with subfields *network indicator-network cluster-network cluster member (ninc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: **pc2a**

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:pc2i= (optional)

ITU international point code 2 with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:pc2n= (optional)

ITU national point code 2 in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**, **p-**, **ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:pc2n24= (optional)

24-bit ITU national point code 2 with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:rpcl= (optional)

ANSI replacing point code list with subfields *network indicator-network cluster-network cluster member* (*ninc-ncm*). The prefix subfield indicates a private point code (*prefix-ni-nc-ncm*). This parameter allows up to 6 comma-delimited entries in the point code list.

Synonym: **rpcla**

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:rpcli= (optional)

ITU international replacing point code list with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*). This parameter allows up to 6 comma-delimited entries in the point code list.

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:rpcln= (optional)

ITU national replacing point code list in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-*

gc, prefix-m1-m2-m3-m4, prefix-m1-m2-m3-m4-gc). This parameter allows up to 6 comma-delimited entries in the point code list.

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:rpcIn24= (optional)

24-bit ITU national replacing point code list with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*. This parameter allows up to 6 comma-delimited entries in the point code list.

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

Example

This example sets the mode to discard and appends the listed point codes to the loopset rtp1 if the set is not being used by GTT.

chg-loopset:name=rtp1:mode=discard:apcl=3-7-3,5-7-5,7-4-7,5-4-5

This example replaces the point codes in the set with the listed point codes for the loopset rtp1 if the set is not being used by GTT.

chg-loopset:name=rtp2:rpcl=3-2-3,5-7-8,7-8-7,3-5-3

This example sets the mode to discard in the loopset rtp2 if the set is not being used by GTT.

chg-loopset:name=rtp2:mode=discard

This example replaces pc1 with npc1 in the loopset rtp1 if the set is not being used by GTT.

chg-loopset:name=rtp1:pc1=3-3-3:npc1=3-3-9

This example replaces pc1 and pc2 with npc1 and npc2 in the loopset rtp2 if the set is not being used by GTT.

chg-loopset:name=rtp2:pc1=3-2-3:npc1=3-3-9:pc2=7-8-7:npc2=7-7-9

This example sets the mode to notify in the loopset rtp2 even if the set is being used by GTT.

chg-loopset:name=rtp2:mode=notify:force=yes

Dependencies

If the loopset is being used by GTT, and the **rpcl**, **pc1/pc2/npc1/npc2**, or **mode** parameter is specified, then the **force=yes** parameter must be specified.

If the **pc2** parameter is specified, then the **pc1** parameter must be specified.

If the **npc1** or **npc2** parameter is specified, then the corresponding **pc1** or **pc2** parameter must be specified.

The command requires at least one optional parameter.

The **rpcl** and **apcl** parameters cannot be specified together in the command.

If the **pc1** or **pc2** parameter is specified, then the **apcl** and **rpcl** parameters cannot be specified.

The value of the **name** parameter must already exist in the database.

The SCCP Loop Detection feature must be enabled before this command can be entered.

The GTT feature must be turned on before this command can be entered.

A maximum of 6 point codes can be added using this command with the **apcl** parameter. The Loopset entry can contain a maximum of 12 point codes.

The Loopset table can hold a maximum of 1,000 loopset entries, with each entry containing up to 12 point codes. Additional loopset entries and point codes cannot be added when the table is full.

The values for the **apcl** and **rpcl** parameters cannot consist of any invalid point codes. The valid point codes must be consecutively specified and separated by commas.

The **name=none** parameter cannot be specified.

At least one valid point code must be specified as a value for the **apcl** and **rpcl** parameters.

The values specified for the **apcl** and **rpcl** parameters must be unique.

If the **npc1/pc1** or **npc2/pc2** parameters are specified together, then the value of the **npc** parameter cannot equal the value of the **pc** parameter.

A valid point code must be specified for the **pc1**, **pc2**, **npc1** or **npc2** parameter.

Equal values cannot be specified for the **pc1** and **pc2** parameters.

Equal values cannot be specified for the **npc1** and **npc2** parameters.

When adding point codes using the **apcl** parameter, or changing individual point codes using the **pc1/npc1** or **pc2/npc2** parameters, the new point code type must match the point code type of the loopset where the point codes are being added or changed.

The value of the **apcl** parameter cannot already exist in the loopset.

The value of the **pc1** or **pc2** parameter must already exist in the loopset.

Output

The following example replaces the existing point codes with new point codes in the loopset **rtp2** when that set is not being used by GTT.

```
chg- loopset :name=rtp2:pc1=3-2-3:npc1=3-3-9:pc2=7-8-7:npc2=7-7-9
  rlgncxa03w 07-02-10 08:41:17 EST EAGLE Rel 35.6.0
  LOOPSET table is (12 of 1000) 1% full
  CHG-LOOPSET: MASP A - COMPLTD
;
```

chg-ls

Change Linkset

Use this command to change the attributes for a specified linkset in the system database. The new values overwrite the existing values.

Keyword: chg-ls

Related Commands: chg-lsopts, chg-slt, dlt-ls, rtrv-ls

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:lsn= (mandatory)

Linkset name. Each linkset name must be unique in the system.

Range: *ayyyyyyyyy*
 1 alphabetic character followed by up to 9 alphanumeric characters

:action= (optional)

This parameter adds or deletes the SAPC, mate IPGWx linkset name, or the value specified for the **rcontext** parameter.

Range: **add, delete**
Default: No change to current value.
 No change to the current value

System
Default: **add**

:adapter= (optional)

This parameter specifies the adapter layer for links provisioned in a IPSG linkset.

Range: **m3ua, m2pa**
Default: No change to the current value
System
Default: **m2pa**

:apc= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: **apca**

Range: **p-, 000-255**
 Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).
 prefix—p-
 When **chg-sid:pctype=ansi** is specified, *ni = 000* is not valid.
 When **chg-sid:pctype=ansi** is specified, *nc = 000* is not valid if *ni = 001-005*.
 When **chg-sid:pctype=ansi** is specified, *nc = 000* is valid if *ni = 006-255*.
 The point code **000-000-000** is not a valid point code.

:apc/apca/apci/apcn/apcn24= (optional)

Adjacent point code.

:apci= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**
 Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).
 prefix—s-, p-, ps-
 zone—0-7
 area—000-255
 id—0-7
 The point code **0-000-0** is not a valid point code.

:apcn= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn, prefix-nnnnn-gc, prefix-m1-m2-m3-m4, prefix-m1-m2-m3-m4-gc*).

- Range:** **s-, p-, ps-, 0-16383, aa-zz**
 Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).
prefix—**s-, p-, ps-**
nnnnn—**0-16383**
gc—**aa-zz**
m1-m2-m3-m4—**0-14** for each member; values must sum to 14
- :apcn24=** (optional)
 24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*. The *prefix* indicates a private point code (*prefix-msa-ssa-sp*).
Range: **p-, 000-255**
 Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).
prefix—**p-**
msa—**000-255**
ssa—**000-255**
sp—**000-255**
- :apcntype=** (optional)
 ITU-N Adjacent Point Code Type. This parameter specifies the format that will be used for changeover and changeover acknowledgement messages.
Range: **itun, itunchina**
itun — ITU National Adjacent Point Code type
itunchina — ITU National China Adjacent Point Code type
Default: **itun**
- :asl8=** (optional)
 Adjacent SLS 8-bit indicator. This parameter specifies whether the adjacent node is sending MSUs with 8-bit SLSs.
Range: **yes, no**
Default: Current value
- :asnotif=** (optional)
 AS notification. This parameter specifies whether AS notifications are sent for an IPSG linkset.
Range: **yes, no**
 If the **adapter=m2pa** parameter is specified, then the default value of the **asnotif** parameter is **no**.
 If the **adapter=m3ua** parameter is specified, then the default value of the **asnotif** parameter is **yes**.
Default: **yes**
- :bei=** (optional)
 Broadcast exception indicator. This parameter specifies whether TFP (transfer prohibited) messages are allowed to be broadcast on the linkset.
Range: **yes, no**
yes — TFPs are not broadcast.
no — TFPs are broadcast.
Default: Current value
- :cgtmod=** (optional)
 Calling party GT modification indicator. This parameter specifies whether calling party global title modification is required for the specified linkset.

Range: **yes, no**
Default: No change to the current value

:cli= (optional)

Far-end Common Language Location Identifier (CLLI). This parameter specifies the CLLI assigned to the linkset.

Range: aaaaaaaa
 1 alphabetic character followed by up to 10 alphanumeric characters
Default: Current value

:gmscrn= (optional)

GSM MAP screening. This parameter specifies whether GSM MAP screening is allowed.

Range: **on, off**
Default: Current value

:gttmode= (optional)

Global Title Translation Mode. This parameter specifies a GTT Mode hierarchy for each link set.

Range: **cd, cg, acdcd, acdcdcg, acdcdcg, cgacdcd, cgcd, cdcdg, sysdflt**
Default: No change to current value.

:gwsa= (optional)

Gateway screening action. This parameter specifies whether gateway screening (GWS) is on or off for the specified linkset.

Range: **on, off**
Default: Current value

:gwsd= (optional)

Gateway screening MSU discard. This parameter specifies whether the discarding of MSUs that bypass the gateway screening function due to load-shedding is on or off. This parameter is also used with the redirect function; MSUs that cannot be screened are discarded if **gwsd=on** is specified.

Range: **on, off**
Default: **off**

:gwsm= (optional)

Gateway screening messaging. This parameter specifies whether messages are generated for each message screened by gateway screening.

Range: **on, off**
Default: Current value

:ipsg= (optional)

IP signaling gateway adjacent point code. This parameter specifies whether a linkset is entered for an IP SG card. The specified adjacent point code is an IPLIM or IP gateway adjacent point code.

Range: **yes, no**
Default: **no**

:iptps= (optional)

IPGWx Linkset TPS.

The sum of the TPS values assigned to all linksets in the system cannot exceed 500,000.

Range: **100-32000**
 The specified value must be divisible by 10.
Default: No change to current value.

:islsrsb= (optional)

Incoming rotated signaling link selection (SLS) bit. This parameter specifies the bit (1–4) to rotate as the new SLS LSB (Least Significant Bit) of the incoming linkset. The SLS is not modified in the

outgoing message. Table 5-18 shows how the rotation affects the four bits of the SLS during linkset selection:

Table 5-18. Incoming SLS Bit Rotation

If This Bit Is Selected...	Then Bit Locations 4 3 2 1 Are Rotated To...	
Bit 4	3 2 1 4	SLS = 0110 becomes Rotated SLS = 1100 SLS = 1011 becomes Rotated SLS = 0111
Bit 3	2 1 4 3	SLS = 0110 becomes Rotated SLS = 1001 SLS = 1011 becomes Rotated SLS = 1110
Bit 2	1 4 3 2	SLS = 0110 becomes Rotated SLS = 0011 SLS = 1011 becomes Rotated SLS = 1101
Bit 1	No rotation is performed because bit 1 is the existing LSB.	

This parameter is used for ITU or ANSI messages on a per-linkset basis.

Range: 1-4

Default: No change to current value.

:itutfr= (optional)

ITU TFR (Transfer Restricted) procedure indicator. This parameter specifies whether the TFR procedure is on or off on a per-linkset basis. This parameter is valid for ITU national linksets only.

Range: on, off

Default: No change to current value

:l3tset= (optional)

Link timer set. This parameter is defined with the **chg-l3t** command.

Range: 1

Default: No change to current value

:lst= (optional)

Linkset type of the specified linkset. This parameter specifies whether the specified link is an access link, bridge link, cross link, diagonal link, or extended link, as defined in Telcordia GR-246-CORE, T1.111.5.

Range: a, b, c, d, e

a — Access links

b — Bridge links

c — Cross links

d — Diagonal links

e — Extended links

Default: No change to current value

:lsusealm= (optional)

IPTPS linkset alarm threshold percent. This parameter specifies the percent of the linkset TPS (**iptps**) at which an alarm is generated to indicate that the actual linkset TPS is approaching the configured **iptps** value for the linkset.

Range: 10-100

Default: No change to current value

:matelsn= (optional)

Mate linkset name.

Range: ayyyyyyyyy

1 alphabetic character followed by up to 9 alphanumeric characters

Default: No change to current value

:mtprese= (optional)

ANSI or ITU MTP Restart equipped. This parameter specifies whether the node adjacent to the linkset is equipped with MTP Restart.

Range: yes, no

yes — equipped

no — not equipped

Default: No change to current value

:multgc= (optional)

Multiple group codes. The parameter specifies whether multiple group codes can be specified.

Range: yes, no

:nis= (optional)

Network Indicator Spare. This parameter specifies whether the Network Indicator Spare option is on or off for the specified linkset. When this option is enabled, the Network Spare value for network indicator for both ANSI and ITU-National (ITU-N) links is supported by the system.

Range: on, off

Default: off

:nlsn= (optional)

New linkset name. This parameter specifies the name to be used when changing the linkset name specified in the **lsn** parameter.

Range: ayyyyyyyyy

Up to 8 alphanumeric characters; the first character must be a letter

Default: No change to current value

:randsls= (optional)

Random SLS (signaling link selection). This parameter is used to apply random SLS generation on a per linkset basis.

Specifying the **randsls** parameter in the **chg-ls** command enables random SLS generation on a per linkset basis only if the **randsls=perls** parameter has been specified in the **chg-stpopts** command.

Range: off, class0, all

off — Disables random SLS generation on a specified linkset.

class0 — Enables random SLS generation for Class0 SCCP traffic on a specified linkset.

all — Enables random SLS generation for Class0 and Class1 SCCP traffic on a specified ITU linkset and for Class0 and ISUP traffic on a specified ANSI linkset.

Default: No change to current value.

No change to the current value

:rcontext= (optional)

Routing Context. This parameter specifies a new routing context for an IPSG-M3UA linkset.

Range: **0-4294967295**

Default: No change to current value

:sapci= (optional)

ITU international secondary adjacent point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:sapci/sapcn/sapcn24= (optional)

Secondary adjacent point code.

:sapcn= (optional)

ITU national secondary adjacent point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:sapcn24= (optional)

24-bit ITU national secondary adjacent point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* indicates a private point code (*prefix-msa-ssa-sp*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:scrn= (optional)

Gateway screening screen set. This parameter specifies the gateway screening screen set assigned to this linkset.

When using the **scrn** parameter to change Gateway Screening from an old screenset name with Gateway Screening Allowed Mode **gwsa=off** to a new screenset name with **gwsa=on**, the command must first be entered to assign the screenset name to NONE (**scrn=none**). This assignment will prevent any rules from the old screenset from being applied during the interim period that it takes for the new screenset to load.

Range: *ayyy*
1 alphabetic character followed by up to 3 alphanumeric characters or none (deletes screen set association)

Default: No change to current value

:slktps= (optional)

Per signaling link TPS. This parameter is specified for each link provisioned in a specified IPSP linkset.

The sum of the TPS values assigned to all linksets in the system cannot exceed 500,000.

Range: **100-5000**

:slkusealm= (optional)

IPTPS signaling link alarm threshold percent. This parameter specifies the percent of the link "fair share" TPS at which an alarm is generated to indicate that the actual link TPS is approaching the link's "fair share" of its linkset's configured TPS (**iptps**). The "fair share" of the linkset TPS for a link is the configured linkset TPS divided by the number of in-service links in the linkset.

Range: **10-100**

Default: No change to current value

:slsci= (optional)

5-bit to 8-bit SLS conversion indicator. This parameter specifies whether the 5-bit to 8-bit SLS conversion feature is used to select links for outgoing messages direct to the given linkset. When enabled, the system replaces any 5-bit SLS values contained in received messages, with a random 8-bit value before the 5-bit SLS values are used by the STP to select the outgoing link in that linkset.

Range: **yes, no**
yes — enabled
no — disabled

Default: No change to current value.

:slsocbit= (optional)

Other CIC (Circuit Identification Code) Bit. If the SLSOCB feature is turned on, this parameter specifies whether the Other CIC Bit option is to be used during link selection. If the option is to be used, specify which bit (5– 16) of the CIC is to be used as the other CIC bit. During link selection, the specified bit acts as the most significant bit of the new SLS and bits 2 through 4 of the received CIC become the least significant bits of the new SLS. This parameter is used for ITU-ISUP messages. The SLS is not modified in the outgoing message. The following example shows a received CIC where bit 9 is the other CIC bit (**slsocbit=9**). The new SLS is 0100:

16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
0	0	0	0	1	0	0	0	1	0	0	1	1	0	0	1
New SLS							0				1	0	0		

Range: **5-16 none**

Default: No change to current value

:slrsb= (optional)

Rotated SLS (Signaling Link Selection) Bit. This parameter specifies the bit (1–4) to rotate as the new SLS LSB (Least Significant Bit). The SLS is not modified in the outgoing message. Table 5-19 shows how the rotation affects the four bits of the SLS during linkset selection:

Table 5-19. SLS Bit Rotation

If This Bit Is Selected...	Then Bit Locations 4 3 2 1 Are Rotated To...	
Bit 4	3 2 1 4	SLS = 0110 becomes Rotated SLS = 1100 SLS = 1011 becomes Rotated SLS = 0111
Bit 3	2 1 4 3	SLS = 0110 becomes Rotated SLS = 1001 SLS = 1011 becomes Rotated SLS = 1110
Bit 2	1 4 3 2	SLS = 0110 becomes Rotated SLS = 0011 SLS = 1011 becomes Rotated SLS = 1101
Bit 1	No rotation is performed because bit 1 is the existing LSB.	

This parameter is used for ITU messages on a per-linkset basis.

Range: 1-4

Default: No change to current value.

:sltset= (optional)

SLTM record. This parameter specifies the SLTM record to be associated with the linkset.

Range: 1-20

Default: No change to current value.

:spc= (optional)

ANSI secondary point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Range: 000-255, none

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001–005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006–255.

Enter **none** to delete the point code.

The point code 000-000-000 is not a valid point code.

:spc/spca/spci/spcn/spcn24= (optional)

Secondary point code.

:spci= (optional)

ITU international secondary point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255, none**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

zone—**0-7**

area—**000-255**

id—**0-7**

Enter **none** to delete the point code.

The point code **0-000-0** is not a valid point code.

:spcn= (optional)

ITU national secondary point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz, none**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

Enter **none** to delete the point code.

:spcn24= (optional)

24-bit ITU national secondary point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255, none**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

Enter **none** to delete the point code.

:tfatcabmlq= (optional)

TFA/TCA broadcast minimum link quantity. This parameter specifies the minimum number of links in the given linkset, or in the combined linkset in which the linkset resides, that must be available to user-part messages traffic. This parameter value is used by the STP to consider the first-choice ordered routes using that linkset as Allowed rather than Restricted.

If the **tfatcabmlq** parameter provisioned or default value is **0**, then the TFA/TCA broadcast minimum link quantity is calculated by the EAGLE 5 ISS to be either **1** for linksets containing 2 or fewer links,

or half (rounded-up) of the number of links configured in the linkset for linksets containing more than 2 links.

If the **tfatcabmlq** parameter value is set to a specific value greater than **0**, then the EAGLE 5 ISS does not calculate a TFA/TCA broadcast minimum link quantity. The specified value is used.

If the **lsrestrict** option is **off** (see the **chg-ss7opts** command), then the **tfatcabmlq** database value for C linksets cannot be changed to a value greater than **0**. If the **lsrestrict** option is **on** (see the **chg-ss7opts** command), then the **tfatcabmlq** value for C linksets (**lst=c**) can be set to a value from **1** to **16**. If the **tfatcabmlq** value for one or more C linksets in the system is changed, then the **lsrestrict** option cannot be set from **on** to **off** until all of the changed C linkset **tfatcabmlq** values are changed back to **0**.

NOTE: The rtrv-ls command output always shows the calculated value or the provisioned value for the tfatcabmlq parameter. See the rtrv-ls command description.

Range: 0, 1-16

Default: No change to current value.

System

Default: 0

Example

Changes link set wy644368 to use APC 144-202-5

chg-ls:lsn=wy644368:apc=144-202-005

Changes link set wy644368 to Link Set Type A

chg-ls:lsn=wy644368:lst=a

Changes link set wy644370 to use APCN24 10-100-15

chg-ls:lsn=wy644370:apcn24=10-100-15

Adds an SAPC to a linkset

chg-ls:lsn=linkset:sapcn=1234-fr:action=add

Deletes an SAPC from a linkset

chg-ls:lsn=linkset:sapcn=1234-fr:action=delete

Modifies an SAPC, sapc has to be deleted first and added again

chg-ls:lsn=nc001:apc=144-201-001

chg-ls:lsn=c002:gwsn=on:nis=on

chg-ls:lsn=nc002:gwsn=on

chg-ls:lsn=nc003:sltm=reg:lst=b

Adds a 24-bit ITU-N SAPC to a linkset

chg-ls:lsn=ls1:sapcn24=5-5-5

Deletes a 24-bit ITU-N SAPC from a linkset:

chg-ls:lsn=ls1:sapcn24=5-5-5:action=delete

Assigns a mate linkset to a linkset:

chg-ls:lsn=linkset:matelsn=matelinkset

chg-ls:lsn=linkset:matelsn=matelinkset:action=add

Removes a mate linkset assignment from a linkset:

chg-ls:lsn=linkset:matelsn=matelinkset:action=delete

Changes an ITUN24 linkset to an apcntype for China:

chg-ls:lsn=ls2:apcntype=itunchina

Changes an ITUN24 linkset to an apcntype for Q703.A:

chg-ls:lsn=ls2:apcntype=itun

Additional examples:

chg-ls:lsn=nc003:slsci=yes:tfatcabmlq=2

chg-ls:lsn=lsitu1:gmscrn=off

chg-ls:lsn=wy644370:apcn24=10-100-15

chg-ls:lsn=ls1:sapcn24=5-5-5

chg-ls:lsn=ls1:sapcn24=5-5-5:action=delete

chg-ls:apca=p-011-2-3:lsn=lsa1:lsta

chg-ls:apci=s-1-2-3:lsn=lsn1:lsta

chg-ls:apcn=ps-1-1-1-2047:lsta

chg-ls:lsn=ls1:randsls=all

Indicates that calling party GT modification is required

chg-ls:lsn=ls1:apc=1-1-1:cggmod=yes

Changes the linkset's SPC value.

chg-ls:lsn=ls1:spc=100-23-48

Changes the adapter of a specified IPSP linkset.

chg-ls:lsn=ls2:adapter=m2pa

Changes the AS notification status and routing context value for an IPSP-M3UA linkset.

chg-ls:lsn=m3ua33:rcontext=9999:action=add

Deletes the routing context value for the IPSP-M3UA linkset.

chg-ls:lsn=m3ua33:action=delete:rcontext=2000

Converts the linkset to IPSP.

chg-ls:lsn=m2pa33:ipsp=yes

Changes the linkset Incoming SLS Rotation Bit to 3.

chg-ls:lsn=ls1:islsrsb=3

Dependencies

A valid screenset name must be associated with the linkset, or the **scrn** parameter must be specified with a valid screenset name before the **gwsa**, **gwsn**, and **gwsd** parameters can be specified.

The **gwsd=on** parameter can be specified only if the **gwsa=on** parameter is specified.

At least one optional parameter must be specified.

If the **lsrestrict** option is **off** (see the **chg-ss7opts** command), the **tfatcabmlq** database value for C linksets cannot be changed from the system default of **0**. If the **lsrestrict** option is **on** (see the **chg-ss7opts** command), the **tfatcabmlq** value for C linksets (**lsta=c**) can be set to a value from **1** to **16**. If you change the **tfatcabmlq** value for one or more C linksets in the system, you cannot set the **lsrestrict** option from **on** to **off** until you set all of the changed C linkset **tfatcabmlq** values back to **0**. C linksets are never the primary route (except to reach the STP's mate).

The **tfatcabmlq** parameter value cannot exceed the total number of assigned links in the linkset.

The **slsci** parameter cannot be specified for X25 linksets.

The linkset name must be in the database.

The screen set name specified by the **scrn** parameter must be valid and must be in the database.

Adjacent point codes must be full point codes.

The adjacent point code must be defined as a destination point code.

The adjacent point code cannot match the site point code.

If the adjacent point code is in the X.25 domain, the **bei=yes** parameter must be specified or the **bei** parameter must be omitted.

The domain of the new adjacent point code must be the same as the previous adjacent point code unless there are no links in the linkset.

The adjacent point code cannot be referenced by an X.25 route with the **lc2nm=yes** parameter specified.

Only one linkset can be defined for an adjacent point code.

An SAPC cannot be deleted when routes exist for its SS7 domain.

If the **gwsa=off** and **gwsn=off** parameters are specified, all MSUs are passed. If the **gwsa=off** and **gwsn=off** parameters are specified for all linksets, gateway screening and the GWS redirect function for the DTA feature are disabled.

If the **gwsa=on** and **gwsn=off** parameters are specified, MSUs are screened but messages are not generated.



CAUTION: Even though gateway screening is in the screen test mode, as defined by the parameters **gwsa=off** and **gwsn=on**, the gateway screening action in the stop action set specified by the **actname** parameter of the screen set will be performed at the end of the screening process.

The **mtrse** parameter can be specified only if the MTP restart feature, MTPRS (for ANSI), or ITUMTPRS (for ITU), is turned on. The **rtrv-feat** command can be used to verify whether the feature is turned on (MTPRS=YES or ITUMTPRS=YES in the output).

If the **ipgwapc=yes** or **ipsg=yes** parameter is specified, then the **mtrse=yes** parameter cannot be specified.

The **mtrse=yes** parameter is not valid for IPGWx and IPSG-M3UA signaling links.

The **cli** parameter and the **apc/apca/apci/apcn/apcn24** parameter must be specified together in the command.

The value of the **cilli** parameter must match the **cilli** of the current site.

The **asl8=yes** parameter can be assigned only to an SS7 linkset (a linkset containing an adjacent point code in the SS7 domain).

The **apcn** parameter format must match the format that was assigned with the **chg-stpopts:npcfmti** parameter.

An SAPC parameter can be specified only for ITU-N and ITU-N24 linksets.

The **slsocbit** parameter is valid only for ITU linksets.

The **slsrsb** parameter is valid only for ITU linksets.

The GSM Map Screening feature must be turned on before the **gmscrn** parameter can be specified (see the **enable-ctrl-feat** and **chg-ctrl-feat** commands).

The Enhanced GSM Map Screening feature must be turned on before the **gmscrn=on** parameter can be specified for an ANSI linkset.

The **itutfr** parameter is valid only for ITU national linksets.

The group code of DPC(s) must match the group code of the APC/SAPC when the **multgc=no** parameter is specified. If the adjacent point code's group code is changed, the **multgc=yes** parameter must be specified, or there must be no routes using the linkset. The **multgc** parameter value can be

changed to **no** only if there are no routes with group codes different from the adjacent point code's group code.

Only one ITU-N APC/SAPC is allowed with the **multgc=no** parameter.

Only one ITU-I or 24-bit ITU-N APC/SAPC is allowed per linkset

The **apctype** parameter can be specified only for ITU-N and ITU-N24 linksets.

A linkset cannot have both a 14-bit ITU-N and a 24-bit ITU-N APC/SAPC unless it contains only IPGWI links or IPLIM M3UA links. These links support 14-bit ITU-N and 24-bit ITU-N traffic simultaneously. A linkset with the **ipgwapc=no** parameter cannot have both a 14-bit ITU-N and a 24-bit ITU-N APC/SAPC if no links are provisioned. The SAPC cannot be a 24-bit ITU-N point code if the linkset contains IPLIM or E1 ATM links, which do not support 24-bit ITU-N traffic.

Private (**p-**) and private and spare (**ps-**) point codes can be assigned only to IPGW linksets (the **ipgwapc=yes** parameter is specified).

The **iptps** parameter cannot be specified for linksets that are not IPGWx.

The total of the **iptps** parameter values for all linksets cannot exceed the IPGWx Signaling TPS feature quantity that is enabled in the system.

The **ipgwapc=yes** or **ipsg=yes** parameter must be specified before the **lsusealm** parameter can be specified.

The **ipgwapc=yes** or **ipsg=yes** parameter must be specified before the **slkusealm** parameter can be specified.

The specified linkset name (**lsn**) cannot be the same as the specified mate linkset name (**matelsn**).

If the **action=add** parameter is specified, the specified mate linkset cannot already be assigned as the mate of the specified linkset.

When the **action=add** parameter is specified, the specified mate linkset cannot already be the mate of another linkset.

The specified mate linkset must be an existing linkset in the database.

A mated linkset can have only one assigned link.

Mated linksets can contain only SS7IPGW or IPGWI links.

Mated linksets must have APCs of the same network type.

The card that has the link assigned to the specified linkset must be inhibited before the **action=add** parameter can be specified to assign the specified mate linkset to the specified linkset.

The card that has a link in the mate linkset must be inhibited before the **action=delete** parameter can be specified to delete the mate linkset assignment.

If the **action=delete** parameter is specified to delete a mate linkset assignment, the specified mate linkset must be the mate of the specified linkset in the database.

If the **action=delete** parameter is specified, then the **sapc**, **matelsn**, or **rconext** parameter must be specified. The parameters cannot be specified together in the command.

The **mtprse** parameter can be specified only if the MTP restart feature ITUMTPRS (for ITU) is turned on. The **rtrv-feat** command can be used to verify whether the feature is turned on (ITUMTPRS=YES in the output).

The **slsocbit** parameter is valid only if the SLSOCB feature is turned on.

The adjacent point code cannot match the capability point code.

An APC cannot be changed to a point code that has exception routes provisioned

The **apc** or **sapc** parameter cannot be specified for an IPGWx linkset that is already assigned to a route involving another linkset.

The Origin-based SCCP Routing feature must be turned on before the **gttmode** parameter can have a value of **acdcld**, **cgacdcld**, **acdcgld**, **acdcldcg**, **cgcd**, **dcg**, or **cg**.

The APC/SAPC of an existing IPGW link set cannot be changed to an APC/SAPC that is already configured in a routing key.

All links assigned to the linkset must be removed before changing the **apctype** parameter value from **apcn** to **apcn24** or from **apcn24** to **apcn**.

If one or more of the links in the specified linkset are in service, then the **apc/apca/apci/apcn/apcn24** parameter cannot be specified.

If **apcn** is specified for the Adjacent Point Code then the format of **apcn** must match the format dictated by the **n pcfmti** parameter via the **chg-stpopts** command.

Linksets can be configured only from an OAP terminal, not from an EAGLE 5 ISS terminal.

If the system is configured for ANSI formatted point code, the network indicator value of the foreign pointcode parameter must be 6 or greater when the cluster value is 0.

The value of the **apc/apca/apci/apcn/apcn24** or **sapc/sapca/sapci/sapcn/sapcn24** parameter cannot be assigned to more than one linkset.

The new **apc/apca/apci/apcn/apcn24** parameter must have the same point code type as the **apc/apca/apci/apcn/apcn24** parameter currently specified for the linkset.

The value of the **apc/apca/apci/apcn/apcn24** parameter must exist in the Point Code table.

The **lst** parameter must have a value of **b**, **c**, or **d** if a network or cluster route is configured through the linkset.

If the **multgc=yes** parameter is specified, then an IPGWI or IPLIMI link must be specified.

If the ITUDUPPC feature is off, then the **multgc=yes** parameter cannot be specified.

If the **multgc=yes** parameter is specified, then the **apci**, **apcn**, or **apcn24** parameter must be specified.

The value of the **sapc/sapca/sapci/sapcn/sapcn24** parameter must exist in the Destination Point Code table.

The **apc/apca/apci/apcn/apcn24** or the **sapc/sapca/sapci/sapcn/sapcn24** parameter can be defined only once per linkset.

The maximum number of **sapc/sapca/sapci/sapcn/sapcn24** entries has been exceeded.

The value of the specified **lsn** parameter already exists in the database.

The specified **matelsn** parameter be already equipped in the linkset database.

If the linkset is not mated to the linkset specified by the **matelsn** parameter, then **action=delete** parameter cannot be specified.

The value specified for the **spc** parameter must be a valid full point code.

The values specified for the **spc** and **apc** parameters must have the same network type.

If the **sapc**, **matelsn**, **rcontext**, or **action** parameter is specified, then those four parameters are the only optional parameters that can be specified. If the **action** parameter is specified, then the **sapc** or **rcontext** or **matelsn** parameter must be specified. If the **ipsg** parameter is specified, then no other optional parameters can be specified.

The Multiple Linksets to Single Adjacent PC (MLS) feature must be turned on before the **spc** parameter can be specified.

The value specified for the **spc** parameter must already exist in the SPC table.

The point code type of the value specified for the **spc** parameter must be the same as the point code type of the value of the existing **spc** parameter.

The value specified for the **spc** parameter cannot already be specified as a secondary point code for an adjacent destination point code.

The value specified for the **apc** parameter must differ from the adjacent point code of the linkset specified by the **lsn** parameter.

The value specified for the **spc** parameter must differ from the secondary point code of the linkset specified by the **lsn** parameter.

If a proxy linkset is used, then the **apc**, **sapc**, **action**, and **lst** parameters cannot be specified.

An IPGW linkset cannot be moved to a node that already contains a linkset.

If an IPGW linkset is used, then the value specified for the **apc** parameter cannot be associated with a proxy point code.

If the **ipgwapc=yes** parameter is specified, then the **spc** parameter cannot be specified.

The specified combination of the **apc** and **spc** parameters must be unique for each linkset.

The specified combination of the **apc** and **sapc** parameters must be unique for each linkset.

The AMGTT feature or the AMGTT CgPA Upgrade feature must be turned on before the **cggmod** parameter can be specified.

The **ipgwapc=yes** parameter and the **ipsg=yes** parameter cannot be specified together in the command.

The **ipsg=yes** parameter must be specified before the **adapter** parameter can be specified.

The **ipsg=yes** and **adapter=m3ua** parameters must be specified before the **asnotif** parameter can be specified.

The **ipsg=yes** and **adapter=m3ua** parameters must be specified before the **rcontext** parameter can be specified.

If the IPSG linkset contains links, then the **adapter** parameter cannot be specified.

The **ipgwapc=yes** parameter must be specified before the value specified for the **apc** parameter can be an invalid point code (ANSI network = 0).

The **ipgwapc=yes** parameter must be specified before the **iptps** parameter can be specified.

The value specified for the **iptps** parameter must be divisible by 10.

The **ipsg=yes** parameter must be specified before the **slktps** parameter can be specified.

If the **ipsg=yes** and **adapter=m3ua** parameters are specified, then the **lst=a** parameter must be specified.

A maximum of 1 IPGW linkset or maximum of 6 of any other linksets are allowed between any APC and the EAGLE 5 ISS.

The total capacity assigned to any card hosting a signaling link assigned to the specified linkset cannot exceed the total maximum capacity (5000 TPS) of the card.

The value specified for the **iptps** parameter cannot cause the card to exceed the total maximum capacity (5000 TPS) of the card.

If the **ipsg=yes** and **adapter=m3ua** parameters are specified, then the **multgc=yes** parameter cannot be specified.

If the **ipsg=yes** and **adapter=m3ua** parameters are specified, then the **tfatcabmlq** parameter cannot be specified.

If the **action=delete** parameter is specified to delete the routing context, then the value specified for the **rcontext** parameter must be the value used by the specified linkset in the database.

If the linkset already contains IPSG links, then the **ipsg=no** parameter cannot be specified.

If the **ipsg=yes** and **adapter=m3ua** parameters are specified, then a secondary adjacent point code cannot be specified for the linkset.

The **ipsg=yes** and **adapter=m3ua** parameters must be specified before the **slktps** parameter can be specified.

If one or more links in a specified linkset are in service, then the **rcontext** parameter cannot be specified.

Multiple signaling links in a single linkset cannot share the same association.

If multiple linksets share an association, then the **rcontext** parameter cannot be specified for only one linkset.

The value specified for the **rcontext** parameter must already exist in the database.

If a linkset shares an association with another linkset, then a unique value for the **rcontext** parameter must be specified for each linkset.

If the **ipsg=yes** parameter is specified, then the **slktps** parameter must be specified.

If the **multgc=yes** parameter is specified, then all links assigned to the linkset must be of the same type.

If any of the links are not in the OOS state, then the **rcontext** parameter cannot be specified.

The ISLSBR feature must be enabled before the **slsrsb** parameter can be specified.

Notes

Any optional parameter that is not specified is not changed.

The links that directly connect the system with a distant node are grouped into one or more linksets. A linkset can contain up to 8 (international standards) or 16 (national standard) signaling links, depending on how the system attributes were defined when the network was created.

Signaling link test acknowledgments (SLTA) are the same type of maintenance message as the SLTMs received on the link.

MTP restart provides an orderly process for bringing signaling links back into service after the system has been isolated and restarted. A greater preference is given to restoring the STP to network service in an orderly fashion than to the speed of recovery. The time required is system-dependent. Table 5-20 provides examples of some approximate times.

Table 5-20. Link Alignment Performance

System Size (No. of LIMs)	Link Alignment Delay (seconds)
up to 64	62
64 to 127	97
128 to 191	132
more than 191	167

When two linksets are used as a combined linkset, each linkset should have the same **slsci** and **asl8** values. **This is not enforced in the system and there is no warning mechanism if the values of these parameters are not the same for each linkset.**

The **tfacabmlq** parameter is not supported for linksets that terminate in the X.25 domain.

The **slsrsb** parameter alone does not provide an even distribution of ITU-ISUP messages across all links within a linkset. The system uses all four bits of the SLS to determine the actual link to route messages. Because the static bit is simply rotated within the SLS, all possible values of the SLS field will still not be realized. The **slsocbit** parameter must also be used to provide an even distribution

across all links within the linkset. If both parameters are used for a given linkset, the SLS field is processed in the following order.

1. The SLS is modified using the Other CIC Bit option.
2. The modified SLS is modified again using the Rotated SLS Bit option.
3. The modified SLS is used by the existing linkset and link selection algorithms to select a link.
4. The ISUP message is sent out of the link containing the original, unmodified SLS field.

To modify a secondary adjacent point code, **sapc** has to be first deleted, then added again.

A 24-bit ITU-N point code can be provisioned as an SAPC only if the APC is not already a 24-bit ITU-N point code.

Only one 24-bit ITU-N point code is allowed to be provisioned as an SAPC.

For a linkset containing either low speed CCS7ITU links or IPLIM M2PA links, if the APC is a 14-bit ITU-N point code, then a 24-bit ITU-N point code cannot be provisioned as an SAPC.

For a linkset containing either low speed CCS7ITU links or IPLIM M2PA links, if the APC is a 24-bit ITU-N point code, then a 14-bit ITU-N point code cannot be provisioned as a SAPC.

For a linkset containing either low speed CCS7ITU links or IPLIM M2PA links, if the APC is a ITU-I point code, then either a 24-bit ITU-N point code or a 14-bit ITU-N point code can be provisioned as an SAPC, but not both

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (**s-**) and the private and spare point code subtype prefix (**ps-**). All of the point code types support the private (internal) point code subtype prefix (**p-**).

The ITU National and ITU National China Adjacent Point Code types indicate the format that is used for changeover and changeover acknowledgement messages. China specifies a 16-bit field for data in changeover messages. The FSN occupies the first 12 bits. The trailing 4 bits are spare and are coded as 0. ITU uses a 24-bit field for data in the extended changeover/changeover acknowledgement messages. The FSN is encoded in the first 12 bits. The last 12 bits of the field are spare and are coded as zero.

The **randsls** parameter value applies to SCCP ITU-T messages and Class0 and ISUP ANSI messages when random SLS generation is set to occur on a per linkset basis (the **randsls=perls** parameter is specified in the **chg-stpopts** command).

If the **randsls=perls** parameter is specified in the **chg-stpopts** command, it is recommended that the linksets in a combined linkset be provisioned with the same **randsls** value to avoid undesired SLS distribution.

The **lc2nm** parameter in the X.25 route commands allows the system to apply network management procedures to X.25 logical channels. If an X.25 logical channel fails, then network management reroutes messages to an alternate route.

The **tfatcabmlq=0** parameter specifies that the system broadcasts TFAs or TCAs only when half the links in the given linkset, or in the combined linkset in which it resides, become available.

A gateway linkset can be configured only from a SEAS terminal and not from a system terminal.

If the **gwsa=off** and **gwsn=on** parameters are specified, then all MSUs pass. Error messages are generated if an MSU matches a screening condition.

If the **gwsa=on** and **gwsn=off** parameters are specified, then MSUs are screened but messages are not generated.

If the **gwsa=off** and **gwsn=on** parameters are specified, then gateway screening is defined to be in the screen test mode. The gateway screening action in the stop action set specified by the **actname** parameter of the screen set is performed at the end of the screening process.

If the **asl8=yes** and the **lst=a** (a linkset containing access signaling links) parameters are specified, then the originator of the MSUs is generating 8-bit SLSs. For other linkset types, the **asl8=yes** parameter indicates that the adjacent STP is converting 5-bit SLSs to 8-bit SLSs. The SLS in MSUs received by the system on a linkset that has the **asl8=yes** parameter assigned is not converted. These MSUs are assumed to contain 8-bit SLSs.

If the **gwsa=on**, **gwsn=on**, and **gwsd=off** parameters are specified, then MSUs are screened, and error messages are generated if an MSU is passed when it should have been screened.

If the ISLSBR feature is turned on, and Incoming SLS Bit Rotation is applied to an MSU, then the outgoing SLS bit rotation is not applied for that MSU. If the ISLSBR feature is turned off, or Incoming SLS Bit Rotation is not applied to an MSU, then the outgoing SLS bit rotation is applied for that MSU.

The **randsls** parameter is applied on incoming linksets for ANSI messages and on outgoing linksets for ITU messages.

Output

The following example displays output that results if the APC was changed.

chg-ls: lsn=nc002: apc=144-202-005

```
rlghncxa03w 04-01-18 08:16:14 EST EAGLE 31.3.0
CAUTION: Linkset APC has changed - verify remote node's APC.
Link set table is (114 of 1024) 1% full
CHG-LS: MASP A - COMPLTD
```

;

chg-ls: lsn=ls1: cggmod=yes

```
tekelecstp 08-01-30 15:53:07 EST EAGLE 38.0.0
Link set table is (3 of 1024) 1% full.
CHG-LS: MASP A - COMPLTD
```

;

The following example displays the output that results if the secondary point code is changed.

chg-ls: lsn=ls1: spc=100-23-48

```
rlghncxa03w 07-07-18 08:16:14 EST EAGLE 37.5.0
CAUTION: Linkset SPC has changed - verify remote node's route.
Link set table is (114 of 1024) 1% full
CHG-LS: MASP A - COMPLTD
```

chg-lsopts

Change Linkset Options

Use this command to administer the thresholds for IPSP-M3UA linksets.

Keyword: chg-lsopts

Related Commands: chg-ls, rtrv-ls

Command Class: Database Administration

Parameters

:lsn= (mandatory)

Linkset name. This parameter specifies the name of the linkset. Each linkset name must be unique in the system.

Range: aaaaaaaaa

1 alphabetic character followed by up to 9 alphanumeric characters.

:icnimap= (optional)

Incoming NI Map. This parameter specifies the NI mapping for incoming MSUs on a linkset. The NI value in the incoming MSU is changed to the value specified by the **icnimap** parameter before processing the message.

Range: itui2ituis, ituis2itui, itun2ituns, ituns2itun, none

itui2ituis— Map ITU International to ITU International Spare

ituis2itui— Map ITU International Spare to ITU International

itun2ituns— Map ITU National to ITU National Spare
ituns2itun— Map ITU National Spare to ITU National
none— NI mapping is not performed on the specified linkset.

Default: No change to the current value

System

Default: **none**

:numslkalw= (optional)

Number of signaling links allowed. This parameter specifies the IS-NR link count threshold required for an IPSP-M3UA linkset to transition from the Restricted or Prohibited state to the Allowed state.

When the number of IS-NR links in an IPSP-M3UA linkset transitions from a value less than **numslkalw** to a value equal to or greater than **numslkalw**, the linkset transitions to the allowed state.

Range: **0-16**

0—The IS-NR link count threshold value for an IPSP-M3UA linkset is considered to be half of the number of links configured in the linkset.

Default: No change to current value

System

Default: **1**

:numslkproh= (optional)

Number of signaling links required to prohibit a linkset. This parameter specifies the IS-NR link count threshold required for an IPSP-M3UA linkset to transition from the Restricted or Allowed state to the Prohibited state.

When the number of IS-NR links in an IPSP-M3UA linkset transitions from a value equal to or greater than **numslkproh** to a value less than **numslkproh**, the linkset transitions to the Prohibited state.

Range: **0-16**

0—The IS-NR link count threshold value for an IPSP-M3UA linkset is considered to be half of the number of links configured in the linkset.

Default: No change to current value

System

Default: **1**

:numslkrstr= (optional)

Number of signaling links required to restrict a linkset. This parameter specifies the IS-NR link count threshold required for an IPSP-M3UA linkset to transition from the Allowed state to the Restricted state.

When the number of IS-NR links in an IPSP-M3UA linkset transitions from a value equal to or greater than **numslkrstr** to a value less than **numslkrstr** and greater than **numslkproh**, the linkset transitions from the Allowed state to the Restricted state. Transition from the Prohibited state to the Restricted state is not supported.

Range: **0-16**

0—The IS-NR link count threshold value for an IPSP-M3UA linkset is considered to be half of the number of links configured in the linkset.

Default: No change to current value

System

Default: **1**

:ognimap= (optional)

Outgoing NI Map. This parameter specifies the NI mapping for outgoing MSUs on a linkset. The NI value in the processed MSU is changed to the value specified by the **ognimap** parameter for that linkset before routing the message to the intended destination.

Range: **itui2ituis, ituis2itui, itun2ituns, ituns2itun, none**

itui2ituis — Map ITU International to ITU International Spare
ituis2itui — Map ITU International Spare to ITU International
itun2ituns — Map ITU National to ITU National Spare
ituns2itun — Map ITU National Spare to ITU National.
none — NI mapping is not performed on the specified linkset.

Default: No change to the current value

System

Default: none

Example

The following example changes the threshold value of the **numslkproh** parameter to 3 for an IPSPG-M3UA linkset.

chg-lsopts: lsn=lsn3ual:numslkproh=3

The following example sets the incoming and outgoing NI Mapping for a linkset.

chg-lsopts: lsn=lsnimap1:icnimap=itun2ituns:ognimap=ituns2itun

Dependencies

The value specified for the **numslkproh** parameter cannot be greater than the value specified for the **numslkrstr** parameter.

The value specified for the **numslkrstr** parameter cannot be greater than the value specified for the **numslkalw** parameter.

The value specified for the **lsn** parameter must indicate an IPSPG-M3UA linkset before the **numslkalw**, **numslkproh**, and **numslkrstr** parameters can be specified.

The value specified for the **numslkalw**, **numslkproh**, or **numslkrstr** parameter cannot be greater than the number of links configured in the IPSPG-M3UA linkset.

The ITU National and International Spare Point Code Support feature must be enabled before the **icnimap** and **ognimap** parameters can be specified.

The **icnimap** and **ognimap** parameters must be specified together in the command.

The NI mapping for incoming messages in a linkset must be compatible with the NI mapping for the outgoing messages.

Values for the **icnimap** and **ognimap** parameters other than **none** can be specified only for ITU-I and ITU-N APCs of the linkset.

Notes

The values specified for the **icnimap** and **ognimap** parameters for a linkset must be compatible. The following table shows the relationship between the parameters for a linkset.

NI Mapping Rules	
ICNIMAP	OGNIMAP
ITUI2ITUIS	ITUIS2ITUI
ITUIS2ITUI	ITUI2ITUIS
ITUN2ITUNS	ITUNS2ITUN
ITUNS2ITUN	ITUN2ITUNS
NONE	NONE

Output

```

chg- lsopts: lsn=ls1m3ua: numslkalw=7: numslkrstr=3: numslkproh=1
tekelecstp 08-02-08 10:52:55 EST EAGLE 38.0.0
Command entered at terminal #4.
Link set table is (7 of 1024) 1% full.
CHG-LS: MASP A - COMPLTD
;

```

chg-m2pa-tset**Change M2PA Timer Set**

Use this command to change M2PA timers in an M2PA timer set. The **srcset** and **tset** parameters can be used to copy from one timer set to another.

NOTE: The M2PA RFC feature introduces 20 new timer sets. M2PA timer sets created prior to this feature become M2PA Draft 6 timer sets, which are used by the M2PA Draft 6 associations. M2PA RFC associations use the RFC timer sets.

Keyword: chg-m2pa-tset

Related Commands: rtrv-m2pa-tset

Command Class: Database Administration

Parameters

:tset= (mandatory)

Timer set. This parameter specifies the name of the M2PA timer set.

Range: 1-20

:srctset= (optional)

This parameter specifies which timer set is to be copied into the timer set specified by the **tset** parameter. If the **srctset** parameter is specified, no other timer values can be specified. The timer set specified by the **srctset** parameter cannot be the same timer set that is specified by the **tset** parameter.

Range: 1-20

:t1= (optional)

T1 timer. This parameter specifies the alignment timer in milliseconds. This timer marks the amount of time M2PA waits to receive a Link Status Alignment message from the peer.

Range: 1000-350000

Default: 10000 - D6

35000 - RFC

:t16= (optional)

T16 timer. This parameter specifies the proving rate timer in milliseconds. This timer marks the amount of time between sending Link Status Proving messages while T2N or T2E is running.

The T16 value is given in microseconds.

Range: 100-500000

Default: 200000

:t17= (optional)

T17 timer. This parameter specifies the ready rate timer in milliseconds. This timer marks the amount of time between sending Link Status Ready messages while T3 is running.

Range: 100-500

Default: 250

:t18= (optional)

T18 timer. This parameter specifies the processor outage rate timer. This timer marks the amount of time between sending Link Status Processor Outage messages while the link is in service.

- Range:** 100-10000
Default: 1000
- :t2=** (optional)
T2 timer. This parameter specifies the M2PA RFC timer.
The T2 timer is not used in M2PA Draft 6 timer sets.
Range: 5000-150000
Default: 20000
- :t3=** (optional)
T3 timer. This parameter specifies the ready timer in milliseconds. This timer marks the amount of time after proving that M2PA waits to receive a Link Status Ready message from the peer.
Range: 1000-60000
Default: 10000 - D6
2000 - RFC
- :t4e=** (optional)
T4E timer. This parameter specifies the emergency proving timer in milliseconds. The emergency proving timer marks the amount of time M2PA generates Link Status Proving messages during emergency proving.
Range: 400-5000
Default: 500
- :t4n=** (optional)
T4N timer. This parameter specifies the normal proving timer in milliseconds. This timer marks the amount of time M2PA generates Link Status Proving messages during normal proving.
Range: 1000-70000
Default: 10000 - D6
30000 - RFC
- :t5=** (optional)
T5 timer. This parameter specifies the busy rate timer in milliseconds. This timer marks the amount of time between sending Link Status Busy messages while the link is in service.
Range: 80-10000
Default: 1000 - D6
100 - RFC
- :t6=** (optional)
T6 timer. This parameter specifies the remote congestion timer. This timer marks the amount of time that a congested link will remain in service.
Range: 1000-6000
Default: 3000
- :t7=** (optional)
T7 timer. This parameter specifies the excessive acknowledgement delay timer. This timer marks the maximum amount of time that can pass between transmission of a user data message and receipt of an acknowledgement for that message from the peer. If this timer expires, the link is taken out of service.
Range: 200-2000
Default: 1200
- :ver=** (optional)
Version. This parameter specifies the M2PA version used by the association.
Range: d6, rfc

Example

```
chg-m2pa-tset:tset=1:t1=20000
chg-m2pa-tset:tset=1:t1=20000:ver=d6
chg-m2pa-tset:srctset=1:tset=2:ver=rfc
```

Dependencies

At least one optional parameter must be specified.

The **srctset** parameter and the **tset** parameter cannot specify the same timer set name.

The specified timer is not supported for the Draft 6 version of M2PA.

Either a timer value or the **srctset** parameter must be specified.

Notes

None

Output

```
chg-m2pa-tset:tset=1:t1=20000:ver=d6
  rlgncxa03w 06-01-18 08:16:14 EST EAGLE 34.3.0
  CHG-M2PA-TSET: MASP A - COMPLTD
;
```

chg-map**Change Mate Applications**

Use this command to add or modify an entry in the Mated Application Part (MAP) table. A MAP table entry consists of a mate PC/SSN, its attributes, and an Alternate Routing Indicator Mate MRN Set and MRN point code.

NOTE: A mate point code defines an adjacent signaling point, which is considered the mated signal transfer point (STP) to the system. See the *Notes* section for additional information on multiplicity modes.

NOTE: The GTT Load Sharing with Alternate Routing Indicator (GTT LS ARI) feature must be enabled before an Alternate RI Mate for a MAP Set can be provisioned.

Keyword: chg-map

Related Commands: dlt-map, ent-map, rtrv-map

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

NOTE: The **mrnset** and **mrnpc** parameters indicate whether an Alternate RI Mate search is performed in the MRN table if all of the point code/subsystem number combinations provisioned in a given MAP Set are unavailable or congested.

:pc= (mandatory)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: pca

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001–005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006–255**.

The point code **000-000-000** is not a valid point code.

:pc/pca/pci/pcn/pcn24= (mandatory)

Primary remote point code.

:pci= (mandatory)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:pcn= (mandatory)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:pcn24= (mandatory)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:ssn= (mandatory)

Subsystem number.

Range: **2-255**

:eswt= (optional)

Entity set weight. This parameter specifies the weight assigned to each PC/SSN in a weighted entity set. The Weighted GTT Loadsharing feature must be turned on before this parameter can be specified. This parameter cannot be specified when adding PC/SSNs to a weighted entity set or when modifying RC or weight values for an individual PC/SSN.

Range: 1-99 **none**

none—Changes a weighted entity set to a non-weighted entity set.

:force= (optional)

The **force=yes** parameter must be specified to modify the **rc** parameter and the **srn**, **mrc**, or **wt** parameter in the same command.

Modification of the **srn**, **mrc**, or **wt** parameter is dependent on the parameter's current multiplicity state, which is dependent on the RC value. Changing the **rc** parameter value can change the multiplicity state, which can then cause the **srn**, **mrc**, or **wt** parameter value to become invalid.

Range: yes

:grp= (optional)

Group. This parameter specifies the concerned point code broadcast list (CSPC) group name. The CSPC is a group of point codes that should be notified of the subsystem status. A different CSPC group can be assigned to each mated PC/SSN. For ANSI, the EAGLE 5 ISS broadcasts SSP or SSA to the mate subsystem only if the mate's point code is provisioned as part of the CSPC group to receive an SSP or SSA.

Range: ayyyyyyy

1 alphabetic character followed by up to 7 alphanumeric characters or **none**

none—Disassociates a concerned point code broadcast list group from the given mate application

Default: Current value.

:grpwt= (optional)

Group weight. This parameter specifies the weight assigned to each PC/SSN in a weighted RC group. The Weighted GTT Loadsharing feature must be turned on before this parameter can be specified. This parameter cannot be specified when adding PC/SSNs to a weighted entity set or when modifying RC or weight values for an individual PC/SSN.

Range: 1-99

:mapset= (optional)

MAP set ID.

Range: 1-36000 **dflt**

dflt—Default MAP set

Default: **dflt** - If the Flexible GTT Load Sharing feature is not enabled

No change to current value—If the Flexible GTT Load Sharing feature is enabled

:materc= (optional)

Mate relative cost. This parameter specifies the RC assigned to the mate PC/SSN that is being added to the entity set. The EAGLE 5 ISS determines the multiplicity mode based on the RC values (the **rc** and **materc** parameters) of the subsystem.

Range: 0-99

Default: Current value.

:mpc= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-nm)*.

Synonym: **mpca**

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001–005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006–255**.

The point code **000-000-000** is not a valid point code.

Default: **000-000-000**

:mpc/mpca/mpci/mpcn/mpcn24= (optional)

Mate remote point code.

:mpci= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

Default: **000-000-000**

:mpcn= (optional)

ITU national point code in the format of a 5-digit ITU number (*nnnnn*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

Default: **00000**

:mpcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

Default: **000-000-000**

:mrc= (optional)

Message routing under congestion. This parameter specifies whether Class 0 messages are routed during congestion conditions.

Range: **yes, no**

Default: Current value.

:mrnpc= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: **mrnpca**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001–005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006–255**.

The point code **000-000-000** is not a valid point code.

Default: **000-000-000**

:mrnpc\mrnpca\mrnpcli\mrnpcli24= (optional)

Alternate RI Mate point code.

:mrnpcli= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

Default: **0-000-0**

:mrnpcli= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

Default: **00000**

:mrnpcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

Default: **000-000-000**

:mrnset= (optional)

Alternate RI Mate MRN Set ID. This parameter specifies the MRN Set where the Alternate RI Mate search is performed.

Range: **1-6000 dflt**

dflt—default MRN Set

If the **mrnpc** parameter is specified, and the **mrnset** parameter is not specified, then the value for the **mrnset** parameter is automatically set to **dflt**.

Default: No change to the current value

:mssn= (optional)

Mated subsystem number. This parameter specifies the SSN that acts as a backup if the SSN fails.

Range: **2-255**

Default: Current value.

:mwt= (optional)

Mate point code weight. This parameter specifies the weight assigned to the PC/SSN that is being added to a weighted entity set. The Weighted GTT Loadsharing feature must be turned on before this parameter can be specified.

Range: **1-99**

:rc= (optional)

Relative cost. This parameter specifies the RC assigned to a specified PC/SSN. The EAGLE 5 ISS determines the multiplicity mode based on the relative costs (the **rc** and **materc** parameters) of the subsystem.

Range: **0-99**

Default: Current value.

:srm= (optional)

Subsystem routing messages. This parameter specifies whether subsystem routing messages (SBR, SNR) are transmitted between the mated applications.

Range: **yes, no**

Default: Current value.

:sso= (optional)

Subsystem status option. This parameter specifies whether the PC/SSN will initiate a subsystem test when a RESUME is received for the PC.

Range: **on, off**

on—prohibited

off—allowed

Default: Primary—no change
Mate, if entered—**off**

:thr= (optional)

Threshold. This parameter specifies the in-service threshold assigned to each PC/SSN in a weighted entity set or RC group. The Weighted GTT Loadsharing feature must be turned on before this parameter can be specified.

This parameter cannot be specified when adding PC/SSNs to a weighted entity set or RC group or when modifying RC or weight values for an individual PC/SSN.

If the **thr** parameter is not specified, a value of **1%** is assigned to each weighted PC/SSN.

Range: 1-100

:wt= (optional)

Weight. This parameter specifies the new weight assigned to the primary PC/SSN. The Weighted GTT Loadsharing feature must be turned on before this parameter can be specified.

Range: 1-99

Example

The following example enters 1-1-3/10 into the MAP table and adds it to the same group as 1-1-0/10. Because 1-1-0/10 already exists in the MAP table, the rc parameter is not used.

chg-map:pc=1-1-0:ssn=10:mpc=1-1-3:mssn=10:materc=40

The following example enters 1-1-2/10 into the MAP table, and adds it to the same group as 1-1-0/10 (see above example). Because 1-1-2/10 has a lower relative cost than 1-1-3/10, it is placed into the group in relative cost order.

chg-map:pc=1-1-0:ssn=10:mpc=1-1-2:mssn=10:materc=30

The following example changes the relative cost (rc) for the specified pc/ssn pair:

chg-map:pc=1-1-0:ssn=10:rc=20

The following example changes the concerned PC broadcast list group name (grp) for the specified pc/ssn pair:

chg-map:pc=1-1-0:ssn=10:grp=abc

The following example changes the ITU-I spare point code entry s-1-12-2 and adds the spare mate point code entry s-2-23-3 in the map table:

chg-map:pci=s-1-12-2:ssn=10:rc=10:mpci=s-2-23-3:mssn=20:materc=10

The following example turns ON the sso option for pc1-1-0 and ssn10.

chg-map:pc=1-1-0:ssn=10:sso=on

The following example turns OFF the sso option for pc1-1-0 and ssn10.

chg-map:pc=1-1-0:ssn=10:sso=off

The following example does not change the current value of the sso option for the primary or the mate.

chg-map:pc=1-1-0:ssn=10:rc=10

The following example turns ON the sso option for primary and mate.

chg-map:pc=1-1-0:ssn=10:mpc=3-3-3:mssn=2:sso=on

The following example turns OFF the sso option for primary and mate.

chg-map:pc=1-1-0:ssn=10:mpc=4-4-4:mssn=2:sso=off

The following example does not change the current value for the sso option for the primary. The sso option is turned OFF for the mate, because the mate is specified but the sso parameter is not specified (the default is OFF for the mate when the mate is specified).

chg-map:pc=1-1-0:ssn=10:mpc=5-5-5:mssn=2

The following example changes the ITU-I spare s-1-12-2 entry and adds the spare mate point code s-2-23-3 entry in the map table.

chg-map:pci=s-1-12-2:ssn=10:rc=10:mpci=s-2-23-3:mssn=20:materc=10

The following example adds a new PC/SSN 1-1-3/10 in the existing MAP set 362.

chg-map:pc=1-1-1:ssn=10:mpc=1-1-3:mssn=10:materc=40:mapset=362

The following example adds a new PC/SSN 1-1-3/15 to the same load-sharing group in the default MAP set to which 1-1-1/15 belongs.

chg-map:pc=1-1-1:ssn=15:mpc=1-1-3:mssn=15:materc=40:mapset=dflt

The following example changes the RC of 1-1-1/10 in existing MAP set 362 to 20.

chg-map:pc=1-1-1:ssn=10:rc=20:mapset=362

The following example changes a non-weighted shared or non-weighted combined entity set to a weighted shared or weighted combined entity set.

chg-map:pc=1-1-1:ssn=10:eswt=30

The following example changes a non-weighted shared or non-weighted combined entity set to a weighted shared or weighted combined entity set. This example also sets a threshold value and changes the weights of all of the PC/SSNs in the entity set.

chg-map:pc=1-1-1:ssn=10:eswt=30:thr=50

The following example changes a weighted shared or weighted combined entity set to a non-weighted shared or non-weighted combined entity set.

chg-map:pc=1-1-1:ssn=10:eswt=none

The following example assigns a weight value to each PC/SSN in an RC group within a weighted entity set.

chg-map:pc=1-1-1:ssn=10:grpwt=20

The following example assigns a threshold value to each PC/SSN in an RC group within a weighted entity set.

chg-map:pc=1-1-1:ssn=10:thr=70

The following example assigns weight and threshold values to each PC/SSN in an RC group within a weighted entity set.

chg-map:pc=1-1-1:ssn=10:grpwt=20:thr=70

The following example changes the weight of an existing PC/SSN in a weighted entity set.

chg-map:pc=1-1-1:ssn=10:wt=20

The following example changes the weight of PC/SSN 1-1-1/10 and adds PC/SSN 1-2-1/10 to an existing weighted entity set.

chg-map:pc=1-1-1:ssn=10:wt=50:mpc=1-2-1:mssn=10:materc=20:mwt=30

The following example adds PC/SSN 1-3-2/10 to an existing non-weighted entity set.

chg-map:pc=1-1-1:ssn=10:mpc=1-3-2:mssn=10:materc=20:mwt=10

The following example changes the RC value and turns on MRC of an existing PC/SSN in a weighted entity set.

chg-map:pc=1-1-1:ssn=10:rc=30:mrc=yes:force=yes

The following example changes the RC value and turns on SRM of an existing PC/SSN in a weighted entity set.

chg-map:pc=1-1-1:ssn=10:rc=30:srm=yes:force=yes

The following example changes the RC value and the weight of an existing PC/SSN in a weighted entity set.

chg-map:pc=1-1-1:ssn=10:rc=30:wt=20:force=yes

The following example changes the Alternate RI Mate (MRNSET and MRNPC) in an existing MAP set.

chg-map:mapset=362:pc=1-1-1:ssn=10:mrnset=1:mrnpc=1-1-2

Dependencies

At least one optional parameter must be specified.

The specified remote PC must exist in the MAP table.

The Spare Point Code Support feature must be enabled before an ITU-I or ITU-N spare point code can be specified.

The specified SSN must exist for the specified remote PC.

If a subsystem is configured for a SSN value in the SS-APPL table, then the specified MAP table entry for that subsystem must be a valid point code type for that subsystem. The following point code types are not valid for the indicated subsystems:

- If the subsystem number is configured for the INP subsystem in the SS-APPL table, then the True Point code cannot be an ITU-I or ANSI point code.
- If the subsystem number is configured for the EIR subsystem in the SS-APPL table, then the True Point code cannot be an ANSI point code.
- If the subsystem number is configured for the ATINPQ or VFLEX subsystem in the SS-APPL table, then the True Point code cannot be an ITU-N24 point code.

The mate PC/SSN cannot be the same as the primary PC/SSN.

If the PC value is an ITU type (**pci**, **pcn**, or **pcn24**), the **srn=yes** parameter cannot be specified.

The **apca** and **pcn24** parameters cannot be specified for the same MAP set. The **pci** and **pcn** parameters cannot be specified for the same MAP set if the MAP set contains a true point code.

To mix group and PC network types, the ANSI-ITU-China SCCP Conversion feature must be on.

The network type of the specified CSPC group must match the network type of the specified PC.

The mated PC/SSN must not already exist in the MAP table.

The DPCs of the primary subsystem and the mate subsystem must be full PCs.

The format of the **pcn** or **mpcn** parameter must match the format assigned with the **npcfmti** parameter of the **chg-stpopts** command.

If the **mpc** parameter is specified, the **mssn** and **materc** parameters must be specified.

A maximum of 32 mated applications is allowed per MAP set.

The **sso** parameter cannot be specified with a PC that is the system true PC.

A true PC can have only one mate.

A true PC cannot be routed to itself.

If the **mssn** or **materc** parameter is specified, the **mpc** parameter must be specified.

The PC must already exist in the CPC group.

The specified CSPC broadcast list group name must already exist.

If the **mpc** parameter is specified, then the **mssn** parameter must be specified.

The number of MPC Subsystem entries must not exceed the table capacity.

A maximum of 1024 unique remote point codes are allowed.

If a remote MPC is specified, then the remote MPC must exist in the Routing table.

If the Flexible GTT Load Sharing feature is not enabled, then the **mapset** parameter must not be specified. If the Flexible GTT Load Sharing feature is enabled, then the **mapset** parameter must be specified.

The specified MAP set must exist in the database.

The specified PC/SSN/MAP set must already be provisioned in the MAP table.

The EAGLE 5 ISS true PC can be provisioned only in the default MAP set.

The Weighted GTT Loadsharing feature must be turned on before the **wt**, **mwt**, **eswt**, **grpwt**, or **thr** parameters can be specified.

If the **eswt**, **grpwt** or **thr** parameter is specified, the **mpc** parameter cannot be specified.

If the **eswt**, **grpwt** and **thr** parameters are specified, the **rc**, **wt**, **mrc**, **srn**, **sso** or **grp** the parameters cannot be specified.

The **eswt** and **grpwt** parameters cannot be specified together in the command.

If the **eswt=none** parameter is specified, the **thr** parameter cannot be specified.

If the **mwt** parameter is specified, the **mpc** parameter must be specified.

The **mpc** parameter value must be a full point code.

If the **mpc** parameter is specified for a weighted entity set, the **mwt** parameter must be specified.

If the **mpc** parameter is specified for a non-weighted entity set, the **mwt** parameter cannot be specified.

The **eswt=none** parameter cannot be specified for a non-weighted entity set.

The **grpwt** and **thr** parameters cannot be specified for a non-weighted entity set.

If the resulting multiplicity mode (MULT field) is SOL (Solitary) or SHR (Loadsharing), the **srn** parameter and the **mrc** parameter cannot be specified.

If the **chg-sid:pctype=ansi** command is entered, a value of *ni=000* cannot be specified. If the **chg-sid:pctype=ansi** command is entered, and a value of *ni=001 – 005* is specified, a value of *nc=000* cannot be specified.

The mate point code in the command will exceed the maximum number of entries in the MAP table.

The maximum number of possible entries in the MAP table has been reached for the specified True Point code.

Table 5-21. Maximum limit of True PC entries

True Point Code Type	Maximum limit in MAP table
ANSI	1 (With LNP) 2 (With ATINPQ and V-FLEX) (LNP is mutually exclusive with ATINPQ, EIR, INP, and VFLEX)
ITU-I	3 (For ATINPQ, EIR and V-FLEX)
ITU-N	4 (For ATINPQ, EIR, INP, and V-FLEX)

The true point code in the entity set must be the primary PC/SSN for that entity set. The **rc** parameter value for the specified point code cannot be changed, and a new point code cannot be added that causes the true point code to no longer be the primary PC/SSN.

If the **pc** parameter value is a true point code, the subsystem must have a lower RC than all other mated subsystems in the RC group.

If the **mpc** parameter value is a true point code, the subsystem must have a lower RC than all other mated subsystems in the RC group.

The **eswt**, **grpwt**, and **thr** parameters cannot be specified for solitary or dominant entity sets.

The **srn** and **mrc** parameters cannot be specified for a solitary or shared PC/SSN in a entity set.

The AINPQ, EIR, INP, or V-Flex feature must be turned on, or the ATINP feature must be enabled before the value specified for the **mpcn** parameter can be a true point code.

The **force=yes** parameter must be specified before the **rc** parameter can be specified in the same command with the **srn**, **mrc**, or **wt** parameter.

The **force** parameter can be used only to specify the **rc** parameter and the **srn**, **mrc**, or **wt** parameter in the same command.

If the **pcn** or **mpcn** parameter is specified, then the format of the parameter must match the format dictated by the **chg-stpopts:npcfnti** command.

D45MPC/MSSN must be defined for given value of MULT.

PC and SSN are not primary applications.

TF feature must be on when administering a true point code.

The values specified for the **pc** and **mpc** parameters cannot be associated with proxy point codes.

The EIR or V-Flex feature must be turned on, or the ATINP feature must be enabled before the value specified for the **mpci** parameter can be a true point code.

The LNP or V-Flex feature must be turned on, or the ATINP feature must be enabled before the value specified for the **mpca** parameter can be a true point code.

The GTT LS ARI feature must be enabled before the **mrnset** and **mrnpc** parameters can be specified.

The value specified for the **mrnpc** parameter must be a full point code.

The value specified for the **mrnset** parameter must already exist in the MRN table.

The MRN table is corrupt or cannot be found.

The point codes and alternate RI Mate point codes must have the same network type. Table 5-22 displays the allowed PC and Alternate RI Mate PC combinations

Table 5-22. Allowed PC and Alternate RI Mate PC Combinations

Network Type of PC	Allowed Network Type of Alternate ARI Mate PC
ITU-I, ITU-N, ITU-I spare, ITU-N spare	ITU-I, ITU-N, ITU-I spare, ITU-N spare
ANSI	ANSI
ITUN-24	ITUN-24

The value specified for the **mrnpc** parameter must already exist in the specified MRN Set.

If the **mrnset** parameter is specified, then the **mrnpc**, **mrnpca**, **mrnpci**, **mrnpcn**, or **mrnpc24** parameter must be specified.

If the **eswt**, **grpwt**, or **thr** parameter is specified, then the **mrnpc** parameter cannot be specified.

The **mrnset** parameter cannot be specified if the MAP Set specified by the **mapset** parameter contains a True Point Code.

Notes

When the ANSI-ITU-China SCCP Conversion feature is turned on, the Concerned Point Code (CSPC) Group's network type can be of a different network than the mated application's network type. For example, the mated application's network type could be ANSI and the CSPC Group could be ITU or mixed with ANSI, ITU, and ITUN concerned point codes.

For the **-map** commands, an entity set consists of a group of PC/SSNs that are used for traffic distribution, and an RC group consists of PC/SSNs within an entity set that have the same RC. In loadsharing mode, an entity set contains 1 RC group. In combined loadsharing /dominant mode, an entity set can contain multiple loadsharing groups.

The EAGLE 5 ISS supports the following modes for nodes/subsystems:

- When a PC/SSN pair is not replicated, the pair is in *solitary* mode. The subsystem acts as the only application, with no backup. If this subsystem fails, messages routed to it are discarded and SCCP management returns "Subsystem Unavailable" messages to the originator.
- A group of replicated PC/SSN pairs are in *dominant* mode if each PC/SSN pair in the group has a unique RC. The specified subsystem with the lowest RC acts as the primary subsystem, while the mate subsystem acts as a backup. In the event of congestion, messages route to the mate subsystem. When the congestion subsides, messages are again routed to the primary (dominant) subsystem.
- A group of replicated PC/SSN pairs are in *load sharing* mode if each PC/SSN pair in the group has the same RC. All messages are evenly distributed at the SCCP level to all nodes/subsystems in the group. In the event of congestion or failure, the non-affected subsystem assumes the load of its failed or congested mate.
- The *combined load sharing/dominant* mode supports a combination of load sharing and dominant mode. A group of PC/SSN pairs are in combined load sharing/dominant mode when at least two of the PC/SSN pairs have the same RC and another node subsystem in the group has a different RC. A combination of node accessibility and RC determines the preferred PC/SSN.

The **sso** parameter changes the initialization of the subsystem status ("prohibited" or "allowed") for PC/SSN MAP entries. The EAGLE 5 ISS previously marked the subsystem status "allowed" (OFF) for each PC/SSN entry. The **sso** option marks the subsystem status "prohibited" for each entry that has **sso=on**. This causes the EAGLE 5 ISS to generate an SST to the remote PC when an MTP-RESUME is received. Upon reception of an SSA, the subsystem status is marked "allowed".

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (**s-**).

When the Flexible GTT Load Sharing feature is turned on, MAP Load-Sharing Sets are supported. Each MAP set is identified by a new **mapset** parameter.

When the Weighted GTT Loadsharing feature is turned on, weighted entity sets and RC groups are supported, and threshold values can be assigned to each PC/SSN in a weighted entity set.

Output

```

chg-map:pc=1-1-0:ssn=10:mpc=1-1-3:mssn=10:materc=40:mapset=362
tekelecstp 09-01-22 12:29:22 EST EAGLE 40.1.0
CHG-MAP: MASP A - COMPLTD
;
chg-map:pc=1-1-1:ssn=10:mapset=df1t:mrnset=2:mrnpc=1-1-4
tekelecstp 09-01-22 12:29:22 EST EAGLE 40.1.0
CHG-MAP: MASP A - COMPLTD
;

```

chg-meas**Change Measurements**

Use this command to change both the report and collecting status of the EOAM based measurement subsystem.

NOTE: After the Measurements Platform collection function has been enabled, the collect=on/off parameter controls only the output of reports to the UI. The parameter has no effect on enabling and disabling collection and report generation for the Measurements Platform. Report generation for the Measurements Platform is controlled by the rept-ftp-meas and chg-measopts commands.

Keyword: chg-meas

Related Commands: copy-meas, rept-ftp-meas, rept-meas, rtrv-meas-sched

Command Class: Link Maintenance

Parameters

:collect= (optional)

Activates or deactivates the reporting of scheduled measurements to the UI. This parameter does not affect measurements collection and generation for the Measurements Platform.

Range: on, off

Default: No change to value

System

Default: off - off

:complink= (optional)

Activates or deactivates scheduled measurement report for links.

Range: on, off

Default: Current value

:complnkset= (optional)

Activates or deactivates scheduled measurement report for linksets.

Range: on, off

Default: Current value

:gtwylnkset= (optional)

Activates or deactivates the scheduled GTWY measurement report for the linkset.

Range: on, off

Default: Current value

:gtwylsfltr= (optional)

Filters the linksets included in the GTWY report.

Range: both, stp, seas, none

both—Only gateway linksets are included in the report to the terminal and SEAS.

stp—Only gateway linksets are included in the report to the terminal. All defined linksets are included in the report to SEAS.

seas—All defined linksets are included in the report to the terminal. Only gateway linksets are included in the report to SEAS.

none—All defined linksets are included in the report to the terminal and SEAS.

:gtwystp= (optional)

Activates or deactivates the scheduled GTWY measurement report for the STP.

Range: **on, off**

Default: Current value

:systotstp= (optional)

Activates or deactivates scheduled measurement report for STP system totals.

Range: **on, off**

Default: Current value

:systotstplan= (optional)

Activates or deactivates scheduled measurement report for the STPLAN feature system totals.

Range: **on, off**

Default: Current value

:systotstt= (optional)

Activates or deactivates scheduled measurement report for translation type system totals.

Range: **on, off**

Default: Current value

Example

```
chg-meas:collect=on
```

```
chg-
```

```
meas:complink=on:complnkset=on:systotstt=off:systotstp=off:collect=on
```

```
chg-meas:gtwylsfltr=both
```

Dependencies

At least one optional parameter must be specified.

If the 15 Minute Measurements collection option is turned on, the **collect=on** parameter cannot be specified in this command.

If there are no configured links, then the **collect=on** parameter cannot be specified.

Notes

Activated scheduled reports print at serial ports configured for traffic-related unsolicited messages (the **traf=yes** parameter of the **chg-trm** command).

When the Measurements Platform is not enabled, the daily maintenance scheduled reports are always allowed and cannot be inhibited.

The *Maintenance Manual* provides detailed information on measurements and measurement reports.

Output

```
chg-
```

```
meas:complink=on:complnkset=on:systotstt=off:systotstp=off:collect=on
```

```
rlghncxa03w 04-01-18 17:02:57 EST  EAGLE 31.3.0
CHG-MEAS: MASP A - COMPLTD
```

```
;
```

chg-measopts**Change Measurements Options**

Use this command for the following functions:

- Enable the Measurements Platform collection function
- Turn on or turn off the 15 Minute Measurements collection function
- Enable or disable the automatic generation and FTP transfer of scheduled measurements reports to the FTP server
- Turn on or off the CLLI-based file name option for measurements reports files

NOTE: After the Measurements Platform collection function has been enabled with the platformenable=on parameter, it cannot be disabled with this command.

NOTE: The hourly and daily maintenance report controls are being moved to the chg-mtc-measopts command. Currently, these reports can be redundantly controlled by the chg-measopts and the chg-mtc-measopts commands. These parameters will be removed from the chg-measopts command in a future release. The affected reports are:

- mtcmlink, mtcmlinkset, mtcdstp, mtcdstplan, mtcclnp, mtcclnp, mtcclmap, mtcclscpasoc, mtcclscpcard, mtcclua, mtccldeir, mtcclhnp, mtcclhnp, mtcclmap, and mtcclheir

Keyword: chg-measopts

Related Commands: chg-ftp-serv, chg-meas, chg-mtc-measopts, chg-netopts, dlt-ftp-serv, ent-ftp-serv, rept-ftp-meas, rept-meas, rept-stat-meas, rtrv-ftp-serv, rtrv-measopts, rtrv-mtc-measopts, rtrv-netopts

Command Class: Link Maintenance

Parameters

:all= (optional)

Activates or deactivates the automatic generation and FTP transfer of all scheduled measurements reports.

NOTE: The all parameter does not change the setting of the platformenable parameter.

Range: on, off

Default: No change to the current value

:avldlink= (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled daily availability measurement report for links.

Range: on, off

Default: No change to the current value

System

Default: off

:avllink= (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled hourly availability measurement report for links.

Range: on, off

Default: No change to the current value

System

Default: off

:avlstplan= (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled hourly availability measurement report for STPLAN.

Range: on, off

Default: No change to the current value

System

Default: off

:cllibasedname= (optional)

Enable or disable CLLI-based measurements report file name option.

Range: on, off

Default: No change to the current value

System

Default: off

:collect15min= (optional)

Turns on or off the 15 Minute Measurements collection function.

Range: on, off

Default: No change to the current value

System

Default: off

:complink= (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled component measurement report for links.

Range: on, off

Default: No change to the current value

System

Default: off

:complnkset= (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled component measurement report for linksets.

Range: on, off

Default: No change to the current value

System

Default: off

:compsctpasc= (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled component measurement report for per association SCTP data.

Range: on, off

Default: No change to the current value

:compsctpcard= (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled component measurement report for per card SCTP data.

Range: on, off

Default: No change to the current value

:compua= (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled component measurement report for M3UA and SUA application server/association pairs.

Range: on, off

Default: No change to the current value

:gtwylnkset= (optional)

Activates or deactivates the automatic generation and FTP transfer of scheduled GTWY measurement report for linksets.

Range: on, off

Default: No change to the current value

System

Default: off

:gtwylsdestni= (optional)

Activates or deactivates the automatic generation and FTP transfer of scheduled GTWY link set measurement report for destination NI

Range: on, off

Default: No change to the current value

System

Default: off

:gtwylsonismt= (optional)

Activates or deactivates the automatic generation and FTP transfer of scheduled GTWY linkset measurement report for ISUP message type per linkset per originating NI

Range: on, off

Default: No change to the current value

System

Default: off

:gtwylsorigni= (optional)

Activates or deactivates the automatic generation and FTP transfer of scheduled GTWY link set measurement report for originating NI

Range: on, off

Default: No change to the current value

System

Default: off

:gtwyorigni= (optional)

Activates or deactivates the automatic generation and FTP transfer of scheduled GTWY link measurement report for originating NI.

Range: on, off

Default: No change to the current value

System

Default: off

:gtwyorigninc= (optional)

Activates or deactivates the automatic generation and FTP transfer of scheduled GTWY link measurement report for originating NI and NC.

Range: on, off

Default: No change to the current value

System

Default: off

:gtwystp= (optional)

Activates or deactivates the automatic generation and FTP transfer of scheduled GTWY measurement report for STP.

Range: on, off

Default: No change to the current value

System

Default: off

:mtcdeir= (optional)

Activates or deactivates the automatic generation and FTP transfer of the daily maintenance measurement report for Equipment Identity Register (EIR).

Range: on, off

Default: No change to the current value

System

Default: off

:mtcdlink= (optional)

Activates or deactivates the automatic generation and FTP transfer of the daily maintenance measurement report for links.

Range: on, off

Default: No change to the current value

System

Default: off

:mtcdlnkset= (optional)

Activates or deactivates the automatic generation and FTP transfer of the daily maintenance measurement report for link sets.

Range: on, off

Default: No change to the current value

System

Default: off

:mtcdlnp= (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled daily maintenance measurement report per LNP.

Range: on, off

Default: No change to the current value

System

Default: off

:mtcdmap= (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled daily maintenance measurement report per GSM MAP Screening server entry.

Range: on, off

Default: No change to the current value

System

Default: off

:mtcdnp= (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled daily maintenance measurement report per NP.

Range: on, off

Default: No change to the current value

System

Default: off

:mtcdsctpasoc= (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled daily maintenance measurement report for per association SCTP data.

Range: on, off

Default: No change to the current value

:mtcdsctpcard= (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled daily maintenance measurement report for per card SCTP data.

Range: on, off

Default: No change to the current value

:mtcdstp= (optional)

Activates or deactivates the automatic generation and FTP transfer of the daily maintenance measurement report for STP.

Range: on, off

Default: No change to the current value

System

Default: off

:mtcdstplan= (optional)

Activates or deactivates the automatic generation and FTP transfer of the daily maintenance measurement report for STPLAN.

Range: on, off

Default: No change to the current value

System

Default: off

:mtcdua= (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled daily maintenance measurement report for M3UA and SUA application server/association pairs.

Range: on, off

Default: No change to the current value

System

Default: off

:mtcheir= (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled hourly maintenance measurement report for Equipment Identity Register (EIR).

Range: on, off

Default: No change to the current value

System

Default: off

:mtchlmp= (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled hourly maintenance measurement report per LNP.

Range: on, off

Default: No change to the current value

System

Default: off

:mtchmap= (optional)

Activates or deactivates the automatic generation and FTP transfer of scheduled hourly maintenance measurement report per GSM MAP Screening server entry.

Range: on, off

Default: No change to the current value

System

Default: off

:mtchnp= (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled hourly maintenance measurement report per NP.

Range: on, off

Default: No change to the current value

System

Default: off

:nmlink= (optional)

Activates or deactivates automatic generation and FTP transfer of the scheduled network management measurement report for links.

Range: on, off

Default: No change to the current value

System

Default: off

:nmlnkset= (optional)

Activates or deactivates automatic generation and FTP transfer of the scheduled network management measurement report for link sets.

Range: on, off

Default: No change to the current value

System

Default: off

:nmstp= (optional)

Activates or deactivates automatic generation and FTP transfer of scheduled network management measurement report for STP.

Range: on, off

Default: No change to the current value

System

Default: off

:platformenable= (optional)

Enables the Measurements Platform collection function.

This parameter cannot be turned off after it has been turned on.

Range: on

Default: No change to the current value

System

Default: off

:systotstp= (optional)

Activates or deactivates automatic generation and FTP transfer of scheduled measurement report for STP system totals.

Range: on, off

Default: No change to the current value

System

Default: off

:systotstplan= (optional)

Activates or deactivates automatic generation and FTP transfer of the scheduled measurement report for the STPLAN feature system totals.

Range: on, off

Default: No change to the current value

System

Default: off

:systottt= (optional)

Activates or deactivates automatic generation and FTP transfer of scheduled measurement report for translation type system totals.

Range: **on, off**

Default: No change to the current value

System

Default: **off**

Example

chg-measopts:platformenable=on

chg-

measopts:platformenable=on:complink=on:complnkset=on:systottt=off
:systotstp=off

Dependencies

The Measurements Platform feature must be on before this command can be entered.

An MCPM card must be in the IS-ANR Restrict state before the Measurements Platform collection option can be enabled.

The 15 Minute Measurements feature must be enabled and turned on before the 15 Minute Measurements collection option can be turned on.

The Measurements Platform collection option must be enabled (**platformenable=on**) before the CLLI-based name option can be turned on (**cllibasedname=on**).

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before the **mtchlnp=on** parameter or the **mtcdlnp=on** parameter can be specified.

The GSM Map Screening (GSMSCR) feature must be turned on before the **mtcdmap=on** parameter or the **mtchmap=on** parameter can be specified.

The Equipment Identity Register (EIR) feature must be turned on before the **mtcheir=on** parameter or the **mtcdeir=on** parameter can be specified.

This command is not allowed while in upgrade mode.

Half-hour collection and report processing cannot be in progress when **collect15min=on** is specified.

Quarter-hour collection and report processing cannot be in progress when **collect15min=off** is specified.

The G-Port, A-Port, IS41 GSM Migration, MO-based GSM SMS NP, MO-based IS41 SMS NP, MO SMS IS41-to-GSM Migration, or Prepaid SMS Intercept Ph1 feature must be enabled, or the INP or AINPQ feature must be turned on before the **mtchnp=on** parameter or the **mtcdnp=on** parameter can be specified.

If there are no configured links, then the **platformenable=on** parameter cannot be specified.

Notes

The function of the **all** parameter does not affect the **mtchnp**, **mtchlnp**, **mtchmap**, **mtcheir**, **mtcdnp**, **mtcdlnp**, **mtcdmap**, and **mtcdeir** reports. These reports must be turned on and off using the individual report parameters.

Activated scheduled reports are generated and transferred to the customer's FTP server.

The **rept-ftp-meas** command can be used to manually generate and transfer one report at a time as needed.

The primary application of the **set-time** command is for Daylight Savings Time changes, setting the time forward or backward 1 hour. To reduce effects of **set-time** changes on measurements, the time change should be done within the first 15 minutes of any hour.

The *Maintenance Manual* provides detailed information on measurements and measurement reports.

CLLI-Based Measurements Report File Name

When the CLLI-based file name option (**cllibasedname**) is turned on, the CLLI is added to the measurements report file name, and the year is removed from the file name to ensure that the file name is equal to or fewer than 39 characters.

15 Minute Measurements

When the SEAS feature is turned on and 15 Minute Measurements collection is turned from off to on with the **collect15min=on** parameter, the message "Disabling SEAS Measurements..." is displayed at the UI.

When the SEAS feature is turned on and 15 Minute Measurements collection is running (**collect15min=on**), EAGLE 5 ISS measurements output to the SEAS interface is disabled.

When the SEAS feature is turned on and 15 Minute Measurements collection is turned from on to off with the **collect15min=off** parameter, EAGLE 5 ISS measurements output to the SEAS interface is enabled again.

NOTE: If SEAS reporting is turned on, for the 24 hours after the 15 Minute Measurements option is turned from on to off, 30-minute demand SEAS reports for time periods prior to the option status change will contain only 15 minutes of data, and SEAS will not support reporting at the xx15 and xx45 times.

Some quarter-hour measurements data might not be available for 24 hours after turning 15 Minute Measurements collection on. This condition exists for quarter-hour intervals for which 15 Minute Measurements collection has not yet occurred. Data that was collected on a 30-minute basis is available for reporting for up to 24 hours after it is collected. After the 15 Minute Measurements collection option is turned on, this data remains available on a half-hour basis (xx00 and xx30) but is not available on a quarter-hour basis (xx15 and xx45) because no data was collected on the quarter hours. After the 15 Minute Measurements collection option has been turned on for 24 hours, all 15-minute measurements data is available on a quarter-hour basis (xx00, xx15, xx30, and xx45).

In addition, full 30-minute data coverage will not be available until 24 hours after turning off the 15 Minute Measurements collection option. Reports for specific periods will always contain the amount of data collected for that period.

The action of turning 15-minute measurements feature control status on using the **chg-ctrl-feat** command also has an impact on the generation of measurements reports for **period=active**. Specifically, if the feature control status of 15-minute measurements is turned on and a report is requested for the active interval prior to the next scheduled measurements collection (based on the current 15-minute measurements status), the starting time for the period shown in the report will be incorrect. As soon as the next scheduled collection occurs, active reports will show the correct starting time. For example, if 15-minute feature control status is turned on with the **chg-ctrl-feat** command at 13:03, and the 15-minute measurements collection option is turned on using the **chg-measopts** command at 13:05, and a comp-link report for **period=active** is requested at 13:10, that report will contain an incorrect interval start time. If the same report is requested at 13:20, the start time shown in the report will be correct, because a collection occurred at 13:15.

A similar limitation exists for **period=last**. If the feature control status of 15-minute measurements is turned on and a report is requested for the last interval prior to the next scheduled measurements collection (based on the current 15-minute measurements status), the start and end times for the period shown in the report will be incorrect. The data presented in the report will correspond to the start and end times. As soon as the next scheduled collection occurs, then **period=last** reports will show the correct start and end times and the corresponding data for that interval. To generate measurements from the last collected interval before the first collection with feature control status on, a **period=specific** report will need to be entered. In the example given in the previous paragraph, the first report requested at 13:10 would not give the last interval, but the data given would correspond

to the interval shown in the report. The second report requested at 13:20 would show correct start and end times and the data would correspond to the interval.

If the 15 Minute Measurements collection option is turned from on to off in the first 15 minutes of a half-hour (xx00-xx15 or xx30-xx45) and a demand report is requested in the second 15 minutes of a half-hour (xx15-xx30 or xx45-xx60) for **period=last** or **period** not specified, the report that is displayed will be the last 15-minute interval (xx00-xx15 or xx30-xx45), not the last collected 15-minute interval (xx45-xx00 or xx15-xx30). Collection did not occur during this 15-minute period, and the message “Measurements data not current” will be displayed. To report the last collected 15-minute interval, **period=specific** must be specified in the command with the correct **qh/hh** value.

The time interval in each measurements report shows which collection option was on when the measurements were collected. (This might not be the option that is currently on if the option was changed in the last 24 hours).

Table 5-23 summarizes the impacts of turning on the 15 Minute Measurements collection option.

Table 5-23. Impacts on Data Collection of Turning On the 15 Minute Measurements Option

Time Window for Turning On the Option	Impact on Data Collection
xx00-xx15	None. 15 minutes of data will be collected for the quarter-hour xx15.
xx15-xx30	The xx15 interval will contain no data. The xx30 interval will contain 30 minutes of data
xx30-xx45	None. 15 minutes of data will be collected for the quarter-hour xx15.
xx45-xx00	The xx45 interval will contain no data. The xx00 interval will contain 30 minutes of data

Output

```
chg-
measopts:platformenable=on:complink=on:complnkset=on:systotstt=off
:systotstp=off
    tekelecstp 08-06-01 14:31:25 EST  EAGLE 39.0.0
    CHG-MEASOPTS: MASP A - COMPLTD
;
```

chg-mrn

Change Mated Relay Node

Use this command to add new point codes, modify existing point codes and relative costs, and add or modify Alternate RI Mate data in the Mated Relay Node (MRN) table. The Intermediate GTT Load-Sharing (IGTTLS) feature must be on to enter this command. The GTT Load Sharing with Alternate Routing Indicator Feature (GTT LS ARI) must be enabled to provision an Alternate RI Mate.

If the IGTTLS feature is on, and the Flexible GTT Load Sharing feature (FGTTLS) is enabled, then entries are added to or changed in existing MRN sets in the MRN table.

If the IGTTLS feature is on, and the FGTTLS feature is not enabled, then the MRN table can contain a maximum of 3000 entries. If both the IGTTLS and FGTTLS features are on, then the MRN table can contain a maximum of 6000 entries.



CAUTION: If any entries are provisioned in the SCCP-SERV table, the maximum number of entries that the MRN table can contain is reduced by that amount. Enter the `rtrv-sccp-serv` command output to see if entries exist in the SCCP-SERV table. See the Notes section for additional information on multiplicity modes.

Keyword: `chg-mrn`

Related Commands: `dlt-mrn`, `ent-mrn`, `rtrv-mrn`

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

NOTE: The `mapset`, `mappc`, and `mapssn` parameters indicate whether an Alternate RI Mate search is performed in the MAP table if all PCs provisioned in a given MRN Set are unavailable or congested.

:pc= (mandatory)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: `pca`

Range: `000-255`

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When `chg-sid:pctype=ansi` is specified, `ni = 000` is not valid.

When `chg-sid:pctype=ansi` is specified, `nc = 000` is not valid if `ni = 001-005`.

When `chg-sid:pctype=ansi` is specified, `nc = 000` is valid if `ni = 006-255`.

The point code `000-000-000` is not a valid point code.

:pc/pca/pci/pcn/pcn24= (mandatory)

Post-GTT-translated point code.

:pci= (mandatory)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: `s-, 0-255`

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—`s-`

zone—`0-7`

area—`000-255`

id—`0-7`

The point code `0-000-0` is not a valid point code.

:pcn= (mandatory)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the `chg-stpopts:npcfmti` flexible point code

option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn, prefix-nnnnn-gc, prefix-m1-m2-m3-m4, prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:pcn24= (mandatory)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

:eswt= (optional)

Entity set weight. This parameter specifies the weight assigned to each PC in a weighted entity set. The Weighted GTT Loadsharing feature must be turned on before this parameter can be specified. This parameter cannot be specified when adding PCs to a weighted entity set or when modifying RC or weight values for an individual PC.

Range: **1-99 none**

none—Changes a weighted entity set to a non-weighted entity set.

:force= (optional)

The **force=yes** parameter must be specified to modify the **rc**, **rc1**, **rc2**, **rc3**, or **rc4** parameter and the **wt**, **wt1**, **wt2**, **wt3**, or **wt4** parameter in the same command.

Modification of the **wt**, **wt1**, **wt2**, **wt3**, or **wt4** parameters is dependent on the parameter's current multiplicity state, which is dependent on the RC value. Changing the **rc** parameter value can change the multiplicity state, which can then cause any of the weight parameter values to become invalid.

Range: **yes**

:grpwt= (optional)

Group weight. This parameter specifies the weight assigned to each PC in a weighted RC group. The Weighted GTT Loadsharing feature must be turned on before this parameter can be specified.

This parameter cannot be specified when adding PCs to a weighted entity set or when modifying RC or weight values for an individual PC.

Range: **1-99**

:mappc= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: **mappca**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001–005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006–255**.

The point code **000-000-000** is not a valid point code.

Default: 000-000-000

:mappc\mappca\mappci\mappcn\mappcn24= (optional)

Alternate RI Mate point code.

:mappci= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

Default: 0-000-0

:mappcn= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npfmt** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: s-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

Default: 00000

:mappcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

Default: 000-000-000

:mapset= (optional)

Alternate RI Mate MAP Set ID. This parameter specifies the MAP set where Alternate Routing Indicator searches are performed.

Range: 1-36000 dflt

dflt—Default MAP Set

If the **mappc** and **mapssn** parameters are specified, and the **mapset** parameter is not specified, then the **mapset** parameter is automatically set to a value of **dflt**.

Default: No change to the current value

:mapssn= (optional)

Alternate RI Mate Subsystem Number. This parameter specifies the subsystem number that is used for the Alternate Routing Indicator search.

Range: 2-255 *, none

If the **mapssn=*** parameter is specified, then the values specified for the **mapset** and **mappc** parameters must already exist in the MAP table.

Default: No change to the current value

:mrnset= (optional)

MRN set ID.

Range: 1-3000 dflt

dflt—Default MRN set.

:pc1= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: pca1

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001–005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006–255**.

The point code **000-000-000** is not a valid point code.

:pc1/pca1/pci1/pcn1/pcn241= (optional)

Alternate post-GTT-translated point code.

:pc2= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: pca2

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001–005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006–255**.

The point code **000-000-000** is not a valid point code.

:pc2/pca2/pci2/pcn242= (optional)

Alternate post-GTT-translated point code.

:pc3= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: **pca3**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001–005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006–255**.

The point code **000-000-000** is not a valid point code.

:pc3/pca3/pci3/pcn3/pcn243= (optional)

Alternate post-GTT-translated point code.

:pc4= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: **pca4**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001–005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006–255**.

The point code **000-000-000** is not a valid point code.

:pc4/pca4/pci4/pcn4/pcn244= (optional)

Alternate post-GTT-translated point code.

:pci1= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:pci2= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

:pci3= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

:pci4= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

:pcn1= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: s-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:pcn2= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:pcn241= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:pcn242= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:pcn243= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:pcn244= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

:pcn3= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:pcn4= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:rc= (optional)

Relative cost. This parameter specifies the relative cost of the route for the primary PC.

Range: **0-99**

:rc1= (optional)

The relative cost of the route for alternate post-GTT-translated point code 1.

:rc1= (optional)

Relative cost 1. This parameter specifies the relative cost of the route for mate PC 1.

Range: **0-99**

:rc2= (optional)

Relative cost 2. This parameter specifies the relative cost of the route for mate PC 2.

Range: **0-99**

:rc3= (optional)

Relative cost 3. This parameter specifies the relative cost of the route for mate PC 3.

Range: **0-99**

:rc4= (optional)

Relative cost 4. This parameter specifies the relative cost of the route for mate PC 4.

Range: 0-99

:thr= (optional)

Threshold. This parameter specifies the in-service threshold of all PCs in a weighted entity set or RC group. The Weighted GTT Loadsharing feature must be turned on before this parameter can be specified.

This parameter cannot be specified when adding PCs to a weighted entity set or RC group or when modifying RC or weight values for an individual PC.

If the **thr** parameter is not specified, a value of **1%** is assigned to each weighted PC.

Range: 1-100

:wt= (optional)

Weight. This parameter specifies the new weight assigned to the primary PC. The Weighted GTT Loadsharing feature must be turned on before this parameter can be specified.

This parameter cannot be specified when adding PCs to a weighted entity set.

Range: 1-99

:wt1= (optional)

Weight 1. This parameter specifies the weight assigned to the mate PC 1 that is being added to the weighted entity set. The Weighted GTT Loadsharing feature must be turned on before this parameter can be specified.

Range: 1-99

:wt2= (optional)

Weight 2. This parameter specifies the weight assigned to the mate PC 2 that is being added to the weighted entity set. The Weighted GTT Loadsharing feature must be turned on before this parameter can be specified.

Range: 1-99

:wt3= (optional)

Weight 3. This parameter specifies the weight assigned to the mate PC 3 that is being added to the weighted entity set. The Weighted GTT Loadsharing feature must be turned on before this parameter can be specified.

Range: 1-99

:wt4= (optional)

Weight 4. This parameter specifies the weight assigned to the mate PC 4 that is being added to the weighted entity set. The Weighted GTT Loadsharing feature must be turned on before this parameter can be specified.

Range: 1-99

Example

In the following example, the system searches the MRN table for a point code of 1-1-0. If the point code is found, its relative cost is set to 40.

chg-mrn:pc=1-1-0:rc=40

In the following example, the system searches the MRN table for point code 1-1-0. Having found it, the system then searches the entity set for 1-1-10. If 1-1-10 is not in the entity set, the command will add point code 1-1-10 to the entity set and assign it a relative cost of 30.

chg-mrn:pc=1-1-0:pc1=1-1-10:rc1=30

In the following example, the system searches the MRN table for a point code of 1-1-0. Having found it, the system then searches for each of the two specified associated point codes in the entity set. If neither of the associated point codes are found, the specified point codes and their relative costs are inserted into the entity set in the MRN table.

chg-mrn:pc=1-1-0:pc1=1-1-1:rc1=10:pc2=1-1-10:rc2=20

The following examples include spare point codes.

chg-mrn:pcn=s-1-1-1-123-aa:rc=1:pcn1=s-1-1-1-235-aa:rc1=2:pcn2=s-1-1-1-235-aa:rc2=3

chg-

mrn:pci=s-2-2-1:rc=20:pci1=s-2-2-2:rc1=21:pci2=s-2-100-1:rc2=22

chg-mrn:pc=1-1-1:rc=30:mrnset=df1t

chg-mrn:pc=1-1-1:rc=20:pc1=2-2-2:rc1=20:mrnset=111

chg-mrn:pc=1-1-1:pc1=3-3-3:rc1=30:mrnset=111

The following examples change a non-weighted entity set to a weighted entity set.

chg-mrn:pc=1-1-1:eswt=30

chg-mrn:pc=1-1-1:eswt=30:thr=50

The following example changes a weighted entity set to a non-weighted entity set.

chg-mrn:pc=1-1-1:eswt=none

The following example assigns a weight value to each PC in a weighted RC group within a weighted entity set.

chg-mrn:pc=1-1-1:grpwt=20

The following example assigns a threshold value to each PC in the RC group within a weighted entity set.

chg-mrn:pc=1-1-1:thr=70

The following example assigns a weight and threshold to each PC in an RC group within a weighted entity set.

chg-mrn:pc=1-1-1:grpwt=20:thr=70

The following example assigns PC 1-1-1 a weight of 30.

chg-mrn:pc=1-1-1:wt=30

The following example adds PC 1-1-10 to the weighted entity set containing PC 1-1-0 and assigns PC 1-1-10 an RC of 30 and a weight of 20.

chg-mrn:pc=1-1-0:pc1=1-1-10:rc1=30:wt1=20

The following example assigns specified PCs and their associated RCs and weights to the weighted entity set that contains the point code 1-1-0.

chg-mrn:pc=1-1-0:pc1=1-1-1:rc1=10:wt1=35:pc2=1-1-10:rc2=20:wt2=20

The following example modifies both RC values and weights for PCs in an existing weighted entity set.

chg-

mrn:pc=1-1-0:rc=30:wt=10:pc1=1-1-10:rc1=20:pc2=1-1-2:wt2=5:force=yes

The following example modifies only weights for PCs in an existing weighted entity set.

chg-mrn:pc=1-1-0:wt=10:pc1=1-1-10:wt1=20:pc2=1-1-2:wt2=5

chg-mrn:pc=1-1-1:mrnset=111:mapset=df1t:mappc=2-1-1:mapssn=10

chg-mrn:pc=1-1-1:mrnset=111:mapssn=*

chg-mrn:pc=1-1-1:mrnset=111:mapset=1:mappc=2-1-2:mapssn=12

chg-mrn:pci=1-002-1:mrnset=10:mapset=2:mappcn=00126:mapssn=12

Dependencies

The Intermediate Global Title Translation Load Sharing feature must be turned on before this command can be entered.

The **apca** and **pcn24** parameters cannot be specified for the same MRN set.

When a new point code is specified, its relative cost (**rc**) must be specified; a new point code and its relative cost must be entered together in the command.

A new point code that is specified in the command must not already exist in the MRN table.

The point codes cannot have the same value as the EAGLE 5 ISS SID.

The same point code value cannot be entered more than once in the MRN table.

Each point code group can contain a maximum of 32 point codes.

ITU-N point codes must be in the format set by the **npcfmti** parameter of the **chg-stpopts** command. (Use the **rtv-stpopts** command to display the STP option settings).

Mate remote point codes must already exist as destinations in the Ordered Route entity set or reside in a cluster destination for which ordered routes are specified.

To change the relative cost for a point code, the point code must already exist in the MRN table.

The Flexible GTT Loadsharing feature must be enabled before the **mrnset** parameter can be specified..

If the Flexible GTT Loadsharing feature is enabled, the specified PC must already exist in the specified MRN set.

The specified MRN set must already exist in the MRN table.

One or more point codes in the command will exceed the maximum number of point codes that can be entered into the MRN table (3000 if the IGTTLS feature is turned on and 6000 if the IGTTLS and FGTTLS features are turned on).

The Weighted GTT Loadsharing feature must be turned on before the **wt/wt1/wt2/wt3/wt4**, **eswt**, **grpwt**, or **thr** parameter can be specified.

If the **rc** parameter is not specified, the **wt** parameter cannot be specified.

The **eswt** and **grpwt** parameters cannot be specified together in the command.

If the **eswt=none** parameter is specified, the **thr** parameter cannot be specified.

If the **eswt**, **grpwt**, or **thr** parameters are specified, the **rc/rc1/rc2/rc3/rc4** and **wt/wt1/wt2/wt3/wt4** parameters cannot be specified.

If the Weighted GTT Loadsharing feature is enabled, and individual PCs are being modified, the **wt** or **rc** parameter must be specified for each PC.

Alternate point codes cannot be specified when modifying an entity set or RC group.

If the **pc1/pc2/pc3/pc4** parameter is specified for a weighted entity set, a corresponding **wt1/wt2/wt3/wt4** parameter must be specified.

If the **pc1/pc2/pc3/pc4** parameter is specified for a non-weighted entity set, the **wt1/wt2/wt3/wt4** parameter cannot be specified.

The **eswt=none** parameter cannot be specified for non-weighted entity sets.

The **grpwt** and **thr** parameters cannot be specified for non-weighted entity sets.

At least one additional point code must be specified.

If the **wt/wt1/wt2/wt3/wt4** parameter is specified, the corresponding **pc/pc1/pc2/pc3/pc4** parameter must be specified.

The **pc/pc1/pc2/pc3/pc4** parameter values must be full point codes.

At least one optional parameter must be specified.

If the Weighted GTT Loadsharing feature is not enabled, and individual PCs are being modified, the **rc** parameter must be specified for each PC.

The **eswt**, **grpwt**, and **thr** parameters cannot be specified for solitary or dominant entity sets.

If the **chg-sid:pctype=ansi** command is entered, a value of *ni=000* cannot be specified. If the **chg-sid:pctype=ansi** command is entered, and a value of *ni=001 – 005* is specified, a value of *nc=000* cannot be specified.

The **force=yes** parameter must be specified before the **rc**, **rc1**, **rc2**, **rc3**, or **rc4** parameter can be specified in the same command with the **wt**, **wt1**, **wt2**, **wt3**, or **wt4** parameter.

The **force** parameter can be used only to specify the **rc**, **rc1**, **rc2**, **rc3** or **rc4** parameter and the **wt**, **wt1**, **wt2**, **wt3**, or **wt4** parameter in the same command.

The value specified for the **pc/pc1/pc2/pc3/pc4** parameter cannot be associated with a proxy point code.

The GTT LS ARI feature must be enabled before the **mapset**, **mappc**, or **mapssn** parameter can be specified.

The value specified for the **mappc** parameter must be a full point code.

The point codes and alternate RI Mate point codes must have the same network type. Table 5-24 displays the allowed PC and Alternate RI Mate PC combinations.

Table 5-24. Allowed PC and Alternate RI Mate PC Combinations

Network Type of PC	Allowed Network Type of Alternate ARI Mate PC
ITU-I, ITU-N, ITU-I spare, ITU-N spare	ITU-I, ITU-N, ITU-I spare, ITU-N spare
ANSI	ANSI
ITUN-24	ITUN-24

The MAP table is corrupt or cannot be found.

The value specified for the **mapset** parameter must already exist in the MAP table.

The values specified for the **mappc** and **mapssn** parameters must already exist in the specified MAP Set.

The values specified for the **mapset** and **mappc** parameters must already exist in the MAP table.

The value specified for the **mappc** parameter cannot match an existing STP point code.

The **mappc** and **mapssn** parameters must be specified together in the command.

Notes

For the MRN commands, an entity set consists of a group of PCs that are used for traffic distribution, and an RC group consists of PCs within an entity set that have the same RC. In loadsharing mode, an entity set contains 1 RC group. In combined/dominant loadsharing mode, an entity set can contain multiple loadsharing groups.

All of the point codes that are specified in one command must exist in the same point code group in the MRN table.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (**s-**).

The EAGLE 5 ISS supports the following multiplicity modes for nodes/subsystems.

- A group of replicated PCs are in *dominant* mode if each PC in the group has a unique RC. The specified subsystem with the lowest RC acts as the primary subsystem, while the mate subsystem acts as a backup. In the event of congestion, messages route to the mate subsystem. When the congestion subsides, messages are again routed to the primary (dominant) subsystem.
- A group of replicated PCs are in *load sharing* mode if each PC in the group has the same RC. All messages are evenly distributed at the SCCP level to all nodes/subsystems in the group. In the event of congestion or failure, the non-affected subsystem assumes the load of its failed or congested mate.
- The *combined load sharing/dominant* mode supports a combination of load sharing and dominant mode. A group of PCs are in combined load sharing/dominant mode when at least two of the PCs have the same RC and another node subsystem in the group has a different RC. A combination of node accessibility and RC determines the preferred PC.

When the Weighted GTT Loadsharing feature is turned on, weighted entity sets and RC groups are supported, and threshold values can be assigned to each PC.

When the GTT LS ARI feature is enabled, the Alternate RI Mate for an MRN Set can be provisioned.

Output

```
chg-mrn:pci=1-1-2:mrnset=111:mapset=10:mappc=1-1-1:mapssn=*
tekelecstp 08-12-22 15:43:00 EST EAGLE 40.1.0
chg-mrn:pci=1-1-2:mrnset=111:mapset=10:mappc=1-1-1:mapssn=*
Command entered at terminal #4.
CHG-MAP: MASP A - COMPLTD
```

;

chg-mtc-measopts

Change Maintenance Measurements Options

Use this command to enable or disable the automatic generation and FTP transfer of scheduled maintenance measurements reports to the FTP server.

Keyword: chg-mtc-measopts

Related Commands: chg-ftp-serv, chg-meas, chg-measopts, chg-netopts, dlt-ftp-serv, ent-ftp-serv, rept-ftp-meas, rept-meas, rept-stat-meas, rtrv-ftp-serv, rtrv-measopts, rtrv-mtc-measopts, rtrv-netopts

Command Class: Link Maintenance

Parameters

:mtcdatinpq= (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled daily maintenance measurement report for ATI Number Portability Query (ATINP).

Range: on, off

Default: No change to the current value

System

Default: off

:mtcdeir= (optional)

Activates or deactivates the automatic generation and FTP transfer of the daily maintenance measurement report for Equipment Identity Register (EIR).

Range: on, off

Default: No change to the current value

System

Default: off

:mtcdlink= (optional)

Activates or deactivates the automatic generation and FTP transfer of the daily maintenance measurement report for links.

Range: on, off

Default: No change to the current value

System

Default: off

:mtcdlnkset= (optional)

Activates or deactivates the automatic generation and FTP transfer of the daily maintenance measurement report for link sets.

Range: on, off

Default: No change to the current value

System

Default: off

:mtcdlnp= (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled daily maintenance measurement report for LNP.

Range: on, off

Default: No change to the current value

System

Default: off

:mtcdmap= (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled daily maintenance measurement report per GSM MAP Screening server entry.

Range: on, off

Default: No change to the current value

System

Default: off

:mtcdnp= (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled daily maintenance measurement report for INP.

Range: on, off

Default: No change to the current value

System

Default: off

:mtcdsctpasoc= (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled daily maintenance measurement report for per association SCTP data.

Range: on, off

Default: No change to the current value

:mtcdsctpcard= (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled daily maintenance measurement report for per card SCTP data.

Range: on, off

Default: No change to the current value

:mtcdstp= (optional)

Activates or deactivates the automatic generation and FTP transfer of the daily maintenance measurement report for STP.

Range: on, off
Default: No change to the current value
System
Default: off

:mtcdstplan= (optional)

Activates or deactivates the automatic generation and FTP transfer of the daily maintenance measurement report for STPLAN.

Range: on, off
Default: No change to the current value
System
Default: off

:mtcdua= (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled daily maintenance measurement report for M3UA and SUA application server/association pairs.

Range: on, off
Default: No change to the current value
System
Default: off

:mtcdvflex= (optional)

Activates or deactivates the automatic generation and FTP transfer of the daily maintenance measurement report for V-Flex (Voice Mail Router).

Range: on, off
Default: No change to the current value
System
Default: off

:mtchatinpq= (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled hourly maintenance measurement report of Any Time Interrogation (ATI) Number Portability (NP) Queries.

Range: on, off
Default: No change to the current value
System
Default: off

:mtcheir= (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled hourly maintenance measurement report for Equipment Identity Register (EIR).

Range: on, off
Default: No change to the current value
System
Default: off

:mtchlnp= (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled hourly maintenance measurement report for LNP.

Range: on, off
Default: No change to the current value
System
Default: off

:mtchmap= (optional)

Activates or deactivates the automatic generation and FTP transfer of scheduled hourly maintenance measurement report per GSM MAP Screening server entry.

Range: **on, off**
Default: No change to the current value
System
Default: **off**

:mtchnp= (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled hourly maintenance measurement report for INP.

Range: **on, off**
Default: No change to the current value
System
Default: **off**

:mtchvflex= (optional)

Activates or deactivates the automatic generation and FTP transfer of the scheduled hourly maintenance measurement report for V-Flex (Voice Mail Router).

Range: **on, off**
Default: No change to the current value
System
Default: **off**

Example

```

chg-mtc-measopts:mtcdeir=off:mtcheir=on
chg-mtc-measopts:mtchvflex=on:mtcdvflex=on

```

Dependencies

The Measurements Platform feature must be on before this command can be entered.

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before the **mtchnp=on** parameter or the **mtcdlnp=on** parameter can be specified.

The GSM Map Screening (GSMSCR) feature must be turned on before the **mtcdmap=on** parameter or the **mtchmap=on** parameter can be specified.

The Equipment Identity Register (EIR) feature must be turned on before the **mtcheir=on** parameter or the **mtcdeir=on** parameter can be specified.

This command is not allowed while in upgrade mode.

The G-Port, A-Port, IS41 GSM Migration, or Prepaid SMS Intercept Ph1 feature must be enabled, or the INP or AINPQ feature must be turned on before the **mtchnp=on** parameter or the **mtcdnp=on** parameter can be specified.

The V-Flex feature must be turned on before the **mtchvflex=on** parameter or the **mtcdvflex=on** parameter can be specified.

The ATINP feature must be enabled before the **mtchatinpq=on** parameter or the **mtcdatinpq=on** parameter can be specified.

Notes

Activated scheduled reports are generated and transferred to the customer's FTP server

The **rept-ftp-meas** command can be used to manually generate and transfer one report at a time as needed.

The *Maintenance Manual* provides detailed information on measurements and measurement reports.

Output

```
chg-mtc-measopts:mtchvflex=on:mtcdvflex=on
tekelecstp 08-06-01 14:31:25 EST EAGLE 39.20.0
CHG-MTC-MEASOPTS: MASP A - COMPLTD
;
```

chg-netopts**Change Network Options**

Use this command to change the Private Virtual Network (PVN) address and PVN subnet mask values for the IP networks and the network address and subnet mask values for the Fast Copy networks used by the EAGLE 5 ISS.

Keyword: chg-netopts

Related Commands: rtrv-netopts

Command Class: Database Administration

Parameters

:fcna= (optional)

Fast Copy Network A. This parameter specifies the network address for the Fast Copy A network.

NOTE: The fcna parameter consists of a classless Inter Domain Routing (Supernet) address with a network prefix of up to 23 bits.

Range: 0.0.2.0-255.255.253.0

The last 9 bits are zero (0) and are reserved for the Host ID.

Default: No change to the current value

System

Default: 172.21.48.00

:fcnb= (optional)

Fast Copy Network B. This parameter specifies the network address for the Fast Copy B network.

NOTE: The fcnb parameter consists of a classless Inter Domain Routing (Supernet) address with a network prefix of up to 23 bits.

Range: 0.0.2.0-255.255.253.0

The last 9 bits are zero (0) and are reserved for the Host ID.

Default: No change to the current value

System

Default: 172.22.48.00

:pvn= (optional)

Private Virtual Network (PVN) address for the EAGLE 5 ISS. The value must be valid for a Class B network IP address.

Range: 128.0.0.0-191.255.0.0

4 numbers separated by dots in the range 128.0.0.0 to 191.255.0.0

Default: No change to the current value

System

Default: 172.20.48.00

:pvnmask= (optional)

Subnet mask for the EAGLE 5 ISS PVN. An IP address with a restricted range of values.

Range: The value must be valid for a Class B network IP address as shown in the following table.

Table 5-25. Valid PVN Subnet Mask Values

Valid for Class B Networks	
255.255.0.0	255.255.248.0
255.255.192.0	255.255.252.0
255.255.224.0	255.255.254.0
255.255.240.0	255.255.255.128

Default: No change to the current value

System

Default: 255.255.252.00

Example

chg-netopts:pv n=170.120.50.1:pv nmask=255.255.252.0

chg-netopts:fc na=170.120.50.0

chg-netopts:fc nb=172.121.50.0

Dependencies

At least one pair of optional parameters must be specified in the command (i.e. **pv n** and **pv nmask** or **fc na** and **fc nb**).

The **pv n** and **pv nmask** IP addresses cannot have the same value.

The **pv n** and **pv nmask** parameters must be specified together in the command.

The IP network address specified by the **pv n** and **pv nmask** parameters or the **fc na** and **fc nb** parameters must be different from the IP network addresses assigned to Ethernet interface A or B for the IPGWx, IPLIMx, and FC-capable cards.

The IP Network address specified by the **pv n** and **pv nmask** parameters or the **fc na** and **fc nb** parameters cannot have an existing route in the IP Route table.

The E5IS feature bit must be turned on (see the **chg-feat** command) before this command can be specified.

The value specified for the **fc na** parameter must be a classless Inter Domain Routing (Supernet) address with a 23-bit network prefix.

The value specified for the **fc nb** parameter must be a classless Inter Domain Routing (Supernet) address with a 23-bit network prefix.

If the **fc mode=fcopy** parameter is specified (see the **chg-eisopts** command), then the **fc na** and **fc nb** parameters cannot be specified.

The **eiscopy=off** parameter must be specified (see the **chg-eisopts** command) before the **pv n** or **pv nmask** parameter can be specified.

The same value cannot be specified for the **pv n**, **fc na**, and **fc nb** parameters.

The same value cannot be specified for the **fc na** and **fc namask** parameters.

The same value cannot be specified for the **fc nb** and **fc nbmask** parameters.

Notes

Fast Copy Cards

A card that can run the Fast Copy interface is referred to as an *FC-capable* card. Currently, E5-ENET cards running the **ipsg** application are the only supported FC-capable cards. After the

fcmode=fcopy parameter is specified (see the **chg-eisopts** command) for an FC-capable card, the card is referred to as an *FC-enabled* card.

Output

```
chg-netopts:fcna=170.120.50.0
rlghncxa03w 08-12-11 16:37:58 IST EAGLE 40.1.0
CHG-NETOPTS: MASP A - COMPLTD
;
```

chg-npp-as

Change a NPP Action Set

Use this command to change a Numbering Plan Processor (NPP) Action Set (AS). An AS is used by the NPP to assist with digit string filtering, conditioning, and encoding for selected EAGLE 5 ISS applications. An AS is a collection of NPP Conditioning Actions (CAs), Service Actions (SAs), and Formatting Actions (FAs).

Keyword: chg-npp-as

Related Commands: chg-npp-as, dlt-npp-as, rtrv-npp-as

Command Class: Database Administration

Parameters

NOTE: The CAs are processed in consecutive order (ca1, ca2, etc.). The CAs do not have to be specified in consecutive order in the command; however, the CA numbers within the command must be consecutive and must contain ca1. Refer to the *Feature Manual - NPP* and to the manual for the feature of interest for additional information.

NOTE: The FAs are processed in consecutive order (fa1, fa2, etc.). The FAs do not have to be specified in consecutive order in the command; however, the FA numbers within the command must be consecutive and must contain fa1. Refer to the *Feature Manual - NPP* and to the manual for the feature of interest for additional information.

NOTE: The SAs are processed in order of precedence. The SA with the highest precedence must be assigned as the value for sa1. If multiple SAs have the same precedence, then the SAs are processed in consecutive order. The SAs do not have to be specified in consecutive order in the command; however, the SA numbers within the command must be consecutive and must contain sa1. Refer to the *Feature Manual - NPP* and to the manual for the feature of interest for additional information.

NOTE: The ac* value refers to all CAs that begin with ac (ac1, acdef, etc).

NOTE: The dn* value refers to all CAs that begin with dn (dn1, dnx, etc).

NOTE: The sn* value refers to all CAs that begin with sn (sn1, snx, etc).

NOTE: The cc* value refers to all CAs that begin with cc (cc1, ccdef, etc).

NOTE: Definitions for the CA, FA, and SA parameter values are located in the *Notes* section.

:asn= (mandatory)

Action set name. This parameter specifies the name of the AS.

Range: aaaaaaaaa

1 alphabetic character followed by up to 9 alphanumeric characters

:ca1= (optional)

Conditioning action 1. This parameter specifies the first CA that can be applied to an incoming digit string.

Range: ign1, ign2, ign3, ign4, ign5, ign6, ign7, ign8, ign9, ign10, pfx, pfxa1, pfxa2, pfxa3, pfxa4, pfxa5, pfxa6, pfxa7, pfxa8, pfxb1, pfxb2, pfxb3, pfxb4, pfxb5,

pfxb6, pfxb7, pfxb8, pfxc1, pfxc2, pfxc3, pfxc4, pfxc5, pfxc6, pfxc7, pfxc8, pfxd1, pfxd2, pfxd3, pfxd4, pfxd5, pfxd6, pfxd7, pfxd8, pfxe1, pfxe2, pfxe3, pfxe4, pfxe5, pfxe6, pfxe7, pfxe8, pfxf1, pfxf2, pfxf3, pfxf4, pfxf5, pfxf6, pfxf7, pfxf8, cc1, cc2, cc3, ccdef, ac1, ac2, ac3, ac4, ac5, ac6, ac7, ac8, sn1, sn2, sn3, sn4, sn5, sn6, sn7, sn8, sn9, sn10, sn11, sn12, sn13, sn14, sn15, snx, dn1, dn2, dn3, dn4, dn5, dn6, dn7, dn8, dn9, dn10, dn11, dn12, dn13, dn14, dn15, dnx, znx, aclac, accgpn, acdef

:ca10= (optional)

Conditioning action 10. This parameter specifies the tenth CA that can be applied to an incoming digit string.

Range: ign1, ign2, ign3, ign4, ign5, ign6, ign7, ign8, ign9, ign10, fpx, pfxa1, pfxa2, pfxa3, pfxa4, pfxa5, pfxa6, pfxa7, pfxa8, pfxb1, pfxb2, pfxb3, pfxb4, pfxb5, pfxb6, pfxb7, pfxb8, pfxc1, pfxc2, pfxc3, pfxc4, pfxc5, pfxc6, pfxc7, pfxc8, pfxd1, pfxd2, pfxd3, pfxd4, pfxd5, pfxd6, pfxd7, pfxd8, pfxe1, pfxe2, pfxe3, pfxe4, pfxe5, pfxe6, pfxe7, pfxe8, pfxf1, pfxf2, pfxf3, pfxf4, pfxf5, pfxf6, pfxf7, pfxf8, cc1, cc2, cc3, ccdef, ac1, ac2, ac3, ac4, ac5, ac6, ac7, ac8, sn1, sn2, sn3, sn4, sn5, sn6, sn7, sn8, sn9, sn10, sn11, sn12, sn13, sn14, sn15, snx, dn1, dn2, dn3, dn4, dn5, dn6, dn7, dn8, dn9, dn10, dn11, dn12, dn13, dn14, dn15, dnx, znx, aclac, accgpn, acdef

:ca11= (optional)

Conditioning action 11. This parameter specifies the eleventh CA that can be applied to an incoming digit string.

Range: ign1, ign2, ign3, ign4, ign5, ign6, ign7, ign8, ign9, ign10, fpx, pfxa1, pfxa2, pfxa3, pfxa4, pfxa5, pfxa6, pfxa7, pfxa8, pfxb1, pfxb2, pfxb3, pfxb4, pfxb5, pfxb6, pfxb7, pfxb8, pfxc1, pfxc2, pfxc3, pfxc4, pfxc5, pfxc6, pfxc7, pfxc8, pfxd1, pfxd2, pfxd3, pfxd4, pfxd5, pfxd6, pfxd7, pfxd8, pfxe1, pfxe2, pfxe3, pfxe4, pfxe5, pfxe6, pfxe7, pfxe8, pfxf1, pfxf2, pfxf3, pfxf4, pfxf5, pfxf6, pfxf7, pfxf8, cc1, cc2, cc3, ccdef, ac1, ac2, ac3, ac4, ac5, ac6, ac7, ac8, sn1, sn2, sn3, sn4, sn5, sn6, sn7, sn8, sn9, sn10, sn11, sn12, sn13, sn14, sn15, snx, dn1, dn2, dn3, dn4, dn5, dn6, dn7, dn8, dn9, dn10, dn11, dn12, dn13, dn14, dn15, dnx, znx, aclac, accgpn, acdef

:ca12= (optional)

Conditioning action 12. This parameter specifies the twelfth CA that can be applied to an incoming digit string.

Range: ign1, ign2, ign3, ign4, ign5, ign6, ign7, ign8, ign9, ign10, fpx, pfxa1, pfxa2, pfxa3, pfxa4, pfxa5, pfxa6, pfxa7, pfxa8, pfxb1, pfxb2, pfxb3, pfxb4, pfxb5, pfxb6, pfxb7, pfxb8, pfxc1, pfxc2, pfxc3, pfxc4, pfxc5, pfxc6, pfxc7, pfxc8, pfxd1, pfxd2, pfxd3, pfxd4, pfxd5, pfxd6, pfxd7, pfxd8, pfxe1, pfxe2, pfxe3, pfxe4, pfxe5, pfxe6, pfxe7, pfxe8, pfxf1, pfxf2, pfxf3, pfxf4, pfxf5, pfxf6, pfxf7, pfxf8, cc1, cc2, cc3, ccdef, ac1, ac2, ac3, ac4, ac5, ac6, ac7, ac8, sn1, sn2, sn3, sn4, sn5, sn6, sn7, sn8, sn9, sn10, sn11, sn12, sn13, sn14, sn15, snx, dn1, dn2, dn3, dn4, dn5, dn6, dn7, dn8, dn9, dn10, dn11, dn12, dn13, dn14, dn15, dnx, znx, aclac, accgpn, acdef

:ca2= (optional)

Conditioning action 2. This parameter specifies the second CA that can be applied to an incoming digit string.

Range: ign1, ign2, ign3, ign4, ign5, ign6, ign7, ign8, ign9, ign10, fpx, pfxa1, pfxa2, pfxa3, pfxa4, pfxa5, pfxa6, pfxa7, pfxa8, pfxb1, pfxb2, pfxb3, pfxb4, pfxb5, pfxb6, pfxb7, pfxb8, pfxc1, pfxc2, pfxc3, pfxc4, pfxc5, pfxc6, pfxc7, pfxc8, pfxd1, pfxd2, pfxd3, pfxd4, pfxd5, pfxd6, pfxd7, pfxd8, pfxe1, pfxe2, pfxe3, pfxe4, pfxe5, pfxe6, pfxe7, pfxe8, pfxf1, pfxf2, pfxf3, pfxf4, pfxf5, pfxf6,

pfxf7, pfxf8, cc1, cc2, cc3, ccdef, ac1, ac2, ac3, ac4, ac5, ac6, ac7, ac8, sn1, sn2, sn3, sn4, sn5, sn6, sn7, sn8, sn9, sn10, sn11, sn12, sn13, sn14, sn15, snx, dn1, dn2, dn3, dn4, dn5, dn6, dn7, dn8, dn9, dn10, dn11, dn12, dn13, dn14, dn15, dnx, znx, aclac, accgpn, acdef

:ca3= (optional)

Conditioning action 3. This parameter specifies the third CA that can be applied to an incoming digit string.

Range: ign1, ign2, ign3, ign4, ign5, ign6, ign7, ign8, ign9, ign10, fpx, pfxa1, pfxa2, pfxa3, pfxa4, pfxa5, pfxa6, pfxa7, pfxa8, pfxb1, pfxb2, pfxb3, pfxb4, pfxb5, pfxb6, pfxb7, pfxb8, pfxc1, pfxc2, pfxc3, pfxc4, pfxc5, pfxc6, pfxc7, pfxc8, pfxd1, pfxd2, pfxd3, pfxd4, pfxd5, pfxd6, pfxd7, pfxd8, pfxe1, pfxe2, pfxe3, pfxe4, pfxe5, pfxe6, pfxe7, pfxe8, pfxf1, pfxf2, pfxf3, pfxf4, pfxf5, pfxf6, pfxf7, pfxf8, cc1, cc2, cc3, ccdef, ac1, ac2, ac3, ac4, ac5, ac6, ac7, ac8, sn1, sn2, sn3, sn4, sn5, sn6, sn7, sn8, sn9, sn10, sn11, sn12, sn13, sn14, sn15, snx, dn1, dn2, dn3, dn4, dn5, dn6, dn7, dn8, dn9, dn10, dn11, dn12, dn13, dn14, dn15, dnx, znx, aclac, accgpn, acdef

:ca4= (optional)

Conditioning action 4. This parameter specifies the fourth CA that can be applied to an incoming digit string.

Range: ign1, ign2, ign3, ign4, ign5, ign6, ign7, ign8, ign9, ign10, fpx, pfxa1, pfxa2, pfxa3, pfxa4, pfxa5, pfxa6, pfxa7, pfxa8, pfxb1, pfxb2, pfxb3, pfxb4, pfxb5, pfxb6, pfxb7, pfxb8, pfxc1, pfxc2, pfxc3, pfxc4, pfxc5, pfxc6, pfxc7, pfxc8, pfxd1, pfxd2, pfxd3, pfxd4, pfxd5, pfxd6, pfxd7, pfxd8, pfxe1, pfxe2, pfxe3, pfxe4, pfxe5, pfxe6, pfxe7, pfxe8, pfxf1, pfxf2, pfxf3, pfxf4, pfxf5, pfxf6, pfxf7, pfxf8, cc1, cc2, cc3, ccdef, ac1, ac2, ac3, ac4, ac5, ac6, ac7, ac8, sn1, sn2, sn3, sn4, sn5, sn6, sn7, sn8, sn9, sn10, sn11, sn12, sn13, sn14, sn15, snx, dn1, dn2, dn3, dn4, dn5, dn6, dn7, dn8, dn9, dn10, dn11, dn12, dn13, dn14, dn15, dnx, znx, aclac, accgpn, acdef

:ca5= (optional)

Conditioning action 5. This parameter specifies the fifth CA that can be applied to an incoming digit string.

Range: ign1, ign2, ign3, ign4, ign5, ign6, ign7, ign8, ign9, ign10, fpx, pfxa1, pfxa2, pfxa3, pfxa4, pfxa5, pfxa6, pfxa7, pfxa8, pfxb1, pfxb2, pfxb3, pfxb4, pfxb5, pfxb6, pfxb7, pfxb8, pfxc1, pfxc2, pfxc3, pfxc4, pfxc5, pfxc6, pfxc7, pfxc8, pfxd1, pfxd2, pfxd3, pfxd4, pfxd5, pfxd6, pfxd7, pfxd8, pfxe1, pfxe2, pfxe3, pfxe4, pfxe5, pfxe6, pfxe7, pfxe8, pfxf1, pfxf2, pfxf3, pfxf4, pfxf5, pfxf6, pfxf7, pfxf8, cc1, cc2, cc3, ccdef, ac1, ac2, ac3, ac4, ac5, ac6, ac7, ac8, sn1, sn2, sn3, sn4, sn5, sn6, sn7, sn8, sn9, sn10, sn11, sn12, sn13, sn14, sn15, snx, dn1, dn2, dn3, dn4, dn5, dn6, dn7, dn8, dn9, dn10, dn11, dn12, dn13, dn14, dn15, dnx, znx, aclac, accgpn, acdef

:ca6= (optional)

Conditioning action 6. This parameter specifies the sixth CA that can be applied to an incoming digit string.

Range: ign1, ign2, ign3, ign4, ign5, ign6, ign7, ign8, ign9, ign10, fpx, pfxa1, pfxa2, pfxa3, pfxa4, pfxa5, pfxa6, pfxa7, pfxa8, pfxb1, pfxb2, pfxb3, pfxb4, pfxb5, pfxb6, pfxb7, pfxb8, pfxc1, pfxc2, pfxc3, pfxc4, pfxc5, pfxc6, pfxc7, pfxc8, pfxd1, pfxd2, pfxd3, pfxd4, pfxd5, pfxd6, pfxd7, pfxd8, pfxe1, pfxe2, pfxe3, pfxe4, pfxe5, pfxe6, pfxe7, pfxe8, pfxf1, pfxf2, pfxf3, pfxf4, pfxf5, pfxf6, pfxf7, pfxf8, cc1, cc2, cc3, ccdef, ac1, ac2, ac3, ac4, ac5, ac6, ac7, ac8, sn1, sn2, sn3, sn4, sn5, sn6, sn7, sn8, sn9, sn10, sn11, sn12, sn13, sn14, sn15,

snx, dn1, dn2, dn3, dn4, dn5, dn6, dn7, dn8, dn9, dn10, dn11, dn12, dn13, dn14, dn15, dnx, znx, aclac, accgpn, acdef

:ca7= (optional)

Conditioning action 7. This parameter specifies the seventh CA that can be applied to an incoming digit string.

Range: ign1, ign2, ign3, ign4, ign5, ign6, ign7, ign8, ign9, ign10, fpfx, pfxa1, pfxa2, pfxa3, pfxa4, pfxa5, pfxa6, pfxa7, pfxa8, pfxb1, pfxb2, pfxb3, pfxb4, pfxb5, pfxb6, pfxb7, pfxb8, pfxc1, pfxc2, pfxc3, pfxc4, pfxc5, pfxc6, pfxc7, pfxc8, pfxd1, pfxd2, pfxd3, pfxd4, pfxd5, pfxd6, pfxd7, pfxd8, pfxe1, pfxe2, pfxe3, pfxe4, pfxe5, pfxe6, pfxe7, pfxe8, pfxf1, pfxf2, pfxf3, pfxf4, pfxf5, pfxf6, pfxf7, pfxf8, cc1, cc2, cc3, ccdef, ac1, ac2, ac3, ac4, ac5, ac6, ac7, ac8, sn1, sn2, sn3, sn4, sn5, sn6, sn7, sn8, sn9, sn10, sn11, sn12, sn13, sn14, sn15, snx, dn1, dn2, dn3, dn4, dn5, dn6, dn7, dn8, dn9, dn10, dn11, dn12, dn13, dn14, dn15, dnx, znx, aclac, accgpn, acdef

:ca8= (optional)

Conditioning action 8. This parameter specifies the eighth CA that can be applied to an incoming digit string.

Range: ign1, ign2, ign3, ign4, ign5, ign6, ign7, ign8, ign9, ign10, fpfx, pfxa1, pfxa2, pfxa3, pfxa4, pfxa5, pfxa6, pfxa7, pfxa8, pfxb1, pfxb2, pfxb3, pfxb4, pfxb5, pfxb6, pfxb7, pfxb8, pfxc1, pfxc2, pfxc3, pfxc4, pfxc5, pfxc6, pfxc7, pfxc8, pfxd1, pfxd2, pfxd3, pfxd4, pfxd5, pfxd6, pfxd7, pfxd8, pfxe1, pfxe2, pfxe3, pfxe4, pfxe5, pfxe6, pfxe7, pfxe8, pfxf1, pfxf2, pfxf3, pfxf4, pfxf5, pfxf6, pfxf7, pfxf8, cc1, cc2, cc3, ccdef, ac1, ac2, ac3, ac4, ac5, ac6, ac7, ac8, sn1, sn2, sn3, sn4, sn5, sn6, sn7, sn8, sn9, sn10, sn11, sn12, sn13, sn14, sn15, snx, dn1, dn2, dn3, dn4, dn5, dn6, dn7, dn8, dn9, dn10, dn11, dn12, dn13, dn14, dn15, dnx, znx, aclac, accgpn, acdef

:ca9= (optional)

Conditioning action 9. This parameter specifies the ninth CA that can be applied to an incoming digit string.

Range: ign1, ign2, ign3, ign4, ign5, ign6, ign7, ign8, ign9, ign10, fpfx, pfxa1, pfxa2, pfxa3, pfxa4, pfxa5, pfxa6, pfxa7, pfxa8, pfxb1, pfxb2, pfxb3, pfxb4, pfxb5, pfxb6, pfxb7, pfxb8, pfxc1, pfxc2, pfxc3, pfxc4, pfxc5, pfxc6, pfxc7, pfxc8, pfxd1, pfxd2, pfxd3, pfxd4, pfxd5, pfxd6, pfxd7, pfxd8, pfxe1, pfxe2, pfxe3, pfxe4, pfxe5, pfxe6, pfxe7, pfxe8, pfxf1, pfxf2, pfxf3, pfxf4, pfxf5, pfxf6, pfxf7, pfxf8, cc1, cc2, cc3, ccdef, ac1, ac2, ac3, ac4, ac5, ac6, ac7, ac8, sn1, sn2, sn3, sn4, sn5, sn6, sn7, sn8, sn9, sn10, sn11, sn12, sn13, sn14, sn15, snx, dn1, dn2, dn3, dn4, dn5, dn6, dn7, dn8, dn9, dn10, dn11, dn12, dn13, dn14, dn15, dnx, znx, aclac, accgpn, acdef

:fa1= (optional)

Formatting action 1. This parameter specifies the first FA that can be applied to the outgoing digit string.

Range: sn, dn, zn, ac, rn, sp, cc, fpx, pfxa, pfxb, pfxc, pfxd, pfxe, pfxf, dlma, dlmb, dlmc, asd, orig, grn, vmid, rnospodn, rnospoz, rnosposn, srfimsi, dlmd, dlme, dlmf, dlmg, dlmh, dlmi, dlmj, dlmk, dlml, dlmm, dlmn, dlmo, dlmp

Default: orig

:fa10= (optional)

Formatting action 10. This parameter specifies the tenth FA that can be applied to the outgoing digit string.

Range: sn, dn, zn, ac, rn, sp, cc, fpx, pfxa, pfxb, pfxc, pfxd, pfxe, pfxf, dlma, dlmb, dlmc, asd, orig, grn, vmid, srfimsi, dlmd, dlme, dlmf, dlmg, dlmh, dlmi, dlmj, dlmk, dlml, dlmm, dlmn, dlmo, dlmp, rnospodn, rnospoz, rnosposn

Default: orig

:fa11= (optional)

Formatting action 11. This parameter specifies the eleventh FA that can be applied to the outgoing digit string.

Range: sn, dn, zn, ac, rn, sp, cc, fpx, pfxa, pfxb, pfxc, pfxd, pfxe, pfxf, dlma, dlmb, dlmc, asd, orig, grn, vmid, srfimsi, dlmd, dlme, dlmf, dlmg, dlmh, dlmi, dlmj, dlmk, dlml, dlmm, dlmn, dlmo, dlmp, rnospodn, rnospoz, rnosposn

Default: orig

:fa12= (optional)

Formatting action 12. This parameter specifies the twelfth FA that can be applied to the outgoing digit string.

Range: sn, dn, zn, ac, rn, sp, cc, fpx, pfxa, pfxb, pfxc, pfxd, pfxe, pfxf, dlma, dlmb, dlmc, asd, orig, grn, vmid, srfimsi, dlmd, dlme, dlmf, dlmg, dlmh, dlmi, dlmj, dlmk, dlml, dlmm, dlmn, dlmo, dlmp, rnospodn, rnospoz, rnosposn

Default: orig

:fa2= (optional)

Formatting action 2. This parameter specifies the second FA that can be applied to the outgoing digit string.

Range: sn, dn, zn, ac, rn, sp, cc, fpx, pfxa, pfxb, pfxc, pfxd, pfxe, pfxf, dlma, dlmb, dlmc, asd, orig, grn, vmid, srfimsi, dlmd, dlme, dlmf, dlmg, dlmh, dlmi, dlmj, dlmk, dlml, dlmm, dlmn, dlmo, dlmp, rnospodn, rnospoz, rnosposn

Default: orig

:fa3= (optional)

Formatting action 3. This parameter specifies the third FA that can be applied to the outgoing digit string.

Range: sn, dn, zn, ac, rn, sp, cc, fpx, pfxa, pfxb, pfxc, pfxd, pfxe, pfxf, dlma, dlmb, dlmc, asd, orig, grn, vmid, srfimsi, dlmd, dlme, dlmf, dlmg, dlmh, dlmi, dlmj, dlmk, dlml, dlmm, dlmn, dlmo, dlmp, rnospodn, rnospoz, rnosposn

Default: orig

:fa4= (optional)

Formatting action 4. This parameter specifies the fourth FA that can be applied to the outgoing digit string.

Range: sn, dn, zn, ac, rn, sp, cc, fpx, pfxa, pfxb, pfxc, pfxd, pfxe, pfxf, dlma, dlmb, dlmc, asd, orig, grn, vmid, srfimsi, dlmd, dlme, dlmf, dlmg, dlmh, dlmi, dlmj, dlmk, dlml, dlmm, dlmn, dlmo, dlmp, rnospodn, rnospoz, rnosposn

Default: orig

:fa5= (optional)

Formatting action 5. This parameter specifies the fifth FA that can be applied to the outgoing digit string.

Range: sn, dn, zn, ac, rn, sp, cc, fpx, pfxa, pfxb, pfxc, pfxd, pfxe, pfxf, dlma, dlmb, dlmc, asd, orig, grn, vmid, srfimsi, dlmd, dlme, dlmf, dlmg, dlmh, dlmi, dlmj, dlmk, dlml, dlmm, dlmn, dlmo, dlmp, rnospodn, rnospoz, rnosposn

Default: orig

:fa6= (optional)

Formatting action 6. This parameter specifies the sixth FA that can be applied to the outgoing digit string.

Range: sn, dn, zn, ac, rn, sp, cc, fpx, pfxa, pfxb, pfxc, pfxd, pfxe, pfxf, dlma, dlmb, dlmc, asd, orig, grn, vmid, srfimsi, dlmd, dlme, dlmf, dlmg, dlmh, dlmi, dlmj, dlmk, dlml, dlmm, dlmn, dlmo, dlmp, rnospodn, rnospoz, rnosposn

Default: orig

:fa7= (optional)

Formatting action 7. This parameter specifies the seventh FA that can be applied to the outgoing digit string.

Range: sn, dn, zn, ac, rn, sp, cc, fpx, pfxa, pfxb, pfxc, pfxd, pfxe, pfxf, dlma, dlmb, dlmc, asd, orig, grn, vmid, srfimsi, dlmd, dlme, dlmf, dlmg, dlmh, dlmi, dlmj, dlmk, dlml, dlmm, dlmn, dlmo, dlmp, rnospodn, rnospoz, rnosposn

Default: orig

:fa8= (optional)

Formatting action 8. This parameter specifies the eighth FA that can be applied to the outgoing digit string.

Range: sn, dn, zn, ac, rn, sp, cc, fpx, pfxa, pfxb, pfxc, pfxd, pfxe, pfxf, dlma, dlmb, dlmc, asd, orig, grn, vmid, srfimsi, dlmd, dlme, dlmf, dlmg, dlmh, dlmi, dlmj, dlmk, dlml, dlmm, dlmn, dlmo, dlmp, rnospodn, rnospoz, rnosposn

Default: orig

:fa9= (optional)

Formatting action 9. This parameter specifies the ninth FA that can be applied to the outgoing digit string.

Range: sn, dn, zn, ac, rn, sp, cc, fpx, pfxa, pfxb, pfxc, pfxd, pfxe, pfxf, dlma, dlmb, dlmc, asd, orig, grn, vmid, srfimsi, dlmd, dlme, dlmf, dlmg, dlmh, dlmi, dlmj, dlmk, dlml, dlmm, dlmn, dlmo, dlmp, rnospodn, rnospoz, rnosposn

Default: orig

:ofnai= (optional)

Outgoing filter nature of address indicator. This parameter specifies the filter nature of address indicator (FNAI) class of the outgoing digit string.

Range: intl, natl, nai1, nai2, nai3, unkn, inc

intl — intl value provisioned in the **chg-npp-serv** command

natl — natl value provisioned in the **chg-npp-serv** command

nai1 — nai1 value provisioned in the **chg-npp-serv** command

nai2 — nai2 value provisioned in the **chg-npp-serv** command

nai3 — nai3 value provisioned in the **chg-npp-serv** command

unkn — unkn value provisioned in the **chg-npp-serv** command

inc — NAI of the incoming digit string

Default: inc

:sa1= (optional)

Service action 1. This parameter specifies the first SA that can be applied to an incoming digit string. SAs are service-specific.

Range: rtdbtrn, rtdbtsp, rtdbtrnsp, cdial, ccncchk, cdpnnp, cgpnp, cgpnpqrq, lacck, fwdscs, npnrls, nprelay, nprls, crp, snsngpn, fraudchk, pprelay, migrate, asdlkup, grnlkup, cgpnasdrq, cgpngrnrq, none

none — Deletes all of the SAs from the AS

:sa2= (optional)

Service action 2. This parameter specifies the second SA that can be applied to an incoming digit string.

SAs are service-specific.

Range: **rtdbtrn, rtdbtsp, rtdbtrnsp, cdial, ccncchk, cdpnnp, cgpnpnp, cgpnnprqd, lacck, fwdscs, npnrls, nprelay, nprls, crp, snsrgpn, fraudchk, pprelay, migrate, asdlkup, grnlkup, cgpnasdrqd, cgpngrnrqd, none**
none—Deletes **sa2** and any subsequent SAs from the AS.

:sa3= (optional)

Service action 3. This parameter specifies the third SA that can be applied to an incoming digit string. SAs are service-specific.

Range: **rtdbtrn, rtdbtsp, rtdbtrnsp, cdial, ccncchk, cdpnnp, cgpnpnp, cgpnnprqd, lacck, fwdscs, npnrls, nprelay, nprls, crp, snsrgpn, fraudchk, pprelay, migrate, asdlkup, grnlkup, cgpnasdrqd, cgpngrnrqd, none**
none—Deletes **sa3** and any subsequent SAs from the AS.

:sa4= (optional)

Service action 4. This parameter specifies the fourth SA that can be applied to an incoming digit string. SAs are service-specific.

Range: **rtdbtrn, rtdbtsp, rtdbtrnsp, cdial, ccncchk, cdpnnp, cgpnpnp, cgpnnprqd, lacck, fwdscs, npnrls, nprelay, nprls, crp, snsrgpn, fraudchk, pprelay, migrate, asdlkup, grnlkup, cgpnasdrqd, cgpngrnrqd, none**
none—Deletes **sa4** and any subsequent SAs from the AS.

:sa5= (optional)

Service action 5. This parameter specifies the fifth SA that can be applied to an incoming digit string. SAs are service-specific.

Range: **rtdbtrn, rtdbtsp, rtdbtrnsp, cdial, ccncchk, cdpnnp, cgpnpnp, cgpnnprqd, lacck, fwdscs, npnrls, nprelay, nprls, crp, snsrgpn, fraudchk, pprelay, migrate, asdlkup, grnlkup, cgpnasdrqd, cgpngrnrqd, none**
none—Deletes **sa5** and any subsequent SAs from the AS.

:sa6= (optional)

Service action 6. This parameter specifies the sixth SA that can be applied to an incoming digit string. SAs are service-specific.

Range: **rtdbtrn, rtdbtsp, rtdbtrnsp, cdial, ccncchk, cdpnnp, cgpnpnp, cgpnnprqd, lacck, fwdscs, npnrls, nprelay, nprls, crp, snsrgpn, fraudchk, pprelay, migrate, asdlkup, grnlkup, cgpnasdrqd, cgpngrnrqd, none**
none—Deletes **sa6** and any subsequent SAs from the AS.

:sa7= (optional)

Service action 7. This parameter specifies the seventh SA that can be applied to an incoming digit string. SAs are service-specific.

Range: **rtdbtrn, rtdbtsp, rtdbtrnsp, cdial, ccncchk, cdpnnp, cgpnpnp, cgpnnprqd, lacck, fwdscs, npnrls, nprelay, nprls, crp, snsrgpn, fraudchk, pprelay, migrate, asdlkup, grnlkup, cgpnasdrqd, cgpngrnrqd, none**
none—Deletes **sa7** and any subsequent SAs from the AS.

:sa8= (optional)

Service action 8. This parameter specifies the eighth SA that can be applied to an incoming digit string. SAs are service-specific.

Range: **rtdbtrn, rtdbtsp, rtdbtrnsp, cdial, ccncchk, cdpnnp, cgpnpnp, cgpnnprqd, lacck, fwdscs, npnrls, nprelay, nprls, crp, snsrgpn, fraudchk, pprelay, migrate, asdlkup, grnlkup, cgpnasdrqd, cgpngrnrqd, none**
none—Deletes **sa8** and any subsequent SAs from the AS.

Example

```

chg-npp-
as:asn=asn7:ca1=ign1:ca2=ac1:ca3=cc3:ca4=sn2:fa1=cc:fa2=sn:fa3=ac
chg-npp-as:asn=asn7:ca1=cc1:ca2=dn1:fa1=cc:fa2=dn

chg-npp-as:asn=asn1:ca1=znx:fa1=asd:sa1=cgpnasdrqd
chg-npp-as:asn=asn8:ca1=cc2:ca2=dnx:fa1=cc:fa2=rnospodn
chg-npp-as:asn=asn9:sa1=migrate:sa2=asdlkup

```

Dependencies

One of the following combinations of CA values must be specified for the AS:

- **znx**
- **cc, dn**
- **cc, ac, sn**

The FAs specified for the AS must contain the corresponding FA that a CA will populate or load.

The AS must contain a CA that can load or populate the specified FA.

The CA parameters must consist of sequential numbers, always including **ca1**; however, the parameters do not have to be entered into the command in sequential order.

NOTE: To change the value of a single CA within an AS, all of the ca parameters specified for the AS must be entered. Refer to the *Feature Manual - NPP* for additional information.

The SA parameters must be entered as sequential numbers, always including **sa1**; however, the parameters do not have to be entered into the command in sequential order. The SA with the highest precedence must be assigned as the value for **sa1**.

NOTE: To change the value of a single SA within an AS, all of the sa parameters specified for the AS must be entered. Refer to the *Feature Manual - NPP* for additional information.

The FA parameters must consist of sequential numbers, always including **fa1**; however, the parameters do not have to be entered into the command in sequential order.

NOTE: To change the value of a single FA within an AS, all of the fa parameters specified for the AS must be entered. Refer to the *Feature Manual - NPP* for additional information.

The CAs within an AS cannot condition more than 32 digits.

The AS cannot contain CAs that load or populate the same FA.

If the **caX=znx**, parameter is specified, then the **caX=ac*** and **caX=dnx** parameters cannot be specified. The **caX=ac*** parameter can be specified only once in the command. The **caX=cc*** parameter can be specified only once in the command. The **caX=dn*** parameter can be specified only once in the command. The **caX=sn*** parameter can be specified only once in the command.

The same value cannot be specified for the **fa X** parameters within an AS.

The AS cannot contain the following combinations of FAs:

- If the **faX=dn** parameter is specified, then **ac**, **sn**, and **zn** cannot be specified as values for the **faX** parameter.
- If the **faX=zn** parameter is specified, then **ac**, **cc**, **sn**, and **dn** cannot be specified as values for the **faX** parameter.

- If the **faX=sn** parameter is specified, then **zn** and **dn** cannot be specified as values for the **faX** parameter.
- If the **faX** parameter has a value of **rnospodn**, **rnosposn**, or **rnospozsn**, then **rn**, **sp**, **sn**, **dn**, or **zn** cannot be specified as values for the **faX** parameter.
- If the **faX** parameter has a value of **rnospodn**, **rnosposn**, or **rnospozsn**, then **rnospodn**, **rnosposn**, or **rnospozsn** cannot be specified as values for the **faX** parameter.

If specified, the filter prefix must be specified as the first CA in the sequence (the **ca1=fpx** parameter must be specified).

If specified, the **znx**, **snx**, and **dnx** CAs must be specified last in the CA sequence.

The same value cannot be specified for the **sa X** parameters within an AS.

If rules that reference an AS exist, then the AS cannot be changed.

Notes

Conditioning Action Value Definitions

- **ac1-ac8**—Stores the specified number of digits from the incoming digit string as the Area Code (AC)
- **acdef**—Stores the **stpopts:defncd** as the AC
- **aclac**—Stores the location area code from the location area information in IDP as the AC
- **cc1-cc3**—Stores the specified number of digits from the incoming digit string as the Country Code (CC)
- **ccdef**—Stores the **stpopts:defcc** value as the CC
- **dn1-dn15**—Stores the specified number of digits from the incoming digit string as the Dialed Number
- **dnx**—Stores the remaining digits in the digit string as the Dialed Number
- **fpx**—Stores the filter prefix
- **ign1-ign10**—Ignores the specified number of digits on the incoming digit string
- **pfxa1-pfxa8**—Stores the specified number of digits from the incoming digit string as Prefix A
- **pfxb1-pfxb8**—Stores the specified number of digits from the incoming digit string as Prefix B
- **pfxc1-pfxc8**—Stores the specified number of digits from the incoming digit string as Prefix C
- **pfxd1-pfxd8**—Stores the specified number of digits from the incoming digit string as Prefix D
- **pfxe1-pfxe8**—Stores the specified number of digits from the incoming digit string as Prefix E
- **pfxf1-pfxf8**—Stores the specified number of digits from the incoming digit string as Prefix F
- **sn1-sn15**—Stores the specified number of digits from the incoming digit string as the Subscriber Number
- **snx**—Stores the remaining digits in the digit string as the Subscriber Number

- **znx**—Stores the remaining digits in the digit string as the internationally formatted Dialed Number

Formatting Action Value Definitions

- **ac**—Area code
- **asd**—Additional subscriber data
- **cc**—Country code
- **dlma**—Delimiter A
- **dlmb**—Delimiter B
- **dlmc**—Delimiter C
- **dlmd**—Delimiter D
- **dlme**—Delimiter E
- **dlmf**—Delimiter F
- **dlmg**—Delimiter G
- **dlmh**—Delimiter H
- **dlmi**—Delimiter I
- **dlmj**—Delimiter J
- **dlmk**—Delimiter K
- **dlml**—Delimiter L
- **dlmm**—Delimiter M
- **dlmn**—Delimiter N
- **dlmo**—Delimiter O
- **dlmp**—Delimiter P
- **dn**—Dialed number
- **fpfx**—Filter prefix
- **grn**—Generic routing number
- **orig**—Incoming digit string
- **pfxa**—Prefix A
- **pfxb**—Prefix B
- **pfxc**—Prefix C
- **pfxd**—Prefix D
- **pfxe**—Prefix E
- **pfxf**—Prefix F
- **rn**—Routing number
- **rnospodn**—RN or SP value, if RN or SP was found in RTDB lookup; otherwise the Conditioning Action DN[1-15] or DNX populates this Formatting Action value.
- **rnospesn**—RN or SP value, if RN or SP was found in RTDB lookup; otherwise the Conditioning Action SN[1-15] or SNX populates this Formatting Action value.

- **rnospozn**—RN or SP value, if RN or SP was found in RTDB lookup; otherwise the Conditioning Action ZN[1-15] or ZNX populates this Formatting Action value.
- **sn**—Subscriber number
- **sp**—Service provider
- **srfimsi**—Signaling relay function international mobile subscriber identifier
- **vmid**—Voice mail identifier
- **zn**—Internationally formatted dialed number

Service Action Value Definitions: NPP Test Service

- **cdial**—Corrective dialing; checks for Formatting Action processing
- **rtdbtrn**—Looks for DN in RTDB; looks for RN in found DN
- **rtdbtrnsp**—Looks for DN in RTDB; looks for RN or SP in found DN
- **rtdbtsp**—Looks for DN in RTDB; looks for SP in found DN

Service Action Value Definitions: Prepaid IDP Relay

IDPRCDPN Service:

- **asdlkup**—Performs subscriber lookup on the CdPN to search for an individual entry. If a DN is not found, then the range database is searched. If a DN is found in an individual or range database with associated ASD, then the ASD is copied into the ASD FA. If ASD is not found, then the ASD FA has a value of **none**, and service execution continues.
- **cdial**—Performs corrective dialing
- **ccncchk**—Verifies the conditioned number is available under CSL CCNDC screening list
- **cdpnnp**—NPP SA shall do a RTDB lookup for the conditioned number and analyses success criteria. If RTDB lookup is successful (DN is found), entity-data shall be updated in RN or SP, as per the configured entity-type.
- **cgpnasdrqd**—Sets a flag in the IDPR feature to invoke the IDPRCGPN service if ASD is found. The outgoing CdPN is formatted in the IDPR feature logic once the IDPRCGPN service execution completes.
- **cgpngrrnqd**—Sets a flag in the IDPR feature to invoke the IDPRCGPN service if GRN is found. The outgoing CdPN is formatted in the IDPR feature logic once the IDPRCGPN service execution completes.
- **cgpnnprrqd**—Sets a flag in IDPR feature logic to indicate whether IDPRCGPN service is to be invoked
- **grnlkup**—Performs subscriber lookup on the CdPN to search for an individual entry. If a DN is not found, then the range database is searched. If a DN is found in an individual or range database with an associated GRN, then the GRN is copied into the GRN FA. If a GRN is not found, then the GRN FA has a value of **none**, and service execution continues.
- **lacck**—Formats the outgoing number by removing the digit and length prefixes from the outgoing digit string if LAC=AC (LAC:Location Area Code)

IDPRCGPN Service:

- **asdlkup**—Performs subscriber lookup on the CgPN to search for an individual entry. If a DN is not found, then the range database is searched. If a DN is found in an individual or range

database with associated ASD, then the ASD is copied into the ASD FA. If ASD is not found, then the ASD FA has a value of **none**, and service execution continues.

- **cdial**—Performs corrective dialing
- **cgpnnp**—NPP SA shall do a RTDB lookup for the conditioned number and analyses success criteria. If RTDB lookup is successful (DN is found), entity-data shall be updated in RN or SP, as per the configured entity-type.
- **grnlkup**—Performs subscriber lookup on the CgPN to search for an individual entry. If a DN is not found, then the range database is searched. If a DN is found in an individual or range database with an associated GRN, then the GRN is copied into the GRN FA. If a GRN is not found, then the GRN FA has a value of **none**, and service execution continues.

Service Action Value Definitions: TIF Number Portability

- **asdlkup**—Performs NP lookup on the CdPN; if ASD is found, the ASD Formatting Action is populated with the ASD value.
- **cdial**—Performs corrective dialing.
- **cgpnasdrqd**—Performs NP lookup on the CgPN; if ASD is found, the ASD Formatting Action is populated with the ASD value for formatting of the outgoing CdPN.
- **cgpngnrqd**—Performs NP lookup on the CgPN; if a GRN is found, the GRN Formatting Action is populated with the GRN value for formatting of the outgoing CdPN.
- **crp**—Performs an NP lookup on the CdPN and attempts to detect a circular route
- **grnlkup**—Performs NP lookup on the CdPN; if a GRN is found, the GRN Formatting Action is populated with the GRN value.
- **npnrls**—Performs an NP lookup on the CdPN and indicates release behavior on an unsuccessful lookup
- **nprelay**—Performs an NP lookup on the CdPN and indicates relay behavior
- **nprls**—Performs an NP lookup on the CdPN and indicates release behavior on a successful lookup

Service Action Value Definitions: TIF SCS Forwarding

- **asdlkup**—Performs subscriber lookup on the CdPN to search for an individual entry. If a DN is found with associated ASD, then lookup is successful. If a DN is not found, then the range database is searched. If a range entry is found with associated ASD, then lookup is successful.
- **cdial**—Performs corrective dialing.
- **cgpnasdrqd**—Performs an individual or range lookup on CgPN for ASD.
- **cgpngnrqd**—Performs an individual or range lookup on CgPN for GRN.
- **fwds**—Indicates that any relayed MSUs require database transport access (DTA) processing.
- **grnlkup**—Performs subscriber lookup on the CdPN to search for an individual entry. If a DN is found with an associated GRN, then lookup is successful. If a DN is not found, then the range database is searched. If a range entry is found with an associated GRN, then lookup is successful.

Service Action Value Definitions: TIF Simple Number Substitution

- **asdlkup**—Performs subscriber lookup on the CdPN to search for an individual entry. If a DN is found with associated ASD, then lookup is successful. If a DN is not found, then the range database is searched. If a range entry is found with associated ASD, then lookup is successful.
- **cdial**—Performs corrective dialing
- **cgpnasdrqd**—Performs an individual or range lookup on CgPN for ASD.
- **cgpngrndrqd**—Performs an individual or range lookup on CgPN for GRN.
- **grnlkup**—Performs subscriber lookup on the CdPN to search for an individual entry. If a DN is found with an associated GRN, then lookup is successful. If a DN is not found, then the range database is searched. If a range entry is found with an associated GRN, then lookup is successful.
- **snschgpn**—Updates the outgoing calling party number (CgPN)

Service Action Value Definitions: NPP for MO SMS features

MOSMSGCDPN Service

- **asdlkup**—Populates ASD FA with ASD data retrieved from DN RTDB lookup
- **cdial**—Performs corrective dialing
- **cdpnpn**—Performs CdPN RTDB lookup and determines whether it is ported
- **cgpnasdrqd**—Populates ASD FA with CgPN ASD data if available from CgPN RTDB lookup done by MOSMSGCGPN service
- **cgpngrnrqd**—Populates GRN FA with CgPN GRN data if available from CgPN RTDB lookup done by MOSMSGCGPN service
- **grnlkup**—Populates GRN FA with GRN data retrieved from DN RTDB lookup
- **pprelay**—Performs CdPN RTDB lookup and redirects message to prepaid subscriber if CdPN is prepaid

MOSMSGCGPN Service

- **asdlkup**—Populates ASD FA with ASD data retrieved from DN RTDB lookup
- **cdial**—Performs corrective dialing
- **fraudchk**—Performs CgPN RTDB lookup and discards message if the subscriber is fraudulent
- **grnlkup**—Populates GRN FA with GRN data retrieved from DN RTDB lookup
- **pprelay**—Performs CgPN RTDB lookup and redirects message to prepaid subscriber if CgPN is prepaid

MOSMSICGPN Service

- **asdlkup**—Populates ASD FA with ASD data retrieved from DN RTDB lookup
- **cdial**—Performs corrective dialing
- **grnlkup**—Populates GRN FA with GRN data retrieved from DN RTDB lookup

MOSMSICDPN Service

- **asdlkup**—Populates ASD FA with ASD data retrieved from DN RTDB lookup
- **cdial**—Performs corrective dialing
- **cdpnnp**—Performs CdPN RTDB lookup and analyses whether it is ported
- **cgpnasdrqd**—Populates ASD FA with CgPN ASD data if available from CgPN RTDB lookup done by MOSMSICGPN service
- **cgpngrnrqd**—Populates GRN FA with CgPN GRN data if available from CgPN RTDB lookup done by MOSMSICGPN service
- **grnlkup**—Populates GRN FA with GRN data retrieved from DN RTDB lookup
- **migrate**—Performs CdPN RTDB lookup and determines whether it is migrated

Output

```
chg-npp-as:asn=asn7:ca1=cc1:ca2=dn1:fa1=cc:fa2=dn
tekelecstp 09-02-19 13:57:06 EST EAGLE 40.1.0
NPP-AS table is (5 of 1024) 1% full.

CHG-NPP-AS: MASP A - COMPLTD
;
```

chg-npp-serv

Change NPP Service Data

Use this command to change a Numbering Plan Processor (NPP) service entry. An NPP service is any EAGLE 5 ISS feature that uses the NPP to assist with the processing of digit strings.

NOTE: This command can be used to enter values for the **dlma** - **dlmc** parameters. However, if these parameters have a value other than none in the **tifopts:dlma** - **dlmc** or **ttropts:dlma** - **dlmc** commands, then those values will overwrite the values that were entered for the parameters using the **chg-npp-serv** command for the TIF and IDPR services, respectively.

Keyword: **chg-npp-serv**

Related Commands: **chg-npp-srs**, **dlt-npp-srs**, **ent-npp-srs**, **rtrv-npp-serv**, **rtrv-npp-srs**

Command Class: Database Administration

Parameters

:srvn= (mandatory)

Service name. This parameter specifies the name of the NPP Service.

Range: **nppt**, **idprcdpn**, **idprcgp**, **tif**, **tif2**, **tif3**, **mosmsicgp**, **mosmsicdp**, **mosmsgcgp**, **mosmsgcdp**
nppt—NPP Test Service
idprcdpn—IDPRCDPN Service
idprcgp—IDPRCGPN Service
tif—TIF Service
tif2—TIF2 Service
tif3—TIF3 Service
mosmsicgp—MOSMSICGPN Service
mosmsicdp—MOSMSICDPN Service
mosmsgcgp—MOSMSGCGPN Service
mosmsgcdp—MOSMSGCDPN Service

:dlma= (optional)

This parameter specifies a delimiter that is used to format the outgoing dialed number.

- Range:** 1-16 digits, **none**
1-16 hexadecimal digits. Valid digits are **0-9, a-f, A-F**.
none—deletes the current value of the delimiter
- Default:** **none**
- :dlmb=** (optional)
This parameter specifies a delimiter that is used to format the outgoing dialed number.
- Range:** 1-16 digits, **none**
1-16 hexadecimal digits. Valid digits are **0-9, a-f, A-F**.
none—deletes the current value of the delimiter
- Default:** **none**
- :dlmc=** (optional)
This parameter specifies a delimiter that is used to format the outgoing dialed number.
- Range:** 1-16 digits, **none**
1-16 hexadecimal digits. Valid digits are **0-9, a-f, A-F**.
none—deletes the current value of the delimiter
- Default:** **none**
- :dlmd=** (optional)
This parameter specifies a delimiter that is used to format the outgoing dialed number.
- Range:** 1-16 digits, **none**
1-16 hexadecimal digits. Valid digits are **0-9, a-f, A-F**.
none—deletes the current value of the delimiter
- Default:** **none**
- :dlme=** (optional)
This parameter specifies a delimiter that is used to format the outgoing dialed number.
- Range:** 1-16 digits, **none**
1-16 hexadecimal digits. Valid digits are **0-9, a-f, A-F**.
none—deletes the current value of the delimiter
- Default:** **none**
- :dlmf=** (optional)
This parameter specifies a delimiter that is used to format the outgoing dialed number.
- Range:** 1-16 digits, **none**
1-16 hexadecimal digits. Valid digits are **0-9, a-f, A-F**.
none—deletes the current value of the delimiter
- Default:** **none**
- :dlmg=** (optional)
This parameter specifies a delimiter that is used to format the outgoing dialed number.
- Range:** 1-16 digits, **none**
1-16 hexadecimal digits. Valid digits are **0-9, a-f, A-F**.
none—deletes the current value of the delimiter
- Default:** **none**
- :dlmh=** (optional)
This parameter specifies a delimiter that is used to format the outgoing dialed number.
- Range:** 1-16 digits, **none**
1-16 hexadecimal digits. Valid digits are **0-9, a-f, A-F**.
none—deletes the current value of the delimiter
- Default:** **none**
- :dlmi=** (optional)
This parameter specifies a delimiter that is used to format the outgoing dialed number.

Range: 1-16 digits, **none**
1-16 hexadecimal digits. Valid digits are **0-9, a-f, A-F**.
none—deletes the current value of the delimiter
Default: **none**

:dlmj= (optional)

This parameter specifies a delimiter that is used to format the outgoing dialed number.

Range: 1-16 digits, **none**
1-16 hexadecimal digits. Valid digits are **0-9, a-f, A-F**.
none—deletes the current value of the delimiter
Default: **none**

:dlmk= (optional)

This parameter specifies a delimiter that is used to format the outgoing dialed number.

Range: 1-16 digits, **none**
1-16 hexadecimal digits. Valid digits are **0-9, a-f, A-F**.
none—deletes the current value of the delimiter
Default: **none**

:dlml= (optional)

This parameter specifies a delimiter that is used to format the outgoing dialed number.

Range: 1-16 digits, **none**
1-16 hexadecimal digits. Valid digits are **0-9, a-f, A-F**.
none—deletes the current value of the delimiter
Default: **none**

:dlmm= (optional)

This parameter specifies a delimiter that is used to format the outgoing dialed number.

Range: 1-16 digits, **none**
1-16 hexadecimal digits. Valid digits are **0-9, a-f, A-F**.
none—deletes the current value of the delimiter
Default: **none**

:dlmn= (optional)

This parameter specifies a delimiter that is used to format the outgoing dialed number.

Range: 1-16 digits, **none**
1-16 hexadecimal digits. Valid digits are **0-9, a-f, A-F**.
none—deletes the current value of the delimiter
Default: **none**

:dlmo= (optional)

This parameter specifies a delimiter that is used to format the outgoing dialed number.

Range: 1-16 digits, **none**
1-16 hexadecimal digits. Valid digits are **0-9, a-f, A-F**.
none—deletes the current value of the delimiter
Default: **none**

:dlmp= (optional)

This parameter specifies a delimiter that is used to format the outgoing dialed number.

Range: 1-16 digits, **none**
1-16 hexadecimal digits. Valid digits are **0-9, a-f, A-F**.
none—deletes the current value of the delimiter
Default: **none**

:intl= (optional)

International. This parameter maps an International FNAI class to the NAI of the incoming digit string.

Range: 0-255 **none**

none—A rule with an FNAI or OFNAI of **intl** cannot be provisioned

:nai1= (optional)

This parameter maps an NAI-1 FNAI class to the NAI of the incoming digit string.

Range: 0-255 **none**

none—A rule with an FNAI or OFNAI of **nai1** cannot be provisioned

:nai2= (optional)

This parameter maps an NAI-2 FNAI class to the NAI of the incoming digit string.

Range: 0-255 **none**

none—A rule with an FNAI or OFNAI of **nai2** cannot be provisioned

:nai3= (optional)

This parameter maps an NAI-3 FNAI class to the NAI of the incoming digit string.

Range: 0-255 **none**

none—A rule with an FNAI or OFNAI of **nai3** cannot be provisioned

:natl= (optional)

This parameter maps a National FNAI class to the NAI of the incoming digit string.

Range: 0-255 **none**

none—A rule with an FNAI or OFNAI of **natl** cannot be provisioned

:status= (optional)

This parameter specifies whether the service can be processed by the NPP.

Range: **off**, **on**

off — The service cannot be processed by the NPP.

on — The service can be processed by the NPP.

The **status=on** parameter must be specified before a service can be processed by the NPP.

Default: **off**

:unkn= (optional)

This parameter maps an Unknown FNAI class to the NAI of the incoming digit string.

Range: 0-255

Example

```
chg-npp-serv:svrn=nppt:status=on
```

```
chg-npp-serv:svrn=nppt:status=on:nai3=6:intl=15:natl=50
```

```
chg-npp-serv:svrn=nppt:status=on:nai3=6:intl=15
```

```
chg-npp-serv:svrn=tif3:status=on:nai3=6:intl=15
```

```
chg-npp-
```

```
serv:svrn=tif:dlma=1234567890abcdef:dlmb=aaaaabbbbcccccd:dlmc=10  
2030405
```

Dependencies

The service specified by the **svrn** parameter must have associated rules before the **status=on** parameter can be specified.

If the service specified by the **svrn** parameter references any NPP rules, then the **intl**, **natl**, **nai1**, **nai2**, and **nai3** parameters cannot have a value of **none**.

Output

```

chg-npp-serv:svn=nppt:status=on:nai3=6:intl=15:natl=50
tekelecstp 08-05-17 15:55:35 EAGLE 39.0.0
chg-npp-serv:svn=nppt:status=on:nai3=6:intl=15:natl=50
CHG-NPP-SERV: MASP A - COMPLTD
;

```

chg-npp-srs**Change a NPP Service Rule Set**

Use this command to change the Action Set (AS) that is associated with a Numbering Plan Processor (NPP) Rule. An NPP Rule is an association between a single NPP filter and an AS.

Keyword: **chg-npp-srs**

Related Commands: **chg-npp-as, dlt-npp-srs, ent-npp-as, ent-npp-srs, rtrv-npp-as, rtrv-npp-srs**

Command Class: Database Administration

Parameters

:asn= (mandatory)

Action set name. This parameter specifies the name of the AS.

Range: ayyyyyyyyy
1 alphabetic character followed by up to 9 alphanumeric characters

:fdl= (mandatory)

Filter digit length. This parameter specifies the number of digits on the incoming digit string that is filtered by the NPP.

Range: 1-32 *
*—multiple lengths of digit strings can be filtered

:fnai= (mandatory)

Filter nature of address indicator. This parameter specifies the filter Nature of Address Indicator (NAI) class.

Range: intl, natl, nai1, nai2, nai3, unkn
intl— filter messages with NAI=INTL
natl— filter messages with NAI=NATL
nai1— filter messages with NAI=NAI1
nai2— filter messages with NAI=NAI2
nai3— filter messages with NAI=NAI3
unkn— filter messages with NAI=UNKN
 The **chg-npp-serv** command is used to assign values to the various FNAI classes.

:fpfx= (mandatory)

Filter prefix. This parameter specifies the prefix used to filter incoming digit strings.

Range: 1-16 digits, *, ?
1 - 16 hexadecimal digits inclusive of single digit wildcard (?); or wildcard (*) matching the entire digit string; valid digits are ?, 0-9, a-f, A-F.

:svn= (mandatory)

Service name. This parameter specifies the name of the NPP Service.

Range: nppt, idprcdpn, idprcgpn, tif, tif2, tif3, mosmsicgpn, mosmsicdpn, mosmsgcgpn, mosmsgcdpn
nppt— NPP Test Service
idprcdpn— IDPRCDNP Service
idprcgpn— IDPRCGPN Service

tif — TIF Service
tif2 — TIF2 Service
tif3 — TIF3 Service
mosmsicgpn — MOSMSICGPN Service
mosmsicdpn — MOSMSICDPN Service
mosmsgcgpn — MOSMSGCGPN Service
mosmsgcdpn — MOSMSGCDPN Service

Example

chg-npp-srs:srvn=nppt:fpfx=a:fdl=16:fnai=intl:asn=asn3

Dependencies

The AS specified by the **asn** parameter must already exist in the NPP AS table.

The AS specified by the **asn** parameter cannot contain CAs that are not supported by the service specified by the **srvn** parameter.

The AS specified by the **asn** parameter cannot contain SAs that are not supported by the service specified by the **srvn** parameter.

The AS specified by the **asn** parameter cannot contain FAs that are not supported by the service specified by the **srvn** parameter.

The AS specified by the **asn** parameter cannot contain SAs that do not conform to the precedence order that is supported by the service specified by the **srvn** parameter.

The CAs in the AS specified by the **asn** parameter cannot condition more digits than allowed by the **fdl** parameter.

If the **fdl=*** parameter is specified, then the AS specified by the **asn** parameter must contain CAs that support variable digit string conditioning.

The NPP Rule that is specified by the **fdl**, **fnai**, **fpfx**, and **srvn** parameters must already exist in the NPP Rule table.

All of the features that are associated with the SAs in the AS that is specified by the **asn** parameter must be turned on before the AS can be used.

The SAs in the AS specified by the **asn** parameter cannot violate mutual exclusivity rules defined by the service specified by the **srvn** parameter. Refer to the Feature Manual for the feature of interest for additional information.

The AS specified by the **asn** parameter cannot contain an OFNAI class with a value of **none**.

At least one TIF feature must be turned on before an AS containing the **cdial** SA can be specified as a value for the **asn** parameter.

The TIF SCS Forwarding feature must be turned on before an AS containing the **fwdscls** SA can be specified as a value for the **asn** parameter.

The TIF Simple Number Substitution feature must be turned on before an AS containing the **snschgpn** SA can be specified as a value for the **asn** parameter.

The TIF Number Portability feature must be turned on before an AS containing the **crp**, **npnrsls**, **cgpnnpqrq**, **nprelay**, or **nprls** SA can be specified as a value for the **asn** parameter.

The IDPR ASD feature must be enabled before an AS containing the **asdlkup** or **cgpnasdrqd** SA can be specified as a value for the **asn** parameter with the IDPRCDPN or IDPRCGPN service.

The IDPR GRN feature must be enabled before an AS containing the **grnlkup** or **cgpngnrqrq** SA can be specified as a value for the **asn** parameter with the IDPRCDPN or IDPRCGPN service.

An AS containing the **asdlkup** and **cgpnasdrqd** SAs cannot be specified as a value for the **asn** parameter.

An AS containing the **grnlkup** and **cgpngrnrqd** SAs cannot be specified as a value for the **asn** parameter.

The TIF ASD feature must be enabled before an AS containing the **asdlkup** or **cgpnasdrqd** SAs can be specified as value for the **asn** parameter with the TIF services.

The TIF GRN feature must be enabled before an AS containing the **grnlkup** or **cgpngrnrqd** SAs can be specified as a value for the **asn** parameter with the TIF services.

The MO SMS ASD feature must be enabled before an AS containing the **asdlkup** or **cgpnasdrqd** SA can be specified as a value for the **asn** parameter with the MOSMSGCDPN, MOSMSGCGPN, MOSMSICDPN, or MOSMSICGPN service.

The MO SMS GRN feature must be enabled before the an AS containing the **cgpngrnrqd** or **grnlkup** SAs can be specified as a value for the **asn** parameter with the MOSMSGCDPN, MOSMSGCGPN, MOSMSICDPN, or MOSMSICGPN service.

If a rule contains an FPFx with a wildcard value, then the rule cannot also contain an AS where the **fpfx** CA is specified.

The value specified for the **fpfx** parameter cannot contain a **?** as the final character.

The Prepaid SMS Intercept Ph1 feature must be enabled before an AS containing the **pprelay** SA can be specified as a value for the **asn** parameter with the MOSMSGCDPN or MOSMSGCGPN service.

The Portability Check for MO SMS feature must be enabled before an AS containing the **fraudchk** SA can be specified as a value for the **asn** parameter with the MOSMSGCGPN service.

The MO SMS IS41-to-GSM Migration feature must be enabled before an AS containing the **migrate** SA can be specified as a value for the **asn** parameter with the MOSMSICDPN service.

The MO-based IS41 SMS NP feature must be enabled before an AS containing the **cdpnp** SA can be specified as a value for the **asn** parameter with the MOSMSICDPN service.

The MO-based GSM SMS NP feature must be enabled an AS containng the **cdpnp** SA can be specified as a value for the **asn** parameter with the MOSMSGCDPN service.

Notes

None

Output

```
chg-npp-srs:svrn=nppt:fpfx=a:fdl=16:fnai=intl:asn=asn3
tekelecstp 09-02-19 13:58:06 EST EAGLE 40.1.0
NPP-SRS table is (1 of 8192) 1% full.

CHG-NPP-SRS: MASP A - COMPLTD
;
```

chg-oap-config

Change OAP Configuration

Use this command to configure the EAGLE 5 ISS database with the OAP configuration information. This information is sent to the specified OAP with the **act-oap-config** command.

NOTE: This command enables you to configure the OAP from the EAGLE 5 ISS terminal. You should no longer perform this function from a terminal connected to the OAP.

Keyword: chg-oap-config

Related Commands: chg-lnp-serv, chg-sid, dlt-lnp-serv, ent-lnp-serv, rtrv-lnp-serv, rtrv-oap-config, rtrv-sid

Command Class: Database Administration

Parameters

NOTE: You must provision the EAGLE 5 ISS database with valid information for the SEAS feature if this feature is turned on (as shown by SEAS=on in the output of the rtrv-feat command). The information must be provisioned to clear the checksum mismatch alarm (UAM 0364).

NOTE: The following parameters are no longer available: lsms, mpssel, mssel, mnsap, snsap, spsel, sssel

:aipaddr= (optional)

The IP address of OAP A. This is a TCP/IP address expressed in standard dot notation. IP addresses consist of the system's network number and the machine's unique host number. A sample IP address is **192.126.100.5**, where **192.126.100** is the network number and **5** is the machine's host number. If you are unsure of your IP address, check with your Information Services department.

Range: **1-223, 0-255**

4 numbers separated by dots

1-223—first number

0-255—the other three numbers

:aname= (optional)

The name assigned to OAP A.

This parameter is mandatory for SEAS.

Range: *xzzzzzzzzzzzz*

1 alphabetic character followed by 1 to 13 alphanumeric characters.

The value must be enclosed in double quotation marks (" "); for example,

aname="tekelec-10".

:anmask= (optional)

The netmask for OAP A. If you are not sure that your network requires this configuration, check with your Information Services department.

Depending on your network configuration, this parameter may be mandatory for SEAS.

Range: 4 numbers separated by dots, with each number in the range of **0-255**.

:arouter= (optional)

The IP address of the default router assigned to OAP A. This is a TCP/IP address expressed in standard "dot notation." IP addresses consist of the system's network number and the machine's unique host number. A sample IP address is **192.126.100.5**, where **192.126.100** is the network number and **5** is the machine's host number. If you are not sure if your network requires this configuration, check with your Information Services department.

Depending on your network configuration, this parameter may be mandatory for SEAS.

Range: **1-223, 0-255**

4 numbers separated by dots

1-223—first number

0-255—the other three numbers

:bipaddr= (optional)

The IP address of OAP B. This is a TCP/IP address expressed in standard dot notation. IP addresses consist of the system's network number and the machine's unique host number. A sample IP address is **192.126.100.5**, where **192.126.100** is the network number and **5** is the machine's host number. If you are unsure of your IP address, check with your Information Services department.

Range: **1-223, 0-255**

4 numbers separated by dots

1-223—first number

0-255—the other three numbers

:bname= (optional)

The name assigned to OAP B.

This parameter is mandatory for SEAS.

Range: *xzzzzzzzzzzzz*

1 alphabetic character followed by 1 to 13 alphanumeric characters.

The value must be enclosed in double quotation marks (" "), for example,

bname="tekelec-10" .

:bnmask= (optional)

The netmask for OAP B. If you are not sure that your network requires this configuration, check with your Information Services department.

Depending on your network configuration, this parameter may be mandatory for SEAS.

Range: **1-223, 0-255**

4 numbers separated by dots

1-223—first number

0-255—the other three numbers

:brouter= (optional)

The IP address of the default router assigned to OAP B. This is a TCP/IP address expressed in standard dot notation. IP addresses consist of the system's network number and the machine's unique host number. A sample IP address is **192.126.100.5**, where **192.126.100** is the network number and 5 is the machine's host number. If you are not sure that your network requires this configuration, check with your Information Services department.

Depending on your network configuration, this parameter may be mandatory for SEAS.

Range: 4 numbers separated by dots, with each number in the range of **0-255**.

:cfg= (optional)

The number of OAPs being configured.

This parameter is mandatory for SEAS.

Range: **sngl, dual**

sngl— OAP A

dual— OAP A and OAP B

:mpsel= (optional)

The presentation selector of the main LSMS.

This parameter is mandatory for LNP if **lsms=main**.

Range: *xyyy*

1-4 alphanumeric characters.

The value must be enclosed in double quotation marks (" ").

:mssel= (optional)

The session selector of the main LSMS.

This parameter is mandatory for LNP if **lsms=main**.

Range: *xyyy*

1-4 alphanumeric characters.

The value must be enclosed in double quotation marks (" ").

:seaccli= (optional)

The common language location identifier (CLLI) of the SEAC the OAP is connecting to.

This parameter is mandatory for SEAS.

Range: ayyyyyyyyyy
1 alphabetic character followed by 1 to 10 alphanumeric characters.

:spsel= (optional)
The presentation selector of the shadow LSMS. The value is enclosed in quotes (" ").
This parameter is mandatory for LNP if **lsms=shadow**.

Range: xyyy
1 to 4 alphanumeric characters.

:sssel= (optional)
The session selector of the shadow LSMS.
This parameter is mandatory for LNP if **lsms=shadow**.

Range: xyyy
1-4 alphanumeric characters.
The value must be enclosed in double quotation marks.

:x25mode= (optional)
The mode of the x.25 link to the SEAC.
This parameter is mandatory for SEAS.

Range: dte, dce

:x25ps= (optional)
The x.25 packet size for the link to the SEAC.
This parameter is mandatory for SEAS.

Range: 7, 8

Example

```
chg-oap-config:aname="tekelec-xx":bname="tekelec-xx"
chg-oap-config:aipaddr=128.132.64.15:bipaddr=128.132.64.16
```

Dependencies

At least one parameter must be specified each time the **chg-oap-config** command is entered.

The **chg-oap-config** command allows one or several parameters to be specified at a time. If the required information for a feature has already been provisioned in the EAGLE 5 ISS database, all of the parameters for that feature do not need to be specified when you make a change. It is mandatory, however, that the configuration data in the EAGLE 5 ISS and the OAP database match. The EAGLE 5 ISS generates an alarm (UAM 0364) if the EAGLE 5 ISS database is not provisioned with the same information as the OAP.

To keep OAP parameters in sync with the EAGLE 5 ISS, a checksum is created using all of the OAP configuration data stored on the EAGLE 5 ISS. The OAP also calculates this checksum based on the data it has. The OAP returns this checksum every five seconds. The EAGLE 5 ISS compares the checksums, and generates the following alarm within ten seconds of any mismatch:

```
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
```

```
* nnnn.0364 * OAP A Configuration data checksum mismatch
```

The alarm is cleared when a maintenance poll returns a checksum that matches the EAGLE 5 ISS' checksum, indicating that the databases are back in sync. The EAGLE 5 ISS clears the alarm within five seconds. The following UAM clears the alarm:

```
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
```

```
nnnn.0365 OAP A Configuration data checksum alarm cleared
```

In addition to parameters configured with the **chg-oap-config** command, the EAGLE 5 ISS' Site ID (:clli) is also included in the checksum. See the **chg-sid** command for more information.

The SEAS feature must be turned on before the **seaccli** parameter can be specified.

The SEAS feature must be turned on before the **x25ps** parameter can be specified.

The SEAS feature must be turned on before the **x25mode** parameter can be specified.

Notes

None

Output

```
chg-oap-config:aipaddr=128.132.64.15:bipaddr=128.132.64.16
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
CHG_OAP_CONFIG: MASP A - COMPLTD
;
```

chg-pid

Change Password ID

Use this command to change your password.

When this command is executed, you are prompted to enter your current password. This prevents anyone but you from changing your password.

Keyword: chg-pid

Related Commands: act-user, chg-secu-dflt, chg-user, dact-user, dlt-user, ent-user, login, logout, rept-stat-user, rtrv-secu-dflt, rtrv-secu-user, rtrv-user

Command Class: Basic

Parameters

This command has no parameters.

Example

chg-pid

Dependencies

Passwords cannot be created or modified from a telnet terminal (terminal IDs 17-40) without the OA&M IP Security Enhancements feature turned on.

Use the following rules for creating passwords:

- A new password cannot contain more than 12 characters.
- A new password must contain at least the number of characters that is specified on the **minlen** parameter of the **chg-secu-dflt** command.
- A new password must contain at least the number of alphabetic (**alpha** parameter), numeric (**num** parameter), and punctuation (**punc** parameter) characters that is specified on the **chg-secu-dflt** command.
- A new password cannot contain the associated user ID.

Notes

When a new system is shipped, both the user ID and password are set to the system. Change these immediately to ensure system security.

Output**chg-pid**

```

    rlgncxa03w 04-01-07 09:10:41 EST EAGLE 31.3.0
    CHG-PID: MASP A - COMPLTD
;

```

chg-ppsopts**Change Prepaid SMS Options**

Use this command to enter Prepaid Short Message Service options (PPSOPTS) in the database. This command updates the PPSOPTS Table with entries that correspond to Intelligent Network (IN) platforms.

NOTE: The Prepaid SMS Intercept Ph1 (PPSMS) feature must be turned on before this command can be specified.

Keyword: chg-ppsopts

Related Commands: rtrv-ppsopts

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

NOTE: If the CgPA GTA matches the value of the gta, gta1, gta2, or gta3 parameter during message screening, then the message falls through to GTT instead of receiving PPSMS screening.

:bpartychk= (optional)

MO SMS B-Party PPSMS Check. This parameter specifies whether a prepaid check on the B-Party is performed on an incoming MO SMS message.

Range: off, on

off — Prepaid Check on B-Party is not performed

on — Prepaid Check on B-Party is performed

Default: No change to current value

System

Default: off

:gta= (optional)

Global title address. This parameter specifies the entity address for an IN platform and determines whether an incoming message receives PPSMS screening.

Range: 1-15 digits

Valid digits are **0-9, A-F, a-f**.

Default: No change to current value

:gta1= (optional)

Global title address. This parameter specifies the entity address for an IN platform and determines whether an incoming message receives PPSMS screening.

Range: 1-15 digits

Valid digits are **0-9, A-F, a-f**.

Default: No change to current value.

:gta2= (optional)

Global title address. This parameter specifies the entity address for an IN platform and determines whether an incoming message receives PPSMS screening.

Range: 1-15 digits
Valid digits are **0-9, A-F, a-f**.
Default: No change to current value.

:gta3= (optional)

Global title address. This parameter specifies the entity address for an IN platform and determines whether an incoming message receives PPSMS screening.

Range: 1-15 digits
Valid digits are **0-9, A-F, a-f**.
Default: No change to current value.

:ngta= (optional)

New global title address. This parameter specifies an entity address that replaces an existing entity address for an IN platform.

Range: 1-15 digits, **none**
Valid digits are **0-9, A-F, a-f**.
none—Deletes the current value.
Default: No change to current value.

:pc= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: **pca**

Range: **p-, 000-255, none**
Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).
prefix—**p-**
When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.
When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid for *ni* = **001-005**.
When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.
Enter **none** to delete the point code.
The point code **000-000-000** is not a valid point code.

Default: No change to current value.

:pci= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255, none**
Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).
prefix—**s-**
zone—**0-7**
area—**000-255**
id—**0-7**
Enter **none** to delete the point code.
The point code **0-000-0** is not a valid point code.
Default: No change to current value.

:pcn= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code

option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-**, **0-16383**, **aa-zz**, **none**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

Enter **none** to delete the point code.

Default: No change to current value.

:ppt= (optional)

Prepaid portability type. This parameter specifies the IN platform where the incoming message is sent.

This parameter is mandatory if the **pc**, **ri**, or **setid** parameter is specified.

Range: **1-32**

:ri= (optional)

Routing indicator. This parameter specifies the IN platform routing indicator.

Range: **gt**, **ssn**

gt—Routes on the GT value.

ssn—Routes on the SSN value.

Default: No change to current value.

:setid= (optional)

Set ID. This parameter specifies the MAP set ID (if the **ri=ssn** parameter is specified) or the MRN set ID (if the **ri=gt** parameter is specified) that is used by a loadsharing IN platform.

The Flexible GTT Load Sharing (FGTTLS) feature must be enabled before this parameter can be specified. If the FGTTLS feature is not enabled, lookup is performed in the default set of the MAP table or MRN table.

Range: **1 - 36000**, **none**, **dflt**

1 - 36000, **none**, **dflt**—MAP Table

1 - 3000—MRN table

none—Lookup is not performed. This value applies only to the MRN table.

dflt—Lookup is performed in the default MAP set or MRN set.

Default: No change to current value.

:ssn= (optional)

Subsystem number

Range: **2-255**, **none**

Default: **none**

Example

The following command provisions a single GTA in the PPSOPTS table.

chg-ppsopts:gta=1234

The following command provisions four GTAs in the PPSOPTS table.

chg-ppsopts:gta=1101:gta1=1102:gta2=1103:gta3=1104

The following command replaces an existing GTA with a new GTA.

chg-ppsopts:gta=1101:ngta=4567

The following command deletes a specified GTA from the PPSOPTS table.

chg-ppsopts:gta=1102:ngta=none

The following command deletes the pc, ri, and setid values for a specified IN platform.

chg-ppsopts:ppt=1:pci=none

The following command provisions a loadsharing set for a specified IN platform.

chg-ppsopts:ppt=2:setid=2

The following example provisions point code, routing indicator, and set ID values for a specified IN platform and loadsharing set.

chg-ppsopts:ppt=1:pci=1-1-1:ri=gt:setid=1

The following command provisions the prepaid check on B-Party.

chg-ppsopts:bpartychk=on

The following example provisions ANSI point code, routing indicator, and set ID values for a specified IN platform and loadsharing set.

chg-ppsopts:ppt=2:pca=2-2-1:ri=ssn:setid=4

Dependencies

At least one parameter must be specified.

The PPSMS feature must be turned on before this command can be entered.

If the **ngta** parameter is specified, then the **gta** parameter must be specified.

The **gta**, **gta1**, **gta2**, and **gta3** parameters cannot have a value of **none**.

If the **ngta** parameter is specified, the **gta** parameter value must already exist in the database.

The **ngta** parameter value cannot already exist in the database.

The value specified for the for the **pc**, **pca**, **pci**, or **pcn** parameter cannot be the same as the STP True Point Code.

The value specified for the **pc**, **pca**, **pci**, or **pcn** parameter cannot be the same as the STP Capability Point Code.

If the **pc**, **ri**, **ssn**, or **setid** parameter is specified, then the **ppt** parameter must be specified.

If the **gta1**, **gta2**, or **gta3** parameter is specified, then the **ngta** parameter cannot be specified.

The Flexible GTT Load Sharing (FGTTLS) feature must be enabled before the **setid** parameter can be specified.

If the **ri=gt** parameter is specified, then the value of the **setid** parameter cannot exceed the value of the maximum MRN set ID.

The value specified for the **pc**, **pca**, **pci**, or **pcn** parameter must already exist in the Routing Indicator table.

The value of the **gta**, **gta1**, **gta2**, or **gta3** parameter cannot already exist in the database unless the **ngta** parameter is specified.

The **pc/pca/pci/pcn** parameter and the **ri** parameter must be specified together in the command, or a value of **none** must be specified for the **pc/pca/pci/pcn** parameter.

The **gta**, **gta1**, **gta2**, and **gta3** parameters cannot have the same value.

A maximum of 32 GTA values (for 32 IN platforms) can be defined in the database.

If the Flexible GTT Load Sharing (FGTTLS) feature is enabled, and if the **ri=ssn** parameter is specified, then the values specified for the **pc/pca/pci/pcn**, and **ssn** parameters must exist in the MAP table in the MAP set specified by the **setid** parameter, or in the default MAP set if the **setid** parameter is not specified.

If the **ri=gt** parameter is specified, then the value specified for the **pc**, **pca**, **pci**, or **pcn** parameter must exist in the MRN table.

If the **ri=ssn** parameter is specified, then the **setid=none** parameter cannot be specified.

The **pc/pca/pci/pcn**, **ri**, **setid**, and **ssn** parameters must be specified before the **ppt** parameter can be specified.

The **pc**, **pca**, **pci**, or **pcn** parameter must be provisioned for the prepaid type specified by the **ppt** parameter before the **setid** parameter can be specified.

If a value of **none** is specified for the **pc**, **pca**, **pci**, or **pcn** parameter, then the **ri** or **setid** parameter cannot be specified.

If the Flexible GTT Load Sharing (FGTTLS) feature is not enabled, and if the **ri=ssn** parameter is specified, then the value specified for the **pc**, **pca**, **pci**, or **pcn** parameter must exist in the default MAP set of the MAP table.

The value specified for the **pc/pca/pci/pcn** parameter cannot be associated with a proxy point code.

If the **ssn** parameter is specified, then the **pc/pca/pci/pcn** parameter must be specified.

Notes

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes.

The GTA digits are used during message screening to determine whether an incoming message should receive PPSMS screening. If the CgPA GTA matches the value of any of the GTA parameters, then the message falls through to GTT instead of receiving PPSMS screening.

The point code and routing indicator values (the **pc**, **pca**, **pci**, **pcn**, and **ri** parameters) are used to route messages from prepaid subscribers to the correct IN for credit checking.

Output

```
chg-ppsopts:ppt=1:pci=1-1-1:ri=gt:setid=1
tekelecstp 06-06-25 09:04:14 EST EAGLE 37.0.0
CHG-PPSOPTS: MASP A - COMPLTD
;
```

chg-prefix

Change Prefix

Use this command to enter the name of a feature, the value of a prefix used by the feature, and a prefix number that is used to refer to the prefix from another table.

Keyword: **chg-prefix**

Related Commands: **dlt-prefix**, **rtrv-ctrl-feat**, **rtrv-prefix**

Command Class: Database Administration

Parameters

:feature= (mandatory)

Feature Name. This parameter specifies the name of an enabled controlled feature that is supported by this command. The parameter value must match the feature name as it is displayed in the **rtrv-ctrl-feat** command output.

Range: *aaaaaaaaaaaaaaaaaaaaaaaa*

1 alphabetic character and up to 24 optional alphanumeric characters and spaces, enclosed in double quotation marks.

The parameter value is not case-sensitive; upper case or lower case or both can be entered.

Part or all of the feature name can be entered. If part of the feature name is specified, the entry must start with the first letter of the name, and must contain enough of the name to uniquely identify the feature. For example, there are two feature names that

begin with “GSM MAP.” Enough additional characters to identify which GSM MAP feature is being entered (at least “GSM MAP SR” to identify the “GSM MAP SRI Redirect” feature). This command supports the following controlled features:

- GSM MAP SRI Redirect
- ISUP NP for EPAP

:prefix= (mandatory)

Prefix Value. Prefix table entries for the following features:

- GSM MAP SRI Redirect
- ISUP NP with EPAP

Range: 1-15 digits
1-15 hexadecimal digits; valid digits are **0-9, a-f, A-F**.

Default: Current value

:prefixnum= (mandatory)

Prefix Number. The prefix number identifies the prefix value to use for the specified feature name.

Range: 1-7
1-3 for GSM MAP SRI Redirect feature prefix values
1-5 for ISUP NP with EPAP feature prefix values
6 for the ISUP NP with EPAP feature Insertion Country Code
7 for the ISUP NP with EPAP feature Deletion Condition value

Default: Current value

Example

Define a prefix with prefix number 1 for the ISUP NP with EPAP feature.

chg-prefix:feature="isup np with epap":prefix=1004:prefixnum=1

Define a prefix with prefix number 2 and specify part of the GSM MAP SRI Redirect feature name.

chg-prefix:feature="GSM MAP SRI":prefix=104:prefixnum=2

Dependencies

The specified feature name value (**feature** parameter) must be enclosed in double quotation marks (" ").

The G-Port feature must be turned on before a prefix can be defined for the GSM MAP SRI Redirect feature.

The GSM MAP SRI Redirect feature must be enabled before a GSM MAP SRI Redirect prefix can be defined.

The ISUP NP with EPAP feature must be enabled before an ISUP NP with EPAP prefix can be defined.

The specified prefix value must contain a number of digits that is equal to or greater than the minimum number of digits required by the specified feature.

The specified prefix value must contain a number of digits that is equal to or less than the maximum number of digits required by the specified feature.

The prefix value **none** is not valid for GSM MAP SRI Redirect prefixes.

The specified prefix number (**prefixnum**) must be valid for the specified feature.

The maximum number of prefixes that can be defined is:

- 3 for the GSM MAP SRI Redirect feature

- 5 values, 1 Insertion Country Code, and 1 Deletion Condition for the ISUP NP with EPAP feature

The specified feature name must be the name of an enabled controlled feature as it is displayed in the **rtrv-ctrl-feat** command output; The specified feature must be one of the following features that are supported by this command:


- GSM MAP SRI Redirect
- ISUP NP for EPAP

The FEATPFX table cannot be full when a new entry is added.

Notes

The Prefix table contains different groups of entries based on the features that are turned on. For the GSM MAP SRI Redirect for Serving HLR feature, the entries are referenced by the VendID table, based on a Vendor Number matching a Prefix Number. For the ISUP NP with EPAP feature, the entries are referenced by the SubnetID table, based on a Subnet Number matching a Prefix Number. The Prefix table for the ISUP NP with EPAP feature also reserves Prefix Number 6 for the Insertion Country Code value, and reserves Prefix Number 7 for the Deletion Condition value. Figure 5-8 illustrates the references to the Prefix table.

Figure 5-8. Prefix Table References

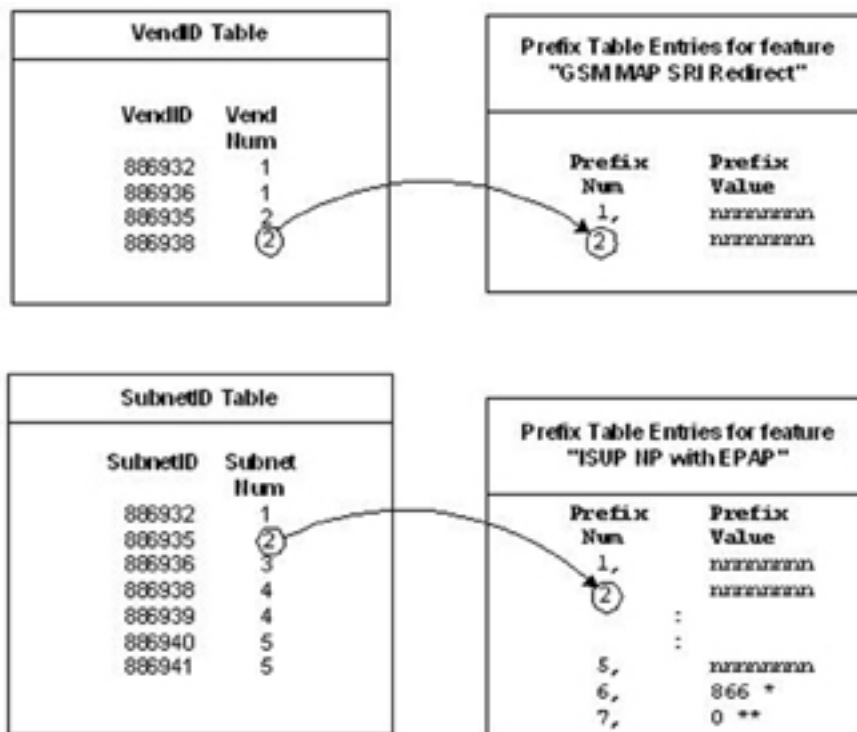

* Reserved for the ISUP NP with EPAP feature Insertion Country Code value

** Reserved for the ISUP NP with EPAP feature Deletion Condition value

For the ISUP NP with EPAP feature:

- When the Insertion Country Code (prefix number 6) is defined, the following information message appears:

ISUP NP with EPAP, Insertion Country Code value is now defined

- When the Deletion Condition (prefix number 7) is defined, the following information message appears:
ISUP NP with EPAP, Deletion Condition value is now defined

Output

chg-prefix:feature="isup np with epap":prefix=1004:prefixnum=1

```
rlghncxa03w 04-09-20 09:04:14 EST EAGLE 31.11.0
CHG-PREFIX: MASP A - COMPLTD
```

;

chg-rte

Change Route

Use this command to change the “cost,” or priority of a route. The cost is based on whether this route is first choice, second choice, and so on. Prioritize routes in such a way that the most direct route (fewest intermediate signaling points) is highest priority.

Keyword: chg-rte

Related Commands: chg-dstn, dlt-dstn, dlt-rte, ent-dstn, ent-rte, rtrv-dstn, rtrv-rte

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:dpc= (mandatory)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: dpca

Range: p-, 000-255, *

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

The asterisk value (*) is not valid for the *ni* subfield.

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001–005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006–255.

The point code 000-000-000 is not a valid point code.

:dpc/dpca/dpci/dpcn/dpcn24= (mandatory)

Destination point code.

:dpci= (mandatory)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: s-, p-, ps-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps-

zone—0-7

area—000-255

id—**0-7**

The point code **0-000-0** is not a valid point code.

:dpcn= (mandatory)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:dpcn24= (mandatory)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* subfield indicates a private point code.

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:lsn= (mandatory)

Linkset name. This parameter specifies the name of the linkset associated with the route. The linkset name must be unique.

Range: *ayyyyyyyyy*
1 alphabetic character followed by 9 alphanumeric characters

:nlsn= (optional)

New linkset name. This parameter specifies the new linkset name associated with the route.

Range: *ayyyyyyyyy*
1 alphabetic character followed by 9 alphanumeric characters

Default: The current value

:rc= (optional)

The relative cost (priority) for this route. Zero (**0**) is the highest priority, **99** the lowest.

Range: **0-99**

Default: The current value

Example

chg-rte:lsn=rlgh03:rc=0:dpc=244-003-001

chg-rte:dpc=25-*-*:lsn=myls:rc=10

The following example changes route for dpcn 4085-aa using linkset e1m2itun to relative cost of 30:

chg-rte:dpcn=4085-aa:lsn=e1m2itun:rc=30

The following example changes route for dpcn2410-100-14 using linkset we123624 to a relative cost of 25:

chg-rte:dpcn24=10-100-14:lsn=we123624:rc=25

The following example changes route for private point code dpcp-1-1-1 using linkset we123642 to relative cost of 50:

chg-rte:dpc=p-1-1-1:lsn=we123642:rc=50

The following example changes route for spare point code dpcns-4085-aa using linkset e1m2itun to relative cost of 30:

chg-rte:dpc=s-4085-aa:lsn=e1m2itun:rc=30

The following example changes route for private point code dpcn24p-1-100-1 using linkset we123624 to relative cost of 25:

chg-rte:dpcn24=p-1-100-1:lsn=we123624:rc=25

The following example changes route for private and spare point code dpcips-1-104-1 using linkset e1m2itui to relative cost of 30:

chg-rte:dpci=ps-1-104-1:lsn=e1m2itui:rc=30

Dependencies

No more than two linksets can be assigned the same relative cost (**rc**) value.

If the **ipgwapc=yes** parameter is specified, then the associated **dpc/dpca/dpci/dpcn/dpcn24** parameter cannot have a cluster route assigned.

The same value of the **rc** parameter cannot be specified for linksets destined for X.215 destinations.

If the identity of a route is being changed because of a change in the linkset name, the database must not already contain the new linkset name and destination address.

If the **nsn** parameter is specified, the link set must already exist in the database and at least one link must be assigned to the link set.

If a new linkset name (the **nsn** parameter) is specified for an existing destination network address (*ni-*-**), or destination network cluster address (*ni-nc-**), the linkset type used in the route (see the **chg-ls** command) must be either **b**, **c**, or **d**.

If the specified destination address is a full point code address (*ni-nc-ncm*) and is a member of a provisioned cluster (*ni-nc-**), whether the attributes of the ordered routes assigned to the cluster can be changed is determined by the destination address's NCAI (Nested Cluster Allowed Indicator). The NCAI is set with the **ncai** parameter of the **ent/chg-dstn** commands.

- If the **ncai=no** parameter is specified, the cluster point code is not a nested cluster point code and the attributes of the ordered routes assigned to the cluster cannot be changed.
- If the **ncai=yes** parameter is specified, the specified destination address is a member of a provisioned nested cluster where the attributes of the ordered routes assigned to the cluster can be changed.

If the specified destination address is a network cluster address (*ni-nc-**), how the attributes of the specified ordered route are changed is determined by the setting of the destination address's NCAI.

- If the **ncai=no** parameter is specified, the attributes of the specified ordered route are changed for each signaling point code having the same network identifier (*ni*) and network cluster (*nc*) codes.
- If the **ncai=yes** parameter is specified, the specified destination address is a nested cluster where changing the attributes of the ordered routes for the cluster does not affect the attributes of the ordered routes of the provisioned members.

The route destination's type must match the route's linkset adjacent point code or the route's linkset secondary adjacent point code type.

Only IPGW routes are allowed for private point codes.

If the **dpcn** parameter is specified, its format must match the format that was assigned with the **chg-stpopts:npcfmti** parameter.

Network routing is valid only if the NRT feature is on. The NRT feature is turned on with the **chg-feat** command.

When using network routing, if the destination point code has a value of * in the *nc* field, the *ncm* field must also be * (for example, **dpc=21-*-***).

At least one of the following optional parameters must be specified: **nda**, **nz nlsn**, and **nrc**.

The current destination address must be a full or a cluster point code.

All linksets that are currently assigned to a route set must still be equipped.

The specified linkset must already be assigned to a route in the Route table.

If a new link set (**nlsn** parameter) is specified in the command, that link set name must exist in the active LINK SET entity.

The specified DPC must be in the database.

Only a single route is allowed for an APC or SAPC for an IPGWx linkset. The changed route must include the APC or SAPC's IPGWx linkset with the destination equal to the APC or SAPC.

Adjacent point code must match destination point code type (Obsolete in IP7 3.0)

If DPCN is specified then the format of DPCN must match the format dictated by the **NPCFMTI** parameter via the **CHG-STPOPTS** command.

The STP shall ensure that the ITU-N ordered route destination's group code must match the route's Link Set Adjacent PC's group code for all linksets other than IPGWI and IPLIMI. (obsolete in IP7 4.0)

If a proxy linkset is used, then the **nlsn** parameter cannot be specified.

If a proxy linkset is used, then the value specified for the **dpc** parameter cannot be a network cluster address (*ni-nc-**) or network address (*ni-*-**).

The value specified for the **rc** parameter must differ from the original routing cost of the associated linkset.

Notes

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (**s-**) and the private and spare point code subtype prefix (**ps-**). All of the point code types support the private (internal) point code subtype prefix (**p-**).

Output

```
chg-rtx: lsn=rlgh03:rc=0:dpc=244-003-001
      rlgncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
      CHG-RTE: MASP A - COMPLTD
;
```

chg-rtx

Change Exception Route

Use this command to change an exception route entry in the Routing table.

Keyword: **chg-rtx**

Related Commands: **dlt-rtx**, **ent-rtx**, **rtrv-rtx**

Command Class: Database Administration

Parameters

At least one of the following optional parameters must be specified: **opc**, **ilsn**, **si**, or **cic**.

:dpc= (mandatory)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:dpci= (mandatory)

Destination Point Code. ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:dpcn= (mandatory)

Destination Point Code. ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUPUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:dpcn24= (mandatory)

Destination Point Code. 24-bit ITU national point code with subfields *main signaling area-subsignaling area-signaling point (msa-ssa-sp)*. The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**
msa—**000–255**
ssa—**000–255**
sp—**000–255**

:lsn= (mandatory)

Linkset name. This parameter specifies the name of the linkset associated with the specified exception route.

Range: *aaaaaaaa*

1 alphabetic character followed by up to 9 alphanumeric characters.

:cic= (optional)

Starting Circuit Identification Code. This parameter is used alone or together with the **ecic** parameter as exception routing criteria for the specified exception route.

Range: **1-16383**

:ecic= (optional)

Ending Circuit Identification Code. This parameter, together with the **cic** parameter, defines the CIC range that is used as exception routing criteria for the specified exception route.

Range: **0-16383**

:force= (optional)

The **force=yes** parameter must be specified when the **ilsn** parameter value is the same as the **nlsn** parameter value.

Range: **yes**

:ilsn= (optional)

Incoming linkset name. This parameter specifies the name of the originating linkset. The parameter value is used as part of the exception routing criteria for the specified exception route.

Range: *aaaaaaaa*

1 alphabetic character followed by up to 9 alphanumeric characters.

:nlsn= (optional)

New linkset name. This parameter specifies the linkset name that replaces the linkset name associated with the specified exception route.

Range: *aaaaaaaa*

1 alphabetic character followed by up to 9 alphanumeric characters.

:opc= (optional)

ANSI origination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:opci= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps-

zone—0-7

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

:opc= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUPUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The prefix subfield indicates a spare point code, private point code or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: s-, p-, ps-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:opc24= (optional)

24-bit ITU national point code with subfields *main signaling area-subsignaling area-signaling point* (*msa-ssa-sp*). The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range: p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

msa—000-255

ssa—000-255

sp—000-255

:rc= (optional)

Relative cost. This parameter specifies the relative cost associated with the specified exception route.

Range: 0-99

:si= (optional)

Service indicator. This parameter is used as part of the exception routing criteria for the specified exception route.

Range: 3-15

Example

This example changes the relative cost of an existing exception route.

chg-rtx:dpca=1-1-1:opca=2-3-3:lsn=lsset1:rc=30

This example changes the linkset associated with the exception route.

chg-rtx:dpca=1-2-1:si=3:lsn=lsset2:nlsn=lsset3

This example changes the linkset and relative cost of the exception route.

chg-rtx:dpca=1-3-1:lsn=lsset2:lsn=lsset3:nlsn=lsset4:rc=20

chg-rtx:dpci=2-100-1:ilsn=lset2:lsn=lset4:rc=10

chg-rtx:dpci=2-100-1:si=5:lsn=lset5:rc=50

Dependencies

Only one of the **opc**, **ilsn**, **cic**, or **si** parameters can be specified for a exception route entry.

If the **ecic** parameter is specified, the **cic** parameter must be specified.

The **ecic** parameter value cannot be less than the **cic** parameter value.

The **opc** parameter value cannot be the same as the **dpc** parameter value.

The Origin-Based MTP Routing feature must be turned on before this command can be entered.

The specified combination of exception route parameter conditions must already exist.

The linkset name, as defined by the **ilsn**, **lsn**, or **nlsn** parameter, must exist.

For the **opc**, **ilsn**, CIC range (**cic** and **ecic** parameter values are not identical), and **si** criteria, only one pair of identical exception route conditions, differing only in **lsn** assignment, can exist for a given DPC. For exception route conditions with a single CIC, there can be only one exception route per CIC value per DPC per route cost.

The network domain of the APC/SAPC in the linkset specified by the **lsn** parameter must be the same network domain of the specified DPC or its alias.

The linkset APC/SAPC type and group code in the linkset specified by the **lsn** parameter must match the **dpc** parameter.

The **nlsn** parameter value cannot be the same as the **lsn** parameter value.

Either the **nlsn** parameter, the **rc** parameter, or both parameters must be specified.

The **force=yes** parameter must be specified in the following cases:

- The value specified for the **ilsn** parameter is the same as the value specified for the **nlsn** parameter.
- The value specified for the **ilsn** parameter is the same as any of the linkset names within the routeset specified by the **rsn** parameter.
- The value specified for the **opc** parameter is the same as the APC of the linkset specified by the **nlsn** parameter
- The value specified for the **opc** parameter is the same as the APC of any of the linksets within the routeset specified by the **rsn** parameter.

The value specified for the destination point code must be a full point code and not a cluster or network point code.

Output

chg-rtx:dpc=1-1-1:opc=2-3-3:lsn=lset1:rc=30

stdcfg2b 06-05-19 18:20:11 EST EAGLE 35.0.0
CHG-RTX: MASP A - COMPLTD

chg-sccp-serv

Change SCCP Service

Use this command to:

- Change the state of G-Flex and G-Port services to online or offline. Taking a service offline shifts the processing load to designated nodes.

- Add PCs to an existing service group for service re-route assignment, or change the relative cost (RC) of existing point codes in a group.

Keyword: chg-sccp-serv

Related Commands: dlt-sccp-serv, rtrv-sccp-serv

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:serv= (mandatory)

Service. This parameter specifies the name of the service.

Range: gflex, gport, mnp

gflex— G-Flex (GSM Flexible Numbering)

gport— G-Port (GSM Mobile Number Portability)

mnp— Mobile Number Portability

:gtt= (optional)

GTT option indicator. This parameter specifies whether to use GTT as part of the re-routing procedure when the service is offline, and alternate PCs are not defined or not available.

Range: no, yes

no— Do not use GTT as part of the re-routing procedure.

yes— Use GTT as part of the re-routing procedure.

Default: yes

:pc1= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: pca1

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001–005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006–255.

The point code 000-000-000 is not a valid point code.

:pc1/pca1/pci1/pcn1/pcn241= (optional)

Alternate post-GTT-translated point code.

:pc2= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: pca2

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001–005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006–255.

The point code **000-000-000** is not a valid point code.

:pc2/pca2/pci2/pcn2/pcn242= (optional)

Alternate post-GTT-translated point code.

:pc3= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: **pca3**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001-005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006-255**.

The point code **000-000-000** is not a valid point code.

:pc3/pca3/pci3/pcn3/pcn243= (optional)

Alternate post-GTT-translated point code.

:pc4= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: **pca4**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001-005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006-255**.

The point code **000-000-000** is not a valid point code.

:pc4/pca4/pci4/pcn4/pcn244= (optional)

Alternate post-GTT-translated point code.

:pci1= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

:pci2= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:pci3= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:pci4= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:pcn1= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:pcn2= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:pcn241= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:pcn242= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:pcn243= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:pcn244= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

:pcn3= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfnti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:pcn4= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfnti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:rc1= (optional)

Relative cost 1. This parameter specifies the relative cost of the route for alternate post-GTT-translated point code 1.

Range: **0-99**

:rc2= (optional)

Relative cost 2. This parameter specifies the relative cost of the route for alternate post-GTT-translated point code 2.

Range: **0-99**

:rc3= (optional)

Relative cost 3. This parameter specifies the relative cost of the route for alternate post-GTT-translated point code 3.

Range: **0-99**

:rc4= (optional)

Relative cost 4. This parameter specifies the relative cost of the route for alternate post-GTT-translated point code 4.

Range: 0-99

:state= (optional)

This parameter specifies the state of the service.

Re-routing is performed when the service state is **offline**.

Range: **offline, online**

Default: **offline**

Example

```
chg-sccp-serv:serv=gport:state=online
```

```
chg-sccp-
```

```
serv:serv=gport:pca1=1-1-1:rc1=10:pca2=2-2-2:rc2=20:pca3=3-3-3:rc3=30:pca4=4-4-4:rc4=40
```

```
chg-sccp-serv:serv=gport:pci1=2-2-2:rc1=10:pci2=3-3-3:rc2=10
```

```
chg-sccp-serv:serv=gport:state=online:gtt=yes
```

Dependencies

The specified point code network type must match an existing point code network type.

The point code and relative cost parameter values must be specified together as a pair in the command.

The point code cannot match the existing site identification true point code.

The mate remote point code must already exist as destination in the Ordered Route entity set or reside in a cluster destination for which ordered routes are specified.

The SCCP Service table cannot be full when the command is entered. For each supported service (G-Port and G-Flex), up to 7 point codes can be specified for each network type (ANSI, ITU-I, S-ITU-I, ITU-N, S-ITU-N, and ITU-N24).

A maximum of 7 point codes can be allocated to a group or SCCP Service set.

- The A-Port or IGM feature must be enabled before the **serv=mnnp** parameter can be specified.
- The G-Flex feature must be enabled before the **serv=gflex** parameter can be specified.
- The G-Port feature must be enabled before the **serv=gport** parameter can be specified.

If the A-Port or IS41 GSM Migration (IGM) feature is enabled, the **serv=gport** parameter cannot be specified.

The A-Port or IGM feature must be enabled before the **serv=mnnp** parameter can be specified.

At least one optional parameter must be specified.

At least one PC/RC pair (for example, the **pc1** and **rc1** parameters) must be specified.

The mated point code must be a full point code.

Each new point code (specified by the **pc1**, **pc2**, **pc3** or **pc4** parameter) must already exist in the destination table. See the **ent-dstn** command.

The same point code value cannot be entered more than once in the SCCP-SERV table.

New and existing point codes cannot be entered together in the same command.

The specified MRN set must already exist in the MRN table for the SCCP-SERV table.

If the Flexible GTT Loadsharing feature is enabled, the specified point code must already exist in the specified SCCP-SERV set in the MRN table.

Notes

The SCCP Service table is part of the MRN table.

When using **chg-sccp-serv** to modify relative cost values, all of the point codes that are specified in one command must exist in the same group in the SCCP-SERV table.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (**s-**).

This command supports the assignment of point codes to SCCP Service point code groups used for service re-route assignment. It is used to add point codes to a service group or to change the relative cost (RC) of existing point codes in a service group.

SCCP Service groups are organized by service (G-Flex or G-Port) and PC network type (ANSI, ITU-I, Spare ITU-I, ITU-N, Spare ITU-N, or ITUN-24). Up to 7 point codes can be in a network type grouping for service re-route load sharing. Up to 4 point codes can be added or modified in one command.

The **-sccp-serv** commands differ from the **-mrn** commands in that the service name (**serv** parameter) is required instead of an existing PC in the set serving as the key.

When using **chg-sccp-serv** to add new point codes, none of the point codes that are specified in one command can exist in the group in the SCCP-SERV table and must all be added to the same SCCP-SERV group.

Output

The following example changes the SCCP service for G-Port to provision the point code and relative cost values:

```
chg-sccp-serv:serv=gport:pca1=1-1-1:rc1=10:pc2=1-1-2:rc2=20
tekelecstp 05-12-20 08:35:15 EST 35.0.0
CHG-SCCP-SRV : MASP A - COMPLTD
;
```

chg-sccpopts

Change SCCP Options

Use this command to change the values of one or more of the SCCP option indicators maintained in the STP options table.

Keyword: **chg-sccpopts**

Related Commands: **rtrv-sccpopts**

Command Class: Database Administration

Parameters

:class1seq= (optional)

This parameter enables or disables Class 1 message sequencing.

Range: **on, off**

on—Enabled; Class 1 messages are guaranteed to be sequenced, but the messages are not load shared.

off—Disabled; Class 1 message sequencing is not guaranteed, but the messages might be load shared (if appropriate configuration exists).

Default: Current value

System

Default: **off**

:cnvainat= (optional)

This parameter specifies the value of the called party/calling party address Reserved for National Use bit during SCCP conversion when global title translation routes the message to the ITU national network.

The ANSI-ITU-China SCCP Conversion feature must be turned on before this parameter can be specified.

Range: **0, 1**
 0 — The Reserved for National Use bit is not reserved for national use.
 1 — The Reserved for National Use bit is reserved for national use.
Default: No change to the current value
System
Default: **1**

:dfltcgpcasn= (optional)

Default calling party ANSI point code set name. This parameter specifies the system default of the GTT calling party point code set for ANSI when the **gti=0** parameter is in the incoming MSU.

Range: ayyyyyyy, **none**
 none—Removes the provisioned CgPA PC set.

:dfltcgpcisn= (optional)

Default calling party ITU point code set name. This parameter specifies the system default of the GTT calling party point code set for ITU when the **gti=0** parameter is in the incoming MSU.

Range: ayyyyyyy, **none**
 1 leading alphabetic character and up to 8 following alphanumeric characters.
 none—Removes the provisioned CgPA PC set.

:dfltgttmode= (optional)

Default GTT mode. This parameter specifies the system default of the GTT mode hierarchy for EAGLE 5 ISS to follow when performing global title translation.

Range: **acdcd, acdcgcd, acdcdcg, cd, cdcg, cg, cged, cgacdcd**
 acdcd — Advanced CdPA GTT, CdPA GTT
 acdcgcd — Advanced CdPA GTT, CgPA GTT, CdPA GTT
 acdcdcg — Advanced CdPA GTT, CdPA GTT, CgPA GTT
 cd — CdPA GTT only
 cdcg — CdPA GTT, CgPA GTT
 cg — CgPA GTT only
 cged — CgPA GTT, CdPA GTT
 cgacdcd — CgPA GTT, Advanced CdPA GTT, CdPA GTT

:gmstcapce= (optional)

This parameter enables and disables the processing of GSM Map Screening for TCAP_Continue and TCAP_End messages.

Range: **on, off**
 on — Enables GSM Map Screening for TCAP_Continue and TCAP_End messages
 off — Disables GSM Map Screening for TCAP_Continue and TCAP_End messages

:mobrscpopc= (optional)

This parameter specifies the OPC that is derived from the SCCP message that is used as an exception class.

Range: **sccp, mtp, tpc**
 sccp — The OPC exception class uses the point code within the CGPA, if the CGPA portion of the message is "route-on-dpcssn". If the option is "route-on-gt", the **sccp** option is not used and defaults to the **mtp** option.
 mtp — The OPC exception class uses the original MTP OPC value as its criteria.
 tpc — The OPC exception class uses the EAGLE 5 ISS true point code for the criteria.

:tgtt0= (optional)

This parameter enables or disables transaction-based GTT loadsharing for SCCP Class0 UDT, Class0 XUDT, UDTS, and XUDTS messages.

Range: **udt, xudt, both, none**

udt, none— Enables transaction-based GTT loadsharing for UDTs and Class0 UDT messages.

xudt, none— Enables transaction-based GTT loadsharing for XUDTs and Class0 XUDT messages.

both, none— Enables transaction-based GTT loadsharing for UDTs, XUDTs, Class0 UDT, and Class0 XUDT messages.

none—Disables transaction-based GTT loadsharing for UDTs, XUDTs, Class0 UDT, and Class0 XUDT messages.

Default: No change to current value

System

Default: none

:tgtt1= (optional)

This parameter enables or disables transaction-based GTT loadsharing for SCCP Class1 UDT, Class1 XUDT, UDTs, and XUDTs messages.

Range: **udt, xudt, both, none**

udt, none— Enables transaction-based GTT loadsharing for UDTs and Class1 UDT messages.

xudt, none— Enables transaction-based GTT loadsharing for XUDTs and Class1 XUDT messages.

both, none— Enables transaction-based GTT loadsharing for UDTs, XUDTs, Class1 UDT, and Class1 XUDT messages.

none—Disables transaction-based GTT loadsharing for UDTs, XUDTs, Class1 UDT, and Class1 XUDT messages.

Default: No change to current value

System

Default: none

:tgttudtkey= (optional)

This parameter specifies the transaction parameter for incoming UDT(S) messages. Messages with this parameter are routed to the same load-shared PC within a MAPGROUP or MRNGROUP.

Range: **mtp, tcap, sccp, enhmtp**

mtp— Transaction-based GTT loadsharing is performed using the mtp algorithm for UDT and UDTs messages.

tcap— Transaction-based GTT loadsharing is performed using the tcap algorithm for UDT and UDTs messages.

sccp— Transaction-based GTT loadsharing is performed using the sccp algorithm for UDT and UDTs messages.

enhmtp— Transaction-based GTT loadsharing is performed using the enhanced mtp algorithm for UDT and UDTs messages.

Default: No change to current value

System

Default: mtp

:tgtxudtkey= (optional)

This parameter specifies the transaction parameter for incoming XUDT(S) messages. Messages with this parameter are routed to the same load-shared PC within a MAPGROUP or MRNGROUP.

Range: **mtp, sccp, enhmtp**

mtp— Transaction-based GTT loadsharing is performed using the mtp algorithm for XUDT and XUDTs messages.

sccp— Transaction-based GTT loadsharing is performed using the sccp algorithm for XUDT and XUDTs messages.

enhmtp— Transaction-based GTT loadsharing is performed using the enhanced mtp algorithm for XUDT and XUDTs messages.

Default: No change to current value

System**Default:** mtp**Example**

```

chg-sccopts:class1seq=on
chg-sccopts:mobrscpopc=sccp
chg-sccopts:tgtt0=udt
chg-sccopts:tgtt1=xudt
chg-sccopts:tgttudtkey=mtp
chg-sccopts:tgtxudtkey=sccp
chg-sccopts:gmstcapce=on

```

Dependencies

At least one optional parameter must be specified.

The Origin-based MTP Routing feature must be turned on before the **mobrscpopc** parameter can be specified.

The Origin-based SCCP Routing feature must be enabled before the **dfltgttmode** parameter can have a value of **acdcd**, **cgacdcd**, **acdcdg**, **acdcdcg**, **cgcd**, **cdcg**, or **cg**. The Origin-based SCCP Routing feature must be enabled before the **dfltcgpcasn** or **dfltcgpcisn** parameters can be specified.

The GTT set specified for the **dfltcgpcasn** and **dfltcgpcisn** parameters must exist in the GTTSET table.

The GTT set specified for the **dfltcgpcasn** and **dfltcgpcisn** parameters must have a set type of **cgpc** in the GTTSET table.

The GTT set domain for the **dfltcgpcasn** parameter must be an ANSI network domain, and the GTT set domain for the **dfltcgpcisn** parameter must be an ITU (including ITU-I, ITU-N, ITU-N24) network domain.

The Transaction-based GTT Loadsharing feature must be enabled before the **tgtt0**, **tgtt1**, **tgttudtkey**, or **tgtxudtkey** parameters can be specified.

The GSM Map Screening feature must be turned on before the **gmstcapce** parameter can be specified.

The SCCP Conversion feature must be enabled before the **cnvainat** parameter can be specified.

Notes

None.

Output

```

chg-sccopts:dfltgttmode=acdcdcg
rlghncxa03w 06-01-18 08:16:14 EST EAGLE 35.0.0
chg-sccopts:dfltgttmode=acdcdcg
CHG-SCCPOPTS: MASP A - COMPLTD
;

```

chg-scr-aftp**Change Allowed Affected Point Code**

Use this command to change the attributes of a specific screening reference in the allowed affected point code category. Attributes that can be changed are the point code and the subsystem number.

Keyword: chg-scr-aftp

Related Commands: dlt-scr-aftp, ent-scr-aftp, rtrv-scr-aftp

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:sr= (mandatory)

Screening reference. This parameter specifies the point code's unique screening reference name.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

:ssn= (mandatory)

Subsystem number. An asterisk (*) indicates the full range of values from 1-255.

Range: **1-255 ***

:actname= (optional)

Action name. This parameter specifies the name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see the **chg-gws-actset** and **rtrv-gws-actset** commands).

Range: *ayyyyy*, **none**

1 alphabetic character followed by up to 5 alphanumeric characters.

none—Remove an existing gateway screening stop action set from a gateway screening rule.

:area= (optional)

ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:id= (optional)

ITU international ID. This parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7 ***

:msa= (optional)

24-bit ITU-national main signaling area (*msa*) value. This parameter specifies the *msa* of the point code represented by *msa-ssa-spt*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:narea= (optional)

New ITU-international area value. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

Default: Current value

:nc= (optional)

Network cluster (*nc*) value. This parameter specifies one or more *nc* values for the network indicator (*ni*) and network cluster member (*ncm*) values specified in the **ni** and **ncm** parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:ncm= (optional)

Network cluster member (*ncm*) value. This parameter specifies one or more *ncm* values for the network indicator (*ni*) and network cluster (*nc*) values identified in the **ni** and **nc** parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 ***

:ni= (optional)

Network indicator (*ni*) value. This parameter specifies one or more *ni* values for the network cluster (*nc*) and network cluster member (*ncm*) values identified in the **nc** and **ncm** parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 ***

:nid= (optional)

New ITU-international ID value. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7, ***

Default: Current value

:nmsa= (optional)

New 24-bit ITU-national main signaling area (*nmsa*) value. It specifies the new *msa* of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:nnc= (optional)

New network cluster (*nnc*). This parameter specifies one or more *nnc* values for the screening reference specified in the **sr** parameter. It specifies the new network cluster (*nc*) of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

Default: Current value

:nncm= (optional)

New network cluster member (*nncm*). This parameter specifies one or more *ncm* values for the screening reference specified in the **sr** parameter. It specifies the new network cluster member (*ncm*) of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0–255**.

Range: **0-255 ***

Default: Current value

:nni= (optional)

New network identifier (*nni*). This parameter specifies one or more *nni* values for the screening reference specified in the **sr** parameter. It specifies the new network indicator (*ni*) of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 ***

Default: Current value

:nnpc= (optional)

New ITU-national point code. An asterisk (*) indicates the full range of values from **00000–16383**.

NOTE: Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you use multiple-part ITU national point codes, see "Converting ITU National Point Code Formats" in Appendix A for information on converting the point code format.

Range: **00000-16383 ***

Default: Current value

:npc= (optional)

ITU national point code. An asterisk (*) indicates the full range of values from **00000–16383**.

Range: **00000-16383 ***

:npcst= (optional)

New point code subtype. This parameter indicates whether the specified new ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range: none, s

Default: none

:nsfi= (optional)

This parameter specifies the next screening category that is used in the gateway screening process. If specified, the parameter value must be **stop**. This halts the gateway screening process, and the message then proceeds through normal routing.

Range: stop

Default: Current value

:nsp= (optional)

New 24-bit ITU national signaling point (*nsp*). This parameter specifies the new *sp* of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: 000-255 *

:nsr= (optional)

Next screening reference (*nsr*). This parameter specifies which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. If the **nsfi=stop** parameter is specified, the **nsr** parameter cannot be specified.

Range: ayy

1 alphabetic character followed by up to 3 alphanumeric characters

Default: Current value

:nssa= (optional)

New 24-bit ITU national sub signaling area (*nssa*). This parameter specifies the new sub signaling area (*ssa*) of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: 000-255 *

:nssn= (optional)

New subsystem number. An asterisk (*) indicates the full range of values from **000-255**.

Range: 000-255 *

Default: Current value

:nzone= (optional)

New ITU-international zone. This parameter specifies a new zone for the point code represented by *zone-area-id*. An asterisk (*) indicates the full range of values from **0-7**.

Range: 0-7, *

Default: Current value

:pcst= (optional)

Point code subtype. This parameter specifies whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range: none, s

Default: none

:sp= (optional)

24-bit ITU national signaling point (*sp*). This parameter specifies the signaling point (*sp*) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: 000-255 *

:ssa= (optional)

24-bit ITU national sub signaling area (*ssa*). This parameter specifies the sub signaling area (*ssa*) in the point code represented by the format *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:zone= (optional)

ITU international zone. This parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0-7**.

Range: **0-7, ***

Example

```
chg-scr -
aftpc:sr=iec:ni=240:nc=010:ncm=010:ssn=254:nni=240:nnc=003:nncm=0
30 :nssn=253

chg-scr -
aftpc:sr=iec:ni=240:nc=008:ncm=203:nssn=253:nsfi=stop:actname=cop
y

chg-scr -
aftpc:sr=aft1:zone=1:area=2:id=3:nsfi=stop:ssn=1:pcst=s:npcst=non
e
```

Dependencies



CAUTION: Even though gateway screening is in the screen test mode, as defined by the parameters **gwsa=off** and **gwsn=on**, the gateway screening action in the stop action set specified by the **actname** parameter of the screen set *will* be performed at the end of the screening process.

A complete point code must be specified, and must be one, and only one of the four point code parameter combinations: **ni-nc-ncm**; **zone-area-id**; **msa-ssa-sp**; or **npc**.

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

At least one optional parameter must be specified.

The new affected point code and subsystem number to be changed cannot already exist in the affected point code entity set.

The **actname** parameter value must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the *ACT NAME* field of the **rtrv-gws-actset** command output.

If the **zone=*** parameter is specified, the **area=*** and **id=*** parameters must be specified.

If the **area=*** parameter is specified, the **id=*** parameter must be specified.

If the **msa=*** parameter is specified, the **ssa=*** and **sp=*** parameters must be specified.

If the **ssa=*** parameter is specified, the **sp=*** parameter must be specified.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000-255**

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc=*** parameter is specified, the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **ncm** parameter is specified as a single value, or a range other than the full range of **000-255**, the **ni** and the **nc** parameters must be specified with a single value.

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range **000–255**.

If the **nsfi** parameter is specified, the parameter value must be **stop**.

If the **nsfi=stop** parameter is specified, the **nsr** parameter cannot be specified.

The character **c** is not a valid value for the **ni**, **nc**, **ncm**, **zone**, **area**, **id**, **msa**, **ssa**, **sp**, and **npc** parameters.

The Gateway Screening Rules table can contain a maximum of 372,600 rules.

The specified screening reference (**sr**) must already exist in the database.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The spare point code subtype prefix (**s-**) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** and **npcst** parameters cannot be specified for ANSI and ITU-N24 point codes.

The affected point code and subsystem number to be changed must already exist in the affected point code entity set.

Notes

A range of values is specified by separating the values that define the range by two ampersands (**&&**); for example, **:ni=025&&100** specifies all network indicators for ANSI point codes from **25** to **100**.

An asterisk cannot be specified for a parameter value in this command unless an asterisk was specified for the parameter value in the original **ent-scr-aftpc** command.

If the screen set reaches 100% capacity (indicated by the “100% full” message), the system will allow subsequent entries. An error will occur, however, when downloading the screen set to the card. Screen sets should not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

A screening reference is assigned to screen sets using the **ent-scrset** command. A screening reference can belong to multiple screen sets.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

chg-scr-

aftpc:sr=iec:ni=240:nc=010:ncm=010:ssn=254:nni=240:nnc=003:nncm=030:nssn=253

```
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
CHG-SCR-AFTPC: SCREEN SET AFFECTED - IEC 25% FULL
CHG-SCR-AFTPC: MASP A - COMPLTD
```

;

Legend

CHG-SCR-AFTPC—The command entered that caused this output. This is echoed to the printer as a reference.

SCREEN SET AFFECTED—Identifies the screen set that was affected by the command. The screen set name is shown.

% FULL—Indicates the relative size of the screen set.

chg-scr-blkdpc**Change Blocked DPC**

Use this command to change the attributes of a specific screening reference in the blocked DPC category. Attributes that can be changed are the blocked destination point code, next screening function identifier, and the next screening reference.

Keyword: **chg-scr-blkdpc**

Related Commands: **dlt-scr-blkdpc**, **ent-scr-blkdpc**, **rtrv-scr-blkdpc**

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:sr= (mandatory)

Screening reference. This parameter specifies the point code's unique screening reference name.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

:actname= (optional)

Action name. This parameter specifies the name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: *ayyyyy*, **none**

1 alphabetic character followed by up to 5 alphanumeric characters.

none—Remove an existing gateway screening stop action set from a gateway screening rule.

:area= (optional)

ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255** *, C

:id= (optional)

ITU international ID. This parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7** *, C

:msa= (optional)

24-bit ITU-national main signaling area (*msa*) value. This parameter specifies the main signaling area (*msa*) of the point code represented by *msa-ssa-spt*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255** *, C

:narea= (optional)

New ITU-international area value. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255** *, C

Default: Current value

:nc= (optional)

Network cluster (*nc*) value. This parameter specifies one or more *nc* values for the network indicator (*ni*) and network cluster member (*ncm*) values specified in the **ni** and **ncm** parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255** *, C

:ncm= (optional)

Network cluster member (*ncm*) value. This parameter specifies one or more *ncm* values for the network indicator (*ni*) and network cluster (*nc*) values identified in the **ni** and **nc** parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: 0-255 *, C

:ni= (optional)

Network indicator (*ni*) value. This parameter specifies one or more *ni* values for the network cluster (*nc*) and network cluster member (*ncm*) values identified in the **nc** and **ncm** parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: 0-255 *, C

:nid= (optional)

New ITU-international ID value. An asterisk (*) indicates the full range of values from **0–7**.

Range: 0-7 *, C

Default: Current value

:nmsa= (optional)

New 24-bit ITU-national main signaling area (*nmsa*) value. This parameter specifies the new main signaling area (*msa*) of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000–255**.

Range: 000-255 *, C

:nnc= (optional)

New network cluster (*nnc*). This parameter specifies one or more *nnc* values for the screening reference specified in the **sr** parameter. It specifies the new network cluster (*nc*) of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: 000-255 *, C

Default: Current value

:nncm= (optional)

New network cluster member (*nncm*). This parameter specifies one or more *ncm* values for the screening reference specified in the **sr** parameter. It specifies the new network cluster member (*ncm*) of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0–255**.

Range: 0-255 *, C

Default: Current value

:nni= (optional)

New network identifier (*nni*). This parameter specifies one or more *nni* values for the screening reference specified in the **sr** parameter. It specifies the new network indicator (*ni*) of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: 0-255 *, C

Default: Current value

:nnpc= (optional)

New ITU-national point code. An asterisk (*) indicates the full range of values from **00000–16383**.

NOTE: Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you use multiple-part ITU national point codes, see

"Converting ITU National Point Code Formats" in Appendix A for information on converting the point code format.

Range: 00000-16383 *, C

Default: Current value

:npc= (optional)

The ITU national point code. An asterisk (*) indicates the full range of values from **00000–16383**.

Range: 00000-16383 *, C

:npcst= (optional)

New point code subtype. This parameter indicates whether the specified new ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range: none, s

Default: none

:nsfi= (optional)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range: cgpa, destfld, fail, isup, stop

cgpa—Allowed CGPA is the next screening category.

destfld—Allowed destination field (DESTFLD) is the next screening category.

fail—Discard the received message.

isup—ISUP message type (ISUP) is the next screening category.

stop—The gateway screening process ends and the message proceeds through normal routing.

Default: Current value

:nsp= (optional)

The new 24-bit ITU national signaling point (*nsp*). It specifies the new signaling point (*sp*) of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: 000-255 *, C

:nsr= (optional)

Next screening reference (*nsr*). This parameter specifies which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. If the **nsfi=stop** parameter is specified, the **nsr** parameter cannot be specified.

Range: ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Default: Current value

:nssa= (optional)

New 24-bit ITU national sub signaling area (*nssa*). This parameter specifies the new sub signaling area (*ssa*) of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: 000-255 *, C

:nzone= (optional)

New ITU-international zone. This parameter specifies a new zone for the point code represented by *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: 0-7 *, C

Default: Current value

:pcst= (optional)

Point code subtype. This parameter specifies whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range: none, s
Default: none

:sp= (optional)

24-bit ITU national signaling point (*sp*). This parameter specifies the signaling point (*sp*) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: 000-255 *, C

:ssa= (optional)

24-bit ITU national sub signaling area (*ssa*). This parameter specifies the sub signaling area (*ssa*) in the point code represented by the format *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: 000-255 *, C

:zone= (optional)

ITU international zone. This parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0-7**.

Range: 0-7 *, C

Example

```
chg-scr-blkdpc:sr=iec:ni=240:nc=010:ncm=010:nni=240:nnc=003:nncm=030
chg-scr-blkdpc:sr=iec:ni=c:nc=c:ncm=c:nsfi=cgpa:nsr=wrld2
chg-scr-blkdpc:sr=iec:ni=240:nc=010:ncm=010:nsfi=stop:actname=cr
chg-scr-blkdpc:sr=bdp1:npc=128:nsfi=fail:pcst=s:npcst=none
```

Dependencies



CAUTION: Even though gateway screening is in the screen test mode, as defined by the parameters **gwsa=off** and **andgws=on**, the gateway screening action in the stop action set specified by the **actname** parameter of the screen set *will* be performed at the end of the screening process.

The Gateway Screening Rules table can contain a maximum of 362,700 rules.

A complete point code must be specified, using the **ni-nc-ncm**, **zone-area-id**, **msa-ssa-sp**, or **npc** combination unless a value of **c** for “continue” is specified.

A new point code entry must be specified by one, and only one of the four point code parameter combinations: **nni-nnc-nncm**, **nzone-narea-nid**, **nmsa-nssa-nsp**, or **nnpc**. If the new point code entry is a different point code type than the existing point code entry, all subfields of the new point code type must be specified.

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

At least one optional parameter must be specified.

The blocked DPC specified by **ni-nc-ncm**; **zone-area-id**; **msa-ssa-sp**; or the **npc** parameter must already exist in the screening reference or within an existing range of DPCs.

The new blocked DPC or DPC range defined by **ni-nc-ncm**; **zone-area-id**, **msa-ssa-sp**, or the **npc** parameter must not already exist in the screening reference or within an existing range of DPCs.

If an asterisk (*) is specified for the new blocked DPC, nothing that matches the specified range of DPCs can already exist in the DPC screening table for the screening reference.

If the **actname** parameter is specified, the **nsfi-stop** parameter must be specified.

If the **actname** parameter is specified, the **nsr** parameter cannot be specified.

The value of the **actname** parameter must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the *ACT NAME* field of the **rtrv-gws-actset** command output.

If the **area=*** parameter is specified, then the **id=*** parameter must be specified.

If the **msa=*** parameter is specified, then the **ssa=*** and the **sp=*** parameters must be specified.

If the **msa=c** parameter is specified, then the **ssa** and the **sp** parameters must have a value of **c** or must not be specified. If the **msa=c** parameter is specified, and the **ssa** and the **sp** parameters are not specified, then the **ssa** and **sp** parameters default to a value of **c**.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc** parameter is specified as an asterisk (**nc=***), the **ncm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **ncm** parameter is specified as a single value, or a range other than the full range of **000–255**, the **ni** and the **nc** parameters must be specified with a single value.

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range **000–255**.

If the **ni=c** parameter is specified, then the **nc** and the **ncm** parameters must have a value of **c** or must not be specified. If the **ni=c** parameter is specified, and the **nc** and the **ncm** parameters are not specified, then the **nc** and **ncm** parameters default to a value of **c**.

If the specified **ni-nc-ncm**, **zone-area-id**, or **msa-ssa-sp** is not equal to **c-c-c**, or if the **npc=c** parameter is not specified, then the **nsfi=fail** parameter must be specified, and the **nsr** parameter cannot be specified.

If the **nnc** parameter is specified as a range, the **nncm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **nnc** parameter is specified as a single value or a range, a single value must be specified for the **nni** parameter.

If the **nnc** parameter is specified as an asterisk (**nnc=***), the **nnm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **nncm** parameter is specified as a single value, or a range other than the full range of **000–255**, the **nni** and the **nnc** parameters must be specified with a single value.

If the **nni** parameter is specified as an asterisk (**nni=***) or as a range, the **nnc** and **nncm** parameters must be specified as an asterisk or as the full range **000–255**.

If the value of the **nsfi** parameter is not **stop** or **fail**, then the **nsr** parameter must be specified.

If the **nsfi=fail** parameter is specified, then the **nni**, **nc**, **nncm**, **narea**, **nzone**, **nid**, **nmsa**, **nssa**, **nsp**, and **npc** parameters cannot have a value of **c**.

The specified screening reference (**sr**) must already exist in the database.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The **pcst** and **npcst** parameters cannot be specified with **c** for a blocked screen reference (**sr**).

The spare point code subtype prefix (**s-**) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** and **npcst** parameters cannot be specified for ANSI and ITU-N24 point codes.

If the **ssa=*** parameter is specified, then the **sp=*** parameter must be specified.

If the **zone=*** parameter is specified, then the **area=*** and the **id=*** parameters must be specified.

If the **zone=c** parameter is specified, then the **area** and the **id** parameters must have a value of **c** or must not be specified. If the **zone=c** parameter is specified, and the **area** and the **id** parameters are not specified, then the **area** and **id** parameters default to a value of **c**.

The **nsfi=fail** parameter cannot be specified when changing a continue entry.

The **nsfi** and **nsr** parameters cannot be specified when changing a screening entry that is other than the continue entry (**c-c-c**).

The value of the **nsfi** parameter must be valid for the BLKDPC entity type.

If the specified **ni-nc-ncm** or **zone-area-id** or **msa-ssa-sp** is equal to **c-c-c** or if the **npc=c** parameter is specified, the **nsfi=fail** parameter cannot be specified, and the **nni**, **nnnc**, **nnncm**, **nzone**, **narea**, **nid**, **nmsa**, **nssa**, **nsp**, and **nnpc** parameters cannot be specified. Point code **c-c-c** and **npc=c** cannot be changed to a numbered point code.

The **nsfi** and **nsr** parameters must point to an existing screen, or the **nsfi=stop** parameter must be specified, and the **nsr** parameter cannot be specified.

Notes

When a blocked DPC screening reference is created, the first entry for a point code must be **c-c-c**, or **c** for the **npc** parameter. Subsequent entries must be specific point codes.

The character **c** is used in the blocked DPC screens to allow the screening process to continue for messages with point codes that do not match any point codes in the blocked DPC screens. When screening for a blocked DPC and the point code being screened does not match any of the point codes in the blocked DPC screens, the message is not rejected and the screening process continues.

There must be an entry in the blocked DPC screens to allow the screening process to continue. This entry consists of a screening reference, point code, **nsfi**, and **nsr**. The point code is **npc=c** or subfields equal to **c-c-c**. When the character **c** is specified, the **nsfi** and **nsr** parameters must be specified.

If the character **c** is specified for the parameters **ni-nc-ncm** or **zone-area-id** or **msa-ssa-sp**, the character **c** is the only value that can be specified for all three parameters. No other values can be used. For example, a point code **c-c-255** is not allowed. The point code must be **c-c-c**. The asterisk (*) value cannot be used with the character **c** (for example, a point code **c-c-*** is not allowed).

When the point code does not match any entries in the blocked DPC screens, the screening process is directed to the screening reference with the point code **c-c-c** or **npc=c**. The **nsfi** and **nsr** in this entry are examined to determine the next step in the screening process.

If the current **ni-nc-ncm** or **zone-area-id** or **msa-ssa-sp** is equal to **c-c-c** or **npc=c**, only the **nsfi** and **nsr** can be changed. Otherwise, only the blocked DPC can be changed.

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, **: ni=025&&100** specifies all network indicators for ANSI point codes from 25 to 100.

An asterisk cannot be specified for a parameter value in this command unless an asterisk was specified for the parameter value in the **ent-scr-blkdpc** command.

If the screen set reaches 100% capacity (indicated by the 100% Full message), the system allows subsequent entries. An error occurs, however, when downloading the screen set to an LIM. Ensure that screen sets do not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** and **npcst** parameters indicate whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

```

chg-scr-
blkdpc:sr=ss01:ni=240:nc=010:ncm=010:nni=240:nnc=003:nncm=030
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
CHG-SCR-BLKDPC: SCREEN SET AFFECTED - SS01 25% FULL
CHG-SCR-BLKDPC: MASP A - COMPLTD
;

```

Legend

CHG-SCR-BLKDPC—The command entered that caused this output. This is echoed to the printer as a reference.

SCREEN SET AFFECTED—Identifies the screen set that was affected by the command. The screen set name is shown.

% FULL—Indicates the relative size of the screen set.

chg-scr-blkopc**Change Blocked OPC**

Use this command to change the attributes associated with a screening reference in the blocked OPC category. Attributes that can be changed are the point code, next screening function identifier, and next screening reference.

Keyword: **chg-scr-blkopc**

Related Commands: **dlt-scr-blkopc**, **ent-scr-blkopc**, **rtrv-scr-blkopc**

Command Class: Database Administration

Parameters

:sr= (mandatory)

Screening reference. This parameter specifies the point code's unique screening reference name.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

:actname= (optional)

The name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: *ayyyyy*, **none**

1 alphabetic character followed by up to 5 alphanumeric characters.

none—Remove an existing gateway screening stop action set from a gateway screening rule.

:area= (optional)

The ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255** *, C

:id= (optional)

The ITU international ID. The parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7** *, C

:msa= (optional)

The 24-bit ITU-national main signaling area (*msa*) value. It specifies the main signaling area (*msa*) of the point code represented by *msa-ssa-spt*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255** *, C

:narea= (optional)

The new ITU-international area value. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255** *, C

Default: Current value

:nc= (optional)

The network cluster (*nc*) value. This parameter specifies one or more *nc* values for the network indicator (*ni*) and network cluster member (*ncm*) values specified in the **ni** and **ncm** parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255** *, C

:ncm= (optional)

The network cluster member (*ncm*) value. This parameter specifies one or more *ncm* values for the network indicator (*ni*) and network cluster (*nc*) values identified in the **ni** and **nc** parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000-255**.

Range: **0-255** *, C

:ni= (optional)

The network indicator (*ni*) value. This parameter specifies one or more *ni* values for the network cluster (*nc*) and network cluster member (*ncm*) values identified in the **nc** and **ncm** parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000-255**.

Range: **0-255** *, C

:nid= (optional)

The new ITU-international ID value. An asterisk (*) indicates the full range of values from **0-7**.

Range: **0-7**, *, C

Default: Current value

:nmsa= (optional)

The new 24-bit ITU-national main signaling area (*nmsa*) value. It specifies the new main signaling area (*msa*) of the point code represented by *msa-ssa-spt*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255** *, C

:nnc= (optional)

The new network cluster (*nnc*). This parameter specifies one or more *nnc* values for the screening reference specified in the **sr** parameter. It specifies the new network cluster (*nc*) of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255** *, C

Default: Current value

:nncm= (optional)

The new network cluster member (*nncm*). This parameter specifies one or more *ncm* values for the screening reference specified in the **sr** parameter. It specifies the new network cluster member

(*ncm*) of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from 0–255.

Range: 0-255 *, C

Default: Current value

:nni= (optional)

The new network identifier (*nni*). This parameter specifies one or more *nni* values for the screening reference specified in the **sr** parameter. It specifies the new network indicator (*ni*) of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from 000–255.

Range: 0-255 *, C

Default: Current value

:nnpc= (optional)

The new ITU-national point code. An asterisk (*) indicates the full range of values from 00000–16383.

NOTE: Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you use multiple-part ITU national point codes, see "Converting ITU National Point Code Formats" in Appendix A for information on converting the point code format.

Range: 00000-16383 *, C

Default: Current value

:npc= (optional)

The ITU national point code. An asterisk (*) indicates the full range of values from 00000–16383.

Range: 00000-16383 *, C

:npcst= (optional)

New point code subtype. This parameter indicates whether the specified new ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range: none, s

Default: none

:nsfi= (optional)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range: cgpa, fail, stop

cgpa—Allowed CGPA is the next screening category.

fail—Discard the received message.

stop—The gateway screening process ends and the message proceeds through normal routing.

Default: Current value

:nsp= (optional)

New 24-bit ITU national signaling point (*nsp*). This parameter specifies the new signaling point (*sp*) of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from 000–255.

Range: 000-255 *, C

:nsr= (optional)

Next screening reference (*nsr*). The parameter indicates which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. If **nsfi=stop**, the **nsr** parameter cannot be specified.

Range: ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Default: Current value

:nssa= (optional)

The new 24-bit ITU national sub signaling area (*nssa*). It specifies the new sub signaling area (*ssa*) of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from 000-255.

Range: 000-255 *, C

:nzone= (optional)

The new ITU-international zone. The parameter specifies a new zone for the point code represented by *zone-area-id*. An asterisk (*) indicates the full range of values from 0–7.

Range: 0-7 *, C

Default: Current value

:pcst= (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range: none, s

Default: none

:sp= (optional)

The 24-bit ITU national signaling point (*sp*). This parameter specifies the signaling point (*sp*) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from 000-255.

Range: 000-255 *, C

:ssa= (optional)

The 24-bit ITU national sub signaling area (*ssa*). This parameter specifies the sub signaling area (*ssa*) in the point code represented by the format *msa-ssa-sp*. An asterisk (*) indicates the full range of values from 000-255.

Range: 000-255 *, C

:zone= (optional)

The ITU international zone. The parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from 0–7.

Range: 0-7 *, C

Example

chg-scr-

blkopc: sr=iec: ni=240: nc=010: ncm=010: nni=240: nnc=010: nncm=020

chg-scr-blkopc: sr=iec: ni=c: nc=c: ncm=c: nsfi=dpc: nsr=wrld1

chg-scr-blkopc: sr=iec: ni=c: nc=c: ncm=c: nsfi=stop: actname=none

chg-scr-blkopc: sr=bop1: npc=128: nsfi=fail: pcst=s: npcst=none

Dependencies



CAUTION: Even though gateway screening is in the screen test mode, as defined by the parameters *gwsa=off* and *andgws=on*, the gateway screening action in the stop action set specified by the *actname* parameter of the screen set *will* be performed at the end of the screening process.

A complete point code must be specified, using the **ni-nc-ncm**, **zone-area-id**, **msa-ssa-sp**, or **npc** combination unless a value of **c** for “continue” is specified.

A new point code entry must be specified by one, and only one of the four point code parameter combinations: **nni-nnc-nncm**, **nzone-narea-nid**, **nmsa-nssa-nsp**, or **nnpc**. If the new point code

entry is a different point code type than the existing point code entry, all subfields of the new point code type must be specified.

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

At least one optional parameter must be specified.

The blocked OPC specified by **ni-nc-ncm; zone-area-id; msa-ssa-sp**; or the **npc** parameter must already exist in the screening reference or within an existing range of OPCs.

The new blocked OPC or OPC range defined by **ni-nc-ncm; zone-area-id, msa-ssa-sp**, or the **npc** parameter must not already exist in the screening reference or within an existing range of OPCs.

If the **actname** parameter is specified, the **nsr** parameter cannot be specified.

The **actname** parameter value must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the *ACT NAME* field of the **rtrv-gws-actset** command output.

If the **area=*** parameter is specified, then the **id=*** parameter must be specified.

If the **msa=*** parameter is specified, then the **ssa=*** and **sp=*** parameters must be specified.

If the **msa=c** parameter is specified, then the **ssa** and the **sp** parameters must have a value of **c** or must not be specified. If the **msa=c** parameter is specified, and the **ssa** and the **sp** parameters are not specified, then the **ssa** and **sp** parameters default to a value of **c**.

The **nsfi** and **nsr** parameters must point to an existing screen, or the **nsfi=stop** parameter must be specified, and the **nsr** parameter cannot be specified.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000-255**

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc=*** parameter is specified, the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **ncm** parameter is specified as a single value, or a range other than the full range of **000-255**, the **ni** and the **nc** parameters must be specified with a single value.

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range **000-255**.

If the **ni=c** parameter is specified, then the **nc** and the **ncm** parameters must have a value of **c** or must not be specified. If the **ni=c** parameter is specified, and the **nc** and the **ncm** parameters are not specified, then the **nc** and **ncm** parameters default to a value of **c**.

If the **nnc** parameter is specified as a range, the **nncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **nnc** parameter is specified as a single value or a range, a single value must be specified for the **nni** parameter.

If the **nnc=*** parameter is specified, the **nncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **nncm** parameter is specified as a single value, or a range other than the full range of **000-255**, the **nni** and the **nnc** parameters must be specified with a single value.

If the **nni** parameter is specified as an asterisk (**nni=***) or as a range, the **nnc** and **nncm** parameters must be specified as an asterisk or as the full range **000-255**.

If the **nsfi=fail** parameter is specified, then the **nni**, **nc**, **nncm**, **narea**, **nzone**, **nid**, **nmsa**, **nssa**, **nsp**, and **npc** parameters cannot have a value of **c**.

When changing a screening entry, and the **nsfi=fail** parameter is specified, the **nni**, **nnc**, **nncm**, **narea**, **nzone**, **nid**, **nmsa**, **nssa**, **nsp**, and **npc** parameters cannot have a value of **c**.

If the specified **ni-nc-ncm** or **zone-area-id** or **msa-ssa-sp** is equal to **c-c-c** or if the **npc=c** parameter is specified, the **nsfi=fail** parameter cannot be specified, and the **nni**, **nnnc**, **nnncm**, **nzone**, **narea**, **nid**, **nmsa**, **nssa**, **nsp**, and **nnpc** parameters cannot be specified. Point code **c-c-c** and **npc=c** cannot be changed to a numbered point code.

If the specified **ni-nc-ncm**, **zone-area-id**, or **msa-ssa-sp** is not equal to **c-c-c**, or the **npc=c** parameter is not specified, the **nsfi=fail** parameter must be specified, and the **nsr** parameter cannot be specified.

If the **ssa=*** parameter is specified, then the **sp=*** parameter must be specified.

The specified screening reference (**sr**) must already exist in the database.

The Spare Point Code Support feature must be enabled before the **pcst** and **npcst** parameters can be specified.

The **pcst** and **npcst** parameters cannot be specified with **c** for a blocked screen reference (**sr**).

The spare point code subtype prefix (**s-**) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** and **npcst** parameters cannot be specified for ANSI and ITU-N24 point codes.

If the **zone=*** parameter is specified, then the **area=*** and **id=*** parameters must be specified.

If the **zone=c** parameter is specified, then the **area** and the **id** parameters must have a value of **c** or must not be specified. If the **zone=c** parameter is specified, and the **area** and the **id** parameters are not specified, then the **area** and **id** parameters default to a value of **c**.

If the **actname** parameter is specified, then the **nsfi=stop** parameter must be specified.

The value of the **nsfi** parameter must be valid for the BLKOPC entity type.

nsr can not be specified if a stop action is specified.

If the specified **ni-nc-ncm**, **zone-area-id**, or **msa-ssa-sp** equals **c-c-c**, then the **nsfi=fail** parameter cannot be specified.

If the specified **ni-nc-ncm**, **zone-area-id**, or **msa-ssa-sp** is not equal to **c-c-c**, or if the **npc=c** parameter is not specified, then the **nsfi=fail** parameter must be specified, and the **nsr** parameter cannot be specified.

The **nsfi** and **nsr** parameters cannot be specified when changing a screening entry that is other than (**c-c-c**).

The the next screening reference (**nsr**) must be specified when the next screening function identifier (**nsfi**) is not equal to **stop** or **fail**.

Notes

When a blocked OPC screening reference is created, the first entry for a point code must be **c-c-c**, or **c** for the **npc** parameter. Subsequent entries must be specific point codes.

The character **c** is used in the blocked OPC screens to allow the screening process to continue for messages with point codes that do not match any point codes in the blocked OPC screens. When screening for a blocked OPC and the point code being screened does not match any of the point codes in the blocked OPC screens, the message is not rejected and the screening process continues. There must be an entry in the blocked OPC screens to allow the screening process to continue.

This entry consists of a screening reference, point code, **nsfi**, and **nsr**. The point code is **npc=c** or subfields equal to **c-c-c**. When the character **c** is specified, the **nsfi** and **nsr** parameters must be specified.

If the character **c** is specified for the parameters **ni-nc-ncm** or **zone-area-id** or **msa-ssa-sp**, the character **c** is the only value that can be specified for all three parameters. No other values can be used. For example, a point code **c-c-255** is not allowed. The point code must be **c-c-c**. The asterisk (*) value cannot be used with the character **c** (for example, a point code **c-c-*** is not allowed).

When the point code does not match any entries in the blocked OPC screens, the screening process is directed to the screening reference with the point code **c-c-c** or **npc=c**. The **nsfi** and **nsr** in this entry are examined to determine the next step in the screening process.

If the current **ni-nc-ncm** or **zone-area-id** or **msa-ssa-sp** is equal to **c-c-c** or **npc=c**, only the **nsfi** and **nsr** can be changed. Otherwise, only the blocked OPC can be changed.

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, **:ni=025&&100** specifies all network indicators for ANSI point codes from 25 to 100.

An asterisk cannot not be specified for a parameter value in this command unless an asterisk was specified for the parameter value in the original **ent-scr-blkopc** command.

If the screen set reaches 100% capacity (indicated by the “100% full” message), the system will allow subsequent entries. An error will occur, however, when downloading the screen set to the card. Screen sets should not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** and **npcst** parameters indicate whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

```
chg-scr-
blkopc:sr=iec:ni=240:nc=010:ncm=010:nni=240:nnc=010:nncm=020
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
CHG-SCR-BLKOPC: SCREEN SET AFFECTED - IEC 25% FULL
CHG-SCR-BLKOPC: MASP A - COMPLTD
;
```

Legend

CHG-SCR-BLKOPC—The command entered that caused this output. This is echoed to the printer as a reference.

SCREEN SET AFFECTED—Identifies the screen set that was affected by the command. The screen set name is provided.

% FULL—Indicates the relative size of the screen set.

chg-scr-cdpa

Change Allowed Called Party Address

Use this command to change the attributes associated with a specific screening reference in the allowed called party address category. Attributes that can be changed are the point code, subsystem number, next screening function identifier, and next screening reference.

Keyword: **chg-scr-cdpa**

Related Commands: **dlt-scr-cdpa**, **ent-scr-cdpa**, **rtrv-scr-cdpa**

Command Class: Database Administration

Parameters

:sr= (mandatory)

Screening reference. This parameter specifies the point code's unique screening reference name.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

:ssn= (mandatory)

Subsystem number. An asterisk (*) indicates the full range of values from 1-255.

Range: 1-255 *

:actname= (optional)

Action name. This parameter specifies the name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: ayyyyy, none

1 alphabetic character followed by up to 5 alphanumeric characters.

none—Remove an existing gateway screening stop action set from a gateway screening rule.

:area= (optional)

ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000–255**.

Range: 000-255 *

:id= (optional)

ITU international ID. This parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: 0-7, *

:msa= (optional)

24-bit ITU-national main signaling area (*msa*) value. This parameter specifies the main signaling area (*msa*) of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000–255**.

Range: 000-255 *

:narea= (optional)

New ITU-international area value. An asterisk (*) indicates the full range of values from **000–255**.

Range: 000-255 *

Default: Current value

:nc= (optional)

Network cluster (*nc*) value. This parameter specifies one or more *nc* values for the network indicator (*ni*) and network cluster member (*ncm*) values specified in the **ni** and **ncm** parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: 000-255 *

:ncm= (optional)

Network cluster member (*ncm*) value. This parameter specifies one or more *ncm* values for the network indicator (*ni*) and network cluster (*nc*) values identified in the **ni** and **nc** parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: 0-255 *

:ni= (optional)

Network indicator (*ni*) value. This parameter specifies one or more *ni* values for the network cluster (*nc*) and network cluster member (*ncm*) values identified in the **nc** and **ncm** parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: 0-255 *

:nid= (optional)

New ITU-international ID value. An asterisk (*) indicates the full range of values from **0–7**.

Range: 0-7, *

Default: Current value

:nmsa= (optional)

New 24-bit ITU-national main signaling area (*nmsa*) value. This parameter specifies the new main signaling area (*msa*) of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:nnc= (optional)

New network cluster (*nnc*). This parameter specifies one or more *nnc* values for the screening reference specified in the **sr** parameter. It specifies the new network cluster (*nc*) of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

Default: Current value

:nncm= (optional)

New network cluster member (*nncm*). This parameter specifies one or more *ncm* values for the screening reference specified in the **sr** parameter. It specifies the new network cluster member (*ncm*) of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0-255**.

Range: **0-255 ***

Default: Current value

:nni= (optional)

New network identifier (*nni*). This parameter specifies one or more *nni* values for the screening reference specified in the **sr** parameter. It specifies the new network indicator (*ni*) of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000-255**.

Range: **0-255 ***

Default: Current value

:nnpc= (optional)

New ITU-national point code. An asterisk (*) indicates the full range of values from **00000-16383**.

NOTE: Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you use multiple-part ITU national point codes, see "Converting ITU National Point Code Formats" in Appendix A for information on converting the point code format.

Range: **00000-16383 ***

Default: Current value

:npc= (optional)

ITU national point code. An asterisk (*) indicates the full range of values from **00000-16383**.

Range: **00000-16383 ***

:npcst= (optional)

New point code subtype. This parameter indicates whether the specified new ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range: **none, s**

Default: **none**

:nscmgfid= (optional)

New SCMG format ID. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **1-255**.

Range: **1-255 ***

Default: Current value

:nsfi= (optional)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range: **aftpc, stop**

aftpc—Allowed affected point code is the next screening category.

stop—The gateway screening process ends and the message proceeds through normal routing.

Default: Current value

:nsp= (optional)

New 24-bit ITU national signaling point (*nsp*). This parameter specifies the new signaling point (*sp*) of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:nsr= (optional)

Next screening reference (*nsr*). The parameter indicates which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. If **nsfi=stop**, the **nsr** parameter cannot be specified.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

Default: Current value

:nssa= (optional)

New 24-bit ITU national sub signaling area (*nssa*). This parameter specifies the new sub signaling area (*ssa*) of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:nssn= (optional)

New subsystem number. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

Default: Current value

:nzone= (optional)

New ITU-international zone. This parameter specifies a new zone for the point code represented by *zone-area-id*. An asterisk (*) indicates the full range of values from **0-7**.

Range: **0-7, *, C**

Default: Current value

:pcst= (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (**s-**).

Range: **none, s**

Default: **none**

:scmgfid= (optional)

The SCCP management (SCMG) format ID, which consists of a one-octet field and uniquely defines the function and format of each SCMG message. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **1-255**. The following SCCP message types are screened against the Allowed CDPA table and all others are passed: UDT, UDTS, XUDT, XUDTS.

Range: **1-255 ***

:sp= (optional)

24-bit ITU national signaling point (*sp*). This parameter specifies the signaling point (*sp*) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:ssa= (optional)

24-bit ITU national sub signaling area (*ssa*). This parameter specifies the sub signaling area (*ssa*) in the point code represented by the format *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:zone= (optional)

ITU international zone. This parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0-7**.

Range: **0-7, ***

Example

chg-scr-

cdpa:sr=cdp1:ni=5:nc=5:ncm=5:ssn=1:scmgfid=4:nsfi=stop:nni=6:nncm=3 :nssn=*

chg-scr-

cdpa:sr=cdp1:ni=c:nc=c:ncm=c:ssn=1:scmgfid=3:nsfi=stop:actname=copy

chg-scr-

cgpa:sr=cgpa:zone=1:area=2:id=3:ssn=1:sccpmt=9:ri=*:nsfi=stop:pcst=s :npcst=none

Dependencies



CAUTION: Even though gateway screening is in the screen test mode, as defined by the parameters **gwsa=off** and **gws=on**, the gateway screening action in the stop action set specified by the **actname** parameter of the screen set *will* be performed at the end of the screening process.

A complete point code must be specified, and must be one and only one of the four point code parameter combinations: **ni-nc-ncm**; **zone-area-id**; **msa-ssa-sp**; or **npc**, except in the special case of entering **c** for "continue."

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

At least one optional parameter must be specified.

The CDPA point code, **scmgfid**, and **ssn** to be changed must already exist in the CDPA entity set.

The new CDPA point code, **scmgfid**, and **ssn** cannot already exist in the CDPA entity set.

If the **actname** parameter is specified, the **nsfi=stop** parameter must be specified.

If the **actname** parameter is specified, the **nsr** parameter cannot be specified.

The **actname** parameter value must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the **ACT NAME** field of the **rtrv-gws-actset** command output.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000-255**

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc=*** parameter is specified, the **ncm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **ncm** parameter is specified as a single value, or a range other than the full range of **000–255**, the **ni** and the **nc** parameters must be specified with a single value.

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range **000–255**.

If the **nnc** parameter is specified as a range, the **nncm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **nnc** parameter is specified as a single value or a range, a single value must be specified for the **nni** parameter.

If the **nnc=*** parameter is specified, the **nnm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **nncm** parameter is specified as a single value, or a range other than the full range of **000–255**, the **nni** and the **nnc** parameters must be specified with a single value.

If the **nni** parameter is specified as an asterisk (**nni=***) or as a range, the **nnc** and **nncm** parameters must be specified as an asterisk or as the full range **000–255**.

If the **nsfi=aftpc** parameter is specified, the **ssn=1** parameter must be specified.

If the **nsfi=stop** parameter is specified, the **nsr** parameter cannot be specified.

If the **nsfi** parameter is specified with a value other than **stop**, the **nsr** parameter must be specified.

The next screening function identifier (**nsfi**) and the next screening reference (**nsr**) must point to an existing screen, or the **nsfi** must be equal to **stop** and the **nsr** must not be specified.

The specified screening reference (**sr**) must already exist in the database.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The spare point code subtype prefix (**s-**) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** and **npcst** parameters cannot be specified for ANSI and ITU-N24 point codes.

If the **ssn** parameter is specified with a value other than **1**, the **scmgfid** parameter cannot be specified.

If the **ssn=1** parameter is specified, the **scmgfid** parameter must be specified.

The specified value for the **nsfi** parameter is not valid for **cdpa** screen.

Notes

A range of values is specified by separating the values that define the range by two ampersands (**&&**); for example, **:ni=025&&100** specifies all network indicators for ANSI point codes from **25** to **100**.

If the screen set reaches 100% capacity (indicated by the 100% Full message), the system will allow subsequent entries. An error will occur, however, when downloading the screen set to a LIM. Screen sets should not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

An asterisk can be specified for a parameter value in the **chg-scr-cdpa** and **dlt-scr-cdpa** commands *only* if that parameter value was specified as an asterisk in the **ent-scr-cdpa** command to define the parameter value.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

```

chg-scr-
cdpa:sr=cdp1:ni=5:nc=5:ncm=5:ssn=1:scmgfid=4:nsfi=stop:nni=6:nncm
=3 :nssn=*

rlghncxa03w 04-01-14 15:35:30 EST EAGLE 31.3.0
CHG-SCR-CDPA: MASP A - COMPLTD
;

```

chg-scr-cgpa**Change Allowed Calling Party Address**

Use this command to change the attributes associated with a specific screening reference in the allowed calling party address category. Attributes that can be changed are the point code, subsystem number, routing indicator, next screening function identifier, and next screening reference.

Keyword: **chg-scr-cgpa**

Related Commands: **dlt-scr-cgpa**, **ent-scr-cgpa**, **rtrv-scr-cgpa**

Command Class: Database Administration

Parameters

NOTE: At least one of these parameters must be specified: nsfi.

:ri= (mandatory)

Routing indicator. This parameter specifies routing instructions to the receiving signaling point. In gateway screening, messages may be screened based on the value of the routing indicator.

Range: **dpc, gt, ***

dpc—Allow a called party address with a routing indicator value of “DPC/SSN.”

gt—Screening stops and gateway screening is bypassed as a forced pass.

*****—Allow both routing indicator values.

:sccpmt= (mandatory)

SCCP message type. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values.

Range: **9, 10, 17, 18, ***

9, *—UDT

10, *—UDTS

17, *—XUDT

18, *—XUDTS

:sr= (mandatory)

Screening reference. This parameter specifies the point code’s unique screening reference name.

Range: **ayyy**

1 alphabetic character followed by up to 3 alphanumeric characters

:ssn= (mandatory)

Subsystem number. An asterisk (*) indicates the full range of values from 1-255.

Range: **1-255 ***

:actname= (optional)

Action name. This parameter specifies the name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: **ayyyyy, none**

1 alphabetic character followed by up to 5 alphanumeric characters.

none—remove an existing gateway screening stop action set from a gateway screening rule.

:area= (optional)

ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:id= (optional)

ITU international ID. This parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7 ***

:msa= (optional)

24-bit ITU-national main signaling area (*msa*) value. It specifies the main signaling area (*msa*) of the point code represented by *msa-ssa-spt*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:narea= (optional)

New ITU-international area value. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

Default: Current value

:nc= (optional)

Network cluster (*nc*) value. This parameter specifies one or more *nc* values for the network indicator (*ni*) and network cluster member (*ncm*) values specified in the **ni** and **ncm** parameters. *It specifies the nc of the point code represented by ni-nc-ncm. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from 000–255.*

Range: **000-255 ***

:ncm= (optional)

Network cluster member (*ncm*) value. This parameter specifies one or more *ncm* values for the network indicator (*ni*) and network cluster (*nc*) values identified in the **ni** and **nc** parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 ***

:ni= (optional)

Network indicator (*ni*) value. This parameter specifies one or more *ni* values for the network cluster (*nc*) and network cluster member (*ncm*) values identified in the **nc** and **ncm** parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 ***

:nid= (optional)

New ITU-international ID value. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7 ***

Default: Current value

:nmsa= (optional)

New 24-bit ITU-national main signaling area (*nmsa*) value. This parameter specifies the new main signaling area (*msa*) of the point code represented by *msa-ssa-spt*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:nnc= (optional)

New network cluster (*nnc*). This parameter specifies one or more *nnc* values for the screening reference specified in the **sr** parameter. It specifies the new network cluster (*nc*) of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

Default: Current value

:nncm= (optional)

New network cluster member (*nncm*). This parameter specifies one or more *ncm* values for the screening reference specified in the **sr** parameter. It specifies the new network cluster member (*ncm*) of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0–255**.

Range: **0-255 ***

Default: Current value

:nni= (optional)

New network identifier (*nni*). This parameter specifies one or more *nni* values for the screening reference specified in the **sr** parameter. It specifies the new network indicator (*ni*) of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 ***

Default: Current value

:nnpc= (optional)

New ITU-national point code. An asterisk (*) indicates the full range of values from **00000–16383**.

NOTE: Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you use multiple-part ITU national point codes, see "Converting ITU National Point Code Formats" in Appendix A for information on converting the point code format.

Range: **00000-16383 ***

Default: Current value

:npc= (optional)

ITU national point code. An asterisk (*) indicates the full range of values from **00000–16383**.

Range: **00000-16383 ***

:npcst= (optional)

New point code subtype. This parameter indicates whether the specified new ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range: **none, s**

Default: **none**

:nri= (optional)

New routing indicator that provides routing instructions to the receiving signaling point. In gateway screening, messages may be screened based on the value of the routing indicator. An asterisk (*) indicates that both routing indicator values (**gt** and **dpc**) will be accepted in the gateway screening process.

Range: **dpc, gt, ***

dpc—Allow a called party address with a routing indicator value of “DPC/SSN.”

gt—Screening stops and gateway screening is bypassed as a forced pass.

Default: Current value

:nsccpmt= (optional)

New SCCP message type. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values.

Range: 9, 10, 17, 18, *

Default: Current value

:nsfi= (optional)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range: cdpa, stop, tt

cdpa—Allowed called party address is the next screening category.

stop—The gateway screening process ends and the message proceeds through normal routing.

tt—Allowed translation type is the next screening category.

Default: Current value

:nsp= (optional)

New 24-bit ITU national signaling point (*nsp*). This parameter specifies the new signaling point *sp* of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from 000-255.

Range: 000-255 *

:nsr= (optional)

Next screening reference (*nsr*). This parameter specifies which screening reference in the specified screening category (*nsfi*) is to be used in the screening process. If **nsfi=stop**, the **nsr** parameter cannot be specified.

Range: ayy

1 alphabetic character followed by up to 3 alphanumeric characters

Default: Current value

:nssa= (optional)

New 24-bit ITU national sub signaling area (*nssa*). This parameter specifies the new sub signaling area (*ssa*) of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from 000-255.

Range: 000-255 *

:nssn= (optional)

New subsystem number. An asterisk (*) indicates the full range of values from 000-255.

Range: 000-255 *

Default: Current value

:nzone= (optional)

New ITU-international zone. This parameter specifies a new zone for the point code represented by *zone-area-id*. An asterisk (*) indicates the full range of values from 0-7.

Range: 0-7, *, C

Default: Current value

:pcst= (optional)

Point code subtype. This parameter specifies whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (*s-*).

Range: none, s

Default: none

:sp= (optional)

24-bit ITU national signaling point (*sp*). This parameter specifies the signaling point (*sp*) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from 000-255.

Range: 000-255 *

:ssa= (optional)

24-bit ITU national sub signaling area (*ssa*). This parameter specifies the sub signaling area (*ssa*) in the point code represented by the format *msa-ssa-sp*. An asterisk (*) indicates the full range of values from 000-255.

Range: 000-255 *

:zone= (optional)

ITU international zone. This parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from 0-7.

Range: 0-7 *

Example

```
chg-scr-cgpa:sr=iec:ni=240:nc=010:ncm=010:ssn=3:ri=dpc
```

```
chg-scr-
```

```
cgpa:sr=iec:ni=240:nc=010:ncm=010:ssn=3:ri=dpc:nsfi=stop:actname=copy
```

```
chg-scr-
```

```
cgpa:sr=cdp1:ni=5:nc=5:ncm=5:ssn=1:ri=dpc:sccpmt=009:nsfi=sdpa:nsr=cdp1
```

```
chg-scr-
```

```
cgpa:sr=cgpa:zone=1:area=2:id=3:ssn=1:sccpmt=9:ri=*:nsfi=stop:pcst=s :npcst=none
```

Dependencies



CAUTION: Even though gateway screening is in the screen test mode, as defined by the parameters **gwsa=off** and **gwsn=on**, the gateway screening action in the stop action set specified by the **actname** parameter of the screen set will be performed at the end of the screening process.

A complete point code must be specified, and must be one, and only one of the four point code parameter combinations: **ni-nc-ncm**; **zone-area-id**; **msa-ssa-sp**; or **npc**.

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

At least one optional parameter must be specified.

The CGPA point code or range of point codes, **ri**, **sccpmt**, and subsystem number or numbers to be changed must exist in the CGPA entity set.

The new CGPA point code and subsystem number cannot already exist in the CGPA entity set.

If the **actname** parameter is specified, the **nsfi=stop** parameter must be specified.

If the **actname** parameter is specified, the **nsr** parameter cannot be specified.

The value of the **actname** parameter must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the **ACT NAME** field of the **rtrv-gws-actset** command output.

The next screening function identifier (**nsfi**) and the next screening reference (**nsr**) must point to an existing screen, or the **nsfi** must be equal to **stop** and the **nsr** must not be specified.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000-255**

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc** parameter is specified as an asterisk (**nc=***), the **ncm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **ncm** parameter is specified as a single value, or a range other than the full range of **000–255**, the **ni** and the **nc** parameters must be specified with a single value.

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range **000–255**.

If the **nnc** parameter is specified as a range, the **nncm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **nnc** parameter is specified as a single value or a range, a single value must be specified for the **nni** parameter.

If the **nnc** parameter is specified as an asterisk (**nnc=***), the **nnm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **nncm** parameter is specified as a single value, or a range other than the full range of **000–255**, the **nni** and the **nnc** parameters must be specified with a single value.

If the **nni** parameter is specified as an asterisk (**nni=***) or as a range, the **nnc** and **nncm** parameters must be specified as an asterisk or as the full range **000–255**.

The **nsfi=cdpa** parameter can be specified only when the **ri=*** or the **ri=dpc** parameter is specified.

The **nsfi=tt** parameter can be specified only when the **ri=*** or the **ri=gt** parameter is specified.

If the **nsfi=stop** parameter is specified, the **nsr** parameter cannot be specified.

If the **nsfi** parameter has a value other than **stop**, the **nsr** parameter must be specified.

The specified screening reference (**sr**) must already exist in the database.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The spare point code subtype prefix (**s-**) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** and **npcst** parameters cannot be specified for ANSI and ITU-N24 point codes.

The **nsccpmt** and **sccpmt** parameter value must be specified in the range of {**9, 10, 17, 18, and ***}.

The specified value for the **nsfi** parameter is not valid for **cgpa** screen.

The new CGPA point code, **ri**, **sccpmt**, and subsystem number (**ssn**) to be added can not already exist in the CGPA entity set.

Notes

A range of values is specified by separating the values that define the range by two ampersands (**&&**); for example, **:ni=025&&100** specifies all network indicators for ANSI point codes from **25** to **100**.

If the screen set reaches 100% capacity (indicated by the 100% Full message), the system will allow subsequent entries. An error will occur, however, when downloading the screen set to a LIM. Screen sets should not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

An asterisk can be specified for a parameter value in the **chg-scr-cgpa** and **dlt-scr-cgpa** commands *only* if that parameter value was specified as an asterisk in the **ent-scr-cgpa** command to define the parameter value.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

```

chg-scr-cgpa:sr=iec:ni=240:nc=010:ncm=010:ssn=3:ri=dpc
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
CHG-SCR-CGPA: SCREEN SET AFFECTED - IEC 25% FULL
CHG-SCR-CGPA: MASP A - COMPLTD
;

```

Legend

CHG-SCR-CGPA—The command entered that caused this output. This is echoed to the printer as a reference.

SCREEN SET AFFECTED—Identifies the screen set that was affected by the command. The screen set name is shown.

% FULL—Indicates the relative size of the screen set.

chg-scr-destfld**Change an Allowed DESTFLD**

Use this command to change the attributes of a specific screening reference in the allowed affected destination field (DESTFLD) category. Attributes that can be changed are the allowed affected destination point codes.

Keyword: **chg-scr-destfld**

Related Commands: **dlt-scr-destfld**, **ent-scr-destfld**, **rtrv-scr-destfld**

Command Class: Database Administration

Parameters

:sr= (mandatory)

Screening reference. This parameter specifies the point code's unique screening reference name.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

:actname= (optional)

Action name. This parameter specifies the name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: *ayyyyy*, **none**

1 alphabetic character followed by up to 5 alphanumeric characters.

none—remove an existing gateway screening stop action set from a gateway screening rule.

:area= (optional)

ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:id= (optional)

ITU international ID. This parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7, ***

:msa= (optional)

24-bit ITU-national main signaling area (*msa*) value. This parameter specifies the main signaling area (*msa*) of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000–255**.

Range: 000-255 *

:narea= (optional)

New ITU-international area value. An asterisk (*) indicates the full range of values from 000–255.

Range: 000-255 *

Default: Current value

:nc= (optional)

Network cluster (*nc*) value. This parameter specifies one or more *nc* values for the network indicator (*ni*) and network cluster member (*ncm*) values specified in the **ni** and **ncm** parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from 000–255.

Range: 000-255 *

:ncm= (optional)

Network cluster member (*ncm*) value. This parameter specifies one or more *ncm* values for the network indicator (*ni*) and network cluster (*nc*) values identified in the **ni** and **nc** parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from 000–255.

Range: 0-255 *

:ni= (optional)

Network indicator (*ni*) value. This parameter specifies one or more *ni* values for the network cluster (*nc*) and network cluster member (*ncm*) values identified in the **nc** and **ncm** parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from 000–255.

Range: 0-255 *

:nid= (optional)

New ITU-international ID value. An asterisk (*) indicates the full range of values from 0–7.

Range: 0-7 *

Default: Current value

:nmsa= (optional)

New 24-bit ITU-national main signaling area (*nmsa*) value. This parameter specifies the new main signaling area (*msa*) of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from 000–255.

Range: 000-255 *

:nnc= (optional)

New network cluster (*nnc*). This parameter specifies one or more *nnc* values for the screening reference specified in the **sr** parameter. It specifies the new network cluster (*nc*) of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from 000–255.

Range: 000-255 *

Default: Current value

:nncm= (optional)

New network cluster member (*nncm*). This parameter specifies one or more *ncm* values for the screening reference specified in the **sr** parameter. It specifies the new network cluster member (*ncm*) of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from 0–255.

Range: 0-255 *

Default: Current value

:nni= (optional)

New network identifier (*nni*). This parameter specifies one or more *nni* values for the screening reference specified in the **sr** parameter. It specifies the new network indicator (*ni*) of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 ***

Default: Current value

:nnpc= (optional)

New ITU-national point code. An asterisk (*) indicates the full range of values from **00000–16383**.

NOTE: Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you use multiple-part ITU national point codes, see "Converting ITU National Point Code Formats" in Appendix A for information on converting the point code format.

Range: **00000-16383 ***

Default: Current value

:npc= (optional)

ITU national point code. An asterisk (*) indicates the full range of values from **00000–16383**.

Range: **00000-16383 ***

:npcst= (optional)

New point code subtype. This parameter indicates whether the specified new ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range: **none, s**

Default: **none**

:nsfi= (optional)

This parameter specifies the next screening category that is used in the gateway screening process. If specified, the parameter value must be **stop**.

Range: **stop**

stop—The gateway screening process ends and the message proceeds through normal routing.

Default: Current value

:nsp= (optional)

New 24-bit ITU national signaling point (*nsp*). This parameter specifies the new signaling point (*sp*) of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:nssa= (optional)

New 24-bit ITU national sub signaling area (*ssa*). This parameter specifies the new sub signaling area (*ssa*) of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:nzone= (optional)

New ITU-international zone. This parameter specifies a new zone for the point code represented by *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7, *, C**

Default: Current value

:pcst= (optional)

Point code subtype. This parameter specifies whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range: none, s

Default: none

:sp= (optional)

24-bit ITU national signaling point (sp). This parameter specifies the signaling point (sp) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: 000-255 *

:ssa= (optional)

24-bit ITU national sub signaling area (ssa). This parameter specifies the sub signaling area (ssa) in the point code represented by the format *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: 000-255 *

:zone= (optional)

ITU international zone. This parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0-7**.

Range: 0-7, *

Example

chg-scr-destfld:sr=iec:ni=240:nc=010:ncm=019&&020:nncm=021

chg-scr-

destfld:sr=iec:ni=240:nc=010:ncm=019&&020:nsfi=stop:actname=none

chg-scr-

destfld:sr=dst1:zone=1:area=2:id=3:nsfi=stop:pcst=s:npcst=none

Dependencies



CAUTION: Even though gateway screening is in the screen test mode, as defined by the parameters **gwsa=off** and **andgws=on**, the gateway screening action in the stop action set specified by the **actname** parameter of the screen set *will* be performed at the end of the screening process.

A complete point code must be specified, using the **ni-nc-ncm**, **zone-area-id**, **msa-ssa-sp**, or **npc** combination unless a value of **c** for “continue” is specified.

A new point code entry must be specified by one, and only one of the four point code parameter combinations: **nni-nnc-nncm**, **nzone-narea-nid**, **nmsa-nssa-nsp**, or **nnpc**. If the new point code entry is a different point code type than the existing point code entry, all subfields of the new point code type must be specified.

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

At least one optional parameter must be specified.

The new DESTFLD defined by **ni-nc-ncm**, **zone-area-id**, **msa-ssa-sp**, or the **npc** parameter must not already exist in the screening reference.

If the **actname** parameter is specified, the **nsfi=stop** parameter must be specified.

If the **actname** parameter is specified, the **nsr** parameter cannot be specified.

The value of the **actname** parameter must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the **ACT NAME** field of the **rtrv-gws-actset** command output.

If the **zone=*** parameter is specified, then the **area=*** and the **id=*** parameters must be specified.

If the **area=*** parameter is specified, then the **id=*** parameter must be specified.

If the **msa=*** parameter is specified, then the **ssa=*** and the **sp=*** parameters must be specified.

If the **ssa=*** parameter is specified, then the **sp=*** parameter must be specified.

If the **nsfi=stop** parameter is specified, then the **nsr** parameter cannot be specified.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc=*** parameter is specified, the **ncm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **ncm** parameter is specified as a single value, or a range other than the full range of **000–255**, the **ni** and the **nc** parameters must be specified with a single value.

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range **000–255**.

If the **nnc** parameter is specified as a range, the **nncm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **nnc** parameter is specified as a single value or a range, a single value must be specified for the **nni** parameter.

If the **nnc** parameter is specified as an asterisk (**nnc=***), the **nnm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **nncm** parameter is specified as a single value, or a range other than the full range of **000–255**, the **nni** and the **nnc** parameters must be specified with a single value.

If the **nni** parameter is specified as an asterisk (**nni=***) or as a range, the **nnc** and **nncm** parameters must be specified as an asterisk or as the full range **000–255**.

The **nsfi=stop** parameter must be specified in the command

The entry specified by **ni-nc-ncm**, **zone-area-id**, **msa-ssa-sp**, or the **npc** parameter must already exist in the screening reference.

The specified screening reference (**sr**) must already exist in the database.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The spare point code subtype prefix (**s-**) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** and **npcst** parameters cannot be specified for ANSI and ITU-N24 point codes.

If the **nsfi=fail** parameter is specified, then the **nni**, **nc**, **nncm**, **narea**, **nzone**, **nid**, **nmsa**, **nssa**, **nsp**, and **npc** parameters cannot have a value of **c**.

Notes

A range of values is specified by separating the values that define the range by two ampersands (**&&**); for example, **:ni=025&&100** specifies all network indicators for ANSI point codes from **25** to **100**.

An asterisk can be specified for a parameter value in the **chg-scr-destfld** and **dlt-scr-destfld** commands *only* if that parameter value was specified as an asterisk in the **ent-scr-destfld** command to define the parameter value.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** and **npcst** parameters indicate whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

chg-scr-destfld:sr=iec:ni=240:nc=010:ncm=019&&020:nncm=021

```
rlghncxa03w 04-01-13 11:49:47 EST EAGLE 31.3.0
CHG-SCR-DESTFLD: SCREEN SET AFFECTED - SS01 25% FULL
CHG-SCR-DESTFLD: MASP A - COMPLTD
```

;

chg-scr-dpc

Change Allowed DPC

Use this command to change the attributes of a specific screening reference in the allowed DPC category. Attributes that may be changed are the point code, next screening function identifier, and the next screening reference.

Keyword: chg-scr-dpc

Related Commands: dlt-scr-dpc, ent-scr-dpc, rtrv-scr-dpc

Command Class: Database Administration

Parameters

NOTE: At least one of these parameters must be specified: nsfi.

:sr= (mandatory)

Screening reference. This parameter specifies the point code's unique screening reference name.

Range: ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

:actname= (optional)

Action name. This parameter specifies the name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: ayyyyy, none

1 alphabetic character followed by up to 5 alphanumeric characters.

none—remove an existing gateway screening stop action set from a gateway screening rule.

:area= (optional)

ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000–255**.

Range: 000-255 *

:id= (optional)

ITU international ID. The parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: 0-7, *

:msa= (optional)

24-bit ITU-national main signaling area (*msa*) value. This parameter specifies the main signaling area (*msa*) of the point code represented by *msa-ssa-spt*. An asterisk (*) indicates the full range of values from **000–255**.

Range: 000-255 *

:narea= (optional)

New ITU-international area value. An asterisk (*) indicates the full range of values from **000–255**.

Range: 000-255 *

Default: Current value

:nc= (optional)

Network cluster (*nc*) value. This parameter specifies one or more *nc* values for the network indicator (*ni*) and network cluster member (*ncm*) values specified in the **ni** and **ncm** parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:ncm= (optional)

Network cluster member (*ncm*) value. This parameter specifies one or more *ncm* values for the network indicator (*ni*) and network cluster (*nc*) values identified in the **ni** and **nc** parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 ***

:ni= (optional)

Network indicator (*ni*) value. This parameter specifies one or more *ni* values for the network cluster (*nc*) and network cluster member (*ncm*) values identified in the **nc** and **ncm** parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 ***

:nid= (optional)

New ITU-international ID value. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7, ***

Default: Current value

:nmsa= (optional)

New 24-bit ITU-national main signaling area (*nmsa*) value. This parameter specifies the new main signaling area (*msa*) of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:nnc= (optional)

New network cluster (*nnc*). This parameter specifies one or more *nnc* values for the screening reference specified in the **sr** parameter. It specifies the new network cluster (*nc*) of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

Default: Current value

:nncm= (optional)

New network cluster member (*nncm*). This parameter specifies one or more *ncm* values for the screening reference specified in the **sr** parameter. It specifies the new network cluster member (*ncm*) of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0–255**.

Range: **0-255 ***

Default: Current value

:nni= (optional)

New network identifier (*nni*). This parameter specifies one or more *nni* values for the screening reference specified in the **sr** parameter. It specifies the new network indicator (*ni*) of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 ***

Default: Current value

:nnpc= (optional)

New ITU-national point code. An asterisk (*) indicates the full range of values from **00000–16383**.

NOTE: Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you use multiple-part ITU national point codes, see "Converting ITU National Point Code Formats" in Appendix A for information on converting the point code format.

Range: **00000-16383 ***

Default: Current value

:npc= (optional)

ITU national point code. An asterisk (*) indicates the full range of values from **00000–16383**.

Range: **00000-16383 ***

:npcst= (optional)

New point code subtype. This parameter indicates whether the specified new ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range: **none, s**

Default: **none**

:nsfi= (optional)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range: **blkdpc, cgpa, destfld, isup, stop**

blkdpc—Blocked DPC is the next screening category.

cgpa—Allowed CGPA is the next screening category.

destfld—Allowed destination field (DESTFLD) is the next screening category.

isup—ISUP message type (ISUP) is the next screening category.

stop—The gateway screening process ends and the message proceeds through normal routing.

Default: Current value

:nsp= (optional)

The new 24-bit ITU national signaling point (*nsp*). It specifies the new signaling point (*sp*) of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:nsr= (optional)

Next screening reference (*nsr*). The parameter indicates which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. If **nsfi=stop**, the **nsr** parameter cannot be specified.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

Default: Current value

:nssa= (optional)

New 24-bit ITU national sub signaling area (*nssa*). This parameter specifies the new sub signaling area (*ssa*) of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:nzone= (optional)

New ITU-international zone. This parameter specifies a new zone for the point code represented by *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7 *, C**

Default: Current value

:pcst= (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range: none, s

Default: none

:sp= (optional)

24-bit ITU national signaling point (sp). This parameter specifies the signaling point (sp) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: 000-255 *

:ssa= (optional)

24-bit ITU national sub signaling area (ssa). This parameter specifies the sub signaling area (ssa) in the point code represented by the format *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: 000-255 *

:zone= (optional)

The ITU international zone. The parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0-7**.

Range: 0-7, *

Example

```
chg-scr-dpc:sr=iec:ni=240:nc=010:ncm=010:nni=240:nnc=003:nncm=030
```

```
chg-scr-
```

```
dpc:sr=iec:ni=240:nc=010:ncm=010:nni=240:nnc=003:nncm=030:nsfi=stop
:actname=none
```

```
chg-scr-dpc:sr=dpc1:npc=128:nsfi=fail:pcst=s:npcst=none
```

Dependencies



CAUTION: Even though gateway screening is in the screen test mode, as defined by the parameters **gwsa=off** and **gwsn=on**, the gateway screening action in the stop action set specified by the **actname** parameter of the screen set *will* be performed at the end of the screening process.

A complete point code must be specified, using the **ni-nc-ncm**, **zone-area-id**, **msa-ssa-sp**, or **npc** combination unless a value of **c** for “continue” is specified.

A new point code entry must be specified by one, and only one of the four point code parameter combinations: **nni-nnc-nncm**, **nzone-narea-nid**, **nmsa-nssa-nsp**, or **nnpc**. If the new point code entry is a different point code type than the existing point code entry, all subfields of the new point code type must be specified.

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

At least one optional parameter must be specified.

The DPC specified by **ni-nc-ncm**, **zone-area-id**, **msa-ssa-sp**, or the **npc** parameter must already exist in the screening reference or within an existing range of DPCs.

The new DPC or DPC range defined by **ni-nc-ncm**, **zone-area-id**, **msa-ssa-sp**, or the **npc** parameter must not already exist in the screening reference or within an existing range of DPCs.

If the **actname** parameter is specified, then the **nsfi=stop** parameter must be specified.

If the **actname** parameter is specified, the **nsr** parameter cannot be specified.

The **actname** parameter value must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the *ACT NAME* field of the **rtrv-gws-actset** command output.

If the **zone=*** parameter is specified, then the **area=*** and the **id=*** parameters must be specified.

If the **area=*** parameter is specified, then the **id=*** parameter must be specified.

If the **msa=*** parameter is specified, then the **ssa=*** and the **sp=*** parameters must be specified.

If the **ssa=*** parameter is specified, then the **sp=*** parameter must be specified.

The **nsfi** and **nsr** parameters must point to an existing screen, or the **nsfi=stop** parameter must be specified, and the **nsr** parameter cannot be specified.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc=*** parameter is specified, the **ncm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **ncm** parameter is specified as a single value, or a range other than the full range of **000–255**, the **ni** and the **nc** parameters must be specified with a single value.

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range **000–255**.

If the **nnc** parameter is specified as a range, the **nncm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **nnc** parameter is specified as a single value or a range, a single value must be specified for the **nni** parameter.

If the **nnc=*** parameter is specified, the **nncm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **nncm** parameter is specified as a single value, or a range other than the full range of **000–255**, the **nni** and the **nnc** parameters must be specified with a single value.

If the **nni** parameter is specified as an asterisk (**nni=***) or as a range, the **nnc** and **nncm** parameters must be specified as an asterisk or as the full range **000–255**.

If the **nsfi=stop** parameter is not specified, then the **nsr** parameter must be specified.

The value of the **sr** parameter must already exist in the BLKDPC entity set.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The spare point code subtype prefix (s-) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** and **npcst** parameters cannot be specified for ANSI and ITU-N24 point codes.

If the **nsfi=fail** parameter is specified, then the **nni**, **nc**, **nncm**, **narea**, **nzone**, **nid**, **nmsa**, **nssa**, **nsp**, and **npc** parameters cannot have a value of **c**.

Notes

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, **:ni=025&&100** specifies all network indicators for ANSI point codes from 25 to 100.

An asterisk cannot not be specified for a parameter value in this command unless an asterisk was specified for the parameter value in the original **ent-scr-dpc** command.

If the screen set reaches 100% capacity (indicated by the “100% full” message), the system will allow subsequent entries. An error will occur, however, when downloading the screen set to the card. Screen sets should not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** and **npcst** parameters indicate whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

```
chg-scr-dpc:sr=iec:ni=240:nc=010:ncm=010:nni=240:nnc=003:nncm=030
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
CHG-SCR-DPC: SCREEN SET AFFECTED - IEC 25% FULL
CHG-SCR-DPC: MASP A - COMPLTD
;
```

Legend

CHG-SCR-DPC—The command entered that caused this output. This is echoed to the printer as a reference.

SCREEN SET AFFECTED—Identifies the screen set that was affected by the command. The screen set name is provided.

% FULL—Indicates the relative size of the screen set.

chg-scr-isup

Change Allowed ISUP Screening Reference

Use this command to change the attributes associated with a specific allowed ISUP screening reference in the Allowed ISUP entity set.

Keyword: chg-scr-isup

Related Commands: dlt-scr-isup, ent-scr-isup, rtrv-scr-isup

Command Class: Database Administration

Parameters

:isupmt/tupmt= (mandatory)

ISUP message type or TUP message type. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**. The **tupmt** parameter is not valid for SEAS.

Range: 000-255 *

:sr= (mandatory)

Screening reference. This parameter specifies the point code's unique screening reference name.

Range: ayyy
1 alphabetic character followed by up to 3 alphanumeric characters

:actname= (optional)

Action name. This parameter specifies the stop action set name.

Range: ayyyyy
1 alphabetic character followed by up to 5 alphanumeric characters.

Default: Current value

:nisupmt/ntupmt= (optional)

New ISUP message type or new TUP message type. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**. The **ntupmt** parameter is not valid for SEAS.

Range: 000-255 *

:nsfi= (optional)

This parameter specifies the next screening category that is used in the gateway screening process. If specified, the parameter value must be **stop**.

Range: **stop**

stop—The gateway screening process ends and the message proceeds through normal routing.

Default: Current value

:nsr= (optional)

Next screening reference (*nsr*). The parameter specifies which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. If the **nsfi=stop** parameter is specified, the **nsr** parameter cannot be specified.

Range: ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Default: Current value

Example

```
chg-scr-isup:sr=iec:isupmt=1:nisupmt=1&&2
```

```
chg-scr-isup:tupmt=20:ntupmt=1:sr=tu01
```

Dependencies

At least one optional parameter must be specified.

If the **actname** parameter is specified, the **nsfi=stop** parameter must be specified.

The value of the **actname** parameter must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the *ACT NAME* field of the **rtrv-gws-actset** command output.

The specified **isupmt** or **tupmt** parameter value must already exist in the specified **sr**.

The specified **nisupmt** or **ntupmt** parameter value must not already exist in the specified **sr**.

If the **nsfi** parameter is specified, the parameter value must be **stop**.

If the **nsfi=stop** parameter is specified, the **nsr** parameter cannot be specified.

Notes

An asterisk can be specified for a parameter value in the **chg-scr-isup** and **dlt-scr-isup** commands *only* if that parameter value was specified as an asterisk in the **ent-scr-isup** command to define the parameter value.

A range of values can be specified for the **isupmt** parameter or **tupmt** parameter, by separating the values that define the range by two ampersands (&&); for example, **:isupmt=025&&100** specifies all ISUP message types from **25** to **100**. The value to the left of the && must be less than the value to the right of the && in the range.

TUP does not apply to SEAS. ISUP Message Type is the default.

To use TUP message type screening, an SIO screening reference with **si=04** (TUP) must exist in the SIO table. The TUP screening reference specifies the SIO screening reference as the next screening reference parameter (**nsr**) value.

To use ISUP message type screening, an SIO screening reference with **si=05** (ISUP) must exist in the SIO table. The ISUP screening reference specifies the ISUP SIO screening reference as the next screening reference parameter (**nsr**) value.

To screen for TUP and ISUP message types using a combined ISUP/TUP screen set, the SIO screening reference with **si=4** and the SIO screening reference with **si=5** must be two different screening references. The TUP screening reference specifies the SIO screening reference as the next screening reference parameter (**nsr**) value, and the ISUP screening reference specifies the SIO ISUP screening reference as the next screening reference parameter (**nsr**) value.

Output

When a screening reference is specified that is not yet associated with a screen set, the following output appears:

```
chg-scr-isup:sr=is01:isupmt=2:nsfi=stop:nisupmt=4
rlghncxa03w 04-01-14 16:45:50 EST EAGLE 31.3.0
CHG-SCR-ISUP: MASP A - COMPLTD
;
```

When a screening reference is specified that is already associated with one or more screen sets, the following output appears:

```
chg-scr-isup:sr=is02:isupmt=9:nsfi=stop:nisupmt=8
tekelecstp 04-02-17 16:35:56 EST EAGLE 31.4.0
Extended Processing Time Required -- Please Wait
Notice: The number of screensets affected is 2.
CHG-SCR-ISUP: SCREEN SET AFFECTED - ist1 1% FULL
CHG-SCR-ISUP: SCREEN SET AFFECTED - ist2 1% FULL
CHG-SCR-ISUP: MASP A - COMPLTD
;
```

chg-scr-opc

Change Allowed OPC

Use this command to change the attributes associated with a specific screening reference in the allowed OPC category. Attributes that can be changed are the point code, next screening function identifier and, next screening reference.

Keyword: **chg-scr-opc**

Related Commands: **dlt-scr-opc**, **ent-scr-opc**, **rtrv-scr-opc**

Command Class: Database Administration

Parameters

NOTE: At least one of these parameters must be specified: nnc, nncm, nni, nsfi, nsr.

:sr= (mandatory)

Screening reference. This parameter specifies the point code's unique screening reference name.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

:actname= (optional)

Action name. This parameter specifies the name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: *ayyyyy*, **none**

1 alphabetic character followed by up to 5 alphanumeric characters.

none—Remove an existing gateway screening stop action set from a gateway screening rule.

:area= (optional)

ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:id= (optional)

ITU international ID. This parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7, ***

:msa= (optional)

24-bit ITU-national main signaling area (*msa*) value. This parameter specifies the main signaling area (*msa*) of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:narea= (optional)

New ITU-international area value. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

Default: Current value

:nc= (optional)

Network cluster (*nc*) value. This parameter specifies one or more *nc* values for the network indicator (*ni*) and network cluster member (*ncm*) values specified in the **ni** and **ncm** parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:ncm= (optional)

Network cluster member (*ncm*) value. This parameter specifies one or more *ncm* values for the network indicator (*ni*) and network cluster (*nc*) values identified in the **ni** and **nc** parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 ***

:ni= (optional)

Network indicator (*ni*) value. This parameter specifies one or more *ni* values for the network cluster (*nc*) and network cluster member (*ncm*) values identified in the **nc** and **ncm** parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 ***

:nid= (optional)

New ITU-international ID value. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7, ***

Default: Current value

:nmsa= (optional)

New 24-bit ITU-national main signaling area (*nmsa*) value. This parameter specifies the new main signaling area (*msa*) of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:nnc= (optional)

New network cluster (*nnc*). This parameter specifies one or more *nnc* values for the screening reference specified in the **sr** parameter. It specifies the new network cluster (*nc*) of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

Default: Current value

:nncm= (optional)

New network cluster member (*nncm*). This parameter specifies one or more *nncm* values for the screening reference specified in the **sr** parameter. It specifies the new network cluster member (*nncm*) of the point code represented by *ni-nc-nncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0–255**.

Range: **0-255 ***

Default: Current value

:nni= (optional)

New network identifier (*nni*). This parameter specifies one or more *nni* values for the screening reference specified in the **sr** parameter. It specifies the new network indicator (*ni*) of the point code represented by *ni-nc-nncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 ***

Default: Current value

:nnpc= (optional)

New ITU-national point code. An asterisk (*) indicates the full range of values from **00000–16383**.

NOTE: Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you use multiple-part ITU national point codes, see "Converting ITU National Point Code Formats" in Appendix A for information on converting the point code format.

Range: **00000-16383 ***

Default: Current value

:npc= (optional)

ITU national point code. An asterisk (*) indicates the full range of values from **00000–16383**.

Range: **00000-16383 ***

:npcst= (optional)

New point code subtype. This parameter indicates whether the specified new ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (**s-**).

Range: **none, s**

Default: **none**

:nsfi= (optional)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range: **blkdpc, blkopc, cgpa, dpc, sio, stop**

blkdpc—Blocked DPC is the next screening category.

blkopc—Blocked OPC is the next screening category.

cgpa—Allowed CGPA is the next screening category.

dpc—Allowed DPC is the next screening category.

sio—Allowed SIO is the next screening category.

stop—The gateway screening process ends and the message proceeds through normal routing.

Default: Current value

:nsp= (optional)

New 24-bit ITU national signaling point (*nsp*). This parameter specifies the new signaling point (*sp*) of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:nsr= (optional)

Next screening reference (*nsr*). This parameter indicates which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. If the **nsfi=stop** parameter is specified, the **nsr** parameter cannot be specified.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

Default: Current value

:nssa= (optional)

New 24-bit ITU national sub signaling area (*n ssa*). This parameter specifies the new sub signaling area (*ssa*) of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:nzone= (optional)

New ITU-international zone. This parameter specifies a new zone for the point code represented by *zone-area-id*. An asterisk (*) indicates the full range of values from **0-7**.

Range: **0-7, *, C**

Default: Current value

:pcst= (optional)

Point code subtype. This parameter specifies whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (**s-**).

Range: **none, s**

Default: **none**

:sp= (optional)

24-bit ITU national signaling point (*sp*). This parameter specifies the signaling point (*sp*) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:ssa= (optional)

24-bit ITU national sub signaling area (*ssa*). This parameter specifies the sub signaling area (*ssa*) in the point code represented by the format *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:zone= (optional)

ITU international zone. This parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0-7**.

Range: **0-7, ***

Example

```
chg-scr-opc:sr=iec:ni=240:nc=010:ncm=010:nni=240:nnc=010:nncm=020
```

```
chg-scr-
```

```
opc:sr=iec:ni=240:nc=010:ncm=010:nni=240:nnc=010:nncm=020:nsfi=stop :actname=cncf
```

```
chg-scr-opc:sr=iec:nsfi=dpc:nsr=wrld2
```

```
chg-scr-opc:sr=opc1:npc=128:nsfi=fail:pcst=s:npst=none
```

Dependencies



CAUTION: Even though gateway screening is in the screen test mode, as defined by the parameters **gwsa=off** and **gwsn=on**, the gateway screening action in the stop action set specified by the **actname** parameter of the screen set *will* be performed at the end of the screening process.

A complete point code must be specified, using the **ni-nc-ncm**, **zone-area-id**, **msa-ssa-sp**, or **npc** combination unless a value of **c** for “continue” is specified.

A new point code entry must be specified by one, and only one of the four point code parameter combinations: **nni-nnc-nncm**, **nzone-narea-nid**, **nmsa-nssa-nsp**, or **nnpc**. If the new point code entry is a different point code type than the existing point code entry, all subfields of the new point code type must be specified.

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

At least one optional parameter must be specified.

The current OPC specified by **ni-nc-ncm**; **zone-area-id**, **msa-ssa-sp**, or the **npc** parameter must already exist in the screening reference or within an existing range of OPCs.

The new OPC or OPC range defined by **ni-nc-ncm**, **zone-area-id**, **msa-ssa-sp**, or the **npc** parameter must not already exist in the screening reference or within an existing range of OPCs.

If the **actname** parameter is specified, then the **nsfi=stop** parameter must be specified.

If the **nsr** parameter is specified, then the **actname** parameter cannot be specified.

The **actname** parameter value must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the *ACT NAME* field of the **rtrv-gws-actset** command output.

If **zone=*** is specified, **area=*** and **id=*** must be specified.

If the **area=*** parameter is specified, the **id=*** parameter must be specified.

If the **msa=*** parameter is specified, the **ssa=*** and **sp=*** parameters must be specified.

If the **ssa=*** parameter is specified, the **sp=*** parameter must be specified.

The **nsfi** and **nsr** parameters must point to an existing screen, or the **nsfi=stop** parameter must be specified, and the **nsr** parameter cannot be specified.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000-255**

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc=*** parameter is specified, the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **ncm** parameter is specified as a single value, or a range other than the full range of **000-255**, the **ni** and the **nc** parameters must be specified with a single value.

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range **000-255**.

If the **nnc** parameter is specified as a range, the **nncm** parameter must be specified as an asterisk or as the full range **000-255**

If the **nnc** parameter is specified as a single value or a range, a single value must be specified for the **nni** parameter.

If the **nnc=*** parameter is specified, the **nnm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **nncm** parameter is specified as a single value, or a range other than the full range of **000–255**, the **nni** and the **nnc** parameters must be specified with a single value.

If the **nni** parameter is specified as an asterisk (**nni=***) or as a range, the **nnc** and **nncm** parameters must be specified as an asterisk or as the full range **000–255**.

If the **nsfi=stop** parameter is not specified, then the **nsr** parameter must be specified.

The value of the **sr** parameter must already exist in the BLKOPC entity set.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The spare point code subtype prefix (**s-**) is not supported for ANSI point codes (parameters **ni**, **nc**, **nncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** parameter cannot be specified for ANSI and ITU-N24 point codes.

Notes

A range of values is specified by separating the values that define the range by two ampersands (**&&**); for example, **:ni=025&&100** specifies all network indicators for ANSI point codes from **25** to **100**.

An asterisk cannot not be specified for a parameter value in this command unless an asterisk was specified for the parameter value in the original **ent-scr-opc** command.

If the screen set reaches 100% capacity (indicated by the “100% full” message), the system will allow subsequent entries. An error will occur, however, when downloading the screen set to the card. Screen sets should not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** and **npcst** parameters indicate whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

```
chg-scr-opc:sr=iec:ni=240:nc=010:nmc=010:nni=240:nnc=010:nncm=020
rlghncxa03w 04-01-07 12:05:33 EST EAGLE 31.3.0
CHG-SCR-OPC: SCREEN SET AFFECTED - IEC 25% FULL
CHG-SCR-OPC: MASP A - COMPLTD
;
```

Legend

CHG-SCR-OPC—The command entered that caused this output. This is echoed to the printer as a reference.

SCREEN SET AFFECTED—Identifies the screen set that was affected by the command. The screen set name is provided.

% FULL—Indicates the relative size of the screen set.

chg-scr-sio

Change Allowed SIO

Use this command to change a specific screening reference in the allowed service indicator octet category. Attributes that may be changed are the network indicator, service indicator, message priority, heading codes, next screening function identifier, and next screening reference.

NOTE: To use TUP message type screening, an SIO screening reference with **si=04 (TUP)** must be defined in the SIO table. This SIO screening reference is specified as the next screening reference (**nsr**) value in an ISUP screening reference for screening TUP message types.

Keyword: chg-scr-sio

Related Commands: dlt-scr-sio, ent-scr-sio, rtrv-scr-sio

Command Class: Database Administration

Parameters

At least one of these parameters must be specified: **nh0** , **nh1**, **nnic**, **npri**, **nsfi**, **nsi**, **nsr**.

:nic= (mandatory)

Network indicator code. This parameter specifies whether the message originated from an international (**0**) or national (**2**) network. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0–3**.

Range: **0-3 ***

:pri= (mandatory)

Message priority. This parameter specifies the new message priority in the SIO. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0–3**.

Range: **0-3 ***

Default: Current value

:si= (mandatory)

Service indicator. This parameter specifies the type of message. The values are defined in Telcordia TR-NWT-000246.

Range: **00, 01- 15**

:sr= (mandatory)

Screening reference. This parameter specifies the point code's unique screening reference name.

Range: ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

:actname= (optional)

Action name. This parameter specifies the name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: ayyyyy

1 alphabetic character followed by up to 5 alphanumeric characters.

none—remove an existing gateway screening stop action set from a gateway screening rule.

:h0= (optional)

This parameter is mandatory if the service indicator (**si**) value is **00**, **01**, **02**, or **03**. Otherwise, the **h0** parameter is undefined.

Range: **0-15 ***

Default: Current value or undefined

:h1= (optional)

This parameter is mandatory if the service indicator (**si**) value is **00**, **01**, **02**, or **03**. Otherwise, the **h1** parameter is undefined.

Range: **0-15 ***

Default: Current value or undefined

:nh0= (optional)

New H0 heading code. This parameter specifies a new H0 heading code for the screening reference specified in the **sr** parameter. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0–15**.

Range: **0-15 ***

Default: Current value

:nh1= (optional)

New H1 heading code. This parameter specifies a new H1 heading code for the screening reference specified in the **sr** parameter. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0–15**.

Range: **0-15 ***

Default: Current value

:nnic= (optional)

New network indicator code. This parameter specifies the new **nic** for the screening reference specified. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0–3**.

Range: **0-3 ***

Default: Current value

:npri= (optional)

New message priority. This parameter specifies the new message priority in the SIO. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0–3**.

Range: **0-3 ***

Default: Current value

:nsfi= (optional)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range: **blkdpc, cdpa, cgpa, destfld, isup, stop**

blkdpc—Blocked DPC is the next screening category.

cdpa—Allowed CDPA is the next screening category.

cgpa—Allowed CGPA is the next screening category.

destfld—Allowed destination field (DESTFLD) is the next screening category.

isup—ISUP message type (ISUP) is the next screening category.

stop—The gateway screening process ends and the message proceeds through normal routing.

Default: Current value

:nsi= (optional)

New service indicator. This parameter specifies the type of message for the specified screening reference. The values are defined in Telcordia TR-NWT-000246.

Range: **0- 15**

Default: Current value

:nsr= (optional)

Next screening reference (*nsr*). This parameter specifies which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. If the **nsfi=stop** parameter is specified, the **nsr** parameter cannot be specified.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

Default: Current value

Example

```
chg-scr-sio:sr=iec:nic=1:si=1:h0=02:h1=03:pri=*:nh0=03&&04
```

```
chg-scr-sio:sr=iec:nic=1:si=3:pri=2:npri=1
```

```
chg-scr-sio:sr=iec:nic=1:si=3:pri=3:nnic=2:nsfi=stop:actname=copy
```

Dependencies

CAUTION: Even though gateway screening is in the screen test mode, as defined by the parameters **gwsa=off** and **gwsn=on**, the gateway screening action in the stop action set specified by the **actname** parameter of the screen set *will* be performed at the end of the screening process.

At least one attribute must be changed.

If asterisk values or ranges are specified for the new heading codes, nothing that matches the entire combination of **nic/nnic**, **si/nsi**, and the specified new heading codes and priorities can already exist in the allowed SIO category for the screening reference.

An asterisk cannot be specified for a parameter value in this command unless an asterisk was specified for the parameter value in the original **ent-scr-sio** command.

If the **actname** parameter is specified, then the **nsfi=stop** parameter must be specified.

If the **actname** parameter is specified, the **nsr** parameter cannot be specified.

The **actname** parameter value must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the *ACT NAME* field of the **rtrv-gws-actset** command output.

The **nsfi** and **nsr** parameters must point to an existing screen, or the **nsfi=stop** parameter must be specified, and the **nsr** parameter cannot be specified.

Use Table 5-26 to determine an acceptable combination of the **nsfi** (new entries) and **si** parameters:

Table 5-26. Acceptable **nsfi** and **si** parameter combinations (**chg-scr-sio**)

If the nsfi parameter is...	...the si parameter must be:
destfld	00
cdpa	03
cgpa	03
isup	05

If the **si** parameter value is greater than 2, and the **nsi** parameter value is greater than 3, the **nh0** and **nh1** parameters are used to enter the required **h0** and **h1** parameter values.

Table 5-27 shows the valid combinations of the **h0/h1** and **nh0/nh1** parameters

Table 5-27. Valid combinations for the **h0/h1** and **nh0/nh1** parameters (**chg-scr-sio**)

If the h0 (nh0) parameter is specified as:	The h1 (nh1) parameter can be specified as:
A single value	A single value
A single value	A range

Table 5-27. Valid combinations for the **h0/h1** and **nh0/nh1** parameters (**chg-scr-sio**)

If the h0 (nh0) parameter is specified as:	The h1 (nh1) parameter can be specified as:
A single value	An asterisk (*) entry
A range	An asterisk (*) entry
An asterisk (*) entry	An asterisk (*) entry

The **nh0** and **nh1** parameters cannot be specified if the **nsi** parameter is specified and is not equal to **00**, **01**, or **02**.

Use Table 5-28 to determine additional acceptable combinations of specified parameter values

Table 5-28. Additional Valid chg-scr-sio Parameter Combinations

si value:	nic value	pri value	h0 value:	h1 value:
0	s, *	s, *, r	s	s, *, r
0	s, *	s, *, r	*, r	*
1, 2	s, *	s, *, r	s	s, *, r
1, 2	s, *	s, *, r	*, r	*
3-15	s, *	s, *, r	u	u
Legend s = single value r = range * = asterisk u = unspecified				

If the **nh0** or **nh1** parameters are specified, the parameter values must be valid with the **h0** or **h1** values currently in the database.

The **h0**, **h1**, **nh0**, and **nh1** parameters cannot be specified if the **si** parameter is not equal to **00**, **01**, or **02**, and the **nsi** parameter is not specified.

The **nnic**, **nsi**, **pri**, and **nh0/nh1** parameters must not already exist in the allowed SIO category.

The **sr**, **nic**, **si**, **pri**, and **h0/h1** parameters for which attributes are to be changed must be in the allowed SIO category.

If **nsfi=stop** parameter is specified, the **nsr** parameter cannot be specified.

If the **nsfi=stop** parameter is not specified, then the **nsr** parameter must be specified.

If the **si** parameter is equal to **00**, **01**, or **02**, the **h0** and **h1** parameters must be specified. Otherwise, the **h0** parameter cannot be specified.

The specified screening reference (**sr**) must already exist in the database.

Notes

If the screen set reaches 100% capacity (indicated by the “100% full” message), the system allows subsequent entries. An error occurs, however, when downloading the screen set to the card. Ensure that screen sets do not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

To use TUP message type screening, an SIO screening reference with **si=04** (TUP) must be defined in the SIO table. To use ISUP message type screening, a rule with **si=05** (ISUP) must be defined in the SIO table. To use a combined ISUP/TUP screen set for TUP and ISUP message screening, the SIO screening reference with **si=4** and the SIO screening reference with **si=5** must be two different screening references.

A network indicator value of **1** or **3** can be used in private networks.

A network indicator value of **3** can be used in some national networks to broaden the identity of a national network, but is usually spare.

Output

chg-scr-sio:sr=iec:nic=1:si=3:pri=2:npri=1

```

r lghncxa03w 04-01-14 16:45:50 EST EAGLE 31.3.0
CHG-SCR-SIO: SCREEN SET AFFECTED - SS01 25% FULL
CHG-SCR-SIO: SCREEN SET AFFECTED - SS04 35% FULL
CHG-SCR-SIO: MASP A - COMPLTD
;

```

Legend

CHG-SCR-SIO—The command entered that caused this output. This is echoed to the printer as a reference.

SCREEN SET AFFECTED—Identifies the screen set that was affected by the command. The screen set name is provided.

% FULL—Indicates the relative size of the screen set.

chg-scr-tt**Change Allowed Translation Type**

Use this command to change the attributes of a specific screening reference in the allowed translation type category. Attributes that can be changed are the translation type, next screening function identifier and next screening reference.

Keyword: **chg-scr-tt**

Related Commands: **dlt-scr-tt**, **ent-scr-tt**, **rtrv-scr-tt**

Command Class: Database Administration

Parameters

:sr= (mandatory)

Screening reference. This parameter specifies the point code's unique screening reference name.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

:type= (mandatory)

Translation type. This parameter specifies the global title translation type value in the called party address. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0–255**.

Range: **000-255 ***

:actname= (optional)

Action name. This parameter specifies the name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: *ayyyyy*, **none**

1 alphabetic character followed by up to 5 alphanumeric characters.

none—remove an existing gateway screening stop action set from a gateway screening rule.

:nsfi= (optional)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range: **cdpa**, **stop**

cdpa—Allowed called party address is the next screening category.

stop—The gateway screening process ends and the message proceeds through normal routing.

Default: Current value

:nsr= (optional)

Next screening reference (*nsr*). This parameter specifies which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. If the **nsfi=stop** parameter is specified, the **nsr** parameter cannot be specified.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

Default: Current value

:ntype= (optional)

New translation type. The translation type identifies the global title translation type value in the called party address. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from 0–255.

Range: **000-255 ***

Default: Current value

Example

```
chg-scr-tt:sr=iec:type=012:ntype=014
```

```
chg-scr-tt:sr=iec:type=012:ntype=014:nsfi=stop:actname=none
```

Dependencies

CAUTION: Even though gateway screening is in the screen test mode, as defined by the parameters **gwsa=off** and **gwsn=on**, the gateway screening action in the stop action set specified by the **actname** parameter of the screen set *will* be performed at the end of the screening process.

At least one attribute must be changed.

The new translation type cannot already exist.

If an asterisk is specified for the new allowed **type**, no other translation types can exist in the screening table.

If the **actname** parameter is specified, the **nsfi=stop** parameter must be specified.

If the **actname** parameter is specified, the **nsr** parameter cannot be specified.

The **actname** parameter value must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the *ACT NAME* field of the **rtrv-gws-actset** command output.

The next screening function identifier and the next screening to be added must point to one or more existing screening references.

If the **nsfi=stop** parameter is specified, the **nsr** parameter cannot be specified.

If the **nsfi** parameter has a value other than **stop**, the **nsr** parameter must be specified.

If the screening reference exists, the single value or range specified for the allowed **type** to be added to the TT screen for the allowed TT screening reference must not already exist in that TT screen.

The screening reference and translation type for which the attributes are to be changed must exist.

The current translation type must already exist.

Notes

If the screen set reaches 100% capacity (indicated by the “100% full” message), the system allows subsequent entries. An error occurs, however, when downloading the screen set to the card. Ensure that screen sets do not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

An asterisk can be specified for a parameter value in the **chg-scr-tt** and **dlt-scr-tt** commands *only* if that parameter value was specified as an asterisk in the **ent-scr-tt** command to define the parameter value.

Output

chg-scr-tt:sr=iec:type=012:ntype=014

```
rlghncxa03w 04-01-07 12:05:33 EST EAGLE 31.3.0
CHG-SCR-TT:  SCREEN SET AFFECTED - IEC  25% FULL
CHG-SCR-TT:  MASP A - COMPLTD
;
```

Legend

CHG-SCR-TT—The command entered that caused this output. This is echoed to the printer.

SCREEN SET AFFECTED—Identifies the screen set that was affected by the command. The screen set name is provided.

% FULL—Indicates the relative size of the screen set.

chg-scrset

Change Screen Set

Use this command to change the attributes of a screen set. A screen set is a group of screening references that can be assigned to a linkset. It is defined by a name and a pointer to the first screening reference of a screen set.

Keyword: **chg-scrset**

Related Commands: **dlt-scrset**, **ent-scrset**, **rtrv-scrset**

Command Class: Database Administration

Parameters

At least one of these parameters must be specified: **nscrn**, **nsfi**, **nsr**.

:scrn= (mandatory)

Screen set name. Each screening reference must have a unique name.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

:actname= (optional)

Action name. This parameter specifies the name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: *ayyyyy*

1 alphabetic character followed by up to 5 alphanumeric characters.

none—remove an existing gateway screening stop action set from a gateway screening rule.

:destfld= (optional)

This parameter turns on and off the automatic allowed affected destination screening for network management messages against the routing table, self point codes, and capability point codes. When this parameter is **on**, the automatic screening is applied at the end of the provisioned screen set.

Range: **yes, no**

Default: Current value

:nscrn= (optional)

New screen set name.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

Default: Current value

:nsfi= (optional)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range: **blkdpc, blkopc, dpc, opc, sio, stop**

blkdpc—Blocked DPC is the next screening category.

blkopc—Blocked OPC is the next screening category.

dpc—Allowed DPC is the next screening category.

opc—Allowed OPC is the next screening category.

sio—Allowed SIO is the next screening category.

stop—The gateway screening process ends and the message proceeds through normal routing.

Default: Current value

:nsr= (optional)

Next screening reference. The parameter indicates which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. If **nsfi=stop**, the **nsr** parameter cannot be specified.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

Default: Current value

Example

chg-scrset:scrn=ss01:nsfi=opc:nsr=iec

chg-scrset:scrn=ss02:nsfi=stop:nscrn=ss03

chg-scrset:scrn=ss02:nscrn=ss03:nsfi=stop:actname=copy

chg-scrset:scrn=ss02:nsfi=stop:nscrn=ss03:destfld=no

Dependencies

The value of the **nscrn** parameter cannot be assigned to another screen set.

If the **actname** parameter is specified, the **nsfi=stop** parameter must be specified.

If the **actname** parameter is specified, the **nsr** parameter cannot be specified.

The **actname** parameter value must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the *ACT NAME* field of the **rtrv-gws-actset** command output.

The **nsfi** and **nsr** parameters must point to one or more existing entities in another entity set, or the **nsfi=stop** parameter must be specified, and the **nsr** parameter cannot be specified.

If the **nsfi=stop** parameter is not specified, then the **nsr** parameter must be specified.

An existing screen set must be removed from all linksets before it can be changed.

If the **nscrn** parameter is specified, the **scrn** parameter value cannot be referenced by a linkset.

If the next screening function identifier (**nsfi**) and the next screening reference (**nsr**) does not point to an existing screen, the **nsfi** must be equal to **stop** and the **nsr** parameter must not be specified.

At least one optional parameter must be specified.

Notes

If the screen set reaches 100% capacity (indicated by the “100% full” message), the system allows subsequent entries. An error occurs, however, when downloading the screen set to the card. Screen sets should not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

The system validates the command to verify that the specified screen set name is in use.

Output

```
chg-scrset:scrn=ss01:nsfi=opc:nsr=iec
rlghncxa03w 04-01-07 09:35:10 EST EAGLE 31.3.0
CHG-SCRSET:  SCREEN SET AFFECTED - SS01  25% FULL
CHG-SCRSET:  MASP A - COMPLTD
;
```

Legend

CHG-SCRSET—The command entered that caused this output. This is echoed to the printer as a reference.

SCREEN SET AFFECTED—Identifies the screen set that was affected by the command. The screen set name is shown.

% FULL—Indicates the relative size of the screen set.

chg-seas-config

Changes CCMR Configuration

Use this command to configure information for the CCS Message Router (CCS MR) in the EAGLE 5 ISS database.

NOTE: The CCS MR is a stand-alone, self-contained system that provides a centralized mechanism for routing CCS network operations traffic between STPs/SCPs and existing and new OSS.

Keyword: chg-seas-config

Related Commands: rtrv-seas-config

Command Class: System Maintenance

Parameters

:authmode= (optional)

Authentication mode. This parameter specifies the authentication mode for the EAGLE 5 ISS. Password-based authentication is the only authentication mode that is supported currently.

The value of the password requested by the **login** parameter must be from 1 - 15 alphanumeric characters in length.

The **port** and **ipaddr** parameters must have unique values for each CCS MR.

Output

```
chg-seas-
config:seasccli=eaglestp001:conn=ipmr1:ipaddr=198.168.25.10:port=
1500
    tekelecstp 07-06-16 22:34:11 IST  EAGLE 37.5.0
    CHG-SEAS-CONFIG: MASP A - COMPLTD
;

chg-seas-config:conn=ipmr2:port=3000
    tekelecstp 07-06-16 22:34:11 IST  EAGLE 37.5.0
    CHG-SEAS-CONFIG: MASP A - COMPLTD
;
```

chg-secu-dflt

Change System-Wide Security-Related Defaults

Use this command to change various system-wide, security-related defaults, such as:

- The default password aging interval
- The default user ID aging interval
- Whether to allow or prohibit multiple simultaneous logins with the same user ID
- Control of the password-complexity checking algorithm
- Login warning message text
- Clear the warning message text displayed during login to the EAGLE 5 ISS

Keyword: **chg-secu-dflt**

Related Commands: **ent-user**, **login**, **rtrv-secu-dflt**

Command Class: Security Administration

Parameters

:alpha= (optional)

This parameter specifies the minimum number of alphabetic characters (a–z) required in a new password.

Range: **0-12**

Default: Current value

System

Default: **1**

:clwrntx= (optional)

Clear warning text. This parameter deletes warning message text.

Range: **no**, **yes**, **all**

no — Does not delete any warning message text.

yes — Deletes warning message text for the line specified by the **wrnln** parameter.

all — Deletes warning message text for all lines.

Default: No change to current value.

:minlen= (optional)

Minimum password length. This parameter specifies the minimum number of characters that must be in a user password.

Range: 1-12
Default: Current value
System
Default: 8

:multlog= (optional)

This parameter specifies whether multiple simultaneous logins can be performed with a user ID.

Range: yes, no
yes — A user ID can be logged in to more than one terminal at the same time.
no — A user ID can be logged in to only one terminal at a time.
Default: Current value
System
Default: no

:num= (optional)

Number. This parameter specifies the minimum number of numeric characters (0–9) required in a new password.

Range: 0-12
Default: Current value
System
Default: 1

:page= (optional)

Password age. This parameter specifies the default password aging interval for newly created user IDs. If the **page** parameter is specified in the **ent-user** command, the system uses that value; otherwise, the system uses the value specified here.

Range: 0-999
Default: Current value
System
Default: 90

:punc= (optional)

Punctuation. This parameter specifies the minimum number of punctuation characters required in a new password. A punctuation character is any character that is not an alphabetic or numeric character, including spaces.

Range: 0-12
Default: Current value
System
Default: 1

:uout= (optional)

User ID aging interval. This parameter specifies the number of successive days a user ID can go unused (no successful login) before the system denies login. If the **uout** parameter is specified in the **ent-user** command, the system uses that value; otherwise, the system uses the value specified here.

Range: 0-999
Default: Current value
System
Default: 90

:wrnln= (optional)

Warning message line number. This parameter specifies the line number within the warning message to receive the new text specified by the **wrntx** parameter.

Range: 1-20
Default: Current value

Even though the minimum number of characters allowed in a password is specified using the **minlen** parameter, the password also must satisfy the minimum value requirements specified on the **alpha**, **num**, and **punc** parameters. The actual minimum password length is the greater of either the value specified on the **minlen** parameter or the total number of characters specified on the **alpha**, **num**, and **punc** parameters.

For example, if **chg-secu-dflt:minlen=5:alpha=2:num=2:punc=2** is entered, the minimum number of password characters specified on the **minlen** parameter is 5. But the total number of characters specified in the **alpha**, **num**, and **punc** parameters is 6 (**alpha+num+punc**). The effective minimum number of characters is actually 6 rather than the 5 specified on the **minlen** parameter.

If the **clwrntx=yes** parameter is specified, then at least one line number must be specified.

Output

The following commands create the warning message that is shown in the output after the commands. The notes that are not bold in parentheses after some commands explain the displayed output. The warning message is displayed after the user enters the **login** command and a password. The output example shows the command output, a **login** command and password prompt, and the warning message that was created with these commands. See the Notes section for this command for additional information about entering this command.

```
chg-secu-
dflt:wrnln=1:wrntx="*****"

chg-secu-dflt:wrnln=2:wrntx="* NOTICE: This is a private computer system. *"

chg-secu-dflt:wrnln=3:wrntx="* Unauthorized Access or use may lead to *"

chg-secu-dflt:wrnln=4:wrntx="* prosecution. *"

chg-secu-dflt:wrnln=5:wrntx="* 08/03/01 Notice!!! Eagle will be upgraded between *"

chg-secu-dflt:wrnln=6:wrntx="*           the hours of 2am-3am on 08/03/15. *"

chg-secu-dflt:wrnln=7:wrntx="* *"

chg-secu-dflt:wrnln=8:wrntx="* Today's happy message: Go with Tekelec!!      *"

chg-secu-
dflt:wrnln=9:wrntx="*****"

chg-secu-dflt:wrnln=10:wrntx=" " (set to 1 space to cause blank line before login history is
displayed)

chg-secu-dflt:wrnln=11:clrwrntx=yes
chg-secu-dflt:wrnln=12:clrwrntx=yes
chg-secu-dflt:wrnln=13:clrwrntx=yes
chg-secu-dflt:wrnln=14:clrwrntx=yes (remaining lines are provisioned to cause
chg-secu-dflt:wrnln=15:clrwrntx=yes them not to display as part of the message
chg-secu-dflt:wrnln=16:clrwrntx=yes after successful login)
chg-secu-dflt:wrnln=17:clrwrntx=yes
chg-secu-dflt:wrnln=18:clrwrntx=yes
chg-secu-dflt:wrnln=19:clrwrntx=yes
chg-secu-dflt:wrnln=20:clrwrntx=yes
  rlghncxa03w 08-03-10 11:43:04 EST  EAGLE 38.0.0
  CHG-SECU-DFLT: MASP A - COMPLTD
;

LOGIN:UID=eagle
PASSWORD:<password is not displayed>
```

```
*****
*  NOTICE: This is a private computer system.      *
*  Unauthorized Access or use may lead to          *
*  prosecution.                                    *
*  08/03/01 Notice!!! Eagle will be upgraded between *
*              the hours of 2am-3am on 08/03/15.    *
*                                                    *
```

```

* Today's happy message: Go with Tekelec!! *
*****

0 LOGIN failures since last successful LOGIN
Last successful LOGIN was on port 3 on 08-03-09 @ 12:12:35
;

The following command clears all of the warning messages.

chg-secu-dflt:clwrntx=all
tekelecstp 08-03-02 17:53:13 EST EAGLE 38.0.0
CHG-SECU-DFLT: MASP A - COMPLTD
;

LOGIN:UID=eagle
PASSWORD:<password is not displayed>

0 LOGIN failures since last successful LOGIN
Last successful LOGIN was on port 3 on 08-02-26 @ 12:12:35
;

The following commands set the warning message text that is shown in the output. The parameter
clwrntx=no has no impact on the command output.

chg-secu-
dflt:wrnln=1:wrntx="*****":clwrntx=no

chg-secu-dflt:wrnln=2:wrntx="* NOTICE: This is a private computer system. *":clwrntx=no

chg-secu-
dflt:wrnln=3:wrntx="*****"
*****":clwrntx=no
tekelecstp 08-03-02 17:53:31 EST EAGLE 38.0.0
CHG-SECU-DFLT: MASP A - COMPLTD
;

LOGIN:UID=eagle
PASSWORD:<password is not displayed>

*****
* NOTICE: This is a private computer system. *
*****

0 LOGIN failures since last successful LOGIN
Last successful LOGIN was on port 3 on 08-02-26 @ 17:12:35
;

```

chg-secu-trm

Change Terminal Access Rights

Use this command to configure the access rights for a terminal. Only a user with system security administration authority can change a terminal's access rights. Access rights determine whether a terminal or port has command access to the system for the different command classes.

Keyword: chg-secu-trm

Related Commands: rtrv-secu-trm

Command Class: Security Administration

Parameters

NOTE: As of Release 40.1 the lnpbas parameter is obsolete.

:trm= (mandatory)

Terminal ID. This parameter specifies the port to be configured.

Range: 1-16

:all= (optional)

All non-configurable command classes. This parameter specifies whether to configure all of the command classes.

Range: yes, no

Default: Current value

System

Default: no

:cc1= (optional)

This parameter specifies a configurable command class name (*ayy*), and an indicator (**-yes** or **-no**) stating whether the command class is allowed for the specified terminal. The parameter value is specified in the format *ayy -yes* or *ayy -no*.

Range: *ayy*

1 alphabetic character followed by 2 alphanumeric characters.

A dash and the indicator value follow the command class name:

-no—This command is not allowed for the specified terminal.

-yes—This command is allowed for the specified terminal.

:cc2= (optional)

Configurable command class name (*ayy*), and an indicator **-yes** or **-no** to specify whether the command class is allowed or not allowed for the specified terminal. The parameter value is specified in the format *ayy -yes* or *ayy -no*.

Range: *ayy*

1 alphabetic character followed by 2 alphanumeric characters.

A dash and the indicator value follow the command class name:

-no—This command is not allowed for the specified terminal.

-yes—This command is allowed for the specified terminal.

:cc3= (optional)

Configurable command class name (*ayy*), and an indicator **-yes** or **-no** to specify whether the command class is allowed or not allowed for the specified terminal. The parameter value is specified in the format *ayy -yes* or *ayy -no*.

Range: *ayy*

1 alphabetic character followed by 2 alphanumeric characters.

A dash and the indicator value follow the command class name:

-no—This command is not allowed for the specified terminal.

-yes—This command is allowed for the specified terminal.

:cc4= (optional)

Configurable command class name (*ayy*), and an indicator **-yes** or **-no** to specify whether the command class is allowed or not allowed for the specified terminal. The parameter value is specified in the format *ayy -yes* or *ayy -no*.

Range: *ayy*

1 alphabetic character followed by 2 alphanumeric characters.

A dash and the indicator value follow the command class name:

-no—This command is not allowed for the specified terminal.

-yes—This command is allowed for the specified terminal.

:cc5= (optional)

Configurable command class name (*ayy*), and an indicator **-yes** or **-no** to specify whether the command class is allowed or not allowed for the specified terminal. The parameter value is specified in the format *ayy -yes* or *ayy -no*.

Range: *ayy*

1 alphabetic character followed by 2 alphanumeric characters.

A dash and the indicator value follow the command class name:

-no—This command is not allowed for the specified terminal.

-yes—This command is allowed for the specified terminal.

:cc6= (optional)

Configurable command class name (*ayy*), and an indicator **-yes** or **-no** to specify whether the command class is allowed or not allowed for the specified terminal. The parameter value is specified in the format *ayy -yes* or *ayy -no*.

Range: *ayy*

1 alphabetic character followed by 2 alphanumeric characters.

A dash and the indicator value follow the command class name:

-no—This command is not allowed for the specified terminal.

-yes—This command is allowed for the specified terminal.

:cc7= (optional)

Configurable command class name (*ayy*), and an indicator **-yes** or **-no** to specify whether the command class is allowed or not allowed for the specified terminal. The parameter value is specified in the format *ayy -yes* or *ayy -no*.

Range: *ayy*

1 alphabetic character followed by 2 alphanumeric characters.

A dash and the indicator value follow the command class name:

-no—This command is not allowed for the specified terminal.

-yes—This command is allowed for the specified terminal.

:cc8= (optional)

Configurable command class name (*ayy*), and an indicator **-yes** or **-no** to specify whether the command class is allowed or not allowed for the specified terminal. The parameter value is specified in the format *ayy -yes* or *ayy -no*.

Range: *ayy*

1 alphabetic character followed by 2 alphanumeric characters.

A dash and the indicator value follow the command class name:

-no—This command is not allowed for the specified terminal.

-yes—This command is allowed for the specified terminal.

:db= (optional)

Database Administration class. Specifies whether the Database Administration class of commands is allowed.

Range: **yes, no**

Default: Current value

System**Default:** **no****:dbg=** (optional)

Debug class. Specifies whether the Debug class of commands is allowed.

Range: **yes, no****Default:** Current value**System****Default:** **no****:link=** (optional)

Link Maintenance class. Specifies whether the Link Maintenance class of commands is allowed.

Range: **yes, no****Default:** Current value**System****Default:** **no****:pu=** (optional)

Program Update class. Specifies whether the Program Update class of commands is allowed.

Range: **yes, no****Default:** Current value**System****Default:** **no****:sa=** (optional)

Security Administration class. Specifies whether the Security Administration class of commands is allowed.

Range: **yes, no****Default:** Current value**System****Default:** **no****:sys=** (optional)

System Maintenance class. Specifies whether the System Maintenance class of commands is allowed.

Range: **yes, no****Default:** Current value**System****Default:** **no****:lnpbas=** (obsolete)

LNP Basic class. Specifies whether the LNP Basic class of commands is allowed.

Range: **yes, no****Default:** Current value**System****Default:** **no****Example****chg-secu-trm:trm=3:all=yes****chg-secu-trm:trm=3:sys=yes:cc1=u04-no:cc3=u11=yes****Dependencies**

This command is not supported on telnet terminals (terminal IDs 17-40).

At least one optional parameter must be specified.

Access rights for a terminal cannot be changed while a user is logged on to that terminal.

At least two terminal ports must be configured to have security administration authority.

The Command Class Management feature must be enabled before configurable command class name parameters (**cc1**, **cc2**, **cc3**, **cc4**, **cc5**, **cc6**, **cc7**, **cc8**) can be specified.

The value specified for a configurable command class name must be a default or provisioned command class name in the CCNAMES table.

If the **all** parameter is specified and any of the individual command classes are also specified, the individual command classes take precedence.

If the **all=yes** parameter is specified, but the LNP feature is not turned on, the **lnpbas** parameter defaults to a **no** value.

Notes

Up to 8 configurable command class name parameters can be entered in one command. Additional commands can be entered to change access rights for more than 8 names. To change access rights for all 32 available configurable command class names, four commands could be entered with 8 names specified in each command.

Security Administration ports whose terminal port type has been configured with a value of **oap**, **none**, or **printer** do not allow commands to be entered. Because commands cannot be entered from terminals attached to these ports, they are not considered as ports configured for security administration authority.

Output

```
chg-secu-trm:trm=3:all=yes
rlghncxa03w 04-01-15 12:30:04 EST EAGLE 31.3.0
Command entered at terminal #13.

rlghncxa03w 04-01-15 12:30:07 EST EAGLE 31.3.0
CHG-SECU-TRM: MASP A - COMPLTD
;
```

chg-sg-opts

Change IP

Use this command to change the IP⁷ Secure Gateway protocol options.

Keyword: chg-sg-opts

Related Commands: `rtrv-sg-opts`

Command Class: Database Administration

Parameters

:getcomm= (optional)

This parameter specifies the community name to use for SNMP Get and GetNext request validations. This value applies for each SSED CM SNMP agent in the system.

[illegible]

Any string up to 32 characters in length

If the string contains characters other than alphanumeric characters, the entire string must be enclosed in single quotes (' ').

The string can be entered in upper and lower case; the system converts upper case alphabetic characters to lower case.

Default: Current value

System

Default: public

The **srkq** parameter value must be greater than or equal to the current number of static routing key entries. Attempts to decrease the **srkq** value below the actual current number of static routing key entries are not allowed.

The total number of the **srkq** value cannot exceed 2500 for SSED CM or E5-ENET cards running the **ss7ipgw** or **ipgwi** application.

The total number of actual routing keys cannot not exceed 2500 per card.

Notes

The following conditions must be satisfied when changing routing key quantity assignments.

1. Total number if **srkq** cannot exceed 2500. The total number of routing keys per card on any SS7IPGW card (as reported by the **rept-stat-rtkey** command) cannot exceed 2500.
2. If **s** is the current maximum number of actual static routing keys, then **srkq** must be $\geq s$. Attempts to decrease **srkq** below **s** are not allowed.

The SCTP checksum algorithm affects the IPLIMx, IPGWx, and IPSG cards under the following conditions:

- All associations on the card are in the **open=no** state.
- No associations are provisioned on the card

If neither condition is true, the card raises minor alarm (UAM 298) under the following scenarios:

- The system-wide SCTP checksum algorithm is configured to a different value than the active SCTP checksum algorithm on the card.
- The system-wide SCTP checksum algorithm is set to **percard**, and the per-card setting is different than the active SCTP checksum algorithm on the card.

The alarm is cleared (UAM 299), and the SCTP checksum algorithm takes effect when all associations on the card are set to **open=no** or when the card is reset.

Output

```
chg-sg-opts:sctpcsum=percard
tekelecstp 08-02-22 17:56:31 EST EAGLE 38.0.0
CHG-SG-OPTS: MASP A - COMPLTD
;
```

chg-sid

Change Self Identification

Use this command to change the self-identification of the system. The self-identification identifies the system to the other signaling points in the network.



CAUTION

CAUTION: Use this command only during periods of low traffic. If you use the **chg-sid** command to change the point code, then the change does not become enabled until you initialize (**init-sys**) the system.

NOTE: If you use the **chg-sid** command to change the capability point code, then you do not need to initialize the system for the change to become enabled.

Keyword: **chg-sid**

Related Commands: **ent-sid**, **rtrv-sid**

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.



CAUTION: If there are STC cards in the system for the EAGLE 5 Integrated Monitoring Support (E5IS) feature, you must turn off the EIS copy function (see the `chg-eisopts` command) before you change the system CLLI. When the CLLI change is complete, use the `chg-eisopts` command to turn on the EIS copy function again.

:cli= (optional)

Common language location identifier. This parameter, which must be unique, identifies the system in terms of its physical location:

- The first four characters identify the city, town, or locality.
- The fifth and sixth characters identify state or province.
- The seventh and eighth characters identify the building.
- The last three characters identify the traffic unit.

Range: *ayyyyyyyyyy*
 1 alphabetic character followed by up to 10 alphanumeric characters
 The value **none** is invalid for the CLLI.

Default: Current value.

:cpc= (optional)

ANSI capability point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Synonym: **cpc**

Range: **000-255**
 Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).
 When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.
 When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.
 When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.
 The point code **000-000-000** is not a valid point code.

:cpc/cpca/cpci/cpcn/cpcn24= (optional)

Capability point code. The code used by the SS7 protocol to identify a group of functionally related STPs in the signaling network to which the STP belongs.

:cpci= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255**
 Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).
 prefix—**s-**
 zone—**0-7**
 area—**000-255**
 id—**0-7**

The point code **0-000-0** is not a valid point code.

Default: No change to existing point code value.

:cpcn= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

Default: No change to existing point code value.

:cpcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

Default: No change to existing point code value.

:cpctype= (optional)

Capability point code type. Specify whether the capability point code is for the STP or for the LNP, INP, EIR (Equipment Identity Register), G-Port, G-Flex, V-Flex, MNP, or ATINPQ service.

The **cpctype** parameter is used to associate a specific service or capability (for example, Local Number Portability Query Response and Message Relay service) with one or more of the capability point codes. This parameter cannot be changed after it is assigned.

Range: **lnp, stp, inp, eir, gport, gflex, mnp, atinpq, vflex**

lnp—Local Number Portability

stp—EAGLE 5 ISS

inp—INAP-based Number Portability

eir—Equipment Identity Register

gport—G-Port (GSM Mobile Number Portability)

gflex—G-Flex (GSM Flexible Numbering)

mnp—Mobile Number Portability

atinpq—ATI Number Portability Query

vflex—Voice Mail Router

Default: **stp**

:ncpc= (optional)

New ANSI capability point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Synonym: **ncpca**

Range: **000-255, none**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001–005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006–255**.

Enter **none** to delete the point code.

The point code **000-000-000** is not a valid point code.

Default: No change to existing point code value.

:ncpc/ncpca/ncpci/ncpcn/ncpcn24= (optional)

New capability point code. Use new CPCs to replace or delete existing CPCs.

:ncpci= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255, none**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

Enter **none** to delete the point code.

The point code **0-000-0** is not a valid point code.

Default: No change to existing point code value.

:ncpcn= (optional)

New ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npfcmnti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz, none**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

Enter **none** to delete the point code.

Default: No change to existing point code value.

:ncpcn24= (optional)

New 24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255, none**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—**000-255**

sp—**000-255**

Enter **none** to delete the point code.

Default: No change in point code value.

:npci= (optional)

New STP ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255, none**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

zone—**0-7**

area—**000-255**

id—**0-7**

Enter **none** to delete the point code.

The point code **0-000-0** is not a valid point code.

none—deletes the existing spare ITU-I self ID point code

Default: No change to existing point code value.

:npci/npcn= (optional)

New STP ITU national or international point code.

:npcn= (optional)

New STP ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz, none**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

Enter **none** to delete the point code.

none—deletes the existing spare ITU-N self ID point code

Default: No change to existing point code value.

:pc= (optional)

ANSI STP point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Synonym: **pca**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:pc/pca/pci/pcn/pcn24= (optional)

STP point code.

:pci= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

Default: No change in point code value.

:pcn= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

Default: No change in point code value.

:pcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

Default: No change in point code value.

:pctype= (optional)

The type of point code. The **pctype** parameter does not affect ITU destinations.

Range: **ansi, other**

ansi—Supports point codes that meet the ANSI standard

other—Supports point codes that do not meet the ANSI standard.

Default: The point code type is not changed.

Example

To change the site identification PCTYPE to ANSI:

chg-sid:pctype=ANSI

To change the site identification CLLI to rlghncxa03w:

chg-sid:clli=rlghncxa03w

To add a new ANSI capability point code:

chg-sid:cpc=002-002-002

To delete an ITU-I capability point code:

chg-sid:cpci=2-003-4:ncpci=none

To change an existing ITU-N capability point code, 01234, to 02092: (The existing CPC is replaced with the new CPC.)

chg-sid:cpcn=01234:ncpcn=02092

To add a new ANSI LNP CPC:

chg-sid:cpc=002-002-002:cpctype=lnp

To change an existing ITU-N capability point code with a group code of 01234-aa to 02092-si: (The existing CPC is replaced with the new CPC.)

chg-sid:cpcn=01234-aa:ncpcn=02092-si:cpctype=stp

To add an ITU national INP CPC:

chg-sid:cpcn=04567:cpctype=inp

To change the ITU-N 24-bit site identification STP Point Code when no previous ITU-N site identification STP point code exists:

chg-sid:pcn24=1-101-1

To change the ITU-N site identification STP Point Code when a previous ITU-N site identification STP point code exists:

chg-sid:pcn=11111:npcn=none

chg-sid:pcn24=1-101-1

To add a new ITU-N 24-bit Capability Point Code:

chg-sid:cpcn24=22-22-22

To change an existing 24-bit ITN-N Capability Point Code 22-22-22 to 33-33-33.

chg-sid:cpcn24=22-22-22:ncpcn24=33-33-33

To add a new EIR-type Capability Point Code:

chg-sid:cpctype=eir:cpci=2-30-1

chg-sid:cpctype=eir:cpcn=123

To delete an existing ITUI Capability Spare Point Code:

chg-sid:cpci=s-2-003-4:ncpci=none

To change an existing node ITU-I spare true point code from an assigned point code value to none:

chg-sid:pci=s-1-234-5:ncpci=none

To change an existing ITU-N spare capability point code from s-01234 to s-02092. The existing CPC is replaced with the new CPC:

chg-sid:cpcn=s-01234:ncpcn=s-02092:cpctype=stp

To change or add new node true point codes simultaneously, for multiple point code types:

chg-sid:pca=111-111-111:pci=1-234-5:pcn=12345

chg-sid:pca=111-111-111:pci=1-234-5:pcn24=233-255-255

To change or add new node true point codes simultaneously, for ITU-I spare and ITU-N spare point code types.

chg-sid:pci=s-1-234-5:pcn=s-12345

To change an existing node ITU-N spare true point code from an assigned point code value to none:

chg-sid:pcn=s-12345:npcn=none

To change the CPC list to include an ANSI CPC for the G-Port service:

chg-sid:cpca=1-2-3:cpctype=gport

To change the CPC list to include an ITU-I CPC for the G-Flex service:

chg-sid:cpci=2-3-4:cpctype=gflex

To change the ITU-N site identification STP Point Code when a previous ITU-N site identification STP point code does not exist:

chg-sid:pcn=11112

To change the CPC list to include an ANSI CPC for the ATINPQ service:

chg-sid:cpc=3-4-6:cpctype=atinpq

To change the CPC list to include an ITU-I CPC for the ATINPQ service:

chg-sid:cpci=1-2-4:cpctype=atinpq

Dependencies

At least one optional parameter must be specified.

The Spare Point Code Support feature must be enabled before a spare point code (prefix **s-**) can be specified in the command.

The value specified for the **pcn**, **cpcn**, or **npcn** parameter must be a full point code.

The STP destination and capability point codes can be specified only as full point codes or **none**.

If the **npc**, **npc**, **npci**, **npcn**, or **npcn24** parameter is specified, a corresponding existing **cpc**, **cpca**, **cpci**, **cpcn**, or **cpcn24** parameter must be specified.

If the **npci** parameter or the **npcn** parameter is specified, a corresponding existing **pci** parameter value or **pcn** parameter value must be specified.

If the **cpctype** parameter is specified, the **cpc**, **cpca**, **cpci**, **cpcn**, or **cpcn24** parameter must be specified.

If the **cpctype** parameter is specified, an **npc**, **npc**, **npci**, **npcn**, or **npcn24** parameter cannot be specified in the command.

The values of the **pc/pca/pci/pcn/pcn24**, **cpc/cpca/cpci/cpcn/cpcn24**, and **npc/npc/npci/npcn/npcn24** parameters cannot be equal.

The STP capability point code type (domain) must match the new STP capability point code type (domain).

If the **cpctype=lnp** parameter is specified, then the **cpc/cpca** parameter must be specified with an ANSI point code value.

If the **cpctype=inp** parameter or the **cpctype=eir** parameter is specified, the **cpc** parameter and the **cpca** parameter cannot be specified for the point code. An ANSI point code cannot be specified.

The LNP feature must be on before the **cpctype=lnp** parameter can be specified (see the **enable-ctrl-feat** command).

NOTE: The LNP feature is "turned on" when a value is shown for the LNP ported TNs quantity in the rtrv-ctrl-feat command output.

The INP feature must be on before the **cpctype=inp** parameter can be specified.

The EIR feature must be on before the **cpctype=eir** parameter can be specified.

Only the **pcn** parameter or the **pcn24** parameter can be specified; however, both parameters cannot be specified in the same command.

If a 14-bit ITU-N site ID exists, then a 24-bit ITU-N site ID cannot be assigned. If a 24-bit ITU-N site ID exists, then a 14-bit ITU-N site ID cannot be assigned.

Only one new point code parameter (**npc**, **npcp**, **npcpa**, **npci**, **npcn**, or **npcn24**) can be specified.

If the **pcn**, **npcn**, **cpcn**, or **npcn** parameter is specified, the format must match the format that was assigned with the **chg-stpopts:npfnti** parameter.

The site CLLI code that is specified in the command cannot be the same as an existing route destination CLLI code.

The STP capability point code that is specified in the command cannot be the same as an existing STP capability point code.

The new STP capability point code that is specified in the command cannot be the same as an existing STP capability point code.

If the system is configured for ANSI format point codes, the specified network indicator value (*ni*) of the **pc**, **cpc**, or **npcp** parameter must be **6** or greater when the specified cluster value (*nc*) is **0**.

The true point code and capability point codes cannot be the same as existing secondary point codes.

The existing true point code cannot be changed if it is in the MAP table.

The maximum number of capability point codes that can be provisioned is 96.

If the existing spare ITU-I or spare ITU-N point code is an STP destination point code, then the **npci=none** or **npcn=none** parameter (respectively) cannot be specified.

The parameter value **none** cannot be specified for the **cpc**, **npcpa**, **npci**, **cpcn**, and **npcn24** parameters.

The STP destination point code that is specified in the command cannot be the same as an existing route **dpc** or **cpc**.

The new STP capability point code that is specified in the command cannot be the same as the STP destination point code.

The specified **pci** or **pcn** parameter value must already exist as an STP destination point code.

If the **npc/npcpa/npci/npcn/npcn24** parameter is specified, then the **cpc/cpcpa/cpci/cpcn/cpcn24** must be specified.

The G-Flex feature must be turned on to change the capability point code if the **cpctype=gflex** parameter is specified.

The G-Port feature must be enabled before the **cpctype=gport** parameter can be specified.

If the A-Port or the IS41 GSM Migration (IGM) feature is not enabled, the **cpctype=mnnp** parameter cannot be specified.

If the A-Port or IGM feature is enabled, the **cpctype=gport** parameter cannot be specified.

Could not add or change the (new) capability point code to the list due to software error.

The ATINP feature must be enabled before the **cpctype=atinpq** parameter can be specified.

If the **cpctype=atinpq** parameter is specified, then the **pcn24** parameter cannot be specified.

The V-Flex feature must be turned on before the **cpctype=vflex** parameter can be specified.

Notes

If one of the **pc/pca/pci/pcn/pcn24** parameters is specified to change the point code, the following message is displayed:

CAUTION: SYSTEM SITE ID HAS BEEN CHANGED, MANUAL RE-INITIALIZATION IS NEEDED

If the redirect function refers to any of the **pc/pca** or **cpc/cpca** parameters, the following message is displayed:

CAUTION: SYSTEM SITE ID WAS REFERENCED BY THE REDIRECT FUNCTION'S DPC

To update the OAP configuration, use the **act-oap-config** command.

In order for the change to be fully implemented, you must enter the **init-sys** command. This initializes the entire system system, and reloads all LIMs with the new self ID.

Only one ITU-N Site ID point code can be defined at one time (**pcn** or **pcn24**). To change from one to the other, the current Site ID must be disabled before the new one can be defined.

When the **cpctype=lnp** parameter is specified, it associates a specific service or capability (for example, local number portability query response and message relay service) with one or more of the capability point codes.

After the **cpctype** is defined, it cannot be changed.

For initial installation of a system, the self point code must be entered before any destination is entered.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (**s-**).

When the Site ID is changed, manual initialization is required because an MSU can be in transition between a link card and an SCCP card at the time the SID table is changed. In that case, it is possible for the Destination True Point Code to no longer appear to belong to the STP node, and SCCP would not know what to do with it. The following message is displayed:

CAUTION: SYSTEM SITE ID HAS BEEN CHANGED, MANUAL RE-INITIALIZATION IS NEEDED

The **chg-sid** command is used to identify the STP in the signaling network. STP identity is determined by the Common Language (CLLI) code and the SS7 Destination/True Point Code (DPC). For MTP message discrimination, the STP can also be identified by one or more optional capability codes representing service-related SCCP capabilities resident at the STP.

The CLLI and DPC are used as paired key fields in SEAS to uniquely identify the STP and all SEAS interactions with that STP. This command is viewed as the first command to be used in provisioning a newly commissioned STP or an STP that is being reactivated in a new location or at a new network address.

The **chg-sid** command can also be used to add capability codes to the existing set for that STP after the CLLI and DPC have been initialized. Alternatively, the STP CLLI and DPC can be provisioned locally during installation, and the command used only to add new capability codes. The STP's own CLLI must be provisioned before SEAS-STP communication, in order to support UAL-level interactions.

If the **chg-sid** command is used to change only the capability point code, then the system does not need to be initialized to enable the change.

The **cpctype=vflex** parameter is used to support incoming messages (DPC = CPC) that are routed through Final GTT to the EAGLE 5 ISS V-Flex subsystem.

If the CLLI of the system is entered or changed with the **chg-sid** command, and the SEAS Over IP feature is turned on, then the CCS MR configuration must be changed to include the new EAGLE 5 ISS CLLI value. The following warning message appears:

CAUTION: System CLI has changed, CCSMR re-configuration required
 The **cpctype=vflex** parameter is used to support incoming messages (DPC = CPC) that are routed through Final GTT to the EAGLE 5 ISS V-Flex subsystem.

Output

```
chg-sid:pc=10-20-30
  rlghncxa03w 04-01-07 09:17:40 EST EAGLE 31.3.0
  CHG-SID: MASP A - COMPLTD
;
```

chg-slt

Change Signaling Link Test Message

Use this command to change the fields of a signaling link test message (SLTM) record in the SLTM table.

Keyword: **chg-slt**

Related Commands: **chg-l3t, ent-ls, rtrv-ls, rtrv-slt**

Command Class: Database Administration

Parameters

:sltset= (mandatory)

The signaling link test message record number in the SLTM table.

Range: **1-20**

:enabled= (optional)

Enables the signaling link test message.

Range: **on, off**

Default: Current value.

:mode= (optional)

The *SLTM* mode to be used when sending test messages.

Range: **special, regular**

special—All SLTMs generated by the links in the linkset associated with this SLTM record are designated “special” maintenance messages.

regular—All SLTMs generated by the links in the linkset associated with this SLTM record are designated “regular” maintenance messages.

Default: Current value.

:pattern= (optional)

The test pattern to be sent with a signaling link test message.

Range: *aayyyyyyyyyyyyyyyyyyyyyyyyyyyyyyy*

2 to 30 alphanumeric characters; valid characters are **0-9, a-f, A-F**.

An even number of characters must be used in the pattern. The first two characters of the pattern must be letters.

Default: Current value.

:t1= (optional)

Timer 1. After an SLTM test fails, this parameter specifies the amount of time, in milliseconds, to wait before running the SLTM test again.

Range: **4000-12000**

Default: Current value.

:t2= (optional)

Timer 2. This parameter specifies the amount of time, in milliseconds, that should pass between running SLTM tests for a normally functioning signaling link.

Range: **30000-90000**

Default: Current value.

Example

chg-slt:sltset=1:t1=4000:t2=39000:enabled=off:pattern=aabbccdd

Dependencies

The value of **t1** should be greater than the level 3 timer **t6**. The level 3 timer **t6** can be **100 to 2000** milliseconds. Enter the **rtrv-l3t** command to verify the value of the level 3 timer **t6**.

Notes

None

Output

```
chg-slt:sltset=1:t1=4000:t2=39000:enabled=off:pattern=aabbccdd
rlghncxa03w 04-01-07 00:21:41 EST EAGLE 31.3.0
CHG-SLT: MASP A - COMPLTD
;
```

chg-srvsel

Change Service Selector

Use this command to assign the applicable service selectors required to change a service entry for DSM services.

Keyword: **chg-srvsel**

Related Commands: **dlt-srvsel, ent-srvsel, rtrv-srvsel**

Command Class: Database Administration

Parameters

:gti/gtia/gtii/gtin/gtin24= (mandatory)

Global title indicator. For all service selector commands, the domain is defined as **gti** and **gtia** (ANSI), **gtii** (ITU international), **gtin** (ITU national) and **gtin24** (24-bit ITU national). For the service selector commands, **gti** and **gtia** are equivalent.

Range: Supported value for ANSI: **gti=2** and **gtia=2**
Supported values for ITU: **gtii=2, 4; gtin=2, 4, gtin24=2, 4**

:ssn= (mandatory)

Subsystem number.

Range: **0-255 ***

:tt= (mandatory)

Translation type.

Range: **0-255**

:nai= (optional)

Nature of address indicator. The nature of address indicator can be specified by a mnemonic value (**nai** parameter) or an explicit numeric value (**naiv** parameter). Either the **nai** parameter or the **naiv** parameter, but not both, can be specified. Table A-5 shows the mapping between the **naiv** and the **nai** parameter values.

Range: **sub, rsvd, natl, intl**

Default: Current value

:naiv= (optional)

Nature of address indicator value.

Range: 0-127

The Nature of Address Indicator parameters (**naiv** or **nai**) can be specified by supplying either a mnemonic or an explicit value. At no time can both the mnemonic and the explicit value be specified at the same time in the same command. Either the **naiv** or **nai** parameter can be specified. Table x shows the mapping between the **naiv** and **nai** parameters.

Table 5-29. NAIV/NAI Mapping

NAIV	NAI	Description
0	–	Unknown
1	sub	Subscriber Number
2	rsvd	Reserved for national use
3	natl	National significant number
4	intl	International number
5-127	–	Spare

:naiv= (optional)

Nature of address indicator value. The nature of address indicator can be specified by a mnemonic value (**nai** parameter) or an explicit numeric value (**naiv** parameter). Either the **nai** parameter or the **naiv** parameter, but not both, can be specified. Table A-5 shows the mapping between the **naiv** and the **nai** parameter values.

Range: 0-127

Default: Current value.

:np= (optional)

Numbering plan. The numbering plan can be specified by a mnemonic value (**np** parameter) or an explicit numeric value (**npv** parameter). Either the **np** parameter or the **npv** parameter, but not both, can be specified. Table A-6 shows the mapping between the **npv** and the **np** parameter values.

Range: e164, generic, x121, f69, e210, e212, e214, private

Default: Current value

:npv= (optional)

Numbering plan value.

Range: 0-15

The numbering plan parameters (**npv** or **np**) can be specified by supplying either a mnemonic or an explicit value. At no time can both the mnemonic and the explicit value be specified at the same time in the same command. Either the **npv** or **np** parameter can be specified. Table A-6 shows the mapping between the **npv** and the **np** parameters.

Table 5-30. NP/NPV Mapping

NPV	NP	Description
0	–	Unknown
1	E164	ISDN/telephony numbering plan
2	Generic	Generic numbering plan
3	X121	Data numbering plan
4	F69	Telex numbering plan
5	E210	Maritime mobile numbering plan
6	E212	Land mobile numbering plan
7	E215	ISDN/mobile numbering plan
8	Private	Private network or network-specific numbering plan
9-15	–	Spare

:npv= (optional)

Numbering plan value. The numbering plan can be specified by a mnemonic value (**np** parameter) or an explicit numeric value (**npv** parameter). Either the **np** parameter or the **npv** parameter, but not both, can be specified. Table A-6 shows the mapping between the **npv** and the **np** parameters.

Range: 0-15

Default: Current value.

:nserv= (optional)

New DSM service.

NOTE: The gport service cannot be used for the Prepaid SMS Intercept Phase 1 (PPSMS) or the Portability Check for Mobile Originated SMS feature; use the smsmr service. The mnp service includes the G-Port, A-Port, and IS41-to-GSM Migration services.

Range: eir, gflex, gport, inpq, inpmr, smsmr, idpr, idps, mnp, vflex, atinp

eir — Equipment Identity Register

gflex — GSM flexible numbering

gport — GSM number portability

inpq — INP query

inpmr — INP message relay

smsmr — Prepaid SMS Intercept Phase 1, Portability Check for Mobile Originated SMS, MO-based GSM SMS NP, MO-based IS41 SMS NP, MO SMS IS41-to-GSM Migration, MO SMS ASD, MO SMS GRN, MO SMS B-Party Routing.

idpr — Prepaid IDP Query Relay

idps — IDP Screening for Prepaid

mnp — Mobile Number Portability

vflex — V-Flex

atinp — ATI Number Portability Query (ATINP)

Default: No change to existing value.

:nsnai= (optional)

New service nature of address indicator.

Range: **sub, natl, intl, rnidn, rnndn, rnsdn, none, ccrndn**
sub — Subscriber number
natl — National significant number
intl — International number
rnidn — Routing number prefix and international dialed/directory number
rnndn — Routing number prefix and national dialed/directory number
rnsdn — Routing number prefix and subscriber dialed/directory number
none — The **nsnai** is not associated with the new DSM service.
ccrndn — Country code, routing number, and national directory number

Default: No change to existing value.

:nsnp= (optional)

New service numbering plan.

Range: **e164, e212, e214, none**
e164 — E.164 numbering plan
e212 — E.212 numbering plan
e214 — E.214 numbering plan
none — The **nsnp** is not associated with the new DSM service.

Default: No change to existing value.

Example

```
chg-srvsel:gti=2:tt=10:ssn=250:nserv=gflex
chg-
srvsel:gtin=4:tt=0:ssn=100:np=e164:nai=intl:nsnp=e164:nsnai=rnidn
chg-srvsel:gtin24=4:tt=4:np=e164:ssn=50:nai=intl:nsnai=rnidn
chg-srvsel:gtii=4:tt=4:np=e164:nai=intl:ssn=10:nserv=eir
chg-srvsel:gtii=4:tt=4:np=e164:nai=intl:ssn=11:nserv=vflex
chg-srvsel:gtii=4:tt=4:np=e164:nai=intl:ssn=12:nserv=atinp
```

Dependencies

The G-Flex feature must be turned on before the **nserv=gflex** parameter can be specified.

The INP feature must be turned on before the **nserv=inpmr** or **nserv=inpq** parameter can be specified.

The G-Port feature must be turned on before the **nserv=gport** parameter can be specified.

The Equipment Identity Register (EIR) feature must be turned on before the **nserv=eir** parameter can be specified.

At least one of the following parameters must be specified: **nsnp**, **nsnai**, or **nserv**.

The values **1** and **3** are not valid for the **gti/gtia/gtii/gtin/gtin24** parameters.

The **gtia=4** parameter cannot be specified. The value **4** is not valid for the **gtia** parameter.

If the **gti/gtia/gtii/gtin/gtin24=2** parameter is specified, then the **np(v)** and **nai(v)** parameter combinations cannot be specified.

If the **gtii/gtin/gtin24=4** parameter is specified, then an **np(v)** and **nai(v)** parameter combination must be specified. The parameters can be specified in these combinations: **np** and **naiv**, **npv** and **nai**, **np** and **nai**, or **npv** and **naiv**.

The **np** and **npv** parameters cannot be specified together in the command.

The **nai** and **naiv** parameters cannot be specified together in the command.

If the **nserv** parameter has a value of **inpmr**, **inpq**, **gport**, or **eir**, then the **gtia** and **gti** parameters cannot be specified.

If the **nserv=inpmr** parameter is specified, then the **nsnp=e164** parameter must be specified.

If the value specified for the **nsnai** parameter is **rnidn**, **rnndn**, or **rnsdn**, then the value specified for the **nserv** parameter must be **inpmr**, **gport** or **smsmr**.

If the **nserv=inpq** parameter is specified, then the **gtii** parameter cannot be specified.

If the value specified for the **nserv** parameter is **atinp**, **eir**, **idpr**, **idps**, **inpq**, or **vflex**, then only a value of **none** can be specified for the **nsnai** or **nsnp** parameter.

If the **nserv=gflex** parameter is specified, then the **nsnai=none** and **nsnp=none** parameters cannot be specified.

If the **nserv=inpmr** parameter is specified, then the **nsnai** parameter must be specified.

An entry must already exist that exactly matches the **gti/gtii/gtin/gtin24**, **tt**, **ssn**, **np(v)**, and **nai(v)** combination of parameters.

If the **nsnai=ccrndn** parameter is specified, then the value specified for the **nserv** parameter must be **gport** or **smsmr**.

If the value specified for the **nserv** parameter is **inpmr**, **smsmr** or **gport**, then the **nsnp=e164** parameter must be specified.

If the value specified for the **nserv** parameter is **gflex**, **gport**, **inpmr**, or **smsmr**, then the **nsnai** and **nsnp** parameters must be specified.

The **nsnai=none** parameter can be specified only if the value specified for the **nserv** parameter is **atinp**, **eir**, **idpr**, **idps**, **inpq**, or **vflex**.

If the **ansigflex** STP option is enabled (see the **chg-stpotps** command), then an ITU Service Selector cannot be entered.

The Prepaid IDP Query Relay feature must be turned on before the **nserv=idpr** parameter can be specified.

If the **nserv=idpr** parameter is specified, then the only valid mandatory service parameters are **tt**, **ssn**, **gtii** and **gtin**. If the **nserv=idpr** parameter is specified, then the only valid optional parameters are **np** and **nai**.

The IDP Screening for Prepaid feature must be turned on before the **nserv=idps** parameter can be specified.

When the **nserv=idps** parameter is specified, the only valid optional service parameters are **np** and **nai**.

If the **nserv=idps** parameter is specified, then the only valid mandatory service parameters are **tt**, **serv**, **ssn**, **gtin**, and **gtii**.

The V-Flex feature must be turned on before the **nserv=vflex** parameter can be specified.

The PPSMS or Portability Check for MO SMS feature must be turned on, or the MO SMS ASD, MO SMS GRN, MO SMS IS41-to-GSM Migration, MO SMS B-party Routing, MO-based GSM SMS NP, or MO-based IS41 SMS NP feature must be enabled before the **nserv=smsmr** parameter can be specified.

The ATINP feature must be enabled before the **nserv=atinp** parameter can be specified.

If the **nserv=atinp** parameter is specified, then the **gtin24** parameter cannot be specified.

Notes

None

Output

```

chg-srvsel:gti=2:tt=10:ssn=250:nserv=gflex
rlghncxa03w 07-08-05 16:40:40 EST EAGLE 37.5.0
Service Selector table is (114 of 1024) 11% full
CHG-SRVSEL: MASP A - COMPLTD
;

```

chg-ss-appl**Change Subsystem Application**

Use this command to change the application status in the database.

Keyword: **chg-ss-appl**

Related Commands: **dlt-ss-appl**, **ent-ss-appl**, **rtrv-ss-appl**

Command Class: Database Administration

Parameters

:appl= (mandatory)

Application type.

Range: **lnp**, **inp**, **eir**, **vflex**, **atinpq**

:nstat= (mandatory)

Status.

Range: **offline**, **online**

Example

chg-ss-appl:appl=lnp:nstat=offline

chg-ss-appl:appl=inp:nstat=online

chg-ss-appl:appl=vflex:nstat=online

chg-ss-appl:appl=atinpq:nstat=online

Dependencies

The INP feature must be turned on before the **chg-ss-appl:appl=inp** command can be entered.

The Equipment Identity Register (EIR) feature must be turned on before the **chg-ss-appl:appl=eir** command can be entered.

The application type (**appl** parameter) must already exist in the SS-APPL table.

The subsystem must be in the opposite state of the requested change.

The subsystem must be inhibited before **status=offline** can be specified.

Application type must exist in the LNP database

Application type not in SS-APPL table

The V-Flex feature must be turned on before the **appl=vflex** parameter can be specified.

The ATINP feature must be enabled before the **appl=atinpq** parameter can be specified.

Notes

After the LNP subsystem is inhibited before performing an LNP ELAP bulk download, **chg-ss-appl:appl=lnp:nstat=offline** must be entered to ensure that the subsystem remains down through Service Module card replacements and reloads.

Output

```

chg-ss-appl:appl=vflex:nstat=offline
  rlgncxa03w 08-05-05 13:35:40 EST EAGLE 39.0.0
  CHG-SS-APPL: MASP A - COMPLTD
;

```

chg-ss7opts**Change SS7 Options**

Use this command to update (change by simple replacement) the values of one or more of the SS7 option indicators maintained in the STP Options table. SS7 options can modify normal handling of SS7 traffic.

Keyword: **chg-ss7opts**

Related Commands: **rtrv-ss7opts**

Command Class: Database Administration

Parameters

:discardtfc= (optional)

This parameter enables and disables the handling of TFC traffic from ITU-I networks. If enabled, TFC traffic from ITU-I networks will be discarded.

Range: **on, off**
 on — Discard TFC ITU-I traffic
 off — Do not discard TFC ITU-I traffic

System
Default: **off**

:discardtfcn= (optional)

This parameter enables and disables the handling of TFC traffic from ITU-N networks. If enabled, TFC traffic from ITU-N networks will be discarded.

Range: **on, off**
 on — Discard TFC ITU-N traffic
 off — Do not discard TFC ITU-N traffic

System
Default: **off**

:lsrestrict= (optional)

Use the restricted linkset routing determination algorithm. This parameter enables and disables the restricted linkset routing determination algorithm on a system-wide basis.

Range: **on, off**
 on — Restrictive linkset routing enabled; route traffic on the least restrictive available route with the lowest cost.
 off — Restrictive linkset routing disabled; route traffic on the lowest cost route.

Default: Current value in the database.

System
Default: **off**

:msgpri2itui= (optional)

Message Priority to ITUI. This parameter specifies the priority for messages that cross to an ITUI network.

Range: **0-3 dflt**
 dflt — Messages retain their original functionality.
 0-3 — The priority for any MSU crossing to an ITUI network is set to the provisioned value. MSUs crossing to ANSI networks are not affected.

Default: No change to the current value

System**Default:** dflt**:msgpri2itun=** (optional)

Message Priority to ITUN. This parameter specifies the priority for messages that cross to an ITUN or ITUN-24 network.

Range: 0-3 dflt

dflt—Messages retain their original functionality.

0-3—The priority for any MSU crossing to an ITUN or ITUN-24 network is set to the provisioned value. MSUs crossing to ANSI networks are not affected.

Default: No change to the current value**System****Default:** dflt**:slancporgopc=** (optional)

This parameter specifies whether to copy the originating point code (OPC) from the incoming MSU to the **stplan** application.

Range: on, off

on— Copy the OPC from the incoming MSU to the **stplan** application.

off— Do not copy the OPC from the incoming MSU to the **stplan** application.

System**Default:** off**:slanlsn=** (optional)

SLAN linkset name. This parameter specifies whether to copy the incoming and outgoing linkset names into the STPLAN message format.

Range: on, off

on— Copy the incoming and outgoing linkset names into the STPLAN message format.

off— Do not copy the incoming and outgoing linkset names into the STPLAN message format.

Default: No change to the current value**System****Default:** off**:slsreplace=** (optional)

Signaling link selector replace. This parameter enables the EAGLE 5 ISS to replace the SLS for an ANSI message.

The **randsls=perls** parameter must be specified in the **chg-stpopts** command before the SLS can be replaced.

Range: no, yes

no— Do not replace the SLS in an outgoing message with a randomly generated SLS.

yes— Replace the SLS in an outgoing message with a randomly generated SLS.

Default: No change to the current value.**System****Default:** no**Example**

```
chg-ss7opts:lsrestrict=on
```

```
chg-ss7opts:slancporgopc=on
```

```
chg-ss7opts:slsreplace=yes
```

```
chg-ss7opts:slanlsn=on
```

Dependencies

At least one optional parameter must be specified.

When the **lsrestrict** option is **on**, the **tfatcabmlq** parameter value for C linksets can be changed to a non-zero value (see the **chg-ls** command). If the **tfatcabmlq** parameter in any C linkset has been changed to a non-zero value, the **tfatcabmlq** value must be set back to **0** for all C linksets before the **lsrestrict** option can be turned off.

The STP LAN feature must be turned on (see the **chg-feat** command) before the **slancporgopc** or **slanlsn** parameter can be specified.

Notes

None

Output

```
chg-ss7opts:slancporgopc=on
tekelecstp 08-09-26 15:22:38 EST EAGLE 39.2.0
CHG-SS7OPTS: MASP B - COMPLTD
;
chg-ss7opts:slanlsn=on
tekelecstp 09-01-05 13:19:42 EST EAGLE 40.1.0
CHG-SS7OPTS: MASP B - COMPLTD
;
```

chg-stpopts

Change STP Options

Use this command to change the values of one or more of the STP node level processing option indicators maintained in the STP's options table. All values are assigned initially to system defaults at STP installation time, and they may be updated subsequently using this command.

NOTE: For those STP option attributes supporting STP event message throttling, the values for the indicated parameters shall become effective in the next event-message output interval following their activation. All other updates shall be effective immediately, as of the time of activation.

Keyword: chg-stpopts

Related Commands: rtrv-stpopts

Command Class: Database Administration

Parameters

NOTE: As of Release 40.1, the hscclsrc, hscclkl, and force parameters are obsolete.

:ansigflex= (optional)

This parameter enables ANSI G-Flex to execute at 1700 TPS per DSM card.

Range: **yes, no**
 yes — Enabled
 no — Disabled

Default: Current value

System

Default: **no**

:archbldid= (optional)

Archive build ID. This parameter specifies whether the database archive file name contains the EAGLE 5 ISS build number instead of the release number.

Range: **on, off**
 on — The file name contains the build number.
 off — The file name contains the release number.

:cnvcgda= (optional)

This parameter enables discarding of the CGPA point code in SCCP messages if the destination network type is ANSI, and the point code or alias point code of the destination network type is not defined.

Range: **yes, no**
 yes—Enabled
 no—Disabled

Default: Current value

System

Default: **no**

:cnvcgdi= (optional)

This parameter enables discarding of the CGPA point code in SCCP messages if the destination network type is ITU-I, and the point code or alias point code of the destination network type is not defined.

Range: **yes, no**
 yes— Enabled
 no— Disabled

Default: Current value

System

Default: **no**

:cnvcgdn= (optional)

This parameter enables discarding of the CGPA point code in SCCP messages if the destination network type is ITU-N, and the point code or alias point code of the destination network type is not defined.

Range: **yes, no**
 yes— Enabled
 no— Disabled

Default: Current value

System

Default: **no**

:cnvcgdn24= (optional)

This parameter enables discarding of the CGPA point code in SCCP messages if the destination network type is ITU-N24, and the point code or alias point code of the destination network type is not defined.

Range: **yes, no**
 yes— Enabled
 no— Disabled

Default: Current value

System

Default: **no**

:critalminh= (optional)

Critical alarm inhibit. This parameter enables inhibiting of critical alarms.

Range: **yes, no**
 yes— Enabled
 no— Disabled

Default: Current value

System

Default: **no**

:defcc= (optional)

Default country code.

Range: 1-3 digits, **none**
Valid digits are **0-9, A-F, a-f**.
none—Deletes the current value.

Default: Current value

:defndc= (optional)

The default network destination code.

Range: Valid digits are **0-9, A-F, a-f**.

:defndc= (optional)

Default network destination code.

Range: 1-5 digits, **none**
Valid digits are **0-9, A-F, a-f**.
none—Deletes the current value.

Default: Current value

:dispactalms= (optional)

Display active alarms. This parameter displays active or total alarms in the alarm status area of the VT320 screen (see Figure 4-1). The alarm status area comprises four boxes to show counts for critical, major, minor, and inhibited alarms. When total alarms are displayed (**dispactalms=no**), the counts for critical, major, and minor alarms include any temporarily or permanently inhibited alarms. The alarm status area is labeled *Total Alarm Status*. When active alarms are displayed (**dispactalms=yes**), the counts for critical, major, and minor alarms do not include any temporarily or permanently inhibited alarms. The alarm status area is labeled *Active Alarm Status*. This parameter does not affect the count displayed in the inhibited box; the number of inhibited alarms is always displayed.

Range: **yes, no**
yes— Enabled; active alarm status is displayed
no— Disabled; total alarm status is displayed

Default: Current value

System

Default: **no**

:dsmaud= (optional)

Service Module card audit running state. Refer to the *EPAP Administration Manual* for more information about the Service Module card checksum audit.

Range: **on, off, ccc**
on— Running
off— Not running
ccc— Running with Corruption Cross Correction enabled. EAGLE 5 ISS LNP, G-Flex, G-Port, INP, or V-Flex systems contain $n+1$ Service Module cards (maximum 25) running the VSCCP application. Each of the Service Module cards contains a full image of the RTDB database. If a record within the RTDB database on any card should become corrupted, a mate Service Module card can supply the corrected data. The **dsmaud=ccc** parameter enables the Corruption Cross Correction function used by the system to obtain the correct data from a mate Service Module card.

Default: Current value

:gr2878rglbl= (optional)

This parameter specifies HSL register labels and data for EAGLE 5 ISS supported registers in measurement reports to SEAS.

:gsmdecerr= (optional)

GSM MAP screening decode error action.

Range: **pass, discard**

Default: Current value

System**Default:** pass**:gsmdflt=** (optional)

GSM MAP screening default action.

Range: pass, discard**Default:** Current value**System****Default:** pass**:gtcnvdfilt=** (optional)

This parameter enables routing of SCCP messages using system defaults when an appropriate entry is not found in the Default GT Conversion Table.

Range: yes, no

yes — Enabled

no — Disabled

Default: Current value**System****Default:** no**:mtpdpqc=** (optional)MTP destination point code quantity. This parameter specifies the maximum number of DPCs that can be provisioned from the STP. The value of this parameter is dependent directly on the number of x-list entries that can be provisioned using the **mtpxlq** parameter. If the number of destinations that can be provisioned is increased, the number of x-list entries that can be maintained is decreased.**Range:** 500-8000

500-2000—if DSTN5000 feature is not turned on

500-5000—if DSTN5000 feature is turned on

500-6000—if 6000 Routesets feature is enabled

500-7000—if 7000 Routesets feature is enabled

500-8000—if 8000 Routesets feature is enabled

Default: Current value**System****Default:** 2000**:mtplprst=** (optional)

MTP low priority route set test. This parameter specifies whether low priority route set polling is enabled or disabled at the STP.

Range: yes, no

yes — Enabled

no — Disabled

Default: Current value**System****Default:** yes**:mtpctcdpcq=** (optional)

MTP loop test congestion trigger DPC quantity. This parameter specifies the number of most frequently occurring DPCs to which the MTP loop test messages are to be sent when the MTP loop test is triggered by congestion.

Range: 3-10**Default:** Current value**:mtpkti=** (optional)

MTP loop test indicator. This parameter specifies whether the MTP loop detection procedures are enabled or disabled at the STP.

Range: yes, no

yes — Enabled
no — Disabled
Default: Current value
System
Default: **yes**

:mtp1tst= (optional)

MTP loop test supervision timer. This parameter specifies the amount of time, in milliseconds, that the MTP loop test detection procedures run when started.

Range: **10000-20000**
Default: Current value
System
Default: **10000**

:mtparsi= (optional)

MTP Restart indicator. This parameter specifies whether MTP Restart procedures (both ANSI and ITU) are enabled or disabled at the STP.

Range: **yes, no**
yes — Enabled
no — Disabled
Default: Current value
System
Default: **no**

:mtprsit= (optional)

ANSI MTP Restart isolation timer. This parameter specifies the minimum duration of node isolation, in milliseconds, before the ANSI MTP Restart procedure is deemed necessary.

Range: **2000-900000**
Default: Current value
System
Default: **5000**

:mtp10alt= (optional)

MTP T10 alternate timer, in milliseconds. This parameter specifies the interval at which the STP performs a route set test on low priority routes. The value of the **mtp10alt** parameter must be equal to or greater than the value of the level 3 T10 timer.

Range: **20000-10000000**
Default: Current value
System
Default: **30000**

:mtp31ctl= (optional)

MTP T31 congestion trigger level. This parameter specifies the signaling link congestion level at which the system starts the level 3 t31 timer. When the level 3 t31 timer expires, the associated signaling link is removed from service for realignment.

Range: **1, 2**
Default: Current value

:mtpxlet= (optional)

MTP x-list expiration time. This parameter specifies the maximum amount of time the system maintains an unreferenced dynamic status exception list (x-list) entry. This parameter must be specified in one of the following formats: *mm*, *hmm*, *hmmm*, where *m* is minutes and *h* is hours. For example, **43** is 43 minutes, **138** is 1 hour 38 minutes, and **2400** is 24 hours.

Range: **0020-2400**
Default: Current value

System**Default:** 0100**:mtpxlot=** (optional)

MTP x-list occupancy threshold. This parameter specifies the dynamic status exception list (x-list) occupancy threshold at which the system raises a minor alarm. The threshold is expressed as a percentage of space available.

Range: 0-100**Default:** Current value**:mtpxlq=** (optional)

MTP x-list quantity. This parameter specifies the number of dynamic status exception list (x-list) entries the system maintains. The value of this parameter is dependent directly on the number of destinations that are provisioned using the **mtpdpcq** parameter.

Range: 500-6000

500-2000—if DSTN5000 feature is not turned on

500-5000—if DSTN5000 feature is turned on

500-6000—if 6000, 7000, or 8000 Routesets feature is enabled

Default: Current value**System****Default:** 500**:npcfnti=** (optional)

The ITU National Point Code Format Identifier. This parameter specifies how the ITU national point code is entered into the database and how it is displayed in any outputs from the system. The ITU national point code is a 14-bit integer. The point codes can be a single number up to five digits, or two, three, or four numbers separated by dashes. This parameter specifies the number of bits to allow in each position of the four members.

Range: *m1-m2-m3-m4*

Four members where each member represents the number of bits allowed in the corresponding position for a flexible ITU national point code. The range of each member (*m1-m4*) is from 0 to 14. Each member must be specified no matter how many numbers the point code format contains, and the sum of *m1+m2+m3+m4* must equal 14 (for example, **npcfnti=7-7-0-0**, or **npcfnti=0-6-8-0**). Table 5-31 defines the values of the parts of the ITU national point code.

Table 5-31. NPCFMTI Parameter - ITU National Point Code Values

Number of Bits in Point Code Section								
Bit	0	1	2	3	4	5	6	7
Range of Values	Not Used	0-1	0-3	0-7	0-15	0-31	0-63	0-127
Bit	8	9	10	11	12	13	14	
Range of Values	0-255	0-511	0-1023	0-2047	0-4095	0-8191	0-16383	

Table 5-32. Point Code Format Examples

NPCFMTI Value	Range of Point Code Values
7-7-0-0	0-0 to 127-127
0-6-8-0	0-0 to 63-255
0-0-4-10	0-0 to 15-1023
3-8-3-0	0-0-0 to 7-255-7
2-9-2-1	0-0-0-0 to 3-511-3-1
4-4-4-2	0-0-0-0 to 15-15-15-3
14-0-0-0	00000 to 16385

Default: Current value

System

Default: 14-0-0-0

:randsls= (optional)

Random SLS (signaling link selection) option. This parameter enables the EAGLE 5 ISS to ignore the incoming SLS value and randomly generate a new SLS value to select an outgoing linkset and a link. This parameter is implemented independently of the ITU SLS Enhancement feature settings for individual linksets, which are defined by the **slsocbit** and **slsrsb** parameters of the **ent-ls** and **chg-ls** commands. The value specified for the **randsls** parameter in the **chg-stpopts** command will override the value specified for the **randsls** parameter for each individual linkset.

To enable random SLS generation per linkset, the **randsls=perls** parameter must be specified. When this parameter is specified, the SLS Bit Rotation capability (set with the **slsrsb** parameter of the **ent-ls** or **chg-ls** commands) is overridden, and cannot be used on individual linksets. The **ent-ls** or **chg-ls** commands do not prevent the user from provisioning with the parameter also enables the user to restrict Random SLS generation to Class 0 messages only.

This parameter is implemented independently of the ITU SLS Enhancement feature settings for individual linksets. These settings are specified by the **slsocbit** (Use of the Other CIC BIT capability) and **slsrsb** (SLS Bit Rotation capability) parameters of the **ent-ls** and **chg-ls** commands. When the ITU SLS Enhancement is turned on with either the **randsls=all** or **randsls=class0** parameters, the SLS Bit Rotation capability (set with the **slsrsb** parameter of the **ent-ls** or **chg-ls** commands) is overridden, and cannot be used on individual linksets. The **ent-ls** and **chg-ls** commands do not prevent the user from provisioning with the **slsrsb** parameter.

This parameter applies only to ITU SCCP messages.

Range: **class0, all, off, perls**

class0 — Enables random SLS generation for Class0 SCCP traffic.

all — Enables random SLS generation for all SCCP traffic.

off — Disables random SLS generation.

perls — Enables random SLS generation on a per-linkset basis instead of a system-wide basis.

Default: Current value

System

Default: **off**

:rptlnpmrss= (optional)

Report LNP MR SS unequipped. This parameter specifies whether to generate UIN 1049 for LNP message relay (MR) messages with missing subsystems. If no MAP entry is found from a GTT done on an LNP MR message, the UIM is either displayed (**:rptlnpmrss=yes**) or suppressed (**:rptlnpmrss=no**). This setting applies only to LNP MR messages. All other messages display UIM 1049 when no MAP entry is found, regardless of this setting.

Range: **yes, no**

yes — Display UIM 1049 for all messages.

no — Do not display UIM 1049 for LNP MR with missing subsystems.

Default: Current value

:rstrdev= (optional)

Restore device state. This parameter enables restoration of device states when the **init-sys** command is executed and when an OAM role change occurs and maintains the inhibited state of terminals, links, and cards through an **init-sys** execution, OAM role change, and card reload.



CAUTION: An init-sys command causes the system to go down.

Range: **on, off**

Default: Current value

:secmtpmate= (optional)

This parameter enables security screening for MTP messages received by an STP on a non-C-Link, with an OPC equal to the SID (True, Adjacent, or Capability) point code of its mate.

Range: **off, notify, silent, test**

off — Screening is disabled; message is processed normally.

notify — Screening is enabled; UIM is generated and message is discarded.

silent — Screening is enabled; message is discarded. No UIM is generated.

test — Screening is enabled; UIM is generated and message is processed normally.

Default: Current value

System

Default: **off**

:secmtpsid= (optional)

This parameter enables security screening for MTP messages received at MTP3 containing an OPC equal to its own SID (OPC that is the True, Secondary, or Capability point code entered in the **chg-sid** command) that is not a route-set-congestion-message. The EAGLE 5 ISS should not receive a message with its own OPC unless the message is a result of a circular route test or is an SLTM when the far end is in loopback. (SLTM messages are not checked.)

Range: **off, notify, silent, test**

off — Screening is disabled; message is processed normally.

notify — Screening is enabled; UIM is generated and message is discarded.

silent — Screening is enabled; message is discarded. No UIM is generated.

test — Screening is enabled; UIM is generated and message is processed normally.

Default: Current value

System

Default: **off**

:secmtpsnm= (optional)

This parameter enables security screening for MTP SNM messages. The EAGLE 5 ISS should not receive an MTP network management message unless:

- The OPC is an adjacent point code. (For all link types, this rule does not apply to UPU, TFC, and RCT messages.)
- The EAGLE 5 ISS has a route to the OPC of the MTP network management message on the linkset which the message was received.
- The EAGLE 5 ISS has a route to the destination field in the message (if applicable to the concerned message) on the linkset which the message was received. (For all link types, this rule does not apply to RST messages.)

Range: **off, notify, silent, test**

off — Screening is disabled; message is processed normally.

notify — Screening is enabled; UIM is generated and message is discarded.

silent — Screening is enabled; message is discarded. No UIM is generated.

test — Screening is enabled; UIM is generated and message is processed normally.

Default: Current value

System

Default: **off**

:secscpcscmg= (optional)

This parameter enables security screening for SCCP SCMG messages. The EAGLE 5 ISS should not receive an SCCP network management message unless:

- The EAGLE 5 ISS has a route to the OPC of the SCMG message on the linkset on which the message was received.
- The EAGLE 5 ISS has a route to the Affected Point Code (also called the Concerned Point Code in EAGLE 5 ISS) in the message on the linkset on which the message was received.

This parameter applies only to SSP and SOR messages. SSA, SST, SOG, SBR, SNR and SRT messages are not affected.

Range: **off, notify, silent, test**

off — Screening is disabled; message is processed normally.

notify — Screening is enabled; UIM is generated and message is discarded.

silent — Screening is enabled; message is discarded. No UIM is generated.

test — Screening is enabled; UIM is generated and message is processed normally.

Default: Current value

System

Default: **off**

:slscnv= (optional)

Per node SLS conversion indicator.

Range: **on, off, perls**

on — SLS conversion is enabled on all linksets.

off — SLS conversion is disabled on all linksets.

perls — SLS conversion is enabled on a per linkset basis.

Default: Current value

:tfatfrpr= (optional)

TFA/TFR pacing rate. This parameter specifies the amount of time, in milliseconds, between partial broadcasts of up to 20 percent increments of the number of TFAs/TCAs or TFRs/TCRs to be broadcast by the STP when an affected destination becomes accessible using its primary route rather than an alternate route. The STP uses this pacing to prevent congestion on the newly recovered linksets.

Range: **0-1000**

Set in increments of 100.

Default: Current value
System
Default: 1000

:uimrd= (optional)

Unsolicited Information Message (UIM) redirect indicator. This parameter specifies whether the UIMs are to be routed to the specified output group.

Range: **yes, no**
yes — Enabled
no — Disabled

Default: Current value
System
Default: **no**

:force= (obsolete)

Specify **force=yes** to change the **hscclsrc** parameter value when the TDMs are reporting that the high speed system clocks are currently valid.

NOTE: This parameter is obsolete

Range: **yes**

:hsccll= (obsolete)

High speed master clock line length.

NOTE: This parameter is obsolete.

Range: **longhaul, shorthaul**
longhaul — Gain is high for long haul
shorthaul — Gain is low for short haul

Default: Current value
System
Default: **longhaul**

:hscclsrc= (obsolete)

High speed master clock source. The **force=yes** parameter must be specified with this parameter to change the clock source when the TDMs are reporting that the high speed system clocks are currently valid.

NOTE: This parameter is obsolete.

Range: **rs422, e1framed, e1unframed, t1framed, t1unframed**
rs422 — RS-422 clock source
e1framed — E1 Framed clock source
e1unframed — E1 Unframed clock source
t1framed — T1 Framed clock source
t1unframed — T1 Unframed clock source

Default: Current value
System
Default: **rs422**

Example

```
chg-stpopts:mtpt31ctl=2:uimrd=yes
chg-stpopts:mtpxlq=1000:mtpxlet=0200:mtpxlot=75
chg-stpopts:npcfmti=4-4-4-2
chg-stpopts:rptlnpmrssi=no
```

```

chg-stpopts:rstrdev=on
chg-stpopts:hsc lksrc=t1framed
chg-stpopts:hsc lksrc=e1unframed:force=yes
chg-stpopts:hsc lkl1=shorthaul
chg-stpopts:cnvcgda=yes
chg-stpopts:randsls=per ls

```

Dependencies

The values of the **mtpdpcq** and **mtpxlq** parameters are interdependent; that is, to increase the number of DPCs that can be provisioned, the number of x-list entries that the STP is to maintain must be decreased. Conversely, to increase the number of x-list entries that the STP maintains, the number of DPCs that can be provisioned must be decreased.

At least one optional parameter must be specified.

The ANSI-ITU-China SCCP Conversion feature must be enabled before the **cnvcgda**, **cnvcgdi**, **cnvcgdn**, **cnvcgdn24** or **gtcnvdflt** parameters can be specified.

The **ansigflex** option cannot be enabled if any of the following features is enabled:

- 1100 TPS/DSM for ITU NP
- A-Port
- AINPQ
- ATINP
- EIR
- G-Flex MAP Layer Routing
- G-Port
- INP
- IS41 GSM Migration
- Prepaid Short Message Intercept Phase 1 (PPSMS)
- MO SMS ASD
- MO SMS GRN
- MO SMS IS41-to-GSM Migration
- MO-based GSM SMS NP
- MO-based IS41 SMS NP
- Portability Check for MO SMS
- TIF Number Portability
- V-Flex

The G-Flex feature must be on before the **ansigflex** option can be enabled.

The **ansigflex** option cannot be enabled when Service Selector table contains an ITU entry. (See the **chg-srvsel** command.)

When the **mtpxlet** parameter is specified, the value for minutes (*mm*) must be in the range **00-59**.

The DSTN5000 (5000 Routes) feature must be turned on before the **mtpdpcq** parameter value can be increased to more than **2000**.

When the number of x-list entries (the **mtpxlq** parameter) is specified, the total number of DPCs (the **mtpdpcq** parameter) and x-list entries provisioned cannot exceed the space available in the Route table.

When the number of DPCs (the **mtpdpcq** parameter) is specified, the total number of DPCs and x-list entries (the **mtpxlq** parameter) provisioned cannot exceed the space available in the Route table.

The number of DPCs provisioned (the **mtpdpcq** parameter) cannot be increased if space allocated for maintaining x-list entries becomes full.

The value for the **mtpdpcq** parameter cannot be less than the number of DPCs provisioned.

The Cluster Routing and Management Diversity (CRMD) feature must be turned on before the **mtpxlq**, **mtpxlet**, and **mtpxlot** parameters can be specified.

The ANSI MTP restart (MTPRS) feature must be turned on before the **mtpsrst** parameter can be specified.

The ANSI MTP restart (MTPRS) or ITU MTP restart (ITUMTPRS) feature must be turned on before the **mtpsrst** parameter can be specified.

The value for the **tfatfrpr** parameter must be specified in increments of 100 milliseconds (0.1 seconds).

If critical alarms are inhibited in the system, then the **criticalminh=no** parameter cannot be specified.

If the **npcfnti** parameter is specified, it must be in the format *m1-m2-m3-m4* and all members must be specified. If the ITU national point code format is to only have two members, then two members of the **npcfnti** parameter must be specified as greater than zero, while the other two members must be specified as 0 (for example, **npcfnti=7-7-0-0**, **npcfnti=0-6-8-0**, or **npcfnti=0-0-4-10**).

If the **npcfnti** parameter is specified, the sum of the values specified for *m1+m2+m3+m4* must be equal to 14.

The **defcc** parameter value cannot already exist as an entry in the GSM Options Multiple Country Code (the **multcc** parameter) list.

If a GSM Options Multiple Country Code (the **multcc** parameter) has been defined, the **defcc=none** parameter cannot be specified.

The GSM Map Screening feature must be turned on (see the **enable-ctrl-feat** and **chg-ctrl-feat** commands) before the **gsmdflt** or **gsmsdecerr** parameter can be specified.

The Network Security Enhancements feature must be turned on before the **secmtpmate**, **secmtpsid**, **secmtpsnm**, and **secscpcscmg** parameters can be specified.

If the Origin-based MTP Routing feature is enabled, then the **mtpplrst=no** parameter cannot be specified.

The AINPQ, EIR, G-Flex, G-PORT, INP, LNP ELAP Configuration, Prepaid SMS Intercept Ph1, or V-Flex feature must be turned on before the **dsmaud** parameter can be specified.

The value of the **mtpsrst** parameter must be in the range of **2000 – 900000** milliseconds.

The value specified for **mtp10alt** parameter cannot be less than Level3-T10 timer value.

If the MT-Based GSM SMS NP feature is turned on, then the **defcc=none** parameter cannot be specified.

If the MT-Based IS41 SMS NP feature is turned on, then the **defcc=none** parameter cannot be specified.

If the ATINP feature is turned on, then the **defcc=none** parameter cannot be specified.

If the TN quantity key is above 228M, or if ELAP version 8.0 or above is provisioned, then the **dsmaud=ccc** parameter cannot be specified.

If the IDPR feature is turned on, then the **defcc=none** parameter cannot be specified.

Notes

If the database contains ITU national point codes of a particular format, and the format is changed with the **npcfmti** parameter of the **chg-stpopts** command, the format of the ITU national point codes in the database will be changed to the new format.

The format defined by the **npcfmti** parameter applies to all database entities that use ITU national point codes except gateway screening. Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If the system is using a format for the ITU national point code other than a single number, the point code will have to be converted from its current format to a single number in order to be used by gateway screening. The conversion is explained in “Converting ITU National Point Code Formats”.

For the STP option attributes supporting STP event message throttling, the values for the indicated parameters become effective in the next event-message output interval following their activation. All other updates become effective at the time of activation (immediately).

When the **slscnv=on** parameter is specified with the **chg-stpopts** command, the node acts as if the 5-bit to 8-bit SLS conversion is being performed on every linkset in the database, even those linksets that have the **slsci=no** parameter specified for them.

When the **slscnv=off** parameter is specified with the **chg-stpopts** command, the node acts as if the 5-bit to 8-bit SLS conversion has been turned off for every linkset in the database, even those linksets that have the **slsci=yes** parameter specified for them.

When the **slscnv=perls** parameter is specified with the **chg-stpopts** command, the 5-bit to 8-bit SLS conversion is performed only on the linksets that have the **slsci=yes** parameter specified for them.

When the value of the **disptalms** parameter is changed, there could be a delay of up to five seconds as the VT320 screen refreshes to the selected display.

The maximum allowed number of destination point codes can be changed by the **mtpdpcq** parameter. The maximum value of the **mtpdpcq** parameter is one of the following values:

- **5000** if the DSTN5000 feature is on
- **6000, 7000, or 8000** if the respective 6000, 7000, or 8000 Routesets feature is enabled
- **2000** if no Routes or Routesets feature is on

If the Cluster Routing and Management Diversity feature is turned on, the maximum number of destination point codes contained in the exception list can be changed by the **mtpxlq** parameter. The maximum value of the **mtpxlq** parameter is one of the following values:

- **5000** if the DSTN5000 feature is on
- **6000** if the 6000, 7000, or 8000 Routesets feature is enabled
- **2000** if no Routes or Routesets feature is on

The sum of the values of the **mtpdpcq** and **mtpxlq** parameters can be increased beyond **2500** only if one or more of the following features is turned on:

- If the DSTN5000 feature is turned on (**chg-feat:dstn5000=on**), the **mtpdpcq** and **mtpxlq** parameters cannot exceed **5500**.
- If the 6000 Routesets feature is enabled (see the **enable-ctrl-feat** command), the **mtpdpcq** and **mtpxlq** parameters cannot exceed **6500**.

- If the 7000 Routesets feature is enabled (see the **enable-ctrl-feat** command), the **mtpdpcq** and **mtpxlq** parameters cannot exceed **7500**.
- If the 8000 Routesets feature is enabled (see the **enable-ctrl-feat** command), the **mtpdpcq** and **mtpxlq** parameters cannot exceed **8500**.

To enter seconds (instead of milliseconds) for the timer values, the timer value must contain at least one decimal place, and can contain up to three decimal places. If no decimal places are entered, the system accepts the value as milliseconds. The **rtrv-stpopts** command always displays the output in milliseconds, not seconds.

Output

```
chg-stpopts:randsls=all
tekelecstp 06-07-26 12:03:28 EST EAGLE 36.0.0
CHG-STPOPTS: MASP A - COMPLTD
;
```

chg-t1

Change T1 Interface

Use this command to change a T1 interface for an E1/T1 MIM card, an HC-MIM card, or an E5-E1T1 card used as a T1 card. The T1 port number on the card and the T1 card location in the EAGLE 5 ISS must be specified.

Framing, line length, encoding, master/slave clocking options, and signaling bit setting can be specified.

On an HC-MIM card or an E5-E1T1 card, T1 ports 1, 3, 5, and 7 (master ports) can be independently channel bridged with their adjacent even-numbered (slave) T1 ports 2, 4, 6, and 8 to allow non-signaling data pass-through.

Keyword: **chg-t1**

Related Commands: **dlt-t1**, **ent-t1**, **rtrv-t1**, **tst-t1**

Command Class: Database Administration

Parameters

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

:t1port= (mandatory)

T1 port number. The value must be a T1 port for which an interface has already been configured on the specified T1 card.

Range: **1-8**

Ports 3 - 8 can be specified only for HC-MIM cards and E5-E1T1 cards.

:chanbrdg= (optional)

Indicates whether an odd numbered T1 port on an HC-MIM card or E5-E1T1 card is channel bridged with its adjacent even numbered port for non-signaling data pass through.

Range: **on, off**

Default: **off**

:encode= (optional)

Indicator for use of B8ZS or AMI encoding/decoding.

Range: **b8zs, ami**

Default: Current value

:framing= (optional)

Indicator for framing format.

Range: **sf, esf**

Default: Current value

:ll= (optional)

T1 cable length in feet between the EAGLE 5 ISS and the connecting node.

Range: **0 - 655**

Default: **133**

:t1tsel= (optional)

Timing source. Indicates master (external) or slave (line) timing source, or timing source recovered from the paired master port for the channel bridged slave port.

Range: **line, external, recovered**

Default: Current value

Example

```
chg-t1:loc=1205:t1port=1:encode=ami:t1tsel=external
```

```
chg-t1:loc=1205:t1port=2:encode=b8z:ll=250s
```

```
chg-t1:loc=1205:t1port=3:chanbrdg=on:t1tsel=recovered
```

Dependencies

At least one optional parameter must be specified.

The specified card location (**loc** parameter) must be equipped.

The card specified by the **loc** parameter must be a **limt1** card type.

The specified T1 port (**t1port** parameter) must be already equipped with a T1 interface.

All signaling links that are serviced by the specified T1 card (**loc** parameter) must be deactivated before the values for the **encode**, **t1tsel**, **ll**, and **framing** parameters can be changed. See the **dlt-slk** command to delete the signaling links.

The **chanbrdg=on** parameter cannot be specified for HC-MIM card or E5-E1T1 card even-numbered T1 ports (**t1port** parameter).

The timing source parameter **t1tsel** must be specified when the **chanbrdg=on** parameter is specified.

The **t1tsel=line** parameter cannot be specified when the specified T1 port (**t1port** parameter) on the HC-MIM card or E5-E1T1 card is in channel bridging mode.

The **t1tsel=recovered** parameter can be specified only when the specified T1 port (**t1port** parameter) on the HC-MIM card or E5-E1T1 card is in channel bridging mode.

The **force=yes** parameter must be specified to provision an odd-numbered T1 port to channel bridging mode on an HC-MIM card or an E5-E1T1 card if the adjacent next higher even-numbered port is already provisioned with a T1 interface.

Parameter values cannot be changed for the even-numbered T1 port interface (**t1port** parameter) in a channel bridged pair. The values must be changed in the odd-numbered port interface.

Before an odd-numbered T1 port (**t1port** parameter) on an HC-MIM card or E5-E1T1 card can be provisioned into channel bridging mode (**chanbrdg=on** parameter), all signaling links assigned to its next higher even-numbered adjacent T1 port must be deleted. See the **dlt-slk** command to delete the signaling links.

The fan feature bit must be on before HC-MIM cards can be used in an EAGLE 5 ISS shelf (see the **chg-feat** command). The system checks the fan feature bit when an HC-MIM card is present in the specified odd card location (**loc** parameter) and the **chanbrdg=on** parameter is specified.

HIPR cards must be equipped in card locations xy09 and xy10 (x is the frame, y is the shelf) on each EAGLE 5 ISS shelf that contains one or more HC-MIM cards or E5-E1T1 cards. The system checks for HIPR cards when the **chanbrdg=on** parameter is specified for HC-MIM cards and E5-E1T1 cards.

The following card locations cannot be specified in the **loc** parameter: 1113, 1114, 1115, 1116, 1117, 1118 (OAM, TDM, MDAL cards), or xy09 and xy10 where x is the shelf and y is the slot (HMUX or HIPR cards). .

The **chanbrdg** parameter can be specified only for HC-MIM cards and E5-E1T1 cards.

The **chanbrdg=on** parameter cannot be specified if the T1 port (**t1port** parameter) has a timeslot for a channel card defined in its interface .

The **t1tsel=recovered** parameter cannot be specified for a T1 port (**t1port** parameter) on the HC-MIM or E5-E1T1 card if the T1 port status is channel bridged slave without specifying the **chanbrdg=on** parameter. The **chanbrdg=off** parameter cannot be specified for a T1 port (**t1port** parameter) on the HC-MIM or E5-E1T1 card if the T1 port timing is recovered without specifying the **t1tsel=line** parameter.

Line (slave) timing cannot be used with channel bridging. If the **t1tsel=line** parameter is specified for a T1 port (**t1port** parameter) on an HC-MIM card or E5-E1T1 card with T1 port status of channel bridged with external (master) timing, the **chanbrdg=off** parameter must also be specified. If the **chanbrdg=on** parameter is specified for a T1 port (**t1port** parameter) on an HC-MIM card or E5-E1T1 card that uses T1 port line (slave) timing, the **t1tsel=recovered** parameter or the **t1tsel=external** parameter must also be specified.

Notes

External timing is derived from the EAGLE 5 ISS High-Speed Master Clock (1.544 MHz for T1 or 2.048 MHz for E1); therefore, the Master Timing feature is required. Line timing is derived from its received data stream, if present.

Output

```
chg-t1:loc=1205:t1port=1:encode=ami:t1tsel=external
```

```
rlghncxa03w 04-01-20 09:07:58 EST EAGLE 31.3.0
CHG-T1: MASP A - COMPLTD
```

```
;
```

chg-th-alm

Change SCCP Alarm Thresholds

Use this command to change the alarm thresholds and associated values. For additional information on these values, refer to the *Database Administration-SS7 Manual* in your EAGLE 5 ISS documentation set.

Keyword: chg-th-alm

Related Commands: rept-stat-sccp, rtrv-th-alm

Command Class: Database Administration

Parameters

:gttservlv1= (optional)

The percentage for the SCCP GTT Service error ratio level 1 (lower) Threshold Alarm.

Range: 1-100

Default: 10

:gttservlv2= (optional)

The percentage for the SCCP GTT Service error ratio level 2 (upper) Threshold Alarm.

Range: 1-100

The value for the **gttservlv2** parameter must be greater than the value for the **gttservlv1** parameter.

Default: 20

:lnptndblv1= (optional)

The percentage for the TN Database provisioned level 1 (lower) Capacity Threshold Alarm.

Range: 1-100

Default: 80

:lnptndblv2= (optional)

The percentage for the LNP TN Database provisioned level 2 (upper) Capacity Threshold Alarm.

Range: 1-100

The specified value must be greater than the **lnptndblv1** parameter value.

Default: 95

:nongttservlv1= (optional)

The percentage for the SCCP Non-GTT Service (ATINPQ, GPORT, GFLEX, EIR, INPMR, INPQS, LNPMPR, LNPQS, LRNQT, PLNPQS, TLNP, V-Flex, WNPQS) error ratio level 1 (lower) Threshold Alarm.

Range: 1-100

Default: 10

:nongttservlv2= (optional)

The percentage for the SCCP Non-GTT Service (ATINPQ, GPORT, GFLEX, EIR, INPMR, INPQS, LNPMPR, LNPQS, LRNQT, PLNPQS, TLNP, V-Flex, WNPQS) error ratio level 2 (upper) Threshold Alarm.

Range: 1-100

Default: 20

:sccpcalcmtld= (optional)

The TPS calculation method used to determine if the TPS Threshold Alarm levels have been exceeded or not.

Range: n, nplus1

n — All In Service Normal cards are used in the TPS calculation.

nplus1 — All In Service Normal cards minus 1 card are used in the TPS calculation.

Default: n

:sccpthlv1intvl= (optional)

The number of minutes during which the SCCP threshold level 1 alarm cannot be raised more than once.

Range: 0-1440

Default: 0

:sccpthlv2intvl= (optional)

The number of minutes during which the SCCP threshold level 2 alarm cannot be raised more than once.

Range: 0-1440

Default: 0

:sccptpscap= (optional)

The percentage for the SCCP Load Capacity Threshold Alarm.

Range: 1-100

Default: 80

:thermallv1= (optional)

Thermal Alarm Level 1 as a percentage of a card's thermal limit.

Range: 73-92

:thermallv2= (optional)

Thermal Alarm Level 2 as a percentage of a card's thermal limit.

Range: 74-100

Example

```
chg-th-alm:lnptndblv1=85
chg-th-alm:sccptpscap=85
chg-th-alm:sccpalcmtld=nplus1
chg-th-alm:gttserlvlv1=25:gttserlvlv2=28
chg-th-alm:sccpthlv1intvl=20:sccpthlv2intvl=50
chg-th-alm:nongttserlvlv1=30:nongttserlvlv2=60
```

Dependencies

Each Level 1 parameter value must be less than its corresponding Level 2 parameter value.

Notes

To display the currently configured values for the Thermal Alarm Levels, use the **rtrv-th-alm** command.

HC MIM cards have a thermal operating limit of 82 degrees Celsius. The E5-E1T1, E5-ATM, E5-ENET, E5-IPSM, and E5-TSM cards have a thermal operating limit of 99 degrees Celsius.

The thermal threshold values represent a percentage of the thermal operating limit of a card.

Output

```
chg-th-alm:thermallv1=85
rlghncxa03w 06-05-07 11:43:04 EST EAGLE 35.0.0
CHG-TH-ALM: MASP A - COMPLTD
;
```

chg-tifopts

Change TIF Options

Use this command to update the TIF Options table.

NOTE: Values other than none that are entered for the dlma - dlmc parameters for the TIF services (TIF, TIF2, TIF3) using this command will overwrite values entered for those parameters using the chg-npp-serv command.

Keyword: chg-tifopts

Related Commands: rtrv-tifopts

Command Class: Database Administration

Parameters

:aclen= (optional)

Area code length. This parameter specifies the length of area code.

This parameter is used with the calling party number.

Range: 0-8

Default: 0

:condcgpn= (optional)

This parameter indicates the preconditioning that is required when a CgPN lookup is needed.

Range: **addcc, none**
 addcc, none — The country code is added.
Default: **none**

:crprel= (optional)

This parameter specifies the ISUP Release cause for a message that is determined to be circular routed.

Range: **0-255**
Default: **31** - normal, unspecified

:dfftrn= (optional)

Default routing number. This parameter provides a set of digits to substitute for a signalling point. This parameter is used with both calling party and called party numbers.

Range: 1-15 digits, **none**
 1-15 hexadecimal digits. Valid digits are **0-9, a-f, A-F**.
Default: **none**

:dlma= (optional)

Delimiter A. This parameter specifies the digits used for Delimiter A in an NPP Formatting Action.

Range: 1-16 digits, **none**
 1-16 hexadecimal digits. Valid digits are **0-9, a-f, A-F**.
Default: **none**

:dlmb= (optional)

Delimiter B. This parameter specifies the digits used for Delimiter B in an NPP Formatting Action.

Range: 1-16 digits, **none**
 1-16 hexadecimal digits. Valid digits are 0-9, a-f, A-F.
Default: **none**

:dlmc= (optional)

Delimiter C. This parameter specifies the digits used for Delimiter C in an NPP Formatting Action.

Range: 1-16 digits, **none**
 1-16 hexadecimal digits. Valid digits are **0-9, a-f, A-F**.
Default: **none**

:iamcgpn= (optional)

This parameter specifies the format of the outgoing CgPN digits.

Range: **rn, rndn, dn**
 rn — Replaces the CgPN with the RN.
 rndn — Adds the RN as a prefix to the CgPN.
 dn — Replaces the CgPN with the DN.
Default: **dn**

:matchseq= (optional)

This parameter specifies the DN lookup mechanism.

Range: **dn, nptype**
 dn — The range database is searched only if the DN is not found during subscriber lookup.
 nptype — The range database is searched if the DN is not found during subscriber lookup or if the located DN does not match the value specified for the **nptype** or **nptypecgpn** parameter.
Default: **dn**

:npflag= (optional)

This parameter specifies whether the **nm** parameter is modified in the IAM message to show that NP lookup has been performed.

The **nm** parameter exists only in incoming and outgoing IAM messages.

Range: **nm, none**
 nm, none — Modifies the **nm** parameter.
 none — Does not modify the **nm** parameter.
Default: **none**

:nptype= (optional)

NP entity type. This parameter specifies the entity type of the DN that is used to indicate that a successful NP lookup occurred.

Range: **sp, rn, sprn, all, rnsdpn, any**
 sp — signaling point
 rn — routing number
 sprn — Lookup is successful if the value of the entity type is **sp** or **rn**.
 all — Lookup is always considered successful.
 rnsdpn — Lookup is successful if the value of the entity type is **rn, sp**, or **dn**.
 any — Lookup is successful if the value of the entity type is **rn, sp**, or no match with any entity.
Default: **sprn**

:nptypecgpn= (optional)

NP entity type for the CgPN. This parameter specifies the entity type of the DN that is used to indicate that a successful NP lookup occurred.

Range: **sp, rn, sprn, all, rnsdpn, any**
 sp — signaling point
 rn — routing number
 sprn — Lookup is successful if the value of the entity type is **sp** or **rn**.
 all — Lookup is always considered successful.
 rnsdpn — Lookup is successful if the value of the entity type is **rn, sp**, or **dn**.
 any — Lookup is successful if the value of the entity type is **rn, sp**, or no match with any entity.

:rcausenp= (optional)

This parameter specifies the result of an NP lookup that causes a REL message to be issued.

Range: **0-127**
Default: **0**

:rcausepfx= (optional)

This parameter specifies the prefix that causes a REL message to be issued without performing an NP lookup.

Range: **0-127**
Default: **0**

:rnrqd= (optional)

This parameter specifies whether the redirection number is included in the release message when release handling is indicated.

Range: **yes, no**
Default: **yes**

:snsdgpndflt= (optional)

This parameter specifies the digits to be used in calling number simple number substitution.

Range: 1-32 digits, **none**
 1-32 hexadecimal digits. Valid digits are **0-9, a-f, A-F**.
Default: **none**

:splitiam= (optional)

This parameter specifies when to split the IAM into IAM + 1 SAM.

Range: 15-31, none

Default: none

Example

```
chg-tifopts:dlma=1234567890
chg-tifopts:dlmb=1234567890123456
chg-tifopts:dlmc=1234567890abcdef
chg-tifopts:dfltrn=123456789012345
chg-tifopts:nptype=all
```

Dependencies

At least one optional parameter must be specified.

At least one of the following features must be enabled before this command can be entered.

- TIF Additional Subscriber Data
- TIF Generic Routing Number
- TIF Number Portability
- TIF SCS Forwarding
- TIF Simple Number Substitution

The Eagle Options table is corrupt or cannot be found.

If the TIF ASD feature is turned on, then the **matchseq=nptype** parameter cannot be specified.

If the TIF GRN feature is turned on, then the **matchseq=nptype** parameter cannot be specified.

The TIF Number Portability feature must be enabled before the **matchseq=nptype** parameter can be specified.

Notes

None

Output

```
chg-tifopts:dfltrn=123456789012345
tekelecstp 08-07-20 09:36:03 EST EAGLE 39.2.0
CHG-TIFOPTS: MASP A - COMPLTD
;
```

chg-tinpopts

Change TINP Options

Use this command to update the TINPOPTS table. The TINP options are used to perform tasks such as number conditioning and response generation.

Keyword: chg-tinpopts

Related Commands: rtrv-tinpopts

Command Class: Database Administration

Parameters**:dlthomern=** (optional)

This parameter specifies whether the home routing number (HomeRN) is deleted from the CdPN in the incoming IAM message before Number Portability (NP) database lookup is performed.

Range: **always, none****always**—Deletes the HomeRN, if present.**none**—Does not delete the HomeRN.**:dnfmt=** (optional)

Dialed number (DN) encoding scheme. This parameter specifies how the DN in the REL or IAM message is encoded.

Range: **rn, rndn, ccrndn, pfxrndn****rn**—Encoded with the RN.**rndn**—Encoded with the RN+DN. The number in the incoming IAM message is used as the DN.**ccrndn**—Encoded with the country code (CC)+RN+DN.**pfxrndn**—Encoded with the prefix +RN.**Default:** **rn****:dnnai=** (optional)

DN Nature of Address (NAI) value. This parameter specifies the NAI that is used in the DN for the outgoing REL or IAM message.

Range: **0-15 none****none**—Uses the NAI value from the incoming IAM message.**:iamact=** (optional)

IAM action. This parameter specifies the action that the STP performs on IAM messages.

Range: **relay, release, none****relay**—Modifies the outgoing IAM message if RTDB lookup is successful.**release**—Discards the IAM message and generates an ISUP REL message if NP database lookup is successful.**none**—Turns off the handling of IAM messages on the STP.**Default:** **relay****:iamcgpn=** (optional)

This parameter specifies whether the CgPN of an incoming IAM message is looked up in the NP database and modified.

Range: **rn, rndn, none****rn, none**—Replaces the CgPN with the RN.**rndn, none**—Adds the RN as a prefix to the CgPN.**none**—Does not look up the CgPN in the NP database.**Default:** **none****:npflg=** (optional)

This parameter specifies whether the **nm** parameter is modified in the IAM message to show that RTDB lookup has been performed.

The **nm** parameter exists only in incoming and outgoing IAM messages.

Range: **nm, none****nm, none**—Modifies the **nm** parameter.**none**—Does not modify the **nm** parameter.**Default:** **none**

:nptype= (optional)

NP entity type. This parameter specifies the entity type of the DN that is used to indicate that a successful RTDB lookup occurred.

Range: **sprn, sp, rn, all**

sprn — Lookup is successful if the value of the entity type is **sp** or **rn**.

sp — signaling point

rn — routing number

all — Lookup is successful if the value of the entity type is **sp** or **rn**, or if no entity type is found.

Default: **sprn**

:rcausenp= (optional)

This parameter specifies the result of an RTDB lookup that causes an REL message to be issued.

Range: **0-127**

:rcausepfx= (optional)

This parameter specifies the prefix that causes an REL message to be issued without performing an RTDBlookup.

Range: **0-127**

:snai= (optional)

This parameter specifies the field in the incoming IAM message that is used to modify the DN before NP lookup is performed.

Range: **intl, nat, iamnai**

intl — The IAM message is not modified.

nat — Adds the CC to the DN.

iamnai — Modifies the DN with the NAI value from the IAM message. If the NAI value is *sub*, then the CC+RN is added. If the NAI value is *national*, then the CC is added. If the NAI value is *intl*, then the DN is not modified. If the NAI is any other value, then the NAI is treated as an *intl* format.

Example

```
chg-tinpopts:iamact=release
```

Dependencies

At least one optional parameter must be specified.

The **chg-tinpopts** command cannot be entered unless the TINP feature was enabled before upgrading to Release 39.2 or later.

Notes

None

Output

```
chg-tinpopts:iamact=release
tekelecstp 08-02-26 12:03:28 EST EAGLE 38.0.0
CHG-TINPOPTS: MASP A - COMPLTD
;
```

chg-trm**Change Terminal**

Use the change terminal command to configure the operational characteristics of each of the 40 terminal ports used to connect modems, printers, and terminals to the system.

Keyword: chg-trm

Related Commands: act-echo, canc-echo, chg-trm, dact-echo, inh-trm, rept-stat-trm, rmv-trm, rst-trm, rtrv-trm

Command Class: Database Administration

Parameters

NOTE: The following parameters are no longer available: lnpdb, lnpsub

:trm= (mandatory)

Terminal. This parameter specifies the ID number of the terminal whose characteristics are to be changed.

Range: 1-40

:all= (optional)

This parameter specifies whether to display unsolicited messages of all types (TRAF, LINK, SA, DB, SYS, PU, UIMRD, APPSERV, APPSS, CARD, CLK, DBG, GTT, GWS, MEAS, MON, MPS, SEAS, SLAN) in the scroll area.

Range: yes, no
yes—Receive all.
no—Receive none.

Default: yes—If **type=emsalm** is specified
 Current value—if **type** parameter value is not **emsalm**

:appserv= (optional)

Application server. This parameter specifies whether to display UAMs and UIMs assigned to the Application Server output group in the scroll area.

Range: yes, no
yes—Receive all.
no—Receive none.

Default: If **all** is specified—current **all** value
 If **all** is not specified—current **appserv** value.
 If **type=emsalm** is specified—yes

System

Default: no

:appss= (optional)

Application subsystem. This parameter specifies whether to display UAMs and UIMs assigned to the Application Subsystem output group in the scroll area

Range: yes, no
yes—Receive all.
no—Receive none.

Default: If **all** is specified—current **all** value
 If **all** is not specified—current **appss** value.
 If **type=emsalm** is specified—yes

System

Default: no

:baud= (optional)

This parameter specifies the line speed (baud rate) for this terminal's serial port connection.

Range: 2400, 4800, 9600, 19200

Default: If **type=oap**—19200
 If **type** is **not oap**—no change to current value.

System

Default: 9600

:card= (optional)

This parameter specifies whether to display UAMs and UIMs assigned to the Card output group in the scroll area.

Range: **yes, no**

yes—Receive all.

no—Receive none.

Default: If **all** is specified—current **all** value

 If **all** is not specified—current **card** value.

 If **type=emsalm** is specified—**yes**

System

Default: **no**

:clk= (optional)

Clock. This parameter specifies whether to display UAMs and UIMs assigned to the Clock output group in the scroll area.

Range: **yes, no**

yes—Receive all.

no—Receive none.

Default: If **all** is specified—current **all** value

 If **all** is not specified—current **clk** value.

 If **type=emsalm** is specified—**yes**

:db= (optional)

Database. This parameter specifies whether to display database-related unsolicited messages in the scroll area.

Range: **yes, no**

yes—Receive all.

no—Receive none.

Default: If **all** is specified—current **all** value

 If **all** is not specified—current **db** value.

 If **type=emsalm** is specified—**yes**

System

Default: **no**

:dbg= (optional)

Debug. This parameter specifies whether to display UAMs and UIMs assigned to the Debug output group in the scroll area.

Range: **yes, no**

yes—Receive all.

no—Receive none.

Default: If **all** is specified—current **all** value

 If **all** is not specified—current **dbg** value.

 If **type=emsalm** is specified—**yes**

System

Default: **no**

:dural= (optional)

Terminal lockout time. This parameter specifies the length of time the terminal is disabled after each failed login/unlock attempt in excess of the threshold configured on the **mxinv** parameter. The value can be specified as seconds (*ss*); minutes and seconds (*mmss*); or hours, minutes, and seconds (*hhmmss*).

Range: **0-999999**

0-59 (*ss*)

0-5959 (*mmss*)

0–995959 (*hhmmss*)
999999

Default: Current value.

System

Default: **100** - 1 minute, 0 seconds

:fc= (optional)

Flow control. This parameter specifies the type of flow control used to regulate the flow of data between the system and an RS-232 connected device, so that no characters are lost (especially at high baud rates). The control setting of the system and the connected device must match.

Range: **hw, sw, both, none**

hw—hardware flow control

sw—software flow control

both—hardware and software flow control

none—neither hardware nor software flow control

Default: If **type=oap**—**sw**

If **type** is **not oap**—no change to current value.

System

Default: **sw**

:gtt= (optional)

This parameter specifies whether to display UAMs and UIMs assigned to the GTT output group in the scroll area.

Range: **yes, no**

yes—Receive all.

no—Receive none.

Default: If **all** is specified—current **all** value

If **all** is not specified—current **gtt** value.

If **type=emsalm** is specified—**yes**

:gws= (optional)

This parameter specifies whether to display UAMs and UIMs assigned to the GWS output group in the scroll area.

Range: **yes, no**

yes—Receive all.

no—Receive none.

Default: If **all** is specified—current **all** value

If **all** is not specified—current **gws** value.

If **type=emsalm** is specified—**yes**

System

Default: **no**

:link= (optional)

This parameter specifies whether to display link maintenance-related unsolicited messages in the scroll area.

Range: **yes, no**

yes—Receive all.

no—Receive none.

Default: If **all** is specified—current **all** value

If **all** is not specified—current **link** value.

If **type=emsalm** is specified—**yes**

:logintmr= (optional)

Login timer. This parameter specifies the amount of time, in seconds, allowed for a user to log into a Telnet terminal after selecting the terminal.

This parameter applies to Telnet terminals.

Range: 3-600 **none**

none—Login can occur at any time after selecting the terminal.

Default: No change to the current value

System

Default: **none**

:logouttmr= (optional)

Logout timer. This parameter specifies the amount of time, in seconds, before the Telnet session closes after the user manually or automatically logs out.

This parameter applies to Telnet terminals.

Range: 0-1200 **none**

none—The Telnet session does not close after logout.

Default: No change to the current value

System

Default: **none**

:meas= (optional)

Measurement. This parameter specifies whether to display UAMs and UIMs assigned to the Measurements Maintenance output group in the scroll area.

Range: **yes, no**

yes—Receive all.

no—Receive none.

Default: If **all** is specified—current **all** value

If **all** is not specified—current **meas** value.

If **type=emsalm** is specified—**yes**

System

Default: **no**

:mon= (optional)

Monitor. This parameter specifies whether to display UAMs and UIMs assigned to the Monitor output group in the scroll area.

Range: **yes, no**

yes—Receive all.

no—Receive none.

Default: If **all** is specified—current **all** value

If **all** is not specified—current **mon** value.

If **type=emsalm** is specified—**yes**

:mps= (optional)

This parameter specifies whether to display UAMs and UIMs assigned to the MPS output group in the scroll area.

Range: **yes, no**

yes—Receive all.

no—Receive none.

Default: If **all** is specified—current **all** value

If **all** is not specified—current **mps** value.

If **type=emsalm** is specified—**yes**

:mxinv= (optional)

Login/unlock failure threshold. When a login or unlock failure occurs on a terminal, a counter of successive login failures is incremented by one. After the increment, if the counter is greater than or equal to the mxinv parameter value, the system sends an information message to all system administrator ports and locks out the port temporarily. The port is locked out for an interval that is specified in the dural parameter.

To disable the info message and temporary lockout function for the terminal, specify **mxinv=0**.

Range: 0-9

Default: Current value.

System

Default: 5 - successive failed login/unlock attempts

:pngfailcnt= (optional)

Ping fail count. This parameter specifies the number of consecutive ping fails that must occur before the Telnet connection is dropped.

This parameter applies to Telnet terminals or to EMSALM terminals that have Telnet connections.

Range: 1-10

Default: No change to the current value

System

Default: 1

:pngtimeint= (optional)

Ping time out. This parameter specifies the amount of time, in milliseconds, that must pass before the IPSM card initiates a new ping cycle.

This parameter applies to Telnet terminals or to EMSALM terminals that have Telnet connections.

Range: 100-1200000 **none**

none—Pinging does not occur.

Default: No change to the current value

System

Default: none

:prty= (optional)

Parity. This parameter specifies the parity for this terminal's serial port connection.

Range: none, even, odd

Default: If **type=oap**—even

If **type** is not **oap**—current value.

System

Default: even

:pu= (optional)

Program update. This parameter specifies whether to display program update-related unsolicited messages in the scroll area.

Range: yes, no

yes—Receive all.

no—Receive none.

Default: If **all** is specified—current **all** value

If **all** is not specified—current **pu** value.

If **type=emsalm** is specified—yes

:sa= (optional)

Security administration. This parameter specifies whether to display security administration-related unsolicited messages in the scroll area.

Range: yes, no

yes—Receive all.

no—Receive none.

Default: If **all** is specified—current **all** value

If **all** is not specified—current **sa** value.

If **type=emsalm** is specified—yes

:sb= (optional)

Stop bit. This parameter specifies the number of stop bits used in communications with the terminal.

Range: 1-2
Default: If **type=oap**—1
 If **type** is **not oap**—current value.
System
Default: 1

:seas= (optional)

This parameter specifies whether to display UAMs and UIMs assigned to the SEAS Maintenance output group in the scroll area.

Range: **yes, no**
yes—Receive all.
no—Receive none.
Default: If **all** is specified—current **all** value
 If **all** is not specified—current **seas** value.
 If **type=emsalm** is specified—**yes**

:slan= (optional)

This parameter specifies whether to display UAMs and UIMs assigned to the SLAN Maintenance output group in the scroll area.

Range: **yes, no**
yes—Receive all.
no—Receive none.
Default: If **all** is specified—current **all** value
 If **all** is not specified—current **slan** value.
 If **type=emsalm** is specified—**yes**
System
Default: **no**

:sys= (optional)

System. This parameter specifies whether to display system maintenance-related unsolicited messages in the scroll area.

Range: **yes, no**
yes—Receive all.
no—Receive none.
Default: If **all** is specified—current **all** value
 If **all** is not specified—current **sys** value.
 If **type=emsalm** is specified—**yes**

:tmout= (optional)

Maximum channel idle time. This parameter specifies the maximum amount of time in minutes that a login session can remain idle (that is, no user input) on a terminal before being automatically logged off. To disable idle time monitoring for a terminal, specify **tmout=0**.

Range: **0-99**
Default: Current value.
System
Default: 30 - minutes

:traf= (optional)

Traffic. This parameter specifies whether to display traffic-related unsolicited messages displayed in the scroll area.

Range: **yes, no**
yes—Receive all.
no—Receive none.
Default: If **all** is specified—current **all** value
 If **all** is not specified—current **traf** value

If **type=emsalm** is specified—**yes**

System

Default: **no**

:type= (optional)

This parameter specifies the type of device being connected to this terminal.

Range: **vt320, ksr, oap, printer, sccs, mgmt, telnet, emsalm, none, seas**

The **type=emsalm** parameter value is valid for terminals 1-40.

Only **telnet, emsalm, seas**, and **none** are valid values for terminals 17 - 40.

Default: Current value.

System

Default: **vt320** - for terminals 1-16
telnet - for terminals 17-40

:uimrd= (optional)

Unsolicited messages. This parameter specifies whether to display the unsolicited messages assigned to this group.

Range: **yes, no**

yes—Receive all.

no—Receive none.

Default: If **all** is specified—current **all** value
 If **all** is not specified—current **uimrd** value.
 If **type=emsalm** is specified—**yes**

System

Default: **no**

Example

```
chg-trm:trm=8:type=oap:all=yes
chg-trm:trm=13:type=ksr:baud=9600:uimrd=yes
chg-trm:trm=1:link=yes:sys=yes:db=yes
chg-trm:trm=17:all=yes
chg-trm:trm=22:type=none
chg-trm:trm=10:link=yes:card=yes:clk=yes
chg-trm:trm=1:type=ksr:gtt=yes
chg-
trm:trm=2:appserv=no:appss=yes:card=yes:clk=no:dbg=no:gtt=yes:gws
=no :meas=yes:mon=no:mps=yes:seas=no:slan=yes
chg-trm:trm=17:type=seas
chg-trm:trm=17:logintmr=50
chg-trm:trm=17:logouttmr=50
chg-trm:trm=17:pngtimeint=1000
chg-trm:trm=17:pngfailcnt=5
```

Dependencies

At least one optional parameter must be specified.

The system requires that at least two terminals be configured as security administration terminals. If only two security administration terminals are configured, the value of the **type** parameter cannot be changed to a value that would make the terminal unusable (**oap, printer**, or **none**) because only one security administration terminal would remain.

The combined total line speed (baud rate) for all active terminal ports cannot exceed **168,000**. This value allows for 16 terminal to be configured at 9600 bps each.

If the **prty=none** parameter is specified, then the **type=vt320** parameter cannot be specified. A VT320 terminal does not support 7-bit data bytes and no parity. The number of data bits cannot be changed.

If the **prty=none** parameter is specified, then the **type=sccs** parameter cannot be specified.

For terminals 1 – 16, the **type=telnet** parameter cannot be specified.

For terminals 17 - 40, the value of the **type** parameter must be **telnet**, **seas**, **emsalm**, or **none**.

If the **type=telnet terminal** parameter is specified, then the **baud**, **prty**, **sb**, and **fc** parameters cannot be specified.

If the value of the **type** parameter is **telnet**, **seas**, or **emsalm**, and if the value of the **trm** parameter is 17-40, then an IPSM card must be equipped in the system. Parameters for these terminals cannot be changed unless an IPSM card has been added for the target terminal.

NOTE: If you install one IPSM card, telnet terminals 17-24 are available. If you install two IPSM cards, telnet terminal IDs 17-32 are available. If you install three IPSM cards, telnet terminal IDs 17-40 are available. If you remove an installed IPSM card, the eight terminal IDs that were assigned to that card are no longer available. For example, if you install three IPSM cards, and remove the second card that was installed, telnet terminal IDs 17-24 and 33-40 are available. To make the IDs consecutive again, you would need to remove and reinstall the third card that was previously installed. Then its available terminal IDs change from 33-40 to 25-32. You can enter the rtrv-trm command to display the available telnet terminal IDs.

The terminal port must be inhibited (see the **inh-trm** command) before the **type**, **baud**, **prty**, **sb** and **fc** parameters can be changed. The **all**, **traf**, **link**, **sa**, **db**, **sys**, **uimrd**, and **pu** parameters can be changed on any terminal, including the one in use, regardless of the port status (inhibited or allowed).

The port cannot be removed from service (**rmv-trm**) when the **type**, **baud**, **prty**, **sb**, and **fc** parameters are being changed.

The SEAS feature must be on before the **type=oap** parameter can be specified (see the **rtrv-feat** command output SEAS=ON entry).

The IP User Interface (Telnet) feature must be enabled and turned on before the **type=telnet** parameter (IDs 17-40) or the **type=emsalm** parameter (IDs 1-40).can be specified.

A maximum of two OAP terminals (**type=oap** parameter) can be configured for SEAS.

If the **type=oap** parameter is specified, then the **baud**, **prty**, **sb**, and **fc** parameters cannot be specified.

The **baud**parameter value must be **2400**, **4800**, **9600**, or **19200**.

The specified terminal must be inhibited before the **type=seas** parameter can be specified.

If the specified terminal is a SEAS Terminal, then the SEAS output group cannot be turned off.

If the SEAS Over IP feature is turned on, then an E5-IPSM card must be provisioned at the location corresponding to the specified SEAS terminal.

The SEAS Over IP feature must be enabled before the **type=seas** parameter can be specified.

The **type=seas** parameter cannot be specified under the following conditions:

- The value of the **trm** parameter is **1 - 16**.
- Specifying the parameter results in more than one SEAS terminal on an E5-IPSM card.
- Specifying the parameter results in more than two SEAS terminals in the EAGLE 5 ISS.
- An E5-IPSM card is not physically present in the corresponding location.

- An available (unconfigured) SEAS terminal does not exist in the SEASCFG table.

The IP User Interface feature must be turned on before the value of the **type** parameter can be **telnet**, **seas**, **emsalm**, or **none**.

The **type=telnet** parameter must be specified before the **logintmr** and **logouttmr** parameters can be specified.

If the value specified for the **type** parameter is **seas** or **none**, then the **pngtimeint** and **pngfailcnt** parameters cannot be specified.

The terminal must be in the Inhibited state before the **logintmr**, **logouttmr**, **pngtimeint**, and **pngfailcnt** parameters can be specified.

Notes

Refer to Appendix E, "Unsolicited Output Message Groups," in the *EAGLE 5 ISS Maintenance Manual* for a list of unsolicited output messages that you might see for each output group.

This command cannot be entered when an upgrade is in progress.

If your terminal has the auto-wrap feature, you must disable the feature to use the terminal on the system.

To disable the informational message and temporary port lockout feature for a terminal, specify the **mxinv=0** parameter.

To prevent a terminal from being disabled, specify the **dural=0** parameter.

To make the lockout period for a terminal indefinite, specify the **dural=999999** parameter. When disabled, a terminal remains disabled until the port is inhibited (**inh-trm** command) and then allowed (**alw-trm** command).

Terminal idle time monitoring and auto-logout applies only if the terminal **type** is **vt320**, **ksr**, or **sccs**. The **chg-trm** command can be entered with a **tmout** parameter value for other terminal types, but it has no effect.

Using the terminal type of **none (type=none)** conveys to the terminal processor that a particular port is not connected or is no longer in use. The terminal processor does not service output queues for a terminal port that is configured as **type=none**.

When the terminal type for a terminal is changed to **type=emsalm**, the value for all output group parameters is set to **yes**.

When the terminal type for a terminal is changed from **type=emsalm** to another type, the current value for all output groups is not changed. A command must be entered to change one or more output group values to another value.

NOTE: Though the output groups are set to yes, terminals of type emsalm do not display any reports or any UIMs except "UIM 1083 system alive".

The number of data bits cannot be changed; it is set to 7.

Software flow control (XON and XOFF pacing), involves sending control codes between the system and the connected device.

Hardware flow control (RTS and CTS pacing) uses the RTS and CTS lines of the RS-232 interface to pause and restart the flow of data between the system and the connected device.

Software flow control is recommended if the connected device is a printer. Both software and hardware flow control are highly recommended if the connected device is a modem.

To connect a modem, specify the **type=vt320** parameter.

The **all** parameter cannot be specified in the command with the other message status parameters (**traf**, **link**, **sa**, **db**, **sys**, or **pu**). If the **all** parameter and other message status parameters are specified together in the command, the terminal is assigned the other specified message status parameters and the **all** parameter is ignored.

If a SEAS terminal is being removed, then a warning that states "Invalidating the Terminal data in SEASCFG table" appears.

If the SEAS output group is turned off for a SEAS terminal, then a message "SEAS Output Group is SET for SEAS Terminal *trm number*" appears.

Output

```
chg-trm:trm=2:all=yes
rlghncxa03w 04-05-07 11:11:28 EST EAGLE 31.5.0
CHG-TRM: MASP A - COMPLTD
;
```

chg-ttmap

Change Translation Type Mapping

Use this command to change a mapped SS7 message translation type (TT) for a given gateway linkset name. With this command you can change the identification of the type of allowed global title translation in the SS7 message before and after translation type mapping. For example, suppose you are mapping the translation type 001 (before TT mapping) to 238 (after TT mapping). You can use this command to change that mapping to 001 (before) to 254 (after).

Keyword: **chg-ttmap**

Related Commands: **dlt-ttmap**, **ent-ttmap**, **rtrv-ttmap**

Command Class: Database Administration

Parameters

:ett= (mandatory)

Translation type before mapping. The identification of the type of global title translation in the SS7 message *before* translation type mapping. This attribute is the decimal representation of the 1-octet binary field used by the SS7 protocol to identify the translation type.

Range: 0-255

:io= (mandatory)

Incoming or outgoing. The system uses this parameter to indicate whether the translation type mapping data provisioned for the gateway linkset is for SS7 messages *received* or *sent* on the linkset.

Range: i, o
i—incoming
o—outgoing

:lsn= (mandatory)

Linkset name. The unique network identifier for the gateway linkset.

Range: ayyyyyyyyy
1 alphabetic character followed by 9 alphanumeric characters

:mtt= (mandatory)

Mapped translation type. The identification of the type of global title translation in the SS7 message *after* translation type mapping. This attribute is the decimal representation of the 1-octet binary field used by the SS7 protocol to identify the translation type.

Range: 0-255

Example

```
chg-ttmap:lsn=nc001:io=o:ett=128:mtt=55
```

Dependencies

The linkset must be defined.

Notes

None

Output

```
chg-ttmap:lsn=nc001:io=o:ett=128:mtt=55
```

```
rlghncxa03w 04-01-22 10:37:07 EST EAGLE 31.3.0
CHG-TTMAP: MASP A - COMPLTD
```

```
TTMAP table for nc001 is (2 of 64) 3% full
```

```
;
```

chg-ttr-msg**Change Triggerless TCAP Relay Message**

Use this command to revise a Triggerless TCAP Relay message.

Keyword: chg-ttr-msg

Related Commands: rtrv-ttr-msg, tst-msg

Command Class: Database Administration

Parameters

:msgn= (mandatory)

Message number. This parameter specifies the number of the TTR message.

Range: 1-10

:active= (optional)

This parameter specifies whether the TTR message is sent to the network card for processing.

Range: yes, no

yes — The message is sent to the network card.

no — The message is not sent to the network card.

Default: no

:bcsn= (optional)

Basic call state model. This parameter specifies the value for the *EventTypeBCSM* field of the TTR message.

Range: 1-2 digits

2 hexadecimal digits. Valid digits are **0-9, a-f, A-F**.

Default: No change to the current value

:cdpadgts= (optional)

Called party address digits. This parameter specifies the SCCP CdPA digits for the IDP message.

Range: 1-15 digits

1 - 15 hexadecimal digits. Valid digits are **0-9, a-f, A-F**.

Default: No change to the current value

:cdpagt= (optional)

Called party address global title. This parameter specifies the SCCP CdPA GT for the IDP message.

Range: 0-15

Default: No change to the current value

:cdpagtnai= (optional)

Called party address global title nature of address indicator. This parameter specifies the SCCP CdPA GT NAI for the IDP message.

Range: 0-127
Default: No change to the current value

:cdpndgts= (optional)

Called party number digits. This parameter specifies the TCAP CdPN digits for the IDP message.

Range: 1-32 digits
1 - 32 hexadecimal digits. Valid digits are **0-9, a-f, A-F**.

Default: No change to the current value

:cdpnnai= (optional)

Called Party Number Nature of Address Indicator. This parameter specifies the value for TCAP CdPN NAI value for the IDP message.

Range: 0-127
Default: No change to the current value

:cgpadgts= (optional)

Calling party address digits. This parameter specifies the SCCP CgPA digits for the IDP message.

Range: 1-15 digits
Range is 1 - 15 hexadecimal digits. Valid digits are **0-9, a-f, A-F**.

Default: No change to the current value

:cgpagt= (optional)

Calling party address global title. This parameter specifies the SCCP CgPA GT for the IDP message.

Range: 0-15
Default: No change to the current value

:cgpagtnai= (optional)

Calling party address global title nature of address indicator. This parameter specifies the SCCP CgPA GT NAI for the IDP message.

Range: 0-127
Default: No change to the current value

:cgpndgts= (optional)

Calling party number digits. This parameter specifies the TCAP CgPN digits in the IDP message.

Range: 1-32 digits
1 - 32 hexadecimal digits. Valid digits are **0-9, a-f, A-F**.

Default: No change to the current value

:cgpnnai= (optional)

Calling party number nature of address indicator. This parameter specifies the TCAP CgPN NAI in the IDP message.

Range: 0-127
Default: No change to the current value

:lacdgt= (optional)

Location area code digits. This parameter specifies the area code if the value is not provided in the CdPN.

Range: 1-6 digits
1 - 6 hexadecimal digits. Valid digits are **0-9, a-f, A-F**.

Default: No change to the current value

:reset= (optional)

This parameter resets all of the parameters to their default values.

Range: yes
yes— Resets all message parameters to their default values
Default: No change to the current value

:sk= (optional)

Service key. This parameter specifies the service key for the IDP message.

Range: 8 digits

8 hexadecimal digits. Valid digits are **0-9, a-f, A-F**.

Default: No change to the current value

:tcapttype= (optional)

This parameter specifies whether the IDP message is Intelligent Network Application Protocol-based (INAP) or Camel Application Protocol-based (CAP).

Range: **inap, cap**

inap — INAP-based

cap — CAP-based

Default: No change to the current value

Example

chg-ttr-

msg:msgn=1:tcapttype=INAP:cdpnai=4:cdpadgts=12457896abcd:cgpnai=4

chg-ttr-

msg:msgn=1:cdpnai=2:cdpndgts=981123456:sk=00006b00:bcsn=02

Dependencies

The Prepaid IDP Query Relay feature must be enabled before this command can be entered.

If the **tcapttype** parameter is specified, then the **cdpnai** parameter must be specified if CdPN digits are used, and the **cgpnai** parameter must be specified if CgPN digits are used.

The TSTMSG table is corrupt or cannot be found.

If the **reset** parameter is specified, then no other parameters can be specified.

Output

chg-ttr-

msg:msgn=1:tcapttype=CAP:cdpnai=4:cdpndgts=987654321:cgpnai=4

tekelecstp 08-05-05 15:58:08 EST EAGLE 39.0.0

CHG-TTR-MSG: MASP A - COMPLTD

;

chg-ttropts

Change TTR Options

Use this command to enter Triggerless TCAP Relay (TTR)-specific options in the database. This command updates the TTROPTS table.

NOTE: Values other than none that are entered for the dlma - dlmc parameters for the IDP Relay services (IDPRCDPN, IDPRCGPN) using this command will overwrite values entered for those parameters using the chg-npp-serv command.

Keyword: **chg-ttropts**

Related Commands: **rtrv-ttropts**

Command Class: Database Administration

Parameters

:cgnpdtype= (optional)

CgPN database lookup type. This parameter specifies the entity type that is considered a success when used for RTDB lookup.

Range: **sp, rn, rnsp, anymatch, always, rnspdn**

sp— Service Provider

rn— Routing Number

rnsp— **rn** or **sp**

anymatch— **rn**, **sp**, or no match with any entity

always— Lookup is always considered successful

rnspdn— **rn**, **sp**, or **dn**

If the **cgntype=anymatch** parameter is specified, then the value is also used as the RN for the outgoing CgPN.

Default: **rnsp**

:cgpacck= (optional)

CgPA country code check. This parameter specifies whether a DEFCC check is performed on the incoming CgPA.

Range: **always**, **nonintl**, **off**

always— The DEFCC check is always performed.

nonintl— The DEFCC check is performed if the CdPN NAI is not 'International'.

off— The DEFCC check is not performed.

Default: **nonintl**

:cgsnai= (optional)

Calling party number nature of address indicator. This parameter specifies the CgPN NAI that is used during number conditioning.

Range: **incoming**, **intl**, **natl**, **unkn**

incoming— The incoming CgPN NAI is used.

intl— The CgPN NAI is set to 'International'.

natl— The CgPN NAI is set to 'National'.

unkn— The CgPN NAI is set to 'Unknown'.

Default: **incoming**

:dfiltrn= (optional)

Default routing number. This parameter specifies the default RN that is used when a value of **sp** or **rnsp** is specified for the **nptype** parameter, and the CdPN RTDB lookup returns entity type SP.

Range: 1-15 digits, **none**

1-15 hexadecimal digits. Valid digits are **0-9**, **a-f**, **A-F**.

none—a default RN is not used

Default: **none**

:dlma= (optional)

Delimiter A. This parameter specifies the first delimiter that is used to format the outgoing TCAP dialed number.

Range: 1-16 digits, **none**

1-16 hexadecimal digits. Valid digits are **0-9**, **a-f**, **A-F**.

Default: **none**

:dlmb= (optional)

Delimiter B. This parameter specifies the second delimiter that is used to format the outgoing TCAP dialed number.

Range: 1-16 digits, **none**

1-16 hexadecimal digits. Valid digits are **0-9**, **a-f**, **A-F**.

:dlmc= (optional)

Delimiter C. This parameter specifies the third delimiter that is used to format the outgoing TCAP DN.

Range: 1-16 digits, **none**

1-16 hexadecimal digits. Valid digits are **0-9**, **a-f**, **A-F**.

:nptype= (optional)

Entity type for CdPN RTDB lookup. This parameter specifies the entity type that is considered a success when used for RTDB lookup.

Range: **sp, rn, rnsp, anymatch, always, rnspdn**

sp — Service provider

rn — Routing number

rnsp — **rn** or **sp**

anymatch — **rn, sp**, or no match with any entity

always — Lookup is always considered successful

rnspdn — **rn, sp**, or **dn**

If the **nptype=anymatch** parameter is specified, then the value is also used as the RN for the outgoing CdPN.

Default: **rnsp** - Use RN or SP as entity type for RTDB lookup

:snai= (optional)

CdPN nature of address indicator. This parameter specifies the CdPN NAI that is used during number conditioning.

Range: **incoming, intl, natl, unkn**

incoming — The incoming CdPN NAI is used.

intl — A CdPN NAI of 'International' is used.

natl — A CdPN NAI of 'National' is used.

unkn — A CdPN NAI of 'Unknown' is used.

Default: **incoming**

Example

```
chg-ttropts:nptype=always
chg-ttropts:snai=intl
chg-ttropts:cgnptype=sp
chg-ttropts:cgsnai=natl
chg-ttropts:dlma=1234567890
chg-ttropts:dlmb=1234567890123456
chg-ttropts:dlmc=1234567890abcdef
chg-ttropts:cgpaccck=always
chg-ttropts:dfltrn=123456789012345
```

Dependencies

At least one optional parameter must be specified.

The Prepaid IDP Query Relay feature must be enabled before this command can be entered.

The EGLEOPTS table is corrupt or cannot be found.

Output

```
chg-ttropts:nptype=sp
tekelecstp 08-05-05 13:34:22 EST EAGLE 39.0.0
CHG-TTROPTS: MASP A - COMPLTD
;
```

chg-uaps

Change UA Parameter Set

Use this command to change the UA parameter set.

Keyword: chg-uaps

Related Commands: rtrv-uaps

Command Class: Database Administration

Parameters

:set= (mandatory)

This parameter specifies the UA parameter set to be changed.

Range: 1-9

Default: Current value

:parm= (optional)

Parameter number.

Range: 1-10

1—ASP SNM Options

2—ASP/AS Notification Options

3—UA Serviceability Options

4-10—Unused

Default: Current value

:pvalue= (optional)

If the **parm** parameter is specified, the **pvalue** parameter specifies the numerical value that the **parm** parameter will be set to. Each parameter value is 32 bits (decimal 4294967295); not all 32 bits are used for each parameter. Only the values of the used bits are evaluated to determine the parameter value.

If the default setting for one bit is ON and you want to turn ON another bit in addition, specify the value that turns both bits ON. To turn OFF a bit that is ON and leave other bits ON, specify the value that turns ON just the bits that you want to be on. See the Notes section for this command for an explanation of the meanings of the bit settings.

Range: 0-4294967295

Enter a valid decimal or hexadecimal value shown in Table 5-33 for the **pvalue** parameter to be used for the specified **parm** parameter.

Table 5-33. Valid and Default UAPS Parameter Values

Parameter (parm)	To Turn On Only Bit(s)	Decimal pvalue	Hexadecimal pvalue	System Default
1. ASP SNM Options Bit 0 = Broadcast Bit 1 = Response Method Bit 6 = Broadcast Congestion Status Change Bits 2-5 and 7-31 = Unused	0	1	h'1	
	1	2	h'2	
	6	64	h'40	Off
	0, 1	3	h'3	On
	0, 6	65	h'41	
	1, 6	66	h'42	
	0, 1, 6	67	h'43	

Table 5-33. Valid and Default UAPS Parameter Values

Parameter (parm)	To Turn On Only Bit(s)	Decimal pvalue	Hexadecimal pvalue	System Default
2. ASP/AS Notification Options Bit 0 = ASP ACTIVE Notifications Bit 1 = ASP INACTIVE Notifications Bit 2 = ASP AS State Query Bits 3-31 = Unused	0	1	h'1	
	1	2	h'2	
	2	4	h'4	
	0, 1	3	h'3	
	0, 2	5	h'5	
	1, 2	6	h'6	
	0, 1, 2	7	h'7	Off
3. UA Serviceability Options Bit 0 = UA Heartbeats Bits 1-31 = Unused	0	1	h'1	Off

Default: Current value

:srcset= (optional)

When specified, this source UAPS will be copied into the specified UAPS (**set**).

Range: 1-10

Default: Empty

:timer= (optional)

The Timer number within the UA parameter set.

Range: 1-10

1—Unused

2—False IP Connection Congestion Timer

3—UA Heartbeat Period Timer

4—UA Heartbeat Received Timer

5-10—Unused

Default: Current value

:tvalue= (optional)

This parameter specifies the value given to a timer. Each timer value is 32 bits (decimal 4294967295).

Range: 0-60000

Timer 2—0-30000 milliseconds

Timer 3—100-60000 milliseconds

Timer 4—100-10000 milliseconds

If the value specified is greater than the maximum range of the timer, then the maximum value of the timer is used.

Default: Current value

System

Default: Timer 2 - 3000 milliseconds

Timer 3 - **10000** milliseconds

Timer 4 - **5000** milliseconds

Example

The following example copies UA parameter set 1 into UA parameter set 2.

chg-uaps:set=2:srcset=1

The following example sets the Timer 2 value to 30 milliseconds.

chg-uaps:set=1:timer=2:tvalue=30

The following example sets the UA parameter set 2 value to hexadecimal 7, which turns on bits 0, 1, and 2.

chg-uaps:set=1:parm=2:pvalue=h'7

The following example sets the Timer 2 value to 30 milliseconds, and sets the value for UA parameter set 1 to decimal 64, which turns OFF bits 0 and 1 and turns ON only bit 6.

chg-uaps:set=2:timer=2:tvalue=30:parm=1:pvalue=64

Dependencies

The **srcset** and **set** parameter values cannot be the same.

At least one of the **timer**, **parm**, and **srcset** optional parameters must be entered.

If the **srcset** parameter is specified, no other optional parameters can be entered in the command.

If the **parm** parameter is specified, the **pvalue** parameter must be specified.

If the **timer** parameter is specified, the **tvalue** parameter must be specified.

Notes

There are 10 UA parameter sets. Each UA parameter set has 10 timers and 10 optional bit-mapped parameters. The bit-mapped parameter values control SNM and extended UA notification message behavior.

Timer 2 is the False IP Connection Congestion Timer, which controls the maximum amount of time (in milliseconds) that an association is allowed to remain congested before failing due to false connection congestion. This timer value is limited to 0-30,000 milliseconds by the IPGWx application. The default value is 3000 milliseconds. This timer is not supported on the IPSEG application.

Timer 3 is the UA Heartbeat Period Timer, which controls the time (in milliseconds) between sending of BEAT messages by the NE. This timer value is limited to 100-60,000 milliseconds by the IPSEG and IPGWx applications. The default value is 10,000 milliseconds.

Timer 4 is the UA Heartbeat Received Timer, which controls the timeout period for response BEAT ACK messages by the NE. This timer value is limited to 100-10,000 milliseconds by the IPSEG and IPGWx applications. The default value is 5000 milliseconds.

The bit-mapped parameters contain the following flags, which are set by using the **pvalue** parameter to turn the bits on or off in each bit map:

Broadcast—Controls broadcast phase SNM TFPs, TFRs and TFAs sent when a destination's status changes. If this flag is on (set to 1), SNM TFPs, TFRs, and TFAs will be broadcast to all associations and sockets assigned to routing keys associated with the destination's network and group code. The default is to enable all broadcast phase messages.

Response Method—Sending a SNM TFC/UPU as a reply to a message received on an association or a socket for an unavailable destination. If this bit is on (set to 1), the SNM response message is sent. The default is to allow the response to be sent.

Broadcast Congestion Status Change—Controls sending unsolicited congestion status changes. If this flag is on (set to 1) for an ASP, unsolicited congestion status messages are sent by the ASP when a destination's congestion status changes. This flag is applicable only if **ipgwabate** has been turned on with the **chg-sg-opts** command. The default is do not generate unsolicited congestion status changes.

ASP ACTIVE Notifications—Controls sending ASP-Active notifications. If this flag is on (set to 1), the Secure Gateway will, when an ASP transitions to Active, send a Notify message to all inactive and active ASPs in the AS of status type "Other" and a newly defined status ID of "ASP Activation". The ASP Activation notification message will include the ASP ID of the ASP that activated, and is transmitted only if the ASP ID is present. This notification is an extension to RFC3332 and not implemented for M3UA Version 8 adapters. The default is do not send ASP Active Notifications.

ASP INACTIVE Notifications—Controls sending ASP-Inactive notifications. If this flag is on (set to 1), the Secure Gateway will, when an ASP transitions to Inactive, send a Notify message to all inactive and active ASPs in the AS of status type "Other" and a newly defined status ID of "ASP Inactivation". The ASP Inactivation notification message will include the ASP ID of the ASP that inactivated and is transmitted only if the ASP ID is present. This notification is an extension to RFC3332 and not implemented for M3UA Version 8 adapters. The default is do not send ASP Inactive Notifications.

ASP AS State Query—Controls sending ASP/AS State Notifications on request by ASP. If this flag is on (set to 1), the Secure Gateway will respond with ASP and AS state notifications if 1) the remote ASP sends ASP-UP or ASP-INACTIVE while the local ASP is in the ASP-INACTIVE state, or 2) the remote ASP sends ASP-ACTIVE while the local ASP is in the ASP-ACTIVE state. The default is do not send state notifications.

UA Heartbeats—Controls sending UA Heartbeats on request by a connection. If this flag is on (set to 1), Heartbeat messages are transmitted in the ASP-DOWN, ASP-ACTIVE and ASP-INACTIVE States on connections from the Secure Gateway to the far end.

Output

```
chg-uaps:set=2:srcset=1
rlghncxa03w 02-03-07 11:11:28 EST EAGLE 30.0.0
CHG-UAPS: MASP A - COMPLTD
;
```

chg-user

Change User

Use this command to change user access to commands, change user ID's, and change passwords.

NOTE: As of Release 40.1, the lnpbas parameter is obsolete.

Keyword: chg-user

Related Commands: act-user, chg-pid, dact-user, dlt-user, ent-user, login, logout, rept-stat-user, rtrv-secu-user, rtrv-user

Command Class: Security Administration

Parameters

```
:uid= (mandatory)
  User ID
  Range: azzzzzzzzzzzzzzzz
          1 alphabetic character followed by up to 15 alphanumeric characters
```

:all= (optional)

Specifies whether or not the user ID is assigned all non-configurable command classes (LINK, SA, SYS, PU, DB, DBG, LNP).

Range: **yes, no**

Default: Current value

:cc1= (optional)

Configurable command class name (*ayy*), and an indicator (**-yes** or **-no**) to specify whether the User ID can enter commands assigned to the specified command class.

Range: *ayy*

Specify the parameter value in the format *ayy -no* or *ayy -yes*.

ayy—Configurable command class name of 1 alphabetic character followed by 2 alphanumeric characters

-no—Indicates that the command class is not allowed.

-yes—Indicates that the command class is allowed.

:cc2= (optional)

Configurable command class name (*ayy*), and an indicator (**-yes** or **-no**) to specify whether the User ID can enter commands assigned to the specified command class.

Range: *ayy*

Specify the parameter value in the format *ayy -no* or *ayy -yes*.

ayy—Configurable command class name of 1 alphabetic character followed by 2 alphanumeric characters

-no—Indicates that the command class is not allowed.

-yes—Indicates that the command class is allowed.

:cc3= (optional)

Configurable command class name (*ayy*), and an indicator (**-yes** or **-no**) to specify whether the User ID can enter commands assigned to the specified command class.

Range: *ayy*

Specify the parameter value in the format *ayy -no* or *ayy -yes*.

ayy—Configurable command class name of 1 alphabetic character followed by 2 alphanumeric characters

-no—Indicates that the command class is not allowed.

-yes—Indicates that the command class is allowed.

:cc4= (optional)

Configurable command class name (*ayy*), and an indicator (**-yes** or **-no**) to specify whether the User ID can enter commands assigned to the specified command class.

Range: *ayy*

Specify the parameter value in the format *ayy -no* or *ayy -yes*.

ayy—Configurable command class name of 1 alphabetic character followed by 2 alphanumeric characters

-no—Indicates that the command class is not allowed.

-yes—Indicates that the command class is allowed.

:cc5= (optional)

Configurable command class name (*ayy*), and an indicator (**-yes** or **-no**) to specify whether the User ID can enter commands assigned to the specified command class.

Range: *ayy*
 Specify the parameter value in the format *ayy -no* or *ayy -yes*.
ayy—Configurable command class name of 1 alphabetic character followed by 2 alphanumeric characters
-no—Indicates that the command class is not allowed.
-yes—Indicates that the command class is allowed.

:cc6= (optional)

Configurable command class name (*ayy*), and an indicator (**-yes** or **-no**) to specify whether the User ID can enter commands assigned to the specified command class.

Range: *ayy*
 Specify the parameter value in the format *ayy -no* or *ayy -yes*.
ayy—Configurable command class name of 1 alphabetic character followed by 2 alphanumeric characters
-no—Indicates that the command class is not allowed.
-yes—Indicates that the command class is allowed.

:cc7= (optional)

Configurable command class name (*ayy*), and an indicator (**-yes** or **-no**) to specify whether the User ID can enter commands assigned to the specified command class.

Range: *ayy*
 Specify the parameter value in the format *ayy -no* or *ayy -yes*.
ayy—Configurable command class name of 1 alphabetic character followed by 2 alphanumeric characters
-no—Indicates that the command class is not allowed.
-yes—Indicates that the command class is allowed.

:cc8= (optional)

Configurable command class name (*ayy*), and an indicator (**-yes** or **-no**) to specify whether the User ID can enter commands assigned to the specified command class.

Range: *ayy*
 Specify the parameter value in the format *ayy -no* or *ayy -yes*.
ayy—Configurable command class name of 1 alphabetic character followed by 2 alphanumeric characters
-no—Indicates that the command class is not allowed.
-yes—Indicates that the command class is allowed.

:db= (optional)

Access to all commands in command class Database Administration.

Range: **yes, no**
Default: Current value

:dbg= (optional)

Access to all commands in command class Debug.

Range: **yes, no**
Default: Current value

:link= (optional)

Access to all commands in command class Link Maintenance.

Range: **yes, no**
Default: Current value

:nuid= (optional)

New user ID

Range: *azzzzzzzzzzzzzzz*

1 alphabetic character followed by up to 15 alphanumeric characters

Default: Current value**:page=** (optional)The maximum age of the password, in days. The STP automatically prompts the user for a new password at login if the user's password is older than the value specified for the **page** parameter.**Range:** **0-999****Default:** Current value**:pid=** (optional)

Password ID. Required only if changing the password of a user.

Range: **yes, no****Default:** Current value**:pu=** (optional)

Access to all commands in command class Program Update.

Range: **yes, no****Default:** Current value**:revoke=** (optional)

Revoke the user ID. The system rejects login attempts for a revoked user ID.

Range: **yes, no****Default:** Current value**:rstlsl=** (optional)Reset the user ID. Use this command to reset the last successful login date, for this user ID, to the current date. If the user ID has been prevented login for non-use, use the **rstlsl=yes** parameter to allow the user ID access again.**Range:** **yes, no****Default:** Current value**:sa=** (optional)

Access to all commands in command class Security Administration.

Range: **yes, no****Default:** Current value**:sys=** (optional)

Access to all commands in command class System Maintenance.

Range: **yes, no****Default:** Current value**:uout=** (optional)

User ID aging interval. The number of successive days a user ID can go unused (that is, no successful login) before the system denies login of that user ID.

Range: **0-999****Default:** The value specified for the **uout** parameter on the **chg-secu-dflt** command**:lnpbas=** (obsolete)

Access to all commands in the command class LNP Basic

Range: **yes, no****Default:** Current value

Example

```
chg-user:uid=john:nuid=johnmayer
chg-user:uid=john:nuid=john*mayer
chg-user:uid=john:db=yes
chg-user:uid=user123:cc1=dab-no:cc2=krb=yes
```

Dependencies

Passwords cannot be created or modified from a telnet terminal (terminal IDs 17-40) unless the OA&M IP Security Enhancements feature is turned on.

Changes to a user ID cannot be made while that user is logged on the system.

The **revoke=yes** parameter cannot be specified for a user ID with system administration authorization.

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before the **lnpbas** parameter can be specified.

If the **all=yes** parameter is specified, and the LNP feature has not been turned on, then the **lnpbas** parameter value defaults to **no**.

The Command Class Management feature must be enabled before a configurable command class name can be specified in the **cc1 - cc8** parameters.

The values specified in the **cc1 - cc8** parameters must be valid default (**u01-U32**) or provisioned configurable command class names.

Notes

When the **pid=yes** parameter is specified, the system issues a separate prompt for this password and disables character echo at the terminal so that the entered password is not displayed on the screen. After the password has been entered, the system issues a second prompt, and the password must be entered again. This feature ensures that no typing mistakes were made on the first entry. The password must adhere to all password provisioning rules as established by the **chg-secu-dflt** command. These rules are displayed on the screen when the password prompt is presented.

The current password is not required when assigning a new password.

Use the following rules for changing passwords:

- A new password cannot contain more than 12 characters.
- A new password must contain at least the number of characters that is specified in the **minlen** parameter of the **chg-secu-dflt** command.
- A new password must contain at least the number of alphabetic (**alpha** parameter), numeric (**num** parameter), and punctuation (**punc** parameter) characters that is specified in the **chg-secu-dflt** command.

A new password cannot contain the associated user ID.

As a default, the command class Basic is assigned to all users. If no other command class is assigned, the user still has access to commands in the Basic class.

Up to 8 configurable command class name parameters can be specified in one command. Additional commands can be entered to assign user access for more than 8 names. To assign user access for all 32 available configurable command class names, you could enter four commands with 8 names specified in each command.

Output

```
chg-user:uid=john:nuid=johnmayer
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
CHG-USER: MASP A - COMPLTD
;
```

chg-vflx-cd**Change V-Flex Call Decision Entry**

Use this command to revise the call decision criteria. This command updates the Call Decision table.

NOTE: The V-Flex feature must be enabled before this command can be entered.

Keyword: chg-vflx-cd

Related Commands: dlt-vflx-cd, ent-vflx-cd, rtrv-vflx-cd

Command Class: Database Administration

Parameters

:cdn= (mandatory)

Call decision name. This parameter specifies the name of an entry in the Call Decision table.

Range: ayyy

1 alphabetic character followed by 3 alphanumeric characters.

:ncdn= (optional)

New call decision name. This parameter specifies a new name for an entry in the Call Decision table.

Range: ayyy

1 alphabetic character followed by 3 alphanumeric characters

Default: No change to the current value.

:nrnid= (optional)

New routing number index. This parameter specifies a new routing number index that is associated with a call decision entry.

Range: 0-9

Default: No change to the current value.

:nvmdig= (optional)

New voice mail number or voice mail prefix digits. This parameter specifies a new voice mail number or voice mail digits that is associated with a call decision entry.

Range: 1-15 digits

Valid digits **0-9, A-F, a-f**

Default: No change to the current value.

Example

The following command specifies a new routing number index.

chg-vflx-cd:cdn=cdn1:nrnid=7

The following command specifies a new call decision entry name and new routing number index.

chg-vflx-cd:cdn=cdn1:ncdn=cdn3:nrnid=3

The following command specifies a new call decision entry name.

chg-vflx-cd:cdn=cdn3:ncdn=cdn5

The following command specifies a new voice mail number or voice mail prefix digits.

chg-vflx-cd:cdn=cdn1:nvmdig=123456

Dependencies

The value specified for the **cdn** parameter cannot be a reserved word, such as **none**.

At least one parameter value must be different from the values provisioned for the table entry.

The value specified for the **cdn** parameter must already exist in the Call Decision table.

The **ncdn**, **nrndix**, or **nvmdig** parameter must be specified.

The V-Flex feature must be enabled before this command can be entered.

The value specified for the **ncdn** parameter cannot already exist in the Call Decision table.

The value specified for the **nvmdig** parameter cannot already exist in the Call Decision table with the same **dnstat**, **rdi**, and **bcap** values.

The value specified for the **nvmdig** parameter cannot differ from a value that already exists in the Call Decision table by only the value of the **dnstat** parameter. The values specified for **rdi** and **bcap** parameters must differ as well.

Output

```
chg-vflx-cd:cdn=cdn1:ncdn=cdn3:nrndix=3
rlghncxa03w 08-05-07 11:11:28 EST EAGLE 39.0.0
CHG-VFLX-CD: MASP A - COMPLTD
;
```

chg-vflx-opts

Change V-Flex Options

Use this command to provision the data that is used to condition the DN in an incoming MSU. This command updates the VFLXOPTS table.

NOTE: The V-Flex feature must be enabled before this command can be entered.

Keyword: chg-vflx-opts

Related Commands: rtrv-vflx-opts

Command Class: Database Administration

Parameters

:dra= (optional)

Destination routing address. This parameter specifies the destination routing address in the "CONNECT" response.

Range: **rn**, **rndn**, **ccrndn**

rn— The destination routing address contains the routing number.

rndn— The destination routing address contains the routing number + directory number

ccrndn— The destination routing address contains the country code + routing address + directory number

Default: No change to current value.

System

Default: **rn**

:dranai= (optional)

Nature of address indicator. This parameter specifies the nature of address indicator for the destination routing address.

The nature of address indicator parameters (**dranaiv** or **dranai**) can be specified with either a mnemonic or an explicit value. The mnemonic and the explicit value cannot be specified together for the same parameter. Either the **dranaiv** or **dranai** parameter can be specified. shows the mapping between the **dranaiv** and the **dranai** parameters.

Range: **sub**, **unknown**, **natl**, **intl**, **ntwk**

Default: Current value

:dranaiv= (optional)

This parameter specifies the nature of address indicator value for the destination routing address.

Range: 0-127

NOTE: The nature of address indicator parameters (dranaiv or dranai) can be specified by supplying either a mnemonic or an explicit value. At any time both the mnemonic and the explicit value must not be specified together for the same parameter. Either the dranaiv or dranai parameter can be specified. Table 5-34 shows the mapping between the dranaiv and the dranai parameters.

Table 5-34. DRANAIV/DRANAI Mapping

dranaiv	dranai	Description
1	sub	Subscriber Number
2	unknown	Unknown
3	natl	National significant number
4	intl	International number
5	ntwk	Network Specific
This mnemonic list is different from the list used by the Service Selector commands because the INAP destination routing address uses ISUP values instead of SCCP values.		

:dranp= (optional)

This parameter specifies the numbering plan for the destination routing address.

NOTE: The numbering plan parameters (dranpv or dranp) can be specified by supplying either a mnemonic or an explicit value. At any time both the mnemonic and the explicit value must not be specified together for the same parameter. Either the dranpv or dranp parameter can be specified. Table 5-35 shows the mapping between the dranpv and the dranp parameters.

Range: e164, x121, f69

Default: No change to the current value

:dranpv= (optional)

This parameter specifies the numbering plan value for the destination routing address. See .

Range: 0-7

NOTE: The numbering plan parameters (dranpv or dranp) can be specified by supplying either a mnemonic or an explicit value. At any time both the mnemonic and the explicit value must not be specified together for the same parameter. Either the dranpv or dranp parameter can be specified. shows the mapping between the dranpv and the dranp parameters

Table 5-35. DRANPV/DRANP Mapping

dranpv	dranp	Description
1	E164	ISDN/telephony numbering plan
3	X121	Data numbering plan
4	F69	Telex numbering plan
Several of the numbering plan mnemonics that are used by the Service Selector commands are not in this list because they do not apply to INAP destination routing addresses.		

Default: No change to the current value

:nequeryonly= (optional)

This parameter specifies whether the Call Decision table is searched after RTDB lookup.

Range: **off, on**

off — The table is not searched.

on — The table is searched.

Default: No change to the current value.

:netype= (optional)

This parameter specifies the network entity type that is used for RTDB lookup.

The **nequeryonly=on** parameter must be specified before this parameter can be specified.

Range: **vmsid, sprn, grn**

vmsid — voice mail server ID

sprn — signaling point routing number

grn — generic routing number

Default: No change to the current value.

System

Default: **vmsid**

Example

The following command specifies a new numbering plan and nature of address indicator.

chg-vflx-opts:dranai=sub:dranp=e164

The following command searches the Call Decision and VMSID tables and uses the vmsid network entity before RTDB lookup.

chg-vflx-opts:nequeryonly=on:netype=vmsid

The following command specifies a new destination routing address.

chg-vflx-opts:dra=rn

Dependencies

At least one optional parameter must be specified.

The **dranp** and **dranpv** parameters cannot be specified together in the command.

The **dranai** and **dranaiv** parameters cannot be specified together in the command.

The V-Flex feature must be enabled before this command can be entered.

The **nequeryonly=on** parameter must be specified before the **netype** parameter can be specified.

Output

```
chg-vflx-opts:dra=rn:dranp=e164:dranai=intl
tekelecstp 08-05-11 11:34:04 EST EAGLE 39.0.0
CHG-VFLX-OPTS: MASP A - COMPLTD
;
```

chg-vflx-rn**Change Voice Mail Routing number**

Use this command to revise the voice mail routing numbers. This command updates the Routing Number table.

NOTE: The V-Flex feature must be enabled before this command can be entered.

Keyword: chg-vflx-rn

Related Commands: dlt-vflx-rn, ent-vflx-rn, rtrv-vflx-rn

Command Class: Database Administration

Parameters

:rnname= (mandatory)

Routing number name. This parameter specifies the name associated with a voice mail routing number.

Range: ayyyyyyy

1 alphabetic character followed by 7 alphanumeric characters.

:nrn= (optional)

New routing number. This parameter specifies a new voice mail routing number.

Range: 1-15 digits

Valid digits **0-9, A-F, a-f**

Default: No change to the current value.

:nrnname= (optional)

New routing number name. This parameter specifies the new name associated with a voice mail routing number.

Range: ayyyyyyy

1 alphabetic character followed by 7 alphanumeric characters.

Default: No change to the current value.

Example

The following command changes the name of the routing number.

```
chg-vflx-rn:rnname=rn01:nrnname=rn04
```

The following command changes the routing number digits for a specified routing number name.

```
chg-vflx-rn:rnname=rn01:nrn=122345BC8
```

The following command changes the routing number digits and the routing number name.

```
chg-vflx-rn:rnname=rn01:nrn=1223EAB68:nrnname=rn03
```

Dependencies

The value specified for the **rnname** parameter must already exist in the Routing Number table.

The value specified for the **nrn** parameter cannot already exist in the Routing Number table.

The V-Flex feature must be enabled before this command can be entered.

The value specified for the **nrnname** parameter cannot already exist in the Routing Number table.

The **nrn** or **nrnname** parameter must be specified in the command.

The value specified for the **nrnname** parameter cannot be a reserved word, such as **none**.
At least one parameter value must be different from the values provisioned for the table entry.

Output

```
chg-vflx-rn:rnname=rn01:nrn=122345CE8:nrnname=rn02
rlghncxa03w 08-05-07 11:43:04 EST EAGLE 39.0.0
CHG-VFLX-RN: MASP A - COMPLTD
;
```

chg-vflx-vmsid

Change Voice Mail Service ID Entry

Use this command to revise the routing numbers that are associated with a VMS ID. This command updates the VMSID table.

NOTE: The V-Flex feature must be enabled before this command can be entered.

Keyword: chg-vflx-vmsid

Related Commands: dlt-vflx-vmsid, ent-vflx-vmsid, rtrv-vflx-vmsid

Command Class: Database Administration

Parameters

:id= (mandatory)

This parameter specifies the identification of the voice mail server.

Range: 1-15 digits, **dflt**

Valid digits are **0-9, A-F, a-f**.

dflt—default set of routing numbers that is used when a query is received with an invalid MSISDN or an MSISDN that is not found in the RTDB.

:nidx0= (optional)

This parameter specifies a new routing number name for VMRN index 0.

Range: *ayyyyyyy*, **none**

1 alphabetic character followed by up to 7 alphanumeric characters

none—deletes the routing number name associated with an index

Default: No change to the current value.

:nidx1= (optional)

This parameter specifies a new routing number name for VMRN index 1.

Range: *ayyyyyyy*, **none**

1 alphabetic character followed by up to 7 alphanumeric characters

none—deletes the routing number name associated with an index

Default: No change to the current value.

:nidx2= (optional)

This parameter specifies a new routing number name for VMRN index 2.

Range: *ayyyyyyy*, **none**

1 alphabetic character followed by up to 7 alphanumeric characters

none—deletes the routing number name associated with an index

Default: No change to the current value.

:nidx3= (optional)

This parameter specifies a new routing number name for VMRN index 3.

Range: *ayyyyyyy*, **none**

1 alphabetic character followed by up to 7 alphanumeric characters

none—deletes the routing number name associated with the index

Default: No change to the current value.

:nidx4= (optional)

This parameter specifies a new routing number name for VMRN index 4.

Range: *ayyyyyyy*, **none**
 1 alphabetic character followed by up to 7 alphanumeric characters
none—deletes the routing number name associated with the index

Default: No change to the current value.

:nidx5= (optional)

This parameter specifies a new routing number name for VMRN index 5.

Range: *ayyyyyyy*, **none**
 1 alphabetic character followed by up to 7 alphanumeric characters
none—deletes the routing number name associated with the index

Default: No change to the current value.

:nidx6= (optional)

This parameter specifies a new routing number name for VMRN index 6.

Range: *ayyyyyyy*, **none**
 1 alphabetic character followed by up to 7 alphanumeric characters
none—deletes the routing number name associated with the index

Default: No change to the current value.

:nidx7= (optional)

This parameter specifies a new routing number name for VMRN index 7.

Range: *ayyyyyyy*, **none**
 1 alphabetic character followed by up to 7 alphanumeric characters
none—deletes the routing number name associated with an index

Default: No change to the current value.

:nidx8= (optional)

This parameter specifies a new routing number name for VMRN index 8.

Range: *ayyyyyyy*, **none**
 1 alphabetic character followed by up to 7 alphanumeric characters
none—deletes the routing number name associated with an index

Default: No change to the current value.

:nidx9= (optional)

This parameter specifies a new routing number name for VMRN index 9.

Range: *ayyyyyyy*, **none**
 1 alphabetic character followed by up to 7 alphanumeric characters
none—deletes the routing number name associated with an index

Default: No change to the current value.

Example

The following example updates the specified VMS ID with a new routing number name for index 5. It also removes the routing number name associated with index 1.

chg-vflx-vmsid: id=1234ae5: nidx1=none: nidx5=rname1

Dependencies

The V-Flex feature must be enabled before this command can be entered.

The value specified for the **id** parameter must already exist in the VMSID table.

The routing number name of the entry specified by the **id** parameter must already exist in the Routing Number table.

At least one of the optional parameters must be specified.

At least one parameter value must be different from the values provisioned for the table entry.

The value specified for the **rname** parameter must already exist in the Routing Number table.

Output

```
chg-vflx-vmsid:id=1234ae5:nidx1=none:nidx5=rname1
rlghncxa03w 08-05-07 11:43:04 EST EAGLE 39.0.0
CHG-VFLX-VMSID: MASP A - COMPLTD
;
```

chg-x25-dstn

Change X.25 Destination

Use this command to change the association of an X.25 network address with either an SS7 point code, or a subsystem within that point code. If the node is actually in the X.25 domain, the X.25 address is a real network address and the point code is a dummy point code. If the node is in the SS7 domain, the point code is a real SS7 point code and the X.25 address is a dummy address.

Keyword: chg-x25-dstn

Related Commands: dlt-x25-dstn, ent-x25-dstn, rtrv-x25-dstn

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:xaddr= (mandatory)

The X.25 network address of the X.25 destination entity or the SS7 node.

Range: 1-15 digits

:dpc= (optional)

The real SS7 point code assigned to a real SS7 node or the dummy point code for an X.25 destination entity, with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: dpca

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001-005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006-255**.

The point code **000-000-000** is not a valid point code.

Default: Current value

:ssn= (optional)

The subsystem number of the destination that is assigned to the X.25 address or the SS7 address.

Range: 1-255

Default: Current value

Example

```
chg-x25-dstn:xaddr=205255864567721:dpc=133-013-001:ssn=9
```

```
chg-x25-dstn:xaddr=205255864567721:dpc=133-013-013
```

```
chg-x25-dstn:xaddr=205255864567721:ssn=3
```

Dependencies

- At least one optional parameter must be specified.
- There must be at least four digits in the X.25 address.
- The X.25 address must already exist as an X.25 destination.
- The X.25 address must not be a part of an X.25 route.
- The DPC must exist in the destination point code table.
- The X.25 SS7 ANSI destination point code must be a full point code (*ni-nc-ncm*).

Notes

None

Output

chg-x25-dstn:xaddr=205255864567721:dpc=133-013-001:ssn=9

```
rlghncxa03w 04-01-10 11:43:04 EST EAGLE 31.3.0
X.25 DSTN TABLE 45 % FULL
CHG-X25-DSTN: MASP A - COMPLTD
;
```

chg-x25-rte

Change X.25 Route

Use this command to change the X.25 connection type of a given X.25 route. All LIMs with the **ss7gx25** GPL share this information. Even though these connections apply to only one card, they are used by all cards.

Keyword: **chg-x25-rte**

Related Commands: **dlt-x25-rte**, **ent-x25-rte**, **rtrv-x25-rte**

Command Class: Database Administration

Parameters

:saddr= (mandatory)

The alias X.25 address assigned to the SS7 destination entity on the SS7 side of the circuit.

Range: 1-15 digits

:xaddr= (mandatory)

The X.25 address assigned to the X.25 destination entity on the X.25 side of the circuit.

Range: 1-15 digits

:lc2nm= (optional)

Invokes SS7 MTP network management for failures and recoveries of logical channels.

Range: **yes**, **no**

Default: **no** if **rt=pc** is specified

:loc= (optional)

The card location containing the X.25 signaling link.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

Default: All card locations are displayed.

:port= (optional)

The port on the card containing the X.25 signaling link.

Range: **a**

:rt= (optional)

The type of routing to perform for messages originating in the SS7 domain and destined for the X.25 domain. Two types of routing are available: (1) route on X.25 destination point code (XPC), and (2) route using X.25 origination and destination point code combinations (PC).

Range: **xpc, pc**

Default: Current value

:type= (optional)

The type of X.25 connection that the link is expected to maintain.

Range: **svca, svcr**

svca—automatic virtual circuit

svcr—remote virtual circuit

Example

chg-x25-rte:xaddr=225255:saddr=133131:type=svca:loc=1205:port=a

chg-x25-rte:xaddr=303545:saddr=234908:type=svcr

chg-x25-rte:xaddr=225255:saddr=133131:rt=xpc

Dependencies

Each X.25 address must have at least four digits.

The combination of the two X.25 addresses must exist in the X.25 route table.

The number of SVCAs cannot exceed the maximum number of SVCs defined for the signaling link.

One of the following parameters must be specified: **type**, **rt**, or **lc2nm**.

If **lc2nm=yes** is specified, **rt=xpc** must be specified.

If the X.25 domain destination is an adjacent entity, **lc2nm=no** must be specified.

If **rt=xpc** is specified, the **xaddr** parameter's alias SS7 point code must be unique in the X.25 route table.

If the connection type is **svca** (**type=svca**), the **loc** parameter must be specified.

The new connection type (**type=svca** or **type=svcr**) must be different from the currently defined connection type. For example, if the current connection type is **svca** (**type=svca**), the new connection type must be **svcr** (**type=svcr**).

If the **port** parameter is specified, the **loc** parameter must be specified.

If the connection type of the X.25 route is **pvc** (shown in the TYPE field of the **rtvr-x25-rte** output), the X.25 route cannot be changed.

Notes

The **lc2nm** parameter does not generate MTP level 3 network management messages to the network. Instead, it uses level 3 network management procedures internally to reroute traffic to an alternate route. If the **lc2nm** parameter is not specified, traffic is discarded when routed to a failed logical channel.

Output

chg-x25-rte:xaddr=225255:saddr=133131:type=svca:loc=1205:port=a

```
rlghncxa03w 04-01-10 11:43:04 EST EAGLE 31.3.0
CHG-X25-RTE: MASP A - X.25 Route table 45% full
CHG-X25-RTE: MASP A - COMPLTD
```

;

chg-x25-slk**Change X.25 Signaling Link Parameters**

Use this command to change any X.25 signaling link parameter.

Keyword: chg-x25-slk

Related Commands: rtrv-x25-rte, rtrv-x25-slk

Command Class: Database Administration

Parameters

:loc= (mandatory)

The card location containing the X.25 signaling link.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Default: All card locations are displayed.

:port= (mandatory)

The port on the card containing the X.25 signaling link.

Range: a

Default: Only one port per LIM is supported for X.25.

:k= (optional)

The maximum number of outstanding I frames.

Range: 1-7

Default: Current value

System

Default: 7

:l3mode= (optional)

The logical layer 3 address of the connection

Range: dte, dce

Default: dte

:mps= (optional)

The maximum packet size (in bytes) allowed on this X.25 signaling link.

Range: 128, 256

Default: 256

:n1= (optional)

The maximum number of bits in a frame.

Range: 1080, 2104

Default: Current value

System

Default: 2104

:n2= (optional)

The maximum number of retransmission attempts to complete a transmission.

Range: 3-15

Default: Current value

System

Default: 10

:pvc= (optional)

The total number of the permanent virtual circuits (PVCs) available on this X.25 signaling link.

Range: 0-255

Default: 0

:svc= (optional)

The total number of the switched virtual circuits (SVCs) available on this X.25 signaling link.

Range: 0-255

Default: 255 minus the value for the **pvc** parameter

:t1= (optional)

The amount of time to wait before retransmitting a frame.

Range: 3-10 seconds

Default: Current value

System

Default: 5

:win= (optional)

The number of packets allowed for a window on this X.25 signaling link.

Range: 1-7

Default: 3

Example

chg-x25-slk:loc=1201:port=a:t1=3:n1=1080:n2=3:k=7

chg-x25-slk:loc=1204:pvc=10:svc=10

Dependencies

The **limds0**, **limocu**, and **limv35** card types are the only valid card types for this command. These card types must be running the **ss7gx25** application.

The shelf and card must be equipped.

At least one of the optional parameters **t1**, **n1**, **n2**, **k**, **l3mode**, **pvc**, **svc**, **win**, or **mps** must be specified.

The sum of the values for the **pvc** and **svc** parameters must be greater than or equal to 1 and less than or equal to 255.

If the **mps** parameter is equal to 128, then the **n1** parameter must be equal to 1080.

The specified card must be out-of-service maintenance-disabled (OOS-MT-DSBLD) before the X.25 signaling link parameters can be changed. Enter the **rept-stat-card** command with the card location containing the X.25 signaling link that you want to change, to verify the state of the card.

The new quantity of PVCs cannot be greater than the number of logical channels currently assigned to the X.25 signaling link. Enter the **rtrv-x25-rte** command with the card location and port (**loc** and **port**) of the X.25 signaling link to verify the number of logical channels assigned to the X.25 signaling link. This is shown in the *LC* field of the **rtrv-x25-rte** output.

Notes

To add, remove, or change an X.25 destination, linkset, signaling link, or route, follow the procedures in the "X.25 Gateway Configuration" chapter of the *Database Administration Manual - Features*.

Output

chg-x25-slk:loc=1201:port=a:t1=3:n1=1080:n2=3:k=7

rlghncxa03w 04-01-10 11:43:04 EST EAGLE 31.3.0
CHG-X25-SLK: MASP A - COMPLTD

;

chk-unref-ent**Check Unreferenced Entities**

Use this command to check for unreferenced entities in the STP gateway screening entity sets. Unreferenced entities are those entities not referenced by another entity using the next screening function identifier and next screening reference combination, or using the linkset screening reference.

Keyword: chk-unref-ent

Related Commands: aud-data, chg-scr-aftpc, chg-scr-blkdpc, chg-scr-blkopc, chg-scr-cdpa, chg-scr-cgpa, chg-scr-destfld, chg-scr-dpc, chg-scr-opc, chg-scr-sio, chg-scr-tt, chg-scrset, dlt-scr-aftpc, dlt-scr-blkdpc, dlt-scr-blkopc, dlt-scr-cdpa, dlt-scr-cgpa, dlt-scr-destfld, dlt-scr-dpc, dlt-scr-opc, dlt-scr-sio, dlt-scr-tt, dlt-scrset, ent-scr-aftpc, ent-scr-blkdpc, ent-scr-blkopc, ent-scr-cdpa, ent-scr-cgpa, ent-scr-destfld, ent-scr-dpc, ent-scr-opc, ent-scr-sio, ent-scr-tt, ent-scrset

Command Class: Database Administration

Parameters

:aftpc= (optional)

Affected point code. Specifies whether you want to audit the affected PC/SSN entity set.

Range: yes, no

Default: no

:all= (optional)

All entity types. Specifies whether you want to audit all of the entity sets.

Range: yes, no

Default: no

:blkdpc= (optional)

Blocked destination point code. Specifies whether you want to audit the blocked DPC entity set.

Range: yes, no

Default: no

:blkopc= (optional)

Blocked originating point code. Specifies whether you want to audit the blocked OPC entity set.

Range: yes, no

Default: no

:cdpa= (optional)

Called party address. Specifies whether you want to audit the allowed CDPA entity set.

Range: yes, no

Default: no

:cgpa= (optional)

Calling party address. Specifies whether you want to audit the allowed CGPA entity set.

Range: yes, no

Default: no

:destfld= (optional)

Affected destination field. Specifies whether you want to audit the affected DESTFLD entity set.

Range: yes, no

Default: **no**

:dpc= (optional)

Destination point code. Specifies whether you want to audit the allowed DPC entity set.

Range: **yes, no**

Default: **no**

:isup= (optional)

ISUP message type. Specifies whether you want to audit the ISUP message type entity set.

Range: **yes, no**

Default: **no**

:opc= (optional)

Originating point code. Specifies whether you want to audit the allowed OPC entity set.

Range: **yes, no**

Default: **no**

:sio= (optional)

Service information octet. Specifies whether you want to audit the allowed SIO entity set.

Range: **yes, no**

Default: **no**

:tt= (optional)

Translation type. Specifies whether you want to audit the allowed TT entity set.

Range: **yes, no**

Default: **no**

Example

chk-unref-ent:opc=yes:dpc=yes:sio=yes

chk-unref-ent:all=yes

chk-unref-ent:all=yes:blkopc=no:blkdpc=no

Dependencies

At least one entity set name must be specified.

Notes

None

Output**chk-unref-ent:opc=yes:dpc=yes:sio=yes**

```

rlghncxa03w 04-01-18 08:29:15 EST  EAGLE 31.3.0
ENTITY          UNREFERENCED
TYPE            ENTITIES
-----
OPC              <NONE>
DPC              DPC1
DPC              DPC2
SIO              <NONE>
;

```

chk-unref-ent:all=yes

```

rlghncxa03w 04-01-18 08:29:15 EST  EAGLE 31.3.0
ENTITY          UNREFERENCED
TYPE            ENTITIES
-----
OPC              <NONE>
DPC              dpc1
                  dpc2
BLKOPC           <NONE>
BLKDPC           <NONE>
SIO              <NONE>
CGPA             <NONE>
CDPA             <NONE>
TT               tt0-1
                  tt-05
DESTFLD          <NONE>
AFTPC            <NONE>
ISUP             <NONE>
;

```

chk-unref-ent:all=yes:blkopc=no:blkdpc=no

```

rlghncxa03w 04-01-18 08:29:15 EST  EAGLE 31.3.0
ENTITY          UNREFERENCED
TYPE            ENTITIES
-----
OPC              <NONE>
DPC              dpc1
                  dpc2
SIO              <NONE>
CGPA             <NONE>
CDPA             <NONE>
TT               tt01
                  tt05
AFTPC            <NONE>
;

```

Legend

ENTITY TYPE—This field displays which entity type is being checked.

UNREFERENCED ENTITIES—This field displays whether the entity type listed is referenced by another entity.

clr-imt-stats**Clear IMT Statistics**

Every card in the system has both a card location identifier (stenciled on the shelf and provided in all output) and an IMT address. Use this command to clear the following statistics:

- The IMT level 1 and level 2 statistics for specified IMT addresses and the hourly time period statistics for IMT errors.
- The card error statistics for HMUX or HIPR cards and the hourly time period statistics for HMUX or HIPR cards.
- All IMT, HMUX, and HIPR error and hourly time period statistics. When the hourly time period statistics for IMT errors, HMUX errors, or HIPR errors are cleared, the current hourly time period number is reset to 0 (zero) on all cards.

Keyword: `clr-imt-stats`

Related Commands: `conn-imt`, `disc-imt`, `rept-imt-info`, `rept-imt-lvl1`, `rept-imt-lvl2`, `rmv-imt`, `rst-imt`, `tst-imt`

Command Class: System Maintenance

Parameters

:all= (optional)

Clear all IMT, HMUX, and HIPR statistics.

Range: `yes, no`

Default: `no`

:e= (optional)

End address. This parameter specifies the IMT address of the last card in the range.

Range: `0-251`

(See the *Installation Manual - EAGLE 5 ISS* for an illustration with IMT addresses).

:eloc= (optional)

End location. Specifies the card location of the last card in the range.

Range: `1101-1113, 1115, 1201-1218, 1301-1318, 2101-2118, 2201-2218, 2301-2318, 3101-3118, 3201-3218, 3301-3318, 4101-4118, 4201-4218, 4301-4318, 5101-5118, 5201-5218, 5301-5318, 6101-6118`

Default: If `sloc` is specified—current `sloc` value

If `sloc` is not specified—`1115`, which corresponds to IMT address 251 (`e=251`).

:eshelf= (optional)

End shelf location for HMUX and HIPR statistics. This parameter specifies the shelf location of the last shelf in the range. (Both HMUX and HIPR statistics will be cleared if they exist in the range between and including the `sshelf` and `eshelf` locations).

Range: `1100, 1200 -6100`

Default: If `sshelf` is specified—current `sshelf` value.

If `sshelf` is not specified—`6100`.

:s= (optional)

Start address. This parameter specifies the IMT address of the first (or only) card in the range.

Range: `0-251`

(See the *Installation Manual* of your current documentation set for an illustration with IMT addresses).

:sloc= (optional)

Start location. Specifies the card location of the first card in the range.

Range: `1101-1113, 1115, 1201-1218, 1301-1318, 2101-2118, 2201-2218, 2301-2318, 3101-3118, 3201-3218, 3301-3318, 4101-4118, 4201-4218, 4301-4318, 5101-5118, 5201-5218, 5301-5318, 6101-6118`

Default: If `eloc` is specified—current `eloc` value

If `eloc` is not specified—`1201`, which corresponds to IMT address 0 (`s=0`).

:sshelf= (optional)

Start shelf location for HMUX and HIPR statistics. This parameter specifies the shelf location of the first shelf in the range. (Both HMUX and HIPR statistics will be cleared if they exist in the range between and including the **sshelf** and **eshelf** locations).

Range: 1100, 1200-6100

Default: If **eshelf** is specified—current **eshelf** value.
If **eshelf** is not specified—1100.

Example

```
clr-imt-stats:s=00
```

Dependencies

The **clr-imt-stats** command cannot be entered if any of the following commands is running: **rept-imt-info**, **rept-imt-lvl1**, **rept-imt-lvl2**, **tst-imt**.

If the **s** and **e** parameters are specified, do not specify the **slloc** and **eloc** parameters; conversely, if the **slloc** and **eloc** parameters are specified, do not specify the **s** and **e** parameters.

This command cannot be entered during IMT statistics collection following an hourly boundary.

Either the start address (**s** parameter) or start location (**slloc** parameter) must be specified.

Notes

The **slloc** and **eloc** parameters allow individual **HMUX** and **HIPR** cards to be cleared.

The **s** and **e** parameters will *not* clear **HMUX** and **HIPR** cards.

The **sshelf** and **eshelf** parameters clear both **HMUX** and **HIPR** cards on bus A and bus B.

Output

```
clr-imt-stats:all=yes
rlghncxa03w 04-01-07 11:02:30 EST EAGLE 35.0.0
Clear IMT Statistics command(s) issued...
Command Completed.
;
```

conn-imt

Connect IMT

The interprocessor message transport bus (IMT bus) is the main communications artery between all subsystems in the system. Use this command to connect a manually disconnected card to the specified IMT bus. The card must have been manually disconnected from the bus previously by the **disc-imt** command. If the card was disconnected from the bus for other reasons, this command has no effect.

Keyword: **conn-imt**

Related Commands: **clr-imt-stats**, **disc-imt**, **rept-imt-lvl1**, **rept-imt-lvl2**, **rept-stat-imt**, **rmv-imt**, **rst-imt**

Command Class: System Maintenance

Parameters

:bus= (mandatory)

IMT bus to which the specified card is to be connected.

Range: a, b

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Example

conn-imt:loc=1201:bus=a

Dependencies

The card being reconnected must first be disconnected manually from the bus by using the **disc-imt** command.

This command cannot be entered during an IMT Fault Isolation Test.

The card location, frame, shelf, or slot must be within the allowed range.

Notes

This command has no effect if the card was disconnected from the IMT bus in any way other than manually using the **disc-imt** command.

Output

conn-imt:loc=1201:bus=a

```
rlghncxa03w 04-01-07 11:02:30 EST EAGLE 31.3.0
Connect IMT Bus A command issued to card 1201
```

```
rlghncxa03w 04-01-07 11:02:30 EST EAGLE 31.3.0
0100.0006 IMT Bus A Card connected to IMT
```

```
rlghncxa03w 04-01-07 11:02:30 EST EAGLE 31.3.0
3112.0006 CARD 1201 CCS7ITU Card connected to IMT
```

;

copy-disk

Copy Disk

Use this command to copy a mirror image of the active fixed disk to the standby fixed disk. When the fixed disk requires replacement, or needs to be repaired or updated, this command formats the standby fixed disk and copies the contents of the active fixed disk to the standby fixed disk.



CAUTION: Before entering the copy-disk command, contact Tekelec Technical Services at (888) FOR-TKLC. The Technical Services engineer may be able to propose a less intrusive method for copying to a fixed disk.



CAUTION: If the copy-disk command fails and the standby TDM boots continuously, insert a removable disk with the same release as the fixed disks in the MDAL. The standby MASP should successfully boot off the removable disk. After the MASP has booted completely, re-enter the copy-disk command.

Keyword: copy-disk

Related Commands: chg-db, copy-gpl, copy-meas, disp-disk-dir, format-disk, rept-stat-db

Command Class: System Maintenance

Parameters

:dloc= (mandatory)

This parameter must specify the location of the standby fixed disk. This is the destination drive for this function.

Range: 1114, 1116
(TDM)

:force= (optional)

This parameter provides some protection against data loss from copying over a fixed disk. If the target medium is recognized as a valid system medium, the **force=yes** parameter must be specified.

Range: yes, no
Default: no

:format= (optional)

This parameter provides the choice whether or not to format the standby fixed disk before executing the copy. If a format is not necessary, specifying **no** can save a significant amount of time.

Range: yes, no
Default: yes

:sloc= (optional)

This parameter must specify the location of the active fixed disk. This will be the source drive for this function.

Range: 1114, 1116
(TDM)

Default: The location of the active fixed disk

Example

copy-disk:sloc=1114:dloc=1116:force=yes

Dependencies



CAUTION: Do not turn off measurements at midnight because doing so can cause the loss of an entire day of measurements. Do not turn off measurements during the 30 minute measurements processing period, because this can result in the loss of the measurements for the 30 minute period being processed.

Measurements collection must be turned off or the **copy-disk** command cannot be executed. Do not issue the **chg-meas** command while the **copy-disk** command is in progress. This results in read and write errors, because the standby fixed disk is not accessible and the active fixed disk only allows read-only access.

OAM Measurements collection cannot be in progress when this command is entered. Retry the command after a period of waiting for the measurements collection to complete.

The **copy-disk** command reserves both the active and standby disks, preventing database updates for the duration of the command. Access is allowed for read-only; writing to the disk is prohibited.

All commands that affect the database are not allowed for the duration of the command. Attempts to use such commands are rejected, and an error message is displayed indicating that the command has been rejected because the **copy-disk** command is in use.

The EOAM GPL version that is running in the active OAM card location must be the same GPL version that is running in the standby OAM card location.

The **sloc** and **dloc** fixed disks must be available and compatible.

The **sloc** fixed disk must be coherent.

The **dloc** parameter must specify the standby fixed disk.

The **sloc** parameter must specify the active fixed disk.

The standby fixed disk cannot be initialized while un-uploaded security log entries exist.

The **force=yes** parameter is required if the destination medium is recognized as a system medium. This parameter is optional if the destination medium is not a system medium. Only media that contain the **dms.cfg** file are recognized as system media.

If the **force=yes** parameter is specified, the disk should not require low-level formatting, and the **format=no** parameter should also be specified.

Notes

The **format=no** parameter should be specified when upgrading a spare TDM. You should specify the **format=yes** parameter when there is a suspected hardware problem.

If the **copy-disk** command is initiated and the standby OAM initialization is not complete, command processing will be delayed. If standby initialization fails, the command proceeds to allow the standby TDM to recover from a previous **format-disk** or **copy-disk** failure. In such cases, the following messages appear:

```
Standby MASP has not finished initializing - please wait...
Standby MASP initialization timed out - continuing...
```

The **format=no** parameter should be specified when upgrading a spare TDM. the **format=yes** parameter should be specified when there is a suspected hardware problem.

If the **copy-disk** command is initiated and the standby OAM initialization is not complete, command processing will be delayed. If standby initialization fails, the command proceeds to allow the standby TDM to recover from a previous **format-disk** or **copy-disk** failure. In such cases, the following messages appear:

```
Standby MASP has not finished initializing - please wait...
Standby MASP initialization timed out - continuing...
```

When the **copy-disk** command is processing, the system cannot log other commands to the security log because the active fixed disk is set to read-only. During this time, commands that would alter the database fail when entered.

The performance time required to copy a fixed disk to another fixed disk varies depending on database size and system activity. This operation should typically take no longer than 2.5 hours. (If you are not performing the low-level format (**format=no**), the operation should take no longer than an hour.) If the **copy-disk** operation exceeds three hours, contact Tekelec Technical Services for assistance at (888) FOR-TKLC. If the **copy-disk** operation without the low-level format exceeds 1.5 hours, call Tekelec Technical Services.

Output

copy-disk:sloc=1114:dloc=1116:force=yes

```
rlghncxa03w 04-01-07 11:02:30 EST EAGLE 31.3.0
copy-disk:sloc=1114:dloc=1116:force=yes
Command entered at terminal #3.
```

```
Copy-disk (fixed): from active (1114) to standby (1116) started.
Extended processing required, please wait.
```

```
Copy-disk (fixed): from active (1114) to standby (1116) completed.
Measurements collection may be turned on now if desired.
```

copy-fts

Copy to or from the File Transfer Area

This command copies tables into or from the file transfer area (FTA).

Keyword: copy-fts

Related Commands: act-file-trns, disp-fts-dir, dlt-fts

Command Class: System Maintenance

The **1117** location is used by MDAL cards. The **1113** and **1115** locations are used by E5-MCAP cards. The **1114** and **1116** locations are used by TDM or E5-TDM cards.

Legacy TDM, GPSM-II, and MDAL cards cannot be installed in the same system as E5-TDM, E5-MCAP, and E5-MDAL cards.

Notes

This command is used to copy into the file transfer area or out of the file transfer area. The parameters **stbl**, **dfile**, **sfile**, and **dtbl** are used to describe the nature of the copy. A copy from a DMS table into the file transfer area would use the **stbl** (source table) and **dfile** (destination file) parameters. Thus, data would move from a table into a transfer area file. To copy from the file transfer area to a DMS table, use the **sfile** (source file) and **dtbl** (destination table) parameters. Any other combination of these 4 parameters is invalid.

Output

copy-fta:stbl=1:dfile="2F1.OUT":sloc=1114:dloc=1114

```
rlghncxa03w 04-01-05 14:59:10 EST EAGLE 31.3.0
copy-fta:stbl=1:dfile="2F1.OUT":sloc=1114:dloc=1114
Command entered at terminal #1.
;
rlghncxa03w 04-01-05 14:59:26 EST EAGLE 31.3.0
Copied Table 1 successfully from FIXED to F1.OUT in FTA.
;
rlghncxa03w 04-01-05 15:00:49 EST EAGLE 31.3.0
copy-fta:sfile=dms.cfg:dtbl=0:sloc=1114:dloc=1117:drv=remove
Command entered at terminal #1.
;
rlghncxa03w 04-01-05 15:01:12 EST EAGLE 31.3.0
Copied DMS.CFG successfully from FTA to Table 0 on REMOVABLE.
;
```

copy-gpl

Copy Generic Program Load

Use this command to copy all approved GPLs from one drive to another. The GPLs can be copied only from the fixed disk on the active TDM to the removable cartridge or drive, or from the removable cartridge or drive to the fixed disk on the standby TDM.

Keyword: copy-gpl

Related Commands: act-gpl, alw-card, chg-gpl, init-card, init-sys, rept-stat-gpl, rtrv-gpl

Command Class: System Maintenance

Parameters

:ddrv= (optional)

Destination drive. This parameter specifies the identification of the disk to which the GPL is copied.

Range: **fixed**, **remove**, **usb**

fixed — The fixed disk

remove — The removable cartridge or drive

usb — The credit card drive

:dloc= (optional)

The destination location of the the GPLs to be copied.

Range: **1114**, **1116**, **1117**, **1113**, **1115**

1114 — The TDM

1116 — The TDM

1117 — The removable cartridge drive

1113 — The latched USB port

1115 — The latched USB port

Default: 1117

:sdrv= (optional)

Source drive. This parameter specifies the identification of the disk from which the GPL is copied.

Range: **fixed, remove, usb**

fixed — The fixed disk

remove — The removable cartridge or drive

usb — The credit card drive

:sloc= (optional)

The source location of the the GPLs to be copied.

Range: **1114, 1116, 1117, 1113, 1115**

1114 — The TDM

1116 — The TDM

1117 — The removable cartridge drive

1113 — The latched USB port

1115 — The latched USB port

Default: The location of the active TDM

Example

```
copy-gpl
```

```
copy-gpl:sloc=1117:dloc=1116
```

```
copy-gpl:sloc=1116
```

Dependencies

While this command is executing, the **chg-gpl** and **act-gpl** commands cannot be entered.

The destination disk needs to be formatted.

The GPLs can be copied only from the fixed disk on the active TDM (**sloc=1114** or **sloc=1116**) to the removable cartridge (**dloc=1117**), or from the removable cartridge (**sloc=1117**) to the fixed disk on the standby TDM (**dloc=1114** or **dloc=1116**).

The source drive must be coherent when the command is executed.

The **1117** location is used by MDAL cards. The **1113** and **1115** locations are used by E5-MCAP cards. The **1114** and **1116** locations can be used by TDM or E5-TDM cards.

An E5-MCAP card must be installed before a value of **usb** can be specified for the **ddriv** or **sdrv** parameter.

The credit card drive must be accessible in the Active OAM credit card USB port.

The specified disk type does not match the specified location.

Notes

This command has no effect on the GPLs stored on other cards (for example, SCCP).

Output

Copying the GPLs from the fixed disk on the active TDM (card location 1114) to the removable cartridge.

copy-gpl:sloc=1114:dloc=1117

```
rlghncxa03w 04-01-07 00:57:31 EST EAGLE 31.3.0
COPY GPL: MASP A - COPY STARTS ON ACTIVE MASP
COPY GPL: MASP A - COPY TO REMOVABLE CARTRIDGE COMPLETE
```

;

Copying the GPLs from the removable cartridge to the fixed disk on the standby TDM (card location 1116).

copy-gpl:sloc=1117:dloc=1116

```
rlghncxa03w 09-01-07 00:57:31 EST EAGLE 40.1.0
COPY GPL: MASP B - COPY STARTS ON REMOVABLE DRIVE
```

;

```
rlghncxa03w 09-01-07 01:01:27 EST EAGLE 40.1.0
COPY GPL: MASP B - COPY TO STANDBY MASP COMPLETE
```

;

Copying the GPLs from the fixed disk on the active USB drive.

copy-gpl:sloc=1114:ddrv=usb

```
e5oam 09-01-09 05:14:23 MST EAGLE 40.1.0
COPY GPL: MASP A - COPY STARTS ON ACTIVE MASP
```

;

```
e5oam 09-01-09 05:22:30 MST EAGLE 40.1.0
COPY GPL: MASP A - COPY TO USB DRIVE COMPLETE
```

copy-meas**Copy Measurements**

Use this command to copy all measurements tables on the active fixed disk to a measurements removable cartridge. Do this when you need to perform off-line analysis of the raw measurements data.

NOTE: This command is not supported on the Measurements Platform feature.

Keyword: copy-meas

Related Commands: chg-meas, rept-meas, rtrv-meas-sched

Command Class: System Maintenance

Parameters

None

Example

copy-meas

Dependencies

This command requires a removable cartridge formatted for measurements data. See the **format-disk** command for details on how to use the system to format cartridges.

A valid system measurements removable cartridge must be inserted in the MDAL removable cartridge drive.

Notes

To execute this command, measurement collection must be turned **off**. If measurement collection is on, enter the **chg-meas:collect=off** command to turn off measurement collection.

The *Maintenance Manual* provides a description of all measurement report parameters.

Table 5-36. Performance for the **copy-meas** command

Activity	Approximate Performance*
Copy the raw measurements data from the active fixed disk to the measurements removable cartridge.	2 minutes
* Minimum time and dependent on system activity.	

Output

copy-meas

COPY MEASUREMENTS: MASP A - COPY STARTS ON ACTIVE MASP
COPY MEASUREMENTS: MASP A - COPY TO REMOVABLE CARTRIDGE COMPLETE

copy-seculog

Copy Security Log Contents to FTA Area

Use this command to copy the contents of a security log to the file transfer area (FTA). If no parameters are specified, a file called **yymmda.log** (see the description of the **dfile** parameter) is created in the FTA on the active fixed disk. The contents of the security log on the active fixed disk are copied into this file.

Keyword: copy-seculog

Related Commands: `act-file-trns`, `copy-tbl`, `disp-fts-dir`, `dlt-fts`

Command Class: Security Administration

Parameters

:dfile= (optional)

Target file name. This parameter specifies the name of the file that is to be created in the FTA and initialized with the security log contents.

Range: zzzzzzzzzzzzzzzzzzzzzzzzzzzzzzzzzzzzzz
1–32 characters

Default: If not specified, the file is named *yymmddx.log*, where *yymmdd* is the current year, month, and day, and *x* is either *a* or *s*, depending on whether the log on the active or standby fixed disk was copied.

:dloc= (optional)

Destination FTA. This parameter specifies which FTA is to receive the copy of the log.

Range: act, stb

act —Copies the log to the active fixed disk's FTA.

stb—Copies the log to the standby fixed disk's FTA

Default: act

:slog= (optional)

Source log indicator. This parameter specifies which log is to be copied to the FTA.

Range: act, stb

act—Copies the log on the active fixed disk

stb—Copies the log on the standby fixed disk

Default: act

Example

```

copy-seculog
copy-seculog:dfile="somename.log"
copy-seculog:slog=stb
copy-seculog:slog=act
copy-seculog:slog=act:dloc=stb

```

Dependencies

No other security log command can be in progress when this command is entered.

No **copy-fta** command can be in progress when this command is entered.

GPSM-II and E5-MCAP cards cannot be provisioned in the system at the same time.

Notes

For the **dfile** parameter, if the file name is not accepted by the system because it contains special characters such as blanks, colons, dashes, ampersands, or others; or because it does not start with an alphabetic character, enclose the file name in double quotes (Copies t) as in this example: Copies t.

Any scroll area failure message that can be produced by the **copy-fta** command can be produced also by the **copy-seculog** command.

Output

The following example shows that the log on the active fixed disk is copied to the FTA on the active fixed disk and given the default name (note the **a** in the log name).

```

copy-seculog
rlghncxa03w 04-01-04 15:59:06 EST EAGLE 31.3.0
Security log on TDM 1114 copied to file 960104a.log on TDM 1114

```

The following example shows that the log on the active fixed disk is copied to the FTA on the active fixed disk and given a user-specified name.

```

copy-seculog:dfile="somename.log"
rlghncxa03w 04-01-04 15:59:06 EST EAGLE 31.3.0
Security log on TDM 1116 copied to file somename.log on TDM 1114

```

The following example shows that the log on the standby fixed disk is copied to the FTA on the active fixed disk and given the default name (note the **s** in the log name).

```

copy-seculog:slog=stb
rlghncxa03w 04-01-04 15:59:06 EST EAGLE 31.3.0
Security log on TDM 1114 copied to file 960104s.log on TDM 1116

```

The following example shows that the copy of the log fails because a file already exists in the FTA with the same name.

```

copy-seculog:slog=act
rlghncxa03w 04-01-04 15:59:06 EST EAGLE 31.3.0
Command Failed - Destination File already exists in the File Transfer Area

```

The following example shows that the copy fails because there is not enough room in the FTA to contain the copy.

```

copy-seculog:slog=act:dloc=stb
rlghncxa03w 04-01-04 15:59:06 EST EAGLE 31.3.0
Command Failed - Not enough room exists in the File Transfer Area

```


dact-alm-trns**Deactivate Alarm Transfer**

Use this command to return all audible alarm indications to the local office.

Keyword: dact-alm-trns

Related Commands: act-alm-trns, rept-stat-clk, rept-stat-trbl, rls-alm, rtrv-obit, rtrv-trbl

Command Class: System Maintenance

Parameters

This command has no parameters.

Example

dact-alm-trns

Dependencies

None

Notes

After you enter **dact-alm-trns**, enter **rept-stat-alm** to verify the status of the alarms.

Output

dact-alm-trns

rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0

Alarms returned to Local Maintenance Center

;

dact-cdl**Deactivate Command Driven Loopback**

Use this command to deactivate a previously initiated command driven loopback for testing a signaling link, if the test is active. If it is not active, the command will attempt to clear both near-end and far-end latched loopback points

Keyword: dact-cdl

Related Commands: act-cdl, act-lbp, dact-lbp, rept-stat-cdl, tst-slk

Command Class: Link Maintenance

Parameters

:link= (mandatory)

SS7 signaling ports. The signaling port to which the SS7 signaling link being tested is assigned.

Synonym: port

Range: a, b, a1-a31, b1-b31

Not all card types support all **link** parameter values.

See "Summary of Range Values for :link Parameter" for valid **link** parameter range values for each type of card that can have assigned signaling links.

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Example

dact-cdl:loc=1205:link=b

Dependencies

The card location specified in the **loc** parameter must be equipped.

The signaling link specified in the **link** parameter must be equipped.

Link Fault Sectionalization (LFS) must not be running on the specified signaling link when this command is entered.

Command Driven Loopback testing is not available during upgrade.

A link diagnostic test is in progress on the signaling link specified in the **link** parameter, but it is not a Command Driven Loopback.

The card location specified in the **loc** parameter must be in service.

The signaling link specified in the **link** parameter must not be active.

The card location specified in the **loc** parameter cannot be reserved by the system.

Notes

None

Output

dact-cdl:loc=1205:link=b

```
tekelecstp 05-01-21 17:00:36 EST  EAGLE5 33.0.0
Command Accepted: Stop Command Driven Loopback message is sent.
;

tekelecstp 05-01-21 17:00:36 EST  EAGLE5 33.0.0
Command Completed.
;
```

dact-cmd**Deactivate Command**

This command halts processing and output of the commands listed in Table 5-37.

Used without the **trm** parameter, the **dact-cmd** command is entered on the same terminal that is currently running the command that you want to cancel.

Used with the **trm** parameter, the **dact-cmd** command is entered on a terminal other than the one that is currently running the command that you want to cancel.

Table 5-37. Commands For Which **dact-cmd** Aborts Processing and Output

Command		
rept-imt-info	rtrv-as	rtrv-obit (active OAM)
rept-stat-as	rtrv-assoc	rtrv-rte
rept-stat-assoc	rtrv-cmd	rtrv-seculog
rept-stat-card	rtrv-dstn	rtrv-secu-user
rept-stat-clk	rtrv-gta	rtrv-slk
rept-stat-dstn	rtrv-gtt	rtrv-tbl-capacity
rept-stat-ls	rtrv-lbp	rtrv-trbltx
rept-stat-rte	rtrv-log	rtrv-uaps
rept-stat-slk	rtrv-ls	rtrv-vflx-cd
rept-stat-trbl	rtrv-map	rtrv-vflx-rn
rtrv-appl-rtkey	rtrv-mrn	rtrv-vflx-vmsid

NOTE: The Basic command class allows use of this command without the **trm** parameter (for **dact-cmd**); the Security Administration command class is required for use of this command when the **trm** parameter is specified (**dact-cmd:trm=x**).

Keyword: **dact-cmd**

Related Commands: **rept-imt-info**, **rept-stat-as**, **rept-stat-assoc**, **rept-stat-card**, **rept-stat-dstn**, **rept-stat-ls**, **rept-stat-slk**, **rtrv-appl-rtkey**, **rtrv-assoc**, **rtrv-dstn**, **rtrv-gta**, **rtrv-gtt**, **rtrv-log**, **rtrv-ls**, **rtrv-map**, **rtrv-rte**, **rtrv-seculog**, **rtrv-slk**, **rtrv-trbltx**, **rtrv-uaps**

Command Class: Basic

Parameters

:trm= (optional)

The terminal on which the command is to be canceled.

Range: 1-40

Example

dact -cmd

dact -cmd:trm=3

Dependencies

You cannot specify the **trm** parameter in a **dact-cmd** command that you enter on the same terminal that is running the command that you want to cancel. The terminal will return an error: system is busy.

The **dact-cmd:trm=** command requires the security administration command class for the terminal and for the user.

Notes

The **dact-cmd** command (without the **trm** parameter) must be entered on the same terminal that is running the command you want to cancel.

If the **dact-cmd** command is entered on a terminal that is not running a command, the **dact-cmd** command completes successfully without returning an error. Likewise, if the **dact-cmd:trm=**

command is entered and there is no command running on the specified terminal, the **dact-cmd:trm=** command completes successfully without returning an error.

Command aborted on terminal 2.

You might still see some output after the abort message if output accumulated in the output queue before you issued the **dact-cmd** command. When you cancel a command, the cancellation should take no longer than 25 seconds to take effect.

The **F9** function key provides the same functionality as the **dact-cmd** command (without the **trm** parameter). On a terminal in KSR mode, pressing <CTRL>I, also provides the same function.

The **dact-cmd** and the **F9** function key cannot be used for pure SEAS commands.

If you try to cancel a command other than one listed in Table 5-37, the terminal accepts the command, but output and processing of the current command continue.

When the **dact-cmd** command is entered, a command status code of AB (command aborted) is logged in the security log as follows:

- When the **dact-cmd** (without the **trm** parameter) is entered, no entry is logged.
- When the **dact-cmd:trm=** command is entered, an entry is logged.
- When the **dact-cmd** (without the **trm** parameter) is entered as a SEAS flow-thru command, an entry is logged. The **dact-cmd:trm=** command is not allowed as a SEAS flow-thru command because the **dact-cmd:trm=** command belongs to the Security Administration Command Class.

For examples of the security log entries, see the **rtrv-seculog** command.

Output

dact -cmd

```
rlghncxa03w 04-04-27 17:00:36 EST  EAGLE 31.6.0
dact-cmd
Command entered at terminal #2.
```

```
rlghncxa03w 04-04-27 17:00:36 EST  EAGLE 31.6.0
Command aborted on terminal 2.
```

;

dact-cmd:trm=2

```
rlghncxa03w 04-04-27 17:00:36 EST  EAGLE 31.6.0
dact-cmd:trm=2
Command entered at terminal #3.
```

```
rlghncxa03w 04-04-27 17:00:36 EST  EAGLE 31.6.0
Command aborted on terminal 2.
```

;

dact-echo

Deactivate Echo

Use this command to halt the echoing of command responses from the user's terminal to other terminals or printers.

Keyword: dact-echo

Related Commands: act-echo, alw-trm, canc-echo, chg-trm, inh-trm, rept-stat-trm, rmv-trm, rst-trm, rtrv-trm

Command Class: Basic

Parameters**:trm=** (optional)

The ID number of the terminal for which the echo is being canceled.

Range: 1-16**Default:** Cancels all active echoes**Example****dact -echo****Dependencies**You cannot cancel the echo to the same terminal from which you are issuing the **dact-echo** command.There must be an active echo (**act-echo**) to the terminal specified.**Notes**Only the echoing of command output responses can be halted by this command. To halt the printing of alarm and network messages, you must use the **chg-trm** command.**Output****dact -echo**

```
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
Command entered at terminal #6.
Scroll Area Output echo disabled to all terminals.
```

;

dact -echo:trm=7

```
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
Command entered at terminal #1.
Scroll Area Output echo disabled for terminal 7.
```

;

dact-lbp**Deactivate Loopback Point Test**

Use this command to deactivate a previously activated loopback point test, if a test is active. If no test is active, the command attempts to clear both near-end and far-end latched loopback points.

Keyword: dact-lbp**Related Commands:** act-lbp, chg-lbp, dlt-lbp, ent-lbp, rept-stat-lfs, rtrv-lbp**Command Class:** Link Maintenance**Parameters****:link=** (mandatory)

SS7 signaling link. The signaling link for which the loopback point test is being deactivated.

Synonym: port**Range:** a, b, a1-a31, b1-b31Not all card types support all **link** parameter values.See "Summary of Range Values for :link Parameter" for valid **link** parameter range values for each type of card that can have a location specified in the **loc** parameter.**:loc=** (mandatory)

Card location. The unique identifier of the card containing the signaling link on which loopback point testing is to be deactivated.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208,

4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218,
5301-5308, 5311-5318, 6101-6108, 6111-6118

Example

dact - lbp : loc=1205 : link=b

Dependencies

The specified signaling link must be equipped.

For clearing a remotely initiated loopback or LFS test stop, the card location (**loc** parameter) must be a **limds0**, **limt1**, or **limch** (associated with a **limt1**) card configured with either an **ss7ansi** or **ccs7itu** application.

The **dact-lbp** command cannot be entered until any previously issued **act-lbp** or **dact-lbp** command is accepted.

If an LFS test is about to complete, a new **dact-lbp** command cannot be entered until the test completes.

The **dact-lbp** command cannot be entered to cancel a signaling link test (a **tst-slk** test).

The **dact-lbp** command cannot be entered to cancel a Command Driven Loopback test.

The specified link is not found, and the max number of allowed LFS or signaling link tests are already in progress. At least one active LFS or signaling link test must be completed before this command can be entered again.

This command cannot be entered during upgrade.

The specified signaling link must not be active.

For clearing a remotely initiated loopback, the card location specified in the **loc** parameter must be equipped.

For clearing a remotely initiated loopback, The card location specified in the **loc** parameter must be in service (**IS-NR**).

For clearing a remotely initiated loopback, the card location specified in the **loc** parameter cannot be reserved by the system.

Notes

After the deactivation of loopback point testing has started, you cannot cancel the process.

If an LFS test is aborted by a card reset, it could leave the remote far-end loop-back condition active. Use the **dact-lbp** command to cancel LFS tests.

Output

The following example output is generated only when a latched loopback is cleared and when there were no active loopback tests in progress.

NOTE: This situation could occur even if there were no latched loopbacks to be cleared.

```
dact - lbp: loc=1205: link=b
    rlgncxa03w 04-02-17 16:02:05 EST  EAGLE5 33.0.0
    LOC = 1205  LINK = B
    CLEAR STATUS = PASS, loopback was cleared.
;
```

The following example output is generated only when a latched loopback could not be cleared when there were no active loopback tests in progress.

```
dact - lbp: loc=1205: link=b
    rlgncxa03w 04-02-17 16:02:05 EST  EAGLE5 33.0.0
    LOC = 1205  LINK = B
    CLEAR STATUS = ERROR, loopback could not be cleared.
;
```

dact-rstst

Deactivate Route Set Test

Use this command to request deactivation of the routeset test being performed by the LIMs running the **ss7ansi** application. The system verifies that the point code and the linkset exist, and that the specified linkset is in the routeset of the specified point code. If it is, then a request to stop routeset testing procedures for the specified destination-linkset combination is sent to the LIM.

Keyword: dact-rstst

Related Commands:

Command Class: System Maintenance

Parameters

:dpc= (mandatory)

The ANSI destination point code of the destination, x-list entry, or cluster whose routeset testing is to be stopped, with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: dpca

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001-005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006-255**.

The point code **000-000-000** is not a valid point code.

:lsn= (mandatory)

The name of the linkset associated with the destination point code that is to have routeset testing stopped.

Range: ayyyyyyyyy

1 alphabetic character followed by 9 alphanumeric characters

Example

```
dact-rstst:dpc=1-2-*:lsn=lsn1a
```

```
dact-rstst:dpc=1-2-33:lsn=lsn1b
```

Dependencies

The specified DPC must be either provisioned or an x-list entry.

The specified linkset must be in the DPC's routeset.

The destination address must be a full point code or a cluster point code specified as *ni-nc-**. A DPC cannot be specified as *ni-nc-*** or *ni-nc-**** for the **dact-rstst** command.

The specified linkset must exist in the linkset table.

Notes

None

Output

```
dact-rstst:dpc=1-2-*:lsn=lsn1a
```

```
rlghncxa03w 04-01-05 16:40:40 EST EAGLE 31.3.0
Stop routeset testing request sent to SNM (scroll area)
```

```
rlghncxa03w 04-01-05 16:40:40 EST EAGLE 31.3.0
Command Completed.
```

```
;
```

dact-slk**Deactivate Signaling Link**

Use this command to change the state of the specified link to OOS-MT-DSBLD (out-of-service maintenance-disabled).



CAUTION

CAUTION: This command impacts network performance, and should be used only during periods of low traffic.

Keyword: dact-slk

Related Commands: act-slk, blk-slk, dlt-slk, ent-slk, inh-slk, rept-stat-slk, rtrv-slk, tst-slk, ublk-slk, unhb-slk

Command Class: Link Maintenance

Parameters

:link= (mandatory)

Signaling link on the card specified in the **loc** parameter. The signaling links can be specified in any sequence or pattern.

Synonym: port

Range: a, b, a1-a31, b1-b31

Not all card types support all **link** parameter values.

See "Summary of Range Values for :link Parameter" for valid **link** parameter range values for each type of card that can have a location specified in the **loc** parameter.

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118,

3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208,
4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218,
5301-5308, 5311-5318, 6101-6108, 6111-6118

Example

```
dact-slk:loc=1301:link=a
```

Dependencies

A card location must be specified that is valid and defined in the database.

No other action command can be in progress when this command is entered.

The card must be equipped and must be one of the following cards:

- An E1 ATM card running the **atmitu** application
- An E1/T1 MIM, E5-E1T1, or HC MIM card running the **ss7ansi** or **ccs7itu** application
- An E5 ATM card running the **atmansi** or **atmitu** application
- An E5-ENET card running the **ipsg** application
- An E5-ENET card or SSEDCCM card running the **iplim** or **iplimi** application with links having **ipliml2=m2pa**
- A LIM card running the **ss7ansi**, **ss7gx25**, or **ccs7itu** application
- A LIM ATM card running the **atmansi** application

The card must contain signaling links.

The signaling link must be equipped in the database.

The following **link** parameter values can be specified for the following cards that support more than 2 links per card:

- **a1-a3, b1-b3**—Multi-port LIM (MPL), SSEDCCM card running the **iplim** or **iplimi** application with links having **ipliml2=m2pa**, E1/T1 MIM card
- **a1-a31, b1-b31**—HC-MIM card
- **a1-a15, b1-b15**—E5-E1T1 card
- **a1-a7, b1-b7**—E5-ENET card running the **iplim** or **iplimi** application that supports 16 links
- **a1-a15, b1-b15**—E5-ENET card running the **ipsg** application

The card must be equipped in the specified card location.

Notes

The *Installation Manual – EAGLE 5 ISS* provides an illustration of card locations.

After the **dact-slk** command is entered, verify the cancellation by issuing the **rept-stat-slk** command.

Output

```
dact-slk:loc=1301:link=a
rlghncxa03w 04-01-07 11:11:28 EST EAGLE5 33.0.0
Deactivate Link message sent to card
;
```

dact-user**Deactivate User**

Use this command to end a user session. The **logout** command has the same affect as the **dact-user** command.

Keyword: dact-user

Related Commands: act-user, chg-pid, chg-user, dlt-user, ent-user, login, logout, rept-stat-user, rtrv-secu-user, rtrv-user

Command Class: Basic

Parameters

This command has no parameters.

Example

dact -user

Dependencies

None

Notes

The **logout** or **canc-user** commands can be used in place of **dact-user**.

Output

Not applicable.

disc-imt**Disconnect IMT**

The interprocessor message transport bus (IMT bus) is the main communications artery between all subsystems in the system. Use this command to disconnect a card from the specified IMT bus.

Keyword: disc-imt

Related Commands: clr-imt-stats, conn-imt, rept-imt-lvl1, rept-imt-lvl2, rept-stat-imt, rmv-imt, rst-imt

Command Class: System Maintenance

Parameters

:bus= (mandatory)

IMT bus to be disconnected from.

Range: a, b

:loc= (mandatory)

Card address. The card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Example

disc-imt : loc=1213 : bus=b

Dependencies

This command cannot be entered during an IMT Fault Isolation Test. The card cannot be isolated from both IMT busses.

The card location, frame, shelf, or slot must be within the allowed range.

Notes

The card can be reconnected by issuing the **conn-imt** command, or by re-inserting the card. A software reset does not affect connect status. (The **init-card** command performs a software reset.)

Output

disc-imt:loc=1213:bus=b

```
rlghncxa03w 04-01-07 11:02:30 EST EAGLE 31.3.0
Disconnect IMT Bus B command issued to card 1213
```

;

disp-fta-dir

Display Contents of the File Transfer Area

Use this command to display the files that are in the file transfer area (FTA) the layout of FTA, and the amount of free space in the FTA.

Keyword: **disp-fta-dir**

Related Commands: **act-file-trns, copy-fta, dlt-fta**

Command Class: System Maintenance

Parameters

:loc= (optional)

The location of the fixed disk whose FTA is to be displayed.

Range: **1114, 1116**

(TDMs)

Default: The active TDM location

Example

disp-fta-dir:loc=1114

Dependencies

This command must display the files (along with deleted files and free slots) in the order in which they appear in the file transfer area.

The **loc** parameter must specify a TDM card.

Only one file transfer can be active at a time.

TDM and E5-TDM cards cannot co-exist in the system.

Notes

None

Output**disp-fta-dir:loc=1114**

```
rlghncxa03w 05-07-01 16:21:12 EST EAGLE 31.3.0
File Transfer Area Directory of fixed disk 1114:
```

FILENAME	LENGTH	LAST MODIFIED	LBA
oam.elf	1048576	05-07-01 16:51	40960
<deleted>	65536	-----	43008
sccp.elf	1048576	05-07-01 18:30	43136
<deleted>	1048576	-----	46704
tbl213.out	640000	05-07-01 06:39	48752

5 File(s) 21584896 bytes free

;

dlt-acg-mic**Delete ACG Manually Initiated Control**

Use this command to delete ACG controls that apply to certain queries. The control can apply to all queries or to specific query services and called party digits. A particular control is selected to be deleted by either specifying that it is the **type=all** control or specifying its service and digits.

Keyword: dlt-acg-mic

Related Commands: chg-acg-mic, ent-acg-mic, rept-stat-lnp, rtrv-acg-mic

Command Class: Database Administration

Parameters

:dgts= (optional)

Digits

Range: 3-10 digits

:serv= (optional)

Query service

Range: ain, in

:type= (optional)

Type of control

Range: all, sd

Default: sd

Example

```
dlt-acg-mic:type=all
```

```
dlt-acg-mic:serv=ain:dgts=9194602132
```

Dependencies

If the **type=all** parameter is specified, optional parameters **serv** and **dgts** are not allowed.

If the **type=sd** parameter is specified, optional parameters **serv** and **dgts** are required.

If the **type=all** parameter is specified, a MIC with **type=all** must exist.

If the **type=sd** parameter is specified, a MIC with the same service and digits must exist.

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before this command can be entered.

The **dgts** parameter value must be 3 digits or 6-10 digits in length.

Notes

None

Output**dlt-acg-mic:type=all**

```
rlghncxa03w 04-02-28 08:50:12 EST EAGLE 31.3.0
ACG MIC table is (10 of 256) 4% full of type SD
DLT-ACG-MIC: MASP A - COMPLTD
```

;

dlt-acg-noc**Delete ACG Node Overload Control**

Use this command to delete the definition of a node overload level. The definition is comprised of the threshold LNP query rates for node overload levels and the values for the Automatic Call Gappings (ACG) to be sent when at the level. If a level is not defined, it is not used. Level 10 cannot be deleted.

Keyword: dlt-acg-noc**Related Commands:** chg-acg-noc, ent-acg-noc, rept-stat-lnp, rtrv-acg-noc**Command Class:** Database Administration**Parameters****:lvl=** (mandatory)

Overload level.

Range: 1-9**Example****dlt-acg-noc:lvl=3****Dependencies**

The specified overload level must be defined.

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before this command can be entered.

Notes

None

Output**dlt-acg-noc:lvl=3**

```
rlghncxa03w 04-02-28 08:50:12 EST EAGLE 31.3.0
DLT-ACG-NOC: MASP A - COMPLTD
```

;

dlt-appl-rtkey**Delete Application Route Key Table**

Use this command to delete static entries from the Routing Key table. These entries are used to associate a routing key with a socket name. A static entry is created using the **ent-appl-rtkey** command.

There are three types of routing keys, as follows:

- DPC, SI, SSN routing keys, which are used to route SCCP messages
- DPC, SI routing keys, which are used to route non-SCCP and non-ISUP messages
- DPC, SI, CIC routing keys, which are used to route ISUP messages

Keyword: dlt-appl-rtkey

Related Commands: ent-appl-rtkey, rtrv-appl-rtkey

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:asname= (optional)

Application Server (AS) name; AS assigned to this routing key.

Range: ayyyyyyyyyyyyyy

Up to 15 alphanumeric characters; the first character must be a letter

:cice= (optional)

The end range of circuit identification codes assigned to the routing key. Specify **cice** along with **cics** to identify the routing key to be changed. Valid only if **si=4, 5, or 13** and required if **si=4, 5, or 13**.

Range: 0-4294967295

See Table A-4 for valid CIC values for specified SI and MSU types.

:cics= (optional)

The end range of circuit identification codes assigned to the routing key. Specify **cice** along with **cics** to identify the routing key to be changed. Valid only if **si=4, 5, or 13** and required if **si=4, 5, or 13**.

Range: 0-4294967295

See Table A-4 for valid CIC values for specified SI and MSU types.

:dpc= (optional)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: dpca

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001-005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006-255**.

The point code **000-000-000** is not a valid point code.

:dpc/dpca/dpci/dpcn/dpcn24= (optional)

Destination point code.

:dpci= (optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—**0-7**

The point code **0-000-0** is not a valid point code.

:dpcn= (optional)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:dpcn24= (optional)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:opc= (optional)

ANSI originating point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Synonym: **opca**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:opc/opca/opci/opcn/opcn24= (optional)

Originating point code. Valid only if **si=4, 5, or 13** and required if **si=4, 5, or 13**.

:opci= (optional)

ITU international originating point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:opcn= (optional)

ITU national originating point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:opcn24= (optional)

24-bit ITU national originating point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:rcontext= (optional)

Identify a routing key by its routing context when a routing key needs to be deleted as an optional alternative to entering the **dpc/si/ssn/opc/cics/cice/type** key parameters.

Range: **0-4294967295**

:si= (optional)

The service indicator

Range: **0-15**

0-15 or equivalent text values:

Number = Text—Description

0 = **snm**—Signaling network management messages

1 = **regtest**—Signaling network testing and maintenance regular

2 = **spltest**—Signaling network testing and maintenance special

3 = **sccp**—SCCP

4 = **tup**—Telephone user part

5 = **isup**—ISDN user part

13 = **qbicc**

:ssn= (optional)

The subsystem number.

Range: **0-255**

:type= (optional)

The type of routing key that is being changed.

Range: full, partial, default

Default: full

Example

```
dlt-appl-rtkey:dpc=1-1-1:si=3:asname=as1:ssn=255
```

```
dlt-appl-
```

```
rtkey:dpci=s-3-11-1:si=5:opci=s-4-11-2:cics=1:cice=1000:asname=as  
itu
```

```
dlt-appl-rtkey:rcontext=100
```

Dependencies

The SSN is valid and must be specified only when the **si=3** (or **sccp**) parameter is specified. When the **si=3** (or **sccp**) parameter is not specified, the **ssn** parameter must not be specified.

The value entered for the starting circuit identification code (**cics**) must be less than or equal to the value entered for the ending circuit identification code (**cice**).

A circuit identification code range (**cics** to **cice**) that overlaps an existing routing key cannot be specified.

When the DPC is ANSI and the **si=4** parameter is specified, a DPC/SI routing key must be specified (TUP is used only in an ITU network).

The **opc**, **cics**, and **cice** parameters are required and can be entered only if the **si** parameter value is **4**, **5**, or **13**.

If the **si=4**, **5**, or **13** (or **tup**, **isup**) parameter is specified, or the **qbicc** parameter is specified, a value must also be specified for the **opc**, **cics**, and **cice** parameters used to route ISUP messages. The **opc**, **cics**, and **cice** parameters can be specified only if the **si=4**, **5**, or **13** (or **tup**, **isup**) parameter is specified, or if the **qbicc** parameter is specified.

Table A-4 shows valid CIC values for SI types 4, 5, and 13.

The routing key must be in the Routing Key table.

If the **asname** parameter is specified, the AS name must already be defined in the AS table. The AS name and parameters specified for a routing key must use an address format that is valid for the adapter type used by the ASP associations assigned to the AS.

When the **type=full** parameter is specified, the **dpc** and **si** parameters must be specified.

The following types of partial routing keys are supported:

- DPC-SI-OPC (ignore CIC) can be used as a partial match key for CIC- based traffic.
- DPC-SI (ignore all other fields) can be used as a partial match key for CIC- based traffic or SCCP traffic.
- DPC only (ignore all other fields) can be used as a partial match for any type of traffic.
- SI only (ignore all other fields) can be used as a partial match for any type of traffic.

The following card locations are not valid for this command: 1113, 1115, 1117, 1118, and all xy09 and xy10 locations (where x is the frame and y is the shelf). The card must be equipped and in service.

If the **type=default** parameter is specified, then the **dpc**, **si**, **ssn**, **opc**, **cice**, and **cics** parameters cannot be specified.

The **asname** or the **rcontext** parameter must be specified in the command.

Notes

A specific routing key/socket name association can be deleted by specifying a fully qualified routing key (**dpc/dpca**, **si**, **ssn**, and **a sname**). By default, socket associations in the static key entries are deleted using the **dlt-appl-rtkey** command.

The originating point code (**opc**) and destination point code (**dpc**) must not specify a cluster route.

Group codes are required for ITU-N point codes (DPCN/OPCN) when the Duplicate Point Code feature is turned on.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (**s-**).

Output

```
dlt-appl-rtkey:asname=tekelec:si=3:ssn=255:type=full:dpc=2-2-2
rlghncxa03w 08-03-17 15:35:05 EST EAGLE 38.0.0
DLT-APPL-RTKEY: MASP A - COMPLTD
;
```

dlt-as**Delete Application Server**

Use this command to delete an AS.

Keyword: dlt-as

Related Commands: chg-as, ent-as, rept-stat-as, rtrv-as

Command Class: Database Administration

Parameters

NOTE: The aspname parameter is no longer available.

:aname= (mandatory)

Name of the M3UA/SUA SCTP association to be deleted.

Range: ayyyyyyyyyyyyyy

Up to 15 alphanumeric characters; the first character must be a letter.

:asname= (mandatory)

Application Server (AS) name; AS assigned to this routing key.

Range: ayyyyyyyyyyyyyy

Up to 15 alphanumeric characters; the first character must be a letter

Example

```
dlt-as:as=asx:aname=asxp1
```

Dependencies

An AS that is still assigned to a routing key cannot be deleted.

The connection state for the associations assigned to the AS must be **open=no** before the AS can be deleted.

The AS must be defined in the AS table.

The specified associaton name (**aname**) parameter must be defined in the AS.

Notes

None

Output**dlt-as:as=asx:as=asxp1**

```
rlghncxa03w 04-02-17 15:35:05 EST EAGLE 31.3.0
DLT-AS: MASP A - COMPLTD
```

;

dlt-assoc**Delete Association**

Use this command to delete the SCTP associations from the IPAPSOCK table.

Keyword: dlt-assoc

Related Commands: chg-assoc, ent-assoc, rtrv-assoc

Command Class: Database Administration

Parameters

:aname= (mandatory)

Name assigned to the association to be deleted.

Range: ayyyyyyyyyyyyyy

Up to 15 alphanumeric characters; the first character must be a letter

Example**dlt-assoc:aname=tekelec****Dependencies**

The association name (**aname**) must already exist in the IP Socket/Association (IPAPSOCK) table.

An association that exists on any AS cannot be deleted from the IPAPSOCK table.

An AS assigned to a routing key cannot be deleted from the IPAPSOCK table.

The connection state must be **open=no** to delete the association from the IPAPSOCK table.

If the association on an IPSG card is referenced by a signaling link, then the association cannot be deleted.

Notes

None.

Output**dlt-assoc:aname=tekelec**

```
rlghncxa03w 04-02-17 15:35:05 EST EAGLE 31.3.0
DLT-ASSOC: MASP A - COMPLTD
```

;

dlt-card**Delete Card**

Use this command to remove a card entry from the system database.

Keyword: dlt-card

Related Commands: init-card, rept-stat-card, rmv-card, rst-card, rtrv-card

Command Class: Database Administration

Parameters

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Example

dlt-card:loc=1201

Dependencies

The card location slot must be between **1** and **16**, but not **9** or **10**.

The card location cannot be **1113–1118**.

The shelf location must be **11xx**, **12xx**, **13xx**, **21xx**, **22xx**, **23xx**, **31xx**, **32xx**, **33xx**, **41xx**, **42xx**, **43xx**, **51xx**, **52xx**, **53xx**, or **61xx**.

The shelf and card must be equipped.

Before this command can be entered, all TCP/IP data links assigned to the card must be deleted.

Before an E1 card or an E1/T1 MIM card used as an E1 card can be deleted, any E1 interfaces assigned to the card must be deleted

Before an E1/T1 MIM card that is used as a T1 card can be deleted, any T1 interfaces assigned to the card must be deleted.

After the links are deleted, the card must be inhibited before it can be deleted. Use the **inh-card** command to set the card to the OOS-MT-DSBLD state.

Before this command can be entered, SS7 signaling links assigned to the card must be deleted.

Only one database change, action, backup, or restore can be in progress at a time.

Notes

If a SEAS terminal is configured for a location, then entering the **dlt-card** command causes the warning “Invalidating the Terminal data in SEASCFG table” to appear.

Output

```
dlt-card:loc=1201
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
DLT-CARD: MASP A - COMPLTD
;
```

dlt-csl

Delete Common Screening List

Use this command to delete an existing entry from the Common Screening List (CSL). The Common Screening List commands are used to tailor certain types of general screening information to specific features.

Keyword: dlt-csl

Related Commands: chg-csl, ent-csl, rtrv-csl, rtrv-ctrl-feat

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

NOTE: Either the **ds** parameter or the **pc** parameter must be specified in the command. Both parameters cannot be specified in the same command.

:ds= (optional)

Digit string. This parameter specifies a unique string of digits that is used by the specified screening feature.

Range: 1-15 digits

Valid digits are **0-9, a-f, A-F**.

1-15 digits—IDP Screening for Prepaid **insl** list

4 digits—IDP Screening for Prepaid **skts** list

1-15 digits—Prepaid IDP Query Relay **ccnc** list

1-6 digits—Prepaid IDP Query Relay **gta** list

1-10 digits—Prepaid IDP Query Relay **skbcsm** list

1-6 digits—TINP **acscode** and **escscode** lists

1-15 digits—V-Flex **vmprfx** list

:feature= (optional)

Feature name. This parameter specifies the name of the enabled screening feature for which the command is entered.

Either the **pn** parameter or the **feature** parameter must be specified to identify the feature.

Range: *abcdefghijklmnopqrstuvwxyz*

1 alphabetic character followed by up to 24 optional alphanumeric characters, including spaces and special characters, enclosed in double quotation marks (" ").

Enter enough of the feature name to make the name unique if two features begin with the same word or acronym. The following feature names are valid for this command:

- IDP Screening for Prepaid
- Prepaid IDP Query Relay
- TIF Number Portability
- V-Flex

NOTE: If the TINP feature was enabled before upgrading to Release 39.2, then the TIF Number Portability value can be used to access functionality for the TINP feature. If TINP was not enabled prior to upgrade, then the TIF Number Portability value accesses functionality for only the TIF Number Portability feature.

:list= (optional)

The name of the Common Screening List that is associated with the feature.

The **list** parameter must be specified when the feature uses more than one type of Common Screening List.

Range: **gt, skbcsm, ccnc, insl, skts, acscode, escscode, npflgrst, vmprfx**
gt—Global Title List

skbcsm — SK+BCSM List
ccnc — CC+NC List
insl — In Network Subscriber List
skts — Service Key + Teleservice List
acscore — Access Code List
escscore — Escape Code List
npflgrst — NP Flag Reset List
vmpfx — Voice Mail Prefix List

The following screening lists are valid for the indicated features:

- **insl, skts**—IDP Screening for Prepaid
- **ccndc, gt, skbcsm**—Prepaid IDP Query Relay
- **npflgrst**—TIF Number Portability
- **acscore, escscore, npflgrst**—TINP
- **vmpfx**—V-Flex

:pc= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: **pca**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001-005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006-255**.

The point code **000-000-000** is not a valid point code.

:pc/pca/pci/pcn/pcn24= (optional)

Point code. Either the **ds** parameter or a point code parameter must be specified.

:pci= (optional)

ITU international point code with subfields *zone-area-id*.

Range: **0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

The point code **0-000-0** is not a valid point code.

zone—**0-7**

area—**000-255**

id—**0-7**

:pcn= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:pcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

:pn= (optional)

Part Number. The 9-digit "893xxxxxx" part number of the feature for which the command is entered. The **rtrv-ctrl-feat** command description shows the part number in the command output example. Either the **pn** parameter or the **feature** parameter must be specified to identify the feature.

Range: 893000000-893999999

The first 3 digits are **893**. Do not separate the digits with dashes or spaces. The following part numbers are valid for this command:

- **893015501**—IDP Screening for Prepaid
- **893016001**—Prepaid IDP Query Relay
- **893018901**—TIF Number Portability
- **893016701**—V-Flex

NOTE: If the TINP feature was enabled before upgrading to Release 39.2, then part number 893018901 can be used to access functionality for the TINP feature. If TINP was not enabled prior to upgrade, then part number 893018901 accesses functionality for only the TIF Number Portability feature.

Example

```
dlt-csl:feature="IDP Screening for Prepaid":list=insl:ds=246810
```

```
dlt-csl:pn=893015501:list=skts:ds=36ab
```

```
dlt-csl:feature="VFLEX":list=vmprfx:ds=123456789abcdEF
```

Dependencies

An enabled feature must be specified using either a valid part number (**pn**) or feature name (**feature**). The specified feature must use a Common Screening List.

The value specified for the feature parameter must be a valid feature name for a feature that uses a Common Screening List. The feature name must be specified as it appears in the **rtrv-ctrl-feat** command output. Enough of the name must be specified to make the name unique when two features begin with the same word or acronym.

The feature that is specified in the **feature** parameter must be enabled.

The **list** parameter must be specified for features that use more than one type of screening list.

The value specified for the **list** parameter must be valid for the specified screening feature. The following **list** parameter values are valid for the indicated feature:

- **insl, skts**—IDP Screening for Prepaid
- **gt, ccnc, skbcsm**—Prepaid IDP Query Relay
- **npflgrst**—TIF Number Portability
- **acscode, esccode, npflgrst**—TINP
- **vmpfx**—V-Flex

The specified screening list entry must exist in the screening list that is used by the feature.

The following parameters are allowed with the indicated common screening list type:

- **list=gt—ds** parameter
- **list=ccnc—ds** parameter
- **list=skbcsm—ds** parameter
- **list=skts—ds** parameter
- **list=insl—ds** parameter
- **list=acscode—ds** and **p1** parameters
- **list=esccode—ds** parameter
- **list=vmpfx—ds** parameter
- **list=npflgrst—pc/pca/pci/pcn/pcn24** parameter

The **pc** and **ds** parameters cannot be specified together in the command.

Notes

None

Output

```
dlt-csl:pn=893015501:list=insl:ds=123456789abcdEF
tekelecstp 05-08-21 15:18:41 EST EAGLE 34.3.0
INSL List table is (5 of 50) 10% full
DLT-CSL: MASP A - COMPLTD
;

dlt-csl:feature="VFLEX":list=vmpfx:ds=123456789abcdEF
tekelecstp 08-05-23 15:04:03 EST EAGLE 39.0.0
VM Prefix List table is (1 of 100) 1% full
DLT-CSL: MASP A - COMPLTD
;

dlt-csl:pn=893016001:list=skbcsm:ds=9876543210
tekelecstp 08-05-11 15:18:41 EST EAGLE 39.0.0
SK+BCSM List table is (5 of 50) 10% full
DLT-CSL: MASP A - COMPLTD
;
```

dlt-cspc

Delete Concerned Signaling Point Code

Use this command to remove a CSPC or an entire CSPC group.

Keyword: dlt-cspc

Related Commands: ent-cspc, rtrv-cspc

Command Class: Database Administration

Parameters

One, but not both, of these optional parameters must be specified: **all**, **pc/pca/pci/pcn/pcn24**.

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:grp= (mandatory)

Group name

Range: ayyyyyyy

1 alphabetic character followed by up to 7 alphanumeric characters

:all= (optional)

Use this parameter to confirm that all entries for this concerned signaling point code group are to be removed.

Range: yes, no

Default: no

:pc= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: pca

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001–005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006–255.

The point code 000-000-000 is not a valid point code.

:pc/pca/pci/pcn/pcn24= (optional)

Concerned signaling point code.

:pci= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*)

Range: s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

:pcn= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-*

m2-m3-m4-gc). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:pcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

msa—000-255

ssa—000-255

sp—000-255

Example

dlt-cspc:grp=grp01:pc=144-201-001

dlt-cspc:grp=grp01:pci=s-144-201-001

dlt-cspc:grp=grp01:all=yes

Dependencies

A CPC group name must be specified. The specified group name must exist in the database.

The **grp** parameter and the **all=yes** parameter must be entered with no point code parameter, to remove a group and all of its point codes.

If a PC is specified, then the PC network type must match the group network type, and the PC must exist in the specified CPC group. The specified PC is removed from the CPC group.

Either a PC parameter or the **all=yes** parameter must be specified.

The Spare Point Code Support feature must be enabled before the spare PC prefix **s-** can be specified for an ITU-I or ITU-N point code.

A PC parameter cannot be entered together with the **all** parameter in the same command.

The specified CSPC group must not be referred to by any Mate Application entity.

If the Flexible GTT Load Sharing feature is not enabled, a CAUTION is displayed. When the feature is enabled, the command is rejected with message E4534.

Notes

The system issues a warning if a mate application entity could potentially use a group name that is being deleted.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (**s-**).

Output

```

dlt-cspc:grp=grp01:pci=2-2-2
tekelecstp 04-04-08 12:42:47 EST EAGLE 31.3.0
DLT-CSPC: MASP A - COMPLTD
;

```

dlt-dlk**Delete Data Link**

Use this command to remove a TCP/IP data link from the database. The TCP/IP data link is used for the STP LAN feature, connecting the system to a remote host for message processing.

Keyword: dlt-dlk

Related Commands: act-dlk, canc-dlk, ent-dlk, rept-stat-dlk, rtrv-dlk, tst-dlk

Command Class: Database Administration

Parameters

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Example

```
dlt-dlk:loc=1201
```

Dependencies

The ACM is the only card type that is valid for this command.

The shelf and card must be equipped.

The specified ACM must have a TCP/IP data link assigned to it.

The specified ACM and data link must be out-of-service maintenance-disabled (OOS-MT-DSBLD). Enter the **rept-stat-card** and **rept-stat-dlk** commands to verify the state of the ACM and data link.

Notes

None

Output

```

dlt-dlk:loc=1201

rlghncxa03w 04-02-10 11:43:02 EST EAGLE 31.3.0
DLT-DLK: MASP A - COMPLTD
;

```

dlt-dstn**Delete Destination**

Use this command to delete destinations from the Destination entity set after the STP no longer routes to those destinations.

Keyword: dlt-dstn

Related Commands: chg-dstn, chg-rte, dlt-rte, ent-dstn, ent-rte, rept-stat-dstn, rtrv-dstn, rtrv-rte

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:dpc= (mandatory)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: **dPCA**

Range: **p-, 000-255, ***

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

The asterisk value (*) is not valid for the *ni* subfield.

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001–005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006–255**.

The point code **000-000-000** is not a valid point code.

:dpc/dPCA/dpci/dpcn/dpcn24= (mandatory)

Destination point code.

:dpci= (mandatory)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:dpcn= (mandatory)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code (*gc*) must be specified when the ITUDUPPC feature is turned on. The *prefix* indicates a spare point code, private point code, or private and spare point code.

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:dpcn24= (mandatory)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*. The *prefix* subfield indicates a private point code.

Range: **p-**, 000-255
 Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).
prefix—**p-**
msa—000-255
ssa—000-255
sp—000-255

Example

To delete destination 11-222-111:

dlt-dstn:dpc=111-222-111

To delete a network destination:

dlt-dstn:dpc=21-*-*

To delete destination 8112-ge:

dlt-dstn:dpcn=8112-ge

To delete ITU-N 24-bit destination 13-100-10:

dlt-dstn:dpcn24=13-100-10

To delete destination spare point code s-8112:

dlt-dstn:dpcn=s-8112

Dependencies

The destination address must be either a full point code, a cluster point code, or a network destination point code.

The format of the specified **dpcn** parameter must match the format for ITU national point codes that was assigned with the **chg-stpopts:npcfmti** parameter.

The specified destination point code must already exist in the Destination entity set.

The destination cannot have routes assigned to it.

The specified destination point code cannot already be defined as a remote application internal point code (IPC).

The **dpc** parameter must be defined as a destination point code.

The specified destination point code cannot already be defined as an adjacent point code or a secondary adjacent point code.

The specified destination cannot be referenced by SCCP as a destination point codes in the Mate Application table.

The specified destination cannot be referenced by SCCP as a destination point code in the Mated Relay Node (MRN) table.

If the X.25/SS7 Gateway feature is turned on, any X.25 destinations that reference the specified destination must be removed from the database before the specified destination can be removed from the database.

Network routing is valid only if the Network Routing (NRT) feature is turned on.

When using network routing, if the destination point code has a value of * in the *nc* subfield, the *ncm* subfield must also be * (for example, **dpc=21-*-***).

A destination point code that is used as a proxy point code cannot be deleted.

Notes

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (**s-**) and the private and spare point code subtype prefix (**ps-**). All of the point code types support the private (internal) point code subtype prefix (**p-**).

Output

The following example shows the display of the destination memory space accounting command completion response with the NCR, NRT, and CRMD features off (disabled) and all Routes and Routesets features off (disabled):

```
dlt-dstn:dpc=111-222-111
rlghncxa03w 04-08-17 15:35:05 EST EAGLE 31.8.0
Destination table is (10 of 2000) 1% full
Alias table is (8 of 12000) 1% full
DLT-DSTN: MASP A - COMPLTD
;
```

The following example shows the display of the destination memory space accounting command completion response with the NCR, NRT, and CRMD features off (disabled) and the DSTN5000 (5000 Routes) feature on:

```
dlt-dstn:dpc=111-222-111
rlghncxa03w 04-08-18 08:29:15 EST EAGLE 31.8.0
Destination table is (10 of 5000) 1% full
Alias table is (8 of 12000) 1% full
DLT-DSTN: MASP A - COMPLTD
;
```

The following example shows the display of the destination memory space accounting command completion response with one or more of the NCR, NRT, or CRMD features on and the DSTN5000 (5000 Routes) feature on:

```
dlt-dstn:dpc=111-222-111
rlghncxa03w 04-08-18 08:29:15 EST EAGLE 31.8.0
DESTINATION ENTRIES ALLOCATED: 5000
FULL DPC(s): 9
NETWORK DPC(s): 0
CLUSTER DPC(s): 1
TOTAL DPC(s): 10
CAPACITY (% FULL): 1%
ALIASES ALLOCATED: 12000
ALIASES USED: 8
CAPACITY (% FULL): 1%
X-LIST ENTRIES ALLOCATED: 500
DLT-DSTN: MASP A - COMPLTD
;
```

The following example shows the display of the destination memory space accounting command completion response with the NCR, NRT, and CRMD features off (disabled) and the 6000 Routesets feature on:

```
dlt-dstn:dpc=111-222-111
rlghncxa03w 04-08-18 08:29:15 EST EAGLE 31.8.0
Destination table is (60 of 6000) 1% full
Alias table is (8 of 12000) 1% full
DLT-DSTN: MASP A - COMPLTD
;
```

The following example shows the display of the destination memory space accounting command completion response with one or more of the NCR, NRT, or CRMD features on and the 6000 Routesets feature on:

```
dlt-dstn:dpc=111-222-111
rlghncxa03w 04-08-18 08:29:15 EST EAGLE 31.8.0
DESTINATION ENTRIES ALLOCATED: 6000
FULL DPC(s): 46
```

```

        NETWORK DPC(s):           1
        CLUSTER DPC(s):           1
        TOTAL DPC(s):             12
        CAPACITY (% FULL):         1%
    ALIASES ALLOCATED:             12000
        ALIASES USED:              8
        CAPACITY (% FULL):         1%
    X-LIST ENTRIES ALLOCATED:      500
    DLT-DSTN: MASP A - COMPLTD
;

```

The following example shows the display of the destination memory space accounting command completion response with the NCR, NRT, and CRMD features off (disabled). When the 7000 Routesets quantity feature is on, the Destination table line shows "...of 7000" as it appears in the example. When the 8000 Routesets quantity feature is on, the Destination table line shows "...of 8000."

dlt-dstn:dpc=111-222-111

```

    rlgncxa03w 04-08-18 08:29:15 EST  EAGLE 31.8.0
    Destination table is (10 of 7000) 1% full
    Alias table is (8 of 8000) 1% full
    DLT-DSTN: MASP A - COMPLTD
;

```

The following example shows the display of the destination memory space accounting command completion response with one or more of the NCR, NRT, or CRMD features on. When the 8000 Routesets quantity feature is on, the DESTINATION ENTRIES ALLOCATED line shows "8000" as it appears in the example. When the 7000 Routesets quantity feature is on, the DESTINATION ENTRIES ALLOCATED line shows "7000."

dlt-dstn:dpc=111-222-111

```

    rlgncxa03w 04-08-18 08:29:15 EST  EAGLE 31.8.0
    DESTINATION ENTRIES ALLOCATED:  8000
        FULL DPC(s):                 46
        NETWORK DPC(s):               1
        CLUSTER DPC(s):               1
        TOTAL DPC(s):                 12
        CAPACITY (% FULL):             1%
    ALIASES ALLOCATED:               8000
        ALIASES USED:                  8
        CAPACITY (% FULL):             1%
    X-LIST ENTRIES ALLOCATED:        500
    DLT-DSTN: MASP A - COMPLTD
;

```

The following example shows the display of the destination memory space accounting command completion response without anyone of the NCR, NRT, or CRMD features on. In this example a proxy destination is being deleted

dlt-dstn:dpc=11-11-11

```

    tekelecstp 07-03-07 16:34:32 EST  EAGLE 37.5.0
    Destination table is (11 of 2000) 1% full
    Alias table is (0 of 12000) 0% full
    PPC table is (1 of 10) 10% full
    DLT-DSTN: MASP A - COMPLTD
;

```

dlt-e1

Delete E1 Interface

Use this command to delete an interface for a 2-port E1 card, or for an E1/T1 MIM card, an HC MIM card, or an E5-E1T1 card used as an E1 card. The E1 port number on the card and the E1 card location in the EAGLE 5 ISS must be specified.

On an HC MIM card or an E5-E1T1 card, E1 ports 1, 3, 5, and 7 (master ports) can be independently channel bridged with their adjacent even-numbered (slave) ports 2, 4, 6, and 8 to allow non-signaling data pass-through. The slave port interface is automatically deleted with the command that deletes its master port interface.

Keyword: **dlt-e1**

Related Commands: **chg-e1, ent-e1, rtrv-e1, tst-e1**

Command Class: Database Administration

Parameters

:e1port= (mandatory)

E1 port number. The value must be an E1 port that has already been configured on the specified E1 card.

Range: **1-8**

Ports 3 - 8 can be specified only for HC MIM cards and E5-E1T1 cards.

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

Example

```
dlt-e1:loc=1205:e1port=1
```

```
dlt-e1:loc=1205:e1port=2
```

Dependencies

The specified card location (**loc** parameter) must be equipped.

The card in the specified card location (**loc** parameter) must be a **lime1** card type.

The port specified by the **e1port** parameter must be already equipped with an E1 interface.

All signaling links providing timeslots serviced by the specified E1 interface must be deleted before the E1 interface can be deleted. See the **dlt-slk** command to delete the signaling links providing the timeslots.

A channel bridged slave (even-numbered) port on an HC-MIM card or an E5-E1T1 card cannot be specified in the **e1port** parameter. To delete channel bridged port interfaces, specify the master (odd-numbered) port in the **e1port** parameter. The slave port interface is automatically deleted when its master port interface is deleted.

The following card locations cannot be specified in the **loc** parameter: 1113, 1114, 1115, 1116, 1117, 1118 (OAM, TDM, and MDAL cards), and xy09 and xy10 (x is the frame, y is the shelf for HMUX and HIPR cards).

Notes

None.

Output

```
dlt-e1:loc=1205:e1port=1
```

```
rlghncxa03w 04-02-20 09:07:58 EST EAGLE 31.3.0
```

```
dlt-E1: MASP A - COMPLTD
```

```
;
```

dlt-frm-pwr**dlt-frm-pwr**

Use this command to delete the existing power threshold entry from the Frame Power Threshold table for the specified frame. After the power threshold value is deleted, the default power threshold value of 30 Amps is assumed for the specified frame.

Keyword: **dlt-frm-pwr**

Related Commands: **chg-frm-pwr, ent-frm-pwr, rtrv-frm-pwr, rtrv-stp**

Command Class: Database Administration

Parameters

:frm= (mandatory)

Frame ID

Range: **cf00, ef00, ef01, ef02, ef03, ef04**

cf00 — Control frame

ef00 — First extension frame

ef01 — Second extension frame

ef02 — Third extension frame

ef03 — Fourth extension frame

ef04 — Fifth extension frame

Example

Delete the frame power threshold value for the third extension frame.

dlt-frm-pwr:frm=ef02

Dependencies

A power threshold value must already be provisioned for the specified frame.

Output

dlt-frm-pwr:frm=ef02

tekelecstp 06-04-11 16:07:11 EST EAGLE 35.0.0

FRAME POWER THRESHOLD table is (3 of 10) 30% full

DLT-FRM-PWR: MASP A - COMPLTD

;

dlt-fts**Delete Entry from the File Transfer Area**

This command removes a file from the file transfer area (FTA).

Keyword: **dlt-fts**

Related Commands: **act-file-trns, copy-fts, disp-disk-dir**

Command Class: System Maintenance

Parameters

NOTE: At least one of these parameters but not both, must be specified: all, file.

:all= (optional)

This parameter allows all files to be removed from the FTA.

Range: **yes, no**

Default: **no**

:file= (optional)

The name of the file to be removed.

Range:	<i>zzzzzzzzzzzzzzzzzzzzzzzzzzzzzzzzzz</i> The name of the file with its extension.
Default:	No filename is specified.

:force= (optional)

This parameter is required to delete the last file in the FTA. In such cases, the value must be set to **force=yes**.

Range: yes, no
Default: no

:loc= (optional)

The card location of the fixed disk containing the FTA.

Range: 1114, 1116
(TDM)

Default: The location of the active TDM

Example

```
dlt-fts:loc=1114:file="CAM.ELF"
dlt-fts:loc=1114:file="CAM.ELF":force=yes
dlt-fts:loc=1116:all=yes
```

Dependencies

Removing an individual file only frees up that file name for another transfer of that file.

The **all=yes** parameter must be specified when a specific filename is not supplied.

The **all=yes** parameter not only removes all files from the FTA, but frees up the space in the FTA.

When using DOS file names, if the file name contains a special character such as an underscore (_) or begins with a numeric, the file name must be in quotes (" "), for example, "92_name.ext".

Removing an individual file only frees up that file name for another transfer of that file.

The **force=yes** parameter must be specified to remove the last file in the FTA.

The **loc** parameter must specify a TDM card.

A specific filename and **all=yes** may not be specified at the same time.

Only one file transfer can be active at a time.

TDM and E5-TDM cards cannot be installed in the same system.

Notes

None

Output

```
dlt-fta:file=oam.elf:loc=1114
    rlgncxa03w 04-02-05 15:31:59 EST  EAGLE 31.3.0
    File OAM.ELF deleted from File Transfer Area on fixed disk 1114.
;
dlt-fta:all=yes:loc=116
    rlgncxa03w 04-02-05 15:33:32 EST  EAGLE 31.3.0
    All files deleted from File Transfer Area on fixed disk 1116.
;
```

dlt-ftp-serv

Delete FTP Server Entry

Use this command to delete an entry for an FTP server from the FTP Server table.

Keyword: dlt-ftp-serv

Related Commands: chg-ftp-serv, ent-ftp-serv, rtrv-ftp-serv

Command Class: Database Administration

Parameters

:app= (mandatory)

Application. This parameter specifies the FTP Client application at the EAGLE 5 ISS STP that interfaces with the FTP Server.

Range: **meas, user, db, dist**

meas — Measurements Platform application

user — FTP-based Table Retrieve Application (FTRA)

db — Database Backup\Restore application

dist — EAGLE 5 ISS Software Release distribution application

:ipaddr= (mandatory)

IP Address of the FTP Server.

Range: 4 numbers separated by dots, with each number in the range of 0-255.

Example

dlt-ftp-serv:app=meas:ipaddr=1.255.0.102

Dependencies

Both the **app** and **ipaddr** parameters must be entered in the command to delete an FTP server.

An entry must already exist in the FTP Server table for this application at the specified IP address.

The **app** parameter must specify an application that uses the FTP Support feature.

The **ipaddr** parameter must specify a valid IP address for the FTP server.

Notes

None

Output

dlt-ftp-serv:app=meas:ipaddr=1.255.0.102

```
rlghncxa03w 04-02-20 09:07:58 EST EAGLE 31.3.0
FTP SERV table is (1 of 10) 10% full
DLT-FTP-SERV: MASP A - COMPLTD
```

;

dlt-ftp-serv:app=user:ipaddr=1.255.0.102

```
rlghncxa03w 04-02-20 09:07:58 EST EAGLE 31.3.0
FTP SERV table is (0 of 10) 0% full
DLT-FTP-SERV: MASP A - COMPLTD
```

;

dlt-gserv-data

Delete G-Port SRI Query for Prepaid Service Data

Use this command to delete translation type, originating point code, or global title address data from the GSERV table. These values are used to determine whether a Send Routing Information (SRI) request should receive G-Port SRI Query for Prepaid Service or normal G-Port SRI service.

Keyword: dlt-gserv-data

Related Commands: ent-gserv-data, rtrv-gserv-data

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:gta= (optional)

Global title address. Use this parameter to specify a calling party (CgPA) global title address.

Range: 1-21 digits

:opc= (optional)

ANSI originating point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: **opca**

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001-005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006-255**.

The point code **000-000-000** is not a valid point code.

:opc/opca/opci/opcn/opcn24= (optional)

Originating point code. Use these parameters to specify message transfer part (MTP) originating point codes.

:opci= (optional)

ITU international originating point code with subfields *zone-area-id*.

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps-

zone—0-7

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

:opcn= (optional)

ITU national originating point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:opc24= (optional)

24-bit ITU national originating point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:tt= (optional)

Translation type. Use this parameter to specify a called party (CdPA) translation type.

Range: **0-255**

Example

```
dlt-gserv-data:tt=26
```

```
dlt-gserv-data:opc=1-1-1
```

```
dlt-gserv-data:gta=9194605500
```

Dependencies

The specified translation type (**tt** parameter), originating point code (**opc/opca/opci/opcn/opcn24** parameter), or global title address (**gta** parameter) must exist in the GSERV table before this command can be entered.

The G-Port SRI Query for Prepaid feature must be enabled before this command can be entered.

The **tt**, **opc**, and **gta** parameters cannot be specified within the same command.

The G-Port feature must be enabled before this command can be entered.

Output

```
dlt-gserv-data:tt=26
```

```
mystp 06-07-20 09:04:21 EST EAGLE 35.2.0
```

```
DLT-GSERV-DATA: MASP A - CMPLTD
```

```
;
```

dlt-gsmmap-scrn

Delete GSM MAP Screening Entry

Use this command to delete the GSM Map Screening CgPA and CdPA entries that are used to filter out or allow SCCP messages containing Map Op-Codes, CGPA GTA+NPV+NAIV, CDPA GTA+NPV+NAIV, and forbidden parameters.

Keyword: **dlt-gsmmap-scrn**

Related Commands: **chg-gsmmap-scrn**, **ent-gsmmap-scrn**, **rtrv-gsmmap-scrn**

Command Class: Database Administration

Parameters

:cgsr= (mandatory)

CgPA Screening Reference.

Range: *ayyy*

1 alphabetic character followed by up to 3 optional alphanumeric characters

:opname= (mandatory)

The user-defined name for the operation code. The **opname** value references the operation code (**opcode**) defined with the **ent-gsms-opcode** command.

Range: *ayyyyyyy*
Up to 8 alphanumeric characters

:cdsr= (optional)

CdPA Screening Reference.

Range: *ayyy*
1 alphabetic character followed by up to 3 optional alphanumeric characters

Example

```
dlt-gsmmap-scrn:opname=xyz:cgsr=fela:cdsr=fall
```

```
dlt-gsmmap-scrn:opname=xyz:cgsr=fela
```

Dependencies

The GSM Map Screening feature (see the **enable-ctrl-feat** command) must be enabled before this command can be entered.

The Enhanced GSM Map Screening (EGMS) feature must be enabled before the **cdsr** parameter can be specified.

The specified **cgsr** parameter value must exist in the database.

The specified **cdsr** parameter value must exist in the database.

A **cgpa** entry cannot be deleted if it is referred to by **cdpa** entries.

The specified **opname** parameter value must exist in the GSM Map Op-Code table.

Notes

Unlike GTT (Global Title Translation) entries, the GSM MAP screening commands do not support splits of ranges during deletion or changes of entries.

Output

```
dlt-gsmmap-scrn:opname=xyz:cgsr=fela:cdsr=fall
rlghncxa03w 04-02-29 08:51:12 EST EAGLE 31.4.0
GSM Map Screening table is (1 of 4000) 1% full
DLT-GSM MAP-SCRN: MASP A - COMPLTD
;
```

dlt-gsms-opcode

Delete GSM MAP Screening Operation Code

Use this command to delete GSM (Global System for Mobile Telecommunication) MAP (Mobile Application Part) screening operation codes and the default screening action for that operation code.

Keyword: **dlt-gsms-opcode**

Related Commands: **chg-gsms-opcode**, **ent-gsms-opcode**, **rtrv-gsms-opcode**

Command Class: Database Administration

Parameters

:opname= (mandatory)

The user-defined name for the operation code. The **opname** value is defined with the **ent-gsms-opcode** command.

Range: *ayyyyyyy*
Up to 8 alphanumeric characters

Example

```
dlt-gsms-opcode:opname=ati
```

Dependencies

The reserved word **none** cannot be specified as a value for the **opname** parameter.

The value specified for the **opname** parameter must exist in the GSM MAP Op-Code table.

The **opname** value being deleted cannot be referenced in the GSM MAP Screening table.

The GSM Map Screening feature must be enabled (see the **enable-ctrl-feat** command) before this command can be entered.

Notes

None

Output

```
dlt-gsms-opcode:opname=ati
rlghncxa03w 06-02-29 08:50:12 EST EAGLE 35.0.0
DLT-GSMS-OPCODE: MASP A - COMPLTD
;
```

dlt-gsmssn-scrn**Delete GSM Subsystem Number Screening Entry**

Use this command to delete an SSN (subsystem number) from the GSM (Global System for Mobile Telecommunication) SSN screening table.

Keyword: **dlt-gsmssn-scrn**

Related Commands: **ent-gsmssn-scrn**, **rtrv-gsmssn-scrn**

Command Class: Database Administration

Parameters

:ssn= (mandatory)

Subsystem number.

Range: **000-255**

:type= (mandatory)

Subsystem type.

Range: **orig, dest**

orig— The origination SSN

dest— The destination SSN

Example

This example deletes a destination subsystem of 255 from the GMS SSN screening table:

```
dlt-gsmssn-scrn:ssn=255:type=dest
```

Dependencies

The GSM Map Screening feature must be enabled (see the **enable-ctrl-feat** command) before this command can be entered.

A value for the **ssn/type** parameter combination must be specified that exists in the GSM SSN screening table.

Notes

None

Output

dlt-gsmssn-scrn:ssn=255:type=dest

```
rlghncxa03w 04-02-20 09:04:21 EST EAGLE 31.3.0
DLT-GSMSSN-SCRN: MASP A - COMPLTD
```

;

dlt-gta**Delete Global Title Address Information**

Use this command to delete the GTA (global title address) information applicable to a global title selector combination.

This command deletes the routing of SCCP messages for specified global title addresses from designated destinations and their subsystem numbers.

Keyword: dlt-gta

Related Commands: chg-gta, ent-gta, rtrv-gta

Command Class: Database Administration

Parameters

:gttsn= (mandatory)

GTT set name. A GTT set is an entity to which global title addresses and selectors are assigned.

Range: ayyyyyyyy

1 leading alphabetic and up to 8 following alphanumeric characters.

:cgpc= (optional)

ANSI CgPA point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Synonym: cgpa

Range: 000-255, *

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

The asterisk (*) value is not valid for the *ni* subfield.

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001-005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006-255.

When **chg-sid:pctype=ansi** is specified, *ni*-*- is valid if *ni* = 006-255.

The point code 000-000-000 is not a valid point code.

:cgpci= (optional)

ITU international CgPA point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

:cgpcn= (optional)

ITU national CgPA point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:cgpcn24= (optional)

24-bit ITU national CgPA point code with subfields main signaling *area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:cgssn= (optional)

Starting CgPA subsystem number.

Range: **0-255**

:ecgssn= (optional)

Ending CgPA subsystem number.

Range: **0-255**

:egta= (optional)

End global title address. This parameter specifies the end of a range of global title digits.

Range: **1-21 digits**

If the Hex Digit Support for GTT feature is not enabled and on, the range is 1 - 21 decimal digits; valid digits are **0-9**.

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are **0-9, a-f, A-F**.

Default: Same as the specified **gta** value

:gta= (optional)

Global title address. This parameter specifies the beginning of a range of global title digits.

Range: **1-21 digits**

If the Hex Digit Support for GTT feature is not enabled and on, the range is 1 - 21 decimal digits; valid digits are **0-9**.

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are **0-9, a-f, A-F**.

:opc= (optional)

ANSI originating point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Synonym: **opca**

Range: 000-255, *

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

The asterisk (*) value is not valid for the *ni* subfield.

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001-005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006-255.

When **chg-sid:pctype=ansi** is specified, *ni*-*-* is valid if *ni* = 006-255.

The point code 000-000-000 is not a valid point code.

:opci= (optional)

ITU international originating point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

:opcni= (optional)

ITU national originating point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npfcmnti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: s-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:opcni24= (optional)

24-bit ITU national originating point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

Example

```

dlt-
gta:gttsn=setcdgta:gta=123456789012345678901:egta=223456789012345
678901

dlt-gta:gttsn=t800:gta=919461:egta=919468

dlt-
gta:gttsn=setcggta:gta=323456789012345678901:egta=423456789012345
678901

dlt-gta:gttsn=setcggpc:cgpc=001-001-001

dlt-gta:gttsn=setopc:opca=002-001-001

dlt-gta:gttsn=setcgssn:cgssn=100:ecgssn=200

```

The following example specifies hexadecimal digits for the gta and egta parameters.

```
dlt-gta:gttsn=set1:gta=abcd:egta=abce
```

Dependencies

The EGTT feature must be turned on before this command can be entered.

The **gttsn** parameter must be specified, may not have a value of **none**, and must match an existing **gttsn**.

The length of the specified **gta** parameter must match the number of digits provisioned for the specified GTT set (**gttsn**). If the VGTT (variable length GTT) feature is turned on, you can have up to 10 GTA lengths per GTT set. When you enter the **ent-gta** command to create entries, the software keeps track of the lengths and allows only ten different lengths. The global title address specified for the GTT set must have the same number of digits as an existing GTA.

The specified **gta/egta** range must exist for the specified GTT set in the STP active database. While an exact match is not required, you cannot specify an overlap with another range. If the range overlaps, an error is generated that displays a list of overlapped global title addresses. An example follows that shows what happens when the user attempts to enter a global title address range (such as 8005550000 to 8005559999) that overlaps an existing range. The overlapping links must match. If they do not, the error message displays the list of overlapped global title addresses:

The following GTA ranges overlap the input GTA range

```

START GTA          END GTA
8005550000          8005551999
8005552000          8005553999
8005554000          8005555999
DLT-GTA: MASP A - Command Aborted

```

If the **egta** parameter is specified, the **gta** and **egta** value must be the same length and the **egta** value must be greater than the **gta** value.

The GTT table cannot be full in case a delete command causes a split requiring more entries to be added.

Either the **cgpc/cgpcac/cgpci/cgpcn/cgpcn24**, **opc/opca/opci/opcn/opcn24**, **cgssn**, or **gta** parameter must be specified.

If specified, the **ecgssn** parameter must be greater than the **cgssn** parameter.

The **cgssn** parameter cannot be specified as a wildcard (*).

The Origin-based SCCP Routing feature must be enabled when specifying the **cgpc/cgpcac/cgpci/cgpcn/cgpcn24**, **opc/opca/opci/opcn/opcn24**, or **(e)cgssn** parameters.

The **gta** parameter must be specified if the GTTSN set type has a value of **cdgta** or **cggta**, and cannot be specified for other set types.

The **cgpc/cgpca/cgpci/cgpcn/cgpcn24** parameter must be specified if the GTTSN set type has a value of **cgpc**, and cannot be specified for other set types.

The **opc/opca/opci/opcn/opcn24** parameter must be specified if the GTTSN set type has a value of **opc**, and cannot be specified for other set types.

The **cgssn** parameter must be specified if the GTTSN set type has a value of **cgssn**, and cannot be specified for other set types.

If the specified GTT Set is an ANSI set, the **cgpc/cgpca** and **opc/opca** parameters must be valid ANSI point codes. If the specified GTT Set is an ITU set, the **cgpci/cgpcn/cgpcn24** and **opci/opcn/opcn24** parameters must be valid ITU point codes.

The range specified by the **cgssn** and **ecgssn** parameters must exist for the specified GTT set. An exact match is not required.

The point code specified by the **cgpc** or **opc** parameter must exist.

The range specified by the **cgssn** and **ecgssn** parameters cannot overlap a currently existing range for the specified GTT set.

The **cgpc**, **cgssn**, **gta**, and **opc** parameters are mutually exclusive. Each of these parameters must be specified individually in separate commands.

The Hex Digit Support for GTT feature must be enabled and on before hexadecimal digits can be specified for the **gta** or **egta** parameters.

The value specified for the **gttsn** parameter must match the name of an existing GTT Set.

Notes

When the EGTT feature is turned on, the GTT Selector (**ent/chg/dlt/rtrv-gttset**), GTT Set (**ent/dlt/rtrv-gttset**), and GTA (**ent/chg/dlt/rtrv-gta**) commands replace the Translation Type (**ent/dlt/rtrv-tt**) and Global Title Translation (**ent/chg/dlt/rtrv-gtt**) commands. All data previously provisioned with these commands is maintained.

If a GTT is being deleted or changed and the point code (**dpc** or **rte**) is not found in the route table (unless the point code is the STP's true point code), the following message is displayed in the terminal scroll area:

NOTICE: No DPC and/or RTE found for GTT being deleted or changed.

The above situation may occur for the following reasons:

A database was upgraded from a release prior to EAGLE 5 ISS Release 27.1 or IP⁷ Secure Gateway Release 3.0 when GTT entries were not linked to the route table and the deletion of the **dpc** was permitted. The GTT referenced a **dpc/rte** that was deleted, and the enforce reference counts between the GTT and route tables were not updated.

- A serious problem occurred in which the reference count rules were not enforced and a **dpc** and/or **rte** were deleted while being referenced by a GTT entry. This indicates a software error; notify the Customer Care Center at (888) FOR-TKLC.

Output

dlt-gta:gttsn=libd:gta=9195554321

```
rlghncxa03w 04-02-20 09:04:21 EST EAGLE 31.3.0
DLT-GTA: MASP A - CMPLTD
```

;

dlt-gtcnv**Delete Global Title Conversion**

Use this command to delete entries from the Default Global Title Conversion table. The particular entry to be deleted is identified by the direction in conjunction with the TTA or TTI, or with the TTI, NP, and NAI.

Keyword: **dlt-gtcnv**

Related Commands: **chg-gtcnv, ent-gtcnv, rtrv-gtcnv**

Command Class: Database Administration

Parameters

:dir= (mandatory)

Direction of conversion.

Range: **atoi, itoa, both**

atoi— ANSI to ITU conversion

itoa— ITU to ANSI conversion

both— Conversion in both directions

:nai= (optional)

Nature of Address Indicator. This parameter is mandatory when **gtixlat=24** is specified, and cannot be specified when **gtixlat=22** is specified.

Range: **0-63 ***

Default: No change to current value

:np= (optional)

Numbering Plan. This parameter is mandatory when **gtixlat=24** is specified, and cannot be specified when **gtixlat=22** is specified.

Range: **0-15 ***

Default: No change to current value

:tta= (optional)

ANSI translation type. This parameter is mandatory when **dir=atoi** or **dir=both** is specified.

Range: **0-255 ***

Default: No change to current value

:tti= (optional)

ITU translation type. This parameter is required when **dir=atoi** is specified.

Range: **0-255 ***

Default: No change to current value

Example

The following example deletes an ANSI-to-ITU entry using the TTA of 10 to identify the entry.

dlt-gtcnv:dir=atoi:tta=10

The following example deletes an ANSI-to-ITU entry using the TTA of 11 to identify the entry.

dlt-gtcnv:dir=atoi:tta=11

The following example deletes a ITU-to-ANSI entry using the TTI of 7, NAI of 8, and NP of 6 to identify the entry.

dlt-gtcnv:dir=itoa:tti=7:nai=8:np=6

The following example deletes a BOTH (ANSI <-> ITU) entry using the TTI of 9 and TTA of 12 to identify the entry.

dlt-gtcnv:dir=both:tta=12:tti=9

The following example deletes a BOTH (ANSI <-> ITU) entry using the TTI of 7, NAI of 6, NP of 4, and TTA of 12 to identify the entry.

dlt-gtcnv:dir=both:tta=12:tti=7:np=4:nai=6

The following example deletes an ANSI-to-ITU default entry using the TTA of * to identify the entry.

dlt-gtcnv:dir=atoi:tta=*

The following example deletes an ITU-to-ANSI default entry using the TTI of *, NAI of * and NP of * to identify the entry.

dlt-gtcnv:dir=ittoa:tti=*:nai=*:np=*

Dependencies

The ANSI-ITU-China SCCP Conversion feature must be enabled before this command can be entered.

The entry that is to be deleted must exist in the database.

When **dir=atoi** is specified, the **tta** parameter must be specified.

When **dir=atoi** is specified, the **tta** parameter must be specified.

When **dir=atoi** is specified, **tti**, **nai**, and **np** parameters cannot be specified.

When **dir=ittoa** is specified, the **tti=*** parameter must be specified.

When **dir=ittoa** is specified, **nai** and **np** parameter values must be * if specified.

When **dir=both** is specified, at least the **tta** and **tti** parameters must be specified.

When **dir=both** is specified, asterisk values for other parameters cannot be specified.

If specified, the **nai** and **np** parameters must be specified together in the command.

When **gtixlat=22** and **dir=ittoa** are specified, asterisk entries cannot be specified. Specify **gtixlat=24** when **dir=ittoa** is specified and asterisk entries are specified.

Notes

To delete an ANSI-to-ITU entry, specify the direction (**dir**) and the TTA.

To delete an ITU-to-ANSI entry with a **gtixlat** of 22, specify the direction (**dir**) and the TTI.

To delete an ITU-to-ANSI entry with a **gtixlat** of 24, specify the direction (**dir**), TTI, NAI and NP.

To delete a BOTH (ANSI <-> ITU) entry with a **gtixlat** of 22, specify the direction (**dir**), TTA and TTI.

To delete a BOTH (ANSI <-> ITU) entry with a **gtixlat** of 24, specify the direction (**dir**), TTA, TTI, NP and NAI.

Output

dlt-gtcnv:dir=both:tta=12:tti=9

```
rlghncxa03w 03-03-18 08:50:12 EST EAGLE 31.3.0
DLT-GTCNV: MASP A - COMPLTD
```

;

dlt-gtt

Delete Global Title Translation

Use this command to remove the routing of messages for specified global title addresses from designated destinations and their subsystem numbers.

If the EGTT (Enhanced Global Title Translation) feature is turned on, the system will no longer accept GTT (Global Title Translation) and TT (Translation Type) commands. Refer to the new command sets that replace the GTT and TT commands:

- GTT Selector commands (**ent/chg/dlt/rtrv-gttset**)
- GTT Set commands (**ent/dlt/rtrv-gttset**)
- GTA commands (**ent/chg/dlt/rtrv-gta**).

Keyword: dlt-gtt

Related Commands: chg-gtt, ent-gtt, rtrv-gtt

Command Class: Database Administration

Parameters

At least one of these optional parameters must be specified: **ttn**, **type/typea/typei/typen/typen24**.

:gta= (mandatory)

Global title start address. This parameter specifies the beginning of a range of global title digits.

Range: 1-21 digits

If the Hex Digit Support for GTT feature is not enabled and on, the range is 1 - 21 decimal digits; valid digits are **0-9**.

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are **0-9, a-f, A-F**.

:egta= (optional)

Global title end address. This parameter specifies the end of a range of global title digits.

Range: 1-21 digits

If the Hex Digit Support for GTT feature is not enabled and on, the range is 1 - 21 decimal digits; valid digits are **0-9**.

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are **0-9, a-f, A-F**.

Default: **egta** same as **gta**

:ttn= (optional)

Translation type name.

Range: ayyyyyyy

1 alphabetic character followed by up to 7 alphanumeric characters

Default: No translation name is given

:type/typea/typei/typen/typen24= (optional)

Translation type identifies the translation type and network type. This parameter is the decimal representation of the 1-byte field used in SS7.

The **type** and **typea** parameters specify an ANSI network.

The **typei** parameter specifies an ITU-international network.

The **typen** parameter specifies an ITU-national network.

The **typen24** parameter specifies a 24-bit ITU-national network.

A translation type numeric value may be entered as ANSI type (**type** or **typea**) and also as an ITU type (**typei** or **typen**). However, they are separate entities.

The point code domain translation types for GTT are handled by the EAGLE 5 ISS protocol processing as either ANSI or ITU; therefore, ITU applies to ITU-I, ITU-I Spare, ITU-N, and ITU-N Spare. ITU-I includes ITU-I Spare, and ITU-N includes ITU-N Spare.

Range: 0-255
Default: No translation type is specified

Example

dlt-gtt:type=252:ttn=lidb9:gta=408908:egta=408988

dlt-gtt:gta=919833:typen24=4

The following example specifies hexadecimal digits for the gta and egta parameters.

dlt-gtt:ttn=set1:gta=abcd123456789a:egta=abcE123456789F

Dependencies

This EGTT feature must be turned on before this command can be entered.

If translation type is specified, it must exist in the database.

If the **ttn** parameter is specified, the name must correspond to a translation type entry.

If both **ttn** and **type** are specified, **ttn** must correspond to the given translation type.

The **type** or **ttn** parameter must be specified.

The **gta** length must equal the number of digits specified by the translation type. If the VGTT (variable length GTT) feature is turned on, you can have up to 10 GTA lengths per translation type. When you enter the **ent-gtt** command to create entries, the software keeps track of the lengths and allows only ten different lengths. The global title address specified for the translation type must then have the same number of digits as an existing GTA.

The global title address range as expressed by the **gta** and **egta** parameters must already exist in the global title translation.

The range, as specified by the **gta** and the **egta**, must be exactly the same as a current entry or be contained within an existing range in the GTT data for the specified translation type. If the range overlaps, an error is generated that displays a list of overlapped global title addresses. An example follows that shows what happens when the user attempts to delete a global title address range (such as 8005550000 to 8005559999) that overlaps an existing range. The overlapping links must match. If they do not, the error message displays the list of overlapped global title addresses:

The following GTA ranges overlap the input GTA range

START GTA	END GTA
8005550000	8005551999
8005552000	8005553999
8005554000	8005555999

DLT-GTT: MASP A - Command Aborted

If the address range as specified by the start and end global title addresses does not exactly match the existing range, the range is split. All addresses in the existing range that are outside of the specified range are used to create new ranges. The specified range is deleted.

The Hex Digit Support for GTT feature must be enabled and on before hexadecimal digits can be specified for the **gta** or **egta** parameters.

If the **egta** parameter is specified, the value must be greater than the value specified for the **gta** parameter.

If a national Translation Type (**TYPEN**) is specified, the Translation Type must exist in the STP's active database.

If an International Translation Type (**TYPEI**) is specified, the Translation Type must exist in the STP's active database.

The **tt** parameter cannot be specified with a value that has been defined as an alias for another translation type.

The length of the specified GTA must match the number of digits provisioned for the specified Translation Type or the Translation Type referenced by the specified Translation Type Name, unless the PVGTT or VGTT feature is on. In the case the PVGTT feature is on the length of the specified GTA and EGTA can be less than or equal to the number of digits provisioned for the corresponding TT. In the case the VGTT feature is on, up to 10 different lengths can be provisioned per TT.

The **gta** length is not defined for the specified translation type entity.

The GTT table cannot be full.

Output

```
dlt-gtt:type=252:tt=1ldb9:gta=408908:egta=408988
rlghncxa03w 04-01-07 11:43:07 EST EAGLE 31.3.0
DLT-GTT: MASP A - COMPLTD
;
```

dlt-gttset

Delete GTT Selectors

Use this command to delete an applicable global title translation (GTT) selector.

Keyword: dlt-gttset

Related Commands: chg-gttset, ent-gttset, rtrv-gttset

Command Class: Database Administration

Parameters

:gti/gtia/gtii/gtin/gtin24= (mandatory)

Global title indicator. For all EGTT selector commands, the domain is defined as **gti** and **gtia** (ANSI), **gtii** (ITU international), **gtin** (ITU national), and **gtin24** (24-bit ITU national).

For the selector commands, **gti** and **gtia** are equivalent; **gtii** and **gtin/gtin24** are mutually exclusive because the EGTT database does not distinguish between ITU national and ITU international translations. This means that while ITU-I and ITU-N selectors are stored separately, two separate ITU-I and ITU-N entries with the same selector values cannot exist. For example, if an entry with **gtii=2** and **tt=4** already exists, an entry of **gtin=2** and **tt=4** cannot be entered

Range: Supported value for ANSI: **gti=2** and **gtia=2**
Supported values for ITU: **gtii=2, 4** and **gtin/gtin24=2, 4**

:tt= (mandatory)

Translation type.

Range: 0-255

:nai= (optional)

Nature of Address indicator. The Nature of Address indicator can be specified by supplying either a mnemonic value (**nai** parameter) or an explicit numeric value (**naiv** parameter). Either the **nai** parameter or the **naiv** parameter, but not both, can be specified in the command. Table A-5 shows the mapping between the **naiv** and the **nai** parameter values.

Range: sub, rsvd, natl, intl, dflt

:naiv= (optional)

Nature of Address indicator value. The Nature of Address indicator can be specified by supplying either a mnemonic value (**nai** parameter) or an explicit numeric value (**naiv** parameter). Either the **nai** parameter or the **naiv** parameter, but not both, can be specified in the command. Table A-5 shows the mapping between the **naiv** and the **nai** parameter values.

Range: 0-127

:np= (optional)

Numbering Plan. The numbering plan indicator can be specified by supplying either a mnemonic value (**np** parameter) or an explicit numeric value (**npv** parameter). Either the **np** parameter or the **npv** parameter, but not both, can be specified in the command. Table A-6 shows the mapping between the **npv** and the **np** parameter values.

Range: e164, generic, x121, f69, e210, e212, e214, private, dflt

:npv= (optional)

Numbering Plan value. The numbering plan indicator can be specified by supplying either a mnemonic value (**np** parameter) or an explicit numeric value (**npv** parameter). Either the **np** parameter or the **npv** parameter, but not both, can be specified in the command. Table A-6 shows the mapping between the **npv** and the **np** parameter values.

Range: 0-15

Example

```
dlt-gttset:gti=2:tt=10
```

```
dlt-gttset:gtin=4:tt=0:np=dflt:nai=dflt
```

Dependencies

The EGTT feature must be turned on before this command can be entered.

An entry must already exist that matches the **gti**, **tt**, and **np(v)** and **nai(v)** combination of parameters.

An entry must already exist that matches the **gtii**, **tt**, and **np(v)** and **nai(v)** combination of parameters.

An entry must already exist that matches the **gtin**, **tt**, and **np(v)** and **nai(v)** combination of parameters.

The specified **gttsn** value must exist for the specified **gtin24**, **tt**, **np/npv/nai/naiv** parameter combination.

The **np** and **npv** parameters cannot be specified together in the same command.

The **nai** and **naiv** parameters cannot be specified together in the same command.

The parameter values **gtia=4**, **gti/gtia/gtii/gtin/gtin24=1**, and **gti/gtia/gtii/gtin/gtin24=3** cannot be specified.

When the **gti/gtia/gtii/gtin/gtin24=2** parameter is specified, the **np/npv** and **nai/naiv** parameter combinations cannot be specified.

When the **gtii/gtin/gtin24=4** parameter is specified, an **np(v)** and **nai(v)** parameter combination must be specified. These parameters can be specified in any combination: **np** and **naiv**, **npv** and **nai**, **np** and **nai**, or **npv** and **naiv**.

If multiple **cgssn** and/or **selid** entries exist for a specified selector, the selector cannot be deleted.

Notes

When the EGTT feature is turned on, the GTT Selector (**ent/chg/dlt/rtrv-gttset**), GTT Set (**ent/dlt/rtrv-gttset**), and GTA (**ent/chg/dlt/rtrv-gta**) commands replace the Translation Type (**ent/dlt/rtrv-tt**) and Global Title Translation (**ent/chg/dlt/rtrv-gtt**) commands. All data previously provisioned with these commands is maintained.

Output

```
dlt-gttset:gti=2:tt=10
```

```
rlghncxa03w 04-02-18 08:54:41 EST EAGLE 31.3.0
```

```
DLT-GTTSEL: MASP A - CMLTD
```

```
;
```

dlt-gttset**Delete GTT Set**

Use this command to delete the specified global title translation set.

Keyword: **dlt-gttset**

Related Commands: **chg-gttset**, **chg-gttset**, **ent-gttset**, **rtrv-gttset**

Command Class: Database Administration

Parameters

:gttsn= (mandatory)

GTT set name. A GTT set is an entity to which global title addresses and selectors are assigned.

Range: *ayyyyyyy*

1 leading alphabetic and up to 8 following alphanumeric characters.

Example

dlt-gttset:gttsn=t800

Dependencies

The EGTT feature must be turned on before this command can be entered.

The **gttsn** parameter must be specified, cannot have a value of **none**, and must match an existing GTT set.

The specified GTT set cannot have any GTT selectors using it.

The specified GTT set cannot have the **gta**, **cgpc**, **cgssn**, or **opc** parameters assigned to it and cannot be used by any translation.

A GTT set cannot be deleted if it is being referenced by the SCCP Options table.

If the GTT set is referenced by the **bpartygttsn** parameter in the **chg-gsmsmsopts** or **chg-is41smsopts** command, then the GTT set cannot be deleted.

The EGLEOPTS table is corrupt or cannot be found.

The value specified for the **gttsn** parameter must match the name of an existing GTT Set.

Notes

When the EGTT feature is turned on, the GTT Selector (**ent/chg/dlt/rtrv-gttset**), GTT Set (**ent/dlt/rtrv-gttset**), and GTA (**ent/chg/dlt/rtrv-gta**) commands replace the Translation Type (**ent/dlt/rtrv-tt**) and Global Title Translation (**ent/chg/dlt/rtrv-gtt**) commands. All data previously provisioned with these commands is maintained.

Output

dlt-gttset:gttsn=t800

rlghncxa03w 04-02-19 08:20:26 EST EAGLE 31.3.0

DLT-GTTSET: MASP A - CMLTD

;

dlt-gws-redirect**Delete Gateway Screening Redirect Command**

Use this command to delete the provisioning of the redirect function and subsequently to disable the gateway screening redirect function. After the gateway screening redirect function is disabled, you must use **ent-gws-redirect** to enable the function again.

Keyword: **dlt-gws-redirect**

Related Commands: **chg-gws-redirect**, **ent-gws-redirect**,

Command Class: Database Administration

Parameters

This command has no parameters.

Example

dlt-gws-redirect

Dependencies

The redirect function data that will be deleted (removed) with this command must exist in the database.

Notes

None

Output

dlt-gws-redirect

```
rlghncxa03w 04-02-10 11:43:04 EST EAGLE 31.3.0
DLT-GWS-REDIRECT: MASP A - COMPLTD
;
```

dlt-home-smsc**Delete HOME SMSC Address**

Use this command to delete HOME SMSC specific addresses currently used to identify Short Message Service Centers in the database. This command updates the HOME SMSCADDR table.

Keyword: **dlt-home-smsc**

Related Commands: **ent-home-smsc**, **rtrv-home-smsc**

Command Class: Database Administration

Parameters

:smc= (mandatory)

Short Message Service Center address.

Range: 1-21 digits

1-21 hexadecimal digits

Example

dlt-home-smsc:smc=552611646

Dependencies

One of the following features must be enabled (see the **enable-ctrl-feat** command) before this command can be entered.

- MO SMS IS41-to-GSM Migration
- MO-based GSM SMS NP
- MO-based IS41 SMS NP
- MT-Based GSM SMS NP
- MT-Based IS41 SMS NP
- Portability Check for Mobile Originated SMS

The specified HOME SMSC address must exist in the HOME SMSCADDR table.

Notes

None

Output

```
dlt-home-smsc:smc=552611646

rlghncxa03w 04-02-28 08:50:12 EST EAGLE 31.3.0
DLT-HOME-SMSC: MASP A - COMPLTD
;
```

dlt-homern**Delete Home Routing Number Prefix**

Use this command to delete a routing number prefix from the HOMERN table.

Keyword: dlt-homern

Related Commands: ent-homern, rtrv-homern

Command Class: Database Administration

Parameters

:rn= (mandatory)
The home routing number prefix
Range: 1-15 digits

Example

```
dlt-homern:rn=C441234
```

Dependencies

The specified routing number must already exist in the HOMERN table.

A value of **none** cannot be specified for the **rn** parameter.

The INP feature or the G-Port feature must be turned on, or the TINP feature must be enabled before this command can be entered.

Notes

None

Output

```
dlt-homern:rn=C441234

rlghncxa03w 04-02-28 08:50:12 EST EAGLE 31.3.0
HOMERN table is (1 of 100) 1% full
DLT-HOMERN: MASP A - COMPLTD
;
```

dlt-ip-host**Delete Internet Protocol Hostname**

Use this command to delete entries from the IP Host table. The IP Host table defines the local and remote host names and their associated IP addresses.

Keyword: dlt-ip-host

Related Commands: ent-ip-host, rtrv-ip-host

Command Class: Database Administration

:ipappl= (optional)

The IP application supported by the node.

Range: **stplan**

Default: Default value not given

:ipport= (optional)

The logical IP port that addresses the application on the node.

Range: **1024-5000**

Default: The logical IP port is not given.

:loc= (optional)

The card location as stenciled on the shelf of the system.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

Default: The card location is not given.

Example

To delete the connection for a TCP/IP link associated with an STPLAN on a specified location:

dlt-ip-node:ipaddr=193.4.201.50:ipappl=stplan:loc=1201

To delete the connection for a TCP/IP link associated with an IPPORT on a specified location:

dlt-ip-node:ipaddr=193.4.201.50:ipport=1024:loc=1201

To delete all connections for TCP/IP links associated with the STPLAN on all locations:

dlt-ip-node:ipaddr=193.4.201.50:ipappl=stplan

To delete the connection for TCP/IP links associated with an IPPORT:

dlt-ip-node:ipaddr=193.4.201.50:ipport=1024

To delete all connections for a TCP/IP link associated with any application on a specified location:

dlt-ip-node:ipaddr=193.4.201.50:loc=1201

To delete all connections for TCP/IP links associated with any application on any location:

dlt-ip-node:ipaddr=193.4.201.50:force=yes

Dependencies

The **force** parameter. must be specified to remove an entire node.

At least one of the following parameters must be specified: **ipappl**, **ipport**, **loc**, or **force=yes**.

If the **force=yes** parameter is specified, the **ipappl**, **ipport**, and **loc** parameters cannot be specified.

The **ipappl** and **ipport** parameters cannot be specified together in the command.

The ACM (shown by the entry ACMENET in the TYPE field in the **rtrv-card** command output) is the only valid card type for this command.

If the **loc** parameter is specified, the shelf and card must be equipped.

If the **loc** parameter is specified, the specified card must have a TCP/IP data link assigned to it.

If the **loc** parameter is specified, the IP port on the node must be assigned to the application for the specified TCP/IP data link.

If the **loc** and **ipaddr** parameters are specified, the specified IP address must match the IP address of the card location's remote IP node.

If the **loc** and **ipport** parameters are specified, the specified IP port must match the card location's remote IP port.

If the **loc** and **ipappl** parameters are specified, the specified IP application must match the card location's remote IP application.

The specified ACM (shown by the entry ACMENET in the TYPE field in the **rtrv-card** command output) must be out-of-service maintenance-disabled (OOS-MT-DSBLD). Enter the **rept-stat-card** command to verify the state of the ACM.

Notes

A particular application can be specified by giving either the application's name (**ipappl**) or its IP port (**ipport**) on the node.

Only Class A, Class B, and Class C IP addresses are supported by the STP LAN feature.

Output

dlt-ip-node:ipaddr=193.4.201.50:loc=1201

```
rlghncxa03w 04-02-10 11:43:04 EST EAGLE 31.3.0
Deleting multiple nodes on disk - please wait...
DLT-IP-NODE: MASP A - COMPLTD
```

;

dlt-ip-rte

Delete IP Route

Use this command to delete a static IP route entry from the Static IP Route table (destination IP address, subnet mask, and gateway IP address) for the specified card.



CAUTION

CAUTION: The deletion of static IP routes can adversely affect IP connection oriented transports.

Keyword: dlt-ip-rte

Related Commands: , rtrv-ip-lnk

Command Class: Database Administration

Parameters

:dest= (mandatory)

Destination IP Address. The remote destination host or network destination IP Address that is to be removed.

Range: 4 numbers separated by dots, with each number in the range of 0–255.
The IP address **0.0.0.0** is not valid.

:loc= (mandatory)

Card location. The unique identifier of a specific IP card in the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

:force= (optional)

A value of **yes** is required when the card is allowed and this command is to be completed.

Range: yes, no

Default: no

Example

```
dlt-ip-rte:loc=1301:dest=128.252.10.5
```

```
dlt-ip-rte:loc=1301:dest=128.252.10.5:force=yes
```

Dependencies

The **loc** parameter value must correspond to a SSED CM card in the card table that is running the **ss7ipgw**, **ipgwi**, **iplim**, or **iplimi** application.

The specified destination IP address (**dest** parameter):

- Must not be the default route (0.0.0.0)
- Must not correspond to any loopback address (i.e. 127.X.X.X)
- Must not reside on this card's A or B network

The specified destination IP address must exist in the Static IP Route table.

The card in the location specified with the **loc** parameter should typically be inhibited for this command to complete successfully. The **force=yes** parameter is required when the card is allowed and the command is entered.

Notes

None

Output

```
dlt-ip-rte:loc=1301:dest=128.252.10.5
```

```
rlghncxa03w 04-02-17 15:35:05 EST EAGLE 31.3.0
DLT-IP-RTE: MASP A - COMPLTD
;
```

dlt-lbp**Delete Loopback Point**

Use this command to delete one or all far-end loopback points maintained in the Link Fault Sectionalization table for testing data signaling link elements in a single CCS7 transmission path.

Keyword: **dlt-lbp**

Related Commands: **act-lbp**, **chg-lbp**, **dact-lbp**, **ent-lbp**, **rtrv-lbp**

Command Class: Database Administration

Parameters

:link= (mandatory)

SS7 signaling link. The SS7 signaling link that is to be tested.

Synonym: **port**

Range: **a, b, a1-a31, b1-b31**

Not all card types support all **link** parameter values.

See "Summary of Range Values for :link Parameter" for valid **link** parameter range values for each type of card that can have assigned signaling link ports.

:loc= (mandatory)

Card location. The unique identifier of a the card containing the signaling link you want to use for loopback point testing.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208,**

4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218,
5301-5308, 5311-5318, 6101-6108, 6111-6118

:all= (optional)

Deletes all loopback points for the specified signaling link or deletes only the link specified on the **lbp** parameter.

Range: **yes**

:lbp= (optional)

Loopback point ID. This parameter identifies a far-end loopback point that lies along an SS7 signaling link path between the STP and the target device (up to and including the target device).

Range: **1-32**

Example

```
dlt-lbp:loc=1101:link=a:lbp=1
```

```
dlt-lbp:loc=1101:link=a:all=yes
```

Dependencies

At least one optional parameter must be specified.

The **lbp** parameter and the **all** parameter cannot be specified together in the command.

The Link Fault Sectionalization (LFS) feature must be on before this command can be entered.

The loopback point (LBP) must have been previously defined.

The card location (**loc** parameter) must identify a **limds0**, **limt1**, or **limch** (associated to a **limt1**) card configured with either an **ss7ansi** or **ccs7itu** application.

The card location specified in the **loc** parameter must be equipped.

The card location specified in the **loc** parameter cannot be reserved by the system

Notes

None

Output

```
dlt-lbp:loc=1101:link=a:lbp=1
```

```
rlghncxa03w 05-02-17 15:35:05 EST EAGLE5 33.0.0  
DLT-LBP: MASP A - COMPLTD
```

```
;
```

dlt-lnp-serv

Delete LNP Service

Use this command to delete from the database an LNP service or an alias translation type associated with an LNP service.

Keyword: **dlt-lnp-serv**

Related Commands: **chg-lnp-serv**, **ent-lnp-serv**, **rtrv-lnp-serv**

Command Class: Database Administration

Parameters

:serv= (mandatory)

Reserved service type name.

Range: **ain, in, pcs, wnp, class, lidb, cnam, isvm, lnpqs, wsmcsc, udf1, udf2, udf3, udf4, lrnqt**

:alias= (optional)
 The alias translation type.
Range: **000-255**

Example

```
dlt-lnp-serv:serv=lidb
dlt-lnp-serv:serv=lidb:alias=236
dlt-lnp-serv:serv=lnqtr
```

Dependencies

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before the **dlt-lnp-serv** command can be entered.

The value of the **serv** parameter must already exist in the LNP database.

The service must not be referenced in the LNP database.

The value of the **alias** parameter must be associated with the value of the specified **serv** parameter.

The value that is specified for the **alias** parameter must not already exist in the LNP database as a true translation type.

All aliases associated with the LNP service must be deleted before the service can be deleted.

The value of the **alias** parameter must exist in the LNP database.

Notes

None

Output

```
dlt-lnp-serv:serv=lidb
rlghncxa03w 02-11-29 16:40:40 EST  EAGLE 30.0.0
DLT-LNP-SERV: MASP A - COMPLTD
Command Completed.
;
```

dlt-loopset

Delete Loop Set Command

Use this command to delete loopset and point code data from the database. This command updates the Loopset table.

NOTE: A total of 6 point codes can be deleted each time the dlt-loopset command is issued. If the command is issued twice, all of the point codes in a loopset can be deleted, creating an empty loopset.

Keyword: **dlt-loopset**

Related Commands: **chg-loopset, ent-loopset, rtrv-loopset**

Command Class: Database Administration

Parameters

:name= (mandatory)
 Loopset name. This parameter specifies an entry in the Loopset table.
 The **name=none** parameter cannot be specified.
Range: *ayyyyyyy*
 1 alphabetic and up to 7 alphanumeric characters.

:force= (optional)

The **force=yes** parameter must be specified to delete a single point code entry from a loopset that is being used by GTT.

Range: **yes**

:pcl= (optional)

ANSI point code list with subfields *network indicator-network cluster-network cluster-member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*). This parameter allows up to 6 comma-delimited entries in the point code list.

Synonym: **pcla**

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:pcli= (optional)

ITU international point code list with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*). This parameter allows up to 6 comma-delimited entries in the point code list.

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:pcln= (optional)

ITU national point code list in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*). This parameter allows up to 6 comma-delimited entries in the point code list.

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:pcln24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*. This parameter allows up to 6 comma-delimited entries in the point code list.

Range: **p-**, 000-255
 Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).
prefix—**p-**
msa—000-255
ssa—000-255
sp—000-255

Example

This example deletes the entire loopset table entry for the loopset rtp7 when that set is not being used by GTT.

dlt-loopset:name=rtp7

This example deletes a single point code in the entry for the loopset rtp2 when that set is being used by GTT.

dlt-loopset:name=rtp2:pcl=3-3-9:force=yes

This example deletes a point code for the loopset rtp1 when the loopset is not being used by GTT.

dlt-loopset:name=rtp1:pc1=3-3-9

Dependencies

The value of the **name** parameter must already exist in the database.

The SCCP Loop Detection feature must be enabled before this command can be entered.

The GTT feature must be turned on before this command can be entered.

A loopset entry cannot be deleted when it is being used by GTT.

If a point code in the Loopset table is being used by GTT, then the **force=yes** parameter must be specified before the **pcl/pcli/pcln/pcln24** parameter can be specified.

The values for the **pcl** parameter cannot consist of any invalid point codes. The valid point codes must be consecutively specified and separated by commas.

The **name=none** parameter cannot be specified.

At least one valid point code must be specified as a value for the **pcl** parameter.

The values for the **pcl** parameter must be unique.

The value of the **pcl** parameter must exist in the loopset entry in the database.

Output

The following example deletes a single point code in the entry for the loopset **rtp2** when the set is being used by GTT.

```
dlt-loopset:name=rtp2:pcl=3-3-9:force=yes
rlghncxa03w 07-02-10 08:48:25 EST EAGLE Rel 35.6.0
LOOPSET table is (11 of 1000) 1% full
DLT-LOOPSET: MASP A - COMPLTD
;
```

dlt-ls

Delete Linkset

Use this command to remove a linkset from the system database. A linkset is a group of signaling links carrying traffic to the same signaling point.

Keyword: dlt-ls

Related Commands: chg-l3t, ent-ls, rept-stat-ls, rtrv-ls

Command Class: Database Administration

Parameters**:lsn=** (mandatory)

Linkset name. This parameter specifies the name of the linkset. Only one linkset name per command can be specified.

Range: ayyyyyyyyy

1 alphabetic character followed by up to 9 alphanumeric characters

Example**dlt - ls: lsn=lsna****Dependencies**

The linkset must be in the database.

The linkset can be removed only if all links associated with the linkset have been removed.

The linkset can be removed only if the linkset is not referenced by any routeset.

The specified linkset cannot be deleted if it has or is a mate linkset.

A gateway linkset can be deleted only from a SEAS terminal, and not from a system terminal.

The linkset cannot be deleted if an SAPC entry is present for the linkset.

The linkset cannot be deleted if it is used by an exception route.

If multiple linksets are assigned to an adjacent point code, then the proxy linkset must be the final linkset that is deleted.

If the linkset that is specified by the **lsn** parameter is used as an incoming linkset for an exception route entry (see the **rtrv-rtx** command), then this command cannot be entered.

Notes

When a linkset is removed from the system database, the related entries are removed automatically from the translation type mapping table.

Output**dlt - ls: lsn=lsna**

```
rlghncxa03w 04-01-07 11:11:28 EST  EAGLE 31.3.0
Link set table is (114 of 1024) 11% full
DLT-LS: MASP A - COMPLTD
```

;

dlt-map**Delete Mate Applications**

Use this command to remove mate application entries, groups, or an Alternate RI Mate associated with a MAP Set. This command removes one or more entries from the Remote Point Code Subsystem Number table.



CAUTION: If PC/SSNs within a weighted entity set are deleted such that the entity set's multiplicity mode becomes solitary or dominant, the weight values are reset to indicate a non-weighted entity set.

NOTE: See the "Notes" section for this command for additional information on multiplicity modes.

NOTE: The GTT LS ARI feature must be enabled before an Alternate RI Mate can be deleted from a MAP Set.

Keyword: dlt-map

Related Commands: chg-map, ent-map, rtrv-map

Command Class: Database Administration

Parameters

At least one of these parameters must be specified: **all**, **ssn**.

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:pc= (mandatory)

ANSI point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Synonym: **pca**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:pc/pca/pci/pcn/pcn24= (mandatory)

Post-GTT-translated point code.

:pci= (mandatory)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*)

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:pcn= (mandatory)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npclfnti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-
nnnnn—0-16383
gc—aa-zz
m1-m2-m3-m4—0-14 for each member; values must sum to 14

:pcn24= (mandatory)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

:all= (optional)

This parameter must be specified to remove all subsystem numbers associated with this point code. If this parameter is not specified, only the specified subsystem number is removed.

Range: yes

Default: no

:mapset= (optional)

The MAP set ID.

This parameter is mandatory if the Flexible GTT Load Sharing feature is enabled.

Range: 1-36000 dflt

dflt—Default MAP set

Default: dflt - If the Flexible GTT Load Sharing feature is not enabled, the default value of the **mapset** parameter is **dflt**.

:mrnset= (optional)

Alternate RI Mate MRN Set ID.

Range: 1-6000 dflt

:ssn= (optional)

Subsystem Number.

Range: 2-255

Default: The specified subsystem number is removed for the given point code.

Example

The following example deletes the single entry PC 1-1-1 with an SSN value of 123 from its mated group. If this is the last entry in the group then the PC is also deleted from the MAP tables:

dlt-map:pc=1-1-1: ssn=123

The following example deletes each entry of PC 1-1-1 and all SSNs associated with the PC from each of the PC/SSN mated groups. The PC is also deleted from the MAP tables:

dlt-map:pc=1-1-1:all=yes

The following command deletes subsystem 10 associated with spare PC 1-1-0 from the MAP table.

dlt-map:pci=s-1-1-0:ssn=10

The following example deletes subsystem 10 associated with PC 1-1-1 in MAP set 362.

dlt-map:pc=1-1-1:ssn=10:mapset=362

The following example deletes PC 1-1-1 along with all the subsystems associated with this PC in MAP set 362.

dlt-map:pc=1-1-1:all=yes:mapset=362

The following example deletes PC 1-1-2 along with all the subsystems associated with this PC in the default MAP set.

dlt-map:pc=1-1-2:all=yes:mapset=dfmt

The following example deletes the Alternate RI Mate associated with MAP Set 362.

dlt-map:mapset=362:mrnset=1

The following example deletes the Alternate RI Mate for the default MAP Set and PC/SSN 1-1-1/10.

dlt-map:mapset=dfmt:pc=1-1-1:ssn=10:mrnset=1

The following example deletes the entry from MAP set.

dlt-map:mapset=1:pc=1-1-1:ssn=10

Dependencies

The **all** and **ssn** parameters cannot be specified together in the command.

If the **all=yes** parameter is specified, all SSNs for the given PC are removed.

The DPC of the primary subsystem must be a full PC.

The specified remote PC must exist in the MAP table.

The specified SSN must exist in the MAP table entity set associated with the specified remote PC.

An STP true point code that is assigned to an ATINPQ, EIR, INP, LNP, or V-Flex subsystem cannot be deleted.

If the **pcn** parameter is specified, the format of the PC must match the format that was assigned with the **chg-stpopts:npfnti** parameter.

If the Flexible GTT Load Sharing feature is not enabled, the **mapset** parameter must not be specified.

If the Flexible GTT Load Sharing feature is enabled, the **mapset** parameter must be specified.

The specified MAP set must exist in the database.

The specified PC/SSN/MAP set must already be provisioned in the MAP table.

If the **pc** and **mapset** parameters are specified, and the **all=yes** parameter is specified, then at least one entry for that PC/MAP set must exist in the MAP table.

If the **mapset** parameter has any value other than **dfmt**, then the PC/SSN/MAP set cannot be referenced from the GTT, GSM-MAP Opcode, GSM MAP Screening, or MRN table entry.

PC "Point code out of range".

If the **pcn** or **mpcn** parameter is specified, then the format of the parameter must match the format dictated by the **chg-stpopts:npfnti** command.

The STP true point code assigned to the TF subsystem cannot be deleted.

PC and SSN are not primary applications.

A PC/MAP set ID cannot be deleted from the MAP table if it is the last such entry and is being referenced by an entry in the PPSOPTS table.

The GTT LS ARI feature must be enabled before the **mrnset** parameter can be specified.

If the **mrnset** and the **mapset=dfmt** parameters are specified, then the **ssn** parameter must be specified.

The value specified for the **mrnset** parameter must already be associated with a MAP Set.

The MRN table is corrupt or cannot be found.

If the **mrnset** parameter is specified, then the **all** parameter cannot be specified.

Notes

For the MAP commands, an entity set consists of a group of PC/SSNs that are used for traffic distribution, and an RC group consists of PC/SSNs within an entity set that have the same RC. In loadsharing mode, an entity set contains 1 RC group. In combined/dominant loadsharing mode, an entity set can contain multiple loadsharing groups.

The EAGLE 5 ISS supports the following modes for nodes/subsystems:

- When a PC/SSN pair is not replicated, the pair is in *solitary* mode. The subsystem acts as the only application, with no backup. If this subsystem fails, messages routed to it are discarded and SCCP management returns “Subsystem Unavailable” messages to the originator.
- A group of replicated PC/SSN pairs are in *dominant* mode if each PC/SSN pair in the group has a unique RC. The specified subsystem with the lowest RC acts as the primary subsystem, while the mate subsystem acts as a backup. In the event of congestion, messages route to the mate subsystem. When the congestion subsides, messages are again routed to the primary (dominant) subsystem.
- A group of replicated PC/SSN pairs are in *load sharing* mode if each PC/SSN pair in the group has the same RC. All messages are evenly distributed at the SCCP level to all nodes/subsystems in the group. In the event of congestion or failure, the non-affected subsystem assumes the load of its failed or congested mate.
- The *combined load sharing/dominant* mode supports a combination of load sharing and dominant mode. A group of PC/SSN pairs are in combined load sharing/dominant mode when at least two of the PC/SSN pairs have the same RC and another node subsystem in the group has a different RC. A combination of node accessibility and RC determines the preferred PC/SSN.

When the Flexible GTT Load Sharing feature is on, MAP load sharing sets are supported. Each MAP set is identified by a new **mapset** parameter.

When the Weighted GTT Loadsharing feature is turned on, weighted entity sets and RC groups are supported, and threshold values can be assigned to each PC/SSN.

Output

```
dlt-map:pc=1-1-0:ssn=10:mapset=362
tekelecstp 08-12-22 12:20:10 EST EAGLE 40.1.0
DLT-MAP: MASP A - COMPLTD
;

dlt-map:mapset=362:mrnset=1
tekelecstp 08-12-22 12:20:10 EST EAGLE 40.1.0
DLT-MAP: MASP A - COMPLTD
;
```

dlt-mrn

Delete Mated Relay Node

Use this command to delete entries or an Alternate RI Mate from the MRN table. A single command can delete one point code from the group, or delete the entire group.



CAUTION: If PCs within a weighted entity set are deleted such that the entity set's multiplicity mode becomes dominant, the weight values are reset to indicate a non-weighted entity set.

NOTE: See the "Notes" section for this command for additional information on multiplicity modes.

NOTE: The GTT LS ARI feature must be enabled before an Alternate RI Mate can be deleted from an MRN Set.

Keyword: dlt-mrn

Related Commands: chg-mrn, ent-mrn, rtrv-mrn

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:pc= (mandatory)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: pca

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001-005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006-255.

The point code 000-000-000 is not a valid point code.

:pc/pca/pci/pcn24= (mandatory)

Post-GTT-translated point code.

:pci= (mandatory)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*)

Range: s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

:pcn= (mandatory)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npclfnti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: s-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:pcn24= (mandatory)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:all= (optional)

This parameter is used to delete the entire group of point codes that contains the specified point code in the MRN table.

Range: **yes**

:mapset= (optional)

Alternate RI Mate MAP Set ID.

Range: **1-36000 dflt**

:mrnset= (optional)

The MRN set ID.

Range: **1-3000 dflt**

dflt—Default MRN set.

:pc1= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: **pca1**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:pc1/pca1/pci1/pcn1/pcn241= (optional)

Alternate post-GTT-translated point code.

:pc2= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: **pca2**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001–005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006–255**.

The point code **000-000-000** is not a valid point code.

:pc2/pca2/pci2/pcn242= (optional)

Alternate post-GTT-translated point code.

:pc3= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: **pca3**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001–005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006–255**.

The point code **000-000-000** is not a valid point code.

:pc3/pca3/pci3/pcn243= (optional)

Post-GTT-translated point code.

:pc4= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: **pca4**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001–005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006–255**.

The point code **000-000-000** is not a valid point code.

:pc4/pca4/pci4/pcn244= (optional)

Alternate post-GTT-translated point code.

:pci1= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*)

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:pci2= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*)

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:pci3= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*)

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:pci4= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*)

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:pcn1= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:pcn2= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:pcn241= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:pcn242= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:pcn243= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:pcn244= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

:pcn3= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: s-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:pcn4= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: s-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

Example

The following example deletes the entire entry for the specified point code (the point code plus all of its associated point codes).

dlt-mrn:pc=1-1-0

The following example finds point codes 1-1-0 and 1-1-1, and deletes them from the group that contains them in the MRN table.

dlt-mrn:pc=1-1-0:pc1=1-1-1

The following example deletes from the MRN table the entire group of point codes that contains the specified point code.

dlt-mrn:pc=1-1-0:all=yes

The following examples include spare point codes.

dlt-mrn:pci=s-2-2-1

dlt-mrn:pcn=s-1-1-1-0235-aa

```

dlt-mrn:pc=1-1-9:mrnset=dflt
dlt-mrn:pc=1-1-9:mrnset=111
dlt-mrn:pc=1-1-1:pc1=1-1-9:mrnset=111
dlt-mrn:pc=1-1-9:All=yes:mrnset=111

```

The following example deletes the Alternate RI Mate for MRN Set 111.

```
dlt-mrn:mrnset=111:mapset=123
```

The following example deletes the Alternate RI Mate for the default MRN Set and PC 1-1-1.

```
dlt-mrn:mrnset=dflt:pc=1-1-1:mapset=123
```

The following example deletes the entry from the MRN set.

```
dlt-mrn:mrnset=1:pc=1-1-1
```

Dependencies

ITU-N point codes must be the format set by the **npcfnti** parameter of the **chg-stpopts** command. (Use the **rtrv-stpopts** command to display the STP option settings.)

A point code that is specified in the command must already exist in the MRN table.

The PCs in an entity set cannot be deleted if the deletion leaves only one PC in the entity set. If this occurs, the entire entity set must be deleted by specifying the **all=yes** parameter.

The **mrnset** parameter can be specified only when the Flexible GTT Load Sharing feature is enabled.

If the Flexible GTT Load Sharing feature is enabled, then the specified PC must already exist in the specified MRN set.

The specified MRN set must already exist in the MRN table.

A specified MRN Set or a PC in a MRN Set cannot be deleted if it is referred to in the GTT2 or MAP table.

The **rtrv-gtt** and **rtrv-gta** commands can be used to display GT Translations.

A point code in a non-default MRN set cannot be deleted from the MRN table if it is referenced by an entry in the PPSOPTS table.

If the **all=yes** parameter is specified, the **pc** parameter must be specified, and the **pc1/pc2/pc3/pc4** parameters cannot be specified.

The same point code value cannot be entered more than once for deletion.

The **pc/pc1/pc2/pc3/pc4** parameter values must be full point codes.

The GTT LS ARI feature must be enabled before the **mapset** parameter can be specified.

The value specified for the **mrnset** parameter must already be associated with a MAP Set.

The MAP table is corrupt or cannot be found.

If the **mapset** parameter is specified, then the **pc1**, **pc2**, **pc3**, **pc4**, and **all** parameters cannot be specified.

Notes

For the MRN commands, an entity set consists of a group of PCs that are used for traffic distribution, and an RC group consists of PCs within an entity set that have the same RC. In loadsharing mode, an entity set contains 1 RC group. In combined/dominant loadsharing mode, an entity set can contain multiple loadsharing groups.

The EAGLE 5 ISS supports the following modes for nodes/subsystems:

- A group of replicated PCs are in *dominant* mode if each PC in the group has a unique RC. The specified subsystem with the lowest RC acts as the primary subsystem, while the mate subsystem acts as a backup. In the event of congestion, messages route to the mate subsystem. When the congestion subsides, messages are again routed to the primary (dominant) subsystem.
- A group of replicated PCs are in *load sharing* mode if each PC in the group has the same RC. All messages are evenly distributed at the SCCP level to all nodes/subsystems in the group. In the event of congestion or failure, the non-affected subsystem assumes the load of its failed or congested mate.
- The *combined load sharing/dominant* mode supports a combination of load sharing and dominant mode. A group of PC are in combined load sharing/dominant mode when at least two of the PC have the same RC and another node subsystem in the group has a different RC. A combination of node accessibility and RC determines the preferred PC.

The Flexible Intermediate GTT Loadsharing feature adds support for loadsharing sets, which are identified by the **mrnset** parameter.

The Flexible GTT Loadsharing feature and the Intermediate GTT Loadsharing feature used together support MRN sets for flexible intermediate GTT loadsharing.

When the Weighted GTT Loadsharing feature is turned on, weighted entity sets and RC groups are supported, and threshold values can be assigned to each PC/SSN.

Output

```
dlt-mrn:pc=1-1-1:mrnset=111
tekelecstp 08-12-22 12:20:10 EST  EAGLE 40.1.0
DLT-MRN : MASP A - COMPLTD
;

dlt-mrn:mrnset=111:mapset=123
tekelecstp 08-12-22 12:20:10 EST  EAGLE 40.1.0
DLT-MRN : MASP A - COMPLTD
;
```

dlt-na

Delete Network Appearance

Use this command to delete a previously defined network appearance.

Keyword: **dlt-na**

Related Commands: **ent-na, rtrv-na**

Command Class: Database Administration

Parameters

:na= (mandatory)

Network appearance.

Range: **0-4294967295**

:type= (mandatory)

Type of the network appearance to be deleted.

Range: **ansi, itui, ituis, itun, ituns, itun24**

:gc= (optional)

Group Code of the network appearance.

Range: **yy**

2 alphabetic characters; valid values are **aa-zz**

Example

```

dlt-na:type=ansi:na=10
dlt-na:type=itui:na=11
dlt-na:type=itun:na=10
dlt-na:type=itun:na=11:gc=fr
dlt-na:type=ituis:na=4

```

Dependencies

Group Code (**gc**) is not allowed with network types **ansi** , **itui** , **ituis** , and **itun**24.

The specified network appearance must exist in the Network Appearance table

Notes

The ITUDUPPC feature must be turned on before a group code can be deleted for an ITU-N network type

Output

```

dlt-na:pstncat=5000:pstnid=1:force=yes

rlghncxa03w 04-02-20 09:07:58 EST EAGLE 31.3.0
DLT-NA: MASP A - COMPLTD
;

```

dlt-npp-as**Delete a NPP Action Set**

Use this command to delete an NPP Action Set (AS) entry.

Keyword: **dlt-npp-as**

Related Commands: **chg-npp-as**, **dlt-npp-srs**, **ent-npp-as**, **rtrv-npp-as**

Command Class: Database Administration

Parameters

:asn= (mandatory)

Action set name. This parameter specifies the name of the AS.

Range: *ayyyyyyyyy*

1 alphabetic character followed by up to 9 alphanumeric characters

Example

```

dlt-npp-as:asn=asn1

```

Dependencies

The value specified for the **asn** parameter must exist in the NPP AS table.

If the AS is referenced by a NPP Service Rule Set, then this command cannot be entered.

Output

```

dlt-npp-as:asn=asn1
tekelecstp 09-02-19 13:57:06 EST EAGLE 40.1.0
NPP-AS table is (4 of 1024) 1% full.

DLT-NPP-AS: MASP A - COMPLTD
;

```

dlt-npp-srs**Delete an NPP Service Rule Set**

Use this command to delete an NPP Service Rule Set (SRS).

Keyword: **dlt-npp-srs**

Related Commands: **chg-npp-as, chg-npp-srs, dlt-npp-srs, ent-npp-as, rtrv-npp-as, rtrv-npp-srs**

Command Class: Database Administration

Parameters

:fdl= (mandatory)

Filter digit length. This parameter specifies the number of digits on the incoming digit string that is filtered by the NPP.

Range: **1-32 ***

*—multiple lengths of messages can be filtered

:fnai= (mandatory)

Filter Nature of Address Indicator (NAI).

Range: **intl, natl, nai1, nai2, nai3, unkn**

intl— filter messages with NAI=INTL

natl— filter messages with NAI=NATL

nai1— filter messages with NAI=NAI1

nai2— filter messages with NAI=NAI2

nai3— filter messages with NAI=NAI3

unkn— filter messages when the NAI is unknown

:fpfx= (mandatory)

Filter prefix. This parameter specifies the prefix used to filter incoming digit strings.

Range: **1-16 digits, *, ?**

1 - 16 hexadecimal digits inclusive of single digit wildcard (?); or wildcard (*) matching the entire digit string; valid digits are **?, 0-9, a-f, A-F**.

:srvn= (mandatory)

Service name. This parameter specifies the name of the NPP Service.

Range: **nppt, idprcdpn, idprcgpn, tif, tif2, tif3, mosmsicgpn, mosmsicdpn, mosmsgcgpn, mosmsgcdpn**

nppt— NPP Test Service

idprcdpn— IDPRCDPN Service

idprcgpn— IDPRCGPN Service

tif— TIF Service

tif2— TIF2 Service

tif3— TIF3 Service

mosmsicgpn— MOSMSICGPN Service

mosmsicdpn— MOSMSICDPN Service

mosmsgcgpn— MOSMSGCGPN Service

mosmsgcdpn— MOSMSGCDPN Service

Example

dlt-npp-srs:srvn=nppt:fpfx=a:fdl=10:fnai=intl

dlt-npp-srs:srvn=nppt:fpfx=abc:fdl=16:fnai=intl

Dependencies

The NPP Rule must exist in the NPP Rule table.

The value specified for the **fpx** parameter cannot have a **?** as the final character.

Output

```
dlt-npp-srs:srvn=nppt:fpfx=abc:fdl=16:fnai=intl
tekelecstp 09-02-19 13:57:01 EST EAGLE 40.1.0
NPP-SRS table is (0 of 8192) 0% full.

DLT-NPP-SRS: MASP A - COMPLTD
```

dlt-prefix

Delete Prefix

Use this command to delete a prefix based on the name of the feature, its prefix, and its prefix number.

Keyword: dlt-prefix

Related Commands: `chg-prefix`, `rtrv-ctrl-feat`, `rtrv-prefix`

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:feature= (mandatory)

Feature Name. This parameter specifies the name of an enabled controlled feature that is supported by this command. The parameter value must match the feature name as it is displayed in the **rtv-ctrl-feat** command output.

[illegible]

1 alphabetic character and up to 24 optional alphanumeric characters and spaces, enclosed in double quotation marks.

The parameter value is not case-sensitive; upper case or lower case or both can be entered.

Part or all of the feature name can be entered. If part of the feature name is specified, the entry must start with the first letter of the name, and must contain enough of the name to uniquely identify the feature. For example, there are two feature names that begin with “GSM MAP.” Enter enough additional characters to identify which GSM MAP feature is being entered (at least “GSM MAP SR” to identify the “GSM MAP SRI Redirect” feature). This command supports the following controlled features:

- GSM MAP SRI Redirect
- ISUP NP for EPAP

:prefix= (mandatory)

Prefix Value.

Range: 1-15 digits

1-15 hexadecimal digits; valid digits are **0-9, a-f, A-F**.

Default: Current value

:prefixnum= (mandatory)

Prefix Number. The prefix number identifies the prefix value to use for the specified feature name.

Range: 1-7

1-3 for GSM MAP SRI Redirect feature prefix values

1-5 for ISUP NP with EPAP feature prefix values

6 for the ISUP NP with EPAP feature Insertion Country Code

7 for the ISUP NP with EPAP feature Deletion Condition value

Default: Current value

Example

Delete a prefix with prefix number 1 for the ISUP NP with EPAP feature.

dlt-prefix:feature="isup np with epap":prefix=1004:prefixnum=1

Delete a prefix with prefix number 2 and specify part of the GSM MAP SRI Redirect feature name.

dlt-prefix:feature="GSM MAP SRI":prefix=104:prefixnum=2

Dependencies

The specified feature name must be the name of an enabled controlled feature as it is displayed in the **rtrv-ctrl-feat** command output. The specified feature must be one of the following features that are supported by this command:

- GSM MAP SRI Redirect
- ISUP NP for EPAP

The specified feature prefix value must already exist in the database.

The specified feature prefix value must be used by the specified feature in the database.

Notes

None

Output

dlt-prefix:feature="isup np with epap":prefix=1004:prefixnum=1

```
rlghncxa03w 04-09-20 09:04:14 EST EAGLE 31.11.0
DLT-PREFIX: MASP A - COMPLTD
```

;

dlt-rmt-appl

Delete Remote Application

Use this command to remove remote application assignments from the database.

Keyword: dlt-rmt-appl

Related Commands: ent-rmt-appl, rtrv-rmt-appl

Command Class: Database Administration

Parameters

:ipc= (mandatory)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (prefix-ni-nc-ncm).

Synonym: ipca

Range: p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001-005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006-255.

The point code 000-000-000 is not a valid point code.

:ipc/ipca/ipci/ipcn24= (mandatory)

End node's internal point code.

:ipci= (mandatory)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:ipcn= (mandatory)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:ipcn24= (mandatory)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*. The *prefix* indicates a private point code (*prefix-msa-ssa-sp*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:si= (mandatory)

Service indicator value that designates which user part is assigned to IPC.

Range: **3-15**

:ssn= (optional)

SCCP subsystem number. Valid only if **si=3**. Use **ssn** as the starting value of the range if **ssne** is specified.

Range: **0-255**

:ssne= (optional)

Specifies the end range of subsystem number.

Range: 0-255

Example

```
dlt-rmt-appl:ipc=0-0-1:si=3:ssn=5
```

```
dlt-rmt-appl:ipc=0-0-1:si=5
```

```
dlt-rmt-appl:ipcn24=1-100-1:si=5
```

```
dlt-rmt-appl:ipci=ps-2-2-2:si=5
```

Dependencies

Partial point codes are not allowed.

The **ssn** parameter is required if **si=3**.

The **ssn** and **ssne** parameters are not allowed unless **si=3**.

The **ssne** parameter value must be greater than the **ssn** parameter value.

The specified **ipc** must be previously defined in the Destination table.

The new entry cannot conflict with an existing entry.

The **ipc**, **si**, and **ssn...ssne** parameter values must all match a value in the Destination table.

Notes

To specify a range of subsystem numbers, specify the **ssn** parameter value as the start of the range and the **ssne** parameter value as the end of the range.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-) and the private and spare point code subtype prefix (**ps-**). All of the point code types support the private (internal) point code subtype prefix (**p-**).

Output

```
dlt-rmt-appl:ipc=0-0-1:si=3:ssn=5
  rlgncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
  DLT-RMT-APPL: MASP A - COMPLTD
;
```

dlt-rte

Delete Route

Use this command to remove either a single route or all routes from the system database.

Keyword: dlt-rte

Related Commands: ent-rte, rept-stat-dstn, rtrv-rte

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

At least one of the following optional parameters must be specified: **dpc/dpca/dpci/dpcn/dpcn24**, **cic**, **ilsn**, **si**.

:dpc= (mandatory)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: dpca

Range: p-, 000-255, *

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

The asterisk value (*) is not valid for the *ni* subfield.

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001–005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006–255**.

The point code **000-000-000** is not a valid point code.

:dpc/dpca/dpci/dpcn/dpcn24= (mandatory)

Destination point code.

:dpci= (mandatory)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:dpcn= (mandatory)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:dpcn24= (mandatory)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000–255**

ssa—**000–255**

sp—**000–255**

:all= (optional)

This parameter removes all destinations from the system database.

Range: yes
Default: no

:lsn= (optional)

Linkset name. This parameter specifies the name of the linkset associated with the route.

NOTE: This parameter must be specified when the all parameter is not specified, and cannot be specified when the all=yes parameter is specified.

Range: ayyyyyyyyy
 1 alphabetic character followed by 9 alphanumeric characters
Default: No linkset name is specified

Example

Delete route to dpc 1-1-1 using linkset hq435326:

dlt-rte:dpc=1-1-1:lsn=hq435326

Delete all routes to dpc 2-2-2:

dlt-rte:dpc=2-2-2:all=yes

Delete all routes to dpc 21-*-*:

dlt-rte:dpc=21-*-*:all=yes

Delete route to dpcn=3-15-15-15-sp using link e1m2itun:

dlt-rte:dpcn=3-15-15-15-sp:lsn=e1m2itun

Delete route for dpcn24=10-100-14 using linkset we123624:

dlt-rte:dpcn24=10-100-14:lsn=we123624:rc=10

Delete route to private point code dpc=p-1-1-1 using linkset hq325426:

dlt-rte:dpc=p-1-1-1:lsn=hq325426

Delete all routes to private point code dpc=p-21-*-*:

dlt-rte:dpc=p-21-*-*:all=yes

Delete route to spare point code dpci=s-1-100-1 using linkset we123624:

dlt-rte:dpci=s-1-100-1:lsn=we123624

Dependencies

At least one optional parameter must be specified.

The **dpc/dpca/dpci/dpcn/dpcn24** parameter must exist in the Destination Point Code table.

The value of the **lsn** parameter must exist in the Linkset table.

If the **all=yes** parameter is specified, then the **lsn** parameter cannot be specified.

At least one optional parameter must be specified.

The destination point code of a route must be a full point code (*ni-nc-ncm*) or a cluster point code (*ni-nc-**).

If the specified destination address is a full point code address (*ni-nc-ncm*) and is a member of a provisioned cluster (*ni-nc-**), then whether the ordered routes can be deleted is determined by the destination address's nested cluster allowed indicator. This value is set with the **ncai** parameter of the **ent/chg-dstn** commands:

- If the **ncai=no** parameter is specified, then the ordered route cannot be deleted.
- If the **ncai=yes** parameter is specified, then the destination address is a member of a provisioned nested cluster where the ordered routes of the provisioned members can be

deleted. Deletion of the ordered routes of a provisioned member results in the provisioned member assuming the attributes of its cluster

If the specified destination address is a network cluster address (*ni-nc-**), then the method used to delete the specified ordered route attributes is determined by the setting of the destination address's nested cluster allowed indicator. This value is set with the **ncai** parameter of the **ent/chg-dstn** commands.

- If the **ncai=no** parameter is specified, then the specified ordered route is deleted for each signaling point code having the same network identifier (*ni*) and network cluster (*nc*) codes.
- If the **ncai=yes** parameter is specified, then the specified destination is a nested cluster where deletion of the cluster route will not delete the ordered route of the provisioned member.

If the specified destination address is a network cluster address (**ni-nc-***), how the specified ordered route attributes are deleted is determined by the setting of the destination address's NCAI (nested cluster allowed indicator). The NCAI is set (**ncai=yes/no**) with the **ncai** parameter of the **ent/chg-dstn** commands.

- If the NCAI is set to **no**, the specified ordered route is deleted for each signaling point code having the same network identifier (NI) and network cluster (NC) codes.
- If the NCAI is set to **yes**, then the specified destination is a nested cluster where deletion of the cluster route will not delete the ordered route of the provisioned member.

If the **dpcn** parameter is specified, the format of the point code(s) must match the format you assigned with the **chg-stpopts:npcfmti** parameter.

The last route for the specified DPC being removed cannot be referenced by an X.25 route, a mated application, or a concerned signaling point code, depending on the feature configuration. If this route is removed and any of these references exist, those references will not be valid.

The last route to a destination referenced by an X.25 route cannot be deleted.

The last route to a destination referenced by the redirect function destination parameter cannot be deleted.

The last route to a destination point code that still exists in the Mated Node Relay (MRN) table cannot be deleted until the point code is deleted from the MRN table.

The last route to a destination point code that still exists in the Concerned Secondary Point Code (CSPC) table cannot be deleted until the point code is deleted from the CSPC table.

If the destination point codes associated with the routeset are referenced by GTT, then the last route cannot be deleted. If the last route to a destination point code is referenced by a GTT, then the route cannot be deleted until one of the following actions is performed:

- Delete the GTT using the route's destination.
- Change the route used by the GTT to a route using a different destination.
- Add another route using the same destination.

The NRT feature must be turned on before the **dpc/dpca/dpci/dpcn/dpcn24** parameter can be specified.

When using network routing, if the destination point code has a value of * in the *nc* field, the *ncm* field must also be * (for example, **dpc=21-*-***).

If the routeset does not contain routes, then the **all=yes** parameter cannot be specified.

The last route to a destination that contains exception routes cannot be deleted.

The value of the **dpc/dpca/dpci/dpcn/dpcn24** parameter cannot exist in the Application Filter table.

The last route to a destination point code that still exists in the Prepaid SMS Options (PPSOPTS) table cannot be deleted until the point code is deleted from the PPSOPTS table.

If multiple routes are assigned to a point code, then the route that uses the proxy linkset must be the final route that is deleted.

Notes

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (**s-**) and the private and spare point code subtype prefix (**ps-**). All of the point code types support the private (internal) point code subtype prefix (**p-**).

Output

```
dlt-rte:dpc=1-1-1:lsn=ls01
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
DLT-RTE: MASP A - COMPLTD
;
```

In the following example, the GTT and X.25 Gateway features are turned on.

```
dlt-rte:dpc=2-2-2:all=yes
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
WARNING - ROUTE MAY BE REFERENCED BY MAP, CSPC, OR X25 RTE.
DLT-RTE: MASP A - COMPLTD
;
```

In the following example, only the GTT feature is turned on.

```
dlt-rte:dpc=2-2-2:all=yes
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
WARNING - ROUTE MAY BE REFERENCED BY MAP OR CSPC.
DLT-RTE: MASP A - COMPLTD
;
```

In the following example, only the X.25 Gateway feature is turned on.

```
dlt-rte:dpc=2-2-2:all=yes
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
WARNING - ROUTE MAY BE REFERENCED BY X25 RTE.
DLT-RTE: MASP A - COMPLTD
;
```

dlt-rtx

Delete Exception Route

Use this command to delete an exception route entry. When parameters **all=yes** and **force=yes** are specified, all exception route entries associated with the destination point code are deleted.

Keyword: dlt-rtx

Related Commands: chg-rtx, ent-rtx, rtrv-rtx

Command Class: Database Administration

Parameters

NOTE: The following parameters are no longer available: **all**, **force**

:dpc= (mandatory)

ANSI destination point code with subfields *network indicator-network-cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Range: p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001-005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006-255**.

The point code **000-000-000** is not a valid point code.

:dpci= (mandatory)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:dpcn= (mandatory)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn, prefix-nnnnn-gc, prefix-m1-m2-m3-m4, prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:dpcn24= (mandatory)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:all= (optional)

Use the **all=yes** parameter with the **force=yes** parameter to delete all exception route entries associated with the DPC.

Range: **yes**

:cic= (optional)

Starting Circuit Identification Code. This parameter is used alone or together with the **ecic** parameter as exception routing criteria for the specified exception route.

Range: **0-16383**

:ecic= (optional)

Ending Circuit Identification Code. This parameter, together with the **cic** parameter defines the CIC range that is used as exception routing criteria for the specified exception route.

Range: **16383**

:force= (optional)

The **force** parameter is used with the **all=yes** parameter to delete all exception routes for the specified DPC.

Range: **yes**

:ilsn= (optional)

Incoming Link Set Name. This parameter contains the name of the originating linkset. The parameter value is used as part of the exception routing criteria for the specified exception route.

Range: *aaaaaaaa*
1 alphabetic character followed by up to 9 alphanumeric characters.

:lsn= (optional)

Linkset Name. This parameter provides the name of the linkset associated with the specified exception route.

Range: *aaaaaaaa*
1 alphabetic character followed by up to 9 alphanumeric characters.

:opc= (optional)

ANSI origination point code with subfields *network indicator-network-cluster-network cluster member* (*ni-nc-ncm*). The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Range: **p-, 000-255**
Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).
prefix—p-
When **chg-sid:pctype=ansi** is specified, *ni = 000* is not valid.
When **chg-sid:pctype=ansi** is specified, *nc = 000* is not valid if *ni = 001-005*.
When **chg-sid:pctype=ansi** is specified, *nc = 000* is valid if *ni = 006-255*.
The point code **000-000-000** is not a valid point code.

:opci= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**
Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).
prefix—s-, p-, ps-
zone—0-7
area—000-255
id—0-7
The point code **0-000-0** is not a valid point code.

:opcn= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The prefix subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:opcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:si= (optional)

Service Indicator. This parameter is used as part of the exception routing criteria for the specified exception route.

Range: **3-15**

Example

dlt-rtx:dpca=1-1-1:opc:2-3-3:lsn=lset1

dlt-rtx:dpca=1-2-1:si=3:lsn=lset2

dlt-rtx:dpca=1-3-1:ilsn=lset2:lsn=lset3

dlt-rtx:dpci=2-100-1:ilsn=lset2:lsn=lset4

dlt-rtx:dpci=2-100-1:si=5:lsn=lset5

dlt-rtx:dpci=2-100-1:si=6:all=yes:force=yes

dlt-rtx:dpci=2-100-1:opc=8-*-*:all=yes:force=yes

Dependencies

Only one of the **opc**, **ilns**, **cic**, or **si** parameters can be specified for an exception route entry.

The **lsn** parameter must be specified if the **all** parameter is not specified.

If the **ecic** parameter is specified, the **cic** parameter must also be specified.

The **ecic** parameter value cannot be less than the **cic** parameter value.

The **opc** parameter value cannot be the same as the **dpc** parameter value.

The Origin-Based MTP Routing feature must be enabled and turned on before this command can be entered.

The linkset name, as defined by the **ilsn** or **lsn** parameter, must exist.

The specified combination of exception route parameter conditions must exist.

The **lsn** parameter cannot be specified if the **all=yes** parameter is specified.

To delete all exception routes for DPC per criteria, specify the **force=yes** and **all=yes** parameters.

The value specified for the destination point code must be a full point code and not a cluster or network point code.

Output

Delete a specific exception route.

```
dlt-rtx:dpc=1-3-1:ilsn=lset2:lsn=lset3
stdcfg2b 06-05-19 18:20:11 EST EAGLE 35.0.0
DLT-RTX: MASP A - COMPLTD
```

Delete all exception routes for a specific exception criteria.

```
dlt-rtx:dpci=2-100-2:opc=8-*-*:all=yes:force=yes
stdcfg2b 06-05-19 18:20:11 EST EAGLE 35.0.0
DLT-RTX: MASP A - COMPLTD
```

dlt-sccp-serv

Delete SCCP Service

Use this command to remove entries from the SCCP Service table. The command may either remove a PC from a group or remove the entire group.

Keyword: **dlt-sccp-serv**

Related Commands: **chg-sccp-serv, rtrv-sccp-serv**

Command Class: Basic

Parameters

:serv= (mandatory)

The name of the service being deleted.

Range: **gflex, gport**

:all= (optional)

Deletes all point codes from a service.

Range: **no, yes**

:pc1= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001-005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006-255**.

The point code **000-000-000** is not a valid point code.

:pc1/pca1/pci1/pcn1/pcn241= (optional)

Post GTT-translated point code 1.

:pc2= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Synonym: **pca2**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:pc2/pca2/pci2/pcn2/pcn242= (optional)

Post GTT-translated point code 2.

:pc3= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Synonym: **pca3**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:pc3/pca3/pci3/pcn3/pcn243= (optional)

Post GTT-translated point code 3.

:pc4= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:pc4/pca4/pci4/pcn4/pcn244= (optional)

Post GTT-translated point code 4.

:pci1= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

:pci2= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

:pci3= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

:pci4= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

:pcn1= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-*

m2-m3-m4-gc). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:pcn2= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:pcn241= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

:pcn242= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

:pcn243= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

:pcn244= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

:pcn3= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: s-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:pcn4= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: s-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

Example

To delete a specified PC from the G-Port service:

dlt-sccp-serv:serv=gport:pca2=3-3-3

To delete all PCs from the G-Port service and to specify a network PC to delete:

dlt-sccp-serv:serv=gport:all=yes:pca1=1-1-1

Dependencies

At least one PC must be specified.

The specified PC must already exist in the SCCP Service table.

The same point code cannot be specified more than once.

The specified point code must already exist in the specified MRN set in the SCCP-SERV table.

At least one point code must be specified.

The specified MRN set must already exist in the SCCP-SERV table portion of the MRN table.

Notes

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-).

Output

```
dlt-sccp-serv:serv=gport:pca2=3-3-3
tekelecstp 05-12-20 08:54:59 EST EAGLE 35.0.0
DLT-SCCP-SRV: MASP A - COMPLTD
;
```

dlt-scr-aftpc

Delete Allowed Affected Point Code

Use this command to remove a specific screening reference in the allowed affected point code category.

Keyword: dlt-scr-aftpc

Related Commands: chg-scr-aftpc, ent-scr-aftpc, rtrv-scr-aftpc

Command Class: Database Administration

Parameters

:sr= (mandatory)

Screening reference. This parameter specifies the point code's unique screening reference name.

Range: ayy

1 alphabetic character followed by up to 3 alphanumeric characters

:ssn= (mandatory)

The subsystem number. An asterisk (*) indicates the full range of values from 1-255.

Range: 1-255 *

:area= (optional)

The ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from 000-255.

Range: 000-255 *

:id= (optional)

The ITU international ID. The parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from 0-7.

Range: 0-7 *

:msa= (optional)

The 24-bit ITU-national main signaling area (*msa*) value. It specifies the *msa* of the point code *msa-ssa-sp*. An asterisk (*) indicates the full range of values from 000-255.

Range: 000-255 *

:nc= (optional)

The network cluster (*nc*) value. This parameter specifies one or more *nc* values for the network indicator (*ni*) and network cluster member (*ncm*) values specified in the **ni** and **ncm** parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*. You can specify a single value or a range of values. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:ncm= (optional)

The network cluster member (*ncm*) value. This parameter specifies one or more **ncm** values for the network indicator (*ni*) and network cluster (*nc*) values identified in the **ni** and **nc** parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*. You can specify a single value or a range of values. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 ***

:ni= (optional)

The network indicator (*ni*) value. This parameter specifies one or more *ni* values for the network cluster (*nc*) and network cluster member (*ncm*) values identified in the **nc** and **ncm** parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*. You can specify a single value or a range of values. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 ***

:npc= (optional)

The ITU national point code. An asterisk (*) indicates the full range of values from **00000–16383**.

NOTE: Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see "Converting ITU National Point Code Formats" in Appendix A for information on converting the point code format.

Range: **00000-16383 ***

:pcst= (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (**s-**).

Range: **none, s**

Default: **none**

:sp= (optional)

The 24-bit ITU national signaling point. This parameter specifies the signaling point (*sp*) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:ssa= (optional)

The 24-bit ITU national sub signaling area. This parameter specifies the sub signaling area (*ssa*) in the point code represented by the format *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:zone= (optional)

The ITU international zone. The parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7, ***

Example

dlt-scr-aftpc:sr=iec:ni=240:nc=010:ncm=010:ssn=012

dlt-scr-aftpc:sr=aft1:zone=1:area=2:id=3:ssn=1:pcst=s

Dependencies

A complete point code must be specified, and must be one, and only one of the four point code parameter combinations: **ni-nc-ncm**; **zone-area-id**; **msa-ssa-sp**; or **npc**.

The affected point code or point code range (given by **ni-nc-ncm/ssn** or **zone-area-id** or **msa-ssa-sp** or **npc**) to be removed from the table must already exist in the screening reference.

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

If asterisk values are specified, the range cannot overlap or contain any of the point code ranges that already exist in the allowed affected point code screening category.

If **zone=*** is specified, **area=*** and **id=*** must be specified.

If **area=*** is specified, **id=*** must be specified.

If **ssa=*** is specified, **sp=*** must be specified.

If **msa=*** is specified, **ssa=*** and **sp=*** must be specified.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc** parameter is specified as an asterisk (**nc=***), the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **ncm** parameter is specified as a single value, or a range other than the full range of **000-255**, the **ni** and the **nc** parameters must be specified with a single value.

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range **000-255**.

The character **c** is not a valid value for the **ni**, **nc**, **ncm**, **zone**, **area**, **id**, **msa**, **ssa**, **sp**, and **npc** parameters.

The specified screening reference (**sr**) must already exist in the database.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The spare point code subtype prefix (**s-**) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** parameter cannot be specified for ANSI and ITU-N24 point codes.

No AFTPC screening reference (**sr**) can be deleted that is referenced by an entity in another screening set.

You cannot remove the **sr**, **ni**, **nc**, **ncm**, and **ssn** parameters, or the **zone**, **area**, **id** and **npc** parameters, if they are the last entry in the screening reference and the screening reference is part of a screen set.

If only one entry exists, the **sr** must not be referenced by another screening table. If the **sr** is not referenced by another screening table, the entire screening table is deleted.

Notes

The asterisk is a parameter value indicating that the gateway screening process is screening all values for that parameter in the MSU. The asterisk parameter value does not mean that multiple entries whose values may be in the range implied by the asterisk will be removed. The only entry that will be removed by this command when the asterisk is specified as a parameter value is the entry that contains an asterisk as that parameter value.

For example, if the **dlt-scr-aftpc:sr=ied:ni=240:nc=010:ncm="":ssn=*** command is entered, the only entry that will be removed from the database is the entry in screening reference **iec** that contains the values **ni=240**, **nc=010**, **ncm=***, and **ssn=***. For an entry to be specified in this command with

asterisks as parameter values, that entry must be shown in the **rtrv-scr-aftpc** output with asterisks as the same parameter values specified in the **dlt-scr-aftpc** command.

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, **ni=025&&100** specifies all network indicators for ANSI point codes from 25 to 100.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

```
dlt-scr-aftpc:sr=iec:ni=240:nc=010:ncm=010:ssn=012
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
DLT-SCR-AFTPC: SCREEN SET AFFECTED - IEC 25% FULL
DLT-SCR-AFTPC: MASP A - COMPLTD
;
```

Legend

DLT-SCR-AFTPC—The command entered that caused this output. This is echoed to the printer as a reference.

SCREEN SET AFFECTED—Identifies the screen set that was affected by the command. The screen set name is shown

% FULL—Indicates the relative size of the screen set.

dlt-scr-blkdpc

Delete Blocked DPC

Use this command to remove a specific screening reference from the blocked DPC category. Deleting the last point code (**c-c-c**) also deletes the screening reference.

Keyword: **dlt-scr-blkdpc**

Related Commands: **chg-scr-blkdpc**, **ent-scr-blkdpc**, **rtrv-scr-blkdpc**

Command Class: Database Administration

Parameters

:sr= (mandatory)

Screening reference. This parameter specifies the point code's unique screening reference name.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

:area= (optional)

The ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255** *, C

:id= (optional)

The ITU international ID. The parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7** *, C

:msa= (optional)

The 24-bit ITU-national main signaling area (*msa*) value. It specifies the *msa* of the point code represented by *msa-ssa-spt*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255** *, C

:nc= (optional)

The network cluster (*nc*) value. This parameter specifies one or more *nc* values for the network indicator (*ni*) and network cluster member (*ncm*) values specified in the **ni** and **ncm** parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*. You can specify a single value or a range of values. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 *, C**

:ncm= (optional)

The network cluster member (*ncm*) value. This parameter specifies one or more *ncm* values for the network indicator (*ni*) and network cluster (*nc*) values identified in the **ni** and **nc** parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*. You can specify a single value or a range of values. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 *, C**

:ni= (optional)

The network indicator (*ni*) value. This parameter specifies one or more *ni* values for the network cluster (*nc*) and network cluster member (*ncm*) values identified in the **nc** and **ncm** parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*. You can specify a single value or a range of values. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 *, C**

:npc= (optional)

The ITU national point code. An asterisk (*) indicates the full range of values from **00000–16383**.

NOTE: Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see "Converting ITU National Point Code Formats" in Appendix A for information on converting the point code format.

Range: **00000-16383 *, C**

:pcst= (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (**s**-).

Range: **none, s**

Default: **none**

:sp= (optional)

The 24-bit ITU national signaling point. This parameter specifies the signaling point (*sp*) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 *, C**

:ssa= (optional)

The 24-bit ITU national sub signaling area. This parameter specifies the sub signaling area (*ssa*) in the point code represented by the format *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 *, C**

:zone= (optional)

The ITU international zone. The parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7, *, C**

Example

dlt-scr-blkdpc:sr=iec:ni=240:nc=010:ncm=010

dlt-scr-blkdpc:sr=bdp1:npc=128:pcst=s

Dependencies

At least one optional parameter must be specified.

A complete point code must be specified, using the **ni-nc-ncm**, **zone-area-id**, **msa-ssa-sp**, or **npc** combination unless a value of **c** for “continue” is specified.

The blocked DPC or blocked DPC range specified by **ni-nc-ncm**; **zone-area-id**; **msa-ssa-sp**; or the **npc** parameter must already exist in the specified screening reference.

The point code to delete cannot have the value **c-c-c** if there is another point code in the blocked screen reference. The last screen reference to be deleted must have **ni**, **zone**, **msa**, or **npc** equal to **c**.

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

If **msa=*** is specified, **ssa=*** and **sp=*** must be specified.

If the **msa=c** parameter is specified, then the **ssa** and the **sp** parameters must have a value of **c** or must not be specified. If the **msa=c** parameter is specified, and the **ssa** and the **sp** parameters are not specified, then the **ssa** and **sp** parameters default to a value of **c**.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc** parameter is specified as an asterisk (**nc=***), the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **ncm** parameter is specified as a single value, or a range other than the full range of **000-255**, the **ni** and the **nc** parameters must be specified with a single value.

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range **000-255**.

If the **ni=c** parameter is specified, then the **nc** and the **ncm** parameters must have a value of **c** or must not be specified. If the **ni=c** parameter is specified, and the **nc** and the **ncm** parameters are not specified, then the **nc** and **ncm** parameters default to a value of **c**.

The last screening reference (**sr**) entry cannot be deleted if it is referenced by another screen.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The spare point code subtype prefix (**s-**) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** parameter cannot be specified for ANSI and ITU-N24 point codes.

If the **zone=c** parameter is specified, then the **area** and the **id** parameters must have a value of **c** or must not be specified. If the **zone=c** parameter is specified, and the **area** and the **id** parameters are not specified, then the **area** and **id** parameters default to a value of **c**.

Notes

If the screening reference is not referenced by any other screen, and if all entries are removed, the entire screening reference can be removed using **ni-nc-ncm**, **zone-area-id**, or **msa-ssa-sp** equal to **c-c-c** or **npc=c**. If more than one entry exists, **ni-nc-ncm**, **zone-area-id**, **msa-ssa-sp**, or **npc** must not equal **c**.

The asterisk is a parameter value indicating that the gateway screening process is screening all values for that parameter in the MSU. The asterisk parameter value does not mean that multiple entries whose values may be in the range implied by the asterisk will be removed. The only entry that will be removed by this command when the asterisk is specified as a parameter value is the entry that contains an asterisk as that parameter value.

For example, if the **dlt-scr-blkdpc:sr=ied:ni=240:nc=010:nccm=":ssn=*** command is entered, the only entry that will be removed from the database is the entry in screening reference **iec** that contains the values **ni=240**, **nc=010**, **ncm=***, and **ssn=***. For an entry to be specified in this command with asterisks as parameter values, that entry must be shown in the **rtrv-scr-blkdpc** output with asterisks as the same parameter values specified in the **dlt-scr-blkdpc** command.

The asterisk (*) value cannot be specified with the character **c**. For example, a point code **c-c-*** is not allowed.

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, **ni=025&&100** specifies all network indicators for ANSI point codes from **25** to **100**.

The character **c** is used in the blocked DPC screens to allow the screening process to continue for messages with point codes that do not match any point codes in the blocked DPC screens. When screening for a blocked DPC and the point code being screened does not match any of the point codes in the blocked DPC screens, the message is not rejected and the screening process continues.

There must be an entry in each unique blocked DPC screening reference to allow the screening process to continue. This entry consists of a screening reference, point code, **nsfi**, and **nsr**. The point code is in the form of subfields *ni-nc-ncm*, *zone-area-id*, or *msa-ssa-sp* equal to **c-c-c** or **npc=c**. When the character **c** is specified, the **nsfi** and **nsr** parameters must be specified.

When the point code does not match any entries in the blocked DPC screens, the screening process is directed to the screening reference with the point code **c-c-c**. The **nsfi** and **nsr** in this entry are examined to determine the next step in the screening process.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

```
dlt-scr-blkdpc:sr=iec:ni=240:nc=010:ncm=010
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
DLT-SCR-BLKDPC: SCREEN SET AFFECTED - IEC 25% FULL
DLT-SCR-BLKDPC: MASP A - COMPLTD
;
```

Legend

DLT-SCR-BLKDPC—The command entered that caused this output. This is echoed to the printer as a reference.

SCREEN SET AFFECTED—Identifies the screen set that was affected by the command. The screen set name is provided.

% FULL—Indicates the relative size of the screen set.

dlt-scr-blkopc

Delete Blocked OPC

Use this command to remove a specific screening reference from the blocked OPC category.

Keyword: **dlt-scr-blkopc**

Related Commands: **chg-scr-blkopc**, **ent-scr-blkopc**, **rtrv-scr-blkopc**

Command Class: Database Administration

Parameters

:sr= (mandatory)

Screening reference. This parameter specifies the point code's unique screening reference name.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

:area= (optional)

The ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255** *, C

:id= (optional)

The ITU international ID. The parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7**, *

:msa= (optional)

The 24-bit ITU-national main signaling area (*msa*) value. It specifies the *msa* of the point code represented by *msa-ssa-spt*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255** *, C

:nc= (optional)

The network cluster (*nc*) value. This parameter specifies one or more *nc* values for the network indicator (*ni*) and network cluster member (*ncm*) values specified in the **ni** and **ncm** parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*. You can specify a single value or a range of values. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255** *, C

:ncm= (optional)

The network cluster member (*ncm*) value. This parameter specifies one or more *ncm* values for the network indicator (*ni*) and network cluster (*nc*) values identified in the **ni** and **nc** parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*. You can specify a single value or a range of values. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255** *, C

:ni= (optional)

The network indicator (*ni*) value. This parameter specifies one or more *ni* values for the network cluster (*nc*) and network cluster member (*ncm*) values identified in the **nc** and **ncm** parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*. You can specify a single value or a range of values. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255** *, C

:npc= (optional)

The ITU national point code. An asterisk (*) indicates the full range of values from **00000–16383**.

NOTE: Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see "Converting ITU National Point Code Formats" in Appendix A for information on converting the point code format.

Range: **00000-16383** *, C

:pcst= (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (**s**).

Range: **none**, s

Default: none

:sp= (optional)

The 24-bit ITU national signaling point. This parameter specifies the signaling point (*sp*) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: 000-255 *, C

:ssa= (optional)

The 24-bit ITU national sub signaling area. This parameter specifies the sub signaling area (*ssa*) in the point code represented by the format *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: 000-255 *, C

:zone= (optional)

The ITU international zone. The parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0-7**.

Range: 0-7, *, C

Example

dlt-scr-blkopc:sr=iec:ni=240:nc=010:ncm=010

dlt-scr-blkopc:sr=bop1:npc=128:pcst=s

Dependencies

A complete point code must be specified, using the **ni-nc-ncm**, **zone-area-id**, **msa-ssa-sp**, or **npc** combination unless a value of **c** for “continue” is specified.

The blocked OPC specified by **ni-nc-ncm**; **zone-area-id**; **msa-ssa-sp**; or the **npc** parameter must already exist in the screening reference or within an existing range of OPCs.

The point code to delete cannot have the value **c-c-c** if there is another point code in the blocked screen reference. The last screen reference to be deleted must have **ni**, **zone**, **msa**, or **npc** equal to **c**.

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

If the **msa=c** parameter is specified, then the **ssa** and the **sp** parameters must have a value of **c** or must not be specified. If the **msa=c** parameter is specified, and the **ssa** and the **sp** parameters are not specified, then the **ssa** and **sp** parameters default to a value of **c**.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc** parameter is specified as an asterisk (**nc=***), the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **ncm** parameter is specified as a single value, or a range other than the full range of **000-255**, the **ni** and the **nc** parameters must be specified with a single value.

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range **000-255**.

If the **ni=c** parameter is specified, then the **nc** and the **ncm** parameters must have a value of **c** or must not be specified. If the **ni=c** parameter is specified, and the **nc** and the **ncm** parameters are not specified, then the **nc** and **ncm** parameters default to a value of **c**.

The spare point code subtype prefix (**s-**) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** parameter cannot be specified for ANSI and ITU-N24 point codes.

The Spare Point Code Support feature must be enabled before the **pcst** and **npcst** parameters can be specified.

The last screening reference (**sr**) entry cannot be deleted if it is referenced by another screen.

If the **zone=c** parameter is specified, then the **area** and the **id** parameters must have a value of **c** or must not be specified. If the **zone=c** parameter is specified, and the **area** and the **id** parameters are not specified, then the **area** and **id** parameters default to a value of **c**.

Notes

If the screening reference is not referenced by any other screen, and if all entries are removed, the entire screening reference can be removed using **ni-nc-ncm**, **zone-area-id**, or **msa-ssa-sp** equal to **c-c-c** or **npc=c**. If more than one entry exists, **ni-nc-ncm**, **zone-area-id**, **msa-ssa-sp**, or **npc** must not equal **c**.

The asterisk is a parameter value indicating that the gateway screening process is screening all values for that parameter in the MSU. The asterisk parameter value does not mean that multiple entries whose values may be in the range implied by the asterisk will be removed. The only entry that will be removed by this command when the asterisk is specified as a parameter value is the entry that contains an asterisk as that parameter value.

For example, if the **dlt-scr-blkopc:sr=ied:ni=240:nc=010:nccm=":ssn=*** command is entered, the only entry that will be removed from the database is the entry in screening reference **iec** that contains the values **ni=240**, **nc=010**, **ncm=***, and **ssn=***. For an entry to be specified in this command with asterisks as parameter values, that entry must be shown in the **rtrv-scr-blkopc** output with asterisks as the same parameter values specified in the **dlt-scr-blkopc** command.

The asterisk (*) value cannot be specified with the character **c**. For example, a point code **c-c-*** is not allowed.

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, **ni=025&&100** specifies all network indicators for ANSI point codes from **25** to **100**.

The character **c** is used in the blocked OPC screens to allow the screening process to continue for messages with point codes that do not match any point codes in the blocked OPC screens. When screening for a blocked OPC and the point code being screened does not match any of the point codes in the blocked DPC screens, the message is not rejected and the screening process continues.

There must be an entry in each unique blocked OPC screening reference to allow the screening process to continue. This entry consists of a screening reference, point code, **nsfi**, and **nsr**. The point code is either **npc=c**, or in the form of subfields **ni-nc-ncm**, **zone-area-id**, or **msa-ssa-sp** equal to **c-c-c**. When the character **c** is specified, the **nsfi** and **nsr** must be specified.

When the point code does not match any entries in the blocked OPC screens, the screening process is directed to the screening reference with the point code **c-c-c**. The **nsfi** and **nsr** in this entry are examined to determine the next step in the screening process.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

```

dlt-scr-blkopc:sr=iec:ni=240:nc=010:ncm=010
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
DLT-SCR-BLKOPC: SCREEN SET AFFECTED - IEC 25% FULL
DLT-SCR-BLKOPC: MASP A - COMPLTD
;

```

Legend

DLT-SCR-BLKOPC—The command entered that caused this output. This is echoed to the printer as a reference.

SCREEN SET AFFECTED—Identifies the screen set that was affected by the command. The screen set name is shown.

% FULL—Indicates the relative size of the screen set.

dlt-scr-cdpa**Delete Allowed Called Party Address**

Use this command to remove a specific screening reference from the allowed called party address category.

Keyword: dlt-scr-cdpa

Related Commands: chg-scr-cdpa, ent-scr-cdpa, rtrv-scr-cdpa

Command Class: Database Administration

Parameters

:sr= (mandatory)

Screening reference. This parameter specifies the point code's unique screening reference name.

Range: ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

:ssn= (mandatory)

The subsystem number. An asterisk (*) indicates the full range of values from 1-255.

Range: 1-255 *

:area= (optional)

The ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from 000-255.

Range: 000-255 *, C

:id= (optional)

The ITU international ID. The parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from 0-7.

Range: 0-7, *

:msa= (optional)

The 24-bit ITU national signaling point. This parameter specifies the signaling point (*sp*) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from 000-255.

Range: 000-255 *

:nc= (optional)

The network cluster (*nc*) value. This parameter specifies one or more *nc* values for the network indicator (*ni*) and network cluster member (*ncm*) values specified in the **ni** and **ncm** parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*. You can specify a single value or a range of values. An asterisk (*) indicates the full range of values from 000-255.

Range: 000-255 *

:ncm= (optional)

The network cluster member (*ncm*) value. This parameter specifies one or more *ncm* values for the network indicator (*ni*) and network cluster (*nc*) values identified in the **ni** and **nc** parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*. You can specify a single value or a range of values. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 ***

:ni= (optional)

The network indicator (*ni*) value. This parameter specifies one or more *ni* values for the network cluster (*nc*) and network cluster member (*ncm*) values identified in the **nc** and **ncm** parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*. You can specify a single value or a range of values. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 ***

:npc= (optional)

The ITU national point code. An asterisk (*) indicates the full range of values from **00000–16383**.

NOTE: Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see "Converting ITU National Point Code Formats" in Appendix A for information on converting the point code format.

Range: **00000-16383 *, C**

:pcst= (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range: **none, s**

Default: **none**

:scmgfid= (optional)

The SCCP management (SCMG) format ID, which consists of a one-octet field and uniquely defines the function and format of each SCMG message. You can specify a single value or a range of values. An asterisk (*) indicates the full range of values from **1–255**.

Range: **1-255 ***

:sp= (optional)

The 24-bit ITU national signaling point. This parameter specifies the signaling point (*sp*) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:ssa= (optional)

The 24-bit ITU national sub signaling area. This parameter specifies the sub signaling area (*ssa*) in the point code represented by the format *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:zone= (optional)

The ITU international zone. The parameter specifies the *zone* in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7 *, C**

Example

dlt-scr-cdpa:sr=iec:ni=240:nc=010:ncm=010:ssn=012

dlt-scr-

cgpa:sr=cgpa:zone=1:area=2:id=3:ssn=1:sccpmt=9:ri=*:pcst=s

Dependencies

A complete point code must be specified, and must be one and only one of the four point code parameter combinations: **ni-nc-ncm**; **zone-area-id**; **msa-ssa-sp**; or **npc**, except in the special case of entering **c** for "continue."

The CDPA point code, **ssn**, and **scmgfid** to be removed must exist in the CDPA entity set.

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc** parameter is specified as an asterisk (**nc=***), the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **ncm** parameter is specified as a single value, or a range other than the full range of **000-255**, the **ni** and the **nc** parameters must be specified with a single value.

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range **000-255**.

The specified screening reference (**sr**) must already exist in the database.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The spare point code subtype prefix (**s-**) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** parameter cannot be specified for ANSI and ITU-N24 point codes.

A CDPA screening reference (**sr**) cannot be deleted if it referenced by an entity in another screening set.

If the **ssn** parameter is a value other than **1**, the **scmgfid** parameter cannot be specified.

If the **ssn=1** parameter is specified, the **scmgfid** parameter must be specified.

Notes

If only one entry exists and is not referenced by another screening table, the entire screening table is removed.

The asterisk is a parameter value indicating that the gateway screening process is screening all values for that parameter in the MSU. The asterisk parameter value does not mean that multiple entries whose values may be in the range implied by the asterisk will be removed. The only entry that will be removed by this command when the asterisk is specified as a parameter value is the entry that contains an asterisk as that parameter value.

For example, if the **dlt-scr-cdpa:sr=ied:ni=240:nc=010:ncm="":ssn=*** command is entered, the only entry that will be removed from the database is the entry in screening reference **ied** that contains the values **ni=240**, **nc=010**, **ncm=***, and **ssn=***. For an entry to be specified in this command with asterisks as parameter values, that entry must be shown in the **rtrv-scr-cdpa** output with asterisks as the same parameter values specified in the **dlt-scr-cdpa** command.

A range of values is specified by separating the values that define the range by two ampersands (**&&**); for example, **:ni=025&&100** specifies all network indicators for ANSI point codes from **25** to **100**.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

```

dlt-scr-cdpa:sr=iec:ni=240:nc=010:ncm=010:ssn=012
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
DLT-SCR-CDPA: SCREEN SET AFFECTED - IEC 25% FULL
DLT-SCR-CDPA: MASP A - COMPLTD
;

```

Legend

DLT-SCR-CDPA—The command entered that caused this output. This is echoed to the printer as a reference.

SCREEN SET AFFECTED—Identifies the screen set that was affected by the command. The screen set name is shown.

% FULL—Indicates the relative size of the screen set.

dlt-scr-cgpa**Delete Allowed Calling Party Address**

Use this command to remove a specific screening reference from the allowed calling party address category.

Keyword: dlt-scr-cgpa

Related Commands: chg-scr-cgpa, ent-scr-cgpa, rtrv-scr-cgpa

Command Class: Database Administration

Parameters

:ri= (mandatory)

Routing indicator that provides routing instructions to the receiving signaling point. In gateway screening, messages may be screened based on the value of the routing indicator.

Range: dpc, gt, *

dpc— Allow a called party address with a routing indicator value of “DPC/SSN.”

gt— Screening stops and gateway screening is bypassed as a forced pass.

*****— Allow both routing indicator values.

:sccpmt= (mandatory)

The SCCP message type. You can specify a single value or a range of values. An asterisk (*) indicates the full range of values.

Range: 9, 10, 17, 18, *

9, *— UDT

10, *— UDTS

17, *— XU DT

18, *— XU DTS

:sr= (mandatory)

Screening reference. This parameter specifies the point code’s unique screening reference name.

Range: ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

:ssn= (mandatory)

The subsystem number. An asterisk (*) indicates the full range of values from 1-255.

Range: 1-255 *

:area= (optional)

The ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from 000–255.

Range: 000-255 *

:id= (optional)

The ITU international ID. The parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from 0–7.

Range: 0-7, *

:msa= (optional)

The 24-bit ITU-national main signaling area (*msa*) value. It specifies the *msa* of the point code represented by *msa-ssa-spt*. An asterisk (*) indicates the full range of values from 000-255.

Range: 000-255 *

:nc= (optional)

The network cluster (*nc*) value. This parameter specifies one or more *nc* values for the network indicator (*ni*) and network cluster member (*ncm*) values specified in the **ni** and **ncm** parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*. You can specify a single value or a range of values. An asterisk (*) indicates the full range of values from 000–255.

Range: 000-255 *

:ncm= (optional)

The network cluster member (*ncm*) value. This parameter specifies one or more *ncm* values for the network indicator (*ni*) and network cluster (*nc*) values identified in the **ni** and **nc** parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*. You can specify a single value or a range of values. An asterisk (*) indicates the full range of values from 000–255.

Range: 0-255 *

:ni= (optional)

The network indicator (*ni*) value. This parameter specifies one or more *ni* values for the network cluster (*nc*) and network cluster member (*ncm*) values identified in the **nc** and **ncm** parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*. You can specify a single value or a range of values. An asterisk (*) indicates the full range of values from 000–255.

Range: 0-255 *

:npc= (optional)

The ITU national point code. An asterisk (*) indicates the full range of values from 00000–16383.

NOTE: Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see "Converting ITU National Point Code Formats" in Appendix A for information on converting the point code format.

Range: 00000-16383 *

:pcst= (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range: none, s

Default: none

:scmgfid= (optional)

The SCCP management (SCMG) format ID, which consists of a one-octet field and uniquely defines the function and format of each SCMG message. You can specify a single value or a range of values. An asterisk (*) indicates the full range of values from 1–255.

Range: 1-255 *

:sp= (optional)

The 24-bit ITU national signaling point. This parameter specifies the signaling point (*sp*) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from 000-255.

Range: 000-255 *

:ssa= (optional)

The 24-bit ITU national sub signaling area. This parameter specifies the sub signaling area (*ssa*) in the point code represented by the format *msa-ssa-sp*. An asterisk (*) indicates the full range of values from 000-255.

Range: 000-255 *

:zone= (optional)

The ITU international zone. The parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from 0-7.

Range: 0-7 *

Example

dlt-scr-cgpa:sr=iec:ni=240:nc=010:ncm=010:ssn=012

dlt-scr-cgpa:sr=cdp1:ni=5:nc=5:ncm=5:ssn=1:ri=dpc:sccpmt=009

dlt-scr-

cgpa:sr=cgpa:zone=1:area=2:id=3:ssn=1:sccpmt=9:ri=*:pcst=s

Dependencies

A complete point code must be specified, and must be one, and only one of the four point code parameter combinations: **ni-nc-ncm**; **zone-area-id**; **msa-ssa-sp** ; or **npc**.

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

The CGPA point code, **ri**, **ssn**, and **sccpmt** to be removed must exist in the CGPA entity set.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000-255**

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc** parameter is specified as an asterisk (**nc=***), the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **ncm** parameter is specified as a single value, or a range other than the full range of **000-255**, the **ni** and the **nc** parameters must be specified with a single value.

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range **000-255**.

The specified screening reference (**sr**) must already exist in the database.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The spare point code subtype prefix (**s-**) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** parameter cannot be specified for ANSI and ITU-N24 point codes.

A CGPA screening reference (**sr**) cannot be deleted if it is referenced by an entity in another screening set.

Notes

The asterisk is a parameter value indicating that the gateway screening process is screening all values for that parameter in the MSU. The asterisk parameter value does not mean that multiple entries whose values may be in the range implied by the asterisk will be removed. The only entry that will be removed by this command when the asterisk is specified as a parameter value is the entry that contains an asterisk as that parameter value.

For example, if the **dlt-scr-cgpa:sr=ied:ni=240:nc=010:nccm=":ssn=*** command is entered, the only entry that will be removed from the database is the entry in screening reference **iec** that contains the values **ni=240**, **nc=010**, **ncm=***, and **ssn=***. For an entry to be specified in this command with asterisks as parameter values, that entry must be shown in the **rtrv-scr-cgpa** output with asterisks as the same parameter values specified in the **dlt-scr-cgpa** command.

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, **:ni=025&&100** specifies all network indicators for ANSI point codes from **25** to **100**.

The routing indicator in the calling party address provides routing instructions for the receiving signaling point. When the routing indicator specifies global title, the message is routed based on the global title digits. If the routing indicator specifies DPC, the message is routed based on the DPC/subsystem number in the calling party address.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

```
dlt-scr-cgpa:sr=iec:ni=240:nc=010:ncm=010:ssn=012
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
DLT-SCR-CGPA: SCREEN SET AFFECTED - IEC 25% FULL
DLT-SCR-CGPA: MASP A - COMPLTD
;
```

Legend

DLT-SCR-CGPA—The command entered that caused this output. This is echoed to the printer as a reference.

SCREEN SET AFFECTED—Identifies the screen set that was affected by the command. The screen set name is provided (such as IEC).

% FULL—Indicates the relative size of the screen set.

dlt-scr-destfld

Delete an Allowed DESTFLD

Use this command to remove a specific screening reference from the allowed affected destination field (DESTFLD) category.

Keyword: **dlt-scr-destfld**

Related Commands: **chg-scr-destfld**, **ent-scr-destfld**, **rtrv-scr-destfld**

Command Class: Database Administration

Parameters

:sr= (mandatory)

Screening reference. This parameter specifies the point code's unique screening reference name.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

:area= (optional)

The ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:id= (optional)

The ITU international ID. The parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7, ***

:msa= (optional)

The 24-bit ITU-national main signaling area (*msa*) value. It specifies the *msa* of the point code represented by *msa-ssa-spt*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:nc= (optional)

The network cluster (*nc*) value. This parameter specifies one or more *nc* values for the network indicator (*ni*) and network cluster member (*ncm*) values specified in the **ni** and **ncm** parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:ncm= (optional)

The network cluster member (*ncm*) value. This parameter specifies one or more *ncm* values for the network indicator (*ni*) and network cluster (*nc*) values identified in the **ni** and **nc** parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 ***

:ni= (optional)

The network indicator (*ni*) value. This parameter specifies one or more *ni* values for the network cluster (*nc*) and network cluster member (*ncm*) values identified in the **nc** and **ncm** parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 ***

:npc= (optional)

The ITU national point code. An asterisk (*) indicates the full range of values from **00000–16383**.

NOTE: Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see "Converting ITU National Point Code Formats" in Appendix A for information on converting the point code format.

Range: **00000-16383 ***

:pcst= (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range: **none, s**

Default: **none**

:sp= (optional)

The 24-bit ITU national signaling point. This parameter specifies the signaling point (*sp*) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:ssa= (optional)

The 24-bit ITU national sub signaling area. This parameter specifies the sub signaling area (*ssa*) in the point code represented by the format *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:zone= (optional)

The ITU international zone. The parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from 0–7.

Range: 0-7, *

Example

dlt-scr-destfld:sr=iec:ni=240:nc=010:ncm=010

dlt-scr-destfld:sr=dst1:zone=1:area=2:id=3:pcst=s

Dependencies

A complete point code must be specified, using the **ni-nc-ncm**, **zone-area-id**, **msa-ssa-sp**, or **npc** combination unless a value of **c** for “continue” is specified.

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

If the **zone=*** parameter is specified, then the **area=*** and the **id=*** parameters must be specified.

If the **area=*** parameter is specified, then the **id=*** parameter must be specified.

If the **ssa=*** parameter is specified, then the **sp=*** parameter must be specified.

If the **msa=*** parameter is specified, then the **ssa=*** and the **sp=*** parameters must be specified.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc** parameter is specified as an asterisk (**nc=***), the **ncm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **ncm** parameter is specified as a single value, or a range other than the full range of **000–255**, the **ni** and the **nc** parameters must be specified with a single value.

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range **000–255**.

The DESTFLD specified by **ni-nc-ncm**, **zone-area-id**, **msa-ssa-sp**, or the **npc** parameter must already exist in the screening reference.

If only one entry exists, the **sr** must not be referenced by another screening table. If the **sr** is not referenced by another screening table, the entire screening table is deleted.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The spare point code subtype prefix (**s-**) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** parameter cannot be specified for ANSI and ITU-N24 point codes.

If the **nsfi=fail** parameter is specified, then the **n timer**, **nc**, **nn cm**, **n timer**, **n timer**, **n timer**, **n timer**, **n timer**, **n timer**, and **n timer** parameters cannot have a value of **c**.

Notes

The asterisk is a parameter value indicating that the gateway screening process is screening all values for that parameter in the MSU. The asterisk parameter value does not mean that multiple entries whose values may be in the range implied by the asterisk will be removed. The only entry that will be removed by this command when the asterisk is specified as a parameter value is the entry that contains an asterisk as that parameter value.

For example, if the **dlt-scr-destfld:sr=ied:ni=240:nc=010:ncm="":ssn=*** command is entered, the only entry that will be removed from the database is the entry in screening reference **ied** that contains the values **ni=240**, **nc=010**, **ncm=***, and **ssn=***. For an entry to be specified in this command with

asterisks as parameter values, that entry must be shown in the **rtrv-scr-destfld** output with asterisks as the same parameter values specified in the **dlt-scr-destfld** command.

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, **:ni=025&&100** specifies all network indicators for ANSI point codes from 25 to 100.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

dlt-scr-destfld:sr=iec:ni=240:nc=010:ncm=010

```
rlghncxa03w 04-02-13 11:49:47 EST EAGLE 31.3.0
DLT-SCR-DESTFLD: SCREEN SET AFFECTED - SS01 25% FULL
DLT-SCR-DESTFLD: MASP A - COMPLTD
```

;

dlt-scr-dpc

Delete Allowed DPC

Use this command to remove a specific screening reference from the allowed DPC category.

Keyword: **dlt-scr-dpc**

Related Commands: **chg-scr-dpc, ent-scr-dpc, rtrv-scr-dpc**

Command Class: Database Administration

Parameters

:sr= (mandatory)

Screening reference. This parameter specifies the point code's unique screening reference name.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

:area= (optional)

The ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:id= (optional)

The ITU international ID. The parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7 ***

:msa= (optional)

The 24-bit ITU-national main signaling area (*msa*) value. It specifies the *msa* of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:nc= (optional)

The network cluster (*nc*) value. This parameter specifies one or more *nc* values for the network indicator (*ni*) and network cluster member (*ncm*) values specified in the **ni** and **ncm** parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:ncm= (optional)

The network cluster member (*ncm*) value. This parameter specifies one or more *ncm* values for the network indicator (*ni*) and network cluster (*nc*) values identified in the **ni** and **nc** parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 ***

:ni= (optional)

The network indicator (*ni*) value. This parameter specifies one or more *ni* values for the network cluster (*nc*) and network cluster member (*ncm*) values identified in the **nc** and **ncm** parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 ***

:npc= (optional)

The ITU national point code. An asterisk (*) indicates the full range of values from **00000–16383**.

NOTE: Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see "Converting ITU National Point Code Formats" in Appendix A for information on converting the point code format.

Range: **00000-16383 ***

:pcst= (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range: **none, s**

Default: **none**

:sp= (optional)

The 24-bit ITU national signaling point. This parameter specifies the signaling point (*sp*) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:ssa= (optional)

The 24-bit ITU national sub signaling area. This parameter specifies the sub signaling area (*ssa*) in the point code represented by the format *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:zone= (optional)

The ITU international zone. The parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7, ***

Example

dlt-scr-dpc:sr=iec:ni=240:nc=010:ncm=010

dlt-scr-dpc:sr=dpc1:npc=128:pcst=s

Dependencies

A complete point code must be specified, using the **ni-nc-ncm**, **zone-area-id**, **msa-ssa-sp**, or **npc** combination unless a value of **c** for “continue” is specified.

The DPC specified by **ni-nc-ncm**, **zone-area-id**, **msa-ssa-sp**, or the **npc** parameter must already exist in the screening reference or within an existing range of DPCs.

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc** parameter is specified as an asterisk (**nc=***), the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **ncm** parameter is specified as a single value, or a range other than the full range of **000-255**, the **ni** and the **nc** parameters must be specified with a single value.

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range **000-255**.

If only one entry exists, the **sr** must not be referenced by another screening table. If the **sr** is not referenced by another screening table, the entire screening table is deleted.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The spare point code subtype prefix (**s-**) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** parameter cannot be specified for ANSI and ITU-N24 point codes.

If the **nsfi=fail** parameter is specified, then the **nni**, **nc**, **nncm**, **narea**, **nzone**, **nid**, **nmsa**, **nssa**, **nsp**, and **npc** parameters cannot have a value of **c**.

Notes

The asterisk is a parameter value indicating that the gateway screening process is screening all values for that parameter in the MSU. The asterisk parameter value does not mean that multiple entries whose values may be in the range implied by the asterisk will be removed. The only entry that will be removed by this command when the asterisk is specified as a parameter value is the entry that contains an asterisk as that parameter value.

For example, if the **dlt-scr-dpc:sr=ied:ni=240:nc=010:nccm=":ssn=*** command is entered, the only entry that will be removed from the database is the entry in screening reference **iec** that contains the values **ni=240**, **nc=010**, **ncm=***, and **ssn=***. For an entry to be specified in this command with asterisks as parameter values, that entry must be shown in the **rtrv-scr-dpc** output with asterisks as the same parameter values specified in the **dlt-scr-dpc** command.

A range of values is specified by separating the values that define the range by two ampersands (**&&**); for example, **ni=025&&100** specifies all network indicators for ANSI point codes from **25** to **100**.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

```

dlt-scr-dpc:sr=iec:ni=240:nc=010:ncm=010
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
DLT-SCR-DPC: SCREEN SET AFFECTED - IEC 25% FULL
DLT-SCR-DPC: MASP A - COMPLTD
;

```

Legend

DLT-SCR-DPC—The command entered that caused this output. This is echoed to the printer as a reference.

SCREEN SET AFFECTED—Identifies the screen set that was affected by the command. The screen set name is shown.

% FULL—Indicates the relative size of the screen set.

dlt-scr-isup**Delete Allowed ISUP Screening Reference**

Use this command to delete an allowed ISUP screening reference from the Allowed ISUP entity set.

Keyword: dlt-scr-isup

Related Commands: chg-scr-isup, ent-scr-isup, rtrv-scr-isup

Command Class: Database Administration

Parameters

:isupmt/tupmt= (mandatory)

ISUP message type or TUP message type. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**. The **tupmt** parameter is not valid for SEAS.

Range: 000-255

:sr= (mandatory)

Screening reference. This parameter specifies the point code's unique screening reference name.

Range: ayyy
1 alphabetic character followed by up to 3 alphanumeric characters

Example

```

dlt-scr-isup:sr=iec:isupmt=9
dlt-scr-isup:sr=iec:isupmt=1&&2
dlt-scr-isup:tupmt=1:sr=tu01

```

Dependencies

The specified **sr** must exist in the Allowed ISUP entity set.

The specified **isupmt** parameter or **tupmt** parameter value must already exist in the specified **sr**.

The last entry in the specified **sr** cannot be deleted if the entry is referenced by another screen.

Notes

An asterisk can be specified for a parameter value in the **chg-scr-isup** and **dlt-scr-isup** commands *only* if that parameter value was specified as an asterisk in the **ent-scr-isup** command to define the parameter value.

A range of values can be specified for the **isupmt** parameter or **tupmt** parameter, by separating the values that define the range by two ampersands (&&); for example, **:isupmt=025&&100** specifies

all ISUP message types from **25** to **100**. The value to the left of the && must be less than the value to the right of the && in the range.

Output

No screen sets are listed in the following example, because the specified screening reference is not associated with any screen sets.

```
dlt-scr-isup:sr=iec:isupmt=9
tekelecstp 02-09-02 11:59:41 EST EAGLE 30.0.0
DLT-SCR-ISUP: MASP A - COMPLTD
;
```

No screen sets are listed in the following example, because the specified screening reference is not associated with any screen sets.

```
dlt-scr-isup:sr=iec:isupmt=1&&2
tekelecstp 02-09-02 12:00:30 EST EAGLE 30.0.0
DLT-SCR-ISUP: MASP A - COMPLTD
;
```

The following example lists the screen sets that are associated with the specified screening reference.

```
dlt-scr-isup:tupmt=1:sr=tu01
tekelecstp 03-11-02 12:00:30 EST EAGLE 31.3.0
Extended Processing Time Required -- Please Wait
Notice: The number of screensets affected is 2.
DLT-SCR-ISUP: SCREEN SET AFFECTED - ist1 1% FULL
DLT-SCR-ISUP: SCREEN SET AFFECTED - ist2 1% FULL
DLT-SCR-ISUP: MASP A - COMPLTD
;
```

dlt-scr-opc

Delete Allowed OPC

Use this command to remove a specific screening reference from the allowed OPC category.

Keyword: **dlt-scr-opc**

Related Commands: **chg-scr-opc**, **ent-scr-opc**, **rtrv-scr-opc**

Command Class: Database Administration

Parameters

:sr= (mandatory)

Screening reference. This parameter specifies the point code's unique screening reference name.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

:area= (optional)

The ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:id= (optional)

The ITU international ID. The parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7, ***

:msa= (optional)

The 24-bit ITU-national main signaling area (*msa*) value. It specifies the *msa* of the point code represented by *msa-ssa-spt*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:nc= (optional)

The network cluster (*nc*) value. This parameter specifies one or more *nc* values for the network indicator (*ni*) and network cluster member (*ncm*) values specified in the **ni** and **ncm** parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:ncm= (optional)

The network cluster member (*ncm*) value. This parameter specifies one or more *ncm* values for the network indicator (*ni*) and network cluster (*nc*) values identified in the **ni** and **nc** parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*. You can specify a single value or a range of values. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 ***

:ni= (optional)

The network indicator (*ni*) value. This parameter specifies one or more *ni* values for the network cluster (*nc*) and network cluster member (*ncm*) values identified in the **nc** and **ncm** parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 ***

:npc= (optional)

The ITU national point code. An asterisk (*) indicates the full range of values from **00000–16383**.

Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see "Converting ITU National Point Code Formats" in Appendix A for information on converting the point code format.

Range: **00000-16383 ***

:pcst= (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (**s-**).

Range: **none, s**

Default: **none**

:sp= (optional)

The 24-bit ITU national signaling point. This parameter specifies the signaling point (*sp*) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:ssa= (optional)

The 24-bit ITU national sub signaling area. This parameter specifies the sub signaling area (*ssa*) in the point code represented by the format *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:zone= (optional)

The ITU international zone. The parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7, ***

Example

dlt-scr-opc:sr=iec:ni=240:nc=010:ncm=010

dlt-scr-opc:sr=opc1:npc=128:pcst=s

Dependencies

A complete point code must be specified, using the **ni-nc-ncm**, **zone-area-id**, **msa-ssa-sp**, or **npc** combination unless a value of **c** for “continue” is specified.

The OPC specified by **ni-nc-ncm**; **zone-area-id**, **msa-ssa-sp**, or the **npc** parameter must already exist in the screening reference or within an existing range of OPCs.

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc** parameter is specified as an asterisk (**nc=***), the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **ncm** parameter is specified as a single value, or a range other than the full range of **000-255**, the **ni** and the **nc** parameters must be specified with a single value.

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range **000-255**.

If only one entry exists, the **sr** must not be referenced by another screening table. If the **sr** is not referenced by another screening table, the entire screening table is deleted.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The spare point code subtype prefix (**s-**) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** parameter cannot be specified for ANSI and ITU-N24 point codes.

If the **nsfi=fail** parameter is specified, then the **nni**, **nc**, **nncm**, **narea**, **nzone**, **nid**, **nmsa**, **nssa**, **nsp**, and **npc** parameters cannot have a value of **c**.

Notes

The asterisk is a parameter value indicating that the gateway screening process is screening all values for that parameter in the MSU. The asterisk parameter value does not mean that multiple entries whose values may be in the range implied by the asterisk will be removed. The only entry that will be removed by this command when the asterisk is specified as a parameter value is the entry that contains an asterisk as that parameter value.

For example, if the **dlt-scr-dpc:sr=ied:ni=240:nc=010:ncm=":ssn=*** command is entered, the only entry that will be removed from the database is the entry in screening reference **ied** that contains the values **ni=240**, **nc=010**, **ncm=***, and **ssn=***. For an entry to be specified in this command with asterisks as parameter values, that entry must be shown in the **rtrv-scr-dpc** output with asterisks as the same parameter values specified in the **dlt-scr-dpc** command.

A range of values is specified by separating the values that define the range by two ampersands (**&&**); for example, **ni=025&&100** specifies all network indicators for ANSI point codes from **25** to **100**.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

```

dlt-scr-opc:sr=iec:ni=240:nc=010:ncm=010
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
DLT-SCR-OPC: SCREEN SET AFFECTED - IEC 25% FULL
DLT-SCR-OPC: MASP A - COMPLTD
;

```

Legend

DLT-SCR-OPC—The command entered that caused this output. This is echoed to the printer as a reference.

SCREEN SET AFFECTED—Identifies the screen set that was affected by the command. The screen set name is shown.

% FULL—Indicates the relative size of the screen set.

dlt-scr-sio**Delete Allowed SIO**

Use this command to remove a specific screening reference from the allowed service indicator octet (SIO) category.

Keyword: dlt-scr-sio

Related Commands: chg-scr-sio, ent-scr-sio, rtrv-scr-sio

Command Class: Database Administration

Parameters

:nic= (mandatory)

The network indicator code identifies whether the message originated from an international (0) or national (2) network. You can specify a single value or a range of values. An asterisk (*) indicates the full range of values from 0–3.

Range: 0-3 *

:pri= (mandatory)

New message priority. This parameter specifies the new message priority in the SIO. You can specify a single value or a range of values. An asterisk (*) indicates the full range of values from 0–3.

Range: 0-3 *

Default: Current value

:si= (mandatory)

Service indicator. The service indicator identifies the type of message. The values are defined in Telcordia TR-NWT-000246.

Range: 00, 01- 15

:sr= (mandatory)

Screening reference. This parameter specifies the point code's unique screening reference name.

Range: ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

:h0= (optional)

This parameter is mandatory if the service indicator (si) value is 00, 01, 02, or 03. Otherwise, the h0 parameter is undefined.

Range: 0-15 *

Default: Current value or undefined

:h1= (optional)

This parameter is mandatory if the service indicator (**si**) value is **00**, **01**, **02**, or **03**. Otherwise, the **h1** parameter is undefined.

Range: 0-15 *

Default: Current value or undefined

Example

dlt-scr-sio:sr=iec:nic=1:si=1:h0=4:h1=2:pri=*

dlt-scr-sio:sr=iec:nic=1:si=3:pri=2

Dependencies

The **nh0** and **nh1** parameters cannot be specified if the **nsi** parameter is specified and is not equal to **00**, **01**, or **02**.

The **sr**, **nic**, **si**, **pri**, and **h0/h1** parameters to be removed must be in the screening reference.

Table 5-38 shows the valid combinations of the **h0/h1** parameter:

Table 5-38. Valid Combinations for the h0/h1 and nh0/nh1 Parameters (chg-scr-sio)

If the h0 (nh0) parameter is specified as:	The h1 (nh1) parameter value can be specified as:
A single value	A single value
A single value	A range
A single value	An asterisk (*) entry
A range	An asterisk (*) entry
An asterisk (*) entry	An asterisk (*) entry

The **sr**, **nic**, **si**, **pri**, and **h0/h1** parameters cannot be removed if they are the last entry in the screening reference and the screening reference is part of a screen set.

If the **si** parameter is equal to **00**, **01**, or **02**, the **h0** and **h1** parameters must be specified. Otherwise, the **h0** parameter cannot be specified.

If the value of the **si** parameter is greater than 2, then the **h0** and **h1** parameters cannot be specified.

If asterisks or ranges are specified for the heading codes, nothing that matches the combination of **nic**, **si**, and the specified heading codes can already exist in the allowed SIO entity set for the screening reference.

The specified screening reference (**sr**) must already exist in the database.

Notes

The network identifier specifies whether the message originated from an international (**0**) or a national (**2**) network.

The asterisk is a parameter value indicating that the gateway screening process is screening all values for that parameter in the MSU. The asterisk parameter value does not mean that multiple entries whose values may be in the range implied by the asterisk will be removed. The only entry that will be removed by this command when the asterisk is specified as a parameter value is the entry that contains an asterisk as that parameter value.

For example, if the **dlt-scr-sio:sr=iec:ni=240:nc=010:nccm=":ssn=*** command is entered, the only entry that will be removed from the database is the entry in screening reference **iec** that contains the values **ni=240**, **nc=010**, **ncm=***, and **ssn=***. For an entry to be specified in this command with asterisks as parameter values, that entry must be shown in the **rtrv-scr-sio** output with asterisks as the same parameter values specified in the **dlt-scr-sio** command.

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, **ni=025&&100** specifies all network indicators for ANSI point codes from **25** to **100**.

Output

```
dlt-scr-sio:sr=iec:nic=1:si=3:pri=2
rlghncxa03w 04-02-14 16:45:50 EST EAGLE 31.3.0
DLT-SCR-SIO: SCREEN SET AFFECTED - SS01 25% FULL
DLT-SCR-SIO: SCREEN SET AFFECTED - SS04 35% FULL
DLT-SCR-SIO: MASP A - COMPLTD
;
```

Legend

DLT-SCR-SIO—The command entered that caused this output. This is echoed to the printer as a reference.

SCREEN SET AFFECTED—Identifies the screen set that was affected by the command. The screen set name is provided.

% FULL—Indicates the relative size of the screen set.

dlt-scr-tt

Delete Allowed Translation Type

Use this command to remove a specific screening reference from the allowed translation type category.

Keyword: **dlt-scr-tt**

Related Commands: **chg-scr-tt**, **ent-scr-tt**, **rtrv-scr-tt**

Command Class: Database Administration

Parameters

:sr= (mandatory)

Screening reference. This parameter specifies the point code's unique screening reference name.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

:type= (mandatory)

Translation type. The translation type identifies the global title translation type value in the called party address. You can enter a single value or a range of values. An asterisk (*) indicates the full range of values from **0–255**.

Range: **000-255 ***

Example

```
dlt-scr-tt:sr=iec:type=012
```

Dependencies

The screening reference must exist.

You cannot remove the **sr** and **type** parameters if they are the last entry in the screening reference and the screening reference is part of a screen set.

The allowed **type** to be removed must already exist in the screening reference.

The single value or range specified for the allowed **type** to be deleted from the TT screen for the allowed TT screening reference must already exist in that TT screen.

Notes

The asterisk is a parameter value indicating that the gateway screening process is screening all values for that parameter in the MSU. The asterisk parameter value does not mean that multiple entries whose values may be in the range implied by the asterisk will be removed. The only entry that will be removed by this command when the asterisk is specified as a parameter value is the entry that contains an asterisk as that parameter value.

For example, if the **dlt-scr-tt:sr=ied:type=":ssn=*** command is entered, the only entry that will be removed from the database is the entry in screening reference **iec** that contains an asterisk as the value for the **type** parameter. For an entry to be specified in this command with an asterisk as the value for the **type** parameter, that entry must be shown in the **rtrv-scr-tt** output with an asterisk as the value for the **type** parameter.

Output

```
dlt-scr-tt:sr=iec:type=012
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
DLT-SCR-TT:  SCREEN SET AFFECTED - IEC  25% FULL
DLT-SCR-TT:  MASP A - COMPLTD
;
```

Legend

DLT-SCR-TT—The command entered that caused this output. This is echoed to the printer as a reference.

SCREEN SET AFFECTED—Identifies the screen set that was affected by the command. The screen set name is shown.

% FULL—Indicates the relative size of the screen set.

dlt-scrset

Delete Screen Set

Use this command to remove a screen set definition from the database. A screen set is a group of screening references that belong to various categories. This command does not remove any gateway screening tables.

Keyword: **dlt-scrset**

Related Commands: **chg-scrset, ent-scrset, rtrv-scrset**

Command Class: Database Administration

Parameters

:scrn= (mandatory)

Screen set name. Each screening reference must have a unique name.

Range: *yyyy*

1 alphabetic character followed by up to 3 alphanumeric characters

Example

```
dlt-scrset:scrn=nc27
```

Dependencies

The screen set name must exist.

Before the screen set can be removed, it must be removed from all linksets.

Notes

The system validates the command to ensure that the specified screen set name is in use.

Output

```
dlt-scrset:scrn=nc27
  rlgncxa03w 04-01-07 11:43:04 EST  EAGLE 31.3.0
  DLT-SCRSET:  MASP A - COMPLTD
;
```

dlt-shlf

Delete Shelf

Use this command to remove a shelf from the system database.

Keyword: dlt-shlf

Related Commands: ent-shlf, rtrv-shlf

Command Class: Database Administration

Parameters

:loc= (mandatory)

The shelf location.

Range: 1200, 1300, 2100, 2200, 2300, 3100, 3200, 3300, 4100, 4200, 4300, 5100, 5200, 5300, 6100

Example

```
dlt-shlf:loc=2300
```

Dependencies

The equipment shelf must have been configured previously.

The equipment shelf must not have any cards configured for it.

If the equipment shelf is the only provisioned shelf in the frame and a frame power threshold entry is configured in the Frame Power Threshold table for the frame, the shelf cannot be deleted until the frame power threshold entry is deleted from the Frame Power Threshold table.

Notes

All shelves in the system can be removed, except the control shelf (**1100**).

Before a shelf can be removed from the database, all SS7 signaling links and TCP/IP data links must be deactivated and removed from the database. All TSMs must be placed out of service. All X.25 signaling links, and the X.25 routes assigned to them, must be removed from the database. Then all cards in the shelf must be removed from the database. See the *Database Administration Manual - System Management* for more information on shelf removal.

Refer to the *Installation - EAGLE 5 ISS* manual for for an illustration of shelf locations.

Output

```
dlt-shlf:loc=2300
  rlgncxa03w 04-01-07 11:11:28 EST  EAGLE 31.3.0
  DLT-SHLF:  MASP A - COMPLTD
;
```

dlt-slk

Delete Signaling Link

Use this command to remove a signaling link from the system database.

Keyword: dlt-slk

Related Commands: act-slk, blk-slk, chg-lsopts, dact-slk, ent-slk, inh-slk, rept-stat-slk, rtrv-slk, tst-slk, ublk-slk, unhb-slk

Command Class: Database Administration

Parameters

:link= (mandatory)

Signaling link on the card specified in the **loc** parameter. The links can be specified in any sequence or pattern.

Synonym: port

Range: a, b, a1-a31, b1-b31

Not all card types support all **link** parameter values.

See "Summary of Range Values for :link Parameter" for valid **link** parameter range values for each type of card that can have a location specified in the **loc** parameter.

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

:force= (optional)

This parameter must be used to remove the last link in a linkset without having to remove all of the routes that referenced the linkset.

Range: yes, no

Default: no

Example

dlt-slk:loc=1211:link=a

dlt-slk:loc=1201:link=b:force=yes

The following example deletes link a1 from a multi-port LIM, E1/T1 MIM, HC MIM, or E5-E1T1 card at card location 1205:

dlt-slk:loc=1205:link=a1

Dependencies

Card locations **1113** through **1118** cannot be specified.

The frame and shelf portions of the specified card location (**loc**) can be **11** through **13**, **21** through **23**; **31** through **33**; **41** through **43**; **51** through **53**; and **61**. (The card location is xyss, where x is the frame, y is the shelf, and ss is the slot.)

The following **link** parameter values can be specified for the following cards that support more than 2 links per card:

- **a1-a3, b1-b3**—Multi-port LIM (MPL), SSED CM card running the **iplim** or **iplimi** application with links having **ipliml2=m2pa**, E1/T1 MIM card
- **a1-a31, b1-b31**—HC-MIM card
- **a1-a15, b1-b15**—E5-E1T1 card
- **a1-a7, b1-b7**—E5-ENET card running the **iplim** or **iplimi** application that supports 16 links
- **a1-a15, b1-b15**—E5-ENET card running the **ipsg** application

The **link** parameter values **a4-a7** and **b4-b7** can be specified for E5-ENET or HC MIM cards. The **link** parameter values **a8-a31 a4-a15** and **b8-b31 b4-b15** can be specified only for HC MIM and E5-E1T1 cards that are used as E1 cards or T1 cards. The **link** parameter values **a16-a31** and **b16-b31** can be specified only for HC MIM cards that are used as E1 cards or T1 cards. Links **a4-a31** and **b4-b31** cannot be specified for Channel cards.

Links **a16-a31** and **b16-b31** cannot be specified for even-numbered card locations. HC MIM cards are dual-slot cards. The links are assigned only to the cards in odd-numbered locations.

The specified link must exist in the database.

If the specified card is running the **ss7gx25**, **atmitu**, **atmansi**, **ipgwi**, or **ss7ipgw** GPL, only the value **a** for the **link** parameter can be specified.

The signaling link must be in the unavailable (UAV) state before it can be removed. Enter the **rept-stat-slk** command to verify the state of the signaling link.

The signaling link cannot have an active LFS test in progress when this command is entered to delete the link.

The **force=yes** parameter must be specified to remove the last signaling link in a linkset that is assigned to a route.

To remove the last signaling link on a card, the state of the card must be OOS-MT-DSBLD. Enter the **rept-stat-card** command to verify the state of the card.

The card must be inhibited before the last link on the card can be deleted.

An IPLIMx or IPGWx signaling link assigned to a local host cannot be deleted if it has a socket or association with connection status **open=yes**.

The slot portion of the specified card location (**loc**) can be **1** through **8** and **11** through **18**. Slots **09** and **10** cannot be specified. (The card location is xyss, where x is the frame, y is the shelf, and ss is the slot.)

If deleting the link causes the provisioned link count to fall below the **numslk** thresholds configured for the corresponding IPSP-M3UA linkset (see the **chg-lsopts** command), then the command cannot be entered. If values of **0** or **1** are specified for all of the **numslk** threshold parameters, then the last link can be deleted.

Notes

This command disassociates the equipment of a link from a logical signaling link. The link must first be placed in the unavailable (UAV) state by entering the **chg-slk** (or **canc-slk**) command before this command can be used to disconnect it. Entering this command results in the link entity being deleted from the STP's link entity set. The link is then considered to be "disconnected." The link on the STP becomes unassigned (spare) but retains the existing equipment type and options; the link remains in the "equipped" provisioning state unless that state is changed by subsequent local craft activity. The link is also no longer associated with its assigned linkset.

Not every card location represents a signaling link. Be sure to address a signaling link in this command.

The *Installation Manual – EAGLE 5 ISS* provides an illustration of card locations.

Output

```
dlt-slk:loc=1211:link=a
rlghncxa03w 05-02-07 11:11:28 EST EAGLE5 33.0.0
DLT-SLK: MASP A - COMPLTD
;
```

dlt-spc**Delete Secondary Point Code**

Use this command to delete an SPC (secondary point code) from the database. Also use this command to change an SPC by first removing the SPC from the database and then using the **ent-spc** command to enter the new SPC value.

Keyword: dlt-spc

Related Commands: ent-spc, rtrv-spc

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" in Appendix A for a detailed description of point code formats, rules for specification, and examples.

:spc= (mandatory)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: spca

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001–005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006–255.

The point code 000-000-000 is not a valid point code.

:spc/spca/spci/spcn/pcn24= (mandatory)

Secondary point code.

:spci= (mandatory)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

:spcn= (mandatory)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: s-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:spcn24= (mandatory)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

Example

dlt-spc:spc=10-20-30

dlt-spc:spcn24=98-98-98

dlt-spc:spcn=s-12345

Dependencies

A secondary point code that is referenced in the Destination table cannot be deleted.

If the value specified for the **spc** parameter is referenced in the Linkset table, then the parameter cannot be deleted.

The MPC feature must be turned on before this command can be entered.

The value specified for the **spc** parameter must exist in the Secondary Point Code table.

Notes

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-).

Output

dlt-spc:spc=10-20-30

```
rlghncxa03w 04-02-18 08:50:12 EST EAGLE 31.3.0
Secondary Point Code table is (7 of 40) 17% full
DLT-SPC: MASP A - COMPLTD
```

;

dlt-srvsel

Delete Service Selector

Use this command to delete a service selector.

Keyword: dlt-srvsel

Related Commands: chg-srvsel, ent-srvsel, rtrv-srvsel

Command Class: Database Administration

Parameters

:gti/gtia/gtii/gtin/gtin24= (mandatory)

Global title indicator. For all service selector commands, the domain is defined as **gti** and **gtia** (ANSI), **gtii** (ITU international), and **gtin** (ITU national). For the service selector commands, **gti** and **gtia** are equivalent.

Range: 2, 4

Supported value for ANSI: **gti=2** and **gtia=2**

Supported values for ITU: **gtii=2**, **gtii=4**, **gtin=2**, **gtin=4**, **gtin24=2**, **gtin24=4**

:ssn= (mandatory)
Subsystem number.
Range: **0-255 ***

:tt= (mandatory)
Translation type.
Range: **0-255**

:nai= (optional)
Nature of Address indicator. The Nature of Address indicator can be specified by supplying either a mnemonic value (**nai** parameter) or an explicit numeric value (**naiv** parameter). Either the **nai** parameter or the **naiv** parameter, but not both, can be specified in the command. Table A-5 shows the mapping between the **naiv** and the **nai** parameter values.
Range: **sub, rsvd, natl, intl**

:naiv= (optional)
Nature of Address indicator value. The Nature of Address indicator can be specified by supplying either a mnemonic value (**nai** parameter) or an explicit numeric value (**naiv** parameter). Either the **nai** parameter or the **naiv** parameter, but not both, can be specified in the command. Table A-5 shows the mapping between the **naiv** and the **nai** parameter values.
Range: **0-127**

:np= (optional)
Numbering Plan. The numbering plan indicator can be specified by supplying either a mnemonic value (**np** parameter) or an explicit numeric value (**npv** parameter). Either the **np** parameter or the **npv** parameter, but not both, can be specified in the command. Table A-6 shows the mapping between the **npv** and the **np** parameter values.
Range: **e164, generic, x121, f69, e210, e212, e214, private**

:npv= (optional)
Numbering Plan value. The numbering plan can be specified by supplying either a mnemonic value (**np** parameter) or an explicit numeric value (**npv** parameter). Either the **np** parameter or the **npv** parameter, but not both, can be specified in the command. Table A-6 shows the mapping between the **npv** and the **np** parameter values.
Range: **0-15**

Example

```
dlt-srvsel:gti=2:ssn=250:tt=10
dlt-srvsel:gtin=4:tt=0:ssn=100:np=e164:nai=sub
dlt-srvsel:gtin24=4:tt=4:ssn=20:np=e164:nai=intl
dlt-srvsel:gtii=4:tt=4:np=e164:nai=intl:ssn=9
dlt-srvsel:gtii=4:tt=5:np=e164:nai=intl:ssn=*
```

Dependencies

The **np** and **npv** parameters cannot be specified together in the command.

The **nai** and **naiv** parameters cannot be specified together in the command.

The **gti=4** and **gtia=4** parameters cannot be specified. The value **4** is not valid for these parameters.

The values **1** and **3** are not valid for the **gti/gtia/gtii/gtin/gtin24** parameters.

If the **gtii/gtin/gtin24=4** parameter is specified, then an **np(v)** and **nai(v)** parameter combination must be specified. These parameters can be specified in the following combinations: **np** and **naiv**, **npv** and **nai**, **np** and **nai**, or **npv** and **naiv**.

If the **gti/gtia/gtii/gtin/gtin24=2** parameter is specified, no **np(v)** and **nai(v)** parameter combinations can be specified.

An entry must already exist that matches the **gti/gtia/gtii/gtin/gtin24**, **tt**, **ssn**, and **np(v)** and **nai(v)** combination of parameters.

Notes

None

Output

```
dlt-srvsel:gti=2:ssn=250:tt=10
rlghncxa03w 07-10-05 16:40:40 EST EAGLE 37.5.0
Service Selector table is (114 of 1024) 11% full
DLT-SRVSEL: MASP A - COMPLTD
;
```

dlt-ss-appl

Delete Subsystem Application

Use this command to remove the application from the LNP database.

Keyword: dlt-ss-appl

Related Commands: chg-ss-appl, ent-ss-appl, rtrv-ss-appl

Command Class: Database Administration

Parameters

:appl= (mandatory)

Application type.

Range: lnp, inp, eir, vflex, atinpq

Example

```
dlt-ss-appl:appl=inp
```

```
dlt-ss-appl:appl=vflex
```

```
dlt-ss-appl:appl=atinpq
```

Dependencies

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before the **dlt-ss-appl:appl=lnp** command can be entered.

The INP feature must be turned on before the **dlt-ss-appl:appl=inp** command can be entered.

The Equipment Identity Register (EIR) feature must be turned on before the **dlt-ss-appl:appl=eir** command can be entered.

The value specified for the **appl** parameter must already exist in the SS-APPL table.

The subsystem must be inhibited before **status=offline** can be specified.

Application type must exist in the LNP database (non DBS 1.0 only)

The V-Flex feature must be turned on before the **appl=vflex** parameter can be specified.

The ATINP feature must be enabled before the **appl=atinpq** parameter can be entered.

Notes

None

Output

```

dlt-ss-appl:appl=eir
  rlgncxa03w 08-04-05 17:34:20 EST  EAGLE 38.0.0
  DLT-SS-APPL: MASP A - COMPLTD
;

```

dlt-subnetid**Delete Subnet ID**

Use this command to delete a Subnet ID entry from the Subnet ID list, for the ISUP NP with EPAP feature.

Keyword: dlt-subnetid

Related Commands: ent-subnetid, rtrv-subnetid

Command Class: Database Administration

Parameters

:subnetid= (mandatory)
 Subnet ID
Range: 1-15 digits

Example

```
dlt-subnetid:subnetid=886933
```

Dependencies

The value **none** cannot be specified for the **subnetid** parameter.

The specified Vendor ID entry must already exist in the SUBNETID table.

Notes

None.

Output

```

dlt-subnetid:subnetid=886933
  rlgncxa03w 04-10-07 11:11:28 EST  EAGLE 31.11.0
  SUBNETID table is (6 of 50) 3% full
  DLT-SUBNETID: MASP A - COMPLTD
;

```

dlt-t1**Delete T1 Interface**

Use this command to delete an interface for an E1/T1 MIM card, an HC-MIM card, or an E5-E1T1 card used as a T1 card. The T1 port number on the card and the T1 card location in the EAGLE 5 ISS must be specified.

On HC-MIM cards and E5-E1T1 cards, T1 ports 1, 3, 5, and 7 (master ports) can be independently channel bridged with their adjacent even numbered (slave) ports 2, 4, 6, and 8 to allow non-signaling data pass-through. The slave port interface is automatically deleted with the command that deletes its master port interface.

Keyword: dlt-t1

Related Commands: chg-t1, ent-t1, rtrv-e1, tst-t1

Command Class: Database Administration

Parameters

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

:t1port= (mandatory)

T1 card port number. The value must be a T1 port for which an interface has already been configured on the specified T1 card.

Range: 1-8

Ports 3-8 are valid only for HC-MIM cards and E5-E1T1 cards.

Example

```
dlt-t1:loc=1205:etport=1
```

```
dlt-t1:loc=1205:t1port=2
```

Dependencies

The specified card location (**loc** parameter) must be equipped.

The card in the specified card location (**loc** parameter) must be a **limt1** card type.

The port specified by the **t1port** parameter must be already equipped with an T1 interface.

All signaling links providing timeslots serviced by the specified T1 interface must be deleted before the T1 interface can be deleted. Use the **dlt-slk** command to delete the signaling links providing the timeslots.

A channel bridged slave (even-numbered) port on an HC-MIM card or E5-E1T1 card cannot be specified in the **t1port** parameter. To delete channel bridged port interfaces, specify the master (odd-numbered) port in the **t1port** parameter. The slave port interface is automatically deleted when its master port interface is deleted.

The following card locations cannot be specified in the **loc** parameter: 1113, 1114, 1115, 1116 1117, 1118 (OAM, TDM, and MDAL cards), and xy09 and xy10 (x is the frame and y is the shelf for HMUX and HIPR cards).

Notes

None.

Output

```
dlt-t1:loc=1205:t1port=1
```

```
rlghncxa03w 04-02-20 09:07:58 EST EAGLE 31.3.0
```

```
DLT-T1: MASP A - COMPLTD
```

```
;
```

dlt-tt

Delete Translation Type

Use this command to remove a translation type from the system database.

NOTE: If the EGTT (Enhanced Global Title Translation) feature is turned on in your system, the system will no longer accept GTT (Global Title Translation) and TT (Translation Type) commands. Refer to the new command sets that replace the GTT and TT commands: GTT

Selector commands (**ent/chg/dlt/rtrv-gttset**), GTT Set commands (**ent/dlt/rtrv-gttset**), and GTA commands (**ent/chg/dlt/rtrv-gta**).

Keyword: dlt-tt

Related Commands: ent-tt, rtrv-tt

Command Class: Database Administration

Parameters

:alias= (optional)

The global title translation type

Range: 000-255

Default: No translation type given

:ttn= (optional)

Translation type name.

Range: ayyyyyyyy

1 alphabetic character followed by up to 7 alphanumeric characters

Default: No translation name is given

:type/typea/typei/typen/typen24= (optional)

Type and **typea** specify an ANSI network, **typei** specifies an ITU-international network, **typen** specifies an ITU-national network, and **typen24** specifies a 24-bit ITU national network. A translation type numeric value may be entered as ANSI (**type** or **typea**) and also as an ITU type (**typei**, **typen**, or **typen24**). However, they are separate entities.

Range: 0-255

Default: No translation type is specified

Example

dlt-tt:type=230

dlt-tt:ttn=lidb

dlt-tt:type=230:ttn=lidb

dlt-tt:type=230:ttn=lidb:alias=030

Dependencies

This command is not valid when the EGTT feature is turned on.

Asterisk (*) parameter values are not allowed in this command.

To delete a translation type, the translation type, the translation name, or both, must be specified.

If the translation type is specified, it must already exist in the database for the network type.

If the translation name is specified, it must already exist in the database.

If the translation type is specified, it cannot be an **alias** value.

If both the translation type and translation name are specified, they must correspond.

The translation type cannot be deleted if there are current GTT entries that reference it.

To delete an **alias**, both the **alias** and the translation type must be specified, and both must already exist in the database for the network type.

If an **alias** is specified, it must be associated with the specified translation type and cannot be the value of an existing translation type.

Either the **type** parameter or **ttn** parameter must be specified.

If the **type** parameter is specified, the translation type must exist in the translation table. If the **type** or **ttn** parameter, or both, are specified, they must be the same as the values entered with the **ent-tt** command.

If the translation name is specified, it must be associated with a translation type.

If aliases exist, they must be removed from the database before the translation types can be removed.

Notes

If the specified translation type entry is not referenced by a current global title translation entry and does not have any aliases, the translation type entry is removed.

Output

dlt-tt:type=230

```
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
DLT-TT: MASP A - COMPLTD
;
```

dlt-ttmap

Delete Translation Type Mapping

Use this command to delete from the database a mapped SS7 message translation type (TT) for a given gateway linkset name. For example, suppose you are mapping the translation type 001 (before TT mapping) to 238 (after TT mapping). You can use this command to delete that mapping from the database.

Keyword: dlt-ttmap

Related Commands: chg-ttmap, ent-ttmap, rtrv-ttmap

Command Class: Database Administration

Parameters

:lsn= (mandatory)

Linkset name. The unique network identifier for the gateway linkset.

Range: aaaaaaaaa

1 alphabetic character followed by 9 alphanumeric characters

:ett= (optional)

Translation type before mapping. The identification of the type of global title translation in the SS7 message *before* translation type mapping. This attribute is the decimal representation of the 1-octet binary field used by the SS7 protocol to identify the translation type.

Range: 0-255

:io= (optional)

Incoming or outgoing. The system uses this parameter to indicate whether the translation type mapping data provisioned for the gateway linkset is for SS7 messages *received* or *sent* on the linkset.

Range: i, o

i — incoming

o — outgoing

Default: Both incoming and outgoing

Example

dlt-ttmap:lsn=n c001:io=i:ett=128:mtt=55

Dependencies

None

Notes

None

Output

```

dlt-ttmap: lsn=nc001:io=i:ett=128:mtt=55
rlghncxa03w 04-02-22 11:18:50 EST EAGLE 31.3.0
TTMAP table for nc001 is (2 of 64) 3% full
DLT-TTMAP: MASP A - COMPLTD
;

```

dlt-uim-acthresh**Delete Activity Level Threshold for STP UIM
Activity Reporting**

Use this command to clear the level of activity threshold that is used to report UIM messages.

Keyword: dlt-uim-acthresh

Related Commands: rtrv-uim-acthresh, set-uim-acthresh

Command Class: Database Administration

Parameters

:uimn= (mandatory)
The UIM number.
Range: 1000-1499

Example

Clears UIM number 1333 message threshold:

```
dlt-uim-acthresh:uimn=1333
```

Dependencies

The **uimn** parameter value must be a numeric value in the range of **1000–1499**.

The specified **uimn** value must exist in the UIM Threshold database table.

Notes

None

Output

```

dlt-uim-acthresh:uimn=1333

rlghncxa03w 04-02-01 08:50:12 EST EAGLE 31.3.0
DLT-UIM-ACTHRESH: MASP A - COMPLTD
;

```

dlt-user**Delete User**

Use this command to remove a user from the system database.

Keyword: dlt-user

Related Commands: act-user, chg-pid, chg-user, dact-user, ent-user, login, logout, rept-stat-user, rtrv-secu-user, rtrv-user

Command Class: Security Administration

Parameters

:uid= (mandatory)
User ID
Range: aZZZZZZZZZZZZZZZZ
1 alphabetic character followed by up to 15 alphanumeric characters

Example

dlt-user:uid=terryjohnson

Dependencies**Notes**

If the user being removed is logged onto the system, this command logs the user off immediately.

Output

```
dlt-user:uid=terryjohnson
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
DLT-USER: MASP A - COMPLTD
;
```

dlt-vendid**Delete Vendor ID**

Use this command to delete a Vendor ID entry from the Vendor ID list, for the GSM MAP SRI Redirect to Serving HLR feature.

Keyword: dlt-vendid

Related Commands: ent-vendid, rtrv-vendid

Command Class: Database Administration

Parameters

:vendid= (mandatory)
Vendor ID
Range: 1-15 digits

Example

dlt-vendid:vendid=886933

Dependencies

The value **none** cannot be specified for the **vendid** parameter.

The specified Vendor ID entry must already exist in the VendID table.

Notes

None.

Output

```
dlt-vendid:vendid=886933
rlghncxa03w 04-10-07 11:11:28 EST EAGLE 31.11.0
VENDID table is (6 of 200) 3% full
DLT-VENDID: MASP A - COMPLTD
;
```

dlt-vflx-cd**Delete VFLEX Call Decision Entry**

Use this command to delete call decision criteria from the Call Decision table.

NOTE: The V-Flex feature must be enabled before this command can be entered.

Keyword: dlt-vflx-cd

Related Commands: chg-vflx-cd, ent-vflx-cd, rtrv-vflx-cd

Command Class: Database Administration

Parameters

:cdn= (mandatory)

Call decision name. This parameter specifies the entry in the Call Decision table to be deleted.

Range: *ayyy*

1 alphabetic character followed by 3 alphanumeric characters

Example

dlt-vflx-cd:cdn=cdn1

Dependencies

The value specified for the **cdn** parameter cannot be a reserved word, such as **none**.

The value specified for the **cdn** parameter must already exist in the Call Decision table.

The V-Flex feature must be enabled before this command can be entered.

Output

dlt-vflx-cd:cdn=cdn1

rlghncxa03w 08-05-07 11:11:28 EST EAGLE 39.0.0

DLT-VFLX-CD: MASP A - COMPLTD

;

dlt-vflx-rn**Delete VFLEX Routing Number**

Use this command to delete a voice mail routing number from the Routing Number table.

NOTE: The V-Flex feature must be enabled before this command can be entered.

Keyword: **dlt-vflx-rn**

Related Commands: **chg-vflx-rn**, **ent-vflx-rn**, **rtrv-vflx-rn**

Command Class: Database Administration

Parameters

:rname= (mandatory)

Routing number name. This parameter specifies the voice mail routing number to be deleted.

Range: *ayyyyyyy*

1 alphabetic character followed by 7 alphanumeric characters.

Example

dlt-vflx-rn:rname=rn01

Dependencies

The V-Flex feature must be enabled before this command can be entered.

The value specified for the **rname** parameter must already exist in the Routing Number table.

The value specified for the **rname** parameter cannot be referenced by an entry in the VMSID table.

The value specified for the **rname** parameter cannot be a reserved word such as **none**.

Output

dlt-vflx-rn:rname=rn02

rlghncxa03w 08-05-29 08:51:12 EST EAGLE 39.0.0

DLT-VFLX-RN: MASP A - COMPLTD

;

dlt-vflx-vmsid**Delete VFLEX VMSID Entry**

Use this command to delete a voice mail server ID from the VMSID table.

NOTE: The V-Flex feature must be enabled before this command can be entered.

Keyword: dlt-vflx-vmsid

Related Commands: chg-vflx-vmsid, ent-vflx-vmsid, rtrv-vflx-vmsid

Command Class: Database Administration

Parameters

:id= (mandatory)

This parameter specifies the voice mail server to be deleted.

Range: 1-15 digits, **dflt**

Valid digits are **0-9, A-F, a-f**

dflt—the default VMS ID

Example

dlt-vflx-vmsid:id=1234ae4

Dependencies

The V-Flex feature must be enabled before this command can be entered.

The value specified for the **vmsid** parameter must already exist in the VMSID table.

Output

dlt-vflx-vmsid:id=1234ae5

rlghncxa03w 08-05-29 08:51:12 EST EAGLE 39.0.0

DLT-VFLX-VMSID: MASP A - COMPLTD

;

dlt-x25-dstn**Delete X.25 Destination**

Use this command to remove the association of an X.25 network address with an SS7 point code.

Keyword: dlt-x25-dstn

Related Commands: chg-x25-dstn, ent-x25-dstn, rtrv-x25-dstn

Command Class: Database Administration

Parameters

:xaddr= (mandatory)

The X.25 network address of the X.25 destination entity or the SS7 node.

Range: 1-15 digits

Example

dlt-x25-dstn:xaddr=205255864567721

Dependencies

An X.25 address must have a minimum of four digits.

The X.25 address must already exist as an X.25 destination.

The X.25 address cannot be assigned to an X.25 route.

Notes

None

Output

dlt-x25-dstn:xaddr=205255864567721

```
rlghncxa03w 04-02-10 11:43:04 EST EAGLE 31.3.0
X.25 DSTN TABLE 45 % FULL
DLT-X25-DSTN: MASP A - COMPLTD
```

;

dlt-x25-rte**Delete X.25 Route**

Use this command to remove X.25 routes from the database.

Keyword: dlt-x25-rte

Related Commands: chg-x25-rte, ent-x25-rte, rtrv-x25-rte

Command Class: Database Administration

Parameters

:saddr= (mandatory)

The alias X.25 address assigned to the SS7 destination entity on the SS7 side of the circuit.

Range: 1-15 digits

:xaddr= (mandatory)

The X.25 address assigned to the X.25 destination entity on the X.25 side of the circuit.

Range: 1-15 digits

Example

dlt-x25-rte:xaddr=225255:saddr=133131

Dependencies

Each X.25 address must have at least four digits.

The combination of the two X.25 addresses must be in the X.25 Routing table.

Notes

None

Output

dlt-x25-rte:xaddr=225255:saddr=133131

```
rlghncxa03w 04-02-10 11:43:04 EST EAGLE 31.3.0
DLT-X25-RTE: MASP A - X.25 Route table 45% full
DLT-X25-RTE: MASP A - COMPLTD
```

;

enable-ctrl-feat**Enable Controlled Feature**

Use this command to enable a controlled feature that the customer has purchased.

NOTE: The “LNP (Local Number Portability) feature” is turned on when the LNP ported TNs quantity is greater than 0 in the rtrv-ctrl-feat command output. An LNP ported TNs quantity feature access key has been enabled and turned on.

Keyword: enable-ctrl-feat

Related Commands: chg-ctrl-feat, rtrv-ctrl-feat

Command Class: Database Administration

Parameters

:fak= (mandatory)

Feature Access Key. This parameter specifies the Feature Access Key for the feature.

Range: ayyyyyyyyyyyy

13 alphanumeric characters; the first character must be a letter.

The feature access key cannot contain any special characters, including spaces and dashes. Upper-case characters are mapped to lower case.

:partnum= (mandatory)

Part number. This parameter specifies the part number for the feature.

Range: 893000000 - 893999999

Do not include dashes in the 9-digit number.

Example

enable-ctrl-feat:partnum=893xxxxxx:fak=xxxxxxxxxxxxxx

Dependencies



CAUTION: Never install or initialize MCAP cards in card slots 1113 and 1115 after GPSM-II cards are provisioned in these slots. Attempting to initialize MCAP cards after GPSM-II cards have been provisioned in slots 1113 and 1115 will cause a system outage. Before replacing an existing GPSM-II card in slot 1113 or slot 1115, contact the Customer Care Center.

The phrase "Service Module cards" is used to refer to DSM cards or E5-SM4G cards when either type of card can be used. If DSM cards or E5-SM4G cards are specifically required, then the appropriate card requirement is listed.

The system serial number must be locked in the database before this command can be entered for the feature (see the **ent-serial-num** command).

The feature access key must be valid for the specified feature part number and for the system serial number.

A feature cannot be enabled with this command when the feature has already been enabled with a temporary feature access key, a permanently On feature access key, or a feature access key for a quantity that is greater than the quantity specified in the command.

A temporary feature access key can be used only one time to enable a feature. After the temporary feature access key expires, you must purchase the feature before you can use a permanent feature access key to enable the feature.

A temporary feature access key cannot be used to enable features that do not allow a temporary feature access key. The following features allow a temporary feature access key:

- 15 Minute Measurements
- A-Port
- ANSI-ITU-China SCCP Conversion
- Command Class Management
- EAGLE OA&M IP Security
- G-Port
- IDP Screening for Prepaid
- Intermediate GTT Load Sharing (IGTTLS)
- IP User Interface (Telnet)

- IS41 GSM Migration (IGM)
- LNP ELAP Configuration
- LNP Short Message Service (LNP SMS)
- MNP Circular Route Prevention
- MTP Msgs for SCCP Apps
- Network Security Enhancement
- Port Check for Mobile Originated SMS
- Prepaid IDP Query Relay (IDP Relay)

If any EPAP-based feature is turned on, then a maximum of 25 Service Module cards is allowed in the system. If the system is running only GTT, then a maximum of 32 Service Module cards is allowed in the system.

The GTT feature must be on before the IDP Screening for Prepaid feature can be enabled.

If a TSM card running the **sccp** application is present in the system, the IDP Screening for Prepaid feature cannot be enabled.

The **partnum** parameter value must be 9 digits, without any dashes or spaces. The first 3 digits are **893**. The next 6 digits must be in the range **0-9**.

A valid system serial number must be entered in the database before this command can be entered for the feature (see the **ent-serial-num** command).

The LNP ELAP Configuration feature and the WNP feature must be turned on before the LNP SMS feature can be enabled.

The GTT feature must be turned on before the XGTT Table Expansion feature can be enabled.

The XGTT (269,999 to 400,000 entries) feature requires TSM cards that have at least a 586K processor and are running the **sccp** application, Service Module cards that are running the **vsccp** application, or a combination of the cards.

The XGTT Table Expansion feature with 1,000,000 entries requires all Service Module cards running the **vsccp** application. TSM cards running the **sccp** application cannot be used.

The XMAP (2000 and 3000 entries) feature requires TSM cards that have at least a 586K processor and are running the **sccp** application, Service Module cards that are running the **vsccp** application, or a combination of the cards.

The DSTN5000 feature bit for the 5000 Routesets feature must be turned on before the 6000 Routesets feature, the 7000 Routesets feature, or the 8000 Routesets feature can be enabled.

The 7000 Routesets feature and the 8000 Routesets feature cannot be enabled when more than 8000 alias point codes are already assigned in the system.

If the LNP (an LNP ported TNs quantity), LNP 150,000 LRNs, or LNP 300,000 NPANXX feature is enabled, then the INP and AINPQ features cannot be turned on, and none of the following features can be enabled:

- AINPQ
- A-Port
- ATINP
- Equipment Identity Register (EIR)
- G-Flex
- G-Port

- INP
- IS41 GSM Migration (IGM)
- MO SMS ASD
- MO SMS B-Party Routing
- MO SMS GRN
- MO-based GSM SMS NP
- MO-based IS41 SMS NP
- MTP Messages for Prepaid Applications (MTPR)
- Portability Check for MO SMS
- Prepaid IDP Query Relay (IDP Relay)
- Prepaid SMS Intercept Phase 1 (PPSMS)
- TIF Number Portability
- V-Flex

The LNP feature (an LNP ported TNs quantity) must be enabled before the LNP 150,000 LRNs feature or the LNP 300,000 NPANXXs feature can be enabled.

Service Module cards running the **vsccp** application are required when the LNP feature, the 150,000 LNP LRNs feature, the 300,000 LNP NPANXXs feature, and the VGTT feature are turned on together in the system.

The LNP ELAP Configuration feature must be enabled, and turned on with the **chg-ctrl-feat** command, before the features for the following quantities can be enabled:

- The LNP feature for a quantity equal to or greater than 24 million TNs
- The 150,000 LNP LRNs feature
- The 300,000 NPANXXs feature

The LNP feature for 4 million TNs requires all TSM cards with a minimum of 512MB of memory.

The LNP feature for 6 million TNs requires all TSM cards with a minimum of 768MB of memory.

The LNP feature for 8 million TNs requires all TSM cards with a minimum of 1GB of memory.

The LNP feature for 12 million TNs requires all TSM cards or DSM cards with a minimum of 1GB of memory.

The LNP feature for 24 million TNs requires all DSM cards with a minimum of 2GB of memory.

The LNP feature for 36 million TNs requires all DSM cards with a minimum of 3GB of memory.

The LNP feature for LNP ported TNs quantities of 48 million TNs to 192 million TNs requires all Service Module cards with a minimum of 4GB of memory. The LNP feature for LNP ported TNs quantities of 204 million TNs to 228 million TNs requires all DSM cards with a minimum of 4GB of memory. TSM cards running the **sccp** application cannot be used.

The 150,000 LNP LRNs feature requires all Service Module cards; any DSM cards must have a minimum of 2GB of memory.

The 300,000 LNP NPANXXs feature requires all Service Module cards; any DSM cards must have a minimum of 2GB of memory.

The LNP feature for 2 million TNs requires at least TSM cards with a minimum of 256MB of memory.

The GTT feature bit must be turned on (see the **chg-feat** command) before the following features can be enabled:

- Advanced GT Modification (AMGTT)
- ATI Number Portability Query (ATINP)
- E5-SM4G Throughput Capacity
- Equipment Identity Register (EIR)
- G-Flex
- GSM Map Screening (GSM)
- Hex Digit Support for GTT
- Intermediate GTT Loadsharing (IGTTLS)
- LNP ELAP Configuration
- LNP ported LRNs
- LNP ported NPANXXs
- LNP ported TNs
- MO SMS ASD
- MO SMS GRN
- MO SMS IS41-to-GSM Migration
- MO-based GSM SMS NP
- MO-based IS41 SMS NP
- Portability Check for MO SMS (MNPSMS)
- Prepaid SMS Intercept Ph1 (PPSMS)
- SCCP Loop Detection
- TIF Additional Subscriber Data
- TIF Generic Routing Number
- TIF Number Portability
- TIF SCS Forwarding
- TIF Simple Number Substitution
- Transaction-based GTT Loadsharing (TBGTTLS)
- Voice Mail Router (V-Flex)

The EIR (Equipment Identity Register) feature cannot be enabled if any TSM cards running the **sccp** application are in the system. Service Module cards are required. Any DSM cards in the system must have at least 2 GB of memory before the EIR feature can be enabled.

The ANSI-ITU-China SCCP Conversion feature cannot be enabled if the SCCPCNV (SCCP Converison) feature bit or the TCAPCNV (TCAP Conversion) feature bit is turned on.

The ANSI-ITU-China SCCP Conversion feature requires TSM or Service Module cards in the system.

The GSM Map Screening (GSM) feature must be turned on before the Enhanced GSM Map Screening (EGSM) feature can be enabled.

The Enhanced GSM Map Screening (EGSM) feature must be turned on before the MTP MAP Screening feature can be enabled.

The Measurements Platform feature must be turned on and the Measurements Platform collection function must be enabled (see the **chg-measopts:platformenable=on** parameter) before the MTP MAP Screening feature can be enabled (at least one MCPM card must be active).

The 7000 Routesets and 8000 Routesets quantity keys can not be enabled if the number of provisioned alias destinations is greater than 8000.

The G-Port feature must be turned on before the following features can be enabled:

- GSM MAP SRI Redirect for Serving HLR
- ISUP NP with EPAP
- MNP Circular Route Prevention
- Prepaid SMS Intercept Phase 1 (PPSMS)

The GWS (Gateway Screening) feature must be turned on before the following features can be enabled:

- ISUP NP with EPAP
- TIF Additional Subscriber Data
- TIF Generic Routing Number
- TIF Number Portability
- TIF SCS Forwarding
- TIF Simple Number Substitution

The following features cannot be enabled if the **ansigflex** system option is enabled (see the **chg-stpopts** command):

- 1100 TPS/DSM for ITU NP
- ANSI-41 INP Query (AINPQ)
- A-Port
- ATINP
- Equipment Identity Register (EIR)
- G-Flex MAP Layer Routing
- G-Port
- INP
- IS41 GSM Migration (IGM)
- MO SMS ASD
- MO SMS GRN
- MO SMS IS41-to-GSM Migration
- MO-based SMS GSM NP
- MO-based SMS IS41 NP
- Portability Check for MO SMS

- TIF Number Portability
- V-Flex

Before an LNP ported TNs quantity greater than 96 million numbers can be enabled, an ELAP system that supports a quantity greater than 96 million numbers must be available to the EAGLE 5 ISS.

- The ELAP software must be at version 4.0 to support LNP ported TNs quantities greater than 96 million numbers and up to 120 million numbers.
- The ELAP software must be at version 5.0 or greater to support LNP ported TNs quantities greater than 120 million numbers. A quantity greater than 120 million numbers cannot be enabled until the ELAP is upgraded to the required software level, and the appropriate ELAP commands are issued to convert the 120 Million LNP Numbers database structure to the data compaction structure for more than 120 million numbers.

The **rept-stat-mps** command can be entered at the EAGLE 5 ISS to determine the ELAP software version.

The following features require Service Module cards running the **vsccp** application to be present in the system before they can be enabled:

- AINPQ
- A-Port
- ATI Number Portability Query (ATINP)
- EIR
- Enhanced GSM MAP Screening (EGMS)
- Flexible GTT Load Sharing
- G-Flex
- G-Port
- INP
- IS41 GSM Migration (IGM)
- LNP ELAP Configuration
- MO SMS ASD
- MO SMS B-Party Routing
- MO SMS GRN
- MO SMS IS41-to-GSM Migration
- MO-based GSM SMS NP
- MO-based IS41 SMS NP
- Origin-based SCCP Routing (OBSR)
- PPSMS
- SCCP Loop Detection
- SCCP Loop Detection
- TIF Additional Subscriber Data
- TIF Generic Routing Number

- TIF Number Portability
- TIF SCS Forwarding
- TIF Simple Number Substitution
- Transaction-based GTT Loadsharing (TBGTTLS)
- Weighted GTT Loadsharing (WGTTLs)
- V-Flex

Before LNP ported TNs quantities greater than 96 million numbers can be enabled, an ELAP system must be available to validate its software version to the EAGLE 5 ISS.

The Enhanced GTT (EGTT) feature must be turned on before the Origin-based SCCP Routing or MO SMS B-Party Routing feature can be enabled.

If any TSM cards running the **sccp** application are in the system, then the following features cannot be enabled:

- ATI Number Portability Query (ATINP)
- Enhanced GSM Number Map Portability Screening (EGSM)
- G-Flex
- Hex Digit Support for GTT
- MO SMS ASD
- MO SMS B-Party Routing
- MO SMS GRN
- MO SMS IS41-to-GSM Migration
- MO-based GSM SMS NP
- MO-based IS41 SMS NP
- Origin-based SCCP Routing (OBSR)
- Portability Check for MO SMS
- Prepaid SMS Intercept Phase 1 (PPSMS)
- TIF Number Portability
- TIF SCS Forwarding
- TIF Simple Number Substitution
- V-Flex Voice Mail Router (V-Flex)

At least one of the EPAP-based ITU NP features (G-Port, A-Port, INP, IGM, EIR, IDP Relay, ANSI-41 INP Query, V-Flex, or PPSMS) must be turned on before the 1100 TPS/DSM for ITU NP feature can be enabled.

The GTT feature must be turned on (see the **chg-feat** command) before the A-Port feature can be enabled.

The GTT feature must be turned on (see the **chg-feat** command) before the G-Port feature can be enabled.

The GTT feature must be turned on (see the **chg-feat** command) before the IS41 GSM Migration (IGM) feature can be enabled.

The G-Flex, A-Port, or IGM feature must be turned on before the MTP MSGS for SCCP Apps (MTPR) feature can be enabled.

The A-Port feature cannot be enabled if any TSM cards running the **sccp** application are present in the system.

The IGM feature cannot be enabled if any TSM cards running the **sccp** application are present in the system.

If a DSM card with less than 4 gigabytes of memory is present in the system, the following features cannot be enabled

- A-Port
- MO SMS ASD
- MO SMS B-Party Routing
- MO SMS GRN
- MO SMS IS41-to-GSM Migration
- MO SMS Prepaid Intercept on B-Party
- Portability Check for MO SMS
- PPSMS

The PPSMS feature cannot be enabled if the LNP ELAP Configuration feature is turned on.

If the MTP Msgs for SCCP Apps feature is turned on, the EIR feature cannot be enabled.

Service Module cards must be provisioned in the system before the Prepaid IDP Query Relay feature can be enabled.

The GTT feature must be turned on before the Prepaid IDP Query Relay feature can be enabled.

The Prepaid IDP Query Relay feature cannot be enabled if any TSM cards running the **sccp** application are in the system.

The Default Country Code must be provisioned (see the **defcc** parameter in the **chg-stpopts** command) before the Prepaid IDP Query Relay feature can be enabled.

E5-SM4G cards do not support LNP ported TNs quantities of 204-228 million numbers. DSM cards are required.

The IP User Interface feature must be enabled before the SEAS Over IP feature can be enabled.

If the TIF (Number Portability/ Additional Subscriber Data / Generic Routing Number) is enabled, then the LNP feature cannot be enabled. If the LNP feature is enabled, then the TIF (Number Portability/ Additional Subscriber Data / Generic Routing Number) feature cannot be enabled.

The following features:

- Origin-Based MTP Routing
- Multiple Linksets to Single Adjacent PC (MLS)
- Proxy Point Code

cannot be enabled if any of the following unsupported cards are equipped in the system:.

- LIMDS0
- LIMV35
- LIMOCU

- ILA/EILA
- Original 2-port LIM-E1

The Multiple Point Code (MPC) feature must be turned on before the Multiple Linksets to Single Adjacent PC (MLS) feature can be enabled.

The G-Flex feature must be turned on before the G-Flex MAP Layer Routing feature can be enabled.

The G-Port feature must be enabled before the following features can be enabled:

- G-Port SRI Query for Prepaid
- MT-Based GSM SMS NP

The A-Port feature must be enabled before the MT-Based IS41 SMS NP feature can be enabled.

The AMGTT CdPA Only feature cannot be enabled using the **enable-ctrl-feat** command. This feature is automatically enabled and turned on if the MGTG feature was on before upgrade to EAGLE 5 ISS Release 38.0 occurred.

The AMGTT CdPA Only feature must be turned on before the AMGTT CgPA Upgrade feature can be enabled.

If the AMGTT CdPA Only feature or the AMGTT CgPA Upgrade feature is turned on, then the AMGTT feature cannot be enabled.

The LNP (an LNP ported TNs quantity), LNP 150,000 LRNs, or LNP 300,000 NPANXX feature cannot be enabled if the INP or AINPQ feature is turned on or if any of the features listed below is enabled.

- A-Port
- ATINP
- Equipment Identity Register (EIR)
- G-Flex
- G-Port
- IS41 GSM Migration (IGM)
- MO SMS ASD
- MO SMS B-Party Routing
- MO SMS GRN
- MO SMS IS41-to-GSM Migration
- MO-based GSM SMS NP
- MO-based IS41 SMS NP
- MTP Messages for Prepaid Applications (MTPR)
- Portability Check for MO SMS (MNPSMS)
- Prepaid IDP Query Relay (IDP Relay)
- Prepaid SMS Intercept Phase 1 (PPSMS)
- TIF Number Portability
- V-Flex

The MT-Based GSM SMS NP feature must be enabled before the MT-Based GSM MMS NP feature can be enabled.

The LNP ported TNs 24 Million Quantity feature or greater must be turned on before the LRNQT feature can be enabled.

The Intermediate GTT Load Sharing feature must be turned on before the GTT LS ARI feature can be enabled.

The Flexible GTT Load Sharing feature must be enabled before the GTT LS ARI feature can be enabled.

Notes

XGTT or XMAP (GTT or MAP Table Increase) Feature

After the XGTT feature is enabled, the feature cannot be disabled or turned off.

After the XMAP feature is enabled, the feature cannot be disabled or turned off.

1500 Links and 2000 Links Support

After the 1500 Links feature or the 2000 Links Support feature is enabled, the feature cannot be disabled or turned off.

SE-HSL SLK Capacity

Table 5-39 lists the total number of signaling links that can be assigned to SE-HSL cards in the system when each SE-HSL SLK Capacity quantity feature access key is enabled.

Table 5-39. SE-HSL SLK Capacity Feature Quantities

Part Number	Maximum SE-HSL Links Allowed in the System
893-0130-01	4
893-0130-02	8
893-0130-03	16
893-0130-04	32
893-0130-05	40
893-0130-06	48
893-0130-07	56
893-0130-08	64

LNP 228 Million TNs, LNP 300,000 NPANXXs, LNP 150,000 LRNs, and LNP ELAP Configuration Features

Table 5-40 lists the types and memory capacity for the TSM cards or Service Module cards (DSM cards or E5-SM4G cards) required by each LNP quantity feature. Quantities of 204-228 million TNs require DSM cards; E5-SM4G cards are not supported for these quantities.

Table 5-40. Minimum Hardware Required for LNP Quantity Features

Object / Capacity	Minimum Hardware	Feature Access Key
2 Million TNs	256 MB TSM	893-0110-01
4 Million TNs	512 MB TSM	893-0110-02
6 Million TNs	768 MB TSM	893-0110-03
8 Million TNs	1 GB TSM	893-0110-04
12 Million TNs	1 GB TSM or 1 GB DSM	893-0110-05
24 Million TNs	2 GB DSM	893-0110-06
36 Million TNs	3 GB DSM	893-0110-07
48 Million TNs	4 GB Service Module card	893-0110-08
60 Million TNs	4 GB Service Module card	893-0110-09
72 Million TNs	4 GB Service Module card	893-0110-10
84 Million TNs	4 GB Service Module card	893-0110-11
96 Million TNs	4 GB Service Module card	893-0110-12
108 Million TNs	4 GB Service Module card	893-0110-13
120 Million TNs	4 GB Service Module card	893-0110-14
132 Million TNs	4 GB Service Module card	893-0110-15
144 Million TNs	4 GB Service Module card	893-0110-16
156 Million TNs	4 GB Service Module card	893-0110-17
168 Million TNs	4 GB Service Module card	893-0110-18
180 Million TNs	4 GB Service Module card	893-0110-19
192 Million TNs	4 GB Service Module card	893-0110-20
204 Million TNs	4 GB DSM	893-0110-21
216 Million TNs	4 GB DSM	893-0110-22
228 Million TNs	4 GB DSM	893-0110-23
150,000 NPANXXs	Any TSM or 1 GB DSM	893-0094-01
300,000 NPANXXs	2 GB DSM	893-0094-02
100,000 LRNs	Any TSM or 1 GB DSM	893-0105-05
150,000 LRNs	2 GB DSM	893-0105-01

Flexible GTT Load Sharing

The Flexible GTT Load Sharing feature allows a PC or PC/SSN combination to be provisioned in multiple load-sharing relationships for post-GTT load sharing of intermediate and final GTT traffic. Load sharing for intermediate GTT traffic requires the Intermediate GTT Load Sharing feature, which can be run in conjunction with the Flexible GTT Load Sharing feature. Intermediate GTT load sharing is performed through the MRN table, and the GTT destination is a PC. If both the Intermediate and Flexible GTT Load Sharing features are on, different load-sharing relationships can be defined between the same set of PCs, and different sets of destinations can contain the same PCs.

Load sharing for final GTT traffic is performed through the MAP table, and the GTT destination is a PC/SSN combination. If the Flexible GTT Load Sharing feature is on, different load-sharing relationships can be defined between the same set of PC/SSNs, and different sets of destinations can contain the same PC/SSN combinations.

Weighted GTT Loadsharing

The Weighted GTT Loadsharing feature allows a PC or PC/SSN combination to be provisioned with weights and threshold values to change the loadsharing method. This weight is relative to the weights of the PCs or PC/SSNs that have the same relative cost (RC group) and determines the relative percentage of traffic sent to the PC or PC/SSN. If the total available weight of the PCs or PC/SSNs in the RC group falls below the threshold, that RC group is not used and the next lowest RC group is used for traffic loadsharing.

SEAS Over IP

All database commands associated with the SEAS Over IP feature can be entered after the SEAS Over IP feature is enabled.

SCCP Loop Detection

The SCCP Loop Detection feature allows sets of point codes that form a routing loop in the network to be specified. These sets are linked with GTT sets and are checked during intermediate and final GTT traffic routing. If a loop exists, either the system can simply be notified or the traffic can be discarded. The SCCP Loop Detection feature requires the GTT feature and is supported only on Service Module cards; TSM cards running the **sccp** application cannot be used.

Multiple Linksets to a Single Adjacent PC (MLS)

The MLS feature allows multiple linksets to be established to a single adjacent destination point code.

Voice Mail Router (V-Flex)

The V-Flex feature allows calls to be routed to a specific voice mail server based on subscriber and call context data.

Proxy Point Code Capacity

The Proxy Point Code feature allows the EAGLE 5 ISS to assume the point codes of other nodes.

Table 5-41 lists the total number of proxy point codes that can be provisioned in the system.

Table 5-41. Proxy Point Codes Feature Quantities

Part Number	Maximum Proxy Point Codes Allowed in the System
893-0187-01	10
893-0187-02	20
893-0187-03	30
893-0187-04	40
893-0187-05	50
893-0187-06	60

Table 5-41. Proxy Point Codes Feature Quantities

Part Number	Maximum Proxy Point Codes Allowed in the System
893-0187-07	70
893-0187-08	80
893-0187-09	90
893-0187-10	100

E5-SM4G Throughput Capacity

The E5-SM4G Throughput Capacity feature is used to achieve the following maximum TPS capacities. Feature and hardware dependencies must be present.

- 5000 TPS per card with GTT based features
- 150,000 TPS/sec per system, with only GTT and no EPAP-based features on
- 75,000 EPAP TPS per system, with one or more EPAP-based features on

Advanced GT Modification (AMGTT)

There are three AMGTT features:

- Part number 893-0218-01: Advanced Global Title Modification (AMGTT). Allows non-MGTT customers to enable CdPA and CgPA functions after upgrade.
- Part number 893-0218-02: Advanced Global Title Modification, Called Party Only (AMGTT CdPA Only). Allows existing MGTT customers to continue using CdPA modification functions after upgrade. Does not allow any CgPA modification capabilities. The AMGTT CdPA Only feature cannot be enabled by this command. It is automatically enabled upon upgrading from the source release to EAGLE 5 ISS release 38.0 if the MGTT feature was turned on prior to the upgrade.
- Part number 893-0218-03: Advanced Global Title Modification, Calling Party Upgrade (AMGTT CgPA Upgrade). Allows existing MGTT customers to upgrade to AMGTT after upgrade to EAGLE 5 ISS release 38.0. Requires the AMGTT CdPA Only feature to be enabled, and allows full AMGTT CdPA and CgPA modification.

Prepaid IDP Query Relay

The IDPRCDPN NPP Service must be enabled before the Prepaid IDP Query Relay feature can be turned on. If the customer wants to process calling party numbers, then the IDPRCGPN NPP service must also be enabled. The following warning message appears while enabling the Prepaid IDP Query Relay feature:



CAUTION: IDPRCDPN NPP service and possibly the IDPRCGPN service must be enabled for activating IDPR service.

MO SMS IS41-to-GSM Migration

The MO SMS IS41-to-GSM Migration feature addresses modifications to the MO-based IS41 SMS NP feature (893-0194-01) required to meet certain IS41-to-GSM Migration call flows. This feature also allows the IS412GSM Migration Prefix to be used as a prefix instead of the RTDB RN/SP when an SMS is destined for a GSM-migrated subscriber.

SLS Bit Rotation by Incoming Linkset (ISLSBR)

The ISLSBR feature allows SLS Bit rotation to occur on an incoming linkset. This feature provides the ability to configure distribution in an ANSI or ITU network.

Eagle Additional Subscriber Data

Prepaid IDP Query Relay and TIF framework features support ASD data, which can be associated with individual subscribers and ranges. IDPR and TIF ASD/GRN features address the addition of ASD fields into the EAGLE 5 ISS. The ASD feature allows generic data to be associated with DN and DN Block subscriber records.

Prepaid SMS Intercept Ph1

The MOSMSGCDPN and MOSMSGCGPN services must be provisioned before the MO SMS Prepaid Check feature is turned on for "Prepaid SMS Intercept Ph1" to be functional. The following warning message appears while enabling the MO SMS Prepaid Check feature:



CAUTION

CAUTION: MOSMSGCDPN or/and MOSMSGCGPN NPP Services must be turned on for the feature to be functional.

MO-based IS41 SMS NP and MO SMS IS41-to-GSM Migration

The MOSMSICDPN NPP service must be provisioned before the MO-based IS41 SMS NP or the MO SMS IS41-to-GSM Migration feature is turned on for the feature to be functional. The following warning message appears while enabling these features:



CAUTION

CAUTION: MOSMSICDPN NPP Services must be turned on for the feature to be functional.

Portability Check for MO SMS

The MOSMSGCGPN NPP service must be enabled before the Portability Check for MO SMS feature is turned on for the feature to be functional. The following warning message appears while enabling the feature:



CAUTION

CAUTION: MOSMSGCGPN NPP Services must be turned on for the feature to be functional.

MO-based GSM SMS NP

The MOSMSGCDPN NPP service must be provisioned before the MO-based GSM SMS NP feature is turned on for the feature to be functional. The following warning message appears while enabling the feature:



CAUTION

CAUTION: MOSMSGCDPN NPP Services must be turned on for the feature to be functional.

GTT Load Sharing With Alternate Routing Indicator

The GTT Load Sharing with Alternate Routing Indicator (GTT LS ARI) feature allows loadsharing relationships to be established between the MAP and MRN table in that the MAP and MRN sets allow provisioning of MRN and MAP sets, respectively, as the Alternate Mate RI if the point codes in the MAP or MRN table are unavailable.

MO SMS ASD, MO SMS GRN

The MOSMSGCGPN, MOSMSGCDPN, MOSMSICGPN, or MOSMSICDPN NPP service must be provisioned before the MO SMS ASD or MO SMS GRN feature is turned on for the feature to be functional. The following warning message appears while enabling the feature:



CAUTION: MOSMSGCDPN, MOSMSICDPN, MOSMSGCGPN or/and MOSMSICGPN NPP Services must be turned on for the feature to be functional.

Output

```
enable-ctrl-feat:partnum=893xxxxxx:fak=xxxxxxxxxxxxxxxxx
tekelecstp 08-12-04 13:55:19 EST EAGLE 40.1.0
enable-ctrl-feat:partnum=893xxxxxx:fak=xxxxxxxxxxxxxxxxx
Command entered at terminal #4.
ENABLE-CTRL-FEAT: MASP A - COMPLTD
;
```

ent-acg-mic

Enter ACG Manually Initiated Control

Use this command to assign Automatic Call Gapping (ACG) controls to certain queries. The control can apply to all queries or to specific query services and called party digits. If the EAGLE 5 ISS LNP query service receives a query to which a control applies, then the EAGLE 5 ISS sends an ACG component, encoded as configured, with the response.

Keyword: ent-acg-mic

Related Commands: chg-acg-mic, dlt-acg-mic, rept-stat-lnp, rtrv-acg-mic

Command Class: Database Administration

Parameters

:drtn= (mandatory)

Duration index. The amount of time that the ACG is in effect. This number is mapped to a time value at the LNP node. Refer to the chapter on Automatic Call Gapping configuration in the *LNP Feature Activation Guide* for a description of the use of the duration index.

Range: 1-13

Default: The current value

:aintvl= (optional)

AIN interval index

Range: 1-15

Default: The current value

:dgts= (optional)

Digits

Range: 3-10 digits

000-999, 000000-9999999999

:intvl= (optional)

IN Interval index. The amount of time between ACGs. This number is mapped to a time value for the LNP node. Refer to the chapter on Automatic Call Gapping configuration in the *LNP Feature Activation Guide* for a description of the use of the gap interval index.

Range: 0-15

Default: Current value

:nd= (optional)

Number of digits

Range: 3, 6-10

Default: The current value

:serv= (optional)

Query service

Range: **ain**, **in**

:type= (optional)

Type of control

Range: **all**, **sd**

Default: **sd**

Example

```
ent-acg-mic:type=all:nd=6:drtn=6:intvl=2:aintvl=7
```

```
ent-acg-mic:serv=ain:dgts=9194602132:drtn=13:aintvl=1
```

```
ent-acg-mic:type=sd:serv=in:dgts=919:drtn=8:intvl=3
```

Dependencies

If the **type=all** parameter is specified, the optional parameters **nd**, **intvl**, and **aintvl** must be specified.

If the **type=all** parameter is specified, the optional parameters **serv** and **dgts** cannot be specified.

If the **type=sd** parameter is specified, the optional parameters **serv** and **dgts** must be specified.

If the **type=sd** parameter is specified, the optional parameter **nd** cannot be specified.

If the **serv=in** parameter is specified, the optional parameter **aintvl** cannot be specified.

If the **serv=ain** parameter is specified, the optional parameter **intvl** cannot be specified.

If the **serv=in** parameter is specified, the optional parameter **intvl** must be specified.

If the **serv=ain** parameter is specified, the optional parameter **aintvl** must be specified.

The **dgts** parameter value must be specified as 3 or 6–10 digits.

The **nd** parameter value must be **3** or **6-10**.

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before this command can be entered.

If the **type=all** parameter is specified, a manually initiated control (MIC) with the **type=all** parameter must not already exist.

If the **type=sd** parameter is specified, a MIC with the same service and digits must not already exist.

A maximum of 256 **type=sd** MICs are allowed.

Notes

None

Output

```
ent-acg-mic:type=all:nd=6:drtn=6:intvl=2:aintvl=7
```

```
rlghncxa03w 04-02-28 08:50:12 EST EAGLE 31.3.0
```

```
ACG MIC table is (11 of 256) 4% full of type SD
```

```
ENT-ACG-MIC: MASP A - COMPLTD
```

```
;
```

ent-acg-noc

Enter ACG Node Overload Control

Use this command to enter the values for the automatic call gapping (ACG) controls that you want to send when you reach the specified node overload level. The definition is comprised of the threshold LNP query rates for node overload levels and the values for the ACG to be sent when at the level. If a level is not defined, it is not used. Level 10 is predefined.

Keyword: ent-acg-noc

Related Commands: chg-acg-noc, dlt-acg-noc, rept-stat-lnp, rtrv-acg-noc

Command Class: Database Administration

Parameters

:drtn= (mandatory)

Duration index. The amount of time that the ACG is in effect. This number is mapped to a time value at the LNP node. Refer to the chapter on Automatic Call Gapping configuration in the *LNP Feature Activation Guide* for a description of the use of the duration index.

Range: 1-13

Default: The current value

:intvl= (mandatory)

Interval index. The amount of time between ACGs. This number is mapped to a time value for the LNP node. Refer to the chapter on Automatic Call Gapping configuration in the *LNP Feature Activation Guide* for a description of the use of the gap interval index.

Range: 0-15

Default: Current value

:lvl= (mandatory)

Overload level.

Range: 1-9

:qr= (mandatory)

Query rate. The number of LNP queries, which define a particular overload level, in a 30-second period.

Range: 1-2147483647

:and= (optional)

AIN number of digits. The number of digits in the global title address of an AIN query.

Range: 6, 10

Default: 6

:ind= (optional)

IN number of digits. The number of digits in the global title address of an IN query.

Range: 6, 10

Default: 6

Example

ent-acg-noc:lvl=3:qr=300000:and=10:ind=6:drtn=6:intvl=3

Dependencies

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before the **ent-acg-noc** command can be entered.

Either **6** or **10** must be specified for the **and** parameter.

The specified overload level must not already be defined.

Either **6** or **10** must be specified for the **ind** parameter.

Notes

None

Output

```

ent-acg-noc:lvl=3:qr=300000:and=10:ind=6:drtn=6:intvl=3
rlghncxa03w 04-02-28 08:50:12 EST EAGLE 31.3.0
ENT-ACG-NOC: MASP A - COMPLTD
;

```

ent-appl-rtkey**Enter Application Route Key Table**

Use this command to configure static entries in the Routing Key table, which associates a routing key with a socket name.

There are three types of routing keys, as follows:

- DPC, SI, SSN routing keys, which are used to route SCCP messages
- DPC, SI routing keys, which are used to route non-SCCP and non-ISUP messages
- DPC, SI, CIC routing keys, which are used to route ISUP messages

Keyword: ent-appl-rtkey

Related Commands: dlt-appl-rtkey, rtrv-appl-rtkey

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" in Appendix A for a detailed description of point code formats, rules for specification, and examples.

:asname= (mandatory)

Application Server (AS) name assigned to this routing key.

Range: ayyyyyyyyyyyyyy

Up to 15 alphanumeric characters; the first character must be a letter

:cice= (optional)

The end range of circuit identification codes assigned to the routing key.

Range: 0-4294967295

See Table A-4 for valid CIC values for specified SI and MSU types.

:cics= (optional)

The start range of circuit identification codes assigned to the routing key. This parameter is valid only if **si=4, 5, or 13** and is required if **si=4, 5, or 13** and **type=full**.

Range: 0-4294967295

See Table A-4 for valid CIC values for specified SI and MSU types.

:dpc= (optional)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: dpca

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001-005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006-255**.

The point code **000-000-000** is not a valid point code.

:dpc/dpca/dpci/dpcn/dpcn24= (optional)

Destination point code.

:dpci= (optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*)

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:dpcn= (optional)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:dpcn24= (optional)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:opc= (optional)

ANSI originating point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Synonym: **opca**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006–255**.

The point code **000-000-000** is not a valid point code.

:opc/opca/opci/opcn/opcn24= (optional)

Originating point code. This parameter is valid only if **si=4, 5, or 13**, and is required when **si=4, 5, or 13** and **type=full**.

:opci= (optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*)

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:opcn= (optional)

New ITU national originating point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfnti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn, prefix-nnnnn-gc, prefix-m1-m2-m3-m4, prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:opcn24= (optional)

24-bit ITU national originating point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:rcontext= (optional)

Routing context. This parameter specifies a new routing context for a routing key. The routing context uniquely identifies the routing key.

Routing context is mandatory for routing keys associated with SUA Application Servers. Routing context is optional for routing keys associated with M3UA Application Servers.

Range: **0-4294967295**

:si= (optional)

Service indicator.

Range: 1-15

0-15 or equivalent text values:

Number = Text—Description

0 = **snm**—Signaling network management messages

1 = **regtest**—Signaling network testing and maintenance regular

2 = **spltest**—Signaling network testing and maintenance special

3 = **sccp**—SCCP

4 = **tup**—Telephone user part

5 = **isup**—ISDN user part

13 = **qbicc**

:ssn= (optional)

Subsystem number. This parameter is valid only if **si=3** and is required if **si=3** and **type=full**.

Range: 0-255

:type= (optional)

The type of routing key.

Range: full, partial, default

Default: full

Example

```
ent-appl-rtkey:asname=suaas1:dpc=8-8-8:si=3:ssn=5:rcontext=100
```

```
ent-appl-
```

```
rtkey:asname=suaas2:dpc=8-8-8:si=3:type=partial:rcontext=101
```

```
ent-appl-rtkey:asname=suaas3:dpc=8-8-8:type=partial:rcontext=102
```

```
ent-appl-rtkey:asname=suaas4:si= 3:type=partial:rcontext=103
```

```
ent-appl-rtkey:asname=suaas5:type=default:rcontext=104
```

```
ent-appl-
```

```
rtkey:asname=m3uaas1:dpc=8-8-9:si=5:opc=3-3-3:cics=1:cice=100:rco  
ncontext=200
```

```
ent-appl-
```

```
rtkey:asname=m3uaas2:dpc=8-8-9:si=5:opc=3-3-3:type=partial:rconte  
xt=201
```

```
ent-appl-
```

```
rtkey:asname=m3uaas3:dpc=8-8-9:si=5:type=partial:rcontext=202
```

```
ent-appl-rtkey:asname=m3uaas4:dpc=8-8-9:type=partial:rcontext=203
```

```
ent-appl-rtkey:asname=m3uaas5:si= 5:type=partial:rcontext=204
```

```
ent-appl-rtkey:asname=m3uaas6:type=default:rcontext=205
```

```
ent-appl-
```

```
rtkey:dpci=s-3-11-1:si=5:opci=s-4-11-1:cics=1:cice=1000:asname=as  
itu
```

```
ent-appl-rtkey:dpc=1-1-1:si=3:asname=as1:ssn=255
```

```
ent-appl-rt-appl-
```

```
rtkey:dpci=3-11-1:si=3:opci=4-11-1:cics=1:cice=1000:asname=asitu:  
rcontext=7
```


Dependencies

The **srkq** parameter value in the **chg-sg-opts** command limits the maximum number of static routing keys that can be provisioned using the **ent-appl-rtkey** command. For **ss7ipgw** and **ipgwi** applications running on SSEDCM cards (870-2732-xx) or E5-ENET cards (870-2212-xx), there is a limit of 2500 routing keys in the system. See the **chg-sg-opts** command for parameter values that allow 2500 routing keys to be defined in the system.

The **ssn** parameter is valid only when the **si=3** (or **sccp**) parameter is specified. When the **si=3** (or **sccp**) parameter is not specified, the **ssn** parameter cannot be specified.

The value entered for the starting circuit identification code (**cics**) must be less than or equal to the value entered for the ending circuit identification code (**cice**).

The ISUP routing-over-IP feature must be turned on before a DPC/SI/CIC routing key to route ISUP messages can be specified. The ISUP routing-over-IP feature can be turned on by entering the command **chg-feat:ipisup=on**.

A circuit identification code range (**cics** to **cice**) cannot be specified that overlaps an existing routing key.

When the **si=4**, **5**, or **13** (or **tup**, **isup**, or **qbicc**) parameter is specified, the **opc**, **cics**, and **cice** parameters are required. The **opc**, **cics**, and **cice** parameters can be specified only if the **si=4**, **5**, or **13** parameter is specified. See Table A-4 for valid **cic** and **si** values for MSU types.

Partial point codes are not allowed; no asterisks can be specified in the routing key in the command.

Mixed point code types are not allowed; the types for the **opc** and **dpc** parameters must match.

A DPC/SI routing key must be specified when the DPC is ANSI and the **si=4** parameter is specified (TUP is used only in an ITU network).

When the **type=full** parameter is specified, the **dpc** and **si** parameters must also be specified.

The group codes for the **dpc** and **opc** parameter values must match when both parameters are entered in the command.

The **rcontext** parameter must be specified for routing keys that are associated with SUA Application Servers.

The specified **rcontext** parameter value must not already exist in the database.

If specified, the service indicator parameter must be **si=3** for routing keys that are associated with SUA Application Servers.

An AS cannot be simultaneously assigned to a routing key with routing contexts and routing keys without routing context.

To assign an M3UA or SUA association to multiple routing keys with routing context, the M3UA/SUA association must be assigned to more than one AS and each AS must be assigned to a routing key with routing context.

The AS name and parameters specified for a routing key must use an address format that is valid for the adapter type used by the ASP associations assigned to the AS.

If the **type=default** parameter is specified, then the **rcontext** parameter is the only optional parameter that can be specified.

The following four types of partial routing keys are supported:

- DPC/SI/OPC (ignore CIC) can be used as a partial match key for CIC- based traffic.
- DPC/SI (ignore all other fields) can be used as a partial match key for CIC- based traffic or SCCP traffic.
- DPC only (ignore all other fields) can be used as a partial match for any type of traffic.

- SI only (ignore all other fields) can be used as a partial match for any type of traffic.

The DPC entered cannot be an APC or SAPC for an IPGWx linkset. Routing keys cannot be provisioned for the fake adjacent node.

Notes

The Routing Key table associates a routing key with a socket name or an Application Server (AS).

The routing key can be associated with up to 16 socket names or with 1 AS.

The originating point code (**opc**) and destination point code (**dpc**) must not specify a cluster route.

Group codes are required for ITU-N point codes and spare point codes (DPCN/OPCN) when the ITU Duplicate Point Code feature (ITUDUPPC) is turned on, and not allowed when the feature is off.

Routing context is a routing key parameter that uniquely identifies routing keys. Routing context is mandatory for routing keys associated with SUA Application Servers and optional for routing keys associated with M3UA Application Servers. An AS cannot be simultaneously assigned to routing keys with routing contexts and routing keys without routing contexts.

An AS cannot be simultaneously assigned to a routing key with routing contexts and routing keys without routing contexts.

An AS can be associated with multiple routing keys that do not contain routing context. An AS can be associated with only 1 routing key with routing context. To assign an M3UA or SUA association to multiple routing keys with routing context, the M3UA/SUA association must be assigned to more than one AS and each AS must be assigned to a routing key with routing context.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-).

Output

```
ent-appl-rtkey:dpc=2-2-2:asname=assoc1:type=partial
rlghncxa03w 08-04-17 15:35:05 EST EAGLE 38.0.0
ENT-APPL-RTKEY: MASP A - COMPLTD
;
```

ent-as

Enter Application Server

Use this command to create an Application Server (AS) as a logical entity to serve a specific routing key. This command enters a new AS into the AS table and assigns an M3UA or SUA SCTP association to it, or assigns an M3UA or SUA SCTP association to an existing AS.

Keyword: ent-as

Related Commands: chg-as, dlt-as, rtrv-as

Command Class: Database Administration

Parameters

NOTE: The asname parameter is no longer available.

:aname= (mandatory)

Name of the M3UA or SUA SCTP association.

Range: ayyyyyyyyyyyyyy

Up to 15 alphanumeric characters; the first character must be a letter.

:asname= (mandatory)

Name of the Application Server (AS).

Range: aaaaaaaaaaaaaa
Up to 15 alphanumeric characters; the first character must be a letter.

Example

ent -as : asame=asx : aname=asxp1

Dependencies

The specified **aname** must exist in the IPAPSOCK table.

The adapter layer for each association assigned to the AS must be defined.

SUA Application Servers must have routing keys with assigned routing contexts.

The service indicator must be **si=3** for routing keys that are associated with SUA Application Servers.

The adapter layer must be the same for all M3UA/SUA associations assigned to the AS.

The value specified for the **aname** parameter cannot refer to an IPLIMx or IPSG association.

The **asame=default** parameter cannot be specified.

Notes

The DCM card has 16 MB of memory. Socket/association limits are based on card memory as is the ratio of associations to sockets. This ratio, known as the trade ratio, defines the number of sockets that are equivalent to one association with respect to memory consumption.

By default the AS recovery timer value is set to 200 ms when an AS is entered. This value can be changed at any time using the **chg-as** command. The new timer value will be used the next time the AS enters the AS-Pending state.

The trade ratio states the quantity of associations to sockets that may be provisioned on a certain card, as follows:

Trade Ratio = a:s

Where:

a=association : s=socket

Table 5-42 shows the maximum sockets/associations per DCM card.

Table 5-42. Maximum Sockets/Associations per Card

Card Type	Socket to Assoc Ratio	Max Sockets	Max Associations
DCM	8:1	50	4

Output

```
ent -as : asame=asx : aname=asxp1
rlghncxa03w 05-05-17 15:35:05 EST  EAGLE 34.0.0
ENT-AS: MASP A - COMPLTD
;
```

ent-assoc

Enter Association

Use this command to configure the SCTP associations in the IPAPSOCK table. This command associates the local host and local port to a remote host and remote port in the IPAPSOCK table. This command provides the association to transport protocol data units and adapter layer peer messages. Each association is connected to a process on the far end.

[illegible]

:rport= (optional)
The SCTP port number for the Remote Host.
Range: 1024-65535
Default: 0

Example

```
ent-  
assoc:aname=assoc1:lhost=gw105.nc.tekelec.com:lport=1030 :rhost=gw  
100.nc.tekelec.com:rport=1030:adapter=m3ua
```

Dependencies

The association name (**aname**) must already exist in the IP Socket/Association (IPAPSOCK) table.
The hostnames specified in the **lhost** and **alhost** parameters must refer to different IP addresses.

The IP host names specified in the **lhost** and **alhost** parameters must exist in the IP Host table and must be provisioned as local to this EAGLE 5 ISS.

The hostnames specified in the **lhost** and **alhost** parameters must refer to IP addresses on the same IP card.

Only **link=a** can be specified if the card is running the **ss7ipgw** or **ipgwi** application.

Links {**a..a3, b..b3**} or {**a..a7, b..b7**} can be specified if the card running **iplim** or **iplimi** application is an SSED CM or E5-ENET card respectively.

To assign an association on an IPLIMx card for a local host, the signaling link associated with the signaling link port must have its **ipliml2= m2pa**.

If the **m2patset** parameter is specified, then the **adapter=m2pa** parameter must be specified.

If the card is running an **iplim** or **iplimi** application, then an association with **adapter=sua** or **m3ua** cannot be assigned as a value for the **lhost** parameter.

Association connection parameters (**lhost**, **rhost**, **lport**, **rport**) must be unique.

The card location for the card associated with the **lhost** and **alhost** must exist in the IP Link table.

The allowed maximum is 1 association per signaling link on IPLIMx cards.

There is a maximum of 50 connections (association-to-AS assignments + sockets) per Local Host on IPGWx cards.

A maximum of 4000 connections (association-to-AS assignments + sockets) are allowed per system.

If the value specified for the **lhost** parameter refers to an IPSG card, then the **link** parameter cannot be specified.

A maximum of 32 associations can be provisioned on an IPSG card.

Links **a**, **a1-a15**, **b**, **b1-b15** can be specified for an E5-ENET card running the IPSG application.

Notes

The IPASOCK table is used to associate the Local Host/Local Port to a Remote Host/Remote Port. This fully specifies the connection.

SCTP associations can be configured as either uni-homed or multi-homed endpoints. Uni-homed endpoints are SCTP associations configured with the **lhost** parameter specified and the **alhost** parameter not specified. In this case, the **lhost** represents an IP address that corresponds to either the A or B network of the IP application card (see **chg-ip-lnk**). Multi-homed endpoints are SCTP

associations configured with both the **lhost** and **alhost** parameters specified. In this case, the **lhost** represents an IP address corresponding to one of the networks (A or B) of the IP card while the **alhost** represents an IP address corresponding to the other network of the same IP card.

If a valid **lhost** parameter is specified that equates to a valid IP address, the **lhost** maps directly to a card location in the IP Link table, which can then determine the card's application (IPLIMx or SS7IPGWx). If the application is an IPLIMx, two additional validation checks are made:

- The **adapter** parameter value must equal **m3ua** or **m2pa**.
- The **ipliml2** value for the IPLIMx signaling link must be the same as the association **adapter** parameter value.
- The **ipliml2** value for an IPLIMx signaling link cannot be set to **m3ua**.

If the determination of the application running on the card or the signal link cannot be performed when the **ent-assoc** command is executed, the check will be performed by the **chg-assoc** command.

An association with an adapter value of **m2pa** cannot be assigned to an SS7IPGW or IPGWI host.

There are fields in the IPAPSOCK table that receive default values even though there are no parameters on this command for changing those fields. If a different value is desired, the **chg-assoc** command must be used. The **chg-assoc** command can also be used if the hostnames are too long to fit on the command line with other parameters. The fields in question and their default values are:

- open=no
- alw=no
- rmode=lin
- rmin=120
- rmax=800
- rtimes=10
- cwmin=3000
- ver=rfc
- istrms=2
- ostrms=2

For the M2PA RFC feature, when the application is IPLIMx and the **adapter=m2pa** parameter is specified, the supported M2PA version is set to M2PA RFC by default.

Output

```
ent-
assoc:aname=assoc1:lhost=gw105.nc.tekelec.com:lport=1030:rhost=gw
100.nc.tekelec.com:rport=1030:adapter=m3ua
    rlgncxa03w 04-02-17 15:35:05 EST EAGLE 31.3.0
    ENT-ASSOC: MASP A - COMPLTD
;
```

ent-card

Enter Card

Use this command to add a card to the database. The card type and application specifies the function assigned to the card.

Keyword: ent-card

Related Commands: dlt-card, init-card, rept-stat-card, rmv-card, rst-card, rtrv-card

Command Class: Database Administration

Parameters

NOTE: See Table A-7 for information on valid card types and applications for cards that use the ent-card command.

NOTE: The phrase "Service Module card" is used to mean either a Database Services Module (DSM) card or an E5-SM4G card when either type of card can be used. Both types of cards are provisioned with the type=dsml and appl=vsccp parameters.

:appl= (mandatory)

Application. This parameter specifies the application for the card.

Range: xxxxxx

1 alphabetic character followed by up to 6 alphanumeric characters. Valid applications are:

atmansi—This application is used by the LIM cards to support the high-speed ATM signaling link feature. It is also used by the E5-ATM card to support T1 functionality.

atmitu—This application is used by the LIM cards to support the high-speed ATM signaling link feature. It is also used by the E5-ATM card to support E1 functionality.

ccs7itu—This application is used by the LIM cards for ITU-TSS MTP functionality. It is also used for the 2-port E1 card, the E1/T1 MIM card, the HC MIM card, and the E5-E1T1 card.

eroute—This application is used by the STC card for EAGLE 5 Integrated Monitoring Support functions.

gls—This application is used by the TSM and E5-TSM cards for downloading gateway screening to LIM and SCCP cards.

ipgwi—This application is used by the SSEDCCM card and the E5-ENET card for TCP/IP point-to-multipoint connectivity for ITU point codes. The system allows a maximum of 125 cards to be assigned the **ipgwi** application.

iplim—This application is used by the SSEDCCM card and the E5-ENET card for TCP/IP point-to-point connectivity for ANSI point codes.

iplimi—This application is used by the SSEDCCM card and the E5-ENET card for TCP/IP point-to-point connectivity for ITU point codes.

ips—This application is used by the IPSM card and the E5-IPSM card for the IP User Interface feature.

ipsg—This application is used by the E5-ENET card to support the combined functionality of IPLIMx M2PA and IPGWx M3UA.

mcp—This application is used by the MCPM card for the Measurements Platform feature.

sccp—This application is used by the TSM cards for the Global Title Translation feature.

ss7ansi—This application is used by the LIM cards, the E1/T1 MIM card, the HC MIM card, and the E5-E1T1 card for the MTP functionality.

ss7gx25—This application is used by the LIM cards to support X.25 functionality.

ss7ipgw—The application software for TCP/IP point-to-multipoint connectivity. The system allows a maximum of 125 cards to be assigned the **ss7ipgw** application.

stplan—This application is used by the ACM, DCM, and E5-ENET cards to support the STP LAN functionality.

vsccp—This application is used by the Service Module cards to support the G-Flex, G-Port, INP, and LNP ELAP Configuration features. If the EPAP-based and G-Flex, G-Port, INP, V-Flex, or LNP ELAP Configuration features are not turned on, and a Service Module card is present, the **vsccp** GPL processes normal GTT traffic.

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

:type= (mandatory)

This parameter specifies the type of hardware being added.

Range: xxxxxxx

1 alphabetic character followed by up to 6 alphanumeric characters. Valid applications are:

acmenet—Data link card for the STP LAN feature. The application type for this card type is **stplan**.

dcm—Data Communications Module card (SSEDCM or E5-ENET card). The application types for this card type are **stplan**, **iplim**, **iplimi**, **ss7ipgw**, and **ipgwi**.

dsm—Database Services Module (DSM) card or E5-SM4G card to support EPAP-based features, LNP features, and the GTT feature. The application type for this card type is **vsccp**.

enet—E5-ENET card to support the IP Signaling Gateway. The application type for this card type is **ipsg**.

ipsm—IP Services Module card to support the IP User Interface feature. The application type for this card type is **ips**.

limatm—High speed ATM or E5 ATM signaling link. The application type for this card type is **atmansi**.

limds0—Signaling link with DS0 interface. For a two-port LIM, the application types for this card type are **ss7ansi**, **ss7gx25**, and **ccs7itu**. For a multi-port LIM, the application type (**appl**) for this card type is **ss7ansi**.

lime1atm—High speed E1 ATM or E5 ATM signaling link. The application type for this card type is **atmitu**.

limocu—Signaling link with OCU interface. The application types for this card type are **ss7ansi**, **ss7gx25**, and **ccs7itu**.

limv35—Signaling link with V.35 interface. The application types for this card type are **ss7ansi**, **ss7gx25**, and **ccs7itu**.

lime1—E1 card or E1/T1 MIM card or HC MIM card or E5-E1T1 card used as an E1 card. The application types for this card type are **ss7ansi** and **ccs7itu**.

limt1—E1/T1 MIM card, HC MIM card, or an E5-E1T1 card used as a T1 card. The application types for this card type are **ss7ansi** and **ccs7itu**.

limch—E1 card or E1/T1 MIM card defined as a Channel card. The application types for this card type are **ss7ansi** and **ccs7itu**.

mcpm—Measurement Collection and Polling Module card used for the Measurements Platform feature. The application type for this card type is **mcp**.

stc—Signalling Transport Card (STC card and E5-STC card) used for the EAGLE 5 Integrated Monitoring Support feature. The application type for this card type is **eroute**.

tsm—Memory card for GTT and gateway screening. The application types for this card type are **gls** and **sccp**.

:force= (optional)

If the **force=yes** parameter is used to add a LIM to the database, it is recommended that you add the required number of SCCP cards to the database after the LIM is added to avoid the loss of global title translation traffic.

Range: **yes, no**

Default: **no**

Example

```
ent-card:loc=1206:type=limatm:appl=atmansi:force=yes
```

```
ent-card:loc=1208:type=limatm:appl=atmansi:force=no
```

```
ent-card:loc=1206:type=limds0:appl=ss7ansi
```

```
ent-card:loc=1105:type=enet:appl=ipsg
```

Dependencies

NOTE: The LNP feature is "turned on" when an LNP ported TNs quantity is shown in the **rtrv-ctrl-feat** command output. An LNP quantity feature access key has been enabled and turned on. See the **enable-ctrl-feat** command for more information about enabling and turning on the LNP feature.

For features that are enabled with the **enable-ctrl-feat** command, use the **rtrv-ctrl-feat** command to verify whether a feature is enabled or turned on.

For features that are turned on with the **chg-feat** command, use the **rtrv-feat** command to display the **on** or **off** status of the features.

Table A-7 shows the card names, the only valid card type (**type** parameter) and application (**appl** parameter) combinations, the card part numbers, and the maximum number of cards allowed in the database.

The card location must not be **1113-1118**, or **xy 09** and **xy 10** where *x* is the frame and *y* is the shelf.

The specified shelf location must be provisioned and present in the frame.

The specified card location cannot already be provisioned in the database.

The DSM card must be inserted into an odd-numbered location. The *n*+1 slot next to the DSM card must be empty, where *n* is the odd-numbered location (for example, if the DSM card is in location 1101, then the 1102 slot must be empty and unprovisioned).

The Measurements Platform feature must be turned on before the command can be entered for an MCPM card (**:type=mcpm:appl=mcp**).

If the LNP ELAP Configuration feature is turned on, the **appl=sccp** parameter cannot be specified.

If any of the following features are enabled, then Service Module cards running the **vsccp** application must be provisioned in the system. TSM cards cannot be used:

- AINPQ
- A-Port
- ATINP
- EIR

- Enhanced GSM MAP Screening (EGMS)
- Flexible GTT Load Sharing
- G-Flex
- G-Port
- INP
- IS41 GSM Migration (IGM)
- LNP ELAP Configuration
- MO SMS ASD
- MO SMS B-Party Routing
- MO SMS GRN
- MO SMS IS41-to-GSM Migration
- MO-based GSM SMS NP
- MO-based IS41 SMS NP
- Origin-based SCCP Routing
- Prepaid SMS Intercept Ph1
- TIF Number Portability
- TIF SCS Forwarding
- TIF Simple Number Substitution
- Transaction-based GTT Loadsharing
- Voice Mail Router (V-Flex)
- Weighted GTT Loadsharing

The following applications are valid for the **appl** parameter: **ss7ansi**, **sccp**, **gls**, **ccs7itu**, **ss7gx25**, **stplan**, **atmansi**, **iplim**, **iplimi**, **ss7ipgw**, **vsccp**, **atmitu**, **ipgwi**, **ips**, **eroute**, **mcp**, **ipsg**.

The n+1 slot next to the DSM or HC-MIM card must be empty, where **n** is the odd-numbered location (for example, if the DSM card is in location 1101, then the 1102 slot must be empty and unprovisioned).

The GTT feature must be turned on to specify the **appl=sccp** parameter or the **appl=vsccp** parameter.

The GWS feature must be turned on to specify the **appl=gls** parameter.

The X25G feature must be turned on to specify the **appl=ss7gx25** parameter.

The LAN feature must be turned on to specify the **appl=stplan** parameter.

The XGTT feature with 1 million entries requires the **vsccp** application running on Service Module cards.

The Enhanced GSM MAP Screening (EGMS) feature requires Service Module cards running the **vsccp** application.

The valid card types (**type** parameter) are **limds0**, **limocu**, **tsm**, **limv35**, **acmenet**, **limatm**, **dcm**, **dsm**, **stc**, **lime1**, **limt1**, **limch**, **mcpm**, **lime1atm**, **ipsm**, **enet**.

Table A-7 lists the maximum number of cards of each card type and application that are allowed in the system.

If any EPAP-based features or LNP features are turned on, or the ATINP feature is enabled, then a maximum of 25 Service Module cards is allowed in the system. If the system is running only GTT, a maximum number of 32 Service Module cards is allowed in the system.

When the IDP Screening for Prepaid feature is enabled, TSM cards cannot be provisioned.

TSM cards running the **sccp** application cannot be provisioned when the Flexible GTT Load-Sharing feature is enabled. The Flexible GTT Load-Sharing feature requires Service Module cards running the **vsccp** application.

If the A-Port feature is enabled, ASM and TSM cards cannot be provisioned in the system.

If the IGM feature is enabled, ASM and TSM cards cannot be provisioned in the system.

All provisioned shelves must contain HIPR cards before more than 115 LIM-ATM cards can be provisioned.

If the **force** parameter is not specified or has a value of **no**, then the increased GTT TPS from the new card must be within the Eagle current TPS rating.

The following features do not support LIM-OCU and LIM-V.35 card types.

- Origin-Based MTP Routing
- Multiple Linksets to a Single Adjacent PC (MLS)
- Proxy Point Code

Notes

ITU Environment

Each TSM card can handle 850 transactions per second; each DSM card can handle 1700 transactions per second.

When the **ent-card** command is entered to add a card that requests service from either an SCCP or VSCCP card, the EAGLE 5 ISS adds the current TPS level to the estimated TPS level for the new card. The EAGLE 5 ISS uses the following values to derive the TPS estimate: 53 for low-speed links (cards provisioned as SS7ANSI, CCS7ITU or SS7GX25 cards), 480 for ATM, and 1000 for IPLIM cards. The EAGLE 5 ISS then compares the sum to a user-configured threshold (SCCP TPS Threshold) that is set using the **chg-th-alm** command. The purpose of the SCCP TPS threshold is to generate an alarm if the threshold is exceeded. The SCCP TPS threshold also triggers an error message if the **ent-card** command is issued and the resulting TPS level (the current TPS plus the estimated TPS for the new card) would be greater than the configured threshold:

E3715: Cmd Rej - Insufficient #SCCP cards to support LIM - use FORCE=YES
The **force** parameter can be specified to add the card even if its addition would exceed the SCCP TPS threshold. If the **force=yes** parameter is specified, the command is accepted but the following warning message appears:

WARNING: System current rated TPS unable to support additional SS7 card = use FORCE=YES.

If the **force=yes** parameter is specified, it is recommended that the required number of SCCP cards be added to the database after the SS7 card is added. This action avoids the loss of GTT traffic. Another option is to add additional SCCP cards or to increase the SCCP TPS threshold, and then add the SS7 card. This action prevents the alarm from being triggered.

For additional information on using the **force** parameter, see Chapter 4, "System Administration Procedures" of the *Database Administration Manual - System Management*.

If the G-Flex, G-Port, V-Flex, INP, LNP ELAP Configuration or ATINP feature is turned on, then the system cannot contain a mix of TSM cards running the SCCP application and Service Module cards running the VSCCP application.

ANSI Environment

In an ANSI environment with only the G-Flex feature turned on, only DSM cards in the system and the **ansigflex** system option enabled, each DSM card can handle up to 1700 TPS.

The provisioning method of an MPL or MPL-T (multi-port LIM) and a two-port LIM is the same. The two-port LIM supports the LIMDS0, LIMOCU, or LIMV35 interface, and the **appl** value can be **ss7ansi**, **ccs7itu**, or **ss8gx25**. The MPL cards support only the LIMDS0 interface, and the **appl** value must be **ss7ansi**. The MPL cards support 8 ports, namely **a**, **b**, **a1**, **b1**, **a2**, **b2**, **a3**, and **b3**. The **rtv-card** command displays the status of all ports of the MPL cards.

The EAGLE 5 ISS cannot contain more than 115 provisioned LIM-ATM cards unless every provisioned shelf contains HIPR cards. The EAGLE 5 ISS checks the card configuration when the **ent-card** command is used to add a LIM-ATM card.

Using the **dlt-card** command to reduce the ATM card count takes the card out of service.

Use the **ent-card** command to set the card type for a 2-port E1 card or Channel card (**lime1** or **limch**) in the database. Do not use the DIP switches, if any exist on the E1 card.

"STC cards" are SSEDCCM cards and E5-ENET cards that run the **eroute** application.

The **type=stc** and **appl=eroute** parameters apply only when the EAGLE 5 Integrated Monitoring Support (E5IS) feature is turned on.

An "n+1" STC configuration is required to provide redundancy: therefore, a minimum of two STC cards must be provisioned in the EAGLE 5 ISS. If single-slot STC cards are provisioned in the database, then a minimum of two single-slot STC cards must be provisioned in the EAGLE 5 ISS. For "n+1" redundancy purposes, a dual-slot STC card cannot be used to replace a single-slot STC card, and a DCM card cannot be used to replace an E5-ENET card.

The EAGLE 5 ISS can contain a maximum of 32 STC cards.

E5-ENET cards cannot be provisioned on a shelf that contains HMUX cards. If a shelf contains HMUX cards, then any E5-STC cards must be provisioned in shelves adjacent to the shelf containing the cards being monitored. The optimum configuration is to provision half of the STC cards in the previous shelf and half in the next shelf.

If non-E5-ENET cards are used as STC cards, then a maximum of 3 cards can be provisioned in a shelf that contains HMUX cards.

HIPR cards must be installed on any shelf that contains E5-STC cards.

HIPR and HMUX cards can be used at the same time in the shelf only when upgrading from HMUX to HIPR cards.

If a shelf contains HIPR cards, then the STC cards must be provisioned in the same shelf that contains the cards or links being monitored. A maximum of 4 E5-STC cards can be provisioned on a shelf that contains HIPR cards. A maximum of 16 non-E5-ENET cards that are acting as STC cards can be provisioned on a shelf that contains HIPR cards.

If IP signalling links are being monitored, then only single-slot STC cards can be provisioned. HIPR cards must be used in the shelves where the IP links are located.

The SSEDCCM card occupies only one slot in an EAGLE 5 ISS shelf. The provisioning rules for DCM/STC cards allow provisioning of any slot where a DCM or STC card can physically be inserted. If the slot is provisioned for a DCM card, an E5-ENET card can be inserted instead of a DCM card for **stplan** and an E5-ENET or SSEDCCM card for **iplim** or **ipgw** applications. The slot located immediately to the right of an SSEDCCM card can also be provisioned.

Either DCM cards or E5-ENET cards can be provisioned to run the STPLAN application.

An "n+1" STP LAN configuration is required to provide redundancy: therefore, a minimum of two cards running the STPLAN application (E5-SLAN cards) must be provisioned in the EAGLE 5 ISS.

A minimum of 2 E5-SLAN cards must be provisioned in the EAGLE 5 ISS. For "n+1" redundancy purposes. A DCM card cannot be used to replace an E5-SLAN card.

E5-ENET cards cannot be provisioned on a shelf that contains HMUX cards. If a shelf contains HMUX cards, then the E5-SLAN cards must be provisioned in shelves adjacent to the shelf containing the cards being monitored. The optimum configuration is to provision half of the E5-SLAN cards in the previous shelf and half in the next shelf.

If DCM cards are used to run the STPLAN application, then up to 16 cards can be provisioned in a shelf that contains HMUX cards.

HIPR cards must be installed on any shelf that contains E5-SLAN cards.

HIPR and HMUX cards can be used at the same time in the shelf only when upgrading from HMUX to HIPR cards.

If a shelf contains HIPR cards, then the cards used to run the STPLAN application (either DCM or E5-SLAN cards) must be provisioned in the same shelf that contains the cards or links being monitored. A maximum of 2 E5-SLAN cards and up to 16 DCM cards can be provisioned on a shelf that contains HIPR cards.

If an LNP feature quantity that is greater than 192 million numbers is present in a node, and there is an attempt to insert an E5-SM4G card, then the E5-SM4G card auto-inhibits (see the **alw-card** command).

Two HIPR cards must be installed on each shelf where an E5-SM4G card is installed.

Two HIPR cards must be installed on each shelf where an E5-IPSM card is installed.

A maximum of three E5-IPSM cards, IPSM cards, or a combination of both cards is supported for a single EAGLE 5 ISS node, on any shelf or combination of shelves.

Cards of type **enet** consist of E5-ENET cards running the IP Signaling Gateway application (**appl=ipsg** and **type=enet**). The IPSG application combines the functionality of IPLIMx M2PA and IPGWx M3UA. A maximum of 100 IPSG cards are allowed per node, independently of other card types.

The E5-ATM card supports both ANSI and ITU implementations and can be used to replace the LIM-ATM and E1-ATM cards. The LIM-ATM and E1-ATM cards continue to be supported.

The E5-ATM card can support 2 ATM signaling links, operating at 1 Erlang. If the **b** signaling link is provisioned, then the card slot is no longer compatible with the LIM-ATM or E1-ATM cards.

HIPR cards must be installed on any shelf that contains E5-ATM cards.

IP Signaling Capacity Guidelines

System limits on the total number of cards allowed in the system are not enforced by the **ent-card** command. The total IP Signaling TPS for the system cannot exceed 500,000 TPS.

Two HIPR cards must be installed on each shelf where an E5-TSM card is installed. A maximum of eight E5-TSM cards, TSM cards, or a combination of both cards is supported for a single EAGLE 5 ISS node, on any shelf or combination of shelves.

Fast Copy Cards

A card that can run the Fast Copy interface is referred to as an *FC-capable* card. Currently, E5-ENET cards running the **ipsg** application are the only supported FC-capable cards. After the **fcmode=fcopy** parameter (see the **chg-eisopts** command) is specified for an FC-capable card, the card is referred to as an *FC-enabled* card.

Output

```
ent-card:loc=1206:type=limds0:appl=ss7ansi
rlghncxa03w 06-06-01 11:11:28 EST EAGLE 35.0.0
ENT-CARD: MASP A - COMPLTD
;
```

ent-csl**Enter Common Screening List**

Use this command to enter new screening data into the Common Screening List (CSL). The Common Screening List commands are used to tailor certain types of general screening information to specific features.

Keyword: ent-csl

Related Commands: chg-csl, dlt-csl, rtrv-csl, rtrv-ctrl-feat

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:ds= (optional)

Digit string. This parameter specifies a unique string of digits that is used by the specified screening feature.

Either the **ds** parameter or the **pc** parameter must be specified. Both parameters cannot be specified in the same command

Range: 1-15 digits

Valid digits are **0-9, a-f, A-F**.

4 digits—IDP Screening for Prepaid **skts** list

1-15 digits—IDP Screening for Prepaid **insl** list

1-15 digits—Prepaid IDP Query Relay **gt** list

1-6 digits—Prepaid IDP Query Relay **ccndc** list

1-4 digits—Prepaid IDP Query Relay **skbcsn** list

1-6 digits—TINP **acscodc** and **escodc** lists

1-15 digits—V-Flex **vmpfx** list

:feature= (optional)

Feature name. This parameter specifies the name of the enabled feature for which the command is entered.

Either the **pn** parameter or the **feature** parameter must be specified to identify the feature.

Range: ayyyyyyyyyyyyyyyyyyyyyyyyyy

1 alphabetic character followed by up to 24 optional alphanumeric characters, including spaces and special characters, enclosed in double quotation marks (" ").

- IDP Screening for Prepaid
- Prepaid IDP Query Relay
- TIF Number Portability
- V-Flex

NOTE: If the TINP feature was enabled before upgrading to Release 39.2, then the TIF Number Portability value can be used to access functionality for the TINP feature. If TINP was not enabled prior to upgrade, then the TIF Number Portability value accesses functionality for only the TIF Number Portability feature.

:list= (optional)

This parameter specifies the name of the Common Screening List associated with the feature.

The **list** parameter must be specified when the feature uses more than one type of Common Screening List.

Range: **gt, skbcsm, ccnc, skts, insl, acscode, esccode, npflgrst, vmpfx**

gt— Global Title List

skbcsm— SK+BCSM List

ccnc— CC+NC List

skts— SK+TS List

insl— In Network Subscriber List

acscode— Access Code List

esccode— Escape Code List

npflgrst— NP Flag Reset List

vmpfx— Voice Mail Prefix List

The following screening lists are valid for the indicated features:

- **skts, insl**—IDP Screening for Prepaid
- **ccnc, gt, skbcsm**—Prepaid IDP Query Relay
- **npflgrst**—TIF Number Portability
- **acscode, esccode, npflgrst**—TINP
- **vmpfx**—V-Flex

:p1= (optional)

Parameter value 1. The parameter value is specific to the feature and list name that use this parameter.

:p2= (optional)

Parameter 2. The parameter value is specific to the feature and list name that use this parameter. No feature currently uses this parameter.

:p3= (optional)

Parameter 3. The parameter value is specific to the feature and list name that use this parameter. No feature currently uses this parameter.

:pc= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: **pca**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001–005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006–255**.

The point code **000-000-000** is not a valid point code.

:pc/pca/pci/pcn/pcn24= (optional)

Point code. Either the **ds** parameter or a point code parameter must be specified.

:pci= (optional)

ITU international point code with subfields *zone-area-id*.

Range: 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

The point code **0-000-0** is not a valid point code.

zone—0-7

area—000-255

id—0-7

:pcn= (optional)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*).

Range: s-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:pcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

:pn= (optional)

Part number. This parameter specifies the 9-digit "893xxxxxx" part number of the feature for which the command is entered. The **rtrv-ctrl-feat** command description shows the part number in the command output example.

Either the **pn** parameter or the **feature** parameter must be specified to identify the feature.

Range: 893000000-893999999

The first 3 digits are **893**. Do not separate the digits with dashes or spaces. The following part numbers are valid for this command:

- **893015501**—IDP Screening for Prepaid
- **893016001**—Prepaid IDP Query Relay
- **893018901**—TIF Number Portability
- **893016701**—V-Flex

NOTE: If the TINP feature was enabled before upgrading to Release 39.2, then part number 893018901 can be used to access functionality for the TINP feature. If TINP was not enabled prior to upgrade, then part number 893018901 accesses functionality for only the TIF Number Portability feature.

Example

```
ent-csl:feature="Prepaid IDP Query Relay":list=ccnc:ds=123456
ent-csl:pn=893015001:list=insl:ds=123456789bcdEF
ent-csl:pn=893018901:list=escode:ds=23ffac
ent-csl:pn=893018901:list=npflgrst:pca=1-1-1
ent-csl:feature="TIF Number Portability"list=npflgrst:pci=1-253-3
```

Dependencies

An enabled feature must be specified using either a valid part number (the **pn** parameter) or feature name (the **feature** parameter). The specified feature must use a Common Screening List.

The feature that is specified in the **feature** parameter must be enabled.

The **list** parameter must be specified for features that use more than one type of screening list.

The value specified for the **list** parameter must be valid for the specified screening list. The following **list** parameter values are valid for the indicated feature:

- **skts, insl**—IDP Screening for Prepaid
- **ccnc, gt, skbcm**—Prepaid IDP Query Relay
- **npflgrst**—TIF Number Portability
- **acscode, escode, npflgrst**—TINP
- **vmpfx**—V-Flex

The length of the digit string that is specified for the **ds** parameter must be valid for the screening feature and list type.

A valid **ds** parameter value is required for the specified feature and list type.

The following parameters are allowed with the indicated common screening list type:

- **list=gt**—**ds** parameter
- **list=ccnc**—**ds** parameter
- **list=skbcm**—**ds** parameter
- **list=skts**—**ds** parameter
- **list=insl**—**ds** parameter
- **list=vmpfx**—**ds** parameter
- **list=acscode**—**ds** parameter
- **list=escode**—**ds** parameter
- **list=npflgrst**—**pc/pca/pci/pcn/pcn24** parameter

The leading digit pattern of the value specified for the **ds** parameter must be unique in the specified screening list for the indicated feature.

Each list table is allowed to contain a maximum number of entries:

- IDP Screening for Prepaid feature
 - **insl** list—50 entries

- **skts** list—25 entries
- Prepaid IDP Query Relay feature
 - **ccnc** list—20 entries
 - **gt** list—50 entries
 - **skbcsn** list—25 entries
- TIF Number Portability feature
 - **npflgrst** list—50 entries
- TINP feature
 - **acscode** list—50 entries
 - **esccode** list—20 entries
 - **npflgrst** list—50 entries
- V-Flex feature
 - **vmpfx** list—100 entries

The **chg-tinpopts:iamact=release** command must be entered before the **p1=1** or the **p1=release** parameter and the **list=acscode** parameter can be specified.

The **pc** and **ds** parameters cannot be specified together in the command.

The value specified for the feature parameter must be a valid feature name for a feature that uses a Common Screening List. The feature name must be specified as it appears in the **rtrv-ctrl-feat** command output. Enough of the name must be specified to make the name unique when two features begin with the same word or acronym.

Notes

None

Output

```
ent-csl:pn=893016001:list=gt:ds=123456789abcdEF
tekelecstp 05-08-21 15:18:41 EST EAGLE 34.1.0
GT List table is (1 of 50) 2% full
ENT-CSL: MASP A - COMPLTD
;

ent-csl:feature="VFLEX":list=vmpfx:ds=123456789abcdEF
tekelecstp 08-05-22 13:53:59 EST EAGLE 39.0.0
VM Prefix List table is (1 of 100) 1% full
ENT-CSL: MASP A - COMPLTD
;

ent-csl:feature="Prepaid IDP Query
Relay":list=skbcsn:ds=9876543210
tekelecstp 08-05-11 15:18:41 EST EAGLE 39.0.0
SK+BSCN List table is (1 of 50) 2% full
ENT-CSL: MASP A - COMPLTD
;
```

ent-cspc**Enter Concerned Signaling Point Code**

Use this command to add signaling points to a current broadcast signaling point code group. These point codes are notified of the receipt by the system of subsystem-prohibited (SSP) and subsystem-allowed (SSA) SS7 SCCP management messages from an application at an adjacent signaling point and subsystem. This command can also be used to add new groups to the table.

NOTE: The command must be entered first with the group only (no point code); then the command must be entered again with the group code and the point code.

Keyword: ent-cspc

Related Commands: dlt-cspc, rtrv-cspc

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" in Appendix A for a detailed description of point code formats, rules for specification, and examples.

:grp= (mandatory)

Name of the group. This parameter is a character string associated with this broadcast list.

Range: ayyyyyyy

1 alphabetic character followed by up to 7 alphanumeric characters

:pc= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Synonym: pca

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001–005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006–255.

The point code 000-000-000 is not a valid point code.

:pc/pca/pci/pcn/pcn24= (optional)

Point code.

This parameter is mandatory when the group and point code are entered, after the group has been entered.

:pci= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*)

Range: s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

:pcn= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:pcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

msa—000-255

ssa—000-255

sp—000-255

Example

When the ANSI-ITU-China SCCP Conversion feature is not on, a CSPC group can contain point codes of only one network type.

ent - cspc : grp=grp01 : pc=144-201-001

ent - cspc : grp=group02 : pcn24=10-100-10

When the ANSI-ITU-China SCCP Conversion feature is on, a CSPC group can contain point codes of more than one network type. ITU-N and ITU-N24 point codes are not allowed in the same group.

ent - cspc : grp=grp01

ent - cpssc : grp=grp01 : pc=240-3-55

ent - cspc : grp=grp01 : pci=7-233-5

ent - cspc : grp=grp01 : pci=s-7-233-5

ent - cspc : grp=grp01 : pcn24=234-56-245

Dependencies

Reserved words (for example, “**none**”) cannot be used to name a group.

The specified CSPC Broadcast group name must not exist if a point code is not specified. If the specified group name does not exist, and a point code is not specified, a new group is created.

The Spare Point Code Support feature must be enabled before the spare point code prefix **s-** can be specified for an ITU-I or ITU-N point code.

If the CSPC group name and a point code are specified, the group name must exist in the database.

The specified point code must exist in the Routing Table and cannot already exist in the specified group.

The destination point code must be a full point code (*ni-nc-ncm*).

The concerned signaling point code must have been specified previously as a full point code destination, or it must be a member of a previously specified cluster.

A maximum of 2550 Concerned Signaling Point Code Broadcast groups can be defined.

A maximum of 96 point codes can be defined for each group.

When the ANSI-ITU-China SCCP Conversion feature is not on, the first point code to be entered defines the network type for the group. All subsequent point codes for the group must be for the same network type. For example,

- **pc** and **pca** cause the group to be an ANSI group
- **pci** causes the group to be an ITU international group
- **pcn** causes the group to be an ITU national group
- **pcn24** causes the group to be a 24-bit ITU national group, which is administered as a subset of an ITU national group

When the ANSI-ITU-China SCCP Conversion feature is on, the point codes in a group can be of different network types. The only exception is that **pcn** and **pcn24** point codes are not allowed in the same group.

The point code must exist in the routing table.

A routeset and link that provides a path to the new CSPC must be configured before the **ent-cspc** command can be entered.

Notes

To broadcast SSPs and SSAs to one or more mated applications, each mate's point code must be added to the CSPC group. Otherwise the broadcast is not sent to the mate.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (**s-**).

Output

The command must be entered with just the **grp** parameter to define a new group in the database.

```
ent - cspc : grp=grp01
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
ENT-CSPC: MASP A - COMPLTD
;
```

The command must specify an existing group and a point code to add the point code to the group.

```
ent - cspc : grp=grp01 : pc=144-201-001
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
ENT-CSPC: MASP A - COMPLTD
;
```

ent-dlk

Enter Data Link

Use this command to add a TCP/IP data link to the database. The TCP/IP data link is used to send copies of SS7 MSUs (selected by the gateway screening feature) to a remote host for further processing.

Keyword: ent-dlk

Related Commands: act-dlk, canc-dlk, dlt-dlk, rept-stat-dlk, rtrv-dlk, tst-dlk

Command Class: Database Administration

Parameters

:ipaddr= (mandatory)

The TCP/IP data link's IP address. This is a TCP/IP address expressed in standard dot notation. IP addresses consist of the system's network number and the machine's unique host number. An example IP address is **192.126.100.5**, where **192.126.100** is the network number and **5** is the machine's host number.

Range: **1-223, 0-255**

4 numbers separated by dots

1-223—first number

0-255—the other three numbers

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

:auto= (optional)

Automatic. This parameter specifies whether the hardware automatically determines duplex and speed.

This parameter is valid only for DCM cards (running the **vwxsln** GPL) or E5-ENET cards (running the **slanhc** GPL)

Range: **yes, no**

yes— Duplex and speed are automatically determined.

no— Duplex and speed are not automatically determined.

Default: **yes**

:duplex= (optional)

This parameter specifies the mode of operation of the interface.

This parameter is valid only for DCM cards (running the **vwxsln** GPL) or E5-ENET cards (running the **slanhc** GPL).

Range: **half, full**

half— The mode of operation of the interface is half duplex.

full— The mode of operation of the interface is full duplex.

Default: **half**

:speed= (optional)

This parameter specifies the bandwidth for the interface in megabits per second.

Range: **10, 100**

Default: **10**

Example

```
ent-dlk:loc=1201:ipaddr=196.3.202.45
```

```
ent-dlk:loc=1101:ipaddr=192.168.63.11:speed=10:duplex=half
```

```
ent-dlk:loc=1107:ipaddr=192.168.63.12:auto=yes
```

Dependencies

The shelf and card must be equipped.

The IP address (**ipaddr**) cannot be in the TCP/IP link table and cannot be a TCP/IP node.

The specified card cannot contain any data links.

The specified card's status must be out of service maintenance disabled (OOS-MT-DSBLD). Enter the **rept-stat-card** command to verify the state of the card.

The specified TCP/IP data link cannot be in the database.

The specified card must be running the **stplan** GPL.

The Gateway Screening feature and the STPLAN feature must be turned on before this command can be entered.

The first octet of the IP Address must not be **127**, because **127** represents an IP address for loopback.

If the **auto=yes** parameter is specified, then the **speed** and **duplex** parameters cannot be specified.

If the **type=acmenet** parameter is specified (see the **ent-card** command), then the **duplex** and **auto** parameters cannot be specified.

The **speed** and **duplex** parameters must be specified together in the command.

If the **speed=100** parameter is specified, then a DCM card (running the **vxwslan** GPL) or an E5-ENET card (running the **slanhc** GPL) must be used. The **type=dcn** parameter must be specified in the **ent-card** command.

Notes

If the first octet of the IP address is **127**, an error message is issued because the number **127** represents a loopback address.

The value of the **ipaddr** parameter cannot match the TCP/IP default router's IP address (the **iprte** parameter of the **ent-ip-node** command).

Output

ent -dlk: loc=1201: ipaddr=196.3.202.45

```
tekelecstp 07-04-03 11:12:34 EST EAGLE 37.0.0
ENT-DLK: MASP A - COMPLTD
```

;

The following example issues an error message because the first octet of the IP address is a loopback address.

ent -dlk: loc=1201: ipaddr=127.3.202.45

```
rlghncxa03w 07-04-03 11:43:04 EST EAGLE 37.0.0
Command Rejected : First octet of IPADDR cannot be 127.
ENT-DLK: MASP A - COMPLTD
```

;

ent-dstn

Enter Destination

Use this command to add a destination address (a destination point code, capability point code, or network cluster address) and the associated destination attributes to the destination point code table.



CAUTION: When using the Network Routing feature, limited network management is provided for point codes not covered by full point code routing, Cluster Routing, or Nested Cluster Routing.

Keyword: ent-dstn

Related Commands: chg-dstn, chg-rte, dlt-dstn, dlt-rte, ent-rte, rept-stat-dstn, rtrv-dstn, rtrv-rte

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:dpc= (mandatory)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: **dpc**

Range: **p-, 000-255, ***

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

The asterisk value (*) is not valid for the *ni* subfield.

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001–005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006–255**.

The point code **000-000-000** is not a valid point code.

:dpc/dpca/dpci/dpcn/dpcn24= (mandatory)

Destination point code.

:dpci= (mandatory)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps-

zone—0-7

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

:dpcn= (mandatory)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npfcmi** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn, prefix-nnnnn-gc, prefix-m1-m2-m3-m4, prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:dpcn24= (mandatory)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*. The *prefix* indicates a private point code (*prefix-msa-ssa-sp*).

Range: **p-**, **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

Default: No change to current value.

:aliasa= (optional)

ANSI alias point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. This parameter is not valid if an ANSI (**dpc** or **dpca**) point code is entered.

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:aliasa/aliasi/aliasn/aliasn24= (optional)

Alias point code.

:aliasi= (optional)

ITU international alias point code list with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

If an ITU international destination (**dpci**) point code is entered, then the **dpci** and **aliasi prefix** subfields cannot be the same (both spare or both non-spare). Up to 2 comma-delimited entries can be entered in the point code list.

Range: **s-**, **0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:aliasn= (optional)

ITU national alias point code list in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npfcmi** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

If an ITU national destination (**dpcn**) point code is entered, then the **dpcn** and **aliasn prefix** subfields cannot be the same (both spare or both non-spare). Up to 2 comma-delimited entries can be entered in the point code list.

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:aliasn24= (optional)

24-bit ITU national alias point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*. This parameter is not valid if a 24-bit ITU national (**dpcn24**) point code is entered.

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:bei= (optional)

Broadcast exception indicator. This parameter specifies whether the STP broadcasts network management messages to adjacent signaling points. The network management messages contain information about the indicated cluster and any of that cluster's member signaling points that are on its exception list. The messages whose broadcast is determined by this parameter are:

- **TFP**—transfer prohibited
- **TCP**—transfer cluster prohibited

Range: **yes, no**

yes— Network management messages are not broadcast

no— Network management messages are broadcast

Default: **yes**— for DPCs in the X.25 domain or if the DPC is a member whose associated cluster destination has **bei=yes** specified.

no—for DPCs in the cluster or if the DPC is a member whose associated cluster destination has **bei=no** specified or the **bei** parameter is not specified.

:cli= (optional)

The Common Language Location Identifier assigned to this destination.

Range: *ayyyyyyyyy*

1 alphabetic character followed by 10 alphanumeric characters

Default: Null string

:domain= (optional)

The network in which the destination entity or node exists.

Range: **x25, ss7**

Default: **ss7**

:elei= (optional)

Exception-list exclusion indicator, for cluster destinations only. This parameter specifies whether the system *excludes* or *includes (maintains)* a dynamic status exception list (x-list) for each cluster route used to reach the member signaling points that make up the cluster.

Range: **yes, no**
 yes— Do not maintain a dynamic status x-list
 no — Maintain a dynamic status x-list
Default: **no**

:ipgwapc= (optional)

IP gateway adjacent point code indicator.

Range: **yes, no**
Default: **no**

:ncai= (optional)

Nested cluster allowed indicator. Specifies whether the route to the cluster point code can be different for provisioned members of the cluster. A point code is a member of a cluster point code if it has the same network identifier (NI) and network cluster (NC) values as the cluster point code. This parameter can be specified only for cluster point codes. Nested cluster routing is allowed if this parameter is set to **yes** and the CRMD and NCR features are turned on.

Range: **yes, no**
 yes— The cluster point code is a nested cluster point code. Point codes that are members of this cluster point code can be assigned to route sets that are different from the route set assigned to the cluster point code.
 no — The cluster point code is not a nested cluster point code. Point codes that are members of this cluster point code must be assigned to the same route set assigned to the cluster point code.
Default: **no**

:ppc= (optional)

ANSI proxy point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

The proxy point code must be a full point code.

Synonym: **ppca**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001–005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006–255**.

The point code **000-000-000** is not a valid point code.

:ppc/ppca/ppci/ppcn/ppcn24= (optional)

Proxy point code.

The proxy point code must be a full point code.

:ppci= (optional)

ITU international proxy point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:ppcn= (optional)

ITU national proxy point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmt** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:ppcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:prx= (optional)

Proxy point code indicator. This parameter specifies whether a destination is used as a proxy point code.

Range: **yes, no**

yes — The destination is used as a proxy point code.

no — The destination is not used as a proxy point code.

Default: **no** - Will not be used as a proxy point code.

:spc= (optional)

ANSI secondary point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*). The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*) .

Synonym: **spca**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:spc/spca/spci/spcn/spcn24= (optional)

Secondary point code.

:spci= (optional)

ITU international secondary point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:spcn= (optional)

ITU national secondary point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:spcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

Example

To add destination 8-1-1 with cli of systest1:

ent-dstn:dpc=8-1-1:cli=systest1:bei=yes

To add destination 8-8-8 with ITU and national aliases:

ent-dstn:dpc=8-8-8:aliasi=1-2-3:aliasn=124

To add cluster 20-2-*:

ent-dstn:dpc=20-2-*:elei=yes:bei=yes

To add a destination with an SPC of 100-100-100:

ent-dstn:dpc=20-2-2:spc=100-100-100

To add nested cluster 21-2-*:

ent-dstn:dpc=21-2-*:elei=yes:bei=yes:ncai=yes

To add network routing destination 21-*-*:

ent-dstn:dpc=21-*-*

To add ITU national destination 7654 with a group code of fr and secondary point code of 7050:

ent-dstn:dpcn=7654-fr:spc=7050-fr

To add ITU-N 24-bit destination 15-100-10:

ent-dstn:dpcn24=15-100-10:bei=no

To add a 24-bit ITU-N destination with a 24-bit ITU-N secondary point code of 99-99-99:

ent-dstn:dpcn24=12-12-12:spcn24=99-99-99

To add destination 1-6-1 with a 24-bit ITU-N alias:

ent-dstn:dpci=1-6-1:aliasn24=4-4-4

To add private ANSI destination point code p-100-100-101:with spare point code alias s-1-123-1

ent-dstn:dpc=p-100-100-101:spca=2-2-3:aliasi=s-1-123-1:aliasn=128

To add spare ITU-I destination point code s-2-100-1 with ANSI alias point code 121-120-120 and ITU-N alias spare point code s-129:

ent-dstn:dpci=s-2-100-1:spci=s-2-129-9:aliasa=121-120-120:aliasn=s-129

To add spare ITU-N destination point code s-231 with ITU-N secondary point code 129, ANSI alias point code 120-120-122, and ITU-I alias spare point code s-2-123-2:

ent-dstn:dpcn=s-231:spcn=129:aliasa=120-120-122:aliasi=s-2-123-2

To define a destination as a proxy point code:

ent-dstn:dpc=11-11-11:prx=yes

To associate a proxy point code with a destination point code:

ent-dstn:dpc=11-11-11:ppc=2-7-2

To add ITU-I destination point code 3-30-3 with ITU-I spare alias s-3-30-3:

ent-dstn:dpci=3-30-3:aliasi=s-3-30-3

To add ITU-N destination point code 8199-aa with ITU-I aliases s-4-0-7 and 4-0-7:

ent-dstn:dpcn=8199-aa:aliasi=s-4-0-7,4-0-7

Dependencies

NOTE: A full point code contains numerical values for all three segments of the point code.

A destination is defined with a mandatory true point code of one format, and two optional alias point codes that are of the other two formats. Alias point codes are used to provide alternate point codes for a particular destination. The true point code must be of the same format as the point code used for the self ID of the system and must match the format of the point code used for the destination node. For example, if the destination node uses an ANSI point code, then the true point code must be an ANSI point code.

The ANSI self-ID destination point code for the STP must be defined before ANSI destinations can be entered.

The ITU-I self-ID destination point code for the STP must be defined before ITU-I destinations can be entered.

The ITU-N self-ID destination point code for the STP must be defined before ITU-N destinations can be entered.

The 24-bit ITU-N self-ID destination point code for the STP must be defined before 24-bit ITU-N destinations can be entered. (See the **chg-sid** command.)

The Destination point code table can contain up to 2000 entries.

The destination address must be a full point code or a cluster point code.

The specified destination address cannot already exist in the Destination entity set.

A destination address cannot already be defined as an alias address.

The Spare Point Code Support feature must be enabled before the spare point code prefix **s-** can be specified for an ITU-I or ITU-N destination, secondary, or alias point code.

The specified **dpc** value cannot match the point code, secondary point code, or capability point code of the system.

A destination can have up to two alias point codes. A destination alias point code type (ANSI, ITU-I, ITU-N, ITU-N24) must not match that destination's true point code type. If both alias point codes are defined, the point code types of the aliases must not match.

Alias point codes are supported only for destinations in the SS7 domain (**domain=ss7**).

Alias point codes are supported only for full point code destinations.

Alias point codes for destinations must be full point codes.

An alias point code cannot already be defined as a destination point code.

The format of the specified **dpcn** or **aliasn** parameter must match the format that was assigned with the **chg-stpopts:npcfmti** parameter.

When the 7000 Routesets or 8000 Routesets feature is enabled, the total number of provisioned aliases in the system cannot exceed 8000.

If an ANSI or ITU-I point code is specified, either the **aliasn** or the **aliasn24** parameter can be specified, but not both.

A 24-bit ITU-N point code cannot have:

- A 14-bit ITU-N alias point code
- An ANSI alias point code

A 24-bit ITU-National point code can have an ITU-I point code alias. This allows conversion of 14-bit ITU-I routing label to 24-bit routing label and vice versa.

An ITU-I point code can have either a 14-bit ITU-N alias or a 24-bit ITU-N alias, but not both.

A 14-bit ITU-N point code cannot have a 24-bit ITU-N alias point code.

An ANSI point code cannot have a 24-bit ITU-N alias point code.

The X.25/SS7 Gateway feature (X25G) feature must be turned on before the **domain=x25** parameter can be specified.

The **domain=ss7** parameter must be specified before alias point codes can be supported.

Cluster destinations are not supported in the X.25 domain (**domain=x25**).

The CRMD feature must be turned on before a cluster destination point code (**ni-nc-***) can be specified.

A cluster destination cannot be defined using the same network identifier (**ni**) and network cluster (**nc**) subfields of any previously defined alias ANSI point codes.

The CRMD (Cluster Routing and Management Diversity) and NCR (Nested Cluster Routing) features must be turned on before the **ncai** parameter can be specified.

If the **ncai=yes** parameter is specified, then the maximum number of provisioned nested clusters must be no greater than 500.

When a cluster point code is specified, the collection of signaling points sharing the same network identifier (*ni*) and network cluster (*nc*) subfields must have the same route set.

Cluster DPCs are not allowed to inherit cluster members that have routes with A or E linkset types.

Network routing is valid only if the Network Routing (NRT) feature is turned on.

When using network routing, if the destination point code has a value of * in the *nc* subfield, the *ncm* subfield must also be * (for example, **dpc=21-*-***).

The **ncai** parameter can be specified only for cluster destinations.

Alias ANSI point codes cannot have the same network identifier (*ni*) and network cluster (*nc*) subfields as a cluster point code that is already defined.

The CRMD feature must be turned on before the **elei** parameter can be specified.

The **elei** parameter can be specified only for cluster destinations (for example **dpc=ni-nc-***).

The **cli** of the destination point code cannot match the **cli** of the system.

A reserved word cannot be specified for the destination identifier (**cli**).

If the corresponding destination for the specified destination point code is an adjacent signaling point (matched a Far End point code in its linkset entity set), the **cli** of the specified destination point code cannot be assigned to any other destination address.

The value of the **dpc** parameter must be a valid point code.

If specified, the **spc** parameter value must be already be configured as a secondary point code in the Secondary Point Code table.

The value specified for the **spc** parameter must be a full point code.

If the **spc** parameter is specified, the **domain=ss7** parameter must be specified.

If the **spc** parameter is specified, then the value specified for the **dpc** parameter must be a full point code.

The network type of the value specified for the **spc** parameter must match the network type of the value specified for the **dpc** parameter.

If an ITU national destination is provisioned and the ITUDUPPC feature is turned on, and if the destination does **not** use an SPC, the group code of the destination must be the same as the group code of the ITU national true point code. For example, if the ITU national true point code has a group code of **ee**, then you can add destinations with group codes of **ee** without using an SPC. Destinations with a group code of **ff**, however, must use an SPC with a group code of **ff**.

The Route table cannot be full.

If an ITU national destination is provisioned and the ITUDUPPC feature is turned on, and if the destination uses an SPC, then the group code of the destination must match the group code of the SPC. For example, if the ITU national true point code has a group code of **ee**, then you can add destinations with group codes of **ee** without using an SPC. Destinations with a group code of **ff**, however, must use an SPC with a group code of **ff**.

The **ncai** parameter can be specified only for cluster destinations (for example **dpc=ni-nc-***).

The value of the **cli** parameter cannot already exist in the Route table.

The ICNP feature must be turned on before the **icnpxlmt**, **cgpafmt**, and **cdpafmt** parameters can be specified.

The NCR feature must be enabled before the **ncai** parameter can be enabled.

If the 6000 Routesets feature is turned on, and the destination point code to be provisioned is above 5000, then the GPSM-II OAM cards must be used.

The **alias** parameter must be specified with a different point code type than the **dpc** parameter. The **aliasa** and **dpca** parameters cannot be specified together in the command. The **aliasi** and **dpci** parameters and the **aliasn** and **dpcn** parameters cannot be specified together in the command if the *prefix* subfields are the same (both are spare or both are non-spare).

The Proxy Point Code feature must be enabled before the **prx=yes** parameter can be specified.

If the **ipgwapc=yes** parameter is specified, then the **prx=yes** parameter cannot be specified.

If the **ipgwapc=yes** parameter is specified, then the **ppc** parameter cannot be specified.

The Proxy Point Code feature must be enabled before the **ppc** parameter can be specified.

If the **ppc** parameter or the **prx=yes** parameter is specified, then the value specified for the **dpc** parameter must be a full point code.

If the **prx=yes** parameter is specified, then the **domain=ss7** parameter must be specified.

If the **ppc** parameter is specified, then the **domain=ss7** parameter must be specified.

The **spc** and **ppc** parameters cannot be specified together in the command.

The values specified for the **dpc** and **ppc** parameters must have the same network type.

The values specified for the **dpc** and **ppc** parameters must have the same group code.

The number of proxy destinations cannot exceed the value given by the enabled Proxy Point Code quantity feature.

If the value of the **dpc** parameter is a private point code, then the **prx=yes** parameter cannot be specified.

If the value of the **dpc** parameter is a private point code, then the **ppc** parameter cannot be specified.

The **dpc** parameter and the **prx=yes** parameter must be specified before the **ppc** parameter can be specified.

The total number of proxy destinations cannot exceed the total capacity (100) of the Proxy Point Code feature.

If the **prx** parameter is specified, then either **yes** or **no** value must be assigned

Cluster destination point codes cannot inherit cluster members that have routes using proxy linksets.

The spare ITU-I self-ID destination point code for the STP must be defined before spare ITU-I destinations can be entered.

The spare ITU-N self-ID destination point code for the STP must be defined before spare ITU-N destinations can be entered.

A maximum of two aliases can be specified per destination point code.

If the **dpci** parameter is specified, then a combination of ITUI and ANSI aliases cannot be specified.

If the **dpcn** parameter is specified, then a combination of ITUN and ANSI aliases cannot be specified.

Two ITUI or two ITUN aliases can be specified for the same destination point code only if the aliases have different prefixes. One alias must be spare and one non-spare.

Notes

Upon initial installation of the system, the self point code must be entered before you enter any destination.

When you define a DPC with the unique destination signaling point of a provisioned cluster, the DPC automatically inherits the route set of its cluster if the **ncai** parameter is set to **no**. If the **ncai** parameter is set to **yes**, the provisioned members can have a different route set.

When you define a cluster point code for previously defined destination signaling points, the cluster automatically inherits the unique route set of its members.

For ITU national duplicate point codes, you cannot change a destination's group code. To move a destination from one group to another, provision a new destination that uses the new group code and delete the old destination.

The system requires that the destination point code of each routeset be entered in the database. For example, to enter 6000 routesets in the database, 6000 destination point codes must be entered in the database.

If you have turned on the 5000 Routes feature, prior to provisioning the additional routing table entries, you must issue the **chg-stpopts** command to specify the maximum number of allowed DPCs and dynamic x-list entries.

When the 6000, 7000, or 8000 Routesets feature is enabled, if you want to enter more than 2000 destination point codes, the maximum number of point codes that can be configured on the system must be changed to 6000, 7000, or 8000 respectively, using the **mtpdpcq** parameter of the **chg-stpopts** command.

In this command, only ITU-international and ITU national point codes and aliases support the spare point code subtype prefix (**s-**). Only ITU-international and ITU national point codes support the private and spare point code subtype prefix (**ps-**). All of the point code types support the private (internal) point code subtype prefix (**p-**). Aliases do not support the private (internal) point code prefix.

If the Proxy Point Code feature is enabled, then the value specified for the **ppc** parameter or of the **dpc** parameter (when the destination point code is designated as a proxy point code) must be full point codes. Cluster point codes and private point codes are not supported.

Output

The following example shows the display of the destination memory space accounting command completion response with the NCR, NRT, and CRMD features off (disabled) and all Routes and Routesets features off (disabled):

```
ent-dstn:dpc=8-8-8:aliasi=1-2-3:aliasn=124
rlghncxa03w 04-08-17 15:35:05 EST EAGLE 31.8.0
Destination table is (10 of 2000) 1% full
Alias table is (8 of 12000) 1% full
ENT-DSTN: MASP A - COMPLTD
;
```

The following example shows the display of the destination memory space accounting command completion response with the NCR, NRT, and CRMD features off (disabled) and the DSTN5000 (5000 Routes) feature on:

```
ent-dstn:dpc=8-8-8:aliasi=1-2-3:aliasn=124
rlghncxa03w 04-08-18 08:29:15 EST EAGLE 31.8.0
Destination table is (10 of 5000) 1% full
Alias table is (8 of 12000) 1% full
ENT-DSTN: MASP A - COMPLTD
;
```

The following example shows the display of the destination memory space accounting command completion response with one or more of the NCR, NRT, or CRMD features on and the DSTN5000 (5000 Routes) feature on:

```
ent-dstn:dpc=8-8-8:aliasi=1-2-3:aliasn=124
rlghncxa03w 04-08-18 08:29:15 EST EAGLE 31.8.0
DESTINATION ENTRIES ALLOCATED: 5000
FULL DPC(s): 9
NETWORK DPC(s): 0
CLUSTER DPC(s): 1
TOTAL DPC(s): 10
CAPACITY (% FULL): 1%
ALIASES ALLOCATED: 12000
ALIASES USED: 8
CAPACITY (% FULL): 1%
X-LIST ENTRIES ALLOCATED: 500
ENT-DSTN: MASP A - COMPLTD
;
```

The following example shows the display of the destination memory space accounting command completion response with the NCR, NRT, and CRMD features off (disabled) and the 6000 Routesets feature on:

```
ent-dstn:dpc=8-8-8:aliasi=1-2-3:aliasn=124
rlghncxa03w 04-08-18 08:29:15 EST EAGLE 31.8.0
Destination table is (60 of 6000) 1% full
Alias table is (8 of 12000) 1% full
ENT-DSTN: MASP A - COMPLTD
;
```

The following example shows the display of the destination memory space accounting command completion response with one or more of the NCR, NRT, or CRMD features on and the 6000 Routesets feature on:

```
ent-dstn:dpc=8-8-8:aliasi=1-2-3:aliasn=124
rlghncxa03w 04-08-18 08:29:15 EST EAGLE 31.8.0
DESTINATION ENTRIES ALLOCATED: 6000
FULL DPC(s): 46
```

```

NETWORK DPC(s):          1
CLUSTER DPC(s):          1
TOTAL DPC(s):            12
CAPACITY (% FULL):       1%
ALIASES ALLOCATED:       12000
ALIASES USED:             8
CAPACITY (% FULL):       1%
X-LIST ENTRIES ALLOCATED: 500
ENT-DSTN: MASP A - COMPLTD

```

;

The following example shows the display of the destination memory space accounting command completion response with the NCR, NRT, and CRMD features off (disabled). When the 7000 Routesets quantity feature is on, the Destination table line shows "...of 7000" as it appears in the example. When the 8000 Routesets quantity feature is on, the Destination table line shows "...of 8000."

ent-dstn:dpc=8-8-8:aliasi=1-2-3:aliasn=124

```

rlghncxa03w 04-08-18 08:29:15 EST EAGLE 31.8.0
Destination table is (60 of 7000) 1% full
Alias table is (8 of 8000) 1% full
ENT-DSTN: MASP A - COMPLTD

```

;

The following example shows the display of the destination memory space accounting command completion response with one or more of the NCR, NRT, or CRMD features on: When the 7000 Routesets quantity feature is on, the DESTINATION ENTRIES ALLOCATED line shows "8000" as it appears in the example. When the 7000 Routesets quantity feature is on, the DESTINATION ENTRIES ALLOCATED line shows "7000."

ent-dstn:dpc=8-8-8:aliasi=1-2-3:aliasn=124

```

rlghncxa03w 04-08-18 08:29:15 EST EAGLE 31.8.0
DESTINATION ENTRIES ALLOCATED: 8000
FULL DPC(s):                  9
NETWORK DPC(s):               0
CLUSTER DPC(s):               1
TOTAL DPC(s):                 10
CAPACITY (% FULL):            1%
ALIASES ALLOCATED:            8000
ALIASES USED:                  8
CAPACITY (% FULL):            1%
X-LIST ENTRIES ALLOCATED:      500
ENT-DSTN: MASP A - COMPLTD

```

;

The following example shows the display of the destination memory space accounting command completion response when none of the NCR, NRT, or CRMD features on. In this example, a destination is defined as a proxy point code.

ent-dstn:dpc=11-11-11:prx=yes

```

tekelecstp 07-03-07 16:34:32 EST EAGLE 37.5.0
Destination table is (11 of 2000) 1% full
Alias table is (0 of 12000) 0% full
PPC table is (2 of 10) 20% full
ENT-DSTN: MASP A - COMPLTD

```

;

The following example shows the display of the destination memory space accounting command completion response when one or more of the NCR, NRT, or CRMD features are on. In this example, a destination refers to a proxy point code.

ent-dstn:dpc=1-1-1:ppc=11-11-11

```

tekelecstp 07-03-05 17:34:18 EST EAGLE 37.5.0
DESTINATION ENTRIES ALLOCATED: 2000
FULL DPC(s):                  27

```

```

EXCEPTION DPC(s):          0
NETWORK DPC(s):            1
CLUSTER DPC(s):            1
Proxy DPC(s):              1
TOTAL DPC(s):              30
CAPACITY (% FULL):         2%
ALIASES ALLOCATED:         12000
ALIASES USED:              0
CAPACITY (% FULL):         0%
X-LIST ENTRIES ALLOCATED:  500
ENT-DSTN: MASP A - COMPLTD
;

```

ent-e1**Enter E1 Interface**

Use this command to enter an interface into the system for a 2-port E1 card, an E1/T1 MIM card, an HC-MIM card used as an E1 card, an E5-E1T1 card used as an E1 card, an HC-MIM card used as an SE-HSL card, or an E5-E1T1 card used as an SE-HSL card. You must specify the E1 port number on the card and the E1 card location in the EAGLE 5 ISS.

CRC4, CAS, CCS, encoding, timing source, and NFAS signaling bit options can be set with the command parameters. Do not use the DIP switches, if any, on E1 and Channel cards to define the E1 interface.

The E1 card can have a DIP switch called E1BKEN, which is used to enable or disable data transmission on the E1 backplane. Because there is no command parameter that corresponds to the DIP switch, the default value of enabled is assumed. The backplane is enabled for data transmit and receive on E1 port number 1.

On an HC-MIM or E5-E1T1 card, E1 ports 1, 3, 5, and 7 (master ports) can be independently channel bridged with their adjacent even-numbered (slave) E1 ports 2, 4, 6, and 8 to allow non-signaling data pass-through.

Any of the 8 ports on an HC-MIM or E5-E1T1 card can be specified when the card is used as a standard HC-MIM or E5-E1T1 card respectively. No more than 2 ports on the HC-MIM or 1 port on the E5-E1T1 when used as an SE-HSL card can have defined E1 interfaces.

Keyword: ent-e1

Related Commands: chg-e1, dlt-e1, rtrv-e1, tst-e1

Command Class: Database Administration

Parameters

:e1port= (mandatory)

E1 card port number. The value must be a E1 port for which an interface has not been configured on the specified E1 card.

Range: 1-8

Ports 3 through 8 can be specified only for HC-MIM and E5-E1T1 cards.

Any 2 of the 8 ports on an HC-MIM card can be specified when the card is used as an SE-HSL card.

Any 1 of the 8 ports on an E5-E1T1 card can be specified when the card is used as an SE-HSL card.

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208,

4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

:cas= (optional)

CAS multiframing (**on**) or CCS (**off**) indicator.

Range: **on, off**

CAS cannot be specified for HC-MIM and E5-E1T1 cards.

Default: **off**

:chanbrdg= (optional)

Port bridging status. This parameter indicates whether an odd-numbered E1 port on an HC-MIM or E5-E1T1 card is channel bridged with its adjacent even-numbered E1 port for non-signaling data pass through.

Range: **on, off**

Default: **off**

:crc4= (optional)

CRC4 enable or disable indicator.

Range: **on, off**

Default: **on**

:e1tsel= (optional)

Timing source. This parameter indicates a master (**external**) or slave (**line**) timing source, or a timing source recovered from the paired master port for channel bridged slave ports.

Range: **line, external, recovered**

Default: **line**

:encode= (optional)

Indicator for use of HDB3 or AMI encoding/decoding.

Range: **hdb3, ami**

AMI encoding is not supported for the 2-port E1 card. AMI encoding is supported for E1/T1 MIM, HC-MIM, and E5-E1T1 cards that are used as an E1 card.

Default: **hdb3**

:linkclass= (optional)

Link class for links that are assigned to HC-MIM and E5-E1T1 cards ("channelized" links) or SE-HSL cards ("unchannelized" links).

Range: **chan, unchan**

Default: **chan**

:minsurate= (optional)

Minimum signal unit rate. This parameter indicates the minimum number of SUs present on a link uniformly distributed. This parameter is valid only when the **linkclass=unchan** parameter is specified for an SE-HSL card.

Range: **500-2000**

Default: **2000**

:si= (optional)

Value of two Spare International bits of NFAS data.

Range: **0-3**

Default: **0**

:sn= (optional)

Value of five Spare International bits of NFAS data.

Range: **0-31**

Default: **0**

Example

```

ent -
e1: loc=1205:e1port=1:crc4=off:cas=on:encode=hdb3:e1tsel=external:
si=2:sn=12
ent -e1: loc=1205:e1port=2:cas=off:encode=ami
ent -e1: loc=1203:e1port=1:chanbrdg=on:e1tsel=recovered
ent -e1: loc=1203:e1port=3:chanbrdg=on:e1tsel=external
ent -
e1: loc=1203:crc4=on:e1port=2:encode=hdb3:e1tsel=line:linkclass=un
chan :minsurate=2000

```

Dependencies

The specified card location (**loc** parameter) must be equipped.

The card specified by the **loc** parameter must be a **lime1** card type.

The port specified by the **e1port** parameter must not already be equipped with an E1 interface.

The **cas=on** parameter cannot be specified if E1 ports **3 - 8** (**e1port** parameter) have been specified or if the **chanbrdg=on** parameter has been specified.

The **chanbrdg=on** and **cas=on** parameters cannot be specified when the **linkclass=unchan** parameter is specified. The **minsurate** parameter can be specified only when the **linkclass=unchan** parameter is specified.

The **chanbrdg=on** parameter can be specified only for HC-MIM and E5-E1T1 cards.

The **chanbrdg=on** parameter cannot be specified for even-numbered E1 ports (**e1port** parameter).

The timing source parameter **e1tsel** must be specified if the **chanbrdg=on** parameter is specified.

The **e1tsel=line** parameter cannot be specified for an E1 port (**e1port** parameter) when the **chanbrdg=on** parameter is specified.

The **e1tsel=recovered** parameter cannot be specified for an E1 port (**e1port** parameter) unless the **chanbrdg=on** parameter is specified.

Only 2 ports can be used for E1 interfaces on an HC-MIM card that is used as an SE-HSL card. Any 2 of the 8 ports can be used on the SE-HSL card.

When provisioning an odd-numbered E1 port (**e1port** parameter) on an HC-MIM card or an E5-E1T1 card to channel bridging mode using **chanbrdg=on** parameter, **force=yes** must be specified if the adjacent even-numbered port is already provisioned with an E1 interface.

All signaling links assigned to its adjacent even-numbered E1 port must be deleted before an odd-numbered E1 port (**e1port** parameter) on an HC-MIM and E5-E1T1 card can be provisioned into channel bridging mode using the **chanbrdg=on** parameter. Use the **dlt-slk** command to delete the signaling links.

The fan feature bit must be on before HC-MIM cards (used as E1 cards or as SE-HSL cards) can be used in an EAGLE 5 ISS shelf (see the **chg-feat** command). The system checks the fan feature bit when E1 ports **3** through **8** are specified.

HIPR cards must be equipped in card locations xy09 and xy10 (x is the frame, y is the shelf) on each EAGLE 5 ISS shelf that contains one or more HC-MIM or E5-E1T1 cards that are used as E1 cards or SE-HSL cards. The system checks for HIPR cards when E1 ports **3** through **8** (**e1port** parameter), **chanbrdg=on** or **linkclass=unchan** parameter is specified for HC-MIM and E5-E1T1 cards.

An SE-HSL feature quantity must be enabled before the **linkclass=unchan** parameter can be specified for an SE-HSL card. (See the **enable-ctrl-feat** command and the SEHSL SLK Capacity entry in the **rtrv-ctrl-feat** command output example.)

The **linkclass=unchan** parameter can be specified only for HC-MIM and E5-E1T1 cards.

Channelized and unchannelized E1 ports (mixed mode) are not allowed on a single HC-MIM or E5-E1T1 card (the card cannot be used as an E1 card and an SE-HSL card at the same time).

Only 1 port can be used for E1 interfaces on an E5-E1T1 card that is used as an SE-HSL card. Any 1 of the 8 ports can be used on the SE-HSL card.

E1 ports **3 - 8 (e1port)** parameter) can be specified only for HC-MIM and E5-E1T1 cards.

The **encode=ami** parameter is supported only for the E1/T1 MIM, HC-MIM, and E5-E1T1 card used as an E1 card, and is not supported on the 2-port E1 card.

The **cas=on** parameter can not be specified for for HC-MIM and E5-E1T1 cards.

Notes

One or two E1 interfaces must be defined on an E1 card after the E1 and any associated Channel cards (types **lime1** and **limch**) are defined in the database (with the **ent-card** command), and before the signaling links and associated timeslots are defined for the E1 card and any associated Channel cards (with the **ent-slk** command).

For an SE-HSL card, the **minsrate** parameter indicates the least number of SUs present on a link uniformly distributed. The number of SUs present is:

- Without link traffic, the **minsrate** parameter value.
- With link traffic, the **minsrate** parameter value minus the number of MSUs.

When the **e1tsel=external** parameter is specified, a user-supplied BITS clock is required.

External timing is derived from the EAGLE High-Speed Master Clock (1.544 MHz for T1 or 2.048 MHz for E1); therefore, the Master Timing feature is required. Line timing is derived from its received data stream, if present.

Up to 8 E1 interfaces can be defined on an HC-MIM or E5-E1T1 card used as a E1 card after the E1 card type (**lime1**) is defined in the database (with the **ent-card** command), and before the signaling links and associated timeslots are defined for the E1 card .

On a HC-MIM or E5-E1T1 card, E1 ports 1, 3, 5, and 7 (master ports) can be independently channel bridged with their adjacent even-numbered (slave) ports 2, 4, 6, and 8 to allow non-signaling data pass-through. The **chanbrdg** parameter must be specified for the odd-numbered E1 port.

Output

```
ent -
e1: loc=1205:e1port=1:crc4=off:cas=on:encode=hdb3:e1tsel=external:
si=2:sn=12
  rlgncxa03w 04-02-20 09:07:58 EST  EAGLE 31.3.0
  ENT-E1: MASP A - COMPLTD
;
```

ent-frm-pwr

Enter Frame Power Threshold

Use this command to add a new entry to the Frame Power Threshold (FPT) table. The frame-level power threshold value in the table is compared with the current calculated maximum power consumption for a particular frame, and appropriate alarms are raised if that consumption exceeds the threshold limit.

The entries in the Frame Power Threshold table contain a Frame ID and the corresponding power threshold value. You can use the following commands to display the threshold and calculated maximum power consumption for the frames in the system.

- The **rtrv-frm-pwr** command displays the current provisioned frame power threshold for each provisioned frame.
- The **rtrv-stp:display=power** command displays the provisioned frame power threshold for each provisioned frame, and displays the maximum calculated power consumption for each frame, based on card population.
- The **rtrv-stp:display=power:frm=xxxx** command displays the provisioned frame power threshold for the specified frame, the maximum calculated power consumption for the frame based on card population, and the maximum power consumption for each card in the frame and for a fan assembly for each shelf.

NOTE: The frame-level power threshold value needs to be determined from the capacity in Amps of the fuse alarm panel (FAP) for the frame. Contact your site engineer to determine the FAP capacity.

Keyword: ent-frm-pwr

Related Commands: chg-frm-pwr, dlt-frm-pwr, rtrv-frm-pwr, rtrv-stp

Command Class: Database Administration

Parameters

:frm= (mandatory)

Frame ID.

Range: cf00, ef00, ef01, ef02, ef03, ef04

cf00 — Control frame

ef00 — First extension frame

ef01 — Second extension frame

ef02 — Third extension frame

ef03 — Fourth extension frame

ef04 — Fifth extension frame

:thrshld= (optional)

Threshold. This parameter specifies the frame-level power threshold value, in Amps. This value is compared with the current calculated maximum power consumption for a particular frame (use the **rtrv-stp:display=power:frm=** command to obtain the maximum power consumption value), and the appropriate alarms are raised if current consumption exceeds the threshold limit. The value of the **thrshld** parameter needs to be determined from the capacity of the fuse alarm panel (FAP) for the frame. Contact your site engineer to determine the frame FAP capacity.

Range: 30-65

Default: 30

Example

Enter the frame power threshold value for the first extension frame.

ent - frm - pwr : frm=ef00 : thrshld=55

Dependencies

The specified power threshold value (**thrshld** parameter) must not already be provisioned for the specified frame .

The specified frame (**frm** parameter) must be a provisioned frame.

Example

```
ent-ftp-
serv:app=meas:ipaddr=1.255.0.102:login=ftpmeas1:path=~meas:prio
=1
ent-ftp-serv:app=user:ipaddr=1.255.0.102:login=tekperson1:path=~
\data":prio=1
ent-ftp-
serv:app=dist:ipaddr=192.168.53.195:login=pvftp:prio=1:path="/
remote/labftp1/pvftp/dallen2ftp"
ent-ftp-
serv:app=db:ipaddr=192.168.53.195:login=pvftp:prio=1:path="/
remote/labftp1/pvftp/aholden"
```

Dependencies

A separate prompt appears for you to enter the FTP server password that will be used with the FTP Server Username (**login**). You must enter a password that is at least 1 and not more than 15 characters long. If you enter an invalid password (you press the Return key without entering a password, or you enter more than 15 characters), you must enter the entire command again to cause the password prompt to appear again. The password that you enter is not displayed as you enter it.

An entry for the specified application ID at the specified priority cannot already exist.

An entry for the specified application ID at the specified IP address cannot already exist.

The **app** parameter must specify an application that uses the FTP Support feature.

The **ipaddr** parameter must specify a valid IP address for the FTP server.

The **path** parameter value must be in a valid FTP path format.

The **prio** parameter specifies a priority for use of an FTP server by an application when the application has more than one FTP server defined in the table. Each FTP server defined for use by the application must have a priority from 1 to 10 assigned. The available FTP server with the highest priority (smallest number) will be used first by the application.

The FTP Server table can contain entries for a maximum of 10 FTP servers: however, the number of FTP servers supported by an application may be less than 10. Entries that are made for an application cannot be made for more than the maximum number of FTP servers supported by the application.

- The Measurements Platform application (**app=meas**) supports 3 FTP servers.
- The FTP-based Table Retrieve Application (FTRA) (**app=user**) supports 2 FTP servers.
- The Database (**app=db**) and Software Distribution (**app=dist**) applications each support 1 FTP server.

Notes

The same FTP server can be defined more than once, but the specified application must be different for each entry.

Output

```

ent-ftp-
serv:app=meas:ipaddr=1.255.0.102:login=ftpmeas1:path=~meas:prio
=1
    rlgncxa03w 04-02-20 09:07:58 EST EAGLE 31.3.0
Enter Password:*****
    FTP SERV table is (1 of 10) 10% full
    ENT-FTP-SERV: MASP A - COMPLTD
;

ent-ftp-
serv:app=user:ipaddr=1.255.0.102:login=tekperson1:path=~data:pr
io=1
    rlgncxa03w 04-02-20 09:07:58 EST EAGLE 31.3.0
Enter Password:*****
    FTP SERV table is (2 of 10) 20% full
    ENT-FTP-SERV: MASP A - COMPLTD
;

```

ent-gserv-data

Enter G-Port SRI Query for Prepaid Service Data

Use this command to enter translation type, originating point code, or global title address data in the GSERV table. These values are used to determine whether a Send Routing Information (SRI) request should receive G-Port SRI Query for Prepaid service or normal G-Port SRI service.

Keyword: ent-gserv-data

Related Commands: dlt-gserv-data, rtrv-gserv-data

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:gta= (optional)

Global title address. Use this parameter to specify a calling party (CgPA) global title address.

Range: 1-21 digits

:opc= (optional)

ANSI originating point code in the form of *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code *prefix-ni-nc-ncm*.

Synonym: opca

Range: p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

When **chg-sid:pctype=ansi** is specified, *ni = 000* is not valid.

When **chg-sid:pctype=ansi** is specified, *nc = 000* is not valid if *ni = 001-005*.

When **chg-sid:pctype=ansi** is specified, *nc = 000* is valid if *ni = 006-255*.

The point code **000-000-000** is not a valid point code.

:opc/opca/opci/opcn/opcn24= (optional)

Originating point code. Use these parameters to specify message transfer part (MTP) originating point codes.

:opci= (optional)

ITU international originating point code with subfields *zone-area-id*.

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:opcn= (optional)

ITU national originating point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfnti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:opcn24= (optional)

24-bit ITU national originating point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:tt= (optional)

Translation type. Use this parameter to specify a called party (CdPA) translation type.

Range: **0-255**

Example

ent-gserv-data:tt=26

ent-gserv-data:opc=1-1-1

ent-gserv-data:gta=9194605500

Dependencies

Duplicate entries cannot exist in the GSERV table.

The G-Port SRI Query for Prepaid feature must be enabled before this command can be entered.

A new entry cannot be added to the GSERV table because all available space is in use. A maximum of 256 **tt** values, 50 **gta** values, and 50 **opc** values can be entered in the GSERV table.

The **tt**, **opc**, and **gta** parameters cannot be specified within the same command.

The G-Port feature must be enabled before this command can be entered.

Notes

A translation type, originating point code, or global title address (**tt**, **opc**, or **gta** parameter) value must be entered in the GSERV table and must match the corresponding SRI Query parameter for an SRI message to receive the G-Port SRI Query for Prepaid service.

The G-Port SRI Query for Prepaid feature must be on before entries in the GSERV table can be used to affect a G-Port SRI query

Output

ent-gserv-data:tt=26

```
mystp 06-07-27 22:58:17 EST EAGLE 35.2.0
ENT-GSERV-DATA: MASP A - COMPLTD
```

ent-gsmmap-scrn

Enter GSM MAP Screening Entry

Use this command to assign the GSM (Global System for Mobile Telecommunication) MAP (Mobile Application Part) screening entries that filter or allow TCAP messages for certain MAP operation codes. The messages are filtered or allowed based on CgPA GTA+NPV+NAIV, CdPA GTA+NPV+NAIV, and forbidden (**forbid**) parameters. Each CgPA entry is associated with one or more CdPA entries and one or more CgPA entries are associated with a MAP Opcode. This command provisions both CgPA and CdPA entries into the database.

Keyword: ent-gsmmap-scrn

Related Commands: chg-gsmmap-scrn, chg-map, dlt-gsmmap-scrn, dlt-map, rtrv-gsmmap-scrn, rtrv-map

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:cgsr= (mandatory)

The CGPA screening reference. CGSR uniquely identifies a CGPA entry for a specified OPNAME.

Range: *ayyy*

1 alphabetic character and up to 3 optional alphanumeric characters

:opname= (mandatory)

The user-defined name for the operation code. The **opname** value references the operation code (**opcode**) defined with the **ent-gsms-opcode** command. GSM Map Screening is performed on the specified address or addresses for the referenced operation code.

Range: *ayyyyyyy*

Up to 8 alphanumeric characters

:action= (optional)

The screening action to take if a message is forbidden as defined by the **forbid** parameter.

Range: **atierr**, **discard**, **dupdisc**, **duplicate**, **forward**, **pass**, **route**

atierr— An ATI (Any Time Interrogation) reject message is generated. This option is only valid for ATI MAP operation codes.

discard— The MSU is to be discarded.

dupdisc— Route the original message to the duplicate node. The original message will not be sent to the original node. If, however, the duplicate node is not available for routing, the MSU is discarded.

duplicate— Route the message as normal to the original destination and route a copy of the original message to the duplicate node. If the MSU fails to route to the duplicate node, a UIM is generated indicating the duplicate routing failure.

forward— Route the original message to the forward node. The original message will not be sent to the original node. If, however, the forward node is not available for routing, the MSU is routed to the original node.

pass— Route the message as normal to the destination.

route— Route the message as normal to the original destination node; no UIM will be generated. The original destination is the node to which normal GTT would be sent if no GSM MAP actions are taken.

Default: **discard**

:cdsr= (optional)

The CDPA screening reference. CDSR uniquely identifies a CDPA entry for a specified combination of CGSR and OPNAME.

Range: *ayyy*

1 alphabetic character and up to 3 optional alphanumeric characters

:eaddr= (optional)

In association with **npv**, **naiv**, **cgsr**, and **cdsr**, it is for the ending CDPA address in the range to be screened.

Range: 1-15 digits

Valid digits are **0-9**, **a-f**, **A-F**

:forbid= (optional)

The forbidden parameter value. Indicates a forbidden parameter for the entered address. If a forbidden parameter is detected the message is rejected by the action defined by the **action** parameter.

Range: **all**, **none**, **state**, **location**

all— All parameters are forbidden. Take the specified screening action defined by the **action** parameter for messages arriving at the system.

none— None of the parameters are forbidden. Route the message to its destination.

state— Take the specified screening action defined by the **naction** parameter for messages arriving at the system that contain **state** as the forbidden parameter for the entered address/operation code combination. Note: The **state** parameter is valid only for GSM ATI messages.

location— Take the specified screening action defined by the **naction** parameter for messages arriving at the system that contain **location** as the forbidden parameter for the entered address/operation code combination. Note: The **location** parameter is valid only for GSM ATI messages.

Default: **all**

:force= (optional)

Check Mated Application Override. This parameter must be used to complete command execution if the **pc/pca/pci/pcn/pcn24** and **ssn** parameter combination specified in the command is not already defined in the SCCP Application entity set (Remote Point Code/Mated Application Table).

Range: **yes**, **no**

Default: **no**

:mapset= (optional)

The MAP set ID.

Range: **1-36000 dflt**

dflt—Default MAP set

:naiv= (optional)

Nature of Address value for the address or range of CgPA and CdPA addresses. If a message is screened and does not contain matching **npv** and **naiv** values, the message is rejected. The message

is rejected with the default action defined by the **ent-gsms-opcode** command for the operation code (**opcode**) parameter entry referenced by the operation name (**opname**) parameter.

This parameter must be specified with the **npv** parameter.

Range: 0-127, *

Default: *

:npv= (optional)

Numbering Plan value for the address or range of CgPA and CdPA addresses. If a message is screened and does not contain matching **npv** and **naiv** values, the message is rejected. The message is rejected with the default action defined by the **ent-gsms-opcode** command for the operation code (**opcode**) parameter entry referenced by the operation name (**opname**) parameter.

This parameter must be specified with the **naiv** parameter.

Range: 0-15 *

Default: *

:pc= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: **pca**

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001-005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006-255**.

The point code **000-000-000** is not a valid point code.

:pc/pca/pci/pcn/pcn24= (optional)

Point code. The **pc/pca/pci/pcn/pcn24** and **nssn** parameters are used when the default screening action (**dfltact**) is **forward**, **duplicate**, or **dupdisc** (duplicate and discard). These parameters are used to enter the node to which the input message will be routed.

:pci= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

:pcn= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: s-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:pcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

:ri= (optional)

Routing indicator. This parameter specifies whether a subsequent global title translation is required. This parameter can be specified only when the value specified for the **action** parameter is **forward**, **duplicate** or **dupdisc**.

Range: gt, ssn

System

Default: ssn

:saddr= (optional)

The starting origination address.

In association with the **npv**, **naiv**, and **cgsr** parameters, this parameter is for the single CGPA entry or the starting CGPA address in the range to be screened.

In association with the **npv**, **naiv**, and **cdsr** parameters, this parameter is for the single CDPA entry or the starting CDPA address in the range to be screened.

Range: 1-15 digits, *

Valid digits are 0-9, a-f, A-F

Default: *

:ssn= (optional)

Subsystem Number. The **pc/pca/pci/pcn/pcn24** and **ssn** parameters are used when the screening action (**action**) is **forward**, **duplicate**, or **dupdisc** (duplicate and discard). These parameters allow the craftsman to change the defined node to which the input message will be routed.

Range: 002-255 none

Default: none

:tt= (optional)

Translation type. This parameter specifies the value that the CdPA TT is set to as the result of Enhanced GSM Map Screening.

This parameter can be specified only if the value specified for the action parameter is forward, duplicate, or dupdisc.

Range: 0-255 none

Default: none

Example

The following example adds a MAP opname of ati with a range of allowed addresses, defines a forbidden parameter for that range of addresses and an action to take if the forbidden parameter is detected, and sets the npv and naiv values. This example is wrapped to the next line for readability:

```
ent-gsmmap-  
scrn:saddr=919461:eaddr=919462:opname=ati:action=discard:forbid=s  
tate :npv=1:naiv=4:cgsr=fela
```

The following example adds a MAP opname of ati with a range of allowed addresses, defines a forbidden parameter for that range of addresses and an action to take if the forbidden parameter is detected, and sets the npv and naiv values. The command also defines an ITU International Point Code with Subsystem Number 5, and forbids by location messages that have an action of forward. This example is wrapped to the next line for readability:

```
ent-gsmmap-  
scrn:saddr=919461:eaddr=919462:opname=ati:action=forward:pci=1-1-  
1 :ssn=5:force=yes:forbid=location:cgsr=fela
```

The following example adds a MAP opname of xyz with an allowed hexadecimal address of abcdefabcdefabc, defines the action discard to take if a forbidden parameter is detected, and sets the npv and naiv values. The command also defines a CGSR of fela. This example is wrapped to the next line for readability:

```
ent-gsmmap-  
scrn:opname=xyz:saddr=abcdefabcdefabc:npv=10:naiv=10:cgsr=fela :ac  
tion=discard
```

```
ent-gsmmap-  
scrn:opname=test2:cgsr=t1:cdsr=cd3:saddr=125:pci=s-1-1-1:ssn=10 :a  
ction=duplicate
```

```
ent-gsmmap-  
scrn:opname=test2:cgsr=cg1:cdsr=cd1:saddr=125:pci=1-1-1:ssn=10:ac  
tion=duplicate:mapset=11
```

```
ent-gsmmap-  
scrn:opname=test3:cgsr=ad:action=forward:pc=1-1-2:ssn=12:ri=gt
```

```
ent-gsmmap-  
scrn:opname=test4:cgsr=ksl:action=forward:mapset=df1t:pc=1-2-3:ss  
n=12:tt=11
```

Dependencies

The GSM Map Screening feature must be turned on (see the **enable-ctrl-feat** and **chg-ctrl-feat** commands) before this command can be entered.

The EGMS feature must be turned on before:

- The **saddr=*** parameter can be specified.
- Values for the **saddr** and **eaddr** parameters can contain hexadecimal digits.
- The **cdsr** parameter can be specified.
- The **pc/pca** parameter can be specified.

If the **eaddr** parameter is specified, the **saddr** parameter must be specified.

If the **eaddr** parameter is specified, then its value must contain the same number of digits as the value of the **saddr** parameter.

If the **eaddr** parameter is specified, its value must be greater than the **saddr** parameter value.

If the **saddr=*** parameter is specified, then the **eaddr** parameter cannot be specified.

If the **opname** parameter is specified, its value must exist in the GSM MAP Op-Code table.

A value of **state** or **location** cannot be specified for the **forbid** parameter unless the operation code (**opcode**) referenced by **opname** is **71**. The **opcode=71** parameter signifies an ATI MAP operation code.

The **action=atierr** parameter cannot be specified unless the operation code (**opcode**) referenced by the **opname** parameter is **71**. The **atierr** option is only valid for ATI MAP operation codes, and the **opcode=71** parameter signifies an ATI MAP operation code.

The GSM MAP Screening table cannot be full.

The GSM MAP Screening table must have at least two free entries to provision a CgPA entry, because a default wildcard CdPA entry is created for each CgPA entry.

If a single entry is specified for the CgPA/CdPA (the **eaddr** parameter is not specified), then the combination of **saddr/npv/naiv** and **opname** parameters must not already exist in the GSM MAP screening table.

If a range entry is specified for the CgPA/CdPA (the **eaddr** parameter is specified), then the **saddr/eaddr/npv/naiv** and **opname** combination must not already exist or overlap another range entry in the GSM MAP screening table.

If a CdPA entry is being created, then the CGSR must already exist for the specified OPNAME.

If a CgPA entry is being created, the CGSR cannot already exist for the specified OPNAME.

The specified **cdsr** cannot already exist for the specified **cgsr**.

If specified, the **pc/pca/pci/pcn/pcn24** parameter must be a full point code.

If the **action** parameter is specified and its value is **forward**, **duplicate**, or **dupdisc**, the **pc/pca/pci/pcn/pcn24** parameter and the **ssn** parameter must be specified.

The **pc/pca/pci/pcn/pcn24** parameter and the **ssn** parameter can be specified only if the **action** parameter is specified and its value is **forward**, **duplicate**, or **dupdisc**.

The **force** parameter can be specified only if the **pc/pca/pci/pcn/pcn24** parameter and the **ssn** parameter are specified.

If the **pc/pca/pci/pcn/pcn24** parameter and the **ssn** parameter are specified, and the **force** parameter is not specified as **yes**, then the PC/SSN must be populated in the SCCP Application entity set (Remote Point Code/MAP Table).

The values for the **npv** and **naiv** parameters must be either both numbers or both asterisks (*). The parameters cannot be specified as **:npv=*:naiv=9** or **:npv=9:naiv=***, for example.

If specified, the **pc/pca/pci/pcn/pcn24** parameter value must exist as a destination in the Ordered Route entity set or reside in a cluster (ANSI only) that exists as a destination in the Ordered Route entity set (for global title routing).

If the **action** parameter is specified as **forward**, **duplicate**, or **dupdisc**, then the **mapset** parameter must be specified.

If the **mapset**, **ri**, or **tt** parameter is specified, then the value specified for the **action** parameter must be **forward**, **duplicate**, or **dupdisc**.

The Flexible GTT Load Sharing feature must be enabled before the **mapset** parameter can be specified.

The specified MAP set must exist.

If the value of the **mapset** parameter is not **dflt**, then the specified PC/SSN must exist in the specified MAP set.

If the **mapset=dflt** parameter is specified, and the **force** parameter is not specified as **yes**, then the specified PC/SSN must exist in the specified MAP set.

If the **action** parameter has a value of **forward**, **duplicate**, or **dupdisc**, then the value specified for the **pc/pca/pci/pcn/pcn24** parameter cannot be associated with a proxy point code.

If the **ri=ssn** parameter is specified, then the **ssn=none** parameter cannot be specified.

If the **forbid=none** parameter is specified, then the value specified for the **action** parameter must be **pass**.

Notes

GSM screening entries are handled differently from other screening entries such as GWS (gateway screening) in the system database. The following differences apply to provisioning GSM screening entries:

- GSM screening entries can be either single entries or range entries.
- Single entries have precedence in screening over range entries. Thus the single entries are searched first and if a match is found, the range entries are never searched.
- Range entries can overlap single entries.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-).

Output

```
ent -gsmap-
scrn:opname=test2:cgsr=cg1:cdsr=cd1:saddr=125:pci=1-1-1:ssn=10:ac
tion=duplicate:mapset=11
tekelecstp 06-05-29 13:24:41 EST EAGLE 35.0.0
GSM Map Screening table is (1 of 4000) 1% full
ENT-GSM MAP-SCRN: MASP A - COMPLTD
;

ent -gsmap-
scrn:opname=test3:cgsr=ad:action=forward:pc=1-1-2:ssn=12:ri=gt
tekelecstp 08-01-18 17:03:01 EST EAGLE 38.0.0
GSM MAP Screening Table (4 of 4000) is 1% full
ENT-GSM MAP-SCRN: MASP A - COMPLTD
;

ent -gsmap-
scrn:opname=test4:cgsr=ksl:action=forward:mapset=dflt:pc=1-2-3:ss
n=12:tt=11
tekelecstp 08-08-20 19:13:01 EST EAGLE 39.2.0
GSM MAP Screening Table (1 of 4000) is 1% full
ENT-GSM MAP-SCRN: MASP A - COMPLTD
;
```

ent-gsms-opcode

Enter GSM MAP Screening Operation Code

Use this command to assign the concerned GSM (Global System for Mobile Telecommunication) MAP (mobile application part) screening operation codes and the default screening action for the operation code. This command allows the craftsperson to provision a list of all operation codes that the system uses in performing GSM screening.

Keyword: ent-gsms-opcode

Related Commands: chg-gsms-opcode, dlt-gsms-opcode, rtrv-gsms-opcode

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:opcode= (mandatory)

MAP operation code. This parameter refers to the actual decimal value of the MAP operation codes from the TCAP layer of GSM MAP messages.

Range: 0-255 *

If a decimal Map Opcode is not found in the database, then the asterisk (wildcard *), if provisioned, will constitute a match when screening the MSUs.

:opname= (mandatory)

Name for the operation code. The **opname** value is defined with the **ent-gsmmap-scrn** command.

Range: ayyyyyy

Up to 8 alphanumeric characters

:dfltact= (optional)

Default screening action for a MAP operation code. The default screening action is used when a matching CGPA address+NPV+NAIV entry is not found in the GSM MAP screening table.

Range: **atierr, discard, dupdisc, duplicate, forward, pass, route**

atierr — Do not route the MSU. An ATI (Any Time Interrogation) reject message is generated. This option is only valid for ATI MAP operation codes.

discard — Do not route the MSU. The MSU is discarded (thrown away) and an appropriate UIM is issued.

dupdisc — Route the original message to the duplicate node. The original message will not be sent to the original node. If, however, the duplicate node is not available for routing, the MSU is discarded.

duplicate — Route the message as normal to the original destination and route a copy of the original message to the duplicate node. If the MSU fails to route to the duplicate node, a UIM is generated indicating the duplicate routing failure.

forward — Route the original message to the forward node. The original message will not be sent to the original node. If, however, the forward node is not available for routing, the MSU is routed to the original node.

pass — Route the message as normal to the destination.

route — Route the message as normal to the original destination node; no UIM will be generated. The original destination is the node to which normal GTT would be sent if no GSM MAP actions are taken.

Default: **discard**

:force= (optional)

Check Mated Application Override. This parameter must be used to complete command execution if the **pc/pca/pci/pcn/pcn24** and **ssn** parameter combination specified in the command is not already defined in the SCCP Application entity set (Remote Point Code/Mated Application Table).

Range: **yes, no**

Default: **no**

:mapset= (optional)

The MAP set ID.

Range: 1-36000 dflt

dflt—Default MAP set

:pc= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member* (ni-nc-ncm).

Synonym: *pca***Range:** 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001–005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006–255.

The point code 000-000-000 is not a valid point code.

:pc/pca/pci/pcn/pcn24= (optional)

Point code. The **pc/pca/pci/ncn/pcn24** and **ssn** parameters are used when the default screening action (**dfltact**) is **forward**, **duplicate** or **dupdisc** (duplicate and discard). These parameters allow the craftsman to change the defined node to which the input message will be routed.

:pci= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

:pcn= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: s-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:pcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

:ri= (optional)

Routing indicator. This parameter specifies whether a subsequent global title translation is required. This parameter can be specified only when the value specified for the **dfltact** parameter is **forward**, **duplicate**, or **dupdisc**.

Range: gt, ssn

System

Default: ssn

:ssn= (optional)

Subsystem Number. The **pc/pca/ pci/pcn/pcn24** and **ssn** parameters are used when the default screening action (**dfltact**) is **forward**, **duplicate** or **dupdisc** (duplicate and discard). These parameters allow the craftsperson to change the defined node to which the input message will be routed.

Range: 002-255 none

Default: none

:tt= (optional)

Translation type. This parameter specifies the value that the CdPA TT is set to as the result of Enhanced GSM Map Screening.

The parameter can be specified only if the value specified for the **dfltact** parameter is **forward**, **duplicate**, or **dupdisc**.

Range: 0-255 none

Default: none

Example

The following example adds a MAP operation code of 71 with a name of ati with a default action of discard:

```
ent -gsms-opcode:opcode=71:opname=ati:dfltact=discard
```

The following example adds a MAP operation code of 71 with a name of ati with a default action of forward, an international point code of 1-1-1, a subsystem number of 5, and forces:

```
ent -gsms-  
opcode:opcode=71:opname=ati:dfltact=forward:pci=1-1-1:ssn=5:force  
=yes
```

The following example adds a MAP operation code of 71 with a name of ati with a default action of duplicate, an international point code of 1-1-1, a subsystem number of 5, and forces:

```
ent -gsms-  
opcode:opcode=71:opname=ati:dfltact=duplicate:pci=1-1-1:ssn=5:for  
ce=yes
```

The following example adds a MAP operation code of 71 with a name of ati with a default action of dupdisc, an international point code of 1-1-1, a subsystem number of 5, and forces:

```
ent -gsms-  
opcode:opcode=71:opname=ati:dfltact=dupdisc:pci=1-1-1:ssn=5:force  
=yes
```

The following example adds a MAP operation code of * with a name of xyz with a default action of duplicate, an ANSI point code of 8-8-8, a subsystem number of 20:

```
ent -gsms-  
opcode:opcode=*:opname=xyz:pca=8-8-8:dfltact=duplicate:ssn=20
```

The following example adds a MAP operation code of 22 with a name of ati with a default action of discard:

```
ent -gsms-opcode:opcode=22:opname=ati:dfltact=discard
```

The following example shows a spare point code:

```
ent-gsms-
opcode:opname=test3:opcode=3:pci=s-1-1-1:dfltact=duplicate:ssn=10
:force
```

The following example shows a MAP set value. The Flexible GTT Load Sharing feature is ON.

```
ent-gsms-
opcode:opname=test3:opcode=3:pc=1-1-1:dfltact=duplicate:ssn=10:mapset=7
```

The following example adds a MAP operation code of 27 with a name of test3 with a default action of forward, an ANSI point code of 1-1-2, a subsystem number of 12 and a routing indicator of gt:

```
ent-gsms-
opcode:opname=test3:opcode=27:dfltact=forward:pca=1-1-2:ssn=12:ri=gt
```

The following example shows a translation type value:

```
ent-gsms-
opcode:opname=test4:opcode=32:dfltact=forward:mapset=dflt:pc=1-2-3:ssn=12:tt=11
```

Dependencies

The GSM Map Screening feature (see the **enable-ctrl-feat** command) must be turned on before this command can be entered.

If the **dfltact** parameter is specified, then the **pass**, **discard**, **atierr**, **route**, **forward**, **duplicate**, or **dupdisc** value must be assigned.

The reserved word **none** cannot be specified as a value for the **opname** parameter.

The **pc/pca/pci/pcn/pcn24** and **ssn** parameters can be specified only if the **dfltact** parameter is specified and its value is **forward**, **duplicate**, or **dupdisc**.

If the **dfltact** parameter is specified with a value of **forward**, **duplicate**, or **dupdisc**, then a **pc/pca/pci/pcn/pcn24** parameter and the **ssn** parameter must be specified.

The **force** parameter can be specified only if a **pc/pca/pci/pcn/pcn24** parameter and the **ssn** parameter are specified.

The **dfltact=atierr** parameter cannot be specified unless the value of the operation code referenced by the **opname** parameter is **71**. The **atierr** option is valid only for ATI MAP operation codes, and the **opcode=71** parameter signifies an ATI MAP operation code.

The value specified for the **opcode** parameter cannot already exist in the GSM Map Op-Code table.

The value specified for the **opname** parameter cannot already be used in the GSM Map Op-Code table.

If the **pc/pca/pci/pcn/pcn24** parameter and the **ssn** parameter are specified, and the **force** parameter is not specified as **yes**, then the PC-SSN must exist in the SCCP Application entity set (Remote Point Code / Mated Application Table).

The Enhanced GSM Map Screening feature must be enabled and turned on before the **opcode=*** parameter can be specified.

If specified, the **pc/pca/pci/pcn/pcn24** parameter value must be a full point code.

If specified, the **pc/pca/pci/pcn/pcn24** parameter value must exist as a destination in the Ordered Route entity set or reside in a cluster (ANSI only) that exists as a destination in the Ordered Route entity set (for global title routing).

The Enhanced GSM Map Screening feature must be enabled and turned on when the PC/PCA is specified.

If the **mapset**, **ri**, or **tt** parameter is specified, then the value specified for the **dfltact** parameter must be **forward**, **duplicate**, or **dupdisc**.

If the **dfltact** parameter is specified as **forward**, **duplicate**, or **dupdisc**, then the **mapset** parameter must be specified.

The Flexible GTT Load Sharing feature must be enabled before the **mapset** parameter can be specified.

The specified MAP set must exist.

If the **mapset** parameter is not specified as **dflt**, or if the **mapset=dflt** parameter is specified, and the **force** parameter is not specified as **yes**, then the specified PC/SSN must exist in the specified MAP set.

If the **dfltact** parameter has a value of **forward**, **duplicate**, or **dupdisc**, then the value specified for the **pc/pca/pci/pcn/pcn24** parameter cannot be associated with a proxy point code.

If the **ri=ssn** parameter is specified, then the **ssn=none** parameter cannot be specified.

Notes

Origination Addresses are considered to be the SCCP CGPA address as well as the Numbering Plan and Nature of Address values.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-).

Output

```
ent-gsms-
opcode:opname=test3:opcode=3:pc=1-1-1:dfltact=duplicate:ssn=10:mapset=7
tekelecstp 06-05-29 13:21:58 EST EAGLE 35.0.0
ENT-GSMS-OPCODE: MASP A - COMPLTD
;
ent-gsms-
opcode:opname=test3:opcode=27:dfltact=forward:pca=1-1-2:ssn=12:ri=gt
tekelecstp 08-01-18 16:56:43 EST EAGLE 38.0.0
ENT-GSM-OPCODE: MASP A - COMPLTD
;
ent-gsms-
opcode:opname=test4:opcode=32:dfltact=forward:mapset=dflt:pc=1-2-3:ssn=12:tt=11
tekelecstp 08-08-20 19:13:01 EST EAGLE 39.2.0
ENT-GSM-OPCODE: MASP A - COMPLTD
;
```

ent-gsmssn-scrn

Enter GSM Subsystem Number Screening Entry

Use this command to provision origination and destination SSNs (subsystem numbers) to be screened using the GSM (Global System for Mobile Telecommunication) MAP (mobile application part) screening feature. The value of the **ssn** parameter that is entered with this command is added to the GSM SSN screening table. All theMAP messages with the originating or destination **ssn** entered are screened using the GSM Map screening feature.

Keyword: ent-gsmssn-scrn

Related Commands: dlt-gsmssn-scrn, rtrv-gsmssn-scrn

Command Class: Database Administration

Parameters

:ssn= (mandatory)
 Subsystem number.
Range: **000-255**

:type= (mandatory)
 Subsystem type.
Range: **dest, orig**
 dest — The destination SSN
 orig — The origination SSN

Example

The following example adds an originating subsystem of 10 to the GSM SSN Screening table:

ent-gsmssn-scrn:ssn=10:type=orig

Dependencies

The GSM Map Screening feature must be turned on (see the **enable-ctrl-feat** command) before this command can be entered.

A value for the **ssn** and **type** parameter combination cannot be specified that already exists in the GSM SSN screening table.

Notes

None

Output

```
ent-gsmssn-scrn:ssn=10:type=orig
rlghncxa03w 04-01-10 11:43:04 EST  EAGLE 31.3.0
ENT-GSMSSN-SCRN: MASP A - COMPLTD
;
```

ent-gta**Enter Global Title Address Information
Command**

Use this command to specify the GTA (global title address) information for applicable global title selectors required to specify a global title entry.

This command adds the routing object (a destination address and a subsystem number) for messages requiring a global title translation. The translation is performed on the basis of the global title address (**gta**), global title indicator (**gti**), numbering plan (**np**), nature of address indicator (**nai**), and translation type (**tt**) of each SS7 SCCP message directed to the STP with a routing indicator of 0, indicating a GTT is required.

Keyword: ent-gta

Related Commands: chg-gta, dlt-gta, rtrv-gta

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:gttsn= (mandatory)
 GTT set name. This parameter specifies the entity to which global title addresses and selectors are assigned.

Range: *ayyyyyyyy*
 1 leading alphabetic and up to 8 following alphanumeric characters.

:pc= (mandatory)

ANSI point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*). The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: *pca*

Range: **p-, 000-255**
 Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).
 prefix—p-
 When **chg-sid:pctype=ansi** is specified, *ni = 000* is not valid.
 When **chg-sid:pctype=ansi** is specified, *nc = 000* is not valid if *ni = 001-005*.
 When **chg-sid:pctype=ansi** is specified, *nc = 000* is valid if *ni = 006-255*.
 The point code **000-000-000** is not a valid point code.

:pci= (mandatory)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**
 Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).
 prefix—s-, p-, ps-
 zone—0-7
 area—000-255
 id—0-7
 The point code **0-000-0** is not a valid point code.

:pcn= (mandatory)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**
 Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).
 prefix—s-, p-, ps-
 nnnnn—0-16383
 gc—aa-zz
 m1-m2-m3-m4—0-14 for each member; values must sum to 14

:pcn24= (mandatory)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Range: **p-, 000-255**
 Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).
 prefix—p-
 msa—000-255

ssa—000–255

sp—000–255

:xlat= (mandatory)

Translate indicator. This parameter specifies translation actions and routing actions.

Range: **dpc, dpcngt, dpcssn, udts, disc**

:ccgt= (optional)

Cancel called global title indicator.

Range: **yes, no**

Default: **no**

:cggtasn= (optional)

CgPA GTA GTT set name.

Range: *ayyyyyyy*

1 leading alphabetic character and up to 8 following alphanumeric characters.

:cggtmod= (optional)

Calling party GT modification indicator. This parameter specifies whether calling party global title modification is required.

Range: **yes, no**

Default: **no**

:cgpc= (optional)

ANSI CgPA point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: **cgpca**

Range: **000-255, ***

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

The asterisk (*) value is not valid for the *ni* subfield.

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001–005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006–255**.

When **chg-sid:pctype=ansi** is specified, *ni*-*-* is valid if *ni* = **006–255**.

The point code **000-000-000** is not a valid point code.

:cgpci= (optional)

ITU international CgPA point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:cgpcn= (optional)

ITU national CgPA point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible

point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, (*prefix-nnnnn, prefix-nnnnn-gc, prefix-m1-m2-m3-m4, prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:cgpcn24= (optional)

24-bit ITU national CgPA point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:cgpcsn= (optional)

CgPA PC GTT set name.

Range: *ayyyyyyy*

1 leading alphabetic character and up to 8 following alphanumeric characters.

:cgssn= (optional)

Starting CgPA subsystem number.

Range: **0-255**

:cgssnsn= (optional)

CgPA subsystem number GTT set name.

Range: *ayyyyyyy*

1 leading alphabetic character and up to 8 following alphanumeric characters.

:ecgssn= (optional)

Ending CgPA subsystem number.

Range: **0-255**

:egta= (optional)

End global title address. This parameter specifies the end of a range of global title digits.

Range: 1-21 digits

If the Hex Digit Support for GTT feature is not enabled and on, the range is 1 - 21 decimal digits; valid digits are **0-9**.

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are **0-9, a-f, A-F**.

Default: Same as the specified **gta** value

:force= (optional)

Check mated application override. This parameter must be used to complete command execution if the **pci/pcn** and **ssn** parameter combination specified in the command is not already defined in the SCCP Application entity set (Remote Point Code/Mated Application Table).

Range: **yes, no**

Default: **no**

:gta= (optional)

Global title address. This parameter specifies the beginning of a range of global title digits.

Range: 1-21 digits

If the Hex Digit Support for GTT feature is not enabled and on, the range is 1 - 21 decimal digits; valid digits are **0-9**.

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are **0-9, a-f, A-F**.

:loopset= (optional)

SCCP loopset name. This parameter associates a translation set with a loopset.

Range: ayyyyyyy, **none**

1 leading alphabetic character and up to 7 following alphanumeric characters.

none—There is no association between the translation set and any loopset.

Default: **none**

:mapset= (optional)

MAP set ID. This parameter specifies the Mated Application set ID.

Range: **1-3600Q dflt**

dflt—Default MAP set

:mrnset= (optional)

MRN set ID. This parameter specifies the Mated Relay Node set ID.

Range: **1-3000 none, dflt**

dflt—Default MRN set.

none—The GTA translation does not participate in any load sharing.

:ngti= (optional)

New GTI code. When the ANSI-ITU-China SCCP Conversion and AMGTT features are ON, and the Translated Point Code is of a different network type, this parameter specifies whether the new GTI translation format is GTI type **2** or GTI type **4**.

Range: **2, 4**

:nnai= (optional)

New nature of address indicator. This parameter specifies the nature of address indicator that will replace the received nature of address indicator.

Range: **0-127**

Default: **0xFFFF**

:nnp= (optional)

New numbering plan. This parameter specifies the numbering plan that will replace the received numbering plan.

Range: **0-15**

Default: **0xFFFF**

:npdd= (optional)

New prefix digits to be deleted. This parameter specifies the new prefix digits to be deleted that will replace the received prefix digits to be deleted.

Range: **0-21**

Default: **0**

:npds= (optional)

New prefix digits string. This parameter specifies the new prefix digits string that will replace the received prefix digits string.

Range: 1-21 digits
 If the Hex Digit Support for GTT feature is not enabled and on, the range is 1 - 21 decimal digits; valid digits are **0-9**.
 If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are **0-9, a-f, A-F**.
Default: No digits

:nsdd= (optional)

New suffix digits to be deleted. This parameter specifies the new suffix digits to be deleted that will replace the received suffix digits to be deleted.

Range: **0-21**
Default: **0**

:nsds= (optional)

New suffix digits string. This parameter specifies the new suffix digits string that will replace the received suffix digits string.

Range: 1-21 digits
 If the Hex Digit Support for GTT feature is not enabled and on, the range is 1 - 21 decimal digits; valid digits are **0-9**.
 If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are **0-9, a-f, A-F**.
Default: No digits

:ntt= (optional)

New translation type. The point code domain translation types for EGTT are handled by the EAGLE 5 ISS protocol processing as either ANSI or ITU; therefore, ITU applies to ITU-I, ITU-I Spare, ITU-N, and ITU-N Spare. ITU-I includes ITU-I Spare, and ITU-N includes ITU-N Spare.

Range: **000-255**
Default: No **ntt** value provided

:opc= (optional)

ANSI originating point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Range: **000-255, ***
 Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).
 The asterisk (*) value is not valid for the *ni* subfield.
 When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.
 When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.
 When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.
 When **chg-sid:pctype=ansi** is specified, *ni-*-** is valid if *ni* = **006-255**.
 The point code **000-000-000** is not a valid point code.

:opci= (optional)

ITU international originating point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255**
 Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).
prefix—**s-**
zone—**0-7**
area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:opcn= (optional)

ITU originating point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:opcn24= (optional)

24-bit ITU national originating point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:opcsn= (optional)

The OPC GTT set name.

Range: *ayyyyyyy*

1 leading alphabetic character and up to 8 following alphanumeric characters.

:ri= (optional)

Routing indicator.

Range: **gt, ssn**

gt— Allow a called party address with a routing indicator value of “global title.”

ssn— Allow a called party address with a routing indicator value of “DPC/SSN.”

:selid= (optional)

Selector ID.

Range: **0-65534**

:ssn= (optional)

New translated subsystem number.

Range: **002-255**

Default: No *ssn* value provided

Example

The lines in some examples are wrapped for readability:

ent-gta:gtttsn=lidb:gta=9195554321:xlat=dpc:ri=gt:pc=001-255-253

ent-gta:gtttsn=t800:gta=919460:xlat=dpc:ri=gt:pc=001-255-252


```

ent-
gta:gttsn=t800:gta=919461:egta=919468:xlata=dpcssn:ri=ssn:pc=001-2
55-252:ssn=254
ent-
gta:gttsn=setint000:gta=391951212000000:egta=391951212399999:xlata=
dpcssn :ri=ssn:pci=1-253-1:ssn=255
ent-
gta:gttsn=imsi:gta=591975593000000:egta=591975593299999:xlata=dpcn
gt:ri=gt :pci=004-167-25:ntt=4
ent-
gta:gttsn=test:gta=100000:egta=199999:pca=1-1-1:ssn=123:xlata=dpcn
gt :ri=gt:npdd=2:nnp=3:nnai=120
ent-
gta:gttsn=test2:gta=123:egta=321:pcn=222:ssn=10:xlata=dpcngt :ri=gt
:npds=999:nnai=100
ent-
gta:xlata=dpcssn:ri=ssn:pcn24=8-8-8:gttsn=any:gta=919833:ssn=20
ent-
gta:xlata=dpcssn:ri=ssn:ssn=10:gta=12345678901:egta=23456789012 :nn
p=14:nnai=3:pcn=s-124:gttsn=setnat003
ent-
gta:xlata=dpcssn:ri=ssn:ssn=10:gta=12345688901:egta=23456889012 :nn
p=14:nnai=3:pcn=s-128-aa:gttsn=setnat003
ent-gta:gta=987666799012345678901:egta=987667321099765432101
xlata=dpcngt:ri=gt:pcn=s-124-aa:ntt=234:ccgt=no:
gttsn=setnat003:nnp=12:nnai=26
ent-
gta:xlata=dpcssn:ri=ssn:ssn=10:gta=13345688901:egta=24456889012 :nn
p=14:nnai=3:pci=s-1-230-2:gttsn=itui1
ent-
gta:gttsn=tbla:xlata=dpc:ri=gt:pc=1-1-1:gta=1234567700:mrnset=dflt
ent-
gta:gttsn=tbla:xlata=dpc:ri=gt:pc=1-1-1:gta=1234567890:egta=223456
7890:mrnset=23
ent-
gta:gttsn=tbla:xlata=dpcngt:ri=gt:pc=1-1-2:gta=2345678901:egta=345
6789012:mrnset=54
ent-
gta:gttsn=tbla:xlata=dpcngt:ri=gt:pc=1-1-3:gta=3456789012:egta=456
7890123:mrnset=none

```

The following examples require the Flexible GTT Load Sharing feature to be ON.

```

ent-
gta:gttsn=tblx:xlata=dpcssn:ri=ssn:pc=1-1-1:gta=1234567890:egta=22
34567890:ssn=10:mapset=23
ent-gta:gttsn=tblx:xlata=dpc:ri=ssn:pc=2-2-2:gta=2345678911:egta=
3456789022:mapset=dflt

```

Provisions Advanced CdPA GTA translations.

```

ent-
gta:gttsn=setcdgta:gta=123456789012345678901:egta=223456789012345
678901:
xlat=dpcssn:ri=ssn:pca=001-001-001:ssn=100:cggtasn=setcggt:opcsn
=setopc
ent-
gta:gttsn=cdgta1:gta=133456789012345678901:egta=23345678901234567
8901:
xlat=dpcssn:ri=ssn:pca=001-001-001:ssn=100:selid=342:opcsn=setopc
ent-
gta:gttsn=setudts1:gta=423456789012345678901:egta=523456789012345
678901: xlat=udts
ent-
gta:gttsn=setcggt:gta=323456789012345678901:egta=423456789012345
678901: xlat=dpcssn:ri=ssn:pca=001-001-001:ssn=20:cgssnsn=setcgssn
ent-
gta:gttsn=cggtadsc:gta=623456789012345678901:egta=623456789012345
678901: xlat=disc
ent-gta:gttsn=setcgpc:cgpc=001-001-001:xlat=dpcssn:ri=ssn:
pca=001-001-001:ssn=20:cgssnsn=setcgssn
ent-gta:gttsn=cgpcudt2:cgpc=001-001-009:xlat=udts
ent-gta:gttsn=setopc:opca=002-001-001:xlat=dpcssn:ri=ssn:
pca=001-001-001:ssn=20:cgssnsn=setcgssn
ent-gta:gttsn=opcdisc3:opca=002-001-001:xlat=disc
ent-gta:gttsn=setcgssn:cgssn=100:ecgssn=200:xlat=dpcssn:ri=ssn:
pca=001-001-001:ssn=20
ent-gta:gttsn=cgssnud3:cgssn=100:ecgssn=200:xlat=udts
ent-
gta:gttsn=setans004:gta=981817:xlat=dpc:pc=1-1-1:ri=gt:cggtmod=ye
s
ent-
gta:gttsn=tblx:xlat=dpcssn:ri=ssn:pc=1-1-1:gta=1234567890:egta=22
34567890:ssn=10:mapset=23:loopset=raleigh1

```

Dependencies

The EGTT feature must be turned on before this command can be entered.

The AMGTT feature must be turned on before the **nnp**, **nnai**, **ngti**, **nsdd**, **nsds**, **npdd**, and **npds** parameters can be specified.

The ANSI-ITU-China SCCP Conversion feature must be enabled and turned on before the **ngti** parameter can be specified.

The ANSI-ITU-China SCCP Conversion feature must be enabled and turned on before a translated PC that is of a different domain than the GTTSN can be specified.

The ANSI-ITU-China SCCP Conversion feature must be on before a translated PC and a translation type in different network types can be specified.

Asterisks cannot be specified for the **ssn**, **ri**, **cgssn**, or **ecgssn** parameters.

The **gttsn** parameter must be specified and must match an existing **gttsn**.

The **pc/pca/pci/pcn/pcn24** parameter cannot be out of range.

If the **egta** parameter is specified, then the values of the **gta** and **egta** parameters must be the same length.

The length of the specified **gta** parameter must match the number of digits provisioned for the specified GTT set (**gttsn**).

The specified **gta/egta** range must exist for the specified GTT set in the STP active database. While an exact match is not required, you cannot specify an overlap with another range. If the range overlaps, an error is generated that displays a list of overlapped global title addresses. An example follows that shows what happens when the user attempts to enter a global title address range (such as 8005550000 to 8005559999) that overlaps an existing range. The overlapping links must match. If they do not, the error message displays the list of overlapped global title addresses:

```
The following GTA ranges overlap the input GTA range
START GTA      END GTA
8005550000      8005551999
8005552000      8005553999
8005554000      8005555999
ENT-GTA: MASP A - Command Aborted
```

The new translation type (**ntt** parameter) must match that of an existing ANSI GTT selector that is assigned to a GTT set (**gttsn** parameter).

The new translation type (**ntt** parameter) cannot already be defined as an alias.

If the ANSI-ITU-China SCCP Conversion feature is on, and the **ntt** parameter is specified, then the **ri=gt** parameter must be specified.

If the ANSI-ITU-China SCCP Conversion feature is on, then the **ntt** parameter can be specified only when the **xlat** parameter value is **dpc** or **dpcngt**.

The **ngti** parameter can be specified only when the translated point code and the translation type are in different domains, or are both in the ITU domain.

The **nsdd** and **nsds** parameters cannot be used in the same command with the **npdd** and **npds** parameters.

If the **ngti=4** parameter is specified, then the **nnp** and **nnai** parameters must be specified.

If the **ngti=4** parameter is specified, then the translated PC cannot be ANSI. For ANSI PCs, the GTI value must be 2.

If the **ngti=2** parameter is specified, then the **nnp** and **nnai** parameters cannot be specified.

The **ccgt** and **ngti** parameters cannot be specified together in the command.

If the ANSI-ITU-China SCCP Conversion feature is not on and the specified GTT set is an ANSI set, then the **pc/pca** parameter must be a valid ANSI point code.

When the ANSI-ITU-China SCCP Conversion feature is not on and the specified GTT set is an ITU set, the **pci/pcn/pcn24** parameter must be a valid ITU point code.

If the **xlat=dpcngt** parameter is specified, then the **ri=gt** parameter must be specified.

If the **xlat=dpcngt** parameter is specified, then the **ntt** parameter must be specified.

If the **ntt** parameter is specified, then the **xlat=dpcngt** parameter must be specified.

If the **ssn** parameter is specified, then the **xlat=dpcssn** parameter must be specified.

If the **xlat=dpcssn** parameter is specified, then the **ssn** parameter must be specified.

If the value specified for the **pc/pca/pci/pcn/pcn24** parameter is the STP's true point code, the **xlat=dpcssn** and **ri=ssn** parameters must be specified.

If the value specified for the **pc/pca/pci/pcn/pcn24** parameter is the STP's true point code and the **ssn** parameter is specified, the **ssn** parameter must exist in the SS-APPL table.

Unless the PC is the STP true PC, the value specified for the **pc/pca/pci/pcn/pcn24** parameter must exist as a destination in the Route table or reside in a cluster that exists as a destination in the Route table (for global routing).

If a final GTT (the **ri=ssn** parameter) is specified with the **xlat=dpc** parameter and without the **force=yes** parameter, then the PC (**pc/pca/pci/pcn/pcn24**) must exist in the Remote Point Code/ MAP table. The **force=yes** parameter can be specified to execute the command when the PC is not in the table; the following warning message is displayed in the scroll area of the terminal:

CAUTION: DPC DOES NOT EXIST IN MATED APPLICATION TABLE.

If the **ccgt=yes** parameter is specified, then the **ri=ssn** parameter must be specified.

If the **pc/pca/pci/pcn/pcn24** parameter is any of the STP's PCs or CPCs, then the **ccgt=no** parameter must be specified.

If the XGTT feature is enabled, the GTT table can contain up to either 400,000 or 1,000,000 entries, depending on the controlled feature Part Number that is enabled. If XGTT is not enabled, the GTT table can contain up to 269,999 user entries. An error message is displayed if a command entry would result in more than the allowed maximum number of entries in the table.

If the **egta** parameter is specified, then the value of the **egta** parameter must be greater than or equal to the value of the **gta** parameter.

The GTT Set Name must not be **none**.

The **pc/pca/pci/pcn/pcn24** parameter must be a full PC.

If the VGTT (variable length GTT) feature is turned on, there can be up to 10 GTA lengths per GTT set. When the **ent-gta** command is entered to create entries, the software keeps track of the lengths and allows only 10 different lengths.

If the **ri=ssn** parameter is specified, then the **mrnset** parameter must not be specified.

If the Flexible GTT Load Sharing feature is enabled, then the specified PC must already exist in the specified MRN set.

The specified MRN set must already exist in the MRN table.

The **mrnset** parameter can only be specified when the Flexible GTT Load-Sharing feature is enabled.

If the **ri=gt** parameter is specified, then the **mrnset** parameter must be specified.

The **mapset** parameter can only be specified if the Flexible GTT Load Sharing feature is enabled, and the **ri=ssn** parameter is specified. If the **ri=ssn** parameter is specified, the **mapset** parameter must be specified. If the **ri=gt** parameter is specified, the **mapset** parameter cannot be specified.

The Flexible GTT Load Sharing feature must be enabled before the **mapset** parameter can be specified.

The specified PC and SSN must exist in the specified MAP set.

The specified MAP set must exist in the database.

If the **xlat=dpc** parameter is specified, and the **force** parameter is not specified as **yes**, then the specified PC and MAP set must exist in the MAP table.

Either the **gta**, **cgpc/cgpca/cgpci/cgpcn/cgpcn24**, **opc/opca/opci/opcn/opcn24**, or **(e)cgssn** parameter must be specified.

The **cggtasn**, **cgpcsn**, and **selid** parameters are mutually exclusive.

If the **cgssnsn** parameter is specified, the **cggtasn**, **opcsn**, **cgpcsn**, and **selid** parameters cannot be specified.

If the **cgssn** parameter is specified, the **cggtasn**, **cgpcsn**, **cgssnsn**, **opcsn**, and **selid** parameters cannot be specified.

If the **ecgssn** parameter is specified, it must be greater than the **cgssn** parameter.

If the **xlat** parameter has a value of **udts** or **disc**, the only other optional parameters that can be specified are the **gta/egta**, **cgpc**, **opc**, or **cgssn/ecgssn** parameters.

If the **xlat** parameter has a value of **dpc**, **dpcngt**, or **dpcssn**, the **gta/egta**, **gcpc**, **opc**, **cgssn/ecgssn**, **pc/pca/pci/pcn/pcn24**, and **ri** parameters must be specified.

The Origin Based SCCP Routing feature must be enabled if the **cggtasn**, **cgpcsn**, **cgssnsn**, **opcsn**, **cgpc/cgpca/cgpci/cgpcn/cgpcn24**, **opc/opca/opci/opcn/opcn24**, **(e)cgssn**, or **selid** parameters are specified, or if the **xlat** parameter has a value of **udts** or **discard**.

If the GTTSN set type has a value of **cdga** or **cgssn**, the **cgssnsn** parameter cannot be specified. If the GTTSN set type has a value of **cdgta**, the **cggtasn**, **cgpcsn**, or **opcsn** parameters must be specified.

The GTA must be specified if the GTTSN set type has a value of **cdgta** or **cggta**. The GTA cannot be specified for other set types.

If the GTTSN set type has a value of **cgpc**, the **cgpc/cgpca/cgpci/cgpcn/cgpcn24** parameter must be specified. This parameter cannot be specified for other set types.

The **opc**, **opca**, **opci**, **opcn**, or **opcn24** parameter must be specified if the GTTSN set type has a value of **opc**. These parameters cannot be specified for other set types.

If the GTTSN set type has a value of **cgssn**, the **cgssn** parameter must be specified. The **cgssn** parameter cannot be specified for GTTSN of other types.

The CgPA subsystem number range cannot overlap a currently existing range for the specified GTT set.

The value specified for the GTT set name (the **gttsn** parameter) must match the corresponding type in the GTTSET table. The following GTT set names and matching GTT set types may be specified:

- GTT set name specified by the **cgssnsn** parameter must be type **cgssn**
- GTT set name specified by the **cggtasn** parameter must be the type **cggta**
- GTT set name specified by the **cgpcsn** parameter must be type **cgpc**
- GTT set name specified by the **opcsn** parameter must be type **opc**

If the specified GTT set is an ANSI set, the **cgpc/cgpca** and **opc/opca** parameters must be valid ANSI point codes. If the specified GTT set is an ITU set, the **cgpci/cgpcn/cgpcn24** and the **opci/opcn/opcn24** parameters must be valid ITU point codes.

The CgPC subsystem number set domain must be the same as the GTTSN set domain. If GTTSN set domain is ANSI, then the CgPC subsystem number set domain must be ANSI. If the GTTSN set domain is ITU, then the CgPC subsystem number set domain must be ITU.

The OPC subsystem number set domain must be the same as the GTTSN set domain. If the GTT subsystem number set domain is ANSI, then the OPC subsystem number set domain must be ANSI. If the GTT subsystem number set domain is ITU, then the OPC subsystem number set domain must be ITU.

The CGSSN number set domain and the CGGTA subsystem number set domain must be the same as the GTT subsystem number set domain. The possible values are ANSI or ITU.

The CGSSN range cannot overlap a currently existing range for the specified GTT set.

The **selid** parameter can be specified only if the GTTSN set type has a value of **cdgta**.

The specified **cgpc** or **opc** translation entry already exists.

The **cgpc**, **cgssn**, **gta**, and **opc** parameters are mutually exclusive. Each of these parameters must be specified individually in separate commands.

The Hex Digit Support for GTT feature must be enabled and on before hexadecimal digits can be specified for the **gta**, **egta**, **npds**, or **nsds** parameters.

The value of the **loopset** parameter must already exist in the database.

The SCCP Loop Detection feature must be enabled before the **loopset** parameter can be specified.

The value specified for the **pc** parameter cannot be associated with a proxy point code.

The AMGTT feature or the AMGTT CgPA Upgrade feature must be turned on before the **cggmod** parameter can be specified.

One or more point codes in the command will exceed the maximum number of entries in the MAP table.

Notes

When the EGTT feature is turned on, the GTT Selector (**ent/chg/dlt/rtrv-gttset**), GTT Set (**ent/dlt/rtrv-gttset**), and GTA (**ent/chg/dlt/rtrv-gta**) commands replace the Translation Type (**ent/dlt/rtrv-tt**) and Global Title Translation (**ent/chg/dlt/rtrv-gtt**) commands. All data previously provisioned with these commands is maintained.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (**s-**) and the private and spare point code subtype prefix (**ps-**). All of the point code types support the private (internal) point code subtype prefix (**p-**).

When the Flexible GTT Load Sharing feature and the Intermediate GTT Load Sharing feature are on, multiple relationships can be defined among set of destination point codes in the MRN table, which already exists in the EAGLE 5 ISS. The relationship used in a particular translation is based on the GTA digits used for translation. The MRN set and the post-translation PC create a key that is used to perform lookups in the MRN table. The lookup results in a set of alternate PCs, one of which is selected, based on PC relative cost, to route the MSU in the most cost effective way.

When the Flexible GTT Load Sharing feature is enabled, multiple relationships can be defined among a set of PC/SSNs in the existing MAP table. The relationship used in a particular translation is based on the GTA digits used for translation.

When the Origin-based SCCP Routing feature is turned on, the CdPA GTA, CgPA GTA, CgPA PC, CgPA SSN, and OPC entries can be provisioned. When provisioning, the following rules apply:

- The Advanced CdPA GTA entry can associate with CgPA GTA set, CgPA PC set, or SELID and OPC set.
- The CgPA GTA, CgPA PC, or OPC entry can associate with the CgPA SSN set.
- The CgPA SSN entry cannot associate with any other GTT set.
- The Advanced CdPA GTA entry may contain SELID, which is (together with the CgPA information) derived from incoming MSU to search the Selector table again for the CgPA GTA or CgPA PC Set.

When the Origin-based SCCP Routing feature is enabled, the GTA and EGTA can be used for the CgPA translation as well as the CdPA GTA translation.

A loopset consists of a set of point codes that form a routing loop in the network. If the SCCP Loop Detection feature is enabled, then the loopset can be associated with or disassociated from specified translation entries. Loopsets that are associated with translation entries are checked during intermediate and final GTT traffic routing. If a loop exists, then the system can be notified with or without discarding the associated traffic.

The maximum length of the resulting GTA string must not exceed 21 digits when translation is complete.

Output

```

ent -
gta:gttsn=tblx:xlata=dpcssn:ri=ssn:pc=1-1-1:gta=1234567890:egta=22
34567890:ssn=10:mapset=23
    tekelecstp 06-05-27 11:43:27 EST  EAGLE 35.0.0
    ENT-GTA: MASP A - COMPLTD
;

ent -
gta:gttsn=setans004:gta=981348:xlata=dpc:pc=12-1-11:ri=gt:cggtmod=
yes
    tekelecstp 08-02-24 12:09:18 EST  EAGLE 38.0.0
    ENT-GTA: MASP A - COMPLTD
;

```

ent-gtcnv

Enter Global Title Conversion

Use this command to provision the Default Global Title Conversion table. The table is used during conversion for MTP-routed cross network SCCP UDT, UDTs and SCCP Management messages. It is also used during conversion for GT routed messages when a matching entry exists in the Global Title address table but the NGTI value is not provisioned.

Keyword: ent-gtcnv

Related Commands: chg-gtcnv, dlt-gtcnv, rtrv-gtcnv

Command Class: Database Administration

Parameters

:dir= (mandatory)

Direction of conversion.

Range: atoi, itoa, both

atoi — ANSI to ITU conversion

itoa — ITU to ANSI conversion

both — conversion in both directions

:gtixlat= (mandatory)

Global Title Indicator conversion. This parameter is expressed in the form of the ANSI GTI and the ITU GTI.

Range: 22, 24

22 — Converts an incoming ANSI GTI 2 to an outgoing ITU GTI 2 or an incoming ITU GTI 2 to an outgoing ANSI GTI 2

24 — Converts an incoming ANSI GTI 2 to an outgoing ITU GTI 4 or an incoming ITU GTI 4 to an outgoing ANSI GTI 2

:tta= (mandatory)

ANSI translation type.

Range: 0-255 *

:tti= (mandatory)

ITU translation type.

Range: 0-255 *

:nai= (optional)

Nature of address indicator. This parameter is mandatory when **gtixlat=24** is specified, and not specified when **gtixlat=22** is specified.

Range: 0-63 *

Default: Not set

:np= (optional)

Numbering plan. This parameter is mandatory when **gtixlat=24** is specified, and not specified when **gtixlat=22** is specified.

Range: 0-15 *

Default: Not set

:npdd= (optional)

New prefix digits to be deleted. This parameter specifies the number of new prefix digits to be deleted. These digits will be replaced with the new prefix digits string (**npds**).

Range: 0-21

Default: 0

:npds= (optional)

New prefix digits string. This parameter specifies the new prefix digits string that will replace the received prefix digits string.

Range: 1-21 digits

If the Hex Digit Support for GTT feature is not enabled and on, the range is 1 - 21 decimal digits; valid digits are **0-9**.

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are **0-9, a-f, A-F**.

Default: No digits

:nsdd= (optional)

New suffix digits to be deleted. This parameter identifies the new suffix digits to be deleted that will replace the received suffix digits to be deleted.

Range: 0-21

Default: 0

:nsds= (optional)

New suffix digits string. This parameter specifies the new suffix digits string that will replace the received suffix digits string.

Range: 1-21 digits

If the Hex Digit Support for GTT feature is not enabled and on, the range is 1 - 21 decimal digits; valid digits are **0-9**.

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are **0-9, a-f, A-F**.

Default: No digits

Example

The following example assigns an entry used for ANSI to ITU conversion where the conversion is from GTI 2 to GTI 2.

ent-gtcnv:dir=atoi:gtixlat=22:tta=10:tti=5

The following example assigns an entry used for ANSI to ITU conversion where the conversion is from GTI 2 to GTI 4. The nsdd parameter specifies that the last 3 digits are to be removed from the end of the address digits, and the nsds parameter specifies that the digits 123 are to be appended to the end of the remaining address digits.

ent -

gtcnv:dir=atoi:gtixlat=24:tta=11:tti=7:nai=8:np=6:nsdd=3:nsds=123

The following example assigns an entry used for ITU to ANSI conversion where the conversion is from GTI 2 to GTI 2. The npdd parameter specifies that the first 3 digits are to be deleted from the beginning of the address digits, and the npds parameter specifies that the digits 407 should be appended to the beginning of the remaining address digits.

ent-gtcnv:dir=itoe:gtixlat=22:tta=11:tti=7:npdd=3:npds=407

The following example assigns an entry used for ITU to ANSI conversion where the conversion is from GTI 2 to GTI 4. The nsds Parameter specifies that the digits 45667 are to be appended to the end of the address digits.

ent-gtcnv:dir=itoe:gtixlat=24:tta=11:tti=7:nai=8:np=6:nsds=45667

The following example assigns an entry used for ANSI/ITU conversion in both directions where the conversion is from GTI 2 to GTI 2.

ent-gtcnv:dir=both:gtixlat=22:tta=11:tti=7

The following example assigns an entry used for ANSI/ITU conversion where an incoming ANSI GTI 2 is converted to an outgoing ITU GTI 4 or an incoming ITU GTI 4 to an outgoing ANSI GTI 2.

ent-gtcnv:dir=both:gtixlat=24:tta=12:tti=9:nai=6:np=4

The following example assigns a default entry for ANSI to ITU conversion where the conversion is from GTI 2 to GTI 2.

ent-gtcnv:dir=atoi:gtixlat=24:tta=*:tti=4:nai=6:np=5

The following example assigns a default entry for ITU to ANSI where the conversion is from GTI 2 to GTI 4. The npds parameter specifies that the digits 919 are to be appended to the beginning of the address digits.

ent-gtcnv:dir=itoe:gtixlat=24:tta=17:tti=*:nai=*:np=*:npds=919

The following example specifies hexadecimal digits for the npds parameter.

ent-gtcnv:dir=atoi:gtixlat=22:tta=*:tti=4:npdd=3:npds=abcdef0123456789

Dependencies

The ANSI-ITU-China SCCP Conversion feature must be turned on before this command can be entered.

If **gtixlat=22** is specified, the **nai** and **np** parameters cannot be specified.

If **gtixlat=24** is specified, the **nai** and **np** parameters must be specified.

When **dir=both** is specified, no asterisk (*) parameter values can be specified.

When **dir=atoi** is specified, the asterisk parameter value (*) can be specified only for the **tta** parameter.

When **dir=itoe** is specified, the asterisk parameter value (*) must be specified for the **tti**, **np**, and **nai** parameters.

The specified **dir**, **tta**, **tti**, **np**, and **nai** parameter combination cannot already exist in the database.

The **nsdd** and **nsds** parameters cannot be used in the same command with the **npdd** and **npds** parameters.

The Default Global Title Conversion table can contain a maximum of 1000 entries.

The Hex Digit Support for GTT feature must be enabled and on before hexadecimal digits can be specified for the **npds** and **nsds** parameters.

Notes

The use of asterisks (wildcards) is allowed only once for each direction of ANSI to ITU and ITU to ANSI. This provides a configurable default.

In the conversion direction of ANSI to ITU, an asterisk can be specified only for the ANSI **tta** parameter.

In the conversion direction of ITU to ANSI, the asterisk value must be specified for the **itu tti**, **np**, and **nai** parameters.

Asterisks are not allowed when conversion is in both directions (**dir=both**).

The suffix digit manipulation parameters **nsdd** and **nsds** cannot be specified in the same command with the prefix digit manipulation parameters **npdd** and **npds** parameters. The **npdd** and **nsdd** parameters specify how many digits to delete, if any, from the beginning or end respectively of the Global Title address digits. The **npds** and **nsds** parameters specify what digits, if any, to append to the beginning or end respectively of the Global Title address digits.

The **gtixlat** parameter is expressed in the form of the ANSI GTI and the ITU GTI. The **gtixlat** parameter is used to indicate the conversion of the Global Title Indicator between the ANSI and ITU standards. For example: A **gtixlat** value of **24** converts an incoming ANSI GTI 2 to an outgoing ITU GTI 4 or an incoming ITU GTI 4 to an outgoing ANSI GTI 2.

Output

```
ent-gtcnv:dir=atoi:gtixlat=22:tta=10:tti=5
rlghncxa03w 04-01-07 11:43:07 EST EAGLE 31.3.0
ENT-GTCNV: MASP A - COMPLTD
;
```

ent-gtt

Enter Global Title Translation

Use this command to add the routing object, DPC, and subsystem number for messages requiring global title translation. The translation is performed on the basis of the global title address (GTA) and translation type (TT) for each SS7 SCCP message directed to the STP's self-identity DPC or CPC with a routing indicator of 0, indicating a GTT is required.

If the EGTT (Enhanced Global Title Translation) feature is turned on in the system, the system will no longer accept **-gtt** (Global Title Translation) and **-tt** (Translation Type) commands. Refer to the new command sets that replace the **-gtt** and **-tt** commands:

- GTT Selector commands (**ent/chg/dlt/rtrv-gttsel**)
- GTT Set commands (**ent/dlt/rtrv-gttset**)
- GTA commands (**ent/chg/dlt/rtrv-gta**).

See the "Notes" section of this command description for functions provided when various controlled features are turned on.

Keyword: **ent-gtt**

Related Commands: **chg-gtt**, **dlt-gtt**, **rtrv-gtt**

Command Class: Database Administration

Parameters

At least one of these parameters must be specified: **ttn**, **type/typea/typei/typen/typen24**.

NOTE: See **"Point Code Formats and Conversion"** for a detailed description of point code formats, rules for specification, and examples.

:gta= (mandatory)

Global title address. This parameter specifies the beginning of a range of global title digits.

Range: 1-21 digits

If the Hex Digit Support for GTT feature is not enabled and on, the range is 1 - 21 decimal digits; valid digits are **0-9**.

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are **0-9, a-f, A-F**.

:pc= (mandatory)

ANSI point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*). The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: pca

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:pc/pca/pci/pcn/pcn24= (mandatory)

Point code.

:pci= (mandatory)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:pcn= (mandatory)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfnti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:pcn24= (mandatory)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p**-
msa—**000–255**
ssa—**000–255**
sp—**000–255**

:ri= (mandatory)

Route indicator. This parameter specifies whether a subsequent global title translation is required.

Range: **gt, ssn**

gt— Subsequent translation is required.

ssn— Subsequent translation is not required.

:xlat= (mandatory)

Translate indicator. This parameter specifies the type of global title translation to be performed.

Range: **dpc, dpcssn, dpcngt**

:cggtmod= (optional)

Calling party GT modification indicator. This parameter specifies whether calling party global title modification is required.

Range: **yes, no**

Default: **no**

:egta= (optional)

Global title end address. This parameter specifies the end of a range of global title digits.

Range: 1-21 digits

If the Hex Digit Support for GTT feature is not enabled and on, the range is 1 - 21 decimal digits; valid digits are **0-9**.

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are **0-9, a-f, A-F**.

Default: **egta** same as **gta**

:force= (optional)

When a final GTT is specified, the DPC and subsystem number must be configured in the mated application table (**xlat=dpc** and **ri=ssn**). The **force=yes** parameter allows you to override this restriction.

Range: **yes, no**

Default: **no**

:loopset= (optional)

SCCP loopset name. This parameter associates a translation set with a loopset.

Range: *ayyyyyyy*, **none**

1 alphabetic character followed by up to 7 alphanumeric characters.

none—There is no association between the translation set and any loopset.

Default: **none**

:mapset= (optional)

MAP set ID.

Range: **1-36000 dflt**

dflt—Default MAP set

:mrnset= (optional)

MRN set ID.

Range: **1-3000 none, dflt**

dflt—Default MRN Set ID

none—Removes the specified MRN Set ID from the MRN table

:ngt= (optional)

New global title. This parameter specifies the type of global title translation that will replace the received global title.

If the **xlat=dpcngt** parameter is specified, the **ngt** parameter must be specified. If the **xlat=dpcngt** parameter is not specified, the **ngt** parameter cannot be specified.

Range: 000-255

:ngti= (optional)

New global title indicator code. When the ANSI-ITU-China SCCP Conversion and AMGTT features are ON and the Translated Point Code is of a different network type, the **ngti** parameter specifies whether the new GTI translation format is GTI type 2 or GTI type 4.

Range: 2, 4

:nnai= (optional)

New nature of address indicator. This parameter specifies the nature of address indicator that will replace the received nature of address indicator.

Range: 0-127

Default: 0xFFFF

:nnp= (optional)

New numbering plan. This parameter specifies the numbering plan that will replace the received numbering plan.

Range: 0-15

Default: 0xFFFF

:npdd= (optional)

New prefix digits to be deleted. This parameter specifies the new prefix digits to be deleted that will replace the received prefix digits to be deleted.

Range: 0-21

Default: 0

:npds= (optional)

New prefix digits string. This parameter specifies the new prefix digits that will replace the received prefix digits string

Range: 1-21 digits

If the Hex Digit Support for GTT feature is not enabled and on, the range is 1 - 21 decimal digits; valid digits are **0-9**.

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are **0-9, a-f, A-F**.

Default: No digits

:nsdd= (optional)

New suffix digits to be deleted. This parameter specifies the new suffix digits to be deleted that will replace the received suffix digits to be deleted.

Range: 0-21

Default: 0

:nsds= (optional)

New suffix digits string. This parameter specifies the new suffix digits string that will replace the received suffix digits string.

Range: 1-21 digits

If the Hex Digit Support for GTT feature is not enabled and on, the range is 1 - 21 decimal digits; valid digits are **0-9**.

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are **0-9, a-f, A-F**.

Default: No digits

:ssn= (optional)

Subsystem number. This parameter specifies the subsystem address that will receive the message. If the **xlat=dpcngt** parameter is specified, the **ssn** parameter must be specified. If the **xlat=dpcngt** parameter is not specified, the **ssn** parameter cannot be specified.

Range: 002-255

:ttn= (optional)

Translation type name. The name is of local significance only, and is related to the translation type.

Range: ayyyyyy

1 alphabetic character followed by up to 7 alphanumeric characters

Default: No translation name is given

:type/typea/typei/typen/typen24= (optional)

Translation type identifies the translation type and network type. This parameter is the decimal representation of the 1-byte field used in SS7.

The **type** and **typea** parameters specify an ANSI network.

The **typei** parameter specifies an ITU-international network.

The **typen** parameter specifies an ITU-national network.

The **typen24** parameter specifies a 24-bit ITU-national network.

A translation type numeric value may be entered as ANSI type (**type** or **typea**) and also as an ITU type (**typei** or **typen**). However, they are separate entities.

The point code domain translation types for GTT are handled by the EAGLE 5 ISS protocol processing as either ANSI or ITU; therefore, ITU applies to ITU-I, ITU-I Spare, ITU-N, and ITU-N Spare. ITU-I includes ITU-I Spare, and ITU-N includes ITU-N Spare.

Range: 000-255

Default: No translation type is specified

Example

The lines in the following examples are wrapped for readability:

ent -

gtt:type=3:gta=9195551212:egta=9195552000:xlat=dpcssn:ri=ssn:pc=001-255-255:ssn=255

ent -

gtt:ttn=lidb1:gta=9105551212:egta=9105554000:xlat=dpcngt:ri=gt:pc=001-255-254:ngt=4

ent-gtt:ttn=c800:gta=9195554321:xlat=dpc:ri=gt:pc=001-255-253

ent-gtt:type=4:gta=919460:xlat=dpc:ri=ssn:pc=001-255-252

ent-gtt:type=4:gta=919461:xlat=dpcssn:ri=gt:ssn=254

ent -

gtt:typea=210:ttn=test:gta=100000:egta=199999:pca=1-1-1:ssn=123:xlat=dpcngt:ri=gt:npdd=2:nnp=3:nnai=120

ent -

gtt:type=100:ttn=test2:gta=123:egta=321:pcn=222:ssn=10:xlat=dpcngt:ri=gt:npds=999:nnai=100

ent -

gtt:pcn24=8-8-8:gta=919833:xlat=dpcssn:ri=ssn:ssn=20:typen24=4

```

ent-
gtt:typea=100:ttn=test2:gta=123:egta=321:pci=2-2-2:ssn=10:xlat=dp
cngt:ri=gt :nsdd=3:nsds=567:nnai=62:nnp=4:ngti=4
ent-gtt:xlat=dpcssn:ssn=10:ri=gt:pci=s-1-21-1:gta=123456:typei=3
ent-gtt:xlat=dpcssn:ssn=10:ri=gt:pcn=s-124:gta=123456:typen=3
ent-gtt:xlat=dpcssn:ssn=10:ri=gt:pcn=s-125-aa:gta=123456:typen=3

ent-gtt:type=1:xlat=dpc:ri=gt:pc=1-1-1:
gta=1234567890:egta=2234567890:mrnset=23
ent-gtt:type=1:xlat=dpcngt:ri=gt:pc=1-1-2:
gta=2345678901:egta=3456789012:mrnset=54
ent-gtt:type=1:xlat=dpcngt:ri=gt:pc=1-1-3:
gta=3456789013:egta=3456789019:mrnset=dflt
ent-gtt:type=1:xlat=dpcngt:ri=gt:pc=1-1-3:
gta=3456789012:egta=4567890123:mrnset=none

ent-
gtt:type=1:xlat=dpcssn:ri=ssn:pc=1-1-1:gta=1234567890:egta=223456
7890:ssn=10:mapset=23

ent-
gtt:type=1:xlat=dpcssn:ri=ssn:pc=2-2-2:gta=2345678911:egta=345678
9022:ssn=25:mapset=dflt

```

The following example specifies hexadecimal digits for the gta, egta, and npds parameters.

```

ent-
gtt:ttt=set1:xlat=dpcssn:ri=ssn:ssn=10:pc=1-1-1:gta=abcd:egta=abc
e:npds=fab

```

The following example specifies that calling party GT modification is required.

```

ent-gtt:xlat=dpc:pc=1-1-1:ri=gt:gta=981234:type=4:cggmod=yes

```

Dependencies

The EGTT feature must be turned on before this command can be entered.

The end address must be greater than or equal to the start address.

The **pcn** parameter format must match the format that was assigned with the **chg-stpopts:npdcmnti** parameter.

If the **xlat=dpcngt** parameter is specified, the **ngt** parameter must be specified. If the **xlat** parameter value is not **dpcngt**, the **ngt** parameter cannot be specified.

Point code entries must be full point codes. Partial point codes are not allowed.

The start global title address length must be equal to the number of digits specified by the given translation type. If the VGTT (variable length GTT) feature is turned on, then up to 10 GTA lengths per translation type can be provisioned. When the **ent-gtt** command is entered to create entries, the software keeps track of the lengths and allows only 10 different lengths. The global title address specified for the translation type must then have the same number of digits as an existing GTA.

If the end global title address is specified, its length must equal the length of the start global title address.

The maximum length of the resulting GTA string must not exceed 21 digits when translation is complete.

The AMGTT feature must be on before the **nnp**, **nnai**, **nsdd**, **nsds**, **npdd**, and **npds** parameters can be specified.

If the **npdd** and **npds** parameters are specified, the **nsdd** and **nsds** parameters cannot be specified.

If the translation type is specified, then it must already exist and cannot be an alias.

If the translation type is ANSI (the **type** or **typea** parameter), the **pc** parameter type must be ANSI (the **pc** or **pca** parameter). If the translation type is an ITU type (the **typei**, **typen**, or **typen24** parameter), the **pc** parameter type must be an ITU type (the **pci**, **pcn**, or **pcn24** parameter).

The ANSI-ITU-China SCCP Conversion feature must be on before a translated point code and a translation type in different network types can be specified.

The **ngti** parameter can be specified only when the translated PC and the translation type are in different domains, or are both in the ITU domain.

If the **ngti=4** parameter is specified, the **nnp** and **nnai** parameters must be specified.

If the **ngti=4** parameter is specified, the translated PC cannot be ANSI. For ANSI PCs, the GTI value must be 2.

If the **ngti=2** parameter is specified, the **nnp** and **nnai** parameters cannot be specified.

The range, as specified by the start and end global title addresses, cannot exist in the global title translation data for the specified translation type. Each range may be contained completely within a previously defined range, in which case splitting is performed. However, if the ranges overlap, splitting cannot occur, the command is rejected, and a list of overlapped global title addresses is displayed. An example follows that shows what happens when the user attempts to enter a global title address range (such as 8005550000 to 8005559999) that overlaps an existing range. The overlapping links must match. If they do not, error message E2401 is generated displaying the list of overlapped global title addresses:

```
The following GTA ranges overlap the input GTA range
START GTA          END GTA
8005550000          8005551999
8005552000          8005553999
8005554000          8005555999
ENT-GTT: MASP A - Command Aborted
```

If a final GTT is specified with the **ri=ssn** parameter and the **xlat=dpc** parameter, and if the value of the **force** parameter is not **yes**, the point code must be configured in the Remote Point Code/MAP Table.

The **xlat=dpcssn** parameter must be specified before the **ssn** parameter can be specified.

If the **xlat=dpcssn** parameter is specified, then the **ssn** parameter must be specified.

If the ANSI-ITU-China SCCP Conversion feature is not on, and the **xlat=dpcngt** parameter is specified, then a value for the **ngt** parameter must be specified, and the **ri=gt** parameter must be specified. If the value for the **xlat** parameter is not **dpcngt**, then a value for the **ngt** parameter cannot be specified.

If the ANSI-ITU-China SCCP Conversion feature is turned on, and the **ngt** parameter is specified, then the **ri=gt** parameter must be specified.

If the ANSI-ITU-China SCCP Conversion feature is not on, the **ngt** parameter can be specified only if the **xlat=dpcngt** parameter is specified.

If the ANSI-ITU-China SCCP Conversion feature is turned on, the **ngt** parameter can be specified only if the **xlat=dpc** or the **xlat=dpcngt** parameter is specified.

Table 5-43 shows the valid combinations for the **xlat**, **ri**, **ssn**, and **ngt** parameters. All other combinations are rejected.

Table 5-43. Valid **ent-gtt** Routing Parameter Combinations

XLAT Value	RI Value	Routing Action	SSN Value	NGT Value
DPC	GT	Translate DPC only and route on GT	Cannot specify	Cannot specify unless ANSI-ITU-China SCCP Conversion is enabled
DPC	SSN	Translate DPC only and route on SSN	Cannot specify	Cannot specify
DPCSSN	GT	Translate DPC and SSN and route on GT	Must specify	Cannot specify
DPCSSN	SSN	Translate DPC and SSN and route on SSN	Must specify	Cannot specify
DPCNGT	GT	Translate DPC , new translation type (TT), and route on GT	Cannot specify	Must specify

If the **ri=ssn** parameter is specified, the **mrnset** parameter cannot be specified.

If the Flexible GTT Load Sharing feature is enabled, the specified PC must already exist in the specified MRN set.

The specified MRN set must already exist in the MRN table.

The Flexible GTT Load Sharing feature must be enabled before the **mrnset** parameter can be specified.

If the **ri=gt** parameter is specified, then the **mrnset** parameter must be specified.

If the **ri=gt** parameter is specified, the **mapset** parameter cannot be specified.

The Flexible GTT Load Sharing feature must be enabled before the **mapset** parameter can be specified.

The **mapset** parameter can only be specified if the Flexible GTT Load Sharing feature is enabled, and the **ri=ssn** parameter is specified. If the **ri=ssn** parameter is specified, the **mapset** parameter must be specified. If the **ri=gt** parameter is specified, the **mapset** parameter cannot be specified.

The specified PC and SSN must exist in the specified MAP set.

At least one entry must be provisioned in the specified MAP set in the MAP table.

If the **xlat=dpc** parameter is specified, and the **force** parameter is not specified as **yes**, the specified PC and MAP set must exist in the MAP table.

The Hex Digit Support for GTT feature must be enabled and on before hexadecimal digits can be specified for the **gta**, **egta**, **npds** and **nsds** parameters.

The SCCP Loop Detection feature must be enabled before the **loopset** parameter can be specified.

The value of the **loopset** parameter must already exist in the database.

The **tt** or the **tnn** parameter must be specified.

The value of the **ssn** or **ri** parameter cannot be a wildcard (*).

The value of the **pc/pca/pci/pcn/pcn24** parameter must be a valid ANSI point code.

The SCCP Loop Detection feature must be enabled before the **loopset** parameter can be specified.

The value of the **loopset** parameter must exist in the Loopset table.

If a final GTT is specified, the **ri=ssn**, **xlat=dpcssn**, and the **force** parameter is not specified as **yes**, the DPC-SSN must be populated in the SCCP Application entity set (Remote Point Code / Mated Application Table).

If the value of the **pc/pca/pci/pcn/pcn24** parameter is the True Point Code, then the **xlat=dpcssn** parameter and the **ri=ssn** parameter must be specified.

If the **ssn** parameter is specified, and if the value of the **pc/pca/pci/pcn/pcn24** parameter is the True Point Code, then the value of the **ssn** parameter must exist in the SS-APPL table.

The value of the **pc/pca/pci/pcn/pcn24** parameter must exist as a destination in the ordered route entity set or must reside in a cluster (ANSI only) that exists as a destination in the ordered route entity set (for global title routing).

No more than 10 **gta** lengths supported per **tt** for VGTT.

The value of the **tt** parameter must not be defined as an alias.

If both the translation type (**tt**) and translation type name (**ttn**) are specified, the translation type name (**ttn**) must match that of the specified translation type (**tt**).

If an International Translation Type (**TYPEI**) is specified, the Translation Type (**tt**) must exist in the STP's active database.

If a national Translation Type (**TYPEN**) is specified, the Translation Type (**tt**) must exist in the STP's active database.

If the **tt** parameter is not specified, then the value of the **ttn** parameter must match the value of a **tt** parameter in the STP database.

If the **xlat=dpcngt** parameter is specified, then the **ngtt** parameter must be specified.

If the **xlat=dpcngt** parameter is specified, then the **ri=gt** parameter must be specified.

The GTT table cannot be full.

The value specified for the **pc** parameter cannot be associated with a proxy point code.

The AMGTT feature or the AMGTT CgPA Upgrade feature must be turned on before the **cggmod** parameter can be specified.

One or more point codes in the command will exceed the maximum number of entries in the MAP table.

Notes

The routing indicator provides routing instructions to the receiving signaling point. If the routing indicator specifies global title, global title translation then needs to be performed at another signaling point.

Up to 200,00 entries are allowed for an individual translation type if all SCCP cards are TSM cards or DSM cards.

The ANSI point code **0-0-0** and the ITU-I point code **0-000-0** are not valid point codes.

The EAGLE 5 ISS does not require a MAP table entry to be configured prior to provisioning a GTT entry. The EAGLE 5 ISS assumes that the GTT entry is for a solitary point code/subsystem and automatically creates a MAP entry for the point code/subsystem.

The suffix digit manipulation parameters **nsdd** and **nsds** are available only with the AMGTT feature on. The **nsdd** and **nsds** suffix digit manipulation parameters cannot be specified together with the **npdd** and **npds** prefix digit manipulations parameters in the command.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (**s-**) and the private and spare point code subtype prefix (**ps-**). All of the point code types support the private (internal) point code subtype prefix (**p-**).

When the Flexible GTT Load Sharing feature and the Intermediate GTT Load Sharing feature are on, multiple relationships can be defined among a set of destination point codes in the MRN table that exists in the EAGLE 5 ISS. The relationship used in a particular translation is based on the GTA digits used for translation. The MRN set and the post-translation PC creates a key that is used to perform lookups in the MRN table. The lookup results in a set of alternate PCs, one of which is selected, based on the PCs relative cost, to route the MSU in the most cost-effective way.

When the FFGTTLS feature is turned on, multiple relationships can be defined among set of PC/SSNs in the existing MAP table. The relationship used in a particular translation is based on the GTA digits used for translation.

With the ANSI-ITU-China SCCP Conversion feature turned on, the Translated Point Code (**pc**, **pca**, **pci**, **pcn**, and **pcn24** parameters) can be of a different network type than the Translation Type (**type** parameter).

When the ANSI-ITU-China SCCP Conversion and AMGTT features are ON and the Translated Point Code is of a different network type, the **ngti** parameter specifies whether the new GTI translation format is GTI type 2 or GTI type 4.

If the AMGTT feature is turned off, then the **ngti** parameter cannot be specified, and the Default GT Conversion Table is used for conversion. If the ANSI-ITU-China SCCP Conversion feature is turned off, then mixed network types are not allowed.

A loopset consists of a set of point codes that form a routing loop in the network. If the SCCP Loop Detection feature is enabled, then the loopset can be associated with or disassociated from specified translation entries. Loopsets that are associated with translation entries are checked during intermediate and final GTT traffic routing. If a loop exists, then the system can be notified with or without discarding the associated traffic.

Output

```
ent-gtt:xlat=dpc:pc=12-1-11:ri=gt:gta=981234:type=4:cggmod=yes
tekelecstp 08-02-24 12:06:11 EST EAGLE 38.0.0
ENT-GTT: MASP A - COMPLTD
;
```

ent-gtttsel

Enter GTT Selectors

Use this command to assign applicable global title selectors to a GTT set (**gttsn**) for enhanced global title translations.

Keyword: ent-gtttsel

Related Commands: chg-gtttsel, dlt-gtttsel, rtrv-gtttsel

Command Class: Database Administration

Parameters

:gti/gtia/gtii/gtin/gtin24= (mandatory)

Global title indicator. For all EGTT selector commands, the domain is defined as **gti** and **gtia** (ANSI), **gtii** (ITU international), **gtin** (ITU national), and **gtin24** (24-bit ITU national).

For the selector commands, **gti** and **gtia** are equivalent; **gtii** and **gtin/gtin24** are mutually exclusive because the EGTT database does not distinguish between ITU national and ITU international translations. This means that while ITU-I and ITU-N selectors are stored separately, two separate ITU-I and ITU-N entries with the same selector values cannot exist. For example, if an entry with **gtii=2** and **tt=4** already exists, an entry of **gtin=2** and **tt=4** cannot be entered.

Range: 2, 4

Supported value for ANSI: **gti=2** and **gtia=2**

Supported values for ITU: **gtii=2, 4** and **gtin/gtin24=2, 4**

- :tt=** (mandatory)
Translation type.
Range: **0-255**
- :cdgtasn=** (optional)
CdPA GTA GTT set name.
Range: ayyyyyyyy
1 leading alphabetic and up to 8 following alphanumeric characters.
- :cggtasn=** (optional)
CgPA GTA GTT set name.
Range: ayyyyyyyy
1 leading alphabetic and up to 8 following alphanumeric characters.
- :cgpcsn=** (optional)
CgPA PC GTT set name.
Range: ayyyyyyyy
1 leading alphabetic and up to 8 following alphanumeric characters.
- :cgssn=** (optional)
CgPA subsystem number.
Range: **0-255**
- :gttsn=** (optional)
GTT set name. A GTT set is an entity to which global title addresses and selectors are assigned. The **gttsn** parameter can only be specified if the Origin-based SCCP Routing feature is off.
Range: ayyyyyyyy
1 leading alphabetic and up to 8 following alphanumeric characters.
- :nai=** (optional)
Nature of address indicator. The nature of address indicator can be specified by a mnemonic value (**nai** parameter) or an explicit numeric value (**naiv** parameter). Either the **nai** parameter or the **naiv** parameter, but not both, can be specified. Table A-5 shows the mapping between the **naiv** and the **nai** parameter values.
Range: **sub, rsvd, natl, intl, dflt**
- :naiv=** (optional)
Nature of address indicator value. The nature of address indicator can be specified by a mnemonic value (**nai** parameter) or an explicit numeric value (**naiv** parameter). Either the **nai** parameter or the **naiv** parameter, but not both, can be specified. Table A-5 shows the mapping between the **naiv** and the **nai** parameter values.
Range: **0-127**
- :np=** (optional)
Numbering plan. The numbering plan can be specified by a mnemonic value (**np** parameter) or an explicit numeric value (**npv** parameter). Either the **np** parameter or the **npv** parameter, but not both, can be specified. Table A-6 shows the mapping between the **npv** and the **np** parameter values.
Range: **e164, generic, x121, f69, e210, e212, e214, private, dflt**
- :npv=** (optional)
Numbering plan value. The numbering plan can be specified by a mnemonic value (**np** parameter) or an explicit numeric value (**npv** parameter). Either the **np** parameter or the **npv** parameter, but not both, can be specified. Table A-6 shows the mapping between the **npv** and the **np** parameter values.
Range: **0-15**

:selid= (optional)
 Selector ID.
 Range: 0-65534

Example

```
ent-gtttsel:gtia=2:tt=9:gttsn=lidb
ent-gtttsel:gtia=2:tt=10:gttsn=t800
ent-gtttsel:gtia=2:tt=253:gttsn=setans253
ent-gtttsel:gtii=4:tt=0:np=e164:nai=intl:gttsn=setint000
ent-gtttsel:gtii=2:tt=0:gttsn=setint000
ent-gtttsel:gtin=4:tt=9:np=e214:nai=natl:gttsn=imsi
ent-gtttsel:gtii=4:tt=0:np=e164:nai=sub:gttsn=setint000

ent-
gttsel:gtia=2:tt=20:cdgtasn=setcdgta:cggtasn=setcggtta:cgssn=10:selid=0

ent-
gttsel:gtia=2:tt=21:cgpcsn=setcgpc:cgssn=setcggtta:cgssn=20:selid=1

ent-gtttsel:gtii=2:tt=40:cdgtasn=setcdgta:cgpcsn=setcgpc:cgssn=12
ent-gtttsel:gtii=2:tt=41:cgpcsn=setcgpc:cgssn=255:selid=65534
ent-gtttsel:gtin=4:tt=60:npv=5:naiv=5:cdgtasn=setcdgta
ent-gtttsel:gtin=4:tt=60:npv=5:naiv=6:cgpcsn=setcgpc:cgssn=112
```

Dependencies

The EGTT feature must be turned on before this command can be entered.

The **np** and **npv** parameters cannot be specified in the same command.

The **nai** and **naiv** parameters cannot be specified in the same command.

The **gtia=4**, **gti/gtia/gtii/gtin/gtin24=1**, and **gti/gtia/gtii/gtin/gtin24=3** parameters cannot be specified.

If the **gti/gtia/gtii/gtin/gtin24=2** parameter is specified, the **np/npv** and **nai/naiv** parameter combinations cannot be specified.

If the **gtii/gtin/gtin24=4** parameter is specified, an **np(v)** and **nai(v)** parameter combination must be specified. These parameters can be specified in any combination: **np** and **naiv**, **npv** and **nai**, **np** and **nai**, or **npv** and **naiv**.

For existing TTs with **gtii/gtin/gtin24=4**, the domain of the new entry must match the existing domain.

The **gttsn=none** parameter cannot be specified.

An entry cannot already exist that matches the **gti**, **tt**, and **np(v)** and **nai(v)** parameter combination for the specified CdPA selector.

An entry cannot already exist that matches the **gtii**, **tt**, and **np(v)** and **nai(v)** parameter combination for the specified CdPA selector.

An entry cannot already exist that matches the specified **gtin**, **tt**, and **np(v)** and **nai(v)** combination of parameters for the specified CdPA selector.

The **gttsn** value cannot already exist for the **gtin24**, **tt**, **np/npv/nai/naiv** parameter combination for the specified CdPA selector.

The network domain of the specified GTT selector must match the domain of the GTT set specified by the **cdgtasn** parameter or **gttsn** parameter, unless the network domain (**netdom** parameter) of the existing GTT set has a value of **cross**.

At least one of the **cdgtasn**, **cggtasn**, or **cgpcsn** parameters must be specified.

If the **cgssn** and/or the **selid** parameter is specified, the **cggtasn** or the **cgpcsn** parameter must be specified.

The GTT selector table must not have more than 5 **nai** entries per **tt-np** combination.

The Origin-based SCCP Routing feature must be enabled before the **cggtasn**, **cgpcsn**, **cgssn**, **selid**, or **cdgtasn** parameters can be specified.

The **cdgtasn** or **cgpcsn** parameter value cannot already exist for the specified **gtin24**, **tt**, **np/npv/nai/naiv** parameter combination.

An entry cannot already exist that matches the **gtii**, **tt**, and **np(v)** and **nai(v)** parameter combination for the specified CgPA selector.

An entry cannot already exist that matches the specified **gti**, **tt**, and **np(v)** and **nai(v)** combination of parameters for the specified CgPA selector.

An entry cannot already exist that matches the **gtin**, **tt**, and **np(v)** and **nai(v)** parameter combination for the specified CgPA selector.

The SSNSELID Table cannot contain more than 10,000 entries.

The GTTSET network domain for the **cggtasn** and **cgpcsn** parameters must match the domain indicated by the **gti** parameter.

The set types for the **cggtasn** and **cgpcsn** parameters must match the set type of the corresponding entry in the GTT set table. For example, the **cggtasn** parameter should have a set type of **cggt**, and the **cgpcsn** parameter should have a set type of **cgpc**.

The GTT set specified by the **cggtasn** and **cgpcsn** parameters must exist in the database before it is assigned to a GTT selector.

The **cggtasn** and **cgpcsn** parameters cannot be specified in the same command.

The value specified for the **cdgtasn** or **gttsn** parameter must match the name of an existing GTT set.

The GTT set specified by the **cdgtasn** or **gttsn** parameter must have a set type of **cdgt** (see the **ent-gttset** command).

Notes

When the EGTT feature is turned on, the GTT Selector (**ent/chg/dlt/rtrv-gttset**), GTT Set (**ent/dlt/rtrv-gttset**), and GTA (**ent/chg/dlt/rtrv-gta**) commands replace the Translation Type (**ent/dlt/rtrv-tt**) and Global Title Translation (**ent/chg/dlt/rtrv-gtt**) commands. All data previously provisioned with these commands is maintained.

For **gtii/gtin=4**, although DFLT may appear in the **rtrv-gttset** output, **dflt** cannot be specified as value for the **np** or **nai** parameters when the **ent-gttset** command is entered. If a new GTT selector is specified that matches an existing GTT selector's **gti** and **tt** and the existing selector has **dflt** as the value for the **np** and/or **nai** parameters, a new entry is created with the new **np** and **nai** parameter values. The existing GTT selector entry with the **dflt** value is also retained. The **np/nai** parameter value **dflt** can be specified for the **chg/dlt/rtrv-gttset** commands.

The Origin-based SCCP Routing feature allows two GTT sets to be assigned to a GTT selector: **cdgtasn** and **cggtasn** or **cdgtasn** and **cgpcsn**. The **cggtasn** and **cgpcsn** GTT sets are mutually exclusive and cannot be assigned to the same GTT selector.

Output

```

ent-gttset:gtia=2:tt=9:gttsn=lidb
rlghncxa03w 04-02-18 08:50:27 EST EAGLE 31.3.0
ENT-GTTSEL: MASP A - CPLTD
;

```

ent-gttset**Enter GTT Set**

Use this command to specify the attributes of a new GTT set (a set of global title translations). A GTT set consists of a GTT set name, the number of digits allocated for the GTA (global title address), the domain of the point codes used in the translation, and a pointer to a GTA tree. After the GTT set is provisioned, you can enter subsequent GTT Selector commands and GTA commands.

Keyword: ent-gttset

Related Commands: chg-gttset, chg-gttset, dlt-gttset, rtrv-gttset

Command Class: Database Administration

Parameters

:gttsn= (mandatory)

GTT set name. A GTT set is an entity to which global title addresses and selectors are assigned.

Range: *aaaaaaaa*

1 leading alphabetic character and up to 8 following alphanumeric characters.

:netdom= (mandatory)

Network domain. This command does not distinguish between ITU national or ITU international because the Enhanced Global Title Translation (EGTT) feature does not discriminate between the ITU-I and ITU-N translations.

The **netdom** parameter refers to the incoming message network domain.

Range: **ansi, itu, cross**

:ndgt= (optional)

Number of digits. This parameter specifies the number of digits required for GTAs (global title addresses) associated with this GTT set. This parameter is not valid if the VGTT (Variable Length GTT) feature is turned on or if the value of the **settype** parameter is **cgpc**, **cgssn**, or **opc**.

Range: **1-21**

Default: **6**

:settype= (optional)

GTT set type.

NOTE: This parameter is mandatory if the Origin-based SCCP Routing feature is on.

Range: **cdgta, cggta, cgpc, cgssn, opc**

Example

```

ent-gttset:gttsn=lidb:ndgt=10:netdom=ansient-
gttset:gttsn=t800:netdom=ansi
ent-gttset:gttsn=setint000:netdom=itu:ndgt=15
ent-gttset:gttsn=setcdgt:netdom=cross:ndgt=10:settype=cdgta
ent-gttset:gttsn=setcggta:netdom=ansi:ndgt=11:settype=cggta
ent-gttset:gttsn=setxyz:netdom=ansi:ndgt=11:settype=cggta
ent-gttset:gttsn=setopc:netdom=itu:settype=opc
ent-gttset:gttsn=setcgpc:netdom=ansi:settype=cgpc
ent-gttset:gttsn=setssn:netdom=ansi:settype=cgssn

```

Dependencies

The EGTT feature must be turned on before this command can be entered.

The GTT Set table cannot contain more than 2000 entries.

The **gttsn=none** parameter cannot be specified.

If the VGTT (Variable Length GTT) feature is turned on, the **ndgt** parameter cannot be specified.

The **gttsn** parameter must be specified and must not match an existing **gttsn**.

The **ndgt** parameter cannot be specified if the value of the specified **settype** parameter is **cgssn**, **opc**, or **cgpc**.

The **netdom=cross** parameter can be specified only if the **settype=cdgta** parameter is specified.

The Origin-based SCCP Routing feature must be turned on if the value of the **settype** parameter is **cggta**, **cgssn**, **opc**, or **cgpc**.

If the Origin-based SCCP Routing feature is enabled, the **settype** parameter is mandatory.

The ANSI-ITU-China SCCP Conversion feature must be enabled before the **netdom=cross** parameter can be specified.

Notes

When the EGTT feature is turned on, the GTT Selector (**ent/chg/dlt/rtrv-gttset**), GTT Set (**ent/dlt/rtrv-gttset**), and GTA (**ent/chg/dlt/rtrv-gta**) commands replace the Translation Type (**ent/dlt/rtrv-tt**) and Global Title Translation (**ent/chg/dlt/rtrv-gtt**) commands. All data previously provisioned with these commands is maintained.

When the Origin-based SCCP Routing feature is turned on, VGTT is supported only for CdPA GTA and CgPA GTA. The **cross** network domain is supported only for CdPA GTA.

Output

```
ent-gttset:gttsn=lidb:ndgt=10:netdom=ansi
rlghncxa03w 04-02-19 08:20:17 EST EAGLE 31.3.0
GTT Set table is (114 of 950) 12% full
ENT-GTTSET: MASP A - CMLTD
;
```

ent-gws-redirect

Enter Gateway Screening Redirect Command

Use this command to provision the gateway screening redirect function. The Redirect table must be provisioned before configuring gateway screening to redirect received MSUs. The values that are specified with this command are stored in the Redirect table, and they are used to set the variable fields of the MSUs being redirected. For example, if the **ri=gt** parameter is specified, the value **gt** is set for the routing indicator in the called party address (CDPA) of the MSU being redirected.

Keyword: ent-gws-redirect

Related Commands: chg-gws-redirect, dlt-gws-redirect,

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:dpc= (mandatory)

Specifies the value used to set the ANSI destination point code field in the routing label of the MSU that is being redirected. The ANSI point code has subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Synonym: dpca

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001–005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006–255**.

The point code **000-000-000** is not a valid point code.

:dpc/dpca/dpci/dpcn/dpcn24= (mandatory)

Destination point code.

:dpci= (mandatory)

Specifies the value used to set the ITU international destination point code field in the routing label of the MSU that is being redirected. The point code has subfields *zone-area-id*.

Range: 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

The point code **0-000-0** is not a valid point code.

zone—**0–7**

area—**000–255**

id—**0-7**

:dpcn= (mandatory)

Specifies the value used to set the ITU national destination point code field in the routing label of the MSU that is being redirected. The point code is in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) when the **chg-stpopts:npfmt** flexible point code option is on. A group code (*gc*) must be specified when the ITUDUPPC feature is on (*nnnnn-gc*, *m1-m2-m3-m4-gc*).

Range: 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:dpcn24= (mandatory)

Specifies the value used to set the 24-bit ITU national destination point code field in the routing label of the MSU that is being redirected. The point code has subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000–255**

ssa—**000–255**

sp—**000–255**

:gta= (mandatory)

Specifies the value used to set the global title address (dialed digits) in the SCCP called party address of the MSU being redirected.

Range: 1-21 digits

:ri= (mandatory)

Specifies the value used to set the routing indicator in the SCCP called party address of the MSU being redirected. Use the **gt** value to route by global title digits or use the **ssn** value to route by subsystem number.

Range: **gt, ssn**

:ssn= (mandatory)

Specifies the value used to set the subsystem number (SSN) in the SCCP called party address of the MSU being redirected. This number is the SSN of the SCP to which all MSUs meeting the redirect criteria are to be redirected.

Range: **000-255**

:tt= (mandatory)

Identifies the type of the global title translation (GTT). This value is the decimal representation of the 1-byte field used in SS7 and is used to set the type of the GTT in the SCCP called party address of the MSU being redirected.

Range: **000-255**

:enabled= (optional)

Specifies whether MSUs that have passed gateway screening are to be redirected (**enabled=on**) or routed as normal (**enabled=off**).

Range: **on, off**

Default: **on**

Example

```
ent-gws-redirect:dpc=1-40-1:ri=gt:ssn=10:tt=1:gta=180833:enabled=on
```

```
ent-gws-redirect:dpc=1-40-1:ri=ssn:ssn=10:tt=1:gta=1800833:enabled=off
```

Dependencies

The **dpc/dpca/dpci/dpcn/dpcn24** parameter must be defined in the Destination table or defined as the STP site point code.

If the **dpc/dpca/dpci/dpcn/dpcn24** parameter is defined as a destination, it must have at least one route defined.

The redirect function data can be entered only once.

Notes

The SCCP screening functions (CGPA, TT, CDPA, and AFTPC) cannot select an MSU to be redirected.

Do not apply a Redirect Stop Action on the Adjacent Node point code for the BLKOPC and OPC screening functions.

Do not apply a Redirect Stop Action for an allowed DPC screen rule if the rule contains the self-identity point code of EAGLE 5 ISS where the screening rule is applied. This is because the redirection of SLTAs and SLTMs (Signal Link Test Messages and Acknowledgements) will not return to the originating EAGLE 5 ISS and will cause the link to fail.

If **gwsa=off** and **gwsm=off** are specified for all linksets, gateway screening and the GWS redirect function for the DTA feature are disabled.

Output

```
ent-gws-redirect:dpc=1-40-1:ri=gt:ssn=10:tt=1:gta=180833:enabled=
on
rlghncxa03w 03-11-10 11:43:04 EST EAGLE 31.6.0
ENT-GWS-REDIRECT: MASP A - COMPLTD
;
```

ent-home-smsc**Enter HOME SMSC Address**

Use this command to enter HOME SMSC specific addresses, currently used to identify Short Message Service Centers in the database. This command updates the HOME SMSCADDR table.

Keyword: ent-home-smsc

Related Commands: dlt-home-smsc, rtrv-home-smsc

Command Class: Database Administration

Parameters

:smc= (mandatory)

Identifies the type of the Short Message Service Center address.

Range: 1-21 digits
1-21 hexadecimal digits. Valid digits are **0-9, a-f, A-F**

Example

```
ent-home-smsc:smc=256489
```

```
ent-home-smsc:smc=256489a98bccee56ad237
```

Dependencies

The Portability Check for Mobile Originated SMS (MNPSMS) feature must be turned on or one of the following features must be enabled before this command can be entered.

- MO SMS IS41-to-GSM Migration
- MO-based GSM SMS NP
- MO-based IS41 SMS NP
- MT-Based GSM SMS NP
- MT-Based IS41 SMS NP

The specified HOME SMSC address cannot already exist in the HOME SMSCADDR table.

The HOME SMSCADDR table can contain a maximum of 500 entries.

Notes

None

Output

```
ent-home-smsc:smc=256489
rlghncxa03w 04-02-28 08:50:12 EST EAGLE 31.3.0
ENT-HOME-SMSC: MASP A - COMPLTD
;
```

ent-homern**Enter Home Routing Number Prefix**

Use this command to enter up to 100 routing number prefixes for the operating network into the HOMERN table.

:type= (optional)

The residency attribute of the host entry.

Range: **local, remote**

local— The IP host name and IP address resides on the IP card in this EAGLE 5 ISS.

remote— The IP host name and IP address resides on equipment not in this EAGLE 5 ISS.

Default: **local**

Example

```
ent-ip-host:host=gw100.nc.tekelec.com:ipaddr=150.001.001.001
```

```
ent-ip-
```

```
host:host=gw100.nc.tekelec.com:ipaddr=150.001.001.001:type=local
```

Dependencies

The host name and IP address must be unique.

The Host table must have an empty element.

The IP address of the local host must exist in the IP Link table.

The IP address of the remote host must not exist in the IP Link table.

Notes

None

Output

```
ent-ip-
```

```
host:host=gw100.nc.tekelec.com:ipaddr=150.001.001.001:type=local
```

```
rlghncxa03w 05-07-17 15:35:05 EST EAGLE 34.0.0
```

```
ENT-IP-HOST: MASP A - COMPLTD
```

```
;
```

ent-ip-node

Enter IP Node

Use this command to define the IP address of a node that will be receiving messages from the STPLAN application.

Keyword: **ent-ip-node**

Related Commands: **dlt-ip-node, rtrv-ip-node**

Command Class: Database Administration

Parameters

:cap= (mandatory)

The maximum percentage of ethernet capacity for this node connection. This capacity is added to other connections to this node for the total capacity of the node.

Range: **1-100**

:ipaddr= (mandatory)

The node's IP address. This is a TCP/IP address expressed in standard dot notation. IP addresses consist of the system's network number and the machine's unique host number. An example IP address is **192.126.100.5**, where **192.126.100** is the network number and **5** is the machine's host number.

Range: **1-223, 0-255**

4 numbers separated by dots

1-223—first number

0–255—the other three numbers

:ipappl= (mandatory)

The IP application supported by the node.

Range: **stplan**

:ippport= (mandatory)

The logical IP port that addresses the application on the node.

Range: **1024-5000**

:loc= (mandatory)

The card location as stenciled on the shelf of the system that contains the TCP/IP link that will be directly connected to the node.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

:iprte= (optional)

The default router IP address. This is a TCP/IP address expressed in standard dot notation. IP addresses consist of the system's network number and the machine's unique host number. An example IP address is **192.126.100.5**, where **192.126.100** is the network number and **5** is the machine's host number.

Range: **1-223, 0-255**

4 numbers separated by dots

1-223—first number

0-255—the other three numbers

Example

ent-ip-

node:ipaddr=13.49.210.50:ipappl=stplan:ippport=1024:loc=1201:cap=15:iprte=193.4.201.84

Dependencies

The ACM is the only valid card type for this command.

The shelf and card must be equipped.

The node IP address cannot be **127.x.x.x**, where **x** is a number from **1** to **254**.

The specified card location must be equipped with a TCP/IP data link.

The IP address must be unique to the TCP/IP link table and to the TCP/IP nodes.

Only one node can be connected for each data link and each application. The IP address, IP application, and card location combination must be unique in the database.

The IP port on each node cannot be assigned to another application. The IP address and IP port combination must always use the same IP application.

The class of the IP address (**ipaddr**) must match the class of the assigned TCP/IP data link's IP address. The system supports three classes of IP addresses, Class A, Class B, and Class C. Class A IP addresses can contain only the values **1** to **126** in the first field of the IP address. Class B IP addresses can contain only the values **128** to **191** in the first field of the IP address. Class C IP addresses can contain only the values **192** to **223** in the first field of the IP address.

The network portion of the IP address (**ipaddr**) must match the network portion of the IP address assigned to the TCP/IP data link. The network portion of the IP address is based on the class of the

IP address. If the IP address is a Class A IP address, the first field is the network portion of the IP address. If the IP address is a Class B IP address, the first two fields are the network portion of the IP address. If the IP address is a Class C IP address, the first three fields are the network portion of the IP address.

If the network portion and class of the IP address of the TCP/IP node matches the class of the assigned TCP/IP data link's IP address, the **iprte** parameter cannot be specified. The **iprte** parameter can be specified only with the **ent-ip-node** command when the network portion and class of the TCP/IP node does not match the class of the assigned TCP/IP data link's IP address. The values of the **ipaddr** parameter, the IP address of the TCP/IP node, and the **iprte** parameter cannot be the same. The capacity of all connections to the given node cannot be greater than 100%.

Notes

If the IP address is a Class A IP address, do not use the IP addresses **127.x.x.x**, where *x* is a number from **1** to **254**. These addresses are reserved for loopback.

Output

```
ent-ip-
node:ipaddr=13.49.210.50:ipappl=stplan:ipport=1024:loc=1201:cap=1
5:iprte=193.4.201.84
    rlgncxa03w 04-01-18 08:50:12 EST EAGLE 31.3.0
    ENT-IP-NODE: OAM A - COMPLTD
;
```

ent-ip-rte

Enter IP Route

Use this command to configure the destination IP address, subnet mask, and the gateway IP address for the specified card in the Static IP Route table.

Keyword: **ent-ip-rte**

Related Commands: **dlt-ip-rte**, **rtrv-ip-rte**

Command Class: Database Administration

Parameters

:dest= (mandatory)

Destination IP Address. The IP Address of a remote destination host or network to be reached.

Range: 4 numbers separated by dots, with each number in the range of **0–255**.

The IP address **0.0.0.0** is not valid.

:gtwy= (mandatory)

Gateway IP Address. The IP address assigned to the gateway router that will properly forward IP datagrams with the destination IP address (**dest**) to the next-hop gateway router or final destination host.

Range: 4 numbers separated by dots, with each number in the range of **0–255**.

The IP address **0.0.0.0** is not valid.

:loc= (mandatory)

Card location. The unique identifier of a specific IP card in the system.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

:submask= (mandatory)

The subnet mask of the destination IP address, in the form of an IP address with a restricted range of values. This parameter is required if the **ipaddr** parameter is entered.

Range: The value must be valid for the class of the entered IP address.

Table 5-44. Valid Subnet Mask Values

Valid for Class A Networks	Valid for Class A or B Networks	Valid for Class A, B, or C Networks
255.0.0.0	255.255.0.0	255.255.255.0
255.192.0.0	255.255.192.0	255.255.255.192
255.224.0.0	255.255.224.0	255.255.255.224
255.240.0.0	255.255.240.0	255.255.255.240
255.248.0.0	255.255.248.0	255.255.255.248
255.252.0.0	255.255.252.0	255.255.255.252
255.254.0.0	255.255.254.0	
255.255.128.0	255.255.255.128	

The value **255.255.255.255** must be specified if the destination IP address represents a host address.

If the destination IP address represents a network address, a value must be specified that identifies the network ID and host ID portions of the address.

Example

```
ent-ip-rte:loc=1301:dest=128.252.10.5:submask=255.255.255.255:
gtwy=140.188.13.33
```

Dependencies

The specified destination IP address (**dest** parameter):

- Must not be the default route (0.0.0.0)
- Must not correspond to any loopback address (i.e. 127.X.X.X)
- Must be unique per card
- Must not reside on this card's A or B local network

The specified gateway IP address (**gtwy** parameter):

- Must not be the default route (0.0.0.0)
- Must not correspond to any loopback address (i.e. 127.X.X.X)
- Must correspond to a host IP address that resides on this card's A or B local network

The IP address must be defined for the A or B network, or both, for the card before this command can be entered. (See the **chg-ip-card** command.)

Each destination IP address entered into the Static IP Route table must be unique for the card.

A maximum of 64 static IP routes can be defined for a card.

A maximum of 1024 static IP routes can be defined in the IP Route table.

The **loc** parameter value must correspond to a SSEDCM card running the **ss7ipgw**, **ipgwi**, **iplim**, or **iplimi** application.

The network address specified by the **dest** and **submask** parameters must be different from the network address specified by the **pvn** and **pvnmask**, **fcna** and **fcnamask**, and **fcnb** and **fcnbmask** parameters of the NETOPTS table.

Notes

The Static IP Route table is used to store static IP route entries. Static routes are maintained across card initialization, failures, and reloads. These types of routes are used when the IP Layer cannot determine routes dynamically. Static IP route entries can be added or deleted dynamically.

Output

```
ent-ip-rte:loc=1301:dest=128.252.10.5:submask=255.255.255.255:
gtwy=140.188.13.33
  rlgncxa03w 04-01-17 15:35:05 EST EAGLE 31.3.0
  IP Route table is (1 of 256) 1% full
  ENT-IP-RTE: MASP A - COMPLTD
;
```

ent-lbp

Enter Loopback Point

Use this command to assign a far-end loopback point for testing data signaling link elements in a SS7 transmission path.

Keyword: ent-lbp

Related Commands: act-lbp, chg-lbp, dact-lbp, dlt-lbp, rtrv-lbp

Command Class: Database Administration

Parameters

:lbp= (mandatory)

Loopback point ID. This parameter identifies a far-end loopback point that lies along an SS7 signaling link path between the STP and the target device (up to *and including* the target device).

Range: 1-32

:lfst= (mandatory)

Link fault sectionalization test. The type of link fault sectionalization loopback test to be performed.

Range: llt, nlt

llt — latching loopback test

nlt — nonlatching loopback test

:link= (mandatory)

SS7 signaling link. The SS7 signaling link that is to be tested.

Synonym: port

Range: a, b, a1-a31, b1-b31

Not all card types support all **link** parameter values.

See "Summary of Range Values for :link Parameter" for valid **link** parameter range values for each type of card that can have assigned signaling link ports.

:loc= (mandatory)

Card location. The unique identifier of a specific application subsystem located in the STP.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

:rle= (mandatory)

Remote link element. The link element to be looped back for testing.

Range: ds0, ocu, csu, dsu, nei

:cli= (optional)

The Common Language Location Identifier (CLLI) code, or other mnemonic identifier, used to refer to the given loopback point.

Range: ayyyyyyyyyy

1 alphabetic character followed by up to 10 alphanumeric characters.

:rep= (optional)

Repetition count. The number of link elements of the same type (not including the target device) that lie between the STP and the link element to be tested.

Range: 0-31

Default: 0—If the link element to be looped back for testing is NEI (**rle=nei** is specified)

0—If the LFS test is NLT (non-latched); **lfst=nlt** is specified

0—If no other LBP for this link has the same **rle** value

1–30—Next sequential number for subsequent loopback points of the link to be tested (**rle** is specified as anything but **nei**)

Example

ent -

lbp:loc=1101:link=a:lbp=1:rle=ds0:lfst=llt:rep=0:cli=r lghncxa05w

ent-lbp:loc=1101:port=a:lbp=2:rle=nei:lfst=llt

ent -

lbp:loc=1205:port=a1:lbp=1:rle=ds0:lfst=llt:cli=r lghncxa05w:rep=1

Dependencies

The Link Fault Sectionalization (LFS) feature must be on before this command can be entered.

The card location (**loc** parameter) must be equipped.

The **rle=ds0** parameter and the **rle=nei** parameter cannot be specified when the **lfst=nlt** parameter is specified. The DS0 and Network Element Interface (NEI) link elements do not support non-latching loopbacks.

If the **rle=nei** parameter is specified, the **rep=0** parameter must be specified.

The **rep** parameter can be specified only if the **lfst=llt** parameter is specified.

Each specified **rep** parameter value must be greater than any previously specified **rep** value and less than any subsequent specified **rep** value.

The specified **cli** cannot be a reserved word.

The loopback point (LBP) cannot have been previously defined.

The value specified for the **lbp** parameter cannot exceed the **lbp** parameter value previously defined for a loopback point with **rle=nei** specified.

For each SS7 signaling link, only one loopback point with **rle=nei** specified can be defined.

The **rep** parameter must be specified if taking the default value results in duplicate **rep** values for loopback points.

The loopback point with **rle=nei** specified must be the terminating SS7 signaling link element.

The card location must contain a provisioned **limds0**, **limt1**, or **limch** (associated to a **limt1**) card that is running an **ss7ansi** or **ccs7itu** application.

The card location (**loc** parameter) must not be reserved by the system.

Notes

None

Output

```
ent-lbp:loc=1101:link=a:lbp=2:rle=nei:lfst=llt
rlghncxa03w 05-02-17 15:35:05 EST EAGLE5 33.0.0
ENT-LBP: MASP A - COMPLTD
;
```

ent-lnp-serv

Enter LNP Service

Use this command to reserve an LNP translation type for a unique LNP service. The available services include up to six query services (**ain**, **in**, **pcs**, **lnpqs**, **wnp**, and **lrnqt**) and any combination of six message relay or user-defined services. Translation type names can also be defined and are defaulted to the corresponding reserved service type names.

A maximum of 10 LNP services can be assigned in systems with up to 12 million numbers, and a maximum of 15 LNP services can be assigned in systems with more than 12 million numbers (using ELAP). Two of these assigned services will always be reserved for administration of AIN and IN Translation Types. Administration of Message Relay user defined services will also be allowed.

Keyword: ent-lnp-serv

Related Commands: chg-lnp-serv, dlt-lnp-serv, rtrv-lnp-serv

Command Class: Database Administration

Parameters

:serv= (mandatory)

Reserved service type name.

Range: **ain, in, pcs, wnp, class, lidb, cnam, isvm, lnpqs, wsmcsc, udf1, udf2, udf3, udf4, lrnqt**

:alias= (optional)

The alias translation type.

Range: **000-255**

:dv= (optional)

Digits valid.

Range: **sccp, tcap**

Default: **sccp**—If **serv= class, lidb, cnam, isvm, wsmcsc, udf1, udf2, udf3, udf4**
tcap—If **serv= ain, in, pcs, wnp, lnpqs, lrnqt**

:tt= (optional)

Translation type.

Range: **000-255**

:ttn= (optional)

User defined TT name.

Range: **aaaaaaaa**
 1 to 8 alphabetic characters, the value **none** is not allowed.

Default: Reserved service type name (**serv** parameter)

Example

```
ent - lnp - serv : serv = lldb : tt = 16 : dv = tcap : ttn = mr lldb
ent - lnp - serv : serv = lnrqt : tt = 239 : dv = tcap
```

Dependencies

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before this command can be entered.

The PLNP feature must be turned on before the **nserv=pcs** parameter can be specified.

The WNP feature must be turned on before the **nserv=wnp** feature can be specified.

The LNP SMS feature must be turned on before the **serv=wsmsc** parameter can be specified.

The **tt** parameter, the **ttn** parameter, and the **dv** parameter cannot be specified in the same command with the **alias** parameter.

The **tt** parameter must be specified if the **alias** parameter is not specified in the command.

The **ttn=none** parameter cannot be specified.

If any of the **udf1** – **udf6** values are specified for the **serv** parameter, then the **dv=sccp** parameter must be specified.

If the **lnpqs**, **ain**, **in**, **pcs**, **wnp**, or **lnrqt** values are specified for the **serv** parameter, then the **dv=tcap** parameter must be specified.

A reserved service type name can be specified for the **ttn** parameter only if it matches the **serv** parameter value.

The value of the **tt** parameter cannot already exist in the LNP database.

If the **tt** parameter is specified, then the value of the **serv** parameter cannot exist in the LNP database.

A maximum of 6 Message Relay services are allowed.

If the **alias** parameter is specified, then the **serv** parameter must already have an assigned translation type.

When the **alias** parameter is specified, its value cannot already exist in the LNP database as a true translation type for this service.

If the **alias** parameter is specified, then the specified alias cannot be in use.

If the **tt** parameter is specified, then its value cannot already exist in the LNP database as an alias for this service.

The value of the **ttn** parameter cannot exist in the LNP database.

The LRNQT feature must be turned on (see the **chg-ctrl-feat** command) before the **serv=lnrqt** parameter can be specified.

Notes

Translation type names must be unique for LNP services.

A translation type name can be a reserved service type name only if it matches the specified service.

Output

```
ent - lnp - serv : serv = lldb : tt = 16 : dv = tcap : ttn = mr lldb
rlghncxa03w 02-11-18 08:50:12 EST EAGLE 30.0.0
ENT-LNP-SERV: MASP A - COMPLTD
;
```

ent-loopset**Enter Loop Set Command**

Use this command to enter the loopset information into the database. This command updates the Loopset table.

Keyword: ent-loopset

Related Commands: chg-loopset, dlt-loopset, rtrv-loopset

Command Class: Database Administration

Parameters

:name= (mandatory)

Loopset name. This parameter specifies an entry in the Loopset table.

The **name=none** parameter cannot be specified.

Range: ayyyyyy

1 alphabetic and up to 7 alphanumeric characters.

:pcl= (mandatory)

ANSI point code list with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*). This parameter allows up to 6 comma-delimited entries in the point code list.

Synonym: pcla

Range: p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

When **chg-sid:pctype=ansi** is specified, *ni = 000* is not valid.

When **chg-sid:pctype=ansi** is specified, *nc = 000* is not valid if *ni = 001-005*.

When **chg-sid:pctype=ansi** is specified, *nc = 000* is valid if *ni = 006-255*.

The point code **000-000-000** is not a valid point code.

:pcli= (mandatory)

ITU international point code list with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*). This parameter allows up to 6 comma-delimited entries in the point code list.

Range: s-, p-, ps-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps-

zone—0-7

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

:pcln= (mandatory)

ITU national point code list in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*). This parameter allows up to 6 comma-delimited entries in the point code list.

Range: s-, p-, ps-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**, **p-**, **ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:pcln24= (mandatory)

24-bit ITU national point code list with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*. This parameter allows up to 6 comma-delimited entries in the point code list.

Range: **p-**, **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:mode= (optional)

Mode of operation. This parameter specifies whether the message is discarded when an SCCP loop is detected.

Range: **notify**, **discard**

notify— Generates a UIM without discarding the message.

discard— Generates a UIM and discards the message.

Default: **notify**

Example

This example creates a new loopset using the default mode of notify.

ent-loopset:name=rtp1:pcl=3-3-3,5-5-5,7-7-7,3-4-3

This example creates a new loopset and sets the mode to discard.

ent-loopset:name=rtp2:mode=discard:pcl=3-3-3,5-5-5,7-7-7,3-4-3

Dependencies

The value of the **name** parameter cannot already exist in the database.

The SCCP Loop Detection feature must be enabled before this command can be entered.

The GTT feature must be turned on before this command can be entered.

The Loopset table can hold a maximum of 1,000 loopset entries, with each entry containing up to 12 point codes. Additional loopset entries and point codes cannot be added when the table is full.

The values for the **pcl** parameter must be unique.

The **name=none** parameter cannot be specified.

At least one valid point code must be specified as a value for the **pcl** parameter.

The values for the **pcl** parameter cannot consist of any invalid point codes. The valid point codes must be consecutively specified and separated by commas.

Output

The following example creates a new loopset and sets the mode to **discard**.

```
ent - loopset:name=rtp2:mode=discard:pcl=3-3-3,5-5-5,7-7-7,3-4-3
    rlgncxa03w 07-02-10 08:31:28 EST EAGLE Rel 35.6.0
    LOOPSET table is (12 of 1000) 1% full
    ENT-LOOPSET: MASP A - COMPLTD
;
```

ent-ls

Enter Linkset

Use this command to add a linkset, with its assigned far-end point code and other linkset attributes, to the database.

Keyword: ent-ls

Related Commands: chg-ls, dlt-ls, rtrv-ls

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:apc= (mandatory)

ANSI adjacent destination point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*). The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: apca

Range: p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001-005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006-255.

The point code 000-000-000 is not a valid point code.

:apc/apca/apci/apcn/apcn24= (mandatory)

Adjacent point code. The DPC of the adjacent signaling node at the far end of the linkset.

:apci= (mandatory)

ITU international adjacent destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: s-, p-, ps-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps-

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

:apcn= (mandatory)

ITU national adjacent destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:apcn24= (mandatory)

24-bit ITU national adjacent destination point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* indicates a private point code (*prefix-msa-ssa-sp*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:lsn= (mandatory)

Linkset name. Each linkset name must be unique in the system.

Range: *ayyyyyyyy*

1 alphabetic character followed by up to 9 alphanumeric characters

:lst= (mandatory)

Linkset type. This parameter specifies the linkset type of the specified linkset as defined in Telcordia GR-246-CORE, T1.111.5.

Range: **a, b, c, d, e, prx**

a— Access links

b— Bridge links

c— Cross links

d— Diagonal links

e— Extended links

prx— Proxy links

:adapter= (optional)

This parameter specifies the adapter layer for links provisioned in a IPSG linkset.

Range: **m3ua, m2pa**

Default: **m2pa**

:apcntype= (optional)

ITU-N Adjacent Point Code Type. This parameter specifies the format that will be used for changeover and changeover acknowledgement messages.

Range: **itun, itunchina**

itun— ITU National Adjacent Point Code Type

- itunchina** — ITU National China Adjacent Point Code Type
- Default:** **itun**
- :asl8=** (optional)
Adjacent SLS 8-bit indicator. This parameter specifies whether the adjacent node is sending MSUs with 8-bit SLSs.
Range: **yes, no**
Default: **no**
- :asnotif=** (optional)
AS notification. This parameter specifies whether AS notifications should be sent for IPSP-M3UA linkset.
Range: **yes, no**
Default: **yes**
- :bei=** (optional)
Broadcast exception indicator. This parameter specifies whether TFP (transfer prohibited) messages are allowed to be broadcast on the linkset.
Range: **yes, no**
yes — TFPs are not broadcast (for X.25).
no — TFPs are broadcast (for SS7).
Default: **yes**—for X.25
no—for SS7
- :cggtmod=** (optional)
Calling party GT modification indicator. This parameter specifies whether calling party global title modification is required for the specified linkset.
Range: **yes, no**
Default: **no**
- :clli=** (optional)
Far-end Common Language Location Identifier (CLLI). This parameter specifies the CLLI assigned to the linkset.
Range: *ayyyyyyyyyy*
1 alphabetic character followed by up to 10 alphanumeric characters
Default: CLLI of the adjacent point code
- :gsmscrn=** (optional)
GSM MAP screening. This parameter specifies whether GSM MAP screening is allowed.
Range: **on, off**
Default: **off**
- :gttmode=** (optional)
Global title translation mode. This parameter selects a GTT Mode hierarchy for each link set.
Range: **cd, cg, acdcd, acdcdcg, acdcdcg, cgacdcd, cgcd, sysdflt**
Default: **sysdflt**
- :gwsa=** (optional)
Gateway screening action. This parameter specifies whether gateway screening (GWS) is on or off for the specified linkset.
Range: **on, off**
Default: **on**—if **scrn** is specified
off—if **scrn** is not specified

:gwsd= (optional)

Gateway screening MSU discard. This parameter specifies whether the discarding of MSUs that bypass the gateway screening function due to load-shedding is on or off. This parameter is also used with the redirect function; MSUs that cannot be screened are discarded if **gwsd=on** is specified.

Range: on, off

Default: off

:gws= (optional)

Gateway screening messaging. This parameter specifies whether messages are generated for each message screened by gateway screening.

Range: on, off

Default: off

:ipgwapc= (optional)

IP gateway adjacent point code. Specifying **ipgwapc=yes** indicates that the linkset is entered for a card of application type SS7IPGW or IPGWI and the adjacent point code specified is an IP gateway adjacent point code.

Range: yes, no

Default: no

:ipsg= (optional)

IP signaling gateway adjacent point code. This parameter specifies whether a linkset is entered for an IP SG card. The specified adjacent point code is an IPLIM or IP gateway adjacent point code.

Range: yes, no

Default: no

:iptps= (optional)

IPGWx Linkset TPS.

This parameter is a user-defined portion of the total system IP Signaling TPS. This parameter is allowed and required only for IPGWx linksets (the **ipgwapc=yes** parameter is specified).

The sum of the TPS values assigned to all linksets in the system cannot exceed 500000.

Range: 100-32000

The specified value must be divisible by 10.

:islsrsb= (optional)

Incoming rotated signaling link selection (SLS) bit. This parameter specifies the bit (1–4) to rotate as the new SLS LSB (Least Significant Bit) of the incoming linkset. The SLS is not modified in the outgoing message. Table 5-45 shows how the rotation affects the four bits of the SLS during linkset selection:

Table 5-45. Incoming SLS Bit Rotation

If This Bit is Selected...	Then Bit Locations 4 3 2 1 Are Rotated To...	Description
Bit 4	3 2 1 4	SLS = 0110 becomes Rotated SLS = 1100 SLS = 1011 becomes Rotated SLS = 0111
Bit 3	2 1 4 3	SLS = 0110 becomes Rotated SLS = 1001 SLS = 1011 becomes Rotated SLS = 1110
Bit 2	1 4 3 2	SLS = 0110 becomes Rotated SLS = 0011 SLS = 1011 becomes Rotated SLS = 1101
Bit 1	No rotation is performed because bit 1 is the existing LSB	-

This parameter is used for ITU or ANSI messages on a per-linkset basis.

Range: 1-4

Default: 1

:itutfr= (optional)

ITU TFR (Transfer Restricted) procedure indicator. This parameter specifies whether the TFR procedure is on or off on a per-linkset basis. This parameter is valid for ITU national linksets only.

Range: on, off

Default: off

:l3tset= (optional)

Link timer set. This parameter value is the value that is defined with the **chg-l3t** command.

Range: 1

Default: 1

:lsusealm= (optional)

IPTPS linkset alarm threshold percent. This parameter specifies the percent of the linkset TPS (**iptps**) at which an alarm is generated to indicate that the actual linkset TPS is approaching the configured **iptps** value for the linkset.

Range: 10-100

Default: 100

:mtprese= (optional)

ANSI or ITU MTP Restart equipped. This parameter specifies whether the node adjacent to the linkset is equipped with MTP Restart.

Range: yes, no

yes — equipped

no — not equipped

Default: no

:multgc= (optional)

Multiple group codes. This parameter specifies whether multiple group codes can be specified.

Range: **yes, no**

Default: **no**

:nis= (optional)

Network Indicator Spare. This parameter specifies whether the Network Indicator Spare option is on or off for the specified linkset. When this option is enabled, the Network Spare value for network indicator for both ANSI and ITU-National (ITU-N) links is supported by the system.

Range: **on, off**

Default: **off**

:ppc= (optional)

ANSI proxy point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

The proxy point code must be a full point code.

Synonym: **ppca**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:ppc/ppca/ppci/ppcn/ppcn24= (optional)

Proxy Point Code

The proxy point code must be a full point code.

:ppci= (optional)

ITU international proxy point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code.

Range: **s-, 0-255, none**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

zone—**0-7**

area—**000-255**

id—**0-7**

Enter **none** to delete the point code.

The point code **0-000-0** is not a valid point code.

:ppcn= (optional)

ITU national proxy point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (*members*) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:ppcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

:randsls= (optional)

Random SLS (signaling link selection). This parameter is used to apply random SLS generation for the specified linkset.

Specifying the **randsls** parameter in the **ent-ls** command enables random SLS generation on a per linkset basis only if the **randsls=perls** parameter has been specified in the **chg-stpopts** command.

Range: off, class0, all

off—Disables random SLS generation on a specified linkset.

class0—Enables random SLS generation for Class0 SCCP traffic on a specified linkset.

all—Enables random SLS generation for Class0 and Class1 SCCP traffic on a specified ITU linkset and for Class0 and ISUP traffic on a specified ANSI linkset.

Default: off

:rcontext= (optional)

Routing context. This parameter specifies whether to assign a new routing context to an IPSP-M3UA linkset.

Range: 0-4294967295

System

Default: none

:scrn= (optional)

Gateway screening screen set. This parameter specifies the gateway screening screen set assigned to this linkset.

Range: ayyy, none

1 alphabetic character followed by up to 3 alphanumeric characters, or **none**

none—Deletes screen set association with the linkset

:slktps= (optional)

Per signaling link TPS for IPSP Linkset. This parameter is specified for each link provisioned in the specified linkset. This parameter is allowed and required only for IPSP linksets (the **ipsp=yes** parameter is specified).

The sum of the TPS values assigned to all linksets in the system cannot exceed 500,000.

Range: 100-5000

:slkusealm= (optional)

IPTPS signaling link alarm threshold percent. This parameter specifies the percent of the link "fair share" TPS at which an alarm is generated to indicate that the actual link TPS is approaching the link's "fair share" of its linkset's configured TPS (**iptps**). The "fair share" of the linkset TPS for a link is the configured linkset TPS divided by the number of in-service links in the linkset.

Range: 10-100

Default: 80

:slsci= (optional)

5-bit to 8-bit SLS conversion indicator. This parameter specifies whether the 5-bit to 8-bit SLS conversion feature is used to select links for outgoing messages direct to the given linkset. When enabled, the system replaces any 5-bit SLS values contained in received messages, with a random 8-bit value before the 5-bit SLS values are used by the STP to select the outgoing link in that linkset.

Range: yes, no

yes — enabled

no — disabled

Default: no

:slsocbit= (optional)

Other CIC (Circuit Identification Code) Bit. If the SLSOCB feature is turned on, this parameter specifies whether the Other CIC Bit option is to be used during link selection. If the option is to be used, specify which bit (5– 16) of the CIC is to be used as the other CIC bit. During link selection, the specified bit acts as the most significant bit of the new SLS and bits 2 through 4 of the received CIC become the least significant bits of the new SLS. This parameter is used for ITU-ISUP messages. The SLS is not modified in the outgoing message. The following example shows a received CIC where bit 9 is the other CIC bit (**slsocbit=9**). The new SLS is 0100.

16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
0	0	0	0	1	0	0	0	1	0	0	1	1	0	0	1
New SLS							0				1	0	0		

Range: 5-16 none

Default: none

:slrsb= (optional)

Rotated signaling link selection (SLS) bit. This parameter specifies the bit (1–4) to rotate as the new SLS Least Significant Bit (LSB). The SLS is not modified in the outgoing message. Table 5-46 shows how the rotation affects the four bits of the SLS during linkset selection:

Table 5-46. SLS Bit Rotation

If This Bit is Selected...	Then Bit Locations 4 3 2 1 Are Rotated To...	Description
Bit 4	3 2 1 4	SLS = 0110 becomes Rotated SLS = 1100 SLS = 1011 becomes Rotated SLS = 0111
Bit 3	2 1 4 3	SLS = 0110 becomes Rotated SLS = 1001 SLS = 1011 becomes Rotated SLS = 1110
Bit 2	1 4 3 2	SLS = 0110 becomes Rotated SLS = 0011 SLS = 1011 becomes Rotated SLS = 1101
Bit 1	No rotation is performed because bit 1 is the existing LSB	-

This parameter is used for ITU messages on a per-linkset basis.

Range: 1-4

Default: 1

:sltset= (optional)

SLTM record. This parameter specifies the SLTM record to be associated with the linkset.

Range: 1-20

Default: 1 for ANSI
2 for ITU

:spc= (optional)

ANSI secondary point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001–005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006–255.

The point code 000-000-000 is not a valid point code.

:spc/spca/spci/spcn/spcn24= (optional)

Secondary point code.

:spci= (optional)

ITU international secondary point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

:spcn= (optional)

ITU national secondary point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:spcn24= (optional)

24-bit ITU national secondary point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

Example

Adds linkset wy644368 with apc 144-201-1 with lstc:

ent - ls : lsn=wy644368 : apc=144-201-001 : lst=c

Adds linkset lsitua1 with apcn5-5-5-1 with lstc. The apcn parameter is using a four-part format where the maximum number of bits in each position is defined by the chg-stpopts:npcfmti parameter :

ent - ls : lsn=lsitua1 : apcn=5-5-5-1 : lst=c

In this example, the ITU national duplicate point code (ITUDUPPC) feature is turned on, so the ITU national point code contains a group code. Adds linkset exp123 with apcn2-3-4-5-aa, which has a duplicate point code group of aa and linkset type a:

ent - ls : lsn=exp123 : apcn=2-3-4-5-aa : lst=a

Add a linkset in which all applicable MSUs arriving on the linkset are screened using the GSM MAP screening feature:

ent-ls:lsn=lsitu1:apcn=5000:lst=a:gmscrn=on

Adds a link set lsn24 with 24-bit ITU-N apcn2410-100-10 and linkset type a:

ent-ls:lsn=lsn24:apcn24=10-100-10:lst=a

Adds link set lsa2 with private APC p-1-2-4

ent-ls:lst=a:lsn=lsa2:apc=p-1-2-4

Adds link set lsn410234 with private and spare APCN ps-1-1-1-2047-aa:

ent-ls:lst=b:lsn=lsn410234:apcn=ps-1-1-1-2047-aa

Adds link set lsi00001 with spare APCI s-1-1-209-7:

ent-ls:lst=b:lsn=lsi00001:apci=s-1-1-209-7

Adds link set lsn24 with APCN24 10-100-10 with apcntype=itunchina and linkset type a.

ent-ls:lsn=lsn24:apcn24=10-100-10:lst=a:apcntype=itunchina

Adds link set lsa using the global title translation mode cgacdcd.

ent-ls:lsn=lsa:lst=a:apca=1-1-1:gttmode=cgacdcd

Enables random SLS generation for Class0 and Class1 SCCP traffic on ITU linkset lsa.

ent-ls:lsn=lsa:lst=a:apci=1-1-2:randsls=all

Adds a linkset in which calling party global title modification is required for all GT routed MSUs arriving on the linkset:

ent-ls:lsn=ls2:apc=2-2-2:lst=a:cggmod=yes

Adds an IPSG-M3UA linkset.

ent-

ls:lsn=ls1201:apc=10-10-10:lst=a:adapter=m3ua:ipsg=yes:slktps=100

Adds an IPSG-M2PA linkset.

ent-ls:lsn=lsm2pa:apc=5-6-7:lst=c:ipsg=yes:slktps=300

Adds a linkset and sets the Incoming SLS Bit Rotation on the 2nd Bit.

ent-ls:lsn=lsa:lst=a:apci=1-1-2:islsrsb=2

Dependencies

The value specified for the **apc** parameter must be a full point code.

The specified adjacent point code cannot exist as an alias point code.

If the **gwsa=on**, **gwsn=on**, and **gwsd=on** parameters are specified, the **scrn** parameter must be specified.

The specified adjacent point code cannot be the same as the self-ID destination point code of the STP.

The specified adjacent point code cannot be the same as any self-ID capability point codes of the STP.

If the system is configured for ANSI point codes, and the **nc=0** parameter is specified, then the value of the **ni** parameter must be 6 or greater.

The specified linkset name cannot already exist in the database.

The specified adjacent point code cannot be assigned to any other linkset.

Private (**p-**) and private and spare (**ps-**) point codes can be assigned only to IPGW linksets (the **ipgwapc=yes** parameter is specified).

The maximum number of linksets that can be defined in the system is 1024.

The specified screen set (**scrn** parameter) must exist in the database.

If the **gwsd=on** parameter is specified, the **gwsa=on** parameter must be specified.

If a destination point code matching the specified far-end point code exists, the far-end CLLI for the given linkset must match the destination identifier (DI) of that matching destination.

If the adjacent point code is in the X.25 domain, the **bei=yes** parameter must be specified or the **bei** parameter must be omitted from the command.

The specified adjacent point code cannot be referenced by an X.25 route that specifies the **lc2nm=yes** parameter.

The **slsci** parameter cannot be specified for X25 linksets.

The **mtprse** parameter can be specified only if the MTP Restart feature MTPRS (for ANSI) is turned on. The **rtrv-feat** command can be used to verify whether the feature is turned on (mtprs=yes in the output).

If the **ipgwapc=yes** parameter is specified or the **ipsg=yes** and the **adapter=m3ua** parameters are specified, then the **mtprse=yes** parameter cannot be specified.

The **asl8=yes** parameter can be assigned only to an ANSI linkset (a linkset containing an adjacent point code in the SS7 domain).

The **apcntype** parameter can be specified only for ITU-N and ITU-N24 linksets.

The Other CIC (Circuit Identification Code) Bit Used feature (SLSOCB) feature must be turned on before the **slsocbit** parameter can be specified.

The **slsocbit** parameter is valid only for ITU linksets.

The **slsrsb** parameter is valid only for ITU linksets.

The GSM Map Screening feature must be turned on (see the **enable-ctrl-feat** and **chg-ctrl-feat** commands) before the **gmscrn** parameter can be specified.

The **itutfr** parameter is valid only for

- ITU national linksets on the EAGLE 5 ISS STP
- ITU linksets on the IP⁷ Secure Gateway

The ITU National Duplicate Point Code (ITUDUPPC) feature must be turned on before the **multgc=yes** parameter can be specified.

The **multgc=yes** parameter is valid only for ITU-N or ITU-I point codes.

The **iptps** parameter must be specified for IPGWx linksets

The **iptps** parameter cannot be specified for linksets that are not IPGWx.

The specified **iptps** parameter value must be divisible by 10.

The total of the **iptps** parameter values for all linksets cannot exceed the maximum system limit of 500,000 TPS.

The **ipgwapc=yes** or the **ipsg=yes** parameter must be specified before the **lsusealm** parameter can be specified.

The **ipgwapc=yes** or the **ipsg=yes** parameter must be specified before the **slkusealm** parameter can be specified.

The Enhanced GSM Map Screening feature must be turned on before the **gmscrn=on** parameter can be specified for an ANSI linkset.

The **mtprse** parameter can be specified only if the MTP Restart feature ITUMTPRS (for ITU), is turned on. The **rtrv-feat** command can be used to verify whether the feature is turned on (itumtprs=yes in the output).

A point code cannot be assigned to a linkset as an APC if the point code has been provisioned with exception routes.

An APC cannot be assigned to an IPGWx linkset that is already assigned to a route involving another linkset.

The Origin-based SCCP Routing feature must be turned on before the **gtmode** parameter can have a value of **acddcd**, **cgacddcd**, **acdcgcd**, **acdcdeg**, **cgcd**, **deg**, or **cg**.

A new IPGW link set cannot be entered if it contains an APC that is already configured in a routing key. An SAPC cannot be added to an existing IPGW link set if the new SAPC is already configured in a routing key.

If APCN is specified for the Adjacent Point Code then the format of APCN must match the format dictated by the NPCFMTI parameter via the CHG-STPOPTS command.

The value of the **dpc/dpca/dpci/dpcn/dpcn24** parameter must exist in the Destination Point Code table.

The **gsmscrn** parameter can be specified only for ITU linksets.

The value specified for the **spc** parameter must be a full point code.

If the Multiple Linksets to a Single Adjacent Point Code (MLS) feature is enabled and turned on, then a maximum of **6** non-IPGW linksets can be created using the same adjacent point code.

The values specified by the **spc** and **apc** parameters must have the same network type.

The Multiple Linksets to a Single Adjacent Point Code (MLS) feature must be turned on before the **spc** parameter can be specified.

The value specified by the **spc** parameter must already exist in the SPC table.

The specified combination of the **apc** and **spc** parameters must be unique for each linkset.

The value specified for the **spc** parameter cannot already be specified as a secondary point code for an adjacent destination point code.

The Proxy Point Code feature must be enabled before the **lst=prx** parameter can be specified.

The Proxy Point Code feature must be enabled before the **ppc** parameter can be specified.

The value specified for the **ppc** parameter must be a full point code.

The **lst=prx** parameter must be specified before the **ppc** parameter can be specified. If the **lst=prx** parameter is specified, then the **ppc** parameter must be specified.

The values specified for the **apc** and **ppc** parameters must have the same network type.

The values specified for the **apc** and **ppc** parameters must have the same group code.

The **spc** and **ppc** parameters cannot be specified together in the command.

The **ppc** parameter cannot be specified for more than 10 linksets.

Two adjacent point codes cannot reference each other as proxy point codes.

Only one IPGWx linkset can be created for an adjacent destination point code.

The **apc** parameter and the **prx=yes** parameter must be specified before the **ppc** parameter can be specified.

If the **ipgwapc=yes** parameter is specified, then the **ppc** parameter cannot be specified.

If an IPGW linkset is used, then the **lst=prx** parameter cannot be specified.

If the **ipgwapc=yes** parameter is specified, then the **spc** parameter cannot be specified.

The **spc** and **ppc** parameters cannot be specified together in the command.

All of the linksets for an adjacent destination point code must be of the same type.

The specified combination of the **apc** and **ppc** parameters must be unique for each linkset.

The value specified for the proxy point code must be defined in the Destination table before the **lst=prx** parameter can be specified.

If multiple linksets are defined for the **apc** parameter, and if a proxy point code is defined for the **apc** parameter, then the first linkset defined in the **ent-ls** command must use the proxy point code.

The AMGTT feature or the AMGTT CgPA Upgrade feature must be turned on before the **cggmod** parameter can be specified.

The **ipgwapc=yes** and the **ipsg=yes** parameter cannot be specified together in the command.

The **ipsg=yes** parameter must be specified before the **adapter** parameter can be specified.

The **ipsg=yes** and the **adapter=m3ua** parameter must be specified before the **asnotif** parameter can be specified.

The **ipsg=yes** and the **adapter=m3ua** parameters must be specified before the **rcontext** parameter can be specified.

The **ipgwapc=yes** parameter must be specified before an invalid point code (ANSI network = 0) can be specified as an APC.

If the **ipsg=yes** parameter is specified, then the **slktps** parameter must be specified.

The **ipsg=yes** parameter must be specified before the **slktps** parameter can be specified.

The **ipsg=yes** and **adapter=m3ua** parameters must be specified before the **lst=a** parameter can be specified.

A maximum of one IPGW linkset or a maximum of 6 of any other linksets are allowed between any APC and the EAGLE 5 ISS.

If the **ipsg=yes** and **adapter=m3ua** parameters are specified, then the **multgc=yes** parameter cannot be specified.

The ISLSBR feature must be enabled before the **islsrsb** parameter can be specified.

Notes

Of the 1024 maximum linksets supported, up to 255 of the linksets can be gateway linksets.

The system supports a maximum of 700 links. If more than 700 linksets are defined, a maximum of 700 of the defined linksets can be in use at any one time.

The links that directly connect the system with an adjacent node are grouped into one or more linksets. A linkset can contain up to 8 (international standards) or 16 (national standards) signaling links, depending on how the system was configured when the network was created.

Each linkset must be assigned the same physical links at both ends of the link (local and adjacent signaling points) and each link must be assigned the same link number.

Signaling link acknowledgments (SLTA) are the same type of maintenance message as the SLTMs received on the link.

If the **gwsa=off** and **gwsn=off** parameters are specified, all MSUs are passed.

If the **gwsa=off** and **gwsn=off** parameters are specified for all linksets, gateway screening and the GWS redirect function for the DTA feature are disabled.

If the **gwsa=off** and **gwsn=on** parameters are specified, all MSUs pass, but MRNs are generated if an MSU matches a screening condition.

If the **gwsa=on** and **gwsn=off** parameters are specified, MSUs are screened but messages are not generated.

If the **gwsa=on** and **gwsn=on** parameters are specified, MSUs are screened and MRNs are generated at the rate of one MRN every 20 seconds per link.

If the **asl8=yes** parameter is specified with the **lst=a** parameter (a linkset containing access signaling links), this indicates that the originator of the MSUs is generating 8-bit SLSs. For other linkset types, the **asl8=yes** parameter indicates that the adjacent STP is converting 5-bit SLSs to 8-bit SLSs. The SLS in MSUs received by the system on a linkset that has the **asl8=yes** parameter assigned to it will not be converted. These MSUs are assumed to contain 8-bit SLSs.

The Network Indicator Spare (**nis**) parameter can be specified only for ANSI and ITU-N links.

The **mtprse** parameter value can be specified independently of the value specified on the **mtprsi** parameter of the **chg-stpopts** command.

The MTP restart option (**mtprse**) is not a valid option on TCP/IP point-to-multipoint links (DCM cards equipped as SS7IPGW links).

When two linksets are used as a combined linkset, each linkset should have the same **slsci** and **asl8** values. MTP restart provides an orderly process for bringing signaling links back into service after the system has been isolated and restarted. A greater preference is given to restoring the STP to network service in an orderly fashion than to the speed of recovery. The time required is system dependent; Table 5-47 provides examples of some approximate times:

Table 5-47. Link Alignment Performance

System Size (Number of LIMs)	Link Alignment Delay (seconds)
up to 64	62
64 to 127	97
128 to 191	132
more than 191	167

The **slrsrb** parameter alone does not provide an even distribution of ITU-ISUP messages across all links within a linkset. The system uses all four bits of the SLS to determine the actual link to route messages. Because the static bit is simply rotated within the SLS, all possible values of the SLS field are still not realized. The **slsobit** parameter must also be specified to provide an even distribution across all links within the linkset. If both parameters are specified for a given linkset, the SLS field is processed in the following order.

1. The SLS is modified using the Other CIC Bit option.
2. The modified SLS is modified again using the Rotated SLS Bit option.
3. The modified SLS is used by the existing linkset and link selection algorithms to select a link
4. The ISUP message is sent out the link containing the original, unmodified SLS field.

If the ITU National Duplicate Point Code (ITUDUPPC) feature is turned on, for each group that is defined, a separate ITU national C linkset must be provisioned. The C linkset is used as the alternate route for point codes in the group.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (**s-**) and the private and spare point code subtype prefix (**ps-**). All of the point code types support the private (internal) point code subtype prefix (**p-**).

The ITU National and ITU National China Adjacent Point Code types indicate the format that is used for changeover and changeover acknowledgement messages. China specifies a 16-bit field for data in changeover messages. The FSN occupies the first 12 bits. The trailing 4 bits are spare and are

coded as 0. ITU uses a 24-bit field for data in the extended changeover/changeover acknowledgement messages. The FSN is encoded in the first 12 bits. The last 12 bits of the field are spare and are coded as zero.

The **randsls** parameter value applies to SCCP ITU-T messages and Class0 and ISUP ANSI messages when random SLS generation is set to occur on a per linkset basis (the **randsls=perls** parameter is specified in the **chg-stpopts** command).

If the **randsls=perls** parameter is specified in the **chg-stpopts** command, it is recommended that the linksets in a combined linkset be provisioned with the same **randsls** value to avoid undesired SLS distribution.

The value specified for the **ppc** parameter must be a full point code. Cluster point codes and private point codes are not supported.

Invalid point codes (ANSI network = 0) can be used for the adjacent point code of an IPGWx linkset. Private point codes (**p-**) can be used for either IPGWx linksets, as either adjacent point codes (**ent-ls:apc=xxx**) or internal point codes (**ent-rmt-appl:ipc=xxx**). Ordinary point codes can be used in all cases as APCs or IPCs.

If the ISLSBR feature is turned on, and Incoming SLS Bit Rotation is applied to an MSU, then the outgoing SLS bit rotation is not applied for that MSU. If the ISLSBR feature is turned off, or Incoming SLS Bit Rotation is not applied to an MSU, then the outgoing SLS bit rotation is applied for that MSU.

The **randsls** parameter is applied on an incoming linkset for ANSI messages and on an outgoing linkset for ITU messages.

Output

```
ent-ls:lsn=lsa:lsta:apci=1-1-1
tekelecstp 06-08-22 12:14:11 EST EAGLE 36.0.0
Link set table is (1 of 1024) 1% full.
ENT-LS: MASP A - COMPLTD

ent-ls:apc=2-2-1:ppc=1-1-1:lsn=ls1:lsta:prx
tekelecstp 07-05-17 18:58:47 EST EAGLE 37.5.0
Link set table is (11 of 1024) 1% full.
ENT-LS: MASP A - COMPLTD

;

ent-ls:lsn=ls212:apc=2-1-2:lsta:cggtmod=yes
tekelecstp 08-02-24 14:34:21 EST EAGLE 38.0.0
Link set table is (2 of 1024) 1% full.
ENT-LS: MASP A - COMPLTD

;
```

ent-map

Enter Mate Applications

Use this command to create new entries in the MAP table, which allow the assignment of mated applications and Alternate RI Mate searches for use with SCCP network management. A mated application is used if the local application becomes unavailable. An Alternate RI Mate is used if all mated applications within a MAP Set become unavailable or congested.

NOTE: A MAP set is a logical grouping of a set of PC/SSNs that already exist in the EAGLE 5 ISS MAP table. The Flexible GTT Load Sharing (FGTTLS) feature allows a PC/SSN

combination to be part of more than one load-sharing group, with each PC/SSN combination defined by a different MAP set.

NOTE: If the FGTTLS feature is enabled, then all existing entries in the MAP table and all existing GTA translations in the GTT table with *ri=ssn* are stored in default MAP sets. Additional MAP sets can be provisioned, and GTT entries can be associated to the MAP sets.

NOTE: The GTT Load Sharing with Alternate Routing Indicator (GTT LS ARI) feature must be enabled to provision Alternate RI Mates.

Keyword: ent-map

Related Commands: chg-map, dlt-map, rtrv-map

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:pc= (mandatory)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: pca

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001–005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006–255.

The point code 000-000-000 is not a valid point code.

:pc/pca/pci/pcn/pcn24= (mandatory)

Primary remote point code.

:pci= (mandatory)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

:pcn= (mandatory)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: s-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:pcn24= (mandatory)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

:ssn= (mandatory)

Subsystem number. This parameter identifies the application's subsystem number. This attribute is composed of the decimal representation of the 1-byte field used in the SS7 protocol.

Range: 2-255

:grp= (optional)

Concerned point code broadcast list (CSPC) group name. This parameter specifies the name of a group of point codes that should be notified of the subsystem status. A different CSPC group can be assigned to each mated PC/SSN. For ANSI, the EAGLE 5 ISS broadcasts SSP or SSA to the mate subsystem only if the mate's point code is provisioned as part of the CSPC group to receive an SSP or SSA. This parameter must be provisioned for a node if the node is to receive SSP or SSA broadcasts, even if the node is a mated application.

Range: ayyyyyy

1 alphabetic character followed by up to 7 alphanumeric characters

Default: No broadcast list for this mated application.

:mapset= (optional)

MAP Set ID.

This parameter is mandatory when the Flexible GTT Loadsharing feature is enabled.

Range: dflt, new

Default: dflt - If the FGTTLS feature is not enabled, the default value is dflt.

:materc= (optional)

Mate relative cost. This parameter specifies the RC assigned to the mate PC/SSN that is being added to the entity set. The EAGLE 5 ISS determines the multiplicity mode based on the relative costs (the **rc** and **materc** parameters) of the subsystem.

Range: 0-99

Default: 50

:mpc= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: mpca

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001–005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006–255**.

The point code **000-000-000** is not a valid point code.

Default: **000-000-000**

:mpc/mpca/mpci/mpcn/mpcn24= (optional)

Mate remote point code.

:mpci= (optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

Default: **0-000-0**

:mpcn= (optional)

ITU national point code with subfield ITU number (*nnnnn*). The *prefix* subfield indicates a spare point code.

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

Default: **00000**

:mpcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000–255**

ssa—**000–255**

sp—**000–255**

Default: **000-000-000**

:mrc= (optional)

Message routing under congestion. This parameter defines the handling of Class 0 messages during congestion conditions.

Range: **yes, no**

Default: **yes**—if ANSI
 no—if ITU

:mrnpc= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Synonym: **mrnpca**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

Default: **000-000-000**

:mrnpc\mrnpca\mrnpca\mrnpci\mrnpcn\mrnpcn24= (optional)

Alternate RI Mate point code.

:mrnpci= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

Default: **0-000-0**

:mrnpcn= (optional)

ITU national point code with subfield ITU number (*nnnnn*). The *prefix* subfield indicates a spare point code.

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

Default: **00000**

:mrnpcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

Default: 000-000-000

:mrnset= (optional)

Alternate RI Mate MRN Set ID. This parameter specifies the MRN Set where the Alternate RI Mate search is performed.

Range: 1-6000 **dflt**

dflt—default MRN Set

If the **mrnpc** parameter is specified, and the **mrnset** parameter is not specified, then the value for the **mrnset** parameter is automatically set to **dflt**.

:mssn= (optional)

Mate subsystem number. This parameter specifies the mate application's subsystem number. This attribute is the decimal representation of the one-byte field used in the SS7 protocol.

Range: 2-255

Default: Parameter is not used

:mwt= (optional)

Mate point code weight. This parameter specifies the weight assigned to the mate PC/SSN that is being added to a weighted entity set. The Weighted GTT Loadsharing feature must be turned on before this parameter can be specified.

The **mwt** parameter can be specified only if the **wt** parameter is specified, and the **rc** parameter value equals the **materc** parameter value.

Range: 1-99

:rc= (optional)

Relative cost. The EAGLE 5 ISS determines the multiplicity mode based on the relative costs (the **rc** and **materc** parameters) of the subsystem. (See Notes for additional information on multiplicity modes.)

Range: 0-99

Default: 10

:srm= (optional)

Subsystem routing messages. This parameter specifies whether subsystem routing messages (SBR, SNR) are transmitted between the mated applications.

Range: yes, no

Default: yes—if ANSI
no—if ITU

:sso= (optional)

Subsystem status option. This parameter specifies whether or not the PC/SSN is to initiate a subsystem test when a RESUME is received for the PC.

Range: on, off

Default: off

:thr= (optional)

Threshold. This parameter specifies the in-service threshold assigned to each PC/SSN in a weighted entity set or RC group. The Weighted GTT Loadsharing feature must be turned on before this parameter can be specified.

If the **thr** parameter is not specified, a value of 1% is assigned to each weighted PC/SSN.

Range: 1-100

:wt= (optional)

Weight. This parameter specifies the weight assigned to the primary PC/SSN that is being added to the weighted entity set. The Weighted GTT Loadsharing feature must be turned on before this parameter can be specified.

The **wt** parameter can be specified only if the **mwt** parameter is specified, and the **rc** parameter value equals the **materc** parameter value.

Range: 1-99

Example

As shown in the following example, the **rc** parameter is not required for a solitary pc/ssn pair. If the **rc** parameter is not specified, the relative cost defaults to 10.

ent-map:pc=1-1-1:ssn=10:grp=xyz

The following example enters both 1-1-0/10 and 1-1-1/10 into the map table. both the **rc** and **materc** parameter are required for this command, which defines a map group.

ent-

map:pc=1-1-0:ssn=10:rc=10:mpc=1-1-1:mssn=10:materc=20:grp=xyz:srm=on

The following example enters a solitary point code in the MAP table with the Subsystem Status Option (sso) set to on.

ent-map:pc=1-1-3:ssn=20:grp=abc:sso=on

The following commands enters a solitary point code in the MAP table with the Subsystem Status Option (sso) set to off.

ent-map:pc=2-2-2:ssn=20:grp=abc:sso=off

ent-map:pc=2-2-3:ssn=20:grp=abc

The following example sets the Subsystem Status Option (sso) set to on for the primary and mate.

ent-map:pc=1-1-4:ssn=10:rc=10:mpc=1-1-1:mssn=10:materc=20:sso=on

The following example sets the Subsystem Status Option (sso) set to off (default) for the primary and mate:

ent-map:pc=1-1-5:ssn=10:rc=10:mpc=1-1-2:mssn=10:materc=20:sso=off

The following command enters a solitary point code in the MAP table with the Subsystem Status Option (sso) set to off (the default).

ent-map:pc=1-1-6:ssn=10:rc=10:mpc=1-1-7:mssn=10:materc=20

The following example creates a new MAP Set with Alternate RI Mate 1-1-3/1.

ent-

map:pc=1-1-1:ssn=15:rc=10:mpc=1-1-2:mssn=25:materc=20:mapset=new:mrnset=1:mrnpc=1-1-3

The following example creates a new MAP set, and enters 1-1-1/10 and 1-1-2/20 into the newly created MAP set.

ent-

map:pc=1-1-1:ssn=10:rc=10:mpc=1-1-2:mssn=20:materc=20:mapset=new

The following example enters both 1-1-1/15 and 1-1-2/25 into the default MAP set.

ent-

map:pc=1-1-1:ssn=15:rc=10:mpc=1-1-2:mssn=25:materc=20:mapset=flt

The following example creates a new MAP set and enters a solitary PC/SSN value of 1-1-1/10.

ent-map:pc=1-1-1:ssn=10:mapset=new

The following example enters a solitary PC/SSN of 1-1-1/15 into the default MAP set.

```
ent-map:pc=1-1-2:ssn=15:mapset=df1t
```

The following example creates a new MAP set and enters a solitary PC/SSN 1-1-1/10 with the subsystem option ON. It specifies the sso=on parameter for all instances of PC/SSN 1-1-4/10.

```
ent-map:pc=1-1-1:ssn=10:sso=on:mapset=new
```

The following example enters a solitary PC/SSN of 1-1-1/15 into the default MAP set with the subsystem option ON. The sso=on parameter is specified for all instances of PC/SSN 1-1-4/10.

```
ent-map:pc=1-1-3:ssn=15:sso=on:mapset=df1t
```

The following examples create a weighted shared PC/SSN pair.

```
ent-  
map:pc=1-1-1:ssn=10:rc=20:wt=30:mpc=1-2-1:mssn=10:materc=20:mwt=2  
0
```

```
ent-  
map:pc=1-1-1:ssn=10:rc=20:wt=30:mpc=1-2-1:mssn=10:materc=20:mwt=2  
0:thr=40
```

The following example creates a new MAP Set with a different ITU network type point code for the Alternate RI Mate PC.

```
ent-  
map:pci=1-001-1:ssn=15:rc=10:mpci=1-001-2:mssn=25:materc=20:mapse  
t=new:mrnpcn=00126:mrnset=2
```

Dependencies

The PC/SSN pair cannot already exist in the MAP table.

The specified MPC/MSSN pair cannot already exist in the MAP table.

The **apca** and **pcn24** parameters cannot be specified for the same MAP set. The **pci** and **pcn** parameters cannot be specified for the same MAP set if the MAP set contains a true point code.

If a subsystem is configured for a SSN value in the SS-APPL table, then the specified MAP table entry for that subsystem must be a valid point code type for that subsystem. The following point code types are not valid for the indicated subsystems:

- If the subsystem number is configured for the INP subsystem in the SS-APPL table, then the True Point code cannot be an ITU-I or ANSI point code.
- If the subsystem number is configured for the EIR subsystem in the SS-APPL table, then the True Point code cannot be an ANSI point code.
- If the subsystem number is configured for the ATINPQ or VFLEX subsystem in the SS-APPL table, then the True Point code can not be an ITU-N24 point code.

If the ANSI-ITU-China SCCP Conversion feature is not turned on, the network type of the CPC broadcast group must match the network type of the PC. If the ANSI-ITU-China SCCP Conversion feature is turned on, network types of the CPC broadcast group and the PC network types do not have to match.

If the **pci**, **pcn**, or **pcn24** parameter is specified, then the **srn=yes** parameter cannot be specified.

The primary remote point code must already exist in the Route table, as a destination in the ordered route entity set, or in a cluster destination for which ordered routes are specified.

If a CSPP broadcast list group name is specified, it must already exist.

A maximum of 1024 unique remote point codes are allowed.

A maximum of 12 SSNs per remote point code can be entered.

The primary subsystem DPCs must be full point codes.

The mate subsystem DPCs must be full point codes.

The LNP or V-Flex feature must be turned on, or the ATINP feature must be enabled before a value that is a true point code can be specified for the **pca/mpca** parameter.

The AINPQ, EIR, INP, or V-Flex feature must be turned on, or the ATINP feature must be enabled before a value that is a true point code can be specified for the **pcn/mpcn** parameter.

The EIR or V-Flex feature must be turned on, or the ATINP feature must be enabled before a value that is a true point code can be specified for the **pci/mpci** parameter.

If the **mpc/mpca/mpci/mpcn/mpcn24** parameter is specified, then the value must exist in the Routing table.

The **srm** and **mrc** parameters cannot be specified for a solitary or shared PC/SSN entry.

If the **mssn** or **materc** parameter is specified, then the **mpc** parameter must be specified.

If the **pc** parameter value is an EAGLE 5 ISS true point code, the subsystem must have a lower relative cost than all other mated subsystems in the group.

The **sso** parameter cannot be specified with a point code value that is the system true point code.

A true point code cannot be routed to itself.

The **mpc** and **mssn** parameters cannot have the same values as the **pc** and **ssn** parameters.

The point code (**pc**) must already exist in the Concerned Point Code (CSPC) group.

The number of MPC Subsystem entries must not exceed the table capacity.

If the Flexible GTT Load Sharing feature is not enabled, then the **mapset** parameter cannot be specified. If the Flexible GTT Load Sharing feature is enabled, then the **mapset** parameter must be specified.

The EAGLE 5 ISS True PC can be provisioned only in the default MAP set.

The Weighted GTT Loadsharing feature must be turned on before the **wt**, **mwt**, or **thr** parameters can be specified.

If the **thr** parameter is specified, the **wt** and **mwt** parameters must be specified.

If the **mpc** parameter is specified, the **rc** parameter must be specified.

The **wt** and **mwt** parameters must be specified together in the same command.

If the **materc** parameter value equals the **rc** parameter value, a Loadshared Group is indicated, and the **rc**, **mpc materc**, and **mwt** parameters must be specified.

If the **chg-sid:pctype=ansi** command is entered, a value of *ni=000* cannot be specified. If the **chg-sid:pctype=ansi** command is entered, and a value of *ni=001 – 005* is specified, a value of *nc=000* cannot be specified.

Both OAM cards must be running GPSM II.

If the **mpc** parameter value is a true point code, the subsystem must have a lower RC than all other mated subsystems in the entity set.

One or more point codes in the command will exceed the maximum number of entries in the MAP table.

The maximum number of possible entries in the MAP table has been reached for the specified True Point code.

Table 5-48. Maximum limit of True PCs entries

True Point Code Type	Maximum limit in MAP table
ANSI	1 (With LNP) 2 (With ATINPQ and V-FLEX) (LNP is mutually exclusive with ATINPQ, EIR, INP, and VFLEX)
ITU-I	3 (For ATINPQ, EIR, and V-FLEX)
ITU-N	4 (For ATINPQ, EIR, INP, and V-FLEX)

If the resulting multiplicity mode (MULT field) is SOL (Solitary) or SHR (Loadsharing), the **srn** parameter and the **mrc** parameter cannot be specified.

If the **mwt** parameter is specified, the **mpc** parameter must be specified.

If the **mpc** parameter is specified, the **mssn** and **materc** parameters must be specified.

The entity set being created must be either solitary or dominant to use the true point code as a point code.

If the **thr** parameter is specified, the **rc1**, **rc2**, **rc3**, and **rc4** parameters must be of equal value.

If the **mpc** parameter is specified, then the **mssn** parameter must be specified.

SRM=YES cannot be entered with ITU point codes.

If the **mpc** or **mssn** parameter is specified, then the **materc** parameter must be specified.

If the **pc/ssn** parameters and the **mpc/mssn** parameters are specified, then the **rc** parameter must be specified.

If the **pcn** or **mpcn** parameter is specified, then the format of the parameter must match the format dictated by the **chg-stpopts:npcfmti** command.

TF feature must be on when administering a true point code(DBS 1.0 only).

True PC cannot be routed to itself.

The Spare Point Code support feature must be enabled to allow provisioning of an ITU-I or ITU-N spare point code.

The True Point Code can be provisioned only in default MAPSET.

Unable to access database. Severe database failure.

Failed reading SS APPL table.

The values specified for the **pc** and **mpc** parameters cannot be associated with proxy point codes.

If the **mrnset** parameter is specified, then the **mrnpc** parameter must be specified.

The GTT LS ARI feature must be enabled before the **mrnset** or **mrnpc** parameters can be specified.

The value specified for the **mrnpc**, **mrnpca**, **mrnpci**, **mrnpcn**, or **mrnpcn24** parameter must be full point code.

The point codes and alternate RI Mate point codes must have the same network type. Table 5-22 displays the allowed PC and Alternate RI Mate PC combinations.

The value specified for the **mrnset** parameter must already exist in the MRN table.

The MRN table is corrupt or cannot be found.

The value specified for the **mrnpc** parameter must already exist in the specified MRN Set.

The **mrnset** parameter cannot be specified if the MAP Set specified by the **mapset** parameter contains a True Point Code.

Notes

Up to 32 PC/SSN pairs can be entered into a mated PC/SSN group.

For the MAP commands, an entity set consists of a group of PC/SSNs that are used for traffic distribution, and an RC group consists of PC/SSNs within an entity set that have the same RC. In loadsharing mode, an entity set contains 1 RC group. In combined/dominant loadsharing mode, an entity set can contain multiple loadsharing groups.

The EAGLE 5 ISS supports the following modes for nodes/subsystems:

- When a PC/SSN pair is not replicated, the pair is in *solitary* mode. The subsystem acts as the only application, with no backup. If this subsystem fails, messages routed to it are discarded and SCCP management returns “Subsystem Unavailable” messages to the originator.
- A group of replicated PC/SSN pairs are in *dominant* mode if each PC/SSN pair in the group has a unique RC. The specified subsystem with the lowest RC acts as the primary subsystem, while the mate subsystem acts as a backup. In the event of congestion, messages route to the mate subsystem. When the congestion subsides, messages are again routed to the primary (dominant) subsystem.
- A group of replicated PC/SSN pairs are in *load sharing* mode if each PC/SSN pair in the group has the same RC. All messages are evenly distributed at the SCCP level to all nodes/subsystems in the group. In the event of congestion or failure, the non-affected subsystem assumes the load of its failed or congested mate.
- The *combined load sharing/dominant* mode supports a combination of load sharing and dominant mode. A group of PC/SSN pairs are in combined load sharing/dominant mode when at least two of the PC/SSN pairs have the same RC and another node subsystem in the group has a different RC. A combination of node accessibility and RC determines the preferred PC/SSN.

If the XMAP feature is enabled, the MAP table can have up to either 2000 or 3000 entries, depending on the controlled feature Part Number that is enabled. If XMAP is not enabled, the MAP table can contain up to 1024 user entries.

The **sso** parameter changes the initialization of the subsystem status (“prohibited” or “allowed”) for PC/SSN MAP entries. The EAGLE 5 ISS previously marked the subsystem status “allowed” for each PC/SSN entry. The **sso** parameter marks the subsystem status “prohibited” for each new entry that has **sso=on**. This causes the EAGLE 5 ISS to generate an SST to the remote point-code when an MTP-RESUME is received. Upon reception of an SSA, the subsystem status is marked “allowed”.

When the ANSI-ITU-China SCCP Conversion feature is turned on, the Concerned Point Code (CSPC) Group’s network type can be of a different network than the mated application’s network type. For example, the mated application’s network type could be ANSI and the CSPC Group could be ITU or mixed with ANSI, ITU, and ITUN concerned point codes.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (**s-**).

When the Flexible GTT Load Sharing feature is on, MAP load sharing sets are supported. Each set is identified by the **mapset** parameter.

When the Weighted GTT Loadsharing feature is turned on, weighted entity sets and RC groups are supported, and threshold values can be assigned to each PC/SSN.

When the GTT Load Sharing with Alternate Routing Indicator feature is enabled, an Alternate RI Mate can be provisioned.

Output

```

ent -
map:pc=1-1-1:ssn=10:rc=10:mpc=1-1-2:mssn=20:materc=20:mapset=new
tekelecstp 08-10-22 11:22:28 EST EAGLE 39.0.0
ent-map:pc=1-1-1:ssn=10:rc=10:mpc=1-1-2:mssn=20:materc=20:mapset=new
Command entered at terminal #4.

New MAPSET Created : MAPSETID = 362
ENT-MAP: MASP A - COMPLTD
;

ent-map:pc=1-1-1:ssn=10:rc=10:mapset=df1t:mrnset=1:mrnpc=1-1-2
tekelecstp 08-12-12 11:22:28 EST EAGLE 40.1.0
ent-map:pc=1-1-1:ssn=10:rc=10:mapset=df1t:mrnset=1:mrnpc=1-1-2
Command entered at terminal #4.
ENT-MAP: MASP A - COMPLTD
;

```

ent-mrn

Enter Mated Relay Node

Use this command to assign point codes and Alternate RI Mates in the Mated Relay Node (MRN) table. The Intermediate GTT Loadsharing feature must be on before this command can be entered. The GTT Load Sharing with Alternate Routing Indicator (GTT LS ARI) feature must be enabled to provision Alternate RI Mates.

If the Flexible GTT Loadsharing feature is enabled, use this command to create a new MRN set, or to add entries to an existing MRN set in the MRN table. If the Flexible GTT Loadsharing feature is turned on, then MRN sets are used.

NOTE: If only the Intermediate GTT Loadsharing feature is turned on, the MRN table can contain a maximum of 3000 entries. If the Intermediate GTT Loadsharing feature is on and the Flexible GTT Loadsharing feature is enabled, the MRN table can contain a maximum of 6000 entries.



CAUTION: If any entries are provisioned in the SCCP-SERV table, the maximum number of entries that the MRN table can contain is reduced by that amount. Check the rtrv-sccp-serv command output to see if entries exist in the SCCP-SERV table.

NOTE: An MRN set is a logical grouping of PCs that already exist in the EAGLE 5 ISS MRN table. The Intermediate GTT Loadsharing feature allows PCs to be part of more than one load-sharing group, with each PC defined by a different MRN set. If the Intermediate GTT Loadsharing feature is enabled, then all existing entries in the MRN table and all existing GTA translations in the GTT table with ri=gt are stored in default MRN sets. Additional MRN sets can be provisioned, and GTT entries can be associated to the MRN sets.

Keyword: ent-mrn

Related Commands: chg-mrn, dlt-mrn, rtrv-mrn

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

If a point code is being added to an existing weighted entity set, and the **dflwt** parameter is not specified, the **wt1/wt2/wt3/wt4** parameter must be specified.

The **wt1/wt2/wt3/wt4** parameter can only be specified if at least two of the **rc/rc1/rc2/rc3/rc4** parameters are equal, creating a weighted entity set.

:pc= (mandatory)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: **pca**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001-005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006-255**.

The point code **000-000-000** is not a valid point code.

:pc/pca/pci/pcn/pcn24= (mandatory)

Post-GTT-translated point code.

:pci= (mandatory)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

:pcn= (mandatory)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:pcn24= (mandatory)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:dflwt= (optional)

Default weight. This parameter specifies the weight to be assigned to a specified PC that is not assigned a weight with the **wt/wt1/wt2/wt3/wt4** parameter.

If a PC weight is specified with the **wt/wt1/wt2/wt3/wt4** parameter and the **dflwt** parameter is specified, the default weight is ignored, and the PC is assigned the weight specified by its respective weight parameter.

Range: **1-99**

:mappc= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: **mappca**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

Default: **000-000-000**

:mappc\mappca\mappci\mappcn\mappcn24= (optional)

Alternate RI Mate point code.

:mappci= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

Default: **0-000-0**

:mappcn= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-**, **0-16383**, **aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

Default: **00000**

:mappcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

Default: **000-000-000**

:mapset= (optional)

Alternate RI Mate MAP Set ID. This parameter specifies the MAP Set where the Alternate RI Mate search is performed.

Range: **1-36000 dflt**

dflt—default MAP Set

If the **mappc** and **mapssn** parameters are specified, and the **mapset** parameter is not specified, then the **mapset** parameter is automatically set to a value of **dflt**.

:mapssn= (optional)

Alternate RI Mate subsystem number.

Range: **2-255 ***, **none**

Default: **none**

:mrnset= (optional)

MRN set ID.

Range: **1-3000 dflt, new**

dflt—Default MRN set.

new—Create a new MRN set

:pc1= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Synonym: **pca1**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001–005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006–255**.

The point code **000-000-000** is not a valid point code.

:pc1/pca1/pci1/pcn1/pcn241= (optional)

Alternate post-GTT-translated point code.

:pc2= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Synonym: **pca2**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001–005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006–255**.

The point code **000-000-000** is not a valid point code.

:pc2/pca2/pci2/pcn2/pcn242= (optional)

Alternate post-GTT-translated point code.

:pc3= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Synonym: **pca3**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001–005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006–255**.

The point code **000-000-000** is not a valid point code.

:pc3/pca3/pci3/pcn3/pcn243= (optional)

Alternate post-GTT-translated point code.

:pc4= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Synonym: **pca4**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001–005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006–255**.

The point code **000-000-000** is not a valid point code.

:pc4/pca4/pci4/pcn4/pcn244= (optional)

Alternate post-GTT-translated point code.

:pci1= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, (*prefix-zone-area-id*).

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

:pci2= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

:pci3= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

:pci4= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-
zone—0-7
area—000-255
id—0-7

The point code **0-000-0** is not a valid point code.

:pcn1= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: s-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-
nnnnn—0-16383
gc—aa-zz
m1-m2-m3-m4—0-14 for each member; values must sum to 14

:pcn2= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: s-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-
nnnnn—0-16383
gc—aa-zz
m1-m2-m3-m4—0-14 for each member; values must sum to 14

:pcn241= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255
ssa—000-255
sp—000-255

:pcn242= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

:pcn243= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

:pcn244= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

:pcn3= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: s-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:pcn4= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: s-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:rc= (optional)

Relative cost. This parameter specifies the relative cost of the route for the primary PC.

Range: **0-99**

:rc1= (optional)

Relative cost 1. This parameter specifies the relative cost of the route for mate PC 1.

Range: **0-99**

:rc2= (optional)

Relative cost 2. This parameter specifies the relative cost of the route for mate PC 2.

Range: **0-99**

:rc3= (optional)

Relative cost 3. This parameter specifies the relative cost of the route for mate PC 3.

Range: **0-99**

:rc4= (optional)

Relative cost 4. This parameter specifies the relative cost of the route for mate PC 4.

Range: **0-99**

:thr= (optional)

Threshold. This parameter specifies the in-service threshold of all PCs in a weighted entity set or RC group. The Weighted GTT Loadsharing feature must be turned on before this parameter can be specified.

If a threshold value is not specified when creating a new RC group in an existing entity set, the new RC group is assigned a threshold value of **1%**.

Range: **1-100**

:wt= (optional)

Weight. This parameter specifies the weight assigned to the primary PC. The Weighted GTT Loadsharing feature must be turned on before this parameter can be specified.

If PCs are being added to an existing entity set, the **wt** parameter cannot be specified. If a new entity set is being created, the **wt** parameter can only be specified if at least two of the specified RC values are equal, which creates a weighted entity set.

Range: **1-99**

:wt1= (optional)

Weight 1. This parameter specifies the weight assigned to the mate PC 1 that is being added to the weighted entity set. The Weighted GTT Loadsharing feature must be turned on before this parameter can be specified.

Range: **1-99**

:wt2= (optional)

Weight 2. This parameter specifies the weight assigned to the mate PC 2 that is being added to the weighted entity set. The Weighted GTT Loadsharing feature must be turned on before this parameter can be specified.

Range: **1-99**

:wt3= (optional)

Weight 3. This parameter specifies the weight assigned to the mate PC 3 that is being added to the weighted entity set. The Weighted GTT Loadsharing feature must be turned on before this parameter can be specified.

Range: **1-99**

:wt4= (optional)

Weight 4. This parameter specifies the weight assigned to the mate PC 4 that is being added to the weighted entity set. The Weighted GTT Loadsharing feature must be turned on before this parameter can be specified.

Range: 1-99

Example

The following example enters point code 1-1-0 into the MRN table with a relative cost of 10 and associates point code 1-1-1 with it as a point code with a relative cost of 20.

ent-mrn:pc=1-1-0:rc=10:pc1=1-1-1:rc1=20

The following example updates the group containing point code 1-1-0 in the MRN table, to add point code 1-1-2 with relative cost of 20 and point code 1-1-10 with relative cost of 30 to the group.

ent-mrn:pc=1-1-0:rc=10:pc1=1-1-1:rc1=20:pc2=1-1-10:rc2=30

The following examples include spare point codes.

ent-mrn:pci=s-2-2-1:rc=10:pci1=s-2-2-2:rc1=11:pci2=2-100-1:rc2=12

ent-mrn:pcn=s-1-1-1-123-aa:rc=1:pcn1=1-1-1-235-aa:rc1=2:pcn2=s-1-1-1-235-aa:rc2=3

ent-mrn:pc=1-1-1:rc=10:pc1=1-1-2:rc1=10:mrnset=dflt

ent-

mrn:pc=1-1-1:rc=10:pc1=1-1-2:rc1=20:pc2=1-1-3:rc2=30:apc3=1-1-4:rc3=40:apc4=1-1-5:rc4=50:mrnset=new

ent-mrn:pc=1-1-3:pc1=1-1-6:rc1=60:pc2=1-1-7:rc2=70:mrnset=111

The following examples create a new weighted entity set.

ent-mrn:pc=1-1-0:rc=10:wt=30:pc1=1-1-1:rc1=10:wt1=10

ent-mrn:pc=1-1-0:rc=10:wt=30:pc1=1-1-1:rc1=10:wt1=10:thr=50

ent-

mrn:pc=1-1-0:rc=10:pc1=1-1-1:rc1=10:pc2=1-3-2:rc2=20:wt2=30:pc3=1-10-2:rc3=20:dfltwt=20

ent-

mrn:pc=1-1-0:rc=10:pc1=1-1-1:rc1=10:wt1=30:pc2=1-3-2:rc2=10:dfltwt=20:thr=60

ent-

mrn:pc=1-1-0:pc1=2-2-2:rc1=20:pc2=1-1-10:rc2=30:pc3=1-3-2:rc3=10:wt3=20:dfltwt=30

ent-

mrn:pc=1-1-0:pc1=2-2-2:rc1=20:wt1=10:pc2=1-1-10:rc2=20:wt2=40:thr=30

ent-

mrn:pc=1-1-0:pc1=2-2-2:rc1=20:wt1=40:pc2=1-1-10:rc2=20:pc3=1-3-2:rc3=20:dfltwt=25:thr=30

ent-mrn:pc=1-1-0:pc1=2-2-2:rc1=20:wt1=10:pc2=1-1-10:rc2=30:wt2=40

ent-

mrn:pc=1-1-0:rc=10:pc1=1-1-1:rc1=20:pc2=1-1-10:rc2=30:mapset=1:mappc=2-1-1:mapssn=*

```
ent -
mrn:pc=1-1-0:rc=10:pc1=1-1-1:rc1=20:pc2=1-1-10:rc2=30:mappc=2-1-1
:mapssn=*
ent -
mrn:pci=1-001-0:rc=10:pci1=1-001-1:rc1=20:pci2=1-001-10:rc2=30:ma
pset=1:mappcn=00126:mapssn=12
```

Dependencies

The Intermediate Global Title Translation Loadsharing feature must be turned on before this command can be entered.

The **apca** and **pcn24** parameters cannot be specified for the same MRN set.

When a point code parameter is specified, its relative cost parameter must be specified.

Point codes cannot have the same value as the EAGLE 5 ISS SID.

The same point code value cannot be entered more than once in the MRN table.

ITU-N point codes must be in the format set by the **npcfmti** parameter of the **chg-stpopts** command. (Use the **rtv-stpopts** command to display the STP option settings.)

Remote point codes must already exist as destinations in the Ordered Route entity set or reside in a cluster destination for which ordered routes are specified.

One or more point codes in the command will exceed the maximum number of point codes that can be entered into the MRN table (3000 if the IGTTLS feature is turned on and 6000 if the IGTTLS and FGTTLS features are turned on)..

The Flexible GTT Load-Sharing feature must be enabled before the **mrnset** parameter can be specified.

If the Flexible GTT Loadsharing feature is enabled, then the specified PC must already exist in the specified MRN set.

The specified MRN set must already exist in the MRN table.

When creating a new weighted entity set, the **mrnset=new** or **mrnset=dflt** parameter must be specified.

Each point code group can contain a maximum of 32 point codes.

The Weighted GTT Loadsharing feature must be turned on before the **wt/wt1/wt2/wt3/wt4**, **thr**, and **dfltw** parameters can be specified.

If the **wt/wt1/wt2/wt3/wt4** parameter is specified, the corresponding **pc/pc1/pc2/pc3pc4** parameter must be specified.

When creating or modifying a weighted entity set, the **dfltw** parameter must be specified, or an individual weight must be specified for each PC.

Entity sets in a solitary or dominant loadsharing mode cannot have weights assigned to the PCs. When creating an entity set, if all of the RC values are unique, the **wt/wt1/wt2/wt3/wt4** and **thr** parameters cannot be specified.

If the **thr** parameter is specified, the **rc1**, **rc2**, **rc3**, and **rc4** parameters must be of equal value.

If the **thr** parameter is specified, the associated **wt/wt1/wt2/wt3/wt4** parameter or the **dfltw** parameter must be specified.

At least one additional point code must be specified.

Any specified point code must be a full point code.

If the **chg-sid:pctype=ansi** command is entered, a value of **ni=000** cannot be specified. If the **chg-sid:pctype=ansi** command is entered, and a value of **ni=001 – 005** is specified, a value of **nc=000** cannot be specified

If a new point code is being added to the MRN table, the **pc** and **rc** parameters must be specified together in the command. If the Flexible GTT Loadsharing feature is enabled, and the **mrnset=new** parameter is specified, the **pc** and **rc** parameters must be specified together in the command.

If the **pc1/pc2/pc3/pc4** parameter is specified, the **pc** parameter value must already exist in the MRN table.

A new point code that is specified in the command must not already exist in the MRN table.

If the **rc** parameter is not specified, the **wt** parameter cannot be specified.

If PCs are being added to a weighted entity set, the **wt/wt1/wt2/wt3/wt4** parameter or the **dflwt** parameter must be specified.

If PCs are being added to a non-weighted entity set, the **wt/wt1/wt2/wt3/wt4** and the **dflwt** parameters cannot be specified.

At least one optional parameter must be specified.

If the **wt/wt1/wt2/wt3/wt4** parameters are specified, the **dflwt** parameter cannot be specified.

The value specified for the **pc/pc1/pc2/pc3/pc4** parameter cannot be associated with a proxy point code.

The GTT LS ARI feature must be enabled before the **mapset**, **mappc**, or **mapssn** parameter can be specified.

The value specified for the **mappc**, **mappca**, **mappci**, **mappcn**, or **mappcn24** parameter must be full point code.

The point codes and alternate RI Mate point codes must have the same network type. Table 5-22 displays the allowed PC and Alternate RI Mate PC combinations.

The specified MAPSET must already exist in the MAP table.

If the **mapset** parameter is specified, then the **mappc** and **mapssn** parameters must be specified.

The **mappc** and **mapssn** parameters must be specified together in the command.

The MAP table is corrupt or cannot be found.

The values specified for the **mappc** and **mapssn** parameters must already exist in the specified MAP Set.

The values specified for the **mapset** and **mappc** parameters must already exist in the MAP table.

The value specified for the **mappc** parameter cannot match an STP point code.

The **ent-mrn** command cannot be used to change an Alternate RI Mate that has already been specified for an MRN Set. Use the **chg-mrn** command to modify the Alternate RI Mate.

Notes

For the **-mrn** commands, an entity set consists of a group of PCs that are used for traffic distribution, and an RC group consists of PCs within an entity set that have the same RC. In loadsharing mode, an entity set contains 1 RC group. In combined/dominant loadsharing mode, an entity set can contain multiple loadsharing groups.

The EAGLE 5 ISS supports the following modes for nodes and subsystems:

- A group of replicated PCs are in *dominant* mode if each PC in the group has a unique RC. The specified subsystem with the lowest RC acts as the primary subsystem, while the mate subsystem acts as a backup. In the event of congestion, messages route to the mate subsystem. When the congestion subsides, messages are again routed to the primary (dominant) subsystem.

- A group of replicated PCs are in *load sharing* mode if each PC in the group has the same RC. All messages are evenly distributed at the SCCP level to all nodes/subsystems in the group. In the event of congestion or failure, the non-affected subsystem assumes the load of its failed or congested mate.
- The *combined load sharing/dominant* mode supports a combination of load sharing and dominant mode. A group of PCs are in combined load sharing/dominant mode when at least two of the PCs have the same RC and another node subsystem in the group has a different RC. A combination of node accessibility and RC determines the preferred PC.

The **ent-mrn** command cannot be used to change the relative cost value for a point code; the **chg-mrn** command must be used.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-).

If the **ent-mrn** command is used to add PCs to an existing weighted entity set, and the threshold is specified, all RC group values specified with **rc**, **rc1**, **rc2**, **rc3** and **rc4** parameters for the alternate post-GTT-translated point codes must be equal.

The following rules apply when the **ent-mrn** command is used to add PCs to RC groups:

- If a threshold value is specified and the PCs are being added to an existing RC group in the existing entity set, the RC group threshold is changed to the specified threshold value and both pre-existing and new PCs in the RC group assume the new threshold value.
- If a threshold value is specified and the PCs are creating a new RC group in the existing entity set, the new RC group assumes the specified threshold value.
- If a threshold value is not specified and the PCs are being added to an existing RC group in the existing entity set, the RC group threshold does not change and the PC assumes the threshold value of the existing RC group.

When the Weighted GTT Loadsharing feature is turned on, weighted entity sets and RC groups are supported, and threshold values can be assigned to each PC.

Entries cannot be provisioned in the MRN table unless routes are also provisioned for corresponding point codes. However, an entry without a configured route may result from upgrading to a new EAGLE 5 ISS release. If such an entry occurs, then traffic will not be routed to the corresponding point code. The entry can be deleted, or a route for the entry can be configured.

When a node is marked congested in the MRN or MAP table, traffic continues to be routed to that node. When the congested node becomes prohibited, traffic is diverted to another node.

Output

```

ent-
mrn:pc=1-1-1:rc=10:pc1=1-1-2:rc1=20:pc2=1-1-3:rc2=30:apc3=1-1-4:r
c3=40:apc4=1-1-5:rc4=50:mrnset=new
tekelecstp 09-01-04 12:59:14 EST EAGLE 40.1.0
ent-
mrn:pc=1-1-1:rc=10:pc1=1-1-2:rc1=20:pc2=1-1-3:rc2=30:apc3=1-1-4:rc3=40:apc4=1-1-
5:rc4=50:mrnset=new
Command entered at terminal #4.

New MRNSET Created : MRNSETID = 112
ENT-MRN : MASP A - COMPLTD
;

ent-
mrn:pc=1-1-0:rc=10:pc1=1-1-1:rc1=10:mrnset=df1t:mapset=df1t:mappc
=1-1-2:mapssn=10
tekelecstp 09-01-04 12:15:32 EST EAGLE 40.1.0
ent-
mrn:pc=1-1-0:rc=10:pc1=1-1-1:rc1=10:mrnset=df1t:mapset=df1t:mappc=1-1-2:mapssn=1
0
Command entered at terminal #4.
ENT-MRN : MASP A - COMPLTD
;

```

ent-na**Enter Network Appearance**

Use this command to enter a new network appearance in the Network Appearance table.

Keyword: ent-na

Related Commands: dlt-na, rtrv-na

Command Class: Database Administration

Parameters

:na= (mandatory)
Network appearance.
Range: 0-4294967295

:type= (mandatory)
Type of the network appearance.
Range: ansi, itui, ituis, itun, ituns, itun24

:gc= (optional)
Group Code of the network appearance.
Range: yy

Example

```

ent-na:type=ansi:na=10
ent-na:type=itui:na=11
ent-na:type=itun:na=10
ent-na:type=itun:na=11:gc=fr
ent-na:type=itun24:na=3
ent-na:type=ituis:na=4

```

Dependencies

The network appearance (**na**) must not already exist in the Network appearance table.

The Network Appearance table can contain a maximum of 45 entries.

Group Code (**gc**) must not already be equipped.

Group Code (**gc**) is not allowed with network types **ansi** , **itui**, **ituis**, and **itun24**.

Group Code (**gc**) is required for network type **itun** or **ituns** when the ITUDUPPC feature is turned on.

Group Code (**gc**) is not allowed for network type **itui** when the ITUDUPPC feature is turned off.

Group Code (**gc**) must be in the SID or SPC table.

The Spare Point Code Support feature must be enabled before the **ituis** or **ituns** network type can be specified.

The specified network appearance must exist in the Network Appearance table.

Notes

Network Appearance identifies the SS7 network context of the message, for the purposes of logically separating signaling traffic between the SGP and ASP over a common SCTP association. A unique network appearance value can be associated with ANSI, ITUI, 14-bit ITU-N or 24-bit ITU-N networks. When the ITUDUPPC (ITU National Duplicate Point Code) feature is turned on, network appearance can be associated with a specific 14-bit ITU-N group code.

Output

```
ent-na:type=ansi:na=10
rlghncxa03w 04-02-20 09:07:58 EST EAGLE 31.3.0
ENT-NA: MASP A - COMPLTD
;
```

ent-npp-as

Enter an NPP Action Set

Use this command to enter a Numbering Plan Processor (NPP) Action Set (AS). An AS is a collection of Conditioning Actions (CAs), Service Actions (SAs), and Formatting Actions (FAs).

Keyword: ent-npp-as

Related Commands: chg-npp-as, dlt-npp-as, rtrv-npp-as

Command Class: Database Administration

Parameters

NOTE: The CAs are processed in consecutive order (ca1, ca2, etc.). The CAs do not have to be specified in consecutive order in the command; however, the CA numbers within the command must be consecutive and must contain ca1. Refer to the *Feature Manual - NPP* and to the manual for the feature of interest for additional information.

NOTE: The FAs are processed in consecutive order (fa1, fa2, etc.). The FAs do not have to be specified in consecutive order in the command; however, the FA numbers within the command must be consecutive and must contain fa1. Refer to the *Feature Manual - NPP* and to the manual for the feature of interest for additional information.

NOTE: The SAs are processed in order of precedence. The SA with the highest precedence must be assigned as the value for sa1. If multiple SAs have the same precedence, then the SAs are processed in consecutive order. The SAs do not have to be specified in consecutive order in the command; however, the SA numbers within the command must be consecutive and must

contain sa1. Refer to the *Feature Manual - NPP* and to the manual for the feature of interest for additional information.

NOTE: The ac* value refers to all CAs that begin with ac (ac1, acdef, etc).

NOTE: The dn* value refers to all CAs that begin with dn (dn1, dnx, etc).

NOTE: The sn* value refers to all CAs that begin with sn (sn1, snx, etc).

NOTE: The cc* value refers to all CAs that begin with cc (cc1, ccdef, etc).

NOTE: Definitions for the CA, FA, and SA parameter values are located in the *Notes* section.

:asn= (mandatory)

Action set name. This parameter specifies the name of the AS.

Range: zzzzzzzzzz
10 alphanumeric characters

:ca1= (optional)

Conditioning action 1. This parameter specifies the first CA that can be applied to an incoming digit string.

Range: ign1, ign2, ign3, ign4, ign5, ign6, ign7, ign8, ign9, ign10, fpx, pfxa1, pfxa2, pfxa3, pfxa4, pfxa5, pfxa6, pfxa7, pfxa8, pfxb1, pfxb2, pfxb3, pfxb4, pfxb5, pfxb6, pfxb7, pfxb8, pfxc1, pfxc2, pfxc3, pfxc4, pfxc5, pfxc6, pfxc7, pfxc8, pfxd1, pfxd2, pfxd3, pfxd4, pfxd5, pfxd6, pfxd7, pfxd8, pfxe1, pfxe2, pfxe3, pfxe4, pfxe5, pfxe6, pfxe7, pfxe8, pfxf1, pfxf2, pfxf3, pfxf4, pfxf5, pfxf6, pfxf7, pfxf8, cc1, cc2, cc3, ccdef, ac1, ac2, ac3, ac4, ac5, ac6, ac7, ac8, sn1, sn2, sn3, sn4, sn5, sn6, sn7, sn8, sn9, sn10, sn11, sn12, sn13, sn14, sn15, snx, dn1, dn2, dn3, dn4, dn5, dn6, dn7, dn8, dn9, dn10, dn11, dn12, dn13, dn14, dn15, dnx, znx, aclac, accgpn, acdef

:ca10= (optional)

Conditioning action 10. This parameter specifies the tenth CA that can be applied to an incoming digit string.

Range: ign1, ign2, ign3, ign4, ign5, ign6, ign7, ign8, ign9, ign10, fpx, pfxa1, pfxa2, pfxa3, pfxa4, pfxa5, pfxa6, pfxa7, pfxa8, pfxb1, pfxb2, pfxb3, pfxb4, pfxb5, pfxb6, pfxb7, pfxb8, pfxc1, pfxc2, pfxc3, pfxc4, pfxc5, pfxc6, pfxc7, pfxc8, pfxd1, pfxd2, pfxd3, pfxd4, pfxd5, pfxd6, pfxd7, pfxd8, pfxe1, pfxe2, pfxe3, pfxe4, pfxe5, pfxe6, pfxe7, pfxe8, pfxf1, pfxf2, pfxf3, pfxf4, pfxf5, pfxf6, pfxf7, pfxf8, cc1, cc2, cc3, ccdef, ac1, ac2, ac3, ac4, ac5, ac6, ac7, ac8, sn1, sn2, sn3, sn4, sn5, sn6, sn7, sn8, sn9, sn10, sn11, sn12, sn13, sn14, sn15, snx, dn1, dn2, dn3, dn4, dn5, dn6, dn7, dn8, dn9, dn10, dn11, dn12, dn13, dn14, dn15, dnx, znx, aclac, accgpn, acdef

:ca11= (optional)

Conditioning action 11. This parameter specifies the eleventh CA that can be applied to an incoming digit string.

Range: ign1, ign2, ign3, ign4, ign5, ign6, ign7, ign8, ign9, ign10, fpx, pfxa1, pfxa2, pfxa3, pfxa4, pfxa5, pfxa6, pfxa7, pfxa8, pfxb1, pfxb2, pfxb3, pfxb4, pfxb5, pfxb6, pfxb7, pfxb8, pfxc1, pfxc2, pfxc3, pfxc4, pfxc5, pfxc6, pfxc7, pfxc8, pfxd1, pfxd2, pfxd3, pfxd4, pfxd5, pfxd6, pfxd7, pfxd8, pfxe1, pfxe2, pfxe3, pfxe4, pfxe5, pfxe6, pfxe7, pfxe8, pfxf1, pfxf2, pfxf3, pfxf4, pfxf5, pfxf6, pfxf7, pfxf8, cc1, cc2, cc3, ccdef, ac1, ac2, ac3, ac4, ac5, ac6, ac7, ac8, sn1, sn2, sn3, sn4, sn5, sn6, sn7, sn8, sn9, sn10, sn11, sn12, sn13, sn14, sn15, snx, dn1, dn2, dn3, dn4, dn5, dn6, dn7, dn8, dn9, dn10, dn11, dn12, dn13, dn14, dn15, dnx, znx, aclac, accgpn, acdef

:ca12= (optional)

Conditioning action 12. This parameter specifies the twelfth CA that can be applied to an incoming digit string.

Range: ign1, ign2, ign3, ign4, ign5, ign6, ign7, ign8, ign9, ign10, fpx, pfxa1, pfxa2, pfxa3, pfxa4, pfxa5, pfxa6, pfxa7, pfxa8, pfxb1, pfxb2, pfxb3, pfxb4, pfxb5, pfxb6, pfxb7, pfxb8, pfxc1, pfxc2, pfxc3, pfxc4, pfxc5, pfxc6, pfxc7, pfxc8, pfxd1, pfxd2, pfxd3, pfxd4, pfxd5, pfxd6, pfxd7, pfxd8, pfxe1, pfxe2, pfxe3, pfxe4, pfxe5, pfxe6, pfxe7, pfxe8, pfxf1, pfxf2, pfxf3, pfxf4, pfxf5, pfxf6, pfxf7, pfxf8, cc1, cc2, cc3, ccdef, ac1, ac2, ac3, ac4, ac5, ac6, ac7, ac8, sn1, sn2, sn3, sn4, sn5, sn6, sn7, sn8, sn9, sn10, sn11, sn12, sn13, sn14, sn15, snx, dn1, dn2, dn3, dn4, dn5, dn6, dn7, dn8, dn9, dn10, dn11, dn12, dn13, dn14, dn15, dnx, znx, aclac, accgpn, acdef

:ca2= (optional)

Conditioning action 2. This parameter specifies the second CA that can be applied to an incoming digit string.

Range: ign1, ign2, ign3, ign4, ign5, ign6, ign7, ign8, ign9, ign10, fpx, pfxa1, pfxa2, pfxa3, pfxa4, pfxa5, pfxa6, pfxa7, pfxa8, pfxb1, pfxb2, pfxb3, pfxb4, pfxb5, pfxb6, pfxb7, pfxb8, pfxc1, pfxc2, pfxc3, pfxc4, pfxc5, pfxc6, pfxc7, pfxc8, pfxd1, pfxd2, pfxd3, pfxd4, pfxd5, pfxd6, pfxd7, pfxd8, pfxe1, pfxe2, pfxe3, pfxe4, pfxe5, pfxe6, pfxe7, pfxe8, pfxf1, pfxf2, pfxf3, pfxf4, pfxf5, pfxf6, pfxf7, pfxf8, cc1, cc2, cc3, ccdef, ac1, ac2, ac3, ac4, ac5, ac6, ac7, ac8, sn1, sn2, sn3, sn4, sn5, sn6, sn7, sn8, sn9, sn10, sn11, sn12, sn13, sn14, sn15, snx, dn1, dn2, dn3, dn4, dn5, dn6, dn7, dn8, dn9, dn10, dn11, dn12, dn13, dn14, dn15, dnx, znx, aclac, accgpn, acdef

:ca3= (optional)

Conditioning action 3. This parameter specifies the third CA that can be applied to an incoming digit string.

Range: ign1, ign2, ign3, ign4, ign5, ign6, ign7, ign8, ign9, ign10, fpx, pfxa1, pfxa2, pfxa3, pfxa4, pfxa5, pfxa6, pfxa7, pfxa8, pfxb1, pfxb2, pfxb3, pfxb4, pfxb5, pfxb6, pfxb7, pfxb8, pfxc1, pfxc2, pfxc3, pfxc4, pfxc5, pfxc6, pfxc7, pfxc8, pfxd1, pfxd2, pfxd3, pfxd4, pfxd5, pfxd6, pfxd7, pfxd8, pfxe1, pfxe2, pfxe3, pfxe4, pfxe5, pfxe6, pfxe7, pfxe8, pfxf1, pfxf2, pfxf3, pfxf4, pfxf5, pfxf6, pfxf7, pfxf8, cc1, cc2, cc3, ccdef, ac1, ac2, ac3, ac4, ac5, ac6, ac7, ac8, sn1, sn2, sn3, sn4, sn5, sn6, sn7, sn8, sn9, sn10, sn11, sn12, sn13, sn14, sn15, snx, dn1, dn2, dn3, dn4, dn5, dn6, dn7, dn8, dn9, dn10, dn11, dn12, dn13, dn14, dn15, dnx, znx, aclac, accgpn, acdef

:ca4= (optional)

Conditioning action 5. This parameter specifies the fifth CA that can be applied to an incoming digit string.

Range: ign1, ign2, ign3, ign4, ign5, ign6, ign7, ign8, ign9, ign10, fpx, pfxa1, pfxa2, pfxa3, pfxa4, pfxa5, pfxa6, pfxa7, pfxa8, pfxb1, pfxb2, pfxb3, pfxb4, pfxb5, pfxb6, pfxb7, pfxb8, pfxc1, pfxc2, pfxc3, pfxc4, pfxc5, pfxc6, pfxc7, pfxc8, pfxd1, pfxd2, pfxd3, pfxd4, pfxd5, pfxd6, pfxd7, pfxd8, pfxe1, pfxe2, pfxe3, pfxe4, pfxe5, pfxe6, pfxe7, pfxe8, pfxf1, pfxf2, pfxf3, pfxf4, pfxf5, pfxf6, pfxf7, pfxf8, cc1, cc2, cc3, ccdef, ac1, ac2, ac3, ac4, ac5, ac6, ac7, ac8, sn1, sn2, sn3, sn4, sn5, sn6, sn7, sn8, sn9, sn10, sn11, sn12, sn13, sn14, sn15, snx, dn1, dn2, dn3, dn4, dn5, dn6, dn7, dn8, dn9, dn10, dn11, dn12, dn13, dn14, dn15, dnx, znx, aclac, accgpn, acdef

:ca5= (optional)

Conditioning action 5. This parameter specifies the fifth CA that can be applied to an incoming digit string.

Range: ign1, ign2, ign3, ign4, ign5, ign6, ign7, ign8, ign9, ign10, fpx, pfxa1, pfxa2, pfxa3, pfxa4, pfxa5, pfxa6, pfxa7, pfxa8, pfb1, pfb2, pfb3, pfb4, pfb5, pfb6, pfb7, pfb8, pfc1, pfc2, pfc3, pfc4, pfc5, pfc6, pfc7, pfc8, pfd1, pfd2, pfd3, pfd4, pfd5, pfd6, pfd7, pfd8, pxe1, pxe2, pxe3, pxe4, pxe5, pxe6, pxe7, pxe8, pxf1, pxf2, pxf3, pxf4, pxf5, pxf6, pxf7, pxf8, cc1, cc2, cc3, ccdef, ac1, ac2, ac3, ac4, ac5, ac6, ac7, ac8, sn1, sn2, sn3, sn4, sn5, sn6, sn7, sn8, sn9, sn10, sn11, sn12, sn13, sn14, sn15, snx, dn1, dn2, dn3, dn4, dn5, dn6, dn7, dn8, dn9, dn10, dn11, dn12, dn13, dn14, dn15, dnx, znx, aclac, accgpn, acdef

:ca6= (optional)

Conditioning action 6. This parameter specifies the sixth CA that can be applied to an incoming digit string.

Range: ign1, ign2, ign3, ign4, ign5, ign6, ign7, ign8, ign9, ign10, fpx, pfxa1, pfxa2, pfxa3, pfxa4, pfxa5, pfxa6, pfxa7, pfxa8, pfb1, pfb2, pfb3, pfb4, pfb5, pfb6, pfb7, pfb8, pfc1, pfc2, pfc3, pfc4, pfc5, pfc6, pfc7, pfc8, pfd1, pfd2, pfd3, pfd4, pfd5, pfd6, pfd7, pfd8, pxe1, pxe2, pxe3, pxe4, pxe5, pxe6, pxe7, pxe8, pxf1, pxf2, pxf3, pxf4, pxf5, pxf6, pxf7, pxf8, cc1, cc2, cc3, ccdef, ac1, ac2, ac3, ac4, ac5, ac6, ac7, ac8, sn1, sn2, sn3, sn4, sn5, sn6, sn7, sn8, sn9, sn10, sn11, sn12, sn13, sn14, sn15, snx, dn1, dn2, dn3, dn4, dn5, dn6, dn7, dn8, dn9, dn10, dn11, dn12, dn13, dn14, dn15, dnx, znx, aclac, accgpn, acdef

:ca7= (optional)

Conditioning action 7. This parameter specifies the seventh CA that can be applied to an incoming digit string.

Range: ign1, ign2, ign3, ign4, ign5, ign6, ign7, ign8, ign9, ign10, fpx, pfxa1, pfxa2, pfxa3, pfxa4, pfxa5, pfxa6, pfxa7, pfxa8, pfb1, pfb2, pfb3, pfb4, pfb5, pfb6, pfb7, pfb8, pfc1, pfc2, pfc3, pfc4, pfc5, pfc6, pfc7, pfc8, pfd1, pfd2, pfd3, pfd4, pfd5, pfd6, pfd7, pfd8, pxe1, pxe2, pxe3, pxe4, pxe5, pxe6, pxe7, pxe8, pxf1, pxf2, pxf3, pxf4, pxf5, pxf6, pxf7, pxf8, cc1, cc2, cc3, ccdef, ac1, ac2, ac3, ac4, ac5, ac6, ac7, ac8, sn1, sn2, sn3, sn4, sn5, sn6, sn7, sn8, sn9, sn10, sn11, sn12, sn13, sn14, sn15, snx, dn1, dn2, dn3, dn4, dn5, dn6, dn7, dn8, dn9, dn10, dn11, dn12, dn13, dn14, dn15, dnx, znx, aclac, accgpn, acdef

:ca8= (optional)

Conditioning action 8. This parameter specifies the eighth CA that can be applied to an incoming digit string.

Range: ign1, ign2, ign3, ign4, ign5, ign6, ign7, ign8, ign9, ign10, fpx, pfxa1, pfxa2, pfxa3, pfxa4, pfxa5, pfxa6, pfxa7, pfxa8, pfb1, pfb2, pfb3, pfb4, pfb5, pfb6, pfb7, pfb8, pfc1, pfc2, pfc3, pfc4, pfc5, pfc6, pfc7, pfc8, pfd1, pfd2, pfd3, pfd4, pfd5, pfd6, pfd7, pfd8, pxe1, pxe2, pxe3, pxe4, pxe5, pxe6, pxe7, pxe8, pxf1, pxf2, pxf3, pxf4, pxf5, pxf6, pxf7, pxf8, cc1, cc2, cc3, ccdef, ac1, ac2, ac3, ac4, ac5, ac6, ac7, ac8, sn1, sn2, sn3, sn4, sn5, sn6, sn7, sn8, sn9, sn10, sn11, sn12, sn13, sn14, sn15, snx, dn1, dn2, dn3, dn4, dn5, dn6, dn7, dn8, dn9, dn10, dn11, dn12, dn13, dn14, dn15, dnx, znx, aclac, accgpn, acdef

:ca9= (optional)

Conditioning action 9. This parameter specifies the ninth CA that can be applied to an incoming digit string.

Range: ign1, ign2, ign3, ign4, ign5, ign6, ign7, ign8, ign9, ign10, fpx, pfxa1, pfxa2, pfxa3, pfxa4, pfxa5, pfxa6, pfxa7, pfxa8, pfb1, pfb2, pfb3, pfb4, pfb5, pfb6, pfb7, pfb8, pfc1, pfc2, pfc3, pfc4, pfc5, pfc6, pfc7, pfc8, pfd1, pfd2, pfd3, pfd4, pfd5, pfd6, pfd7, pfd8, pxe1, pxe2, pxe3, pxe4, pxe5, pxe6, pxe7, pxe8, pxf1, pxf2, pxf3, pxf4, pxf5, pxf6, pxf7, pxf8, cc1, cc2, cc3, ccdef, ac1, ac2, ac3, ac4, ac5, ac6, ac7, ac8, sn1, sn2, sn3, sn4, sn5, sn6, sn7, sn8, sn9, sn10, sn11, sn12, sn13, sn14, sn15, snx, dn1, dn2, dn3, dn4, dn5, dn6, dn7, dn8, dn9, dn10, dn11, dn12, dn13, dn14, dn15, dnx, znx, aclac, accgpn, acdef

:fa1= (optional)

Formatting action 1. This parameter specifies the first FA that can be applied to the outgoing digit string.

Range: sn, dn, zn, ac, rn, sp, cc, fpx, pfxa, pfb, pfc, pfd, pxe, pxf, dlma, dlmb, dlmc, asd, orig, grn, vmid, srfimsi, dlmd, dlme, dlmf, dlmg, dlmh, dlmi, dlmj, dlmk, dlml, dlmm, dlmn, dlmo, dlmp, rnospodn, rnospoz, rnosposn

Default: orig

:fa10= (optional)

Formatting action 10. This parameter specifies the tenth FA that can be applied to the outgoing digit string.

Range: sn, dn, zn, ac, rn, sp, cc, fpx, pfxa, pfb, pfc, pfd, pxe, pxf, dlma, dlmb, dlmc, asd, orig, grn, vmid, srfimsi, dlmd, dlme, dlmf, dlmg, dlmh, dlmi, dlmj, dlmk, dlml, dlmm, dlmn, dlmo, dlmp, rnospodn, rnospoz, rnosposn

Default: orig

:fa11= (optional)

Formatting action 11. This parameter specifies the eleventh FA that can be applied to the outgoing digit string.

Range: sn, dn, zn, ac, rn, sp, cc, fpx, pfxa, pfb, pfc, pfd, pxe, pxf, dlma, dlmb, dlmc, asd, orig, grn, vmid, srfimsi, dlmd, dlme, dlmf, dlmg, dlmh, dlmi, dlmj, dlmk, dlml, dlmm, dlmn, dlmo, dlmp, rnospodn, rnospoz, rnosposn

Default: orig

:fa12= (optional)

Formatting action 12. This parameter specifies the twelfth FA that can be applied to the outgoing digit string.

Range: sn, dn, zn, ac, rn, sp, cc, fpx, pfxa, pfb, pfc, pfd, pxe, pxf, dlma, dlmb, dlmc, asd, orig, grn, vmid, srfimsi, dlmd, dlme, dlmf, dlmg, dlmh, dlmi, dlmj, dlmk, dlml, dlmm, dlmn, dlmo, dlmp, rnospodn, rnospoz, rnosposn

Default: orig

:fa2= (optional)

Formatting action 2. This parameter specifies the second FA that can be applied to the outgoing digit string.

Range: sn, dn, zn, ac, rn, sp, cc, fpx, pfxa, pfb, pfc, pfd, pxe, pxf, dlma, dlmb, dlmc, asd, orig, grn, vmid, srfimsi, dlmd, dlme, dlmf, dlmg, dlmh, dlmi, dlmj, dlmk, dlml, dlmm, dlmn, dlmo, dlmp, rnospodn, rnospoz, rnosposn

Default: orig

:fa3= (optional)

Formatting action 3. This parameter specifies the third FA that can be applied to the outgoing digit string.

Range: sn, dn, zn, ac, rn, sp, cc, fpx, pfxa, pfxb, pfxc, pfxd, pfxe, pfxf, dlma, dlmb, dlmc, asd, orig, grn, vmid, srfimsi, dlmd, dlme, dlmf, dlmg, dlmh, dlmi, dlmj, dlmk, dlml, dlmm, dlmn, dlmo, dlmp, rnospodn, rnospoz, rnosposn

Default: orig

:fa4= (optional)

Formatting action 4. This parameter specifies the fourth FA that can be applied to the outgoing digit string.

Range: sn, dn, zn, ac, rn, sp, cc, fpx, pfxa, pfxb, pfxc, pfxd, pfxe, pfxf, dlma, dlmb, dlmc, asd, orig, grn, vmid, srfimsi, dlmd, dlme, dlmf, dlmg, dlmh, dlmi, dlmj, dlmk, dlml, dlmm, dlmn, dlmo, dlmp, rnospodn, rnospoz, rnosposn

Default: orig

:fa5= (optional)

Formatting action 5. This parameter specifies the fifth FA that can be applied to the outgoing digit string.

Range: sn, dn, zn, ac, rn, sp, cc, fpx, pfxa, pfxb, pfxc, pfxd, pfxe, pfxf, dlma, dlmb, dlmc, asd, orig, grn, vmid, srfimsi, dlmd, dlme, dlmf, dlmg, dlmh, dlmi, dlmj, dlmk, dlml, dlmm, dlmn, dlmo, dlmp, rnospodn, rnospoz, rnosposn

Default: orig

:fa6= (optional)

Formatting action 6. This parameter specifies the sixth FA that can be applied to the outgoing digit string.

Range: sn, dn, zn, ac, rn, sp, cc, fpx, pfxa, pfxb, pfxc, pfxd, pfxe, pfxf, dlma, dlmb, dlmc, asd, orig, grn, vmid, srfimsi, dlmd, dlme, dlmf, dlmg, dlmh, dlmi, dlmj, dlmk, dlml, dlmm, dlmn, dlmo, dlmp, rnospodn, rnospoz, rnosposn

Default: orig

:fa7= (optional)

Formatting action 7. This parameter specifies the seventh FA that can be applied to the outgoing digit string.

Range: sn, dn, zn, ac, rn, sp, cc, fpx, pfxa, pfxb, pfxc, pfxd, pfxe, pfxf, dlma, dlmb, dlmc, asd, orig, grn, vmid, srfimsi, dlmd, dlme, dlmf, dlmg, dlmh, dlmi, dlmj, dlmk, dlml, dlmm, dlmn, dlmo, dlmp, rnospodn, rnospoz, rnosposn

Default: orig

:fa8= (optional)

Formatting action 8. This parameter specifies the eighth FA that can be applied to the outgoing digit string.

Range: sn, dn, zn, ac, rn, sp, cc, fpx, pfxa, pfxb, pfxc, pfxd, pfxe, pfxf, dlma, dlmb, dlmc, asd, orig, grn, vmid, srfimsi, dlmd, dlme, dlmf, dlmg, dlmh, dlmi, dlmj, dlmk, dlml, dlmm, dlmn, dlmo, dlmp, rnospodn, rnospoz, rnosposn

Default: orig

:fa9= (optional)

Formatting action 9. This parameter specifies the ninth FA that can be applied to the outgoing digit string.

Range: sn, dn, zn, ac, rn, sp, cc, fpx, pfxa, pfxb, pfxc, pfxd, pfxe, pfxf, dlma, dlmb, dlmc, asd, orig, grn, vmid, srfimsi, dlmd, dlme, dlmf, dlmg, dlmh, dlmi, dlmj, dlmk, dlml, dlmm, dlmn, dlmo, dlmp, rnospodn, rnospoz, rnosposn

Default: orig

:ofnai= (optional)

Outgoing filter nature of address indicator. This parameter specifies the filter nature of address indicator (FNAI) class of the outgoing digit string.

Range: **intl, natl, nai1, nai2, nai3, unkn, inc**

intl— **intl** value provisioned in the **chg-npp-serv** command

natl— **natl** value provisioned in the **chg-npp-serv** command

nai1— **nai1** value provisioned in the **chg-npp-serv** command

nai2— **nai2** value provisioned in the **chg-npp-serv** command

nai3— **nai3** value provisioned in the **chg-npp-serv** command

unkn— **unkn** value provisioned in the **chg-npp-serv** command

inc— NAI of the incoming digit string

Default: **inc**

:sa1= (optional)

Service action 1. This parameter specifies the first SA that can be applied to an incoming digit string. SAs are service-specific.

Range: **rtdbtrn, rtdbtsp, rtdbtrnsp, cdial, ccncchk, cdpnnp, cgpnpn, cgpnnprqd, lacck, fwdscs, npnrls, nprelay, nprls, crp, snsccpn, fraudchk, pprelay, migrate, asdlkup, grnlkup, cgpnasdrqd, cgpngrnrqd, none**

none-terminates the list of SAs. If the **sa1=none** parameter is specified, then no other SAs are processed.

:sa2= (optional)

Service action 2. This parameter specifies the second SA that can be applied to an incoming digit string.

SAs are service-specific.

Range: **rtdbtrn, rtdbtsp, rtdbtrnsp, cdial, ccncchk, cdpnnp, cgpnpn, cgpnnprqd, lacck, fwdscs, npnrls, nprelay, nprls, crp, snsccpn, fraudchk, pprelay, migrate, asdlkup, grnlkup, cgpnasdrqd, cgpngrnrqd, none**

none-terminates the list of SAs. If the **sa2=none** parameter is specified, then any subsequent SA is not processed.

:sa3= (optional)

Service action 3. This parameter specifies the third SA that can be applied to an incoming digit string. SAs are service-specific.

Range: **rtdbtrn, rtdbtsp, rtdbtrnsp, cdial, ccncchk, cdpnnp, cgpnpn, cgpnnprqd, lacck, fwdscs, npnrls, nprelay, nprls, crp, snsccpn, fraudchk, pprelay, migrate, asdlkup, grnlkup, cgpnasdrqd, cgpngrnrqd, none**

none-terminates the list of SAs. If the **sa3=none** parameter is specified, then any subsequent SA is not processed.

:sa4= (optional)

Service action 4. This parameter specifies the fourth SA that can be applied to an incoming digit string.

SAs are service-specific.

Range: **rtdbtrn, rtdbtsp, rtdbtrnsp, cdial, ccncchk, cdpnnp, cgpnpn, cgpnnprqd, lacck, fwdscs, npnrls, nprelay, nprls, crp, snsccpn, fraudchk, pprelay, migrate, asdlkup, grnlkup, cgpnasdrqd, cgpngrnrqd, none**

none-terminates the list of SAs. If the **sa4=none** parameter is specified, then any subsequent SA is not processed.

:sa5= (optional)

Service action 5. This parameter specifies the fifth SA that can be applied to an incoming digit string. SAs are service-specific.

Range: **rtdbtrn, rtdbtsp, rtdbtrnsp, cdial, ccncchk, cdpnnp, cgpnpnp, cgpnnprqd, lacck, fwdscs, npnrls, nprelay, nprls, crp, snsngpn, fraudchk, pprelay, migrate, asdlkup, grnlkup, cgpnasdrqd, cgpngrnrqd, none**
none-terminates the list of SAs. If the **sa5=none** parameter is specified, then any subsequent SA is not processed.

:sa6= (optional)

Service action 6. This parameter specifies the sixth SA that can be applied to an incoming digit string. SAs are service-specific.

Range: **rtdbtrn, rtdbtsp, rtdbtrnsp, cdial, ccncchk, cdpnnp, cgpnpnp, cgpnnprqd, lacck, fwdscs, npnrls, nprelay, nprls, crp, snsngpn, fraudchk, pprelay, migrate, asdlkup, grnlkup, cgpnasdrqd, cgpngrnrqd, none**
none-terminates the list of SAs. If the **sa6=none** parameter is specified, then any subsequent SA is not processed.

:sa7= (optional)

Service action 7. This parameter specifies the seventh SA that can be applied to an incoming digit string. SAs are service-specific.

Range: **rtdbtrn, rtdbtsp, rtdbtrnsp, cdial, ccncchk, cdpnnp, cgpnpnp, cgpnnprqd, lacck, fwdscs, npnrls, nprelay, nprls, crp, snsngpn, fraudchk, pprelay, migrate, asdlkup, grnlkup, cgpnasdrqd, cgpngrnrqd, none**
none-terminates the list of SAs. If the **sa7=none** parameter is specified, then any subsequent SA is not processed.

:sa8= (optional)

Service action 8. This parameter specifies the eighth SA that can be applied to the incoming digit string. SAs are service-specific.

Range: **rtdbtrn, rtdbtsp, rtdbtrnsp, cdial, ccncchk, cdpnnp, cgpnpnp, cgpnnprqd, lacck, fwdscs, npnrls, nprelay, nprls, crp, snsngpn, fraudchk, pprelay, migrate, asdlkup, grnlkup, cgpnasdrqd, cgpngrnrqd, none**
none-terminates the list of SAs.

Example

```
ent-npp-as:asn=asn1:ca1=ign1:ca2=ign2:fa1=zn:ca3=ign4:ca4=znx
ent-npp-
as:asn=asn4:ca1=fpfx:ca2=cc2:ca3=ign3:ca4=dn4:fa1=dn:fa2=cc
ent-npp-
as:asn=asn5:fa1=sn:ca1=ac8:ca2=sn8:ca3=cc3:fa2=ac:fa3=cc:sa1=rtdb
trn:sa2=rtdbtsp:sa3=rtdbtrnsp:sa4=cdial
ent-npp-as:asn=asn1:ca1=znx:fa1=asd:sa1=asdlkup
ent-npp-as:asn=asn2:ca1=znx:fa1=grn:sa1=grnlkup
ent-npp-
as:asn=asn10:ca1=cc2:ca2=ac2:ca3=snx:sa1=migrate:sa2=cdpnpnp:fa1=c
c:fa2=rnosposn
ent-npp-
as:asn=asn9:ca1=fpfx:ca2=cc2:ca3=dnx:sa1=fraudchk:sa2=pprelay:fa1
=cc:fa2=dn
```

Dependencies

The value specified for the **asn** parameter cannot already exist in the NPP AS table.

One of the following combinations of CA values must be specified for the AS:

- **znx**
- **cc, dn**
- **cc, ac, sn**

The FAs specified for the AS must contain the corresponding FA that a CA will populate or load.

The AS must contain a CA that can load or populate the specified FA.

The CA parameters must consist of sequential numbers, always including **ca1**; however, the parameters do not have to be entered into the command in sequential order.

The SA parameters must be entered as sequential numbers, always including **sa1**; however, these parameters do not have to be entered in sequential order. The SA with the highest precedence must be assigned as the value for **sa1**.

The FA parameters must consist of sequential numbers, always including **fa1**; however, the parameters do not have to be entered into the command in sequential order.

The CAs within an AS cannot condition more than 32 digits.

The AS cannot contain CAs that load or populate the same FA.

If the **caX=znx** parameter is specified, then the **caX=ac*** and **caX=dnx** parameters cannot be specified. The **caX=ac*** parameter can be specified only once in the command. The **caX=cc*** parameter can be specified only once in the command. The **caX=dn*** parameter can be specified only once in the command. The **caX=sn*** parameter can be specified only once in the command.

The same value cannot be specified for the **fa X** parameters within an AS.

The AS cannot contain the following combinations of FAs:

- If the **faX=dn** parameter is specified, then **ac**, **sn**, and **zn** cannot be specified as values for the **faX** parameter.
- If the **faX=zn** parameter is specified, then **ac**, **cc**, **sn**, and **dn** cannot be specified as values for the **faX** parameter.
- If the **faX=sn** parameter is specified, then **zn** and **dn** cannot be specified as values for the **faX** parameter.
- If the **faX** parameter has a value of **rnospodn**, **rnospesn**, or **rnospozn**, then **rn**, **sp**, **sn**, **dn**, or **zn** cannot be specified as values for the **faX** parameter.
- If the **faX** parameter has a value of **rnospodn**, **rnospesn**, or **rnospozn**, then **rnospodn**, **rnospesn**, or **rnospozn** cannot be specified as values for the **faX** parameter.

If specified, the filter prefix must be the first CA (the **ca1=fpfx** parameter must be specified).

If specified, the **znx**, **snx**, and **dnx** values must be the final CAs in the **ca X** sequence.

A maximum of 1024 (1K) AS entries can be specified in the NPP system.

The same value cannot be specified for the **sa X** parameters within an AS.

Notes

Conditioning Action Value Definitions

- **ac1-ac8**—Stores the specified number of digits from the incoming digit string as the Area Code
- **acdef**—Stores the **stpopts:defncd** as the Area Code

- **aclac**—Stores the location area code from the location area information in IDP as the Area Code
- **cc1-cc3**—Stores the specified number of digits from the incoming digit string as the Country Code (CC)
- **ccdef**—Stores the **stpopts:defcc** value as the CC
- **dn1-dn15**—Stores the specified number of digits from the incoming digit string as the Dialed Number
- **dnx**—Stores the remaining digits in the digit string as the Dialed Number
- **fpfx**—Stores the filter prefix
- **ign1-ign10**—Ignores the specified number of digits on the incoming digit string
- **pfxa1-pfxa8**—Stores the specified number of digits from the incoming digit string as Prefix A
- **pfxb1-pfxb8**—Stores the specified number of digits from the incoming digit string as Prefix B
- **pfxc1-pfxc8**—Stores the specified number of digits from the incoming digit string as Prefix C
- **pfxd1-pfxd8**—Stores the specified number of digits from the incoming digit string as Prefix D
- **pfxe1-pfxe8**—Stores the specified number of digits from the incoming digit string as Prefix E
- **pfxf1-pfxf8**—Stores the specified number of digits from the incoming digit string as Prefix F
- **sn1-sn15**—Stores the specified number of digits from the incoming digit string as the Subscriber Number
- **snx**—Stores the remaining digits in the digit string as the Subscriber Number
- **znx**—Stores the remaining digits in the digit string as the internationally formatted Dialed Number
- **accgpn**—Store the location area code from the area code information in calling party number as the Area Code.

Formatting Action Value Definitions

- **ac**—Area code
- **asd**—Additional subscriber data
- **cc**—Country code
- **dlma**—Delimiter A
- **dlmb**—Delimiter B
- **dlmc**—Delimiter C
- **dlmd**—Delimiter D
- **dlme**—Delimiter E
- **dlmf**—Delimiter F
- **dlmg**—Delimiter G

- **dlmh**—Delimiter H
- **dlmi**—Delimiter I
- **dlmj**—Delimiter J
- **dlmk**—Delimiter K
- **dlml**—Delimiter L
- **dlmm**—Delimiter M
- **dlmn**—Delimiter N
- **dlmo**—Delimiter O
- **dlmp**—Delimiter P
- **dn**—Dialed number
- **fpx**—Filter prefix
- **grn**—Generic routing number
- **orig**—Incoming digit string
- **pfxa**—Prefix A
- **pfxb**—Prefix B
- **pfxc**—Prefix C
- **pfxd**—Prefix D
- **pfxe**—Prefix E
- **pfxf**—Prefix F
- **rn**—Routing number
- **rnsposdn**—RN or SP value, if RN or SP was found in RTDB lookup; otherwise the Conditioning Action DN(x) populates this Formatting Action value.
- **rnsposn**—RN or SP value, if RN or SP was found in RTDB lookup; otherwise the Conditioning Action SN(x) populates this Formatting Action value.
- **rnsposzn**—RN or SP value, if RN or SP was found in RTDB lookup; otherwise the Conditioning Action ZN(x) populates this Formatting Action value.
- **sn**—Subscriber number
- **sp**—Service provider
- **srfimsi**—Signaling relay function international mobile subscriber identifier
- **vmid**—Voice mail identifier
- **zn**—Internationally formatted dialed number

Service Action Value Definitions: NPP Test Service

- **cdial**—Corrective Dialing; checks for Formatting Action processing
- **rtdbtrn**—Looks for DN in RTDB; looks for RN in found DN
- **rtdbtrnsp**—Looks for DN in RTDB; looks for RN or SP in found DN
- **rtdbtsp**—Looks for DN in RTDB; looks for SP in found DN

Service Action Value Definitions: Prepaid IDP Relay

IDPRCDPN Service

- **asdlkup**—Performs subscriber lookup on the CdPN to search for an individual entry. If a DN is not found, then the range database is searched. If a DN is found in an individual or range database with associated ASD, then the ASD is copied into the ASD FA. If ASD is not found, then the ASD FA has a value of **none**, and service execution continues.
- **ccncchk**—Verifies the conditioned number is available under CSL CCNDC screening list
- **cdpnnp**—NPP SA shall do a RTDB lookup for the conditioned number and analyses success criteria. If RTDB lookup is successful (DN is found), entity-data shall be updated in RN or SP, as per the configured entity-type.
- **cgpnasdrqd**—Sets a flag in the IDPR feature to invoke the IDPRCGPN service if ASD is found. The outgoing CdPN is formatted in the IDPR feature logic once the IDPRCGPN service execution completes.
- **cgpngnrnrqd**—Sets a flag in the IDPR feature to invoke the IDPRCGPN service if GRN is found. The outgoing CdPN is formatted in the IDPR feature logic once the IDPRCGPN service execution completes.
- **cgpnnprrqd**—Sets a flag in IDPR feature logic to indicate whether IDPRCGPN service is to be invoked
- **grnlkup**—Performs subscriber lookup on the CdPN to search for an individual entry. If a DN is not found, then the range database is searched. If a DN is found in an individual or range database with an associated GRN, then the GRN is copied into the GRN FA. If a GRN is not found, then the GRN FA has a value of **none**, and service execution continues.
- **lacck**—Formats the outgoing number by removing the digit and length prefixes from the outgoing digit string if LAC=AC (LAC:Location Area Code)

IDPRCGPN Service

- **asdlkup**—Performs subscriber lookup on the CgPN to search for an individual entry. If a DN is not found, then the range database is searched. If a DN is found in an individual or range database with associated ASD, then the ASD is copied into the ASD FA. If ASD is not found, then the ASD FA has a value of **none**, and service execution continues.
- **cgpnnp**—Performs an RTDB lookup for the conditioned number and analyses success criteria
- **grnlkup**—Performs subscriber lookup on the CgPN to search for an individual entry. If a DN is not found, then the range database is searched. If a DN is found in an individual or range database with an associated GRN, then the GRN is copied into the GRN FA. If a GRN is not found, then the GRN FA has a value of **none**, and service execution continues.

Service Action Value Definitions: TIF Number Portability

- **asdlkup**—Performs NP lookup on the CdPN; if ASD is found, the ASD Formatting Action is populated with the ASD value.
- **cdial**—Performs corrective dialing.
- **cgpnasdrqd**—Performs NP lookup on the CgPN; if ASD is found, the ASD Formatting Action is populated with the ASD value for formatting of the outgoing CdPN.
- **cgpngnrnrqd**—Performs NP lookup on the CgPN; if a GRN is found, the GRN Formatting Action is populated with the GRN value for formatting of the outgoing CdPN.
- **cgpnnprrqd**—Performs NP lookup on the CgPN.

- **crp**—Performs NP lookup on the CdPN and attempts to detect a circular route
- **grnlkup**—Performs NP lookup on the CdPN; if a GRN is found, the GRN Formatting Action is populated with the GRN value.
- **npnrIs**—Performs an NP lookup on the CdPN and indicates release behavior on an unsuccessful lookup.
- **nprelay**—Performs an NP lookup on the CdPN and indicates relay behavior.
- **nprIs**—Performs an NP lookup on the CdPN and indicates release behavior on a successful lookup.

Service Action Value Definitions: TIF SCS Forwarding

- **asdlkup**—Performs subscriber lookup on the CdPN to search for an individual entry. If a DN is found with associated ASD, then lookup is successful. If a DN is not found, then the range database is searched. If a range entry is found with associated ASD, then lookup is successful.
- **cdial**—Performs corrective dialing.
- **cgpnasdrqd**—Performs an individual or range lookup on CgPN for ASD.
- **cgpngrnrqd**—Performs an individual or range lookup on CgPN for GRN.
- **fwdses**—Indicates that any relayed MSUs require database transport access (DTA) processing.
- **grnlkup**—Performs subscriber lookup on the CdPN to search for an individual entry. If a DN is found with an associated GRN, then lookup is successful. If a DN is not found, then the range database is searched. If a range entry is found with an associated GRN, then lookup is successful.

Service Action Value Definitions: TIF Simple Number Substitution

- **asdlkup**—Performs subscriber lookup on the CdPN to search for an individual entry. If a DN is found with associated ASD, then lookup is successful. If a DN is not found, then the range database is searched. If a range entry is found with associated ASD, then lookup is successful.
- **cdial**—Performs corrective dialing
- **cgpnasdrqd**—Performs an individual or range lookup on CgPN for ASD.
- **cgpngrnrqd**—Performs an individual or range lookup on CgPN for GRN.
- **grnlkup**—Performs subscriber lookup on the CdPN to search for an individual entry. If a DN is found with an associated GRN, then lookup is successful. If a DN is not found, then the range database is searched. If a range entry is found with an associated GRN, then lookup is successful.
- **snsespn**—Updates the outgoing calling party number (CgPN)

Service Action Value Definitions: NPP for MO SMS features

MOSMSGCDPN Service

- **asdlkup**—Populates ASD FA with ASD data retrieved from DN RTDB lookup
- **cdial**—Performs corrective dialing
- **cdpnnp**—Performs CdPN RTDB lookup and determines whether it is ported
- **cgpnasdrqd**—Populates ASD FA with CgPN ASD data if available from CgPN RTDB lookup done by MOSMSGCGPN service

- **cgpngrnrqd**—Populates GRN FA with CgPN GRN data if available from CgPN RTDB lookup done by MOSMSGCGPN service
- **grnlkup**—Populates GRN FA with GRN data retrieved from DN RTDB lookup
- **pprelay**—Performs CdPN RTDB lookup and redirects message to prepaid subscriber if CdPN is prepaid

MOSMSGCGPN Service

- **asdlkup**—Populates ASD FA with ASD data retrieved from DN RTDB lookup
- **cdial**—Performs corrective dialing
- **fraudchk**—Performs CgPN RTDB lookup and discards message if the subscriber is fraudulent
- **grnlkup**—Populates GRN FA with GRN data retrieved from DN RTDB lookup
- **pprelay**—Performs CgPN RTDB lookup and redirects message to prepaid subscriber if CgPN is prepaid

MOSMSICGPN Service

- **asdlkup**—Populates ASD FA with ASD data retrieved from DN RTDB lookup
- **cdial**—Performs corrective dialing
- **grnlkup**—Populates GRN FA with GRN data retrieved from DN RTDB lookup

MOSMSICDPN Service

- **asdlkup**—Populates ASD FA with ASD data retrieved from DN RTDB lookup
- **cdial**—Performs corrective dialing
- **cdpnpn**—Performs CdPN RTDB lookup and analyses whether it is ported
- **cgpnasdrqd**—Populates ASD FA with CgPN ASD data if available from CgPN RTDB lookup done by MOSMSICGPN service
- **cgpngrnrqd**—Populates GRN FA with CgPN GRN data if available from CgPN RTDB lookup done by MOSMSICGPN service
- **grnlkup**—Populates GRN FA with GRN data retrieved from DN RTDB lookup
- **migrate**—Performs CdPN RTDB lookup and analyses if it is migrated or not

Output

```
ent-npp-
as:asn=asn6:fa1=sn:ca1=ac3:ca2=sn8:ca3=cc3:fa2=ac:fa3=cc:sa1=rtdb
trn:sa2=rtdbtsp:sa3=r tdbtrnsp:sa4=cdial
tekelecstp 09-02-19 13:57:07 EST EAGLE 40.1.0
NPP-AS table is (5 of 1024) 1% full.

ENT-NPP-AS: MASP A - COMPLTD
;
```

ent-npp-srs**Create a NPP Service Rule Set**

Use this command to enter a Numbering Plan Processor (NPP) Service Rule Set entry. A Service Rule Set (SRS) is a collection of NPP Rules that are associated with a NPP Service. A NPP Rule is an association between a single NPP filter and a single NPP Action Set.

Keyword: **ent-npp-srs**

Related Commands: **chg-npp-as, chg-npp-srs, dlt-npp-srs, ent-npp-as, rtrv-npp-as, rtrv-npp-srs**

Command Class: Database Administration

Parameters

:asn= (mandatory)

Action set name. This parameter specifies the name of the AS.

Range: *ayyyyyyyyy*

1 alphabetic character followed by up to 9 alphanumeric characters

:fdl= (mandatory)

Filter digit length. This parameter specifies the number of digits on the incoming digit string that is filtered by the NPP.

Range: **1-32 ***

*—multiple lengths of digit strings can be filtered

:fnai= (mandatory)

Filter nature of address indicator. This parameter specifies the filter Nature of Address Indicator (NAI) class.

Range: **intl, natl, nai1, nai2, nai3, unkn**

intl — filter messages with NAI=INTL

natl — filter messages with NAI=NATL

nai1 — filter messages with NAI=NAI1

nai2 — filter messages with NAI=NAI2

nai3 — filter messages with NAI=NAI3

unkn — filter messages when NAI=UNKN

The **chg-npp-serv** command is used to assign values to the various FNAI classes.

:fpfx= (mandatory)

Filter prefix. This parameter specifies the prefix used to filter incoming digit strings.

Range: **1-16 digits, *, ?**

1 - 16 hexadecimal digits inclusive of single digit wildcard (?); or wildcard (*) matching the entire digit string; valid digits are **?, 0-9, a-f, A-F**.

:srvn= (mandatory)

Service name. This parameter specifies the name of the NPP service.

Range: **nppt, idprcdpn, idprcgpn, tif, tif2, tif3, mosmsicgpn, mosmsicdpn, mosmsgcgpn, mosmsgcdpn**

nppt — NPP Test Service

idprcdpn — IDPRCDPN Service

idprcgpn — IDPRCGPN Service

tif — TIF NPP Service

tif2 — TIF2 NPP Service

tif3 — TIF3 NPP Service

mosmsicgpn — MOSMSICGPN Service

mosmsicdpn — MOSMSICDPN Service

mosmsgcgpn — MOSMSGCGPN Service

mosmsgcdpn — MOSMSGCDPN Service**Example**

```
ent-npp-srs:srvn=nppt:fpfx=a:fdl=10:fnai=intl:asn=asn2
```

```
ent-npp-srs:srvn=nppt:fpfx=abc:fdl=16:fnai=intl:asn=asn3
```

Dependencies

The value specified for the **asn** parameter must exist in the NPP AS table.

The AS specified by the **asn** parameter cannot contain CAs that are not supported by the service specified by the **srvn** parameter.

The AS specified by the **asn** parameter cannot contain SAs that are not supported by the service specified by the **srvn** parameter.

The AS specified by the **asn** parameter cannot contain FAs that are not supported by the service specified by the **srvn** parameter.

The AS specified by the **asn** parameter cannot contain SAs that do not conform to the precedence order that is supported by the service specified by the **srvn** parameter.

The CAs in the AS specified by the **asn** parameter cannot condition more digits than allowed by the **fdl** parameter.

If the **fdl=*** parameter is specified, then the AS specified by the **asn** parameter must contain CAs that support variable digit string conditioning.

A maximum of 8192 (8K) rules can be specified in the NPP system.

A maximum of 4096 (4K) service rules can be specified in the NPP system.

The NPP Rule cannot already exist within the NPP Rule table.

If the values specified for the **fpfx** and the **fdl** parameters are not *****, then the value specified for the **fpfx** parameter cannot be greater than the value specified for the **fdl** parameter.

All of the features that are associated with the SAs in the AS that is specified by the **asn** parameter must be turned on before the AS can be used.

The SAs in the AS specified by the **asn** parameter cannot violate mutual exclusivity rules defined by the service specified by the **srvn** parameter.

The AS specified by the **asn** parameter cannot contain an OFNAI class with a value of **none**.

At least one TIF feature must be turned on before an AS containing the **cdial** SA can be specified.

The TIF SCS Forwarding feature must be turned on before an AS containing the **fwdsacs** SA can be specified.

The TIF Simple Number Substitution feature must be turned on before an AS containing the **snschgpn** SA can be specified.

The TIF Number Portability feature must be turned on before an AS containing the **crp**, **npnrsls**, **cgpnnpqrqd**, **nprelay**, or **npnrsls** SA can be specified.

The IDPR ASD feature must be enabled before an AS containing the **asdlkup** or **cgpnasdrqd** SA can be specified as a value for the **asn** parameter with the IDPRCDPN or IDPRCGPN service.

The IDPR GRN feature must be enabled before an AS containing the **grnlkup** or **cgpngrnrqd** SA can be specified as a value for the **asn** parameter with the IDPRCDPN or IDPRCGPN service.

An AS containing the **asdlkup** and **cgpnasdrqd** SAs cannot be specified as a value for the **asn** parameter.

An AS containing the **grnlkup** and **cgpngrnrqd** SAs cannot be specified as a value for the **asn** parameter.

The TIF GRN feature must be enabled before an AS containing the **grnlkup** or **cgpngrnrqd** SAs can be specified as a value for the **asn** parameter with the TIF services.

The TIF ASD feature must be enabled before an AS containing the **asdlkup** or **cgpnasdrqd** SA can be specified as value for the **asn** parameter with the TIF services.

The MO SMS ASD feature must be enabled before an AS containing the **asdlkup** or **cgpnasdrqd** SA can be specified as a value for the **asn** parameter with the MOSMSGCDPN, MOSMSGCGPN, MOSMSICDPN, or MOSMSICGPN service.

The MO SMS GRN feature must be enabled before an AS containing the **cgpngrnrqd** or **grnlkup** SA can be specified as a value for the **asn** parameter with the MOSMSGCDPN, MOSMSGCGPN, MOSMSICDPN, or MOSMSICGPN service.

If a rule contains an FPFx with a wildcard value, then the rule cannot contain an AS where the **fpfx** CA is specified.

The value specified for the **fpfx** parameter cannot have a ? as the final character.

The value specified for the **fpfx** parameter cannot contain more than three single digit wildcard characters (?).

The value specified for the **fpfx** parameter can contain single digit wildcard characters (?) within only the first six digits of the value.

The Prepaid SMS Intercept Ph1 feature must be enabled before an AS containing the **pprelay** SA can be specified as a value for the **asn** parameter with the MOSMSGCDPN or MOSMSGCGPN service.

The Portability Check for MO SMS feature must be enabled before an AS containing the **fraudchk** SA can be specified as a value for the **asn** parameter with the MOSMSGCGPN service.

The MO SMS IS41-to-GSM Migration feature must be enabled before an AS containing the **migrate** SA can be specified as a value for the **asn** parameter with the MOSMSICDPN service.

The MO-based IS41 SMS NP feature must be enabled before an AS containing the **cdpnp** SA can be specified as a value for the **asn** parameter with the MOSMSICDPN service.

The MO-based GSM SMS NP feature must be enabled an AS containng the **cdpnp** SA can be specified as a value for the **asn** parameter with the MOSMSGCDPN service.

Output

```
ent-npp-srs:svrn=nppt:fpfx=abc:fdl=16:fnai=intl:asn=asn3
tekelecstp 09-02-19 13:57:09 EST EAGLE 40.1.0
NPP-SRS table is (1 of 8192) 1% full.

ENT-NPP-SRS: MASP A - COMPLTD
;
```

ent-rmt-appl

Enter Remote Application

Use this command to assign user parts to an internal point code that, in turn, assigns user parts to an End Office node.

Keyword: ent-rmt-appl

Related Commands: dlt-rmt-appl, rtrv-rmt-appl

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:ipc= (mandatory)

ANSI point code with subfields network indicator-network cluster-network cluster member (*ni-nc-ncm*). The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: **ipca**

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001-005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006-255**.

The point code **000-000-000** is not a valid point code.

:ipc/ipca/ipci/ipcn/ipcn24= (mandatory)

End Node's internal point code.

:ipci= (mandatory)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps-

zone—0-7

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

:ipcn= (mandatory)

ITU national point code with subfield ITU number (*nnnnn*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:ipcn24= (mandatory)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* indicates a private point code (*prefix-msa-ssa-sp*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**
msa—**000–255**
ssa—**000–255**
sp—**000–255**

:si= (mandatory)

Service indicator value that designates which user part is assigned to the IPC.

Range: **3-15**

:ssn= (optional)

SCCP subsystem number. Valid **only** if **si=3**. Use **ssn** as the starting value of the range if **ssne** is specified.

Range: **0-255**

:ssne= (optional)

Specifies the end of the range of subsystem numbers.

Range: **0-255**

Example

```
ent-rmt-appl:ipc=0-0-1:si=3:ssn=5
ent-rmt-appl:ipc=0-0-1:si=3:ssn=5:ssne=100
ent-rmt-appl:ipc=0-0-1:si=5
ent-rmt-appl:ipcn24=1-100-1:si=5
ent-rmt-appl:ipc=p-1-1-1:si=3:ssn=5:ssne=102
ent-rmt-appl:ipci=ps-2-2-2:si=5
```

Dependencies

Partial point codes are not allowed.

The **ssn** parameter is required if **si=3**.

The **ssn** and **ssne** parameters are not allowed unless **si=3**.

The **ssne** parameter value must be greater than the **ssn** parameter value.

The specified IPC **must** be previously defined in the destination table.

The new entry cannot conflict with an existing entry.

Notes

To specify a range of subsystem numbers, specify the **ssn** parameter value as the start of the range and the **ssne** parameter value as the end of the range.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (**s-**) and the private and spare point code subtype prefix (**ps-**). All of the point code types support the private (internal) point code subtype prefix (**p-**).

Output

```
ent-rmt-appl:ipc=0-0-1:si=3:ssn=5
rlghncxa03w 04-01-07 11:11:28 EST  EAGLE 31.3.0
ENT-RMT-APPL:  MASP A - COMPLTD
;
```

ent-rte

Enter Route

Use this command to add a route to the system.



CAUTION: When using the Network Routing feature, limited network management is provided for point codes not covered by full point code routing, Cluster Routing, or Nested Cluster Routing.

Keyword: ent-rte

Related Commands: dlt-rte, rept-stat-dstn, rtrv-rte

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:dpc= (mandatory)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: dpca

Range: p-, 000-255, *

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

The asterisk value (*) is not valid for the *ni* subfield.

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001–005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006–255.

The point code 000-000-000 is not a valid point code.

:dpc/dpca/dpci/dpcn= (mandatory)

Destination point code.

:dpci= (mandatory)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: s-, p-, ps-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps-

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

:dpcn= (mandatory)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: s-, p-, ps-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:dpcn24= (mandatory)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*. The *prefix* indicates a private point code (*prefix-msa-ssa-sp*).

Range: p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

msa—000-255

ssa—000-255

sp—000-255

:lsn= (mandatory)

The linkset name associated with this route.

Range: ayyyyyyyyy

1 alphabetic character followed by 9 alphanumeric characters

:rc= (mandatory)

The relative cost of the route

Range: 0-99

:force= (optional)

This parameter allows a route to be added to the database even if the linkset to be assigned to the route does not have any signaling links in it.

Range: yes, no

Default: no

Example

Adds route for dpc1-1-1 to linkset we123642:

ent-rte:dpc=1-1-1:lsn=we123642:rc=25

Adds route for dpc21-*-* to linkset we123642:

ent-rte:dpc=21-*-*:lsn=we123642:rc=25

Adds route for dpcn2410-100-14 to linkset we123624:

ent-rte:dpcn24=10-100-14:lsn=we123624:rc=10

Adds route for private dpcp-1-1-1 to linkset we123642.

ent-rte:dpc=p-1-1-1:lsn=we123642:rc=25

Adds route for private and spare dpcnps-4082-ge to linkset e1ntitun.

ent-rte:dpc=ps-4082-ge:lsn=e1ntitun:rc=10

Adds route for private dpcn24p-10-100-14 to linkset we123642.

ent-rte:dpcn24=p-10-100-1:lsn=we123642:rc=10

Adds route for private and spare dpcis-1-100-1 to linkset ue123642.

ent-rte:dpci=s-10-100-1:lsn=ue123642:rc=10

Dependencies

The value of the **lsn** parameter must exist in the STP database.

The **force=yes** parameter must be specified if a linkset is assigned to a route that has no links in it. The DPC must be in the Destination Point Code table.

The destination point code of a route must be a full point code (*ni-nc-ncm*), a cluster point code (*ni-nc-**), or a network point code (*ni-*-**).

If the specified destination address is a full point code address (*ni-nc-ncm*) and is a member of a provisioned cluster (*ni-nc-**), whether ordered routes can be assigned is determined by the destination address's NCAI (nested cluster allowed indicator). The **ncai=yes/no** parameter is set with the **ncai** parameter of the **ent/chg-dstn** commands.

- If the **ncai=no** parameter is specified, destinations comprising a cluster inherit their ordered routes from the cluster.
- If the **ncai=yes** parameter is specified, then the destination address is a member of a provisioned nested cluster where ordered routes can be assigned to a provisioned member.

If the specified destination address is a network cluster address (*ni-nc-**), the assignment of the specified ordered route attributes is determined by the setting of the destination address's NCAI (nested cluster allowed indicator). The **ncai=yes/no** parameter is set with the **ncai** parameter of the **ent/chg-dstn** commands.

- If the **ncai=no** parameter is specified, the collection of signaling point codes having the same network identifier (the **ni** parameter) and network cluster (the **nc** parameter) code are assigned the specified ordered route.
- If the **ncai=yes** parameter is specified, then the specified destination is a network cluster address where provisioned members's signaling point codes can be assigned the same or different ordered routes from the cluster.

If the **dpcn** parameter is specified, the format of the point code(s) must match the format that was assigned with the **chg-stpopts:npcfmti** parameter.

The **dpc/dpca/dpci/dpcn/dpcn24** parameter cannot be specified with a private point code (**-p**) unless the route is an IPGW route.

The route destination's type must match the route's linkset adjacent point code or the route's linkset secondary adjacent point code type.

If the **ipgwapc=yes** parameter is specified for the linkset, then the associated **dpc/dpca/dpci/dpcn/dpcn24** parameter cannot have a cluster route assigned.

The linkset must be defined with at least one link.

The value of the **rc** parameter cannot be assigned to more than two linksets.

A linkset can be entered only once as a route for each destination.

If the specified destination address is a network address (*ni-*-**), or network cluster address (*ni-nc-**), the linkset type (see the **chg-ls** command) used in the route must be **b**, **c**, or **d**.

Combined linksets are not allowed for X.25 destinations. Routes of equal cost destined for X.25 domains are not allowed.

If the value of the **dpc/dpca/dpci/dpcn/dpcn24** parameter is assigned to an X.25 domain, then the **lsn** parameter cannot be assigned to an adjacent point code that is assigned to the SS7 domain.

If the value of the **dpc/dpca/dpci/dpcn/dpcn24** parameter is assigned to an SS7 domain, then the **lsn** parameter cannot be assigned to an adjacent point code that is assigned to the X.25 domain.

All routes with ANSI DPCs must use ANSI linkset APCs. A route with an ITU-I DPC can go over an ITU-N APC and an ITU-N DPC can go over an ITU-I APC.

If the link set name (the **lsn** parameter) references a link set that has the **ipgwapc=yes** parameter specified, the DPC must not be a cluster route.

The NRT feature must be turned on before the **dpc/dpca/dpci/dpcn/dpcn24** parameter can be specified.

When using network routing, if the DPC has a value of * in the *nc* field, the *ncm* field must also be * (for example, **dpc= 21-*-***).

The value of the **dpc/dpca/dpci/dpcn/dpcn24** parameter cannot be the same as the EAGLE 5 ISS capability point code.

The value of the **dpc/dpca/dpci/dpcn/dpcn24** parameter cannot be the same as the EAGLE 5 ISS capability point code.

The value of the **dpc/dpca/dpci/dpcn/dpcn24** parameter cannot have already been assigned to an APC or SAPC for an IPGWx linkset. The entered route must include the APC or SAPC's linkset with the destination equal to the APC or SAPC.

If **dpcn** is specified then the format of **dpcn** must match the format dictated by the **npcfmti** parameter via the **chg-stpropts** command

The STP shall ensure that the ITU-N ordered route destination's group code must match the route's Link Set Adjacent PC's group code for all linksets other than IPGWI and IPLIMI.

The group code must match for all linksets because the ITU Duplicate Point Code feature is on.

If multiple routes are defined for the destination point code, and if a proxy point code is assigned to the destination point code, then the first route defined in the **ent-rte** command must use the proxy linkset.

If the **dpc** parameter has a network cluster address (*ni-nc-**) or network address (*ni-*-**), then the **lst=prx** parameter cannot be specified.

Notes

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (**s-**) and the private and spare point code subtype prefix (**ps-**). All of the point code types support the private (internal) point code subtype prefix (**p-**).

Output

```
ent-rte:dpc=1-1-1:lsn=we123642:rc=25
  rlgncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
  ENT-RTE: MASP A - COMPLTD
;
```

ent-rtx

Enter Exception Route

Use this command to enter an exception route entry. An exception route is associated with an entry in the Routing table. When the Origin-Based MTP Routing feature is enabled and turned on, the least cost route available for an MSU to be routed to a Destination Point Code over a specified linkset is used. See the *Database Administration - Features* manual for more information about determining routes for linksets.

Up to 6 routes can be defined to a single entry in the Routing table. Up to 8000 routesets can be defined for an STP. This total must include at least one normal route (not an exception route). The remaining 7999 routesets can include any combination of normal and exception routes.

NOTE: A routeset is a collection of routes to a destination. Each routeset can have up to 6 routes, with 16 links on each route. An exception routeset is a collection of up to 6 exception routes that have the same DPC, exception class, and criteria.

Keyword: ent-rtx

Related Commands: chg-rtx, dlt-rtx, rtrv-rtx

Command Class: Database Administration

Parameters

:dpc= (mandatory)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: dpca

Range: p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001-005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006-255.

The point code 000-000-000 is not a valid point code.

:dpci= (mandatory)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: s-, p-, ps-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps-

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

:dpcn= (mandatory)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmit** flexible point code option. A group code must be specified when the ITUDUPPDC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: s-, p-, ps-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:dpcn24= (mandatory)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*. The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range: **p-**, **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:lsn= (mandatory)

Linkset Name. This parameter specifies the name of the linkset that is associated with the specified exception route.

Range: *ayyyyyyyyy*

1 alphabetic character followed by up to 9 alphanumeric characters.

:rc= (mandatory)

Relative Cost. This parameter is the relative cost associated with the specified exception route.

Range: **0-99**

:cic= (optional)

Starting Circuit Identification Code. This parameter is used alone or together with the **ecic** parameter as exception routing criteria for the specified exception route.

Range: **0-16383**

:ecic= (optional)

Ending Circuit Identification Code. This parameter, together with the **cic** parameter, defines the CIC range that is used as exception routing criteria for the specified exception route.

Range: **0-16383**

:force= (optional)

The **force=yes** parameter must be specified when the **ilsn** parameter value is the same as the **lsn** parameter value.

Range: **yes**

:ilsn= (optional)

Incoming Link Set Name. This parameter contains the name of the originating linkset. The parameter value is used as part of the exception routing criteria for the specified exception route.

Range: *ayyyyyyyyy*

1 alphabetic character followed by up to 9 alphanumeric characters.

:opc= (optional)

ANSI origination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: **opca**

Range: **p-**, **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:opci= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:opcn= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmit** flexible point code option. A group code must be specified when the ITUDUPPDC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:opcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:si= (optional)

Service Indicator. This parameter is used as part of the exception routing criteria for the specified exception route.

Range: **3-15**

Example

ent-rtx:dpca=1-1-1:opca=2-3-3:lsn=lset1:rc=30

ent-rtx:dpca=1-3-1:ilsn=lset2:lsn=lset3:rc=20

ent-rtx:dpca=2-100-1:si=5:lsn=lset5:rc=50

Dependencies

Only one of the **opc**, **ilns**, **cic**, or **si** parameters can be specified for a exception route entry.

For an ANSI origination point code that is defined using asterisks (**nnn-*-***), the value of the *network identifier* subfield (*nnn*) must be greater than 5.

If the **ecic** parameter is specified, the **cic** parameter must also be specified.

The **ecic** parameter value cannot be less than the **cic** parameter value.

The **opc** parameter value cannot be the same as the **dpc** parameter value.

The Origin-Based MTP Routing feature must be enabled and turned on before this command can be entered.

The **dpc** parameter must already exist in the Route table.

A destination point code cannot be specified if it is already being used as an adjacent point code.

The linkset name, as defined by the **ilns** or **lsn** parameter, must exist.

An exception route entry cannot already exist with the same input parameter values, other than the relative cost..

For the **opc**, **ilns**, CIC range (**cic** and **ecic** parameter values are not identical), and **si** criteria, only one pair of identical exception route conditions, differing only in **lsn** assignment, can exist for a given DPC. For exception route conditions with a single CIC, there can be only one exception route per CIC value per DPC per route cost.

A maximum of 6 exception routes can be associated with the specified DPC and criteria.

A maximum total of 8000 exception routes and normal routes can be defined for the EAGLE 5 ISS. At least one route must be a normal (not exception) route. The remaining routes (up to 7999) can be all normal routes, all exception routes, or any combination of normal and exception routes.

The network domain of the APC/SAPC in the linkset specified by the **lsn** parameter must be the same network domain of the specified DPC or its alias.

The APC/SAPC type and group code in the linkset specified by the **lsn** parameter must match the **dpc** parameter.

The specified CIC/ECIC range must not overlap an existing range.

The **force=yes** parameter must be specified in the following cases:

- The value specified for the **ilns** parameter is the same as the value specified for the **lsn** parameter.
- The value specified for the **ilns** parameter is the same as any of the linkset names within the routeset specified by the **rsn** parameter.
- The value specified for the **opc** parameter is the same as the APC of the linkset specified by the **lsn** parameter
- The value specified for the **opc** parameter is the same as the APC of any of the linksets within the routeset specified by the **rsn** parameter.

The **opc** parameter must be in the same ITU-N group as the **dpc** parameter.

The Group Code of the APCN in the **ilns** parameter must be the same as the Group Code of the **dpc** parameter.

ANSI network routing and cluster point codes as OPC exception route criteria are not allowed for ITU destinations.

ITU point codes as OPC exception route criteria are not allowed for ANSI Network and Cluster destination.

The value specified for the destination point code must be a full point code and not a cluster or network point code.

Output

```
ent-rtx:dpci=2-100-1:si=5:lsn=lset5:rc=50
stdcfg2b 06-05-19 18:20:11 EST EAGLE 35.0.0
ENT-RTX: MASP A - COMPLTD
```

ent-scr-aftpc

Enter Allowed Affected Point Code

Use this command to add a specific allowed affected point code (AFTPC) screening reference in the AFTPC entity set.

Keyword: ent-scr-aftpc

Related Commands: chg-scr-aftpc, dlt-scr-aftpc, rtrv-scr-aftpc

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:nsfi= (mandatory)

This parameter specifies the next screening category that is used in the gateway screening process. If specified, the parameter value must be **stop**.

Range: stop

stop— The gateway screening process ends and the message proceeds through normal routing.

:sr= (mandatory)

Screening reference. This parameter specifies the point code's unique screening reference name.

Range: ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

:ssn= (mandatory)

The subsystem number. An asterisk (*) indicates the full range of values from **1-255**.

Range: 1-255 *

:actname= (optional)

The name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: ayyyyy

1 alphabetic character followed by up to 5 alphanumeric characters.

:area= (optional)

The ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000-255**.

Range: 000-255 *

:id= (optional)

The ITU international ID. The parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0-7**.

Range: 0-7 *

:msa= (optional)

The 24-bit ITU-national main signaling area (msa) value. It specifies the **msa** of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:nc= (optional)

The network cluster (nc) value. This parameter specifies one or more nc values for the network indicator (ni) and network cluster member (ncm) values specified in the **ni** and **ncm** parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:ncm= (optional)

The network cluster member (ncm) value. This parameter specifies one or more ncm values for the network indicator (ni) and network cluster (nc) values identified in the **ni** and **nc** parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000-255**.

Range: **0-255 ***

:ni= (optional)

The network indicator (ni) value. This parameter specifies one or more ni values for the network cluster (nc) and network cluster member (ncm) values identified in the **nc** and **ncm** parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000-255**.

Range: **0-255 ***

:npc= (optional)

The ITU national point code. An asterisk (*) indicates the full range of values from **00000-16383**.

NOTE: Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see "Converting ITU National Point Code Formats" in Appendix A for information on converting the point code format.

Range: **00000-16383 ***

:nsp= (optional)

The new 24-bit ITU national signaling point (sp). It specifies the new **sp** of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **0-255 ***

:nsr= (optional)

Next screening reference (nsr). The parameter indicates which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. If **nsfi=stop**, the **nsr** parameter cannot be specified.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

Default: Current value

:pcst= (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (**s-**).

Range: **none, s**

Default: **none**

:sp= (optional)

The 24-bit ITU national signaling point. This parameter specifies the signaling point (sp) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:ssa= (optional)

The 24-bit ITU national sub signaling area. This parameter specifies the sub signaling area (ssa) in the point code represented by the format *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:zone= (optional)

The ITU international zone. The parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0-7**.

Range: **0-7, ***

Example

```
ent-scr-aftpc:sr=iec:ni=240:nc=010:ncm=010:ssn=012:nsfi=stop
ent-scr-
aftpc:sr=iec:ni=240:nc=010:ncm=010:ssn=012:nsfi=stop:actname=copy
ent-scr-aftpc:nsfi=stop:sr=af01:ssn=1:msa=255:ssa=255:sp=255
ent-scr-aftpc:sr=aft1:zone=1:area=2:id=3:nsfi=stop:ssn=1:pcst=s
```

Dependencies



CAUTION: Even though gateway screening is in the screen test mode, as defined by the parameters *gwsa=off* and *gws=on*, the gateway screening action in the stop action set specified by the *actname* parameter of the screen set *will* be performed at the end of the screening process.

A complete point code must be specified, and must be one, and only one of the four point code parameter combinations: **ni-nc-ncm**; **zone-area-id**; **msa-ssa-sp**; or **npc**.

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

The value of the **actname** parameter must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the *ACT NAME* field of the **rtrv-gws-actset** command output.

The character **c** is not a valid value for the **ni**, **nc**, **ncm**, **zone**, **area**, **id**, **msa**, **ssa**, **sp**, and **npc** parameters.

If **zone=*** is specified, **area=*** and **id=*** must be specified.

If **area=*** is specified, **id=*** must be specified.

If **msa=*** is specified, **ssa=*** and **sp=*** must be specified.

If **ssa=*** is specified, **sp=*** must be specified.

If specified, the **nsfi** parameter value must be **stop**.

If the **nsfi=stop** parameter is specified, the **nsr** parameter cannot be specified.

If the screening reference exists (**sr**), the new affected point code and subsystem number to be added cannot already exist in the AFTPC entity set.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The spare point code subtype prefix (**s-**) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** and **npcst** parameters cannot be specified for ANSI and ITU-N24 point codes.

The Gateway Screening Rules table can contain a maximum of 372,600 rules.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc** parameter is specified as an asterisk (**nc=***), the **ncm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **ncm** parameter is specified as a single value, or a range other than the full range of **000–255**, the **ni** and the **nc** parameters must be specified with a single value.

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range **000–255**.

Notes

A range of values is specified by separating the values that define the range by two ampersands (**&&**); for example, **:ni=025&&100** specifies all network indicators for ANSI point codes from 25 to 100.

If the screening reference is valid, but does not exist, a new AFTPC screen is created.

If the screening reference exists, a new rule is added to the AFTPC screening table.

If asterisks or ranges are specified for the allowed AFTPCs, nothing that matches the specified range of AFTPCs can already exist in the AFTPC screen for the screening reference.

If the screen set reaches 100% capacity (indicated by the 100% Full message), the system allows subsequent entries. An error occurs, however, when downloading the screen set to an LIM. Ensure that screen sets do not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

An asterisk cannot not be specified for a parameter value in this command unless an asterisk was specified for the parameter value in the original **ent-scr-aftpc** command.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** parameter indicates whether the specified point code has no subtype prefix to has the spare point code prefix.

Output

```
ent-scr-aftpc:sr=iec:ni=240:nc=010:ncm=010:ssn=012:nsfi=stop
```

```
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
ENT-SCR-AFTPC: SCREEN SET AFFECTED - IEC 25% FULL
ENT-SCR-AFTPC: MASP A - COMPLTD
```

```
;
```

Legend

ENT-SCR-AFTPC—The command entered that caused this output. This is echoed to the printer as a reference.

SCREEN SET AFFECTED - IEC—Identifies the screen set that was affected by the command. The screen set name is provided.

25% FULL—Indicates the relative size of the screen set.

ent-scr-blkdpc**Enter Blocked DPC**

Use this command to add a specific blocked destination point code (BLKDPC) screening reference, and associated attributes, to the BLKDPC's table. The associated attributes are: destination point code, next screening function identifier, and next screening reference. The destination point codes listed on this screen are prohibited from sending SS7 messages to the network.

Keyword: **ent-scr-blkdpc**

Related Commands: **chg-scr-blkdpc**, **dlt-scr-blkdpc**, **rtrv-scr-blkdpc**

Command Class: Database Administration

Parameters

:nsfi= (mandatory)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range: **cgpa, destfld, fail, isup, stop**

cgpa — Allowed CGPA is the next screening category.

destfld — Allowed destination field (DESTFLD) is the next screening category.

fail — Discard the received message.

isup — ISUP message type (ISUP) is the next screening category.

stop — The gateway screening process ends and the message proceeds through normal routing.

:sr= (mandatory)

Screening reference. This parameter specifies the point code's unique screening reference name.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

:actname= (optional)

The name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: *ayyyyy*

1 alphabetic character followed by up to 5 alphanumeric characters.

:area= (optional)

The ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:id= (optional)

The ITU international ID. The parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7, ***

:msa= (optional)

The 24-bit ITU-national main signaling area (msa) value. It specifies the **msa** of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 *, C**

:nc= (optional)

The network cluster (nc) value. This parameter specifies one or more nc values for the network indicator (ni) and network cluster member (ncm) values specified in the **ni** and **ncm** parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: 000-255 *, C

:ncm= (optional)

The network cluster member (ncm) value. This parameter specifies one or more ncm values for the network indicator (ni) and network cluster (nc) values identified in the **ni** and **nc** parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: 0-255 *, C

:ni= (optional)

The network indicator (ni) value. This parameter specifies one or more ni values for the network cluster (nc) and network cluster member (ncm) values identified in the **nc** and **ncm** parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: 0-255 *, C

:npc= (optional)

The ITU national point code. An asterisk (*) indicates the full range of values from **00000–16383**.

NOTE: Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see "Converting ITU National Point Code Formats" in Appendix A for information on converting the point code format.

Range: 00000-16383 *, C

:nsr= (optional)

The next screening reference parameter indicates which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. This parameter is mandatory if **nsfi** is other than **stop** or **fail**. The **nsr** parameter cannot be specified if **nsfi** is **stop** or **fail**.

Range: ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Default: No value given

:pcst= (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range: none, s

Default: none

:sp= (optional)

The 24-bit ITU national signaling point. This parameter specifies the signaling point (sp) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: 000-255 *, C

:ssa= (optional)

The 24-bit ITU national sub signaling area. This parameter specifies the sub signaling area (ssa) in the point code represented by the format *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: 000-255 *, C

:zone= (optional)

The ITU international zone. The parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: 0-7 *, C

Example

ent-scr-blkdpc:sr=iec:ni=c:nc=c:ncm=c:nsfi=cgpa:nsr=wrds

```

ent-scr-blkdpc:sr=iec:ni=c:nc=c:ncm=c:nsfi=stop
ent-scr-blkdpc:sr=iec:ni=c:nc=c:ncm=c:nsfi=stop:actname=copy
ent-scr-blkdpc:sr=iec:ni=240:nc=:ncm=:nsfi=fail
ent-scr-blkdpc:sr=bdp1:zone=1:area=2:id=3:nsfi=fail:pcst=none
ent-scr-blkdpc:sr=bdp1:zone=2:area=2:id=3:nsfi=fail:pcst=s
ent-scr-blkdpc:sr=bdp1:npc=128:nsfi=fail:pcst=s

```

Dependencies



CAUTION: Even though gateway screening is in the screen test mode, as defined by the parameters **gwsa=off** and **gwsn=on**, the gateway screening action in the stop action set specified by the **actname** parameter of the screen set *will* be performed at the end of the screening process.

The Gateway Screening Rules table can contain a maximum of 362, 700 rules.

A complete point code must be specified, using the **ni-nc-ncm**, **zone-area-id**, **msa-ssa-sp**, or **npc** combination unless a value of **c** for “continue” is specified.

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

At least one optional parameter must be specified.

When a blocked DPC screen is created, the first entry for the **ni-nc-ncm zone-area-id**, or **msa-ssa-sp** must be **c-c-c** or **npc** must be **c**. Subsequent entries can be specific point codes.

If the **actname** parameter is specified, then the **nsfi=stop** parameter must be specified.

The value of the **actname** parameter must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the *ACT NAME* field of the **rtrv-gws-actset** command output.

If the **area=*** parameter is specified, then the **id=*** parameter must be specified.

If the **msa=*** parameter is specified, then the **ssa=*** and the **sp=*** parameters must be specified.

If the **msa=c** parameter is specified, then the **ssa** and the **sp** parameters must have a value of **c** or must not be specified. If the **msa=c** parameter is specified, and the **ssa** and the **sp** parameters are not specified, then the **ssa** and **sp** parameters default to a value of **c**.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc** parameter is specified as an asterisk (**nc=***), the **ncm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **ncm** parameter is specified as a single value, or a range other than the full range of **000–255**, the **ni** and the **nc** parameters must be specified with a single value.

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range **000–255**.

If the **ni=c** parameter is specified, then the **nc** and the **ncm** parameters must have a value of **c** or must not be specified. If the **ni=c** parameter is specified, and the **nc** and the **ncm** parameters are not specified, then the **nc** and **ncm** parameters default to a value of **c**.

If the specified **ni-nc-ncm**, **zone-area-id**, or **msa-ssa-sp** is not equal to **c-c-c**, or if the **npc=c** parameter is not specified, then the **nsfi=fail** parameter must be specified, and the **nsr** parameter cannot be specified.

If the **nsfi** parameter has a value other than **stop** or **fail**, the **nsr** parameter must be specified and must exist.

The **nsfi** and **nsr** parameters must point to an existing screen, or the **nsfi=stop** parameter must be specified, and the **nsr** parameter cannot be specified.

If the **sr** does not exist, then the **ni-nc-ncm**, **zone-area-id**, or **msa-ssa-sp** parameters must equal **c-c-c**, or the **npc=c** parameter must be specified, and the **nsfi=fail** parameter cannot be specified.

If the specified screening reference (**sr**) exists:

- The **ni-nc-ncm zone-area-id**, or **msa-ssa-sp** must equal **c-c-c** or **npc** must not equal **c**.
- The **nsfi** parameter must be **fail**.
- The **nsr** parameter cannot be specified.
- The blocked DPC, given by **ni-nc-ncm** (or **zone-area-id** or **npc**), to be added to the BLKDPC screening table for the blocked DPC screening reference cannot exist as defined or within an existing range of DPCs.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The **pcst** parameter cannot be specified with **c** for a blocked screen reference (**sr**).

The spare point code subtype prefix (**s-**) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** parameter cannot be specified for ANSI and ITU-N24 point codes.

If the **ssa=*** parameter is specified, then the **sp=*** parameter must be specified.

If the **zone=*** parameter is specified, then the **area=*** and the **id=*** parameters must be specified.

If the **zone=c** parameter is specified, then the **area** and the **id** parameters must have a value of **c** or must not be specified. If the **zone=c** parameter is specified, and the **area** and the **id** parameters are not specified, then the **area** and **id** parameters default to a value of **c**.

The value of the **nsfi** parameter must be valid for the BLKDPC entity type.

If a blocked screen reference exists, then the **ni**, **zone**, **msa**, and **npc** parameters cannot have a value of **c**.

Notes

When a blocked DPC screening reference is created, the first entry for a point code must be **c-c-c**, or **c** for the **npc** parameter. Subsequent entries must be specific point codes.

The character **c** is used in the blocked DPC screens to allow the screening process to continue for messages with point codes that do not match any point codes in the blocked DPC screens. When screening for a blocked DPC and the point code being screened does not match any of the point codes in the blocked DPC screens, the message is not rejected and the screening process continues.

There must be an entry in the blocked DPC screens to allow the screening process to continue. This entry consists of a screening reference, point code, **nsfi**, and **nsr**. The point code is in the form of **npc=c** or of subfields equal to **c-c-c**. When the character **c** is specified, the **nsfi** and **nsr** parameters must be specified.

If the character **c** is specified for the parameters **ni-nc-ncm** or **zone-area-id** or **msa-ssa-sp**, the character **c** is the only value that can be specified for all three parameters. No other values can be used. For example, a point code **c-c-255** is not allowed. The point code must be **c-c-c**. The asterisk (*) value cannot be used with the character **c** (for example, a point code **c-c-*** is not allowed).

When the point code does not match any entries in the blocked DPC screens, the screening process is directed to the screening reference with the point code **c-c-c** or **npc=c**. The **nsfi** and **nsr** in this entry are examined to determine the next step in the screening process.

If the current **ni-nc-ncm** or **zone-area-id** or **msa-ssa-sp** is equal to **c-c-c** or **npc=c**, only the **nsfi** and **nsr** parameters can be changed. Otherwise, only the blocked DPC can be changed.

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, **:ni=025&&100** specifies all network indicators for ANSI point codes from 25 to 100.

An asterisk cannot not be specified for a parameter value in this command unless an asterisk was specified for the parameter value in the original **ent-scr-blkdpc** command.

If the screen set reaches 100% capacity (indicated by the 100% Full message), the system allows subsequent entries. An error occurs, however, when downloading the screen set to an LIM. Ensure that screen sets do not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

```
ent-scr-blkdpc:sr=iec:ni=c:nc=c:ncm=c:nsfi=cgpa:nsr=wrds
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
ENT-SCR-BLKDPC: SCREEN SET AFFECTED - IEC 25% FULL
ENT-SCR-BLKDPC: MASP A - COMPLTD
;
```

Legend

ENT-SCR-BLKDPC—The command entered that caused this output. This is echoed to the printer as a reference.

SCREEN SET AFFECTED - SS01—Identifies the screen set that was affected by the command. The screen set name is provided.

25% FULL—Indicates the relative size of the screen set.

ent-scr-blkopc

Enter Blocked OPC

Use this command to add a specific blocked originating point code (BLKOPC) screening reference and associated attributes OPC, **nsfi**, and **nsr** to the BLKOPC entity set. Any messages received on the link assigned to this screening reference that match the attributes in this table are blocked from entering the network.

Keyword: ent-scr-blkopc

Related Commands: chg-scr-blkopc, dlt-scr-blkopc, rtrv-scr-blkopc

Command Class: Database Administration

Parameters

:nsfi= (mandatory)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range: blkdpc, cgpa, dpc, fail, sio, stop

blkdpc—Blocked DPC is the next screening category.

cgpa—Allowed CGPA is the next screening category.

dpc — Allowed DPC is the next screening category.

fail — Discard the received message.

sio — Allowed SIO is the next screening category.

stop — The gateway screening process ends and the message proceeds through normal routing.

:sr= (mandatory)

Screening reference. This parameter specifies the point code's unique screening reference name.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

:actname= (optional)

The name of the gateway screening stop action set. Stop actions must be administered using the

actname parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: *ayyyyy*

1 alphabetic character followed by up to 5 alphanumeric characters.

:area= (optional)

The ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255** *, C

:id= (optional)

The ITU international ID. The parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7** *, C

:msa= (optional)

The 24-bit ITU-national main signaling area (msa) value. It specifies the **msa** of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255** *, C

:nc= (optional)

The network cluster (nc) value. This parameter specifies one or more nc values for the network indicator (ni) and network cluster member (ncm) values specified in the **ni** and **ncm** parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255** *, C, && (Allow intervals)

:ncm= (optional)

The network cluster member (ncm) value. This parameter specifies one or more ncm values for the network indicator (ni) and network cluster (nc) values identified in the **ni** and **nc** parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255** *, C, && (Allow intervals)

:ni= (optional)

The network indicator (ni) value. This parameter specifies one or more ni values for the network cluster (nc) and network cluster member (ncm) values identified in the **nc** and **ncm** parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255** *, C, && (Allow intervals)

:npc= (optional)

The ITU national point code. An asterisk (*) indicates the full range of values from **00000–16383**.

NOTE: Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see "Converting ITU National Point Code Formats" in Appendix A for information on converting the point code format.

Range: 00000-16383 *, C

:nsr= (optional)

Next screening reference (nsr). The parameter indicates which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. If **nsfi=stop**, the **nsr** parameter cannot be specified.

Range: ayyy
1 alphabetic character followed by up to 3 alphanumeric characters

Default: No value given

:pcst= (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range: none, s

Default: none

:sp= (optional)

The 24-bit ITU national signaling point. This parameter specifies the signaling point (sp) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from 000-255.

Range: 000-255 *, C

:ssa= (optional)

The 24-bit ITU national sub signaling area. This parameter specifies the sub signaling area (ssa) in the point code represented by the format *msa-ssa-sp*. An asterisk (*) indicates the full range of values from 000-255.

Range: 000-255 *, C

:zone= (optional)

The ITU international zone. The parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from 0-7.

Range: 0-7 *, C

Example

```
ent-scr-blkopc:sr=iec:ni=c:nc=c:ncm=c:nsfi=cgpa:nsr=wrds5
ent-scr-blkopc:sr=iec:ni=c:nc=c:ncm=c:nsfi=stop
ent-scr-blkopc:sr=iec:ni=c:nc=c:ncm=c:nsfi=stop:actname=copy
ent-scr-blkopc:sr=iec:ni=240:nc=*:ncm=*:nsfi=fail
ent-scr-blkopc:sr=bo30:nsfi=stop:msa=c:ssa=c:sp=c
ent-scr-blkopc:sr=bo30:nsfi=fail:msa=1:ssa=2:sp=3
ent-scr-blkopc:sr=bo30:nsfi=fail:msa=3:ssa=*:sp=*
ent-scr-blkopc:sr=bo30:nsfi=fail:msa=255:ssa=2:sp=3
ent-scr-blkopc:sr=bop1:zone=1:area=2:id=3:nsfi=fail:pcst=none
ent-scr-blkopc:sr=bop1:zone=2:area=2:id=3:nsfi=fail:pcst=s
ent-scr-blkopc:sr=bop1:npc=128:nsfi=fail:pcst=s
```

Dependencies



CAUTION: Even though gateway screening is in the screen test mode, as defined by the parameters **gwsa=off** and **gwsn=on**, the gateway screening action in the stop action set specified by the **actname** parameter of the screen set *will* be performed at the end of the screening process.

The Gateway Screening Rules table can contain a maximum of 362,700 rules.

A complete point code must be specified, using the **ni-nc-ncm**, **zone-area-id**, **msa-ssa-sp**, or **npc** combination unless a value of **c** for “continue” is specified.

The ANSI point code value **000-000-000** and the ITU-International point code value **0-000-0** cannot be specified.

At least one optional parameter must be specified.

When a blocked OPC screen is created, the first entry for the **ni-nc-ncm zone-area-id**, or **msa-ssa-sp** must be **c-c-c** or **npc** must be **c**. Subsequent entries can be specific point codes.

If asterisks or ranges are specified for the blocked OPCs, nothing that matches the specified range of blocked OPCs can already exist in the BLKOPC screening table for the screening reference.

If the **actname** parameter is specified, then the **nsfi=stop** parameter must be specified.

The value of the **actname** parameter must exist in the Gateway Screening Stop Action table.

If **area=*** is specified, **id=*** must be specified.

If **msa=*** is specified, **ssa=*** and **sp=*** must be specified.

If the **msa=c** parameter is specified, then the **ssa** and the **sp** parameters must have a value of **c** or must not be specified. If the **msa=c** parameter is specified, and the **ssa** and the **sp** parameters are not specified, then the **ssa** and **sp** parameters default to a value of **c**.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc** parameter is specified as an asterisk (**nc=***), the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **ncm** parameter is specified as a single value, or a range other than the full range of **000-255**, the **ni** and the **nc** parameters must be specified with a single value.

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range **000-255**.

If the **ni=c** parameter is specified, then the **nc** and the **ncm** parameters must have a value of **c** or must not be specified. If the **ni=c** parameter is specified, and the **nc** and the **ncm** parameters are not specified, then the **nc** and **ncm** parameters default to a value of **c**.

If the specified **ni-nc-ncm**, **zone-area-id**, or **msa-ssa-sp** is not equal to **c-c-c**, or if the **npc=c** parameter is not specified, then the **nsfi=fail** parameter must be specified, and the **nsr** parameter cannot be specified.

If the value of the **nsfi** parameter is not **stop** or **fail**, then the **nsr** parameter must be specified.

The **nsfi** and **nsr** parameters must point to an existing screen, or the **nsfi=stop** parameter must be specified, and the **nsr** parameter cannot be specified.

If the **sr** does not exist, then the **ni-nc-ncm**, **zone-area-id**, or **msa-ssa-sp** parameters must equal **c-c-c**, or the **npc=c** parameter must be specified, and the **nsfi=fail** parameter cannot be specified.

If the specified screening reference (**sr**) exists:

- The **ni-nc-ncm**, **zone-area-id**, or **msa-ssa-sp** must equal **c-c-c** or **npc** must not equal **c**.
- The **nsfi** parameter must be **fail**.
- The **nsr** parameter cannot be specified.
- The blocked OPC, specified by **ni-nc-ncm**, **zone-area-id**, **msa-ssa-sp**, or **npc**, to be added to the BLKOPC screening table for the blocked OPC screening reference cannot exist as defined or within an existing range of OPCs.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The **pcst** parameter cannot be specified with **c** for a blocked screen reference (**sr**).

The spare point code subtype prefix (**s-**) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** parameter cannot be specified for ANSI and ITU-N24 point codes.

If **ssa=*** is specified, **sp=*** must be specified.

If **zone=*** is specified, **area=*** and **id=*** must be specified.

If the **zone=c** parameter is specified, then the **area** and the **id** parameters must have a value of **c** or must not be specified. If the **zone=c** parameter is specified, and the **area** and the **id** parameters are not specified, then the **area** and **id** parameters default to a value of **c**.

The specified **nsfi** parameter value must be valid for the BLKOPC entity type.

If a blocked screen reference exists, then the **ni**, **zone**, **msa**, and **npc** parameters cannot have a value of **c**.

Notes

When a blocked DPC screening reference is created, the first entry for a point code must be **c-c-c**, or **c** for the **npc** parameter. Subsequent entries must be specific point codes.

The character **c** is used in the blocked DPC screens to allow the screening process to continue for messages with point codes that do not match any point codes in the blocked DPC screens. When screening for a blocked DPC and the point code being screened does not match any of the point codes in the blocked DPC screens, the message is not rejected and the screening process continues.

There must be an entry in the blocked DPC screens to allow the screening process to continue. This entry consists of a screening reference, point code, **nsfi**, and **nsr**. The point code is in the form of **npc=c** or subfields equal to **c-c-c**. When the character **c** is specified, the **nsfi** and **nsr** parameters must be specified.

If the character **c** is specified for the parameters **ni-nc-ncm** or **zone-area-id** or **msa-ssa-sp**, the character **c** is the only value that can be specified for all three parameters. No other values can be used. For example, a point code **c-c-255** is not allowed. The point code must be **c-c-c**. The asterisk (*) value cannot be used with the character **c** (for example, a point code **c-c-*** is not allowed).

When the point code does not match any entries in the blocked DPC screens, the screening process is directed to the screening reference with the point code **c-c-c** or **npc=c**. The **nsfi** and **nsr** in this entry are examined to determine the next step in the screening process.

If the current **ni-nc-ncm** or **zone-area-id** or **msa-ssa-sp** is equal to **c-c-c** or **npc=c**, only the **nsfi** and **nsr** can be changed. Otherwise, only the blocked DPC can be changed.

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, **: ni=025&&100** specifies all network indicators for ANSI point codes from 25 to 100.

An asterisk cannot not be specified for a parameter value in this command unless an asterisk was specified for the parameter value in the original **ent-scr-blkopc** command.

If the screen set reaches 100% capacity (indicated by the 100% Full message), the system allows subsequent entries. An error occurs, however, when downloading the screen set to an LIM. Ensure that screen sets do not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

```
ent-scr-blkopc:sr=iec:ni=c:nc=c:ncm=c:nsfi=cgpa:nsr=wrds
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
ENT-SCR-BLKOPC: SCREEN SET AFFECTED - IEC 25% FULL
ENT-SCR-BLKOPC: MASP A - COMPLTD
;
```

Legend

ENT-SCR-BLKOPC—The command entered that caused this output. This is echoed to the printer as a reference.

SCREEN SET AFFECTED - IEC—Identifies the screen set that was affected by the command. The screen set name is provided.

25% FULL—Indicates the relative size of the screen set.

ent-scr-cdpa

Enter Allowed Called Party Address

Use this command to add a specific allowed called party address (CDPA) screening reference in the CDPA entity set.

Keyword: **ent-scr-cdpa**

Related Commands: **chg-scr-cdpa**, **dlt-scr-cdpa**, **rtrv-scr-cdpa**

Command Class: Database Administration

Parameters

:nsfi= (mandatory)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range: **aftpc**, **stop**

aftpc— Allowed affected point code is the next screening category.

stop— The gateway screening process ends and the message proceeds through normal routing.

:sr= (mandatory)

Screening reference. This parameter specifies the point code's unique screening reference name.

:ssn= (mandatory)

The subsystem number. An asterisk (*) indicates the full range of values from **1-255**.

Range: **1-255 ***

:actname= (optional)

The name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: *ayyyyy*

1 alphabetic character followed by up to 5 alphanumeric characters.

:area= (optional)

The ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:id= (optional)

The ITU international ID. The parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7, ***

:msa= (optional)

The 24-bit ITU-national main signaling area (msa) value. It specifies the **msa** of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:nc= (optional)

The network cluster (nc) value. This parameter specifies one or more nc values for the network indicator (ni) and network cluster member (ncm) values specified in the **ni** and **ncm** parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:ncm= (optional)

The network cluster member (ncm) value. This parameter specifies one or more ncm values for the network indicator (ni) and network cluster (nc) values identified in the **ni** and **nc** parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 ***

:ni= (optional)

The network indicator (ni) value. This parameter specifies one or more ni values for the network cluster (nc) and network cluster member (ncm) values identified in the **nc** and **ncm** parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 ***

:npc= (optional)

The ITU national point code. An asterisk (*) indicates the full range of values from **00000–16383**.

NOTE: Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see "Converting ITU National Point Code Formats" in Appendix A for information on converting the point code format.

Range: **00000-16383 ***

:nsr= (optional)

Next screening reference (nsr). The parameter indicates which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. If **nsfi=stop**, the **nsr** parameter cannot be specified.

Range: *ayyy*
1 alphabetic character followed by up to 3 alphanumeric characters

Default: No value given

:pcst= (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range: **none, s**
Default: **none**

:scmgfid= (optional)

The SCMG Format ID. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **1–255**. The following SCCP message types are screened against the Allowed CDPA table and all others are passed: UDT, UDTS, XUDT, XUDTS.

Range: **1-255 ***

:sp= (optional)

The 24-bit ITU national signaling point. This parameter specifies the signaling point (sp) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:ssa= (optional)

The 24-bit ITU national sub signaling area. This parameter specifies the sub signaling area (ssa) in the point code represented by the format *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:zone= (optional)

The ITU international zone. The parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7, ***

Example

```
ent-scr-
cdpa:sr=iec:ni=240:nc=010:ncm=*:ssn=224:nsfi=aftpc:nsr=wrds
ent-scr-
cdpa:sr=iec:ni=240:nc=010:ncm=*:ssn=224:nsfi=stop:actname=copy
ent-scr-
cdpa:sr=cdp1:zone=1:area=2:id=3:ssn=1:nsfi=stop:scmgfid=1:pcst=s
```

Dependencies



CAUTION: Even though gateway screening is in the screen test mode, as defined by the parameters **gwsa=off** and **gwsn=on**, the gateway screening action in the stop action set specified by the **actname** parameter of the screen set *will* be performed at the end of the screening process.

The Gateway Screening Rules table can contain a maximum of 372,600 rules.

A complete point code must be specified, and must be one and only one of the four point code parameter combinations: **ni-nc-ncm**; **zone-area-id**; **msa-ssa-sp**; or **npc**, except in the special case of entering **c** for "continue."

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

At least one optional parameter must be specified.

The new CDPA entry to be added cannot match any specific, range, or asterisk entry already existing in the specified screening table.

The character **c** is not a valid value for the **ni**, **nc**, **ncm**, **zone**, **area**, **id**, **msa**, **ssa**, **sp**, and **npc** parameters.

The value of the **actname** parameter must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the *ACT NAME* field of the **rtrv-gws-actset** command output.

When the **actname** parameter is specified, the **nsfi=stop** parameter must be specified.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc** parameter is specified as an asterisk (**nc=***), the **ncm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **ncm** parameter is specified as a single value, or a range other than the full range of **000–255**, the **ni** and the **nc** parameters must be specified with a single value.

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range **000–255**.

If the **nnc** parameter is specified as a range, the **nncm** parameter must be specified as an asterisk or as the full range **000–255**.

When **nsfi=aftp** is specified, the **ssn=1** parameter must be specified.

When **nsfi** is a value other than **stop**, the **nsr** parameter must be specified.

When **nsfi=stop** is specified, the **nsr** parameter cannot be specified.

When **ssn=1** is specified, the **scmgfid** parameter must be specified.

When **ssn** is not **1**, the **scmgfid** parameter cannot be specified.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The spare point code subtype prefix (s-) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** parameter cannot be specified for ANSI and ITU-N24 point codes.

The specified value for the **nsfi** parameter is not valid for **cdpa** screen.

The next screening function identifier (**nsfi**) and the next screening reference (**nsr**) must point to an existing screen, or the **nsfi** must be equal to **stop** and the **nsr** must not be specified.

Notes

If the screening reference is valid, but does not exist, a new CDPA screen is created.

If the screening reference exists, a new rule is added to the CDPA screening table.

A range of values is specified by separating the values that define the range by two ampersands (**&&**); for example, **:ni=025&&100** specifies all network indicators for ANSI point codes from **25** to **100**.

If the screen set reaches 100% capacity (indicated by the 100% Full message), the system will allow subsequent entries. An error will occur, however, when downloading the screen set to a LIM. Screen sets should not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

An asterisk cannot not be specified for a parameter value in this command unless an asterisk was specified for the parameter value in the original **ent-scr-cdpa** command.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

ent-scr-

cdpa:sr=iec:ni=240:nc=010:ncm=*:ssn=224:nsfi=aftpc:nsr=wrds

rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0

ENT-SCR-CDPA: SCREEN SET AFFECTED - IEC 25% FULL

ENT-SCR-CDPA: MASP A - COMPLTD

;

Legend

ENT-SCR-CDPA—The command entered that caused this output. This is echoed to the printer as a reference.

SCREEN SET AFFECTED - IEC—Identifies the screen set that was affected by the command. The screen set name is provided.

25% FULL—Indicates the relative size of the screen set.

ent-scr-cgpa

Enter Allowed Calling Party Address

Use this command to add a specific allowed calling party address (CGPA) screening reference in the CGPA entity set.

Keyword: **ent-scr-cgpa**

Related Commands: **chg-scr-cgpa**, **dlt-scr-cgpa**, **rtrv-scr-cgpa**

Command Class: Database Administration

Parameters

:nsfi= (mandatory)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range: **cdpa**, **stop**, **tt**

cdpa— Allowed called party address is the next screening category.

stop— The gateway screening process ends and the message proceeds through normal routing.

tt— Allowed translation type is the next screening category.

:ri= (mandatory)

The routing indicator provides routing instructions to the receiving signaling point. In gateway screening, messages may be screened based on the value of the routing indicator.

Range: **dpc**, **gt**, *****

dpc— Allow a called party address with a routing indicator value of “DPC/SSN.”

gt— Screening stops and gateway screening is bypassed as a forced pass.

*****— A full range of values.

:sr= (mandatory)

Screening reference. This parameter specifies the point code’s unique screening reference name.

Range: **ayyy**

1 alphabetic character followed by up to 3 optional alphanumeric characters

:ssn= (mandatory)

The subsystem number. An asterisk (*) indicates the full range of values from **1-255**.

Range: 1-255 *

:actname= (optional)

The name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: ayyyyy

1 alphabetic character followed by up to 5 alphanumeric characters.

:area= (optional)

The ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000–255**.

Range: 000-255 *

:id= (optional)

The ITU international ID. The parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: 0-7, *

:msa= (optional)

The 24-bit ITU-national main signaling area (msa) value. It specifies the **msa** of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000–255**.

Range: 000-255 *

:nc= (optional)

The network cluster (*nc*) value. This parameter specifies one or more *nc* values for the network indicator (*ni*) and network cluster member (*ncm*) values specified in the **ni** and **ncm** parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: 000-255 *

:ncm= (optional)

The network cluster member (*ncm*) value. This parameter specifies one or more *ncm* values for the network indicator (*ni*) and network cluster (*nc*) values identified in the **ni** and **nc** parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: 0-255 *

:ni= (optional)

The network indicator (*ni*) value. This parameter specifies one or more *ni* values for the network cluster (*nc*) and network cluster member (*ncm*) values identified in the **nc** and **ncm** parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: 0-255 *

:npc= (optional)

The ITU national point code. An asterisk (*) indicates the full range of values from **00000–16383**.

NOTE: Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see "Converting ITU National Point Code Formats" in Appendix A for information on converting the point code format.

Range: 00000-16383 *

:nsr= (optional)

Next screening reference (*nsr*). The parameter indicates which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. If **nsfi=stop**, the **nsr** parameter cannot be specified.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

Default: No value given.

:pcst= (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (**s-**).

Range: **none**, **s**

Default: **none**

:sccpmt= (optional)

The SCCP message type. An asterisk (*) indicates all possible allowed values.

Range: **9**, **10**, **17**, **18**, *

9, * — UDT

10, * — UDTS

17, * — XUDT

18, * — XUDTS

Default: *

:sp= (optional)

The 24-bit ITU national signaling point. This parameter specifies the signaling point (*sp*) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255** *

:ssa= (optional)

The 24-bit ITU national sub signaling area. This parameter specifies the sub signaling area (*ssa*) in the point code represented by the format *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255** *

:zone= (optional)

The ITU international zone. The parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0-7**.

Range: **0-7**, *

Example

ent-scr-

cgpa: sr=iec: ni=240: nc=010: ncm=: ssn=224: nsfi=aftp: nsr=wrds: ri=dpc

ent-scr-

cgpa: sr=iec: ni=240: nc=010: ncm=: ssn=224: nsfi=stop: ri=dpc: actname=copy

ent-scr-

cgpa: sr=cdp1: ni=5: nc=5: ncm=5: ssn=1: ri=dpc: sccpmt=9: nsfi=sdpa: nsr=cdp1

ent-scr-

cgpa: sr=cgpa: zone=1: area=2: id=3: ssn=1: sccpmt=9: ri=: nsfi=stop: pcst=s

Dependencies



CAUTION: Even though gateway screening is in the screen test mode, as defined by the parameters **gwsa=off** and **gwsn=on**, the gateway screening action in the stop action set specified by the **actname** parameter of the screen set *will* be performed at the end of the screening process.

The Gateway Screening Rules table can contain a maximum of 372,600 rules.

A complete point code must be specified, and must be one, and only one of the four point code parameter combinations: **ni-nc-ncm**; **zone-area-id**; **msa-ssa-sp**; or **npc**.

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

The new CGPA point code, **ri**, **sccpmt**, and subsystem number (**ssn**) to be added can not already exist in the CGPA entity set.

The character **c** is not a valid value for the **ni**, **nc**, **ncm**, **zone**, **area**, **id**, **msa**, **ssa**, **sp**, and **npc** parameters.

The value of the **actname** parameter must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the **ACT NAME** field of the **rtrv-gws-actset** command output.

When the **actname** parameter is specified, the **nsfi=stop** parameter must be specified.

If **area=*** is specified, **id=*** must be specified.

If **msa=*** is specified, **ssa=*** and **sp=*** must be specified.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc** parameter is specified as an asterisk (**nc=***), the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **ncm** parameter is specified as a single value, or a range other than the full range of **000-255**, the **ni** and the **nc** parameters must be specified with a single value.

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range **000-255**.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The spare point code subtype prefix (**s-**) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** parameter cannot be specified for ANSI and ITU-N24 point codes.

The screen referenced by **nsfi** and **nsr** must already exist.

The **nsr** parameter must be specified, if **nsfi** is not equal to **stop**.

When **nsfi=stop** is specified, the **nsr** parameter cannot be specified.

The **nsfi=tt** parameter can be specified only if the **ri=gt** parameter or the **ri=*** parameter is specified.

The **nsfi=cdpa** parameter can be specified only if the **ri=dpc** parameter or the **ri=*** parameter is specified.

If **ssa=*** is specified, **sp=*** must be specified.

If **zone=*** is specified, **area=*** and **id=*** must be specified.

The specified value for the **nsfi** parameter is not valid for **cgpa** screen.

The **nscpmt** and **sccpmt** parameter value must be specified in the range of {**9**, **10**, **17**, **18**, and *****}.

Notes

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, **:ni=025&&100** specifies all network indicators for ANSI point codes from 25 to 100.

If the screening reference is valid, but does not exist, a new CGPA screening table is created.

If the screening reference exists, a new rule is added to the CGPA screening table. Only one rule may exist for a given **ni-nc-ncm/ssn/ri/sccpmt** (or **zone-area-id** or **npc**) combination. This implies that for a given **ni-nc-ncm/ssn/ri/sccpmt** (or **zone-area-id** or **npc**), only one value of **ri** may be specified. The **ri** for a given combination can be **dpc**, **gt**, or *****, but not **dpc** and **gt** independently.

If the screen set reaches 100% capacity (indicated by the 100% Full message), the system will allow subsequent entries. An error will occur, however, when downloading the screen set to a LIM. Screen sets should not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

An asterisk cannot not be specified for a parameter value in this command unless an asterisk was specified for the parameter value in the original **ent-scr-cgpa** command.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

ent-scr-

cgpa:sr=iec:ni=240:nc=010:ncm=*:ssn=224:nsfi=aftpc:nsr=wrds:ri=dp
c

```
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
ENT-SCR-CGPA: SCREEN SET AFFECTED - IEC 25% FULL
ENT-SCR-CGPA: MASP A - COMPLTD
```

;

Legend

ENT-SCR-CGPA—The command entered that caused this output. This is echoed to the printer as a reference.

SCREEN SET AFFECTED - IEC—Identifies the screen set that was affected by the command. The screen set name is provided.

25% FULL—Indicates the relative size of the screen set.

ent-scr-destfld

Add an Allowed DESTFLD

Use this command to add an allowed affected destination field (DESTFLD) screening reference and associated attributes (destination point code, next screening function identifier, and next screening reference) to the allowed DESTFLD entity set. One or more point codes can be associated with the allowed DESTFLD screening reference. MTP Network Management messages regarding the DESTFLDs listed in this entity set are accepted from another network.

Keyword: **ent-scr-destfld**

Related Commands: **chg-scr-destfld**, **dlt-scr-destfld**, **rtrv-scr-destfld**

Command Class: Database Administration

Parameters

:nsfi= (mandatory)

This parameter indicates that the gateway screening process should stop. If this parameter is specified for this command, it must have the value of **stop**.

Range: **stop**

stop— The gateway screening process ends and the message proceeds through normal routing.

:sr= (mandatory)

Screening reference. This parameter specifies the point code's unique screening reference name.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters.

:actname= (optional)

The name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: *ayyyyy*

1 alphabetic character followed by up to 5 alphanumeric characters.

:area= (optional)

The ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:id= (optional)

The ITU international ID. The parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7 ***

:msa= (optional)

The 24-bit ITU-national main signaling area (*msa*) value. It specifies the **msa** of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:nc= (optional)

The network cluster (*nc*) value. This parameter specifies one or more *nc* values for the network indicator (*ni*) and network cluster member (*ncm*) values specified in the **ni** and **ncm** parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:ncm= (optional)

The network cluster member (*ncm*) value. This parameter specifies one or more *ncm* values for the network indicator (*ni*) and network cluster (*nc*) values identified in the **ni** and **nc** parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 ***

:ni= (optional)

The network indicator (*ni*) value. This parameter specifies one or more *ni* values for the network cluster (*nc*) and network cluster member (*ncm*) values identified in the **nc** and **ncm** parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 ***

:npc= (optional)

The ITU national point code. An asterisk (*) indicates the full range of values from **00000–16383**.

NOTE: Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see "Converting ITU National Point Code Formats" in Appendix A for information on converting the point code format.

Range: **00000-16383 ***

:nsr= (optional)

Next screening reference (*nsr*). The parameter indicates which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. If **nsfi=stop**, the **nsr** parameter cannot be specified.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

Default: No value given

:pcst= (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (**s-**).

Range: **none, s**

Default: **none**

:sp= (optional)

The 24-bit ITU national signaling point. This parameter specifies the signaling point (**sp**) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:ssa= (optional)

The 24-bit ITU national sub signaling area. This parameter specifies the sub signaling area (**ssa**) in the point code represented by the format *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:zone= (optional)

The ITU international zone. The parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7, ***

Example

ent-scr-destfld:sr=iec:ni=240:nc=010:ncm=010-012:nsfi=stop

ent-scr-destfld:sr=iec1:ni=1:nc=1:ncm=1:nsfi=stop:actname=copy

ent-scr-destfld:sr=dst1:zone=1:area=2:id=3:nsfi=stop:pcst=s

Dependencies



CAUTION: Even though gateway screening is in the screen test mode, as defined by the parameters **gwsa=off** and **andgws=on**, the gateway screening action in the stop action set specified by the **actname** parameter of the screen set *will* be performed at the end of the screening process.

The Gateway Screening Rules table can contain a maximum of 362,700 rules.

The destination point code specified by **ni-nc-ncm**, **zone-area-id**, **msa-ssa-sp**, or the **npc** parameter must not already exist in the screening reference or within an existing range of DPCs.

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

If the **actname** parameter is specified, then the **nsfi=stop** parameter must be specified.

The value of the **actname** parameter must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the *ACT NAME* field of the **rtrv-gws-actset** command output.

If the **area=*** parameter is specified, then the **id=*** parameter must be specified.

If the **msa=*** parameter is specified, then the **ssa=*** and the **sp=*** parameters must be specified.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc** parameter is specified as an asterisk (**nc=***), the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **ncm** parameter is specified as a single value, or a range other than the full range of **000-255**, the **ni** and the **nc** parameters must be specified with a single value.

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range **000-255**.

The **nsfi=stop** parameter must be specified in the command.

If the **nsfi=stop** parameter is specified, then the **nsr** parameter cannot be specified.

If the **ssa=*** parameter is specified, then the **sp=*** parameter must be specified.

If the **zone=*** parameter is specified, then the **area=*** and the **id=*** parameters must be specified.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The spare point code subtype prefix (**s-**) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** and **npcst** parameters cannot be specified for ANSI and ITU-N24 point codes.

If the **nsfi=fail** parameter is specified, then the **nni**, **nc**, **ncm**, **narea**, **nzone**, **nid**, **nmsa**, **nssa**, **nsp**, and **npc** parameters cannot have a value of **c**.

Notes

A range of values is specified by separating the values that define the range by two ampersands (**&&**); for example, **:ni=025&&100** specifies all network indicators for ANSI point codes from **25** to **100**.

An asterisk cannot not be specified for a parameter value in this command unless an asterisk was specified for the parameter value in the original **ent-scr-destfld** command.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

```
ent-scr-destfld:sr=iec:ni=240:nc=010:ncm=010-012:nsfi=stop
rlghncxa03w 04-02-13 11:49:47 EST EAGLE 31.3.0
ENT-SCR-DESTFLD: SCREEN SET AFFECTED - IEC 25% FULL
ENT-SCR-DESTFLD: MASP A - COMPLTD
;
```

ent-scr-dpc

Enter Allowed DPC

Use this command to add an allowed DPC screening reference and associated attributes (destination point code, next screening function identifier, next screening function reference) to the allowed DPC

entity set. One or more DPCs may be associated with the allowed DPC screening reference. The DPCs listed in this entity set are allowed to receive SS7 messages from another network.

Keyword: **ent-scr-dpc**

Related Commands: **chg-scr-dpc, dlt-scr-dpc, rtrv-scr-dpc**

Command Class: Database Administration

Parameters

:nsfi= (mandatory)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range: **blkdpc, cgpa, destfld, isup, stop**

blkdpc— Blocked DPC is the next screening category.

cgpa— Allowed CGPA is the next screening category.

destfld— Allowed destination field (DESTFLD) is the next screening category.

isup— ISUP message type (ISUP) is the next screening category.

stop— The gateway screening process ends and the message proceeds through normal routing.

:sr= (mandatory)

The allowed DPC screening reference name. This parameter identifies a set of one or more allowed destination point codes.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters.

:actname= (optional)

The name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: *ayyyyy*

1 alphabetic character followed by up to 5 alphanumeric characters.

:area= (optional)

The ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:id= (optional)

The ITU international ID. The parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0-7**.

Range: **0-7, ***

:msa= (optional)

The 24-bit ITU-national main signaling area (msa) value. It specifies the **msa** of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:nc= (optional)

The network cluster (*nc*) value. This parameter specifies one or more *nc* values for the network indicator (*ni*) and network cluster member (*ncm*) values specified in the **ni** and **ncm** parameters. It specifies the *nc* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:ncm= (optional)

The network cluster member (*ncm*) value. This parameter specifies one or more *ncm* values for the network indicator (*ni*) and network cluster (*nc*) values identified in the **ni** and **nc** parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 ***

:ni= (optional)

The network indicator (*ni*) value. This parameter specifies one or more *ni* values for the network cluster (*nc*) and network cluster member (*ncm*) values identified in the **nc** and **ncm** parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 ***

:npc= (optional)

The ITU national point code. An asterisk (*) indicates the full range of values from **00000–16383**.

NOTE: Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see "Converting ITU National Point Code Formats" for information on converting the point code format.

Range: **00000-16383 ***

:nsr= (optional)

Next screening reference (*nsr*). The parameter indicates which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. If **nsfi=stop**, the **nsr** parameter cannot be specified.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

Default: No value given

:pcst= (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (**s-**).

Range: **none, s**

Default: **none**

:sp= (optional)

The 24-bit ITU national signaling point. This parameter specifies the signaling point (*sp*) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:ssa= (optional)

The 24-bit ITU national sub signaling area. This parameter specifies the sub signaling area (*ssa*) in the point code represented by the format *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:zone= (optional)

The ITU international zone. The parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7, *, C**

Example

ent-scr-dpc:sr=iec:ni=240:nc=010:ncm=010:nsfi=stop:actname=cncf

```
ent-scr-dpc:sr=iec:ni=240:nc=010:ncm=010:nsfi=blkdpc:nsr=bdp1
ent-scr-dpc:sr=dpc1:zone=1:area=2:id=3:nsfi=fail:pcst=none
ent-scr-dpc:sr=dpc1:zone=2:area=2:id=3:nsfi=fail:pcst=s
ent-scr-dpc:sr=dpc1:npc=128:nsfi=fail:pcst=s
```

Dependencies



CAUTION: Even though gateway screening is in the screen test mode, as defined by the parameters **gwsa=off** and **gws=on**, the gateway screening action in the stop action set specified by the **actname** parameter of the screen set *will* be performed at the end of the screening process.

The Gateway Screening Rules table can contain a maximum of 362,700 rules.

The destination point code specified by **ni-nc-ncm**, **zone-area-id**, **msa-ssa-sp**, or the **npc** parameter must not already exist in the screening reference or within an existing range of DPCs.

If the **actname** parameter is specified, then the **nsfi=stop** parameter must be specified.

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

The value of the **actname** parameter must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the **ACT NAME** field of the **rtrv-gws-actset** command output.

If the **area=*** parameter is specified, then the **id=*** parameter must be specified.

If the **msa=*** parameter is specified, then the **ssa=*** and the **sp=*** parameters must be specified.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc** parameter is specified as an asterisk (**nc=***), the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **ncm** parameter is specified as a single value, or a range other than the full range of **000-255**, the **ni** and the **nc** parameters must be specified with a single value.

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range **000-255**.

The **nsfi** and **nsr** parameters must point to an existing screen, or the **nsfi=stop** parameter must be specified, and the **nsr** parameter cannot be specified.

If the **nsfi=stop** parameter is not specified, then the **nsr** parameter must be specified.

If the **ssa=*** parameter is specified, then the **sp=*** parameter must be specified.

If the **zone=*** parameter is specified, then the **area=*** and the **id=*** parameters must be specified.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The spare point code subtype prefix (s-) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** parameter cannot be specified for ANSI and ITU-N24 point codes.

If the **nsfi=fail** parameter is specified, then the **nni**, **nc**, **nncm**, **narea**, **nzone**, **nid**, **nmsa**, **nssa**, **nsp**, and **npc** parameters cannot have a value of **c**.

The value of the **nsfi** parameter must be valid for the BLKDPC entity type.

Notes

When a DPC screening reference is created, the first entry for a point code must be **c-c-c**, or **c** for the **npc** parameter. Subsequent entries must be specific point codes.

The character **c** is used in the DPC screens to allow the screening process to continue for messages with point codes that do not match any point codes in the DPC screens. When screening for a DPC and the point code being screened does not match any of the point codes in the DPC screens, the message is not rejected and the screening process continues.

There must be an entry in the DPC screens to allow the screening process to continue. This entry consists of a screening reference, point code, **nsfi**, and **nsr**. The point code is in the form of **npc=c** or subfields equal to **c-c-c**. When the character **c** is specified, the **nsfi** and **nsr** parameters must be specified.

If the character **c** is specified for the parameters **ni-nc-ncm** or **zone-area-id** or **msa-ssa-sp**, the character **c** is the only value that can be specified for all three parameters. No other values can be used. For example, a point code **c-c-255** is not allowed. The point code must be **c-c-c**. The asterisk (*) value cannot be used with the character **c** (for example, a point code **c-c-*** is not allowed).

When the point code does not match any entries in the blocked DPC screens, the screening process is directed to the screening reference with the point code **c-c-c** or **npc=c**. The **nsfi** and **nsr** in this entry are examined to determine the next step in the screening process.

If the current **ni-nc-ncm** or **zone-area-id** or **msa-ssa-sp** is equal to **c-c-c** or **npc=c**, only the **nsfi** and **nsr** can be changed. Otherwise, only the blocked DPC can be changed.

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, **: ni=025&&100** specifies all network indicators for ANSI point codes from 25 to 100.

An asterisk cannot not be specified for a parameter value in this command unless an asterisk was specified for the parameter value in the original **ent-scr-dpc** command.

If the screen set reaches 100% capacity (indicated by the 100% Full message), the system allows subsequent entries. An error occurs, however, when downloading the screen set to an LIM. Ensure that screen sets do not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

```
ent-scr-dpc:sr=iec:ni=240:nc=010:ncm=010:nsfi=stop:actname=cncf
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
ENT-SCR-DPC: SCREEN SET AFFECTED - IEC 25% FULL
ENT-SCR-DPC: MASP A - COMPLTD
;
```

Legend

ENT-SCR-DPC—Command entered that caused this output. This is echoed to the printer.

SCREEN SET AFFECTED - IEC—Identifies the screen set that was affected by the command. The screen set name is provided.

25% FULL—Indicates the relative size of the screen set.

ent-scr-isup**Enter Allowed ISUP Screening Reference**

Use this command to add an allowed ISUP or TUP screening reference to the Allowed ISUP entity set. One or more message types can be associated with the allowed ISUP screening reference. The ISUP message types listed in this entity set are accepted from another network.

Keyword: **ent-scr-isup**

Related Commands: **chg-scr-isup**, **dlt-scr-isup**, **rtrv-scr-isup**

Command Class: Database Administration

Parameters

:isupmt/tupmt= (mandatory)

ISUP message type or TUP message type. A single value or range of values can be entered. An asterisk (*) indicates the entire range of **000-255**. TUP is not valid for SEAS.

Range: **000-255 ***

:sr= (mandatory)

The the individual ISUP screening reference to which this rule will be added. If the specified **sr** does not exist, it will be created

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters.

:actname= (optional)

The name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: *ayyyyy*

1 alphabetic character followed by up to 5 alphanumeric characters.

:nsfi= (optional)

This parameter specifies the next screening category that is used in the gateway screening process. If specified, the parameter value must be **stop**.

Range: **stop**

stop— The gateway screening process ends and the message proceeds through normal routing.

:nsr= (optional)

Next screening reference. The parameter indicates which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. If **nsfi=stop**, the **nsr** parameter cannot be specified.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

Default: No value given

Example

ent-scr-isup:sr=iec:isupmt=1:nsfi=stop

ent-scr-isup:sr=iec:isupmt=9:nsfi=stop

ent-scr-isup:sr=ibig:isupmt=1&&128:nsfi=stop

ent-scr-isup:sr=iall:isupmt=*:nsfi=stop

ent-scr-isup:tupmt=20:sr=tu01:nsfi=stop

Dependencies

If the **actname** parameter is specified, the **nsfi-stop** parameter must be specified.

The value of the **actname** parameter must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the *ACT NAME* field of the **rtrv-gws-actset** command output.

The specified **isupmt** parameter or **tupmt** parameter value must not already exist in the specified **sr**.

If the **nsfi** parameter is specified, the value must be **stop**.

The **nsr** parameter cannot be specified if the **nsfi=stop** parameter is specified.

Notes

A range of values can be specified for the **isupmt** parameter or **tupmt** parameter, by separating the values that define the range by two ampersands (&&); for example, **:isupmt=025&&100** specifies all ISUP message types from **25** to **100**. The value to the left of the && must be less than the value to the right of the && in the range.

An asterisk cannot not be specified for a parameter value in this command unless an asterisk was specified for the parameter value in the original **ent-scr-isup** command.

TUP does not apply to SEAS. ISUP Message Type is the default.

To use TUP message type screening, an SIO screening reference with **si=04** (TUP) must exist in the SIO table. The TUP screening reference specifies the SIO screening reference as the next screening reference parameter (**nsr**) value.

To use ISUP message type screening, an SIO screening reference with **si=05** (ISUP) must exist in the SIO table. The ISUP screening reference specifies the ISUP SIO screening reference as the next screening reference parameter (**nsr**) value.

To screen for TUP and ISUP message types using a combined ISUP/TUP screen set, the SIO screening reference with **si=4** and the SIO screening reference with **si=5** must be two different screening references. The TUP screening reference specifies the SIO screening reference as the next screening reference parameter (**nsr**) value, and the ISUP screening reference specifies the SIO ISUP screening reference as the next screening reference parameter (**nsr**) value.

Output

When a screen reference is specified that is not yet associated with a screen set, the following output appears:

```
ent-scr-isup:sr=iec:isupmt=1:nsfi=stop
tekelecstp 04-09-02 09:39:13 EST EAGLE 31.3.0
ENT-SCR-ISUP: MASP A - COMPLTD
;
```

When a screen reference is specified that is already associated with one or more screen sets, the following output appears:

```
ent-scr-isup:tupmt=20:sr=tu01:nsfi=stop
tekelecstp 04-11-17 16:22:27 EST EAGLE 31.4.0
Extended Processing Time Required -- Please Wait
Notice: The number of screensets affected is 2.
ENT-SCR-ISUP: SCREEN SET AFFECTED - ist1 1% FULL
ENT-SCR-ISUP: SCREEN SET AFFECTED - ist2 1% FULL
ENT-SCR-ISUP: MASP A - COMPLTD
;
```


ent-scr-opc**Enter Allowed OPC**

Use this command to add an allowed OPC screening reference and associated attributes (originating point code, next screening function identifier, next screening function reference) to the allowed OPC entity set. One or more OPCs may be associated with the allowed OPC screening reference. Each OPC listed in this entity set is allowed to send SS7 messages to the customer's network.

Keyword: **ent-scr-opc**

Related Commands: **chg-scr-opc, dlt-scr-dpc, rtrv-scr-dpc**

Command Class: Database Administration

Parameters

:nsfi= (mandatory)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range: **blkdpc, blkopc, cgpa, dpc, sio, stop**

blkdpc— Blocked DPC is the next screening category.

blkopc— Blocked OPC is the next screening category.

cgpa— Allowed CGPA is the next screening category.

dpc— Allowed DPC is the next screening category.

sio— Allowed SIO is the next screening category.

stop— The gateway screening process ends and the message proceeds through normal routing.

:sr= (mandatory)

Screening reference. This parameter identifies a set of one or more allowed OPCs.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

:actname= (optional)

The name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: *ayyyyy*

1 alphabetic character followed by up to 5 alphanumeric characters.

:area= (optional)

The ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:id= (optional)

The ITU international ID. The parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7, ***

:msa= (optional)

The 24-bit ITU-national main signaling area (*msa*) value. It specifies the **msa** of the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:nc= (optional)

The network cluster (*nc*) value. This parameter specifies one or more nc values for the network indicator (*ni*) and network cluster member (*ncm*) values specified in the **ni** and **ncm** parameters. It

specifies the *nc* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:ncm= (optional)

The network cluster member (*ncm*) value. This parameter specifies one or more *ncm* values for the network indicator (*ni*) and network cluster (*nc*) values identified in the **ni** and **nc** parameters. It specifies the *ncm* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 ***

:ni= (optional)

The network indicator (*ni*) value. This parameter specifies one or more *ni* values for the network cluster (*nc*) and network cluster member (*ncm*) values identified in the **nc** and **ncm** parameters. It specifies the *ni* of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **000–255**.

Range: **0-255 ***

:npc= (optional)

The ITU national point code. An asterisk (*) indicates the full range of values from **00000–16383**.

NOTE: Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see "Converting ITU National Point Code Formats" in Appendix A for information on converting the point code format.

Range: **00000-16383 ***

:nsr= (optional)

Next screening reference (*nsr*). The parameter indicates which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. If **nsfi=stop**, the **nsr** parameter cannot be specified.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

Default: No value given

:pcst= (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (**s-**).

Range: **none, s**

Default: **none**

:sp= (optional)

The 24-bit ITU national signaling point. This parameter specifies the signaling point (*sp*) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:ssa= (optional)

The 24-bit ITU national sub signaling area. This parameter specifies the sub signaling area (*ssa*) in the point code represented by the format *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:zone= (optional)

The ITU international zone. The parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7 ***

Example

```
ent-scr-opc:sr=iec:nsfi=stop
ent-scr-opc:sr=iec:ni=240:nsfi=sio:nsr=iec
ent-scr-opc:sr=iec:ni=240:nc=010:ncm=010:nsfi=stop:actname=copy
ent-scr-opc:sr=iec:ni=240:nc=010:ncm=010:nsfi=dpc:nsr=iec
ent-scr-opc:sr=opc1:zone=1:area=2:id=3:nsfi=fail:pcst=none
ent-scr-opc:sr=opc1:zone=2:area=2:id=3:nsfi=fail:pcst=s
ent-scr-opc:sr=opc1:npc=128:nsfi=fail:pcst=s
```

Dependencies

CAUTION: Even though gateway screening is in the screen test mode, as defined by the parameters **gwsa=off** and **gws=on**, the gateway screening action in the stop action set specified by the **actname** parameter of the screen set *will* be performed at the end of the screening process.

The Gateway Screening Rules table can contain a maximum of 362,700 rules.

A complete point code must be specified, using the **ni-nc-ncm**, **zone-area-id**, **msa-ssa-sp**, or **npc** combination unless a value of **c** for “continue” is specified.

The OPC specified by **ni-nc-ncm**, **zone-area-id**, **msa-ssa-sp**, or the **npc** parameter must already exist in the screening reference or within an existing range of OPCs.

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

If the **actname** parameter is specified, then the **nsfi=stop** parameter must be specified.

The value of the **actname** parameter must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the **ACT NAME** field of the **rtrv-gws-actset** command output.

If the **area=*** parameter is specified, then the **id=*** parameter must be specified.

If the **msa=*** parameter is specified, then the **ssa=*** and the **sp=*** parameters must be specified.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc** parameter is specified as an asterisk (**nc=***), the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **ncm** parameter is specified as a single value, or a range other than the full range of **000-255**, the **ni** and the **nc** parameters must be specified with a single value.

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range **000-255**.

The **nsfi** and **nsr** parameters must point to an existing screen, or the **nsfi=stop** parameter must be specified, and the **nsr** parameter cannot be specified.

If the **nsfi=stop** parameter is not specified, then the **nsr** parameter must be specified.

The **nsr** parameter must be specified if **nsfi** is not equal to **stop**.

If the **ssa=*** parameter is specified, then the **sp=*** parameter must be specified.

If the **zone=*** parameter is specified, then the **area=*** and the **id=*** parameters must be specified.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The spare point code subtype prefix (**s-**) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** parameter cannot be specified for ANSI and ITU-N24 point codes.

If the **nsfi=fail** parameter is specified, then the **nni**, **nc**, **nncm**, **narea**, **nzone**, **nid**, **nmsa**, **nssa**, **nsp**, and **npc** parameters cannot have a value of **c**.

The value of the **nsfi** parameter must be valid for the OPC entity type.

The Gateway Screening Stop Action table is corrupt or cannot be found.

Notes

When an OPC screening reference is created, the first entry for a point code must be **c-c-c**, or **c** for the **npc** parameter. Subsequent entries must be specific point codes.

The character **c** is used in the OPC screens to allow the screening process to continue for messages with point codes that do not match any point codes in the OPC screens. When screening for a DPC and the point code being screened does not match any of the point codes in the DPC screens, the message is not rejected and the screening process continues.

There must be an entry in the OPC screens to allow the screening process to continue. This entry consists of a screening reference, point code, **nsfi**, and **nsr**. The point code is in the form of **npc=c** or subfields equal to **c-c-c**. When the character **c** is specified, the **nsfi** and **nsr** parameters must be specified.

If the character **c** is specified for the parameters **ni-nc-ncm** or **zone-area-id** or **msa-ssa-sp**, the character **c** is the only value that can be specified for all three parameters. No other values can be used. For example, a point code **c-c-255** is not allowed. The point code must be **c-c-c**. The asterisk (*) value cannot be used with the character **c** (for example, a point code **c-c-*** is not allowed).

When the point code does not match any entries in the blocked OPC screens, the screening process is directed to the screening reference with the point code **c-c-c** or **npc=c**. The **nsfi** and **nsr** in this entry are examined to determine the next step in the screening process.

If the current **ni-nc-ncm** or **zone-area-id** or **msa-ssa-sp** is equal to **c-c-c** or **npc=c**, only the **nsfi** and **nsr** can be changed. Otherwise, only the OPC can be changed.

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, **: ni=025&&100** specifies all network indicators for ANSI point codes from 25 to 100.

An asterisk cannot not be specified for a parameter value in this command unless an asterisk was specified for the parameter value in the original **ent-scr-opc** command.

If the screen set reaches 100% capacity (indicated by the 100% Full message), the system allows subsequent entries. An error occurs, however, when downloading the screen set to an LIM. Ensure that screen sets do not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

```

ent-scr-opc:sr=iec:nsfi=stop
  rlgncxa03w 04-01-07 11:43:04 EST  EAGLE 31.3.0
  ENT-SCR-OPC:  SCREEN SET AFFECTED - IEC  25% FULL
  ENT-SCR-OPC:  MASP A - COMPLTD
;

```

Legend

ENT-SCR-OPC—The command entered that caused this output. This is echoed to the printer as a reference.

SCREEN SET AFFECTED - IEC—Identifies the screen set that was affected by the command. The screen set name is provided.

25% FULL—Indicates the relative size of the screen set.

ent-scr-sio**Enter Allowed SIO**

Use this command to add an allowed SIO screening reference and associated attributes (network indicator, service indicator, message priority, H0 heading code, H1 heading code, next screening function identifier, next screening function reference) to the allowed SIO entity set.

NOTE: To use TUP message type screening, an SIO screening reference with si=04 (TUP) must be defined in the SIO table. This SIO screening reference is specified in the ent-scr-isup command as the next screening reference (nsr) value in a screening reference for TUP message types

Keyword: ent-scr-sio

Related Commands: chg-scr-sio, dlt-scr-sio, rtrv-scr-sio

Command Class: Database Administration

Parameters

:nic= (mandatory)

Network indicator code (NIC). This parameter specifies an NIC for the SIO screening reference specified in the **sr** parameter. The NIC is the last 2 bits of the subservice field of an SIO. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from 0–3.

Range: 0-3 *

:nsfi= (mandatory)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range: blkdp, cdpa, cgpa, destfld, dp, isup, stop

blkdp—Blocked DPC is the next screening category.

cgpa—Allowed CGPA is the next screening category.

destfld—Allowed destination field (DESTFLD) is the next screening category.

dp—Allowed DPC is the next screening category.

isup—ISUP message type (ISUP) is the next screening category.

stop—The gateway screening process ends and the message proceeds through normal routing.

:pri= (mandatory)

Message priority. This parameter specifies a single priority, or the beginning of a range of priorities for the SIO screening reference specified by the **sr** parameter. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from 0–3.

Range: 0-3 *

:si= (mandatory)

Service indicator. This parameter specifies an SI for the SIO screening reference specified in the **sr** parameter. The SI is the first 4 bits of an SIO. The SS7 code directs the message to the MTP-user at the destination code.

Range: 00-15

:sr= (mandatory)

The allowed SIO screening reference name. This parameter identifies a set of one or more **si/nic/pri** combinations.

Range: ayyy

1 alphabetic character followed by up to 5 alphanumeric characters.

:actname= (optional)

The name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: ayyyyy

1 alphabetic character followed by up to 5 alphanumeric characters.

:h0= (optional)

H0 heading code. This parameter specifies a new H0 heading code for the screening reference specified in the **sr** parameter. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from 0–15.

Range: 0-15 *

Default: Value given if **si** value is 00, 01, or 02

:h1= (optional)

H1 Heading Code. This parameter specifies an H1 heading code for the screening reference specified in the **sr** parameter. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from 0–15.

Range: 0-15 *

Default: Value given if **si** value is 00, 01, or 02

:nsr= (optional)

Next screening reference (NSR). The parameter indicates which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. If **nsfi=stop**, the **nsr** parameter cannot be specified.

Range: ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Default: No value given

Example

ent-scr-

sio:sr=iec:nic=1:si=1:h0=01&&03:h1=*:pri=*:nsfi=dpc:nsr=abc

ent-scr-sio:sr=iec:nic=1:si=3:pri=2:nsfi=stop

ent-scr-sio:sr=iec:nic=1:si=4:pri=3:nsfi=stop:actname=cncf

Dependencies



CAUTION: Even though gateway screening is in the screen test mode, as defined by the parameters **gwsa=off** and **dgwsm=on**, the gateway screening action in the stop action set specified by the **actname** parameter of the screen set *will* be performed at the end of the screening process.

If the **actname** parameter is specified, then the **nsfi=stop** parameter must be specified.

The value of the **actname** parameter must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the *ACT NAME* field of the **rtrv-gws-actset** command output.

If the **si** parameter is equal to **00**, **01**, or **02**, the **h0** and **h1** parameters must be specified. Otherwise, the **h0** parameter cannot be specified.

Table 5-49 shows the valid combinations of the **h0/h1** parameters:

Table 5-49. Valid Combinations for the **h0/h1** Parameters (**ent-scr-sio**)

If the h0 parameter is specified as:	The h1 parameter can be specified as:
A single value	A single value
A single value	A range
A single value	An asterisk (*) entry
A range	An asterisk (*) entry
An asterisk (*) entry	An asterisk (*) entry

When the **chg-scr-sio** command is entered with the **nh0** or **nh1** parameters, the specified values must be valid with the **h0** or **h1** values currently in the database.

If the screening reference exists, the **nic**, **si**, **h0/h1**, and priorities to be added to the allowed SIO entity set for the SIO screening reference cannot exist in that allowed SIO entity set.

If asterisks or ranges are specified for the heading codes, nothing that matches the combination of **nic**, **si**, and the specified heading codes can already exist in the allowed SIO entity set for the screening reference.

If the screening reference does not exist, a new screening reference for the allowed SIO entity set is created.

The **nsfi** and **nsr** parameters must point to an existing screen, or the **nsfi=stop** parameter must be specified, and the **nsr** parameter cannot be specified.

Use Table 5-50 to determine an acceptable combination of the **nsfi** and **si** parameters:

Table 5-50. Valid **ent-scr-sio nsfi** and **si** Parameter Combinations

If the nsfi parameter is...	...the si parameter must be:
destfld	00
cdpa	03
cgpa	03
isup	05

Use Table 5-51 to determine the acceptable combination of the specified parameter values:

Table 5-51. Additional Valid **ent-scr-sio** Parameter Combinations

si value:	nic value	pri value	h0 value:	h1 value:
00	s, *	s, *, r	s	s, *, r
00	s, *	s, *, r	*, r	*
01, 02	s, *	s, *, r	s	s, *, r
01, 02	s, *	s, *, r	*, r	*
03-15	s, *	s, *, r	u	u
Legend s = single value r = range * = asterisk u = unspecified				

If the **nsfi** parameter has a value other than **stop** or **fail**, the **nsr** parameter must be specified and must exist.

If the **nsfi=stop** parameter is specified, then the **nsr** parameter must be specified.

If the **si** parameter is greater than 2, the **h0** and **h1** parameters must not be specified.

The Gateway Screening Rules table can contain a maximum of 362,700 rules.

Notes

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, **pri=0&&2** specifies all message priorities for the range 0 to 2.

If the screen set reaches 100% capacity (indicated by the **100% Full** message), the system will allow subsequent entries. An error will occur, however, when downloading the screen set to a LIM. Screen sets should not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

To use TUP message type screening, an SIO screening reference with **si=04** (TUP) must be defined in the SIO table. To use ISUP message type screening, a rule with **si=05** (ISUP) must be defined in the SIO table. To use a combined ISUP/TUP screen set for TUP and ISUP message screening, the SIO screening reference with **si=4** and the SIO screening reference with **si=5** must be two different screening references.

The **h0** and **h1** parameters cannot be specified if **si** is not equal to **00**, **01**, or **02**.

An asterisk cannot not be specified for a parameter value in this command unless an asterisk was specified for the parameter value in the original **ent-scr-sio** command.

Output

```

ent-scr-
sio:sr=iec:nic=1:si=1:h0=01&&03:h1=:pri=:nsfi=dpc:nsr=abc
  rlgncxa03w 04-02-14 16:45:50 EST EAGLE 31.3.0
  ENT-SCR-SIO: SCREEN SET AFFECTED - SS01 25% FULL
  ENT-SCR-SIO: SCREEN SET AFFECTED - SS04 35% FULL
  ENT-SCR-SIO: MASP A - COMPLTD
;

```

Legend

ENT-SCR-SIO—The command entered that caused this output. This is echoed to the printer as a reference.

SCREEN SET AFFECTED - SS01—Identifies the screen set that was affected by the command. The screen set name is provided.

25% FULL—Indicates the relative size of the screen set.

ent-scr-tt**Enter Allowed Translation Type**

Use this command to add a specific allowed translation type (TT) screening reference in the TT entity set.

Keyword: ent-scr-tt

Related Commands: chg-scr-tt, dlt-scr-tt, rtrv-scr-tt

Command Class: Database Administration

Parameters

:nsfi= (mandatory)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range: cdpa, stop

cdpa—Allowed CDPA is the next screening category.

stop—The gateway screening process ends and the message proceeds through normal routing.

:sr= (mandatory)

Name of the screening reference.

Range: ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

:type= (mandatory)

Translation type. The translation type identifies the global title translation type value in the called party address. It is the decimal representation of the 1-byte field used in SS7. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from 0–255.

Range: 000-255 *

:actname= (optional)

The name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: ayyyyy

1 alphabetic character followed by up to 5 alphanumeric characters.

:nsr= (optional)

Next screening reference (nsr). The parameter indicates which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. This parameter is mandatory if **nsfi** is other than **stop**. The **nsr** parameter cannot be entered if **nsfi** is **stop**. If **nsfi=stop**, the **nsr** parameter cannot be specified.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

Default: No value given

Example

```
ent-scr-tt:sr=iec:type=012:nsfi=cdpa:nsr=wr5
```

```
ent-scr-tt:sr=iec:type=012:nsfi=stop:actname=copy
```

Dependencies



CAUTION: Even though gateway screening is in the screen test mode, as defined by the parameters **gwsa=off** and **gwsn=on**, the gateway screening action in the stop action set specified by the **actname** parameter of the screen set *will* be performed at the end of the screening process.

If the screening reference is valid, but does not exist, a new TT screen is created.

If the screening reference exists, a new rule is added to the TT screening table.

An asterisk cannot not be specified for a parameter value in this command unless an asterisk was specified for the parameter value in the original **ent-scr-tt** command.

If the **actname** parameter is specified, the **nsfi=stop** parameter must be specified.

The value of the **actname** parameter must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the *ACT NAME* field of the **rtrv-gws-actset** command output.

If the **nsfi=stop** parameter is specified, the **nsr** parameter cannot be specified.

If the **nsfi** parameter has a value other than **stop**, the **nsr** parameter must be specified.

If the **nsr** parameter is specified, the specified screening reference must exist.

If the screening reference (**sr**) exists, the single value or range specified for the allowed **type** to be added to the TT screen for the allowed TT screening reference must not already exist in that TT screen.

If an asterisk is specified for the allowed **type**, nothing can already exist in the TT screen for the screening reference.

The specified value for the **nsfi** parameter is not valid for TT screen.

The screen referenced by **nsfi** and **nsr** must already exist.

The Gateway Screening Rules table can contain a maximum of 362,700 rules.

Notes

If the screen set reaches 100% capacity (indicated by the 100% Full message), the system will allow subsequent entries. An error will occur, however, when downloading the screen set to a LIM. Screen sets should not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

Output

```

ent-scr-tt: sr=iec: type=012: nsfi=cdpa: nsr=wrds
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
ENT-SCR-TT: SCREEN SET AFFECTED - IEC 25% FULL
ENT-SCR-TT: MASP A - COMPLTD
;

```

Legend

ENT-SCR-TT—The command entered that caused this output. This is echoed to the printer as a reference.

SCREEN SET AFFECTED - IEC—Identifies the screen set that was affected by the command. The screen set name is provided.

25% FULL—Indicates the relative size of the screen set.

ent-scrset**Enter Screen Set**

Use this command to create a new screen set and point it to its first screen. A screen set is a set of screens (filters) that can be assigned to a linkset. SS7 messages transmitted on a linkset assigned to a screen set require screening by the system, if screening is enabled.

Keyword: ent-scrset

Related Commands: chg-scrset, dlt-scrset, rtrv-scrset

Command Class: Database Administration

Parameters

:nsfi= (mandatory)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range: blkdp, blkopc, dpc, opc, sio, stop

blkdp—Blocked DPC is the next screening category.

blkopc—Blocked OPC is the next screening category.

dpc—Allowed DPC is the next screening category.

opc—Allowed OPC is the next screening category.

sio—Allowed SIO is the next screening category.

stop—The gateway screening process ends and the message proceeds through normal routing.

:scrn= (mandatory)

Screenset name.

Range: ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

:actname= (optional)

The name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: ayyyyy

1 alphabetic character followed by up to 5 alphanumeric characters.

:destfld= (optional)

This parameter turns on and off the automatic allowed affected destination screening for network management messages against the routing table, self point codes, and capability point codes. When this parameter is **on**, the automatic screening is applied at the end of the provisioned screen set.

Range: yes, no
Default: yes

:nsr= (optional)

Next screening reference (**nsr**). The parameter indicates which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. If **nsfi=stop**, the **nsr** parameter cannot be specified.

Range: ayyy
 1 alphabetic character followed by up to 3 alphanumeric characters
Default: No value given

Example

```
ent-scrset:scrn=ss01:nsfi=opc:nsr=iec
ent-scrset:scrn=ss02:nsfi=stop
ent-scrset:scrn=empt:nsfi=stop:destfld=yes
ent-scrset:scrn=scr1:nsfi=stop:actname=copy
```

Dependencies

Even though gateway screening is in the screen test mode, as defined by the parameters **gwsa=off** and **gwsn=on**, the gateway screening action in the stop action set specified by the **actname** parameter of the screen set *will* be performed at the end of the screening process.

The **nsfi=stop** parameter must be specified before the **actname** parameter can be specified.

The value of the **actname** parameter must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the *ACT NAME* field of the **rtrv-gws-actset** command output.

If the **nsfi=stop** parameter is specified, then the **nsr** parameter cannot be specified.

The specified screen set name cannot be in use by another screen set.

A maximum of 63 user-defined screen sets can be defined in the database.

The **nsfi** and **nsr** parameters must point to one or more existing entities in another entity set, or the **nsfi=stop** parameter must be specified, and the **nsr** parameter cannot be specified.

If the **nsfi=stop** parameter is not specified, then the **nsr** parameter must be specified.

The Gateway Screening (GWS)/Global Title Translation (GTT) shared database resource (DBMM.TBL) may not be full.

Notes

Entering a new screen set may take a few minutes of processor time. The following message appears in the scroll area:

```
Extended processing time required-please wait
```

If the screen set reaches 100% capacity (indicated by the 100% Full message), the system will allow subsequent entries. An error will occur, however, when downloading the screen set to a LIM. Screen sets should not exceed 100% capacity. Remove screen set entries until the capacity is below 100%.

Output

```
ent - scrset : scrn=ss01 : nsfi=opc : nsr=iec
rlghncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
ENT-SCRSET: SCREEN SET AFFECTED - SS01 25% FULL
ENT-SCRSET: MASP A - COMPLTD
;
```

Legend

ENT-SCRSET—The command entered that caused this output. This is echoed to the printer as a reference.

SCREEN SET AFFECTED—Identifies the screen set that was affected by the command. The screen set name is shown.

% FULL—Indicates the relative size of the screen set.

ent-serial-num**Enter Serial Number**

Use this command to enter and lock the NT serial number into the database for an EAGLE 5 ISS STP.

You must enter the serial number at least once without specifying the **lock** parameter. As long as you enter the command without the **lock** parameter, you can enter the system serial number as many times as needed. After the correct serial number is entered, you must use the **lock=yes** parameter to lock the serial number table. You cannot change the serial number with administration commands after the table is locked.

Keyword: ent-serial-num

Related Commands: rtrv-serial-num

Command Class: Database Administration

Parameters

:serial= (mandatory)

The system NT Serial Number.

Range: aayyyyyyy

Up to 15 alphanumeric characters; mixed case is allowed.

The first two characters (the prefix) must be letters.

The remaining characters must be numbers.

The serial number cannot contain spaces or special characters.

:lock= (optional)

This parameter is used to lock the Serial Number table when the serial number is entered for the system.



CAUTION

CAUTION: After the serial number is locked, you cannot enter it again or change it in the database. You can use the command without the lock parameter to enter the serial number as many times as needed; then enter the command with the lock parameter and the correct serial number to lock the serial number table.

Range: yes

Default: Not locked

Example

```
ent-serial-num:serial=nt00000123
```

```
ent-serial-num:serial=nt00000123:lock=yes
```

Dependencies

The serial number must be entered at least once without specifying the **lock** parameter.

The system serial number that is entered when the **lock** parameter is specified must match the serial number that was previously entered in the Serial Number table by using the command without the **lock** parameter.

The system serial number cannot be entered again after the Serial Number table is locked.

Notes

None

Output

```
ent - serial-num: serial=nt00000123
    rlgncxa03w 04-01-05 16:40:40 EST EAGLE 31.3.0
    ENT-SERIAL-NUM: MASP A - COMPLTD
;
```

ent-shlf

Enter Shelf

Use this command to add an equipment shelf to the database.

Keyword: ent-shlf

Related Commands: dlt-shlf, rtrv-shlf

Command Class: Database Administration

Parameters

:loc= (mandatory)

The shelf location.

Range: 1200, 1300, 2100, 2200, 2300, 3100, 3200, 3300, 4100, 4200, 4300, 5100, 5200, 5300, 6100

:type= (mandatory)

The type of equipment shelf to be configured.

Range: ext

Example

```
ent - shlf: type=ext: loc=1200
```

Dependencies

The frame and shelf values of the shelf location parameter (**loc**) must be within the valid range (xyzz, where x=frame and y=shelf; zz is always 00 for this command).

The specified shelf location must not have been configured previously.

Notes

None

Output

```
ent - shlf: type=ext: loc=1200
    rlgncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
    ENT-SHLF: MASP A - COMPLTD
;
```

ent-sid**Enter Self Identification**

Use this command to define additional true point codes for an STP. This command allows newly defined true point codes to be distributed to the cards without requiring system initialization.

Keyword: **ent-sid**

Related Commands: **chg-sid, rtrv-sid**

Command Class: Database Administration

Parameters

:pc= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: **pca**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:pc/pca/pci/pcn/pcn24= (optional)

STP true point code.

:pci= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:pcn= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn, prefix-nnnnn-gc, prefix-m1-m2-m3-m4, prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:pcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

Example

To create a site identification STP PC for ITU-N and ITU-I:

ent-sid:pcn=123:pci=1-1-1

To create a site identification STP PC for ITU-N Spare and ITU-I Spare:

ent-sid:pcn=s-123:pci=s-1-1-1

Dependencies

At least one optional parameter must be specified.

The Spare Point Code Support feature must be enabled before an ITU-I or ITU-N spare point code can be specified.

If the system is configured for ANSI format point codes, the specified network indicator value (*ni*) of the **pc** parameter must be **6** or greater when the specified cluster value is **0** (*nc*).

The **pcn** and **pcn24** parameters cannot be specified together in the command.

The specified STP point code must not have been previously defined as a capability point code.

An STP point code cannot exist that is the same type (ANSI, ITU-I, ITU-N, ITU-N24, ITU-ISpare, or ITU-NSpare) as the specified STP point code or must not have been previously defined as a capability point code.

The value of the **pc/pca/pci/pcn/pcn24** parameter must be a full point code.

ITU-N STP destination point codes can be specified only as full point codes.

Invalid parameter was specified.

Notes

The SID Table can simultaneously contain the node's true point codes of any following point code types: ANSI, ITU-I, ITU-N or ITU-N24, ITU-ISpare, and ITU-NSpare. (Only ITU-N or ITU-N24, not both, can be defined in the SID Table.)

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (**s-**).

Output

ent-sid:pcn=123:pci=1-1-1

rlghncxa03w 05-01-07 11:11:28 EST EAGLE 31.12.0

ENT-SID: MASP A - COMPLTD

;

ent-slk**Enter Signaling Link**

Use this command to add a low-speed or high-speed (ATM or IP) signaling link to a linkset in the database.

For 2-port E1 cards, E1/T1 MIM cards, HC-MIM cards, Channel cards, or E5-E1T1 cards, use this command to associate a signaling link and a timeslot with the E1 or T1 interface that will service the timeslot.

For HC-MIM cards used for SE-HSL links, use this command to assign links **a** and **b** on any 2 of the 8 HC-MIM card ports. For E5-E1T1 cards used for SE-HSL links, use this command to assign link **a** on any 1 of the 8 E5-E1T1 card ports.

Signaling links are the only elements in the database directly supported by a hardware device. When a link is added to a linkset, the link remains in the state OOS-MT-DSBLD (out of service maintenance disabled) until it is activated.

Up to 64 signaling links can be assigned to one HC-MIM card, allowing links **a**, **a1** through **a31**, **b**, and **b1** through **b31** to be provisioned. Up to 32 signaling links can be assigned to one E5-E1T1 card, allowing links **a**, **a1** through **a15**, **b**, and **b1** through **b15** to be provisioned.

NOTE: The link parameter has been added as a synonym for the port parameter. Either port or link can be used for a few more EAGLE 5 ISS releases; then the port parameter will be removed.

Keyword: ent-slk

Related Commands: act-slk, blk-slk, canc-slk, dact-slk, dlt-slk, inh-slk, rept-stat-slk, rtrv-slk, tst-slk, ublk-slk, unhb-slk

Command Class: Database Administration

Parameters

The following parameters are valid for all types of links: **loc**, **lsn**, **link**, **slc**, **bps**, **ecm**

The following parameters are valid for low-speed links: **llmode**, **l2tset**, **pcrn1**, **pcrn2**, **tset**

The following parameter is valid only for IP links: **ipliml2**

The following parameters are valid for ATM ANSI high-speed links: **atmtsel**, **ll**, **lpset**, **vci**, **vpi**

The following parameters are valid for E1 ATM links: **atmtsel**, **e1atmcrc4**, **e1atmsi**, **e1atmsn**, **lpset**, **vci**, **vpi**

The following parameters are valid for E1 links: **l2tset**, **pcrn1**, **pcrn2**, **e1loc**, **e1port**, **ts**

The following parameters are valid for T1 links: **l2tset**, **ecm**, **pcrn1**, **pcrn2**, **t1loc**, **t1port**, **ts**

The following parameters are valid for SE-HSL links: **l2tset**, **e1port**

The following parameter is valid only for IPSG links: **aname**

:link= (mandatory)

The signaling link on the card specified in the **loc** parameter. The links can be specified in any sequence or pattern.

Synonym: port

Range: **a**, **b**, **a1-a31**, **b1-b31**

Not all card types support all **link** parameter values.

See "Summary of Range Values for :link Parameter" for valid **link** parameter range values for each type of card that can have a location specified in the **loc** parameter.

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

If the signaling link is being assigned to an E1 or T1 card for a Channel card, specify the location of the Channel card. If the link is being assigned for the E1 or T1 card itself, specify the location of the E1 or T1 card.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

:lsn= (mandatory)

The name of the linkset. The linkset name must be unique.

Range: ayyyyyyyyy
1 alphabetic character followed by up to 9 alphanumeric characters

:slc= (mandatory)

The signaling link code.

The SLC must be unique within the linkset. It must be the same at both the system location and the distant node.

Range: 0-15

:aname= (optional)

Association name. This parameter specifies the association assigned to the signaling link added in an IPSG linkset.

Range: ayyyyyyyyyyyyy
Up to 15 alphanumeric characters; the first character must be a letter

:atmtsel= (optional)

ATM timing selector. The timing source for the ATM signaling link—internal, line, or external. Internal timing is derived from an internal clock source operating at 1.544 MHz $\pm$ 200 Hz for ANSI links and 2.048 MHz $\pm$ 103 Hz for ITU links. External timing is derived from the High-Speed Master Clock (T1 or E1). Line timing is derived from its received data stream, if present.



CAUTION: The internal timing source is used for debug purposes only, and is not to be used for production operation.

If you are using the 2.048 MHz reference clock as the timing source for E1 signaling links, the **atmtsel=external** parameter must be specified for high-speed ATM signaling links. The **atmtsel** parameter is not valid in the command when the **e1loc** or **e1port** parameter is specified for an E1 signaling link. For information on the E1 interface, see Appendix A, “E1 Interface” in the *Database Administration Manual - SS7*.

Range: external, internal, line

Default: line

:bps= (optional)

The transmission rate for the link in bits per second. E1 links running at 56000 bps and 64000 bps are allowed in linksets with other links running at 56000 bps or 64000 bps, or both, in the same linkset. T1 links running at 56000 bps or 64000 bps are allowed in linksets with other links that are running at 56000 bps or 64000 bps, or both. All other types of links in one linkset are required to have the same provisioned link speed. See Table 5-52.

Range: 4800, 9600, 19200, 56000, 64000, 1544000, 1984000, 2048000

Default: 56000

:e1atmcrc4= (optional)

CRC4 multi-frame structure enable/disable indicator.

Range: on, off

Default: on

:e1atmsi= (optional)

Value of two Spare International bits of NFAS data.

Range: 0-3

Default: 3

:e1atmsn= (optional)

Value of five Spare National bits of NFAS data.

Range: 0-31

Default: 0

:e1loc= (optional)

Card location of an E1 card with an E1 interface that will service the link assigned for a Channel card. This parameter cannot be specified for an HC-MIM card.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

:e1port= (optional)

The port for the E1 interface on the E1 card to which a signaling link and timeslot are being assigned, or to which an SE-HSL link is being assigned.

Range: 1-8

Ports 3 through 8 can be specified only for HC-MIM cards.

Any 2, but no more than 2, of the 8 ports on an HC-MIM card can be specified when the card is used as an SE-HSL card.

Default: 1

:ecm= (optional)

Error correction method.

Range: basic, pcr

Default: basic

:ipliml2= (optional)

IPLIM level 2 stack.

Range: m2pa

Default: m2pa

:l1mode= (optional)

The mode of operation used to select the link clocking source at layer 1. One end of a V.35 link must be DTE and the other end must be DCE.

Range: dte, dce

Default: dte

:l2tset= (optional)

Level 2 timer set. A signaling link can be assigned to any of the thirty timer sets.

Range: 1-30

1-10 for ANSI low speed links

11-20 for ITU low speed links

21-25 for ITUN China high speed links

- Default:** **26-30** for ITUN Q703.A high speed links
1 for ANSI low speed links
11 for ITU low speed links
21 for ITUN China high speed links (SE-HSL link in a linkset defined with the **apcntype=ituchina** parameter)
26 for ITUN Q703.A high speed links (SE-HSL link in a linkset defined with the **apcntype=itun** parameter)
- :ll=** (optional)
 ATM line length in feet.
Range: **0-7**
0—0-110 feet
1—110-220 feet
2—220-330 feet
3—330-440 feet
4—440-550 feet
5—550-660 feet
6—More than 660 feet
7—Allows use of external line buildout networks
Default: **0**
- :lpset=** (optional)
 Link parameter set identifier.
Range: **1-30**
Default: **1**—for ANSI
21—for ITU
- :pcrn1=** (optional)
 The threshold of the number of MSUs available for retransmission. If the error correction method being used is PCR and this threshold is reached, no new MSUs or FISUs are sent. The retransmission cycle is continued up to the last MSU entered into the retransmission buffer in the order in which they were originally transmitted.
Range: **1-127**
Default: **76**
- :pcrn2=** (optional)
 The threshold of the number of MSU octets available for retransmission. If the error correction method being used is PCR, and this threshold is reached, no new MSUs or FISUs are sent. The retransmission cycle is continued up to the last MSU entered into the retransmission buffer in the order in which they were originally transmitted.
Range: **300-35500**
Default: **3800**
- :t1loc=** (optional)
 Card location of a T1 card with a T1 interface that will service the signaling link assigned for a Channel card. This parameter cannot be specified for an HC-MIM card.
Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

:t1port= (optional)

The port for the T1 interface on the T1 card to which a signaling link and timeslot are being assigned.

Range: 1-8

Ports 3 through 8 can be specified only for HC-MIM cards.

Default: 1

:ts= (optional)

E1 or T1 timeslot for the assigned signaling link.

Range: 1-31

E1 range: 1—31

T1 range: 1—24

:tset= (optional)

Transmitter signal element timing.

Range: on, off

Default: off

:vci= (optional)

Virtual channel identifier.

Range: 5, 32-65535

0-4 and 6-31 are reserved values; they cannot be specified in the command.

Default: 5

:vpi= (optional)

Virtual path identifier.

Range: 0-4095

Default: 0

Example

ent -

**slk:loc=1201:link=a:slc=3:lsn=c1201001:l2tset=3:l1mode=dte:bps=64
000:ecm=basic**

ent -

**slk:loc=1201:link=a:slc=3:lsn=c1201001:l2tset=3:ecm=pcr:pcrn1=50:
pcrn2=4000**

The following example adds signalling link a to linkset lshcap on an HCAP card.

ent-slk:loc=1304:link=a:slc=0:lsn=lshcap:lpset=3:vci=5:vpi=15

ent -

**slk:loc=1302:link=a:slc=5:lsn=atm1302a:lpset=3:vci=10:vpi=15 :ll=0
:atmtsel=external**

The following example adds a link to linkset ls1 at 56 KB for a multi-port LIM:

ent-slk:loc=1205:link=a1:slc=0:lsn=ls1

The following example assigns a timeslot for the signaling link on an E1 card that uses E1 port 1.

ent-slk:loc=1206:link=a:slc=0:lsn=e1jwk:ts=1

The following example assigns a timeslot for a signaling link on an E1 card that uses E1 port 2.

ent-slk:loc=1205:link=b:slc=0:lsn=e1typ:ts=1:e1port=2

The following example assigns a timeslot for a signaling link on a Channel card in the location specified by the loc parameter. The Channel card is serviced by the E1 assigned to the E1 card in the location specified by the e1loc parameter.

ent-slk:loc=1206:link=a:slc=0:lsn=e1jwk:ts=2:e1loc=1205

The following example adds a timeslot for a signaling link on an E1/T1 MIM card using E1 port 2 and signaling link b2.

ent-slk:loc=1205:link=b2:slc=0:lsn=e1typ:ts=1:e1port=2

The following example adds a timeslot for a signaling link on an E1/T1 MIM card used as an E1 Channel card in card location 1206. The command specifies signaling link port a1. The E1 interface that services the Channel card is on the E1 card in card location 1205 (e1loc parameter).

ent-slk:loc=1206:link=a1:slc=1:lsn=e1jwk:ts=2:e1loc=1205

The following example adds a timeslot for a signaling link on an E1/T1 MIM card using signaling link a2. The T1 interface defaults to the interface defined for T1 port 1 (t1port parameter not specified)

ent-slk:loc=1207:link=a2:slc=0:lsn=t1jwk:bps=64000:ts=1

The following example adds a timeslot for a signaling link on an E1/T1 MIM card using T1 port 2 and signaling link b2.

ent-slk:loc=1207:link=b2:slc=0:lsn=t1typ:ts=1:t1port=2

The following example adds a timeslot for a signaling link on an E1/T1 MIM card used as an T1 Channel card in card location 1208. The command specifies signaling link a1. The T1 interface that services the Channel card is on the T1 card in card location 1207 (t1loc parameter).

ent-

slk:loc=1208:link=a3:slc=1:lsn=t1jwk:bps=64000:ts=2:t1loc=1207

The following example adds a signaling link to linkset ls1 at 2048000 bps for an E1 ATM card that will use the CRC4 multi-frame structure

ent-

slk:loc=1205:link=a:slc=0:lsn=ls1:bps=2048000:atmsel=line:e1atmcrc4=on

The following example adds a link to link set ls1 at 56 Kbps for an HC-MIM card that is provisioned as an E1 card:

ent-slk:loc=1205:link=a31:slc=0:lsn=ls1:e1port=4:ts=4

The following example adds a link to link set l21 at 64 Kbps for an HC-MIM card that is provisioned as a T1 card:

ent-slk:loc=1207:link=b27:slc=3:lsn=ls2:t1port=8:ts=6:bps=64000

The following example adds signalling link b to linkset lse5atm on an E5-ATM card.

ent-slk:loc=1305:link=b:slc=1:lsn=lse5atm:lpset=3:vci=5:vpi=15

The following example adds a signaling link to an IPSG linkset for an E5-ENET card that is running the ipsg application and hosting an association.

ent-slk:loc=1204:port=b:lsn=lsipsg:slc=3:aname=assocsg1204

Dependencies

The slot portion of the specified card location (**loc**) can be **1 - 8** and **11 - 18**. Slots **09** and **10** cannot be specified. (The card location is xyss, where x is the frame, y is the shelf, and ss is the slot.)

Card locations **1113 - 1118** cannot be specified.

The frame and shelf portions of the specified card location (**loc**) can be **11 - 13**, **21 - 23**; **31 - 33**; **41 - 43**; **51 - 53**; and **61**. (The card location is xyss, where x is the frame, y is the shelf, and ss is the slot.)

The **pcrn1** parameter and the **pcrn2** parameter can be specified for the **ss7ansi** and **ccs7itu** applications only when the **ecm=pcr** parameter is specified.

Use Table 5-52 to select a valid transmission rate for the **bps** parameter.

Table 5-52. Transmission Rate for the **bps** Parameter

Card Application	bps Transmission Rate	Domain
ss7ansi	56000 or 64000	SS7
ss7gx25	4800, 9600, 19200, 56000, or 64000	X.25
ccs7itu	56000 or 64000	SS7
atmansi	1544000	SS7
ss7ansi, ccs7itu (SE-HSL cards)	1984000	SS7
atmitu	2048000	SS7

The value of the **bps** parameter must be **56000** or **64000** if the card application is **ss7ansi** or **ccs7itu** (except for SE-HSL cards, for which the bps parameter must be **1984000**).

The value of the **bps** parameter must be **56000** if the card type is either **limds0** or **limocu**.

The value of the **bps** parameter must be **1544000** if the card application is **atmansi**.

The value of the **bps** parameter can be **1544000** only if the card application is **atmansi**.

The value of the **bps** parameter must be **56000** if the card is a multi-port LIM.

The value of the **bps** parameter must be **2048000** if the card type is **lime1atm**.

The value of the **bps** parameter can be **2048000** only if the card application is **atmitu**.

The value of the **bps** parameter must be **1984000** if the card is an HC-MIM or E5-E1T1 card used for SE-HSL links (**linkclass=unchan** is specified in the E1 interface definition).

E1 links running at 56000 bps and 64000 bps are allowed in linksets with other links running at 56000 bps and 64000 bps in the same linkset. T1 links running at 56000 bps and 64000 bps are allowed in linksets with other links that are running at 56000 bps and 64000 bps links in the same linkset. In linksets that contain other types of links, all links in one linkset must use the same transmission rate.

The values **0 - 4** and **6 - 31** cannot be specified for the **vci** parameter; these values are reserved system values.

- The linkset adjacent point code (APC) type must be the same as the card application type (ANSI or ITU).
- IPSP-M2PA linksets cannot contain IPGWx and IPSP-M3UA link types. During migration to an IPSP-M2PA linkset, link types other than IPGWx or IPSP-M3UA can be added to the linkset. After the linkset is transitioned to IPSP-M2PA, only IPSP-M2PA and IPLIMx links can be added.
- IPSP-M3UA linksets cannot contain SS7IPGW, IPGWI, and IPGHC link types. After the linkset is transitioned to IPSP-M3UA, only IPSP-M3UA links can be added to the linkset.

The specified linkset name must exist in the database.

The value of the **slc** parameter cannot be used by more than one link in the linkset.

A card must be equipped in the specified card location.

The card in the specified card location must be a LIM or MIM and must exist.

The **e1port** parameter must be specified.

If the **e1port** parameter is not specified for an SE-HSL link, the value defaults to **1**. If the value of **1** has already been specified for a link, the error message will result.

The parameters that are specified for the command must be valid for the type of card in the specified card location.

When a low-speed link is assigned to a card (card application is not **atmansi** or **atmitu**), the ATM high-speed link and E1 ATM parameters (**atmtsel**, **e1atmcrc4**, **etatmsi**, **e1atmsn**, **ll**, **lpset**, **vci**, and **vpi**) cannot be specified.

If an ATM high-speed link is assigned to a card (card application is **atmansi**), then the low-speed link parameters (**ecm**, **l1mode**, **l2set**, **pcrn1**, **pcrn2**, and **tset**) cannot be specified.

When an E1 ATM high-speed link is assigned to a card (card application is **atmitu**), the low-speed link parameters (**ecm**, **l1mode**, **l2set**, **pcrn1**, **pcrn2**, and **tset**) cannot be specified.

When an IP link is assigned to a card (card application is **ss7ipgw**, **ipgwi**, **iplim**, or **iplimi**), the following low-speed link parameters, ATM high-speed link parameters, and E1 ATM high-speed link parameters cannot be specified: **lpset**, **vci**, **vpi**, **ll**, **atmtsel**, **e1atmcrc4**, **e1atmsi**, **e1atmsn**, **ecm**, **l1mode**, **l2tset**, **pcrn1**, **pcrn2**, and **tset**.

If the card application is **ss7gx25**, the **l2tset** parameter cannot be specified.

The following **link** parameter values can be specified for the following cards that support more than 2 links per card:

- **a1-a3, b1-b3**—Multi-port LIM (MPL), SSED CM card running the **iplim** or **iplimi** application with links having **ipliml2=m2pa**, E1/T1 MIM card
- **a1-a31, b1-b31**—HC-MIM card
- **a1-a15, b1-b15**—E5-E1T1 card
- **a1-a7, b1-b7**—E5-ENET card running the **iplim** or **iplimi** application that supports 16 links.
- **a1-a15, b1-b15**—E5-ENET card running the **ipsg** application.

The **link** parameter values **a1**, **b1**, **a2**, **b2**, **a3**, and **b3** can be specified only when:

- The card type is **limds0**, and the card application is **ss7ansi**.
- The card type is **lime1**, **limt1**, or **limch**, and the card application is **ss7ansi** or **ccs7itu**.
- The card is an SSED CM, and the card application is **iplim** or **iplimi**.
- The card type is **lime1**, **limt1**, or **limch** (and the card is not an SE-HSL card), and the card application is **ss7ansi** or **ccs7itu**.
- The card type is E5-ENET, and the card application is **iplim**, **iplimi**, or **ipsg**.

The **link** parameter values **a4-a7** and **b4-b7** can be specified for E5-ENET cards running the **iplim** or **iplimi** application. The **link** parameter values **a4-a15** and **b4-b15** can be specified only when the card type is **lime1** or **limt1** for HC-MIM and E5-E1T1 cards and the card application is **ss7ansi** or **ccs7itu**. The **link** parameter values **a4-a31** and **b4-b31** can be specified only when the card type is **lime1** or **limt1** for an HC-MIM card and the card application is **ss7ansi** or **ccs7itu**. The **link** parameter values **a4-a15** and **b4-b15** can be specified for E5-ENET cards running the **ipsg** application.

The **link** parameter values **a4-a15** and **b4-b15** are valid when the card type is **lime1** or **limt1** for either an E5-E1T1 card or an HC-MIM card that is used as an E1 or T1 card, and the card application is **ss7ansi** or **ccs7itu**. The link parameter values **a**, **a1-a15** and **b**, **b1-b15** are valid for E5-ENET cards running the **ipsg** application. The **link** parameter values **a16-a31** and **b16-b31** can be specified only when the card type is **lime1** or **limt1** for an HC-MIM card that is used as an E1 or T1 card, and

the card application is **ss7ansi** or **ccs7itu**. The **link** parameter values **a4-a31** and **b4-b31** cannot be specified for a Channel card or for an SE-HSL card. The **link** parameter values **a** , **b**, **a1-a7**, **b1-b7** are valid for E5-ENET cards running **iplim** or **iplimi** application.

HIPR cards must be in card locations xy **09** and xy **10** on any shelf that contains one or more HC-MIM, E5-E1T1, or E5-ENET cards. When **link** parameter values **a4-a31** and **b4-b31** are specified, the system verifies that HIPR cards are in card locations xy **09** and xy **10** on the same shelf with the specified HC-MIM, E5-E1T1, or E5-ENET card.

Links **a16-a31** and **b16-b31** cannot be specified for even-numbered card locations. HC-MIM cards are dual-slot cards. The links are assigned only to the cards in odd-numbered locations.

If the card application is **ss7gx25**, only the **link=a** parameter can be specified.

If the card application is **ss7ipgw** or **ipgwi**, then the **link=a** parameter must be specified.

The **tset** parameter can be specified only when the **l1mode=dce** parameter is specified. When the **l1mode=dce** parameter is specified and the **tset** parameter is not specified, the **tset** parameter value is set to **off**.

If the card is an HC-MIM used for SE-HSL links, only the **link=a** parameter or **link=b** parameter can be specified. If the card is an E5-E1T1 used for SE-HSL links, only the **link=a** parameter can be specified.

If the specified linkset has a mate linkset, only 1 SS7IPGW or IPGWI signaling link can be assigned to the specified linkset. The assigned link must be an SS7IPGW or IPGWI link.

Up to 8 IPGWx signaling links can be assigned to one linkset if the linkset is not mated.

The associated location must be empty, or an E5-ATM card must be provisioned in the location before the **link=b** parameter can be specified. Upon initialization, the E5-ATM card is in **boot phase-0** for up to 30 secs. During this period, the E5-ATM hardware is not detected, which may result in a lack of support for signalling link **b** .

When an IP link is assigned to a card running card application **ss7ipgw**, the **lsn** parameter must reference a linkset that specifies an IP gateway adjacent point code (**ent-ls:ipgwapc=yes**).

When an IP link is assigned to a card running card application **ipgwi**, the **lsn** parameter must reference a linkset that specifies an IP gateway adjacent point code (**ent-ls:ipgwapc=yes**).

When an IP link is assigned to a card running card application **ipgwi**, the specified link set must be empty; only 1 IPGWI link can be assigned to a link set.

When the specified linkset name (**lsn**) is defined with the **ipgwapc=yes** parameter, the card application must be **ss7ipgw** or **ipgwi**.

If the **multgc=yes** parameter is specified, then all links assigned to the linkset must be of the same type.

If **multgc=yes** parameter is specified, then the card in the specified card location must be running the **ipgwi**, **iplimi**, or **ipsg** application.

The **ipliml2** parameter can be specified only for IPLIM signaling links.

All IPLIM links assigned to the same linkset must be defined with the same **ipliml2** parameter value.

Linksets containing 24-bit ITU-N APCs or SAPCs cannot contain E1 ATM links. These links do not support 24-bit ITU-N traffic.

Linksets with both 14-bit ITU-N and 24-bit ITU-N APCs or SAPCs can contain only IPGWI or IPLIMI M3UA links. These links support 14-bit ITU-N and 24-bit ITU-N traffic simultaneously.

A maximum of 1200, 1500, or 2000 links is allowed in the system. The maximum depends on the enabled Large System # Links quantity (see the **rtrv-ctrl-feat** command output). A feature access key is required to enable support for more than 1200 links. A mixture of ATM high-speed, E1 ATM high-speed, and low-speed signaling links is supported. If the addition of either a low-speed signaling

link or an ATM high-speed signaling link exceeds the total number of low-speed and ATM high-speed signaling links allowed in the system, the **ent-slk** command is rejected.

HC-MIM and E5-E1T1 cards cannot be used as or with Channel cards. The **e1loc** and **t1loc** parameters cannot be specified for HC-MIM or E5-E1T1 cards.

When a card location is specified in the **loc** parameter for an E1 card, a T1 card, or a Channel card (card type **lime1**, **limt1**, or **limch**), a timeslot (**ts**) must be specified for the link. When a card location is specified for a Channel card (card type **limch**) assigned to an E1 interface, the **e1loc** parameter must be specified. When a card location is specified for a Channel card (card type **limch**) assigned to a T1 interface, the **t1loc** parameter must be specified.

A specific timeslot can be assigned in the **ts** parameter to only one E1 signaling link for the E1 interface that services that timeslot.

A specific timeslot can be assigned in the **ts** parameter to only one T1 signaling link for the T1 interface that services that timeslot.

The **ts** parameter value for a T1 link must be in the range **1-24**.

The **ts** parameter cannot be specified for HC-MIM or E5-E1T1 cards that are used for SE-HSL links (**linkclass=unchan** is specified in the E1 interface definition).

If the E1 interface has CAS multi-framing enabled for an E1 card or a Channel card, timeslot 16 cannot be specified.

When the **e1loc** parameter and the **e1port** parameter are specified together in the command, the **atmtsel** parameter cannot be specified.

If a card location is specified in the **loc** parameter for a Channel card (card type **limch**),

- The card in the location specified by the **e1loc** parameter must be an E1 card (card type **lime1**).
- When a Channel card location is specified in the **loc** parameter, the **e1loc** parameter must be specified to identify the associated E1 card. The specified E1 card must be equipped.
- The port specified in the **e1port** parameter must be equipped with an E1 interface for the card specified in the **e1loc** parameter.
- Port 1 must be specified (**e1port=1**) for the associated E1 card port.
- A Channel card (**e1loc** parameter) must be located on the same shelf with its associated E1 card (**loc** parameter).

If a card location is specified in the **loc** parameter for an E1 card (card type **lime1**),

- The **e1port** parameter can be specified to select either port 1 or port 2 for the E1 interface to service the signaling link on a 2-port E1 card or an E1/T1 MIM card. The default is port 1.
- The **e1port** parameter can be specified to select ports 1 - 8 for the E1 interface to service the signaling link on an HC-MIM or an E5-E1T1 card. The default is port 1.
- The E1 interface for the specified or default port must already be defined (see the **ent-e1** command).

The parameters **t1loc**, **t1port**, and **ts** are allowed only when entering a signaling link for an E1/T1 MIM used as a T1 or Channel card or for either an HC-MIM card or an E5-E1T1 card used as a T1 card. All V.35 and HSL parameters (**l1mode**, **l2tset**, **atmtsel**, **vci**, **vpi**, **ll**, and **tset**) are invalid when entering T1 parameters.

If a card location is specified in the **loc** parameter for a T1 Channel card (card type **limch**),

- The card in the location specified by the **t1loc** parameter must be an E1/T1 MIM card used as a T1 card (card type **limt1**).
- When a Channel card location is specified in the **loc** parameter, the **t1loc** parameter must be specified to identify the associated T1 card. The specified T1 card must be equipped.
- The port specified in the **t1port** parameter must be equipped with a T1 interface for the card specified in the **t1loc** parameter.
- Port 1 must be specified (**t1port=1**) for the associated T1 card port.
- A Channel card (**t1loc** parameter) must be located on the same shelf with its associated T1 card (**loc** parameter).

If a card location is specified in the **loc** parameter for a T1 card (card type **limt1**),

- The **t1port** parameter can be specified to select either port 1 or port 2 for the T1 interface to service the signaling link on a 2-port E1 card or an E1/T1 MIM card. The default is port 1.
- The **t1port** parameter can be specified to select ports 1 - 8 for the T1 interface to service the signaling link on an HC-MIM or an E5-E1T1 card. The default is port 1.
- The T1 interface for the specified or default port must already be defined (see the **ent-t1** command).

If a card location is specified in the **loc** parameter for an HC-MIM card,

- A maximum of 64 links can be assigned to one HC-MIM card (see Table A-1).
- Signaling links cannot be assigned to channel-bridged even-numbered ports.
- An even-numbered port that is in channel-bridged to an odd-numbered port cannot be specified for assigning a signaling link.
- The fan feature bit must be turned on before links can be assigned to HC-MIM cards (see the **chg-feat** command). The system verifies that the fan feature bit is on when links **a4-a31** and **b4-b31** are assigned.
- HIPR cards must be in the xy09 and xy10 card locations (*x* is the frame, *y* is the shelf) in each shelf that contains one or more HC-MIM cards.

If a card location is specified in the **loc** parameter for an E5-E1T1 card,

- A maximum of 32 links can be assigned to one E5-E1T1 card (see Table A-1 in Appendix A).
- Signaling links cannot be assigned to channel-bridged even-numbered ports.
- An even-numbered port that is channel-bridged to an odd-numbered port cannot be specified for assigning a signaling link.
- HIPR cards must be in the xy09 and xy10 card locations (*x* is the frame, *y* is the shelf) in each shelf that contains one or more E5-E1T1 cards.

An ANSI link (low-speed link) cannot be assigned to a card that is configured to support Synchronous E1 High Speed links (SE-HSL).

A maximum of 180 ATM links (E1-ATM, LIM-ATM, E5-ATM, etc.) can be provisioned in the system.

If the card is an IPSG card, then then the **ipsg=yes** parameter must be specified (see the **ent-ls** command).

If an IPSPG linkset and card are used, then the **aname** parameter must be specified.

A maximum of 32 signaling links can be provisioned on an IPSPG card.

If the **aname=m3ua** parameter is specified, then a maximum of 16 signaling links can be assigned.

If the **aname=m2pa** parameter is specified, then only one signaling link can be assigned.

The resulting total TPS of all signaling links configured for an IPSPG card cannot exceed 5000 TPS.

The total TPS of all signaling links configured in the EAGLE 5 ISS cannot exceed 500,000 TPS.

If the **ipsg=yes** parameter is specified (see the **ent-ls** command), then an IPSPG card must be provisioned in the card location.

The value specified for the **aname** parameter must already exist in the database.

The adapter assigned to the association must be the same as the adapter assigned to the linkset.

The value specified for the **aname** parameter must be associated with the value specified for the **loc** parameter.

Linksets must have same routing context to share an association.

The **aname** parameter can be specified only for IPSPG links.

Notes

The **ll** parameter is not available in the SEAS database.

When a signaling link is assigned to a card that is running the **atmansi** application or the **atmitu** application, and the **bps**, **vci**, **vpi**, **e1atmcrc4**, **e1atmsi**, **e1atmsn**, **ll**, **atmsel**, and **lpset** parameters are not specified, the ATM default values are assigned for these parameters.

The MTP Level 2 timers (**l2tset** parameter) are not valid for IP links or for ATM links.

A link is *equipped* when it is physically operational, that is, when the hardware is in place that is needed to support the link .

Signaling Links for 2-port E1 Cards

If you are configuring signaling links for an E1 or Channel card, each signaling link must be associated with a timeslot assigned in the command. Each signaling link/timeslot assigned for an E1 card or a Channel card must be associated with an E1 interface that has been defined for one of the ports on the E1 card (see the **ent-e1** command).

Timeslots and signaling links are defined in the **ent-slk** command by a combination of card location (**loc** parameter), the signaling link that uses the timeslot, the signaling link port (a or b), the timeslot number, and the card location and port for the servicing E1 interface on the E1 card (**e1port** and **e1loc** parameters). Timeslot numbers must be unique to the E1 interface that services the timeslot; that is, the same timeslot cannot be assigned to the same E1 interface for different signaling links.

If the link and timeslot are for a Channel card, the Channel card location is specified in the **loc** parameter, and the associated E1 card is specified in the **e1loc** parameter.

If the link and timeslot are for the E1 card itself, the E1 card location is specified in the **loc** parameter, and the E1 interface port (1 or 2) that will service the link is specified in the **e1port** parameter.

The E1 card can service 2 timeslots assigned to signaling links for itself, and 1-31 timeslots assigned to signaling links for Channel cards on the same shelf. If the E1 card is not servicing any Channel cards, 2 links with associated timeslots can be defined—both on the interface on port 1, both on the interface on port 2, or 1 on the interface on each port. The links for any Channel cards serviced by the E1 card must be serviced by the interface on port 1. Each Channel card can have 1 or 2 links assigned to the E1 interface on port 1, for a total of 16 Channel cards and up to 31 links (Timeslot 0 cannot be used). All links for a Channel card must be assigned to the same E1 card. If the E1 card is

servicing any Channel cards, the 2 links for the E1 card itself can be assigned to the interface on port 2 (which cannot service Channel card links and can service only 2 links).

Signaling Links for E1/T1 MIM Cards

One E1/T1 MIM card can be used for E1 card functions or T1 card functions, but not both at the same time. E1 cards and T1 cards can coexist in the same EAGLE 5 ISS.

If you are configuring signaling links for an E1, T1, or Channel card, each signaling link must be associated with a timeslot assigned in the command. Each signaling link/timeslot assigned for an E1, T1, or Channel card must be associated with an E1 or T1 interface that has been defined for one of the ports on the E1/T1 MIM card (see the **ent-e1** or **ent-t1** command).

Timeslots and signaling links are defined in the **ent-slk** command by a combination of card location (**loc** parameter), the signaling link that uses the timeslot, the signaling link port (**a**, **a1**, **a2**, **a3**, **b**, **b1**, **b2**, or **b3**), the timeslot number, and the card location and port for the servicing E1 or T1 interface on the E1 or T1 card (**e1loc** and **e1port** or **t1loc** and **t1port** parameters). Timeslot numbers must be unique to the E1 or T1 interface that services the timeslot; that is, the same timeslot cannot be assigned to the same E1 or T1 interface for different signaling links.

If the link and timeslot are for a Channel card, the Channel card location is specified in the **loc** parameter, and the associated E1 or T1 card is specified in the **e1loc** or **t1loc** parameter.

If the link and timeslot are for the E1 or T1 card itself, the E1 or T1 card location is specified in the **loc** parameter, and the E1 or T1 interface port (1 or 2) that will service the link is specified in the **e1port** or **t1port** parameter.

The E1/T1 MIM used as an E1 card can service 8 timeslots assigned to signaling links for itself, and 1-31 timeslots assigned to signaling links for Channel cards on the same shelf. If the E1 card is not servicing any Channel cards, 8 links with associated timeslots can be defined—all on the interface on port 1, all on the interface on port 2, or some on the interface on each port. If the E1 card is servicing Channel card links, the links for the E1 card itself can be assigned either to the port 1 interface or the port 2 interface. But for each E1 link assigned to the port 1 interface, the number of links is decreased by one that can be assigned to that port interface for a Channel card. All links for any Channel cards serviced by an the E1 card must be serviced by the interface on port 1. Each Channel card can have up to 8 links assigned to the E1 interface on port 1, for a total of up to 31 links (Timeslot 0 cannot be used). used.) All links for a Channel card must be assigned to the same E1 card. If the E1 card is servicing any Channel cards, the 8 links for the E1 card itself can all be assigned to the interface on port 2 (which cannot service Channel card links and can service only 8 links).

The E1/T1 MIM used as a T1 card can service 8 timeslots assigned to signaling links for itself, and 1-24 timeslots assigned to signaling links for Channel cards on the same shelf. If the T1 card is not servicing any Channel cards, 8 links with associated timeslots can be defined—all on the interface on port 1, all on the interface on port 2, or some on the interface on each port. If the T1 card is servicing Channel card links, the links for the T1 card itself can be assigned either to the port 1 interface or the port 2 interface. But for each T1 link assigned to the port 1 interface, the number of links is decreased by one that can be assigned to that port interface for a Channel card. All links for any Channel cards serviced by the T1 card must be serviced by the interface on port 1. Each Channel card can have up to 8 links assigned to the T1 interface on port 1, for a total of up to 24 links. All links for a Channel card must be assigned to the same T1 card. If the T1 card is servicing any Channel cards, the 8 links for the T1 card itself can all be assigned to the interface on port 2 (which cannot service Channel card links and can service only 8 links).

Signaling Links for HC-MIM Cards

An HC-MIM card can be used for E1 card functions or T1 card functions, but not both at the same time. E1 cards and T1 cards can coexist in the same EAGLE 5 ISS.

Each signaling link for an E1 card or a T1 card must be associated with a timeslot assigned in the **ent-slk** command. Each signaling link and timeslot assigned for an E1 card or a T1 card must be

associated with an E1 or T1 interface that has been defined for one of the ports on the HC-MIM card (see the **ent-e1** command or the **ent-t1** command).

Timeslots and signaling links are defined in the **ent-slk** command by a combination of card location (**loc** parameter), the signaling link that uses the timeslot (**a**, **a 1-a31**, **b**, **b1-b31**), the timeslot number (**ts**), and the port for the servicing E1 or T1 interface on the E1 or T1 card (**e1port** or **t1port** parameter). Timeslot numbers must be unique to the E1 or T1 interface that services the timeslot; that is, the same timeslot cannot be assigned to the same E1 or T1 interface for more than one signaling link.

Each HC-MIM used as an E1 card can have up to 64 signaling links assigned to the card. Each E1 interface on an HC-MIM card can service 1-31 timeslots.

Each HC-MIM used as a T1 card can have up to 64 signaling links assigned to the card. Each T1 interface on an HC-MIM card can service 1-24 timeslots.

Signaling Links for E5-E1T1 Cards

An E5-E1T1 card can be used for E1 card functions or T1 card functions, but not both at the same time. E1 cards and T1 cards can coexist in the same EAGLE 5 ISS.

Each signaling link for an E1 card or a T1 card must be associated with a timeslot assigned in the **ent-slk** command. Each signaling link and timeslot assigned for an E1 card or a T1 card must be associated with an E1 or T1 interface that has been defined for one of the ports on the E5-E1T1 card (see the **ent-e1** command or the **ent-t1** command).

Timeslots and signaling links are defined in the **ent-slk** command by a combination of card location (**loc** parameter), the signaling link that uses the timeslot (**a**, **a 1-a15**, **b**, **b1-b15**), the timeslot number (**ts**), and the port for the servicing E1 or T1 interface on the E1 or T1 card (**e1port** or **t1port** parameter). Timeslot numbers must be unique to the E1 or T1 interface that services the timeslot; that is, the same timeslot cannot be assigned to the same E1 or T1 interface for more than one signaling link.

Each E5-E1T1 used as an E1 card can have up to 32 signaling links assigned to the card. Each E1 interface on an E5-E1T1 card can service 1-31 timeslots.

Each E5-E1T1 used as a T1 card can have up to 32 signaling links assigned to the card. Each T1 interface on an E5-E1T1 card can service 1-24 timeslots.

Signaling Links for E5-ATM Cards

An E5-ATM card can support either E1 or T1 card functions; however, the card cannot support both functions at the same time. E5-ATM cards running E1 and T1 functions can coexist in the same EAGLE 5 ISS. Each E5-ATM card can have up to 2 signaling links assigned to the card. Only the **a** or **b** link can be used. The **a** and **b** links can be configured for a location if a card is not seated in that location. However, if a card other than the E5-ATM card is inserted in this location, the card is auto-inhibited.

Signaling Links for IPSG Cards

An IPSG card supports both M2PA and M3UA signaling links.

The card supports up to 32 signaling links per card, 16 M3UA links per association, and 32 associations per card.

Multiple M3UA signaling links with routing context (different linksets/AS, up to 16) can use a single association.

Each M3UA AS-ASP instance maps to a signaling link. Signaling link state depends upon AS-ASP state, as well as administrative action.

The IPSPG card **can** share M2PA linksets with IPLIM, IPLIMI, and IPLHC cards, but the card **cannot** share M3UA linksets with SS7IPGW, IPGWI, and IPGHC cards.

The IPSPG card supports ANSI and ITU and ITUN/ITUN24 signaling links simultaneously on one card and on one association. Each signaling link resides in a set of networks determined by the APC and SAPCs of the assigned linkset.

The **slktps** parameter specified for the IPSPG linkset (see the **ent-ls/chg-ls** command) specifies the TPS for each link provisioned for that linkset.

Output

The following example adds signalling link **b** to linkset **lse5atm** on an E5-ATM card.

```
ent -slk:loc=1305:link=b:slc=6:lsn=lse5atm:lpset=3:vci=5:vpi=15
tekelecstp 08-02-14 13:17:13 EST EAGLE 38.0.0
ENT-SLK: MASP A - COMPLTD
```

ent-spc

Enter Secondary Point Code

Use this command to enter an SPC (secondary point code) into the database.

Keyword: **ent-spc**

Related Commands: **dlt-spc, rtrv-spc**

Command Class: Database Administration

Parameters

:spc= (mandatory)

ANSI point code with subfields network indicator-network cluster-network cluster member (*ni-nc-ncm*).

Synonym: **spca**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:spc/spca/spci/spcn/spcn24= (mandatory)

Secondary point code.

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:spci= (mandatory)

ITU international secondary point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

:spcn= (mandatory)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmt** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-**, **0-16383**, **aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:spcn24= (mandatory)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

Example

The following example adds a secondary point code:

ent - spc : spc=10-20-30

The following example adds a 24-bit ITU-N secondary point code:

ent - spc : spcn24=99-99-99

The following example adds a spare ITU-N secondary point code:

ent - spc : spcn=s-12345

Dependencies

The Spare Point Code Support feature must be enabled before a spare point code (prefix s-) can be specified in the command.

The value specified for the **spc** parameter must be a full point code.

The ANSI point code range requirements have been violated for an ANSI SID. For the ANSI secondary point code with subfields *ni-nc-ncm*, the *ni* component cannot equal **000**, the *nc* component cannot equal **000** if the *ni* component is **001 - 005**.

The specified secondary point code to be added must not already exist as a secondary point code.

A maximum of 40 secondary point codes may be defined.

The MPC feature must be turned on before a secondary point code can be added using this command.

The value specified for the **spc** parameter cannot already exist in the Destination table as a destination point code, true point code, or concerned point code.

The specified secondary point code cannot match an existing true point code or capability point code in the Site Identification table.

Notes

If the **spcn** parameter is specified, its format must match the format that was assigned with the **chg-stpopts:npcfmt** parameter.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-).

Output

```
ent - spc : spc=10-20-30
    rlgncxa03w 04-02-18 08:50:12 EST EAGLE 31.3.0
    Secondary Point Code table is (7 of 40) 17% full
    ENT-SPC: MASP A - COMPLTD
;
```

ent-srvsel

Enter Service Selector

Use this command to assign the applicable service selectors required to specify a service entry for DSM services.

Keyword: ent-srvsel

Related Commands: chg-srvsel, dlt-srvsel, rtrv-srvsel

Command Class: Database Administration

Parameters

:gti/gtia/gtii/gtin/gtin24= (mandatory)

Global title indicator. For all service selector commands, the domain is defined as **gti** and **gtia** (ANSI), **gtii** (ITU international), and **gtin** (ITU national). For the service selector commands, **gti** and **gtia** are equivalent.

Range: Supported value for ANSI: **gti=2** and **gtia=2**
Supported values for ITU: **gtii= 2, 4 ; gtin= 2, 4 ; gtin24 = 2, 4**

:serv= (mandatory)

DSM service.

NOTE: The **gport** service cannot be used for the Prepaid SMS Intercept Phase 1 (PPSMS) or the Portability Check for Mobile Originated SMS feature; use the **smsmr** service. The **mnp** service includes the G-Port, A-Port, and IS41 GSM Migration services.

Range: **eir, gflex, gport, inpq, inpmr, smsmr, idps, idpr, mnp, vflex, atinp**

eir — Equipment Identity Register

gflex — GSM flexible numbering

gport — GSM number portability

inpq — INP query

inpmr — INP message relay

smsmr — MO SMS ASD, MO SMS B-Party Routing, MO SMS GRN, MO-based GSM SMS NP, MO-based IS41 SMS NP, MO SMS IS41-to-GSM Migration, Portability Check for MO SMS, Prepaid SMS Intercept Phase 1

idps — IDP Screening for Prepaid

idpr — Prepaid IDP Query Relay

mnp — Mobile Number Portability

vflex — Voice Mail Router

atinp — ATI Number Portability Query (ATINP)

- :ssn=** (mandatory)
Subsystem number.
Range: **0-255 ***
- :tt=** (mandatory)
Translation type.
Range: **0-255**
- :nai=** (optional)
Nature of Address indicator. The Nature of Address indicator can be specified by supplying either a mnemonic value (**nai** parameter) or an explicit numeric value (**naiv** parameter). Either the **nai** parameter or the **naiv** parameter, but not both, can be specified in the command. Table A-5 shows the mapping between the **naiv** and the **nai** parameter values.
Range: **1sub, rsvd, natl, intl**
- :naiv=** (optional)
Nature of Address indicator value. The Nature of Address indicator can be specified by supplying either a mnemonic value (**nai** parameter) or an explicit numeric value (**naiv** parameter). Either the **nai** parameter or the **naiv** parameter, but not both, can be specified in the command. Table A-5 shows the mapping between the **naiv** and the **nai** parameter values.
Range: **0 -127**
- :np=** (optional)
Numbering Plan. The numbering plan can be specified by supplying either a mnemonic value (**np** parameter) or an explicit numeric value (**npv** parameter). Either the **np** parameter or the **npv** parameter, but not both, can be specified in the command. Table A-6 shows the mapping between the **npv** and the **np** parameter values.
Range: **e164, generic, x121, f69, e210, e212, e214, private**
- :npv=** (optional)
Numbering Plan value. The numbering plan can be specified by supplying either a mnemonic value (**np** parameter) or an explicit numeric value (**npv** parameter). Either the **np** parameter or the **npv** parameter, but not both, can be specified in the command. Table A-6 shows the mapping between the **npv** and the **np** parameter values.
Range: **10-15**
- :snai=** (optional)
The service nature of address indicator.
Range: **1sub, natl, intl, rnidn, rnndn, rnsdn, ccrndn**
 natl — National significant number
 intl — International number
 rnidn — Routing number prefix and international dialed/directory number
 rnndn — Routing number prefix and national dialed/directory number
 rnsdn — Routing number prefix and subscriber dialed/directory number
 ccrndn — Country code, routing number, and national directory number
 sub — Subscriber number
- :snp=** (optional)
The service numbering plan.
Range: **1e164, e212, e214**

Example

```
ent-srvsel:gtii=4:tt=20:np=e164:nai=intl:serv=eir:ssn=*
```

```

ent-
srvsel:gtin24=4:tt=4:np=e164:nai=intl:serv=gport:snp=e164:snai=intl:ssn=9
ent-srvsel:gtii=4:tt=4:np=e164:nai=intl:serv=eir:ssn=11
ent-
srvsel:gtin=4:tt=9:np=e214:nai=natl:snp=e164:snai=intl:serv=gflex:ssn=250
ent-srvsel:gtii=4:tt=20:np=e164:nai=intl:serv=eir:ssn=*
ent-srvsel:gtii=4:tt=0:np=e164:nai=intl:serv=atinp:ssn=11
ent-srvsel:gtii=2:tt=6:snai=intl:snp=e164:serv=smsmr:ssn=10

```

Dependencies

The G-Flex feature must be turned on before the **serv=gflex** parameter can be specified.

The INP feature must be turned on before the **serv=inpqr** or **serv=inpq** parameter can be specified.

The G-Port feature must be turned on before the **serv=gport** parameter can be specified.

The Equipment Identity Register (EIR) feature must be turned on before the **serv=eir** parameter can be specified.

The **np** and **npv** parameters cannot be specified together in the command.

The **nai** and **naiv** parameters cannot be specified together in the command.

The **gtia=4** parameter cannot be specified. The value **4** is not valid for the **gtia** parameter.

The values **1** and **3** are not valid for the **gti/gtia/gtii/gtin/gtin24** parameters.

If the **gti/gtia/gtii/gtin/gtin24=2** parameter is specified, then the **np(v)** and **nai(v)** parameter combinations cannot be specified.

If the **gtii/gtin/gtin24=4** parameter is specified, then an **np(v)** and **nai(v)** parameter combination must be specified. The parameters can be specified in the following combinations: **np** and **naiv**, **npv** and **nai**, **np** and **nai**, or **npv** and **naiv**.

If the **serv** parameter has a value of **inpqr**, **inpq**, **gport**, or **eir**, then the **gtia** and **gti** parameters cannot be specified.

If the **serv=inpqr** parameter is specified, then the **snp=e164** parameter must be specified.

If the **serv=inpq** parameter is specified, then the **gtii** parameter cannot be specified.

If the value specified for the **snai** parameter is **rnidn**, **rnndn**, or **rnsdn**, then the value specified for the **serv** parameter must be **inpqr**, **gport**, or **smsmr**.

If the value specified for the **serv** parameter is **gflex**, **gport**, **inpqr**, or **smsmr**, then the **snai** and **snp** parameters must be specified.

If the value specified for the **serv** parameter is **atinp**, **eir**, **idpr**, **inpq**, or **vflex**, then the **snai** and **snp** parameters cannot be specified.

If the **snai=ccrndn** parameter is specified, then the value specified for the **serv** parameter must be **gport** or **smsmr**.

If the value specified for the **serv** parameter is **gport** or **smsmr**, then the **snp=e164** parameter must be specified.

An entry cannot already exist that matches the new **gti/gtia/gtii/gtin/gtin24**, **tt**, **ssn**, **np(v)**, and **nai(v)** combination of parameters.

For the specified **gti/gtia/gtii/gtin**, **tt**, **np(v)**, **nai(v)**, and **ssn=*** parameters, an entry matching a specific **ssn** cannot already exist.

For the specified **gti/gtia/gtii/gtin**, **tt**, **np(v)**, **nai(v)**, and **ssn** parameters, an entry matching the **ssn=*** parameter cannot already exist.

If the **ansigflex** STP option is enabled (see the **chg-stpotps** command), then an ITU service selector cannot be entered.

The IDP Screening for Prepaid feature must be on before the **serv=idps** parameter can be specified.

If the **serv=idps** parameter is specified, then the supported mandatory parameters are **tt**, **serv**, **ssn**, **gtin**, and **gtii**. Supported optional parameters are **np** and **nai**.

The Prepaid IDP Query Relay feature must be turned on before the **serv=idpr** parameter can be specified.

If the **serv=idpr** parameter is specified, then the only valid mandatory service parameters are **tt**, **serv**, **ssn**, **gtii**, and **gtin**. If the **serv=idpr** parameter is specified, then the only valid optional parameters are **np** and **nai**.

The A-Port or IS41 GSM Migration (IGM) feature must be turned on before the **serv=mnpr** parameter can be specified.

If the A-Port or IGM feature is enabled, then the **serv=gport** parameter cannot be specified.

An entry cannot already exist that matches the new **gti/gtii/gtin/gtin24**, **tt**, **ssn**, **np(v)**, and **nai(v)** combination of parameters.

An entry cannot already exist that matches the new **gti/gtii/gtin/gtin24**, **tt**, **ssn**, **np(v)**, and **nai(v)** combination of parameters.

An entry cannot already exist that matches the new **gti/gtii/gtin/gtin24**, **tt**, **ssn**, **np(v)**, and **nai(v)** combination of parameters.

The V-Flex feature must be turned on before the **serv=vflex** parameter can be specified.

The ATINP feature must be enabled before the **serv=atinp** parameter can be specified.

The PPSMS or Portability Check for Mobile Originated SMS feature must be turned on, or the MO SMS ASD, MO SMS GRN, MO SMS B-Party Routing, MO SMS IS41-to-GSM Migration, MO-based GSM SMS NP, or MO-based IS41 SMS NP feature must be enabled before the **serv=smsmr** parameter can be specified.

If the **serv=atinp** parameter is specified, then the **gtin24** parameter cannot be specified.

Output

```
ent-srvsel:gtia=2:tt=9:ssn=250:snp=e212:snai=natl:serv=gflex
rlghncxa03w 07-10-05 16:40:40 EST EAGLE 37.5.0
Service Selector table is (114 of 1024) 11% full
ENT-SRVSEL: MASP A - COMPLTD
;
```

ent-ss-appl

Enter Subsystem Application

Use this command to reserve a subsystem number for an application and set the application status to be online or offline. You can define only one subsystem per application. The application must be unique.

Keyword: ent-ss-appl

Related Commands: chg-ss-appl, dlt-ss-appl, rtrv-ss-appl

Command Class: Database Administration

Parameters

:appl= (mandatory)

Application type.

Range: lnp, inp, eir, vflex, atinpq

:ssn= (mandatory)
 Primary subsystem number.
Range: 2-255

:stat= (optional)
 Status.
Range: offline, online
Default: offline

Example

```
ent-ss-appl:appl=lnp:ssn=16:stat=online
ent-ss-appl:appl=inp:ssn=15:stat=offline
```

Dependencies

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before the **ent-ss-appl:appl=lnp** command can be entered.

The INP feature must be turned on before the **ent-ss-appl:appl=inp** command can be entered.

The Equipment Identity Register (EIR) feature must be turned on before the **ent-ss-appl:appl=eir** command can be entered.

The specified application (**appl** parameter) must not already be assigned.

The maximum number of applications must not already be assigned.

For LNP, the STP true point code and LNP subsystem must exist in the MAP table.

For INP, the STP true point code and INP subsystem must exist in the MAP table.

For EIR, the STP true point code and EIR subsystem must exist in the MAP table.

The **TF** feature must be on. (DBS 1.0 only)

STP True Point Code must exist in MAP table

STP True Point Code and TF subsystem must exist in MAP table

If the V-Flex feature is turned on, then the STP true point code and V-Flex subsystem must exist in the MAP table.

The V-Flex feature must be turned on before the **appl=vflex** parameter can be specified.

The RPC3 table is corrupt or cannot be found.

The ATINP feature must be enabled before the **appl=atinpq** parameter can be specified.

For ATINP, the STP true point code and ATINPQ subsystem must exist in the MAP table.

The value specified for the **ssn** parameter cannot already exist in the SS-APPL table.

The specified MAP table entry for the subsystem must be a valid point code type for that subsystem.

The following point code types are not valid for the indicated subsystems:

- If the subsystem number is configured for the INP subsystem in the SS-APPL table, then the True Point code cannot be an ITU-I or ANSI point code.
- If the subsystem number is configured for the EIR subsystem in the SS-APPL table, then the True Point code cannot be an ANSI point code.
- If the subsystem number is configured for the ATINPQ or VFLEX subsystem in the SS-APPL table, then the True Point code can not be an ITU-N24 point code.

Notes

If not specified, the application subsystem status defaults to **offline**. When the application is **offline**, the application subsystem is down.

The LNP application status applies to both message relay and LNP query.

Output

```
ent-ss-appl:appl=lnp:ssn=16:stat=online
rlghncxa03w 04-01-05 16:40:40 EST EAGLE 31.3.0
ENT-SS-APPL: MASP A - COMPLTD
;
```

ent-subnetid**Enter Subnet ID**

Use this command to enter elements into the Subnet ID list, for the ISUP NP with EPAP feature. Each entry is identified by the Subnet ID and the Subnet number.

The Subnet ID length (**subnetidlen** parameter) must be entered first, before the command is entered the second time to enter the Subnet ID and Subnet Number.

Keyword: ent-subnetid

Related Commands: dlt-subnetid, rtrv-subnetid

Command Class: Database Administration

Parameters

:subnetid= (optional)

Vendor Subnet ID

Range: 1-15 digits

This number must contain the number of digits defined by the **subnetidlen** parameter value.

Valid digits are **0-9, a-f, A-F**.

:subnetidlen= (optional)

Subnet ID Length.

Range: 1-15

All Subnet IDs defined for the ISUP NP with EPAP feature must contain this number of digits.

:subnetnum= (optional)

Subnet Number. The Subnet Number is used as a reference to the prefix number for the ISUP NP with EPAP feature.

Range: 1-5

1—Corresponds to the prefix defined with prefix number 1 (see the **chg-prefix** command).

2—Corresponds to the prefix defined with prefix number 2 (see the **chg-prefix** command).

3—Corresponds to the prefix defined with prefix number 3 (see the **chg-prefix** command).

4—Corresponds to the prefix defined with prefix number 4 (see the **chg-prefix** command).

5—Corresponds to the prefix defined with prefix number 5 (see the **chg-prefix** command).

Example

```
ent -subnetid:subnetidlen=6
```

```
ent -subnetid:subnetid=886933:subnetnum=1
```

Dependencies

The value **none** cannot be specified for the **subnetid** parameter.

The ISUP NP with EPAP feature must be enabled before this command can be entered.

The SUBNETID table can contain a maximum of 50 entries.

The specified ID entry cannot already exist in the SUBNETID table.

All SUBNETID table entries must have the number of digits defined by the **subnetidlen** parameter value.

The prefix with the same prefix number as the specified Subnet Number must already be provisioned for the ISUP NP with EPA feature.

The Subnet ID length cannot be changed unless the SUBNETID table is empty. All Subnet IDs must be deleted from the table before a different Subnet ID length can be entered.

The Subnet ID length must be entered before any Subnet IDs can be defined.

The **subnetidlen** parameter cannot be specified in the same command with the **subnetid** and **subnetnum** parameters.

Either the **subnetidlen** parameter, or the **subnetid** and **subnetnum** parameters can be specified in one command.

Notes

None.

Output

The Subnet ID length must be entered first.

```
ent -subnetid:subnetidlen=6
```

```
rlghncxa03w 04-10-07 11:11:28 EST EAGLE 31.11.0  
ENT-SUBNETID: MASP A - COMPLTD
```

```
;
```

The first Subnet ID and Subnet number can be entered after the Subnet ID length has been entered.

```
ent -subnetid:subnetid=886933:subnetnum=1
```

```
rlghncxa03w 04-10-07 11:11:28 EST EAGLE 31.11.0  
VENDID table is (6 of 50) 11% full  
ENT-SUBNETID: MASP A - COMPLTD
```

```
;
```

ent-t1**Enter T1 Interface**

Use this command to enter an interface for an E1/T1 MIM card, an HC-MIM card, or an E5-E1T1 card used as a T1 card. The T1 port number on the card and the T1 card location in the EAGLE 5 ISS must be specified.

Framing, line length, encoding, master/slave clocking options, and the signaling bit setting can be specified.

On an HC-MIM or E5-E1T1 card, T1 ports 1, 3, 5, and 7 (master ports) can be independently channel bridged with their adjacent even-numbered (slave) T1 ports 2, 4, 6, and 8 to allow non-signaling data pass-through. Any of the 8 ports on an HC-MIM or E5-E1T1 card can be specified.

Keyword: ent-t1

Related Commands: chg-t1, dlt-t1, rtrv-t1, tst-t1

Command Class: Database Administration

Parameters

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

:t1port= (mandatory)

T1 card port number. The value must be a T1 port for which an interface has not been configured on the specified T1 card.

Range: 1-8

Ports 3 through 8 can be specified only for HC-MIM and E5-E1T1 cards.

:chanbrdg= (optional)

Indicates whether an odd numbered port on an HC-MIM or E5-E1T1 card is channel bridged with its adjacent even numbered port for non-signaling data pass through.

Range: on, off

Default: off

:encode= (optional)

Indicator for use of B8ZS or AMI encoding/decoding.

Range: b8zs, ami

Default:

:framing= (optional)

Indicator for framing format.

Range: sf, esf

Default:

:ll= (optional)

T1 cable length in feet between the EAGLE 5 ISS and the connecting node.

Range: 0-655

Default: 133

:t1tsel= (optional)

Timing source. Indicates master (external) or slave (line) timing source, or timing source recovered from the paired master port for the channel bridged slave port.

Range: line, external, recovered

Default: line

Example

ent -

t1: loc=1205:t1port=1:encode=ami:t1tsel=external:framing=sf:ll=100

ent -t1: loc=1205:t1port=2:encode=b8zs:t1tsel=external:framing=esf

ent -t1: loc=1203:t1port=1:chanbrdg=on:t1tsel=recovered

ent -t1: loc=1203:t1port=3:chanbrdg=on:t1tsel=external

Dependencies

The specified card location (**loc** parameter) must be equipped.

The card specified by the **loc** parameter must be a **limt1** card type.

The port specified by the **t1port** parameter must not be already equipped with a T1 interface.

The **chanbrdg=on** parameter can be specified only for HC-MIM and E5-E1T1 cards.

The **chanbrdg=on** parameter cannot be specified for even-numbered T1 ports (**t1port** parameter).

The timing source parameter **t1tsel** must be specified if the **chanbrdg=on** parameter is specified.

The **t1tsel=line** parameter cannot be specified for a T1 port (**t1port** parameter) when the **chanbrdg=on** parameter is specified.

The **t1tsel=recovered** parameter cannot be specified for a T1 port (**t1port** parameter) unless the **chanbrdg=on** parameter is specified.

When provisioning an odd-numbered T1 port (**t1port** parameter) on an HC-MIM or E5-E1T1 card to channel bridging mode using the **chanbrdg=on** parameter, the **force=yes** parameter must be specified if the adjacent even-numbered port is already provisioned with a T1 interface.

All signaling links assigned to adjacent even-numbered T1 ports must be deleted before an odd-numbered T1 port (**t1port** parameter) on an HC-MIM or E5-E1T1 card can be provisioned into channel bridging mode using the **chanbrdg=on** parameter. See the **dlt-slk** command to delete the signaling links.

The fan feature bit must be on before HC-MIM cards can be used in an EAGLE 5 ISS shelf (see the **chg-feat** command). The system checks the fan feature bit when T1 ports **3 - 8** (**t1port** parameter) or **chanbrdg=on** parameter is specified and an HC-MIM card is present in the specified odd card location (**loc** parameter).

HIPR cards must be equipped in card locations xy09 and xy10 (x is the frame, y is the shelf) on each EAGLE 5 ISS shelf that contains one or more HC-MIM or E5-E1T1 cards. The system checks for HIPR cards when T1 ports **3 - 8** (**t1port** parameter) or **chanbrdg=on** parameter is specified for HC-MIM and E5-E1T1 cards.

T1 ports **3 - 8** (**t1port** parameter) can be specified only for HC-MIM and E5-E1T1 cards.

Notes

One or two T1 interfaces must be defined on an E1/T1 MIM card used as a T1 card after the T1 and any associated Channel card types (**limt1** and **limch**) are defined in the database (with the **ent-card** command), and before the signaling links and associated timeslots are defined for the T1 card and any associated Channel cards (with the **ent-slk** command).

External timing is derived from the EAGLE 5 ISS High-Speed Master Clock (1.544 MHz for T1 or 2.048 MHz for E1); therefore, the Master Timing feature is required. Line timing is derived from its received data stream, if present.

Up to 8 T1 interfaces can be defined on an HC-MIM or E5-E1T1 card used as a T1 card after the T1 card type (**limt1**) is defined in the database (with the **ent-card** command), and before the signaling links and associated timeslots are defined for the T1 card.

On a HC-MIM or E5-E1T1 card, T1 ports 1, 3, 5, and 7 (master ports) can be independently channel bridged with their adjacent even-numbered (slave) ports 2, 4, 6, and 8 to allow non-signaling data pass-through. The **chanbrdg** parameter must be specified for the odd-numbered T1 port.

Output

```

ent -
t1:loc=1205:t1port=1:encode=ami:t1tsel=external:framing=sf:ll=100
    rlgncxa03w 04-02-20 09:07:58 EST EAGLE 31.3.0
    ENT-T1: MASP A - COMPLTD
;

```

ent-tt**Enter Translation Type**

Use this command to add a translation type to the system database.

NOTE: If the EGTT (Enhanced Global Title Translation) feature is turned on in the system, the system will no longer accept GTT (Global Title Translation) and TT (Translation Type) commands. Refer to the new command sets that replace the GTT and TT commands: GTT Selector commands (ent/chg/dlt/rtrv-gttset), GTT Set commands (ent/dlt/rtrv-gttset), and GTA commands (ent/chg/dlt/rtrv-gta).

Keyword: ent-tt

Related Commands: dlt-tt, rtrv-tt

Command Class: Database Administration

Parameters

:type/typea/typei/typen/typen24= (mandatory)

A translation type numeric value may be entered as ANSI type (**type** or **typea**) and also as an ITU type (**typei** or **typen**). However, they are separate entities.

Range: 000-255

Default: No translation type is specified

:alias= (optional)

The alias of the global title translation type

Range: 000-255

Default: No alias assignment is made.

:ndgt= (optional)

The number of digits contained in the global title translation. This parameter is not valid if the VGTT (variable length GTT) feature is turned on.

Range: 1-21

Default: 6

(not applicable if the VGTT feature is on)

:ttn= (optional)

Translation type name.

Range: ayyyyyyyy

1 alphabetic character followed by up to 7 alphanumeric characters

Default: No translation name is given

Example

```
ent-tt:type=230:ttn=lidb:ndgt=5
```

```
ent-tt:type=230:ttn=lidb:alias=007
```

```
ent-tt:type=2:ndgt=5
```

```
ent-tt:type=3
```

Dependencies

This command is not valid when the EGTT feature is turned on.

Asterisk (*) parameter values are not allowed for this command.

The translation type specified by **type** or **typea** cannot already exist in the database containing the ANSI types. A translation type specified by **typei**, **typen**, or **typen24** cannot already exist in the database containing the ITU types.

The translation name cannot already exist in either the ANSI or ITU database.

If an alias is specified, the translation type must be specified and must already exist in the database for the network type. If the translation name is specified when defining an alias, the name must already be associated with the translation type.

The translated signaling point code must be a full point code (*ni-nc-ncm*).

The translated signaling point code must have been specified previously as a full point code destination, or it must be a member of a previously specified cluster.

The **alias** parameter and the **ndgt** parameter cannot be specified together in the command.

If an alias is specified, the **alias** value cannot already be defined as either a translation type or an alias for the respective (ANSI or ITU) type.

The translation type name must be unique.

The **ndgt** parameter is not valid if the VGTT (variable length GTT) feature is turned on.

Notes

The new translation type is entered into the translation type table along with the translation name and the number of digits used by the translation type.

The **ttn** parameter always refers to a translation type. Aliases do not have translation type names.

Output

```
ent -
t1:loc=1205:t1port=1:encode=ami:t1tsel=internal:external:framing=s
f:ll=100
    rlgncxa03w 04-01-07 11:43:04 EST EAGLE 31.3.0
    ENT-TT: MASP A - COMPLTD
;
```

ent-ttmap

Enter Translation Type Mapping

Use this command to add a mapped SS7 message translation type (TT) for a given gateway linkset name. With this command you can add to the database the identification of the type of allowed global title translation in the SS7 message before and after translation type mapping. For example, you can use this command to add to the database that you want the SS7 message translation type 001 (before TT mapping) mapped to 254 (after TT mapping).

Keyword: ent-ttmap

Related Commands: chg-ttmap, dlt-ttmap, rtrv-ttmap

Command Class: Database Administration

Parameters

:ett= (mandatory)

Translation type before mapping. The identification of the type of global title translation in the SS7 message *before* translation type mapping. This attribute is the decimal representation of the 1-octet binary field used by the SS7 protocol to identify the translation type.

Range: 000-255

:io= (mandatory)

Incoming or outgoing. The system uses this parameter to indicate whether the translation type mapping data provisioned for the gateway linkset is for SS7 messages *received* or *sent* on the linkset.

Range: **i, o**
 i — incoming
 o — outgoing

:lsn= (mandatory)

Linkset name. The unique network identifier for the gateway linkset.

Range: ayyyyyyyyy
 1 alphabetic character followed by 9 alphanumeric characters

:mtt= (mandatory)

Mapped translation type. The identification of the type of global title translation in the SS7 message *after* translation type mapping. This attribute is the decimal representation of the 1-octet binary field used by the SS7 protocol to identify the translation type.

Range: 000-255

Example

```
ent-ttmap:lsn=nc001:io=i:ett=128:mtt=16
```

Dependencies

The linkset must be defined.

The Translation Type Mapping table must not be full for the linkset specified in the **lsn** parameter.

Notes

None

Output

```
ent-ttmap:lsn=nc001:io=i:ett=128:mtt=16
rlghncxa03w 04-02-21 13:09:27 EST  EAGLE 31.3.0
ENT-TTMAP: MASP A - COMPLTD

TTMAP table for nc001 is (2 of 64) 3% full
;
```

ent-user

Enter User

Use this command to add a user to the database. When you first enter the command, the system prompts you for the user's password, which must follow the administered password guidelines. For security reasons, the password is not displayed. After successfully entering a user password, you are prompted to verify it by entering it again.

NOTE: As of Release 40.1, the lnpbas parameter is obsolete.

Keyword: ent-user

Related Commands: act-user, chg-pid, chg-user, dact-user, dlt-user, login, logout, rept-stat-user, rtrv-secu-user, rtrv-user

Command Class: Security Administration

Parameters

:uid= (mandatory)

User ID

Range: *azzzzzzzzzzzzzzz*
 1 alphabetic character followed by up to 15 alphanumeric characters (including asterisks, single quotes, and commas)

:all= (optional)

Specifies whether or not the user ID is assigned all non-configurable command classes (LINK, SA, SYS, PU, DB, DBG, LNP).

Range: **yes, no**

Default: **no**

:cc1= (optional)

Configurable command class name (*ayy*), and an indicator (**-yes** or **-no**) to specify whether the User ID can enter commands assigned to the specified command class.

Range: *ayy*

Specify the parameter value in the format *ayy* **-no** or *ayy* **-yes**.

ayy—Configurable command class name of 1 alphabetic character followed by 2 alphanumeric characters

-no—Indicates that the command class is not allowed.

-yes—Indicates that the command class is allowed.

:cc2= (optional)

Configurable command class name (*ayy*), and an indicator (**-yes** or **-no**) to specify whether the User ID can enter commands assigned to the specified command class.

Range: *ayy*

Specify the parameter value in the format *ayy* **-no** or *ayy* **-yes**.

ayy—Configurable command class name of 1 alphabetic character followed by 2 alphanumeric characters

-no—Indicates that the command class is not allowed.

-yes—Indicates that the command class is allowed.

:cc3= (optional)

Configurable command class name (*ayy*), and an indicator (**-yes** or **-no**) to specify whether the User ID can enter commands assigned to the specified command class.

Range: *configcmdclassname, bool*

configcmdclass—; value

bool—; value **yes, no**

:cc4= (optional)

Configurable command class name (*ayy*), and an indicator (**-yes** or **-no**) to specify whether the User ID can enter commands assigned to the specified command class.

Range: *ayy*

Specify the parameter value in the format *ayy* **-no** or *ayy* **-yes**.

ayy—Configurable command class name of 1 alphabetic character followed by 2 alphanumeric characters

-no—Indicates that the command class is not allowed.

-yes—Indicates that the command class is allowed.

:cc5= (optional)

Configurable command class name (*ayy*), and an indicator (**-yes** or **-no**) to specify whether the User ID can enter commands assigned to the specified command class.

Range: *ayy*

Specify the parameter value in the format *ayy* **-no** or *ayy* **-yes**.

ayy—Configurable command class name of 1 alphabetic character followed by 2 alphanumeric characters

-no—Indicates that the command class is not allowed.

-yes—Indicates that the command class is allowed.

:cc6= (optional)

Configurable command class name (*ayy*), and an indicator (**-yes** or **-no**) to specify whether the User ID can enter commands assigned to the specified command class.

Range: *ayy*

Specify the parameter value in the format *ayy* **-no** or *ayy* **-yes**.

ayy—Configurable command class name of 1 alphabetic character followed by 2 alphanumeric characters

-no—Indicates that the command class is not allowed.

-yes—Indicates that the command class is allowed.

:cc7= (optional)

Configurable command class name (*ayy*), and an indicator (**-yes** or **-no**) to specify whether the User ID can enter commands assigned to the specified command class.

Range: *ayy*

Specify the parameter value in the format *ayy* **-no** or *ayy* **-yes**.

ayy—Configurable command class name of 1 alphabetic character followed by 2 alphanumeric characters

-no—Indicates that the command class is not allowed.

-yes—Indicates that the command class is allowed.

:cc8= (optional)

Configurable command class name (*ayy*), and an indicator (**-yes** or **-no**) to specify whether the User ID can enter commands assigned to the specified command class.

Range: *ayy*

Specify the parameter value in the format *ayy* **-no** or *ayy* **-yes**.

ayy—Configurable command class name of 1 alphabetic character followed by 2 alphanumeric characters

-no—Indicates that the command class is not allowed.

-yes—Indicates that the command class is allowed.

:db= (optional)

Access to all commands in command class Database Administration.

Range: **yes, no**

Default: **no**

:dbg= (optional)

Access to all commands in command class Debug.

Range: **yes, no**

Default: **no**

:link= (optional)

Access to all commands in command class Link Maintenance.

Range: **yes, no**

Default: **no**

:page= (optional)

The maximum age of the password, in days. The STP automatically prompts the user for a new password at login if the user's password is older than the value specified for the **page** parameter.

Range: 0-999 days

Default: The value specified for the **page** parameter on the **chg-secu-dflt** command

:pu= (optional)

Access to all commands in command class Program Update.

Range: yes, no

Default: no

:revoke= (optional)

Revoke the user ID. The system rejects login attempts for a revoked user ID.

Range: yes, no

Default: no

:sa= (optional)

Access to all commands in command class Security Administration.

Range: yes, no

Default: no

:sys= (optional)

Access to all commands in command class System Maintenance.

Range: yes, no

Default: no

:uout= (optional)

User ID aging interval. The number of successive days a user ID can go unused (that is, no successful login) before the system denies login of that user ID.

Range: 0-999

Default: The value specified for the **uout** parameter on the **chg-secu-dflt** command

:lnpbas= (obsolete)

Access to all commands in the command class LNP Basic

Range: yes, no

Default: no

Example

ent-user:uid=john:db=yes

ent-user:uid=john*mayer:db=yes

ent-user:uid=user123:cc5=u21-yes:cc8=u32-yes

Dependencies

Passwords cannot be created or modified from a telnet terminal (terminal IDs 17-40) without the OA&M IP Security Enhancements feature turned on.

All new users are given access to the command class Basic as a default.

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before the **lnpbas** parameter can be specified.

If the **all=yes** parameter is specified, and the LNP feature has not been turned on, then the **lnpbas** parameter value defaults to **no**.

The **revoke=yes** parameter cannot be specified for a user ID with system administration authorization.

The Command Class Management feature must be enabled before a configurable command class name can be specified in the **cc1-cc8** parameters.

The **cc1-cc8** parameter values must have valid default or provisioned configurable command class names. Default names are **u01-u32**.

Notes

To disable user ID aging, specify the **uout=0** parameter.

The *Database Administration Manual - System Management* provides a list of all commands allowed within each command class.

Up to 8 configurable command class name parameters can be specified in one command. Additional commands can be entered to assign user access for more than 8 names. To assign user access for all 32 available configurable command class names, four commands could be entered with 8 names specified in each command.

A password must be entered for the newly-created userID. The system issues a separate prompt for this password and disables character echo at the terminal so that the entered password is not displayed on the screen.

After the password has been entered, the system issues a second prompt, and the password must be entered again. This ensures that no typing mistakes were made on the first entry.

Use the following rules for creating passwords:

- A new password cannot contain more than 12 characters.
- A new password must contain at least the number of characters that is specified in the **minlen** parameter of the **chg-secu-dflt** command.
- A new password must contain at least the number of alphabetic (**alpha** parameter), numeric (**num** parameter), and punctuation (**punc** parameter) characters that is specified in the **chg-secu-dflt** command.
- A new password cannot contain the associated user ID.

Output

```
ent-user:uid=john*mayer:db=yes
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
ENT-USER: MASP A - COMPLTD
;
```

ent-vendid

Enter Vendor ID

Use this command to enter elements into the Vendor ID list, for the GSM MAP SRI Redirect to Serving HLR (also called GSM MAP SRI Redirect) feature. Each entry is identified by the Vendor ID and the Vendor number.

The Vendor ID length (**vendidlen** parameter) must be entered first, before the command is entered the second time to enter the Vendor ID and Vendor Number.

Keyword: ent-vendid

Related Commands: dlt-vendid, rtrv-vendid

Command Class: Database Administration

Parameters

:vendid= (optional)

Vendor ID

Range: 1-15 digits

:vendidlen= (optional)

Vendor ID Length. All Vendor IDs defined for the GSM MAP SRI Redirect for Serving HLR feature must contain this number of digits.

Range: 0-15

:vendnum= (optional)

Vendor Number. The Vendor Number is used as a reference to the prefix for the GSM MAP SRI Redirect for Serving HLR feature.

Range: 1-3

1—Corresponds to the prefix defined with prefix number 1 (see the **chg-prefix** command).

2—Corresponds to the prefix defined with prefix number 2 (see the **chg-prefix** command).

3—Corresponds to the prefix defined with prefix number 3 (see the **chg-prefix** command).

:vendtype= (optional)

Vendor Type. The Vendor Type is used with the GSM MAP SRI Redirect for Serving HLR feature to allow multiple networks for the same equipment vendor.

Range: 1-2

Example

```
ent-vendidvend: len=6
```

```
ent-vendid:vendid=886933:vendnum=1:vendtype=1
```

Dependencies

The value **none** cannot be specified for the **vendid** parameter.

The GSM MAP SRI Redirect feature must be enabled before this command can be entered.

The VENDID table can contain a maximum of 200 entries.

The specified ID entry cannot already exist in the VENDID table.

All VENDID table entries must have the number of digits defined by the **vendidlen** parameter value.

The prefix with the same prefix number as the specified Vendor Number must already be provisioned for the GSM MAP SRI Redirect feature.

The Vendor ID length cannot be changed unless the VENDID table is empty. All Vendor IDs must be deleted from the table before a different Vendor ID length can be entered.

The Vendor ID length must be entered before any Vendor IDs can be defined.

The **vendidlen** parameter cannot be specified in the same command with the **vendid**, **vendidlen**, and **vendtype** parameters. Either the **vendidlen** parameter, or the **vendid**, **vendidlen**, and **vendtype** parameters can be specified in one command.

Notes

None.

Output

The Vendor ID length must be entered first, before any Vendor IDs can be entered.

```
ent-vendid:vendidlen=6
  rlghncxa03w 04-10-07 11:11:28 EST  EAGLE 31.11.0
  ENT-VENDID: MASP A - COMPLTD
;

ent-vendid:venid=886933:vendnum=1:vendtype=1
  rlghncxa03w 04-10-07 11:11:28 EST  EAGLE 31.11.0
  VENDID table is (6 of 200) 3% full
  ENT-VENDID: MASP A - COMPLTD
;
```

ent-vflx-cd

Enter VFLEX Call Decision Entry

Use this command to provision the call decision criteria that is used to create a voice mail routing number. This command creates a new entry in the V-Flex Call Decision Table.

NOTE: The V-Flex feature must be enabled before this command can be entered.

Keyword: ent-vflx-cd

Related Commands: chg-vflx-cd, dlt-vflx-cd, rtrv-vflx-cd

Command Class: Database Administration

Parameters

:bcap= (mandatory)

This parameter specifies the INAP/CAP bearer capabilities for the call.

The INAP/CAP bearer capabilities are used to determine the type of mail that is used by the call, such as voice, video, multimedia, etc.

Range: 0-31, none

none—BCAP is not present in the incoming MSU.

:cdn= (mandatory)

Call decision name. This parameter specifies an entry in the call decision table.

Range: ayyy

1 alphabetic character followed by 3 alphanumeric characters

:dnstat= (mandatory)

Dialed number status. This parameter specifies whether the MSISDN is found in the EPAP RTDB.

Range: fnd, nfnd, *

fnd—DN found in RTDB

nfnd—DN not found in RTDB

*—It does not matter whether the DN is found in RTDB

:rnidx= (mandatory)

Routing number index. This parameter specifies the index associated with the generated voice mail routing number.

Range: 0-9

:vmdig= (mandatory)

Voice mail number or voice mail prefix digits. This parameter specifies a voice mail number or voice mail digits for the call decision entry.

If the call is redirected (the **rdi=redir** parameter is specified), then the value specified for the **vmdig** parameter represents a voice mail number. If the call is not redirected (the **rdi=dir** parameter is specified), then the value specified for the **vmdig** parameter represents a set of voice mail digits.

Range: 1-15 digits
Valid digits are **0-9, A-F, a-f**.

:rdi= (optional)

Redirection indicator. This parameter specifies whether the call is redirected.

Range: **dir, redir**
dir — call is not redirected
redir — call is redirected

Default: **dir**

Example

```
ent-vflx-  
cd:dnstat=fnd:rdi=redir:bcap=31:vmDIG=abcdef123456abc:rnidx=0:cdn  
=cdn1
```

Dependencies

The V-Flex feature must be enabled before this command can be entered.

The value specified for the **cdn** parameter cannot be a reserved word, such as **none**.

The value specified for the **cdn** parameter cannot already exist in the Call Decision table.

An entry with the specified **dnstat**, **rdi**, **bcap** and **vmDIG** parameters cannot already exist in the Call Decision table.

The value specified for the **vmDIG** parameter cannot differ from a value that already exists in the Call Decision table by only the value of the **dnstat** parameter. The values specified for the **rdi** and **bcap** parameters must differ as well.

The maximum number of 25 entries cannot already be provisioned for a given **rdi**, **dnstat**, and **bcap**.

Output

```
ent-vflx-  
cd:dnstat=fnd:rdi=redir:bcap=31:vmDIG=abcdef123456abc:rnidx=0:cdn  
=cdn1  
rlghncxa03w 08-05-07 11:11:28 EST EAGLE 39.0.0  
ENT-VFLX-CD: MASP A - COMPLTD  
;  
ent-vflx-  
cd:dnstat=nfnd:bcap=none:vmDIG=dadbeefeed:rnidx=9:cdn=cdn2  
rlghncxa03w 08-05-07 11:11:28 EST EAGLE 39.0.0  
ENT-VFLX-CD: MASP A - COMPLTD  
;
```

ent-vflx-rn

Enter VFLEX Routing Number

Use this command to associate a routing number name to a set of voice mail routing numbers. This command creates an entry in the Routing Number table.

NOTE: The V-Flex feature must be enabled before this command can be entered.

Keyword: ent-vflx-rn

Related Commands: chg-vflx-rn, dlt-vflx-rn, rtrv-vflx-rn

Command Class: Database Administration

Parameters**:rn=** (mandatory)

Routing number. This parameter specifies the voice mail routing number.

Range: 1-15 digitsValid digits are **0-9, A-F, a-f**.**:rnname=** (mandatory)

Routing number name. This parameter specifies the name associated with the voice mail routing number.

Range: *ayyyyyyy*

1 alphabetic character followed by 7 alphanumeric characters.

Example**ent-vflx-rn:rnname=rn01:rn=123ABCDF012****Dependencies**

The V-Flex feature must be enabled before this command can be specified.

The Routing Number table cannot contain more than 10,000 entries.

The value specified for the **rnname** parameter cannot already exist in the database.The value specified for the **rn** parameter cannot already exist in the database.The value specified for the **rnname** parameter cannot be a reserved word, such as **none**.**Output****ent-vflx-rn:rnname=rn01:rn=1234ABCDF56**

rlghncxa03w 08-05-07 11:11:28 EST EAGLE 39.0.0

ENT-VFLX-RN: MASP A - COMPLTD

;

ent-vflx-vmsid**Enter VFLEX VMS ID Entry**

Use this command to provision a voice mail server ID and associate up to 10 routing number names with the ID. This command creates an entry in the VMSID table.

NOTE: The V-Flex feature must be enabled before this command can be entered.**Keyword:** ent-vflx-vmsid**Related Commands:** chg-vflx-vmsid, dlt-vflx-vmsid, rtrv-vflx-vmsid**Command Class:** Database Administration**Parameters****:id=** (mandatory)

This parameter specifies the ID of the voice mail server.

Range: 1-15 digits, **dflt**Valid digits are **0-9, A-F, a-f**.**dflt**—a set of routing numbers that is used when a query is received with an invalid MSISDN or an MSISDN that is not found in the RTDB.**:idx0=** (optional)

Index 0. This parameter specifies the routing number name for index 0.

Range: *ayyyyyyy*

1 alphabetic character followed by up to 7 alphanumeric characters

:idx1= (optional)

Index 1. This parameter specifies the routing number name for index 1.

Range: *ayyyyyyy*

1 alphabetic character followed by up to 7 alphanumeric characters

:idx2= (optional)

Index 2. This parameter specifies the routing number name for index 2.

Range: *ayyyyyyy*

1 alphabetic character followed by upto 7 alphanumeric characters

:idx3= (optional)

Index 3. This parameter specifies the routing number name for index 3.

Range: *ayyyyyyy*

1 alphabetic character followed by up to 7 alphanumeric characters

:idx4= (optional)

Index 4. This parameter specifies the routing number name for index 4.

Range: *ayyyyyyy*

1 alphabetic character followed by up to 7 alphanumeric characters

:idx5= (optional)

Index 5. This parameter specifies the routing number name for index 5.

Range: *ayyyyyyy*

1 alphabetic character followed by up to 7 alphanumeric characters

:idx6= (optional)

Index 6. This parameter specifies the routing number name for index 6.

Range: *ayyyyyyy*

1 alphabetic character followed by up to 7 alphanumeric characters

:idx7= (optional)

Index 7. This parameter specifies the routing number name for index 7.

Range: *ayyyyyyy*

1 alphabetic character followed by up to 7 alphanumeric characters

:idx8= (optional)

Index 8. This parameter specifies the routing number name for index 8.

Range: *ayyyyyyy*

1 alphabetic character followed by up to 7 alphanumeric characters

:idx9= (optional)

Index 9. This parameter specifies the routing number name for index 9.

Range: *ayyyyyyy*

1 alphabetic character followed by up to 7 alphanumeric characters

Example

The following command provisions a VMS ID and associates a routing number name with index 0.

ent-vflx-vmsid:id=123456abcdef123:idx0=RN45

The following command provisions a VMS ID and associates routing number names with index 0 and index 5.

ent-vflx-vmsid:id=DADBEEFEED:idx0=rn15:idx5=rn30

Dependencies

The V-Flex feature must be enabled before this command can be entered.

The values specified for the **idx*** parameters must already exist in the Routing Number table.

The value specified for the **id** parameter cannot already exist in the VMSID table.

The **idx*=none** parameter cannot be specified.

The VMSID table contains a maximum of 1000 entries.

The value specified for the **rnname** parameter must already exist in the Routing Number table.

Output

```
ent-vflx-vmsid:id=123456abcdef123:idx0=rn45
rlghncxa03w 08-05-07 11:11:28 EST EAGLE 39.0.0
ENT-VFLX-VMSID: MASP A - COMPLTD
;
ent-vflx-vmsid:id=DADBEEFEED:idx0=rn15:idx5=rn30
rlghncxa03w 08-05-07 11:11:28 EST EAGLE 39.0.0
ENT-VFLX-VMSID: MASP A - COMPLTD
;
```

ent-x25-dstn

Enter X.25 Destination

Use this command to associate an X.25 network address with an existing SS7 point code in the routing table, and optionally, a subsystem within that point code. If the node is actually in the X.25 domain, the X.25 address is a real network address and the point code is a dummy point code. If the node is in the SS7 domain, the point code is a real SS7 point code and the X.25 address is a dummy address.

Keyword: ent-x25-dstn

Related Commands: chg-x25-dstn, dlt-x25-dstn, rtrv-x25-dstn

Command Class: Database Administration

Parameters

:dpc= (mandatory)

This parameter is the real SS7 point code assigned to a real SS7 node or the dummy point code for an X.25 destination entity. The value for this parameter is a point code with subfields network indicator-network cluster-network cluster member (*ni-nc-ncm*).

Synonym: dpca

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001–005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006–255.

The point code 000-000-000 is not a valid point code.

:xaddr= (mandatory)

The X.25 network address of the X.25 destination entity or the SS7 node.

Range: 1-15 digits

:ssn= (optional)

The subsystem number of the destination that is assigned to the X.25 address or the SS7 address.

Range: 1-255

Default: 5

Example

```
ent-x25-dstn:xaddr=220525586456772:dpc=133-013-001:ssn=123
ent-x25-dstn:xaddr=255864567:dpc=033-001-013
```

Dependencies

Each X.25 address must have at least four digits.
 The DPC must exist in the destination table.
 The X.25 SS7 ANSI destination point code must be a full point code (*ni-nc-ncm*).
 The X.25 address cannot exist in X.25 destination table.
 The maximum number of X.25 destinations is 1024.

Notes

None

Output

```
ent-x25-dstn:xaddr=220525586456772:dpc=133-013-001:ssn=123
rlghncxa03w 04-02-10 11:43:04 EST EAGLE 31.3.0
X.25 DSTN TABLE 45 % FULL
ENT-X25-DSTN: MASP A - COMPLTD
;
```

ent-x25-rte**Enter X.25 Route**

Use this command to define the routing parameters needed by the gateway portion of the LIMs with the LIMs with the **ss7gx25** application for establishing a virtual circuit that is permanently maintained by the system STP.

Keyword: ent-x25-rte

Related Commands: chg-x25-rte, dlt-x25-rte, rtrv-x25-rte

Command Class: Database Administration

Parameters

:saddr= (mandatory)

The alias X.25 address assigned to the SS7 destination entity on the SS7 side of the circuit.

Range: 1-15 digits

:type= (mandatory)

The type of X.25 connection that the link is expected to maintain.

Range: pvc, svca, svcr

pvc — Permanent virtual circuit

svca — automatic virtual circuit

svcr — remote virtual circuit

:xaddr= (mandatory)

The X.25 address assigned to the X.25 destination entity on the X.25 side of the circuit.

Range: 1-15 digits

:lc= (optional)

The number of the logical channel on the X.25 signaling link to which the PVC connection is assigned.

This parameter is mandatory if the **type=pvc** parameter is specified. If the **type=svca** or

type=svcr parameters are specified, the logical channel number is arbitrary and cannot be specified.

Range: 1-255

Default: The logical channel is not given.

:lc2nm= (optional)

Invokes SS7 MTP network management for failures and recoveries of logical channels.

Range: **yes, no**

Default: **yes**—if **rt=xpc** is specified

no—if **rt=pc** is specified

no—if **rt** is not specified

:loc= (optional)

The card location containing the X.25 signaling link that will maintain the connection. For an automatic virtual circuit, this link is the link on which the system STP initially attempts the connection. However, if this attempt fails, the connection may be established by the X.25 destination entity on any other link in this link's linkset.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

Default: The card location is not given

:port= (optional)

The port on the card containing the X.25 signaling link.

Range: **a**

Default: The port is not given

:rt= (optional)

The type of routing to perform for messages originating in the SS7 domain and destined for the X.25 domain. Two types of routing are available: (1) Route on X.25 destination point code (XPC) and (2) Route using X.25 origination and destination point code combinations (PC).

Range: **xpc, pc**

Default: **pc**

Example

ent -x25-

rte:xaddr=225255:saddr=133131:type=pvc:loc=1201:port=a:lc=3

ent -x25-rte:xaddr=225255:saddr=133132:type=svca:loc=1201:port=a

ent -x25-rte:xaddr=225255:saddr=133132:type=svcr

ent -x25-rte:xaddr=225255:saddr=133132:type=svcr:rt=xpc:lc2nm=yes

Dependencies

Each X.25 address must have at least four digits.

The **limds0**, **limdscs**, **limocu** and **limv35** card types are the only valid card types for this command. These card types must be running the **ss7gx25** GPL type.

The shelf and card must be equipped.

The logical channel number cannot be specified if the connection type is an automatic virtual circuit or a remote virtual circuit (**type=svca** or **type=svcr**).

The logical channel number must be specified if the connection type is PVC (**type=pvc**).

If **lc2nm=yes** is specified, **rt=xpc** must be specified.

If the X.25 domain destination is an adjacent entity, **lc2nm=no** must be specified.

The **loc** and **port** parameters cannot be specified if the connection type is a remote switched virtual circuit (**type=svcr**). The far end initiates a remote switched virtual circuit and sends the system the location and port information.

The card location (**loc**) must be specified if the connection type is a permanent virtual circuit or an automatic virtual circuit (**type=pvc** or **type=svca**).

Each X.25 address must exist in X.25 destination table.

The X.25 address must be assigned to a destination in the X.25 domain.

The SS7 address must be assigned to a destination in the SS7 domain.

The combination of the two X.25 addresses must be unique in the X.25 route table.

The combination of point code/SSNs assigned to the two X.25 addresses must be unique in the X.25 route table.

The maximum number of X.25 routes in a system is 1024.

The point codes assigned to each of the X.25 destinations must also be assigned to routes.

The signaling link must be assigned to a LIM with the **ss7gx25** application.

The signaling link assigned to the X.25 route must be in the database and must be assigned to a linkset. The linkset must be assigned to a route associated with an X.25 destination and must contain an APC in the X.25 domain. This can be verified by entering the following commands:

- **rtrv-slk**—Displays the signaling links
- **rtrv-ls**—Displays the linksets
- **rtrv-rte**—Displays the routes
- **rtrv-x25-dstn**—Displays the X.25 destinations
- **rtrv-dstn**—Displays the destination point codes.

The logical channel number cannot be greater than the maximum number of permanent virtual circuits allowed for the signaling link. For example, if the total number of permanent virtual circuits allowed for the signaling link is 15, the logical channel number for this signaling link cannot be greater than 15.

The logical channel of the signaling link cannot already be assigned to an X.25 route.

The number of permanent virtual circuits cannot exceed the maximum number of permanent virtual circuits defined for the signaling link.

The number of automatic virtual circuits cannot exceed the maximum number of switched virtual circuits defined for the signaling link.

If **rt=xpc** is specified, the **xaddr** parameter's alias SS7 point code must be unique in the X.25 route table.

Notes

The connection can be one of three types, a permanent virtual circuit, an automatic virtual circuit, or a remote virtual circuit.

Permanent virtual circuits are permanent X.25 virtual connections between two signaling points established on one of the logical channels of an X.25 signaling link. This connection is setup by the network, therefore no setup is required by the system to establish a permanent virtual circuit connection.

Automatic virtual circuits are essentially the same as permanent virtual circuits, except that the connection must be established by either the system or the X.25 destination entity.

Remote virtual circuits are also essentially the same as automatic virtual circuits, except that the connection can be established only by the X.25 destination entity.

All LIMs with the **ss7gx25** application share this information. Even though these connections apply to only one card, they are used by all cards.

Output

```
ent-x25-
rte:xaddr=225255:saddr=133131:type=pvc:loc=1201:port=a:lc=3
  rlgncxa03w 04-02-10 11:43:04 EST EAGLE 31.3.0
  ENT-X25-RTE: MASP A - X.25 Route table 45% full
  ENT-X25-RTE: MASP A - COMPLTD
;
```

flash-card

Flash-Card

Use this command to load all flash images (GPL) supported by a specified card. This command performs the same functions as the **init-flash** and the **act-flash** commands.

Keyword: flash-card

Related Commands: act-flash, init-flash

Command Class: System Maintenance

Parameters

:code= (mandatory)

The GPL type to be loaded.

Range: appr, trial

appr — Approved GPL

trial — Trial GPL

:loc= (mandatory)

Card address. The location of the card as stenciled on the shelf of the system.

Range: 1101-1112, (1113 and 1115 OAM), 1201-1218, 1301-1318, 2101-2118, 2201-2218, 2301-2318, 3101-3118, 3201-3218, 3301-3318, 4101-4118, 4201-4218, 4301-4318, 5101-5118, 5201-5218, 5301-5318, 6101-6118

:force= (optional)

This parameter is used to force the command to work on an IS-NR card. Links provisioned on the card are inhibited during command execution. The card and inhibited links are restored to their previous state when the command is completed.

Range: yes, no

Default: no

Example

```
flash-card:loc=1105:code=trial
```

```
flash-card:loc=1105:code=appr:force=yes
```

Dependencies

Cards do not have to be provisioned to use the **flash-card** command. However, if the specified card is provisioned and not inhibited, use of the **force** parameter is required.

The specified card locations must be running a flashable software image.

This command cannot be used to load flash images for HMUX or HIPR cards. Use the **init-flash** command.

If the even-numbered TDM (1114,1116) is specified, the flash occurs on the odd-numbered GPSM-II running OAM (1113,1115).

The specified card location cannot be the active MASP (either the active GPSM-II or the active TDM).

No other action command can be in progress when this command is entered.

The card specified in the location parameter must be present and able to communicate over the IMT. The card do not have to be provisioned in the database.

If the card is already running the specified code load, it cannot be loaded by this command.

Notes

The specified card must be present and able to communicate over the IMT.

A card that is already running the specified code load cannot be reflashed using the **force** parameter. The **act-flash** and **init-flash** commands must then be used to reload the same code level.

Output

```

flash-card: loc=1105:code=appr:force=yes
tekelecstp 08-05-11 01:52:11 EST  EAGLE5 39.0.0
Flash Card: Downloading BLBIOS on card 1105.
;
tekelecstp 08-05-11 01:52:11 EST  EAGLE5 39.0.0
Flash Card: Card 1105 download BLBIOS complete.
;
tekelecstp 08-05-11 01:52:11 EST  EAGLE5 39.0.0
Flash Card: Downloading BLDIAG6 on card 1105.
;
tekelecstp 08-05-11 01:52:11 EST  EAGLE5 39.0.0
Flash Card: Card 1105 download BLDIAG6 complete.
;
tekelecstp 08-05-11 01:52:11 EST  EAGLE5 39.0.0
Flash Card: Downloading PLDE1T1 on card 1105.
;
tekelecstp 08-05-11 01:52:11 EST  EAGLE5 39.0.0
Flash Card: Card 1105 download PLDE1T1 complete.
;
tekelecstp 08-05-11 01:52:11 EST  EAGLE5 39.0.0
Flash Card: Downloading IMTPCI on card 1105.
;
tekelecstp 08-05-11 01:52:11 EST  EAGLE5 39.0.0
Flash Card: Card 1105 download IMTPCI complete.
;
tekelecstp 08-05-11 01:52:11 EST  EAGLE5 39.0.0
Flash Card: Downloading BLVXW6 on card 1105.
;
tekelecstp 08-05-11 01:52:11 EST  EAGLE5 39.0.0
Flash Card: Card 1105 download BLVXW6 complete.
;
tekelecstp 08-05-11 01:52:11 EST  EAGLE5 39.0.0
Flash Card: Downloading PLDPMC1 on card 1105.
;
tekelecstp 08-05-11 01:52:11 EST  EAGLE5 39.0.0
Flash Card: Card 1105 download PLDPMC1 complete.
;
tekelecstp 08-05-11 01:52:11 EST  EAGLE5 39.0.0
Flash Card: Activating BLBIOS on card 1105.
;
tekelecstp 08-05-11 01:52:11 EST  EAGLE5 39.0.0
Flash Card: Card 1105 activation BLBIOS complete.
;
tekelecstp 08-05-11 01:52:11 EST  EAGLE5 39.0.0
Flash Card: Activating BLDIAG6 on card 1105.
;
tekelecstp 08-05-11 01:52:11 EST  EAGLE5 39.0.0
Flash Card: Card 1105 activation BLDIAG6 complete.
;
tekelecstp 08-05-11 01:52:11 EST  EAGLE5 39.0.0
Flash Card: Activating PLDE1T1 on card 1105.
;
tekelecstp 08-05-11 01:52:11 EST  EAGLE5 39.0.0
Flash Card: Card 1105 activation PLDE1T1 complete.
;
tekelecstp 08-05-11 01:52:11 EST  EAGLE5 39.0.0
Flash Card: Activating IMTPCI on card 1105.
;
tekelecstp 08-05-11 01:52:11 EST  EAGLE5 39.0.0
Flash Card: Card 1105 activation IMTPCI complete.
;
tekelecstp 08-05-11 01:52:11 EST  EAGLE5 39.0.0
Flash Card: Activating BLVXW6 on card 1105.

```

Commands

format-disk

```
;
tekelecstp 08-05-11 01:52:11 EST EAGLE5 39.0.0
Flash Card: Card 1105 activation BLVXW6 complete.
;
tekelecstp 08-05-11 01:52:11 EST EAGLE5 39.0.0
Flash Card: Activating PLDPMC1 on card 1105.
;
tekelecstp 08-05-11 01:52:11 EST EAGLE5 39.0.0
Flash Card: Card 1105 activation PLDPMC1 complete.
;
tekelecstp 08-05-11 01:52:11 EST EAGLE5 39.0.0
Flash Card: Downloading BLCPLD on card 1105.
;
tekelecstp 08-05-11 01:52:11 EST EAGLE5 39.0.0
Flash Card: Card 1105 download BLCPLD complete.
;
tekelecstp 08-05-11 01:52:11 EST EAGLE5 39.0.0
Flash Card: Activating BLCPLD on card 1105.
;
tekelecstp 08-05-11 01:52:11 EST EAGLE5 39.0.0
Flash Card: Card 1105 activation BLCPLD complete.
;
tekelecstp 08-05-11 01:52:11 EST EAGLE5 39.0.0
Command Completed.
;
tekelecstp 08-05-11 01:52:11 EST EAGLE5 39.0.0
Flash Card: Canceling links on card 1105.
;
tekelecstp 08-05-11 01:52:11 EST EAGLE5 39.0.0
Flash Card: Inhibiting card 1105.
;
tekelecstp 08-05-11 01:52:11 EST EAGLE5 39.0.0
Flash Card: Downloading BPMPL on card 1105.
;
tekelecstp 08-05-11 01:52:11 EST EAGLE5 39.0.0
Flash Card: Card 1105 download BPMPL complete.
;
tekelecstp 08-05-11 01:52:11 EST EAGLE5 39.0.0
Flash Card: Allowing card 1105.
;
tekelecstp 08-05-11 01:52:11 EST EAGLE5 39.0.0
Flash Card: Activating BPMPL on card 1105.
;
tekelecstp 08-05-11 01:52:11 EST EAGLE5 39.0.0
Flash Card: Card 1105 activation BPMPL complete.
;
tekelecstp 08-05-11 01:52:11 EST EAGLE5 39.0.0
Flash Card: Activating links on card 1105.
;
tekelecstp 08-05-11 01:52:11 EST EAGLE5 39.0.0
Command Completed.
;
```

format-disk

Format Disk

Use this command to format and initialize a removable cartridge, removable drive, credit card drive, or standby Terminal Disk Module (TDM).

NOTE: The `format-disk` command leaves the disk unusable until the `chg-db` and `copy-gpl` commands are entered.

Keyword: `format-disk`

Related Commands: `chg-db`, `copy-disk`, `copy-gpl`, `copy-meas`, `disp-disk-dir`, `rept-stat-db`, `rtrv-gpl`

Command Class: System Maintenance

Parameters

:type= (mandatory)

This parameter specifies the type of fixed drive, removable drive, or removable cartridge to format.

Range: **fixed**, **meas**, **system**, **usb**

fixed — The standby fixed disk on the standby TDM

meas — The measurement cartridge

system — The removable system cartridge or drive

usb — The credit card drive

:force= (optional)

This parameter provides some protection against data loss due to reformatting a used system removable cartridge.

Range: **yes**, **no**

Default: **no**

:format= (optional)

This parameter specifies the location of the disk that is being formatted.

Range: **1114**, **1116**, **1117**, **1113**, **1115**

1114 — The TDM

1116 — The TDM

1117 — The removable cartridge drive

1113 — The latched USB port

1115 — The latched USB port

:low= (optional)

This parameter provides control over whether a low-level format will be performed on the target disk. Specifying **low=no** can be used to decrease formatting time.

Range: **yes**, **no**

Default: **yes**

:prtnggrp= (optional)

Partition group. This parameter indicates which disk partition group is to be formatted. Specifying the inactive group is relevant only when **type=fixed** is specified.



CAUTION

CAUTION: Do not enter the `format-disk:prtnggrp=inactive` command unless directed to by Tekelec Technical Services to avoid possible loss of a previously archived software release.

Range: **active**, **inactive**

Default: **active**

Example

`format-disk:type=system`

`format-disk:type=meas:force=yes`

Dependencies

The EOAM GPL version that is running in the active OAM card location must be the same GPL version that is running in the standby OAM card location.

To format a cartridge that already contains system data, the **force=yes** parameter must be specified.

The **force=yes** parameter must be specified if the cartridge to be formatted is recognized as a system removable cartridge. This parameter is optional if the cartridge is not recognized as a system removable cartridge. Only cartridges that have a **dms.cfg** file are recognized as system removable cartridges. A removable cartridge must be inserted and made ready before the **type=meas** or **type=system** parameter can be specified in the command.

Measurements collection must be inhibited during execution of the **format-disk** command. If measurements are not inhibited, **format-disk** cannot be executed.

- Do not enter the **chg-measopts:collect=on** command while the **format-disk** command is in progress. This results in read and write errors, because the standby disk is not accessible.
- Do not enter **format-disk** until the 30 minute measurements processing or the midnight measurements processing has completed, because inhibiting measurements during these periods results in the loss of measurement data for the period being processed.

OAM Measurements collection cannot be in progress when this command is entered. Retry the command after a period of waiting for the measurements collection to complete.

If the **force=yes** parameter is specified, the disk should not require low-level formatting, and the **format=no** parameter should be specified.

The card with the standby OAM must be available when this command is entered.

The standby fixed disk contains security log entries that have not yet been uploaded. Upload the log entries before formatting the disk to avoid loss of log data.

The **low=no** parameter must be specified when the **prtnggrp** parameter is specified.

If the **type=usb** parameter is specified, then a credit card drive must be present in the active MASP.

A value of **1114** or **1116** must be specified for the **loc** parameter, before the **type=fixed** parameter can be specified.

An E5-MCAP card must be installed before the **type=usb** parameter can be specified.

Notes

The **low=no** parameter should be specified when upgrading a spare TDM. The **low=yes** parameter should be specified when there is a suspected hardware problem.

When the **type=meas** parameter is specified, a measurements removable cartridge or removable drive is built.

When the **type=system** parameter is specified, a system removable cartridge, removable drive, or credit card drive is built.

A system removable cartridge or drive can contain only GPLs and the database, not measurement data. After formatting, the cartridge or drive does not contain any data, but can be used as the destination disk of the **copy-gpl** and **chg-db:action=backup:dest=remove** commands. The **copy-gpl** command copies all approved GPLs from the fixed disk on the active TDM to the system removable cartridge or drive, providing a backup copy of the approved GPLs. The **chg-db:action=backup:dest=remove** command copies the database from the current partition of the fixed disk on the active TDM to a system removable cartridge or drive, providing a backup copy of the database.

A measurements removable cartridge or drive can contain only measurement data, not database information and GPLs. After formatting, the cartridge or drive does not contain any data, but can be used as the destination disk of the **copy-meas** command. The **copy-meas** command copies all measurement data from the fixed disk on the active TDM to a measurements removable cartridge or drive for offline processing of the measurement data.

The database audit and GPL audit facilities are automatically disabled during execution of this command. When this command has completed (successful or not), the database and GPL audit facilities are automatically re-enabled.

All commands that affect the database are disallowed for the duration of the command. Attempts to use such commands are rejected, and an error message is displayed explaining that the command has been rejected.

During the upgrade process, files made obsolete by the upgrade process are deleted, freeing up disk space.

The format of magneto-optical removable cartridges allows the cartridges to be used in DOS/Windows environments in addition to being used on the system.

If the **format-disk** command is initiated and the standby OAM initialization is not complete, command processing is delayed. If standby initialization fails, the command proceeds to allow the standby TDM to recover from a previous **format-disk** or **copy-disk** failure. In such cases, the following messages appear:

Standby MASP has not finished initializing - please wait...

Standby MASP initialization timed out - continuing...

The **dms.cfg** file on either the active TDM or a system formatted removable cartridge is used by the **format-disk** command when formatting the target disk. The location of the **dms.cfg** file cannot be specified by the **format-disk** command. The value of the **type** parameter is used to determine the target disk to format and the location of the **dms.cfg** file on which to base the format. Table 5-53 shows the location of the **dms.cfg** file based on the value of the **type** parameter for the **format-disk** command.

Table 5-53. DMS.CFG File Location for format-disk Command

Value of the type Parameter	Target Disk (Card Location)	Location of the DMS.CFG File
fixed	Standby TDM (1114 or 1116)	Removable Cartridge Drive (1117) Latched USB Port (1113 or 1115)
system	Removable Cartridge Drive (1117) Latched USB Port (1113 or 1115)	Active TDM (1114 or 1116)
meas	Removable Cartridge Drive (1117) Latched USB Port (1113 or 1115)	Active TDM (1114 or 1116)

The **format-disk** command can create a maximum disk partition size of 2047 Mbytes, based on a 16-bit cluster size. A cluster is composed of 64 512-Kilobyte sectors. The physical capacity of the disk being formatted determines the formatted size of the disk and the number of partitions created on the disk.

Table 5-54 shows the format capacities of each type of disk used on the system and the number of partitions created on each disk.

Table 5-54. Disk Format Capacity

Target Disk Type	Disk Location	Target Capacity	Number of Partitions	Formatted Size of the Partition
Magneto-Optical Removable Cartridge	1117	1096 Mbytes*	1	1024 Mbytes
Latched USB Port or Credit Card USB Port	1113 or 1115	2 Gigabytes	1	1.9 GB
TDM	1114 or 1116	540 Mbytes	1	507 Mbytes
TDM	1114 or 1116	2 Gigabytes	1	2014 Mbytes
TDM	1114 or 1116	4 Gigabytes	2	2047 Mbytes
* The magneto-optical removable cartridge is a double-sided cartridge that contains 2.3 gigabytes of data, but only one side of the disk can be formatted and used when it is inserted into the removable cartridge drive. The target capacity given for the magneto-optical removable cartridge is for one side of the disk in the cartridge and is approximately one half of the total capacity of the magneto-optical removable cartridge.				

Output**format-disk:type=system**

```

rlghncxa03w 04-01-07 00:57:31 EST  EAGLE 31.3.0
Format-disk of system removable cartridge started.

rlghncxa03w 04-01-07 00:57:31 EST  EAGLE 31.3.0
Format-disk (removable cartridge) format in progress.

rlghncxa03w 04-01-07 00:57:31 EST  EAGLE 31.3.0
Format-disk (removable cartridge) format in progress.

rlghncxa03w 04-01-07 00:57:31 EST  EAGLE 31.3.0
Format-disk (removable cartridge) format is complete.

rlghncxa03w 04-01-07 00:57:31 EST  EAGLE 31.3.0
Format-disk of system removable cartridge completed.
Measurements collection may be turned on now if desired.
;

```

format-disk:type=fixed:low=no:force=yes

```

rlghncxa03w 04-01-07 00:57:31 EST  EAGLE 31.3.0
Format-disk of standby fixed disk started.
Extended processing required, please wait.
;

rlghncxa03w 04-01-07 00:57:31 EST  EAGLE 31.3.0
Format-disk (fixed) format in progress.

rlghncxa03w 04-01-07 00:57:31 EST  EAGLE 31.3.0
Format-disk (fixed) format is complete.

rlghncxa03w 04-01-07 00:57:31 EST  EAGLE 31.3.0
Format-disk of standby fixed disk completed.
Measurements collection may be turned on now if desired.
;

```

inh-alm**Inhibit Alarm Reporting**

Use this command to inhibit the reporting of alarms for the given device. Inhibited alarms will not generate unsolicited output or cause alarm indicators to be turned on. All **rept-stat-xxx** commands continue to display the alarm with an indication that the device has its alarms inhibited.

The frame alarm LEDs are off for the inhibited alarm. This command does not affect the alarm counts on the VT320 banner. The fourth box on the right of the VT320 Control Area indicates the number of devices in the system with inhibited alarms.

Keyword: inh-alm

Related Commands: rept-stat-alm, rept-stat-card, rept-stat-cdt, rept-stat-dlk, rept-stat-dstn, rept-stat-ls,, rept-stat-rte, rept-stat-rtx, rept-stat-seas, rept-stat-slk, rept-stat-sys, rept-stat-trbl, rept-stat-trm, rtrv-log, unhb-alm

Command Class: System Maintenance

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:dev= (mandatory)

Device. This parameter specifies the device where the reporting of alarms is to be inhibited.

Range: **applsock, as, card, cdt, clock, dlk, e1port, ls, lsmsconn, route, seasx25, slk, t1port, trm, rtx, enet**
applsock— IP gateway application socket
as— IP gateway application Application Server
card— Cards in the database
cdt— Customer defined troubles
clock— System clock
dlk— TCP/IP data links
e1port— E1 port on E1/T1 MIM or HC MIM cards
ls— Linksets
lsmsconn— Communication link between the LSMS and the EMS
route— Route
seasx25— The SEAS X.25 links
slk— Signaling links
t1port— T1 port on E1/T1 MIM or HC MIM cards
trm— Terminals
rtx— Exception Route
enet— Ethernet

:asname= (optional)

Gateway Application Server name. When used with the **dev=as** parameter, this parameter can be used to inhibit alarms for the named Application Server.

Range: *aaaaaaaaaaaaaa*
 Up to 15 alphanumeric characters; the first character must be a letter.

:cic= (optional)

Starting Circuit Identification Code. This parameter is used with the **ecic** parameter to define the CIC range that is used as an exception routing criterion for the specified exception route.

Range: **0-16383**

:dpc= (optional)

ANSI destination point code with subfields network indicator-network cluster-network cluster member (*ni-nc-ncm*). The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: **dpca**

Range: **p-, 000-255, ***

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

The asterisk value (*) is not valid for the *ni* subfield.

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001–005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006–255**.

The point code **000-000-000** is not a valid point code.

:dpc/dpca/dpci/dpcn/dpcn24= (optional)

Destination Point Code

:dpci= (optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:dpcn= (optional)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:dpcn24= (optional)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point*. The *prefix* subfield indicates a private point code.

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:dur= (optional)

Duration. The period for which the alarms are inhibited. If the **dur=temp** parameter is specified, the clearing of the event that caused an alarm also clears the alarm inhibit, and the alarms become uninhibited on the device.

Range: **perm, temp, timed**

perm — A permanent inhibition of an alarm.

temp — A temporary inhibition of an alarm.

timed — An inhibition of an alarm for a specified duration.

Default: **perm**

:e1port= (optional)

Port ID. The E1 port on the specified E1 card.

The **e1port** parameter is mandatory if the **dev=e1port** parameter is specified.

Range: 1-8

Ports 3 - 8 can be specified only for HC-MIM cards and E5-E1T1 cards.

:ecic= (optional)

Ending Circuit Identification Code. This parameter, together with the **cic** parameter, defines the CIC range that is used as exception routing criteria for the specified exception route.

Range: 0-16383

:edate= (optional)

Expiry date. The date on which a timed alarm inhibit expires, at the time specified in the **etime** parameter value.

The **edate** parameter is valid and required when the **dur=timed** parameter is specified.

Range: 101-991231

Specify the date in the format of *year*, followed by *month*, followed by *day* (*yymmdd*).

:etime= (optional)

Expiry time. The time at which a timed alarm inhibit expires, on the date specified in the **edate** parameter value.

The **etime** parameter is valid and required when the **dur=timed** parameter is specified.

Range: 0-2359

Specify the time in the format of *hour* followed by *minute* (*hhmm*).

:force= (optional)

Allows critical alarms to be inhibited on a device.

The **force** parameter is mandatory if the **lvl=crit** parameter is specified.

The **criticalminh** STP option must be turned on before the **force** parameter can be specified.

Range: yes, no

Default: no

:id= (optional)

Identification number of the customer-defined trouble (5 - 16). Customer-defined troubles 1 - 4 are generated critical alarms and cannot be specified as values for the **id** parameter.

Range: 5-16

:ilsn= (optional)

Incoming Link Set Name. This parameter contains the name of the originating linkset. The parameter value is used as part of the exception routing criteria for the specified exception route.

Range: ayyyyyyy

1 alphabetic character followed by up to 9 alphanumeric characters

:link= (optional)

Signaling link on the card specified in the **loc** parameter.

Synonym: port

Range: a, b, a1-a31, b1-b31

a, b—For **dev=dlk**, **dev=slk** for a two-port LIM

a1, a2, b1, b2—For **dev=ndclk/seasx25/lmsconn**

a, b, a1, b1, a2, b2, a3, b3—For **dev=slk** for a multi-port LIM

a, b, a1-a31, b1-b31—For **dev=slk** for an HC MIM

:loc= (optional)

The card location as stenciled on the shelf of the system.

- Range:** 1101-1113, 1115, 1201-1218, 1301-1318, 2101-2118, 2201-2218, 2301-2318, 3101-3118, 3201-3218, 3301-3318, 4101-4118, 4201-4218, 4301-4318, 5101-5118, 5201-5218, 5301-5318, 6101-6118
- :lsn=** (optional)
Linkset name. The name of the linkset for which the report information is to be displayed.
- Range:** ayyyyyyyy
1 alphabetic character followed by up to 9 alphanumeric characters.
- :lvl=** (optional)
The alarm severity level (critical, major, or minor).
- Range:** crit, majr, minr
Default: majr
- :opc=** (optional)
ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).
- Synonym:** opca
Range: 000-255
Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).
When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.
When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001-005.
When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006-255.
The point code 000-000-000 is not a valid point code.
- :opc/opca/opci/opcn/opcn24=** (optional)
Origination point code.
- :opci=** (optional)
ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).
- Range:** s-, p-, ps-, 0-255
Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).
prefix—s-, p-, ps-
zone—0-7
area—000-255
id—0-7
The point code 0-000-0 is not a valid point code.
- :opcn=** (optional)
ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).
- Range:** s-, p-, ps-, 0-16383, aa-zz
Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**, **p-**, **ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:opc24= (optional)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*. The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range: **p-**, **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:si= (optional)

Service Indicator. This parameter is used as the exception routing criterion for the specified exception route.

Range: **0-15**

:sname= (optional)

Gateway application socket. When used with the **dev=applsock** parameter, this parameter can be used to inhibit alarms for the named application socket.

Range: *aaaaaaaaaaaaa*

1 to 15 alphanumeric characters.

:t1port= (optional)

Port ID. This parameter is mandatory if the **dev=t1port** parameter is specified.

Range: **1-8**

Ports **3 - 8** can be specified only for HC MIM cards.

:trm= (optional)

Terminal ID. This parameter specifies the ID number of the terminal whose characteristics are to be retrieved and displayed.

Range: **1-40**

Example

inh-alm:dev=route:dpc=1-1-1:dur=perm:lvl=crit:force=yes

inh-alm:dev=rtx:dpc=1-101-1:opc=4-4-4

inh-

alm:dev=route:dpc=1-1-1:dur=timed:lvl=crit:edate=050515:etime=2300:force=yes

inh-alm:dev=enet:loc=1201:port=a

inh-alm:dev=enet:loc=1101:port=a:dur=temp:lvl=minr

Dependencies

This command is not allowed in upgrade mode.

Table 5-55 shows the valid parameter combinations for the **inh-alm** command. The **dur** and **lvl** parameters are valid with all **dev** parameter values.

Table 5-55. Parameter Combinations for the **inh-alm** command

Value (:dev)	a	a	c	c	d	e	l	l	n	n	r	s	s	t	t	e	r
Device Parameter	p	s	a	d	l	l	s	s	d	d	o	e	l	l	r	n	s
	p	r	t	o	k	p	m	c	c	u	a	k	p	m	e		
	l	d	c	o	s	l	q	t	s	o	r	t					
	s		k	r	c	k	3	e	x	2							
	o			t						5							
	c																
	k						n										
No Parameters				x					x								
:asname	x																
:dpc/dpca/dpci/dpcn/dpcn24										x							
:id			x														
:loc		x			x	x						x	x		x		
:lsn							x										
:e1port=1-8						x											
:link=a, b					x							x			x		
:link=a, b, a1, a2, b1, b2, a3, a3												x					
:link=a1, a2, b1, b2								x	x		x						
:sname	x																
:t1port=1-8													x				
:trm														x			
:rsn																	x

No other action command can be in progress when this command is entered.

The linkset specified by the **lsn** parameter must be equipped in the database.

This command will not execute while the signaling link is running either a Link Fault Sectionalization test or a Loopback test. An AST of LFS or LPBK must be cleared before signaling link alarms can be inhibited.

This command cannot be used to permanently inhibit XLIST point codes.

Before critical alarms can be inhibited, the STP option **critalminh** must be enabled. The **chg-stpopts:critalminh=yes** command enables this option.

Alarms cannot already be inhibited for the specified device.

When the **lvl=crit** parameter is specified, the **force=yes** parameter must be specified.

When the **dev=card** parameter is specified, the **loc** parameter must be specified.

When the **dev=dlk** parameter is specified, the **loc** parameter must be specified.

When the **dev=slk** parameter is specified, the **loc** parameter and the **link** parameter must be specified.

When the **dev=e1port** parameter is specified, the **loc** parameter and the **e1port** parameter must be specified.

When the **dev=t1port** parameter is specified, the **loc** parameter and the **t1port** parameter must be specified.

When the **dev=ls** parameter is specified, the **lsn** parameter must be specified.

When the **dev=trm** parameter is specified, the **trm** parameter must be specified.

When the **dev=cdt** parameter is specified, the **id** parameter must be specified.

When the **dev=seasx25** parameter is specified, the **link** parameter must be specified.

When the **dev=lsmsconn** parameter is specified, the **link** parameter must be specified.

When the **dev=route** parameter is specified, a **dpc/dpca/dpci/dpcn/dpcn24** parameter must be specified.

When the **dev=applsock** parameter is specified, the **sname** parameter must be specified.

When the **dev=as** parameter is specified, the **asname** parameter must be specified.

If the **sname** parameter is specified, the socket name must exist in the IPAPSOCK table.

If a point code parameter is specified, the point code must exist in the Routing table.

If the **dev=slk** parameter or **dev=dlk** parameter is specified, the specified **link** must exist in the database.

If the **dpcn** parameter is specified, its format must match the format that was assigned with the **chg-stpopts:npfmti** parameter.

The card location that is specified in the **loc** parameter must be equipped.

The specified device type must be supported by the card in the specified card location.

The Origin-Based MTP Routing feature must be on before the **dev=rtx** parameter can be specified.

Permanent alarm inhibit is not allowed on the cluster PC because either the cluster or a member PC of the cluster is already alarm inhibited.

When the **dur=timed** parameter is specified, the **edate** and **etime** parameters must be specified.

When a **dur** parameter value other than **timed** is specified, the **edate** and **etime** parameters cannot be specified.

The **edate** parameter value must be a date equal to or later than the current system date. If the current system date is specified, then the **etime** parameter value must be a time later than the current system time. If a date later than the current system date is specified, then the **etime** parameter value can be any valid time in the format *hhmm*.

The **inh-alm** command cannot be used to change the level of inhibition on a device.

If the **dev=enet** parameter is specified, then the **loc** parameter and the **port** parameter must be specified.

The card must be an IPLIMx or IPGWx card.

The value specified for the **port** parameter is out of range.

When the **dev=ndclk** parameter is specified, the **link** parameter must be specified.

The **link** parameter must be valid for the selected device type.

Notes

If critical alarms are inhibited, all alarms (critical, major, and minor) are disabled. Likewise, if major alarms are inhibited, both major and minor alarms are disabled.

The **dur** parameter allows alarms to be inhibited on a temporary basis. If a device has its alarms temporarily disabled, the device's alarms are automatically enabled after the alarm clears.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (**s-**) and the private and spare point code subtype prefix (**ps-**). All of the point code types support the private (internal) point code subtype prefix (**p-**).

Output

```

inh-alm:dev=route:dpc=1-1-1:dur=perm:lvl=crit
  rlghncxa03w 04-02-23 13:20:59 EST  EAGLE 31.3.0
  Alarms are permanently inhibited.
;
  rlghncxa03w 04-02-23 13:20:59 EST  EAGLE 31.3.0
  Command Completed.
;
inh-alm:dev=rtx:dpc=1-101-1:opc=4-4-4
  stdcfg2b 06-05-27 20:20:35 EST  EAGLE 35.0.0
  Alarms are permanently inhibited
  Command Completed.
;
inh-alm:dev=route:dpc=1-1-1:dur=timed:lvl=crit:edate=050515:etime
=2300:force=yes
  tekelecstp 07-02-27 13:20:59 EST  EAGLE 35.6.0
  Alarms are timed inhibited.
;
  tekelecstp 07-02-27 13:20:59 EST  EAGLE 35.6.0
  Command Completed
;
inh-alm:dev=enet:loc=1201:port=a
  stdcfg2b 07-02-07 20:20:35 EST  EAGLE 35.6.0
  Alarms are permanently inhibited
  Command Completed.
;
inh-alm:dev=enet:loc=1101:port=a:dur=temp:lvl=minr
  stdcfg2b 07-02-07 20:20:35 EST  EAGLE 35.6.0
  Temporary alarm inhibit level less than alarm level on device
  Command Completed.
;

```

inh-card

Inhibit Card

Use this command to change the state of the card from in-service normal (IS-NR) to Out-of-Service Maintenance-Disabled (OOS-MT-DSBLD). A user can then test the card or physically remove it from the shelf.

Keyword: inh-card

Related Commands: alw-card, dlt-card, ent-card, init-card, rept-stat-card, rmv-card, rst-card, rtrv-card

Command Class: System Maintenance

Parameters

:loc= (mandatory)

Card address. The card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208,

4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

:force= (optional)

Force indicator. This parameter is required for the following conditions:

- The specified card is the last card supporting a linkset, SCCP subsystem, MPS-to-DSM connection, E1, T1, Measurements Platform subsystem, or GLS
- The TDM contains a security log with un-uploaded entries or any other TDM process in progress
- The specified HC MIM card or E5-E1T1 card is in channel bridging mode
- The specified card has the last in-service SEAS terminal configured.

Range: **yes, no**

Default: **no**

Example

inh-card: loc=1101

inh-card: loc=1201: force=yes

Dependencies

No other action commands can be in progress when this command is entered.

The card must be a TSM, ACM, DCM, Service Module, LIM, GPSM-II, E1/T1 MIM, HC MIM, E5-E1T1, or E5-ATM. The card location cannot be 1114, 1116, or 1117.

If the card is the only linkset, SCCP, Service Module, or GLS card remaining, the **force=yes** parameter must be specified in the command to inhibit the card.

If the card contains signaling or data links, all links must be out of service (OOS-MT-DSBLD) before the card can be inhibited.

If the card is type **lime1**, all signaling links providing timeslots serviced by the E1 interfaces assigned to the card must be deactivated, unless **force=yes** is specified.

If the card is type **limt1**, all signaling links providing timeslots serviced by the T1 interfaces assigned to the card must be deactivated, unless **force=yes** is specified.

The shelf and card must be equipped.

If the specified card is the only in-service MPS-DSM, the **force=yes** parameter must be specified.

If the specified card is the only in-service TSM, LIM, or MCPM, the **force=yes** parameter is required.

If the specified HC-MIM or E5-E1T1 card is in channel bridging mode, the **force=yes** parameter is required.

If inhibiting the Service Module card would cause less than 80% of the in-service normal (IS-NR) LIM cards to have VSCCP service (i.e., cause the system to enter an unstable loading mode), the **force=yes** parameter must be specified.

The card that is specified cannot be running the active OAM.

If the specified card has the last in-service SEAS Terminal configured, then the **force=yes** parameter must be specified to inhibit the card.

The card location (**loc**) must be within the allowed range.

The standby fixed disk cannot be initialized while un-uploaded security log entries exist.

The card cannot be inhibited as the terminals are still in use.

Notes

The function of this command is the same as the **rmv-card** command.

When this command is entered, the card is initialized and enters the OOS-MT-DSBLD state. It has no affect if the card is already OOS-MT-DSBLD.



CAUTION: This command can be used to disable Measurements Platform measurements collection after the collection function has been enabled with the **chg-measopts:platformenable=on** command. To disable collection, ALL MPCM cards in the system must be inhibited. THIS CAN RESULT IN LOSING ALL PAST MEASUREMENT DATA ON THE CARDS. Use the **alw-card** command to enable measurements collection after the MPCM cards have been inhibited.

When an E5-IPSM Card is inhibited, the active SEAS terminals are set to the state OOS-MT/FLT.

Output

```
inh-card: loc=1101
    rlghncxa03w 04-01-07 11:11:28 EST  EAGLE 31.3.0
    Card has been inhibited.
;
```

inh-imt

Inhibit IMT

The interprocessor message transport bus (IMT bus) is the main communications artery between all subsystems in the system. This command removes the IMT bus from service.



CAUTION: Use this command only when directed by the Tekelec Customer Care Center at (888) FOR-TKLC.

Keyword: inh-imt

Related Commands: alw-imt, clr-imt-stats, conn-imt, disc-imt, rept-imt-lvl1, rept-imt-lvl2, rept-stat-imt, rmv-imt, rst-imt

Command Class: System Maintenance

Parameters

:bus= (mandatory)
IMT bus to be inhibited
Range: a, b

Example

```
inh-imt: bus=a
```

Dependencies

The alternate IMT bus must be in-service normal (IS-NR) in order for the specified bus to be inhibited.

This command cannot be entered during an IMT Fault Isolation Test.

Notes

Cards not connected to the other IMT bus will reinitialize.

All traffic is rerouted to the alternate IMT bus.

The function of this command is the same as the **rmv-imt** command.

Output

```

inh-imt:bus=a
    rlgncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
    Inhibit IMT Bus A command issued

    rlgncxa03w 04-01-07 13:12:41 EST EAGLE 31.3.0
    3116.0098      IMT BUS A          IMT inhibited
;

```

inh-map-ss**Inhibit Mated Application Subsystem**

Use this command to shut down (inhibit) a mated application subsystem. The command requires a parameter specifying the SSN to be inhibited. Currently, the LNP, INP, INPQS, Equipment Identity Register (EIR), Voice Mail Router (V-Flex), and ATI Number Portability Query (ATINPQ) subsystems can be inhibited. The specified subsystem attempts a coordinated shutdown. If the coordinated shutdown fails, a UIM is issued indicating the shutdown failed. If the **force** parameter is specified, the subsystem is forced to shut down, and a coordinated shutdown is not performed.

Keyword: inh-map-ss

Related Commands: alw-map-ss, rept-stat-lnp, rept-stat-sccp

Command Class: System Maintenance

Parameters

:ssn= (mandatory)

This parameter specifies the ATINPQ, EIR, INP, LNP, or V-Flex subsystem number.

Range: 2-255

:force= (optional)

This parameter forces the shutdown of the ATINPQ, EIR, INP, LNP, or V-Flex subsystem.

Range: yes, no

Default: no

Example

```
inh-map-ss:ssn=10
```

```
inh-map-ss:ssn=10:force=yes
```

Dependencies

The EIR, INP, LNP, or V-Flex feature must be turned on, or the ATINP feature must be enabled before this command can be entered.

No other action command can be in progress when this command is entered.

The specified **ssn** parameter value must represent the ATINPQ, EIR, INP, LNP, or V-Flex subsystem.

The EAGLE 5 ISS must be configured with at least one card running the **sccp** application.

Notes

If the LNPQS subsystem is disabled, any GTT requiring Message Relay is also disabled because they both use the same database. This causes the EAGLE 5 ISS to generate a TFP for the EAGLE 5 ISS CPCs. Traffic is then routed to the mate. If both Message Relay GTT and non Message Relay GTT use the same CPC, this could affect the GTT.

Table 5-56. Route Set Test When LNP is Offline

Network Management	Concerned PC	Network Management
RSP	CPC	TFA concerning CPC
RSP	LNP CPC	None
RSP	TPC	TFA concerning TPC
RSR	CPC	TFA concerning CPC
RSR	LNP CPC	TFP concerning LNP CPC
RSR	TPC	TFA concerning TPC

Table 5-57 shows what actions EAGLE 5 ISS takes when LNP is offline and a message arrives requiring LNP. This table assumes that SCCP cards are available.

Table 5-57. Receiving Messages when LNP is Offline

Routing Indicator in Incoming Message	DPC	Result of GTT	Message Handling	Network Management
rt-on-gt	Capability PC	rt-on-ssn, LNP subsystem	Reroute to mate	TFP concerning CPC
rt-on-gt	True PC	rt-on-ssn, LNP subsystem	Reroute to mate	None
rt-on-gt	Capability PC	Message Relay required	Generate UDTS	TFP concerning CPC
rt-on-gt	True PC	Message Relay required	Generate UDTS	None
rt-on-ssn	Capability PC	Not applicable	Generate UDTS	None
rt-on-ssn	True PC	Not applicable	Generate UDTS	SSP concerning True PC

Output

inh-map-ss:ssn=30

```
rlghncxa03w 04-02-24 10:37:22 EST  EAGLE5 31.0.0
Inhibit map subsystem command sent to all SCCP cards.
Command Completed.
```

```
;
```

inh-map-ss:ssn=30:force=yes

```
rlghncxa03w 04-02-24 10:37:22 EST  EAGLE5 31.0.0
Inhibit map subsystem command sent to all SCCP cards.
Command Completed.
```

```
;
```

inh-slk**Inhibit Signaling Link**

Use this command to prevent message signal units (MSU) from being transmitted on a specified, previously uninhibited signaling link.

NOTE: The signaling link's inhibited status is not preserved across a LIM reboot.

Keyword: inh-slk

Related Commands: act-slk, blk-slk, dact-slk, dlt-slk, ent-slk, rept-stat-slk, rtrv-slk, tst-slk, ublk-slk, unhb-slk

Command Class: Link Maintenance

Parameters

:link= (mandatory)

The signaling link on the card that is specified in the **loc** parameter. The links can be specified in any sequence or pattern.

Synonym: port

Range: a, b, a1-a31, b1-b31

Not all card types support all **link** parameter values.

See "Summary of Range Values for :link Parameter" in Appendix A for valid **link** parameter range values for each type of card that can have a location specified in the **loc** parameter.

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Example

inh-slk:loc=1307:link=b

Dependencies

A card location must be specified that is valid and defined in the database.

No other action command can be in progress when this command is entered.

The card must be equipped and must be one of the following cards:

- An E1 ATM card running the **atmitu** application
- An E1/T1 MIM, E5-E1T1, or HC MIM card running the **ss7ansi** or **ccs7itu** application
- An E5 ATM card running the **atmansi** or **atmitu** application
- An E5-ENET card running the **ipsg** application
- An E5-ENET card or SSED CM card running the **iplim** or **iplimi** application with links having **ipliml2=m2pa**
- A LIM card running the **ss7ansi**, **ss7gx25**, or **ccs7itu** application
- A LIM ATM card running the **atmansi** application

The card must contain signaling links.

The signaling link must be equipped in the database.

The following **link** parameter values can be specified for the following cards that support more than 2 links per card:

- **a1-a3, b1-b3**—Multi-port LIM (MPL, MPL-T), SSEDCM card running the **iplim** or **iplimi** application with links having **ipliml2=m2pa**, E1/T1 MIM card
- **a1-a31, b1-b31**—HC-MIM card
- **a1-a15, b1-b15**—E5-E1T1 card
- **a1-a7, b1-b7**—E5-ENET card running the **iplim** or **iplimi** application that supports 16 links.
- **a1-a15, b1-b15**—E5-ENET card running the **ipsg** application

The link parameter values **a4-a15** and **b4-b15** can be specified only for the HC-MIM card and the E5-E1T1 card. The link parameter values **a16-a31** and **b16-b31** can be specified only for the HC MIM card. The link parameter values **a4-a15** and **b4-b15** can be specified only for the E5-ENET card.

If an IPSEG-M3UA signaling link is used, then this command cannot be entered.

This command is not valid on TCP/IP point-to-multipoint links (SSEDCM or E5-ENET cards equipped as IPGWI links).

Notes

If the link is already inhibited, the system does not execute the command.

If the link is aligned, it attempts to perform a changeover to alternate links. If it is not aligned, it cannot carry traffic.

If the link is the last link in the linkset, or if the node assigned to the link is inaccessible by another route, the inhibit request is denied. If a command request is denied, it is because the SS7 changeover procedure cannot take place.

If the **inh-slk** command is followed by the **init-card** command, the inhibition of the signaling link is not preserved after the **init-card** command completes.

Card locations are illustrated in the *Installation Manual – EAGLE 5 ISS*.

The **inh-slk** command might time out if a far-end remote does not respond to the inhibit message.

Output

```
inh-slk:loc=1301:link=a
rlghncxa03w 05-01-07 11:11:28 EST EAGLE5 33.0.0
Inhibit Link message sent to card
;
```

inh-trm

Inhibit Terminal

Use this command to set the primary state of a serial port to OOS-MT-DSBLD. It sets the secondary state to MANUAL. The serial port is not available to perform service functions. There is no outgoing traffic from the serial port, and all incoming traffic is ignored.

Keyword: inh-trm

Related Commands: act-echo, alw-trm, canc-echo, chg-trm, dact-echo, rept-stat-trm, rmv-trm, rst-trm, rtrv-trm

Command Class: System Maintenance

Parameters**:trm=** (mandatory)

The ID of serial port to be inhibited

Range: 1-40**:force=** (optional)

The parameter forces the removal of a specified terminal, even if it is the last in-service OAP port or last in-service SEAS terminal available.

Range: yes, no**Default:** no**Example****inh-trm:trm=5****inh-trm:trm=1:force=yes****Dependencies**

No other action command can be in progress when this command is entered.

The IP User Interface feature must be enabled before terminal ports 17 through 40 can be specified in the **trm** parameter.The terminal specified by the **trm** parameter must be equipped.The **force=yes** parameter must be specified to inhibit the last in-service OAP port.

This command cannot be used to inhibit the terminal from which the command is entered.

The **force=yes** parameter must be specified to inhibit the last in-service SEAS terminal.**Notes**

When inhibiting an already inhibited terminal, a warning message is echoed to the scroll area, but no action is taken.

Output**inh-trm:trm=5**

rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0

Inhibit message sent to terminal

;

inh-trm:trm=17:force=yes

tekelecstp 07-01-23 18:46:01 EST EAGLE 37.5.0

Inhibit message sent to terminal

;

init-card**Initialize Card**

Use this command to cause a soft reset of a card. It has the same result as a hard reset (card boots, application, and data load), except that connect status is not affected; that is, if a card is not connected, it stays that way.

When the command is issued to the OAM software, there is a 10-second wait before the card is reset. This wait period is intended to ensure that all database updates are complete before the card is reset.



CAUTION: When a LIME1 or LIMT1 card has associated channel cards (LIMCH) with provisioned links, the init-card command entered for the LIME1 or LIMT1 card causes all links on the associated channel cards to go out of service.

Keyword: init-card

Related Commands: dlt-card, ent-card, init-sys, rept-stat-card, rmv-card, rst-card, rtrv-card

Command Class: System Maintenance

Parameters

:appl= (optional)

Application. This parameter specifies the type of application residing on the card.



CAUTION

CAUTION: Because the **appl** parameter causes all LIMs running the assigned application to reload, it should be used only during periods of low traffic.

Range:

xyyyyyy

1 alphabetic character followed by up to 6 alphanumeric characters.

atmansi—This application is used by the LIM cards to support the high-speed ATM signaling link feature. It is also used by the E5-ATM card to support T1 functionality.

atmitu—This application is used by the E1-ATM cards to support the high-speed E1 ATM signaling link. It is also used by the E5-ATM card to support E1 functionality.

ccs7itu—This application is used by the LIM cards for ITU-TSS MTP functionality. It is also used for the 2-port E1 card, the E1/T1 MIM card, the HC MIM card, and the E5-E1T1 card.

eroute—This application is used by the STC card for EAGLE 5 Integrated Monitoring Support functions.

gls—This application is used by the TSM and E5-TSM cards for downloading gateway screening to LIM and SCCP cards.

ipgwi—This application is used by the SSEDCCM card and the E5-ENET card for TCP/IP point-to-multipoint connectivity for ITU point codes. The system allows a maximum of 125 cards to be assigned the **ipgwi** application.

iplim—This application is used by the SSEDCCM card and the E5-ENET card for TCP/IP point-to-point connectivity for ANSI point codes.

iplimi—This application is used by the SSEDCCM card and the E5-ENET card for TCP/IP point-to-point connectivity for ITU point codes.

ips—This application is used by the IPSM card or E5-IPSM card for the IP User Interface feature.

ipsg—This application is used by the E5-ENET card to support the combined functionality of IPLIMx M2PA and IPGWx M3UA.

mcp—This application is used by the MCPM card for the Measurements Platform feature.

sccp—This application is used by the TSM cards for the global title translation application.

ss7ansi—This application is used by the LIM cards, the E1/T1 MIM card, the HC MIM card, and the E5-E1T1 card for the MTP functionality.

ss7gx25—This application is used by the LIM cards to support X.25 functionality.

ss7ipgw—The application software for TCP/IP point-to-multipoint connectivity. The system allows a maximum of 125 cards to be assigned the **ss7ipgw** application.

stplan—This application is used by the ACM, DCM, and E5-ENET cards to support the STP LAN functionality.

vsccp—This application is used by the Service Module cards to support EPAP-based features and LNP features. If no EPAP-based features or LNP features are turned on, and a Service Module card is present, the **vsccp** GPL processes normal GTT traffic.

Default: The application assigned to the card

:data= (optional)

High memory refresh. This parameter causes data to be reloaded to the specified card. This parameter is used to reload data if the LNP feature or an EPAP-based feature is on or the ATINP feature is enabled. This parameter is applicable only to Service Module cards that run the **vsccp** application and contain an RTDB.

Range: **refresh, persist**

refresh— Causes data to be reloaded to the specified card.

persist— Indicates that the database is not to be reloaded to the card. Used to request that the EAGLE 5 ISS perform a warm restart of the requested cards. The EAGLE 5 ISS performs various checks to ensure that all conditions necessary to initiate the warm restart are in place. The **force** parameter is required if all of the specified cards do not meet the warm restart requirements. During the card initialization and loading sequence, a warm restart is performed for all cards that meet the warm restart conditions.

Default: **refresh**

:force= (optional)

Force indicator. Enables the command to be processed under the following conditions:

- If **serial=yes** and all cards of the specified GPL type are not IS-NR or OOS-MT-DSBLD.
- If **initclk=yes** and the TDM card specified in the **loc** parameter is the only good HS clock source that is currently active. A temporary clock outage will occur.
- If **initclk=yes** and **appl=eoam** is specified (bitfiles on both TDMs will be initialized). A temporary clock outage will occur.

Range: **yes, no**

Default: **no**

:initclk= (optional)

Initialize TDM Bitfile indicator. If TDM reload would cause a system clock outage, the **initclk** parameter cannot be specified unless **force=yes** is also specified.



CAUTION: The resulting clock outage will probably cause loss of traffic on all links.

The following scenarios will cause such clock outages:

- Simplex MASP configuration (a system with a single TDM).
- Bad clock status on the remaining TDM.

Range: **yes, no**

If **initclk=yes** is specified with a single TDM card location, the bitfile for the specified TDM reloads.

If **initclk=yes** is specified with **appl=eoam** and **force=yes**, the bitfile reloads on both TDMs.

:loc= (optional)

Card address. The card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1116, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2301-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

When the **initclk** parameter is not specified, the listed card locations are valid.

When the **initclk** parameter is specified with the **loc** parameter, only card locations **1113**, **1114**, **1115**, and **1116** are valid. Entering locations **1114** and **1116** results in the same action as entering **1113** and **1115**.

Default: All valid card locations are initialized.

:prtnggrp= (optional)

Partition group. This parameter specifies the disk partition group that is used as the source for downloading the appropriate GPL.

A value of **1113** or **1115** must be specified for the **loc** parameter before this parameter can be specified.

Range: **active**, **inactive**

active — the active partition group

inactive — the inactive partition group

Default: **active**

:serial= (optional)

Controls the manner in which cards are initialized. If **serial=yes** is specified, cards of the specified APPL type are initialized one at a time. If **serial=no** is specified, cards of the specified APPL type are initialized simultaneously.

Range: **yes**, **no**

Default: **no**

Example

```
init-card:Loc=1113:prtnggrp=inactive
```

```
init-card:loc=1101:data=persist
```

```
init-card:loc=1113:initclk=yes
```

```
init-card:appl=eoam:initclk=yes:force=yes
```

```
init-card:appl=ipsg
```

Dependencies

The shelf and card must be equipped.

Either the **loc** or **appl** parameter, but not both parameters, must be specified in the command.

The following card locations (**loc** parameter) are not allowed for this command: **1117**, **1118**, and all xy09 and xy10 card locations (where x is the frame and y is the shelf).

If the **loc** parameter is specified with the **initclk** parameter, the **loc** parameter value must be card location **1113** or **1115**. If the **appl** parameter is specified with the **initclk** parameter, the **appl** parameter value must be **eoam**.

If TDM reload would cause system clocks to fail that are required to keep links active or TSCSYNC available, the **initclk** parameter cannot be specified unless **force=yes** is also specified.



CAUTION: The resulting clock outage will probably cause loss of traffic on all links.

Clocks are required in the following situations:

- When at least one DS0 card is provisioned, one BITS clocks is required.

- When a high speed link is being master-timed, at least one high speed clock is required.
- When TSCSYNC is turned on, both SYSTEM clocks (A&B) are required.

The **initclk** parameter can be specified only for TDM cards that support bitfile reloading (TDM-15 or later).

The **force** parameter must be specified for the cards that are not in the In-service Normal state.

The **serial** parameter is valid only when used with the **appl** parameter.

The **appl=all** parameter can be specified only when the **serial=yes** parameter is also specified.

The following applications are valid for the **appl** parameter: **ss7ansi**, **sccp**, **gls**, **ccs7itu**, **ss7gx25**, **stplan**, **atmansi**, **iplim**, **iplimi**, **ss7ipgw**, **vscdp**, **atmitu**, **ipgwi**, **ips**, **eroute**, **ipsg**, or **mcp**.

The **force** parameter can be specified only when the **initclk**, **appl**, and **data** parameters are specified.

The **data** parameter is valid only for SCCP card locations or GPLs, or MPS database (VSCCP) card locations or GPLs.

The card location (**loc**) must be within the allowed range.

The specified card does not exist or is not a logical processing element.

An EPAP-based feature or an LNP feature that is warm-restart-capable must be enabled before this command can be entered with the **data=persist** parameter.

If the **serial=yes** parameter is specified, the **appl** parameter must specify a network type application value or must be equal to **all**.

The A-Port, EIR, G-Flex, G-Port, INP, IS41 GSM Migration (IGM), LNP ELAP Configuration, PPSMS, Prepaid IDP Relay Query (IDP Relay), or V-Flex feature must be turned on, or the ATINP feature must be enabled before the **data** parameter can be specified.

If a removable cartridge is inserted in the system, then the **prtngrp=inactive** parameter cannot be specified.

The **loc** parameter must be specified with a value of **1113** or **1115** before the **prtngrp** parameter can be specified.

Notes

The TDM card has a processor but no application.

Output

init-card:loc=1201

Init Card command issued to card 1201

3021.0013 * CARD 1201 CCS7ITU Card is isolated from the system

3022.0201 * SLK 1201,A lsnsspn2 SLK unavailable for traffic
SLC=0 FECLLI=-----3023.1201 * SLK 1201,B lsnstpi SLK unavailable for traffic
SLC=0 FECLLI=-----

;

init-card:apl=all:serial=yes

Command entered at terminal #3.

Init Card command issued to card 1201

* 3021.0013 * CARD 1201 SS7ANSI Card is isolated from the system

** 3022.0236 ** SLK 1201,A lsnsspn2 REPT-LKF: not aligned
SLC=0 FECLLI=----- CLASS=MTP2

3023.0014 CARD 1201 SS7ANSI Card is present

3024.0200 SLK 1201,A lsnsspn2 RCVRY-LKF: link available
SLC=0 FECLLI=----- CLASS=MTP2

Init Card command issued to card 1202

* 3026.0013 * CARD 1202 ATMANSI Card is isolated from the system

** 3026.0236 ** SLK 1202,A lsnsspn3 REPT-LKF: not aligned
SLC=0 FECLLI=----- CLASS=SAAL

3027.0014 CARD 1202 ATMANSI Card is present

3028.0200 SLK 1202,A lsnsspn3 RCVRY-LKF: link available
SLC=0 FECLLI=----- CLASS=SAAL

;

init-card:loc=1101:data=refresh

Command entered at terminal #10.

Init Card command issued to card 1101

** 1127.0013 ** CARD 1101 SCCP Card is isolated from the system
ASSY SN: 97361659

1128.0329 SCCP SYSTEM SCCP capacity normal, card(s) abnormal

1129.0014 CARD 1101 SCCP Card is present
ASSY SN: 973616591234.1238 SYSTEM INFO Full LNP database reload initiated:
CARD=1101 GPL=SCCP CAUSE=USER REQUEST
Report Date: 00-02-24 Time: 16:27:195402.1241 SYSTEM INFO REPT EVT: LNP Incremental Loading.
database levels loaded : 0 of 1145
Report Date: 00-02-24 Time: 16:52:041234.1239 SYSTEM INFO LNP updates inhibited: loading stability
Report Date: 00-02-24 Time: 16:52:07

1234.1240 SYSTEM INFO LNP updates allowed: loading stability

```

Report Date: 00-02-24   Time: 16:52:09

1130.0096      CARD 1101 SCCP           Card has been reloaded

1131.0328      SCCP SYSTEM             SCCP is available
;
init-card:loc=1115:initclk=yes
tekelecstp 04-07-17 13:01:59 EST  EAGLE 31.6.0
Init Card command issued to card 1115
;

tekelecstp 04-07-17 13:01:59 EST  EAGLE 31.6.0
* 3021.0013 * CARD 1115 EOAM         Card is isolated from the system
;

tekelecstp 04-07-17 13:03:10 EST  EAGLE 31.6.0
3022.0014      CARD 1115 EOAM         Card is present
      ASSY SN: 1216115
;

```

init-flash

Initialize Flash

Use this command to load the Board PROM to the inactive FLASH memory of a specified card or range of cards. When a card is reinitialized, it runs this version of the GPL in the card's inactive FLASH memory.

Keyword: **init-flash**

Related Commands: **act-flash**, **clr-imt-stats**, **flash-card**, **init-imt-gpl**, **rept-imt-info**, **rept-imt-lvl1**, **rept-imt-lvl2**, **tst-imt**

Command Class: System Maintenance

Parameters

:code= (mandatory)

The version of the GPL being loaded onto the card.

Range: **appr**, **trial**

appr — The approved GPL version

trial — The trial GPL version

:boot= (optional)

This parameter indicates whether the HC-MIM or EPM based card should boot or not boot after the command successfully completes.

Multiple images can be flashed without having to boot after each flash. If multiple images are being flashed to the HC-MIM or EPM based card, this parameter can be used to prevent the card from booting after each image is flashed. If multiple images are being flashed and the card is allowed to boot after each flash, an image that is not activated after the card boots will be lost on a subsequent reset of the card.

Range: **yes**, **no**

yes — Reboot the card after the command completes successfully

no — Do not reboot the card after the command completes successfully.

Default: **yes**

:eloc= (optional)

End location. Location of the last card of a range of cards to be initialized.

Range: **1101-1113**, **1115**, **1201-1218**, **1301-1318**, **2101-2118**, **2201-2218**, **2301-2318**, **3101-3118**, **3201-3218**, **3301-3318**, **4101-4118**, **4201-4218**, **4301-4318**, **5101-5118**, **5201-5218**, **5301-5318**, **6101-6118**

:force= (optional)

This parameter is required to force the TDM-GTI bitfile reload if a clock outage will occur when **initclk=yes** is specified.

Range: **yes, no**

Default: **no**

:gpl= (optional)

Generic program load. This parameter specifies the flash GPL type that is running on the cards in the specified range of cards.

Range: **xyyyyyy**

1 alphabetic character followed by up to 6 alphanumeric characters.

Valid GPLs are: **blbios**, **blbepm**, **blbsmg**, **blcpld**, **bldiag6**, **blmcap**, **blrom1**, **blvxw6**, **bpdcm**, **bpdcm2**, **bphcap**, **bphcapt**, **bphmux**, **bpmpl**, **bpmplt**, **hipr**, **imtpci**, and **pldpmc1**.

The **bldiag** and **blvxw** flash GPLs are no longer supported.

:initclk= (optional)

If this parameter is specified for an EOAM card location (1113 or 1115), it determines whether or not the TDM-GTI bitfile should be reloaded, causing a clock initialization.

The command will be accepted if the TDM being initialized is a TDM-GTI and the following conditions are true:

- The card being flashed is in location 1113 or 1115.
- Any required clocks from the mate OAM are valid, or the **force=yes** parameter is used.

Range: **yes, no**

Default: **no**

:loc= (optional)

The location of a single card to be initialized.

Range: **1101-1113, 1115, 1201-1218, 1301-1318, 2101-2118, 2201-2218, 2301-2318, 3101-3118, 3201-3218, 3301-3318, 4101-4118, 4201-4218, 4301-4318, 5101-5118, 5201-5218, 5301-5318, 6101-6118**

:sloc= (optional)

Start location. Location of the first card of a range of cards to be initialized.

Range: **1101-1113, 1115, 1201-1218, 1301-1318, 2101-2118, 2201-2218, 2301-2318, 3101-3118, 3201-3218, 3301-3318, 4101-4118, 4201-4218, 4301-4318, 5101-5118, 5201-5218, 5301-5318, 6101-6118**

Example

```
init-flash:loc=1105:code=trial
init-flash:sloc=1101:eloc=1112:gpl=bpdcm:code=appr
init-flash:loc=1113:code=appr:initclk=yes
init-flash:loc=1115:code=appr:initclk=yes:force=yes
init-flash:loc=1115:code=trial:initclk=no
```

Dependencies

The specified card for this command must be an HCAP, HCAP-T, DCM, E1/T1 MIM, HC-MIM, E5-E1T1, E5-ENET, GPSM-II, MPL, E5-TSM, or Service Module card. An HMUX card or a HIPR card can be specified, but only for locations xy09 and xy10 (x is the frame and y is the shelf).

Each specified card does not have to be defined in the database, but it does have to be aligned on the IMT bus.

If the card in the specified card location is provisioned, the card must be inhibited before this command is entered (unless the card is an HMUX card or a HIPR card).

If the target card is HMUX or HIPR, both of the card locations specified in the **sloc** and **eloc** parameters must contain HMUX cards or HIPR cards on the same IMT bus. For HMUX or HIPR the bus is implicit based on the specified location. Location xy09 specifies HMUX or HIPR A Bus, and location xy10 specifies HMUX or HIPR B Bus (where x is the frame and y is the shelf). For example, **sloc=1109:eloc=6109** specifies all HMUX cards or HIPR cards on the A Bus only; **sloc=1110:eloc=6110** specifies all HMUX cards or HIPR cards on the B Bus only. HMUX cards or HIPR cards from both the A bus and B bus cannot be flash downloaded simultaneously.

If the target card is an HC-MIM or EPM based card, the **gpl** parameter must be specified when the **loc** parameter is specified.

The **boot** parameter can be specified only if the target is an HC-MIM or EPM based card.

The **boot** parameter cannot be specified for the **blcpld** HC-MIM GPL.

A card location that contains the active MASP cannot be specified for the **loc**, **sloc**, or **eloc** parameter.

The provisioning subsystem mode (simple, duplex) must be established prior to executing the command.

The **loc** parameter cannot be specified with the **eloc** and **sloc** parameters.

Either the **loc** parameter or the **eloc** and **sloc** parameters must be specified.

If the **eloc** and **sloc** parameters are specified, the **gpl** parameter must be specified. The cards in the locations specified in the **sloc** and **eloc** parameters must be running the specified general program load (**gpl**). Other cards in the range of card locations can be running other GPLs, but will not be initialized. Only the cards within the range that are running the specified GPL will be initialized.

The **sloc** parameter value must be less than the **eloc** parameter value, when the two parameters are specified.

The specified card cannot be running an inactive flash GPL when the command is executed.

If **initclk** is specified, the card location parameter value must be **1113** or **1115**.

If TDM reload would cause a system clock outage, the **initclk** parameter cannot be specified unless **force=yes** is also specified.



CAUTION: The resulting clock outage will probably cause loss of traffic on all links.

The command will be accepted if the TDM being initialized is a TDM-GTI and the following conditions are true:

- The card being flashed is in location 1113 or 1115.
- Any required clocks from the mate OAM are valid, or the **force=yes** parameter is used.

The **initclk** parameter can be specified only for TDM cards that support bitfile reloading (TDM-15 or later).

EPM-based cards cannot support a valid trial version of the **blbepm** GPL and **blcpld** GPL at the same time. One of these GPLs must be downloaded and activated before the other one can be downloaded. The HC-MIM card cannot support a valid trial version of the **blbios** GPL and **blcpld** GPL at the same time. One of these GPLs must be downloaded and activated before the other one can be downloaded.

No other related command can be in progress when this command is entered.

A card location that is valid and defined in the database must be specified.

The **eloc** and **sloc** parameters must be specified together in the command; one parameter cannot be specified without the other parameter.

The cards specified in the **sloc** and **eloc** location parameters must be running the specified general program load (gpl).

If the **loc** parameter is specified with the **initclk** parameter, the **loc** parameter value must be card location **1113** or **1115**. If the **appl** parameter is specified with the **initclk** parameter, the **appl** parameter value must be **eoam**.

Notes

Card locations **1114**, **1116**, and **1117** are not valid and cannot be specified.

For the HC-MIM or EPM based cards, multiple images can be flashed without having to boot the card after each flash. If multiple images are being flashed to the card the **boot=no** parameter can be used to prevent the card from booting after each image is flashed. After flashing any number of images, the card can be reset either by entering the **init-flash** command with the **boot=yes** parameter or by entering the **init-card** command. If multiple images are being flashed and the card is allowed to boot after each flash, any images that are not activated after the card boots will be lost on a subsequent reset of the card.

Output

```
init-flash:loc=1105:code=trial
rlghncxa03w 04-01-05 13:05:05 EST EAGLE 31.3.0
FLASH Memory Downloading for card 1105 Started.

rlghncxa03w 04-01-05 13:05:05 EST EAGLE 31.3.0
BPHCAP Downloading for card 1105 Complete.

rlghncxa03w 04-01-05 13:05:05 EST EAGLE 31.3.0
Command Completed.
;
init-flash:sloc=1101:eloc=1112:gpl=bpdcn:code=appr
rlghncxa03w 05-01-02 13:05:05 EST EAGLE 33.0.0
FLASH Memory Download for cards 1101 - 1112 Started.
;
rlghncxa03w 05-01-02 13:05:05 EST EAGLE 33.0.0
FLASH Memory Download for cards 1101 - 1112 Completed.
LOC 1101 : PASSED
LOC 1102 : PASSED
LOC 1112 : PASSED

ALL CARD RESULTS PASSED
;
rlghncxa03w 05-01-02 13:05:05 EST EAGLE 33.0.0
Command Completed.
;
init-flash:loc=1113:code=appr:initclk=yes
rlghncxa03w 04-03-08 10:02:04 EST EAGLE 31.6.0
FLASH Memory Download for card 1113 Started.
;

rlghncxa03w 04-03-08 10:02:23 EST EAGLE 31.6.0
FLASH Memory Download for card 1113 Completed.
;
```

init-imt-gpl**Initialize IMT GPL**

Use this command to load the specified IMT GPL software to the specified card and to reset that card. The application software is reloaded following IMT reset.

Keyword: **init-imt-gpl**

Related Commands: **alw-card, inh-card, init-card, rept-stat-card**

Command Class: System Maintenance

Parameters

:code= (mandatory)

Specifies which IMT GPL to load to the card.

Range: **appr, refresh, trial**

appr— The approved GPL version

refresh— Reload approved GPL version without card reset

trial— The trial GPL version

:loc= (optional)

Specifies the address of the card to be initialized.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

Default: All locations

Example

```
init-imt-gpl:loc=1201:code=trial
```

```
init-imt-gpl:code=refresh
```

```
init-imt-gpl:code=appr
```

Dependencies

The card location shelf must be within the allowed ranges as specified on the **loc** parameter. The shelf is the first two digits of the **loc** parameter.

The card location slot must be within the allowed ranges as specified on the **loc** parameter. The slot is the second two digits of the **loc** parameter.

The card location cannot contain a card with flash memory (HCAP, HCAP-T, DCM, MPL, HC MIM, HIPR, or HMUX).

When this command is entered, no other action command can be in progress.

If the **code=appr** or **code=trial** parameter is specified, the **loc** parameter must be specified.

If the **code=trial** parameter is specified, the **loc** parameter must be specified, and the specified card location must be equipped and in service.

If the **code=appr** or the **code=refresh** parameter is specified, the card must be connected to at least one IMT bus and communicating with the active MASP when the command is entered.

The **init-imt-gpl** command cannot be entered if any of the following commands is running: **clr-imt-stats, rept-imt-info, rept-imt-lvl1, rept-imt-lvl2, tst-imt**.

This command must not be entered during IMT statistics collection following an hourly boundary.

A card location that is valid and defined in the database must be specified.

Notes

None

Output

```

init-imt-gpl:loc=1201:code=trial
  rlghncxa03w 04-02-27 16:53:22 EST   EAGLE 31.3.0
  Initializing IMT GPL for card 1201.

  rlghncxa03w 04-02-27 16:53:22 EST   EAGLE 31.3.0
  * 0192.0013  * CARD 1201 SS7ANSI     Card is isolated from the system

  rlghncxa03w 04-02-27 16:53:22 EST   EAGLE 31.3.0
  0193.0014   CARD 1201 SS7ANSI       Card is present

  rlghncxa03w 04-02-27 16:53:22 EST   EAGLE 31.3.0
  0194.0096   CARD 1201 SS7ANSI       Card has been reloaded
;

```

init-mux**Initialize High-Speed Multiplexer**

Use this command to reset a single HMUX or HIPR card or all HMUX or HIPR cards on the specified HMUX or HIPR bus.

If the command is entered between the **init-flash** command and the **act-flash** command, the command boots the HMUX or HIPR processor and brings down the respective IMT bus temporarily (approximately 10 seconds) until the HMUX or HIPR card or cards come back into service.

If the command entry is not between the **init-flash** command and the **act-flash** command, the command boots the HMUX or HIPR processor without bringing down the respective IMT bus.

Keyword: **init-mux**

Related Commands: **act-flash**, **init-flash**

Command Class: System Maintenance

Parameters

:bus= (optional)

The HMUX or HIPR bus to be reset. All HMUX or HIPR cards on the specified bus will be reset.

Range: **a, b**

Default: **a**

:force= (optional)

Use this parameter to override normal safeguards. The **force=yes** parameter can be used to:

- Reset an entire HMUX or HIPR bus when the alternate bus is non-functional
- Reset one HMUX or HIPR card during a fault isolation test (**tst-imt**) command

Range: **yes, no**

Default: **no**

:loc= (optional)

The card location of a single HMUX or HIPR card to be reset.

Range: **1109-1110, 1209-1210, 1309-1310, 2109-2110, 2209-2210, 2309-2310, 3109-3110, 3209-3210, 3309-3310, 4109-4110, 4209-4210, 4309-4310, 5109-5110, 5209-5210, 5309-5310, 6109-6110**

Default: If not specified, all HMUX or HIPR cards on bus A or bus B are reset

Example

```
init-mux:bus=a
init-mux:loc=1109
```

Dependencies

An **act-flash** or **init-flash** command cannot be in progress when this command is entered.

Either the **bus** parameter or the **loc** parameter, but not both, must be specified.

This command is not allowed during an IMT Fault Isolation test (**tst-imt**), unless the **force=yes** parameter is specified.

This command is not allowed during the IMT statistics collection period following an hourly boundary (IMT performance monitoring).

The STP options **hmuxabus** or **hmuxbbus** must have their value set to **yes** before this command can be executed.

Notes

None

Output

```
init-mux:loc=1109
rlghncxa03w 05-07-13 08:15:10 EST EAGLE 31.3.0
Command Completed.
;
```

init-network**Initialize the Network**

Use this command to reset all the network cards. The network cards are ACMs, TSMs, and LIMs; that is, anything not part of the Maintenance and Administration Subsystem (MAS). This command resets all the network cards by reloading GPLs and data to the cards. Use of this command requires maintenance personnel to be located at the site.



CAUTION: Using this command causes network nodal isolation; however, if the network nodal isolation is less than two seconds, it may not be detected and may not be reported. Also, in some cases when network nodal isolation has been detected and a large number of maintenance troubles are being reported, the network nodal isolation message may not be reported. An alarm is generated, however.

Keyword: **init-network**

Related Commands:

Command Class: System Maintenance

Parameters

:force= (optional)
Force the resetting of all the network cards.
Range: **yes, no**
Default: **no**

Example

```
init-network
```

Dependencies

The MASP must be in either *Upgrade Phase 3* mode or *Full Function* mode. (See the “Notes” section for this command for more information.)

The system database must be coherent when this command is entered.

At least one card with either the **ss7ansi** or the **ccs7itu** application installed must exist with an in-service active signaling link.

The **force=yes** parameter must be specified to override the required four-card **ss7ansi** or **ccs7itu** configuration. The system then selects the best available of the remaining **ss7ansi** or **ccs7itu** cards.

Notes

Upgrade Phase 3

Upgrade Phase 3 mode means that the MASPs are running GPLs that match the major revision defined for the approved GPLs, but the other network processors are only prepared to be upgraded.

Full Function

Full Function mode means that all MASPs are running GPLs that match the major revision defined for the approved GPLs. *Full Function* mode is the normal operating mode for the MASP.

Output

The command output scrolls into the scroll area of your display contiguously. However, for purposes of this example, each part has an explanation preceding it.

init-network

```
rlghncxa03w 06-05-27 08:15:10 EST EAGLE 35.0.0
(Reports the selection of an alternate card.)
rlghncxa03w 06-05-27 08:15:10 EST EAGLE 35.0.0
1234.1107 SYSTEM INFO INW ALT card as first to be preloaded
CARD=1201 GPL=SS7ANSI
Report Date: 06-05-27 Time: 16:29:15
```

Reports the selection of a main card.

init-network

```
rlghncxa03w 06-05-27 08:15:10 EST EAGLE 35.0.0
1234.1108 SYSTEM INFO INW MAIN card as last to be reset
CARD=1202 GPL=SS7ANSI
Report Date: 06-05-27 Time: 16:29:17
```

Reports that the card cross loading is inhibited.

init-network

```
rlghncxa03w 06-05-27 16:30:02 EST EAGLE 35.0.0
1234.1109 SYSTEM INFO Asserted DDL inhibition
CARD=1113 GPL=OAM
Report Date: 06-05-27 Time: 16:27:18
```

Reports that a card reset has been issued.

init-network

```
rlghncxa03w 06-05-27 16:30:02 EST EAGLE 35.0.0
1234.1110 SYSTEM INFO Card reset command issued
CARD=1204 GPL=SS7ANSI
Report Date: 06-05-27 Time: 16:30:18
```

Reports that a card is being allowed to load.

init-network

```
rlghncxa03w 06-05-27 16:30:02 EST EAGLE 35.0.0
1234.1111 SYSTEM INFO Allowing card to load
CARD=1204 GPL=SS7ANSI
Report Date: 06-05-27 Time: 16:30:18
```

Reports that INW is waiting for validation of card loading.

init-network

```
rlghncxa03w 06-05-27 16:30:02 EST EAGLE 35.0.0
1234.1112 SYSTEM INFO Waiting for validation of card loading
CARD=1204 GPL=SS7ANSI
Report Date: 06-05-27 Time: 16:30:18
```

Reports that INW has detected successful completion of card loading.

init-network

```
rlghncxa03w 06-05-27 16:30:02 EST EAGLE 35.0.0
1234.1113 SYSTEM INFO Detected card loaded
CARD=1204 GPL=SS7ANSI
Report Date: 06-05-27 Time: 16:30:18
```

Reports that INW has detected the reset or removal of a card.

init-network

```
rlghncxa03w 06-05-27 16:30:02 EST EAGLE 35.0.0
1234.1114 SYSTEM INFO Detected card reset or removed
CARD=1204 GPL=SS7ANSI
Report Date: 06-05-27 Time: 16:30:18
```

Reports that the card is being allowed to crossload.

init-network

```
rlghncxa03w 06-05-27 16:30:02 EST EAGLE 35.0.0
1234.1115    SYSTEM      INFO  Allowed card to skip DDL inhibited
              CARD=1204   GPL=SS7ANSI
              Report Date: 06-05-27 Time: 16:30:18
```

Reports that DDL inhibition has been removed.

init-network

```
rlghncxa03w 06-05-27 16:30:02 EST EAGLE 35.0.0
1234.1116    SYSTEM      INFO  Removed DDL inhibition
              CARD=1113   GPL=OAM
              Report Date: 06-05-27 Time: 16:30:18
```

If **init-network** is entered during an upgrade, reports that the upgrade is to continue.

init-network

```
rlghncxa03w 06-05-27 16:30:02 EST EAGLE 35.0.0
1234.1117    SYSTEM      INFO  Initialize OAMs to continue upgrade
              CARD=1113   GPL=OAM
              Report Date: 06-05-27 Time: 16:30:18
```

Reports that a card must be reset manually or removed.

init-network

```
rlghncxa03w 06-05-27 16:30:02 EST EAGLE 35.0.0
1234.1118    SYSTEM      INFO  Card must be manually reset/removed
              CARD=1204   GPL=SS7ANSI
              Report Date: 06-05-27 Time: 16:30:18
```

Reports that a card has failed to reset.

init-network

```
rlghncxa03w 06-05-27 16:30:02 EST EAGLE 35.0.0
1234.1119    SYSTEM      INFO  Card failed to reset
              CARD=1204   GPL=SS7ANSI
              Report Date: 06-05-27 Time: 16:30:18
```

Reports that a DDL inhibition assertion has failed.

init-network

```
rlghncxa03w 06-05-27 16:30:02 EST EAGLE 35.0.0
1234.1120    SYSTEM      INFO  Failed to assert DDL inhibition
              CARD=1113   GPL=OAM
              Report Date: 06-05-27 Time: 16:30:18
```

Reports that an internal error has stopped an **init-network**.

init-network

```
rlghncxa03w 06-05-27 16:30:02 EST EAGLE 35.0.0
Command Aborted : Internal error.
```

Reports that a failure to load a card has stopped an **init-network**.

init-network

```
rlghncxa03w 06-05-27 16:30:02 EST EAGLE 35.0.0
Command Aborted : Card 1206 failed to load.
```

init-oap

Initialize OAP Processor

Use this command to send a hardware signal to the indicated OSS/Application Processor (OAP), causing it to reset and reinitialize its operational software.

NOTE: This command cannot be used for EOAPs (Enhanced Operation System Support Application Processes).

Keyword: init-oap

Related Commands: chg-trm, rept-stat-seas

Command Class: System Maintenance

Parameters

:oap= (mandatory)

The OAP that is to be initialized. Any value (**a**, **b**, or **both**) can be specified, regardless of the actual or intended OAP configuration.

Range: **a, b, both**

:force= (optional)

If the specified OAP is operational (that is, if its state is IS-NR or IS-ANR), and it is the only operational OAP, then the **force=yes** parameter must be specified to reset it. If the specified OAP is not operational, then **force=yes** is not required.

Range: **yes, no**

Default: **no**

Example

```
init-oap:oap=a
```

```
init-oap:oap=both:force=yes
```

Dependencies

The SEAS feature must be turned on before this command can be entered.

No other action command can be in progress when this command is entered.

The **force=yes** parameter must be specified to reset the last OAP.

The SEAS Over IP feature must be turned off before this command can be entered.

Notes

The EAGLE 5 ISS determines the OAP configuration (single vs. dual) by querying the OAP. If one or both of the OAPs are not operational, then the EAGLE 5 ISS might receive incorrect information about the OAP configuration. Furthermore, if no OAP terminals are defined, no OAP queries are sent, the OAM defaults to a single configuration, and this information may be incorrect.

To allow an OAP to be reset by an OAM not configured for it or when no OAP terminals are yet defined, the **init-oap** command can be used to specify either OAP or both OAPs, even if doing so conflicts with the actual OAP configuration.

Output

```
init-oap:oap=a
```

```
rlghncxa03w 05-07-01 16:40:40 EST  EAGLE 31.3.0
```

```
Initialization signal sent to OAP A
```

```
Command Completed.
```

```
init-oap:oap=both:force=yes
```

```
rlghncxa03w 05-07-01 16:40:40 EST  EAGLE 31.3.0
```

```
Initialization signal sent to OAP A
```

```
Initialization signal sent to OAP B
```

```
Command Completed.
```

In the following example, assume that the MDAL is malfunctioning when the command is entered.

```
init-oap:oap=b
```

```
rlghncxa03w 05-07-01 16:40:40 EST  EAGLE 31.3.0
```

```
Info: MDAL is not operational. OAP initialization may not occur.
```

```
Initialization signal sent to OAP B
```

```
Command Completed.
```

```
;
```

init-sys**Initialize System**

Use this command to reset all cards in the system (except HMUX and HIPR cards). When you first enter this command, a caution message is displayed in the scroll area requesting that you re-enter the command to confirm the operation. You have 30 seconds to re-enter the command. The only valid commands that you can enter after entering the **init-sys** command the *second* time are the commands **login** and **act-user**.



CAUTION: This command causes a complete system reload, and you should use it only during periods of low traffic. Use this command only when directed by Tekelec Technical Service at (888) FOR-TKLC.



CAUTION: When the **init-sys** command executes, the system does not retain the manually initiated state (for example, OOS-MT-DSBLD) for the signaling link, card, or the terminal. After the command executes, the system attempts to bring all provisioned links, cards, and terminals on line, including those that were previously out of service. You will need to manually put each device back into its previous state after the system is back on line. It is, therefore, advisable to print or electronically capture the output of the **rept-stat-slk**, **rept-stat-card**, and **rept-stat-trm** commands for reference prior to issuing the **init-sys** command. To restore a device to its previous state, issue the appropriate inhibit/deactivate command listed in this manual in the section for each of the above **rept-stat** commands.

Keyword: **init-sys**

Related Commands: **act-gpl**, **chg-db**, **chg-gpl**, **copy-gpl**, **copy-meas**, **disp-disk-dir**, **rept-stat-db**

Command Class: System Maintenance

Parameters

NOTE: The **force** parameter is no longer available.

:data= (optional)

High memory refresh. This parameter causes data to be reloaded to the specified card. This parameter is used to reload data if the G-Flex, G-Port, INP, or LNP feature is on, or the ATINP feature is enabled. This parameter is applicable only to network cards containing the MPS database (VSCCP).

Range: **refresh**, **persist**

refresh — Causes data to be reloaded to the specified card.

persist — Indicates that the database is not to be reloaded to the card. Used to request that the EAGLE 5 ISS perform a warm restart of the requested cards. The EAGLE 5 ISS performs various checks to ensure that all conditions necessary to initiate the warm restart are in place.

Default: **refresh**

Example

init-sys

init-sys:data=persist

Dependencies

When this command is entered, another **init-sys** command cannot be in progress on another port.

The G-Flex, G-Port, INP, LNP, or V-Flex feature must be turned on, or the ATINP feature must be enabled before the **data** parameter can be specified.

The value specified for the **data** parameter for the confirmation command must be the same value that was specified the first time.

Notes

When the **init-sys** command is entered the first time, you have 30 seconds to enter the command again. After the command is accepted, a delay of 10 seconds gives the system time to broadcast the information message regarding the system initialization.

From the time that the **init-sys** command is accepted, you must wait approximately two minutes before you can log into the system. If the system terminal is in the VT-100/VT-320 mode, the terminal display will be refreshed with nonzero alarm counts. During this 2-minute interval, an intermediate screen refresh caused by the MASPs' role change from active to standby, and from standby to active. This screen refresh is typically a partial refresh and the alarm indicators are set to zero.

If you are logged into the system in the KSR mode, you receive UAM 0009 (MASP became active) to indicates that you are now able to log into the system. UAM 0009 could be issued twice due to possible transient MASP role change (switching from active to standby). Following the execution of the **init-sys** command, the MASP that was active before the **init-sys** command was entered will be the active MASP when the system has finished reinitializing. TSM cards are reloaded only in the event of power failure or hardware reboot. The execution of this command does not require the TSM cards to be reloaded.

When the OA&M IP Security feature is turned on, and an IPSM card is inserted and initialized for the first time or is removed, inserted, and initialized again, the "SSH Host Keys Regenerated" UIM is displayed. The UIM shows the generated SSH Host Key fingerprint that must be provided at the secure client in order for secure information transfer to occur. The SSH Host Key fingerprint is changed whenever power is lost and restored to an IPSM card.

```
rlghncxa03 03-07-11 07:05:00 EST EAGLE 30.2.0
0021.1493 CARD 1111 INFO SSH Host Keys Regenerated
DSA Server Host Key FTRA-formatted Fingerprint=
84 7c 92 8b c 7c ds 19 1c 6 4b de 5c 8f c5 4d
Report Date:03-07-11 Time:22:27:36
```

When the OA&M IP Security feature is turned on, and an IPSM card is restarted with this command, the "SSH Host Keys Loaded" UIM is displayed. The UIM shows the current SSH Host Key fingerprint. The SSH Host Key fingerprint is not changed if the IPSM card does not lose power.

```
rlghncxa03 01-07-11 07:05:00 EST EAGLE 30.2.0
0021.1493 CARD 1111 INFO SSH Host Keys Loaded
DSA Server Host Key FTRA-formatted Fingerprint=
84 7c 92 8b c 7c ds 19 1c 6 4b de 5c 8f c5 4d
Report Date:03-07-11 Time:22:27:36
```

Output

The following example shows what happens when you enter the **init-sys** command once and enter the **init-sys** command a second time within 30 seconds, causing the system to start resetting all of its cards.

init-sys

```
rlghncxa03w 04-01-07 07:05:00 EST  EAGLE 31.3.0
Command entered at terminal #3
```

```
rlghncxa03w 04-01-07 07:05:01 EST  EAGLE 31.3.0
CAUTION: This command causes a complete system reload, and
will result in traffic loss.
Re-enter command within 30 seconds to confirm.
```

init-sys

```
rlghncxa03w 04-01-07 07:05:16 EST  EAGLE 31.3.0
Command entered at terminal #3
```

```
rlghncxa03w 04-01-07 07:05:17 EST  EAGLE 31.3.0
Init System command issued at terminal #3
```

The following example shows what happens when you enter the **init-sys** command once and allow more than 30 seconds to pass with no other keyboard entry.

init-sys

```
rlghncxa03w 04-01-05 07:05:00 EST  EAGLE 31.3.0
Command entered at terminal #3.
```

```
rlghncxa03w 04-01-05 07:05:01 EST  EAGLE 31.3.0
CAUTION: This command causes a complete system reload, and
will result in traffic loss.
Re-enter command within 30 seconds to confirm.
```

```
rlghncxa03w 04-01-05 07:05:31 EST  EAGLE 31.3.0
Init System command aborted due to confirmation timeout
```

The following example shows what happens when you enter the **init-sys** command once and enter a different command (**rls-alm:lvl=minr**), letting the 30-second timer expire for the second entry of the **init-sys** command.

init-sys

```
rlghncxa03w 04-01-05 07:05:00 EST  EAGLE 31.3.0
Command entered at terminal #3
```

```
rlghncxa03w 04-01-05 07:05:01 EST  EAGLE 31.3.0
CAUTION: This command causes a complete system reload, and
will result in traffic loss.
Re-enter command within 30 seconds to confirm.
```

rls-alm:lvl=minr

```
rlghncxa03w 04-01-05 07:05:10 EST  EAGLE 31.3.0
Command entered at terminal #3
```

```
rlghncxa03w 04-01-05 07:05:11 EST  EAGLE 31.3.0
All the minor alarms are released
```

```
rlghncxa03w 04-01-05 07:05:12 EST  EAGLE 31.3.0
Command Completed
```

```
rlghncxa03w 04-01-05 07:05:31 EST  EAGLE 31.3.0
Init System command aborted due to confirmation timeout
```

The following example shows what happens when the **init-sys** command is entered twice within 30 seconds, and specifies the **data=persist** parameter to perform a warm restart of the requested cards without reloading the database to the cards.

init-sys:data=persist

```
rlghncxa03w 04-01-05 07:05:31 EST  EAGLE 31.3.0
Command entered at terminal #3
```

```
rlghncxa03w 04-01-05 07:05:31 EST  EAGLE 31.3.0
CAUTION: This command causes a complete system reload, and will result in
traffic loss.
Re-enter command within 30 seconds to confirm.
```

```
init-sys:data=persist
rlghncxa03w 04-01-05 07:05:31 EST  EAGLE 31.3.0
Command entered at terminal #3
rlghncxa03w 04-01-05 07:05:31 EST  EAGLE 31.3.0
Init System command issued at terminal #3
```

lock

Lock Keyboard

Use this command to lock a terminal's keyboard. When the keyboard is locked, the system accepts no keyboard commands other than the **unlock** command. The keyboard remains locked until the logged on user's login password is entered at the UNLOCK prompt. When the keyboard is locked, any idle terminal monitor in effect for the terminal is suspended temporarily.

Keyword: lock

Related Commands: unlock

Command Class: Basic

Parameters

This command has no parameters.

Example

lock

Dependencies

The terminal cannot be an OAP terminal.

The terminal cannot be an **mgmt** terminal used for Network Surveillance.

The terminal cannot be a **telnet** terminal (terminal IDs 17-40).

Notes

As an alternative, you can unlock a locked terminal by entering the **inh-trm** command, followed by the **alw-trm** command.

Output

lock

```
rlghncxa03w 04-02-17 16:02:05 EST  EAGLE 31.3.0
Terminal keyboard is locked. Enter UNLOCK command to unlock.
;
```

login

Login

Use this command to log into the system. After you enter this command, the system requests a password. For security reasons, the password is not displayed at the terminal.

Keyword: login

Related Commands: act-user, chg-pid, chg-secu-dflt, chg-user, dact-user, dlt-user, ent-user, logout, rept-stat-user, rtrv-secu-dflt, rtrv-secu-user, rtrv-user

Command Class: Basic

Parameters

:uid= (mandatory)

User ID. The system prompts the user for a valid password after entering in this ID.

Range: azzzzzzzzzzzzzzzz

1 alphabetic character followed by up to 15 alphanumeric characters

Example

login:uid=john

Dependencies

All the following dependencies assume the appropriate features are turned **on**.

The user ID must not be logged in to another port already, and it must not be revoked.

The user ID must have been logged in successfully within the number of days specified on the **uout** parameter of the **ent-user** command.

If the OA&M IP Security Enhancements feature is not turned on, you cannot change the password at the prompt from an IP User Interface telnet terminal (IDs 17-40) when:

- It is the first time the user is logging in with the assigned Userid and password
- The password has expired because of aging out.
You must log in with a new Userid and password for the first time or change an expired password from a serial terminal (terminal IDs 1-16).

Use the following rules for creating passwords:

- A new password cannot contain more than 12 characters.
- A new password must contain at least the number of characters that you specify on the **minlen** parameter of the **chg-secu-dflt** command.
- A new password must contain at least the number of alphabetic (**alpha** parameter), numeric (**num** parameter), and punctuation (**punc** parameter) characters that you specify on the **chg-secu-dflt** command.
- A new password cannot contain the associated user ID.

Notes

The **act-user** command can be used in place of **login**. The **act-user** command has been provided in compliance with TL1 standards.

When a new system is shipped, the user ID and password are set to the system. These should be changed immediately to ensure system security.

Output

Not applicable.

logout

Logout

Use this command to end a user session. The **logout** command has the same affect as the **dact-user** and **canc-user** commands.

Keyword: logout

Related Commands: act-user, chg-pid, chg-user, dact-user, dlt-user, ent-user, login, rept-stat-user, rtrv-secu-user, rtrv-user

Command Class: Basic

Parameters

This command has no parameters.

Example

logout

Dependencies

This command cannot be entered from a terminal that is configured as an OAP terminal.

Notes

The **dact-user** or **canc-user** commands can be used in place of **logout**.

Output

logout

```
rlghncxa03w 06-06-05 07:05:31 EST EAGLE 35.0.0
Command Completed.
```

;

pass

Pass

Use this command to pass a command string to an individual card for processing. This command reduces the reliance on the OAM build for card and on application-specific information.

Keyword: pass

Related Commands:

Command Class: System Maintenance

Parameters

:cmd= (mandatory)

Command string including quotes (" "). The command represented in the quoted string is sent to the specified card. Maximum command string length including quotes is 132 characters.

Range: `////////////////////////////////////`

Any string of characters that represent a pass-through command. The string must be enclosed in double quotation marks.

The valid pass-through commands are **arp**, **aslog**, **asplog**, **assocrtt**, **connmgr**, **drklog**, **ftptest**, **help**, **linkinfo**, **msucount**, **msuroute**, **msutrace**, **netstat**, **nslookup**, **ping**, **sctp**, **sockrtt**, **sockstate**, **traceroute**, **ualog**, **soipdata**, **soiplog**.

See "Pass-Through Commands" for information on pass-through commands.

NOTE: Pass-through commands shown in online help that are not documented in Chapter 7 are not supported at this time.

:loc= (mandatory)

Card address. The card location as stenciled on the shelf of the system.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208,**

4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218,
5301-5308, 5311-5318, 6101-6108, 6111-6118

:proc= (optional)

Processor type.

Range: **appl, com**

appl — Application processor

com — Communication processor

Default: **appl**

Example

```
pass:loc=1201:cmd="ping 198.89.1.2"
```

```
pass:loc=1201:cmd="help"
```

```
pass:loc=1111:cmd="soipdata -f"
```

Dependencies

The **loc** parameter value must correspond to a card location for:

- An SSEDCM or E5-ENET card that runs the **ss7ipgw**, **ipgwi**, **iplim**, or **iplimi** application
- An STC card or E5-STC card that runs the **eroute** application
- An IPSM card or E5-IPSM card that runs the **ips** application
- An SSEDCM card or E5-SLAN card that runs the **stplan** application
- A Service Module card that runs the **vsccp** application
- An E5-TSM card that runs the **gls** application

The specified card location is out of range.

Syntax error found in the **pass** command.

Card is not in service

Pass command not found.

Notes

See "Pass-Through Commands" for information on pass-through commands.

Output

The following example is not definitive of the output of the **ping** command. It is intended to show how **pass** command output from a card might appear.

```
pass:loc=1201:cmd="ping 198.89.1.2"
  rlgncxa03w 04-02-17 15:35:05 EST EAGLE 31.3.0
  ping - Command Accepted by 1201.
  PASS: MASP A - COMPLTD
;
  OUTPUT FROM 1201:
  Pinging 192.168.100.4 with 32 bytes of data:
  Reply from 192.168.100.3: bytes=32 time<10ms TTL=255
  Reply from 192.168.100.3: bytes=32 time<10ms TTL=255
  Reply from 192.168.100.3: bytes=32 time=140ms TTL=255
  Reply from 192.168.100.3: bytes=32 time=10ms TTL=255
  ping - Command Completed.
  END OUTPUT FROM 1201.
```

The following example is not definitive of the output of the **soipdata** command. It is intended to show how **pass** command output from a card might appear.

```
pass:loc=1111:cmd="soipdata -f"
  tekelecstp 02-12-18 22:14:02 IST EAGLE 37.5.0
  SOIPDATA: SR-5129 Operational Data Report

  Operational Data

  Reason                                                    Count
  -----
  Message Received with Bad Source                        673
  Message Received with Bad Destination                    205
  Message Received with Bad Version                       194
  Number of Goodday Message Received                     5387
  Number of Error Messages Sent                           45
  Number of UPL Messages Received                         78666
  Number of UPL Messages Sent                             83577

  SOIPDATA: Command complete.
```

rept-ftp-meas

Report Measurements to FTP

Use this command to manually initiate generation and FTP transfer of a measurements report from the Measurements Platform MCPM to the customer's FTP server.

Keyword: **rept-ftp-meas**

Related Commands: **rept-meas**

Command Class: Link Maintenance

Parameters

:enttype= (mandatory)

Entity type to report on in the measurements report.

Range: **eir**, **link**, **lnkset**, **lnp**, **lsdestni**, **lsonismt**, **lsorigni**, **mapscrn**, **np**, **origni**, **origninc**, **stp**, **stplan**, **tt**, **sctpasoc**, **sctpcard**, **ua**, **vflex**, **atinpq**
eir — Measurements for Equipment Identity Register
link — Measurements for signaling links
lnkset — Measurements for linksets
lnp — Measurements for local number portability
lsdestni — Measurements for linkset destination network identifiers

lsonismt — Measurements for ISUP message type screening
lsorigni — Measurements for linkset originating network identifiers
mapscrn — Measurements for GSM MAP message screening
np — Measurements for INP, G-Port, A-Port, and IGM
origni — Measurements for originating network identifiers greater than 5
origninc — Measurements for originating network identifiers (less than 5, small networks) for network clusters
stp — Measurements for all nodes
stplan — Measurements for TCP/IP links.
tt — Measurements for translation types
sctpasoc — Measurements per association for the SCTP protocol (used to carry M3UA, M2PA, and SUA traffic)
sctpcard — Measurements per card for the SCTP protocol (used to carry M3UA, M2PA, and SUA traffic)
ua — Measurements per application server/association for the M3UA and SUA protocols
vflex — Measurements for V-Flex
atinpq — Measurements for ATINP

:type= (mandatory)

The measurement report type.

Range: **avl, avld, avldth, comp, gtwy, mtcd, mtcdth, mtch, mtcs, nm, rbase, systot**

avl — Availability measurements

avld — Daily availability measurements

avldth — Day to hour availability measurements.

comp — Component measurements

gtwy — Internetwork gateway-related data from the STP for ANSI and ITU measurements. ANSI gateway measurements are pegged on a per-linkset, per-Network Indicator basis, whereas ITU measurements are pegged on a per-linkset basis.

mtcd — Daily maintenance measurements

mtcdth — Day-to-hour maintenance measurements

mtch — Hourly maintenance measurements

mtcs — Link/linkset maintenance status

nm — Network management, on-demand

rbase — Schedule-report type record base measurements

systot — STP system totals

:day= (optional)

Day of the week for the specified daily measurement report.

Range: **mon, tue, wed, thu, fri, sat, sun**

Default: If not specified, the previous single day is reported.

:hh= (optional)

The specific half-hour for the specified report. The entry implies the ending time for the collection interval. For example, the parameter **hh=0300** generates a report for the interval 2:30-3:00.

Range: **0000-2400**

hhmm where *hh* = **00-24** (hour) and *mm* = **00** or **30** (minute)

:period= (optional)

The relative period for the report.

Range: **active, last, specific**

:qh= (optional)

The specific quarter-hour for the specified report. The entry implies the ending time for the collection interval. For example, the parameter **qh=0315** generates a report for the interval **3:00-3:15**.

Range: **0000-2400**
hhmm where *hh* = **00-24** (hour) and *mm* = **00, 15, 30, or 45** (minute)

Example

rept-ftp-meas:type=systot:enttype=stp
rept-ftp-meas:type=mtch:enttype=lnp
rept-ftp-meas:type=mtcd:enttype=sctpasoc

Dependencies

The **rept-ftp-meas** command cannot be used to specify a report type if that report type is currently printing.

The Measurements Platform feature must be turned on (**chg-feat** command) before this command can be entered.

A primary MCPM card must be available when this command is entered.

The 15 Minute Measurements feature must be turned on and the 15 Minute Measurements collection option (**chg-measopts:collect15min=on** command) must be on before the **qh** parameter can be specified.

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before:

- The **mtchlnp=on** parameter or the **mtcdlnp=on** parameter can be specified
- Entity type **lnp** can be specified

The GSM Map Screening feature (see the **enable-ctrl-feat** and **chg-ctrl-feat** commands) must be turned on before:

- The **mtcdmap=on** parameter can be specified.
- Entity type **mapscrn** can be specified

The Equipment Identity Register (EIR) feature must be enabled and turned on before the **enttype=eir** parameter can be specified.

The **hh** parameter must specify a half-hourly boundary (the end of the requested half-hour for the report) for valid report types (**avld(th)**, **mtcd(th)**, **mtch**, **nm**, **rbase**, and **mtcs** are excluded with message “E2307: QH or HH is not valid for this TYPE”).

The **qh** parameter must specify a quarter-hourly boundary (the end of the requested quarter-hour for the report) for valid report types (**avld(th)**, **mtcd(th)**, **mtch**, **nm**, **rbase**, and **mtcs** cannot be specified.

Hourly collection and report processing cannot be in progress when report type **mtch** is specified.

Day-to-hour collection and report processing cannot be in progress

- When report type **mtcd** is specified
- When report type **mtcdth** is specified

Daily collection and report processing cannot be in progress when report type **mtcd** is specified.

Half-hourly collection and report processing cannot be in progress when report type **comp**, **systot**, **avl**, or **gtwy** is specified.

Quarter-hourly collection and report processing cannot be in progress when report type **comp**, **systot**, **avl**, or **gtwy** is specified.

5-minute collection and report processing cannot be in progress when report type **nm** is specified.

The **mtcdth** report type is unavailable between midnight and 1:00 AM (0100).

The **day** parameter can be specified only for report type **mtcd** and entity types **eir**, **lnp**, **np**, **vflex**, and **mapscrn**.

The **hh** and **qh** parameters cannot be specified together in the command.

When the **period=last** parameter is specified, the **hh** parameter, the **qh** parameter, and the **day** parameter cannot be specified.

When the **period=active** parameter is specified, the **hh** parameter, the **qh** parameter, and the **day** parameter cannot be specified.

When the **period=specific** parameter is specified, the **hh** parameter, the **qh** parameter, or the **day** parameter must be specified.

A half-hour boundary must be specified for the **hh** parameter, except for report type **mtch**; an hourly boundary must be specified for report type **mtch**.

A quarter-hour boundary must be specified for the **qh** parameter, except for report type **mtch**.

Table 5-58 indicates with an X valid parameter combinations for measurements reports; invalid combinations will generate an error message.

Table 5-58. rept-ftp-meas Valid and Invalid Parameter Combinations

Parameter Value	:type Parameter Values											
	avl	avld	avldth	comp	gtwy	mtcd	mtcdth	mtch	mtcs	nm	systot	rbase
:entity												
atinq						X		X				
eir						X		X				
link	X	X	X	X		X	X		X	X		X
lnkset				X	X	X	X		X	X		X
lnp						X		X		X		
lsdestni					X							
lsorigni					X							
lsonismt					X							
mapscrn						X		X				
np						X		X				
origni					X							
origninc					X							
sctpasoc				X		X	X					
sctpcard				X		X	X				X	X
stp					X	X	X			X	X	X
stplan	X					X	X				X	

Table 5-58. **rept-ftp-meas** Valid and Invalid Parameter Combinations

Parameter Value	:type Parameter Values											
	avl	avld	avldth	comp	gtwy	mtcd	mtcdth	mtch	mtcs	nm	systot	rbase
tt											X	
ua				X		X	X					
:period												
last	X	X	X	X	X	X	X	X		X	X	
specific	X			X	X	X		X			X	
active									X			X

The G-Port, INP, A-Port, or IS41 GSM Migration feature must be turned on before the **mtchnp=on** parameter, **mtcdnp=on** parameter, or **enttype=np** parameter can be specified.

An hourly boundary must be specified for report type **mtch**.

The Measurements Platform collection function (**chg-measopts:platformenable=on** command) must be enabled before this command can be entered.

The V-Flex feature must be turned on before the **enttype=vflex** parameter can be specified.

The ATI Number Portability Query (ATINP) feature must be enabled before the **mtchatinpq=on** parameter or the **mtcdatinpq=on** parameter can be specified.

Notes

None

Output

```
rept-ftp-meas:type=mtcd:enttype=vflex
tekelecstp 07-08-29 15:31:25 EST EAGLE 37.6.0
FTP measurement report request sent to primary MCP.

tekelecstp 07-08-29 15:31:26 EST EAGLE 37.6.0
Measurement Server Connection Successful

tekelecstp 07-08-29 15:31:29 EST EAGLE 37.6.0
REPT-FTP-MEAS request was successful.
;

rept-ftp-meas:type=mtch:enttype=atinpq
tekelecstp 08-08-01 15:31:25 EST EAGLE 39.2.0
FTP measurement report request sent to primary MCP.

tekelecstp 08-08-01 15:31:25 EST EAGLE 39.2.0
Measurement Server Connection Successful

tekelecstp 08-08-01 15:31:25 EST EAGLE 39.2.0
REPT-FTP-MEAS request was successful.
;
```

rept-imt-info

Display IMT Error and Use Statistics

Use this command to display the following statistics:

- The IMT bus error statistics currently stored in the IMT fault isolation hourly statistics
- The current IMT bus use statistics (Bus use is the percentage of the capacity of the IMT bus that is used for data during a particular time.)
- The HMUX and HIPR card error statistics

Keyword: rept-imt-info

Related Commands: clr-imt-stats, init-imt-gpl, rept-imt-lvl1, rept-imt-lvl2, tst-imt

Command Class: System Maintenance

Parameters

:report= (mandatory)

Type of report to generate.

Range: **err, util, hmutexerr, hiprerr**

err— Produces a report of the IMT bus error statistics

util— Produces a report of the IMT bus use (utilization) statistics

hmutexerr— Produces a report of the HMUX card error statistics

hiprerr— Produces a report of the HIPR card error statistics

:ebucket= (optional)

End bucket. Specifies the last one-hour time period (*bucket*) for which error statistics are reported.

This parameter cannot be specified when **report=util** is specified.

Range: **0-15**

Default: If **sbucket** is specified—current **sbucket** value; information for only that time period is displayed.

If **sbucket** is not specified—**15**, the report includes statistics for all 16 time periods

:eloc= (optional)

End location. Specifies the card location of the last card in the range for the report.

Range: **1101-1113, 1115, 1201-1218, 1301-1318, 2101-2118, 2201-2218, 2301-2318, 3101-3118, 3201-3218, 3301-3318, 4101-4118, 4201-4218, 4301-4318, 5101-5118, 5201-5218, 5301-5318, 6101-6118**

Default: If **sloc** is specified—current **sloc** value; displays information for one card

If **sloc** is not specified—**1115**, which corresponds to IMT address 251 (**e=251**); displays information for entire range of locations.

:erronly= (optional)

Use this parameter to filter output to display only non-zero counts in the error report.

This parameter can be specified only if **report=err** is specified.

Range: **yes, no**

Default: **yes**

:eshelf= (optional)

End shelf location for HMUX or HIPR statistics. This parameter specifies the shelf location of the last shelf in the range.

This parameter can be specified only if **report=hmutexerr** or **report=hiprerr** is specified.

Range: **1100, 1200, 1300, 2100, 2200, 2300, 3100, 3200, 3300, 4100, 4200, 4300, 5100, 5200, 5300, 6100**

Default: If **sshelf** is specified—current **sshelf** value.

If **sshelf** is not specified—**6100**, displays information for entire range of shelves.

:eslot= (optional)

Ending slot location for HIPR statistics for the cards in the HIPR shelf.

This parameter can be specified only if **report=hiprerr** is specified.

Range: 1-8, 11-18

Default: If **sslot** is specified—current **sslot** value.

If **sslot** is not specified—not used.

:mode= (optional)

Display mode to use for error report.

This parameter can be specified only if **report=err** is specified.

Range: full, stats, summary

full—Displays information for each card along with a summary report

stats—Displays only individual card statistics

summary—Displays the summary portion of the report

Default: summary

:sbucket= (optional)

Start bucket. Specifies the first one-hour time period (bucket) for which error statistics are reported.

This parameter cannot be specified when **report=util** is specified.

Range: 0-15

Default: 0

:sloc= (optional)

Start location. Specifies the card location of the first card in the range for the report.

Range: 1101-1113, 1115, 1201-1218, 1301-1318, 2101-2118, 2201-2218, 2301-2318, 3101-3118, 3201-3218, 3301-3318, 4101-4118, 4201-4218, 4301-4318, 5101-5118, 5201-5218, 5301-5318, 6101-6118

Default: If **eloc** is specified—current **eloc** value.

If **eloc** is not specified—1201, which corresponds to IMT address 0; displays information for entire range of card locations.

:sshelf= (optional)

Start shelf location for HMUX or HIPR statistics. This parameter specifies the shelf location of the first shelf in the range.

This parameter can be specified only if **report=hmuxerr** or **report=hiprerr** is specified.

Range: 1100, 1200, 1300, 2100, 2200, 2300, 3100, 3200, 3300, 4100, 4200, 4300, 5100, 5200, 5300, 6100

Default: If **eshelf** is specified—current **eshelf** value.

If **eshelf** is not specified—1100, displays information for entire range of shelves.

:sslot= (optional)

Starting slot location for HIPR statistics for the cards in the HIPR shelf.

This parameter can be specified only if **report=hiprerr** is specified.

Range: 1-8, 11-18

Default: If **eslot** is specified—current **eslot** value.

If **eslot** is not specified—not used.

:trm= (optional)

The serial port (printer location) to which the report is to be sent.

Range: 1-16

Default: Report displays on the terminal where the command is issued

Example

```

rept-imt-info:report=err
rept-imt-info:report=err:sloc=1101:eloc=1102:mode=stats
rept-imt-info:report=err:sloc=1101:eloc=1102:mode=full:erronly=no
rept-imt-info:report=util
rept-imt-info:report=hmuxerr
rept-imt-info:report=hiprerr:sbucket=0
rept-imt-info:
report=hiprerr:sshelf=1100:sslot=1:eslot=2:sbucket=0

```

Dependencies

No related IMT command can be in progress when the **rept-imt-info** command is entered. Only one report can be active at a time.

This command cannot be entered at a telnet terminal (terminal ID 17-40).

The **rept-imt-info** command cannot be entered during an IMT statistics collection period following an hourly boundary (IMT performance monitoring).

The following **report** parameter combinations are not valid in the command:

- When the **report=util** parameter is specified, the **ebucket**, **erronly**, **mode**, and **sbucket** parameters cannot be specified.
- When the **report=hmuxerr** parameter or the **report=hiprerr** parameter is specified, the **erronly** and **mode** parameters cannot be specified.
- When the **report** parameter values **err**, **util**, and **hmuxerr** are specified, the **sslot** and **eslot** parameters cannot be specified.

The ending hourly time period cannot be less than the starting hourly time period. For example, **rept-imt-info:report=err:sbucket=5:ebucket=3** cannot be specified.

When the **sslot** and **eslot** parameters are specified, the **sshelf** parameter must be specified and the **eshelf** parameter cannot be specified (slot information is reported for a single shelf).

The **sshelf** and **eshelf** parameters can be specified only when the **report=hmuxerr** parameter or the **report=hiprerr** parameter is specified.

The HIPR card slots (**09** and **10**) cannot be specified for the **sslot** and **eslot** parameter values.

The STP options **hmuxabus** or **hmuxbbus** must have their value set to **yes** when the **sshelf** and **eshelf** parameters are specified.

A card location that is valid and defined in the database must be specified.

Notes

This command can be canceled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

IMT Bus Error Statistics: Each hourly time period (*bucket*) contains the IMT bus error statistics for a single hour. A total of 16 hourly time periods, numbered **0** to **15**, exist. Hourly time period **0** is the most-recent (current), and hourly time period **15** is the least-recent (oldest).

Each hour the statistics for the current hourly time period expire, and the hourly time periods advance. That is, after the advance, the statistics previously reported in hourly time period **0** are now reported in the hourly time period **1**, and so on. The statistics reported in the hourly time period **15** are no longer available after the change.

When a card is reinitialized, it begins collecting statistics in hourly time period **0** and changes to hourly time period **1** at the start of the next hour. Thus, the first statistics that a card collects after being reinitialized may be for a partial hour.

IMT Bus Use Statistics: The statistics are calculated for all cards in the specified range and summarized. Only the summarized statistics are displayed. *IMT bus use* is the percentage of the capacity of the IMT bus that is used for data during a particular time.

HMUX or HIPR Statistics (Bucket Summary): Each hourly time period (*bucket*) contains the HMUX or HIPR statistics for a single hour. A total of 16 hourly buckets, numbered **0** to **15**, exist. Bucket **0** is the most-recent (current) bucket; bucket **15** is the least-recent (oldest).

Each hour on the hour, the least-recent bucket expires and the hourly time periods advance. That is, after the advance, the statistics previously reported in bucket **0** are now reported in bucket **1**, and so on. The statistics that were reported in bucket **15** are no longer available after the change.

If a card booted within the past 16 hours, a message is displayed indicating that no data is available for that card. When a card boots, it starts to collect statistics in bucket **0**. It changes to bucket **1** at the start of the next hour. Thus, the first bucket of statistics that a card collects after booting might be for part of an hour.

A HIPR card stores the statistics separately for each card on its shelf. When the **sloc** and **eloc** parameters are specified, the HIPR card sends the statistics for each card to the OAM application for display. When the **sloc** and **eloc** parameters are not specified, the HIPR card sends an aggregate number to the OAM application to represent statistics for all cards on its shelf.

HMUX or HIPR Statistics (Cumulative): HMUX or HIPR cumulative statistics maintain running totals of the error count for each parameter from card initialization. The error counts can be cleared by entering a **clr-imt-stats:all=yes** command to clear all HMUX and HIPR cards, or a **clr-imt-stats** command to clear a specific card.

Table 5-59 explains the **rept-imt-info:report=hmuxerr** statistics.

"Excessive" is primarily determined by the operator, based upon:

- Overall system behavior
- Duration of time since the last statistics were taken
- Statistics of an individual card in relation to other cards

Table 5-59. Explanation of **rept-imt-info:report=hmuxerr** Statistics

IMT Statistic	Explanation Of Statistic	Probable Causes	Recommended Action
LOW SPEED STATS			
IMT Rx Packet CRC Error	Bad Checksum in received IMT packet. Usually caused by corrupted data. Detected by hardware.	Card insertion/ removal or boot. May occur infrequently in a normal system.	None if card has booted or was just inserted. Otherwise, call Tekelec Technical Services if count is excessive in relation to other cards.
IMT Rx Packet	Occurs when the Start of Message byte of the IMT packet is followed by	Card insertion/removal or boot.	None if card has booted or was just inserted. Otherwise call Tekelec

Table 5-59. Explanation of **rept-imt-info:report=hmuxerr** Statistics

IMT Statistic	Explanation Of Statistic	Probable Causes	Recommended Action
Format Error	unexpected data. Detected by hardware.		Technical Services if count is excessive in relation to other cards.
IMT Rx Violation Error	Received an illegal character from the IMT. Detected by hardware.	Card insertion/removal or boot.	None if card has booted or was just inserted. Otherwise call Tekelec Technical Services if count is excessive in relation to other cards.
CPU Rx FIFO Full	HMUX's IMT interface is congested. Detected by hardware.	Indicates that data was received at a higher rate than could be processed	Call Tekelec Technical Services if count is excessive in relation to other HMUX cards.
CPU Rx FIFO Half Full	HMUX's IMT interface is becoming congested. Detected by hardware.	Indicates that data was received at a higher rate than could be switched for a short period.	None. FIFO half full is just an indication; no action is required.
CPU Rx FIFO Empty Before SOM	Occurs when valid packet data is read from the CPU Rx FIFO by the FPGA but the FPGA is unable to locate the beginning (SOM) of the packet before all the data was read.	The SOM was corrupted while being written into the CPU Rx FIFO from the low speed link.	None. This error will automatically empty the FIFO so that it is ready to continue receiving data. However, if the problem persists, there might be some type of FPGA problem that requires further investigation.
CPU Rx FIFO Empty Before EOM	Occurs when valid packet data is read from the CPU Rx FIFO by the FPGA but the FPGA is unable to locate the end (EOM) of the packet before all of the data was read.	The SOM was corrupted while being written into the CPU Rx FIFO or a partial packet was written into the FIFO from the low speed link.	None. This error will automatically empty the FIFO so that it is ready to continue receiving data. If the problem persists, some type of FPGA or high-speed link problem might require further investigation.
CPU Rx Packet SOM Before EOM	A Start of Message was received when an End of Message was expected from the IMT bus.	Packet was corrupted in the system (EOM lost) and has another packet appended to it.	None.

Table 5-59. Explanation of **rept-imt-info:report=hmuxerr** Statistics

IMT Statistic	Explanation Of Statistic	Probable Causes	Recommended Action
CPU Rx Packet CRC Error	Occurs when valid packet data is read from the CPU Rx FIFO by the FPGA and transferred to the processor memory, and the FPGA calculated CRC does NOT match the CRC word at the end of the packet.	The data was corrupted while being written into the CPU Rx FIFO, or data coming from the low speed link is corrupted.	None. If the problem persists, some type of FPGA or high-speed link problem might require further investigation.
DMA Terminal Count Interrupt	Received IMT packet length is longer than the max allowed. Detected by hardware.	Card insertion/removal or boot.	None if card has booted or was just inserted. Otherwise, call Tekelec Technical Services if count is excessive in relation to other cards.
CPU Tx Buffer EOB	A packet that was being transmitted from the CPU Tx Buffer did not have an EOM. Therefore, the full 512 bytes from the Tx buffer were transmitted.	The data was corrupted while being written into or being read from the FIFO.	None. If the problem persists, some type of FPGA problem might require further investigation.
CPU Tx Buffer Full	The Tx Buffer has had 512 bytes written to it and can accept no more.	A packet is being sent that is too large.	Write the EOM insert command to send the packet, write an abort command to reset the Tx buffer control interface, or issue a Tx Buffer reset from the processor.
CPU Tx Buffer Half Full	The Tx Buffer has had 256 bytes written to it.	256 bytes have been written to the Tx Buffer.	None.
IMT Bypass FIFO Full	The IMT Bypass FIFO has 32K bytes of data in it.	The low-speed link is experiencing very heavy traffic conditions, or the HMUX IMT Transmitter has been disabled or is not operating correctly.	Determine why IMT traffic is so heavy. Make sure the HMUX IMT Transmitter is enabled.

Table 5-59. Explanation of **rept-imt-info:report=hmuxerr** Statistics

IMT Statistic	Explanation Of Statistic	Probable Causes	Recommended Action
IMT Bypass FIFO Half Full	The IMT Bypass FIFO has 16K bytes of data in it.	The low-speed link is experiencing very heavy traffic conditions, or the HMUX IMT Transmitter has been disabled or is not operating correctly.	Determine why IMT traffic is so heavy. Make sure the HMUX IMT Transmitter is enabled. Under normal operation this condition should clear itself.
IMT Tx FIFO Full	HMUX's IMT Transmitter FIFO Full	TAXI transmitter logic for this channel is not operating properly.	Reset Tx FIFO. If all channels exhibit this problem, there might be an internal FPGA problem with the 125MHz clock.
IMT Tx FIFO Half Full	HMUX's IMT Transmitter Half FIFO Full	High burst rate or multiple large packet transmissions from IXP1250.	None
HIGH SPEED STATS			
IMT Rx Packet Format Error	Packet was received with a format error (for example, no EOM)	Packet was transmitted incorrectly or was corrupted by another device in the system.	None
IMT Rx Disparity Error	Fibre Channel transceiver received a disparity error on a character.	Noisy high-speed ring.	This is a hardware level issue. If the error persists, more detailed high-speed bus analysis is required.
IMT Rx Sync Lost Error	Fibre Channel transceiver is not receiving sync characters	Noisy high-speed ring. High-speed cable was disconnected. One of the HMUXs in the ring was removed.	This is a hardware level issue. If the error persists, more detailed high-speed bus analysis is required.
IMT Rx Code Word Error	Fibre Channel transceiver has received an invalid code word.	Noisy high-speed ring. Wrong command transmitted.	This is a hardware level issue. If the error persists, more detailed high-speed bus analysis is required.
CPU Receive FIFO Full	Communication CPU on the card is congested. Detected by hardware	Indicates that data was received at a higher rate than could be processed	Call Tekelec Technical Services if count is

Table 5-59. Explanation of **rept-imt-info:report=hmuxerr** Statistics

IMT Statistic	Explanation Of Statistic	Probable Causes	Recommended Action
		by the Communications processor.	excessive in relation to other cards.
CPU Receive FIFO Half Full	Communication CPU on the card is becoming congested. Detected by hardware.	Indicates that data was received at a higher rate than could be processed for a short period.	None. FIFO half full is just an indication; no action is required.
CPU Rx FIFO Empty Before SOM	Occurs when valid packet data is read from the CPU Rx FIFO by the FPGA, but the FPGA is unable to locate the beginning (SOM) of the packet before all the data was read.	The SOM was corrupted while being written into the CPU Rx FIFO from the high speed link.	None. This error will automatically empty the FIFO so that it is ready to continue receiving data. However, if the problem persists, there might be some type of FPGA problem that requires further investigation.
CPU Rx FIFO Empty Before EOM	Occurs when valid packet data is read from the CPU Rx FIFO by the FPGA, but the FPGA is unable to locate the end (EOM) of the packet before all of the data was read.	The SOM was corrupted while being written into the CPU Rx FIFO, or a partial packet was written into the FIFO from the high speed link.	None. This error will automatically empty the FIFO so that it is ready to continue receiving data. If the problem persists, some type of FPGA or low-speed link problem might require further investigation.
CPU Rx Packet SOM Before EOM	A Start of Message was received when an End of Message was expected from the Fibre Channel bus.	Packet was corrupted in the system (EOM lost) and has another packet appended to it.	None.
CPU Rx Packet CRC Error	A packet received for this shelf contains a CRC error.	Packet was transmitted incorrectly or was corrupted by another device in the system.	Discard packet. If this problem persists, a more detailed analysis of the system is needed.
DMA Terminal Count Interrupt	Received IMT packet length (on Fibre Channel) is longer than the maximum allowed. Detected by hardware.	Card insertion/removal or boot.	None if card has booted or was just inserted. Otherwise call Tekelec Technical Services if count is excessive in relation to other cards.

Table 5-59. Explanation of **rept-imt-info:report=hmuxerr** Statistics

IMT Statistic	Explanation Of Statistic	Probable Causes	Recommended Action
CPU Tx Buffer EOB	A packet that was being transmitted from the CPU Tx Buffer did not have an EOM. Therefore, the full 512 bytes from the Tx buffer were transmitted.	The data was corrupted while being written into or being read from the FIFO.	None. If the problem persists, some type of FPGA problem might require further investigation.
CPU Tx Buffer Full	The Tx Buffer has had 512 bytes written to it and can accept no more.	A packet is being sent that is too large.	Write the EOM insert command to send the packet, write an abort command to reset the Tx buffer control interface, or issue a Tx Buffer reset from the processor.
CPU Tx FIFO Half Full	The Tx Buffer has had 256 bytes written to it.	256 bytes have been written to the Tx Buffer.	None.
IMT (High-speed) Bypass FIFO Full	The High-speed Bypass FIFO has 2K bytes of data in it.	The high-speed link is experiencing very heavy traffic conditions, or the HMUX High-speed Transmitter has been disabled or is not operating correctly.	Determine why high-speed traffic is so heavy. Make sure the HMUX High-speed Transmitter is enabled.
IMT (High-speed) Bypass FIFO Half Full	The High-speed Bypass FIFO has 1K bytes of data in it.	The high-speed link is experiencing very heavy traffic conditions or the HMUX High-speed Transmitter has been disabled or is not operating correctly.	Determine why high-speed traffic is so heavy. Make sure HMUX High-speed Transmitter is enabled. Under normal operation this condition should clear itself.
IMT (High-speed) Rx FIFO Full	The High-speed Rx FIFO has 128K bytes of data in it.	The high-speed link is experiencing heavy traffic conditions. The Low-speed Transmitter is disabled, experiencing heavy traffic loads, or not operating correctly.	Determine why high-speed traffic is so heavy. Determine why low-speed traffic is so heavy. Make sure the HMUX Low-speed Transmitter is enabled.

Table 5-59. Explanation of **rept-imt-info:report=hmuxerr** Statistics

IMT Statistic	Explanation Of Statistic	Probable Causes	Recommended Action
IMT (High-speed) Rx FIFO Half Full	The High-speed Rx FIFO has 1K bytes of data in it.	The high-speed link is experiencing heavy traffic conditions. The Low-speed Transmitter is disabled, experiencing heavy traffic loads, or not operating correctly.	Determine why high-speed traffic is so heavy. Make sure the HMUX Low-speed Transmitter is enabled. Under normal operation this condition should clear itself.
MISC STATS			
Shelf ID UART Framing Error	UART Framing error received by HMUX in Shelf address data stream received from OAM.	Noisy or bad clock cable from Control Shelf to shelf in which error is reported.	Occasionally happens. This count should be low. Only if this count is VERY HIGH, bring it to the attention of Tekelec Technical Services.
Shelf ID UART Overrun Error	UART Overrun error received by HMUX in Shelf address data stream received from OAM.	Noisy or bad clock cable from Control Shelf to shelf in which error is reported.	Occasionally happens. This count should be low. Only if this count is VERY HIGH, bring it to the attention of Tekelec Technical Services.

Table 5-60 explains the **rept-imt-info:report=hiprerr** statistics.

"Excessive" is primarily determined by the operator, based upon:

- Overall system behavior
- Duration of time since the last statistics were taken
- Statistics of an individual card in relation to other cards

Table 5-60. Explanation of **rept-imt-info:report=hiprerr** Statistics

IMT Statistic	Explanation Of Statistic	Probable Causes	Recommended Action
LOW SPEED STATS			
IMT Rx Packet CRC Error	Bad Checksum in received IMT packet. Usually caused by corrupted data. Detected by hardware.	Card insertion, removal or boot. May occur infrequently in a normal system.	None if card has booted or was just inserted. Otherwise, call Tekelec Technical Services if count is excessive in relation to other cards.

Table 5-60. Explanation of **rept-imt-info:report=hiprerr** Statistics

IMT Statistic	Explanation Of Statistic	Probable Causes	Recommended Action
IMT Rx Packet Format Error	Occurs when the Start of Message byte of the IMT packet is followed by unexpected data. Detected by hardware.	Card insertion/removal or boot.	None if card has booted or was just inserted. Otherwise call Tekelec Technical Services if count is excessive in relation to other cards.
IMT Rx Violation Error	Received an illegal character from the IMT. Detected by hardware.	Card insertion/removal or boot.	None if card has booted or was just inserted. Otherwise, call Tekelec Technical Services if count is excessive in relation to other cards.
IMT Rx Command Error	An invalid TAXI command detected in a received packet.	Packet was corrupted in the system.	None.
IMT Rx FIFO Full	HIPR's IMT interface is congested. Detected by hardware.	Indicates that data was received at a higher rate than could be processed	Call Tekelec Technical Services if count is excessive in relation to other HIPR cards.
IMT Rx FIFO Half Full	HIPR's IMT interface is becoming congested. Detected by hardware.	Indicates that data was received at a higher rate than could be switched for a short period.	None. FIFO half full is just an indication; no action is required.
IMT Tx FIFO Full	HIPR's IMT Transmitter FIFO Full	TAXI transmitter logic for this channel is not operating properly.	Reset Tx FIFO. If all channels exhibit this problem, there might be an internal FPGA problem with the 125MHz clock.
IMT Tx FIFO Half Full	HIPR's IMT Transmitter Half FIFO Full	High burst rate or multiple large packet transmissions from IXP1250.	None
HIGH SPEED STATS			
IMT Rx Packet Format Error	Packet was received with a format error (for example, no EOM)	Packet was transmitted incorrectly or was corrupted by another device in the system.	None

Table 5-60. Explanation of **rept-imt-info:report=hiprerr** Statistics

IMT Statistic	Explanation Of Statistic	Probable Causes	Recommended Action
IMT Rx Disparity Error	Fibre Channel transceiver received a disparity error on a character.	Noisy high-speed ring.	This is hardware level issue. If the error persists, more detailed high-speed bus analysis is required.
IMT Rx Sync Lost Error	Fibre Channel transceiver is not receiving sync characters	Noisy high-speed ring. High-speed cable was disconnected. One of the HIPRs in the ring was removed.	This is hardware level issue. If the error persists, more detailed high-speed bus analysis is required.
IMT Rx Code Word Error	Fibre Channel transceiver has received an invalid code word.	Noisy high-speed ring. Wrong command transmitted.	This is hardware level issue. If the error persists, more detailed high-speed bus analysis is required.
IMT Rx Packet SOM Before EOM	A Start of Message was received when an End of Message was expected from the Fibre Channel bus.	Packet was corrupted in the system (EOM lost) and has another packet appended to it.	None.
IMT Rx Packet CRC Error	A packet received for this shelf contains a CRC error.	Packet was transmitted incorrectly or was corrupted by another device in the system	Discard packet. If this problem persists, a more detailed analysis of the system is needed.
IMT Bypass FIFO Full	The high-speed shelf bypass FIFO has been overflowed with data.	Fibre Channel transmit logic not operating correctly. Very high simultaneous data traffic rates on the high-speed ring and on the low-speed to high-speed path within the shelf.	System is operating above limits. Reduce data traffic. Reset FIFO.
IMT Bypass FIFO Half Full	The high-speed shelf bypass FIFO is half full.	Data traffic burst on the high-speed bus.	None
IMT Rx FIFO Full	The 128k FIFO has been overflowed with data.	IXP1250 not removing data from FPGA.	Reset FIFO. Determine why IXP1250 not removing data.
IMT Rx FIFO Half Full	The 128k FIFO has gone half full with data.	Large burst of traffic on high-speed ring.	None

Table 5-60. Explanation of **rept-imt-info:report=hiprerr** Statistics

IMT Statistic	Explanation Of Statistic	Probable Causes	Recommended Action
IMT Tx FIFO Full	The high-speed transmit FIFO has been overflowed with data.	The Fibre Channel transmit logic is not operating. The 106.25MHz is not operating. The data in the FIFO is incorrectly formatted (no EOM).	Reset Tx FIFO.
IMT Tx FIFO Half Full	The high-speed transmit FIFO is half full with data.	High burst rate or multiple large packet transmissions from IXP1250.	None
IXP Rx FIFO Full	IXP1250 FIFO has been overflowed with data.	IXP1250 not removing data from the FPGA. Data coming in faster than IXP1250 can process.	Reset the IXP1250 FIFO.
IXP Rx FIFO Half Full	IXP1250 FIFO is half full with data	Large burst of data on the high-speed ring.	None
MISC STATS			
Shelf ID UART Framing Error	UART Framing error received by HIPR in Shelf address data stream received from OAM.	Noisy or bad clock cable from Control Shelf to shelf in which error is reported.	Occasionally happens. This count should be low. Only if this count is VERY HIGH, bring it to the attention of Tekelec Technical Services.
Shelf ID UART Overrun Error	UART Overrun error received by HIPR in Shelf address data stream received from OAM.	Noisy or bad clock cable from Control Shelf to shelf in which error is reported.	Occasionally happens. This count should be low. Only if this count is VERY HIGH, bring it to the attention of Tekelec Technical Services.

Output

rept-imt-info:report=err

rlghncxa03w 04-02-27 12:47:07 EST EAGLE 31.3.0

IMT Fault Isolation Error Statistics

=====

SUMMARY REPORT: Totals accumulated from all requested cards for all buckets

Statistic	Bus A Value	Bus B Value
Rcv CRC Err	12	1
Primary Ctl Rcv Err	23	3
Violation Err	34	5
CPU Rcv FIFO Full	45	12

;

rept-imt-info:report=err:sloc=1101:eloc=1102:mode=stats

rlghncxa03w 04-02-27 12:47:07 EST EAGLE 31.3.0

IMT Fault Isolation Error Statistics

Totals accumulated from all requested cards for each bucket

Bucket	Statistic	Bus A Value	Bus B Value
00	Rcv CRC Err	1	2
	Rcv Invalid Len	1012345678	0
	CPU Rcv FIFO Full	23	123

01 No errors in this bucket.

.

. (data continues for each hourly time period)

;

rept-imt-info:report=err:sloc=1101:eloc=1102:mode=full:erronly=no

rlghncxa03w 04-02-27 12:47:07 EST EAGLE 31.3.0

IMT Fault Isolation Error Statistics

Totals accumulated from all requested cards for each bucket

Bucket	Statistic	Bus A Value	Bus B Value
00	Rcv CRC Err	0	0
	Rcv Format Err	0	0
	Rcv Invalid Len	1	0
	Primary Ctl Rcv Err	0	0
	Primary Ctl Tx Err	0	0
	Primary Ctl Sanity Err	0	0
	Violation Err	1	0
	IMT Rcv FIFO Half Full	0	0
	IMT Rcv FIFO Full	0	0
	CPU Rcv FIFO Half Full	0	0
	CPU Rcv FIFO Full	0	0
	MSU Retransmitted	0	0
	DMA Terminal Ct Intrpt	0	0
	SSU Pkts Txd	0	0
	SSU Pkts Rcvd	0	0
01	Rcv CRC Err	3	0
	Rcv Format Err	0	0
	Rcv Invalid Len	0	0
	Primary Ctl Rcv Err	0	0
	Primary Ctl Tx Err	0	0
	Primary Ctl Sanity Err	0	0
	Violation Err	0	0
	IMT Rcv FIFO Half Full	0	0
	IMT Rcv FIFO Full	0	0
	CPU Rcv FIFO Half Full	0	0

CPU Rcv FIFO Full	0	0
MSU Retransmitted	0	0
DMA Terminal Ct Intrpt	0	0
SSU Pkts Txd	0	0
SSU Pkts Rcvd	0	0

(data continues for each hourly time period)

=====

SUMMARY REPORT: Totals accumulated from all requested cards for all buckets

Statistic	Bus A Value	Bus B Value
Rcv CRC Err	3	0
Rcv Format Err	0	0
Rcv Invalid Len	1	0
Primary Ctl Rcv Err	1012345678	0
Primary Ctl Tx Err	0	0
Primary Ctl Sanity Err	0	0
Violation Err	1	0
IMT Rcv FIFO Half Full	0	0
IMT Rcv FIFO Full	0	0
CPU Rcv FIFO Half Full	23	0
CPU Rcv FIFO Full	0	0
MSU Retransmitted	0	0
DMA Terminal Ct Intrpt	0	0
SSU Pkts Txd	1	0
SSU Pkts Rcvd	0	0

;

rept-imt-info:report=util

rlghncxa03w 04-02-27 12:47:07 EST EAGLE 31.3.0

IMT Utilization Statistics

=====

SUMMARY REPORT: Combined statistics from all requested cards.

Statistic	Bus A Value	Bus B Value
Utilization	10%	9%
Pkts Tx	1234	613
Avg MSU Length (bytes)	73	152

;

Table 5-59 explains the meaning of each statistic that can be displayed in the **rept-imt-info:report=hmuxer r** output.

rept-imt-info:report=hmuxerr:sbucket=0

rlghncxa03w 04-02-27 12:47:07 EST EAGLE 31.3.0

HMUX SUMMARY REPORT: Summed across all requested shelves and buckets

HMUX Hourly Bucket Statistics

=====

Bucket	Low Speed Statistic	Bus A	Bus B
00	IMT Rx Packet CRC Error	0123456789	0123456789
	IMT Rx Packet Format Error	0123456789	0123456789
	IMT Rx Violation Error	0123456789	0123456789
	CPU Rx FIFO Full	0123456789	0123456789
	CPU Rx FIFO Half Full	0123456789	0123456789
	CPU Rx FIFO Empty Before SOM	0123456789	0123456789
	CPU Rx FIFO Empty Before EOM	0123456789	0123456789
	CPU Rx Packet SOM Before EOM	0123456789	0123456789
	CPU Rx Packet CRC Error	0123456789	0123456789
	DMA terminal count	0123456789	0123456789
	CPU Tx Buffer EOB	0123456789	0123456789
	CPU Tx Buffer Full	0123456789	0123456789

CPU Tx FIFO Half Full	0123456789	0123456789
IMT Bypass FIFO Full	0123456789	0123456789
IMT Bypass FIFO Half Full	0123456789	0123456789
IMT Rx FIFO Full	0123456789	0123456789
IMT Rx FIFO Half Full	0123456789	0123456789

High Speed Statistic	Bus A	Bus B
-----	-----	-----
IMT Rx Packet Format Error	0123456789	0123456789
IMT Rx Disparity Error	0123456789	0123456789
IMT Rx Sync Lost Error	0123456789	0123456789
IMT Rx Code Word Error	0123456789	0123456789
CPU Rx FIFO Full	0123456789	0123456789
CPU Rx FIFO Half Full	0123456789	0123456789
CPU Rx FIFO Empty Before SOM	0123456789	0123456789
CPU Rx FIFO Empty Before EOM	0123456789	0123456789
CPU Rx Packet SOM Before EOM	0123456789	0123456789
CPU Rx Packet CRC Error	0123456789	0123456789
DMA terminal count	0123456789	0123456789
CPU Tx Buffer EOB	0123456789	0123456789
CPU Tx Buffer Full	0123456789	0123456789
CPU Tx Buffer Half Full	0123456789	0123456789
IMT Bypass FIFO Full	0123456789	0123456789
IMT Bypass FIFO Half Full	0123456789	0123456789
IMT Rx FIFO Full	0123456789	0123456789
IMT Rx FIFO Half Full	0123456789	0123456789

Misc Speed Statistic	Bus A	Bus B
-----	-----	-----
Shelf ID UART Framing Error	0123456789	0123456789
Shelf ID UART Overrun Error	0123456789	0123456789

HMUX Cumulative Statistics

=====

Low Speed Statistic	Bus A	Bus B
-----	-----	-----
IMT Rx Packet CRC Error	0123456789	0123456789
IMT Rx Packet Format Error	0123456789	0123456789
IMT Rx Violation Error	0123456789	0123456789
CPU Rx FIFO Full	0123456789	0123456789
CPU Rx FIFO Half Full	0123456789	0123456789
CPU Rx FIFO Empty Before SOM	0123456789	0123456789
CPU Rx FIFO Empty Before EOM	0123456789	0123456789
CPU Rx Packet SOM Before EOM	0123456789	0123456789
CPU Rx Packet CRC Error	0123456789	0123456789
DMA terminal count	0123456789	0123456789
CPU Tx Buffer EOB	0123456789	0123456789
CPU Tx Buffer Full	0123456789	0123456789
CPU Tx FIFO Half Full	0123456789	0123456789
IMT Bypass FIFO Full	0123456789	0123456789
IMT Bypass FIFO Half Full	0123456789	0123456789
IMT Rx FIFO Full	0123456789	0123456789
IMT Rx FIFO Half Full	0123456789	0123456789

High Speed Statistic	Bus A	Bus B
-----	-----	-----
IMT Rx Packet Format Error	0123456789	0123456789
IMT Rx Disparity Error	0123456789	0123456789
IMT Rx Sync Lost Error	0123456789	0123456789
IMT Rx Code Word Error	0123456789	0123456789
CPU Rx FIFO Full	0123456789	0123456789
CPU Rx FIFO Half Full	0123456789	0123456789
CPU Rx FIFO Empty Before SOM	0123456789	0123456789

CPU Rx FIFO Empty Before EOM	0123456789	0123456789
CPU Rx Packet SOM Before EOM	0123456789	0123456789
CPU Rx Packet CRC Error	0123456789	0123456789
DMA terminal count	0123456789	0123456789
CPU Tx Buffer EOB	0123456789	0123456789
CPU Tx Buffer Full	0123456789	0123456789
CPU Tx Buffer Half Full	0123456789	0123456789
IMT Bypass FIFO Full	0123456789	0123456789
IMT Bypass FIFO Half Full	0123456789	0123456789
IMT Rx FIFO Full	0123456789	0123456789
IMT Rx FIFO Half Full	0123456789	0123456789

Misc Speed Statistic	Bus A	Bus B
-----	-----	-----
Shelf ID UART Framing Error	0123456789	0123456789
Shelf ID UART Overrun Error	0123456789	0123456789

rlghncxa03w 04-02-27 12:47:07 EST EAGLE 31.3.0
 HMX Maintenance Statistics

=====

HMX SUMMARY REPORT: Summed across all requested shelves and buckets

Low Speed Statistic	Bucket Summary		Cumulative	
	Bus A	Bus B	Bus A	Bus B
-----	-----	-----	-----	-----
IMT Rx Packet CRC Error	0123456789	0123456789	0123456789	0987654321
IMT Rx Packet Format Error	0123456789	0123456789	0123456789	0987654321
IMT Rx Violation Error	0123456789	0123456789	0123456789	0987654321
CPU Rx FIFO Full	0123456789	0123456789	0123456789	0987654321
CPU Rx FIFO Empty Before SOM	0123456789	0123456789	0123456789	0987654321
CPU Rx FIFO Empty Before EOM	0123456789	0123456789	0123456789	0987654321
CPU Rx Packet SOM Before EOM	0123456789	0123456789	0123456789	0987654321
CPU Rx Packet CRC Error	0123456789	0123456789	0123456789	0987654321
CPU Tx Buffer EOB	0123456789	0123456789	0123456789	0987654321
CPU Tx Buffer Full	0123456789	0123456789	0123456789	0987654321
CPU Tx FIFO Half Full	0123456789	0123456789	0123456789	0987654321
IMT Bypass FIFO Full	0123456789	0123456789	0123456789	0987654321
IMT Bypass FIFO Half Full	0123456789	0123456789	0123456789	0987654321
IMT Rx FIFO Full	0123456789	0123456789	0123456789	0987654321
IMT Rx FIFO Half Full	0123456789	0123456789	0123456789	0987654321
IMT Rx FIFO Sanity	0123456789	0123456789	0123456789	0987654321

High Speed Statistic	Bucket Summary		Cumulative	
	Bus A	Bus B	Bus A	Bus B
-----	-----	-----	-----	-----
IMT Rx Packet Format Error	0123456789	0123456789	0123456789	0987654321
IMT Rx Disparity Error	0123456789	0123456789	0123456789	0987654321
IMT Rx Sync Lost Error	0123456789	0123456789	0123456789	0987654321
IMT Rx Code Word Error	0123456789	0123456789	0123456789	0987654321
CPU Rx FIFO Full	0123456789	0123456789	0123456789	0987654321
CPU Rx FIFO Half Full	0123456789	0123456789	0123456789	0987654321
CPU Rx FIFO Empty Before SOM	0123456789	0123456789	0123456789	0987654321
CPU Rx FIFO Empty Before EOM	0123456789	0123456789	0123456789	0987654321
CPU Rx Packet SOM Before EOM	0123456789	0123456789	0123456789	0987654321
CPU Rx Packet CRC Error	0123456789	0123456789	0123456789	0987654321
CPU Tx Buffer EOB	0123456789	0123456789	0123456789	0987654321
CPU Tx Buffer Full	0123456789	0123456789	0123456789	0987654321
CPU Tx Buffer Half Full	0123456789	0123456789	0123456789	0987654321
IMT Bypass FIFO Full	0123456789	0123456789	0123456789	0987654321
IMT Bypass FIFO Half Full	0123456789	0123456789	0123456789	0987654321
IMT Bypass FIFO Sanity	0123456789	0123456789	0123456789	0987654321
IMT Rx FIFO Full	0123456789	0123456789	0123456789	0987654321

```
IMT Rx FIFO Half Full          0123456789 0123456789 0123456789 0987654321
```

```

Misc Statistic                  Bucket Summary                  Cumulative
                                Bus A      Bus B                  Bus A      Bus B
-----
Shelf ID UART Framing Error    0123456789 0123456789 0123456789 0987654321
Shelf ID UART Overrun Error    0123456789 0123456789 0123456789 0987654321

```

; Table 5-60 explains the meaning of each statistic that can be displayed in the **rept-imt-info:report=hiprerr** output.

rept-imt-info:report=hiprerr:sbucket=0

```
tekelecstp 05-01-12 14:01:34 EST EAGLE 33.0.0
HIPR Maintenance Statistics
```

```
=====
HIPR SUMMARY REPORT: Summed across all requested shelves and buckets
```

```
HIPR Hourly Bucket Statistics
=====
```

BUCKET	LOC	Low Speed Statistic	Bus A	Bus B
00	---	-----	-----	-----
		IMT Rx Packet CRC Error	0123456789	0123456789
		IMT Rx Packet Format Error	0123456789	0123456789
		IMT Rx Violation Error	0123456789	0123456789
		IMT Rx Command Error	0123456789	0123456789
		IMT Rx Packet CRC Error	0123456789	0123456789
		IMT Rx FIFO Full	0123456789	0123456789
		IMT Rx FIFO Half Full	0123456789	0123456789
		IMT Tx FIFO Full	0123456789	0123456789
		IMT Tx FIFO Half Full	0123456789	0123456789
		High Speed Statistic	Bus A	Bus B
		-----	-----	-----
		IMT Rx Packet Format Err	0123456789	0123456789
		IMT Rx Disparity Error	0123456789	0123456789
		IMT Rx Sync Lost Error	0123456789	0123456789
		IMT Rx Code Word Error	0123456789	0123456789
		IMT Rx Packet SOM Before EOM	0123456789	0123456789
		IMT Rx Packet CRC Error	0123456789	0123456789
		IMT Bypass FIFO Full	0123456789	0123456789
		IMT Bypass FIFO Half Full	0123456789	0123456789
		IMT Rx FIFO Full	0123456789	0123456789
		IMT Rx FIFO Half Full	0123456789	0123456789
		IMT Tx FIFO Full	0123456789	0123456789
		IMT Tx FIFO Half Full	0123456789	0123456789
		IXP Rx FIFO Full	0123456789	0123456789
		IXP Rx FIFO Half Full	0123456789	0123456789
		Misc Statistic	Bus A	Bus B
		-----	-----	-----
		Shelf ID UART Framing Error	0123456789	0123456789
		Shelf ID UART Overrun Error	0123456789	0123456789

```
HIPR CUMULATIVE Statistics
=====
```

Low Speed Statistic	Bus A	Bus B
-----	-----	-----
IMT Rx Packet CRC Error	0123456789	0123456789
IMT Rx Packet Format Error	0123456789	0123456789
IMT Rx Violation Error	0123456789	0123456789
IMT Rx Command Error	0123456789	0123456789
IMT Rx Packet CRC Error	0123456789	0123456789

IMT Rx FIFO Full	0123456789	0123456789
IMT Rx FIFO Half Full	0123456789	0123456789
IMT Tx FIFO Full	0123456789	0123456789
IMT Tx FIFO Half Full	0123456789	0123456789
High Speed Statistic	Bus A	Bus B
-----	-----	-----
IMT Rx Packet Format Err	0123456789	0123456789
IMT Rx Disparity Error	0123456789	0123456789
IMT Rx Sync Lost Error	0123456789	0123456789
IMT Rx Code Word Error	0123456789	0123456789
IMT Rx Packet SOM Before EOM	0123456789	0123456789
IMT Rx Packet CRC Error	0123456789	0123456789
IMT Bypass FIFO Full	0123456789	0123456789
IMT Bypass FIFO Half Full	0123456789	0123456789
IMT Rx FIFO Full	0123456789	0123456789
IMT Rx FIFO Half Full	0123456789	0123456789
IMT Tx FIFO Full	0123456789	0123456789
IMT Tx FIFO Half Full	0123456789	0123456789
IXP Rx FIFO Full	0123456789	0123456789
IXP Rx FIFO Half Full	0123456789	0123456789
Misc Statistic	Bus A	Bus B
-----	-----	-----
Shelf ID UART Framing Error	0123456789	0123456789
Shelf ID UART Overrun Error	0123456789	0123456789

;

Table 5-60 explains the meaning of each statistic that can be displayed in the **rept-imt-info:report=hiprerr** output.

rept-imt-**info:report=hiprerr:sshelf=1100:sslot=1:eslot=2:sbucket=0**

tekelecstp 05-01-12 14:01:34 EST EAGLE 33.0.0

HIPR Maintenance Statistics

;

=====

HIPR SUMMARY REPORT: Summed across all requested shelves and buckets

=====

HIPR Hourly Bucket Statistics

=====

BUCKET	LOC	Low Speed Statistic	Bus A	Bus B
00	1101	-----	-----	-----
		IMT Rx Packet CRC Error	0123456789	0123456789
		IMT Rx Packet Format Error	0123456789	0123456789
		IMT Rx Violation Error	0123456789	0123456789
		IMT Rx Command Error	0123456789	0123456789
		IMT Rx FIFO Full	0123456789	0123456789
		IMT Rx FIFO Half Full	0123456789	0123456789
		IMT Tx FIFO Full	0123456789	0123456789
		IMT Tx FIFO Half Full	0123456789	0123456789

BUCKET	LOC	Low Speed Statistic	Bus A	Bus B
00	1102	-----	-----	-----
		IMT Rx Packet CRC Error	0123456789	0123456789
		IMT Rx Packet Format Error	0123456789	0123456789
		IMT Rx Violation Error	0123456789	0123456789
		IMT Rx Command Error	0123456789	0123456789
		IMT Rx FIFO Full	0123456789	0123456789
		IMT Rx FIFO Half Full	0123456789	0123456789
		IMT Tx FIFO Full	0123456789	0123456789
		IMT Tx FIFO Half Full	0123456789	0123456789

High Speed Statistic	Bus A	Bus B


```

-----
IMT Rx Packet Format Err      0123456789 0123456789
IMT Rx Disparity Error        0123456789 0123456789
IMT Rx Sync Lost Error        0123456789 0123456789
IMT Rx Code Word Error        0123456789 0123456789
IMT Rx Packet SOM Before EOM  0123456789 0123456789
IMT Rx Packet CRC Error       0123456789 0123456789
IMT Bypass FIFO Full          0123456789 0123456789
IMT Bypass FIFO Half Full     0123456789 0123456789
IMT Rx FIFO Full              0123456789 0123456789
IMT Rx FIFO Half Full         0123456789 0123456789
IMT Tx FIFO Full              0123456789 0123456789
IMT Tx FIFO Half Full         0123456789 0123456789
IXP Rx FIFO Full              0123456789 0123456789
IXP Rx FIFO Half Full         0123456789 0123456789

Misc Statistic                Bus A      Bus B
-----
Shelf ID UART Framing Error    0123456789 0123456789
Shelf ID UART Overrun Error    0123456789 0123456789

```

HIPR CUMULATIVE Statistics

```

=====
Low Speed Statistic           Bus A      Bus B
-----
IMT Rx Packet CRC Error       0123456789 0123456789
IMT Rx Packet Format Error     0123456789 0123456789
IMT Rx Violation Error        0123456789 0123456789
IMT Rx Command Error          0123456789 0123456789
IMT Rx FIFO Full              0123456789 0123456789
IMT Rx FIFO Half Full         0123456789 0123456789
IMT Tx FIFO Full              0123456789 0123456789
IMT Tx FIFO Half Full         0123456789 0123456789

High Speed Statistic          Bus A      Bus B
-----
IMT Rx Packet Format Err      0123456789 0123456789
IMT Rx Disparity Error        0123456789 0123456789
IMT Rx Sync Lost Error        0123456789 0123456789
IMT Rx Code Word Error        0123456789 0123456789
IMT Rx Packet SOM Before EOM  0123456789 0123456789
IMT Rx Packet CRC Error       0123456789 0123456789
IMT Bypass FIFO Full          0123456789 0123456789
IMT Bypass FIFO Half Full     0123456789 0123456789
IMT Rx FIFO Full              0123456789 0123456789
IMT Rx FIFO Half Full         0123456789 0123456789
IMT Tx FIFO Full              0123456789 0123456789
IMT Tx FIFO Half Full         0123456789 0123456789
IXP Rx FIFO Full              0123456789 0123456789
IXP Rx FIFO Half Full         0123456789 0123456789

Misc Statistic                Bus A      Bus B
-----
Shelf ID UART Framing Error    0123456789 0123456789
Shelf ID UART Overrun Error    0123456789 0123456789

```

;

Legend

IMT Statistics:

BUCKET—The hourly time periods (*buckets*) for which a report was requested.**STATISTIC**—The error statistic type for the IMT buses A and B.

BUS A VALUE—The number of occurrences of the type of error displayed in the STATISTIC column for the IMT bus A.

BUS B VALUE—The number of occurrences of the type of error displayed in the STATISTIC column for the IMT bus B.

LOW SPEED STATISTIC—The error statistic type for the low speed 125 Mbps secondary rings with HMUX cards installed on buses A (xy09 card locations) and B (xy10 card locations).

HIGH SPEED STATISTIC—The error statistic type for the high-speed 1 Gbps primary ring with HMUX cards installed on buses A (xy09 card locations) and B (xy10 card locations).

MISC SPEED STATISTICS—Shelf ID Universal Asynchronous Receiver Transmitter (UART) error counts on the HMUX cards installed on buses A (xy09 card locations) and B (xy10 card locations).

BUCKET SUMMARY—The error count for each parameter for one hour for HMUX cards installed on buses A (xy09 card locations) and B (xy10 card locations). (The count is for the most recent part of an hour if the card was booted within an hour of executing the **rept-imt-info** command.)

CUMULATIVE—The running total error count for each parameter since card initialization for HMUX cards installed on buses A (xy09 card locations) and B (xy10 card locations).

HMUX Statistics:

BUCKET—The hourly time periods (*buckets*) for which a report was requested.

LOW SPEED STATISTIC—The error statistic type for the low speed 125 Mbps secondary rings with HMUX cards installed on buses A (xy09 card locations) and B (xy10 card locations).

HIGH SPEED STATISTIC—The error statistic type for the high-speed 1 Gbps primary ring with HMUX cards installed on buses A (xy09 card locations) and B (xy10 card locations).

MISC SPEED STATISTIC—The miscellaneous error statistic type.

Bus A—The number of occurrences of the type of error displayed in the STATISTIC column for the IMT bus A.

Bus B—The number of occurrences of the type of error displayed in the STATISTIC column for the IMT bus B.

HIPR Statistics:

BUCKET—The hourly time periods (*buckets*) for which a report was requested.

LOC—The card location (shelf and slot) for which information is displayed.

LOW SPEED STATISTIC—The error statistic type for the low speed 125 Mbps secondary rings with HMUX cards installed on buses A (xy09 card locations) and B (xy10 card locations).

HIGH SPEED STATISTIC—The error statistic type for the high-speed 1 Gbps primary ring with HMUX cards installed on buses A (xy09 card locations) and B (xy10 card locations).

MISC SPEED STATISTIC—The miscellaneous error statistic type.

Bus A—The number of occurrences of the type of error displayed in the STATISTIC column for the IMT bus A.

Bus B—The number of occurrences of the type of error displayed in the STATISTIC column for the IMT bus B.

rept-imt-lvl1

Report IMT Level 1

Use this command to display the IMT level 1 statistics for a card or a range of cards. If more than one card is specified, a summary report of totals for all cards can be generated.

Keyword: rept-imt-lvl1

Related Commands: clr-imt-stats, conn-imt, disc-imt, rept-imt-info, rept-imt-lvl2, rept-stat-imt, rmv-imt, rst-imt, tst-imt

Command Class: System Maintenance

Parameters

:e= (optional)

End address. This parameter specifies the IMT address of the last card in the range. A decimal value or a hexadecimal value can be specified for this parameter (see Table 5-61 to map the values by card location).

Range: 0-251

The value can be specified in decimal (0–251) or hexadecimal (h'00–h'fb).

Default: If the start address (s) value is specified, the e parameter default value is the specified s parameter value.

If the s parameter is not specified, the e parameter is not specified and the sloc parameter must be specified.

:eloc= (optional)

End location. Specifies the card location of the last card in the range.

Range: 1101-1108, 1111-1113, 1115, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Default: If sloc is specified—current sloc value; displays information for one card

If sloc is not specified—1115, which corresponds to IMT address 251 (e=251); displays information for entire range of locations.

:r= (optional)

Report type value

Range: full, stats, summary

full—Displays information for each card along with a summary report.

stats—Displays only individual card statistics.

summary—Displays the summary portion of the report.

Default: full

:s= (optional)

Start address. This parameter specifies the IMT address of the first (or only) card in the range. A decimal value or a hexadecimal value can be specified for this parameter (see Table 5-61 to map the values by card location).

Range: 0-251

The value can be specified in decimal (0–251) or hexadecimal (h'00–h'fb).

:sloc= (optional)

Start location. Specifies the card location of the first card in the range.

Range: 1101-1108, 1111-1113, 1115, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Default: If eloc is specified—current eloc value

If eloc is not specified—1201, which corresponds to IMT address 0 (s=0).

:trm= (optional)

The serial port (printer location) where the report is to be sent.

Range: 1-16

Default: Report displays on the terminal where the command was issued

Example

rept-imt-lvl1:s=00:e=01

Dependencies

Only one report status command can be in progress at a time.

Either the start address (**s** parameter) or the start location (**sloc** parameter) must be specified.

This command cannot be entered during IMT statistics collection following an hourly boundary.

The **rept-imt-lvl1** command cannot be entered if any of the following commands is running: **clr-imt-stats**, **rept-imt-info**, **rept-imt-lvl2**, **tst-imt**.

If the **s** and **e** parameters are specified, the **sloc** and **eloc** parameters cannot be specified; conversely, if the **sloc** and **eloc** parameters are specified, the **s** and **e** parameters cannot be specified.

A card location that is valid and defined in the database must be specified.

Notes

Table 5-61 maps each card location to the decimal and hexadecimal "Converting ITU National Point Code Formats" values that can be specified for the **s** and **e** parameters.

Table 5-61. Hexadecimal/Decimal Values for **s** and **e** parameters

Card Location	Hexadecimal Value	Decimal Value	Card Location	Hexadecimal Value	Decimal Value
Control Shelf 11					
1101	h'f0	240	1102	h'f1	241
1103	h'f2	242	1104	h'f3	243
1105	h'f4	244	1106	h'f5	245
1107	h'f6	246	1108	h'f7	247
1111	h'f8	248	1112	h'f9	249
1113	h'fa	250	1115	h'fb	251
Extension Shelf 12					
1201	h'00	0	1202	h'01	1
1203	h'02	2	1204	h'03	3
1205	h'04	4	1206	h'05	5
1207	h'06	6	1208	h'07	7
1211	h'08	8	1212	h'09	9

Table 5-61. Hexadecimal/Decimal Values for **s** and **e** parameters

Card Location	Hexadecimal Value	Decimal Value	Card Location	Hexadecimal Value	Decimal Value
1213	h'0a	10	1214	h'0b	11
1215	h'0c	12	1216	h'0d	13
1217	h'0e	14	1218	h'0f	15
Extension Shelf 13					
1301	h'10	16	1302	h'11	17
1303	h'12	18	1304	h'13	19
1305	h'14	20	1306	h'15	21
1307	h'16	22	1308	h'17	23
1311	h'18	24	1312	h'19	25
1313	h'1a	26	1314	h'1b	27
1315	h'1c	28	1316	h'1d	29
1317	h'1e	30	1318	h'1f	31
Extension Shelf 21					
2101	h'20	32	2102	h'21	33
2103	h'22	34	2104	h'23	35
2105	h'24	36	2106	h'25	37
2107	h'26	38	2108	h'27	39
2111	h'28	40	2112	h'29	41
2113	h'2a	42	2114	h'2b	43
2115	h'2c	44	2116	h'2d	45
2117	h'2e	46	2118	h'2f	47
Extension Shelf 22					
2201	h'30	48	2202	h'31	49
2203	h'32	50	2204	h'33	51
2205	h'34	52	2206	h'35	53
2207	h'36	54	2208	h'37	55
2211	h'38	56	2212	h'39	57
2213	h'3a	58	2214	h'3b	59

Table 5-61. Hexadecimal/Decimal Values for **s** and **e** parameters

Card Location	Hexadecimal Value	Decimal Value	Card Location	Hexadecimal Value	Decimal Value
2215	h'3c	60	2216	h'3d	61
2217	h'3e	62	2218	h'3f	63
Extension Shelf 23					
2301	h'40	64	2302	h'41	65
2303	h'42	66	2304	h'43	67
2305	h'44	68	2306	h'45	69
2307	h'46	70	2308	h'47	71
2311	h'48	72	2312	h'49	73
2313	h'4a	74	2314	h'4b	75
2315	h'4c	76	2316	h'4d	77
2317	h'4e	78	2318	h'4f	79
Extension Shelf 31					
3101	h'50	80	3102	h'51	81
3103	h'52	82	3104	h'53	83
3105	h'54	84	3106	h'55	85
3107	h'56	86	3108	h'57	87
3111	h'58	88	3112	h'59	89
3113	h'5a	90	3114	h'5b	91
3115	h'5c	92	3116	h'5d	93
3117	h'5e	94	3118	h'5f	95
Extension Shelf 32					
3201	h'60	96	3202	h'61	97
3203	h'62	98	3204	h'63	99
3205	h'64	100	3206	h'65	101
3207	h'66	102	3208	h'67	103
3211	h'68	104	3212	h'69	105
3213	h'6a	106	3214	h'6b	107
3215	h'6c	108	3216	h'6d	109

Table 5-61. Hexadecimal/Decimal Values for **s** and **e** parameters

Card Location	Hexadecimal Value	Decimal Value	Card Location	Hexadecimal Value	Decimal Value
3217	h'6e	110	3218	h'6f	111
Extension Shelf 33					
3301	h'70	112	3302	h'71	113
3303	h'72	114	3304	h'73	115
3305	h'74	116	3306	h'75	117
3307	h'76	118	3308	h'77	119
3311	h'78	120	3312	h'79	121
3313	h'7a	122	3314	h'7b	123
3315	h'7c	124	3316	h'7d	125
3317	h'7e	126	3318	h'7f	127
Extension Shelf 41					
4101	h'80	128	4102	h'81	129
4103	h'82	130	4104	h'83	131
4105	h'84	132	4106	h'85	133
4107	h'86	134	4108	h'87	135
4111	h'88	136	4112	h'89	137
4113	h'8a	138	4114	h'8b	139
4115	h'8c	140	4116	h'8d	141
4117	h'8e	142	4118	h'8f	143
Extension Shelf 42					
4201	h'90	144	4202	h'91	145
4203	h'92	146	4204	h'93	147
4205	h'94	148	4206	h'95	149
4207	h'96	150	4208	h'97	151
4211	h'98	152	4212	h'99	153
4213	h'9a	154	4214	h'9b	155
4215	h'9c	156	4216	h'9d	157
4217	h'9e	158	4218	h'9f	159

Table 5-61. Hexadecimal/Decimal Values for **s** and **e** parameters

Card Location	Hexadecimal Value	Decimal Value	Card Location	Hexadecimal Value	Decimal Value
Extension Shelf 43					
4301	h'a0	160	4302	h'a1	161
4303	h'a2	162	4304	h'a3	163
4305	h'a4	164	4306	h'a5	165
4307	h'a6	166	4308	h'a7	167
4311	h'a8	168	4312	h'a9	169
4313	h'aa	170	4314	h'ab	171
4315	h'ac	172	4316	h'ad	173
4317	h'ae	174	4318	h'af	175
Extension Shelf 51					
5101	h'b0	176	5102	h'b1	177
5103	h'b2	178	5104	h'b3	179
5105	h'b4	180	5106	h'b5	181
5107	h'b6	182	5108	h'b7	183
5111	h'b8	184	5112	h'b9	185
5113	h'ba	186	5114	h'bb	187
5115	h'bc	188	5116	h'bd	189
5117	h'be	190	5118	h'bf	191
Extension Shelf 52					
5201	h'c0	192	5202	h'c1	193
5203	h'c2	194	5204	h'c3	195
5205	h'c4	196	5206	h'c5	197
5207	h'c6	198	5208	h'c7	199
5211	h'c8	200	5212	h'c9	201
5213	h'ca	202	5214	h'cb	203
5215	h'cc	204	5216	h'cd	205
5217	h'ce	206	5218	h'cf	207
Extension Shelf 53					

Table 5-61. Hexadecimal/Decimal Values for **s** and **e** parameters

Card Location	Hexadecimal Value	Decimal Value	Card Location	Hexadecimal Value	Decimal Value
5301	h'd0	208	5302	h'd1	209
5303	h'd2	210	5304	h'd3	211
5305	h'd4	212	5306	h'd5	213
5307	h'd6	214	5308	h'd7	215
5311	h'd8	216	5312	h'd9	217
5313	h'da	218	5314	h'db	219
5315	h'dc	220	5316	h'dd	221
5317	h'de	222	5318	h'df	223
Extension Shelf 61					
6101	h'e0	224	6102	h'e1	225
6103	h'e2	226	6104	h'e3	227
6105	h'e4	228	6106	h'e5	229
6107	h'e6	230	6108	h'e7	231
6111	h'e8	232	6112	h'e9	233
6113	h'ea	234	6114	h'eb	235
6115	h'ec	236	6116	h'ed	237
6117	h'ee	238	6118	h'ef	239

Output

rept-imt-lvl1:s=00:e=01

rlghncxa03w 08-09-18 09:25:56 EST EAGLE 39.2.0

Retrieving data from cards...

;

rlghncxa03w 08-09-18 09:25:56 EST EAGLE 39.2.0

Card: H'0000 Elapsed Time (day - h:m:s): 0 - 00:08:31.2

Count	Bus A Value	Bus B Value
-----	-----	-----
Transmit Packet	0	0
Transmit Byte	0	0
Receive Packet	0	0
Receive Byte	0	0
Receive Packet with CRC Error	36	2
Receive Packet with Format Error	0	1
Receive Packet with Invalid Length	0	0
Primary Control Receive Error	0	0
Primary Control Transmit Error	0	0
Primary Control Sanity Error	0	0
Violation Error	291	2
CPU Receive FIFO Full	0	0
IMT Error Interrupt	0	0
Error Interrupt Overflow	0	0
DMA Terminal Count Interrupt	0	0
MSU Retransmitted	0	0
MSU Safety Packet	0	0
ASU Safety Packet	0	0
TSU Safety Packet	0	0
BSU Safety Packet	0	0
SSU Safety Packet	0	0
MSU Returned On Error	0	0
MSU Dropped With No Report	0	0

;

Card: H'0001 Elapsed Time (day - h:m:s): 3 - 03:20:07.7

Count	Bus A Value	Bus B Value
-----	-----	-----
Transmit Packet	0	0
Transmit Byte	0	0
Receive Packet	0	0
Receive Byte	0	0
Receive Packet with CRC Error	14	2
Receive Packet with Format Error	0	0
Receive Packet with Invalid Length	0	0
Primary Control Receive Error	0	0
Primary Control Transmit Error	0	0
Primary Control Sanity Error	0	0
Violation Error	320	12
CPU Receive FIFO Full	0	0
IMT Receive FIFO Half Full	0	0
CPU Receive FIFO Half Full	0	0
DMA Terminal Count Interrupt	0	0
MSU Retransmitted	1	0
MSU Safety Packet	0	0
ASU Safety Packet	0	0
TSU Safety Packet	0	0
IMT Receive FIFO Full	0	0
SSU Safety Packet	0	0
MSU Returned On Error	0	0
MSU Dropped With No Report	0	0

```

;
rlghncxa03w 08-09-18 09:25:56 EST EAGLE 39.2.0
=====
SUMMARY REPORT: Totals accumulated from all requested cards

Count                               Bus A Value   Bus B Value
-----
Transmit Packet                     0             0
Transmit Byte                       0             0
Receive Packet                      0             0
Receive Byte                        0             0
Receive Packet with CRC Error       50            4
Receive Packet with Format Error    0             1
Receive Packet with Invalid Length  0             0
Primary Control Receive Error       0             0
Primary Control Transmit Error      0             0
Primary Control Sanity Error        0             0
Violation Error                     611          14
CPU Receive FIFO Full               0             0
IMT Receive FIFO Half Full          0             0
CPU Receive FIFO Half Full          0             0
DMA Terminal Count Interrupt        0             0
MSU Retransmitted                   1             0
MSU Safety Packet                   0             0
ASU Safety Packet                   0             0
TSU Safety Packet                   0             0
IMT Receive FIFO Full               0             0
SSU Safety Packet                   0             0
MSU Returned On Error               0             0
MSU Dropped With No Report          0             0
-----
;
END OF REPORT
;

```

Legend

CARD—The IMT address of the card in hexadecimal

ELAPSED TIME (day - h:m:s)—The amount of time that has elapsed since a card reset has occurred or the IMT statistics were cleared with the **clr-imt-stats** command. This is shown in the format **day - h:m:s**, where **day** is the number of days that have elapsed, and **h:m:s** is the amount of time in the current day in hours, minutes, and seconds (and tenths of seconds).

COUNT—The IMT level 1 statistics displayed in this report.

BUS A VALUE and **BUS B VALUE**—The values of the IMT level 1 statistics on IMT bus A and IMT bus B.

Table 5-62 describes the statistics that are shown in the report for each card and in the Summary of totals for all requested cards, and their possible causes and corrective actions.

"Excessive" count is primarily determined by the operator based upon:

- Overall system behavior
- Duration of time from when the last statistics were taken
- Statistics of an individual card in relation to other cards

The following types of Safety Packets are included in the counts:

SAFETY PACKET—When an IMT packet goes around the IMT, a pre determined value in the packet is decremented by each card. When this value reaches zero, the card that receives the value equal to zero logs this as a safety packet and removes the IMT packet from the IMT.

MESSAGE SIGNALING UNIT (MSU)—IMT packet containing data

ACKNOWLEDGEMENT SIGNALING UNIT (ASU)—**ack** for an MSU that is sent from the destination card back to the originating card.

TEST SIGNALING UNIT (TSU)—Typically used to keep the card on the bus. There are many types of TSU's one of which performs a heartbeat function.

BROADCAST SIGNALING UNIT (BSU)—Function is the same as an MSU except that each card will process the BSU and then copy it to the next card for processing. Used for IMT maintenance functions.

SAFETY SIGNALING UNIT (SSU)—Anytime a packet times out (Safety Packet), the card that logged a safety packet sends an SSU to make sure the originating card is still on the IMT bus.

Table 5-62. rept-imt-lvl1 Statistics Explanation

IMT Statistic	Explanation Of Statistic	Probable Causes	Recommended Action
Transmit Packet	Number of transmitted IMT packets	N/A	N/A
Transmit Byte	Number of transmitted IMT Bytes	N/A	N/A
Receive Packet	Number of received IMT Packets	N/A	N/A
Receive Byte	Number of received IMT Bytes	N/A	N/A
Receive Packet with CRC Error	Bad Checksum in received IMT packet. Usually caused by corrupted data. Detected by hardware	Card insertion, removal, or boot. Might occur infrequently in a normal system.	• None if card has booted or was just inserted. • Contact Tekelec Technical Services if count is excessive in relation to other cards.
Receive Packet with Format Error	Occurs when the Start of Message byte of the IMT packet is followed by unexpected data. Detected by hardware.	Card insertion, removal, or boot	• None if card has booted or was just inserted. • Contact Tekelec Technical Services if count is excessive in relation to other cards.

Table 5-62. rept-imt-lvl1 Statistics Explanation

IMT Statistic	Explanation Of Statistic	Probable Causes	Recommended Action
Receive Packet with Invalid Length	Card received an IMT packet where the actual length of the packet did not match the length indicated in the length field. Detected by software	Card insertion, removal, or boot	• None if card has booted or was just inserted. • Contact Tekelec Technical Services if count is excessive in relation to other cards.
Primary Control Receive Error	Corrupted packet. Detected by hardware	Card insertion, removal, or boot	• None if card has booted or was just inserted. • Contact Tekelec Technical Services if count is excessive in relation to other cards.
Primary Control Transmit Error	Transmitted IMT packet is greater than allowed size. Detected by hardware	Card insertion, removal, or boot	• None if card has booted or was just inserted. • Contact Tekelec Technical Services if count is excessive in relation to other cards.

Table 5-62. rept-imt-lvl1 Statistics Explanation

IMT Statistic	Explanation Of Statistic	Probable Causes	Recommended Action
Primary Control Sanity Error	Internal hardware monitoring self check failed. Detected by hardware	Generally indicates Bad hardware or corrupt packets.	• None if card has booted or was just inserted. • Contact Tekelec Technical Services if count is excessive in relation to other cards.
Violation Error	Received an illegal character from the IMT. Detected by hardware	Card insertion, removal, or boot	• None if card has booted or was just inserted. • Contact Tekelec Technical Services if count is excessive in relation to other cards.
CPU Receive FIFO Full	Communication CPU on the card is congested. Detected by hardware	Indicates that data was received at a higher rate than could be processed by the Communications processor.	Contact Tekelec Technical Services if count is excessive in relation to other cards.
IMT Receive FIFO Half Full	IMT interface on the card is becoming congested. Detected by hardware.	Indicates that data was received at a higher rate than could be switched for a short period.	None. FIFO Half Full is just an indication; no action is required.
CPU Receive FIFO Half Full	Communication CPU on the card is becoming congested. Detected by hardware	Indicates that data was received at a higher rate than could be processed for a short period.	None. FIFO Half Full is just an indication; no action is required.

Table 5-62. rept-imt-lvl1 Statistics Explanation

IMT Statistic	Explanation Of Statistic	Probable Causes	Recommended Action
DMA Terminal Count Interrupt	Received IMT packet length is longer than the max allowed. Detected by hardware	Card insertion, removal, or boot	• None if card has booted or was just inserted. • Contact Tekelec Technical Services if count is excessive in relation to other cards.
MSU Retransmitted	Retransmissions occur typically when an MSU goes around the IMT bus and times out (safety packet issued). Detected by software	Card insertion, removal, or boot. Might occur infrequently in a normal system.	• None if card has booted or was just inserted. • Contact Tekelec Technical Services if count is excessive in relation to other cards.
MSU Safety Packet	MSU has timed out on the IMT. Detected by hardware	Card insertion, removal, or boot	• None if card has booted or was just inserted. • Contact Tekelec Technical Services if count is excessive in relation to other cards.

Table 5-62. rept-imt-lvl1 Statistics Explanation

IMT Statistic	Explanation Of Statistic	Probable Causes	Recommended Action
ASU Safety Packet	ASU Unit has timed out on the IMT. Detected by hardware	Card insertion, removal, or boot	• None if card has booted or was just inserted. • Contact Tekelec Technical Services if count is excessive in relation to other cards.
TSU Safety Packet	TSU Unit has timed out on the IMT. Detected by hardware	Card insertion, removal, or boot	• None if card has booted or was just inserted. • Contact Tekelec Technical Services if count is excessive in relation to other cards.
BSU Safety Packet	BSU Unit has timed out on the IMT. Detected by hardware	Card insertion, removal, or boot	• None if card has booted or was just inserted. • Contact Tekelec Technical Services if count is excessive in relation to other cards.

Table 5-62. rept-imt-lvl1 Statistics Explanation

IMT Statistic	Explanation Of Statistic	Probable Causes	Recommended Action
SSU Safety Packet	SSU Unit has timed out on the IMT. Detected by hardware	Card insertion, removal, or boot	• None if card has booted or was just inserted. • Contact Tekelec Technical Services if count is excessive in relation to other cards.
MSU Returned On Error	Number of MSUs returned to the application as undeliverable. These are usually rerouted by the application. Detected by software.	Destination card is not available to receive packets.	None. MSU Returned is just an indication; no action is required.
MSU Dropped With No Report	Number of MSUs discarded as undeliverable. Detected by software. Note: The "MSU Dropped With No Report" statistic may be non-zero after executing the rept-imt-lvl1 or clr-imt-stats command. During execution of these commands, the active MASP generates MSUs to unpopulated card slots. These MSUs result in an "MSU Dropped With No Report" count. To determine the number of unexpected "MSU Dropped With No Report" occurrences, the active MASP must be excluded from the rept-imt-lvl1 card range.	Destination card is not available to receive packets.	None. MSU Dropped is just an indication; no action is required.

rept-imt-lvl2**Report IMT Level 2**

Use this command to display the IMT level 2 statistics for a card. This report displays IMT traffic statistics for either one or both IMT busses in the system. The report can be filtered as follows:

- Report statistics between the source card (specified with the **loc** or **l** parameters), whose statistics pool is queried for report information, and another card (specified with the **sloc** or **s** parameter).

- Report statistics between the source card and a range of cards (specified with both the **sloc** and **eloc** or the **s** and **e** parameter combinations).

Keyword: rept-imt-lvl2

Related Commands: clr-imt-stats, conn-imt, disc-imt, rept-imt-info, rept-imt-lvl1, rept-stat-imt, rmv-imt, rst-imt, tst-imt

Command Class: System Maintenance

Parameters

:b= (optional)

IMT bus identification.

Range: **a, b, both**

a — Displays statistics for IMT bus A.

b — Displays statistics for IMT bus B.

both — Displays statistics for both IMT busses, A and B.

Default: **both**

:e= (optional)

End address. This parameter specifies the IMT address of the last card in the range. A decimal value or a hexadecimal value can be specified for this parameter (see Table 5-61 to map the values by card location).

Range: **0-251**

The value can be specified in decimal (**0-251**) or hexadecimal (**h'00-h'fb**).

Default: If the **s** parameter is specified, the default is the **s** parameter value.
If the **s** parameter is not specified, the default is **251**.

:eloc= (optional)

End location. Specifies the card location of the last card in the range.

Range: **1101-1108, 1111-1113, 1115, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

Default: If **sloc** is specified—current **sloc** value; displays information for one card
If **sloc** is not specified—**1115**, which corresponds to IMT address 251 (**e=251**); displays information for entire range of locations.

:l= (optional)

Source card IMT address. The IMT address of the card whose statistics pool is to be queried for report information.

Range: **0-251**

(See the *Installation Manual – EAGLE 5 ISS* for an illustration of the card locations.)

:loc= (optional)

Source card location. The location of the card whose "statistics pool" is to be queried for report information.

Range: **1101-1108, 1111-1113, 1115, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

:s= (optional)

Start address. This parameter specifies the IMT address of the first (or only) card in the range. A decimal value or a hexadecimal value can be specified for this parameter (see Table 5-61 to map the values by card location).

Range: **0-251**

The value can be specified in decimal (**0-251**) or hexadecimal (**h'00-h'fb**).

Default: If **e** is specified—current **l** parameter value.
 If **e** is not specified—**0**.

:sloc= (optional)

Start location. Specifies the card location of the first card in the range.

Range: **1101-1108, 1111-1113, 1115, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

Default: If **eloc** is specified—current **sloc** value.
 If **eloc** is not specified—IMT address 0 (**s=0**).

:trm= (optional)

The serial port (printer location) where the report is to be sent.

Range: **1-40**

Default: The report displays on the terminal where the command was issued.

Example

```
rept-imt-lvl2:l=00:s=00:e=02:b=a
```

Dependencies

If the **s** and **e** parameters are specified, the **sloc** and **eloc** parameters cannot be specified; conversely, if the **sloc** and **eloc** parameters are specified, the **s** and **e** parameters cannot be specified.

The **rept-imt-lvl2** command cannot be entered if any of the following commands is running: **clr-imt-stats**, **rept-imt-info**, **rept-imt-lvl1**, **tst-imt**.

Either the source address (**l** parameter) or the source location (**loc** parameter) must be specified.

This command cannot be entered during IMT statistics collection following an hourly boundary.

Either the source address (**l** parameter) or the source location (**loc** parameter) must be specified; but not both at the same time.

A card location must be specified that is valid and defined in the database.

Notes

None

Output

If the source card location falls within the range of cards specified with the **sloc** and **eloc** parameters or the **s** and **e** parameters, the output report for the source card will show zeros. The zeros are reported because the source card location does not use the IMT to communicate with itself and, therefore, does not report any values or pegs for traffic routed to itself. This command reports only the values or pegs received or transmitted across the IMT bus.

In the following example, the output for the source card location (**loc=1213**) is shown in column 0a (the equivalent card location expressed as a hexadecimal digit). The 0a column displays zeros because **loc=1213**, falls within the range specified for the start and end card location (**sloc=1211** and **eloc=1215**). (Note that the Receive FSN row displays a value of **1**, which is not a count, but rather the initial sequence number of the FSN that the source card location expects to receive). Columns 09 and 0b display zeros because these slots are not provisioned with any card (the adjacent card slots (08 and 0c) contain DCM cards).

rept-imt-lvl2:sloc=1211:eloc=1215:loc=1213

```
rlghncxa03w 04-02-28 09:26:34 EST EAGLE 31.3.0
```

```
Retrieving data from card...
```

```
-----
Card: H'000a      Bus: A
```

Field		08	09	0a	0b	0c
Link Status		ALGN	-OS-	ALGN	-OS-	ALGN
OS Count	(dec)	0	0	0	0	0
Transmit BSN	(dec)	84	0	0	0	0
Transmit FSN	(dec)	99	0	0	0	34
Receive BSN	(dec)	99	0	0	0	34
Receive FSN	(dec)	85	1	1	1	1
Unack Messages	(dec)	0	0	0	0	0
Invalid Length	(dec)	0	0	0	0	0
Invalid rx BSN	(dec)	0	0	0	0	0
Invalid rx FSN	(dec)	0	0	0	0	0
Invalid LSSU	(dec)	0	0	0	0	0
Invalid ASU	(dec)	0	0	0	0	0
RTB Address	(hex)	0000	0000	0000	0000	0000
Average ack time	(ms)	0	0	0	0	0
Minimum ack time	(ms)	0	0	0	0	0
Maximum ack time	(ms)	0	0	0	0	0

```
rlghncxa03w 04-02-28 09:26:34 EST EAGLE 31.3.0
```

```
-----
Card: H'00f4      Bus: B
```

Field		f0	f1	f2	f3	f4	f5	f6	f7
Link Status		-OS-	-OS-	ALGN	ALGN	ALGN	-OS-	ALGN	-OS-
OS Count	(dec)	0	0	2	2	3	0	1	0
Transmit BSN	(dec)	0	0	0	0	0	0	0	0
Transmit FSN	(dec)	0	0	0	0	0	0	0	0
Receive BSN	(dec)	0	0	0	0	0	0	0	0
Receive FSN	(dec)	0	0	1	1	1	0	1	0
Unack Messages	(dec)	0	0	0	0	0	0	0	0
Invalid Length	(dec)	0	0	0	0	0	0	0	0
Invalid rx BSN	(dec)	0	0	0	0	0	0	0	0
Invalid rx FSN	(dec)	0	0	0	0	0	0	0	0
Invalid LSSU	(dec)	0	0	0	0	0	0	0	0
Invalid ASU	(dec)	0	0	0	0	0	0	0	0
RTB Address	(hex)	0000	0080	0100	0180	0200	0280	0300	0380
Average ack time	(ms)	0	0	0	0	0	0	0	0
Minimum ack time	(ms)	0	0	0	0	0	0	1	1
Maximum ack time	(ms)	2	2	3	3	3	3	3	3

```
-----
END OF REPORT
```

```
;
```

Legend

CARD—The IMT address of the card location specified by the **I** parameter in this command in hexadecimal.

BUS—The IMT bus for which the IMT level 2 statistics are being reported.

FIELD—The IMT level 2 statistics displayed in this report.

00 - EF—The IMT address of the cards on the IMT bus in hexadecimal.

LINK STATUS—The status of the link, either ALGN (aligned) or OS (out of service).

OS COUNT—The number of times the link has cycled between being aligned and being out of service.

TRANSMIT BSN—The number of BSNs transmitted.

TRANSMIT FSN—The number of FSNs transmitted.

RECEIVE BSN—The number of BSNs received.

RECEIVE FSN—The sequence number for the next FSN that the source card location expects to receive.

UNACK MESSAGES—The number of unacknowledged messages received.

INVALID LENGTH—The number of messages received with invalid length indicators.

INVALID RX BSN—The number of invalid BSNs received.

INVALID RX FSN—The number of invalid FSNs received.

INVALID LSSU—The number of invalid LSSUs received.

INVALID ASU—The number of invalid ASUs received.

RTB ADDRESS—The address of the retransmission buffer, in hexadecimal.

AVERAGE ACK TIME—The average amount of time for an acknowledgment, in milliseconds.

MINIMUM ACK TIME—The minimum amount of time for an acknowledgment, in milliseconds.

MAXIMUM ACK TIME—The maximum amount of time for an acknowledgment, in milliseconds.

rept-meas**Report Measurements**

Use this command to generate measurement reports on demand. The reports display on the UI terminal, and are not transferred to the customer FTP server when the Measurements Platform feature is enabled.

ITU gateway measurements are done for **stp** and, on a per-linkset basis, for **lnkset**, **lsonismt**, **lsdestni**, and **lsorigni** entity types.

Keyword: **rept-meas**

Related Commands: **chg-meas**, **copy-meas**, **rept-ftp-meas**, **rtrv-meas-sched**

Command Class: Link Maintenance

Parameters

:enttype= (mandatory)

The entity type to report on.

Range: **link**, **lnkset**, **lnp**, **lsdestni**, **lsonismt**, **lsorigni**, **mapscrn**, **np**, **origni**, **originnc**, **stp**, **stplan**, **tt**, **sctpasoc**, **sctpcard**, **ua**
link — Measurements for signaling links
lnkset — Measurements for linksets
lnp — Measurements for local number portability
lsdestni — Measurements for linkset destination network identifiers

lsonismt — Measurements for ISUP message type screening
lsorigni — Measurements for linkset originating network identifiers
mapscrn — Measurements for GSM MAP message screening
np — Measurements for INP, G-Port, A-Port, and IGM
origni — Measurements for originating network identifiers greater than 5
origninc — Measurements for originating network identifiers (less than 5, small networks) for network clusters
stp — Measurements for all nodes
stplan — Measurements for TCP/IP links.
tt — Measurements for translation types
sctpasoc — Measurements per association for the SCTP protocol (used to carry M3UA, M2PA, and SUA traffic)
sctpcard — Measurements per card for the SCTP protocol (used to carry M3UA, M2PA, and SUA traffic)
ua — Measurements per application server/association for the M3UA and SUA protocols

:type= (mandatory)

The type of measurement report.

Range: **avl, avld, avldth, comp, gtwy, mtcd, mtcddth, mtch, mtcs, nm, rbase, systot**

avl — Availability measurements

avld — Daily availability measurements

avldth — Day to hour availability measurements.

comp — Component measurements

gtwy — Internetwork gateway-related data from the STP for ANSI and ITU measurements. ANSI gateway measurements are pegged on a per-linkset, per-Network Indicator basis, whereas ITU measurements are pegged on a per-linkset basis.

mtcd — Daily maintenance measurements

mtcddth — Day-to-hour maintenance measurements

mtch — Hourly maintenance measurements

mtcs — Link/linkset maintenance status

nm — Network management, on-demand

rbase — Schedule-report type record base measurements

systot — STP system totals

:aname= (optional)

Association name. This parameter specifies the name assigned to the association in the IPAPSOCK table.

Range: *aaaaaaaaaaaaaa*

Up to 15 alphanumeric characters; the first character must be a letter.

:appl= (optional)

The GPL to report measurements on. This parameter can be used only with the **stplan-avl (enttype=stplan:type=avl)** measurement report. The **rtrv-gpl:gpl=all** command can be entered to list all valid applications.

Range: *xyyyyyyy*

Default: No value given.

:asname= (optional)

Application server name. This parameter specifies the name of the application server.

Range: *aaaaaaaaaaaaaa*

Up to 15 alphanumeric characters; the first character must be a letter.

:day= (optional)

The specific day of the week for daily LNP measurement reports.

Range: **mon, tue, wed, thu, fri, sat, sun**
Default: The previous single day report is generated.

:hh= (optional)

The specific half-hour interval. The **hh** parameter implies the ending time for the collection interval; for example, **hh=0300** generates a report for **2:30-3:00**.

Range: **0000-2400**
hhmm where *hh* = **00-24** (hour) and *mm* = **00** or **30** (minute)

Default: The **hh** parameter value is not given.

:link= (optional)

The link on the card specified in the **loc** parameter

Synonym: **port**

Range: **a, b, a1-a31, b1-b31**

Not all card types support all **link** parameter values.

See "Summary of Range Values for :link Parameter" for valid **link** parameter range values for each type of card that can have assigned signaling link ports.

Default: The **link** parameter value is not given.

:loc= (optional)

The card location as stenciled on the shelf of the system.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

Default: The **loc** parameter value is not given.

:lsn= (optional)

The name of the linkset for which link or linkset measurements are reported.

Range: *ayyyyyyyyy*
 1 alphabetic character followed by up to 9 alphanumeric characters

Default: The **lsn** value is not given.

:nc= (optional)

The network cluster for the specified GTWY measurement report.

Range: **0-255**

Default: The **nc** parameter value is not given.

:ni= (optional)

The network indicator for the specified GTWY measurement report.

Range: **1-255**

Default: The **ni** parameter value is not given.

:nzo= (optional)

Print non-zero measurements only.

Range: **yes, no**

Default: **yes** for types **avl**, **avld**, and **avldth**.
 This parameter is not used with the other report types.

:period= (optional)

The relative time period to report.

Range: **last, specific, active, all**

last — The previous collection interval

specific — A specific half-hourly interval (specified with the **hh** parameter)

active — The current collection interval

- all** — All collection intervals.
- Default:** The **period** parameter value is not given.
- :qh=** (optional)
The specific quarter-hour interval. The **qh** parameter implies the ending time for the collection interval; for example, **qh=0315** generates a report for **3:00-3:15**.
- Range:** **0000-2400**
hhmm where *hh* = **00-24** (hour) and *mm* = **00, 15, 30, or 45** (minute)
- Default:** The **qh** value is not given.
- :trm=** (optional)
The serial port (printer location) where the report is to be sent.
- Range:** **1-16**
- Default:** The **trm** value is not given.
- :tt=** (optional)
A specific translation type to be reported.
- Range:** **0-255**
- Default:** The **tt** parameter value is not given.

Example

```
rept-meas:type=comp:enttype=sctpcard:loc=2215
rept-meas:type=comp:enttype=lnkset:lsn=sp1
rept-meas:enttype=link:type=avl:loc=1201:link=a
rept-meas:enttype=lnp:type=mtcd
rept-meas:enttype=lnp:type=mtch:period=last
rept-meas:enttype=lnp:type=mtch:period=specific:hh=1300
rept-meas:enttype=lnp:type=mtcd:period=specific:day=tue
rept-meas:enttype=stplan:type=avl:appl=atmansi
rept-meas:type=systot:enttype=tt:tt=26
rept-meas:type=mtcd:enttype=mapscrn
rept-meas:type=mtch:enttype=mapscrn
rept-meas:type=mtcd:enttype=sctpasoc:aname=assoc01
rept-meas:type=mtcdth:enttype=ua:aname=assoc01:asname=appserv01
```

Dependencies

The **rept-meas** command cannot be used to specify a report type if that report type is currently printing.

The valid parameter combinations depend on the report type specified. These combinations are shown in Table 5-63. An X in a cell indicates that the parameter is valid for the report type shown.

When the Enhanced GSM MAP Screening (EGMS) feature is turned on, this command cannot be used to generate EGMS measurements reports.

The entity specified by the **loc**, **port**, or **lsn** parameter must be in the database.

The link specified by the **loc** and **link** parameters must already be defined in the database.

When **enttype=link** is specified, the card in the location specified by the **loc** parameter must be a LIM.

Hourly collection and report processing cannot be in progress when report type **mtch** is specified.

Quarter-hourly collection and report processing cannot be in progress when report type **comp**, **systot**, **avl**, or **gtwy** is specified.

The **mtcdth** report type is unavailable between midnight and 1:00 AM (0100).

Day-to-hour collection and report processing cannot be in progress when report type **mtcd** or **mtcdth** is specified.

Daily collection and report processing cannot be in progress when report type **mtcd** is specified.

Half-hourly collection and report processing cannot be in progress when report type **comp**, **systot**, **avl**, or **gtwy** is specified.

5-minute collection and report processing cannot be in progress when report type **nm** is specified.

When **enttype=lnp**, only **mtcd** and **mtch** can be specified for the **type** parameter.

If the **nc** parameter is specified for origininc reports, then the **ni** parameter must be specified.

If the **ni** parameter is specified for origin reports, then measurements data must be available at the time the command is entered.

The **day** parameter can be specified only for report type **mtcd** and entity types **lnp** and **mapscrn**.

The **period=all** parameter can be specified only for **type=avl** and **enttype=lnp:type=mtcd** reports.

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before the **enttype=lnp** parameter can be specified.

The GSM Map Screening feature must be turned on before the **enttype=mapscrn** parameter can be specified.

The G-Port, INP, A-Port, or IS41 GSM Migration feature must be turned on before the **entity=np** parameter can be specified.

A primary MCPM card must be available when the Measurements Platform collection option is enabled and this command is entered.

The 15 Minute Measurements feature must be turned on and the 15 Minute Measurements collection option must be on before the **qh** parameter can be specified.

The **qh** parameter must specify a quarter-hourly boundary (the end of the requested quarter-hour for the report) for valid report types (**avld**, **mtcd**, **nm**, **rbase**, and **mtcs** cannot be specified).

The **hh** parameter must specify a half-hourly boundary (the end of the requested half-hour for the report) for valid report types (**mtcd** and **nm** are excluded with message "E2307: QH or HH is not valid for this TYPE").

The **hh** and **qh** parameters cannot be specified together in the command.

When the **period=last** parameter is specified, the **hh** parameter, the **qh** parameter, or the **day** parameter cannot be specified.

When the **period=active** parameter or the **period=all** parameter is specified, the **hh** and **qh** parameters cannot be specified.

When the **period=specific** parameter is specified, the **hh** parameter, the **qh** parameter, or the **day** parameter must be specified. The **hh**, **qh**, and **day** parameters can be specified only if the **period=specific** parameter is specified.

A half-hour boundary must be specified for the **hh** parameter, except for report type **mtch**; an hourly boundary must be specified for report type **mtch** (that is, only half hours ending in **00**, such as **0100**, **0200** or **0300**).

A quarter-hour boundary must be specified for the **qh** parameter, except for report type **mtch**; an hourly boundary must be specified for report type **mtch** (that is, only quarter hours ending in **00**, such as **0100**, **0200** or **0300**).

The **hh** parameter and the **qh** parameter cannot be specified when report type **avld**, **mtcd**, **nm**, **rbase**, or **mtcs** is specified.

If the **link** parameter is specified, the **loc** parameter must be specified.

The **lsn** parameter cannot be specified in the same command with the **loc** parameter or the **port** parameter.

When entity type **link** is specified, either the **loc** and **port** parameters or the **lsn** parameter must be specified.

The **appl** parameter can be specified only when the **enttype=stplan** and the **type=avl** parameters are specified.

When the **appl** parameter is specified, the **period=active** parameter and the **period=all** parameter cannot be specified.

The **period=active** parameter cannot be specified when the **enttype=stp** parameter or the **enttype=tt** parameter is specified.

The **lsn** parameter cannot be specified with the following parameters: **enttype=stp/tt/stplan/origni/origininc/lnp/np/mapscrn** or **type=systot**.

For entity type **lnkset**, the **lsn** parameter must be specified, regardless of whether the value of the **lsn** parameter is an ANSI or an ITU linkset.

For entity type **avl**, if **period=all** is specified, the **loc** and **port** parameters must be specified.

The **nzo** parameter is used only for entity types **avl**, **avld**, and **avldth**.

The **loc** and **lnkset** parameters cannot be specified in the same command. Either the **loc** parameter or the **lnkset** parameters can be specified, but not both. For example, the following command is not a valid parameter combination: **rept-meas:type=mtcd:enttype=link:loc=1211:link=a:lnkset=nc2785**

The **appl** and **loc** parameters cannot be specified in the same command line.

When **enttype=lnp**, the **trm** parameter cannot be specified because LNP measurements can be written only to the FTA. To retrieve this data, use the procedure described with the **act-file-trns** command information.

For the **stplan-avl** reports (**enttype=stplan** and **type=avl** parameters), if the **appl** parameter is specified, the **period=active** and **period=all** parameters cannot be specified.

The **type=systot** and **loc** parameters cannot be specified in the same command line.

When **enttype=lnp** and **type=mtch**, only **last** and **specific** can be specified for the **period** parameter.

When **enttype=lnp**, **nzo=yes** cannot be specified.

When **enttype=lnp**, the **appl**, **loc**, **port**, **lsn**, **ni**, and **nc** parameters cannot be specified.

The **tt** parameter must be specified when **enttype=tt**. The only time the **tt** parameter is valid is when it is specified with **enttype=tt**.

If the **type=gtwy** parameter is specified, and the value of the **enttype** parameter is **lsorigni**, **lsdestni**, or **lsonismt**, then the **ni** parameter cannot be specified for ITU linksets. The **ni** parameter is allowed only for ANSI linksets.

If the **type=gtwy:enttype=stp** parameter combination is specified, no additional parameters may be specified.

If the **type=gtwy:enttype=lsdestni** parameter combination is specified for an ITU linkset, only the **lsn** parameter can be specified.

If the **type=gtwy:enttype=lsorigni** parameter combination is specified for an ITU linkset, only the **lsn** parameter can be specified.

If the **type=gtwy:enttype=lsonismt** parameter combination is specified for an ITU linkset, only the **lsn** parameter can be specified.

Table 5-63. Valid Parameter Combinations for the **type** Parameter

Parameter Value	Report Types (type parameter)												
	systot	comp	mtcd	mtcdth	mtch	mtcs	nm	avl	avld	avldth	gtwy	rbase	
enttype=													
stp	X		X	X		X					X	X	
link		X	X	X		X	X	X	X	X		X	
lnkset		X	X	X		X	X				X	X	
lnp			X		X								
tt	X												
stplan	X		X	X				X					
origni											X		
origninc											X		
lsdestni											X		
lsonismt											X		
lsorigni											X		
np			X		X								
mapscrm			X		X								
sctpasoc		X	X	X									
sctpcard		X	X	X									
ua		X	X	X									
period=													
last	X	X	X	X	X		X	X	X	X	X		
specific	X	X			X			X			X		
active		X				X	X	X				X	
all			X					X					
nzo								X	X	X			

If the **enttype=sctpcard** parameter is specified, then the card in the location specified by the **loc** parameter must be an IPLIMx, IPGWx, or IPSG card.

The **enttype=sctpasoc** or **enttype=ua** parameter must be specified before the **aname** parameter can be specified.

The **enttype=ua** parameter must be specified before the **aname** parameter can be specified.

The G-Port, INP, or AINPQ feature must be turned on before the **entitytype=np** parameter can be specified.

If the **enttype=sctpcard** parameter is specified, then the **loc** parameter must be specified.

If the **enttype=sctpcard** parameter is specified, then a card must be installed in the location specified by the **loc** parameter.

The value of the **appl** parameter must apply to the reports specified in the **enttype** and **type** parameters.

The **enttype=link** parameter must be specified before the **link** parameter can be specified.

The linkset specified by the **lsn** parameter must contain the link specified by the **enttype=link** and **type** parameters.

The **type=gtway** parameter and the **enttype=origininc** parameter must be specified before the **nc** parameter can be specified.

The **type=gtway** parameter must be specified, and a value of **lsdestni**, **lsonismt**, **lsorigni**, **origni**, or **origininc** must be specified for the **enttype** parameter before the **ni** parameter can be specified.

The **enttype=tt** parameter must be specified before the **tt** parameter can be specified.

If a value of **sctpasoc** or **ua** is specified for the **enttype** parameter, then the **aname** parameter must be specified.

The association specified by the **aname** parameter must be provisioned in the system.

The card in the location specified by the **loc** parameter must match the type of card specified in the **enttype** parameter.

If the **enttype=ua** parameter is specified, then the **asname** parameter must be specified.

The application server specified by the **asname** parameter must be provisioned in the system.

The association specified by the **aname** parameter must be assigned to the application server specified by the **asname** parameter.

Notes

The *Maintenance Manual* provides a description of all report parameters.

INP, GSM MAP screening, and LNP measurements are sent to the FTA (file transfer area) rather than to the EAGLE 5 ISS terminal. Refer to Chapter 2 of the *Maintenance Manual* for procedural information on accessing the FTA.

If an on-demand report is requested while the collection for that interval is in progress, the requested report will not be generated. The **rept-meas** command must be entered again.

For the entity types **avld** and **avldth**, if no link or linkset is specified, all links are reported.

When the **rept-meas** command is executed, the following warning message may appear:

"Measurement data represents an incomplete interval"

This message indicates that one or more cards did not respond to the request for measurements because the card was Out-Of-Service. The message does not indicate that data was lost.

Output

rept-meas:type=systot:enttype=stp

```
rlghncxa03w 08-04-27 16:53:22 EST EAGLE 39.0.0
Measurements Report will be generated.
rlghncxa03w 08-04-27 16:53:22 EST EAGLE 39.0.0
TYPE OF REPORT: STP SYSTEM TOTAL MEASUREMENTS ON STP
REPORT PERIOD: LAST
REPORT INTERVAL: 08-04-27 12:00:00 THRU 12:29:59
```

STP-SYSTOT MEASUREMENTS

```

ORIGMSUS = 425, TRMDMSUS = 420, THRSWMSU = 730980,
ORMSUOCT = 8490, TRMSUOCT = 8400, TSMSUOCT = 14619600,
DURINTFL = 0, DTAMSULOST = 0, MSINVDPC = 5,
MSINVSIO = 0, OMSINVDPC = 0, MSINVLNK = 0,
MSINVSIF = 0, MSNACDPC = 5, MSINVSLC = 0,
GTTPERFD = 0, GTTUNONS = 0, GTTUN1NT = 0,
0,
MSSCCPFL = 0, MSULOST1 = 0, MSULOST2 = 0,
MSULOST3 = 0, MSULOST4 = 0, MSULOST5 = 0,
CRSYSAL = 1, MASYSAL = 2, MISYSAL = 9,
XLXTSPACE = 0, XLXTELEI = 0, MSUDSCRD = 0,
OVSZMSG = 0, GFGTMATCH = 0, GFGTNOMCH = 0,
GFGTNOLKUP = 0, MSUSCCPFLR = 0, NMSCCPMH = 4567,
PKSCCPMH = 38495, MSSCCPDISC = 23, IDPRMSERR = 2,
IDPRMSFAIL = 12, IDPRMSRCV = 8374, IDPRMSSUCC = 8360,
MSIDPNOMCH = 0, MSIDPMATCH = 0, MOSMSSEGOK = 0,
MOSMSSEGER = 0
;

```

```
rlghncxa03w 08-04-27 16:53:22 EST EAGLE 39.0.0
END OF HALF-HOURLY STP-SYSTOT MEASUREMENT REPORT
```

The following example displays output for a linkset that contains the IPVL linkset class.

rept-meas:type=comp:enttype=lnkset:lsn=lsn1

```
eagle10706 08-02-15 10:30:11 EST EAGLE5 38.0.0
TYPE OF REPORT: COMPONENT MEASUREMENTS ON LNKSET
REPORT PERIOD: LAST
REPORT INTERVAL: 08-02-15 10:00:00 THRU 10:29:59
```

```
eagle10706 08-02-15 10:30:12 EST EAGLE 38.0.0
LNKSET-COMP MEASUREMENTS: lsn2a (IPVL)
```

```

MSGSTRAN = 120740, MSGSRCVD = 147196, MOCTTRAN = 2414790,
MOCTRCVD = 2943920, MSGSRGTT = 0, MOCTRGTT = 0,
TDLSINAC = 0, MSGWSDSLIM = 0, ZTTMAPO = 0,
ZTTMAPI = 0, MTPMSCNVTD = 0, GTTMSCNVTD = 0,
SCCLOOP = 0
;

```

The following example displays a comp-link report with a linkset that contains all link classes. Linksets are normally provisioned with a single class of links.

rept-meas:type=comp:enttype=link:lsn=ls1201a0

```
stdcfg2b 08-02-15 01:00:05 EST EAGLE 38.0.0
TYPE OF REPORT: COMPONENT MEASUREMENTS ON LINK
REPORT PERIOD: LAST
REPORT INTERVAL: 08-02-15 00:30:00 THRU 00:59:59
```

```
LINK-COMP MEASUREMENTS: LOC: 1201, PORT: A , LSN: ls1201a0 (MTP2)
```

These measurements are from 08-02-15, 00:30:00 through 00:59:59.

```
MSGSTRAN = 20, MSGSRCVD = 20, MSURETRN = 0,
OCTRETRN = 0, MOCTTRAN = 400, MOCTRCVD = 400,
MTCEUSG = 0, DURLKOTG = 0, MSGSRGTT = 0,
MOCTRGTT = 0, TDCNGLV1 = 0, TDCNGLV2 = 0,
TDCNGLV3 = 0, ECCNGLV1 = 0, ECCNGLV2 = 0,
ECCNGLV3 = 0, MSGDISC0 = 0, MSGDISC1 = 0,
MSGDISC2 = 0, MSGDISC3 = 0, LNKAVAIL = 183,
NMGWSDSABL = 0, ECLNLCB = 0, ECLNKEX0 = 0
```

;

stdcfg2b 08-02-15 01:00:05 EST EAGLE 38.0.0

LINK-COMP MEASUREMENTS: LOC: 1202, PORT: B , LSN: ls1201a0 (MTP2)

These measurements are from 08-02-15, 00:30:00 through 00:59:59.

```
MSGSTRAN = 20, MSGSRCVD = 20, MSURETRN = 0,
OCTRETRN = 0, MOCTTRAN = 400, MOCTRCVD = 400,
MTCEUSG = 0, DURLKOTG = 0, MSGSRGTT = 0,
MOCTRGTT = 0, TDCNGLV1 = 0, TDCNGLV2 = 0,
TDCNGLV3 = 0, ECCNGLV1 = 0, ECCNGLV2 = 0,
ECCNGLV3 = 0, MSGDISC0 = 0, MSGDISC1 = 0,
MSGDISC2 = 0, MSGDISC3 = 0, LNKAVAIL = 183,
NMGWSDSABL = 0, ECLNLCB = 0, ECLNKEX0 = 0
```

;

stdcfg2b 08-02-15 01:00:05 EST EAGLE 38.0.0

LINK-COMP MEASUREMENTS: LOC: 1203, PORT: A , LSN: ls1201a0 (SAAL)

These measurements are from 08-02-15, 00:30:00 through 00:59:59.

```
MSGSTRAN = 5, MSGSRCVD = 1, MOCTTRAN = 89,
MOCTRCVD = 17, MTCEUSG = 0, DURLKOTG = 117,
MSGSRGTT = 0, MOCTRGTT = 0, TDCNGLV1 = 0,
TDCNGLV2 = 0, TDCNGLV3 = 0, ECCNGLV1 = 0,
ECCNGLV2 = 0, ECCNGLV3 = 0, MSGDISC0 = 0,
MSGDISC1 = 0, MSGDISC2 = 0, MSGDISC3 = 0,
LNKAVAIL = 1684, NMGWSDSABL = 0, OUTCELLS = 16845,
INCCELLS = 16841, SDPDUTRN = 16845, SDPDURCV = 16841,
SDPDURTR = 0, LMSUTRN = 5, LMSURCV = 3,
LMSUOCTTRN = 2035, LMSUOCTRCV = 1248, LMSUTRNDSC = 0,
LMSURCVDS = 1, ECLNLCB = 0, ECLNKEX0 = 0
```

;

stdcfg2b 08-02-15 01:00:05 EST EAGLE 38.0.0

LINK-COMP MEASUREMENTS: LOC: 1204, PORT: A , LSN: ls1201a0 (IPVL)

These measurements are from 08-02-15, 00:30:00 through 00:59:59.

```
MSGSTRAN = 20, MSGSRCVD = 20, MOCTTRAN = 400,
MOCTRCVD = 400, MTCEUSG = 0, DURLKOTG = 0,
MSGSRGTT = 0, MOCTRGTT = 0, TDCNGLV1 = 0,
TDCNGLV2 = 0, TDCNGLV3 = 0, ECCNGLV1 = 0,
ECCNGLV2 = 0, ECCNGLV3 = 0, MSGDISC0 = 0,
MSGDISC1 = 0, MSGDISC2 = 0, MSGDISC3 = 0,
LNKAVAIL = 183, NMGWSDSABL = 0, ECLNLCB = 0,
ECLNKEX0 = 0
```

;

stdcfg2b 08-02-15 01:00:05 EST EAGLE 38.0.0

LINK-COMP MEASUREMENTS: LOC: 1205, PORT: A , LSN: ls1201a0 (IPVHSL)

These measurements are from 08-02-15, 00:30:00 through 00:59:59.

```
MSGSTRAN = 20, MSGSRCVD = 20, MOCTTRAN = 400,
MOCTRCVD = 400, MTCEUSG = 0, DURLKOTG = 0,
MSGSRGTT = 0, MOCTRGTT = 0, TDCNGLV1 = 0,
```

```

TDCNGLV2 = 0, TDCNGLV3 = 0, ECCNGLV1 = 0,
ECCNGLV2 = 0, ECCNGLV3 = 0, MSGDISC0 = 0,
MSGDISC1 = 0, MSGDISC2 = 0, MSGDISC3 = 0,
LNKAVAIL = 183, LMSUTRN = 5, LMSURCV = 3,
LMSUOCTTRN = 2035, LMSUOCTRCV = 1248, LMSUTRNDSC = 0,
LMSURCVDSC = 1, NMGWSDSABL = 0, M2PUDMTR = 0,
M2PUDOCT = 0, M2PUDMRC = 0, M2PUDOCR = 0,
M2PLKNIS = 0, ECLNLCB = 0, ECLNKEX0 = 0

```

;

```

stdcfg2b 08-02-15 01:00:05 EST EAGLE 38.0.0
LINK-COMP MEASUREMENTS: LOC: 2204, LINK: A5 , LSN: ipgwls01 (IPVLGW)
These measurements are from 07-12-31, 00:30:00 through 00:59:59.
MSGSTRAN = 20, MSGSRCVD = 20, MOCTTRAN = 400,
MOCTRCVD = 400, MTCEUSG = 0, DURLKOTG = 0,
MSGSRGTT = 0, MOCTRGTT = 0, TDCNGLV1 = 0,
TDCNGLV2 = 0, TDCNGLV3 = 0, ECCNGLV1 = 0,
ECCNGLV2 = 0, ECCNGLV3 = 0, MSGDISC0 = 0,
MSGDISC1 = 0, MSGDISC2 = 0, MSGDISC3 = 0,
LNKAVAIL = 183, NMGWSDSABL = 0, LMSUTRN = 5,
LMSURCV = 3, LMSUOCTTRN = 2035, LMSUOCTRCV = 1248,
LMSUTRNDSC = 0, LMSURCVDSC = 1, ECLNLCB = 0,
ECLNKXCO = 0

```

;

```

stdcfg2b 08-02-15 01:00:05 EST EAGLE 38.0.0
END OF HALF-HOURLY LINK-COMP MEASUREMENT REPORT

```

;

rept-meas:enttype=link:type=avl:loc=1201:link=a

```

rlghncxa03w 02-03-27 16:53:22 EST EAGLE 30.0.0
Measurements Report will be generated.

```

```

rlghncxa03w 02-03-27 16:53:22 EST EAGLE 30.0.0
TYPE OF REPORT: AVAILABILITY MEASUREMENTS ON LINK
REPORT PERIOD: LAST
REPORT INTERVAL: 02-03-06, 10:30:00 THROUGH 10:59:59

```

```

LINK-AVL MEASUREMENTS: LOC: 1201, PORT: A , LSN: lsn123

```

```

These measurements are from 02-03-06, 10:30:00 through 10:59:59.
WARNING - measurement data represents an incomplete interval.
SUSRECVD = 1161096, SUSTRAN = 1164935

```

```

rlghncxa03w 02-03-27 16:53:22 EST EAGLE 30.0.0
END OF ON-DEMAND LINK-AVL MEASUREMENT REPORT

```

;

rept-meas:type=avl:enttype=link:loc=1201:link=a:nzo=no

```

rlghncxa03w 2-03-06 11:01:35 EST EAGLE 30.0.0
Measurements Report will be generated.

```

```

rlghncxa03w 02-03-06 11:01:35 EST EAGLE 30.0.0
TYPE OF REPORT: AVAILABILITY MEASUREMENTS ON LINK
REPORT PERIOD: LAST
REPORT INTERVAL: 02-03-06, 10:30:00 THROUGH 10:59:59

```

```

LINK-AVL MEASUREMENTS: LOC: 1201, PORT: A , LSN: lsn123

```

```

These measurements are from 02-03-06, 10:30:00 through 10:59:59.
WARNING - measurement data represents an incomplete interval.

```

```

NEARMGINH = 0, FARMGINH = 0, NMDCLFLR = 0,
DRDCLFLR = 0, SURCVERR = 0, DRLNKINH = 0,
NDCLFABN = 0, NDCLFSYNC = 0, NDCLFXDA = 0,
NDCLFXER = 0, NDCLFXDC = 0, NDCLFALP = 0,

```

```

NDCLFINTR =      0, NMFEPRO =      0, NMLCLPRO =      0,
DRFEPRO   =      0, DRCLCLPRO =      0, SUSRECVD = 1161096,
SUSTRAN   = 1164935

```

```

rlghncxa03w 02-03-06 11:01:35 EST EAGLE 30.0.0
END OF ON-DEMAND LINK-AVL MEASUREMENT REPORT

```

;

In the following example, the final counts also show ITU measurement data.

rept-meas:type=gtwy:enttype=stp

```

rlghncxa03w 01-03-05 11:01:35 EST EAGLE 28.1.0
TYPE OF REPORT: GATEWAY MEASUREMENTS ON STP
REPORT PERIOD: LAST
REPORT INTERVAL: 01-03-05, 12:00:00 THROUGH 12:29:59

```

STP-GTWY MEASUREMENTS

These measurements are from 01-03-05, 12:00:00 through 12:29:59.

```

TTMAPPF =      450, GTTPFDIC =      0, MSUDSCRD =      880,
MSURJOPC =      0, MSURJDPC =      0, MSURJSIO =      0,
MSURJCPA =      0, MSURJAPC =      0, MSURJPCS =      779,
MSURJDST =      230, MSURJTT =      0, MSURJDSN =      0,
MSURJTFC =      0, MSURJSRT =      0

```

01

```

rlghncxa03w 00-03-05 11:01:35 EST EAGLE 28.1.0
END OF ON-DEMAND STP-GTWY MEASUREMENT REPORT

```

;

The following example specifies an ANSI gateway linkset for the **lsn** parameter with the **enttype=lsdestni** parameter:

rept-meas:type=gtwy:enttype=lsdestni:lsn=ls1201:ni=5

```

rlghncxa03w 04-02-19 12:30:16 EST EAGLE 31.3.0
TYPE OF REPORT: GATEWAY MEASUREMENTS ON LSDESTNI
REPORT PERIOD: LAST
REPORT INTERVAL: 04-02-19, 12:00:00 THROUGH 12:29:59

```

LSDESTNI-GTWY MEASUREMENTS: LSN: ls1201, NI: 5

These measurements are from 04-02-19, 12:00:00 through 12:29:59.

```

MSURCVNA = 5040000, OCTRCVNA = 201600K, MSUTRNNA = 834033,
OCTTRNNA = 14757021, TFCGTRAN =      0

```

;

```

rlghncxa03w 04-02-19 12:30:18 EST EAGLE 31.3.0
END OF ON-DEMAND LSDESTNI-GTWY MEASUREMENT REPORT

```

;

The following example specifies an ITU gateway linkset for the **lsn** parameter with the **enttype=lnkset** parameter. The output format is the same as for an ANSI gateway linkset:

rept-meas:type=gtwy:enttype=lnkset:lsn=lsnitu

```

rlghncxa03w 00-03-06 11:01:35 EST EAGLE 29.0.0
TYPE OF REPORT: GATEWAY MEASUREMENTS ON LINKSET
REPORT PERIOD: LAST
REPORT INTERVAL: 00-03-05, 13:00:00 THROUGH 13:29:59

```

LINKSET-GTWY MEASUREMENTS: lsnitu

These measurements are from 00-03-05, 13:00:00 through 13:29:59.

```

TFPTRAN =      0, TFPRECD =      5790, TFRTRAN =      0,
TFRRECD =      0, TFATRAN =      5810, TFARECD =      0,
SRSTTRAN =      0, SRSTRECD =      0, SLTRECD =      0,

```



```

SRSCTRAN   =          0, SRSCRECD   =          0, TSTMTRCD   =          0,
SSPTRAN    =         330, SSPRECD   =          0, SSATRAN    =          0,
SSARECD    =         520, SSTTRAN   =          0, SSTRECD    =          0

```

```

rlghncxa03w 00-03-06 11:01:35 EST EAGLE 29.0.0
END OF ON-DEMAND LINKSET-GTWY MEASUREMENT REPORT

```

;

The following example specifies an ITU gateway linkset for the **lsn** parameter with the **enttype=lsdestni** parameter. The output format is the same as for an ANSI gateway linkset. For ITU linksets, the **ni** parameter is not applicable.

rept-meas:type=gtwy:enttype=lsdestni:lsn=lsnitu

```

rlghncxa03w 04-02-06 11:01:35 EST EAGLE 31.3.0
TYPE OF REPORT: GATEWAY MEASUREMENTS ON LSDESTNI
REPORT PERIOD: LAST
REPORT INTERVAL: 04-02-05, 12:00:00 THROUGH 12:29:59

LSDESTNI-GTWY MEASUREMENTS: ITU LSN: lsnitu
These measurements are from 04-02-05, 12:00:00 through 12:29:59.
MSURCVNA   = 5040000, OCTRCVNA   = 201600K, MSUTRNNA   = 834033,
OCTTRNNA   = 14757021, TFCGTRAN   =          0

```

```

rlghncxa03w 04-02-06 11:01:35 EST EAGLE 31.3.0
END OF ON-DEMAND LSDESTNI-GTWY MEASUREMENT REPORT

```

;

The following example specifies an ITU gateway linkset for the **lsn** parameter with the **enttype=lsorigni** parameter. The output format is the same as for an ANSI gateway linkset:

rept-meas:type=gtwy:enttype=lsorigni:lsn=lsnitu

```

rlghncxa03w 04-02-06 11:01:35 EST EAGLE 31.3.0
TYPE OF REPORT: GATEWAY MEASUREMENTS ON LSORIGNI
REPORT PERIOD: LAST
REPORT INTERVAL: 04-02-05, 11:30:00 THROUGH 11:59:59

LSORIGNI-GTWY MEASUREMENTS: ITU LSN: lsnitu

These measurements are from 04-02-05, 11:30:00 through 11:59:59.
TFCRECD    =          0, MSURJOPC   = 834033, MSURJDPC   = 834034,
MSURJCPA    = 14757021, MSURJAPC   = 14757039, MSURJPCS   =          0,
MSURJTFC    =          0, MSURJSRT   =          0, MSUDSCRD   =          0,
MSURJSIO    =          0, MSURJDST   =          0, MSURJTT    =          0,
MSURJDSN    =          0

```

```

rlghncxa03w 04-02-06 11:01:35 EST EAGLE 31.3.0
END OF ON-DEMAND LSORIGNI-GTWY MEASUREMENT REPORT

```

;

The following example specifies an ANSI gateway linkset for the **lsn** parameter where **enttype=lsnismt**. The output format is the same as for an ITU gateway linkset:

rept-meas:type=gtwy:enttype=lsnismt:lsn=ls1201a:ni=43

```

rlghncxa03w 02-12-06 11:01:35 EST EAGLE 30.0.0
TYPE OF REPORT: GATEWAY MEASUREMENTS ON LSONISMT
REPORT PERIOD: LAST
REPORT INTERVAL: 02-12-19, 12:00:00 THROUGH 12:29:59

LSONISMT-GTWY MEASUREMENTS: LSN: ls1201a, NI: 43, ISMT: 6

These measurements are from 02-12-19, 12:00:00 through 12:29:59.
MSUISPMT    = 45397

```

;

LSONISMT-GTWY MEASUREMENTS: LSN: ls1201a, NI: 43, ISMT: 7

These measurements are from 02-12-19, 12:00:00 through 12:29:59.
MSUISPMT = 61423

;

rlghncxa03w 02-12-06 11:01:35 EST EAGLE 30.0.0
END OF ON-DEMAND LSONISMT-GTWY MEASUREMENT REPORT

;

The following example shows output when measurements files are sent to the FTA area:

rept-meas:type=mtcd:enttype=mapscrn

rlghncxa03w 04-02-06 11:01:35 EST EAGLE 31.3.0
Measurement Reports will be generated to active File Transfer Area.
MTCD MAPSCRN SYSTEM report generated to mon_map.csv in FTA.
MTCD MAPSCRN PER-SERVER report generated to mon_serv.csv in FTA.

;

The following example shows component SCTP per card measurements for the card located in slot 2215.

rept-meas:type=comp:enttype=sctpcard:loc=2215

stdcfg2b 08-02-15 01:00:04 EST EAGLE 38.0.0
TYPE OF REPORT: COMPONENT MEASUREMENTS ON SCTPCARD
REPORT PERIOD: LAST
REPORT INTERVAL: 08-02-15 00:30:00 THRU 00:59:59

SCTPCARD-COMP MEASUREMENTS: LOC: 2215

These measurements are from 08-02-15, 00:30:00 through 00:59:59.

SCPKTSNT	=	20,	SCPKTRCV	=	20,	SCPKTRER	=	0,
UNASCTPK	=	0,	SCOCTSNT	=	0,	SCOCTRCV	=	0,
CNTLCHK	=	400,	ORDCHKS	=	400,	CNTLCHKR	=	0,
ORDCHKRC	=	0,	DATCHKS	=	0,	DATCHKRC	=	0,
RTXCHNKS	=	0,	ASOCABTD	=	0,	ASOCSHTD	=	0

;

The following example shows daily UA measurements for a specified application server and association.

rept-meas:type=mtcd:enttype=ua:asname=appsrvr01:aname=assoc01

stdcfg2b 08-02-15 06:07:04 EST EAGLE 38.0.0
TYPE OF REPORT: DAILY MAINTENANCE MEASUREMENTS ON UA
REPORT PERIOD: LAST
REPORT INTERVAL: 08-02-15 00:00:00 THRU 23:59:59

UA-MTCD MEASUREMENTS: AS: appsrvr01 ASSOC: assoc01

These measurements are from 08-02-15, 00:00:00 through 23:59:59.

RXDATAMS	=	100,	TXDATAMS	=	200,	RXDATAOC	=	4000,
TXDATAOC	=	8000,	RXMLRCMS	=	0,	UAASPMRX	=	0,
UAASPMTX	=	0,	UAASPNAC	=	0,	UAASPNAT	=	0,
UACNGCNT	=	10,	UACNGTIM	=	20,	UAMGMTRX	=	0,
UAMGMTTX	=	0,	UANMOCTR	=	0,	UANMOCTT	=	50,
UANMMSG	=	0,	UANMMSGT	=	0,	UASSNMRX	=	0,
UASSNMTX	=	140						

The following example shows day-to-hour SCTP per association measurements for a specified association.

rept-meas:type=mtcdth:enttype=sctpasoc:aname=assoc02

stdcfg2b 08-02-15 06:07:04 EST EAGLE 38.0.0
TYPE OF REPORT: DAY-TO-HOUR MAINTENANCE MEASUREMENTS ON SCTPASOC
REPORT PERIOD: LAST

REPORT INTERVAL: 08-02-15 00:00:00 THRU 05:59:59

SCTPASOC-MTCDTH MEASUREMENTS: ASSOC: assoc02

These measurements are from 08-02-15, 00:00:00 through 05:59:59.

SCPKTSNT	=	2000,	SCPKTRCV	=	4000,	SCOCTSNT	=	800000,
SCOCTRCV	=	3400000,	CNTLCHKS	=	40000,	ORDCHKSN	=	430000,
DATCHKSN	=	34000,	CNTLCHKR	=	28730,	ORDCHKRC	=	83890,
DATCHKRC	=	832890,	RTXCHNKS	=	0,	GAPACKSR	=	0,
ACTVESTB	=	0,	PASVESTB	=	0,	ASOCABTD	=	0,
ASOCSHTD	=	0,	PEERFAIL	=	0,	ASMAXRTO	=	0,
DURASNEST	=	0,	ECASNEST	=	0			

The following example displays output for a linkset that contains the IPVHSL linkset class.

rept-meas:type=comp:enttype=lnkset:lsn=lsn2

eagle10706 08-02-15 10:30:11 EST EAGLE5 38.0.0

TYPE OF REPORT: COMPONENT MEASUREMENTS ON LNKSET

REPORT PERIOD: LAST

REPORT INTERVAL: 08-02-15 10:00:00 THRU 10:29:59

eagle10706 08-02-15 10:30:11 EST EAGLE5 38.0.0

LNKSET-COMP MEASUREMENTS: lsn1 (IPVHSL)

MSGSTRAN	=	120740,	MSGSRCVD	=	147196,	MOCTTRAN	=	2414790,
MOCTRCVD	=	2943920,	MSGSRGTT	=	0,	MOCTRGTT	=	0,
TDLSINAC	=	0,	MSGWSDSLIM	=	0,	ZTTMAPO	=	0,
ZTTMAPI	=	0,	MTPMSCNVTD	=	0,	GTTMSCNVTD	=	0,
SCCPLOOP	=	0						

;

The following example shows output when one or more cards do not respond to the request for measurements.

rept-meas

tst103 08-02-15 14:15:06 CEST EAGLE5 38.0.0

TYPE OF REPORT: NETWORK MANAGEMENT MEASUREMENTS ON STP

REPORT PERIOD: LAST

REPORT INTERVAL: 08-02-15, 14:10:00 THROUGH 14:14:59

STP-NM MEASUREMENTS

These measurements are from 08-02-15, 14:10:00 through 14:14:59.

Measurement data represents an incomplete interval.

ORIGMSUS	=	871308,	TRMDMSUS	=	871357,	THRSWMSU	=	395202,
ORMSUOCT	=	107546401,	TRMSUOCT	=	106679197,	TSMSUOCT	=	43744634,
MSINVDPC	=	0,	MSINVSIO	=	0,	OMSINVDPC	=	0,
MSINVLNK	=	0,	GTTPERFD	=	870721,	GTTUN0NS	=	0,
GTTUN1NT	=	0,	MSSCCPFL	=	0,	MSINVSIF	=	0,
MSNACDPC	=	0,	MSINVSLC	=	0,	MSUDSCRD	=	0,
MSULOST1	=	0,	MSULOST2	=	0,	MSULOST3	=	0,
MSULOST4	=	0,	NMTSKDSC0	=	0,	NMTSKDSC1	=	0,
NMTSKDSC2	=	0,	NMTSKDSC3	=	0,	OVSZMSG	=	0

;

tst103 08-02-15 14:15:06 CEST EAGLE5 38.0.0

END OF ON-DEMAND STP-NM MEASUREMENT REPORT

Legend

TYPE OF REPORT—The type of report, defined by the **type** and **enttype** parameters.

REPORT PERIOD—The date and the time period for which the report is generated.

REPORT INTERVAL—The time period for which the report is generated.

LINK-AVL MEASUREMENTS: LOC—For the link reports (in this example the availability report), the card location, port, and linkset name of the link for which the report is generated.

LINK-COMP MEASUREMENTS: LOC—For the link reports (in this example the components report), the card location, port, and linkset name of the link for which the report is generated.

LNKSET-COMP MEASUREMENTS—For the linkset components report, the name of the linkset for which the report is generated.

SCTPASOC-MTCDTH MEASUREMENTS—For the SCTP day to hour report, the name of the association for which the report is generated.

SCTPCARD-COMP MEASUREMENTS—For the SCTP card components report, the name of the card for which the report is generated.

STPLAN-AVL MEASUREMENTS: LOC—For the STPLAN availability reports, the card location for which the report is generated.

STP-NM MEASUREMENTS—The STPLAN Network Management report (not supported).

STP-SYSTOT MEASUREMENTS—The STP System Total report

<ENTITY>-GTWY MEASUREMENTS—For Gateway Measurements reports, where the **entity** value will be one of the following: STP, LNKSET, LINKSET, ORIGNI, ORIGININC, LSDESTNI, LSONISMT, LSORIGNI, depending on what is being reported.

UA-MTCD MEASUREMENTS

The remainder of the items displayed are the measurements that were made. For more information about these measurements, refer to the *Maintenance Manual*.

rept-stat-alm

Report Status Alarm

Use this command to provide status of all alarms.

Keyword: **rept-stat-alm**

Related Commands: **dact-alm-trns**, **rept-stat-clk**, **rept-stat-trbl**, **rtrv-obit**, **rtrv-trbl**

Command Class: System Maintenance

Parameters

:cli= (optional)

CLLI string. This parameter allows the user to see only alarms that pertain to a particular CLI.

Range: *aaaaaaaaaaaa*

:dev= (optional)

Device. This parameter provides the type of device for which alarms are displayed. The

display=inhb parameter must be specified when this parameter is specified.

Range: **applsock**, **as**, **card**, **cdt**, **clock**, **dlk**, **ls**, **lsmconn**, **route**, **seasx25**, **slk**, **trm**, **rtx**

:display= (optional)

Type of alarms to be displayed. When the **disply=inhb** parameter is specified, the Alarm Inhibit Report appears in the command output and provides information about inhibited alarms in the system. The **dev** parameter can be specified with this parameter to display the Alarm Inhibit Report for a specific device type.

Range: **inhb**

:dur= (optional)

Duration. This parameter indicates whether to display permanently inhibited alarms, temporarily inhibited alarms, or timed inhibited alarms. This parameter is valid only when the **display=inhb** parameter is specified.

Range: **perm**, **temp**, **timed**

:edate= (optional)

Expiry date. This parameter allows the user to see timed alarm inhibits that will expire on the specified date.

Range: **101-991231**

Specify the date in the format *year*, followed by *month*, followed by *day*.

Example

rept-stat-alm

rept-stat-alm:display=inhb:dev=card

rept-stat-alm:display=inhb:clli=slkset1:dev=ls

rept-stat-alm:display=inhb

rept-stat-alm:display=inhb:dur=timed

rept-stat-alm:display=inhb:dur=timed:edate=040520

Dependencies

No other **rept-stat-xxx** command can be in progress when this command is entered.

The **dur** parameter can be specified only if the **display=inhb** parameter is specified.

The **dur** parameter can be specified only if the **display=inhb** parameter is specified.

The **edate** parameter can be specified only if the **dur=timed** parameter is specified.

The **dev** parameter can have only the values **slk**, **ls**, or **route** if the **clli** parameter is specified.

The **dur** parameter must be compatible with the specified device.

The **dev** parameter can be specified only if the **display=inhb** parameter is specified.

The specified **clli** parameter value must exist in the DSTN table.

The **dur** parameter value must be **timed** if the **edate** parameter is specified.

Notes

None

Output

The following example shows output when the system is clean and before a maintenance baseline has been established:

rept-stat-alm

```
rlghncxa03w 06-05-27 15:00:53 EST EAGLE 35.0.0
ALARM TRANSFER= LMC
ALARM MODE CRIT= SILENT MAJR= SILENT MINR= SILENT
ALARM FRAME 1 CRIT= 0 MAJR= 0 MINR= 0
ALARM FRAME 2 CRIT= 0 MAJR= 0 MINR= 0
ALARM FRAME 3 CRIT= 0 MAJR= 0 MINR= 0
ALARM FRAME 4 CRIT= 0 MAJR= 0 MINR= 0
ALARM FRAME 5 CRIT= 0 MAJR= 0 MINR= 0
ALARM FRAME 6 CRIT= 0 MAJR= 0 MINR= 0
ALARM FRAME OAP CRIT= 0 MAJR= 0 MINR= 0
ALARM FRAME GPF CRIT= 0 MAJR= 0 MINR= 0
TOTAL ALARMS CRIT= 0 MAJR= 0 MINR= 0
PERM. INH. ALARMS CRIT= 0 MAJR= 0 MINR= 0
TEMP. INH. ALARMS CRIT= 0 MAJR= 0 MINR= 0
TIMED. INH. ALARMS CRIT= 0 MAJR= 0 MINR= 0
ACTIVE ALARMS CRIT= 0 MAJR= 0 MINR= 0
```

Command Completed.

;

The following example shows output after critical and minor alarms are generated. Major alarms still show SILENT:

rept-stat-alm

```
rlghncxa03w 06-05-27 15:00:53 EST EAGLE 35.0.0
ALARM TRANSFER= LMC
ALARM MODE CRIT= AUDIBLE MAJR= SILENT MINR= AUDIBLE
ALARM FRAME 1 CRIT= 7 MAJR= 0 MINR= 10
ALARM FRAME 2 CRIT= 0 MAJR= 0 MINR= 0
ALARM FRAME 3 CRIT= 0 MAJR= 0 MINR= 0
ALARM FRAME 4 CRIT= 0 MAJR= 0 MINR= 0
ALARM FRAME 5 CRIT= 0 MAJR= 0 MINR= 0
ALARM FRAME 6 CRIT= 0 MAJR= 0 MINR= 0
ALARM FRAME OAP CRIT= 0 MAJR= 0 MINR= 0
ALARM FRAME GPF CRIT= 0 MAJR= 0 MINR= 0
PERM. INH. ALARMS CRIT= 2 MAJR= 0 MINR= 0
TEMP. INH. ALARMS CRIT= 3 MAJR= 0 MINR= 0
TIMED. INH. ALARMS CRIT= 0 MAJR= 0 MINR= 0
ACTIVE ALARMS CRIT= 2 MAJR= 0 MINR= 10
TOTAL ALARMS CRIT= 7 MAJR= 0 MINR= 10
```

Command Completed.

;

The following example shows inhibited alarms:

rept-stat-alm

```
rlghncxa03w 06-05-27 15:00:53 EST EAGLE 35.0.0
ALARM TRANSFER= RMC
ALARM MODE CRIT= AUDIBLE MAJR= SILENT MINR= AUDIBLE
ALARM FRAME 1 CRIT= 3 MAJR= 16 MINR= 22
ALARM FRAME 2 CRIT= 0 MAJR= 0 MINR= 0
ALARM FRAME 3 CRIT= 0 MAJR= 0 MINR= 0
ALARM FRAME 4 CRIT= 0 MAJR= 0 MINR= 0
ALARM FRAME 5 CRIT= 0 MAJR= 0 MINR= 0
ALARM FRAME 6 CRIT= 0 MAJR= 0 MINR= 0
ALARM FRAME OAP CRIT= 0 MAJR= 0 MINR= 0
ALARM FRAME GPF CRIT= 1 MAJR= 2 MINR= 1
```

```

PERM. INH. ALARMS  CRIT=  0          MAJR=  10          MINR=  0
TEMP. INH. ALARMS  CRIT=  0          MAJR=   8          MINR=  0
TIMED. INH. ALARMS CRIT=  0          MAJR=   0          MINR=  0
ACTIVE ALARMS      CRIT=  4          MAJR=   0          MINR= 22
TOTAL ALARMS       CRIT=  4          MAJR=  18          MINR= 23

```

Command Completed.

;

The following example includes the Alarm Inhibit report for the card in location 1301.

rept-stat-alm:display=inhb:dev=card

```

rlghncxa03w 06-05-27 15:00:53 EST  EAGLE 35.0.0
ALARM TRANSFER= RMC
ALARM MODE      CRIT= SILENT          MAJR= SILENT          MINR= SILENT
ALARM FRAME 1   CRIT= 11             MAJR= 24             MINR= 17
ALARM FRAME 2   CRIT=  0             MAJR=  0             MINR=  0
ALARM FRAME 3   CRIT=  0             MAJR=  0             MINR=  0
ALARM FRAME 4   CRIT=  0             MAJR=  0             MINR=  0
ALARM FRAME 5   CRIT=  0             MAJR=  0             MINR=  0
ALARM FRAME 6   CRIT=  0             MAJR=  0             MINR=  0
ALARM FRAME OAP CRIT=  1             MAJR=  6             MINR=  1
PERM. INH. ALARMS CRIT=  0             MAJR=  4             MINR=  2
TEMP. INH. ALARMS CRIT=  1             MAJR=  3             MINR=  1
TIMED. INH. ALARMS CRIT=  0             MAJR=  0             MINR=  0
ACTIVE ALARMS    CRIT= 11             MAJR= 23             MINR= 15
TOTAL ALARMS    CRIT= 13             MAJR= 30             MINR= 18

```

ALARM INHIBIT REPORT

DEVICE	DEVICE IDENTIFIER	DURATION	INH LVL	ALM LVL	DATE	TIME
CARD	1301	PERM	MAJR	MAJR	---	---

Command Completed.

;

The following example includes the Alarm Inhibit report for multiple device types. It includes point codes with point code subtype prefixes, and exception routes that require a second line of display to uniquely identify the exception class/criteria of the routes. A plus sign (+) following the alarm level indicates that the current alarm is not inhibited because the level of the inhibit is less than the level of the alarm.

rept-stat-alm:display=inhb

```

rlghncxa03w 07-02-10 15:00:53 EST  EAGLE 35.6.0
ALARM TRANSFER= RMC
ALARM MODE      CRIT= AUDIBLE          MAJR= SILENT          MINR= SILENT
ALARM FRAME 1   CRIT=  2             MAJR=  8             MINR=  0
ALARM FRAME 2   CRIT=  0             MAJR=  0             MINR=  0
ALARM FRAME 3   CRIT=  0             MAJR=  0             MINR=  0
ALARM FRAME 4   CRIT=  0             MAJR=  0             MINR=  0
ALARM FRAME 5   CRIT=  0             MAJR=  0             MINR=  0
ALARM FRAME 6   CRIT=  0             MAJR=  0             MINR=  0
ALARM FRAME OAP CRIT=  0             MAJR=  0             MINR=  0
PERM. INH. ALARMS CRIT=  0             MAJR=  1             MINR=  0
TEMP. INH. ALARMS CRIT=  0             MAJR=  1             MINR=  0
TIMED. INH. ALARMS CRIT=  0             MAJR=  0             MINR=  0
ACTIVE ALARMS    CRIT=  2             MAJR=  6             MINR=  0
TOTAL ALARMS    CRIT=  2             MAJR=  8             MINR=  0

```

ALARM INHIBIT REPORT

DEVICE	DEVICE IDENTIFIER	DURATION	INH LVL	ALM LVL	DATE	TIME
CARD	1101	PERM	MINR	MAJR+	---	---

ENET	1201,A	PERM	MAJR	MAJR	---	---
ENET	1201,B	TEMP	MAJR	MAJR	---	---
ENET	1101,A	PERM	MINR	MAJR+	---	---

Command Completed.

;

The following example displays timed inhibited alarm information.

rept-stat-alm:display=inhb:dur=timed

```
rlghncxa03w 06-05-27 15:00:53 EST EAGLE 35.0.0
ALARM TRANSFER= RMC
ALARM MODE      CRIT= SILENT      MAJR= SILENT      MINR= SILENT
ALARM FRAME 1   CRIT= 5           MAJR= 3           MINR= 6
ALARM FRAME 2   CRIT= 0           MAJR= 0           MINR= 0
ALARM FRAME 3   CRIT= 0           MAJR= 0           MINR= 0
ALARM FRAME 4   CRIT= 0           MAJR= 0           MINR= 0
ALARM FRAME 5   CRIT= 0           MAJR= 0           MINR= 0
ALARM FRAME 6   CRIT= 0           MAJR= 0           MINR= 0
ALARM FRAME OAP CRIT= 0           MAJR= 0           MINR= 0
PERM. INH. ALARMS CRIT= 0           MAJR= 0           MINR= 0
TEMP. INH. ALARMS CRIT= 0           MAJR= 0           MINR= 0
TIMED. INH. ALARMS CRIT= 1           MAJR= 2           MINR= 1
ACTIVE ALARMS    CRIT= 4           MAJR= 1           MINR= 5
TOTAL ALARMS     CRIT= 5           MAJR= 3           MINR= 6
```

ALARM INHIBIT REPORT

DEVICE	ELEMENT	DUR	INH LVL	CUR LVL	DATE	TIME
ROUTE	ps-004-005-006	TIMED	CRIT	CRIT	040303	1000
E1PORT	1101,1	TIMED	MAJR	MAJR	040302	1200
T1PORT	1301,3	TIMED	MAJR	MAJR	040301	1100
APPLSOCK	sock1234567890	TIMED	MINR	MAJR	040304	1100

Command Completed.

;

The following example displays timed inhibited alarm information for alarms that will expire on the specified date.

rept-stat-alm:display=inhb:dur=timed:edate=040520

```
rlghncxa03w 06-05-27 15:00:53 EST EAGLE 35.0.0
ALARM TRANSFER= RMC
ALARM MODE      CRIT= SILENT      MAJR= SILENT      MINR= SILENT
ALARM FRAME 1   CRIT= 5           MAJR= 3           MINR= 6
ALARM FRAME 2   CRIT= 0           MAJR= 0           MINR= 0
ALARM FRAME 3   CRIT= 0           MAJR= 0           MINR= 0
ALARM FRAME 4   CRIT= 0           MAJR= 0           MINR= 0
ALARM FRAME 5   CRIT= 0           MAJR= 0           MINR= 0
ALARM FRAME 6   CRIT= 0           MAJR= 0           MINR= 0
ALARM FRAME OAP CRIT= 0           MAJR= 0           MINR= 0
PERM. INH. ALARMS CRIT= 0           MAJR= 0           MINR= 0
TEMP. INH. ALARMS CRIT= 0           MAJR= 0           MINR= 0
TIMED. INH. ALARMS CRIT= 1           MAJR= 2           MINR= 1
ACTIVE ALARMS    CRIT= 4           MAJR= 1           MINR= 5
TOTAL ALARMS     CRIT= 5           MAJR= 3           MINR= 6
```

ALARM INHIBIT REPORT

DEVICE	ELEMENT	DUR	INH LVL	CUR LVL	DATE	TIME
ROUTE	ps-004-005-006	TIMED	CRIT	CRIT	040520	1000
E1PORT	1101,1	TIMED	MAJR	MAJR	040520	1200

Command Completed.

;

The following example displays inhibited alarm information for the linksets with the specified CLLI.

rept-stat-alm:display=inhb:clli=slkset1:dev=ls

```
rlghncxa03w 06-05-27 15:00:53 EST EAGLE 35.0.0
ALARM TRANSFER= RMC
ALARM MODE CRIT= SILENT MAJR= SILENT MINR= SILENT
ALARM FRAME 1 CRIT= 5 MAJR= 3 MINR= 6
ALARM FRAME 2 CRIT= 0 MAJR= 0 MINR= 0
ALARM FRAME 3 CRIT= 0 MAJR= 0 MINR= 0
ALARM FRAME 4 CRIT= 0 MAJR= 0 MINR= 0
ALARM FRAME 5 CRIT= 0 MAJR= 0 MINR= 0
ALARM FRAME 6 CRIT= 0 MAJR= 0 MINR= 0
ALARM FRAME OAP CRIT= 0 MAJR= 0 MINR= 0
PERM. INH. ALARMS CRIT= 0 MAJR= 0 MINR= 0
TEMP. INH. ALARMS CRIT= 0 MAJR= 0 MINR= 0
TIMED. INH. ALARMS CRIT= 1 MAJR= 2 MINR= 1
ACTIVE ALARMS CRIT= 4 MAJR= 1 MINR= 5
TOTAL ALARMS CRIT= 5 MAJR= 3 MINR= 6
```

ALARM INHIBIT REPORT

DEVICE	ELEMENT	DUR	INH LVL	CUR LVL	DATE	TIME
LS	slkset1	TIMED	MAJR	MAJR	040302	1200

Command Completed.

;

The following example displays timed inhibited alarm information.

rept-stat-alm:display=inhb:dur=timed

```
rlghncxa03w 06-05-27 15:00:53 EST EAGLE 35.0.0
ALARM TRANSFER= RMC
ALARM MODE CRIT= SILENT MAJR= SILENT MINR= SILENT
ALARM FRAME 1 CRIT= 5 MAJR= 3 MINR= 6
ALARM FRAME 2 CRIT= 0 MAJR= 0 MINR= 0
ALARM FRAME 3 CRIT= 0 MAJR= 0 MINR= 0
ALARM FRAME 4 CRIT= 0 MAJR= 0 MINR= 0
ALARM FRAME 5 CRIT= 0 MAJR= 0 MINR= 0
ALARM FRAME 6 CRIT= 0 MAJR= 0 MINR= 0
ALARM FRAME OAP CRIT= 0 MAJR= 0 MINR= 0
PERM. INH. ALARMS CRIT= 0 MAJR= 0 MINR= 0
TEMP. INH. ALARMS CRIT= 0 MAJR= 0 MINR= 0
TIMED. INH. ALARMS CRIT= 1 MAJR= 2 MINR= 1
ACTIVE ALARMS CRIT= 4 MAJR= 1 MINR= 5
TOTAL ALARMS CRIT= 5 MAJR= 3 MINR= 6
```

ALARM INHIBIT REPORT

DEVICE	DEVICE IDENTIFIER	DURATION	INH LVL	ALM LVL	DATE	TIME
ROUTE	ps-004-005-006	TIMED	CRIT	CRIT	06-08-01	1000
E1PORT	1101,1	TIMED	MAJR	MAJR	06-10-05	1200
T1PORT	1301,3	TIMED	MAJR	MAJR	06-08-01	1100
APPLSOCK	sock1234567890	TIMED	MINR	MAJR	06-10-05	1100

Command Completed.

;

The following example displays timed inhibited alarm information for alarms that will expire on the specified date.

rept-stat-alm:display=inhb:dur=timed:edate=061001

```
upg1040403 06-05-27 14:09:58 EST EAGLE 35.0.0
ALARM TRANSFER= RMC
ALARM MODE CRIT= SILENT MAJR= SILENT MINR= SILENT
```

ALARM	FRAME 1	CRIT=	5	MAJR=	3	MINR=	6
ALARM	FRAME 2	CRIT=	0	MAJR=	0	MINR=	0
ALARM	FRAME 3	CRIT=	0	MAJR=	0	MINR=	0
ALARM	FRAME 4	CRIT=	0	MAJR=	0	MINR=	0
ALARM	FRAME 5	CRIT=	0	MAJR=	0	MINR=	0
ALARM	FRAME 6	CRIT=	0	MAJR=	0	MINR=	0
ALARM	FRAME OAP	CRIT=	0	MAJR=	0	MINR=	0
PERM. INH. ALARMS		CRIT=	0	MAJR=	0	MINR=	0
TEMP. INH. ALARMS		CRIT=	0	MAJR=	0	MINR=	0
TIMED. INH. ALARMS		CRIT=	1	MAJR=	2	MINR=	1
ACTIVE ALARMS		CRIT=	4	MAJR=	1	MINR=	5
TOTAL ALARMS		CRIT=	5	MAJR=	3	MINR=	6

ALARM INHIBIT REPORT

DEVICE	DEVICE IDENTIFIER	DURATION	INH LVL	ALM LVL	DATE	TIME
ROUTE	ps-004-005-006	TIMED	CRIT	CRIT	06-10-01	1000
E1PORT	1101,1	TIMED	MAJR	MAJR	06-10-01	1200

Command Completed.

;

The following example displays inhibited alarm information for the linksets with the specified CLLI.

rept-stat-alm:display=inhb:clli=slkset1:dev=ls

```
upg1040403 06-05-27 14:09:58 EST EAGLE 35.0.0
ALARM TRANSFER= RMC
ALARM MODE          CRIT= SILENT      MAJR= SILENT      MINR= SILENT
ALARM FRAME 1      CRIT= 5            MAJR= 3            MINR= 6
ALARM FRAME 2      CRIT= 0            MAJR= 0            MINR= 0
ALARM FRAME 3      CRIT= 0            MAJR= 0            MINR= 0
ALARM FRAME 4      CRIT= 0            MAJR= 0            MINR= 0
ALARM FRAME 5      CRIT= 0            MAJR= 0            MINR= 0
ALARM FRAME 6      CRIT= 0            MAJR= 0            MINR= 0
ALARM FRAME OAP    CRIT= 0            MAJR= 0            MINR= 0
PERM. INH. ALARMS  CRIT= 0            MAJR= 0            MINR= 0
TEMP. INH. ALARMS  CRIT= 0            MAJR= 0            MINR= 0
TIMED. INH. ALARMS CRIT= 1            MAJR= 2            MINR= 1
ACTIVE ALARMS      CRIT= 4            MAJR= 1            MINR= 5
TOTAL ALARMS       CRIT= 5            MAJR= 3            MINR= 6
```

ALARM INHIBIT REPORT

DEVICE	DEVICE IDENTIFIER	DURATION	INH LVL	ALM LVL	DATE	TIME
LS	slkset1	TIMED	MAJR	MAJR	06-10-01	1200

Command Completed.

Legend

ALARM TRANSFER—The destination of the alarms. LMC=Local Maintenance Center, RMC=Remote Maintenance Center.

ALARM MODE—Displays whether the critical, major, and minor alarms are silent or audible

ALARM FRAME 1—The number of critical, major, and minor alarms detected in the control frame CF-00 (frame 1).

ALARM FRAME 2—The number of critical, major, and minor alarms detected in extension frame EF-00 (frame 2).

ALARM FRAME 3—The number of critical, major, and minor alarms detected in extension frame EF-01 (frame 3).

ALARM FRAME 4—The number of critical, major, and minor alarms detected in extension frame EF-02 (frame 4).

ALARM FRAME 5—The number of critical, major, and minor alarms detected in extension frame EF-03 (frame 5).

ALARM FRAME 6—The number of critical, major, and minor alarms detected in extension frame EF-04 (frame 6).

ALARM FRAME OAP—The number of critical, major, and minor alarms detected in the OAP Frame.

ALARM FRAME GPF—The number of critical, major, and minor alarms detected at the MPS (multi-purpose server). If the LNP feature is turned on, the number includes alarms for any applications running on the MPS. If the G-Flex, G-Port, INP, or AINP Q feature is turned on, the number includes alarms for any applications running on the GSM subsystem and the DSM/EPAP links.

PERM. INH. ALARMS—The number of alarms that are permanently inhibited per alarm level.

TEMP. INH. ALARMS—The number of alarms that are temporarily inhibited per alarm level.

TIMED. INH. ALARMS—The number of alarms that are timed inhibited per alarm level.

ACTIVE ALARMS—The number of alarms still active per alarm level.

TOTAL ALARMS—The total number of alarms per alarm level. The inhibited alarm count plus the active alarm count equals the total alarm count.

CRIT—Critical alarms with silent/audible indicator.

MAJOR—Major alarms with silent/audible indicator.

MINOR—Minor alarms with silent/audible indicator.

Alarm Inhibit Report:

DEVICE—The device for which alarms are currently inhibited. Only devices that are alarm inhibited are shown.

ELEMENT—The element of the device for which alarms are inhibited (such as card location, port, routing key, socket or association name)

DURATION—Indicates whether the device is alarm inhibited permanently or temporarily or for a specific length of time

INH LVL—Level in which devices are alarm inhibited (Critical, Major, Minor). The **inh-alm** command defaults the level to Major. Devices cannot be alarm inhibited at a critical level unless the **chg-stpopt** command **critalminh** parameter is turned on.

CUR LVL—Level of the current alarm on the device (Critical, Major, Minor). "None" indicates that there is currently no alarm on the device (DUR should show "PERM." A plus sign (+) seen following the alarm level indicates that the current alarm is not inhibited because the level of the inhibit is less than the level of the alarm.

DATE—The date on which a timed inhibited alarm will automatically clear at the specified time

TIME—The time at which a timed inhibited alarm will automatically clear on the specified date

rept-stat-applsock

Report Status Application Socket

Use this command to display the status of the IP application sockets.

Keyword: **rept-stat-applsock**

Related Commands: „

Command Class: System Maintenance

FEA—Far-end allowed
 NEP—Near-end prohibited
 FEP—Far-end prohibited

Output

```
rept-stat-applsock
rlghncxa03w 04-02-17 15:35:05 EST EAGLE 31.3.0
SOCKET      PST      SST
socred      OOS-MT    ALMINH
socyellow   IS-ANR      ----
socblue     OOS-MT-DSBLD ----
Command Completed
;

rept-stat-applsock
rlghncxa03w 04-02-17 15:35:05 EST EAGLE 31.3.0
SOCKET      PST      SST
ipg11051    IS-NR      NEA-FEA
ipg11071    IS-NR      NEA-FEA
ipl1201     IS-NR      NEA-FEA
Command Completed.
;

rept-stat-applsock:link=b
rlghncxa03w 04-02-17 15:35:05 EST EAGLE 34.0.0
SOCKET      PST      SST
ipl1201b    IS-NR      NEA-FEA
Command Completed.
;
```

rept-stat-as

Report Status AS Association

Use this command to generate a report of the Application Server (AS) association status.

Keyword: **rept-stat-as**

Related Commands: **chg-as, ent-as, rtrv-as**

Command Class: System Maintenance

Parameters

:aname= (optional)

Association name to report on. When the **aname** parameter is specified, the **rept-stat-as** command will report the ASP states for a given association in all of the AS's that it is assigned to.

Range: *aaaaaaaaaaaaaaaa*

Up to 15 alphanumeric characters; the first character must be a letter.

:asname= (optional)

Application Server name; the AS name to report on. When the **asame** parameter is specified, the **rept-stat-as** command will report the PST, SST, ASP state, and ASP-ID for each association in the AS.

Range: *aaaaaaaaaaaaaaaa*

Up to 15 alphanumeric characters; the first character must be a letter

Example

```
rept-stat-as
```

Dependencies

If an association is specified in the command, the specified association must exist in the AS table.

Notes

This command can be canceled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

If the command is specified without a parameter, status for all AS associations is displayed.

This command displays the following states: ACTIVE, UP, DOWN, PENDING.

Output**rept-stat-as**

```
rlghncxa03w 04-02-04 12:57:21 EST EAGLE 34.0.0
ASNAME      PST      SST
m3ua0001    OOS-MT    AS-INACTIVE
m3ua0002    IS-NR     AS-ACTIVE
m3ua0003    OOS-MT-DSBLD AS-DOWN
m3ua0004    IS-ANR    AS-PENDING
```

Command Completed.

;

rept-stat-as:asname=m3ua0001

```
rlghncxa03w 05-02-04 12:57:21 EST EAGLE 34.0.0
ASNAME      PST      SST
m3ua0001    OOS-MT    AS-INACTIVE
```

```
ANAME      PST      SST      ASP STATE      ASPID
m3ua_1301  OOS-MT-DSBLD  ---      ASP-DOWN      undefined
m3ua_1302  OOS-MT        CONNECTING  ASP-DOWN      undefined
m3ua_1303  IS-NR         ESTABLISHED ASP-INACTIVE  123456789
```

Command Completed.

;

rept-stat-as:aname=m3ua_1303

```
rlghncxa03w 05-02-04 12:57:21 EST EAGLE 34.0.0
ASNAME      ANAME      ASP STATE
m3ua0001    m3ua_1303  ASP-INACTIVE
m3ua0002    m3ua_1303  ASP-ACTIVE
m3ua0003    m3ua_1303  ASP-DOWN
```

Command Completed.

;

rept-stat-assoc**Report Status SCTP Association**

Use this command to generate a report of the SCTP association's status.

Keyword: rept-stat-assoc

Related Commands: chg-assoc, ent-assoc, rtrv-assoc

Command Class: System Maintenance

Parameters

:aname= (optional)

Name of association to report on.

Range: ayyyyyyyyyyyyyy

Up to 15 alphanumeric characters; the first character must be a letter

:lhost= (optional)

The Local Host name as defined in the IP Host table.

[illegible]

A string of characters up to 60 characters in length. The first character must be a letter. Valid characters are **a-z**, **A-Z**, **0-9**, - (dash), and . (period).

:link= (optional)

The signaling link associated with this socket.

Synonym: port

Range: a, b, a1-a31, b1-b31

Not all card types support all **link** parameter values.

See "Summary of Range Values for :link Parameter" for valid **link** parameter range values for each type of card that can have assigned signaling links ports.

:rhost= (optional)

Name of Remote Host as defined in the IP Host table.

[illegible]

A string of characters up to 60 characters in length. The first character must be a letter. Valid characters are **a-z**, **A-Z**, **0-9**, - (dash), and . (period).

Example

rept-stat-assoc

```
rept-stat-assoc:aname= a23456789012345
```

Dependencies

If an association is specified in the command, the specified association must exist in the AS table.

Notes

This command can be canceled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

This command displays the primary states (PST) and the secondary state (SST).

Primary states are:

IS-NR—In-service normal

IS-ANR—In-service abnormal (congested)

OOS-MT—Out of service

OOS-MT-DSBLD—Out-of-service maintenance-disabled (provisioned to be out of service by closing, prohibiting, or deactivation)

Connection states are:

RESTRICTED

OUT-OF-SERVICE

CONNECTING

ESTABLISHED—Valid only for M2PA associations

The **LINK** field values in the output are displayed as:

- "***"—If the association is assigned to multiple links.
- "--"—If the association is not assigned to any link.
- Appropriate LINK ID—If the association is assigned to only one link.

Output

rept-stat-assoc

```
eagle10212 08-01-29 10:41:52 EST EAGLE 38.0.0
CARD IPLNK
ANAME      LOC  PORT  LINK PST          SST          ASPID
ipgi1303a  1303 A      A    00S-MT        OOS          undefined
ipl1301b   1301 A      B    IS-NR         ESTABLISHED
a1         1305 A      **   00S-MT-DSBLD  OOS          undefined
ipg1308a1  1308 A      A    00S-MT-DSBLD  OOS          undefined
sca        1306 A      A    IS-ANR        CONGESTED
a2         1304 A      A    IS-ANR        EXCESS RETRANS  undefined
sca7       1307 A,B    A    IS-NR         ESTABLISHED    undefined
lavern     1305 A      A    IS-NR         ESTABLISHED
ipl1313b   1313 A      B    00S-MT-DSBLD  OOS
ipl1302a   1302 A      A    IS-NR         ESTABLISHED
n          1315 A      A    00S-MT        CONNECTING
ipg1305a1  1305 A      A    00S-MT-DSBLD  OOS          undefined
ipl1301b3  1301 A      B3   IS-NR         ESTABLISHED
m2pa1107a0 1107 A      --   00S-MT-DSBLD  OOS
m2pa1107a1 1107 A      --   00S-MT-DSBLD  OOS
ipg1215a01 1215 A      **   IS-NR         ESTABLISHED    undefined
ipg1215a02 1215 A      **   IS-NR         ESTABLISHED    undefined
ipg1215a03 1215 A      --   00S-MT-DSBLD  OOS          undefined
ipg1215a04 1215 A      **   00S-MT        OOS          undefined
ipg1215a05 1215 A      --   00S-MT-DSBLD  OOS          undefined
sg1305a    1305 A      A    IS-NR         ESTABLISHED    undefined
Command Completed.
```

The following example displays the resulting output when the **aname** parameter is specified for an IPGWx association:

rept-stat-assoc:aname=a2

```
eagle10212 08-01-29 10:41:52 EST EAGLE 38.0.0
CARD IPLNK
ANAME      LOC  PORT  LINK PST          SST          ASPID
a2         1304 A      A    IS-ANR        EXCESS RETRANS
undefined

ALARM STATUS = * 0536 IP Connection Excess Retransmits

ASNAME      ANAME      ASP-STATE
as1         a2          ASP-UP

Command Completed.
```

The following example displays the resulting output when the **aname** parameter is specified for an M2PA association:

rept-stat-assoc:aname=assocm2pa

```
eagle10212 07-05-29 10:41:52 EST EAGLE 37.0.0
CARD IPLNK
ANAME      LOC  PORT  LINK PST          SST
assocm2pa  1301 A      A    IS-NR         ESTABLISHED

Command Completed.
```

The following example displays the resulting output when the **aname** parameter is specified for an IPSPG-M3UA association:

rept-stat-assoc:aname=sg1305a

```
eagle10212 08-02-06 17:00:42 EST EAGLE 38.0.0
CARD IPLNK
ANAME      LOC  PORT  LINK PST          SST          ASPID
sg1305a    1305 A      A    IS-NR         ESTABLISHED    undefined
```


LSN	ANAME	ASP STATE
ls1305a	sg1305a	ACTIVE

Command Completed.

The following example displays the resulting output when the **aname** parameter is specified for an IPSG-M3UA association:

rept-stat-assoc:aname=a1

eagle10212 08-02-06 17:00:56 EST EAGLE 38.0.0

	CARD	IPLNK			
ANAME	LOC	PORT	LINK	PST	SST
a1	1305	A	**	00S-MT	00S
					ASPID
					undefined

LSN	ANAME	ASP STATE
ls1305a	a1	DOWN
ls1305i	a1	DOWN
lsitunbb	a1	DOWN
lsitunaa	a1	DOWN

Command Completed.

rept-stat-card

Report Status Card

Use this command to display the card status and maintenance activity states. The output includes card location, the GPL version being used by the card, device type, device primary state, device secondary state, and device associated state.

Keyword: rept-stat-card

Related Commands: dlt-card, ent-card, init-card, rmv-card, rst-card, rtrv-card

Command Class: System Maintenance

Parameters

:appl= (optional)

Application. This parameter is specified to report the status of cards running the specified application.

Range: xxxxxxx

1 alphabetic character followed by up to 6 alphanumeric characters

atmansi—The application is used by the ATM cards to support the ATM high-speed signaling link feature. It is also used by the E5-ATM card to support T1 functionality.

atmitu—The application is used by the E1 ATM cards to support the E1 ATM high-speed signaling link feature. It is also used by the E5-ATM card to support E1 functionality.

ccs7itu—This application is used by the LIM cards, the E1/T1 MIM card, and the HC-MIM card for ITU MTP functionality.

eroute—This application is used by the STC cards for the EAGLE 5 Integrated Monitoring Support functions.

gls—This application is used by the TSM and E5-TSM cards for downloading gateway screening to LIM and SCCP cards.

ipgwi—This application is used by the SSEDCCM card and the E5-ENET card for TCP/IP point-to-multipoint connectivity for ITU point codes. The system allows a maximum of 125 cards to be assigned the **ipgwi** application.

iplim—This application is used by the SSEDCCM card and the E5-ENET card for TCP/IP point-to-point connectivity for ANSI point codes. The system allows a maximum of 41 cards to be assigned the **iplim** or **iplimi** application if a maximum of 700 links are assigned in the system. The system allows a maximum of 100 cards to be assigned the **iplim** or **iplimi** application if between 701 and 2000 links are assigned in the system.

iplimi—This application is used by the SSED CM card and the E5-ENET card for TCP/IP point-to-point connectivity for ITU point codes. The system allows a maximum of 41 cards to be assigned the **iplimi** or **iplim** application if a maximum of 700 links are assigned in the system. The system allows a maximum of 100 cards to be assigned the **iplim** or **iplimi** application if between 701 and 2000 links are assigned in the system.

ips—This application is used by the IPSM card for the IP User Interface feature.

ipsg—This application is used by the E5-ENET card to support the combined functionality of IPLIMx M2PA and IPGWx M3UA.

mcp—This application is used by the MCPM card for the Measurements Platform application.

sccp—This application is used by the TSM cards for the global title translation application.

ss7ansi—This application is used by the LIM cards, the E1/T1 MIM card, the HC-MIM card, and the E5-E1T1 card for ANSI MTP functionality.

ss7gx25—This application is used by the LIM cards to support X.25 functionality.

ss7ipgw—The application software for TCP/IP point-to-multipoint connectivity. The system allows a maximum of 125 cards to be assigned the **ss7ipgw** application.

stplan—This application is used by the ACM card, the SSED CM card, and the E5-ENET card to support the STP LAN functions.

vsccp—This application is used by the Service Module cards for GTT, EPAP-based features, and the LNP feature.

:links= (optional)

Filter specification. Report the maximum number of links, only equipped links, or only unequipped links on the card in the specified card location (**loc**).

Range: **all, equip, unequip**

all — Reports the maximum number of links available on the card in the specified **loc**

equip — Reports only links that are equipped

unequip — Reports only links that are unequipped

Default: **equip**

:loc= (optional)

Card address. The card location as stenciled on the shelf of the system.

Range: **1101-1117, 1201-1218, 1301-1318, 2101-2118, 2201-2218, 2301-2318, 3101-3118, 3201-3218, 3301-3318, 4101-4118, 4201-4218, 4301-4318, 5101-5118, 5201-5218, 5301-5318, 6101-6118**

Default: A status of all cards is displayed.

:mode= (optional)

Mode. The type of report to display (full or summary).

Range: **full**

Default: A summary report is displayed.

:stat= (optional)

Primary state filter. This parameter cannot be used with the **loc** or **mode** parameters. This filter allows printing of cards in a specified state (all in-service cards, for example).

Range: **all, alminh, anr, dsbld, mt, nr**

all — All of the primary states

alminh — Alarms inhibited

anr — In service abnormal (IS-ANR)

dsbld — Out of service maintenance disabled (OOS-MT-DSBLD)

mt — Out of service maintenance (OOS-MT)
nr — In service normal (IS-NR)
Default: **all**

Example

```
rept-stat-card
rept-stat-card:loc=1201
rept-stat-card:loc=1201:mode=full
rept-stat-card:stat=alminh
rept-stat-card:appl=ss7ansi
rept-stat-card:loc=1205:links=equip:mode=full
```

Dependencies

No other command can be in progress when this command is entered.

The **mode** parameter can be specified only when the **loc** parameter is specified.

Only one of the **loc** parameter, the **stat** parameter, and the **appl** parameter can be specified in the command.

The shelf and card must be equipped.

The card location (**loc**) must be within the allowed range.

The following applications are valid for the **appl** parameter: **ss7ansi**, **sccp**, **gls**, **ccs7itu**, **ss7gx25**, **stplan**, **atmansi**, **iplim**, **iplimi**, **ss7ipgw**, **vscpp**, **atmitu**, **ipgwi**, **ips**, **ipsg**, **eroute**, **mcp**.

Notes

ATM, SS7 LIM, and X.25 cards show TVG results for SNM (signaling network management), SCCP, and SLAN traffic. SCCP cards show only SNM traffic statistics for TVG.

This command can be canceled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

The **mode=full** parameter gives more information than the summary report.

In the output, the SCCP service card field shows which TSM is providing the specified card with GTT service.

The group ticket voucher (TVG) status for low-speed signaling links, ATM high-speed signaling links, and TSMs is displayed when the **mode=full** and **loc** parameters are specified. The status displayed is for the previous 5 minutes and the previous 24 hours.

A plus (+) symbol in the output indicates that the flash GPL currently being run has not yet been activated on the card. See the **act-flash** or **init-flash** command for a list of flash GPLs.

E1 alarms are displayed in the alarm status field. When the **mode=full** parameter is specified, separate fields display status information from the UAM for each E1 interface on the card. For each E1 interface, the display shows the highest priority E1 failure that exists on that E1 card. When no E1 errors exist, the clearing E1 UAM text is displayed. When an E1 interface is not assigned to the card, no output is generated for that E1 position.

T1 alarms are displayed in the alarm status field. When the **mode=full** parameter is specified, separate fields display status information from the UAM for each T1 interface on the card. For each T1 interface, the display shows the highest priority T1 failure that exists on that T1 card. When no T1 errors exist, the clearing T1 UAM text is displayed. When an T1 interface is not assigned to the card, no output is generated for that T1 position.

If the **links** parameter is set to **all**, then 64 links are displayed.

If the **links=unequip** parameter is specified, but the card has not been installed or loaded, then 64 unequipped links are displayed.

If the **links=unequip** parameter is specified, and the card is or has been installed or loaded, then the number of links displayed is equal to 64 minus the provisioned links.

If the **links=equip** parameter is specified, then only provisioned links are displayed.

The CARD WARNING field in the command output indicates a specific condition that can hinder the normal functioning of a card. For HC-MIM and E5-E1T1 cards, the "Obsolete Framer" warning indicates that a port configured on the card may get stuck in a Loss of Frame (LOF) state. If an HC-MIM card or E5-E1T1 card displaying this warning is reloaded, and one of the ports on the card is reporting LOF, then the OAM reboots the card up to 5 times to attempt to clear the LOF condition when the card changes state from IS-ANR to IS-NR.

Fast Copy Cards

A card that can run the Fast Copy interface is referred to as an *FC-capable card*. Currently, E5-ENET cards running the **ipsg** application are the only supported FC-capable cards. After the **fcmode=fcopy** parameter is specified (see the **chg-eisopts** command) for an FC-capable card, the card is referred to as an *FC-enabled card*.

Output

The clock status fields are reported when the **mode=full** report is selected. The clock status report includes a CLOCK A, CLOCK B, and CLOCK I status. The High Speed clock status report (displayed for ATM, E1 and T1 cards) includes HS CLOCK A, HS CLOCK B, and HS CLOCK I. The valid values for each clock status are ----, **Idle**, **Active**, and **Fault**. The meanings of these values are:

---- (dashes)—Undefined, card must be OOS

Idle—Clock is available but is not being used by the card

Active—Clock is available and is being used by the card

Fault—Clock is unavailable

Idle and **Active** are shown when the CLK or HS CLK distribution to the card is good. The **Active** value does not denote that the card is actually using the clock source for link alignment. Use the **rt rv-slk**, **rtrv-e1**, and **rtrv-t1** commands to determine what clock source each card is using for link alignment.

If the **mode=full** parameter is specified for an FC-enabled card, then the Fast Copy status and the FC Link status is shown.

"ENET" is displayed as card type if an E5-ENET card is not plugged-in for an IPSG application.

rept-stat-card

```
rlghncxa03w 09-01-04 12:57:21 EST EAGLE5 40.0.0
CARD  VERSION      TYPE      GPL      PST      SST      AST
1101  125-020-000    TSM       GLS       IS-NR     Active   -----
1102  128-002-000    LIMATM    ATMHC     IS-NR     Active   -----
1103  125-020-000    DSM       VSCCP     IS-NR     Active   -----
1105  125-020-000    DSM       VSCCP     IS-NR     Active   -----
1106  130-001-000    TSM       GLSHC     IS-NR     Active   -----
1107  125-020-000    STC       EROUTE    IS-NR     Active   -----
1109  125-020-000    HMUX      BPHMUX    IS-NR     Active   -----
1110  125-020-000    HMUX      BPHMUX    IS-NR     Active   -----
1111  125-020-000    IPSM      IPS        IS-NR     Active   -----
1112  125-020-000    EDSM      MCP        IS-NR     Active   -----
1113  070-019-002    GPSP      EOAM       IS-NR     Standby  -----
1114  -----         TDM              IS-NR     Active   -----
1115  070-019-002    GPSP      EOAM       IS-NR     Active   -----
1116  -----         TDM              IS-NR     Active   -----
1117  -----         MDAL              IS-NR     Active   -----
1201  125-020-000    LIMDS0    SS7ANSI    IS-NR     Active   -----
1202  -----         LIMCH     SS7ANSI    OOS-MT-DSBLD Manual   -----
1203  125-020-000    LIMCH     SS7ANSI    IS-NR     Active   -----
1205  125-020-000    EDCM      IPGWI      IS-NR     Active   -----
1206  125-020-000    EDCM      SS7IPGW    IS-NR     Active   -----
1207  125-020-000    EDCM      IPLIM      IS-NR     Active   -----
1208  125-020-000    EDCM      IPLIMI     IS-NR     Active   -----
1209  125-020-000    HMUX      BPHMUX    IS-NR     Active   -----
1210  125-020-000    HMUX      BPHMUX    IS-NR     Active   -----
1211  125-020-000    LIMATM    ATMANSI    IS-NR     Active   -----
1213  125-020-000    LIME1ATM  ATMITU     IS-NR     Active   -----
1301  048-019-022    LIME1     SS7ANSI    IS-NR     Active   -----
1303  125-022-000    LIME1     SS7ANSI    IS-NR     Active   -----
1305  125-022-000    LIME1     CCS7ITU    IS-NR     Active   -----
1309  125-017-000    HIPR      HIPR       IS-NR     Active   -----
1310  125-017-000    HIPR      HIPR       IS-NR     Active   -----
1311  125-020-000    STC       EROUTE    IS-NR     Active   -----
1313  125-020-000    DCM       STPLAN     IS-NR     Active   -----
1401  104-002-000    LIMV35    CCS7ITU    IS-NR     Active   -----
1403  128-018-000    DCM       IPLHC      IS-NR     Active   -----
1407  104-001-000    LIMCH     CCS7ITU    IS-NR     Active   -----
1408  128-018-000    DCM       SLANHC     IS-NR     Active   -----
```

```

1409 128-016-000 HIPR      HIPR      IS-NR      Active  -----
1410 128-016-000 HIPR      HIPR      IS-NR      Active  -----
1411 128-018-000 STC       ERTHC     IS-NR      Active  -----
1413 053-000-058 E5ENET    IPSG      IS-NR      Active  -----
Command Completed.

```

;

This example displays the card status for the GPSM-II of MASP A located in slot 1113, which is currently active.

rept-stat-card:loc=1113:mode=full

```

tekelecstp 06-05-29 12:15:95 EST  EAGLE 35.0.0
CARD  VERSION      TYPE      GPL      PST      SST      AST
1113  126-004-000  GPSM      EOAM      IS-NR      Active  -----
ALARM STATUS      = No Alarms.
BPDCM  GPL version = 126-004-000
IMT BUS A          = Conn
IMT BUS B          = Conn
CLOCK A           = Active
CLOCK B           = Idle
CLOCK I           = Idle
MBD BIP STATUS    = Valid
MOTHER BOARD ID   = GPSM2
DBD STATUS        = Valid
DBD TYPE          = MEM
DBD MEMORY SIZE   = 1024M
HW VERIFICATION CODE = ----
TROUBLE TEXT VER. = Rev 1.6
Command Completed.

```

;

rept-stat-card:loc=1201

```

rlghncxa03w 07-05-04 15:10:19 EST  EAGLE 37.0.0
CARD  VERSION      TYPE      GPL      PST      SST      AST
1201  121-006-000  LIMDS0    SS7ANSI   IS-NR      Active  -----
ALARM STATUS      = No Alarms.
SS7ANSI GPL VERSION = 121-006-000
IMT BUS A          = Conn
IMT BUS B          = Conn
SIGNALING LINK STATUS
SLK   PST          LS          CLLI
A     OOS-MT       e2m1s3    ssp301
Command Completed

```

;

The following example displays all cards that have alarms inhibited in the system.

rept-stat-card:stat=alminh

```

rlghncxa03w 04-02-04 12:57:21 EST  EAGLE 31.6.0
CARD  VERSION      TYPE      APPL      PST      SST      AST
1211  023-001-000  LIMATM    ATMANSI   IS-NR      Active  ALMINH
Command Completed.

```

;

The following example shows the high-speed clock status that is displayed for ATMANSI cards.

rept-stat-card:loc=1106:mode=full

```

tekelecstp 06-05-21 11:55:03 EST  EAGLE 35.0.0
CARD  VERSION      TYPE      GPL      PST      SST      AST
1106  126-004-000  LIMATM    ATMANSI   IS-NR      Active  -----
ALARM STATUS      = No Alarms.
BPHCAP GPL version = 125-031-022
IMT BUS A          = Conn
IMT BUS B          = Conn
CLOCK A           = Active

```

```

CLOCK B           = Idle
CLOCK I           = Idle
HS CLOCK A        = Active
HS CLOCK B        = Fault
HS CLOCK I        = Idle
MBD BIP STATUS    = Valid
MOTHER BOARD ID   = HCAP
DBD STATUS        = Valid
DBD TYPE          = None
DBD MEMORY SIZE   = 0M
HW VERIFICATION CODE = ----
SIGNALING LINK STATUS
  SLK   PST           LS           CLLI
TVG STATUS
  SNM   TVG RESULT    = 24 hr: -----, 5 min: -----
  SLAN   TVG RESULT    = 24 hr: -----, 5 min: -----
  SCCP   TVG RESULT    = 24 hr: -----, 5 min: -----
  INM    TVG RESULT    = 24 hr: -----, 5 min: -----
Command Completed.

```

;

The following example shows the output for a multi-port LIM (MPL) card. The GPL column, which displays the GPL running on the card, enables you to differentiate between the two-port LIMDS0 and the multi-port LIM. A multi-port LIM always displays SS7ML in the GPL column. When the parameter **mode=full** is specified, the mother board ID is displayed. The MIM type is displayed for multi-port LIM cards, while the PROM type is displayed for dual-port cards.

rept-stat-card:loc=1203:mode=full

```

tekelecstp 06-05-21 11:19:03 EST EAGLE 35.0.0
CARD  VERSION  TYPE    GPL      PST      SST      AST
1203  125-053-068 LIMDS0 SS7ML    IS-NR    Active    -----
ALARM STATUS      = * 0022 Clock B for card failed
BPMLT GPL version = 125-047-000
IMT BUS A         = Conn
IMT BUS B         = Conn
CLOCK A           = Active
CLOCK B           = Fault
CLOCK I           = Idle
HS CLOCK A        = Fault
HS CLOCK B        = Fault
HS CLOCK I        = Idle
MBD BIP STATUS    = VALID
MOTHER BOARD ID   = MIM
DBD STATUS        = Valid
DBD TYPE          = None
DBD MEMORY SIZE   = 0M
HW VERIFICATION CODE = ----
SIGNALING LINK STATUS
  SLK   PST           LS           CLLI
  A     OOS-MT        ls1203a0    tklcb1203a0
  B     OOS-MT        ls1203a0    tklcb1203a0
  A1    OOS-MT        ls1203a1    tklcb1203a1
  B1    OOS-MT        ls1203a1    tklcb1203a1
  A2    OOS-MT        ls1203a2    tklcb1203a2
  B2    OOS-MT        ls1203a2    tklcb1203a2
  A3    OOS-MT        ls1203a3    tklcb1203a3
  B3    OOS-MT        ls1203a3    tklcb1203a3
TVG STATUS
  SNM   TVG RESULT    = 24 hr: -----, 5 min: -----
  SLAN   TVG RESULT    = 24 hr: -----, 5 min: -----
  SCCP   TVG RESULT    = 24 hr: -----, 5 min: -----
  INM    TVG RESULT    = 24 hr: -----, 5 min: -----
Command Completed.

```

;

The following example lists all possible links on an E1/T1 MIM card. Only link A is equipped.

rept-stat-card: loc=1205: links=all

```
rlghncxa03w 05-02-04 15:10:19 EST EAGLE5 33.0.0
CARD  VERSION      TYPE      GPL      PST      SST      AST
1205  060-002-004  LIME1    SS7ML    IS-NR    Active   -----
ALARM STATUS      = No Alarms.
BPMLT  GPL version = 002-103-004
IMT BUS A          = Conn
IMT BUS B          = Conn
SIGNALING LINK STATUS
  SLK  PST          LS          CLLI          E5IS
  A    OOS-MT       ls111       -----    INACTIVE
  B    OOS-MA       -----    -----    INACTIVE
  A1   OOS-MA       -----    -----    INACTIVE
  B1   OOS-MA       -----    -----    INACTIVE
  A2   OOS-MA       -----    -----    INACTIVE
  B2   OOS-MA       -----    -----    INACTIVE
  A3   OOS-MA       -----    -----    INACTIVE
  B3   OOS-MA       -----    -----    INACTIVE
```

Command Completed.

;

The following example lists all equipped links on the specified E1/T1 MIM card.

rept-stat-card: loc-=1205: links=equip

```
rlghncxa03w 05-02-04 15:10:19 EST EAGLE5 33.0.0
CARD  VERSION      TYPE      GPL      PST      SST      AST
1205  060-002-004  LIME1    SS7ML    IS-NR    Active   -----
ALARM STATUS      = No Alarms.
BPMLT  GPL version = 002-103-004
IMT BUS A          = Conn
IMT BUS B          = Conn
SIGNALING LINK STATUS
  SLK  PST          LS          CLLI          E5IS
  A    OOS-MT       ls111       -----    INACTIVE
```

Command Completed.

;

The following example shows only the unequipped links on the specified E1/T1 MIM card.

rept-stat-card: loc=1205: links=unequip

```
rlghncxa03w 05-02-04 15:10:19 EST EAGLE5 33.0.0
CARD  VERSION      TYPE      GPL      PST      SST      AST
1205  060-002-004  LIME1    SS7ML    IS-NR    Active   -----
ALARM STATUS      = No Alarms.
BPMLT  GPL version = 002-103-004
IMT BUS A          = Conn
IMT BUS B          = Conn
SIGNALING LINK STATUS
  SLK  PST          LS          CLLI          E5IS
  B    OOS-MA       -----    -----    INACTIVE
  A1   OOS-MA       -----    -----    INACTIVE
  B1   OOS-MA       -----    -----    INACTIVE
  A2   OOS-MA       -----    -----    INACTIVE
  B2   OOS-MA       -----    -----    INACTIVE
  A3   OOS-MA       -----    -----    INACTIVE
  B3   OOS-MA       -----    -----    INACTIVE
```

Command Completed.

;

The following example shows details (**mode=full**) for the specified HC-MIM card.

rept-stat-card: loc=1205: mode=full

```
rlghncxa03w 08-05-01 16:46:07 EST EAGLE 39.0.0
CARD  VERSION      TYPE      GPL      PST      SST      AST
```



```

1205  126-004-000  LIME1    SS7HC      IS-NR      Active      -----
ALARM STATUS          = No Alarms.
IMTPCI  GPL version = 126-002-000
BLVXW6  GPL version = 075-000-005
BLDIAG6 GPL version = 125-039-000
BLBIOS  GPL version = 125-039-000
BLCPLD  GPL version = 125-039-000
PLDPMC1 GPL version = 125-039-000
BLROM1  GPL version = 125-039-000
IMT BUS A              = Conn
IMT BUS B              = Conn
CLOCK A                = Active
CLOCK B                = Idle
CLOCK I                = Idle
HS CLOCK A             = Active
HS CLOCK B             = Idle
HS CLOCK I             = Idle
MBD BIP STATUS         = Valid
MOTHER BOARD ID        = HC BLADE
DBD STATUS              = Valid
DBD TYPE                = E1T1
DBD MEMORY SIZE        = 512M
HW VERIFICATION CODE = ----
CURRENT TEMPERATURE    = 42C (108F)    [ALARM TEMP: 75C (167F)]
PEAK TEMPERATURE:      = 43C (110F)    [06-02-24 08:21]
SIGNALING LINK STATUS
  SLK    PST           LS           CLLI
  B31    OOS-MT-DSBLD   lsa0        -----
TVG STATUS
  SNM     TVG RESULT    = 24 hr: G-----, 5 min: -----
  SLAN    TVG RESULT    = 24 hr: -----, 5 min: -----
  SCCP    TVG RESULT    = 24 hr: -----, 5 min: -----
  INM     TVG RESULT    = 24 hr: G-----, 5 min: -----

```

Command Completed.

;

The following example shows details (**mode=full**) for the specified HMUX card.

rept-stat-card:loc=1109:mode=full

```

rlghncxa03w 07-07-04 15:10:19 EST EAGLE 37.0.0
CARD  VERSION   TYPE      GPL      PST      SST      AST
1109  239-009-010 HMUX      BPHMUX   IS-NR      Active    -----

ALARM STATUS          = No Alarms
TRIAL VERSION         = BPHMUX 101-009-000
FPGA VERSION          = BPHMUX 000-022-005

```

Command Completed.

;

The following example shows output for the specified STC card used by the EAGLE 5 Integrated Monitoring Support feature.

rept-stat-card:loc=1107

```

rlghncxa03w 07-02-04 15:10:19 EST EAGLE 37.0.0
CARD  VERSION   TYPE      GPL      PST      SST      AST
1107  128-015-000 STC        EROUTE   IS-NR      Active    -----

ALARM STATUS          = No Alarms.
BPDCM  GPL version = 128-108-000
IMT BUS A              = Conn
IMT BUS B              = Conn
EROUTE % OCCUP         = 0%
NTP broadcast = valid
STC IP PORT A:          OOS-MT          Unavail    -----
ALARM STATUS          = ** 0084 IP Connection Unavailable
ERROR STATUS          = DHCP Lease. Physical Link.

```

```

STC IP PORT B:                                OOS-MT            Unavail    -----
ALARM STATUS  = ** 0084 IP Connection Unavailable
ERROR STATUS  = DHCP Lease. Physical Link.

```

Command Completed.

;

The following example shows details (**mode=full**) for the specified STC card used by the EAGLE 5 Integrated Monitoring Support feature.

rept-stat-card:loc=1107:mode=full

```

rlghncxa03w 07-02-04 15:10:19 EST EAGLE 37.0.0
CARD  VERSION      TYPE      GPL      PST      SST      AST
1107  128-015-000  STC      EROUTE  IS-NR      Active    -----
ALARM STATUS      = No Alarms.
BPDCM  GPL version = 128-108-000
IMT BUS A          = Conn
IMT BUS B          = Conn
CLOCK A           = Active
CLOCK B           = Idle
CLOCK I           = Idle
MBD BIP STATUS    = Valid
MOTHER BOARD ID   = Invalid
DBD STATUS        = Valid
DBD TYPE          = Invalid
DBD MEMORY SIZE   = 512M
HW VERIFICATION CODE = ----
EROUTE % OCCUP    = 0%
NTP broadcast     = VALID
STC IP PORT A:                                IS-NR      Active    -----
ALARM STATUS      = No Alarms.
STC IP PORT B:                                OOS-MT      Unavail    -----
ALARM STATUS      = ** 0084 IP Connection Unavailable
ERROR STATUS      = DHCP Lease. Physical Link.

```

Command Completed.

;

The following example shows output for the specified MCPM card used by the Measurements Platform feature.

rept-stat-card:loc=1105

```

rlghncxa03w 09-01-04 15:10:19 EST EAGLE 40.0.0
CARD  VERSION      TYPE      GPL      PST      SST      AST
1105  128-001-000  EDSM     MCP      IS-NR      Idle      -----
ALARM STATUS      = ** 0084 MCP A IP CONNECTION UNAVAILABLE
BPDCM  GPL VERSION = 128-001-000
IMT BUS A          = Conn
IMT BUS B          = Conn
MCP IP CONNECTION                                OOS-MT      Unavail

```

Command Completed.

;

The following example shows details (**mode=full**) for the specified MCPM card that is running the MCP application for the Measurements Platform feature.

rept-stat-card:loc=1105:mode=full

```

rlghncxa03w 09-01-04 15:10:19 EST EAGLE 40.0.0
CARD  VERSION      TYPE      GPL      PST      SST      AST
1105  128-001-000  EDSM     MCP      IS-NR      Active    -----
ALARM STATUS      = No Alarms
BPDCM  GPL VERSION = 128-001-000
IMT BUS A          = Conn
IMT BUS B          = Conn
CLOCK A           = Active
CLOCK B           = Fault
CLOCK I           = Idle

```

```

MBD BIP STATUS      = valid
MOTHER BOARD ID     = SS EDCM
DBD STATUS           = Valid
DBD TYPE             = MEM
DBD MEMORY SIZE      = 2048M
HW VERIFICATION CODE = ----
MCP IP CONNECTION    IS-NR      Available

```

Command Completed.

;

The following example shows output for a card that is running the IPLIM application.

rept-stat-card: loc=1213

```

rlghncxa03w 07-05-04 15:10:19 EST EAGLE 37.0.0
CARD  VERSION      TYPE   GPL      PST      SST      AST
1213  121-002-000  EDCM   IPLIM   IS-NR    Active   -----
ALARM STATUS       = No Alarms.
BPDCM  GPL VERSION = 121-001-000+
IMT BUS A          = Conn
IMT BUS B          = Conn
SIGNALING LINK STATUS
  SLK   PST      LS      CLLI
  A     OOS-MT   e2e3    mstp

```

Command Completed.

;

The following example shows details (**mode=full**) for a card that is running the IPGWI application.

rept-stat-card: loc=1301:mode=full

```

rlghncxa03w 07-07-04 15:10:19 EST EAGLE 37.0.0
CARD  VERSION      TYPE   GPL      PST      SST      AST
1301  128-001-000  DCM    IPGWI   IS-NR    Active   -----
ALARM STATUS       = No Alarms.
BPDCM  GPL          = 128-001-000
IMT BUS A          = Conn
IMT BUS B          = Conn
CLOCK A           = Active
CLOCK B           = Idle
CLOCK I           = idle
MBD BIP STATUS     = Valid
MOTHER BOARD ID    = SS EDCM
DBD STATUS         = Valid
DBD TYPE           = Invalid
DBD MEMORY SIZE    = 0M
HW VERIFICATION CODE = ----
SIGNALING LINK STATUS
  SLK   PST      LS      CLLI
IPLNK STATUS
  IPLNK IPADDR    STATUS
ASSOCIATION STATUS
  ANAME          PST      SST      ASPID
TVG STATUS
  SNM    TVG RESULT = 24 hr: -----, 5 min: -----
  SLAN   TVG RESULT = 24 hr: -----, 5 min: -----
  SCCP   TVG RESULT = 24 hr: -----, 5 min: -----
  INM    TVG RESULT = 24 hr: -----, 5 min: -----

```

Command Completed.

;

The following example shows output for an E1 ATM card running the ATMITU application.

rept-stat-card: loc=1201

```

tekelecstp 07-05-25 10:02:42 EST EAGLE 37.0.0
CARD  VERSION      TYPE   GPL      PST      SST      AST
1201  128-003-000  LIME1ATM  ATMITU   IS-NR    Active   -----
ALARM STATUS       = No Alarms.

```

```

BPHCAP  GPL version = 128-013-020
IMT BUS A      = Conn
IMT BUS B      = Conn
SIGNALING LINK STATUS
  SLK   PST           LS           CLLI
  A     IS-NR         lsnsspn2     -----

```

Command Completed.

;

The following example shows output for an IPSM card.

rept-stat-card:loc=1213

```

tekelecstp 08-07-07 04:18:30 EST EAGLE 39.0.0
CARD  VERSION      TYPE      GPL      PST      SST      AST
1213  131-010-000  IPSM      IPS      IS-NR     Active   -----
ALARM STATUS      = No Alarms.
BPDCM  GPL version = 131-005-000
IMT BUS A      = Conn
IMT BUS B      = Conn

```

Command Completed.

;

The following example shows a Hardware Verification Code for an auto-inhibited card. The HW VERIFICATION CODE field is shown only in the **mode=full** report. "-----" is shown in the HW VERIFICATION CODE field for cards with valid hardware detected. A numerical value is shown when invalid hardware is detected, and all such cards will be auto-inhibited. The numerical values are listed in Table 5-64. The MDAL and HMUX cards do not display the field in **mode=full** reports on their locations.

rept-stat-card:loc=1108:mode=full

```

tekelecstp 07-09-30 09:41:08 EST EAGLE 37.0.0
CARD  VERSION      TYPE      GPL      PST      SST      AST
1108  128-021-000  DSM      VSCCP    OOS-MT-DSBLD  MEA     -----

ALARM STATUS      = ** 441 Incorrect Motherboard - CPU
BPDCM  GPL VERSION = 128-021-000
IMT BUS A      = Disc
IMT BUS B      = Conn
CLOCK A      = Idle
CLOCK B      = Active
CLOCK I      = Idle
MBD BIP STATUS  = Valid
MOTHER BOARD ID = E486
DBD STATUS     = Valid
DBD TYPE      = Invalid
DBD MEMORY SIZE = 1024M
HW VERIFICATION CODE = 004
SCCP % OCCUP   = 0%
TVG STATUS
  SNM   TVG RESULT = 24 hr: -----, 5 min: -----
  INM   TVG RESULT = 24 hr: -----, 5 min: -----

```

Command Completed.

;

The following example shows output for an E5-ENET card used as an IPGWx card (running the IPGHC GPL).

rept-stat-card:loc=1103:mode=full

```

rlghncxa03w 08-07-01 16:46:07 EST EAGLE 38.0.0
CARD  VERSION      TYPE      GPL      PST      SST      AST
1103  131-011-000  DCM      IPGHC    IS-NR     Active   ---
ALARM STATUS      = No Alarms.
IMTPCI  GPL version = 131-007-000
BLVXW6  GPL version = 131-009-000

```

```

BLDIAG6 GPL version = 131-008-000
BLBEPM  GPL version = 128-021-000
BLCPLD  GPL version = 128-021-000
IMT BUS A      = Conn
IMT BUS B      = Conn
CLOCK A       = Active
CLOCK B       = Idle
CLOCK I       = Idle
MBD BIP STATUS = Valid
MOTHER BOARD ID = EPM A
DBD STATUS    = Valid
DBD TYPE      = 1G ENET
DBD MEMORY SIZE = 512M
HW VERIFICATION CODE = ----
CURRENT TEMPERATURE = 43C (110F)
PEAK TEMPERATURE:   = 45C (113F)      [08-07-08 11:00]
SIGNALING LINK STATUS
  SLK   PST           LS           CLLI
  A     IS-NR         ipgwm3ua1    -----
IPLNK STATUS
  IPLNK IPADDR        STATUS      PST
  A     10.254.101.92  UP          IS-NR
  B     -----      ----         OOS-MA
ASSOCIATION STATUS
  ANAME          PST          SST          ASPID
  ipgw1103a      OOS-MT      CONNECTING   undefined
TVG STATUS
  SNM    TVG RESULT = 24 hr: -----, 5 min: -----
  SLAN    TVG RESULT = 24 hr: -----, 5 min: -----
  SCCP    TVG RESULT = 24 hr: -----, 5 min: -----
  INM     TVG RESULT = 24 hr: -----, 5 min: -----

```

Command Completed.

;

The following example shows output for an IPLIM card with associations assigned.

rept-stat-card: loc=1301:mode=full

```

eagle10213 07-02-17 13:53:22 EST EAGLE 35.6.0
CARD  VERSION  TYPE    GPL      PST          SST          AST
1301  078-025-000 EDCM    IPLIM    IS-NR        Active      -----
ALARM STATUS = * 0022 Clock B for card failed, Clock A normal
BPDCM  GPL version = 126-016-000
IMT BUS A      = Conn
IMT BUS B      = Conn
CLOCK A       = Active
CLOCK B       = Fault
CLOCK I       = Idle
MBD BIP STATUS = Valid
MOTHER BOARD ID = SS EDCM
DBD STATUS    = Valid
DBD TYPE      = None
DBD MEMORY SIZE = 0M
HW VERIFICATION CODE = ----
SIGNALING LINK STATUS
  SLK   PST           LS           CLLI
  A     IS-NR         e3e4         -----
  B     IS-NR         e3e4         -----
  A1    IS-NR         e3e4         -----
  B1    IS-NR         e3e4         -----
  A2    IS-NR         e3e4         -----
  B2    IS-NR         e3e4         -----
  A3    IS-NR         e3e4         -----
  B3    IS-NR         e3e4         -----
IPLINK STATUS
  IPLNK IPADDR        STATUS      PST
  A     10.254.111.45  UP          IS-NR

```

```

      B      192.168.5.37      ERRORS      IS-ANR
ASSOCIATION STATUS
  ANAME      PST      SST
  ipl1301b      IS-NR      ESTABLISHED
  ipl1301a      IS-NR      ESTABLISHED
  ipl1301a1      IS-NR      ESTABLISHED
  ipl1301b1      IS-NR      ESTABLISHED
  ipl1301a2      IS-NR      ESTABLISHED
  ipl1301b2      IS-NR      ESTABLISHED
  ipl1301a3      IS-NR      ESTABLISHED
  ipl1301b3      IS-NR      ESTABLISHED
TVG STATUS
  SNM      TVG RESULT      = 24 hr: G-----, 5 min: -----
  SLAN      TVG RESULT      = 24 hr: -----, 5 min: -----
  SCCP      TVG RESULT      = 24 hr: -----, 5 min: -----
  INM      TVG RESULT      = 24 hr: G-----, 5 min: -----

```

Command Completed.

;

The following example shows output when the IPLNK or associations for the card have not yet been provisioned.

rept-stat-card:loc=1305:mode=full

```

eagle10212 07-05-05 15:11:35 EST EAGLE 37.0.0
CARD  VERSION      TYPE      GPL      PST      SST      AST
1305  128-056-000  EDCM      SS7IPGW  IS-NR      Active    -----
  ALARM STATUS      = No Alarms.
  BPDCM  GPL version = 128-047-000
  IMT BUS A          = Conn
  IMT BUS B          = Conn
  CLOCK A            = Active
  CLOCK B            = Idle
  CLOCK I            = Idle
  MBD BIP STATUS     = valid
  MOTHER BOARD ID    = Invalid
  DBD STATUS         = valid
  DBD TYPE           = Invalid
  DBD MEMORY SIZE    =0M
  HW VERIFICATION CODE=-----
SIGNALING LINK STATUS
  SLK  PST      LS      CLLI
  A    IS-NR      ls1305  -----
IPLNK STATUS
  IPLNK IPADDR      STATUS
  A     -----     ----
  B     -----     ----
ASSOCIATION STATUS
  ANAME      PST      SST      ASPID

TVG STATUS
  SNM      TVG RESULT      = 24 hr: -----, 5 min: -----
  SLAN      TVG RESULT      = 24 hr: -----, 5 min: -----
  SCCP      TVG RESULT      = 24 hr: -----, 5 min: -----
  INM      TVG RESULT      = 24 hr: -----, 5 min: -----

```

Command Completed.

The following example shows output for an IPLIM card.

rept-stat-card:loc=1301

```

rlghncxa03w 06-06-01 16:43:42 EST EAGLE 35.0.0
CARD  VERSION      TYPE      GPL      PST      SST      AST
1301  082-000-039  EDCM      IPLIM      IS-NR      Active    -----
  ALARM STATUS      = No Alarms.
  BPDCM  GPL version = 126-002-000

```

```

IMT BUS A          = Conn
IMT BUS B          = Disc
SIGNALING LINK STATUS
  SLK   PST          LS          CLLI          E5IS
  A     IS-NR        ls1m2pa     -----      INACTIVE
  B     OOS-MT        ls1m2pa     -----      INACTIVE
  A1    OOS-MT        ls1m2pa     -----      INACTIVE
  B1    OOS-MT        ls1m2pa     -----      INACTIVE
  A2    OOS-MT        ls1m2pa     -----      INACTIVE
  B2    OOS-MT        ls1m2pa     -----      INACTIVE
  A3    OOS-MT        ls1m2pa     -----      INACTIVE
  B3    OOS-MT        ls1m2pa     -----      INACTIVE

```

Command Completed.

;

The following example displays card status for all cards that are active in the system.

rept-stat-card

```

tklc1090203 08-05-10 13:59:10 EST EAGLE5 39.0.0
CARD  VERSION  TYPE    GPL      PST          SST          AST
1101  126-026-000 LIMT1  SS7HC    IS-NR        Active        -----
1103  126-026-000 LIMT1  SS7ML    IS-NR        Active        -----
1104  126-026-000 TSM    GLS       IS-NR        Active        -----
1105  126-026-000 LIME1  SS7HC    IS-NR        Active        -----
1106  126-026-000 LIME1  SS7HC    IS-NR        Active        -----
1107  126-026-000 LIME1  SS7HC    IS-NR        Active        -----
1109  126-020-000 HIPR    HIPR      IS-NR        Active        -----
1110  126-020-000 HIPR    HIPR      IS-NR        Active        -----
1111  126-026-000 LIME1  SS7HC    IS-NR        Active        -----
1112  -----      LIMT1  CCS7ITU  OOS-MT      Isolated     -----
1113  126-026-000 GPSM    EOAM      IS-NR        Active        -----
1114  -----      TDM          IS-NR        Active        -----
1115  126-026-000 GPSM    EOAM      IS-NR        Standby       -----
1116  -----      TDM          IS-NR        Active        -----
1117  -----      MDAL          IS-NR        Active        -----

```

Command Completed.

;

The following example displays a summary report for an HC-MIM card that is used as a T1 card.

rept-stat-card: loc=1101

```

tklc1090203 08-05-10 13:59:34 EST EAGLE5 39.0.0
CARD  VERSION  TYPE    GPL      PST          SST          AST
1101  126-026-000 LIMT1  SS7HC    IS-NR        Active        -----
ALARM STATUS          = No Alarms.
IMTPCI  GPL version = 126-023-000
BLVXW6  GPL version = 126-026-000
BLDIAG6 GPL version = 126-017-000
BLBIOS  GPL version = 126-011-000
BLCPLD  GPL version = 126-011-000
PLDPMC1 GPL version = 126-026-000
IMT BUS A          = Conn
IMT BUS B          = Conn
CURRENT TEMPERATURE = 43C (110F)
PEAK TEMPERATURE:   = 43C (110F) [06-08-10 11:56]
SIGNALING LINK STATUS
  SLK   PST          LS          CLLI
  B     IS-NR        sc1a047a  sc1a047a
  A1    IS-NR        ls1101a1  tklcb1101a1
  B1    IS-NR        sc2a048a  sc2a048a
  A2    IS-NR        sc2a048a  sc2a048a
  B2    IS-NR        stpa046a  stpa046a
  A3    IS-NR        sc3a049a  sc3a049a
  B3    IS-NR        sc3a049a  sc3a049a
  A4    IS-NR        ls1101a08 tkb1101a8
  B4    IS-NR        sc1a047a  sc1a047a

```

A5	IS-NR	ls1101a09	tkb1101a9
B5	IS-NR	sc2a048a	sc2a048a
A6	IS-NR	ls1101a0a	tkb1101a10
B6	IS-NR	stpa046a	stpa046a
A7	IS-NR	ls1101a1	tklcb1101a1
B7	IS-NR	sc3a049a	sc3a049a
A8	IS-NR	ls1101a08	tkb1101a8
B8	IS-NR	sc1a047a	sc1a047a
A9	IS-NR	ls1101a09	tkb1101a9
B9	IS-NR	sc2a048a	sc2a048a
A10	IS-NR	ls1101a0a	tkb1101a10
B10	IS-NR	stpa046a	stpa046a
A11	IS-NR	sc2a048a	sc2a048a
B11	IS-NR	sc3a049a	sc3a049a
B12	IS-NR	sc1a047a	sc1a047a
A13	IS-NR	sc3a049a	sc3a049a
B13	IS-NR	sc2a048a	sc2a048a
A14	IS-NR	sc2a048a	sc2a048a
B14	IS-NR	stpa046a	stpa046a
B15	IS-NR	sc3a049a	sc3a049a
A16	IS-NR	sc3a049a	sc3a049a
B16	IS-NR	sc2a048a	sc2a048a
A17	IS-NR	sc2a048a	sc2a048a
B17	IS-NR	stpa046a	stpa046a
B18	IS-NR	sc3a049a	sc3a049a
A19	IS-NR	sc3a049a	sc3a049a
B19	IS-NR	sc1a047a	sc1a047a
A20	IS-NR	sc2a048a	sc2a048a
B20	IS-NR	sc2a048a	sc2a048a
A21	OOS-MT	stpa046a	stpa046a
B21	IS-NR	sc1a047a	sc1a047a
A22	IS-NR	sc3a049a	sc3a049a
B22	IS-NR	stpa046a	stpa046a
A23	IS-NR	sc2a048a	sc2a048a
B23	IS-NR	sc3a049a	sc3a049a
A24	OOS-MT	stpa046a	stpa046a
B24	IS-NR	sc2a048a	sc2a048a
A25	IS-NR	sc3a049a	sc3a049a
B25	IS-NR	stpa046a	stpa046a
A26	IS-NR	sc2a048a	sc2a048a
B26	IS-NR	sc1a047a	sc1a047a
A27	OOS-MT	stpa046a	stpa046a
B27	IS-NR	sc3a049a	sc3a049a
A28	IS-NR	sc3a049a	sc3a049a
B28	IS-NR	sc2a048a	sc2a048a
A29	IS-NR	sc2a048a	sc2a048a
B29	IS-NR	sc1a047a	sc1a047a
A30	OOS-MT	stpa046a	stpa046a
B30	IS-NR	stpa046a	stpa046a
A31	IS-NR	sc3a049a	sc3a049a
B31	IS-NR	sc3a049a	sc3a049a

Command Completed.

;

The following example displays a full report for an HC-MIM card that is used as a T1 card.

rept-stat-card: loc=1101:mode=full

```
tklc1090203 08-05-10 13:59:48 EST EAGLE5 39.0.0
CARD  VERSION      TYPE      GPL      PST      SST      AST
1101  126-026-000  LIMT1    SS7HC    IS-NR      Active    -----
ALARM STATUS      = No Alarms.
IMTPCI  GPL version = 126-023-000
BLVXW6  GPL version = 126-026-000
BLDIAG6 GPL version = 126-017-000
BLBIOS  GPL version = 126-011-000
BLCPLD  GPL version = 126-011-000
```



```

PLDPMC1 GPL version = 126-026-000
BLROM1  GPL version = 126-026-000
IMT BUS A      = Conn
IMT BUS B      = Conn
CLOCK A        = Idle
CLOCK B        = Active
CLOCK I        = Idle
HS CLOCK A     = Active
HS CLOCK B     = Idle
HS CLOCK I     = Idle
MBD BIP STATUS = Valid
MOTHER BOARD ID = HC BLADE
DBD STATUS     = Valid
DBD TYPE       = E1T1
DBD MEMORY SIZE = 512M
HW VERIFICATION CODE = ----
CURRENT TEMPERATURE = 43C (110F)
PEAK TEMPERATURE:   = 43C (110F) [06-08-10 11:56]
SIGNALING LINK STATUS
  SLK   PST      LS      CLLI
  B     IS-NR     sc1a047a  sc1a047a
  A1    IS-NR     ls1101a1  tklcb1101a1
  B1    IS-NR     sc2a048a  sc2a048a
  A2    IS-NR     sc2a048a  sc2a048a
  B2    IS-NR     stpa046a  stpa046a
  A3    IS-NR     sc3a049a  sc3a049a
  B3    IS-NR     sc3a049a  sc3a049a
  A4    IS-NR     ls1101a08  tkb1101a8
  B4    IS-NR     sc1a047a  sc1a047a
  A5    IS-NR     ls1101a09  tkb1101a9
  B5    IS-NR     sc2a048a  sc2a048a
  A6    IS-NR     ls1101a0a  tkb1101a10
  B6    IS-NR     stpa046a  stpa046a
  A7    IS-NR     ls1101a1  tklcb1101a1
  B7    IS-NR     sc3a049a  sc3a049a
  A8    IS-NR     ls1101a08  tkb1101a8
  B8    IS-NR     sc1a047a  sc1a047a
  A9    IS-NR     ls1101a09  tkb1101a9
  B9    IS-NR     sc2a048a  sc2a048a
  A10   IS-NR     ls1101a0a  tkb1101a10
  B10   IS-NR     stpa046a  stpa046a
  A11   IS-NR     sc2a048a  sc2a048a
  B11   IS-NR     sc3a049a  sc3a049a
  B12   IS-NR     sc1a047a  sc1a047a
  A13   IS-NR     sc3a049a  sc3a049a
  B13   IS-NR     sc2a048a  sc2a048a
  A14   IS-NR     sc2a048a  sc2a048a
  B14   IS-NR     stpa046a  stpa046a
  B15   IS-NR     sc3a049a  sc3a049a
  A16   IS-NR     sc3a049a  sc3a049a
  B16   IS-NR     sc2a048a  sc2a048a
  A17   IS-NR     sc2a048a  sc2a048a
  B17   IS-NR     stpa046a  stpa046a
  B18   IS-NR     sc3a049a  sc3a049a
  A19   IS-NR     sc3a049a  sc3a049a
  B19   IS-NR     sc1a047a  sc1a047a
  A20   IS-NR     sc2a048a  sc2a048a
  B20   IS-NR     sc2a048a  sc2a048a
  A21   OOS-MT     stpa046a  stpa046a
  B21   IS-NR     sc1a047a  sc1a047a
  A22   IS-NR     sc3a049a  sc3a049a
  B22   IS-NR     stpa046a  stpa046a
  A23   IS-NR     sc2a048a  sc2a048a
  B23   IS-NR     sc3a049a  sc3a049a
  A24   OOS-MT     stpa046a  stpa046a

```

B24	IS-NR	sc2a048a	sc2a048a
A25	IS-NR	sc3a049a	sc3a049a
B25	IS-NR	stpa046a	stpa046a
A26	IS-NR	sc2a048a	sc2a048a
B26	IS-NR	sc1a047a	sc1a047a
A27	OOS-MT	stpa046a	stpa046a
B27	IS-NR	sc3a049a	sc3a049a
A28	IS-NR	sc3a049a	sc3a049a
B28	IS-NR	sc2a048a	sc2a048a
A29	IS-NR	sc2a048a	sc2a048a
B29	IS-NR	sc1a047a	sc1a047a
A30	OOS-MT	stpa046a	stpa046a
B30	IS-NR	stpa046a	stpa046a
A31	IS-NR	sc3a049a	sc3a049a
B31	IS-NR	sc3a049a	sc3a049a

TVG STATUS

SNM	TVG RESULT	= 24 hr: G-----, 5 min: -----
SLAN	TVG RESULT	= 24 hr: -----, 5 min: -----
SCCP	TVG RESULT	= 24 hr: -----, 5 min: -----
INM	TVG RESULT	= 24 hr: G-----, 5 min: -----

Command Completed.

;

The following example displays a summary report for an E1T1 MIM card that is used as a T1 card.

rept-stat-card:loc=1103

```
tklc1090203 06-08-10 14:00:26 EST EAGLE5 35.1.0
CARD  VERSION      TYPE      GPL      PST      SST      AST
1103  126-026-000  LIMT1    SS7ML    IS-NR    Active   -----
ALARM STATUS      = No Alarms.
BPMLT  GPL version = 126-014-000
IMT BUS A          = Conn
IMT BUS B          = Conn
SIGNALING LINK STATUS
SLK  PST      LS      CLLI
A    IS-NR    ls1103a0  tklcb1103a0
B    IS-NR    ls1103a4  tklcb1103a4
A1   IS-NR    ls1103a0  tklcb1103a0
B1   IS-NR    ls1103a4  tklcb1103a4
A2   IS-NR    ls1103a2  tklcb1103a2
B2   IS-NR    ls1103a6  tklcb1103a6
A3   IS-NR    ls1103a2  tklcb1103a2
B3   IS-NR    ls1103a6  tklcb1103a6
```

Command Completed.

;

The following example displays a full report for an E1T1 MIM card that is used as a T1 card.

rept-stat-card:loc=1103:mode=full

```
tklc1090203 06-08-10 14:00:36 EST EAGLE5 35.1.0
CARD  VERSION      TYPE      GPL      PST      SST      AST
1103  126-026-000  LIMT1    SS7ML    IS-NR    Active   -----
ALARM STATUS      = No Alarms.
BPMLT  GPL version = 126-014-000
IMT BUS A          = Conn
IMT BUS B          = Conn
CLOCK A           = Idle
CLOCK B           = Active
CLOCK I           = Idle
HS CLOCK A        = Idle
HS CLOCK B        = Active
HS CLOCK I        = Idle
MBD BIP STATUS    = Valid
MOTHER BOARD ID   = MIM
DBD STATUS        = Valid
```

```

DBD TYPE                = None
DBD MEMORY SIZE         = 0M
HW VERIFICATION CODE    = ----
SIGNALING LINK STATUS
  SLK   PST             LS             CLLI
  A     IS-NR           ls1103a0       tklcb1103a0
  B     IS-NR           ls1103a4       tklcb1103a4
  A1    IS-NR           ls1103a0       tklcb1103a0
  B1    IS-NR           ls1103a4       tklcb1103a4
  A2    IS-NR           ls1103a2       tklcb1103a2
  B2    IS-NR           ls1103a6       tklcb1103a6
  A3    IS-NR           ls1103a2       tklcb1103a2
  B3    IS-NR           ls1103a6       tklcb1103a6
TVG STATUS
  SNM    TVG RESULT    = 24 hr: G-----, 5 min: -----
  SLAN   TVG RESULT    = 24 hr: -----, 5 min: -----
  SCCP   TVG RESULT    = 24 hr: -----, 5 min: -----
  INM    TVG RESULT    = 24 hr: G-----, 5 min: -----

```

Command Completed.

;

The following example displays a summary report for an E5-E1T1 card that is used as an E1 card.

rept-stat-card:loc=1106

```

tklc1090203 08-05-10 14:00:43 EST EAGLE5 39.0.0
CARD  VERSION   TYPE    GPL      PST      SST      AST
1106  126-026-000 LIME1   SS7HC   IS-NR     Active   -----
ALARM STATUS      = No Alarms.
IMTPCI  GPL version = 126-023-000
BLVXW6  GPL version = 126-026-000
BLDIAG6 GPL version = 126-017-000
BLBEPM  GPL version = 126-011-000
PLDPMC1 GPL version = 126-026-000
BLCPLD  GPL version = 126-011-000
IMT BUS A      = Conn
IMT BUS B      = Conn
CURRENT TEMPERATURE = 37C ( 99F)
PEAK TEMPERATURE:  = 37C ( 99F)      [06-08-09 15:21]
SIGNALING LINK STATUS
  SLK   PST             LS             CLLI
  A     IS-NR           inet            -----

```

Command Completed.

;

The following example displays a full report for an E5-E1T1 card that is used as an E1 card.

rept-stat-card:loc=1106:mode=full

```

tklc1090203 08-05-10 14:00:53 EST EAGLE5 39.0.0
CARD  VERSION   TYPE    GPL      PST      SST      AST
1106  126-026-000 LIME1   SS7HC   IS-NR     Active   -----
ALARM STATUS      = No Alarms.
IMTPCI  GPL version = 126-023-000
BLVXW6  GPL version = 126-026-000
BLDIAG6 GPL version = 126-017-000
BLBEPM  GPL version = 126-011-000
PLDPMC1 GPL version = 126-026-000
BLCPLD  GPL version = 126-011-000
IMT BUS A      = Conn
IMT BUS B      = Conn
CLOCK A      = Idle
CLOCK B      = Active
CLOCK I      = Idle
HS CLOCK A    = Active
HS CLOCK B    = Idle
HS CLOCK I    = Idle
MBD BIP STATUS = Valid

```

```

MOTHER BOARD ID      = EPM A
DBD STATUS            = Valid
DBD TYPE              = E1T1
DBD MEMORY SIZE       = 512M
HW VERIFICATION CODE  = ----
CURRENT TEMPERATURE   = 37C ( 99F)
PEAK TEMPERATURE:     = 38C (101F)      [06-08-10 14:00]
SIGNALING LINK STATUS
  SLK   PST           LS           CLLI
  A     IS-NR         inet         -----
TVG STATUS
  SNM    TVG RESULT   = 24 hr: G-----, 5 min: G-----
  SLAN    TVG RESULT   = 24 hr: -----, 5 min: -----
  SCCP    TVG RESULT   = 24 hr: -----, 5 min: -----
  INM    TVG RESULT   = 24 hr: G-----, 5 min: G-----

```

Command Completed.

;

The following example displays a summary report for an HC-MIM card that is used as an E1 card.

rept-stat-card: loc=1107

```

tklc1090203 08-05-10 14:01:04 EST EAGLE5 39.0.0
CARD  VERSION      TYPE      GPL      PST      SST      AST
1107  126-026-000  LIME1    SS7HC    IS-NR      Active    -----
ALARM STATUS      = No Alarms.
IMTPCI  GPL version = 126-023-000
BLVXW6  GPL version = 126-026-000
BLDIAG6 GPL version = 126-017-000
BLBIO5  GPL version = 126-011-000
BLCPLD  GPL version = 126-011-000
PLDPMC1 GPL version = 126-026-000
BLROM1  GPL version = 126-026-000
IMT BUS A          = Conn
IMT BUS B          = Conn
CURRENT TEMPERATURE = 43C (110F)
PEAK TEMPERATURE:   = 44C (112F)      [06-08-10 13:50]
SIGNALING LINK STATUS
  SLK   PST           LS           CLLI
  A     IS-NR         stpa045i     stpa045i
  B     IS-NR         stpa045i     stpa045i

```

Command Completed.

;

The following example retrieves a full report for an HC-MIM card that is used as an E1 card.

rept-stat-card: loc=1107:mode=full

```

tklc1090203 08-05-10 14:01:12 EST EAGLE5 39.0.0
CARD  VERSION      TYPE      GPL      PST      SST      AST
1107  126-026-000  LIME1    SS7HC    IS-NR      Active    -----
ALARM STATUS      = No Alarms.
IMTPCI  GPL version = 126-023-000
BLVXW6  GPL version = 126-026-000
BLDIAG6 GPL version = 126-017-000
BLBIO5  GPL version = 126-011-000
BLCPLD  GPL version = 126-011-000
PLDPMC1 GPL version = 126-026-000
BLROM1  GPL version = 126-026-000
IMT BUS A          = Conn
IMT BUS B          = Conn
CLOCK A          = Idle
CLOCK B          = Active
CLOCK I          = Idle
HS CLOCK A        = Active
HS CLOCK B        = Idle
HS CLOCK I        = Idle
MBD BIP STATUS    = Valid

```

```

MOTHER BOARD ID      = HC BLADE
DBD STATUS            = Valid
DBD TYPE              = E1T1
DBD MEMORY SIZE       = 512M
HW VERIFICATION CODE = ----
CURRENT TEMPERATURE   = 43C (110F)
PEAK TEMPERATURE:     = 44C (112F)      [06-08-10 13:50]
SIGNALING LINK STATUS
  SLK   PST           LS           CLLI
  A     IS-NR         stpa045i     stpa045i
  B     IS-NR         stpa045i     stpa045i
TVG STATUS
SNM     TVG RESULT    = 24 hr: G-----, 5 min: -----
SLAN    TVG RESULT    = 24 hr: -----, 5 min: -----
SCCP    TVG RESULT    = 24 hr: -----, 5 min: -----
INM     TVG RESULT    = 24 hr: G-----, 5 min: -----

```

Command Completed.

;

The following example shows output for an E5-STC card.

rept-stat-card:loc=1103:mode=full

tekelecstp 07-05-06 15:40:32 EST EAGLE 37.0.0

```

CARD   VERSION      TYPE      GPL      PST      SST      AST
1103   128-002-000  STC      ERTHC    IS-NR     Active   -----
ALARM STATUS      = No Alarms.
IMTPCI  GPL version = 128-002-000
BLVXW6  GPL version = 128-002-000
BLDIAG6 GPL version = 128-002-000
BLBEPM  GPL version = 128-002-000
BLCPLD  GPL version = 128-002-000
IMT BUS A          = Conn
IMT BUS B          = Conn
CLOCK A           = Active
CLOCK B           = Idle
CLOCK I           = Idle
MBD BIP STATUS    = Valid
MOTHER BOARD ID   = EPM A
DBD STATUS        = Valid
DBD TYPE          = 1G ENET
DBD MEMORY SIZE   = 512M
HW VERIFICATION CODE = ----
CURRENT TEMPERATURE = 51C (124F)
PEAK TEMPERATURE:  = 51C (124F)      [02-09-20 10:48]
EROUTE % OCCUP    = 0%
NTP broadcast = VALID
STC IP PORT A:    IS-NR      Active   -----
ALARM STATUS      = No Alarms.
STC IP PORT B:    OOS-MT     Unavail -----
ALARM STATUS      = ** 0084 IP Connection Unavailable
ERROR STATUS      = DHCP Lease. Physical Link.

```

Command Completed.

;

The following example shows output for an E5-SLAN card.

rept-stat-card:loc=1103:mode=full

tekelecstp 07-04-04 15:02:21 EST EAGLE 37.0.0

```

CARD   VERSION      TYPE      GPL      PST      SST      AST
1103   128-002-000  DCM      SLANHC   IS-NR     Active   -----
ALARM STATUS      = No Alarms.
IMTPCI  GPL version = 128-002-000
BLVXW6  GPL version = 128-002-000
BLDIAG6 GPL version = 128-002-000

```

```

BLBEPM  GPL version = 128-002-000
BLCPLD  GPL version = 128-002-000
IMT BUS A      = Conn
IMT BUS B      = Conn
CLOCK A       = Active
CLOCK B       = Idle
CLOCK I       = Idle
MBD BIP STATUS = Valid
MOTHER BOARD ID = EPM A
DBD STATUS    = Valid
DBD TYPE      = 1G ENET
DBD MEMORY SIZE = 512M
HW VERIFICATION CODE = ----
CURRENT TEMPERATURE = 50C (122F)
PEAK TEMPERATURE:   = 50C (122F)      [02-09-14 14:49]
DLK A   PST        = 00S-MT-DSBLD  SST = Manual   AST = -----
SLAN % EAGLE CAPACITY = 0%
SLAN % HOST CAPACITY  = 0%

```

Command Completed.

;

The following example shows output for an E5-SM4G card.

rept-stat-card: loc=6111

```

tklcl1110501 07-04-12 17:26:29 EST  EAGLE5 37.0.0
CARD  VERSION      TYPE      GPL      PST      SST      AST
6111  128-015-000  DSM      SCCPHC  IS-NR      Active   -----
ALARM STATUS      = No Alarms.
IMTPCI  GPL version = 128-006-000
BLVXW6  GPL version = 128-015-000
BLDIAG6 GPL version = 128-014-000
BLBSMG  GPL version = 128-007-000
BLCPLD  GPL version = 128-006-000
IMT BUS A      = Conn
IMT BUS B      = Conn
CURRENT TEMPERATURE = 31C ( 88F)
PEAK TEMPERATURE:   = 32C ( 90F)      [07-04-12 15:55]
SCCP % OCCUP      = 1%

```

Command Completed.

;

The following example shows a full report for an E5-SM4G card.

rept-stat-card: loc=6111:mode=full

```

tklcl1110501 07-04-12 17:26:40 EST  EAGLE5 37.0.0
CARD  VERSION      TYPE      GPL      PST      SST      AST
6111  128-015-000  DSM      SCCPHC  IS-NR      Active   -----
ALARM STATUS      = No Alarms.
IMTPCI  GPL version = 128-006-000
BLVXW6  GPL version = 128-015-000
BLDIAG6 GPL version = 128-014-000
BLBSMG  GPL version = 128-007-000
BLCPLD  GPL version = 128-006-000
IMT BUS A      = Conn
IMT BUS B      = Conn
CLOCK A       = Active
CLOCK B       = Idle
CLOCK I       = Idle
MBD BIP STATUS = Valid
MOTHER BOARD ID = SMXG A
DBD STATUS    = Valid
DBD TYPE      = 1G ENET
DBD MEMORY SIZE = 4096M
HW VERIFICATION CODE = ----
CURRENT TEMPERATURE = 31C ( 88F)
PEAK TEMPERATURE:   = 32C ( 90F)      [07-04-12 15:55]

```

```

SCCP % OCCUP          = 1%
TVG STATUS
  SNM      TVG RESULT  = 24 hr: -----, 5 min: -----
  INM      TVG RESULT  = 24 hr: -----, 5 min: -----

```

Command Completed.

;

The following example shows output for all cards running the **vsccp** application.

rept-stat-card:appl=vsccp

```

tklc1110501 07-04-12 17:28:02 EST EAGLE5 37.0.0
CARD  VERSION  TYPE    GPL      PST      SST      AST
1107  128-015-000 DSM     SCCPHC   IS-NR     Active    -----
1317  -----    DSM     VSCCP    OOS-MT    Isolated  -----
2217  128-015-000 DSM     SCCPHC   IS-NR     Active    -----
2317  -----    DSM     VSCCP    OOS-MT    Isolated  -----
3103  -----    DSM     VSCCP    OOS-MT-DSBLD Manual    -----
3201  128-015-000 DSM     SCCPHC   IS-NR     Active    -----
3203  128-015-000 DSM     SCCPHC   IS-NR     Active    -----
3205  128-015-000 DSM     SCCPHC   IS-NR     Active    -----
3207  128-015-000 DSM     SCCPHC   IS-NR     Active    -----
3211  128-015-000 DSM     SCCPHC   IS-NR     Active    -----
3213  128-015-000 DSM     SCCPHC   IS-NR     Active    -----
3215  128-015-000 DSM     SCCPHC   IS-NR     Active    -----
3217  128-015-000 DSM     SCCPHC   IS-NR     Active    -----
5317  128-015-000 DSM     SCCPHC   IS-NR     Active    -----
6101  128-015-000 DSM     SCCPHC   IS-NR     Active    -----
6103  128-015-000 DSM     SCCPHC   IS-NR     Active    -----
6105  128-015-000 DSM     SCCPHC   IS-NR     Active    -----
6107  128-015-000 DSM     SCCPHC   IS-NR     Active    -----
6111  128-015-000 DSM     SCCPHC   IS-NR     Active    -----
6113  128-015-000 DSM     SCCPHC   IS-NR     Active    -----
6115  128-015-000 DSM     SCCPHC   IS-NR     Active    -----
6117  128-015-000 DSM     SCCPHC   IS-NR     Active    -----

```

Command Completed.

;

The following example shows a full report for an E5-ATM card.

rept-stat-card:loc=1102:mode=full

```

stp9021503 08-01-13 06:14:58 EST EAGLE5 38.0.0
CARD  VERSION  TYPE    GPL      PST      SST      AST
1102  013-001-219 LIMATM  ATMHC    IS-NR     Active    -----
ALARM STATUS          = No Alarms.
IMTPCI  GPL version = 130-001-000
BLVXW6  GPL version = 013-003-000
BLDIAG6 GPL version = 013-003-000
BLBEPM  GPL version = 013-003-000
BLCPLD  GPL version = 013-003-000
IMT BUS A          = Conn
IMT BUS B          = Conn
CLOCK A           = Active
CLOCK B           = Idle
CLOCK I           = Idle
HS CLOCK A        = Active
HS CLOCK B        = Idle
HS CLOCK I        = Idle
MBD BIP STATUS    = Valid
MOTHER BOARD ID   = EPM A
DBD STATUS        = Valid
DBD TYPE          = ATM
DBD MEMORY SIZE   = 512M
HW VERIFICATION CODE = ----
CURRENT TEMPERATURE = 34C ( 94F)
PEAK TEMPERATURE:  = 35C ( 95F)
SIGNALING LINK STATUS

```

[07-14-20 07:23]

```

      SLK      PST              LS              CLLI
      A        IS-NR            lsa110          -----
      B        IS-NR            lsa110          -----
TVG STATUS
SNM      TVG RESULT  = 24 hr: G-----, 5 min: G-----
SLAN     TVG RESULT  = 24 hr: -----, 5 min: -----
SCCP     TVG RESULT  = 24 hr: -----, 5 min: -----
INM      TVG RESULT  = 24 hr: G-----, 5 min: G-----

```

Command Completed.

;

The following example shows output for a card that is running the IPSG application.

rept-stat-card:loc=1413

```

eagle10212 08-02-06 17:01:28 EST EAGLE 38.0.0
CARD  VERSION      TYPE      GPL      PST      SST      AST
1413  079-015-001  E5ENET  IPSG      IS-NR      Active    -----
ALARM STATUS      = No Alarms
IMTPCI  GPL version = 130-014-000
BLVXW6  GPL version = 130-015-000
BLDIAG6 GPL version = 130-008-000
BLBEPM  GPL version = 128-021-000
BLCPLD  GPL version = 128-021-000
IMT BUS A      = Conn
IMT BUS B      = Conn
CURRENT TEMPERATURE = 46C (115F)
PEAK TEMPERATURE:  = 47C (117F)      [08-02-05 18:40]
SIGNALING LINK STATUS
      SLK      PST              LS              CLLI
      A        IS-NR            ls1305a          -----
      B        OOS-MT            ls1305i          -----
      A1       OOS-MT            ls1305a          -----
      B1       OOS-MT            ls1305i          -----
      B14      OOS-MT            lsitunbb         -----
      B15      OOS-MT            lsitunaa         -----

```

Command Completed.

The following example shows a full report for an FC-enabled card.

rept-stat-card:loc=1105:mode=full

```

stp9021503 08-12-11 05:14:58 EST EAGLE5 40.1.0
CARD  VERSION      TYPE      GPL      PST      SST      AST
1105  055-016-012  E5ENET  IPSG      IS-NR      Active    -----
ALARM STATUS      = * 0581 Loss of Heartbeat
IMTPCI  GPL version = 131-007-000
BLVXW6  GPL version = 055-016-007
BLDIAG6 GPL version = 055-016-006
BLBEPM  GPL version = 055-016-006
BLCPLD  GPL version = 055-016-006
IMT BUS A      = Conn
IMT BUS B      = Conn
CLOCK A      = Active
CLOCK B      = Idle
CLOCK I      = Idle
MBD BIP STATUS  = Valid
MOTHER BOARD ID = EPM A
DBD STATUS     = Valid
DBD TYPE       = 1G ENET
DBD MEMORY SIZE = 512M
HW VERIFICATION CODE = ----
CURRENT TEMPERATURE = 56C (133F)
PEAK TEMPERATURE:  = 58C (137F)      [03-12-22 18:06]
SIGNALING LINK STATUS
      SLK      PST              LS              CLLI              E5IS
      A        OOS-MT-DSBLD      ls333          -----      ACTIVE
      A1       OOS-MT-DSBLD      ls555          -----      ACTIVE

```



```

IPLNK STATUS
  IPLNK  IPADDR          STATUS  PST
  A      192.168.63.165  UP      IS-NR
  B      192.168.163.141 DOWN    OOS-MT
FCLNK STATUS
  A1     172.21.48.245   UP      IS-NR
  B1     172.22.48.245   UP      IS-NR
FASTCOPY STATUS: ONLINE
ASSOCIATION STATUS
  ANAME          PST          SST
  assoc1         OOS-MT-DSBLD  OOS
  assoc5         OOS-MT-DSBLD  OOS
TVG STATUS
  SNM    TVG RESULT    = 24 hr: -----, 5 min: -----
  SLAN   TVG RESULT    = 24 hr: -----, 5 min: -----
  SCCP   TVG RESULT    = 24 hr: -----, 5 min: -----
  EROUTE TVG RESULT    = 24 hr: G-----, 5 min: G-----
  INM    TVG RESULT    = 24 hr: -----, 5 min: -----

```

Command Completed.

;

The following example shows output for an E5-IPSM card.

rept-stat-card: loc=1111

```

tekelecstp 08-07-09 08:57:56 EST EAGLE 39.0.0
CARD  VERSION  TYPE  GPL  PST  SST  AST
1111  131-010-000 IPSM  IPSHC IS-NR Active -----
ALARM STATUS      = No Alarms.
IMTPCI  GPL version = 131-005-000
BLVXW6  GPL version = 131-009-000
BLDIAG6 GPL version = 131-002-000
BLBEPM  GPL version = 128-021-000
BLCPLD  GPL version = 128-021-000
IMT BUS A      = Conn
IMT BUS B      = Conn
CURRENT TEMPERATURE = 36C ( 97F)
PEAK TEMPERATURE:  = 38C (101F) [08-07-08 18:15]

```

Command Completed.

;

The following example shows a full report for a card that is running the IPSG application.

rept-stat-card: loc=1105:mode=full

```

e1080403 08-07-10 14:46:53 EST EAGLE 38.0.0
CARD  VERSION  TYPE  GPL  PST  SST  AST
1105  131-011-000 E5ENET IPSG  IS-NR Active -----
ALARM STATUS      = No Alarms.
IMTPCI  GPL version = 131-007-000
BLVXW6  GPL version = 131-009-000
BLDIAG6 GPL version = 131-008-000
BLBEPM  GPL version = 128-021-000
BLCPLD  GPL version = 128-021-000
IMT BUS A      = Conn
IMT BUS B      = Conn
CLOCK A      = Active
CLOCK B      = Idle
CLOCK I      = Idle
MBD BIP STATUS = Valid
MOTHER BOARD ID = EPM A
DBD STATUS    = Valid
DBD TYPE      = 1G ENET
DBD MEMORY SIZE = 512M
HW VERIFICATION CODE = ----
CURRENT TEMPERATURE = 43C (110F)
PEAK TEMPERATURE:  = 45C (113F) [08-07-08 10:18]
SIGNALING LINK STATUS

```

```

      SLK      PST              LS              CLLI
      B2      00S-MT           ipsg1105b2      -----
IPLNK STATUS
      IPLNK   IPADDR           STATUS          PST
      A       10.254.101.121    UP             IS-NR
      B       10.254.100.4      UP             IS-NR
ASSOCIATION STATUS
      ANAME           PST              SST
      m3ua1105b2      00S-MT          CONNECTING
TVG STATUS
      SNM      TVG RESULT      = 24 hr: -----, 5 min: -----
      SLAN     TVG RESULT      = 24 hr: -----, 5 min: -----
      SCCP     TVG RESULT      = 24 hr: -----, 5 min: -----
      INM      TVG RESULT      = 24 hr: -----, 5 min: -----

```

Command Completed.

;

The following example shows a full report for an IPSM card.

rept-stat-card:loc=1105:mode=full

```

tekelecstp 08-07-10 04:18:36 EST EAGLE 39.0.0
CARD  VERSION      TYPE      GPL      PST      SST      AST
1105  131-010-000  IPSM      IPS      IS-NR      Active     -----
ALARM STATUS      = * 0021 Clock A for card failed, Clock B normal
BPDCM  GPL version = 130-029-000
IMT BUS A          = Conn
IMT BUS B          = Conn
CLOCK A           = Fault
CLOCK B           = Active
CLOCK I           = Idle
MBD BIP STATUS     = Valid
MOTHER BOARD ID    = SS EDSM
DBD STATUS         = Valid
DBD TYPE           = MEM
DBD MEMORY SIZE    = 1024M
HW VERIFICATION CODE = ----
IPLNK STATUS
      IPLNK   IPADDR           STATUS          PST
      A       10.220.9.9        UP             IS-NR

```

Command Completed.

;

The following example shows a full report for an E5-IPSM card.

rept-stat-card:loc=1107:mode=full

```

tekelecstp 08-07-10 04:18:45 EST EAGLE 39.0.0
CARD  VERSION      TYPE      GPL      PST      SST      AST
1107  131-010-000  IPSM      IPSHC    IS-NR      Active     -----
ALARM STATUS      = * 0021 Clock A for card failed, Clock B normal
IMTPCI  GPL version = 131-005-000
BLVXW6  GPL version = 131-010-000
BLDIAG6 GPL version = 131-002-000
BLBEPM  GPL version = 128-021-000
BLCPLD  GPL version = 128-021-000
IMT BUS A          = Conn
IMT BUS B          = Conn
CLOCK A           = Fault
CLOCK B           = Active
CLOCK I           = Idle
MBD BIP STATUS     = Valid
MOTHER BOARD ID    = EPM A
DBD STATUS         = Valid
DBD TYPE           = 1G ENET
DBD MEMORY SIZE    = 2048M
HW VERIFICATION CODE = ----
CURRENT TEMPERATURE = 45C (113F)

```

```

PEAK TEMPERATURE:      = 45C (113F)      [11-12-12 03:57]
IPLNK STATUS
  IPLNK  IPADDR          STATUS    PST
  A      10.254.101.121  UP        IS-NR

```

Command Completed.

;

The following example shows a full report for an E5-E1T1 card when an obsolete framer IC version (v2.1) is used.

rept-stat-card:loc=1204:mode=full

```

tekelecstp 08-09-25 12:06:24 IST EST EAGLE 39.2.0
CARD  VERSION      TYPE      GPL      PST      SST      AST
1204  131-016-000  LIME1    SS7HC    IS-NR    Active    -----
ALARM STATUS      = No Alarms.
IMTPCI  GPL version = 131-007-000
BLVXW6  GPL version = 131-009-000
BLDIAG6 GPL version = 131-008-000
BLBEPM  GPL version = 128-021-000
PLDPMC1 GPL version = 128-021-000
BLCPLD  GPL version = 128-021-000
IMT BUS A          = Conn
IMT BUS B          = Conn
CLOCK A           = Active
CLOCK B           = Fault
CLOCK I           = Idle
HS CLOCK A        = Fault
HS CLOCK B        = Fault
HS CLOCK I        = Idle
MBD BIP STATUS    = Valid
MOTHER BOARD ID   = EPM A
DBD STATUS        = Valid
DBD TYPE          = E1T1
DBD MEMORY SIZE   = 512M
HW VERIFICATION CODE = ----
CARD WARNING      = OBSOLETE FRAMER
CURRENT TEMPERATURE = 36C ( 97F)
PEAK TEMPERATURE: = 37C ( 99F)      [04-01-05 11:33]
SIGNALING LINK STATUS
  SLK  PST          LS          CLLI
  A    OOS-MT-DSBLD  lsb        -----
TVG STATUS
  SNM   TVG RESULT  = 24 hr: -----, 5 min: -----
  SLAN  TVG RESULT  = 24 hr: -----, 5 min: -----
  SCCP  TVG RESULT  = 24 hr: -----, 5 min: -----
  INM   TVG RESULT  = 24 hr: -----, 5 min: -----

```

Command Completed.

;

The following example shows the output for E5-TSM card running the **glshc** GPL.

rept-stat-card:loc=1106:mode=full

```

tekelecstp 08-10-05 19:15:28 EST EAGLE 40.0.0
CARD  VERSION      TYPE      GPL      PST      SST      AST
1106  130-001-000  TSM      GLSHC    IS-NR    Active    -----
ALARM STATUS      = No Alarms.
IMTPCI  GPL version = 130-001-000
BLVXW6  GPL version = 130-001-000
BLDIAG6 GPL version = 130-001-000
BLBEPM  GPL version = 130-001-000
BLCPLD  GPL version = 130-001-000
IMT BUS A          = Conn
IMT BUS B          = Conn
CLOCK A           = Active
CLOCK B           = Idle

```

```

CLOCK I           = Idle
MBD BIP STATUS    = Valid
MOTHER BOARD ID   = EPM A
DBD STATUS        = Valid
DBD TYPE          = None
DBD MEMORY SIZE   = 512M
HW VERIFICATION CODE = ----
CURRENT TEMPERATURE = 44C (112F)
PEAK TEMPERATURE:  = 44C (112F)      [07-10-05 19:10]

```

Command Completed.

The following example shows the output when E5-MCAP, E5-TDM, and E5-MDAL cards are used.

rept-stat-card

```

e5oam 08-12-01 15:38:32 EST EAGLE 40.1.0
CARD  VERSION      TYPE      GPL      PST      SST      AST
1108  -----      MCPM      MCP      OOS-MT-DSBLD  Manual  -----
1109  030-009-000  HIPR      HIPR      IS-NR      Active  -----
1110  030-009-000  HIPR      HIPR      IS-NR      Active  -----
1111  030-010-000  IPSM      IPS       IS-NR      Active  -----
1113  030-010-008  E5MCAP    OAMHC     IS-NR      Standby  -----
1114  -----      E5TDM           IS-NR      Active  -----
1115  030-010-008  E5MCAP    OAMHC     IS-NR      Active  -----
1116  -----      E5TDM           IS-NR      Active  -----
1117  -----      E5MDAL           OOS-MT      Isolated  -----

```

Command Completed.

;

Legend

- **CARD**—The location of the card.
- **VERSION**—The version number of the application loaded on the card. Dashes (- - - -) in the version column indicate one of the following conditions about the card:
 - The card is configured but is not physically present in the system.
 - The card does not run a GPL, such as TDM or MDAL cards.
 - The card is IS-ANR or is in the process of being loaded.
- **TYPE**—The card type entered in the database. (The DCM and SSED CM cards show card type DCM.)
- **APPL**—The application loaded on this card. **PST**—The primary state of the card. The possible values are described in "Possible Values for PST/SST/AST".
- **SST**—The secondary state of the card. The possible values are described in "Possible Values for PST/SST/AST".
- **AST**—The associated state of the card. The possible values are described in "Possible Values for PST/SST/AST".

The group ticket voucher status is displayed in these fields: SCCP TVG RESULT (for SCCP messages), SLAN TVG RESULT (for STPLAN messages), and SNM TVG RESULT (for SNM messages). Group ticket voucher status output is displayed as a series of these letters:

G—Service Granted. Indicates normal system behavior.

D—Service Denied. Indicates an overload, but the group ticket voucher hardware and software are working correctly.

N—No granter in the system. For GTT or STPLAN traffic, there can be no SCCP cards or STPLAN in the system. If there are SCCP cards or STPLAN in the system, then a serious failure is indicated (hardware or software bug or hardware failure).

H—Hardware time-out. Indicates the hardware timed out waiting for a group ticket voucher packet to return. Group ticket voucher packets can be lost when a card is plugged in or booted. This is a serious condition if cards have not been connecting or disconnecting from the IMT. If this occurs, the IMT must be scrubbed (see the Scrub IMT procedure in the *Maintenance Manual*) or the card must be replaced..

S—Software time-out. No result was ever returned from hardware, indicating a probable hardware failure.

I—Invalid result from hardware. If this occurs, the IMT must be scrubbed (see the Scrub IMT procedure in the *Maintenance Manual*) or the card must be replaced.

The HW VERIFICATION CODE field is shown only in the mode=full report. ----- is shown in the HW VERIFICATION CODE field for cards with valid hardware detected. One of the following numerical values is shown when invalid hardware is detected, and all such cards will be auto-inhibited.

* It is possible that the card will continually boot in these cases, before the alarm is ever displayed.

Table 5-64. Auto-Inhibit Hardware Verification Codes

HW Verification Code	Card or Application Code	Description	Associated UAM Code
002*	VSCCP	VSCCP card equipped with non-DSM MPS feature is on	99
003*	VSCCP	VSCCP card equipped with non-DSM LNP and VGTT feature is on	99
004*	VSCCP	VSCCP card equipped with non-DSM XGTT 1,000,000 is on	99
005*	VSCCP	VSCCP card equipped w/non-DSM when EGMS enabled	99
050	VSCCP	VSCCP card equipped with no daughterboards	99
051	VSCCP	VSCCP card equipped with less than 4GB when LNP ported TNs key equal to or greater than 48 million is on	422
052	VSCCP	VSCCP card equipped with less than 3GB when LNP ported TNs key equal to or greater than 36 million is on	422
053	VSCCP	VSCCP card equipped with less than 2GB when LNP NPAXXX 150,000 or LNP LRN 100,000 feature key is on	422

Table 5-64. Auto-Inhibit Hardware Verification Codes

HW Verification Code	Card or Application Code	Description	Associated UAM Code
058	SCCP	SCCP card equipped with less than 256K or greater than the MAX of extended memory.	422
059	VSCCP	MPS database has been detected to exceed capacity of DSM extended memory (only for GPORT, GFLEX, INP, EIR features). UAMs 281, 283, and 285 are used for LNP and LNP ELAP Configuration features.	422
060	VSCCP	VSCCP card equipped w/< 4GB when the ANSI-41 INP Query feature key is on.	422
099	E5-TSM	E5-TSM card equipped has one or more daughterboard.	99
100	SS7IPGW, IPGWI	DCM with IP connection on B port only when debug enabled	276
101	SS7IPGW, IPGWI, IPLIM, IPLIMI	DCM only supports SLK link A and B -or- EDCM only supports SLK link A-A3 and B-B3 -or- E5-ENET only supports SLK link A-7and B-7	276
102*	SS7IPGW, IPGWI	Non-DCM detected in slot	99

Table 5-64. Auto-Inhibit Hardware Verification Codes

HW Verification Code	Card or Application Code	Description	Associated UAM Code
103	SS7IPGW, IPGWI, IPLIM, IPLIMI	DCM does not support >2 associations (IPLIMx)-OR-DCM does not support >4 associations (IPGWx) -or- EDCM does not support >8 associations (IPLIMx) -or- EDCM does not support >50 associations (IPGWx) -or- E5-ENET does not support >16 associations (IPLIMx) -or- E5-ENET does not support >50 associations (IPGWx)	276
104	SS7IPGW, IPGWI, IPLIM, IPLIMI	DCM does not support >2 sockets (IPLIMx) -or- DCM does not support >50 sockets (IPGWx) -or- EDCM does not support >8 sockets (IPLIMx) -or- EDCM does not support >50 sockets (IPGWx) -or- E5-ENET does not support >0 sockets (IPLIMx) -or- E5-ENET does not support >0 sockets (IPGWx)	276

Table 5-64. Auto-Inhibit Hardware Verification Codes

HW Verification Code	Card or Application Code	Description	Associated UAM Code
105	SS7IPGW, IPGWI, IPLIM, IPLIMI	DCM does not support >2 (sockets + associations) (IPLIMx) -or- DCM does not support >50 (sockets + assoc*) (IPGWx) -or- EDCM does not support >8 (sockets + associations) (IPLIMx) -or- EDCM does not support >50 (sockets + associations) (IPGWx) Note: *assoc = 8 X associations	276
106	SS7IPGW, IPGWI, IPLIM, IPLIMI	DCM does not support >64Kb SCTP buffers (IPLIMx) -or- DCM does not support >64Kb SCTP buffers (IPGWx) -or- EDCM does not support >1600Kb SCTP buffers (IPLIMx) -or- EDCM does not support >800Kb SCTP buffers (IPGWx) -or- E5-ENET does not support >3200Kb SCTP buffers (IPLIMx) -or- E5-ENET does not support >3200Kb SCTP buffers (IPGWx)	276
110	SS7IPGW, IPGWI	(SRKQ = DRKQ > 1000) not supported on DCM.	276
119	LIME1	2-port E1 card provisioned with signaling link greater than B (A1-B3).	297
120	LIMDS0	2-port LIM card provisioned with signaling link greater than B (A1-B3).	297

Table 5-64. Auto-Inhibit Hardware Verification Codes

HW Verification Code	Card or Application Code	Description	Associated UAM Code
121	LIME1	2-port LIM card does not support MIM with E1 port AMI encoding provisioned.	297
122	MIM	Card is not a MIM - provisioned as a T1 card or as a T1 channel card associated with a T1 interface.	99
123	MPL	MPL cannot run with port A or B provisioned for speeds not equal to 56K.	297
124	MIM, HC-MIM	Card is not a MIM or HC-MIM and is provisioned as a T1 card.	99
125	MIM, MPL	MIM or MPL card with a signaling link greater than B3 provisioned.	297
126	LIME1	2-port E1 card with a signaling link provisioned on E1/T1 port 2-7.	297
127	MIM	MIM card with a signaling link provisioned on E1/T1 port 2-7.	297
128	HC-MIM	Fan feature bit must be on for HC-MIM cards.	43
129	HC-MIM, E5-E1T1	Card does not support CAS framing.	297
130	LIME1, MIM	Card is not a LIME1 or MIM and is provisioned as an E1 channel card.	99
131	HC-MIM, E5-E1T1	Card has channel bridging mode active but is not running supported high capacity GPL	297
132	MPL	Card is not a LIME1 or MIM and is provisioned as an E1 card.	99
133	LIME1, LIMDS0, MIM, MPL	Card cannot support unchannelized mode.	99
134	E5-E1T1	E5-E1T1 card with SLK provisioned on link greater than 15.	99
135	E5-E1T1	E5-E1T1 card supports only 1 SE-HSL link	276
136	LIM-ATM, LIME1- ATM	Single Port ATM card with SLK provisioned on link B	297

Table 5-64. Auto-Inhibit Hardware Verification Codes

HW Verification Code	Card or Application Code	Description	Associated UAM Code
140	MCP	MCP card not running with D2G memory.	422
141	IPS	IPSM card not running with D2G memory.	422
150	ASM	Card is obsolete.	47
160	MCP	MCP card has incorrect motherboard. The application must run on an EDSM card.	441
165	VSCCP	Hardware configuration does not support configured feature set.	99
170	EROUTE	Non-DCM/Non-E5-ENET card detected in slot provisioned for eroute with card type DCM	99
171	STPLAN	Non-DCM/Non-E5-ENET card detected in slot provisioned for STPLAN with card type DCM	99
180	SCCP, SS7ANSI	SCCP card equipped with DCM with MOBR on -or- SS7ANSI card equipped with one of the following with MOBR on: LIMDS0/LIMV35/LIMOCU/LIM-AINF/ILA/EILA/LIME1	441

rept-stat-cdl**Report Command Driven Loopback Status**

Use this command to generate a report of the signaling links currently in Command Driven Loopback (CDL) testing, including the amount of time the link has been in CDL testing.

Command Driven Loopback is the ability to locally drive a signaling link into a manual line loopback. The data received on the signaling link is echoed (transmitted) back. This is effectively the reverse of the **tst-slk:loopback=lxvr**, which loops the transmitted data back to the receive.

Keyword: **rept-stat-cdl**

Related Commands: **act-cdl, dact-cdl**

Command Class: Link Maintenance

Parameters

:link= (optional)

SS7 signaling links. The signaling links that is being tested.

Synonym: **port**

Range: **a, b, a1-a31, b1-b31**

Not all card types support all **link** parameter values.

See "Summary of Range Values for :link Parameter" for valid **link** parameter range values for each type of card that can have assigned signaling link ports.

Default: All signaling links that are in CDL testing are displayed.

:loc= (optional)

The card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Default: All cards containing signaling links that are in CDL testing are displayed.

:loopback= (optional)

Loopback test type.

Range: **line**, **payload**

The **payload** value is valid only on LIM-ATM and E1-ATM cards.

Default: All loopback tests are displayed.

Example

```
rept-stat-cdl
```

```
rept-stat-cdl:loc=1201
```

```
rept-stat-cdl:loc=1203:link=a
```

```
rept-stat-cdl:loopback=payload
```

Dependencies

If the **link** parameter is specified, the **loc** parameter must be specified.

The card location specified in the **loc** parameter must be equipped.

The signaling link specified in the **link** parameter must be equipped.

This command is not available during upgrade.

The card location specified in the **loc** parameter cannot be reserved by the system.

Notes

This command can be canceled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information

Output**rept-stat-cdl**

```

tekelecstp 03-11-27 01:29:06 EST EAGLE 31.3.0
SLK        CDL        CDL-TIME
1102,A1    LINE       00:04:01
1201,A     PAYLOAD    01:04:11
1203,A     LINE       00:22:21
1203,B     LINE       20:04:01
1208,A     LINE       01:05:22
1211,A     PAYLOAD    00:14:01
;

```

Legend

SLK—The card and assigned signaling link that is in CDL testing.

CDL—Command Driven Loopback test type (LINE or PAYLOAD).

CDL-TIME—The time that the signaling link has been in CDL testing. This value can be up to 99:59:59. The test can run longer than 100 hours, but this field will not record times longer than 100 hours.

rept-stat-cdt**Report Status Customer Defined Troubles**

Use this command to display the customer-defined troubles. The Customer-Definable Alarms feature can be used to connect up to 10 external devices to the system for alarm reporting. These devices are defined in the system database as customer-defined troubles, and they are monitored so that any change in the state of these devices is reported as an unsolicited alarm message (UAM).

Keyword: **rept-stat-cdt**

Related Commands: **act-alm-trns, canc-alm-trns, dact-alm-trns, rept-stat-clk, rept-stat-trbl, rls-alm, rtrv-obit, rtrv-trbl**

Command Class: System Maintenance

Parameters

This command has no parameters.

Example

```
rept-stat-cdt
```

Dependencies

No other status command can be in progress when this command is entered.

Notes

These troubles are customer-defined and configured by the factory.

Output**rept-stat-cdt**

```

rlghncxa03w 04-01-07 20:20:43 EST EAGLE 31.3.0
ID          ALARM STATUS
1    *C 0058 Critical Customer Trouble detected
2    *C 0050 Critical Holdover Clock trouble detected
3    *C 0058 Critical Customer Trouble detected
4    *C 0058 Critical Customer Trouble detected
5    I ** 0059 Major Customer Trouble detected
6    ** 0052 Major Holdover Clock trouble detected
7    ** 0059 Major Customer Trouble detected
8    ** 0059 Major Customer Trouble detected
9    I * 0060 Minor Customer Trouble detected
10   * 0054 Minor Holdover Clock trouble detected
11   * 0060 Minor Customer Trouble detected
12   * 0060 Minor Customer Trouble detected
13   * 0060 Minor Customer Trouble detected
14   I * 0060 Minor Customer Trouble detected
15   * 0060 Minor Customer Trouble detected
16   * 0060 Minor Customer Trouble detected
;

```

Legend

ID—The customer defined trouble ID number followed by the status of the customer-defined trouble.

ALARM STATUS—The status of the alarm for the specified device.

rept-stat-clk**Report Status Clock**

Use this command to display the clock status summary for cards in the system.

Keyword: **rept-stat-clk**

Related Commands: **rept-stat-card**, **rept-stat-dstn**, **rept-stat-imt**, **rept-stat-ls**, **rept-stat-sccp**, **rept-stat-slk**, **rept-stat-trbl**

Command Class: System Maintenance

Parameters

:mode= (optional)

Display mode. When **mode=full** is specified, the "Cards with bad clock source" section of the report is displayed

Range: **full**

Example

```
rept-stat-clk
```

```
rept-stat-clk:mode=full
```

Dependencies

No other **rept-stat-xxx** command can be in progress when this command is entered.

Notes

The clock status report includes the status of all the clocks in the system (Clock A, Clock B, Clock I, High Speed (HS) Clock A, HS Clock B, etc).

The Time Slot Counter Synchronization (TSC) clock appears only if the Time Slot Counter Synchronization (TSCSYNC) feature is turned on. See the **chg-feat** command.

The Composite clock sections of the report are the *Primary Comp Clock (CLK)* and the *Secondary Comp CLK* fields in the COMPOSITE SYSTEM CLOCK section: the summary of the number of cards having bad status or using COMP CLKs; and the *CLK* columns in the "Cards with bad clock source" section that appears when the **mode=full** parameter is specified.

The HS clock sections of the report are the *Primary HS Clock (CLK)*, *Secondary HS CLK*, *HS CLK TYPE*, and *HS CLK LINELEN* fields in the HIGH SPEED SYSTEM CLOCK section: the summary of the number of cards having bad status or using HS CLKs; and the *HS CLK* columns in the "Cards with bad clock source" section that appears when the **mode=full** parameter is specified.

HS clock capable cards can support a link that is provisioned to use HS Master Timing. These cards include all cards with type **lime1** or **limt1** and all cards that run the **atmansi** or **atmitu** applications. The clock status values are the same as those listed in the **rept-stat-card:mode=full:loc=xxx** report. For a complete list of the cards and their applications, see Table A-7.

If HS clock A and B status is included in the "Cards with bad clock source" section, then cards that cannot be provisioned to use HS Master Timing display dashes for HS clock A and B status.

The PST/SST for the Primary Composite Clock (Comp Clk) 1114, Primary Comp Clk 1116, Secondary Comp Clk 1114, Secondary Comp Clk 1116, Primary HS Clk 1114, Primary HS Clk 1116, Secondary HS Clk 1114, and Secondary HS Clk 1116 can be one of the following values:

- IS-NR/active—clock source is valid, clock chosen as source
- IS-NR/idle—clock source is valid, clock not chosen as source
- OOS-MT/fault—clock source is invalid

The PST/ SST for the Composite System Clock and High Speed System Clock can be one of the following values:

- IS-NR/Idle—all cards showing good clock, clock not required
- IS-ANR/Idle—some cards showing bad clock, clock not required
- OOS-MT/Idle—all cards showing bad clock, clock not required
- IS-NR/Active—all cards “requiring clocks” showing good clock, clocks required
- IS-ANR/Fault—some cards “requiring clocks” showing bad clock, clocks required
- OOS-MT/Fault—all cards “requiring clocks” showing bad clock, clocks required

NOTE: An asterisk (*) indicates that the card requires the indicated clock.

Output

NOTE: A TDM card can use a local clock that is generated independently on each TDM as a clock source for the corresponding internal system clock. The system does not report the “cards bad” status for these internal clocks.

NOTE: The use of HS CLK I is not automatic when both the high-speed primary and secondary clocks are invalid. A LIM-ATM card must be provisioned (using the ent-slk:atmtsel=internal parameter) to use the high-speed internal clock.

NOTE: The *Using* field in the Composite Clock section describes all of the cards that are using the Composite Clock, not just LIM-DS0, MPL, or HS clock capable cards.

The following example shows output when two GPSM-II cards are configured, and LIM-DS0 cards, MPL cards, and HS clock capable cards are not configured. The TSCSYNC feature is not turned on.

rept-stat-clk

```
tekelecstp 08-06-07 14:40:13 EST EAGLE 39.0.0
COMPOSITE                                PST      SST      AST
  SYSTEM CLOCK                          IS-NR    Idle    -----
ALARM STATUS = No Alarms.
  Primary Comp Clk 1114 (CLK A)         IS-NR    Active  -----
  Primary Comp Clk 1116 (CLK B)         IS-NR    Active  -----
  Secondary Comp Clk 1114 (CLK A)        IS-NR    Idle    -----
  Secondary Comp Clk 1116 (CLK B)        IS-NR    Idle    -----

Clock      Using      Bad
CLK A      2          0
CLK B      0          0
CLK I      0          --

HIGH SPEED                                PST      SST      AST
  SYSTEM CLOCK                          IS-NR    Idle    -----
ALARM STATUS = No Alarms.
  Primary HS Clk 1114 (HS CLK A)         IS-NR    Active  -----
  Primary HS Clk 1116 (HS CLK B)         IS-NR    Active  -----
  Secondary HS Clk 1114 (HS CLK A)        IS-NR    Idle    -----
  Secondary HS Clk 1116 (HS CLK B)        IS-NR    Idle    -----

HS CLK TYPE 1114      = RS422
HS CLK LINELEN 1114   = -----
HS CLK TYPE 1116      = RS422
HS CLK LINELEN 1116   = -----

Clock      Using      Bad
HS CLK A    0          0
HS CLK B    0          0
HS CLK I    0          --

Command Completed.
```

;

The following example shows output when two GPSM-II cards are configured, LIM-DS0 and MPL cards are not configured, and an HS clock capable card is configured. The TSCSYNC feature is not turned on.

rept-stat-clk

```
tekelecstp 08-06-07 14:40:13 EST EAGLE 39.0.0
COMPOSITE                                PST      SST      AST
  SYSTEM CLOCK                          IS-NR    Idle    -----
ALARM STATUS = No Alarms.
```


Commands

rept-stat-clk

```

Primary Comp Clk 1114 (CLK A) IS-NR Active -----
Primary Comp Clk 1116 (CLK B) IS-NR Active -----
Secondary Comp Clk 1114 (CLK A) IS-NR Idle -----
Secondary Comp Clk 1116 (CLK B) IS-NR Idle -----

```

```

Clock      Using      Bad
CLK A      3          0
CLK B      0          0
CLK I      0          --

```

```

HIGH SPEED                                PST      SST      AST
SYSTEM CLOCK                             IS-NR    Active  -----
ALARM STATUS = No Alarms.
Primary HS Clk 1114 (HS CLK A) IS-NR    Active  -----
Primary HS Clk 1116 (HS CLK B) IS-NR    Active  -----
Secondary HS Clk 1114 (HS CLK A) IS-NR    Idle    -----
Secondary HS Clk 1116 (HS CLK B) IS-NR    Idle    -----

```

```

HS CLK TYPE 1114 = RS422
HS CLK LINELEN 1114 = -----
HS CLK TYPE 1116 = RS422
HS CLK LINELEN 1116 = -----

```

```

Clock      Using      Bad
HS CLK A   1          0
HS CLK B   0          0
HS CLK I   0          --

```

Command Completed.

;

The following example shows output when two GPSM-II cards are configured, and LIM-DS0 cards, MPL cards, and HS clock capable cards are not configured. The TSCSYNC feature is turned on.

rept-stat-clk

```

tekelecstp 08-05-07 14:40:13 EST EAGLE 39.0.0
COMPOSITE                                PST      SST      AST
SYSTEM CLOCK                             IS-NR    Active  -----
ALARM STATUS = No Alarms.
Primary Comp Clk 1114 (CLK A) IS-NR    Active  -----
Primary Comp Clk 1116 (CLK B) IS-NR    Active  -----
Secondary Comp Clk 1114 (CLK A) IS-NR    Idle    -----
Secondary Comp Clk 1116 (CLK B) IS-NR    Idle    -----

```

```

Clock      Using      Bad
CLK A      2          0
CLK B      0          0
CLK I      0          --

```

Prefer Clock A for TSC CLOCK

```

HIGH SPEED                                PST      SST      AST
SYSTEM CLOCK                             IS-NR    Active  -----
ALARM STATUS = No Alarms.
Primary HS Clk 1114 (HS CLK A) IS-NR    Active  -----
Primary HS Clk 1116 (HS CLK B) IS-NR    Active  -----
Secondary HS Clk 1114 (HS CLK A) IS-NR    Idle    -----
Secondary HS Clk 1116 (HS CLK B) IS-NR    Idle    -----

```

```

HS CLK TYPE 1114 = RS422
HS CLK LINELEN 1114 = -----
HS CLK TYPE 1116 = RS422
HS CLK LINELEN 1116 = -----

```

```

Clock      Using      Bad
HS CLK A   0          0

```

```

HS CLK B      0      0
HS CLK I      0      --

```

Command Completed.

;

The following example shows output when two GPSM-II cards are configured, LIM-DS0 and MPL cards are not configured, and an HS clock capable card is configured. The TSCSYNC feature is turned on.

rept-stat-clk

```

tekelecstp 08-06-07 14:40:13 EST  EAGLE 39.0.0
COMPOSITE                                PST      SST      AST
      SYSTEM CLOCK                      IS-NR    Active  -----
ALARM STATUS = No Alarms.
  Primary Comp Clk 1114 (CLK A)  IS-NR    Active  -----
  Primary Comp Clk 1116 (CLK B)  IS-NR    Active  -----
  Secondary Comp Clk 1114 (CLK A) IS-NR    Idle    -----
  Secondary Comp Clk 1116 (CLK B) IS-NR    Idle    -----

```

```

Clock      Using      Bad
CLK A      3          0
CLK B      0          0
CLK I      0          --

```

Prefer Clock A for TSC CLOCK

```

HIGH SPEED                                PST      SST      AST
      SYSTEM CLOCK                      IS-NR    Active  -----
ALARM STATUS = No Alarms.
  Primary HS Clk 1114 (HS CLK A) IS-NR    Active  -----
  Primary HS Clk 1116 (HS CLK B) IS-NR    Active  -----
  Secondary HS Clk 1114 (HS CLK A) IS-NR    Idle    -----
  Secondary HS Clk 1116 (HS CLK B) IS-NR    Idle    -----

```

```

HS CLK TYPE 1114      = RS422
HS CLK LINELEN 1114   = -----
HS CLK TYPE 1116      = RS422
HS CLK LINELEN 1116   = -----

```

```

Clock      Using      Bad
HS CLK A    1          0
HS CLK B    0          0
HS CLK I    0          --

```

Command Completed.

;

The following example shows output when the **mode=full** parameter is specified, LIM-DS0 or MPL cards are configured, and HS clock capable cards are configured. The TSCSYNC feature is turned on.

rept-stat-clk:mode=full

```

tekelecstp 08-06-07 14:40:13 EST  EAGLE 39.0.0
COMPOSITE                                PST      SST      AST
      SYSTEM CLOCK                      IS-ANR   Fault   -----
ALARM STATUS = No Alarms.
  Primary Comp Clk 1114 (CLK A)  IS-NR    Active  -----
  Primary Comp Clk 1116 (CLK B)  -----  -----  -----
  Secondary Comp Clk 1114 (CLK A) IS-NR    Idle    -----
  Secondary Comp Clk 1116 (CLK B) -----  -----  -----

```

```

Clock      Using      Bad
CLK A      4          1
CLK B      0          5
CLK I      0          --

```

Prefer Clock A for TSC CLOCK

HIGH SPEED	PST	SST	AST
SYSTEM CLOCK	00S-MT	Fault	-----
ALARM STATUS = No Alarms.			
Primary HS Clk 1114 (HS CLK A)	IS-NR	Active	-----
Primary HS Clk 1116 (HS CLK B)	-----	-----	-----
Secondary HS Clk 1114 (HS CLK A)	IS-NR	Idle	-----
Secondary HS Clk 1116 (HS CLK B)	-----	-----	-----

HS CLK TYPE 1114 = E1 UNFRAMED
 HS CLK LINELEN 1114 = SHORThAUL
 HS CLK TYPE 1116 = -----
 HS CLK LINELEN 1116 = -----

Clock	Using	Bad
HS CLK A	0	1
HS CLK B	0	1
HS CLK I	0	--

Cards with bad clock source:

CARD	CLK A	CLK B	HS CLK A	HS CLK B
1103	*Active	*Fault	-----	-----
1104	Active	Fault	*Fault	*Fault
1106	*Active	*Fault	-----	-----
1113	Active	Fault	-----	-----
1205	Fault	Fault	-----	-----

Command Completed.

;

The following example shows output when at least one LIM-DS0 or MPL card is configured, and HS clock capable cards are not configured. The TSCSYNC feature is not turned on.

rept-stat-clk

```
tekelecstp 08-06-07 14:40:13 EST EAGLE 39.0.0
COMPOSITE
SYSTEM CLOCK
PST
IS-NR
SST
Active
AST
-----
ALARM STATUS = No Alarms.
Primary Comp Clk 1114 (CLK A)
IS-NR
Active
-----
Primary Comp Clk 1116 (CLK B)
IS-NR
Active
-----
Secondary Comp Clk 1114 (CLK A)
IS-NR
Idle
-----
Secondary Comp Clk 1116 (CLK B)
IS-NR
Idle
-----
```

Clock	Using	Bad
CLK A	3	0
CLK B	0	0
CLK I	0	--

HIGH SPEED	PST	SST	AST
SYSTEM CLOCK	IS-NR	Idle	-----
ALARM STATUS = No Alarms.			
Primary HS Clk 1114 (HS CLK A)	IS-NR	Active	-----
Primary HS Clk 1116 (HS CLK B)	IS-NR	Active	-----
Secondary HS Clk 1114 (HS CLK A)	IS-NR	Idle	-----
Secondary HS Clk 1116 (HS CLK B)	IS-NR	Idle	-----

HS CLK TYPE 1114 = RS422
 HS CLK LINELEN 1114 = -----
 HS CLK TYPE 1116 = RS422
 HS CLK LINELEN 1116 = -----

Clock	Using	Bad
HS CLK A	0	0
HS CLK B	0	0

```

HS CLK I      0      --
Command Completed.
;

```

Legend

COMPOSITE SYSTEM CLOCK —Composite System clock status

ALARM STATUS —System clock alarms; "No alarms" is shown when there are no alarms.

PRIMARY COMP CLK —The status of the primary Composite clock input for a particular TDM

SECONDARY COMP CLK —The status of the secondary Composite clock input for a particular TDM

CLK A – Internal Eagle Clock sourced by the 1114 TDM from the selected clock source.

CLK B – Internal Eagle Clock sourced by the 1116 TDM from the selected clock source.

CLK I – Local clock generated independently on each LIM card.

PREFER CLOCK X FOR TSC CLOCK —The preferred clock source of the Time Slot Counter Synchronization (TSC) clock; appears only when the TSCSYNC feature is turned on.

HIGH SPEED SYSTEM CLOCK —HS system clock status

ALARM STATUS —HS System clock alarms; "No alarms" is shown when there are no alarms.

PRIMARY HS CLK —The status of the high-speed primary clock input for a particular TDM

SECONDARY HS CLK —The status of the high-speed secondary clock input for a particular TDM

HS CLK TYPE —HS clock source (see the chg-stpopts command) for a particular TDM

HS CLK LINELEN —HS clock line length (see the chg-stpopts command) for a particular TDM

HS CLK A – Internal Eagle High Speed Clock sourced by the 1114 TDM from the selected clock source.

HS CLK B – Internal Eagle High Speed Clock sourced by the 1116 TDM from the selected clock source.

HS CLK I – Local clock generated independently on each LIM card. The value for the internal high-speed clock (Cards using HSCLK I) is generated differently from the internal system clock (Cards using CLK I). The internal high speed clock is generated by the XILINX on the ATM applique's card. The internal system clock is generated by the Xilinx on the LIM main board when the LIM card does not have a valid system clock source (eg. both A system clock and B system clock are bad at the LIM card).

rept-stat-cluster

Report Status Cluster-Related DPC

Use this command to report summary status and statistical information for all provisioned clusters. Use this command also to report detailed routeset information for a specific cluster, provisioned cluster member, or dynamically-created x-list entry.

NOTE: This command does not support 24-bit ITU national point codes.

Keyword: rept-stat-cluster

Related Commands: chg-feat, chg-stpopts, rept-stat-cluster, rtrv-stpopts

Command Class: System Maintenance

Parameters

:dpc= (optional)

ANSI destination point code of the cluster whose status is to be reported, with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (prefix-ni-nc-ncm).

Synonym: **dpca**

Range: **p-**, **000-255**, *****

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

The asterisk value (*) is not valid for the *ni* subfield.

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001–005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006–255**.

The point code **000-000-000** is not a valid point code.

Default: Display summary for all provisioned clusters

:mode= (optional)

The type of display. Specify **mode=full** to display additional information for the specified DPC.

Range: **full**

Default: Display summary report

:stat= (optional)

This parameter reports on destinations whose status is the same as the state indicated by the parameter.

Range: **all**, **alminh**, **anr**, **dsbld**, **mt**, **nr**

all—All of the primary states

alminh—Alarms inhibited

anr—In service abnormal (IS-ANR)

dsbld—Out of service maintenance disabled (OOS-MT-DSBLD)

mt—Out of service maintenance (OOS-MT)

nr—In service normal (IS-NR)

Default: **all**

Example

```
rept-stat-cluster
rept-stat-cluster:stat=alminh
rept-stat-cluster:stat=MT
rept-stat-cluster:dpc=20-2-*
rept-stat-cluster:dpc=20-2-*:mode=full
rept-stat-cluster:dpc=20-2-5
```

Dependencies

If the **mode=full** parameter is specified, the **dpc/dpca** parameter must be specified.

The **stat** parameter cannot be specified with the **dpc/dpca** parameter in the command.

The Cluster Routing and Management Diversity (CRMD) feature must be turned on before this command can be entered.

The specified DPC must exist.

If a DPC is specified, it must be an x-list entry, a cluster DPC, or a member of a provisioned cluster.

The destination address must be a full point code or a cluster point code specified as *ni-nc-**. A DPC as *ni-nc-*** or *ni-nc-**** cannot be specified for the **rept-stat-cluster** command.

In this command, the point codes support only the private (internal) point code subtype prefix (**p-**).

Notes

If no parameters are specified, a summary report is produced, showing all provisioned clusters and their status.

If an FPC corresponding to a provisioned cluster member or an x-list entry is specified, then the status of only the specified FPC, along with routeset status, is displayed.

If a cluster destination is specified on the **dpc/dpca** parameter, then the status of the cluster and the routesets that have been defined for that cluster is displayed.

If the **mode=full** parameter and a DPC are specified, the Route/Destination table is searched, and all entries (cluster DPCs, provisioned cluster member DPCs, and x-list DPCs) belonging to the parent cluster are displayed along with their status. Also, if circular routing is in effect for the DPC, information useful in diagnosing and correcting the situation is displayed.

In the summary report, and in the detailed output when a cluster DPC is being reported, the number of provisioned members of the cluster, and the number of x-list entries that have been created for the cluster, are reported in the PROV and X-LIST columns, respectively.

When detailed information for an x-list entry is being reported, the reasons that the x-list entry was created, and the amount of time remaining on the x-list expiration timer, if applicable, in the format hh:mm is shown in the X-REASON and X-TIME columns, respectively. In x-list entries for which the expiration timer is not applicable, dashes "-----" are displayed.

Output

When no parameters are specified, summary information for all of the defined cluster DPCs is shown. Note that the report shows the number of provisioned and x-list members of each cluster.

rept-stat-cluster

```
rlghncxa03w 04-01-07 08:51:31 EST EAGLE 34.0.0
  DPCA      ORIG   PST    SST      AST      PROV  XLIST
  020-002-*  CLUST  IS-NR   Allowed ACCESS      2      3
  020-020-*  CLUST  IS-NR   Allowed ACCESS      3      5
  020-021-*  CLUST  OOS-MT  Prohibit INACCESS     5      2
  020-022-*  CLUST  IS-NR   Allowed ALMINH      2      3
```

Command Completed.

;

When a provisioned cluster member DPC is specified, the report shows status information for the specified DPC plus route information.

rept-stat-cluster:dpc=20-2-1

```
rlghncxa03w 04-01-07 08:51:31 EST EAGLE 34.0.0
  DPCA      ORIG   PST    SST      AST
  020-002-001 PROV  IS-ANR Restrict ACCESS
ALARM STATUS      = No Alarms.
RTE COST  LSN      APCA      LS STAT  NON-ADJ  ROUTE STAT
1  10  lsnppp  003-003-003 Allowed  Allowed  Allowed
2  --  -----  ***_***_*** -----  -----  -----
3  --  -----  ***_***_*** -----  -----  -----
4  --  -----  ***_***_*** -----  -----  -----
5  --  -----  ***_***_*** -----  -----  -----
6  --  -----  ***_***_*** -----  -----  -----
```

Command Completed.

;

When a specific cluster DPC is specified, the report shows count information about the cluster's provisioned and x-list members, plus the route information.

rept-stat-cluster:dpc=20-2-*

```
rlghncxa03w 04-01-07 08:51:31 EST EAGLE 34.0.0
  DPCA      ORIG   PST    SST      AST      PROV  X-LIST
  020-002-*  CLUST  IS-NR   Allowed ACCESS      2      3
ALARM STATUS      = No Alarms.
RTE COST  LSN      APCA      LS STAT  NON-ADJ  ROUTE STAT
1  10  lsnppp  003-003-003 Allowed  Allowed  Allowed
2  --  -----  ***_***_*** -----  -----  -----
3  --  -----  ***_***_*** -----  -----  -----
4  --  -----  ***_***_*** -----  -----  -----
5  --  -----  ***_***_*** -----  -----  -----
6  --  -----  ***_***_*** -----  -----  -----
```

Command Completed.

;

When an x-list cluster member DPC is specified, the report shows x-list related information (X-REASON, X-TIME) plus the route information. The output report identifies the specified DPC as an x-list DPC.

rept-stat-cluster:dpc=20-2-5

```
rlghncxa03w 04-01-07 08:51:31 EST EAGLE 34.0.0
  DPCA      ORIG   PST    SST      AST      X-REASON  X-TIME
  020-002-005 X-LIST IS-ANR Restrict ACCESS      RT      08:20
ALARM STATUS      = No Alarms.
```

RTE	COST	LSN	APCA	LS STAT	NON-ADJ	ROUTE STAT
1	10	lsnppp	003-003-003	Allowed	Allowed	Allowed
2	--	-----	***_***_***	-----	-----	-----
3	--	-----	***_***_***	-----	-----	-----
4	--	-----	***_***_***	-----	-----	-----
5	--	-----	***_***_***	-----	-----	-----
6	--	-----	***_***_***	-----	-----	-----

Command Completed.

;

Specifying a cluster **dpc** and **mode=full** expands the report to show summary status information for all of the provisioned and x-list DPCs that are members of the specified cluster.

rept-stat-cluster:dpc=20-2-*:mode=full

```
rlghncxa03w 04-01-07 08:51:31 EST EAGLE 34.0.0
  DPCA          ORIG      PST      SST      AST      PROV  X-LIST
  020-002-*     CLUST    IS-NR    Allowed  ACCESS    2      3
ALARM STATUS    = No Alarms.
RTE COST LSN      APCA          LS STAT  NON-ADJ  ROUTE STAT
1  10  lsnppp    003-003-003  Allowed  Allowed  Allowed
2  --  -----    ***_***_***  -----  -----  -----
3  --  -----    ***_***_***  -----  -----  -----
4  --  -----    ***_***_***  -----  -----  -----
5  --  -----    ***_***_***  -----  -----  -----
6  --  -----    ***_***_***  -----  -----  -----
  DPCA          ORIG      PST      SST      AST      X-REASON X-TIME
  020-002-*     CLUST    IS-NR    Allowed  ACCESS    -----  -----
  020-002-001   PROV     OOS-MT   Prohibit  INACCESS  -----  -----
  020-002-002   PROV     IS-ANR   Restrict  ACCESS    -----  -----
  020-002-126   X-LIST   IS-ANR   Restrict  ACCESS    RT        08:20
  020-002-127   X-LIST   OOS-MT   Prohibit  INACCESS  CR        -----
  020-002-128   X-LIST   IS-ANR   Restrict  ACCESS    CG RT     05:40
CIRCULAR ROUTING
XMIT LSN= ----- RC=--
RCV LSN= -----
MEMBER = ***_***_***
```

Command Completed.

;

When the **stat** parameter is specified, only those clusters having a primary state (PST) matching the specified value are reported.

rept-stat-cluster:stat=alminh

```
rlghncxa03w 04-01-07 08:51:31 EST EAGLE 34.0.0
  DPCA          ORIG      PST      SST      AST      PROV  XLIST
  020-022-*     CLUST    IS-NR    Allowed  ALMINH    2      3
```

Command Completed.

;

If a circular routing alarm is raised for a cluster member DPC, specifying the **dpc** and **mode=full** parameters displays information pertinent to the cluster member that is experiencing the circular routing condition. This information may be useful in correcting the problem.

rept-stat-cluster:dpc=20-2-127:mode=full

```
rlghncxa03w 04-01-07 08:51:31 EST EAGLE 34.0.0
  DPCA          ORIG      PST      SST      AST
  020-002-127   PROV     OOS-MT   Prohibit  INACCESS
ALARM STATUS    = *C 0319 Circular routing detected
RTE COST LSN      APCA          LS STAT  NON-ADJ  ROUTE STAT
1  10  lsnppp    003-003-003  Allowed  Allowed  Allowed
2  --  -----    ***_***_***  -----  -----  -----
```



```

3  --  -----  ***_***_***  -----  -----  -----
4  --  -----  ***_***_***  -----  -----  -----
5  --  -----  ***_***_***  -----  -----  -----
6  --  -----  ***_***_***  -----  -----  -----
DPCA      ORIG      PST      SST      AST      X-REASON  X-TIME
020-002-*  CLUST     IS-NR     Allowed  ACCESS    -----  -----
020-002-001 PROV      OOS-MT    Prohibit ACCESS    -----  -----
020-002-002 PROV      IS-ANR    Restrict ACCESS    -----  -----
020-002-126 X-LIST    IS-ANR    Restrict ACCESS    RT      08:20
020-002-127 X-LIST    OOS-MT    Prohibit INACCESS  CG CR    -----
020-002-128 X-LIST    IS-ANR    Restrict ACCESS    CR CG RT 05:40
CIRCULAR ROUTING
XMIT LSN= lsnppp RC=--
RCV LSN= lsn01a
MEMBER   = ***_***_***

```

Command Completed.

;

If a circular routing alarm is raised for a cluster DPC (that is, no x-list entry could be created for the cluster member), then specifying the **dpc** and **mode=full** parameters displays information pertinent to the cluster member that is experiencing the circular routing condition. This information may be useful in correcting the problem. The value for the MEMBER field in this example represents the cluster member that had the circular routing condition. This is the same member for which an x-list entry could not be created.

NOTE: The circular routing member information shown in this output report displays as *-***-*** if the specified destination point code is not a cluster destination point code or the information is not known by maintenance at the time the report is generated.**

rept-stat-cluster:dpc=20-2-*:mode=full

```

rlghncxa03w 04-01-07 08:51:31 EST EAGLE 34.0.0
DPCA      ORIG      PST      SST      AST      PROV  X-LIST
020-002-*  CLUST     IS-NR     Allowed  ACCESS    2      3
ALARM STATUS = *C 0319 Circular routing detected
RTE COST  LSN      APCA      LS STAT  NON-ADJ  ROUTE STAT
1  10  lsnppp  003-003-003 Allowed  Allowed  Allowed
2  --  -----  ***_***_***  -----  -----  -----
3  --  -----  ***_***_***  -----  -----  -----
4  --  -----  ***_***_***  -----  -----  -----
5  --  -----  ***_***_***  -----  -----  -----
6  --  -----  ***_***_***  -----  -----  -----
DPCA      ORIG      PST      SST      AST      X-REASON  X-TIME
020-002-*  CLUST     IS-NR     Allowed  ACCESS    -----  -----
020-002-001 PROV      OOS-MT    Prohibit INACCESS  -----  -----
020-002-002 PROV      IS-ANR    Restrict ACCESS    -----  -----
020-002-126 X-LIST    IS-ANR    Restrict ACCESS    RT      08:20
020-002-127 X-LIST    OOS-MT    Prohibit INACCESS  CR      -----
020-002-128 X-LIST    IS-ANR    Restrict ACCESS    CG RT   05:40
CIRCULAR ROUTING
XMIT LSN= lsnppp RC=--
RCV LSN= lsn01a
MEMBER   = 020-002-129

```

Command Completed.

;

The following example includes private point codes:

rept-stat-cluster:dpc=20-2-*:mode=full

```

rlghncxa03w 05-01-06 10:09:59 EST EAGLE 34.0.0
DPCA      ORIG      PST      SST      AST      PROV  XLIST
020-002-*  CLUST     OOS-MT    Idle    INACCESS  0      0
ALARM STATUS = No Alarms.

```

```

RTE COST  LSN          APCA          LS STAT  NON-ADJ  ROUTE STAT
1   10    ls11345678  p-001-001-003  Allowed  Allowed  Allowed
2   --    -----  ---***_***_***  -----  -----  -----
3   --    -----  ---***_***_***  -----  -----  -----
4   --    -----  ---***_***_***  -----  -----  -----
5   --    -----  ---***_***_***  -----  -----  -----
6   --    -----  ---***_***_***  -----  -----  -----
DPCA      ORIG  PST    SST      AST      X-REASON  X-TIME
020-002-* CLUST  IS-NR  Allowed ACCESS  -----  -----
p-020-002-001 PROV  OOS-MT Prohibit INACCESS -----  -----
p-020-002-002 PROV  IS-ANR Restrict ACCESS  -----  -----
020-002-126 X-LIST IS-ANR Restrict ACCESS  RT      08:20
020-002-127 X-LIST OOS-MT Prohibit INACCESS CR      -----
020-002-128 X-LIST IS-ANR Restrict ACCESS  CG RT   05:40
CIRCULAR ROUTING INFO:
XMIT LSN=----- RC=--
RCV  LSN=-----
MEMBER =-----

```

Command Completed.

;

Legend

ORIG—Indicates the origination of the destination point code being reported. The possible values that can appear in the column are:

CLUST—Entry is a provisioned cluster (*ni-nc-**) DPC

PROV—Entry is a provisioned cluster member (*ni-nc-ncm*)

X-LIST—Entry is a non-provisioned (i.e. dynamically-created) x-list cluster member

PST—The primary state of the cluster. The possible values are described in "Possible Values for PST/SST/AST".

SST—The secondary state of the cluster. The possible values are described in "Possible Values for PST/SST/AST".

AST—The associated state of the cluster. The possible values are described in .

X-REASON—Indicates the reasons that the X-LIST entries currently exist. The two-letter indicator values that can appear in this column are:

RT—X-LIST entry created due to routing

CG—X-LIST entry created due to congestion

CR—X-LIST entry created due to circular routing

The circular routing transmit/receive linkset information shown in the **mode=full** detailed output report displays as "-----" if no circular routing alarm exists for the DPC or the information is not known by maintenance at the time the report is generated.

rept-stat-db

Report Status Database

Use this command to display a report showing various status indicators for the active and standby OAM database and the status of the database on each of the network cards.

If the AINPQ, G-Flex, G-Port, INP, LNP ELAP Configuration, Prepaid SMS Intercept Ph1 (PPSMS), or V-Flex feature is turned on, or the ATINP feature is enabled, then the status of the MPS databases and Service Module cards is displayed.

Keyword: rept-stat-db

Related Commands: chg-db, copy-meas, disp-disk-dir

Command Class: Database Administration

Parameters

:db= (optional)

The report section or sections to display in the output. The content of each section depends on the specified or default value of the **display** parameter, MPS output appears only if a feature that uses the MPS is turned on in the system (G-Flex, G-Port, INP, PPSMS, or the LNP ELAP Configuration controlled feature) or the ATINP feature is enabled.

Range: **all, mps, stp**

all — Displays database and card output for both the STP and MPS report sections.

mps — Displays only the database and card output for the MPS report section.

stp — Displays only the database and card output for the STP report section.

Default: **all**

:display= (optional)

The type of output

Range: **all, brief, except, version**

all — Displays the operational status of all databases (MASP A, MASP B, and MDAL) and all cards equipped in the database on the system.

brief — Displays the operational status of the databases in the active and standby MASP, and of the MPS databases if a feature that uses the MPS is turned on.

except — Displays the operational status information contained in the **display=brief** output along with the cards whose database level does not match the active fixed disk current partition or active MPS database.

version — Displays all of the same information that is displayed with the **display=all** parameter except that the individual database status column is replaced with the database format version and status. In addition, details of the status of the backup databases are displayed for MASP cards. No version information is shown for MPS databases; use the **rept-stat-mps** command.

Default: **brief**

:loc= (optional)

The card location as stenciled on the shelf of the system.

Range: **1101-1108, 1111-1112, 1114, 1116, 1117, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

Example

```
rept-stat-db
```

```
rept-stat-db:display=all
```

```
rept-stat-db:loc=1207
```

```
rept-stat-db:db=stp
```

Dependencies

The **db** and **loc** parameters cannot be specified at the same time.

The following card locations are not valid for this command: 1113, 1115, and all xy09 and xy10 locations (where x is the frame and y is the shelf).

One of the following features must be turned on, or the ATINP feature must be enabled before the **db=mps** parameter can be specified:

- A-Port
- AINPQ
- EIR
- G-Flex
- G-Port
- INP
- LNP ELAP Configuration
- Prepaid SMS Intercept Ph1
- V-Flex

The shelf and card must be equipped.

The card location slot must be between 1 and 18, but not 9 or 10.

The shelf location must be 11xx, 12xx, 13xx, 21xx, 22xx, 23xx, 31xx, 32xx, 33xx, 41xx, 42xx, 43xx, 51xx, 52xx, 53xx, or 61xx.

The frame value of the shelf location parameter (**loc**) must be within the valid range.

The **display** parameter can accept a value of **brief**, **all**, **version**, or **except** only.

Notes

If the **display** parameter, the **db** parameter, or the **loc** parameter is specified and the database for a particular card location is not accessible, hyphens are displayed in place of the data.

The output of the **rept-stat-db** command with no parameters specified or with the **display=brief** parameter shows the following information:

- Activity status of both the active and standby MASP, the date and time the last backup was performed on the removable cartridge or drive (if inserted) and the fixed disk backup partition, coherency, the number of updates (level) to the backup partition of the fixed disk, and the current partition of the fixed disk
- If the EIR, G-Flex, G-Port, INP, PPSMS, or V-Flex feature is turned on, or the ATINP feature is enabled, EPAP A and EPAP B database status followed by Service Module card database status
- If the LNPELAP Configuration controlled feature is turned on, ELAP A and ELAP B database status followed by Service Module card database status

The output of the **rept-stat-db** command with the **display=except** parameter shows the coherency and the number of updates for all the cards whose database level does not match the active fixed disk current partition, reference database level, or is incoherent. All databases that are not accessible are also displayed. In addition, the time stamp for the last database update is displayed for every card.

The output of the **rept-stat-db** command with the **display=all** parameter shows the coherency and the number of updates for all of the distributed databases. In addition, the time stamp for the last database update is displayed for every card.

The output of the **rept-stat-db** command with the **display=version** parameter shows the coherency and the number of updates for the active and standby databases, along with the database version and

the operational status of each of these databases. If the LNP feature is turned on (see the **enable-ctrl-feat** command), the version of the LNP database is shown. No version is shown for EPAP or ELAP databases; use the **rept-stat-mps** command to display version information for these databases.

The output of the **rept-stat-db** command with the **loc** parameter specifying an equipped card shows the coherency and the number of updates to its database. In addition, the time stamp for the last database update is displayed for the specific card location.

The **db** parameter is used to limit the output of the **rept-stat-db** command to either just the EAGLE STP information or just the MPS information. The information is displayed as indicated by the **display** parameter value (**display=version** is not valid for **db=mps**; the command does not display the MPS database versions). The default **db** parameter value is **all**, which displays the information for the STP and MPS databases and cards as indicated by the **display** parameter value.

Output

NOTE: Credit card USB database information is shown only for the Active OAM slot, whether or not a credit card drive is inserted into the standby OAM.

The report for the specified card is displayed. The report shows that the disk is OFF-LINE indicating the disk has been dismounted. This is not necessarily a problem.

rept-stat-db:loc=1114

```
tekelecstp 08-08-29 08:38:25 NZST EAGLE 39.2.0
CARD/APPL LOC C T LEVEL TIME LAST UPDATE EXCEPTION
-----
TDM-CRNT 1114 - - - - - - - OFF-LINE
TDM-BKUP 1114 - - - - - - -
```

;

The report for the specified Service Module card used for EPAP or ELAP is displayed. The EIR, G-Flex, G-Port, INP, LNP ELAP Configuration, PPSMS, or V-Flex feature is turned on, or the ATINP feature is enabled.

rept-stat-db:loc=1201

```
tekelecstp 08-08-29 08:38:25 NZST EAGLE 39.2.0
CARD/APPL LOC C T LEVEL TIME LAST UPDATE EXCEPTION
-----
VSCCP 1201 Y N 12 08-05-29 08:53:48 -

EAGLE RTDB REPORT
CARD/APPL LOC C BIRTHDATE LEVEL EXCEPTION
-----
VSCCP 1201 Y 08-05-29 16:12:50 12345 -
```

;

The database in the following example has no errors, as indicated by the OK status. The EIR, G-Flex, G-Port, INP, LNP ELAP Configuration, PPSMS, and V-Flex features are not turned on, and the ATINP feature is not enabled.

rept-stat-db

```
tekelecstp 08-08-29 08:38:25 NZST EAGLE 39.2.0
DATABASE STATUS: >> OK <<
TDM 1114 ( ACTV ) TDM 1116 ( STDBY )
C LEVEL TIME LAST BACKUP C LEVEL TIME LAST BACKUP
-----
FD BKUP Y 11 08-05-29 08:20:13 NZST Y 11 08-05-29 08:20:13 NZST
FD CRNT Y 11 Y 11
MDAL 1117
-----
RD BKUP Y 1 08-05-29 15:44:20 NZST
```

;

The database in the following example has no errors, as indicated by the OK status. The EIR, G-Flex, G-Port, INP, LNP ELAP Configuration, PPSMS, and V-Flex features are not turned on, and the ATINP feature is not enabled.

rept-stat-db:display=all

```
tekelecstp 08-08-29 08:39:24 NZST EAGLE 39.2.0
DATABASE STATUS: >> OK <<
TDM 1114 ( ACTV ) TDM 1116 ( STDBY )
C LEVEL TIME LAST BACKUP C LEVEL TIME LAST BACKUP
-----
FD BKUP Y 11 08-05-29 08:20:13 NZST Y 11 08-05-29 08:20:13 NZST
FD CRNT Y 11 Y 11
MDAL 1117
```

```

RD BKUP Y          1 08-05-29 15:44:20 NZST
CARD/APPL LOC C T LEVEL TIME LAST UPDATE EXCEPTION
-----
SS7ANSI 1102 Y N 11 08-05-29 08:04:00 -
SS7ANSI 1103 Y N 11 08-05-29 08:04:00 -
VSCCP 1105 Y N 11 08-05-29 08:04:00 -
STPLAN 1107 Y N 11 08-05-29 08:04:00 -
TDM-CRNT 1114 Y N 11 08-05-29 08:04:00 -
TDM-BKUP 1114 Y - 11 08-05-29 08:04:00 -
TDM-CRNT 1116 Y N 11 08-05-29 08:04:00 -
TDM-BKUP 1116 Y - 11 08-05-29 08:04:00 -
MDAL 1117 Y - 1 08-05-29 15:06:29 DIFF LEVEL
VSCCP 1201 Y N 11 08-05-29 08:04:00 -
VSCCP 1203 Y N 11 08-05-29 08:04:00 -
;

```

The database in the following example has no errors, as indicated by the OK status. The EIR, G-Flex, G-Port, INP, LNP ELAP Configuration, PPSMS, and V-Flex features are not turned on, and the ATINP feature is not enabled.

NOTE: The rept-stat-db command does not display version information for MPS databases. Use the rept-stat-mps command to display the MPS database version information.

rept-stat-db:display=version

```

tekelecstp 08-08-29 08:51:21 NZST EAGLE 39.2.0
DATABASE STATUS: >> OK <<
      TDM 1114 ( ACTV )          TDM 1116 ( STDBY)
      C  LEVEL    TIME LAST BACKUP  C  LEVEL    TIME LAST BACKUP
      -----
FD BKUP Y          11 08-05-29 08:20:13 NZST Y          11 08-05-29 08:20:13 NZST
FD CRNT Y          11                                Y          11
      MDAL 1117
      -----
RD BKUP Y          1 08-05-24 15:44:20 NZST
;

```

The database in the following example has no errors, as indicated by the OK status. The LNP feature is turned on in the system (see the **enable-ctrl-feat** command).

rept-stat-db:display=version

```

tekelecstp 02-10-29 08:51:21 NZST EAGLE 30.0.0
DATABASE STATUS: >> OK <<
      TDM 1114 ( ACTV )          TDM 1116 ( STDBY)
      C  LEVEL    TIME LAST BACKUP  C  LEVEL    TIME LAST BACKUP
      -----
FD BKUP Y          11 02-10-29 08:20:13 NZST Y          11 02-10-29 08:20:13 NZST
FD CRNT Y          11                                Y          11
      MDAL 1117
      -----
RD BKUP Y          1 02-10-24 15:44:20 NZST
CARD/APPL LOC C T LEVEL TIME LAST UPDATE VERSION STATUS
-----
TDM-CRNT 1114 Y N 11 02-10-29 08:04:00 111-000-000 NORMAL
      LNP 000-014-000
TDM-BKUP 1114 Y - 11 02-10-29 08:04:00 111-000-000 NORMAL
      LNP 000-014-000
TDM-CRNT 1116 Y N 11 02-10-29 08:04:00 111-000-000 NORMAL
      LNP 000-014-000
TDM-BKUP 1116 Y - 11 02-10-29 08:04:00 111-000-000 NORMAL
      LNP 000-014-000
MDAL 1117 Y - 1 02-10-24 15:06:29 114-000-000 NORMAL
      LNP 000-014-000
;

```

The database in the following example has no errors, as indicated by the OK status. The G-Flex, G-Port, EIR, INP, LNP ELAP Configuration, PPSMS, and V-Flex features are not turned on, and the ATINP feature is not enabled.

rept-stat-db:display=except

```
tekelecstp 08-08-29 08:55:54 NZST EAGLE 39.2.0
DATABASE STATUS: >> OK <<
      TDM 1114 ( ACTV )
      C  LEVEL    TIME LAST BACKUP
      -  - - - -
FD BKUP Y        11 08-05-29 08:20:13 NZST
FD CRNT Y        12
      MDAL 1117
      -  - - - -
RD BKUP Y        1 07-10-24 15:44:20 NZST
CARD/APPL  LOC  C  T  LEVEL    TIME LAST UPDATE  EXCEPTION
-----
SS7ANSI    1103 Y  N  10        08-05-29 08:03:48  DIFF LEVEL
TDM-BKUP   1114 Y  -  11        08-05-29 08:04:00  DIFF LEVEL
TDM-BKUP   1116 Y  -  11        08-05-29 08:04:00  DIFF LEVEL
MDAL       1117 Y  -  1         08-05-24 15:06:29  DIFF LEVEL
;

```

The database in the following example has no errors, as indicated by the OK status. The LNP ELAP Configuration controlled feature is enabled and turned on (see the **enable-ctrl-feat** command) in the system, and ELAP is being used.

rept-stat-db

```
tekelecstp 02-10-29 08:39:24 NZST EAGLE 30.0.0
DATABASE STATUS: >> OK <<
      TDM 1114 ( ACTV )
      C  LEVEL    TIME LAST BACKUP
      -  - - - -
FD BKUP Y        11 02-10-29 08:20:13 NZST
FD CRNT Y        11
      MDAL 1117
      -  - - - -
RD BKUP Y        1 02-10-24 15:44:20 NZST
      ELAP A ( ACTV )
      C  BIRTHDATE    LEVEL    EXCEPTION
      -  - - - -
RTDB          Y  02-10-29 08:20:04    12345    -
RTDB-EAGLE    Y  02-10-29 08:20:04    12345    -
      ELAP B ( STDBY )
      C  BIRTHDATE    LEVEL    EXCEPTION
      -  - - - -
RTDB          Y  02-10-29 08:20:04    12345    -
RTDB-EAGLE    Y  02-10-29 08:20:04    12345    -
;

```

The database in the following example has no errors, as indicated by the OK status. The LNP ELAP Configuration controlled feature is enabled and turned on (see the **enable-ctrl-feat** command) in the system, and ELAP is being used.

rept-stat-db:display=all

```
tekelecstp 02-10-29 08:39:24 NZST EAGLE 30.0.0
DATABASE STATUS: >> OK <<
      TDM 1114 ( ACTV )
      C  LEVEL    TIME LAST BACKUP
      -  - - - -
FD BKUP Y        11 02-10-29 08:20:13 NZST
FD CRNT Y        11
      MDAL 1117
      -  - - - -
RD BKUP Y        1 02-10-24 15:44:20 NZST

```



```

CARD/APPL  LOC  C  T  LEVEL          TIME LAST UPDATE  EXCEPTION
-----
SS7ANSI    1102 Y  N  11          02-10-29 08:04:00      -
SS7ANSI    1103 Y  N  11          02-10-29 08:04:00      -
VSCCP      1105 Y  N  11          02-10-29 08:04:00      -
STPLAN     1107 Y  N  11          02-10-29 08:04:00      -
TDM-CRNT   1114 Y  N  11          02-10-29 08:04:00      -
TDM-BKUP   1114 Y  -  11          02-10-29 08:04:00      -
TDM-CRNT   1116 Y  N  11          02-10-29 08:04:00      -
TDM-BKUP   1116 Y  -  11          02-10-29 08:04:00      -
MDAL       1117 Y  -  1          02-10-24 15:06:29  DIFF LEVEL
VSCCP      1201 Y  N  11          02-10-29 08:04:00      -
VSCCP      1203 Y  N  11          02-10-29 08:04:00      -

          ELAP A ( ACTV )
          C  BIRTHDATE          LEVEL          EXCEPTION
          -
RTDB              Y  02-10-29 08:20:04          12345          -
RTDB-EAGLE              02-10-29 08:20:04          12345          -

          ELAP B ( STDBY )
          C  BIRTHDATE          LEVEL          EXCEPTION
          -
RTDB              Y  02-10-29 08:20:04          12345          -
RTDB-EAGLE              02-10-29 08:20:04          12345          -

          EAGLE RTDB REPORT
CARD/APPL  LOC  C  BIRTHDATE          LEVEL          EXCEPTION
-----
VSCCP      1201 Y  02-10-29 08:20:04          12345          -
VSCCP      1203 Y  02-10-29 08:20:04          12345          -
VSCCP      1105 Y  02-10-29 08:20:04          12345          -

```

;

The database in the following example has no errors, as indicated by the OK status. The LNP ELAP Configuration controlled feature is enabled and turned on (see the **enable-ctrl-feat** command) in the system, and ELAP is being used.

rept-stat-db:display=except

```

tekelecstp 02-10-29 08:55:54 NZST EAGLE 30.0.0
DATABASE STATUS: >> OK <<

          TDM 1114 ( ACTV )
          C  LEVEL          TIME LAST BACKUP
          -
FD BKUP Y          11 02-10-29 08:20:13 NZST
FD CRNT Y          12
          MDAL 1117
          -
RD BKUP Y          1 02-10-24 15:44:20 NZST
CARD/APPL  LOC  C  T  LEVEL          TIME LAST UPDATE  EXCEPTION
-----
SS7ANSI    1103 Y  N  10          02-10-29 08:03:48  DIFF LEVEL
TDM-BKUP   1114 Y  -  11          02-10-29 08:04:00  DIFF LEVEL
TDM-BKUP   1116 Y  -  11          02-10-29 08:04:00  DIFF LEVEL
MDAL       1117 Y  -  1          02-10-24 15:06:29  DIFF LEVEL

          ELAP A ( ACTV )
          C  BIRTHDATE          LEVEL          EXCEPTION
          -
RTDB              Y  02-10-29 08:20:04          12345          -
RTDB-EAGLE              Y  02-10-29 08:20:04          12345          -

          ELAP B ( STDBY )
          C  BIRTHDATE          LEVEL          EXCEPTION
          -
RTDB              Y  02-10-29 08:20:04          12345          -
RTDB-EAGLE              Y  02-10-29 08:20:04          12345          -

```

```

EAGLE RTDB REPORT
CARD/APPL LOC C BIRTHDATE LEVEL EXCEPTION
-----
VSCCP 1203 Y 02-10-29 08:20:04 12340 DIFF LEVEL
;

```

The database in the following example has no errors, as indicated by the OK status. The G-Flex, G-Port, EIR, INP, PPSMS, or V-Flex feature is turned on, or the ATINP feature is enabled, and EPAP is used.

rept-stat-db

```

tekelecstp 08-08-29 08:39:24 NZST EAGLE 39.2.0
DATABASE STATUS: >> OK <<
      TDM 1114 ( ACTV )
      C LEVEL TIME LAST BACKUP
      -----
FD BKUP Y 11 08-05-29 08:20:13 NZST Y 11 08-05-29 08:20:13 NZST
FD CRNT Y 11 Y 11
      MDAL 1117
      -----
RD BKUP Y 1 08-05-24 15:44:20 NZST
      EPAP A ( ACTV )
      C BIRTHDATE LEVEL EXCEPTION
      -----
PDB Y 08-05-29 08:20:04 12345 -
RTDB Y 08-05-29 08:20:04 12345 -
RTDB-EAGLE Y 08-05-29 08:20:04 12345 -
      EPAP B ( STDBY )
      C BIRTHDATE LEVEL EXCEPTION
      -----
PDB Y 08-05-29 08:20:04 12345 -
RTDB Y 08-05-29 08:20:04 12345 -
RTDB-EAGLE Y 08-05-29 08:20:04 12345 -
;

```

The database in the following example has no errors, as indicated by the OK status. The EIR, G-Flex, G-Port, INP, PPSMS, or V-Flex feature is turned on, or the ATINP feature is enabled, and EPAP is used.

rept-stat-db:display=all

```

tekelecstp 08-08-29 08:39:24 NZST EAGLE 39.2.0
DATABASE STATUS: >> OK <<
      TDM 1114 ( ACTV )
      C LEVEL TIME LAST BACKUP
      -----
FD BKUP Y 11 08-05-29 08:20:13 NZST Y 11 08-05-29 08:20:13 NZST
FD CRNT Y 11 Y 11
      MDAL 1117
      -----
RD BKUP Y 1 08-05-24 15:44:20 NZST
CARD/APPL LOC C T LEVEL TIME LAST UPDATE EXCEPTION
-----
SS7ANSI 1102 Y N 11 08-05-29 08:04:00 -
SS7ANSI 1103 Y N 11 08-05-29 08:04:00 -
STPLAN 1107 Y N 11 08-05-29 08:04:00 -
TDM-CRNT 1114 Y N 11 08-05-29 08:04:00 -
TDM-BKUP 1114 Y - 11 08-05-29 08:04:00 -
TDM-CRNT 1116 Y N 11 08-05-29 08:04:00 -
TDM-BKUP 1116 Y - 11 08-05-29 08:04:00 -
MDAL 1117 Y - 1 08-05-29 15:06:29 DIFF LEVEL
VSCCP 1201 Y N 11 08-05-29 08:04:00 -
VSCCP 1203 Y N 11 08-05-29 08:04:00 -
      EPAP A ( ACTV )
      C BIRTHDATE LEVEL EXCEPTION

```

```

- -----
PDB          Y 08-05-29 08:20:04      12345      -
RTDB         Y 08-05-29 08:20:04      12345      -
RTDB-EAGLE   Y 08-05-29 08:20:04      12345      -
EPAP B ( STDBY )
C BIRTHDATE      LEVEL      EXCEPTION
- -----
PDB          Y 08-05-29 08:20:04      12345      -
RTDB         Y 08-05-29 08:20:04      12345      -
RTDB-EAGLE   Y 08-05-29 08:20:04      12345      -
EAGLE RTDB REPORT
CARD/APPL LOC C BIRTHDATE      LEVEL      EXCEPTION
-----
VSCCP      1201 Y 08-05-29 08:20:04      12345      -
VSCCP      1203 Y 08-05-29 08:20:04      12345      -
VSCCP      1105 Y 08-05-29 08:20:04      12345      -
;

```

The database in the following example has no errors, as indicated by the OK status. The EIR, G-Flex, G-Port, INP, PPSMS, or V-Flex feature is turned on, or the ATINP feature is enabled, and EPAP is used.

rept-stat-db:display=except

```

tekelecstp 08-08-29 08:55:54 NZST  EAGLE 39.2.0
DATABASE STATUS: >> OK <<
      TDM 1114 ( ACTV )      TDM 1116 ( STDBY )
      C  LEVEL      TIME LAST BACKUP      C  LEVEL      TIME LAST BACKUP
- -----
FD BKUP Y      11 08-05-29 08:20:13 NZST Y      11 08-05-29 08:20:13 NZST
FD CRNT Y      12      Y      12
MDAL 1117
- -----
RD BKUP Y      1 02-10-24 15:44:20 NZST
CARD/APPL LOC C T LEVEL      TIME LAST UPDATE      EXCEPTION
-----
SS7ANSI 1103 Y N 10      08-05-29 08:03:48      DIFF LEVEL
TDM-BKUP 1114 Y - 11      08-05-29 08:04:00      DIFF LEVEL
TDM-BKUP 1116 Y - 11      08-05-29 08:04:00      DIFF LEVEL
MDAL 1117 Y - 1      08-05-29 15:06:29      DIFF LEVEL
EPAP A ( ACTV )
C BIRTHDATE      LEVEL      EXCEPTION
- -----
PDB          Y 08-05-29 08:20:04      12345      -
RTDB         Y 08-05-29 08:20:04      12345      -
RTDB-EAGLE   Y 08-05-29 08:20:04      12345      -
EPAP B ( STDBY )
C BIRTHDATE      LEVEL      EXCEPTION
- -----
PDB          Y 08-05-29 08:20:04      12345      -
RTDB         Y 08-05-29 08:20:04      12345      -
RTDB-EAGLE   Y 08-05-29 08:20:04      12345      -
EAGLE RTDB REPORT
CARD/APPL LOC C BIRTHDATE      LEVEL      EXCEPTION
-----
VSCCP      1203 Y 08-05-29 08:20:04      12340      DIFF LEVEL
;

```

The database in the following example has no errors, as indicated by the OK status. The G-Flex, G-Port, EIR, INP, LNP ELAP Configuration, PPSMS, and V-Flex features are not turned on, and the ATINP feature is not enabled.

rept-stat-db:db=stp

```

tekelecstp 08-08-29 08:39:24 NZST  EAGLE 39.2.0
DATABASE STATUS: >> OK <<
      TDM 1114 ( ACTV )      TDM 1116 ( STDBY )
      C  LEVEL      TIME LAST BACKUP      C  LEVEL      TIME LAST BACKUP

```

```

-----
FD BKUP Y      11 08-05-29 08:20:13 NZST Y      11 08-05-29 08:20:13 NZST
FD CRNT Y      11                                     Y      11
MDAL 1117
-----
RD BKUP Y      1 08-05-29 15:44:20 NZST
;

```

The database in the following example has no errors, as indicated by the OK status. The EIR, G-Flex, G-Port, INP, LNP ELAP Configuration, PPSMS, and V-Flex features are not turned on, and the ATINP feature is not enabled.

rept-stat-db:display=all:db=stp

```

tekelecstp 08-08-29 08:39:24 NZST EAGLE 39.2.0
DATABASE STATUS: >> OK <<
      TDM 1114 ( ACTV )
      C  LEVEL    TIME LAST BACKUP
      -----
FD BKUP Y      11 07-08-29 08:20:13 NZST Y      11 07-08-29 08:20:13 NZST
FD CRNT Y      11                                     Y      11
MDAL 1117
-----
RD BKUP Y      1 02-10-24 15:44:20 NZST
CARD/APPL  LOC  C  T  LEVEL    TIME LAST UPDATE  EXCEPTION
-----
SS7ANSI    1102 Y  N  11        07-08-29 08:04:00      -
SS7ANSI    1103 Y  N  11        07-08-29 08:04:00      -
VSCCP      1105 Y  N  11        07-08-29 08:04:00      -
STPLAN     1107 Y  N  11        07-08-29 08:04:00      -
TDM-CRNT   1114 Y  N  11        07-08-29 08:04:00      -
TDM-BKUP   1114 Y  -  11        07-08-29 08:04:00      -
TDM-CRNT   1116 Y  N  11        07-08-29 08:04:00      -
TDM-BKUP   1116 Y  -  11        07-08-29 08:04:00      -
MDAL       1117 Y  -  1         07-08-24 15:06:29  DIFF LEVEL
VSCCP      1201 Y  N  11        07-08-29 08:04:00      -
VSCCP      1203 Y  N  11        07-08-29 08:04:00      -
;

```

The database in the following example has no errors, as indicated by the OK status. The G-Flex, G-Port, EIR, INP, LNP ELAP Configuration, PPSMS, and V-Flex features are not turned on and the ATINP feature is not enabled.

rept-stat-db:display=except:db=stp

```

tekelecstp 08-08-29 08:55:54 NZST EAGLE 39.2.0
DATABASE STATUS: >> OK <<
      TDM 1114 ( ACTV )
      C  LEVEL    TIME LAST BACKUP
      -----
FD BKUP Y      11 08-05-29 08:20:13 NZST Y      11 08-05-29 08:20:13 NZST
FD CRNT Y      12                                     Y      12
MDAL 1117
-----
RD BKUP Y      1 08-05-24 15:44:20 NZST
CARD/APPL  LOC  C  T  LEVEL    TIME LAST UPDATE  EXCEPTION
-----
SS7ANSI    1103 Y  N  10        08-05-29 08:03:48  DIFF LEVEL
TDM-BKUP   1114 Y  -  11        08-05-29 08:04:00  DIFF LEVEL
TDM-BKUP   1116 Y  -  11        08-05-29 08:04:00  DIFF LEVEL
MDAL       1117 Y  -  1         08-05-29 15:06:29  DIFF LEVEL
;

```

The LNP ELAP Configuration controlled feature is enabled and turned on (see the **enable-ctrl-feat** command) in the system, and ELAP is being used.

rept-stat-db:db=mps

```

tekelecstp 02-10-29 08:55:54 NZST EAGLE 30.0.0
      ELAP A  ( ACTV )

```

```

      C  BIRTHDATE          LEVEL          EXCEPTION
      -  - - - - - - - - - - - - - - - - - - - -
RTDB      Y  02-10-29 08:20:04          12345          -
RTDB-EAGLE      02-10-29 08:20:04          12345          -
      ELAP B ( STDBY )
      C  BIRTHDATE          LEVEL          EXCEPTION
      -  - - - - - - - - - - - - - - - - - - - -
RTDB      Y  02-10-29 08:20:04          12345          -
RTDB-EAGLE      02-10-29 08:20:04          12345          -
;

```

The LNP ELAP Configuration controlled feature is enabled and turned on (see the **enable-ctrl-feat** command) in the system, and ELAP is being used. Card 1203 indicates a value 12 in the exception column. The value indicates the number of times that the Corruption Cross Correction function has corrected the card during the time that the card has been in service. More specifically, the card has encountered 12 corrupted records and has subsequently repaired them. This value persists until the card is reset.

rept-stat-db:display=all:db=mps

```

tekelecstp 02-10-29 08:55:54 NZST EAGLE 31.6.0
      ELAP A ( ACTV )
      C  BIRTHDATE          LEVEL          EXCEPTION
      -  - - - - - - - - - - - - - - - - - - - -
RTDB      Y  02-10-29 08:20:04          12345          -
RTDB-EAGLE      02-10-29 08:20:04          12345          -
      ELAP B ( STDBY )
      C  BIRTHDATE          LEVEL          EXCEPTION
      -  - - - - - - - - - - - - - - - - - - - -
RTDB      Y  02-10-29 08:20:04          12345          -
RTDB-EAGLE      02-10-29 08:20:04          12345          -
      EAGLE RTDB REPORT
CARD/APPL  LOC  C  BIRTHDATE          LEVEL          EXCEPTION          IN-SRVC
-----
VSCCP      1201 Y  02-10-29 08:20:04          12345          -          10d 23h 21m
VSCCP      1203 Y  02-10-29 08:20:04          12345          12          10d 23h 21m
VSCCP      1105 Y  02-10-29 08:20:04          12345          -           5d  3h  1m

VSCCP      1201 Y  02-10-29 08:20:04          12345          -
VSCCP      1203 Y  02-10-29 08:20:04          12345          -
VSCCP      1105 Y  02-10-29 08:20:04          12345          -
;
;

```

The LNP ELAP Configuration controlled feature is enabled and turned on (see the **enable-ctrl-feat** command) in the system, and ELAP is being used.

rept-stat-db:display=except:db=mps

```

tekelecstp 02-10-29 08:55:54 NZST EAGLE 31.6.0
      ELAP A ( ACTV )
      C  BIRTHDATE          LEVEL          EXCEPTION
      -  - - - - - - - - - - - - - - - - - - - -
RTDB      Y  02-10-29 08:20:04          12345          -
RTDB-EAGLE      Y  02-10-29 08:20:04          12345          -
      ELAP B ( STDBY )
      C  BIRTHDATE          LEVEL          EXCEPTION
      -  - - - - - - - - - - - - - - - - - - - -
RTDB      Y  02-10-29 08:20:04          12345          -
RTDB-EAGLE      Y  02-10-29 08:20:04          12345          -
      EAGLE RTDB REPORT
CARD/APPL  LOC  C  BIRTHDATE          LEVEL          EXCEPTION          IN-SRVC
-----

```

```

-----
VSCCP      1203  Y  02-10-29 08:20:04      12340  DIFF LEVEL  10d 23h 21m
;

```

The G-Flex, G-Port, EIR, INP, PPSMS, or V-Flex feature is turned on, or the ATINP feature is enabled, and EPAP is used.

rept-stat-db:db=mps

```
tekelecstp 08-08-29 08:55:54 NZST  EAGLE 39.2.0
```

```

      EPAP A ( ACTV )
      C  BIRTHDATE      LEVEL      EXCEPTION
      -  -----
PDB      Y  08-05-29 08:20:04      12345      -
RTDB      Y  08-05-29 08:20:04      12345      -
RTDB-EAGLE Y  08-05-29 08:20:04      12345      -
      EPAP B ( STDBY )
      C  BIRTHDATE      LEVEL      EXCEPTION
      -  -----
PDB      Y  08-05-29 08:20:04      12345      -
RTDB      Y  08-05-29 08:20:04      12345      -
RTDB-EAGLE Y  08-05-29 08:20:04      12345      -
;

```

The EIR, G-Flex, G-Port, EIR, INP, PPSMS, or V-Flex feature is turned on, or the ATINP feature is enabled, and EPAP is used.

rept-stat-db:display=all:db=mps

```
tekelecstp 08-05-29 08:55:54 NZST  EAGLE 39.2.0
```

```

      EPAP A ( ACTV )
      C  BIRTHDATE      LEVEL      EXCEPTION
      -  -----
PDB      Y  07-08-29 08:20:04      12345      -
RTDB      Y  07-08-29 08:20:04      12345      -
RTDB-EAGLE Y  07-08-29 08:20:04      12345      -
      EPAP B ( STDBY )
      C  BIRTHDATE      LEVEL      EXCEPTION
      -  -----
PDB      Y  07-08-29 08:20:04      12345      -
RTDB      Y  07-08-29 08:20:04      12345      -
RTDB-EAGLE Y  07-08-29 08:20:04      12345      -
      EAGLE RTDB REPORT
      CARD/APPL  LOC  C  BIRTHDATE      LEVEL      EXCEPTION      IN-SRVC
      -----
VSCCP      1201  Y  07-08-29 08:20:04      12345      -      10d 23h 21m
VSCCP      1203  Y  07-08-29 08:20:04      12345      -      10d 23h 21m
VSCCP      1105  Y  07-08-29 08:20:04      12345      -      5d 3h 1m
;

```

The EIR, G-Flex, G-Port, INP, PPSMS, or V-Flex feature is turned on, or the ATINP feature is enabled, and EPAP is used.

rept-stat-db:display=except:db=mps

```
tekelecstp 08-08-29 08:55:54 NZST  EAGLE 39.2.0
```

```

      EPAP A ( ACTV )
      C  BIRTHDATE      LEVEL      EXCEPTION
      -  -----
PDB      Y  07-08-29 08:20:04      12345      -
RTDB      Y  07-08-29 08:20:04      12345      -
RTDB-EAGLE Y  07-08-29 08:20:04      12345      -
      EPAP B ( STDBY )
      C  BIRTHDATE      LEVEL      EXCEPTION
      -  -----
PDB      Y  07-08-29 08:20:04      12345      -
RTDB      Y  07-08-29 08:20:04      12345      -

```

```

RTDB-EAGLE      Y  07-08-29 08:20:04      12345      -

                                EAGLE RTDB REPORT
CARD/APPL  LOC  C  BIRTHDATE      LEVEL      EXCEPTION      IN-SRVC
-----
VSCCP      1203 Y  07-08-29 08:20:04      12340      DIFF LEVEL      10d 23h 21m

```

;

The following example displays output when E5-MCAP and E5-TDM cards are used.

rept-stat-db

```

e5oam 08-12-01 15:25:40 EST  EAGLE 40.1.0
DATABASE STATUS: >> OK <<
                                TDM 1114 ( STDBY)
                                C  LEVEL      TIME LAST BACKUP
                                - - - - -
FD BKUP Y      36 08-11-19 09:38:25 EST
FD CRNT Y      39
                                MCAP 1113
                                - - - - -
RD BKUP Y      36 08-11-19 09:27:17 EST
USB BKP -      -      -      -
                                TDM 1116 ( ACTV )
                                C  LEVEL      TIME LAST BACKUP
                                - - - - -
Y      36 08-11-19 09:38:25 EST
Y      39
                                MCAP 1115
                                - - - - -
Y      36 08-11-19 09:27:17 EST
Y      3 08-11-07 01:11:22 EST

```

;

rept-stat-db:display=all

```

e5oam 08-12-01 15:26:27 EST  EAGLE 40.1.0
DATABASE STATUS: >> OK <<
                                TDM 1114 ( STDBY)
                                C  LEVEL      TIME LAST BACKUP
                                - - - - -
FD BKUP Y      36 08-11-19 09:38:25 EST
FD CRNT Y      39
                                MCAP 1113
                                - - - - -
RD BKUP Y      36 08-11-19 09:27:17 EST
USB BKP -      -      -      -
                                TDM 1116 ( ACTV )
                                C  LEVEL      TIME LAST BACKUP
                                - - - - -
Y      36 08-11-19 09:38:25 EST
Y      39
                                MCAP 1115
                                - - - - -
Y      36 08-11-19 09:27:17 EST
-      -      -      -

CARD/APPL  LOC  C  T  LEVEL      TIME LAST UPDATE      EXCEPTION
-----
MCP        1108 -  -      -      -      -
IPS        1111 Y  N  39      08-11-22 10:21:54      -
OAM-RMV    1113 Y  -  36      08-11-18 23:36:19      DIFF LEVEL
TDM-CRNT   1114 Y  N  39      08-11-22 10:21:54      -
TDM-BKUP   1114 Y  -  36      08-11-18 23:36:38      DIFF LEVEL
OAM-RMV    1115 Y  -  36      08-11-18 23:36:19      DIFF LEVEL
OAM-USB    1115 Y  -  3        08-11-07 01:11:22      DIFF LEVEL
TDM-CRNT   1116 Y  N  39      08-11-22 10:21:54      -
TDM-BKUP   1116 Y  -  36      08-11-18 23:36:38      DIFF LEVEL

```

Legend

DATABASE STATUS—An indication of any database alarms on the MASP. This indicator is not used with the **loc** parameter output.

>> **OK**<<—There are no database alarms

>>**NOT OK**<<—Database alarms are present

(ACTV MASP)—The specified MASP is the active processor. This is not used with the **loc** parameter output.

(STDBY MASP)—The specified MASP is the standby processor. This is not used with the **loc** parameter output.

(NOACCS)—The specified processor is not accessible. This is not used with the **loc** parameter output.

C—An indicator of whether the database is coherent.

Y—the database is coherent

N—the database is not coherent

Dash (-)—the database is not accessible.

LEVEL—The number of updates made to the database partitions.

TIME LAST BACKUP—The date and time the last change was performed on the removable cartridges or drives (if inserted) and the backup partition of the fixed disk. This field is not used with the **loc** parameter output.

RD BKUP—Removable cartridge or drive backup partition.

FD BKUP—Fixed disk backup partition.

FD CRNT—Fixed disk current partition. This field is not used with the **loc** parameter output.

DIFF CONTENTS—The specified database's contents are different when compared to the other database in that partition.

DIFF LEVEL—The specified database's level does not match the level of the current partition of the active fixed disk (**FD CRNT**).

DIFF TIME—The specified database's level matches the level of the current partition of the active fixed disk (**FD CRNT**), but the time that the database was updated, when compared to the current partition of the active fixed disk (**FD CRNT**), is different. This exception indicator appears only if the time and date stamp in an update packet or in memory becomes corrupted.

CORRUPTED—The specified database is corrupted.

INCOHERENT—The specified database is incoherent.

EXCEPTION—The following values can appear:

- The condition of the specified database with which the system has detected a problem. These conditions are: **DIFF CONTENTS**, **DIFF LEVEL**, **DIFF TIME**, **CORRUPTED**, and **INCOHERENT**. A “-” indicates that the database was not accessible. A blank entry indicates that the database has no problems. This field is used with the **display=except**, **display=all**, and **loc** parameter outputs.
- A value that indicates the number of times that the Corruption Cross Correction function has corrected the card during the time that the card has been in service. This value persists until the card is reset.

IN-SRVC—The length of time that the card has been in service.

CARD/APPL—The card type or the application assigned to the card specified in the **LOC** field. This field is not used with the **display=brief** (default) parameter output.

TDM-BKUP—Backup partition on the fixed disk on the TDM.

TDM-CRNT—Current partition on the fixed disk on the TDM.

LOC—The card location of the database. This field is not used with the **display=brief** (default) parameter output.

T—An indicator of whether the specified database is in transition. A database is in transition when the database for the link interface module (LIM), TSM, or E5-TSM is in the process of being loaded with the new screen set information after an update to the database, and the database has not reached

the current reported database level. This field is not used with the **display=brief** (default) parameter output.

Y—the database is in transition

N—the database is not in transition.

TIME LAST BACKUP—The date and time the last change was performed on the specified card and its associated database. A dash (–) in this field for the fixed drive (FD) or removable cartridge or drive (RD) indicates that no backup has been created on that drive. This field is not used with the **display=brief** (default) parameter output.

VERSION—The version number of each database (including the LNP database if the LNP feature is on).

xxx-xxx-xxx—The version number of the database.

UNKNOWN—The **rept-stat-db** command can show the version number only for a database that is version 20.0.0 or later. Any database version that is earlier than version 20.0.0 cannot be determined and UNKNOWN is displayed for the database version number.

A dash “-” —The database is not available. This field is used only with the **display=version** parameter output.

STATUS—The operational status of the database version. This field is used only with the **display=version** parameter output.

NORMAL—The database version is fully operational.

Blank entry—A blank entry indicates that the database is not available or is unknown. A numeric value indicates that the database is invalid. The value displayed is the status value found in the field and is for diagnostic purposes.

BIRTHDATE—The date and time of creation for the database.

EPAP A (ACTV)—The active EAGLE Provisioning Application Processor. This section of the report appears only if the G-Port, G-Flex, EIR, INP, PPSMS, or V-Flex features are turned on or the ATINP feature is enabled.

PDB—The provisioning database status information.

RTDB—The provisioning database status information that was used to create the resident Realtime Database. The RTDB information may be different than the PDB information if the PDB has been reloaded, or if the RTDB has not been loaded from the PDB. If the RTDB birthdate is different than the PDB or if the level is too old to be able to resynchronize the databases, then a "Reload Required" alarm is generated.

RTDB-EAGLE—The EPAP resident Realtime Database status information. This database is downloaded to Service Module cards. If the birthdate or level do not match the Service Module card, then the Service Module card generates an alarm. The RTDB is reloaded from the PDB, and the birthdate and level are reset and do not match the database status information. This database status mismatch condition indicates an abnormal condition that requires Service Module cards to be reloaded.

EPAP B (STDBY)—The standby EAGLE Provisioning Application Processor. This section of the report appears only if the G-Port, G-Flex, EIR, INP, PPSMS, or V-Flex features are turned on, or the ATINP feature is enabled.

PDB—The provisioning database status information.

RTDB—The provisioning database status information that was used to create the resident Realtime Database. The RTDB information may be different than the PDB information if the PDB has been reloaded, or if the RTDB has not been loaded from the PDB. If the RTDB birthdate is different than the PDB or if the level is too old to be able to resynchronize the databases, then a "Reload Required" alarm is generated.

RTDB-EAGLE—The EPAP resident Realtime Database status information. This database is downloaded to Service Module cards. If the birthdate or level do not match the Service Module card, then the Service Module card generates an alarm. The RTDB is reloaded from the PDB, and the birthdate and level are reset and do not match the database status information. This database status mismatch condition indicates an abnormal condition that requires Service Module cards to be reloaded.

ELAP A (ACTV)—The active EAGLE LNP Application Processor. This section of the report appears only if the LNP ELAP Configuration controlled feature (see the **enable-ctrl-feat** command) is turned on.

RTDB-EAGLE—The ELAP resident Database status information. This database is downloaded to Service Module cards. If the birthdate or level do not match the Service Module card, then the Service Module card generates an alarm.

TIME LAST UPDATE—The date and time of the last update of the RTDB from the LSMS.

ELAP B (STDBY)—The standby EAGLE LNP Application Processor. This section of the report appears only if the LNP ELAP Configuration controlled feature (see the **enable-ctrl-feat** command) is turned on.

RTDB-EAGLE—The ELAP resident Realtime Database status information. This database is downloaded to Service Module cards. If the birthdate or level do not match the Service Module card, then the Service Module card generates an alarm.

TIME LAST UPDATE—The date and time of the last update of the RTDB from the LSMS.

rept-stat-dlk

Report Status Data Link

Use this command to show the status of the TCP/IP data links. The secondary state (SST) of the TCP/IP data links shows whether the link is available, unavailable, or manually removed from service.

Keyword: **rept-stat-dlk**

Related Commands: **act-dlk, canc-dlk, dlt-dlk, ent-dlk, rtrv-dlk, tst-dlk**

Command Class: System Maintenance

Parameters

:loc= (optional)

The card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Default: All data links are shown.

Example

```
rept-stat-dlk
```

```
rept-stat-dlk:loc=1104
```

Dependencies

- No other **rept-stat-xxx** command can be in progress when this command is entered.
- The ACM is the only valid card type for this command.
- The shelf and card must be equipped.
- The specified card must have a TCP/IP data link assigned to it.
- Only one data link port on the ACM is supported. Reports are generated only on port A of the card.
- The card location, frame, shelf, or slot must be within the allowed range.
- The data link must be equipped in the database.
- A card location that is valid and defined in the database must be specified.

Notes

None

Output

rept-stat-dlk

```
rlghncxa03w 04-02-27 17:00:36 EST EAGLE 31.3.0
DLK          PST          SST          AST
1104         IS-NR        Avail        ----
1206         IS-NR        Avail        ALMINH
Command Completed.
```

;

rept-stat-dlk:loc=1104

```
rlghncxa03w 04-02-27 17:00:36 EST EAGLE 31.3.0
DLK          PST          SST          AST
1104         IS-NR        Avail        ----
ALARM STATUS = No Alarms.
Command Completed.
```

;

Legend

DLK—The card location of the TCP/IP data link

PST—The primary state of the TCP/IP data link. The possible values are described in "Possible Values for PST/SST/AST".

SST—The secondary state of the TCP/IP data link. The possible values are described in "Possible Values for PST/SST/AST".

AST—The associated state of the TCP/IP data link. The possible values are described in .

rept-stat-dstn

Report Status Destination

Use this command to generate a report of the MTP point code status for provisioned point codes. Any provisioned destination can be specified, including a cluster destination (*ni-nc-**) or a network destination (*ni-*-**).

Keyword: **rept-stat-dstn**

Related Commands: **chg-dstn, chg-rte, dlt-dstn, dlt-rte, ent-dstn, ent-rte, rept-stat-rte, rtrv-dstn, rtrv-rte**

Command Class: System Maintenance

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:dpc= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: **dpca**

Range: **p-, 000-255, *, **, *****

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

The asterisk values *****, ******, and ******* are not valid for the *ni* subfield.

If ****** or ******* is specified for the *nc* subfield, either *****, ******, or ******* must be specified for the *ncm* subfield.

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

When **chg-sid:pctype=ansi** is specified, *ni*-*-***** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:dpc/dpca/dpci/dpcn/dpcn24= (optional)

Destination point code.

:dpci= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:dpcn= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:dpcn24= (optional)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*. The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range: **p-**, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—000-255

ssa—000-255

sp—000-255

:mode= (optional)

The type of display to produce. This parameter displays the point code's subsystem status along with the normal output.

Range: **full, rtx**

full— Comprehensive display of point code status, including rtx. If entered with a point code, status for that point code is displayed, including each route in the associated routeset. If specified without a point code, the status of all routesets is displayed.

rtx— Displays exception route status, other than circular routing, if the Origin-based MTP Routing feature is on.

Default: A summary report is displayed.

:stat= (optional)

The primary state filter. This parameter lets you choose the state of the destination for which you want a report. In other words, if you want a report for all destinations whose state is DSBLD, specify **:stat=dsbld**.

Range: **all, alminh, anr, dsbld, mt, nr**

all— All of the primary states

alminh— Alarms inhibited

anr— In service abnormal (IS-ANR)

dsbld— Out of service maintenance disabled (OOS-MT-DSBLD)

mt— Out of service maintenance (OOS-MT)

nr— In service normal (IS-NR)

Default: **all**

Example

```
rept-stat-dstn
```

```
rept-stat-dstn:dpci=2-004-1:mode=full
```

```
rept-stat-dstn:dpc=9-3-6:mode=full
```

```
rept-stat-dstn:dpc=9-3-*:mode=full
```

```
rept-stat-dstn:dpc=9-3-*
```

```
rept-stat-dstn:dpc=9-3-**
```

```
rept-stat-dstn:dpc=9-3-***
```

```
rept-stat-dstn:dpc=9-3-***:stat=mt
```

```
rept-stat-dstn:dpc:9-4-***:stat=alminh
```

```
rept-stat-dstn:dpc=9-3-*:mode=rtx
```

```
rept-stat-dstn:mode=full
```

```
rept-stat-dstn:mode=rtx
```

rept-stat-dstn:dpc=1-1-1**Dependencies**

No other **rept-stat-xxx** command can be in progress when this command is entered.

If a **dpc** parameter is specified, it must be the true destination point code (not an alias) and it must be defined in the database.

A summary report is displayed if the **stat** parameter is specified.

The **stat** parameter can be specified with the **dpc** parameter only if the **dpc** parameter specifies one of the *ni-nc-** formats.

An x-list DPC cannot be specified in the **dpc** parameter.

If the **dpcn** parameter is specified, its format must match the format that was assigned with the **chg-stpopts:npcfmti** parameter.

The **mode=rtx** parameter cannot be specified unless the Origin-Based MTP Routing feature is enabled and on.

The **mode** parameter cannot be specified with the **dpc** parameter if the **dpc** parameter specifies one of the *ni-nc-** formats.

When the **mode=full** parameter is specified then the **dpc/dpca/dpcn/dpci/dpcn24** parameter must be specified.

Notes

This command can be canceled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

This command does not report the x-list point codes. Use the **rept-stat-cluster** command for a report of x-list point codes.

If the **mode=rtx** parameter is specified with a specific DPC, additional linkset, route and exception route information associated with the specified DPC is displayed.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (**s-**) and the private and spare point code subtype prefix (**ps-**). All of the point code types support the private (internal) point code subtype prefix (**p-**).

Table 5-68 provides a summary description of the reports that are produced by the various DPC parameter syntaxes.

Table 5-65. Summary of DPC Parameter Syntaxes

DPC format	Meaning
rept-stat-dstn:dpc=ni-nc-ncm	Requests a report for fully provisioned destination <i>ni-nc-ncm</i> .
rept-stat-dstn:dpc= ni-*-*	Requests a report for provisioned network destination with the specified network indicator. Note that if * is specified in the <i>nc</i> field, * must be specified in the <i>ncm</i> field.
rept-stat-dstn:dpc= ni-**-*	Requests a report for the full network cluster for the specified <i>ni</i> .

Table 5-65. Summary of DPC Parameter Syntaxes

DPC format	Meaning
rept-stat-dstn:dpc= <i>ni-***-*</i>	Requests a report for the full network cluster and the network cluster address (if any) for the specified <i>ni</i> .
rept-stat-dstn:dpc= <i>ni-nc-*</i>	Requests a report for provisioned cluster destination <i>ni-nc-*</i> .
rept-stat-dstn:dpc= <i>ni-nc-**</i>	Requests a report showing all destinations whose network (<i>ni</i>) and cluster (<i>nc</i>) components match those specified. Note, however, that the network cluster address on <i>ni-nc-*</i> (if it exists) is not reported.
rept-stat-dstn:dpc= <i>ni-nc-***</i>	Requests a report showing all destinations whose network (<i>ni</i>) and cluster (<i>nc</i>) components match those specified. The network cluster address <i>ni-nc-*</i> (if it exists) is also reported.
rept-stat-dstn:dpcn24= <i>msa-ssa-sp</i>	Requests a report for fully provisioned 24-bit destination <i>main signaling area-sub signaling area-signaling point</i> .

If the **mode=rtx** parameter is specified without a specific DPC, then status is provided for all exception route sets.

If the **mode=full** parameter is specified with a specific DPC, additional linkset, route and exception route information associated with the specified destination is displayed, along with information that can be used to correct circular routing. If the **mode=full** parameter is specified without a specific DPC, then status provided for all regular and exception route sets.

Output

If the **dpc** parameter is not specified:

- If the **mode** parameter is not specified, the command output lists the status of all provisioned DPCs (route sets) in the system,
- If the **mode=rtx** parameter is specified, the command output lists the status of only those DPCs against which exception routes have been provisioned, and the status of the provisioned exception route sets associated with each DPCs.
- If the **mode=full** parameter is specified, the command output lists the status of all provisioned DPCs in the system, and the status of the provisioned exception route sets, if any, associated with each DPC.

If the **dpc** parameter is specified:

- If the **mode** parameter is not specified, the command output lists the status of all provisioned routes in the route set specified by that DPC.
- If the **mode=rtx** parameter is specified, the command output lists the status of all provisioned routes in the route set specified by that DPC, and the status of all provisioned exception route sets associated with that DPC.
- If the **mode=full** parameter is specified, the command output lists the status of all provisioned routes in the route set specified by that DPC, the status of all provisioned exception route sets associated with that DPC, any aliases associated with that DPC, and circular routing alarm information if any for that DPC.

The following example shows a private adjacent point code:

rept-stat-dstn:mode=full:dpc=1-1-2

```
rlghncxa03w 05-01-07 13:30:00 EST EAGLE 31.12.0
DPCA          PST          SST          AST
001-001-002    00S-MT      Idle        INACCESS
ALARM STATUS    = No Alarms.
RTE  COST  LSN          APCA          LS STAT  NON-ADJ  ROUTE STAT
1   01    ls11234567    001-001-002  Prohibit  Allowed  Prohibit
2   02    ls12345678    p-001-001-002  Prohibit  Allowed  Prohibit
3   --    -----    -***_***_***  -----  -----  -----
4   --    -----    -***_***_***  -----  -----  -----
5   --    -----    -***_***_***  -----  -----  -----
6   --    -----    -***_***_***  -----  -----  -----
SSN  SUBSYSTEM STATUS
ALIASA  ALIASN  ALIASI
000-000-001 -----
CIRCULAR ROUTING INFO:
  XMIT LSN=----- RC=--
  RCV  LSN=-----
  MEMBER =-----
Command Completed.
```

;

The following example shows how, when no parameters are specified, summary information for all provisioned cluster and noncluster DPCs is reported.

rept-stat-dstn

```
rlghncxa03w 04-07-07 14:59:11 EST EAGLE 31.9.0
DPCA          PST          SST          AST
```



```

009-000-000      IS-ANR      Allowed  ACCESS
009-003- *      IS-ANR      Allowed  ACCESS
009-003-006      OOS-MT      Prohibit  INACCESS
009-003-001      IS-NR      Allowed  ACCESS
009-003-002      IS-NR      Allowed  ACCESS
009-003-003      OOS-MT      Prohibit  INACCESS
009-004-006      IS-NR      Allowed  ALMINH
004-002-002      IS-NR      Allowed  ACCESS
006-000-000      IS-ANR      Allowed  ACCESS
007-001-001      IS-NR      Allowed  ACCESS
101-033- *      IS-NR      Allowed  ACCESS

DPCI             PST         SST         AST
2-004-1          IS-NR      Allowed  ACCESS
2-004-3          IS-ANR      Allowed  ACCESS
2-004-2          IS-ANR      Allowed  ACCESS
2-004-4          IS-NR      Allowed  ACCESS

DPCN             PST         SST         AST
02096            IS-NR      Allowed  ACCESS
02097            IS-ANR      Allowed  ACCESS
02098            OOS-MT      Prohibit  INACCESS
02099            OOS-MT      Prohibit  INACCESS
Command Completed.
;

```

The following example shows that specifying a cluster destination on the **dpc** parameter shows the cluster status and routeset information. Note that information on cluster members (both provisioned and x-list) is not shown. Use **rept-stat-cluster** to obtain this information.

rept-stat-dstn:dpc=9-3-*

```

rlghncxa03w 04-07-07 14:59:11 EST EAGLE 31.
DPCA             PST         SST         AST
009-003- *      IS-NR      Allowed  ACCESS
ALARM STATUS    = No Alarms.
RTE COST  LSN   APCA         LS STAT  NON-ADJ  ROUTE STAT
1   10  lsnstpa  042-036-123  Allowed  Allowed  Allowed
2   20  lsnstpb  092-240-103  Allowed  Allowed  Allowed
3   30  lsnstpc  128-101-022  Allowed  Allowed  Allowed
4   --  -----  ***_***_***  -----  -----  -----
5   --  -----  ***_***_***  -----  -----  -----
6   --  -----  ***_***_***  -----  -----  -----
;

```

The following example shows how specifying either an FPC or cluster destination for which circular routing has been detected, along with the **mode=full** parameter, displays the name of the linkset on which the circular routing test message was transmitted. It also displays the linkset on which the circularly routed message was received. This information may be useful in correcting the circular routing situation.

rept-stat-dstn:dpc=9-3-6:mode=full

```

rlghncxa03w 04-07-07 14:59:11 EST EAGLE 31.9.0
DPCA             PST         SST         AST
009-003-006      OOS-MT      Prohibit  INACCESS
ALARM STATUS    = = *C xxxx Circular routing detected
RTE COST  LSN   APCA         LS STAT  NON-ADJ  ROUTE STAT
1   10  lsnstpa  042-036-123  Allowed  Allowed  Allowed
2   20  lsnstpb  092-240-103  Allowed  Allowed  Allowed
3   30  lsnstpc  128-101-022  Allowed  Allowed  Allowed
4   --  -----  ***_***_***  -----  -----  -----
5   --  -----  ***_***_***  -----  -----  -----
6   --  -----  ***_***_***  -----  -----  -----

```

```

SSN   SUBSYSTEM STATUS

ALIASA      ALIASN      ALIASI
-----
CIRCULAR ROUTING
  XMIT LSN= lsnstpb
  RCV  LSN= lsn01a
  MEMBER= ***_***_***
Command Completed.

```

The following example shows a typical report when a cluster destination and **mode=full** was specified. The interpretation of the circular routing status for cluster destinations is slightly different from an FPC's.

rept-stat-dstn:dpc=9-3-*:mode=full

```

rlghncxa03w 04-07-07 14:59:11 EST EAGLE 31.9.0
DPCA          PST          SST          AST
009-003- *    IS-NR        Allowed    ACCESS
ALARM STATUS   = *C xxxx Circular routing detected
RTE COST  LSN      APCA      LS STAT  NON-ADJ  ROUTE STAT
1   10   lsnstpa   042-036-123 Allowed    Allowed    Allowed
2   20   lsnstpb   092-240-103 Allowed    Allowed    Allowed
3   30   lsnstpc   128-101-022 Allowed    Allowed    Allowed
4   --   -----   ***_***_*** -----
5   --   -----   ***_***_*** -----
6   --   -----   ***_***_*** -----
SSN   SUBSYSTEM STATUS
ALIASA      ALIASN      ALIASI
-----
CIRCULAR ROUTING INFO:
  XMIT LSN=lsnstpb  RC=20
  RCV  LSN=lsn01a
  MEMBER= 009-003-006
Command Completed.
;

```

The following example shows how **rept-stat-dstn** displays the circular routing alarm for a cluster destination. Note that a circular routing alarm for a cluster destination indicates that circular routing was detected for a member of the cluster, but no x-list entry could be created for that cluster. Note, also, that circular routing detected on a cluster destination does not automatically force the output to display the status of the cluster as “OOS-MT Prohibit INACCESS” as it does for an FPC destination.

rept-stat-dstn:dpc=9-3-*

```

rlghncxa03w 04-07-07 14:59:11 EST EAGLE 31.9.0
DPCA          PST          SST          AST
009-003- *    IS-NR        Allowed    ACCESS
ALARM STATUS   = *C xxxx Circular routing detected
RTE COST  LSN      APCA      LS STAT  NON-ADJ  ROUTE STAT
1   10   lsnstpa   042-036-123 Allowed    Allowed    Allowed
2   20   lsnstpb   092-240-103 Allowed    Allowed    Allowed
3   30   lsnstpc   128-101-022 Allowed    Allowed    Allowed
4   --   -----   ***_***_*** -----
5   --   -----   ***_***_*** -----
6   --   -----   ***_***_*** -----
Command Completed.
;

```

The following example shows how **rept-stat-dstn** displays a subsystem information header but no subsystem information, just as it would if an FPC is specified for which no subsystems are defined. In addition, because aliases cannot be defined for cluster destinations, this report shows only an empty header, just as it does when an FPC is specified for which no aliases are defined. Note that the circular

routing information portion of the **mode=full** report displays “-----” for the linkset names when no circular routing condition exists for the DPC.

rept-stat-dstn:dpc=9-3-*:mode=full

```
rlghncxa03w 04-07-07 14:59:11 EST EAGLE 31.9.0
DPCA          PST          SST          AST
009-003-*     IS-NR        Allowed     ACCESS
ALARM STATUS   = No Alarms.
RTE COST  LSN      APCA      LS STAT  NON-ADJ  ROUTE STAT
1*  10  lsnstpa    042-036-123  Allowed  Allowed  Allowed
2   20  lsnstpb    092-240-103  Allowed  Allowed  Allowed
3   30  lsnstpc    128-101-022  Allowed  Allowed  Allowed
4   --  -----    ***_***_***  -----  -----  -----
5   --  -----    ***_***_***  -----  -----  -----
6   --  -----    ***_***_***  -----  -----  -----
SSN  SUBSYSTEM STATUS

ALIASA      ALIASN      ALIASI
-----

CIRCULAR ROUTING
XMIT LSN= -----
RCV LSN= -----
MEMBER= ***_***_***
Command Completed.
;
```

The following example shows how specifying the **stat** parameter along with the **ni-nc-***** or **ni-nc-***** DPC formats causes the output summary report to include only those destinations whose status matches the state specified.

rept-stat-dstn:dpc=9-4-***:stat=alminh

```
rlghncxa03w 04-02-31 13:30:00 EST EAGLE 31.9.0
DPCA          PST          SST          AST
009-004-006   IS-NR        Allowed     ALMINH
Command Completed.
;
```

The following example shows a retrieval specifying an ITU national point code where the **chg-stpopts:npcfmti** parameter has been set to **1-1-1-11**:

rept-stat-dstn:dpcn=1-1-1-1000

```
rlghncxa03w 04-02-31 13:30:00 EST EAGLE 31.3.0
CAUTION : Node isolated...route status out of date!
DPCN          PST          SST          AST
1-1-1-1000    OOS-MT        Prohibit   INACCESS
ALARM STATUS   = *C 0313 DPC is prohibited
RTE COST  LSN      APCN      LS STAT  NON-ADJ  ROUTE STAT
1   10  lsitu     1-1-1-1000  Prohibit  Allowed  Prohibit
2   --  -----    ***_***_***  -----  -----  -----
3   --  -----    ***_***_***  -----  -----  -----
4   --  -----    ***_***_***  -----  -----  -----
5   --  -----    ***_***_***  -----  -----  -----
6   --  -----    ***_***_***  -----  -----  -----
Command Completed.
;
```

The asterisks in the space after the route numbers in the following examples indicate which route (or combined route) is carrying traffic.

rept-stat-dstn:dpc=1-1-1

```

tekelecstp 04-09-24 09:19:04 EST EAGLE 31.9.0
DPCA PST SST AST
001-001-001 IS-NR Allowed ACCESS
ALARM STATUS = No Alarms.
RTE COST LSN APCA LS STAT NON-ADJ ROUTE STAT
1* 05 lse1e1 001-001-001 Allowed Allowed Allowed
2* 05 lse1e2 001-002-001 Allowed Allowed Allowed
3 10 lse1e3 001-003-001 Allowed Allowed Allowed
4 -- ----- ***_***_*** -----
5 -- ----- ***_***_*** -----
6 -- ----- ***_***_*** -----
Command Completed.

```

;

No asterisk appears after the route number in the following example; no routes were carrying traffic at the time.

rept-stat-dstn:dpc=1-1-1

```

tekelecstp 04-09-24 09:19:04 EST EAGLE 31.9.0
DPCA PST SST AST
001-001-001 OOS-MT Prohibit INACCESS
ALARM STATUS = *C 0313 DPC is prohibited
RTE COST LSN APCA LS STAT NON-ADJ ROUTE STAT
1 05 lse1e1 001-001-001 Prohibit Allowed Prohibit
2 05 lse1e2 001-002-001 Prohibit Allowed Prohibit
3 10 lse1e3 001-003-001 Prohibit Allowed Prohibit
4 -- ----- ***_***_*** -----
5 -- ----- ***_***_*** -----
6 -- ----- ***_***_*** -----
Command Completed.

```

;

In the following example, the primary route is not carrying traffic.

rept-stat-dstn:dpc=1-1-1

```

tekelecstp 04-09-24 09:19:04 EST EAGLE 31.9.0
DPCA PST SST AST
001-001-001 IS-ANR Restrict ACCESS
ALARM STATUS = *C 0334 DPC Subsystem is Abnormal
RTE COST LSN APCA LS STAT NON-ADJ ROUTE STAT
1 05 lse1e1 001-001-001 Prohibit Allowed Prohibit
2 05 lse1e2 001-002-001 Prohibit Allowed Prohibit
3* 10 lse1e3 001-003-001 Allowed Allowed Allowed
4 -- ----- ***_***_*** -----
5 -- ----- ***_***_*** -----
6 -- ----- ***_***_*** -----
Command Completed.

```

;

In the following example, the Origin-Based MTP Routing feature is enabled and on. This permits the execution of the **rept-stat-dstn** command in **rtx** mode, which displays all exception route sets provisioned against the specified DPC, as shown:

rept-stat-dstn:dpc=9-3-*:mode=rtx

```

tekelecstp 06-06-01 16:21:39 EST EAGLE 35.0.0
DPCA PST SST AST
009-003-* IS-NR Allowed ACCESS
ALARM STATUS = No Alarms.
RTE COST LSN APCA LS STAT NON ADJ ROUTE STAT
1 10 lsnstpa 042-36-23 Allowed Allowed Allowed
2 20 lsnstpb 092-40-03 Allowed Allowed Allowed
3 30 lsnstpc 128-01-22 Prohibit Prohibit Allowed
4 -- ----- ***_***_*** -----

```

```

5  --  -----  ***_**_**  -----  -----  -----
6  --  -----  ***_**_**  -----  -----  -----

```

Exception Routes:

OPCA	PST	SST	AST
001-001-001	IS-NR	Allowed	ACCESS
ILSN	PST	SST	AST
lsnstpy	IS-NR	Allowed	ACCESS

Command Completed.

If the Origin-Based MTP Routing feature is enabled and on, any exception routes provisioned against the specified DPC are displayed in **full** mode, as shown:

rept-stat-dstn:dpc=9-3-*:mode=full

```

tekelecstp 06-06-01 16:21:39 EST EAGLE 35.0.0
  DPCA          PST          SST          AST
  009-003-006   00S-MT       Prohibit   INACCESS
ALARM STATUS    = = *C 0319 REPT-MTPLP-DET: Circ rte det(cong)
RTE COST  LSN  APCA          LS STAT  NON ADJ  ROUTE STAT
1   10  lsnstpa  042-036-123 Allowed  Allowed  Allowed
2   20  lsnstpb  092-240-103 Allowed  Allowed  Allowed
3   30  lsnstpc  128-101-022 Allowed  Allowed  Allowed
4   --  -----  ***_**_**  -----  -----  -----
5   --  -----  ***_**_**  -----  -----  -----
6   --  -----  ***_**_**  -----  -----  -----
SSN  SUBSYSTEM STATUS

```

```

ALIASA          ALIASN          ALIASI
-----

```

CIRCULAR ROUTING INFO:

```

XMIT LSN=lsnstpb  RC=20
RCV  LSN=lsn01a
MEMBER =-----

```

Exception Routes:

OPCA	PST	SST	AST
001-001-001	IS-NR	Allowed	ACCESS
ILSN			
lsnstpy	IS-NR	Allowed	ACCESS

Command Completed.

If the Origin-Based MTP Routing feature is enabled and on and **full** mode is specified, all provisioned exception route sets are displayed in addition to the regular route sets, as shown by the following example:

rept-stat-dstn:mode=full

```

tekelecstp 06-06-01 14:06:10 EST EAGLE 35.0.0
  DPCA          PST          SST          AST
  004-004-004   00S-MT       Idle       INACCESS

  OPCA          PST          SST          AST
  001-001-001   IS-NR       Allowed    ACCESS

  ILSN          PST          SST          AST
  lsnstpy       IS-NR       Allowed    ACCESS

  DPCN          PST          SST          AST
  00001         IS-NR       Allowed    ACCESS

  SI            PST          SST          AST

```

10	IS-NR	Allowed	ACCESS
00002	IS-NR	Allowed	ACCESS
00005	OOS-MT	Prohibit	INACCESS
00004	OOS-MT	Prohibit	INACCESS
DPCN24	PST	SST	AST
DPCI	PST	SST	AST

Command Completed.

If the Origin-Based MTP Routing feature is enabled and on, then **rtx** mode is permitted for the command, and all provisioned exception routes are displayed, as shown by the following example:

rept-stat-rte:mode=rtx

```
tekelecstp 06-06-01 14:06:10 EST EAGLE 35.0.0
  DPCA          PST          SST          AST
  004-004-004   OOS-MT      Idle         INACCESS

  OPCA
  001-001-001   IS-NR       Allowed    ACCESS

  ILSN
  lsnstpy       IS-NR       Allowed    ACCESS

  DPCN          PST          SST          AST
  00001         IS-NR       Allowed    ACCESS

  SI
  10            IS-NR       Allowed    ACCESS
```

Legend

DPC/DPCA—The ANSI destination point code of the route

DPCN—The ITU-TSS national destination point code of the route

DPCN24—The 24-bit ITU national destination point code of the route

DPCI—The ITU-TSS international destination point code of the route

OPC/OPCA—The ANSI origination point code as exception routing criterion of the exception route

OPCN—The ITU-TSS national origination point code as exception routing criterion of the exception route

OPCN24—The 24-bit ITU national origination point code as exception routing criterion of the exception route

OPCI—The ITU-TSS international origination point code as exception routing criterion of the exception route

ILSN—The originating linkset as exception routing criterion of the exception route

CIC—Starting Circuit Identification Code used as the exception routing criterion for this exception route

ECIC—Ending Circuit Identification Code together with CIC defines the CIC range that is used as exception routing criterion for this exception route.

PST—The primary state of the subsystem. The possible values are described in "Possible Values for PST/SST/AST".

SST—The secondary state of the subsystem. The possible values are described in "Possible Values for PST/SST/AST".

AST—The associated state of the subsystem. The possible values are described in .

rept-stat-e1**Report Status E1**

Use this command to display the E1 port status and signaling link status for cards with provisioned E1 ports.

Keyword: **rept-stat-e1**

Related Commands:

Command Class: System Maintenance

Parameters

:e1port= (optional)

The E1 port number. When this parameter is specified, only the information for the specified E1 port on the card in the specified card location is displayed.

Range: **1-8**

Ports 3 through 8 can be specified only for HC-MIM cards.

:loc= (optional)

Card location. The unique identifier of a specific **lime1** card located in the STP.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

Default: Information for all **lime1** cards is reported.

Example

rept-stat-e1

Dependencies

No other **rept-stat-xxx** command can be in progress when this command is entered.

The **loc** parameter must be specified when the **e1port** parameter is specified.

The active TDM location cannot be specified in the **loc** parameter.

Card locations 1117 and 1118 and the HMUX or HIPR card locations (xy09 and xy10 where x is the frame and y is the shelf) cannot be specified in the **loc** parameter.

Notes

Specifying the command without any parameters displays E1 port status for all cards with provisioned E1 ports.

If the **loc** parameter is specified, status is displayed for all E1 ports provisioned on the card in the specified location.

If the **loc** and **e1port** parameters are specified, the E1 port status summary is displayed for all E1 ports provisioned on the card in the specified location, followed by the status of all signaling links assigned to the specified E1 port on the card.

Output

When no parameters are specified in the command, E1 port status is displayed for all cards with provisioned E1 ports. Ports 3 through 8 are on HC-MIM cards only.

rept-stat-e1

```
rlghncxa03w 05-01-04 07:01:08 EST EAGLE5 33.0.0
LOC  E1PORT  PST      SST      AST
1203  1      IS-NR    Avail    PARENT
1203  2      IS-NR    Avail    PAIRED
1203  3      IS-NR    Avail    -----
1203  7      OOS-MT   Unavail  -----
1207  1      IS-NR    Avail    -----
1207  2      IS-NR    Avail    -----
Command Completed.
```

;

When the **loc** parameter is specified, status is displayed for all E1 ports provisioned on the card in the specified location.

rept-stat-e1: loc=1203

```
rlghncxa03w 05-01-04 07:01:08 EST EAGLE5 33.0.0
LOC  E1PORT  PST      SST      AST
1203  1      IS-NR    Avail    PARENT
1203  2      IS-NR    Avail    PAIRED
1203  3      IS-NR    Avail    -----
1203  7      OOS-MT   Unavail  -----
Command Completed.
```

;

When the **loc** and **e1port** parameters are specified, the E1 port status summary is displayed for all E1 ports provisioned on the card in the specified location, followed by the status of all signaling links assigned to the specified E1 port on the card.

rept-stat-e1: loc=1203: e1port=1

```
rlghncxa03w 05-01-04 07:01:08 EST EAGLE5 33.0.0
LOC  E1PORT  PST      SST      AST
1203  1      IS-NR    Avail    PARENT
ALARM STATUS      = No Alarms.
UNAVAIL REASON    = --
SLK  TS  PST      SST      AST
A    1  IS-NR    Avail    ---
A1   2  IS-NR    Avail    ---
Command Completed.
```

;

rept-stat-e1: loc=1203: e1port=2

```
rlghncxa03w 05-01-04 07:01:08 EST EAGLE5 33.0.0
LOC  E1PORT  PST      SST      AST
1203  2      IS-NR    Avail    PAIRED
ALARM STATUS      = No Alarms.
UNAVAIL REASON    = --
Command Completed.
```

;

Legend

LOC—Card location

E1PORT—Number of the E1 port provisioned on the card in the specified location.

PST—The primary state of the card. The possible values are described in “Possible Values for PST/SST/AST”.

SST—The secondary state of the card. The possible values are described in “Possible Values for PST/SST/AST”.

AST—The associated state of the card. The possible values are described in “Possible Values for PST/SST/AST”. The values **PARENT** and **PAIRED** refer to odd and even adjacent ports on the card that are provisioned in channel bridging mode.

ALARM STATUS—Either "No Alarms" or current alarm number and text

UNAVAIL REASON—Reason for the E1 port being unavailable

SLK—Signaling link assigned to the E1 port

TS—Timeslot assigned to the signaling link

PST—The primary state of the signaling link. The possible values are described in "Possible Values for PST/SST/AST".

SST—The secondary state of the signaling link. The possible values are described in "Possible Values for PST/SST/AST".

AST—The associated state of the signaling link. The possible values are described in .

rept-stat-enet

Report Status Ethernet

Use this command to display a summary report of Ethernet status for all configured Ethernet interfaces on IP⁷ cards in the system.

Keyword: **rept-stat-enet**

Related Commands:

Command Class: System Maintenance

Parameters

:loc= (optional)

Location. This parameter specifies the card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Default: All ENET data for the card location is displayed.

:port= (optional)

Ethernet interface port ID.

Range: a, b

Default: All port data for ENET is displayed.

Example

rept-stat-enet

rept-stat-enet:loc=1101:port=b

Dependencies

Another command is already in progress.

If the **loc** parameter is specified, then the **port** parameter must be specified. If the **port** parameter is specified, then the **loc** parameter must be specified.

The shelf and card must be equipped, and the card table entry **appl** must be IPLIM, IPLIMI, SS7IPGW or IPGWI.

Notes

None.

Output

The following example displays a report on the status of all configured Ethernet interfaces on IP⁷ cards in the system.

rept-stat-enet

```
eagle10110 07-02-10 14:50:23 EST EAGLE 35.6.0
```

LOC	PORT	IPADDR	PST	SST	AST
1101	A	1.1.1.1	OOS-MT	Fault	ALMINH
1101	B	123.234.222.111	IS-ANR	Active	-----
1201	A	111.1.24.200	IS-NR	Active	-----
1201	B	2.31.234.1	OOS-MT	Fault	-----

Command Completed.

;

The following example displays the summary for a specific card location and port.

rept-stat-enet:loc=1101:port=b

```
eagle10110 07-02-10 14:54:23 EST EAGLE 35.6.0
```

LOC	PORT	IPADDR	PST	SST	AST
1101	B	123.234.222.111	IS-ANR	Active	-----

```
ALARM STATUS = ** 0537 Ethernet error threshold exceeded
```

Command Completed.

;

Legend

- **CARD**—The location of the card.
- **VERSION**—The version number of the application loaded on the card. Dashes (- - - -) in the version column indicate one of the following conditions about the card:
 - The card is configured but is not physically present in the system.
 - The card does not run a GPL, such as TDM or MDAL cards.
 - The card is IS-ANR or is in the process of being loaded.
- **TYPE**—The card type entered in the database. (The DCM and SSED CM cards show card type DCM.)
- **APPL**—The application loaded on this card.
- **PST**—The primary state of the card. The possible values are described in "Possible Values for PST/SST/AST".
- **SST**—The secondary state of the card. The possible values are described in "Possible Values for PST/SST/AST".
- **AST**—The associated state of the card. The possible values are described in .

rept-stat-eroute**Report Status EROUTE**

Use this command to display the status of STC cards and E5-STC cards (running the **eroute** application) for the EAGLE 5 Integrated Monitoring Support (E5IS) feature.

NOTE: As of Release 40.1.0, this command is obsolete. Use the **rept-stat-mon** command to display the status of the EROUTE subsystem.

Keyword: rept-stat-eroute

Related Commands:

Command Class: System Maintenance

Parameters

:loc= (optional)

Location. This parameter specifies the unique identifier of a specific STC card (STC card or E5-STC card) located in the STP.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Default: All STC cards are reported.

:mode= (optional)

Mode of reporting for the command. When **mode=perf** is specified, only subsystem performance information is displayed.

Range: perf

Default: None.

Example

```
rept-stat-eroute
```

```
rept-stat-eroute:mode=perf
```

```
rept-stat-eroute:loc=1213
```

Dependencies

The **mode** and **loc** parameters cannot be specified in the same command.

No other **rept-stat-xxx** command can be in progress when this command is entered.

At least one STC card (STC card or E5-STC card running the **eroute** application) must be configured before this command can be entered.

As of Release 40.1.0, this command is obsolete. To obtain the EROUTE subsystem status, use the **rept-stat-mon** command.

Notes

When the **loc** parameter is specified, only the card information for the specified card is displayed.

When the **mode=perf** parameter is specified, only subsystem performance information is displayed.

Output

If an **eroute** subsystem alarm is raised while the **rept-stat-eroute** command is processing, then the command output may not display the alarm. The alarm is displayed if the command is issued a second time.

When no parameters are specified in the command, the report shows card, subsystem, and alarm information.

rept-stat-eroute

```
rlghncxa03w 07-03-11 16:35:57 IST EAGLE 37.0.0
EROUTE SUBSYSTEM REPORT IS-NR Active -----
STC Cards Configured= 5 Cards IS-NR= 2
EISCOPY BIT = ON
System Threshold = 80% Total Capacity
System Peak EROUTE Load: 12991 Buffers/Sec
System Total EROUTE Capacity: 21000 Buffers/Sec

SYSTEM ALARM STATUS = No Alarms.
```

CARD	VERSION	PST	SST	AST	TVG USAGE	CPU USAGE
1211	-----	OOS-MT-DSBLD	Manual	-----	0%	0%
1104	052-008-000	IS-NR	Active	-----	63%	28%
1112	052-008-001	IS-NR	Active	-----	55%	28%
1303	255-255-255	OOS-MT	Isolated	-----	0%	0%
1311	255-255-255	OOS-MT	Isolated	-----	0%	0%

```
EROUTE Service Average TVG Capacity = 59% Average CPU Capacity = 28%

Command Completed.
```

;

rept-stat-eroute

```
rlghncxa03w 07-03-11 07:01:08 IST EAGLE 37.0.0
EROUTE SUBSYSTEM REPORT IS-ANR Busy -----
STC Cards Configured= 2 Cards IS-NR= 2
EISCOPY BIT = ON
System Threshold = 80% Total Capacity
System Peak EROUTE Load: 4800 Buffers/Sec
System Total EROUTE Capacity: 4800 Buffers/Sec

SYSTEM ALARM STATUS = * 0472 EROUTE System Threshold Exceeded
```

CARD	VERSION	PST	SST	AST	TVG USAGE	CPU USAGE
1213	111-024-000	IS-NR	Active	-----	80%	53%
1105	111-024-000	IS-NR	Active	-----	80%	53%

```
EROUTE Service Average TVG Capacity = 80% Average CPU Capacity = 53%
Command Completed.
```

;

When **mode=perf** is specified in the command, only subsystem performance information is displayed. The CARDS DENIED EROUTE SERVICE line appears only if there is at least one card that is denied service when the command is entered.

rept-stat-eroute:mode=perf

```
rlghncxa03w 07-03-11 16:36:17 IST EAGLE 37.0.0
EROUTE SUBSYSTEM REPORT IS-ANR Ovrflw=1 -----
STC Cards Configured= 3 Cards IS-NR= 2
EISCOPY BIT = ON
System Threshold = 80% Total Capacity
```

```
System Peak EROUTE Load:      12991 Buffers/Sec
System Total EROUTE Capacity:  21000 Buffers/Sec
```

```
SYSTEM ALARM STATUS = * 0482 Card(s) have been denied EROUTE service
```

STATISTICS

```
=====
```

CARD	CPU USAGE	TVG RATE
1211	---	----
1104	27%	9405
1112	28%	3376

```
-----
```

```
AVERAGE TVG Capacity = 59%
```

```
AVERAGE CPU USAGE = 27%
```

```
TOTAL TVG RATE = 12781
```

```
CARDS DENIED EROUTE SERVICE: 1302, 1305
```

```
Command Completed.
```

```
;
```

When **mode=perf** is specified in the command, only subsystem performance information is displayed.

rept-stat-eroute:mode=perf

```
rlghncxa03w 07-03-11 07:01:08 IST EAGLE 37.0.0
```

```
EROUTE SUBSYSTEM REPORT IS-NR Active -----
```

```
STC Cards Configured= 2 Cards IS-NR= 2
```

```
EISCOPY BIT = ON
```

```
System Threshold = 80% Total Capacity
```

```
System Peak EROUTE Load:      12991 Buffers/Sec
```

```
System Total EROUTE Capacity:  21000 Buffers/Sec
```

```
SYSTEM ALARM STATUS = No Alarms.
```

STATISTICS

```
=====
```

CARD	CPU USAGE	TVG RATE
1104	27%	9405
1112	28%	3376

```
-----
```

```
AVERAGE TVG Capacity = 59%
```

```
AVERAGE CPU USAGE = 27%
```

```
TOTAL TVG RATE = 12781
```

```
Command Completed.
```

```
;
```

When the **loc** parameter is specified in the command, information only for the specified card is displayed.

rept-stat-eroute:loc=1213

```
rlghncxa03w 07-03-11 16:37:21 IST EAGLE 37.0.0
```

CARD	VERSION	TYPE	PST	SST	AST
1104	052-008-000	STC	IS-NR	Active	-----

```
CARD ALARM STATUS = No Alarms.
```

```
TOTAL CPU USAGE = 28%
```

```
NTP broadcast = VALID
```

```
STC IP PORT A: IS-NR Active -----
```

```
ALARM STATUS = No Alarms.
```

```
STC IP PORT B: OOS-MT Unavail -----
```

```
ALARM STATUS = ** 0084 IP Connection Unavailable
```

```
ERROR STATUS = DHCP Lease. Physical Link.
```

```

      Command Completed.
;

```

Legend

When no parameters are specified in the command, the following information appears in the report:

EROUTE SUBSYSTEM REPORT—State of the subsystem

STC CARDS CONFIGURED—Total number of STC cards and E5-STC cards configured in the system

CARDS IS-NR—Total number of STC cards and E5-STC cards in IS-NR state

EISCOPY BIT—Indicates whether EIS copy function is turned On or Off

SYSTEM THRESHOLD—% of system total capacity being used

SYSTEM PEAK EROUTE LOAD—Current load in Buffers/Sec

SYSTEM TOTAL EROUTE CAPACITY—Total capacity in Buffers/Sec

SYSTEM ALARM STATUS—Either "No Alarms" or current alarm number and text

CARD—Card location

VERSION—The version number of the GPL loaded on the card. Dashes (- - - -) in the version column indicate one of the following conditions about the card:

- The card does not run a GPL, such as TDM or MDAL cards.
- The card is configured but is not physically present in the system.
- The card is IS-ANR or is in the process of being loaded.

TYPE—The card type entered in the database.

PST—The primary state of the card. The possible values are described in "Possible Values for PST/SST/AST".

SST—The secondary state of the card. The possible values are described in "Possible Values for PST/SST/AST".

AST—The associated state of the card. The possible values are described in .

EROUTE SERVICE AVERAGE TVG CAPACITY—%

AVERAGE CPU CAPACITY—%

TVG Usage —% of system current TVG rate based on the Max TVG capacity of the E5-ENET card

CPU usage—% of system current CPU usage

When **mode=perf** is specified, the following performance statistics are displayed:

STATISTICS

CARD—Card location

CPU USAGE—%

TVG RATE

AVERAGE TVG USAGE—%

AVERAGE CPU CAPACITY—%

TOTAL TVG RATE

When the **loc** parameter is specified in the command, only card information for the specified card is displayed: CARD, VERSION, TYPE, PST, SST, and AST as shown above, and the following information:

CARD ALARM STATUS—Either “No alarms” or current alarm number and text

TOTAL CPU USAGE—%

rept-stat-gpl

Report Status Generic Program Load

Use this command to display the version of GPLs currently running for an application, plus the approved and trial versions of the GPL that will run if the card is restarted.

Keyword: **rept-stat-gpl**

Related Commands: **act-gpl, alw-card, chg-gpl, copy-gpl, init-card, init-sys, rtrv-gpl**

Command Class: Program Update

Parameters

:display= (optional)

Display mode. Specifies whether the report displays only application GPL data for all cards, or both IMT and application GPL data.

Range: **all, brief**

Default: **brief**

:gpl= (optional)

Generic program load. This parameter specifies the type of GPL to report on.

Range: *ayyyyyy*

1 alphabetic character followed by up to 6 alphanumeric characters. Valid GPLs are:
atmansi—The GPL is used by the LIM cards to support the high-speed ATM signaling link feature.

atmhc—This GPL is used to support the functionality for the E5-ATM card. The E5-ATM card runs either the ATMANSI or ATMITU application. The **atmhc** GPL allows the card to support up to 2 signaling links.

atmitu—The GPL is used by the E1 ATM cards to support the high-speed E1 ATM signaling link feature.

blbepm—A flash GPL containing the BIOS ROM image on E5-E1T1 cards and E5-ENET cards.

blbios—A flash GPL containing the BIOS ROM image on HC-MIM cards that are used for E1 or T1 signaling links.

blbsmg—A flash GPL containing the BIOS ROM image on E5-SM4G cards.

blcpld—A flash GPL containing the bit files for the CPLD on HC-MIM, E5-E1T1, and E5-ENET cards that are used for E1 or T1 signaling links.

bldiag6—A flash GPL containing the diagnostic code on E5-E1T1 cards, HC-MIM cards, and E5-ENET cards.

blmcap—A flash GPL containing a tar image with all code required on E5-MCAP cards.

blvxw6—A flash GPL containing the VxWorks operating system on E5-E1T1 cards, HC-MIM cards, and E5-ENET cards.

blrom1—A flash GPL containing the bootloader code for VxWorks operating system on HC-MIM cards.

bpdcm—This GPL is used in support the flash memory Board PROM for DCM, DSM, and GPSM boards, original design.

bpdcm2—This GPL is used in support the flash memory Board PROM for DCM and GPSM boards, revised design.

bphcap—This GPL is used to support Board PROM for HCAP flash memory.

bphcapt—This GPL is used to support Board PROM for HCAP-T flash memory.

bphmux—This GPL is used to support Board PROM for HMUX flash memory.

bpmpl—This GPL is used to support Board PROM for MPL flash memory.

bpmplt—This GPL is used to support Board PROM for E1/T1 flash memory and Board Prom for MPL-T flash memory.

ccs7itu—This GPL is used by the LIM cards for ITU-TSS MTP functionality.

cdm—This GPL is used in the card manufacturing process.

eoam—This GPL is used by the GPSM-II card for enhanced OAM functions.

eroute—This GPL is used by the STC card for EAGLE 5 Integrated Monitoring Support functions.

erthc—This GPL is used by the E5-ENET card when the card acts as an STC card (E5-STC card) for EAGLE 5 Integrated Monitoring Support functions.

gls—This GPL is used by the TSM cards for downloading gateway screening to LIM cards.

glshc—This GPL is used by the E5-TSM card for downloading gateway screening to LIM and SCCP cards.

hipr—The communication software used on the High Speed IMT Packet Router (HIPR) card.

imt—This GPL is the communication processor on the logical processing element (LPE).

imtpci—The communication software that operates the IMT bus on HC-MIM, E5-E1T1, and E5-ENET cards.

ipghc—This GPL is used by the E5-ENET card to support TCP/IP point-to-multipoint connectivity for ANSI and ITU point codes.

ipgwi—This GPL is used by the SSEDCCM card for TCP/IP point-to-point connectivity for ITU point codes.

iplhc—This GPL is used by the E5-ENET card for TCP/IP point-to-point connectivity for ANSI and ITU point codes.

iplim—This GPL is used by the SSEDCCM card for TCP/IP point-to-point connectivity for ANSI point codes.

iplimi—This GPL is used by the SSEDCCM card for TCP/IP point-to-point connectivity for ITU point codes.

ips—This GPL is used by the IPSM card for the IP User Interface feature.

ipsg—This GPL is used by the E5-ENET card to support the combined functionality of IPLIMx M2PA and IPGWx M3UA.

ipshc—This GPL is used by the E5-IPSM card to support the IPS application.

mcp—This GPL is used by the MCPM card for the Measurements Platform feature.

oamhc—This GPL is used by the E5-MCAP card for enhanced OAM functions.

pldpmc1—A flash GPL that is used on HC-MIM and E5-E1T1 cards for E1 and T1 signaling links.

sccp—This GPL is used by the TSM cards for the global title translation application. If the E5-SM4G card is present, then the **sccp** GPL processes normal GTT traffic.

sccphc—This GPL is used by the E5-SM4G cards to support the EPAP-based features and the LNP ELAP Configuration feature. If no EPAP-based or LNP ELAP Configuration feature is turned on, and if an E5-SM4G card is present, then the **sccphc** GPL processes normal GTT traffic.

ss7ansi—This GPL is used by the LIM cards for the MTP functionality.

ss7gx25—This GPL is used by the LIM cards to support X.25 functionality.

ss7hc—This GPL is used to support the functionality for the HC-MIM (High Capacity Multi-Channel Interface Module) card or the E5-E1T1 card. The HC-MIM card and the E5-E1T1 card run either the SS7ANSI or CCS7ITU application; this GPL allows the card to support up to 64 signaling links for E1 and T1 functions.

ss7ipgw—This GPL is used by the SSEDCCM card to support TCP/IP point-to-multipoint connectivity.

ss7ml—This GPL is used to support the functionality for the multi-port LIM (MPL) card and the E1/T1 MIM (Multi-Channel Interface Module) card. The MPL cards run only the SS7ANSI application on a LIMDS0 card (as in the command `ent-card:type=limds0:appl=ss7ansi`); the **ss7ml** GPL allows the card to support 8 signaling links rather than the usual 2 links for LIM cards. The MPL cards support only the DS0 interface. The E1/T1 MIM card runs either the SS7ANSI or CCS7ITU application; the **ss7ml** GPL allows the card to support 8 signaling links for E1 and T1 functions.

stplan—This GPL is used by the ACM card to support the STP LAN application.

utility—This GPL is used by the factory for testing, and when directed by your Customer Care Center.

vcdu—This GPL is used in the card manufacturing process.

vsccp—This GPL is used by Service Module cards to support the EPAP-based and the LNP ELAP Configuration features. If no EPAP-based or LNP ELAP Configuration feature is turned on, and if a Service Module card is present, then the **vsccp** GPL processes normal GTT traffic.

vxwslan—This GPL is used by the SSEDCCM card to support the STP LAN application. The **bldiag** and **blvxw** flash GPLs are no longer supported.

:loc= (optional)

Location. This parameter specifies the target card address and displays the versions of all GPLs running at the specified card location. For HC-MIM, E5-ENET, or STC cards, this information includes all non-activated flash GPLs. For cards that are not HC-MIM, STC, or E5-ENET or non E5-IPSM cards, there is no additional data: this parameter limits the report to the target card address.

Range: 1101-1108, 1111-1113, 1115, 1201-1208, 1211-1212, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Example

```
rept-stat-gpl
rept-stat-gpl:display=all
rept-stat-gpl:loc=1201
rept-stat-gpl:gpl=ipsg
```

Dependencies

No other **rept-stat-xxxx** command can be in progress when this command is entered.

None of the following parameters can be specified together in the same command: **display=all** parameter, **loc** parameter, **gpl** parameter.

Notes

To check the version of the EPAP or ELAP application, use the **rept-stat-mps** command.

When this command is entered, information is displayed only for the cards that are IS-NR or IS-ANR.

Use the **chg-gpl** command to turn auditing on and off.

Use the **rtrv-gpl** command to display the audit state.

The approved GPL is the GPL that resides on the active fixed disk and was made the approved version by specifying the GPL version number while executing the **act-gpl** command.

The trial GPL is the version of the GPL that was downloaded from the removable cartridge or drive, but not activated by the **act-gpl** command.

When the **act-gpl** command is executed, the version specified becomes the approved GPL and the previously approved GPL becomes the trial GPL.

If any card is not running the active MASP system release version of a GPL, “ALM” is displayed to indicate that the card is in GPL alarm condition.

If GPL auditing is on, a minor alarm is shown, and “ALM” is displayed for each APPROVED GPL (**rtrv-gpl**) and for each RUNNING GPL (**rept-stat-gpl**) that does not match the GPL in the RELEASE column of the **rtrv-gpl** command output. If GPL auditing is off, the minor alarm is not activated, but “ALM” is displayed for each GPL that does not match the GPL in the RELEASE column.

If no **gpl** parameter is specified, the approved and trial versions for all GPLs are displayed.

If a GPL is not found, a version of “-----” is displayed. This should happen only for utility and OAM GPLs when the cartridge is not inserted. A utility trial version is never displayed because it can never be run.

If the removable cartridge or drive is inserted, an “*” (asterisk) is displayed next to the OAM trial version. The asterisk serves as a reminder that the trial version of a GPL is loaded when the card that is running the OAM is restarted. All other cards load their approved versions of GPLs when they are restarted.

If a card is inhibited, “-----” is displayed for the running version.

When the **gpl** parameter is not specified, the default is to display all application GPLs that are running on provisioned cards. The flashable GPLs (those loaded on the card by using the **init-flash** command) are not displayed.

When the **gpl=imt** parameter is specified, only the IMT GPLs for each configured card connected to the IMT are displayed.

A plus (+) symbol in the output indicates that the flash GPL currently being run has not yet been activated on the card. See the **act-flash** or **init-flash** command for a list of flash GPLs.

When a GPL is specified in the **gpl** parameter, the specified GPL for each card connected to the IMT is displayed.

Output

The output of the **rept-stat-gpl** command is site-specific and configuration-specific. The following output examples show typical output for the commands that are entered; the output that is shown can differ from output that appears for a particular system.

The following example shows output that includes an MPL or MPL-T (multi-port LIM) card at location 1105. The GPL column, which displays the GPL running on the card, enables you to differentiate between the two-port LIMDS0 card and the multi-port LIM card. If an MPL or MPL-T card is running in the system, SS7ML appears in the GPL column. If a two-port LIMDS0 card is running in the system, SS7ANSI appears in the GPL column.

This output appears when no parameters are defined. All GPLs for the card are listed.

rept-stat-gpl

```
rlghncxa03w 08-10-04 07:01:08 EST EAGLE 40.0.0
GPL      CARD      RUNNING      APPROVED      TRIAL
ATMHC    1103      128-002-000    128-002-000    128-002-000
ATMHC    1107      128-002-000    128-002-000    128-002-000
GLSHC    1106      130-001-000    130-001-000    130-001-000
EOAM     1113      025-002-000    025-002-000    -----
EOAM     1115      025-002-000    025-002-000    -----
SCCP     1212      025-001-000    025-001-000    025-001-000
VSCCP    1103      026-001-000    026-001-000    026-001-000
CCS7ITU  1201      025-001-000    025-001-000    025-001-000
CCS7ITU  1202      025-001-000    025-001-000    025-001-000
ATMANSI  1205      025-001-000    025-001-000    025-001-000
ATMANSI  1211      025-001-000    025-001-000    025-001-000
SS7ANSI  1203      025-001-000    025-001-000    025-001-000
SS7ANSI  1207      025-001-000    025-001-000    025-001-000
IPLIM    1213      025-001-000    025-001-000    025-001-000
SS7IPGW  1215      025-001-000    025-001-000    025-001-000
SS7ML    1105      027-001-000    027-001-000    027-001-000
OAP      A          025-001-000    025-001-000    -----
OAP      B          025-001-001 ALM  025-001-000    -----
IPSG     1305      040-000-000    040-000-000    040-000-000
Command Completed.
```

;

The following example appears for the UTILITY GPL, whether the cartridge or drive is inserted or not inserted.

rept-stat-gpl:gpl=utility

```
rlghncxa03w 09-01-07 10:23:93 EST EAGLE 40.1.0
GPL      CARD      RUNNING      APPROVED      TRIAL
UTILITY  1101      101-016-000    101-016-000    -----
Command Completed.
```

;

The following example shows all provisioned cards that are running the SS7ANSI GPL.

rept-stat-gpl:gpl=ss7ansi

```
rlghncxa03w 05-01-07 10:23:93 EST EAGLE 33.0.0
GPL      CARD      RUNNING      APPROVED      TRIAL
SS7ANSI  1102      101-016-000    101-016-000    101-016-000
SS7ANSI  1103      101-016-000    101-016-000    101-016-000
SS7ANSI  1201      101-016-000    101-016-000    101-016-000
SS7ANSI  1202      101-016-000    101-016-000    101-016-000
SS7ANSI  1207      101-016-000    101-016-000    101-016-000
SS7ANSI  1208      101-016-000    101-016-000    101-016-000
SS7ANSI  1214      101-016-000    101-016-000    101-016-000
SS7ANSI  1215      101-016-000    101-016-000    101-016-000
SS7ANSI  1216      101-016-000    101-016-000    101-016-000
SS7ANSI  1217      101-016-000    101-016-000    101-016-000
```

Command Completed.

;

The following example lists cards that are running the IMT GPL.

rept-stat-gpl:gpl=imt

```
rlghncxa03w 05-01-07 10:23:93 EST EAGLE 33.0.0
GPL      CARD      RUNNING      APPROVED      TRIAL
IMT      1101      101-016-000      -----      -----
IMT      1102      101-016-000      -----      -----
IMT      1103      101-016-000      -----      -----
IMT      1105      101-016-000      -----      -----
IMT      1113      101-016-000      -----      -----
IMT      1115      101-016-000      -----      -----
IMT      1201      101-016-000      -----      -----
IMT      1202      101-016-000      -----      -----
IMT      1203      101-016-000      -----      -----
IMT      1213      101-016-000      -----      -----
IMT      1214      101-016-000      -----      -----
IMT      1215      101-016-000      -----      -----
Command Completed.
```

;

In the following example, card 3108 is running the older, approved GPL. Cards 2108 and 2208 are each running a new nonapproved version. Card 2108 has had this version activated, and card 2208 is still running this version in a trial mode (a + appears following the ALM indicator).

rept-stat-gpl:gpl=bphcap

```
rlghncxa03w 05-01-07 10:23:93 EST EAGLE 33.0.0
GPL      CARD      RUNNING      APPROVED      TRIAL
BPHCAP   2108      101-005-001 ALM   101-016-000      101-005-001
BPHCAP   2208      101-005-001 ALM+  101-016-000      101-005-001
BPHCAP   3108      101-016-000      101-016-000      101-005-001
Command Completed.
```

;

Output for the BPHMUX or HIPR GPLs shows the GPL that is running on each card in slots 09 and 10 on each provisioned shelf. The following example shows the output for the HIPR GPL.

rept-stat-gpl:gpl=hipr

```
rlghncxa03w 05-01-04 07:01:08 EST EAGLE5 33.0.0
GPL      CARD      RUNNING      APPROVED      TRIAL
HIPR     1109      118-020-000      118-020-000      118-020-000
HIPR     1110      118-020-000      118-020-000      118-020-000
HIPR     1209      118-020-000      118-020-000      118-020-000
HIPR     1210      118-020-000      118-020-000      118-020-000
Command Completed.
```

;

The following example shows the EOAM GPL that is running on the cards in locations 1113 and 1115.

rept-stat-gpl:gpl=eoam

```
rlghncxa03w 05-01-07 10:23:93 EST EAGLE 33.0.0
GPL      CARD      RUNNING      APPROVED      TRIAL
EOAM     1113      028-002-000      028-002-000      -
EOAM     1115      028-002-000      028-002-000      -
Command Completed.
```

;

The following example specifies the **display=all** parameter to display both IMT and application GPL information.

The example also contains asterisks with the following meanings:

- * The SS7ML entry in the GPL column at location 1105 indicates that a multi-port LIM, as opposed to a two-port LIM, is running on the system. Both cards are provisioned in the database with the **ss7ansi** application so that the two-port LIM can be replaced without having

to reprovision the database, but the MPL and MPL-T run the **ss7ml** GPL to support 8 signaling link ports.

- ** The OAP entries appear only if an OAP is provisioned and running. Systems that use two OAPs show two entries for the OAP: OAP A and OAP B.

rept-stat-gpl:display=all

```
rlghncxa03w 08-04-07 10:23:93 EST EAGLE 38.0.0
GPL          CARD      RUNNING      APPROVED      TRIAL
EOAM         1113      027-002-000    027-002-000    -----
              BPDCM2    027-001-000    027-001-000    210-001-003
EOAM         1115      027-002-000    027-002-000    -----
              BPDCM2    027-001-000    027-001-000    210-001-003
SCCP         1212      027-001-000    027-001-000    027-001-000
              IMT       027-001-000    027-001-000    210-001-003
CCS7ITU      1201      027-001-000    027-001-000    027-001-000
              IMT       027-001-000    027-001-000    210-001-003
ATMANSI      1203      027-001-000    027-001-000    027-001-000
              BPHCAP    027-001-000    027-001-000    210-001-003
SS7ML*       1105      027-001-000    027-001-000    027-001-000
              BPMPL     230-001-001    230-001-001    230-001-001
IPLIM        1213      027-001-000    027-001-000    027-001-000
              BPDCM     027-001-000    027-001-000    210-001-003
SS7IPGW      1215      027-001-000    027-001-000    027-001-000
              BPDCM     210-001-003  ALM+ 027-001-000    210-001-003
BPHMUX       1109      027-005-000    027-005-000    027-005-000
BPHMUX       1110      027-005-000    027-005-000    027-005-000
BPHMUX       1209      027-005-000    027-005-000    027-005-000
BPHMUX       1210      027-005-000    027-005-000    027-005-000
OAP**        A        027-001-000    027-001-000    -----
OAP**        B        027-001-001  ALM  027-001-000    -----
Command Completed.
```

;

The following example specifies the **display=all** parameter to display both IMT and application GPL information. The example includes an HC-MIM card and E5-ATM card in the system.

rept-stat-gpl:display=all

```
rlghncxa03w 08-05-15 10:23:93 EST EAGLE5 39.0.0
GPL Auditing ON

GPL          CARD      RUNNING      APPROVED      TRIAL
EOAM         1113      125-002-000  ALM  125-001-000    125-002-000  *
              BPDCM     002-126-000    002-126-000    002-126-000
EOAM         1115      125-002-000  ALM  125-001-000    125-001-000  *
              BPDCM     002-123-020  ALM  002-126-000    002-126-000
ATMHC        1101      013-001-219    013-001-219    013-001-218
              IMTPCI    130-001-000    130-001-000    130-001-000
              BLVXW6    013-003-000    013-003-000    013-003-000
              BLDIAG6    013-003-000    013-003-000    013-003-000
              BLBEPM     013-003-000    013-003-000    013-003-000
              BLCPLD     013-003-000    013-003-000    013-003-000
SS7ANSI      1205      125-001-000    125-001-000    125-002-000
              IMT       125-001-000    125-001-000    125-002-000
GLS          1106      125-001-000    125-001-000    125-002-000
              IMT       125-001-000    125-001-000    125-002-000
UTILITY      1101      125-001-000    125-001-000    -----
              IMT       125-001-000    125-001-000    125-002-000
SS7GX25      1206      125-001-000    125-001-000    125-002-000
              IMT       125-001-000    125-001-000    125-002-000
SS7IPGW      1213      125-001-000    125-001-000    125-002-000
              BPDCM     002-125-002  ALM  002-126-000    002-126-000
VSCCP        1111      125-001-000    125-001-000    125-002-000
              BPDCM     002-125-002  ALM  002-126-000    002-126-000
BPHMUX       1109      125-001-000    125-001-000    125-002-000
```

```

BPHMUX      1110      125-001-000      125-001-000      125-002-000
BPHMUX      1209      125-001-000      125-001-000      125-002-000
BPHMUX      1210      125-001-000      125-001-000      125-002-000
MPLGA       1102      125-001-000      125-001-000      125-002-000
          BPMPL      125-001-000      125-001-000      125-002-000
SS7HC       1215      125-001-000      125-001-000      125-002-000
          IMTPCI     125-001-000      125-001-000      125-002-000
          BLBIOS     125-001-000      125-001-000      125-002-000
          BLCPLD     125-001-000      125-001-000      125-002-000
          BLVXW6     125-001-000      125-001-000      125-002-000
          BLDIAG6    125-001-000      125-001-000      125-002-000
          PLDE1T1    125-001-000      125-001-000      125-002-000
          PLDPMC1    125-001-000      125-001-000      125-002-000
Command Completed.

```

;

The following example shows output when the **loc** parameter is specified for an HC-MIM card.

The following notes explain the last 5 lines of this example:

1. IMTPCI has been downloaded with the **init-flash** command, the card has reset, and IMTPCI was activated normally with the **act-flash** command.
2. BLBIOS has been downloaded with the **init-flash** command, but the card has not been initialized. The inactive version will load when the card is next initialized.
3. BLVXW6 has been downloaded with the **init-flash** command, the card has been reset. BLVXW6 was activated with the **act-flash** command, but it is not the approved version on the TDM.
4. BLDIAG6 has been downloaded with the **init-flash** command, and the card has been reset; the inactive version is running. The ALM indicates that it is not the approved version and the '+' indicates that it has not been activated yet. The '*' next to the active version indicates that if the card resets again, the active version will run.
5. PLDPMC1 has been downloaded with the **init-flash** command and the card has been reset, but the GPL has not been activated yet. This is the same condition as Note 4, except that there is no alarm condition.

rept-stat-gpl: loc=1203

```

rlghncxa03w 08-05-01 10:23:93 EST  EAGLE 39.0.0
GPL Auditing  ON

```

```

GPL      CARD      RUNNING      APPROVED      TRIAL
SS7HC    1203      128-020-081      128-020-081      128-020-081
          IMTPCI     128-020-081      128-020-081
          BLBIOS     128-020-081      128-020-081
          BLCPLD     128-020-081      128-020-081
          BLVXW6     128-020-081      128-020-081
          BLDIAG6    128-020-081      128-020-081
          PLDPMC1    128-020-081      128-020-081

          IMTPCI     125-001-000      125-002-000 * ----- Note 1
          BLBIOS     125-001-000      125-001-000      125-003-000 * Note 2
          BLCPLD     125-001-000      125-001-000 * -----
          BLVXW6     125-002-000ALM      125-002-000 * ----- Note 3
          BLDIAG6    125-003-000ALM+      125-002-000 * 125-003-000 Note 4

          PLDE1T1    125-001-000      +      125-002-000 * 125-001-000 Note 5
Command Completed.

```

;

The following example shows output when the **loc** parameter is specified for a card that is not an HC-MIM or E5-ENET card.

rept-stat-gpl: loc=1217

rlghncxa03w 07-02-01 10:23:93 EST EAGLE 37.5.0
GPL Auditing ON

GPL	CARD	RUNNING	APPROVED	TRIAL
ATMANSI	1217	125-001-000	125-001-000	125-001-000
	BPHCAP	125-001-000	125-001-000	125-001-000

Command Completed.

;

rept-stat-gpl: gpl=iplhc

eagle10115 06-04-04 13:27:20 EST EAGLE 35.0.0
GPL Auditing ON

GPL	CARD	RUNNING	APPROVED	TRIAL
IPLHC	1303	097-003-000	097-003-000	028-003-011

Command Completed.

;

rept-stat-gpl: gpl=ipghc

eagle10115 06-04-04 13:27:58 EST EAGLE 35.0.0
GPL Auditing ON

GPL	CARD	RUNNING	APPROVED	TRIAL
IPGHC	1305	097-003-009	097-003-009	097-003-001
IPGHC	1307	097-003-009	097-003-009	097-003-001

Command Completed.

;

The following example shows the report for the **slanhc** GPL running on card locations 1103 and 1107.

rept-stat-gpl: gpl=slanhc

tekelecstp 06-12-06 13:24:56 EST EAGLE 37.0.0
GPL Auditing ON

GPL	CARD	RUNNING	APPROVED	TRIAL
SLANHC	1103	128-002-000	128-002-000	128-002-000
SLANHC	1107	128-002-000	128-002-000	128-002-000

Command Completed.

;

The following example shows output when the **loc** parameter is specified for an E5-SLAN card.

rept-stat-gpl: loc=1103

tekelecstp 07-12-06 09:30:12 EST EAGLE 37.0.0
GPL Auditing ON

GPL	CARD	RUNNING	APPROVED	TRIAL
SLANHC	1103	-----	-----	-----
	IMTPCI	128-002-000	128-002-000	128-002-000
	BLVXW6	128-002-000	128-002-000	128-002-000
	BLDIAG6	128-002-000	128-002-000	128-002-000
	BLBEPM	128-002-000	128-002-000	128-002-000
	BLCPLD	128-002-000	128-002-000	128-002-000
			ACTIVE	INACTIVE
	IMTPCI	128-002-000	128-002-000 *	-----
	BLVXW6	128-002-000	128-002-000 *	-----
	BLDIAG6	128-002-000	128-002-000 *	-----
	BLBEPM	128-002-000	128-002-000 *	-----
	BLCPLD	128-002-000	128-002-000 *	-----

Command Completed.

;

The following example shows output when the **loc** parameter is specified for an E5-STC card.

rept-stat-gpl: loc=1107

tekelecstp 07-03-06 16:14:22 EST EAGLE 37.0.0
GPL Auditing ON

GPL	CARD	RUNNING	APPROVED	TRIAL
ERTHC	1107	-----	-----	-----
	IMTPCI	128-002-000	128-002-000	128-002-000
	BLVXW6	128-002-000	128-002-000	128-002-000
	BLDIAG6	128-002-000	128-002-000	128-002-000
	BLBEPM	128-002-000	128-002-000	128-002-000
	BLCPLD	128-002-000	128-002-000	128-002-000
			ACTIVE	INACTIVE
	IMTPCI	128-002-000	128-002-000 *	-----
	BLVXW6	128-002-000	128-002-000 *	-----
	BLDIAG6	128-002-000	128-002-000 *	-----
	BLBEPM	128-002-000	128-002-000 *	-----
	BLCPLD	128-002-000	128-002-000 *	-----

Command Completed.

;

The following example shows output when the **loc** parameter is specified for an E5-IPSM card.

rept-stat-gpl: loc=1103

tekelecstp 07-02-01 09:30:12 EST EAGLE 37.5.0
GPL Auditing ON

GPL	CARD	RUNNING	APPROVED	TRIAL
IPSHC	1103	-----	-----	-----
	IMTPCI	128-001-000	128-001-000	128-001-000
	BLVXW6	128-001-000	128-001-000	128-001-000
	BLDIAG6	128-001-000	128-001-000	128-001-000
	BLBEPM	128-001-000	128-001-000	128-001-000
	BLCPLD	128-001-000	128-001-000	128-001-000
			ACTIVE	INACTIVE
	IMTPCI	128-001-000	128-001-000 *	-----
	BLVXW6	128-001-000	128-001-000 *	-----
	BLDIAG6	128-001-000	128-001-000 *	-----
	BLBEPM	128-001-000	128-001-000 *	-----
	BLCPLD	128-001-000	128-001-000 *	-----

Command Completed.

;

The following example shows output for the **ipshc** GPL running on card locations 1103 and 1107.

rept-stat-gpl: gpl=ipshc

tekelecstp 07-02-01 13:24:56 EST EAGLE 37.5.0
GPL Auditing ON

GPL	CARD	RUNNING	APPROVED	TRIAL
IPSHC	1103	128-001-000	128-001-000	128-001-000
IPSHC	1107	128-001-000	128-001-000	128-001-000

Command Completed.

;

The following example shows output for an E5-SM4G card.

rept-stat-gpl: loc=6111

tklc1110501 07-04-12 17:26:59 EST EAGLE5 37.0.0
GPL Auditing ON

GPL	CARD	RUNNING	APPROVED	TRIAL

SCCPHC	6111	128-015-000	128-015-000	128-015-000
IMTPCI		128-006-000	128-006-000	128-006-000
BLVXW6		128-015-000	128-015-000	128-015-000
BLDIAG6		128-014-000	128-014-000	128-014-000
BLBSMG		128-007-000	128-007-000	128-007-000
BLCPLD		128-006-000	128-006-000	128-006-000

			ACTIVE	INACTIVE
IMTPCI	128-006-000		128-006-000 *	-----
BLVXW6	128-015-000		128-015-000 *	-----
BLDIAG6	128-014-000		128-014-000 *	-----
BLBSMG	128-007-000		128-007-000 *	-----
BLCPLD	128-006-000		128-006-000 *	-----

Command Completed.

;

rept-stat-gpl:gpl=ipsg

eagle10213 08-01-30 17:21:02 EST EAGLE 38.0.0
GPL Auditing ON

GPL	CARD	RUNNING	APPROVED	TRIAL
IPSG	1305	040-000-000	040-000-000	040-000-000

Command Completed.

;

The following example shows the report for the **atmhc** GPL running on card locations 1103 and 1107.

rept-stat-gpl:gpl=atmhc

tekelecstp 08-01-06 13:24:56 EST EAGLE 38.0.0
GPL Auditing ON

GPL	CARD	RUNNING	APPROVED	TRIAL
ATMHC	1103	128-002-000	128-002-000	128-002-000
ATMHC	1107	128-002-000	128-002-000	128-002-000

Command Completed.

;

The following example includes IPSG cards.

rept-stat-gpl:display=all

eagle10110 08-03-15 18:53:54 EST EAGLE 38.0.0
GPL Auditing ON

GPL	CARD	RUNNING	APPROVED	TRIAL	
EOAM	1113	078-023-002	078-023-002	078-023-002	*
	BPDCM	130-014-000 ALM	130-023-000	130-023-000	
EOAM	1115	078-023-002	078-023-002	078-023-002	*
	BPDCM	130-014-000 ALM	130-023-000	130-023-000	
SS7ANSI	1201	078-023-000	078-023-000	130-023-000	
	IMT	130-023-000	130-023-000	130-023-000	
SS7ANSI	1204	078-023-000	078-023-000	130-023-000	
	IMT	130-023-000	130-023-000	130-023-000	
SS7ANSI	1205	078-023-000	078-023-000	130-023-000	
	IMT	130-023-000	130-023-000	130-023-000	
SS7ANSI	1206	078-023-000	078-023-000	130-023-000	
	IMT	130-023-000	130-023-000	130-023-000	
CCS7ITU	1211	078-023-000	078-023-000	130-023-000	
	IMT	130-023-000	130-023-000	130-023-000	
CCS7ITU	1212	078-023-000	078-023-000	130-023-000	
	IMT	130-023-000	130-023-000	130-023-000	
CCS7ITU	1214	078-023-000	078-023-000	130-023-000	
	IMT	130-023-000	130-023-000	130-023-000	
CCS7ITU	1215	078-023-000	078-023-000	130-023-000	
	IMT	130-023-000	130-023-000	130-023-000	
CCS7ITU	1216	078-023-000	078-023-000	130-023-000	

	IMT	130-023-000	130-023-000	130-023-000
IPLIM	1311	078-023-000	078-023-000	130-023-000
	BPDCM	130-014-000 ALM	130-023-000	130-023-000
IPLIMI	1313	078-023-000	078-023-000	130-023-000
	BPDCM	130-014-000 ALM	130-023-000	130-023-000
SS7IPGW	1107	078-023-000	078-023-000	130-023-000
	BPDCM	130-023-000	130-023-000	130-023-000
SS7IPGW	1307	078-023-000	078-023-000	130-023-000
	BPDCM	130-014-000 ALM	130-023-000	130-023-000
SS7IPGW	1308	078-023-000	078-023-000	130-023-000
	BPDCM	130-016-000 ALM	130-023-000	130-023-000
SS7IPGW	1315	078-023-000	078-023-000	130-023-000
	BPDCM	130-014-000 ALM	130-023-000	130-023-000
SS7ML	1202	078-023-000	078-023-000	130-023-000
	BPML	130-014-000 ALM	130-023-000	130-023-000
SS7ML	1203	078-023-000	078-023-000	130-023-000
	BPML	130-016-000 ALM	130-023-000	130-023-000
BPHMUX	1110	128-025-000	128-025-000	128-025-000
BPHMUX	1210	128-025-000	128-025-000	128-025-000
IPGWI	1317	078-023-000	078-023-000	130-023-000
	BPDCM	130-014-000 ALM	130-023-000	130-023-000
IPS	1105	130-023-000	130-023-000	130-023-000
	BPDCM	130-014-000 ALM	130-023-000	130-023-000
HIPR	1310	130-004-000 ALM	130-023-000	130-023-000
IPSG	1301	078-023-004	078-023-004	049-023-000
	IMTPCI	130-020-000 ALM	130-023-000	130-023-000
	BLVXW6	028-020-001 ALM	130-022-000	130-022-000
	BLDIAG6	130-018-000 ALM	130-008-000	130-008-000
	BLBEPM	130-018-000 ALM	128-021-000	128-021-000
	BLCPLD	130-018-000 ALM	128-021-000	128-021-000
IPSG	1303	078-023-004	078-023-004	049-023-000
	IMTPCI	130-023-000	130-023-000	130-023-000
	BLVXW6	130-022-000	130-022-000	130-022-000
	BLDIAG6	130-008-000	130-008-000	130-008-000
	BLBEPM	128-021-000	128-021-000	128-021-000
	BLCPLD	128-021-000	128-021-000	128-021-000
IPSG	1304	049-023-000 ALM	078-023-004	049-023-000
	IMTPCI	130-023-000	130-023-000	130-023-000
	BLVXW6	130-022-000	130-022-000	130-022-000
	BLDIAG6	130-008-000	130-008-000	130-008-000
	BLBEPM	128-021-000	128-021-000	128-021-000
	BLCPLD	128-021-000	128-021-000	128-021-000
IPSG	1305	078-023-004	078-023-004	049-023-000
	IMTPCI	130-023-000	130-023-000	130-023-000
	BLVXW6	130-022-000	130-022-000	130-022-000
	BLDIAG6	130-008-000	130-008-000	130-008-000
	BLBEPM	128-021-000	128-021-000	128-021-000
	BLCPLD	128-021-000	128-021-000	128-021-000
IPSG	1314	078-023-004	078-023-004	049-023-000
	IMTPCI	130-023-000	130-023-000	130-023-000
	BLVXW6	130-022-000	130-022-000	130-022-000
	BLDIAG6	130-008-000	130-008-000	130-008-000
	BLBEPM	128-021-000	128-021-000	128-021-000
	BLCPLD	128-021-000	128-021-000	128-021-000

Command Completed.

;

The following example shows the output when the **loc** parameter is specified for an E5-TSM card.

rept-stat-gpl: loc=1106

tekelecstp 08-10-05 09:30:12 EST EAGLE 40.0.0
GPL Auditing ON

GPL	CARD	RUNNING	APPROVED	TRIAL
GLSHC	1106	-----	-----	-----

IMTPCI	130-001-000	130-001-000	130-001-000
BLVXW6	130-001-000	130-001-000	130-001-000
BLDIAG6	130-001-000	130-001-000	130-001-000
BLBEPM	130-001-000	130-001-000	130-001-000
BLCPLD	130-001-000	130-001-000	130-001-000

		ACTIVE	INACTIVE
IMTPCI	130-001-000	130-001-000 *	-----
BLVXW6	130-001-000	130-001-000 *	-----
BLDIAG6	130-001-000	130-001-000 *	-----
BLBEPM	130-001-000	130-001-000 *	-----
BLCPLD	130-001-000	130-001-000 *	-----

Command Completed.

;

The following example shows the output for the **glsbc** GPL running on card locations 1106 and 1204.

rept-stat-gpl:gpl=glsbc

tekelecstp 08-10-05 13:24:56 EST EAGLE 40.0.0
GPL Auditing ON

GPL	CARD	RUNNING	APPROVED	TRIAL
GLSHC	1106	130-001-000	130-001-000	130-001-000
GLSHC	1204	130-001-000	130-001-000	130-001-000

Command Completed.

;

The following example displays the output when E5-MCAP cards are used.

rept-stat-gpl

rlghncxa03w 09-03-04 07:01:08 EST EAGLE 40.1.0

GPL	CARD	RUNNING	APPROVED	TRIAL
ATMHC	1103	128-002-000	128-002-000	128-002-000
ATMHC	1107	128-002-000	128-002-000	128-002-000
GLSHC	1106	130-001-000	130-001-000	130-001-000
OAMHC	1113	030-013-000	030-013-000	030-013-000 *
OAMHC	1115	030-013-000	030-013-000	030-013-000 *
SCCP	1212	025-001-000	025-001-000	025-001-000
VSCCP	1103	026-001-000	026-001-000	026-001-000
CCS7ITU	1201	025-001-000	025-001-000	025-001-000
CCS7ITU	1202	025-001-000	025-001-000	025-001-000
ATMANSI	1205	025-001-000	025-001-000	025-001-000
ATMANSI	1211	025-001-000	025-001-000	025-001-000
SS7ANSI	1203	025-001-000	025-001-000	025-001-000
SS7ANSI	1207	025-001-000	025-001-000	025-001-000
IPLIM	1213	025-001-000	025-001-000	025-001-000
SS7IPGW	1215	025-001-000	025-001-000	025-001-000
SS7ML	1105	027-001-000	027-001-000	027-001-000
OAP	A	025-001-000	025-001-000	-----
OAP	B	025-001-001 ALM	025-001-000	-----
IPSG	1305	040-000-000	040-000-000	040-000-000

Command Completed.

;

Legend

GPL—The type of GPL associated with the cards in the display.

CARD—The card location.

RUNNING—The GPL version the card is running. If the card is not running the active MASP system release GPL, ALM appears after the GPL version number in this column.

APPROVED—The GPL version that is the approved GPL.

TRIAL—The GPL version that is the trial GPL.

ACTIVE—The GPL version that has been downloaded using the **init-flash** command and activated using the **act-flash** command..

INACTIVE—The GPL version that has been downloaded using the **init-flash** command but has not been activated using the **act-flash** command..

----- (dashes)—GPL is not present at the specified location.

*—The trial version will run if the card boots. (Shown to the right of the TRIAL column)

ALM—An alarm indicator showing that the system has an approved GPL that is not the GPL required for this software release according to the active MASP system release table.

+—The currently running flash GPL has not been activated. (Shown between the RUNNING and APPROVED columns)

rept-stat-imt

Report IMT Status

The interprocessor message transport bus (IMT bus) is the main communications artery between all subsystems in the system. Use this command to display the primary, secondary, and associated maintenance states of the IMT bus. The primary state indicates whether the bus is normal, abnormal, or OOS for maintenance activity. The secondary state indicates the active/inhibited status of a card for a particular IMT bus.

Keyword: **rept-stat-imt**

Related Commands: **clr-imt-stats**, **conn-imt**, **disc-imt**, **rept-imt-lvl1**, **rept-imt-lvl2**, **rmv-imt**, **rst-imt**

Command Class: System Maintenance

Parameters

:mode= (optional)

Use this parameter to provide additional output listing the cards that currently have IMT alarm conditions outstanding. The additional output is repeated for each IMT bus following the bus status information. If no alarms are active on a given bus, no additional output is generated.

Range: **full**

Default: Do not display additional information.

Example

```
rept-stat-imt
```

```
rept-stat-imt:mode=full
```

Dependencies

No other **rept-stat-xxx** command can be in progress when this command is entered.

Notes

The card locations are stored only by the active MASP. The information is lost if the system switches from the active to the standby MASP.

The trouble locations are displayed sorted by card location.

Output**rept-stat-imt**

```

rlghncxa03w 04-02-27 16:50:24 EST EAGLE 31.3.0
IMT  PST          SST          AST
A    IS-NR        Active       -----
ALARM STATUS      = No alarms

IMT  PST          SST          AST
B    IS-ANR       Fault        -----
ALARM STATUS      = ** 0108 Major IMT Failure Detected

```

Command Completed.

;

rept-stat-imt:mode=full

```

rlghncxa03w 04-02-23 13:10:30 EST EAGLE 31.3.0
IMT  PST          SST          AST
A    IS-NR        Active       -----
ALARM STATUS      = No Alarms.

IMT  PST          SST          AST
B    OOS-MT-DSBLD Fault        -----
ALARM STATUS      = ** 0108 Major IMT failure detected.

```

CARDS WITH ACTIVE IMT B ALARMS:

CARD	DATE	TIME
1102	04-02-23	11:59:23
1103	04-02-23	12:01:23
1204	04-02-23	23:14:07
1205	04-02-23	23:14:07
1206	04-02-23	23:14:07

Command Completed.

;

Legend

IMT—IMT bus A or IMT bus B.

PST—The primary state of the subsystem. The possible values are described in "Possible Values for PST/SST/AST".

SST—The secondary state of the subsystem. The possible values are described in "Possible Values for PST/SST/AST".

AST—The associated state of the subsystem. The possible values are described in "Possible Values for PST/SST/AST".

ALARM STATUS—A listing of any trouble text alarm messages that have been generated for the specified IMT bus.

*****—Minor Alarm

******—Major Alarm

***C**—Critical Alarm

The states of the IMT bus are combined from the PST and the SST as shown in Table 5-66.

Table 5-66. IMT Bus States

PST	SST	Definition
IS-NR	Active	The IMT bus is operating normally.
IS-ANR	Fault	The IMT bus has had a failure on at least one but not all cards.
IS-ANR	Manual	The IMT bus is inhibited, but some cards have been connected to it.
OOS-MT	Fault	The IMT bus has a failure on all cards.
OOS-MT-DSBLD	Manual	The IMT bus is inhibited and no cards are connected to it.

rept-stat-iptps**Report Status IPGWx TPS Utilization**

Use this command to display current and peak IPTPS usage for each IPSP / IPGWx linkset in the system or for each link in the IPSP / IPGWx linkset.

Keyword: **rept-stat-iptps**

Related Commands: **chg-ctrl-feat**, **chg-ls**, **chg-sg-opts**, **enable-ctrl-feat**, **ent-ls**, **rtrv-ctrl-feat**, **rtrv-ls**, **rtrv-sg-opts**

Command Class: System Maintenance

Parameters

:lsn= (optional)

Linkset name. The name of the linkset for which the report information is to be displayed.

Range: *ayyyyyyyyy*

1 alphabetic character followed by up to 9 alphanumeric characters

Default: All linksets are displayed

:peakreset= (optional)

Reset peak values to the current TPS values.

Range: **yes**, **no**

Default: **no**

Example

```
rept-stat-iptps
```

```
rept-stat-iptps:lsn=lsgw1101
```

```
rept-stat-iptps:peakreset=yes
```

Dependencies

If the linksets are not IPGWx or IPSP, then this command cannot be entered.

The specified linkset name must exist in the database.

Notes

Traffic peak data are stored only in OAM memory and are not preserved when the card that is running the OAM boots, or in the case of an active/standby switchover.

IPSP linksets have SLKTPS linksets configured rather than IPTPS linksets. The **rept-stat-iptps** command uses (Number of IS-NR links * SLKTPS) in place of the IPTPS setting for all calculations and alarms.

If the linksets are a mixture of IPLIMx M2PA and IPSTG-M2PA, then the **rept-stat-iptps** command does not report any data or raise alarms.

Output

The **rept-stat-iptps** command reports on IPSG and IPGWx linkset IP TPS. The report includes the following information for the system and for each IPSG or IPGWx linkset:

- Configured IP TPS alarm threshold
- Configured IP TPS
- Current IP TPS transmit and receive usage for 15 seconds
- Peak IP TPS transmit and receive usage and timestamp for all 15 second periods since last reset

If the linkset is specified, then the command reports the same information for the individual links in the linkset.

If the **peakreset=yes** parameter is specified, then the command resets all the stored peak values to the current actual usage for each link, and recalculates linkset and system peaks before reporting usage.

If the linkset is specified with the **peakreset=yes** parameter, then the command recalculates peaks for the specified linkset and resets all the stored peak values to the current actual usage for each link contained in the linkset before reporting usage.

NOTE: The peaks for transmit and receive, and for link, and linkset IP TPS may all occur at different times.

NOTE: The IP TPS value shown in the command may contain one extra MSU if the linkset is specified. Because the alarm calculations are implemented using integer math, rounding may occur at each entity (link, linkset) if the IP TPS value for the entity is not evenly divisible by 15. This could occur when performing an IPTPS report for a linkset that has more than one link configured.

NOTE: For mixed IPLIMx-M2PA and IPSG-M2PA linksets, the command does not report any data or raise alarms.

rept-stat-iptps

```
rlghncxa03w 08-01-23 16:20:46 EST EAGLE 38.0.0
```

IP TPS USAGE REPORT

	THRESH	CONFIG		TPS	PEAK	PEAKTIMESTAMP

LSN						
LSGW1101	80%	4000	TX:	3700	4000	03-05-05 09:49:19
			RCV:	3650	4000	03-05-05 09:49:19
LSGW1103	80%	500	TX:	427	550	03-05-05 09:49:19
			RCV:	312	450	03-05-05 09:49:19

Command Completed.

;

rept-stat-iptps:lsn=lsgw1101

```
rlghncxa03w 08-03-06 09:49:20 EST EAGLE 38.0.0
```

IP TPS USAGE REPORT

	THRESH	CONFIG		TPS	PEAK	PEAKTIMESTAMP

```

LSN
LSGW1101      100%      4000 TX:      800      800 03-05-06 09:49:19
                                   RCV:      800      800 03-05-06 09:49:19
-----
LOC  LINK
1101   A      80%      2000 TX:      400      400 03-05-06 09:49:19
                                   RCV:      400      400 03-05-06 09:49:19
1103   A      80%      2000 TX:      400      400 03-05-06 09:49:19
                                   RCV:      400      400 03-05-06 09:49:19
-----

```

Command Completed.

;

rept-stat-iptps:peakreset=yes

```

rlghncxa03w 08-03-06 09:49:20 EST EAGLE 38.0.0
IP TPS USAGE REPORT

```

```

              THRESH  CONFIG          TPS      PEAK      PEAKTIMESTAMP
-----
LSN
LSN1234567    80%      4000 TX:      4000      4000 03-05-05 09:49:19
                                   RCV:      4000      4000 03-05-05 09:49:19
LSGW1103      80%      500  TX:      427      427 03-05-05 09:49:19
                                   RCV:      312      312 03-05-05 09:49:19
-----

```

Command Completed.

;

Legend

LSN—THE LINKSET NAME.

THRESH—THE THRESHOLD AT WHICH AN ALARM WILL BE GENERATED TO INDICATE THAT THE ACTUAL LINKSET **TPS** IS APPROACHING THE CONFIGURED LINKSET **IPTPS** VALUE (LSUSEALM VALUE AS SHOWN IN RTRV-LS OUTPUT).

CONFIG—THE **IPTPS** VALUE AS SHOWN IN RTRV-LS OUTPUT.

TPS—THE CURRENT TRANSMIT (TX) AND RECEIVE (RCV) **TPS** FOR 15 SECONDS.

PEAK—THE PEAK TRANSMIT (TX) AND RECEIVE (RCV) **TPS** USAGE FOR ALL 15 SECOND PERIODS SINCE THE LAST PEAK RESET.

PEAKTIMESTAMP—THE DATE AND TIME THAT THE DISPLAYED TRANSMIT AND RECEIVE **TPS** PEAKS OCCURRED.

LOC—LOCATION OF THE CARD THAT CONTAINS A DISPLAYED LINK IN THE LINKSET.

PORT—A SIGNALING LINK IN THE LINKSET.

THRESH—THE SLKUSETHRESH VALUE AS SHOWN IN RTRV-LS OUTPUT

CONFIG—DASHES (----). THERE IS NO CONFIGURABLE **TPS** FOR LINKS.

TPS—THE CURRENT TRANSMIT (TX) AND RECEIVE (RCV) **TPS** FOR 15 SECONDS.

PEAK—THE PEAK TRANSMIT (TX) AND RECEIVE (RCV) **TPS** USAGE FOR ALL 15 SECOND PERIODS SINCE THE LAST PEAK RESET.

PEAKTIMESTAMP—THE DATE AND TIME THAT THE DISPLAYED TRANSMIT AND RECEIVE **TPS** PEAKS OCCURRED.

rept-stat-lfs**Report LFS Test Status**

Use this command to generate a report of all the SS7 links that are under LFS test. Along with the link identification information, the command output lists the current LBP, the test pattern, the maximum bit-errors threshold, the bit-errors since the beginning of this test, the maximum test time, and the time elapsed since the beginning of the test.

Keyword: **rept-stat-lfs**

Related Commands: **rept-stat-slk**

Command Class: Link Maintenance

Parameters

:link= (optional)

The signaling link port on the card specified in the **loc** parameter.

Synonym: **port**

Range: **a, b, a1-a31, b1-b31**

Not all card types support all **link** parameter values.

See "Summary of Range Values for :link Parameter" for valid **link** parameter range values for each type of card that can have assigned signaling link ports.

:loc= (optional)

This parameter is mandatory when the **port** parameter is specified.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1212, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

Example

rept-stat-lfs

rept-stat-lfs:loc=1201

rept-stat-lfs:loc=1201:link=a1

Dependencies

The LFS feature must be turned on before this command can be entered.

The card location specified in the **loc** parameter must be equipped.

The signaling link that is specified in the **link** parameter must be assigned to the card in the **loc** parameter location.

Card locations 1113, 1114, 1115, 1116, 1117, 1118, and all xy09 and xy10 locations (x is the frame and y is the shelf) cannot be specified in the loc parameter.

The card location (**loc** parameter) must be a **limds0**, **limt1**, or **limch** (associated with a **limt1**) card configured with either an **ss7ansi** or **ccs7itu** application.

If the **link** parameter is specified, the **loc** parameter must be specified.

This command cannot be entered during upgrade.

Notes

This command can be canceled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

Output

If no parameters are specified, all links that are in LFS test are displayed.

rept-stat-lfs

```
rlghncxa03w 04-02-27 16:50:24 EST EAGLE 31.3.0
SLK      LBP  PATTERN      MAX-ERRORS  BIT_ERRORS  MAX-TIME  TEST-TIME
1201,A    5  B0247          56          30  01:00:00  00:00:50
1202,A    3  B511           56          27  01:00:00  00:01:05
1203,A    1  OCTET           56          12  01:00:00  00:02:07
1204,A    6  ALTERNATE       56          28  01:00:00  00:04:08
1205,A    2  B0247          56          36  01:00:00  00:03:05
1206,A    1  B0247          56          15  01:00:00  00:06:06
1207,A    3  B0247          56          19  01:00:00  00:02:04
1208,A    5  B0247          56          23  01:00:00  00:04:01
;
```

If only the **loc** parameter is specified, all links in LFS test on the specified card are displayed.

rept-stat-lfs:loc=1208

```
rlghncxa03w 04-02-27 16:50:24 EST EAGLE 31.3.0
SLK      LBP  PATTERN      MAX-ERRORS  BIT_ERRORS  MAX-TIME  TEST-TIME
1208,A    5  B0247          56          23  01:00:00  00:04:01
1208,B1   4  B0247          56          23  01:00:00  00:08:01
;
```

If the **loc** and **link** parameters are specified, only the specified link on the specified card is displayed.

rept-stat-lfs:loc=1208:link=a

```
rlghncxa03w 04-02-27 16:50:24 EST EAGLE 31.3.0
SLK      LBP  PATTERN      MAX-ERRORS  BIT_ERRORS  MAX-TIME  TEST-TIME
1208,A    5  B0247          56          23  01:00:00  00:04:01
;
```

Legend

SLK—The signaling link identifier; same as **loc** and **link** parameters of **act-lbp** command.

LBP—The loopback point of this test; same as **lbp** parameter of **act-lbp** command.

PATTERN—The test pattern; same as **pattern** parameter of **act-lbp** command.

MAX-

ERRORS—The bit-error threshold allowed for this LFS test; same as **maxerr** parameter of **act-lbp** command.

BIT_ERRORS—Number of bit-errors since the beginning of this test.

MAX-TIME—The time window for testing each loop-back point; same as **time** parameter of **act-lbp** command.

TEST-TIME—Amount of time the test has run.

rept-stat-lnp**LNP Status Report**

Use this command to generate a report of the local number portability (LNP) status information.

When the **rept-stat-lnp** command is entered with no parameters, a summary of the LNP status of all equipped SCCP cards is provided. This summary includes Global Title Translation (GTT) and LNP function status for every SCCP card, as well as LNPQS system information.

When the **loc** parameter is specified, a detailed status of LNP information for the specified SCCP card is provided. These detailed reports include information for each of the following functions: Global Title Translation (GTT), LNP Message Relay (LNPMR), LNP Query Service (LNPQS), Personal Communication Service LNP Query Service (PLNPQS) (if the PLNP feature is turned on), Wireless LNP Query Service (WNPQS) (if the WNP feature is turned on), Triggerless LNP (TLNP) (if the TLNP feature is turned on), LRNQT (if the ITU TCAP LRN Query feature is turned on), and Automatic Call Gap (ACG).

When the **card=sccp all** parameter is specified, a detailed status of LNP information for all SCCP cards is provided.

Keyword: **rept-stat-lnp**

Related Commands: **chg-th-alm, rept-stat-sccp, rtrv-th-alm**

Command Class: System Maintenance

Parameters

:card= (optional)

Specify **card=sccp-all** to display a report of the LNP status of all equipped SCCP cards. The **card** parameter is not valid with the **loc** parameter.

Range: **sccp-all**

:loc= (optional)

The card location as stenciled on the shelf of the EAGLE 5 ISS. The **loc** parameter is not valid with the **card** parameter.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

Default: A summary for all cards is displayed.

Example

```
rept-stat-lnp
```

```
rept-stat-lnp:card=sccp-all
```

```
rept-stat-lnp:loc=1106
```

Dependencies

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before this command can be entered.

Only one optional parameter can be specified in the command. The **card** and **loc** parameters cannot be specified together in the same command.

The only valid value for the **card** parameter is **sccp-all**.

No other **rept-stat-xxx** command can be in progress when this command is issued.

At least one SCCP card must be configured in the system.

The card location (**loc** parameter) must identify a configured TSM or Service Module card running the **vsccp** or **sccphc** application.

Notes

The error information on this report is based on 30-second intervals. The values for number of errors and total messages are for the last 30-second period. The usage information is also updated once every 30 seconds.

When the **rept-stat-lnp** command is entered with no parameters, a summary of the LNP subsystem status is reported, followed by a summary of the LNP status of all equipped SCCP cards. This summary includes global title translation (GTT) and LNP function status for every SCCP card, as well as LNPQS system information. The GTT status is either ACT (active) or SWDL (software loading). The LNP status is either ACT, OFFLINE, or SWDL. LNPQS system information is then provided in the following fields:

- The ALARM STATUS displays the current alarm on the LNP Subsystem.
- The SSN STATUS and MATE SSN STATUS fields show the state of the LNP subsystems: Prohibited, Restricted, or Allowed.
- The ACG OVERLOAD LEVEL field shows the ACG node overload control level used by the system.
- The system average MIC usage is expressed as a percentage of the number of MICs sent by all cards, divided by the number of responses sent by all cards.

The **rept-stat-lnp** command also provides a summary of the following system-wide LNP statistics.

- The average GTT usage is expressed as the average percentage of GTT usage per card.
- The average LNPMR usage is expressed as the average percentage of LNPMR usage per card.
- The average LNPQS usage is expressed as the average percentage of LNPQS usage per card.
- The average WNPQS usage is expressed as the average percentage of WNPQS usage per card. WNPQS information is displayed only if the WNP feature is turned on.
- The average PLNPQS usage is expressed as the average percentage of PLNPQS usage per card. PLNPQS information is displayed only if the PCS 1900 Number Portability feature (PLNP) is turned on.
- The average LRNQT usage is expressed as the average percentage of LRNQT usage per card. LRNQT information is displayed only if the LRNQT feature is turned on.
- The average CPU usage is expressed as the average percentage of CPU usage per card.
- The total number of GTT, LNPMR, LNPQS, WNPQS (if turned on), TLNP (if turned on), PLNPQS (if turned on), and LRNQT (if turned on) errors for corresponding messages received across all cards.

When the **rept-stat-lnp** command is entered for a specific card (for example, **rept-stat-lnp:loc=xxxx**), status information for the card at the specified location is provided, followed by the alarm status and detailed LNP status information and statistics for each LNP function.

- GTT STATUS, either ACT (active) or SWDL (software loading).
- GTT USAGE, expressed as a percentage of the amount of CPU used to process GTT messages during the last 30 seconds by the specified card.
- GTT ERRORS, the number of GTT errors detected for the total number of GTT messages received by the specified card.
- LNPMR STATUS, either ACT (active), OFFLINE, or SWDL (software loading).
- LNPMR USAGE, expressed as a percentage of the amount of CPU used to process LNP message relay messages during the last 30 seconds by the specified card.
- LNPMR ERRORS, the number of LNP message relay errors detected for the total number of LNP message relay messages received by the specified card.

- LNPQS STATUS, either ACT (active), OFFLINE, and SWDL (software loading).
- LNPQS USAGE, expressed as a percentage of the amount of CPU used to process LNP query messages during the last 30 seconds by the specified card.
- LNPQS ERRORS, the number of LNP query errors detected for the total number of LNP query messages received by the specified card.
- WNPQS STATUS, either ACT (active), OFFLINE, and SWDL (software loading).
- WNPQS USAGE, expressed as a percentage of the amount of CPU used to process WNP query messages during the last 30 seconds by the specified card.
- WNPQS ERRORS, the number of WNP query errors detected for the total number of WNP query messages received by the specified card.

NOTE: IS-41 LNP Queries with a TT associated with the LNPQS service are pegged as IS-41 LNP Queries with a TT associated with the WNP service under the WNPQS counter. The WNPQS STATUS, WNPQS USAGE, and WNPQS ERRORS fields are displayed only if the Wireless Number Portability feature is ON.

- PLNPQS STATUS, either ACT (active), OFFLINE, and SWDL (software loading).
- PLNPQS USAGE, expressed as the amount of CPU used to process PCS 1900 LNP Query messages over the last 30-second period by the specific card.
- PLNPQS ERRORS, the number of PCS query errors detected for the total number of PCS query messages received by the specified card.

NOTE: PCS 1900 LNP Queries with a TT associated with the LNPQS service are processed and pegged as IN LNP Queries under the LNPQS counter. The PLNPQS STATUS, PLNPQS USAGE, and PLNPQS ERRORS fields are displayed only if the PCS 1900 Number Portability (PLNP) feature is ON.

- TLNP STATUS, either ACT (active), OFFLINE, and SWDL (software loading).
- TLNP USAGE, expressed as a percentage of the amount of CPU used to process Triggerless LNP Encapsulated IAM messages over the last 30-second period by the specific card.
- TLNP ERRORS, the number of TLNP query errors detected for the total number of TLNP query messages received by the specified card.

NOTE: The TLNP STATUS, TLNP USAGE, and TLNP ERRORS fields are displayed only if the Triggerless LNP (TLNP) feature is ON.

- LRNQT STATUS, either ACT (active), OFFLINE, and SWDL (software loading).
- LRNQT USAGE, expressed as a percentage of the amount of CPU used to process LRNQT queries over the last 30-second period by the specific card.
- LRNQT ERRORS, the number of LRNQT query errors detected for the total number of LRNQT messages received by the specified card.

NOTE: The LRNQT STATUS, LRNQT USAGE, and LRNQT ERRORS fields are displayed only if the LRNQT feature is ON.

- ACG OVERLOAD LEVEL, the ACG node overload control level being used by the system.
- MIC USAGE, expressed as a percentage of the number of MICs sent by the specific card divided by the number of responses sent by the specified card during the last 30 seconds.

- CPU USAGE, expressed as a percentage of the amount of CPU used to process messages by the specified card during the last 30 seconds.

When the **:card=sccp-all** parameter is specified, detailed information is provided about the status of all SCCP cards. The information displayed in the output is the same as that displayed for the **:loc=xxxx** parameter.

Output

In the following example, the WNP, PLNP, TLNP, and LRNQT features are off.

rept-stat-lnp

```
rlghncxa03w 08-11-14 10:37:22 EST EAGLE 40.0.0
LNP SUBSYSTEM REPORT 00S-MT-DSBLD Active -----
ALARM STATUS = *C 0435 LNP Subsystem is disabled

LNP Cards Configured= 3
CARD PST SST GTT STATUS LNP STATUS CPU USAGE
1106 IS-NR Active ACT OFFLINE 10%
1201 IS-NR Active ACT OFFLINE 12%
1310 00S-MT-DSBLD Manual ----- 0%

LNPQS:
SSN STATUS = Prohibited MATE SSN STATUS = Allowed
ACG: OVERLOAD LEVEL = 0 MIC UASGE = 0%

AVERAGE USAGE:
GTT = 13% LNPMR = 0% LNPQS = 0%
AVERAGE CPU USAGE = 11%
TOTAL ERRORS:
GTT: 0 out of 2000
LNPMR: 0 out of 0
LNPQS: 0 out of 0

PROVISIONED TABLE QTY:
TN: 10 of 24000000 ( 0%)
NPA: 1 of 150000 ( 0%)
LRN: 3 of 100000 ( 0%)
```

Command Completed

;

In the following example, the WNP, PLNP, and TLNP features are on, and the LRNQT feature is off.

rept-stat-lnp

```
rlghncxa03w 08-11-07 08:50:14 EST EAGLE 40.0.0
LNP SUBSYSTEM REPORT IS-ANR Active -----
ASSUMING MATE'S LOAD
ALARM STATUS = No Alarms.

LNP Cards Configured= 5
CARD PST SST GTT STATUS LNP STATUS CPU USAGE
1106 IS-NR Active ACT ACT 23%
1201 IS-ANR Standby SWDL SWDL 0%
1205 00S-MT-DSBLD Manual ----- 0%
1302 00S-MT FLT ----- 0%
1310 IS-ANR Standby ACT SWDL 0%

LNPQS:
SSN STATUS = Allowed MATE SSN STATUS = Prohibited
ACG: OVERLOAD LEVEL = 0 MIC USAGE = 100%

AVERAGE USAGE:
GTT = 13% LNPMR = 0% LNPQS = 0%
WNPQS = 0% TLNP = 10% PLNPQS = 0%

AVERAGE CPU USAGE = 23%
TOTAL ERRORS:
GTT: 1 out of 2000
LNPMR: 0 out of 0
```



```

LNPQS:      1 out of      500
WNPQS:      0 out of      0
PLNPQS:     0 out of      0
TLNP:       1 out of      500

```

PROVISIONED TABLE QTY:

```

TN:         10 of      24000000 ( 0%)
NPA:        1 of      150000 ( 0%)
LRN:        3 of      100000 ( 0%)

```

Command Completed.

;

In the following example, the WNP, PLNP and TLNP features are on, and the LRNQT feature is off.

rept-stat-lnp:loc=1106

```

rlghncxa03w 08-11-14 10:37:22 EST EAGLE 40.0.0
CARD  VERSION      TYPE      PST      SST      AST
1106  021-101-000  TSM      IS-NR      Active  -----
ALARM STATUS      = No Alarms.
GTT:  STATUS = ACT      USAGE = 10%  ERRORS:  1 out of 1000
LNPMR: STATUS = ACT      USAGE = 13%  ERRORS:  0 out of 1300
LNPQS: STATUS = ACT      USAGE = 20%  ERRORS:  1 out of 2000
WNPQS: STATUS = ACT      USAGE =  0%  ERRORS:  0 out of   0
PLNPQS:STATUS = ACT      USAGE =  0%  ERRORS:  0 out of   0
TLNP:  STATUS = ACT      USAGE =  0%  ERRORS:  0 out of   0
ACG:  OVERLOAD LEVEL = 0  MIC USAGE = 100%
CPU USAGE = 43%
Command Completed.

```

;

LNP status command using the **card=** parameter

rept-stat-lnp:card=sccp-all

```

tklc1190601 06-04-05 13:45:02 EST EAGLE5 35.0.0
CARD  VERSION      PST      SST      AST
1205  038-003-013  IS-NR      Active  DB_DIFF
ALARM STATUS      = ** 0451 RTDB reload is required
GTT:  STATUS = ACT      USAGE =  0%  ERRORS:  0 of   0
LNPMR: STATUS = ACT      USAGE =  0%  ERRORS:  0 of   0
LNPQS: STATUS = ACT      USAGE =  0%  ERRORS:  0 of   0
WNPQS: STATUS = ACT      USAGE =  0%  ERRORS:  0 of   0
TLNP:  STATUS = ACT      USAGE =  0%  ERRORS:  0 of   0
PLNPQS:STATUS = ACT      USAGE =  0%  ERRORS:  0 of   0
ACG:  OVERLOAD LEVEL = 0  MIC USAGE =  0%
CPU USAGE =  5%

CARD  VERSION      PST      SST      AST
1317  038-003-013  IS-NR      Active  DB_DIFF
ALARM STATUS      = ** 0451 RTDB reload is required
GTT:  STATUS = ACT      USAGE =  0%  ERRORS:  0 of   0
LNPMR: STATUS = ACT      USAGE =  0%  ERRORS:  0 of   0
LNPQS: STATUS = ACT      USAGE =  0%  ERRORS:  0 of   0
WNPQS: STATUS = ACT      USAGE =  0%  ERRORS:  0 of   0
TLNP:  STATUS = ACT      USAGE =  0%  ERRORS:  0 of   0
PLNPQS:STATUS = ACT      USAGE =  0%  ERRORS:  0 of   0
ACG:  OVERLOAD LEVEL = 0  MIC USAGE =  0%
CPU USAGE =  5%

CARD  VERSION      PST      SST      AST
2213  038-003-013  IS-NR      Active  DB_DIFF
ALARM STATUS      = ** 0451 RTDB reload is required
GTT:  STATUS = ACT      USAGE =  0%  ERRORS:  0 of   0
LNPMR: STATUS = ACT      USAGE =  0%  ERRORS:  0 of   0
LNPQS: STATUS = ACT      USAGE =  0%  ERRORS:  0 of   0
WNPQS: STATUS = ACT      USAGE =  0%  ERRORS:  0 of   0

```

```

      TLNP:  STATUS = ACT      USAGE = 0%  ERRORS:    0 of    0
      PLNPQS:STATUS = ACT      USAGE = 0%  ERRORS:    0 of    0
      ACG:   OVERLOAD LEVEL = 0    MIC USAGE = 0%
      CPU USAGE = 5%

CARD   VERSION      PST      SST      AST
2215   -----      OOS-MT-DSBLD  Manual  -----
      ALARM STATUS      = No Alarms.
      GTT:  STATUS = -----  USAGE = 0%  ERRORS:    0 of    0
      LNPMR: STATUS = -----  USAGE = 0%  ERRORS:    0 of    0
      LNPQS: STATUS = -----  USAGE = 0%  ERRORS:    0 of    0
      WNPQS: STATUS = -----  USAGE = 0%  ERRORS:    0 of    0
      TLNP:  STATUS = -----  USAGE = 0%  ERRORS:    0 of    0
      PLNPQS:STATUS = -----  USAGE = 0%  ERRORS:    0 of    0
      ACG:   OVERLOAD LEVEL = 0    MIC USAGE = 0%
      CPU USAGE = 0%

CARD   VERSION      PST      SST      AST
2217   038-003-013  IS-NR      Active  DB_DIFF
      ALARM STATUS      = ** 0451 RTDB reload is required
      GTT:  STATUS = ACT      USAGE = 0%  ERRORS:    0 of    0
      LNPMR: STATUS = ACT      USAGE = 0%  ERRORS:    0 of    0
      LNPQS: STATUS = ACT      USAGE = 0%  ERRORS:    0 of    0
      WNPQS: STATUS = ACT      USAGE = 0%  ERRORS:    0 of    0
      TLNP:  STATUS = ACT      USAGE = 0%  ERRORS:    0 of    0
      PLNPQS:STATUS = ACT      USAGE = 0%  ERRORS:    0 of    0
      ACG:   OVERLOAD LEVEL = 0    MIC USAGE = 0%
      CPU USAGE = 5%

CARD   VERSION      PST      SST      AST
2317   -----      OOS-MT      Isolated  -----
      ALARM STATUS      = ** 0013 Card is isolated from the system
      GTT:  STATUS = -----  USAGE = 0%  ERRORS:    0 of    0
      LNPMR: STATUS = -----  USAGE = 0%  ERRORS:    0 of    0
      LNPQS: STATUS = -----  USAGE = 0%  ERRORS:    0 of    0
      WNPQS: STATUS = -----  USAGE = 0%  ERRORS:    0 of    0
      TLNP:  STATUS = -----  USAGE = 0%  ERRORS:    0 of    0
      PLNPQS:STATUS = -----  USAGE = 0%  ERRORS:    0 of    0
      ACG:   OVERLOAD LEVEL = 0    MIC USAGE = 0%
      CPU USAGE = 0%

CARD   VERSION      PST      SST      AST
1105   038-003-013  IS-NR      Active  DB_DIFF
      ALARM STATUS      = ** 0451 RTDB reload is required
      GTT:  STATUS = ACT      USAGE = 0%  ERRORS:    0 of    0
      LNPMR: STATUS = ACT      USAGE = 0%  ERRORS:    0 of    0
      LNPQS: STATUS = ACT      USAGE = 1%  ERRORS:    0 of 1003
      WNPQS: STATUS = ACT      USAGE = 0%  ERRORS:    0 of    0
      TLNP:  STATUS = ACT      USAGE = 0%  ERRORS:    0 of    0
      PLNPQS:STATUS = ACT      USAGE = 0%  ERRORS:    0 of    0
      ACG:   OVERLOAD LEVEL = 0    MIC USAGE = 0%
      CPU USAGE = 7%

```

Command Completed.

;

In the following example, an LNP feature (LNP ported TNs) quantity greater than 120 million numbers is enabled, the WNP, PLNP and TLNP features are on, and the LRNQT feature is off.

rept-stat-lnp

```

Integrat40 08-11-14 10:37:22 EST  EAGLE5 40.0.0
LNP SUBSYSTEM REPORT IS-ANR      Active  -----
      ASSUMING MATE'S LOAD
      ALARM STATUS      = No Alarms.

LNP Cards Configured= 5

```

CARD	PST	SST	GTT STATUS	LNP STATUS	CPU USAGE
1106	IS-NR	Active	ACT	ACT	23%
1201	IS-ANR	Standby	SWDL	SWDL	0%
1205	OOS-MT-DSBLD	Manual	-----	-----	0%
1302	OOS-MT	FLT	-----	-----	0%
1310	IS-ANR	Standby	ACT	SWDL	0%

LNPQS:

SSN STATUS = Allowed MATE SSN STATUS = Prohibited
 ACG: OVERLOAD LEVEL = 0 MIC USAGE = 100%

AVERAGE USAGE:

GTT = 13% LNPMT = 0% LNPQS = 0%
 WNPQS = 0% TLNP = 10% PLNPQS = 0%

AVERAGE CPU USAGE = 23%

TOTAL ERRORS:

GTT:	1 out of	2000
LNPMT:	0 out of	0
LNPQS:	0 out of	0
WNPQS:	0 out of	0
PLNPQS:	0 out of	0
TLNP:	1 out of	500

PROVISIONED TABLE QTY:

TN:	76800000 of	96000000 (80%)
NPA:	135000 of	150000 (90%)
LRN:	90000 of	100000 (90%)

Command Completed.

;

In the following example, the WNP, PLNP, TLNP, and LRNQT features are on.

rept-stat-lnp

rlghncxa03w 08-10-01 08:50:14 EST EAGLE 40.0.0

LNP SUBSYSTEM REPORT IS-ANR Active -----

ASSUMING MATE'S LOAD

LNP Cards Configured= 5

CARD	PST	SST	GTT STATUS	LNP STATUS	CPU USAGE
1106	IS-NR	Active	ACT	ACT	28%
1201	IS-ANR	Standby	SWDL	SWDL	0%
1205	OOS-MT-DSBLD	Manual	-----	-----	0%
1302	OOS-MT	Fault	-----	-----	0%
1310	IS-ANR	Standby	ACT	SWDL	0%

LNPQS:

SSN STATUS = Allowed MATE SSN STATUS = Prohibited
 ACG: OVERLOAD LEVEL = 0 MIC USAGE = 100%

AVERAGE USAGE:

GTT = 13% LNPMT = 0% LNPQS = 0%
 WNPQS = 0% TLNP = 10% PLNPQS = 0%
 LRNQT = 5%

AVERAGE CPU USAGE = 28%

TOTAL ERRORS:

GTT:	1 out of	2000
LNPMT:	0 out of	0
LNPQS:	1 out of	500
WNPQS:	0 out of	0
PLNPQS:	0 out of	0
TLNP:	1 out of	500
LRNQT:	0 out of	700

Command Completed.

;

In the following example, the WNP, PLNP, TLNP, and LRNQT features are on.

rept-stat-lnp:loc=1106

```
rlghncxa03w 08-10-01 10:37:22 EST EAGLE 40.0.0
CARD  VERSION      TYPE    PST      SST      AST
1106  021-101-000  TSM    IS-NR    Active  -----
ALARM STATUS      = No Alarms.
GTT:  STATUS = ACT      USAGE = 10%  ERRORS:  1 out of 1000
LNPMR: STATUS = ACT      USAGE = 13%  ERRORS:  0 out of 1300
LNPQS: STATUS = ACT      USAGE = 20%  ERRORS:  1 out of 2000
WNPQS: STATUS = ACT      USAGE =  0%  ERRORS:  0 out of   0
PLNPQS:STATUS = ACT      USAGE =  0%  ERRORS:  0 out of   0
TLNP:  STATUS = ACT      USAGE =  0%  ERRORS:  0 out of   0
LRNQT: STATUS = ACT      USAGE =  0%  ERRORS:  0 out of   0
ACG:  OVERLOAD LEVEL = 0    MIC USAGE = 100%
CPU USAGE = 43%
Command Completed.
```

;

Legend

CARD—The locations of the SCCP cards.

VERSION—The version number of the GPL the cards are running.

TYPE—The type of SCCP card.

PST—The primary state of the card. The possible values are described in "Possible Values for PST/SST/AST" in Appendix A.

SST—The secondary state of the card. The possible values are described in "Possible Values for PST/SST/AST" in Appendix A.

AST—The associated state of the card. The possible values are described in in Appendix A.

rept-stat-ls

Report Status Linkset

Use this command to generate a report of the status of the MTP linksets. When a specific linkset is requested, the output displays a list of the links in the linkset and their secondary status. Output is generated for each of the 16 signaling link codes (SLC).

NOTE: If the Multiple Linksets to Single Adjacent Point Code (MLS) feature is turned on, and an adjacent destination point code is requested, then the output displays a summary status, including the secondary point codes, of the linksets that use that adjacent point code.

Keyword: rept-stat-ls

Related Commands: chg-ls, dlt-ls, ent-ls, rtrv-ls

Command Class: System Maintenance

Parameters

:apc= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The prefix subfield indicates a private point code (*prefix-ni-nc-ncm*).

Range: p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001-005.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:apc/apca/apci/apcn/apcn24= (optional)

Adjacent point code.

:apci= (optional)

ITU international point code with subfields *zone-area-id*. The prefix subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:apcn= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (*members*) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The prefix subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:apcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The prefix indicates a private point code (*prefix-msa-ssa-sp*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:lsn= (optional)

Linkset name. The name of the linkset for which the report information is to be displayed.

Range: **ayyyyyyyy**

1 alphabetic character followed by up to 9 alphanumeric characters

Default: All linksets are displayed

:stat= (optional)

The primary state filter. This parameter indicates the state of the linksets for which a report will be displayed. For example, to display a report for all linksets whose state is DSBLD, specify the **stat=dsbld** parameter.

Range: **all, alminh, anr, dsbld, mt, nr**
 all — All of the primary states
 alminh — Alarms inhibited
 anr — In-Service-Abnormal (IS-ANR)
 dsbld — Out-of-Service-Maintenance-Disabled (OOS-MT-DSBLD)
 mt — Out-of-Service-Maintenance (OOS-MT)
 nr — In-Service-Normal (IS-NR)

Default: **all**

Example

```
rept-stat-ls
```

```
rept-stat-ls:lsn=lsnstpa
```

Dependencies

No other **rept-stat-xxx** command can be in progress when this command is entered.

The linkset specified by the **lsn** parameter must be equipped in the database.

If the **stat** parameter is specified, then the **lsn** parameter cannot be specified and vice versa.

The Multiple Linksets to a Single Adjacent Point Code (MLS) feature must be turned on before the **apc** parameter can be specified.

The **lsn**, **stat**, and **apc** parameters cannot be specified together in the command.

At least one linkset must be associated with the value of the **apc** parameter.

Notes

This command can be canceled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

If no link is equipped for the SLC, the output is “____ UEQ.”

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (**s-**) and the private and spare point code subtype prefix (**ps-**). All of the point code types support the private (internal) point code subtype prefix (**p-**).

"ASP-STATE" is shown for only IPSPG-M3UA linksets.

Output

If the Proxy Point Code feature is enabled, then proxy point code information is displayed.

rept-stat-ls

```
eagle10207 08-02-23 10:09:59 EST EAGLE 38.0.0
LSN          APCA          PST          SST          AST
ls11234567   001-001-002           00S-MT       Prohibit     GWS
ls11345678   001-001-003           00S-MT       Prohibit     -----
ls11345679   001-001-004           00S-MT       Idle         -----
ls1134567     001-001-005           00S-MT       Prohibit     -----
ls113456      001-001-006           00S-MT       Prohibit     -----
ls11345       001-001-007           00S-MT       Prohibit     GWS
ls113467     001-001-008           00S-MT       Prohibit     -----
ls1134       001-001-009           00S-MT       Prohibit     -----
ls987        009-008-007           00S-MT       Idle         -----
z            009-008-009           00S-MT       Idle         -----
cap8         008-008-008           00S-MT       Idle         -----

LSN          APCN          PST          SST          AST
lsnational   16383-aa              00S-MT       Idle         -----

LSN          APCN24          PST          SST          AST

LSN          APCI          PST          SST          AST
Command Completed.
```

;

The following example includes output for a specific linkset when either the MLS feature is not turned on or when the linkset is not created with a secondary point code.

rept-stat-ls:lsn=lsnstpa

```
eagle10207 08-02-23 10:09:59 EST EAGLE 38.0.0

LSN          APCA          PST          SST          AST
lsnstpa      110-15-08       IS-NR        Allowed     -----
SPCA = -----
ALARM STATUS = No Alarms.
SCRSET = ----
GWSA = ----
GWSM = ----
GWSD = ----
SLC SLK      SST          SLC SLK      SST
0  1207,A Avail      8  ----,- UEQ
1  1203,A Avail      9  ----,- UEQ
2  1103,B LPBK       10 ----,- UEQ
3  ----,- UEQ        11 ----,- UEQ
4  ----,- UEQ        12 ----,- UEQ
5  ----,- UEQ        13 ----,- UEQ
6  ----,- UEQ        14 ----,- UEQ
7  ----,- UEQ        15 ----,- UEQ
Command Completed.
```

;

The following example includes output for linksets that contain 24-bit ITU-N adjacent point codes.

rept-stat-ls

```
tekelecstp 02-03-20 21:22:04 EST EAGLE 31.0.0
LSN          APCA          PST          SST          AST
lsansi       001-005-001           00S-MT       Prohibit     -----

LSN          APCN          PST          SST          AST

LSN          APCN24          PST          SST          AST
ls24         004-004-004           00S-MT       Prohibit     -----
test20       020-020-020           00S-MT       Idle         -----
```

```

      LSN      APCI      PST      SST      AST
      Command Completed.
;

```

The following example includes output for linksets that contain spare and private adjacent point codes.

rept-stat-ls

```

tekelecstp 02-03-20 21:22:04 EST EAGLE 31.12.0
LSN      APCA      PST      SST      AST
ls11234567 001-001-002 00S-MT  Prohibit GWS
ls11345678 001-001-003 00S-MT  Prohibit -----
ls11345679 001-001-004 00S-MT  Idle -----
ls1134567 001-001-005 00S-MT  Prohibit -----
ls113456 001-001-006 00S-MT  Prohibit -----
ls11345 p-001-001-007 00S-MT  Prohibit GWS
ls113467 001-001-008 00S-MT  Prohibit -----
ls1134 p-001-001-009 00S-MT  Prohibit -----
ls987 009-008-007 00S-MT  Idle -----
z 009-008-009 00S-MT  Idle -----
cap8 008-008-008 00S-MT  Idle -----

LSN      APCN      PST      SST      AST
lsnational s-09-14-05-3-ab 00S-MT  Idle -----

LSN      APCN24      PST      SST      AST

LSN      APCI      PST      SST      AST
      Command Completed.
;

```

The following example includes output for a specific linkset when the Multiple Linksets to a Single Adjacent Point Code (MLS) feature is turned on, and the linkset is created with a secondary point code.

rept-stat-ls:lsn=lsnstpa

```

eagle10207 08-02-23 10:09:59 EST EAGLE 38.0.0
LSN      APCA      PST      SST      AST
lsnstpa 110-15-08 IS-NR      Allowed -----
      SPCA = 120-10-01
      ALARM STATUS = No Alarms.
      SCRSET = ----
      GWSA = ----
      GWSM = ----
      GWSD = ----

SLC SLK      SST      SLC SLK      SST
0 1207,A Avail 8 ----,- UEQ
1 1203,A Avail 9 ----,- UEQ
2 1103,B LPBK 10 ----,- UEQ
3 ----,- UEQ 11 ----,- UEQ
4 ----,- UEQ 12 ----,- UEQ
5 ----,- UEQ 13 ----,- UEQ
6 ----,- UEQ 14 ----,- UEQ
7 ----,- UEQ 15 ----,- UEQ
      Command Completed.
;

```

The following example includes output when the MLS feature turned on, and information is requested for a specific adjacent destination point code.

rept-stat-ls:apc=1-1-2

```

eagle10207 07-07-23 10:09:59 EST EAGLE 37.5.0

APCA = 001-001-002
LSN      SPCA      PST      SST      AST
ls11234567 001-005-003 00S-MT  Prohibit GWS

```



```

ls1134567      004-008-002    OOS-MT      Prohibit  -----
ls113456      014-012-094    OOS-MT      Prohibit  -----
Command Completed.

```

;

The following example includes output that demonstrates the possible duplication of adjacent point code values when the MLS feature is turned on.

rept-stat-ls

```

eagle10207 07-07-23 10:09:59 EST EAGLE 37.5.0

```

LSN	APCA	PST	SST	AST
ls11234567	001-001-002	OOS-MT	Prohibit	GWS
ls11345678	001-001-002	OOS-MT	Prohibit	-----
ls11345679	001-001-004	OOS-MT	Idle	-----
ls1134567	001-001-005	OOS-MT	Prohibit	-----
ls113456	001-001-002	OOS-MT	Prohibit	-----
ls11345	p-001-001-007	OOS-MT	Prohibit	GWS
ls113467	001-001-008	OOS-MT	Prohibit	-----
ls1134	p-001-001-009	OOS-MT	Prohibit	-----
ls987	009-008-007	OOS-MT	Idle	-----
z	009-008-009	OOS-MT	Idle	-----
cap8	008-008-008	OOS-MT	Idle	-----
LSN	APCN	PST	SST	AST
lsnational	s-09-14-05-3-ab	OOS-MT	Idle	-----
LSN	APCN24	PST	SST	AST
LSN	APCI	PST	SST	AST

The following example displays information of a specified linkset when the Proxy Point Code feature is enabled.

rept-stat-ls:lsn=lsnstpa

```

tekelecstp 08-02-29 11:05:47 EST EAGLE 38.0.0

```

LSN	APCA	PST	SST	AST
lsnstpa	110-15-08	IS-NR	Allowed	-----
PPCA	= 100-12-04			
ALARM STATUS	= No Alarms.			
SCRSET	= ----			
GWSA	= ----			
GWSM	= ----			
GWSD	= ----			
SLC	SLK	SST	SLC	SLK
0	1207,A	Avail	8	-----,-
1	1203,A	Avail	9	-----,-
2	1103,B	LPBK	10	-----,-
3	-----,-	UEQ	11	-----,-
4	-----,-	UEQ	12	-----,-
5	-----,-	UEQ	13	-----,-
6	-----,-	UEQ	14	-----,-
7	-----,-	UEQ	15	-----,-

;

The following example displays proxy linksets using a specified adjacent point code. The MLS feature must be turned on in order to retrieve information for an adjacent point code.

rept-stat-ls:apc=1-1-2

```

tekelecstp 07-03-29 11:05:47 EST EAGLE 37.5.0

```

APCA	=	001-001-002			
LSN	PPCA	PST	SST	AST	
ls11234567	001-005-003	OOS-MT	Prohibit	GWS	
ls11345678	004-008-002	OOS-MT	Prohibit	-----	
ls113456	014-012-094	OOS-MT	Prohibit	-----	

;

The following command shows the ASP state for IPSG-M3UA linksets state when the linkset is specified.

rept-stat-ls: lsn=ls1305a

```
tekelecstp 08-01-29 18:15:20 EST EAGLE 38.0.0
LSN          APCA          PST          SST          AST
ls1305a      005-213-000    IS-NR          Allowed    -----
SPCA        = -----
ALARM STATUS = No Alarms.
SCRSET      = ----
GWSA        = ----
GWSM        = ----
GWSD        = ----
SLC SLK      SST          ASP STATE    SLC SLK      SST          ASP STATE
0  1305,A    Avail      ACTIVE      8  ----,--- UEQ          -----
1  1305,A1   Unavail    DOWN       9  ----,--- UEQ          -----
2  ----,--- UEQ          ----- 10 ----,--- UEQ          -----
3  ----,--- UEQ          ----- 11 ----,--- UEQ          -----
4  ----,--- UEQ          ----- 12 ----,--- UEQ          -----
5  ----,--- UEQ          ----- 13 ----,--- UEQ          -----
6  ----,--- UEQ          ----- 14 ----,--- UEQ          -----
7  ----,--- UEQ          ----- 15 ----,--- UEQ          -----
```

Command Completed.

;

Legend

LSN—The name of the linkset

APCA/APCI/APCN/APCN24—The adjacent point code of the linkset (ANSI, ITU-I, ITU-N, ITU-N 24-bit)

SPCA/SPCI/SPCN/SPCN24—The secondary point code of the linkset (ANSI, ITU-I, ITU-N, ITU-N 24-bit)

PST—The primary state of the linkset. The possible values are described in "Possible Values for PST/SST/AST".

SST—The secondary state of the linkset. The possible values are described in "Possible Values for PST/SST/AST".

AST—The associated state of the linkset. The possible values are described in "Possible Values for PST/SST/AST".

ALARM STATUS—A listing of any trouble text alarm messages that have been generated for the specified card.

SCRN—The name of the gateway screening screen set associated with the linkset.

GWSA—Shows whether gateway screening is used for the specified linkset.

GWSM—Shows whether gateway screening messaging is turned on for the specified linkset.

GWSD—Shows whether the discarding of MSUs that bypass the gateway screening function due to load-shedding is turned on.

SLC—The signaling link codes associated with the links that are contained in the specified linkset.

SLK—The signaling links that are contained in the linkset, shown by the card location containing the signaling link and the port on the card containing the signaling link.

PPCA/PPCI/PPCN/PPCN24—The proxy point code of the linkset (ANSI, ITU-I, ITU-N, ITU-N 24-bit)

ASP STATE—The state of AS associated with each signaling link of the IPSG-M3UA linkset. The states displayed are: ACTIVE, INACTIVE, or DOWN.

rept-stat-meas**Report Measurement Status**

Use this command to report the status of the Measurements Subsystem (Measurements Platform), including card location and state, alarm level, and subsystem state.

Keyword: **rept-stat-meas**

Related Commands: **rept-stat-card**

Command Class: System Maintenance

Parameters

This command has no parameters.

Example

rept-stat-meas

Dependencies

The Measurements Platform feature must be turned on prior to issuing this command.

At least one MCPM card must be configured in the system.

No other **rept-stat-xxx** commands can be in progress when this command is issued.

Notes

The MCPM card status is independent of the IP Network Link status (Port A). The card can be IS-NR even if the network link has failed.

The version of the GPL is shown in the command output if the MCPM card is in the IS-NR or IS-ANR state. (The **rept-stat-card** command will not show the GPL version if the card is ISANR.)

Output

Output example with one MCP card isolated:

rept-stat-meas

```

MEAS SS          PST          SST          AST
IS-ANR          Active        -----
ALARM STATUS =  * 0516 Degraded Mode - 1 card failed

CARD  VERSION    TYPE    PST          SST          AST
1107 P 101-009-000  EDSM    IS-NR          Active        -----
      IP Link A      IS-NR          Active        -----
1109 -----      EDSM    OOS-MT          Isolated      -----
      IP Link A      OOS-MT          Unavail       -----

CARD 1107 ALARM STATUS = No Alarms
CARD 1109 ALARM STATUS = Card is isolated from the system
Command Completed.

```

;

Output example with both MCP cards IS-NR:

rept-stat-meas

```

MEAS SS          PST          SST          AST
IS-NR          Active        -----
ALARM STATUS =  No Alarms

CARD  VERSION    TYPE    PST          SST          AST
1107 P 046-010-004  EDSM    IS-NR          Active        -----
      IP Link A      IS-NR          Active        -----
1109 046-010-004  EDSM    IS-NR          Active        -----
      IP Link A      OOS-MT          Unavail       -----

CARD 1105 ALARM STATUS = No Alarms
CARD 1106 ALARM STATUS = No Alarms

Command Completed.

```

;

Legend

VERSION—The version number of the GPL that the specified MCPM card is running. The version is shown if the card is in the IS-NR or IS-ANR state.

TYPE—EDSM; the MCPM card that is running the Measurements Subsystem application.

PST—The primary state of the Measurements Subsystem or card. The possible values are described in "Possible Values for PST/SST/AST".

SST—The secondary state of the Measurements Subsystem or card. The possible values are described in "Possible Values for PST/SST/AST".

AST—The associated state of the Measurements Subsystem or card. The possible values are described in .

MEAS SS—The Measurements Subsystem application running on the MCPM card.

ALARM STATUS—A listing of any trouble text alarm messages that have been generated for the MCPM card and the applications running on the card.

CARD—The location of the MCPM card. The card with the letter “P” to the right of its card location is the primary card. The primary card transfers scheduled measurements report files to the primary FTP server. When the primary state (PST) of the card is IS-NR, the secondary state (SST) indicates whether the card is active or standby.

CARD XXXX ALARM STATUS—A listing of any trouble text alarm messages that have been generated for the card.

rept-stat-mon

Report Status Monitoring System

Use this command to display the status of the Fast Copy subsystem on FC-capable cards and the EROUTE subsystem on STC cards and E5-STC cards for the EAGLE 5 Integrated Monitoring Support (E5IS) feature.

Keyword: **rept-stat-mon**

Related Commands:

Command Class: System Maintenance

Parameters

:loc= (optional)

Card location. This parameter specifies the card location that is stenciled on the shelf for an STC or E5-STC card or an FC-capable card in the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Default: Status for all STC and FC-capable cards is reported.

:mode= (optional)

This parameter specifies the mode of reporting for the command.

If the **mode=perf** parameter is specified, then only subsystem performance information is displayed.

Range: perf

:type= (optional)

Monitoring subsystem type. This parameter specifies the type of the subsystem for which the monitoring statistics are displayed.

Range: fcs, eroute

fcs — Display the statistics for the Fast Copy subsystem

eroute — Display the statistics for the EROUTE subsystem

Default: Display the statistics for both the EROUTE and FC subsystems

Example

```
rept-stat-mon
```

```
rept-stat-mon:type=eroute
```

```
rept-stat-mon:type=fcs
```

```
rept-stat-mon:type=eroute:loc=1101
```

```
rept-stat-mon:type=fcs:loc=1104
```

```
rept-stat-mon:type=eroute:mode=perf
```

Dependencies

No other **rept-stat-xxx** command can be in progress when this command is entered.

At least one STC card must be configured before this command can be entered.

At least one FC-capable card must be provisioned in the system before the **type=fcs** parameter can be specified.

The **loc** and **mode** parameters cannot be specified together in the command.

The **type=eroute** parameter must be specified before the **mode** parameter can be specified.

If the **loc** or **mode** parameters are specified, then the **type** parameter must be specified.

Either an STC card or an FC-capable card must be provisioned in the system.

An FC-capable card must be provisioned in the system before the **type=fcs** parameter can be specified. An STC card must be provisioned in the system before the **type=eroute** parameter can be specified.

Notes

Fast Copy Cards

A card that can run the Fast Copy interface is referred to as an *FC-capable* card. Currently, E5-ENET cards running the **ipsg** application are the only supported FC-capable cards. After the **fcmode=fcopy** parameter is specified (see the **chg-eisopts** command) for an FC-capable card, the card is referred to as an *FC-enabled* card.

Output

The following example displays card- and system-level information for the Fast Copy and EROUTE subsystems.

rept-stat-mon

```
rlghncxa03w 08-12-11 16:35:57 IST EAGLE 40.1.0
EROUTE SUBSYSTEM REPORT IS-NR      Active      -----
STC Cards Configured= 4  Cards IS-NR= 2
EISCOPY BIT = ON
System Threshold = 80% Total Capacity
System Peak EROUTE Load:          7080 Buffers/Sec
System Total EROUTE Capacity:      12000 Buffers/Sec

SYSTEM ALARM STATUS = No Alarms.
```

CARD	VERSION	PST	SST	AST	TVG USAGE	CPU USAGE
1101	052-008-000	IS-NR	Active	-----	63%	28%
1103	052-008-001	IS-NR	Active	-----	55%	28%
1105	255-255-255	OOS-MT	Isolated	-----	0%	0%
1205	255-255-255	OOS-MT	Isolated	-----	0%	0%

```
EROUTE Service Average TVG Capacity = 59% Average CPU Capacity = 28%

CARDS DENIED EROUTE SERVICE:

=====

FAST COPY SUBSYSTEM REPORT IS-NR      Active      -----
FC Cards Configured= 3  Cards IS-NR= 3
FC MODE = FCOPY
SYSTEM ALARM STATUS = No Alarms.
```

CARD	PST	SST	CPU USAGE	CARD FCS STATUS
1201	IS-NR	Active	34%	ALLOWED
1202	IS-NR	Active	55%	ALLOWED
1203	IS-NR	Active	10%	ALLOWED

```
Command Completed.
```

;

The following example displays card- and system-level information for the EROUTE subsystem.

rept-stat-mon:type=eroute

```
rlghncxa03w 08-12-11 16:35:57 IST EAGLE 40.1.0
EROUTE SUBSYSTEM REPORT IS-NR      Active      -----
STC Cards Configured= 4  Cards IS-NR= 2
EISCOPY BIT = ON
System Threshold = 80% Total Capacity
System Peak EROUTE Load:          7080 Buffers/Sec
System Total EROUTE Capacity:      12000 Buffers/Sec

SYSTEM ALARM STATUS = No Alarms.
```

CARD	VERSION	PST	SST	AST	TVG USAGE	CPU USAGE
1101	052-008-000	IS-NR	Active	-----	63%	28%
1103	052-008-001	IS-NR	Active	-----	55%	28%
1203	255-255-255	OOS-MT	Isolated	-----	0%	0%
1205	255-255-255	OOS-MT	Isolated	-----	0%	0%

```
-----
EROUTE Service Average TVG Capacity = 59% Average CPU Capacity = 28%
```

```
CARDS DENIED EROUTE SERVICE:
```

```
Command Completed.
```

```
;
```

The following example displays card- and system-level information for the Fast Copy subsystem.

rept-stat-mon:type=fcs

```
rlghncxa03w 08-12-11 16:35:57 IST EAGLE 40.1.0
FAST COPY SUBSYSTEM REPORT IS-NR Active -----
FC Cards Configured= 3 Cards IS-NR= 3
FC MODE = FCOPY
SYSTEM ALARM STATUS = No Alarms.
```

CARD	PST	SST	CPU USAGE	CARD FCS STATUS
1201	IS-NR	Active	34%	ALLOWED
1202	IS-NR	Active	55%	ALLOWED
1203	IS-NR	Active	10%	ALLOWED

```
Command Completed.
```

```
;
```

The following example displays EROUTE subsystem information for the specified card.

rept-stat-mon:type=eroute:loc=1101

```
rlghncxa03w 08-12-11 16:35:57 IST EAGLE 40.1.0
CARD VERSION TYPE PST SST AST
1101 052-008-000 STC IS-NR Active -----
CARD ALARM STATUS = No Alarms.
TOTAL CPU USAGE = 28%
NTP broadcast = VALID
STC IP PORT A: IS-NR Active -----
ALARM STATUS = No Alarms.
STC IP PORT B: OOS-MT Unavail -----
ALARM STATUS = ** 0084 IP Connection Unavailable
ERROR STATUS = DHCP Lease. Physical Link.
```

```
Command Completed.
```

```
;
```

The following example displays Fast Copy subsystem information for the specified card.

(A) or (B) in the IMF CONNECTION STATUS TABLE indicates the Fast Copy A or Fast Copy B network, respectively.

rept-stat-mon:type=fcs:loc=1104

```
rlghncxa03w 08-12-11 16:35:57 IST EAGLE 40.1.0
CARD PST SST CPU CARD FCS
USAGE STATUS
1203 IS-NR Active 10% ALLOWED
ALARM STATUS = No Alarms.

FCS IP PORT A1: IS-NR Active -----
ALARM STATUS = No Alarms.
FCS IP PORT B1: IS-NR Active -----
ALARM STATUS = No Alarms.
```

IMF CONNECTION STATUS TABLE

IPADDRESS	ALARM ID	ASSOCIATION NAME	PACKET COUNT	SERVICE MODE

172.021.48.15	(A) 582	sg1203a21	100	Copy Rx MSUs
172.022.48.15	(B) 582	sg1203a22	200	Copy Tx MSUs

PORT ALARM STATUS

PORT ID	ALARM ID	REASON

A	583	Mismatched Fast Copy Network Addresses

Command Completed.

;

The following example displays EROUTE subsystem performance statistics.

rept-stat-mon:type=eroute:mode=perf

```
rlghncxa03w 08-12-11 16:35:57 IST EAGLE 40.1.0
EROUTE SUBSYSTEM REPORT IS-ANR Ovrflw=1 -----
STC Cards Configured= 2 Cards IS-NR= 2
EISCOPY BIT = ON
System Threshold = 80% Total Capacity
System Peak EROUTE Load: 12200 Buffers/Sec
System Total EROUTE Capacity: 12000 Buffers/Sec
```

SYSTEM ALARM STATUS = * 0482 Card(s) have been denied EROUTE service

STATISTICS

CARD	CPU USAGE	TVG RATE

1104	55%	6200
1112	50%	6000

```
AVERAGE TVG Capacity = 80%
AVERAGE CPU USAGE = 27%
TOTAL TVG RATE = 12200
```

CARDS DENIED EROUTE SERVICE: 1302, 1305

Command Completed.

;

The following example displays output when FC-capable cards are configured, and the Fast Copy mode is turned off.

rept-stat-mon:type=fcs

```
rlghncxa03w 08-12-11 16:35:57 IST EAGLE 40.1.0
FAST COPY SUBSYSTEM REPORT OOS-MA Ueq -----
FC Cards Configured= 2 Cards IS-NR= 2
FC MODE = OFF
SYSTEM ALARM STATUS = No Alarms.
```

CARD	PST	SST	CPU USAGE	CARD FCS STATUS
1105	IS-NR	Active	10%	OFFLINE
1106	IS-NR	Active	15%	OFFLINE

Command Completed.

;

Legend

Information displayed in the EROUTE subsystem report:

- **STC CARDS CONFIGURED**—Total number of STC cards and E5-STC cards configured in the system
- **CARDS IS-NR**—Total number of STC cards and E5-STC cards in IS-NR state
- **EISCOPY BIT**—Indicates whether EIS copy function is turned On or Off
- **SYSTEM THRESHOLD**—% of system total capacity being used
- **SYSTEM PEAK EROUTE LOAD**—Current load in Buffers/Sec
- **SYSTEM TOTAL EROUTE CAPACITY**—Total capacity in Buffers/Sec
- **SYSTEM ALARM STATUS**—Either "No Alarms" or current alarm number and text
- **CARD**—Card location
- **VERSION**—The version number of the GPL loaded on the card. Dashes (- - - -) in the version column indicate one of the following conditions about the card:
 - The card does not run a GPL, such as TDM or MDAL cards.
 - The card is configured but is not physically present in the system.
 - The card is IS-ANR or is in the process of being loaded.
- **TYPE**—The card type entered in the database.
- **PST**—The primary state of the card. The possible values are described in "Possible Values for PST/SST/AST".
- **SST**—The secondary state of the card. The possible values are described in "Possible Values for PST/SST/AST".
- **AST**—The associated state of the card. The possible values are described in "Possible Values for PST/SST/AST".
- **EROUTE SERVICE AVERAGE TVG CAPACITY**—Average TVG Capacity in percent.
- **AVERAGE CPU CAPACITY**—Average CPU capacity in percent.
- **TVG USAGE**—% of system current TVG rate based on the Max TVG capacity of the E5-ENET card
- **CPU USAGE**—% of system current CPU usage
- **STC IP PORT**—The status of the STC IP ports A and B

Information displayed in the Fast Copy subsystem report:

- **FC CARDS CONFIGURED**—The total number of FC-capable cards configured in the system.
- **CARDS IS-NR**—Total number of FC-capable cards in IS-NR state
- **FCMODE**—Indicates the monitoring mode
- **SYSTEM ALARM STATUS**—Either "No Alarms" or current alarm number and text
- **CARD**—Card location
- **PST**—The primary state of the card. The possible values are described in "Possible Values for PST/SST/AST".
- **SST**—The secondary state of the card. The possible values are described in "Possible Values for PST/SST/AST".

- **CPU USAGE**—% of system current CPU usage
- **CARD FCS STATUS**—The status of FCS FC-capable card
- **FCS IP PORT**—The status of the FCS IP ports A1 and B1
- **IPADDRESS**—The IP addresses of the IMF
- **ASSOCIATION NAME**—Association name
- **PACKET COUNT**—Snapshot of packets received/sent per association
- **SERVICE MODE**—Indicate the type of service granted by the DAS to FC-enabled card

rept-stat-mps

Report the MPS Status

Use this command to display the overall status of the application running on the MPS (multi-purpose server).

- If the LNP ELAP Configuration feature is enabled and turned on, then the ELAP (EAGLE LNP Application Processor) subsystem status is displayed.
- If the INP/AINPQ feature is enabled and turned on, then the EPAP (EAGLE Provisioning Application Processor) subsystem status is displayed.
- If the G-Port (GSM mobile number portability), G-Flex (GSM flexible numbering), or PPSMS (Prepaid SMS Intercept Ph1) feature is enabled and turned on, then the GSM (Global System for Mobile Telecommunications) and EPAP status is displayed.
- If the EIR (Equipment Identity Register) feature is enabled and turned on, then the status of the EIR component on the card is displayed.
- If the V-Flex (Voice Mail Router) feature is enabled and turned on, then the status of the V-Flex component on the card is displayed.
- If the ATINP (ATI Number Portability Query) feature is enabled, then the status of the ATINPQ component on the card is displayed.

Keyword: **rept-stat-mps**

Related Commands: **rept-stat-card, rept-stat-sccp**

Command Class: System Maintenance

Parameters

:loc= (optional)

The card location of the VSCCP card to be reported on, as stenciled on the shelf of the EAGLE 5 ISS.

Range: 1101-1108, 1111-1117, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Example

rept-stat-mps:loc=1106

Dependencies

The card location specified in the **loc** parameter must contain a Service Module card.

One of the following features must be turned on, or the ATINP feature must be enabled before this command can be entered:

- A-Port
- AINPQ
- G-Flex
- G-Port
- INP
- EIR
- LNP ELAP Configuration
- Prepaid SMS Intercept Ph1
- V-Flex

At least one Service Module card must be configured in the system before this command can be entered.

To specify the **rept-stat-mps** command, no other **rept-stat-xxxx** command can be in progress.

Notes

When the MPS does not have an alarm on it, the **rept-stat-mps** report indicates in the SST field of the report which MPS is the active and which is the standby. When the MPS has an alarm on it, the SST field shows "Fault," and the Active/Standby information is displayed in the AST field as long as there is an alarm. After the alarm clears, the Active/Standby information appears in the SST field as before.

Output

NOTE: The status for a particular feature is shown only if that feature is enabled or turned on.

The following example shows the possible system response if the LNP ELAP Configuration feature is turned on:

rept-stat-mps

```

rlghncxa03w 09-01-07 10:23:93 EST EAGLE 40.0.0
      VERSION      PST      SST      AST
ELAP A      027-015-000  OOS-MT      Fault      Standby
CRITICAL PLATFORM      ALARM DATA = No Alarms
MAJOR      PLATFORM      ALARM DATA = h'0123456789ABCDEF
MINOR      PLATFORM      ALARM DATA = h'0123456789ABCDEF
CRITICAL APPLICATION ALARM DATA = No Alarms
MAJOR      APPLICATION ALARM DATA = h'0123456789ABCDEF
MINOR      APPLICATION ALARM DATA = No Alarms
      ALARM STATUS = ** 0371 Major Platform Failure(s)

      VERSION      PST      SST      AST
ELAP B      027-015-000  OOS-MT      Fault      Active
CRITICAL PLATFORM      ALARM DATA = No Alarms
MAJOR      PLATFORM      ALARM DATA = No Alarms
MINOR      PLATFORM      ALARM DATA = No Alarms
CRITICAL APPLICATION ALARM DATA = h'0123456789ABCDEF
MAJOR      APPLICATION ALARM DATA = h'0123456789ABCDEF
MINOR      APPLICATION ALARM DATA = No Alarms
      ALARM STATUS = *C 0373 Critical Application Failure(s)

CARD  PST      SST      LNP STAT
1106 P IS-NR      Active      ACT
1201  IS-ANR      Active      SWDL
1205  OOS-MT-DSBLD Manual      -----
1302  OOS-MT      Isolated    -----
1310  IS-ANR      Standby      SWDL

CARD 1106 ALARM STATUS = No Alarms
      DSM PORT A:      ALARM STATUS      = No Alarms
      DSM PORT B:      ALARM STATUS      = No Alarms
CARD 1201 ALARM STATUS = No Alarms
      DSM PORT A:      ALARM STATUS      = ** 0084 IP Connection Unavailable
      DSM PORT B:      ALARM STATUS      = ** 0084 IP Connection Unavailable
CARD 1205 ALARM STATUS = No Alarms
      DSM PORT A:      ALARM STATUS      = ** 0084 IP Connection Unavailable
      DSM PORT B:      ALARM STATUS      = ** 0084 IP Connection Unavailable
CARD 1302 ALARM STATUS = ** 0013 Card is isolated from the system
      DSM PORT A:      ALARM STATUS      = ** 0084 IP Connection Unavailable
      DSM PORT B:      ALARM STATUS      = ** 0084 IP Connection Unavailable
CARD 1310 ALARM STATUS = No Alarms
      DSM PORT A:      ALARM STATUS      = ** 0084 IP Connection Unavailable
      DSM PORT B:      ALARM STATUS      = ** 0084 IP Connection Unavailable
Command Completed.
;

```

The following example shows the possible system response when a specific card is queried, and the INP or AINP feature is turned on:

rept-stat-mps: loc=1205

```

rlghncxa03w 04-01-07 10:23:93 EST EAGLE 31.3.0
CARD  VERSION      TYPE      PST      SST      AST
1205  -----      DSM      OOS-MT-DSBLD Manual      -----
      DSM PORT A      OOS-MT      Unavail      -----
      ALARM STATUS      = ** 0084 IP Connection Unavailable
      DSM PORT B      OOS-MT      Unavail      -----

```

```

        ALARM STATUS      = ** 0084 IP Connection Unavailable
    INP STAT              = -----
    CARD ALARM STATUS     = No Alarms.
    DSM MEMORY USAGE     = 0%
    Command Completed.
;

```

The following example shows the possible system response when a specific card is queried, and the EIR feature and the G-Flex, G-Port, or PPSMS feature are turned on. This example also shows that DSM Port A has an IP Connection Unavailable alarm due to failed channels Dnld, TCP, and UDP. DSM Port B has an IP Connection Unavailable alarm due to failed channels Dnld and TCP.

rept-stat-mps: loc=1205

```

Integrat40 05-05-24 10:37:22 EST EAGLE5 34.0.0
CARD  VERSION      TYPE  PST          SST          AST
1205  -----      DSM   OOS-MT-DSBLD  Manual        -----
    DSM PORT A      OOS-MT          Unavail        -----
        ALARM STATUS      = ** 0084 IP Connection Unavailable
    DSM PORT B      OOS-MT          Unavail        -----
        ALARM STATUS      = ** 0084 IP Connection Unavailable

    GSM STAT        = -----
    EIR STAT        = -----
    CARD ALARM STATUS = No Alarms.
    DSM MEMORY USAGE = 0%
    Command Completed.
;

```

The following example shows the possible system response if a specific card is queried, and the G-Flex or G-Port feature and the V-Flex feature are turned on:

rept-stat-mps: loc=1205

```

Integrat40 08-05-07 11:37:24 EST EAGLE5 39.0.0
CARD  VERSION      TYPE  PST          SST          AST
1205  -----      DSM   OOS-MT-DSBLD  Manual        -----
    DSM PORT A      OOS-MT          Unavail        -----
        ALARM STATUS      = ** 0084 IP Connection Unavailable
    DSM PORT B      OOS-MT          Unavail        -----
        ALARM STATUS      = ** 0084 IP Connection Unavailable

    GSM STAT        = -----
    VFLEX STAT      = -----
    CARD ALARM STATUS = No Alarms.
    DSM MEMORY USAGE = 0%
    Command Completed.
;

```

The following example shows the possible system response if the EIR, INP or AINPQ, V-Flex, and the G-Port, G-Flex, or PPSMS features are turned on, and the ATINP feature is enabled.

rept-stat-mps

```

rlghncxa03w 09-01-07 10:23:93 EST EAGLE 40.0.0
                                VERSION      PST          SST          AST
    EPAP A                    027-015-000  IS-NR          Active        -----
    CRITICAL PLATFORM        ALARM DATA = No Alarms
    MAJOR   PLATFORM         ALARM DATA = No Alarms
    MINOR   PLATFORM         ALARM DATA = No Alarms
    CRITICAL APPLICATION     ALARM DATA = No Alarms
    MAJOR   APPLICATION      ALARM DATA = No Alarms
    MINOR   APPLICATION      ALARM DATA = No Alarms
    ALARM STATUS = No Alarms

                                VERSION      PST          SST          AST
    EPAP B                    027-015-000  OOS-MT          Fault         Standby
    CRITICAL PLATFORM        ALARM DATA = No Alarms
    MAJOR   PLATFORM         ALARM DATA = No Alarms
    MINOR   PLATFORM         ALARM DATA = No Alarms
    CRITICAL APPLICATION     ALARM DATA = No Alarms
    MAJOR   APPLICATION      ALARM DATA = No Alarms
    MINOR   APPLICATION      ALARM DATA = No Alarms

```

ALARM STATUS = No Alarms

CARD	PST	SST	GSM STAT
1106 P	IS-NR	Active	ACT
1201	IS-ANR	Active	SWDL
1205	OOS-MT-DSBLD	Manual	-----
1302	OOS-MT	Isolated	-----
1310	IS-ANR	Standby	SWDL

CARD	PST	SST	INP STAT
1106 P	IS-NR	Active	ACT
1201	IS-ANR	Active	SWDL
1205	OOS-MT-DSBLD	Manual	-----
1302	OOS-MT	Isolated	-----
1310	IS-ANR	Standby	SWDL

CARD	PST	SST	EIR STAT
1106 P	IS-NR	Active	ACT
1201	IS-ANR	Active	SWDL
1205	OOS-MT-DSBLD	Manual	-----
1302	OOS-MT	Isolated	-----
1310	IS-ANR	Standby	SWDL

CARD	PST	SST	V-FLEX STAT
1106 P	IS-NR	Active	ACT
1201	IS-ANR	Active	SWDL
1205	OOS-MT-DSBLD	Manual	-----
1302	OOS-MT	Isolated	-----
1310	IS-ANR	Standby	SWDL

CARD	PST	SST	ATINPQ STAT
1106 P	IS-NR	Active	ACT
1201	IS-ANR	Active	SWDL
1205	OOS-MT-DSBLD	Manual	-----
1302	OOS-MT	Isolated	-----
1310	IS-ANR	Standby	SWDL

```

CARD 1106 ALARM STATUS = No Alarms
  DSM PORT A:      ALARM STATUS      = No Alarms
  DSM PORT B:      ALARM STATUS      = No Alarms
CARD 1201 ALARM STATUS = No Alarms
  DSM PORT A:      ALARM STATUS      = No Alarms
  DSM PORT B:      ALARM STATUS      = No Alarms
CARD 1205 ALARM STATUS = No Alarms
  DSM PORT A:      ALARM STATUS      = No Alarms
  DSM PORT B:      ALARM STATUS      = No Alarms
CARD 1302 ALARM STATUS = No Alarms
  DSM PORT A:      ALARM STATUS      = No Alarms
  DSM PORT B:      ALARM STATUS      = No Alarms
CARD 1310 ALARM STATUS = No Alarms
  DSM PORT A:      ALARM STATUS      = No Alarms
  DSM PORT B:      ALARM STATUS      = No Alarms
Command Completed.

```

;

Legend

CARD—The location of the Service Module card. The Service Module card with the designator “P” to the right of its card location is the primary Service Module card as selected by the active ELAP/EPAP. The primary Service Module card provides the ELAP/EPAP status to the OAM. When the primary state (PST) of the ELAP/EPAP is IS-NR, the secondary state (SST) indicates whether the ELAP/EPAP is active or standby.

VERSION—The version number of the GPL that the specified ELAP/EPAP or card is running.

PST—The primary state of the ELAP/EPAP or card. The possible values are described in "Possible Values for PST/SST/AST".

SST—The secondary state of the ELAP/EPAP or card. The possible values are described in "Possible Values for PST/SST/AST".

AST—The associated state of the ELAP/EPAP or card. The possible values are described in "Possible Values for PST/SST/AST".

EPAP/ELAP A/B—The application running on the MPS (multi-purpose server) platform. If the LNP ELAP Configuration feature is turned on, the output shows ELAP A/B. If INP, G-Flex, G-Port, or V-Flex is turned on, the output shows EPAP A/B.

ALARM STATUS—A listing of any trouble text alarm messages that have been generated for the MPS and the applications running on the MPS. Each alarm is listed as a 16-character hexadecimal string where each bit represents a unique platform or application alarm. To decode the string, use the procedure in the EPAP Administration Manual or the *ELAP Administration Manual*. There are 6 categories of MPS alarms:

- Critical platform alarm data
- Major platform alarm data
- Minor platform alarm data
- Critical application alarm data
- Major application alarm data
- Minor application alarm data

GSM STAT—The possible states are either ACT (active) or SWDL (indicates that the GSM component on that card is currently inactive until the software download completes). The GSM STAT information is not displayed if the G-Port, G-Flex and Prepaid SMS Intercept Ph1 features are turned off.

INP STAT—The possible states of INP status include ACT (active), OFFL (offline) and SWDL (indicates that the INP component on that card is currently inactive until the software download completes). The INP STAT information is not displayed if the INP feature is turned off.

LNP STAT—The possible states of LNP status include ACT (active), OFFL (offline) and SWDL (indicates that the LNP component on that card is currently inactive until the software download completes). The LNP STAT information is not displayed if the LNP ELAP Configuration feature is turned off.

EIR STAT—The possible states of EIR Status include ACT (active), OFFL (offline), and SWDL (Indicates the EIR component on that card is currently inactive until software download completes). The EIR STAT information is not displayed if the EIR feature is not enabled.

VFLEX STAT—The possible states of V-Flex Status include ACT (active), OFFL (offline), and SWDL (Indicates the V-Flex component on that card is currently inactive until software download completes). The V-Flex Status information is not displayed if the V-Flex feature is not on.

ATINPQ STAT—The possible states of ATINPQ Status include ACT (active), OFFL (offline), and SWDL (Indicates the ATINPQ component on that card is currently inactive until software download completes). The ATINPQ STAT information is not displayed if the ATINP feature is not enabled.

DSM MEMORY USAGE—The percentage of DSM memory used to store the ELAP/EPAP database.

For EPAP, the percentage of the card memory is displayed. For example, 50% of the memory on a 2G DSM card means that 1G is used.

For ELAP/LNP, the percentage that is displayed depends on the enabled or default feature access key (FAK) quantity for LNP ported TNs, LNP ported LRNs, and LNP ported NPANXXs in the system (see the **rtrv-ctrl-feat** command output). The percentage is the greatest of: 1) TNs provisioned divided by LNP ported TNs FAK quantity, 2) LRNs provisioned divided by LNP ported LRNs FAK quantity, or 3) NPANXXs provisioned divided by LNP ported NPANXXs FAK quantity.

CARD XXXX ALARM STATUS—A listing of any trouble text alarm messages that have been generated for the card.

DSM PORT A/B—A listing of any trouble text alarm messages that have been generated for the port on the card.

IP CONNECTION UNAVAILABLE—Indicates the failed channels on those ports with IP Connection Unavailable alarms. The possible channels reported are:

- Prov—RTDB Provisioning Channel
- Dnld—RTDB Download Channel
- TCP—Transmission Control Protocol Channel
- UDP—User Datagram Protocol Channel

rept-stat-mux

Report the MPS Status

Use this command to list all the HMUX and HIPR cards, their location, and their status.

Keyword: **rept-stat-mux**

Related Commands: **rept-stat-card**

Command Class: System Maintenance

Parameters

This command has no parameters.

Example

rept-stat-mux

Dependencies

None

Notes

None

Output**rept-stat-mux**

rlghncxa03w 04-09-07 10:23:93 EST EAGLE 32.0.0

CARD	TYPE	PST	SST	AST
1109	HMUX	IS-NR	Active	ALMINH
1110	HMUX	IS-NR	Active	-----
1209	HIPR	IS-NR	Active	ALMINH
1210	HIPR	IS-NR	Active	-----

Command Completed.

;

Legend**CARD**—The HMUX or HIPR card location.**TYPE**—The type of card (HMUX or HIPR).**PST**—The primary state of the card. The possible values are described in "Possible Values for PST/SST/AST" in Appendix A.**SST**—The secondary state of the card. The possible values are described in "Possible Values for PST/SST/AST" in Appendix A.**AST**—The associated state of the card. The possible values are described in in Appendix A.**rept-stat-rtd****Report Status RTD**

Use this command to report Run Time Diagnostics (RTD) for EAGLE 5 ISS cards, including the status of internal integrity checks and the RTD subsystem alarm. This display can help determine the cause when an RTD subsystem alarm occurs, or when associated issues are reported.

This command is also used to reset MSU validation statistics and clear the RTD subsystem alarm.

Keyword: rept-stat-rtd**Related Commands:****Command Class:** System Maintenance**Parameters****:force=** (optional)

The **force** parameter is used with the **reset=yes** parameter to clear statistics for a card when the RTD subsystem alarm is present.

Range: yes**:loc=** (optional)

Location. This parameter specifies the card location as stenciled on the shelf of the system.

The **loc** parameter can be used to either retrieve or reset statistics for a card location. To reset the statistics, the **loc** parameter and the **reset** parameter must be specified together in the command.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

:reset= (optional)

This parameter clears the statistics by setting them to zero and resets the checksum card indicator error and RTD subsystem alarm.

Range: yes

yes — Clears the statistics.

If the **reset=yes** parameter is specified with the **loc** parameter, then statistics are cleared for the specified card. If the **reset=yes** parameter is specified, and the **loc** parameter is not specified, then statistics are cleared for all cards in the system.

Example

```
rept-stat-rtd
rept-stat-rtd:loc=1107
rept-stat-rtd:reset=yes:force=yes
rept-stat-rtd:loc=1107:reset=yes
```

Dependencies

If the **reset=yes** parameter is specified, then the **force=yes** parameter must be specified to clear the statistics and checksum failure indicators.

The card specified by the **loc** parameter must be an IPLIMx, IPGWx, IPSG, SCCP, Service Module, E1/T1 MIM, HC-MIM, E5-E1T1, LIMATM, E5-ATM, or E1-ATM card.

The card in the specified card location (**loc** parameter) must be in service.

The **reset=yes** parameter must be specified to clear the statistics.

The **force=yes** parameter must be specified.

The **loc** parameter cannot have a non-numeric value.

The following card locations are not valid for this command: 1114, 1116, 1117, 1118 (TDM, MDAL cards), and all xy09 and xy10 locations where x is the frame and y is the shelf (HMUX or HIPR cards).

The card slot must be equipped and in service.

Notes

The statistics from internal integrity checks are displayed for all in-service LIM and SCCP cards. The reported statistics are dynamic and are not maintained when a card is re-initialized.

The displayed reports contain message validation totals since the last time the diagnostic information for the cards was reset.

The individual statistics that are reported re-start at zero after the maximum values are reached and are cleared when reset by the **rept-stat-rtd** command.

The report displayed shows the summary statistics or overall totals for MSU validation statistics for all LIM and SCCP cards in the system. It also includes the status for the RTD subsystem and the RTD subsystem alarm.

When the **loc** parameter is specified in the **rept-stat-rtd** command, the report displayed shows the detailed MSU validation statistics report for the specified card. The report shows statistics from integrity checks performed by the specified card on MSUs transferred to and from LIM/SCCP cards and includes the timestamp when the card last detected an error during integrity checks. The statistics are only displayed for cards with non-zero totals.

The integrity checks are performed on a subset of the MSUs transferred between cards. When card (s) report errors during the integrity checks, the RTD subsystem alarm is activated. The error statistics reported should be used along with the UIMs or alarms to help identify the source of the problem.

The RTD subsystem alarm is triggered when a card reports that a checksum error was detected during internal card integrity checks.

The RTD subsystem alarm remains active in the system until the statistics are reset using the **rept-stat-rtd** command, and no further indications of checksum errors are reported during internal card integrity checks.

Output

If the **rept-stat-rtd** command is entered with no parameters, then a summary status for the RTD subsystem and alarm and summary statistics for all of the LIM/SCCP cards in the system are displayed.

If the **loc** parameter is specified in the **rept-stat-rtd** command, then detailed statistics are displayed for the specified card location. Only cards with non-zero totals are reported in the location specific report.

The following example displays a summary report on the status of the RTD subsystem and RTD subsystem alarm with MSU validation statistics for all LIM/SCCP cards in the system.

rept-stat-rtd

```
eagle10110 07-02-22 20:32:58 EST EAGLE 35.6.0
```

```
Retrieving data from cards...
```

```
RTD SUBSYSTEM REPORT IS-NR          Active      -----
RTD ALARM STATUS = No Alarms
```

```

      MSU Validation Statistics
      =====
      Total Rx      Total Rx      Total
CARD  Error        Validated      Tx
1101          0          275        710
1102          0          200        200
1103          0          200       1000
1105          0         1360        275
1107          0          200        100
1108          0          100        100
-----
```

```
END OF REPORT
```

```
;
```

The following example displays a detailed report for card 1101. This report indicates that the card received MSUs from several cards in the system.

rept-stat-rtd: loc=1101

```
eagle10110 07-02-22 20:32:58 EST EAGLE 35.6.0
```

```
Retrieving data from card ...
```

```
CARD SUMMARY: 1101      Last Alarm Timestamp: -----
```

```

      MSU Validation Statistics
      =====
      SRC/DEST      Total Rx      Total Rx      Total Tx
CARD              Error        Validated
1102                0          100        100
1103                0           0           0
1105                0           75        360
1107                0          100        200
1108                0           50         50
-----
```

```
;END OF REPORT
```

```
;
```

The following example displays a summary report for cards 1101 - 1108. This report indicates that the cards received checksum errors in MSUs from other cards.

rept-stat-rtd

```
eagle10110 07-02-22 20:32:58 EST EAGLE 35.6.0
```

```
Retrieving data from card...
```

```
RTD SUBSYSTEM REPORT IS-ANR Active -----
RTD ALARM STATUS = 541 MSU cksum error threshold exceeded
```

```
MSU Validation Statistics
=====
Total Rx      Total Rx      Total
CARD      Error Validated      Tx
1101         100         275      500
1102          25         200      300
1103           0         200      500
1105           0         600      125
1107          50         250      100
1108           0         100      100
```

```
-----
;END OF REPORT
```

```
;
```

The following example displays a detailed report for card 1101. This report indicates that the card received MSUs with checksums from cards 1102, 1103, and 1105 and MSUs with checksum errors from card 1103.

rept-stat-rtd:loc=1101

```
eagle10110 07-02-22 20:32:58 EST EAGLE 35.6.0
Retrieving data from card ...
```

```
CARD SUMMARY: 1101      Last Alarm Timestamp: mm-dd-yy hh:mm:ss
```

```
MSU Validation Statistics
=====
Total Rx      Total Rx      Total Tx
SRC/DEST      Error Validated
CARD
1102           0          75      100
1103         100         100      100
1105           0         100      100
1107           0           0      100
1108           0           0      100
```

The following example displays a detailed report for card 1102. This report indicates that the card received MSUs from cards 1101 - 1108 and MSUs with checksum errors from card 1103.

rept-stat-rtd:loc=1102

```
eagle10110 07-02-22 20:32:58 EST EAGLE 35.6.0
Retrieving data from card ...
```

```
CARD SUMMARY: 1102      Last Alarm Timestamp: mm-dd-yy hh:mm:ss
```

```
MSU Validation Statistics
=====
Total Rx      Total Rx      Total Tx
SRC/DEST      Error Validated
CARD
1101           0          50      100
1103          25          25         0
1105           0         100      100
1108           0          25      100
```

The following example displays a detailed report for card 1107. This report indicates that the card received MSUs from cards 1102 - 1108 and MSUs with checksum errors from card 1103.

rept-stat-rtd:loc=1107

```
eagle10110 07-02-22 20:32:58 EST EAGLE 35.6.0
Retrieving data from card...
```

```
CARD SUMMARY: 1107      Last Alarm Timestamp: mm-dd-yy hh:mm:ss
```

```
MSU Validation Statistics
=====
```

SRC/DEST CARD	Total Rx Error	Total Rx Validated	Total Tx
1102	0	75	100
1103	50	50	0
1105	0	100	0
1108	0	25	0

The following example displays the option for resetting MSU validation statistics of all cards in the system.

rept-stat-rtd:reset=yes

```
eagle10110 07-02-22 20:32:58 EST EAGLE 35.6.0
Clear RTD Statistics command(s) issued...
Command Completed.
```

;

The following example displays the option for resetting MSU validation statistics for card 1107.

rept-stat-rtd:loc=1107:reset=yes

```
eagle10110 07-02-22 20:32:58 EST EAGLE 35.6.0
Clear RTD Statistics command(s) issued...
Command Completed.
```

;

The following example displays the option for resetting MSU validation statistics and checksum failure indicators for all cards in the system and clearing the RTD subsystem alarm.

rept-stat-card:reset=yes:force=yes

```
eagle10110 07-02-22 20:34:06 EST EAGLE 35.6
Clear RTD Statistics command(s) issued...
Command Completed.
```

```
eagle10110 07-02-22 20:32:58 EST EAGLE 35.6.0
5501.0542 RTD SYSTEM MSU cksum error threshold cleared
```

;

The following example displays the option for resetting the MSU validation statistics and the checksum failure indicators for card 1311.

rept-stat-rtd:reset=yes:loc=1311:force=yes

```
eagle10110 07-02-22 20:32:58 EST EAGLE 35.6.0
Clear RTD Statistics command(s) issued...
Command Completed.
```

;

Legend

This section defines the fields of the **rept-stat-rtd** reports.

PST—The possible values are described in "Possible Values for PST/SST/AST". For this command, IS-NR specifically means no checksum errors were found during the last reporting period; IS-ANR specifically means that a card or cards reported checksum errors during MSU integrity checks when the RTD status was previously IS-NR, and the RTD System Alarm(s) was raised.

TOTAL Rx ERROR (for a Summary Report)—Total MSUs received with checksum errors, including MSUs with checksum errors received from all cards in the system.

TOTAL Rx ERROR (for a Location-Specified Report)—Total MSUs with checksum errors received at the card specified by the **loc** parameter from SRC/DEST CARD.

TOTAL Rx VALIDATED (for a Summary Report)—Total MSUs with checksum received and validated from all cards in the system.

TOTAL Rx VALIDATED (for a Location-Specified Report)—Total MSUs with checksum received and validated at the card specified by the **loc** parameter from SRC/DEST CARD.

TOTAL Tx (for a Summary Report)—Total MSUs with checksum applied and transmitted to all cards in the system.

TOTAL Tx (for a Location-Specified Report)—Total MSUs with checksums transmitted from the card specified in the **loc** parameter to SRC/DEST CARD.

LAST ALARM TIMESTAMP—Timestamp for last reported checksum error for the card specified in the **loc** parameter.

SRC/DEST CARD—Source card transmitting MSUs with checksums received by the card specified in the **loc** parameter. Destination card receiving MSUs with checksums transmitted from card specified in LOC parameter.

RTD SUBSYSTEM—Indicates RTD Device Status (IS-NR, etc).

RTD ALARM STATUS—Indicates whether an alarm is present for the RTD Device. The possible values are described in .

rept-stat-rte

Report Status Route

Use this command to display the signaling route status for a particular destination.

Keyword: **rept-stat-rte**

Related Commands: **chg-dstn, chg-rte, dlt-dstn, dlt-rte, ent-dstn, ent-rte, rept-stat-dstn, rtrv-dstn, rtrv-rte**

Command Class: System Maintenance

Parameters

:dpc= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: **dpca**

Range: **p-, 000-255, *, **, *****

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

The asterisk values *****, ******, and ******* are not valid for the *ni* subfield.

If ****** or ******* is specified for the *nc* subfield, either *****, ******, or ******* must be specified for the *ncm* subfield.

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

When **chg-sid:pctype=ansi** is specified, *ni*-*- is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:dpc/dpca/dpci/dpcn/dpcn24= (optional)

Destination point code.

:dpci= (optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:dpcn= (optional)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:dpcn24= (optional)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:mode= (optional)

The type of display to produce. This parameter displays the point code's subsystem status along with the normal output.

Range: **full, rtx**

full—Comprehensive display of point code status, including rtx. If entered with a point code, status for that point code is displayed, including each route in the associated routeset. If specified without a point code, status of all routesets is displayed.

rtx—Displays exception route status, other than circular routing, if the Origin-based MTP Routing feature is on.

Default: The point code's subsystem status is not displayed.

:rsn= (optional)

Routeset name. This parameter specifies the name of the routeset.

Range: *ayyyyyyyy*

1 alphabetic character followed by up to 9 alphanumeric characters

:stat= (optional)

This parameter specifies the primary state filter.

Range: **all, alminh, anr, dsbld, mt, nr**

all—All of the primary states

alminh—Alarms inhibited

anr—In service abnormal (IS-ANR)

dsbld — Out of service maintenance disabled (OOS-MT-DSBLD)
mt — Out of service maintenance (OOS-MT)
nr — In service normal (IS-NR)

Default: **all**

Example

```
rept-stat-rte
rept-stat-rte:dpc=5-25-0
rept-stat-rte:dpci=5-5-0:mode=full
rept-stat-rte:dpci=5-5-0:mode=rtx
rept-stat-rte:mode=rtx
rept-stat-rte:mode=full
rept-stat-rte:dpc=5-25-*
rept-stat-rte:rsn=rsf
```

Dependencies

If the **dpcn** parameter is specified, its format must match the format that was assigned with the **chg-stpopts:npcfmti** parameter.

An x-list DPC cannot be specified in the **dpc** parameter.

The **mode** parameter and a **dpc/dpca/dpci/dpcn/dpcn24** parameters cannot be specified together in the command if the point code parameter specifies one of the *nnn-ccc-*** or *nnn-ccc-**** formats.

The **stat** parameter and a **dpc/dpca/dpci/dpcn/dpcn24** parameter can be specified together in the command only if the point code parameter specifies one of the *nnn-ccc-*** or *nnn-ccc-**** formats.

The **mode** parameter can be specified only if a **dpc/dpca/dpci/dpcn/dpcn24** parameter is specified.

No other **rept-stat-xxxx** command can be in progress when this command is entered.

If a **dpc/dpca/dpci/dpcn/dpcn24** parameter is specified, the value must be the true point code of the destination and the value must already be defined in the database.

The **mode=rtx** parameter cannot be specified unless the Origin-Based MTP Routing feature is enabled and on.

An x-list DPC cannot be specified in the **dpc** parameter.

If the **mode=full** parameter is specified, then the **dpc/dpca/dpci/dpcn/dpcn24** parameter must be specified.

If the **dpc** parameter specifies an *ni-nc-** format, then the **mode** parameter cannot be specified.

The **dpc** parameter must specify an *ni-nc-** format before the **stat** parameter can be specified with the **dpc** parameter.

If the **rsn** parameter is specified, then the **dpc**, **mode**, and **pst** parameters cannot be specified. The **pst** and **mode** parameters cannot be specified together in the command.

No other **rept-stat-xxx** command can be in progress when this command is entered.

If a **dpc** parameter is specified, then the value must be the true destination point code (not an alias) and the value must be defined in the database.

The Origin-Based MTP Routing feature must be turned on before the **mode=rtx** parameter can be specified.

The destination address must be a full point code, a network destination, or a cluster point code.

The RSET feature must be turned on (see the **chg-feat** command) before the **rsn** parameter can be specified.

The value specified for the **rsn** parameter must already exist in the RSET table.

Notes

Each DPC can have up to six routes associated with it.

This command's functions are now performed by **rept-stat-dstn** and this command will be deleted in a future software release.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (**s-**) and the private and spare point code subtype prefix (**ps-**). All of the point code types support the private (internal) point code subtype prefix (**p-**).

Table 5-67 provides a summary description of the reports that are produced by the various DPC parameter syntaxes.

Table 5-67. Summary of DPC Parameter Syntaxes

DPC format	Meaning
rept-stat-rte:dpc=ni-nc-ncm	Requests a report for fully provisioned destination <i>ni-nc-ncm</i> .
rept-stat-rte:dpc= ni-*-*	Requests a report for provisioned network destination with the specified network indicator. Note that if * is specified in the <i>nc</i> field, * must be specified in the <i>ncm</i> field.
rept-stat-rte:dpc= ni-***-*	Requests a report for the full network cluster for the specified <i>ni</i> .
rept-stat-rte:dpc= ni-****-*	Requests a report for the full network cluster and the network cluster address (if any) for the specified <i>ni</i> .
rept-stat-rte:dpc= ni-nc-*	Requests a report for provisioned cluster destination <i>ni-nc-*</i> .
rept-stat-rte:dpc= ni-nc-***	Requests a report showing all destinations whose network (<i>ni</i>) and cluster (<i>nc</i>) components match those specified. Note, however, that the network cluster address on <i>ni-nc-*</i> (if it exists) is not reported.
rept-stat-rte:dpc= ni-nc-****	Requests a report showing all destinations whose network (<i>ni</i>) and cluster (<i>nc</i>) components match those specified. The network cluster address <i>ni-nc-*</i> (if it exists) is also reported.
rept-stat-rte:dpcn24=msa-ssa-sp	Requests a report for fully provisioned 24-bit destination <i>main signaling area-sub signaling area-signaling point</i> .

This command can be cancelled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

This command can be canceled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

This command does not report the x-list point codes. Use the **rept-stat-cluster** command for a report of x-list point codes.

If the **mode=rtx** parameter is specified with a specific DPC, additional linkset, route and exception route information associated with the specified DPC is displayed.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (**s-**) and the private and spare point code subtype prefix (**ps-**). All of the point code types support the private (internal) point code subtype prefix (**p-**).

Table 5-68 provides a summary description of the reports that are produced by the various DPC parameter syntaxes.

Table 5-68. Summary of DPC Parameter Syntaxes

DPC format	Meaning
rept-stat-rte:dpc=ni-nc-ncm	Requests a report for fully provisioned destination <i>ni-nc-ncm</i> .
rept-stat-rte:dpc= ni-*-*	Requests a report for provisioned network destination with the specified network indicator. Note that if * is specified in the <i>nc</i> field, * must be specified in the <i>ncm</i> field.
rept-stat-rte:dpc= ni-**-*	Requests a report for the full network cluster for the specified <i>ni</i> .
rept-stat-rte:dpc= ni-***-*	Requests a report for the full network cluster and the network cluster address (if any) for the specified <i>ni</i> .
rept-stat-rte:dpc= ni-nc-*	Requests a report for provisioned cluster destination <i>ni-nc-*</i> .
rept-stat-rte:dpc= ni-nc-**	Requests a report showing all destinations whose network (<i>ni</i>) and cluster (<i>nc</i>) components match those specified. Note, however, that the network cluster address on <i>ni-nc-*</i> (if it exists) is not reported.
rept-stat-rte:dpc= ni-nc-***	Requests a report showing all destinations whose network (<i>ni</i>) and cluster (<i>nc</i>) components match those specified. The network cluster address <i>ni-nc-*</i> (if it exists) is also reported.
rept-stat-rte:dpcn24=msa-ssa-sp	Requests a report for fully provisioned 24-bit destination <i>main signaling area-sub signaling area-signaling point</i> .

If the **mode=rtx** parameter is specified without a specific DPC, then status is provided for all exception route sets.

If the **mode=full** parameter is specified with a specific destination point code, then additional linkset, route, and exception route information associated with the specified destination is displayed, along with information that can be used to correct circular routing. If the destination is attached with a routeset and has historic routes, then information on all of the routes is displayed. If the

mode=full parameter is specified without a specific destination point code, then status is provided for all regular and exception route sets.

Output

If the **dpc** parameter is not specified:

- If the **mode** parameter is not specified, then the command output lists the status of all provisioned destination point codes (DPCs) (routesets) in the system.
- If the **mode=rtx** parameter is specified, then the output lists the status of only those DPCs against which exception routes have been provisioned, and the status of the provisioned exception route sets associated with each DPCs.
- If the **mode=full** parameter is specified, then the command lists the status of all provisioned DPCs in the system, and the status of the provisioned exception route sets, if any, associated with each DPC.

If the **dpc** parameter is specified:

- If the **mode** parameter is not specified, then the output lists the status of all provisioned routes in the route set specified by that DPC.
- If the **mode=rtx** parameter is specified, then the output lists the status of all provisioned routes in the routeset specified by that DPC, and the status of all provisioned exception routesets associated with that DPC.
- If the **mode=full** parameter is specified, then the output lists the status of all provisioned routes in the routeset specified by that DPC, the status of all routes from destination table (historic routes), the status of all provisioned exception route sets associated with that DPC, any aliases associated with that DPC, and circular routing alarm information if any for that DPC.

The following example shows how, when no parameters are specified, summary information for all provisioned cluster and noncluster DPCs is reported.

rept-stat-rte

```
rlghncxa03w 04-01-07 14:59:11 EST EAGLE 31.3.0
  DPCA          PST          SST          AST
  009-000-000   IS-ANR       Allowed   ACCESS
  009-003-*     IS-ANR       Allowed   ACCESS
  009-003-006   OOS-MT      Prohibit  INACCESS
  009-003-001   IS-NR        Allowed   ACCESS
  009-003-002   IS-NR        Allowed   ACCESS
  009-003-003   OOS-MT      Prohibit  INACCESS
  009-004-006   IS-NR        Allowed   ALMINH
  004-002-002   IS-NR        Allowed   ACCESS
  006-000-000   IS-ANR       Allowed   ACCESS
  007-001-001   IS-NR        Allowed   ACCESS
  101-033-*     IS-NR        Allowed   ACCESS

  DPCI          PST          SST          AST
  2-004-1       IS-NR        Allowed   ACCESS
  2-004-3       IS-ANR       Allowed   ACCESS
  2-004-2       IS-ANR       Allowed   ACCESS
  2-004-4       IS-NR        Allowed   ACCESS

  DPCN          PST          SST          AST
  02096         IS-NR        Allowed   ACCESS
  02097         IS-ANR       Allowed   ACCESS
  02098         OOS-MT      Prohibit  INACCESS
  02099         OOS-MT      Prohibit  INACCESS
```

Command Completed.

;

The following example shows that specifying a cluster destination on the **dpc** parameter shows the cluster status and routeset information. Note that information on cluster members (both provisioned and x-list) is not shown. Use **rept-stat-cluster** to obtain this information.

rept-stat-rte:dpc=9-3-*

```
rlghncxa03w 04-07-07 14:59:11 EST EAGLE 31.9.0
  DPCA          PST          SST          AST
  009-003-*     IS-NR       Allowed    ACCESS
ALARM STATUS    = No Alarms.
RTE COST  LSN    APCA          LS STAT    NON-ADJ    ROUTE STAT
1*  10  lsnstpa  042-036-123  Allowed    Allowed    Allowed
2   20  lsnstpb  092-240-103  Allowed    Allowed    Allowed
3   30  lsnstpc  128-101-022  Allowed    Allowed    Allowed
4   --  -----  ***_***_***  -----  -----  -----
5   --  -----  ***_***_***  -----  -----  -----
6   --  -----  ***_***_***  -----  -----  -----
;
```

The following example shows how specifying either an FPC or cluster destination for which circular routing has been detected, along with the **mode=full** parameter, displays the name of the linkset on which the circular routing test message was transmitted. It also displays the linkset on which the circularly routed message was received. This information may be useful in correcting the circular routing situation.

rept-stat-rte:dpc=9-3-6:mode=full

```
rlghncxa03w 04-01-07 14:59:11 EST EAGLE 31.3.0
  DPCA          PST          SST          AST
  009-003-006   OOS-MT       Prohibit  INACCESS
ALARM STATUS    = = *C xxxx Circular routing detected
RTE COST  LSN    APCA          LS STAT    NON-ADJ    ROUTE STAT
1   10  lsnstpa  042-036-123  Allowed    Allowed    Allowed
2   20  lsnstpb  092-240-103  Allowed    Allowed    Allowed
3   30  lsnstpc  128-101-022  Allowed    Allowed    Allowed
4   --  -----  ***_***_***  -----  -----  -----
5   --  -----  ***_***_***  -----  -----  -----
6   --  -----  ***_***_***  -----  -----  -----
SSN      SUBSYSTEM STATUS

ALIASA          ALIASN          ALIASI
-----
CIRCULAR ROUTING
  XMIT LSN= lsnstpb
  RCV  LSN= lsn01a
MEMBER= ***_***_***
Command Completed.
;
```

The following example shows a typical report when a cluster destination and **mode=full** was specified. The interpretation of the circular routing status for cluster destinations is slightly different from the status for full point code destinations.

rept-stat-rte:dpc=9-3-*:mode=full

```
rlghncxa03w 04-01-07 14:59:11 EST EAGLE 31.3.0
  DPCA          PST          SST          AST
  009-003-*     IS-NR       Allowed    ACCESS
ALARM STATUS    = *C xxxx Circular routing detected
RTE COST  LSN    APCA          LS STAT    NON-ADJ    ROUTE STAT
1   10  lsnstpa  042-036-123  Allowed    Allowed    Allowed
2   20  lsnstpb  092-240-103  Allowed    Allowed    Allowed
3   30  lsnstpc  128-101-022  Allowed    Allowed    Allowed
4   --  -----  ***_***_***  -----  -----  -----
5   --  -----  ***_***_***  -----  -----  -----
```

```

6  --  -----  ***_***_***  -----  -----  -----
SSN  SUBSYSTEM STATUS
ALIASA      ALIASN      ALIASI
-----
CIRCULAR ROUTING INFO:
XMIT LSN=lsnstpb  RC=20
RCV  LSN=lsn01a
MEMBER= 009-003-006
Command Completed.
;

```

The following example shows how **rept-stat-rte** displays the circular routing alarm for a cluster destination. Note that a circular routing alarm for a cluster destination indicates that circular routing was detected for a member of the cluster, but no x-list entry could be created for that cluster. Note, also, that circular routing detected on a cluster destination does not automatically force the output to display the status of the cluster as “OOS-MT Prohibit INACCESS” as it does for a full point code destination.

rept-stat-rte:dpc=9-3-*

```

rlghncxa03w 04-01-07 14:59:11 EST  EAGLE 31.3.0
DPCA          PST          SST          AST
009-003-*     IS-NR       Allowed  ACCESS
ALARM STATUS   = *C  xxxx Circular routing detected
RTE COST  LSN  APCA      LS STAT  NON-ADJ  ROUTE STAT
1   10  lsnstpa  042-036-123 Allowed  Allowed  Allowed
2   20  lsnstpb  092-240-103 Allowed  Allowed  Allowed
3   30  lsnstpc  128-101-022 Allowed  Allowed  Allowed
4   --  -----  ***_***_***  -----  -----  -----
5   --  -----  ***_***_***  -----  -----  -----
6   --  -----  ***_***_***  -----  -----  -----
Command Completed.
;

```

The following example shows how **rept-stat-rte** displays a subsystem information header but no subsystem information, just as it would if an FPC is specified for which no subsystems are defined. In addition, because aliases cannot be defined for cluster destinations, this report shows only an empty header, just as it does when an FPC is specified for which no aliases are defined. Note that the circular routing information portion of the **mode=full** report displays “-----” for the linkset names when no circular routing condition exists for the DPC.

rept-stat-rte:dpc=9-3-*:mode=full

```

rlghncxa03w 04-07-07 14:59:11 EST  EAGLE 31.9.0
DPCA          PST          SST          AST
009-003-*     IS-NR       Allowed  ACCESS
ALARM STATUS   = No Alarms.
RTE COST  LSN  APCA      LS STAT  NON-ADJ  ROUTE STAT
1*  10  lsnstpa  042-036-123 Allowed  Allowed  Allowed
2   20  lsnstpb  092-240-103 Allowed  Allowed  Allowed
3   30  lsnstpc  128-101-022 Allowed  Allowed  Allowed
4   --  -----  ***_***_***  -----  -----  -----
5   --  -----  ***_***_***  -----  -----  -----
6   --  -----  ***_***_***  -----  -----  -----
SSN  SUBSYSTEM STATUS
ALIASA      ALIASN      ALIASI
-----
CIRCULAR ROUTING
XMIT LSN= -----
RCV  LSN= -----
MEMBER= ***_***_***
Command Completed.
;

```

The following example shows how specifying the **stat** parameter along with the *ni-nc-*** or *ni-nc-**** DPC formats causes the output summary report to include only those destinations whose status matches the state specified.

rept-stat-rte:dpc=9-4-***:stat=alminh

```
rlghncxa03w 04-02-31 13:30:00 EST EAGLE 31.3.0
  DPCA          PST          SST          AST
  009-004-006   IS-NR       Allowed    ALMINH
Command Completed.
;
```

The following example shows a retrieval specifying an ITU national point code where the **chg-stpopts:npcfmti** parameter has been set to **1-1-1-11**:

rept-stat-rte:dpcn=1-1-1-1000

```
rlghncxa03w 04-02-31 13:30:00 EST EAGLE 31.3.0
CAUTION : Node isolated...route status out of date!
  DPCN          PST          SST          AST
  1-1-1-1000    00S-MT      Prohibit   INACCESS
ALARM STATUS    = *C 0313 DPC is prohibited
RTE COST  LSN      APCN          LS STAT  NON-ADJ  ROUTE STAT
1  10  lsitu      1-1-1-1000    Prohibit  Allowed  Prohibit
2  --  -----    ***_***_***  -----  -----  -----
3  --  -----    ***_***_***  -----  -----  -----
4  --  -----    ***_***_***  -----  -----  -----
5  --  -----    ***_***_***  -----  -----  -----
6  --  -----    ***_***_***  -----  -----  -----
Command Completed.
;
```

The following example shows a private adjacent point code:

rept-stat-rte:mode=full:dpc=1-1-2

```
rlghncxa03w 05-01-07 13:30:00 EST EAGLE 31.12.0
  DPCA          PST          SST          AST
  001-001-002    00S-MT      Idle       INACCESS
ALARM STATUS    = No Alarms.
RTE COST  LSN      APCA          LS STAT  NON-ADJ  ROUTE STAT
1  01  ls11234567  001-001-002  Prohibit  Allowed  Prohibit
2  02  ls12345678  p-001-001-002  Prohibit  Allowed  Prohibit
3  --  -----    ---***_***_***  -----  -----  -----
4  --  -----    ---***_***_***  -----  -----  -----
5  --  -----    ---***_***_***  -----  -----  -----
6  --  -----    ---***_***_***  -----  -----  -----
SSN      SUBSYSTEM STATUS

  ALIASA          ALIASN          ALIASI
  000-000-001    -----          -----
CIRCULAR ROUTING INFO:
  XMIT LSN=-----  RC=--
  RCV  LSN=-----
  MEMBER =-----
Command Completed.
;
```

The asterisks in the space after the route numbers in the following examples indicate which route (or combined route) is carrying traffic.

rept-stat-rte:dpc=1-1-1

```
tekelecstp 04-09-24 09:19:04 EST EAGLE 31.9.0
  DPCA          PST          SST          AST
  001-001-001    IS-NR       Allowed    ACCESS
ALARM STATUS    = No Alarms.
```


RTE	COST	LSN	APCA	LS STAT	NON-ADJ	ROUTE STAT
1*	05	lse1e1	001-001-001	Allowed	Allowed	Allowed
2*	05	lse1e2	001-002-001	Allowed	Allowed	Allowed
3	10	lse1e3	001-003-001	Allowed	Allowed	Allowed
4	--	-----	***_***_***	-----	-----	-----
5	--	-----	***_***_***	-----	-----	-----
6	--	-----	***_***_***	-----	-----	-----

Command Completed.

;

No asterisk appears after the route number in the following example; no routes were carrying traffic at the time.

rept-stat-rte:dpc=1-1-1

```
tekelecstp 06-05-24 09:19:04 EST EAGLE 35.0.0
  DPCA      PST      SST      AST
  001-001-001  OOS-MT  Prohibit  INACCESS
ALARM STATUS = *C 0313 DPC is prohibited
RTE COST  LSN      APCA      LS STAT  NON-ADJ  ROUTE STAT
1   05   lse1e1    001-001-001  Prohibit  Allowed  Prohibit
2   05   lse1e2    001-002-001  Prohibit  Allowed  Prohibit
3   10   lse1e3    001-003-001  Prohibit  Allowed  Prohibit
4   --   -----   ***_***_***  -----  -----  -----
5   --   -----   ***_***_***  -----  -----  -----
6   --   -----   ***_***_***  -----  -----  -----
```

Command Completed.

;

In the following example, the primary route is not carrying traffic.

rept-stat-rte:dpc=1-1-1

```
tekelecstp 06-05-24 09:19:04 EST EAGLE 35.0.0
  DPCA      PST      SST      AST
  001-001-001  IS-ANR   Restrict  ACCESS
ALARM STATUS = *C 0334 DPC Subsystem is Abnormal
RTE COST  LSN      APCA      LS STAT  NON-ADJ  ROUTE STAT
1   05   lse1e1    001-001-001  Prohibit  Allowed  Prohibit
2   05   lse1e2    001-002-001  Prohibit  Allowed  Prohibit
3*  10   lse1e3    001-003-001  Allowed   Allowed  Allowed
4   --   -----   ***_***_***  -----  -----  -----
5   --   -----   ***_***_***  -----  -----  -----
6   --   -----   ***_***_***  -----  -----  -----
```

Command Completed.

;

In the following example, Origin-Based MTP Routing feature is enabled and on. This permits the execution of the **rept-stat-rte** command in **rtx** mode, which displays all exception route sets provisioned against the specified DPC, as shown:

rept-stat-rte:dpc=9-3-*:mode=rtx

```
tekelecstp 06-06-01 16:21:39 EST EAGLE 35.0.0
  DPCA      PST      SST      AST
  009-003-*  IS-NR      Allowed  ACCESS
ALARM STATUS = No Alarms.
RTE COST  LSN      APCA      LS STAT  NON ADJ  ROUTE STAT
1   10   lsnstpa   042-36-23  Allowed  Allowed  Allowed
2   20   lsnstpb   092-40-03  Allowed  Allowed  Allowed
3   30   lsnstpc   128-01-22  Prohibit  Prohibit  Allowed
4   --   -----   ***_***_***  -----  -----  -----
5   --   -----   ***_***_***  -----  -----  -----
6   --   -----   ***_***_***  -----  -----  -----
```

Exception Routes:

OPCA	PST	SST	AST

001-001-001	IS-NR	Allowed	ACCESS

ILSN	PST	SST	AST
lsnstpy	IS-NR	Allowed	ACCESS

Command Completed.

If the Origin-Based MTP Routing feature is enabled and on, any provisioned exception routes provisioned against the specified DPC are also displayed in **full** mode, as shown:

rept-stat-rte:dpc=9-3-*:mode=full

```
tekelecstp 06-06-01 16:21:39 EST EAGLE 35.0.0
  DPCA          PST          SST          AST
  009-003-006   00S-MT      Prohibit    INACCESS
ALARM STATUS    = = *C 0319 REPT-MTLP-DET: Circ rte det(cong)
RTE COST  LSN   APCA          LS STAT    NON ADJ    ROUTE STAT
  1   10  lsnstpa  042-036-123 Allowed    Allowed    Allowed
  2   20  lsnstpb  092-240-103 Allowed    Allowed    Allowed
  3   30  lsnstpc  128-101-022 Allowed    Allowed    Allowed
  4   --  -----  ***_***_***  -----  -----  -----
  5   --  -----  ***_***_***  -----  -----  -----
  6   --  -----  ***_***_***  -----  -----  -----
SSN  SUBSYSTEM STATUS
```

ALIASA	ALIASN	ALIASI
-----	-----	-----

```
CIRCULAR ROUTING INFO:
  XMIT LSN=lsnstpb  RC=20
  RCV  LSN=lsn01a
  MEMBER =-----
```

Exception Routes:

OPCA	PST	SST	AST
001-001-001	IS-NR	Allowed	ACCESS
ILSN			
lsnstpy	IS-NR	Allowed	ACCESS

Command Completed.

;

If the Origin-Based MTP Routing feature supporting exception routes is enabled and on and **full** mode is specified, all provisioned exception route sets are displayed in addition to the regular route sets, as shown by the following example:

rept-stat-rte:mode=full

```
tekelecstp 06-06-01 14:06:10 EST EAGLE 35.0.0
  DPCA          PST          SST          AST
  004-004-004   00S-MT      Idle        INACCESS

  OPCA          PST          SST          AST
  001-001-001   IS-NR      Allowed    ACCESS

  ILSN          PST          SST          AST
  lsnstpy       IS-NR      Allowed    ACCESS

  DPCN          PST          SST          AST
  00001         IS-NR      Allowed    ACCESS

  SI            PST          SST          AST
  10           IS-NR      Allowed    ACCESS

  00002         IS-NR      Allowed    ACCESS
  00005         00S-MT      Prohibit   INACCESS
```

00004	OOS-MT	Prohibit	INACCESS
DPCN24	PST	SST	AST
DPCI	PST	SST	AST

Command Completed.

;

If the Origin-Based MTP Routing feature is enabled and on, then **rtx** mode is permitted for the command, and all provisioned exception routes are displayed, as shown by the following example:

rept-stat-rte:mode=rtx

```
tekelecstp 06-06-01 14:06:10 EST EAGLE 35.0.0
  DPCA          PST          SST          AST
  004-004-004   OOS-MT      Idle         INACCESS

  OPCA
  001-001-001   IS-NR       Allowed    ACCESS

  ILSN
  lsnstpy       IS-NR       Allowed    ACCESS

  DPCN
  00001         PST        SST          AST
                   IS-NR     Allowed    ACCESS

  SI
  10            IS-NR       Allowed    ACCESS
```

Command Completed.

;

The following example shows how summary information for all provisioned cluster and noncluster DPCs is reported.

rept-stat-rte

```
rlghncxa03w 04-01-07 14:59:11 EST EAGLE 31.3.0
  DPCA          PST          SST          AST
  009-000-000   IS-ANR      Allowed    ACCESS
  009-003-*     IS-ANR      Allowed    ACCESS
  009-003-006   OOS-MT      Prohibit   INACCESS
  009-003-001   IS-NR       Allowed    ACCESS
  009-003-002   IS-NR       Allowed    ACCESS
  009-003-003   OOS-MT      Prohibit   INACCESS
  009-004-006   IS-NR       Allowed    ALMINH
  004-002-002   IS-NR       Allowed    ACCESS
  006-000-000   IS-ANR      Allowed    ACCESS
  007-001-001   IS-NR       Allowed    ACCESS
  101-033-*     IS-NR       Allowed    ACCESS

  DPCI          PST          SST          AST
  2-004-1       IS-NR       Allowed    ACCESS
  2-004-3       IS-ANR      Allowed    ACCESS
  2-004-2       IS-ANR      Allowed    ACCESS
  2-004-4       IS-NR       Allowed    ACCESS

  DPCN          PST          SST          AST
  02096         IS-NR       Allowed    ACCESS
  02097         IS-ANR      Allowed    ACCESS
  02098         OOS-MT      Prohibit   INACCESS
  02099         OOS-MT      Prohibit   INACCESS
```

Command Completed.

;

The following example shows how specifying a cluster destination on the **dpc** parameter shows the cluster status and routeset information. Information on cluster members (both provisioned and x-list) is not shown. Use the **rept-stat-cluster** command to obtain this information.

rept-stat-rte:dpc=9-3-*

```
rlghncxa03w 04-07-07 14:59:11 EST EAGLE 31.9.0
  DPCA          PST          SST          AST
  009-003-*     IS-NR       Allowed    ACCESS
ALARM STATUS    = No Alarms.
RTE COST  LSN   APCA          LS STAT   NON-ADJ   ROUTE STAT
1*  10  lsnstpa  042-036-123  Allowed   Allowed   Allowed
2   20  lsnstpb  092-240-103  Allowed   Allowed   Allowed
3   30  lsnstpc  128-101-022  Allowed   Allowed   Allowed
4   --  -----  ***_***_***  -----   -----   -----
5   --  -----  ***_***_***  -----   -----   -----
6   --  -----  ***_***_***  -----   -----   -----
;
```

The following example shows how specifying either an FPC or cluster destination for which circular routing has been detected, along with the **mode=full** parameter, displays the name of the linkset on which the circular routing test message was transmitted. It also displays the linkset on which the circularly routed message was received.

rept-stat-rte:dpc=9-3-6:mode=full

```
rlghncxa03w 04-01-07 14:59:11 EST EAGLE 31.3.0
  DPCA          PST          SST          AST
  009-003-006   OOS-MT      Prohibit  INACCESS
ALARM STATUS    = *C xxxx Circular routing detected
RTE COST  LSN   APCA          LS STAT   NON-ADJ   ROUTE STAT
1   10  lsnstpa  042-036-123  Allowed   Allowed   Allowed
2   20  lsnstpb  092-240-103  Allowed   Allowed   Allowed
3   30  lsnstpc  128-101-022  Allowed   Allowed   Allowed
4   --  -----  ***_***_***  -----   -----   -----
5   --  -----  ***_***_***  -----   -----   -----
6   --  -----  ***_***_***  -----   -----   -----
SSN      SUBSYSTEM STATUS

ALIASA          ALIASN          ALIASI
-----
CIRCULAR ROUTING
  XMIT LSN= lsnstpb
  RCV LSN= lsn01a
MEMBER= ***_***_***
Command Completed.
;
```

The following example shows a typical report when a cluster destination and **mode=full** was specified. The interpretation of the circular routing status for cluster destinations is slightly different from the status for full point code destinations.

rept-stat-rte:dpc=9-3-*:mode=full

```
rlghncxa03w 04-01-07 14:59:11 EST EAGLE 31.3.0
  DPCA          PST          SST          AST
  009-003-*     IS-NR       Allowed    ACCESS
ALARM STATUS    = *C xxxx Circular routing detected
RTE COST  LSN   APCA          LS STAT   NON-ADJ   ROUTE STAT
1   10  lsnstpa  042-036-123  Allowed   Allowed   Allowed
2   20  lsnstpb  092-240-103  Allowed   Allowed   Allowed
3   30  lsnstpc  128-101-022  Allowed   Allowed   Allowed
4   --  -----  ***_***_***  -----   -----   -----
5   --  -----  ***_***_***  -----   -----   -----
6   --  -----  ***_***_***  -----   -----   -----
SSN      SUBSYSTEM STATUS
ALIASA          ALIASN          ALIASI
-----
CIRCULAR ROUTING INFO:
```

```

XMIT LSN=lsnstpb RC=20
RCV LSN=lsn01a
MEMBER= 009-003-006
Command Completed.

```

```
;
```

The following example shows how the circular routing alarm for a cluster destination is displayed. A circular routing alarm for a cluster destination indicates that circular routing was detected for a member of the cluster, but no x-list entry could be created for that cluster. Circular routing detected on a cluster destination does not automatically force the output to display the status of the cluster as “OOS-MT Prohibit INACCESS” as it does for a full point code destination.

rept-stat-rte:dpc=9-3-*

```

rlghncxa03w 04-01-07 14:59:11 EST EAGLE 31.3.0
  DPCA          PST          SST          AST
  009-003-*     IS-NR        Allowed     ACCESS
ALARM STATUS    = *C xxxx Circular routing detected
RTE COST  LSN  APCA          LS STAT  NON-ADJ  ROUTE STAT
1   10  lsnstpa 042-036-123 Allowed   Allowed   Allowed
2   20  lsnstpb 092-240-103 Allowed   Allowed   Allowed
3   30  lsnstpc 128-101-022 Allowed   Allowed   Allowed
4   --  ----- ***_***_*** -----
5   --  ----- ***_***_*** -----
6   --  ----- ***_***_*** -----
Command Completed.

```

```
;
```

The following example shows how a subsystem information header is displayed without subsystem information, as when an FPC is specified without defining any subsystems. Because aliases cannot be defined for cluster destinations, this report shows only an empty header, as when an FPC is specified without defining aliases. The circular routing information portion of the report displays “-----” for the linkset names when no circular routing condition exists for the DPC.

rept-stat-rte:dpc=9-3-*:mode=full

```

rlghncxa03w 04-07-07 14:59:11 EST EAGLE 31.9.0
  DPCA          PST          SST          AST
  009-003-*     IS-NR        Allowed     ACCESS
ALARM STATUS    = No Alarms.
RTE COST  LSN  APCA          LS STAT  NON-ADJ  ROUTE STAT
1*  10  lsnstpa 042-036-123 Allowed   Allowed   Allowed
2   20  lsnstpb 092-240-103 Allowed   Allowed   Allowed
3   30  lsnstpc 128-101-022 Allowed   Allowed   Allowed
4   --  ----- ***_***_*** -----
5   --  ----- ***_***_*** -----
6   --  ----- ***_***_*** -----
SSN  SUBSYSTEM STATUS
ALIASA      ALIASN      ALIASI
-----
CIRCULAR ROUTING
XMIT LSN= -----
RCV LSN= -----
MEMBER= ***_***_***
Command Completed.

```

```
;
```

The following example shows how specifying the **stat** parameter along with the *ni-nc-**** or *ni-nc-**** DPC formats causes the output summary report to include only those destinations whose status matches the state specified.

rept-stat-rte:dpc=9-4-***:stat=alminh

```

rlghncxa03w 04-02-31 13:30:00 EST EAGLE 31.3.0
  DPCA          PST          SST          AST
  009-004-006   IS-NR        Allowed   ALMINH
Command Completed.

```

```
;
```

The following example shows a retrieval specifying an ITU national point code where the **chg-stpopts:npcfmti** parameter has been set to **1-1-1-11**:

rept-stat-rte:dpcn=1-1-1-1000

```
rlghncxa03w 04-02-31 13:30:00 EST EAGLE 31.3.0
CAUTION : Node isolated...route status out of date!
  DPCN          PST          SST          AST
  1-1-1-1000    00S-MT      Prohibit    INACCESS
ALARM STATUS    = *C 0313 DPC is prohibited
RTE COST  LSN          APCN          LS STAT  NON-ADJ  ROUTE STAT
1   10  lsitu          1-1-1-1000    Prohibit  Allowed  Prohibit
2   --  -----      ***_***_***  -----  -----  -----
3   --  -----      ***_***_***  -----  -----  -----
4   --  -----      ***_***_***  -----  -----  -----
5   --  -----      ***_***_***  -----  -----  -----
6   --  -----      ***_***_***  -----  -----  -----
```

Command Completed.

;

The following example shows a private adjacent point code:

rept-stat-rte:mode=full:dpc=1-1-2

```
rlghncxa03w 05-01-07 13:30:00 EST EAGLE 31.12.0
  DPCA          PST          SST          AST
  001-001-002    00S-MT      Idle        INACCESS
ALARM STATUS    = No Alarms.
RTE COST  LSN          APCA          LS STAT  NON-ADJ  ROUTE STAT
1   01  ls11234567    001-001-002  Prohibit  Allowed  Prohibit
2   02  ls12345678    p-001-001-002  Prohibit  Allowed  Prohibit
3   --  -----      ***_***_***  -----  -----  -----
4   --  -----      ***_***_***  -----  -----  -----
5   --  -----      ***_***_***  -----  -----  -----
6   --  -----      ***_***_***  -----  -----  -----
SSN      SUBSYSTEM STATUS
```

```
  ALIASA          ALIASN          ALIASI
  000-000-001    -----
CIRCULAR ROUTING INFO:
  XMIT LSN=----- RC=--
  RCV LSN=-----
  MEMBER =-----
Command Completed.
```

;

The following example shows how the asterisks in the space after the route numbers in the following examples indicate which route (or combined route) is carrying traffic.

rept-stat-rte:dpc=1-1-1

```
tekelecstp 04-09-24 09:19:04 EST EAGLE 31.9.0
  DPCA          PST          SST          AST
  001-001-001    IS-NR      Allowed    ACCESS
ALARM STATUS    = No Alarms.
RTE COST  LSN          APCA          LS STAT  NON-ADJ  ROUTE STAT
1*  05  lse1e1          001-001-001  Allowed  Allowed  Allowed
2*  05  lse1e2          001-002-001  Allowed  Allowed  Allowed
3   10  lse1e3          001-003-001  Allowed  Allowed  Allowed
4   --  -----      ***_***_***  -----  -----  -----
5   --  -----      ***_***_***  -----  -----  -----
6   --  -----      ***_***_***  -----  -----  -----
Command Completed.
```

;

The following example shows how no asterisk appears after the route number when no routes were carrying traffic.

rept-stat-rte:dpc=1-1-1

```
tekelecstp 06-05-24 09:19:04 EST EAGLE 35.0.0
  DPCA          PST          SST          AST
  001-001-001   OOS-MT       Prohibit    INACCESS
ALARM STATUS    = *C 0313 DPC is prohibited
RTE COST  LSN      APCA          LS STAT  NON-ADJ  ROUTE STAT
1   05   lse1e1     001-001-001  Prohibit  Allowed  Prohibit
2   05   lse1e2     001-002-001  Prohibit  Allowed  Prohibit
3   10   lse1e3     001-003-001  Prohibit  Allowed  Prohibit
4   --   -----   ***_***_***  -----  -----  -----
5   --   -----   ***_***_***  -----  -----  -----
6   --   -----   ***_***_***  -----  -----  -----
```

Command Completed.

;

The following example shows the output when the primary route is not carrying traffic.

rept-stat-rte:dpc=1-1-1

```
tekelecstp 06-05-24 09:19:04 EST EAGLE 35.0.0
  DPCA          PST          SST          AST
  001-001-001   IS-ANR       Restrict  ACCESS
ALARM STATUS    = *C 0334 DPC Subsystem is Abnormal
RTE COST  LSN      APCA          LS STAT  NON-ADJ  ROUTE STAT
1   05   lse1e1     001-001-001  Prohibit  Allowed  Prohibit
2   05   lse1e2     001-002-001  Prohibit  Allowed  Prohibit
3*  10   lse1e3     001-003-001  Allowed   Allowed  Allowed
4   --   -----   ***_***_***  -----  -----  -----
5   --   -----   ***_***_***  -----  -----  -----
6   --   -----   ***_***_***  -----  -----  -----
```

Command Completed.

;

The following example shows how the **rtx** mode displays all exception route sets provisioned against the specified DPC when the Origin-Based MTP Routing feature is enabled and on:

rept-stat-rte:dpc=9-3-*:mode=rtx

```
tekelecstp 06-06-01 16:21:39 EST EAGLE 35.0.0
  DPCA          PST          SST          AST
  009-003-*     IS-NR       Allowed   ACCESS
ALARM STATUS    = No Alarms.
RTE COST  LSN      APCA          LS STAT  NON ADJ  ROUTE STAT
1   10   lsnstpa    042-36-23  Allowed  Allowed  Allowed
2   20   lsnstpb    092-40-03  Allowed  Allowed  Allowed
3   30   lsnstpc    128-01-22  Prohibit Prohibit  Allowed
4   --   -----   ***_**_**  -----  -----  -----
5   --   -----   ***_**_**  -----  -----  -----
6   --   -----   ***_**_**  -----  -----  -----
```

Exception Routes:

```
  OPCA          PST          SST          AST
  001-001-001   IS-NR       Allowed   ACCESS
```

```
  ILSN          PST          SST          AST
  lsnstpy       IS-NR       Allowed   ACCESS
```

Command Completed.

The following example displays how all provisioned exception route sets are displayed in addition to the regular route sets when the Origin-Based MTP Routing feature is enabled and on and the **full** mode is specified.

rept-stat-rte:dpc=9-3-*:mode=full

```
tekelecstp 06-06-01 16:21:39 EST EAGLE 35.0.0
  DPCA          PST          SST          AST
  009-003-006    00S-MT      Prohibit    INACCESS
ALARM STATUS    = = *C 0319 REPT-MTPLP-DET: Circ rte det(cong)
RTE COST  LSN  APCA          LS STAT    NON ADJ    ROUTE STAT
1   10  lsnstpa  042-036-123 Allowed    Allowed    Allowed
2   20  lsnstpb  092-240-103 Allowed    Allowed    Allowed
3   30  lsnstpc  128-101-022 Allowed    Allowed    Allowed
4   --  -----  ***_***_*** ----- ----- -----
5   --  -----  ***_***_*** ----- ----- -----
6   --  -----  ***_***_*** ----- ----- -----
SSN  SUBSYSTEM STATUS

ALIASA          ALIASN          ALIASI
-----
CIRCULAR ROUTING INFO:
  XMIT LSN=lsnstpb  RC=20
  RCV  LSN=lsn01a
  MEMBER =-----
```

Exception Routes:

```
      OPCA          PST          SST          AST
      001-001-001    IS-NR      Allowed    ACCESS

      ILSN
      lsnstpy          IS-NR      Allowed    ACCESS
```

Command Completed.

;

The following example shows how all provisioned exception route sets are displayed in addition to the regular route sets if the Origin-Based MTP Routing feature is enabled and on and the **full** mode is specified.

rept-stat-rte:mode=full

```
tekelecstp 06-06-01 14:06:10 EST EAGLE 35.0.0
  DPCA          PST          SST          AST
  004-004-004    00S-MT      Idle        INACCESS

  OPCA          PST          SST          AST
  001-001-001    IS-NR      Allowed    ACCESS

  ILSN          PST          SST          AST
  lsnstpy        IS-NR      Allowed    ACCESS

  DPCN          PST          SST          AST
  00001          IS-NR      Allowed    ACCESS

  SI            PST          SST          AST
  10            IS-NR      Allowed    ACCESS

  00002          IS-NR      Allowed    ACCESS
  00005          00S-MT      Prohibit    INACCESS
  00004          00S-MT      Prohibit    INACCESS

  DPCN24         PST          SST          AST

  DPCI           PST          SST          AST
```


Command Completed.

;

The following example shows how all provisioned exception routes are displayed if the Origin-Based MTP Routing feature is enabled and on and the **rtx** mode is specified.

rept-stat-rte:mode=rtx

```
tekelecstp 06-06-01 14:06:10 EST EAGLE 35.0.0
  DPCA          PST          SST          AST
  004-004-004   OOS-MT      Idle         INACCESS

  OPCA
  001-001-001   IS-NR       Allowed    ACCESS

  ILSN
  lsnstpy       IS-NR       Allowed    ACCESS

  DPCN          PST          SST          AST
  00001         IS-NR       Allowed    ACCESS

  SI
  10            IS-NR       Allowed    ACCESS
```

Command Completed.

;

The following example shows the status of the destination which is attached with a routeset and associated historical routes. The contents of that route set are displayed first. Next, any historical routes provisioned against that destination are displayed. This information is followed by subsystem, circular routing, and exception route set statuses currently supported by the **full** mode.

rept-stat-rte:dpc=1-1-1:mode=full

```
stdcfg1a 08-01-16 14:09:24 EST EAGLE 38.0.0
  DPCA          PST          SST          AST
  001-001-001   IS-ANR      Restrict  ACCESS
ALARM STATUS    = *      0312 DPC is restricted.
RSN             = rsf

RTE COST  LSN          APCA          LS STAT  NON-ADJ  ROUTE STAT
1*  10    lsBD1        002-001-000  Restrict  Allowed  Restrict
2*  10    lsBD2        003-001-000  Restrict  Allowed  Restrict
3*  10    lsBD3        004-001-000  Restrict  Allowed  Restrict
4*  10    lsBE1        005-001-000  Allowed   Allowed  Allowed
5*  10    lsBE2        006-001-000  Allowed   Allowed  Allowed
6   20    lsBC         007-001-000  Allowed   Allowed  Allowed
```

Routes below are unused, provisioned directly against destination:

```
RTE COST  LSN          APCA          LS STAT  NON-ADJ  ROUTE STAT
1   10    e2e1         001-001-000  Idle     -----  Prohibit
2   20    e2e4         004-001-000  Idle     -----  Prohibit
3   30    e2e3         003-001-000  Idle     -----  Prohibit
4   --    -----    ***_***_***  -----  -----  -----
5   --    -----    ***_***_***  -----  -----  -----
6   --    -----    ***_***_***  -----  -----  -----
```

SSN SUBSYSTEM STATUS

```
ALIASA          ALIASN          ALIASI
-----
```

```
CIRCULAR ROUTING INFO:
XMIT LSN=lsBC RC=20
RCV LSN=lsAD
MEMBER =-----
```

Exception Routes:

Command Completed.

;

The following example shows how summary information for all provisioned cluster and noncluster DPCs is reported.

rept-stat-rte

```
tekelecstp 08-02-15 10:31:06 EST EAGLE 38.0.0

DPCA          RSN      PST      SST      AST
009-000-000    rs1      IS-ANR    Allowed  ACCESS
009-003-*      rs3rtp   IS-ANR    Allowed  ACCESS
009-003-006    -----  OOS-MT    Prohibit INACCESS
009-003-001    -----  IS-NR     Allowed  ACCESS
009-003-002    rs2dur   IS-NR     Allowed  ACCESS
009-003-003    rsf      OOS-MT    Prohibit INACCESS
009-004-006    rs9morr  IS-NR     Allowed  ALMINH
004-002-002    rsf      IS-NR     Allowed  ACCESS
006-000-000    rs3rtp   IS-ANR    Allowed  ACCESS
101-033-*      rs12     IS-NR     Allowed  ACCESS

DPCN          RSN      PST      SST      AST
02097         rs6      IS-ANR    Allowed  ACCESS
02098         rsi      OOS-MT    Prohibit INACCESS
02099         -----  OOS-MT    Prohibit INACCESS

DPCN24        RSN      PST      SST      AST

DPCI          RSN      PST      SST      AST
2-004-1       rs4cary  IS-NR     Allowed  ACCESS
2-004-3       rs8ch    IS-ANR    Allowed  ACCESS
2-004-2       -----  IS-ANR    Allowed  ACCESS
2-004-4       -----  IS-NR     Allowed  ACCESS
```

Command Completed.

;

The following example shows how all provisioned exception route sets are displayed in addition to the regular route sets when the RSET and Origin-Based MTP Routing features are on, and the **full** mode is specified.

rept-stat-rte:mode=full

```
tekelecstp 08-01-21 10:26:56 EST EAGLE 38.0.0

DPCA          RSN      PST      SST      AST
001-001-000    rs1      OOS-MT    Idle     INACCESS
003-001-000    rs2      OOS-MT    Idle     INACCESS
002-102-001    -----  OOS-MT    Idle     INACCESS
001-101-001    rscary   OOS-MT    Idle     INACCESS

OPCA          RSN      PST      SST      AST
001-001-001    rsp      OOS-MT    Idle     INACCESS
002-001-000    rsq      OOS-MT    Idle     INACCESS

ILSN          RSN      PST      SST      AST
e2m1s1        -----  OOS-MT    Idle     INACCESS

CIC  ECIC      RSN      PST      SST      AST
0    1000      rsr      OOS-MT    Idle     INACCESS

SI           RSN      PST      SST      AST
3           -----  OOS-MT    Idle     INACCESS

003-101-001    rsdur   OOS-MT    Idle     INACCESS
004-101-001    -----  OOS-MT    Idle     INACCESS
007-101-001    rsx     OOS-MT    Idle     INACCESS
100-100-*      rsy     OOS-MT    Idle     INACCESS
100-100-001    rsz     OOS-MT    Idle     INACCESS
```

Commands

rept-stat-rte

```

          OPCA                RSN      PST      SST      AST
          001-001-001          rst      00S-MT    Idle    INACCESS
          002-002-002          ----- 00S-MT    Idle    INACCESS
          001-102-001          ----- 00S-MT    Idle    INACCESS
          200-200-001          rsa      00S-MT    Idle    INACCESS

          DPCN                RSN      PST      SST      AST
          1-010-1              ----- 00S-MT    Idle    INACCESS
          1-020-2              rs4      00S-MT    Idle    INACCESS
          1-020-3              rs5      00S-MT    Idle    INACCESS
          1-020-4              rs6      00S-MT    Idle    INACCESS
          1-050-1              rs7      00S-MT    Idle    INACCESS

          OPCA                RSN      PST      SST      AST
          002-001-000          ----- 00S-MT    Idle
INACCESS
          002-101-001          rsv      00S-MT    Idle    INACCESS

          DPCN24              RSN      PST      SST      AST

          DPCI                RSN      PST      SST      AST
          1-030-1              ----- 00S-MT    Idle    INACCESS
          1-030-2              ----- 00S-MT    Idle    INACCESS
          1-040-4              rsch     00S-MT    Idle    INACCESS
          1-070-1              rsmv     00S-MT    Idle    INACCESS

          OPCN                RSN      PST      SST      AST
          1-050-1              ----- 00S-MT    Idle    INACCESS

          ILSN                RSN      PST      SST      AST
          npc1                 ----- 00S-MT    Idle    INACCESS

```

Command Completed.

;

The following example shows how all provisioned exception routes are displayed when the RSET and Origin-Based MTP Routing features are turned on and the **rtx** mode is specified.

rept-stat-rte:mode=rtx

```

stdcfg1a 08-01-16 14:09:24 EST EAGLE 38.0.0

          DPCA                RSN      PST      SST      AST
          001-101-001          rscary   00S-MT    Idle    INACCESS

          OPCA                RSN      PST      SST      AST
          001-001-001          rsp      00S-MT    Idle    INACCESS
INACCESS
          002-001-000          rsq      00S-MT    Idle    INACCESS

          ILSN                RSN      PST      SST      AST
          e2m1s1              ----- 00S-MT    Idle    INACCESS

          DPCN                RSN      PST      SST      AST
          1-050-1              rs7      00S-MT    Idle    INACCESS

          OPCA                RSN      PST      SST      AST
          002-001-000          ----- 00S-MT    Idle
INACCESS
          002-101-001          rsv      00S-MT    Idle
INACCESS

          DPCN24              RSN      PST      SST      AST

          DPCI                RSN      PST      SST      AST
          1-070-1              rsmv     00S-MT    Idle    INACCESS

```

	OPCN	RSN	PST	SST	AST
	1-050-1	-----	00S-MT	Idle	
INACCESS					
	ILSN	RSN	PST	SST	AST
	npc1	-----	00S-MT	Idle	INACCESS

Command Completed.

;

The following example shows the status of all the destinations associated with given routeset.

rept-stat-rte:rsn=rsf

stdcfg1a	08-01-16	14:09:24	EST	EAGLE	38.0.0		
DPCA		RSN		PST		SST	AST
009-003-003		rsf		00S-MT		Prohibit	INACCESS
004-002-002		rsf		IS-NR		Allowed	ACCESS
101-033-*		rsf		IS-NR		Allowed	ACCESS
DPCN		RSN		PST		SST	AST
DPCN24		RSN		PST		SST	AST
DPCI		RSN		PST		SST	AST

Command Completed.

;

Legend

DPC/DPCA—The ANSI destination point code of the route

DPCN—The ITU-TSS national destination point code of the route

DPCN24—The 24-bit ITU national destination point code of the route

DPCI—The ITU-TSS international destination point code of the route

OPC/OPCA—The ANSI origination point code as exception routing criterion of the exception route

OPCN—The ITU-TSS national origination point code as exception routing criterion of the exception route

OPCN24—The 24-bit ITU national origination point code as exception routing criterion of the exception route

OPCI—The ITU-TSS international origination point code as exception routing criterion of the exception route

ILSN—The originating linkset as exception routing criterion of the exception route

CIC —Starting Circuit Identification Code used as the exception routing criterion for this exception route

ECIC—Ending Circuit Identification Code together with CIC defines the CIC range that is used as exception routing criterion for this exception route.

RSN—The name of the routeset

PST—The primary state of the subsystem. The possible values are described in "Possible Values for PST/SST/AST".

SST—The secondary state of the subsystem. The possible values are described in "Possible Values for PST/SST/AST".

AST—The associated state of the subsystem. The possible values are described in .

rept-stat-rtkey**Report the Status of Routing Keys**

Use this command to generate a summary report of the status of the system routing keys.

Keyword: **rept-stat-rtkey**

Related Commands: **chg-appl-rtkey, dlt-appl-rtkey, ent-appl-rtkey, rtrv-appl-rtkey**

Command Class: System Maintenance

Parameters

This command has no parameters.

Example

rept-stat-rtkey

Dependencies

None

Notes

The report generated by the **rept-stat-rtkey** command contains the following information:

- The maximum of static entries (SRKQ) in the routing key table
- The current number of static routing key entries in the routing key table
- The percentage of the static routing key table entries that is provisioned

Output**rept-stat-rtkey**

```
rlghncxa03w 04-02-17 14:59:11 EST EAGLE 31.3.0
SRKQ = 250
```

```
Static Route Key table is (50 of 250) 20% full
1105 Route Key table is (25 of 250) 10% full
1107 Route Key table is (25 of 250) 10% full
```

```
Static Route Key Socket Association table is (80 of 4000) 2% full
1105 Route Key Socket Association table is (40 of 4000) 1% full
1107 Route Key Socket Association table is (40 of 4000) 1% full
```

```
Command Completed.
```

```
;
```

rept-stat-rtx**Report Status Exception Route**

Use this command to display the signaling route status for one or more exception routes to a particular destination.

Keyword: **rept-stat-rtx**

Related Commands: **dlt-rtx, ent-rtx, rtrv-rtx**

Command Class: System Maintenance

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:cic= (optional)

Starting Circuit Identification Code. This parameter is used alone or together with the **ecic** parameter as exception routing criteria for the specified exception route.

Range: **0-16383**

:dpc= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: **dpca**

Range: **p-, 000-255, *, **, *****

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

The asterisk values *****, ******, and ******* are not valid for the *ni* subfield.

If ****** or ******* is specified for the *nc* subfield, either *****, ******, or ******* must be specified for the *ncm* subfield.

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

When **chg-sid:pctype=ansi** is specified, *ni*-*-***** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:dpc/dpca/dpci/dpcn/dpcn24= (optional)

Destination point code.

:dpci= (optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps-

zone—0-7

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

:dpcn= (optional)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**, **p-**, **ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:dpcn24= (optional)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*. The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range: **p-**, **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:ecic= (optional)

Ending Circuit Identification Code. This parameter, together with the **cic** parameter, defines the CIC range that is used as exception routing criteria for the specified exception route.

Range: **0-16383**

:ilsn= (optional)

Incoming Link Set Name. This parameter contains the name of the originating linkset. The parameter value is used as part of the exception routing criteria for the specified exception route.

Range: *ayyyyyyyyy*

1 alphabetic character followed by up to 9 alphanumeric characters.

:opc= (optional)

Origination point code. ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: **opca**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:opc/opca/opci/opcn/opcn24= (optional)

Origination point code.

:opci= (optional)

Origination Point Code. ITU international origination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-**, **p-**, **ps-**, **0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:opc= (optional)

Origination Point Code. ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:opc24= (optional)

Origination Point Code. 24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* indicates a private point code (*prefix-msa-ssa-sp*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:si= (optional)

Service Indicator. This parameter is used as part of the exception routing criteria for the specified exception route.

Range: **0-15**

Example

```
rept-stat-rtx
```

```
rept-stat-rtx:dpc=1-101-1
```

```
rept-stat-rtx:dpc=1-101-1:opc=1-2-1
```

Dependencies

If the **dpcn** parameter is specified, its format must match the format that was assigned with the **chg-stpopts:npcfmti** parameter.

Notes

Each exception route set can have up to 6 associated routes.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (**s-**) and the private and spare point code subtype prefix (**ps-**). All of the point code types support the private (internal) point code subtype prefix (**p-**).

The following table provides a summary description of the reports that are produced by specifying various **rept-stat-rtx** parameters.

Format	Meaning
rept-stat-rtx:dpc=ni-nc-ncm:si=n	Requests a status report of the exception route set for fully provisioned destination <i>ni-nc-ncm</i> , which uses the specified value <i>n</i> of the exception route class si as criterion.
rept-stat-rtx:dpc= ni-nc-ncm	Requests a status report of all exception route sets for fully provisioned destination <i>ni-nc-ncm</i> , regardless of the exception route class(es) used as criterion.
rept-stat-rtx:dpc= ni-nc-*	Requests a status report of all exception route sets for provisioned cluster destination <i>ni-nc-*</i> , regardless of the exception route class(es) used as criterion.
rept-stat-rtx	Requests a status report of all exception route sets for provisioned destinations, regardless of the exception route class(es) used as criterion

This command can be cancelled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

Output

The following command provides the status of all exception route sets provisioned in the system, sorted by DPC.

rept-stat-rtx

```
stdcfg2b 06-03-24 01:54:32 EST EAGLE 35.0.0
```

DPCA	PST	SST	AST
001-101-001	IS-NR	Allowed	ACCESS
OPCA			
001-002-001	IS-ANR	Restrict	ACCESS
SI			
10	OOS-MT	Prohibit	ACCESS
12	OOS-MT	Prohibit	ACCESS
DPCA			
004-101-001	IS-NR	Allowed	ACCESS
SI			
10	IS-NR	Allowed	ACCESS
DPCA			
007-101-001	OOS-MT	Prohibit	INACCESS
OPCA			
003-001-020	OOS-MT	Prohibit	INACCESS

Command Completed.

The following command displays the status of exception route sets provisioned against a particular DPC.

rept-stat-rtx:dpc=1-101-1

```
stdcfg2b 06-03-24 01:54:32 EST EAGLE 35.0.0
```

DPCA	PST	SST	AST
001-101-001	IS-NR	Allowed	ACCESS
OPCA			
001-002-001	IS-ANR	Restrict	ACCESS
SI			
10	OOS-MT	Prohibit	ACCESS
12	OOS-MT	Prohibit	ACCESS

Command Completed.

The following command displays detailed status and alarm information for a specific exception route set provisioned against a DPC.

rept-stat-rtx:dpc=1-101-1:opc=1-2-1

```
stdcfg2b 06-03-24 02:11:31 EST EAGLE 35.0.0
```

DPCA	OPCA	PST	SST	AST		
001-101-001	001-002-001	IS-ANR	Restrict	ACCESS		
ALARM STATUS = * 0533 RTX is restricted						
RTE	COST	LSN	APCA	LS STAT	NON-ADJ	ROUTE STAT
1	09	e2e7	007-001-000	Prohibit	Allowed	Prohibit
2*	10	e2e4	004-001-000	Allowed	Allowed	Allowed
3	--	-----	***_***_***	-----	-----	-----
4	--	-----	***_***_***	-----	-----	-----
5	--	-----	***_***_***	-----	-----	-----
6	--	-----	***_***_***	-----	-----	-----

```

Command Completed.
;

```

Legend

DPC/DPCA—The ANSI destination point code of the exception route

DPCN—The ITU-TSS national destination point code of the exception route

DPCN24—The 24-bit ITU national destination point code of the exception route

DPCI—The ITU-TSS international destination point code of the exception route

OPC/OPCA—The ANSI origination point code as exception routing criterion of the exception route

OPCN—The ITU-TSS national origination point code as exception routing criterion of the exception route

OPCN24—The 24-bit ITU national origination point code as exception routing criterion of the exception route

OPCI—The ITU-TSS international origination point code as exception routing criterion of the exception route

ILSN—The originating linkset as exception routing criterion of the exception route

CIC—Starting Circuit Identification Code used as the exception routing criterion for this exception route

ECIC—Ending Circuit Identification Code together with CIC defines the CIC range that is used as exception routing criterion for this exception route.

SI—Service Indicator used as the exception routing criterion for this exception route

PST—The primary state of the subsystem. The possible values are described in "Possible Values for PST/SST/AST".

SST—The secondary state of the subsystem. The possible values are described in "Possible Values for PST/SST/AST".

AST—The associated state of the subsystem. The possible values are described in "Possible Values for PST/SST/AST".

rept-stat-sccp

Report Status SCCP

Use this command to display the following types of reports:

- **rept-stat-sccp** (with no parameters)—displays the status of the SCCP, DSM, and E5-SM4G cards and the A-Port (IS41 Mobile Number Portability), ATINPQ (ATI Number Portability Query), EIR (Equipment Identity Register), G-Flex (GSM Flexible Numbering), G-Port (GSM Mobile Number Portability), GTT (Global Title Translation), IDP Relay (Prepaid IDP Query Relay), IGM (IS41 GSM Migration), INP (INAP-based Number Portability), LNP (Local Number Portability), LRNQT (ITU TCAP LRN Query), MO SMS IS41-to-GSM Migration, MO-based GSM SMS NP, MO-based IS41 SMS NP, PPSMS (Prepaid SMS Intercept Ph1), and V-Flex (Voice Mail Router), services executing on those cards. This command also displays any cards that are denied SCCP service.
- **rept-stat-sccp:mode=perf**—targets the general SCCP traffic performance for SCCP and Service Module cards. The report supplies message rates for group ticket voucher (TVG) performance.
- **rept-stat-sccp:loc=nnnn**—provides a detailed view of the status of SCCP services provided by a specific SCCP card or Service Module card. Fields are omitted if an associated feature is not turned on.

NOTE: The **rept-stat-sccp** and **rept-stat-sccp:mode=perf** reports include the status of TSM and DSM cards but do not differentiate between these card types.

NOTE: To retrieve traffic statistics for the LNP feature, the **rept-stat-lnp** command can also be used.

NOTE: When turned on, the A-Port, IS41 GSM Migration (IGM), and Prepaid SMS Intercept Ph1 (PPSMS) features share statistic status with the G-Port feature. If the PPSMS, MO-based IS41 SMS NP, MO-based GSM SMS NP, Portability Check for Mobile Originated SMS (MNPSMS), or MO SMS IS41-to-GSM Migration feature is on, the display title for the statistic status is SMSMR. If the G-Port feature is on, with or without the PPSMS feature, the display title for the statistic status is GPORT. If the A-Port or IGM feature is on, with or without the G-Port and PPSMS features, the display title for the statistic status is MNP.

Keyword: **rept-stat-sccp**

Related Commands: **chg-th-alm**, **rtrv-th-alm**

Command Class: System Maintenance

Parameters

:loc= (optional)

Card Address. Use this parameter to specify the location of the SCCP/VSCCP card to be reported on.

Range: 1101-1108, 1111-1117, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Default: Report a summary of all cards.

:mode= (optional)

Use this parameter to provide extended performance information, including output about group ticket voucher (TVG) performance and message rates for direct assignments.

Range: **perf**

Default: No extended performance information is displayed.

:peakreset= (optional)

Reset all Peak values to zero.

Range: **yes**

Example

```
rept-stat-sccp
```

```
rept-stat-sccp:mode=perf
```

```
rept-stat-sccp:loc=1106
```

Dependencies

No other **rept-stat-xxx** command can be in progress when this command is entered.

A TSM or Service Module card running the **sccp**, **vsccp**, or **sccphc** application must be configured in the system before this command can be entered.

Only one optional parameter at a time can be specified in the command.

The card location (**loc** parameter) must identify a configured TSM or Service Module card running the **sccp**, **vsccp**, or **sccphc** application.

Commands

rept-stat-sccp

Notes

None

Output

If the Equipment Identity Register (EIR), G-Port, INP, 1100 TPS/DSM for ITU NP, ANSI-41 INP Query (AINPQ), A-Port, IS41 GSM Migration (IGM), E5-SM4G Throughput Capacity, or V-Flex features are enabled, then the **ansigflex** system option is disabled.

The following example shows the output of the **rept-stat-sccp** command when the A-Port, G-Flex, G-Port, INP, and Prepaid SMS Intercept Ph1 features are turned on. The ATINP, EIR, LNP, LRNQT, PLNP, TLNP, V-Flex, and WNP features are turned off:

rept-stat-sccp

```
tklc1091301 08-08-18 23:44:59 EST EAGLE5 40.0.0
SCCP SUBSYSTEM REPORT IS-NR Active
  SCCP ALARM STATUS = No Alarms
INPQ SUBSYSTEM REPORT IS-ANR Restricted -----
  ASSUMING MATE'S LOAD
  INPQ: SSN STATUS = Allowed MATE SSN STATUS = Prohibited
  INPQ ALARM STATUS = No Alarms
GFLEX SERVICE REPORT IS-ANR Active
  GFLEX ALARM STATUS = No Alarms
MNP SERVICE REPORT IS-ANR Active
  MNP ALARM STATUS = No Alarms

SCCP Cards Configured=4 Cards IS-NR=2
System TPS Alarm Threshold = 100% Total Capacity
System Peak SCCP Load = 3000 TPS
System Total SCCP Capacity = 5000 TPS

CARD  VERSION      PST      SST      AST      MSU USAGE  CPU USAGE
-----
1212  101-001-000  IS-NR      Active    ALMINH     45%        30%
1301 P 101-001-000  IS-NR      Active    -----    35%        40%
1305  -----      OOS-MT     Isolated  -----    0%         0%
2112  -----      OOS-MT-DSBLD Manual    -----    0%         0%
-----
SCCP Service Average MSU Capacity = 40%      Average CPU Capacity = 35%

AVERAGE CPU USAGE PER SERVICE:
  GTT = 15% GFLEX = 5% MNP = 10%
  INPMR = 2% INPQ = 3%

TOTAL SERVICE STATISTICS:

SERVICE  SUCCESS  ERRORS  FAIL  REROUTE\  FORWARD  TOTAL
          TO GTT  RATIO  WARNINGS  TO GTT
GTT:      1995    5    0%      -      -      2000
GFLEX:     500    1    0%      4      10     515
MNP:       800    0    0%      2      3      805
INPMR:     50    5    0%      0      15      70
INPQ:     499    1    0%      -      -      500
```

Command Completed.

;

The following example provides status on services for the specified card. In this example, the A-Port, G-Flex, G-Port, INP, and Prepaid SMS Intercept Ph1 features are turned on, the EIR, LNP, LRNQT, PLNP, TLNP, V-Flex, and WNP features are turned off, and the ATINP feature is not enabled.

rept-stat-sccp:loc=1106

```
tklc1091301 08-10-18 23:44:59 EST EAGLE5 40.0.0
CARD VERSION  TYPE  PST      SST      AST
1106 101-010-000 DSM    IS-NR      Active    -----
CARD ALARM STATUS = No Alarms.
  GTT: STAT = ACT CPU USAGE = 10%
```

```

GFLEX: STAT = ACT      CPU USAGE = 10%
MNP:   STAT = ACT      CPU USAGE = 10%
INPMR: STAT = ACT      CPU USAGE = 13%
INPQ:  STAT = ACT      CPU USAGE = 20%
-----
TOTAL      = 63%

```

CARD SERVICE STATISTICS:

SERVICE	SUCCESS	ERRORS	WARNINGS	FORWARD TO GTT	TOTAL
GTT:	1995	5	-	-	2000
GFLEX:	500	1	4	10	515
MNP:	500	1	4	10	515
INPMR:	50	2	3	15	70
INPQ:	499	1	-	-	500

Command Completed.

;

The following example displays output for a specified card when the G-Flex, G-Port, and INP features are turned on, the EIR, LNP, LRNQT, PLNP, TLNP, V-Flex, and WNP features are turned off, and the ATINP feature is not enabled.

rept-stat-sccp:loc=2317

```

tklc1091301 08-10-18 23:44:59 EST EAGLE5 40.0.0
CARD  VERSION  TYPE  PST  SST  AST
2317  127-008-000 DSM  IS-NR  Active  -----
CARD ALARM STATUS = No Alarms.
GTT:   STAT = ACT      CPU USAGE = 0%
GFLEX: STAT = ACT      CPU USAGE = 0%
MNP:   STAT = ACT      CPU USAGE = 0%
INPMR: STAT = ACT      CPU USAGE = 0%
INPQ:  STAT = ACT      CPU USAGE = 0%
-----
TOTAL      = 0%

```

CARD SERVICE STATISTICS

SERVICE	SUCCESS	ERRORS	WARNINGS	FORWARD TO GTT	TOTAL
GTT:	0	0	-	-	0
GFLEX:	0	0	0	0	0
MNP:	0	0	0	0	0
INPMR:	0	0	0	0	0
INPQ:	0	0	-	-	0

Command Completed.

;

The following example displays output for a specified card when the GTT feature is turned on, the EIR, G-Flex, G-Port, INP, LNP, LRNQT, PLNP, Prepaid SMS Intercept Ph1, TLNP, V-Flex, and WNP features are turned off, and the ATINP feature is not enabled. Card 1111 is a TSM card with a capacity of 850 TPS.

rept-stat-sccp:loc=1111

```

tklc1091301 08-10-18 11:33:18 EST EAGLE5 40.0.0
CARD  VERSION  TYPE  PST  SST  AST
1111  127-008-000 TSM  IS-NR  Active  -----
CARD ALARM STATUS = No Alarms.
GTT:   STAT = ACT      CPU USAGE = 1%
-----
TOTAL      = 1%

```

CARD SERVICE STATISTICS

SERVICE	SUCCESS	ERRORS	WARNINGS	FORWARD TO GTT	TOTAL
GTT:	113	0	-	-	113

Command Completed.

;

The following example displays output when the Prepaid SMS Intercept Ph1 feature is turned on, the A-Port, G-Flex, G-Port, LNP, LRNQT, PLNP, TLNP, V-Flex, and WNP features are turned off, and the ATINP feature is not enabled.

rept-stat-sccp

```
e1030701 08-08-18 02:43:17 EST EAGLE 40.0.0
SCCP SUBSYSTEM REPORT IS-NR Active -----
SCCP ALARM STATUS = No Alarms

SCCP Cards Configured= 1 Cards IS-NR= 1
System Daily Peak SCCP Load 0 TPS 00-00-15 00:41:06
System Overall Peak SCCP Load 0 TPS 00-00-00 00:00:00
System Total SCCP Capacity 850 TPS (850 max SCCP Capacity)
System SCCP Capacity Calc. Method (N)
System TPS Alarm Threshold 680 TPS ( 80% System N SCCP Capacity)

CARD VERSION PST SST AST MSU CPU
USAG Usage Usage
-----
1105 P 039-007-001 IS-NR Active ----- 0% 5%
-----
SCCP Service Average MSU Capacity = 0% Average CPU Capacity = 5%

AVERAGE CPU USAGE PER SERVICE:
GTT = 0% SMSMR = 0%

TOTAL SERVICE STATISTICS:

SERVICE SUCCESS ERRORS FAIL REROUTE\ FORWARD TOTAL
RATIO WARNINGS TO GTT
GTT: 0 0 0% - - 0
SMSMR: 0 0 0% 0 0 0
```

Command Completed.

;

The following example displays output when the G-Port feature is turned on, and the 1100 TPS/DSM for ITU NP features is enabled but turned off.

rept-stat-sccp

```
e1030701 06-09-18 02:43:17 EST EAGLE 36.0.0
SCCP SUBSYSTEM REPORT IS-NR Active -----
SCCP ALARM STATUS = No Alarms
GPORT SERVICE REPORT OOS-MT-DSBLD Manual -----
GPORT ALARM STATUS = *C 0529 Service is disabled

SCCP Cards Configured= 1 Cards IS-NR= 1
System Daily Peak SCCP Load 0 TPS 00-00-15 00:41:06
System Overall Peak SCCP Load 0 TPS 00-00-00 00:00:00
System Total SCCP Capacity 850 TPS (850 max SCCP Capacity)
System SCCP Capacity Calc. Method (N)
System TPS Alarm Threshold 680 TPS ( 80% System N SCCP Capacity)

CARD VERSION PST SST AST MSU CPU
USAG Usage Usage
-----
1105 P 039-007-001 IS-NR Active ----- 0% 5%
-----
SCCP Service Average MSU Capacity = 0% Average CPU Capacity = 5%

AVERAGE CPU USAGE PER SERVICE:
GTT = 0% GPORT = 0%

TOTAL SERVICE STATISTICS:

SERVICE SUCCESS ERRORS FAIL REROUTE\ FORWARD TOTAL
RATIO WARNINGS TO GTT
GTT: 0 0 0% - - 0
GPORT: 0 0 0% 0 0 0
```



```

GTT:          0          0          0%          -          -          0
GPORT:        0          0          0%          0          0          0

```

Command Completed.

;

The following example displays output when the G-Port feature and the 1100 TPS/DSM for ITU NP feature are turned on.

rept-stat-sccp

```

e1030701 06-09-18 02:43:57 EST EAGLE 36.0.0
SCCP SUBSYSTEM REPORT IS-NR          Active      -----
      SCCP ALARM STATUS = No Alarms
GPORT SERVICE REPORT OOS-MT-DSBLD    Manual      -----
      GPORT ALARM STATUS = *C 0529 Service is disabled

SCCP Cards Configured= 1      Cards IS-NR= 1
System Daily Peak SCCP Load      0      TPS 00-00-15 00:41:06
System Overall Peak SCCP Load      0      TPS 00-00-00 00:00:00
System Total SCCP Capacity      1100    TPS (1100    max SCCP Capacity)
System SCCP Capacity Calc. Method (N)
System TPS Alarm Threshold      880      TPS ( 80% System    N SCCP Capacity)

CARD   VERSION      PST          SST          AST          MSU   CPU
              USAGE  USAGE
-----
1105 P 039-007-001  IS-NR          Active      -----      0%   6%
-----
SCCP Service Average MSU Capacity =  0%   Average CPU Capacity =  6%

AVERAGE CPU USAGE PER SERVICE:
GTT   =  0%   GPORT =  0%

TOTAL SERVICE STATISTICS:

SERVICE    SUCCESS    ERRORS    FAIL    REROUTE\    FORWARD    TOTAL
            0          0        RATIO    WARNINGS    TO GTT
GTT:                0          0        0%        -          -          0
GPORT:              0          0        0%        0          0          0

```

Command Completed.

;

The following example displays output when the G-Port, G-Flex, and 1100 TPS/DSM for ITU NP features are turned on.

rept-stat-sccp

```

e1030701 06-09-18 02:44:41 EST EAGLE 36.0.0
SCCP SUBSYSTEM REPORT IS-NR          Active      -----
      SCCP ALARM STATUS = No Alarms
GFLEX SERVICE REPORT OOS-MT-DSBLD    Manual      -----
      GFLEX ALARM STATUS = *C 0529 Service is disabled
GPORT SERVICE REPORT OOS-MT-DSBLD    Manual      -----
      GPORT ALARM STATUS = *C 0529 Service is disabled

SCCP Cards Configured= 1      Cards IS-NR= 1
System Daily Peak SCCP Load      0      TPS 00-00-15 00:41:06
System Overall Peak SCCP Load      0      TPS 00-00-00 00:00:00
System Total SCCP Capacity      1100    TPS (1100    max SCCP Capacity)
System SCCP Capacity Calc. Method (N)
System TPS Alarm Threshold      880      TPS ( 80% System    N SCCP Capacity)

CARD   VERSION      PST          SST          AST          MSU   CPU
              USAGE  USAGE
-----
1105 P 039-007-001  IS-NR          Active      -----      0%   6%

```

```
-----
SCCP Service Average MSU Capacity = 0% Average CPU Capacity = 6%
```

AVERAGE CPU USAGE PER SERVICE:

```
GTT = 0% GFLEX = 0% GPORT = 0%
```

TOTAL SERVICE STATISTICS:

SERVICE	SUCCESS	ERRORS	FAIL RATIO	REROUTE\ WARNINGS	FORWARD TO GTT	TOTAL
GTT:	0	0	0%	-	-	0
GFLEX:	0	0	0%	0	0	0
GPORT:	0	0	0%	0	0	0

```
Command Completed.
```

;

The following example displays output when **mode=perf**, the G-Flex and G-Port features are turned on, the EIR, LNP, LRNQT, PLNP, TLNP, V-Flex, and WNP features are turned off, and the ATINP feature is not enabled. The **ansigflex** system option is enabled.

rept-stat-sccp:mode=perf

```
tklc1091301 08-10-18 23:44:44 EST EAGLE5 40.0.0
```

```
SCCP SUBSYSTEM REPORT IS-NR      Active      -----
      SCCP ALARM STATUS = No Alarms
GFLEX SERVICE REPORT IS-NR      Active      -----
      GFLEX ALARM STATUS = No Alarms
MNP SERVICE REPORT IS-NR       Active      -----
      MNP ALARM STATUS  = No Alarms
```

```
SCCP Cards Configured= 4      Cards IS-NR= 4
System Daily Peak SCCP Load    0      TPS 08-01-08 22:45:38
System Overall Peak SCCP Load  0      TPS 00-00-00 00:00:00
System Total SCCP Capacity     6800   TPS (6800 max SCCP Capacity)
System SCCP Capacity Calc. Method (N)
System TPS Alarm Threshold     5440   TPS ( 80% System N SCCP Capacity)
```

TPS STATISTICS

```
=====
CARD   CPU      TOTAL    CLASS 0    CLASS 1
      USAGE    MSU RATE  TVG RATE  TVG RATE
-----
2113   5%        0         0         0
2213   5%        0         0         0
2217   5%        0         0         0
2317   5%        0         0         0
-----
```

```
AVERAGE MSU USAGE = 0%
AVERAGE CPU USAGE = 5%
TOTAL MSU RATE     = 0
```

STATISTICS FOR PAST 30 SECONDS

```
=====
TOTAL MSUS:          0
TOTAL ERRORS:        0
```

HIGHEST 01 OVERALL DAILY PEAKS LAST 01 DAILY PEAK SCCP LOADS

```
=====
0      TPS 00-00-00 00:00:00      0      TPS 08-01-08 22:45:38
```

```
Command Completed.
```

;

The following example displays output when the LNP, PLNP, TLNP, and WNP features are turned on, the EIR, G-Flex, G-Port, INP, LRNQT, and V-Flex features are turned off, and the ATINP feature is not enabled.

rept-stat-sccp

```
tklc1190601 09-01-18 16:31:14 EST EAGLE5 40.1.0
SCCP SUBSYSTEM REPORT IS-NR      Active      -----
      SCCP ALARM STATUS = No Alarms
LNP SUBSYSTEM REPORT  IS-NR      Active      -----
      ASSUMING MATE'S LOAD
      LNP:  SSN STATUS = Allowed      MATE SSN STATUS = Prohibited
      LNP ALARM STATUS = No Alarms

SCCP Cards Configured= 7      Cards IS-NR= 7
System Daily Peak SCCP Load      0      TPS 08-05-18 00:00:17
System Overall Peak SCCP Load    2908    TPS 08-05-07 13:28:36
System Total SCCP Capacity        11900   TPS (11900 max SCCP Capacity)
System SCCP Capacity Calc. Method (N)
System TPS Alarm Threshold        9520    TPS ( 80% System   N SCCP Capacity)

CARD   VERSION      PST           SST           AST           MSU   CPU
              USAGE   USAGE
-----
1205 P 126-027-000  IS-NR      Active      -----      0%    5%
1317 126-027-000  IS-NR      Active      -----      0%    5%
2213 126-027-000  IS-NR      Active      -----      0%    5%
2215 126-027-000  IS-NR      Active      -----      0%    6%
2217 126-027-000  IS-NR      Active      -----      0%    5%
2317 126-027-000  IS-NR      Active      -----      0%    5%
1105 126-027-000  IS-NR      Active      -----      0%    6%
-----
SCCP Service Average MSU Capacity = 0%   Average CPU Capacity = 5%

AVERAGE CPU USAGE PER SERVICE:
GTT   = 0%
LNPMR = 0%   LNPQS = 0%
WNPQS = 0%
TLNP  = 0%
PLNPQS= 0%

TOTAL SERVICE STATISTICS:

SERVICE    SUCCESS    ERRORS    FAIL    REROUTE\    FORWARD    TOTAL
            0          0         RATIO   WARNINGS   TO GTT
GTT:        0          0         0%      -          -          0
LNPMR:      0          0         0%      -          -          0
LNPQS:      0          0         0%      -          -          0
WNPQS:      0          0         0%      -          -          0
TLNP:       0          0         0%      -          -          0
PLNPQS:     0          0         0%      -          -          0
```

Command Completed.

;

The following example displays output when the EIR, G-Flex, and G-Port features are turned on, the INP, LNP, LRNQT, PLNP, TLNP, V-Flex, and WNP features are turned off, and the ATINP feature is not enabled.

rept-stat-sccp

```
tklc1170501 08-10-18 10:16:24 EST EAGLE5 40.0.0
SCCP SUBSYSTEM REPORT IS-NR      Active      -----
      SCCP ALARM STATUS = No Alarms
EIR SUBSYSTEM REPORT IS-NR      Active      -----
      EIR:  SSN STATUS = Allowed      MATE SSN STATUS = -----
      EIR ALARM STATUS = No Alarms
GFLEX SERVICE REPORT IS-NR      Active      -----
```

```

GFLEX ALARM STATUS = No Alarms
GPORT SERVICE REPORT IS-NR      Active      -----
GPORT ALARM STATUS = No Alarms

SCCP Cards Configured=25      Cards IS-NR=25
System Daily Peak SCCP Load    15639 TPS 08-05-18 06:14:24
System Overall Peak SCCP Load  21062 TPS 08-05-15 14:24:38
System Total SCCP Capacity      21250 TPS (21250 max SCCP Capacity)
System SCCP Capacity Calc. Method (N)
System TPS Alarm Threshold      17000 TPS ( 80% System N SCCP Capacity)

```

CARD	VERSION	PST	SST	AST	MSU USAGE	CPU USAGE
1217	126-030-000	IS-NR	Active	-----	100%	45%
1317	126-030-000	IS-NR	Active	-----	100%	51%
2217	126-030-000	IS-NR	Active	-----	100%	42%
3201	126-030-000	IS-NR	Active	-----	54%	25%
3203	126-030-000	IS-NR	Active	-----	55%	25%
3205	126-030-000	IS-NR	Active	-----	57%	27%
3207	126-030-000	IS-NR	Active	-----	69%	29%
3211	126-030-000	IS-NR	Active	-----	85%	35%
3213	126-030-000	IS-NR	Active	-----	94%	37%
3215	126-030-000	IS-NR	Active	-----	86%	35%
3217	126-030-000	IS-NR	Active	-----	74%	31%
4217	126-030-000	IS-NR	Active	-----	64%	28%
4317	126-030-000	IS-NR	Active	-----	100%	41%
5117	126-030-000	IS-NR	Active	-----	100%	40%
5317	126-030-000	IS-NR	Active	-----	56%	25%
6101 P	126-030-000	IS-NR	Active	-----	57%	32%
6103	126-030-000	IS-NR	Active	-----	63%	27%
6105	126-030-000	IS-NR	Active	-----	69%	37%
6107	126-030-000	IS-NR	Active	-----	66%	29%
6111	126-030-000	IS-NR	Active	-----	59%	27%
6113	126-030-000	IS-NR	Active	-----	55%	34%
6115	126-030-000	IS-NR	Active	-----	55%	26%
6117	126-030-000	IS-NR	Active	-----	54%	26%
1105	126-030-000	IS-NR	Active	-----	55%	26%
1107	126-030-000	IS-NR	Active	-----	55%	26%

SCCP Service Average MSU Capacity = 71% Average CPU Capacity = 32%

AVERAGE CPU USAGE PER SERVICE:

```

GTT  = 1% GFLEX = 4% GPORT = 0%
EIR  = 20%

```

TOTAL SERVICE STATISTICS:

SERVICE	SUCCESS	ERRORS	FAIL RATIO	REROUTE\ WARNINGS	FORWARD TO GTT	TOTAL
GTT:	3510	15	0%	-	-	3525
GFLEX:	100043	0	0%	0	0	100043
GPORT:	312203	0	0%	15	1879	314097
EIR:	45832	0	0%	-	-	45832

Command Completed.

;

The following example displays output when the GTT feature is turned on, the EIR, G-Flex, G-Port, INP, LNP, LRNQT, PLNP, TLNP, V-Flex, and WNP features are turned off, and the ATINP feature is not enabled. Card 1107 is a DSM card with a capacity of 1700 TPS when only the GTT feature is turned on, and card 1111 is a TSM card with a capacity of 850 TPS.

rept-stat-sccp

```
tekelecstp 08-10-18 11:32:54 EST EAGLE5 40.0.0
```

```

SCCP SUBSYSTEM REPORT IS-NR          Active      -----
SCCP ALARM STATUS = No Alarms

SCCP Cards Configured= 2          Cards IS-NR= 2
System Daily Peak SCCP Load      8          TPS 06-09-18 00:00:00
System Overall Peak SCCP Load    8          TPS 06-09-15 15:28:36
System Total SCCP Capacity        2550      TPS (2550 max SCCP Capacity)
System SCCP Capacity Calc. Method (N)
System TPS Alarm Threshold        2040      TPS ( 80% System N SCCP Capacity)

CARD   VERSION      PST           SST           AST           MSU   CPU
              USAGE   USAGE
-----
1107   127-008-000   IS-NR          Active      -----      1%    3%
1111   127-008-000   IS-NR          Active      -----      1%    3%
-----
SCCP Service Average MSU Capacity = 1% Average CPU Capacity = 3%

AVERAGE CPU USAGE PER SERVICE:
GTT = 1%

```

TOTAL SERVICE STATISTICS:

SERVICE	SUCCESS	ERRORS	FAIL RATIO	REROUTE\ WARNINGS	FORWARD TO GTT	TOTAL
GTT:	226	0	0%	-	-	226

Command Completed.

;

The following example displays output when **mode=perf**, the LNP, LRNQT, PLNP, TLNP, and WNP features are turned on, the EIR, G-Flex, G-Port, INP, and V-Flex features are turned off, and the ATINP feature is not enabled.

rept-stat-sccp:mode=perf

```

tklc1190601 08-11-18 16:31:26 EST EAGLE5 40.0.0
SCCP SUBSYSTEM REPORT IS-NR          Active      -----
SCCP ALARM STATUS = No Alarms
LNP SUBSYSTEM REPORT IS-NR          Active      -----
ASSUMING MATE'S LOAD
LNP: SSN STATUS = Allowed           MATE SSN STATUS = Prohibited
LNP ALARM STATUS = No Alarms

SCCP Cards Configured= 7          Cards IS-NR= 7
System Daily Peak SCCP Load      0          TPS 08-05-18 00:00:17
System Overall Peak SCCP Load    2908      TPS 08-05-07 13:28:36
System Total SCCP Capacity        11900     TPS (11900 max SCCP Capacity)
System SCCP Capacity Calc. Method (N)
System TPS Alarm Threshold        9520      TPS ( 80% System N SCCP Capacity)

TPS STATISTICS
=====
CARD   CPU          TOTAL      CLASS 0   CLASS 1
      USAGE      MSU RATE  TVG RATE  TVG RATE
-----
1205   5%           0          0          0
1317   5%           0          0          0
2213   5%           0          0          0
2215   6%           0          0          0
2217   5%           0          0          0
2317   5%           0          0          0
1105   6%           0          0          0
-----
AVERAGE MSU USAGE = 0%
AVERAGE CPU USAGE = 5%
TOTAL MSU RATE     = 0

```

STATISTICS FOR PAST 30 SECONDS

```
=====
TOTAL MSUS:          0
TOTAL ERRORS:        0
```

HIGHEST 01 OVERALL DAILY PEAKS LAST 01 DAILY PEAK SCCP LOADS

```
=====
2908    TPS 08-05-07 13:28:36                      0                      TPS 08-05-18 00:00:17
```

Command Completed.

;

The following example displays output when **mode=perf**, the EIR, G-Flex, and G-Port features are turned on, the INP, LNP, LRNQT, PLNP, TLNP, V-Flex, and WNP features are turned off, and the ATINP feature is not enabled. The **ansigflex** system option is disabled.

rept-stat-sccp:mode=perf

```
tklcl1170501 08-10-18 10:16:35 EST    EAGLE5 40.0.0
SCCP SUBSYSTEM REPORT IS-NR            Active        -----
      SCCP ALARM STATUS = No Alarms
EIR SUBSYSTEM REPORT IS-NR            Active        -----
      EIR:    SSN STATUS = Allowed        MATE SSN STATUS = -----
      EIR ALARM STATUS = No Alarms
GFLEX SERVICE REPORT IS-NR            Active        -----
      GFLEX ALARM STATUS = No Alarms
GPORT SERVICE REPORT IS-NR            Active        -----
      GPORT ALARM STATUS = No Alarms

SCCP Cards Configured=25                Cards IS-NR=25
System Daily Peak SCCP Load            15639    TPS 08-05-18 06:14:24
System Overall Peak SCCP Load           21062    TPS 08-05-15 14:24:38
System Total SCCP Capacity              21250    TPS (21250    max SCCP Capacity)
System SCCP Capacity Calc. Method (N)
System TPS Alarm Threshold              17000    TPS ( 80% System    N SCCP Capacity)
```

TPS STATISTICS

```
=====
CARD    CPU        TOTAL        CLASS 0        CLASS 1
      USAGE        MSU RATE        TVG RATE        TVG RATE
```

```
-----
1217    45%        935        935            0
1317    51%        878        878            0
2217    42%        907        907            0
3201    25%        465        465            0
3203    25%        467        467            0
3205    27%        489        489            0
3207    29%        589        589            0
3211    35%        718        718            0
3213    37%        792        792            0
3215    35%        742        742            0
3217    31%        624        624            0
4217    28%        534        534            0
4317    41%        923        923            0
5117    40%        869        869            0
5317    25%        478        478            0
6101    32%        488        488            0
6103    27%        539        539            0
6105    37%        586        586            0
6107    29%        612        612            0
6111    27%        494        494            0
6113    34%        459        459            0
6115    26%        465        465            0
6117    26%        466        466            0
1105    26%        468        468            0
1107    26%        469        469            0
```

```

-----
AVERAGE MSU USAGE = 71%
AVERAGE CPU USAGE = 32%
TOTAL MSU RATE      = 15460

```

STATISTICS FOR PAST 30 SECONDS

```

=====
TOTAL MSUS:      463497
TOTAL ERRORS:    15

```

HIGHEST 10 OVERALL DAILY PEAKS LAST 10 DAILY PEAK SCCP LOADS

```

=====
21062 TPS 08-05-15 14:24:38                      15639 TPS 08-05-18 06:14:24
15639 TPS 08-05-18 06:14:24                      15631 TPS 08-05-17 23:15:48
15631 TPS 08-05-17 23:15:48                      15617 TPS 08-05-16 16:46:59
15617 TPS 08-05-16 16:46:59                      21062 TPS 08-05-15 14:24:38
12963 TPS 08-05-13 08:41:28                      10130 TPS 08-05-14 03:35:32
12904 TPS 08-05-09 00:39:46                      12963 TPS 08-05-13 08:41:28
12588 TPS 08-05-08 21:08:38                      11983 TPS 08-05-12 01:47:50
11983 TPS 08-05-12 01:47:50                      11963 TPS 08-05-11 09:36:59
11964 TPS 08-05-10 07:07:24                      11964 TPS 08-05-10 07:07:24
11963 TPS 08-05-11 09:36:59                      12904 TPS 08-05-09 00:39:46

```

Command Completed.

;

The following example displays output when **mode=perf**, the G-Flex, G-Port, and INP features are turned on, the EIR, LNP, LRNQT, PLNP, TLNP, V-Flex, and WNP features are turned off, and the ATINP feature is not enabled. The **ansigflex** system option is disabled.

rept-stat-sccp:mode=perf

```

tklc1091301 08-10-08 23:44:44 EST EAGLE5 40.0.0
SCCP SUBSYSTEM REPORT IS-NR                      Active        -----
      SCCP ALARM STATUS = No Alarms
GFLEX SERVICE REPORT IS-NR                      Active        -----
      GFLEX ALARM STATUS = No Alarms
MNP SERVICE REPORT IS-NR                        Active        -----
      MNP ALARM STATUS    = No Alarms

```

```

SCCP Cards Configured= 4                      Cards IS-NR= 4
System Daily Peak SCCP Load                      0            TPS 08-05-08 22:45:38
System Overall Peak SCCP Load                      0            TPS 00-00-00 00:00:00
System Total SCCP Capacity                        3400        TPS (3400        max SCCP Capacity)
System SCCP Capacity Calc. Method (N)
System TPS Alarm Threshold                        2720        TPS ( 80% System        N SCCP Capacity)

```

TPS STATISTICS

```

=====
CARD    CPU        TOTAL        CLASS 0    CLASS 1
      USAGE        MSU RATE    TVG RATE    TVG RATE
-----
2113    5%        0            0            0
2213    5%        0            0            0
2217    5%        0            0            0
2317    5%        0            0            0
-----

```

```

AVERAGE MSU USAGE = 0%
AVERAGE CPU USAGE = 5%
TOTAL MSU RATE      = 0

```

STATISTICS FOR PAST 30 SECONDS

```

=====
TOTAL MSUS:                      0
TOTAL ERRORS:                    0

```

HIGHEST 01 OVERALL DAILY PEAKS LAST 01 DAILY PEAK SCCP LOADS

```
=====
0      TPS 00-00-00 00:00:00      0      TPS 08-05-08 22:45:38
=====
```

Command Completed.

;

The following example shows the output when **mode=perf**, the GTT feature is turned on, the EIR, G-Flex, G-Port, INP, LNP, LRNQT, PLNP, TLNP, V-Flex, and WNP features are turned off, and the ATINP feature is not enabled. Card 1107 is a DSM card with a capacity of 1700 TPS with only GTT on, and 1111 is a DSM card with a capacity of 850 TPS.

rept-stat-sccp:mode=perf

```
tklc1091301 08-10-18 11:33:09 EST  EAGLE5 40.0.0
SCCP SUBSYSTEM REPORT IS-NR      Active      -----
SCCP ALARM STATUS = No Alarms

SCCP Cards Configured= 2      Cards IS-NR= 2
System Daily Peak SCCP Load      8      TPS 08-05-18 00:00:00
System Overall Peak SCCP Load      8      TPS 08-05-15 15:28:36
System Total SCCP Capacity      2550      TPS (2550 max SCCP Capacity)
System SCCP Capacity Calc. Method (N)
System TPS Alarm Threshold      2040      TPS ( 80% System N SCCP Capacity)
```

TPS STATISTICS

```
=====
CARD    CPU      TOTAL      CLASS 0      CLASS 1
        USAGE    MSU RATE  TVG RATE    TVG RATE
-----
1107    3%         4         4           0
1111    4%         4         4           0
-----
AVERAGE MSU USAGE = 1%
AVERAGE CPU USAGE = 3%
TOTAL MSU RATE     = 8
```

STATISTICS FOR PAST 30 SECONDS

```
=====
TOTAL MSUS:      226
TOTAL ERRORS:      0
```

```
HIGHEST 04 OVERALL DAILY PEAKS      LAST 04 DAILY PEAK SCCP LOADS
=====
8      TPS 08-05-15 15:28:36      8      TPS 08-05-18 00:00:00
8      TPS 08-05-15 15:28:37      8      TPS 08-05-17 00:00:01
8      TPS 08-05-17 00:00:01      8      TPS 08-05-16 00:00:00
8      TPS 08-05-18 00:00:00      8      TPS 08-05-15 15:28:37
```

Command Completed.

;

The following example displays output for a specified card when the GTT and LNP features are turned on, the EIR, G-Flex, G-Port, INP, LRNQT, and V-Flex features are turned off, and the ATINP feature is not enabled.

rept-stat-sccp:loc=1105

```
tklc1190601 08-10-18 16:31:46 EST  EAGLE5 40.0.0
CARD  VERSION      TYPE      PST      SST      AST
1105  126-027-000  DSM      IS-NR      Active      -----
CARD ALARM STATUS = ** 0901 Card DB load timeout, check GLS card
GTT:   STAT = ACT      CPU USAGE = 0%
LNPMR: STAT = ----- CPU USAGE = 0%
LNPQS: STAT = ----- CPU USAGE = 0%
-----
TOTAL      = 0%
```

```
CARD SERVICE STATISTICS
SERVICE      SUCCESS      ERRORS      WARNINGS      FORWARD TO GTT      TOTAL
```



```

GTT:          0          0          -          -          0
LNPMPR:       0          0          -          -          0
LNPQS:       0          0          -          -          0

```

Command Completed.

;

The following example displays output for a specified card when the EIR, G-Flex, and G-Port features are turned on, the INP, LNP, LRNQT, PLNP, TLNP, V-Flex, and WNP features are turned off, and the ATINP feature is not enabled. The **ansigflex** system option is disabled.

rept-stat-sccp: loc=1105

```

tklcl1170501 08-10-18 10:16:51 EST EAGLE5 40.0.0
CARD  VERSION      TYPE    PST          SST          AST
1105  126-030-000  DSM      IS-NR        Active        -----
CARD ALARM STATUS      = No Alarms.
  GTT:   STAT = ACT      CPU USAGE = 1%
  GFLEX: STAT = ACT      CPU USAGE = 3%
  GPORT: STAT = ACT      CPU USAGE = 9%
  EIR:   STAT = ACT      CPU USAGE = 2%
-----
TOTAL    = 15%

```

CARD SERVICE STATISTICS

SERVICE	SUCCESS	ERRORS	WARNINGS	FORWARD TO GTT	TOTAL
GTT:	153	2	-	-	155
GFLEX:	2582	0	0	0	2582
GPORT:	8171	0	1	102	8274
EIR:	3089	0	-	-	3089

Command Completed.

;

The following example displays output when the Prepaid SMS Intercept Ph1, G-Flex, and 1100 TPS/DSM for ITU NP features are turned on.

rept-stat-sccp

```

e1030701 06-09-18 02:44:41 EST EAGLE 36.0.0
SCCP SUBSYSTEM REPORT IS-NR        Active        -----
SCCP ALARM STATUS = No Alarms
GFLEX SERVICE REPORT 00S-MT-DSBLD   Manual        -----
GFLEX ALARM STATUS = *C 0529 Service is disabled

SCCP Cards Configured= 1      Cards IS-NR= 1
System Daily Peak SCCP Load    0      TPS 00-00-15 00:41:06
System Overall Peak SCCP Load  0      TPS 00-00-00 00:00:00
System Total SCCP Capacity      1100   TPS (1100   max SCCP Capacity)
System SCCP Capacity Calc. Method (N)
System TPS Alarm Threshold      880    TPS ( 80% System   N SCCP Capacity)

CARD  VERSION      PST          SST          AST          MSU    CPU
                                USAGE  USAGE
-----
1105 P 039-007-001  IS-NR        Active        -----        0%    6%
-----
SCCP Service Average MSU Capacity = 0%   Average CPU Capacity = 6%

AVERAGE CPU USAGE PER SERVICE:
  GTT   = 0%  GFLEX = 0%  SMSMR = 0%

TOTAL SERVICE STATISTICS:

SERVICE  SUCCESS  ERRORS  FAIL  REROUTE\  FORWARD  TOTAL
          0      0      RATIO  WARNINGS  TO GTT
GTT:      0      0      0%      -          -          0
GFLEX:    0      0      0%      0          0          0
SMSMR:    0      0      0%      0          0          0

```

Command Completed.

;

The following example displays output when the G-Flex, G-Port, and V-Flex features are turned on, the EIR, INP, LNP, LRNQT, PLNP, TLNP, and WNP features are turned off, and the ATINP feature is not enabled.

rept-stat-sccp

tklc1170501 08-10-18 10:16:24 EST EAGLE5 40.0.0

```

SCCP SUBSYSTEM REPORT IS-NR      Active      -----
  SCCP ALARM STATUS = No Alarms
VFLEX SUBSYSTEM REPORT IS-NR      Active      -----
  VFLEX: SSN STATUS = Allowed      MATE SSN STATUS = -----
  VFLEX ALARM STATUS = No Alarms
GFLEX SERVICE REPORT IS-NR      Active      -----
  GFLEX ALARM STATUS = No Alarms
GPORT SERVICE REPORT IS-NR      Active      -----
  GPORT ALARM STATUS = No Alarms

```

```

SCCP Cards Configured=25      Cards IS-NR=25
System Daily Peak SCCP Load    15639 TPS 08-01-18 06:14:24
System Overall Peak SCCP Load    21062 TPS 08-01-15 14:24:38
System Total SCCP Capacity      21250 TPS (21250 max SCCP Capacity)
System SCCP Capacity Calc. Method (N)
System TPS Alarm Threshold      17000 TPS ( 80% System N SCCP Capacity)

```

CARD	VERSION	PST	SST	AST	MSU USAGE	CPU USAGE
1217	126-030-000	IS-NR	Active	-----	100%	45%
1317	126-030-000	IS-NR	Active	-----	100%	51%
2217	126-030-000	IS-NR	Active	-----	100%	42%
3201	126-030-000	IS-NR	Active	-----	54%	25%
3203	126-030-000	IS-NR	Active	-----	55%	25%
3205	126-030-000	IS-NR	Active	-----	57%	27%
3207	126-030-000	IS-NR	Active	-----	69%	29%
3211	126-030-000	IS-NR	Active	-----	85%	35%
3213	126-030-000	IS-NR	Active	-----	94%	37%
3215	126-030-000	IS-NR	Active	-----	86%	35%
3217	126-030-000	IS-NR	Active	-----	74%	31%
4217	126-030-000	IS-NR	Active	-----	64%	28%
4317	126-030-000	IS-NR	Active	-----	100%	41%
5117	126-030-000	IS-NR	Active	-----	100%	40%
5317	126-030-000	IS-NR	Active	-----	56%	25%
6101 P	126-030-000	IS-NR	Active	-----	57%	32%
6103	126-030-000	IS-NR	Active	-----	63%	27%
6105	126-030-000	IS-NR	Active	-----	69%	37%
6107	126-030-000	IS-NR	Active	-----	66%	29%
6111	126-030-000	IS-NR	Active	-----	59%	27%
6113	126-030-000	IS-NR	Active	-----	55%	34%
6115	126-030-000	IS-NR	Active	-----	55%	26%
6117	126-030-000	IS-NR	Active	-----	54%	26%
1105	126-030-000	IS-NR	Active	-----	55%	26%
1107	126-030-000	IS-NR	Active	-----	55%	26%

SCCP Service Average MSU Capacity = 71% Average CPU Capacity = 32%

AVERAGE CPU USAGE PER SERVICE:

```

GTT = 1% GFLEX = 4% GPORT = 0%
VFLEX = 2%

```

TOTAL SERVICE STATISTICS:

SERVICE	SUCCESS	ERRORS	FAIL RATIO	REROUTE\ WARNINGS	FORWARD TO GTT	TOTAL
GTT:	3510	15	0%	-	-	3525
GFLEX:	100043	0	0%	0	0	100043
GPORT:	312203	0	0%	15	1879	314097
VFLEX:	23157	0	0%	-	-	23157

Command Completed.

;

The following example displays output when **mode=perf**, the G-Flex, G-Port, and V-Flex features are turned on, the EIR, INP, LNP, LRNQT, PLNP, TLNP, and WNP features are turned off, and the ATINP feature is not enabled. The **ansigflex** system option is disabled.

rept-stat-sccp:mode=perf

```
tklc1170501 08-10-18 10:16:35 EST EAGLE5 40.0.0
SCCP SUBSYSTEM REPORT IS-NR Active -----
  SCCP ALARM STATUS = No Alarms
GFLEX SERVICE REPORT IS-NR Active -----
  GFLEX ALARM STATUS = No Alarms
GPORT SERVICE REPORT IS-NR Active -----
  GPORT ALARM STATUS = No Alarms

SCCP Cards Configured=25      Cards IS-NR=25
System Daily Peak SCCP Load 15639 TPS 08-05-18 06:14:24
System Overall Peak SCCP Load 21062 TPS 08-05-15 14:24:38
System Total SCCP Capacity 21250 TPS (21250 max SCCP Capacity)
System SCCP Capacity Calc. Method (N)
System TPS Alarm Threshold 17000 TPS ( 80% System N SCCP Capacity)
```

TPS STATISTICS

```
=====
CARD    CPU      TOTAL    CLASS 0    CLASS 1
        USAGE    MSU RATE  TVG RATE  TVG RATE
-----
1217    45%      935      935        0
1317    51%      878      878        0
2217    42%      907      907        0
3201    25%      465      465        0
3203    25%      467      467        0
3205    27%      489      489        0
3207    29%      589      589        0
3211    35%      718      718        0
3213    37%      792      792        0
3215    35%      742      742        0
3217    31%      624      624        0
4217    28%      534      534        0
4317    41%      923      923        0
5117    40%      869      869        0
5317    25%      478      478        0
6101    32%      488      488        0
6103    27%      539      539        0
6105    37%      586      586        0
6107    29%      612      612        0
6111    27%      494      494        0
6113    34%      459      459        0
6115    26%      465      465        0
6117    26%      466      466        0
1105    26%      468      468        0
1107    26%      469      469        0
-----
AVERAGE MSU USAGE = 71%
AVERAGE CPU USAGE = 32%
TOTAL MSU RATE      = 15460
```

STATISTICS FOR PAST 30 SECONDS

```
=====
TOTAL MSUS:      463497
TOTAL ERRORS:    15
```

HIGHEST 10 OVERALL DAILY PEAKS

LAST 10 DAILY PEAK SCCP LOADS

```
=====
21062 TPS 08-05-15 14:24:38      15639 TPS 08-05-18 06:14:24
15639 TPS 08-05-18 06:14:24      15631 TPS 08-05-17 23:15:48
15631 TPS 08-05-17 23:15:48      15617 TPS 08-05-16 16:46:59
15617 TPS 08-05-16 16:46:59      21062 TPS 08-05-15 14:24:38
12963 TPS 08-05-13 08:41:28      10130 TPS 08-05-14 03:35:32
12904 TPS 08-05-09 00:39:46      12963 TPS 08-05-13 08:41:28
12588 TPS 08-05-08 21:08:38      11983 TPS 08-05-12 01:47:50
11983 TPS 08-05-12 01:47:50      11963 TPS 08-05-11 09:36:59
11964 TPS 08-05-10 07:07:24      11964 TPS 08-05-10 07:07:24
11963 TPS 08-05-11 09:36:59      12904 TPS 08-05-09 00:39:46
```

Command Completed.

;

The following example displays output for a specified card when the G-Flex, G-Port, and V-Flex features are turned on, the EIR, INP, LNP, LRNQT, PLNP, TLNP, and WNP features are turned off, and the ATINP feature is not enabled. The **ansigflex** system option is disabled.

rept-stat-sccp: loc=1105

```
tklc1170501 08-10-18 10:16:51 EST EAGLE5 40.0.0
CARD  VERSION  TYPE  PST  SST  AST
1105  126-030-000 DSM  IS-NR Active -----
CARD ALARM STATUS = No Alarms.
GTT:   STAT = ACT   CPU USAGE = 1%
GFLEX: STAT = ACT   CPU USAGE = 3%
GPORT: STAT = ACT   CPU USAGE = 9%
VFLEX: STAT = ACT   CPU USAGE = 1%
-----
TOTAL   = 14%
```

CARD SERVICE STATISTICS

SERVICE	SUCCESS	ERRORS	WARNINGS	FORWARD TO GTT	TOTAL
GTT:	153	2	-	-	155
GFLEX:	2582	0	0	0	2582
GPORT:	8171	0	1	102	8274
VFLEX:	1452	0	-	-	1452

Command Completed.

;

The following example shows the output of the rept-stat-sccp command with the G-Flex, G-Port and Prepaid IDP Query Relay features turned ON. The EIR feature is not enabled, and the ansigflex system option is disabled

rept-stat-sccp

```
tekelecstp 08-05-18 13:34:22 EST EAGLE5 39.0.0
SCCP SUBSYSTEM REPORT IS-NR Active -----
SCCP ALARM STATUS = No Alarms
GFLEX SERVICE REPORT IS-NR Active -----
GFLEX ALARM STATUS = No Alarms
GPORT SERVICE REPORT IS-NR Active -----
GPORT ALARM STATUS = No Alarms

SCCP Cards Configured=25      Cards IS-NR=25
System Daily Peak SCCP Load  15639 TPS 06-09-18 06:14:24
System Overall Peak SCCP Load 21062 TPS 06-09-15 14:24:38
System Total SCCP Capacity    21250 TPS (21250 max SCCP Capacity)
System SCCP Capacity Calc. Method (N)
System TPS Alarm Threshold    17000 TPS ( 80% System N SCCP Capacity)
```

CARD	VERSION	PST	SST	AST	MSU USAGE	CPU USAGE
1217	126-030-000	IS-NR	Active	-----	100%	45%
1317	126-030-000	IS-NR	Active	-----	100%	51%
2217	126-030-000	IS-NR	Active	-----	100%	42%
3201	126-030-000	IS-NR	Active	-----	54%	25%
3203	126-030-000	IS-NR	Active	-----	55%	25%
3205	126-030-000	IS-NR	Active	-----	57%	27%
3207	126-030-000	IS-NR	Active	-----	69%	29%
3211	126-030-000	IS-NR	Active	-----	85%	35%
3213	126-030-000	IS-NR	Active	-----	94%	37%
3215	126-030-000	IS-NR	Active	-----	86%	35%
3217	126-030-000	IS-NR	Active	-----	74%	31%
4217	126-030-000	IS-NR	Active	-----	64%	28%
4317	126-030-000	IS-NR	Active	-----	100%	41%
5117	126-030-000	IS-NR	Active	-----	100%	40%
5317	126-030-000	IS-NR	Active	-----	56%	25%
6101 P	126-030-000	IS-NR	Active	-----	57%	32%
6103	126-030-000	IS-NR	Active	-----	63%	27%
6105	126-030-000	IS-NR	Active	-----	69%	37%
6107	126-030-000	IS-NR	Active	-----	66%	29%
6111	126-030-000	IS-NR	Active	-----	59%	27%
6113	126-030-000	IS-NR	Active	-----	55%	34%
6115	126-030-000	IS-NR	Active	-----	55%	26%
6117	126-030-000	IS-NR	Active	-----	54%	26%
1105	126-030-000	IS-NR	Active	-----	55%	26%
1107	126-030-000	IS-NR	Active	-----	55%	26%

SCCP Service Average MSU Capacity = 71% Average CPU Capacity = 32%

AVERAGE CPU USAGE PER SERVICE:

GTT = 1% GFLEX = 4% GPORT = 0%
TTR = 2%

TOTAL SERVICE STATISTICS:

SERVICE	SUCCESS	ERRORS	FAIL RATIO	REROUTE\ WARNINGS	FORWARD TO GTT	TOTAL
GTT:	3510	15	0%	-	-	3525
GFLEX:	100043	0	0%	0	0	100043
GPORT:	312203	0	0%	15	1879	314097
TTR:	23157	0	0%	1	23157	23157

Command Completed.

;

The following example displays output for the specified card when the G-Flex, G-Port and Prepaid IDP Query Relay features are turned on; the EIR, LNP, LRNQT, PLNP, TLNP, V-Flex, and WNP features are turned off, and the ATINP feature is not enabled.

rept-stat-sccp: loc=1106

```
tekelecstp 08-10-11 13:34:22 EST EAGLE 40.0.0
CARD  VERSION  TYPE  PST      SST      AST
1105  128-020-063  DSM   IS-NR    Active   -----
CARD ALARM STATUS = ** 0446 RTDB database capacity is 80% full
GTT:   STAT = ACT      CPU USAGE = 10%
GFLEX: STAT = ACT      CPU USAGE = 3%
GPORT: STAT = ACT      CPU USAGE = 9%
TTR:   STAT = ACT      CPU USAGE = 8%
-----
TOTAL   = 30%
```

CARD SERVICE STATISTICS

SERVICE	SUCCESS	ERRORS	WARNINGS	FORWARD TO GTT	TOTAL
GTT:	0	0	-	-	0

```

GFLEX:      2582      0      0      0      2582
GPORT:      8171      0      1     102     8274
TTR:         10      0      0      10      10
Command Completed.

```

;

The following example displays output when the GTT and TINP features are turned on, and the EIR, G-Flex, G-Port, INP, LNP, LRNQT, PLNP, TLNP, and WNP features are turned off.

rept-stat-sccp

```

tekelecstp 08-10-20 11:53:16 EST EAGLE 40.0.0

SCCP SUBSYSTEM REPORT IS-NR      Active      -----
SCCP ALARM STATUS = No Alarms

SCCP Cards Configured= 1      Cards IS-NR= 1
System Daily Peak SCCP Load      0      TPS 07-01-07 00:00:00
System Overall Peak SCCP Load      0      TPS 00-00-00 00:00:00
System Total SCCP Capacity      850      TPS (850      max SCCP Capacity)
System SCCP Capacity Calc. Method (N)
System TPS Alarm Threshold      680      TPS ( 80% System      N SCCP Capacity)

CARD   VERSION      PST      SST      AST      MSU      CPU
      USAGE      USAGE
-----
1107 P 016-001-010  IS-NR      Active      -----      0%      4%
-----
SCCP Service Average MSU Capacity =  0%      Average CPU Capacity =  4%

AVERAGE CPU USAGE PER SERVICE:
GTT   =  0%      MNP   =  0%

```

TOTAL SERVICE STATISTICS:

SERVICE	SUCCESS	ERRORS	FAIL RATIO	REROUTE\ WARNINGS	FORWARD TO GTT	TOTAL
GTT:	0	0	0%	-	-	0
MNP:	0	0	0%	0	0	0

The following example displays output when the GTT and TINP features are turned on, and the EIR, G-Flex, G-Port, INP, LNP, LRNQT, PLNP, TLNP, and WNP features are turned off, and the ATINP feature is not enabled.

TINP services are tracked and displayed as part of the MNP average CPU usage. Turning on the TINP feature does not trigger the display of the MNP server alarm status. If the **loc** parameter is specified, and the TINP feature has an active MNP Alarm status, then the CPU usage and MNP statistics are displayed.

rept-stat-sccp:loc=1107

```

tekelecstp 08-10-11 19:39:20 EST EAGLE 40.0.0
CARD   VERSION      TYPE      PST      SST      AST
1107   074-001-005  DSM      IS-NR      Active      -----
CARD ALARM STATUS      = No Alarms.
GTT:    STAT = ACT      CPU USAGE = 0%
MNP:    STAT = ACT      CPU USAGE = 0%
-----
TOTAL      = 0%

CARD SERVICE STATISTICS
SERVICE    SUCCESS    ERRORS    WARNINGS    FORWARD TO GTT    TOTAL
GTT:        0        0        -        -        0
MNP:        0        0        0        0        0

```

Command Completed.

;

The following example displays output when the LNP, LRNQT, PLNP, TLNP, and WNP features are turned on, and the EIR, G-Flex, G-Port, INP, and V-Flex features are turned off.

rept-stat-sccp

```
tklcl1190601 09-01-10 16:31:14 EST EAGLE 40.1.0
SCCP SUBSYSTEM REPORT IS-NR Active -----
SCCP ALARM STATUS = No Alarms
LNP SUBSYSTEM REPORT IS-NR Active -----
LNP: SSN STATUS = Allowed MATE SSN STATUS = -----
LNP ALARM STATUS = No Alarms

SCCP Cards Configured= 7 Cards IS-NR= 7
System Daily Peak SCCP Load 0 TPS 08-05-18 00:00:17
System Overall Peak SCCP Load 2908 TPS 08-05-07 13:28:36
System Total SCCP Capacity 11900 TPS (11900 max SCCP Capacity)
System SCCP Capacity Calc. Method (N)
System TPS Alarm Threshold 9520 TPS ( 80% System N SCCP Capacity)
```

CARD	VERSION	PST	SST	AST	MSU USAGE	CPU USAGE
1205 P	126-027-000	IS-NR	Active	-----	0%	5%
1317	126-027-000	IS-NR	Active	-----	0%	5%
2213	126-027-000	IS-NR	Active	-----	0%	5%
2215	126-027-000	IS-NR	Active	-----	0%	6%
2217	126-027-000	IS-NR	Active	-----	0%	5%
2317	126-027-000	IS-NR	Active	-----	0%	5%
1105	126-027-000	IS-NR	Active	-----	0%	6%

SCCP Service Average MSU Capacity = 0% Average CPU Capacity = 5%

AVERAGE CPU USAGE PER SERVICE:

```
GTT = 0%
LNPMR = 0% LNPQS = 0%
WNPQS = 0%
TLNP = 0%
PLNPQS= 0%
LRNQT = 0%
```

TOTAL SERVICE STATISTICS:

SERVICE	SUCCESS	ERRORS	FAIL RATIO	REROUTE\ WARNINGS	FORWARD TO GTT	TOTAL
GTT:	0	0	0%	-	-	0
LNPMR:	0	0	0%	-	-	0
LNPQS:	0	0	0%	-	-	0
WNPQS:	0	0	0%	-	-	0
TLNP:	0	0	0%	-	-	0
PLNPQS:	0	0	0%	-	-	0
LRNQT:	0	0	0%	-	-	0

Command Completed.

;

The following example displays output for a specified card when the G-Flex and G-Port features are turned on, the ATINP feature is enabled, and the EIR, INP, LNP, LRNQT, PLNP, TLNP, V-Flex, and WNP features are turned off. The **ansigflex** system option is disabled.

rept-stat-sccp: loc=1105

```
tklcl1170501 08-10-18 10:16:51 EST EAGLE 40.0.0
CARD VERSION TYPE PST SST AST
1105 126-030-000 DSM IS-NR Active -----
CARD ALARM STATUS = No Alarms.
GTT: STAT = ACT CPU USAGE = 1%
GFLEX: STAT = ACT CPU USAGE = 3%
GPORT: STAT = ACT CPU USAGE = 9%
```

```

ATINPQ: STAT = ACT      CPU USAGE = 2%
                        -----
                        TOTAL    = 15%

```

CARD SERVICE STATISTICS

SERVICE	SUCCESS	ERRORS	WARNINGS	FORWARD TO GTT	TOTAL
GTT:	153	2	-	-	155
GFLEX:	2582	0	0	0	2582
GPORT:	8171	0	1	102	8274
ATINPQ:	3089	0	-	-	3089

Command Completed.

;

The following example displays output when the EIR, GTT, and INP features are turned on, and the ATINP feature is enabled.

rept-stat-sccp

```

tekelecstp 08-08-16 14:33:16 EST  EAGLE 39.2.0
SCCP SUBSYSTEM REPORT IS-NR      Active      -----
  SCCP ALARM STATUS = No Alarms
INPQ SUBSYSTEM REPORT IS-NR      Active      -----
  INPQ:  SSN STATUS = -----  MATE SSN STATUS = -----
  INP ALARM STATUS = No Alarms
EIR  SUBSYSTEM REPORT IS-NR      Active      -----
  EIR:   SSN STATUS = Allowed  MATE SSN STATUS = -----
  EIR ALARM STATUS = No Alarms
ATINPQ SUBSYSTEM REPORT IS-NR    Active      -----
  ATINPQ:  SSN STATUS = Allowed  MATE SSN STATUS = -----
  ATINPQ ALARM STATUS = No Alarms

SCCP Cards Configured= 1      Cards IS-NR= 1
System Daily Peak SCCP Load   1      TPS 08-06-14 14:18:27
System Overall Peak SCCP Load  1      TPS 08-06-14 14:18:27
System Total SCCP Capacity     850    TPS (850    max SCCP Capacity)
System SCCP Capacity Calc. Method (N)
System TPS Alarm Threshold     680    TPS ( 80% System  N SCCP Capacity)

CARD  VERSION      PST          SST          AST          MSU  CPU
                                USAGE  USAGE
-----
1101 P 130-001-000  IS-NR      Active      -----      0%    5%
-----
SCCP Service Average MSU Capacity =  0%  Average CPU Capacity =  5%

AVERAGE CPU USAGE PER SERVICE:
GTT   =  0%
INPMR =  0%  INPQ  =  0%
EIR   =  0%
ATINPQ=  1%

```

TOTAL SERVICE STATISTICS:

SERVICE	SUCCESS	ERRORS	FAIL RATIO	REROUTE\ WARNINGS	FORWARD TO GTT	TOTAL
GTT:	0	0	0%	-	-	0
INPMR:	0	0	0%	0	0	0
INPQ:	0	0	0%	-	-	0
EIR:	0	0	0%	-	-	0
ATINPQ:	1	0	0%	-	-	1

Command Completed.

;

The following example displays output when the GTT, LNP, and LRNQT features are turned on, the A-Port, EIR, G-Flex, G-Port, INP, PLNP, TINP, TLNP, V-Flex, and WNP features are turned off, and the ATINP feature is not enabled.

rept-stat-sccp:loc=1106

```
tekelecstp 08-10-31 02:20:49 EST EAGLE5 40.0.0
CARD  VERSION      TYPE      PST          SST          AST
1106  -----      DSM       IS-NR        Active       -----
CARD ALARM STATUS      = No Alarms.
  GTT:   STAT = SWDL      CPU USAGE = 0%
  LNPMR: STAT = -----   CPU USAGE = 0%
  LNPQS: STAT = -----   CPU USAGE = 0%
  LRNQT: STAT = -----   CPU USAGE = 0%
                                     -----
                                     TOTAL    = 0%

CARD SERVICE STATISTICS
SERVICE      SUCCESS      ERRORS      WARNINGS      FORWARD TO GTT      TOTAL
GTT:           0           0           -             -             0
LNPMR:          0           0           -             -             0
LNPQS:          0           0           -             -             0
LRNQT:          0           0           -             -             0
```

Command Completed.

;

Legend

This section defines the fields of the three **rept-stat-sccp** reports:

- **rept-stat-sccp** with no parameters
- **rept-stat-sccp:mode=perf**
- **rept-stat-sccp:loc=nnnn**

A dash (-) in an output field indicates that the statistic does not apply.

NOTE: The ERRORS and TOTAL ERRORS fields indicate that errors have occurred for SCCP cards in the system. Refer to UIMs generated by the system for the specific errors, and refer to the *Maintenance Manual* for error explanations and recovery procedures.

Report Type: rept-stat-sccp with no parameters

SCCP SUBSYSTEM REPORT, INPQ/EIR/VFLEX/LNP SUBSYSTEM REPORT—The summaries of the ATINPQ, EIR, INPQ (INP Query), V-Flex, LNP, and SCCP subsystem status. Information about the status of ATINP, EIR, GSM, INPMR (INP Message Relay), V-Flex, AND LNP services is provided in the SCCP subsystem status summary report. The INPQ subsystem status is displayed only if the INP feature is turned on. The EIR subsystem status is displayed only if the EIR feature is enabled and turned on. The V-Flex subsystem status is displayed only if the V-Flex feature is enabled and turned on. The ATINPQ subsystem status is displayed only if the ATINP feature is enabled. The LNP subsystem status is displayed only if the LNP feature is enabled. The ALARM STATUS for the SCCP and INPQ/EIR/V-Flex/ATINPQ/LNP subsystems is displayed in this section of the report.

SCCP CARDS CONFIGURED—The number of SCCP and Service Module cards provisioned.

CARD IS-NR—The number of SCCP and Service Module cards that can be used by the system (status is In-Service Normal, IS-NR).

SYSTEM TPS ALARM THRESHOLD—The percentage of traffic that when reached triggers an alarm to warn that the EAGLE 5 ISS is approaching the total system SCCP transactions-per-second (TPS) capacity. This value is set by the **chg-th-alm** command.

SYSTEM PEAK SCCP LOAD—The highest SCCP transactions-per-second (TPS) processed by the EAGLE 5 ISS.

SYSTEM TOTAL SCCP CAPACITY—The current total system SCCP transactions-per-second (TPS) capacity. This value is the sum of the maximum capacity of all active SCCP and Service Module cards. When the **ansigflex** system option is enabled in an ANSI system, the maximum capacity of each DSM card is 1700 TPS.

CARD—The card location of the TSM cards running the SCCP application and of the Service Module cards running the VSCCP application.

P—When G-Flex, G-Port, INP, A-Port, EIR, V-Flex, or IGM is turned on, a P indicates the primary Service Module card. The primary Service Module card provides the MPS status to the EAGLE 5 ISS. This indicator is displayed between the card location and the GPL version.

VERSION—The version number of the SCCP card or Service Module GPL that the card is running.

PST—The primary state of the card. The possible values are described in "Possible Values for PST/SST/AST".

SST—The secondary state of the card. The possible values are described in "Possible Values for PST/SST/AST".

AST—The associated state of the card. The possible values are described in "Possible Values for PST/SST/AST".

MSU USAGE—The percentage of the maximum number of MSUs (850 MSUs per second for DSM and TSM cards and up to 5000 MSUs per second for E5-SM4G cards) received by each card during the last 30 seconds.

CPU USAGE—The percentage of the amount of CPU used by each card during the last 30 seconds to process messages and to handle other foreground and background tasks.

SCCP SERVICE AVERAGE MSU CAPACITY—The average MSU capacity used over the last 30-second interval. This field includes all services provided by the SCCP and Service Module cards.

AVERAGE CPU CAPACITY—The average CPU capacity used over the last 30-second interval. This field includes all services provided by the SCCP and Service Module cards.

AVERAGE CPU USAGE PER SERVICE—A system-wide view of the service traffic composition. This report is available only if the A-Port, EIR, G-Flex, G-Port, IGM, INP, LNP or V-Flex feature is turned on, or the ATINP feature is enabled. Fields are omitted if the associated feature is not turned on. The services include ATINPQ, EIR, G-Flex, G-Port, GTT, INPMR, INPQ, MNP, V-Flex, LNPQS, LNPMR, WNPQS, TLNP, PLNPQS, and LRNQT.

TOTAL SERVICE STATISTICS—A system-wide view of per-service statistics. This report is available only if the A-Port, EIR, G-Flex, G-Port, IGM, INP, LNP or V-Flex feature is turned on, or the ATINP feature is enabled. Fields are omitted if the associated feature is not turned on.

An "A" in the field indicates that the statistic does not apply.

The report tracks the following information:

SERVICE—The services are GTT, EIR, G-Flex, INPQ, G-Port, INPMR, V-Flex, MNP, LNPQS, LNPMR, WNPQS, TLNP, PLNPQS, and LRNQT.

SUCCESS—The total number of successful messages processed by the specified card for each service. Applies to all services.

ERRORS—The total number of messages with errors for each service. Applies to all services.

WARNINGS—The total number of messages that output UIM warnings and were forwarded to GTT by the specified card for G-Flex, G-Port, INPMR, A-Port, and IGM.

FORWARD TO GTT—The total number of messages that could not find a match in the MPS (Multi-Purpose Server) database (did not produce any errors or warnings) and were successfully forwarded to GTT by the specified card for G-Flex, G-Port, INPMR, A-Port, and IGM.

Report Type: **rept-stat-sccp:mode=perf**

The report displays general SCCP traffic performance for both SCCP and Service Module cards and supplies message rates for TVG.

NOTE: This report includes the status of TSM and Service Module cards, but does not differentiate between these card types.

SCCP SUBSYSTEM REPORT—The summary status of the SCCP subsystem, and the SCCP Alarm Status.

SCCP CARDS CONFIGURED—The number of SCCP and Service Module cards provisioned.

CARD IS-NR—The number of SCCP and Service Module cards that can be used by the system (status is in-service normal, IS-NR).

SYSTEM TPS ALARM THRESHOLD—The percentage of traffic that when reached triggers an alarm to warn that the EAGLE 5 ISS is approaching the total system SCCP transactions-per-second (TPS) capacity. This value is set by the **chg-th-alm** command.

SYSTEM PEAK SCCP LOAD—The highest SCCP transactions-per-second (TPS) processed by the EAGLE 5 ISS.

SYSTEM TOTAL SCCP CAPACITY—The current total system SCCP transactions-per-second (TPS) capacity. This value is the sum of the maximum capacity of all active SCCP and Service Module cards.

TPS STATISTICS—The section of the report that provides TPS statistics on each SCCP card or Service Module card.

CARD—The card location of the TSM cards running the SCCP application and of the Service Module cards running the VSCCP application.

CPU USAGE—The percentage of the amount of CPU used to process messages by each card during the last 30 seconds.

TOTAL MSU RATE—The total number of messages processed per second. This and the other message rates are obtained from statistics maintained by the SCCP card or Service Module card for the last 30-second period.

CLASS 0 AND CLASS 1 TVG RATE—The number of messages per second received.

The next section of the **rept-stat-sccp:mode=perf** report provides system-wide SCCP traffic statistics.

AVERAGE MSU USAGE—The total of the MSU usage fields from each SCCP card or Service Module card divided by the number of active SCCP cards and Service Module cards.

AVERAGE CPU USAGE—The total of the CPU usage fields from each SCCP card or Service Module card divided by the number of active SCCP cards and Service Module cards.

TOTAL MSU RATE—The sum of all GTT, EIR, G-Flex, G-Port, INP, A-Port, V-Flex, LNP, and IGM MSUs processed by all active SCCP cards and Service Module cards.

STATISTICS FOR PAST 30 SECONDS—statistics that represent the last 30-second period.

TOTAL MSUS—The sum of all transactions on all active SCCP cards and Service Module cards.

TOTAL ERRORS—The sum of all errors on all active SCCP cards and Service Module cards.

Report Type: **rept-stat-sccp:loc= nnnn**

CARD—The card location of the TSM card running the SCCP application or of the Service Module card running the VSCCP application.

VERSION—The version number of the GPL the card is running.

TYPE—The type (TSM or DSM) of the card.

PST—The primary state of the card. The possible values are described in "Possible Values for PST/SST/AST".

SST—The secondary state of the card. The possible values are described in "Possible Values for PST/SST/AST".

AST—The associated state of the card. The possible values are described in "Possible Values for PST/SST/AST".

CARD ALARM STATUS—If there are no card alarms present, this field displays No Alarms.

The next section of the **rept-stat-sccp:loc=nnnn** report supplies the status of the individual services provided by the card and the associated CPU usage for the service. Fields are omitted if the associated feature is not turned on.

GTT: STAT—Possible values are ACTIVE and SWDL (software loading).

GFLEX: STAT—Possible values are ACTIVE and SWDL (software loading).

GPORT or MNP: STAT—Possible values are ACTIVE and SWDL (software loading).

INPMR: STAT—Possible values are ACTIVE, OFFLINE, and SWDL (software loading).

INPQ: STAT—Possible values are ACTIVE, OFFLINE, and SWDL (software loading).

EIR: STAT—Possible values are ACTIVE, OFFLINE and SWDL (software loading).

VFLEX: STAT—Possible values are ACTIVE, OFFLINE and SWDL (software loading).

LNPMR: STAT—Possible values are ACTIVE, OFFLINE and SWDL (software loading).

LNPQS: STAT—Possible values are ACTIVE, OFFLINE and SWDL (software loading).

WNPQS: STAT—Possible values are ACTIVE, OFFLINE and SWDL (software loading).

TLNP: STAT—Possible values are ACTIVE, OFFLINE and SWDL (software loading).

PLNPQS: STAT—Possible values are ACTIVE, OFFLINE and SWDL (software loading).

LRNQT: STAT—Possible values are ACTIVE, OFFLINE and SWDL (software loading).

TOTAL—The sum of the CPU usage for the services running over the previous 30-second period.

CARD SERVICE STATISTICS—The card service statistics for the specified card. This report is available for the GTT, G-Flex, G-Port, INP, A-Port, EIR, V-Flex, IGM, ATINP, LNP, LNPMR, LNPQS, WNPQS, TLNP, PLNPQS and LRNQT features. Fields are omitted if their associated feature is not turned on (or not enabled for ATINP). The report tracks the following:

SERVICE—The services are ATINPQ, EIR, G-Flex, G-Port, GTT, INPMR, INPQ, MNP, V-Flex, LNPMR, LNPQS, WNPQS, TLNP, PLNPQS and LRNQT.

SUCCESS—The total number of successful messages processed by the specified card for each service. Applies to all services.

ERRORS—The total number of messages with errors for each service. Applies to all services.

WARNINGS—The total number of messages that output UIM warnings and were forwarded to GTT by the specified card for EIR, G-Flex, G-Port, INPMR, A-Port, and IGM.

FORWARD TO GTT—The total number of messages that could not find a match in the MPS database (did not produce any errors or warnings) and were successfully forwarded to GTT by the specified card for EIR, G-Flex, G-Port, INPMR, A-Port, and IGM.

rept-stat-seas**Report Status SEAS Command**

Use this command to generate a summary report of the status of the SEAS subsystem on the EAGLE 5 ISS. This command reports single OSS/Application Processor (OAP) or dual OAP configuration status, depending on the OAP hardware configuration used. See the *Maintenance Manual* for information about the SEAS alarms.

NOTE: If the SEAS Over IP feature is turned on, then the status of the CCS MR connections is displayed. If the SEAS Over IP feature is turned off, then the X.25 connection status is displayed.

Keyword: rept-stat-seas

Related Commands: alw-trm, chg-trm, inh-trm, rept-stat-sys, rept-stat-trbl, rept-stat-trm

Command Class: System Maintenance

Parameters

This command has no parameters.

Example

rept-stat-seas

Dependencies

At least one OAP terminal or one SEAS terminal must be defined using the **chg-trm** command.

No other **rept-stat-xxx** command can be in progress when this command is entered.

Notes

None

Output

The following example shows the output of command when the SEAS feature is turned on and the SEAS Over IP feature is turned off.

rept-stat-seas

```
rlghncxa03w 07-02-04 15:59:06 EST EAGLE 37.5.0
SEAS Subsystem Report      IS-NR      Active  -----
SEAS Interfaces Configured = 2  Interfaces IS-NR = 2
                                GPL        PST        SST        AST
-----
SEAS SYSTEM                IS-NR      Active  -----
TDM Port          4                IS-NR      Active  -----
TDM Port          10               IS-NR      Active  -----
OAP                A      250-001-000 IS-NR      Active  -----
OAP                B      250-001-000 IS-NR      Active  -----
X.25 Link         A1                IS-NR      Active  -----
X.25 Link         B1                IS-NR      Active  -----

SEAS SYSTEM  ALARM STATUS = No Alarms.
OAP A        ALARM STATUS = No Alarms.
OAP B        ALARM STATUS = No Alarms.
X25 Link  A1 ALARM STATUS = No Alarms.
X25 Link  A2 ALARM STATUS = No Alarms.
X25 Link  B1 ALARM STATUS = No Alarms.
X25 Link  B2 ALARM STATUS = No Alarms.

X25 A1 PVCs IS-NR      = 1,2,3
X25 A1 PVCs OOS-MT    = ---
X25 B1 PVCs IS-NR      = 1,2,3
X25 B1 PVCs OOS-MT    = ---

X25 A2 PVCs IS-NR      = 1,2,3
X25 A2 PVCs OOS-MT    = ---
X25 B2 PVCs IS-NR      = 1,2,3
X25 B2 PVCs OOS-MT    = ---
Command Completed.
```

;

The following example shows the output of the command when the SEAS Over IP feature is turned on.

rept-stat-seas

```
tekelecstp 07-01-11 16:47:51 EST EAGLE 37.5.0

SEAS SYSTEM                PST        SST        AST
-----
ALARM STATUS = No Alarms
                                IS-NR      Avail  -----

TERM          IPADDR        PORT    PST        SST        AST
-----
18            120.30.10.11    15      IS-NR      Active  -----
ALARM STATUS = No Alarms

40            128.30.15.12    16      IS-NR      Active  -----
ALARM STATUS = No Alarms
```

Legend

PST—The primary state of the subsystem. The possible values are described in "Possible Values for PST/SST/AST".

SST—The secondary state of the subsystem. The possible values are described in "Possible Values for PST/SST/AST".

AST—The associated state of the subsystem. The possible values are described in .

SEAS SYSTEM—The overall SEAS component.

rept-stat-seculog

Display Security Log Status Information

Use this command to display the following information about the security log on the active and standby OAMs:

- The active or standby status of each log
- The number of new (that is, not uploaded) entries in each log
- The percentage of log space used by those new entries
- Whether overflow has occurred since the last upload
- Whether a recording failure has occurred since the last upload
- The date and time of the oldest and newest records in the log
- The date and time when the last successful upload of the log occurred

Keyword: `rept-stat-seculog`

Related Commands: `chg-attr-seculog`, `rtrv-attr-seculog`

Command Class: Security Administration

Parameters

This command has no parameters.

Example

rept-stat-seculog

Dependencies

No other security log command can be in progress when this command is entered.

Notes

The %FULL field displays the amount of space in the log taken up by new (not uploaded) entries. That number is obtained by dividing the number displayed in the ENTRIES field by the overall storage capacity of the log (10,000 entries). Because the log stays full of entries at all times, new entries overwrite existing entries.

The percentage full computed is rounded up to the next integer with one exception: the value of 100 is not displayed until the log is truly 100% full.

The log capacity is 10,000 records. To determine how many more commands can be logged before an overflow condition occurs, subtract the value displayed in the ENTRIES field from 10,000.

The status of the active OAM's log is always reported first in the output report, followed by the status of the standby log; in other words, they are not *necessarily* displayed numerically by the location number.

The report displays dates in the format *yy-mm-dd*, where *yy* is the year, *mm* is the month, and *dd* is the date. The report displays times in the format of *hh:mm:ss*, where *hh* is hours, *mm* is minutes, and *ss* is seconds.

Output

The following example shows the normal security log state. All of the un-uploaded records appear in the log on the active OAM.

rept-stat-seculog

```
rlghncxa03w 05-07-29 16:40:40 EST EAGLE 28.1.0
-- SINCE LAST UPLOAD -- OLDEST NEWEST LAST
LOC  ROLE   ENTRIES %FULL OFLO FAIL RECORD  RECORD  UPLOAD
1114 Active  8312    84    No   No   96-08-12 05-07-04 05-07-16
                                     11:23:56 15:59:06 14:02:22

1116 Standby 0        0    No   No   96-09-12 05-07-30 05-07-30
                                     11:24:12 14:00:06 14:02:13
```

;

The following example shows an abnormal situation. The active security log is full and has overflowed.

rept-stat-seculog

```
rlghncxa03w 05-07-29 16:40:40 EST EAGLE 28.1.0
-- SINCE LAST UPLOAD -- OLDEST NEWEST LAST
LOC  ROLE   ENTRIES %FULL OFLO FAIL RECORD  RECORD  UPLOAD
1114 Active 10000    100  Yes  No   96-08-12 05-07-04 05-07-16
                                     11:23:56 15:59:06 14:02:22

1116 Standby 0        0    No   No   96-09-12 05-07-30 05-07-30
                                     11:24:12 14:00:06 14:02:13
```

;

The following example shows what happens when both logs contain un-uploaded entries. The standby log on 1116 should be uploaded.

rept-stat-seculog

```
rlghncxa03w 05-07-29 16:40:40 EST EAGLE 28.1.0
-- SINCE LAST UPLOAD -- OLDEST NEWEST LAST
LOC  ROLE   ENTRIES %FULL OFLO FAIL RECORD  RECORD  UPLOAD
1114 Active  8312    84    No   No   96-08-12 05-07-04 05-07-16
                                     11:23:56 15:59:06 14:02:22

1116 Standby 693      7    No   No   96-09-12 05-07-30 05-07-30
                                     11:24:12 14:00:06 14:02:13
```

;

The following example shows how, if data cannot be retrieved from the standby OAM (for example, in simplex mode), blanks (-----) are displayed.

rept-stat-seculog

```
rlghncxa03w 05-07-29 16:40:40 EST EAGLE 28.1.0
-- SINCE LAST UPLOAD -- OLDEST NEWEST LAST
LOC  ROLE   ENTRIES %FULL OFLO FAIL RECORD  RECORD  UPLOAD
1114 Active  8312    83    No   No   96-08-12 05-07-04 05-07-16
                                     11:23:56 15:59:06 14:02:22

1116 Standby ----- --- --- --- -----
                                     -----
```

;

Legend

LOC—The address of the TDM card (with the hard disk on it) that contains the log. It is always the card at location 1114 or 1116.

ROLE—The current role of the security log at that location. This value is always the same as the role of the OAM associated with the TDM card: **active** or **standby**.

-- **SINCE LAST UPLOAD**—This heading applies to the four columns directly below it on the output. It indicates that the fields below display information obtained since the last upload.

ENTRIES—Shows how many un-uploaded commands are currently recorded in the log. This value resets to 0 (zero) when the log is uploaded using **copy-seculog**.

%FULL—Shows, as a percentage, how much space in the log the ENTRIES field value occupies.

OFLO—The overflow indicator. Overflow is what happens if the log is not uploaded periodically: new entries start overwriting un-uploaded entries. This field displays **No** if no overflow has occurred and **Yes** if overflow has occurred.

FAIL—The failed indicator. This field displays **No** if no logging failure has occurred. It displays **Yes** to indicate that a logging failure has occurred that has prevented one or more entries from being recorded in the log successfully.

NOTE: Whether the system is able to set the logging failure flag in the security log header depends on the nature of the failure. If a **copy-disk** command is processing, the system sets the flag when the **copy-disk** command finishes processing. However, if the active fixed disk fails for some reason, or the security log happens to be in a bad sector that develops, the system is unable to set the logging failure flag.

OLDEST RECORD/NEWEST RECORD—The date and time recorded in the oldest and newest record in the log. Allows the administrator to know the time period that the log covers. The log records all commands that were issued between 6/3/96 at 13:45:03 up to 8/5/96 at 06:58:55. The **NEWEST RECORD** for the active log is the current date, because the log will have recorded the **rept-stat-seculog** command that was just entered to produce the report.

LAST UPLOAD—The date and time when the log was last uploaded successfully. That is, the **copy-seculog** command successfully copied the log to the FTA.

rept-stat-slan

Report Status of the STPLAN

Use this command to generate a summary report of the status of the ACM, DCM, and E5-ENET cards that make up the STPLAN subsystem.

Keyword: **rept-stat-slan**

Related Commands: **rept-stat-alm**, **rept-stat-card**, **rept-stat-dlk**, **rept-stat-imt**, **rept-stat-sys**, **rept-stat-trbl**

Command Class: System Maintenance

Parameters

:mode= (optional)

Use this parameter to provide extended performance information, including group ticket voucher (TVG) message rates.

Range: **perf**

Default: No extended performance information is displayed

Example

```
rept-stat-slan
```

```
rept-stat-slan:mode=perf
```

Dependencies

No other **rept-stat-xxx** commands can be in progress when this command is entered.

At least one ACM, DCM, or E5-ENET card that makes up the STPLAN must be configured.

Notes

The HOST CAP. field value is obtained by averaging the usage percentages for the data links from each ACM, DCM, and E5-ENET card to the host.

The EAGLE CAP. field value is obtained by averaging the usage percentages for the ACM, DCM, and E5-ENET traffic received from LIMs.

The system level usage for host capacity (the AVERAGE USAGE PER HOST CAPACITY field in the **rept-stat-slan** output) is obtained by averaging the usage percentages for the data links to the host from each ACM, DCM, and E5-ENET card.

The EAGLE 5 ISS level usage for ACM, DCM, and E5-ENET cards capacity (the AVERAGE USAGE PER EAGLE CAPACITY field in the **rept-stat-slan** output) is obtained by averaging the usage percentages for the ACM, DCM, and E5-ENET traffic received from LIMs.

Output

The following example shows output with at least one ACM in an IS-NR state:

rept-stat-slan

```
rlghncxa03w 04-02-27 16:53:22 EST EAGLE 31.3.0
SLAN Subsystem Report IS-NR Active -----
SLAN Cards Configured= 2 Cards IS-NR= 2
CARD VERSION PST SST AST HOST Cap. EAGLE Cap.
-----
1206 021-010-000 IS-NR Active ---- 42% 16%
1104 021-010-000 IS-NR Active ALMINH 36% 12%
-----
AVERAGE USAGE per HOST CAPACITY = 39%
AVERAGE USAGE per EAGLE CAPACITY = 14%
CARDS DENIED SLAN SERVICE:
1101, 1204
Command Completed.
```

;

rept-stat-slan:mode=perf

```
rlghncxa03w 04-02-04 13:36:07 EST EAGLE 31.3.0
SLAN Subsystem Report IS-NR Active -----
SLAN Cards Configured= 3 Cards IS-NR= 3
CARD HOST EAGLE TVG
CAP CAP RATE
-----
1101 50% 30% 140
1102 55% 33% 435
1103 47% 28% 435
-----
AVERAGE USAGE per HOST CAPACITY = 51%
AVERAGE USAGE per EAGLE CAPACITY = 30%
Command Completed.
```

;

Legend

SLAN SUBSYSTEM REPORT—The status of the STPLAN subsystem.

STPLAN CARDS CONFIGURED—The number of ACM, DCM, and E5-ENET cards used by the STPLAN contained in the system.

CARDS IS_NR—The number of ACM, DCM, and E5-ENET cards contained in the system whose status is in service normal (IS-NR).

CARD—The locations of the ACM, DCM, and E5-ENET cards.

VERSION—The version number of the STPLAN GPL the cards are running.

PST—The primary state of the ACM, DCM, and E5-ENET cards. The possible values are described in "Possible Values for PST/SST/AST".

SST—The secondary state of the ACM, DCM, and E5-ENET cards. The possible values are described in "Possible Values for PST/SST/AST".

AST—The associated state of the ACM, DCM, and E5-ENET cards. The possible values are described in .

HOST CAP—The amount of traffic being sent to the host from each ACM, DCM, and E5-ENET card, expressed as a percentage of the total amount of traffic that can be sent to the host.

EAGLE CAP—The amount of traffic being sent to each ACM, DCM, and E5-ENET card, that is received from the LIMs, expressed as a percentage of the total amount of traffic that can be sent to the ACM, DCM, and E5-ENET card.

AVERAGE USAGE PER HOST CAPACITY The amount of traffic being sent to all hosts from all ACM, DCM, and E5-ENET cards, expressed as a percentage of the total amount of traffic that can be sent to all hosts from all ACM, DCM, and E5-ENET cards.

AVERAGE USAGE PER EAGLE CAPACITY—The amount of traffic being sent to all ACM, DCM, and E5-ENET cards that is received from the LIMs, expressed as a percentage of the total amount of traffic that can be sent to all ACM, DCM, and E5-ENET cards.

CARDS DENIED SLAN SERVICE—The card locations that cannot use the STPLAN application.

CARDS DISABLED COPY SERVICE—The card locations that cannot use the stop and copy action of the gateway screening feature.

Instead of displaying the VERSION , PST , SST , AST , HOST CAP , EAGLE CAP, and CARDS DENIED SLAN SERVICE fields, the report displayed with the **rept-stat-slan:mode=perf** command shows these fields:

HOST CAP—The average of the usage percentages for the TCP/IP data links to the host from each ACM, DCM, and E5-ENET card.

EAGLE CAP—The average of the usage percentages for the ACM, DCM, and E5-ENET traffic that is received from the LIMs.

TVG RATE—The number of messages per second received from all SS7 links, and any other group ticket voucher paced message source. It is obtained from statistics maintained by the ACM, DCM, and E5-ENET cards for the last 30-second period.

AVERAGE USAGE PER HOST CAPACITY—The amount of traffic being sent to all hosts from all ACM, DCM, and E5-ENET cards, expressed as a percentage of the total amount of traffic that can be sent to all hosts from all ACM, DCM, and E5-ENET cards.

AVERAGE USAGE PER EAGLE CAPACITY—The amount of traffic being sent to all ACM, DCM, and E5-ENET cards that is received from the LIMs, expressed as a percentage of the total amount of traffic that can be sent to all ACM, DCM, and E5-ENET cards.

rept-stat-slk

Report Status Signaling Link

Use this command to generate a report of the MTP signaling links status. The secondary state (SST) indicates whether the link is available, unavailable, or manually removed from service.

Use this command to generate a separate report of status of the E1 associated with a signaling link. The status includes the **e1loc** parameter (card location of the E1 card) and the UAM text. If the E1 association is not provisioned, “E1 association unknown” is displayed. If the card is not type **lime1** or **limch**, no E1 output is generated.

Use this command to generate a separate report of status of the T1 associated with a signaling link. The status includes the **t1loc** parameter (card location of the T1 card) and the UAM text. If the card is not type **limt1** or **limch**, no T1 output is generated.

Keyword: **rept-stat-slk**

Related Commands: **act-slk, blk-slk, dact-slk, dlt-slk, ent-slk, inh-slk, rtrv-slk, tst-slk, ublk-slk, unhb-slk**

Command Class: System Maintenance

Parameters

:l2stats= (optional)

Report L2 status

Range: **align, both, brief, no, service**

align — Display alignment data only

both — Display alignment and service data
brief — Display up to 10 alignment events only
no — Do not display level 2 status information
service — Display service data only

Default: **no**

:link= (optional)

The signaling link on the card specified in the **loc** parameter. The linkss can be specified in any sequence or pattern.

Synonym: **port**

Range: **a, b, a1-a31, b1-b31**

Not all card types support all **link** parameter values.

See "Summary of Range Values for :link Parameter" for valid **link** parameter range values for each type of card that can have assigned signaling link ports.

Default: Display all

:loc= (optional)

The card location as stenciled on the shelf of the system.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

Default: All cards containing signaling links are displayed.

:stat= (optional)

A report on cards whose status is the same as the state indicated by the parameter

Range: **all, alminh, anr, dsbld, mt, nr**

all — All of the primary states

alminh — Alarms inhibited

anr — In-Service-Abnormal (IS-ANR)

dsbld — Out-of-Service-Maintenance-Disabled (OOS-MT-DSBLD)

mt — Out-of-Service-Maintenance (OOS-MT)

nr — In-Service-Normal (IS-NR)

Default: Display all

Example

```
rept-stat-slk
```

```
rept-stat-slk:loc=1201:link=a
```

```
rept-stat-slk:stat=alminh
```

```
rept-stat-slk:loc=1203:link=b:l2stats=both
```

```
rept-stat-slk:loc=1203:link=b:l2stats=brief
```

Dependencies

No other **rept-stat-xxx** command can be in progress when this command is entered.

If the **loc** parameter or the **link** parameter is specified, then the **stat** parameter cannot be specified.

When the **loc** parameter is specified, the **link** parameter must be specified.

The card must be equipped and must be one of the following cards:

- An E1 ATM card running the **atmitu** application
- An E1/T1 MIM, E5-E1T1, or HC MIM card running the **ss7ansi** or **ccs7itu** application

- An E5 ATM card running the **atmansi** or **atmitu** application
- An E5-ENET card running the **ipsg** application
- An E5-ENET card or SSEDCCM card running the **iplim** or **iplimi** application with links having **ipliml2=m2pa**
- A LIM card running the **ss7ansi**, **ss7gx25**, or **ccs7itu** application
- A LIM ATM card running the **atmansi** application

The location specified by the **loc** parameter cannot be one of those reserved for non-LIM or non-DCM cards.

The signaling link must be an SS7 signaling link to display level 2 statistics (**l2stats**).

On TCP/IP point-to-multipoint links (SSEDCCM or E5-ENET cards equipped as SS7IPGW or IPGWI links), **l2stats** output is not available.

The following **link** parameter values can be specified for the following cards that support more than 2 links per card:

- **a1-a3, b1-b3**—Multi-port LIM (MPL), SSEDCCM card running the **iplim** or **iplimi** application with links having **ipliml2=m2pa**, E1/T1 MIM card
- **a1-a31, b1-b31**—HC-MIM card
- **a1-a15, b1-b15**—E5-E1T1 card
- **a1-a7, b1-b7**—E5-ENET card running the **iplim** or **iplimi** application that supports 16 links.
- **a1-a15, b1-b15**—E5-ENET card running the **ipsg** application

The specified signaling link must be provisioned in the database.

A card location that is valid and defined in the database must be specified.

The card in the specified card location (**loc** parameter) must be in service.

The **link=b** parameter cannot be specified for ss7ipgw TCP/IP links.

Neither the **stat** or **loc** and **port** parameters can be specified with this command.

Notes

Not every card location represents a signaling link. Be sure to address a signaling link in this command.

This command can be canceled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

The *Installation Manual – EAGLE 5 ISS* provides an illustration of card locations.

Output

rept-stat-slk

```
rlghncxa03w 04-02-27 17:00:36 EST EAGLE 31.3.0
SLK      LSN      CLLI      PST      SST      AST
1201,A   lsnsspn2  -----  IS-NR      Avail    ----
1201,B   lsnstpi   -----  IS-NR      Avail    ----
1202,A   lsnstpn   -----  IS-NR      Avail    ----
1202,B   lsnstpi   -----  IS-NR      Avail    ----
1203,A   lsnstpa   -----  IS-NR      Avail    ----
1203,B   lsnscpa   -----  IS-NR      Avail    ----
1205,A   lsnscpi   -----  IS-NR      Avail    ----
1205,B   lsnsspi1  -----  IS-NR      Avail    ----
1207,A   lsnstpa   -----  IS-NR      Avail    ----
1207,B   lsnsspa1  -----  IS-NR      Avail    ----
1211,A   lsnstpn   -----  IS-NR      Avail    ----
1211,B   lsnsspn1  -----  IS-NR      Avail    ----
Command Completed.
```

;

rept-stat-slk:loc=1201:link=a

```
rlghncxa03w 04-02-04 13:06:25 EST EAGLE 31.3.0
SLK      LSN      CLLI      PST      SST      AST
1201,A   lsnsspn2  -----  OOS-MT      Unavail  ----
ALARM STATUS = * 0213 REPT-LKF: received SIOS
UNAVAIL REASON = PE NA
Command Completed.
```

;

rept-stat-slk:loc=1213:link=a

```
rlghncxa03w 04-02-27 17:00:36 EST EAGLE 31.3.0
SLK      LSN      CLLI      PST      SST      AST
1201,A   lsnsspn2  -----  OOS-MT-DSBLD  LPBK      LFS
ALARM STATUS = * 0236 REPT-LKS: not aligned
UNAVAIL REASON = NA (can be any of those listed below)
Command Completed.
```

;

rept-stat-slk:stat=alminh

```
rlghncxa03w 04-02-23 12:57:50 EST EAGLE 31.3.0
SLK      LSN      CLLI      PST      SST      AST
1205,A   lsnscpi   -----  IS-NR      Avail    ALMINH
1211,A   lsnstpn   -----  IS-NR      Avail    ALMINH
Command Completed.
```

;

The following example shows output that includes a multi-port LIM:

rept-stat-slk

```
rlghncxa03w 04-02-23 12:57:50 EST EAGLE 31.3.0
SLK      LSN      CLLI      PST      SST      AST
1201,A   lsnsspn2  -----  IS-NR      Avail    ----
1201,B   lsnstpi   -----  IS-NR      Avail    ----
1202,A   lsnstpn   -----  IS-NR      Avail    ----
1202,B   lsnstpi   -----  IS-NR      Avail    ----
1203,A   lsnstpa   -----  IS-NR      Avail    ----
1203,B   lsnscpa   -----  IS-NR      Avail    ----
1203,A1  lsnstpi   -----  IS-NR      Avail    ----
1203,B1  lsnscpi   -----  IS-NR      Avail    ----
1203,A2  lsnstpb   -----  IS-NR      Avail    ----
1203,B2  lsnscpb   -----  IS-NR      Avail    ----
1203,A3  lsnstpc   -----  IS-NR      Avail    ----
1203,B3  lsnscpc   -----  IS-NR      Avail    ----
1205,A   lsnscpi   -----  IS-NR      Avail    ALMINH
1205,B   lsnsspi1  -----  IS-NR      Avail    ----
1207,A   lsnstpa   -----  IS-NR      Avail    ----
```

```

1207,B lsnsspa1 ----- IS-NR Avail ----
1211,A lsnstpn ----- OOS-MT Unavail ALMINH
1211,B lsnsspn1 ----- OOS-MT Unavail ----
Command Completed.

```

rept-stat-slk:loc=1203:link=a:l2stats=both

```

rlghncxa03w 04-02-04 13:06:25 EST EAGLE 31.3.0
SLK      LSN      CLLI      PST      SST      AST
1203,A lsnsspn2 ----- OOS-MT-DSBLD Unavail ----
  ALARM STATUS  = ** 0236 REPT-LKS:not aligned
  UNAVAIL REASON = NA
Event Type      Timestamp
SSCOP State     Idle 04-02-04 10:04:23.000
SSCOP State     Outgoing Conn. Pending 04-02-04 10:04:23.000
SSCOP State     Incoming Conn. Pending 04-02-04 10:05:31.100
SSCOP State     Outgoing Disc. Pending 04-02-04 10:05:31.100
SSCOP State     Outgoing Resync Pending 04-02-04 10:05:31.105
SSCOP State     Incoming Resync Pending 04-02-04 10:05:31.105
SSCOP State     Outgoing Recovery Pending 04-02-04 10:05:46.425
SSCOP State     Recovery Response Pending 04-02-04 10:05:46.430
SSCOP State     Incoming Recovery Pending 04-02-04 10:05:46.430
SSCOP State     Data Transfer Ready 04-02-04 10:06:02.110
SSCF State      OOS Idle 04-02-04 10:06:02.120
SSCF State      OOS ODP 04-02-04 10:06:02.885
SSCF State      Alignment Idle 04-02-04 10:06:53.625
SSCF State      Alignment OCP 04-02-04 10:07:14.000
SSCF State      Alignment ODP 04-02-04 10:07:14.000
SSCF State      In Service/Data Transfer Ready 04-02-04 10:08:01.760
SSCF State      Proving Data Transfer Ready 04-02-04 10:08:01.760
SSCF State      Aligned/Ready Data Transfer Ready 04-02-04 10:04:23.000
MAAL State      OOS 04-02-04 10:04:23.000
MAAL State      Alignment 04-02-04 10:05:31.100
MAAL State      Proving 04-02-04 10:05:31.100
MAAL State      Aligned/Ready 04-02-04 10:05:31.105
MAAL State      In Service 04-02-04 10:05:31.105
SSCOP Receive   BGN 04-02-04 10:05:46.425
SSCOP Receive   BGAK 04-02-04 10:05:46.430
SSCOP Receive   END 04-02-04 10:05:46.430
SSCOP Receive   ENDAK 04-02-04 10:06:02.110
SSCOP Receive   RS 04-02-04 10:06:02.120
SSCOP Receive   RSAK 04-02-04 10:06:02.885
SSCOP Receive   BGREJ 04-02-04 10:06:53.625
SSCOP Receive   SD 04-02-04 10:07:14.000
SSCOP Transmit  ER 04-02-04 10:07:14.000
SSCOP Transmit  POLL 04-02-04 10:08:01.760
SSCOP Transmit  STAT 04-02-04 10:08:01.760
SSCOP Transmit  USTAT 04-02-04 10:04:23.000
SSCOP Transmit  UD 04-02-04 10:04:23.000
SSCOP Transmit  MD 04-02-04 10:05:31.100
SSCOP Transmit  ERAK 04-02-04 10:05:31.100
SSCF Receive    Out of Service 04-02-04 10:05:31.105
SSCF Receive    Processor Outage 04-02-04 10:05:31.105
SSCF Receive    In Service 04-02-04 10:05:46.425
SSCF Receive    Normal 04-02-04 10:05:46.430
SSCF Receive    Emergency 04-02-04 10:05:46.430
SSCF Transmit   Alignment Not Successful 04-02-04 10:06:02.110
SSCF Transmit   Mgmt Initiated 04-02-04 10:06:02.120
SSCF Transmit   Protocol Error 04-02-04 10:06:02.885
SSCF Transmit   Proving Not Successful 04-02-04 10:06:53.625
Special Event   LCD 04-02-04 10:05:46.425
Special Event   LCD Cleared 04-02-04 10:05:46.430
Special Event   LOF 04-02-04 10:05:46.430
Special Event   LOF Cleared 04-02-04 10:06:02.110
Special Event   LOS 04-02-04 10:06:02.120
Special Event   LOS Cleared 04-02-04 10:06:02.885

```



```

Special Event   Too Many Interrupts                04-02-04 10:06:53.625

Service Event                                     Timestamp
Timer_No_Credit expired                          04-02-04 05:40:10.160
ERM link failure                                04-02-04 10:02:02.125
Timer_No_Response expired                       04-02-04 10:15:02.125
C00 received                                    04-02-04 10:22:02.125
Stop Commanded                                04-02-04 10:32:02.125
LP0                                             04-02-04 10:42:02.125
RP0                                             04-02-04 10:43:02.125
Remote OOS                                       04-02-04 10:44:02.125
Remote PE                                       04-02-04 10:45:02.125
Remote Mgmt Initiated                          04-02-04 10:46:02.125
Failed SLT                                     04-02-04 10:47:02.125
LCD                                             04-02-04 10:48:02.125
LOS                                             04-02-04 10:49:02.125
LOF                                             04-02-04 10:52:02.125
Too many interrupts                           04-02-04 10:53:02.125
In Service                                    04-02-04 10:54:01.760
Command Completed.
;

```

rept-stat-slk:loc=1203:link=b:l2stats=brief

```

rlghncxa03w 04-02-23 13:06:25 EST EAGLE 31.3.0
SLK      LSN      CLLI      PST      SST      AST
1203,B   lsnsspn2  -----  IS-NR      Avail     ----
ALARM STATUS      = No Alarms
UNAVAIL REASON    = --

```

```

Event Type      Event                Timestamp
Transmit        SIOS                 97-10-31 10:04:23.000
State           Out of Service        97-10-31 10:04:23.000
State           Initial Align         97-10-31 10:05:31.100
State           Idle                  97-10-31 10:05:31.100
Transmit        SIO                   97-10-31 10:05:31.105
State           Not Aligned            97-10-31 10:05:31.105
State           T2 Expired             97-10-31 10:05:46.425
Command Completed.
;

```

The following example shows output for an E1 interface associated with a link:

rept-stat-slk:loc=1201:link=a

```

rlghncxa03w 04-02-23 13:06:25 EST EAGLE 31.3.0
SLK      LSN      CLLI      PST      SST      AST
1201,A   e5m6s4   -----  OOS-MT      Unavail     -----
ALARM STATUS      = No Alarms
UNAVAIL REASON    = --
E1 STATUS         = 1201, REPT-E1F:FAC-E1 Port 1 LOS failure
Command Completed.
;

```

The following example shows output for when the E1 interface is not associated with a link:

rept-stat-slk:loc=1201:link=a

```

rlghncxa03w 04-02-23 13:06:25 EST EAGLE 31.3.0
SLK      LSN      CLLI      PST      SST      AST
1201,A   e5m6s4   -----  OOS-MT      Unavail     -----
ALARM STATUS      = No Alarms
UNAVAIL REASON    = --
E1 status         = E1 association unknown
Command Completed.
;

```

The following example shows output for a T1 interface associated with a link:

rept-stat-slk:loc=1201:link=a

```

rlghncxa03w 04-02-23 13:06:25 EST EAGLE 31.3.0
SLK      LSN      CLLI      PST      SST      AST
1201,A   e5m6s4   -----  OOS-MT      Unavail  -----
ALARM STATUS      = No Alarms
UNAVAIL REASON    = --
T1 STATUS         = 1201, REPT-E1F:FAC-T1 Port 1 LOS failure
Command Completed.
;

```

The following example shows output for an E1 ATM card:

rept-stat-slk:loc=1101:link=a

```

rlghncxa03w 04-02-23 13:06:25 EST EAGLE 31.3.0
SLK      LSN      CLLI      PST      SST      AST
1101,A   atmitu1  -----  OOS-MT-DSBLD Manual  -----
ALARM STATUS      = ** 0236 REPT-LKF: not aligned
UNAVAIL REASON    = NA
Command Completed.
;

```

The following example shows output for an 8-point IPLIM card:

rept-stat-slk:loc=1301

```

rlghncxa03w 04-02-23 13:06:25 EST EAGLE 31.3.0
SLK      LSN      CLLI      PST      SST      AST
1301,A   lsnip   -----  OOS-MT-DSBLD Unavail  ----
1301,B   lsnip   -----  OOS-MT-DSBLD Unavail  ----
1301,A1  lsnip   -----  OOS-MT-DSBLD Unavail  ----
1301,B1  lsnip   -----  OOS-MT-DSBLD Unavail  ----
1301,A2  lsnip   -----  OOS-MT-DSBLD Unavail  ----
1301,B2  lsnip   -----  OOS-MT-DSBLD Unavail  ----
1301,A3  lsnip   -----  OOS-MT-DSBLD Unavail  ----
1301,B3  lsnip   -----  OOS-MT-DSBLD Unavail  ----

ALARM STATUS      = ** 0224 REPT-LKS: not aligned
UNAVAIL REASON    = NA
Command Completed.
;

```

Legend

SLK—The card location and the signaling link.

LSN—The name of the linkset that contains the signaling link.

CLLI—The CLLI code of the destination STP of the signaling link.

PST—The primary state of the signaling link. The possible values are described in "Possible Values for PST/SST/AST".

SST—The secondary state of the signaling link. The possible values are described in "Possible Values for PST/SST/AST".

AST—The associated state of the signaling link. The possible values are described in .

ALARM STATUS—The trouble text alarm message that was generated for the specified signaling link.

UNAVAIL REASON—The reason that the signaling link is unavailable. More than one unavailable reason may be listed:

BSNR—The signaling link received 2 of 3 invalid BSNs.

CNGT—The signaling link has a remote congestion time-out.

COO—A changeover order was received.

FC—The signaling link is unavailable because of false congestion restart.

FE—The signaling link is in far end loopback mode.

FIBR—The signaling link received 2 of 3 invalid FIBs.

INTR—Too many link interrupts were received.

LB—The signaling link has been blocked locally.

LD—The signaling link received incomplete data.

LI—The signaling link has been inhibited locally.

NA—The signaling link is not aligned.

PF—The signaling link failed the proving period.

RB—The signaling link has been blocked remotely.

RD(xx.xxx)—The signaling link is unavailable because of a restart delay to prevent signaling link oscillation. The number in parentheses indicates the amount of time, in seconds, remaining in the restart delay period. The link is restarted automatically after this amount of time has elapsed.

RL—The signaling link is in remote near end loopback mode.

RMI—The signaling link has been inhibited remotely.

SIE—An unexpected SIE was received.

SIN—An unexpected SIN was received.

SIO—An unexpected SIO was received.

SIOS—An unexpected SIOS was received.

SLTF—Link test failed.

T1NR—The level-2 T1 (not ready) timer expired.

T1R—The level-2 T1 (ready) timer expired.

T2—The level-2 T2 timer expired.

T3—The level-2 T3 timer expired.

X25FL—An X25 link failed.

XDA—The signaling link did not receive an acknowledgment in time.

XER—The SUERM threshold was exceeded.—

---The card is ISOLATED or the links are available.

The following are reasons that the ATM high-speed signaling link is unavailable:

TNC—Timer No Credit expired - The remote node has held the node in a no-credit state for too long. The far end office should be contacted to determine the cause of the link congestion.

TNR—Timer No Response expired - The far end is taking too long to acknowledge the messages sent to it by the near end. The far end office should be contacted to determine the cause for the excessive delay in acknowledging PDUs.

LPO—Local Processor Outage - Indicates a spontaneous or management-initiated processor outage. The user needs to determine whether the outage was spontaneous or management-initiated on the near end.

RPO—Remote Processor Outage - The far end has sent PDUs causing processor outage. The far end office should be contacted to determine the reason for the processor outage.

ROOS—Remote Out of Service - The far end has sent PDUs causing a link to become out of service. The far end office should be contacted to determine the reason for taking the link out of service.

RPE—Remote Protocol Error - The far end has sent PDUs declaring a protocol error. The far end office should be contacted to determine the details about the protocol error.

RMIR—Remote Management Initiated Release - The far end has sent PDUs releasing the link. The far end office should be contacted to determine the reason for releasing the link.

LCD—Level 1 facility outage: Loss of Cell Delineation

LOF—Level 1 facility outage: Loss of Frame

LOS—Level 1 facility outage: Loss of Signal

EVENT TYPE—The type of event being logged:

RECEIVE—When a signal unit is received.

TRANSMIT—When a signal unit is transmitted.

STATE—When an internal SS7 Level 2 state changes or a special event occurs that would either end alignment or cause the link to fail.

EVENT—The specific event being logged: (1) if a signal unit is being received or transmitted, the specific signal unit is displayed; (2) if the event being logged is a state change, the new state is displayed; (3) If neither (1) nor (2) is displayed, the link or alignment failure reason is displayed.

SERVICE EVENT—The service activity of the link; for example, In Service. Anything other than In Service is a description of a link failure.

TIMESTAMP—The time event processed by the system as follows:

YY-MM-DD HH:MM:SS.TTT, where

YY—The last 2 digits of the year (range 00–99)

MM—The month (range 01–12)

DD—The day of month (range 00–31)

HH—The hour of day (range 00–59)

MM—The minute of the hour (range 00–59)

ss—The seconds of the minute (range 00–59)

TTT—Milliseconds of the second (range 000–995 in increments of 5)

E1 STATUS—The status of the E1 interface associated with the link; the status includes the card location (**e1loc**) and the UAM text. If the E1 association is not provisioned, “E1 association unknown” is displayed. If the card is not type **lime1** or **limch**, no E1 output is displayed.

T1 STATUS—The status of the T1 interface associated with the link; the status includes the card location (**e1loc**) and the UAM text. If the card is not type **limt1** or **limch**, no T1 output is displayed.

rept-stat-sys

Report Status System

Use this command to display a summary report of the status of the main system entities. Use this display to determine where the troubles are in the system. The display shows the number of these items that are in service (IS-NR) and how many are in another state (IS-ANR, OOS-MT, OOS-MT-DSBLD).

NOTE: VSCCP cards are included in SCCP card status.

Keyword: rept-stat-sys

Related Commands: rept-stat-alm, rept-stat-card, rept-stat-clk, rept-stat-cluster, rept-stat-dstn, rept-stat-imt, rept-stat-ls, rept-stat-meas, rept-stat-mps, rept-stat-seas, rept-stat-slk, rept-stat-trbl, rept-stat-xlist

Command Class: System Maintenance

Parameters

This command has no parameters.

Example

rept-stat-sys

Dependencies

No other **rept-stat-xxx** command can be in progress when this command is entered.

Notes

None

Output

The following example shows the output when no features are turned on in the system and only the cards in locations 1109-1110 and 1113-1118 are installed.

rept-stat-sys

```
tekelecstp 08-12-11 10:31:06 EST EAGLE 40.1.0
MAINTENANCE STATUS REPORT
Maintenance Baseline established.
Routing Baseline established.
SCCP Baseline established.
ALARMS:      CRIT=      2    MAJR=      2    MINR=      0    INH=      0
OAM 1113      IS-NR      Active      INH=      0
OAM 1115      IS-NR      Standby      INH=      0
LIM      CARD IS-NR=      0    Other=      0    INH=      0
X25      CARD IS-NR=      0    Other=      0    INH=      0
SCCP      CARD IS-NR=      0    Other=      0    INH=      0
GLS      CARD IS-NR=      0    Other=      0    INH=      0
SLAN      CARD IS-NR=      0    Other=      0    INH=      0
VXWLAN      CARD IS-NR=      0    Other=      0    INH=      0
SS7IPGW      CARD IS-NR=      0    Other=      0    INH=      0
IPGWI      CARD IS-NR=      0    Other=      0    INH=      0
IPLIM      CARD IS-NR=      0    Other=      0    INH=      0
IPLIMI      CARD IS-NR=      0    Other=      0    INH=      0
IPSG      CARD IS-NR=      0    Other=      0    INH=      0
HMUX      CARD IS-NR=      0    Other=      0    INH=      0
MCPM      CARD IS-NR=      0    Other=      0    INH=      0
EROUTE      CARD IS-NR=      0    Other=      0    INH=      0
CLOCK      IS-NR=      2    Other=      0    INH=      0
IMT      IS-NR=      2    Other=      0
SLK      IS-NR=      0    Other=      0    INH=      0
DLK      IS-NR=      0    Other=      0    INH=      0
LINK SET      IS-NR=      0    Other=      0    INH=      0
DSM IP LK      IS-NR=      0    Other=      0    INH=      0
MCPM IP LK      IS-NR=      0    Other=      0    INH=      0
APPLSOCK      IS-NR=      0    Other=      0    INH=      0
SCTP ASSOC      IS-NR=      0    Other=      0    INH=      0
APPL SERVER      IS-NR=      0    Other=      0    INH=      0
SS7 DPC      IS-NR=      0    Other=      0    INH=      0
X25 DPC      IS-NR=      0    Other=      0    INH=      0
CLUST DPC      IS-NR=      0    Other=      0    INH=      0
RTX      IS-NR=      0    Other=      0    INH=      0
XLIST DPC      IS-NR=      0    Other=      0
DPC SS      Actv =      0    Other=      0
SEAS SS      IS-NR=      0    Other=      2
SEAS X25      IS-NR=      0    Other=      2    INH=      0
TERMINAL      IS-NR=     16    Other=      0    INH=      0
MPS      IS-NR=      0    Other=      0
RTD SS      IS-NR=      1    Other=      0
RSN      IS-NR=      0    Other=      0
;
```

The following example shows the output when various features are turned on in the system. (Your output will not show all of these entries; some features are mutually exclusive in the system.)

Some entries appear as follows:

- When the Measurements Platform feature is not turned on and no MCPM cards are in the IS-NR state in the system, the MCPM and MCPM IP LK values are zero and the MEAS SS entry does not appear.
- When one or more MCPM cards have been installed and allowed, the MCPM CARD entry shows the number of MCPM cards that are in each state.

- When the Measurements Platform feature is turned on and the Measurements Platform collection option is enabled, the MEAS SS entry appears.
- When the Measurements Platform collection function has been enabled (chg-measopts=platformenable=on), the MCPM IP LK entry shows the number of links that are functioning for the MCPM cards, and the MEAS SS entry appears.
- When the MTP Origin Based Routing (MOBR) feature is not turned on, and/or no exception routes have been provisioned, the RTX value is zero.
- When the OA&M IP Security Enhancement feature is turned on, the SECURITY SS entry appears.
- When the Equipment Identity Register (EIR) feature is turned on, the EIR SS entry appears.
- When the INAP Number Portability (INP) feature is turned on, the INP SS entry appears.

rept-stat-sys

rlghncxa03w 09-03-07 16:53:22 EST EAGLE5 40.1.0

MAINTENANCE STATUS REPORT

Maintenance Baseline established.

Routing Baseline established.

SCCP Baseline established.

ALARMS:	CRIT=	9	MAJR=	10	MINR=	3	INH=	2
OAM 1113	IS-NR		Active				INH=	0
OAM 1115	IS-NR		Standby				INH=	0
LIM	CARD IS-NR=	3	Other=	0			INH=	0
X25	CARD IS-NR=	0	Other=	0			INH=	0
SCCP	CARD IS-NR=	3	Other=	0			INH=	0
GLS	CARD IS-NR=	0	Other=	0			INH=	0
SLAN	CARD IS-NR=	0	Other=	0			INH=	0
VXWLAN	CARD IS-NR=	0	Other=	0			INH=	0
IPSG	CARD IS-NR=	2	Other=	0			INH=	0
SS7IPGW	CARD IS-NR=	0	Other=	0			INH=	0
IPGWI	CARD IS-NR=	0	Other=	0			INH=	0
IPLIM	CARD IS-NR=	0	Other=	0			INH=	0
IPLIMI	CARD IS-NR=	0	Other=	0			INH=	0
HMUX	CARD IS-NR=	0	Other=	0			INH=	0
HIPR	IS-NR=	2	Other=	0			INH=	0
IMT	IS-NR=	2	Other=	0				
SLK	IS-NR=	0	Other=	6			INH=	0
DLK	IS-NR=	0	Other=	0			INH=	0
LINK SET	IS-NR=	0	Other=	4			INH=	0
DSM IP LK	IS-NR=	0	Other=	0			INH=	0
MCPM	CARD IS-NR=	0	Other=	0			INH=	0
EROUTE	CARD IS-NR=	0	Other=	0			INH=	0
CLOCK	IS-NR=	2	Other=	0			INH=	0
HS CLOCK	IS-NR=	2	Other=	0			INH=	0
MCPM IP LK	IS-NR=	2	Other=	0			INH=	0
APPLSOCK	IS-NR=	0	Other=	0			INH=	0
SCTP ASSOC	IS-NR=	0	Other=	0			INH=	0
APPL SERVER	IS-NR=	0	Other=	0			INH=	0
SS7 DPC	IS-NR=	0	Other=	6			INH=	0
X25 DPC	IS-NR=	0	Other=	0			INH=	0
CLUST DPC	IS-NR=	0	Other=	1			INH=	0
RTX	IS-NR=	2	Other=	1			INH=	0
XLIST DPC	IS-NR=	0	Other=	0				
DPC SS	Actv =	0	Other=	0				
SEAS SS	IS-NR=	1	Other=	0				
TERMINAL	IS-NR=	2	Other=	14			INH=	0
MPS	IS-NR=	2	Other=	0				
SECURITY SS	IS-NR=	1	Other=	0				
EIR SS	IS-NR=	1	Other=	0				
RTD SS	IS-NR=	0	Other=	1				

```

      INP SS      IS-NR= 1      Other= 0
      VFLEX SS    IS-NR= 1      Other= 0
      ATINPQ SS   IS-NR= 1      Other= 0
      LNP SS      IS-NR= 1      Other= 0
      FCS         IS-NR= 1      Other= 0
;

```

Legend

INH—The number of devices within each device type that have their alarms inhibited.

ALARMS—The number of critical (**CRIT**), major (**MAJR**), and minor (**MINR**) alarms on the system when this command was executed and the count of alarm inhibited (**INH**) devices for cards, links, linksets, terminals, and SEAS X.25 links and terminals.

OAM—The status of each of the cards that are running the OAM (1113 and 1115).

LIM CARD—The status of the LIM cards.

X25 CARD—The status of the SS7GX25 cards.

SCCP CARD—The status of the SCCP subsystem cards. VSCCP cards are included in the SCCP card status.

GLS CARD—The status of the GLS subsystem cards.

SLAN CARD—The status of the STPLAN subsystem cards.

VXWSLAN CARD—The status of the VXW STPLAN subsystem cards.

SS7IPGW CARD—The status of the SS7IPGW cards.

IPGWI CARD—The status of the IPGWI cards.

IPLIM CARD—The status of the IPLIM cards.

IPLIMI CARD—The status of the IPLIMI cards.

HMUX CARD—The status of the HMUX cards.

HIPR CARD—The status of the HIPR cards.

MCPM CARD—The status of the MCPM cards.

EROUTE CARD—The status of the EROUTE cards.

CLOCK—The status of the system clocks.

HS CLOCK—The status of the high-speed clocks.

IMT—The status of the IMT system.

SLK—The status of the SS7, IPGWI, and X.25 signaling links in the system.

DLK—The status of the TCP/IP data links in the system.

LINK SET—The status of the linksets in the system.

DSM IP LK—The status of the DSM IP linksets.

MCPM IP LK—The status of the MCPM IP links.

APPLSOCK—The status of the application sockets.

SCTP ASSOC—The status of the SCTP associations.

APPL SERVER—The status of the Application Servers.

SS7 DPC—Summary information only for provisioned DPCs that are not in clusters.

X25 DPC—The status of the destination point codes in the X.25 domain.

CLUST DPC—Summary information for provisioned cluster DPCs only.

RTX—Summary information for provisioned exception routes only.

XLIST DPC—Summary information for X-LIST DPC entries only.

DPC SS—Summary information for the DPC subsystem.

SCCP SS—The status of the SCCP subsystem.

XLIST SS—Summary information for SEAS Subsystem X.25 Links to SEAC.

SEAS SS—The status of the SEAS subsystem.

MEAS SS—The status of the Measurements subsystem (for Measurements Platform).

SEAS X25—The status of the SEAS X.25 signaling links.

NDC SS—The status of the NDC subsystem.

NDC Q3—Summary information on Q.3 association status.

MPS—Summary information on the MPS.

TERMINAL—The status of the terminals.

SECURITY SS—EAGLE OA&M IP Security subsystem status.

EIR SS—Equipment Identity Register subsystem status.

RTD—Run Time Diagnostic subsystem status.

VFLEX SS—V-Flex subsystem status.

ATINPQ SS—ATI Number Portability Query subsystem status.

INP SS—INAP Number Portability subsystem status.

LNP SS—Local Number Portability subsystem status.

FCS—The status of the Fast Copy subsystem.

rept-stat-t1

Report Status T1

Use this command to display the T1 port status and signaling link status for cards with provisioned T1 ports.

Keyword: **rept-stat-t1**

Related Commands:

Command Class: System Maintenance

Parameters

:loc= (optional)

Card address. The unique identifier of a specific **limt1** card located in the STP.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

Default: Information for all **limt1** cards is reported.

:t1port= (optional)

The T1 port number. When this parameter is specified, information is displayed only for the specified T1 port on the card in the specified card location.

Range: **1-8**

Ports 3 through 8 can be specified only for HC-MIM cards.

Example

rept-stat-t1

rept-stat-t1:loc=1203

rept-stat-t1:loc=1203:t1port=1

Dependencies

No other **rept-stat-xxx** command can be in progress when this command is entered.

The **loc** parameter must be specified when the **t1port** parameter is specified.

The active TDM location cannot be specified in the **loc** parameter.

Card locations 1117 and 1118 and the HMUX or HIPR card locations (xy09 and xy10 where x is the frame and y is the shelf) cannot be specified in the **loc** parameter.

Notes

Specifying the command without any parameters displays T1 port status for all cards with provisioned T1 ports.

If the **loc** parameter is specified, status is displayed for all T1 ports provisioned on the card in the specified location.

If the **loc** and **t1port** parameters are specified, the T1 port status summary is displayed for all T1 ports provisioned on the card in the specified location, followed by the status of all signaling links assigned to the specified T1 port on the card.

Output

When no parameters are specified in the command, T1 port status is displayed for all cards with provisioned T1 ports. Ports 3 through 8 are on HC-MIM cards only.

rept-stat-t1

```
rlghncxa03w 05-01-04 07:01:08 EST EAGLE5 33.0.0
LOC   T1PORT   PST           SST           AST
1203  1         IS-NR         Avail        BRGD MSTR
1203  2         IS-NR         Avail        BRGD SLAV
1203  3         IS-NR         Avail        -----
1203  7         OOS-MT        Unavail      -----
1207  1         IS-NR         Avail        -----
1207  2         IS-NR         Avail        -----
Command Completed.
```

;

When the **loc** parameter is specified, status is displayed for all T1 ports provisioned on the card in the specified location.

rept-stat-t1: loc=1203

```
rlghncxa03w 05-01-04 07:01:08 EST EAGLE5 33.0.0
LOC   T1PORT   PST           SST           AST
1203  1         IS-NR         Avail        BRGD MSTR
1203  2         IS-NR         Avail        BRGD SLAV
1203  3         IS-NR         Avail        -----
1203  7         OOS-MT        Unavail      -----
Command Completed.
```

;

When the **loc** and **t1port** parameters are specified, the T1 port status summary is displayed for all T1 ports provisioned on the card in the specified location, followed by the status of all signaling links assigned to the specified T1 port on the card.

rept-stat-t1: loc=1203: t1port=1

```
rlghncxa03w 05-01-04 07:01:08 EST EAGLE5 33.0.0
LOC   T1PORT   PST           SST           AST
1203  1         IS-NR         Avail        BRGD MSTR
ALARM STATUS      = No Alarms.
UNAVAIL REASON    = --
SLK   TS   PST           SST           AST
A     1   IS-NR         Avail        ---
A1    2   IS-NR         Avail        ---
Command Completed.
```

;

rept-stat-t1: loc=1203: e1port=2

```
rlghncxa03w 05-01-04 07:01:08 EST EAGLE5 33.0.0
LOC   T1PORT   PST           SST           AST
1203  2         IS-NR         Avail        BRGD SLAV
ALARM STATUS      = No Alarms.
UNAVAIL REASON    = --
Command Completed.
```

;

Legend

LOC—Card location

T1PORT—Number of the T1 port provisioned on the card in the specified location.

PST—The primary state of the card. The possible values are described in "Possible Values for PST/SST/AST".

SST—The secondary state of the card. The possible values are described in "Possible Values for PST/SST/AST".

AST—The associated state of the card. The possible values are described in "Possible Values for PST/SST/AST". The values **PARENT** and **PAIRED** refer to odd and even adjacent ports on the card that are provisioned in channel bridging mode.

ALARM STATUS—Either "No Alarms" or current alarm number and text

UNAVAIL REASON—Reason for the T1 port being unavailable

SLK—Signaling link assigned to the T1 port

TS—Timeslot assigned to the signaling link

PST—The primary state of the signaling link. The possible values are described in "Possible Values for PST/SST/AST".

SST—The secondary state of the signaling link. The possible values are described in "Possible Values for PST/SST/AST".

AST—The associated state of the signaling link. The possible values are described in .

rept-stat-trbl

Report Status Trouble

Use this command to display a summary report of all the device trouble notifications that are logged currently in the OAM's RAM storage area.

Keyword: **rept-stat-trbl**

Related Commands: **act-alm-trns**, **dact-alm-trns**, **rept-stat-alm**, **rept-stat-clk**, **rls-alm**, **rtrv-obit**, **rtrv-trbl**

Command Class: System Maintenance

Parameters

:display= (optional)

Display type of alarms to be reported.

Range: **act**, **all**, **inhb**, **timestamp**

act— Display only active alarms

all— Display all alarms with no timestamps

inhb— Display only inhibited alarms

timestamp— Display all alarms with the date and time when the alarm was logged. Timestamps appear in the output only when the **display=timestamp** parameter is specified.

Default: **all**

:level= (optional)

The alarm level of the alarms to be displayed

Range: **crit**, **majr**, **minor**

Default: All alarms are displayed

Example

```
rept-stat-trbl
```

```
rept-stat-trbl:level=majr
```

```
rept-stat-trbl:display=inhb
```

Dependencies

No other **rept-stat-xxx** command can be in progress when this command is entered.

Commands

rept-stat-trbl

Notes

None

Output

The following example lists all devices that could appear. Your output will not be exactly the same; all devices and alarms cannot coexist in the system.

rept-stat-trbl

```

tekelecstp 09-03-01 10:31:06 EST EAGLE 40.1.0
SEQN UAM AL DEVICE ELEMENT TROUBLE TEXT
0002.0143 * CARD 1113 OAM System release GPL(s) not approved
0003.0313 *C DPC s-010-010-003 DPC is prohibited
0004.0313 *C DPC 010-010-004 DPC is prohibited
0005.0313 *C DPC ps-010-010-005 DPC is prohibited
0006.0313 *C DPC s-252-010-003 DPC is prohibited
0008.0313 *C DPC 252-010-004 DPC is prohibited
0009.0313 *C DPC 252-011-* DPC is prohibited
0011.0176 * SECULOG 1116 Stdby security log - upload required
0019.0236 *C T1PORT 1301,1 REPT-T1F:FAC-T1 LOS failure
0021.0318 ** LSN lsn1 REPT-LKST0: link set prohibited
0022.0318 ** LSN lsn2 REPT-LKST0: link set prohibited
0023.0318 ** LSN lsn3 REPT-LKST0: link set prohibited
0024.0236 ** SLK 1315,A ls11234567 REPT-LKF: not aligned
0025.0236 ** SLK 1316,A ls11345678 REPT-LKF: not aligned
0028.0313 *C DPC 252-010-001 DPC is prohibited
0029.0308 *C SYSTEM Node isolated due to SLK failures
0036.0455 *C EIR SYSTEM EIR Subsystem is not available
3102.0435 *C LNP SYSTEM LNP Subsystem is disabled
3536.0084 ** EMAP B 7100 IP Connection Unavailable
3537.0084 ** DLK 1215, A MCP IP Connection Unavailable
3538.0179 * EMAP NDC Q.3 association is Unavailable
0002.0143 * CARD 1113 OAM System release GPL(s) not approved
0003.0313 *C DPC s-010-010-003 DPC is prohibited
0004.0313 *C DPC 010-010-004 DPC is prohibited
0005.0313 *C DPC ps-010-010-005 DPC is prohibited
0006.0313 *C DPC s-252-010-003 DPC is prohibited
0008.0313 *C DPC 252-010-004 DPC is prohibited
0009.0313 *C DPC 252-011-* DPC is prohibited
0010.0318 ** LSN lsn4 REPT-LKST0: link set prohibited
0011.0176 * SECULOG 1116 Stdby security log - upload required
0019.0236 *C T1PORT 1301,1 REPT-T1F:FAC-T1 LOS failure
0021.0318 ** LSN lsn1 REPT-LKST0: link set prohibited
0022.0318 ** LSN lsn2 REPT-LKST0: link set prohibited
0023.0318 ** LSN lsn3 REPT-LKST0: link set prohibited
0024.0236 ** SLK 1315,A ls11234567 REPT-LKF: not aligned
0025.0236 ** SLK 1316,A ls11345678 REPT-LKF: not aligned
0028.0313 *C DPC 252-010-001 DPC is prohibited
0029.0308 *C SYSTEM Node isolated due to SLK failures
0036.0455 *C EIR SYSTEM EIR Subsystem is not available
3102.0435 *C LNP SYSTEM LNP Subsystem is disabled
3536.0084 ** EMAP B 7100 IP Connection Unavailable
3537.0084 ** DLK 1215, A MCP IP Connection Unavailable
3538.0179 * EMAP NDC Q.3 association is Unavailable
3539.0181 *C NDC SYSTEM NDC Subsystem is not available
3540.0203 ** SLK 1201,A lsn1 REPT-LKF: lost data
3541.0203 ** SLK 1201,B lsn4 REPT-LKF: lost data
3542.0203 ** SLK 1202,A lsn2 REPT-LKF: lost data
3543.0203 ** SLK 1202,B lsn4 REPT-LKF: lost data
3544.0202 ** SLK 1203,A lsn3 REPT-LKF: HWP - too many link
interrupts
3545.0202 ** SLK 1203,B lsn4 REPT-LKF: HWP - too many link
interrupts
2353.0022 * CARD 1107 MCP Clock B for card failed, Clock A normal
3587.0048 * TERMINAL 1 Terminal failed
0007.0110 * IMT SYSTEM Failure detected on one IMT bus
2343.0002 * GPL SYSTEM BPDPCM Card is not running approved GPL
4321.0321 * XLIST X-LIST occupancy threshold exceeded

```

0046.0344	*	SEAS X25 Link A1	SEAS PVC unavailable
0045.0348	*	SEAS SYSTEM	SEAS is at min service limit
0011.0176	*	SECULOG 1116	Stdby security log -- upload required
3538.0179	*	EMAP	NDC Q.3 association is Unavailable
4121.0398	*	INP SYSTEM	Local Subsystem normal,card(s) abnormal
2354.0516	*	MEAS SYSTEM	Degraded Mode - 1 card failed
3589.0013	**	CARD 1103 SS7ANSI	Card is isolated from the system
2358.0013	**	CARD 1111 MCP	Card is isolated from the system
3590.0013	**	CARD 1115 OAM	Card is isolated from the system
3590.0514	**	CARD 1115 EOAM	Standby MASP is inhibited
0006.0108	**	IMT BUS A	Major IMT failure detected
		Card 1105, 1113, 1115	
0012.0390	**	CARD 1109 HMUX	Illegal Address Error
0046.0155	*	DLK 1104,A1	STPLAN connection unavailable
3591.0208	**	SLK 1101,A ls1	REPT-LKF: APF - lvl-2 T2 expired
3592.0208	**	SLK 1101,B ls2	REPT-LKF: APF - lvl-2 T2 expired
3593.0202	**	SLK 1102,B2 lsname489+	REPT-LKF: HWP -too many link interrupts
3594.0236	**	SLK 1103,A ls3	REPT-LKF: not aligned
3595.0236	**	SLK 1103,B ls4	REPT-LKF: not aligned
3596.0084	**	DLK 1111,A MCP	IP Connection Unavailable
0024.0236	**	SLK 1315,A ls11234567	REPT-LKF: not aligned
0025.0236	**	SLK 1316,A ls11345678	REPT-LKF: not aligned
0943.0318	**	LSN ls1	REPT-LKST0: link set prohibited
0945.0318	**	LSN ls2	REPT-LKST0: link set prohibited
0948.0318	**	LSN ls4	REPT-LKST0: link set prohibited
1234.0082	**	FUSE PANEL 11xx	Alarm in Fuse Panel
0012.0341	**	OAP A	OAP unavailable
0134.0084	**	IP7 LONGSOCKETNAME1	IP Connection Unavailable
3537.0084	**	DLK 1215,A MCP	IP Connection Unavailable
3537.0084	**	DSM 1315,A	IP Connection Unavailable
3536.0084	**	EMAP B 7100	IP Connection Unavailable
0133.0277	**	IP7 as1	AS Unavailable
0003.0313	*C	DPC s-010-010-003	DPC is prohibited
0004.0313	*C	DPC 010-010-004	DPC is prohibited
0005.0313	*C	DPC ps-010-010-005	DPC is prohibited
0028.0313	*C	DPC 252-010-001	DPC is prohibited
0006.0313	*C	DPC s-252-010-003	DPC is prohibited
0008.0313	*C	DPC 252-010-004	DPC is prohibited
0009.0313	*C	DPC 252-011-*	DPC is prohibited
2120.0058	*C	CDT 1	Critical customer trouble detected
0029.0308	*C	SYSTEM	Node isolated due to SLK failures
0040.0128	*C	CLOCK SYSTEM	All clocks have failed
0050 1114	*	HS CLOCK SYSTEM	Clock selection mismatch
2109.0331	*C	SCCP SYSTEM	SCCP is not available
2110.0292	*C	GLS SYSTEM	GLS is not available
1234.0153	*C	SLAN SYSTEM	STPLAN not available
0009.0041	*C	LSMS Connection A1	LNP DB Maintenance Required
0056.0356	*C	LSMS SYSTEM	LSMS unavailable
0041.0197	*C	CLOCK SYSTEM	All High Speed Clocks have failed
0056.0356	*C	LSMS SYSTEM	LSMS unavailable
0041.0197	*C	CLOCK SYSTEM	All High Speed Clocks have failed
3102.0435	*C	LNP SYSTEM	LNP Subsystem is disabled
3539.0181	*C	NDC SYSTEM	NDC Subsystem is not available
0036.0455	*C	EIR SYSTEM	EIR Subsystem is not available
0019.0236	*C	T1PORT 1301,1	REPT-T1F:FAC-T1 LOS failure
4521.0370	*C	MPS A	Critical Platform Failure(s)
0045.0469	*C	EROUTE SYSTEM	All STC cards Unavailable
5648.0382	**	E1PORT 1201,2	REPT-E1F:FAC-E1 LOF failure
0047.0392	**	SECURITY SYSTEM 1211	OA&M IP Security feature status is OFF
0036.0455	*C	EIR SYSTEM	EIR Subsystem is not available
1235 0114	**	IP TPS SYSTEM	System IP TPS threshold exceeded
3690.0557	*	RSN RSF	RSN is restricted
3684.0013	**	CARD 1305 SS7IPGW	Card is isolated from the system
3688.0236	**	SLK 1203,A lslg2	REPT-LKF: not aligned
3692.0318	**	LSN e5e6	REPT-LKST0: link set prohibited

```

1088.0539 * DLK 1106,A1 Ethernet Interface Down
1089.0579 * CARD 1106 FC Network Unavailable
1090.0576 ** FCS ALL FC Network Unavailable
3697.0539 ** ENET 1305,A Ethernet Interface Down
3698.0539 ** ENET 1305,B Ethernet Interface Down
3699.0539 ** ENET 1307,B Ethernet Interface Down
3700.0536 * IP7 assoc1234567890 IP Connection Excess Retransmits
0915.0541 *C RTD SYSTEM MSU cksum error threshold exceeded
0002.0520 *C Frame power usage reached LVL3
0056.0528 *C GFLEX SERVICE Service is not available
0056.0528 *C GPORT SERVICE Service is not available
5676.0084 ** MCPM 1101,A IP Connection Unavailable
0056.0528 *C MNP SERVICE Service is not available
0044.0558 *C RSN RSF Routeset is prohibited
0044.0534 *C RTX 001-101-001 RTX is prohibited
0916.0565 *C ATINPQ SYSTEM ATINPQ Subsystem is not available
Command Completed.
;

rept-stat-trbl:display=act:level=majr
rlghncxa03w 02-03-07 09:50:17 EST EAGLE 30.0.0
Searching devices for alarms...
;

rlghncxa03w 02-03-07 09:50:17 EST EAGLE 30.0.0
SEQN UAM AL DEVICE ELEMENT TROUBLE TEXT
3540.0203 ** SLK 1201,A lsn1 REPT-LKF: lost data
3541.0203 ** SLK 1201,B lsn4 REPT-LKF: lost data
3542.0203 ** SLK 1202,A lsn2 REPT-LKF: lost data
3543.0203 ** SLK 1202,B lsn4 REPT-LKF: lost data
3544.0202 ** SLK 1203,A lsn3 REPT-LKF: HWP -too many link interrupts
3545.0202 ** SLK 1203,A1 lsn4 REPT-LKF: HWP -too many link interrupts
3545.0202 ** SLK 1203,B2 lsn4 REPT-LKF: HWP -too many link interrupts
0022.0318 ** LSN lsn2 REPT-LKSTO: link set prohibited
0023.0318 ** LSN lsn3 REPT-LKSTO: link set prohibited
0010.0318 ** LSN lsn4 REPT-LKSTO: link set prohibited
Command Completed.
;

rept-stat-trbl:display=inhb:level=majr
rlghncxa03w 02-03-07 09:50:17 EST EAGLE 30.0.0
Searching devices for alarms...
;

rlghncxa03w 02-03-07 09:50:17 EST EAGLE 30.0.0
SEQN UAM AL DEVICE ELEMENT TROUBLE TEXT
0021.0318I** LSN lsn1 REPT-LKSTO: link set prohibited
Command Completed.
;

```

The following example shows output when the **display=timestamp** parameter is specified.

```

rept-stat-trbl:display=timestamp
rlghncxa03w 04-04-07 09:50:17 EST EAGLE 31.6.0
Searching devices for alarms...
;

tekelecstp 04-04-07 09:50:17 EST EAGLE 31.6.0
SEQN UAM AL DEVICE ELEMENT TROUBLE TEXT
0003.0048 * TERMINAL 1 Terminal failed
04-1-27 15:19:25
0004.0048 * TERMINAL 2 Terminal failed
04-1-27 15:19:25
0005.0048 * TERMINAL 4 Terminal failed
04-1-27 15:19:25
0006.0002 * GPL SYSTEM EOAM Card is not running approved GPL
04-1-27 15:19:25

```



```

0007.0176 * SECULOG 1116          Stdby security log -- upload required
           04-1-27 15:19:25
0008.0013 ** CARD 1103 VSCCP      Card is isolated from the system
           04-15-27 15:19:25
0009.0438 *C SYSTEM              Degraded Mode, Invalid OAM HW config
           04-1-27 15:19:27
0010.0331 *C SCCP SYSTEM          SCCP is not available
           04-1-27 15:19:25
Command Completed.
;

```

Legend**In the AL column:**

*—Minor Alarm

**—Major Alarm

*C—Critical Alarm

I—Inhibited Alarm

rept-stat-trm**Report Status Terminal**

Use this command to display the status of the terminal ports. The device primary, secondary, and associated state information is displayed along with the terminal identification number.

Keyword: **rept-stat-trm****Related Commands:** **act-echo, alw-trm, chg-trm, dact-echo, inh-trm, rmv-trm, rst-trm, rtrv-trm****Command Class:** System Maintenance**Parameters****:trm=** (optional)

The terminal ID. The ID of the terminal port that is to be reported.

Range: **1-40****Default:** Display status of all terminal ports**Example****rept-stat-trm****rept-stat-trm:trm=5****rept-stat-trm:trm=17****Dependencies**No other **rept-stat-xxx** command can be in progress when this command is entered.**Notes**

None

Output

The following example shows output when the IP User Interface is not turned on:

rept-stat-trm

```
tekelecstp 03-03-31 13:02:16 EST EAGLE 30.0.0
TRM  PST      SST      AST
1    IS-NR     Active    -----
2    IS-NR     Active    -----
3    IS-NR     Active    -----
4    IS-NR     Active    -----
5    IS-NR     Active    -----
6    IS-NR     Active    -----
7    IS-NR     Active    -----
8    IS-NR     Active    -----
9    IS-NR     Active    -----
10   IS-NR     Active    -----
11   IS-NR     Active    -----
12   IS-NR     Active    -----
13   IS-NR     Active    -----
14   IS-NR     Active    -----
15   IS-NR     Active    -----
16   IS-NR     Active    -----
Command Completed.
```

;

The following example shows output when the IP User Interface is turned on and 3 IPSM cards are in the system:

rept-stat-trm

```
rlghncxa03w 04-01-07 09:50:17 EST EAGLE 31.3.0
TRM  PST      SST      AST
1    IS-NR     Active    -----
2    IS-NR     Active    -----
3    IS-NR     Active    ALMINH
4    IS-NR     Active    -----
5    OOS-MT-DSBLD Manual    -----
6    IS-NR     Active    -----
7    IS-NR     Active    -----
8    IS-NR     Active    -----
9    IS-NR     Active    -----
10   IS-NR     Active    -----
11   IS-NR     Active    ALMINH
12   IS-NR     Active    -----
13   IS-NR     Active    -----
14   OOS-MT     Fault     -----
15   IS-NR     Active    -----
16   IS-NR     Active    -----
17   IS-NR     Active    -----
18   IS-NR     Active    -----
19   IS-NR     Active    -----
20   OOS-MT-DSBLD Manual    -----
21   IS-NR     Idle      -----
22   IS-NR     Idle      -----
23   IS-NR     Idle      -----
24   IS-NR     Idle      -----
25   IS-NR     Active    -----
26   IS-NR     Active    -----
27   IS-NR     Active    -----
28   IS-NR     Active    -----
29   IS-NR     Active    -----
30   IS-NR     Active    -----
31   IS-NR     Active    -----
32   IS-NR     Active    -----
```

```

33    IS-NR      Active      -----
34    IS-NR      Active      -----
35    IS-NR      Active      -----
36    IS-NR      Active      -----
37    IS-NR      Active      -----
38    IS-NR      Active      -----
39    IS-NR      Active      -----
40    IS-NR      Active      -----
Command Completed.
;

rept-stat-trm:trm=5
rlghncxa03w 04-01-07 09:50:17 EST  EAGLE 31.3.0
TRM  PST          SST          AST
5    IS-NR      Active      -----
Command Completed.
;

```

Legend

TRM—The ID of the terminal port.

PST—The primary state of the terminal ports. The possible values are described in "Possible Values for PST/SST/AST".

SST—The secondary state of the terminal ports. The possible values are described in "Possible Values for PST/SST/AST".

AST—The associated state of the terminal ports. The possible values are described in .

rept-stat-tstslk**Report Signaling Link Test Status**

Use this command to generate a report of the status of the MTP signaling links currently under test.

Keyword: **rept-stat-tstslk**

Related Commands: **tst-slks**

Command Class: Link Maintenance

Parameters

:link= (optional)

SS7 signaling links. The SS7 signaling link that is being tested.

Synonym: **port**

Range: **a, b, a1-a31, b1-b31**

Not all card types support all **link** parameter values.

See "Summary of Range Values for :link Parameter" for valid **link** parameter range values for each type of card that can have assigned signaling links.

:loc= (optional)

The card location as stenciled on the shelf of the system.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

:loopback= (optional)

Loopback test type.

Range: **sltc, lxvr, oam, line, payload**

Example

```
rept-stat-tstslk
rept-stat-tstslk:loc=1201
rept-stat-tstslk:loc=1203:link=a
rept-stat-tstslk:loopback=lxvr
```

Dependencies

The card location specified in the **loc** parameter must be equipped.

The signaling link specified in the **link** parameter must be equipped.

If the **link** parameter is specified, the **loc** parameter must be specified.

The signaling link specified in the **link** parameter must be an SS7 signaling link.

This command cannot be entered for SSEDCM or E5-ENET cards that are running the **ss7ipgw**, **ipgwi**, or **ipsg** application, or that have SS7IPGW, IPGWI, or IPSG-M3UA links.

This command cannot be entered for cards with **ipgwi** signaling links.

The card location specified in the **loc** parameter cannot be reserved by the system.

This command cannot be entered during upgrade.

Notes

None

Output

If no parameters are specified, all links in test are displayed.

If only the **loc** parameter is specified, all links in test on the specified card are displayed.

If the **loc** and **link** parameters are specified, the specified link on the specified card is displayed.

If the **loopback** parameter is specified, all links in the specified type of loopback test are displayed.

rept-stat-tstslk

```
tekelecstp 04-01-07 10:05:28 EST EAGLE 31.3.0
SLK      LOOPBACK  MAX-TIME  TEST-TIME
1102,A1   SLTC      01:00:00  00:04:01
1201,A     OAM       02:00:00  01:04:11
1203,A     LXVR      00:50:00  00:22:21
1203,B     LXVR      24:00:00  20:04:01
1208,A     PAYLOAD   01:10:00  01:05:22
1211,A     LINE      21:30:00  00:14:01
;
```

Legend

SLK—Card and signaling link that are being tested.

LOOPBACK—Type of loopback test being run.

MAX-TIME—Maximum length of time for the test to run, as specified in the **tst-slk** command **time** parameter.

TEST-TIME—The length of time that the test has been running when this command was entered.

rept-stat-user**Report Status User**

Use this command to show which users are logged into the system. The command shows user names, terminal identification numbers, the time that the last valid command was issued, and the current state of the last command entered.

Keyword: rept-stat-user

Related Commands: act-user, chg-pid, chg-user, dact-user, dlt-user, ent-user, login, logout, rtrv-secu-user, rtrv-user

Command Class: Basic

Parameters

This command has no parameters.

Example

rept-stat-user

Dependencies

None

Notes

None

Output

rept-stat-user

```
rlghncxa03w 04-01-07 09:12:15 EST EAGLE 31.3.0
REPT-STAT-USER COMPLTD
USER ID      TERM#  IDLE SINCE      COMMAND      STATE
frodo        3    04-01-07 08:12:23  rept-stat-card  IDLE
jethro       5    04-01-07 09:15:14  rtrv-bip      IDLE
obadiah      7    04-01-07 10:06:22  rept-stat-user PROCESSING
;
```

Legend

USER ID—The user ID of the users logged onto the system.

TERM #—The OAP terminal that the user's terminal is connected to.

IDLE SINCE—The date and time of day that the user last entered a command.

COMMAND—The last command the user entered.

STATE—The state of the command the user last entered.

rept-stat-xlist**Report Status X-List Storage Area Statistics**

Use this command to report statistics related to the storage of x-list entries. X-list entries reside in the routing table and are dynamically created for individual members of clusters whenever one or more routes to that cluster member become more restrictive than the corresponding routes to the cluster.

The following information is reported:

- The number of routing table positions reserved for x-list entries
- The current number of x-list entries

- The percentage of space in the x-list reserved area currently in use
- The percentage of x-list space that must be in use before an alarm is issued

Keyword: `rept-stat-xlist`

Related Commands: `chg-stpopts`, `rept-stat-cluster`, `rtrv-stpopts`

Command Class: System Maintenance

Parameters

This command has no parameters.

Example

`rept-stat-xlist`

Dependencies

The Cluster Routing and Management Diversity (CRMD) feature must be turned on before using this command.

Notes

The statistics reported by this command are those gathered during periodic polling by the maintenance subsystem. They might differ slightly from the instantaneous values at the time the command was issued.

The following rules are used to compute the *Current X-LIST occupancy* percentage value that is displayed in the output report:

- The percentage value that is displayed is computed as follows:

$$[(\text{current x-list entries}) / (\text{allocated x-list space})] * 100$$
- Non-integer percentages will be rounded up to the next highest integer (for example, 23.5% becomes 24%), with the exception of the situation described in the next rule.
- 100% is not displayed until the current *X-LIST* entries value exactly equals the allocated *X-LIST* space (for example, 99.1% is not rounded up to 100%).

Output

`rept-stat-xlist`

```
rlghncxa03w 04-02-18 03:32:42 EST   EAGLE 31.3.0
Allocated X-LIST space      = 500
Current X-LIST entries      = 156
Current X-LIST occupancy    = 31 %(see "Notes")
X-LIST occupancy threshold = 80 %
;
```

rept-x25-meas

Report X.25 Measurements

Use this command to display the X.25 signaling link measurements. The X.25 signaling link is used in cellular networks to transport TCAP signaling messages from one mobile switching center (MSC) to another.

Keyword: `rept-x25-meas`

Related Commands: `rept-stat-alm`, `rept-stat-dstn`, `rept-stat-imt`, `rept-stat-ls`, `rept-stat-slk`, `rept-stat-sys`, `rept-stat-trbl`

Command Class: Link Maintenance

Parameters

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

(Refer to the *Installation Manual – EAGLE 5 ISS* for card location information.)

:action= (optional)

This parameter is used to reset the measurements counters for an X25 link.

Range: reset, none

Default: none

:port= (optional)

The port on the card specified in the **loc** parameter

Range: a

Example

```
rept-x25-meas:loc=1211:port=a
```

```
rept-x25-meas:loc=1211:port=a:action=reset
```

Dependencies

No other action command can be in progress when this command is entered.

The specified signaling link must be equipped and assigned to a LIM configured with the ss7gx25 GPL.

The card location cannot be out of range - **loc**.

Location invalid for hardware configuration.

The card type must be valid.

The specified location of the card is not valid.

The card must be in service.

Notes

None

Output**rept-x25-meas: loc=1211:port=a**

```
rlghncxa03w 04-02-18 03:32:42 EST EAGLE 31.3.0
X.25 MEASUREMENTS REPORT: CARD LOC: 1211; PORT:A
Time counters were last reset: 04-02-18; 02:32:78
```

Link counts:

```
Hardware errors = 0      CRC Errors= 150   Inits= 3
```

Level 2 counts:

```
Total recvd = 168321    FRMR recvd = 1   DISC recvd = 0
Total xmit = 171002     Re-xmit = 15000
```

Level 3 counts:

```
Total recvd = 101218    RESTART recvd = 5   DIAG/INT/REG recvd = 0
Total xmit = 122381     Re-xmit = 50   Discarded = 0
```

Logical Channel Status & Counts:

```
#SVC defined = 80      #SVC in use = 72   SVCs all in use =10
#PVC defined = 40      #PVC in use = 40
```

Number of times SVC Control Timers have expired:

```
T1 = 0   T2 = 0   T4 = 2   T5 = 0   T6 = 0   T7 = 0   T8 = 100
Command Completed.
```

;

Legend**Link Counts**

HARDWARE ERRORS—The number of signaling link hardware errors.

CRC ERRORS—The number of signaling link CRC errors.

INITS—The number of signaling link initializations.

Level 2 Counts

TOTAL RECVD—The total number of frames received.

FRMR RECVD—The number of frame reject frames received.

DISC RECVD—The number of disconnect frames received.

TOTAL XMIT—The total number of frames transmitted.

RE-XMIT—The number of frames re-transmitted.

Level 3 Counts

TOTAL RECVD—The total number of packets received.

RESTART RECVD—The number of restarts received.

DIAG/INT/REJ RECVD—The number of diagnostic, interrupt, or reject packets received.

TOTAL XMIT—The total number of packets transmitted.

RE-XMIT—The number of packets retransmitted.

DISCARDED—The number of messages discarded because the transmit queue is full.

Logical Channel Status and Counts

#SVC DEFINED—The total number of switched virtual circuits (SVCs).

#SVC IN USE—The number of SVCs being used.

SVCs ALL IN USE—The number of times that all SVCs have been in use.

#PVC DEFINED—The total number of permanent virtual circuits (PVCs).

#PVC IN USE—The number of PVCs being used.

Number of times SVC control timers have expired

T1—SVC control timer T1

T2—SVC control timer T2

T4—SVC control timer T4

T5—SVC control timer T5

T6—SVC control timer T6

T7—SVC control timer T7

T8—SVC control timer T8

rls-alm

Release Alarm

Use this command to silence audible alarms. Entering this command also causes the alarm status on terminals to stop blinking (though they continue showing an alarm condition).

Keyword: **rls-alm**

Related Commands: **act-alm-trns**, **dact-alm-trns**, **rept-stat-alm**, **rept-stat-clk**, **rept-stat-trbl**, **rtrv-obit**, **rtrv-trbl**

Command Class: System Maintenance

Parameters

:lvl= (optional)

The alarm level

Range: **crit**, **majr**, **minor**

Default: All alarms are cleared

Example

```
rls-alm
```

```
rls-alm : lvl = crit
```

Dependencies

No other action command can be in progress when this command is entered.

Notes

This command has no effect on visual alarm indicators on the fuse and alarm panel (FAP) or on the cabinet side panel.

Any alarms that occur after the execution of this command activate audible alarms again.

Output

```
rls-alm
```

```
rlghncxa03w 04-01-07 09:27:24 EST EAGLE 31.3.0
```

```
rls-alm
```

```
Command entered at terminal #8.
```

```
;
```

rmv-card**Remove Card**

Use this command to change the state of the card to Out of Service - Maintenance Disabled (OOS-MT-DSBLD), enabling a technician to test a LIM, TSM, or ACM, or physically remove it from the shelf.

Keyword: **rmv-card**

Related Commands: **dlt-card, ent-card, init-card, rept-stat-card, rst-card, rtrv-card**

Command Class: System Maintenance

Parameters

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

Refer to the *Installation Manual – EAGLE 5 ISS* for card location information.

:force= (optional)

This parameter is required if the card is the last GLS or SCCP card.

Range: **yes, no**

Default: **no**

Example

rmv-card : loc=1101

rmv-card : loc=1201 : force=yes

Dependencies

The following card locations are not valid for this command: 1113, 1114, 1115, 1116, 1117, 1118, and all xy09 and xy10 locations (where x is the frame and y is the shelf).

The shelf and card must be equipped.

If the card is a LIM, all signaling links assigned to the card must be placed out of service before the command can be entered.

The **force** parameter is required to force the last GLS or SCCP out of service.

If the card is an ACM, all TCP/IP data links assigned to it must be placed out of service.

Notes

The function of this command is the same as the **inh-card** command.

When this command is executed, the card boots and enters the OOS-MT-DSBLD state. It has no affect if the card is already OOS-MT-DSBLD.

The command is rejected if you attempt to inhibit a LIM that has active signaling links. The links must be cancelled, using the **dact-slk** command, before the command is accepted.

Inhibiting an TSM running the SCCP application affects GTT service. SCCP messages requiring global title translation are not routed, and an error message is returned to the originator.

Inhibiting an TSM running the GLS application has no immediate affect on the system. These cards are used only when loading gateway screening to the LIMs.

The command is rejected if you attempt to inhibit an ACM that has active TCP/IP data links. The TCP/IP data links must be cancelled, using the **canc-dlk** command, before the command is accepted.

Output

```
rmv-card: loc=1101
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
Card has been inhibited.
;
```

rmv-imt

Remove IMT

The interprocessor message transport bus (IMT bus) is the main communications artery between all subsystems in the system. Use this command to remove the IMT bus from service.



CAUTION: Use this command only when directed by Tekelec Technical Services at (888) FOR-TKLC.

Keyword: **rmv-imt**

Related Commands: **clr-imt-stats**, **conn-imt**, **disc-imt**, **rept-imt-lvl1**, **rept-imt-lvl2**, **rept-stat-imt**, **rst-imt**

Command Class: System Maintenance

Parameters

:bus= (mandatory)
The IMT bus to be inhibited.
Range: a, b

Example

```
rmv-imt: bus=a
```

Dependencies

The alternate IMT bus must be in-service normal (IS-NR) in order for the specified bus to be inhibited.
This command cannot be entered during an IMT Fault Isolation Test.

Notes

Cards that are not connected to the other IMT bus will reinitialize.
All traffic is rerouted to the other IMT bus.
The function of this command is the same as the **inh-imt** command.

Output**rmv-imt:bus=a**

```

rlghncxa03w 04-01-07 09:22:31 EST EAGLE 31.3.0
* 0014.0203 * SLK 1205,A nc00027 slk not aligned

rlghncxa03w 04-01-07 09:22:31 EST EAGLE 31.3.0
Inhibit IMT Bus A command issued

rlghncxa03w 04-01-07 09:22:31 EST EAGLE 31.3.0
* 00120.1203 * SLK 1205,B nc00027 slk not aligned

rlghncxa21w 04-01-07 09:22:31 EST EAGLE 31.3.0
0016.0096 CARD 1205 SS7ANSI card has been reloaded

rlghncxa21w 04-01-07 09:22:31 EST EAGLE 31.3.0
0017.0236 SLK 1205,A nc00027 slk is attempting to align

rlghncxa21w 04-01-07 09:22:31 EST EAGLE 31.3.0
0018.0236 SLK 1205,B nc00027 slk is attempting to align

rlghncxa21w 04-01-07 09:22:32 est EAGLE 31.3.0
0019.0098 imt bus a imt inhibited

rlghncxa21w 04-01-07 09:22:32 est EAGLE 31.3.0
* 0020.0107 * imt bus a minor imt failure detected

rlghncxa21w 04-01-07 09:22:32 EST EAGLE 31.3.0
** 0021.0108 ** IMT BUS A major imt failure detected

rlghncxa21w 04-01-07 09:22:33 EST EAGLE 31.3.0
0022.0026 CARD 1205 SS7ANSI clocks a and b for card normal
;

```

rmv-trm**Remove Terminal**

Use this command to set the primary state of a serial port to OOS-MT-DSBLD (OUT-OF-SERVICE-MAINTENANCE-DISABLED), and to set the secondary state to MANUAL. The serial port is not available to perform service functions. There is no outgoing traffic from the serial port; all incoming traffic is ignored.

Keyword: **rmv-trm**

Related Commands: **act-echo, alw-trm, canc-echo, chg-trm, dact-echo, inh-trm, rept-stat-trm, rst-trm, rtrv-trm**

Command Class: System Maintenance

Parameters

:trm= (mandatory)

The ID of the serial port to be inhibited.

Range: **1-40**

:force= (optional)

This parameter forces the removal of the terminal, even if it is the last in-service OAP terminal or last in-service SEAS terminal available.

Range: **yes, no**

Default: **no**

Example

rmv-trm:port=5

rmv-trm:trm=1:force=yes

Dependencies

No other action command can be in progress when this command is entered.

The IP User Interface feature must be enabled before terminal ports 17 through 40 can be specified in the **trm** parameter.

The terminal specified by the **trm** parameter must be equipped.

To inhibit the last in-service OAP terminal, the **force=yes** parameter must be specified.

You cannot inhibit the terminal from which this command was entered.

The **force=yes** parameter must be specified to inhibit the last in-service SEAS terminal.

Notes

When removing a terminal that has already been removed, a warning message is echoed to the scroll area but no action is taken.

Output

```
rmv-trm
  rlghncxa03w 04-01-07 11:11:28 EST  EAGLE 31.3.0
  Inhibit message sent to terminal
;
rmv-trm:trm=17:force=yes
  tekelecstp 07-01-11 13:42:16 EST  EAGLE 37.5.0
  Inhibit message sent to terminal
;
```

rst-card

Reset Card

Use this command to change the card from OOS-MT-DSBLD (Out-of-Service-Maintenance-Disabled) to IS-NR (In-Service-Normal) if the loading is successful. If the loading fails, the card status is OOS-MT (Out-of-Service-Maintenance).

Keyword: **rst-card**

Related Commands: **dlt-card, ent-card, init-card, rept-stat-card, rmv-card, rtrv-card**

Command Class: System Maintenance

Parameters

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

:code= (optional)

The GPL type to be loaded.

Range: **appr, trial, utility**

appr — Approved GPL

trial — Trial GPL

utility — Utility GPL, used primarily by the factory for loading special GPLs for testing purposes

Default: No GPL type is given.

Example

```
rst-card:loc=2301:code=trial
rst-card:loc=1101:data=persist
```

Dependencies

The following card locations are not valid for this command: 1113, 1114, 1115, 1116, 1117, 1118, and all xy09 and xy10 locations (where *x* is the frame and *y* is the shelf).

The shelf and card must be equipped.

If the card is a LIM, it must have a signaling link assigned to it before it can be allowed.

No other action command can be in progress when this command is entered.

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before the **data** parameter can be specified.

Notes

The function of this command is the same as the **alw-card** command.

The *Installation Manual – EAGLE 5 ISS* provides an illustration of card locations.

The system previously supported the **data** parameter for reloading GTT data. The system does not support persistent GTT data loading, and the **data** parameter is now used in support of the warm restart feature.

When the OA&M IP Security feature is turned on, and an IPSM card is inserted and initialized for the first time or is removed, inserted, and initialized again, the "SSH Host Keys Regenerated" UIM is displayed. The UIM shows the generated SSH Host Key fingerprint that must be provided at the secure client in order for secure information transfer to occur. The SSH Host Key fingerprint is changed whenever power is lost and restored to an IPSM card.

```
rlghncxa03 03-07-11 07:05:00 EST EAGLE 30.2.0 0021.1493 CARD 1111 INFO
SSH Host Keys Regenerated DSA Server Host Key FTRA-formatted Fingerprint=
84 7c 92 8b c 7c ds 19 1c 6 4b de 5c 8f c5 4d Report Date:03-07-11 Time:
22:27:36
```

When the OA&M IP Security feature is turned on, and an IPSM card is restarted with this command, the "SSH Host Keys Loaded" UIM is displayed. The UIM shows the current SSH Host Key fingerprint. The SSH Host Key fingerprint is not changed if the IPSM card does not lose power.

```
rlghncxa03 03-07-11 07:05:00 EST EAGLE 30.2.0 0021.1493 CARD 1111 INFO
SSH Host Keys Loaded DSA Server Host Key FTRA-formatted Fingerprint= 84
7c 92 8b c 7c ds 19 1c 6 4b de 5c 8f c5 4d Report Date:03-07-11 Time:
22:27:36
```

Output

```
rst-card:loc=2301:code=trial
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
Card has been allowed.
;
```

rst-dstn**Reset Destination Circular Routing Status**

Use this command to request that the circular routing status for the specified destination be reset (turned OFF). The destination that is specified can be a full point code (FPC), a cluster point code (for example, *ni-nc-**), or an x-list point code. The system clears the circular routing status for the specified destination and then clears any outstanding circular routing alarm for the destination.

NOTE: This command does not support 24-bit ITU national point codes.

Keyword: rst-dstn

Related Commands: chg-stpopts, rept-stat-cluster, rept-stat-dstn, rtrv-stpopts

Command Class: System Maintenance

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:dpc= (mandatory)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: dpca

Range: p-, 000-255, *

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

The asterisk value (*) is not valid for the *ni* subfield.

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001–005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006–255.

The point code 000-000-000 is not a valid point code.

Example

rst-dstn:dpc=1-2-*

rst-dstn:dpc=20-2-5

rst-dstn:dpc=p-20-2-5

Dependencies

The specified DPC must be either provisioned or an x-list entry.

The destination address must be a full point code or a cluster point code specified as *ni-nc-**. A DPC as *ni-nc-*** or *ni-nc-**** cannot be specified for the **rst-dstn** command.

Notes

In this command, the point codes support only the private (internal) point code subtype prefix (p-).

Output

rst-dstn:dpc=1-2-*

```
rlghncxa03w 04-01-05 06:52:20 EST EAGLE 31.3.0
Destination reset command sent to SNM (scroll area)
```

```
rlghncxa03w 04-01-05 06:52:20 EST EAGLE 31.3.0
Command Completed.
```

;

rst-dstn:dpc=20-2-5

```
rlghncxa03w 04-02-29 16:40:40 EST EAGLE 31.3.0
Destination reset command sent to SNM (scroll area)
```

```
rlghncxa03w 04-01-05 16:40:40 EST EAGLE 31.3.0
Command Completed.
```

;

rst-imt**Reset IMT**

The interprocessor message transport bus (IMT bus) is the main communications artery between all subsystems in the system. Use this command to change the state of the specified IMT bus from OOS-MT-DSBLD (out of service maintenance disabled) to IS-NR (in service normal), if the command is successful. If the command fails, the status is IS-ANR (in service abnormal).

Keyword: **rst-imt**

Related Commands: **clr-imt-stats**, **conn-imt**, **disc-imt**, **rept-imt-lvl1**, **rept-imt-lvl2**, **rept-stat-imt**, **rmv-imt**

Command Class: System Maintenance

Parameters

:bus= (mandatory)

The IMT bus to be returned to service.

Range: **a, b**

Example

```
rst-imt:bus=a
```

Dependencies

None

Notes

The function of this command is the same as the **alw-imt** command.

This command returns an inhibited IMT bus to service.

Output

```
rst-imt:bus=a
```

```
rlghncxa03w 04-01-07 11:02:30 EST  EAGLE 31.3.0
Allow IMT Bus A command issued.
```

```
rlghncxa03w 04-01-07 11:02:30 EST  EAGLE 31.3.0
0100.0097    IMT   BUS A           IMT allowed
```

```
;
```

rst-trm**Reset Terminal**

Use this command to return the specified serial port to the state IS-NR (in-service-normal) from the state OOS-MT-DSBLD (Out-of-Service-Maintenance-Disabled) if the command is successful. If the command is not successful, the terminal's state is OOS-MT (Out-of-Service-Maintenance).

Keyword: **rst-trm**

Related Commands: **act-echo**, **alw-trm**, **canc-echo**, **chg-trm**, **dact-echo**, **inh-trm**, **rept-stat-trm**, **rmv-trm**, **rtrv-trm**

Command Class: System Maintenance

Parameters

:trm= (mandatory)

ID of the serial port to be put into service.

Range: **1-40**

Example

```
rst-trm:trm=5
```


Dependencies

No other action command can be in progress when this command is entered.

The IP User Interface feature must be enabled before terminal ports 17 through 40 can be specified in the **trm** parameter.

The terminal specified by the **trm** parameter must be equipped.

Anyone logged in to the terminal specified by this command is logged off when this command is executed. For the user to continue working on the specified terminal, the user must log on to that terminal again.

An E5-IPSM card must be provisioned for the specified SEAS terminal before this command can be entered.

The SEAS Over IP feature must be turned on before this command can be entered for a SEAS terminal.

If the SEAS terminal is auto-inhibited, then this command cannot be entered.

Notes

The function of this command is the same as the **alw-trm** command.

When you attempt to return to service a terminal already in service, a warning message is echoed to the scroll area but no action is taken.

Output

```
rst-trm:trm=12
rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
Allow message sent to terminal

rlghncxa03w 04-01-07 11:11:28 EST EAGLE 31.3.0
1062.0046      TERMINAL      12      Terminal Enabled
;
```

rtrv-acg-mic

Display ACG Manually Initiated Control

Use this command to display the values of ACG controls assigned to certain queries. The control can apply to all queries or to specific query services and called party digits. A set of controls is selected to be displayed by specifying the type of controls (**type** parameter), the service (**serv** parameter), and the digits (**dgts** parameter).

Keyword: **rtrv-acg-mic**

Related Commands: **chg-acg-mic**, **dlt-acg-mic**, **ent-acg-mic**, **rept-stat-lnp**

Command Class: Database Administration

Parameters

:dgts= (optional)

Digits

Range: 3 digits, 6-10 digits

Valid values are **000-999**, **000000-9999999999**

:serv= (optional)

Query service

Range: **ain**, **in**

:type= (optional)

Type of control

Range: **all**, **sd**

Example

Display all MICs:

rtrv-acg-mic

Display the MIC(s) that apply to particular services and digits:

rtrv-acg-mic:type=sd

Display the MIC(s) that apply to AIN queries:

rtrv-acg-mic:serv=ain

Display the MIC(s) that apply to IN queries for 919-460-xxxx:

rtrv-acg-mic:serv=in:dgts=919460

Dependencies

If the **type=all** parameter is specified, optional parameters **serv** and **dgts** cannot be specified.

The **dgts** parameter value must be specified as 3 digits or 6-10 digits.

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before the **rtrv-acg-mic** command can be entered.

Notes

None

Output

rtrv-acg-mic:type=sd

```
rlghncxa03w 04-01-28 08:50:12 EST EAGLE 31.3.0
```

```
TYPE=ALL
```

```
ND INTVL AINTVL DRTN
```

```
6 4 7 8
```

```
TYPE=SD
```

```
DGTS SERV INTVL AINTVL DRTN
```

```
704461 AIN - 8 7
```

```
919460 IN 6 - 7
```

```
9194602132 AIN - 7 8
```

```
9194602132 IN 4 - 8
```

```
919461 IN 6 - 7
```

```
ACG MIC table is (11 of 256) 4% full of type SD
```

```
RTRV-ACG-MIC: MASP A - COMPLTD
```

```
;
```

The following example shows how the memory space accounting command completion response is used for **type=all**:

rtrv-acg-mic:type=all

```
rlghncxa03w 04-01-28 08:50:12 EST EAGLE 31.3.0
```

```
TYPE=ALL
```

```
ND INTVL AINTVL DRTN
```

```
6 4 7 8
```

```
TYPE=SD
```

```
DGTS SERV INTVL AINTVL DRTN
```

```
919460 IN 6 - 7
```

```
9194602132 IN 4 - 8
```

```
ACG MIC table is (5 of 256) 2% full of type SD
```

```
RTRV-ACG-MIC: MASP A - COMPLTD
```

```
;
```

Legend

AINTVL—New AIN interval index

DGTS—Digits

DRTN—New duration index

INTVL—New IN interval index

ND—New number of digits

SERV—Query service

rtrv-acg-noc**Display ACG Node Overload Control**

Use this command to display the definitions of node overload levels. The definition is comprised of the threshold LNP query rates for node overload levels and the values for the Automatic Call Gappings (ACG) to be sent when at the overload level.

Keyword: **rtrv-acg-noc**

Related Commands: **chg-acg-noc, dlt-acg-noc, ent-acg-noc, rept-stat-lnp**

Command Class: Database Administration

Parameters

:lvl= (optional)
Overload level
Range: 1-10

Example

```
rtrv-acg-noc
rtrv-acg-noc:lvl=3
```

Dependencies

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before this command can be entered.

Notes

None

Output

The following example displays all defined overload levels:

```
rtrv-acg-noc
rlghncxa03w 04-01-28 08:50:12 EST EAGLE 31.3.0
LVL QR      AND  IND  INTVL  DRTN
3   600000    10   6    3      6
4   750000    6    6    5      7
10  2147483647 10   10   15     13
RTRV-ACG-NOC: MASP A - COMPLTD
;
```

The following example displays overload level 3:

```
rtrv-acg-noc:lvl=3
rlghncxa03w 04-01-28 08:50:12 EST EAGLE 31.3.0
LVL QR      AND  IND  INTVL  DRTN
3   600000    10   10   3      6
RTRV-ACG-NOC: MASP A - COMPLTD
;
```

Legend

LVL—Overload level

QR—Query rate

AND—AIN number of digits

IND—IN number of digits

INTVL—Interval index

DRTN—Duration index

rtrv-appl-rtkey**Retrieve Application Route Key Table**

Use this command to retrieve information from the Routing Key table. A routing key entry associates a routing key with up to 16 socket names with a limit of 2500 routing keys per system (if there are SSEDcMs).

- DPC, SI, SSN routing keys, which are used to route SCCP messages
- DPC, SI routing keys, which are used to route non-SCCP and non-ISUP messages
- DPC, SI, CIC routing keys, which are used to route ISUP messages

Keyword: rtrv-appl-rtkey

Related Commands: chg-appl-rtkey, dlt-appl-rtkey, ent-appl-rtkey

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

NOTE: The following parameters are no longer available: loc, mode, norm, pstncat, pstnid, sname

:asname= (optional)

Application Server (AS) name assigned to this routing key.

Range: ayyyyyyyyyyyyyy

Up to 15 alphanumeric characters; the first character must be a letter

:cice= (optional)

The end range of circuit identification codes assigned to the routing key.

Range: 0-4294967295

See Table A-4 for valid CIC values for specified SI and MSU types.

:cics= (optional)

The start range of circuit identification codes assigned to the routing key.

Range: 0-4294967295

See Table A-4 for valid CIC values for specified SI and MSU types.

:display= (optional)

This parameter specifies the type of output to display.

The output includes the type of card, the data collection being audited, and a message indicating the overall status. This parameter applies only to STP databases.

Range: all, brief

all — The KEY and the ATTRIBUTE sections of the routing key are displayed

brief — Only the KEY section of the routing key is displayed

Default: brief

:dpc= (optional)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member* (ni-nc-ncm).

Synonym: dpca

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001–005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006–255.

The point code 000-000-000 is not a valid point code.

:dpc/dpca/dpci/dpcn/dpcn24= (optional)

Destination point code.

:dpci= (optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

:dpcn= (optional)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: s-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:dpcn24= (optional)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

:num= (optional)

The number of entries to display.

Range: 1-10000

Default: 50

:opc= (optional)

ANSI originating point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Synonym: **opca**

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001–005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006–255**.

The point code **000-000-000** is not a valid point code.

:opc/opca/opci/opcn/opcn24= (optional)

Originating point code.

:opci= (optional)

ITU international originating point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*)

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:opcn= (optional)

ITU national originating point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:opcn24= (optional)

24-bit ITU national originating point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000–255**

ssa—**000–255**

sp—**000–255**

:rcontext= (optional)

Routing Context. The **rcontext** parameter is used to display the routing key with the specified routing context.

Range: **0-4294967295**

:si= (optional)

Service indicator.

Range: **0-15**

The following equivalent text values can be specified:

Number = Text—Description

0 = snm—Signaling network management messages

1 = regtest—Signaling network testing and maintenance regular

2 = spltest—Signaling network testing and maintenance special

3 = sccp—SCCP

4 = tup—Telephone user part

5 = isup—ISDN user part

13 = qbicc

:ssn= (optional)

Subsystem number.

Range: **0-255**

:type= (optional)

The type of routing key.

Range: **all, full, partial, default**

Default: **all**

Example

```
rtrv-appl-rtkey
rtrv-appl-rtkey:dpc=123-234-255:si=3
rtrv-appl-rtkey:dpc=123-234-255
rtrv-appl-rtkey:cics=1:cice=1000:num=3
rtrv-appl-rtkey:cice=19
rtrv-appl-rtkey:opc=122-124-125
rtrv-appl-rtkey:type=partial
rtrv-appl-rtkey:display=all
rtrv-appl-rtkey:rcontext=7
```

Dependencies

The **ssn** parameter is valid only when the **si=3** (or **sccp**) parameter is specified. If the **si=3** (or **sccp**) parameter is not specified, the **ssn** parameter cannot be specified.

The value specified for the starting circuit identification code (**cics**) must be less than or equal to the value entered for the ending circuit identification code (**cice**).

A circuit identification code range (**cics** to **cice**) that overlaps an existing routing key cannot be specified.

The **ssn** parameter cannot be specified when **opc**, **cics**, and **cice** are specified. See Table 5-5 for valid parameter combinations.

When the DPC is ANSI and the **si=4** parameter is specified, a DPC/SI routing key must be specified (TUP is used only in an ITU network).

The **opc**, **cics**, and **cice** parameters are allowed with the **si** parameter only when **si** equals **4**, **5**, or **13** (or **tup**, **isup**, or **qbicc**). Table A-4 shows valid CIC values for SI types 4, 5, and 13.

Table A-4 shows valid CIC values for SI types 4, 5, and 13.

The following types of partial routing keys are supported:

- The following types of partial routing keys are supported:
- DPC/SI/OPC (ignore CIC) can be used as a partial match key for CIC- based traffic.
- DPC/SI (ignore all other fields) can be used as a partial match key for CIC- based traffic or SCCP traffic.
- DPC only (ignore all other fields) can be used as a partial match for any type of traffic.
- SI only (ignore all other fields) can be used as a partial match for any type of traffic.

Notes

This command can be canceled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

Static routing keys are stored on disk and a copy of the table is loaded to each SS7IPGW card.

Group codes are required for ITU-N point codes (DPCN/OPCN) when the Duplicate Point Code feature is turned on.

The **display=all** parameter must be specified to display the assigned routing context value for the routing key.

In this command, the point codes support only the spare point code subtype prefix (**s-**).

Output

rtrv-appl-rtkey

rlghncxa03w 08-04-11 13:17:09 EST EAGLE 38.0.0

RCONTEXT	DPC	SI	ADPTR	ASNAME	TYPE
-----	008-008-008	*	M3UA	as5	PARTIAL
-----	002-002-002	10	M3UA	as2	FULL
-----	001-001-001	*	M3UA	as11	PARTIAL
-----	001-001-001	10	M3UA	as11	FULL
-----	001-001-001	3	M3UA	as12	FULL
-----	002-002-002	9	M3UA	as14	FULL
10	002-002-002	*	M3UA	as8	PARTIAL

RCONTEXT	DPCI	SI	ADPTR	ASNAME	TYPE
-----	7-007-7	*	M3UA	as14	PARTIAL
-----	7-007-7	4	M3UA	as15	FULL

RCONTEXT	DPC	SI	ADPTR	ASNAME	TYPE
-----	*****	**	M3UA	as1	DEFAULT
-----	*****	10	M3UA	as12	PARTIAL

Route Key table is (11 of 1000) 1% full

Route Key Socket Association table is (11 of 16000) 1% full

END OF LOG REPORT

;

rtrv-appl-rtkey:asname=as11

rlghncxa03w 08-04-11 14:05:46 EST EAGLE 38.0.0

RCONTEXT	DPC	SI	ADPTR	ASNAME	TYPE
-----	001-001-001	*	M3UA	as11	PARTIAL
-----	001-001-001	10	M3UA	as11	FULL

Route Key table is (10 of 1000) 1% full

Route Key Socket Association table is (10 of 16000) 1% full

END OF LOG REPORT

;

The following example shows a routing key with routing context that is assigned to an SUA Application Server and a routing key with routing context that is assigned to an M3UA Application Server.

rtrv-appl-rtkey:display=all

rlghncxa03w 08-04-11 14:13:46 EST EAGLE 38.0.0

RCONTEXT	DPC	SI	SSN	OPC	CICS	CICE
-----	008-008-008	**	***	*****	*****	*****

ADPTR	TYPE	ASNAME
M3UA	PARTIAL	as5

ANAMES
assoc5

RCONTEXT	DPC	SI	SSN	OPC	CICS	CICE
20	002-002-002	3	***	-----	-----	-----

ADPTR	TYPE	ASNAME
SUA	PARTIAL	as8

ANAMES

```
assoc8
```

```
Route Key table is (2 of 1000) 1% full
Route Key Socket Association table is (2 of 16000) 1% full
```

```
END OF LOG REPORT
```

```
;
```

The following example shows output when the 2500 Routing Keys feature is enabled. The maximum number of routing keys allowed in the system is 2500. The maximum number of entries in the Static Route Key Socket Association table is 40,000.

rtrv-appl-rtkey

```
rlghncxa03w 08-04-11 14:03:05 EST EAGLE 38.0.0
```

RCONTEXT	DPC	SI	ADPTR	ASNAME	TYPE
-----	008-008-008	*	M3UA	as5	PARTIAL
-----	002-002-002	10	M3UA	as2	FULL
-----	001-001-001	*	M3UA	as11	PARTIAL
-----	001-001-001	10	M3UA	as11	FULL
-----	001-001-001	3	M3UA	as12	FULL
-----	002-002-002	9	M3UA	as14	FULL

RCONTEXT	DPCI	SI	ADPTR	ASNAME	TYPE
-----	7-007-7	*	M3UA	as14	PARTIAL
-----	7-007-7	4	M3UA	as15	FULL

RCONTEXT	DPC	SI	ADPTR	ASNAME	TYPE
-----	*****	**	M3UA	as1	DEFAULT
-----	*****	10	M3UA	as12	PARTIAL

```
Route Key table is (10 of 2500) 1% full
Route Key Socket Association table is (10 of 40000) 1% full
```

```
END OF LOG REPORT
```

```
;
```

rtrv-as

Retrieve Application Server

Use this command to retrieve the characteristics of one or all Application Servers from the AS table.

Keyword: rtrv-as

Related Commands: chg-as, dlt-as, ent-as, rept-stat-as

Command Class: Database Administration

Parameters

:aname= (optional)

Name of the association.

Range: ayyyyyyyyyyyyyy

Up to 15 alphanumeric characters; the first character must be a letter.

Default: Retrieve all

:asname= (optional)

Name of the Application Server.

Range: ayyyyyyyyyyyyyy

Up to 15 alphanumeric characters; the first character must be a letter.

Example

```
rtrv-as
```

```
rtrv-as:aname=as1
```


Default: Retrieve all

:link= (optional)

The signaling link for this association.

Range: **a, b, a1-a31, b1-b31**

Not all card types support all **link** parameter values.

See "Summary of Range Values for :link Parameter" for valid **link** parameter range values for each type of card that can have assigned signaling links.

:loc= (optional)

Card location that is stenciled on the shelf of the EAGLE 5 ISS..

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

:rhost= (optional)

Name of Remote Host as defined in the IP Host table.

Range: **XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX**

a-z, A-Z, 0-9, -, . (any string of characters beginning with a letter and comprising up to 60 characters in length)

Default: Retrieve all

Example

rtrv-assoc

rtrv-assoc:aname=swbel32

rtrv-assoc:lhost=gw105.nc.tekelec.com:adapter=sua

Dependencies

None

Notes

This command can be canceled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

The IPAPSOCK table is used to associate the Local Host/Local Port to a Remote Host/Remote Port.

When the command is entered with the **aname**, **lhost**, or **alhost** parameters, the output displays SCTP buffer usage information (used and total buffer space on the card).

Output

AS names are displayed for IPGWx-M3UA and SUA linksets.

LS names are displayed for IPSG linksets.

The following example with the **aname** parameter shows buffer usage (used and total buffer space) and card location information.

rtrv-assoc:aname=m3ua03

eagle10110 07-02-10 17:21:29 EST EAGLE 35.6.0

```

ANAME m3ua03
  LOC      1307          IPLNK PORT A          LINK      A
  ADAPTER  M3UA          VER          M3UA RFC
  LHOST    e1011001.1307a
  ALHOST    ---
  RHOST    e1011501.1307a
  LPORT    1309          RPORT      1309
  ISTRMS    2            OSTRMS     2          BUFSIZE    80
  RMODE     LIN          RMIN       140        RMAX       800
  RTIMES    10           CWMIN      9000       UAPS        10
  OPEN      YES          ALW        YES        RTXTHR    65535

  ASNAMES
  as01

```

IP Appl Sock/Assoc table is (7 of 4000) 1% full
 Assoc Buffer Space Used (320 KB of 3200 KB) on LOC = 1307

;

The following example with the **lhost** parameter shows buffer usage (used and total buffer space) and card location information.

rtrv-assoc:lhost=e1011501.1311a

eagle10115 06-03-27 09:52:33 EST EAGLE 35.0.0

```

ANAME ipl1311a
  LINK      A
  ADAPTER  M2PA          VER          M2PA RFC
  LHOST    e1011501.1311a
  ALHOST    ---
  RHOST    e1011001.1303a
  LPORT    1311          RPORT      1303
  ISTRMS    2            OSTRMS     2          BUFSIZE    200
  RMODE     LIN          RMIN       120        RMAX       800
  RTIMES    10           CWMIN      3000       M2PATSET   1
  OPEN      YES          ALW        YES

ANAME ipl1311b
  LINK      B
  ADAPTER  M2PA          VER          M2PA RFC
  LHOST    e1011501.1311a
  ALHOST    ---
  RHOST    e1011001.1303a
  LPORT    1312          RPORT      1312
  ISTRMS    2            OSTRMS     2          BUFSIZE    200
  RMODE     LIN          RMIN       120        RMAX       800
  RTIMES    10           CWMIN      3000       M2PATSET   1
  OPEN      YES          ALW        YES

```

IP Appl Sock/Assoc table is (10 of 4000) 1% full
 Assoc Buffer Space Used (400 KB of 1600 KB) on LOC = 1311

;

rtrv-assoc:display=brief or rtrv-assoc

0	1	2	3	4	5	6	7
1234567890123456789012345678901234567890123456789012345678901234567890123456789012345678							
			CARD	IPLNK			
ANAME	LOC	PORT	LINK	ADAPTER	LPORT	RPORT	OPEN ALW
a23456789012345	1305	A	A	M3UA	20000	30000	YES YES
b23456789012345	1305	B	A	M3UA	20001	30001	NO NO
c23456789012345	1307	A	A	SUA	20002	30002	YES YES
d23456789012345	1307	B	A	M3UA	20003	30003	NO NO
e23456789012345	1315	A	A	SUA	20004	30004	YES YES
f23456789012345	1315	A, B	A	M3UA	20005	30005	YES YES
g23456789012345	1317	B, A	A	SUA	20006	30006	YES YES
m2pa1105b3	1105	A	B3	M2PA	31105	31105	YES YES
m2pa1107a0	1107	A	--	M2PA	1107	1107	NO NO
m2pa1107a1	1107	A	--	M2PA	11107	11107	NO NO
m3ua1211a0	1211	A	A	M3UA	1211	1213	YES YES
m3ua1211a1	1211	A	**	M3UA	11211	11213	YES YES
m3ua1211a2	1211	A	B1	M3UA	21211	21213	YES YES
m3ua1211a3	1211	A	A3	M3UA	31211	31213	YES YES
m3ua1213a0	1213	A	A	M3UA	1213	1211	YES YES
m3ua1213a1	1213	A	A1	M3UA	11213	11211	YES YES
m3ua1213a2	1213	A	A2	M3UA	21213	21211	YES YES
m3ua1213a3	1213	A	A3	M3UA	31213	31211	YES YES
ipg1215a01	1215	A	**	M3UA	11215	1111	YES YES
ipg1215a02	1215	A	**	M3UA	11215	1112	YES YES
ipg1215a03	1215	A	--	M3UA	11215	1113	NO NO
ipg1215a04	1215	A	--	M3UA	11215	1114	NO NO
ipg1215a05	1215	A	--	M3UA	11215	1115	NO NO
ipg1215a06	1215	A	--	M3UA	11215	1116	NO NO

IP Appl Sock/Assoc table is (24 of 4000) 1% full

;

rtrv-assoc:loc=1305:display=all

0	1	2	3	4	5	6	7
1234567890123456789012345678901234567890123456789012345678901234567890123456789012345678							
ANAME ipg1305a1							
LOC	1305		IPLNK	PORT	A, B	LINK	A
ADAPTER	M3UA		VER		M3UA RFC		
LHOST	e1001501.1105a						
ALHOST	---						
RHOST	labsun10215p0						
LPORT	2000		RPORT	2000			
ISTRMS	2		OSTRMS	2			
RMODE	LIN		RMIN	120		RMAX	800
RTIMES	10		CWMIN	3000		UAPS	10
OPEN	NO		ALW	NO			
ANAME ipg1305a2							
LOC	1305		IPLNK	PORT	A	LINK	A
ADAPTER	SUA		VER		SUA RFC		
LHOST	e1001501.1105a						
ALHOST	---						
RHOST	labsun10215p0						
LPORT	4000		RPORT	4000			
ISTRMS	2		OSTRMS	2			
RMODE	LIN		RMIN	120		RMAX	800
RTIMES	10		CWMIN	3000		UAPS	10
OPEN	NO		ALW	NO			

The following is an example of a report with the **aname** parameter specified:

rtrv-assoc:aname=ipg1105a1

ANAME ipg1105a1							
LOC	1105		IPLNK	PORT	A	LINK	A

```

ADAPTER  M3UA          VER          M3UA RFC
LHOST    e1001501.1101a
ALHOST   ---
RHOST    labsun10215p0
LPORT    2222          RPORT    2222
ISTRMS   2             OSTRMS   2
RMODE    LIN           RMIN     120          RMAX    800
RTIMES   10            CWMIN    3000         UAPS    10
OPEN     YES           ALW      YES

```

ASNAMES

```

xxxxxxxxxxxxx1  xxxxxxxxxxxxxxxx2  xxxxxxxxxxxxxxxx3
...
xxxxxxxxxxxxx46 xxxxxxxxxxxxxxxx47 xxxxxxxxxxxxxxxx48
xxxxxxxxxxxxx49 xxxxxxxxxxxxxxxx50

```

rtrv-assoc:display=all

eagle10110 08-03-10 17:21:29 EST EAGLE 38.0.0

ANAME ipl1301a

```

LINK      A
ADAPTER   M2PA          VER          M2PA DRAFT 6
LHOST     e1021201.1301a
ALHOST    ---
RHOST     e1021301.1301a
LPORT     1301          RPORT     1301
ISTRMS    2             OSTRMS    2
RMODE     LIN           RMIN      120          RMAX      800
RTIMES    10            CWMIN     3000         M2PATSET 1
OPEN      NO            ALW       NO
HBTIMER   30000

```

ANAME ipl1301b

```

LINK      B
ADAPTER   M2PA          VER          M2PA RFC
LHOST     e1021201.1301a
ALHOST    ---
RHOST     e1021301.1301a
LPORT     1302          RPORT     1302
ISTRMS    2             OSTRMS    2
RMODE     LIN           RMIN      120          RMAX      800
RTIMES    10            CWMIN     3000         M2PATSET 1
OPEN      YES           ALW       YES
HBTIMER   30000

```

ANAME ipg1305a1

```

LINK      A
ADAPTER   M3UA          VER          M3UA RFC
LHOST     e1021201.1307a
ALHOST    ---
RHOST     e1021301.1305a
LPORT     2050          RPORT     2050
ISTRMS    2             OSTRMS    2
RMODE     LIN           RMIN      120          RMAX      800
RTIMES    10            CWMIN     3000         UAPS      10
OPEN      NO            ALW       NO
HBTIMER   30000

```

ANAME ipg1307a1

```

LINK      A
ADAPTER   SUA           VER          SUA RFC
LHOST     e1021201.1307a
ALHOST    ---
RHOST     e1021301.1307a
LPORT     3050          RPORT     3050
ISTRMS    2             OSTRMS    2

```


RMODE	LIN	RMIN	120	RMAX	800
RTIMES	10	CWMIN	3000	UAPS	10
OPEN	NO	ALW	NO		
HBTIMER	30000				

IP Appl Sock/Assoc table is (4 of 4000) 1% full

;

rtrv-assoc:adapter=m2pa

rlghncxa03w 06-01-18 08:16:14 EST EAGLE 34.3.0

rtrv-assoc:adapter=m2pa

Command entered at terminal #4

ANAME ipl1301a

LINK	A				
ADAPTER	M2PA	VER	M2PA DRAFT 6		
LHOST	e1021201.1301a				
ALHOST	---				
RHOST	e1021301.1301a				
LPORT	1301	RPORT	1301		
ISTRMS	2	OSTRMS	2		
RMODE	LIN	RMIN	120	RMAX	800
RTIMES	10	CWMIN	3000	M2PATSET	1
OPEN	NO	ALW	NO		

ANAME ipl1301b

LINK	B				
ADAPTER	M2PA	VER	M2PA RFC		
LHOST	e1021201.1301a				
ALHOST	---				
RHOST	e1021301.1301a				
LPORT	1302	RPORT	1302		
ISTRMS	2	OSTRMS	2		
RMODE	LIN	RMIN	120	RMAX	800
RTIMES	10	CWMIN	3000	M2PATSET	1
OPEN	YES	ALW	YES		

IP Appl Sock/Assoc table is (4 of 4000) 1% full

;

rtrv-assoc:adapter=sua

rlghncxa03w 06-01-18 08:16:14 EST EAGLE 34.3.0

rtrv-assoc:adapter=sua

Command entered at terminal #4

ANAME ipg1307a1

LINK	A				
ADAPTER	SUA	VER	SUA RFC		
LHOST	e1021201.1307a				
ALHOST	---				
RHOST	e1021301.1307a				
LPORT	3050	RPORT	3050		
ISTRMS	2	OSTRMS	2		
RMODE	LIN	RMIN	120	RMAX	800
RTIMES	10	CWMIN	3000	UAPS	10
OPEN	NO	ALW	NO		

IP Appl Sock/Assoc table is (4 of 4000) 1% full

;

The following example displays command association data for an IPSG card and using an M2PA adapter.

rtrv-assoc:aname=sg1305m

e1001501 07-11-23 16:20:47 EST EAGLE 38.0.0

```

ANAME sg1305m
LOC      1303          IPLNK PORT A          LINK      A1
ADAPTER  M2PA          VER           M2PA RFC
LHOST    e1021201.1303a
ALHOST    ---
RHOST    e1021301.1303a
LPORT    1305          RPORT           1305
ISTRMS   2             OSTRMS          2          BUFSIZE   200
RMODE    LIN           RMIN            120         RMAX      800
RTIMES   10            CWMIN          3000        M2PATSET  1
OPEN     YES           ALW             YES         RTXTHR   0
HBTIMER  30000

```

LSN;

lsm2pa

IP Appl Sock/Assoc table is (13 of 4000) 1% full
 Assoc Buffer Space Used (600 KB of 3200 KB) on LOC = 1303

;

The following example displays command association data for an IPSG card using an M3UA adapter.

rtrv-assoc:aname=a1

e1001501 08-02-23 16:20:50 EST EAGLE 38.0.0

```

ANAME a1
LOC      1305          IPLNK PORT A          LINK      **
ADAPTER  M3UA          VER           M3UA RFC
LHOST    e1021201.1305a
ALHOST    ---
RHOST    labsun10215p0
LPORT    2001          RPORT           2001
ISTRMS   2             OSTRMS          2          BUFSIZE   200
RMODE    LIN           RMIN            120         RMAX      800
RTIMES   10            CWMIN          3000        UAPS      10
OPEN     YES           ALW             YES         RTXTHR   0
HBTIMER  30000

```

LSN;

ls1305a ls1305i ls1305a2 lsitunbb

lsitunaa

IP Appl Sock/Assoc table is (13 of 4000) 1% full
 Assoc Buffer Space Used (600 KB of 3200 KB) on LOC = 1305

;

The following example displays command output for all associations configured on the EAGLE 5 ISS.

rtrv-assoc:display=all

eagle10212 08-02-06 17:00:42 EST EAGLE 38.0.0

```

ANAME ipl1301a
LOC      1301          IPLNK PORT A          LINK      A
ADAPTER  M2PA          VER           M2PA RFC
LHOST    e1021201.1301a

```

```

ALHOST    ---
RHOST     e1021301.1301a
LPORT     1301          RPORT      1301
ISTRMS    2            OSTRMS     2          BUFSIZE  200
RMODE     LIN          RMIN       120        RMAX     800
RTIMES    10          CWMIN      3000       M2PATSET 1
OPEN      YES         ALW        YES        RTXTHR  0
HBTIMER   30000

ANAME ip11301b
LOC       1301          IPLNK PORT A          LINK     B
ADAPTER   M2PA          VER          M2PA RFC
LHOST     e1021201.1301a
ALHOST    ---
RHOST     e1021301.1301a
LPORT     1302          RPORT      1302
ISTRMS    2            OSTRMS     2          BUFSIZE  200
RMODE     LIN          RMIN       120        RMAX     800
RTIMES    10          CWMIN      3000       M2PATSET 1
OPEN      YES         ALW        YES        RTXTHR  0
HBTIMER   30000

ANAME sg1303a
LOC       1303          IPLNK PORT A          LINK     A
ADAPTER   M3UA          VER          M3UA RFC
LHOST     e1021201.1303a
ALHOST    ---
RHOST     e1021301.1303a
LPORT     2003          RPORT      2003
ISTRMS    2            OSTRMS     2          BUFSIZE  200
RMODE     LIN          RMIN       120        RMAX     800
RTIMES    10          CWMIN      3000       UAPS     10
OPEN      YES         ALW        YES        RTXTHR  0
HBTIMER   30000

ANAME sg1305a
LOC       1305          IPLNK PORT A          LINK     A
ADAPTER   M3UA          VER          M3UA RFC
LHOST     e1021201.1305a
ALHOST    ---
RHOST     e1021301.1305a
LPORT     2005          RPORT      2005
ISTRMS    2            OSTRMS     2          BUFSIZE  200
RMODE     LIN          RMIN       120        RMAX     800
RTIMES    10          CWMIN      3000       UAPS     10
OPEN      YES         ALW        YES        RTXTHR  0
HBTIMER   30000

ANAME sg1305i
LOC       1305          IPLNK PORT A          LINK     B
ADAPTER   M3UA          VER          M3UA RFC
LHOST     e1021201.1305a
ALHOST    ---
RHOST     e1021301.1305a
LPORT     2006          RPORT      2006
ISTRMS    2            OSTRMS     2          BUFSIZE  200
RMODE     LIN          RMIN       120        RMAX     800
RTIMES    10          CWMIN      3000       UAPS     10
OPEN      NO          ALW        YES        RTXTHR  0
HBTIMER   30000

ANAME ipg1307a1
LOC       1307          IPLNK PORT A          LINK     A
ADAPTER   M3UA          VER          M3UA RFC
LHOST     e1021201.1307a

```

```

ALHOST ---
RHOST e1021301.1307a
LPORT 4001 RPORT 4001
ISTRMS 2 OSTRMS 2 BUFSIZE 16
RMODE LIN RMIN 120 RMAX 800
RTIMES 10 CWMIN 3000 UAPS 10
OPEN YES ALW YES RTXTHR 0
HBTIMER 30000

ANAME ipl1311a
LOC 1311 IPLNK PORT A LINK A
ADAPTER M2PA VER M2PA RFC
LHOST e1021201.1311a
ALHOST ---
RHOST e1021301.1311a
LPORT 1311 RPORT 1311
ISTRMS 2 OSTRMS 2 BUFSIZE 200
RMODE LIN RMIN 120 RMAX 800
RTIMES 10 CWMIN 3000 M2PATSET 1
OPEN NO ALW YES RTXTHR 0
HBTIMER 30000

ANAME ipl1313a
LOC 1313 IPLNK PORT A LINK A
ADAPTER M2PA VER M2PA RFC
LHOST e1021201.1313a
ALHOST ---
RHOST e1021301.1313a
LPORT 1313 RPORT 1313
ISTRMS 2 OSTRMS 2 BUFSIZE 200
RMODE LIN RMIN 120 RMAX 800
RTIMES 10 CWMIN 3000 M2PATSET 1
OPEN NO ALW YES RTXTHR 0
HBTIMER 30000

ANAME ipg1315a1
LOC 1315 IPLNK PORT A LINK A
ADAPTER M3UA VER M3UA RFC
LHOST e1021201.1315a
ALHOST ---
RHOST e1021301.1315a
LPORT 1315 RPORT 1315
ISTRMS 2 OSTRMS 2 BUFSIZE 16
RMODE LIN RMIN 120 RMAX 800
RTIMES 10 CWMIN 3000 UAPS 10
OPEN NO ALW NO RTXTHR 0
HBTIMER 30000

ANAME ipg1317a1
LOC 1317 IPLNK PORT A LINK A
ADAPTER M3UA VER M3UA RFC
LHOST e1021201.1317a
ALHOST ---
RHOST e1021301.1317a
LPORT 1317 RPORT 1317
ISTRMS 2 OSTRMS 2 BUFSIZE 200
RMODE LIN RMIN 120 RMAX 800
RTIMES 10 CWMIN 3000 UAPS 10
OPEN YES ALW YES RTXTHR 0
HBTIMER 30000

ANAME a1
LOC 1305 IPLNK PORT A LINK **
ADAPTER M3UA VER M3UA RFC
LHOST e1021201.1305a

```

```

ALHOST ---
RHOST labsun10215p0
LPORT 2001 RPORT 2001
ISTRMS 2 OSTRMS 2 BUFSIZE 200
RMODE LIN RMIN 120 RMAX 800
RTIMES 10 CWMIN 3000 UAPS 10
OPEN YES ALW YES RTXTHR 0
HBTIMER 30000

ANAME a2
LOC 1303 IPLNK PORT A LINK A2
ADAPTER M3UA VER M3UA RFC
LHOST e1021201.1303a
ALHOST ---
RHOST labsun10215p0
LPORT 2002 RPORT 2002
ISTRMS 2 OSTRMS 2 BUFSIZE 200
RMODE LIN RMIN 120 RMAX 800
RTIMES 10 CWMIN 3000 UAPS 10
OPEN YES ALW YES RTXTHR 0
HBTIMER 30000

ANAME sg1305m
LOC 1303 IPLNK PORT A LINK A1
ADAPTER M2PA VER M2PA RFC
LHOST e1021201.1303a
ALHOST ---
RHOST e1021301.1303a
LPORT 1305 RPORT 1305
ISTRMS 2 OSTRMS 2 BUFSIZE 200
RMODE LIN RMIN 120 RMAX 800
RTIMES 10 CWMIN 3000 M2PATSET 1
OPEN YES ALW YES RTXTHR 0
HBTIMER 30000

```

IP Appl Sock/Assoc table is (13 of 4000) 1% full

;

rtrv-assoc:aname=sg1305a

eagle10212 08-02-06 17:00:42 EST EAGLE 38.0.0

```

ANAME sg1305a
LOC 1305 IPLNK PORT A LINK A
ADAPTER M3UA VER M3UA RFC
LHOST e1021201.1305a
ALHOST ---
RHOST e1021301.1305a
LPORT 2005 RPORT 2005
ISTRMS 2 OSTRMS 2 BUFSIZE 200
RMODE LIN RMIN 120 RMAX 800
RTIMES 10 CWMIN 3000 UAPS 10
OPEN YES ALW YES RTXTHR 0
HBTIMER 30000

```

LSN;

ls1305a

IP Appl Sock/Assoc table is (13 of 4000) 1% full
 Assoc Buffer Space Used (600 KB of 3200 KB) on LOC = 1305

;

The following example includes an IPSG card.

rtrv-assoc

```
eagle10212 08-02-06 16:58:31 EST EAGLE 38.0.0
```

ANAME	CARD LOC	IPLNK PORT	LINK	ADAPTER	LPORT	RPORT	OPEN	ALW
ipl1301a	1301	A	A	M2PA	1301	1301	YES	YES
ipl1301b	1301	A	B	M2PA	1302	1302	YES	YES
sg1305a	1305	A	A	M3UA	2005	2005	YES	YES
ipl1311a	1311	A	A	M2PA	1311	1311	NO	YES
m2pa1303a	1303	A	A	M2PA	3565	3565	YES	YES
m3ua1303a	1303	A	A1	M3UA	2905	2905	YES	YES
m3ua1303b	1303	A	**	M3UA	2906	2906	YES	YES
sg1305i	1305	A	B	M3UA	2006	2006	NO	NO
a1	1305	A	**	M3UA	2001	2001	YES	YES

IP Appl Sock/Assoc table is (9 of 4000) 1% full

;

rtrv-atinpqopts

rtrv-atinpqopts

Use this command to retrieve the data that is used for ATI number conditioning.

Keyword: rtrv-atinpqopts

Command Class: Database Administration

Parameters

This command has no parameters.

Example

```
rtrv-atinpqopts
```

Dependencies

The ATINP feature must be enabled before this command can be specified.

The EGLEOPTS table is corrupt or cannot be found.

Output

The following example shows output with default ATINPQ options.

rtrv-atinpqopts

```
tekelecstp 08-08-04 07:53:46 EST EAGLE 39.2.0
```

```
ATINPQ OPTIONS
```

```
-----
ATIACKIMSI   = NONE
ATIACKMSISDN = MSISDN
ATIACKRN     = RN
SNAI         = INTL
ATIDLM       = NONE
ATIDFLTRN    = NONE
ATINPTYPE    = ANY
```

```
;
```

The following example shows output with some ATINPQ options provisioned.

rtrv-atinpqopts

```
tekelecstp 08-08-04 07:55:30 EST EAGLE 39.2.0
```

```
ATINPQ OPTIONS
```

```
-----
ATIACKIMSI   = IMSI
ATIACKMSISDN = NONE
ATIACKRN     = RNSP
SNAI         = NAT
ATIDLM       = 254565819324258
ATIDFLTRN    = 731964828246917
ATINPTYPE    = ALWAYS
```

```
;
```

Legend

- **ATIACKIMSI**—IMSI parameter for ACK response message.
- **ATIACKMSISDN**—MSISDN parameter for ACK response message.
- **ATIACKRN**—Routing Number format.
- **SNAI**—The NAI of the incoming MSISDN digits.
- **ATIDLM**—Outbound message delimiter.
- **ATIDFLTRN**—Default Routing Number.
- **ATINPTYPE**—Number Portability Type.

rtrv-atm-lps**Retrieve ATM Link Parameter Set**

Use this command to display the parameter values for the ATM link parameter sets in the database configured with the **chg-atm-lps** command, along with the non-configurable ATM parameters.

Keyword: **rtrv-atm-lps**

Related Commands: **chg-atm-lps**

Command Class: Database Administration

Parameters

:lpset= (optional)

The ATM link parameter set to be displayed.

Range: **1-30**

Default: All ATM link parameter sets are displayed

Example

```
rtrv-atm-lps:lpset=5  
rtrv-atm-lps
```

Dependencies

None

Notes

None

Output

NOTE: Dashes (--) in the FC NR and FC BC fields indicate that this implementation is not supported on ATM high-speed signaling links.

rtrv-atm-lps:lpset=5

rlghncxa03w 04-01-04 08:40:18 EST EAGLE 31.3.0
ATM LINK PARAMETER SET TIMERS AND PARAMETERS (TIMERS IN SECONDS)

				SSCOP PARAMETERS				
LPSET	MAXCC	MAXPD	MAXSTAT	TMR CC	TMR KALIVE	TMR NORSP	TMR POLL	TMR IDLE
5	4	500	67	0.2	0.125	1.5	0.150	0.125

				SSCF-NNI PARAMETERS	
TMRT1	TMRT2	TMRT3	N1		
05.0	120.0	0.000925	64552		

						SAAL PARAMETERS	
MAX NRP	TMR SREC	TNRNO CRED	TMR ERM	N BLK	TMR PROV		
1	3600	1.5	0.125	3	0600.0		

NONCONFIGURABLE PARAMETERS									
SDU SIZE	UU SIZE	N	FC NR	FC BC	TSUP	TLOSS	ERMSM	THRES	
272	4	9	--	--	120	1.3	0.1	0.244	

;

rtrv-atm-lps

rlghncxa03w 04-01-04 08:40:18 EST EAGLE 31.3.0

				SSCOP PARAMETERS				
LPSET	MAXCC	MAXPD	MAXSTAT	TMR CC	TMR KALIVE	TMR NORSP	TMR POLL	TMR IDLE
1	4	500	67	0.2	0.125	1.5	0.150	0.125
2	4	500	67	0.2	0.125	1.5	0.150	0.125
3	4	500	67	0.2	0.125	1.5	0.150	0.125
4	4	500	67	0.2	0.125	1.5	0.150	0.125
5	4	500	67	0.2	0.125	1.5	0.150	0.125
6	4	500	67	0.2	0.125	1.5	0.150	0.125
7	4	500	67	0.2	0.125	1.5	0.150	0.125
8	4	500	67	0.2	0.125	1.5	0.150	0.125
9	4	500	67	0.2	0.125	1.5	0.150	0.125
10	4	500	67	0.2	0.125	1.5	0.150	0.125
11	4	500	67	0.2	0.125	1.5	0.150	0.125
12	4	500	67	0.2	0.125	1.5	0.150	0.125
13	4	500	67	0.2	0.125	1.5	0.150	0.125
14	4	500	67	0.2	0.125	1.5	0.150	0.125
15	4	500	67	0.2	0.125	1.5	0.150	0.125
16	4	500	67	0.2	0.125	1.5	0.150	0.125
17	4	500	67	0.2	0.125	1.5	0.150	0.125
18	4	500	67	0.2	0.125	1.5	0.150	0.125
19	4	500	67	0.2	0.125	1.5	0.150	0.125
20	4	500	67	0.2	0.1	1.5	0.1	0.1

				SSCF-NNI PARAMETERS	
LPSET	TMRT1	TMRT2	TMRT3	N1	
1	05.0	015.0	0.000925	64552	
2	05.0	120.0	0.000925	64552	
3	05.0	120.0	0.000925	64552	
4	15.0	010.0	0.000925	64552	
5	05.0	120.0	0.000925	500	
6	05.0	015.0	0.000925	64552	
7	05.0	120.0	0.000925	64552	

8	05.0	120.0	0.000925	64552
9	15.0	010.0	0.000925	64552
10	05.0	015.0	0.000925	64552
11	05.0	120.0	0.000925	64552
12	05.0	120.0	0.000925	64552
13	15.0	010.0	0.000925	64552
14	05.0	015.0	0.000925	64552
15	05.0	120.0	0.000925	64552
16	05.0	120.0	0.000925	64552
17	15.0	010.0	0.000925	64552
18	05.0	015.0	0.000925	64552
19	05.0	120.0	0.000925	64552
20	05.0	120.0	0.000925	64552

					SAAL PARAMETERS	
LPSET	MAX	TMR	TNRNO	TMR	N	TMR
	NRP	SREC	CRED	ERM	BLK	PROV
1	1	3600	1.5	0.125	3	1200.0
2	1	3600	1.5	0.125	3	1000.0
3	1	60	1.5	0.125	3	0600.0
4	1	3600	1.5	0.125	3	0600.0
5	1	3600	1.5	0.125	3	0600.0
6	1	3600	1.5	0.125	3	1200.0
7	1	3600	1.5	0.125	3	1000.0
8	1	60	1.5	0.125	3	0600.0
9	1	3600	1.5	0.125	3	0600.0
10	1	3600	1.5	0.125	3	0600.0
11	1	3600	1.5	0.125	3	1200.0
12	1	3600	1.5	0.125	3	1000.0
13	1	60	1.5	0.125	3	0600.0
14	1	3600	1.5	0.125	3	0600.0
15	1	3600	1.5	0.125	3	0600.0
16	1	3600	1.5	0.125	3	1200.0
17	1	3600	1.5	0.125	3	1000.0
18	1	60	1.5	0.125	3	0600.0
19	1	3600	1.5	0.125	3	0600.0
20	1	3600	1.5	0.125	3	0600.0

NONCONFIGURABLE PARAMETERS									
SDU	UU		FC	FC					
SIZE	SIZE	N	NR	BC	TSUP	TLOSS	ERMSM	THRES	
272	4	9	--	--	120	1.3	0.1	0.244	

;

rtrv-atm-lps:lpset=25

tekelecstp 04-01-05 08:40:18 EST EAGLE 31.3.0
 ATM LINK PARAMETER SET TIMERS AND PARAMETERS (TIMERS IN SECONDS)

					SSCOP PARAMETERS				
LPSET	MAXCC	MAXPD	MAXSTAT		TMR	TMR	TMR	TMR	TMR
					CC	KALIVE	NORSP	POLL	IDLE
25	4	500	67		0.2	0.125	1.5	0.150	0.125

SSCF-NNI PARAMETERS				
TMRT1	TMRT2	TMRT3	N1	
05.0	120.0	0.000925	64552	

SAAL PARAMETERS					
MAX	TMR	TNRNO	TMR	N	TMR
NRP	SREC	CRED	ERM	BLK	PROV
0	3600	1.5	0.125	3	0600.0

NONCONFIGURABLE PARAMETERS									
SDU	UU		FC	FC					
SIZE	SIZE	N	NR	BC	TSUP	TLOSS	ERMSM	THRES	

```

                272    4        9    --    --    120    1.3        0.1        0.244
;
rtrv-atm-lps
tekelecstp 04-01-05 08:40:18 EST EAGLE 31.3.0
ATM LINK PARAMETER SET TIMERS AND PARAMETERS (TIMERS IN SECONDS)

                                SSCOP PARAMETERS
                                TMR    TMR    TMR    TMR    TMR
                                CC    KALIVE  NORSP  POLL  IDLE
LPSET  MAXCC  MAXPD  MAXSTAT  CC    KALIVE  NORSP  POLL  IDLE
1       4      500    67      0.2  0.125  1.5    0.150  0.125
.
.
20      4      500    67      0.2  0.1    1.5    0.1    0.1
21      4      500    67      0.2  0.1    1.5    0.1    0.1
.
.
30      4      500    67      0.2  0.1    1.5    0.1    0.1

                                SSCF-NNI PARAMETERS
                                N1
LPSET  TMRT1  TMRT2  TMRT3  N1
1       05.0  015.0  0.000925  64552
.
.
20      5      30    0.000925  64552
21      5     120    0.000925  1000
.
.
30      5     120    0.000925  64552

                                SAAL PARAMETERS
                                TMR    N    TMR
                                SREC  CRED  ERM  BLK  PROV
LPSET  MAX  NRP  SREC  CRED  ERM  BLK  PROV
1       1    3600  1.5    0.125  3    1200.0
.
.
20      1    3600  1.5    0.125  3    0600.0
21      0    3600  1.5    0.125  3    1200.0
.
.
30      0    3600  1.5    0.125  3    0600.0

                                NONCONFIGURABLE PARAMETERS
                                SDU    UU    FC    FC
                                SIZE  SIZE  N    NR  BC  TSUP  TLOSS  ERMSM  THRES
                272    4        9    --    --    120    1.3        0.1        0.244
;

```

Legend

LPSET—The link parameter set being changed, **1** to **30**. The system default value for this parameter is **1** for ANSI and **21** for ITU.

ACTION—Copy a set of ATM signaling link parameters from one parameter set to another. The value of this parameter is **copy**. If this parameter is not specified, then the copy action cannot take place.

SCRLPSET—The ATM signaling link parameter set used as a source for the **action=copy** parameter. This parameter can only be specified with the **action=copy** parameter.

MAXCC—The maximum number of transmissions of a BGN, END, ER, or RS PDU. The value of this parameter is from 1 to 10 PDUs. The system default value is 4 PDUs.

MAXPD—The maximum number of SD PDUs that can be sent before a POLL is sent. The value of this parameter is from 5 to 2120 PDUs. The system default value is 500 PDUs.

MAXSTAT—The maximum number of list elements in a STAT PDU. The value of this parameter is from 3 to 67 PDUs. The system default value is 67 PDUs.

TMRCC—The timer, in seconds, used during the connection phase to guard against unacknowledged BGN, END, ER or RS PDUs. The value of this parameter is from .1 to 2 seconds. The system default value is .2 seconds.

TMRKALIVE—The timer, in seconds, used during the transient phase when no SD PDUs are being sent to keep connection up. The value of this parameter is from .025 to .5 seconds. The system default value is .1 seconds.

TMRNOSP—The timer, in seconds, used to check that STAT PDUs are arriving often enough. The value of this parameter is from .5 to 2 seconds. The system default value is 1.5 seconds.

TMRPOLL—The timer, in seconds, used to guarantee that POLL PDUs are sent often enough. The value of this parameter is from .025 to .5 seconds. The system default value is .1 seconds.

TMRIDLE—The timer, in seconds, used during the idle phase when no SD PDUs are being sent to limit time in the idle phase. The value of this parameter is from .025 to 1 seconds. The system default value is .1 seconds.

TMRT1—The time, in seconds, between a link release action and the next link reestablish action during alignment. The value of this parameter is from 1 to 15 seconds. The system default value is 5 seconds.

TMRT2—The total time, in seconds, that SSCF will attempt alignment. The value of this parameter is from 15 to 180 seconds. The system default value is 120 seconds for ANSI and 30 seconds for ITU.

TMRT3—The time, in seconds, between proving PDUs. The value of this parameter is from .00045 to .023 seconds. The system default value is .000925 seconds.

N1—The number of PDUs sent during proving. The value of this parameter is from 500 to 64552 PDUs. The system default value is 64552 PDUs for ANSI and 1000 PDUs for ITU.

MAXNRP—The maximum number of retransmitted PDUs during proving. The value of this parameter is from 1 to 10 PDUs. The system default value is 1 PDU for ANSI and 0 PDUs for ITU.

TMRREC—The timer, in seconds, used to prohibit closely spaced SSCOP recoveries from occurring. The value of this parameter from is 60 to 10800 seconds. The system default value is 3600 seconds.

TMRNOCRED—The timer, in seconds, used when the no credit exists and PDUs are available to be sent. The value of this parameter is from 1 to 6 seconds. The system default value is 1.5 seconds.

TMRERM—The error rate monitor interval, in seconds. The value of this parameter is from .025 to .5 seconds. The system default value is .1 seconds.

NBLK—The number of monitoring intervals per block. The value of this parameter is from 1 to 10. The system default value is 3.

TMRPROV—The timer, in seconds, used to monitor the status of a link after it is placed into service. The value of this parameter from 60 to 1200 seconds. The system default value is 600 seconds.

SDU SIZE—The SSCOP SDU size (set to 272 octets).

UU SIZE—The SCOP UU size (set to 4 octets).

N—The monitoring intervals spanning a .4 second error event (set to 9).

FC NR—The fixed credit increment value.

FC BC—The fixed credit allocation frequency.

TSUP—The superblock timer for layer management, in seconds.

TLOSS—The loss timer for layer management, in seconds.

ERMSM—The error rate monitor smoothing factor.

THRES—The error rate monitor threshold.

rtrv-atm-prm

Retrieve ATM Parameters

Use this command to display system-wide non-configurable ATM layer parameters for each ATM high-speed signaling link. The data displayed includes the ATM interface parameters and the ATM traffic descriptor values.

Keyword: **rtrv-atm-prm**

Related Commands: **rtrv-atm-lps**

Command Class: Database Administration

Parameters

This command has no parameters.

Example

rtrv-atm-prm

Dependencies

None

Notes

None

Output**rtrv-atm-prm**

```

tekelecstp 04-02-05 08:40:18 EST EAGLE 31.3.0
DS1 DS1 E1 E1 MAX MAX VCI VPI
PCR SCR PCR SCR BT CDVT QOS VPCs VCCs BITS BITS
3622 3622 4528 4528 210 100 3 0 1 16 12
;

```

Legend

The ATM traffic descriptors are displayed in the following fields:

BT—Burst tolerance. The number of consecutive cells on the VCL permitted on the ATM interface by the enforcement process, given the PCR and the line speed.

CDVT—The amount of cell delay variation for the VCL in the network ingress direction.

PCR—The maximum or peak cell rate for the VCL (virtual channel link) T1 is for ANSI and E1 is for ITU.

QOS—Quality of service. The performance objectives that must be met by the ATM VCL when it must discard cells during enforcement of the traffic parameters.

SCR—The average or sustainable cell rate supported on the VCL. T1 is for ANSI and E1 is for ITU.

The ATM interface parameters are displayed in the following fields:

MAX VCCs—The maximum number of simultaneously active Virtual Circuit Connections (VCCs) supported.

MAX VPCs—The maximum number of simultaneously active Virtual Path Connections (VPCs) supported (by the ATM interface).

VCI BITS—The number of allocated VCI bits to be used in the VPIs in the ATM cells for the VCLs supported on the ATM interface.

VPI BITS—The number of bits to be used in the VPIs in the ATM cells for the VPLs terminated on the ATM interface.

rtrv-attr-seculog**Display Security Log Characteristic**

Use this command to display security log attributes that were configured using the **chg-attr-seculog** command.

Keyword: **rtrv-attr-seculog**

Related Commands: **chg-attr-seculog**

Command Class: Security Administration

Parameters

This command has no parameters.

Example

```
rtrv-attr-seculog
```

Dependencies

None

Notes

None

Output

```

rtrv-attr-secu log
  rlghncxa03w 04-01-07 08:16:17 EST EAGLE 31.3.0
  Security log attributes
  -----
  UPLDALM      yes
  UPSLG        80
;

```

rtrv-bip**Retrieve Board Identification PROMs**

Use this command to show the board identification PROM (BIP) data for a specified card (main assembly or applique) and location.

The following information is displayed for both main assemblies and appliques: board part number, board revision, serial number (7, 8, 11, 12, or 14 digits), manufacturing date, and the software match ID.

For main assemblies, the port A ethernet address (if ENT01 record exists) and port B ethernet address (if ENT02 record exists) are also displayed.

For appliques, the applique type and ethernet address (if the applique type is ENET and ENT01 record exists) are also displayed.



CAUTION: To have the rtrv-bip command display MAC addresses, the daughterboard must have a type of ENET.

Keyword: rtrv-bip

Related Commands: chg-bip-fld, chg-bip-rec, disp-bip, tst-bip

Command Class: System Maintenance

Parameters

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

HMUX and HIPR locations are not valid.

:type= (mandatory)

The type of board at the specified location whose BIP information is to be displayed.

Range: mbd, dbd
 mbd — main assembly
 dbd — applique

:dbdloc= (optional)

Applique location. This parameter specifies the location of the applique.

This parameter can be specified only for cards that support multiple appliques.

Range: 1-2

Example

The following example displays the BIP data for the main assembly.

rtrv-bip:loc=1201:type=mbd

The following example displays the BIP data for all appliques that are supported by the card.

rtrv-bip:loc=1201:type=dbd

The following example displays the BIP data for the first applique.

rtrv-bip:loc=1103:type=dbd:dbdloc=1

Dependencies

The card location frame, shelf, and slot must be within the allowed range.

The card location must be valid for the command.

The **type=dbd** parameter cannot be specified for card type GPSM-II, HCAP, ATM or DCM. HMUX and HIPR cards do not contain BIP information.

The **dbdloc** parameter can be specified only for the cards that support multiple appliques.

If the **type=mbd** parameter is specified, then the **dbdloc** parameter cannot be specified.

Notes

The **tst-bip** command verifies that the PROM is good by writing to and reading from the PROM. The **rtrv-bip** command shows the level of the BIP, as well as the board part number, the revision number, and the serial number. If the **rtrv-bip** command fails, this indicates that communication to the card has failed, and you might need to replace the card. Contact Tekelec Technical Service at (888) FOR-TKLC to find out if the card can be reprogrammed.

Output

The Max Power Rating is displayed only if the **type=mbd** parameter is specified. If the Card Power value is not present in BIP data, then the Max Power Rating is displayed as **Undef**.

The location of the applique is displayed only if the card supports multiple appliques.

The following example displays the 7-digit serial number of a main assembly card manufactured on the eleventh week of 1993).

rtrv-bip:type=mbd:loc=1201

```
tekelecstp 07-03-14 23:32:51 IST EAGLE 37.0.0
```

```
-----
```

Location: 1201 MBD

```
Part Number: 850-0187-03
Revision: G2
Serial Number: 3110195
```

Week/Year: 11/1993

```
Software Match ID: EG - 001
Max Power Rating : Undef
```

```
-----
```

END OF REPORT

;

The following example displays the 7-digit serial number of a DS0 applique manufactured on the tenth week of 1993.

rtrv-bip:loc=1201:type=dbd

```
rlghncxa03w 07-03-04 08:16:20 EST EAGLE 37.0.0
```

```
-----
```

Location: 1201 - DBD

```
Part Number: 850-0196-01
Revision: B1
Serial Number: 3100138
```

Week/Year: 10/1993

```
Software Match ID: EG - 001
Daughterboard Type: DS0
```

```
-----
```

END OF REPORT

;

The following example displays the 8-digit serial number of a main assembly card manufactured on the eleventh week of 1998.

rtrv-bip:loc=1201:type=mbd

```
rlghncxa03w 07-03-04 08:16:17 EST EAGLE 37.0.0
```

```
-----
```

Location: 1201 - MBD

```
Part Number: 850-0187-03
Revision: G2
Serial Number: 98110195
```

Week/Year: 11/1998

```
Software Match ID: EG - 001
Max Power Rating : Undef
```

```
-----
```

END OF REPORT

;

The following example displays the 11-digit serial number of a main assembly card manufactured on the eleventh week of 2002.

rtrv-bip:loc=1201:type=mbd

```
rlghncxa03w 07-03-04 08:16:17 EST EAGLE 37.0.0
```

Location: 1201 MBD

Part Number: 850-0187-03
Revision: G2
Serial Number: 10202110195

Week/Year: 11/2002

Software Match ID: EG - 001

Max Power Rating : Undef

END OF REPORT

;

The following example displays the 12-digit serial number of a main assembly card manufactured on the eleventh week of 1998.

rtrv-bip:loc=1201:type=mbd

rlghncxa03w 07-03-04 08:16:17 EST EAGLE 37.0.0

Location: 1201 MBD

Part Number: 850-0187-03
Revision: G2
Serial Number: 1029811a0195

Week/Year: 11/1998

Software Match ID: EG - 001

Max Power Rating : Undef

END OF REPORT

;

The following example displays the 14-digit serial number with ethernet port A and B records, manufactured on the eleventh week of 2001.

rtrv-bip:loc=1201:type=mbd

tekelecstp 07-03-14 23:32:51 IST EAGLE 37.0.0

Location: 1201 - MBD

Part Number: 850-0187-03
Revision: G2
Serial Number: 102200111a0195

Week/Year: 11/2001

Software Match ID: EG - 001

Max Power Rating : Undef

Ethernet Port A Address: 00001704000C

Ethernet Port B Address: 000017040

END OF REPORT

;

The following example displays the BIP data for the main assembly when the Max Power Consumption value for the card is present.

rtrv-bip:loc=1103:type=mbd

tekelecstp 07-03-14 23:32:51 IST EAGLE 37.0.0

Location: 1103 - MBD

Part Number: 870-2212-02
Revision: A
Serial Number: 10206265084

Week/Year: 26/2006

Software Match ID: EG - 001

Max Power Rating : 646 mA

;END OF REPORT

;

The following example displays the BIP data for the first applique.

rtrv-bip:loc=1103:type=dbd:dbdloc=1

tekelecstp 07-03-04 17:40:13 IST EAGLE 37.0.0

Location: 1103 - DBD DBD Location: 1

Part Number: 850-0666-02
Revision: E Week/Year: 26/2006
Serial Number: 10206265084

Software Match ID: EG - 001
DBD Type: Ethernet
Ethernet ENT01 Address: 0000170cd17e
Ethernet ENT02 Address: 0000170cd17f

END OF REPORT

The following example displays the BIP data for all appliques that are supported by the card.

rtrv-bip:loc=1103:type=dbd

tekelecstp 07-03-04 23:32:55 IST EAGLE 37.0.0

Location: 1103 - DBD DBD Location: 1

Part Number: 850-0666-02
Revision: C Week/Year: 26/2006
Serial Number: 10206265084

Software Match ID: EG - 001
DBD Type: Ethernet
Ethernet ENT01 Address: 0000170cd17e
Ethernet ENT02 Address: 0000170cd17f

Location: 1103 - DBD DBD Location: 2

Part Number: 850-0666-02
Revision: C Week/Year: 26/2006
Serial Number: 10206265084

Software Match ID: EG - 001
DBD Type: Ethernet
Ethernet ENT01 Address: 0000170cd17c
Ethernet ENT02 Address: 0000170cd17d

END OF REPORT

The following example displays the BIP data for SS7 ATM daughterboard.

rtrv-bip:loc=1215:type=dbd

tekelecstp 07-03-04 23:32:55 IST EAGLE 37.0.0

Location: 1215 - DBD

Part Number: 850-0646-02
Revision: A Week/Year: 25/2006
Serial Number: 10206255430

Software Match ID: EG - 001
DBD Type: ATM

;END OF REPORT

The following example displays the BIP data for SS7 E1T1 daughterboard.

rtrv-bip:loc=1216:type=dbd

```
tekelecstp 07-03-04 23:32:55 IST EAGLE 37.0.0
```

```
-----
Location: 1216 - DBD
```

```
Part Number: 850-0646-02
```

```
Revision: A
```

```
Week/Year: 25/2006
```

```
Serial Number: 10206255430
```

```
Software Match ID: EG - 001
```

```
DBD Type: E1T1
```

```
-----
;END OF REPORT
```

;

The following example displays the BIP data for all appliques that are supported by the card, if card BIP data is from an earlier EAGLE 5 ISS release that did not support the **dbdloc** parameter.

NOTE: This case is for backward compatibility. Although the card contains two daughterboards, the card BIP data is from a release (prior to EAGLE 5 ISS Release 37.0) that does not support BIP records for multiple DBDs. The Ethernet Addresses for both DBDs are shown as part of the BIP data for the first DBD.

rtrv-bip:loc=1106:type=dbd

```
tekelecstp 07-03-04 23:32:55 EST EAGLE 37.0.0
```

```
-----
Location: 1106 - DBD
```

```
DBD Location : 1
```

```
Part Number: 870-2212-02
```

```
Revision: A
```

```
Week/Year: 25/2006
```

```
Serial Number: 10206255461
```

```
Software Match ID: EG - 001
```

```
DBD Type: Ethernet
```

```
Ethernet ENT01 Address: 0000170cd340
```

```
Ethernet ENT02 Address: 0000170cd341
```

```
Ethernet ENT03 Address: 0000170cd342
```

```
Ethernet ENT04 Address: 0000170cd343
```

```
-----
Board ID Prom notification : Card DBD BIP contains no valid loc: 2 data
```

```
-----
;END OF REPORT
```

;

Legend

LOCATION—The card location and board type for the BIP information.

DBD LOCATION—The location of the applique.

PART NUMBER—The part number of the card in the specified card location.

REVISION—The hardware version of the card.

SERIAL NUMBER—The serial number (7, 8, 11, 12, or 14 digits) of the card. Table 5-69 shows the serial number formats.

Table 5-69. Serial Number Formats

Serial Numbers	Formats
7-digit serial number	ywwxxxx
8-digit serial number	yywwxxxx
11-digit serial number	nnnyywwxxxx
12-digit serial number	nnnyyww*xxxx
14-digit serial number	nnnyyyyww*xxxx
Legend y = year digit (0–9) w = week digit (0–9) n = product identifier digit (0–9) x = serial number digit (0–F hexadecimal) * = special character (0–9, a–z, or A–Z, alphanumeric characters)	

SOFTWARE MATCH ID—This field is used to check hardware and software compatibility.

DBD TYPE—Type of daughterboard applique.

MAX POWER RATING—The maximum power rating of the card.

WEEK/YEAR—The week (1–52) and the year (4 digits) that the card was manufactured.

rtrv-card

Retrieve Card

Use this command to display the information about a card. The command displays the card type, the application the card is running, the linkset name, the signaling links, and the signaling link codes. If no parameter is specified, the command displays information for all cards defined by the **ent-card** command. If the **loc** parameter is specified, the command displays information for the specified card only.

Keyword: rtrv-card

Related Commands: dlt-card, ent-card, init-card, rept-stat-card, rmv-card, rst-card

Command Class: Database Administration

Parameters

:links= (optional)

Links Provision Status. For the card in the location specified by the **loc** parameter, all links, only equipped links, or only unequipped links are displayed. If the parameter is not specified, only the equipped links are displayed.

Range: all, equip, unequip, ipsg

all — Display all possible links for the card.

equip — Display links that are equipped on the card.

unequip — Display links that are allowed but not equipped on the card.

ipsg — Display the SLKTPS and total card TPS used for a particular card or for all cards configured with the **ipsg** GPL.

Default: equip

:loc= (optional)

The card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1117, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Default: Retrieve all

Example

```
rtrv-card
rtrv-card:loc=1205
rtrv-card:links=ipsg
rtrv-card:loc=1111:links=ipsg
```

Dependencies

The card location slot must be between **1** and **18** and not **9** or **10**.

The card location cannot be **1114**, **1116**, **1117**, or **1118**.

The shelf location must be **11xx**, **12xx**, **13xx**, **21xx**, **22xx**, **23xx**, **31xx**, **32xx**, **33xx**, **41xx**, **42xx**, **43xx**, **51xx**, **52xx**, **53xx**, or **61xx**.

The specified card location must be equipped in the database.

Notes

The provisioning method of an MPL (multi-port LIM) and a two-port LIM running the **ss7ansi** application is the same, as is the function that the two cards perform. Both cards are provisioned with the **ss7ansi** application to allow the MPLs to replace a two-port LIM without having to reprovision the LIM in the database. The MPLs support only the LIMDS0 interface, and the **appl** value must be **ss7ansi**. The MPLs run the **ss7ml** GPL (see the **rept-stat-gpl** command), which allows the MPL cards to support eight signaling link ports. The **rtrv-card** command displays the status of all ports of the MPL card and displays its application as **ss7ansi**.

The provisioning method of an E1/T1 MIM (Multi-Channel Interface Module) and a two-port E1 card running the **ss7ansi** or **ccs7itu** application is the same, as is the function that the two cards perform. Both cards are provisioned with the **ss7ansi** or **ccs7itu** application to allow the E1/T1 MIM card to replace a two-port E1 card without having to reprovision the E1 card in the database. The **appl** value can be **ss7ansi** or **ccs7itu**. The E1/T1 MIM runs the **ss7ml** GPL (see the **rept-stat-gpl** command), which allows the card to support eight signaling link ports. The **rtrv-card** command displays the status of all ports of the E1/T1 card and displays its application as **ss7ansi** or **ccs7itu**.

Output

rtrv-card

rlghncxa03w 04-07-15 16:34:56 EST EAGLE 31.6.0

CARD	TYPE	APPL	LSET NAME	LINK	SLC	LSET NAME	LINK	SLC
1101	TSM	SCCP	-----	A	--	-----	B	--
1102	TSM	GLS	-----	A	--	-----	B	--
1103	ACMENET	STPLAN	-----	A	--	-----	B	--
1104	ACMENET	STPLAN	-----	A	--	-----	B	--
1113	GPSM	OAM						
1114	TDM-A							
1115	GPSM	OAM						
1116	TDM-B							
1117	MDAL							
1201	LIMV35	CCS7ITU	lsn156	A	0	lsn1234	B	1
1205	LIME1	CCS7ITU	e1lim1	A	0	-----	B	--
			-----	A1	--	-----	B1	--
			-----	A2	--	-----	B2	--
			-----	A3	--	-----	B3	--
1206	LIMCH	CCS7ITU	e1lim1	A	1	-----	B	--
			-----	A1	--	-----	B1	--
			-----	A2	--	-----	B2	--
			-----	A3	--	-----	B3	--
1207	LIME1	SS7ANSI	e1lsn1	A	0	e1jwk4	B	1
			e1lsn2	A1	2	e1jwk3	B1	2
			e1lsn3	A2	4	e1jwk2	B2	15
			-----	A3	--	e1jwk1	B3	16
1208	LIMCH	SS7ANSI	e1jwk5	A	8	e1lsn1	B	1
			e1jwk6	A1	9	e1lsn7	B1	13
			e1jwk7	A2	10	e1lsn6	B2	14
			e1jwk8	A3	10	e1lsn5	B3	15
1211	LIMT1	SS7ANSI	t1lsn1	A	0	t1lsn1	B	1
			-----	A1	--	t1lsn1	B1	2
			t1lsn5	A2	0	t1lsn6	B2	6
			t1lsn7	A3	13	-----	B3	--
1212	LIMCH	SS7ANSI	t1lsn1	A	3	t1lsn13	B	10
			t1lsn10	A1	16	t1lsn14	B1	10
			t1lsn11	A2	1	t1lsn15	B2	4
			t1lsn12	A3	8	-----	B3	--

;

The following example shows a retrieval by the specified card location:

rtrv-card: loc=1205

rlghncxa03w 04-01-15 16:34:56 EST EAGLE 31.3.0

CARD	TYPE	APPL	LSET NAME	LINK	SLC	LSET NAME	LINK	SLC
1205	LIMDS0	SS7ANSI	LS1	A	0	LS1	B	1
			LS1	A1	2	LS1	B1	3
			LS1	A2	4	LS1	B2	5
			LS1	A3	6	LS1	B3	7

;

The following example shows the output for a 2-port E1 card:

rtrv-card: loc=1205

rlghncxa03w 04-01-15 16:34:56 EST EAGLE 31.3.0

CARD	TYPE	APPL	LSET NAME	LINK	SLC	LSET NAME	LINK	SLC
1205	LIME1	CCS7ITU	e1lim1	A	0	-----	B	--
			-----	A1	--	-----	B1	--
			-----	A2	--	-----	B2	--
			-----	A3	--	-----	B3	--

;

The following example shows the output for an E1/T1 MIM card used as E1 card:

rtrv-card: loc=1207

```
rlghncxa03w 04-01-15 16:34:56 EST EAGLE 31.3.0
CARD   TYPE      APPL      LSET NAME      LINK SLC  LSET NAME      LINK SLC
1207   LIME1      SS7ANSI  e1lsn1         A    0    e1jwk4         B    1
                                     e1lsn2         A1   2    e1jwk3         B1   2
                                     e1lsn3         A2   4    e1jwk2         B2   15
                                     ----- A3   -- e1jwk1         B3   16
;
```

The following example shows the output for an E1/T1 MIM cards used as a T1 card.

rtrv-card: loc=1211

```
rlghncxa03w 04-01-15 16:34:56 EST EAGLE 31.3.0
CARD   TYPE      APPL      LSET NAME      LINK SLC  LSET NAME      LINK SLC
1211   LIMT1      SS7ANSI  t1lsn1         A    0    t1lsn1         B    1
                                     ----- A1   -- t1lsn1         B1   2
                                     t1lsn5         A2   0    t1lsn6         B2   6
                                     t1lsn7         A3   13  ----- B3   --
;
```

The following example shows the output when MPL (multi-port LIM) cards are provisioned on the system:

rtrv-card

```
rlghncxa03w 03-03-15 16:34:56 EST EAGLE 30.0.0
CARD   TYPE      APPL      LSET NAME      LINK SLC  LSET NAME      LINK SLC
1201   LIMDS0     SS7ANSI  LS1            A    0    LS1            B    1
                                     LS1            A1   2    LS1            B1   3
                                     LS1            A2   4    LS1            B2   5
                                     LS1            A3   6    LS1            B3   7
1202   LIMDS0     SS7ANSI  LS2            A    0    LS3            B    0
                                     ----- A1   -- LS3            B1   1
                                     LS2            A2   1    LS2            B2   2
                                     ----- A3   -- ----- B3   --
1203   LIMDS0     SS7GX25  LS4            A    0    LS4            B    1
1204   LIMATM     ATMANSI  LS5            A    0    ----- B    --
1205   DCM        IPLIM    ----- A    -- LS6            B    0
1102   DSM        VSCCP    ----- A    -- ----- B    --
1113   GPSM       OAM
1114   TDM-A
1115   GPSM       OAM
1116   TDM-B
1117   MDAL
1303   DCM        IPGWI    ipgwitun       A    00  ----- B    --
;
```

The following example shows the output when an MCPM card for the Measurements Platform feature is provisioned on the system:

rtrv-card: loc=1205

```
rlghncxa03w 04-01-15 16:34:56 EST EAGLE 31.3.0
CARD   TYPE      APPL      LSET NAME      LINK SLC  LSET NAME      LINK SLC
1205   MCPM      MCP      ----- A    00  ----- B    --
;
```

The following example shows the output when an IPGWI card is provisioned on the system:

rtrv-card: loc=1205

```
rlghncxa03w 04-01-15 16:34:56 EST EAGLE 31.3.0
CARD   TYPE      APPL      LSET NAME      LINK SLC  LSET NAME      LINK SLC
1303   DCM        IPGWI    ipgwitun       A    00  ----- B    --
;
```


The following example shows the output when an STC card or an E5-STC card for the EAGLE 5 Integrated Monitoring Support feature is provisioned on the system:

rtrv-card: loc=1205

```
rlghncxa03w 04-01-15 16:34:56 EST EAGLE 31.3.0
CARD  TYPE      APPL      LSET NAME      LINK SLC  LSET NAME      LINK SLC
1205  STC        EROUTE    lsntest1       A   00  lsntest2       B   01
;
```

The following example shows the output for an SSEDCCM card are used as IPLIM to 8 Points card:

rtrv-card: loc=1205

```
rlghncxa03w 04-01-15 16:34:56 EST EAGLE 31.3.0
CARD  TYPE      APPL      LSET NAME      LINK SLC  LSET NAME      LINK SLC
1205  DCM        IPLIM      LS6            A   0   LS6            B   1
                        LS6            A1  2   LS6            B1  3
                        LS6            A2  4   LS6            B2  5
                        LS6            A3  6   LS6            B3  7
;
```

The following example includes an SSEDCCM cards used as an IPLIM to 8 Points card:

rtrv-card

```
rlghncxa03w 03-03-15 16:34:56 EST EAGLE 30.0.0
CARD  TYPE      APPL      LSET NAME      LINK SLC  LSET NAME      LINK SLC
1201  LIMDS0     SS7ANSI    LS1            A   0   LS1            B   1
                        LS1            A1  2   LS1            B1  3
                        LS1            A2  4   LS1            B2  5
                        LS1            A3  6   LS1            B3  7
1202  LIMDS0     SS7ANSI    LS2            A   0   LS3            B   0
                        ----- A1  --  LS3            B1  1
                        LS2            A2  1   LS2            B2  2
                        ----- A3  --  ----- B3  --
1203  LIMDS0     SS7GX25    LS4            A   0   LS4            B   1
1204  LIMATM     ATMANSI    LS5            A   0   ----- B   --
1205  DCM        IPLIM      LS6            A   0   LS6            B   1
                        LS6            A1  1   LS6            B1  2
                        LS6            A2  4   LS6            B2  5
                        LS6            A3  6   LS6            B3  7
1102  DSM        VSCCP     ----- A   --  ----- B   --
1113  GPSM        OAM
1114  TDM-A
1115  GPSM        OAM
1116  TDM-B
1117  MDAL
;
```

The following example includes an IPSM card:

rtrv-card

```
rlghncxa03w 04-01-15 16:34:56 EST EAGLE 31.3.0
CARD  TYPE      APPL      LSET NAME      LINK SLC  LSET NAME      LINK SLC
1201  LIMDS0     SS7ANSI    LS1            A   0   LS1            B   1
1202  LIMDS0     SS7ANSI    LS2            A   0   LS3            B   0
                        ----- A1  --  LS3            B1  1
                        LS2            A2  1   LS2            B2  2
                        ----- A3  --  ----- B3  --
1203  LIMDS0     SS7GX25    LS4            A   0   LS4            B   1
1204  LIMATM     ATMANSI    LS5            A   0   ----- B   --
1205  DCM        IPLIM      LS6            A   0   LS6            B   1
1103  IPSM        IPS
1113  GPSM        OAM
1114  TDM-A
1115  GPSM        OAM
```

```

1116   TDM-B
1117   MDAL

```

```
;
```

The following example includes an SSEDCM card used as an IPLIM to 8 Points card:

rtrv-card

```

tekelecstp 04-01-17 15:09:32 EST  EAGLE 31.3.0
CARD  TYPE      APPL      LSET NAME      LINK SLC  LSET NAME      LINK SLC
1201   LIMDS0    SS7ANSI    LS1           A      0      LS1           B      1
                        LS1           A1     2      LS1           B1     3
                        LS1           A2     4      LS1           B2     5
                        LS1           A3     6      LS1           B3     7
1204   LIME1ATM  ATMITU    LS2           A      0      -----      --    --
1205   LIMATM    ATMANSI    LS5           A      0      -----      --    --
1113   GPSM      OAM
1114   TDM-A
1115   GPSM      OAM
1116   TDM-B
1117   MDAL

```

```
;
```

The following example shows the output for an SSEDCM card are used as an IPLIM to 8 Points card:

rtrv-card: loc=1204

```

tekelecstp 04-01-17 15:09:32 EST  EAGLE 31.3.0
CARD  TYPE      APPL      LSET NAME      LINK SLC  LSET NAME      LINK SLC
1204   LIME1ATM  ATMITU    LS2           A      0      -----      --    --

```

```
;
```

The following example shows output for an E5-SM4G or VSCCP card.

rtrv-card: loc=6111

```

tklcl1110501 07-04-12 17:33:25 EST  EAGLE5 37.0.0
CARD  TYPE      APPL      LSET NAME      LINK SLC  LSET NAME      LINK SLC
6111   DSM       VSCCP

```

```
;
```

The following example includes an E5-STC card.

rtrv-card

```

tekelecstp 07-05-03 13:19:01 GMT  EAGLE 37.0.0
CARD  TYPE      APPL      LSET NAME      LINK SLC  LSET NAME      LINK SLC
1101   TSM       GLS
1103   DCM       IPLIM      ls392         A      1
1108   DCM       STPLAN
1111   STC       EROUTE
1112   STC       EROUTE
1113   GPSM      OAM
1114   TDM-A
1115   GPSM      OAM
1116   TDM-B
1117   MDAL
1208   DCM       STPLAN

```

```
;
```

The following example includes output for an E5-SLAN card.

rtrv-card

```

tekelecstp 07-05-03 13:19:01 GMT  EAGLE 37.0.0
CARD  TYPE      APPL      LSET NAME      LINK SLC  LSET NAME      LINK SLC
1101   TSM       GLS
1103   DCM       IPLIM      ls392         A      1
1108   DCM       STPLAN

```

```

1111   STC      EROUTE
1112   STC      EROUTE
1113   GPSM     OAM
1114   TDM-A
1115   GPSM     OAM
1116   TDM-B
1117   MDAL
1208   DCM      STPLAN

```

```
;
```

The following example lists unequipped links on the provisioned cards.

rtrv-card: links=unequip

```

stdcfg1a 07-05-24 14:04:54 EST 37.0.0
CARD  TYPE      APPL      UNEQUIPPED LINKS
1101  LIMDS0    SS7ANSI    A1  B1  B3
1102  LIMDS0    SS7ANSI    A1  B1  A2  B2  A3  B3
1103  LIMDS0    SS7ANSI    A1  A2  A3
1113  GPSM      OAM
1114  TDM-A
1115  GPSM      OAM
1116  TDM-B
1117  MDAL

```

```
;
```

rtrv-card: links=ipsg

```

e1001501 08-02-23 16:20:42 EST EAGLE 38.0.0
CARD  TYPE      APPL      LSET NAME    LINK SLC    SLKTPS
1105  ENET      IPSG      e1e2sg1      A    0        410
                e1e2sg1      B    4        410
                e1e2sg1      A1   1        410
                e1e2sg1      B1   5        410
                e1e2sg1      A2   2        410
                e1e2sg1      B2   6        410
                e1e2sg1      A3   3        410
                e1e2sg1      B3   7        410
                Total SLKTPS is (3280 of 5000) 66%
1211  ENET      IPSG      ls1211a      A    0        500
                ls1211b      A1   0        600
                ls1211b      B1   1        600
                ls1211c      A2   0        700
                lsm3ua1      A3   0        1600
                Total SLKTPS is (4000 of 5000) 80%
1213  ENET      IPSG      ls1213a      A    0        800
                ls1213b      A1   0        900
                ls1213c      A2   0       1000
                lsm3ua1      A3   1       1600
                Total SLKTPS is (4300 of 5000) 86%
1215  ENET      IPSG      m3ua01       A    0        10
                m3ua02       B    0        10
                m3ua03       A1   0        10
                m3ua04       B1   0        10
                m3ua05       A2   0        10
                m3ua06       B2   0        10
                m3ua07       A3   0        10
                m3ua08       B3   0        10
                m3ua09       A4   0        10
                m3ua10       B4   0        10
                m3ua11       A5   0        10
                m3ua12       B5   0        10
                m3ua13       A6   0        10
                m3ua14       B6   0        10
                m3ua15       A7   0        10
                m3ua16       B7   0        10
                Total SLKTPS is (160 of 5000) 3%

```

```

;
rtrv-card:links=ipsg:loc=1105
e1001501 08-02-23 16:20:42 EST EAGLE 38.0.0
CARD TYPE APPL LSET NAME LINK SLC SLKTPS
1105 ENET IPSG e1e2sg1 A 0 410
               e1e2sg1 B 4 410
               e1e2sg1 A1 1 410
               e1e2sg1 B1 5 410
               e1e2sg1 A2 2 410
               e1e2sg1 B2 6 410
               e1e2sg1 A3 3 410
               e1e2sg1 B3 7 410
Total SLKTPS is (3280 of 5000) 66%

```

```

;
The following example includes output for an E5-ATM card.

```

```

rtrv-card
tekelecstp 08-01-01 10:18:26 EST EAGLE 38.0.0
CARD TYPE APPL LSET NAME LINK SLC LSET NAME LINK SLC
1101 LIMATM ATMANSI lsa453 A 0 lsa453 B 1
1102 LIME1ATM ATMITU lsi453 A 0
1103 LIMATM ATMANSI lsa111 A 0
1105 LIMT1 SS7ANSI lsa444 A 0
1106 LIME1 CCS7ITU
1111 DCM IPLIM lsaftp A 0
1113 GPSM OAM
1114 TDM-A
1115 GPSM OAM
1116 TDM-B
1117 MDAL

```

```

;
The following example includes output for an E5-ATM card.

```

```

rtrv-card:loc=1101
tekelecstp 08-01-01 10:19:14 EST EAGLE 38.0.0
CARD TYPE APPL LSET NAME LINK SLC LSET NAME LINK SLC
1101 LIMATM ATMANSI lsa453 A 0 lsa453 B 1

```

```

;
The following example includes IPSG cards.

```

```

rtrv-card
eagle10110 08-03-15 18:53:18 EST EAGLE 38.0.0

CARD TYPE APPL LSET NAME LINK SLC LSET NAME LINK SLC
1105 IPSM IPS
1107 DCM SS7IPGW lgipgw A 1
1113 GPSM OAM
1114 TDM-A
1115 GPSM OAM
1116 TDM-B
1117 MDAL
1201 LIMDS0 SS7ANSI e5m5s1 A 0 e5m5s2 B 0
1202 LIMDS0 SS7ANSI e5m5s1 A 1 e5m5s2 B 1
1203 LIMDS0 SS7ANSI e5m5s1 A 2 e5m5s2 B 2
1204 LIMDS0 SS7ANSI e5m5s1 A 3 e5m5s2 B 3
1205 LIMDS0 SS7ANSI e5m5s1 A 4 e5m5s2 B 4
1206 LIMDS0 SS7ANSI e5m5s1 A 5 e5m5s2 B 5
1207 LIMDS0 SS7ANSI e5m5s1 A 6 e5m5s2 B 6
1208 LIMATM ATMANSI e5m5s1 A 14
1211 LIMDS0 CCS7ITU e5m6s1 A 0 e5m6s2 B 0
1212 LIMDS0 CCS7ITU e5m6s1 A 1 e5m6s2 B 1

```

1213	LIMDS0	CCS7ITU	e5m6s1	A	2	e5m6s2	B	2
1214	LIMDS0	CCS7ITU	e5m6s1	A	3	e5m6s2	B	3
1215	LIMDS0	CCS7ITU	e5m6s1	A	4	e5m6s2	B	4
1216	LIMDS0	CCS7ITU	e5m6s1	A	5	e5m6s2	B	5
1217	LIMDS0	CCS7ITU	e5m6s1	A	6	e5m6s2	B	6
1218	LIMATM	ATMANSI	e5m5s1	A	15			
1301	ENET	IPSG	ls1301a	A	0	ls1301a	B	1
			e5e6b	A4	0	e5e6b	B4	1
			e5e6b	A5	2	e5e6b	B5	3
			e5e6b	A6	4	e5e6b	B6	5
			e5e6b	A7	6	e5e6b	B7	7
			e5e6b	A8	8	e5e6b	B8	9
			e5e6b	A9	10	e5e6b	B9	11
			e5e6b	A10	12	e5e6b	B10	13
			e5e6b	A11	14	e5e6b	B11	15
1303	ENET	IPSG	ls1303a	A	0	ls1303a	B	1
			ls1303a	A1	2	ls1303a	B1	3
			ls1303a	A2	4	ls1303a	B2	5
			ls1303a	A3	6	ls1303a	B3	7
			ls1303c	A4	1	ls1303c	B4	2
			ls1303c	A5	3	ls1303c	B5	4
			ls1303c	A6	5	ls1303c	B6	6
			ls1303c	A7	7	ls1303c	B7	8
1304	ENET	IPSG	e5e6m2pa	A	0	e5e6m2pa	B	1
			e5e6iii	A1	0	m3ua	B1	0
			m3ua	B2	1	m3ua	B3	2
			m3ua	B4	3			
1305	ENET	IPSG	ls1303b	A	0	ls1305a	B	0
			ls1305a	B1	1	ls1305b	B2	0
1306	LIME1	CCS7ITU	ls130601	A	0	ls130602	B	0
1307	DCM	SS7IPGW	ls1307a	A	0			
1308	DCM	SS7IPGW	lgipgw	A	0			
1311	DCM	IPLIM	e5e6a	A	0	e5e6a	B	2
			e5e6a	A1	4	e5e6a	B1	6
			e5e6a	A2	8	e5e6a	B2	10
			e5e6a	A3	12	e5e6a	B3	14
1313	DCM	IPLIMI	e5e6i	A	1	e5e6i	B	3
1314	ENET	IPSG	a	A	0			
1315	DCM	SS7IPGW	ls1315a	A	0			
1316	DCM	IPGWI	lsipgw	A	0			
1317	DCM	IPGWI	ls1317i	A	0			

;

Legend**CARD**—The card location as stenciled on the shelf of the system.**TYPE**—The type of card. (The DCM and SSED CM cards are card type DCM).**APPL**—The application associated with each card in the display.**LSET NAME**—The linkset name associated with the cards in the display.**LINK**—The signaling link associated with the linkset. If the card is an MPL or MPL-T (TYPE is **limds0**, APPL is **ss7ansi**) or an E1/T1 MIM (TYPE can be **lime1**, **limt1**, or **limch**; APPL can be **ss7ansi** or **ccs7itu**), the card can support 8 ports (**a**, **a1**, **a2**, **a3**, **b**, **b1**, **b2**, and **b3**).**SLC**—The signaling link code.**UNEQUIPPED LINKS**—Signaling links that are unequipped on the provisioned card.**SLKTPS**—Transactions Per Second configured for signaling links provisioned on the card.

rtrv-clkopts**Retrieve Clock Options**

Use this command to retrieve the values of the clock parameters which are maintained in the STP's option table. All values are assigned initially to system defaults during STP installation, and can be updated using this command.

Keyword: **rtrv-clkopts**

Related Commands: **chg-clkopts**

Command Class: Database Administration

Parameters**Dependencies**

No parameters can be specified with this command.

Notes

None

Output

```

rtrv-clkopts
e5oam 09-01-02 17:20:05 MST  EAGLE 40.1.0
CLK OPTIONS
-----

PRIMARY
-----
HCLKSRC          rs422
HCLKLL           longhaul

SECONDARY
-----
HCLKSRC          rs422
HCLKLL           longhaul

;

rtrv-clkopts
e5oam 09-01-02 17:26:51 MST  EAGLE 40.1.0
CLK OPTIONS
-----

PRIMARY
-----
HCLKSRC          rs422
HCLKLL           longhaul

SECONDARY
-----
HCLKSRC          rs422
HCLKLL           shorthaul

;

```

rtrv-cmd**Retrieve Command Attributes**

Use this command to retrieve the list of command classes to which a command is assigned. You can retrieve output for one command, commands in one command class, or all commands.

Keyword: **rtrv-cmd**

Related Commands: **chg-cmd**

Command Class: Basic

Parameters

:class= (optional)

The command class whose attributes are to be retrieved.

Range: *ayyyyy*

One alphabetic character followed by up to 5 additional alphanumeric characters.

:cmd= (optional)

The command whose attributes are to be retrieved.

Range: *zzzzzzzzzzzzzzzzzzzzzz*

One alphabetic character followed by up to 19 additional alphanumeric characters, enclosed in double quotes.

Example

```
rtrv-cmd:cmd="ent-rte"
```

```
rtrv-cmd:class=dab
```

```
rtrv-cmd
```

Dependencies

The Command Class Management feature must be enabled before a configurable command class name can be specified in the **class** parameter.

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before a command from the LNPBAS class can be specified in the **cmd** parameter or before the **class=lnpbas** parameter can be specified.

The value of the **cmd** parameter must be a valid system command.

The value of the **class** parameter must be a valid configurable or non-configurable command class name.

The Command Class Management feature must be enabled before CHG-CMD or CHG-CMDCLASS command can be entered.

Notes

This command can be canceled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

Output

The following example shows the command classes to which the **rept-stat-slk** command is assigned (non-configurable class **sys** and user-configured classes **u01**, **u02**, **krb**, and **u11**):

```
rtrv-cmd:cmd="rept-stat-slk"
  eagle10404 04-01-22 16:30:56 EST  EAGLE 31.3.0
  cmd          CLASS
  rept-stat-slk sys, u01, u02, krb, u11

;
```

The following example shows the commands assigned to user-configured command class **krb**:

```
rtrv-cmd:class=krb
  eagle10404 04-01-22 16:30:56 EST  EAGLE 31.3.0
  CMD          CLASS
  rept-stat-slk sys, u01, u02, krb, u11
  act-slk       link, u09, krb
  ent-user      sa, krb, abc, u23
  alw-card      sys, u09 dab, krb

;

rtrv-cmd:class=link
  eagle10404 04-01-22 16:30:56 EST  EAGLE 31.3.0
  CMD          CLASS
  alw-slk       link, u11
  unhb-slk      link
  inh-slk       link, abc
  rtrv-meas-sched link, abc, def
  act-lbp       link
  act-dlk       link
  act-slk       link
  act-lpo       link
  blk-slk       link, abc, u23, u31
  dact-lbp      link
  canc-dlk      link
  cancel-lpo    link, u01, u02, u03, u04, u05, u06, u07, u08, u09, u10,
  u11, u12, u13
  cancel-slk    link
  ublk-slk      link, u01, u02, u03, u04, u05, u06, u07, u08, u09, u10,
  u11, u12, u13, u14, u15, u16, u17, u18, u19, u20, u21,
  u22, u23, u24, u25, u26, u27, u28, u29, u30, u31, u32
  rept-x25-meas link
  rept-meas     link
  chg-meas      link
  tst-dlk       link, krb
  tst-slk       link

;

rtrv-cmd
  eagle10404 04-01-22 16:30:56 EST  EAGLE 31.3.0
  CMD          CLASS
  alw-slk       link, u11
  ent-user      sa
  unhb-slk      link
  rtrv-attr-secu log sa, u31
  inh-slk       link, abc
  rtrv-meas-sched link, abc, def
  act-lbp       link
  act-dlk       link
  act-slk       link
  rtrv-secu log sa, abc, def, ghi
  act-lpo       link
```



```

blk-slk          link, abc, u23, u31
dact-lbp         link
canc-dlk         link
inh-card         sys
canc-lpo         link, u01, u02, u03, u04, u05, u06, u07, u08, u09, u10,
                u11, u12, u13
canc-slk         link
ublk-slk         link, u01, u02, u03, u04, u05, u06, u07, u08, u09, u10,
                u11, u12, u13, u14, u15, u16, u17, u18, u19, u20, u21,
                u22, u23, u24, u25, u26, u27, u28, u29, u30, u31, u32
rept-x25-meas    link
inh-trm          sys, krb
rept-meas        link
.
.
.
chg-meas         link
tst-dlk          link, krb
tst-slk          link
;

```

rtrv-cmdclass**Retrieve Command Class**

Use this command to retrieve the name and description of one command class or all command classes.

Keyword: **rtrv-cmdclass**

Related Commands: **chg-cmdclass**

Command Class: Basic

Parameters

:class= (optional)

The command class whose name and description are to be retrieved.

Range: *ayyyyy*

1 alphabetic character followed by up to 5 alphanumeric characters

Example

```
rtrv-cmdclass: class=krb
```

```
rtrv-cmdclass
```

Dependencies

The Command Class Management feature must be enabled and turned on before a configurable command class name can be specified in the **class** parameter.

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before the **class=lnpbas** parameter can be specified.

The value of the **class** parameter must be a valid configurable or non-configurable command class name.

Notes

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before class LNPBAS will appear in the command output.

The Command Class Management feature must be enabled and turned on before configurable command classes will appear in the command output.

Output

In the following examples, the classes u01, u03, u05, and u32 are default configurable command class names. The classes krb and dab are user-assigned configurable command class names; the user changed default configurable command class name u02 to krb and changed default configurable command class name u04 to dab. The descriptions of classes krb and dab were entered with the **descr** parameter when the class names were changed with the **chg-cmdclass** command.

```
rtrv-cmdclass: class=krb
    eagle10404 04-01-22 16:30:56 EST  EAGLE 31.3.0
    class          descr
    krb            my command class description
;

rtrv-cmdclass
    eagle10404 04-01-22 16:30:56 EST  EAGLE 31.3.0
    class          descr
    link           link maintenance commands
    sa             security administration commands
    sys            system maintenance commands
    .
    .
    .
    u01            configurable command class 1
    krb            my command class description
    u03            configurable command class 3
    dab            your command class description
    u05            configurable command class 5
    .
    .
    .
    u32            configurable command class 32
;

```

rtrv-csl

Retrieve Common Screening List

Use this command to retrieve all Common Screening List (CSL) entries for a specified feature, a list of screening entries for the specified feature and screening list name, or a specific DS or PC value for a particular feature and screening list name. The Common Screening List commands are used to tailor certain types of general screening information to specific features.

Keyword: **rtrv-csl**

Related Commands: **dlt-csl, ent-csl, rtrv-csl, rtrv-ctrl-feat**

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:ds= (optional)

Digit string. This parameter specifies a unique string of digits that is used by the specified screening feature.

NOTE: Either the **ds** parameter or the **pc** parameter must be specified. Both parameters cannot be specified in the same command.

Range: 1-15 digits

Valid digits are **0-9, a-f, A-F**.

1-15 digits—Prepaid IDP Query Relay **ccnc** list

1-6 digits—Prepaid IDP Query Relay **gta** list

1-10 digits—Prepaid IDP Query Relay **skbcsm** list

4 digits—IDP Screening for Prepaid **skts** list

1-15 digits—IDP Screening for Prepaid **insl** list

1-6 digits—TINP **acscode** and **esccode** lists

1-15 digits—V-Flex **vmpfx** list

:feature= (optional)

Feature name. This parameter specifies the name of the screening feature for which the command is entered.

Either the **pn** parameter or the **feature** parameter must be specified to identify the feature.

Range: *abcdefghijklmnopqrstuvwxyz*

1 alphabetic character followed by up to 24 optional alphanumeric characters, including spaces and special characters, enclosed in double quotation marks (" ").

- IDP Screening for Prepaid
- Prepaid IDP Query Relay
- TIF Number Portability
- V-Flex

NOTE: If the TINP feature was enabled before upgrading to Release 39.2, then the TIF Number Portability value can be used to access functionality for the TINP feature. If TINP was not enabled prior to upgrade, then the TIF Number Portability value accesses functionality for only the TIF Number Portability feature.

:list= (optional)

The name of the Common Screening List that is associated with the feature.

The **list** parameter must be specified when the feature uses more than one type of Common Screening List.

Range: **gt, skbcsm, ccnc, skts, insl, acscode, esccode, npflgrst, vmpfx**

gt—Global Title List

skbcsm—SK+BCSM List

ccnc—CC+NC List

skts—SK+TS List

insl—In Network Subscriber List

acscode—Access Code List

esccode—Escape Code List

npflgrst—NP Flag Reset List

vmpfx—Voice Mail Prefix List

The following screening lists are valid for the indicated features:

- **skts, insl**—IDP Screening for Prepaid
- **ccnc, gt, skbcsm**—Prepaid IDP Query Relay
- **npflgrst**—TIF Number Portability
- **acscode, esccode, npflgrst**—TINP

- **vmpfx**—V-Flex feature

:pc= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Synonym: **pca**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:pc/pca/pci/pcn/pcn24= (optional)

Point code. Either the **ds** or a point code parameter must be specified.

:pci= (optional)

ITU international point code with subfields *zone-area-id*.

Range: **0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

The point code **0-000-0** is not a valid point code.

zone—**0-7**

area—**000-255**

id—**0-7**

:pcn= (optional)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfnti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:pcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—000–255

:pn= (optional)

Part Number. The 9-digit "893xxxxxx" part number of the feature for which the command is entered. The **rtrv-ctrl-feat** command description shows the part number in the command output example. Either the **pn** parameter or the **feature** parameter must be specified to identify the feature.

Range: 893000000-893999999

The first 3 digits are **893**. Do not separate the digits with dashes or spaces. The following part numbers are valid for this command:

- 893015501—IDP Screening for Prepaid
- 893016001—Prepaid IDP Query Relay
- 893018901—TIF Number Portability
- 893016701—V-Flex

NOTE: If the TINP feature was enabled before upgrading to Release 39.2, then part number 893018901 can be used to access functionality for the TINP feature. If TINP was not enabled prior to upgrade, then part number 893018901 accesses functionality for only the TIF Number Portability feature.

Example

rtrv-csl

rtrv-csl:feature="Prepaid IDP Query Relay":list=ccnc:ds=456789

rtrv-csl:feature="Prepaid IDP Query Relay":list=ccnc

rtrv-csl:feature="IDP Screening for Prepaid":list=insl:ds=123456789abcdEF

Dependencies

The value specified for the **feature** parameter must be a valid feature name for a feature that uses a Common Screening List. The feature must be specified as it appears in the **rtrv-ctrl-feat** command output. Enough of the name must be specified to make the name unique when two features begin with the same word or acronym. The specified feature name must be valid for a feature that uses a Common Screening List.

The value specified for the **list** parameter value must be valid for the specified screening feature. The following **list** parameter values are valid for the indicated feature:

- **skts, insl**—IDP Screening for Prepaid
- **ccndc , gt, skbcsm**—Prepaid IDP Query Relay
- **npflgrst**—TIF Number Portability
- **acscode, escrcode, npflgrst**—TINP
- **vmpfx**—V-Flex feature

The following parameters are allowed with the indicated common screening list type:

- **list=gt—ds** parameter
- **list=ccndc—ds** parameter
- **list=skbcsm—ds** parameter
- **list=skts—ds** parameter

- **list=insl—ds** parameter
- **list=vmpfx —ds** parameter
- **list=acscode—ds** parameter
- **list=esccode—ds** parameter
- **list=npflgrst—pc/pca/pci/pcn/pcn24** parameter

The **pc** and **ds** parameters cannot be specified together in the command.

Notes

None

Output

Retrieve the specified screening entry for the the specified feature and screening list.

rtrv-csl:feature="Prepaid IDP Query Relay":list=ccnc:ds=456789

tekelecstp 05-07-12 08:45:21 EST EAGLE 34.1.0

Prepaid IDP Query Relay

CC+NC List

DS

456789

CC+NC List table is (1 of 20) 5% full

;

Retrieve all screening entries for the specified feature and screening list.

rtrv-csl:feature="Prepaid IDP Query Relay":list=ccnc

tekelecstp 05-07-12 08:44:50 EST EAGLE 35.0.0

Prepaid IDP Query Relay

CC+NC List

DS

123

456789

754532

CC+NC List table is (3 of 20) 15% full

;

rtrv-csl:feature="IDP Screening for Prepaid"

tekelecstp 05-07-12 08:44:50 EST EAGLE 34.3.0

IDP Screening for Prepaid

SK+TS List

DS

1233

1234

SK+TS List table is (2 of 25) 8% full

IDP Screening for Prepaid

INSL List

DS

1233

1235

123456789012345

INSL List table is (3 of 50) 6% full

;

rtrv-csl:feature="IDP Screening for Prepaid":list=skts

tekelecstp 05-07-12 08:44:50 EST EAGLE 34.3.0

IDP Screening for Prepaid

SK+TS List

DS

1233

1234

SK+TS List table is (2 of 25) 8% full

;

rtrv-csl:feature="TIF Number Portability"

tekelecstp 08-09-29 15:19:59 EST EAGLE 39.2.0

TIF Number Portability

TINP AcscCode List

DS	Type
044	none
b001	none
b002	none

TINP AcscCode List (3 of 50) 6%

TIF Number Portability

TINP EscCode List

DS
00
09
b7
045
101
202

TINP EscCode List (6 of 20) 30%

TIF Number Portability

TIF NPFlgRst List

PC
PCA
001-001-001

TIF NPFlgRst List (1 of 50) 2%

TIF Number Portability

TIF NPFlgRst List

PC
PCA
001-001-001

TIF NPFlgRst List (1 of 50) 2%

;

rtrv-csl:pn=893016701:list=vmpfx

tekelecstp 07-08-23 17:30:17 EST EAGLE 37.6.0

VFLEX

VM Prefix List

DS
12
123
12345
123456789abcdef

VM Prefix List table is (4 of 100) 4% full

;

rtrv-csl:feature="VFLEX":list=vmpfx

tekelecstp 07-08-23 17:30:17 EST EAGLE 37.6.0


```

VFLEX
VM Prefix List
DS
-----
12
123
12345
123456789abcdef

VM Prefix List table is (4 of 100) 4% full

;

rtrv-csl:feature="Prepaid IDP Query Relay"
tekelecstp 08-05-12 08:44:50 EST EAGLE 39.0.0
Prepaid IDP Query Relay
CC+NC List
DS
-----
123
456789
754532

CC+NC List table is (3 of 20) 15% full

Prepaid IDP Query Relay
GT List
DS
-----
4567890123abcde

GT List table is (1 of 50) 2% full

Prepaid IDP Query Relay
SK+BCSM List
DS
-----
9876543210
1234598765

SK+BCSM List table is (2 of 25) 8% full

;

rtrv-csl
tekelecstp 09-02-21 15:18:41 EST EAGLE 40.1.0
Prepaid IDP Query Relay
SK+BCSM List
DS
-----
3104
3212
4323
5434
6545
7566

SK+BCSM List table is (6 of 25) 24% full

Prepaid IDP Query Relay
GT List
DS
-----
234
354

```

678
765
789
987

GT List table is (6 of 50) 12% full

Prepaid IDP Query Relay
CC+NC List
DS

7848
24574
67547
224723
656354
546535

CC+NC List table is (6 of 20) 30% full

IDP Screening for Prepaid
SK+TS List
DS

1233
1234

SK+TS List table is (2 of 25) 8% full

IDP Screening for Prepaid
INSL List
DS

1233
1235

INSL List table is (3 of 50) 6% full

rtrv-cspc

Retrieve Concerned Signaling Point Code

Use this command to show one or more lists of concerned signaling point codes that are to be notified when subsystem-prohibited or subsystem-allowed messages are received for an associated mate application.

Keyword: rtrv-cspc

Related Commands: dlt-cspc, ent-cspc

Command Class: Database Administration

Parameters

:grp= (optional)

Group name

Range: ayyyyyyy

1 alphabetic character followed by up to 7 alphanumeric characters

Default: Retrieve all.

Example

rtrv-cspc

rtrv-cspc:grp=grp01

Dependencies

If specified, the group name must exist in the database.

Notes

If no group parameter is specified, a summary list of group names is displayed with an indication of network type and a percent full indication for each group.

Output

When the ANSI-ITU-China SCCP Conversion feature is on, point codes from mixed domains are allowed in a group.

rtrv-cspc

```
rlghncxa03w 04-01-07 11:43:02 EST EAGLE 31.3.0
CSPC GRP NETWORK PERCENT FULL
Grp01 ANSI 2%
Grp02 ANSI, ITU, ITU-N24 3%
Grp03 ITU 2%
```

;

When the Spare Point Code Support feature is on, groups can include spare point codes with the **s-** prefix. The ANSI-ITU-China SCCP Conversion feature is on in this example.

rtrv-cspc:grp=grp02

```
rlghncxa03w 05-01-07 11:43:02 EST EAGLE 31.12.0
CSPC GRP PC Type
GRP02 001-012-123 A
      001-012-124 A
      7-089-0 I
      s-2-021-4 I
      s-00789 N
```

;

When the ANSI-ITU-China SCCP Conversion feature is not on, point codes from only one domain are allowed in a group.

rtrv-cspc

```
rlghncxa03w 04-01-07 11:43:02 EST EAGLE 31.3.0
CSPC GRP NETWORK PERCENT FULL
Grp01 ANSI 2%
Grp03 ITU 2%
```

;

When the Spare Point Code Support feature is on, groups can include spare point codes with the **s-** prefix. The ANSI-ITU-China SCCP Conversion feature is not on in this example.

rtrv-cspc:grp=groupi

```
rlghncxa03w 05-01-07 11:43:02 EST EAGLE 31.12.0
CSPC GRP PCI
groupi 7-089-0
      s-2-021-4
```

;

Legend

CSPC PC TABLE IS 15% FULL—The relative size of the CSPC point code tables.

CSPC GRP—The name of the CSPC broadcast group.

NETWORK—The network type or types associated with the point code or codes in the group. (When no parameters are specified in the command, only the groups are listed. The **grp** parameter must be specified to list the point codes in the specified group.)

PERCENT FULL—The relative size of the CSPC broadcast group.

PC—The point codes that make up the CSPC broadcast group.

TYPE—The network type of the point code in the group. (The **grp** parameter is specified in the command to list the point codes in the specified group.)

rtrv-ctrl-feat**Retrieve Controlled Feature**

Use this command to retrieve the status of feature access key controlled features that are purchased and enabled in the system.

Keyword: **rtrv-ctrl-feat**

Related Commands: **chg-ctrl-feat, enable-ctrl-feat**

Command Class: Database Administration

Parameters

:enable= (optional)

Retrieve controlled features that are enabled with either temporary feature access keys or permanent feature access keys.

Range: **temp, perm**

Default: Retrieve controlled features for both temporary and permanent feature access keys

:expired= (optional)

Retrieve controlled features with expired temporary feature access keys.

Range: **yes, no**

Default: **no**

:partnum= (optional)

The Part Number to retrieve or the command.

Range: **893000000 - 893999999**

Do not include dashes in the 9-digit number.

Default: Retrieve all controlled features

:status= (optional)

Retrieve features with the specified status (On or Off).

Range: **on, off**

Default: Retrieve features with On and Off status

Example

```
rtrv-ctrl-feat
```

```
rtrv-ctrl-feat:partnum=893000110
```

```
rtrv-ctrl-feat:enable=perm
```

Dependencies

None

Notes

When the **enable=perm** parameter is specified, the **expired** parameter value is understood to be **no**.

The product right-to-use features (EAGLE5, EAGLE, and IP⁷) are not mutually exclusive. The hierarchy for product right-to-use features is EAGLE5, then EAGLE, then IP⁷. This means that if the EAGLE5 feature is on, the product is EAGLE5 regardless of the setting of the other product right-to-use features. Some EAGLE 5 ISS features require that a specific product right-to-use feature is enabled and turned on.

For systems being upgraded, the product right-to-use feature for the specific product is turned on. For example, upgrading from an EAGLE 5 ISS release in a system that uses no EAGLE 5 features to a release that uses at least one EAGLE 5 feature causes the EAGLE 5 product right-to-use feature to be enabled and turned on during the conversion.

For new installation, no product right-to-use features are on. The appropriate product right-to-use feature for the highest required product in the hierarchy must be enabled and turned on.

Output

The following output examples will differ from the output shown at your terminal and might include features that are not supported in your system. A feature must be purchased before you can enable the feature and turn the feature on. If you are not sure whether you have purchased a feature, contact your Tekelec Sales Representative or Account Representative.

If a Part Number (**partnum** parameter) is entered that belongs to a feature associated with quantity, the output will show which quantity is currently enabled on the system, even if the specified Part Number is for a different quantity. The output will also include the temporary enabled information, if applicable.

rtrv-ctrl-feat

rlghncxa03w 09-01-09 16:40:40 EST EAGLE 40.1.0

The following features have been permanently enabled:

Feature Name	Partnum	Status	Quantity
HC-MIM SLK Capacity	893012707	on	64
Command Class Management	893005801	on	----
LNP Short Message Service	893006601	on	----
Prepaid SMS Intercept Ph1	893006701	on	----
Intermed GTT Load Sharing	893006901	on	----
MNP Circ Route Prevent	893007001	on	----
XGTT Table Expansion	893006101	on	400000
XMAP Table Expansion	893007710	on	3000
Large System # Links	893005910	on	2000
Routesets	893006403	on	8000
EAGLE5 Product	893007101	on	----
EAGLE Product	893007201	off	----
IP7 Product	893007301	off	----
Network Security Enhance	893009101	off	----
Telnet	893005701	on	----
Port Chk for MO SMS	893009301	on	----
SCCP Loop Detection	893016501	off	----
LNP ELAP Configuration	893010901	on	----
LNP ported TNs	893011036	on	384000000
LNP ported LRNs	893010501	on	200000
LNP ported NPANXXs	893009402	on	350000
15 Minute Measurements	893012101	off	----
EIR	893012301	on	----
EAGLE OA&M IP Security	893400001	off	----
SCCP Conversion	893012001	on	----
SE-HSL SLK Capacity	893013005	on	64
GSM Map Screening (GMS)	893013201	on	----
Enhanced GMS (EGMS)	893012401	on	----
MTP MAP Screening	893013501	on	----
Spare Point Code Support	893013601	on	----
GSM MAP SRI Redirect	893014001	on	----
ISUP NP with EPAP	893013801	on	----
Origin-Based MTP Routing	893014201	on	----
ITUN-ANSI SMS Conversion	893015301	on	----
Flexible GTT Load-Sharing	893015401	on	----
1100 TPS/DSM for ITU NP	893018001	off	----
IDP Screening for Prepaid	893015501	on	----
Prepaid IDP Query Relay	893016001	on	----
Origin Based SCCP Routing	893014301	on	----
GPort SRI Query for PP	893017701	off	----
Lrg BICC MSU for IP Sig	893018401	off	----
Transaction Based GTT LS	893017101	on	----
Weighted GTT Loadsharing	893017001	off	----
Hex Digit Support for GTT	893018501	on	----
SEAS over IP	893018801	on	----
E5-SM4G Throughput Cap	893019101	on	----

```

Circ Route Auto-Recovery 893017601 on ----
Enhanced Far-End Loopback 893018101 on ----
Multiple Linkset to APC 893019701 on ----
Proxy Point Code 893018710 on 100
GPORT 893017201 on ----
APORT 893016601 on ----
IS41 GSM Migration 893017301 off ----
MTP Msgs for SCC Apps 893017401 off ----
INP 893017901 on ----
ANSI-41 INP Query 893017801 on ----
MO-based GSM SMS NP 893019401 on ----
MO-based IS41 SMS NP 893019501 on ----
MO SMS B-Party Routing 893024601 on ----
AMGTT 893021801 on ----
MT-Based GSM SMS NP 893020001 on ----
MT-Based GSM MMS NP 893024101 on ----
MT-Based IS41 SMS NP 893019901 on ----
G-Flex MAP Layer Routing 893021701 on ----
G-Flex 893021901 on ----
VFLEX 893016701 on ----
IDPR ASD 893025701 on ----
IDPR GRN 893025601 on ----
TIF ASD 893024501 on ----
TIF GRN 893025501 on ----
TIF Number Portability 893018901 on ----
TIF SCS Forwarding 893022201 on ----
TIF Simple Number Subst. 893024001 on ----
MO SMS IS41-to-GSM Migr 893026201 on ----
ISLSBR 893026501 on ----
ITU TCAP LRN QUERY(LRNQT) 893026301 on ----
TIF Number Portability 893018901 on ----
TIF SCS Forwarding 893022201 on ----
TIF Simple Number Subst. 893024001 on ----
ATINP 893022101 off ----
MO SMS ASD 893026701 on ----
MO SMS GRN 893026601 on ----
GTT LS ARI 893027401 off ----
;

```

The following features have been temporarily enabled:

Feature Name	Partnum	Status	Quantity	Trial Period Left
MNP Circ Route Prevent	893007001	On	----	20 days 8 hrs 57 mins

The following features have expired temporary keys:

Feature Name	Part Num
OnOffFeatV	

;

rtrv-ctrl-feat:enable=perm

rlghncxa03w 09-01-09 16:40:40 EST EAGLE 40.1.0

The following features have been permanently enabled:

Feature Name	Partnum	Status	Quantity
15 Minute Measurements	893012101	off	----
Command Class Management	893005801	on	----
EAGLE OA&M IP Security	893400001	off	----
EAGLE Product	893007201	on	----
EAGLE5 Product	893007101	off	----
Enhanced GMS (EGMS)	893012401	on	----
MNP Circ Route Prevent	893007001	on	----
GSM Map Screening (GMS)	893013201	on	----
Intermed GTT Load Sharing	893006901	on	----
IP7 Product	893007301	on	----
Large System # Links	893005910	on	2000

LNP ELAP Configuration	893010901	on	----
MTP MAP Screening	893013501	on	----
Network Security Enhance	893009101	on	----
Port Chk for MO SMS	893009301	on	----
Prepaid SMS Intercept Ph1	893006701	on	----
Routesets	893006401	on	6000
SCCP Conversion	893012001	on	----
SE-HSL SLK Capacity	893013005	on	32
Spare Point Code Support	893013601	on	----
ITUN-ANSI SMS Conversion	893015301	on	----
Flexible GTT Load-Sharing	893015401	on	----
Telnet	893005701	on	----
XGTT Table Expansion	893006101	on	400000
XMAP Table Expansion	893007710	on	3000
Origin-Based MTP Routing	893014201	on	----
IDP Screening for Prepaid	893015501	on	----
Origin Based SCCP Routing	893014301	on	----
Transaction Based GTT LS	893017101	on	----
GPort SRI Query for PP	893017701	off	----
Lrg BICC MSU for IP Sig	893018401	off	----
Hex Digit Support for GTT	893018501	on	----
E5-SM4G Throughput Cap	893019101	on	----
AMGTT CgPA Upgrade	893021803	on	----
MT-Based GSM SMS NP	893020001	on	----
MT-Based GSM MMS NP	893024101	on	----
MT-Based IS41 SMS NP	893019901	on	----
G-Flex MAP Layer Routing	893021701	on	----
G-Flex	893021901	on	----
VFLEX	893016701	on	----
IDPR ASD	893025701	on	----
IDPR GRN	893025601	on	----
TIF ASD	893024501	on	----
TIF GRN	893025501	on	----
MO SMS B-Party Routing	893024601	on	----
MO SMS IS41-to-GSM Migr	893026201	on	----
ISLSBR	893026501	on	----
ITU TCAP LRN QUERY(LRNQT)	893026301	on	----
TIF Number Portability	893018901	on	----
TIF SCS Forwarding	893022201	on	----
TIF Simple Number Subst.	893024001	on	----
MO SMS ASD	893026701	on	----
MO SMS GRN	893026601	on	----
GTT LS ARI	893027401	off	----

;

rtrv-ctrl-feat:enable=temp

rlghncxa03w 04-07-29 16:40:40 EST EAGLE 31.6.0

The following features have been temporarily enabled:

Feature Name	Partnum	Status	Quantity	Trial Period Left
MNP Circ Route Prevent	893007001	On	----	20 days 8 hrs 57 mins

The following features have expired temporary keys:

Feature Name	Part Num
OnOffFeatV	893492401

;

rtrv-ctrl-feat:expired=yes

rlghncxa03w 04-02-29 16:40:40 EST EAGLE 31.3.0

The following features have expired temporary keys:

Feature Name	Part Num
OnOffFeatV	893492401

;

rtrv-ctrl-feat:partnum=893013201

rlghncxa03w 04-07-29 16:40:40 EST EAGLE 31.6.0

The following features have been permanently enabled:

Feature Name	Partnum	Status	Quantity
GSM Map Screening (GSM)	893013201	on	----

The following features have been temporarily enabled:

Feature Name	Partnum	Status	Quantity	Trial Period Left
Zero entries found.				

The following features have expired temporary keys:

Feature Name	Part Num
Zero entries found.	

;

rtrv-data-rtdb**Retrieve Data RTDB**

This command retrieves data from the RTDB on an active Service Module card. If the **loc** parameter is specified and the target card is an active Service Module card, the RTDB data is retrieved from that card. If the **loc** parameter is not specified, the data is retrieved on the active Service Module card that has the lowest IMT address. The RTDB status on the active Service Module card can be coherent or incoherent.

For LNP database items (TN) all Service Module cards are queried for the existence of the specified item. Either the Service Module card specified by the **loc** parameter or the Service Module card with the lowest IMT address returns full item information. Any remaining Service Module cards return either COHERENT or INCOHERENT if the item is found in the RTDB on the card.

Keyword: rtrv-data-rtdb**Related Commands:****Command Class:** Database Administration**Parameters****:dn=** (optional)

Dialed Number.

Range: 5-15 digits**:entity=** (optional)

Network Entity.

Range: 5-15 digits**:entitytype=** (optional)

Entity Type.

Range: **sp, rn, vmsid, grn****sp** — Service Provider: Any 10-digit TN**rn** — Routing Number: Any 10-digit TN**vmsid** — Voice Mail Server ID: Any 1-15 digit hexadecimal number**grn** — Generic Routing Number: Any 1-15 digit hexadecimal number**:imei=** (optional)

International Mobile Equipment Identity.

Range: 14 digits**:imsi=** (optional)

International Mobile Subscriber Identity.

Range: 5-15 digits

:loc= (optional)

The card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1117, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

:lrn= (optional)

Location Routing Number.

Range: 10 digits

:npanxx= (optional)

Numbering Plan Area.

Range: 6 digits

:tn= (optional)

Telephone Number.

Range: 10 digits

Example

rtrv-data-rtdb:tn=9194663133

rtrv-data-rtdb:npanxx=919466

rtrv-data-lrn=9194460000

rtrv-data-rtdb:imsi=12345

rtrv-data-rtdb:dn=12345

rtrv-data-rtdb:entity=abcdefabcdefabc

Retrieve DN information from a specific Service Module card.

rtrv-data-rtdb:dn=19195554444:loc=1107

Retrieve entity data from a specific Service Module card.

rtrv-data-rtdb:entity=12345:loc=1107

Dependencies

The specified card location must be equipped in the database.

At least one of the following parameters must be specified: **imsi**, **dn**, **entity**, **imei**, **entitytype**, **npanxx**, **lrn**, **tn**.

Only one of the **tn**, **lrn**, or **npanxx** parameters can be specified in the command.

If the **npanxx**, **lrn**, or **tn** parameter is specified, the LNP ELAP Configuration feature must be on.

If the AINPQ, EIR, G-Flex, G-Port, INP, Prepaid IDP Relay Query, Prepaid SMS Intercept Ph1 (PPSMS), or V-Flex feature is turned on, or the ATINP feature is enabled, then the **imsi**, **dn**, **entity**, **imei**, or **entitytype** parameter must be specified.

If the **imsi** parameter is specified, then the G-Flex feature or the EIR feature must be turned on.

The G-Flex, G-Port, or V-Flex feature must be turned on, or the ATINP feature must be enabled before the **entity** parameter can be specified.

If the **entitytype** parameter is specified, the **entity** parameter must be specified.

If the **imei** parameter is specified, the EIR feature must be turned on.

The destination specified by the **loc** parameter must correspond to a Service Module card running the **vsccp** application.

The destination specified by the **loc** parameter must correspond to a Service Module card that is IS-NR.

A primary Service Module card must be provisioned.

The G-Flex, G-Port, INP, Prepaid SMS Intercept Ph1, or V-Flex feature must be turned on, or the ATINP feature must be enabled before the **dn** parameter can be specified.

Notes

For DN and DN Block entries, whichever entity is provisioned in the order of SP/RN, VMSID, GRN, will become EntIdx1.

Output

Retrieve LRN Data.

NOTE: A value of "---" in the TT column indicates that the service does not have a translation type defined in the EAGLE 5 ISS and that call processing will ignore the override data displayed.

rtrv-data-rtdb:lrn=111111111

tekelecstp 06-03-30 15:23:45 EST EAGLE 35.0.0

Card Loc : 1103 Status:Coherent

Card Loc: 1103

LRN SP

111111111 tklc

SERV	TT	XLAT	RI	PCA	SSN	NGT	RGTA
CLASS	10	DPCSSN	GT	002-002-002	2	---	yes
WSMSC	11	DPCSSN	SSN	010-010-010	10	---	no

;

tekelecstp 06-03-30 15:23:45 EST EAGLE 35.0.0

;

tekelecstp 06-03-30 15:23:45 EST EAGLE 35.0.0

Card Loc[1103] LRN Status : Coherent

Card Loc[1105] LRN Status : Coherent

;

Retrieve NPANXX Data.

NOTE: A value of "---" in the TT column indicates that the service does not have a translation type defined in the EAGLE 5 ISS and that call processing will ignore the override data displayed.

rtrv-data-rtdb:npnxx=919225

tekelecstp 06-03-30 15:37:36 EST EAGLE 35.0.0

Card Loc : 1103 Status:Coherent

Card Loc: 1103

NPANXX MR LRN

919225 yes yes LA LI

SERV	TT	XLAT	RI	PCA	SSN	NGT	RGTA
AIN	---	DPC	GT	-----	---	---	no
IN	---	DPC	GT	-----	---	---	no
CLASS	10	DPCSSN	SSN	007-007-007	7	---	no

;

tekelecstp 06-03-30 15:37:36 EST EAGLE 35.0.0

;

tekelecstp 06-03-30 15:37:36 EST EAGLE 35.0.0

Card Loc[1103] NPANXX Status : Coherent

Card Loc[1105] NPANXX Status : Coherent

Retrieve TN Data.

NOTE: A value of "---" in the TT column indicates that the service does not have a translation type defined in the EAGLE and that call processing will ignore the override data displayed.

rtrv-data-rtdb:tn=9192252645

tekelecstp 06-03-30 15:38:56 EST EAGLE 35.0.0

Card Loc : 1103 Status:Coherent

Card Loc: 1103

TN	SP	LRN	PTYPE
9192252645	tklc	1111111111	none LA LI

SERV	TT	XLAT	RI	PCA	SSN	NGT	RGTA
LIDB	---	DPCSSN	SSN	003-003-003	3	---	no
ISVM	---	DPCSSN	SSN	004-004-004	4	---	no

;

tekelecstp 06-03-30 15:38:56 EST EAGLE 35.0.0

;

tekelecstp 06-03-30 15:38:56 EST EAGLE 35.0.0

Card Loc[1103] TN Status : Coherent

Card Loc[1105] TN Status : Coherent

;

Retrieve IMSI Data

rtrv-data-rtdb:imsi=12345

tekelecstp 08-05-11 07:55:28 EST EAGLE5 39.0.0

Card Loc : 1105 Status : Coherent

IMSI	EntIdx	IMEI Index
12345	H'00000002	H'00000006

Entity	Address	Type	PC(NATL-gg)	RI	SSN	TT	NP	NAI	DA
abcdef123456abc	SP	02000	SSN	122	000	00	000	prefix	

SRFIMSI	NSSN	CCGT	NTT	NNP	NNAI
1234567890abcde	yes	no	no	no	no

IMEI	VERSION	BLACK	GRAY	WHITE
12345678901234	0	yes	yes	yes

;

Retrieve Entity Data

rtrv-data-rtdb:entity=abcdef123456abc

tekelecstp 06-03-30 07:53:00 EST EAGLE5 35.0.0

INFO: Default value of Entity Type is : SP

;

tekelecstp 06-03-30 07:53:00 EST EAGLE5 35.0.0

Card Loc : 1105 Status : Coherent

Entity	Address	Type	PC(NATL-gg)	RI	SSN	TT	NP	NAI	DA	SRFIMSI
abcdef123456abc	SP	02000	SSN	122	000	00	000	prefix		1234567890abcde

NSSN	CCGT	NTT	NNP	NNAI
yes	no	no	no	no

;

tekelecstp 06-03-30 07:56:48 EST EAGLE5 35.0.0

Card Loc : 1105 Status : Coherent

Entity	Address	Type	PC(NATL-gg)	RI	SSN	TT	NP	NAI	DA
abcdef123456abc	SP	s-02000			SSN 122	000	00	000	prefix

SRFIMSI	NSSN	CCGT	NTT	NNP	NNAI
1234567890abcde	yes	no	no	no	no

;

Retrieve IMEI Data

rtrv-data-rtdb:imei=12345678abcdef

tekelecstp 06-03-30 07:54:55 EST EAGLE5 35.0.0

Card Loc : 1105 Status : Coherent

IMEI	VERSION	BLACK	GRAY	WHITE
12345678abcdef	0	yes	no	yes

;

Retrieve data for a DN associated with two NEs.

rtrv-data-rtdb:dn=11111111111111

tekelecstp 08-08-11 07:56:48 EST EAGLE5 39.1.0

Card Loc : 1103 Status:Coherent
 DN Portability Type (255)
 11111111111111 No portability type

EntIdx1	EntIdx2
H'00000007	H'00000005

Entity	Address	Type	PC(INTL)	RI	SSN	TT	NP	NAI	DA
bcd4321	RN	5-005-5		GT	000	000	00	000	none

SRFIMSI	NSSN	CCGT	NTT	NNP	NNAI
	no	no	no	no	no

Entity	Address	Type	PC(ANSI)	RI	SSN	TT	NP	NAI	DA
abcd1234	VMSID	-----		GT	000	000	00	000	none

SRFIMSI	NSSN	CCGT	NTT	NNP	NNAI
	no	no	no	no	no

ASD Address: 1234567890

;

Retreive DN data from a specific Service Module card.

rtrv-data-rtdb:dn=1919554444:loc=1107

tekelecstp 08-08-26 14:03:15 EST EAGLE5 39.1.0

Card Loc : 1107 Status:Coherent
 DN Portability Type (1) Entity Index
 1919554444 Own Number ported out H'0000513d

Entity	Address	Type	PC(ANSI)	RI	SSN	TT	NP	NAI	DA
1234	RN	-----		GT	000	000	00	000	none

SRFIMSI	NSSN	CCGT	NTT	NNP	NNAI
	no	no	no	no	no

ASD Address: 1234567890

;

Retrieve DN data associated with one NE.

rtrv-data-rtdb:dn=12345

tekelecstp 08-08-18 07:56:48 EST EAGLE5 39.1.0

Card Loc	:	1101	Status:Coherent
DN		12345	Portability Type (255)
			No portability type

EntIdx1	EntIdx2
-----	-----

ASD Address: 1234567890

;

Retrieve DN data when the data is non-portable.

rtrv-data-rtdb:dn=d1000

tklc1090203 08-10-20 10:57:33 EST EAGLE 40.0.0

Card Loc	:	1215	Status:Coherent
DN		d1000	Portability Type (36)
			Not Identified to be ported

EntIdx1	EntIdx2
-----	-----

ASD Address: abcd0

;

Legend

CARD LOC—Location of the card that contains the retrieved information.

STATUS—RTDB database status; Coherent or Incoherent.

IMSI—International Mobile Subscriber Identity.

ENTIDX, ENTIDX1, ENTIDX2—The hexadecimal index at which the Network Entity data is stored in the Entity Bucket on the Service Module card.

IMEI INDEX—The hexadecimal index at which the IMEI data is stored in the IMEI Bucket on the Service Module card.

ENTITY ADDRESS—Hexadecimal Network Entity address.

Type—Network Entity type; Service Provider (SP), Routing Number (RN), Voice Mail Server ID (VMSID) or Generic Routing Number (GRN).

PC (type of PC)—Point code and type of point code (ANSI; NATL - ITU National with or without group code (-gg)).

RI—Routing Indicator

SSN—Subsystem Number.

TT—Translation Type.

NP—Numbering Plan

DA—Digits action (Prefix, Suffix, or none)

SRFIMSI—Signaling Relay Function IMSI

IMSI—International Mobile Subscriber Identity.

NSSN—New Subsystem Number (yes or no)

CCGT—Cancel GT (yes or no)

NTT—New Translation Type

NNP—New Numbering Plan

NNAI—New Nature of Address Indicator.

IMEI—International Mobile Equipment Identity.

VERSION—IMEI data version.

BLACK, WHITE, GRAY—Equipment Identity Register search lists.

DN—Dialed Number.

ASD ADDRESS—Additional Subscriber Data address

PORTABILITY TYPE (*number*)—

- 0—Not known to be ported
- 1—Own number ported out
- 2—Foreign number ported to Foreign network
- 3—Prepaid Short Message Service (PPSMS) subscriber on server #1
- 4—Prepaid Short Message Service (PPSMS) subscriber on server #2
- 5—IS41 to GSM migrated subscriber with only GSM handset active
- 6—Prepaid Short Message Service (PPSMS) subscriber on server #3
- 7—Prepaid Short Message Service (PPSMS) subscriber on server #4
- 8—Prepaid Short Message Service (PPSMS) subscriber on server #5
- 9—Prepaid Short Message Service (PPSMS) subscriber on server #6
- 10—Prepaid Short Message Service (PPSMS) subscriber on server #7
- 11—Prepaid Short Message Service (PPSMS) subscriber on server #8
- 12—Prepaid Short Message Service (PPSMS) subscriber on server #9
- 13—Prepaid Short Message Service (PPSMS) subscriber on server #10
- 14—Prepaid Short Message Service (PPSMS) subscriber on server #11
- 15—Prepaid Short Message Service (PPSMS) subscriber on server #12
- 16—Prepaid Short Message Service (PPSMS) subscriber on server #13
- 17—Prepaid Short Message Service (PPSMS) subscriber on server #14
- 18—Prepaid Short Message Service (PPSMS) subscriber on server #15
- 19—Prepaid Short Message Service (PPSMS) subscriber on server #16
- 20—Prepaid Short Message Service (PPSMS) subscriber on server #17
- 21—Prepaid Short Message Service (PPSMS) subscriber on server #18
- 22—Prepaid Short Message Service (PPSMS) subscriber on server #19
- 23—Prepaid Short Message Service (PPSMS) subscriber on server #20
- 24—Prepaid Short Message Service (PPSMS) subscriber on server #21
- 25—Prepaid Short Message Service (PPSMS) subscriber on server #22

- 26—Prepaid Short Message Service (PPSMS) subscriber on server #23
- 27—Prepaid Short Message Service (PPSMS) subscriber on server #24
- 28—Prepaid Short Message Service (PPSMS) subscriber on server #25
- 29—Prepaid Short Message Service (PPSMS) subscriber on server #26
- 30—Prepaid Short Message Service (PPSMS) subscriber on server #27
- 31—Prepaid Short Message Service (PPSMS) subscriber on server #28
- 32—Prepaid Short Message Service (PPSMS) subscriber on server #29
- 33—Prepaid Short Message Service (PPSMS) subscriber on server #30
- 34—Prepaid Short Message Service (PPSMS) subscriber on server #31
- 35—Prepaid Short Message Service (PPSMS) subscriber on server #32
- 36—Not Identified to be ported
- 255—No portability type

rtrv-dlk**Retrieve Data Link**

Use this command to show the parameters of a TCP/IP data link.

Keyword: **rtrv-dlk**

Related Commands: **act-dlk, canc-dlk, dlt-dlk, ent-dlk, rept-stat-dlk, tst-dlk**

Command Class: Database Administration

Parameters

:ipaddr= (optional)

The TCP/IP data link's IP address. This is a TCP/IP address expressed in standard dot notation. IP addresses consist of the system's network number and the machine's unique host number. An example IP address is **192.126.100.5**, where **192.126.100** is the network number and **5** is the machine's host number.

Range: **1-223, 0-255**

4 numbers separated by dots

1-223—first number

0-255—the other three numbers

Default: Display all.

:loc= (optional)

The card location as stenciled on the shelf of the system.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

Default: All TCP/IP data links are shown.

Example

rtrv-dlk

rtrv-dlk: loc=1201

rtrv-dlk:ipaddr=193.4.201.34

Dependencies

This command can be entered with no parameters or with one of the optional parameters **loc** or **ipaddr**; however, both **loc** and **ipaddr** cannot be specified in the same command.

The shelf and card must be equipped.

The specified card must have a TCP/IP data link assigned to it.

If the **ipaddr** parameter is specified, the IP address must be assigned to a TCP/IP data link.

Notes

None

Output

In the following example, cards at location 1201 and 1203 are ACMENET cards running the **stplan** application. For these cards, the value of the auto parameter is defaulted to no, and the value of the duplex parameter is defaulted to half.

The cards at location 1101, 1103 and 1107 are DCM or E5-ENET cards running the **stplan** application. For these cards, if the **auto=yes** parameter is specified, then the values of **speed** and **duplex** parameters are not shown.

rtrv-dlk

```
tekelecstp 07-02-06 11:12:47 EST EAGLE 37.0.0
LOC  IPADDR          LINK SPEED  DUPLEX  AUTO
1101 192.168.63.34    100Mbit FULL    NO
1103 192.168.63.11    10Mbit  HALF    NO
1107 192.168.63.12    ----- ----    YES
1201 192.168.63.13    10Mbit  HALF    NO
1203 192.168.63.14    10Mbit  HALF    NO
```

;

rtrv-dlk:loc=1101

```
tekelecstp 07-02-01 14:09:13 EST EAGLE 37.0.0
LOC  IPADDR          LINK SPEED  DUPLEX  AUTO
1101 192.168.63.34    100Mbit FULL    NO
```

;

rtrv-dlk:ipaddr=192.168.63.11

```
tekelecstp 07-02-01 14:19:14 EST EAGLE 37.0.0
LOC  IPADDR          LINK SPEED  DUPLEX  AUTO
1103 192.168.63.11    10Mbit  HALF    NO
```

;

In the following example, the specified IP address is not assigned to a TCP/IP data link.

rtrv-dlk:ipaddr=193.4.201.28

```
tekelecstp 07-02-01 14:19:14 EST EAGLE 37.0.0
LOC  IPADDR          LINK SPEED  DUPLEX  AUTO
IPADDR not assigned to a TCP/IP Link.
```

;

In the following example, there are no TCP/IP data links in the database.

rtrv-dlk

```
tekelecstp 07-02-02 14:19:14 EST EAGLE 37.0.0
LOC  IPADDR          LINK SPEED  DUPLEX  AUTO
No TCP/IP Links are defined in the database.
```

;

In the following example, the specified IP address is assigned to a TCP/IP node instead of a TCP/IP data link.

rtrv-dlk:ipaddr=193.4.201.63

```
tekelecstp 07-02-01 12:12:10 EST EAGLE 37.0.0
LOC  IPADDR          LINK SPEED  DUPLEX  AUTO
IPADDR assigned to a TCP/IP Node.
```

;

Legend

IPADDR—The IP address associated with the interface on the data link.

LOC—The card location containing the data link.

LINK SPEED—The bandwidth for the interface in megabits per second, **10** or **100**.

AUTO—Whether or not to automatically determine duplex and speed. If the value is **yes**, then duplex and speed are automatically determined. If the value is **no**, then duplex and speed are not automatically determined.

DUPLEX—The mode of operation of the interface. Possible values are **half** and **full**.

rtrv-dstn

Retrieve Destination

Use this command to show the destination point code entries in the Destination point code table.

Keyword: rtrv-dstn

Related Commands: chg-dstn, chg-rte, dlt-dstn, dlt-rte, ent-dstn, ent-rte, rept-stat-dstn, rtrv-rte

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:aliasa= (optional)

ANSI alias point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Range: 000-255, *

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

The asterisk (*) value is not valid for the *ni* subfield.

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001–005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006–255.

When **chg-sid:pctype=ansi** is specified, *ni*-*-* is valid if *ni* = 006–255.

The point code 000-000-000 is not a valid point code.

:aliasa/aliasi/aliasn/aliasn24= (optional)

Alias point code.

:aliasi= (optional)

ITU international alias point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

If an ITU international destination (**dpci**) point code is entered, then the **dpci** and **aliasi prefix** subfields cannot be the same, (both spare or both non-spare). Up to 2 comma-delimited entries can be entered in the point code list.

Range: s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

:aliasn= (optional)

ITU national alias point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

If an ITU national destination (**dpcn**) point code is entered, then the **dpcn** and **aliasn** *prefix* subfields cannot be the same, (both spare or both non-spare). Up to 2 comma-delimited entries can be entered in the point code list.

Range: **s-**, **0-16383**, **aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:aliasn24= (optional)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:clli= (optional)

Common Language Location Identifier. This parameter specifies the Common Language Location Identifier assigned to the link.

Range: *ayyyyyyyyyy*

1 alphabetic character followed by 10 alphanumeric characters

Default: **none**

:dpc= (optional)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*). The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: **dpca**

Range: **p-**, **000-255**, *****, ******, *******

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

The asterisk values *****, ******, and ******* are not valid for the *ni* subfield.

If ****** or ******* is specified for the *nc* subfield, either *****, ******, or ******* must be specified for the *ncm* subfield.

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

When **chg-sid:pctype=ansi** is specified, *ni*-*-***** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:dpc/dpca/dpci/dpcn/dpcn24= (optional)

Destination point code.

:dpci= (optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:dpcn= (optional)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz, ***

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

An asterisk (*) can be specified for the node (*nnnnn* or every member of a flexible point code) or for the group code (*gc*) only when group codes are present in the point codes.

An asterisk (*) can be specified either for the node or for the group code, but not both.

prefix—**s-, p-, ps-**

nnnnn—**0-16383, ***

gc—**aa-zz, ***

m1-m2-m3-m4—**0-14** for each member; values must sum to 14; or ***-*-*-*** when the point code includes a group code.

:dpcn24= (optional)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:msar= (optional)

Memory space accounting report. When the NRT feature or the CRMD feature, or both, is turned on, this parameter specifies whether summary or detail destination table memory space accounting information is displayed. The **summary** report or the **detail** report appears following the destination

information that is requested by entering the command with or without other parameters. The **only** parameter value displays a detail destination table memory space accounting report without any other destination information. If neither feature is on, only the summary report information is displayed; the detail report information cannot be displayed.

Range: **detail, only, summary**

Default: **detail**—if **rtrv-dstn** is entered with no parameters
summary—if **rtrv-dstn** is entered with parameters

:ncai= (optional)

Nested cluster allowed indicator. This parameter specifies whether the route to the cluster point code can be different for provisioned members of the cluster and whether clusters with nested cluster point codes (**ncai=yes**), or clusters that do not allow nested cluster point codes (**ncai=no**) are displayed.

Range: **yes, no**

yes — Display clusters with the **ncai** set to **yes**
no — Display clusters with the **ncai** set to **no**

:pcst= (optional)

Point code subtype. If selected, this parameter causes the command to display only point codes with no subtype prefix or only point codes of a specified subtype.

Range: **none, p, ps, s**

none — Display only point codes without subtype prefixes
p — Display only private point codes (subtype prefix **p-**)
ps — Display only private and spare point codes (subtype prefix **ps-**)
s — Display only spare point codes (subtype prefix **s-**)

:pctype= (optional)

Point code domain. This parameter causes the command to display only the point codes of the specified domain type.

Range: **ansi, itui, itun, itun24**

ansi — Display only ANSI point codes
itui — Display only ITU International point codes
itun — Display only ITU National point codes
itun24 — Display only 24-bit ITU National point codes

:ppc= (optional)

ANSI proxy point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

The proxy point code must be a full point code.

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001-005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006-255**.

The point code **000-000-000** is not a valid point code.

:ppc/ppca/ppci/ppcn/ppcn24= (optional)

Proxy Point Code.

The proxy point code must be a full point code.

:ppci= (optional)

ITU international proxy point code with subfields *zone-area-id*. The prefix subfield indicates a spare point code (*prefix-zone-area-id*).

Range: s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

:ppcn= (optional)

ITU national proxy point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (*members*) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The prefix subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: s-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:ppcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

:prx= (optional)

Proxy point code indicator.

Range: yes, no

yes — Will be used as a proxy point code

no — Will not be used a proxy point code.

:spc= (optional)

ANSI secondary point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*). The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: **spca**

Range: p-, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001-005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006-255.

The point code **000-000-000** is not a valid point code.

:spc/spca/spci/spcn/spcn24= (optional)

Secondary point code.

:spci= (optional)

ITU international secondary point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:spcn= (optional)

ITU national secondary point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:spcn24= (optional)

24-bit ITU national secondary point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

Example

The following example displays all encountered destination point codes that are members of network cluster 20-2 as well as the cluster address:

rtrv-dstn:dpca=20-2-***

The following example displays the destination with an ANSI alias of 222-200-200:

rtrv-dstn:aliasa=222-200-200

The following example displays all encountered ANSI alias destination point codes that have a network indicator (ni) of 222 and a network cluster (nc) of 200:

rtrv-dstn:aliasa=222-200-**

The following example displays the destination with a CLLI of rlghncbb001:

rtrv-dstn:clli=rlghncbb001

The following example displays the secondary point code 6-6-6:

rtrv-dstn:spc=6-6-6

The following example displays the retrieval of clusters with ncai set to yes:

rtrv-dstn:ncai=yes

The following example displays a single cluster (the NRT feature must be turned on):

rtrv-dstn:dpc=010- *- *

The following example displays a single ITU national destination (the ITUDUPPC feature must be turned on):

rtrv-dstn:dpcn=3-15-15-15-fr:spc=1-15-15-15-fr

The following example displays all ITU national group codes by duplicate point code:

rtrv-dstn:dpcn=2050- *

The following example displays all ITU national point codes within a group code:

rtrv-dstn:dpcn=*-fr

The following example displays 24-bit ITU national point code 15-100-10:

rtrv-dstn:dpcn24=15-100-10

The following example displays 24-bit ITU national secondary point code 99-99-99:

rtrv-dstn:spcn24=99-99-99

The following example displays 24-bit ITU national alias point code 4-4-4:

rtrv-dstn:aliasn24=4-4-4

The following example displays a private point code:

rtrv-dstn:dpca=p-12-12-12

The following examples display a private and spare point code:

rtrv-dstn:dpcn=ps-123

rtrv-dstn:dpci=ps-1-234-1

The following example displays all ANSI private point codes:

rtrv-dstn:pctype=ansi:pcst=p

The following example displays all ITU international spare point codes:

rtrv-dstn:pctype=itui:pcst=s

The following example displays all ITU national private and spare point codes:

rtrv-dstn:pctype=itun:pcst=ps

The following example displays all 24-bit ITU national private point codes:

rtrv-dstn:pctype=itun24:pcst=p

The following example displays all ANSI point codes that do not have point code subtype prefixes:

rtrv-dstn:pctype=ansi

The following example displays all ITU international point codes that do not have point code subtype prefixes:

rtrv-dstn:pctype=itui

The following example displays all ITU national point codes that do not have point code subtype prefixes:

rtrv-dstn:pctype=itun

The following example displays all 24-bit ITU national point codes that do not have point code subtype prefixes:

rtrv-dstn:pctype=itun24

The following example displays all point codes that do not have point code subtype prefixes:

rtrv-dstn:pcst=none

The following example displays all private point codes:

rtrv-dstn:pcst=p

The following example displays all spare point codes:

rtrv-dstn:pcst=s

The following example displays all private and spare point codes:

rtrv-dstn:pcst=ps

The following example displays all proxy destinations.

rtrv-dstn:prx=yes

The following example displays all destinations using a specified proxy point code.

rtrv-dstn:ppc=1-1-1**Dependencies**

NOTE: A *full point code* contains numerical values for all three segments of the point code.

Only one destination point code parameter, or one alias point code parameter, or one CLLI parameter can be specified in the command; these parameters cannot be specified together in the command.

The specified destination address must already be defined in the Destination point code table.

If the **dpcn** parameter or the **aliasn** parameter is specified, the format must match the format that was assigned with the **chg-stpopts:npcfmti** parameter.

If specified (except when **spc=none**), the secondary point code must be a full point code.

Cluster destinations are allowed only if the Cluster Routing Management and Diversity (CRMD) feature is turned on.

Alias point codes must be specified as full point codes.

If specified, the **clli** parameter value must already be defined in the Route table.

When the **msar=only** parameter is specified, no other parameters can be specified in the command.

Network routing is valid only if the Network Routing (NRT) feature is turned on.

When using network routing, if the destination point code has a value of * in the *nc* subfield, the *ncm* subfield must also be * (for example, **dpc=21-*-***).

The **pcst** parameter value **s** or **ps** cannot be specified when the **pctype** value **ansi** or **itun24** is specified.

The **pctype** and **pcst** parameters cannot be specified in the same command with the destination point code, alias point code, secondary point code, **clli**, **msar=only**, and **ncai** parameters.

The **clli** parameter value cannot be **none**.

DPC must be a valid point code.

The Proxy Point Code feature must be enabled before the **prx** parameter can be specified.

The Proxy Point Code feature must be enabled before the **ppc** parameter can be specified.

The **prx** parameter can be specified with only the **pctype**, **pcst**, or **msar** parameter.

The **ppc** parameter can be specified with only the **msar** parameter.

Notes

This command can be canceled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

In this command, only ITU-international and ITU national point codes and aliases support the spare point code subtype prefix (**s-**). Only ITU-international and ITU national point codes support the private and spare point code subtype prefix (**ps-**). All of the point code types support the private (internal) point code subtype prefix (**p-**). Aliases do not support the private (internal) point code prefix.

Table 5-70 provides a summary description of the reports that are produced by the various DPC parameter syntaxes.

Table 5-70. Summary of DPC Parameter Syntaxes

DPC format	Meaning
rtrv-dstn:dpc=ni-nc-ncm	Requests a report for fully provisioned destination <i>ni-nc-ncm</i> .
rtrv-dstn:dpc= ni-*-*	Requests a report for provisioned network destination with the specified network indicator. Note that if * is specified in the <i>nc</i> field, * must be specified in the <i>ncm</i> field.
rtrv-dstn:dpc= ni-***-	Requests a report for the full network cluster for the specified <i>ni</i> .
rtrv-dstn:dpc= ni-***-	Requests a report for the full network cluster and the network cluster address (if any) for the specified <i>ni</i> .
rtrv-dstn:dpc= ni-nc-*	Requests a report for provisioned cluster destination <i>ni-nc-*</i> .
rtrv-dstn:dpc= ni-nc-**	Requests a report showing all destinations whose network (<i>ni</i>) and cluster (<i>nc</i>) components match those specified. Note, however, that the network cluster address on <i>ni-nc-*</i> (if it exists) is not reported.
rtrv-dstn:dpc= ni-nc-***	Requests a report showing all destinations whose network (<i>ni</i>) and cluster (<i>nc</i>) components match those specified. The network cluster address <i>ni-nc-*</i> (if it exists) is also reported.
rtrv-dstn:dpcn24= msa-ssa-sp	Requests a report for fully provisioned 24-bit ITU-N destination <i>main signaling area-sub signaling area-signaling point</i> .

Asterisks in ANSI Point Codes

Two asterisks in the *ncm* subfield of a cluster point code produces a summary report that shows all point code destinations residing in the given cluster (for example, **20-2-****). This does not include the specified cluster point code (for example, **20-2-***).

Three asterisks in the *ncm* subfield of a cluster point code (for example, **20-2-*****) produces a summary report that shows all point code destinations residing in the given network cluster. The specified cluster point code is also displayed if it exists.

If the linkset name is specified (**lsn** parameter) and the **dpc/dpca** parameter *ncm* subfield is specified with asterisks, all route entries are displayed that have the specified linkset and that match the specified **dpc/dpca** parameter subfield values.

Asterisks in ITU-N Duplicate Point Codes and Flexible Format Point Codes

When the ITU Duplicate Point Code (ITUDUPPC) feature is on,

- An asterisk (*) can be specified for the group code of an ITU-N duplicate point code to display all ITU-N point codes that have the specified node value (for example, **10101-***).
- An asterisk (*) can be specified for the node of an ITU-N duplicate point code to display all ITU-N point codes that have the specified group code value (for example, ***-ab**).

When the ITUDUPPC feature is on and the STP flexible point code option (**npcfmti**) is used to change the ITU-N point format to four members (*m1-m2-m3-m4-gc*),

- An asterisk (*) can be specified for the group code of an ITU-N flexible point code to display all ITU-N point codes that have the specified point code value (for example, **15-15-15-3-***).
- An asterisk (*) can be specified for every member of the ITU-N flexible point code to display all ITU-N flexible point codes that have the same group code (for example, ***-*-*-*ab** is valid; ***-15-*-*-*ab** is not valid).

If the Proxy Point Code feature is enabled, then the values specified for the **ppc** and **dpc** parameters must be full point codes. Cluster point codes and private point codes are not supported.

Output

Destination Table Memory Space Accounting Information

Each output example for this command shows the display of destination table memory space accounting information. The **msar** parameter value and the NCR, NRT, CRMD, and Origin-based MTP Routing feature settings determine whether a summary report or a detail report is displayed.

Summary Report

When the NCR, NRT, CRMD, and Origin-based MTP Routing features are off, the summary report is displayed when the command is entered with and without parameters specified and for all of the **msar** parameter values. The detail report cannot be displayed. The summary information appears at the end of the requested destination information, or appears without any other destination information when the **msar=only** parameter is specified.

When one or more of the NCR, NRT, CRMD, and Origin-based MTP Routing features are on, the summary report is displayed:

- When the command is entered with one or more parameters to select the specific destination information to be displayed. The summary information appears at the end of the requested destination information. (The **msar=summary** parameter value is the default in this case.)
- When the command is entered with only the **msar=summary** parameter specified. The summary information appears at the end of the destination information.

The maximum number of destinations that can be provisioned depends on the Routes and Routesets quantity features that are on in the system (see the **rtrv-feat** dstn5000 entry and the **rtrv-ctrl-feat** Routesets entry). The **chg-stpopts** command **mtpdpcq** parameter must be set to the value of the Routes or Routesets quantity feature to allow the maximum number of destinations to be provisioned.

The number currently provisioned is the value x, the allowed maximum is the value y, and the table percent full is the value z shown in the following first line of the summary report:

Destination table is (x of y) z% full

- When no Routes or Routesets quantity features are on in the system, a maximum of 2000 destinations can be provisioned.
- When the DSTN5000 (5000 Routes) feature bit is on, a maximum of 5000 destinations can be provisioned.
- When the 6000, 7000, or 8000 Routesets quantity feature is enabled, a maximum of the corresponding number of destinations can be provisioned.

The maximum number of aliases that can be provisioned depends on the quantity features that are on in the system (see the **rtrv-feat** dstn5000 entry and the **rtrv-ctrl-feat** Routesets entry). The number currently provisioned is the x value, the allowed maximum is the y value, and the table percent full is the z value shown in the following second line of the summary report:

Alias table is (x of y) z% full

- When no Routes or Routesets quantity features are on in the system, a maximum of 12000 aliases can be provisioned.
- When the DSTN5000 feature bit is on, a maximum of 12000 aliases can be provisioned.
- When the 6000 Routesets feature quantity is enabled, a maximum of 12000 aliases can be provisioned.

- When the 7000, or 8000 Routesets quantity feature is enabled, a maximum of 8000 aliases can be provisioned.

Detail Report

When the NCR, NRT, CRMD, and Origin-based MTP Routing features are off, the detail report cannot be displayed.

When one or more of the NCR, NRT, CRMD, or Origin-based MTP Routing features are on, the detail report is displayed:

- When the command is entered with no parameters. The detail report appears at the end of the destination information. (The **msar=detail** parameter value is the default in this case.)
- When the **msar=detail** parameter is specified with one or more other parameters to select the specific destination information to be displayed. The detail report appears at the end of the requested destination information.
- When the **msar=only** parameter is specified. The detail report appears with no other destination information.

The maximum number of destinations that can be provisioned depends on the Routes and Routesets quantity features that are on in the system (see the **rtrv-feat dstn5000** entry and the **rtrv-ctrl-feat Routesets** entry). The **chg-stpopts mtpdpcq** parameter must be set to the value of the quantity feature to allow the maximum number of destinations to be provisioned. The possible maximum numbers of destinations are described in the *Summary Report* section.

In the example of the detail report, the allowed maximum number of destinations is the DESTINATION ENTRIES ALLOCATED value. The list of values under the allocated value includes the TOTAL DPCs currently provisioned and the Destination table CAPACITY (% FULL).

The allowed maximum number of aliases is the ALIASES ALLOCATED value. The list of values under the allocated value include the current number of ALIASES USED and the Aliases table CAPACITY (% FULL). The possible maximum numbers of aliases are described in the *Summary Report* section.

The output for the **rtrv-dstn** command does not change when the Proxy Point Code feature is on.

The following example shows destination table memory space accounting information contained in a summary report. In the example, the **msar=only** parameter is specified and the NCR, NRT, CRMD, and Origin-based MTP Routing features are all off. The Summary Report information appears without any other destination information.

rtrv-dstn:msar=only

```
rlghncxa03w 06-06-01 16:02:05 EST EAGLE 35.0.0
Destination table is (0 of 2000) 0% full
Alias table is (0 of 12000) 0% full
RTRV-DSTN: MASP A - COMPLTD
```

;

The following example shows the destination table memory space accounting information contained in a detail report. In the following example, the **msar=only** parameter is specified and one or more of the NCR, NRT, CRMD or Origin-based MTP Routing features are on. The Detail Report information appears without any other destination information.

rtrv-dstn:msar=only

```
eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0
DESTINATION ENTRIES ALLOCATED: 2000
FULL DPC(s): 178
EXCEPTION DPC(s): 17
NETWORK DPC(s): 0
```



```

        CLUSTER DPC(s):           4
        TOTAL DPC(s):             199
        CAPACITY (% FULL):        10%
    ALIASES ALLOCATED:            12000
        ALIASES USED:             206
        CAPACITY (% FULL):        2%
    X-LIST ENTRIES ALLOCATED:     500

```

;

The following example shows the display of an empty Destination table when the NCR, NRT, and CRMD features are off and no Routes or Routesets quantity features are on.

rtrv-dstn

```
rlghncxa03w 08-01-21 16:02:05 EST EAGLE 38.0.0
```

No destinations meeting the requested criteria were found

```

Destination table is (0 of 2000) 0% full
Alias table is (0 of 12000) 0% full
RTRV-DSTN: MASP A - COMPLTD

```

;

The following example shows the display of an empty Destination table when one or more of the NCR, NRT, or CRMD features are turned on and no Routes or Routesets features are on.

rtrv-dstn

```
rlghncxa03w 08-01-21 16:02:05 EST EAGLE 38.0.0
```

No destinations meeting the requested criteria were found

```

DESTINATION ENTRIES ALLOCATED: 2000
    FULL DPC(s):                0
    NETWORK DPC(s):             0
    CLUSTER DPC(s):             0
    TOTAL DPC(s):               0
    CAPACITY (% FULL):          0%
    ALIASES ALLOCATED:          12000
    ALIASES USED:               0
    CAPACITY (% FULL):          0%
    X-LIST ENTRIES ALLOCATED:   500
RTRV-DSTN: MASP A - COMPLTD

```

;

The following example shows a display of all provisioned destinations.

rtrv-dstn

```
eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0
```

DPCA	CLLI	BEI	ELEI	ALIASI	ALIASN/N24	DMN
001-001-000	stp1	no	---	-----	-----	SS7
003-001-000	mstp	no	---	-----	-----	SS7
004-001-000	stp4	no	---	-----	-----	SS7
007-001-000	stp7	no	---	-----	-----	SS7
002-101-001	ssp201	no	---	-----	-----	SS7
002-102-001	ssp202	no	---	-----	-----	SS7
001-101-001	ssp101	no	---	-----	-----	SS7
003-101-001	ssp301	no	---	-----	-----	SS7
004-101-001	ssp401	no	---	-----	-----	SS7
007-101-001	ssp701	no	---	-----	-----	SS7
100-100-*	cluster1	no	no	-----	-----	SS7
100-100-001	-----	no	---	-----	-----	SS7
200-200-*	cluster2	yes	no	-----	-----	SS7
005-006-001	-----	no	---	-----	005-006-001	SS7
001-001-001	dstn01	no	---	-----	-----	SS7
p-001-001-001	dstn01p	no	---	-----	-----	SS7
001-001-002	dstn02	no	---	1-001-2	-----	SS7
p-001-001-002	dstn02p	no	---	1-011-2	-----	SS7

001-001-003	dstn03	no	---	s-1-001-3	-----	SS7
p-001-001-003	dstn03p	no	---	s-1-011-3	-----	SS7
001-001-004	dstn04	no	---	-----	02060	SS7
p-001-001-004	dstn04p	no	---	-----	01060	SS7
001-070-001	tgtansi001	no	---	-----	-----	SS7
001-001-005	dstn05	no	---	-----	s-02061	SS7
p-001-001-005	dstn05p	no	---	-----	s-01061	SS7
001-001-006	dstn06	no	---	-----	001-001-006	SS7
p-001-001-006	dstn06p	no	---	-----	001-011-006	SS7
001-001-007	dstn07	no	---	1-001-7	02063	SS7
p-001-001-007	dstn07p	no	---	1-011-7	01063	SS7
001-002-000	dstn08	no	---	1-002-0	s-02064	SS7
p-001-002-000	dstn08p	no	---	1-012-0	s-01064	SS7
001-070-002	tgtansi002	no	---	-----	-----	SS7
001-002-001	dstn09	no	---	s-1-002-1	02065	SS7
p-001-002-001	dstn09p	no	---	s-1-012-1	01065	SS7
001-002-002	dstn10	no	---	s-1-002-2	s-02066	SS7
p-001-002-002	dstn10p	no	---	s-1-012-2	s-01066	SS7
001-002-003	dstn11	no	---	1-002-3	001-002-003	SS7
p-001-002-003	dstn11p	no	---	1-012-3	001-012-003	SS7
001-002-004	dstn12	no	---	s-1-002-4	001-002-004	SS7
p-001-002-004	dstn12p	no	---	s-1-012-4	001-012-004	SS7
001-070-003	tgtansi003	no	---	-----	-----	SS7
200-002-001	rtxroute001	no	---	-----	-----	SS7
001-015-001	gx25dstn001	no	---	s-1-015-1	02169	SS7
001-015-002	gx25dstn002	no	---	1-015-2	-----	SS7
001-015-003	gx25dstn003	no	---	-----	s-02171	SS7
002-015-001	gx25dstn004	yes	---	-----	-----	X25
002-015-002	gx25dstn005	yes	---	-----	-----	X25
002-015-003	gx25dstn006	yes	---	-----	-----	X25
002-015-004	gx25dstn007	yes	---	-----	-----	X25
040-001-*	myncaibeno	no	no	-----	-----	SS7
040-010-*	myncaibeno2	no	no	-----	-----	SS7
DPCI	CLLI	BEI	ELEI	ALIASA	ALIASN/N24	DMN
s-4-002-0	-----	no	---	010-001-001	s-08228	SS7
2-010-0	dstn13	no	---	-----	-----	SS7
p-2-010-0	dstn13p	no	---	-----	-----	SS7
2-010-1	dstn14	no	---	002-010-001	-----	SS7
p-2-010-1	dstn14p	no	---	002-100-001	-----	SS7
2-010-2	dstn15	no	---	-----	04178	SS7
p-2-010-2	dstn15p	no	---	-----	08178	SS7
2-010-3	dstn16	no	---	-----	s-04179	SS7
p-2-010-3	dstn16p	no	---	-----	s-08179	SS7
2-070-1	tgtitui001	no	---	-----	-----	SS7
2-010-4	dstn17	no	---	-----	002-010-004	SS7
p-2-010-4	dstn17p	no	---	-----	002-100-004	SS7
2-010-5	dstn18	no	---	002-010-005	04181	SS7
p-2-010-5	dstn18p	no	---	002-100-005	08181	SS7
2-010-6	dstn19	no	---	002-010-006	s-04182	SS7
p-2-010-6	dstn19p	no	---	002-100-006	s-08182	SS7
2-010-7	dstn20	no	---	002-010-007	002-010-007	SS7
p-2-010-7	dstn20p	no	---	002-100-007	002-100-007	SS7
2-070-2	tgtitui002	no	---	-----	-----	SS7
s-2-020-0	dstn21	no	---	-----	-----	SS7
ps-2-020-0	dstn21p	no	---	-----	-----	SS7
s-2-020-1	dstn22	no	---	002-020-001	-----	SS7
ps-2-020-1	dstn22p	no	---	002-200-001	-----	SS7
s-2-020-2	dstn23	no	---	-----	04258	SS7
ps-2-020-2	dstn23p	no	---	-----	08258	SS7
s-2-020-3	dstn24	no	---	-----	s-04259	SS7
ps-2-020-3	dstn24p	no	---	-----	s-08259	SS7
s-2-070-3	tgtitui003	no	---	-----	-----	SS7
s-2-020-4	dstn25	no	---	-----	002-020-004	SS7
ps-2-020-4	dstn25p	no	---	-----	002-200-004	SS7

Commands

rtrv-dstn

s-2-020-5	dstn26	no	---	002-020-005	04261	SS7
ps-2-020-5	dstn26p	no	---	-----	-----	SS7
s-2-020-6	dstn27	no	---	002-020-006	s-04262	SS7
ps-2-020-6	dstn27p	no	---	002-200-005	08261	SS7
s-2-020-7	dstn28	no	---	002-020-007	002-020-007	SS7
ps-2-020-7	dstn28p	no	---	002-200-007	002-200-007	SS7
s-2-070-4	tgtitui004	no	---	-----	-----	SS7
s-3-070-3	tgtitui007	no	---	-----	-----	SS7
s-3-070-4	tgtitui008	no	---	-----	-----	SS7
s-2-029-6	rtxroute002	no	---	002-029-006	s-04269	SS7

DPCI	CLLI	BEI	ELEI	ALIASI	ALIASN/N24	DMN
3-030-0	dstn29	no	---	s-3-030-0	-----	SS7
p-3-030-0	dstn29p	no	---	s-3-031-0	-----	SS7
3-030-1	dstn30	no	---	s-3-030-1	06385	SS7
p-3-030-1	dstn30p	no	---	s-3-031-1	07385	SS7
3-030-2	dstn31	no	---	s-3-030-2	s-06386	SS7
p-3-030-2	dstn31p	no	---	s-3-031-2	s-07386	SS7
3-070-1	tgtitui005	no	---	s-3-070-1	-----	SS7
3-030-3	dstn32	no	---	s-3-030-3	003-030-003	SS7
p-3-030-3	dstn32p	no	---	s-3-031-3	003-031-003	SS7
3-070-2	tgtitui006	no	---	s-3-070-2	-----	SS7
s-3-040-2	dstn35	no	---	3-040-2	-----	SS7
ps-3-040-2	dstn35p	no	---	3-041-2	-----	SS7
s-3-040-3	dstn36	no	---	3-040-3	06467	SS7
ps-3-040-3	dstn36p	no	---	3-041-3	07467	SS7
s-3-040-4	dstn37	no	---	3-040-4	s-06468	SS7
ps-3-040-4	dstn37p	no	---	3-041-4	s-07468	SS7
s-3-040-5	dstn38	no	---	3-040-5	003-040-005	SS7
ps-3-040-5	dstn38p	no	---	3-041-5	003-041-005	SS7

DPCI	CLLI	BEI	ELEI	ALIASN	ALIASN	DMN
3-030-4	dstn33	no	---	s-06388	06388	SS7
p-3-030-4	dstn33p	no	---	s-07388	07388	SS7
3-030-5	dstn34	no	---	06389	s-06389	SS7
p-3-030-5	dstn34p	no	---	07389	s-07389	SS7
s-3-040-6	dstn39	no	---	s-06471	06471	SS7
ps-3-040-6	dstn39p	no	---	s-07471	07471	SS7
s-3-040-7	dstn40	no	---	06472	s-06472	SS7
ps-3-040-7	dstn40p	no	---	07472	s-07472	SS7

DPCN	CLLI	BEI	ELEI	ALIASA	ALIASI	DMN
06157	-----	no	---	020-005-002	-----	SS7
08192	dstn41	no	---	-----	-----	SS7
p-08192	dstn41p	no	---	-----	-----	SS7
08193	dstn42	no	---	004-000-001	-----	SS7
p-08193	dstn42p	no	---	004-200-001	-----	SS7
08194	dstn43	no	---	-----	4-000-2	SS7
p-08194	dstn43p	no	---	-----	4-040-2	SS7
08195	dstn44	no	---	-----	s-4-000-3	SS7
p-08195	dstn44p	no	---	-----	s-4-040-3	SS7
08753	tgtitun001	no	---	-----	-----	SS7
08196	dstn45	no	---	004-000-004	4-000-4	SS7
p-08196	dstn45p	no	---	004-200-004	4-040-4	SS7
08197	dstn46	no	---	004-000-005	s-4-000-5	SS7
p-08197	dstn46p	no	---	004-200-005	s-4-040-5	SS7
08754	tgtitun002	no	---	-----	-----	SS7
s-08272	dstn49	no	---	-----	-----	SS7
ps-08272	dstn49p	no	---	-----	-----	SS7
s-08273	dstn50	no	---	004-010-001	-----	SS7
ps-08273	dstn50p	no	---	004-200-010	-----	SS7
s-08274	dstn51	no	---	-----	4-010-2	SS7
ps-08274	dstn51p	no	---	-----	4-050-2	SS7
s-08275	dstn52	no	---	-----	s-4-010-3	SS7
ps-08275	dstn52p	no	---	-----	s-4-050-3	SS7

s-08755	tgtitun003	no	---	-----	-----	SS7
s-08276	dstn53	no	---	004-010-004	4-010-4	SS7
ps-08276	dstn53p	no	---	004-200-040	4-050-4	SS7
s-08277	dstn54	no	---	004-010-005	s-4-010-5	SS7
ps-08277	dstn54p	no	---	004-200-050	s-4-050-5	SS7
s-08756	tgtitun004	no	---	-----	-----	SS7
08757	tgtitun005	no	---	-----	-----	SS7
s-08758	tgtitun006	no	---	-----	-----	SS7
DPCN	CLLI	BEI	ELEI	ALIASI	ALIASI	DMN
08198	dstn47	no	---	s-4-000-6	4-000-6	SS7
p-08198	dstn47p	no	---	s-4-040-6	4-040-6	SS7
08199	dstn48	no	---	4-000-7	s-4-000-7	SS7
p-08199	dstn48p	no	---	4-040-7	s-4-040-7	SS7
s-08278	dstn55	no	---	s-4-010-6	4-010-6	SS7
ps-08278	dstn55p	no	---	s-4-050-6	4-050-6	SS7
s-08279	dstn56	no	---	4-010-7	s-4-010-7	SS7
ps-08279	dstn56p	no	---	4-050-7	s-4-050-7	SS7
s-08379	rtxroute003	no	---	s-4-058-7	4-058-7	SS7
DPCN	CLLI	BEI	ELEI	ALIASN	ALIASI	DMN
12688	dstn57	no	---	s-12688	-----	SS7
p-12688	dstn57p	no	---	s-13688	-----	SS7
12689	dstn58	no	---	s-12689	6-050-1	SS7
p-12689	dstn58p	no	---	s-13689	6-060-1	SS7
12690	dstn59	no	---	s-12690	s-6-050-2	SS7
p-12690	dstn59p	no	---	s-13690	s-6-060-2	SS7
s-12691	dstn60	no	---	12691	-----	SS7
ps-12691	dstn60p	no	---	13691	-----	SS7
s-12692	dstn61	no	---	12692	6-050-4	SS7
ps-12692	dstn61p	no	---	13692	6-060-4	SS7
s-12693	dstn62	no	---	12693	s-6-050-5	SS7
ps-12693	dstn62p	no	---	13693	s-6-060-5	SS7
DPCN24	CLLI	BEI	ELEI	ALIASA	ALIASI	DMN
003-003-004	-----	no	---	003-003-003	3-003-4	SS7
006-005-001	dstn63	no	---	-----	-----	SS7
p-006-005-001	dstn63p	no	---	-----	-----	SS7
006-005-002	dstn64	no	---	006-005-002	-----	SS7
p-006-005-002	dstn64p	no	---	006-005-020	-----	SS7
006-005-003	dstn65	no	---	-----	6-005-3	SS7
p-006-005-003	dstn65p	no	---	-----	6-050-3	SS7
006-070-001	tgtitun24a	no	---	-----	-----	SS7
006-005-004	dstn66	no	---	-----	s-6-005-4	SS7
p-006-005-004	dstn66p	no	---	-----	s-6-050-4	SS7
006-005-005	dstn67	no	---	006-005-005	6-005-5	SS7
p-006-005-005	dstn67p	no	---	006-005-050	6-050-5	SS7
006-070-002	tgtitun24b	no	---	-----	-----	SS7
DESTINATION ENTRIES ALLOCATED:		2000				
FULL DPC(s):		178				
EXCEPTION DPC(s):		17				
NETWORK DPC(s):		0				
CLUSTER DPC(s):		4				
TOTAL DPC(s):		199				
CAPACITY (% FULL):		10%				
ALIASES ALLOCATED:		12000				
ALIASES USED:		206				
CAPACITY (% FULL):		2%				
X-LIST ENTRIES ALLOCATED:		500				

;

The following example displays the 24-bit ITUN Destination Point Code(s) assigned to a specified 24-bit ITUN Secondary Point Code.

rtrv-dstn:spcn24=6-5-0

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

SPCN24 = 006-005-000

DPCN24	CLLI	BEI	ELEI	ALIASA	ALIASI	DMN
003-003-004	-----	no	---	003-003-003	3-003-4	SS7
006-005-001	dstn63	no	---	-----	-----	SS7
p-006-005-001	dstn63p	no	---	-----	-----	SS7
006-005-002	dstn64	no	---	006-005-002	-----	SS7
p-006-005-002	dstn64p	no	---	006-005-020	-----	SS7
006-005-003	dstn65	no	---	-----	6-005-3	SS7
p-006-005-003	dstn65p	no	---	-----	6-050-3	SS7
006-070-001	tgtitun24a	no	---	-----	-----	SS7
006-005-004	dstn66	no	---	-----	s-6-005-4	SS7
p-006-005-004	dstn66p	no	---	-----	s-6-050-4	SS7
006-005-005	dstn67	no	---	006-005-005	6-005-5	SS7
p-006-005-005	dstn67p	no	---	006-005-050	6-050-5	SS7
006-070-002	tgtitun24b	no	---	-----	-----	SS7

Destination table is (199 of 2000) 10% full

Alias table is (206 of 12000) 2% full

;

The following example displays the retrieval of clusters when the **ncai=yes** parameter is specified.

rtrv-dstn:ncai=yes

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

NCAI = yes

DPCA	CLLI	BEI	ELEI	ALIASI	ALIASN/N24	DMN
100-100-*	cluster1	no	no	-----	-----	SS7
200-200-*	cluster2	yes	no	-----	-----	SS7

Destination table is (199 of 2000) 10% full

Alias table is (206 of 12000) 2% full

;

The following example displays the retrieval of a single cluster with the **ncai=yes** parameter is specified.

rtrv-dstn:dpc=200-200-*

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

DPCA	CLLI	BEI	ELEI	ALIASI	ALIASN/N24	DMN
200-200-*	cluster2	yes	no	-----	-----	SS7

SPCA	NCAI
-----	yes

Destination table is (197 of 2000) 10% full

Alias table is (206 of 12000) 2% full

;

The following example displays the retrieval of clusters when the **ncai=no** parameter is specified.

rtrv-dstn:ncai=no

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

NCAI = no

DPCA	CLLI	BEI	ELEI	ALIASI	ALIASN/N24	DMN
040-001-*	myncaibeno	no	no	-----	-----	SS7
040-010-*	myncaibeno2	no	no	-----	-----	SS7

Destination table is (199 of 2000) 10% full

Alias table is (206 of 12000) 2% full

;

The following example displays a single cluster with the NRT feature turned on.

rtrv-dstn:dpc=010--***

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

DPCA	CLLI	BEI	ELEI	ALIASI	ALIASN/N24	DMN
010-**-*	-----	---	---	-----	-----	SS7
SPCA	NCAI					
-----	----					

Destination table is (200 of 2000) 10% full

Alias table is (206 of 12000) 2% full

;

The following example displays a single ITU national destination with the ITUDUPPC (ITU Duplicate Point Code) feature turned on:

rtrv-dstn:dpcn=08199-tk

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

DPCN	CLLI	BEI	ELEI	ALIASA	ALIASI	DMN
08199-tk	dstn48dupTk	no	---	-----	4-006-2	SS7
SPCN	NCAI					
09000-tk	----					

Destination table is (207 of 2000) 10% full

Alias table is (215 of 12000) 2% full

;

The following example displays all ITU national group codes by duplicate point code:

rtrv-dstn:dpcn=8198-*

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

DPCN	CLLI	BEI	ELEI	ALIASA	ALIASI	DMN
08198-nz	dstn47dupnz	no	---	-----	-----	SS7
DPCN	CLLI	BEI	ELEI	ALIASI	ALIASI	DMN
08198-aa	dstn47	no	---	s-4-000-6	4-000-6	SS7
08198-fr	dstn47dupfr	no	---	s-4-005-7	4-005-7	SS7
08198-tk	dstn47dupTk	no	---	4-006-0	s-4-006-0	SS7

Destination table is (207 of 2000) 10% full

Alias table is (215 of 12000) 2% full

;

The following example displays all ITU national point codes within a group code:

rtrv-dstn:dpcn=-fr

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

DPCN	CLLI	BEI	ELEI	ALIASA	ALIASI	DMN

```

08199-tk      dstn48duptk no  --- ----- 4-006-2    SS7

DPCN          CLLI          BEI ELEI    ALIASI          ALIASI          DMN
08198-tk      dstn47duptk no  --- 4-006-0    s-4-006-0    SS7

```

Destination table is (207 of 2000) 10% full
Alias table is (215 of 12000) 2% full

;

The following example displays a single cluster when the the NRT feature and DSTN5000 features are turned on.

rtrv-dstn:dpc=010-*-*

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

```

DPCI          CLLI          BEI ELEI    ALIASA          ALIASN/N24    DMN
010-*-*      ----- no    no  -----  -----  SS7

SPCA          NCAI
-----  -----

```

Destination table is (3 of 6000) 1% full
Alias table is (4 of 12000) 1% full

;

The following example shows output when the 6000 Routesets and CRMD features are turned on:

rtrv-dstn

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

```

DPCA          CLLI          BEI ELEI    ALIASI          ALIASN/N24    DMN
003-003-003  ----- no    --- -----  -----  SS7
004-004-004  ----- no    --- -----  -----  SS7
005-005-005  ----- no    --- -----  -----  SS7
008-001-*    ----- no    no  -----  -----  SS7

```

```

DESTINATION ENTRIES ALLOCATED: 6000
FULL DPC(s):                    3
NETWORK DPC(s):                 0
CLUSTER DPC(s):                 1
TOTAL DPC(s):                   4
CAPACITY (% FULL):              1%
ALIASES ALLOCATED:              12000
ALIASES USED:                   0
CAPACITY (% FULL):              0%
X-LIST ENTRIES ALLOCATED:       500

```

;

The following example shows output for a specific DPC when the 6000 Routesets feature is turned on and the CRMD feature is on:

rtrv-dstn:dpc=8-1-*

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

```

DPCA          CLLI          BEI ELEI    ALIASI          ALIASN/N24    DMN
008-001-*    ----- no    no  -----  -----  SS7

SPCA          NCAI RSN
-----  -----

```

Destination table is (4 of 6000) 1% full
Alias table is (0 of 12000) 0% full

;

The following example displays a 24-bit ITU-N destination point code with an assigned 24-bit ITU-N secondary point code.

rtrv-dstn:dpcn24=6-5-2

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

DPCN24	CLLI	BEI	ELEI	ALIASA	ALIASI	DMN
006-005-002	dstn64	no	---	006-005-002	-----	SS7

SPCN24	NCAI
006-005-000	----

Destination table is (208 of 2000) 10% full

Alias table is (216 of 12000) 2% full

;

The following example displays a specific 24-bit ITU-N alias point code.

rtrv-dstn:aliasn24=3-41-5

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

DPCI	CLLI	BEI	ELEI	ALIASI	ALIASN/N24	DMN
ps-3-040-5	dstn38p	no	---	3-041-5	003-041-005	SS7

SPCI	NCAI
-----	----

Destination table is (208 of 2000) 10% full

Alias table is (216 of 12000) 2% full

;

The following example shows output for a linkset that contains a private point code.

rtrv-dstn:dpci=ps-3-40-3

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

DPCI	CLLI	BEI	ELEI	ALIASI	ALIASN/N24	DMN
ps-3-040-3	dstn36p	no	---	3-041-3	07467-aa	SS7

SPCI	NCAI
-----	----

Destination table is (208 of 2000) 10% full

Alias table is (216 of 12000) 2% full

;

The following example displays ANSI point codes with no subtype prefixes.

rtrv-dstn:pctype=ansi:pcst=none

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

DPCA	CLLI	BEI	ELEI	ALIASI	ALIASN/N24	DMN
001-001-000	stp1	no	---	-----	-----	SS7
003-001-000	mstp	no	---	-----	-----	SS7
004-001-000	stp4	no	---	-----	-----	SS7
007-001-000	stp7	no	---	-----	-----	SS7
002-101-001	ssp201	no	---	-----	-----	SS7
002-102-001	ssp202	no	---	-----	-----	SS7
001-101-001	ssp101	no	---	-----	-----	SS7
003-101-001	ssp301	no	---	-----	-----	SS7
004-101-001	ssp401	no	---	-----	-----	SS7
007-101-001	ssp701	no	---	-----	-----	SS7
100-100-*	cluster1	no	no	-----	-----	SS7
100-100-001	-----	no	---	-----	-----	SS7
200-200-*	cluster2	yes	no	-----	-----	SS7
005-006-001	-----	no	---	-----	005-006-001	SS7

001-001-001	dstn01	no	---	-----	-----	SS7
001-001-002	dstn02	no	---	1-001-2	-----	SS7
001-001-003	dstn03	no	---	s-1-001-3	-----	SS7
001-001-004	dstn04	no	---	-----	02060-aa	SS7
001-070-001	tgtansi001	no	---	-----	-----	SS7
001-001-005	dstn05	no	---	-----	s-02061-aa	SS7
001-001-006	dstn06	no	---	-----	001-001-006	SS7
001-001-007	dstn07	no	---	1-001-7	02063-aa	SS7
001-002-000	dstn08	no	---	1-002-0	s-02064-aa	SS7
001-070-002	tgtansi002	no	---	-----	-----	SS7
001-002-001	dstn09	no	---	s-1-002-1	02065-aa	SS7
001-002-002	dstn10	no	---	s-1-002-2	s-02066-aa	SS7
001-002-003	dstn11	no	---	1-002-3	001-002-003	SS7
001-002-004	dstn12	no	---	s-1-002-4	001-002-004	SS7
001-070-003	tgtansi003	no	---	-----	-----	SS7
200-002-001	rtxroute001	no	---	-----	-----	SS7
001-015-001	gx25dstn001	no	---	s-1-015-1	02169-aa	SS7
001-015-002	gx25dstn002	no	---	1-015-2	-----	SS7
001-015-003	gx25dstn003	no	---	-----	s-02171-aa	SS7
002-015-001	gx25dstn004	yes	---	-----	-----	X25
002-015-002	gx25dstn005	yes	---	-----	-----	X25
002-015-003	gx25dstn006	yes	---	-----	-----	X25
002-015-004	gx25dstn007	yes	---	-----	-----	X25
040-001-*	myncaibeno	no	no	-----	-----	SS7
040-010-*	myncaibeno2	no	no	-----	-----	SS7
010-**-*	-----	---	---	-----	-----	SS7

Destination table is (208 of 2000) 10% full

Alias table is (216 of 12000) 2% full

;

The following example displays only ANSI point codes with the private point code subtype prefix (p-).

rtrv-dstn:pctype=ansi:pcst=p

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

DPCA	CLLI	BEI	ELEI	ALIASI	ALIASN/N24	DMN
p-001-001-001	dstn01p	no	---	-----	-----	SS7
p-001-001-002	dstn02p	no	---	1-011-2	-----	SS7
p-001-001-003	dstn03p	no	---	s-1-011-3	-----	SS7
p-001-001-004	dstn04p	no	---	-----	01060-aa	SS7
p-001-001-005	dstn05p	no	---	-----	s-01061-aa	SS7
p-001-001-006	dstn06p	no	---	-----	001-011-006	SS7
p-001-001-007	dstn07p	no	---	1-011-7	01063-aa	SS7
p-001-002-000	dstn08p	no	---	1-012-0	s-01064-aa	SS7
p-001-002-001	dstn09p	no	---	s-1-012-1	01065-aa	SS7
p-001-002-002	dstn10p	no	---	s-1-012-2	s-01066-aa	SS7
p-001-002-003	dstn11p	no	---	1-012-3	001-012-003	SS7
p-001-002-004	dstn12p	no	---	s-1-012-4	001-012-004	SS7

Destination table is (208 of 2000) 10% full

Alias table is (216 of 12000) 2% full

;

The following example displays only ITU-I point codes with the spare point code subtype prefix (s-).

rtrv-dstn:pctype=itui:pcst=s

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

DPCI	CLLI	BEI	ELEI	ALIASA	ALIASN/N24	DMN
s-4-002-0	-----	no	---	010-001-001	s-08228-aa	SS7
s-2-020-0	dstn21	no	---	-----	-----	SS7

s-2-020-1	dstn22	no	---	002-020-001	-----	SS7
s-2-020-2	dstn23	no	---	-----	04258-aa	SS7
s-2-020-3	dstn24	no	---	-----	s-04259-aa	SS7
s-2-070-3	tgtitui003	no	---	-----	-----	SS7
s-2-020-4	dstn25	no	---	-----	002-020-004	SS7
s-2-020-5	dstn26	no	---	002-020-005	04261-aa	SS7
s-2-020-6	dstn27	no	---	002-020-006	s-04262-aa	SS7
s-2-020-7	dstn28	no	---	002-020-007	002-020-007	SS7
s-2-070-4	tgtitui004	no	---	-----	-----	SS7
s-3-070-3	tgtitui007	no	---	-----	-----	SS7
s-3-070-4	tgtitui008	no	---	-----	-----	SS7
s-2-029-6	rtxroute002	no	---	002-029-006	s-04269-aa	SS7
DPCI	CLLI	BEI	ELEI	ALIASI	ALIASN/N24	DMN
s-3-040-2	dstn35	no	---	3-040-2	-----	SS7
s-3-040-3	dstn36	no	---	3-040-3	06467-aa	SS7
s-3-040-4	dstn37	no	---	3-040-4	s-06468-aa	SS7
s-3-040-5	dstn38	no	---	3-040-5	003-040-005	SS7
DPCI	CLLI	BEI	ELEI	ALIASN	ALIASN	DMN
s-3-040-6	dstn39	no	---	s-06471-aa	06471-aa	SS7
s-3-040-7	dstn40	no	---	06472-aa	s-06472-aa	SS7

Destination table is (208 of 2000) 10% full

Alias table is (216 of 12000) 2% full

;

The following example displays only ITU-N point codes with the private point code subtype prefix (p-).

rtrv-dstn:pctype=itun:pcst=p

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

DPCN	CLLI	BEI	ELEI	ALIASA	ALIASI	DMN
p-08192-aa	dstn41p	no	---	-----	-----	SS7
p-08193-aa	dstn42p	no	---	004-200-001	-----	SS7
p-08194-aa	dstn43p	no	---	-----	4-040-2	SS7
p-08195-aa	dstn44p	no	---	-----	s-4-040-3	SS7
p-08196-aa	dstn45p	no	---	004-200-004	4-040-4	SS7
p-08197-aa	dstn46p	no	---	004-200-005	s-4-040-5	SS7
DPCN	CLLI	BEI	ELEI	ALIASI	ALIASI	DMN
p-08198-aa	dstn47p	no	---	s-4-040-6	4-040-6	SS7
p-08199-aa	dstn48p	no	---	4-040-7	s-4-040-7	SS7
DPCN	CLLI	BEI	ELEI	ALIASN	ALIASI	DMN
p-12688-aa	dstn57p	no	---	s-13688-aa	-----	SS7
p-12689-aa	dstn58p	no	---	s-13689-aa	6-060-1	SS7
p-12690-aa	dstn59p	no	---	s-13690-aa	s-6-060-2	SS7

Destination table is (208 of 2000) 10% full

Alias table is (216 of 12000) 2% full

;

The following example displays only ITU-N point codes with the private and spare point code subtype prefix (ps-).

rtrv-dstn:pctype=itun:pcst=ps

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

DPCN	CLLI	BEI	ELEI	ALIASA	ALIASI	DMN
ps-08272-aa	dstn49p	no	---	-----	-----	SS7
ps-08273-aa	dstn50p	no	---	004-200-010	-----	SS7
ps-08274-aa	dstn51p	no	---	-----	4-050-2	SS7

Commands

rtrv-dstn

ps-08275-aa	dstn52p	no	---	-----	s-4-050-3	SS7
ps-08276-aa	dstn53p	no	---	004-200-040	4-050-4	SS7
ps-08277-aa	dstn54p	no	---	004-200-050	s-4-050-5	SS7
DPCN	CLLI	BEI	ELEI	ALIASI	ALIASI	DMN
ps-08278-aa	dstn55p	no	---	s-4-050-6	4-050-6	SS7
ps-08279-aa	dstn56p	no	---	4-050-7	s-4-050-7	SS7
DPCN	CLLI	BEI	ELEI	ALIASN	ALIASI	DMN
ps-12691-aa	dstn60p	no	---	13691-aa	-----	SS7
ps-12692-aa	dstn61p	no	---	13692-aa	6-060-4	SS7
ps-12693-aa	dstn62p	no	---	13693-aa	s-6-060-5	SS7

Destination table is (208 of 2000) 10% full

Alias table is (216 of 12000) 2% full

;

The following example displays only ANSI point codes.

rtrv-dstn:pctype=ansi

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

DPCA	CLLI	BEI	ELEI	ALIASI	ALIASN/N24	DMN
001-001-000	stp1	no	---	-----	-----	SS7
003-001-000	mstp	no	---	-----	-----	SS7
004-001-000	stp4	no	---	-----	-----	SS7
007-001-000	stp7	no	---	-----	-----	SS7
002-101-001	ssp201	no	---	-----	-----	SS7
002-102-001	ssp202	no	---	-----	-----	SS7
001-101-001	ssp101	no	---	-----	-----	SS7
003-101-001	ssp301	no	---	-----	-----	SS7
004-101-001	ssp401	no	---	-----	-----	SS7
007-101-001	ssp701	no	---	-----	-----	SS7
100-100-*	cluster1	no	no	-----	-----	SS7
100-100-001	-----	no	---	-----	-----	SS7
200-200-*	cluster2	yes	no	-----	-----	SS7
005-006-001	-----	no	---	-----	005-006-001	SS7
001-001-001	dstn01	no	---	-----	-----	SS7
p-001-001-001	dstn01p	no	---	-----	-----	SS7
001-001-002	dstn02	no	---	1-001-2	-----	SS7
p-001-001-002	dstn02p	no	---	1-011-2	-----	SS7
001-001-003	dstn03	no	---	s-1-001-3	-----	SS7
p-001-001-003	dstn03p	no	---	s-1-011-3	-----	SS7
001-001-004	dstn04	no	---	-----	02060-aa	SS7
p-001-001-004	dstn04p	no	---	-----	01060-aa	SS7
001-070-001	tgtansi001	no	---	-----	-----	SS7
001-001-005	dstn05	no	---	-----	s-02061-aa	SS7
p-001-001-005	dstn05p	no	---	-----	s-01061-aa	SS7
001-001-006	dstn06	no	---	-----	001-001-006	SS7
p-001-001-006	dstn06p	no	---	-----	001-011-006	SS7
001-001-007	dstn07	no	---	1-001-7	02063-aa	SS7
p-001-001-007	dstn07p	no	---	1-011-7	01063-aa	SS7
001-002-000	dstn08	no	---	1-002-0	s-02064-aa	SS7
p-001-002-000	dstn08p	no	---	1-012-0	s-01064-aa	SS7
001-070-002	tgtansi002	no	---	-----	-----	SS7
001-002-001	dstn09	no	---	s-1-002-1	02065-aa	SS7
p-001-002-001	dstn09p	no	---	s-1-012-1	01065-aa	SS7
001-002-002	dstn10	no	---	s-1-002-2	s-02066-aa	SS7
p-001-002-002	dstn10p	no	---	s-1-012-2	s-01066-aa	SS7
001-002-003	dstn11	no	---	1-002-3	001-002-003	SS7
p-001-002-003	dstn11p	no	---	1-012-3	001-012-003	SS7
001-002-004	dstn12	no	---	s-1-002-4	001-002-004	SS7
p-001-002-004	dstn12p	no	---	s-1-012-4	001-012-004	SS7
001-070-003	tgtansi003	no	---	-----	-----	SS7
200-002-001	rtxroute001	no	---	-----	-----	SS7

001-015-001	gx25dstn001	no	---	s-1-015-1	02169-aa	SS7
001-015-002	gx25dstn002	no	---	1-015-2	-----	SS7
001-015-003	gx25dstn003	no	---	-----	s-02171-aa	SS7
002-015-001	gx25dstn004	yes	---	-----	-----	X25
002-015-002	gx25dstn005	yes	---	-----	-----	X25
002-015-003	gx25dstn006	yes	---	-----	-----	X25
002-015-004	gx25dstn007	yes	---	-----	-----	X25
040-001-*	myncaibeno	no	no	-----	-----	SS7
040-010-*	myncaibeno2	no	no	-----	-----	SS7
010-*-*	-----	---	---	-----	-----	SS7

Destination table is (208 of 2000) 10% full

Alias table is (216 of 12000) 2% full

;

The following example displays only ITU-I point codes.

rtrv-dstn:pctype=itui

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

DPCI	CLLI	BEI	ELEI	ALIASA	ALIASN/N24	DMN
s-4-002-0	-----	no	---	010-001-001	s-08228-aa	SS7
2-010-0	dstn13	no	---	-----	-----	SS7
p-2-010-0	dstn13p	no	---	-----	-----	SS7
2-010-1	dstn14	no	---	002-010-001	-----	SS7
p-2-010-1	dstn14p	no	---	002-100-001	-----	SS7
2-010-2	dstn15	no	---	-----	04178-aa	SS7
p-2-010-2	dstn15p	no	---	-----	08178-aa	SS7
2-010-3	dstn16	no	---	-----	s-04179-aa	SS7
p-2-010-3	dstn16p	no	---	-----	s-08179-aa	SS7
2-070-1	tgtitui001	no	---	-----	-----	SS7
2-010-4	dstn17	no	---	-----	002-010-004	SS7
p-2-010-4	dstn17p	no	---	-----	002-100-004	SS7
2-010-5	dstn18	no	---	002-010-005	04181-aa	SS7
p-2-010-5	dstn18p	no	---	002-100-005	08181-aa	SS7
2-010-6	dstn19	no	---	002-010-006	s-04182-aa	SS7
p-2-010-6	dstn19p	no	---	002-100-006	s-08182-aa	SS7
2-010-7	dstn20	no	---	002-010-007	002-010-007	SS7
p-2-010-7	dstn20p	no	---	002-100-007	002-100-007	SS7
2-070-2	tgtitui002	no	---	-----	-----	SS7
s-2-020-0	dstn21	no	---	-----	-----	SS7
ps-2-020-0	dstn21p	no	---	-----	-----	SS7
s-2-020-1	dstn22	no	---	002-020-001	-----	SS7
ps-2-020-1	dstn22p	no	---	002-200-001	-----	SS7
s-2-020-2	dstn23	no	---	-----	04258-aa	SS7
ps-2-020-2	dstn23p	no	---	-----	08258-aa	SS7
s-2-020-3	dstn24	no	---	-----	s-04259-aa	SS7
ps-2-020-3	dstn24p	no	---	-----	s-08259-aa	SS7
s-2-070-3	tgtitui003	no	---	-----	-----	SS7
s-2-020-4	dstn25	no	---	-----	002-020-004	SS7
ps-2-020-4	dstn25p	no	---	-----	002-200-004	SS7
s-2-020-5	dstn26	no	---	002-020-005	04261-aa	SS7
ps-2-020-5	dstn26p	no	---	-----	-----	SS7
s-2-020-6	dstn27	no	---	002-020-006	s-04262-aa	SS7
ps-2-020-6	dstn27p	no	---	002-200-005	08261-aa	SS7
s-2-020-7	dstn28	no	---	002-020-007	002-020-007	SS7
ps-2-020-7	dstn28p	no	---	002-200-007	002-200-007	SS7
s-2-070-4	tgtitui004	no	---	-----	-----	SS7
s-3-070-3	tgtitui007	no	---	-----	-----	SS7
s-3-070-4	tgtitui008	no	---	-----	-----	SS7
s-2-029-6	rtxroute002	no	---	002-029-006	s-04269-aa	SS7
DPCI	CLLI	BEI	ELEI	ALIASI	ALIASN/N24	DMN
3-030-0	dstn29	no	---	s-3-030-0	-----	SS7
p-3-030-0	dstn29p	no	---	s-3-031-0	-----	SS7

Commands

rtrv-dstn

3-030-1	dstn30	no	---	s-3-030-1	06385-aa	SS7
p-3-030-1	dstn30p	no	---	s-3-031-1	07385-aa	SS7
3-030-2	dstn31	no	---	s-3-030-2	s-06386-aa	SS7
p-3-030-2	dstn31p	no	---	s-3-031-2	s-07386-aa	SS7
3-070-1	tgtitui005	no	---	s-3-070-1	-----	SS7
3-030-3	dstn32	no	---	s-3-030-3	003-030-003	SS7
p-3-030-3	dstn32p	no	---	s-3-031-3	003-031-003	SS7
3-070-2	tgtitui006	no	---	s-3-070-2	-----	SS7
s-3-040-2	dstn35	no	---	3-040-2	-----	SS7
ps-3-040-2	dstn35p	no	---	3-041-2	-----	SS7
s-3-040-3	dstn36	no	---	3-040-3	06467-aa	SS7
ps-3-040-3	dstn36p	no	---	3-041-3	07467-aa	SS7
s-3-040-4	dstn37	no	---	3-040-4	s-06468-aa	SS7
ps-3-040-4	dstn37p	no	---	3-041-4	s-07468-aa	SS7
s-3-040-5	dstn38	no	---	3-040-5	003-040-005	SS7
ps-3-040-5	dstn38p	no	---	3-041-5	003-041-005	SS7
DPCI	CLLI	BEI	ELEI	ALIASN	ALIASN	DMN
3-030-4	dstn33	no	---	s-06388-aa	06388-aa	SS7
p-3-030-4	dstn33p	no	---	s-07388-aa	07388-aa	SS7
3-030-5	dstn34	no	---	06389-aa	s-06389-aa	SS7
p-3-030-5	dstn34p	no	---	07389-aa	s-07389-aa	SS7
s-3-040-6	dstn39	no	---	s-06471-aa	06471-aa	SS7
ps-3-040-6	dstn39p	no	---	s-07471-aa	07471-aa	SS7
s-3-040-7	dstn40	no	---	06472-aa	s-06472-aa	SS7
ps-3-040-7	dstn40p	no	---	07472-aa	s-07472-aa	SS7

Destination table is (208 of 2000) 10% full

Alias table is (216 of 12000) 2% full

;

The following example displays only ITU-N point codes.

rtrv-dstn:pctype=itun

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

DPCN	CLLI	BEI	ELEI	ALIASA	ALIASI	DMN
06157-aa	-----	no	---	020-005-002	-----	SS7
08192-aa	dstn41	no	---	-----	-----	SS7
p-08192-aa	dstn41p	no	---	-----	-----	SS7
08193-aa	dstn42	no	---	004-000-001	-----	SS7
p-08193-aa	dstn42p	no	---	004-200-001	-----	SS7
08194-aa	dstn43	no	---	-----	4-000-2	SS7
p-08194-aa	dstn43p	no	---	-----	4-040-2	SS7
08195-aa	dstn44	no	---	-----	s-4-000-3	SS7
p-08195-aa	dstn44p	no	---	-----	s-4-040-3	SS7
08753-aa	tgtitun001	no	---	-----	-----	SS7
08196-aa	dstn45	no	---	004-000-004	4-000-4	SS7
p-08196-aa	dstn45p	no	---	004-200-004	4-040-4	SS7
08197-aa	dstn46	no	---	004-000-005	s-4-000-5	SS7
p-08197-aa	dstn46p	no	---	004-200-005	s-4-040-5	SS7
08754-aa	tgtitun002	no	---	-----	-----	SS7
s-08272-aa	dstn49	no	---	-----	-----	SS7
ps-08272-aa	dstn49p	no	---	-----	-----	SS7
s-08273-aa	dstn50	no	---	004-010-001	-----	SS7
ps-08273-aa	dstn50p	no	---	004-200-010	-----	SS7
s-08274-aa	dstn51	no	---	-----	4-010-2	SS7
ps-08274-aa	dstn51p	no	---	-----	4-050-2	SS7
s-08275-aa	dstn52	no	---	-----	s-4-010-3	SS7
ps-08275-aa	dstn52p	no	---	-----	s-4-050-3	SS7
s-08755-aa	tgtitun003	no	---	-----	-----	SS7
s-08276-aa	dstn53	no	---	004-010-004	4-010-4	SS7
ps-08276-aa	dstn53p	no	---	004-200-040	4-050-4	SS7
s-08277-aa	dstn54	no	---	004-010-005	s-4-010-5	SS7
ps-08277-aa	dstn54p	no	---	004-200-050	s-4-050-5	SS7

s-08756-aa	tgtitun004	no	---	-----	-----	SS7
08757-aa	tgtitun005	no	---	-----	-----	SS7
s-08758-aa	tgtitun006	no	---	-----	-----	SS7
08199-fr	dstn48dupfr	no	---	-----	s-4-006-1	SS7
08199-tk	dstn48dupTk	no	---	-----	4-006-2	SS7
08198-nz	dstn47dupnz	no	---	-----	-----	SS7
s-08273-fr	dstn50dupfr	no	---	-----	4-006-3	SS7
DPCN	CLLI	BEI	ELEI	ALIASI	ALIASI	DMN
08198-aa	dstn47	no	---	s-4-000-6	4-000-6	SS7
p-08198-aa	dstn47p	no	---	s-4-040-6	4-040-6	SS7
08199-aa	dstn48	no	---	4-000-7	s-4-000-7	SS7
p-08199-aa	dstn48p	no	---	4-040-7	s-4-040-7	SS7
s-08278-aa	dstn55	no	---	s-4-010-6	4-010-6	SS7
ps-08278-aa	dstn55p	no	---	s-4-050-6	4-050-6	SS7
s-08279-aa	dstn56	no	---	4-010-7	s-4-010-7	SS7
ps-08279-aa	dstn56p	no	---	4-050-7	s-4-050-7	SS7
s-08379-aa	rtxroute003	no	---	s-4-058-7	4-058-7	SS7
08198-fr	dstn47dupfr	no	---	s-4-005-7	4-005-7	SS7
08198-tk	dstn47dupTk	no	---	4-006-0	s-4-006-0	SS7
DPCN	CLLI	BEI	ELEI	ALIASN	ALIASI	DMN
12688-aa	dstn57	no	---	s-12688-aa	-----	SS7
p-12688-aa	dstn57p	no	---	s-13688-aa	-----	SS7
12689-aa	dstn58	no	---	s-12689-aa	6-050-1	SS7
p-12689-aa	dstn58p	no	---	s-13689-aa	6-060-1	SS7
12690-aa	dstn59	no	---	s-12690-aa	s-6-050-2	SS7
p-12690-aa	dstn59p	no	---	s-13690-aa	s-6-060-2	SS7
s-12691-aa	dstn60	no	---	12691-aa	-----	SS7
ps-12691-aa	dstn60p	no	---	13691-aa	-----	SS7
s-12692-aa	dstn61	no	---	12692-aa	6-050-4	SS7
ps-12692-aa	dstn61p	no	---	13692-aa	6-060-4	SS7
s-12693-aa	dstn62	no	---	12693-aa	s-6-050-5	SS7
ps-12693-aa	dstn62p	no	---	13693-aa	s-6-060-5	SS7
s-08272-fr	dstn49dupfr	no	---	08300-fr	-----	SS7
s-08272-tk	dstn49dupTk	no	---	08300-tk	4-006-7	SS7

Destination table is (208 of 2000) 10% full

Alias table is (216 of 12000) 2% full

;

The following example displays only point codes that have no point code subtype prefix.

rtrv-dstn:pcst=none

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

DPCA	CLLI	BEI	ELEI	ALIASI	ALIASN/N24	DMN
001-001-000	stp1	no	---	-----	-----	SS7
003-001-000	mstp	no	---	-----	-----	SS7
004-001-000	stp4	no	---	-----	-----	SS7
007-001-000	stp7	no	---	-----	-----	SS7
002-101-001	ssp201	no	---	-----	-----	SS7
002-102-001	ssp202	no	---	-----	-----	SS7
001-101-001	ssp101	no	---	-----	-----	SS7
003-101-001	ssp301	no	---	-----	-----	SS7
004-101-001	ssp401	no	---	-----	-----	SS7
007-101-001	ssp701	no	---	-----	-----	SS7
100-100-*	cluster1	no	no	-----	-----	SS7
100-100-001	-----	no	---	-----	-----	SS7
200-200-*	cluster2	yes	no	-----	-----	SS7
005-006-001	-----	no	---	-----	005-006-001	SS7
001-001-001	dstn01	no	---	-----	-----	SS7
001-001-002	dstn02	no	---	1-001-2	-----	SS7
001-001-003	dstn03	no	---	s-1-001-3	-----	SS7
001-001-004	dstn04	no	---	-----	02060-aa	SS7

Commands

rtrv-dstn

001-070-001	tgtansi001	no	---	-----	-----	SS7
001-001-005	dstn05	no	---	-----	s-02061-aa	SS7
001-001-006	dstn06	no	---	-----	001-001-006	SS7
001-001-007	dstn07	no	---	1-001-7	02063-aa	SS7
001-002-000	dstn08	no	---	1-002-0	s-02064-aa	SS7
001-070-002	tgtansi002	no	---	-----	-----	SS7
001-002-001	dstn09	no	---	s-1-002-1	02065-aa	SS7
001-002-002	dstn10	no	---	s-1-002-2	s-02066-aa	SS7
001-002-003	dstn11	no	---	1-002-3	001-002-003	SS7
001-002-004	dstn12	no	---	s-1-002-4	001-002-004	SS7
001-070-003	tgtansi003	no	---	-----	-----	SS7
200-002-001	rtxroute001	no	---	-----	-----	SS7
001-015-001	gx25dstn001	no	---	s-1-015-1	02169-aa	SS7
001-015-002	gx25dstn002	no	---	1-015-2	-----	SS7
001-015-003	gx25dstn003	no	---	-----	s-02171-aa	SS7
002-015-001	gx25dstn004	yes	---	-----	-----	X25
002-015-002	gx25dstn005	yes	---	-----	-----	X25
002-015-003	gx25dstn006	yes	---	-----	-----	X25
002-015-004	gx25dstn007	yes	---	-----	-----	X25
040-001-*	myncaibeno	no	no	-----	-----	SS7
040-010-*	myncaibeno2	no	no	-----	-----	SS7
010-*. *	-----	---	---	-----	-----	SS7

DPCI	CLLI	BEI	ELEI	ALIASA	ALIASN/N24	DMN
2-010-0	dstn13	no	---	-----	-----	SS7
2-010-1	dstn14	no	---	002-010-001	-----	SS7
2-010-2	dstn15	no	---	-----	04178-aa	SS7
2-010-3	dstn16	no	---	-----	s-04179-aa	SS7
2-070-1	tgtitui001	no	---	-----	-----	SS7
2-010-4	dstn17	no	---	-----	002-010-004	SS7
2-010-5	dstn18	no	---	002-010-005	04181-aa	SS7
2-010-6	dstn19	no	---	002-010-006	s-04182-aa	SS7
2-010-7	dstn20	no	---	002-010-007	002-010-007	SS7
2-070-2	tgtitui002	no	---	-----	-----	SS7

DPCI	CLLI	BEI	ELEI	ALIASI	ALIASN/N24	DMN
3-030-0	dstn29	no	---	s-3-030-0	-----	SS7
3-030-1	dstn30	no	---	s-3-030-1	06385-aa	SS7
3-030-2	dstn31	no	---	s-3-030-2	s-06386-aa	SS7
3-070-1	tgtitui005	no	---	s-3-070-1	-----	SS7
3-030-3	dstn32	no	---	s-3-030-3	003-030-003	SS7
3-070-2	tgtitui006	no	---	s-3-070-2	-----	SS7

DPCI	CLLI	BEI	ELEI	ALIASN	ALIASN	DMN
3-030-4	dstn33	no	---	s-06388-aa	06388-aa	SS7
3-030-5	dstn34	no	---	06389-aa	s-06389-aa	SS7

DPCN	CLLI	BEI	ELEI	ALIASA	ALIASI	DMN
06157-aa	-----	no	---	020-005-002	-----	SS7
08192-aa	dstn41	no	---	-----	-----	SS7
08193-aa	dstn42	no	---	004-000-001	-----	SS7
08194-aa	dstn43	no	---	-----	4-000-2	SS7
08195-aa	dstn44	no	---	-----	s-4-000-3	SS7
08753-aa	tgtitun001	no	---	-----	-----	SS7
08196-aa	dstn45	no	---	004-000-004	4-000-4	SS7
08197-aa	dstn46	no	---	004-000-005	s-4-000-5	SS7
08754-aa	tgtitun002	no	---	-----	-----	SS7
08757-aa	tgtitun005	no	---	-----	-----	SS7
08199-fr	dstn48dupfr	no	---	-----	s-4-006-1	SS7
08199-tk	dstn48dupTk	no	---	-----	4-006-2	SS7
08198-nz	dstn47dupnz	no	---	-----	-----	SS7

DPCN	CLLI	BEI	ELEI	ALIASI	ALIASI	DMN
08198-aa	dstn47	no	---	s-4-000-6	4-000-6	SS7
08199-aa	dstn48	no	---	4-000-7	s-4-000-7	SS7

08198-fr	dstn47dupfr	no	---	s-4-005-7	4-005-7	SS7
08198-tk	dstn47duptk	no	---	4-006-0	s-4-006-0	SS7
DPCN	CLLI	BEI	ELEI	ALIASN	ALIASI	DMN
12688-aa	dstn57	no	---	s-12688-aa	-----	SS7
12689-aa	dstn58	no	---	s-12689-aa	6-050-1	SS7
12690-aa	dstn59	no	---	s-12690-aa	s-6-050-2	SS7
DPCN24	CLLI	BEI	ELEI	ALIASA	ALIASI	DMN
003-003-004	-----	no	---	003-003-003	3-003-4	SS7
006-005-001	dstn63	no	---	-----	-----	SS7
006-005-002	dstn64	no	---	006-005-002	-----	SS7
006-005-003	dstn65	no	---	-----	6-005-3	SS7
006-070-001	tgtitun24a	no	---	-----	-----	SS7
006-005-004	dstn66	no	---	-----	s-6-005-4	SS7
006-005-005	dstn67	no	---	006-005-005	6-005-5	SS7
006-070-002	tgtitun24b	no	---	-----	-----	SS7

Destination table is (208 of 2000) 10% full

Alias table is (216 of 12000) 2% full

;

The following example displays only point codes with the spare point code subtype prefix (s-).

rtrv-dstn:pcst=s

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

DPCI	CLLI	BEI	ELEI	ALIASA	ALIASN/N24	DMN
s-4-002-0	-----	no	---	010-001-001	s-08228-aa	SS7
s-2-020-0	dstn21	no	---	-----	-----	SS7
s-2-020-1	dstn22	no	---	002-020-001	-----	SS7
s-2-020-2	dstn23	no	---	-----	04258-aa	SS7
s-2-020-3	dstn24	no	---	-----	s-04259-aa	SS7
s-2-070-3	tgtitui003	no	---	-----	-----	SS7
s-2-020-4	dstn25	no	---	-----	002-020-004	SS7
s-2-020-5	dstn26	no	---	002-020-005	04261-aa	SS7
s-2-020-6	dstn27	no	---	002-020-006	s-04262-aa	SS7
s-2-020-7	dstn28	no	---	002-020-007	002-020-007	SS7
s-2-070-4	tgtitui004	no	---	-----	-----	SS7
s-3-070-3	tgtitui007	no	---	-----	-----	SS7
s-3-070-4	tgtitui008	no	---	-----	-----	SS7
s-2-029-6	rtxroute002	no	---	002-029-006	s-04269-aa	SS7
DPCI	CLLI	BEI	ELEI	ALIASI	ALIASN/N24	DMN
s-3-040-2	dstn35	no	---	3-040-2	-----	SS7
s-3-040-3	dstn36	no	---	3-040-3	06467-aa	SS7
s-3-040-4	dstn37	no	---	3-040-4	s-06468-aa	SS7
s-3-040-5	dstn38	no	---	3-040-5	003-040-005	SS7
DPCI	CLLI	BEI	ELEI	ALIASN	ALIASN	DMN
s-3-040-6	dstn39	no	---	s-06471-aa	06471-aa	SS7
s-3-040-7	dstn40	no	---	06472-aa	s-06472-aa	SS7
DPCN	CLLI	BEI	ELEI	ALIASA	ALIASI	DMN
s-08272-aa	dstn49	no	---	-----	-----	SS7
s-08273-aa	dstn50	no	---	004-010-001	-----	SS7
s-08274-aa	dstn51	no	---	-----	4-010-2	SS7
s-08275-aa	dstn52	no	---	-----	s-4-010-3	SS7
s-08755-aa	tgtitun003	no	---	-----	-----	SS7
s-08276-aa	dstn53	no	---	004-010-004	4-010-4	SS7
s-08277-aa	dstn54	no	---	004-010-005	s-4-010-5	SS7
s-08756-aa	tgtitun004	no	---	-----	-----	SS7
s-08758-aa	tgtitun006	no	---	-----	-----	SS7
s-08273-fr	dstn50dupfr	no	---	-----	4-006-3	SS7

Commands

rtrv-dstn

DPCN	CLLI	BEI	ELEI	ALIASI	ALIASI	DMN
s-08278-aa	dstn55	no	---	s-4-010-6	4-010-6	SS7
s-08279-aa	dstn56	no	---	4-010-7	s-4-010-7	SS7
s-08379-aa	rtxroute003	no	---	s-4-058-7	4-058-7	SS7

DPCN	CLLI	BEI	ELEI	ALIASN	ALIASI	DMN
s-12691-aa	dstn60	no	---	12691-aa	-----	SS7
s-12692-aa	dstn61	no	---	12692-aa	6-050-4	SS7
s-12693-aa	dstn62	no	---	12693-aa	s-6-050-5	SS7
s-08272-fr	dstn49dupfr	no	---	08300-fr	-----	SS7
s-08272-tk	dstn49duptk	no	---	08300-tk	4-006-7	SS7

Destination table is (208 of 2000) 10% full

Alias table is (216 of 12000) 2% full

;

The following example specifies the **pcst=p** parameter to display only point codes with the private point code subtype prefix (p-).

rtrv-dstn:pcst=p

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

DPCA	CLLI	BEI	ELEI	ALIASI	ALIASN/N24	DMN
p-001-001-001	dstn01p	no	---	-----	-----	SS7
p-001-001-002	dstn02p	no	---	1-011-2	-----	SS7
p-001-001-003	dstn03p	no	---	s-1-011-3	-----	SS7
p-001-001-004	dstn04p	no	---	-----	01060-aa	SS7
p-001-001-005	dstn05p	no	---	-----	s-01061-aa	SS7
p-001-001-006	dstn06p	no	---	-----	001-011-006	SS7
p-001-001-007	dstn07p	no	---	1-011-7	01063-aa	SS7
p-001-002-000	dstn08p	no	---	1-012-0	s-01064-aa	SS7
p-001-002-001	dstn09p	no	---	s-1-012-1	01065-aa	SS7
p-001-002-002	dstn10p	no	---	s-1-012-2	s-01066-aa	SS7
p-001-002-003	dstn11p	no	---	1-012-3	001-012-003	SS7
p-001-002-004	dstn12p	no	---	s-1-012-4	001-012-004	SS7

DPCI	CLLI	BEI	ELEI	ALIASA	ALIASN/N24	DMN
p-2-010-0	dstn13p	no	---	-----	-----	SS7
p-2-010-1	dstn14p	no	---	002-100-001	-----	SS7
p-2-010-2	dstn15p	no	---	-----	08178-aa	SS7
p-2-010-3	dstn16p	no	---	-----	s-08179-aa	SS7
p-2-010-4	dstn17p	no	---	-----	002-100-004	SS7
p-2-010-5	dstn18p	no	---	002-100-005	08181-aa	SS7
p-2-010-6	dstn19p	no	---	002-100-006	s-08182-aa	SS7
p-2-010-7	dstn20p	no	---	002-100-007	002-100-007	SS7

DPCI	CLLI	BEI	ELEI	ALIASI	ALIASN/N24	DMN
p-3-030-0	dstn29p	no	---	s-3-031-0	-----	SS7
p-3-030-1	dstn30p	no	---	s-3-031-1	07385-aa	SS7
p-3-030-2	dstn31p	no	---	s-3-031-2	s-07386-aa	SS7
p-3-030-3	dstn32p	no	---	s-3-031-3	003-031-003	SS7

DPCI	CLLI	BEI	ELEI	ALIASN	ALIASN	DMN
p-3-030-4	dstn33p	no	---	s-07388-aa	07388-aa	SS7
p-3-030-5	dstn34p	no	---	07389-aa	s-07389-aa	SS7

DPCN	CLLI	BEI	ELEI	ALIASA	ALIASI	DMN
p-08192-aa	dstn41p	no	---	-----	-----	SS7
p-08193-aa	dstn42p	no	---	004-200-001	-----	SS7
p-08194-aa	dstn43p	no	---	-----	4-040-2	SS7
p-08195-aa	dstn44p	no	---	-----	s-4-040-3	SS7
p-08196-aa	dstn45p	no	---	004-200-004	4-040-4	SS7
p-08197-aa	dstn46p	no	---	004-200-005	s-4-040-5	SS7

DPCN	CLLI	BEI	ELEI	ALIASI	ALIASI	DMN

p-08198-aa	dstn47p	no	---	s-4-040-6	4-040-6	SS7
p-08199-aa	dstn48p	no	---	4-040-7	s-4-040-7	SS7
DPCN	CLLI	BEI	ELEI	ALIASN	ALIASI	DMN
p-12688-aa	dstn57p	no	---	s-13688-aa	-----	SS7
p-12689-aa	dstn58p	no	---	s-13689-aa	6-060-1	SS7
p-12690-aa	dstn59p	no	---	s-13690-aa	s-6-060-2	SS7
DPCN24	CLLI	BEI	ELEI	ALIASA	ALIASI	DMN
p-006-005-001	dstn63p	no	---	-----	-----	SS7
p-006-005-002	dstn64p	no	---	006-005-020	-----	SS7
p-006-005-003	dstn65p	no	---	-----	6-050-3	SS7
p-006-005-004	dstn66p	no	---	-----	s-6-050-4	SS7
p-006-005-005	dstn67p	no	---	006-005-050	6-050-5	SS7

Destination table is (208 of 2000) 10% full

Alias table is (216 of 12000) 2% full

;

The following example specifies the **pcst=ps** parameter to display only point codes with the private and spare point code subtype prefix (ps-).

rtrv-dstn:pcst=ps

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

DPCI	CLLI	BEI	ELEI	ALIASA	ALIASN/N24	DMN
ps-2-020-0	dstn21p	no	---	-----	-----	SS7
ps-2-020-1	dstn22p	no	---	002-200-001	-----	SS7
ps-2-020-2	dstn23p	no	---	-----	08258-aa	SS7
ps-2-020-3	dstn24p	no	---	-----	s-08259-aa	SS7
ps-2-020-4	dstn25p	no	---	-----	002-200-004	SS7
ps-2-020-5	dstn26p	no	---	-----	-----	SS7
ps-2-020-6	dstn27p	no	---	002-200-005	08261-aa	SS7
ps-2-020-7	dstn28p	no	---	002-200-007	002-200-007	SS7
DPCI	CLLI	BEI	ELEI	ALIASI	ALIASN/N24	DMN
ps-3-040-2	dstn35p	no	---	3-041-2	-----	SS7
ps-3-040-3	dstn36p	no	---	3-041-3	07467-aa	SS7
ps-3-040-4	dstn37p	no	---	3-041-4	s-07468-aa	SS7
ps-3-040-5	dstn38p	no	---	3-041-5	003-041-005	SS7
DPCI	CLLI	BEI	ELEI	ALIASN	ALIASN	DMN
ps-3-040-6	dstn39p	no	---	s-07471-aa	07471-aa	SS7
ps-3-040-7	dstn40p	no	---	07472-aa	s-07472-aa	SS7
DPCN	CLLI	BEI	ELEI	ALIASA	ALIASI	DMN
ps-08272-aa	dstn49p	no	---	-----	-----	SS7
ps-08273-aa	dstn50p	no	---	004-200-010	-----	SS7
ps-08274-aa	dstn51p	no	---	-----	4-050-2	SS7
ps-08275-aa	dstn52p	no	---	-----	s-4-050-3	SS7
ps-08276-aa	dstn53p	no	---	004-200-040	4-050-4	SS7
ps-08277-aa	dstn54p	no	---	004-200-050	s-4-050-5	SS7
DPCN	CLLI	BEI	ELEI	ALIASI	ALIASI	DMN
ps-08278-aa	dstn55p	no	---	s-4-050-6	4-050-6	SS7
ps-08279-aa	dstn56p	no	---	4-050-7	s-4-050-7	SS7
DPCN	CLLI	BEI	ELEI	ALIASN	ALIASI	DMN
ps-12691-aa	dstn60p	no	---	13691-aa	-----	SS7
ps-12692-aa	dstn61p	no	---	13692-aa	6-060-4	SS7
ps-12693-aa	dstn62p	no	---	13693-aa	s-6-060-5	SS7

Destination table is (208 of 2000) 10% full

Alias table is (216 of 12000) 2% full

;

The following example appears when an ANSI destination point code with a single SPC assigned to it is requested.

rtrv-dstn:dpca=1-56-5

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

DPCA	CLLI	BEI	ELEI	ALIASI	ALIASN/N24	DMN
001-056-005	-----	no	---	1-056-2	16000	SS7

SPC	NCAI	RSN
001-056-006	no	-----

Destination table is (12 of 2000) 1% full

Alias table is (4 of 12000) 1% full

;

The following example displays the 24-bit ITU-N destination point code(s) assigned to the 24-bit ITU-N secondary point code.

rtrv-dstn:spcn24=6-5-0

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

SPCN24 = 006-005-000

DPCN24	CLLI	BEI	ELEI	ALIASA	ALIASI	DMN
003-003-004	-----	no	---	003-003-003	3-003-4	SS7
006-005-001	dstn63	no	---	-----	-----	SS7
p-006-005-001	dstn63p	no	---	-----	-----	SS7
006-005-002	dstn64	no	---	006-005-002	-----	SS7
p-006-005-002	dstn64p	no	---	006-005-020	-----	SS7
006-005-003	dstn65	no	---	-----	6-005-3	SS7
p-006-005-003	dstn65p	no	---	-----	6-050-3	SS7
006-070-001	tgtitun24a	no	---	-----	-----	SS7
006-005-004	dstn66	no	---	-----	s-6-005-4	SS7
p-006-005-004	dstn66p	no	---	-----	s-6-050-4	SS7
006-005-005	dstn67	no	---	006-005-005	6-005-5	SS7
p-006-005-005	dstn67p	no	---	006-005-050	6-050-5	SS7
006-070-002	tgtitun24b	no	---	-----	-----	SS7

Destination table is (208 of 2000) 10% full

Alias table is (216 of 12000) 2% full

;

The following example displays a summary report that shows all point code destinations that are members of the given network 40-**-*. This does not include the specified network routing point code 40-**-*.

rtrv-dstn:dpc=40--***

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

DPCA	CLLI	BEI	ELEI	ALIASI	ALIASN/N24	DMN
040-001-*	myncaibeno	no	no	-----	-----	SS7
040-010-*	myncaibeno2	no	no	-----	-----	SS7
040-001-001	noncluster1	no	---	-----	-----	SS7
040-001-002	noncluster2	no	---	-----	-----	SS7

Destination table is (211 of 2000) 11% full

Alias table is (216 of 12000) 2% full

;

The following example displays a summary report that shows all full destination point codes within the cluster (40-1-**). This does not include cluster (and network routing) point codes.

rtrv-dstn:dpc=40-1-**

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

DPCA	CLLI	BEI	ELEI	ALIASI	ALIASN/N24	DMN
040-001-001	noncluster1	no	---	-----	-----	SS7
040-001-002	noncluster2	no	---	-----	-----	SS7

Destination table is (211 of 2000) 11% full

Alias table is (216 of 12000) 2% full

;

The following example displays a summary report that shows all destination point codes residing in the given network including the specified network routing point code (40-*-*).

rtrv-dstn:dpc=40-*-***

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

DPCA	CLLI	BEI	ELEI	ALIASI	ALIASN/N24	DMN
040-001-*	myncaibeno	no	no	-----	-----	SS7
040-010-*	myncaibeno2	no	no	-----	-----	SS7
040-*-*	-----	---	---	-----	-----	SS7
040-001-001	noncluster1	no	---	-----	-----	SS7
040-001-002	noncluster2	no	---	-----	-----	SS7

Destination table is (211 of 2000) 11% full

Alias table is (216 of 12000) 2% full

;

The following example displays a summary report that shows all destination point codes residing in the given network cluster including the specified cluster point code (40-1-*), but not including the network routing point code (40-*-*).

rtrv-dstn:dpc=40-1-***

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

DPCA	CLLI	BEI	ELEI	ALIASI	ALIASN/N24	DMN
040-001-*	myncaibeno	no	no	-----	-----	SS7
040-001-001	noncluster1	no	---	-----	-----	SS7
040-001-002	noncluster2	no	---	-----	-----	SS7

Destination table is (211 of 2000) 11% full

Alias table is (216 of 12000) 2% full

;

The following example shows summary output when proxy point code destinations are present in the table.

rtrv-dstn

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

DPCA	CLLI	BEI	ELEI	ALIASI	ALIASN/N24	DMN
002-002-002	-----	no	---	-----	-----	SS7
001-001-001	-----	no	---	-----	-----	SS7
001-001-002	-----	no	---	-----	-----	SS7
001-001-003	-----	no	---	-----	-----	SS7
001-001-004	-----	no	---	-----	-----	SS7
001-001-005	-----	no	---	-----	-----	SS7
001-001-006	-----	no	---	-----	-----	SS7
001-001-007	-----	no	---	-----	-----	SS7
001-001-008	-----	no	---	-----	-----	SS7
001-001-009	-----	no	---	-----	-----	SS7
001-001-010	-----	no	---	-----	-----	SS7

```

Destination table is (11 of 2000) 1% full
Alias table is (0 of 12000) 0% full
PPC table is (1 of 10) 10% full

```

;

The following example displays information for a destination that references a proxy point code.

rtrv-dstn:dpc=1-1-1

```
eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0
```

DPCA	CLLI	BEI	ELEI	ALIASI	ALIASN/N24	DMN
001-001-001	-----	no	---	-----	-----	SS7
PPCA	NCAI	PRX				
002-002-002	----	no				

```

Destination table is (30 of 2000) 2% full
Alias table is (0 of 12000) 0% full
PPC table is (1 of 100) 10% full

```

;

The following example displays summary information for all destinations using a specified proxy point code.

rtrv-dstn:ppc=2-2-2

```
eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0
```

```
PPCA = 002-002-002
```

DPCA	CLLI	BEI	ELEI	ALIASI	ALIASN/N24	DMN
001-001-001	-----	no	---	-----	-----	SS7
001-001-002	-----	no	---	-----	-----	SS7
001-001-003	-----	no	---	-----	-----	SS7
001-001-004	-----	no	---	-----	-----	SS7
001-001-005	-----	no	---	-----	-----	SS7
001-001-006	-----	no	---	-----	-----	SS7
001-001-007	-----	no	---	-----	-----	SS7
001-001-008	-----	no	---	-----	-----	SS7
001-001-009	-----	no	---	-----	-----	SS7
001-001-010	-----	no	---	-----	-----	SS7

```

Destination table is (11 of 2000) 1% full
Alias table is (0 of 12000) 0% full
PPC table is (1 of 10) 10% full

```

;

The following example displays summary information for all of the proxy destinations.

rtrv-dstn:prx=yes

```
eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0
```

```
PRX = yes
```

DPCA	CLLI	BEI	ELEI	ALIASI	ALIASN/N24	DMN
001-001-001	-----	no	---	-----	-----	SS7
001-001-002	-----	no	---	-----	-----	SS7
001-001-003	-----	no	---	-----	-----	SS7
001-001-004	-----	no	---	-----	-----	SS7

```

Destination table is (17 of 2000) 1% full
Alias table is (0 of 12000) 0% full
PPC table is (4 of 10) 40% full

```

;

The following example shows output for a specific destination point code when the Proxy Point Code feature is turned on and the destination point code refers to a secondary point code.

rtrv-dstn:dpc=3-3-3

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

DPCA	CLLI	BEI	ELEI	ALIASI	ALIASN/N24	DMN
003-003-003	-----	no	---	-----	-----	SS7

SPCA	NCAI	PRX
009-009-009	----	no

Destination table is (4 of 2000) 1% full

Alias table is (0 of 12000) 0% full

PPC table is (2 of 10) 20% full

;

The following example displays the ITUN destination point code(s) within a spare group code, while the ITUDUPPC feature is on and the STP flexible point code option (**npfmtti**) is set to the 4-member ITUN point format to (*m1-m2-m3-m4-gc*).

rtrv-dstn:dpcn=s-*-*-*-fr

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

DPCN	CLLI	BEI	ELEI	ALIASA	ALIASI	DMN
s-1034-0-0-1-fr	dstn50dupfr	no	---	-----	4-006-3	SS7

DPCN	CLLI	BEI	ELEI	ALIASN	ALIASI	DMN
s-1034-0-0-0-fr	dstn49dupfr	no	---	1037-1-0-0-fr	-----	SS7

Destination table is (208 of 2000) 10% full

Alias table is (216 of 12000) 2% full

;

Legend

DPC/DPCA/DPCI/DPCN/DPCN24—Destination point code.

CLLI—Command Language Location Indicator.

BEI—Broadcast Exception Indicator.

ELEI—Cluster Exception-List Exclusion Indicator.

NCAI—Nested Cluster Allowed Indicator.

ALIASA/ALIASI/ALIASN/ALIASN24—Alias point code.

SPC—Secondary point code.

DMN—Destination Entity Domain.

PPC—Proxy Point Code.

PRX—Proxy Point Code Indicator.

RSN—Routeset Name.

rtrv-e1

Retrieve E1 Information

Use this command to retrieve information for a specified E1 interface or for all E1 interfaces that have been defined by the **ent-e1** command for a 2-port E1 card, an E1/T1 card, an HC-MIM card, an E5-E1T1 card that is used as an E1 card, or an HC-MIM card or E5-E1T1 card used as an SE-HSL card. The following information can be retrieved: card location, E1 port number, CRC4, CAS/CCS, encoding/decoding, channel bridging, timing source, international NFAS data, and national NFAS data.

Keyword: rtrv-e1

Related Commands: chg-e1, dlt-e1, ent-e1, tst-e1

Command Class: Database Administration

Parameters

:e1port= (optional)

E1 port number. The value must be an E1 port that has already been configured with an E1 interface on the specified E1 card.

Range: 1-8

Ports 3 - 8 can be specified only for HC-MIM and E5-E1T1 cards.

Default: If not specified, all E1 ports are listed.

:loc= (optional)

The card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Default: If not specified, all E1 card locations are listed.

Example

rtrv-e1

rtrv-e1:loc=1307:e1port=2

rtrv-e1:loc=1311:e1port=1

Dependencies

The **loc** and **e1port** parameters must both be specified if any parameters are specified for the command.

The specified card location (**loc** parameter) must be equipped.

The card in the specified card location (**loc** parameter) must be a **lime1** card type.

The port specified by the **e1port** parameter must be already equipped with an E1 interface.

Notes

None.

Output

The following example shows HC-MIM cards used as E1 cards. Cards with CHANBRDG=MASTER or CHANBRDG=SLAVE have 2 ports configured in channel bridging mode to allow non-signaling data pass-through.

rtrv-e1

```
rlghncxa03w 05-01-20 09:07:58 EST EAGLE5 33.0.0
E1
LOC  PORT  CRC4  CAS  ENCODE  E1TSEL  SI  SN  CHANBRDG  CLASS  RATE
1307  7      ON   OFF  HDB3    LINE    0  0  -----  CHAN   ----
1307  8      ON   OFF  HDB3    LINE    0  0  -----  CHAN   ----
1311  1      OFF  OFF  AMI     EXTERNAL 3  6  MASTER   CHAN   ----
1311  2      OFF  OFF  AMI     EXTERNAL 3  6  SLAVE    CHAN   ----
1311  5      OFF  OFF  AMI     RECOVERED 3  6  MASTER   CHAN   ----
1311  6      OFF  OFF  AMI     RECOVERED 3  6  SLAVE    CHAN   ----
```

;

The following example shows time slot entries (TSx) for the E1 card.

rtrv-e1:loc=1307:e1port=7

```
rlghncxa03w 05-01-20 09:07:58 EST EAGLE5 33.0.0
E1
LOC  PORT  CRC4  CAS  ENCODE  E1TSEL  SI  SN  CHANBRDG  CLASS  RATE
1307  7      ON   OFF  HDB3    LINE    0  0  -----  CHAN   ----

TS0  (N/A)    TS8  -----  TS16  -----  TS24  -----
TS1  -----  TS9  -----  TS17  -----  TS25  -----
TS2  -----  TS10 -----  TS18  -----  TS26  -----
TS3  -----  TS11 -----  TS19  -----  TS27  -----
TS4  -----  TS12 1307,A  TS20  -----  TS28  -----
TS5  -----  TS13 -----  TS21  -----  TS29  -----
TS6  -----  TS14 -----  TS22  -----  TS30  -----
TS7  -----  TS15 -----  TS23  -----  TS31  -----
```

;

The following example shows information for port 7 for the E1 card in card location 1311. Port 8 is channel bridged with port 7 on this card for non-signaling data pass through.

rtrv-e1:loc=1311:e1port=7

```
rlghncxa03w 05-01-20 09:07:58 EST EAGLE5 33.0.0
E1
LOC  PORT  CRC4  CAS  ENCODE  E1TSEL  SI  SN  CHANBRDG  CLASS  RATE
1311  7      OFF  OFF  AMI     EXTERNAL 3  6  MASTER   CHAN   ----

TS0  (N/A)    TS8  -----  TS16  -----  TS24  -----
TS1  -----  TS9  -----  TS17  1311,B31  TS25  -----
TS2  -----  TS10 -----  TS18  -----  TS26  -----
TS3  -----  TS11 -----  TS19  -----  TS27  -----
TS4  -----  TS12 1311,A  TS20  -----  TS28  -----
TS5  -----  TS13 -----  TS21  1311,A24  TS29  -----
TS6  -----  TS14 -----  TS22  -----  TS30  -----
TS7  -----  TS15 -----  TS23  -----  TS31  -----
```

;

The following example shows information for port 8 for the E1 card in card location 1311. Port 8 is channel bridged with port 7 on this card for non-signaling data pass through.

rtrv-e1:loc=1311:e1port=8

```
rlghncxa03w 05-01-20 09:07:58 EST EAGLE5 33.0.0
E1
LOC  PORT  CRC4  CAS  ENCODE  E1TSEL  SI  SN  CHANBRDG  CLASS  RATE
1311  8      OFF  OFF  AMI     EXTERNAL 3  6  SLAVE    CHAN   ----
```


;

The following example shows information for the card in location 1307, which has an SE-HSL link. Time slot entries (TSx) are not shown for cards with SE-HSL links because time slots are not configured for "unchannelized" cards.

rtrv-e1:loc=1307:e1port=7

rlghncxa03w 05-05-20 09:07:58 EST EAGLE5 34.0.0

E1									LINK	MINSU
LOC	PORT	CRC4	CAS	ENCODE	E1TSEL	SI	SN	CHANBRDG	CLASS	RATE
1307	7	ON	---	HDB3	LINE	--	--	-----	UNCHAN	1000

;

The following example shows HC-MIM cards used as E1 cards. Cards with LINKCLASS=UNCHAN have SE-HSL links.

rtrv-e1

rlghncxa03w 05-01-20 09:07:58 EST EAGLE5 34.0.0

E1									LINK	MINSU
LOC	PORT	CRC4	CAS	ENCODE	E1TSEL	SI	SN	CHANBRDG	CLASS	RATE
1307	7	ON	---	HDB3	LINE	--	--	-----	UNCHAN	1000
1307	8	ON	---	HDB3	LINE	--	--	-----	UNCHAN	2000
1311	1	OFF	ON	AMI	LINE	1	1	-----	CHAN	----

;

Legend

LOC—E1 card location in an EAGLE 5 ISS shelf.

E1PORT—E1 port number on an E1 card.

CRC4—CRC4 indicator.

CAS—CAS/CRC indicator (**on** = CAS is used; **off** = CRC is used).

ENCODE—Indicator for use of HDB3 or AMI encoding/decoding.

E1TSEL—E1 timing source indicator (**external** = master timing source; **line** = slave timing source; **recovered** = the timing source for the even-numbered port in a channel bridged pair is recovered from the odd-numbered port of the pair.)

SI—Value of two Spare International bits of NFAS data.

SN—Value of five Spare National bits of NFAS data.

CHANBRDG—Indicates whether an odd numbered port is not channel bridged with its adjacent even numbered port for non-signaling data pass through (dashes), or the port is the odd-numbered channel bridged port on the card (MASTER), or the port is the even-numbered channel bridged port on the card (SLAVE) on an HC-MIM or E5-E1T1 card.

LINKCHAN—Indicates whether an HC-MIM or E5-E1T1 card is used as a "channelized" E1 Card (CHAN) or an "unchannelized" SE-HSL card (UNCHAN).

MINSURATE—Minimum number of signaling units present on a link uniformly distributed. A value appears in this field only when the LINKCHAN field value is UNCHAN.

TSx—Timeslot.

rtrv-eisopts**Retrieve EAGLE Support for Integrated Sentinel Options**

Use this command to retrieve the status of the copy functions for the EAGLE 5 Integrated Monitoring Support (E5IS) feature.

Keyword: rtrv-eisopts
Related Commands: chg-eisopts
Command Class: Security Administration

Parameters

This command has no parameters.

Example

rtrv-eisopts

Dependencies

The EAGLE 5 Integrated Monitoring Support (E5IS) feature must be turned on before this command can be entered.

Notes

None

Output

```
rtrv-eisopts
rlghncxa03w 08-12-11 10:07:58 EST  EAGLE 40.1.0
rtrv-eisopts
EIS OPTIONS
-----
EISCOPY = ON
FCMODE  = FCOPY
;
```

rtrv-feat**Retrieve Feature**

Use this command to show the status of optional features in the system that are controlled with the **chg-feat** command.

Keyword: rtrv-feat
Related Commands: chg-feat
Command Class: Program Update

Parameters

This command has no parameters.

Example

rtrv-feat

Dependencies

None

Notes

None

Output



CAUTION

CAUTION: The following output example may differ from the output shown at your terminal and may include unsupported features. A feature must be purchased before you turn the feature on. If you are not sure whether you have purchased a feature, contact your Tekelec Sales Representative or Account Representative. After you turn on a feature with the chg-feat command, you cannot turn it off.

rtrv-feat

```
tekelecstp 08-06-30 16:50:04 EST EAGLE 38.0.0
EAGLE FEATURE LIST
```

GTT	= off	GWS	= off	NRT	= off
X25G	= off	LAN	= off	CRMD	= off
SEAS	= off	LFS	= off	MTPRS	= off
FAN	= off	DSTN5000	= off	WNP	= off
CNCF	= off	TLNP	= off	SCCPCNV	= off
TCAPCNV	= off	IPISUP	= off	X252000	= off
PLNP	= off	NCR	= off	ITUMTPRS	= off
SLSOCB	= off	EGTT	= off	VGTT	= off
MPC	= off	ITUDUPPC	= off	MEASPLAT	= off
TSCSYNC	= off	E5IS	= off	RSET	= off

;

Legend

GTT—The Global Title Translation feature

GWS—The Gateway Screening feature

NRT—Network Routing feature

X25G—The X.25/SS7 Gateway feature

LAN—The STPLAN feature

CRMD—The Cluster Routing and Management Diversity feature

SEAS—The Signaling Engineering Administration System feature

LFS—The Link Fault Sectionalization feature

MTPRS—The ANSI MTP Restart feature

FAN—The Cooling Fan feature

DSTN5000—The DSTN5000 (5000 Routes) feature

WNP—The Wireless Number Portability feature

CNCF—The Calling Name Conversion Facility with Redirect Capability feature

TLNP—The Triggerless Local Number Portability feature

IPISUP—The ISUP Routing over IP feature

DYNRTK—The Dynamic Routing Key feature

SCCPCNV—The SCCP Conversion feature

TCAPCNV—The TCAP Conversion feature

X252000—The 2000 X.25 Routes and Destinations feature

PLNP—The PCS 1900 Number Portability feature

NCR—The Nested Cluster Routing feature

ITUMTPRS—The ITU MTP Restart feature

SLSOCB—The Other CIC Bit Used feature

EGTT—The Enhanced Global Title Translation feature
VGTT—The Variable Length GTT feature
MPC—The Multiple Point Code feature
ITUDUPPC—The ITU National Duplicate Point Code feature
TSCSYNC—The Time Slot Counter Synchronization (TSC) feature
E5IS—The EAGLE 5 Integrated Monitoring Support feature
MEASPLAT—The Measurements Platform feature
RSET—The RSET table feature

rtrv-frm-pwr

Retrieve Frame Power Threshold

Use this command to retrieve a list of entries for all provisioned frames or the entry for the specified frame from the Frame Power Threshold (FPT) table. The command displays only provisioned entries for provisioned frames.

Keyword: **rtrv-frm-pwr**

Related Commands: **chg-frm-pwr, dlt-frm-pwr, ent-frm-pwr, rtrv-stp**

Command Class: Database Administration

Parameters

:frm= (optional)

Frame ID. The command displays the FPT table entry for the specified provisioned frame.

Range: **cf00, ef00, ef01, ef02, ef03, ef04**

cf00 — Control frame

ef00 — First extension frame

ef01 — Second extension frame

ef02 — Third extension frame

ef03 — Fourth extension frame

ef04 — Fifth extension frame

Example

Retrieve all provisioned Frame Power Threshold table entries.

rtrv-frm-pwr

Retrieve Frame Power Threshold table entries for the control frame (frm=cf00)..

rtrv-frm-pwr:frm=cf00

Dependencies

The **frm** parameter value must specify a provisioned frame.

The **frm** parameter value must specify a frame that has a Frame Power Threshold entry provisioned in the FPT table.

Notes

If no parameter is specified in the command, all provisioned FPT table entries are displayed.

If the frm parameter is specified, the FPT entry corresponding to the specified frame is displayed.

Output

Retrieve all Frame Power Threshold table entries.

rtrv-frm-pwr

tekelecstp 06-04-11 12:38:01 EST EAGLE 35.0.0

Frame	Power Threshold (Amps)
-----	-----
cf00	56
ef00	36
ef01	40

FRAME POWER THRESHOLD table is (3 of 10) 30% full;
RTRV-FRM-PWR: MASP A - COMPLTD

;

Retrieve the Frame Power Threshold table entry for the control shelf only.

rtrv-frm-pwr:frm=cf00

tekelecstp 06-04-11 12:38:01 EST EAGLE 35.0.0

Frame	Power Threshold (Amps)
-----	-----
cf00	56

FRAME POWER THRESHOLD table is (3 of 10) 30% full;
RTRV-FRM-PWR: MASP A - COMPLTD

;

rtrv-ftp-serv**Retrieve FTP Server Entry**

Use this command to retrieve an entry for an FTP server from the FTP Server table or all entries in the FTP Server table.

Keyword: rtrv-ftp-serv

Related Commands: chg-ftp-serv, dlt-ftp-serv, ent-ftp-serv

Command Class: Database Administration

Parameters

:app= (optional)

Application. This parameter specifies the FTP Client application that interfaces with the FTP Server.

Range: meas, user, db, dist

meas — Measurements Platform application

user — FTP-based Table Retrieve Application (FTRA)

db — Database Backup\Restore application

dist — EAGLE 5 ISS Software Release Distribution application

:ipaddr= (optional)

IP Address of the FTP Server.

Range: 4 numbers separated by dots, with each number in the range of 0-255.

:mode= (optional)

Full or brief report indicator.

Range: full, brief

Default: brief

Example

rtrv-ftp-serv

rtrv-ftp-serv:app=meas:ipaddr=1.255.0.100

```
rtrv-ftp-serv:mode=brief
rtrv-ftp-serv:app-meas
rtrv-ftp-serv:ipaddr=1.255.0.100
rtrv-ftp-serv:mode=full
```

Dependencies

The **app** parameter must specify an application that uses the FTP Support feature.

The **ipaddr** parameter must specify a valid IP address for the FTP server.

The **mode** parameter allows you to display either the full 100 characters of the path string for each entry (**mode=full**), or the first 29 characters of the path string for each entry (**mode=brief**). The default is **brief**.

Notes

The LOGIN and PATH are displayed in mixed case.

Output

The following examples show output when the EAGLE OA&M IP Security feature is not enabled:

rtrv-ftp-serv:app=meas:ipaddr=1.255.0.100

rlghncxa03w 04-02-28 11:34:04 EST EAGLE 31.3.0

APP	IPADDR	LOGIN	PRI0	PATH
meas	1.255.0.100	ftpmeas3	3	~ftpmeas3\files

FTP SERV table is (1 of 10) 10% full

;

rtrv-ftp-serv:mode=brief

rlghncxa03w 04-02-28 11:34:04 EST EAGLE 31.3.0

APP	IPADDR	LOGIN	PRI0	PATH
meas	1.255.0.100	ftpmeas3	3	~ftpmeas3\files
meas	1.255.0.101	ftpmeas2	2	\home\ftpmeas2\public
user	1.255.0.100	tekiperson1	1	\share

FTP SERV table is (3 of 10) 20% full

;

rtrv-ftp-serv:app=meas

rlghncxa03w 04-02-28 11:34:04 EST EAGLE 31.3.0.

APP	IPADDR	LOGIN	PRI0	PATH
meas	1.255.0.100	ftpmeas3	3	~ftpmeas3\files
meas	1.255.0.101	ftpmeas2	2	\home\ftpmeas2\public

FTP SERV table is (2 of 10) 20% full

;

rtrv-ftp-serv:ipaddr=1.255.0.100

rlghncxa03w 04-02-28 11:34:04 EST EAGLE 31.3.0.

APP	IPADDR	LOGIN	PRI0	PATH
meas	1.255.0.100	ftpmeas3	3	~ftpmeas3\files
user	1.255.0.100	tekiperson1	1	\share

FTP SERV table is (2 of 10) 20% full

;

rtrv-ftp-serv:mode=full

rlghncxa03w 04-02-28 11:34:04 EST EAGLE 31.3.0.

APP	IPADDR	LOGIN	PRI0	PATH
meas	1.255.0.100	ftpmeas3	3	~ftpmeas3\files
meas	1.255.0.101	ftpmeas2	5	\tmp\measurements\backup\data\path\that\goes\on\and\on\and\on\and\keeps\on scrolling\to\new\line
user	1.255.0.100	tekiperson1	1	\share

FTP SERV table is (3 of 10) 30% full

;

The following example shows output when the EAGLE OA&M IP Security feature is enabled and turned off:

rtrv-ftp-serv:mode=full

tekelecstp 04-07-15 12:41:58 EST EAGLE 31.6.0

FTP Client Security: OFF

APP	IPADDR	LOGIN	PRI0
meas	1.255.0.100	ftpmeas3	3
Path:	~ftpmeas3/files		
meas	1.255.0.101	ftpmeas2	5
Path:	/tmp/measurements/backup/data/path/that/goes/on/and/on/and/on/and/keeps/on/scrolling/to/new/line		
user	1.255.0.100	tekpersion1	1
Path:	\share		

FTP SERV table is (3 of 10) 30% full

;

The following example shows output when the EAGLE OA&M IP Security feature is turned on:

rtrv-ftp-serv:mode=full

tekelecstp 04-07-15 12:41:58 EST EAGLE 31.6.0

FTP Client Security: ON

APP	IPADDR	LOGIN	PRI0
meas	1.255.0.100	ftpmeas3	3
Path:	~ftpmeas3/files		
meas	1.255.0.101	ftpmeas2	5
Path:	/tmp/measurements/backup/data/path/that/goes/on/and/on/and/on/and/keeps/on/scrolling/to/new/line		
user	1.255.0.100	tekpersion1	1
Path:	\share		

FTP SERV table is (3 of 10) 30% full

;

rtrv-ftp-serv

tklc1170501 08-09-23 14:36:51 EDT EAGLE5 39.2.0

FTP Client Security: ON

APP	IPADDR	LOGIN	PRI0	PATH
meas	192.168.56.246	pv105	1	/tekelec/meas11705/new
meas	192.168.56.129	pv105	2	/tekelec/meas11705
dist	192.168.53.195	pvftp	1	/remote/labftp1/pvftp/dall
db	192.168.53.195	pvftp	1	/remote/labftp1/pvftp/ahol

FTP SERV table is (4 of 10) 40% full

;

rtrv-gpl**Retrieve Generic Program Load**

Use this command to show the version numbers of the GPLs stored on each fixed disk or removable cartridge or drive and the system release table stored on each fixed disk

Keyword: **rtrv-gpl**

Related Commands: **act-gpl, chg-gpl, copy-gpl, rept-stat-gpl**

Command Class: Program Update

Parameters

:gpl= (optional)

Generic program load. This parameter specifies the GPL for which to retrieve information.

Range: *ayyyyyy*

1 alphabetic character followed by up to 6 alphanumeric characters. Valid GPLs are:
atmansi—The GPL is used by the LIM cards to support the high-speed ATM signaling link feature.

atmhc—This GPL is used to support the functionality for the E5-ATM card. The E5-ATM card runs either the ATMANSI or ATMITU application. The **atmhc** GPL allows the card to support up to 2 signaling links.

atmitu—The GPL is used by the E1 ATM cards to support the high-speed E1 ATM signaling link feature.

blbepm—A flash GPL containing the BIOS ROM image on E5-E1T1 cards and E5-ENET cards.

blbios—A flash GPL containing the BIOS ROM image on HC-MIM cards that are used for E1 or T1 signaling links.

blbsmg—A flash GPL containing the BIOS ROM image on E5-SM4G cards.

blcpld—A flash GPL containing the bit files for the CPLD on HC-MIM, E5-E1T1, and E5-ENET cards that are used for E1 or T1 signaling links.

bldiag6—A flash GPL containing the diagnostic code on E5-E1T1 cards, HC-MIM cards, and E5-ENET cards.

blmcap—A flash GPL containing a tar image with all code required on E5-MCAP cards.

blvxw6—A flash GPL containing the VxWorks operating system on E5-E1T1 cards, HC-MIM cards, and E5-ENET cards.

blrom1—A flash GPL containing the bootloader code for VxWorks operating system on HC-MIM cards.

bpdcm—This GPL is used in support the flash memory Board PROM for DCM, DSM, and GPSM boards, original design.

bpdcm2—This GPL is used in support the flash memory Board PROM for DCM and GPSM boards, revised design.

bphcap—This GPL is used to support Board PROM for HCAP flash memory.

bphcapt—This GPL is used to support Board PROM for HCAP-T flash memory.

bphmux—This GPL is used to support Board PROM for HMUX flash memory.

bpmpl—This GPL is used to support Board PROM for MPL flash memory.

bpmp1t—This GPL is used to support Board PROM for E1/T1 flash memory and Board Prom for MPL-T flash memory.

ccs7itu—This GPL is used by the LIM cards for ITU-TSS MTP functionality.

cdu—This GPL is used in the card manufacturing process.

eoam—This GPL is used by the GPSM-II card for enhanced OAM functions.

eroute—This GPL is used by the STC card for EAGLE 5 Integrated Monitoring Support functions.

erthc—This GPL is used by the E5-ENET card when the card acts as an STC card (E5-STC card) for EAGLE 5 Integrated Monitoring Support functions.

gls—This GPL is used by the TSM cards for downloading gateway screening to LIM cards.

glshc—This GPL is used by the E5-TSM card for downloading gateway screening to LIM and SCCP cards.

hipr—The communication software used on the High Speed IMT Packet Router (HIPR) card.

imt—This GPL is the communication processor on the logical processing element (LPE).

imtpci—The communication software that operates the IMT bus on HC-MIM, E5-E1T1, and E5-ENET cards.

ipghc—This GPL is used by the E5-ENET card to support TCP/IP point-to-multipoint connectivity for ANSI and ITU point codes.

ipgwi—This GPL is used by the SSEDCCM card for TCP/IP point-to-point connectivity for ITU point codes.

iplhc—This GPL is used by the E5-ENET card for TCP/IP point-to-point connectivity for ANSI and ITU point codes.

iplim—This GPL is used by the SSEDCCM card for TCP/IP point-to-point connectivity for ANSI point codes.

iplimi—This GPL is used by the SSEDCCM card for TCP/IP point-to-point connectivity for ITU point codes.

ips—This GPL is used by the IPSM card for the IP User Interface feature.

ipsg—This GPL is used by the E5-ENET card to support the combined functionality of IPLIMx M2PA and IPGWx M3UA.

ipshc—This GPL is used by the E5-IPSM card to support the IPS application.

mcp—This GPL is used by the MCPM card for the Measurements Platform feature.

oamhc—This GPL is used by the E5-MCAP card for enhanced OAM functions.

pldpmc1—A flash GPL that is used on HC-MIM and E5-E1T1 cards for E1 and T1 signaling links.

sccp—This GPL is used by the TSM cards for the global title translation application. If the E5-SM4G card is present, then the **sccp** GPL processes normal GTT traffic.

sccphc—This GPL is used by the E5-SM4G cards to support the EPAP-based features and the LNP ELAP Configuration feature. If no EPAP-based or LNP ELAP Configuration feature is turned on, and if an E5-SM4G card is present, then the **sccphc** GPL processes normal GTT traffic.

ss7ansi—This GPL is used by the LIM cards for the MTP functionality.

ss7gx25—This GPL is used by the LIM cards to support X.25 functionality.

ss7hc—This GPL is used to support the functionality for the HC-MIM (High Capacity Multi-Channel Interface Module) card or the E5-E1T1 card. The HC-MIM card and the E5-E1T1 card run either the SS7ANSI or CCS7ITU application; this GPL allows the card to support up to 64 signaling links for E1 and T1 functions.

ss7ipgw—This GPL is used by the SSEDCCM card to support TCP/IP point-to-multipoint connectivity.

ss7ml—This GPL is used to support the functionality for the multi-port LIM (MPL) card and the E1/T1 MIM (Multi-Channel Interface Module) card. The MPL cards run only the SS7ANSI application on a LIMDS0 card (as in the command `ent-card:type=limds0:appl=ss7ansi`); the ss7ml GPL allows the card to support 8 signaling links rather than the usual 2 links for LIM cards. The MPL cards support only the DS0 interface. The E1/T1 MIM card runs either the SS7ANSI or CCS7ITU application; the ss7ml GPL allows the card to support 8 signaling links for E1 and T1 functions.

stplan—This GPL is used by the ACM card to support the STP LAN application.

utility—This GPL is used by the factory for testing, and when directed by your Customer Care Center.

vcdu—This GPL is used in the card manufacturing process.

vsccp—This GPL is used by Service Module cards to support the EPAP-based and the LNP ELAP Configuration features. If no EPAP-based or LNP ELAP Configuration feature is turned on, and if a Service Module card is present, then the vsccp GPL processes normal GTT traffic.

vxwslan—This GPL is used by the SSEDCCM card to support the STP LAN application. The **bldiag** and **blvxw** flash GPLs are no longer supported.

Example

```
rtrv-gpl
rtrv-gpl:gpl=ipshc
rtrv-gpl:gpl=ipsg
```

Notes

To check the version of the EPAP or ELAP application, use the **rept-stat-mps** command.

If no application is specified, the approved and trial versions for all GPLs are shown, as well as the release table and removable GPL.

The approved GPL is the GPL that resides on the fixed disk and was made the approved version by specifying the GPL version number while executing the **act-gpl** command.

The trial GPL is the version of the GPL that was downloaded from the removable cartridge or drive, but not activated by the **act-gpl** command.

When the **act-gpl** command is executed, the version specified in the command becomes the approved GPL and the previously approved GPL becomes the trial GPL.

If a GPL is not found, a version of "-----" is shown. This should happen only for the utility and OAM GPL trial versions on the fixed disk and for all GPLs on the removable when the removable cartridge or drive is not inserted.

If the approved GPL version does not match the GPL version shown in the ACTIVE MASP RELEASE column, an alarm is activated.

A minor alarm is shown, and ALM is displayed for each APPROVED GPL (**rtrv-gpl**) and for each RUNNING GPL (**rept-stat-gpl**) that does not match the GPL in the RELEASE column of the **rtrv-gpl** command output. The minor alarm is not activated, but ALM is displayed for each GPL that does not match the GPL in the RELEASE column.

ALM is always displayed when the approved version does not match the release version. You cannot turn off *fixed disk auditing*. The auditing state shown here is for the **rept-stat-gpl** command. You can turn on and off *running version auditing*.

A GPL audit cannot be in progress when this command is entered.

Output

The following example lists all possible GPLs that can be shown in the output when no GPL is specified. All of these GPLs will not appear in the output for your system, because all GPLs are not valid in the same system.

* The entries marked with an asterisk appear in the output only if an OAP is provisioned and running. Systems that use two OAPs will show two entries for the OAP: OAP A and OAP B.

rtrv-gpl

```
e1080402 08-10-10 15:16:33 EST EAGLE 40.0.0
GPL Auditing ON
```

GPL	CARD	RELEASE	APPROVED	TRIAL	REMOVE TRIAL
EOAM	1114	128-003-000	128-003-000	128-003-000	128-003-000
EOAM	1116	128-003-000	128-003-000	-----	-----
SS7ANSI	1114	128-002-000	128-002-000	128-002-000	128-002-000
SS7ANSI	1116	128-002-000	128-002-000	128-002-000	-----
SCCP	1114	128-002-000	128-002-000	128-002-000	128-002-000
SCCP	1116	128-002-000	128-002-000	128-002-000	-----
ATMHC	1114	128-015-000	128-015-000	128-015-000	128-015-000
ATMHC	1116	128-015-000	128-015-000	128-015-000	-----
GLS	1114	128-002-000	128-002-000	128-002-000	128-002-000
GLS	1116	128-002-000	128-002-000	128-002-000	-----
CDU	1114	128-000-000	128-000-000	128-000-000	128-002-000
CDU	1116	128-000-000	128-000-000	128-002-000	-----
CCS7ITU	1114	128-002-000	128-002-000	125-002-000	128-002-000
CCS7ITU	1116	128-002-000	128-002-000	125-002-000	-----
SS7GX25	1114	128-001-000	128-001-000	125-001-000	128-001-000
SS7GX25	1116	128-001-000	128-001-000	125-001-000	-----
STPLAN	1114	128-001-000	128-001-000	125-001-000	128-001-000
STPLAN	1116	128-001-000	128-001-000	125-001-000	-----
IMT	1114	128-001-000	128-001-000	125-001-000	128-001-000
IMT	1116	128-001-000	128-001-000	125-001-000	-----
ATMANSI	1114	128-002-000	128-002-000	125-002-000	128-002-000
ATMANSI	1116	128-002-000	128-002-000	128-002-000	-----
BPHCAP	1114	128-001-000	128-001-000	128-001-000	128-001-000
BPHCAP	1116	128-001-000	128-001-000	128-001-000	-----
BPDCM	1114	128-001-000	128-001-000	128-001-000	128-001-000
BPDCM	1116	128-001-000	128-001-000	128-001-000	-----
VXWSLAN	1114	128-001-000	128-001-000	128-001-000	128-001-000
VXWSLAN	1116	128-001-000	128-001-000	128-001-000	-----
IPLIM	1114	128-002-000	128-002-000	128-002-000	128-002-000
IPLIM	1116	128-002-000	128-002-000	128-002-000	-----
IPLIMI	1114	128-002-000	128-002-000	128-002-000	128-002-000
IPLIMI	1116	128-002-000	128-002-000	128-002-000	-----
SS7IPGW	1114	128-002-000	128-002-000	128-002-000	128-002-000
SS7IPGW	1116	128-002-000	128-002-000	128-002-000	-----
VSCCP	1114	128-002-000	128-002-000	128-002-000	128-002-000
VSCCP	1116	128-002-000	128-002-000	128-002-000	-----
ATMITU	1114	128-001-000	128-001-000	128-001-000	128-001-000
ATMITU	1116	128-001-000	128-001-000	128-001-000	-----
VCDU	1114	128-000-000	128-000-000	128-000-000	128-002-000
VCDU	1116	128-000-000	128-000-000	128-002-000	-----
BPMPPL	1114	128-001-000	128-001-000	128-001-000	128-001-000
BPMPPL	1116	128-001-000	128-001-000	128-001-000	-----
SS7ML	1114	128-001-000	128-001-000	128-001-000	128-001-000
SS7ML	1116	128-001-000	128-001-000	128-001-000	-----
BPHMUX	1114	128-001-000	128-005-000	128-005-000	128-005-000
BPHMUX	1116	128-001-000	128-005-000	128-005-000	-----
IPGWI	1114	128-001-000	128-001-000	128-001-000	128-001-000
IPGWI	1116	128-001-000	128-001-000	128-001-000	-----
IPS	1114	128-001-000	128-001-000	128-001-000	128-001-000
IPS	1116	128-001-000	128-001-000	128-001-000	-----

Commands

rtrv-gpl

EROUTE	1114	128-001-000	128-001-000		128-001-000	128-001-000
EROUTE	1116	125-001-000	128-001-000		128-001-000	-----
BPMPLT	1114	002-103-001	002-103-001		002-103-001	128-001-000
BPMPLT	1116	002-103-001	002-103-001		002-103-001	-----
MCP	1114	128-001-000	128-001-000		128-001-000	128-001-000
MCP	1116	128-001-000	128-001-000		128-001-000	-----
BPHCAPT	1114	128-116-003	002-116-003		002-116-003	128-001-000
BPHCAPT	1116	002-116-003	002-116-003		002-116-003	-----
HIPR	1114	128-001-000	128-005-000		125-005-000	128-005-000
HIPR	1116	128-001-000	128-005-000		125-005-000	-----
SS7HC	1114	128-001-000	128-001-000		125-001-000	128-001-000
SS7HC	1116	128-001-000	128-001-000		125-001-000	-----
BLBIOS	1114	128-001-000	128-001-000		125-001-000	128-001-000
BLBIOS	1116	128-001-000	128-001-000		125-001-000	-----
BLCPLD	1114	128-001-000	128-001-000		125-001-000	128-001-000
BLCPLD	1116	128-001-000	128-001-000		128-001-000	-----
IMTPCI	1114	128-001-000	125-001-000		128-001-000	128-001-000
IMTPCI	1116	128-001-000	125-001-000		128-001-000	-----
PLDPMC1	1114	128-001-000	125-001-000		128-001-000	125-001-000
PLDPMC1	1116	128-001-000	125-001-000		128-001-000	-----
IPLHC	1114	097-003-000	097-003-000		028-003-011	097-003-000
IPLHC	1116	097-003-000	097-003-000		028-003-011	-----
IPGHC	1114	097-003-000	097-003-009	ALM	097-003-001	097-003-009
IPGHC	1116	097-003-000	097-003-009	ALM	097-003-001	-----
BLBEPM	1114	126-005-000	126-005-000		126-005-000	126-005-000
BLBEPM	1116	126-005-000	126-005-000		126-005-000	-----
BLVXW6	1114	126-005-000	126-005-000		126-005-000	126-005-000
BLVXW6	1116	126-005-000	126-005-000		126-005-000	-----
BLDIAG6	1114	126-005-000	126-005-000		126-005-000	126-005-000
BLDIAG6	1116	126-005-000	126-005-000		126-005-000	-----
IPSHC	1114	128-001-000	128-001-000		128-001-000	128-001-000
IPSHC	1116	128-001-000	128-001-000		128-001-000	-----
SLANHC	1114	128-002-000	128-002-000		128-002-000	128-002-000
SLANHC	1116	128-002-000	128-002-000		128-002-000	-----
ERTHC	1114	128-002-000	128-002-000		128-002-000	128-002-000
ERTHC	1116	128-002-000	128-002-000		128-002-000	-----
SCCPHC	1114	128-019-000	128-019-000		128-019-000	128-019-000
SCCPHC	1116	128-019-000	128-019-000		128-019-000	-----
BLBSMG	1114	128-007-000	128-007-000		128-007-000	128-007-000
BLBSMG	1116	128-007-000	128-007-000		128-007-000	-----
SS7EPM	1114	126-005-000	126-005-000		126-005-000	126-005-000
SS7EPM	1116	126-005-000	126-005-000		126-005-000	-----
BPDCM2	1114	130-029-000	130-029-000		130-029-000	130-029-000
BPDCM2	1116	130-029-000	130-029-000		130-029-000	-----
EROUTE	1114	130-031-000	130-031-000		130-031-000	130-031-000
EROUTE	1116	130-031-000	130-031-000		130-031-000	-----
BPMPLT	1114	130-029-000	130-029-000		130-029-000	130-029-000
BPMPLT	1116	130-029-000	130-029-000		130-029-000	-----
MCP	1114	130-031-000	130-031-000		130-031-000	130-031-000
MCP	1116	130-031-000	130-031-000		130-031-000	-----
HIPR	1114	130-027-000	130-027-000		130-027-000	130-027-000
HIPR	1116	130-027-000	130-027-000		130-027-000	-----
SS7HC	1114	130-031-000	130-031-000		130-031-000	130-031-000
SS7HC	1116	130-031-000	130-031-000		130-031-000	-----
IMTPCI	1114	130-030-000	130-030-000		130-030-000	130-030-000
IMTPCI	1116	130-030-000	130-030-000		130-030-000	-----
SS7EPM	1114	130-031-000	130-031-000		130-031-000	130-031-000
SS7EPM	1116	130-031-000	130-031-000		130-031-000	-----
BLVXW6	1114	130-026-000	130-026-000		130-026-000	130-026-000
BLVXW6	1116	130-026-000	130-026-000		130-026-000	-----
PKTGEN	1114	130-031-000	130-031-000		130-031-000	130-031-000
PKTGEN	1116	130-031-000	130-031-000		130-031-000	-----
IPSG	1114	130-031-000	130-031-000		130-031-000	130-031-000
IPSG	1116	130-031-000	130-031-000		130-031-000	-----
GLSHC	1114	130-001-000	130-001-000		130-001-000	130-001-000

```
GLSHC      1116  130-001-000  130-001-000      130-001-000  -----
```

```
;
```

In the following example, card location 1115 is the active MASP and the cartridge is inserted.

rtrv-gpl:gpl=utility

```
rlghncxa03w 04-01-05 11:34:04 EST  EAGLE 31.3.0
GPL Auditing  ON
```

GPL	CARD	RELEASE	APPROVED	TRIAL	REMOVE TRIAL
UTILITY	1114	101-016-000	101-016-000	-----	-----
UTILITY	1116	101-016-000	101-016-000	-----	101-016-000

```
;
```

When a GPL is specified in this command, the output is in the following format. The specified GPL is shown in the GPL column.

rtrv-gpl:gpl=hipr

```
rlghncxa03w 05-01-04 07:01:08 EST  EAGLE5 33.0.0
GPL Auditing  ON
```

GPL	CARD	RELEASE	APPROVED	TRIAL	REMOVE TRIAL
HIPR	1114	118-020-000	118-020-000	118-020-000	118-020-000
HIPR	1116	118-020-000	118-020-000	118-020-000	-----

```
;
```

The following example shows output for an E5-SM4G card.

rtrv-gpl:gpl=sccphc

```
tklc1110501 07-04-12 17:27:27 EST  EAGLE5 37.0.0
GPL Auditing  ON
```

GPL	CARD	RELEASE	APPROVED	TRIAL	REMOVE TRIAL
SCCPHC	1114	128-015-000	128-015-000	128-015-000	-----
SCCPHC	1116	128-015-000	128-015-000	128-015-000	128-015-000

```
;
```

rtrv-gpl:gpl=ipsg

```
tekelecstp 08-02-01 11:41:14 EST  EAGLE 38.0.0
GPL Auditing  ON
```

GPL	CARD	RELEASE	APPROVED	TRIAL	REMOVE TRIAL
IPSG	1114	128-001-000	129-001-000	129-001-000	-----
IPSG	1116	128-001-000	129-001-000	129-001-000	-----

This following example shows output with the E5-based control cards feature. In this example, a removable drive and credit card USB are inserted in the active OAM. A removable drive is not present in the standby OAM removable drive.

rtrv-gpl:gpl=oamhc

```
e5oam 08-12-01 12:25:26 EST  EAGLE 40.1.0
GPL Auditing  ON
```

GPL	CARD	RELEASE	APPROVED	TRIAL	REMOVE TRIAL
OAMHC	1114	030-010-000	030-010-000	030-010-008	-----
OAMHC	1116	030-010-000	030-010-000	030-010-008	030-010-008
OAMHC	1115	-----	-----	-----	030-010-008

```
;
```

The following example shows output for E5-based control cards. All three removable drives that display version information are inserted, including the removable drive in the active OAM, the credit card drive in the active OAM, and the removable drive in the standby OAM.

rtrv-gpl

```
e5oam 08-12-01 12:24:57 EST  EAGLE 40.1.0
GPL Auditing  ON
```

GPL	CARD	RELEASE	APPROVED	TRIAL	REMOVE TRIAL
EOAM	1114	030-010-000	030-010-000	030-010-000	030-010-000
EOAM	1116	030-010-000	030-010-000	030-010-000	030-010-000
EOAM	1115	-----	-----	-----	030-010-000
SS7ANSI	1114	030-010-000	030-010-000	030-010-000	030-010-000
SS7ANSI	1116	030-010-000	030-010-000	030-010-000	030-010-000
SS7ANSI	1115	-----	-----	-----	030-010-000
SCCP	1114	030-010-000	030-010-000	030-010-000	030-010-000
SCCP	1116	030-010-000	030-010-000	030-010-000	030-010-000
SCCP	1115	-----	-----	-----	030-010-000
GLS	1114	030-010-000	030-010-000	030-010-000	030-010-000
GLS	1116	030-010-000	030-010-000	030-010-000	030-010-000
GLS	1115	-----	-----	-----	030-010-000
...					
IPSG	1114	030-010-000	030-010-000	030-010-000	030-010-000
IPSG	1116	030-010-000	030-010-000	030-010-000	030-010-000
IPSG	1115	-----	-----	-----	030-010-000
BLROM1	1114	030-010-000	030-010-000	030-010-000	030-010-000
BLROM1	1116	030-010-000	030-010-000	030-010-000	030-010-000
BLROM1	1115	-----	-----	-----	030-010-000

Legend

GPL—The type of GPL associated with each card in the display

APPROVED—The GPL version that is the approved GPL.

CARD—The card location.

RELEASE—version number of each GPL that is required to be installed and approved for a specific release of software for the system.

REMOVE TRIAL—The GPL version that is on the removable cartridge or drive.

TRIAL—The GPL version that is the trial GPL.

-----GPL is not present at the specified location.

ALM—An alarm indicator showing that the system has an approved GPL that is not the GPL required for this software release according to the active MASP system release table.

CORRUPTED—Data audit has determined that the GPL is corrupted.

rtrv-gserv-data**Retrieve G-Port Query for Prepaid Service Data**

Use this command to display all values in the GSERV table or to display specific translation type, originating point code, or global title address data. These values are used to determine whether a Send Routing Information (SRI) request should receive G-Port SRI Query for Prepaid service or normal G-Port service.

Keyword: **rtrv-gserv-data**

Related Commands: **dlt-gserv-data**, **ent-gserv-data**

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:display= (optional)

Use this parameter to display a specified category of entries in the GSERV table.

Range: **all**, **gta**, **opc**, **tt**

all — Display all entries in the GSERV table.

gta— Display all calling party (CgPA) global title addresses in the GSERV table.
opc— Display all message transfer part (MTP) originating point codes in the GSERV table.
tt— Display all called party (CdPA) translation types in the GSERV table.

:gta= (optional)

Global title address. Use this parameter to specify a CgPA global title address.

Range: 1-21 digits

:opc= (optional)

ANSI originating point code in the form of *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code *prefix-ni-nc-ncm*).

Synonym: **opca**

Range: **p-**, **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:opc/opca/opci/opcn/opcn24= (optional)

Originating point code. Use these parameters to specify MTP originating point codes.

:opci= (optional)

ITU international originating point code with subfields *zone-area-id*.

Range: **s-**, **p-**, **ps-**, **0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**, **p-**, **ps-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:opcn= (optional)

ITU national originating point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npclfnti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*).

Range: **s-**, **p-**, **ps-**, **0-16383**, **aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**, **p-**, **ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:opcn24= (optional)

24-bit ITU national originating point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:tt= (optional)

Translation type. Use this parameter to specify a CdPA translation type.

Range: **0-255**

Example

rtrv-gserv-data:display=all

rtrv-gserv-data:tt=26

rtrv-gserv-data:display=opc

Dependencies

The G-Port SRI Query for Prepaid feature must be enabled before this command can be entered.

The G-Port feature must be on before this command can be entered.

The **gta**, **opc/opca/opci/opcn/opcn24**, **tt**, or **display** parameter must be specified.

Output**rtrv-gserv-data:display=all**

```

mystp 06-07-27 20:32:46 EST  EAGLE 35.2.0
TT      OPC                      GTA
=====
0
25
26

TT      OPC                      GTA
=====
02057          (ITUN)
002-002-002    (ANSI)
5-005-5        (ITUI)
001-001-001    (ANSI)
006-000-001    (ANSI)

TT      OPC                      GTA
=====
9194605500

num of tt entries is (3 of 256)
num of opc entries is (5 of 50)
num of gta entries is (1 of 50)

GSERV table is (9 of 356) 3% full

```

;

rtrv-gserv-data:tt=26

```

mystp 06-07-27 20:35:57 EST  EAGLE 35.2.0
TT      OPC                      GTA
=====
26

```

;

rtrv-gserv-data:display=opc

```

mystp 06-07-27 20:32:46 EST  EAGLE 35.2.0
TT      OPC                      GTA
=====
02057          (ITUN)
002-002-002    (ANSI)
5-005-5        (ITUI)
001-001-001    (ANSI)
006-000-001    (ANSI)

GSERV table is (5 of 50) 10% full

```

;

rtrv-gsm-msg**Retrieve Configured GSM Message**

Use this command to display the configured GSM test message parameter values.

Keyword: rtrv-gsm-msg

Related Commands: chg-gsm-msg, tst-msg

Command Class: Database Administration

Parameters

:msgn= (mandatory)

Message number. This parameter specifies the test message number that is retrieved.

Range: 1-10

Example

rtrv-gsm-msg:msgn=5

Dependencies

Output

```
rtrv-gsm-msg:msgn=1
tekelecstp 08-12-02 10:46:51 EST EAGLE 40.1.0
MSG = 1                ACTIVE = YES

CGPA_GT = 2
CGPA_GT_NAI = 4        CGPA = 919818000001

CDPA_GT = 2
CDPA_GT_NAI = 4        CDPA = 919818000002

CGPN_NAI = 1
CGPN_NP = 2            CGPN = 919818000007

CDPN_NAI = 1
CDPN_NP = 2            CDPN = 919818000008
```

rtrv-gsmmap-scrn

Retrieve GSM MAP Screening Entry

Use this command to retrieve the GSM (Global System for Mobile Telecommunication) MAP (Mobile Application Part) Screening CgPA and CdPA entries and their attributes from the active system database.

Keyword: **rtrv-gsmmap-scrn**

Related Commands: **chg-gsmmap-scrn**, **dlt-gsmmap-scrn**, **ent-gsmmap-scrn**

Command Class: Database Administration

Parameters

:opname= (mandatory)

The user-defined name for the operation code. The **opname** value references the operation code (**opcode**) defined with the **ent-gsms-opcode** command.

Range: *aaaaaaaa*
Up to 8 alphanumeric characters

:action= (optional)

The screening action to take if a message is forbidden as defined by the **forbid** parameter.

Range: **pass**, **discard**, **atierr**, **route**, **forward**, **duplicate**, **dupdisc**

pass— Route the message as normal to the destination.

discard— The MSU is to be discarded.

atierr— An ATI (Any Time Interrogation) reject message is generated. This option is only valid for ATI MAP operation codes.

route— Route the message as normal to the original destination node; no UIM will be generated. The original destination is the node to which normal GTT would be sent if no GSM MAP actions are taken.

forward— Route the original message to the forward node. The original message will not be sent to the original node. If, however, the forward node is not available for routing, the MSU is routed to the original node.

duplicate— Route the message as normal to the original destination and route a copy of the original message to the duplicate node. If the MSU fails to route to the duplicate node, a UIM is generated indicating the duplicate routing failure.

dupdisc—Route the original message to the duplicate node. The original message will not be sent to the original node. If, however, the duplicate node is not available for routing, the MSU is routed to the original node.

Default: Display all screening actions

:cdsr= (optional)

CdPA Screening Reference.

Range: *ayyy*

1 alphabetic character followed by up to 3 optional alphanumeric characters

:cgsr= (optional)

CgPA Screening Reference.

Range: *ayyy*

1 alphabetic character followed by up to 3 optional alphanumeric characters

:eaddr= (optional)

The ending origination address, in association with **npv** and **naiv** for the CGPA address to be screened.

Range: 1-15 digits

1-15 hexadecimal digits. Valid digits are **0-9, a-f, A-F**

:forbid= (optional)

The forbidden parameter value. Indicates a forbidden parameter for the entered address. If a forbidden parameter is detected the message is rejected by the action defined by the **action** parameter.

Range: **all, location, none, state**

all—All parameters are forbidden. Take the specified screening action defined by the **action** parameter for messages arriving at the system.

location—Take the specified screening action defined by the **action** parameter for messages arriving at the system that contain **location** as the forbidden parameter value for the entered address/operation code combination. Note: The **location** value is valid only for GSM ATI messages.

none—None of the parameters are forbidden. Route the message to its destination.

state—Take the specified screening action defined by the **action** parameter for messages arriving at the system that contain **state** as the forbidden parameter value for the entered address/operation code combination. Note: The **state** value is valid only for GSM ATI messages.

Default: Display all forbidden parameter values

:mapset= (optional)

The MAP set ID.

Range: **1-36000 dflt**

dflt—Default MAP set

:naiv= (optional)

Nature of Address value for the address or range of CgPA and CdPA addresses. When this parameter is specified, the **npv** parameter must be specified.

Range: **0-127, ***

:npv= (optional)

Numbering Plan value for the address or range of CgPA and CdPA addresses.

When this parameter is specified, the **naiv** parameter must be specified.

Range: **0-15 ***

:ri= (optional)

Routing indicator. This parameter specifies whether a subsequent global title translation is required.

Range: **gt, ssn**

:saddr= (optional)

The starting origination address. in association with **npv** and **naiv** for the single entry or range of entries of the CGPA address to be screened.

Range: 1-15 digits, *

1–15 hexadecimal digits. Valid digits are **0–9, a-f, and A-F**

Default: *

:tt= (optional)

Translation type. This parameter specifies the value that the CdPA translation type is set to as the result of Enhanced GSM Map Screening.

Range: 0-255 none

Default: Display all translation types

Example

The following example retrieves all CgPA entries for the specified opname:

```
rtrv-gsmmap-scrn:opname=e
```

The following example retrieves the specified CgPA range entry for the specified opname:

```
rtrv-gsmmap-scrn:opname=ati:saddr=9194620000000000:eaddr=9194630000000000
```

The following example retrieves all CdPA entries for the specified cgsr:

```
rtrv-gsmmap-scrn:opname=xyz:cgsr=fela
```

The following example retrieves the specified cdsr entry for the specified cgsr:

```
rtrv-gsmmap-scrn:opname=xyz:cgsr=fela:cdsr=cal4
```

The following examples retrieves the specified RI for the specified opname:

```
rtrv-gsmmap-scrn:opname=e:ri=ssn
```

```
rtrv-gsmmap-scrn:opname=e:ri=gt
```

```
rtrv-gsmmap-scrn:opname=e:mapset=df1t:ri=gt
```

```
rtrv-gsmmap-scrn:opname=rr:cgsr=au:cdsr=aj
```

```
rtrv-gsmmap-scrn:opname=dd:cgsr=ak
```

```
rtrv-gsmmap-scrn:opname=test4:tt=12
```

Dependencies

The GSM Map Screening feature (see the **enable-ctrl-feat** command) must be enabled before this command can be entered.

The Enhanced GSM Map Screening (EGMS) feature must be enabled before:

- The **cgsr** parameter can be specified.
- The **cdsr** parameter can be specified.
- The **saddr=*** parameter can be specified.
- The **saddr** and **eaddr** parameters can contain hexadecimal digits.

The specified **opname** parameter value must exist in the GSM Map Op-Code table.

If the **eaddr** parameter is specified, its value must contain the same number of digits as the **saddr** parameter value.

If the **eaddr** parameter is specified, its value must be greater than the **saddr** parameter value.

If the **eaddr** parameter is specified, the **saddr** parameter must be specified.

If the **saddr=*** parameter is specified, then the **eaddr** parameter cannot be specified.

If the **saddr** parameter is specified, the **cgsr** and **cdsr** parameters cannot be specified.

The **saddr**, **npv**, and **naiv** parameters must be specified together in the command.

If any of the **saddr/eaddr/npv/naiv** and **cdsr** parameters are specified, then the **forbid** and **action** parameters cannot be specified.

A value of **state** or **location** cannot be specified for the **forbid** parameter unless the operation code referenced by the **opname** parameter is **71**. The **forbid** option is only valid for ATI MAP operation codes, and the **opcode=71** parameter signifies an ATI MAP operation code.

The **action=atierr** parameter cannot be specified unless the operation code referenced by the **opname** parameter is **71**. The **atierr** option is only valid for ATI MAP operation codes, and the **opcode=71** parameter signifies an ATI MAP operation code.

If the **cdsr** parameter is specified, then the **cgsr** parameter must be specified.

The specified **cgsr** parameter value must exist in the database.

The specified **cdsr** parameter value must exist in the database.

The Flexible GTT Load Sharing feature must be enabled before the **mapset** parameter can be specified.

The specified MAP set must exist.

Notes

None

Output

GSM MAP Screening single entries and range entries shown in separate sections of the output. All single entries are shown first in a summary report; all range entries follow.

rtrv-gsmmap-scrn:opname=e

tekelecstp 08-08-22 00:33:10 EST EAGLE 39.2.0

Single CgPA Entries for OPNAME: e

SADDR	NP	NAI	FORBD	ACT	PCA	SSN	CGSR	RI	TT
1111	2	3	all	fwd	001-001-002	12	ad	gt	11
SADDR	NP	NAI	FORBD	ACT	PCI	SSN	CGSR	RI	TT
SADDR	NP	NAI	FORBD	ACT	PCN	SSN	CGSR	RI	TT
SADDR	NP	NAI	FORBD	ACT	PCN24	SSN	CGSR	RI	TT
SADDR	NP	NAI	FORBD	ACT	CGSR				

Range CgPA Entries for OPNAME: e

SADDR	EADDR	NP	NAI	FORBD	ACT	PCA	SSN	CGSR
1234	3452	*	*	all	fwd	001-001-002	12	as
RI=gt	TT=11							
SADDR	EADDR	NP	NAI	FORBD	ACT	PCI	SSN	CGSR
SADDR	EADDR	NP	NAI	FORBD	ACT	PCN	SSN	CGSR
SADDR	EADDR	NP	NAI	FORBD	ACT	PCN24	SSN	CGSR
SADDR	EADDR	NP	NAI	FORBD	ACT	CGSR		

GSM MAP Screening Table (8 of 4000) is 1% full

;

The following example shows the output when the Flexible GTT Load Sharing feature is on.

rtrv-gsmmap-scrn:opname=dd

tekelecstp 08-08-22 00:45:11 EST EAGLE 39.2.0

Single CgPA Entries for OPNAME: dd

SADDR	NP	NAI	FORBD	ACT	PCA	SSN	CGSR	MAPSET	RI
SADDR	NP	NAI	FORBD	ACT	PCI	SSN	CGSR	MAPSET	RI
*	*	*	all	fwd	1-221-2	13	ab	DFLT	gt
TT=11									
SADDR	NP	NAI	FORBD	ACT	PCN	SSN	CGSR	MAPSET	RI
SADDR	NP	NAI	FORBD	ACT	PCN24	SSN	CGSR	MAPSET	RI
SADDR	NP	NAI	FORBD	ACT	CGSR				

Range CgPA Entries for OPNAME: dd

SADDR	EADDR	NP	NAI	FORBD	ACT	PCA	SSN	CGSR

SADDR	EADDR	NP NAI FORBD ACT	PCI	SSN CGSR
1234	3452	* * all fwd	1-221-2	13 ak

MAPSET=DFLT RI=gt TT=11

SADDR	EADDR	NP NAI FORBD ACT	PCN	SSN CGSR

SADDR	EADDR	NP NAI FORBD ACT	PCN24	SSN CGSR

SADDR	EADDR	NP NAI FORBD ACT	CGSR

GSM MAP Screening Table (14 of 4000) is 1% full

;

The following example shows the output for a specific MAP set. The Flexible GTT Load Sharing feature is on.

rtrv-gsmmap-scrn:opname=rr:mapset=1

tekelecstp 08-01-22 00:59:18 EST EAGLE 38.0.0

Single CgPA Entries for OPNAME: rr

SADDR	NP NAI FORBD ACT	PCA	SSN CGSR	MAPSET	RI

SADDR	NP NAI FORBD ACT	PCI	SSN CGSR	MAPSET	RI

SADDR	NP NAI FORBD ACT	PCN	SSN CGSR	MAPSET	RI

SADDR	NP NAI FORBD ACT	PCN24	SSN CGSR	MAPSET	RI

Range CgPA Entries for OPNAME: rr

SADDR	EADDR	NP NAI FORBD ACT	PCA	SSN CGSR
1234	3452	* * all fwd	001-001-002	12 au

MAPSET=1 RI=gt TT=11

SADDR	EADDR	NP NAI FORBD ACT	PCI	SSN CGSR

SADDR	EADDR	NP NAI FORBD ACT	PCN	SSN CGSR

SADDR	EADDR	NP NAI FORBD ACT	PCN24	SSN CGSR

GSM MAP Screening Table (26 of 4000) is 1% full

;

The following example shows the output for the global translation routing indicator.

rtrv-gsmmap-scrn:opname=test3:ri=gt

tekelecstp 08-08-18 17:26:42 EST EAGLE 39.2.0

Single CgPA Entries for OPNAME: test3

SADDR	NP NAI FORBD ACT	PCA	SSN CGSR	RI	TT
*	* * all fwd	001-001-002	12 ad	gt	11

SADDR	NP NAI FORBD ACT	PCI	SSN CGSR	RI	TT

SADDR	NP NAI FORBD ACT	PCN	SSN CGSR	RI	TT

SADDR	NP NAI FORBD ACT	PCN24	SSN CGSR	RI	TT

SADDR	NP NAI FORBD ACT	CGSR

Range CgPA Entries for OPNAME: test3

```
-----
SADDR      EADDR      NP NAI FORBD ACT      PCA      SSN CGSR
*          *          * *   all   fwd      001-001-002  -   d
RI=gt  TT=11

SADDR      EADDR      NP NAI FORBD ACT      PCI      SSN
CGSR

SADDR      EADDR      NP NAI FORBD ACT      PCN      SSN CGSR

SADDR      EADDR      NP NAI FORBD ACT      PCN24     SSN
CGSR

SADDR      EADDR      NP NAI FORBD ACT      CGSR
```

GSM MAP Screening Table (4 of 4000) is 1% full

;

The following example shows the output for the subsystem number routing indicator.

rtrv-gsmmap-scrn:opname=e:ri=ssn

tekelecstp 08-08-21 15:40:00 EST EAGLE 39.2.0

Single CgPA Entries for OPNAME: e

```
-----
SADDR      NP NAI FORBD ACT      PCA      SSN CGSR      RI      TT
*          * *   all   fwd      001-001-002  12  ad      ssn    11

SADDR      NP NAI FORBD ACT      PCI      SSN CGSR      RI      TT

SADDR      NP NAI FORBD ACT      PCN      SSN CGSR      RI      TT

SADDR      NP NAI FORBD ACT      PCN24     SSN CGSR      RI      TT
```

Range CgPA Entries for OPNAME: e

```
-----
SADDR      EADDR      NP NAI FORBD ACT      PCA      SSN CGSR
*          *          * *   all   fwd      001-001-002  12  d
RI=ssn TT=11

SADDR      EADDR      NP NAI FORBD ACT      PCI      SSN CGSR

SADDR      EADDR      NP NAI FORBD ACT      PCN      SSN CGSR

SADDR      EADDR      NP NAI FORBD ACT      PCN24     SSN CGSR

SADDR      EADDR      NP NAI FORBD ACT      CGSR
```

GSM MAP Screening Table (4 of 4000) is 1% full

;

The following example shows the output for the global translation routing indicator and a specified mapset:

rtrv-gsmmap-scrn:opname=e:mapset=df1t:ri=gt

tekelecstp 08-08-22 00:57:57 EST EAGLE 39.2.0

Single CgPA Entries for OPNAME: e

```
-----
SADDR      NP NAI FORBD ACT      PCA      SSN CGSR      MAPSET      RI
```

```

1111      2 3 all fwd      001-001-002 12 ad      DFLT      gt
TT=11

```

```

SADDR      NP NAI FORBD ACT      PCI      SSN CGSR      MAPSET      RI

```

```

SADDR      NP NAI FORBD ACT      PCN      SSN CGSR      MAPSET      RI

```

```

SADDR      NP NAI FORBD ACT      PCN24      SSN CGSR      MAPSET      RI

```

Range CgPA Entries for OPNAME: e

```

SADDR      EADDR      NP NAI FORBD ACT      PCA      SSN CGSR
1234      3452      * * all fwd      001-001-002 12 as
MAPSET=DFLT RI=gt TT=11

```

```

SADDR      EADDR      NP NAI FORBD ACT      PCI      SSN CGSR

```

```

SADDR      EADDR      NP NAI FORBD ACT      PCN      SSN CGSR

```

```

SADDR      EADDR      NP NAI FORBD ACT      PCN24      SSN CGSR

```

GSM MAP Screening Table (26 of 4000) is 1% full

;

The following example shows the output for called and calling party screening references:

rtrv-gsmmap-scrn:opname=rr:cgsr=au:cdsr=aj

tekelecstp 08-08-22 00:58:55 EST EAGLE 39.2.0

```

SADDR      EADDR      NP NAI FORBD ACT      PCA      SSN CDSR
1234      3452      * * all fwd      001-001-002 12 aj
MAPSET=1 RI=gt TT=11

```

GSM MAP Screening Table (26 of 4000) is 1% full

;

The following example shows the output for a calling party screening reference.

rtrv-gsmmap-scrn:opname=dd:cgsr=ak

tekelecstp 08-08-22 00:44:34 EST EAGLE 39.2.0

Single CdPA Entries for OPNAME: dd and CGSR: ak

```

SADDR      NP NAI FORBD ACT      PCA      SSN CDSR RI      TT

```

```

SADDR      NP NAI FORBD ACT      PCI      SSN CDSR RI      TT
3476      * * all fwd      1-221-2      13 gu gt      11

```

```

SADDR      NP NAI FORBD ACT      PCN      SSN CDSR RI      TT

```

```

SADDR      NP NAI FORBD ACT      PCN24      SSN CDSR RI      TT

```

```

SADDR      NP NAI FORBD ACT      CDSR

```

Range CdPA Entries for OPNAME: dd and CGSR: ak

```

SADDR      EADDR      NP NAI FORBD ACT      PCA      SSN CDSR

```

```

SADDR      EADDR      NP NAI FORBD ACT      PCI      SSN CDSR
1234      3452      * * all fwd      1-221-2      13 gh
RI=gt TT=11

```

```

SADDR      EADDR      NP NAI FORBD ACT      PCN      SSN CDSR

```

SADDR	EADDR	NP NAI FORBD ACT	PCN24	SSN CDSR

SADDR	EADDR	NP NAI FORBD ACT	CDSR

GSM MAP Screening Table (14 of 4000) is 1% full

;

The following example shows the output for a specified translation type.

rtrv-gsmmap-scrn:opname=test4:tt=12

tekelecstp 08-08-18 17:26:42 EST EAGLE 39.2.0

Single CgPA Entries for OPNAME: test4

SADDR	NP NAI FORBD ACT	PCA	SSN CGSR	RI	TT
*	* * all fwd	001-001-002	12 ad	ssn	12
SADDR	NP NAI FORBD ACT	PCI	SSN CGSR	RI	TT
SADDR	NP NAI FORBD ACT	PCN	SSN CGSR	RI	TT
SADDR	NP NAI FORBD ACT	PCN24	SSN CGSR	RI	TT
SADDR	NP NAI FORBD ACT	CGSR			

Range CgPA Entries for OPNAME: test4

SADDR	EADDR	NP NAI FORBD ACT	PCA	SSN CGSR
*	*	* * all fwd	001-001-002	- d
RI=ssn TT=12				
SADDR	EADDR	NP NAI FORBD ACT	PCI	SSN CGSR
SADDR	EADDR	NP NAI FORBD ACT	PCN	SSN CGSR
SADDR	EADDR	NP NAI FORBD ACT	PCN24	SSN CGSR
SADDR	EADDR	NP NAI FORBD ACT	CGSR	

GSM MAP Screening Table (4 of 4000) is 1% full

;

The following example shows the output for a specified translation type and a specified mapset.

rtrv-gsmmap-scrn:opname=e:mapset=df1t:tt=12

tekelecstp 08-01-22 00:57:57 EST EAGLE 39.2.0

Single CgPA Entries for OPNAME: e

SADDR	NP NAI FORBD ACT	PCA	SSN CGSR	MAPSET	RI
1111	2 3 all fwd	001-001-002	12 ad	DFLT	ssn
TT=12					
SADDR	NP NAI FORBD ACT	PCI	SSN CGSR	MAPSET	RI
SADDR	NP NAI FORBD ACT	PCN	SSN CGSR	MAPSET	RI
SADDR	NP NAI FORBD ACT	PCN24	SSN CGSR	MAPSET	RI

Range CgPA Entries for OPNAME: e

```

SADDR      EADDR      NP NAI FORBD ACT      PCA      SSN CGSR
1234       3452       *  *   all   fwd      001-001-002  12  as
MAPSET=DFLT RI=ssn TT=12

SADDR      EADDR      NP NAI FORBD ACT      PCI      SSN CGSR

SADDR      EADDR      NP NAI FORBD ACT      PCN      SSN CGSR

SADDR      EADDR      NP NAI FORBD ACT      PCN24     SSN CGSR

GSM MAP Screening Table (26 of 4000) is 1% full
;

```

Legend

SINGLE ENTRIES/RANGE ENTRIES—GSM MAP screening single entries and range entries are output in separate sections of the retrieval report. All single entries are output first during a summary report and then all range entries follow.

CgPA—Calling Party Address entry

CdPA—Called Party Address entry

OPNAME—User-defined MAP operation code name.

SADDR—Start origination address.

EADDR—End origination address. This column is displayed for range entries only.

NPV—Numbering plan value.

NAIV—Nature of address indicator value.

FORBID or **FORBD**—Indicates a forbidden parameter for the entered address. If a forbidden parameter is detected the message is rejected by the action defined by the **action** parameter. (Some values are abbreviated; for example, locat means **location**.)

ACTION or **ACT**—Screening action, if forbidden. Possible actions are pass, discard (disc), atterr, route, forward, duplicate (dupl), and dupdisc.

PC or **PCA**—ANSI Point Code

PCI—ITU International Point Code

PCN—ITU National Point Code

PCN24—24-bit ITU National Point Code

SSN—Subsystem Number

CGSR—CgPA Screening Reference

CDSR—CdPA Screening Reference

MAPSET—MAP set

RI—Routing Indicator

TT—Translation Type

rtrv-gsmopts

Retrieve GSM System Options

Use this command to display all GSM (Global System for Mobile Telecommunication) system options from the database.

Keyword: rtrv-gsmopts

Related Commands: chg-gsmopts, chg-gsmsmsopts, rtrv-gsmsmsopts

Command Class: Database Administration

Parameters

This command has no parameters.

Example

rtrv-gsmopts

Dependencies

The G-Flex feature must be turned on, or the G-Port, EIR, IGM, V-Flex, MO-based GSM SMS NP, MO-based IS41 SMS NP, or MO SMS IS41-to-GSM Migration feature must be enabled before this command can be entered.

The EGLEOPTS table is corrupt or cannot be found.

Notes

None

Output

The following example shows the output if the G-Flex feature is turned on.

rtrv-gsmopts

```
rlghncxa03w 08-09-02 09:04:14 EST EAGLE 39.2.0
```

GSM OPTIONS

```
-----
DEFMCC          = NONE
DEFMNC          = NONE
SRFADDR         = NONE
MSRNDIG         = RN
DEFMAPVR        = 1
IS412GSM        = NONE
SRIDNNOTFOUND   = GTT
```

;

The following example shows the output if the G-Flex feature is turned on and includes values for CCNC and MCCMNC.

rtrv-gsmopts

```
rlghncxa03w 08-09-02 09:04:14 EST EAGLE 39.2.0
```

GSM OPTIONS

```
-----
DEFMCC          = NONE
DEFMNC          = NONE
SRFADDR         = NONE
MSRNDIG         = RN
DEFMAPVR        = 1
CCNC            = 33322123
MCCMNC          = 21434
IS412GSM        = NONE
SRIDNNOTFOUND   = GTT
```

;

The following example shows the output if the G-Port feature is turned on.

rtrv-gsmopts

```
rlghncxa03w 08-09-03 09:04:14 EST EAGLE 39.2.0
```

GSM OPTIONS

```
-----
DEFMCC          = NONE
SRFADDR         = 123456789abcdef
MSRNDIG         = RNASD
DEFMAPVR        = 1
SRIDN           = TCAP
IS412GSM        = 0123456789abcde
MSISDNTRUNC     = 0
MIGRPFX         = SINGL
GSM2IS41        = NONE
SRIDNNOTFOUND   = SRINACK
```

;

The following examples show the output if the G-Port feature is turned on and includes the Server Prefix digits. The SERVERPFX field does not appear if the G-Port feature is not on or if the Server Prefix string is not provisioned.

rtrv-gsmopts

```
rlghncxa03w 08-09-02 09:04:14 EST EAGLE 39.2.0
```

GSM OPTIONS

```
-----
DEFMCC          = NONE
SRFADDR         = 123456789abcdef
MSRNDIG         = ASDRNDN
```

```

DEFMAPVR          = 1
SRIDN              = TCAP
IS412GSM          = 0123456789abcde
MSISDNTRUNC       = 3
MIGRPFEX          = SINGLE
GSM2IS41          = NONE
SERVERPFEX        = 0000
SRIDNNOTFOUND     = GTT

```

;

The following example shows the output if the Equipment Identity Register (EIR) feature is turned on.

rtrv-gsmopts

```

tekelecstp 08-09-08 14:53:59 EST  EAGLE5 39.2.0
GSM OPTIONS
-----
DEFMCC          = NONE
DEFMNC          = NONE
SRFADDR         = NONE
MSRNDIG         = RN
IS412GSM        = NONE
DEFMAPVR        = 1
EIRGRSP         = BLKLST
EIRRSPTYPE      = TYPE2
EIRIMSICHK      = ON
SRIDNNOTFOUND   = GTT

```

;

The following example includes multiple country code entries and no MSISDN truncation digits.

rtrv-gsmopts

```

tekelecstp 08-09-08 14:53:59 EST  EAGLE 39.2.0
GSM OPTIONS
-----
DEFMCC          = NONE
DEFMNC          = NONE
SRFADDR         = NONE
MSRNDIG         = RN
IS412GSM        = NONE
DEFMAPVR        = 1
IS412GSM        = NONE
MULTCC          = 2
MULTCC          = 4
MULTCC          = 5
MULTCC          = 20
MULTCC          = 119
MULTCC          = 121
MULTCC          = 123
MULTCC          = 124
MSISDNTRUNC     = 0
SRIDNNOTFOUND   = GTT

```

;

The following example shows the output if the IS41 GSM Migration feature is turned on.

rtrv-gsmopts

```

tekelecstp 08-09-05 14:05:45 EST  EAGLE 39.2.0
GSM OPTIONS
-----
DEFMCC          = NONE
DEFMNC          = NONE
SRFADDR         = NONE
MSRNDIG         = RN
DEFMAPVR        = 1

```

```

SRIDN          = TCAP
IS412GSM       = NONE
MULTCC         = 2
MULTCC         = 4
MULTCC         = 5
MULTCC         = 20
MULTCC         = 119
MULTCC         = 121
MULTCC         = 123
MULTCC         = 124
MSISDNTRUNC    = 0
MIGRPFX        = SINGLE
GSM2IS41       = NONE
SRIDNNOTFOUND  = GTT

```

```
;
```

The following example shows the output if the G-Flex MAP Layer Routing feature is turned on.

rtrv-gsmopts

```

tekelecstp 08-09-04 20:34:22 EST  EAGLE 39.2.0
GSM OPTIONS
-----
DEFMCC         = NONE
DEFMNC         = NONE
SRFADDR        = NONE
MSRNDIG        = RN
DEFMAPVR       = 1
IS412GSM       = NONE
MSISDNTRUNC    = 0
MIGRPFX        = SINGLE
GSM2IS41       = NONE
GFLEXMAPLAYERRTG = ON
SRIDNNOTFOUND  = GTT

```

```
;
```

rtrv-gsms-opcode

Retrieve GSM MAP Screening Operation Code

Use this command to retrieve the concerned GSM (Global System for Mobile Telecommunication) MAP (Mobile Application Part) screening operation codes and the default screening action for the operation code. This command allows the craftsman to verify a list of all operation codes or a single operation code that the system uses in performing GSM Map Screening.

Keyword: rtrv-gsms-opcode

Related Commands: chg-gsms-opcode, dlt-gsms-opcode, ent-gsms-opcode

Command Class: Database Administration

Parameters

:mapset= (optional)

The MAP set ID.

Range: 1-36000 dflt

dflt—Default MAP set

:opcode= (optional)

MAP operation code.

Range: 0-255 *

Default: Display all MAP operation codes

:opname= (optional)

The user-defined name for the operation code. The **opname** value is defined with the **ent-gsms-opcode** command.

Range: *ayyyyyyy*
 Up to 8 alphanumeric characters
Default: Display all operation code names

:ri= (optional)
Routing indicator. This parameter specifies whether a subsequent global title translation is required.
Range: **gt, ssn**

:tt= (optional)
Translation type. This parameter specifies the value the CdPA TT is set to as the result of Enhanced GSM Map Screening.
Range: **0-255 none**
Default: Display all translation types

Example

```
rtrv-gsms-opcode
rtrv-gsms-opcode:opname=ati
rtrv-gsms-opcode:ri=gt
rtrv-gsms-opcode:ri=ssn
rtrv-gsms-opcode:tt=11
```

Dependencies

The GSM Map Screening feature (see the **enable-ctrl-feat** command) must be enabled before this command can be entered.

The EGMS feature must be enabled and turned on before:

- The **opcode=*** can be specified.
- An **opname** parameter can be specified that refers to an **opcode=*** parameter.

The **opcode** parameter and the **opname** parameter cannot be specified together in the same command.

The specified **opname** parameter must exist in the GSM MAP Op-Code table.

The Flexible GTT Load Sharing feature must be enabled before the **mapset** parameter can be specified.

The specified MAP set must exist.

Notes

None

Output

rtrv-gsms-opcode

tekelecstp 08-08-22 00:32:17 EST EAGLE 39.2.0

OPCODE	OPNAME	DFLTACT	PCA	SSN	RI	TT
15	d	fwd	001-001-002	12	ssn	11
16	e	fwd	001-001-002	12	gt	21
19	f	fwd	001-001-002	12	gt	14
20	h	fwd	001-001-002	-	gt	11
OPCODE	OPNAME	DFLTACT	PCI	SSN	RI	TT
17	dd	fwd	1-221-2	13	gt	244
OPCODE	OPNAME	DFLTACT	PCN	SSN	RI	TT
OPCODE	OPNAME	DFLTACT	PCN24	SSN	RI	TT
OPCODE	OPNAME	DFLTACT				
12	a	disc				
13	b	disc				

GSMMS OPCODE Table (9 of 257) is 4% full

;

rtrv-gsms-opcode:opname=e

tekelecstp 08-08-22 00:32:45 EST EAGLE 39.2.0

OPCODE	OPNAME	DFLTACT	PCA	SSN	RI	TT
16	e	fwd	001-001-002	12	gt	21

GSMMS OPCODE Table (9 of 257) is 4% full

;

rtrv-gsms-opcode:opname=ati

tekelecstp 08-08-22 00:32:45 EST EAGLE 39.2.0

OPCODE	OPNAME	DFLTACT	PCN	SSN	RI	TT
72	ati	fwd	12345	12	gt	11

GSMMS OPCODE Table (9 of 257) is 4% full

;

The following example shows output for a ITU International point code:

rtrv-gsms-opcode:opname=dd

tekelecstp 08-08-22 00:55:43 EST EAGLE 39.2.0

OPCODE	OPNAME	DFLTACT	PCI	SSN	RI	TT
17	dd	fwd	1-221-2	13	gt	244

GSMMS OPCODE Table (13 of 257) is 5% full

;

The following example includes a spare point code:

rtrv-gsms-opcode

tekelecstp 08-08-22 00:54:42 EST EAGLE 39.2.0

OPCODE	OPNAME	DFLTACT	PCA	SSN	RI	TT
15	d	fwd	001-001-002	12	ssn	11
16	e	fwd	001-001-002	12	gt	21
19	f	fwd	001-001-002	12	gt	14
20	h	fwd	001-001-002	-	gt	11
21	k	fwd	001-001-002	12	gt	11
22	t	fwd	001-001-002	-	gt	128

Commands

rtrv-gsms-opcode

```

23      u      fwd      001-001-002      12      ssn      11
39      rr     fwd      001-001-002      12      ssn      11

OPCODE  OPNAME  DFLTACT  PCI      SSN      RI      TT
17      dd     fwd      1-221-2   13      gt      244
31      kk     fwd      1-221-2   13      ssn     11
44      rf     fwd      1-221-2   13      gt      11

OPCODE  OPNAME  DFLTACT  PCN      SSN      RI      TT

OPCODE  OPNAME  DFLTACT  PCN24     SSN      RI      TT

OPCODE  OPNAME  DFLTACT
12      a      disc
13      b      disc

```

GSMMS OPCODE Table (13 of 257) is 5% full

;

The following example shows the output when the Flexible GTT Load Sharing feature is on.

rtrv-gsms-opcode

tekelecstp 08-08-22 00:54:42 EST EAGLE 39.2.0

```

OPCODE  OPNAME  DFLTACT  PCA      SSN      MAPSET  RI      TT
15      d      fwd      001-001-002  12      DFLT    ssn     11
16      e      fwd      001-001-002  12      DFLT    gt      21
19      f      fwd      001-001-002  12      DFLT    gt      14
20      h      fwd      001-001-002  -       DFLT    gt      11
21      k      fwd      001-001-002  12      DFLT    gt      11
22      t      fwd      001-001-002  -       DFLT    gt      128
23      u      fwd      001-001-002  12      DFLT    ssn     11
39      rr     fwd      001-001-002  12      1       ssn     11

OPCODE  OPNAME  DFLTACT  PCI      SSN      MAPSET  RI      TT
17      dd     fwd      1-221-2   13      DFLT    gt      244
31      kk     fwd      1-221-2   13      DFLT    ssn     11
44      rf     fwd      1-221-2   13      2       gt      11

OPCODE  OPNAME  DFLTACT  PCN      SSN      MAPSET  RI      TT

OPCODE  OPNAME  DFLTACT  PCN24     SSN      MAPSET  RI      TT

OPCODE  OPNAME  DFLTACT
12      a      disc
13      b      disc

```

GSMMS OPCODE Table (13 of 257) is 5% full

;

The following example shows output for a specific MAP set. The Flexible GTT Load Sharing feature is on.

rtrv-gsms-opcode:mapset=2

tekelecstp 08-08-22 00:56:01 EST EAGLE 39.2.0

```

OPCODE  OPNAME  DFLTACT  PCA      SSN      MAPSET  RI      TT

OPCODE  OPNAME  DFLTACT  PCI      SSN      MAPSET  RI      TT
44      rf     fwd      1-221-2   13      2       gt      11

OPCODE  OPNAME  DFLTACT  PCN      SSN      MAPSET  RI      TT

OPCODE  OPNAME  DFLTACT  PCN24     SSN      MAPSET  RI      TT

```

GSMMS OPCODE Table (13 of 257) is 5% full

;

The following example shows the output for the global translation routing indicator.

rtrv-gsms-opcode:ri=gt

tekelecstp 08-08-22 00:54:53 EST EAGLE 39.2.0

OPCODE	OPNAME	DFLTACT	PCA	SSN	RI	TT
16	e	fwd	001-001-002	12	gt	21
19	f	fwd	001-001-002	12	gt	14
20	h	fwd	001-001-002	-	gt	11
21	k	fwd	001-001-002	12	gt	11
22	t	fwd	001-001-002	-	gt	128

OPCODE	OPNAME	DFLTACT	PCI	SSN	RI	TT
17	dd	fwd	1-221-2	13	gt	244
44	rf	fwd	1-221-2	13	gt	11

OPCODE	OPNAME	DFLTACT	PCN	SSN	RI	TT

OPCODE	OPNAME	DFLTACT	PCN24	SSN	RI	TT

GSMMS OPCODE Table (13 of 257) is 5% full

;

The following example shows the output for the subsystem number routing indicator. The FGTTLS feature is enabled.

rtrv-gsms-opcode:ri=ssn

tekelecstp 08-08-22 00:55:03 EST EAGLE 39.2.0

OPCODE	OPNAME	DFLTACT	PCA	SSN	MAPSET	RI	TT
15	d	fwd	001-001-002	12	DFLT	ssn	11
23	u	fwd	001-001-002	12	DFLT	ssn	11
39	rr	fwd	001-001-002	12	1	ssn	11

OPCODE	OPNAME	DFLTACT	PCI	SSN	MAPSET	RI	TT
31	kk	fwd	1-221-2	13	DFLT	ssn	11

OPCODE	OPNAME	DFLTACT	PCN	SSN	MAPSET	RI	TT

OPCODE	OPNAME	DFLTACT	PCN24	SSN	MAPSET	RI	TT

GSMMS OPCODE Table (13 of 257) is 5% full

;

The following example shows the output for a specified translation type.

rtrv-gsms-opcode:tt=11

tekelecstp 08-08-22 00:54:53 EST EAGLE 39.2.0

OPCODE	OPNAME	DFLTACT	PCA	SSN	RI	TT
15	d	fwd	001-001-002	12	ssn	11
20	h	fwd	001-001-002	-	gt	11
21	k	fwd	001-001-002	12	gt	11
22	t	fwd	001-001-002	-	gt	11
23	u	fwd	001-001-002	12	ssn	11
39	rr	fwd	001-001-002	12	ssn	11

OPCODE	OPNAME	DFLTACT	PCI	SSN	RI	TT
31	kk	fwd	1-221-2	13	ssn	11
44	rf	fwd	1-221-2	13	gt	11

OPCODE	OPNAME	DFLTACT	PCN	SSN	RI	TT

OPCODE	OPNAME	DFLTACT	PCN24	SSN	RI	TT

GSMMS OPCODE Table (13 of 257) is 5% full

;

Legend**OPCODE**—MAP operation code**OPNAME**—The user-defined name of operation code**DFLTACT**—The default screening action**PCA**—ANSI Point Code**PCI**—ITU International Point Code**PCN**—ITU National Point Code**PCN24**—24-bit ITU National Point Code**SSN**—Subsystem Number**MAPSET**—MAP set**RI**—Routing Indicator**TT**—Translation Type**rtrv-gsmsmsopts****Retrieve GSM SMS System Options**

Use this command to display all GSM SMS options from the database.

Keyword: rtrv-gsmsmsopts**Related Commands:** chg-gsmopts, chg-gsmsmsopts, rtrv-gsmopts**Command Class:** Database Administration**Parameters**

This command has no parameters.

Example

```
rtrv-gsmsmsopts
```

Dependencies

The EGLEOPTS table is corrupt or cannot be found.

Notes

None

Output

```
rtrv-gsmsmsopts
```

```
tekelecstp 09-02-20 11:46:51 EST EAGLE 40.1.0
```

```
GSM SMS OPTIONS
```

```
-----
```

BPARTYGTTSN	= NONE	MOSMSGTTDIG	= SCCPCDPA
MOSMSTYPE	= ALL	MOSMSNAI	= NAT
MOSMSSA	= YES	MOSMSFWD	= YES
MOSMSACLEN	= 0	MOSMSGTA	= ABCDEF1234567890EF
MOSMSTCAPSEG	= OFF	MOSMSDIGMAT	= EXACT

MTSMSIMSI	= MCCRNDN	MTSMSNNI	= RN
MTSMSTYPE	= RN	MTSMSACKN	= ACK
MTMSDLTR	= NO	MTMSDLTRV	= NONE
MTSMSNAKERR	= 1	MTMSCHKSRC	= NO
MTMMSYPE	= RN	MTMMSGTA	= NONE
MTMMSACKN	= ACK		

```
;
```

rtrv-gsmssn-scrn**Retrieve GSM Subsystem Number Screening
Entry**

Use this command to retrieve all or single subsystem numbers in the GSM SSN screening table.

Keyword: `rtrv-gsmssn-scrn`

Related Commands: `dlt-gsmssn-scrn`, `ent-gsmssn-scrn`

Command Class: Database Administration

Parameters

:ssn= (optional)

Subsystem number.

Range: `000-255`

Default: Display all

:type= (optional)

Subsystem type.

Range: `orig, dest`

orig—The origination SSN

dest—The destination SSN

Default: Display all

Example

```
rtrv-gsmssn-scrn
```

```
rtrv-gsmssn-scrn:ssn=0:type=dest
```

Dependencies

The GSM Map Screening feature must be enabled (see the **enable-ctrl-feat** command) before this command can be entered.

Notes

If specified, the **ssn/type** parameter combination must exist in the GSM SSN screening table. If the value does not exist, the following message is displayed:

```
SSN ORIG DEST
```

```
No matching entries with the specified criteria found.
```

Output**rtrv-gsmssn-scrn:ssn=2:type=dest**

```
rlghncxa03w 04-02-20 09:07:58 EST EAGLE 31.3.0
SSN ORIG DEST
002 No Yes
GSMMS SSN table is (2 of 512) 1% full
RTRV-GSMSSN-SCRN: MASP A - COMPLTD
```

;

rtrv-gsmssn-scrn:ssn=10:type=orig

```
rlghncxa03w 04-02-20 09:07:58 EST EAGLE 31.3.0
SSN ORIG DEST
010 Yes Yes
GSMMS SSN table is (256 of 512) 50% full
RTRV-GSMSSN-SCRN: MASP A - COMPLTD
```

;

rtrv-gsmssn-scrn

```
rlghncxa03w 04-02-20 09:07:58 EST EAGLE 31.3.0
SSN ORIG DEST
002 Yes No
010 Yes Yes
GSMMS SSN table is (2 of 512) 1% full
RTRV-GSMSSN-SCRN: MASP A - COMPLTD
```

;

Legend

SSN—Subsystem number.

ORIG—Specifies whether the subsystem type is origination (yes) or not (no).

DEST—Specifies whether the subsystem type is destination (yes) or not (no).

rtrv-gta**Retrieve Global Title Address Information**

Use this command to display a list of the GTA (global title address) information applicable to the specified GTT set. This list can be filtered using a number of parameters. The report that is displayed contains two records (the percentage full and number-of-cells-used field) that give the total entries in the GTT table without regard to the selector specified.

This command obtains the routing object (destination address and subsystem number), relative cost, and routing indicator assigned to that object for specified GTAs (global title addresses) or ranges of GTAs with a given GTT set.

NOTE: When the ANSI-ITU-China SCCP Conversion feature is enabled, entries that are provisioned with the xlat=dpc parameter, and that have specified the ntt parameter, are displayed with a xlat parameter value of dpcngt.

Keyword: rtrv-gta

Related Commands: chg-gta, dlt-gta, ent-gta

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:cggtmod= (optional)

Calling party global title modification indicator. This parameter displays all translation entries that have the specified value of the calling party GT modification indicator.

Range: **yes, no**

:cgpc= (optional)

ANSI CgPA point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Synonym: **cgpa**

Range: **000-255, ***

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

The asterisk (*) value is not valid for the *ni* subfield.

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

When **chg-sid:pctype=ansi** is specified, *ni*-*-*** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:cgpci= (optional)

ITU international CgPA point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:cgpcn= (optional)

ITU national CgPA point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:cgpcn24= (optional)

24-bit ITU national CgPA point code with subfields main signaling *area-sub signaling area-signaling point (msa-ssa-sp)*.

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:cgssn= (optional)

Starting CgPA subsystem number.

Range: **0-255**

:ecgssn= (optional)

Ending CgPA subsystem number.

Range: **0-255**

:egta= (optional)

End global title address. This parameter specifies the end of a range of global title digits.

Range: 1-21 digits

If the Hex Digit Support for GTT feature is not enabled and on, the range is 1 - 21 decimal digits; valid digits are **0-9**.

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are **0-9, a-f, A-F**.

Default: The first **gta** entry for the given GTT selector

:force= (optional)

Display more than 1000 entries.

Range: **yes, no**

Default: **no**

:gta= (optional)

Global title address. This parameter specifies the beginning of a range of global title digits.

Range: 1-21 digits

If the Hex Digit Support for GTT feature is not enabled and on, the range is 1 - 21 decimal digits; valid digits are **0-9**.

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are **0-9, a-f, A-F**.

Default: The first **gta** entry for the given GTT selector

:gttsn= (optional)

GTT set name. A GTT set is an entity to which global title addresses and selectors are assigned.

Range: *aaaaaaaa*

1 leading alphabetic and up to 8 following alphanumeric characters.

:loopset= (optional)

SCCP loopset name. This parameter retrieves translation entries that are associated with the specified loopset.

Range: *aaaaaaaa, none*

1 alphabetic character followed by up to 7 alphanumeric characters.

none—Translation entries with no association to any loopset.

:mapset= (optional)

MAP set ID. This parameter retrieves GTA information for a specified Mated Application set.

- Range:** 1-36,000 **dflt**
dflt—Default MAP set
- Default:** Retrieves GTA information for the default MAP set.
- :mrnset=** (optional)
 MRN set ID. This parameter retrieves GTA information for a specified Mated Relay Node set.
- Range:** 1-3000 **none**, **dflt**
dflt—Default MRN set
none—The GTA translation does not participate in any loadsharing.
- :num=** (optional)
 Number of entries to display.
- Range:** 1-65535
- Default:** 1—if **gta** is specified
 20—if **gta** is not specified
- :opc=** (optional)
 ANSI originating point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.
- Synonym:** **opca**
- Range:** 000-255, *
- Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).
- The asterisk (*) value is not valid for the *ni* subfield.
- When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.
- When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001–005.
- When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006–255.
- When **chg-sid:pctype=ansi** is specified, *ni*-*- is valid if *ni* = 006–255.
- The point code 000-000-000 is not a valid point code.
- :opci=** (optional)
 ITU international originating point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).
- Range:** s-, 0-255
- Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).
- prefix*—s-
zone—0-7
area—000-255
id—0-7
- The point code 0-000-0 is not a valid point code.
- :opcn=** (optional)
 ITU national originating point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npfnti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).
- Range:** s-, 0-16383, aa-zz
- Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).
- prefix*—s-

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:opc*n24*= (optional)

24-bit ITU originating point code with subfields main signaling *area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:pc= (optional)

ANSI point code in the form of *network indicator-network cluster-network cluster member* (*ni-nc-ncm*). . The *prefix* subfield indicates a private point code *prefix-ni-nc-ncm*).

Synonym: **pca**

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:pci= (optional)

ITU international point code in the form of *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:pcn= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:pcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Range: **p-**, 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

msa—000-255

ssa—000-255

sp—000-255

:pctype= (optional)

Point code type. This parameter can be specified only when the ANSI-ITU-China SCCP Conversion feature is enabled, to retrieve a single type of point code among mixed types of point code provisioned for a Translation Type.

Range: **ansi, itui, itun, itun24, ituis, ituns**

Default: Display all point code types

:ssn= (optional)

Subsystem number.

Range: 002-255

Default: Display all

Example

```
rtrv-gta:gttsn=t800:num=65535:force=yes
```

```
rtrv-gta:gttsn=t800:pc=8-1-1:ssn=222:gta=9195551212
```

```
rtrv-
```

```
gta:gttsn=t800:ssn=222:gta=9000000000:egta=9762429999:num=65535:force=yes
```

```
rtrv-gta:gttsn=ntoa23:pctype=ansi
```

```
rtrv-gta:gttsn=setnat003:pcn=s-129-aa
```

```
rtrv-gta:gttsn=setnat003:gta=987658321198765432101:pcn=s-128-aa
```

```
rtrv-gta:gttsn=tbla
```

```
rtrv-gta:gttsn=tbla:pc=1-1-1
```

```
rtrv-gta:gttsn=setssn:mapset=6
```

```
rtrv-gta:gttsn=setans006:mrnset=1
```

```
rtrv-gta:gttsn=setans004:cggmod=yes
```

Dependencies

The EGTT feature must be turned on before this command can be entered.

The ANSI-ITU-China SCCP Conversion feature must be enabled before the **pctype** parameter can be specified.

The **ssn**, **cgssn**, and **ecgssn** parameters cannot have a wildcard (*) value.

The **gttsn** parameter must be specified, cannot have a value of **none**, and must match an existing **gttsn**.

The **pc/pca/pci/pcn/pcn24**, **cgpc/cgpca/cgpci/cgpcn/cgpcn24**, and **opc/opca/opci/opcn/opcn24** parameters must be full point codes and must have valid values within the range for each subfield.

If the ANSI-ITU-China SCCP Conversion feature is not turned on, and the specified GTT set is an ANSI set, then the value specified for the **pc/pca** parameter must be a valid ANSI point code.

If the ANSI-ITU-China SCCP Conversion feature is not turned on, and the specified GTT set is an ITU set, then the value specified for the **pci/pcn/pcn24** parameter must be a valid ITU point code.

If the **egta** parameter is specified, the **gta** parameter must be specified. The **gta** and **egta** parameters must be the same length, and the value for the **egta** parameter must be greater than the value for the **gta** parameter.

If the specified **num** parameter value is greater than **1000**, the **force=yes** parameter must be specified.

The number of digits in the specified **gta** parameter must be at least the number of digits provisioned for the specified GTT set (**gttsn**). If the VGTT (variable length GTT) feature is turned on, there can be up to 10 GTA lengths per GTT set. When the **ent-gta** command is entered to create entries, the software keeps track of the lengths and allows only 10 different lengths.

If the Flexible GTT Load Sharing feature is not enabled, then the **mapset** parameter cannot be specified.

At least one entry must be provisioned in the specified MAP set in the MAP table.

The **(e)gta**, **cgpc/cgpca/cgpci/cgpcn/cgpcn24**, and **opc/opca/opci/opcn/opcn24**, and **(e)cgssn** parameters are mutually exclusive.

If the **ecgssn** parameter is specified, the **cgssn** parameter must be specified, and the **ecgssn** parameter must be greater than the **cgssn** parameter.

The Origin-based SCCP Routing feature must be enabled when specifying the **cgpc/cgpca/cgpci/cgpcn/cgpcn24**, **opc/opca/opci/opcn/opcn24**, or **(e)cgssn** parameters or when specifying the **xlat** parameter with a value of **udts** or **discard**.

The **gta** parameter can be specified only if the GTTSN set type has a value of **cdgta** or **cggta**.

The **cgpc/cgpca/cgpci/cgpcn/cgpcn24** parameter may be specified only if the GTTSN set type has a value of **cgpc**.

The **opc/opca/opci/opcn/opcn24** parameter may be specified only if the GTTSN set type has a value of **opc**.

The **cgssn** parameter may be specified only if the GTTSN set type has a value of **cgssn**.

If the specified GTT Set is an ANSI set, the **cgpc/cgpca** and **opc/opca** parameters must be valid ANSI point codes. If the specified GTT Set is an ITU set, the **cgpci/cgpcn/cgpcn24** and **opci/opcn/opcn24** parameters must be valid ITU point codes.

The range specified by the **(e)cgssn** parameters must exist for the specified GTT set. An exact match is not required.

The Hex Digit Support for GTT feature must be enabled and on before hexadecimal digits can be specified for the **gta** and **egta** parameters.

The SCCP Loop Detection feature must be enabled before the **loopset** parameter can be specified.

The value of the **loopset** parameter must already exist in the database.

At least one entry must be provisioned in the MRN table for the MRN set that is specified by the **mrnset** parameter.

The Flexible GTT Load Sharing feature must be enabled before the **mrnset** parameter can be specified.

The AMGTT feature or the AMGTT CgPA Upgrade feature must be turned on before the **cggmod** parameter can be specified.

The **mapset** parameter and the **mrnset** parameter cannot be specified together in the command.

Notes

The percentage full and number of cells used report that is provided with a **rtrv-gta** command reflects the total entries in the GTA table without regard to the selector specified.

When the EGTT feature is turned on, the GTT Selector (**ent/chg/dlt/rtrv-gtt sel**), GTT Set (**ent/dlt/rtrv-gtt set**), and GTA (**ent/chg/dlt/rtrv-gta**) commands replace the Translation Type (**ent/dlt/rtrv-tt**) and Global Title Translation (**ent/chg/dlt/rtrv-gtt**) commands. All data previously provisioned with these commands is maintained.

This command can be canceled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

If the **rtrv-gta** command is entered with only the **gta** parameter, a match would be an entry containing the same number of digits, or more digits, for the GTT set. For example, if **gta=8005556666** is specified, the six-digit GTT set **800555** would be a match. If the VGTT feature is turned on and the **egta** parameter is specified, all matching entries regardless of length are displayed.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (**s-**) and the private and spare point code subtype prefix (**ps-**). All of the point code types support the private (internal) point code subtype prefix (**p-**).

The point code domain translation types for EGTT are handled by the EAGLE 5 ISS protocol processing as either ANSI or ITU; therefore, ITU applies to ITU-I, ITU-I Spare, ITU-N, and ITU-N Spare. ITU-I includes ITU-I Spare, and ITU-N includes ITU-N Spare.

Output

NOTE: The Start GTA (gta) and End GTA (egta) fields are sized according to the ndgt parameter value. Because all GTAs for a GTT Set are the same size, this helps the appearance of the display. If all 21 digits are used, an entry will not fit on a single line. If two lines per entry are used, the size of the report would double, being inefficient for large reports. It is not anticipated that more than 15 digits will be used in the immediate future, but displaying GTAs longer than 19 digits will cause the line to wrap around to the next line.

Retrieve all GTAs for the specified GTT Set:

NOTE: The Start GTA (gta) and End GTA (egta) fields are sized according to the ndgt parameter value. Because all GTAs for a GTT Set are the same size, this helps the appearance of the display. If all 21 digits are used, an entry will not fit on a single line. If two lines per entry are used, the size of the report would double, being inefficient for large reports. It is not anticipated that more than 15 digits will be used in the immediate future, but displaying GTAs longer than 19 digits will cause the line to wrap around to the next.

rtrv-gta:gttsn=t800:num=65535:force=yes

rlghncxa03w 08-09-01 08:29:15 EST EAGLE 39.2.0

GTTSN NETDOM NDGT
t800 ansi 10

GTA table is (17 of 269999) 1% full.

START GTA	END GTA	XLAT	RI	PCA	SSN	CCGT	NTT
8005550000	8005551999	dpcssn	ssn	001-254-255	255	no	---
8005552000	8005553999	dpc	gt	001-254-255	255	no	---
8005554000	8005555999	dpcngt	gt	001-254-255	255	no	123
8005556000	8005557999	dpcssn	ssn	001-254-255	255	no	---
8005558000	8005559999	dpcssn	ssn	001-254-255	255	yes	---
9195551212		dpcssn	ssn	008-001-001	222	no	---
9762428487		dpcssn	ssn	001-254-255	222	no	---
9766423277		dpcssn	ssn	001-254-255	222	no	---
9769388928		dpcssn	ssn	001-254-255	222	no	---

Command Retrieved 9 Entries

;

Retrieve the specific GTAs containing the specified **pc/ssn/gta** combination for the specified GTT Set:

rtrv-gta:gttsn=t800:pc=8-1-1:ssn=222:gta=9195551212

rlghncxa03w 08-09-10 08:29:15 EST EAGLE 39.2.0

GTTSN NETDOM NDGT
t800 ansi 10

GTA table is (17 of 269999) 1% full.

START GTA	END GTA	XLAT	RI	PCA	SSN	CCGT	NTT
9195551212		dpcssn	ssn	008-001-001	222	no	---

Command Retrieved 1 Entries

;

Retrieve all GTAs containing the specified **ssn** and within the specified **gta** range for the specified GTT Set:

rtrv-

gta:gttsn=t800:ssn=222:gta=9000000000:egta=9762429999:num=65535:force=yes

rlghncxa03w 08-09-18 08:29:15 EST EAGLE 39.2.0

GTTSN	NETDOM	NDGT
t800	ansi	10

GTA table is (17 of 269999) 1% full.

START GTA	END GTA	XLAT	RI	PCA	SSN	CCGT	NTT
9195551212		dpcssn	ssn	008-001-001	222	no	---
9762428487		dpcssn	ssn	001-254-255	222	no	---

Command Retrieved 2 Entries

;

Retrieve all GTAs for the specified GTT Set when the VGTT feature is turned on:

rtrv-gta:gttsn=t800:num=65535:force=yes

rlghncxa03w 08-09-18 08:29:15 EST EAGLE 39.2.0

GTTSN	NETDOM	NDGT
t800	ansi	3,10

GTA table is (17 of 269999) 1% full.

START GTA	END GTA	XLAT	RI	PCA	SSN	CCGT	NTT
800		dpcssn	ssn	001-253-001	222	no	---
9195551212		dpcssn	ssn	008-001-001	222	no	---
9762428487		dpcssn	ssn	001-254-255	222	no	---
9766423277		dpcssn	ssn	001-254-255	222	no	---
9769388928		dpcssn	ssn	001-254-255	222	no	---
8005550000	8005551999	dpcssn	ssn	001-254-255	255	no	---
8005552000	8005553999	dpc	gt	001-254-255	255	no	---
8005554000	8005555999	dpcngt	gt	001-254-255	255	no	123
8005556000	8005557999	dpcssn	ssn	001-254-255	255	no	---
8005558000	8005559999	dpcssn	ssn	001-254-255	255	yes	---

Command Retrieved 10 Entries

;

The following example shows a retrieve with the GT Modification **nnp**, **nnai**, **npdd**, and **npds** parameter values:

rtrv-gta:gttsn=ansi

rlghncxa03w 08-09-18 08:29:15 EST EAGLE 39.2.0

GTTSN	NETDOM	NDGT
ansi	ansi	10

GTA table is (17 of 269999) 1% full.

START GTA	END GTA	XLAT	RI	PCA	SSN	CCGT	NTT
8005550000	8005551999	dpcssn	ssn	001-254-255	255	no	---
8005552000	8005553999	dpc	gt	001-254-255	255	no	---
				NNP=3 NNAI=120 NPDD=3 NPDS=345			
8005554000	8005555999	dpcngt	gt	001-254-255	255	no	123
8005558000	8005559999	dpcssn	ssn	001-254-255	255	yes	---
9195551212		dpcssn	ssn	008-001-001	222	no	---
9762428487		dpcssn	ssn	001-254-255	222	no	---
				NNP=3 NNAI=100 NPDD=3 NPDS=345			
9766423277		dpcssn	ssn	001-254-255	222	no	---

Command Retrieved 7 Entries

;

The following example shows output when the GTT table can contain up to 1,000,000 entries:

rtrv-gta:gttsn=ansi

```
rlghncxa03w 08-09-18 08:29:15 EST EAGLE 31.3.0
GTTSN      NETDOM  NDGT
ansi       ansi    10
```

GTA table is (17 of 1000000) 1% full.

START GTA	END GTA	XLAT	RI	PCA	SSN	CCGT	NTT
8005550000	8005551999	DPCSSN	SSN	001-254-255	255	no	---
8005552000	8005553999	DPCNGT	GT	001-254-255	255	no	123
NNP=3 NNAI=120 NPDD=3 NPDS=345							
8005554000	8005555999	DPCNGT	GT	001-254-255	255	no	123
8005558000	8005559999	DPCSSN	SSN	001-254-255	255	yes	---
9195551212		DPCSSN	SSN	008-001-001	222	no	---
9762428487		DPCNGT	GT	001-254-255	222	no	123
NNP=3 NNAI=100 NPDD=3 NPDS=345							
9766423277		DPCSSN	SSN	001-254-255	222	no	---

Command Retrieved 7 Entries

;

The following examples show output when the ANSI-ITU-China SCCP Conversion feature is enabled and the **pctype** parameter is specified.

rtrv-gta:gttsn=ntoa23:pctype=ansi

```
rlghncxa03w 08-09-18 08:29:15 EST EAGLE 39.2.0
GTTSN      NETDOM  NDGT
ntoa23     itu      4
```

GTA table is (36 of 269999) 1% full.

START GTA	END GTA	XLAT	RI	PC	SSN	CCGT	NTT
1899	1899	DPCNGT	GT	010-002-002	---	no	37
NNP= NNAI= NPDD=0 NPDS=							
NGTI=2							

Command Retrieved 1 Entries

;

rtrv-gta:gttsn=atoi22:pctype=itui

```
rlghncxa03w 08-09-18 08:29:15 EST EAGLE 39.2.0
```

```
GTTSN      NETDOM  NDGT
atoi22     ansi    9
```

GTA table is (36 of 269999) 1% full.

START GTA	END GTA	XLAT	RI	ITUI	PC	SSN	CCGT	NTT
991001200	991001300	DPCNGT	GT	7-001-4		---	no	4
NNP= NNAI= NPDD=0 NPDS=								
NGTI=2								

Command Retrieved 1 Entries

;

rtrv-gta:gttsn=aton21:pctype=itun

rlghncxa03w 08-09-18 08:29:15 EST EAGLE 39.2.0

GTTSN	NETDOM	NDGT
aton21	ansi	2

GTA table is (36 of 269999) 1% full.

START	GTA	END	GTA	XLAT	RI	ITUN	PC	SSN	CCGT	NTT
80		89		DPCSSN	SSN	15441		45	no	---

Command Retrieved 1 Entries

;

rtrv-gta:gttsn=ntin24:pctype=itun24

rlghncxa03w 08-09-18 08:29:15 EST EAGLE 39.2.0

GTTSN	NETDOM	NDGT
ntin24	itu	10

GTA table is (36 of 269999) 1% full.

START	GTA	END	GTA	XLAT	RI	ITUN24	PC	SSN	CCGT	NTT
8006550000		8006551999		DPCSSN	SSN	100-120-003		255	no	---

Command Retrieved 1 Entries

;

rtrv-gta:gttsn=setnat003

rlghncxa03w 08-09-18 08:29:15 EST EAGLE 39.2.0

GTTSN	NETDOM	NDGT
setnat003	itu	6,11,21

GTA table is (10 of 269999) 1% full.

START	GTA	END	GTA	XLAT	RI	PC
123456		123456		DPCSSN	GT	s-00128-aa
	SSN=10	CCGT=no	NTT=---			
	NNP=12	NNAI=125	NPDD=21	NPDS=125498679012426556356		
	NGTI=					
234567		234567		DPCNGT	GT	s-00124-aa
	SSN=---	CCGT=no	NTT=255			
234568		234568		DPC	GT	s-00124-aa
	SSN=0	CCGT=no	NTT=---			
234569		234569		DPC	GT	s-00124-aa
	SSN=0	CCGT=no	NTT=---			
	NNP=13	NNAI=120	NPDD=21	NPDS=125498679012426556356		
	NGTI=					
12345678901		23456789012		DPCSSN	SSN	s-00124-aa
	SSN=10	CCGT=no	NTT=---			
	NNP=14	NNAI=3	NPDD=0	NPDS=		
	NGTI=					
334569467213456789012		334569478932012345678		DPC	GT	s-00124-aa
	SSN=0	CCGT=no	NTT=---			
	NNP=13	NNAI=120	NPDD=21	NPDS=125498679012426556356		
	NGTI=					
987656789012345678901		987657321098765432101		DPCNGT	GT	s-00124-aa
	SSN=---	CCGT=no	NTT=234			
	NNP=12	NNAI=26	NPDD=0	NPDS=		
	NGTI=					
987658321198765432101		987658321198765432101		DPCNGT	GT	s-00128-aa
	SSN=---	CCGT=no	NTT=235			
	NNP=1	NNAI=127	NPDD=0	NPDS=987657878901234567891		
	NGTI=4					

```

987658321198765432102 990123456789012345678 DPCNGT GT s-00124-aa
SSN=--- CCGT=no NTT=235
NNP=1 NNAI=127 NPDD=0 NPDS=987657878901234567891
NGTI=4

```

Command Retrieved 9 Entries

;

rtrv-gta:gttsn=setnat003:pcn=s-129-aa

```
rlghncxa03w 08-09-18 08:29:15 EST EAGLE 39.2.0
```

```

GTTSN      NETDOM  NDGT
setnat003  itu     6,11,21

```

GTA table is (11 of 269999) 1% full.

```

START GTA      END GTA      XLAT  RI      PC
987658321198765432102 987658321198765432102 DPCNGT GT s-00129-aa
SSN=--- CCGT=no NTT=235
NNP=1 NNAI=127 NPDD=0 NPDS=987657878901234567891
NGTI=4

```

Command Retrieved 1 Entries

;

rtrv-gta:gttsn=setnat003:ssn=10

```
rlghncxa03w 08-09-18 08:29:15 EST EAGLE 39.2.0
```

```

GTTSN      NETDOM  NDGT
setnat003  itu     6,11,21

```

GTA table is (11 of 269999) 1% full.

```

START GTA      END GTA      XLAT  RI      PC
123456         123456         DPCSSN GT s-00128-aa
SSN=10 CCGT=no NTT=---
NNP=12 NNAI=125 NPDD=21 NPDS=125498679012426556356
NGTI=
12345678901    23456789012    DPCSSN SSN s-00124-aa
SSN=10 CCGT=no NTT=---
NNP=14 NNAI=3  NPDD=0  NPDS=
NGTI=

```

Command Retrieved 2 Entries

;

rtrv-gta:gttsn=setnat003:gta=987658321198765432101:pcn=s-128-aa

```
rlghncxa03w 08-09-18 08:29:15 EST EAGLE 39.2.0
```

```

GTTSN      NETDOM  NDGT
setnat003  itu     6,11,21

```

GTA table is (11 of 269999) 1% full.

```

START GTA      END GTA      XLAT  RI      PC
987658321198765432101 987658321198765432101 DPCNGT GT s-00128-aa
SSN=--- CCGT=no NTT=235
NNP=1 NNAI=127 NPDD=0 NPDS=987657878901234567891
NGTI=4

```

Command Retrieved 1 Entries

;

The following example shows an MRN set. The Flexible GTT Load-Sharing feature and the Intermediate GTT Load Sharing feature are on.

rtrv-gta:gttsn=setssnn

tekelecstp 08-09-10 09:49:42 EST EAGLE 39.2.0

GTTSN	NETDOM	NDGT
setssnn	ansi	-

GTA table is (1 of 269999) 1% full.

START GTA	END GTA	XLAT	RI	PCA
1111111111	1111111111	DPC	GT	001-001-003
MRNSET=1	SSN=0	CCGT=no	NTT=---	

Command Retrieved 1 Entries

;

The following example shows an MRN set value of NONE. The Flexible GTT Load-Sharing feature and Intermediate GTT Load Sharing features are on.

rtrv-gta:gttsn=seta

tekelecstp 08-09-10 09:49:42 EST EAGLE 39.2.0

GTTSN	NETDOM	NDGT
setssnn	ansi	-

GTA table is (1 of 269999) 1% full.

START GTA	END GTA	XLAT	RI	PCA
5555555556	5555555556	DPC	GT	001-001-002
MRNSET=NONE	SSN=0	CCGT=no	NTT=---	

Command Retrieved 1 Entries

;

The following example shows a MAP set. The Flexible GTT Load Sharing feature is enabled.

rtrv-gta:gttsn=tbla

tekelecstp 08-09-10 14:51:59 EST EAGLE 39.2.0

GTTSN	NETDOM	NDGT
tbla	ansi	6,10

GTA table is (3 of 269999) 1% full.

START GTA	END GTA	XLAT	RI	PCA
234567	234567	DPCSSN	GT	001-001-001
MRNSET=DFLT	SSN=10	CCGT=no	NTT=---	
9810012345	9850012345	DPCSSN	SSN	001-001-001
MAPSET=DFLT	SSN=10	CCGT=no	NTT=---	

Command Retrieved 2 Entries

;

The following example retrieves a CdPA GTA entry and an Advanced CdPA GTA entry.

rtrv-gta:gttsn=setcdpa

tekelecstp 08-09-10 09:49:42 EST EAGLE 39.2.0

GTTSN	NETDOM	NDGT
setcdpa	itu	6

GTA table is (15 of 269999) 1% full.

START GTA	END GTA	XLAT	RI	PC

```

106399          106489          DPCNGT  GT      1-200-1
SSN=--- CCGT=no NTT=17
NNP=1  NNAI=45 NPDD=5  NPDS=654321678901234567891
NGTI=4
CGGTASN=SETCG1      CGPCSN=----- SELID=----- OPCSN=-----
306399          306489          DPCNGT  GT      1-200-1
SSN=--- CCGT=no NTT=17
NNP=1  NNAI=45 NPDD=5  NPDS=654321678901234567891
NGTI=4
CGGTASN=----- CGPCSN=CGPCSET01 SELID=----- OPCSN=OPCSET001
400000          406489          UDTS
500000          506489          DISC
600001          600009          DPCSSN  SSN      -----
SSN=125 CCGT=no NTT=17
NNP=1  NNAI=45 NPDD=5  NPDS=654321678901234567891
NGTI=4
CGGTASN=----- CGPCSN=----- SELID=65500 OPCSN=OPCSET001

```

Command Retrieved 5 Entries

;

The following example retrieves a CgPA GTA entry.

rtrv-gta:gttsn=setcgpa

tekelecstp 08-09-10 09:49:42 EST EAGLE 39.2.0

```

GTTSN      NETDOM  NDGT
setcgpa    itu     6

```

GTA table is (15 of 269999) 1% full.

```

START GTA          END GTA          XLAT    RI      PC
406399            406489            DPCNGT  GT      1-200-1
SSN=--- CCGT=no NTT=17
NNP=1  NNAI=45 NSDD=9  NSDS=754321678901234567891
NGTI=4
CGSSNSN=SETCGSSN1
906399            906489            DISC

```

Command Retrieved 2 Entries

;

The following example retrieves a CgPA PC entry.

rtrv-gta:gttsn=setcgpc

tekelecstp 08-09-10 09:49:42 EST EAGLE 39.2.0

```

GTTSN      NETDOM  NDGT
setcgpc    ansi    -

```

GTA table is (5 of 269999) 1% full.

```

CgPA PC          XLAT    RI      PC
001-012-255      DPCNGT  GT      1-200-1
SSN=--- CCGT=no NTT=17
NNP=1  NNAI=45 NSDD=9  NSDS=754321678901234567891
NGTI=4
CGSSNSN=SETCGSSN2
255-010-*        UDTS
101-*-*          DPCNGT  GT      1-200-1
SSN=--- CCGT=no NTT=17
NNP=1  NNAI=45 NSDD=9  NSDS=754321678901234567891
NGTI=4
CGSSNSN=SETCGSSN2

```

Command Retrieved no Entries

;

The following example retrieves an OPC entry.

rtrv-gta:gttsn=setopc

```
tekelecstp 08-09-10 09:49:42 EST EAGLE 39.2.0
```

```
GTTSN      NETDOM  NDGT
setopc     ansi    -
```

GTA table is (5 of 269999) 1% full.

```
      OPC                      XLAT  RI      PC
s-001-012-255(A)             DPCNGT GT    s-1-200-1
      SSN=--- CCGT=no  NTT=17
      NNP=1  NNAI=45  NSDD=9  NSDS=754321678901234567891
      NGTI=4
      CGSSNSN=SETCGSSN3
      224-*-(N24)             UDTs
```

Command Retrieved no Entries

;

The following example retrieves a CgPA SSN entry.

rtrv-gta:gttsn=setssn

```
tekelecstp 08-09-10 09:49:42 EST EAGLE 39.2.0
```

```
GTTSN      NETDOM  NDGT
setssn     itu     -
```

GTA table is (5 of 269999) 1% full.

```
START SSN      END SSN      XLAT  RI      PC
100          200          DPCNGT GT    1-200-1
      SSN=--- CCGT=no  NTT=17
      NNP=1  NNAI=45  NSDD=9  NSDS=754321678901234567891
      NGTI=4
220          230          DISC
```

Command Retrieved 2 Entries

;

In the following example, the network domain is set to **cross**.

rtrv-gta:gttsn=ansiset1

```
tekelecstp 08-09-01 15:22:08 EST EAGLE 39.2.0
```

```
GTTSN      NETDOM  NDGT
ansiset1   cross   6
```

GTA table is (1 of 269999) 1% full.

```
START GTA END GTA  XLAT  RI  PC      SSN CCGT NTT
123456   123456   DPCSSN SSN 001-001-002  110 no   ---
```

Command Retrieved 1 Entries

;

The following example shows output when the Flexible GTT Load Sharing feature is enabled.

rtrv-gta:gttsn=tblb

```
tekelecstp 08-09-20 08:27:18 EST EAGLE 39.2.0
```

```
GTTSN      NETDOM  NDGT
tblb       ansi    6
```

GTA table is (6 of 269999) 1% full.

START GTA	END GTA	XLAT	RI	PCA
123456	123456	DPC	GT	003-003-003
MRNSET=DFLT SSN=--- CCGT=no NTT=---				
123457	123457	DPCSSN	SSN	003-003-003
MAPSET=DFLT SSN=2 CCGT=no NTT=---				

Command Retrieved 2 Entries

;

The following example shows output when the Hex Digit Support for GTT feature is turned on and hexadecimal digits are provisioned in GTA values.

rtrv-gta:gttsn=setnat201

tekelecstp 08-09-11 13:39:28 EST EAGLE 39.2.0

GTTSN	NETDOM	NDGT
setnat201	itu	6,21

GTA table is (5 of 269999) 1% full.

START GTA	END GTA	XLAT	RI	PC
100000	10000d	DPC	GT	00101
SSN=--- CCGT=no NTT=---				
10000e	10000f	DPC	GT	00101
SSN=--- CCGT=no NTT=---				
100010	200000	DPC	GT	00101
SSN=--- CCGT=no NTT=---				
abcdef0123456789abcdf	fabcd01234567890afff	DPCSSN	SSN	00103
SSN=10 CCGT=no NTT=---				
fbcd0123456789abcdf	ffbfde01234567890aaff	DPCSSN	SSN	00103
SSN=10 CCGT=no NTT=---				
NNP= NNAI= NSDD=4 NSDS=abcdef0123456789				
NGTI=				

Command Retrieved 5 Entries

;

The following example shows output when the SCCP Loop Detection feature is enabled and an associated loopset exists.

rtrv-gta:gttsn=setssn:mapset=6

tekelecstp 08-09-10 09:50:42 EST EAGLE 39.2.0

GTTSN	NETDOM	NDGT
setssnn	ansi	10

GTA table is (42 of 269999) 1% full.

START GTA	END GTA	XLAT	RI	PCA	LOOPSET
1111111111	1111111122	DPCSSN	SSN	001-001-003	RALEIGH1
MAPSET=6 SSN=2 CCGT=no NTT=---					

Command Retrieved 1 Entries

;

The following example shows output for a specified MRN set when the Flexible GTT Load Sharing feature is enabled.

rtrv-gta:gttsn=setans006:mrnset=1

tekelecstp 08-09-03 13:03:16 EST EAGLE 39.2.0

GTTSN	NETDOM	NDGT

```
setans006 ansi 10
```

```
GTA table is (8 of 269999) 1% full.
```

```
START GTA  END GTA    XLAT  RI      PCA
1818510090 1918511241 DPC   GT      001-001-003
      MRNSET=1      SSN=--- CCGT=no NTT=---
```

```
Command Retrieved 1 Entries
```

```
;
```

The following example shows output when calling party GT modification is requested for a GTT set.

rtrv-gta:gttsn=setans004:cggtmod=yes

```
tekelecstp 08-09-29 16:57:00 EST EAGLE 39.2.0
```

```
GTTSN      NETDOM  NDGT
setans004  ansi    6
```

```
GTA table is (1 of 269999) 1% full.
```

```
START GTA  END GTA    XLAT  RI      PC
981234     981234     DPCNGT GT      001-001-001
      MRNSET=DFLT SSN=--- CCGT=no NTT=10 CGGTMOD=yes
      NNP=14 NNAI=      NPDD=0 NPDS=
      NGTI=
      LOOPSET = none
```

```
Command Retrieved 1 Entries
```

```
;
```

rtrv-gta:gttsn=setans001

```
e1040501 08-09-02 14:25:15 EST EAGLE 39.2.0
```

```
GTTSN      NETDOM  SETTYPE NDGT
setans001  ansi    CDGTA   3,6
```

```
GTA table is (61 of 269999) 1% full.
```

```
;
```

```
e1040501 08-09-02 14:25:15 EST EAGLE 39.2.0
```

```
START GTA  END GTA    XLAT  RI      PCA
100        100        DPCSSN SSN      001-001-002
      MAPSET=DFLT SSN=10 CCGT=no NTT=--- CGGTMOD=NO
      CGGTASN=----- CGPCSN=----- SELID=----- OPCS=-----
101        101        DPCSSN SSN      001-001-003
      MAPSET=DFLT SSN=10 CCGT=no NTT=--- CGGTMOD=NO
      CGGTASN=----- CGPCSN=----- SELID=----- OPCS=-----
104        104        DPCSSN SSN      001-001-003
      MAPSET=DFLT SSN=10 CCGT=no NTT=--- CGGTMOD=NO
      CGGTASN=----- CGPCSN=----- SELID=----- OPCS=-----
105        105        DPCSSN SSN      001-001-003
      MAPSET=1      SSN=14 CCGT=no NTT=--- CGGTMOD=NO
      CGGTASN=----- CGPCSN=----- SELID=----- OPCS=-----
115        115        DPCSSN SSN      001-001-002
      MAPSET=2      SSN=15 CCGT=no NTT=--- CGGTMOD=NO
      CGGTASN=----- CGPCSN=----- SELID=----- OPCS=-----
111111     111111     DPC   GT      001-001-002
      MRNSET=DFLT SSN=--- CCGT=no NTT=--- CGGTMOD=NO
      CGGTASN=----- CGPCSN=----- SELID=----- OPCS=-----
111112     111112     DPC   GT      001-001-002
      MRNSET=DFLT SSN=--- CCGT=no NTT=--- CGGTMOD=NO
```



```

      CGGTASN=----- CGPCSN=----- SELID=----- OPCS=-----
111113  111113  DPC  GT    001-001-002
MRNSET=DFLT  SSN=--- CCGT=no  NTT=--- CGGTMOD=NO
      CGGTASN=----- CGPCSN=----- SELID=----- OPCS=-----
111114  111114  DPC  GT    001-001-002
MRNSET=DFLT  SSN=--- CCGT=no  NTT=--- CGGTMOD=NO
      CGGTASN=----- CGPCSN=----- SELID=----- OPCS=-----
111115  111115  DPC  GT    001-001-002
MRNSET=DFLT  SSN=--- CCGT=no  NTT=--- CGGTMOD=NO
      CGGTASN=----- CGPCSN=----- SELID=----- OPCS=-----
111116  111116  DPC  GT    001-001-002
MRNSET=DFLT  SSN=--- CCGT=no  NTT=--- CGGTMOD=NO
      CGGTASN=----- CGPCSN=----- SELID=----- OPCS=-----
111117  111117  DPC  GT    001-001-002
MRNSET=DFLT  SSN=--- CCGT=no  NTT=--- CGGTMOD=NO
      CGGTASN=----- CGPCSN=----- SELID=----- OPCS=-----
111118  111118  DPC  GT    001-001-002
MRNSET=DFLT  SSN=--- CCGT=no  NTT=--- CGGTMOD=NO
      CGGTASN=----- CGPCSN=----- SELID=----- OPCS=-----
111119  111119  DPC  GT    001-001-002
MRNSET=DFLT  SSN=--- CCGT=no  NTT=--- CGGTMOD=NO
      CGGTASN=----- CGPCSN=----- SELID=----- OPCS=-----
111120  111120  DPC  GT    001-001-002
MRNSET=DFLT  SSN=--- CCGT=no  NTT=--- CGGTMOD=NO
      CGGTASN=----- CGPCSN=----- SELID=----- OPCS=-----
111121  111121  DPC  GT    001-001-002
MRNSET=DFLT  SSN=--- CCGT=no  NTT=--- CGGTMOD=NO
      CGGTASN=----- CGPCSN=----- SELID=----- OPCS=-----
111122  111122  DPC  GT    001-001-002
MRNSET=DFLT  SSN=--- CCGT=no  NTT=--- CGGTMOD=NO
      CGGTASN=----- CGPCSN=----- SELID=----- OPCS=-----
111123  111123  DPC  GT    001-001-002
MRNSET=DFLT  SSN=--- CCGT=no  NTT=--- CGGTMOD=NO
      CGGTASN=----- CGPCSN=----- SELID=----- OPCS=-----
111124  111124  DPC  GT    001-001-002
MRNSET=DFLT  SSN=--- CCGT=no  NTT=--- CGGTMOD=NO
      CGGTASN=----- CGPCSN=----- SELID=----- OPCS=-----
111125  111125  DPC  GT    001-001-002
MRNSET=DFLT  SSN=--- CCGT=no  NTT=--- CGGTMOD=NO
      CGGTASN=----- CGPCSN=----- SELID=----- OPCS=-----

```

Command Retrieved 20 Entries

;

rtrv-gta:gttsn=setans001:pc=1-1-3

e1040501 08-09-02 14:25:57 EST EAGLE 39.2.0

```

GTTSN      NETDOM  SETTYPE  NDGT
setans001  ansi    CDGTA    3,6

```

GTA table is (61 of 269999) 1% full.

;

e1040501 08-09-02 14:25:57 EST EAGLE 39.2.0

```

START GTA END GTA  XLAT  RI    PCA
101      101      DPCSSN SSN    001-001-003
      MAPSET=DFLT  SSN=10  CCGT=no  NTT=--- CGGTMOD=NO
      CGGTASN=----- CGPCSN=----- SELID=----- OPCS=-----
104      104      DPCSSN SSN    001-001-003
      MAPSET=DFLT  SSN=10  CCGT=no  NTT=--- CGGTMOD=NO
      CGGTASN=----- CGPCSN=----- SELID=----- OPCS=-----
105      105      DPCSSN SSN    001-001-003
      MAPSET=1     SSN=14  CCGT=no  NTT=--- CGGTMOD=NO

```

```

      CGGTASN=----- CGPCSN=----- SELID=----- OPCS=-----
111260 111260 DPCSSN SSN 001-001-003
MAPSET=DFLT SSN=12 CCGT=no NTT=--- CGGTMOD=NO
      CGGTASN=----- CGPCSN=----- SELID=----- OPCS=-----
111261 111261 DPCSSN SSN 001-001-003
MAPSET=DFLT SSN=12 CCGT=no NTT=--- CGGTMOD=NO
      CGGTASN=----- CGPCSN=----- SELID=----- OPCS=-----
111262 111262 DPCSSN SSN 001-001-003
MAPSET=DFLT SSN=12 CCGT=no NTT=--- CGGTMOD=NO
      CGGTASN=----- CGPCSN=----- SELID=----- OPCS=-----
111263 111263 DPCSSN SSN 001-001-003
MAPSET=DFLT SSN=12 CCGT=no NTT=--- CGGTMOD=NO
      CGGTASN=----- CGPCSN=----- SELID=----- OPCS=-----
111264 111264 DPCSSN SSN 001-001-003
MAPSET=DFLT SSN=12 CCGT=no NTT=--- CGGTMOD=NO
      CGGTASN=----- CGPCSN=----- SELID=----- OPCS=-----
111265 111265 DPCNGT GT 001-001-003
MRNSET=DFLT SSN=--- CCGT=no NTT=12 CGGTMOD=NO
      CGGTASN=----- CGPCSN=----- SELID=----- OPCS=-----
111266 111266 DPCNGT GT 001-001-003
MRNSET=DFLT SSN=--- CCGT=no NTT=12 CGGTMOD=NO
      CGGTASN=----- CGPCSN=----- SELID=----- OPCS=-----
111267 111267 DPCNGT GT 001-001-003
MRNSET=DFLT SSN=--- CCGT=no NTT=12 CGGTMOD=NO
      CGGTASN=----- CGPCSN=----- SELID=----- OPCS=-----

```

Command Retrieved 11 Entries

;

rtrv-gta:gttsn=setans002:ssn=10

e1040501 08-09-02 14:25:57 EST EAGLE 39.2.0

```

GTTSN      NETDOM  SETTYPE  NDGT
setans002  ansi    CDGTA    6

```

GTA table is (61 of 269999) 1% full.

;

e1040501 08-09-02 14:25:57 EST EAGLE 39.2.0

```

START GTA END GTA  XLAT  RI    PCA
222222 222229 DPCSSN SSN 001-001-002
      MAPSET=DFLT SSN=10 CCGT=no NTT=--- CGGTMOD=NO
      CGGTASN=----- CGPCSN=----- SELID=----- OPCS=-----
222232 222239 DPCSSN SSN 001-001-002
      MAPSET=DFLT SSN=10 CCGT=no NTT=--- CGGTMOD=NO
      CGGTASN=----- CGPCSN=----- SELID=----- OPCS=-----
222242 222249 DPCSSN SSN 001-001-002
      MAPSET=DFLT SSN=10 CCGT=no NTT=--- CGGTMOD=NO
      CGGTASN=----- CGPCSN=----- SELID=----- OPCS=-----

```

Command Retrieved 3 Entries

;

rtrv-gta:gttsn=cgssnset1

e1040501 08-11-02 14:10:41 EST EAGLE 39.2.0

```

GTTSN      NETDOM  SETTYPE  NDGT
cgssnset1  ansi    CGSSN    -

```

GTA table is (50 of 269999) 1% full.

;

e1040501 08-11-02 14:10:41 EST EAGLE 39.2.0

START SSN	END SSN	XLAT	RI	PCA
1	1	DPC	SSN	001-001-002
MAPSET=2	SSN=0 CCGT=no NTT=---	CGGTMOD=NO		
34	34	DPC	SSN	001-001-002
MAPSET=2	SSN=0 CCGT=no NTT=---	CGGTMOD=NO		
100	100	DPC	SSN	001-001-002
MAPSET=2	SSN=0 CCGT=no NTT=---	CGGTMOD=NO		
101	101	DPC	SSN	001-001-002
MAPSET=2	SSN=0 CCGT=no NTT=---	CGGTMOD=NO		
102	102	DPC	SSN	001-001-002
MAPSET=2	SSN=0 CCGT=no NTT=---	CGGTMOD=NO		
103	103	UDTS		
104	104	DISC		

Command Retrieved 7 Entries

;

rtrv-gta:gttsn=cgssnset2

e1040501 08-09-02 14:11:37 EST EAGLE 39.2.0

GTTSN	NETDOM	SETTYPE	NDGT
cgssnset2	ansi	CGSSN	-

GTA table is (51 of 269999) 1% full.

;

e1040501 08-09-02 14:11:37 EST EAGLE 39.2.0

START SSN	END SSN	XLAT	RI	PCA
105	105	DISC		

Command Retrieved 1 Entries

;

rtrv-gta:gttsn=cgssnset3

e1040501 08-09-02 14:25:57 EST EAGLE 39.2.0

GTTSN	NETDOM	SETTYPE	NDGT
cgssnset3	ansi	CGSSN	-

GTA table is (51 of 269999) 1% full.

;

e1040501 08-09-02 14:25:57 EST EAGLE 39.2.0

START SSN	END SSN	XLAT	RI	PCA

Command Retrieved no Entries

;

Legend

GTTSN—The GTT set name. A GTT set is an entity to which global title addresses and selectors are assigned.

NETDOM—The network domain.

NDGT—The number of digits required for GTAs associated with this set.

START GTA—The start global title address.
END GTA—The end global title address.
XLAT—The translate indicator.
RI—The routing indicator.
PC, PCA, ITU PC, ITUI PC, ITUN PC, ITUN24 PC—Translated point code.
SSN—The translated subsystem number.
CCGT—The cancel called global title indicator.
NNP—New Numbering Plan.
NNAI—New Nature of Address Indicator.
NPDD—New Prefix Digits to be Deleted.
NPDS—New Prefix Digits String.
NTT—The new translation type.
MRN—Mated Relay Node.
MRNSET—MRN set ID.
MAPSET—MAP set ID.
CCGTMOD—Calling Party Global Title Modification Indicator.

rtrv-gtcnv**Retrieve Global Title Conversion**

Use this command to display entries in the Default Global Title Conversion table.

Keyword: **rtrv-gtcnv**

Related Commands: **chg-gtcnv, dlt-gtcnv, ent-gtcnv**

Command Class: Database Administration

Parameters

:dir= (optional)

Direction of conversion.

Range: **atoi, itoa, both**

atoi—ANSI to ITU conversion

itoa—ITU to ANSI conversion

both—Conversion in both directions

:gtixlat= (optional)

Global title indicator conversion. This parameter is expressed in the form of the ANSI GTI and the ITU GTI.

Range: **22, 24**

22—Converts an incoming ANSI GTI 2 to an outgoing ITU GTI 2 or an incoming ITU GTI 2 to an outgoing ANSI GTI 2

24—Converts an incoming ANSI GTI 2 to an outgoing ITU GTI 4 or an incoming ITU GTI 4 to an outgoing ANSI GTI 2

:nai= (optional)

Nature of address indicator.

Range: **0-63 ***

:np= (optional)

Numbering plan.

Range: **0-15 ***

:tta= (optional)
ANSI translation type.
Range: 0-255 *

:tti= (optional)
ITU translation type.
Range: 0-255 *

Example

rtrv-gtcnv

Dependencies

The ANSI-ITU-China SCCP Conversion feature must be enabled before the command can be entered.

Notes

None

Output

The following example displays output containing decimal global title digits.

```
rtrv-gtcnv
tekelecstp 06-11-07 13:44:12 EST EAGLE 35.3.0

DIR  GTIXLAT  TTA  TTI  NP  NAI  DEL  POS  ADD
atoi   22    10   5   --- ---  10  pfx  123

GTCNV    table is (1 of 1000) 1% full.
```

;

The following example shows output containing hexadecimal global title digits.

```
rtrv-gtcnv
tekelecstp 06-11-07 11:52:58 EST EAGLE 35.3.0

DIR  GTIXLAT  TTA  TTI  NP  NAI  DEL  POS  ADD
atoi   22     1   3   --- ---  ---  pfx  abcdef0123456789abcdf
ittoa   24     5   6   2   1   ---  sfx  abcdef0123456789abcef

GTCNV    table is (2 of 1000) 1% full.
```

;

Legend

DIR—The direction of the translation: ANSI to ITU or ITU to ANSI.

GTIXLAT—The GTI translation.

TTA—The ANSI translation type

TTI—The ITU translation type

NP—The numbering plan

NAI—The nature of address indicator

DEL—The deletion status, listing the number of incoming MSUs that will be deleted prior to translation.

POS—The prefix or suffix.

ADD—The global title address

rtrv-gtt**Retrieve Global Title Translation**

Use this command to show one or more entries from the GTT Data and the Translation Type tables. The report that is displayed contains two records (the percentage full and number-of-cells-used field) that give the total entries in the GTT table without regard to the **type** parameter specified.

If the EGTT (Enhanced Global Title Translation) feature is turned on in the system, the system will no longer accept **-gtt** (Global Title Translation) and **-tt** (Translation Type) commands. Refer to the new command sets that replace the **-gtt** and **-tt** commands:

- GTT Selector commands (**ent/chg/dlt/rtrv-gttset**)
- GTT Set commands (**ent/dlt/rtrv-gttset**)
- GTA commands (**ent/chg/dlt/rtrv-gta**)

Keyword: **rtrv-gtt**

Related Commands: **chg-gtt, dlt-gtt, ent-gtt**

Command Class: Database Administration

Parameters

At least one of these parameters must be specified: **ttn, type/typea/typei/typen/typen24**.

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:cggmod= (optional)

Calling party global title modification indicator. This parameter displays all translation entries that have the specified value of the calling party GT modification indicator.

Range: **yes, no**

:egta= (optional)

End global title address. This parameter specifies the end of a range of global title digits.

Range: 1-21 digits

If the Hex Digit Support for GTT feature is not enabled and on, the range is 1 - 21 decimal digits; valid digits are **0-9**.

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are **0-9, a-f, A-F**.

Default: If the **gta** parameter is specified, the **egta** parameter default value is the specified **gta** parameter value.

:force= (optional)

This parameter allows the user to display more than 1000 entries. This parameter is used to prevent inadvertent displays of extremely large amounts of information, which could take many hours.

Range: **yes, no**

Default: **no**

:gta= (optional)

Global title start address. This parameter specifies the beginning of a range of global title digits.

Range: 1-21 digits

If the Hex Digit Support for GTT feature is not enabled and on, the range is 1 - 21 decimal digits; valid digits are **0-9**.

If the Hex Digit Support for GTT feature is enabled and on, the range is 1 - 21 hexadecimal digits; valid digits are **0-9, a-f, A-F**.

Default: The first GTT entry for the given translation type.

:loopset= (optional)

SCCP loopset name. This parameter retrieves translation entries that are associated with the specified loopset.

Range: *ayyyyyyy*, **none**

1 alphabetic character followed by up to 7 alphanumeric characters.

none—Translation entries with no association to any loopset.

:mapset= (optional)

MAP set ID.

Range: **1-36000 dflt**

dflt—Default MAP set

:mrnset= (optional)

MRN set ID. This parameter retrieves GTT information for a specified Mated Relay Node set.

Range: **1-3000 none, dflt**

dflt—Default MRN set

none—The GTA translation does not participate in any loadsharing.

:num= (optional)

This parameter specifies the number of entries to be shown.

Range: **1-65535**

1-1000—If **force=yes** is not specified

1-65535—If **force=yes** is specified

Default: **1** (if **gta** is specified),

20 (if **gta** is not specified).

:pc= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: **pca**

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001-005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006-255**.

The point code **000-000-000** is not a valid point code.

Default: Display all

:pc/pca/pci/pcn/pcn24= (optional)

Point code.

:pci= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

Default: Display all

:pcn= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

Default: Display all

:pcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* subfield indicates a private point code *prefix-ni-nc-ncm*(*prefix-ni-nc-ncm*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

Default: Display all

:pctype= (optional)

Point code type. This parameter can be specified, only when the ANSI-ITU-China SCCP Conversion feature is enabled, to retrieve a single type of point code among mixed types of point code provisioned for a Translation Type.

Range: **ansi, itui, itun, itun24**

Default: Display all

:ssn= (optional)

Subsystem number. This parameter specifies the subsystem address that is to receive the message.

Range: **002-255**

Default: Display all

:ttn= (optional)

Translation name.

Range: *ayyyyyyy*

1 alphabetic character followed by up to 7 alphanumeric characters

Default: None given

:type/typea/typei/typen/typen24= (optional)

Translation type identifies the translation type and network type. This parameter is the decimal representation of the 1-byte field used in SS7.

The **type** and **typea** parameters specify an ANSI network.

The **typei** parameter specifies an ITU-international network.

The **typen** parameter specifies an ITU-national network.

The **typen24** parameter specifies a 24-bit ITU-national network.

A translation type numeric value can be entered as ANSI (**type** or **typea**) and also as an ITU type (**typei** or **typen**). However, they are separate entities.

The point code domain translation types for GTT are handled by the EAGLE 5 ISS protocol processing as either ANSI or ITU; therefore, ITU applies to ITU-I, ITU-I Spare, ITU-N, and ITU-N Spare. ITU-I includes ITU-I Spare, and ITU-N includes ITU-N Spare.

Range: 0-255

Default: None given

Example

```
rtrv-gtt:type=5:tt=ldb1:gta=919555
rtrv-gtt:type=5:gta=919555
rtrv-gtt:type=5:gta=919555:num=2500:force=yes
rtrv-gtt:typen24=0
rtrv-gtt:typei=7:pctype=ansi
rtrv-gtt:typen=106:pctype=itui
rtrv-gtt:type=55:pctype=itun
rtrv-gtt:type=9:pctype=itun24
rtrv-gtt:typei=4:pci=s-1-24-1
rtrv-gtt:typen=3:pcn=s-124
rtrv-gtt:tt=tbla
rtrv-gtt:tt=tbla:mapset=1
rtrv-gtt:type=4:cggmod=yes
```

Dependencies

If the EGTT feature is turned on, then the **rtrv-gtt** command cannot be entered.

The ANSI-ITU-China SCCP Conversion feature must be enabled before the **pctype** parameter can be specified.

If the **pcn** parameter is specified, its format must match the format that was assigned with the **chg-stpopts:npfmt** parameter.

The value of the **tt** parameter must exist in the Translation Type table.

The value of the **tt** parameter must correspond to a value of the **type/typea/typei/typen/typen24** parameter.

If the value of the **num** parameter exceeds **1000**, then the **force=yes** parameter must be specified.

Either the **type** parameter or the **tt** parameter must be specified.

The **ssn** parameter cannot have a value of *****.

The value of the **pc/pca/pci/pcn/pcn24** parameter must be a full point code.

If the **egta** parameter is specified, the **gta** parameter must be specified.

If the system is defined as an ANSI system, the **pc/pca** parameter must be specified as a valid ANSI point code.

The **tt** parameter and the **pc/pca/pci/pcn/pcn24** parameter must have matching network types.

The ANSI-ITU-China SCCP Conversion feature must be on before a translated point code and a translation type in different network types can be specified.

The number of digits in the specified **gta** parameter must be at least the number of digits provisioned for the given translation type. If the VGTT (variable length GTT) feature is turned on, there can be up to 10 GTA lengths per translation type. When the **ent-gtt** command is entered to create entries, the software keeps track of the lengths and allows only ten different lengths.

The value of the **tt** parameter must not be defined as an alias.

The Flexible GTT Load Sharing feature must be enabled before the **mapset** parameter can be specified.

The specified MAP set must exist in the database.

The Hex Digit Support for GTT feature must be enabled and on before hexadecimal digits can be specified for the **gta** and **egta** parameters.

The value of the **num** parameter must not exceed the maximum table size.

The length of the **egta** parameter must equal the length of the **gta** parameter.

The value of the **egta** parameter must be greater than the value of the **gta** parameter.

If the **tt** parameter is not specified, then the value of the **ttn** parameter must match the value of a **tt** parameter in the STP database.

The value of the **typen** parameter must exist in the Translation Type table.

The value of the **typei** parameter must exist in the Translation Type table.

The value of the **gta** parameter must exist.

The SCCP Loop Detection feature must be enabled before the **loopset** parameter can be specified.

The value of the **loopset** parameter must already exist in the database.

The Flexible GTT Load Sharing feature must be enabled before the **mrnset** parameter can be specified.

At least one entry must be provisioned in the MRN table for the MRN set that is specified by the **mrnset** parameter.

The AMGTT feature or the AMGTT CgPA Upgrade feature must be turned on before the **cggmod** parameter can be specified.

The **mapset** parameter and the **mrnset** parameter cannot be specified together in the command.

Notes

If the **rtrv-gtt** command is entered with only the **gta** parameter, a match would be an entry containing the same number of digits, or more digits, for the translation type. For example, if **gta=8005556666** is specified, the six-digit translation type **800555** would be a match. If the VGTT feature is turned on and the **egta** parameter is specified, all matching entries regardless of length are displayed.

This command can be canceled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

If you do not know either the translation type or the translation type name, use the **rtrv-tt** command to obtain type and name.

Due to the size of these tables (up to 270,000 possible entries), a limit (65,535) is placed on the number of entries that can be printed at one time.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (**s-**) and the private and spare point code subtype prefix (**ps-**). All of the point code types support the private (internal) point code subtype prefix (**p-**).

The number of entries to be shown (the **num** parameter) can be specified for any valid combination of parameters.

If the **gta** parameter is not specified, then the first entry in the global title translation table that corresponds to the translation type is the first entry shown.

If the **num** and **gta** parameters are not specified, then up to 20 entries are shown.

If the **gta** parameter is specified, but the **num** parameter is not specified, then only one entry is shown.

If the **num** parameter is specified, then the number of entries shown is the lesser of the number of entries in the table from the defined starting point to the end, or the value of the **num** parameter.

If the **gta** and **egta** parameters are specified, then the entry that matches the **gta** parameter, or is the nearest entry below the **gta** parameter, is the first entry shown for the specified range.

Output

rtrv-gtt:type=10:num=65535:force=yes

```
rlghncxa03w 08-09-07 11:43:04 EST EAGLE 39.2.0
TYPEA      TTN      NDGT
  3        c800      10
```

GTT table is (9 of 269999) 1% full.

START GTA	END GTA	XLAT	RI	PCA	SSN	NGT
9195551212		DPCSSN	SSN	008-001-001	222	---
8005550000	8005551999	DPCSSN	SSN	001-254-255	255	---
8005552000	8005553999	DPC	GT	001-254-255	255	---
8005554000	8005555999	NGT	GT	001-254-255	255	123
8005556000	8005557999	DPCSSN	SSN	001-254-255	255	---
8005558000	8005559999	DPCSSN	SSN	001-254-255	255	---
9762428487		DPCSSN	SSN	001-254-255	222	---
9766423277		DPCSSN	SSN	001-254-255	222	---
9769388928		DPCSSN	SSN	001-254-255	222	---

Command Retrieved 9 Entries

;

rtrv-gtt:type=10:dpc=8-1-1:ssn=222:gta=9195551212

```
rlghncxa03w 08-09-07 11:43:04 EST EAGLE 39.2.0
TYPEA      TTN      NDGT
  3        c800      10
```

GTT table is (9 of 269999) 1% full.

START GTA	END GTA	XLAT	RI	PCA	SSN	NGT
9195551212		DPCSSN	SSN	008-001-001	222	---

Command Retrieved 1 Entries

;

rtrv-**gtt:type=10:ssn=222:gta=9000000000:egta=9762429999:num=65535:force=yes**

```
rlghncxa03w 08-09-07 11:43:04 EST EAGLE 39.2.0
TYPEA      TTN      NDGT
  3        c800      10
```

GTT table is (9 of 269999) 1% full.

START GTA	END GTA	XLAT	RI	PCA	SSN	NGT
9195551212		DPCSSN	SSN	008-001-001	222	---
9762428487		DPCSSN	SSN	001-254-255	222	---

Command Retrieved 2 Entries

;

rtrv-gtt:typen=10

```
rlghncxa03w 08-09-07 11:43:04 EST EAGLE 39.2.0
TYPEN      TTN      NDGT
  10      - - - - -      6
```

GTT table is (9 of 269999) 1% full.

START GTA	END GTA	XLAT	RI	ITU PC	SSN	NGT
123456	123456	DPC	GT	0500-1-0-1	---	---

Command Retrieved 1 Entries

;

The following example shows a retrieval of all GTTs for a specified translation when the VGTT (variable length GTT) feature is turned on:

rtrv-gtt:type=10:num=65535:force=yes

rlghncxa03w 08-09-07 11:43:04 EST EAGLE 39.2.0

TYPEA	TTN	NDGT
10	c800	6, 8, 10

GTT table is (17 of 269999) 1% full.

START GTA	END GTA	XLAT	RI	PCA	SSN	NGT
976242		DPCSSN	SSN	001-254-255	222	---
976642		DPCSSN	SSN	001-254-255	222	---
976938		DPCSSN	SSN	001-254-255	222	---
80055500	80055519	DPCSSN	SSN	001-254-255	255	---
80055520	80055539	DPC	GT	001-254-255	255	---
80055540	80055559	NGT	GT	001-254-255	255	123
80055560	80055579	DPCSSN	SSN	001-254-255	255	---
80055580	80055599	DPCSSN	SSN	001-254-255	255	---
9195551212		DPCSSN	SSN	008-001-001	222	---
8005550000	8005551999	DPCSSN	SSN	001-254-255	255	---
8005552000	8005553999	DPC	GT	001-254-255	255	---
8005554000	8005555999	NGT	GT	001-254-255	255	123
8005556000	8005557999	DPCSSN	SSN	001-254-255	255	---
8005558000	8005559999	DPCSSN	SSN	001-254-255	255	---
9762428487		DPCSSN	SSN	001-254-255	222	---
9766423277		DPCSSN	SSN	001-254-255	222	---
9769388928		DPCSSN	SSN	001-254-255	222	---

Command Retrieved 17 Entries

;

The following example shows output containing GT Modification **nnp**, **nnai**, **npdd**, and **npds** parameter values:

rtrv-gtt:type=7

rlghncxa03w 08-09-07 11:43:04 EST EAGLE 39.2.0

TYPEA	TTN	NDGT
7	isvm	3,6,7,10

GTT table is (17 of 269999) 1% full.

START GTA	END GTA	XLAT	RI	PCA	SSN	NGT
564	564	DPCSSN	SSN	248-006-015	245	---
		NNP=3	NNAI=100	NPDD=3	NPDS=345	
641	641	DPCSSN	SSN	248-006-015	245	---
589234	598744	DPCSSN	SSN	248-006-015	245	---
		NNP=10	NNAI=50	NPDD=3	NPDS=345	
648392	659832	DPCSSN	SSN	248-006-015	245	---

Command Retrieved 4 Entries

;

The following example shows output when the GTT table can contain up to 1,000,000 entries:

rtrv-gtt:type=7

rlghncxa03w 08-09-07 11:43:04 EST EAGLE 39.2.0

TYPEA	TTN	NDGT
7	isvm	3,6,7,10

GTT table is (17 of 1000000) 1% full.

START GTA	END GTA	XLAT	RI	PCA	SSN	NGT
564	564	DPCNGT	GT	248-006-015	245	123
		NNP=3	NNAI=100	NPDD=3	NPDS=345	
641	641	DPCNGT	GT	248-006-015	245	123
589234	598744	DPCNGT	GT	248-006-015	245	123
		NNP=10	NNAI=50	NPDD=3	NPDS=345	
648392	659832	DPCSSN	SSN	248-006-015	245	---

Command Retrieved 4 Entries

;

The following example shows output for a 24-bit ITU-N point code translation type of 4:

rtrv-gtt:typen24=4

```
rlghncxa03w 08-09-07 11:43:04 EST EAGLE 39.2.0
TYPEN24 TTN NDGT
4 ----- 6
```

GTT table is (1 of 269999) 1% full.

START GTA	END GTA	XLAT	RI	ITU PC	SSN	NGT
919833	919833	DPCSSN	SSN	008-008-008	20	---

Command Retrieved 1 Entries

;

The following example shows output when the ANSI-ITU-China SCCP Conversion feature is enabled, with suffix digits and new GTI code parameter values.

NOTE: When the ANSI-ITU-China SCCP Conversion feature is enabled, entries that are provisioned with xlat=dpc where ngt has been specified are displayed with an xlat of dpcngt.

rtrv-gtt:type=7

```
rlghncxa03w 08-09-07 11:43:04 EST EAGLE 39.2.0
TYPEI TTN NDGT
7 isvm 3,6,7,10
```

GTT table is (17 of 1000000) 1% full.

START GTA	END GTA	XLAT	RI	PC	SSN	NGT
564	564	DPCNGT	GT	002-136-005	245	123
		NNP=3	NNAI=100	NSDD=3	NSDS=345	
		NGTI=4				
641	641	DPCNGT	GT	23456	245	123
		NGTI=2				
589234	598744	DPCNGT	GT	3-006-1	245	123
		NNP=10	NNAI=50	NPDD=3	NPDS=345	
		NGTI=4				
648392	659832	DPCSSN	SSN	007-006-005	245	---

Command Retrieved 4 Entries

;

The following example shows output when the ANSI-ITU-China SCCP Conversion feature is enabled and the **pctype=ansi** parameter is specified.

rtrv-gtt:typei=7:pctype=ansi

```
rlghncxa03w 08-09-07 11:43:04 EST EAGLE 39.2.0
TYPEI TTN NDGT
7 isvm 3,6,7,10
```

GTT table is (17 of 1000000) 1% full.

START GTA	END GTA	XLAT	RI	PCA	SSN	NGT
564	564	DPCNGT	GT	002-136-005	245	123
		NNP=3	NNAI=100	NSDD=3	NSDS=345	
		NGTI=4				
648392	659832	DPCSSN	SSN	007-006-005	245	---

Command Retrieved 2 Entries

;

The following example shows output when the ANSI-ITU-China SCCP Conversion feature is enabled and the **pctype=itui** parameter is specified.

rtrv-gtt:type=106:pctype=itui

```
rlghncxa03w 08-09-07 11:43:04 EST EAGLE 39.2.0
TYPEA      TTN      NDGT
106        ntoia43   6
```

GTT table is (17 of 1000000) 1% full.

START GTA	END GTA	XLAT	RI	ITUI	PC	SSN	NGT
3000006	3000006	DPCNGT	GT	6-002-3		---	33
		NNP=6	NNAI=7	NPDD=0	NPDS=		
		NGTI=4					

Command Retrieved 1 Entries

;

The following example shows output when the ANSI-ITU-China SCCP Conversion feature is enabled and the **pctype=itun** parameter is specified.

rtrv-gtt:type=55:pctype=itun

```
rlghncxa03w 08-09-07 11:43:04 EST EAGLE 39.2.0
TYPEA      TTN      NDGT
55         aton44    7
```

GTT table is (17 of 1000000) 1% full.

START GTA	END GTA	XLAT	RI	ITUN	PC	SSN	NGT
6543210	6543210	DPCNGT	GT	12341		---	42
		NNP=3	NNAI=1	NPDD=0	NPDS=		
		NGTI=4					

Command Retrieved 1 Entries

;

The following example shows output when the ANSI-ITU-China SCCP Conversion feature is enabled and the **pctype=itun24** parameter is specified.

rtrv-gtt:type=9:pctype=itun24

```
rlghncxa03w 08-09-07 11:43:04 EST EAGLE 39.2.0
TYPE      TTN      NDGT
7         isvm     3,6,7,10
```

GTT table is (17 of 1000000) 1% full.

START GTA	END GTA	XLAT	RI	ITUN24	PC	SSN	NGT
764	864	DPCNGT	GT	002-136-005		245	123
		NNP=3	NNAI=100	NSDD=3	NSDS=345		
		NGTI=4					
668392	689832	DPCSSN	SSN	007-006-005		245	---

Command Retrieved 2 Entries

;

rtrv-gtt:typen=3

```
rlghncxa03w 08-09-07 11:43:04 EST EAGLE 39.2.0
TYPEN      TTN      NDGT
3          - - - - - 6,21
```

GTT table is (6 of 269999) 1% full.

START GTA	END GTA	XLAT	RI	ITU PC
123456	123456	DPCSSN	GT	s-00124-aa
SSN=10 NGT=---				
NNP=12 NNAI=125 NPDD=21 NPDS=125498679012426556356				
NGTI=				
234567	234567	DPCNGT	GT	s-00124-aa
SSN=--- NGT=255				
234568	234568	DPC	GT	s-00124-aa
SSN=--- NGT=---				
234569	234569	DPC	GT	s-00124-aa
SSN=--- NGT=---				
NNP=13 NNAI=120 NPDD=21 NPDS=125498679012426556356				
NGTI=				
334569467213456789012	334569478932012345678	DPC	GT	s-00124-aa
SSN=--- NGT=---				
NNP=13 NNAI=120 NPDD=21 NPDS=125498679012426556356				
NGTI=				

Command Retrieved 5 Entries

;

rtrv-gtt:typen=3:pcn=s-124-aa

```
rlghncxa03w 08-09-07 11:43:04 EST EAGLE 39.2.0
TYPEN      TTN      NDGT
3          - - - - - 6,21
```

GTT table is (6 of 269999) 1% full.

START GTA	END GTA	XLAT	RI	ITU PC
123456	123456	DPCSSN	GT	s-00124-aa
SSN=10 NGT=---				
NNP=12 NNAI=125 NPDD=21 NPDS=125498679012426556356				
NGTI=				
234567	234567	DPCNGT	GT	s-00124-aa
SSN=--- NGT=255				
234568	234568	DPC	GT	s-00124-aa
SSN=--- NGT=---				
234569	234569	DPC	GT	s-00124-aa
SSN=--- NGT=---				
NNP=13 NNAI=120 NPDD=21 NPDS=125498679012426556356				
NGTI=				
334569467213456789012	334569478932012345678	DPC	GT	s-00124-aa
SSN=--- NGT=---				
NNP=13 NNAI=120 NPDD=21 NPDS=125498679012426556356				
NGTI=				

Command Retrieved 5 Entries

;

rtrv-gtt:typen=3:ssn=104

rlghncxa03w 08-09-07 11:43:04 EST EAGLE 39.2.0

TYPEN	TTN	NDGT
3	-----	6

GTT table is (5 of 269999) 1% full.

START GTA	END GTA	XLAT	RI	ITU PC
123456	123456	DPCSSN	GT	s-00124-aa

SSN=10 NGT=---
 NNP=12 NNAI=125 NPDD=21 NPDS=125498679012426556356
 NGTI=

Command Retrieved 1 Entries

;

rtrv-gtt:typen=3:gta=234569

rlghncxa03w 08-09-07 11:43:04 EST EAGLE 39.2.0

TYPEN	TTN	NDGT
3	-----	6

GTT table is (5 of 269999) 1% full.

START GTA	END GTA	XLAT	RI	ITU PC
234569	234569	DPC	GT	s-00124-aa

SSN=--- NGT=---
 NNP=13 NNAI=120 NPDD=21 NPDS=125498679012426556356
 NGTI=

Command Retrieved 1 Entries

;

In the following example, the Flexible GTT Load Sharing feature is not on.

rtrv-gtt:ttn=tbla

tekelecstp 08-09-10 15:50:49 EST EAGLE 39.2.0

TYPEA	TTN	NDGT
10	tbla	6

GTT table is (2 of 269999) 1% full.

START GTA	END GTA	XLAT	RI	PCA
123456	123456	DPC	GT	001-001-001

SSN=--- NGT=---

START GTA	END GTA	DPCSSN	SSN	PCA
234567	234567			001-001-001

SSN=2 NGT=---

Command Retrieved 21 Entries

;

The following example shows an MRN set value of NONE. The Flexible GTT Load-Sharing feature and the Intermediate GTT Load Sharing feature are on.

rtrv-gtt:ttn=tbl1

tekelecstp 08-09-10 13:54:32 EST EAGLE 39.2.0

TYPEA	TTN	NDGT
1	tbl1	10

GTT table is (1 of 269999) 1% full.

START GTA	END GTA	XLAT	RI	PCA
1234567890	1234567890	DPC	GT	001-001-002

MRNSET=NONE SSN=--- NGT=---

Command Retrieved 21 Entries

;

The following example shows an MRN set. The Flexible GTT Load-Sharing feature and the Intermediate GTT Load Sharing feature are on.

rtrv-gtt:ttn=tbl2

```
tekelecstp 08-09-10 13:54:32 EST EAGLE 39.2.0
TYPEA      TTN      NDGT
1          tbl2      10
```

GTT table is (1 of 269999) 1% full.

```
START GTA      END GTA      XLAT  RI  PCA
2345678901     2345678901    DPC   GT  001-001-001
      MRNSET=1     SSN=--- NGT=---
```

Command Retrieved 1 Entries

;

The following example shows output when the Flexible GTT Load Sharing feature and the Origin-based SCCP feature are on.

rtrv-gtt:ttn=tbla

```
tekelecstp 08-09-10 14:51:59 EST EAGLE 39.2.0
```

```
GTTSN      NETDOM  NDGT
tbla       ansi    6,10
```

GTA table is (61 of 269999) 1% full

```
START GTA  END GTA  XLAT  RI  PCA
234567     234567    DPCSSN GT  001-001-001
      MRNSET=DFLT SSN=10 CCGT=no NTT=---
      CGGTASN=----- CGPCSN=----- SELID=----- OPCS=-----
9810012345 9850012345 DPCSSN SSN  001-001-001
      MAPSET=DFLT SSN=10 CCGT=no NTT=---
      CGGTASN=----- CGPCSN=----- SELID=----- OPCS=-----
```

Command Retrieved 2 Entries

;

The following example shows output when the Hex Digit Support for GTT feature is turned on and hexadecimal digits are included in GTA values.

rtrv-gtt:typen=201

```
tekelecstp 08-09-11 13:36:23 EST EAGLE 39.2.0
```

```
TYPEN      TTN      NDGT
201        - - - - - 6,21
```

GTT table is (5 of 269999) 1% full.

```
START GTA      END GTA      XLAT  RI  PC
100000         10000d        DPC   GT  00101
      SSN=--- NGT=---
10000e         10000f        DPC   GT  00101
      SSN=--- NGT=---
100010         200000        DPC   GT  00101
      SSN=--- NGT=---
abcdef0123456789abcdef fabcde01234567890aafff DPCSSN SSN  00103
      SSN=10 NGT=---
fbcdef0123456789abcdef ffbfde01234567890aafff DPCSSN SSN  00103
      SSN=10 NGT=---
      NNP=   NNAI=   NSDD=4 NSDS=abcdef0123456789
```

NGTI=

Command Retrieved 5 Entries

;

The following example shows output when the SCCP Loop Detection feature is enabled and an associated loopset entry exists.

rtrv-gtt:ttn=setssn:mapset=6

tekelecstp 08-09-10 09:49:42 EST EAGLE 39.2.0

TYPEA	TTN	NDGT
1	setssn	10

GTT table is (45 of 269999) 1% full.

START GTA	END GTA	XLAT	RI	PCA	LOOPSET
1111111111	1111111122	DPCSSN	SSN	001-001-003	RALEIGH1
MAPSET=6		SSN=2	CCGT=no	NTT=---	

Command Retrieved 1 Entries

;

The following example shows output for a specified MRN set when the Flexible GTT Load Sharing feature is enabled.

rtrv-gtt:ttn=tbla:mrnset=1

tekelecstp 08-09-03 12:41:25 EST EAGLE 39.2.0

TYPEA	TTN	NDGT
2	tbla	4

GTT table is (4 of 269999) 1% full.

START GTA	END GTA	XLAT	RI	PCA
2133	2133	DPC	GT	001-001-003
MRNSET=1		SSN=--- NGT=---		

Command Retrieved 1 Entries

;

The following example retrieves all examples of translation type 4 where calling party global title modification is requested.

rtrv-gtt:type=4:cggmod=yes

tekelecstp 08-09-29 16:21:15 EST EAGLE 39.2.0

TYPEA	TTN	NDGT
4	-----	6

GTT table is (1 of 269999) 1% full.

START GTA	END GTA	XLAT	RI	PCA
981234	981234	DPC	GT	001-001-001
MRNSET=DFLT SSN=--- NGT=--- CGGTMOD=yes				
NNP=14 NNAI= NPDD=0 NPDS=				
NGTI=				
LOOPSET = none				

Command Retrieved 1 Entries

;

rtrv-gtt:type=1:num=22

e1040501 08-09-02 13:14:49 EST EAGLE 39.2

TYPEA	TTN	NDGT
1	-----	6

GTT table is (22 of 269999) 1% full.

;

e1040501 08-09-02 13:14:49 EST EAGLE 39.2

START GTA	END GTA	XLAT	RI	PCA
111111	111111	DPC	GT	001-001-002
SSN=--- NGT=---				
111112	111112	DPC	GT	001-001-002
SSN=--- NGT=---				
111113	111113	DPC	GT	001-001-002
SSN=--- NGT=---				
111114	111114	DPC	GT	001-001-002
SSN=--- NGT=---				
111115	111115	DPC	GT	001-001-002
SSN=--- NGT=---				
111116	111116	DPC	GT	001-001-002
SSN=--- NGT=---				
111117	111117	DPC	GT	001-001-002
SSN=--- NGT=---				
111118	111118	DPC	GT	001-001-002
SSN=--- NGT=---				
111119	111119	DPC	GT	001-001-002
SSN=--- NGT=---				
111120	111120	DPC	GT	001-001-002
SSN=--- NGT=---				
111121	111121	DPC	GT	001-001-002
SSN=--- NGT=---				
111122	111122	DPC	GT	001-001-002
SSN=--- NGT=---				
111123	111123	DPC	GT	001-001-002
SSN=--- NGT=---				
111124	111124	DPC	GT	001-001-002
SSN=--- NGT=---				
111125	111125	DPC	GT	001-001-002
SSN=--- NGT=---				
111126	111126	DPC	GT	001-001-002
SSN=--- NGT=---				
111127	111127	DPC	GT	001-001-002
SSN=--- NGT=---				
111128	111128	DPC	GT	001-001-002
SSN=--- NGT=---				
111129	111129	DPC	GT	001-001-002
SSN=--- NGT=---				
111130	111130	DPC	GT	001-001-002
SSN=--- NGT=---				
111131	111131	DPC	GT	001-001-002
SSN=--- NGT=---				

Command Retrieved 21 Entries

;

rtrv-gtt:type=2

e1040501 08-09-02 13:15:11 EST EAGLE 39.2.0

TYPEA	TTN	NDGT
2	-----	6

GTT table is (22 of 269999) 1% full.

;

e1040501 08-09-02 13:15:11 EST EAGLE 39.2.0

START GTA	END GTA	XLAT	RI	PCA

```

222222          222229          DPCSSN SSN    001-001-002
      SSN=10  NGT=---

```

Command Retrieved 1 Entries

;

rtrv-gtt:type=1:gta=111268:egta=222259

e1040501 08-09-02 13:31:05 EST EAGLE 39.2.0

```

TYPEA      TTN          NDGT
1          - - - - -    6

```

GTT table is (37 of 269999) 1% full.

;

e1040501 08-09-02 13:31:05 EST EAGLE 39.2.0

```

START GTA          END GTA          XLAT  RI      PCA
111268            111268            DPCNGT GT    001-001-002
      SSN=--- NGT=18  CGGTMOD = NO
111269            111269            DPCNGT GT    001-001-002
      SSN=--- NGT=18  CGGTMOD = NO
      NNP=10 NNAI=   NPDD=0  NPDS=
      NGTI=
111270            111270            DPCNGT GT    001-001-002
      SSN=--- NGT=18  CGGTMOD = NO
      NNP=   NNAI=5  NPDD=3  NPDS=
      NGTI=
222252            222259            DPCSSN SSN    001-001-002
      SSN=12  NGT=---  CGGTMOD = NO

```

Command Retrieved 4 Entries

;

rtrv-gtt:type=1:mapset=1

e1040501 08-09-02 13:38:25 EST EAGLE 39.2.0

```

TYPEA      TTN          NDGT
1          - - - - -    3,6

```

GTT table is (41 of 269999) 1% full.

;

e1040501 08-09-02 13:38:25 EST EAGLE 39.2.0

```

START GTA          END GTA          XLAT  RI      PCA
105              105              DPCSSN SSN    001-001-003
      MAPSET=1      SSN=14  NGT=---  CGGTMOD = NO

```

Command Retrieved 1 Entries

;

rtrv-gtt:type=1:ssn=10

e1040501 08-09-02 13:33:10 EST EAGLE 39.2.0

```

TYPEA      TTN          NDGT
1          - - - - -    3,6

```

GTT table is (40 of 269999) 1% full.

;

```
e1040501 08-09-02 13:33:10 EST EAGLE 39.2.0
```

START GTA	END GTA	XLAT	RI	PCA
100	100	DPCSSN	SSN	001-001-002
SSN=10 NGT=---	CGGTMOD = NO			
101	101	DPCSSN	SSN	001-001-003
SSN=10 NGT=---	CGGTMOD = NO			
104	104	DPCSSN	SSN	001-001-003
SSN=10 NGT=---	CGGTMOD = NO			

```
Command Retrieved 3 Entries
```

```
;
```

Legend

TYPE/TYPEA/TYPEI/TYPEN /TYPEN24—The translation type.

TTN—The translation name.

NDGT—The number of digits.

GTT TABLE IS 10% FULL—The relative size of the GTT table.

x OF y—Number of entries in the table (x) and the maximum number of entries configured for the table (y)

START GTA—Global title start address.

END GTA—Global title end address.

XLAT—Translate indicator.

RI—Route indicator.

PC, PCA, ITU PC, ITUI PC, ITUN PC, ITUN24 PC—Point code.

SSN—Subsystem number.

NGT—New global title translation type. This field identifies the type of global title translation that replaces the original type.

NNP—New Numbering Plan.

NNAI—New Nature of Address Indicator.

NPDD—New Prefix Digits to be Deleted.

NPDS—New Prefix Digits String.

NSDD—New Suffix Digits to be Deleted.

NSDS—New Suffix Digits String

NGTI—New GTI code. When the ANSI-ITU-China SCCP Conversion and AMGTT features are on and the Translated Point Code is of a different network type, the *NGTI* value indicates whether the new GTI translation format is GTI type 2 or GTI type 4.

MRN—Mated Relay Node.

MRNSET—MRN set ID.

MAPSET—MAP set ID.

CGGTMOD—Calling Party GT Modification Indicator.

rtrv-gttssel

Retrieve GTT Selectors

Use this command to display a list of administered global title selector combinations required for a global title entry. The list can be filtered by using various parameter combinations.

Keyword: rtrv-gttset

Related Commands: chg-gttset, dlt-gttset, ent-gttset

Command Class: Database Administration

Parameters

:cdgtasn= (optional)

CdPA GTA GTT set name.

Range: ayyyyyyyy

1 leading alphabetic character and up to 8 following alphanumeric characters.

:cggtasn= (optional)

CgPA GTA GTT set name.

Range: ayyyyyyyy

1 leading alphabetic character and up to 8 following alphanumeric characters.

:cgpcsn= (optional)

CdPA PC GTT set name.

Range: ayyyyyyyy

1 leading alphabetic character and up to 8 following alphanumeric characters.

:cgssn= (optional)

CgPA subsystem number.

Range: 0-255

:gti/gtia/gtii/gtin/gtin24= (optional)

Global title indicator. For all EGTT selector commands, the domain is defined as **gti** and **gtia** (ANSI), **gtii** (ITU international), **gtin** (ITU national), and **gtin24** (24-bit ITU national).

For the selector commands, **gti** and **gtia** are equivalent; **gtii** and **gtin /gtin24** are mutually exclusive because the EGTT database does not distinguish between ITU national and ITU international translations. This means that while ITU-I and ITU-N selectors are stored separately, two separate ITU-I and ITU-N entries with the same selector values cannot exist. For example, if an entry with **gtii=2** and **tt=4** already exists, an entry of **gtin=2** and **tt=4** cannot be entered.

Range: Supported value for ANSI: **gti=2** and **gtia=2**

Supported values for ITU: **gtii=2, 4** and **gtin /gtin24=2, 4**

Default: Display all

:gttsn= (optional)

GTT set name. A GTT set is an entity to which global title addresses and selectors are assigned.

The **gttsn** parameter can only be specified if the Origin-based SCCP Routing feature is off.

Range: ayyyyyyyy

1 leading alphabetic and up to 8 following alphanumeric characters.

Default: Display all

:nai= (optional)

Nature of Address indicator. The Nature of Address indicator can be specified by supplying either a mnemonic value (**nai** parameter) or an explicit numeric value (**naiv** parameter). Either the **nai** parameter or the **naiv** parameter, but not both, can be specified in the command. Table A-5 shows the mapping between the **naiv** and the **nai** parameter values.

Range: sub, rsvd, natl, intl, dflt

Default: Display all

:naiv= (optional)

Nature of Address indicator value. The Nature of Address indicator can be specified by supplying either a mnemonic value (**nai** parameter) or an explicit numeric value (**naiv** parameter). Either the

nai parameter or the **naiv** parameter, but not both, can be specified in the command. Table A-5 shows the mapping between the **naiv** and the **nai** parameter values.

Range: 0-127

Default: Display all

:np= (optional)

Numbering Plan. The numbering plan can be specified by supplying either a mnemonic value (**np** parameter) or an explicit numeric value (**npv** parameter). Either the **np** parameter or the **npv** parameter, but not both, can be specified in the command. Table A-6 shows the mapping between the **npv** and the **np** parameter values.

Range: e164, generic, x121, f69, e210, e212, e214, private, dflt

Default: Display all

:npv= (optional)

Numbering Plan value. The numbering plan can be specified by supplying either a mnemonic value (**np** parameter) or an explicit numeric value (**npv** parameter). Either the **np** parameter or the **npv** parameter, but not both, can be specified in the command. Table A-6 shows the mapping between the **npv** and the **np** parameter values.

Range: 0-15

Default: Display all

:selid= (optional)

Selector ID.

Range: 0-65534

:tt= (optional)

Translation type.

Range: 0-255

Default: Display all

Example

```
rtrv-gtttsel
rtrv-gtttsel:gtii=2
rtrv-gtttsel:tt=0:np=e164
rtrv-gtttsel:gti=2:tt=10
rtrv-gtttsel:gttsn=setint000
```

Dependencies

The EGTT feature must be turned on before this command can be entered.

An entry that matches exactly the specified combination of **gti**, **tt**, **np**/**npv**, **nai**/**naiv**, and **gttsn** must be specified. If no match is found, the following message is displayed in the scroll area of the terminal: No GTT Selectors matching the specified criteria were found.

The specified **gttsn** value must exist for the specified **gtin24**, **tt**, **np**/**npv**/**nai**/**naiv** parameter combination.

The **np** and **npv** parameters cannot be specified together in the same command.

The **nai** and **naiv** parameters cannot be specified together in the same command.

The parameter values **gtia=4**, **gti/gtia/gtii/gtin/gtin24=1**, and **gti/gtia/gtii/gtin/gtin24=3** cannot be specified.

When the **gti/gtia/gtii/gtin/gtin24=2** parameter is specified, the **np**/**npv** and **nai**/**naiv** parameter combinations cannot be specified.

If the **cgssn** parameter and/or the **selid** parameter is specified, neither the **cggtasn** parameter nor the **cgpcsn** parameter can be specified.

The Origin-based SCCP Routing feature must be enabled if the **cggtasn**, **cgpcsn**, **cgssn**, **cdgtasn**, or **selid** parameters are specified.

The GTT set specified by the **cggtasn** or **cgpcsn** parameter must exist in the database before it is assigned to a GTT selector.

The set type of the **cggtasn** parameter or the **cgpcsn** parameter must match the set type of the corresponding entry in the GTT set table. For example, the **cggtasn** parameter should have a set type of **cggtta**, and the **cgpcsn** parameter should have a set type of **cgpc**.

The **cdgtasn** parameter cannot be specified if the **gti=2** and **tt** parameters are specified, or if the **gti=4** and the **tt**, **np/npv**, and **nai/naiv** parameters are specified.

The value specified for the **cdgtasn** or **gttsn** parameter must match the name of an existing GTT set.

The GTT set specified by the **cdgtasn** or **gttsn** parameter must have a set type of **cdgta** (see the **ent-gttset** command).

Notes

When the EGTT feature is turned on, the GTT Selector (**ent/chg/dlt/rtrv-gttset**), GTT Set (**ent/dlt/rtrv-gttset**), and GTA (**ent/chg/dlt/rtrv-gta**) commands replace the Translation Type (**ent/dlt/rtrv-tt**) and Global Title Translation (**ent/chg/dlt/rtrv-gtt**) commands. All data previously provisioned with these commands is maintained.

Output

Retrieve all GTT selectors:

rtrv-gttset

```
rlghncxa03w 04-02-18 08:29:15 EST EAGLE 31.3.0
GTIA TT NP NAI GTTSN
2 0 -- --- setans000
2 9 -- --- lldb
2 10 -- --- t800
2 253 -- --- t800

GTII TT NP NAI GTTSN
2 0 -- --- setint000
2 9 -- --- imsi
2 18 -- --- imsi
4 0 e164 sub setint000
4 0 dflt dflt setint000
4 9 dflt dflt imsi
4 18 dflt dflt imsi
4 128 13 123 abcd12345
4 254 private rsvd setint000

GTIN TT NP NAI GTTSN
2 2 -- --- setnat002
4 2 dflt dflt setnat002
4 223 f69 intl setint000
;
```

Retrieve all GTT selectors containing the specified GTI value:

rtrv-gttset:gtii=2

```
rlghncxa03w 04-02-18 08:29:15 EST EAGLE 31.3.0
GTII TT NP NAI GTTSN
2 0 -- --- setint000
2 9 -- --- imsi
2 18 -- --- imsi
;
```

Retrieve all GTT selectors containing the specified TT and NP values:

rtrv-gttset:tt=0:np=e164

```
rlghncxa03w 04-02-18 08:29:15 EST EAGLE 31.3.0
GTII TT NP NAI GTTSN
4 0 e164 sub setint000
4 0 dflt dflt setint000
;
```

Retrieve a specific GTT selector:

rtrv-gttset:gti=2:tt=10

```
rlghncxa03w 04-02-18 08:29:15 EST EAGLE 31.3.0
GTIA TT NP NAI GTTSN
2 10 -- --- t800
;
```

Retrieve all GTT selectors using a specified GTT set name:

rtrv-gttset:gttsn=setin000

```
rlghncxa03w 04-02-18 08:29:15 EST EAGLE 31.3.0
GTII TT NP NAI GTTSN
2 0 -- --- setin000
4 0 e164 sub setin000
4 0 dflt dflt setin000
4 254 private rsvd setin000
```

```

      GTIN  TT  NP      NAI  GTTSN
      4    223 f69      intl setin000
;
rtrv-gttset
      tekelecstp 03-03-31 15:09:45 EST  EAGLE 31.0.0
      GTIN24 TT      NP      NAI  GTTSN
      2      2      --      --- any
      2      4      --      --- set24n004
;

```

Retrieve all GTT Selectors when the Origin-based SCCP Routing feature is enabled:

```

rtrv-gttset
      tekelecstp 06-06-01 08:29:15 EST  EAGLE 35.0.0
      GTII TT  NP      NAI  CDGTASN  CGGTASN  CGPCSN  CGSSN SELID
      2    0  --      ---  gtti00001  cgpa001  -----  120  65534
      4    0  e164    sub  gtti00001  -----  cgpc001  1    0
      4    0  dflt     dflt s2i000     -----  -----  ---  -----
      4    254 private  rsvd -----  cggta03  -----  2    65533

      GTIN  TT  NP      NAI  CDGTASN  CGGTASN  CGPCSN  CGSSN SELID
      4    223 f69      intl spi00001  -----  cgpc001  255  123
;

```

Retrieve all GTT selectors for a specified GTT set and global title indicator:

```

rtrv-gttset:cdgtatsn=gtti00001
      tekelecstp 06-06-01 08:29:15 EST  EAGLE 35.0.0
      GTII TT  NP      NAI  CDGTASN  CGGTASN  CGPCSN  CGSSN SELID
      2    0  --      ---  gtti00001  cgpa001  -----  120  65534
      4    0  e164    sub  gtti00001  -----  cgpc001  1    0
;

```

Retrieve all GTT Selectors for a specified GTT set:

```

rtrv-gttset:cdgtasn=cgpa001
      tekelecstp 06-06-01 08:29:15 EST  EAGLE 35.0.0
      GTII TT  NP      NAI  CDGTASN  CGGTASN  CGPCSN  CGSSN SELID
      2    0  --      ---  gtti000     cgpa001  -----  120  65534
;

```

Retrieve all GTT Selectors for a specified GTT set and selector ID:

```

rtrv-gttset:cdgtasn=gtti00001:selid=0
      tekelecstp 06-06-01 08:29:15 EST  EAGLE 35.0.0
      GTII TT  NP      NAI  CDGTASN  CGGTASN  CGPCSN  CGSSN SELID
      4    0  e164    sub  gtti00001  -----  cgpc001  1    0
;

```

Retrieve all GTT Selectors for a specified GTT set and subsystem number:

```

rtrv-gttset:cdgtasn=gtti00001:cgssn=120
      tekelecstp 06-06-01 08:29:15 EST  EAGLE 35.0.0
      GTII TT  NP      NAI  CDGTASN  CGGTASN  CGPCSN  CGSSN SELID
      2    0  --      ---  gtti00001  cgpa001  -----  120  65534
;

```

Legend

GTI/GTIA/GTII/GTIN/GTIN24—The global title indicator.

TT—The translation type.

NP—The number plan.

NAI—The nature of address indicator.

GTTSN—The GTT set name. A GTT set is an entity to which global title addresses and selectors are assigned.

rtrv-gttset**Retrieve GTT Set**

Use this command to display a list of administered GTT sets. This list can be filtered by using the parameters shown.

Keyword: **rtrv-gttset**

Related Commands: **chg-gttset, dlt-gttset, ent-gttset**

Command Class: Database Administration

Parameters

:gttsn= (optional)

GTT set name. A GTT set is an entity to which global title addresses and selectors are assigned.

Range: *aaaaaaaa*

1 leading alphabetic and up to 8 following alphanumeric characters.

:netdom= (optional)

Network domain. This command does not distinguish between ITU National or ITU International because the Enhanced Global Title Translation feature does not discriminate between the ITU-I and ITU-N translations.

Range: **ansi, itu, cross**

Default: Display all

:settype= (optional)

GTT set type.

Range: **cdgta, cggta, cgpc, cgssn, opc**

Default: Display all

Example

```
rtrv-gttset
```

```
rtrv-gttset:netdom=ansi
```

```
rtrv-gttset:gttsn=t800
```

Dependencies

The EGTT feature must be turned on before this command can be entered.

If the **gttsn** parameter is specified, it cannot have a value of **none**, and must match an existing **gttsn**.

If the **netdom** parameter is specified, at least one entry must exist that exactly matches the specified value. Otherwise, the following error message appears in the scroll area:

```
No GTT Sets matching the specified criteria were found.
```

The **netdom=cross** parameter is valid only if the **settype=cdgta** parameter is specified.

If the **gttsn** parameter is specified, the **settype** and **netdom** parameters cannot be specified.

The Origin-based SCCP Routing feature must be enabled if the value of the **settype** parameter is **cggta, cgssn, opc**, or **cgpc**.

The ANSI-ITU-China SCCP Conversion feature must be turned on before the **netdom=cross** parameter can be specified.

Notes

When the EGTT feature is turned on, the GTT Selector (**ent/chg/dlt/rtrv-gttset**), GTT Set (**ent/dlt/rtrv-gttset**), and GTA (**ent/chg/dlt/rtrv-gta**) commands replace the Translation Type (**ent/dlt/rtrv-**

tt) and Global Title Translation (**ent/chg/dlt/rtrv-gtt**) commands. All data previously provisioned with these commands is maintained.

When the Origin-based SCCP Routing feature is turned on, the **settype** parameter is displayed regardless of feature key status. If the feature key is not enabled, the **settyp=cdgta** parameter (default value) is displayed.

Output

Retrieve all GTT sets:

rtrv-gttset

```
rlghncxa03w 04-02-19 08:16:15 EST EAGLE 31.3.0
GTTSN      NETDOM      NDGT
lidx       ansi        10
t800       ansi        6
s_i000     itu         15
imsi       itu         15
abcd1234   itu         12
```

;

Retrieve all GTT sets containing the specified **netdom** value:

rtrv-gttset:netdom=ansi

```
rlghncxa03w 04-02-19 08:16:15 EST EAGLE 31.3.0
GTTSN      NETDOM      NDGT
lidx       ansi        10
t800       ansi        6
```

;

Retrieve a specific GTT set:

rtrv-gttset:gtsn=t800

```
rlghncxa03w 04-02-19 08:16:15 EST EAGLE 31.3.0
GTTSN      NETDOM      NDGT
t800       ansi        6
```

;

Retrieve all GTT sets when the VGTT (Variable Length GTT) feature is turned on:

rtrv-gttset

```
rlghncxa03w 04-02-19 08:16:15 EST EAGLE 31.3.0
GTTSN      NETDOM      NDGT
lidx       ansi        3,7,10
t800       ansi        4,6
s_i000     itu         10,15
imsi       itu         10,15
abcd1234   itu         12
```

;

Retrieves GTT sets for a specified GTT set type when the Origin-based SCCP Routing feature is turned on.

rtrv-gttset:settype=cgpc

```
rlghncxa03w 06-05-14 08:10:20 EST EAGLE 35.0.0
GTTSN      NETDOM      SETTYPE  NDGT
pc00       ansi        CGPC      -
pc01       ansi        CGPC      -
pc02       itu         CGPC      -
pc03       ansi        CGPC      -
pc04       ansi        CGPC      -
pc05       ansi        CGPC      -
```

;

Retrieve all GTT sets when the Origin-based SCCP Routing feature is turned on.

rtrv-gttset

```
rlghncxa03w 06-05-14 08:10:20 EST EAGLE 35.0.0
GTTSN      NETDOM      SETTYPE  NDGT
Pc10       cross       CDGTA     6,8,10,17
Pc11       ansi        CGGTA     10
Pc12       itu         CGPC      -
Pc13       itu         CGSSN     -
Pc14       ansi        OPC       -
```

```

Pc15      ansi      CGPC      -
;
Retrieve all GTT sets when the ANSI-ITU-China SCCP Conversion feature is on and ANSI/ITU
Translation is used for an entry with a network domain of cross:

```

rtrv-gttset

```

rlghncxa03w 06-08-18 08:29:15 EST  EAGLE 35.0.0
GTTSN      NETDOM   NDGT
lidx       ansi     10
t800       ansi     6
s_i000     itu      15
imsi       itu      15
abcd1234   cross    12
;

```

Legend

GTTSN—The GTT set name. A GTT set is an entity to which global title addresses and selectors are assigned.

NETDOM—The network domain.

SETTYPE—The GTT set type.

NDGT—The number of digits required for GTAs associated with this set.

rtrv-gtw-stp**Retrieve Gateway STP Parameters**

Use this command to display the level 3 ANSI transfer control status (TFCSTAT) parameter. This value is the level 3 control status used on a TFC message received from an ITU node destined for an ANSI node.

Keyword: **rtrv-gtw-stp**

Related Commands: **chg-gtw-stp**

Command Class: Database Administration

Parameters

This command has no parameters.

Example

```
rtrv-gtw-stp
```

Dependencies

None

Notes

None

Output

```

rtrv-gtw-stp
rlghncxa03w 03-03-11 11:34:04 EST  EAGLE 31.3.0
TFCSTAT
1
;

```

rtrv-gtwy-acthresh**Retrieve the Gateway Screening Activity Threshold**

Use this command to display the current values for the SS7 message rejection thresholds occurring because of the gateway screening process.

Keyword: rtrv-gtwy-acthresh

Related Commands: set-gtwy-acthresh

Command Class: Database Administration

Parameters

:lsn= (optional)

Linkset name.

Range: ayyyyyyyyy

1 alphabetic character followed by up to 9 alphanumeric characters

Default: Display all

Example

rtrv-gtwy-acthresh: lsn=wy644368

rtrv-gtwy-acthresh

Dependencies

The specified linkset must exist in the gateway linkset entity set of the requesting system.

The linkset specified must exist in the active database.

At least one optional parameter must be specified.

Notes

None

Output

The following example shows the display of the thresholds of all linksets:

rtrv-gtwy-acthresh

```
rlghncxa03w 04-02-18 08:50:12 EST EAGLE 31.3.0
LSN      REJ      RECV      INTRVL
WY644368 10        1000      10
WY234456 25        2000      20
LN123445 -          -          -
LN123556 25        2500      30
OP239900 -          5          5
```

;

The following example shows the display of the linkset **wy644368** rejection thresholds:

rtrv-gtwy-acthresh: lsn=wy644368

```
rlghncxa03w 04-02-18 08:50:12 EST EAGLE 31.3.0
LSN      REJ      RECV      INTRVL
wy644368 10        1000      10
```

;

Legend

LSN—Linkset name.

REJ—Reject threshold.

RECV—Received message threshold.

INTRVL—Monitor interval.

rtrv-gtwy-prmtrs**Retrieve Gateway Parameters**

Use this command to display the STP values that limit the display of certain notification messages that could become excessive. Only the values set by the **set-scrrej-prmtrs** command are displayed.

Keyword: **rtrv-gtwy-prmtrs**

Related Commands: **set-scrrej-prmtrs**

Command Class: Database Administration

Parameters

This command has no parameters.

Example

rtrv-gtwy-prmtrs

Dependencies

None

Notes

None

Output

rtrv-gtwy-prmtrs

```
rlghncxa03w 04-02-18 08:50:12 EST EAGLE 31.3.0
LIMIT INTRVL
1000 15
;
```

Legend

LIMIT—The threshold not to be exceeded.

INTRVL—Monitor interval. The examination period, in minutes, during which the gateway screening activity thresholds are to be tested.

rtrv-gws-actset**Retrieve Gateway Screening Stop Action Sets**

Use this command to display the values defined for gateway screening stop actions.

Keyword: **rtrv-gws-actset**

Related Commands: **chg-gws-actset**

Command Class: Database Administration

Parameters

:actid= (optional)

The identification number of the gateway screening stop action.

Range: **4-16**

Default: Display all

:actname= (optional)

The name of the gateway screening stop action set.

Range: *ayyyy*

One alphabetic character followed by up to five alphanumeric characters.

Default: Display all

Example

```

rtrv-gws-actset
rtrv-gws-actset:actname=cr
rtrv-gws-actset:actid=6

```

Dependencies

Either **actname** or **actid** can be specified, but not both.

Notes

If neither **actname** nor **actid** are specified with the **rtrv-gws-actset** command, all gateway screening stop actions are displayed.

Output

The following example displays output when 7 gateway screening stop action sets are defined.

rtrv-gws-actset

```

rlghncxa03w 03-03-07 00:57:31 EST EAGLE 37.2.0
ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT
ID   NAME  1    2    3    4    5    6    7    8    9    10
--   ---
1    copy  copy
2    rdct  rdct
3    cr    copy rdct
4    crcncf copy cncf rdct
5    cncf  cncf
6    cfrd  cncf rdct
7    tinp  tinp

```

GWS action set table is (7 of 16) 44% full

;

rtrv-gws-actset:actname=cr

```

rlghncxa03w 03-03-07 00:57:31 EST EAGLE 31.3.0
ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT
ID   NAME  1    2    3    4    5    6    7    8    9    10
--   ---
3    cr    copy rdct

```

GWS action set table is (6 of 16) 38% full

;

rtrv-gws-actset:actid=6

```

rlghncxa03w 03-03-07 00:57:31 EST EAGLE 31.3.0
ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT  ACT
ID   NAME  1    2    3    4    5    6    7    8    9    10
--   ---
6    cfrd  cncf rdct

```

GWS action set table is (6 of 16) 38% full

;

rtrv-gws-redirect**Retrieve Gateway Screening Redirect**

Use this command to display the provisioning data for the redirect function. The parameters and values that are retrieved using this command are stored in the Redirect table, and they are used to set the variable fields of the MSUs being redirected.

Keyword: **rtrv-gws-redirect**

Related Commands: **chg-gws-redirect, dlt-gws-redirect, ent-gws-redirect**

Command Class: Database Administration

Parameters

This command has no parameters.

Example

rtrv-gws-redirect

Dependencies

None

Notes

None

Output

```
rtrv-gws-redirect
rlghncxa03w 03-11-10 11:43:04 EST EAGLE 31.6.0
ENABLED DPCA          RI  SSN  TT   GTA
on      001-030-001 SSN  10   25   1800833
;

rtrv-gws-redirect
rlghncxa03w 03-11-10 11:43:04 EST EAGLE 31.6.0
ENABLED DPCI          RI  SSN  TT   GTA
on      1-001-1      SSN  10   25   1800833
;

rtrv-gws-redirect
rlghncxa03w 03-11-10 11:43:04 EST EAGLE 31.6.0
ENABLED DPCN          RI  SSN  TT   GTA
on      10234        SSN  10   25   1800833
;

rtrv-gws-redirect
rlghncxa03w 03-11-10 11:43:04 EST EAGLE 31.6.0
ENABLED DPCN24        RI  SSN  TT   GTA
on      001-030-001 SSN  10   25   1800833
;
```

In the following example, the gateway screening redirect function is not enabled.

```
rtrv-gws-redirect
rlghncxa03w 03-11-10 11:43:04 EST EAGLE 31.6.0
ENABLED DPCA          RI  SSN  TT   GTA
Redirect function data is not provisioned.
;
```

Legend

ENABLED—Indicates whether the gateway screening redirect function is on or off

DPCA/DPCI/DPCN/DPCN24—The destination point code that the message is being redirected to.

RI—The routing indicator for the redirected message

SSN—The subsystem to which the redirected message is bound for.

TT—The translation type of the global title translation

GTA—The global title translation address

rtrv-home-smsc**Retrieve HOME SMSC Address**

Use this command to retrieve HOME SMSC specific addresses currently used to identify Short Message Service Centers in the database. This command reads the HOME SMSCADDR table.

Keyword: **rtrv-home-smsc**

Related Commands: **dlt-home-smsc**, **ent-home-smsc**

Command Class: Database Administration

Parameters

:force= (optional)

Display more than 50 entries.

Range: **yes, no**

Default: **no**

:num= (optional)

Number of entries to display. The **force** parameter must also be specified to display more than 50 entries.

Range: **0-500**

Default: **50**

:smc= (optional)

Short Message Service Center address.

Range: 1-21 digits

1-21 hexadecimal digits

Example

rtrv-home-smsc

rtrv-home-smsc:smc=552611646

rtrv-home-smsc:num=100:force=yes

Dependencies

One of the following features must be enabled (see the **enable-ctrl-feat** command) before this command can be entered.

- MO SMS IS41-to-GSM Migration
- MO-based GSM SMS NP
- MO-based IS41 SMS NP
- MT-Based GSM SMS NP
- MT-Based IS41 SMS NP
- Portability Check for Mobile Originated SMS

When the specified **num** parameter value is greater than 50, the **force=yes** parameter must also be specified.

Notes

None

Output**rtrv-home-smsc**

```

rlghncxa03w 03-03-28 08:50:12 EST EAGLE 31.3.0
SMSC ADDRESS

13214564894498
55231465465434
5465455655656456

HOME SMSC ADDRESS TABLE IS 1 % FULL (3 of 500)

;
```

rtrv-homern**Retrieve Home Routing Number Prefix List**

Use this command to retrieve a list of routing number prefixes that belong to the operating network.

Keyword: **rtrv-homern**

Related Commands: **dlt-homern**, **ent-homern**

Command Class: Database Administration

Parameters

This command has no parameters.

Example

```
rtrv-homern
```

Dependencies

The INP, AINPQ, G-Port, or V-Flex feature must be turned on before this command can be entered.
Version?

Notes

None

Output**rtrv-homern**

```

rlghncxa03w 03-03-28 08:50:12 EST EAGLE 31.3.0
RN
-----
216780909087654
76345098
abc
abc1234
c10234567
cabade

HOMERN table is (6 of 100) 6% full

;
```

Legend

RN—Routing Number

rtrv-inpopts**Retrieve INP Options**

Use this command to retrieve INP-specific options.

Keyword: rtrv-inpopts

Related Commands: chg-inpopts

Command Class: Database Administration

Parameters

This command has no parameters.

Example

rtrv-inpopts

Dependencies

The INP feature or the ANSI-41 INP Query (AINPQ) feature must be turned on before this command can be entered.

Notes

If no DRANAI value or DRANAIV value has been provisioned, the command output displays the DRANAIV default value of 126.

If either the DRANAI value or DRANAIV value has been provisioned, the DRANAI mnemonic string for the provisioned value is displayed.

If no DRANP value or DRANPV value has been provisioned, the command output displays the DRANP default mnemonic value of E164.

If either the DRANP value or DRANPV value has been provisioned, the DRANP mnemonic string for the provisioned value is displayed.

The command output displays each CDPNPFX value with its associated DLTPFX setting.

The command output displays each CDPNNAI value with its associated SNAI value.

If no NEC value has been provisioned, a value of **none** is displayed.

Output

The following example shows output with default INP options.

rtrv-inpopts

```
rlghncxa03w 05-02-17 15:35:05 EST EAGLE 34.1.0
INP OPTIONS
```

```
-----
NEC          = NONE
DRANAIV      = 126
DRANP        = E164
DRA          = RNDN
SPRESTYPE    = CONTINUE
```

```
CDPNPFX      DLTPFX
-----      ---
```

```
CDPNNAI      SNAI
---          ----
```

```
;
```

The following example shows output with some INP or AINPQ options provisioned.

rtrv-inpopts

```
rlghncxa03w 06-09-17 15:35:05 EST EAGLE 36.0.0
INP OPTIONS
```

```
-----
NEC          = abc1d
DRANAIV      = 126
DRANP        = E164
DRA          = CCRNDN
SPRESTYPE    = CONTINUE
```

```
CDPNPFX      DLTPFX
-----      ---
```

```
CDPNNAI      SNAI
---          ----
127          unknown
```

```
;
```

The following example shows the provisioned DRANAI value of UNKNOWN.

rtrv-inpopts

```
tekelecstp 06-09-16 09:41:29 EST EAGLE 36.0.0
INP OPTIONS
```

```
-----
NEC          = 0
DRANAI       = UNKNOWN
DRANP        = E164
DRA          = RNDN
SPRESTYPE    = CONTINUE
```

```
CDPNPFX      DLTPFX
-----      ---
```

```
CDPNNAI      SNAI
---          ----
```

```
;
```

The following example shows the provisioned DRA value of HOMERNDN.

rtrv-inpopts

```
tekelecstp 07-07-11 13:44:38 EST EAGLE 37.5.0
```

```
INP OPTIONS
-----
```

```

NEC          = 1234
DRANAIV      = 126
DRANP        = E164
DRA          = HOMERNDN
SPRESTYPE    = CONTINUE

CDPNPFX      DLTPFX
-----
CDPNNAI      SNAI
---
```

;

The following example shows the provisioned DRA value of ASDRNDN.

rtrv-inpopts

```
tekelecstp 08-09-03 16:02:06 EST EAGLE 39.2.0
```

```

INP OPTIONS
-----
NEC          = 0
DRANAI       = INTL
DRANP        = E164
DRA          = ASDRNDN
SPRESTYPE    = CONTINUE

CDPNPFX      DLTPFX
-----
CDPNNAI      SNAI
---
```

;

Legend

- **ASD**—Additional Subscriber Data
- **CDPNNAI**—Called Party Number Nature of Address Indicator
- **CDPNPFX**—Called Party Number Prefix
- **DLTPFX**—Delete Prefix
- **DRA**—Destination Routing Address.
- **DRANAI**—Nature of Address Indicator for the Destination Routing Address
- **DRANPV**—Numbering Plan Value for the Destination Routing Address
- **NEC**—National Escape Code
- **SNAI**—Service Nature of Address Indicator
- **SPRESTYPE**—INP option to send a "Connect" message or a "Continue" message when IDP messages are received for INP services, the DN digits match, and the HLR ID is present

rtrv-ip-card**Retrieve Internet Protocol Card**

Use this command to retrieve IP networking parameters for a given card.

Keyword: rtrv-ip-card

Related Commands: chg-ip-card

Command Class: Database Administration

Parameters

:loc= (optional)

Card location. The unique identifier of a specific application subsystem located in the system.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

Example

```
rtrv-ip-card:loc=1211
```

```
rtrv-ip-card
```

Dependencies

The **loc** parameter value must correspond to a DCM card in the card table.

Notes

None

Output

rtrv-ip-card: loc=1211

rlghncxa03w 08-02-22 15:35:05 EST EAGLE 38.0.0

LOC 1211

```

SRCHORDR  LOCAL
DNSA      150.123.123.123
DNSB      -----
DEFROUTER -----
DOMAIN    NC.TEKELEC.COM
SCTPCSUM  adler32

```

;

rtrv-ip-card

rlghncxa03w 08-02-22 15:35:05 EST EAGLE 38.0.0

LOC 1211

```

SRCHORDR  LOCAL
DNSA      150.1.1.1
DNSB      -----
DEFROUTER -----
DOMAIN    NC.TEKELEC.COM
SCTPCSUM  adler32

```

LOC 1213

```

SRCHORDR  LOCAL
DNSA      150.1.1.1
DNSB      -----
DEFROUTER 150.1.1.25
DOMAIN    NC.TEKELEC.COM
SCTPCSUM  adler32

```

LOC 1301

```

SRCHORDR  SRVRONLY
DNSA      150.1.1.10
DNSB      150.1.1.28
DEFROUTER -----
DOMAIN    NC.TEKELEC.COM
SCTPCSUM  adler32

```

;

The following example displays the output that occurs when an E5-SM4G card is used.

rtrv-ip-card

rlghncxa03w 08-05-04 22:12:42 EST EAGLE5 39.0.0

LOC 1105

```

SRCHORDR  LOCAL
DNSA      -----
DNSB      -----
DEFROUTER -----
DOMAIN    -----
SCTPCSUM  crc32c
BPIPADDR  192.168.124.2
BPSUBMASK 255.255.255.0

```

LOC 1107

```

SRCHORDR  LOCAL
DNSA      -----
DNSB      -----
DEFROUTER -----
DOMAIN    -----
SCTPCSUM  crc32c
BPIPADDR  192.168.124.4
BPSUBMASK 255.255.255.0

```

LOC 1111

```

SRCHORDR  LOCAL
DNSA      -----
DNSB      -----

```

```
DEFROUTER -----
DOMAIN -----
SCTPCSUM      crc32c
BPIPADDR      192.168.124.3
BPSUBMASK     255.255.255.0
```

;

Legend

LOC—The card location.

SRCHORDR—The Host table search order. LOCAL indicates that the Local Host table is searched first. SRVR indicates that the Domain server is searched first. SRVROnly indicates that only the Domain server is searched.

DNSA—The IP address of Domain Server A.

DNSB—The IP address of Domain Server B.

DEFROUTER—The IP address for the default router.

DOMAIN—The Domain name of the Domain server.

SCTPCSUM—The SCTP checksum algorithm type.

BPADDR—The bonded port IP address.

BPSUBMASK—The bonded port IP submask.

rtrv-ip-host

Retrieve Internet Protocol Hostname

Use this command to retrieve the IP Host table. The Host table defines local host names for IP addresses.

Keyword: rtrv-ip-host

Related Commands: `dlt-ip-host`, `ent-ip-host`

Command Class: Database Administration

Parameters

:host= (optional)

Host name. The logical name of the device associated with the indicated IP address.

[illegible]

Any string of characters beginning with a letter and comprising up to 60 characters in length. Valid characters are a–z, A–Z, 0–9, - (dash), . (period)

:ipaddr= (optional)

The IP address associated with the hostname. This is a TCP/IP address expressed in standard dot notation. IP addresses consist of the system's network number and the machine's unique host number. An example IP address is **192.126.100.5**, where **192.126.100** is the network number and **5** is the machine's host number.

Range: 4 numbers separated by dots, with each number in the range of 0-255.

Example

```
rtrv-ip-host:host=gw100-nc.tekelec.com:ipaddr=150.1.1.1
```

```
rtrv-ip-host:host=qw100.nc.tekelec.com
```

```
rtrv-ip-host:ipaddr=150.1.1.1
```

rtrv-ip-host

Dependencies

The host name, if entered, must exist.

The IP address, if entered, must exist.

Notes

If optional parameters are specified, only the entries that match the entered parameters are retrieved.

Output

rtrv-ip-host:host=gw100.nc.tekelec.com:ipaddr=150.1.1.1

rlghncxa03w 04-02-17 15:35:05 EST EAGLE 31.3.0

IPADDR	HOST
150.1.1.1	GW100.NC.TEKELEC.COM

;

rtrv-ip-host:host=gw100.nc.tekelec.com

rlghncxa03w 04-02-17 15:35:05 EST EAGLE 31.3.0

IPADDR	HOST
150.1.1.1	GW100.NC.TEKELEC.COM

;

rtrv-ip-host:ipaddr=150.1.1.1

rlghncxa03w 04-02-17 15:35:05 EST EAGLE 31.3.0

IPADDR	HOST
150.1.1.5	GW100.NCDECONOMIC_DEVELOPMENT.GOV
150.1.1.5	GW101.NCDECONOMIC_DEVELOPMENT.GOV

;

rtrv-ip-host

rlghncxa03w 04-02-17 15:35:05 EST EAGLE 31.3.0

IPADDR	HOST
150.1.1.1	GW100.NC.TEKELEC.COM
150.1.1.1	GW101.NC.TEKELEC.COM
150.1.1.2	GW102.NC.TEKELEC.COM
150.1.1.3	GW103.NC.TEKELEC.COM

;

rtrv-ip-lnk**Retrieve Internet Protocol Link**

Use this command to retrieve the IP link table.

Keyword: rtrv-ip-lnk

Related Commands: chg-ip-lnk

Command Class: Database Administration

Parameters

:loc= (optional)

Card location. The unique identifier of a specific application subsystem located in the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Default: All card location link data are displayed.

:port= (optional)

Ethernet interface port ID.

Range: a, b

Default: All IP link port data associated with all ports on the card are displayed.

Example

```
rtrv-ip-lnk:loc=1211:port=a
```

```
rtrv-ip-lnk:loc=1211
```

```
rtrv-ip-lnk
```

Dependencies

The **loc** parameter value must correspond to a DCM card in the card table.

Notes

None

Output**rtrv-ip-lnk**

```
rlghncxa03w 04-02-17 15:35:05 EST EAGLE 31.3.0
LOC  PORT  IPADDR          SUBMASK          DUPLEX  SPEED  MACTYPE  AUTO  MCAST
1211  A    150.123.123.123    255.255.255.0    HALF    10     DIX      NO   YES
1211  B    150.123.123.124    255.255.255.0    HALF    10     DIX      NO   NO
1213  A    150.123.123.125    255.255.255.0    ----    ---    DIX      YES  NO
1213  B    150.123.123.126    255.255.255.0    ----    ---    DIX      YES  NO
1215  A    150.123.123.127    255.255.255.0    FULL    100    DIX      NO   YES
1215  B    150.123.123.128    255.255.255.0    FULL    100    DIX      NO   NO
```

IP-Link table is (6 of 512) 1% full

;

rtrv-ip-lnk:loc=1211

```
rlghncxa03w 04-02-17 15:35:05 EST EAGLE 31.3.0
LOC  PORT  IPADDR          SUBMASK          DUPLEX  SPEED  MACTYPE  AUTO  MCAST
1211  A    150.123.123.123    255.255.255.0    HALF    10     DIX      NO   NO
1211  B    150.123.123.124    255.255.255.0    HALF    10     DIX      NO   NO
```

;

rtrv-ip-lnk:loc=1211:port=a

```
rlghncxa03w 04-02-17 15:35:05 EST EAGLE 31.3.0
LOC  PORT  IPADDR          SUBMASK          DUPLEX  SPEED  MACTYPE  AUTO  MCAST
1211  A    150.123.123.123    255.255.255.0    HALF    10     DIX      NO   NO
```

;

Legend

LOC—The card location.

PORT—The Ethernet interface port ID, **A** or **B**.

IPADDR—The IP address for the specified port.

SUBMASK—The subnet mask of the IP interface.

DUPLEX—The mode of operation of the interface, **HALF** or **FULL**.

SPEED—The bandwidth for the interface in megabits per second, **10** or **100**.

MACTYPE—The Media Access Control Type of the interface, **802.3** or **DIX**. **802.3** indicates the IEEE standard number 802.3 for Ethernet 1, and **DIX** indicates the Digital/Inter/Xerox *de facto* standard for Ethernet 2.

AUTO—Whether or not to automatically determine duplex and speed. If **YES**, duplex and speed are automatically determined. If **NO**, duplex and speed are not automatically determined.

MCAST—Multicast Control. Enables or disables multicast support for the interface. This parameter is necessary for INP, G-Port, and G-Flex to establish the connection from the Service Module card to the MPS system.

rtrv-ip-node**Retrieve IP Node**

Use this command to display one or more nodes that are directly connected to a TCP/IP data link. A particular connection can be displayed, a particular application on a node can be displayed, or an entire node can be displayed. If an entire node is displayed, no parameters are required to perform this action. A particular application can be specified by giving either the application's name or its IP port on the node.

Keyword: rtrv-ip-node

Related Commands: dlt-ip-node, ent-ip-node

Command Class: Database Administration

Parameters

:ipaddr= (optional)

The remote host's IP address. This is a TCP/IP address expressed in standard dot notation. IP addresses consist of the system's network number and the machine's unique host number. An example IP address is **192.126.100.5**, where **192.126.100** is the network number and **5** is the machine's host number.

Range: 1-223, 0-255

4 numbers separated by dots

1-223—first number

0-255—the other three numbers

Default: Display all

:ipappl= (optional)

The IP application supported by the node.

Range: stplan

:ipport= (optional)

The logical IP port that addresses the application on the node.

Range: 1024-5000

Default: Display all

:iprte= (optional)

The default router's IP address. This is a TCP/IP address expressed in standard dot notation. IP addresses consist of the system's network number and the machine's unique host number. An example IP address is **192.126.100.5**, where **192.126.100** is the network number and **5** is the machine's host number.

Range: 1-223, 0-255

4 numbers separated by dots

1-223—first number

0-255—the other three numbers

Default: Display all

:loc= (optional)

The card location as stenciled on the shelf of the system that contains the TCP/IP link that will be directly connected to the node.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Default: Display all

Example

rtrv-ip-node

rtrv-ip-node:ipappl=stplan

rtrv-ip-node:ipaddr=193.4.201.50

rtrv-ip-node:ipaddr=193.4.201.50:ipport=1024

rtrv-ip-node: loc=1201

Dependencies

If the **ipappl**, **ipport**, or **loc** parameter is specified, the others cannot be specified.

The **ipport** parameter can be specified only if the **ipaddr** parameter is specified.

The ACM is the only valid card type for this command.

The shelf and card must be equipped.

If the **loc** parameter is specified, the card location must be equipped with a TCP/IP data link.

If the **ipaddr** parameter is specified, that IP address must be in the TCP/IP data link table.

If the **ipappl** parameter is specified, that IP application must be in the TCP/IP data link table.

If the **iprte** parameter is not specified, then all TCP/IP nodes meeting the display criteria are displayed. If the TCP/IP node has no TCP/IP router assigned to it, dashes are displayed in the IPRTE field.

Notes

None

Output

rtrv-ip-node

```
rlghncxa03w 04-02-04 21:16:43 EST EAGLE 31.3.0
IPADDR      IPPORT  IPAPPL  LOC   CAP  IPRTE
193.4.201.50 1024    stplan 1201  10%  --
193.4.201.50 1024    stplan 1202  10%  --
193.4.201.50 1024    stplan 1203  20%  --
193.4.202.30 2000    stplan 1204  40%  193.4.201.1
194.5.198.74 3000    stplan 1205  40%  193.4.201.1
197.4.217.39 4000    stplan 1206  40%  197.4.216.1
```

;

rtrv-ip-node:ipappl=stplan

```
rlghncxa03w 04-02-04 21:16:43 EST EAGLE 31.3.0
IPADDR      IPPORT  IPAPPL  LOC   CAP  IPRTE
193.4.201.50 1024    stplan 1201  10%  --
193.4.201.50 1024    stplan 1202  10%  --
193.4.201.50 1024    stplan 1203  20%  --
193.4.202.30 2000    stplan 1204  40%  193.4.201.1
194.5.198.74 3000    stplan 1205  40%  193.4.201.1
197.4.217.39 4000    stplan 1206  40%  197.4.216.1
```

;

rtrv-ip-node:ipaddr=193.4.201.50

```
rlghncxa03w 04-02-04 21:16:43 EST EAGLE 31.3.0
IPADDR      IPPORT  IPAPPL  LOC   CAP  IPRTE
193.4.201.50 1024    stplan 1201  10%  --
193.4.201.50 1024    stplan 1202  10%  --
193.4.201.50 1024    stplan 1203  20%  --
```

;

rtrv-ip-node:ipaddr=193.4.201.50:ipport=1024

```
rlghncxa03w 04-02-04 21:16:43 EST EAGLE 31.3.0
IPADDR      IPPORT  IPAPPL  LOC   CAP  IPRTE
193.4.201.50 1024    stplan 1201  10%  --
193.4.201.50 1024    stplan 1202  10%  --
193.4.201.50 1024    stplan 1203  20%  --
```

;

rtrv-ip-node:loc=1201

```
rlghncxa03w 04-02-04 21:16:43 EST EAGLE 31.3.0
IPADDR      IPPORT  IPAPPL  LOC   CAP  IPRTE
193.4.201.50 1024    stplan 1201  10%  --
```

;

rtrv-ip-node:ipaddr=193.4.201.50:ipport=1022

```
rlghncxa03w 04-02-04 21:16:43 EST EAGLE 31.3.0
IPADDR      IPPORT  IPAPPL  LOC   CAP  IPRTE
IPPORT on Node not connected to any TCP/IP link.
```

;

rtrv-ip-node:ipaddr=193.4.111.55

```
rlghncxa03w 04-02-04 21:16:43 EST EAGLE 31.3.0
IPADDR      IPPORT  IPAPPL  LOC   CAP  IPRTE
IPADDR not connected to any TCP/IP Link.
```

;

Legend

IPADDR—The remote host's IP address.

IPPORT—The logical IP port to address the application on the node.

IPAPPL—The IP application supported by the node.

LOC—The card location as stenciled on the shelf of the system that contains the TCP/IP link that will be directly connected to the node.

CAP—The maximum percentage of ethernet capacity for this node connection.

IPRTE—The default router's IP address.

rtrv-ip-rte

Retrieve IP Route

Use this command to display all static IP route entries in the Static IP Route table, or the entries for a specific card (destination IP addresses, subnet masks, and gateway IP addresses), or the entries for a specific destination IP address, or the entries for a specific gateway IP address.

Keyword: **rtrv-ip-rte**

Related Commands: **, ent-ip-rte**

Command Class: Database Administration

Parameters

:dest= (optional)

Destination IP Address. The IP Address of a remote destination host or network.

Range: 4 numbers separated by dots, with each number in the range of **0–255**.

The IP address **0.0.0.0** is not valid.

:gtwy= (optional)

Gateway IP Address. The IP address assigned to the gateway router that will properly forward IP datagrams with the destination IP address (dest) to the next-hop gateway router or final destination host.

Range: 4 numbers separated by dots, with each number in the range of **0–255**.

The IP address **0.0.0.0** is not valid.

:loc= (optional)

Card location. The unique identifier of a specific IP card in the system.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

Example

```
rtrv-ip-rte
```

```
rtrv-ip-rte:loc=1301
```

```
rtrv-ip-rte:dest=128.252.10.5
```

```
rtrv-ip-rte:gtwy=140.190.15.3
```

Dependencies

Only one optional parameter can be specified in a single command.

The **loc** parameter value must correspond to a SSED CM card in the card table that is running the **ss7ipgw**, **ipgwi**, **iplim**, or **iplimi** application. The B network is used only on SSED CM cards.

The specified destination IP address (**dest** parameter):

- Must not be the default route (**0.0.0.0**)
- Must not correspond to any loopback address (i.e. 127.X.X.X)

The specified gateway IP address (**gtwy** parameter):

- Must not be the default route (**0.0.0.0**)
- Must not correspond to any loopback address (i.e. 127.X.X.X)

Notes

None

Output

rtrv-ip-rte

```
rlghncxa03w 04-01-07 09:50:17 EST EAGLE 34.0.0
LOC  DEST          SUBMASK          GTWY
1301 128.252.10.5    255.255.255.255 140.188.13.33
1301 128.252.0.0      255.255.0.0     140.188.13.34
1301 150.10.1.1        255.255.255.255 140.190.15.3
1303 192.168.10.1     255.255.255.255 150.190.15.23
1303 192.168.0.0       255.255.0.0     150.190.15.24
```

IP Route table is (5 of 1024) 1% full

;

rtrv-ip-rte:loc=1301

```
rlghncxa03w 04-01-07 09:50:17 EST EAGLE 34.0.0
LOC  DEST          SUBMASK          GTWY
1301 128.252.10.5    255.255.255.255 140.188.13.33
1301 128.252.0.0      255.255.0.0     140.188.13.34
1301 150.10.1.1        255.255.255.255 140.190.15.3
```

IP Route table is (5 of 1024) 1% full

;

rtrv-ip-rte:dest=128.252.10.5

```
rlghncxa03w 04-01-07 09:50:17 EST EAGLE 24.0.0
LOC  DEST          SUBMASK          GTWY
1301 128.252.10.5    255.255.255.255 140.188.13.33
```

IP Route table is (5 of 1024) 1% full

;

rtrv-ip-rte:gtwy=140.190.15.3

```
rlghncxa03w 04-01-07 09:50:17 EST EAGLE 34.0.0
LOC  DEST          SUBMASK          GTWY
1301 150.10.1.1        255.255.255.255 140.190.15.3
```

IP Route table is (5 of 1024) 1% full

;

rtrv-is41-msg

Retrieve Configured IS41 Message

Use this command to display the configured IS41 test message parameter values.

Keyword: rtrv-is41-msg

Related Commands: chg-is41-msg, tst-msg

Command Class: Database Administration

Parameters

:msgn= (mandatory)

Message number. This parameter specifies the test message number that is retrieved.

Range: 1-10

Example

rtrv-is41-msg:msgn=5

Dependencies

Output

```
rtrv-is41-msg:msgn=1
tekelecstp 08-12-02 10:47:51 EST EAGLE 40.1.0
MSG = 1                ACTIVE = YES

CGPA_GT = 2
CGPA_GT_NAI = 4        CGPA = 9198180000001

CDPA_GT = 2
CDPA_GT_NAI = 4        CDPA = 9198180000002

CGPN_NAI = 1           CGPN_NP = 2
CGPN_ES = 1           CGPN = 9198180000007

CDPN_NAI = 1           CDPN_NP = 2
CDPN_ES = 1           CDPN = 9198180000008
```

rtrv-is41opts

Retrieve IS41 Options

Use this command to retrieve the IS41 option indicators maintained in the IS41OPTS table.

Keyword: rtrv-is41opts

Related Commands: chg-is41opts, chg-is41smsopts, rtrv-is41smsopts

Command Class: Database Administration

Parameters

This command has no parameters.

Example

rtrv-is41opts

Dependencies

The APORT or IGM feature must be enabled before this command can be entered.

Output

The following example shows the output when APORT and/or IGM Feature is Enabled:

rtrv-is41opts

```
tekelecstp 08-04-15 12:49:20 EST EAGLE 39.0.0
```

IS41 OPTIONS

```
-----
SMSREQBYPASS      = NO
LOCREQDN          = SCCP
IEC               = NONE
NEC               = NONE
RSPCGPARI         = FRMSG
RSPCGPAPCP       = FRMSG
RSPCDPARI        = FRMSG
RSPCDPAPCP       = OFF
RSPCGPANAI       = NONE
RSPCGPANP        = NONE
RSPCGPATT        = NONE
MTPLOCREQNAI     = FRMSG
RSPPARM          = TLIST
RSPDIG           = RNDN
RSPNON           = NONE
RSPNP            = 2
RSPMIN           = HOMERN
MSCMKTID         = 0
MSCSWITCH        = 0
ESNMFG           = 0
ESNSN            = 0
RSPDIGTYPE       = 6
LOCREQRMHRN      = NO
TCAPSNAI         = FRMSG
MTPLOCREQLEN     = 15
```

```
;
```

rtrv-is41smsopts**Retrieve IS41 SMS System Options**

Use this command to display all IS41 SMS options from the database.

Keyword: rtrv-is41smsopts

Related Commands: chg-is41opts, chg-is41smsopts, rtrv-is41opts

Command Class: Database Administration

Parameters

This command has no parameters.

Example

```
rtrv-is41smsopts
```

Dependencies

The EGLEOPTS table is corrupt or cannot be found.

Notes

None

Output**rtrv-is41smsopts**

```

tekelecstp 09-02-20 11:49:00 EST  EAGLE 40.1.0
IS41 SMS OPTIONS
-----
BPTYGTTSN      = NONE          MODAPARAM      = DA
MOIGMPFX       = IS412GSM      MOSMSACLEN     = 0
MOSMSDIGMAT    = EXACT         MOSMSNAI       = NAT
MOSMSGTTDIG    = SCCPCDPA      MOSMSTYPE      = ALL

MTSMSACKN      = ACK           MTSMSCSKSRC    = NO
MTMSDNFMT      = RN            MTMSDLTR       = NO
MTMSDLTRV      = NONE          MTMSDIGTYPE    = 6
MTMSNAKERR     = 5             MTMSPARM       = DIGIT
MTMSSEN        = NO            MTMSSSN       = 6
MTMSMSTYPE     = RN

```

;

rtrv-isup-msg**Retrieve ISUP Message**

Use this command to display one ISUP test message or all ISUP test messages from the TESTMSG table. The TIF Test Tool processes ISUP test messages to verify the TIF and NPP provisioned configuration in the system.

Keyword: rtrv-isup-msg

Related Commands: chg-isup-msg, tst-msg

Command Class: Database Administration

Parameters

:msgn= (optional)

ISUP Test Message number. This parameter specifies the ISUP test message number for which parameter values are displayed.

Range: 1-10

Dependencies

None.

Output

rtrv-isup-msg

```

tekelecstp 08-10-30 14:55:45 EST EAGLE 40.0.0
MSG = 1          ACTIVE = NO
      CGPN_NAI = 4      CGPN = 01234567890abcdef
      CDPN_NAI = 4      CDPN = 01234567890abcdef

      CGPN_CAT = 0

      NMBITS = 0
MSG = 2          ACTIVE = YES
      CGPN_NAI = 4      CGPN = 01234567890abcdef
      CDPN_NAI = 4      CDPN = 01234567890abcdef

      CGPN_CAT = 0

      NMBITS = 0
MSG = 3          ACTIVE = NO
      CGPN_NAI = 4      CGPN = 01234567890abcdef
      CDPN_NAI = 4      CDPN = 01234567890abcdef

      CGPN_CAT = 0

      NMBITS = 0
MSG = 4          ACTIVE = NO
      CGPN_NAI = 4      CGPN = 01234567890abcdef
      CDPN_NAI = 4      CDPN = 01234567890abcdef

      CGPN_CAT = 0

      NMBITS = 0
MSG = 5          ACTIVE = NO
      CGPN_NAI = 4      CGPN = 01234567890abcdef
      CDPN_NAI = 4      CDPN = 01234567890abcdef

      CGPN_CAT = 0

      NMBITS = 0
MSG = 6          ACTIVE = NO
      CGPN_NAI = 4      CGPN = 01234567890abcdef
      CDPN_NAI = 4      CDPN = 01234567890abcdef

      CGPN_CAT = 0

      NMBITS = 0
MSG = 7          ACTIVE = NO
      CGPN_NAI = 4      CGPN = 01234567890abcdef
      CDPN_NAI = 4      CDPN = 01234567890abcdef

      CGPN_CAT = 0

      NMBITS = 0
MSG = 8          ACTIVE = NO
      CGPN_NAI = 4      CGPN = 01234567890abcdef
      CDPN_NAI = 4      CDPN = 01234567890abcdef

      CGPN_CAT = 0

      NMBITS = 0
MSG = 9          ACTIVE = NO
      CGPN_NAI = 4      CGPN = 01234567890abcdef
      CDPN_NAI = 4      CDPN = 01234567890abcdef

      CGPN_CAT = 0

```

```

        NMBITS = 0
MSG = 10      ACTIVE = NO
        CGPN_NAI = 4      CGPN = 01234567890abcdef
        CDPN_NAI = 4      CDPN = 01234567890abcdef

        CGPN_CAT = 0

        NMBITS = 0
;
rtrv-isup-msg:msgn=10
tekelecstp 08-10-30 14:57:07 EST  EAGLE 40.0.0
MSG = 10      ACTIVE = NO
        CGPN_NAI = 4      CGPN = 01234567890abcdef
        CDPN_NAI = 4      CDPN = 01234567890abcdef

        CGPN_CAT = 0

        NMBITS = 0
;

```

Legend**MSG**—ISUP Test Message number**ACTIVE**—Indicates whether the ISUP test message will be sent to the network card in the test (0=NO, 1=YES)**CGPN_NAI**—Calling Party Number Nature of Address Indicator**CGPN_CAT**—CgPN Category**CGPN**—Calling Party Number Digits**CDPN_NAI**—Called Party Number Nature of Address Indicator**CDPN**—Called Party Number Digits**NMBITS**—Nm Bits that indicate whether a number portability lookup has already been performed in the network**rtrv-l2t****Retrieve Level 2 Timers**

Use this command to display the values of the SS7 MTP Level 2 timers. These timers are organized in 30 timer sets of 9 timer values each. The timer sets are grouped and system default values are initialized by specification (ANSI, ITU, High Speed for China, and High Speed for Q.703 Annex A). Each timer set is administered individually by the **chg-l2t** command. The **ent-slk** command is used to assign an SS7 signaling link to any of the timer sets. Each assigned link is associated with a timer set.

Keyword: **rtrv-l2t****Related Commands:** **chg-l2t**, **ent-slk**, **rtrv-slk****Command Class:** Database Administration**Parameters****:l2tset=** (mandatory)

This parameter specifies the Level 2 timer set identifier or timer set number.

Up to 30 different sets of SS7 MTP Level 2 timer sets can be defined.

Range: **1-30****Default:** Displays all timer sets

Example

```
rtrv-l2t
```

```
rtrv-l2t:l2tset=3
```

Dependencies**Notes**

The timer values are shown in the output for this command in seconds, even though they were specified in milliseconds in the **chg-l2t** command.

Output

The timer values are shown in the output for the **rtrv-l2t** command in seconds.

rtrv-l2t

```
tekelecstp 08-05-03 10:56:27 EST EAGLE 39.0.0
LEVEL 2 TIMERS (IN SECONDS)
L2TSET    T1      T2      T3      T4NPP    T4EPP    T5      T6      T7      NODATA
1         13.0    11.5    11.5    2.3      0.60     0.10    4.0     1.5     0.10
2         13.0    11.5    11.5    2.3      0.60     0.10    4.0     1.5     0.10
3         13.0    11.5    11.5    2.3      0.60     0.10    4.0     1.5     0.10
4         13.0    11.5    11.5    2.3      0.60     0.10    4.0     1.5     0.10
5         13.0    11.5    11.5    2.3      0.60     0.10    4.0     1.5     0.10
6         13.0    11.5    11.5    2.3      0.60     0.10    4.0     1.5     0.10
7         13.0    11.5    11.5    2.3      0.60     0.10    4.0     1.5     0.10
8         13.0    11.5    11.5    2.3      0.60     0.10    4.0     1.5     0.10
9         13.0    11.5    11.5    2.3      0.60     0.10    4.0     1.5     0.10
10        13.0    11.5    11.5    2.3      0.60     0.10    4.0     1.5     0.10
11        40.0    30.0    2.0     8.2      0.50     0.10    4.0     1.5     0.10
12        40.0    30.0    2.0     8.2      0.50     0.10    4.0     1.5     0.10
13        40.0    30.0    2.0     8.2      0.50     0.10    4.0     1.5     0.10
14        40.0    30.0    2.0     8.2      0.50     0.10    4.0     1.5     0.10
15        40.0    30.0    2.0     8.2      0.50     0.10    4.0     1.5     0.10
16        40.0    30.0    2.0     8.2      0.50     0.10    4.0     1.5     0.10
17        40.0    30.0    2.0     8.2      0.50     0.10    4.0     1.5     0.10
18        40.0    30.0    2.0     8.2      0.50     0.10    4.0     1.5     0.10
19        40.0    30.0    2.0     8.2      0.50     0.10    4.0     1.5     0.10
20        40.0    30.0    2.0     8.2      0.50     0.10    4.0     1.5     0.10
21        150.0   130.0    1.0    30.0     0.50     0.10    5.0     0.8     0.10
22        150.0   130.0    1.0    30.0     0.50     0.10    5.0     0.8     0.10
23        150.0   130.0    1.0    30.0     0.50     0.10    5.0     0.8     0.10
24        150.0   130.0    1.0    30.0     0.50     0.10    5.0     0.8     0.10
25        150.0   130.0    1.0    30.0     0.50     0.10    5.0     0.8     0.10
26        300.0   130.0    1.0    30.0     0.50     0.10    5.0     0.8     0.10
27        300.0   130.0    1.0    30.0     0.50     0.10    5.0     0.8     0.10
28        300.0   130.0    1.0    30.0     0.50     0.10    5.0     0.8     0.10
29        300.0   130.0    1.0    30.0     0.50     0.10    5.0     0.8     0.10
30        300.0   130.0    1.0    30.0     0.50     0.10    5.0     0.8     0.10
```

;

If the **l2tset** parameter is specified, then the timer values for the specified timer set are shown.

rtrv-l2t:l2tset=1

```
tekelecstp 08-05-03 10:56:27 EST EAGLE 39.0.0
LEVEL 2 TIMERS (IN SECONDS)
L2TSET    T1      T2      T3      T4NPP    T4EPP    T5      T6      T7      NODATA
1         13.0    11.5    11.5    2.3      0.60     0.10    4.0     1.5     0.10
```

;

Legend

L2TSET—The SS7 MTP Level 2 timer set identifier or number

T1—Aligned ready

T2—Not aligned

T3—Aligned

T4NPP—Proving period normal

T4EPP—Proving period Emergency

T5—Sending SIB

T6—Remote congestion

T7—Excessive delay of acknowledgment

NODATA—Amount of time with no data

rtrv-l3t

Retrieve Level 3 Timers

Use this command to show values of the SS7 level 3 timers. The timers are grouped into sets that are assigned to linksets.

Keyword: **rtrv-l3t**

Related Commands: **chg-l2t**, **chg-l3t**, **ent-ls**, **rtrv-l2t**, **rtrv-ls**

Command Class: Database Administration

Parameters

:l3tset= (optional)

Level 3 timer set table. Only one level 3 timer set table can be defined. The timer set can then be assigned to a linkset using the **ent-ls** or **chg-l3t** command.

Range: **1**

Default: Display table

Example

```
rtrv-l3t:l3tset=1
```

Dependencies

Only one timer set is supported in this release.

Notes

The timer output for this command is in seconds, even though it could have been entered in milliseconds on the **chg-l3t** command.

Output**rtrv-l3t:l3tset=1**

rlghncxa03w 04-02-17 16:03:12 EST EAGLE 31.3.0

LEVEL 3 TIMERS (IN SECONDS)

L3TSET	T1	T2	T3	T4	T5	T6	T7
1	0.8	1.4	0.8	0.8	0.8	0.8	1.0
	T8	T9	T10	T11	T12	T13	T14
	0.8	--	30.0	30.0	0.8	0.8	2.0
	T15	T16	T17	T18	IT18	T19	IT19
	3.0	1.4	0.8	10.0	19.0	480.0	67.0
T20/IT22	IT20	T21/IT23	IT21	T22	T23	T24	
90.0	59.0	90.0	63.0	10.0	10.0	10.0	
	T25	T26	T27	T28	T29	T30	T31
	30.0	12.0	--	3.0	60.0	30.0	60.0
	T32						
	60.0						

;

Legend**L3TSET**—The level 3 timer set table.**T1**—The delay, in seconds, to avoid message missequencing on changeover. Also used as the ITU MTP restart isolation timer.**T2**—The amount of time, in seconds, to wait for changeover acknowledgment.**T3**—Time controlled diversion – the delay, in seconds, to avoid missequencing on changeback.**T4**—The amount of time, in seconds, to wait for changeback acknowledgment, first attempt.**T5**—The amount of time, in seconds, to wait for changeback acknowledgment, second attempt.**T6**—The delay, in seconds, to avoid message missequencing on controlled rerouting.**T7**—The amount of time, in seconds, to wait for signaling data link connection acknowledgment.**T8**—The transfer-prohibited inhibited timer (transient solution).**T10**—The amount of time, in seconds, to wait before repeating the signaling-route-set-test message.**T11**—The transfer-restricted timer.**T12**—The amount of time, in seconds, to wait for uninhibit acknowledgment.**T13**—The amount of time, in seconds, to wait for force uninhibit.**T14**—The amount of time, in seconds, to wait for inhibition acknowledgment.**T15**—The amount of time, in seconds, to wait before repeating the signaling-route-set-congestion test.**T16**—The amount of time, in seconds, to wait for route-set-congestion status update.**T17**—The delay, in seconds, to avoid oscillation of initial alignment failure and link restart.**T18**—The repeat TFR once by response method timers.**IT18**—The timer within an STP whose MTP restarts to supervise the receipt of routing information and the activation of the link and link set. The amount of time, in seconds, to wait for links to align and to receive TRAs from all adjacent nodes.**T19**—The failed link craft referral timer.

IT19—The amount of time, in seconds, for the supervision timer to wait during MTP restart to avoid ping-pong of TFP, TFR1, and TRA messages.

T20/IT22—The amount of time, in seconds, to wait before repeating the local inhibit test.

IT20—The amount of time, in seconds, to wait overall for the MTP restart at the signaling point whose MTP restarts.

T21/IT23—The amount of time, in seconds, to wait before repeating the remote inhibit test.

IT21—The overall MTP restart timer at a signaling point adjacent to one whose MTP restarts.

T22—The timer at the restarting STP. The amount of time, in seconds, to wait for signaling links to become available.

T23—The timer at the restarting STP. Starting after T22, the amount of time, in seconds, to wait to receive all TRA messages.

T24—The timer at the restarting STP with transfer function. Starting after T23, the amount of time, in seconds, to wait to broadcast all TRA messages.

T25—The timer at the adjacent and restarting STPs. The amount of time, in seconds, to wait for a TRA message (may be started at level 2).

T26—The timer at the restarting STP. The amount of time, in seconds, to wait to repeat a TRW message.

T28—The timer at the STP adjacent to the restarting STP. The amount of time, in seconds, to wait for a TRW message.

T29—The timer started when a TRA message is sent in response to an unexpected TRA or TRW. Also, the timer started when traffic is resumed without receipt of a TRA message.

T30—The timer used to limit the sending of TFPs/TFRs in response to an unexpected TRA or TRW message.

T31—The false link congestion detection timer.

T32—The link oscillation timer—Procedure A.

rtrv-lbp

Retrieve Loopback Point Attributes

Use this command to retrieve the current value of a far-end loopback point maintained in the link fault sectionalization table.

Keyword: rtrv-lbp

Related Commands: act-lbp, chg-lbp, dact-lbp, dlt-lbp, ent-lbp

Command Class: Database Administration

Parameters

:lbp= (optional)

Loopback point ID. This parameter identifies a far-end loopback point that lies along an SS7 signaling link path between the STP and the target device (up to and including the target device).

Range: 1-32

Default: Display all

:link= (optional)

SS7 signaling link. The SS7 signaling link that is to be tested.

Synonym: port

Range: a, b, a1-a31, b1-b31

Not all card types support all **link** parameter values.

See "Summary of Range Values for :link Parameter" for valid **link** parameter range values for each type of card that can have assigned signaling links.

Default: Display all

:loc= (optional)

Card location. The unique identifier of a specific application subsystem located in the STP.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Default: All card locations.

Example

rtrv-lbp

rtrv-lbp:loc=1202

rtrv-lbp:loc=1202:link=a

rtrv-lbp:loc=1202:link=a:lbp=3

Dependencies

The Link Fault Sectionalization (LFS) feature must be on before this command can be entered.

The card location specified in the **loc** parameter cannot be reserved by the system.

If the **link** parameter is specified, the **loc** parameter must be specified. If the **lbp** parameter is specified, both the **loc** parameter and the **link** parameter must be specified.

The card location (**loc** parameter) must identify a provisioned **limds0**, **limt1**, or **limch** (associated to a **limt1**) card configured with either an **ss7ansi** or **ccs7itu** application.

The card location specified in the **loc** parameter must be equipped.

Notes

This command can be canceled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

Output

The following example displays the attributes for all the loopback points for SS7 links assigned to the STP:

rtrv-lbp

```
rlghncxa03w 04-02-17 16:02:05 EST EAGLE 31.3.0
LOC  PORTLINK  LBP  RLE  REP  CLLI  LFST
1101  A      1   DS0  0   -----  LLT
          7   OCU  0   -----  NLT
          9   NEI  0   -----  LLT

1102  A      2   DS0  0   -----  LLT
          3   DS0  4   -----  LLT
          4   NEI  0   -----  LLT

1102  B      1   DS0  0   -----  LLT
          6   NEI  0   -----  LLT

1215  A      1   DS0  0   -----  LLT
          3   DS0  4   -----  LLT
          5   DS0  5   -----  LLT
          7   DS0  8   -----  LLT
          9   NEI  0   -----  LLT
;
```

The following example displays the attributes for all the loopback points for the SS7 links A and B of the LIM card residing in the first frame, first shelf, and second slot of the STP:

rtrv-lbp:loc=1202

```
rlghncxa03w 04-02-17 16:02:05 EST EAGLE 31.3.0
LOC  LINK  LBP  RLE  REP  CLLI  LFST
1102  A      2   DS0  0   -----  LLT
          3   DS0  4   -----  LLT
          4   NEI  0   -----  LLT

1102  B      1   DS0  0   -----  LLT
          6   NEI  0   -----  LLT
;
```

The following example displays the attributes for all the loopback points for the SS7 link A of the LIM card residing in the first frame, first shelf, and second slot of the STP:

rtrv-lbp:loc=1202:link=a

```
rlghncxa03w 04-02-17 16:02:05 EST EAGLE 31.3.0
LOC  LINK  LBP  RLE  REP  CLLI  LFST
1102  A      2   DS0  0   -----  LLT
          3   DS0  4   -----  LLT
          4   NEI  0   -----  LLT
;
```

The following example displays the attributes for loopback point 3 for the SS7 link A of the LIM card residing in the first frame, first shelf, and second slot of the STP:

rtrv-lbp:loc=1202:link=a:lbp=3

```
rlghncxa03w 04-02-17 16:02:05 EST EAGLE 31.3.0
LOC  LINK  LBP  RLE  REP  CLLI  LFST
1102  A      3   DS0  4   -----  LLT
;
```

The following example displays the attributes for all the loopback points for the SS7 link A of the LIM card residing in the first frame, first shelf, and second slot of the STP. However, no loopback points have been provisioned.

```
rtrv-lbp:loc=1202:link=a
```

```
rlghncxa03w 04-02-17 16:02:05 EST EAGLE 31.3.0  
LOC LINK LBP RLE REP CLLI LFST
```

No loopback points meeting the requested criteria were found

;

rtrv-lnp-serv

Retrieve LNP Service

Use this command to retrieve all LNP services. This command displays the assigned translation type, translation type name, service type, LNP digit validity indication, and TT aliases.

Keyword: rtrv-lnp-serv

Related Commands: chg-lnp-serv, dlt-lnp-serv, ent-lnp-serv

Command Class: Database Administration

Parameters

This command has no parameters.

Example

```
rtrv-lnp-serv
```

Dependencies

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before this command can be entered.

Notes

None

Output

rtrv-lnp-serv

```

rlghncxa03w 02-11-28 14:42:38 EST EAGLE 30.0.0
SERV  TT  TTN      DV  ALIAS
AIN    15  AINGTE   TCAP 235
                236
LIDB   20  LIDB     SCCP ---
WNP    22  WNP      TCAP ---
LNPQS  11  LNPQS    TCAP ---
PCS    12  PCS      TCAP ---
CLASS  25  CLASSGTE SCCP ---
UDF1   201 UDF1     SCCP ---

```

LNP-SERV TABLE IS 2% FULL (7 of 256)

;

If the LNP SMS feature is turned on and provisioned, the WSMSC entry is included:

rtrv-lnp-serv

```

rlghncxa03w 02-11-28 14:42:38 EST EAGLE 30.0.0
SERV  TT  TTN      DV  ALIAS
AIN    15  AINGTE   TCAP 235
                236
LIDB   20  LIDB     SCCP ---
WNP    22  WNP      TCAP ---
LNPQS  11  LNPQS    TCAP ---
PCS    12  PCS      TCAP ---
CLASS  25  CLASSGTE SCCP ---
WSMSC  55  WSMSC    SCCP ---
UDF1   201 UDF1     SCCP ---

```

LNP-SERV TABLE IS 2% FULL (8 of 256)

;

If the LNP SMS feature is not turned on but is provisioned, the output includes the WSMSC entry with an asterisk:

rtrv-lnp-serv

```

rlghncxa03w 02-11-28 14:42:38 EST EAGLE 30.0.0
SERV  TT  TTN      DV  ALIAS
AIN    15  AINGTE   TCAP 235
                236
LIDB   20  LIDB     SCCP ---
WNP    22  WNP      TCAP ---
LNPQS  11  LNPQS    TCAP ---
PCS    12  PCS      TCAP ---
CLASS  25  CLASSGTE SCCP ---
WSMSC* 55  WSMSC    SCCP ---
UDF1   201 UDF1     SCCP ---

```

LNP-SERV TABLE IS 2% FULL (8 of 256)

;

The following example displays the output when an entry is provisioned for the LRNQT feature.

rtrv-lnp-serv

```

rlghncxa03w 08-10-01 14:42:38 EST EAGLE 40.0.0
SERV  TT  TTN      DV  ALIAS
LNPQS  11  LNPQS    TCAP ---
PCS    12  PCS      TCAP ---
AIN    15  AINGTE   TCAP 235
                236
LIDB   20  LIDB     SCCP ---
WNP    22  WNP      TCAP ---

```

```

CLASS 25   CLASSGTE  SCCP  ---
UDF1   201  UDF1     SCCP  ---
LRNQT  239  LRNQT    TCAP  ---

LNP-SERV TABLE IS 3% FULL (8 of 256)
;

```

Legend**SERV**—Reserved service type name.**TT**—Translation type**TTN**—Translation type name**DV**—Digits valid**ALIAS**—Alias translation type**rtrv-lnp-ttmap****Retrieve LNP Translation Type Mapping**

Use this command to retrieve all LNP MRGTs or all LNP MRGTs for a given TT, TT-PC-SSN, or TT-DPC combination.

NOTE: This command does not support 24-bit ITU national point codes.

Keyword: rtrv-lnp-ttmap**Related Commands:** chg-lnp-ttmap**Command Class:** LNP Basic**Parameters****:force=** (optional)

Forcible value.

Range: yes, no**Default:** no**:num=** (optional)

Number of entries to be displayed. This parameter specifies how many records you want to display (potentially within a given range). Use this parameter to prevent inadvertent displays of extremely large amounts of information.

Range: 1-52, 000**Default:** 50**:pc=** (optional)

ANSI destination point code in the form of *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: pca**Range:** 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001–005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006–255.

The point code 000-000-000 is not a valid point code.

Default: Display all

:tt= (optional)
The translation type.
Range: 0-255
Default: Display all

Example

```
rtrv-lnp-ttmap:tt=16:pc=100-100-100  
rtrv-lnp-ttmap  
rtrv-lnp-ttmap:tt=15:num=20  
rtrv-lnp-ttmap:dpc=1-1-1:num=100:force=yes
```

Dependencies

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before this command can be entered.

If the **pc/pca** parameter is specified, the **tt** parameter must be specified.

The translation type must be in the LNP database.

If the specified **num** parameter value is greater than 50, the **force=yes** parameter must be specified.

Translation type values associated with AIN or IN LNP queries are not allowed for retrievals.

The **tt** parameter cannot be specified if the value has already been specified as an alias for another translation type.

Notes

Use the **tt** and **dpc** parameters to limit the displays to LNP MRGT records found matching their specified values. Combinations of these parameters are allowed.

Output

The following example shows how to retrieve an LNP GT:

rtrv-lnp-ttmap:tt=16:pc=100-100-100

```
rlghncxa03w 04-02-14:23:37 EST EAGLE 31.3.0
      TT  PCA          NGT  RGTA
      16  100-100-100  28   YES

      Message Relay Table is 1% full
      ;
```

The following example shows how to retrieve the first 50 LNP GTs assigned to the specified TT value:

rtrv-lnp-ttmap

```
rlghncxa03w 04-02-28 14:23:37 EST EAGLE 31.3.0
      TT  PCA          NGT  RGTA
      16  001-001-001   0   YES
      16  100-100-100  28   YES
      .
      .
      18  002-002-002  10   NO
      Message Relay Table is 1% full
      ;
```

The following example shows how to retrieve the first 20 LNP GTs assigned to the specified TT value:

rtrv-lnp-ttmap:tt=15:num=20

```
rlghncxa03w 04-02-28 14:23:37 EST EAGLE 31.3.0
      TT  PCA          NGT  RGTA
      15  001-001-002  10   NO
      .
      .
      15  001-001-005  10   YES
      Message Relay Table is 1% full
      ;
```

The following example shows how to retrieve the first 100 LNP GTs assigned to the specified DPC value:

rtrv-lnp-ttmap:dpc=1-1-1:num=100:force=yes

```
rlghncxa03w 04-02-28 14:23:37 EST EAGLE 31.3.0
      TT  PCA          NGT  RGTA
      16  001-001-001   0   NO
      18  001-001-001  10   NO
      .
      .
      .
      Message Relay Table is 75% full
      ;
```

Legend

TT—The translation type.

PCA—The ANSI point code.

NGT—The new global title translation type.

RGTA—The replacement GTA treatment.

rtrv-lnpopts**Retrieve LNP System Options**

Use this command to display all the LNP-specific system options from the database.

Keyword: **rtrv-lnpopts**

Related Commands: **chg-lnpopts**

Command Class: Database Administration

Parameters

This command has no parameters.

Example

rtrv-lnpopts

Dependencies

The LNP feature must be turned on (see the **enable-ctrl-feat** command) before this command can be entered.

Notes

None

Output

The JIPPROV and JIPDIGITS fields appear in the output only when the Triggerless LNP feature is turned on.

rtrv-lnpopts

```

AMASLPID    = 123456789
INCSLP      = yes
AMATYPE     = 003
AMAFEATID   = 010
CIC         = 1369
AUD         = on
SP          = a123
FRCSMPLX    = no
ADMHIPRI    = yes
GTWYSTP     = yes
JIPPROV     = yes
JIPDIGITS   = 919460
CCP         = no
SERVPORT    = no
WQREDRCT    = off
WSMSC10DIG  = yes
;

```

Legend

AMASLPID—AMA slip ID

INCSLP—Whether the AMA slip ID included in the response

AMATYPE—AMA call type

AMAFEATID—AMA feature ID

CIC—Carrier identification code

AUD—Audit indicator

SP—Service provider ID

FRCSMPLX—Allow simplex database updates indicator

ADMHIPRI—Indicator that LNP database administration has the highest priority of all administration

GTWYSTP—Indicator that LNP system is also configured as a Gateway STP

JIPPROV—Indicator of whether a Jurisdictional Information Parameter (JIP) value is to be added to the IAM

JIPDIGITS—The Jurisdictional Information Parameter value

CCP—Copy Charge Parameters

SERVPORT—Service Portability

WQREDRCT—Wireless queries directed to default GTT

WSMS10DIG—SCCP GTA length indicator for 10 or 11 digits

rtrv-log**Display Records from the Log**

Use this command to retrieve records from the active or standby Alarm and UIM logs generated by the Maintenance system. This command selects these records based on a span of time or a specific log file index.

Keyword: rtrv-log

Related Commands:

Command Class: System Maintenance

Parameters

:dir= (optional)

Direction in which to obtain entries from within the log (forward or backward) for displaying. See the Dependencies and Notes sections for usage information.

Range: **fwd, bkwd**

fwd—Display entries from nearer the beginning of the log toward entries at the end of the log

bkwd—Display entries from nearer the end of the log toward entries at the beginning of the log

Default: **fwd**

:edate= (optional)

End date. Report only log entries that were created on or *before* the specified date (when **dir=fwd**), or only log entries that were created on or *after* the specified date (when **dir=bkwd**). See the Notes section for usage information.

Range: **000101-991231**

(in the form *yymmdd*, where *yy* is year, *mm* is month, and *dd* is day)

Default: Report log entries regardless of their creation date

:enum= (optional)

Ending Message Reference Number (MRN) for which to display entries. The ending Alarm or UIM number if specifying a range.

Range: **1-1499**

1-999—Alarms (UAMs)

1000-1499—UIMs

Default: If **enum** is not specified and:

If **snum** is specified, the default **enum** value is the same as the specified **snum** value.

If **snum** is not specified and **type** is **alarm** or not specified, **enum= 999**.

If **snum** is not specified and **type** is **all** or **uim**, **enum= 1499**.

:etime= (optional)

End time. Report only log entries that were created on or *before* the specified time (when **dir=fwd**), or only log entries that were created on or *after* the specified time (when **dir=bkwd**). See the Notes section for usage information.

Range: **000000-235959**

(in the form *yymmdd*, where *yy* is year, *mm* is month, and *dd* is day)

Default: Report log entries regardless of their creation time

:mode= (optional)

Log display mode; display all information or just summary information from each log entry.

NOTE: If the entry is only one line, the same information (one line) is displayed in brief and full mode for that entry.

Range: **brief, full**

brief—Display only the first “Summary” line of the log entry

full—Display all information available in the log entry

Default: **full**

:next= (optional)

Number of additional records to display using the same direction (**dir**) and filtering criteria of **outgrp**, **type**, **slog**, and **mode** that were used for the previous successful **rtrv-log** command at the same terminal. This parameter cannot be specified with any other parameters in the command. See the Dependencies and Notes sections for usage information.

Range: 1-65500

:num= (optional)

Number of records that can be displayed before the report is stopped.

Range: 1-65500

Default: 15

:outgrp= (optional)

Output Group to sort or filter the Alarms (UAMs) and/or UIMs on. This parameter cannot be specified when the **snum** parameter is specified.

Range: **all**, **appserv**, **appss**, **card**, **clk**, **db**, **dbg**, **gtt**, **gws**, **link**, **meas**, **mon**, **mps**, **pu**, **sa**, **seas**, **slan**, **sys**, **traf**

all— Retrieve information for all Output Groups

appserv— Application Server

appss— Application Subsystem

card— Card

clk— Clock

db— Database

dbg— Debug

gtt— GTT Maintenance

gws— GWS Maintenance

link— Link Maintenance

meas— Measurements Maintenance

mon— Monitoring (Sentinel or IMF) Maintenance

mps— MPS Maintenance

pu— Program Update

sa— System Administration

seas— SEAS (Sentinel or IMF)

slan— SLAN Maintenance

sys— System Maintenance

traf— Traffic

Default: If the **next** parameter is not specified, the default is **all**.

If the **next** parameter is specified, the output is the same as the immediately previous successful **rtrv-log** command that was entered at the same terminal (and no **rtrv-log** command was entered at another terminal).

:sdate= (optional)

Start date. Report only log entries that were created on or *after* the specified date (when **dir=fwd**), or only log entries that were created on or *before* the specified date (when **dir=bkwd**). See the Notes section for usage information.

Range: 000101-991231

(in the form *yymmdd*, where *yy* is year, *mm* is month, and *dd* is day)

Default: Report log entries regardless of their creation date

:slog= (optional)

Source of log. Which OAM's Maintenance log to access: active or standby.

Range: **act**, **stb**

act—Active OAM

stb—Standby OAM

Default: act

:snum= (optional)

A single Alarm or UIM Message Reference Number (MRN), or the starting Alarm or UIM MRN if specifying a range. This parameter cannot be specified when the **outgrp** parameter is specified.

Range: 1-1499

1-999—Alarms (UAMs)

1000-1499—UIMs

Default: All entries for the specified **type** are displayed.

If **type** is **all**, **alarm**, or not specified, **snum=1**.

If **type** is **uim**, **snum=1000**.

:stime= (optional)

Start time. Report only log entries that were created on or *after* the specified time (when **dir=fwd**), or only log entries that were created on or *before* the specified time (when **dir=bkwd**). See the Notes section for usage information.

Range: 000000-235959

hhmmss—hh=hours (00-23), mm=minutes (00-59), ss=seconds (00-59)

Default: Report log entries regardless of their creation time

:type= (optional)

Type of Maintenance log to access for the report: alarms (UAMs), UIMs, or both logs (**all**).

Range: all, alarm, uim

Default: alarm

Example

```
rtrv-log:sdate=960715:stime=220000:num=50
```

```
rtrv-log:sdate=960715:stime=220000:num=50:snum=106
```

```
rtrv-log:sdate=960715:stime=220000:num=50:snum=106:enum=350
```

```
rtrv-log:sdate=960715:stime=220000:num=50:outgrp=slan:type=all
```

```
rtrv-log:next=100
```

Dependencies

No other **rtrv-log** command can already be in progress on the same OAM.

The initialization of the ELOG and UIM logs must be complete in the system before the **rtrv-log** command can be entered.

If both the **sdate** and **edate** parameters are specified,

- In the forward direction, the **sdate** value must be less than or equal to the **edate** value.
- In the backward direction, the **sdate** value must be greater than or equal to the **edate** value.

The month component of the **sdate** and **edate** parameters must be in the range 1–12.

The day component of the **sdate** and **edate** parameters must be in the range 1–31 and must accurately reflect the number of days in the month and year indicated (see Notes section).

The seconds component of the **stime** and **etime** parameters must be in the range 00–59.

The minutes component of the **stime** and **etime** parameters must be in the range 00–59.

If the **sdate** parameter value is equal to the **edate** parameter value,

- In the forward direction, the **stime** value must be less than or equal to the **etime** value.
- In the backward direction, the **stime** value must be greater than or equal to the **etime** value.

The **sdate** parameter value plus the **stime** parameter value must be less than the current time and date combination.

If **dir=bkwd** is specified with a date and time range, **sdate/stime** must be greater than **edate/etime**.

When the **enum** parameter is specified, the **snum** parameter must be specified with a value less than or equal to the specified **enum** value.

The specified **enum** parameter value and the specified **snum** value must be within the same range: **1-999** for Alarms (UAMs) and **1000-1499** for UIMs.

The **type** parameter and the **snum/enum** parameters cannot be specified together in the command.

The **rtrv-log:next=** command must be entered on the same terminal where the previous successful **rtrv-log** command was entered in the system. No other parameters can be entered with the **next** parameter in the command.

The **rtrv-log:next=** command cannot be entered following a **rtrv-log** command that contained the **type=all** parameter. A **rtrv-log** command without the **type=all** parameter must be entered before the **rtrv-log::next=** command can be entered.

Because entries can be overwritten between the entry of a **rtrv-log** command without the **next** parameter and the entry of a **rtrv-log:next=** command, the **rtrv-log:next:** command might not execute successfully. Another **rtrv-log** command without the **next** parameter must be entered before the **rtrv-log:next:** command can be entered again,

The values specified for the **edate** with the **stime** parameter combination is not valid.

The values specified for the **edate** with **stime** and **etime** parameter combination is not valid.

When an **enum** parameter is specified, it requires an **snum** as its mated parameter.

No other parameters can be entered with the **next** parameter in the command.

Notes

This command can be canceled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

To accommodate the year 2000 and beyond, the two-digit year portion of dates is interpreted to be in the indicated century as follows:

years 95–99 = 1995 through 1999
years 00–94 = 2000 through 2094

This means that date 000101 (Jan. 1, 2000) is greater than 991231 (Dec. 31, 1999).

The day portion of any **sdate/edate** value entered must be in agreement with the month and year. The system issues error message E2252 if the day is found to be not valid (for example, 960631 is not a valid date). The system software and date/time hardware properly handle leap years and leap centuries. The year 2000 is a leap year.

When no date or time parameters are specified, the log display depends on the specified or default values of two other parameters: **num** and **dir**. The **num** parameter determines the maximum number of entries to display, and the **dir** parameter determines whether entries are displayed from the oldest end (**dir=fwd** or not specified) or the newest end (**dir=bkwd**).

When **sdate** is specified and **edate** is not specified in the forward direction, **edate** is defaulted to be the end of the log.

When **edate** is specified and **sdate** is not specified in the forward direction, **sdate** is defaulted to be the beginning of the log.

When **sdate** is specified and **edate** is not specified in the backward direction, **edate** is defaulted to be the beginning of the log.

When **edate** is specified and **sdate** is not specified in the backward direction, **sdate** is defaulted to be the end of the log.

When **stime** is specified and **etime** is not specified in the forward direction, **etime** is defaulted to 235959.

When **etime** is specified and **stime** is not specified in the forward direction, **stime** is defaulted to 000000.

When **stime** is specified and **etime** is not specified in the backward direction, **etime** is defaulted to 000000.

When **etime** is specified and **stime** is not specified in the backward direction, **stime** is defaulted to 235959.

When **stime** or **etime** is specified but neither the **sdate** or **edate** parameters are specified, **sdate** and **edate** are each defaulted to the value **today**.

The **num** parameter is used to control the maximum number of entries to be displayed by one command.

The **dir** parameter is used to control whether preceding (older) or following (newer) records are displayed. In either output format, records are displayed in time order regardless of the retrieval control of the **dir** parameter.

Because logging does not stop while records are displaying, old records that were displayed can be overwritten before they are accessed again.

After the date or time is changed in the system, output records can show anomalies in the date-time stamp. An example of this occurs when the time is changed back—in this case records may show that an earlier time follows a later time in the log.

When no Output Group (**outgrp**) is specified, no sorting based on Output Groups and no additional Alarm/UIM breakdown into Output Group categories is done for the report. The log entries will be shown only in the forward or reverse chronological ordering of the logs.

When a unique Output Group (**outgrp**) is specified, the report is separated into Alarm and UIM categories, and the entries for the specified Output Group are shown in each category.

When **outgrp=all** is specified, the report is separated into Alarm and UIM categories, and the available entries in each category are listed by Output Group.

The **next** parameter is used to display a specified number of additional log records after the previous **rtrv-log** entry at the terminal. New records that are logged after the previous **rtrv-log** command was entered will not be displayed when the **rtrv-log:next=** command is entered. The **next** parameter is valid only under the following conditions:

- The **rtrv-log:next=** command is entered at the same terminal from which the previous **rtrv-log** command was entered. The previous **rtrv-log** command must not include the **type=all** parameter.
- No other terminal has issued a **rtrv-log** command after the **rtrv-log** command entered at the terminal from which the **rtrv-log:next=** command is entered.
- The **next** parameter is the only parameter specified in the **rtrv-log** command.
- There are still logs present that match the conditions (except **time/date/num**) specified in the previous **rtrv-log** command.

When either a single **snum** or range of **snum/enum** is specified, only those Alarms or UIMs within the specified range are displayed.

When **snum** is specified and **enum** is not specified, the **enum** value defaults to the specified **snum** value.

When **enum** is specified, an **snum** value must be specified that is less than or equal to the specified **enum** value.

If an **snum** is specified within the range **1-999**, its corresponding **enum** must be greater than or equal to the **snum** and also within the range of **1-999**.

If an **snum** is specified within the range **1000-1499**, its corresponding **enum** must be greater than or equal to the **snum** and also within the range of **1000-1499**.

When **enum** is not specified and the specified **snum** Alarm or UIM does not exist (is not currently used in the system), a scroll area message indicates that the **snum** value is out of range.

If **snum** and **enum** are specified and one or both specified Alarms and/or UIMs do not exist (are not currently used in the system), the report lists all existing Alarms and/or UIMs that exist within the specified range.

Output

In the following example, the sequence numbers that are replaced by the dashes (- - -) represent the UIMs that were discarded due to the UIM thresholding feature.

rtrv-log:type=uim:sdate=960715:stime=220000:num=50

rlghncxa03w 04-02-16 10:15:29 EST EAGLE 31.3.0

Card 1113; SYS REL= Rel 31.3.0; STP CLLI= ncralstp0001; Timezone= EST

**** Logged 99-07-16 01:03:09****

0001.1005 CARD 1105,B INFO GWS rcvd OPC that is not allowed

SIO=01 OPC=001-001-001 DPC=002-002-002

H0H1=000 AFTPC=003-003-003

TEST MODE

SR=scrib LSN=A1234567

Report Date: 99-07-16 Time: 01:00:01

**** Logged 99-07-16 01:03:34****

----.1004 CARD 1205,B INFO MTP rcvd unknown DPC

SIO=07 OPC=001-001-001 DPC=002-002-002

LSN=A1234567

Report Date: 99-07-16 Time: 01:01:00

**** Logged 99-07-16 01:03:55****

0014.1019 CARD 1103 INFO SCCP rcvd invalid UDTs msg

SIO=03 OPC=001-001-001 DPC=002-002-002

CDPA: SSN=005 TT=250

CGPA: SSN=000 TT=000

RETURN CAUSE=001

DATA=26 80 03 09 0e 06 09 00 fe 08 50 55

43 00

LSN=A1234567

Report Date: 99-07-16 Time: 01:00:05

;

The following example shows the records in the log created after 15 July 2003 at 10 PM up to a maximum of 50 records.

rtrv-log:sdate=030715:stime=220000:num=50

ncralstp00001 03-07-16 10:15:29 EST EAGLE 31.3.0

Card 1113; SYS REL= 31.3.0; STP CLLI= ncralstp00001; Timezone= EST

****03-07-15 22:03:09****

3159.0013 ** CARD 1207 CCS7ITU Card is isolated from the system

****03-07-15 22:03:11****

3160.0046 TERMINAL 10 Terminal enabled

****03-07-16 00:23:55****

3161.0200 SLK 1103,B RCVRY-LKF: link available

****03-07-16 01:42:18****

3162.0155 * DLK 2117,A STPLAN Connection unavailable

****03-07-16 01:43:51****

3163.0317 LSET A123456789 RCVRY-LKST0: linkset allowed

****03-07-16 02:35:16****

3164.0082 * FUSE PANEL 11xx Alarm in fuse panel

****03-07-16 03:00:23****

3165.0108 ** IMT BUS A Major IMT fault detected

****03-07-16 03:37:59****

3166.0292 *C GLS SYSTEM GLS is not available

****03-07-16 07:22:06****

3167.0313 *C DPC 021-005-000 DPC is prohibited

****03-07-16 09:33:17****

3168.0348 * SEAS SYSTEM SEAS is at minimum service

****03-07-16 09:34:01****

3169.0112 * IMT SYSTEM Major Failures detected on both

****03-07-16 09:35:07****

3170.0160 * CLOCK SYSTEM 1116-S clock failed

```

****03-07-16 09:36:34****
3171.0160 * CARD 1116 OAM          1116-S clock failed
****03-07-16 09:37:23****
3172.0065 * CLOCK                  Minor holdover clock trouble detected
****03-07-16 09:38:12****
3173.0308 *C SYSTEM                Node isolated due to SLK failure
****03-07-16 09:39:56****
3174.0331 *C SCCP SYSTEM           SCCP is not available
****03-07-16 09:40:15****
3175.0002 * GPL SYSTEM OAM        Card is not running approved GP
****03-07-16 09:41:34****
3176.0153 *C SLAN SYSTEM          STPLAN not available
****03-07-16 09:42:45****
3177.0060 * CDT 9                 Minor customer trouble detected
****03-07-16 09:43:52****
3178.0344 * SEAS X25 LINK A1      SEAS PVC unavailable
****03-07-16 09:44:18****
3179.0344 * SEAS OAP A           SEAS UAL unavailable
****03-07-16 09:45:29****
3180.0321 * XLIST                 X-LIST occupancy threshold Exceeded
****03-07-16 09:48:48****
3181.0175 * SECURITY 1114         LOGBUFROVL-SECULOG - upload required
****03-07-16 10:23:47****
0259.0084 ** DSM 1101,B          IP Connection Unavailable
Failed Channels: Prov Dnld TCP UDP
****03-07-16 10:25:41****
0069.0084 ** STC 1105,B          IP Connection Unavailable
ERROR STATUS: DHCP Lease. Physical Link.
;

UAM Report terminated - end of log reached.
END OF ALARM LOG REPORT.
;

```

The following example shows the records in the log created after 15 July 2003 at 10 PM for Alarm (UAM) 160.

```

rtrv-log:sdate=030715:stime=220000:num=50:snum=160
ncralstp00001 03-07-16 10:15:29 EST EAGLE 31.3.0
Card 1113; SYS REL= 31.3.0; STP CLLI= ncralstp00001; Timezone= EST

****03-07-16 09:35:07****
3170.0160 * CLOCK SYSTEM          1116-S clock failed
****03-07-16 09:36:34****
3171.0160 * CARD 1116 OAM          1116-S clock failed
;

UAM Report terminated - end of log reached.
END OF LOG REPORT.
;

```

The following example shows the records in the log created after 15 July 2003 at 10 PM that include Alarms (UAMs) 106 through 350.

```

rtrv-log:sdate=030715:stime=220000:num=50:snum=106:enum=350
ncralstp00001 03-07-16 10:15:29 EST EAGLE 31.3.0
Card 1113; SYS REL= 31.3.0; STP CLLI= ncralstp00001; Timezone= EST

****03-07-16 00:23:55****
3161.0200 SLK 1103,B             RCVRY-LKF: link available
****03-07-16 01:42:18****
3162.0155 * DLK 2117,A          STPLAN Exceededn unavailable
****03-07-16 01:43:51****
3163.0317 LSET A123456789       RCVRY-LKST0: linkset allowed
****03-07-16 03:00:23****

```

```

3165.0108 ** IMT BUS A          Major IMT fault detected
****03-07-16 03:37:59****
3166.0292 *C GLS SYSTEM         GLS is not available
****03-07-16 07:22:06****
3167.0313 *C DPC 021-005-000    DPC is prohibited
****03-07-16 09:33:17****
3168.0348 * SEAS SYSTEM         SEAS is at minimum service
****03-07-16 09:34:01****
3169.0112 * IMT SYSTEM          Major Failures detected on both
****03-07-16 09:35:07****
3170.0160 * CLOCK SYSTEM        1116-S clock failed
****03-07-16 09:36:34****
3171.0160 * CARD 1116 OAM       1116-S clock failed
****03-07-16 09:38:12****
3173.0308 *C SYSTEM             Node isolated due to SLK failure
****03-07-16 09:39:56****
3174.0331 *C SCCP SYSTEM        SCCP is not available
****03-07-16 09:41:34****
3176.0153 *C SLAN SYSTEM        STPLAN not available
****03-07-16 09:43:52****
3178.0344 * SEAS X25 LINK A1    SEAS PVC unavailable
****03-07-16 09:44:18****
3179.0344 * SEAS OAP A          SEAS UAL unavailable
****03-07-16 09:45:29****
3180.0321 * XLIST               X-LIST occupancy threshold Exceeded
****03-07-16 09:48:48****
3181.0175 * SECURITY 1114       LOGBUFROVL-SECULOG - upload required
;

UAM Report terminated - end of log reached.
END OF LOG REPORT.
;

```

The following example shows the records in the log created after 15 July 2003 at 10 PM for Alarms (UAMs) and UIMs in the SLAN Output Group.

rtrv-log:sdate=030715:stime=220000:num=50:outgrp=slan:type=all

ncralstp00001 03-07-16 10:15:29 EST EAGLE 31.3.0

Card 1113; SYS REL= 31.3.0; STP CLLI= ncralstp00001; Timezone= EST

Alarm Output Group - SLAN

****03-07-16 09:41:34****

3176.0153 *C SLAN SYSTEM STPLAN not available

UIM Output Group - SLAN

**** Logged 03-07-16 01:03:09****

0001.1005 CARD 1105,B INFO GWS rcvd OPC that is not allowed

SI0=01 OPC=001-001-001 DPC=002-002-002

H0H1=000 AFTPC=003-003-003

TEST MODE

SR=scrib LSN=A1234567

Report Date: 03-07-16 Time: 01:00:01

```

;
Report terminated - end of log reached.
END OF LOG REPORT.
;

```

The following example shows the records in the log in the backward direction that were created between 12 June 2003 at 4:48:27 PM and 11 June 2003 at 10:00:45 PM for Alarms (UAMs).

rtrv-

log:dir=bkwd:stime=044827:sdate=030612:etime=100045:edate=030611

tekelecstp 03-06-23 04:10:12 EST EAGLE 31.3.0

Card 1115; SYS REL= 31.3.0. STP CLLI= tekelecstp; Timezone= EST

```

Report Initiated   - extended processing time required

****03-06-12  04:48:27****
5001.0009      CARD 1115 EOAM           MASP became active
****03-06-11  13:38:55****
5003.0002 * GPL SYSTEM BPHMUX          Card is not running approved GPL
****03-06-11  13:38:55****
5002.0002 * GPL SYSTEM BPDCM           Card is not running approved GPL
****03-06-11  13:36:04****
5001.0009      CARD 1115 EOAM           MASP became active
****03-06-11  12:15:29****
5001.0009      CARD 1115 EOAM           MASP became active
****03-06-11  11:19:51****
5001.0009      CARD 1115 EOAM           MASP became active
****03-06-11  10:00:46****
5019.0109      IMT SYSTEM               All IMT System level alarms cleared
****03-06-11  10:00:45****
5018.0106      IMT BUS B               IMT Bus alarm cleared
****03-06-11  10:00:45****
5017.0106      IMT BUS A               IMT Bus alarm cleared
****03-06-11  10:00:45****
5016.0014      CARD 1107 SS7ANSI        Card is present
                    ASSY SN: 10200301518
****03-06-11  10:00:45****
5015.0111 ** IMT SYSTEM                Failure on both IMT A and IMT B
UAM Report terminated - 11 records displayed
END OF LOG REPORT.

```

;

The following example shows all the records in the log in the backward direction (UAMs and UIMs).

rtrv-log:type=all

```

tekelecstp 06-01-06 09:16:20 EST  EAGLE 35.0.0
Card 1113; SYS REL= 35.0.0; STP CLLI= tekelecstp; Timezone= ****

****06-01-06  09:06:49****
0002.0009      CARD 1113 EOAM           MASP became active
****06-01-06  09:11:16****
0004.0143 * CARD 1113 EOAM             System release GPL(s) not approved
****06-01-06  09:13:54****
0005.0048 * TERMINAL      4            Terminal failed
****06-01-06  09:13:59****
0006.0046      TERMINAL      2          Terminal enabled
UAM Report terminated - end of log reached

;

tekelecstp 06-01-06 09:16:22 **** EST  EAGLE 35.0.0
Card 1113; SYS REL= 35.0.0; STP CLLI= tekelecstp; Timezone= ****

****Logged 06-01-06 09:10:43****
0003.1083      SYSTEM      INFO      REPT COND: system alive
                    Report Date:06-01-06 Time:09:10:43
****Logged 06-01-06 09:15:43****
0007.1083      SYSTEM      INFO      REPT COND: system alive
                    Report Date:06-01-06 Time:09:15:43
UIM Report terminated - end of log reached
END OF LOG REPORT.

```

;

The following example shows the log records in the backward direction that include Alarms (UAMs) 937 and 938 for the RTD System.

rtrv-log:dir=bkwd:num=10

```

stdcfg1b 13-06-23 00:05:42 WET  EAGLE 35.6.0
Card 1113; SYS REL= 35.6.0; STP CLLI= stdcfg1b; Timezone= WET

```



```

****13-06-23 00:03:42****
0936.0542 RTD SYSTEM MSU cksum error threshold cleared
****13-06-22 23:15:12****
0915.0541 *C RTD SYSTEM MSU cksum error threshold exceeded
****13-06-21 21:50:24****
0144.0542 RTD SYSTEM MSU cksum error threshold cleared
****13-06-21 21:48:47****
0142.0541 *C RTD SYSTEM MSU cksum error threshold exceeded
****13-06-21 21:32:03****
0138.0096 CARD 1101 SS7ML Card has been reloaded
****13-06-21 21:31:40****
0137.0002 * GPL SYSTEM SS7ML Card is not running approved GPL
****13-06-21 21:31:28****
0136.0109 IMT SYSTEM All IMT System level alarms cleared
Outstanding IMT BUS A failure for card 1111, 1113
****13-06-21 21:31:28****
0135.0106 IMT BUS B IMT Bus alarm cleared
UAM Report terminated - max. or num= count reached
END OF LOG REPORT.
;

```

rtrv-loopset**Retrieve Loop Set Command**

Use this command to retrieve loopset data from the database.

Keyword: rtrv-loopset

Related Commands: chg-loopset, dlt-loopset, ent-loopset

Command Class: Database Administration

Parameters

:disp= (optional)

Display method. This parameter specifies the manner in which the retrieved data is displayed.

Range: detail, list

detail— Provides detailed information for a loopset entry.

list— Provides a list of loopset entries.

If the **name** parameter is specified, then the **disp=list** parameter cannot be specified.

Default: detail

:force= (optional)

The **force=yes** parameter must be specified if the value of the **num** parameter is greater than **50**.

Range: yes

:mode= (optional)

Mode of operation. This parameter retrieves loopset entries that have been assigned the specified mode.

Range: notify, discard

notify— Generates a UIM without discarding the message.

discard— Generates a UIM and discards the message.

:name= (optional)

Loopset name. This parameter retrieves a specified loopset.

The **name=none** parameter cannot be specified.

Range: ayyyyyyy

1 alphabetic and up to 7 alphanumeric characters.

:num= (optional)

Number. This parameter specifies the number of entries to be retrieved.

If the value of the **num** parameter is greater than **50**, then the **force=yes** parameter must be specified.

Range: 1-1000

Default: 50

Example

This example provides detailed information for the first 50 valid loopset entries in the loopset table.

rtrv-loopset

This example provides detailed information for the loopset entry rtp1.

rtrv-loopset:name=rtp1

This example provides detailed information for the first 100 valid loopset entries in the loopset table.

rtrv-loopset:num=100:force=yes

This example provides a list of the first 100 valid loopset entries in the loopset table.

rtrv-loopset:force=yes:num=100:disp=list

This example provides detailed information for the first 100 valid loopset entries set to discard mode in the loopset table.

rtrv-loopset:force=yes:num=100:mode=discard

This example provides a list of the first 100 valid loopset entries set to notify mode in the loopset table.

rtrv-loopset:force=yes:num=100:mode=notify:disp=list

Dependencies

If the value of the **num** parameter is greater than 50, then the **force=yes** parameter must be specified.

The value of the **name** parameter must already exist in the database.

The SCCP Loop Detection feature must be enabled before this command can be entered.

The GTT feature must be turned on before this command can be entered.

The **name=none** parameter cannot be specified.

If the **name** parameter is specified, then the **disp=list** parameter cannot be specified.

Output

The following example displays the loopset entry details for loopset **rtp1**.

rtrv-loopset:name=rtp1

rlghncxa03w 07-02-10 08:52:38 EST EAGLE Rel 35.6.0

LoopSet	Mode	Point Codes
RTP1	Discard	005-005-005 007-007-007 (ANSI) 003-007-003 005-007-005 005-004-005

;

The following example displays details for up to 100 loopset entries.

rtrv-loopset:num=100:force=yes

rlghncxa03w 07-02-10 08:59:18 EST EAGLE Rel 35.6.0

LoopSet	Mode	Point Codes
Cary2	Notify	005-015-005 007-007-007 (ANSI) 033-007-003 005-027-005
Cary4	Notify	005-012-005 007-026-007 (ANSI) 033-002-003 005-008-055
Apex3	Discard	005-017-008 007-017-009 (ANSI) 005-014-005 005-017-005 033-002-043 005-038-005 033-003-043 005-012-005
Apex4	Discard	005-007-008 027-007-009 (ANSI) 005-004-055 027-001-007 033-007-003 005-003-055
RAL5	Notify	005-005-005 007-007-007 (ANSI) 003-001-003 005-007-005 003-002-003 005-008-005 003-003-003 005-002-005
RAL6	Notify	005-007-008 007-007-009 (ANSI) 003-007-003
DUNN1	Discard	005-002-055 007-051-007 (ANSI)
RTP9	Discard	005-002-005 007-001-007 (ANSI) 003-007-003 005-003-005 005-004-005
RTP5	Discard	005-007-008 007-007-009 (ANSI)
RTP1	Discard	005-005-005 007-007-007 (ANSI) 003-007-003 005-007-005 005-004-005
RTP2	Notify	005-007-008 007-007-009 (ANSI)

;

The following example displays the names and modes of up to 100 loopset entries.

rtrv-loopset:force=yes:num=100:disp=list

rlghncxa03w 07-02-10 09:03:27 EST EAGLE Rel 35.6.0

LoopSet	Mode		LoopSet	Mode		LoopSet	Mode
Cary2	Notify		Cary4	Notify		Apex3	Discard
Apex4	Discard		RAL5	Notify		RAL6	Notify

```

DUNN1      Discard  || RTP9      Discard  || RTP5      Discard
RTP1       Discard  || RTP2      Notify
;
The following example displays a list of up to 100 loopset entries that contain the mode=notify
parameter.
rtrv-loopset:force=yes:num=100:mode=notify:disp=list
rlghncxa03w 07-02-10 09:10:07 EST EAGLE Rel 35.6.0

LoopSet    Mode      || LoopSet    Mode      || LoopSet    Mode
=====
Cary2      Notify     || Cary4      Notify     || RAL5      Notify
RAL6      Notify     || RTP2      Notify
;

```

rtrv-ls**Retrieve Linkset**

Use this command to show the linkset information.

Keyword: **rtrv-ls**

Related Commands: **chg-ls**, **chg-lsopts**, **dlt-ls**, **ent-ls**, **rept-stat-ls**

Command Class: Database Administration

Parameters

:apc= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The prefix subfield indicates a private point code (*prefix-ni-nc-ncm*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001-005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006-255**.

The point code **000-000-000** is not a valid point code.

:apc/apca/apci/apcn/apcn24= (optional)

Adjacent point code.

:apci= (optional)

ITU international point code with subfields *zone-area-id*. The prefix subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps-

zone—0-7

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

:apcn= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (*members*) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible

point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The prefix subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:apcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The prefix indicates a private point code (*prefix-msa-ssa-sp*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:cgtmod= (optional)

Calling party GT modification indicator. This parameter displays the linksets that have the specified value of the calling party GT modification indicator.

Range: **yes, no**

:islsrb= (optional)

Incoming rotated signaling link selection (SLS) bit. This parameter displays the linksets with the specified rotated bit.

Range: **1-4**

Default: Display all link sets

:itutfr= (optional)

ITU TFR (Transfer Restricted) procedure indicator. This parameter displays the linksets that have the specified value of the **itutfr** parameter.

This parameter is valid for ITU national linksets only.

Range: **on, off**

Default: Display all link sets

:lsn= (optional)

Linkset name

Range: *ayyyyyyyyy*

1 alphabetic character followed by up to 9 alphanumeric characters

Default: Display all link sets

:lst= (optional)

Linkset type. This parameter specifies whether to display proxy links.

This parameter can be specified only when the Proxy Point Code feature is enabled.

Range: **prx**

prx — Display proxy links.

:mtprse= (optional)

ANSI or ITU MTP Restart equipped. This parameter specifies whether the node adjacent to the linkset is equipped with MTP Restart.

Range: **yes, no**
 yes — equipped
 no — not equipped
Default: Display all link sets

:ppc= (optional)

ANSI proxy point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

The proxy point code must be a full point code.

Synonym: **ppca**

Range: **000-255**
 Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).
 When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.
 When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001-005**.
 When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006-255**.
 The point code **000-000-000** is not a valid point code.

:ppc/ppca/ppci/ppcn/ppcn24= (optional)

Proxy Point Code.

The proxy point code must be a full point code.

:ppci= (optional)

ITU international proxy point code with subfields *zone-area-id*. The prefix subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255**
 Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).
 prefix—**s-**
 zone—**0-7**
 area—**000-255**
 id—**0-7**
 The point code **0-000-0** is not a valid point code.

:ppcn= (optional)

ITU national proxy point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (*members*) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-m2-m3-m4-gc*). The prefix subfield indicates a spare point code (*prefix-nnnnn, prefix-nnnnn-gc, prefix-m1-m2-m3-m4, prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**
 Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).
 prefix—**s-**
 nnnnn—**0-16383**
 gc—**aa-zz**

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:ppcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

:randsls= (optional)

Random SLS (signaling link selection). This parameter is used to display linksets that have the specified value of the **randsls** parameter.

Range: **off, class0, all**

off — Displays all linksets where random SLS is disabled.

class0 — Displays linksets where random SLS generation for Class0 SCCP traffic is enabled.

all — Displays ITU linksets where random SLS generation for Class0 and Class1 SCCP traffic is enabled and ANSI linksets where random SLS generation for Class0 and ISUP traffic is enabled.

Default: **off**

:slsocbit= (optional)

Other CIC (Circuit Identification Code) Bit. This parameter displays all the linksets that have the **slsocbit** parameter set to a value from 5 to 16.

Range: *****

***** — Specifies all possible values (5-16)

Default: Display all link sets

:slsrsb= (optional)

Rotated SLS (Signaling Link Selection) Bit. This parameter displays the linksets with the specified rotated bit.

Range: **1-4**

Default: Display all link sets

:spc= (optional)

ANSI secondary point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001–005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006–255**.

The point code **000-000-000** is not a valid point code.

:spc/spca/spci/spcn/spcn24= (optional)

Secondary point code.

:spci= (optional)

ITU international secondary point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

:spcn= (optional)

ITU national secondary point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: s-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:spcn24= (optional)

24-bit ITU national secondary point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

Example

Display the attributes of all link sets:

rtrv-ls

Retrieve link set ls1:

rtrv-ls:lsn=ls1

Retrieve all link sets with the mtpsrse parameter set to yes:

rtrv-ls:mtpsrse=yes

Retrieve all link sets that use the slsocbit parameter with a value from 5 to 16:

rtrv-ls:slsocbit=*

Display a specified ITU linkset to view the settings for the slsrbs or slsocbit parameters:

rtrv-ls:lsn=lsitu

Retrieve all ITU national linksets that have the **itutfr** parameter set to on:

rtrv-ls:itutfr=on

Retrieve the specified ITU national linkset and display its setting for the **itutfr** parameter:

rtrv-ls:lsn=lsitun

Retrieve all linksets where random SLS generation is enabled for SCCP ITU traffic and Class0 ANSI traffic.

rtrv-ls:randsls=class0

Display all proxy linksets.

rtrv-ls:lst=prx

Display all linksets using a specified proxy point code.

rtrv-ls:ppc=11-11-11

Display all linksets using a specified secondary point code.

rtrv-ls:spc=2-2-2

Display all linksets using a specified adjacent point code.

rtrv-ls:apc=1-1-2

Retrieves all linksets where calling party global title modification is requested:

rtrv-ls:cggmod=yes

Retrieves all linksets with the specified Incoming SLS Bit:

rtrv-ls:islsrsb=4

Dependencies

The specified linkset must be in the database.

All optional parameters, except for the combination of the **slsobit** and **slsrsb** parameters, can only be used individually. Any combination of 2 or more of the optional parameters, other than the specified exception, is invalid.

If the **apcn** parameter is specified as the Adjacent Point Code, then the format of the **apcn** parameter must match the format dictated by the **chg-stpopts:npcfmti** parameter.

The SLSOCB feature must be enabled before the **slsobit** parameter can be specified.

The Multiple Linksets to Single Adjacent PC (MLS) feature must be turned on before the **apc** and **spc** parameters can be specified.

At least one linkset must be associated with the value of the **apc** parameter.

The Proxy Point Code feature must be enabled before the **lst=prx** parameter can be specified.

The Proxy Point Code feature must be enabled before the **ppc** parameter can be specified.

The value specified for the **ppc** parameter must be a full point code.

The value specified for the **ppc** parameter must already exist in the Destination table, and the **prx=yes** parameter must have been specified.

The value specified for the **apc** parameter must be a full point code.

The value specified for the **spc** parameter must be a full point code.

The AMGTT feature or the AMGTT CgPA Upgrade feature must be turned on before the **cggmod** parameter can be specified.

The ISLSRSB feature must be enabled before the **islsbr** parameter can be specified.

Notes

This command can be canceled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

The CLLI, TFATCABMLQ, MTPRSE, and ASL8 fields are displayed only when a specific linkset is specified. The SLSOCBIT and SLSRSB fields are displayed only when a specific linkset is specified, and the linkset must be an ITU linkset.

If the **tfatcabmlq** parameter database value is **0** for a linkset, then the value displayed is one-half (rounded-up) of the number of links assigned to the given linkset (or **1** if there are 2 or fewer links in the linkset).

If the **tfatcabmlq** parameter database value is **0**, then the TFA/TCA broadcast minimum link quantity is calculated by the EAGLE 5 ISS to be a minimum of **1** for linksets containing 2 or fewer links, or half (rounded-up) of the number of links configured in the linkset for linksets containing more than 2 links. The calculated value is displayed in the **rtrv-ls** command output.

If the **tfatcabmlq** parameter value is set to a specific value greater than **0**, then the EAGLE 5 ISS does not calculate a TFA/TCA broadcast minimum link quantity. The provisioned value is displayed in the **rtrv-ls** command output.

The EAGLE 5 ISS **ent-ls** command allows 10-character linkset names, but entering a linkset name through SEAS is still restricted to 8 characters. In SEAS, a specific linkset with a name greater than 8 characters (entered using the EAGLE 5 ISS command) cannot be retrieved by name. If an asterisk is used for the linkset name in the SEAS **vfy-ls** command, all linksets will be shown; however, the linkset names that are more than 8 characters will have only the first 8 characters shown. Therefore it may appear that there are duplicate linkset names in SEAS **vfy-ls** output, but all linkset names are actually unique.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (**s-**) and the private and spare point code subtype prefix (**ps-**). All of the point code types support the private (internal) point code subtype prefix (**p-**).

The value specified for the **ppc** parameter must be a full point code. Cluster point codes and private point codes are not supported.

The ICNIMAP and OGNIMAP fields are displayed only if the linkset name is specified in the command, the ITU Spare Point Code feature is enabled, and an ITUN or ITUI point code is associated with the linkset.

Output

The Multiple Linksets to Single Adjacent PC (MLS) feature must be turned on before information can be retrieved for an adjacent point code or a secondary point code.

The Proxy Point Code feature must be enabled before information can be retrieved by proxy point code or proxy linkset.

In Release 37.5.0, if information is requested for a linkset, then the secondary point code field is displayed in the output. If the MLS feature is not enabled, or if the linkset was not created with a secondary point code, the field contains dashes.

In Release 38.0, headings for unequipped cards are not displayed.

The following example shows all linksets where random SLS generation is enabled for Class0 and Class1 SCCP traffic for ITU linksets and Class0 and ISUP traffic for ANSI linksets:

rtrv-ls:randsls=all

tekelecstp 08-10-30 19:36:00 EST EAGLE 40.0.0

LSN	APCA	(SS7)	SCRN	SET	SET	BEI	LST	LNKS	ACT	MES	DIS	SLSCI	NIS
lsa111	001-001-001		none	1	1	no	B	0	off	off	off	no	off

LSN	APCI	(SS7)	SCRN	SET	SET	BEI	LST	LNKS	ACT	MES	DIS	SLSCI	NIS
lsi111	1-001-1		none	1	2	no	B	0	off	off	off	no	off

Link set table is (2 of 1024) 1% full.

;

The following example shows detailed linkset configuration for linkset **lsi111**. Random SLS generation is enabled for Class0 and Class1 SCCP traffic.

rtrv-ls:lsn=lsi111

tekelecstp 08-02-26 12:49:06 EST EAGLE 38.0.0

LSN	APCI	(SS7)	SCRN	SET	SET	BEI	LST	LNKS	ACT	MES	DIS	SLSCI	NIS
lsi111	1-000-1		none	1	2	no	A	0	off	off	off	no	off

SPCI	CLLI	TFATCABMLQ	MTPRSE	ASL8
-----	-----	1	---	---

SLRSRB	RANDSLS	ITUTFR
1	all	off

IPSG	IPGWAPC	GTTMODE	CGGTMOD
no	no	CdPA	no

Link set table is (1 of 1024) 1% full.

;

The following example shows detailed linkset configuration for linkset **ls4**. Random SLS generation is enabled for SCCP Class0 traffic, and the SLSOCB and the ITUDUPPC features are turned on.

rtrv-ls:lsn=ls4

tekelecstp 08-02-05 06:44:15 EST EAGLE5 38.0.0

LSN	APCI	(SS7)	SCRN	SET	SET	BEI	LST	LNKS	ACT	MES	DIS	SLSCI	NIS
ls4	1-007-4		none	1	2	no	A	4	off	off	off	---	off

SPCA	CLLI	TFATCABMLQ	MTPRSE	ASL8	GSMSCRN

```

----- 2 --- --- off

SLSOCBIT SLSRSB RANDSLS MULTGC ITUTFR
none      1      class0 no      off

IPSG IPGWAPC GTTMODE CGGTMOD
no     no      CdPA      no

LOC LINK SLC TYPE L2T SET BPS ECM PCR PCR E1 E1
1202 B 0 LIME1 11 56000 BASIC --- ----- 1202 1 5
1202 B1 1 LIME1 11 56000 BASIC --- ----- 1202 1 6
1202 B2 2 LIME1 11 56000 BASIC --- ----- 1202 1 7
1202 B3 3 LIME1 11 56000 BASIC --- ----- 1202 1 8

```

Link set table is (167 of 1024) 16% full.

;

The following example displays the attributes of all linksets.

rtrv-ls

```
tekelecstp 08-02-26 20:11:43 EST EAGLE 38.0.0
```

```

LSN          APCA (SS7)  L3T SLT          GWS GWS GWS
ls1111      011-001-001  none 1 1 no A 1 off off off no off
ls1112      011-001-002  none 1 1 no A 1 off off off no off
ls1121      011-002-001  none 1 1 no A 1 off off off no off
ls1122      011-002-002  none 1 1 no A 1 off off off no off
ls111111    011-011-011  none 1 1 no A 1 off off off no off

```

```

LSN          APCI (SS7)  L3T SLT          GWS GWS GWS
ls1311      3-001-1     none 1 2 no A 0 off off off --- off

```

```

LSN          APCN24 (SS7) L3T SLT          GWS GWS GWS
lsn24       024-024-024  none 1 2 no A 0 off off off --- off

```

Link set table is (7 of 1024) 1% full.

;

In the following example for the specified linkset:

- The TFATCABMLQ and MTPRSE fields are displayed only when a specific link set is specified.
- The SLSOCBIT and SLSRSB fields are not displayed for ANSI link sets.
- RANDSLS information is displayed for an ANSI link sets.

rtrv-ls:lsn=ls1

```
tekelecstp 08-11-05 01:33:29 EST EAGLE 40.0.0
```

```

LSN          APCA (SS7)  L3T SLT          GWS GWS GWS
ls1          003-003-003  gws1 1 1 no A 15 on on on yes off

          SPCA          CLLI          TFATCABMLQ MTPRSE ASL8
-----
          7          --- no

RANDSLS
off

```

IPSG		IPGWAPC		GTTMODE		CGGTMOD					
no		no		CdPA		no					
LOC	PORT	SLC	TYPE	L2T SET	BPS	L1 MODE	TSET	ECM	PCR N1	PCR N2	
1101	A	0	LIMDS0	1	56000	---	---	BASIC	---	-----	
1201	A	5	IPLIM								
LOC	PORT	SLC	TYPE	LP SET	BPS	ATM TSEL	VCI	VPI	LL		
1102	A	2	LIMATM	1	1544000	EXTERNAL	5	0	0		
LOC	PORT	SLC	TYPE	L2T SET	BPS	ECM	PCR N1	PCR N2	E1 LOC	E1 PORT TS	
1205	A	6	LIME1	1	56000	BASIC	---	-----	1205	1 1	
LOC	PORT	SLC	TYPE	L2T SET	BPS	ECM	PCR N1	PCR N2	T1 LOC	T1 PORT TS	
1206	A	10	LIMT1	1	56000	BASIC	---	-----	1206	1 1	

Link set table is (7 of 1024) 1% full.

;

In the following example for a specified linkset:

- The TFATCABMLQ and MTPRSE fields are displayed only when a specific link set is specified. In this example, link set **XZ172261**'s TFACABMLQ and MTPRSE attribute values are "---" because these attributes are not supported for link sets terminating in the X.25 domain. The FE-PC of this link set has no CLLI; therefore the CLLI is shown as "-----".
- The SLSOCBIT and SLSRSB fields are not displayed for ANSI link sets.

rtrv-ls:lsn=xz172261

tekelecstp 08-11-05 01:33:29 EST EAGLE 40.0.0

LSN		APCA (SS7)		SCRN		L3T SLT		BEI LST		LNKS		GWS GWS GWS		ACT MES DIS		SLSCI NIS	
xz172261		240-021-000		scr1	1	1	yes	a	1	off	off	off	---	off			
		SPCA		CLLI		TFATCABMLQ		MTPRSE		ASL8							
		-----		-----		--		---		----							

RANDSLS
off

IPSG		IPGWAPC		GTTMODE		CGGTMOD					
no		no		CdPA		no					

LOC	PORT	SLC	TYPE	L2T SET	BPS	L1 MODE	TSET	ECM	PCR N1	PCR N2
1205	a	0	LIMV35	1	56000	---	---	BASIC	---	-----

Link set table is (114 of 1024) 12% full

;

The following example displays all the linksets with the **mtpmse** parameter set to **yes**. The output appears the same as the **rtrv-ls** output, but the command filters the output to display only the link sets that have the specified value of the **mtpmse** parameter.

rtrv-ls:mtpmse=yes

tekelecstp 06-09-05 01:33:29 EST EAGLE 36.0.0

L3T SLT

GWS GWS GWS

LSN	APCA	(SS7)	SCRN	SET	SET	BEI	LST	LNKS	ACT	MES	DIS	SLSCI	NIS
wy644368	240-020-000		SEAS	1	1	yes	a	4	off	off	off	no	off
wy644389	240-030-000		scr1	1	2	no	c	3	on	on	on	yes	

				L3T	SLT				GWS	GWS	GWS		
LSN	APCA	(X25)	SCRN	SET	SET	BEI	LST	LNKS	ACT	MES	DIS	SLSCI	NIS
xz172261	240-021-000		scr1	1	1	yes	a	1	off	off	off	---	off

				L3T	SLT				GWS	GWS	GWS		
LSN	APCI	(SS7)	SCRN	SET	SET	BEI	LST	LNKS	ACT	MES	DIS	SLSCI	NIS
ia125167	1-111-1		scr1	1	1	yes	a	1	off	off	off	---	off
ib237261	1-111-2		scr2	1	2	no	c	3	on	on	on	---	off
ic383726	1-111-3		scr3	1	3	yes	c	5	off	off	off	---	off

				L3T	SLT				GWS	GWS	GWS		
LSN	APCN	(SS7)	SCRN	SET	SET	BEI	LST	LNKS	ACT	MES	DIS	SLSCI	NIS
nd147271	11111		scr1	1	1	yes	a	1	off	off	off	---	off
ne238271	11112		scr2	1	2	no	c	3	on	on	on	---	on
nf373762	11113		scr3	1	3	yes	c	5	off	off	off	---	off

Link set table is (114 of 1024) 12% full

;

The following example displays all the linksets with the **slsocbit** parameter set to a value from 5 to 16. The output appears the same as the **rtrv-ls** output, but the command filters the output to display only the link sets that have the specified value of the **slsocbit** parameter.

rtrv-ls:slsocbit=*

tekelecstp 06-09-05 01:33:29 EST EAGLE 36.0.0

				L3T	SLT				GWS	GWS	GWS		
LSN	APCI	(SS7)	SCRN	SET	SET	BEI	LST	LNKS	ACT	MES	DIS	SLSCI	NIS
lsitu	1-067-0		none	1	2	no	C	1	off	off	off	---	---

Link set table is (114 of 1024) 12% full

;

The following example shows output that includes a multi-port LIM:

rtrv-ls:lsn=ls1

tekelecstp 08-11-05 01:33:29 EST EAGLE 40.0.0

				L3T	SLT				GWS	GWS	GWS		
LSN	APCA	(SS7)	SCRN	SET	SET	BEI	LST	LNKS	ACT	MES	DIS	SLSCI	NIS
LS1	240-020-000		none	1	2	no	C	8	off	off	off	no	off

SPCA	CLLI	TFATCABMLQ	MTPRSE	ASL8
-----	-----	1	no	no

RANDSLS
off

IPSG	IPGWAPC	GTTMODE	CGGTMOD
no	no	CdPA	no

LOC	PORT	SLC	TYPE	L2T SET	BPS	L1 MODE	TSET	ECM	PCR N1	PCR N2
1201	A	0	LIMDS0	1	56000	---	---	BASIC	---	-----
1201	A3	1	LIMDS0	2	56000	---	---	BASIC	---	-----
1202	A1	2	LIMDS0	3	56000	---	---	BASIC	---	-----
1202	B	3	LIMDS0	4	56000	---	---	BASIC	---	-----
1202	B1	4	LIMDS0	5	56000	---	---	BASIC	---	-----
1202	A2	5	LIMDS0	6	56000	---	---	BASIC	---	-----
1202	B2	6	LIMDS0	7	56000	---	---	BASIC	---	-----
1202	B3	7	LIMDS0	8	56000	---	---	BASIC	---	-----

Link set table is (51 of 1024) 5% full.

;

The following example shows output that includes an E1 card.

rtrv-ls:lsn=ls1

tekelecstp 08-11-05 01:33:29 EST EAGLE 40.0.0

LSN	APCA (SS7)	SCRN	L3T SET	SLT SET	BEI	LST	LNKS	GWS ACT	GWS MES	GWS DIS	SLSCI	NIS
ls1	003-003-003	none	1	1	no	A	14	off	off	off	no	off
SPCA			CLLI		TFATCABMLQ			MTPRSE		ASL8		
-----			-----		1			no		no		

RANDSLS
off

IPSG	IPGWAPC	GTTMODE	CGGTMOD
no	no	CdPA	no

LOC	PORT	SLC	TYPE	L2T SET	BPS	L1 MODE	TSET	ECM	PCR N1	PCR N2
1101	B3	1	LIMDS0	1	56000	---	---	BASIC	---	-----
1201	A	5	IPLIM							

LOC	PORT	SLC	TYPE	LP SET	BPS	ATM TSEL	VCI	VPI	LL
1103	A	3	LIMATM	1	1544000	EXTERNAL	5	0	0

LOC	PORT	SLC	TYPE	L2T SET	BPS	ECM	PCR N1	PCR N2	E1 LOC	E1 PORT	TS
1205	A1	7	LIME1	1	56000	BASIC	---	-----	1205	1	2

Link set table is (7 of 1024) 1% full.

;

The following example includes an IPLIMx to 8 Points card.

rtrv-ls:lsn=ls1

tekelecstp 08-11-05 01:33:29 EST EAGLE 40.0.0

LSN	APCA (SS7)	SCRN	L3T SET	SLT SET	BEI	LST	LNKS	GWS ACT	GWS MES	GWS DIS	SLSCI	NIS
ls1	003-003-003	gws1	1	1	no	A	15	on	on	on	yes	off
SPCA			CLLI		TFATCABMLQ			MTPRSE		ASL8		
-----			-----		1			no		no		

RANDSLS
off

IPSG	IPGWAPC	GTTMODE	CGGTMOD
no	no	CdPA	no

LOC	PORT	SLC	TYPE	L2T SET	BPS	L1 MODE	TSET	ECM	PCR N1	PCR N2
1101	A	0	LIMDS0	1	56000	---	---	BASIC	---	-----

LOC	PORT	SLC	TYPE	LP SET	BPS	ATM TSEL	VCI	VPI	LL
1102	A	2	LIMATM	1	1544000	LINE	5	0	0

LOC	PORT	SLC	TYPE	IPLIML2

1201 A 5 IPLIM M2PA

LOC	PORT	SLC	TYPE	L2T SET	BPS	ECM	PCR N1	PCR N2	E1 LOC	E1 PORT	E1 TS
1205	A	6	LIME1	1	56000	BASIC	---	-----	1205	1	1

LOC	PORT	SLC	TYPE	L2T SET	BPS	ECM	PCR N1	PCR N2	T1 LOC	T1 PORT	T1 TS
1206	A	10	LIMT1	1	56000	BASIC	---	-----	1206	1	1

Link set table is (7 of 1024) 1% full.

;

The following example shows the GSMSCRN value for an ANSI linkset.

rtrv-ls:lsn=lsa

tekelecstp 08-11-05 01:33:29 EST EAGLE 40.0.0

LSN	APCA (SS7)	SCRN	L3T SET	SLT SET	BEI	LST	LNKS	GWS ACT	GWS MES	GWS DIS	SLSCI	NIS
lsa	003-003-003	none	1	1	no	A	0	off	off	off	no	off

SPCA	CLLI	TFATCABMLQ	MTPRSE	ASL8
-----	-----	1	no	no

RANDSLS
off

IPSG	IPGWAPC	GTTMODE	CGGTMOD
no	no	CdPA	no

Link set table is (3 of 1024) 1% full.

;

The adjacent point code (APCA/APCI/APCN) values shown in the following example include adjacent spare point codes (prefix **s-**), adjacent private point codes (prefix **p-**), and adjacent private and spare point codes (prefix **ps-**).

rtrv-ls

tekelecstp 08-03-05 10:12:31 EST EAGLE 38.0.0

LSN	APCA (SS7)	SCRN	L3T SET	SLT SET	BEI	LST	LNKS	GWS ACT	GWS MES	GWS DIS	SLSCI	NIS
lsa1	001-001-002	none	1	1	no	A	0	off	off	off	no	off
lsa2	p-001-002-004	none	1	1	no	A	0	off	off	off	no	off
lsa3	p-001-002-005	none	1	1	no	A	0	off	off	off	no	off

LSN	APCI (SS7)	SCRN	L3T SET	SLT SET	BEI	LST	LNKS	GWS ACT	GWS MES	GWS DIS	SLSCI	NIS
lsn1	s-1-002-3	none	1	2	no	A	1	off	off	off	---	off
lsn2	s-2-002-2	none	1	2	no	A	1	off	off	off	---	off
lsn3	s-2-100-1	none	1	2	no	A	1	off	off	off	---	off
lsn4	s-2-012-1	none	1	2	no	A	1	off	off	off	---	off
lsn5	2-100-1	none	1	2	no	A	1	off	off	off	---	off
lsn6	s-3-134-1	none	1	2	no	A	1	off	off	off	---	off

LSN	APCN (SS7)	SCRN	L3T SET	SLT SET	BEI	LST	LNKS	GWS ACT	GWS MES	GWS DIS	SLSCI	NIS
lsn410234	ps-1-1-1-2047-aa	none	1	2	no	B	0	off	off	off	---	off
lsn410235	p-1-1-1-0059-aa	none	1	2	no	B	0	off	off	off	---	off
lsn4102356	ps-1-1-1-0234-aa	none	1	2	no	B	0	off	off	off	---	off

Link set table is (12 of 1024) 1% full.

;

The following example displays linksets using a specified adjacent point code. The MLS feature must be turned on before information can be retrieved for an adjacent point code.

rtrv-ls:apc=1-1-2

tekelecstp 07-07-26 12:49:06 EST EAGLE 37.5.0

APCA = 001-001-002

LSN	SPCA	SCRN	L3T SLT		BEI	LST	LNKS	GWS GWS GWS			SLSCI	NIS
			SET	SET				ACT	MES	DIS		
lsa1	002-002-002	none	1	1	no	A	0	off	off	off	no	off
rtp4	001-002-005	none	1	1	no	A	0	off	off	off	no	off
dur16	002-007-042	none	1	1	no	A	0	off	off	off	no	off
morv12	012-009-005	none	1	1	no	A	0	off	off	off	no	off
lsa22	004-002-022	none	1	1	no	A	0	off	off	off	no	off

Link set table is (12 of 1024) 1% full.

The following example displays all linksets when the MLS feature is turned on. The MLS features allows multiple linksets to have the same adjacent point code.

rtrv-ls

LSN	APCA (SS7)	SCRN	L3T SLT		BEI	LST	LNKS	GWS GWS GWS			SLSCI	NIS
			SET	SET				ACT	MES	DIS		
lsa1	001-001-002	none	1	1	no	A	0	off	off	off	no	off
lsa2	p-001-002-004	none	1	1	no	A	0	off	off	off	no	off
lsa3	p-001-002-005	none	1	1	no	A	0	off	off	off	no	off
rtp4	001-001-002	none	1	1	no	A	0	off	off	off	no	off
dur16	001-001-002	none	1	1	no	A	0	off	off	off	no	off
morv12	001-001-002	none	1	1	no	A	0	off	off	off	no	off
lsa22	001-001-002	none	1	1	no	A	0	off	off	off	no	off

LSN	APCI (SS7)	SCRN	L3T SLT		BEI	LST	LNKS	GWS GWS GWS			SLSCI	NIS
			SET	SET				ACT	MES	DIS		
lsn1	s-1-002-3	none	1	2	no	A	1	off	off	off	---	off
lsn2	2-100-1	none	1	2	no	A	1	off	off	off	---	off
lsn3	s-3-134-1	none	1	2	no	A	1	off	off	off	---	off

LSN	APCN (SS7)	SCRN	L3T SLT		BEI	LST	LNKS	GWS GWS GWS			SLSCI	NIS
			SET	SET				ACT	MES	DIS		
lsn410234	ps-1-1-1-2047-aa	none	1	2	no	B	0	off	off	off	---	off
lsn410235	p-1-1-1-0059-aa	none	1	2	no	B	0	off	off	off	---	off

Link set table is (12 of 1024) 1% full.

The following example displays all linksets when the Proxy Point Code feature is enabled. Proxy point codes used by the linksets are displayed.

rtrv-ls

homenetwork 08-03-19 17:03:37 EST EAGLE 38.0.0

LSN	APCA (SS7)	SCRN	L3T SLT		BEI	LST	LNKS	GWS GWS GWS			SLSCI	NIS
			SET	SET				ACT	MES	DIS		
x1	001-001-001	none	1	1	no	PRX	0	off	off	off	no	off
x2	001-001-002	none	1	1	no	PRX	0	off	off	off	no	off
x3	001-001-003	none	1	1	no	PRX	0	off	off	off	no	off
x4	001-001-004	none	1	1	no	PRX	0	off	off	off	no	off
x5	001-001-005	none	1	1	no	PRX	0	off	off	off	no	off
x6	001-001-006	none	1	1	no	PRX	0	off	off	off	no	off
x7	001-001-007	none	1	1	no	PRX	0	off	off	off	no	off
x8	001-001-008	none	1	1	no	PRX	0	off	off	off	no	off
x9	001-001-009	none	1	1	no	PRX	0	off	off	off	no	off
x10	001-001-010	none	1	1	no	PRX	0	off	off	off	no	off
y	002-002-002	none	1	1	no	A	0	off	off	off	no	off

Link set table is (11 of 1024) 1% full.

;

The following example displays linksets using a specified proxy point code.

rtrv-ls:ppc=2-2-2

homenetwork 07-05-19 17:05:04 EST EAGLE 37.5.0

PPCA = 002-002-002

LSN	APCA (SS7)	SCRN	L3T SET	SLT SET	BEI	LST	LNKS	ACT	GWS MES	GWS DIS	GWS SLSCI	NIS
x1	001-001-001	none	1	1	no	PRX	0	off	off	off	no	off
x2	001-001-002	none	1	1	no	PRX	0	off	off	off	no	off
x3	001-001-003	none	1	1	no	PRX	0	off	off	off	no	off
x4	001-001-004	none	1	1	no	PRX	0	off	off	off	no	off
x5	001-001-005	none	1	1	no	PRX	0	off	off	off	no	off
x6	001-001-006	none	1	1	no	PRX	0	off	off	off	no	off
x7	001-001-007	none	1	1	no	PRX	0	off	off	off	no	off
x8	001-001-008	none	1	1	no	PRX	0	off	off	off	no	off
x9	001-001-009	none	1	1	no	PRX	0	off	off	off	no	off
x10	001-001-010	none	1	1	no	PRX	0	off	off	off	no	off

Link set table is (11 of 1024) 1% full.

;

The following example displays all of the proxy linksets.

rtrv-ls:lst=prx

homenetwork 08-03-19 17:05:40 EST EAGLE 38.0.0

LSN	APCA (SS7)	SCRN	L3T SET	SLT SET	BEI	LST	LNKS	ACT	GWS MES	GWS DIS	GWS SLSCI	NIS
x1	001-001-001	none	1	1	no	PRX	0	off	off	off	no	off
x2	001-001-002	none	1	1	no	PRX	0	off	off	off	no	off
x3	001-001-003	none	1	1	no	PRX	0	off	off	off	no	off
x4	001-001-004	none	1	1	no	PRX	0	off	off	off	no	off
x5	001-001-005	none	1	1	no	PRX	0	off	off	off	no	off
x6	001-001-006	none	1	1	no	PRX	0	off	off	off	no	off
x7	001-001-007	none	1	1	no	PRX	0	off	off	off	no	off
x8	001-001-008	none	1	1	no	PRX	0	off	off	off	no	off
x9	001-001-009	none	1	1	no	PRX	0	off	off	off	no	off
x10	001-001-010	none	1	1	no	PRX	0	off	off	off	no	off

Link set table is (11 of 1024) 1% full.

;

The following example displays information for a specified linkset when the Proxy Point Code feature is enabled.

rtrv-ls:lsn=x1

tekelecstp 08-11-05 17:32:59 EST EAGLE 40.0.0

LSN	APCA (SS7)	SCRN	L3T SET	SLT SET	BEI	LST	LNKS	ACT	GWS MES	GWS DIS	GWS SLSCI	NIS
x1	001-001-001	none	1	1	no	PRX	0	on	on	on	yes	off
	PPCA	CLLI				TFATCABMLQ	MTPRSE	ASL8				
	002-002-002	-----			7		---	no				
	RANDSLS											
	off											
	IPGWAPC	MATELSN		IPTPS		LSUSEALM	SLKUSEALM	GTTMODE				
	no	-----		----		---	---	CdPA				

Link set table is (11 of 1024) 1% full.

;

The following example displays proxy linksets using a specified adjacent point code when the MLS feature is turned on and the Proxy Point Code feature is enabled.

rtrv-ls:apc=1-1-1

tekelecstp 07-03-05 17:32:59 EST EAGLE 37.5.0

APCA = 001-001-001

LSN	PPCA	SCRN	SET	SET	BEI	LST	LNKS	ACT	MES	DIS	SLSCI	NIS
x1	002-002-002	none	1	1	no	PRX	0	off	off	off	no	off

Link set table is (11 of 1024) 1% full.

;

The following example displays linksets using a specified secondary point code when the MLS feature is turned on.

rtrv-ls:spc=2-2-2

homenetwork 07-05-19 17:05:04 EST EAGLE 37.5.0

SPCA = 002-002-002

LSN	APCA (SS7)	SCRN	SET	SET	BEI	LST	LNKS	ACT	MES	DIS	SLSCI	NIS
lsa1	001-001-002	none	1	1	no	A	0	off	off	off	no	off
lsa2	p-001-002-004	none	1	1	no	A	0	off	off	off	no	off

Link set table is (12 of 1024) 1% full.

;

The following example displays information for a specific linkset when the MLS feature is turned on.

rtrv-ls:lsn=lsa1

tekelecstp 08-11-05 17:32:59 EST EAGLE 40.0.0

LSN	APCA (SS7)	SCRN	SET	SET	BEI	LST	LNKS	ACT	MES	DIS	SLSCI	NIS
lsa1	001-001-002	none	1	1	no	A	15	on	on	on	yes	off

SPCA	CLLI	TFATCABMLQ	MTPRSE	ASL8
002-002-002	-----	7	---	no

RANDSLS
off

IPGWAPC	MATELSN	IPTPS	LSUSEALM	SLKUSEALM
no	-----	---	---	---

LOC	LINK	SLC	TYPE	L2T SET	BPS	L1 MODE	TSET	ECM	PCR N1	PCR N2
1101	A	0	LIMDS0	1	56000	---	---	BASIC	---	-----
1201	A	5	IPLIM							

LOC	LINK	SLC	TYPE	LP SET	BPS	ATM TSEL	VCI	VPI	LL
1102	A	2	LIMATM	1	1544000	EXTERNAL	5	0	0

LOC	LINK	SLC	TYPE	SET	BPS	ECM	N1	PCR N2	PCR LOC	E1 PORT	E1 TS

```

1205 A      6  LIME1      1    56000  BASIC ---  ----- 1205 1      1
                                L2T                      PCR PCR  T1  T1
LOC  LINK SLC TYPE      SET  BPS    ECM  N1  N2   LOC  PORT TS
1206 A      10 LIMT1      1    56000  BASIC ---  ----- 1206 1      1

```

Link set table is (12 of 1024) 1% full.

The following example displays output for a specified linkset when calling party GT modification is requested.

rtrv-ls:lsn=ls3

tekelecstp 08-11-07 11:56:50 EST EAGLE 40.0.0

```

LSN              APCA  (SS7)  SCRNL3T SLT          GWS GWS GWS
ls3              002-002-003  none 1  1  no  A  0  ACT MES DIS SLSCI NIS
                                off off off no  off
                                SPCA      CLLI      TFATCABMLQ MTPRSE ASL8 GSMSCRN
                                ----- 1          ---  no  off

```

RANDSLS
off

```

IPGWAPC MATELSN      IPTPS  LSUSEALM SLKUSEALM GTTMODE
no      -----  ---  ---  ---  AdvCdPA, CdPA, CgPA

```

CGGTMOD
yes

```

LOC  LINK SLC TYPE      L2T      L1      PCR PCR
SET  BPS    MODE TSET   ECM  N1  N2

LOC  LINK SLC TYPE      LP      ATM      VCI  VPI  LL
SET  BPS    TSEL        VCI  VPI  CRC4 SI SN

LOC  LINK SLC TYPE      LP      ATM      VCI  VPI  CRC4 SI SN
SET  BPS    TSEL        VCI  VPI  CRC4 SI SN

LOC  PORT SLC TYPE      IPLIML2

LOC  PORT SLC TYPE

LOC  LINK SLC TYPE      L2T      PCR PCR  E1  E1
SET  BPS    ECM  N1  N2   LOC  PORT TS

LOC  LINK SLC TYPE      L2T      PCR PCR  T1  T1
SET  BPS    ECM  N1  N2   LOC  PORT TS

```

Link set table is (3 of 1024) 1% full.

;

The following example displays all of the linksets where calling party global title modification is requested.

rtrv-ls:cggmod=yes

tekelecstp 08-02-27 11:56:50 EST EAGLE 38.0.0

```

LSN              APCA  (SS7)  SCRNL3T SLT          GWS GWS GWS
abc14368         330-020-000  SEAS 1  1  yes a  2  off off off no  off
abc34589         330-030-000  scr1 1  2  no  c  3  on  on  on  yes
                                L3T SLT          GWS GWS GWS

```

```

LSN          APCA  (SS7)  SCRNL3T SLT          GWS GWS GWS
abc32261     330-044-000  scr1 1  1  yes a  1  off off off  ---  off

```

```

LSN          APCA  (SS7)  SCRNL3T SLT          GWS GWS GWS
LSN          APCA  (SS7)  SCRNL3T SLT          GWS GWS GWS

```

Link set table is (114 of 1024) 12% full

;

The following example displays output for an IPSP-M2PA linkset.

rtrv-ls:lsn=m2pa12132

e1001501 08-11-13 16:20:43 EST EAGLE 40.0.0

```

LSN          APCA  (SS7)  SCRNL3T SLT          GWS GWS GWS
m2pa12132    001-213-002  none 1  1  no  A  1  off off off  no  off

```

```

          SPCA          CLLI          TFATCABMLQ MTPRSE ASL8
-----
          1          no          no

```

RANDSLS
off

```

IPSP  IPGWAPC  GTTMODE          CGGTMOD
yes   no       CdPA          no

```

```

ADAPTER  SLKTPS  LSUSEALM  SLKUSEALM  RCONTEXT  ASNOTIF
m2pa     1000    100%      80%        none      no

```

```

LOC  LINK  SLC  TYPE  ANAME
1303 A    0    IPSP  m2pa1303a

```

Link set table is (20 of 1024) 2% full.

;

The following example displays the output for an IPSP-M3UA linkset. If value of the **numslk** threshold parameter is provisioned to **0**, and the value is recalculated as per the provisioned links within the linkset, then an indication marker “*” is printed as a superscript to the value of the corresponding parameter.

rtrv-ls:lsn=ipsgm3ua

e1001501 08-11-13 16:20:42 EST EAGLE 40.0.0

```

LSN          APCA  (SS7)  SCRNL3T SLT          GWS GWS GWS
ipsgm3ua     008-008-004  none 1  1  no  A  3  off off off  no  off

```

```

          SPCA          CLLI          TFATCABMLQ MTPRSE ASL8
-----
          1          no          no

```

RANDSLS
off

```

IPSP  IPGWAPC  GTTMODE          CGGTMOD
yes   no       CdPA          no

```

```

ADAPTER  SLKTPS  LSUSEALM  SLKUSEALM  RCONTEXT  ASNOTIF
m3ua     100     100%      80%        1234567890 yes

```

```

NUMSLKALW  NUMSLKRSTR  NUMSLKPROH
2*          1          1

```

LOC	LINK	SLC	TYPE	ANAME
1102	A2	0	IPSG	ipsgm3ua1102
1202	A3	1	IPSG	ipsgm3ua1202
1302	A4	2	IPSG	ipsgm3ua1302

Link set table is (1 of 1024) 1% full.

;

The following example displays linkset information when the ITU National and International Spare Point Code Support feature is enabled.

rtrv-ls:lsn=lsnp1

tekelecstp 08-04-14 13:33:44 EST EAGLE 39.0.0

LSN	APCI	(SS7)	SCRN	L3T SET	SLT SET	BEI	LST	LNKS	ACT	GWS MES	GWS DIS	GWS SLSCI	NIS
lsnp1	1-002-1		none	1	2	no	A	3	off	off	off	no	off

SPCI	CLLI	TFATCABMLQ	MTPRSE	ASL8
-----	-----	1	---	---

SLSRSB	RANDSLS	ITUTFR	ICNIMAP	OGNIMAP
1	off	off	itui2ituis	ituis2itui

IPGWAPC	MATELSN	IPTPS	LSUSEALM	SLKUSEALM	GTTMODE
no	-----	---	---	---	CdPA

LOC	LINK	SLC	TYPE	L2T SET	BPS	L1 MODE	TSET	ECM	PCR N1	PCR N2

LOC	LINK	SLC	TYPE	LP SET	BPS	ATM TSEL	VCI	VPI	LL

LOC	LINK	SLC	TYPE	LP SET	BPS	ATM TSEL	VCI	VPI	E1ATM	CRC4	SI	SN
1104	A	0	LIME1ATM	21	2.048M	LINE	5	0	ON	3	0	
1105	A	1	LIME1ATM	21	2.048M	LINE	5	0	ON	3	0	
1106	A	2	LIME1ATM	21	2.048M	LINE	5	0	ON	3	0	

LOC	PORT	SLC	TYPE	IPLIML2

LOC	PORT	SLC	TYPE

LOC	LINK	SLC	TYPE	L2T SET	BPS	ECM	PCR N1	PCR N2	E1 LOC	E1 PORT	TS

LOC	LINK	SLC	TYPE	L2T SET	BPS	ECM	PCR N1	PCR N2	T1 LOC	T1 PORT	TS

Link set table is (6 of 1024) 1% full.

;

The following example displays output for an IPGWx linkset. It shows IPGWAPC information for a specific ANSI linkset.

rtrv-ls:lsn=ls1315a

eagle10212 08-11-06 17:00:42 EST EAGLE 40.0.0

LSN	APCA	(SS7)	SCRN	L3T SET	SLT SET	BEI	LST	LNKS	ACT	GWS MES	GWS DIS	GWS SLSCI	NIS
ls1315a	000-015-000		none	1	1	no	A	1	off	off	off	no	off

SPCA	CLLI	TFATCABMLQ	MTPRSE	ASL8

```

----- 1          no      no

RANDSLS
off

IPSG  IPGWAPC  GTTMODE          CGGTMOD
no    yes      CdPA             no

MATELSN  IPTPS  LSUSEALM  SLKUSEALM
----- 4000    100%      80%

LOC  LINK  SLC  TYPE
1315 A    0    SS7IPGW

```

Link set table is (18 of 1024) 2% full.

;

The following example displays linkset information for an ANSI linkset when the Incoming SLS Bit Rotation feature is enabled.

rtrv-ls:lsn=ls6

rlghncxa03w 09-02-27 11:43:04 GMT EAGLE 40.1.0

```

                L3T SLT          GWS GWS GWS
LSN          APCA  (SS7)  SCRn SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
ls06         002-007-008  scr4 1  4  no  a  0  on  off off no  on

          SPCA          CLLI          TFATCABMLQ MTPRSE ASL8
-----  ls06clli          1          no      no

RANDSLS
off

ISLSRSB
1

IPSG  IPGWAPC  GTTMODE          CGGTMOD
no    no        CdPA             no

```

Link set table is (20 of 1024) 2% full

;

The following example displays linkset information for an ITU linkset when the Incoming SLS Bit Rotation feature is enabled.

rtrv-ls:lsn=lsi111

tekelecstp 08-10-08 10:46:00 EST EAGLE 40.0.0

```

                L3T SLT          GWS GWS GWS
LSN          APCI  (SS7)  SCRn SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
lsi111       1-001-1      none 1  2  no  A  0  off off off no  off

          SPCI          CLLI          TFATCABMLQ MTPRSE ASL8
-----  -----  1          ---      ---

SLSOCBIT SLSRSB RANDSLS ITUTFR
none      1      off      off

ISLSRSB
1

IPSG  IPGWAPC  GTTMODE          CGGTMOD
no    no        CdPA             no

```

Link set table is (1 of 1024) 1% full.

The following example displays the output when information for linksets with a specified ISLSRB filter is requested.

rtrv-ls:islsrsb=4

tekelecstp 08-10-21 09:46:52 EST EAGLE 40.0.0

LSN	APCI (SS7)	SCRN	L3T	SET	SET	BEI	LST	LNKS	ACT	GWS	MES	DIS	SLSCI	NIS
lsi616	6-001-6	none	1	2	no	B	0	0	off	off	off	no	off	off
lsi747	7-014-7	none	1	2	no	A	0	0	off	off	off	no	off	off

Link set table is (16 of 1024) 2% full.

;

Legend

LSN—The name of the linkset. When CHINA appears after the LSN heading, each linkset that is listed under the heading was defined with the **apcnp type=itunchina** parameter specified.

APC/APCI/APCN/APCN24—The adjacent DPC of the linkset.

SPC/SPCI/SPCN/SPCN24—The secondary PC of the linkset.

SCRN—The screen set assigned to the linkset.

L3TSET—The level 3 timer set value assigned to the linkset.

SLTSET—The SLTM record associated with the linkset.

BEI—The broadcast exception indicator. This field indicates whether TFP (transfer prohibited) messages are allowed to be broadcast on the linkset.

LST—The type of links in the linkset (access links, bridge links, etc.).

LNKS—The number of links in the linkset.

GWSA—Shows whether gateway screening is used on the specified linkset.

GWSM—Shows whether the display of messages generated for each screened message is turned on or off.

GWSD—Shows whether the gateway screening message discard function is turned on or off.

SLSCI—Shows whether the 5-to-8-bit SLS conversion feature is to be used to select links for outgoing messages directed to the given linkset.

NIS—Shows whether the Network Indicator Spare option is on or off for the specified linkset.

CLLI—The far end Common Language Location Identifier (CLLI).

TFATCABMLQ—Displays the minimum number of links in the given linkset (or in the combined linkset in which it resides) that must be available to user-part messages traffic in order for the STP to consider the first-choice ordered routes using that linkset as allowed rather than restricted.

MTPRSE—Shows whether the adjacent node is equipped with MTP restart.

ASL8—Shows whether the adjacent node is sending MSUs with 8-bit SLSs.

MULTGC—Shows whether multiple group codes are allowed.

IPGWAPC—Shows whether the adjacent point code is an IP Gateway adjacent point code.

MATELSN—The name of the mate IP Gateway linkset.

IPTPS—Provisioned or default TPS for the specific IPGWx linkset. This value is a user-defined or default portion of the total enabled system IP Signaling TPS.

LSUSEALM—The percent of the linkset TPS (**iptps**) at which an alarm is generated to indicate that the actual linkset TPS is approaching the configured **iptps** value for the linkset.

SLKUSEALM—The percent of the link "fair share" TPS at which an alarm is generated to indicate that the actual link TPS is approaching the link's "fair share" of its linkset's configured TPS (**iptps**). The "fair share" of the linkset TPS for a link is the configured linkset TPS divided by the number of in-service links in the linkset.

LOC—The location of the card containing the signaling links that make up the linkset.

PORT—The port on the card containing the signaling link.

SLSOCBIT—The setting of the Other CIC (Circuit Identification Code) Bit.

SLRSRB—The setting of the Rotated SLS (Signaling Link Selection) Bit.

ISLSRSB—The setting of the Incoming Rotated SLS (Signaling Link Selection) Bit.

GSMSCRN—Shows whether the GSM MAP screening indicator is turned on or off.

ITUTFR—Shows whether the ITU TFR procedure indicator is turned on or off.

L2TSET—The level 2 timer set value associated with the signaling link.

SLC—The signaling link code of the signaling link.

TYPE—The type of card.

BPS—The transmission rate for the link in bits per second.

L1MODE—The mode of operation used to select the link clocking source at layer 1.

TSET—An indicator of whether the transmitter signal element timing is on or off.

E1PORT—The E1 port with the E1 interface that services the link.

E1LOC—The card location of the E1 card with the E1 interface that services the link.

T1PORT—The T1 port with the T1 interface that services the link.

T1LOC—The card location of the T1 card with the T1 interface that services the link.

TS—The timeslot assigned to the link that is serviced by the E1 or T1 interface.

E1ATMCRC4—The indicator of whether CRC4 multi-frame structure is enabled or disabled.

E1ATMSI—Value of two Spare International bits of NFAS data.

E1ATMSN—Value of five Spare National bits of NFAS data.

RANDSLS—The setting of linkset for Random SLS generation.

ADAPTER—Shows whether the linkset is IPSP M2PA or IPSP M3UA linkset.

RCONTEXT—The routing context id of IPSP M3UA linkset.

ASNOTIF—Shows whether AS notifications will be generated for IPSP M3UA linkset.

ANAME—The association name configured for signaling link of IPSP linkset.

SLKTPS—The provisioned TPS for concerned signaling link of the specified IPSP linkset.

CGGTMOD—Shows whether calling party global title modification indicator is yes or no for the linkset.

PPC/PPCI/PPCN/PPCN24—The proxy point code of the linkset.

NUMSLKALW—Threshold value for IPSP M3UA linkset used to transition to Allowed state from Restricted or Prohibited state.

NUMSLKRSTR—Threshold value for IPSP M3UA linkset used to transition to Restricted state from Allowed state.

NUMSLKPROH—Threshold value for IPSP M3UA linkset used to transition to Prohibited state from Restricted or Allowed state.

ICNIMAP—Incoming NI Map.

OGNIMAP—Outgoing NI Map.

rtrv-m2pa-tset

Retrieve M2PA Timer Set

Use this command to retrieve either one M2PA timer set or all M2PA timer sets.

Keyword: rtrv-m2pa-tset

Related Commands: chg-m2pa-tset

Command Class: Database Administration

Parameters

:tset= (optional)

The name of the M2PA timer set to be retrieved.

Range: 1-20

:ver= (optional)

The M2PA version supported by the association.

Range: d6, rfc

Example

```
rtrv-m2pa-tset
```

```
rtrv-m2pa-tset:tset=1
```

Dependencies

None

Notes

If a timer set is not specified in the command, all timer sets are retrieved.

Output

rtrv-m2pa-tset:tset=1:ver=d6

rlghncxa03w 06-01-18 08:16:14 EST EAGLE 34.3.0
M2PA Draft 6 Timers (in msec, T16 in microsec)

TSET	T1	T2	T3	T4N	T4E	T5	T6	T7	T16	T17	T18
1	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000

;

rtrv-m2pa-tset:tset=1:ver=rfc

rlghncxa03w 06-01-18 08:16:14 EST EAGLE 34.3.0
M2PA RFC Timers (in msec, T16 in microsec)

TSET	T1	T2	T3	T4N	T4E	T5	T6	T7	T16	T17	T18
1	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000

;

rtrv-m2pa-tset:tset=1

rlghncxa03w 06-01-18 08:16:14 EST EAGLE 34.3.0
M2PA Draft 6 Timers (in msec, T16 in microsec)

TSET	T1	T2	T3	T4N	T4E	T5	T6	T7	T16	T17	T18
1	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000

M2PA RFC Timers (in msec, T16 in microsec)

TSET	T1	T2	T3	T4N	T4E	T5	T6	T7	T16	T17	T18
1	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000

;

rtrv-m2pa-tset:ver=d6

rlghncxa03w 06-01-18 08:16:14 EST EAGLE 34.3.0
M2PA Draft 6 Timers (in msec, T16 in microsec)

TSET	T1	T2	T3	T4N	T4E	T5	T6	T7	T16	T17	T18
1	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
2	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
3	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
4	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
5	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
6	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
7	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
8	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
9	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
10	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
11	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
12	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
13	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
14	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
15	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
16	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
17	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
18	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
19	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
20	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000

;

rtrv-m2pa-tset:ver=rfc

rlghncxa03w 06-01-18 08:16:14 EST EAGLE 34.3.0
M2PA RFC Timers (in msec, T16 in microsec)

TSET	T1	T2	T3	T4N	T4E	T5	T6	T7	T16	T17	T18
1	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
2	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
3	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
4	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
5	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
6	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
7	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
8	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
9	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
10	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
11	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
12	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
13	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
14	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
15	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
16	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
17	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
18	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
19	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
20	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000

;

rtrv-m2pa-tset

rlghncxa03w 06-01-18 08:16:14 EST EAGLE 34.3.0
M2PA Draft 6 Timers (in msec)

TSET	T1	T2	T3	T4N	T4E	T5	T6	T7	T16	T17	T18
1	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
2	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
3	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
4	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
5	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
6	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
7	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
8	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
9	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
10	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
11	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
12	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
13	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
14	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
15	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
16	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
17	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
18	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
19	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000
20	10000	-----	10000	10000	500	1000	3000	1200	200000	250	1000

M2PA RFC Timers (in msec, T16 in microsec)

TSET	T1	T2	T3	T4N	T4E	T5	T6	T7	T16	T17	T18
1	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
2	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
3	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
4	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
5	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
6	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
7	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
8	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
9	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
10	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
11	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
12	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000
13	300000	20000	2000	30000	500	100	3000	1200	200000	250	1000

```

14 300000 20000 2000 30000 500 100 3000 1200 200000 250 1000
15 300000 20000 2000 30000 500 100 3000 1200 200000 250 1000
16 300000 20000 2000 30000 500 100 3000 1200 200000 250 1000
17 300000 20000 2000 30000 500 100 3000 1200 200000 250 1000
18 300000 20000 2000 30000 500 100 3000 1200 200000 250 1000
19 300000 20000 2000 30000 500 100 3000 1200 200000 250 1000
20 300000 20000 2000 30000 500 100 3000 1200 200000 250 1000

```

;

rtrv-map**Retrieve Mate Applications**

Use this command to show the mated application relationship information and Alternate RI Mate information maintained by the system. The GTT Load Sharing with Alternate Routing Indicator (GTT LS ARI) feature must be enabled to view Alternate RI Mate information. This information is used to support the routing of SCCP management SSP/SSA messages.

Keyword: **rtrv-map**

Related Commands: **chg-map, dlt-map, ent-map**

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:mapset= (optional)

The MAP set ID.

Range: **1-36000 dflt**

dflt—Default MAP set

Default: **dflt** - The default value of the **mapset** parameter is **dflt** only when the Flexible GTT Load Sharing feature is not enabled.

:pc= (optional)

ANSI point code in the form of *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: **pca**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001-005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006-255**.

The point code **000-000-000** is not a valid point code.

:pc/pca/pci/pcn/pcn24= (optional)

Point code.

:pci= (optional)

ITU international point code in the form of *zone-area-id*.

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

zone—0-7

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

:pcn= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:pcn24= (optional)

24-bit ITU national point code in the form of *main signaling area-sub signaling area-signaling point*.

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

:ssn= (optional)

Subsystem number

Range: **2-255**

Default: All subsystem numbers and their mates are shown for the given point code.

Example

rtrv-map

rtrv-map:pc=2-2-2

rtrv-map:pca=1-1-4

rtrv-map:pca=1-1-4:ssn=15

rtrv-map:mapset=2

rtrv-map:mapset=dflt:pcn=s-10155-ab

rtrv-map:pci=1-110-0

rtrv-map:pcn=6-7-1

rtrv-map:pcn24=0-1-2

Dependencies

The value of the **pc/pca/pci/pcn/pcn24** parameter must already exist in the MAP entity set. All subsystem numbers for the specified PC and mate are displayed.

The remote PC must be specified as a full PC.

Asterisk entries are not allowed.

If an SSN is specified, the PC/SSN pair must exist in the MAP table. The PC/SSN entry and its mate are shown.

The DPC of the primary subsystem must be a full PC.

If the SSN is specified, then the remote PC must be specified.

The Flexible GTT Load Sharing feature must be enabled before the **mapset** parameter can be specified.

The specified MAP set must exist in the database.

If the PC and MAP set are specified, and the SSN is not specified, then at least one entry for that PC/MAP set must exist in the MAP table.

If the PC, SSN, and MAP set are specified, then they must already be provisioned in the MAP table.

Notes

This command can be canceled using the **F9** function key or the **canc-cmd** command. See the **canc-cmd** command for more information.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (**s-**).

If the Flexible GTT Load Sharing feature is enabled, then the retrieved MAP examples contain the MAPSET ID for each MAP set. MAP sets that were configured before the Flexible GTT Load Sharing feature was enabled are shown as MAPSET ID=DFLT after the Flexible GTT Load Sharing feature is enabled.

The **pc/pca/pci/pcn/pcn24**, **ssn**, and **mapset** parameters can be used to screen the output of all MAP sets. These parameters allow retrieval of only those MAP sets that contain the desired parameters. A MAP set can contain one primary entry and up to 31 mated entries.

If no parameters are entered, all defined mated point codes (up to 36,000) are shown.

If the Flexible Final GTT Loadsharing feature is not enabled, then the number of entries in the MAP table is based on unique point codes. Point codes that are duplicated in MRN sets using different SSNs are counted only once in the number of entries.

If the Flexible Final GTT Loadsharing feature is enabled, then the number of entries in the MAP table is based on unique point code and SSN combinations. Point codes that are duplicated in MRN sets are counted in the number of entries).

When the GTT LS ARI feature is enabled, the Alternate RI Mate, identified by the MRNSET and MRNPC fields, is displayed for all MAP Sets. When the GTT LS ARI feature is not enabled, the Alternate RI Mate is not displayed, and the display is unchanged.

Output

All subsystem numbers for the specified point code and its mates are shown.

The NET column is shown only when a MAP set contains mixed network point code types. Addition of the NET column realigns all remaining columns in the output. The re-alignment is constant even if the NET column is not shown.

The following example displays mixed ITU network types. The **chg-stpopts:npcfmti** parameter is defaulted to **14-0-0-0**, a one-part format.

rtrv-map

```
flexgttoff 08-12-09 12:05:28 EST EAGLE 40.1.0
  PCI      NET  Mate PC      SSN RC MULT SRM MRC GRP NAME SSO
  1-109-0
      I      1-110-0      90 20 COM NO NO ----- OFF
      N      00123      90 20 COM NO NO ----- OFF
      N      01234      90 30 COM NO NO ----- OFF

  PCN      Mate PCN      SSN RC MULT SRM MRC GRP NAME SSO
  12345
      12347      5 20 DOM NO NO ----- OFF
```

MAP table is (6 of 1024) 1% full.

The following example retrieves an ANSI MAP set for a specified point code.

rtrv-map:pc=2-2-2

```
flexgttoff 08-12-09 12:05:28 EST EAGLE 40.1.0
  PCA      Mate PCA      SSN RC MULT SRM MRC GRP NAME SSO
  002-002-002
      002-002-003      20 10 SHR --- --- ----- OFF
```

MAP table is (8 of 1024) 1% full.

The following example includes MAP sets with a Concerned Signaling Point Code group name and spare point codes, (prefix s-). The ITUDUPPC (ITU National Duplicate Point Code) feature is on, and the Flexible ITU National Point Code STP option is set to **4-4-3-3**.

rtrv-map

```
spareduppc 08-12-09 12:05:28 EST EAGLE 40.1.0
  PCA      Mate PCA      SSN RC MULT SRM MRC GRP NAME SSO
  002-002-002
      002-002-003      20 10 SHR --- --- ----- OFF

  PCA      Mate PCA      SSN RC MULT SRM MRC GRP NAME SSO
  003-101-001
      003-001-000      10 30 DOM YES YES abcdefg OFF
      003-001-000      10 40 DOM YES YES abcdefg OFF

  PCI      NET  Mate PC      SSN RC MULT SRM MRC GRP NAME SSO
  1-109-0
      I      1-110-0      90 20 COM NO NO ----- OFF
      N      00-01-7-3-aa 90 20 COM NO NO ----- OFF
      N      01-03-2-2-aa 90 30 COM NO NO ----- OFF

  PCN      Mate PCN      SSN RC MULT SRM MRC GRP NAME SSO
  03-00-1-2-aa
      s-09-14-5-3-ab 45 99 DOM NO NO ----- OFF

  PCN      Mate PCN      SSN RC MULT SRM MRC GRP NAME SSO
  12-00-7-1-aa
      12-00-7-3-aa      5 20 DOM NO NO ----- OFF
```


PCI	Mate PCI	SSN	RC	MULT	SRM	MRC	GRP	NAME	SSO
s-1-128-6		55	10	SOL	---	---	---	---	OFF

MAP table is (13 of 1024) 1% full.

The following example includes an Flexible ITU National Point Code STP option of 3-8-3-0.

rtrv-map

spareduppc 08-12-09 12:05:28 EST EAGLE 40.1.0

PCA	Mate PCA	SSN	RC	MULT	SRM	MRC	GRP	NAME	SSO
001-001-001		10	25	SHR	---	---	---	---	OFF
	001-001-004	20	25	SHR	---	---	---	---	OFF
PCA	Mate PCA	SSN	RC	MULT	SRM	MRC	GRP	NAME	SSO
001-001-002		55	5	DOM	YES	YES	---	---	OFF
	001-001-002	15	15	DOM	YES	YES	---	---	ON
	001-001-003	25	20	DOM	YES	YES	---	---	ON
	001-001-002	40	35	DOM	YES	YES	---	---	OFF
PCA	Mate PCA	SSN	RC	MULT	SRM	MRC	GRP	NAME	SSO
001-001-003		30	10	COM	NO	NO	---	---	OFF
	001-010-010	30	30	COM	NO	NO	---	---	OFF
	001-001-004	15	30	COM	YES	YES	---	---	OFF
PCA	Mate PCA	SSN	RC	MULT	SRM	MRC	GRP	NAME	SSO
001-001-004		5	25	SHR	---	---	---	---	OFF
	001-001-001	50	25	SHR	---	---	---	---	OFF
PCA	Mate PCA	SSN	RC	MULT	SRM	MRC	GRP	NAME	SSO
001-001-004		25	10	DOM	YES	YES	---	---	OFF
	001-001-004	10	15	DOM	YES	YES	---	---	OFF
PCA	Mate PCA	SSN	RC	MULT	SRM	MRC	GRP	NAME	SSO
001-102-001		110	5	SHR	---	---	---	---	OFF
	002-001-000	110	5	SHR	---	---	---	---	OFF
	003-001-000	110	5	SHR	---	---	---	---	OFF
PCA	Mate PCA	SSN	RC	MULT	SRM	MRC	GRP	NAME	SSO
002-001-000		10	20	SOL	---	---	---	---	OFF
PCA	Mate PCA	SSN	RC	MULT	SRM	MRC	GRP	NAME	SSO
002-002-002		10	10	SHR	---	---	---	---	OFF
	002-002-003	20	10	SHR	---	---	---	---	OFF
PCA	Mate PCA	SSN	RC	MULT	SRM	MRC	GRP	NAME	SSO
003-101-001		10	30	DOM	YES	YES	abcdefg	---	OFF
	003-001-000	10	40	DOM	YES	YES	abcdefg	---	OFF
PCA	Mate PCA	SSN	RC	MULT	SRM	MRC	GRP	NAME	SSO
007-101-001		254	10	SOL	---	---	---	---	OFF
PCA	Mate PCA	SSN	RC	MULT	SRM	MRC	GRP	NAME	SSO
007-101-001		255	10	COM	YES	YES	---	---	OFF
	007-001-000	251	10	COM	YES	YES	---	---	OFF
	007-001-000	249	10	COM	YES	YES	---	---	OFF
	007-001-000	253	15	COM	YES	YES	---	---	OFF
PCI	Mate PCI	SSN	RC	MULT	SRM	MRC	GRP	NAME	SSO
1-101-0		10	10	SHR	---	---	---	---	OFF
	1-102-0	10	10	SHR	---	---	---	---	OFF
	1-103-0	30	10	SHR	---	---	---	---	OFF
	1-104-0	40	10	SHR	---	---	---	---	OFF
	1-105-0	50	10	SHR	---	---	---	---	OFF
	1-106-0	60	10	SHR	---	---	---	---	OFF
	1-107-0	70	10	SHR	---	---	---	---	OFF

```

          1-108-0          80 10  SHR --- --- ----- OFF
PCI      NET  Mate PC      SSN RC  MULT SRM MRC GRP NAME SSO
1-109-0   I    1-110-0      90 10  COM NO  NO  ----- OFF
          N    0-015-3-aa   90 20  COM NO  NO  ----- OFF
          N    0-154-2-aa   90 30  COM NO  NO  ----- OFF

PCN      Mate PCN      SSN RC  MULT SRM MRC GRP NAME SSO
1-129-2-aa      55 10  DOM NO  NO  ----- OFF
          s-4-245-3-ab   45 99  DOM NO  NO  ----- OFF

PCN      Mate PCN      SSN RC  MULT SRM MRC GRP NAME SSO
6-007-1-aa      5 10  DOM NO  NO  ----- OFF
          6-007-3-aa    5 20  DOM NO  NO  ----- OFF

PCI      Mate PCI      SSN RC  MULT SRM MRC GRP NAME SSO
s-1-128-6      55 10  SOL --- --- ----- OFF

```

MAP table is (30 of 1024) 3% full.

The following example shows retrieval of all MAP sets containing a specified ANSI point code.

rtrv-map:pca=1-1-4

```

spareduppc 08-12-09 12:05:28 EST  EAGLE 40.1.0
PCA      Mate PCA      SSN RC  MULT SRM MRC GRP NAME SSO
001-001-004      5 25  SHR --- --- ----- OFF
          001-001-001   50 25  SHR --- --- ----- OFF

PCA      Mate PCA      SSN RC  MULT SRM MRC GRP NAME SSO
001-001-004      10 15  DOM YES YES ----- OFF
          001-001-004   25 10  DOM YES YES ----- OFF

PCA      Mate PCA      SSN RC  MULT SRM MRC GRP NAME SSO
001-001-003      15 30  COM YES YES ----- OFF
          001-001-004   30 10  COM NO  NO  ----- OFF
          001-010-010   30 30  COM NO  NO  ----- OFF

PCA      Mate PCA      SSN RC  MULT SRM MRC GRP NAME SSO
001-001-001      20 25  SHR --- --- ----- OFF
          001-001-004   10 25  SHR --- --- ----- OFF

PCA      Mate PCA      SSN RC  MULT SRM MRC GRP NAME SSO
001-001-004      25 10  DOM YES YES ----- OFF
          001-001-004   10 15  DOM YES YES ----- OFF

```

MAP table is (30 of 1024) 3% full.

The following example shows retrieval of a unique ANSI point code and SSN combination.

rtrv-map:pca=1-1-4:ssn=15

```

spareduppc 08-12-09 12:05:28 EST  EAGLE 40.1.0
PCA      Mate PCA      SSN RC  MULT SRM MRC GRP NAME SSO
001-001-004      15 30  COM YES YES ----- OFF
001-001-003      30 10  COM NO  NO  ----- OFF
          001-010-010   30 30  COM NO  NO  ----- OFF

```

MAP table is (30 of 1024) 3% full.

The following example shows output when the Flexible Final GTT Loadsharing feature is enabled.

rtrv-map:mapset=2

```

flexgtton 08-12-09 12:05:28 EST  EAGLE 40.1.0

MAPSET ID=2
PCA      Mate PCA      SSN RC  MULT SRM MRC GRP NAME SSO

```

001-001-002		50	5	DOM	YES	YES	-----	OFF
	001-001-002	10	15	DOM	YES	YES	-----	ON
	001-001-003	20	20	DOM	YES	YES	-----	ON
	001-001-002	40	35	DOM	YES	YES	-----	OFF

MAP table is (49 of 36000) 1% full.

rtrv-map:mapset=dflt:pcn=s-10155-ab

flexgton 08-12-10 12:01:04 EST EAGLE 40.1.0

MAPSET ID=DFLT													
PCN	Mate PCN	SSN	RC	MULT	SRM	MRC	GRP	NAME	SSO				
03082-aa		55	10	DOM	NO	NO		-----	OFF				
	s-10155-ab	45	99	DOM	NO	NO		-----	OFF				

MAP table is (49 of 36000) 1% full.

The following example shows output when the Weighted GTT Loadsharing feature is enabled, and the Flexible Final GTT Loadsharing feature is not enabled.

rtrv-map:pci=1-110-0

wgtonflxoff 08-12-10 12:03:44 EST EAGLE 40.1.0

PCI	NET	Mate PC	SSN	RC	MULT	SRM	MRC	GRP	NAME	SSO	WT	%WT	THR
1-110-0			90	20	COM	NO	NO	-----	OFF	10	20	60	
	I	1-109-0	90	20	COM	NO	NO	-----	OFF	20	40	60	
	N	00123	90	20	COM	NO	NO	-----	OFF	20	40	60	
	N	01234	90	30	COM	NO	NO	-----	OFF	30	100	60	

MAP table is (14 of 1024) 1% full.

The following example shows a Flexible ITU National Point Code STP option of 3-8-3-0. The Weighted GTT Loadsharing and Flexible Final GTT Loadsharing features are enabled.

rtrv-map:pcn=6-7-1

npcfnti3830 08-12-10 12:03:44 EST EAGLE 40.1.0

MAPSET ID=DFLT													
PCN	Mate PCN	SSN	RC	MULT	SRM	MRC	GRP	NAME	SSO	WT	%WT	THR	
6-007-1		5	10	DOM	NO	NO		-----	OFF	--	---	---	
	6-007-3	5	20	DOM	NO	NO		-----	OFF	--	---	---	

MAP table is (19 of 36000) 1% full.

The following example shows a PCN24 point code. The Weighted GTT Loadsharing and Flexible Final GTT Loadsharing features are not enabled.

rtrv-map

wggtgflxoff 08-12-10 15:00:37 EST EAGLE 40.1.0

PCA	Mate PCA	SSN	RC	MULT	SRM	MRC	GRP	NAME	SSO
001-001-001		10	10	SHR	---	---	-----	ON	
	001-001-002	20	10	SHR	---	---	-----	OFF	

PCI	Mate PCI	SSN	RC	MULT	SRM	MRC	GRP	NAME	SSO
1-101-0		10	10	SHR	---	---	-----	OFF	
	1-102-0	10	10	SHR	---	---	-----	OFF	

PCN24	Mate PCN24	SSN	RC	MULT	SRM	MRC	GRP	NAME	SSO
000-000-001		5	30	SHR	---	---	-----	OFF	
	000-001-002	5	30	SHR	---	---	-----	OFF	

MAP table is (6 of 1024) 1% full.

The following example shows weighted MAP sets.

rtrv-map

wgtonflxoff 08-12-08 15:00:37 EST EAGLE 40.1.0

PCA	Mate PCA	SSN	RC	MULT	SRM	MRC	GRP	NAME	SSO	WT	%WT	THR
001-001-001		10	10	SHR	---	---	-----	ON	20	67	50	
	001-001-002	20	10	SHR	---	---	-----	OFF	10	33	50	

PCI	Mate PCI	SSN	RC	MULT	SRM	MRC	GRP	NAME	SSO	WT	%WT	THR
1-101-0		10	10	SHR	---	---	---	---	OFF	10	33	1
	1-102-0	10	10	SHR	---	---	---	---	OFF	20	67	1
PCN24	Mate PCN24	SSN	RC	MULT	SRM	MRC	GRP	NAME	SSO	WT	%WT	THR
000-000-001		5	30	SHR	---	---	---	---	OFF	50	91	80
	000-001-002	5	30	SHR	---	---	---	---	OFF	5	9	80

MAP table is (6 of 1024) 1% full.

The following example shows output when the Flexible Final GTT Loadsharing feature is enabled.

rtrv-map:pcn24=0-1-2

wgtonflxoff 08-12-10 15:00:37 EST EAGLE 40.1.0

MAPSET ID=DFLT												
PCN24	Mate PCN24	SSN	RC	MULT	SRM	MRC	GRP	NAME	SSO	WT	%WT	THR
000-000-001		5	30	SHR	---	---	---	---	OFF	50	91	80
	000-001-002	5	30	SHR	---	---	---	---	OFF	5	9	80

MAP table is (6 of 36000) 1% full.

The following example shows output when the Flexible GTT Load Sharing and GTT LS ARI features are enabled. The Weighted GTT Load Sharing feature is turned off.

rtrv-map

tekelecstp 08-12-22 13:36:31 EST EAGLE 40.1.0

MAPSET ID=DFLT	MRNSET ID=----	MRNPC=-----										
PCI	Mate PCI	SSN	RC	MULT	SRM	MRC	GRP	NAME	SSO			
1-101-1		11	10	SHR	---	---	---	itugrp	OFF			
	1-101-2	12	10	SHR	---	---	---	itugrp	OFF			
MAPSET ID=1	MRNSET ID=----	MRNPC=-----										
PCN	Mate PCN	SSN	RC	MULT	SRM	MRC	GRP	NAME	SSO			
s-02001		21	10	SHR	---	---	---	---	OFF			
	s-02002	22	10	SHR	---	---	---	---	OFF			

MAP table is (4 of 36000) 1% full.

;

The following example shows output when the Flexible GTT Load Sharing and GTT LS ARI features are enabled, and ARI Mates are provisioned. The Weighted GTT Load Sharing feature is turned off.

rtrv-map

tekelecstp 08-12-22 13:36:31 EST EAGLE 40.1.0

MAPSET ID=DFLT	MRNSET ID=DFLT	MRNPC=										
PCA	Mate PCA	SSN	RC	MULT	SRM	MRC	GRP	NAME	SSO			
001-001-001		11	10	SHR	---	---	---	---	OFF			
	001-001-002	12	10	SHR	---	---	---	---	OFF			
MAPSET ID=2	MRNSET ID=DFLT	MRNPC=										
PCA	Mate PCA	SSN	RC	MULT	SRM	MRC	GRP	NAME	SSO			
001-001-005		11	20	SHR	---	---	---	---	OFF			
	001-001-006	10	20	SHR	---	---	---	---	OFF			
MAPSET ID=DFLT	MRNSET ID=----	MRNPC=-----										
PCI	Mate PCI	SSN	RC	MULT	SRM	MRC	GRP	NAME	SSO			
1-101-1		11	10	SHR	---	---	---	itugrp	OFF			
	1-101-2	12	10	SHR	---	---	---	itugrp	OFF			
MAPSET ID=5	MRNSET ID=DFLT	MRNPC=										
PCI	NET	Mate PC	SSN	RC	MULT	SRM	MRC	GRP	NAME	SSO		
1-101-1			11	10	SHR	---	---	---	itugrp	OFF		
	I	s-2-202-1	12	10	SHR	---	---	---	---	OFF		
	N	01002	12	10	SHR	---	---	---	---	OFF		

```

MAPSET ID=3      MRNSET ID=1      MRNPC= 01003
PCN              Mate PCN          SSN RC MULT SRM MRC GRP NAME SSO
01001            01002            11 10 SHR --- --- ----- OFF
                                12 10 SHR --- --- ----- OFF

MAPSET ID=4      MRNSET ID=2      MRNPC= s-2-202-3
PCI              Mate PCI          SSN RC MULT SRM MRC GRP NAME SSO
s-2-202-1        s-2-202-2        21 10 SHR --- --- ----- OFF
                                22 10 SHR --- --- ----- OFF

MAPSET ID=1      MRNSET ID=----- MRNPC=-----
PCN              Mate PCN          SSN RC MULT SRM MRC GRP NAME SSO
s-02001          s-02002          21 10 SHR --- --- ----- OFF
                                22 10 SHR --- --- ----- OFF

```

MAP table is (15 of 36000) 1% full.

;

The following example shows output when data is retrieved for a specific point code. The Flexible GTT Load Sharing and GTT LS ARI features are enabled, and the Weighted GTT Load Sharing feature is turned off.

rtrv-map:pcn=1001

eaglestp 08-12-22 18:41:14 EST EAGLE 40.1.0

```

MAPSET ID=3      MRNSET ID=1      MRNPC= 01003
PCN              Mate PCN          SSN RC MULT SRM MRC GRP NAME SSO
01001            01002            11 10 SHR --- --- ----- OFF
                                12 10 SHR --- --- ----- OFF

```

MAP table is (15 of 36000) 1% full.

;

The following example shows output when data is requested for a specific point code and subsystem number. The Flexible GTT Load Sharing and GTT LS ARI features are enabled. The Weighted GTT Load Sharing feature is turned off.

rtrv-map:pcn=1002:ssn=12

eaglestp 08-12-22 18:41:20 EST EAGLE 40.1.0

```

MAPSET ID=3      MRNSET ID=1      MRNPC= 01003
PCN              Mate PCN          SSN RC MULT SRM MRC GRP NAME SSO
01001            01002            11 10 SHR --- --- ----- OFF
                                12 10 SHR --- --- ----- OFF

MAPSET ID=5      MRNSET ID=DFLT    MRNPC= 1-101-3
PCN              NET Mate PC       SSN RC MULT SRM MRC GRP NAME SSO
1-101-1          I s-2-202-1       11 10 SHR --- --- itugrp OFF
                  N 01002         12 10 SHR --- --- ----- OFF

```

MAP table is (15 of 36000) 1% full.

;

The following example shows output when the Flexible GTT Load Sharing and GTT LS ARI features are enabled, and the Weighted GTT Load Sharing feature is turned on.

rtrv-map

eaglestp 08-12-22 18:43:29 EST EAGLE 40.1.0

```

MAPSET ID=DFLT   MRNSET ID=DFLT   MRNPC= 001-001-004
PCA              Mate PCA          SSN RC MULT SRM MRC GRP NAME SSO WT %WT THR
001-001-001     001-001-002      11 10 SHR --- --- ----- OFF -- --- ---
                                12 10 SHR --- --- ----- OFF -- --- ---

```

```

MAPSET ID=2      MRNSET ID=DFLT  MRNPC= 001-001-003
PCA             Mate PCA          SSN RC MULT SRM MRC GRP NAME SSO WT %WT THR
001-001-005      001-001-006      11 20 SHR --- --- ----- OFF 20 67 50
                                10 20 SHR --- --- ----- OFF 10 33 50

MAPSET ID=DFLT   MRNSET ID=----  MRNPC=-----
PCI             Mate PCI          SSN RC MULT SRM MRC GRP NAME SSO WT %WT THR
1-101-1          1-101-2          11 10 SHR --- --- itugrp  OFF -- -- --
                                12 10 SHR --- --- itugrp  OFF -- -- --

MAPSET ID=5      MRNSET ID=DFLT  MRNPC= 1-101-3
PCI             NET  Mate PC      SSN RC MULT SRM MRC GRP NAME SSO WT %WT THR
1-101-1          I   s-2-202-1     11 10 SHR --- --- itugrp  OFF 30 33 1
                   N   01002       12 10 SHR --- --- ----- OFF 30 33 1

MAPSET ID=3      MRNSET ID=1      MRNPC= 01003
PCN             Mate PCN          SSN RC MULT SRM MRC GRP NAME SSO WT %WT THR
01001           01002           11 10 SHR --- --- ----- OFF 40 67 1
                                12 10 SHR --- --- ----- OFF 20 33 1

MAPSET ID=4      MRNSET ID=2      MRNPC= s-2-202-3
PCI             Mate PCI          SSN RC MULT SRM MRC GRP NAME SSO WT %WT THR
s-2-202-1       s-2-202-2       21 10 SHR --- --- ----- OFF -- -- --
                                22 10 SHR --- --- ----- OFF -- -- --

MAPSET ID=1      MRNSET ID=----  MRNPC=-----
PCN             Mate PCN          SSN RC MULT SRM MRC GRP NAME SSO WT %WT THR
s-02001         s-02002         21 10 SHR --- --- ----- OFF -- -- --
                                22 10 SHR --- --- ----- OFF -- -- --

```

MAP table is (15 of 36000) 1% full.

;

The following example shows output when information is retrieved for a specific point code. The Flexible GTT Load Sharing and GTT LS ARI features are enabled, and the Weighted GTT Load Sharing feature is turned on.

rtrv-map:pcn=1001

eaglestp 08-12-22 18:43:34 EST EAGLE 40.1.0

```

MAPSET ID=3      MRNSET ID=1      MRNPC= 01003
PCN             Mate PCN          SSN RC MULT SRM MRC GRP NAME SSO WT %WT THR
01001           01002           11 10 SHR --- --- ----- OFF 40 67 1
                                12 10 SHR --- --- ----- OFF 20 33 1

```

MAP table is (15 of 36000) 1% full.

;

The following example shows output when information is retrieved for a specific point code and subsystem number. The Flexible GTT Load Sharing and GTT LS ARI features are enabled, and the Weighted GTT Load Sharing feature is turned on.

rtrv-map:pcn=1002:ssn=12

eaglestp 08-12-22 18:43:39 EST EAGLE 40.1.0

```

MAPSET ID=3      MRNSET ID=1      MRNPC= 01003
PCN             Mate PCN          SSN RC MULT SRM MRC GRP NAME SSO WT %WT THR
01001           01002           11 10 SHR --- --- ----- OFF 40 67 1
                                12 10 SHR --- --- ----- OFF 20 33 1

MAPSET ID=5      MRNSET ID=DFLT  MRNPC= 1-101-3
PCN             NET  Mate PC      SSN RC MULT SRM MRC GRP NAME SSO WT %WT THR
1-101-1          1-101-1          11 10 SHR --- --- itugrp  OFF 30 33 1

```

```

      I  s-2-202-1      12 10  SHR --- --- ----- OFF 30  33  1
      N    01002        12 10  SHR --- --- ----- OFF 30  33  1

```

MAP table is (15 of 36000) 1% full.

;

Legend

MAPSET ID—This field specifies the MAP set number or DFLT when numbered MAP sets are allowed.

PCA/PCI/PCN/PCN24—This field identifies the point code of the SCP where the primary application resides.

NET—This field identifies the mate network type of the point code when an ITU MAP set contains both ITU-I and ITU-N point codes. The field can show I if the MATE PC is an ITU-I point code or N if the MATE PC is an ITU-N point code.

MATE PC/PCA/PCI/PCN/PCN24—This field identifies the point code of the SCP where the mate application resides.

SSN—This field identifies the applications subsystem number.

RC—This field identifies the relative cost of the point code/subsystem.

MUL—Multiplicity mode (Solitary, Loadsharing, Dominant, Combined) See the "Notes" section in the **chg-map** command description for an explanation of multiplicity modes.

MPC—This field identifies the multiplicity mode when the Flexible GTT Loadsharing feature or the Weighted GTT Loadsharing feature are on. The field can show SOL (Solitary), SHR (Load sharing), COM (Combined Load Sharing and Dominant), or DOM (Dominant). See the **ent-map** command "Notes" section for a definition of the multiplicity modes.

SRM—This field specifies whether subsystem routing messages are transmitted.

MRC—This field specifies whether message routing under congestion is on (YES) or off (NO).

GRP NAME—This field identifies the name of a group of point codes (the broadcast list group name) that should be notified of the subsystem status.

SSO—Subsystem Status Option. Indicates the subsystem status (ON=prohibited or OFF=allowed) for PC/SSN MAP entries.

WT—This field specifies the weight assigned to the PC.

%WT—This field specifies the relative percentage, according to weight, of an in-service PC within an RC group.

THR—This field specifies the service threshold. If the relative percentage, according to weight, of in-service PCs within an RC group falls below the in-service threshold, that RC group is considered out-of-service and traffic is routed to the next lowest RC group.

MRNSET —This field specifies the Alternate RI Mate MRN Set ID.

MRNPC —This field specifies the Alternate RI Mate point code.

rtrv-meas-sched

Retrieve Measurements Schedule

Use this command to retrieve the list of measurement reports currently scheduled to be dumped to the UI, and the collection settings for EOAM based measurements.

NOTE: This command provides no information on Measurements Platform (MCP) scheduled FTP reports or on the status of MCP measurements (see rtrv-measopts).

NOTE: Refer to the *Maintenance Manual* for specific details on measurement reports.

Keyword: rtrv-meas-sched

Related Commands: chg-meas, rept-meas, rtrv-measopts

Command Class: Link Maintenance

Parameters

This command has no parameters.

Example

rtrv-meas-sched

Dependencies

None

Notes

None

Output

Output with measurement collection on.

rtrv-meas-sched

```
rlghncxa03w 04-02-27 07:19:51 EST EAGLE 31.3.0
COLLECT      = on
GTWYLSFLTR   = both
-----
SYSTOT-STP   = on
SYSTOT-TT    = off
SYSTOT-STPLAN = off
COMP-LNKSET  = on
COMP-LINK    = on
GTWY-STP     = on
GTWY-LNKSET  = on
MTCD-STP     = on
MTCD-LINK    = on
MTCD-STPLAN  = on
MTCD-LNKSET  = on
;
```

Output with measurement collection off. The parentheses () indicate that a setting is not in effect because collection is turned off.

rtrv-meas-sched

```
rlghncxa03w 04-02-27 07:19:51 EST EAGLE 31.3.0
COLLECT      = off
GTWYLSFLTR   = (both)
-----
SYSTOT-STP   = (off)
SYSTOT-TT    = (off)
SYSTOT-STPLAN = (off)
COMP-LNKSET  = (off)
COMP-LINK    = (off)
GTWY-STP     = (off)
GTWY-LNKSET  = (off)
MTCD-STP     = (on)
MTCD-LINK    = (on)
MTCD-STPLAN  = (on)
MTCD-LNKSET  = (on)
;
```

Legend

COLLECT—Shows whether measurement collection is on or off.

GTWYLSFLTR—Shows the setting that filters the linksets included in the GTWY report. The settings are as follows:

both—Only gateway linksets are included in the report to the terminal and SEAS.

stp—Only gateway linksets are included in the report to the terminal. All defined linksets are included in the report to SEAS.

seas—All defined linksets are included in the report to the terminal. Only gateway linksets are included in the report to SEAS.

none—All defined linksets are included in the report to the terminal and SEAS.

SYSTOT-STP—System total–STP measurement collection is on or off.

SYSTOT-TT—System total–translation type measurement collection is on or off.

SYSTOT-STPLAN—System total–STP LAN measurement collection is on or off.

COMP-LNKSET—Component-linkset measurement collection is on or off.

COMP-LINK—Component-link measurement collection is on or off.

GTWY-STP—Gateway administration-STP measurement report is on or off.

GTWY-LNKSET—Gateway administration-LNKSET measurement report is on or off.

MTCD-STP—Maintenance daily-STP measurement collection is on or off.

MTCD-LINK—Maintenance daily-link measurement collection is on or off.

MTCD-STPLAN—Maintenance daily-STP LAN measurement collection is on or off.

MTCD-LNKSET—Maintenance daily-LNKSET measurement report is on or off.

rtrv-measopts

Retrieve Measurement Options

Use this command for the following functions:

- Show the enabled/disabled status of all FTP scheduled measurements reports
- Verify that the Measurements Platform has been enabled (PLATFORMENABLE setting)
- Verify that the 15 Minute Measurements collection option has been turned on (COLLECT15MIN setting)
- Verify that the CLI-based report file name option is turned on or off (CLLIBASEDNAME setting)

Keyword: rtrv-measopts

Related Commands: chg-measopts, chg-mtc-measopts, rtrv-mtc-measopts

Command Class: Link Maintenance

Parameters

This command has no parameters.

Example

```
rtrv-measopts
```

Dependencies

The Measurements Platform feature must be on before this command can be entered.

This command cannot be entered while in upgrade mode.

Notes

None

Output

rtrv-measopts

rlghncxa03w 08-02-07 00:57:31 EST EAGLE 38.0.0

PLATFORMENABLE	= on
COLLECT15MIN	= off
CLLIBASEDNAME	= on

SYSTOTSTP	= on
SYSTOTTT	= off
SYSTOTSTPLAN	= on
COMPLINK	= off
COMPLNKSET	= on
COMPSCTPASOC	= on
COMPSCTPCARD	= off
COMPUA	= off
GTWYSTP	= on
GTWYLNKSET	= on
GTWYORIGNI	= on
GTWYORIGNINC	= on
GTWYLSORIGNI	= on
GTWYLSDESTNI	= off
GTWYLSONISMT	= off
MTCHLNP	= on
MTCHNP	= off
MTCHMAP	= off
MTCHEIR	= off
MTCNSTP	= on
MTCNLINK	= off
MTCNLNKSET	= off
MTCNSTPASOC	= off
MTCNSTPCARD	= on
MTCNDA	= off
MTCNSTPLAN	= on
MTCNLNP	= on
MTCNPN	= on
MTCNMAP	= on
MTCNDEIR	= on
NMSTP	= on
NMLINK	= on
NMLNKSET	= on
AVLLINK	= on
AVLSTPLAN	= on
AVLDLINK	= on

;

Legend

PLATFORMENABLE—Indicator that measurements collection is enabled or disabled when the Measurements Platform feature is turned on. See the **chg-measopts** command.

COLLECT15MIN—Indicator that 15 Minute Measurements collection is enabled or disabled when the 15 Minute Measurements feature is turned on. See the **chg-measopts** command **collect15min** parameter.

CLLIBASEDNAME—Indicator that the CLLI-based file name option is turned on or off.

SYSTOTSTP—System Total measurements report for the entire STP.

SYSTOTTT—System Total report for Translation Type measurements.

SYSTOTSTPLAN—System Total report STP LAN measurements.

COMPLINK—Component measurements report for links.

COMPLNKSET—Component measurements report for link sets.

COMPSCTPASOC—Component measurements report for SCTP associations.

COMPSCTPCARD—Component measurements report for SCTP cards.

COMPUA—Component measurements report for M3UA and SUA application server/association pairs.

GTWYORIGNI—Gateway Administration measurements report per originating network (large network uniquely identified by NI only).

GTWYORIGNINC—Gateway Administration measurements report per originating network (small network identified by NI-NC).

GTWYLSORIGNI—Gateway Administration measurements report per link set and originating network.

GTWYLSDESTNI—Gateway Administration measurements report per link set and destination network.

GTWYLSONISMT—Gateway Administration measurements report per link set, per originating network, per ISUP message type.

MTCHEIR—Maintenance Hourly (marginal) measurements report for Equipment Identity Register

MTCHNP—Maintenance Hourly (marginal) measurements report for INP or G-Port.

MTCHLNP—Maintenance Hourly (marginal) measurements report for LNP.

MTCHMAP—Maintenance Hourly (marginal) measurements report for GSM Map Screening.

MTCDEIR—Maintenance Daily measurements report for Equipment Identity Register

MTCDSTP—Maintenance Daily measurements report for STP.

MTCDLNK—Maintenance Daily measurements report for links.

MTCDLNKSET—Maintenance Daily measurements report for linksets.

MTCDSCTPASOC—Maintenance Daily measurements report for SCTP associations.

MTCDSCTPCARD—Maintenance Daily measurements report for SCTP cards.

MTCDUA—Maintenance Daily measurements report for M3UA and SUA application server/association pairs.

MTCDSTPLAN—Maintenance Daily measurements report for STPLAN.

MTCDLNP—Maintenance Daily measurements report for LNP.

MTCDNP—Maintenance Daily measurements report for INP or G-Port.

MTCDMAP—Maintenance Daily measurements report for GSM Map Screening.

NMLINK—Network Management measurements report for links.

NMLNKSET—Network Management measurements report for link sets.

NMSTP—Network Management measurements report for the entire STP.

AVLINK—Hourly Availability report for links.

AVLSTPLAN—Hourly Availability report for STP LAN.

AVLDLINK—Daily Availability report for links.

rtrv-mrn**Retrieve Mated Relay Node**

Use this command to display the Mated Relay Node application relationship information maintained by the EAGLE 5 ISS. This information is used to support the routing of SCCP management SSP/SSA messages.

If the Intermediate GTT Load-Sharing feature is on and the Flexible GTT Load-Sharing feature is enabled, then use this command to retrieve MRN set information.

If the GTT Load Sharing with Alternate Routing Indicator (GTT LS ARI) feature is enabled, then use this command to display Alternate RI Mate information.

Keyword: rtrv-mrn

Related Commands: chg-mrn, dlt-mrn, ent-mrn

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:mrnset= (optional)

The MRN set ID.

Range: 1-3000 dflt

dflt—Default MRN set

:pc= (optional)

ANSI point code in the form of *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: pca

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001–005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006–255.

The point code 000-000-000 is not a valid point code.

:pc/pca/pci/pcn/pcn24= (optional)

Post-GTT-translated point code.

:pci= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

:pcn= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npclfnti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: s-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:pcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000-255

ssa—000-255

sp—000-255

Example

rtrv-mrn

rtrv-mrn:pc=1-1-2

rtrv-mrn:pci=s-2-2-1

rtrv-mrn:pcn=s-1-1-1-123-aa

rtrv-mrn:pci=1-55-1:mrnset=2

Dependencies

A point code that is specified in the command must already exist in the MRN table.

The **mrnset** parameter can only be specified when the Flexible GTT Load-Sharing feature is enabled.

If the Flexible GTT Load Sharing feature is ON, then the PC and MRN set must be specified together.

The specified MRN set must already exist in the MRN table.

If the Flexible GTT Load Sharing feature is enabled, then the specified PC must already exist in the specified MRN set.

The Intermediate Global Title Translation Load Sharing (IGTTLS) feature must be turned on before this command can be entered.

Notes

This command can be canceled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-).

If any entries are provisioned in the SCCP-SERV table, then the maximum number of entries shown for the MRN table are reduced by that amount.

When the GTT LS ARI feature is enabled, the Alternate RI Mate, identified by the MAPSET, MAPPC, and MAPSSN fields, is displayed for all MRN Sets. When the GTT LS ARI feature is not enabled, the Alternate RI Mate is not displayed, and the display is unchanged.

Output

The NET column is shown only when an MRN set contains mixed network point code types. Addition of the NET column realigns all remaining columns in the output. The re-alignment is constant even if the NET column is not shown.

rtrv-mrn

```
spareduppc 08-12-13 11:35:12 EST EAGLE 40.1.0
```

PC	RC
001-001-000	5
001-001-001	10
001-001-002	20
001-001-003	30
001-001-004	40

PC	RC
001-002-001	20
001-001-007	25
001-001-008	30
001-003-002	30

PCI	RC
s-2-100-1	10
s-2-002-1	10
s-2-002-2	10

PCN	RC
s-1-1-1-0123-aa	1
s-1-1-1-0235-aa	2
s-1-1-1-0555-aa	3

MRN table is (15 of 3000) 1% full.

rtrv-mrn:pc=1-1-2

```
spareduppc 08-12-13 11:35:12 EST EAGLE 40.1.0
```

PC	RC
001-001-000	5
001-001-001	10
001-001-002	20
001-001-003	30
001-001-004	40

MRN table is (15 of 3000) 1% full.

rtrv-mrn:pci=s-2-2-1

```
spareduppc 08-12-13 11:35:12 EST EAGLE 40.1.0
```

PCI	RC
s-2-100-1	10
s-2-002-1	10
s-2-002-2	10

MRN table is (15 of 3000) 1% full.

rtrv-mrn:pcn=s-1-1-1-123-aa

```
spareduppc 08-12-13 11:35:12 EST EAGLE 40.1.0
```

PCN	RC
s-1-1-1-0123-aa	1
s-1-1-1-0235-aa	2
s-1-1-1-0555-aa	3

MRN table is (15 of 3000) 1% full.

The following example shows output when the Weighted GTT Load Sharing feature is on, and weights are added to an existing MRN set.

rtrv-mrn:pci=s-2-2-2

weighton 08-12-13 11:35:12 EST EAGLE 40.1.0

PCI	RC	WT	%WT	THR
s-2-002-1	10	5	17	50
s-2-002-2	10	10	33	50
s-2-100-1	10	15	50	50

MRN table is (15 of 3000) 1% full.

The following example shows output when the Flexible Final GTT Load Sharing feature is enabled, and the first new ANSI MRN set is added.

rtrv-mrn

gflexon 08-12-13 11:35:12 EST EAGLE 40.1.0

MRNSET	PC	RC	WT	%WT	THR
DFLT	001-001-000	5	--	---	---
	001-001-001	10	--	---	---
	001-001-002	20	--	---	---
	001-001-003	30	--	---	---
	001-001-004	40	--	---	---

MRNSET	PC	RC	WT	%WT	THR
DFLT	001-002-001	20	--	---	---
	001-001-007	25	--	---	---
	001-001-008	30	--	---	---
	001-003-002	30	--	---	---

MRNSET	PCI	RC	WT	%WT	THR
DFLT	s-2-100-1	10	15	50	50
	s-2-002-1	10	5	17	50
	s-2-002-2	10	10	33	50

MRNSET	PCN	RC	WT	%WT	THR
DFLT	s-1-1-1-0123-aa	1	--	---	---
	s-1-1-1-0235-aa	2	--	---	---
	s-1-1-1-0555-aa	3	--	---	---

MRNSET	PC	RC	WT	%WT	THR
1	001-003-001	10	--	---	---
	001-003-002	10	--	---	---
	001-003-003	30	--	---	---
	001-003-004	30	--	---	---
	001-003-006	60	--	---	---
	001-003-007	60	--	---	---
	001-003-008	80	--	---	---
	001-003-009	80	--	---	---

MRN table is (23 of 6000) 1% full.

The following example shows the output when a mixed ITU network weighted MRN set is used.

rtrv-mrn:pci=1-55-1:mrnset=2

gflexon 08-12-13 11:35:12 EST EAGLE 40.1.0

MRNSET	NET	PC	RC	WT	%WT	THR
2	N	s-1-1-1-0235-aa	30	20	20	1
	I	1-055-1	30	20	20	1
	I	s-2-002-1	30	20	20	1
	I	s-2-002-2	30	20	20	1
	N	1-1-1-0444-bb	30	20	20	1

MRN table is (28 of 6000) 1% full.

The following example shows output when the Flexible GTT Loadsharing and GTT LS ARI features are enabled, and the Weighted GTT Loadsharing feature is not turned on.

rtrv-mrn

eaglestp 08-12-22 19:03:49 EST EAGLE 40.1.0

MRNSET	MAPSET	MAPPCN	MAPSSN	PCN	RC
DFLT	DFLT	01003	10	01002	10
				01001	10
MRNSET	MAPSET	MAPPC	MAPSSN	PC	RC
1	-----	-----	---	001-001-002	10
				001-001-001	10
MRNSET	MAPSET	MAPPCI	MAPSSN	PCI	RC
2	1	1-101-3	10	1-101-2	10
				1-101-1	10
MRNSET	MAPSET	MAPPCI	MAPSSN	PCI	RC
3	2	s-2-202-3	*	s-2-202-2	10
				s-2-202-1	10
MRNSET	MAPSET	MAPPCN	MAPSSN	PCN	RC
4	DFLT	s-02003	*	s-02002	20
				s-02001	20
MRNSET	MAPSET	MAPPCN	MAPSSN	NET	PC
5	DFLT	01004	20	I	1-101-1
			N		01001
			I		s-2-202-1

MRN table is (13 of 6000) 1% full.

;

The following example shows output when the Flexible GTT Loadsharing and GTT LS ARI features are enabled, and the Weighted GTT LS feature is turned on.

rtrv-mrn

eaglestp 08-12-22 19:04:42 EST EAGLE 40.1.0

MRNSET	MAPSET	MAPPCN	MAPSSN	PCN	RC	WT	%WT	THR
DFLT	DFLT	01003	10	01002	10	5	50	1
				01001	10	5	50	1
MRNSET	MAPSET	MAPPC	MAPSSN	PC	RC	WT	%WT	THR
1	-----	-----	---	001-001-002	10	20	67	20
				001-001-001	10	10	33	20
MRNSET	MAPSET	MAPPCI	MAPSSN	PCI	RC	WT	%WT	THR
2	1	1-101-3	10	1-101-2	10	40	57	1
				1-101-1	10	30	43	1
MRNSET	MAPSET	MAPPCI	MAPSSN	PCI	RC	WT	%WT	THR
3	2	s-2-202-3	*	s-2-202-2	10	50	50	1
				s-2-202-1	10	50	50	1
MRNSET	MAPSET	MAPPCN	MAPSSN	PCN	RC	WT	%WT	THR
4	DFLT	s-02003	*	s-02002	20	--	---	---
				s-02001	20	--	---	---
MRNSET	MAPSET	MAPPCN	MAPSSN	NET	PC	RC	WT	%WT
5	DFLT	01004	20	I	1-101-1	10	20	50
			N		01001	10	20	50
			I		s-2-202-1	30	20	100

MRN table is (13 of 6000) 1% full.

;

The following example shows output for a specific point code and MRN Set. The Flexible GTT Loadsharing and GTT LS ARI features are enabled, and the Weighted GTT Loadsharing feature is turned off.

rtrv-mrn:pcn=1001:mrnset=dflt

eaglestp 08-12-22 19:03:53 EST EAGLE 40.1.0

MRNSET	MAPSET	MAPPCN	MAPSSN	PCN	RC
DFLT	DFLT	01003	10	01002	10
				01001	10

MRN table is (13 of 6000) 1% full.

;

The following example shows output for a specific point code and MRN Set. The Flexible GTT Loadsharing and GTT LS ARI features are enabled, and the Weighted GTT Loadsharing feature is turned on.

rtrv-mrn:pcn=1001:mrnset=dflt

eaglestp 08-12-22 19:04:47 EST EAGLE 40.1.0

MRNSET	MAPSET	MAPPCN	MAPSSN	PCN	RC	WT	%WT	THR
DFLT	DFLT	01003	10	01002	10	5	50	1
				01001	10	5	50	1

MRN table is (13 of 6000) 1% full.

;

Legend

- **MRNSET**—MRN set ID
- **NET**—This field identifies the mated network type of the point code when an ITU MRN set contains both ITU-I and ITU-N point codes. The field can show I if the PC is an ITU-I point code or N if the PC is an ITU-N point code.
- **PC/PCI/PCN**—Point Code
- **RC**—Relative Cost
- **WT**—PC Weight
- **%WT**—Relative percentage, according to weight, of an in-service PC within an RC group.
- **THR**—Service threshold. If the relative percentage, according to weight, of in-service PCs within a RC group falls below the in-service threshold, that RC group is considered out-of-service, and traffic is routed to the next lowest RC group.
- **MAPSET**—This field specifies the secondary mate MAP Set.
- **MAPPCC**—This field specifies the Alternate RI Mate point code.
- **MAPSSN**—This field specifies the Alternate RI Mate subsystem number.

rtrv-mtc-measopts

Retrieve Maintenance Measurement Options

Use this command to show the enabled/disabled status of all hourly and daily scheduled maintenance measurements reports.

Keyword: rtrv-mtc-measopts

Related Commands: chg-measopts, chg-mtc-measopts, chg-netopts, rtrv-measopts, rtrv-netopts

Command Class: Link Maintenance

Parameters

This command has no parameters.

Example

rtrv-mtc-measopts

Dependencies

The Measurements Platform feature must be on before this command can be entered.

This command cannot be entered while in upgrade mode.

Notes

None

Output**rtrv-mtc-measopts**

```

tekelecstp 08-08-01 16:31:40 EST EAGLE 39.2.0
MTCHLNP      = off
MTCHNP       = off
MTCHMAP      = off
MTCHEIR      = off
MTCHVFLEX    = on
MTCHATINPQ   = off
MTCDSTP      = off
MTCDLINK     = off
MTCDLNKSET   = off
MTC DSTPLAN  = off
MTC DLNP     = off
MTC DNP      = off
MTC DMAP     = off
MTC DEIR     = off
MTC DVFLEX   = on
MTC DATINPQ  = off
MTC DSCTPASOC = off
MTC DSCTPCARD = off
MTC DUA      = off

```

;

Legend

MTCHEIR—Maintenance Hourly (marginal) measurements report for Equipment Identity Register.

MTCHVFLEX—Maintenance Hourly (marginal) measurements report for V-Flex (Voice Mail Router).

MTCHATINPQ—Maintenance Hourly (marginal) measurements report for ATINP Query.

MTCHNP—Maintenance Hourly (marginal) measurements report for INP or G-Port.

MTCHLNP—Maintenance Hourly (marginal) measurements report for LNP.

MTCHMAP—Maintenance Hourly (marginal) measurements report for GSM Map Screening.

MTCDEIR—Maintenance Daily measurements report for Equipment Identity Register.

MTCDFLEX—Maintenance Daily measurements report for V-Flex (Voice Mail Router).

MTC DSTP—Maintenance Daily measurements report for STP.

MTC DLNK—Maintenance Daily measurements report for links.

MTC DLNKSET—Maintenance Daily measurements report for linksets.

MTC DSTPLAN—Maintenance Daily measurements report for STPLAN.

MTC DLNP—Maintenance Daily measurements report for LNP.

MTC DNP—Maintenance Daily measurements report for INP/AINPQ or G-Port.

MTC DMAP—Maintenance Daily measurements report for GSM Map Screening.

MTC DSCTPASOC—Maintenance Daily measurements report for SCTP associations

MTC DSCTPCARD—Maintenance Daily measurements report for SCTP cards

MTC DUA—Maintenance Daily measurements report for UA associations

rtrv-na**Retrieve Network Appearance**

Use this command to display the configured network appearances.

Keyword: rtrv-na

Related Commands: dlt-na, ent-na

Command Class: Database Administration

Parameters

This command has no parameters.

Example

rtrv-na

Dependencies

None

Notes

None

Output

```

rtrv-na
rlghncxa03w 05-01-20 09:07:58 EST EAGLE 31.12.0
TYPE      GC      NA
ANSI      --      0
ITUI      --      1
ITUN      aa      2
ITUN24    --      3
ITUIS     4
ITUNS     bb      5
;

```

rtrv-netopts

Retrieve Network Options

Use this command to retrieve the user-specified options for the IP and Fast Copy (FC) networks used by the EAGLE 5 ISS. This command displays the PVN IP address, PVN subnet mask, and FC Network parameters.

Keyword: rtrv-netopts

Related Commands: chg-netopts

Command Class: Database Administration

Parameters

This command has no parameters.

Example

rtrv-netopts

Dependencies

The EAGLE 5 Integrated Monitoring Support (E5IS) feature must be turned on before this command can be entered.

Notes

None

Output**rtrv-netopts**

```
rlghncxa03w 08-12-11 16:35:57 IST  EAGLE 40.1.0
NETWORK OPTIONS
-----
PVN          = 170.120.50.1
PVNMASK      = 255.255.252.0
FCNA         = 170.21.96.0
FCNAMASK     = 255.255.254.0
FCNB         = 170.22.96.0
FCNBMASK     = 255.255.254.0
;
```

rtrv-npp-as**Retrieve NPP Action Set(s)**

Use this command to display a Numbering Plan Processor (NPP) Action Set (AS) entry.

Keyword: **rtrv-npp-as**

Command Class: Database Administration

Parameters

:asn= (optional)

Action set name. This parameter specifies the name of the AS.

Range: *ayyyyyyyyy*

1 alphabetic character followed by up to 9 alphanumeric characters

Dependencies

None

Output

The following example displays a specific AS entry.

rtrv-npp-as:asn=asn5

```
tekelecstp 09-02-19 13:57:06 EST EAGLE 40.1.0
```

ASN	CA	SA	FA	OFNAI	REFS
asn5	ac8 sn8 cc3	rtdbtrn rtdbtsp rtdbtrnsp cdial	sn ac cc	inc	0

```
NPP-AS table is (5 of 1024) 1% full.
```

```
;
```

The following example displays all AS entries.

rtrv-npp-as

```
tekelecstp 09-02-19 13:57:06 EST EAGLE 40.1.0
```

ASN	CA	SA	FA	OFNAI	REFS
asn1	znx	asdlkup	asd	inc	0
asn2	znx	grnlkup	grn	inc	0
asn3	znx	cgpnasdrqd nprls	zn	inc	0
asn4	znx	cgpnasdrqd cgpngrnrqd nprelay	grn	inc	0
asn5	ac8 sn8 cc3	rtdbtrn rtdbtsp rtdbtrnsp cdial	sn ac cc	inc	0

```
NPP-AS table is (5 of 1024) 1% full.
```

```
;
```

Legend

ASN—Action Set Name

CA—Conditioning Action

SA—Service Action

FA—Formatting Action

OFNAI—Outgoing Filter Nature of Address Indicator

REFS—NPP Rule References

rtrv-npp-serv**Retrieve a NPP Service Data**

Use this command to display a Numbering Plan Processor (NPP) Service Data entry.

Keyword: rtrv-npp-serv

Related Commands: chg-npp-serv, chg-npp-srs, dlt-npp-srs, ent-npp-srs

Command Class: Database Administration

Parameters

:mode= (optional)

This parameter allows the command to display NAI and delimiter values.

Range: full

:srvn= (optional)

Service name. This parameter specifies the name of the NPP Service.

Range: nppt, idprcdpn, idprcgpn, tif, tif2, tif3, mosmsicgpn, mosmsicdpn, mosmsgcgpn, mosmsgcdpn

nppt — NPP Test Service

idprcdpn — IDPRCDPN Service

idprcgpn — IDPRCGPN Service

tif — TIF Service

tif2 — TIF2 Service

tif3 — TIF3 Service

mosmsicgpn — MOSMSICGPN service

mosmsicdpn — MOSMSICDPN Service

mosmsgcgpn — MOSMSGCGPN Service

mosmsgcdpn — MOSMSGCDPN Service

Example

rtrv-npp-serv:srvn=tif:mode=full

rtrv-npp-serv:srvn=tif

Dependencies

None

Output

The following example displays all NPP Service table entries.

rtrv-npp-serv

tekelecstp 08-11-12 10:24:32 EST EAGLE 40.0.0

SERVICE	STATUS	SA	PRECEDENCE
nppt	on	rtdbtrnsp	100
		rtdbtrn	50
		rtdbtsp	50
		cdial	10

SERVICE	STATUS	SA	PRECEDENCE
tif	off	cdial	10
		fwds	5
		crp	92
		npnrls	91
		nprelay	80
		nppls	80
		sns	75
		cgpnprqd	80
		asdlkup	90
		grnlkup	90
		cgpnasdrqd	90
		cgpngrnrqd	90

SERVICE	STATUS	SA	PRECEDENCE
tif2	off	cdial	10
		fwds	5
		crp	92
		npnrls	91
		nprelay	80
		nppls	80
		sns	75
		cgpnprqd	80
		asdlkup	90
		grnlkup	90
		cgpnasdrqd	90
		cgpngrnrqd	90

SERVICE	STATUS	SA	PRECEDENCE
tif3	off	cdial	10
		fwds	5
		crp	92
		npnrls	91
		nprelay	80
		nppls	80
		sns	75
		cgpnprqd	80
		asdlkup	90
		grnlkup	90
		cgpnasdrqd	90
		cgpngrnrqd	90

SERVICE	STATUS	SA	PRECEDENCE
idprcdpn	off	ccncchk	100
		cdpnp	80
		lacck	60
		cgpnprqd	60

```

asdlkup      50
grnlkup      50
cgpnasdrqd   50
cgpngrnrqd   50

```

SERVICE	STATUS	SA	PRECEDENCE
idprcgpn	off	cgpnnp	100
		asdlkup	50
		grnlkup	50

;

The following example displays NPP Service table data for a specific Service Name.

rtrv-npp-serv:srvn=tif

```
tekelecstp 08-10-02 08:46:47 EST EAGLE 40.0.0
```

SERVICE	STATUS	SA	PRECEDENCE
tif	off	cdial	10
		fwdses	5
		crp	92
		npnrsl	91
		nprelay	90
		nprls	90
		snschgpn	80
		cgpnnpqr	90

;

The following example displays all NPP Service data for a specified Service Name when the **mode=full** parameter is specified.

rtrv-npp-serv:srvn=tif:mode=full

```
tekelecstp 08-10-02 08:46:52 EST EAGLE 40.0.0
```

SERVICE	STATUS	SA	PRECEDENCE	FNAI	NAI
tif	off	cdial	10	unkn	0
		fwdses	5	intl	4
		crp	92	natl	3
		npnrsl	91	nai1	none
		nprelay	90	nai2	none
		nprls	90	nai3	none
		snschgpn	80		
		cgpnnpqr	90		

DELIMITERS		
dlma=1234567890abcdef	dlmb=aaaaabbbbcccccd	dlmc=1020304050607080
dlmd=d0d0	dlme=e0e0	dlmf=f0f0
dlmg=9010	dlmh=9020	dlmi=9030
dlmj=9040	dlmk=9050	dlml=9050
dlmm=9060	dlmn=9070	dlmo=9080
dlmp=9090		

;

rtrv-npp-srs

Retrieve a NPP Service Rule Set

Use this command to display a Numbering Plan Processor (NPP) Service Rule Set entry.

Keyword: rtrv-npp-srs

Related Commands: chg-npp-serv, chg-npp-srs, dlt-npp-srs, ent-npp-srs

Command Class: Database Administration

Parameters

:asn= (optional)

Action set name. This parameter displays the rules associated with the specified action set.

Range: *ayyyyyyyyy*
 1 alphabetic character followed by up to 9 alphanumeric characters

:fdl= (optional)

Filter digit length. This parameter specifies the number of digits on the incoming digit string that is filtered by the NPP.

Range: **1-32 ***
 *—multiple lengths of digit strings can be filtered

:fnai= (optional)

Filter nature of address indicator. This parameter specifies the filter Nature of Address Indicator (NAI) class.

Range: **intl, natl, nai1, nai2, nai3, unkn**
 intl — filter messages with NAI=INTL
 natl — filter messages with NAI=NATL
 nai1 — filter messages with NAI=NAI1
 nai2 — filter messages with NAI=NAI2
 nai3 — filter messages with NAI=NAI3
 unkn — filter messages with NAI=UNKN
 The **chg-npp-serv** command is used to assign values to the various FNAI classes.

:fpfx= (optional)

Filter prefix. This parameter specifies the prefix used to filter incoming digit strings.

Range: 1-16 digits, *, ?
 1 - 16 hexadecimal digits inclusive of single digit wildcard (?); or wildcard (*) matching the entire digit string; valid digits are **?, 0-9, a-f, A-F**.

:srvn= (optional)

Service name. This parameter displays the rules associated with the specified service.

Range: **nppt, idprcdpn, idprcgpn, tif, tif2, tif3, mosmsicgpn, mosmsicdpn, mosmsgcgpn, mosmsgcdpn**
 nppt — NPP Test Service
 idprcdpn — IDPRCDPN Service
 idprcgpn — IDPRCGPN Service
 tif — TIF Service
 tif2 — TIF2 Service
 tif3 — TIF3 Service
 mosmsicgpn — MOSMSICGPN Service
 mosmsicdpn — MOSMSICDPN Service
 mosmsgcgpn — MOSMSGCGPN Service
 mosmsgcdpn — MOSMSGCDPN Service

Dependencies

The value specified for the **fpfx** parameter cannot have a **?** as the final character.

Output

Display all NPP Service Rule Set table entries for a given service.

rtrv-npp-srs

tekelecstp 09-02-19 13:57:06 EST EAGLE 40.1.0

Command entered at terminal #4.

SRVN	FPFX	FDIGLEN	FNAI	ASN
nppt	a	10	intl	asn2
nppt	a	16	intl	asn3
tif2	b	12	natl	asn5

NPP-SRS table is (3 of 8192) 1% full.

;

Display NPP Service Rule Set table entries for a specified digit length.

rtrv-npp-srs:fdl=*

tekelecstp 09-02-19 13:57:06 EST EAGLE 40.1.0

SRVN	FPFX	FDIGLEN	FNAI	ASN
tif	9198	*	intl	asn1
tif	919	*	natl	asn1

NPP-SRS table is (3 of 8192) 1% full.

;

Display NPP Service Rule Set table entries for a specified filter prefix and filter digit length

rtrv-npp-srs:fpfx=91:fdl=16

tekelecstp 09-02-19 13:57:06 EST EAGLE 40.1.0

SRVN	FPFX	FDIGLEN	FNAI	ASN
nppt	91	16	natl	asn3
tif	91	16	natl	asn3

NPP-SRS table is (3 of 8192) 1% full.

;

Legend

SRVN—Service Name

FPFX—Filter Prefix

FDIGLEN—Filter Digit Length

FNAI—Filter Nature of Address Indicator

ASN—Action Set Name

rtrv-oap-config**Retrieve OAP Configuration**

Use this command to display the OAP configuration information in the EAGLE 5 ISS database configured with the **chg-oap-config** command.

Keyword: rtrv-oap-config

Related Commands: chg-oap-config

Command Class: Database Administration

Parameters

This command has no parameters.

Example

rtrv-oap-config

Dependencies

The SEAS feature must be on (**seas=on** in the **rtrv-feat** command output) before this command can be entered.

Notes

None

Output

In the following example, the SEAS feature is on.

rtrv-oap-config

```
rlghncxa03w 03-03-07 00:57:31 EST EAGLE 31.3.0
OAP CONFIGURATION REPORT
DATA                OAP A                OAP B
Hostname            tekelec-8            tekelec-9
IP Address          128.132.064.015       128.132.064.016
IP Netmask          255.255.255.000       255.255.255.000
Default Router      128.132.064.001       128.132.064.001
Config              dual
SEAC CLLI            SEASNJPYRRC          SEASNJPYRRC
X25 Packet Size     7
X25 Mode             DTE                  DTE
;
```

Legend

HOSTNAME—Host name of OAP A or OAP B.

IP ADDRESS—IP address of OAP A or OAP B.

IP NETMASK—The netmask for OAP A or OAP B.

DEFAULT ROUTER—The IP address of the default router assigned to OAP A or OAP B.

CONFIG—The number of OAPs configured (single or dual).

SEAC CLLI—The common language location identifier (CLLI) of the SEAC to which the OAP connects.

X25 PACKET SIZE—The X.25 package size for the link to the SEAC (7 or 8).

X25 MODE—The mode of the X.25 link to the SEAC (DTE or DTC).

rtrv-obit

Retrieve Obituary Report

Use this command to show the obituaries that were most recently logged in the system. The report shows the obituaries from either the active or standby OAM, and the report indicates which card and processor generated the obituary.

An obituary is a set of data that describes the status of the system just before a processor restarted due to a fault in hardware or software. The data includes a register and stack dump of the processor, card location, reporting module number, software code location, and class of the fault detected.

Keyword: **rtrv-obit**

Related Commands: **act-alm-trns**, **dact-alm-trns**, **rept-stat-clk**, **rept-stat-trbl**, **rls-alm**, **rtrv-trbl**

Command Class: System Maintenance

Parameters

:loc= (mandatory)

The address of the card that is running the OAM from which the obituary information is to be retrieved.

Range: **1113, 1115**

:mode= (optional)

Display mode

Range: **c, m**

c—Continuous mode; shows obituaries already logged and new obituaries as they occur.

m—Manual mode; shows obituaries on demand only, when thsi command is entered.

Default: **c**

:num= (optional)

This parameter indicates how many obituaries to display.

Range: **1-150**

Default: **150**

Example

```
rtrv-obit:loc=1115:num=2
```

Dependencies

The obituary log on the specified OAM must contain at least one obituary; otherwise, the command is rejected.

If the **mode** parameter is specified without the **num** parameter, the entire log is displayed.

Only one **rtrv-obit** or **rtrv-trbl** command at a time can be in progress throughout the entire system.

The card location specified by the **loc** parameter must be either **1113** or **1115**.

If the **loc** parameter specifies the card that is running the standby OAM, that card must be available.

The **num** parameter value must be between **1** and **150**.

Notes

This command can be canceled using the **F9** function key or the **canc-cmd** command when the command is entered for the active OAM. See **canc-cmd** for more information.

In most situations, obituary reports are generated automatically when a card is reset. Automatic report generation can be turned off by selecting the **mode=m** parameter for manual mode.

The obituary from a 186 processor displays the register dump and a 16-word stack dump.

The obituary from a 486 processor is different from 186 because the register set is larger. Also, only 12 words of the stack are dumped for the 486.

The obituary from an IXP-based processor card (which include HIPR and HC MIM cards) contains significantly more information than an obituary from an x86-based processor card. The data in an

IXP obituary will be spread over multiple system buffers, where each buffer is logged and printed as an independent obituary. Sequence numbers are displayed in the output so that it is clear which buffers comprise a given obituary. There is an overall sequence number, and a sequence number within each class (such as IXP register set or user data) of information.

Output

The following example shows output for two obituaries from an x86-based card.

rtrv-obit:loc=1115:num=2

```
rlghncxa03w 03-03-30 08:43:14 EST EAGLE 31.3.0
-----
STH: Received a BOOT 286-obituary reply for 1 restart(s)
Primary: Card 1203 Module 4608 Mod_loc 1 Class 0080
Register Dump :
    FL=338e    CS=4a9c    IP=01c0
    AX=0000    CX=0100    DX=21c1    BX=078a
    SP=01a6    BP=01a6    SI=0fe4    DI=3ece
    DS=dce8    ES=21c1    SS=336b
Stack Dump :
[SP+1E]=3ece    [SP+16]=46cc    [SP+0E]=0001    [SP+06]=0246
[SP+1C]=078a    [SP+14]=dce8    [SP+0C]=4608    [SP+04]=338e
[SP+1A]=078a    [SP+12]=078a    [SP+0A]=0001    [SP+02]=4a9c
[SP+18]=0100    [SP+10]=336b    [SP+08]=0080    [SP+00]=01c0

STH: Received a BOOT 486-obituary reply for 1 restart(s)
Primary: Card 1213 Module 0047 Mod_loc 5 Class 0241
Register Dump :
    EFL=00000000    CS =0208    EIP=0003e75f    SS =0060
    EAX=0009a90b    ECX=0009a915    EDX=00000000    EBX=00000000
    ESP=000ddaf2    EBP=000ddb6c    ESI=00090241    EDI=00141df8
    DS =0060    ES =0060    FS =0060    GS =0060
Stack Dump :
[ESP+2E]=0009    [ESP+28]=1df8    [ESP+22]=0000    [ESP+1C]=a915
[ESP+2C]=a90b    [ESP+26]=0009    [ESP+20]=0000    [ESP+1A]=0009
[ESP+2A]=0014    [ESP+24]=a8c0    [ESP+1E]=0009    [ESP+18]=a90b
User Data Dump :
    0a 06 00 00 46 01 08 04 00 00 00    ....F.....
Report Date:03-03-04 Time:09:19:59
-----
;
```

The following example shows output for six obituaries from an IXP-based card.

rtrv-obit:loc=1113:num=6

```
rlghncxa03w 03-01-23 08:43:14 EST EAGLE 30.0.0
-----
STH: Received a BOOT IMT-obituary reply for 1 restart(s)
Card 1209 Module TKS_SBFR.C Line 728 Class 01cc
StrongARM Core Register Dump (1 of 1): [Overall: 1 of 6]
    r0 =00008b22    r1 =00004e72    r2 =0003e75f    r3 =0060024a
    r4 =0004a92b    r5 =000019c5    r6 =0000a57c    r7 =00005521
    r8 =0000b1f7    r9 =0000836c    r10=0000e251    r11=00141d42
    r12=006055a3    sp =0000727c    lr =0000003f    pc =00006429
Report Date:03-01-23 Time:12:20:45
-----
```

```
rlghncxa03w 03-01-23 08:43:14 EST EAGLE 30.0.0
-----
STH: Received a BOOT IMT-obituary reply for 1 restart(s)
Card 1209 Module TKS_SBFR.C Line 728 Class 01cc
StrongARM Core Stack Dump (1 of 1): [Overall: 2 of 6]
System Mode Stack:
    0000    15a3a816    0012be0a    06000046    01080400    .....
    0010    00a2342c    07f7b83a    15729dd2    05580601    .....
    0020    1a22a616    7072b91a    46304a44    06887400    .....
    0030    25a33b12    01a4ba22    17e03026    11483402    .....
    0040    00130811    0033a30a    14008149    0cab6130    .....
```



```

0050 00000000 00000000 00000000 00000000 .....
0060 15a3a816 0012be0a 06000046 01080400 .....
0070 00a2342c 07f7b83a 15729dd2 05580601 .....
0080 1a22a616 7072b91a 46304a44 06887400 .....
Abort Mode Stack:
0000 25a33b12 01a4ba22 17e03026 11483402 .....
0010 00130811 0033a30a 14008149 0cab6130 .....
0020 1a22a616 7072b91a 46304a44 06887400 .....
0030 25a33b12 01a4ba22 17e03026 11483402 .....
0040 00130811 0033a30a 14008149 0cab6130 .....
0050 00000000 00000000 00000000 00000000 .....
0060 15a3a816 0012be0a 06000046 01080400 .....
Report Date:03-01-23 Time:12:20:45
-----

```

```

rlghncxa03w 03-01-23 08:43:14 EST EAGLE 30.0.0
-----

```

STH: Received a BOOT IMT-obituary reply for 1 restart(s)

Card 1209 Module TKS_SBFR.C Line 728 Class 01cc

IXP Register Dump (1 of 2): [Overall: 3 of 6]

***** FBI Registers: *****

```

IREG =00000000 SOP_SEQ1=00000000
SOP_SEQ2=0003e75f ENQUEUE_SEQ1=0060024a
ENQUEUE_SEQ2=0060024a THREAD_DONE_REG0=00600231
THREAD_DONE_REG1=00600231 RCV_RDY_CNT=000012d4
RCV_RDY_HI =0009a90b RCV_RDY_LO=00000000
RCV_RDY_CTL=0009a915 RCV_CNTL=00000000
REC_FASTPORT_CTL =000ddaf2 FLOWCTL_MASK =000ddb6c
RDYBUS_SYN_CNT_DEF=00090241 SELF_DESTRUCT=00141df8
HASH_MULTIPLIER_64_HI=006011a3 HASH_MULTIPLIER_64_LO=00000000
HASH_MULTIPLIER_48_HI=006011a3 HASH_MULTIPLIER_48_LO=00000000
GET_CMD=00000000 XMIT_RDY_LO=00000000
XMIT_RDY_HI=00000000 XMIT_RDY_CTL=00000000
XMIT_PTR =0003e75f

```

***** SDRAM Registers: *****

```

SDRAM_CSR=0060024a SDRAM_MEMCTL0=0060024a
SDRAM_MEMCTL1=00600231 DRAM_MEMINIT=00600231

```

***** StrongARM System Registers: *****

```

PLL_CFG=0060024a GPIO_EN=0060024a
GPIO_DATA=00600231 RTC_DIV=00600231
RTC_INIT=000012d4 RTC_TVAL=0009a90b
RTC_CNTR=00000000 RTC_ALM=0009a915
UART_SR=0009a915 UART_CR=00000000
UART_DR=00090241 TIMER_1_LOAD=000ddb6c
TIMER_2_LOAD=00090241 TIMER_3_LOAD=00141df8
TIMER_4_LOAD=00000000 TIMER_1_VALUE=00000000
TIMER_2_VALUE=006011a3 TIMER_3_VALUE=00000000
TIMER_4_VALUE=00090241 TIMER_1_CONTROL=00141df8
TIMER_2_CONTROL=00000000 TIMER_3_CONTROL=00000000
TIMER_4_CONTROL=006011a3 FIQ=00000000
IRQ=00000000

```

***** PCI Configuration Space Registers: *****

```

PCI_VEN_DEV_ID=0060024a PCI_CMD_STAT=0060024a
PCI_REV_CLASS=00600231 PCI_CACHE_LAT_HDR_BIST=00600231
PCI_MEM_BAR=000012d4 PCI_IO_BAR=0009a90b
PCI_DRAM_BAR=00000000 PCI_SUBSYS=0009a915
PCI_INT_LAT=0009a915

```

***** PCI Shared Control Registers: *****

```

CAP_PTR_EXT=00090241 PWR_MGMT=000ddb6c
IXP1200_RESET=00090241 PCI_OUT_INT_MASK=00141df8
I20_INB_FIFO=00000000 I20_OUTB_FIFO=00000000
MAILBOX_0=006011a3 MAILBOX_1=00000000
MAILBOX_2=006011a3 MAILBOX_3=00000000

```

```

DOORBELL=006011a3          DOORBELL_SETUP=00000000
***** PCI Control Registers: *****
CHAN_1_BYTE_COUNT=0060024a  CHAN_2_BYTE_COUNT=0060024a
CHAN_1_PCI_BAR=00600231     CHAN_2_PCI_BAR=00600231
CHAN_1_DRAM_ADDR=000012d4   CHAN_2_DRAM_ADDR=0009a90b
CHAN_1_DESC_PTR=00000000    CHAN_2_DESC_PTR=0009a915
CHAN_1_CONTROL=0009a915     CHAN_2_CONTROL=00000000
DMA_INF_MODE=00090241       CSR_BASE_ADDR_MASK=000ddb6c
DRAM_BASE_ADDR_MASK=000ac14c I20_INB_FLIST_HPTR=00141df8
I20_INB_PLIST_TPTR=006011a3 I20_OUTB_PLIST_HPTR =00000000
I20_OUTB_FLIST_TPTR =00000000 I20_INB_FLIST_CNT=00000000
I20_OUTB_PLIST_CNT =006011a3 I20_INB_PLIST_CNT =00000000
SA_CONTROL=00090241         PCI_ADDR_EXT=000ddb6c
DBELL_PCI_MASK=00090241     DBELL_SA_MASK=00141df8
IRQ_STATUS=00000000         FIQ_STATUS=00000000
IRQ_RAW_STATUS=006011a3     FIQ_RAW_STATUS=00000000
IRQ_ENABLE=006011a3         FIQ_ENABLE=00000000
***** Coprocessor 15 Registers: *****
ID_CHIP=0060024a           CONTROL_CP15=0060024a
TRANSLATION_TAB_BASE=00600231 DOMAIN_ACCESS_CONTROL=00600231
FAULT_STATUS=000012d4      FAULT_ADDRESS=0009a90b
CACHE_CONTROL_OPER=00000000 READ_BUFFER_OPER=0009a915
PROC_ID_VIRT_ADDR_MAP=00000000
DATA_BREAKPT_CONTROL_REG=0009a915
Report Date:03-01-23   Time:12:20:45
-----

rlghncxa03w 03-01-23 08:43:14 EST  EAGLE 30.0.0
-----
STH: Received a BOOT IMT-obituary reply for 1 restart(s)
Card 1209  Module TKS_SBFR.C  Line 728  Class 01cc
IXP Register Dump (2 of 2): [Overall: 4 of 6]
***** SRAM Registers: *****
SRAM_CSR=0060024a          SRAM_AUTO_BASE=0060024a
SRAM_AUTO_PTR=00600231     SRAM_AUTO_END=00600231
SRAM_TEST_MOD=000012d4    SRAM_SLOW_CONFIG=0009a90b
SRAM_BOOT_CONFIG=00000000 SRAM_SLOWPORT_CONFIG=0009a915
***** Microengine 0 Registers: *****
USTORE_DATA=0060024a       ALU_OUTPUT=0060024a
CTX_ENABLES=000012d4       CC_ENABLE=0009a90b
CTX_0_SIG_EVENTS=00090241  CTX_1_SIG_EVENTS=000ddb6c
CTX_2_SIG_EVENTS=00090241  CTX_3_SIG_EVENTS=00141df8
CTX_0_WAKEUP_EVENTS=00000000 CTX_1_WAKEUP_EVENTS=00000000
CTX_2_WAKEUP_EVENTS=006011a3 CTX_3_WAKEUP_EVENTS=00000000
CTX_ARB_CNTL=00600231
ACTIVE_CTX_STS:  SEG=1  ACNO=1  AB=0  ACTXPC: 38
CTX_0_STS:      SEG=1  ACNO=2  RR=0  CTX_PC:
245
CTX_1_STS:      SEG=0  ACNO=1  RR=1  CTX_PC:
15
CTX_2_STS:      SEG=0  ACNO=0  RR=0  CTX_PC:
75
CTX_3_STS:      SEG=1  ACNO=3  RR=1  CTX_PC:
132
***** Microengine 1 Registers: *****
USTORE_DATA=0060024a       ALU_OUTPUT=0060024a
CTX_ENABLES=000012d4       CC_ENABLE=0009a90b
CTX_0_SIG_EVENTS=00090241  CTX_1_SIG_EVENTS=000ddb6c
CTX_2_SIG_EVENTS=00090241  CTX_3_SIG_EVENTS=00141df8
CTX_0_WAKEUP_EVENTS=00000000 CTX_1_WAKEUP_EVENTS=00000000
CTX_2_WAKEUP_EVENTS=006011a3 CTX_3_WAKEUP_EVENTS=00000000
CTX_ARB_CNTL=00600231
ACTIVE_CTX_STS:  SEG=1  ACNO=1  AB=0  ACTXPC: 38
CTX_0_STS:      SEG=1  ACNO=2  RR=0  CTX_PC:
245

```

```

15      CTX_1_STS:      SEG=0    ACNO=1    RR=1    CTX_PC:
128      CTX_2_STS:      SEG=0    ACNO=0    RR=0    CTX_PC:
72      CTX_3_STS:      SEG=1    ACNO=3    RR=1    CTX_PC:

***** Microengine 2 Registers: *****
      USTORE_DATA=0060024a      ALU_OUTPUT=0060024a
      CTX_ENABLES=000012d4      CC_ENABLE=0009a90b
      CTX_0_SIG_EVENTS=00090241  CTX_1_SIG_EVENTS=000ddb6c
      CTX_2_SIG_EVENTS=00090241  CTX_3_SIG_EVENTS=00141df8
      CTX_0_WAKEUP_EVENTS=00000000  CTX_1_WAKEUP_EVENTS=00000000
      CTX_2_WAKEUP_EVENTS=006011a3  CTX_3_WAKEUP_EVENTS=00000000
      CTX_ARB_CNTL=00600231
      ACTIVE_CTX_STS:  SEG=1    ACNO=1    AB=0    ACTXPC: 38
      CTX_0_STS:      SEG=1    ACNO=2    RR=0    CTX_PC:

245      CTX_1_STS:      SEG=0    ACNO=1    RR=1    CTX_PC:
125      CTX_2_STS:      SEG=0    ACNO=0    RR=0    CTX_PC:
75      CTX_3_STS:      SEG=1    ACNO=3    RR=1    CTX_PC:
62

***** Microengine 3 Registers: *****
      USTORE_DATA=0060024a      ALU_OUTPUT=0060024a
      CTX_ENABLES=000012d4      CC_ENABLE=0009a90b
      CTX_0_SIG_EVENTS=00090241  CTX_1_SIG_EVENTS=000ddb6c
      CTX_2_SIG_EVENTS=00090241  CTX_3_SIG_EVENTS=00141df8
      CTX_0_WAKEUP_EVENTS=00000000  CTX_1_WAKEUP_EVENTS=00000000
      CTX_2_WAKEUP_EVENTS=006011a3  CTX_3_WAKEUP_EVENTS=00000000
      CTX_ARB_CNTL=00600231
      ACTIVE_CTX_STS:  SEG=1    ACNO=1    AB=0    ACTXPC: 38
      CTX_0_STS:      SEG=1    ACNO=2    RR=0    CTX_PC:

245      CTX_1_STS:      SEG=0    ACNO=1    RR=1    CTX_PC:
125      CTX_2_STS:      SEG=0    ACNO=0    RR=0    CTX_PC:
75      CTX_3_STS:      SEG=1    ACNO=3    RR=1    CTX_PC:
62

***** Microengine 4 Registers: *****
      USTORE_DATA=0060024a      ALU_OUTPUT=0060024a
      CTX_ENABLES=000012d4      CC_ENABLE=0009a90b
      CTX_0_SIG_EVENTS=00090241  CTX_1_SIG_EVENTS=000ddb6c
      CTX_2_SIG_EVENTS=00090241  CTX_3_SIG_EVENTS=00141df8
      CTX_0_WAKEUP_EVENTS=00000000  CTX_1_WAKEUP_EVENTS=00000000
      CTX_2_WAKEUP_EVENTS=006011a3  CTX_3_WAKEUP_EVENTS=00000000
      CTX_ARB_CNTL=00600231
      ACTIVE_CTX_STS:  SEG=1    ACNO=1    AB=0    ACTXPC: 38
      CTX_0_STS:      SEG=1    ACNO=2    RR=0    CTX_PC:

245      CTX_1_STS:      SEG=0    ACNO=1    RR=1    CTX_PC:
15      CTX_2_STS:      SEG=0    ACNO=0    RR=0    CTX_PC:
75      CTX_3_STS:      SEG=1    ACNO=3    RR=1    CTX_PC:
132

***** Microengine 5 Registers: *****
      USTORE_DATA=0060024a      ALU_OUTPUT=0060024a
      CTX_ENABLES=000012d4      CC_ENABLE=0009a90b
      CTX_0_SIG_EVENTS=00090241  CTX_1_SIG_EVENTS=000ddb6c
      CTX_2_SIG_EVENTS=00090241  CTX_3_SIG_EVENTS=00141df8
      CTX_0_WAKEUP_EVENTS=00000000  CTX_1_WAKEUP_EVENTS=00000000
      CTX_2_WAKEUP_EVENTS=006011a3  CTX_3_WAKEUP_EVENTS=00000000
      CTX_ARB_CNTL=00600231

```

245 ACTIVE_CTX_STS: SEG=1 ACNO=1 AB=0 ACTXPC: 38
 CTX_0_STS: SEG=1 ACNO=2 RR=0 CTX_PC:
 15 CTX_1_STS: SEG=0 ACNO=1 RR=1 CTX_PC:
 75 CTX_2_STS: SEG=0 ACNO=0 RR=0 CTX_PC:
 132 CTX_3_STS: SEG=1 ACNO=3 RR=1 CTX_PC:

Report Date:03-01-23 Time:12:20:45

rlghncxa03w 03-01-23 08:43:14 EST EAGLE 30.0.0

STH: Received a BOOT IMT-obituary reply for 1 restart(s)

Card 1209 Module TKS_SBFR.C Line 728 Class 01cc
 User Data Dump (1 of 2): [Overall: 5 of 6]

0000	15a3a816	0012be0a	06000046	01080400	
0010	00a2342c	07f7b83a	15729dd2	05580601	
0020	1a22a616	7072b91a	46304a44	06887400	
0030	25a33b12	01a4ba22	17e03026	11483402	
0040	00130811	0033a30a	14008149	0cab6130	
0050	00000000	00000000	00000000	00000000	
0060	15a3a816	0012be0a	06000046	01080400	
0070	00a2342c	07f7b83a	15729dd2	05580601	
0080	1a22a616	7072b91a	46304a44	06887400	
0090	25a33b12	01a4ba22	17e03026	11483402	
00a0	00130811	0033a30a	14008149	0cab6130	
00b0	1a22a616	7072b91a	46304a44	06887400	
00c0	25a33b12	01a4ba22	17e03026	11483402	
00d0	00130811	0033a30a	14008149	0cab6130	
00e0	00000000	00000000	00000000	00000000	
00f0	15a3a816	0012be0a	06000046	01080400	
0100	00a2342c	07f7b83a	15729dd2	05580601	
0110	1a22a616	7072b91a	46304a44	06887400	
0120	25a33b12	01a4ba22	17e03026	11483402	
0130	25a33b12	01a4ba22	17e03026	11483402	
0140	00130811	0033a30a	14008149	0cab6130	
0150	00000000	00000000	00000000	00000000	
0160	15a3a816	0012be0a	06000046	01080400	
0170	00a2342c	07f7b83a	15729dd2	05580601	
0180	1a22a616	7072b91a	46304a44	06887400	
0190	25a33b12	01a4ba22	17e03026	11483402	
01a0	00130811	0033a30a	14008149	0cab6130	
01b0	1a22a616	7072b91a	46304a44	06887400	
01c0	25a33b12	01a4ba22	17e03026	11483402	

Report Date:03-01-23 Time:12:20:45

rlghncxa03w 03-01-23 08:43:14 EST EAGLE 30.0.0

STH: Received a BOOT IMT-obituary reply for 1 restart(s)

Card 1209 Module TKS_SBFR.C Line 728 Class 01cc
 User Data Dump (2 of 2): [Overall: 6 of 6]

0000	15a3a816	0012be0a	06000046	01080400	
0010	00a2342c	07f7b83a	15729dd2	05580601	
0020	1a22a616	7072b91a	46304a44	06887400	
0030	25a33b12	01a4ba22	17e03026	11483402	
0040	00130811	0033a30a	14008149	0cab6130	
0050	00000000	00000000	00000000	00000000	
0060	15a3a816	0012be0a	06000046	01080400	
0070	00a2342c	07f7b83a	15729dd2	05580601	
0080	1a22a616	7072b91a	46304a44	06887400	
0090	25a33b12	01a4ba22	17e03026	11483402	
00a0	00130811	0033a30a	14008149	0cab6130	

```

00b0 1a22a616 7072b91a 46304a44 06887400 .....
00c0 25a33b12 01a4ba22 17e03026 11483402 .....
00d0 00130811 0033a30a 14008149 0cab6130 .....
00e0 00000000 00000000 00000000 00000000 .....
00f0 15a3a816 0012be0a 06000046 01080400 .....
0100 00a2342c 07f7b83a 15729dd2 05580601 .....
0110 1a22a616 7072b91a 46304a44 06887400 .....
0120 25a33b12 01a4ba22 17e03026 11483402 .....
Report Date:03-01-23 Time:12:20:45
-----

```

;

rtrv-obit:loc=1115

Command Accepted - Processing

```

stdcfg1b 05-06-13 16:32:30 EST EAGLE 34.0.0
NOTICE: Only 7 obit(s) to retrieve in the log.

```

;

```

stdcfg1b 05-06-13 16:32:30 EST EAGLE 34.0.0
-----

```

STH: Received a BOOT IMT-Obituary reply for restart

Card 1103 Module ATH_386A.ASM Line 988 Class 0400

Register Dump :

```

EFL=00000246 CS =0058 EIP=0041cf03 SS =0060
EAX=00000046 ECX=00000000 EDX=005245d9 EBX=00000001
ESP=00483f80 EBP=00483f88 ESI=00000000 EDI=00000000
DS =0060 ES =0060 FS =0060 GS =0060

```

Stack Dump :

```

[SP+1E]=0048 [SP+16]=0000 [SP+0E]=0041 [SP+06]=0000
[SP+1C]=3fd0 [SP+14]=0001 [SP+0C]=cecc [SP+04]=0000
[SP+1A]=0048 [SP+12]=0000 [SP+0A]=0048 [SP+02]=0041
[SP+18]=3fbc [SP+10]=0a0a [SP+08]=3f9c [SP+00]=e600

```

```

Report Date:05-06-10 Time:19:20:55
-----

```

;

```

stdcfg1b 05-06-13 16:32:31 EST EAGLE 34.0.0
-----

```

STH: Received a B00T IMT-Obituary reply for restart

Card 1209 Module sds_arm_send Line 356 Class 0001

StrongARM Core Register Dump (1 of 1): [Overall: 1 of 6]

SYSTEM MODE REGISTERS:

```

r0 = 00116bd4 r1 = 00000164 r2 = 00000001 r3 = 00000003
r4 = 00f5f3f0 r5 = 00000000 r6 = 0000001f r7 = 001251a0
r8 = 00177be0 r9 = 10ffbfcc r10= 00118b74 r11= 00000000
r12= 642b0002 sp = 000cffa8 lr = 00116b88 pc = 00102424
cpsr=400000df

```

Register Dump 2 is empty

```

Report Date:05-06-13 Time:16:30:42
-----

```

;

```

stdcfg1b 05-06-13 16:32:33 EST EAGLE 34.0.0
-----

```

STH: Received a B00T IMT-Obituary reply for restart

Card 1209 Module sds_arm_send Line 356 Class 0001

StrongARM Core Stack Dump (1 of 1): [Overall: 2 of 6]

```

SYSTEM MODE STACK (Length=192):
0000 00e00000 00000007 00e00000 00102ab0 .....*..
0010 00178698 00000000 000000f8 000cff08 .....
0020 00000001 00116bd4 00000164 00000001 ....k..d.....
0030 000cff68 00000000 00000000 0000001f h.....
0040 001251a0 00177be0 10ffbfcc 00118b74 .Q...{.....t...
0050 00000000 00102468 00000000 00000000 ....h$.....
0060 000cffa8 00116bd4 00000164 00000001 ....k..d.....
0070 00000003 00f5f3f0 00000000 0000001f .....
0080 001251a0 00177be0 10ffbfcc 00118b74 .Q...{.....t...
0090 00000000 642b0002 00116b88 00102424 .....+d.k..$$..
00a0 00000000 00000000 0000001f 00115e10 .....^..
00b0 00177c4c 00177bf0 0000001f 00125268 L|...{.....hR..
;

stdcfg1b 05-06-13 16:32:34 EST EAGLE 34.0.0
Stack Dump 2 is empty

Report Date:05-06-13 Time:16:30:42
-----
;

stdcfg1b 05-06-13 16:32:35 EST EAGLE 34.0.0
-----
STH: Received a BOOT IMT-Obituary reply for restart
Card 1209 Module sds_arm_send Line 356 Class 0001
User Data Dump (1 of 1): [Overall: 3 of 6]

User Data is empty

Report Date:05-06-13 Time:16:30:42
-----
;

stdcfg1b 05-06-13 16:32:36 EST EAGLE 34.0.0
-----
STH: Received a BOOT IMT-Obituary reply for restart
Card 1209 Module sds_arm_send Line 356 Class 0001
EP9312 Register Dump (1 of 2): [Overall: 4 of 6]

***** DMA Registers *****
DMA_CTRL_M2M0= 0608d40c DMA_INTR_STAT_M2M0= 00000000
DMA_STAT_M2M0= 00000000 DMA_BCR0_M2M0= 0608d40c
DMA_BASE_SRC0_M2M0= 00000000 DMA_CRNT_SRC0_M2M0= 00000000
DMA_BASE_DSTN0_M2M0= 00000000 DMA_CRNT_DSTN0_M2M0= 00000000
DMA_BCR1_M2M0= 000001fc DMA_BASE_SRC1_M2M0= 00000000
DMA_CRNT_SRC1_M2M0= 00000000 DMA_BASE_DSTN1_M2M0= 00000000
DMA_CRNT_DSTN1_M2M0= 00000000
DMA_CTRL_M2M1= 0608d40c DMA_INTR_STAT_M2M1= 00000000
DMA_STAT_M2M1= 00000000 DMA_BCR0_M2M1= 00000000
DMA_BASE_SRC0_M2M1= 00000000 DMA_CRNT_SRC0_M2M1= 00000000
DMA_BASE_DSTN0_M2M1= 00000000 DMA_CRNT_DSTN0_M2M1= 00000000
DMA_BCR1_M2M1= 00000000 DMA_BASE_SRC1_M2M1= 00000000
DMA_CRNT_SRC1_M2M1= 00000000 DMA_BASE_DSTN1_M2M1= 00000000
DMA_CRNT_DSTN1_M2M1= 00000000
DMA_ACTIVE_INTR= 00000000

***** TIMER Registers *****
TMR1_CURR_VALUE= 00000000 TMR1_CTRL_REG= 00000000
TMR1_LOAD_REG= 00000000 TMR2_CURR_VALUE= 00000000
TMR2_CTRL_REG= 00000000 TMR2_LOAD_REG= 00000000
TMR3_CURR_VALUE= 00000001 TMR3_CTRL_REG= 000000d5
TMR3_LOAD_REG= 00000001 TMR4_VALUE_LOW= 413c60f3
TMR4_VALUE_HI= 0000015f

```

```
***** SYSCON Registers *****
PWRSTS=          4320ace3      PWRCNT=          0c000000
CLKSET1=         00a5a127      CLKSET2=          0003c317
SCRATCH0=        00000040      SCRATCH1=          00000000
DEVCFG=          6902090e      CHIP_ID=          34009213
SYSCFG=          340000d6      APB_WAIT=          00000001
ARB_REG=         00000000      VID_REG=          00000000
MIR_REG=         00000000      I2S_REG=          00000000
TCH_REG=         00000000
```

```
***** GPIO Registers *****
PADR=            0000007f      PBDR=            000000e9
PCDR=            000000c0      PDDR=            000000c4
PEDR=            00000000      PFDR=            000000ff
PGDR=            00000002      PHDR=            0000007f
PADDR=           00000000      PBDDR=           00000009
PCDDR=           000000fb      PDDDR=           000000fb
PEDDR=           00000003      PFDDR=           00000000
PGDDR=           0000000c      PHDDR=           00000007
PA_TYPE1=        00000000      PB_TYPE1=        00000080
PF_TYPE1=        00000000      PA_TYPE2=        00000000
PB_TYPE2=        00000000      PF_TYPE2=        00000000
PA_INT_EN=       00000000      PB_INT_EN=       00000080
PF_INT_EN=       00000000      PA_RAW_STAT=     00000080
PB_RAW_STAT=     0000001f      PF_RAW_STAT=     00000000
PA_INT_STAT=     00000000      PB_INT_STAT=     00000000
PF_INT_STAT=     00000000      PA_DB=           00000000
PB_DB=           00000000      PF_DB=           00000000
EE_REG=          00000000
```

```
***** Coprocessor 15 Registers *
ID_CODE_CP15_0=   41129200      CACHE_CODE_CP15_0= 0d172172
CONTROL_CP15_1=   c000107d      TRANS_BASE_TBL_CP15_2=10ffc000
DOMAIN_ACCESS_CP15_3= ffffffff      FAULT_STATUS_CP15_5= 0000000d
FAULT_PREFETCH_CP15_5=000000fa      FAULT_ADDR_CP15_6=  d3b765e8
CACHE_OPER_CP15_7= 00000000      TLB_OPER_CP15_8=   00000000
DCACHE_LOCKDN_CP15_9= 00000000      ICACHE_LOCKDN_CP15_9= 00000000
D_TLB_LOCKDN_CP15_10= 00b00000      I_TLB_LOCKDN_CP15_10= 00200000
FCSE_PID_CP15_13= 00000000
```

Report Date:05-06-13 Time:16:30:42

;

stdcfg1b 05-06-13 16:32:40 EST EAGLE 34.0.0

STH: Received a BOOT IMT-Obituary reply for restart
 Card 1209 Module sds_arm_send Line 356 Class 0001
 EP9312 Register Dump (2 of 2): [Overall: 5 of 6]

```
***** VIC Registers *****
VIC_1_IRQ_STATUS= 00000000      VIC_1_FIQ_STATUS= 00000000
VIC_1_RAW_INTR=   25000008      VIC_1_INT_SELECT= 00000000
VIC_1_INT_ENABLE= 00060000      VIC_1_SOFT_INT=   00000000
VIC_1_SOFT_INT_CLEAR= 00000000
VIC_2_IRQ_STATUS= 00000000      VIC_2_FIQ_STATUS= 00000000
VIC_2_RAW_INTR=   0000021b      VIC_2_INT_SELECT= 00080000
VIC_2_INT_ENABLE= 08080004      VIC_2_SOFT_INT=   00000000
VIC_2_SOFT_INT_CLEAR= 00000000
```

```
***** SMC Registers *****
BANK_CONFIG0=     70001c80      BANK_CONFIG1=     70001420
BANK_CONFIG2=     40001480      BANK_CONFIG3=     70000400
```

```

BANK_CONFIG6=          70001440    BANK_CONFIG7=          70001440

***** UART3 Registers *****
LINE_CTRL_LOW=         00000003    LINE_CTRL_MID=         00000000
LINE_CTRL_HIGH=        00000074    CTRL_REG=              00000001
STATUS_REG=            00000000    FLAGS_REG=             00000090
DATA_REG=              00000020

***** Watchdog Registers *****
WD0G_REG=              00806c69

Report Date:05-06-13   Time:16:30:42
-----
;

stdcfg1b 05-06-13 16:32:42 EST  EAGLE 34.0.0
-----
STH: Received a BOOT IMT-Obituary reply for restart
Card 1209  Module sds_arm_send  Line 356  Class 0001
SIFB Register Dump (1 of 1):  [Overall: 6 of 6]

***** BCM5630 Switch0 Registers *****
Switch0 Port0 Status= 00c06c00    Switch0 Port1 Status= 00c06c00
Switch0 Port2 Status= 00806c00    Switch0 Port3 Status= 00806c00
Switch0 Port4 Status= 00806c00    Switch0 Port5 Status= 00806c00
Switch0 Port6 Status= 00806c00    Switch0 Port7 Status= 00800000
Switch0 Port12 Status=00806c00

***** BCM5630 Switch1 Registers *****
Switch1 Port0 Status= 00806c00    Switch1 Port1 Status= 00806c00
Switch1 Port2 Status= 00806c00    Switch1 Port3 Status= 00806c00
Switch1 Port4 Status= 00806c00    Switch1 Port5 Status= 00806c00
Switch1 Port6 Status= 00806c00    Switch1 Port7 Status= 00806c00
Switch1 Port8 Status= 00806c00    Switch1 Port9 Status= 00806c00
Switch1 Port10 Status=00806c00    Switch1 Port11 Status=00800000
Switch1 Port12 Status=aaaaaa00

Report Date:05-06-13   Time:16:30:43
-----
;

```

rtrv-ppsopts**Retrieve Prepaid SMS Options**

Use this command to display Prepaid Short Message Service options from the PPSOPTS table.

Keyword: rtrv-ppsopts

Related Commands: chg-ppsopts

Command Class: Database Administration

Parameters

:ppt= (optional)

Prepaid portability type. This parameter specifies an IN platform.

Range: 1-32

Example

rtrv-ppsopts

rtrv-ppsopts:ppt=2

Dependencies

The Prepaid SMS Intercept Ph1 feature must be turned on before this command can be entered.

Output

Set ID values are displayed only if the Flexible GTT Load Sharing (FGTTLS) feature is enabled.
The following example displays Prepaid SMS options for a specific Prepaid Type.

rtrv-ppsopts:ppt=1

```
tekelecstp 08-12-17 15:07:01 EST EAGLE 40.1.0
```

Prepaid SMS Options

```
-----
BPARTYCHK      = OFF
PPT            PCA/PCI/PCN          SSN    RI
---            -
1              PCI:    1-001-1      1      GT
```

;

The following example displays Prepaid SMS options for all Prepaid Types.

rtrv-ppsopts

```
tekelecstp 08-12-17 15:11:22 EST EAGLE 40.1.0
```

Prepaid SMS Options

```
-----
BPARTYCHK      = OFF
PPT            PCA/PCI/PCN          SSN    RI
---            -
1              PCI:    1-001-1      1      GT
2              PCI:    1-001-2      1      SSN
3              -----      NONE     GT
4              -----      NONE     GT
5              -----      NONE     GT
6              -----      NONE     GT
7              -----      NONE     GT
8              -----      NONE     GT
9              -----      NONE     GT
10             -----      NONE     GT
11             -----      NONE     GT
12             -----      NONE     GT
13             -----      NONE     GT
14             -----      NONE     GT
15             -----      NONE     GT
16             -----      NONE     GT
17             -----      NONE     GT
18             -----      NONE     GT
19             -----      NONE     GT
20             -----      NONE     GT
21             -----      NONE     GT
22             -----      NONE     GT
23             -----      NONE     GT
24             -----      NONE     GT
25             -----      NONE     GT
26             -----      NONE     GT
27             -----      NONE     GT
28             -----      NONE     GT
29             -----      NONE     GT
30             -----      NONE     GT
31             -----      NONE     GT
32             -----      NONE     GT
```

```
GTA
---
```

```
1110
1111
NONE
NONE
```

[illegible]

;

The following example displays Prepaid SMS options for a specific Prepaid Type when the FGTTLS feature is enabled.

rtrv-ppsopts:ppt=2

```
tekelecstp 08-12-17 15:07:01 EST EAGLE 40.1.0
```

Prepaid SMS Options

BPARTYCHK	= OFF				
PPT	PCA/PCI/PCN	SSN	RI	Set ID	

2	PCI: 1-001-1	1	SSN	DFLT	

;

The following example displays Prepaid SMS options for all Prepaid Type when the FGTTLS feature is enabled.

rtrv-ppsopts

tekelecstp 08-12-17 15:26:17 EST EAGLE 40.1.0

Prepaid SMS Options

BPARTYCHK		= OFF			
PPT	PCI/PCN	SSN	RI	Set ID	

1	PCI: 1-001-1	1	SSN	DFLT	
2	-----	NONE	GT	DFLT	
3	-----	NONE	GT	DFLT	
4	-----	NONE	GT	DFLT	
5	-----	NONE	GT	DFLT	
6	-----	NONE	GT	DFLT	
7	-----	NONE	GT	DFLT	
8	-----	NONE	GT	DFLT	
9	-----	NONE	GT	DFLT	
10	-----	NONE	GT	DFLT	

11	-----	NONE	GT	DFLT
12	-----	NONE	GT	DFLT
13	-----	NONE	GT	DFLT
14	-----	NONE	GT	DFLT
15	-----	NONE	GT	DFLT
16	-----	NONE	GT	DFLT
17	-----	NONE	GT	DFLT
18	-----	NONE	GT	DFLT
19	-----	NONE	GT	DFLT
20	-----	NONE	GT	DFLT
21	-----	NONE	GT	DFLT
22	-----	NONE	GT	DFLT
23	-----	NONE	GT	DFLT
24	-----	NONE	GT	DFLT
25	-----	NONE	GT	DFLT
26	-----	NONE	GT	DFLT
27	-----	NONE	GT	DFLT
28	-----	NONE	GT	DFLT
29	-----	NONE	GT	DFLT
30	-----	NONE	GT	DFLT
31	-----	NONE	GT	DFLT
32	-----	NONE	GT	DFLT

GTA

1122

NONE

NONE

NONE

NONE

NONE

NONE

NONE

NONE

NONE

NONE

NONE

NONE

NONE

NONE

NONE

NONE

NONE

NONE

NONE

NONE

NONE

NONE

NONE

NONE

NONE

NONE

NONE

NONE

NONE

NONE

NONE

;

Legend

- **PPT**—Prepaid Portability Type
- **PCI**—An ITU international point code for an IN platform

- **PCN**—An ITU national point code for an IN platform
- **RI**—A routing indicator for an IN platform
- **SETID**—Specifies the MAP Set ID or MRN Set ID based on the RI value
- **GTA**—Entity addresses for up to 32 IN platforms. An unprovisioned GTA has a value of **none**.
- **SSN**—Subsystem Number.

rtrv-prefix

Retrieve Prefix

Use this command to retrieve provisioned prefix information for all supported features or for a specified feature.

Keyword: rtrv-prefix

Related Commands: `chg-prefix`, `dlt-prefix`, `rtrv-ctrl-feat`

Command Class: Database Administration

Parameters

:feature= (optional)

Feature Name. This parameter specifies the name of an enabled controlled feature that is supported by this command. The parameter value must match the feature name as it is displayed in the **rtv-ctrl-feat** command output.

[illegible]

1 alphabetic character and up to 24 optional alphanumeric characters and spaces, enclosed in double quotation marks.

The parameter value is not case-sensitive; upper case or lower case or both can be entered.

Part or all of the feature name can be entered. If part of the feature name is specified, the entry must start with the first letter of the name, and must contain enough of the name to uniquely identify the feature. For example, there are two feature names that begin with “GSM MAP.” Enough additional characters to identify which GSM MAP feature is being entered (at least “GSM MAP SR” to identify the “GSM MAP SRI Redirect” feature). This command supports the following controlled features:

- GSM MAP SRI Redirect
- ISUP NP for EPAP

Example

Retrieve provisioned prefix information for all supported features.

rtrv-prefix

Retrieve prefix information for the GSM MAP SRI Redirect feature.

```
rtrv-prefix:feature="GSM MAP SRI Redirect"
```

Dependencies

The specified feature name must be the name of an enabled controlled feature as it is displayed in the **rtv-ctrl-feat** command output. The following controlled features are supported by this command:

- GSM MAP SRI Redirect

- ISUP NP for EPAP

Notes

None

Output

For all features, retrieve the provisioned prefix information. There is additional information displayed in the function column for prefix numbers 6 and 7 of the “ISUP NP with EPAP” feature.

rtrv-prefix

rlghncxa03w 04-09-20 09:04:14 EST EAGLE 34.1.0

Feature	NUM	Prefix	Function

GSM MAP SRI Redirect	1	1a1a	
GSM MAP SRI Redirect	2	ffff	
GSM MAP SRI Redirect	3	1234	
ISUP NP with EPAP	1	3b4c	
ISUP NP with EPAP	6	886	Insertion Country Code
ISUP NP with EPAP	7	0	Deletion Condition

FEATPFX table is (6 of 256) 2% full

;

For the “GSM MAP SRI Redirect” feature, retrieve the provisioned prefix information. The table capacity for the total number of entries in use is reported, not just the number of entries displayed. There is no additional information displayed in the Function column for this feature.

rtrv-prefix:feature="GSM MAP SRI Redirect"

rlghncxa03w 04-09-20 09:04:14 EST EAGLE 31.11.0

Feature	NUM	Prefix	Function

GSM MAP SRI Redirect	1	1a1a	
GSM MAP SRI Redirect	2	ffff	
GSM MAP SRI Redirect	3	1234	

FEATPFX table is (6 of 256) 2% full

;

rtrv-rmt-appl

Retrieve Remote Application

Use this command to retrieve a list of remote application assignments.

Keyword: rtrv-rmt-appl

Related Commands: dlt-rmt-appl, ent-rmt-appl

Command Class: Database Administration

Parameters

This command has no parameters.

Example

rtrv-rmt-appl

Dependencies

None

Notes

None

Output**rtrv-rmt-appl**

```

rlghncxa03w 05-01-07 12:05:33 EST EAGLE 31.12.0
  IPCA          SI SSN
  003-003-003   3 100, 110-119, 200
                  5
  IPCI          SI SSN
  3-003-3       3 5, 50-100, 250
                  5

  IPCN          SI SSN
  16380         3 250
                  5

  IPCN24        SI SSN
  100-200-100   5

```

;

rtrv-rmt-appl

```

rlghncxa03w 05-01-07 12:05:33 EST EAGLE 31.12.0
  IPCA          SI SSN
  p-001-001-001 3 5-102

  IPCI          SI SSN
  ps-2-002-2    5

  IPCN          SI SSN
  s-16380       3 250

  IPCN24        SI SSN

```

;

Legend**IPC/IPCA/IPCI/PCN/PCN24**—End node's internal point code.**SI**—Service indicator value that designates which user part is assigned to the IPC.**SSN**—SCCP subsystem number.

Point code subtype prefixes—

s- Spare point code**p-** Private point code**ps-** Private and spare point code**rtrv-rte****Retrieve Route**

This command is used to display the parameter information for the route entries in the database.

Asterisks can be specified to select and display only point codes that have the same point code subfields. See the "Notes" section for this command for details.

Keyword: rtrv-rte

Related Commands: dlt-rte, ent-rte, rept-stat-dstn

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:cli= (optional)

Common Language Location Identifier. This parameter specifies the Common Language Location Identifier assigned to the link.

Range: ayyyyyyyyyy

1 alphabetic character followed by 10 alphanumeric characters

Default: No value given

:dpc= (optional)

ANSI destination point code with subfields network indicator-network cluster-network cluster member (*ni-nc-ncm*). The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: dpca

Range: p-, 000-255, *, **, ***

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

The asterisk values *, **, and *** are not valid for the *ni* subfield.

If ** or *** is specified for the *nc* subfield, either *, **, or *** must be specified for the *ncm* subfield.

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001-005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006-255.

When **chg-sid:pctype=ansi** is specified, *ni*-*- is valid if *ni* = 006-255.

The point code 000-000-000 is not a valid point code.

:dpc/dpca/dpci/dpcn/dpcn24= (optional)

Destination point code.

:dpci= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: s-, p-, ps-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-, p-, ps-

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

:dpcn= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc, m1-*

m2-m3-m4-gc). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz, ***

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

An asterisk (*) can be specified for the node (*nnnnn* or every member of a flexible point code) or for the group code (*gc*) only when group codes are present in the point codes.

An asterisk (*) can be specified either for the node or for the group code, but not both.

prefix—**s-, p-, ps-**

nnnnn—**0-16383, ***

gc—**aa-zz, ***

m1-m2-m3-m4—**0-14** for each member; values must sum to 14; or ***-*-*-*** when the point code includes a group code.

:dpcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*. The *prefix* indicates a private point code (*prefix-msa-ssa-sp*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:lsn= (optional)

Linkset name

Range: *aaaaaaaa*

1 alphabetic character followed by up to 9 alphanumeric characters

Default: Display all

:pcst= (optional)

Point code subtype. If selected, this parameter causes the command to display only the point codes that have no subtype prefix, or display only the point codes that have the specified subtype prefix.

Range: **none, s, p, ps**

none— Display all point codes that do not have subtype prefixes

s— Display only spare point codes

p— Display only private point codes

ps— Display only private and spare point codes

:pctype= (optional)

Point code domain. This parameter causes the command to display only the point codes of the specified domain type.

Range: **ansi, itui, itun, itun24**

Example

```
rtrv-rte
```

```
rtrv-rte:dpc=240-012-004:lsn=ls000001
```

```
rtrv-rte:clli=dp1:lsn=ls000001
```

```
rtrv-rte:dpc=140-012-008
```

```
rtrv-rte:clli=dp1rtrv-rte
```

```

rtrv-rte:dpcn=3-15-15-15-fr
rtrv-rte:lsn=e1m3itun
rtrv-rte:dpcn24=10-100-14
rtrv-rte:pcst=s
rtrv-rte:pcst=none
rtrv-rte:pctype=ansi
rtrv-rte:pctype=itun24:pcst=none
rtrv-rte:dpc=1-1-**
rtrv-rte:dpc=1-1-***
rtrv-rte:dpc=1-**-*
rtrv-rte:dpc=1-***-*
rtrv-rte:dpc=1-**-*:lsn=ab64
rtrv-rte:dpc=1-**-*:lsn=xx64
rtrv-rte:dpcn=1000-*
rtrv-rte:dpcn=1000-*:lsn=dpcn64
rtrv-rte:dpcn=p-*aa
rtrv-rte:dpcn=s-9000-*

```

Dependencies

The value of the **dcp/dpca/dpci/dpcn/dpcn24** parameter must exist in the Destination Point Code table.

If the **dpc** and **lsn** parameters are specified, the linkset name must be defined as a route.

If the **dpcn** parameter is specified, its format must match the format that was assigned with the **chg-stpopts** command **npcfmti** parameter.

If the **pctype** parameter has a value of **ansi** or **itun24**, then the **pcst** parameter cannot have a value of **s** or **ps**.

The **pctype** and **pcst** parameters cannot be specified in the same command with the destination point code, alias point code, secondary point code, **cli**, **msar=only**, and **ncai** parameters. If the **rset** parameter is specified, then the **rsn**, **dpc**, **cli**, **pctype**, and **pcst** parameters cannot be specified.

The NRT feature must be turned on before the **dpc/dpca/dpci/dpcn/dpcn24** parameter can be specified.

When using network routing, if the destination point code has a value of ***** in the NC field, the NCM field must also be ***** (for example, **dpc=21-*-***).

The value of the **dcp/dpca/dpci/dpcn/dpcn24** parameter must be a valid point code.

If the **cilli** parameter is specified, then the value must exist in the Route table.

All link sets currently assigned to a route set must still be equipped.

All link sets must be defined in the route set.

The Route table is corrupt or cannot be found.

Notes

This command can be canceled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (**s-**) and the private and spare point code subtype prefix (**ps-**). All of the point code types support the private (internal) point code subtype prefix (**p-**).

Asterisks in ANSI Point Codes

Two asterisks in the *ncm* subfield of a cluster point code produces a summary report that shows all point code destinations residing in the given cluster (for example, **20-2-****). This does not include the specified cluster point code (for example, **20-2-***).

Three asterisks in the *ncm* subfield of a cluster point code (for example, **20-2-*****) produces a summary report that shows all point code destinations residing in the given network cluster. The specified cluster point code is also displayed if it exists.

If the linkset name is specified (**lsn** parameter) and the **dpc/dpca** parameter *ncm* subfield is specified with asterisks, all route entries are displayed that have the specified linkset and that match the specified **dpc/dpca** parameter subfield values.

Asterisks in ITU-N Duplicate Point Codes and Flexible Format Point Codes

When the ITU Duplicate Point Code (ITUDUPPC) feature is on,

- An asterisk (*) can be specified for the group code of an ITU-N duplicate point code to display all ITU-N point codes that have the specified node value (for example, **10101-***).
- An asterisk (*) can be specified for the node of an ITU-N duplicate point code to display all ITU-N point codes that have the specified group code value (for example, ***-ab**).

When the ITUDUPPC feature is on and the STP flexible point code option (**npcfmti**) is used to change the ITU-N point format to four members (*m1-m2-m3-m4-gc*),

- An asterisk (*) can be specified for the group code of an ITU-N flexible point code to display all ITU-N point codes that have the specified point code value (for example, **15-15-15-3-***).
- An asterisk (*) can be specified for every member of the ITU-N flexible point code to display all ITU-N flexible point codes that have the same group code (for example, ***-*-*-ab** is valid; ***-15-*-*-ab** is not valid).

Output

In the **rtrv-rte** command output examples, the point code prefixes **s-**, **p-**, and **ps-** indicate that the point code is a spare point code, a private point code, or a private and spare point, respectively. The following example displays the output when the Route table is provisioned.

rtrv-rte

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

DPCA	ALIASI	ALIASN/N24 LSN	RTX RC	CLLI APCA
001-001-000	-----	-----	No	stp1
		e2e1	10	001-001-000
003-001-000	-----	-----	No	mstp
		e2e3	10	003-001-000
004-001-000	-----	-----	No	stp4
		e2e4	10	004-001-000
007-001-000	-----	-----	No	stp7
		e2e7	10	007-001-000
002-101-001	-----	-----	No	ssp201
		e2m1s1	10	002-101-001
		e2e3	20	003-001-000
002-102-001	-----	-----	No	ssp202
		e2m1s2	10	002-102-001
		e2e3	20	003-001-000
001-101-001	-----	-----	No	ssp101
		e2e1	10	001-001-000
		e2e4	20	004-001-000
		e2e3	30	003-001-000
003-101-001	-----	-----	No	ssp301
		e2m1s3	10	003-101-001
		e2e3	20	003-001-000
004-101-001	-----	-----	No	ssp401
		e2e4	10	004-001-000
		e2e1	20	001-001-000
007-101-001	-----	-----	No	ssp701
		e2e7	10	007-001-000
100-100-*	-----	-----	No	cluster1
		e2e1	10	001-001-000
		e2e3	20	003-001-000
100-100-001	-----	-----	No	-----
		e2e1	10	001-001-000
200-200-*	-----	-----	No	cluster2
005-006-001	-----	005-006-001	No	-----
001-001-001	-----	-----	No	dstn01
		lsn01	10	001-001-001
p-001-001-001	-----	-----	No	dstn01p
001-001-002	1-001-2	-----	No	dstn02
		lsn02	10	001-001-002
p-001-001-002	1-011-2	-----	No	dstn02p
001-001-003	s-1-001-3	-----	No	dstn03
		lsn03	10	001-001-003
p-001-001-003	s-1-011-3	-----	No	dstn03p
001-001-004	-----	02060-aa	No	dstn04
		lsn04	10	001-001-004
p-001-001-004	-----	01060-aa	No	dstn04p
001-070-001	-----	-----	No	tgtansi001
		lsn01	10	001-001-001
		lsn02	20	001-001-002
		lsn03	30	001-001-003
		lsn04	40	001-001-004
001-001-005	-----	s-02061-aa	No	dstn05
		lsn05	10	001-001-005
p-001-001-005	-----	s-01061-aa	No	dstn05p
001-001-006	-----	001-001-006	No	dstn06

		lsn06	10	001-001-006
p-001-001-006	-----	001-011-006	No	dstn06p
001-001-007	1-001-7	02063-aa	No	dstn07
		lsn07	10	001-001-007
p-001-001-007	1-011-7	01063-aa	No	dstn07p
001-002-000	1-002-0	s-02064-aa	No	dstn08
		lsn08	10	001-002-000
p-001-002-000	1-012-0	s-01064-aa	No	dstn08p
001-070-002	-----	-----	No	tgtansi002
		lsn05	10	001-001-005
		lsn06	20	001-001-006
		lsn07	30	001-001-007
		lsn08	40	001-002-000
001-002-001	s-1-002-1	02065-aa	No	dstn09
		lsn09	10	001-002-001
p-001-002-001	s-1-012-1	01065-aa	No	dstn09p
001-002-002	s-1-002-2	s-02066-aa	No	dstn10
		lsn10	10	001-002-002
p-001-002-002	s-1-012-2	s-01066-aa	No	dstn10p
001-002-003	1-002-3	001-002-003	No	dstn11
		lsn11	10	001-002-003
p-001-002-003	1-012-3	001-012-003	No	dstn11p
001-002-004	s-1-002-4	001-002-004	No	dstn12
		lsn12	10	001-002-004
p-001-002-004	s-1-012-4	001-012-004	No	dstn12p
001-070-003	-----	-----	No	tgtansi003
		lsn09	10	001-002-001
		lsn10	20	001-002-002
		lsn11	30	001-002-003
		lsn12	40	001-002-004
200-002-001	-----	-----	Yes	rtxroute001
		lsn12	10	001-002-004
001-015-001	s-1-015-1	02169-aa	No	gx25dstn001
001-015-002	1-015-2	-----	No	gx25dstn002
		lsngx25a01	10	001-015-001
001-015-003	-----	s-02171-aa	No	gx25dstn003
002-015-001	-----	-----	No	gx25dstn004
002-015-002	-----	-----	No	gx25dstn005
002-015-003	-----	-----	No	gx25dstn006
002-015-004	-----	-----	No	gx25dstn007
		lsngx25b01	10	002-015-002
040-001-*	-----	-----	No	myncaibeno
040-010-*	-----	-----	No	myncaibeno2
010-*. *	-----	-----	No	-----
040-*. *	-----	-----	No	-----
040-001-001	-----	-----	No	noncluster1
040-001-002	-----	-----	No	noncluster2
DPCI	ALIASA	ALIASN/N24	RTX	CLLI
		LSN	RC	APCI
s-4-002-0	010-001-001	s-08228-aa	No	-----
2-010-0	-----	-----	No	dstn13
		lsn13	10	2-010-0
p-2-010-0	-----	-----	No	dstn13p
2-010-1	002-010-001	-----	No	dstn14
		lsn14	10	2-010-1
p-2-010-1	002-100-001	-----	No	dstn14p
2-010-2	-----	04178-aa	No	dstn15
		lsn15	10	2-010-2
p-2-010-2	-----	08178-aa	No	dstn15p
2-010-3	-----	s-04179-aa	No	dstn16
		lsn16	10	2-010-3
p-2-010-3	-----	s-08179-aa	No	dstn16p
2-070-1	-----	-----	No	tgtitui001
		lsn13	10	2-010-0

		lsn14	20	2-010-1
		lsn15	30	2-010-2
		lsn16	40	2-010-3
2-010-4	-----	002-010-004	No	dstn17
		lsn17	10	2-010-4
p-2-010-4	-----	002-100-004	No	dstn17p
2-010-5	002-010-005	04181-aa	No	dstn18
		lsn18	10	2-010-5
p-2-010-5	002-100-005	08181-aa	No	dstn18p
2-010-6	002-010-006	s-04182-aa	No	dstn19
		lsn19	10	2-010-6
p-2-010-6	002-100-006	s-08182-aa	No	dstn19p
2-010-7	002-010-007	002-010-007	No	dstn20
		lsn20	10	2-010-7
p-2-010-7	002-100-007	002-100-007	No	dstn20p
2-070-2	-----	-----	No	tgtitui002
		lsn17	10	2-010-4
		lsn18	20	2-010-5
		lsn19	30	2-010-6
		lsn20	40	2-010-7
s-2-020-0	-----	-----	No	dstn21
		lsn21	10	s-2-020-0
ps-2-020-0	-----	-----	No	dstn21p
s-2-020-1	002-020-001	-----	No	dstn22
		lsn22	10	s-2-020-1
ps-2-020-1	002-200-001	-----	No	dstn22p
s-2-020-2	-----	04258-aa	No	dstn23
		lsn23	10	s-2-020-2
ps-2-020-2	-----	08258-aa	No	dstn23p
s-2-020-3	-----	s-04259-aa	No	dstn24
		lsn24	10	s-2-020-3
ps-2-020-3	-----	s-08259-aa	No	dstn24p
s-2-070-3	-----	-----	No	tgtitui003
		lsn21	10	s-2-020-0
		lsn22	20	s-2-020-1
		lsn23	30	s-2-020-2
		lsn24	40	s-2-020-3
s-2-020-4	-----	002-020-004	No	dstn25
		lsn25	10	s-2-020-4
ps-2-020-4	-----	002-200-004	No	dstn25p
s-2-020-5	002-020-005	04261-aa	No	dstn26
		lsn26	10	s-2-020-5
ps-2-020-5	-----	-----	No	dstn26p
s-2-020-6	002-020-006	s-04262-aa	No	dstn27
		lsn27	10	s-2-020-6
ps-2-020-6	002-200-005	08261-aa	No	dstn27p
s-2-020-7	002-020-007	002-020-007	No	dstn28
		lsn28	10	s-2-020-7
ps-2-020-7	002-200-007	002-200-007	No	dstn28p
s-2-070-4	-----	-----	No	tgtitui004
		lsn25	10	s-2-020-4
		lsn26	20	s-2-020-5
		lsn27	30	s-2-020-6
		lsn28	40	s-2-020-7
s-3-070-3	-----	-----	No	tgtitui007
		lsn35	10	s-3-040-2
		lsn36	20	s-3-040-3
		lsn37	30	s-3-040-4
s-3-070-4	-----	-----	No	tgtitui008
		lsn38	10	s-3-040-5
		lsn39	20	s-3-040-6
		lsn40	30	s-3-040-7
s-2-029-6	002-029-006	s-04269-aa	Yes	rtxroute002
		lsn26	5	s-2-020-5

DPCI	ALIASI	ALIASN/N24 LSN	RTX RC	CLLI APCI
3-030-0	s-3-030-0	----- lsn29	No 10	dstn29 3-030-0
p-3-030-0	s-3-031-0	-----	No	dstn29p
3-030-1	s-3-030-1	06385-aa lsn30	No 10	dstn30 3-030-1
p-3-030-1	s-3-031-1	07385-aa	No	dstn30p
3-030-2	s-3-030-2	s-06386-aa lsn31	No 10	dstn31 3-030-2
p-3-030-2	s-3-031-2	s-07386-aa	No	dstn31p
3-070-1	s-3-070-1	----- lsn29	No 10	tgtitui005 3-030-0
		lsn30	20	3-030-1
		lsn31	30	3-030-2
3-030-3	s-3-030-3	003-030-003 lsn32	No 10	dstn32 3-030-3
p-3-030-3	s-3-031-3	003-031-003	No	dstn32p
3-070-2	s-3-070-2	----- lsn32	No 10	tgtitui006 3-030-3
		lsn33	20	3-030-4
		lsn34	30	3-030-5
s-3-040-2	3-040-2	----- lsn35	No 10	dstn35 s-3-040-2
ps-3-040-2	3-041-2	-----	No	dstn35p
s-3-040-3	3-040-3	06467-aa lsn36	No 10	dstn36 s-3-040-3
ps-3-040-3	3-041-3	07467-aa	No	dstn36p
s-3-040-4	3-040-4	s-06468-aa lsn37	No 10	dstn37 s-3-040-4
ps-3-040-4	3-041-4	s-07468-aa	No	dstn37p
s-3-040-5	3-040-5	003-040-005 lsn38	No 10	dstn38 s-3-040-5
ps-3-040-5	3-041-5	003-041-005	No	dstn38p
DPCI	ALIASN	ALIASN LSN	RTX RC	CLLI APCI
3-030-4	s-06388-aa	06388-aa lsn33	No 10	dstn33 3-030-4
p-3-030-4	s-07388-aa	07388-aa	No	dstn33p
3-030-5	06389-aa	s-06389-aa lsn34	No 10	dstn34 3-030-5
p-3-030-5	07389-aa	s-07389-aa	No	dstn34p
s-3-040-6	s-06471-aa	06471-aa lsn39	No 10	dstn39 s-3-040-6
ps-3-040-6	s-07471-aa	07471-aa	No	dstn39p
s-3-040-7	06472-aa	s-06472-aa lsn40	No 10	dstn40 s-3-040-7
ps-3-040-7	07472-aa	s-07472-aa	No	dstn40p
DPCN	ALIASA	ALIASI LSN	RTX RC	CLLI APCN
06157-aa	020-005-002	-----	No	-----
08192-aa	-----	----- lsn41	No 10	dstn41 08192-aa
p-08192-aa	-----	-----	No	dstn41p
08193-aa	004-000-001	----- lsn42	No 10	dstn42 08193-aa
p-08193-aa	004-200-001	-----	No	dstn42p
08194-aa	-----	4-000-2 lsn43	No 10	dstn43 08194-aa
p-08194-aa	-----	4-040-2	No	dstn43p
08195-aa	-----	s-4-000-3 lsn44	No 10	dstn44 08195-aa
p-08195-aa	-----	s-4-040-3	No	dstn44p

08753-aa	-----	-----	No	tgtitun001
		lsn41	10	08192-aa
		lsn42	20	08193-aa
		lsn43	30	08194-aa
		lsn44	30	08195-aa
08196-aa	004-000-004	4-000-4	No	dstn45
		lsn45	10	08196-aa
p-08196-aa	004-200-004	4-040-4	No	dstn45p
08197-aa	004-000-005	s-4-000-5	No	dstn46
		lsn46	10	08197-aa
p-08197-aa	004-200-005	s-4-040-5	No	dstn46p
08754-aa	-----	-----	No	tgtitun002
		lsn45	10	08196-aa
		lsn46	20	08197-aa
		lsn47	30	08198-aa
		lsn48	30	08199-aa
s-08272-aa	-----	-----	No	dstn49
		lsn49	10	s-08272-aa
ps-08272-aa	-----	-----	No	dstn49p
s-08273-aa	004-010-001	-----	No	dstn50
		lsn50	10	s-08273-aa
ps-08273-aa	004-200-010	-----	No	dstn50p
s-08274-aa	-----	4-010-2	No	dstn51
		lsn51	10	s-08274-aa
ps-08274-aa	-----	4-050-2	No	dstn51p
s-08275-aa	-----	s-4-010-3	No	dstn52
		lsn52	10	s-08275-aa
ps-08275-aa	-----	s-4-050-3	No	dstn52p
s-08755-aa	-----	-----	No	tgtitun003
		lsn49	10	s-08272-aa
		lsn50	20	s-08273-aa
		lsn51	30	s-08274-aa
		lsn52	30	s-08275-aa
s-08276-aa	004-010-004	4-010-4	No	dstn53
		lsn53	10	s-08276-aa
ps-08276-aa	004-200-040	4-050-4	No	dstn53p
s-08277-aa	004-010-005	s-4-010-5	No	dstn54
		lsn54	10	s-08277-aa
ps-08277-aa	004-200-050	s-4-050-5	No	dstn54p
s-08756-aa	-----	-----	No	tgtitun004
		lsn53	10	s-08276-aa
		lsn54	20	s-08277-aa
		lsn55	30	s-08278-aa
		lsn56	30	s-08279-aa
08757-aa	-----	-----	No	tgtitun005
		lsn57	10	12688-aa
		lsn58	20	12689-aa
		lsn59	30	12690-aa
s-08758-aa	-----	-----	No	tgtitun006
		lsn60	10	s-12691-aa
		lsn61	20	s-12692-aa
		lsn62	30	s-12693-aa
08199-fr	-----	s-4-006-1	No	dstn48dupfr
08199-tk	-----	4-006-2	No	dstn48dupTk
08198-nz	-----	-----	No	dstn47dupnz
s-08273-fr	-----	4-006-3	No	dstn50dupfr
DPCN	ALIASI	ALIASI	RTX	CLLI
		LSN	RC	APCN
08198-aa	s-4-000-6	4-000-6	No	dstn47
		lsn47	10	08198-aa
p-08198-aa	s-4-040-6	4-040-6	No	dstn47p
08199-aa	4-000-7	s-4-000-7	No	dstn48
		lsn48	10	08199-aa
p-08199-aa	4-040-7	s-4-040-7	No	dstn48p

s-08278-aa	s-4-010-6	4-010-6	No	dstn55
		lsn55	10	s-08278-aa
ps-08278-aa	s-4-050-6	4-050-6	No	dstn55p
s-08279-aa	4-010-7	s-4-010-7	No	dstn56
		lsn56	10	s-08279-aa
ps-08279-aa	4-050-7	s-4-050-7	No	dstn56p
s-08379-aa	s-4-058-7	4-058-7	Yes	rtxroute003
		lsn55	80	s-08278-aa
08198-fr	s-4-005-7	4-005-7	No	dstn47dupfr
08198-tk	4-006-0	s-4-006-0	No	dstn47dupTk
DPCN	ALIASN	ALIASI	RTX	CLLI
		LSN	RC	APCN
12688-aa	s-12688-aa	-----	No	dstn57
		lsn57	10	12688-aa
p-12688-aa	s-13688-aa	-----	No	dstn57p
12689-aa	s-12689-aa	6-050-1	No	dstn58
		lsn58	10	12689-aa
p-12689-aa	s-13689-aa	6-060-1	No	dstn58p
12690-aa	s-12690-aa	s-6-050-2	No	dstn59
		lsn59	10	12690-aa
p-12690-aa	s-13690-aa	s-6-060-2	No	dstn59p
s-12691-aa	12691-aa	-----	No	dstn60
		lsn60	10	s-12691-aa
ps-12691-aa	13691-aa	-----	No	dstn60p
s-12692-aa	12692-aa	6-050-4	No	dstn61
		lsn61	10	s-12692-aa
ps-12692-aa	13692-aa	6-060-4	No	dstn61p
s-12693-aa	12693-aa	s-6-050-5	No	dstn62
		lsn62	10	s-12693-aa
ps-12693-aa	13693-aa	s-6-060-5	No	dstn62p
s-08272-fr	08300-fr	-----	No	dstn49dupfr
s-08272-tk	08300-tk	4-006-7	No	dstn49dupTk
DPCN24	ALIASA	ALIASI	RTX	CLLI
		LSN	RC	APCN24
003-003-004	003-003-003	3-003-4	No	-----
006-005-001	-----	-----	No	dstn63
		lsn63	10	006-005-001
p-006-005-001	-----	-----	No	dstn63p
006-005-002	006-005-002	-----	No	dstn64
		lsn64	10	006-005-002
p-006-005-002	006-005-020	-----	No	dstn64p
006-005-003	-----	6-005-3	No	dstn65
		lsn65	10	006-005-003
p-006-005-003	-----	6-050-3	No	dstn65p
006-070-001	-----	-----	No	tgtitun24a
		lsn63	10	006-005-001
		lsn64	20	006-005-002
		lsn65	30	006-005-003
006-005-004	-----	s-6-005-4	No	dstn66
		lsn66	10	006-005-004
p-006-005-004	-----	s-6-050-4	No	dstn66p
006-005-005	006-005-005	6-005-5	No	dstn67
		lsn67	10	006-005-005
p-006-005-005	006-005-050	6-050-5	No	dstn67p
006-070-002	-----	-----	No	tgtitun24b
		lsn66	10	006-005-004
		lsn67	20	006-005-005

;

The following example displays the output when the Route table is empty.

rtrv-rte

```
tekelecstp 08-01-01 12:31:35 EST EAGLE 38.0.0
```

```
rtrv-rte
```

```
Command entered at terminal #4.
```

```
No routes meeting the requested criteria were found
```

```
;
```

The following example retrieves a route by linkset name.

rtrv-rte:lsn=e2e1

```
eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0
```

LSN	DPCA	RC
e2e1	001-001-000	10
	001-101-001	10
	004-101-001	20
	100-100-*	10
	100-100-001	10

```
;
```

The following example retrieves a route by linkset name and destination point code.

rtrv-rte:dpc=4-101-1:lsn=e2e1

```
eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0
```

LSN	DPCA	RC
e2e1	004-101-001	20

```
;
```

In the following example, the **chg-stpopts:npcfmti** value is set to 7-4-3.

rtrv-rte:dpcn=127-15-7

```
eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0
```

DPCN	ALIASA	ALIASI	LSN	RC	APCN
127-15-7	-----	-----	ls1	10	100-10-2
			RTX: No	CLLI: -----	

```
;
```

In the following example, the **chg-stpopts:npcfmti** value is set to 11-1-1-1 and the ITUDUPPC feature is on.

rtrv-rte:lsn=ls3

```
eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0
```

LSN	DPCN	RC
lsn47	1024-1-1-0-aa	10
	1094-0-1-0-aa	30

```
;
```

In the following example, the **chg-stpopts:npcfmti** value is set to 2-4-4-4 and the ITUDUPPC feature is on.

rtrv-rte:dpcn=s-2-00-05-00-tk

```
eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0
```

DPCN	ALIASN	ALIASI	RTX	CLLI
		LSN	RC	APCN
s-2-00-05-00-tk	2-00-06-12-tk	4-006-7	No	dstn49dupTk

```
;
```

In the following example, the **chg-stpopts:npcfmti** value is set to **11-1-1-1** and the ITUDUPPC feature is on.

rtrv-rte:lsn=e1m3itun

```
eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0
LSN          DPCN          RC
e1m3itun     2047-1-1-1-pe 10
```

;

The following example contains a route with 24-bit ITU-N point codes.

rtrv-rte:lsn=lsn66

```
eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0
LSN          DPCN24        RC
lsn66        006-005-004   10
              006-070-002   10
```

;

The following example displays ANSI point codes.

rtrv-rte:pctype=ansi

```
eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0
```

DPCA	ALIASI	ALIASN/N24 LSN	RTX RC	CLLI APCA
001-001-000	-----	e2e1	No	stp1
003-001-000	-----	e2e3	No	mstp
004-001-000	-----	e2e4	No	stp4
007-001-000	-----	e2e7	No	stp7
002-101-001	-----	e2m1s1	No	ssp201
		e2e3	10	002-101-001
002-102-001	-----	e2m1s2	No	ssp202
		e2e3	20	003-001-000
001-101-001	-----	e2e1	No	ssp101
		e2e4	10	001-001-000
		e2e3	20	004-001-000
003-101-001	-----	e2e3	30	003-001-000
		e2m1s3	No	ssp301
		e2e3	10	003-101-001
004-101-001	-----	e2e3	20	003-001-000
		e2e4	No	ssp401
		e2e1	10	004-001-000
007-101-001	-----	e2e1	20	001-001-000
		e2e7	No	ssp701
100-100-*	-----	e2e7	10	007-001-000
		e2e1	No	cluster1
		e2e3	10	001-001-000
100-100-001	-----	e2e3	20	003-001-000
		e2e1	No	-----
		e2e1	10	001-001-000
200-200-*	-----	-----	No	cluster2
005-006-001	-----	005-006-001	No	-----
001-001-001	-----	-----	No	dstn01
		lsn01	10	001-001-001
p-001-001-001	-----	-----	No	dstn01p
001-001-002	1-001-2	-----	No	dstn02
		lsn02	10	001-001-002
p-001-001-002	1-011-2	-----	No	dstn02p
001-001-003	s-1-001-3	-----	No	dstn03

		lsn03	10	001-001-003
p-001-001-003	s-1-011-3	-----	No	dstn03p
001-001-004	-----	0257-1-0-0-aa	No	dstn04
		lsn04	10	001-001-004
p-001-001-004	-----	0132-1-0-0-aa	No	dstn04p
001-070-001	-----	-----	No	tgtansi001
		lsn01	10	001-001-001
		lsn02	20	001-001-002
		lsn03	30	001-001-003
		lsn04	40	001-001-004
001-001-005	-----	s-0257-1-0-1-aa	No	dstn05
		lsn05	10	001-001-005
p-001-001-005	-----	s-0132-1-0-1-aa	No	dstn05p
001-001-006	-----	001-001-006	No	dstn06
		lsn06	10	001-001-006
p-001-001-006	-----	001-011-006	No	dstn06p
001-001-007	1-001-7	0257-1-1-1-aa	No	dstn07
		lsn07	10	001-001-007
p-001-001-007	1-011-7	0132-1-1-1-aa	No	dstn07p
001-002-000	1-002-0	s-0258-0-0-0-aa	No	dstn08
		lsn08	10	001-002-000
p-001-002-000	1-012-0	s-0133-0-0-0-aa	No	dstn08p
001-070-002	-----	-----	No	tgtansi002
		lsn05	10	001-001-005
		lsn06	20	001-001-006
		lsn07	30	001-001-007
		lsn08	40	001-002-000
001-002-001	s-1-002-1	0258-0-0-1-aa	No	dstn09
		lsn09	10	001-002-001
p-001-002-001	s-1-012-1	0133-0-0-1-aa	No	dstn09p
001-002-002	s-1-002-2	s-0258-0-1-0-aa	No	dstn10
		lsn10	10	001-002-002
p-001-002-002	s-1-012-2	s-0133-0-1-0-aa	No	dstn10p
001-002-003	1-002-3	001-002-003	No	dstn11
		lsn11	10	001-002-003
p-001-002-003	1-012-3	001-012-003	No	dstn11p
001-002-004	s-1-002-4	001-002-004	No	dstn12
		lsn12	10	001-002-004
p-001-002-004	s-1-012-4	001-012-004	No	dstn12p
001-070-003	-----	-----	No	tgtansi003
		lsn09	10	001-002-001
		lsn10	20	001-002-002
		lsn11	30	001-002-003
		lsn12	40	001-002-004
200-002-001	-----	-----	Yes	rtxroute001
		lsn12	10	001-002-004
001-015-001	s-1-015-1	0271-0-0-1-aa	No	gx25dstn001
001-015-002	1-015-2	-----	No	gx25dstn002
		lsngx25a01	10	001-015-001
001-015-003	-----	s-0271-0-1-1-aa	No	gx25dstn003
002-015-001	-----	-----	No	gx25dstn004
002-015-002	-----	-----	No	gx25dstn005
002-015-003	-----	-----	No	gx25dstn006
002-015-004	-----	-----	No	gx25dstn007
		lsngx25b01	10	002-015-002
040-001-*	-----	-----	No	myncaibeno
040-010-*	-----	-----	No	myncaibeno2
010-*-*	-----	-----	No	-----
040-*-*	-----	-----	No	-----
040-001-001	-----	-----	No	noncluster1
040-001-002	-----	-----	No	noncluster2

;

The following example displays ITU-I point codes.

rtrv-rte:pctype=itui

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

DPCI	ALIASA	ALIASN/N24 LSN	RTX RC	CLLI APCI
s-4-002-0	010-001-001	s-1028-1-0-0-aa	No	-----
2-010-0	-----	-----	No	dstn13
		lsn13	10	2-010-0
p-2-010-0	-----	-----	No	dstn13p
2-010-1	002-010-001	-----	No	dstn14
		lsn14	10	2-010-1
p-2-010-1	002-100-001	-----	No	dstn14p
2-010-2	-----	0522-0-1-0-aa	No	dstn15
		lsn15	10	2-010-2
p-2-010-2	-----	1022-0-1-0-aa	No	dstn15p
2-010-3	-----	s-0522-0-1-1-aa	No	dstn16
		lsn16	10	2-010-3
p-2-010-3	-----	s-1022-0-1-1-aa	No	dstn16p
2-070-1	-----	-----	No	tgtitui001
		lsn13	10	2-010-0
		lsn14	20	2-010-1
		lsn15	30	2-010-2
		lsn16	40	2-010-3
2-010-4	-----	002-010-004	No	dstn17
		lsn17	10	2-010-4
p-2-010-4	-----	002-100-004	No	dstn17p
2-010-5	002-010-005	0522-1-0-1-aa	No	dstn18
		lsn18	10	2-010-5
p-2-010-5	002-100-005	1022-1-0-1-aa	No	dstn18p
2-010-6	002-010-006	s-0522-1-1-0-aa	No	dstn19
		lsn19	10	2-010-6
p-2-010-6	002-100-006	s-1022-1-1-0-aa	No	dstn19p
2-010-7	002-010-007	002-010-007	No	dstn20
		lsn20	10	2-010-7
p-2-010-7	002-100-007	002-100-007	No	dstn20p
2-070-2	-----	-----	No	tgtitui002
		lsn17	10	2-010-4
		lsn18	20	2-010-5
		lsn19	30	2-010-6
		lsn20	40	2-010-7
s-2-020-0	-----	-----	No	dstn21
		lsn21	10	s-2-020-0
ps-2-020-0	-----	-----	No	dstn21p
s-2-020-1	002-020-001	-----	No	dstn22
		lsn22	10	s-2-020-1
ps-2-020-1	002-200-001	-----	No	dstn22p
s-2-020-2	-----	0532-0-1-0-aa	No	dstn23
		lsn23	10	s-2-020-2
ps-2-020-2	-----	1032-0-1-0-aa	No	dstn23p
s-2-020-3	-----	s-0532-0-1-1-aa	No	dstn24
		lsn24	10	s-2-020-3
ps-2-020-3	-----	s-1032-0-1-1-aa	No	dstn24p
s-2-070-3	-----	-----	No	tgtitui003
		lsn21	10	s-2-020-0
		lsn22	20	s-2-020-1
		lsn23	30	s-2-020-2
		lsn24	40	s-2-020-3
s-2-020-4	-----	002-020-004	No	dstn25
		lsn25	10	s-2-020-4
ps-2-020-4	-----	002-200-004	No	dstn25p
s-2-020-5	002-020-005	0532-1-0-1-aa	No	dstn26
		lsn26	10	s-2-020-5
ps-2-020-5	-----	-----	No	dstn26p
s-2-020-6	002-020-006	s-0532-1-1-0-aa	No	dstn27

		lsn27	10	s-2-020-6
ps-2-020-6	002-200-005	1032-1-0-1-aa	No	dstn27p
s-2-020-7	002-020-007	002-020-007	No	dstn28
		lsn28	10	s-2-020-7
ps-2-020-7	002-200-007	002-200-007	No	dstn28p
s-2-070-4	-----	-----	No	tgtitui004
		lsn25	10	s-2-020-4
		lsn26	20	s-2-020-5
		lsn27	30	s-2-020-6
		lsn28	40	s-2-020-7
s-3-070-3	-----	-----	No	tgtitui007
		lsn35	10	s-3-040-2
		lsn36	20	s-3-040-3
		lsn37	30	s-3-040-4
s-3-070-4	-----	-----	No	tgtitui008
		lsn38	10	s-3-040-5
		lsn39	20	s-3-040-6
		lsn40	30	s-3-040-7
s-2-029-6	002-029-006	s-0533-1-0-1-aa	Yes	rtxroute002
		lsn26	5	s-2-020-5
DPCI	ALIASI	ALIASN/N24	RTX	CLLI
		LSN	RC	APCI
3-030-0	s-3-030-0	-----	No	dstn29
		lsn29	10	3-030-0
p-3-030-0	s-3-031-0	-----	No	dstn29p
3-030-1	s-3-030-1	0798-0-0-1-aa	No	dstn30
		lsn30	10	3-030-1
p-3-030-1	s-3-031-1	0923-0-0-1-aa	No	dstn30p
3-030-2	s-3-030-2	s-0798-0-1-0-aa	No	dstn31
		lsn31	10	3-030-2
p-3-030-2	s-3-031-2	s-0923-0-1-0-aa	No	dstn31p
3-070-1	s-3-070-1	-----	No	tgtitui005
		lsn29	10	3-030-0
		lsn30	20	3-030-1
		lsn31	30	3-030-2
3-030-3	s-3-030-3	003-030-003	No	dstn32
		lsn32	10	3-030-3
p-3-030-3	s-3-031-3	003-031-003	No	dstn32p
3-070-2	s-3-070-2	-----	No	tgtitui006
		lsn32	10	3-030-3
		lsn33	20	3-030-4
		lsn34	30	3-030-5
s-3-040-2	3-040-2	-----	No	dstn35
		lsn35	10	s-3-040-2
ps-3-040-2	3-041-2	-----	No	dstn35p
s-3-040-3	3-040-3	0808-0-1-1-aa	No	dstn36
		lsn36	10	s-3-040-3
ps-3-040-3	3-041-3	0933-0-1-1-aa	No	dstn36p
s-3-040-4	3-040-4	s-0808-1-0-0-aa	No	dstn37
		lsn37	10	s-3-040-4
ps-3-040-4	3-041-4	s-0933-1-0-0-aa	No	dstn37p
s-3-040-5	3-040-5	003-040-005	No	dstn38
		lsn38	10	s-3-040-5
ps-3-040-5	3-041-5	003-041-005	No	dstn38p
DPCI	ALIASN	ALIASN	RTX	CLLI
		LSN	RC	APCI
3-030-4	s-0798-1-0-0-aa	0798-1-0-0-aa	No	dstn33
		lsn33	10	3-030-4
p-3-030-4	s-0923-1-0-0-aa	0923-1-0-0-aa	No	dstn33p
3-030-5	0798-1-0-1-aa	s-0798-1-0-1-aa	No	dstn34
		lsn34	10	3-030-5
p-3-030-5	0923-1-0-1-aa	s-0923-1-0-1-aa	No	dstn34p
s-3-040-6	s-0808-1-1-1-aa	0808-1-1-1-aa	No	dstn39

```

                lsn39      10 s-3-040-6
ps-3-040-6      s-0933-1-1-1-aa 0933-1-1-1-aa No dstn39p
s-3-040-7      0809-0-0-0-aa s-0809-0-0-0-aa No dstn40
                lsn40      10 s-3-040-7
ps-3-040-7      0934-0-0-0-aa s-0934-0-0-0-aa No dstn40p

```

;

The following example displays ITU-N point codes.

rtrv-rte:pctype=itun

```
eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0
```

DPCN	ALIASA	ALIASI LSN	RTX RC	CLLI APCN
06157-aa	020-005-002	-----	No	-----
08192-aa	-----	-----	No	dstn41
		lsn41	10	08192-aa
p-08192-aa	-----	-----	No	dstn41p
08193-aa	004-000-001	-----	No	dstn42
		lsn42	10	08193-aa
p-08193-aa	004-200-001	-----	No	dstn42p
08194-aa	-----	4-000-2	No	dstn43
		lsn43	10	08194-aa
p-08194-aa	-----	4-040-2	No	dstn43p
08195-aa	-----	s-4-000-3	No	dstn44
		lsn44	10	08195-aa
p-08195-aa	-----	s-4-040-3	No	dstn44p
08753-aa	-----	-----	No	tgtitun001
		lsn41	10	08192-aa
		lsn42	20	08193-aa
		lsn43	30	08194-aa
		lsn44	30	08195-aa
08196-aa	004-000-004	4-000-4	No	dstn45
		lsn45	10	08196-aa
p-08196-aa	004-200-004	4-040-4	No	dstn45p
08197-aa	004-000-005	s-4-000-5	No	dstn46
		lsn46	10	08197-aa
p-08197-aa	004-200-005	s-4-040-5	No	dstn46p
08754-aa	-----	-----	No	tgtitun002
		lsn45	10	08196-aa
		lsn46	20	08197-aa
		lsn47	30	08198-aa
		lsn48	30	08199-aa
s-08272-aa	-----	-----	No	dstn49
		lsn49	10	s-08272-aa
ps-08272-aa	-----	-----	No	dstn49p
s-08273-aa	004-010-001	-----	No	dstn50
		lsn50	10	s-08273-aa
ps-08273-aa	004-200-010	-----	No	dstn50p
s-08274-aa	-----	4-010-2	No	dstn51
		lsn51	10	s-08274-aa
ps-08274-aa	-----	4-050-2	No	dstn51p
s-08275-aa	-----	s-4-010-3	No	dstn52
		lsn52	10	s-08275-aa
ps-08275-aa	-----	s-4-050-3	No	dstn52p
s-08755-aa	-----	-----	No	tgtitun003
		lsn49	10	s-08272-aa
		lsn50	20	s-08273-aa
		lsn51	30	s-08274-aa
		lsn52	30	s-08275-aa
s-08276-aa	004-010-004	4-010-4	No	dstn53
		lsn53	10	s-08276-aa
ps-08276-aa	004-200-040	4-050-4	No	dstn53p
s-08277-aa	004-010-005	s-4-010-5	No	dstn54
		lsn54	10	s-08277-aa
ps-08277-aa	004-200-050	s-4-050-5	No	dstn54p

s-08756-aa	-----	-----	No	tgtitun004
		lsn53	10	s-08276-aa
		lsn54	20	s-08277-aa
		lsn55	30	s-08278-aa
		lsn56	30	s-08279-aa
08757-aa	-----	-----	No	tgtitun005
		lsn57	10	12688-aa
		lsn58	20	12689-aa
		lsn59	30	12690-aa
s-08758-aa	-----	-----	No	tgtitun006
		lsn60	10	s-12691-aa
		lsn61	20	s-12692-aa
		lsn62	30	s-12693-aa
08199-fr	-----	s-4-006-1	No	dstn48dupfr
08199-tk	-----	4-006-2	No	dstn48dupTk
08198-nz	-----	-----	No	dstn47dupnz
s-08273-fr	-----	4-006-3	No	dstn50dupfr
DPCN	ALIASI	ALIASI	RTX	CLLI
		LSN	RC	APCN
08198-aa	s-4-000-6	4-000-6	No	dstn47
		lsn47	10	08198-aa
p-08198-aa	s-4-040-6	4-040-6	No	dstn47p
08199-aa	4-000-7	s-4-000-7	No	dstn48
		lsn48	10	08199-aa
p-08199-aa	4-040-7	s-4-040-7	No	dstn48p
s-08278-aa	s-4-010-6	4-010-6	No	dstn55
		lsn55	10	s-08278-aa
ps-08278-aa	s-4-050-6	4-050-6	No	dstn55p
s-08279-aa	4-010-7	s-4-010-7	No	dstn56
		lsn56	10	s-08279-aa
ps-08279-aa	4-050-7	s-4-050-7	No	dstn56p
s-08379-aa	s-4-058-7	4-058-7	Yes	rtxroute003
		lsn55	80	s-08278-aa
08198-fr	s-4-005-7	4-005-7	No	dstn47dupfr
08198-tk	4-006-0	s-4-006-0	No	dstn47dupTk
DPCN	ALIASN	ALIASI	RTX	CLLI
		LSN	RC	APCN
12688-aa	s-12688-aa	-----	No	dstn57
		lsn57	10	12688-aa
p-12688-aa	s-13688-aa	-----	No	dstn57p
12689-aa	s-12689-aa	6-050-1	No	dstn58
		lsn58	10	12689-aa
p-12689-aa	s-13689-aa	6-060-1	No	dstn58p
12690-aa	s-12690-aa	s-6-050-2	No	dstn59
		lsn59	10	12690-aa
p-12690-aa	s-13690-aa	s-6-060-2	No	dstn59p
s-12691-aa	12691-aa	-----	No	dstn60
		lsn60	10	s-12691-aa
ps-12691-aa	13691-aa	-----	No	dstn60p
s-12692-aa	12692-aa	6-050-4	No	dstn61
		lsn61	10	s-12692-aa
ps-12692-aa	13692-aa	6-060-4	No	dstn61p
s-12693-aa	12693-aa	s-6-050-5	No	dstn62
		lsn62	10	s-12693-aa
ps-12693-aa	13693-aa	s-6-060-5	No	dstn62p
s-08272-fr	08300-fr	-----	No	dstn49dupfr
s-08272-tk	08300-tk	4-006-7	No	dstn49dupTk

;

The following example displays ANSI point codes that have the private point code subtype prefix (p-).

rtrv-rte:pctype=ansi:pcst=p

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

DPCA	ALIASI	ALIASN/N24 LSN	RTX RC	CLLI APCA
p-001-001-001	-----	-----	No	dstn01p
p-001-001-002	1-011-2	-----	No	dstn02p
p-001-001-003	s-1-011-3	-----	No	dstn03p
p-001-001-004	-----	01060-aa	No	dstn04p
p-001-001-005	-----	s-01061-aa	No	dstn05p
p-001-001-006	-----	001-011-006	No	dstn06p
p-001-001-007	1-011-7	01063-aa	No	dstn07p
p-001-002-000	1-012-0	s-01064-aa	No	dstn08p
p-001-002-001	s-1-012-1	01065-aa	No	dstn09p
p-001-002-002	s-1-012-2	s-01066-aa	No	dstn10p
p-001-002-003	1-012-3	001-012-003	No	dstn11p
p-001-002-004	s-1-012-4	001-012-004	No	dstn12p

;

The following example displays ITU-I point codes that have the private and spare point code subtype prefix (ps-).

rtrv-rte:pctype=itui:pcst=ps

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

DPCI	ALIASA	ALIASN/N24 LSN	RTX RC	CLLI APCI
ps-2-020-0	-----	-----	No	dstn21p
ps-2-020-1	002-200-001	-----	No	dstn22p
ps-2-020-2	-----	08258-aa	No	dstn23p
ps-2-020-3	-----	s-08259-aa	No	dstn24p
ps-2-020-4	-----	002-200-004	No	dstn25p
ps-2-020-5	-----	-----	No	dstn26p
ps-2-020-6	002-200-005	08261-aa	No	dstn27p
ps-2-020-7	002-200-007	002-200-007	No	dstn28p

DPCI	ALIASI	ALIASN/N24 LSN	RTX RC	CLLI APCI
ps-3-040-2	3-041-2	-----	No	dstn35p
ps-3-040-3	3-041-3	07467-aa	No	dstn36p
ps-3-040-4	3-041-4	s-07468-aa	No	dstn37p
ps-3-040-5	3-041-5	003-041-005	No	dstn38p

DPCI	ALIASN	ALIASN LSN	RTX RC	CLLI APCI
ps-3-040-6	s-07471-aa	07471-aa	No	dstn39p
ps-3-040-7	07472-aa	s-07472-aa	No	dstn40p

;

The following example displays ITU-N point codes that have the spare point code subtype prefix (s-).

rtrv-rte:pctype=itun:pcst=s

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

DPCN	ALIASA	ALIASI LSN	RTX RC	CLLI APCN
s-08272-aa	-----	-----	No	dstn49
		lsn49	10	s-08272-aa
s-08273-aa	004-010-001	-----	No	dstn50
		lsn50	10	s-08273-aa
s-08274-aa	-----	4-010-2	No	dstn51

s-08275-aa	-----	lsn51	10	s-08274-aa
		s-4-010-3	No	dstn52
s-08755-aa	-----	lsn52	10	s-08275-aa
		-----	No	tgtitun003
		lsn49	10	s-08272-aa
		lsn50	20	s-08273-aa
		lsn51	30	s-08274-aa
		lsn52	30	s-08275-aa
s-08276-aa	004-010-004	4-010-4	No	dstn53
		lsn53	10	s-08276-aa
s-08277-aa	004-010-005	s-4-010-5	No	dstn54
		lsn54	10	s-08277-aa
s-08756-aa	-----	-----	No	tgtitun004
		lsn53	10	s-08276-aa
		lsn54	20	s-08277-aa
		lsn55	30	s-08278-aa
		lsn56	30	s-08279-aa
s-08758-aa	-----	-----	No	tgtitun006
		lsn60	10	s-12691-aa
		lsn61	20	s-12692-aa
		lsn62	30	s-12693-aa
s-08273-fr	-----	4-006-3	No	dstn50dupfr
DPCN	ALIASI	ALIASI	RTX	CLLI
		LSN	RC	APCN
s-08278-aa	s-4-010-6	4-010-6	No	dstn55
		lsn55	10	s-08278-aa
s-08279-aa	4-010-7	s-4-010-7	No	dstn56
		lsn56	10	s-08279-aa
s-08379-aa	s-4-058-7	4-058-7	Yes	rtxroute003
		lsn55	80	s-08278-aa
DPCN	ALIASN	ALIASI	RTX	CLLI
		LSN	RC	APCN
s-12691-aa	12691-aa	-----	No	dstn60
		lsn60	10	s-12691-aa
s-12692-aa	12692-aa	6-050-4	No	dstn61
		lsn61	10	s-12692-aa
s-12693-aa	12693-aa	s-6-050-5	No	dstn62
		lsn62	10	s-12693-aa
s-08272-fr	08300-fr	-----	No	dstn49dupfr
s-08272-tk	08300-tk	4-006-7	No	dstn49dupTk

;

The following example displays point codes that have no point code subtype prefix.

rtrv-rte:pcst=none

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

DPCA	ALIASI	ALIASN/N24	RTX	CLLI
		LSN	RC	APCA
001-001-000	-----	-----	No	stp1
		e2e1	10	001-001-000
003-001-000	-----	-----	No	mstp
		e2e3	10	003-001-000
004-001-000	-----	-----	No	stp4
		e2e4	10	004-001-000
007-001-000	-----	-----	No	stp7
		e2e7	10	007-001-000
002-101-001	-----	-----	No	ssp201
		e2m1s1	10	002-101-001
		e2e3	20	003-001-000
002-102-001	-----	-----	No	ssp202
		e2m1s2	10	002-102-001
		e2e3	20	003-001-000
001-101-001	-----	-----	No	ssp101

		e2e1	10	001-001-000
		e2e4	20	004-001-000
		e2e3	30	003-001-000
003-101-001	-----	-----	No	ssp301
		e2m1s3	10	003-101-001
		e2e3	20	003-001-000
004-101-001	-----	-----	No	ssp401
		e2e4	10	004-001-000
		e2e1	20	001-001-000
007-101-001	-----	-----	No	ssp701
		e2e7	10	007-001-000
100-100-*	-----	-----	No	cluster1
		e2e1	10	001-001-000
		e2e3	20	003-001-000
100-100-001	-----	-----	No	-----
		e2e1	10	001-001-000
200-200-*	-----	-----	No	cluster2
005-006-001	-----	005-006-001	No	-----
001-001-001	-----	-----	No	dstn01
		lsn01	10	001-001-001
001-001-002	1-001-2	-----	No	dstn02
		lsn02	10	001-001-002
001-001-003	s-1-001-3	-----	No	dstn03
		lsn03	10	001-001-003
001-001-004	-----	02060	No	dstn04
		lsn04	10	001-001-004
001-070-001	-----	-----	No	tgtansi001
		lsn01	10	001-001-001
		lsn02	20	001-001-002
		lsn03	30	001-001-003
		lsn04	40	001-001-004
001-001-005	-----	s-02061	No	dstn05
		lsn05	10	001-001-005
001-001-006	-----	001-001-006	No	dstn06
		lsn06	10	001-001-006
001-001-007	1-001-7	02063	No	dstn07
		lsn07	10	001-001-007
001-002-000	1-002-0	s-02064	No	dstn08
		lsn08	10	001-002-000
001-070-002	-----	-----	No	tgtansi002
		lsn05	10	001-001-005
		lsn06	20	001-001-006
		lsn07	30	001-001-007
		lsn08	40	001-002-000
001-002-001	s-1-002-1	02065	No	dstn09
		lsn09	10	001-002-001
001-002-002	s-1-002-2	s-02066	No	dstn10
		lsn10	10	001-002-002
001-002-003	1-002-3	001-002-003	No	dstn11
		lsn11	10	001-002-003
001-002-004	s-1-002-4	001-002-004	No	dstn12
		lsn12	10	001-002-004
001-070-003	-----	-----	No	tgtansi003
		lsn09	10	001-002-001
		lsn10	20	001-002-002
		lsn11	30	001-002-003
		lsn12	40	001-002-004
200-002-001	-----	-----	Yes	rtxroute001
		lsn12	10	001-002-004
001-015-001	s-1-015-1	02169	No	gx25dstn001
001-015-002	1-015-2	-----	No	gx25dstn002
		lsngx25a01	10	001-015-001
001-015-003	-----	s-02171	No	gx25dstn003
002-015-001	-----	-----	No	gx25dstn004
002-015-002	-----	-----	No	gx25dstn005

002-015-003	-----	-----	No	gx25dstn006
002-015-004	-----	-----	No	gx25dstn007
		lsngx25b01	10	002-015-002
040-001-*	-----	-----	No	myncaibeno
040-010-*	-----	-----	No	myncaibeno2
010-*-*	-----	-----	No	dstnnrtison
DPCI	ALIASA	ALIASN/N24	RTX	CLLI
		LSN	RC	APCI
2-010-0	-----	-----	No	dstn13
		lsn13	10	2-010-0
2-010-1	002-010-001	-----	No	dstn14
		lsn14	10	2-010-1
2-010-2	-----	04178	No	dstn15
		lsn15	10	2-010-2
2-010-3	-----	s-04179	No	dstn16
		lsn16	10	2-010-3
2-070-1	-----	-----	No	tgtitui001
		lsn13	10	2-010-0
		lsn14	20	2-010-1
		lsn15	30	2-010-2
		lsn16	40	2-010-3
2-010-4	-----	002-010-004	No	dstn17
		lsn17	10	2-010-4
2-010-5	002-010-005	04181	No	dstn18
		lsn18	10	2-010-5
2-010-6	002-010-006	s-04182	No	dstn19
		lsn19	10	2-010-6
2-010-7	002-010-007	002-010-007	No	dstn20
		lsn20	10	2-010-7
2-070-2	-----	-----	No	tgtitui002
		lsn17	10	2-010-4
		lsn18	20	2-010-5
		lsn19	30	2-010-6
		lsn20	40	2-010-7
DPCI	ALIASI	ALIASN/N24	RTX	CLLI
		LSN	RC	APCI
3-030-0	s-3-030-0	-----	No	dstn29
		lsn29	10	3-030-0
3-030-1	s-3-030-1	06385	No	dstn30
		lsn30	10	3-030-1
3-030-2	s-3-030-2	s-06386	No	dstn31
		lsn31	10	3-030-2
3-070-1	s-3-070-1	-----	No	tgtitui005
		lsn29	10	3-030-0
		lsn30	20	3-030-1
		lsn31	30	3-030-2
3-030-3	s-3-030-3	003-030-003	No	dstn32
		lsn32	10	3-030-3
3-070-2	s-3-070-2	-----	No	tgtitui006
		lsn32	10	3-030-3
		lsn33	20	3-030-4
		lsn34	30	3-030-5
DPCI	ALIASN	ALIASN	RTX	CLLI
		LSN	RC	APCI
3-030-4	s-06388	06388	No	dstn33
		lsn33	10	3-030-4
3-030-5	06389	s-06389	No	dstn34
		lsn34	10	3-030-5
DPCN	ALIASA	ALIASI	RTX	CLLI
		LSN	RC	APCN
06157	020-005-002	-----	No	-----

Commands

rtrv-rte

08192	-----	-----	No	dstn41
		lsn41	10	08192
08193	004-000-001	-----	No	dstn42
		lsn42	10	08193
08194	-----	4-000-2	No	dstn43
		lsn43	10	08194
08195	-----	s-4-000-3	No	dstn44
		lsn44	10	08195
08753	-----	-----	No	tgtitun001
		lsn41	10	08192
		lsn42	20	08193
		lsn43	30	08194
		lsn44	30	08195
08196	004-000-004	4-000-4	No	dstn45
		lsn45	10	08196
08197	004-000-005	s-4-000-5	No	dstn46
		lsn46	10	08197
08754	-----	-----	No	tgtitun002
		lsn45	10	08196
		lsn46	20	08197
		lsn47	30	08198
		lsn48	30	08199
08757	-----	-----	No	tgtitun005
		lsn57	10	12688
		lsn58	20	12689
		lsn59	30	12690
DPCN	ALIASI	ALIASI	RTX	CLLI
		LSN	RC	APCN
08198	s-4-000-6	4-000-6	No	dstn47
		lsn47	10	08198
08199	4-000-7	s-4-000-7	No	dstn48
		lsn48	10	08199
DPCN	ALIASN	ALIASI	RTX	CLLI
		LSN	RC	APCN
12688	s-12688	-----	No	dstn57
		lsn57	10	12688
12689	s-12689	6-050-1	No	dstn58
		lsn58	10	12689
12690	s-12690	s-6-050-2	No	dstn59
		lsn59	10	12690
DPCN24	ALIASA	ALIASI	RTX	CLLI
		LSN	RC	APCN24
003-003-004	003-003-003	3-003-4	No	-----
006-005-001	-----	-----	No	dstn63
		lsn63	10	006-005-001
006-005-002	006-005-002	-----	No	dstn64
		lsn64	10	006-005-002
006-005-003	-----	6-005-3	No	dstn65
		lsn65	10	006-005-003
006-070-001	-----	-----	No	tgtitun24a
		lsn63	10	006-005-001
		lsn64	20	006-005-002
		lsn65	30	006-005-003
006-005-004	-----	s-6-005-4	No	dstn66
		lsn66	10	006-005-004
006-005-005	006-005-005	6-005-5	No	dstn67
		lsn67	10	006-005-005
006-070-002	-----	-----	No	tgtitun24b
		lsn66	10	006-005-004
		lsn67	20	006-005-005

;

The following example displays point codes that have the private point code subtype prefix (p-).

rtrv-rte:pcst=p

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

DPCA	ALIASI	ALIASN/N24 LSN	RTX RC	CLLI APCA
p-001-001-001	-----	-----	No	dstn01p
p-001-001-002	1-011-2	-----	No	dstn02p
p-001-001-003	s-1-011-3	-----	No	dstn03p
p-001-001-004	-----	01060-aa	No	dstn04p
p-001-001-005	-----	s-01061-aa	No	dstn05p
p-001-001-006	-----	001-011-006	No	dstn06p
p-001-001-007	1-011-7	01063-aa	No	dstn07p
p-001-002-000	1-012-0	s-01064-aa	No	dstn08p
p-001-002-001	s-1-012-1	01065-aa	No	dstn09p
p-001-002-002	s-1-012-2	s-01066-aa	No	dstn10p
p-001-002-003	1-012-3	001-012-003	No	dstn11p
p-001-002-004	s-1-012-4	001-012-004	No	dstn12p

DPCI	ALIASA	ALIASN/N24 LSN	RTX RC	CLLI APCI
p-2-010-0	-----	-----	No	dstn13p
p-2-010-1	002-100-001	-----	No	dstn14p
p-2-010-2	-----	08178-aa	No	dstn15p
p-2-010-3	-----	s-08179-aa	No	dstn16p
p-2-010-4	-----	002-100-004	No	dstn17p
p-2-010-5	002-100-005	08181-aa	No	dstn18p
p-2-010-6	002-100-006	s-08182-aa	No	dstn19p
p-2-010-7	002-100-007	002-100-007	No	dstn20p

DPCI	ALIASI	ALIASN/N24 LSN	RTX RC	CLLI APCI
p-3-030-0	s-3-031-0	-----	No	dstn29p
p-3-030-1	s-3-031-1	07385-aa	No	dstn30p
p-3-030-2	s-3-031-2	s-07386-aa	No	dstn31p
p-3-030-3	s-3-031-3	003-031-003	No	dstn32p

DPCI	ALIASN	ALIASN LSN	RTX RC	CLLI APCI
p-3-030-4	s-07388-aa	07388-aa	No	dstn33p
p-3-030-5	07389-aa	s-07389-aa	No	dstn34p

DPCN	ALIASA	ALIASI LSN	RTX RC	CLLI APCN
p-08192-aa	-----	-----	No	dstn41p
p-08193-aa	004-200-001	-----	No	dstn42p
p-08194-aa	-----	4-040-2	No	dstn43p
p-08195-aa	-----	s-4-040-3	No	dstn44p
p-08196-aa	004-200-004	4-040-4	No	dstn45p
p-08197-aa	004-200-005	s-4-040-5	No	dstn46p

DPCN	ALIASI	ALIASI LSN	RTX RC	CLLI APCN
p-08198-aa	s-4-040-6	4-040-6	No	dstn47p
p-08199-aa	4-040-7	s-4-040-7	No	dstn48p

DPCN	ALIASN	ALIASI LSN	RTX RC	CLLI APCN
p-12688-aa	s-13688-aa	-----	No	dstn57p
p-12689-aa	s-13689-aa	6-060-1	No	dstn58p
p-12690-aa	s-13690-aa	s-6-060-2	No	dstn59p

DPCN24	ALIASA	ALIASI LSN	RTX RC	CLLI APCN24
p-006-005-001	-----	-----	No	dstn63p

p-006-005-002	006-005-020	-----	No	dstn64p
p-006-005-003	-----	6-050-3	No	dstn65p
p-006-005-004	-----	s-6-050-4	No	dstn66p
p-006-005-005	006-005-050	6-050-5	No	dstn67p

;

The following example displays point codes that have the spare point code subtype prefix (s-).

rtrv-rte:pcst=s

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

DPCI	ALIASA	ALIASN/N24 LSN	RTX RC	CLLI APCI
s-4-002-0	010-001-001	s-08228-aa	No	-----
s-2-020-0	-----	lsn21	No	dstn21
s-2-020-1	002-020-001	-----	No	dstn22
s-2-020-2	-----	lsn22	10	s-2-020-0
s-2-020-3	-----	04258-aa	No	dstn23
s-2-070-3	-----	lsn23	10	s-2-020-2
s-2-020-4	-----	s-04259-aa	No	dstn24
s-2-020-5	002-020-005	lsn24	10	s-2-020-3
s-2-020-6	002-020-006	-----	No	tgtitui003
s-2-020-7	002-020-007	lsn21	10	s-2-020-0
s-2-070-4	-----	lsn22	20	s-2-020-1
s-3-070-3	-----	lsn23	30	s-2-020-2
s-3-070-4	-----	lsn24	40	s-2-020-3
s-2-029-6	002-029-006	002-020-004	No	dstn25
s-3-040-2	3-040-2	lsn25	10	s-2-020-4
s-3-040-3	3-040-3	04261-aa	No	dstn26
s-3-040-4	3-040-4	lsn26	10	s-2-020-5
s-3-040-5	3-040-5	s-04262-aa	No	dstn27
s-3-040-6	s-06471-aa	lsn27	10	s-2-020-6
s-3-040-7	s-06471-aa	002-020-007	No	dstn28
s-3-040-8	s-06471-aa	lsn28	10	s-2-020-7
s-3-040-9	s-06471-aa	-----	No	tgtitui004
s-3-040-10	s-06471-aa	lsn25	10	s-2-020-4
s-3-040-11	s-06471-aa	lsn26	20	s-2-020-5
s-3-040-12	s-06471-aa	lsn27	30	s-2-020-6
s-3-040-13	s-06471-aa	lsn28	40	s-2-020-7
s-3-040-14	s-06471-aa	-----	No	tgtitui007
s-3-040-15	s-06471-aa	lsn35	10	s-3-040-2
s-3-040-16	s-06471-aa	lsn36	20	s-3-040-3
s-3-040-17	s-06471-aa	lsn37	30	s-3-040-4
s-3-040-18	s-06471-aa	-----	No	tgtitui008
s-3-040-19	s-06471-aa	lsn38	10	s-3-040-5
s-3-040-20	s-06471-aa	lsn39	20	s-3-040-6
s-3-040-21	s-06471-aa	lsn40	30	s-3-040-7
s-3-040-22	s-06471-aa	s-04269-aa	Yes	rtxroute002
s-3-040-23	s-06471-aa	lsn26	5	s-2-020-5
s-3-040-24	s-06471-aa	-----	No	dstn35
s-3-040-25	s-06471-aa	lsn35	10	s-3-040-2
s-3-040-26	s-06471-aa	06467-aa	No	dstn36
s-3-040-27	s-06471-aa	lsn36	10	s-3-040-3
s-3-040-28	s-06471-aa	s-06468-aa	No	dstn37
s-3-040-29	s-06471-aa	lsn37	10	s-3-040-4
s-3-040-30	s-06471-aa	003-040-005	No	dstn38
s-3-040-31	s-06471-aa	lsn38	10	s-3-040-5
s-3-040-32	s-06471-aa	-----	No	dstn39
s-3-040-33	s-06471-aa	06471-aa	No	dstn39
s-3-040-34	s-06471-aa	lsn39	10	s-3-040-6

s-3-040-7	06472-aa	s-06472-aa lsn40	No 10	dstn40 s-3-040-7
DPCN	ALIASA	ALIASI LSN	RTX RC	CLLI APCN
s-08272-aa	-----	----- lsn49	No 10	dstn49 s-08272-aa
s-08273-aa	004-010-001	----- lsn50	No 10	dstn50 s-08273-aa
s-08274-aa	-----	4-010-2 lsn51	No 10	dstn51 s-08274-aa
s-08275-aa	-----	s-4-010-3 lsn52	No 10	dstn52 s-08275-aa
s-08755-aa	-----	----- lsn49	No 10	tgtitun003 s-08272-aa
		lsn50	20	s-08273-aa
		lsn51	30	s-08274-aa
		lsn52	30	s-08275-aa
s-08276-aa	004-010-004	4-010-4 lsn53	No 10	dstn53 s-08276-aa
s-08277-aa	004-010-005	s-4-010-5 lsn54	No 10	dstn54 s-08277-aa
s-08756-aa	-----	----- lsn53	No 10	tgtitun004 s-08276-aa
		lsn54	20	s-08277-aa
		lsn55	30	s-08278-aa
		lsn56	30	s-08279-aa
s-08758-aa	-----	----- lsn60	No 10	tgtitun006 s-12691-aa
		lsn61	20	s-12692-aa
		lsn62	30	s-12693-aa
s-08273-fr	-----	4-006-3	No	dstn50dupfr
DPCN	ALIASI	ALIASI LSN	RTX RC	CLLI APCN
s-08278-aa	s-4-010-6	4-010-6 lsn55	No 10	dstn55 s-08278-aa
s-08279-aa	4-010-7	s-4-010-7 lsn56	No 10	dstn56 s-08279-aa
s-08379-aa	s-4-058-7	4-058-7 lsn55	Yes 80	rtxroute003 s-08278-aa
DPCN	ALIASN	ALIASI LSN	RTX RC	CLLI APCN
s-12691-aa	12691-aa	----- lsn60	No 10	dstn60 s-12691-aa
s-12692-aa	12692-aa	6-050-4 lsn61	No 10	dstn61 s-12692-aa
s-12693-aa	12693-aa	s-6-050-5 lsn62	No 10	dstn62 s-12693-aa
s-08272-fr	08300-fr	-----	No	dstn49dupfr
s-08272-tk	08300-tk	4-006-7	No	dstn49dupTk

;

The following example displays point codes that have the private and spare point code subtype prefix (ps-).

rtrv-rte:pcst=ps

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

DPCI	ALIASA	ALIASN/N24 LSN	RTX RC	CLLI APCI
ps-2-020-0	-----	-----	No	dstn21p
ps-2-020-1	002-200-001	-----	No	dstn22p
ps-2-020-2	-----	08258-aa	No	dstn23p

Commands

rtrv-rte

ps-2-020-3	-----	s-08259-aa	No	dstn24p
ps-2-020-4	-----	002-200-004	No	dstn25p
ps-2-020-5	-----		No	dstn26p
ps-2-020-6	002-200-005	08261-aa	No	dstn27p
ps-2-020-7	002-200-007	002-200-007	No	dstn28p

DPCI	ALIASI	ALIASN/N24	RTX	CLLI
		LSN	RC	APCI
ps-3-040-2	3-041-2	-----	No	dstn35p
ps-3-040-3	3-041-3	07467-aa	No	dstn36p
ps-3-040-4	3-041-4	s-07468-aa	No	dstn37p
ps-3-040-5	3-041-5	003-041-005	No	dstn38p

DPCI	ALIASN	ALIASN	RTX	CLLI
		LSN	RC	APCI
ps-3-040-6	s-07471-aa	07471-aa	No	dstn39p
ps-3-040-7	07472-aa	s-07472-aa	No	dstn40p

DPCN	ALIASA	ALIASI	RTX	CLLI
		LSN	RC	APCN
ps-08272-aa	-----	-----	No	dstn49p
ps-08273-aa	004-200-010	-----	No	dstn50p
ps-08274-aa	-----	4-050-2	No	dstn51p
ps-08275-aa	-----	s-4-050-3	No	dstn52p
ps-08276-aa	004-200-040	4-050-4	No	dstn53p
ps-08277-aa	004-200-050	s-4-050-5	No	dstn54p

DPCN	ALIASI	ALIASI	RTX	CLLI
		LSN	RC	APCN
ps-08278-aa	s-4-050-6	4-050-6	No	dstn55p
ps-08279-aa	4-050-7	s-4-050-7	No	dstn56p

DPCN	ALIASN	ALIASI	RTX	CLLI
		LSN	RC	APCN
ps-12691-aa	13691-aa	-----	No	dstn60p
ps-12692-aa	13692-aa	6-060-4	No	dstn61p
ps-12693-aa	13693-aa	s-6-060-5	No	dstn62p

;

rtrv-rte:dpc=40-1- **

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

DPCA	ALIASI	ALIASN/N24	RTX	CLLI
		LSN	RC	APCA
040-001-001	-----	-----	No	noncluster1
		lsn01	10	001-001-001
040-001-002	-----	-----	No	noncluster2
		lsn01	10	001-001-001

;

rtrv-rte:dpc=40-1- ***

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

DPCA	ALIASI	ALIASN/N24	RTX	CLLI
		LSN	RC	APCA
040-001-*	-----	-----	No	myncaibeno
		lsn01	10	001-001-001
040-001-001	-----	-----	No	noncluster1
		lsn01	10	001-001-001
040-001-002	-----	-----	No	noncluster2
		lsn01	10	001-001-001

;

rtrv-rte:dpc=40--***

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

DPCA	ALIASI	ALIASN/N24 LSN	RTX RC	CLLI APCA
040-001-*	-----	-----	No	myncaibeno
		lsn01	10	001-001-001
040-010-*	-----	-----	No	myncaibeno2
040-001-001	-----	-----	No	noncluster1
		lsn01	10	001-001-001
040-001-002	-----	-----	No	noncluster2
		lsn01	10	001-001-001

;

rtrv-rte:dpc=40-*-***

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

DPCA	ALIASI	ALIASN/N24 LSN	RTX RC	CLLI APCA
040-001-*	-----	-----	No	myncaibeno
		lsn01	10	001-001-001
040-010-*	-----	-----	No	myncaibeno2
040-**-*	-----	-----	No	-----
		lsn02	15	001-001-002
040-001-001	-----	-----	No	noncluster1
		lsn01	10	001-001-001
040-001-002	-----	-----	No	noncluster2
		lsn01	10	001-001-001

;

rtrv-rte:dpc=40-*-*:lsn=lsn01**

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

LSN	DPCA	RC
lsn01	040-001-*	10
	040-001-001	10
	040-001-002	10

;

rtrv-rte:dpcn=8199-*

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

DPCN	ALIASA	ALIASI LSN	RTX RC	CLLI APCN
08199-fr	-----	s-4-006-1	No	dstn48dupfr
08199-tk	-----	4-006-2	No	dstn48dupTk

DPCN	ALIASI	ALIASI LSN	RTX RC	CLLI APCN
08199-aa	4-000-7	s-4-000-7 lsn48	No 10	dstn48 08199-aa

;

rtrv-rte:dpcn=8199-*:lsn=lsn48

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

LSN	DPCN	RC
lsn48	08199-aa	10

;

rtrv-rte:dpcn=p-*-aa

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

DPCN	ALIASA	ALIASI LSN	RTX RC	CLLI APCN
p-08192-aa	-----	-----	No	dstn41p
p-08193-aa	004-200-001	-----	No	dstn42p
p-08194-aa	-----	4-040-2	No	dstn43p
p-08195-aa	-----	s-4-040-3	No	dstn44p
p-08196-aa	004-200-004	4-040-4	No	dstn45p
p-08197-aa	004-200-005	s-4-040-5	No	dstn46p
DPCN	ALIASI	ALIASI LSN	RTX RC	CLLI APCN
p-08198-aa	s-4-040-6	4-040-6	No	dstn47p
p-08199-aa	4-040-7	s-4-040-7	No	dstn48p
DPCN	ALIASN	ALIASI LSN	RTX RC	CLLI APCN
p-12688-aa	s-13688-aa	-----	No	dstn57p
p-12689-aa	s-13689-aa	6-060-1	No	dstn58p
p-12690-aa	s-13690-aa	s-6-060-2	No	dstn59p

;

rtrv-rte:dpcn=s-9000-*

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

DPCN	ALIASA	ALIASI LSN	RTX RC	CLLI APCN
09000-fr	-----	s-4-007-1	No	dstn9xfr
09000-tk	-----	4-007-2	No	dstn9xtk
DPCN	ALIASI	ALIASI LSN	RTX RC	CLLI APCN
09000-aa	4-001-7	s-4-000-7 lsn9x	No 10	dstn9x 09000-aa

;

rtrv-rte:mode=full

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

DPCA	ALIASI	ALIASN/N24 LSN	RTX RC	CLLI APCA
001-001-000	-----	-----	No	stp1
		e2e1	10	001-001-000
003-001-000	-----	-----	No	mstp
		e2e3	10	003-001-000
004-001-000	-----	-----	No	stp4
		e2e4	10	004-001-000
007-001-000	-----	-----	No	stp7
		e2e7	10	007-001-000
002-101-001	-----	-----	No	ssp201
		e2m1s1	10	002-101-001
		e2e3	20	003-001-000
002-102-001	-----	-----	No	ssp202
		e2m1s2	10	002-102-001
		e2e3	20	003-001-000
001-101-001	-----	-----	No	ssp101
		e2e1	10	001-001-000
		e2e4	20	004-001-000
		e2e3	30	003-001-000
003-101-001	-----	-----	No	ssp301
		e2m1s3	10	003-101-001

		e2e3	20	003-001-000
004-101-001	-----	-----	No	ssp401
		e2e4	10	004-001-000
		e2e1	20	001-001-000
007-101-001	-----	-----	No	ssp701
		e2e7	10	007-001-000
100-100-*	-----	-----	No	cluster1
		e2e1	10	001-001-000
		e2e3	20	003-001-000
100-100-001	-----	-----	No	-----
		e2e1	10	001-001-000
200-200-*	-----	-----	No	cluster2
005-006-001	-----	005-006-001	No	-----
001-001-001	-----	-----	No	dstn01
		lsn01	10	001-001-001
p-001-001-001	-----	-----	No	dstn01p
001-001-002	1-001-2	-----	No	dstn02
		lsn02	10	001-001-002
p-001-001-002	1-011-2	-----	No	dstn02p
001-001-003	s-1-001-3	-----	No	dstn03
		lsn03	10	001-001-003
p-001-001-003	s-1-011-3	-----	No	dstn03p
001-001-004	-----	02060-aa	No	dstn04
		lsn04	10	001-001-004
p-001-001-004	-----	01060-aa	No	dstn04p
001-070-001	-----	-----	No	tgtansi001
		lsn01	10	001-001-001
		lsn02	20	001-001-002
		lsn03	30	001-001-003
		lsn04	40	001-001-004
001-001-005	-----	s-02061-aa	No	dstn05
		lsn05	10	001-001-005
p-001-001-005	-----	s-01061-aa	No	dstn05p
001-001-006	-----	001-001-006	No	dstn06
		lsn06	10	001-001-006
p-001-001-006	-----	001-011-006	No	dstn06p
001-001-007	1-001-7	02063-aa	No	dstn07
		lsn07	10	001-001-007
p-001-001-007	1-011-7	01063-aa	No	dstn07p
001-002-000	1-002-0	s-02064-aa	No	dstn08
		lsn08	10	001-002-000
p-001-002-000	1-012-0	s-01064-aa	No	dstn08p
001-070-002	-----	-----	No	tgtansi002
		lsn05	10	001-001-005
		lsn06	20	001-001-006
		lsn07	30	001-001-007
		lsn08	40	001-002-000
001-002-001	s-1-002-1	02065-aa	No	dstn09
		lsn09	10	001-002-001
p-001-002-001	s-1-012-1	01065-aa	No	dstn09p
001-002-002	s-1-002-2	s-02066-aa	No	dstn10
		lsn10	10	001-002-002
p-001-002-002	s-1-012-2	s-01066-aa	No	dstn10p
001-002-003	1-002-3	001-002-003	No	dstn11
		lsn11	10	001-002-003
p-001-002-003	1-012-3	001-012-003	No	dstn11p
001-002-004	s-1-002-4	001-002-004	No	dstn12
		lsn12	10	001-002-004
p-001-002-004	s-1-012-4	001-012-004	No	dstn12p
001-070-003	-----	-----	No	tgtansi003
		lsn09	10	001-002-001
		lsn10	20	001-002-002
		lsn11	30	001-002-003
		lsn12	40	001-002-004
200-002-001	-----	-----	Yes	rtxroute001

		lsn12	10	001-002-004
	OPCA			
	001-001-001	lsn11	15	001-002-003
	001-002-001	lsn10	99	001-002-002
	CIC - ECIC			
	0 9	lsn10	1	001-002-002
	10 16383	lsn10	2	001-002-002
	SI			
	3	lsn12	1	001-002-004
	9	lsn12	21	001-002-004
	11	lsn12	9	001-002-004
001-015-001	s-1-015-1	02169-aa	No	gx25dstn001
001-015-002	1-015-2	-----	No	gx25dstn002
		lsngx25a01	10	001-015-001
001-015-003	-----	s-02171-aa	No	gx25dstn003
002-015-001	-----	-----	No	gx25dstn004
002-015-002	-----	-----	No	gx25dstn005
002-015-003	-----	-----	No	gx25dstn006
002-015-004	-----	-----	No	gx25dstn007
		lsngx25b01	10	002-015-002
040-001-*	-----	-----	No	myncaibeno
		lsn01	10	001-001-001
040-010-*	-----	-----	No	myncaibeno2
010-**-*	-----	-----	No	-----
040-**-*	-----	-----	No	-----
		lsn02	15	001-001-002
040-001-001	-----	-----	No	noncluster1
		lsn01	10	001-001-001
040-001-002	-----	-----	No	noncluster2
		lsn01	10	001-001-001
DPCI	ALIASA	ALIASN/N24	RTX	CLLI
		LSN	RC	APCI
s-4-002-0	010-001-001	s-08228-aa	No	-----
2-010-0	-----	-----	No	dstn13
		lsn13	10	2-010-0
p-2-010-0	-----	-----	No	dstn13p
2-010-1	002-010-001	-----	No	dstn14
		lsn14	10	2-010-1
p-2-010-1	002-100-001	-----	No	dstn14p
2-010-2	-----	04178-aa	No	dstn15
		lsn15	10	2-010-2
p-2-010-2	-----	08178-aa	No	dstn15p
2-010-3	-----	s-04179-aa	No	dstn16
		lsn16	10	2-010-3
p-2-010-3	-----	s-08179-aa	No	dstn16p
2-070-1	-----	-----	No	tgtitui001
		lsn13	10	2-010-0
		lsn14	20	2-010-1
		lsn15	30	2-010-2
		lsn16	40	2-010-3
2-010-4	-----	002-010-004	No	dstn17
		lsn17	10	2-010-4
p-2-010-4	-----	002-100-004	No	dstn17p
2-010-5	002-010-005	04181-aa	No	dstn18
		lsn18	10	2-010-5
p-2-010-5	002-100-005	08181-aa	No	dstn18p
2-010-6	002-010-006	s-04182-aa	No	dstn19
		lsn19	10	2-010-6
p-2-010-6	002-100-006	s-08182-aa	No	dstn19p
2-010-7	002-010-007	002-010-007	No	dstn20

		lsn20	10	2-010-7
p-2-010-7	002-100-007	002-100-007	No	dstn20p
2-070-2	-----	-----	No	tgtitui002
		lsn17	10	2-010-4
		lsn18	20	2-010-5
		lsn19	30	2-010-6
		lsn20	40	2-010-7
s-2-020-0	-----	-----	No	dstn21
		lsn21	10	s-2-020-0
ps-2-020-0	-----	-----	No	dstn21p
s-2-020-1	002-020-001	-----	No	dstn22
		lsn22	10	s-2-020-1
ps-2-020-1	002-200-001	-----	No	dstn22p
s-2-020-2	-----	04258-aa	No	dstn23
		lsn23	10	s-2-020-2
ps-2-020-2	-----	08258-aa	No	dstn23p
s-2-020-3	-----	s-04259-aa	No	dstn24
		lsn24	10	s-2-020-3
ps-2-020-3	-----	s-08259-aa	No	dstn24p
s-2-070-3	-----	-----	No	tgtitui003
		lsn21	10	s-2-020-0
		lsn22	20	s-2-020-1
		lsn23	30	s-2-020-2
		lsn24	40	s-2-020-3
s-2-020-4	-----	002-020-004	No	dstn25
		lsn25	10	s-2-020-4
ps-2-020-4	-----	002-200-004	No	dstn25p
s-2-020-5	002-020-005	04261-aa	No	dstn26
		lsn26	10	s-2-020-5
ps-2-020-5	-----	-----	No	dstn26p
s-2-020-6	002-020-006	s-04262-aa	No	dstn27
		lsn27	10	s-2-020-6
ps-2-020-6	002-200-005	08261-aa	No	dstn27p
s-2-020-7	002-020-007	002-020-007	No	dstn28
		lsn28	10	s-2-020-7
ps-2-020-7	002-200-007	002-200-007	No	dstn28p
s-2-070-4	-----	-----	No	tgtitui004
		lsn25	10	s-2-020-4
		lsn26	20	s-2-020-5
		lsn27	30	s-2-020-6
		lsn28	40	s-2-020-7
s-3-070-3	-----	-----	No	tgtitui007
		lsn35	10	s-3-040-2
		lsn36	20	s-3-040-3
		lsn37	30	s-3-040-4
s-3-070-4	-----	-----	No	tgtitui008
		lsn38	10	s-3-040-5
		lsn39	20	s-3-040-6
		lsn40	30	s-3-040-7
s-2-029-6	002-029-006	s-04269-aa	Yes	rtxroute002
		lsn26	5	s-2-020-5
	OPCI			
	3-030-0	lsn27	28	s-2-020-6
	CIC - ECIC			
	34 44	lsn27	6	s-2-020-6
	45 55	lsn27	16	s-2-020-6
	SI			
	3	lsn27	7	s-2-020-6
	15	lsn27	14	s-2-020-6
DPCI	ALIASI	ALIASN/N24	RTX	CLLI

Commands
rtrv-rte

		LSN	RC	APCI
3-030-0	s-3-030-0	-----	No	dstn29
		lsn29	10	3-030-0
p-3-030-0	s-3-031-0	-----	No	dstn29p
3-030-1	s-3-030-1	06385-aa	No	dstn30
		lsn30	10	3-030-1
p-3-030-1	s-3-031-1	07385-aa	No	dstn30p
3-030-2	s-3-030-2	s-06386-aa	No	dstn31
		lsn31	10	3-030-2
p-3-030-2	s-3-031-2	s-07386-aa	No	dstn31p
3-070-1	s-3-070-1	-----	No	tgtitui005
		lsn29	10	3-030-0
		lsn30	20	3-030-1
		lsn31	30	3-030-2
3-030-3	s-3-030-3	003-030-003	No	dstn32
		lsn32	10	3-030-3
p-3-030-3	s-3-031-3	003-031-003	No	dstn32p
3-070-2	s-3-070-2	-----	No	tgtitui006
		lsn32	10	3-030-3
		lsn33	20	3-030-4
		lsn34	30	3-030-5
s-3-040-2	3-040-2	-----	No	dstn35
		lsn35	10	s-3-040-2
ps-3-040-2	3-041-2	-----	No	dstn35p
s-3-040-3	3-040-3	06467-aa	No	dstn36
		lsn36	10	s-3-040-3
ps-3-040-3	3-041-3	07467-aa	No	dstn36p
s-3-040-4	3-040-4	s-06468-aa	No	dstn37
		lsn37	10	s-3-040-4
ps-3-040-4	3-041-4	s-07468-aa	No	dstn37p
s-3-040-5	3-040-5	003-040-005	No	dstn38
		lsn38	10	s-3-040-5
ps-3-040-5	3-041-5	003-041-005	No	dstn38p
DPCI	ALIASN	ALIASN	RTX	CLLI
		LSN	RC	APCI
3-030-4	s-06388-aa	06388-aa	No	dstn33
		lsn33	10	3-030-4
p-3-030-4	s-07388-aa	07388-aa	No	dstn33p
3-030-5	06389-aa	s-06389-aa	No	dstn34
		lsn34	10	3-030-5
p-3-030-5	07389-aa	s-07389-aa	No	dstn34p
s-3-040-6	s-06471-aa	06471-aa	No	dstn39
		lsn39	10	s-3-040-6
ps-3-040-6	s-07471-aa	07471-aa	No	dstn39p
s-3-040-7	06472-aa	s-06472-aa	No	dstn40
		lsn40	10	s-3-040-7
ps-3-040-7	07472-aa	s-07472-aa	No	dstn40p
DPCN	ALIASA	ALIASI	RTX	CLLI
		LSN	RC	APCN
06157-aa	020-005-002	-----	No	-----
08192-aa	-----	-----	No	dstn41
		lsn41	10	08192-aa
p-08192-aa	-----	-----	No	dstn41p
08193-aa	004-000-001	-----	No	dstn42
		lsn42	10	08193-aa
p-08193-aa	004-200-001	-----	No	dstn42p
08194-aa	-----	4-000-2	No	dstn43
		lsn43	10	08194-aa
p-08194-aa	-----	4-040-2	No	dstn43p
08195-aa	-----	s-4-000-3	No	dstn44
		lsn44	10	08195-aa
p-08195-aa	-----	s-4-040-3	No	dstn44p
08753-aa	-----	-----	No	tgtitun001

		lsn41	10	08192-aa
		lsn42	20	08193-aa
		lsn43	30	08194-aa
		lsn44	30	08195-aa
08196-aa	004-000-004	4-000-4	No	dstn45
		lsn45	10	08196-aa
p-08196-aa	004-200-004	4-040-4	No	dstn45p
08197-aa	004-000-005	s-4-000-5	No	dstn46
		lsn46	10	08197-aa
p-08197-aa	004-200-005	s-4-040-5	No	dstn46p
08754-aa	-----	-----	No	tgtitun002
		lsn45	10	08196-aa
		lsn46	20	08197-aa
		lsn47	30	08198-aa
		lsn48	30	08199-aa
s-08272-aa	-----	-----	No	dstn49
		lsn49	10	s-08272-aa
ps-08272-aa	-----	-----	No	dstn49p
s-08273-aa	004-010-001	-----	No	dstn50
		lsn50	10	s-08273-aa
ps-08273-aa	004-200-010	-----	No	dstn50p
s-08274-aa	-----	4-010-2	No	dstn51
		lsn51	10	s-08274-aa
ps-08274-aa	-----	4-050-2	No	dstn51p
s-08275-aa	-----	s-4-010-3	No	dstn52
		lsn52	10	s-08275-aa
ps-08275-aa	-----	s-4-050-3	No	dstn52p
s-08755-aa	-----	-----	No	tgtitun003
		lsn49	10	s-08272-aa
		lsn50	20	s-08273-aa
		lsn51	30	s-08274-aa
		lsn52	30	s-08275-aa
s-08276-aa	004-010-004	4-010-4	No	dstn53
		lsn53	10	s-08276-aa
ps-08276-aa	004-200-040	4-050-4	No	dstn53p
s-08277-aa	004-010-005	s-4-010-5	No	dstn54
		lsn54	10	s-08277-aa
ps-08277-aa	004-200-050	s-4-050-5	No	dstn54p
s-08756-aa	-----	-----	No	tgtitun004
		lsn53	10	s-08276-aa
		lsn54	20	s-08277-aa
		lsn55	30	s-08278-aa
		lsn56	30	s-08279-aa
08757-aa	-----	-----	No	tgtitun005
		lsn57	10	12688-aa
		lsn58	20	12689-aa
		lsn59	30	12690-aa
s-08758-aa	-----	-----	No	tgtitun006
		lsn60	10	s-12691-aa
		lsn61	20	s-12692-aa
		lsn62	30	s-12693-aa
08199-fr	-----	s-4-006-1	No	dstn48dupfr
08199-tk	-----	4-006-2	No	dstn48dupTk
08198-nz	-----	-----	No	dstn47dupnz
s-08273-fr	-----	4-006-3	No	dstn50dupfr
DPCN	ALIASI	ALIASI	RTX	CLLI
		LSN	RC	APCN
08198-aa	s-4-000-6	4-000-6	No	dstn47
		lsn47	10	08198-aa
p-08198-aa	s-4-040-6	4-040-6	No	dstn47p
08199-aa	4-000-7	s-4-000-7	No	dstn48
		lsn48	10	08199-aa
p-08199-aa	4-040-7	s-4-040-7	No	dstn48p
s-08278-aa	s-4-010-6	4-010-6	No	dstn55

Commands

rtrv-rte

ps-08278-aa	s-4-050-6	lsn55	10	s-08278-aa
s-08279-aa	4-010-7	4-050-6	No	dstn55p
		s-4-010-7	No	dstn56
		lsn56	10	s-08279-aa
ps-08279-aa	4-050-7	s-4-050-7	No	dstn56p
s-08379-aa	s-4-058-7	4-058-7	Yes	rtxroute003
		lsn55	80	s-08278-aa
	OPCN			
	s-08278-aa	lsn62	8	s-12693-aa
	CIC - ECIC			
	99 100	lsn62	9	s-12693-aa
	999 1989	lsn62	99	s-12693-aa
	SI			
	4	lsn56	29	s-08279-aa
	14	lsn56	44	s-08279-aa
08198-fr	s-4-005-7	4-005-7	No	dstn47dupfr
08198-tk	4-006-0	s-4-006-0	No	dstn47dupTk
DPCN	ALIASN	ALIASI	RTX	CLLI
		LSN	RC	APCN
12688-aa	s-12688-aa	-----	No	dstn57
		lsn57	10	12688-aa
p-12688-aa	s-13688-aa	-----	No	dstn57p
12689-aa	s-12689-aa	6-050-1	No	dstn58
		lsn58	10	12689-aa
p-12689-aa	s-13689-aa	6-060-1	No	dstn58p
12690-aa	s-12690-aa	s-6-050-2	No	dstn59
		lsn59	10	12690-aa
p-12690-aa	s-13690-aa	s-6-060-2	No	dstn59p
s-12691-aa	12691-aa	-----	No	dstn60
		lsn60	10	s-12691-aa
ps-12691-aa	13691-aa	-----	No	dstn60p
s-12692-aa	12692-aa	6-050-4	No	dstn61
		lsn61	10	s-12692-aa
ps-12692-aa	13692-aa	6-060-4	No	dstn61p
s-12693-aa	12693-aa	s-6-050-5	No	dstn62
		lsn62	10	s-12693-aa
ps-12693-aa	13693-aa	s-6-060-5	No	dstn62p
s-08272-fr	08300-fr	-----	No	dstn49dupfr
s-08272-tk	08300-tk	4-006-7	No	dstn49dupTk
DPCN24	ALIASA	ALIASI	RTX	CLLI
		LSN	RC	APCN24
003-003-004	003-003-003	3-003-4	No	-----
006-005-001	-----	-----	No	dstn63
		lsn63	10	006-005-001
p-006-005-001	-----	-----	No	dstn63p
006-005-002	006-005-002	-----	No	dstn64
		lsn64	10	006-005-002
p-006-005-002	006-005-020	-----	No	dstn64p
006-005-003	-----	6-005-3	No	dstn65
		lsn65	10	006-005-003
p-006-005-003	-----	6-050-3	No	dstn65p
006-070-001	-----	-----	No	tgtitun24a
		lsn63	10	006-005-001
		lsn64	20	006-005-002
		lsn65	30	006-005-003
006-005-004	-----	s-6-005-4	No	dstn66
		lsn66	10	006-005-004
p-006-005-004	-----	s-6-050-4	No	dstn66p
006-005-005	006-005-005	6-005-5	No	dstn67

```

p-006-005-005      006-005-050      lsn67      10      006-005-005
006-070-002      -----      6-050-5      No      dstn67p
                                     -----      No      tgtitun24b
                                     lsn66      10      006-005-004
                                     lsn67      20      006-005-005
;

```

Legend

DPC, DPCA, DPCI, DPCN, DPCN24—The destination point code to be reached through this route.

ALIAS, ALIASA, ALIASI, ALIASN/N24—The alias associated with the route.

CLLI—The CLLI associated with the route.

LSN—The name of the linkset assigned to this route.

RC—The relative cost (priority) assigned to the route.

APC, APCA, APCI, APCN, APCN24—The point code of the STP or SSP that is directly adjacent to the linkset. The point code may or may not be the same as the destination point code assigned to this route.

rtrv-rtx

Retrieve Exception Route

Use this command to retrieve one or more exception route entries. Because all parameters are optional, the retrieve examines the entire Route table to find all entries that match the specified parameters. Entries with CIC-ECIC range values that fall in the range specified by the **cic** and **ecic** parameters are displayed.

Keyword: rtrv-rtx

Related Commands: dlt-rtx, ent-rtx

Command Class: Database Administration

Parameters

:cic= (optional)

Starting Circuit Identification Code. This parameter is used alone or together with the **ecic** parameter as exception routing criteria for the specified exception route.

Range: 0-16383

:class= (optional)

Exception routing class. This parameter causes all exception route sets provisioned for the specified class to be displayed.

Range: opc, ilsn, cic, si

:dpc= (optional)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: dpca

Range: p-, 000-255, *, **, ***

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—p-

The asterisk values *, **, and *** are not valid for the *ni* subfield.

If ** or *** is specified for the *nc* subfield, either *, **, or *** must be specified for the *ncm* subfield.

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001-005**.

When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006-255**.

When **chg-sid:pctype=ansi** is specified, **ni-*-*** is valid if **ni = 006-255**.

The point code **000-000-000** is not a valid point code.

:dpci= (optional)

Destination Point Code. ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:dpcn= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified with the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz, ***

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

An asterisk (*) can be specified for the node (*nnnnn* or every member of a flexible point code) or for the group code (*gc*) only when group codes are present in the point codes.

An asterisk (*) can be specified either for the node or for the group code, but not both.

prefix—**s-, p-, ps-**

nnnnn—**0-16383, ***

gc—**aa-zz, ***

m1-m2-m3-m4—**0-14** for each member; values must sum to 14; or ***-*-*-*** when the point code includes a group code.

:dpcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:ecic= (optional)

Ending Circuit Identification Code. This parameter, together with the **cic** parameter, defines the CIC range that is used as exception routing criteria for the specified exception route.

Range: 0-16383

:ilsn= (optional)

Incoming Link Set Name. This parameter contains the name of the originating linkset. The parameter value is used as part of the exception routing criteria for the specified exception route.

Range: ayyyyyyyy
1 alphabetic character followed by up to 9 alphanumeric characters.

:lsn= (optional)

Link Set Name. The linkset associated with the specified exception route.

Range: ayyyyyyyy
1 alphabetic character followed by up to 9 alphanumeric characters.

:opc= (optional)

ANSI origination point code with subfields *network indicator-network cluster-network cluster member* (ni-nc-ncm). The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Range: p-, 000-255, *, **, ***
Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).
prefix—p-
The asterisk values *, **, and *** are not valid for the *ni* subfield.
If ** or *** is specified for the *nc* subfield, either *, **, or *** must be specified for the *ncm* subfield.
When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.
When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001-005.
When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006-255.
When **chg-sid:pctype=ansi** is specified, *ni*-*- is valid if *ni* = 006-255.
The point code 000-000-000 is not a valid point code.

:opci= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: s-, p-, ps-, 0-255
Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).
prefix—s-, p-, ps-
zone—0-7
area—000-255
id—0-7
The point code 0-000-0 is not a valid point code.

:opcn= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified with the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: s-, p-, ps-, 0-16383, aa-zz, *
Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

An asterisk (*) can be specified for the node (*nnnnn* or every member of a flexible point code) or for the group code (*gc*) only when group codes are present in the point codes. An asterisk (*) can be specified either for the node or for the group code, but not both.

prefix—*s*-, *p*-, *ps*-

nnnnn—**0-16383**, *

gc—**aa-zz**, *

m1-m2-m3-m4—**0-14** for each member; values must sum to 14; or ***-*-*-*** when the point code includes a group code.

:opc*n24*= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*). The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range: **p**-, **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p**-

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:si= (optional)

Service Indicator. This parameter is used as part of the exception routing criteria for the specified exception route.

Range: **3-15**

Example

rtrv-rtx:dpca=1-1-1

rtrv-rtx:opca=6-*-*

rtrv-rtx:ilsn=lset4

rtrv-rtx:si=5

rtrv-rtx:cic=0:ecic=16383

Dependencies

Only one of the **opc**, **ilsn**, **cic**, **si**, or **class** parameters can be specified.

If the **ecic** parameter is specified, the **cic** parameter must also be specified.

The **ecic** parameter value cannot be less than the **cic** parameter value.

The Origin-Based MTP Routing feature must be enabled and turned on before this command can be entered.

The linkset name, as defined by the **ilsn** or **lsn** parameter, must exist.

The value specified for the destination point code must be a full point code and not a cluster or network point code.

Notes

** can be used in the network cluster member (*ncm*) subfield of **dpc/dpca** and **opc/opca** parameters to retrieve all point codes residing in (members of) a given network cluster (*ni-nc*).

** can be used in the network cluster (*nc*) subfield of **dpc/dpca** and **opc/opca** parameters to retrieve all point codes residing in (members of) a given network (*ni*).

*** can be used in the network cluster member (ncm) subfield of dpc/dpca/opc/opca to retrieve all point codes residing in (members of) a given network cluster (*ni-nc*), and the network cluster address (if any).

*** can be used in the network cluster (*nc*) subfield of **dpc/dpca** and **opc/opca** to retrieve all point codes residing in (members of) a given network (*ni*), and the network address (if any).

* is allowed only for retrieves (for example, **rtrv-rtx:dpcn=*-aa** or **rtrv-rtx:opc=*-xy**) on ITU-N DPCs and ITU-N OPCs if the ITUDUPPC feature is on. ** and *** is not allowed for ITU-N DPCs and OPCs (for example, **dpcn=**-xy** is rejected). The node and group code cannot both be * (**dpcn=*-*** is rejected).

Output

Retrieve all provisioned exception routes.

rtrv-rtx

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

DPCA	RTX-CRITERIA	LSN	RC	APC
200-002-001	OPCA			
	001-001-001	lsn11	15	001-002-003
	001-002-001	lsn10	99	001-002-002
	CIC - ECIC			
	0 9	lsn10	1	001-002-002
	10 16383	lsn10	2	001-002-002
	SI			
	3	lsn12	1	001-002-004
	9	lsn12	21	001-002-004
	11	lsn12	9	001-002-004
DPCI	RTX-CRITERIA	LSN	RC	APC
s-2-029-6	OPCI			
	3-030-0	lsn27	28	s-2-020-6
	CIC - ECIC			
	34 44	lsn27	6	s-2-020-6
	45 55	lsn27	16	s-2-020-6
	SI			
	3	lsn27	7	s-2-020-6
	15	lsn27	14	s-2-020-6
DPCN	RTX-CRITERIA	LSN	RC	APC
s-08379-aa	OPCN			
	s-08278-aa	lsn62	8	s-12693-aa
	CIC - ECIC			
	99 100	lsn62	9	s-12693-aa
	999 1989	lsn62	99	s-12693-aa
	SI			
	4	lsn56	29	s-08279-aa
	14	lsn56	44	s-08279-aa

DESTINATION ENTRIES ALLOCATED: 2000
 FULL DPC(s): 188
 EXCEPTION DPC(s): 17
 NETWORK DPC(s): 2
 CLUSTER DPC(s): 4
 TOTAL DPC(s): 211
 CAPACITY (% FULL): 11%
 ALIASES ALLOCATED: 12000
 ALIASES USED: 216
 CAPACITY (% FULL): 2%
 X-LIST ENTRIES ALLOCATED: 500

;

Retrieve all exception routes provisioned for a specific DPC.

rtrv-rtx:dpcn=s-08379-aa

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

DPCN	RTX-CRITERIA	LSN	RC	APC
s-08379-aa	OPCN s-08278-aa	lsn62	8	s-12693-aa
	CIC - ECIC 99 100 999 1989	lsn62 lsn62	9 99	s-12693-aa s-12693-aa
	SI 4 14	lsn56 lsn56	29 44	s-08279-aa s-08279-aa

DESTINATION ENTRIES ALLOCATED: 2000
 FULL DPC(s): 188
 EXCEPTION DPC(s): 17
 NETWORK DPC(s): 2
 CLUSTER DPC(s): 4
 TOTAL DPC(s): 211
 CAPACITY (% FULL): 11%
 ALIASES ALLOCATED: 12000
 ALIASES USED: 216
 CAPACITY (% FULL): 2%
 X-LIST ENTRIES ALLOCATED: 500

;

Retrieve all provisioned exception routes for a specific exception criteria.

rtrv-rtx:dpcn=s-08379-aa:opcn=s-08278-aa

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

DPCN	RTX-CRITERIA	LSN	RC	APC
s-08379-aa	OPCN s-08278-aa	lsn62	8	s-12693-aa

DESTINATION ENTRIES ALLOCATED: 2000
 FULL DPC(s): 188
 EXCEPTION DPC(s): 17
 NETWORK DPC(s): 2
 CLUSTER DPC(s): 4
 TOTAL DPC(s): 211
 CAPACITY (% FULL): 11%
 ALIASES ALLOCATED: 12000
 ALIASES USED: 216
 CAPACITY (% FULL): 2%
 X-LIST ENTRIES ALLOCATED: 500

;

Retrieve all provisioned exception routes for a specific exception criteria.

rtrv-rtx:dpci=s-2-029-6:cic=45:ecic=55

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

DPCI	RTX-CRITERIA	LSN	RC	APC
s-2-029-6	CIC - ECIC 45 55	lsn27	16	s-2-020-6

DESTINATION ENTRIES ALLOCATED: 2000
 FULL DPC(s): 188
 EXCEPTION DPC(s): 17
 NETWORK DPC(s): 2
 CLUSTER DPC(s): 4
 TOTAL DPC(s): 211
 CAPACITY (% FULL): 11%


```

ALIASES ALLOCATED:      12000
ALIASES USED:           216
CAPACITY (% FULL):      2%
X-LIST ENTRIES ALLOCATED: 500

```

;

Retrieve exception routes for a specific class.

rtrv-rtx:opc=1-1-1

```
eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0
```

DPCA	RTX-CRITERIA	LSN	RC	APC
200-002-001	OPCA 001-001-001	lsn11	15	001-002-003

```

DESTINATION ENTRIES ALLOCATED: 2000
FULL DPC(s):                   188
EXCEPTION DPC(s):              17
NETWORK DPC(s):                2
CLUSTER DPC(s):               4
TOTAL DPC(s):                 211
CAPACITY (% FULL):             11%
ALIASES ALLOCATED:             12000
ALIASES USED:                  216
CAPACITY (% FULL):             2%
X-LIST ENTRIES ALLOCATED:      500

```

;

Retrieve exception routes for a specific linkset.

rtrv-rtx:lsn=lsn27

```
eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0
```

DPCI	RTX-CRITERIA	LSN	RC	APC
s-2-029-6	OPCI 3-030-0	lsn27	28	s-2-020-6
	CIC - ECIC 34 44	lsn27	6	s-2-020-6
	45 55	lsn27	16	s-2-020-6
	SI 3	lsn27	7	s-2-020-6
	15	lsn27	14	s-2-020-6

```

DESTINATION ENTRIES ALLOCATED: 2000
FULL DPC(s):                   188
EXCEPTION DPC(s):              17
NETWORK DPC(s):                2
CLUSTER DPC(s):               4
TOTAL DPC(s):                 211
CAPACITY (% FULL):             11%
ALIASES ALLOCATED:             12000
ALIASES USED:                  216
CAPACITY (% FULL):             2%
X-LIST ENTRIES ALLOCATED:      500

```

;

Retrieve exception routes for the network cluster members of an OPC.

rtrv-rtx:opc=40--***

```
eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0
```

DPCA	RTX-CRITERIA	LSN	RC	APC

002-002-003	OPCA			
	040-001-001	bd1	10	002-002-002
	040-001-002	bd1	15	002-002-002
	040-001-*	bd1	5	002-002-002

```

DESTINATION ENTRIES ALLOCATED: 2000
FULL DPC(s): 190
EXCEPTION DPC(s): 21
NETWORK DPC(s): 2
CLUSTER DPC(s): 4
TOTAL DPC(s): 217
CAPACITY (% FULL): 11%
ALIASES ALLOCATED: 12000
ALIASES USED: 216
CAPACITY (% FULL): 2%
X-LIST ENTRIES ALLOCATED: 500

```

;

Retrieve exception routes for all cluster member plus itself of an OPC.

rtrv-rtx:opc=40-*-***

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

DPCA	RTX-CRITERIA	LSN	RC	APC
002-002-003	OPCA			
	040-001-001	bd1	10	002-002-002
	040-001-002	bd1	15	002-002-002
	040-**-*	bd1	0	002-002-002
	040-001-*	bd1	5	002-002-002

```

DESTINATION ENTRIES ALLOCATED: 2000
FULL DPC(s): 190
EXCEPTION DPC(s): 21
NETWORK DPC(s): 2
CLUSTER DPC(s): 4
TOTAL DPC(s): 217
CAPACITY (% FULL): 11%
ALIASES ALLOCATED: 12000
ALIASES USED: 216
CAPACITY (% FULL): 2%
X-LIST ENTRIES ALLOCATED: 500

```

;

Retrieve route exceptions by criteria class.

rtrv-rtx:class=cic

eagle10115 08-12-09 10:00:37 EST EAGLE 40.1.0

DPCA	RTX-CRITERIA	LSN	RC	APC
200-002-001	CIC - ECIC			
	0 9	lsn10	1	001-002-002
	10 16383	lsn10	2	001-002-002
DPCI	RTX-CRITERIA	LSN	RC	APC
s-2-029-6	CIC - ECIC			
	34 44	lsn27	6	s-2-020-6
	45 55	lsn27	16	s-2-020-6
DPCN	RTX-CRITERIA	LSN	RC	APC
s-08379-aa	CIC - ECIC			
	99 100	lsn62	9	s-12693-aa

```

          999    1989          lsn62          99    s-12693-aa

DESTINATION ENTRIES ALLOCATED:    2000
FULL DPC(s):                      188
EXCEPTION DPC(s):                 17
NETWORK DPC(s):                   2
CLUSTER DPC(s):                   4
TOTAL DPC(s):                     211
CAPACITY (% FULL):                11%
ALIASES ALLOCATED:                12000
ALIASES USED:                     216
CAPACITY (% FULL):                2%
X-LIST ENTRIES ALLOCATED:         500
;

```

rtrv-sccp-serv**Retrieve SCCP Service**

Use this command to display the SCCP Service application relationship information maintained by the EAGLE 5 ISS.

Keyword: **rtrv-sccp-serv**

Related Commands: **chg-sccp-serv, dlt-sccp-serv**

Command Class: Basic

Parameters

:serv= (optional)

Name of the service to be retrieved.

Range: **gflex, gport, mnp**

gflex — G-Flex (GSM Flexible Numbering)

gport — G-Port (GSM Mobile Number Portability)

mnp — Mobile Number Portability

Dependencies

- The A-Port or IGM feature must be enabled before the **serv=mnp** parameter can be specified.
- The G-Flex feature must be enabled before the **serv=gflex** parameter can be specified.
- The G-Port feature must be enabled before the **serv=gport** parameter can be specified.

Notes

Point codes are grouped by service in the output.

Output

The number of entries that is reported in use for the SCCPSRV table includes an entry for each point code network type. This entry is not displayed with the point code entries in the output. For example, if 3 ANSI point codes are used, the reported number of ANSI entries is 4.

The following example displays output when no supporting features are turned on, and the SCCP Service table is empty.

rtrv-sccp-serv

```
tekelecstp 06-10-30 09:26:14 EST  EAGLE 36.0.0
No Entries Found.
```

;

The following example displays output when the G-Port feature is turned on, and the SCCP Service table is empty.

rtrv-sccp-serv

```
tekelecstp 06-10-30 09:26:14 EST  EAGLE 36.0.0
```

```
-----
Service      : GPORT
State        : Offline
GTT Option   : Yes
-----
```

```
SCCPSRV  table is (0 of 384) 0% full.
```

;

The following example displays output when the G-Port and G-Flex features are turned on, and the SCCP Service table is empty.

rtrv-sccp-serv

```
tekelecstp 06-10-30 09:26:47 EST  EAGLE 36.0.0
```

```
-----
Service      : GFLEX
State        : Offline
GTT Option   : Yes
-----
```

```
-----
Service      : GPORT
State        : Offline
GTT Option   : Yes
-----
```

```
SCCPSRV  table is (0 of 384) 0% full.
```

;

The following example displays output when the G-Port and G-Flex features are turned on, and the service set contains ANSI point codes.

rtrv-sccp-serv

```
tekelecstp 06-10-30 09:30:02 EST  EAGLE 36.0.0
```

```
-----
Service      : GFLEX
State        : Offline
GTT Option   : Yes
-----
```

```
-----
Service      : GPORT
```

```

State      : Offline
GTT Option : Yes
-----

```

```

ANSI PC      RC
001-001-001  01
001-001-002  01
001-001-003  01

```

SCCPSRV table is (4 of 384) 1% full.

;

The following example displays output when the G-Port and G-Flex services are turned on, and the service set contains ANSI and ITU-I point codes.

rtrv-sccp-serv

tekelecstp 06-10-30 09:32:30 EST EAGLE 36.0.0

```

-----
Service    : GFLEX
State      : Offline
GTT Option : Yes
-----

```

```

-----
Service    : GPORT
State      : Offline
GTT Option : Yes
-----

```

```

ANSI PC      RC
001-001-001  01
001-001-002  01
001-001-003  01

```

```

ITU-I PC     RC
2-001-1      02
2-001-2      02
2-001-3      02

```

SCCPSRV table is (8 of 384) 2% full.

;

The following example displays output when the GPORT and GFLEX services are ONLINE, and the service set contains ANSI, ITU, and ITU-N point codes.

rtrv-sccp-serv

tekelecstp 06-10-30 09:37:03 EST EAGLE 36.0.0

```

-----
Service    : GFLEX
State      : Online
GTT Option : Yes
-----

```

```

ITUN PC      RC
00001        02

```

```

-----
Service    : GPORT
State      : Online
GTT Option : Yes
-----

```

```

ANSI PC      RC
001-001-001  01

```

```
001-001-002 01
001-001-003 01
```

```
ITUI PC      RC
2-001-1      02
2-001-2      02
2-001-3      02
```

SCCPSRV table is (10 of 384) 3% full.

;

The following example displays output when the A-Port or IGM feature is enabled, and the MNP and GFLEX services are ONLINE. This example also displays spare point codes.

rtrv-sccp-serv

```
tekelecstp 06-10-30 09:37:03 EST EAGLE 36.0.0
```

```
-----
Service      : GFLEX
State        : Online
GTT Option   : Yes
-----
```

```
ITUN PC      RC
00001        02
```

```
-----
Service      : MNP
State        : Online
GTT Option   : Yes
-----
```

```
ANSI PC      RC
001-001-001  01
001-001-002  01
001-001-003  01
```

```
ITUI PC      RC
2-001-1      02
2-001-2      02
2-01-3       02
```

```
ITUI SPARE   RC
s-4-201-0    10
s-4-201-1    10
```

```
ITUN SPARE   RC
s-2-102-0-aa 10
s-2-102-1-aa 10
```

SCCPSRV table is (16 of 384) 4% full.

;

rtrv-sccpopts

Retrieve SCCP Options

Use this command to display the current value of one or more of the SCCP option indicators maintained in the STP options table.

Keyword: rtrv-sccpopts

Related Commands: chg-sccpopts

Command Class: Database Administration

Parameters

This command has no parameters.

Example

rtrv-sccpopts

Dependencies**Notes**

None.

Output

The following example displays output when the Origin-based MTP Routing feature is enabled and turned on.

rtrv-sccpopts

```
tekelecstp 06-03-16 14:07:11 EST EAGLE 35.0.0
```

SCCP OPTIONS

```
-----
CLASS1SEQ          off
MOBRSCCP0PC        MTP
```

```
;
```

The following example displays output that results when the Transaction-based GTT Loadsharing feature is enabled.

rtrv-sccpopts

```
tekelecstp 06-09-11 15:18:41 EST EAGLE 36.0.0
```

SCCP OPTIONS

```
-----
CLASS1SEQ          on
TGTT0              UDT, XUDT
TGTT1              UDT
TGTTUDTKEY         MTP
TGTTXUDTKEY        SCCP
```

```
;
```

The following example displays output when the GSM MAP Screening feature is enabled and turned on, and GSM MAP Screening is enabled for TCAP_Continue and TCAP_End messages.

rtrv-sccpopts

```
tekelecstp 06-07-04 05:46:41 EST EAGLE 35.1.0
```

SCCP OPTIONS

```
-----
CLASS1SEQ          off
DFTLTGTTMODE       CdPA
GMSTCAPCE          on
```

```
;
```

The following example displays output when the ANSI-ITU-China SCCP Conversion feature is on.

rtrv-sccpopts

```
tekelecstp 08-03-11 14:17:38 EST EAGLE 38.0.0
```

SCCP OPTIONS

```
-----
CLASS1SEQ          on
DFTLTGTTMODE       CdPA
CNVAINAT           1
TGTT0              NONE
TGTT1              UDT, XUDT
TGTTUDTKEY         MTP
TGTTXUDTKEY        MTP
```

rtrv-scr-aftp**Retrieve Allowed Affected Point Code**

Use this command to show the allowed affected point code (AFTPC) screening references in the AFTPC entity set.

Keyword: rtrv-scr-aftpc

Related Commands: chg-scr-aftpc, dlt-scr-aftpc, ent-scr-aftpc

Command Class: Database Administration

Parameters

:actname= (optional)

The name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: ayyyyy, none

1 alphabetic character followed by up to 5 alphanumeric characters.

none—Display only those gateway screening rules that do not have a gateway screening stop action set assigned to them

:all= (optional)

Displays all AFTPC screening references.

Range: yes, no

Default: no

:area= (optional)

The ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000–255**.

Range: 000-255 *

:id= (optional)

The ITU international ID. The parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: 0-7, *

:msa= (optional)

The 24-bit ITU national main signaling area. The main signaling area is specified in the point code. The format of the point code is *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000–255**.

Range: 000-255 *

:nc= (optional)

The network cluster identifier value. This parameter restricts display to those entries containing this specific cluster of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0–255**.

Range: 0-255 *

Default: Display all

:ncm= (optional)

The network cluster member identifier value. This parameter restricts display to those entries containing this specific cluster member of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0–255**.

Range: 0-255 *

Default: Display all

:ni= (optional)

The network identifier value. This parameter restricts display to those entries containing this specific network of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0–255**.

Range: 0-255 *

Default: Display all

:npc= (optional)

The ITU national point code. An asterisk (*) indicates the full range of values from **00000–16383**.

NOTE: Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see "Converting ITU National Point Code Formats" in Appendix A.

Range: **00000-16383 ***

:nsfi= (optional)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range: **stop**

stop—The gateway screening process ends and the message proceeds through normal routing.

Default: Display all

:nsr= (optional)

The next screening reference parameter indicates which screening reference in the specified screening category (**nsfi**) is to be used in the screening process.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

Default: Display all

:pcst= (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range: **none, s**

Default: **none**

:sp= (optional)

The 24-bit ITU national signaling point. This parameter specifies the signaling point (sp) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:sr= (optional)

The AFTPC screening reference name

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

Default: Display all

:ssa= (optional)

The 24-bit ITU national sub signaling area. The sub signaling area is specified in the point code. The format of the point code is *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **0-255 ***

:ssn= (optional)

Subsystem number. An asterisk (*) indicates the full range of values from **0–255**.

Range: **1-255**

Default: Display all.

:zone= (optional)

The ITU international zone. The parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7, ***

Example

```

rtrv-scr-aftpc
rtrv-scr-aftpc:sr=iec:ni=240:nc=001:ncm=010&&014:ssn=012
rtrv-scr-aftpc:sr=iec
rtrv-scr-aftpc:all=yes
rtrv-scr-aftpc:sr=iec:ni=240:nc=001:ncm=010:ssn=012:actname=copy
rtrv-scr-aftpc:sr=aft1
rtrv-scr-aftpc:sr=aft1:zone=1:area=2:id=3:nsfi=stop:ssn=1:pcst=s

```

Dependencies

If the **nsfi** parameter is specified, the parameter value must be **stop**.

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

If **nc=*** is specified, **ncm=*** must be specified. If **ni=*** is specified, **nc=*** and **nc=*** must be specified. If **zone=*** is specified, **area=*** and **id=*** must be specified. If **area=*** is specified, **id=*** must be specified. If **msa=*** is specified, **ssa=*** and **sp=*** must be specified. If **ssa=*** is specified, **sp=*** must be specified.

The character **c** is not a valid value for the **ni**, **nc**, **ncm**, **zone**, **area**, **id**, **msa**, **ssa**, **sp**, and **npc** parameters.

The **nsr** parameter cannot be specified if the **actname** parameter is specified.

The **nsr** parameter cannot be specified if the **nsfi=stop** parameter is specified.

The value of the **actname** parameter must be defined in the gateway screening stop action table with the **chg-gws-actset** command. These values are shown in the ACT NAME field of the **rtrv-gws-actset** command output.

If the **actname** parameter is specified with the **sr** parameter, the specified value for the **actname** parameter must be assigned to that screening reference name.

If specified, the **sr** parameter value must exist in the AFTPC screen entity set.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The spare point code subtype prefix (s-) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** parameter cannot be specified for ANSI and ITU-N24 point codes.

Any specified **ni**, **nc**, **ncm**, **zone**, **area**, **id**, **msa**, **ssa**, **sp**, **npc**, **nsfi**, and **nsr** parameters must already exist in the AFTPC entity for the screening reference.

If the **pcst** parameter is specified, point codes with the specified subtype prefix (no prefix or s-) must exist in the database.

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

The Gateway Screening Stop Action table must be accessible.

Notes

An asterisk as a parameter value in this command displays only entries that have an asterisk as the same parameter value in the entry.

A range of values is defined by separating the values that define the range by two ampersands (&&); for example, **ni=025&&100** specifies all network indicators for ANSI point codes from **25** to **100**.

If no parameters are specified, a list of allowed AFTPC references is produced indicating whether they are referenced or not.

If only the **all=yes** parameter is specified, detailed information for every rule in every allowed AFTPC screening table is displayed.

If the **all** parameter is specified and other parameters are also specified, the **all** parameter is ignored.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

rtrv-scr-aftpc

```

rlghncxa03w 03-03-13 13:12:38 EST EAGLE 31.3.0
SCREEN = ALLOWED AFTPC
SR   REF   RULES
IEC  YES    2
WRD2 YES    1
WRD3 NO     4
WRD4 YES    9

```

;

rtrv-scr-**aftpc:sr=iec:ni=240:nc=001:ncm=010&&014:ssn=012:actname=copy**

```

rlghncxa03w 03-03-14 15:23:18 EST EAGLE 31.3.0
SCREEN = ALLOWED AFTPC
SR   NI     NC     NCM     SSN     NSF1     NSR/ACT
IEC  240    001    010&&012 012     STOP     COPY

```

;

rtrv-scr-aftpc:sr=aft1:zone=1:area=2:id=3:nsfi=stop:ssn=1:pcst=s

```

tekelecstp 05-01-05 10:19:51 EST EAGLE 31.12.0
SCREEN = ALLOWED AFTPC
SR   ZONE  AREA  ID     SSN     NSF1     NSR/ACT
aft1 s-1    002    3      1      STOP     -----

```

;

rtrv-scr-aftpc:sr=aft1

```

tekelecstp 05-01-05 10:19:51 EST EAGLE 31.12.0
SCREEN = ALLOWED AFTPC
SR   ZONE  AREA  ID     SSN     NSF1     NSR/ACT
aft1 s-2    002    3      1      STOP     -----

SR   NPC
aft1 s-00128

```

;

Legend

For a summary report:

REF—This indicates whether a screen is referenced by another screen. If NO, the screen is not used. If you need a more detailed output, use the **rtrv-scr-blkdpc:all=yes** command, or specify the specific screening reference.

RULES—The number of screening rules in that screening table.

For a detailed report:

SCREEN = ALLOWED AFTPC—This is the screen type.

SR—This is used to identify the various screen sets being used. It can be up to four characters in length.

NI-NC-NCM—The point code referenced within the screen. For international point codes, these columns are ZONE - AREA - ID. For 24-bit ITU national point codes, these columns are MSA - SSA - SP. For national point codes, these columns become the single column NPC.

SSN—The subsystem number associated with the point code identified by *ni-nc-ncm*.

NSFI—The next screening category to be used.

NSR/ACT—The name of the next screening reference (NSR—up to four characters) or action to be taken (ACT—up to six characters), if the message passes this screen.

rtrv-scr-blkdpc

Retrieve Blocked DPC

Use this command to show the blocked destination point code (BLKDPC) screening references in the BLKDPC entity set.

Keyword: **rtrv-scr-blkdpc**

Related Commands: **chg-scr-blkdpc**, **dlt-scr-blkdpc**, **ent-scr-blkdpc**

Command Class: Database Administration

Parameters

:actname= (optional)

The name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: *ayyyyy*, **none**

1 alphabetic character followed by up to 5 alphanumeric characters.

none—Display only those gateway screening rules that do not have a gateway screening stop action set assigned to them

:all= (optional)

Displays all blocked DPC screening references.

Range: **yes**, **no**

Default: **no**

:area= (optional)

The ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255** *, C

:id= (optional)

The ITU international ID. The parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7**, *

:msa= (optional)

The 24-bit ITU national main signaling area. The main signaling area is specified in the point code. The format of the point code is *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255** *, C

:nc= (optional)

The network cluster identifier value. This parameter restricts display to those entries containing this specific cluster of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0–255**.

Range: **0-255** *, C

Default: Display all

:ncm= (optional)

The network cluster member identifier value. This parameter restricts display to those entries containing this specific cluster member of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0–255**.

Range: 0-255 *
Default: Display all

:ni= (optional)

The network identifier value. This parameter restricts display to those entries containing this specific network of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from 0–255.

Range: 0-255 *, C
Default: Display all

:npc= (optional)

The ITU national point code. An asterisk (*) indicates the full range of values from 00000–16383.

NOTE: Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see "Converting ITU National Point Code Formats" in Appendix A.

Range: 00000-16383 *, C

:nsfi= (optional)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range: cgpa, destfld, fail, isup, stop

cgpa—Allowed calling party address is the next screening category.

destfld—Allowed destination field (DESTFLD) is the next screening category.

fail—The received message should be discarded.

isup—ISUP message type (ISUP) is the next screening category.

stop—The gateway screening process ends and the message proceeds through normal routing.

Default: Display all

:nsr= (optional)

The next screening reference parameter indicates which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. This parameter is mandatory if **nsfi** is other than **stop** or **fail**. The **nsr** parameter cannot be entered if **nsfi** is **stop** or **fail**, or the **copy=yes** parameter is specified.

Range: ayy
 1 alphabetic character followed by up to 3 alphanumeric characters

Default: Display all

:pcst= (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range: none, s

Default: none

:sp= (optional)

The 24-bit ITU national signaling point. This parameter specifies the signaling point (sp) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from 000-255.

Range: 000-255 *, C

:sr= (optional)

The BLKDPC screening reference name

Range: ayy
 1 alphabetic character followed by up to 3 alphanumeric characters

Default: Display all.

:ssa= (optional)

The 24-bit ITU national sub signaling area. The sub signaling area is specified in the point code. The format of the point code is *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **0-255 *, C**

:zone= (optional)

The ITU international zone. The parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0-7**.

Range: **0-7, *, C**

Example

```
rtrv-scr-blkdpc
```

```
rtrv-scr-
```

```
blkdpc:sr=iec:ni=240:nc=001:ncm=010&&018:nsfi=stop:actname=rdct
```

```
rtrv-scr-blkdpc:sr=iec
```

```
rtrv-scr-blkdpc:all=yes
```

```
rtrv-scr-blkdpc:sr=bdp1:npc=128:nsfi=fail:pcst=s
```

Dependencies

A complete point code must be specified, and must be one and only one of the four point code parameter combinations: **ni-nc-ncm**; **zone-area-id**; **msa-ssa-sp**; or **npc**, except in the special case of entering **c** for "continue."

If the **ni=c** parameter is specified, then the **nc** and the **ncm** parameters must have a value of **c** or must not be specified. If the **ni=c** parameter is specified, and the **nc** and the **ncm** parameters are not specified, then the **nc** and **ncm** parameters default to a value of **c**.

If the **zone=c** parameter is specified, then the **area** and the **id** parameters must have a value of **c** or must not be specified. If the **zone=c** parameter is specified, and the **area** and the **id** parameters are not specified, then the **area** and **id** parameters default to a value of **c**.

If the **msa=c** parameter is specified, then the **ssa** and the **sp** parameters must have a value of **c** or must not be specified. If the **msa=c** parameter is specified, and the **ssa** and the **sp** parameters are not specified, then the **ssa** and **sp** parameters default to a value of **c**.

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

If the **area=*** parameter is specified, then the **id=*** parameter must be specified.

If the value of the **nsfi** parameter is **stop** or **fail**, then the **nsr** parameter cannot be specified.

If the **actname** parameter is specified, the **nsr** parameter cannot be specified.

If the **actname** parameter is specified, then the **nsfi=stop** parameter must be specified.

If the **actname** parameter is specified with the **sr** parameter, the specified value for the **actname** parameter must be assigned to that screening reference name.

The value of the **actname** parameter must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the ACT NAME field of the **rtrv-gws-actset** command output.

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range **000-255**.

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **ncm** parameter is specified as a single value, or a range other than the full range of **000–255**, the **ni** and the **nc** parameters must be specified with a single value.

The value of the **sr** parameter must already exist in the BLKDPC entity set.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The spare point code subtype prefix (**s-**) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** parameter cannot be specified for ANSI and ITU-N24 point codes.

Any specified **id** or **sp** parameter must already exist in the database.

If the **pcst** parameter is specified, point codes with the specified subtype prefix (no prefix or **s-**) must exist in the database.

Any specified **nc** parameter must already exist in the database

Any specified **ncm** parameter must already exist in the database

Any specified **zone** or **msa** parameter must already exist in the database.

Any specified **ni** parameter must already exist in the database

Any specified **nsr** parameter must already exist in the database

Any specified **nsfi** parameter must already exist in the database

Any specified **npc** parameter must already exist in the database

Any specified **area** or **ssa** parameter must already exist in the database.

Any specified **pcst** parameter must already exist in the database

The Gateway Screening Stop Action table must be accessible.

If the **zone=*** parameter is specified, then the **area=*** and the **id=*** parameters must be specified.

If the **msa=*** parameter is specified, then the **ssa=*** and the **sp=*** parameters must be specified.

If the **ssa=*** parameter is specified, then the **sp=*** parameter must be specified.

Notes

If no parameters are specified, a list of blocked DPC screening references is displayed indicating whether they are referenced or not.

If only the **all=yes** parameter is specified, detailed information for every rule in every blocked DPC screening table is output.

If the **all** parameter is specified and other parameters are also specified, the **all** parameter is ignored.

An asterisk as a parameter value in this command displays only entries that have an asterisk as the same parameter value in the entry.

A range of values is specified by separating the values that define the range by two ampersands (**&&**); for example, **:ni=025&&100** specifies all network indicators for ANSI point codes from **25** to **100**.

The character **c** is used in the blocked DPC screens to allow the screening process to continue for messages with point codes that do not match any point codes in the blocked DPC screens. When screening for a blocked DPC and the point code being screened does not match any of the point codes in the blocked DPC screens, the message is not rejected and the screening process continues. There must be an entry in the blocked DPC screens to allow the screening process to continue. This entry consists of a screening reference, point code, **nsfi**, and **nsr**. The point code has the value **c-c-c**.

If the character **c** is specified for any subfield of a three-subfield point code, all three subfields must have the value **c**. No other values can be used. For example, a point code **c-c-255** is not allowed. The

point code must be **c-c-c**. The asterisk (*) value cannot be used with the character **c** (for example, a point code **c-c-*** is not allowed).

In all cases, if **c** for "continue" is entered for the first subfield in the point code, the other subfields default to **c** in the database.

When the point code does not match any entries in the blocked DPC screens, the screening process is directed to the screening reference with the point code **c-c-c**. The **nsfi** and **nsr** in this entry are examined to determine the next step in the screening process.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output**rtrv-scr-blkdpc**

```

rlghncxa03w 03-03-13 13:12:38 EST  EAGLE 31.3.0
SCREEN = BLOCKED DPC
SR    REF  RULES
IEC   YES   2
WRD2  YES   1
WRD3  NO    4
WRD4  YES   9

```

;

rtrv-scr-blkdpc:sr=iec:ni=240:nc=001:ncm=010&&018

```

rlghncxa03w 03-03-13 13:13:21 EST  EAGLE 31.3.0
SCREEN = BLOCKED DPC
SR    NI      NC      NCM      NSF1      NSR/ACT
IEC   240     001     010&&020 STOP  -----

```

;

rtrv-scr-blkdpc:actname=rdct

```

rlghncxa03w 03-03-13 13:13:21 EST  EAGLE 31.3.0
SCREEN = BLOCKED DPC
SR    NI      NC      NCM      NSF1      NSR/ACT
IEC   C       C       C       STOP    RDCT

```

;

rtrv-scr-blkdpc:nsr=is02

```

tekelecstp 02-08-30 09:25:54 EST  EAGLE 30.0.0
rtrv-scr-blkdpc:nsr=is02
Command entered at terminal #4.
SCREEN = BLOCKED DPC
SR    NI      NC      NCM      NSF1      NSR/ACT
bdp3  C       C       C       ISUP    is02

```

;

rtrv-scr-blkdpc:sr=bdp1:npc=128:nsfi=fail

```

tekelecstp 05-01-25 15:57:51 EST  EAGLE 31.12.0
SCREEN = BLOCKED DPC
SR    NPC      NSF1      NSR/ACT
bdp1  s-00128  FAIL      -----

```

;

Legend

For a summary report:

REF—This indicates whether a screen is referenced by another screen. If NO, the screen is not used. If you need a more detailed output, use the **rtrv-scr-blkdpc:all=yes** command, or specify the specific screening reference.

RULES—The number of screening rules in that screening table.

For a detailed report:

SCREEN = BLOCKED DPC—This is the screen type.

SR—This is used to identify the various screen sets being used. It can be up to four characters in length.

NI - NC - NCM—The point code referenced within the screen. For international point codes, these columns are ZONE - AREA - ID. For 24-bit ITU national point codes, these columns are MSA-SSA-SP. For national point codes, these columns become the single column NPC.

NSFI—The next screening category to be used.

NSR/ACT—The name of the next screening reference (NSR - up to four characters) or action to be taken (ACT - up to six characters), if the message passes this screen.

rtrv-scr-blkopc

Retrieve Blocked OPC

Use this command to show the blocked originating point code (BLKOPC) screening references in the BLKOPC entity set.

Keyword: **rtrv-scr-blkopc**

Related Commands: **chg-scr-blkopc, dlt-scr-blkopc, ent-scr-blkopc**

Command Class: Database Administration

Parameters

:actname= (optional)

The name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: *ayyyyy*, **none**

1 alphabetic character followed by up to 5 alphanumeric characters.

none—Display only those gateway screening rules that do not have a gateway screening stop action set assigned to them

:all= (optional)

Displays all blocked OPC screening references.

Range: **yes, no**

Default: **no**

:area= (optional)

The ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 *, C**

:id= (optional)

The ITU international ID. The parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7 *, C**

:msa= (optional)

The 24-bit ITU national main signaling area. The main signaling area is specified in the point code. The format of the point code is *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 *, C**

:nc= (optional)

The network cluster identifier value. This parameter restricts display to those entries containing this specific cluster of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0–255**.

Range: **0-255 *, C**

Default: Display all

:ncm= (optional)

The network cluster member identifier value. This parameter restricts display to those entries containing this specific cluster member of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0–255**.

Range: **0-255 *, C**

Default: Display all

:ni= (optional)

The network identifier value. This parameter restricts display to those entries containing this specific network of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0–255**.

Range: **0-255 *, C**

Default: Display all

:npc= (optional)

The ITU national point code. An asterisk (*) indicates the full range of values from **00000–16383**.

NOTE: Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see "Converting ITU National Point Code Formats" in Appendix A.

Range: **00000-16383 *, C**

:nsfi= (optional)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range: **cgpa, stop, fail, sio, dpc, blkdp**

cgpa—Allowed calling party address is the next screening category.

stop—The gateway screening process ends and the message proceeds through normal routing.

fail—The received message should be discarded.

sio—Allowed SIO is the next screening category.

dpc—Allowed DPC is the next screening category.

blkdp—Blocked DPC is the next screening category.

Default: Display all

:nsr= (optional)

The next screening reference parameter indicates which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. This parameter is mandatory if **nsfi** is other than **stop** or **fail**. The **nsr** parameter cannot be entered if **nsfi** is **stop** or **fail**, or the **copy=yes** parameter is specified.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

Default: Display all

:pcst= (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (**s-**).

Range: **none, s**

Default: **none**

:sp= (optional)

The 24-bit ITU national signaling point. This parameter specifies the signaling point (**sp**) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 *, C**

:sr= (optional)

The BLKOPC screening reference name

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

Default: Display all.

:ssa= (optional)

The 24-bit ITU national sub signaling area. The sub signaling area is specified in the point code. The format of the point code is *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **0-255** *, C

:zone= (optional)

The ITU international zone. The parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0-7**.

Range: **0-7** *, C

Example

```
rtrv-scr-blkopc
```

```
rtrv-scr-blkopc:sr=iec:ni=240:nc=001:ncm=010&&018:actname=copy
```

```
rtrv-scr-blkopc:sr=iec
```

```
rtrv-scr-blkopc:all=yes
```

```
rtrv-scr-blkopc:sr=bop1:npc=128:nsfi=fail
```

```
rtrv-scr-blkopc:sr=bop1:zone=2:area=2:id=3:nsfi=fail:pcst=s
```

Dependencies

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

Any specified **ni**, **nc**, **ncm**, **zone**, **area**, **id**, **msa**, **ssa**, **sp**, **npc**, **nsfi**, and **nsr** parameters must already exist in the database.

If the **pcst** parameter is specified, point codes with the specified subtype prefix (no prefix or **s-**) must exist in the database.

If the **area=*** parameter is specified, then the **id=*** parameter must be specified.

If the **nsr** parameter is specified, then the **actname** parameter cannot be specified.

If the value of the **nsfi** parameter is **stop** or **fail**, then the **nsr** parameter cannot be specified.

If the **actname** parameter is specified, the **nsfi=stop** parameter must be specified.

If the value **c** is specified for any subfield of a three-subfield point code, then all three subfields must have a value of **c** (**c-c-c**). No other values, including asterisks can be used. If the value of the first subfield is **c**, then the other subfields default to **c** in the database.

The value of the **actname** parameter must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the ACT NAME field of the **rtrv-gws-actset** command output.

If the **actname** parameter is specified with the screening reference name parameter, the specified value for the **actname** parameter must be assigned to that screening reference name.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The spare point code subtype prefix (**s-**) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** parameter cannot be specified for ANSI and ITU-N24 point codes.

If the **nc=*** parameter is specified, then the **ncm=*** parameter must be specified.

The Gateway Screening Stop Action table must be accessible.

If the **ni=*** parameter is specified, then the **nc=*** and the **ncm=*** parameters must be specified.

If the **zone=*** parameter is specified, then the **area=*** and the **id=*** parameters must be specified.

If the **msa=*** parameter is specified, then the **ssa=*** and the **sp=*** parameters must be specified.

If the **ssa=*** parameter is specified, then the **sp=*** parameter must be specified.

Notes

An asterisk as a parameter value in this command displays only entries that have an asterisk as the same parameter value in the entry.

If no parameters are specified, a list of blocked OPC references is displayed indicating whether they are referenced or not.

If only the **all=yes** parameter is specified, detailed information for every rule in every blocked OPC screening table is displayed.

If the **all** parameter is specified and other parameters are also specified, the **all** parameter is ignored.

A range of values is specified by separating the values that define the range by two ampersands (**&&**); for example, **:ni=025&&100** specifies all network indicators for ANSI point codes from **25** to **100**.

For point codes with three subfields, the value **c** (continue) is used as a place holder. In the event the point code is not found in this screen set, the continue value points to the **nsfi** and **nsr** to be applied next.

The character **c** is used in the blocked OPC screens to allow the screening process to continue for messages with point codes that do not match any point codes in the blocked OPC screens. When screening for a blocked OPC and the point code being screened does not match any of the point codes in the blocked OPC screens, the message is not rejected and the screening process continues. There must be an entry in the blocked OPC screens to allow the screening process to continue. This entry consists of a screening reference, point code, **nsfi**, and **nsr**. The point code **c-c-c**.

When the point code does not match any entries in the blocked OPC screens, the screening process is directed to the screening reference with the point code **c-c-c**. The **nsfi** and **nsr** in this entry are examined to determine the next step in the screening process.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

rtrv-scr-blkopc

```
rlghncxa03w 03-03-13 13:12:38 EST EAGLE 31.3.0
SCREEN = BLOCKED OPC
SR    REF    RULES
IEC   YES    2
WRD2  YES    1
WRD3  NO     4
WRD4  YES    9
```

;

rtrv-scr-blkopc:sr=iec:ni=240:nc=001:ncm=010&&018

```
rlghncxa03w 03-03-13 13:13:21 EST EAGLE 31.3.0
SCREEN = BLOCKED OPC
SR    NI      NC      NCM      NSF1    NSR/ACT
IEC   240     001     010&&020 FAIL    -----
```

;

rtrv-scr-blkopc:actname=cncf

```
rlghncxa03w 03-03-13 10:34:07 EST EAGLE 31.3.0
SCREEN = BLOCKED OPC
SR    NI      NC      NCM      NSF1    NSR/ACT
IEC   C       C       C       STOP    CNCF
```

;

rtrv-scr-blkopc:all=yes

```
rlghncxa03w 03-03-13 10:34:07 EST EAGLE 31.3.0
SCREEN = BLOCKED OPC
SR    NI      NC      NCM      NSF1    NSR/ACT
IEC   240     001     010     FAIL    -----
IEC   241     010     *      FAIL    -----

SR    ZONE    AREA    ID      NSF1    NSR/ACT
IEC   1       003     4       FAIL    -----
IEC   1       003     5       FAIL    -----

SR    NI      NC      NCM      NSF1    NSR/ACT
IEC   C       C       C       STOP    CRNCF

SR    NI      NC      NCM      NSF1    NSR/ACT
WRD2  243     015     001     FAIL    -----
WRD2  243     105     002     FAIL    -----
WRD2  C       C       C       STOP    CNCF
```

;

rtrv-scr-blkopc:sr=bo01:nsfi=sio:nsr=si01:msa=c:ssa=c:sp=c

```
tekelecstp 03-03-25 15:57:07 EST EAGLE 31.0.0
SCREEN = BLOCKED OPC
SR    MSA     SSA     SP      NSF1    NSR/ACT
bo01  C       C       C       SIO     si01
```

;

rtrv-scr-blkopc:sr=bop1

```
tekelecstp 05-01-25 15:57:07 EST EAGLE 31.12.0
SCREEN = BLOCKED OPC
SR    ZONE    AREA    ID      NSF1    NSR/ACT
bop1  s-2     002     3       FAIL    -----

SR    NPC
bop1  s-00128      NSF1    NSR/ACT
                        FAIL    -----
```


SR	ZONE	AREA	ID	NSFI	NSR/ACT
bop1	C	C	C	STOP	-----

;

Legend

For a summary report:

REF—This indicates whether a screen is referenced by another screen. If NO, the screen is not used. If you need a more detailed output, use the **rtrv-scr-blkopc:all=yes** command, or specify the specific screening reference.

RULES—The number of screening rules in that screening table.

For a detailed report:

SCREEN = BLOCKED OPC—This is the screen type.

SR—This is used to identify the various screen sets being used. It can be up to four characters in length.

NI - NC - NCM—The point code referenced within the screen. For international point codes, these columns are ZONE - AREA - ID. For 24-bit ITU national point codes, these columns are MSA-SSA-SP. For national point codes, these columns become the single column NPC.

NSFI—The next screening category to be used.

NSR/ACT—The name of the next screening reference (NSR - up to four characters) or action to be taken (ACT - up to six characters), if the message passes this screen.

rtrv-scr-cdpa**Retrieve Allowed Called Party Address**

Use this command to show the allowed called party address (CDPA) screening references in the CDPA entity set.

Keyword: **rtrv-scr-cdpa**

Related Commands: **chg-scr-cdpa**, **dlt-scr-cdpa**, **ent-scr-cdpa**

Command Class: Database Administration

Parameters

:actname= (optional)

The name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: *ayyyyy*, **none**

1 alphabetic character followed by up to 5 alphanumeric characters.

none—Display only those gateway screening rules that do not have a gateway screening stop action set assigned to them

:all= (optional)

Displays all allowed CDPA screening references.

Range: **yes**, **no**

Default: **no**

:area= (optional)

The ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:id= (optional)

The ITU international ID. The parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7, ***

:msa= (optional)

The 24-bit ITU national main signaling area. The main signaling area is specified in the point code. The format of the point code is *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:nc= (optional)

The network cluster identifier value. This parameter restricts display to those entries containing this specific cluster of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0–255**.

Range: **0-255 ***

Default: Display all

:ncm= (optional)

The network cluster member identifier value. This parameter restricts display to those entries containing this specific cluster member of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0–255**.

Range: **0-255 ***

Default: Display all

:ni= (optional)

The network identifier value. This parameter restricts display to those entries containing this specific network of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0–255**.

Range: **0-255 ***

Default: Display all

:npc= (optional)

The ITU national point code. An asterisk (*) indicates the full range of values from **00000–16383**.

NOTE: Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see "Converting ITU National Point Code Formats" in Appendix A.

Range: **00000-16383 ***

:nsfi= (optional)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range: **aftpc, stop**

aftpc — Allowed affected point code is the next screening category

stop — The gateway screening process ends and the message proceeds through normal routing

Default: Display all

:nsr= (optional)

The next screening reference parameter indicates which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. This parameter is mandatory if **nsfi** is other than **stop** or **fail**. The **nsr** parameter cannot be entered if **nsfi** is **stop** or **fail**, or the **copy=yes** parameter is specified.

Range: **ayyy**

1 alphabetic character followed by up to 3 alphanumeric characters

Default: Display all

:scmgfid= (optional)

The SCCP management (SCMG) format ID, which consists of a 1-octet field and uniquely defines the function and format of each SCMG message. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **1-255**. The following SCCP message types are screened against the Allowed CDPA table and all others are passed: UDT, UDTS, XUDT, XUDTS

Range: 1-255 *

Default: All SCMG format IDs are shown.

:sp= (optional)

The 24-bit ITU national signaling point. This parameter specifies the signaling point (sp) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: 000-255 *

:sr= (optional)

Displays all allowed CDPA screening references.

Range: ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Default: Display all.

:ssa= (optional)

The 24-bit ITU national sub signaling area. The sub signaling area is specified in the point code. The format of the point code is *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: 0-255 *

:ssn= (optional)

Subsystem number. An asterisk (*) indicates the full range of values from **0-255**.

Range: 1-255

Default: Display all.

:zone= (optional)

The ITU international zone. The parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0-7**.

Range: 0-7, *

Example

```
rtrv-scr-cdpa
```

```
rtrv-scr-cdpa:sr=iec:ni=240:nc=001:ncm=010:ssn=001
```

```
rtrv-scr-cdpa:sr=iec:ni=240:nc=001:ssn=002&&005
```

```
rtrv-scr-cdpa:sr=iec
```

```
rtrv-scr-cdpa:sr=iec:actname=copy
```

```
rtrv-scr-
```

```
cdpa:sr=cdp1:zone=1:area=2:id=3:ssn=1:nsfi=stop:scmgfid=1:pcst=s
```

```
rtrv-scr-cdpa:sr=cdp1
```

Dependencies

If the **actname** parameter is specified, the **nsr** parameter cannot be specified.

If the **actname** parameter is specified, the **nsfi=stop** parameter must be specified.

The **nsr** parameter cannot be specified when **nsfi=stop**.

If **zone=*** is specified, **area=*** and **id=*** must be specified. If **area** is specified or respecified as an asterisk, **id** must also be an asterisk. If **msa=*** is specified, **ssa=*** and **sp=*** must be specified. If **ssa=*** is specified, **sp=*** must be specified.

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range **000–255**.

If the **nc** parameter is specified as an asterisk (**nc=***), the **ncm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **ncm** parameter is specified as a single value, or a range other than the full range of **000–255**, the **ni** and the **nc** parameters must be specified with a single value.

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

If the **actname** parameter is specified with the screening reference name parameter, the specified value for the **actname** parameter must be assigned to that screening reference name.

The value of the **actname** parameter must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the ACT NAME field of the **rtrv-gws-actset** command output.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The spare point code subtype prefix (**s-**) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** parameter cannot be specified for ANSI and ITU-N24 point codes.

Any specified **ni**, **nc**, **ncm**, **zone**, **area**, **id**, **msa**, **ssa**, **sp**, **ncp**, **nsfi**, **ri**, **ssn**, and **nsr** parameters must already exist in the CGPA entity for the screening reference.

If the **pcst** parameter is specified, point codes with the specified subtype prefix (no prefix or **s-**) must exist in the database.

The specified screening function identifier(**nsfi**) must be in the allowed CDPA entity set.

If specified, the **sr** parameter value must exist in the AFTPC screen entity set.

Notes

If no parameters are specified, the system displays a summary output.

If only the **all=yes** parameter is specified, the system displays a detailed output.

If the **all** parameter and any point code parameter are specified, the **all** parameter is ignored.

The REF column of the output of this command displays **YES** when the screen is referenced by another screen; otherwise, it displays **NO**.

An asterisk as a parameter value in this command displays only entries that have an asterisk as the same parameter value in the entry.

A range of values is specified by separating the values that define the range by two ampersands (**&&**); for example, **:ni=025&&100** specifies all network indicators for ANSI point codes from **25** to **100**.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

rtrv-scr-cdpa:sr=iec:ni=240:nc=001:ncm=010:ssn=001

rlghncxa03w 03-03-07 12:05:33 EST EAGLE 31.3.0

SCREEN = ALLOWED CDPA

SR	NI	NC	NCM	SSN	SCMGFID	NSFI	NSR/ACT
IEC	240	001	010	001	002&&003	STOP	-----

;

rtrv-scr-cdpa:sr=iec:ni=240:nc=001:ssn=002&&005

rlghncxa03w 03-03-07 12:05:33 EST EAGLE 31.3.0

SCREEN = ALLOWED CDPA

SR	NI	NC	NCM	SSN	SCMGFID	NSFI	NSR/ACT
IEC	240	001	010	002	-----	STOP	-----
IEC	240	001	011	002&&003	-----	STOP	-----

;

rtrv-scr-cdpa:sr=iec

rlghncxa03w 03-03-07 12:05:33 EST EAGLE 31.3.0

SCREEN = ALLOWED CDPA

SR	NI	NC	NCM	SSN	SCMGFID	NSFI	NSR/ACT
IEC	240	001	010	12	-----	STOP	-----
IEC	241	010	*	*	-----	AFTPC	IAFT

;

rtrv-scr-cdpa

rlghncxa03w 03-03-07 12:05:33 EST EAGLE 31.3.0

SCREEN = ALLOWED CDPA

SR	REF	RULES
IEC	YES	2
WRD2	YES	1
WRD4	YES	4

;

rtrv-scr-cdpa:sr=iec:actname=copy

rlghncxa03w 03-03-07 12:05:33 EST EAGLE 31.3.0

SCREEN = ALLOWED CDPA

SR	NI	NC	NCM	SSN	SCMGFID	NSFI	NSR/ACT
IEC	245	001	010	001	002&&003	STOP	COPY
IEC	246	001	010	001	002&&003	STOP	COPY

U0 - CNCF

;

rtrv-scr-

cdpa:sr=cdp1:zone=1:area=2:id=3:ssn=1:nsfi=stop:scmgfid=1:pcst=s

rlghncxa03w 05-01-07 12:05:33 EST EAGLE 31.12.0

SCREEN = ALLOWED CDPA

SR	ZONE	AREA	ID	SSN	SCMGFID	NSFI	NSR/ACT
cdp1	s-1	002	3	1	1	STOP	-----

;

rtrv-scr-cdpa:sr=cdp1

rlghncxa03w 05-01-07 12:05:33 EST EAGLE 31.12.0

SCREEN = ALLOWED CDPA

SR	ZONE	AREA	ID	SSN	SCMGFID	NSFI	NSR/ACT
cdp1	s-2	002	3	1	1	STOP	-----

SR	NPC	SSN	SCMGFID	NSFI	NSR/ACT

```

      cdp1  s-00128              1      1      STOP      -----
;

```

Legend

For a summary report:

REF—This indicates whether a screen is referenced by another screen. If NO, the screen is not used. If you need a more detailed output, use the **rtrv-scr-cdpa:all=yes** command, or specify the specific screening reference.

RULES—The number of screening rules in that screening table.

For a detailed report:

SCREEN = ALLOWED CDPA—This is the screen type.

SR—This is used to identify the various screen sets being used. It can be up to four characters in length.

NI - NC - NCM—The point code referenced within the screen. For international point codes, these columns are ZONE - AREA - ID. For 24-bit national point codes, these columns are MSA - SSA - SP. For national point codes, these columns become the single column NPC.

SSN—The subsystem number associated with the point code identified by the **ni-nc-ncm**.

SCMGFID—The SCMGFID format ID.

NSFI—The next screening category to be used.

NSR/ACT—The name of the next screening reference (NSR - up to four characters) or action to be taken (ACT - up to six characters), if the message passes this screen.

rtrv-scr-cgpa

Retrieve Allowed Calling Party Address

Use this command to show the allowed calling party address (CGPA) screening references in the CGPA entity set.

Keyword: rtrv-scr-cgpa

Related Commands: chg-scr-cgpa, dlt-scr-cgpa, ent-scr-cgpa

Command Class: Database Administration

Parameters

:actname= (optional)

The name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: ayyyyy, none

1 alphabetic character followed by up to 5 alphanumeric characters.

none—Display only those gateway screening rules that do not have a gateway screening stop action set assigned to them

:all= (optional)

Displays all allowed CGPA screening references.

Range: yes, no

Default: no

:area= (optional)

The ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000–255**.

Range: 000-255 *

:id= (optional)

The ITU international ID. The parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from 0–7.

Range: 0-7, *

:msa= (optional)

The 24-bit ITU national main signaling area. The main signaling area is specified in the point code. The format of the point code is *msa-ssa-sp*. An asterisk (*) indicates the full range of values from 000-255.

Range: 000-255 *

:nc= (optional)

The network cluster identifier value. This parameter restricts display to those entries containing this specific cluster of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from 0–255.

Range: 0-255 *

Default: Display all

:ncm= (optional)

The network cluster member identifier value. This parameter restricts display to those entries containing this specific cluster member of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from 0–255.

Range: 0-255 *

Default: Display all

:ni= (optional)

The network identifier value. This parameter restricts display to those entries containing this specific network of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from 0–255.

Range: 0-255 *

Default: Display all

:npc= (optional)

The ITU national point code. An asterisk (*) indicates the full range of values from 00000–16383.

NOTE: Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see "Converting ITU National Point Code Formats" in Appendix A.

Range: 00000-16383 *

:nsfi= (optional)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range: **cdpa, stop, tt**

cdpa—Allowed called party address point code is the next screening category.

stop—The gateway screening process ends and the message proceeds through normal routing.

tt—Allowed translation type point code is the next screening category.

Default: Display all

:nsr= (optional)

The next screening reference parameter indicates which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. This parameter is mandatory if **nsfi** is other than **stop** or **fail**. The **nsr** parameter cannot be entered if **nsfi** is **stop** or **fail**, or the **copy=yes** parameter is specified.

Range: *ayyy*
1 alphabetic character followed by up to 3 alphanumeric characters

Default: Display all

:ri= (optional)
The routing indicator provides routing instructions to the receiving signaling point. In gateway screening, messages may be screened based on the value of the routing indicator.

Range: **gt, dpc, ***
gt—Allow a called party address with a routing indicator value of "global title."
dpc—Allow a called party address with a routing indicator value of "DPC/SSN."
*****—Allow both routing indicator values.

Default: Display all

:sccpmt= (optional)
The SCCP message type. An asterisk (*) indicates all possible allowed values; that is, **9, 10, 17, and 18**.

Range: **9, 10, 17, 18, ***
9, *— UDT
10, *—
UDTS
17, *— XUDT
18, *— XUDTS

Default: Display all SCCP message types

:sp= (optional)
The 24-bit ITU national signaling point. This parameter specifies the signaling point (sp) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:sr= (optional)
The CGPA screening reference name

Range: *ayyy*
1 alphabetic character followed by up to 3 alphanumeric characters

Default: Display all.

:ssa= (optional)
The 24-bit ITU national sub signaling area. The sub signaling area is specified in the point code. The format of the point code is *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **0-255 ***

:ssn= (optional)
Subsystem number. An asterisk (*) indicates the full range of values from **0-255**.

Range: **0-255**

Default: Display all.

:zone= (optional)
The ITU international zone. The parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0-7**.

Range: **0-7 ***

Example

```
rtrv-scr-cgpa:sr=iec:ni=240:nc=001:ncm=010:ssn=012
rtrv-scr-cgpa:sr=iec:ni=240:nc=001:ncm=010:actname=copy
rtrv-scr-cgpa:sr=cgq1
```



```
rtrv-scr-
cgpa:sr=cgpa:zone=1:area=2:id=3:ssn=1:sccpmt=9:ri=*:nsfi=stop:pcst=s
```

Dependencies

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range **000–255**.

If the **nc** parameter is specified as an asterisk (**nc=***), the **ncm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **ncm** parameter is specified as a single value, or a range other than the full range of **000–255**, the **ni** and the **nc** parameters must be specified with a single value.

If the **actname** parameter is specified, the **nsr** parameter cannot be specified.

If the **actname** parameter is specified, the **nsfi=stop** parameter must be specified.

If the **actname** parameter is specified with the screening reference name parameter, the specified value for the **actname** parameter must be assigned to that screening reference name.

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

If **zone=*** is specified, **area=*** and **id=*** must be specified. If **area=*** is specified, **id=*** must be specified. If **msa=*** is specified, **ssa=*** and **sp=*** must be specified. If **ssa=*** is specified or re-specified, **sp=*** must also be specified.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

Any specified **ni**, **nc**, **ncm**, **zone**, **area**, **id**, **msa**, **ssa**, **sp**, **ncp**, **nsfi**, **ri**, **ssn**, and **nsr** parameters must already exist in the CGPA entity for the screening reference.

If the **pcst** parameter is specified, point codes with the specified subtype prefix (no prefix or **s-**) must exist in the database.

The specified screening reference (**sr**) must be in the allowed CGPA entity set.

If the **nsfi=stop** parameter is specified, the **nsr** parameter cannot be specified.

The spare point code subtype prefix (**s-**) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** and **npcst** parameters cannot be specified for ANSI and ITU-N24 point codes.

The value of the **actname** parameter must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the **ACT NAME** field of the **rtrv-gws-actset** command output.

The Gateway Screening Stop Action table must be accessible.

Notes

If no parameters are specified, the system displays a summary output.

If only the **all=yes** parameter is specified, the system displays a detailed output.

If the **all** parameter and any point code parameter are specified, the **all** parameter is ignored.

An asterisk as a parameter value in this command displays only entries that have an asterisk as the same parameter value in the entry.

A range of values is specified by separating the values that define the range by two ampersands (&&); for example, **:ni=025&&100** specifies all network indicators for ANSI point codes from **25** to **100**.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

rtrv-scr-cgpa:sr=iec:ni=240:nc=001:ncm=010:ssn=012

```
rlghncxa03w 03-03-14 15:58:16 EST EAGLE 31.3.0
SCREEN = ALLOWED CGPA
SR  NI      NC      NCM      SSN      RI      SCCPMT  NSFI      NSR/ACT
IEC 240     001     010     012     DPC    009&&010 STOP    -----
```

;

rtrv-scr-cgpa:sr=iec:ni=240:nc=001-004:ri=dpc:sccpmt=000&&010

```
rlghncxa03w 03-03-14 15:58:16 EST EAGLE 31.3.0
SCREEN = ALLOWED CGPA
SR  NI      NC      NCM      SSN      RI      SCCPMT  NSFI      NSR/ACT
IEC 240     001     010     012     DPC    017&&018 STOP    -----
IEC 240     002&&003 *      004     DPC    009      STOP    -----
```

;

rtrv-scr-cgpa:actname=none

```
rlghncxa03w 03-03-14 15:58:16 EST EAGLE 31.3.0
SCREEN = ALLOWED CGPA
SR  NI      NC      NCM      SSN      RI      SCCPMT  NSFI      NSR/ACT
IEC 240     001     010     012     DPC    017      STOP    -----
IEC 240     001     010     014     GT      *      STOP    -----
IEC 241     002     011     014     GT      *      CDP1     CDP1
```

;

rtrv-scr-

cgpa:sr=cg01:nsfi=tt:nsr=tt01:ri=gt:ssn=1:sccpmt=9:msa=255:ssa=255:sp=255

```
tekelecstp 03-03-05 14:41:37 EST EAGLE 31.0.0
SCREEN = ALLOWED CGPA
SR  MSA      SSA      SP      NSFI      NSR/ACT
cg01 255     255     255     1         GT 9         TT      tt01
```

;

rtrv-scr-

cgpa:sr=cgpa:zone=1:area=2:id=3:ssn=1:sccpmt=9:ri=*:nsfi=stop:pcst=s

```
tekelecstp 05-01-05 14:41:37 EST EAGLE 31.12.0
SCREEN = ALLOWED CGPA
SR  ZONE     AREA     ID      SSN      RI      SCCPMT  NSFI      NSR/ACT
cgpa s-1     002      3       1        *      9       STOP    -----
```

;

rtrv-scr-cgpa:sr=cgp1

```
tekelecstp 05-01-05 14:41:37 EST EAGLE 31.12.0
SCREEN = ALLOWED CGPA
SR  ZONE     AREA     ID      SSN      RI      SCCPMT  NSFI      NSR/ACT
cgp1 s-2     002      3       1        *      *      STOP    -----

SR  NPC
cgp1 s-00128      SSN      RI      SCCPMT  NSFI      NSR/ACT
1        *      *      STOP    -----
```

;

Legend

For a summary report:

REF—This indicates whether a screen is referenced by another screen. If NO, the screen is not used. If you need a more detailed output, use the **rtrv-scr-cgpa:all=yes** command, or specify the specific screening reference.

RULES—The number of screening rules in that screening table.

For a detailed report:

SCREEN = ALLOWED CGPA—This is the screen type.

SR —This is used to identify the various screen sets being used. It can be up to four characters in length.

NI - NC - NCM—The point code referenced within the screen. For international point codes, these columns are ZONE - AREA - ID. For 24-bit ITU national point codes, these columns are MSA-SSA-SP. For national point codes, these columns become the single column NPC.

SSN—The subsystem number associated with the point code identified by the *ni-nc-ncm*.

RI—The routing indicator in the called party address.

SCCPMT—The SCCP message type.

NSFI—The next screening category to be used.

NSR/ACT—The name of the next screening reference (NSR - up to four characters) or action to be taken (ACT - up to six characters), if the message passes this screen.

rtrv-scr-destfld

Retrieve Allowed DESTFLDs

Use this command to show the attributes of one or more allowed affected destination field (DESTFLD) screening references and associated attributes (destination point code, next screening function identifier, next screening function reference) that are allowed to receive SS7 messages from another network.

Keyword: **rtrv-scr-destfld**

Related Commands: **chg-scr-destfld, dlt-scr-destfld, ent-scr-destfld**

Command Class: Database Administration

Parameters

:actname= (optional)

The name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: *ayyyyy*, **none**

1 alphabetic character followed by up to 5 alphanumeric characters.

none—Display only those gateway screening rules that do not have a gateway screening stop action set assigned to them

:all= (optional)

Displays all allowed DPC screening references.

Range: **yes, no**

Default: **no**

:area= (optional)

The ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

Default: Display all

:id= (optional)

The ITU international ID. The parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7 ***

Default: Display all

:msa= (optional)

The 24-bit ITU national main signaling area. The main signaling area is specified in the point code. The format of the point code is *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:nc= (optional)

The network cluster identifier value. This parameter restricts display to those entries containing this specific cluster of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0–255**.

Range: **0-255 ***

Default: Display all

:ncm= (optional)

The network cluster member identifier value. This parameter restricts display to those entries containing this specific cluster member of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0–255**.

Range: **0-255 ***

Default: Display all

:ni= (optional)

The network identifier value. This parameter restricts display to those entries containing this specific network of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0–255**.

Range: **0-255 ***

Default: Display all

:npc= (optional)

The ITU national point code. An asterisk (*) indicates the full range of values from **00000–16383**.

NOTE: Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see "Converting ITU National Point Code Formats" in Appendix A.

Range: **00000-16383 ***

:nsfi= (optional)

This parameter indicates that the gateway screening process should stop. If specified for this command, the parameter must have the value of **stop**. The value of **stop** means that the gateway screening process ends and the message proceeds through normal routing.

Range: **stop**

Default: Display all screening references

:nsr= (optional)

The next screening reference parameter indicates which screening reference in the specified screening category (**nsfi**) is to be used in the screening process.

Range: *ayyy*

1 alphabetic character followed by up to 3 alphanumeric characters

Default: Display all

:pcst= (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range: none, s

Default: none

:sp= (optional)

The 24-bit ITU national signaling point. This parameter specifies the signaling point (*sp*) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: 000-255 *

:sr= (optional)

The name of the individual DESTFLD screen to be displayed.

Range: ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Default: Display all.

:ssa= (optional)

The 24-bit ITU national sub signaling area. The sub signaling area is specified in the point code. The format of the point code is *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: 0-255 *, C

:zone= (optional)

The ITU international zone. The parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0-7**.

Range: 0-7 *, C

Example

```
rtrv-scr-destfld
```

```
rtrv-scr-destfld:sr=iec:ni=240:nc=001:ncm=010&&018
```

```
rtrv-scr-destfld:sr=iec:id=4:actname=cncf
```

```
rtrv-scr-destfld:all=yes
```

```
rtrv-scr-destfld:sr=dst1:zone=1:area=2:id=3:nsfi=stop:pcst=s
```

```
rtrv-scr-destfld:sr=dst1
```

Dependencies

If the **actname** parameter is specified, the **nsfi=stop** parameter must be specified.

The **nsfi=stop** parameter must be specified.

The **nsr** parameter cannot be specified in the command.

If the **actname** parameter is specified, the **nsr** parameter cannot be specified.

The value of the **actname** parameter must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the ACT NAME field of the **rtrv-gws-actset** command output.

If the **actname** parameter is specified with the screening reference name parameter, the specified value for the **actname** parameter must be assigned to that screening reference name.

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range **000-255**.

If the **nc** parameter is specified as an asterisk (**nc=***), the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **ncm** parameter is specified as a single value, or a range other than the full range of **000–255**, the **ni** and the **nc** parameters must be specified with a single value.

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

If the **zone=*** parameter is specified, then the **area=*** and the **id=*** parameters must be specified.

If the **area=*** parameter is specified, then the **id=*** parameter must be specified.

If the **msa=*** parameter is specified, then the **ssa=*** and the **sp=*** parameters must be specified.

If the **ssa=*** parameter is specified, then the **sp=*** parameter must be specified.

The specified screening reference (**sr**) must be in the allowed DESTFLD entity set.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The spare point code subtype prefix (**s-**) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** parameter cannot be specified for ANSI and ITU-N24 point codes.

If the **pcst** parameter is specified, point codes with the specified subtype prefix (no prefix or **s-**) must exist in the database.

Any specified **area** or **ssa** parameter must already exist in the database.

Any specified **id** or **sp** parameter must already exist in the database.

Any specified **zone** or **msa** parameter must already exist in the database.

Any specified **nc** parameter must already exist in the database.

Any specified **ncm** parameter must already exist in the database.

Any specified **ni** parameter must already exist in the database.

Any specified **npc** parameter must already exist in the database.

Any specified **nsfi** parameter must already exist in the database.

Any specified **nsr** parameter must already exist in the database.

Any specified **pcst** parameter must already exist in the database.

If the **nsfi=fail** parameter is specified, then the **nni**, **nc**, **ncm**, **narea**, **nzone**, **nid**, **nmsa**, **nssa**, **nsp**, and **npc** parameters cannot have a value of **c**.

The Gateway Screening Stop Action table must be accessible.

Notes

If no parameters are specified, the system displays a summary output.

If only the **all=yes** parameter is specified, the system displays a detailed output.

If the **all** parameter and any point code parameter are specified, the **all** parameter is ignored.

The REF column of the output of this command displays **YES** when the screen is referenced by another screen; otherwise, it displays **NO**.

An asterisk as a parameter value in this command displays only entries that have an asterisk as the same parameter value in the entry.

A range of values is specified by separating the values that define the range by two ampersands (**&&**); for example, **ni=025&&100** specifies all network indicators for ANSI point codes from **25** to **100**.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

rtrv-scr-destfld

```
rlghncxa03w 03-03-13 13:12:38 EST EAGLE 31.3.0
SCREEN = ALLOWED DESTFLD
```

SR	REF	RULES
IEC	YES	2
WRD2	YES	1
WRD3	NO	4
WRD4	YES	9

;

rtrv-scr-destfld:sr=iec:ni=240:nc=001:ncm=010&&018

```
rlghncxa03w 03-03-13 13:13:21 EST EAGLE 31.3.0
SCREEN = ALLOWED DESTFLD
```

SR	NI	NC	NCM	NSFI	NSR/ACT
IEC	240	001	010&&020	STOP	-----

;

rtrv-scr-destfld:sr=iec:id=4:actname=cncf

```
rlghncxa03w 03-03-13 13:13:56 EST EAGLE 31.3.0
SCREEN = ALLOWED DESTFLD
```

SR	ZONE	AREA	ID	NSFI	NSR/ACT
IEC	1	003	4	STOP	CNCF

;

rtrv-scr-destfld:all=yes

```
rlghncxa03w 03-03-13 13:14:18 EST EAGLE 31.3.0
SCREEN = ALLOWED DESTFLD
```

SR	NI	NC	NCM	NSFI	NSR/ACT
IEC	240	001	010	STOP	CNCF
IEC	241	010	*	STOP	-----

SR	ZONE	AREA	ID	NSFI	NSR/ACT
IEC	1	003	4	STOP	-----
IEC	1	003	5	STOP	CR

SR	NPC	NSFI	NSR/ACT
IEC	00235	STOP	CNCF
IEC	00240	STOP	-----

;

rtrv-scr-destfld:sr=dst1:zone=1:area=2:id=3:nsfi=stop:pcst=s

```
tekelecstp 05-01-06 11:40:26 EST EAGLE 31.12.0
SCREEN = ALLOWED DESTFLD
```

SR	ZONE	AREA	ID	NSFI	NSR/ACT
dst1	s-1	002	3	STOP	-----

;

rtrv-scr-destfld:sr=dst1

```
tekelecstp 05-01-06 11:40:26 EST EAGLE 31.12.0
SCREEN = ALLOWED DESTFLD
```

SR	ZONE	AREA	ID	NSFI	NSR/ACT
dst1	s-1	002	3	STOP	-----

SR	NPC	NSFI	NSR/ACT
dst1	s-00128	STOP	-----

;

Legend

For a summary report:

REF—This indicates whether a screen is referenced by another screen. If **NO**, the screen is not used. If you need a more detailed output, use the **rtrv-scr-destfld:all=yes** command, or specify the specific screening reference.

RULES—The number of screening rules in that screening table.

For a detailed report:

- **SCREEN = ALLOWED DESTFLD**—This is the screen type.
- **SR**—This is used to identify the various screen sets being used. It can be up to four characters in length.
- **NI - NC - NCM**—The point code referenced within the screen. For international point codes, these columns are ZONE - AREA - ID. For 24-bit ITU national point codes, these columns are MSA-SSA-SP. For national point codes, these columns become the single column NPC.
- **NSFI**—The next screening category to be used.
- **NSR/ACT**—The name of the next screening reference (NSR - up to four characters) or action to be taken (ACT - up to six characters), if the message passes this screen.

rtrv-scr-dpc**Retrieve Allowed DPC**

Use this command to show the attributes of one or more allowed DPC screening references and associated attributes (destination point code, next screening function identifier, next screening function reference) that are allowed to receive SS7 messages from another network.

Keyword: **rtrv-scr-dpc**

Related Commands: **chg-scr-dpc, dlt-scr-dpc, ent-scr-dpc**

Command Class: Database Administration

Parameters

:actname= (optional)

The name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: *ayyyyy*, **none**

1 alphabetic character followed by up to 5 alphanumeric characters.

none—Display only those gateway screening rules that do not have a gateway screening stop action set assigned to them

:all= (optional)

Displays all allowed DPC screening references.

Range: **yes, no**

Default: **no**

:area= (optional)

The ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:id= (optional)

The ITU international ID. The parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7, ***

:msa= (optional)

The 24-bit ITU national main signaling area. The main signaling area is specified in the point code. The format of the point code is *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:nc= (optional)

The network cluster identifier value. This parameter restricts display to those entries containing this specific cluster of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0–255**.

Range: **0-255 *, C**

Default: Display all

:ncm= (optional)

The network cluster member identifier value. This parameter restricts display to those entries containing this specific cluster member of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0–255**.

Range: **0-255 ***

Default: Display all

:ni= (optional)

The network identifier value. This parameter restricts display to those entries containing this specific network of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0–255**.

Range: **0-255 ***

Default: Display all

:npc= (optional)

The ITU national point code. An asterisk (*) indicates the full range of values from **00000–16383**.

NOTE: Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see "Converting ITU National Point Code Formats" in Appendix A.

Range: **00000-16383 ***

:nsfi= (optional)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range: **blkdpc, cgpa, destfld, isup, stop**

blkdpc—Blocked DPC is the next screening category.

cgpa—Allowed calling party address is the next screening category.

destfld—Allowed destination field (DESTFLD) is the next screening category.

isup—ISUP message type (ISUP) is the next screening category.

stop—The gateway screening process ends and the message proceeds through normal routing.

Default: Display all screen references

:nsr= (optional)

The next screening reference parameter indicates which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. This parameter is mandatory if

nsfi is other than **stop** or **fail**. The **nsr** parameter cannot be entered if **nsfi** is **stop** or **fail**, or the **copy=yes** parameter is specified.

Range: *ayyy*
1 alphabetic character followed by up to 3 alphanumeric characters

Default: Display all

:pcst= (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (**s-**).

Range: **none**, **s**
Default: **none**

:sp= (optional)

The 24-bit ITU national signaling point. This parameter specifies the signaling point (**sp**) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:sr= (optional)

The allowed DPC screening reference name

Range: *ayyy*
1 alphabetic character followed by up to 3 alphanumeric characters

Default: Display all.

:ssa= (optional)

The 24-bit ITU national sub signaling area. The sub signaling area is specified in the point code. The format of the point code is *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **0-255 ***

:zone= (optional)

The ITU international zone. The parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0-7**.

Range: **0-7, ***

Example

```
rtrv-scr-dpc
rtrv-scr-dpc:sr=iec:ni=240:nc=001:ncm=010&&018
rtrv-scr-dpc:sr=iec:id=4
rtrv-scr-dpc:all=yes
rtrv-scr-dpc:all=yes:actname=cncf
rtrv-scr-dpc:sr=dpc1:npc=128:nsfi=stop:pcst=s
```

Dependencies

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

The specified screening reference (**sr**) must be in the allowed DPC entity set.

Any specified **ni** parameter must already exist in the allowed DPC entity for the screening reference.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The spare point code subtype prefix (**s-**) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** parameter cannot be specified for ANSI and ITU-N24 point codes.

If the **pcst** parameter is specified, point codes with the specified subtype prefix (no prefix or **s-**) must exist in the database.

If **ni=*** is specified, **nc=*** and **ncm=*** must be specified.

If **nc=*** is specified, **ncm=*** must be specified.

If the **zone=*** parameter is specified, then the **area=*** and the **id=*** must be specified.

If the **area=*** parameter is specified, then the **id=*** parameter must be specified.

If the **msa=*** parameter is specified, then the **ssa=*** and the **sp=*** must be specified.

If the **ssa=*** parameter is specified, then the **sp=*** parameter must be specified.

If the value of the **nsfi=stop** parameter is specified, then the **nsr** parameter cannot be specified.

If the **nsr** parameter is specified, then the **actname** parameter cannot be specified.

If the **actname** parameter is specified, the **nsfi=stop** parameter must be specified.

The value of the **actname** parameter must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the ACT NAME field of the **rtrv-gws-actset** command output.

If the **actname** parameter is specified with the screening reference name parameter, the specified value for the **actname** parameter must be assigned to that screening reference name.

Any specified **npc** parameter must already exist in the allowed DPC entity for the screening reference.

Any specified **ncm** parameter must already exist in the allowed DPC entity for the screening reference.

Any specified **nc** parameter must already exist in the allowed DPC entity for the screening reference.

Any specified **nsfi** parameter must already exist in the allowed DPC entity for the screening reference.

Any specified **nsr** parameter must already exist in the allowed DPC entity for the screening reference.

Any specified **pcst** parameter must already exist in the allowed DPC entity for the screening reference.

Any specified **area** or **ssa** parameter must already exist in the allowed DPC entity for the screening reference.

Any specified **id** or **sp** parameter must already exist in the allowed DPC entity for the screening reference.

Any specified **zone** or **msa** parameter must already exist in the allowed DPC entity for the screening reference.

If the **nsfi=fail** parameter is specified, then the **nni**, **nc**, **nncm**, **narea**, **nzone**, **nid**, **nmsa**, **nssa**, **nsp**, and **npc** parameters cannot have a value of **c**.

Notes

If no parameters are specified, a list of allowed DPC references is displayed indicating whether they are referenced or not.

If a single allowed DPC screening reference is specified, the specified entity set requested is shown.

If **all=yes** and no other parameter is specified, detailed information for all of the screening reference entities in the allowed DPC entity set are shown.

If the **all** parameter is specified and other parameters are also specified, the **all** parameter is ignored.

An asterisk as a parameter value in this command displays only entries that have an asterisk as the same parameter value in the entry.

A range of values is specified by separating the values that define the range by two ampersands (**&&**); for example, **:ni=025&&100** specifies all network indicators for ANSI point codes from **25** to **100**.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

rtrv-scr-dpc

```
rlghncxa03w 03-03-13 13:12:38 EST EAGLE 31.3.0
SCREEN = ALLOWED DPC
SR    REF    RULES
IEC   YES     2
WRD2  YES     1
WRD3  NO      4
WRD4  YES     9
```

;

rtrv-scr-dpc:sr=iec:ni=240:nc=001:ncm=010&&018

```
rlghncxa03w 03-03-13 13:13:21 EST EAGLE 31.3.0
SCREEN = ALLOWED DPC
SR    NI      NC      NCM      NSFI      NSR/ACT
IEC   240     001     010&&020 STOP  -----
```

;

rtrv-scr-dpc:sr=iec:id=4

```
rlghncxa03w 03-03-13 13:13:56 EST EAGLE 31.3.0
SCREEN = ALLOWED DPC
SR    ZONE    AREA    ID      NSFI      NSR/ACT
IEC   1       003     4       BLKOPC   blk1
```

;

rtrv-scr-dpc:all=yes

```
rlghncxa03w 03-03-13 13:14:18 EST EAGLE 31.3.0
SCREEN = ALLOWED DPC
SR    NI      NC      NCM      NSFI      NSR/ACT
IEC   240     001     010     STOP  -----
IEC   241     010     *       CGPA    cg04

SR    ZONE    AREA    ID      NSFI      NSR/ACT
IEC   1       003     4       BLKDPC   blk1
IEC   1       003     5       STOP  -----

SR    NPC
IEC   00235
IEC   00240
NSFI      NSR/ACT
CGPA      cg04
CGPA      cg01
```

;

rtrv-scr-dpc:sr=dpc1:actname=copy

```
rlghncxa03w 03-03-13 13:16:13 EST EAGLE 31.3.0
SCREEN = ALLOWED DPC
SR    NI      NC      NCM      NSFI      NSR/ACT
dpc1  010     010     010     STOP  COPY
dpc1  010     010     012     STOP  COPY
```

;

rtrv-scr-dpc:sr=dpc1:npc=128:pcst=s

```
tekelecstp 05-01-06 11:29:11 EST EAGLE 31.12.0
SCREEN = ALLOWED DPC
SR    NPC
dpc1  s-00128
NSFI      NSR/ACT
STOP  -----
```

;

rtrv-scr-dpc:sr=dpc1

```
tekelecstp 05-01-06 11:29:11 EST EAGLE 31.12.0
SCREEN = ALLOWED DPC
SR    ZONE    AREA    ID      NSFI      NSR/ACT
```

```

dpc1  s-1      002      3      STOP      -----
SR      NPC
dpc1  s-00128      NSFI      NSR/ACT
STOP      -----
;

```

Legend

For a summary report:

REF—This indicates whether a screen is referenced by another screen. If NO, the screen is not used. If you need a more detailed output, use the **rtrv-scr-dpc:all=yes** command, or specify the specific screening reference.

RULES—The number of screening rules in that screening table.

For a detailed report:

SCREEN = ALLOWED DPC—This is the screen type.

SR—This is used to identify the various screen sets being used. It can be up to four characters in length.

NI - NC - NCM—The point code referenced within the screen. For international point codes, these columns are ZONE - AREA - ID. For 24-bit ITU national point codes, these columns are MSA-SSA-SP. For national point codes, these columns become the single column NPC.

NSFI—The next screening category to be used.

NSR/ACT—The name of the next screening reference (NSR - up to four characters) or action to be taken (ACT - up to six characters), if the message passes this screen.

rtrv-scr-isup**Retrieve Allowed ISUP Screening Reference**

Use this command to display one allowed ISUP screening reference or all allowed ISUP screening references in the Allowed ISUP entity set.

Keyword: rtrv-scr-isup

Related Commands: chg-scr-isup, dlt-scr-isup, ent-scr-isup

Command Class: Database Administration

Parameters

:actname= (optional)

The name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: ayyyyy

1 alphabetic character followed by up to 5 alphanumeric characters.

:all= (optional)

This parameter is specified to display all allowed ISUP screening references in the Allowed ISUP entity set.

Range: yes, no

Default: no

:isupmt/tupmt= (optional)

ISUP message type or TUP message type in the specified entry. The **tupmt** parameter is not valid for SEAS. A single value or range of values can be entered. An asterisk (*) indicates the entire range of 0-255.

Range: 000-255 *

:nsfi= (optional)

This parameter specifies the next screening category that is used in the gateway screening process. If specified, the parameter must have the value of **stop**.

Range: **stop**

stop—The gateway screening process ends and the message proceeds through normal routing.

:nsr= (optional)

Next screening reference. The **nsr** parameter cannot be specified if **nsfi=stop** is specified.

Range: ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Default: No value given

:sr= (optional)

The individual ISUP screen to be displayed.

Range: ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Example

rtrv-scr-isup:sr=iec:isupmt=1:nisupmt=1&&2

rtrv-scr-isup:sr=tu01:tupmt=0&&255

Dependencies

If the **nsfi** parameter is specified, the value must be **stop**.

The **nsr** parameter cannot be specified if the **actname** parameter is specified.

The **nsr** parameter cannot be specified if the **nsfi=stop** parameter is specified.

If **sr** is specified, the value must exist in the database.

The value of the **actname** parameter must be defined in the gateway screening stop action table with the **chg-gws-actset** command. These values are shown in the ACT NAME field of the **rtrv-gws-actset** command output.

Notes

A range of values for the **isupmt** parameter or **tupmt** parameter can be specified by separating the values that define the range by two ampersands (&&); for example, **:isupmt=025&&100** specifies all ISUP message types from **25** to **100**. The value to the left of the && must be less than the value to the right of the && in the range.

An asterisk can be used for a parameter value in the **chg-scr-isup**, **rtrv-scr-isup**, and **rtrv-scr-isup** commands only if that parameter value was specified as an asterisk in the **ent-scr-isup** command to define the parameter value.

If no parameters are specified, a list of allowed ISUP references is produced indicating whether they are referenced or not.

Output

rtrv-scr-isup

```

tekelecstp 02-09-02 11:10:38 EST  EAGLE 30.0.0
SCREEN = ALLOWED ISUP
SR   REF  RULES
iall NO    1
ibig NO    1
iec  NO    2
is01 YES   1
is02 YES   1
isu  NO    1
isu1 NO    1
isu2 NO    1
isw1 NO    1

```

;

rtrv-scr-isup:sr=iall

```

tekelecstp 02-09-02 11:13:25 EST  EAGLE 30.0.0
SCREEN = ALLOWED ISUP
SR   ISUPMT  NSFI  NSR/ACT
iall *        STOP  -----

```

;

rtrv-scr-isup:sr=iec:isupmt=1&&9

```

tekelecstp 02-09-02 11:13:25 EST  EAGLE 30.0.0
SCREEN = ALLOWED ISUP
SR   ISUPMT  NSFI  NSR/ACT
iec  001&&002 STOP  -----
iec  009      STOP  -----

```

;

rtrv-scr-isup:isupmt=*

```

tekelecstp 02-09-02 11:13:25 EST  EAGLE 30.0.0
SCREEN = ALLOWED ISUP
SR   ISUPMT  NSFI  NSR/ACT
iall *        STOP  -----
isu2 *        STOP  -----
isw1 *        STOP  -----

```

;

rtrv-scr-isup:sr=tu01:tupmt=0&&255

```

tekelecstp 03-11-13 13:10:02 EST  EAGLE 31.4.0
SCREEN = ALLOWED ISUP
SR   ISUPMT  NSFI  NSR/ACT
      TUPMT/
tu01 002      STOP  -----

```

;

rtrv-scr-isup:all=yes

```

tekelecstp 02-09-13 13:10:02 EST  EAGLE 30.0.0
SCREEN = ALLOWED ISUP
SR   ISUPMT  NSFI  NSR/ACT
is01 001      STOP  -----
is02 001&&010 STOP  -----

```

```

is03 *          STOP  -----
;

```

Legend

REF—This indicates whether a screen is referenced by another screen. If NO, the screen is not used. If you need a more detailed output, use the **rtrv-scr-isup:all=yes** command, or specify the specific screening reference.

RULES—The number of screening rules in that screening table.

For a detailed report:

SCREEN = ALLOWED ISUP— This is the screen type.

SR—This is used to identify the various screen sets being used. It can be up to four characters in length.

ISUPMT/TUPMT—The ISUP message type or TUP Message type in the entry.

NSFI—The next screening category to be used.

NSR/ACT—The name of the next screening reference (NSR - up to four characters) or action to be taken (ACT - up to six characters), if the message passes this screen.

rtrv-scr-opc

Retrieve Allowed OPC

Use this command to show an allowed OPC screening reference and associated attributes (originating point code, next screening function identifier, next screening function reference).

Keyword: **rtrv-scr-opc**

Related Commands: **chg-scr-opc, dlt-scr-opc, ent-scr-opc**

Command Class: Database Administration

Parameters

:actname= (optional)

The name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: *ayyyyy, none*

1 alphabetic character followed by up to 5 alphanumeric characters.

none—Display only those gateway screening rules that do not have a gateway screening stop action set assigned to them

:all= (optional)

Displays all allowed OPC screening references.

Range: **yes, no**

Default: Display all

:area= (optional)

The ITU international area. The area is specified in the point code. The format of the point code is *zone-area-id*. An asterisk (*) indicates the full range of values from **000–255**.

Range: **000-255 ***

:id= (optional)

The ITU international ID. The parameter specifies the ID in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0–7**.

Range: **0-7, ***

:msa= (optional)

The 24-bit ITU national main signaling area. The main signaling area is specified in the point code. The format of the point code is *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: **000-255 ***

:nc= (optional)

The network cluster identifier value. This parameter restricts display to those entries containing this specific cluster of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0-255**.

Range: **0-255 ***

Default: Display all

:ncm= (optional)

The network cluster member identifier value. This parameter restricts display to those entries containing this specific cluster member of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0-255**.

Range: **0-255 ***

Default: Display all

:ni= (optional)

The network identifier value. This parameter restricts display to those entries containing this specific network of the point code represented by *ni-nc-ncm*. A single value or a range of values can be specified. An asterisk (*) indicates the full range of values from **0-255**.

Range: **0-255 ***

Default: Display all

:npc= (optional)

The ITU national point code. An asterisk (*) indicates the full range of values from **00000-16383**.

NOTE: Gateway screening allows the ITU national point code to be displayed and entered in the database only as a single number. If you are using multiple-part ITU national point codes, see "Converting ITU National Point Code Formats" in Appendix A.

Range: **00000-16383 ***

:nsfi= (optional)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range: **blkopc, sio, dpc, blkdpc, cgpa, stop**

blkopc—Blocked OPC is the next screening category.

sio—Allowed SIO is the next screening category

dpc—Allowed DPC is the next screening category.

blkdpc—Blocked DPC is the next screening category.

cgpa—Allowed calling party address is the next screening category.

stop—The gateway screening process ends and the message proceeds through normal routing.

Default: Display all screening referenes

:nsr= (optional)

The next screening reference parameter indicates which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. This parameter is mandatory if **nsfi** is other than **stop** or **fail**. The **nsr** parameter cannot be entered if **nsfi** is **stop** or **fail**, or the **copy=yes** parameter is specified.

Range: **ayyy**

1 alphabetic character followed by up to 3 alphanumeric characters

Default: Display all

:pcst= (optional)

Point code subtype. This parameter indicates whether the specified ITU international or ITU national point code has no subtype prefix or has the spare point code prefix (s-).

Range: none, s

Default: none

:sp= (optional)

The 24-bit ITU national signaling point. This parameter specifies the signaling point (*sp*) in the point code represented by *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: 000-255 *

:sr= (optional)

The allowed OPC screening reference name

Range: ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Default: Display all.

:ssa= (optional)

The 24-bit ITU national sub signaling area. The sub signaling area is specified in the point code. The format of the point code is *msa-ssa-sp*. An asterisk (*) indicates the full range of values from **000-255**.

Range: 0-255 *

:zone= (optional)

The ITU international zone. The parameter specifies the zone in the point code represented by format *zone-area-id*. An asterisk (*) indicates the full range of values from **0-7**.

Range: 0-7, *, C

Example

rtrv-scr-opc

rtrv-scr-opc:sr=iec:ni=240:nc=001:ncm=010&&018

rtrv-scr-opc:sr=iec:id=4

rtrv-scr-opc:all=yes

rtrv-scr-opc:sr=opc1:actname=cr

rtrv-scr-opc:sr=opc1:npc=128:nsfi=fail:pcst=s

Dependencies

ANSI point code value **000-000-000** and ITU-International point code value **0-000-0** are not allowed.

If the **ni=*** parameter is specified, the **nc=*** and the **ncm=*** parameters must be specified.

If the **nc=*** parameter is specified, then the **ncm=*** parameter must be specified.

If the **zone=*** parameter is specified, then the **area=*** and the **id=*** parameters must be specified.

If the **area=*** parameter is specified, then the **id=*** parameter must be specified.

If the **msa=*** parameter is specified, then the **ssa=*** and the **sp=*** parameters must be specified.

If the **ssa=*** parameter is specified, then the **sp=*** parameter must be specified.

If the **ni** parameter is specified as an asterisk (**ni=***) or as a range, the **nc** and **ncm** parameters must be specified as an asterisk or as the full range **000-255**.

If the **nc** parameter is specified as an asterisk (**nc=***), the **ncm** parameter must be specified as an asterisk or as the full range **000-255**.

If the **nc** parameter is specified as a single value or a range, a single value must be specified for the **ni** parameter.

If the **nc** parameter is specified as a range, the **ncm** parameter must be specified as an asterisk or as the full range **000–255**.

If the **ncm** parameter is specified as a single value, or a range other than the full range of **000–255**, the **ni** and the **nc** parameters must be specified with a single value.

If the **nsr** parameter is specified, then the **actname** parameter cannot be specified.

If the **actname** parameter is specified, the **nsfi=stop** parameter must be specified.

If the value of the **nsfi=stop** parameter is specified, then the **nsr** parameter cannot be specified.

The value of the **actname** parameter must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the ACT NAME field of the **rtrv-gws-actset** command output.

If the **actname** parameter is specified with the screening reference name parameter, the specified value for the **actname** parameter must be assigned to that screening reference name.

The specified screening reference (**sr**) must be in the allowed OPC entity set.

The Spare Point Code Support feature must be enabled before the **pcst** parameter can be specified.

The spare point code subtype prefix (**s-**) is not supported for ANSI point codes (parameters **ni**, **nc**, **ncm**) or for 24-bit ITU national point codes (parameters **msa**, **ssa**, **sp**). The **pcst** parameter cannot be specified for ANSI and ITU-N24 point codes.

If the **pcst** parameter is specified, point codes with the specified subtype prefix (no prefix or **s-**) must exist in the database.

Any specified **ni** parameter must already exist in the allowed OPC entity for the screening reference.

Any specified **nc** parameter must already exist in the allowed OPC entity for the screening reference.

Any specified **ncm** parameter must already exist in the allowed OPC entity for the screening reference.

Any specified **npc** parameter must already exist in the allowed OPC entity for the screening reference.

Any specified **nsfi** parameter must already exist in the allowed OPC entity for the screening reference.

Any specified **nsr** parameter must already exist in the allowed OPC entity for the screening reference.

Any specified **pcst** parameter must already exist in the allowed OPC entity for the screening reference.

Any specified **area** or **ssa** parameter must already exist in the allowed OPC entity for the screening reference.

Any specified **id** or **sp** parameter must already exist in the allowed OPC entity for the screening reference.

Any specified **zone** or **msa** parameter must already exist in the allowed OPC entity for the screening reference.

If the **nsfi=fail** parameter is specified, then the **nmi**, **nc**, **nncm**, **narea**, **nzone**, **nid**, **nmsa**, **nssa**, **nsp**, and **npc** parameters cannot have a value of **c**.

The Gateway Screening Stop Action table must be accessible.

Notes

If no parameters are specified, a list of allowed OPC references is produced indicating whether they are referenced or not.

If a single allowed OPC screening reference is specified, the specified entity set requested is shown.

If **all=yes** and no other parameter is specified, detailed information for all of the screening reference entities in the allowed OPC entity set are shown.

If **all** is specified and other parameters are also specified, the **all** parameter is ignored.

An asterisk specified as a parameter value in this command displays only entries that have an asterisk as the same parameter value in the entry.

A range of values is specified by separating the values that define the range by two ampersands (**&&**); for example, **:ni=025&&100** specifies all network indicators for ANSI point codes from **25** to **100**.

The spare point code subtype prefix **s-** is supported only for ITU international and ITU national point codes. The **pcst** parameter indicates whether the specified point code has no subtype prefix or has the spare point code prefix.

Output

rtrv-scr-opc

```

rlghncxa03w 03-03-13 13:12:38 EST EAGLE 31.3.0
SCREEN = ALLOWED OPC
SR    REF  RULES
IEC   YES   2
WRD2  YES   1
WRD3  NO    4
WRD4  YES   9

```

;

rtrv-scr-opc:sr=iec:ni=240:nc=001:ncm=010&&018

```

rlghncxa03w 03-03-13 13:13:21 EST EAGLE 31.3.0
SCREEN = ALLOWED OPC
SR    NI      NC      NCM      NSF1    NSR/ACT
IEC   240     001     010&&020 STOP    -----

```

;

rtrv-scr-opc:sr=iec:id=4

```

rlghncxa03w 03-03-13 13:13:56 EST EAGLE 31.3.0
SCREEN = ALLOWED OPC
SR    ZONE    AREA    ID      NSF1    NSR/ACT
IEC   1       003     4       BLKOPC blk1

```

;

rtrv-scr-opc:all=yes

```

rlghncxa03w 03-03-13 13:14:18 EST EAGLE 31.3.0
SCREEN = ALLOWED OPC
SR    NI      NC      NCM      NSF1    NSR/ACT
IEC   240     001     010     STOP    -----
IEC   241     010     *       CGPA     cg04

SR    ZONE    AREA    ID      NSF1    NSR/ACT
IEC   1       003     4       BLKOPC blk1
IEC   1       003     5       STOP    -----

SR    NPC
IEC   00235
IEC   00240
NSF1    CGPA     cg04
NSF1    CGPA     cg01

SR    NI      NC      NCM      NSF1    NSR/ACT
WRD2  243     015     001     STOP    -----
WRD3  243     105     002     CGPA     WRD4

```

;

rtrv-scr-opc:sr=opc1:actname=cr

```

rlghncxa03w 03-03-13 13:16:13 EST EAGLE 31.3.0
SCREEN = ALLOWED OPC
SR    NI      NC      NCM      NSF1    NSR/ACT
opc1  010     010     010     STOP    CR
opc1  010     010     012     STOP    CR

```

;

rtrv-scr-opc:sr=op55

```

tekelecstp 03-03-06 11:30:42 EST EAGLE 31.0.0
SR    MSA     SSA     SP      NSF1    NSR/ACT
op55  007     077     007     BLKOPC bo55

```

;

rtrv-scr-opc:sr=opc1:npc=128:nsfi=fail

```
tekelecstp 05-01-06 11:30:42 EST EAGLE 31.12.0
SR      NPC      NSF1      NSR/ACT
opc1    s-00128      FAIL      -----
```

;

Legend

For a summary report:

REF—This indicates whether a screen is referenced by another screen. If NO, the screen is not used. If you need a more detailed output, use the **rtrv-scr-opc:all=yes** command, or specify the specific screening reference.

RULES—The number of screening rules in that screening table.

For a detailed report:

SCREEN = ALLOWED OPC— This is the screen type.

SR—This is used to identify the various screen sets being used. It can be up to four characters in length.

NI - NC - NCM—The point code referenced within the screen. For international point codes, these columns are ZONE - AREA - ID. For 24-bit ITU national point codes, these columns are MSA-SSA-SP. For national point codes, these columns become the single column NPC.

NSFI—The next screening category to be used.

NSR/ACT—The name of the next screening reference (NSR - up to four characters) or action to be taken (ACT - up to six characters), if the message passes this screen.

rtrv-scr-sio

Retrieve Allowed SIO

Use this command to show the attributes of one or more **nic/si/h0/h1** combinations that are allowed for SS7 messages from another network.

Keyword: **rtrv-scr-sio**

Related Commands: **chg-scr-sio, dlt-scr-sio, ent-scr-sio**

Command Class: Database Administration

Parameters

:actname= (optional)

The name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: *ayyyyy*

1 alphabetic character followed by up to 5 alphanumeric characters.

none—Display only those gateway screening rules that do not have a gateway screening stop action set assigned to them

:all= (optional)

Displays all allowed SIO screening references.

Range: **yes, no**

Default: **no**

:h0= (optional)

H0 heading code. A single value or a range of values can be specified. An asterisk (*) indicates all possible values; that is, the entire range of **0–15**.

Range: **0-15 ***

Default: Display all

:h1= (optional)

H1 heading code. A single value or a range of values can be specified. An asterisk (*) indicates all possible values; that is, the entire range of **0–15**.

Range: **0-15 ***

Default: Display all

:nic= (optional)

The network indicator code. An asterisk (*) indicates all possible values; that is, the entire range of **0–3**.

Range: **0-3 ***

Default: Display all

:nsfi= (optional)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range: **blkdpc, cgpa, cdpa, destfld, dpc, isup, stop**

blkdpc—Blocked DPC is the next screening category.

cgpa—Allowed calling party address is the next screening category.

cdpa—Allowed called party address is the next screening category.

destfld—Allowed destination field (DESTFLD) is the next screening category.

dpc—Allowed DPC is the next screening category.

isup—ISUP message type (ISUP) is the next screening category.

stop—The gateway screening process ends and the message proceeds through normal routing.

Default: Display all screening references

:nsr= (optional)

The next screening reference parameter indicates which screening reference in the specified screening category (**nsfi**) is to be used in the screening process.

(optional; mandatory if **nsfi** is other than **stop**; cannot be entered if **nsfi=stop**)

Range: **ayyy**

1 alphabetic character followed by up to 3 alphanumeric characters

Default: Display all

:pri= (optional)

Message priority. A single value or a range of values can be specified. An asterisk (*) indicates all possible values; that is, the entire range of **0–3**.

Range: **0-3 ***

Default: Display all

:si= (optional)

The service indicator.

Range: **0-15, * ****

Default: Display all

:sr= (optional)

The allowed SIO screening reference name

Range: **ayyy**

1 alphabetic character followed by up to 3 alphanumeric characters

Default: Display all

Example

```
rtrv-scr-sio
rtrv-scr-sio:sr=iec:nic=1:si=3:pri=2&&3
rtrv-scr-sio:sr=sio1:nic=1:si=1
rtrv-scr-sio:sr=sio1:nic=1:si=1:h0=1:h1=*
rtrv-scr-sio:sr=sio1:si=1:h0=1:h1=1
rtrv-scr-sio:all=yes
rtrv-scr-sio:sr=iec:nic=1:si=1:actname=crncf
```

Dependencies

If the **si** parameter is not equal to **00**, **01**, or **02**, the **h0** and **h1** parameters cannot be specified.

If the **nic**, **si**, and **h0/h1** parameters are specified, the SIO screening reference must be in the allowed SIO entity set.

The network indicator code (**nic**) must be specified if the service indicator is specified.

The network indicator code (**nic**) and the service indicator (**si**) must be specified if the **h0** and **h1** parameters are specified.

If an asterisk value is specified for the **h0** parameter, the **h1** parameter cannot be specified.

If the **nsfi=stop** parameter is specified, then the **nsr** parameter cannot be specified.

If the **actname** parameter is specified, then the **nsfi=stop** parameter must be specified.

If the **nsr** parameter is specified, then the **actname** parameter cannot be specified.

If the **actname** parameter is specified with the screening reference name parameter, the specified value for the **actname** parameter must be assigned to that screening reference name.

The value of the **actname** parameter must be defined in the gateway screening stop action table with the **chg-gws-actset** command. These values are shown in the ACT NAME field of the **rtrv-gws-actset** command output.

If the **sr** parameters are specified, the SIO screening reference must be in the allowed SIO entity set.

The Gateway Screening Stop Action table must be accessible.

Invalid **ent-scr-sio nsfi** and **si** parameter combinations specified.

Notes

An asterisk as a parameter value in this command displays only entries that have an asterisk as the same parameter value in the entry.

If no parameters are specified, a list of allowed SIO references is output indicating whether they are referenced or not.

If only the **all** parameter is specified and is **yes**, detailed information for every rule in every allowed SIO screening table is displayed.

If the **all** parameter is specified and other parameters are also specified, the **all** parameter is ignored.

Output

rtrv-scr-sio

```

SCREEN = ALLOWED SIO
SR    REF  RULES
s      NO    1
s999   NO    1
si     NO    1
si01   NO    1
si1    NO    1
sio1   NO    3
swl1   NO    1
swl2   NO    1

```

;

rtrv-scr-sio:sr=iec:nic=1:si=3:pri=2&&3

```

rlghncxa03w 03-03-15 08:36:43 EST  EAGLE 31.3.0
SCREEN = ALLOWED SIO
SR    NIC PRI  SI  H0    H1    NSF1    NSR/ACT
IEC   1   0&&2 3  --    --    BLKDPC  WDB2
IEC   1   3    3  --    --    DPC     ABC2

```

;

rtrv-scr-**sio:sr=sio1:nic=1:si=1:h1=1:pri=1:h0=15:nsfi=blkdpc:nsr=bdp1**

```

rlghncxa03w 03-03-07 12:05:33 EST  EAGLE 31.3.0
SCREEN = ALLOWED SIO
SR    NIC PRI  SI  H0    H1    NSF1    NSR/ACT
sio1  1   1    1  15    01    BLKDPC  bdp1

```

;

rtrv-scr-sio:sr=sio1:h0=1:h1=1

```

rlghncxa03w 03-03-07 12:05:33 EST  EAGLE 31.3.0
SCREEN = ALLOWED SIO
SR    NIC PRI  SI  H0    H1    NSF1    NSR/ACT
sio1  1   1    1  01    *    STOP    -----
sio1  2   1    1  01    *    STOP    -----

```

;

rtrv-scr-sio:sr=sio1:nic=1:si=1

```

rlghncxa03w 03-03-07 12:05:33 EST  EAGLE 31.3.0
SCREEN = ALLOWED SIO
SR    NIC PRI  SI  H0    H1    NSF1    NSR/ACT
sio1  1   1    1  01    *    STOP    -----
sio1  1   1    1  02    01    STOP    -----

```

;

rtrv-scr-sio:sr=sio1:nic=1:si=1:h0=1:h1=*

```

rlghncxa03w 03-03-07 12:05:33 EST  EAGLE 31.3.0
SCREEN = ALLOWED SIO
SR    NIC PRI  SI  H0    H1    NSF1    NSR/ACT
sio1  1   1    1  01    *    STOP    -----

```

;

rtrv-scr-sio:sr=iec:nic=1:si=1:actname=crncf

```

rlghncxa03w 03-03-19 21:16:37 EST  EAGLE 31.3.0
SCREEN = ALLOWED SIO
SR    NIC PRI  SI  H0    H1    NSF1    NSR/ACT
iec   1   1    1  15    01    STOP    CRNCF

```

;

rtrv-scr-sio:si=5

```

tekelecstp 02-08-28 16:47:06 EST EAGLE 30.0.0
SCREEN = ALLOWED SIO
SR   NIC  PRI  SI  H0    H1    NSFI   NSR/ACT
si01 1    1    5   --    --    STOP   -----
si02 1    1    5   --    --    ISUP   is01

```

;

Legend

For a summary report:

SR—This is used to identify the various screen sets being used. It can be up to four characters in length.

REF—This indicates whether a screen is referenced by another screen. If NO, the screen is not used. If you need a more detailed output, use the **rtrv-scr-sio:all=yes** command, or specify the specific screening reference.

RULES—The number of screening rules in that screening table.

For a detailed report:

SCREEN = ALLOWED SIO—This is the screen type.

SR—This is used to identify the various screen sets being used. It can be up to four characters in length.

NIC—The network indicator code in the service information octet.

PRI—The priority of a single message or the beginning message priority in a range of priorities in the service information octet.

SI—The service indicator for the service information octet, which are the last two bits of the subservice field.

H0—The H0 heading code.

H1—The H1 heading code.

NSFI—The next screening category to be used.

NSR/ACT—The name of the next screening reference (**NSR** - up to four characters) or action to be taken (**ACT** - up to six characters), if the message passes this screen.

rtrv-scr-tt**Retrieve Allowed Translation Type**

Use this command to show the allowed translation type (TT) screening reference in the TT entity set.

Keyword: **rtrv-scr-tt**

Related Commands: **chg-scr-tt**, **dlt-scr-tt**, **ent-scr-tt**

Command Class: Database Administration

Parameters

:actname= (optional)

The name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: *ayyyyy*
1 alphabetic character followed by up to 5 alphanumeric characters.

none—Display only those gateway screening rules that do not have a gateway screening stop action set assigned to them

:all= (optional)

Displays all allowed TT screening references.

Range: **yes, no**

Default: **no**

:nsfi= (optional)

This parameter specifies the next screening category that is used in the gateway screening process, or it indicates that the gateway screening process should stop.

Range: **cdpa, stop**

cdpa—Allowed called party address is the next screening category.

stop—The gateway screening process ends and the message proceeds through normal routing.

Default: Display all screening references

:nsr= (optional)

The next screening reference parameter indicates which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. This parameter is mandatory if **nsfi** is other than **stop**. The **nsr** parameter cannot be entered if **nsfi** is **stop**, or the **copy=yes** parameter is specified.

Range: `ayyy`

1 alphabetic character followed by up to 3 alphanumeric characters

Default: Display all

:sr= (optional)

The TT screening reference name

Range: `ayyy`

1 alphabetic character followed by up to 3 alphanumeric characters

Default: Display all

:type= (optional)

The translation type. The translation type identifies the global title translation type value in the called party address. It is the decimal representation of the 1-byte field used in SS7. A single value or a range of values can be specified.

Range: **1-255 ***

Default: Display all.

Example

```
rtrv-scr-tt
```

```
rtrv-scr-tt:sr=iec
```

```
rtrv-scr-tt:all=yes
```

```
rtrv-scr-tt:sr=iec:type=1&&15:actname=copy
```

Dependencies

If the **nsr** parameter is specified, **nsfi=stop** cannot be specified.

If the **actname** parameter is specified and **nsfi** is specified, the value specified for **nsfi** must be **stop**.

The value of the **actname** parameter must be defined in the gateway screening stop action table with the **chg-gws-actset** command. These values are shown in the ACT NAME field of the **rtrv-gws-actset** command output.

The **nsr** parameter cannot be specified if the **actname** parameter is specified.

If the **actname** parameter is specified with the screening reference name parameter, the specified value for the **actname** parameter must be assigned to that screening reference name.

The **copy** parameter is obsolete. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

The specified value for the **nsfi** parameter is not valid for TT screen.

The **actname** parameter value must already be defined in the Gateway Screening Stop Action table with the **chg-gws-actset** command. These values are shown in the ACT NAME field of the **rtrv-gws-actset** command output.

The screening reference and translation type for which the attributes are to be retrieved must exist.

Notes

An asterisk as a parameter value in this command displays only entries that have an asterisk as the same parameter value in the entry.

If no parameters are specified, a list of allowed TT references is produced indicating whether they are referenced or not.

If only the **all** parameter is specified and is **yes**, detailed information for every rule in every allowed TT screening table is displayed.

If the **all** parameter is specified and other parameters are also specified, the **all** parameter is ignored.

Output**rtrv-scr-tt**

```

rlghncxa03w 03-03-07 12:05:33 EST EAGLE 31.3.0
SCREEN = ALLOWED TT
SR   REF   RULES
IEC  YES   2
WRD2 YES   1
WRD4 YES   4

```

;

rtrv-scr-tt:sr=iec

```

rlghncxa03w 03-03-07 12:05:33 EST EAGLE 31.3.0
SCREEN = ALLOWED TT
SR   TYPE   NSFI   NSR/ACT
IEC  005&&010 STOP  -----
IEC  012     STOP  -----
IEC  016     CDPA   IEC

```

;

rtrv-scr-tt:all=yes

```

rlghncxa03w 03-03-07 12:05:33 EST EAGLE 31.3.0
SCREEN = ALLOWED TT
SR   TYPE   NSFI   NSR/ACT
IEC  005&&010 STOP  -----
IEC  012     STOP  -----
IEC  016     CDPA   IEC
WRD2 243     STOP  -----
WRD4 *       STOP  -----

```

;

rtrv-scr-tt:sr=iec:type=1&&15:actname=copy

```

rlghncxa03w 03-03-15 08:54:35 EST EAGLE 31.3.0
SCREEN = ALLOWED TT
SR   TYPE   NSFI   NSR/ACT
IEC  005&&010 STOP  COPY
IEC  012     STOP  COPY

```

;

Legend

SCREEN = ALLOWED TT—This is the screen type.

SR—This is used to identify the various screen sets being used. It can be up to four characters in length.

REF—This indicates whether a screen is referenced by another screen. If NO, the screen is not used. If a more detailed output is needed, the **rtrv-scr-tt:all=yes** command should be used, or specify the specific screening reference.

TYPE—The translation type of that is allowed for global title translation.

NSFI—The next screening category to be used.

NSR/ACT—The name of the next screening reference (NSR - up to four characters) or action to be taken (ACT - up to six characters), if the message passes this screen.

rtrv-scrset**Retrieve Screen Set**

Use this command to show the attributes of one or more screen sets in the screen set entity set.

Keyword: rtrv-scrset

Related Commands: chg-scrset, dlt-scrset, ent-scrset

Command Class: Database Administration

Parameters

:actname= (optional)

The name of the gateway screening stop action set. Stop actions must be administered using the **actname** parameter in conjunction with the gateway screening stop action table (see **chg-gws-actset** and **rtrv-gws-actset**).

Range: ayyyyy

1 alphabetic character followed by up to 5 alphanumeric characters.

none—Display only those gateway screening rules that do not have a gateway screening stop action set assigned to them

:all= (optional)

Displays all screen sets (except “placeholder” screen sets that contain only one rule with **nsfi=stop** specified in the rule).

Range: yes, no

Default: no

:destfld= (optional)

This parameter displays the indicator that specifies whether to apply the automatic allowed affected destination screening for network management messages against the routing table, self point codes, and capability point codes. When this parameter is on in the screen set rule, the automatic screening is applied at the end of the provisioned screen set.

Range: yes, no

Default: Display all

:nsfi= (optional)

The values of this parameter indicate in the screen set rules the next screening category that is used in the gateway screening process, or that the gateway screening process should stop. In this command, information is displayed for one or more screen sets containing rules with the specified **nsfi** parameter value.

NOTE: When **nsfi=stop** is specified for this command, the command displays only the “placeholder” screen sets that have only one rule, with **nsfi=stop** specified in the rule. This is a way to locate those “placeholder” screen sets, so that you can add or change the rules to accomplish appropriate screening.

Range: opc, blkopc, sio, dpc, blkdpc, stop

opc—Display rules with Allowed OPC as the next screening category.

blkopc—Display rules with Blocked OPC as the next screening category.

sio—Display rules with Allowed SIO as the next screening category.

dpc—Display rules with Allowed DPC as the next screening category.

blkdpc—Display rules with Blocked DPC as the next screening category.

stop—Display only “placeholder” screen sets that have only one rule in the screen set, with **nsfi=stop** specified as the next screening category.

Default: Display all

:nsr= (optional)

The next screening reference parameter indicates which screening reference in the specified screening category (**nsfi**) is to be used in the screening process. In this command, the **nsr** parameter is used to display information for one or more screen sets with rules that have the specified **nsr** parameter value.

Range: ayyy

1 alphabetic character followed by up to 3 alphanumeric characters

Default: Display all

:scrn= (optional)

The screen set name. When this parameter is specified, the information for only the specified screen set is displayed.

Range: *xyyy*

1 alphabetic character followed by up to 3 alphanumeric characters

Default: Display all

Example

```
rtrv-scrset
rtrv-scrset:scrn=scr1
rtrv-scrset:nsr=opc4
rtrv-scrset:nsfi=dpc
rtrv-scrset:actname=copy
```

Dependencies

The screen set name must already exist.

The **nsfi=stop** parameter must be specified before the **actname** parameter can be specified.

The **nsr** parameter cannot be specified if the **actname** parameter is specified.

If the **actname** parameter is specified with the screen set name parameter, the specified value for the **actname** parameter must be assigned to that screen set name.

If the **nsfi=stop** parameter is not specified, then the **nsr** parameter must be specified.

The **nsr** parameter cannot be entered if the **nsfi** parameter value equals **stop**.

Notes

If no parameters are specified for the **rtrv-scrset** command, the output shows all the screen sets, the screening function identifier of the root screening table, the screening reference of the root screening table, the memory usage (percentage), the number of entries in the screen set and the overall gateway screening statistics, followed by a summary of statistics for each screen set.

For the **rtrv-scrset:all=yes** command, the output consists of every screen set and every screening reference in each screen set (except “placeholder” screen sets that have only one rule with **nsfi=stop** specified in the rule). The **all=yes** and **nsfi=stop** parameters cannot be specified in the same command.

If the **scrn**, **nsfi**, or **nsr** parameter is entered, summary information for all screens that match the specified parameters is shown.

When the % FULL is over 100%, the screen is inaccessible. A screenset over 100% capacity size will not bind correctly. A screenset can become provisioned over capacity when linking one screen reference to another causes the size to become too large. To reduce a screenset that is over 100% capacity, screen rules must be deleted (see the **dlt-scr-xxx** commands)

Output

In the following example the % full is over 100% and the screen is inaccessible.

rtrv-scrset

```
rlghncxa03w 03-03-14 16:37:05 EST EAGLE 31.3.0
ENTIRE GWS DATABASE IS 1% FULL
CDPA + AFTPC TABLES ARE 0% FULL
SCREEN SET TABLE IS (2 OF 255) 2% FULL
THERE ARE 0 SEAS SCREEN SETS USED ( prefix 00nn )
THERE ARE 2 EAGLE SCREEN SETS USED
```

THE FOLLOWING ARE OVER 80% FULL:

SCRN	NSFI	NSR/ACT	FULL	RULES	TABLES	DESTFLD
scr1	OPC		101%	4093	2	Y

SCRN	NSFI	NSR/ACT	FULL	RULES	TABLES	DESTFLD
scr1	OPC	opc1	101%	4093	2	Y
scr2	OPC	opc2	1%	3	2	Y

;

rtrv-scrset:nsfi=opc

```
rlghncxa03w 03-03-14 16:37:54 EST EAGLE 31.3.0
SCRN NSFI NSR/ACT RULES DESTFLD
att1 OPC att1 111 Y
atx1 OPC atx1 2 Y
bam1 OPC bam1 3 Y
ctt1 OPC ctt1 1 Y
ctw1 OPC ctw 39 Y
mci1 OPC mci1 3 Y
wtl1 OPC wtl1 339 Y
```

;

rtrv-scrset:nsr=dpc3

```
rlghncxa03w 03-03-14 16:38:28 EST EAGLE 31.3.0
SCRN NSFI NSR/ACT RULES
ss01 DPC dpc3 3
ss02 DPC dpc3 3
ss03 DPC dpc3 3
ss04 DPC dpc3 3
ss05 DPC dpc3 3
```

;

rtrv-scrset:scrn=ss53

```
rlghncxa03w 03-03-14 16:39:04 EST EAGLE 31.3.0
SCRN NSFI NSR/ACT RULES DESTFLD
ss53 BLKDPC bkd2 2 Y
      CGPA cgp1 3
      TT tt1 3
      TT tt2 3
      TT tt3 4
      CDPA cdp1 3
      CDPA cdp2 3
      CDPA cdp3 4
      AFTPC end1 9
```

;

rtrv-scrset:scrn=gws1

```
e1070402 02-07-22 10:06:09 EST EAGLE 30.0.0
rtrv-scrset:scrn=gws1
Command entered at terminal #4.
SCRN NSFI NSR/ACT RULES DESTFLD
```

```

gws1  OPC      opc1      17      Y
      BLKOPC   bop1      1812
      SIO      sio1      80
      DPC      dpc1      17
      BLKDPC   bdp1      1812
      CGPA     cga1      34
      TT       tt01      256
      CDPA     cda1      17
      CDPA     cdb1      6
      AFTPC    apc1      17
      ISUP     isu1      17

```

```
;
```

Legend

SCRN—The name of the screen set.

NSFI—The next screening category to be used.

NSR/ACT—The name of the next screening reference (NSR - up to four characters) or action to be taken (ACT - up to six characters), if the message passes this screen.

FULL—The capacity of allowed memory a given screen set occupies, expressed as a percentage.

RULES—The number of entries in the screen set.

TABLES—The number of tables in the screen set.

DESTFLD—Displays whether to apply the automatic allowed affected destination screening for network management messages against the routing table, self point codes, and capability point codes. When this parameter is on, the automatic screening is applied at the end of the provisioned screen set.

rtrv-seas-config

rtrv-seas-config

Use this command to retrieve configuration information for the CCS Message Router (CCS MR) and the name of the EAGLE 5 ISS source node for the SEAS Over IP interface.

Keyword: **rtrv-seas-config**

Related Commands: **chg-seas-config**

Command Class: Database Administration

Parameters

Example

```
rtrv-seas-config
```

Dependencies

The SEAS Over IP feature must be enabled before this command can be entered.

Output**rtrv-seas-config**

tekelecstp 07-01-23 18:46:01 EST EAGLE 37.5.0

SEASCLLI AUTHMODE

DEVEAGLE001 Password

CONN	TERM	IPADDR	PORT	LOGIN	HNAME

IPMR1	25	128.96.75.45	4010	ccscoor	tcpipmr1

IPMR2	33	128.96.75.46	4011	ccscoor	tcpipmr2

rtrv-secu-dflt**Display System-Wide Security-Related Defaults**

Use this command to display the current values of the various security-related parameters that have been configured with the **chg-secu-dflt** command.

Keyword: **rtrv-secu-dflt****Related Commands:** **chg-pid, chg-secu-dflt****Command Class:** Security Administration**Parameters****:msg=** (optional)

Use this parameter to specify whether the text of the login warning message is to be displayed also.

Range: **yes, no****Default:** **no****Example****rtrv-secu-dflt****rtrv-secu-dflt:msg=yes****Dependencies**

None

Notes

None

Output

```

rtrv-secu-dflt:msg=yes
rlghncxa03w 08-03-17 16:02:05 EST  EAGLE 38.0.0
-----
PAGE                60
UOUT                90
MULTLOG            NO
MINLEN              8
ALPHA               1
NUM                 1
PUNC                1
WARNING MESSAGE
-----
1:*****
2:**  NOTICE: This is a private computer system.      **
3:**  Unauthorized Access or use may lead to           **
4:**  prosecution.                                     **
5:**  08-03-01 Notice!!! Eagle will be upgraded between **
6:**                the hours of 2am-3am on 08-03-15.  **
7:**                                                    **
8:**  Today's happy message: Go with Tekelec!!         **
9:*****
10:" "
11:""
12:""
13:""
14:""
15:""
16:""
17:""
18:""
19:""
20:""
;

rtrv-secu-dflt
rlghncxa03w 03-03-17 16:02:05 EST  EAGLE 31.3.0
-----
PAGE                60
UOUT                90
MULTLOG            NO
MINLEN              8
ALPHA               1
NUM                 1
PUNC                1
;

```

Legend

PAGE—The default password aging interval for newly created user IDs

UOUT—The number of successive days a user ID can go unused (no successful login) before the system denies login.

MULTLOG—Indicates whether users can be logged on to multiple terminals at the same time

MINLEN—The minimum password length.

ALPHA—The minimum number of alphabetic characters (a–z) required in a new password.

NUM—The minimum number of numeric characters (0–9) required in a new password.

PUNC—The minimum number of punctuation characters required in a new password. A punctuation character is any character that is not an alphabetic or numeric character.

WARNING MESSAGE—The message displayed when a user has successfully logged in.

rtrv-secu-trm

Display Terminal Access Rights

Use this command to display the access rights for a terminal. Only a user with system security administration authority can change a terminal's access rights. Access rights determine whether a terminal or port has command access to the system.

Keyword: rtrv-secu-trm

Related Commands: chg-secu-trm

Command Class: Security Administration

Parameters

:trm= (optional)

Specifies the port about which information will be displayed.

Range: 1-16

Default: Display all

Example

```
rtrv-secu-trm
```

```
rtrv-secu-trm:trm=9
```

Dependencies

None

Notes

None

Output

The following example shows attributes of all terminals when the Command Class Management feature is off.

rtrv-secu-trm

e5oam 08-12-01 23:40:14 EST EAGLE 40.1.0

TRM	LINK	SA	SYS	PU	DB	DBG
1	YES	***	YES	YES	YES	YES
2	YES	***	YES	YES	YES	YES
3	YES	YES	YES	YES	YES	YES
4	YES	YES	YES	YES	YES	YES
5	YES	YES	YES	YES	YES	YES
6	YES	YES	YES	YES	YES	YES
7	NO	***	NO	NO	NO	NO
8	YES	***	YES	YES	YES	YES
9	YES	***	YES	YES	YES	YES
10	YES	***	YES	YES	YES	YES
11	YES	***	YES	YES	YES	YES
12	NO	***	NO	NO	NO	NO
13	NO	***	NO	NO	NO	NO
14	NO	***	NO	NO	NO	NO
15	NO	YES	NO	NO	NO	NO
16	NO	***	NO	NO	NO	NO

;

The following example shows attributes of all terminals when the Command Class Management feature is on.

rtrv-secu-trm

rlghncxa03w 08-12-01 12:30:07 EST EAGLE 40.1.0

trm	link	sa	sys	pu	db	dbg
1	NO	NO	YES	NO	YES	NO
2	NO	YES	NO	NO	NO	NO
3	YES	***	YES	YES	YES	YES
4	NO	NO	NO	NO	NO	NO
5	YES	***	YES	NO	YES	YES
6	NO	NO	NO	NO	NO	NO
.						
.						
.						
16	NO	YES	NO	NO	YES	YES

trm	U01	U02	U03	U04	U05	U06	U07	U08	U09	U10	U11	U12	U13	U14	U15	U16
1	NO	NO	YES	NO	YES	NO	YES	YES	NO	YES	NO	NO	NO	NO	YES	NO
2	NO	YES	NO	NO	NO	NO	YES	NO	NO	NO	YES	NO	YES	NO	YES	NO
3	YES	NO	YES	YES	YES	YES	YES	NO	NO	YES	NO	NO	NO	YES	NO	YES
4	NO	NO	NO	NO	NO	NO	YES	NO	YES	NO	YES	NO	YES	NO	YES	NO
5	YES	YES	YES	NO	YES	YES	YES	YES	YES	YES	NO	NO	NO	YES	NO	YES
6	NO	NO	NO	NO	NO	NO	YES	YES	YES	NO	YES	NO	YES	NO	YES	NO
.																
.																
.																
16	NO	YES	NO	NO	YES	YES	YES	YES	YES	YES	YES	YES	NO	YES	NO	YES

trm	U17	U18	U19	U20	U21	U22	U23	U24	U25	U26	U27	U28	U29	U30	U31	U32
1	NO	NO	YES	NO	YES	NO	YES	YES	NO	YES	NO	NO	NO	YES	NO	YES
2	NO	NO	NO	NO	NO	NO	YES	NO	YES	NO	YES	NO	YES	NO	YES	NO
3	YES	YES	YES	NO	YES	YES	YES	YES	YES	YES	NO	NO	NO	YES	NO	YES
4	NO	NO	NO	NO	NO	NO	YES	YES	YES	NO	YES	NO	YES	NO	YES	NO
5	NO	NO	YES	NO	YES	NO	YES	YES	NO	YES	NO	NO	NO	NO	YES	NO
6	NO	YES	NO	NO	NO	NO	YES	NO	NO	NO	YES	NO	YES	NO	YES	NO
.																
.																


```
.
16      NO  YES NO  NO  YES YES YES YES NO  YES NO  YES NO  YES NO  YES
```

```
;
```

The following example shows attributes of terminal 9; the Command Class Management feature is off.

```
rtrv-secu-trm:trm=9
```

```
rlghncxa03w 08-12-01 12:30:07 EST EAGLE 40.1.0
```

```
TRM    LINK SA  SYS  PU   DB   DBG
9      NO   NO  YES  NO   YES  NO
```

```
;
```

The following example shows attributes of terminal 9; the Command Class Management feature is on.

```
rtrv-secu-trm:trm=9
```

```
rlghncxa03w 08-12-01 12:30:07 EST EAGLE 40.1.0
```

```
TRM    LINK SA  SYS  PU   DB   DBG
9      NO   NO  YES  NO   YES  NO
```

```
trm    U01 U02 U03 U04 U05 U06 U07 U08 U09 U10 U11 U12 U13 U14 U15 U16
9      NO  NO  YES NO  YES NO  YES YES YES YES NO  YES NO  YES NO  YES
```

```
trm    U17 U18 U19 U20 U21 U22 U23 U24 U25 U26 U27 U28 U29 U30 U31 U32
9      NO  NO  YES YES YES YES YES YES YES YES YES YES YES NO  YES NO  NO
```

```
;
```

Legend

TRM—The ID number of the terminal whose characteristics are to be changed.

LINK—Shows whether the Link Maintenance class of commands is allowed for this terminal.

SA—Shows whether the Security Administration class of commands is allowed for this terminal.

SYS—Shows whether the System Maintenance class of commands is allowed for this terminal.

PU—Shows whether the Program Update class of commands is allowed for this terminal.

DB—Shows whether the Database class of commands is allowed for this terminal.

DBG—Shows whether the Debug class of commands is allowed for this terminal.

*******—Denotes a Security Administration port whose port type has been configured with a value of **oap**, **none**, or **printer**. These terminal types do not allow you to enter commands.

LNPBAS—Shows whether the LNP BASIC class of commands is allowed for this terminal. (Appears only if LNP is turned on.)

U01 - U32—Configurable command class default names. (If configured with a user-specified name, that name appears.)

rtrv-secu-user

Retrieve Security User

Use this command to show the security information for all users in the system.

Keyword: **rtrv-secu-user**

Related Commands: **act-user**, **chg-pid**, **chg-user**, **dact-user**, **dlt-user**, **ent-user**, **login**, **logout**, **rept-stat-user**, **rtrv-user**

Command Class: Security Administration

Parameters

:uid= (optional)

User ID

Range: *azzzzzzzzzzzzzzzzz*

1 alphabetic character followed by up to 15 alphanumeric characters

Default: Display all

Example

rtrv-secu-user : uid = rogers

Dependencies

If a user ID is specified, the user ID must exist in the UserID table.

Notes

Only the system administrator should have access to this command.

Passwords cannot be shown.

This command can be canceled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

Output

The following example shows a display when the Command Class Management feature is not enabled:

rtrv-secu-user

```
rlghncxa03w 08-12-01 09:50:17 EST EAGLE 40.1.0
```

user id	age	page	uout	rev	link	sa	sys	pu	db	dbg
eagle1longname16	750	0	0	NO	YES	YES	YES	YES	YES	YES

user id	age	page	uout	rev	link	sa	sys	pu	db	dbg
manny	36	60	60	NO	YES	YES	YES	YES	YES	YES

user id	age	page	uout	rev	link	sa	sys	pu	db	dbg
moe	100	30	60	YES	YES	YES	YES	YES	YES	YES

user id	age	page	uout	rev	link	sa	sys	pu	db	dbg
jack	10	30	30	NO	YES	YES	YES	YES	YES	YES

```
;
```

The following example shows a display when the Command Class Management feature is enabled:

rtrv-secu-user

```
rlghncxa03w 08-12-01 09:50:17 EST EAGLE 40.1.0
```

user id	age	page	uout	rev	link	sa	sys	pu	db	dbg
eagle1longname16	750	0	0	NO	YES	YES	YES	YES	YES	YES

u01	u02	u03	u04	u05	u06	u07	u08	u09	u10	u11	u12	u13	u14	u15	u16
YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO

u17	u18	u19	u20	u21	u22	u23	u24	u25	u26	u27	u28	u29	u30	u31	u32
YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO	NO	NO	YES

user id	age	page	uout	rev	link	sa	sys	pu	db	dbg
manny	36	60	60	NO	YES	YES	YES	YES	YES	YES

u01	u02	u03	u04	u05	u06	u07	u08	u09	u10	u11	u12	u13	u14	u15	u16
NO	NO	NO	NO	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES

u17	u18	u19	u20	u21	u22	u23	u24	u25	u26	u27	u28	u29	u30	u31	u32
YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO	NO	NO	YES

user id	age	page	uout	rev	link	sa	sys	pu	db	dbg
moe	100	30	60	YES	YES	YES	YES	YES	YES	YES

u01	u02	u03	u04	u05	u06	u07	u08	u09	u10	u11	u12	u13	u14	u15	u16
YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO

u17	u18	u19	u20	u21	u22	u23	u24	u25	u26	u27	u28	u29	u30	u31	u32
YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO	NO

user id	age	page	uout	rev	link	sa	sys	pu	db	dbg
jack	10	30	30	NO	YES	YES	YES	YES	YES	YES

```

u01 u02 u03 u04 u05 u06 u07 u08 u09 u10 u11 u12 u13 u14 u15 u16
YES YES YES YES YES YES YES YES YES YES YES YES YES YES YES
u17 u18 u19 u20 u21 u22 u23 u24 u25 u26 u27 u28 u29 u30 u31 u32
YES YES YES YES YES YES NO NO NO NO YES YES YES YES YES NO

```

;

Legend

USER-ID—The name of the user

AGE—Shows the current age, in days, of the password associated with this user ID. If the password age is greater than 999 days, the value **999** is displayed.

PAGE—Shows the maximum password age established for this user ID. When AGE becomes greater than PAGE, the system forces the user to change the password at the next login. An asterisk (*) displayed after the value indicates that the system-wide default page parameter value, as configured on the **chg-secu-dflt** command, is in effect for the user ID.

UOUT—Shows the user ID aging interval, in days. If the user ID is not used (that is, no successful login) for longer than this interval, the system does not allow a login. An asterisk (*) displayed after the value indicates that the system-wide default **uout** parameter value, as configured on the **chg-secu-dflt** command, is in effect for the user ID.

REV—Shows whether the user ID is denied login (revoked). YES indicates that the user ID is revoked, NO indicates that the user ID is not revoked.

LINK—Shows whether the user has access to all commands in the Link Maintenance command class.

SA—Shows whether the user has access to all commands in the Security Administration command class.

SYS—Shows whether the user has access to all commands in the System Maintenance command class.

PU—Shows whether the user has access to all commands in the Program Update command class.

DB—Shows whether the user has access to all commands in the Database Administration command class.

DBG—Shows whether the user has access to all commands in the Debug command class.

If the Command Class Management feature is enabled, the following fields appear:

U01 - U32—Default configurable command class names. If user-defined names have been provisioned, they will appear instead of the default names.

If the LNP feature is turned on, the following field is displayed:

LNPBAS—Shows whether the user has access to all commands in the LNP Basic command class.

rtrv-seculog**Generate Report from Security Log Contents**

Use this command to retrieve the contents of a security log and display it to the user in the scroll area. Various reports can be produced by varying the values of the command parameters. By default, the report is generated from the log on the active fixed disk, although the **slog** parameter can be used to generate the report from the log on the standby fixed disk.

Keyword: rtrv-seculog

Related Commands:

Command Class: Security Administration

Parameters

:edate= (optional)

End date. Use this parameter to report log entries only if they were created on or before the specified date. If the **sdate** parameter is also specified, log entries are reported only if they were created for the date period specified by the **sdate** and **edate** combination.

Range: 000101-991231

(in the form *yymmdd*, where *yy* is year, *mm* is month, and *dd* is day)

The date must be specified with 6 digits. For example, enter 1/1/96 as **960101**.

Default: Report log entries regardless of their creation date

:etime= (optional)

End time. Use this parameter to report log entries only if they were created between midnight (00:00:00) and the time specified on this parameter. If the **stime** parameter is also specified, log entries are reported only if they were created in the time period specified by the **stime** and **etime** combination.

Range: 000000-235959

(in the form *yymmdd*, where *yy* is year, *mm* is month, and *dd* is day)

The time must be specified with 6 digits in a 24-hour format. For example, enter 1:05:03 P.M. as **130503**.

Default: Report log entries regardless of their creation time

:mode= (optional)

Use this parameter to produce a either full log report or an abbreviated log report.

Range: brief, full

brief—Causes only one line of output to be generated for each log entry reported. Some information in each reported log entry is not shown.

full—Produces a report showing multiple lines of output for each log record that is reported. This report displays more information from each log record (including the entire command) than the **mode=brief** report.

Default: brief

:num= (optional)

Maximum number of records to be displayed. This parameter specifies how many records are to be displayed before the report is terminated.

Range: 1-50000

Default: 500—if **mode=brief** is specified

250—if **mode=full** is not specified

:rectype= (optional)

Use this parameter to specify whether you want all records in the log to be considered for reporting or only new (that is, un-uploaded) records.

Range: new, both

new—The report generator scans only new (that is, un-uploaded) records when generating the report. Old records are not considered for reporting, even if they match the reporting criteria.

both—All records in the log are considered for reporting.

Default: new

:sdate= (optional)

Start date. Use this parameter to report log entries only if they were created on or after the specified date. If the **edate** parameter is also specified, log entries are reported only if they were created for the date period specified by the **sdate** and **edate** combination.

Range: **000101-991231**

(in the form *yymmdd*, where *yy* is year, *mm* is month, and *dd* is day)

The date must be specified with 6 digits. For example, enter 1/1/96 as **960101**.

Default: Report log entries regardless of their creation date

:slog= (optional)

Source log indicator. This parameter specifies which log is to be copied to the FTA.

Range: **act, stb**

act—Specify **act** to produce the report from the log on the active MASP

stb—Specify **stb** to produce the report from the log on the standby MASP

Default: **act**

:stime= (optional)

Start time. Use this parameter to report log entries only if they were created between the time specified on this parameter and the end of the day (23:59:59) inclusive. If the **etime** parameter is also specified, log entries are reported only if they were created in the time period specified by the **stime** and **etime** combination.

Range: **000000-235959**

The time must be specified with 6 digits in a 24-hour format (*hhmmss*). For example, enter 1:05:03 p.m. as **130503**.

hhmmss—*hh*=hours (**00-23**), *mm*=minutes (**00-59**), *ss*=seconds (**00-59**)

Default: Report log entries regardless of their creation time

:trm= (optional)

Terminal ID. Use this parameter to report only those log entries created by the specified terminal.

Range: **1-16**

Default: Report log entries regardless of the associated terminal

:uid= (optional)

User ID. Use this parameter to report only those log entries created by the specified user ID. Specify **uid=seas** to report only those commands received on a SEAS terminal. Specify **uid=none** to report only those commands not associated with a user ID. For example, commands issued prior to login.

Range: **azzzzzzzzzzzzzzz**

1 alphabetic character followed by up to 15 alphanumeric characters

Default: Display all

Example

```
rtrv-seculog:sdate=021496:edate=021596:num=7
```

```
rtrv-
```

```
seculog:mode=full:sdate=021496:edate=021496:stime=062900:etime=063200
```

Dependencies

If both the **sdate** and **edate** parameters are specified, the date that is specified for the **sdate** parameter must be earlier than or equal to the date specified for the **edate** parameter.

If both the **stime** and **etime** parameters are specified, the time that is specified for the **stime** parameter must be earlier than or equal to the time specified for the **etime** parameter.

The month component of the **sdate** and **edate** parameter combination must be specified in the range 1–12.

The day component of **sdate** and **edate** parameter combination must be specified in the range **1–31**. This value must accurately reflect the number of days in the month and year indicated. For example, **sdate=960631** is not a valid parameter value because June has only 30 days.

The second component of the **stime** and **etime** parameter combination must be specified in the range **00–59**.

The minute component of the **stime** and **etime** parameter combination must be specified in the range **00–59**.

No other security log command can be in progress when this command is entered.

Notes

To accommodate the year 2000 and beyond, the two-digit year portion of dates is interpreted to be in the indicated century as follows:

years 95–99 = 1995 through 1999

years 00–36 = 2000 through 2036

A consequence of this is that date 000101 (Jan 1, 2000) is greater than 991231 (December 31, 1999).

If the **mode=brief** parameter is specified and the output report has a plus (+) symbol appearing at the end of the command, the plus symbol indicates that more command characters are available to be displayed. Specify the **mode=full** parameter to see these additional characters.

In the **mode=full** output report, a plus (+) symbol appearing at the end of the command indicates the command is longer than 150 characters. Note that even in the uploaded log, each record in the log has room to record only 150 characters of the entered command. If the command is longer than 150 characters, then only the first 149 characters of the command and the plus symbol (to indicate that truncation has occurred) are recorded.

Security log size is limited to 50,000 records. Data from a query that exceeds the size limit of the security log cannot be displayed.

The system checks to ensure that the day portion of any **sdate/edate** value entered is in agreement with the month and year. It issues error message E2252 if the day is found to be invalid (for example, **960631** is not a valid date). The system software and date/time hardware properly handle leap years and leap centuries. The year 2000 is a leap year.

The system uses the **sdate/edate** and **stime/etime** parameters to select log records for reporting as follows:

- If the date on which the log record was created is not in the date range specified by the **sdate/edate** parameters, the record is not reported. The default **sdate** is the date of the oldest record in the log, and the default **edate** is the current date.
- If the time of day at which the log record was created is not in the time range specified by the **stime/etime** parameters, the record is not reported. The default **stime** is 00:00:00 (midnight), and the default **etime** is 23:59:59.
- Otherwise, the log record is reported, unless it is disqualified by other parameters such as **uid** or **trm**.

As an example, if the following command is entered, records are displayed for October 10, 1996 from 2:00 p.m. until 4:00 p.m., for October 11, 1996, from 2:00 p.m. until 4:00 p.m., and for October 12, 1996, from 2:00 p.m. until 4:00 p.m.

rtrv-seculog:sdate=961010:edate=961012:stime=140000:etime=160000

It takes the system approximately one minute to display 500 lines of data in the scroll area. To output a complete **mode=full** report (150,000 lines maximum) takes approximately 300 minutes. For this reason, the **num** parameter defaults to either **125 (mode=full)** or **500 (mode=brief)**, to prevent an excessively long process time, unless you deliberately choose a longer report.

This command can be canceled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

The following message appears in the scroll area if the **slog=stb** parameter is specified (either explicitly or by default) and the standby fixed disk is not available (for example, simplex mode).

Command Failed - unable to read security log

When the **rtrv-seculog** command is entered, one of the first things that the reporting function does is to examine the log overflowed and logging failure flags in the header of the specified log.

Depending on the nature of the information found, one of the following notices is displayed in the output:

Notice: Log overflow has occurred -- report may be incomplete.

Notice: Logging failure -- report may be incomplete.

Output

The following example shows how all records in the log created between 2/14/96 and 2/15/96 are to be displayed, up to a maximum of 9 records.

rtrv-seculog:sdate=960214:edate=960215:num=9

rlghncxa03w 96-02-14 06:32:20 EST EAGLE Release 34.0

Notice: Log overflow has occurred -- report may be incomplete.

Reporting parameters:

sdate = 960214

edate = 960215

num = 9

uid	trm	date	time	st	cmd
NONE	03	960214	063000	OK	login:uid=johnlamb
SEAS	15	960214	063010	OK	CHG-SLK::LSN123-03:123456:50,RCH::S+
johnlamb	03	960214	063021	OK	rept-stat-trbl
SEAS	15	960214	063032	OK	CHG-RTE::LSNABC-001001001:123456:55+
johnlamb	05	960215	064524	RJ	ent-crad:loc=1201:type=limds0:appl=+
johnlamb	05	960215	064528	OK	ent-card:loc=1201:type=limds0:appl=+
johnlamb	03	960215	063030	AB	rept-stat-card
johnlamb	03	960215	063031	OK	canc-cmd
johnlamb	05	960215	064533	OK	logout

Report terminated -- output length limitation (NUM=) reached.

9 records reported of 5613 records scanned.

END OF SECURITY LOG REPORT.

;

The following example shows that all records in the log created between 2/14/96 and 2/15/96 between the hours of 06:29:00 and 06:32:00 are to be displayed.

rtrv-

seculog:mode=full:sdate=960214:edate=960214:stime=062900:etime=063200

rlghncxa03w 96-02-14 06:32:20 EST EAGLE Release 34.0

Reporting parameters:

sdate = 960214

edate = 960214

stime = 062900

etime = 063200

uid	trm	date	time	result
NONE	05	960214	062912	E1234
Cmd: login:uid=eagle				
johnlamb	03	960214	063000	OK
Cmd: rept-stat-card				
SEAS	16	960214	063123	OK

Cmd:CHG-

SLK::LSN12345-12:123456:50,RCH::00S:::D,PRV123456-106-12,96-02-14-06-31-22;

Johnlamb 03 960214 063128 OK

Cmd:chg-lnp-lrn:lrn=1234567890:nmrgt1=255-255-255-255-dpcssn-ssn-255-yes:nmrgt2=255-255-255-255-dpcssn-ssn-255-yes:mrrgt3=255-255-255-255-dpcssn+

3 records reported of 50000 records scanned.

END OF SECURITY LOG REPORT.

;

The following example shows a maximum of 10 records (SEAS commands) in the log when the SEAS Over IP feature is turned on and SEAS commands are issued through the SEAS terminals.

rtrv-seculog:uid=seas:num=10

tekelecstp 07-03-09 11:57:50 IST EAGLE 37.5.0

Reporting parameters:

uid = seas

num = 10

uid	trm	date	time	st	cmd
SEAS	17	070902	124846	RJ	ASGN-SLK::LS111-00:AJP60D:50,SOM::1+
SEAS	17	070902	124856	OK	ASGN-SLK::LS111-02:AJP60D:50,SOM::1+
SEAS	17	070902	124944	OK	ASGN-SLK::LS111-03:AJP60D:50,SOM::1+
SEAS	17	070902	125238	OK	ASGN-SLK::LS111-11:AJP60D:50,SOM::1+
SEAS	17	070902	125245	OK	ASGN-SLK::LS111-05:AJP60D:50,SOM::1+
SEAS	17	070902	125257	OK	ASGN-SLK::LS111-13:AJP60D:50,SOM::1+
SEAS	17	070902	130331	OK	ASGN-SLK::LS111-02:AJP60D:50,SOM::1+
SEAS	17	070902	130539	OK	ASGN-SLK::LS111-02:AJP60D:50,SOM::1+
SEAS	25	070902	131327	OK	ASGN-SLK::LS111-03:AJP60D:50,SOM::1+
SEAS	25	070902	184758	OK	ASGN-SLK::LS111-02:AJP60D:50,SOM::1+

Report terminated -- output length limitation (NUM=) reached

10 records reported of 240 records scanned.

END OF SECURITY LOG REPORT.

Legend

UID—The user ID that issued the command. The value **SEAS** appears if the command was received on a SEAS port. The value **NONE** appears if no user ID was associated with the port at the time the command was logged.

TRM—The terminal ID of the terminal where the command was received.

DATE—The date when the log entry was made; that is, the date on which the command was received for execution.

TIME—The time when the log entry was made; that is, the time the command was received for execution. A 24-hour time format is used (for example, 1:00 p.m. = 130000).

ST—The two-letter shorthand notation of the command's status. The complete status can be obtained by re-entering the **rtrv-seculog** command and specifying the **mode=full** parameter. The status abbreviations are as follows:

- **AB**—Command aborted. Displayed when the **canc-cmd:trm** command is issued to abort the following commands: **rept-stat-card**, **rept-stat-dstn**, **rept-stat-ls**, **rept-stat-slk**, **rtrv-dstn**, **rtrv-gta**, **rtrv-gtt**, **rtrv-ls**, **rtrv-map**, **rtrv-rte**, **rtrv-seculog**, and **rtrv-slk**. An AB status indicates that processing and output of the command have been halted. This status is also displayed for SEAS flow-thru commands that are canceled with the **canc-cmd** (without the **trm** parameter).
- **RJ**—Command rejected. Displayed whenever the results value that would be displayed in the **mode=full** report would be one of the following:

Edddd

FAILED

rrrrr/mmmmm

- **RL**—Retry later. The system is busy.
- **IP**—In Progress

- **OK**—Command successfully executed
- **TO**—Timed out.

CMD—The command that was recorded. In the **mode=brief** report, if the length of the recorded command is greater than or equal to 35 characters (as this much as can be displayed on a single line of the output report), then only the first 34 characters of the command are displayed, and the 35th character is displayed as a plus symbol (+) to indicate that more information is available in the log. Re-enter the **rtrv-seculog** command with the **mode=full** parameter to see the additional information. In the **mode=full** report, a plus symbol at the end of a command indicates that the command is longer than 150 characters.

rtrv-serial-num

Retrieve Serial Number

Use this command to retrieve the NT serial number for the system.

Keyword: **rtrv-serial-num**

Related Commands: **ent-serial-num**

Command Class: Database Administration

Parameters

This command has no parameters.

Example

rtrv-serial-num

Dependencies

None

Notes

None

Output

Dashes appear if the serial number has not yet been entered into the database.

rtrv-serial-num

```
rlghncxa03w 03-03-29 16:40:40 EST EAGLE 31.3.0
System serial number = nt00001231
```

```
System serial number is locked.
```

```
rlghncxa03w 03-03-29 16:40:40 EST EAGLE 31.3.0
Command Completed
```

```
;
```

rtrv-sg-opts

Retrieve IP7 Secure Gateway Options

Use this command to retrieve information about the currently chosen IP⁷ Secure Gateway protocol options.

Keyword: **rtrv-sg-opts**

Related Commands: **chg-sg-opts**, **rtrv-appl-rtkey**

Command Class: Database Administration

Parameters

This command has no parameters.

Example

rtrv-sg-opts

Dependencies

None

Notes

None

Output

rtrv-sg-opts

```
rlghncxa03w 08-02-07 09:50:17 EST EAGLE 38.0.0
SRKQ:                250
SNMPCONT:            john doe 555-123-4567
GETCOMM:              public
SETCOMM:              private
TRAPCOMM:             public
SCTPCSUM:             adler32
IPGWABATE:            NO
UAMEASUSEDFTAS:      YES
```

;

Legend

SRKQ—The static routing key quantity. The maximum number of routing key entries in the Static Routing Key table.

SNMPCONT—The system contact information for each SSED CM SNMP agent.

GETCOMM—The community name used for messages sent by SS7IPGW cards (SNMP Get and GetNext request validations).

SETCOMM—The community name used for SNMP set request validation. This value applies for each SSED CM SNMP agent in the system.

TRAPCOMM—The community name used when SNMP traps are generated. This value applies for each SSED CM SNMP agent in the system.

SCTPCSUM—The SCTP checksum algorithm type.

IPGWABATE—The IPGWx SS7 congestion abatement procedures.

UAMEASUSEDFTAS—The UA measurements are generated.

rtrv-shlf**Retrieve Shelf**

Use this command to display the frames and shelves that are currently provisioned in the system. The type of shelf is also shown.

Keyword: **rtrv-shlf**

Related Commands: **dlt-shlf**, **ent-shlf**

Command Class: Database Administration

Parameters

:loc= (optional)

The shelf location.

Range: 1100, 1200, 1300, 2100, 2200, 2300, 3100, 3200, 3300, 4100, 4200, 4300, 5100, 5200, 5300, 6100

Default: Display all configured locations

Example

```
rtrv-shlf
```

```
rtrv-shlf:loc=1300
```

```
rtrv-shlf:loc=2100
```

Dependencies

The frame and shelf values of the shelf location parameter (**loc**) must be within the valid range (xyzz, where x=frame and y=shelf; zz is always 00 for this command).

Notes

None

Output

The following example displays all configured STP equipment shelves.

rtrv-shlf

```
rlghncxa03w 04-01-07 09:50:17 EST EAGLE 31.3.0
SHELF DISPLAY
FRAME SHELF      TYPE
  1      1      CONTROL
  1      2      EXTENSION
  1      3      EXTENSION
  2      3      EXTENSION
;
```

The following example displays a specific STP equipment shelf.

rtrv-shlf: loc=1300

```
rlghncxa03w 04-01-07 09:50:17 EST EAGLE 31.3.0
SHELF DISPLAY LOCATION=1300
FRAME SHELF      TYPE
  1      3      EXTENSION
CARD   TYPE      APPL   LSET NAME   PORT SLC LSET NAME   PORT SLC
1301   LIMDS0    SS7ANSI  -----   --  --  -----   --  --
1302   LIMDS0    SS7ANSI  -----   --  --  -----   --  --
1303   LIMDS0    SS7ANSI  -----   --  --  -----   --  --
1304   LIMDS0    SS7ANSI  -----   --  --  -----   --  --
1305   LIMDS0    SS7ANSI  -----   --  --  -----   --  --
;
```

The following example displays a specific STP equipment shelf that is not configured (unequipped).

rtrv-shlf: loc=2100

```
rlghncxa03w 04-01-07 09:50:17 EST EAGLE 31.3.0
SHELF DISPLAY LOCATION=2100
FRAME SHELF      TYPE

This shelf is UNEQUIPPED in the database.
;
```

Legend

FRAME—The frame location of the shelf.

SHELF —The location of the shelf within the frame.

TYPE —The type of shelf.

CARD—Card location in the specified shelf.

TYPE—Card type

APPL—Application running on the card.

LSET NAME—Linkset name defined for the port on the card.

PORT—Port used by the linkset defined on the card.

SLC—Signaling link code for the linkset.

rtrv-sid**Retrieve Self Identification**

Use this command to retrieve site identification characteristics of the system. It shows the point code assigned to this system, the CLLI code of the system, the capability code of the STP, and the type of point codes supported by the system.

Keyword: rtrv-sid

Related Commands: chg-sid, ent-sid

Command Class: Security Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:cpc= (optional)

ANSI capability point code in the form of *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: cpca

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001–005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006–255.

The point code 000-000-000 is not a valid point code.

Default: Display all

:cpc/cpca/cpci/cpcn/cpcn24= (optional)

Capability point code. The code used by the SS7 protocol to identify a group of functionally related STPs in the signaling network to which the STP belongs.

:cpci= (optional)

ITU international point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: s-, 0-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code 0-000-0 is not a valid point code.

Default: Display all

:cpcn= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: s-, 0-16383, aa-zz

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

Default: Display all

:cpcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*.

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

Default: Display all

:cpctype= (optional)

Capability point code type. This parameter displays the CPCs that are provisioned for the specified service.

Range: **stp, lnp, inp, eir, gport, gflex, mnp, atinpq, vflex**

Default: **stp**

Example

```
rtrv-sid
```

```
rtrv-sid:cpc=3-3-3
```

```
rtrv-sid:cpc=001-001-001
```

```
rtrv-sid:cyctype=inp
```

```
rtrv-sid:cpci=2-100-4
```

```
rtrv-sid:cpcn24=33-33-33
```

```
rtrv-sid:cpcn=s-00456
```

Dependencies

The STP destination point codes and capability point codes can be specified only as full point codes.

The ANSI point code **0-0-0** and the ITU-I point code **0-000-0** are invalid for STP capability point codes.

The LNP feature must be turned on before the **cpctype=lnp** parameter can be specified.

The INP feature must be turned on before the **cpctype=inp** parameter can be specified.

The EIR feature must be turned on before the **cpctype=eir** parameter can be specified.

The Spare Point Code Support feature must be enabled before an ITU-I or ITU-N spare point code can be retrieved.

If the **cpcn** parameter is specified, the format of the specified point code must match the format that was assigned with the **chg-stpopts** command **npcfmti** parameter.

The ATINP feature must be enabled before the **cpctype=atinpq** parameter can be specified.

The V-Flex feature must be turned on before the **cpctype=vflex** parameter can be specified.

The A-Port or the IS41 GSM Migration (IGM) feature must be enabled, before the **cpctype=mnp** parameter can be specified.

Notes

If the **cpc/cpca/cpci/cpcn/cpcn24** parameter is not specified, all site identification characteristics are displayed.

If the STP capability point code is specified and not provisioned, the report contains only the PCA, PCI, PCN or PCN24, CLLI, and PCTYPE fields, with the message:

Compatibility Point Code specified is not provisioned.

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-).

Output

The **rtrv-sid** command CPC output is sorted using three sort keys.

- The first sort key is by the **cpctype** service, ordered by: **stp** (own STP, unlabeled), **inp**, **eir**, **gflex**, and either **gport** or **mnp** depending on whether A-Port, ATINP, G-Port or V-Flex is enabled.
- The second sort key is by network type, ordered by: ANSI, ITU-I, ITU-N, then ITU-N24.
- The third sort key is by point code value, ordered low to high.

In the following output examples:

- When a 24-bit ITU-N site identification STP point code is configured, the PCN header is changed to PCN24.
- The s- point code prefix indicates an ITU national or international spare point code or spare capability point code.
- INP, LNP, EIR, G-Flex, G-Port and V-Flex capability point codes are indicated in parentheses after the capability point code header.
- STP capability point codes have no parentheses after the header.

The examples show all site identification characteristics provisioned in the system at the time the command was entered.

The following example includes a 24-bit ITU-N site ID and a 24-bit ITU-N capability point code.

rtrv-sid

```
tekelecstp 04-06-14 15:18:11 EST EAGLE 31.12.0
PCA          PCI          PCN24          CLLI          PCTYPE
001-001-001  -----          011-011-011  tekelecstp    ANSI

CPCN24
022-022-022
```

;

The following example shows all site identification characteristics provisioned in the system at the time the command was entered. The output includes spare point codes.

rtrv-sid

```
tekelecstp 04-06-14 15:18:11 EST EAGLE 31.12.0
PCA          PCI          PCN          CLLI          PCTYPE
005-067-000  1-023-4          01234          tekelecstp    ANSI
              s-1-023-4      s-01234

CPCI
s-4-056-0
```

```
CPCN
s-00456
```

;

The following example shows a display of a particular STP capability point code.

rtrv-sid:cpc=5-5-4

```
rlghncxa03w 03-03-18 09:33:58 EST EAGLE 31.3.0
PCA          PCI          PCN          CLLI          PCTYPE
008-013-008  -----          -----      tklcstn14    OTHER

CPCA
```

```
005-005-004
```

```
;
```

The following example shows a particular LNP capability point code.

rtrv-sid:cpc=3-3-3

```
rlghncxa03w 03-03-10 09:33:58 EST EAGLE 31.3.0
PCA          PCI          PCN          CLLI          PCTYPE
008-013-008  -----  -----  tklcstn14      OTHER

CPCA (LNP)
003-003-003
```

```
;
```

The following example shows the message that appears when no match for the specified capability point code is found in the Site ID table.

rtrv-sid:cpc=100-100-100

```
rlghncxa03w 03-03-18 09:33:58 EST EAGLE 31.3.0
PCA          PCI          PCN          CLLI          PCTYPE
008-013-008  -----  -----  tklcstn14      OTHER
```

```
Capability Point Code specified is not provisioned.
```

```
;
```

The following example shows a display of a site identification STP point code with a group code (the ITUDUPPC feature must be on).

rtrv-sid

```
rlghncxa03w 03-03-18 09:33:58 EST EAGLE 31.3.0
PCA          PCI          PCN          CLLI          PCTYPE
008-013-008  -----  128-15-1-1-si tklcstn14      OTHER
```

```
;
```

The following example shows all provisioned INP capability point codes.

rtrv-sid:cpctype=inp

```
rlghncxa03w 03-03-18 09:33:58 EST EAGLE 31.3.0
PCA          PCI          PCN          CLLI          PCTYPE
-----  2-150-4  12345  tklcstn14      OTHER

CPCN (INP)
1234 34567

CPCI (INP)
3-050-2  4-100-3
```

```
;
```

The following example shows a specific 24-bit ITU-N capability point code.

rtrv-sid:cpcn24=33-33-33

```
rlghncxa03w 02-03-18 09:33:58 EST EAGLE 31.0.0
PCA          PCI          PCN24          CLLI          PCTYPE
001-001-001  -----  011-011-011  tekelecstp      ANSI

CPCN24
033-033-033
```

```
;
```

The following example shows all capability point codes with **cpctype=eir**.

rtrv-sid:cpctype=eir

```
rlghncxa03w 03-03-18 09:33:58 EST EAGLE 31.0.0
PCA          PCI          PCN24          CLLI          PCTYPE
001-001-001  2-020-1          tekelecstp  ANSI
```

```
CPCI (EIR)
2-020-2
```

```
CPCN (EIR)
123
```

;

The following example contains capability point codes provisioned with **cpctype=gflex** and **cpctyp**
e=gport.

rtrv-sid

```
tekelecstp 06-01-09 15:46:50 EST EAGLE 34.3.0
PCA          PCI          PCN          CLLI          PCTYPE
001-001-001  2-002-2          00333          tekelecstp  ANSI
```

```
CPCI (GFLEX)
2-002-3          2-002-4
```

```
CPCA (GPORT)
001-001-002          001-001-003
```

;

The following example displays point code output when the **cpctype=gflex** parameter is specified.

rtrv-sid:cpctype=gflex

```
tekelecstp 06-01-09 15:48:58 EST 34.3.0
PCA          PCI          PCN          CLLI          PCTYPE
001-001-001  2-002-2          00333          tekelecstp  ANSI
```

```
CPCI (GFLEX)
2-002-3          2-002-4
```

;

The following example displays point code output when the **cpctype=gport** parameter is specified.

rtrv-sid:cpctype=gport

```
tekelecstp 06-01-09 15:49:35 EST EAGLE 34.3.0
PCA          PCI          PCN          CLLI          PCTYPE
001-001-001  2-002-2          00333          tekelecstp  ANSI
```

```
CPCA (GPORT)
001-001-002          001-001-003
```

;

rtrv-sid

```
tekelecstp 04-06-14 15:18:11 EST EAGLE 31.12.0
PCA          PCI          PCN          CLLI          PCTYPE
008-013-008  -----          -----          tklcstn14  OTHER
```

```
CPCA
005-005-002          005-005-004          005-005-005
```

```
CPCA (LNP)
005-005-002          005-005-004          005-005-005
```

;

The following example shows an EIR capability point code. The output includes spare point codes.

rtrv-sid:cpctype=eir

```
rlghncxa03w 05-01-07 09:33:58 EST EAGLE 31.12.0
PCA          PCI          PCN          CLLI          PCTYPE
005-067-000  1-023-4          01234          tekelecstp      ANSI
              s-1-023-4      s-01234
```

```
CPCI (EIR)
s-1-024-5
```

```
CPCN (EIR)
12346
```

;

The following example retrieves a specific spare ITU-N capability point code.

rtrv-sid:cpcn=s-00456

```
rlghncxa03w 05-01-07-18 09:33:58 EST EAGLE 31.12.0
PCA          PCI          PCN          CLLI          PCTYPE
005-067-000  1-023-4          01234          tekelecstp      ANSI
              s-1-023-4      s-01234
```

```
CPCN
s-00456
```

```
CPCN (EIR)
s-123
```

;

The following example retrieves all capability point codes with **cpctype=mnmp**.

rtrv-sid:cpctype=mnmp

```
tklc1081301 06-10-05 11:43:02 EST EAGLE5 36.0.0
PCA          PCI          PCN          CLLI          PCTYPE
006-010-006  5-010-5          5-010-5-aa      tklc1081301      ANSI
```

```
CPCA (MNP)
006-012-000
```

```
CPCI (MNP)
5-012-0
```

```
CPCN (MNP)
5-012-0-aa      5-012-0-ms
```

```
CPCN24 (MNP)
006-012-000
```

;

The following example retrieves a specific capability point code with **cpc=4-4-4**.

rtrv-sid:cpc=4-4-4

```
rlghncxa03w 07-08-22 15:33:58 EST EAGLE 37.6.0
PCA          PCI          PCN          CLLI          PCTYPE
008-013-008  -----          -----          tekelecstp      OTHER
```

```
CPCA (VFLEX)
004-004-004
```

;

The following example retrieves all capability point codes with **cpctype=atinpq**.

rtrv-sid:cpctype=atinpq

```
tekelecstp 08-08-22 15:07:48 EST EAGLE 39.2.0
```

PCA 001-001-001	PCI 2-002-2	PCN 01234	CLLI tekelecstp	PCTYPE ANSI
CPCA (ATINPQ) 004-004-004				
CPCI (ATINPQ) 5-012-0				
CPCN (ATINPQ) 12345				

;

The following example retrieves all capability point codes with **cpctype=vflex**.

rtrv-sid:cpctype=vflex

tekelecstp 08-05-22 15:07:48 EST EAGLE 39.0.0

PCA 001-001-001	PCI 2-002-2	PCN 01234	CLLI tekelecstp	PCTYPE ANSI
CPCA (VFLEX) 004-004-004				
CPCI (VFLEX) 5-012-0				
CPCN (VFLEX) 12345				

;

Legend

PCA—The ANSI point code of the STP.

PCI—The ITU-TSS international point code of the STP.

PCN—The ITU-TSS national point code of the STP.

PCN24—The 24-bit ITU national point code of the STP.

CPCA—The ANSI capability point code used by the SS7 protocol to identify a group of functionally related STPs in the signaling network.

CPCN—The ITU-TSS national capability point code used by the SS7 protocol to identify a group of functionally related STPs in the signaling network.

CPCI—The ITU-TSS international capability point code used by the SS7 protocol to identify a group of functionally related STPs in the signaling network.

CPCN24—The ITU-TSS 24-bit national capability point code used by the SS7 protocol to identify a group of functionally related STPs in the signaling network.

(EIR)—The identified point code is an Equipment Identity Register (EIR) point code.

(INP)—The identified point code is an INAP Number Portability (INP) point code.

(LNP)—The identified point code is a local number portability (LNP) point code.

(GFLEX)—The identified point code is a G-Flex (GFLEX) point code.

(GPORT)—The identified point code is a G-Port (GPORT) point code.

(MNP)—The identified point code is an MNP point code.

(VFLEX)—The identified point code is a V-Flex (VFLEX) point code.

(ATINP)—The identified point code is an ATINP feature (ATINPQ) point code.

CLLI—The common language location identifier of the STP

PCTYPE—The type of point code used by the STP. There are two types of point codes that the EAGLE 5 ISS STP can use, ANSI and OTHER. The value ANSI means the EAGLE 5 ISS STP supports point codes that meet the ANSI standard. The value OTHER means that the EAGLE 5 ISS STP supports point codes that do not meet the ANSI standard.

rtrv-slk

Retrieve Signaling Link

Use this command to show the parameters for low-speed signaling links, ATM high-speed signaling links, or both.

Keyword: rtrv-slk

Related Commands: act-slk, blk-slk, dact-slk, dlt-slk, ent-slk, inh-slk, rept-stat-slk, tst-slk, ublk-slk, unhb-slk

Command Class: Database Administration

Parameters

:aname= (optional)

Association name. This parameter specifies the name of the association assigned to the links to be displayed.

Range: aaaaaaaaaaaaaa

Up to 15 alphanumeric characters; the first character must be a letter

:link= (optional)

The signaling link on the card specified in the **loc** parameter. The links can be specified in any sequence or pattern.

Synonym: port

Range: a, b, a1-a31, b1-b31

Not all card types support all **link** parameter values.

See "Summary of Range Values for :link Parameter" for valid **link** parameter range values for each type of card that can have assigned signaling links.

Default: Display all

:loc= (optional)

The card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Default: All signaling links are shown.

Example

```
rtrv-slk:loc=1302:link=a
```

```
rtrv-slk:loc=1302:link=b2
```

```
rtrv-slk:loc=1303:link=a31
```

```
rtrv-slk:aname=asocm2pa
```

```
rtrv-slk:loc=1305
```

Dependencies

If the **link** parameter is specified, the **loc** parameter must be specified. The **loc** parameter can be specified without the **link** parameter.

The **loc** parameter or the **class** parameter, but not both, can be specified in the command.

The slot portion of the specified **loc** parameter must be **01** through **18**, except **09** and **10** cannot be specified (**loc**= xyss, where x is the frame, y is the shelf, and ss is the slot).

Card locations **1113** through **1118** cannot be specified for the **loc** parameter.

The frame and shelf portion of the specified **loc** parameter must be **11, 12, 13, 21, 22, 23, 31, 32, 33, 41, 42, 43, 51, 52, 53**, or **61** (**loc**= xyss, where x is the frame, y is the shelf, and ss is the slot).

The **limatm**, **lime1atm**, **limds0**, **limocu**, **limv35**, **lime1**, **limt1**, **limch**, and **dcm** card types are the only valid card types for this command.

The card must be a LIM, an E1/T1 MIM, or an HC-MIM.

The specified card location must be equipped.

The following **link** parameter values can be specified for the following cards that support more than 2 links per card:

- **a1-a3, b1-b3**—Multi-port LIM (MPL), SSEDCCM card running the **iplim** or **iplimi** application with links having **ipliml2=m2pa**, E1/T1 MIM card
- **a1-a31, b1-b31**—HC-MIM card
- **a1-a15, b1-b15**—E5-E1T1 card
- **a1-a7, b1-b7**—E5-ENET card running the **iplim** or **iplimi** application that supports 16 links.
- **a1-a15, b1-b15**—E5-ENET card running the **ipsg** application

The **link** parameter values **a4-a31** and **b4-b31** can be specified only for the HC-MIM card that is used as an E1 card or a T1 card. The **link** parameter values **a4-a31** and **b4-b31** cannot be specified for Channel cards.

The **link** parameter values **a4-a31** and **b4-b31** cannot be specified for even-numbered card locations.

If the card application is **ss7gx25**, **link=a** must be specified.

The associated location must be empty, or an E5-ATM card must be provisioned in the location before the **link=b** parameter can be specified. Upon initialization, the E5-ATM card is in **boot phase-0** for up to 30 secs. During this period, the E5-ATM hardware is not detected, which may result in a lack of support for signalling link **b**.

If an E5-ATM card is used, then the value specified for the **link** parameter must be **a** or **b**.

Notes

This command can be canceled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

Not every card location represents a signaling link. Be sure to address a signaling link in this command.

The *Installation Manual – EAGLE 5 ISS* provides an illustration of the card locations.

Output

rtrv-slk

eagle10212 08-02-06 16:20:45 EST EAGLE 38.0.0

LOC	LINK	LSN	SLC	TYPE	L2T SET	BPS	L1 MODE	TSET	ECM	PCR N1	PCR N2
1201	A	e3m1s1	0	LIMDS0	1	56000	---	---	BASIC	---	-----
1201	B	e3m1s2	0	LIMDS0	1	56000	---	---	BASIC	---	-----
1202	A	e3m1s1	1	LIMDS0	1	56000	---	---	BASIC	---	-----
1202	B	e3m1s2	1	LIMDS0	1	56000	---	---	BASIC	---	-----
1203	A	e3m1s1	2	LIMDS0	1	56000	---	---	BASIC	---	-----
1203	B	e3m1s2	2	LIMDS0	1	56000	---	---	BASIC	---	-----
1204	A	e3m1s1	3	LIMDS0	1	56000	---	---	BASIC	---	-----
1204	B	e3m1s2	3	LIMDS0	1	56000	---	---	BASIC	---	-----
1205	A	e3m1s1	4	LIMDS0	1	56000	---	---	BASIC	---	-----
1205	B	e3m1s2	4	LIMDS0	1	56000	---	---	BASIC	---	-----
1206	A	e3m1s1	5	LIMDS0	1	56000	---	---	BASIC	---	-----
1206	B	e3m1s2	5	LIMDS0	1	56000	---	---	BASIC	---	-----
1207	A	e3m1s1	6	LIMDS0	1	56000	---	---	BASIC	---	-----
1207	B	e3m1s2	6	LIMDS0	1	56000	---	---	BASIC	---	-----
1211	A	e3m2s1	0	LIMDS0	11	56000	---	---	BASIC	---	-----
1211	B	e3m2s2	0	LIMDS0	11	56000	---	---	BASIC	---	-----
1212	A	e3m2s1	1	LIMDS0	11	56000	---	---	BASIC	---	-----
1212	B	e3m2s2	1	LIMDS0	11	56000	---	---	BASIC	---	-----
1213	A	e3m2s1	2	LIMDS0	11	56000	---	---	BASIC	---	-----
1213	B	e3m2s2	2	LIMDS0	11	56000	---	---	BASIC	---	-----
1214	A	e3m2s1	3	LIMDS0	11	56000	---	---	BASIC	---	-----
1214	B	e3m2s2	3	LIMDS0	11	56000	---	---	BASIC	---	-----
1215	A	e3m2s1	4	LIMDS0	11	56000	---	---	BASIC	---	-----
1215	B	e3m2s2	4	LIMDS0	11	56000	---	---	BASIC	---	-----
1216	A	e3m2s1	5	LIMDS0	11	56000	---	---	BASIC	---	-----
1216	B	e3m2s2	5	LIMDS0	11	56000	---	---	BASIC	---	-----
1217	A	e3m2s1	6	LIMDS0	11	56000	---	---	BASIC	---	-----
1217	B	e3m2s2	6	LIMDS0	11	56000	---	---	BASIC	---	-----

LOC	LINK	LSN	SLC	TYPE	LP SET	BPS	ATM TSEL	VCI	VPI	LL
1208	A	e3e4	4	1208 A	LIMATM	1	1544000	LINE	50	0
1218	A	e3e4	5	1218 A	LIMATM	1	1544000	LINE	50	0

LOC	LINK	LSN	SLC	TYPE	ANAME	SLKTPS
1303	A	m2pa12132	0	IPSG	m2pa1303a	1000
1303	B	m3ua333a	0	IPSG	m3ua1303b	500
1303	A1	m3ua323a	0	IPSG	m3ua1303a	1000
1303	B1	m3ua333i	0	IPSG	m3ua1303b	500
1303	B2	m3ua333n	0	IPSG	m3ua1303b	500
1305	A	ls1305a	0	IPSG	sg1305a	1000
1305	B	ls1305i	0	IPSG	sg1305i	500
1305	A1	ls1305a	1	IPSG	a1	1000
1305	B1	ls1305i	1	IPSG	a1	500
1305	B14	lsitunbb	0	IPSG	a1	1000
1305	B15	lsitunaa	0	IPSG	a1	1000

LOC	LINK	LSN	SLC	TYPE	IPLIML2
1301	A	e3e4	0	IPLIM	M2PA
1301	B	e3e4	2	IPLIM	M2PA
1311	A	e3e4a	0	IPLIM	M2PA
1313	A	e3e4i	0	IPLIMI	M2PA

LOC	LINK	LSN	SLC	TYPE
1307	A	ls1307a	0	SS7IPGW

```

1315 A    ls1315a    0    SS7IPGW
1317 A    ls1317i    0    IPGWI

```

SLK table is (48 of 1200) 4% full.

;

The following example shows output for a specific card location, which contains an SSED CM with 4 M2PA IPLIM links.

rtrv-slk:loc=1307

```

tekelecstp 05-04-21 08:40:18 EST EAGLE5 33.0.0
LOC  LINK LSN      SLC TYPE      IPLIML2
1307 A2   lsetC      4   IPLIM    M2PA
1307 B2   lsetC      5   IPLIM    M2PA
1307 A3   lsetC      6   IPLIM    M2PA
1307 B3   lsetC      7   IPLIM    M2PA

```

;

The following example includes signaling links assigned to an HC-MIM card used as an E1 card.

rtrv-slk:loc=1311

```

tekelecstp 05-04-08 16:22:25 EST EAGLE5 33.0.0
LOC  LINK LSN      SLC TYPE      SET  BPS    ECM  PCR  PCR  E1  E1
      L2T                                N1  N2  LOC PORT TS
1311 A   e11311a    0   LIME1      1   56000  BASIC ---  1311 1  1
1311 B   e11311b    0   LIME1      1   56000  BASIC ---  1311 1  2
1311 A1  e11311a    1   LIME1      1   56000  BASIC ---  1311 1  3
1311 B1  e11311b    1   LIME1      1   56000  BASIC ---  1311 2  4
1311 A2  e11311a    2   LIME1      1   56000  BASIC ---  1311 2  5
1311 B2  e11311b    3   LIME1      1   56000  BASIC ---  1311 3  6
1311 B3  e11311b    2   LIME1      1   56000  BASIC ---  1311 3  7
1311 A4  e11311b    4   LIME1      1   56000  BASIC ---  1311 4  14
1311 B6  e11311a    3   LIME1      1   56000  BASIC ---  1311 5  13
1311 A11 e11311b    5   LIME1      1   56000  BASIC ---  1311 5  12
1311 B17 e11311a    4   LIME1      1   56000  BASIC ---  1311 6  11
1311 A29 e11311b    6   LIME1      1   56000  BASIC ---  1311 7  10
1311 B31 e11311a    5   LIME1      1   56000  BASIC ---  1311 8  9

```

;

The following example includes signaling links assigned to an HC-MIM card used as a T1 card.

rtrv-slk:loc=1307

```

tekelecstp 05-04-08 16:22:25 EST EAGLE5 33.0.0
LOC  LINK LSN      SLC TYPE      SET  BPS    ECM  PCR  PCR  T1  T1
      L2T                                N1  N2  LOC PORT TS
1307 A   t11307      0   LIMT1      1   56000  BASIC ---  1307 2  12
1307 B   t11307      1   LIMT1      1   56000  BASIC ---  1307 1  1
1307 B1  t11307      2   LIMT1      1   56000  BASIC ---  1307 1  2
1307 A2  t11307      3   LIMT1      1   56000  BASIC ---  1307 1  3
1307 B3  t11307      4   LIMT1      1   56000  BASIC ---  1307 1  4
1307 A5  t11307      5   LIMT1      1   56000  BASIC ---  1307 1  5
1307 B8  t11307      6   LIMT1      1   56000  BASIC ---  1307 1  6
1307 B11 t11307      7   LIMT1      1   56000  BASIC ---  1307 1  7
1307 A21 t11307      8   LIMT1      1   56000  BASIC ---  1307 3  16
1307 B24 t11307      9   LIMT1      1   56000  BASIC ---  1307 4  17
1307 A25 t11307     10   LIMT1      1   56000  BASIC ---  1307 6  18
1307 B25 t11307     11   LIMT1      1   56000  BASIC ---  1307 6  19
1307 A27 t11307     12   LIMT1      1   56000  BASIC ---  1307 7  20
1307 B29 t11307     13   LIMT1      1   56000  BASIC ---  1307 8  21
1307 A31 t11307     14   LIMT1      1   56000  BASIC ---  1307 2  22
1307 B31 t11307     15   LIMT1      1   56000  BASIC ---  1307 1  23

```

;

The following example shows the signaling link **a31** assigned to an HC-MIM card used as a T1 card.

rtrv-slkl:loc=1307:link=a31

```
tekelecstp 05-04-08 16:22:25 EST EAGLE5 33.0.0
      L2T
      PCR PCR T1 T1
      LOC LINK LSN SLC TYPE SET BPS ECM N1 N2 LOC PORT TS
      1307 A31 t11307 14 LIMT1 1 64000 BASIC --- ----- 1307 2 22
```

;

The following example includes E1 signaling links assigned to HC-MIM cards. The link with BPS value 1984000 is an SE-HSL link.

rtrv-slkl

```
tekelecstp 05-04-08 16:22:25 EST EAGLE5 38.0.0
      L2T
      PCR PCR E1 E1
      LOC LINK LSN SLC TYPE SET BPS ECM N1 N2 LOC PORT TS
      1101 B e1ls 0 LIME1 11 56000 BASIC --- ----- 1101 2 1
      1102 A e2ls 0 LIME1 21 1984000 BASIC --- ----- 1102 1 --
```

SLK table is (2 of 1200) 0% full.

;

The following example shows the link information for an E5-ENET card.

rtrv-slkl:loc=1303

```
eagle10110 06-04-05 08:37:15 EST EAGLE 35.0.0
      LOC LINK LSN SLC TYPE IPLIML2
      1303 A e5e6 2 IPLIM M2PA
      1303 B e5e6 6 IPLIM M2PA
      1303 A1 e5e6 1 IPLIM M2PA
      1303 B1 e5e6 9 IPLIM M2PA
      1303 B2 e5e6 10 IPLIM M2PA
      1303 A3 e5e6 3 IPLIM M2PA
      1303 B3 e5e6 11 IPLIM M2PA
      1303 A4 e5e6 4 IPLIM M2PA
      1303 B4 e5e6 12 IPLIM M2PA
      1303 A5 e5e6 5 IPLIM M2PA
      1303 B5 e5e6 13 IPLIM M2PA
      1303 B6 e5e6 14 IPLIM M2PA
      1303 A7 e5e6 7 IPLIM M2PA
      1303 B7 e5e6 15 IPLIM M2PA
```

;

The following example shows the link information for an LIMATM card.

rtrv-slkl:loc=1304:link=a

```
tekelecstp 08-01-14 12:17:00 EST EAGLE 38.0.0
      LP
      ATM
      LOC LINK LSN SLC TYPE SET BPS TSEL VCI VPI LL
      1304 A ls1 3 LIMATM 1 1544000 LINE 5 0 0
```

The following example shows the link information for an IPSG card.

rtrv-slkl:loc=1301

```
e1001501 08-02-23 16:20:45 EST EAGLE 38.0.0
      LOC LINK LSN SLC TYPE ANAME SLKTPS
      1301 A SCS1 0 IPSG sg1301a 500
      1301 B SCS2 0 IPSG sg1301b 1000
      1301 A1 MGC1 0 IPSG sg1301a1 700
      1301 B1 MGC2 0 IPSG sg1301b1 1200
```

IPTPS for LOC = 1301 is (3400 of 5000) 68%

;

The following example shows link information for signaling links configured for a specified association.

rtrv-slk:aname=m3ua1211a1

e1001501 08-02-23 16:20:45 EST EAGLE 38.0.0

LOC	LINK	LSN	SLC	TYPE	ANAME	SLKTPS
1211	A1	ls1211b	0	IPSG	m3ua1211a1	600
1211	A2	ls1211c	0	IPSG	m3ua1211a1	700

;

The following example shows the link information for an E5-ATM card.

rtrv-slk:loc=1305

tekelecstp 08-01-14 12:17:00 EST EAGLE 38.0.0

LOC	LINK	LSN	SLC	TYPE	LP	SET	BPS	ATM	TSEL	VCI	VPI	LL
1305	A	ls1	0	LIMATM	1	1544000	LINE	5	0	0		
1305	B	ls1	1	LIMATM	1	1544000	LINE	5	0	0		

The following example shows the link **b** information for an E5-ATM card.

rtrv-slk:loc=1305:link=b

tekelecstp 08-01-14 12:17:00 EST EAGLE 38.0.0

LOC	LINK	LSN	SLC	TYPE	LP	SET	BPS	ATM	TSEL	VCI	VPI	LL
1305	B	ls1	1	LIMATM	1	1544000	LINE	5	0	0		

Legend

LOC—The location of the card containing the signaling link.

LINK—The signaling link assigned to the card.

LSN—The name of the linkset containing the signaling link.

SLC—The signaling link code of the signaling link.

TYPE—The type of card.

L2TSET—The number of the level 2 timer set associated with the signaling link.

BPS—The transmission rate of the signaling link in bits per second.

L1MODE—The mode of operation used to select the link clocking source at layer 1.

TSET—An indicator of whether the transmitter signal element timing is on or off.

ECM—The basic of PC for transmission.

PCRN1—The MSU number.

PCRN2—The octet number.

LPSET—The ATM link parameter set identifier.

ATMTSEL—The ATM timing selector. Possible values are as follows:

INTERNAL—Derived from an internal clock source operating at 1.544 MHz $\pm$ 200 Hz (ANSI) or 2.048 MHz $\pm$ 103 Hz (ITU).

EXTERNAL—Derived from the High-Speed Master Clock (T1 or E1).

LINE—Derived from its received data stream, if present.

VCI—The ATM virtual channel identifier.

VPI—The ATM virtual path identifier.

LL—The ATM line length.

E1PORT—The E1 card port that has an E1 interface assigned to it.

E1LOC—The card location of an E1 card with an E1 interface assigned to it.

T1PORT—The T1 card port that has a T1 interface assigned to it.

T1LOC—The card location of a T1 card with a T1 interface assigned to it.

TS—The timeslot associated with the signaling link that is serviced by the E1 or T1 interface.

E1ATMCRC4—E1 ATM card CRC4 multi-frame structure enable/disable indicator.

E1ATMSI—Value of two Spare International bits of NFAS data for the E1 ATM card.

E1ATMSN—Value of five Spare National bits of NFAS data for the E1 ATM card.

IPLIML2—IPLIM Level 2 stack (M2PA)

rtrv-slt

Retrieve Signaling Link Test Message

Use this command to display the fields of an SLTM (signaling link test message) record in the SLTM table.

Keyword: rtrv-slt

Related Commands: chg-l3t, chg-slt, ent-ls, rtrv-ls

Command Class: Database Administration

Parameters

:enabled= (optional)

Displays the SLTM records that are either enabled (**on**) or disabled (**off**).

Range: on, off

Default: All SLTM records with the specified value for the enabled parameter are shown.

:sltset= (optional)

The signaling link test message (SLTM) record number in the SLTM table.

Range: 1-20

Default: Display all

Example

```
rtrv-slt
```

```
rtrv-slt:sltset=1
```

```
rtrv-slt:enabled=off
```

Dependencies

None

Notes

None

Output

rtrv-slt

```

rlghncxa03w 03-03-07 00:21:24 EST EAGLE 31.3.0
SLTM PARAMETERS
SLTSET  T1  T2  MODE  ENABLED  PATTERN
1       9.0 60.0 SPECIAL ON      AA2233445566778899AABBCCDDEEFF
2      12.0 30.0 SPECIAL OFF     F01234BCDE
3       4.0 50.0 REGULAR ON      CC2233445566778899AABBCCDDEEFF
4       6.0 90.0 SPECIAL OFF     BB23446789BCABEFG
5       6.0 90.0 SPECIAL OFF     BB23446789BCABEFG
6       6.0 90.0 SPECIAL OFF     BB23446789BCABEFG
7       6.0 90.0 SPECIAL OFF     BB23446789BCABEFG
8       6.0 90.0 SPECIAL OFF     BB23446789BCABEFG
9       6.0 90.0 REGULAR OFF     BB23446789BCABEFG
10      6.0 90.0 REGULAR OFF     BB23446789BCABEFG
11      6.0 90.0 REGULAR OFF     BB23446789BCABEFG
12      4.0 50.0 SPECIAL ON      FFEEDDCCBBAA998877665544332211
13      4.0 50.0 SPECIAL ON      EE22334455
14      6.0 90.0 SPECIAL ON      AABBCCDD
15      6.0 90.0 REGULAR ON      AABBCCDD
16      6.0 90.0 REGULAR ON      AABBCCDD
17      6.0 90.0 REGULAR ON      AABBCCDD
18      6.0 90.0 SPECIAL ON      AABBCCDD
19      6.0 90.0 SPECIAL ON      AABBCCDD
20      6.0 90.0 SPECIAL ON      AABBCCDD

```

;

rtrv-slt:sltset=1

```

rlghncxa03w 03-03-07 00:21:24 EST EAGLE 31.3.0
SLTM PARAMETERS
SLTSET  T1  T2  MODE  ENABLED  PATTERN
1       9.0 60.0 SPECIAL ON      112233445566778899AABBCCDDEEFF

```

;

rtrv-slt:enabled=off

```

rlghncxa03w 03-03-07 00:21:24 EST EAGLE 31.3.0
SLTM PARAMETERS
SLTSET  T1  T2  MODE  ENABLED  PATTERN
2      12.0 30.0 SPECIAL OFF     F01234BCDE
4       6.0 90.0 SPECIAL OFF     0123446789BCABEFG
5       6.0 90.0 SPECIAL OFF     0123446789BCABEFG
6       6.0 90.0 SPECIAL OFF     0123446789BCABEFG
7       6.0 90.0 SPECIAL OFF     0123446789BCABEFG
8       6.0 90.0 SPECIAL OFF     0123446789BCABEFG
9       6.0 90.0 REGULAR OFF     0123446789BCABEFG
10      6.0 90.0 REGULAR OFF     0123446789BCABEFG
11      6.0 90.0 REGULAR OFF     0123446789BCABEFG

```

;

Legend

SLTSET—The signaling link test message record number in the SLTM table.

T1—The T1 timer value for the SLTM record. After an SLTM test fails, this parameter specifies the amount of time, in seconds, to wait before running the SLTM test again.

T2—The T2 timer value for the SLTM record. This parameter specifies the amount of time, in seconds, to wait between running SLTM tests for a normally functioning signaling link.

MODE—The SLTM mode to be used when sending test messages.

ENABLED—Indicates whether the signaling link test message is enabled.

PATTERN—The test pattern to be sent with a signaling link test message.

rtrv-spc**Retrieve Secondary Point Code**

Use this command to retrieve an SPC (secondary point code) from the active database.

Keyword: **rtrv-spc**

Related Commands: **dlt-spc**, **ent-spc**

Command Class: Database Administration

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:spc= (optional)

ANSI point code in the form of *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: **spca**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:spc/spca/spci/spcn/spcn24= (optional)

The secondary point code.

:spci= (optional)

ITU international secondary point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:spcn= (optional)

ITU national point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:spcn24= (optional)

24-bit ITU national point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

Example

rtrv-spc

rtrv-spc:spc=5-3-3

rtrv-spc:spcn24=98-98-98

rtrv-spc:spcn=s-00345

Dependencies

The MPC feature must be turned on before this command can be entered.

The value of the **spc** parameter must be a full point code.

Notes

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (s-).

Output

The following example shows the output for all provisioned secondary point codes. (SPC-N is a flexible point code format as defined with the **chg-stpopts:npcfmti** parameter).

rtrv-spc

```
rlghncxa03w 03-03-18 08:50:12 EST EAGLE 31.0.0
```

```
SPC (Secondary Point Codes)
```

```
SPCA
```

```
001-010-010
```

```
002-010-010
```

```
003-010-010
```

```
SPC-I
```

```
01-253-05
```

```
02-254-06
```

```
03-255-07
```

```
SPC-N
```

```
120-01-0-1
```

```
100-02-1-0
```

```
SPC-N24
```

```
099-099-099
```

```
Secondary Point Code table is (9 of 40) 25% full
```

```
;
```

The following example shows the output for all provisioned secondary point codes. Spare point codes are included in the output.

rtrv-spc

```
rlghncxa03w 05-01-18 08:50:12 EST EAGLE 31.12.0
```

```
SPC (Secondary Point Codes)
```

```
SPCA
```

```
001-001-001
```

```
001-123-003
```

```
SPC-I
```

```
1-001-1
```

```
s-1-001-1
```

```
2-003-4
```

```
s-4-003-4
```

```
SPC-N
```

```
00234
```

```
s-00345
```

```
SPC-N24
```

```
011-011-011
```

```
Secondary Point Code table is (9 of 40) 22% full.
```

```
;
```

The following example shows the only provisioned secondary point code, which is a 24-bit ITU-N secondary point code.

rtrv-spc

```
rlghncxa03w 05-03-18 08:50:12 EST EAGLE 31.0.0
```

```
SPC (Secondary Point Codes)
```

SPCA
none

SPC-I
none

SPC-N
none

SPC-N24
099-099-099

Secondary Point Code table is (1 of 40) 2% full.

;

The following example shows information for a specific ANSI secondary point code.

rtrv-spc:spc=5-3-3

rlghncxa03w 03-03-18 08:50:12 EST EAGLE 31.3.0
SPC (Secondary Point Codes)
005-003-003

Secondary Point Code table is (8 of 40) 25% full.

;

In the following example, the specified secondary point code is not provisioned.

rtrv-spc:spc=5-3-1

rlghncxa03w 03-03-18 08:50:12 EST EAGLE 31.3.0
SPC (Secondary Point Codes)

Secondary Point Code specified is not provisioned

Secondary Point Code table is (3 of 40) 8% full.

;

The following example shows information for a specific ITU-N secondary spare point code.

rtrv-spc:spcn=s-00345

rlghncxa03w 03-03-18 08:50:12 EST EAGLE 31.12.0
SPC (Secondary Point Codes)
s-00345

Secondary Point Code table is (2 of 40) 5% full.

;

The following example shows output for a specific 24-bit ITU-N ssecondary point code.

rtrv-spc:spcn24=98-98-98

rlghncxa03w 03-03-18 08:50:12 EST EAGLE 31.0.0
SPC (Secondary Point Codes)
098-098-098

Secondary Point Code table is (2 of 40) 5% full.

;

Legend

SPC—Secondary point code

SPCA—ANSI secondary point code

SPC-I—ITU international secondary point code

SPC-N—ITU national secondary point code

SPC-N24—24-bit ITU national secondary point code

rtrv-srvsel

Retrieve Service Selector

Use this command to display a list of administered service selector combinations. The list can be filtered using various parameter combinations.

NOTE: The rtrv-srvsel operation may be lengthy because the service selector table can contain over 1,000 entries.

Keyword: rtrv-srvsel

Related Commands: chg-srvsel, dlt-srvsel, ent-srvsel

Command Class: Database Administration

Parameters

:force= (optional)

The **force=yes** parameter must be specified when a **num** parameter value greater than **50** is specified to display more than 50 entries.

Range: yes, no

Default: no

:gti/gtia/gtii/gtin/gtin24= (optional)

Global title indicator. For all service selector commands, the domain is defined as **gti** and **gtia** (ANSI), **gtii** (ITU international), **gtin** (ITU national) and **gtin24** (24-bit ITU national). For the service selector commands, **gti** and **gtia** are equivalent.

Range: Supported value for ANSI: **gti=2** and **gtia=2**

Supported values for ITU: **gtii=2, 4; gtin=2, 4, gtin24=2, 4**

Default: Display all

:nai= (optional)

Nature of Address indicator. The Nature of Address indicator can be specified by supplying either a mnemonic value (**nai** parameter) or an explicit numeric value (**naiv** parameter). Either the **nai** parameter or the **naiv** parameter, but not both, can be specified in the command. Table A-5 shows the mapping between the **naiv** and the **nai** parameter values.

Range: sub, rsvd, natl, intl

Default: Display all

:naiv= (optional)

Nature of Address indicator value. The Nature of Address indicator can be specified by supplying either a mnemonic value (**nai** parameter) or an explicit numeric value (**naiv** parameter). Either the **nai** parameter or the **naiv** parameter, but not both, can be specified in the command. Table A-5 shows the mapping between the **naiv** and the **nai** parameter values.

Range: 0-127

Default: Display all

:np= (optional)

Numbering Plan. The numbering plan can be specified by supplying either a mnemonic value (**np** parameter) or an explicit numeric value (**npv** parameter). Either the **np** parameter or the **npv** parameter, but not both, can be specified in the command. Table A-6 shows the mapping between the **npv** and the **np** parameter values.

Range: e164, generic, x121, f69, e210, e212, e214, private

Default: Display all

:npv= (optional)

Numbering Plan value. The numbering plan can be specified by supplying either a mnemonic value (**np** parameter) or an explicit numeric value (**npv** parameter). Either the **np** parameter or the **npv** parameter, but not both, can be specified in the command. Table A-6 shows the mapping between the **npv** and the **np** parameter values.

Range: 0-15

Default: Display all

:num= (optional)

Number of entries to display. The **force=yes** parameter is required when this parameter value is specified greater than 50 entries.

Range: 1-20992

Default: 50

:serv= (optional)

The Service Module card service.

Range: **eir, gflex, gport, inpq, inpmr, smsmr, idps, idpr, mnp, vflex, atinp**

eir— Equipment Identity Register

gflex— GSM flexible numbering

gport— GSM number portability

inpq— INP query

inpmr— INP message relay

smsmr— Prepaid SMS Intercept Phase 1, Portability Check for Mobile Originated SMS, MO SMS GSM NP, MO SMS IS41 NP, MO SMS IS41-to-GSM Migration, MO SMS ASD, MO SMS GRN, MO SMS B-Party routing.

idps— IDP Screening for Prepaid

idpr— Prepaid IDP Query Relay

mnp— mobile number portability

vflex— Voice Mail Router

atinp— ATI Number Portability Query (ATINP)

Default: Display all

:snai= (optional)

The service nature of address indicator.

Range: **sub, natl, intl, rnidn, rnsdn, ccrndn**

sub—Subscriber number

natl—National significant number

intl—International number

rnidn—Routing number prefix and international dialed/directory number

rnsdn—Routing number prefix and national dialed/directory number

ccrndn—Country code, routing number, and national directory number

Default: Display all

:snp= (optional)

The service numbering plan.

Range: **e164, e212, e214**

e164—E.164 numbering plan

e212—E.212 numbering plan

e214—E.214 numbering plan

Default: Display all

:ssn= (optional)

Subsystem number.

Range: 0-255 *

:tt= (optional)
 Translation type.
Range: 0-255
Default: Display all

Example

```
rtrv-srvsel
rtrv-srvsel:gtii=2
rtrv-srvsel:tt=0:np=e164
rtrv-srvsel:serv=vflex
```

Dependencies

The INP feature or the AINPQ feature must be turned on before the **serv=inpmr** or **serv=inpq** parameter can be specified.

The G-Flex feature must be turned on before the **serv=gflex** parameter can be specified.

The G-Port feature must be turned on before the **serv=gport** parameter can be specified.

The **np** and **npv** parameters cannot be specified together in the command.

The **nai** and **naiv** parameters cannot be specified together in the command.

The values **1** and **3** are not valid for the **gti/gtia/gtii/gtin/gtin24** parameters.

The value **4** is not valid for the **gti/gtia** parameters.

If the **gti/gtia/gtii/gtin/gtin24=2** parameter is specified, then no **np(v)** and **nai(v)** parameter combinations can be specified.

If the **serv** parameter has a value of **inpmr**, **inpq**, **gport**, or **eir**, then the **gtia** and **gti** parameters cannot be specified.

If the **serv=inpmr** parameter is specified, then the value of the **snp** parameter must be **e164** if specified.

If the value specified for the **snai** parameter is **rnidn**, **rnndn**, or **rnsdn**, then the value of the **serv** parameter must be **inpmr**, **gport**, or **smsmr** if it is specified.

If the **serv=inpq** parameter is specified, then the **gtii** parameter cannot be specified.

If the value specified for the **snai** parameter is **rnidn**, **rnndn**, or **rnsdn**, then the **serv=gflex** parameter cannot be specified.

If the value specified for the **serv** parameter is **inpq**, **vflex**, or **eir**, then the **snp** and **snai** parameters cannot be specified.

If the **snai=ccrndn** parameter is specified, then the value specified for the **serv** parameter must be **gport**, or **smsmr**.

If the value specified for the **num** parameter is greater than **50**, then the **force=yes** parameter must be specified.

The Prepaid IDP Query Relay feature must be turned on before the **serv=idpr** parameter can be specified.

If the **serv=idpr** parameter is specified, then the only valid mandatory service parameters are **tt**, **ssn** and **gti/gtia/gtin/gtii**. If the **serv=idpr** parameter is specified, then the only valid optional parameters are **np** and **nai**.

The IDP Screening for Prepaid feature must be turned on before the **serv=idps** parameter can be specified.

The V-flex feature must be turned on before the **serv=vflex** parameter can be specified.

The Portability Check for Mobile Originated SMS or the PPSMS feature must be turned on, or the MO SMS ASD, MO SMS B-Party Routing, MO SMS GRN, MO SMS IS41-to-GSM Migration, MO-based GSM SMS NP, or MO-based IS41 SMS NP feature must be enabled before the **serv=smsmr** parameter can be specified.

The ATINP feature must be enabled before the **serv=atinp** parameter can be specified.

If the **serv=atinp** parameter is specified, then the **gtin24** parameter cannot be specified.

Notes

None

Output

The following example displays all provisioned service selectors:

rtrv-srvsel

```
rlghncxa03w 00-03-29 16:40:40 EST EAGLE 31.3.0
GTIA TT NP NAI NPV NAIV SNP SNAI SERV
2 9 -- --- --- --- e212 intl gflex
2 10 -- --- --- --- e164 intl gflex
2 253 -- --- --- --- e214 natl gflex

GTII TT NP NAI NPV NAIV SNP SNAI SERV
2 0 -- --- --- --- e164 intl gflex
2 18 -- --- --- --- e164 rnsdn inpmr
4 0 e214 sub --- --- e214 sub gflex

GTIN TT NP NAI NPV NAIV SNP SNAI SERV
2 2 -- --- --- --- e164 intl gflex
2 9 -- --- --- --- --- inpq
4 2 e164 natl --- --- e164 rnndn inpmr
4 9 --- --- 10 128 --- --- inpq
```

;

The following example displays all service selectors containing the specified GTI value:

rtrv-srvsel:gtii=2

```
rlghncxa03w 07-09-29 16:40:40 EST EAGLE 37.6.0
GTII TT NP NAI SSN SNP SNAI SERV
2 0 -- --- 7 e164 intl gflex
2 18 -- --- 7 e164 rnidn inpmr
```

;

The following example displays all service selectors containing the specified **tt** and **np** values:

rtrv-srvsel:tt=0:np=e164

```
rlghncxa03w 07-09-29 16:40:40 EST EAGLE 37.6.0
GTII TT NP NAI SSN SNP SNAI SERV
4 0 e164 sub 7 e164 sub gflex
```

;

The following example displays all service selectors containing the specified service:

rtrv-srvsel:serv=inpq

```
rlghncxa03w 07-09-29 16:40:40 EST EAGLE 37.6.0
GTIN TT NP NAI SSN SNP SNAI SERV
2 9 -- --- 7 --- --- inpq
4 9 --- --- 8 --- --- inpq
```

;

The following example displays all service selectors containing the **gport** service:

rtrv-srvsel:serv=gport

```
rlghncxa03w 07-09-29 16:40:40 EST EAGLE 37.6.0
GTIN TT NP NAI SSN SNP SNAI SERV
4 0 e164 128 8 e164 ccrndn gport
```

;

The following example includes a **gtin24** entry:

rtrv-srvsel

```
rlghncxa03w 07-09-29 16:40:40 EST EAGLE 37.6.0
GTIN TT NP NAI SSN SNP SNAI SERV
4 4 e164 intl 8 e164 intl gport

GTIN24 TT NP NAI SSN SNP SNAI SERV
4 4 e164 intl 2 e164 intl gport
```

SRV SELECTOR table is (2 of 20992) 1 % full

;

The following examples display service selectors containing the **eir**, **smsmr**, **mnp**sms and **idps** services:

rtrv-srvsel

```
tekelecstp 03-03-28 15:43:22 EST EAGLE5 31.0.0
GTII TT NP NAI NPV NAIV SSN SNP SNAI SERV
4 1 e214 intl --- --- 3 --- --- eir
4 1 e214 intl --- --- 4 e164 intl gport
4 1 e214 intl --- --- 5 e164 intl smsmr
4 2 e214 intl --- --- 5 e164 intl mnpsms
4 2 e214 intl --- --- * --- --- eir
4 20 e164 intl --- --- 6 --- ---- idps
```

```
GTIN TT NP NAI NPV NAIV SSN SNP SNAI SERV
4 4 e214 natl --- --- --- e164 intl gflex
4 9 e214 natl --- --- --- e164 intl gflex
```

SRV SELECTOR table is (7 of 20992) 1 % full

;

rtrv-srvsel:ssn=3

```
tekelecstp 07-09-28 15:43:22 EST EAGLE5 37.6.0
GTII TT NP NAI SSN SNP SNAI SERV
4 1 e214 intl 3 --- --- eir
```

SRV SELECTOR table is (4 of 20992) 1 % full

;

rtrv-srvsel:serv=eir

```
tekelecstp 07-09-28 15:43:22 EST EAGLE5 37.6.0
GTII TT NP NAI SSN SNP SNAI SERV
4 1 e214 intl 8 3 --- eir
4 2 e214 intl 8 * --- eir
```

SRV SELECTOR table is (4 of 20992) 1 % full

;

rtrv-srvsel

```
tekelecstp 05-08-17 17:05:51 EST 33.1.0
GTII TT NP NAI NPV NAIV SSN SNP SNAI SERV
4 20 e164 intl --- --- 123 ---- ---- idpr
```

SRV SELECTOR table is (1 of 20992) 1 % full

;

rtrv-srvsel:serv=mnp

```
rlghncxa03w 07-09-29 16:40:40 EST EAGLE 37.6.0
GTIN TT NP NAI SSN SNP SNAI SERV
4 0 e164 128 8 e164 ccrndn mnp
```

;

```
tekelecstp 07-09-16 17:09:08 EST EAGLE 37.6.0
GTIA TT NP NAI SSN SNP SNAI SERV
2 9 -- --- * e212 intl gflex
2 10 -- --- 3 e164 intl gflex
2 253 -- --- 4 e214 natl gflex
```

```
GTII TT NP NAI SSN SNP SNAI SERV
2 0 -- --- 2 e164 intl gflex
2 18 -- --- * e164 rnsdn inpmr
4 0 e214 sub * e214 sub gflex
```

```
GTIN TT NP NAI SSN SNP SNAI SERV
```



```

      2      2      --      ---      3      e164      intl      gflex
      2      9      --      --      *      ---      ---      inpq
      4      2      e164      natl      *      e164      rnndn      inpmr
      4      9      ---      ---      4      ---      ---      inpq
;

rtrv-srvsel:serv=vflex
tekelecstp 07-08-28 16:35:22 EST EAGLE 37.6.0
GTII  TT  NP      NAI  SSN  SNP  SNAI  SERV
4      1  e164      intl 3      ---      ---      vflex
4      2  e164      intl *      ---      ---      vflex

GTIN  TT  NP      NAI  SSN  SNP  SNAI  SERV
4      4  e164      natl 4      ---      ---      vflex

SRV SELECTOR table is (3 of 20992) 1 % full
;

rtrv-srvsel:serv=smsmr
tekelecstp 08-04-07 09:33:26 EST EAGLE 39.0.0
GTII  TT  NP      NAI  NPV  NAIV  SSN  SNP  SNAI  SERV
2      6  --      ----  ---  ----  10  e164  intl  smsmr

SRV SELECTOR table is (1 of 20992) 1 % full
;

rtrv-srvsel:serv=atinp
tekelecstp 08-08-28 15:43:22 EST EAGLE5 39.2.0
GTII  TT  NP      NAI  SSN  SNP  SNAI  SERV
4      0  e214      intl 8      ---      ---      atinp

SRV SELECTOR table is (4 of 20992) 1 % full
;
The following example displays the output when no service selectors are provisioned:
rtrv-srvsel
tekelecstp 09-01-04 13:28:13 EST EAGLE 40.1.0

GTIA  TT  NP      NAI  SSN  SNP  SNAI  SERV
No SRV Selector found in range
;

```

Legend**GTI/GTIA/GTII/GTIN/GTIN24**—Global title indicator.**TT**—Translation type.**NP**—Numbering plan.**NAI**—Nature of address indicator.**NPV**—Numbering plan value.**NAIV**—Nature of address indicator value.**SSN**—Subsystem number.**SNP**—Service numbering plan.**SNAI**—Service nature of address indicator.**SERV**—Service Module card service.

rtrv-ss-appl**Retrieve Subsystem Application**

Use this command to retrieve information for all provisioned subsystem applications from the database. The command displays the application type, subsystem number, and application status.

Keyword: **rtrv-ss-appl**

Related Commands: **chg-ss-appl**, **dlt-ss-appl**, **ent-ss-appl**

Command Class: Database Administration

Parameters

This command has no parameters.

Example

rtrv-ss-appl

Dependencies

The EIR, LNP, or V-Flex feature must be enabled, or the AINPQ, ATINP, or INP feature must be turned on before this command can be entered.

Notes

None

Output

```
rtrv-ss-appl
rlghncxa03w 08-08-17 16:02:05 EST EAGLE 39.2.0
APPL  SSN  STAT
LNP   15   online

SS-APPL TABLE IS 20% FULL (1 OF 5)
;

rtrv-ss-appl
tekelecstp 08-08-28 14:42:38 EST EAGLE 39.2.0
APPL  SSN  STAT
EIR   11   online
ATINPQ 10   online
SS-APPL TABLE IS 40% FULL (2 OF 5)
;
```

Legend

APPL—Application type

SSN—Subsystem number

STAT—Status:online or offline

rtrv-ss7opts**Retrieve SS7 Options**

This command retrieves the current values of the SS7 option indicators maintained in the STP options table. SS7 options can modify normal handling of SS7 traffic.

Keyword: **rtrv-ss7opts**

Related Commands: **chg-ss7opts**

Command Class: Database Administration

Parameters

This command has no parameters.

Example

rtrv-ss7opts

Dependencies

None

Notes

None

Output

rtrv-ss7opts

```
tekelecstp 09-01-10 03:59:31 EST EAGLE 40.1.0
```

```
SS7 OPTIONS
```

```
-----
LSRESTRICT    off
DISCARDTFCI   off
DISCARDTFCN   off
SLSREPLACE    yes
SLANCPORGOPC  off
MSGPRI2ITUI   3
MSGPRI2ITUN   0
```

```
;
```

The following example shows the command output if the STP LAN feature is turned on.

rtrv-ss7opts

```
tekelecstp 09-01-05 01:29:25 EST EAGLE 40.1.0
```

```
SS7 OPTIONS
```

```
-----
LSRESTRICT    off
DISCARDTFCI   off
DISCARDTFCN   off
SLSREPLACE    no
SLANCPORGOPC  off
SLANLSN       off
```

```
;
```

rtrv-stp**Retrieve STP Information**

Use this command to retrieve information related to the STP at which the command is entered.

The command can retrieve frame and card power consumption and threshold values (in Amps or milliAmps and Watts) for all provisioned frames or for a specified frame. (See the **ent-frm-pwr** command.)

The command can retrieve hardware configuration information (card location, board part number, revision, serial number, card type, card memory, APPL, and GPL version):

- For all provisioned STP frames and shelves
- For a specific provisioned frame
- For a specific provisioned shelf

- For a specific equipped card
- For all cards of the specified card type
- For all cards that contain the specified Board Part Number
- For all cards that are running the specified GPL or GPL version.

Keyword: **rtrv-stp**

Related Commands: **chg-frm-pwr, dlt-frm-pwr, ent-frm-pwr, rtrv-frm-pwr**

Command Class: Database Administration

Parameters

:display= (optional)

Display the power consumption and power threshold value for all provisioned frames or for one specific provisioned frame.

This parameter must be specified when the **frm** parameter is specified, to display the power information for one frame.

Range: **power**

power — Display frame power information in the command output.

:frm= (optional)

Frame ID. The command displays information for the specified provisioned frame.

Range: **cf00, ef00, ef01, ef02, ef03, ef04**

cf00 — Control Frame identifier

ef00 — Identifier for the first Extension Frame

ef01 — Identifier for the second Extension Frame

ef02 — Identifier for the third Extension Frame

ef03 — Identifier for the fourth Extension Frame

ef04 — Identifier for the fifth Extension Frame

:gpl= (optional)

Generic program load. The parameter is specified to display hardware configuration information for all card locations equipped with cards that are running the specified GPL.

This parameter must be specified when the **ver** parameter is specified, to display information for a specific version of the GPL.

Range: **ayyyyyy**

1 alphabetic character followed by up to 6 alphanumeric characters. Valid GPLs are:
atmansi—The GPL is used by the LIM cards to support the high-speed ATM signaling link feature.

atmhc—This GPL is used to support the functionality for the E5-ATM card. The E5-ATM card runs either the ATMANSI or ATMITU application. The **atmhc** GPL allows the card to support up to 2 signaling links.

atmitu—The GPL is used by the E1 ATM cards to support the high-speed E1 ATM signaling link feature.

blbepm—A flash GPL containing the BIOS ROM image on E5-E1T1 cards and E5-ENET cards.

blbios—A flash GPL containing the BIOS ROM image on HC-MIM cards that are used for E1 or T1 signaling links.

blbsmg—A flash GPL containing the BIOS ROM image on E5-SM4G cards.

blcpld—A flash GPL containing the bit files for the CPLD on HC-MIM, E5-E1T1, and E5-ENET cards that are used for E1 or T1 signaling links.

bldiag6—A flash GPL containing the diagnostic code on E5-E1T1 cards, HC-MIM cards, and E5-ENET cards.

blmcap—A flash GPL containing a tar image with all code required on E5-MCAP cards.

blvxw6—A flash GPL containing the VxWorks operating system on E5-E1T1 cards, HC-MIM cards, and E5-ENET cards.

blrom1—A flash GPL containing the bootloader code for VxWorks operating system on HC-MIM cards.

bpdcm—This GPL is used in support the flash memory Board PROM for DCM, DSM, and GPSM boards, original design.

bpdcm2—This GPL is used in support the flash memory Board PROM for DCM and GPSM boards, revised design.

bphcap—This GPL is used to support Board PROM for HCAP flash memory.

bphcapt—This GPL is used to support Board PROM for HCAP-T flash memory.

bphmux—This GPL is used to support Board PROM for HMUX flash memory.

bpmpl—This GPL is used to support Board PROM for MPL flash memory.

bpmplt—This GPL is used to support Board PROM for E1/T1 flash memory and Board Prom for MPL-T flash memory.

ccs7itu—This GPL is used by the LIM cards for ITU-TSS MTP functionality.

cdu—This GPL is used in the card manufacturing process.

eoam—This GPL is used by the GPSM-II card for enhanced OAM functions.

eroute—This GPL is used by the STC card for EAGLE 5 Integrated Monitoring Support functions.

erthc—This GPL is used by the E5-ENET card when the card acts as an STC card (E5-STC card) for EAGLE 5 Integrated Monitoring Support functions.

gls—This GPL is used by the TSM cards for downloading gateway screening to LIM cards.

glshc—This GPL is used by the E5-TSM card for downloading gateway screening to LIM and SCCP cards.

hipr—The communication software used on the High Speed IMT Packet Router (HIPR) card.

imt—This GPL is the communication processor on the logical processing element (LPE).

imtpci—The communication software that operates the IMT bus on HC-MIM, E5-E1T1, and E5-ENET cards.

ipghc—This GPL is used by the E5-ENET card to support TCP/IP point-to-multipoint connectivity for ANSI and ITU point codes.

ipgwi—This GPL is used by the SSEDCCM card for TCP/IP point-to-point connectivity for ITU point codes.

iplhc—This GPL is used by the E5-ENET card for TCP/IP point-to-point connectivity for ANSI and ITU point codes.

iplim—This GPL is used by the SSEDCCM card for TCP/IP point-to-point connectivity for ANSI point codes.

iplimi—This GPL is used by the SSEDCCM card for TCP/IP point-to-point connectivity for ITU point codes.

ips—This GPL is used by the IPSM card for the IP User Interface feature.

ipsg—This GPL is used by the E5-ENET card to support the combined functionality of IPLIMx M2PA and IPGWx M3UA.

ipshc—This GPL is used by the E5-IPSM card to support the IPS application.

mcp—This GPL is used by the MCPM card for the Measurements Platform feature.

oamhc—This GPL is used by the E5-MCAP card for enhanced OAM functions.

pldpmc1—A flash GPL that is used on HC-MIM and E5-E1T1 cards for E1 and T1 signaling links.

sccp—This GPL is used by the TSM cards for the global title translation application. If the E5-SM4G card is present, then the **sccp** GPL processes normal GTT traffic.

sccphc—This GPL is used by the E5-SM4G cards to support the EPAP-based features and the LNP ELAP Configuration feature. If no EPAP-based or LNP ELAP Configuration feature is turned on, and if an E5-SM4G card is present, then the sccphc GPL processes normal GTT traffic.

ss7ansi—This GPL is used by the LIM cards for the MTP functionality.

ss7gx25—This GPL is used by the LIM cards to support X.25 functionality.

ss7hc—This GPL is used to support the functionality for the HC-MIM (High Capacity Multi-Channel Interface Module) card or the E5-E1T1 card. The HC-MIM card and the E5-E1T1 card run either the SS7ANSI or CCS7ITU application; this GPL allows the card to support up to 64 signaling links for E1 and T1 functions.

ss7ipgw—This GPL is used by the SSEDCCM card to support TCP/IP point-to-multipoint connectivity.

ss7ml—This GPL is used to support the functionality for the multi-port LIM (MPL) card and the E1/T1 MIM (Multi-Channel Interface Module) card. The MPL cards run only the SS7ANSI application on a LIMDS0 card (as in the command `ent-card:type=limds0:appl=ss7ansi`); the ss7ml GPL allows the card to support 8 signaling links rather than the usual 2 links for LIM cards. The MPL cards support only the DS0 interface. The E1/T1 MIM card runs either the SS7ANSI or CCS7ITU application; the ss7ml GPL allows the card to support 8 signaling links for E1 and T1 functions.

stplan—This GPL is used by the ACM card to support the STP LAN application.

utility—This GPL is used by the factory for testing, and when directed by your Customer Care Center.

vcdu—This GPL is used in the card manufacturing process.

vscpp—This GPL is used by Service Module cards to support the EPAP-based and the LNP ELAP Configuration features. If no EPAP-based or LNP ELAP Configuration feature is turned on, and if a Service Module card is present, then the vscpp GPL processes normal GTT traffic.

vxwslan—This GPL is used by the SSEDCCM card to support the STP LAN application. The **bldiag** and **blvxw** flash GPLs are no longer supported.

:partnum= (optional)

Display the hardware configuration for all card locations that contain a card with the specified Board Part Number.

Range: *ZZZ-ZZZZ-ZZ*

Specify the Board Part Number in the format *xxx-xxxx-xx*. See the Hardware Baseline appendix in the *Feature Notice* for a list of Board Part Numbers that are supported for the EAGLE 5 ISS release.

:shelf= (optional)

Display the hardware configuration information for all card locations in the specified EAGLE shelf.

Range: 1100, 1200, 1300, 2100, 2200, 2300, 3100, 3200, 3300, 4100, 4200, 4300, 5100, 5200, 5300, 6100

:type= (optional)

Display the hardware configuration information for all card locations that contain cards of the specified card type.

Range: acmenet, dcm, dsm, ipsm, limatm, limatm, limch, limds0, lime1, lime1atm, limocu, limt1, limv35, mcpcm, stc, tsm, enet

:ver= (optional)

Display the hardware configuration information for all the card locations that have cards with the specified GPL Type and the specified GPL Version. The version format is *major-minor-fix*.

Range: *major-minor-fix*
major—Range 0-255
minor—Range 0-255
fix—Range 0-255

Example

Retrieve the frame power information for all provisioned frames of the STP.

rtrv-stp:display=power

Retrieve the card level power information for the control frame in the STP.

rtrv-stp:display=power:frm=cf00

Retrieve the hardware configuration information for the STP control shelf (shelf 1100).

rtrv-stp:shelf=1100

Retrieve the hardware configuration information for all cards equipped in the STP that have the specified Board Part Number.

rtrv-stp:partnum=870-1275-01

Retrieve the hardware configuration information for all provisioned TSM cards in the STP.

rtrv-stp:type=tsm

Retrieve the hardware configuration information for all cards in the STP that are running the imt communication GPL with GPL version 126-039-043.

rtrv-stp:gpl=imt:ver=126-039-043

Retrieve the hardware configuration information for all provisioned frames in the STP.

rtrv-stp

Retrieve the hardware configuration information for all cards in the STP that are running the atmhc GPL.

rtrv-stp:gpl=atmhc

Dependencies

The **display** parameter must be specified when the **frm** parameter is specified.

The **gpl** parameter must be specified when the **ver** parameter is specified.

Only one optional parameter can be specified in the command, except for the following parameter combinations:

- The **display** parameter must be specified when the **frm** parameter is specified.
- The **gpl** parameter must be specified when the **ver** parameter is specified.

The **frm** parameter value must specify a provisioned frame.

Notes

When the power threshold value has not been provisioned for a provisioned frame, the default frame power threshold value is displayed and prefixed with a plus sign (+).

For an un-provisioned card that is present in the frame, the card power consumption value is displayed prefixed with a plus sign (+).

For the TDM and MDAL cards in the Control Frame and for the MUX cards in all the frames, "TDM", "E5-TDM", "MDAL", "E5-MDAL" or "MUX", respectively, is displayed as the Part Number of the card.

If the Board Part Number received in the BIP response from a card is not present in the Assembly Power table, then the Part Number for the card is displayed with a prefix of a plus sign (+).

If the Card power value is not present in the BIP data and the Assembly Power table, then the default card power value of **1563 milliAmps** is displayed for the card.

If board information is not available from a card,

- **BIP Data inv** is displayed as the Part number for the card.
- The default card power value of **1563 milliAmps** is displayed for the card.

If a card location is empty (no card is present in that slot),

- **Empty** is displayed as the Part Number for the card
- A card power value of **0** is assumed and displayed.

For Standby GPSM-II, E5-MCAP, and TDM cards, "Unavailable" is displayed as the Part Number if either the card is absent. In this case, the card power of the Active GPSM-II or E5-MCAP card is shown for the card power of the standby card also.

If a flash or communication GPL is specified with the **rtrv-stp** command, then the GPL output displays the version of the application GPL that is running on the card and not the version of the specified flash or communication GPL.

Output

If a flash or communication GPL is specified, then the output displays the GPL version of the application GPL running on the card instead of the GPL version of the specified flash or communication GPL.

The power consumption values that are displayed in the **rtrv-stp:display=power** or the **rtrv-stp:display=power:frm=** commands indicate the maximum calculated power for the frame. The calculation is based on the cards that are populated in the system, and includes a fan tray assembly for every shelf (the system cannot detect the presence or absence of a fan tray, and assumes presence for the calculation). These values are typically much higher than the actual power being drawn; the values cannot be used as a gauge of the actual power consumption of the EAGLE 5 ISS.

The following example retrieves the hardware configuration information for a specific shelf.

rtrv-stp:shelf=1100

tekelecstp 07-03-30 11:07:17 EST EAGLE 37.0.0

Card	Part Number	Rev	Serial Number	Type	DB	APPL	GPL Version
1101	870-1275-01	W	10245689323	DSM	4096M	VSCCP	027-010-000
1102	Empty						
1103	870-1788-03	A	10234658345	TSM	128M	GLS	027-010-000
1104	Empty						
1105	870-1339-06	A	10274568974	LIMATM	-	ATMANSI	027-010-000
1106	Empty			DSM		VSCCP	
1107	Empty						
1108	870-1456-05	A	10204764378	DCM	512M	SS7IPGW	027-010-000
1109	MUX					BPHMUX	027-345-000
1110	MUX					BPHMUX	027-345-000
1111	870-1788-05	A	10205734657	MCPM	4096M	MCP	027-010-000
1112	870-1789-04	A	10302135627	LIMDS0	-	SS7ANSI	027-010-000
1113	870-2360-01	A	10346357678	GPSM	1024M	EOAM	025-340-000
1114	TDM						
1115	Unavailable			GPSM		EOAM	
1116	Unavailable						
1117	MDAL						
1118	Empty						

Command Completed.

;

The following example retrieves the frame power information for all provisioned frames in the STP.

rtrv-stp:display=power

tekelecstp 07-03-30 11:07:17 EST EAGLE 37.0.0

Frame	Power Threshold (Amps) (Watts)		Power Consumption (Amps) (Watts)	
CF00	45	2160	37.71	1810
EF00	40	1920	33.99	1631
EF01	35	1680	10.00	480
EF04	+30	+1440	14.06	675

Command Completed.

;

The following example retrieves the frame and card power information for the control frame in the system.

rtrv-stp:display=power:frm=cf00

tekelecstp 07-04-30 11:07:17 EST EAGLE 37.0.0

Power Threshold	Power Consumption

Frame	(Amps)	(Watts)	(Amps)	(Watts)
-----	-----	-----	-----	-----
CF00	45	2160	37.71	1810

Card	Part Number	Revision	Power Consumption (MilliAmps)	(Watts)
----	-----	-----	-----	-----
1101	850-0484-01	E	313	15
1102	870-2372-01	J	521	25
1103	870-1289-04	K	313	15
1104	+ 870-2198-01	M	+ 1563	+ 75
1105	870-1984-05	M	+ 646	+ 31
1106	870-2372-01	J	521	25
1107	870-2061-01	K	542	26
1108	870-2061-01	K	+ 542	+ 26
1109	MUX		313	15
1110	MUX		313	15
1111	870-2061-01	B	542	26
1112	850-0419-03	C	521	25
1113	870-2360-01	B	625	30
1114	TDM		333	16
1115	Unavailable		625	30
1116	Unavailable		333	16
1117	MDAL		333	16
1118	Empty		0	0
1201	870-2061-01	A	542	26
1202	870-2061-01	A	542	26
1203	850-0549-01	A	313	15
1204	+ 870-2198-01	M	1563	75
1205	850-0549-01	A	313	15
1206	+ 870-2198-01	M	1563	75
1207	870-2371-02	E	625	30
1208	870-1293-02	B	521	25
1209	MUX		313	15
1210	MUX		313	15
1211	870-2061-01	D	542	26
1212	850-0549-01	A	313	15
1213	850-0549-01	A	313	15
1214	850-0549-01	A	313	15
1215	870-2061-01	C	542	26
1216	870-1945-03	D	646	31
1217	Empty		0	0
1218	870-2061-01	K	542	26
1301	870-1984-05	M	646	31
1302	850-0549-01	A	313	15
1303	+ 870-2198-01	M	1563	75
1304	870-2371-02	E	625	30
1305	870-2371-02	E	625	30
1306	850-0419-03	C	521	25
1307				
1308	870-2061-01	K	542	26
1309	MUX		313	15
1310	MUX		313	15
1311	850-0484-01	E	313	15
1312	+ 870-2198-01	M	+ 1563	+ 75
1313	BIP Data inv		+ 1563	+ 75
1314	BIP Data inv		1563	75
1315	Empty		0	0
1316	Empty		0	0
1317	Empty		0	0
1318	850-0419-03	C	521	25
FAN ASSYs Power Consumption			7812	375

Command Completed.

;

The following example retrieves the frame and card power information for the specified extension frame.

rtrv-stp:display=power:frm=ef04

tekelecstp 07-03-30 11:07:17 EST EAGLE 37.0.0

Frame	Power Threshold (Amps)	(Watts)	Power Consumption (Amps)	(Watts)
EF04	+30	+1440	14.06	675

Card	Part Number	Revision	Power Consumption (MilliAmps)	(Watts)
6101	870-1293-20	D	313	15
6102	870-1293-20	D	313	15
6103	870-2671-16	M	1563	75
6104	870-1293-20	D	313	15
6105	870-2061-01	K	542	26
6106	870-1984-05	M	646	31
6107	870-1984-05	M	646	31
6108	870-2372-01	J	521	25
6109	MUX		313	15
6110	MUX		313	15
6111	870-2061-01	A	542	26
6112	870-2061-01	A	542	26
6113	850-0549-01	A	+ 313	+ 15
6114	+ 870-2198-01	M	+ 1563	+ 75
6115	850-0549-01	A	313	15
6116	+ 870-2198-01	M	1563	75
6117	870-2371-02	E	625	30
6118	870-1293-02	B	521	25

FAN ASSYs Power Consumption 2604 125
Command Completed.

;

The following example retrieves the hardware configuration information for all equipped DSM cards that contain the specified Board Part Number.

rtrv-stp:partnum=870-1275-01

tekelecstp 07-03-30 11:07:17 EST EAGLE 37.0.0

Card	Part Number	Rev	Serial Number	Type	DB	APPL	GPL Version
1101	870-1275-01	W	10245689323	DSM	4096M	VS CCP	027-010-000
1205	870-1275-01	W	10246789323	DSM	4096M	VS CCP	027-010-000
1307	870-1275-01	W	10204764378				

Command Completed.

;

The following example retrieves the hardware configuration information for all equipped HC MIM cards that have the specified Board Part Number.

rtrv-stp:partnum=870-2671-02

tekelecstp 07-03-30 11:07:17 EST EAGLE 37.0.0

Card	Part Number	Rev	Serial Number	Type	DB	APPL	GPL
1301	870-2671-02	C	10145689323	LIMT1	512M	SS7ANSI	

```

      1305  870-2671-02  C    10146789323    LIME1    512M  CCS7ITU
126-033-000
      2107  870-2671-02  C    10104764378    LIMT1    512M  CCS7ITU
126-033-000

```

Command Completed.

;

The following example retrieves the hardware configuration information for all E5-E1T1 cards that have the specified Board Part Number.

rtrv-stp:partnum=870-1873-01

tekelecstp 07-03-30 11:07:17 EST EAGLE 37.0.0

Card Version	Part Number	Rev	Serial Number	Type	DB	APPL	GPL
1303	870-1873-01	C	10345689323	LIMT1	512M	SS7ANSI	
1311	870-1873-01	C	10346789323	LIME1	512M	CCS7ITU	
2205	870-1873-01	C	10304764378	LIMT1	512M	CCS7ITU	

Command Completed.

;

The following example shows the hardware configuration information for all E5-ENET cards with the specified Board Part Number.

rtrv-stp:partnum=870-2212-02

tekelecstp 07-03-30 11:07:17 EST EAGLE 37.0.0

Card Version	Part Number	Rev	Serial Number	Type	DB	APPL	GPL
2101	870-2212-02	W	10245689321	DCM	512M	IPLIM	
2103	870-2212-02	W	10246789321	DCM	512M	IPLIM	
2112	870-2212-02	W	10204764371	DCM	512M	IPGWI	

Command Completed.

;

The following example retrieves the hardware configuration information for all cards of the specified card type.

rtrv-stp:type=tsm

tekelecstp 08-10-10 11:07:17 EST EAGLE 40.0.0

Card	Part Number	Rev	Serial Number	Type	DB	APPL	GPL Version
1103	870-1788-03	A	10234658345	TSM	128M	GLS	027-010-000
1212	870-1788-03	A	10234632455	TSM	128M	GLS	027-010-000
2105				TSM		GLS	
2217	870-2943-03	A	10229185653	TSM	512M	GLS	030-005-000

Command Completed.

;

The following example retrieves the hardware configuration information for all cards that are running the specified GPL.

rtrv-stp:gpl=ss7ansi

tekelecstp 07-03-30 11:07:17 EST EAGLE 37.0.0

Card Version	Part Number	Rev	Serial Number	Type	DB	APPL	GPL
1112	870-1789-04	A	10302135627	LIMDS0	-	SS7ANSI	
027-010-000							
1203	870-1789-04	A	10302135777	LIMDS0	-	SS7ANSI	
027-010-000							
1216	870-1789-04	A	10302135655	LIMDS0	-	SS7ANSI	
027-010-010							
1301	870-2671-02	C	10145689323	LIMT1	512M	SS7ANSI	
126-033-000							
1303	870-1873-01	C	10345689323	LIMT1	512M	SS7ANSI	
126-033-000							

Command Completed.

;

The following example retrieves the hardware configuration information for all cards that are running the specified version of the specified GPL.

rtrv-stp:gpl=ss7ansi:ver=027-010-000

tekelecstp 07-03-30 11:07:17 EST EAGLE 37.0.0

Card Version	Part Number	Rev	Serial Number	Type	DB	APPL	GPL
1112	870-1789-04	A	10302135627	LIMDS0	-	SS7ANSI	
027-010-000							
1203	870-1789-04	A	10302135777	LIMDS0	-	SS7ANSI	
027-010-000							

Command Completed.

;

The following example retrieves the hardware configuration information for all cards that are running the specified version of the specified GPL.

rtrv-stp:gpl=ss7ansi:ver=126-033-000

tekelecstp 07-03-30 11:07:17 EST EAGLE 37.0.0

Card Version	Part Number	Rev	Serial Number	Type	DB	APPL	GPL
1301	870-2671-02	C	10145689323	LIMT1	512M	SS7ANSI	
126-033-000							
1303	870-1873-01	C	10345689323	LIMT1	512M	SS7ANSI	
126-033-000							

Command Completed.

;

The following example retrieves the hardware configuration information for all cards that are running the specified version of the specified GPL.

rtrv-stp:gpl=ccs7itu:ver=126-034-000

tekelecstp 07-03-30 11:07:17 EST EAGLE 37.0.0

Card Version	Part Number	Rev	Serial Number	Type	DB	APPL	GPL

```

-----
1311 870-1873-01 C 10346789323 LIME1 512M CCS7ITU
126-034-000
2205 870-1873-01 C 10304764378 LIMT1 512M CCS7ITU
126-034-000

```

Command Completed.

;

The following example retrieves the hardware configuration information for all cards that are running the specified version of the specified GPL.

rtrv-stp:gpl=iplim:ver=126-035-000

tekelecstp 07-03-30 11:07:17 EST EAGLE 37.0.0

Card Version	Part Number	Rev	Serial Number	Type	DB	APPL	GPL
2101	870-2847-02	W	10245689321	DCM	512M	IPLIM	
2103	870-2847-02	W	10246789321	DCM	512M	IPLIM	

Command Completed.

;

The following example shows the hardware configuration information for all frames of the STP, without specifying any optional parameters in the command.

rtrv-stp

tekelecstp 07-03-30 11:07:17 EST EAGLE 37.0.0

Card	Part Number	Rev	Serial Number	Type	DB	APPL	GPL Version
1101	870-1275-01	W	10245689323	DSM	4096M	VSCCP	027-010-000
1102	Empty						
1103	870-1788-03	A	10234658345	TSM	128M	GLS	027-010-000
1104	Empty						
1105	870-1339-06	A	10274568974	LIMATM	-	ATMANSI	027-010-000
1106	Empty			DSM		VSCCP	
1107	870-2212-02	A	10206265084	DCM	512M	STPLAN	128-002-000
1108	870-1456-05	A	10204764378	DCM	512M	SS7IPGW	027-010-000
1109	MUX					BPHMUX	027-345-000
1110	MUX					BPHMUX	027-345-000
1111	870-1788-05	A	10205734657	MCPM	2048M	MCP	027-010-000
1112	870-1789-04	A	10302135627	LIMDS0	-	SS7ANSI	027-010-000
1113	870-2360-01	A	10346357678	GPSM	1024M	EOAM	025-340-000
1114	TDM						
1115	Unavailable			GPSM		EOAM	
1116	Unavailable						
1117	MDAL						
1118	Empty						
1201	870-1339-06	A	10245667974	LIMATM	-	ATMANSI	027-010-000
1202	Empty						
1203	870-1789-04	A	10302135777	LIMDS0	-	SS7ANSI	027-010-000
1204	Empty						
1205	870-1275-01	W	10246789323	DSM	4096M	VSCCP	027-010-000
1206	Empty						
1207	Empty			DCM		SS7IPGW	
1208	870-1456-05	A	10204764222	DCM	512M	SS7IPGW	027-010-000
1209	MUX					BPHMUX	027-345-000
1210	MUX					BPHMUX	027-345-000
1211	870-1788-05	A	10205737777	MCPM	2048M	MCP	027-010-000
1212	870-1788-03	A	10234632455	TSM	128M	GLS	027-010-000
1213	Empty						

```

1214 Auto-Inhibit
1215 870-1788-05 A 10205736734 MCPM 2048M MCP 027-010-000
1216 870-1789-04 A 10302135655 LIMDS0 - SS7ANSI 027-010-010
1217 Empty
1218 Empty
.
.
.
6118 870-2453-06 A 10444135655 LIMATM - ATMANSI 028-010-000

```

Command Completed.

;

The following example retrieves the hardware configuration information for all cards in the STP that are running the **bpdcm** GPL.

rtrv-stp:gpl=bpdcm

tekelecstp 002-03-30 11:07:17 EST 37.0.0

Card Version	Part Number	Rev	Serial Number	Type	DB	APPL	GPL
1101	870-1275-01	W	10245689323	DSM	4GB	VSCCP	
027-010-000							
1113	870-2360-01	A	10346357678	MCAP	1GB	EOAM	
025-340-000							
1205	870-1275-01	W	10246789323	DSM	4GB	VSCCP	
027-010-000							

Command Completed.

;

The following example retrieves the hardware configuration information for all cards in the STP that are running the **imt** communication GPL with GPL version **126-039-043**.

rtrv-stp:gpl=imt:ver=126-039-043

Tekelecstp 07-03-30 11:07:17 EST 37.0.0

Card Version	Part Number	Rev	Serial Number	Type	DB	APPL	GPL
1112	870-1789-04	A	10302135627	LIMDS0	-	SS7ANSI	
027-010-000							
1203	870-1789-04	A	10302135777	LIMDS0	-	SS7ANSI	
027-010-000							

Command Completed.

;

Retrieve the hardware configuration information for cards, including an E5-STC card.

This example displays abridged output.

rtrv-stp

tekelecstp 07-05-03 13:19:14 GMT EAGLE 37.0.0

Card	Part Number	Rev	Serial Number	Type	DB	APPL	GPL Version
1101	870-1289-04	K	10206035030	TSM	256M	GLS	128-018-000
1102	Empty						
1103	870-2212-02	A	10206385320	DCM	512M	IPLIM	128-018-000
1104	Empty						
1105	Empty						
1106	Empty						
1107	Empty						
1108	870-2212-02	A	10206365046	DCM	512M	STPLAN	128-018-000

```

1109 MUX                                HIPR    128-016-000
1110 MUX                                HIPR    128-016-000
1111 870-2212-02 A 10206275736 STC 512M EROUTE 028-018-000
1112 870-2372-08 D 10206125537 STC - EROUTE 028-018-000
1113 870-2360-06 C 10206255064 GPSPM 1024M EOAM 128-018-000
1114 TDM
1115 870-2360-06 C 10206255165 GPSPM 1024M EOAM 128-018-000
1116 TDM
1117 MDAL
1118 Empty

1201 Empty
1202 Empty
1203 Empty
1204 Empty
1205 Empty
1206 Empty
1207 Empty
1208 Empty                                DCM      STPLAN
1209 MUX                                HIPR    128-016-000
1210 MUX                                HIPR    128-016-000
1211 Empty
1212 Empty
1213 Empty
1214 Empty

```

The following example shows abridged output for the E5-SM4G card.

rtrv-stp

Card	Part Number	Rev	Serial Number	Type	DB	APPL	GPL Version
6109	MUX					HIPR	128-018-000
6110	MUX					HIPR	128-018-000
6111	870-2860-01	C	10207125502	DSM	4096M	VSCCP	128-018-000
6112	Empty						
6113	870-2860-01	C	10207125494	DSM	4096M	VSCCP	128-018-000
6114	Empty						
6115	870-2860-01	C	10207125498	DSM	4096M	VSCCP	128-018-000
6116	Empty						
6117	870-2860-01	C	10207125489	DSM	4096M	VSCCP	128-018-000
6118	Empty						

Retrieve the hardware configuration information for cards, including an E5-SLAN card. This example displays abridged output.

rtrv-stp

tekelecstp 07-05-03 13:19:14 GMT EAGLE 37.0.0

Card	Part Number	Rev	Serial Number	Type	DB	APPL	GPL Version
1101	870-1289-04	K	10206035030	TSM	256M	GLS	128-018-000
1102	Empty						
1103	870-2212-02	A	10206385320	DCM	512M	IPLIM	128-018-000
1104	Empty						
1105	Empty						
1106	Empty						
1107	Empty						
1108	870-2212-02	A	10206365046	DCM	512M	STPLAN	128-018-000
1109	MUX					HIPR	128-016-000
1110	MUX					HIPR	128-016-000
1111	870-2212-02	A	10206275736	STC	512M	EROUTE	028-018-000
1112	870-2372-08	D	10206125537	STC	-	EROUTE	028-018-000
1113	870-2360-06	C	10206255064	GPSPM	1024M	EOAM	128-018-000
1114	TDM						
1115	870-2360-06	C	10206255165	GPSPM	1024M	EOAM	128-018-000
1116	TDM						
1117	MDAL						


```

1118 Empty

1201 Empty
1202 Empty
1203 Empty
1204 Empty
1205 Empty
1206 Empty
1207 Empty
1208 Empty          DCM          STPLAN
1209 MUX            HIPR      128-016-000
1210 MUX            HIPR      128-016-000
1211 Empty
1212 Empty
1213 Empty
1214 Empty

```

Retrieve the hardware configuration information for all cards in the STP that are running the **ipshc** GPL.

rtrv-stp:gpl=ipshc

```
tekelecstp 07-07-04 01:34:32 EST EAGLE 37.5.0
```

Card	Part Number	Rev	Serial Number	Type	DB	APPL	GPL Version
----	-----	---	-----	----	--	----	-----
1107	870-2877-01	A	10207185553	IPSM	2048M	IPS	128-021-000

Command Completed.

;

The following example retrieves the hardware configuration information for all cards in the STP that are running the **atmhc** GPL.

rtrv-stp:gpl=atmhc

```
stp9021503 08-01-16 06:58:36 EST EAGLE5 38.0.0
```

Card	Part Number	Rev	Serial Number	Type	DB	APPL	GPL Version
----	-----	---	-----	----	--	----	-----
1102	870-1872-01	B	10207215045	LIMATM	512M	ATMANSI	053-001-000

Command Completed.

;

Retrieve the hardware configuration information for cards, including an E5-ATM card. This example displays abridged output.

rtrv-stp

```
tekelecstp 08-01-03 13:19:14 GMT EAGLE 38.0.0
```

Card	Part Number	Rev	Serial Number	Type	DB	APPL	GPL Version
----	-----	---	-----	----	--	----	-----
1101	870-1289-04	K	10206035030	TSM	256M	GLS	128-018-000
1102	870-1872-01	B	10207215045	LIMATM	512M	ATMANSI	053-001-000
1103	870-2212-02	A	10206385320	DCM	512M	IPLIM	128-018-000
1104	Empty						
1105	Empty						
1106	Empty						
1107	Empty						
1108	870-2212-02	A	10206365046	DCM	512M	STPLAN	128-018-000
1109	MUX					HIPR	128-016-000
1110	MUX					HIPR	128-016-000
1111	870-2212-02	A	10206275736	STC	512M	EROUTE	028-018-000
1112	870-2372-08	D	10206125537	STC	-	EROUTE	028-018-000
1113	870-2360-06	C	10206255064	GPSM	1024M	EOAM	128-018-000
1114	TDM						
1115	870-2360-06	C	10206255165	GPSM	1024M	EOAM	128-018-000
1116	TDM						
1117	MDAL						

```

1118 Empty
1201 Empty
1202 Empty
1203 Empty
1204 Empty
1205 Empty
1206 Empty
1207 Empty
1208 Empty          DCM          STPLAN
1209 MUX            HIPR          128-016-000
1210 MUX            HIPR          128-016-000
1211 Empty
1212 Empty
1213 Empty
1214 Empty

```

Retrieve the hardware configuration of all the cards in the STP that are running the **glshc** GPL.

rtrv-stp:gp1=glshc

```
tekelecstp 08-10-05 01:34:32 EST EAGLE 40.0.0
```

Card	Part Number	Rev	Serial Number	Type	DB	APPL	GPL Version
----	-----	---	-----	----	--	----	-----
1106	870-2943-03	A	10229185653	TSM	512M	GLS	030-005-000

Command Completed.

;

Legend

FRAME—Frame ID for the control shelf or an extension shelf

POWER THRESHOLD—The power threshold (in Amps or Milliamps and Watts) at which an alarm is generated to indicate that power consumption is approaching a maximum allowed level. (See the **ent-frm-pwr** command.)

POWER CONSUMPTION—The current calculated power consumption (in Amps or Milliamps and Watts) of the frame or card

CARD—Card Location

PART NUMBER—Board Part Number

REV—Board Part Number revision

SERIAL NUMBER—Card serial number

TYPE—Card type

DB—Daughterboard memory

APPL—Application that has been provisioned on the card

GPL VERSION—GPL version of the Application GPL being used by the card

rtrv-stpopts

Retrieve STP Options

Use this command to retrieve the current value of the system's node-level processing option indicators maintained in the system's options table.

Keyword: **rtrv-stpopts**

Related Commands: **chg-stpopts**

Command Class: Database Administration

Parameters

This command has no parameters.

Example

rtrv-stpopts

Dependencies

None

Notes

The timer output for this command is in milliseconds, even though the timer could have been entered in seconds on the **chg-stpopts** command.

Output

The following example displays MTP STP options with no affecting features on. Certain features that are shown in other examples control changes and additional options in this option list:

rtrv-stpopts

```
rlghncxa03w 08-09-17 16:02:05 EST EAGLE 39.2.0
STP OPTIONS
-----
MTPT31CTL          1
MTPLTI             yes
MTPLTCTDPCQ        3
MTPLTST            10000
MTPDPCQ            2000
TFATFRPR           1000
MTPLPRST           yes
MTPT10ALT          30000
UIMRD              yes
SLSCNV             perl
CRITALMINH         yes
DISPACTALMS        no
NPCFMTI            14-0-0-0
RPTLNPMRSS         yes
RANDSLS            off
RSTRDEV            on
HSCLKSRC            RS422
HCLKGAIN            LONGHAUL
ARCHBLDID          off
;
```

The following example displays all MTP STP options. The following list indicates which options appear in the output when the associated features are on:

NOTE: All options will not appear in actual output, because all features that cause these options to appear cannot be on in the system at the same time.

- Cluster Routing and Management Diversity (CRMD) feature—MTPXLQ, MTPXLET, MTPXLOT
- MTP Restart (MTPRS or ITUMTPRS) feature—MTPRSI, MTPRSIT
- 6000, 7000, or 8000 Routesets feature—MTPDPCQ=6000 or 7000 or 8000
- GSM MAP Screening (GSMSCRN) feature—GSMDFLT, GSMDECERR
- GSM Mobile Number Portability (G-Port), IS41 to GSM Migration (IGM), Prepaid SMS Intercept (PPSMS) Ph1, Voice Mail Router (V-Flex), Prepaid IDP Query Relay (IDPR), ANSI-41 Mobile Number Portability (A-Port), or any TIF feature is enabled **OR** INAP Number Portability (INP) or GSM Flexible Numbering (G-Flex) feature is ON—DEFCC, DEFNDC
- ATINP feature is enabled—DEFCC
- EPAP-based features or LNP ELAP Configuration feature—DSMAUD
- GSM Flexible Numbering (G-Flex) feature—ANSIGFLEX
- Network Security (NSE) feature—SECMTPMATE, SECMTPSID, SECMTPSNM, SECSCCPSCMG

- ANSI-ITU-China SCCP Conversion (SCCP Conversion) feature is enabled—CNVCGDA, CNVCGDI, CNVCGDN, CNVCGDN24, GTCNVDFLT

rtrv-stpopts

rlghncxa03w 08-09-17 16:02:05 EST EAGLE 39.2.0

STP OPTIONS

```

-----
MTPT31CTL          1
MTPLTI             yes
MTPLTCTDPCQ        3
MTPLTST            10000
MTPXLQ             500
MTPXLET            0100
MTPXLOT            90%
MTPDPCQ            8000
TFATFRPR           1000
MTPRSI             yes
MTPRSIT            5000
MTPLPRST           yes
MTPT10ALT          30000
UIMRD              yes
SLSCNV             perls
CRITALMINH         yes
DISPACTALMS        no
NPCFMTI            14-0-0-0
GSMDFLT            PASS
GSMDECERR           PASS
DEFCC              49
DEFNDC             177
DSMAUD             no
RPTLNPMRSS         yes
RANDSLS            all
RSTRDEV            on
SECMTPMATE          off
SECMTPSID           off
SECMTPSNM           notify
SECSCCPSCMG        notify
CNVCGDA            yes
CNVCGDI            yes
CNVCGDN            yes
CNVCGDN24          yes
GTCNVDFLT          yes
ANSIGFLEX           yes
HSCLKSRC            RS422
HSCLKLL            LONGHAUL
ARCHBLDID          off

```

;

Legend

MTPT31CTL—MTP T31 congestion trigger level. The signaling link congestion level at which the system starts the level 3 t31 timer. When the level 3 t31 timer expires, the associated signaling link is removed from service for realignment.

MTPLTI—MTP loop test indicator. Specifies whether the MTP loop detection procedures are enabled or disabled at the system.

MTPLTCTDPCQ—MTP loop test congestion trigger DPC quantity. The number of most frequently occurring DPCs to which the MTP loop test messages are to be sent when the MTP loop test is triggered by congestion.

MTPLTST—MTP loop test supervision timer. The amount of time, in milliseconds, that the MTP loop test detection procedures run when started.

MTPXLQ—MTP x-list quantity. The number of dynamic status exception list (x-list) entries the system maintains.

MTPXLET—MTP x-list expiration time. The maximum amount of time the system maintains an unreferenced dynamic status exception list (x-list) entry.

MTPXLOT—MTP x-list occupancy threshold. The dynamic status exception list (x-list) occupancy threshold at which the system raises a minor alarm. The threshold is expressed as a percentage of space available.

MTPDPCQ—MTP destination point code quantity. The maximum number of DPCs that can be provisioned in the system.

TFATFRPR—TFA/TFR pacing rate. The amount of time, in milliseconds, between partial broadcasts of up to 20 percent increments of the number of TFAs/TCAs or TFRs/TCRs to be broadcast by the STP when an affected destination becomes accessible using its primary route rather than an alternate route. The STP uses this pacing to prevent congestion on the newly-recovered linksets.

MTPRSIT—MTP Restart isolation timer. The minimum duration of node isolation, in milliseconds, before the MTP Restart procedure is deemed necessary.

MTPRSI—MTP Restart indicator. Specifies whether ANSI or ITU MTP Restart procedures are enabled or disabled at the STP.

MTPLPRST—MTP low priority route set test. Specifies whether low priority route set polling is enabled or disabled at the STP.

MTPT10ALT—MTP T10 alternate timer. Specifies the interval at which the STP performs a route set test on low priority routes.

SLSCNV—Per node SLS conversion indicator. Specifies whether SLS conversion is on, off, or performed per linkset (perls).

UIMRD—Unsolicited Information Message (UIM) redirect. Specifies whether specific UIMs are redirected to this output group.

CRITALMINH—Indicates whether the option that allows the inhibiting of critical alarms is enabled (yes) or disabled (no).

DISPACTALMS—Indicates whether to display active or total alarms in the alarm status area of the VT320 screen.

NPCFMTI—Defines how the ITU national point code is entered into the database and how it is displayed in any outputs from the system.

GSMDFLT—Indicates whether the GSM MAP screening default action is set to pass or discard.

GSMDECERR—Indicates whether the GSM MAP screening decode error action is set to pass or discard.

DEFCC—Defines the default country code.

DEFNDC—Defines the default network destination code.

DSMAUD—Indicates whether the DSM audit is running (on) or disabled (off).

RANDSLS—Displays the Random SLS setting.

RTPLNPMRSS—Displays the setting for reporting or suppressing UIM 1049 for LNP MR with missing subsystems.

RSTRDEV—Allow or disable restoration of device states when an **init-sys** command is executed, an OAM role changes, or a card reload occurs.

SECMTPMATE—Indicates Network Security screening for MTP messages received by an STP on a non-C-Link, with an OPC equal to the SID (True, Adjacent, or Capability) point code of its mate.

SECMTPSID—Indicates Network Security screening for MTP messages received at MTP3 containing an OPC equal to its own SID (OPC that is the True, Secondary, or Capability point code entered in the **chg-sid** command) that is not a route-set-congestion-message. The EAGLE 5 ISS should not receive a message with its own OPC unless the message is a result of a circular route test or is an SLTM when the far end is in loopback. (SLTM messages are not checked.)

SECMTPSNM—Indicates Network Security screening for MTP SNM messages. The EAGLE 5 ISS should not receive an MTP network management message unless:

- The OPC is an adjacent point code. (For all link types, this rule does not apply to UPU, TFC, and RCT messages.)
- The EAGLE 5 ISS has a route to the OPC of the MTP network management message on the linkset which the message was received.
- The EAGLE 5 ISS has a route to the destination field in the message (if applicable to the concerned message) on the linkset which the message was received. (For all link types, this rule is not applicable to RST messages.)

SECSCCPSCMG—Indicates Network Security screening for SCCP SCMG messages. This value applies only to SSP and SOR messages. SSA, SST, SOG, SBR, SNR and SRT messages are not affected. The EAGLE 5 ISS should not receive an SCCP network management message unless:

- The EAGLE 5 ISS has a route to the OPC of the SCMG message on the linkset on which the message was received.
- The EAGLE 5 ISS has a route to the Affected Point Code (also called the Concerned Point Code in EAGLE 5 ISS) in the message on the linkset on which the message was received.

CNVCGDA—Indicates whether or not to discard the CGPA PC in SCCP messages if the destination network type is ANSI, and the PC or ALIAS PC of the destination network type is not defined.

CNVCGDI—Indicates whether or not to discard the CGPA PC in SCCP messages if the destination network type is ITU-I, and the PC or ALIAS PC of the destination network type is not defined.

CNVCGDN—Indicates whether or not to discard the CGPA PC in SCCP messages if the destination network type is ITU-N, and the PC or ALIAS PC of the destination network type is not defined.

CNVCGDN24—Indicates whether or not to discard the CGPA PC in SCCP messages if the destination network type is 24-bit ITU-N, and the PC or ALIAS PC of the destination network type is not defined.

ANSIGFLEX—Indicates enable or disable of ANSI G-Flex to execute at 1700 TPS per DSM card

GTCNVDFLT—Indicates enable or disable of routing of SCCP messages using system defaults when an appropriate entry is not found in the Default GT Conversion table.

HSCLKLL—High speed master clock line length option (SHORTHAUL, LONGHAUL)

HSCLKSRC—High speed master clock source

ARCHBLDID—Archive build ID

rtrv-subnetid

Retrieve Subnet ID

Use this command to retrieve a list of Subnet ID entries from the SUBNETID table, for the ISUP NP with EPAP feature.

Keyword: **rtrv-subnetid**

Related Commands: **dlt-subnetid**, **ent-subnetid**

Command Class: Database Administration

Parameters

:subnetnum= (optional)
 Subnet Number
Range: 1-5

Example

```
rtrv-subnetid
rtrv-subnetid : subnetnum = 1
```

Dependencies

The ISUP NP with EPAP feature must be enabled before this command can be entered.

Notes

None.

Output

When the command is entered with no parameter, the Subnet IDs for Subnet number 1 are listed in numerical order, followed by the Subnet IDs for Subnet number 2 in numerical order, and so on.

rtrv-subnetid

```
tekelecstp 04-09-21 16:11:21 EST EAGLE 31.11.0
```

ID	Subnet Number

```
-----
```

886932	1
886936	1
886935	2
886938	2
886939	2

```
Subnetidlen = 6
```

```
SUBNETID table is (5 of 50) 3% full
```

```
;
```

When a Subnet number is specified, the Subnet IDs for the specified Subnet number are listed in numerical order. The table capacity line shows the total number of entries in use, not just the number of entries displayed.

rtrv-subnetid:subnetnum=2

```
tekelecstp 04-09-21 16:13:54 EST EAGLE 31.11.0
```

ID	Subnet Number

```
-----
```

886935	2
886938	2
886939	2

```
Subnetidlen = 6
```

```
SUBNETID table is (5 of 50) 3% full
```

```
;
```


rtrv-t1**Retrieve T1 Information**

Use this command to retrieve information for a specified T1 interface or for all T1 interfaces that have been defined by the **ent-t1** command for an E1/T1 MIM card, an HC MIM card, or an E5-E1T1 card that is used as a T1 card. The following information can be retrieved: T1 port number, encoding/decoding, timing source, framing, channel bridging, and line length.

Keyword: **rtrv-t1**

Related Commands: **chg-t1, dlt-t1, ent-t1, tst-t1**

Command Class: Database Administration

Parameters

:loc= (optional)

The card location of a T1 card, as stenciled on the shelf of the system.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

Default: If not specified, all T1 card locations are listed.

:t1port= (optional)

T1 port number. The value must be a T1 port that has already been configured on the T1 card specified in the **loc** parameter.

Range: **1-8**

Ports 3-8 are valid only for HC-MIM and E5-E1T1 cards.

Default: If not specified, all T1 ports are listed.

Example

rtrv-t1

rtrv-t1:loc=1307:t1port=2

rtrv-t1:loc=1311:t1port=1

Dependencies

The **loc** and **t1port** parameters must be specified together, if any parameters are specified for the command.

The specified card location (**loc** parameter) must be equipped.

The card specified by the **loc** parameter must be a **limt1** card type.

The specified port (**t1port** parameter) on the card in the specified card location (**loc** parameter) must already have a defined T1 interface.

Notes

None.

Output

rtrv-t1

```

rlghncxa03w 03-03-20 09:07:58 EST EAGLE 31.3.0
LOC  T1PORT ENCODE  T1TSEL  FRAMING  LL
1211 1      ami     external  esf      10
1307 2      b8zs    line      sf       133
1311 1      ami     external  esf      500

```

;

rtrv-t1:loc=1211:t1port=1

```

rlghncxa03w 03-03-20 09:07:58 EST EAGLE 31.3.0
LOC  T1PORT ENCODE  T1TSEL  FRAMING  LL
1211 1      ami     external  esf      133

```

```

TS1  1211,B2  TS9   -----  TS17  -----
TS2  1211,B   TS10  -----  TS18  -----
TS3  -----  TS11  -----  TS19  -----
TS4  -----  TS12  -----  TS20  -----
TS5  -----  TS13  -----  TS21  -----
TS6  -----  TS14  -----  TS22  -----
TS7  -----  TS15  -----  TS23  -----
TS8  -----  TS16  -----  TS24  -----

```

;

rtrv-t1:loc=1311:t1port=1

```

rlghncxa03w 03-03-20 09:07:58 EST EAGLE 31.3.0
LOC  T1PORT ENCODE  T1TSEL  FRAMING  LL
1211 1      ami     external  esf      100

```

```

TS1  1311,A   TS9   1313,B   TS17  -----
TS2  1311,A1  TS10  -----  TS18  -----
TS3  1311,B1  TS11  -----  TS19  -----
TS4  1311,B3  TS12  1313,B3  TS20  -----
TS5  1312,A   TS13  -----  TS21  -----
TS6  -----  TS14  -----  TS22  -----
TS7  1313.A   TS15  -----  TS23  -----
TS8  1313.A   TS16  -----  TS24  -----

```

;

The following example includes information for HC-MIM T1 cards. Ports 3 and 4, 5 and 6, and 7 and 8 on the card in location 1311 are channel-bridged pairs.

rtrv-t1

```

rlghncxa03w 05-04-20 09:07:58 EST EAGLE5 33.0.0
LOC  T1PORT ENCODE  T1TSEL  FRAMING  LL  CHANBRDG
1211 1      ami     external  esf      10  -----
1307 2      b8zs    line      sf       133  -----
1307 6      b8zs    line      sf       133  -----
1311 1      ami     external  esf      500  -----
1311 2      ami     external  esf      500  -----
1311 3      ami     external  esf      500  MASTER
1311 4      ami     external  esf      500  SLAVE
1311 5      ami     RECOVERED  esf      500  MASTER
1311 6      ami     RECOVERED  esf      500  SLAVE
1311 7      ami     recovered  sf       500  MASTER
1311 8      ami     recovered  sf       500  SLAVE

```

;

The following example shows information for the HC-MIM T1 card in location 1307.

rtrv-t1:loc=1307:t1port=7

```

rlghncxa03w 05-03-20 09:07:58 EST EAGLE 33.0.0
LOC  T1PORT ENCODE  T1TSEL  FRAMING  LL  CHANBRDG
1307 7      b8zs    line      sf       133  -----

```

```

TS1 1307,A TS9 1307,B18 TS17 -----
TS2 1307,A1 TS10 ----- TS18 -----
TS3 1307,B1 TS11 ----- TS19 -----
TS4 1307,B3 TS12 1307,B31 TS20 -----
TS5 1307,A12 TS13 ----- TS21 -----
TS6 ----- TS14 ----- TS22 -----
TS7 1307,A21 TS15 ----- TS23 -----
TS8 1307,A31 TS16 ----- TS24 -----

```

;

The following example shows information for port 5 on the card in location 1311. Port 5 is the master port of a channel-bridged pair of ports (5 and 6) on the card.

rtrv-t1:loc=1311:t1port=5

```

rlghncxa03w 05-04-20 09:07:58 EST EAGLE5 33.0.0
LOC T1PORT ENCODE T1TSEL FRAMING LL CHANBRDG
1311 5 ami RECOVERED esf 500 MASTER

```

```

TS1 1311,A TS9 1311,B18 TS17 -----
TS2 1311,A1 TS10 ----- TS18 -----
TS3 1311,B1 TS11 ----- TS19 -----
TS4 1311,B3 TS12 1311,B31 TS20 -----
TS5 1311,A12 TS13 ----- TS21 -----
TS6 ----- TS14 ----- TS22 -----
TS7 1311,A21 TS15 ----- TS23 -----
TS8 1311,A31 TS16 ----- TS24 -----

```

;

The following example shows information for port 6 on the card in location 1311. Port 6 is channel bridged with port 5 for data pass-through.

rtrv-t1:loc=1311:t1port=6

```

rlghncxa03w 05-04-20 09:07:58 EST EAGLE5 33.0.0
LOC T1PORT ENCODE T1TSEL FRAMING LL CHANBRDG
1311 6 B8ZS recovered SF 135 SLAVE

```

Card 1311, port 6 is channel bridged with port 5 for data pass through.

;

Legend

LOC—T1card location in an EAGLE 5 ISS shelf.

T1PORT—T1 port number on an T1 card.

ENCODE—Indicator for use of B8ZS or AMI encoding/decoding.

T1TSEL—T1 timing source indicator (**external** = master timing source; **line** = slave timing source; **recovered** = the timing source for the even-numbered port in a channel bridged pair is recovered from the odd-numbered port of the pair).

FRAMING—Framing format (SF or ESF).

LL—Line length; T1 cable length in feet between the EAGLE 5 ISS and the connecting node

CHANBRDG—Indicates whether an odd numbered port is not channel bridged with its adjacent even numbered port for non-signaling data pass through (dashes), or the port is the odd-numbered channel bridged port on the card (MASTER), or the port is the even-numbered channel bridged port on the card (SLAVE) on an HC-MIM or E5-E1T1 card.

TSx—Timeslot.

rtrv-tbl-capacity**Retrieve Table Capacity**

Use this command to retrieve table use capacity summary information. For each table listed, the number of table entry elements in use and the total allowed number of table elements is presented, along with a percent (%) full value.

Keyword: **rtrv-tbl-capacity**

Related Commands: **rept-stat-xlist**, **rtrv-appl-rtkey**, **rtrv-as**, **rtrv-assoc**, **rtrv-dstn**, **rtrv-gta**, **rtrv-gtt**, **rtrv-ip-host**, **rtrv-ip-lnk**, **rtrv-ls**, **rtrv-map**, **rtrv-scrset**, **rtrv-slk**, **rtrv-spc**, **rtrv-vflx-cd**, **rtrv-vflx-rn**, **rtrv-vflx-vmsid**, **rtrv-x25-dstn**, **rtrv-x25-slk**

Command Class: Database Administration

Parameters

This command has no parameters.

Example

rtrv-tbl-capacity

Dependencies

None

Notes

This command can be canceled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

XLIST table information is shown only if the CRMD feature is ON.

Secondary Point Code (SPC) table information is shown only if the MPC feature is ON.

If the EGTT feature is ON then table name is GTA instead of GTT.

Additional information for each listed table can be displayed using the commands listed in Table 5-71.

Though the ASP table entries are now part of the IPAPSOCK table, EAGLE 5 ISS command entry and output still appear as though they are separate tables. The **rtrv-tbl-capacity** command shows the number of ASPs in the 4000-entry IPAPSOCK table.

Table 5-71. Retrieve Commands for Additional Table Information

Command	Table name	Description of table
rept-stat-xlist	XLIST	Destination - Routeset Extension
rtrv-appl-rtkey	IPRTKEY	IP Routing Key
rtrv-as	AS	Application Server
rtrv-assoc	IPAPSOCK	IP Socket/Association
rtrv-dstn	DSTN	Destination Routeset, Exception Routeset
rtrv-gta	GTA	Global Title Address
rtrv-gtt	GTT	Global Title Translation
rtrv-ip-host	IP-HOST	IP Host

Table 5-71. Retrieve Commands for Additional Table Information

Command	Table name	Description of table
rtrv-ip-lnk	IP-LNK	Internet Process Link
rtrv-ls	LS	Link Set
rtrv-map	MAP	Mated Application
rtrv-mrn	MRN	Mated Relay Node
rtrv-npp-as	NPP-AS	Numbering Plan Processor
rtrv-npp-srs	NPP-SRS	Numbering Plan Processor
rtrv-scrset	SCRSET	Gateway Screening Screen Set
rtrv-slk	SLK	Signal Link
rtrv-spc	SPC	Secondary Point Code
rtrv-vflx-cd	VFLXCD	V-Flex Call Decision
rtrv-vflx-rn	VFLXRN	V-Flex Routing Number
rtrv-vflx-vmsid	VFLXVID	V-Flex VMSID
rtrv-x25-dstn	X25-DSTN	X.25 Destination
rtrv-x25-slk	X25-SLK	X.25 Signal Link

The MRN table capacity value is adjusted to subtract any point code values allocated to support the SCCP-SERV reroute service.

V-Flex Call Decision (VFLXCD), Routing Number (VFLXRN) and VMSID (VFLXVID) table information is shown only if the V-Flex feature is enabled.

Output

The following example shows the output for the minimum table sizes in the system:

rtrv-tbl-capacity

```
tekelecstp 09-02-19 13:57:06 EST EAGLE 40.1.0

DSTN      table is (      200 of      2000) 10% full
XLIST     table is (         0 of        500) 0% full
X25-DSTN  table is (         0 of      1024) 0% full
SPC       table is (         0 of        40) 0% full
LS        table is (      512 of      1024) 50% full
SLK       table is (        48 of      1200) 4% full
X25-SLK   table is (         0 of       256) 0% full
IP-LNK    table is (        10 of       500) 2% full
IP-HOST   table is (        58 of     2048) 3% full
MAP       table is (      256 of      1025) 25% full
GTT       table is (    2700 of   270000) 1% full
SCRSET    table is (        50 of       255) 20% full
AS        table is (         5 of       250) 2% full
ASP       table is (         5 of     4000) 2% full
RTEKEY    table is (         2 of     2500) 1% full
IPAPSOCK  table is (     324 of     4000) 8% full
VFLXRN    table is (         1 of    10000) 1% full
VFLXCD    table is (         1 of     4950) 1% full
VFLXVID   table is (         1 of     1000) 1% full
NPP-AS    table is (         6 of     1024) 1% full
NPP-SRS   table is (         0 of     8192) 0% full
```

;

The following example shows the output for the maximum table sizes in the system. For the DSTN, SLK, GTT, and MAP tables, maximum values depend on the enabled feature quantity value applicable to the table in the system.

rtrv-tbl-capacity

```
tekelecstp 09-02-19 13:57:06 EST EAGLE 40.1.0

DSTN      table is (      600 of      8000) 10% full
XLIST     table is (         0 of       500) 0% full
X25-DSTN  table is (         0 of     1024) 0% full
SPC       table is (         0 of        40) 0% full
LS        table is (      512 of     1024) 50% full
SLK       table is (    1501 of     1500) 75% full
X25-SLK   table is (         0 of       256) 0% full
IP-LNK    table is (        10 of       500) 2% full
IP-HOST   table is (        58 of     2048) 3% full
MAP       table is (    1500 of     3000) 50% full
GTT       table is ( 1000000 of 1000000) 100% full
SCRSET    table is (        25 of       255) 10% full
AS        table is (         5 of       250) 2% full
ASP       table is (         5 of     4000) 2% full
RTEKEY    table is (         2 of     2500) 1% full
IPAPSOCK  table is (     324 of     4000) 8% full
VFLXRN    table is (         1 of    10000) 1% full
VFLXCD    table is (         1 of     4950) 1% full
VFLXVID   table is (         1 of     1000) 1% full
NPP-AS    table is (         6 of     1024) 1% full
NPP-SRS   table is (         0 of     8192) 0% full
```

;

rtrv-th-alm**Retrieve Alarm Thresholds**

Use this command to retrieve the alarm thresholds and associated values. For additional information on these values, refer to the *Database Administration Manual - SS7* in your EAGLE 5 ISS documentation set.

Keyword: rtrv-th-alm

Related Commands: chg-th-alm, rept-stat-sccp

Command Class: Database Administration

Parameters

This command has no parameters.

Example

rtrv-th-alm

Dependencies

Level 1 threshold values must be less than their corresponding level 2 threshold values

Notes

None

Output

rtrv-th-alm

```
tekelecstp 08-02-23 13:14:44 EST EAGLE 38.0.0
Thermal Alarm Level 1:          92%
Thermal Alarm Level 2:          99%
SCCP TPS Threshold:             80%
SCCP Calculation Method:        N
LNP TN DB Alarm Level 1:        80%
LNP TN DB Alarm Level 2:        95%
GTT SCCP Service Alarm Level 1: 10%
GTT SCCP Service Alarm Level 2: 20%
Non-GTT SCCP Service Alarm Level 1: 10%
Non-GTT SCCP Service Alarm Level 2: 20%
SCCP Service Alarm Level 1 Interval: 15
SCCP Service Alarm Level 2 Interval: 50
RTRV-TH-ALM: MASP A - COMPLTD.
```

;

rtrv-tifopts**Retrieve TIF Options**

Use this command to retrieve the current values of the TIF option indicators from the EAGLE 5 ISS Options table.

Keyword: rtrv-tifopts

Related Commands: chg-tifopts

Command Class: Database Administration

Parameters**Example**

rtrv-tifopts

Dependencies

The EGLEOPTS table is corrupt or cannot be found.

Notes

None

Output**rtrv-tifopts**

tekelecstp 08-11-10 12:32:21 EST EAGLE 40.0.0
 Command entered at terminal #4.

TIF OPTIONS

```

-----
IAMCGPN      = dn
NPFLAG       = none
RCAUSENP     = 0
RCAUSEPFX    = 0
NPType       = sprn
NPTypeCGPN   = sprn
ACLEN        = 0
SPLITIAM     = none
CONDCGPN     = none
CRPREL       = 31
RNRQD        = yes
DFLTRN       = none
DLMA         = none
DLMB         = none
DLMC         = none
SNSCGPNDFLT  = none
MATCHSEQ     = dn
  
```

;

rtrv-tinpopts**Retrieve TINP Options**

Use this command to retrieve the current values of the TINP option indicators from the TINPOPTS table.

Keyword: rtrv-tinpopts

Related Commands: chg-tinpopts

Command Class: Database Administration

Parameters

None

Example

rtrv-tinpopts

Dependencies

None

Notes

None

Output**rtrv-tinopts**

tekelecstp 08-02-07 16:16:27 EST EAGLE 38.0.0
Command entered at terminal #4.

TINP OPTIONS

```

-----
IAMACT                relay
DNFMT                 rn
DNNAI                 none
IAMCGPN               none
NPType               sprn
SNAI                  iamnai
NPFLG                 nm
RCAUSENP              127
RCAUSEPFX             0
DLTHOMERN             always

```

;

rtrv-trbl**Retrieve Trouble**

Use this command to display detailed information for one or more troubles that are currently logged into the system.

Keyword: rtrv-trbl

Related Commands: act-alm-trns, dact-alm-trns, rept-stat-alm, rept-stat-clk, rept-stat-trbl, rls-alm, rtrv-obit

Command Class: System Maintenance

Parameters

:loc= (mandatory)

The address of the card that is running the OAM from which logged trouble reports are to be displayed.

Range: 1113, 1115

:mode= (optional)

Display mode

Range: c, m

c—Continuous mode; shows troubles already logged and new troubles as they occur.

m—Manual mode; shows troubles on demand only

Default: c

:num= (optional)

Indicates how many troubles to display.

Range: 1-99

Example

rtrv-trbl:loc=1113:num=2

Dependencies

At least one trouble must be in the trouble log, or the command is rejected.

Only one **rtrv-trbl** or **rtrv-obit** command can be in progress at a time.

If the **mode** parameter is specified without the **num** parameter, the entire log is displayed.

The card specified by the **loc** parameter must be **1113** or **1115**.

If the **loc** parameter specifies the card that is running the standby OAM, that card must be available.
The **num** parameter must be between **1** and **99**.

Notes

When a trouble is generated in the system, it is logged into the RAM storage area of the active OAM. Each OAM can store up to 99 troubles in a queue. If the OAM resets, logged troubles are lost.

Output

The output from this command should be reviewed with a member of the Tekelec Technical Services Team. You can contact Tekelec Technical Services at (888) FOR-TKLC.

rtrv-trbl:loc=1113:num=2

```
rlghncxa03w 03-03-07 08:47:43 EST EAGLE 31.3.0
Card 1113 Module 0000 Mod_loc 0 Class 0000 Severity 0
Report Date:00-00-00 Time:00:00:00
```

```
rlghncxa03w 03-03-07 08:47:43 EST EAGLE 31.3.0
Card 1108 Module 8001 Mod_loc 6 Class 100A Severity 1
Report Date:03-03-04 Time:09:19:59
```

;

rtrv-trbltx

Retrieve Trouble Text Table Entries

Use this command to retrieve Alarm and UIM message information including MRN (message reference number), level (for Alarms), Output Group, and text.

The default report displays all Alarms (in numerical order) and then all UIMs.

The optional parameters can be used to:

- Display a range of Alarms or UIMs (ranges spanning both Alarms and UIMs are not supported)
- Search for Alarms, UIMs, or both message types matching a specific Output Group
- Sort all entries by Output Group

Keyword: **rtrv-trbltx**

Related Commands:

Command Class: Database Administration

Parameters

:enum= (optional)

The ending Message Reference Number (MRN) when specifying a range.

Range: **1-1499**

1-999 for Alarms (UAMs)

1000-1499 for UIMs

Default: when **enum** is not specified,

If **snum** is specified, the **enum** value defaults to the specified **snum** value.

If **snum** is not specified and **type=all**, **type=uim**, or **type** not specified, the **enum** value defaults to **1499**

If **snum** is not specified and **type=alarm**, the **enum** value defaults to **999**

:outgrp= (optional)

The Output Group to sort or filter the Alarm/UIMs on.

Range: **appserv, appss, card, clk, db, dbg, gtt, gws, link, meas, mon, mps, pu, sa, seas, slan, sys, traf**

appserv— Application Server

appss— Application Subsystem

card— Card

clk— Clock

db— Database

dbg— Debug

gtt— GTT Maintenance

gws— GWS Maintenance

link— Link Maintenance

meas— Measurements Maintenance

mon— Monitoring (Sentinel or IMF) Maintenance

mps— MPS Maintenance

pu— Program Update

sa— System Administration

seas— SEAS (Sentinel or IMF)

slan— SLAN Maintenance

sys— System Maintenance

traf— Traffic

all—retrieve information for all Output Groups

Default: No sorting or filtering is done on Output Groups.

:snum= (optional)

A single Message Reference Number (MRN), or the starting MRN when specifying a range.

Range: **1-1499**

1-999—For Alarms (UAMs)

1000-1499—For UIMs

Default: All message entries for the specified **type** are displayed.

For **type=all**, **type=alarm**, or **type** not specified—**snum** Default: **1**

For **type=uim**—**snum** Default: **1000**

:type= (optional)

The type of trouble text entry—Alarm, UIM, or both types—to display.

Range: **all, alarm, uim**

all— Both types are displayed

alarm— Only Alarm entries are displayed

uim— Only UIM entries are displayed

Default: **all**

Example

```
rtrv-trbltx
```

```
rtrv-trbltx:type=alarm
```

```
rtrv-trbltx:outgrp=sys
```

```
rtrv-trbltx:type=alarm:outgrp=all
```

```
rtrv-trbltx:snum=1002
```

Dependencies

If **enum** is specified, **snum** must be specified in the command.

The specified **enum** value must be greater than or equal to the specified **snum** value.

The specified **enum** value must be in the same range as the specified **snum** value (**1-999** for Alarms and **1000-1499** for UIMs). The range cannot span both types.

The specified **snum** and **enum** values must be in the range of the specified **type** (**1-999** for Alarms and **1000-1499** for UIMs).

When the **outgrp** parameter is specified, the **snum** and **enum** parameters cannot be specified.

Notes

This command can be canceled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

To display a single Alarm or UIM, enter the Alarm or UIM MRN as the value of the **snum** parameter. Either do not specify the **enum** parameter or specify the **enum** parameter with the same value as the **snum** value.

If an unused MRN is specified as an **snum** parameter value, the header information is displayed without any Output Group header or MRN information.

If an **snum/enum** range is specified, and there are unused MRNs within that range, only the used MRNs are displayed.

Output

The following example shows output when the command has no parameters. All entries are not shown; the list is long:

rtrv-trbltx

ncralstp00001 03-07-16 10:15:29 EST EAGLE 31.3.0

Alarm Report

MRN	LEVEL	OUTPUT	GROUP	TEXT
0001	MAJR	SYS		Card has reset
0002	MINR	SYS		Card is not running approved GPL
0003	NONE	SYS		Alarm cleared for GPL
.				
.				
.				
0912	NONE	SYS		Dynamic database is now consistent

UIM Report

MRN	OUTPUT	GROUP	TEXT
1000	SYS		MTP rcvd UPU - user part is not SCCP
1001	SYS		MTP rcvd Transfer Controlled (TFC)
1002	SYS		MTP rcvd invalid TFC - status 0
.			
.			
.			
1499	SYS		Invalid MRN detected

END OF RTRV-TRBLTX REPORT.

;

The following example shows the display with **type=alarm**. All entries are not shown; the list is long:

rtrv-trbltx:type=alarm

ncralstp00001 03-07-16 10:15:29 EST EAGLE 31.3.0

Alarm Report

MRN	LEVEL	OUTPUT	GROUP	TEXT
0001	MAJR	SYS		Card has reset
0002	MINR	SYS		Card is not running approved GPL
0003	NONE	SYS		Alarm cleared for GPL
.				
.				
.				
0912	NONE	SYS		Dynamic database is now consistent

END OF RTRV-TRBLTX REPORT.

;

The following example shows the display with **type=uim**. All entries are not shown; the list is long:

rtrv-trbltx:type=uim

ncralstp00001 03-07-16 10:15:29 EST EAGLE 31.3.0

UIM Report

MRN	OUTPUT	GROUP	TEXT
1000	SYS		MTP rcvd UPU - user part is not SCCP
1001	SYS		MTP rcvd Transfer Controlled (TFC)

```

          1002          SYS          MTP rcvd invalid TFC - status 0
          .
          .
          1499          SYS          Invalid MRN detected
END OF RTRV-TRBLTX REPORT.
;

```

The following example shows the display with **outgrp=all**. The complete list of Alarms and UIMs is not shown; it is a long list; examples from each type and several Output Groups are shown.

NOTE: The output for outgrp=all:type=alarm includes all Output Groups in the Alarm Report only; the output for outgrp=all:type=uim includes all Output Groups in the UIM Report only.

rtrv-trbltx:outgrp=all

```
rlghncxa03w 06-05-27 08:15:10 EST EAGLE 35.0.0
```

Alarm Report

MRN	LEVEL	OUTPUT GROUP	TEXT

Output Group - SYS			
0001	MAJR	SYS	Card has reset
0002	MINR	SYS	Card is not running approved GPL
.			
.			
.			
0912	NONE	SYS	Dynamic database is now consistent
.			
.			
.			
Output Group - LINK			
0155	MINR	LINK	STPLAN connection unavailable
0156	NONE	LINK	STPLAN connection available
.			
0479	NONE	LINK	Link not Monitored
UIM Report			
MRN		OUTPUT GROUP	TEXT

Output Group - SYS			
1000		SYS	MTP rcvd UPU - user part is not SCCP
1001		SYS	MTP rcvd Transfer Controlled (TFC)
.			
.			
.			
1499		SYS	Invalid MRN detected
.			
.			
.			
Output Group - LINK			
13nn		LINK	Example text

```
END OF RTRV-TRBLTX REPORT.
```

```
;
```

The following example shows the display for **outgrp=sys**. All entries are not shown; the list is long:

rtrv-trbltx:type=alarm:outgrp=sys

```
ncralstp00001 03-07-16 10:15:29 EST EAGLE 31.3.0
```

Alarm Report

```

                MRN      LEVEL  OUTPUT GROUP      TEXT
-----
      Output Group - SYS
        0001    MAJR    SYS                Card has reset
        0002    MINR    SYS                Card is not running approved GPL
        .
        .
        .
        0912    NONE    SYS                Dynamic database is now consistent

      END OF RTRV-TRBLTX REPORT.
;

```

The following example shows the display for only Alarm MRN 3:

rtrv-trbltx:snum=3

```
ncralstp00001 03-07-16 10:15:29 EST  EAGLE 31.3.0
```

```
Card 1113; SYS REL= 31.3.0; STP CLLI= ncralstp00001; Timezone= EST
```

Alarm Report

```

                MRN      LEVEL  OUTPUT GROUP      TEXT
-----
        0003    NONE    SYS                Alarm cleared for GPL

      END OF RTRV-TRBLTX REPORT.
;

```

The following example shows the display for only UIM MRN 1002:

rtrv-trbltx:snum=1002

```
ncralstp00001 03-07-16 10:15:29 EST  EAGLE 31.3.0
```

UIM Report

```

                MRN      OUTPUT GROUP      TEXT
-----
        1002                SYS                MTP rcvd invalid TFC - status 0

      END OF RTRV-TRBLTX REPORT.
;

```

rtrv-trm

Retrieve Terminal

Use this command to show the port configuration for all TDM terminals or a specified terminal. These ports are used to connect modems, printers, and terminals to the system. This command displays the following information: device type, data transmission rate, parity, type of flow control used, number of stop bits, number of data bits, and the type of unsolicited messages to be received.

Keyword: **rtrv-trm**

Related Commands: **act-echo, canc-echo, chg-trm, dact-echo, inh-trm, rept-stat-trm, rmv-trm, rst-trm**

Command Class: Database Administration

Parameters

:trm= (optional)

Specifies the ID number of the terminal whose characteristics are to be retrieved and displayed.

Range: **1-40**

Default: Display all

Example

```
rtrv-trm
```

```
rtrv-trm:trm=17
```

Dependencies

The IP User Interface feature must be enabled and turned on, and at least one IPSM card must be equipped, before **telnet** or **emsalm** type terminals with IDs 17 - 40 can be specified.

The specified terminal must be equipped.

Notes

None

Output

The following example shows the display of the terminal settings for 16 terminal ports (no IPSM cards are equipped):

rtrv-trm

```

rlghncxa03w 09-01-11 16:02:08 EST EAGLE 40.1.0
TRM  TYPE      COMM      FC      TMOUT  MXINV  DURAL
1    VT320      9600-7-E-1 SW      60      5      99:59:59
2    VT320      9600-7-E-1 BOTH    60      5      INDEF
3    KSR        9600-7-E-1 SW      60      0      00:00:00
4    NONE       9600-7-E-1 SW      60      5      00:30:00
5    NONE       9600-7-E-1 SW      60      5      00:00:30
6    OAP        19200-7-E-1 SW      0       5      INDEF
7    VT320      9600-7-E-1 SW      60      5      99:59:59
8    VT320      9600-7-E-1 SW      60      5      INDEF
9    VT320      9600-7-E-1 SW      60      0      00:00:00
10   VT320      9600-7-E-1 SW      60      5      00:30:00
11   VT320      9600-7-E-1 NONE    60      5      00:00:30
12   NONE       19200-7-E-1 SW      0       5      INDEF
13   VT320      9600-7-E-1 SW      60      5      99:59:59
14   VT320      9600-7-E-1 SW      60      5      INDEF
15   VT320      9600-7-E-1 SW      60      0      00:00:00
16   VT320      9600-7-E-1 SW      60      5      00:30:00

```

```

TRM  TRAF  LINK  SA  SYS  PU  DB  UIMRD
1    YES  YES  YES  YES  YES  YES  YES
2    YES  YES  YES  YES  YES  YES  YES
3    YES  YES  YES  YES  YES  YES  YES
4    YES  YES  YES  YES  NO   YES  YES
5    YES  YES  YES  YES  YES  YES  YES
6    NO   YES  YES  YES  YES  YES  YES
7    NO   YES  YES  YES  YES  YES  YES
8    YES  YES  YES  YES  YES  YES  YES
9    YES  YES  YES  YES  YES  YES  YES
10   NO   NO   NO   NO   NO   NO   NO
11   NO   NO   NO   NO   NO   NO   NO
12   NO   NO   NO   NO   NO   NO   NO
13   NO   NO   NO   NO   NO   NO   NO
14   NO   NO   NO   NO   NO   NO   NO
15   NO   NO   NO   NO   NO   NO   NO
16   NO   NO   NO   NO   NO   NO   NO

```

```

APP  APP
TRM  SERV  SS  CARD  CLK  DBG  GTT  GWS  MEAS  MON  MPS  SEAS  SLAN
1    YES  YES  YES  YES  YES  YES  YES  YES  YES  YES  YES  NO   NO
2    YES  YES  YES  YES  YES  YES  YES  YES  YES  YES  YES  NO   NO
3    YES  YES  YES  YES  YES  YES  YES  YES  YES  YES  YES  NO   NO
4    YES  YES  YES  YES  YES  YES  NO   YES  YES  YES  YES  NO   NO
5    YES  YES  YES  YES  YES  YES  YES  YES  YES  YES  YES  NO   NO
6    YES  YES  YES  YES  YES  YES  YES  YES  YES  YES  YES  NO   NO
7    NO   YES  YES  YES  YES  YES  YES  YES  YES  YES  YES  NO   NO
8    YES  YES  YES  YES  YES  YES  YES  YES  YES  YES  YES  YES  YES
9    YES  YES  YES  YES  YES  YES  YES  YES  YES  YES  YES  YES  YES
10   NO   NO   NO   NO   NO   NO   NO   NO   NO   NO   NO   NO   NO
11   NO   NO   NO   NO   NO   NO   NO   NO   NO   NO   NO   NO   NO
12   NO   NO   NO   NO   NO   NO   NO   NO   NO   NO   NO   NO   NO
13   NO   NO   NO   NO   NO   NO   NO   NO   NO   NO   NO   NO   NO
14   NO   NO   NO   NO   NO   NO   NO   NO   NO   NO   NO   NO   NO
15   NO   NO   NO   NO   NO   NO   NO   NO   NO   NO   NO   NO   NO
16   NO   NO   NO   NO   NO   NO   NO   NO   NO   NO   NO   NO   NO

```

;

The following example shows the display of the terminal settings for a **mgmt** terminal used for Network Surveillance:

rtrv-trm:trm=3

```
rlghncxa03w 08-03-01 16:02:08 EST EAGLE 38.0.0
TRM TYPE COMM FC TMOUT MXINV DURAL
3 MGMT 9600-7-E-1 SW 60 0 00:00:00

TRM TRAF LINK SA SYS PU UIMRD
3 YES YES YES YES YES YES

APP APP
TRM SERV SS CARD CLK DBG GTT GWS MEAS MON MPS SEAS SLAN
3 YES YES YES YES YES YES YES YES YES YES NO NO
;
```

The following example shows the display of the terminal settings with the IP User Interface feature enabled and one IPSM card equipped:

rtrv-trm

```
rlghncxa03w 08-05-01 16:02:08 EST EAGLE 39.0.0
TRM TYPE COMM FC TMOUT MXINV DURAL
1 VT320 9600 -7-E-1 SW 0 5 00:01:00
2 VT320 9600 -7-E-1 SW 0 5 00:01:00
3 VT320 9600 -7-E-1 SW 0 5 00:01:00
4 KSR 9600 -7-E-1 SW 0 5 00:01:00
5 NONE 9600 -7-E-1 SW 30 5 00:01:00
6 NONE 9600 -7-E-1 SW 30 5 00:01:00
7 NONE 9600 -7-E-1 SW 30 5 00:01:00
8 NONE 9600 -7-E-1 SW 30 5 00:01:00
9 VT320 9600 -7-E-1 SW 0 5 00:01:00
10 VT320 9600 -7-E-1 SW 0 5 00:01:00
11 VT320 9600 -7-E-1 SW 0 5 00:01:00
12 KSR 9600 -7-E-1 SW 0 5 00:01:00
13 NONE 9600 -7-E-1 SW 30 5 00:01:00
14 NONE 9600 -7-E-1 SW 30 5 00:01:00
15 NONE 9600 -7-E-1 SW 30 5 00:01:00
16 NONE 9600 -7-E-1 SW 30 5 00:01:00

TRM TYPE LOC TMOUT MXINV DURAL
17 TELNET 1201 60 5 00:30:00
18 TELNET 1201 60 5 00:30:00
19 TELNET 1201 60 5 00:30:00
20 TELNET 1201 60 5 00:30:00
21 TELNET 1201 60 5 00:30:00
22 TELNET 1201 60 5 00:30:00
23 TELNET 1201 60 5 00:30:00
24 TELNET 1201 60 5 00:30:00

TRM LOGINTMR LOGOUTTMR PNGTIMEINT PNGFAILCNT
(sec) (sec) (msec)
17 none none none 1
18 none none none 1
19 none none none 1
20 none none none 1
21 none none none 1
22 none none none 1
23 none none none 1
24 none none none 1

TRM TRAF LINK SA SYS PU DB UIMRD
1 YES YES YES YES YES YES YES
```

2	YES	YES	YES	YES	YES	YES	YES
3	YES	YES	YES	YES	YES	YES	YES
4	YES	YES	YES	YES	NO	YES	YES
5	YES	YES	YES	YES	YES	YES	YES
6	NO	YES	YES	YES	YES	YES	YES
7	NO	YES	YES	YES	YES	YES	YES
8	YES	YES	YES	YES	YES	YES	YES
9	YES	YES	YES	YES	YES	YES	YES
10	NO	NO	NO	NO	NO	NO	NO
11	NO	NO	NO	NO	NO	NO	NO
12	NO	NO	NO	NO	NO	NO	NO
13	NO	NO	NO	NO	NO	NO	NO
14	NO	NO	NO	NO	NO	NO	NO
15	NO	NO	NO	NO	NO	NO	NO
16	NO	NO	NO	NO	NO	NO	NO
17	NO	NO	NO	NO	NO	NO	NO
18	NO	NO	NO	NO	NO	NO	NO
19	NO	NO	NO	NO	NO	NO	NO
20	NO	NO	NO	NO	NO	NO	NO
21	NO	NO	NO	NO	NO	NO	NO
22	NO	NO	NO	NO	NO	NO	NO
23	NO	NO	NO	NO	NO	NO	NO
24	NO	NO	NO	NO	NO	NO	NO

	APP	APP										
TRM	SERV	SS	CARD	CLK	DBG	GTT	GWS	MEAS	MON	MPS	SEAS	SLAN
1	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
2	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
3	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
4	YES	YES	YES	YES	YES	NO	YES	YES	YES	YES	NO	NO
5	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
6	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
7	NO	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
8	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES
9	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES
10	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
11	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
12	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
13	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
14	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
15	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
16	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
17	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
18	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
19	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
20	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
21	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
22	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
23	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
24	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO

;

The following example shows the display of the terminal settings with the IP User Interface feature enabled and three IPSM cards equipped:

rtrv-trm

```

rlghncxa03w 09-01-11 16:02:08 EST EAGLE 40.1.0
TRM  TYPE      COMM      FC      TMOUT  MXINV  DURAL
1    VT320     9600    -7-E-1 SW    0       5     00:01:00
2    VT320     9600    -7-E-1 SW    0       5     00:01:00
3    VT320     9600    -7-E-1 SW    0       5     00:01:00
4    KSR       9600    -7-E-1 SW    0       5     00:01:00
5    NONE      9600    -7-E-1 SW   30      5     00:01:00
6    NONE      9600    -7-E-1 SW   30      5     00:01:00

```

7	NONE	9600	-7-E-1 SW	30	5	00:01:00
8	NONE	9600	-7-E-1 SW	30	5	00:01:00
9	VT320	9600	-7-E-1 SW	0	5	00:01:00
10	VT320	9600	-7-E-1 SW	0	5	00:01:00
11	VT320	9600	-7-E-1 SW	0	5	00:01:00
12	KSR	9600	-7-E-1 SW	0	5	00:01:00
13	NONE	9600	-7-E-1 SW	30	5	00:01:00
14	NONE	9600	-7-E-1 SW	30	5	00:01:00
15	NONE	9600	-7-E-1 SW	30	5	00:01:00
16	NONE	9600	-7-E-1 SW	30	5	00:01:00

TRM	TYPE	LOC	TMOUT	MXINV	DURAL
17	TELNET	1201	60	5	00:30:00
18	TELNET	1201	60	5	00:30:00
19	TELNET	1201	60	5	00:30:00
20	TELNET	1201	60	5	00:30:00
21	TELNET	1201	60	5	00:30:00
22	TELNET	1201	60	5	00:30:00
23	TELNET	1201	60	5	00:30:00
24	TELNET	1201	60	5	00:30:00
25	TELNET	1203	60	5	00:30:00
26	TELNET	1203	60	5	00:30:00
27	TELNET	1203	60	5	00:30:00
28	TELNET	1203	60	5	00:30:00
29	TELNET	1203	60	5	00:30:00
30	TELNET	1203	60	5	00:30:00
31	TELNET	1203	60	5	00:30:00
32	TELNET	1203	60	5	00:30:00
33	TELNET	1208	60	5	00:30:00
34	TELNET	1208	60	5	00:30:00
35	TELNET	1208	60	5	00:30:00
36	TELNET	1208	60	5	00:30:00
37	TELNET	1208	60	5	00:30:00
38	TELNET	1208	60	5	00:30:00
39	TELNET	1208	60	5	00:30:00
40	TELNET	1208	60	5	00:30:00

TRM	LOGINTMR (sec)	LOGOUTTMR (sec)	PNGTIMEINT (msec)	PNGFAILCNT
17	none	none	none	1
18	none	none	none	1
19	none	none	none	1
20	none	none	none	1
21	none	none	none	1
22	none	none	none	1
23	none	none	none	1
24	none	none	none	1
25	none	none	none	1
26	none	none	none	1
27	none	none	none	1
28	none	none	none	1
29	none	none	none	1
30	none	none	none	1
31	none	none	none	1
32	none	none	none	1
33	none	none	none	1
34	none	none	none	1
35	none	none	none	1
36	none	none	none	1
37	none	none	none	1
38	none	none	none	1
39	none	none	none	1
40	none	none	none	1

TRM	TRAF	LINK	SA	SYS	PU	DB	UIMRD
1	YES	YES	YES	YES	YES	YES	YES
2	YES	YES	YES	YES	YES	YES	YES
3	YES	YES	YES	YES	YES	YES	YES
4	YES	YES	YES	YES	NO	YES	YES
5	YES	YES	YES	YES	YES	YES	YES
6	NO	YES	YES	YES	YES	YES	YES
7	NO	YES	YES	YES	YES	YES	YES
8	YES	YES	YES	YES	YES	YES	YES
9	YES	YES	YES	YES	YES	YES	YES
10	NO	NO	NO	NO	NO	NO	NO
11	NO	NO	NO	NO	NO	NO	NO
12	NO	NO	NO	NO	NO	NO	NO
13	NO	NO	NO	NO	NO	NO	NO
14	NO	NO	NO	NO	NO	NO	NO
15	NO	NO	NO	NO	NO	NO	NO
16	NO	NO	NO	NO	NO	NO	NO
17	NO	NO	NO	NO	NO	NO	NO
18	NO	NO	NO	NO	NO	NO	NO
19	NO	NO	NO	NO	NO	NO	NO
20	NO	NO	NO	NO	NO	NO	NO
21	NO	NO	NO	NO	NO	NO	NO
22	NO	NO	NO	NO	NO	NO	NO
23	NO	NO	NO	NO	NO	NO	NO
24	NO	NO	NO	NO	NO	NO	NO
25	NO	NO	NO	NO	NO	NO	NO
26	NO	NO	NO	NO	NO	NO	NO
27	NO	NO	NO	NO	NO	NO	NO
28	NO	NO	NO	NO	NO	NO	NO
29	NO	NO	NO	NO	NO	NO	NO
30	NO	NO	NO	NO	NO	NO	NO
31	NO	NO	NO	NO	NO	NO	NO
32	NO	NO	NO	NO	NO	NO	NO
33	NO	NO	NO	NO	NO	NO	NO
34	NO	NO	NO	NO	NO	NO	NO
35	NO	NO	NO	NO	NO	NO	NO
36	NO	NO	NO	NO	NO	NO	NO
37	NO	NO	NO	NO	NO	NO	NO
38	NO	NO	NO	NO	NO	NO	NO
39	NO	NO	NO	NO	NO	NO	NO
40	NO	NO	NO	NO	NO	NO	NO

TRM	APP SERV	APP SS	CARD	CLK	DBG	GTT	GWS	MEAS	MON	MPS	SEAS	SLAN
1	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
2	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
3	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
4	YES	YES	YES	YES	YES	NO	YES	YES	YES	YES	NO	NO
5	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
6	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
7	NO	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
8	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES
9	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES
10	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
11	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
12	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
13	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
14	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
15	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
16	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
17	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
18	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
19	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
20	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
21	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO

```

22 NO NO NO NO NO NO NO NO NO NO NO NO NO
23 NO NO NO NO NO NO NO NO NO NO NO NO NO
24 NO NO NO NO NO NO NO NO NO NO NO NO NO
25 NO NO NO NO NO NO NO NO NO NO NO NO NO
26 NO NO NO NO NO NO NO NO NO NO NO NO NO
27 NO NO NO NO NO NO NO NO NO NO NO NO NO
28 NO NO NO NO NO NO NO NO NO NO NO NO NO
29 NO NO NO NO NO NO NO NO NO NO NO NO NO
30 NO NO NO NO NO NO NO NO NO NO NO NO NO
31 NO NO NO NO NO NO NO NO NO NO NO NO NO
32 NO NO NO NO NO NO NO NO NO NO NO NO NO
33 NO NO NO NO NO NO NO NO NO NO NO NO NO
34 NO NO NO NO NO NO NO NO NO NO NO NO NO
35 NO NO NO NO NO NO NO NO NO NO NO NO NO
36 NO NO NO NO NO NO NO NO NO NO NO NO NO
37 NO NO NO NO NO NO NO NO NO NO NO NO NO
38 NO NO NO NO NO NO NO NO NO NO NO NO NO
39 NO NO NO NO NO NO NO NO NO NO NO NO NO
40 NO NO NO NO NO NO NO NO NO NO NO NO NO

```

;

The following example shows the display of the terminal settings with the IP User Interface feature enabled and two IPSM cards equipped (the second IPSM card is removed):

rtrv-trm

```

rlghncxa03w 08-05-01 16:02:08 EST EAGLE 39.0.0
TRM TYPE COMM FC TMOUT MXINV DURAL
1 VT320 9600 -7-E-1 SW 0 5 00:01:00
2 VT320 9600 -7-E-1 SW 0 5 00:01:00
3 VT320 9600 -7-E-1 SW 0 5 00:01:00
4 KSR 9600 -7-E-1 SW 0 5 00:01:00
5 NONE 9600 -7-E-1 SW 30 5 00:01:00
6 NONE 9600 -7-E-1 SW 30 5 00:01:00
7 NONE 9600 -7-E-1 SW 30 5 00:01:00
8 NONE 9600 -7-E-1 SW 30 5 00:01:00
9 VT320 9600 -7-E-1 SW 0 5 00:01:00
10 VT320 9600 -7-E-1 SW 0 5 00:01:00
11 VT320 9600 -7-E-1 SW 0 5 00:01:00
12 KSR 9600 -7-E-1 SW 0 5 00:01:00
13 NONE 9600 -7-E-1 SW 30 5 00:01:00
14 NONE 9600 -7-E-1 SW 30 5 00:01:00
15 NONE 9600 -7-E-1 SW 30 5 00:01:00
16 NONE 9600 -7-E-1 SW 30 5 00:01:00

TRM TYPE LOC TMOUT MXINV DURAL
17 TELNET 1201 60 5 00:30:00
18 TELNET 1201 60 5 00:30:00
19 TELNET 1201 60 5 00:30:00
20 TELNET 1201 60 5 00:30:00
21 TELNET 1201 60 5 00:30:00
22 TELNET 1201 60 5 00:30:00
23 TELNET 1201 60 5 00:30:00
24 TELNET 1201 60 5 00:30:00

33 TELNET 1208 60 5 00:30:00
34 TELNET 1208 60 5 00:30:00
35 TELNET 1208 60 5 00:30:00
36 TELNET 1208 60 5 00:30:00
37 TELNET 1208 60 5 00:30:00
38 TELNET 1208 60 5 00:30:00
39 TELNET 1208 60 5 00:30:00
40 TELNET 1208 60 5 00:30:00

```

```

TRM LOGIN TMR LOGOUT TMR PNGTIMEINT PNGFAILCNT
(sec) (sec) (msec)

```

17	none	none	none	1
18	none	none	none	1
19	none	none	none	1
20	none	none	none	1
21	none	none	none	1
22	none	none	none	1
23	none	none	none	1
24	none	none	none	1
33	none	none	none	1
34	none	none	none	1
35	none	none	none	1
36	none	none	none	1
37	none	none	none	1
38	none	none	none	1
39	none	none	none	1
40	none	none	none	1

TRM	TRAF	LINK	SA	SYS	PU	DB	UIMRD
1	YES	YES	YES	YES	YES	YES	YES
2	YES	YES	YES	YES	YES	YES	YES
3	YES	YES	YES	YES	YES	YES	YES
4	YES	YES	YES	YES	NO	YES	YES
5	YES	YES	YES	YES	YES	YES	YES
6	NO	YES	YES	YES	YES	YES	YES
7	NO	YES	YES	YES	YES	YES	YES
8	YES	YES	YES	YES	YES	YES	YES
9	YES	YES	YES	YES	YES	YES	YES
10	NO	NO	NO	NO	NO	NO	NO
11	NO	NO	NO	NO	NO	NO	NO
12	NO	NO	NO	NO	NO	NO	NO
13	NO	NO	NO	NO	NO	NO	NO
14	NO	NO	NO	NO	NO	NO	NO
15	NO	NO	NO	NO	NO	NO	NO
16	NO	NO	NO	NO	NO	NO	NO
17	NO	NO	NO	NO	NO	NO	NO
18	NO	NO	NO	NO	NO	NO	NO
19	NO	NO	NO	NO	NO	NO	NO
20	NO	NO	NO	NO	NO	NO	NO
21	NO	NO	NO	NO	NO	NO	NO
22	NO	NO	NO	NO	NO	NO	NO
23	NO	NO	NO	NO	NO	NO	NO
24	NO	NO	NO	NO	NO	NO	NO
33	NO	NO	NO	NO	NO	NO	NO
34	NO	NO	NO	NO	NO	NO	NO
35	NO	NO	NO	NO	NO	NO	NO
36	NO	NO	NO	NO	NO	NO	NO
37	NO	NO	NO	NO	NO	NO	NO
38	NO	NO	NO	NO	NO	NO	NO
39	NO	NO	NO	NO	NO	NO	NO
40	NO	NO	NO	NO	NO	NO	NO

TRM	SERV	APP	SS	CARD	CLK	DBG	GTT	GWS	MEAS	MON	MPS	SEAS	SLAN
1	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
2	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
3	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
4	YES	YES	YES	YES	YES	YES	NO	YES	YES	YES	YES	NO	NO
5	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
6	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
7	NO	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
8	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES
9	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES
10	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
11	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO

```

12 NO NO NO NO NO NO NO NO NO NO NO NO NO
13 NO NO NO NO NO NO NO NO NO NO NO NO NO
14 NO NO NO NO NO NO NO NO NO NO NO NO NO
15 NO NO NO NO NO NO NO NO NO NO NO NO NO
16 NO NO NO NO NO NO NO NO NO NO NO NO NO
17 NO NO NO NO NO NO NO NO NO NO NO NO NO
18 NO NO NO NO NO NO NO NO NO NO NO NO NO
19 NO NO NO NO NO NO NO NO NO NO NO NO NO
20 NO NO NO NO NO NO NO NO NO NO NO NO NO
21 NO NO NO NO NO NO NO NO NO NO NO NO NO
22 NO NO NO NO NO NO NO NO NO NO NO NO NO
23 NO NO NO NO NO NO NO NO NO NO NO NO NO
24 NO NO NO NO NO NO NO NO NO NO NO NO NO

33 NO NO NO NO NO NO NO NO NO NO NO NO NO
34 NO NO NO NO NO NO NO NO NO NO NO NO NO
35 NO NO NO NO NO NO NO NO NO NO NO NO NO
36 NO NO NO NO NO NO NO NO NO NO NO NO NO
37 NO NO NO NO NO NO NO NO NO NO NO NO NO
38 NO NO NO NO NO NO NO NO NO NO NO NO NO
39 NO NO NO NO NO NO NO NO NO NO NO NO NO
40 NO NO NO NO NO NO NO NO NO NO NO NO NO

```

;

The following example shows the display of the terminal settings for Telnet terminal 30:

rtrv-trm:trm=30

```

rlghncxa03w 08-05-01 16:02:08 EST EAGLE 39.0.0
TRM TYPE LOC TMOUT MXINV DURAL
30 TELNET 1204 60 0 00:00:00

TRM LOGINTMR LOGOUTTMR PNGTIMEINT PNGFAILCNT
(sec) (sec) (msec)
30 none none none 1

TRM TRAF LINK SA SYS PU DB UIMRD
30 YES YES YES YES YES YES YES

APP APP
TRM SERV SS CARD CLK DBG GTT GWS MEAS MON MPS SEAS SLAN
30 YES YES YES YES YES YES YES YES YES YES YES NO NO

```

;

The following example shows the display of the terminal settings with the IP User Interface feature enabled, one IPSM card equipped, and the OA&M IP Security Enhancements feature turned off:

rtrv-trm

```

rlghncxa03w 09-01-11 16:02:08 EST EAGLE 40.1.0
TRM TYPE COMM FC TMOUT MXINV DURAL
1 VT320 9600 -7-E-1 SW 0 5 00:01:00
2 VT320 9600 -7-E-1 SW 0 5 00:01:00
3 VT320 9600 -7-E-1 SW 0 5 00:01:00
4 KSR 9600 -7-E-1 SW 0 5 00:01:00
5 NONE 9600 -7-E-1 SW 30 5 00:01:00
6 NONE 9600 -7-E-1 SW 30 5 00:01:00
7 NONE 9600 -7-E-1 SW 30 5 00:01:00
8 NONE 9600 -7-E-1 SW 30 5 00:01:00
9 VT320 9600 -7-E-1 SW 0 5 00:01:00
10 VT320 9600 -7-E-1 SW 0 5 00:01:00
11 VT320 9600 -7-E-1 SW 0 5 00:01:00
12 KSR 9600 -7-E-1 SW 0 5 00:01:00
13 NONE 9600 -7-E-1 SW 30 5 00:01:00
14 NONE 9600 -7-E-1 SW 30 5 00:01:00
15 NONE 9600 -7-E-1 SW 30 5 00:01:00
16 NONE 9600 -7-E-1 SW 30 5 00:01:00

```


TRM	TYPE	LOC	TMOUT	MXINV	DURAL	SECURE
17	TELNET	1201	60	5	00:30:00	no
18	TELNET	1201	60	5	00:30:00	no
19	TELNET	1201	60	5	00:30:00	no
20	TELNET	1201	60	5	00:30:00	no
21	TELNET	1201	60	5	00:30:00	no
22	TELNET	1201	60	5	00:30:00	no
23	TELNET	1201	60	5	00:30:00	no
24	TELNET	1201	60	5	00:30:00	no

TRM	LOGINTMR (sec)	LOGOUTTMR (sec)	PNGTIMEINT (msec)	PNGFAILCNT
17	none	none	none	1
18	none	none	none	1
19	none	none	none	1
20	none	none	none	1
21	none	none	none	1
22	none	none	none	1
23	none	none	none	1
24	none	none	none	1

TRM	TRAF	LINK	SA	SYS	PU	DB	UIMRD
1	YES	YES	YES	YES	YES	YES	YES
2	YES	YES	YES	YES	YES	YES	YES
3	YES	YES	YES	YES	YES	YES	YES
4	YES	YES	YES	YES	NO	YES	YES
5	YES	YES	YES	YES	YES	YES	YES
6	NO	YES	YES	YES	YES	YES	YES
7	NO	YES	YES	YES	YES	YES	YES
8	YES	YES	YES	YES	YES	YES	YES
9	YES	YES	YES	YES	YES	YES	YES
10	NO	NO	NO	NO	NO	NO	NO
11	NO	NO	NO	NO	NO	NO	NO
12	NO	NO	NO	NO	NO	NO	NO
13	NO	NO	NO	NO	NO	NO	NO
14	NO	NO	NO	NO	NO	NO	NO
15	NO	NO	NO	NO	NO	NO	NO
16	NO	NO	NO	NO	NO	NO	NO
17	NO	NO	NO	NO	NO	NO	NO
18	NO	NO	NO	NO	NO	NO	NO
19	NO	NO	NO	NO	NO	NO	NO
20	NO	NO	NO	NO	NO	NO	NO
21	NO	NO	NO	NO	NO	NO	NO
22	NO	NO	NO	NO	NO	NO	NO
23	NO	NO	NO	NO	NO	NO	NO
24	NO	NO	NO	NO	NO	NO	NO

TRM	APP SERV	APP SS	CARD	CLK	DBG	GTT	GWS	MEAS	MON	MPS	SEAS	SLAN
1	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
2	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
3	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
4	YES	YES	YES	YES	YES	NO	YES	YES	YES	YES	NO	NO
5	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
6	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
7	NO	YES	YES	YES	YES	YES	YES	YES	YES	YES	NO	NO
8	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES
9	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES
10	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
11	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
12	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
13	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
14	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO

15	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
16	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
17	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
18	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
19	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
20	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
21	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
22	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
23	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
24	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO

;

The following example displays terminal settings for a SEAS terminal.

rtrv-trm:trm=30

```
tekelecstp 07-12-16 22:37:01 IST EAGLE 37.5.0
TRM  TYPE      LOC              TMOUT MXINV DURAL      SECURE
30   SEAS      1102              30    5      00:01:00  no

TRM  TRAF LINK SA  SYS PU  DB  UIMRD
30   NO   NO   NO  NO  NO  NO  NO

APP  APP
TRM  SERV SS  CARD CLK DBG GTT GWS MEAS MON MPS SEAS SLAN
30   NO  NO  NO   NO  NO  NO  NO  NO  NO  NO  YES  NO
```

;

The following example shows the display of the terminal settings with the IP User Interface feature enabled, one IPSM card equipped, and the OA&M IP Security Enhancements feature turned on.

- Terminals 17,18 and 19 are of type TELNET.
- Terminals 20,21 and 22 are of type EMSALM.
- Terminal 23 is of type NONE.
- Terminal 24 is of type SEAS.

The *LOGINTMR* and *LOGOUTTMR* fields apply to terminals 17 - 19. The *PNGTIMEINT* and *PNG FAILCNT* fields apply to terminals 17 - 22. None of the fields apply to terminals 23 and 24.

rtrv-trm

```
tekelecstp 08-06-16 00:17:30 IST EAGLE 39.0.0
TRM  TYPE      COMM              FC      TMOUT MXINV DURAL
1    VT320     9600 -7-E-1 SW      30    5      00:01:00
2    VT320     9600 -7-E-1 SW      30    5      00:01:00
3    VT320     9600 -7-E-1 SW      30    5      00:01:00
4    VT320     9600 -7-E-1 SW      30    5      00:01:00
5    VT320     9600 -7-E-1 SW      30    5      00:01:00
6    VT320     9600 -7-E-1 SW      30    5      00:01:00
7    VT320     9600 -7-E-1 SW      30    5      00:01:00
8    VT320     9600 -7-E-1 SW      30    5      00:01:00
9    VT320     9600 -7-E-1 SW      30    5      00:01:00
10   VT320     9600 -7-E-1 SW      30    5      00:01:00
11   VT320     9600 -7-E-1 SW      30    5      00:01:00
12   VT320     9600 -7-E-1 SW      30    5      00:01:00
13   VT320     9600 -7-E-1 SW      30    5      00:01:00
14   VT320     9600 -7-E-1 SW      30    5      00:01:00
15   VT320     9600 -7-E-1 SW      30    5      00:01:00
16   VT320     9600 -7-E-1 SW      30    5      00:01:00

TRM  TYPE      LOC              TMOUT MXINV DURAL      SECURE
17   TELNET     1111              30    5      00:01:00  yes
18   TELNET     1111              30    5      00:01:00  yes
19   TELNET     1111              30    5      00:01:00  yes
```

20	EMSALM	1111	30	5	00:01:00	yes
21	EMSALM	1111	30	5	00:01:00	yes
22	EMSALM	1111	30	5	00:01:00	yes
23	NONE	1111	30	5	00:01:00	yes
24	SEAS	1111	30	5	00:01:00	yes

TRM	LOGINTMR (sec)	LOGOUTTMR (sec)	PNGTIMEINT (msec)	PNGFAILCNT
17	15	15	none	1
18	15	none	none	1
19	15	none	none	1
20	----	----	none	1
21	----	----	none	1
22	----	----	none	1

TRM	TRAF	LINK	SA	SYS	PU	DB	UIMRD
1	YES	YES	YES	YES	YES	YES	YES
2	YES	YES	YES	YES	YES	YES	YES
3	YES	YES	YES	YES	YES	YES	YES
4	YES	YES	YES	YES	YES	YES	YES
5	NO	NO	NO	NO	NO	NO	NO
6	NO	NO	NO	NO	NO	NO	NO
7	NO	NO	NO	NO	NO	NO	NO
8	NO	NO	NO	NO	NO	NO	NO
9	NO	NO	NO	NO	NO	NO	NO
10	NO	NO	NO	NO	NO	NO	NO
11	NO	NO	NO	NO	NO	NO	NO
12	NO	NO	NO	NO	NO	NO	NO
13	NO	NO	NO	NO	NO	NO	NO
14	NO	NO	NO	NO	NO	NO	NO
15	NO	NO	NO	NO	NO	NO	NO
16	NO	NO	NO	NO	NO	NO	NO
17	YES	YES	YES	YES	YES	YES	YES
18	YES	YES	YES	YES	YES	YES	YES
19	YES	YES	YES	YES	YES	YES	YES
20	YES	YES	YES	YES	YES	YES	YES
21	YES	YES	YES	YES	YES	YES	YES
22	YES	YES	YES	YES	YES	YES	YES
23	YES	YES	YES	YES	YES	YES	YES
24	YES	YES	YES	YES	YES	YES	YES

TRM	APP SERV	APP SS	CARD	CLK	DBG	GTT	GWS	MEAS	MON	MPS	SEAS	SLAN
1	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES
2	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES
3	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES
4	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES
5	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
6	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
7	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
8	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
9	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
10	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
11	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
12	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
13	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
14	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
15	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
16	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO
17	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES
18	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES
19	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES

```

20  YES  YES  YES  YES  YES  YES  YES  YES  YES  YES  YES  YES
21  YES  YES  YES  YES  YES  YES  YES  YES  YES  YES  YES  YES
22  YES  YES  YES  YES  YES  YES  YES  YES  YES  YES  YES  YES
23  YES  YES  YES  YES  YES  YES  YES  YES  YES  YES  YES  YES
24  YES  YES  YES  YES  YES  YES  YES  YES  YES  YES  YES  YES

```

;

The following example displays terminal settings for an EMSALM terminal on an IPSM card.

rtrv-trm:trm=22

```

tekelecstp 08-06-16 01:29:28 EST  EAGLE 39.0.0

TRM  TYPE      LOC              TMOUT MXINV  DURAL      SECURE
22   EMSALM    1111                30    5      00:01:00  yes

TRM  PNGTIMEINT PNGFAILCNT
      (msec)
22   none      1

TRM  TRAF LINK SA  SYS PU  DB  UIMRD
22   YES  YES  YES  YES  YES  YES  YES

      APP  APP
TRM  SERV SS  CARD CLK  DBG  GTT  GWS MEAS MON  MPS SEAS SLAN
22   YES  YES  YES  YES  YES  YES  YES  YES  YES  YES  YES  YES

```

;

The following example displays terminal settings for a NONE terminal on an IPSM card.

rtrv-trm:trm=23

```

tekelecstp 08-06-16 01:28:03 EST  EAGLE 39.0.0

TRM  TYPE      LOC              TMOUT MXINV  DURAL      SECURE
23   NONE      1111                30    5      00:01:00  yes

TRM  TRAF LINK SA  SYS PU  DB  UIMRD
23   YES  YES  YES  YES  YES  YES  YES

      APP  APP
TRM  SERV SS  CARD CLK  DBG  GTT  GWS MEAS MON  MPS SEAS SLAN
23   YES  YES  YES  YES  YES  YES  YES  YES  YES  YES  YES  YES

```

;

Legend

Part one of the **rtrv-trm** report contains these fields:

TRM—The TDM terminal port number associated with the output device.

TYPE—The type of output device that is connected.

COMM—This field is composed of four communication attributes in the format *baud-dbts-prty-sb*. The parts are:

BAUD—The serial port baud rate of the output device

DBTS—The number of data bits used by the output device

PRTY—The parity of the output device

SB—The number of stop bits used in communications with the output device

FC—The type of protocol used between the system and the output devices.

TMOUT—Shows the maximum amount of time (in minutes) that a login session can remain idle.

MXINV—Shows the login/unlock failure threshold.

DURAL—Shows the length of time (in seconds, minutes, and hours) the terminal is disabled after each failed login/unlock attempt in excess of the threshold configured with the **mxinv** parameter.

SECURE—Indicates whether the OA&M IP Security Enhancements feature is turned on or off for Telnet terminals.

Part two of the **rtrv-trm** report contains these fields:

LOGINTMR—Shows the maximum time for logging on to the telnet terminal after selecting the terminal.

LOGOUTTMR—Shows the maximum time the telnet session remains open after the user manually or automatically logs out.

PNGTIMEINT—Shows the time period after which IPSM card initiates new ping cycle.

PNGFAILCNT—Shows the number of consecutive ping fails waited before dropping the telnet connection.

Part three of the **rtrv-trm** report contains these fields:

TRM—The TDM terminal associated with the output device.

TRAF—Shows whether traffic-related unsolicited messages are received by the output device.

LINK—Shows whether link-related unsolicited messages are received by the output device.

SA—Shows whether security administration-related unsolicited messages are received by the output device.

SYS—Shows whether system maintenance-related unsolicited messages are received by the output device.

PU—Shows whether program update-related unsolicited messages are received by the output device.

DB—Shows whether database-related unsolicited messages are received by the output device.

UIMRD—Shows whether Unsolicited Information Messages (UIMs) specific to the group are received by the output device.

Part four of the **rtrv-trm** report contains these fields:

APP SERV—Shows whether Application Server unsolicited messages are received by the output device.

APP SS—Shows whether Application Subsystem unsolicited messages are received by the output device.

CARD—Shows whether Card unsolicited messages are received by the output device.

CLK—Shows whether Clock unsolicited messages are received by the output device.

DBG—Shows whether Debug unsolicited messages are received by the output device.

GTT—Shows whether GTT unsolicited messages are received by the output device.

GWS—Shows whether GWS unsolicited messages are received by the output device.

MEAS—Shows whether Measurements Maintenance unsolicited messages are received by the output device.

MON—Shows whether Monitor unsolicited messages are received by the output device.

MPS—Shows whether MPS unsolicited messages are received by the output device.

SEAS—Shows whether SEAS Maintenance unsolicited messages are received by the output device.

SLAN—Shows whether STP LAN unsolicited messages are received by the output device.

rtrv-tt

Retrieve Translation Type

Use this command to show the translation types that are currently defined in the system database for global title translations.

NOTE: If the EGTT (Enhanced Global Title Translation) feature is turned on in your system, the system will no longer accept GTT (Global Title Translation) and TT (Translation Type) commands. Refer to the new command sets that replace the GTT and TT commands: GTT Selector commands (ent/chg/dlt/rtrv-gttset), GTT Set commands (ent/dlt/rtrv-gttset), and GTA commands (ent/chg/dlt/rtrv-gta).

Keyword: rtrv-tt

Related Commands: dlt-tt, ent-tt

Command Class: Database Administration

Parameters

:alias= (optional)

The alias of the global title translation type

Range: 0-255

Default: Display all

:ttn= (optional)

Translation type name.

Range: ayyyyyyyy

1 alphabetic character followed by up to 7 alphanumeric characters

Default: Display all

:type/typea/typei/typen/typen24= (optional)

A translation type numeric value may be entered as ANSI type (**type** or **typea**) and also as an ITU type (**typei** or **typen**). However, they are separate entities.

Range: 0-255

Default: No translation type is specified

Example

```
rtrv-tt
```

```
rtrv-tt:type=230
```

```
rtrv-tt:ttn=lidb
```

```
rtrv-tt:type=230:ttn=lidb
```

```
rtrv-tt:type=230:ttn=lidb:alias=012
```

Dependencies

This command is not valid when the EGTT feature is turned on.

Asterisk (*) parameter values are not allowed for this command.

The translation type must exist in the translation table. If either or both parameters are given, they must be the same as the values entered with the **ent-tt** command. If the translation name is specified, it must be associated with a translation type.

If a translation type is specified, it must already exist in the database for the network type and cannot be an alias.

If both translation type and translation type name are specified, the translation type name must correspond to the specified translation type.

If an alias is specified with a translation type and/or translation type name, the alias must exist in the database for the specified network type, and it cannot be a translation type.

If an alias is specified without a translation type or translation type name, the alias must exist in the database for at least one of the network types. If it exists, the entries and the mapped translation type entries that exist in the database for all network types are displayed.

Notes

If a translation type, translation type name, or both, are specified, the translation type entry and all aliases mapped to that translation type are displayed.

Output

rtrv-tt

tekelecstp 03-05-02 09:03:09 EST EAGLE 31.0.0

TYPEA TTN NDGT

130 lidb 5

180 ansi180 9

ALIAS TYPEA

1 130

7 130

10 180

TYPEI TTN NDGT

105 intlabc 15

119 intl119 18

ALIAS TYPEI

29 119

33 105

TYPEN TTN NDGT

204 natlxyz 8

210 natl210 21

ALIAS TYPEN

7 204

TYPEN24 TTN NDGT

;

rtrv-tt:type=130:ttn=LIDB

tekelecstp 03-11-02 09:06:38 EST EAGLE 30.0.0

TYPEA TTN NDGT

130 lidb 5

ALIAS TYPEA

1 130

7 130

;

rtrv-tt:ttn=intlabc

tekelecstp 03-11-02 09:19:34 EST EAGLE 30.0.0

TYPEI TTN NDGT

105 intlabc 15

ALIAS TYPEI

33 105

;

rtrv-tt:alias=7

tekelecstp 03-11-02 09:19:34 EST EAGLE 30.0.0

ALIAS TYPEA

7 130

ALIAS TYPEN

7 204

;

rtrv-tt

```

tekelecstp 03-05-02 09:19:34 EST EAGLE 31.0.0
TYPEA      TTN      NDGT

TYPEI      TTN      NDGT

TYPEN      TTN      NDGT

TYPEN24    TTN      NDGT
2          - - - - - 6
4          first    6

```

;

Legend

TYPEA/TYPEI/TYPEN/TYPEN24—The global title translation type.

TTN—The name of the global title translation type.

NDGT—The number of digits in the global title translation type

ALIAS—The alias global title translation type.

rtrv-ttmap**Display Translation Type Mapping**

Use this command to display a mapped SS7 message translation type (TT) for a given gateway linkset name. This command can be used to display the identification of the type of allowed global title translation in the SS7 message before and after translation type mapping, see which linkset the mapping applies to, and see whether the mapping applies to incoming or outgoing messages.

Keyword: **rtrv-ttmap**

Related Commands: **chg-ttmap, dlt-ttmap, ent-ttmap**

Command Class: Database Administration

Parameters

:ett= (optional)

Translation type before mapping. The identification of the type of allowed global title translation in the SS7 message *prior to* translation type mapping. This attribute is the decimal representation of the 1-octet binary field used by the SS7 protocol to identify the translation type.

Range: **0-255**

Default: Display all types allowed

:io= (optional)

Incoming or outgoing. The system uses this parameter to indicate whether the translation type mapping data provisioned for the gateway linkset is for SS7 messages *received* or *sent* on the linkset.

Range: **i, o**

i— incoming

o— outgoing

Default: Both incoming and outgoing

:lsn= (optional)

Linkset name

Range: **ayyyyyyyyy**

1 alphabetic character followed by up to 9 alphanumeric characters

Default: Display all

Example

```
rtrv-ttmap
rtrv-ttmap:lsn=nc001
rtrv-ttmap:lsn=nc001:io=i:ett=128
rtrv-ttmap:io=i:ett=128
rtrv-ttmap:ett=128
rtrv-ttmap:ett=40
```

Dependencies

The linkset must be defined.

The memory space accounting report (MSAR) is not produced when the **io** parameter, **ett** parameter, or both are specified, because the statistics presented may be misleading.

Notes

The order of display is by linkset index + I/O + ETT.

Output

rtrv-ttmap

```
rlghncxa03w 03-11-22 11:39:44 EST EAGLE 30.0.0
LSN          IO   ETT  MTT
nc001        I    047  032
nc001        I    128  055
nc001        I    238  128
nc001        I    254  016
nc001        O    016  254
nc001        O    128  238
```

TTMAP table for nc001 is (6 of 64) 9% full

```
nc002        I    128  055
nc002        I    238  128
nc002        O    128  238
```

TTMAP table for nc002 is (3 of 64) 5% full

```
lsi1         I    001  142
lsi1         O    142  001
```

TTMAP table for lsi1 is (2 of 64) 3% full

```
lsi2         I    238  128
```

TTMAP table for lsi2 is (1 of 64) 2% full

```
lsi3         I    254  016
```

TTMAP table for lsi3 is (1 of 64) 2% full

```
lsn1         O    016  254
```

```
lsn1         O    128  238
```

TTMAP table for lsn1 is (2 of 64) 3% full

```
lsn2         I    128  055
```

```
lsn2         I    238  128
```

```
lsn2         O    128  238
```

TTMAP table for lsn2 is (3 of 64) 5% full

;

rtrv-ttmap:lsn=nc001

```
rlghncxa03w 03-11-22 12:02:36 EST EAGLE 30.0.0
LSN          IO   ETT  MTT
nc001        I    047  032
nc001        I    128  055
nc001        I    238  128
nc001        I    254  016
nc001        O    016  254
nc001        O    128  238
```

TTMAP table for nc001 is (6 of 64) 9% full

;

rtrv-ttmap:lsn=nc001:io=i:ett=128

```
rlghncxa03w 03-11-22 12:04:21 EST EAGLE 30.0.0
LSN          IO   ETT  MTT
nc001        I    128  055
```

;

rtrv-ttmap:io=i:ett=128

```
rlghncxa03w 03-11-22 12:06:13 EST EAGLE 30.0.0
LSN          IO   ETT  MTT
nc001        I    128  055
nc002        I    128  055
lsn2         I    128  055
```

;

rtrv-ttmap:ett=128

```

rlghncxa03w 03-11-22 12:41:21 EST EAGLE 30.0.0
LSN          IO   ETT  MTT
nc001        I    128  055
nc001        0    128  238
nc002        I    128  055
nc002        0    128  238
lsn1         0    128  238
lsn2         I    128  055
lsn2         0    128  238
;

```

rtrv-ttmap:ett=40

```

rlghncxa03w 03-11-07 16:12:38 EST EAGLE 30.0.0
LSN          IO   ETT  MTT
No mapped translation types defined for ETT specified.
;

```

Legend

LSN—Linkset name

IO—Incoming or outgoing linkset

ETT—Translation type before mapping

MTT—Mapped translation type

rtrv-ttr-msg**Retrieve Configured TTR messages**

Use this command to display the configured Triggerless TCAP Relay message parameter values.

Keyword: **rtrv-ttr-msg**

Related Commands: **chg-ttr-msg**, **tst-msg**

Command Class: Database Administration

Parameters

:msgn= (mandatory)

Message number. This parameter specifies the number of the TTR message.

Range: **1-10**

Default: The values for all TTR messages are displayed.

Example

```
rtrv-ttr-msg:msgn=1
```

Dependencies

The Prepaid IDP Query Relay feature must be enabled before this command is entered.

Output

```

rtrv-ttr-msg:msgn=1
tekelecstp 08-05-05 17:36:25 EST EAGLE 39.0.0

MSG = 1          TCAP_TYPE = CAP          ACTIVE = YES
SK = 00006b00    BCSM = 02

CGPA_GT = 2
CGPA_GT_NAI = 4    CGPA = 0123456789abcde

CDPA_GT = 2
CDPA_GT_NAI = 8    CDPA = 12457896

CGPN_NAI = 4       CGPN = 01234567890abcdef
CDPN_NAI = 9       CDPN = 8764321

LAC = abcdef

```

rtrv-ttropts**Retrieve TTR Options**

Use this command to display all of the Triggerless TCAP Relay options that are configured in the database.

Keyword: rtrv-ttropts

Related Commands: chg-ttropts

Command Class: Database Administration

Parameters

This command has no parameters.

Example

```
rtrv-ttropts
```

Dependencies

The Prepaid IDP Query Relay feature must be enabled before this command can be entered.

Notes

None

Output

```

rtrv-ttropts
tekelecstp 08-05-05 13:34:22 EST EAGLE 39.0.0

TTR OPTIONS
-----
CDPN DETAILS          CGPN DETAILS
NPTYPE  rnsp          CGNPTYPE  rnsp
SNAI    incoming     CGSNAI    incoming

CGPAACCK  NONINTL
DLMA      1234567890123456
DLMB      1234567890abcdef
DLMC      1234567890abcdef
DFLTRN    1234567890abcde
;

```

rtrv-uaps**Retrieve UA Parameter Set**

Use this command to retrieve one UA parameter set or all UA parameter sets.

Keyword: rtrv-uaps

Related Commands: chg-uaps

Command Class: Database Administration

Parameters

:set= (optional)

This parameter specifies the UA parameter set to be displayed.

Range: 1-10

Default: Display all

Example

rtrv-uaps

rtrv-uaps:set=1

Dependencies

None

Notes

This command can be canceled using the F9 function key or the **canc-cmd** command. See **canc-cmd** for more information.

Output

rtrv-uaps:set=1

eagle10213 08-04-17 14:01:00 EST EAGLE 38.0.0

SET	TIMER	TVALUE	PARM	PVALUE
1	1	0	1	3
1	2	3000	2	0
1	3	10000	3	0
1	4	5000	4	0
1	5	0	5	0
1	6	0	6	0
1	7	0	7	0
1	8	0	8	0
1	9	0	9	0
1	10	0	10	0

TIMER 2: False IP Connection Congestion Timer, max time an association can be congested before failing due to false congestion. SS7IPGW and IPGWI applications enforce 0-30000(ms). Not supported on IPSP application.

TVALUE : Valid range = 32-bits

TIMER 3: UA HeartBeat Period Timer T(beat), time (ms) between sending of BEAT msgs by NE. IPSP, SS7IPGW and IPGWI applications enforce 100(ms)-60000(ms).

TVALUE : Valid range = 32-bits

TIMER 4: UA HeartBeat Received Timer T(beat ack), timeout period for response BEAT ACK msgs by NE. IPSP, SS7IPGW and IPGWI applications enforce 100(ms)-10000(ms).

TVALUE : Valid range = 32-bits

PARM 1: ASP SNM options. Each bit is used as an enabled/disabled flag for a particular ASP SNM option. Not supported on IPSP application.

PVALUE : Valid range = 32-bits

BIT	BIT VALUE
0=Broadcast	0=Disabled , 1=Enabled
1=Response Method	0=Disabled , 1=Enabled
2-5=Reserved	
6=Broadcast Congestion Status Change	0=Disabled , 1=Enabled
7-31=Reserved	

PARM 2: ASP/AS Notification options. Each bit is used as an enabled/disabled flag for a particular ASP/AS Notification option. Not supported on IPSP application.

PVALUE : Valid range = 32-bits

BIT	BIT VALUE
0=ASP Active Notifications	0=Disabled , 1=Enabled
1=ASP Inactive Notifications	0=Disabled , 1=Enabled
2=ASP AS State Query	0=Disabled , 1=Enabled
3-31=Reserved	

PARM 3: UA Serviceability Options. Each bit is used as an enabled/disabled flag for a particular UA Serviceability option. Supported on IPSP, SS7IPGW, and IPGWI applications.

PVALUE : Valid range = 32-bits

BIT	BIT VALUE
0=UA Heartbeats	0=Disabled , 1=Enabled
1-31=Reserved	

rtrv-uim-acthresh**Retrieve Activity Level Threshold for STP UIM
Activity Reporting**

Use this command to query the UIM number, limit, and interval period parameters that are used to report the thresholding of UIM messages.

Keyword: **rtrv-uim-acthresh**

Related Commands: **dlt-uim-acthresh**, **set-uim-acthresh**

Command Class: Database Administration

Parameters

:uimn= (optional)

The UIM number.

Range: **1000-1499**

Default: Display all

Example

Display UIM number 1333 threshold:

rtrv-uim-acthresh:uimn=1333

Display the threshold for all UIMs that have been set:

rtrv-uim-acthresh

Dependencies

If specified, the **uimn** parameter value must be four numeric characters in the range **1000–1499**.

The **uimn** parameter value, if specified, must exist in the system Trouble Text Table.

Notes

None

Output

rtrv-uim-acthresh:uimn=1333

```
rlghncxa03w 03-11-01 08:50:12 EST EAGLE 31.3.0
UIMN      LIMIT      INTRVL
1333      100         5
The UIM Threshold Table is (1 of 499) 1% full.
```

rtrv-uim-acthresh

```
rlghncxa03w 03-11-01 08:50:12 EST EAGLE 31.3.0
UIMN      LIMIT      INTRVL
1333      100         5
1444      200        15
1155      50         30
The UIM Threshold Table is (3 of 499) 1% full.
```

rtrv-user**Retrieve User**

Use this command to show the information about the user currently logged on to the terminal from which this command was entered.

Keyword: **rtrv-user**

Related Commands: **act-user**, **chg-pid**, **chg-user**, **dact-user**, **dlt-user**, **ent-user**, **login**, **logout**, **rept-stat-user**, **rtrv-secu-user**

Command Class: Basic

Parameters

This command has no parameters.

Example

rtrv-user

Dependencies

This command cannot be entered from a SEAS terminal, because a SEAS terminal has no user ID associated with it.

Notes

The password is not shown.

This command shows the command class privileges for the user logged onto the system. No other users are shown.

All users have access to this command.

Output

The following example shows the display when the Command Class Management feature is turned on:

rtrv-user

```
rlghncxca03w 09-01-07 09:50:17 EST EAGLE 40.1.0
user id      age page uout rev link sa sys pu db dbg
manny       36 60 60 NO YES YES YES YES YES YES YES

u01 u02 u03 u04 u05 u06 u07 u08 u09 u10 u11 u12 u13 u14 u15 u16
NO NO NO NO YES YES YES YES YES YES YES YES YES YES YES YES

u17 u18 u19 u20 u21 u22 u23 u24 u25 u26 u27 u28 u29 u30 u31 u32
YES YES YES YES YES YES YES YES YES YES YES NO NO NO NO YES
```

;

The following example shows the display when the Command Class Management feature is not turned on:

rtrv-user

```
rlghncxca03w 09-01-07 09:50:17 EST EAGLE 40.1.0
USER ID      LINK SA SYS PU DB DBG
eagle        YES YES YES YES YES YES

USER ID      AGE PAGE UOUT REV
eagle        750 0 0 NO
```

;

Legend

USER ID—The name of the user.

AGE—Shows the current age, in days, of the password associated with this user ID. If the password age is greater than 999 days, the value **999** is displayed.

PAGE—Shows the maximum password age established for this user ID. When AGE becomes greater than PAGE, the system forces the user to change the password at the next login. An asterisk (*) displayed after the value indicates that the system-wide default page parameter value, as configured on the **chg-secu-dflt** command, is in effect for the user ID.

UOUT—Shows the user ID aging interval, in days. If the user ID is not used (that is, no successful login) for longer than this interval, the system does not allow a login. An asterisk (*) displayed after the value indicates that the system-wide default uout parameter value, as configured on the **chg-secu-dflt** command, is in effect for the user ID.

REV—Shows whether the user ID is denied login (revoked). **YES** indicates that the user ID is revoked, **NO** indicates that the user ID is not revoked.

LINK—Shows whether the user has access to all commands in the Link Maintenance command class.

SA—Shows whether the user has access to all commands in the Security Administration command class.

SYS—Shows whether the user has access to all commands in the System Maintenance command class.

PU—Shows whether the user has access to all commands in the Program Update command class.

DB—Shows whether the user has access to all commands in the Database Administration command class.

DBG—Shows whether the user has access to all commands in the Debug command class.

If the Command Class Management feature is enabled and turned on, the following fields are displayed:

U01 - U32—Default configurable command class names. If user-defined names have been provisioned, they will appear instead of the default names.

If the LNP feature is turned on, the following field is displayed:

LNPBAS—Shows whether the user has access to all commands in the LNP Basic command class.

rtrv-vendid

Retrieve Vendor ID

Use this command to retrieve a list of Vendor ID entries from the VENDID table, for the GSM MAP SRI Redirect to Serving HLR feature.

Keyword: rtrv-vendid

Related Commands: dlt-vendid,

Command Class: Database Administration

Parameters

:vendnum= (optional)

Vendor Number

Range: 1-3

Example

rtrv-vendid

rtrv-vendid:vendnum=1

Dependencies

The GSM MAP SRI Redirect feature must be enabled before this command can be entered.

Notes

None.

Output

When the command is entered with no parameter, the Vendor Types are listed in numerical order. The Vendor Numbers for each Vendor Type are listed in numerical order, followed by the Vendor ID for each Vendor Number.

rtrv-vendid

```
tekelecstp 04-09-21 16:11:21 EST EAGLE 31.11.0
Vendor      Vendor      Vendor
Type        Number      ID
-----
1           1           123123123456789
1           1           1234567890abcde
1           2           112233445566778
1           2           214365870912543
2           3           098765432112345
2           3           098767890143251
```

VENDID table is (5 of 200) 3% full

;

When a Vendor number is specified, the Vendor Type and Vendor IDs for the specified Vendor number are listed in numerical order. The table capacity line shows the total number of entries in use, not just the number of entries displayed.

rtrv-vendid:vendnum=2

```
tekelecstp 04-09-21 16:13:54 EST EAGLE 31.11.0
Vendor      Vendor      Vendor
Type        Number      ID
-----
1           2           112233445566778
1           2           214365870912543
```

VENDID table is (5 of 200) 3% full

;

rtrv-vflx-cd**Retrieve V-Flex Call Decision Entry**

Use this command to retrieve call decision information.

NOTE: The V-Flex feature must be enabled before this command can be entered.

Keyword: rtrv-vflx-cd

Related Commands: chg-vflx-cd, dlt-vflx-cd, ent-vflx-cd

Command Class: Database Administration

Parameters

:cdn= (optional)

Call decision name. This parameter specifies the name of the call decision entry.

Range: ayy

1 alphabetic character followed by 3 alphanumeric characters

:vmdig= (optional)

Voice mail number or voice mail prefix digits. This parameter specifies a voice mail number or voice mail digits that is associated with the call decision entry.

Range: 1-15 digits

Valid digits are **0-9, A-F, a-f**.

Example

The following command retrieves all entries from the Call Decision table.

rtrv-vflx-cd

The following command retrieves a specific Call Decision entry.

rtrv-vflx-cd:cdn=cdn1

The following command retrieves all call decision entries with a specified voice mail number or voice mail prefix digits.

rtrv-vflx-cd:vmdig=123456789abcd2

Dependencies

The **cdn** and **vmdig** parameters cannot be specified together in the command.

The value specified for the **cdn** parameter cannot be a reserved word, such as **none**.

The value specified for the **cdn** parameter must already exist in the Call Decision table.

The V-Flex feature must be enabled before this command can be entered.

Notes

This command can be cancelled using the **F9** function key or the **canc-cmd** command.

Output

rtrv-vflx-cd

tekelecstp 08-05-01 09:36:55 EST EAGLE 39.0.0

RDI	DN Status	BCAP	VM Number/Prefix	VMRN Index	CD Name
---	-----	----	-----	-----	-----
DIR	NFND	0	1	9	c100
DIR	NFND	0	12	9	c101
DIR	NFND	0	123	9	c102
DIR	NFND	0	1234	9	c103
DIR	FND	0	1	9	c200
DIR	*	1	123	9	c201
DIR	*	2	2345678	9	c203
DIR	*	3	456789a	9	c204
DIR	*	4	56789ab	9	c205
REDIR	*	1	123456789abcdef	9	c202

VFLEX Call Decision table is (10 of 4950) 1% full.

;

rtrv-vflx-cd:cdn=c100

tekelecstp 08-05-31 17:04:25 EST EAGLE 39.0.0

RDI	DN Status	BCAP	VM Number/Prefix	VMRN Index	CD Name
---	-----	----	-----	-----	-----
DIR	NFND	0	1	9	c100

VFLEX Call Decision table is (7 of 4950) 1% full.

;

The following output example illustrates how all Call Decision Table entries whose digits match the starting digits of the specified **vmdig** will be displayed.

rtrv-vflx-cd:vmdig=123456789abcdef

tekelecstp 08-05-31 17:05:49 EST EAGLE 39.0.0

RDI	DN Status	BCAP	VM Number/Prefix	VMRN Index	CD Name
---	-----	----	-----	-----	-----
DIR	NFND	0	1	9	c100
DIR	NFND	0	12	9	c101
DIR	NFND	0	123	9	c102
DIR	NFND	0	1234	9	c103
DIR	FND	0	1	9	c200
DIR	*	1	123	9	c201
REDIR	*	1	123456789abcdef	9	c202

VFLEX Call Decision table is (7 of 4950) 1% full.

;

Legend

RDI—The Redirection Indicator - whether the call has been redirected or not (0 - Not redirected: VM retrieval or direct dial VM deposit, 1 - Redirected: VM deposit).

DN STATUS—The status of the DN lookup in the RTDB - found in the RTDB, not found in the RTDB, don't care whether found in the RTDB or not.

BCAP—The INAP/CAP Bearer Capabilities.

VM NUMBER/PREFIX—The Voice Mail Numer or Voice Mail Prefix associated with a Call Decision entry.

VMRN INDEX—Index into the list of Routing Numbers associated with a specific VMSID entry.

CD NAME—The name of the Call Decision entry.

rtrv-vflx-opts

Retrieve V-Flex Options

Use this command to retrieve the data that is used for number conditioning.

NOTE: The V-Flex feature must be enabled before this command can be entered.

Keyword: rtrv-vflx-opts

Related Commands: chg-vflx-opts

Command Class: Database Administration

Parameters

This command has no parameters.

Example

The following command displays V-Flex Options Table data.

rtrv-vflx-opts

Dependencies

The V-Flex feature must be enabled before this command can be specified.

Notes

If no DRANAI value or DRANAIV value has been provisioned, the command output displays the DRANAIV default value of 0.

If the DRANAIV value has a corresponding DRANAI mnemonic string mapped to it, then that mnemonic string is displayed, otherwise the provisioned numeric value is displayed. For DRANAI and DRANAIV mapping refer to in the **chg-vflx-opts** command.

If no DRANP value or DRANPV value has been provisioned, the command output displays the DRANPV default value of 0.

If the DRANPV value has a corresponding DRANP mnemonic string mapped to it, then that mnemonic string is displayed, otherwise the provisioned numeric value is displayed. For DRANP and DRANPV mapping refer to in the **chg-vflx-opts** command.

Output

The following example shows output with default V-Flex Options.

rtrv-vflx-opts

```
tekelecstp 08-05-04 07:53:46 EST EAGLE 39.0.0
```

VFLEX OPTIONS

```
-----
DRANPV      = 0
DRANAIV     = 0
DRA         = RN
NEQUERYONLY = OFF
NETYPE      = VMSID
```

```
;
```

The following example shows output with some V-Flex Options provisioned.

rtrv-vflx-opts

```
tekelecstp 08-05-04 07:55:30 EST EAGLE 39.0.0
```

VFLEX OPTIONS

```
-----
DRANP       = E164
DRANAI      = SUB
DRA         = RN
NEQUERYONLY = ON
NETYPE      = GRN
```

```
;
```

Legend

DRANP—The numbering plan for the destination routing address.

DRANAI—The nature of address indicator for the destination routing address.

DRA—The format of the destination routing address.

NEQUERYONLY—The Network Entity Query Only option.

NETYPE—The Network Entity Type for the NEQUERYONLY option.

rtrv-vflx-rn**Retrieve V-Flex Routing Number**

Use this command to retrieve voice mail routing numbers and routing number names and to view the associated reference count.

NOTE: The V-Flex feature must be enabled before this command can be entered.

Keyword: rtrv-vflx-rn

Related Commands: chg-vflx-rn, dlt-vflx-rn, ent-vflx-rn

Command Class: Database Administration

Parameters

:refcnt= (optional)

Reference count. This parameter specifies whether to display the reference count.

Range: yes

yes — display the reference count

:rn= (optional)

Routing number. This parameter specifies a voice mail routing number.

Range: 1-15 digits

Valid digits are **0-9, A-F, a-f**.

:rnname= (optional)

Routing number name. This parameter specifies the name associated with a voice mail routing number.

Range: *ayyyyyyy*

1 alphabetic character followed by 7 alphanumeric characters.

Example

```
rtrv-vflx-rn:rnname=rn01
```

```
rtrv-vflx-rn:rn=123456789ABC
```

```
rtrv-vflx-rn
```

```
rtrv-vflx-rn:rnname=rn01:refcnt=yes
```

```
rtrv-vflx-rn:rn=123456789ABC:refcnt=yes
```

Dependencies

The V-Flex feature must be enabled before this command can be entered.

The value specified for the **rnname** parameter must already exist in the Routing Number table.

The **rn** and **rnname** parameters cannot be specified together in the command.

The value specified for the **rnname** parameter cannot be a reserved word, such as **none**.

The value specified for the **rn** parameter must already exist in the Routing Number table.

Notes

This command can be cancelled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

Output

The following command displays information for specified routing number name.

rtrv-vflx-rn:rnname=rn01

tekelecstp 08-05-29 15:07:01 EST EAGLE 39.0.0

RN Name	Routing Number
-----	-----
rn01	123456789abcdef

VFLEX Routing Number table is (2 of 10000) 1% full.

;

The following command displays information for a specified routing number.

rtrv-vflx-rn:rn=123456789ABCD

tekelecstp 08-05-29 15:07:01 EST EAGLE 39.0.0

RN Name	Routing Number
-----	-----
rn02	123456789abcd

VFLEX Routing Number table is (2 of 10000) 1% full.

;

The following command displays all of the entries in the Routing Number table.

rtrv-vflx-rn

tekelecstp 08-05-29 15:07:01 EST EAGLE 39.0.0

RN Name	Routing Number
-----	-----
rn01	123456789abcd01
rn02	123456789abcd02
rn03	123456789abcd03
rn04	123456789abcd04
rn05	123456789abcd05
rn06	123456789abcd06
rn07	123456789abcd07
rn08	123456789abcd08
rn09	123456789abcd09
rn10	123456789abcd0A
rn11	123456789abcd0B
rn12	123456789abcd0C
rn13	123456789abcd0D
rn14	123456789abcd0E
rn15	123456789abcd0F
.	.
.	.
.	.
.	.
rn10000	100000000abcdef

VFLEX Routing Number table is (10000 of 10000) 100% full.

;

The following command displays information, including the reference count, for a specified routing number name.

rtrv-vflx-rn:rnname=rn01:refcnt=yes

tekelecstp 08-05-29 15:07:01 EST EAGLE 39.0.0

RN Name	Routing Number	Ref Count
-----	-----	-----
rn01	123456789abcdef	2

VFLEX Routing Number table is (2 of 10000) 1% full.

;

The following command displays information, including the reference count, for a specified routing number.

rtrv-vflx-rn:rn=123456789ABC:refcnt=yes

tekelecstp 08-05-29 15:07:01 EST EAGLE 39.0.0

RN Name	Routing Number	Ref Count
-----	-----	-----
rn02	123456789abc	3

VFLEX Routing Number table is (2 of 10000) 1% full.

;

Legend

- **RN Name**—Voice mail routing number name
- **Routing Number**—Voice mail routing number digits
- **Ref Count**—Number of VMSID table entries that refer to an routing number entry

rtrv-vflx-vmsid

Retrieve V-Flex VMSID Entry

Use this command to retrieve information for voice mail server IDs.

NOTE: The V-Flex feature must be enabled before this command can be entered.

Keyword: rtrv-vflx-vmsid

Related Commands: chg-vflx-vmsid, dlt-vflx-vmsid, ent-vflx-vmsid

Command Class: Database Administration

Parameters

:id= (optional)

This parameter specifies the voice mail server ID.

Range: 1-15 digits, **dflt**

Valid digits are **0-9, A-F, a-f**.

dflt—a default set of routing numbers that is used when a query is received with an invalid MSISDN or an MSISDN that is not found in the RTDB

:rname= (optional)

This parameter specifies a routing number name associated with the voice mail server ID.

Range: ayyyyyy

1 alphabetic character followed by up to 7 alphanumeric characters.

Example

rtrv-vflx-vmsid

rtrv-vflx-vmsid:id=123456789012345

rtrv-vflx-vmsid:rname=rn90

Dependencies

The value specified for the **rname** parameter cannot be a reserved word, such as **none**.

The V-Flex feature must be enabled before this command can be entered.

The value specified for the **rnname** parameter must already exist in the Routing Number table.

The value specified for the **id** parameter must already exist in the VMSID table.

The **rnname** and **id** parameters cannot be specified together in the command.

Notes

This command can be cancelled using the **F9** function key or the **canc-cmd** command. See **canc-cmd** for more information.

Output

The following command retrieves all of the entries from the VMSID table.

rtrv-vflx-vmsid

```
rlghncxa03w 08-05-07 11:11:28 EST EAGLE 39.0.0
```

VMS ID	IDX0	IDX1	IDX2	IDX3	IDX4	IDX5
123456789abcdef	RN000000	RN000001	RN000002	RN000003	RN000004	RN000005
	IDX6	IDX7	IDX8	IDX9		
	RN000006	RN000007	RN000008	RN000009		

VMS ID	IDX0	IDX1	IDX2	IDX3	IDX4	IDX5
123456789012abc	RN000010	RN000011	RN000012	RN000013	RN000014	RN000015
	IDX6	IDX7	IDX8	IDX9		
	RN000016	RN000017	RN000018	RN000019		

VMS ID	IDX0	IDX1	IDX2	IDX3	IDX4	IDX5
a23456789012abc	RN000020	RN000021	RN000022	RN000023	RN000024	RN000025
	IDX6	IDX7	IDX8	IDX9		
	RN000026	RN000027	RN000028	RN000029		

VFLEX VMSID table is (3 of 1000) 1% full.

;

The following command retrieves an entry with the default voice mail server ID.

rtrv-vflx-vmsid:id=dflt

```
tekelecstp 08-05-29 15:07:01 EST EAGLE 39.0.0
```

VMS ID	IDX0	IDX1	IDX2	IDX3	IDX4	IDX5
dflt	RN000040	RN000041	RN000042	RN000043	RN000044	RN000045
	IDX6	IDX7	IDX8	IDX9		
	RN000046	RN000047	RN000048	RN000049		

VFLEX VMSID table is (3 of 1000) 1% full.

;

Legend

VMS ID—Voice Mail Server ID.

IDX0—Routing Number Name for index 0.

IDX1—Routing Number Name for index 1.

IDX2—Routing Number Name for index 2.

IDX3—Routing Number Name for index 3.

IDX4—Routing Number Name for index 4.

IDX5—Routing Number Name for index 5.

IDX6—Routing Number Name for index 6.

IDX7—Routing Number Name for index 7.

IDX8—Routing Number Name for index 8.

IDX9—Routing Number Name for index 9.

rtrv-x25-dstn

Retrieve X.25 Destination

Use this command to show the associations between X.25 network addresses and SS7 point codes. If the node is actually in the X.25 domain, the X.25 address is a real network address and the point code is a dummy point code. If the node is in the SS7 domain, the point code is a real SS7 point code and the X.25 address is a dummy address. X.25 destinations are shown in order of entry.

Keyword: rtrv-x25-dstn

Related Commands: chg-x25-dstn, dlt-x25-dstn, ent-x25-dstn

Command Class: Database Administration

Parameters

:dpc= (optional)

Specifies the value used to set the destination point code field in the routing label of the MSU. The point code is an ANSI point code in the format of *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: dpca

Range: 000-255

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = 000 is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is not valid if *ni* = 001–005.

When **chg-sid:pctype=ansi** is specified, *nc* = 000 is valid if *ni* = 006–255.

The point code 000-000-000 is not a valid point code.

:xaddr= (optional)

The X.25 network address of the X.25 destination entity or the SS7 node

Range: 1-15 digits

Default: Display all

Example

rtrv-x25-dstn

rtrv-x25-dstn:xaddr=220525586456772

rtrv-x25-dstn:dpc=133-13-1

Dependencies

If an X.25 address is specified, it must contain a minimum of four digits and must be in the X.25 destination table.

If a destination point code is specified, it must be assigned to at least one X.25 address.

The X.25 SS7 ANSI destination point code must be a full point code (ni-nc-ncm).

Notes

None

Output**rtrv-x25-dstn**

```

tekelecstp 02-06-19 21:16:37 EST EAGLE 31.3.0
X25 ADDR          SS7 DPC          SSN  DOMAIN
220525586456772  133-013-001  002  X25
2342342325       251-001-004  236  SS7
23423423         251-001-001  112  SS7
423423045656767  251-001-003  112  X25
9342             251-001-004  234  X25

```

X.25 DSTN TABLE IS (5 of 1024) 1 % FULL

;

rtrv-x25-dstn:xaddr=220525586456772

```

tekelecstp 02-06-19 21:17:37 EST EAGLE 31.3.0
X25 ADDR          SS7 DPC          SSN  DOMAIN
220525586456772  133-013-001  002  X25

```

X.25 DSTN TABLE IS (5 of 1024) 1 % FULL

;

Legend

X25 ADDR—The X.25 address of the X.25 destination or the SS7 node

SS7 DPC—The SS7 destination point code.

SSN—The subsystem number associated with the SS7 DPC.

rtrv-x25-rte**Retrieve X.25 Route**

Use this command to show the routing parameters needed by the gateway portion of the LIMs with the **ss7gx25** application for establishing a virtual circuit that is permanently maintained by the system.

Keyword: **rtrv-x25-rte**

Related Commands: **chg-x25-rte**, **dlt-x25-rte**, **ent-x25-rte**

Command Class: Database Administration

Parameters

:lc= (optional)

The number of the logical channel on the X.25 signaling link that the PVC connection is assigned to. For automatic virtual circuits and remote virtual circuits, the logical channel number is arbitrary and cannot be specified.

Range: 1-255

Default: Display all

:lc2nm= (optional)

Generates network management for failures and recoveries of logical channels. When the logical channel being used to carry data fails, the Database Transport Access (DTA) feature requires that traffic be diverted to alternate routes. The Logical Channel to Network Management Mapping (LC2NM) feature handles this process.

Range: yes, no

Default: Display all

:loc= (optional)

The card location containing the X.25 signaling link that will sustain the connection. For an automatic virtual circuit, this link is the link on which the system initially attempts the connection. However, if this attempt fails, the connection may be established by the X.25 destination entity on any other link in this link's linkset.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Default: All card locations are shown.

:port= (optional)

The port on the card containing the X.25 signaling link.

Range: a

Default: a

:rt= (optional)

The type of routing to perform for messages originating in the SS7 domain and destined for the X.25 domain. Two types of routing are available: (1) route on X.25 destination point code (XPC), and (2) route using X.25 origination and destination point code combinations (PC).

Range: xpc, pc

Default: Display all

:saddr= (optional)

The alias X.25 address assigned to the SS7 destination entity on the SS7 side of the circuit.

Range: 1-15 digits

Default: All X.25 addresses assigned to the SS7 destination entity are shown.

:type= (optional)

The type of X.25 connection that the link is expected to maintain.

Range: pvc, svca, svcr

pvc — Permanent virtual circuit

svca — Automatic virtual circuit

svcr — Remote virtual circuit

Default: Display all

:xaddr= (optional)

The X.25 address assigned to the X.25 destination entity on the X.25 side of the circuit.

Range: 1-15 digits

Default: All X.25 addresses assigned to the SS7 destination entity are shown.

Example

```
rtrv-x25-rte
```

```
rtrv-x25-rte:xaddr=345454
```

```
rtrv-x25-rte:saddr=4545434
```

```
rtrv-x25-rte:xaddr=345454:saddr=4545434
```

```
rtrv-x25-rte:loc=1201:port=a:lc=2
```

```
rtrv-x25-rte:loc=1201:port=a
```

```
rtrv-x25-rte:type=avc
```

```
rtrv-x25-rte:rt=xpc
```

```
rtrv-x25-rte:lc2nm=no
```


Dependencies

Each X.25 address must have at least four digits.

If the **port** parameter is specified, the **loc** parameter must be specified.

If the **lc** parameter is specified, both the **loc** and **port** parameters must be specified.

The **limds0**, **limocu**, and **limv35** card types are the only valid card types for this command. These card types must be running the ss7gx25 GPL type.

The shelf and card must be equipped.

If **lc2nm=yes** is specified, **rt=pc** cannot be specified.

Notes

None

Output

rtrv-x25-rte

```

rlghncxa03w 03-11-19 21:16:37 EST EAGLE 31.3.0
X25 ADDR          SS7 ADDR          TYPE LOC   PORT LC  RT   LC2NM
2510010011234567 342342341234567 pvc 1201 a    02 XPC YES
251001002         234234231         pvc 1201 a    04 PC  NO
51200105          34223422845        svca 1202 a    -- PC  NO
2510103           232330             pvc 1201 a    06 XPC YES
2510103           232330             svcr ---- -    -- PC  NO
2516019002        24247235          svca 3205 a    -- PC  NO
345454            4545434           svca 1201 a    -- PC  NO
X.25 ROUTE TABLE IS 30 % FULL

```

;

rtrv-x25-rte:xaddr=345454

```

rlghncxa03w 03-11-19 21:16:37 EST EAGLE 31.3.0
X25 ADDR          SS7 ADDR          TYPE LOC   PORT LC  RT   LC2NM
345454            4545434          svca 1201 a    -- PC  NO
X.25 ROUTE TABLE IS 30 % FULL

```

;

rtrv-x25-rte:saddr=4545434

```

rlghncxa03w 03-11-19 21:16:37 EST EAGLE 31.3.0
X25 ADDR          SS7 ADDR          TYPE LOC   PORT LC  RT   LC2NM
345454            4545434          svca 1201 a    -- PC  NO
X.25 ROUTE TABLE IS 30 % FULL

```

;

rtrv-x25-rte:xaddr=345454:saddr=4545434

```

rlghncxa03w 03-11-19 21:17:04 EST EAGLE 31.3.0
X25 ADDR          SS7 ADDR          TYPE LOC   PORT LC  RT   LC2NM
345454            4545434          svca 1201 a    -- PC  NO
X.25 ROUTE TABLE IS 30 % FULL

```

;

rtrv-x25-rte:loc=1201:port=a:lc=2

```

rlghncxa03w 03-11-19 21:17:04 EST EAGLE 31.3.0
X25 ADDR          SS7 ADDR          TYPE LOC   PORT LC  RT   LC2NM
2510010011234567 342342341234567 pvc 1201 a    02 PC  NO
X.25 ROUTE TABLE IS 30 % FULL

```

;

rtrv-x25-rte:loc=1201:port=a

```

rlghncxa03w 03-11-19 21:17:04 EST EAGLE 31.3.0
X25 ADDR          SS7 ADDR          TYPE LOC   PORT LC  RT   LC2NM
2510010011234567 342342341234567 pvc 1201 a    02 PC  NO
251001002         234234231         pvc 1201 a    04 XPC YES
345454            4545434          svca 1201 a    -- PC  NO
X.25 ROUTE TABLE IS 30 % FULL

```

;

rtrv-x25-rte:type=svca

```

rlghncxa03w 03-11-19 21:16:37 EST EAGLE 31.3.0
X25 ADDR          SS7 ADDR          TYPE LOC   PORT LC  RT   LC2NM
51200105          34223422845        svca 1202 a    -- PC  NO
2516019002        24247235          svca 3205 a    -- PC  NO
345454            4545434          svca 1201 a    -- PC  NO
X.25 ROUTE TABLE IS 30 % FULL

```

;

rtrv-x25-rte:type=svcr

```

rlghncxa03w 03-11-19 21:16:37 EST EAGLE 31.3.0
X25 ADDR          SS7 ADDR          TYPE LOC   PORT LC  RT   LC2NM
2510103           232330             svcr ---- -    -- PC  NO
X.25 ROUTE TABLE IS 30 % FULL

```

;

Legend

X25 ADDR—The X.25 address assigned to the X.25 destination entity on the X.25 side of the circuit.

SS7 ADDR—The dummy X.25 address assigned to the SS7 destination entity on the SS7 side of the circuit.

TYPE—The X.25 connection type.

LOC—The card location of the X.25 signaling link.

PORT—The signaling link port on the card.

LC—The number of the logical channel on the X.25 signaling link that the PVC connection is assigned to.

RT—The type of routing to perform for messages originating in the SS7 domain and destined for the X.25 domain.

LC2NM—Whether the logical channel-to-network management function is enabled (**YES**) or disabled (**NO**).

rtrv-x25-slk**Retrieve X.25 Signaling Link Parameters**

Use this command to display the X.25 signaling link parameters.

Keyword: rtrv-x25-slk

Related Commands: chg-x25-slk

Command Class: Database Administration

Parameters

:loc= (optional)

The card location containing the X.25 signaling link.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Default: All card locations are displayed.

:port= (optional)

The port on the card containing the X.25 signaling link.

Range: a

Example

```
rtrv-x25-slk
```

```
rtrv-x25-slk:loc=1204
```

```
rtrv-x25-slk:loc=1204:port=a
```

Dependencies

The **limds0**, **limocu**, and **limv35** card types are the only valid card types for this command. These card types must be running the **ss7gx25** GPL.

The shelf and card must be equipped.

The **port** parameter and the **loc** parameter must be specified together in the command.

Notes

None

Output**rtrv-x25-slkl**

```
rlghncxa03w 02-06-10 11:43:04 EST EAGLE 29.0
LOC  PORT  T1  N1    N2  K  L3MODE  PVC  SVC  WIN  MPS
1201  A      10  2104  15  7  DCE      25  205  1   256
1202  A      9   1080  13  6  DTE     255  0    2   256
1203  A      8   2104  11  5  DCE     10   10   3   128
1204  A      7   1080  9   4  DTE      0   255  4   128
1205  A      6   2104  7   3  DCE    100  0    5   256
1206  A      5   1080  5   2  DTE      0   100  6   256
1207  A      4   2104  3   1  DCE    100  100  7   128
1208  A      3   1080  5   2  DTE      1    1   6   128
```

```
x25-slkl table is (8 of 256) 3% full
```

```
;
```

rtrv-x25-slkl: loc=1204

```
rlghncxa03w 03-11-19 21:16:37 EST EAGLE 31.3.0
LOC  PORT  T1  N1    N2  K  L3MODE  PVC  SVC  WIN  MPS
1204  A      7   1080  9   4  DTE      0   255  4   128
```

```
;
```

rtrv-x25-slkl: loc=1201:port=a

```
rlghncxa03w 03-11-19 21:16:37 EST EAGLE 31.3.0
LOC  PORT  T1  N1    N2  K  L3MODE  PVC  SVC  WIN  MPS
1201  A      10  2104  15  7  DCE      25  205  1   256
```

```
;
```

Legend

LOC—The card location containing the X.25 signaling link.

PORT—The port on the card containing the X.25 signaling link.

T1—The amount of time to wait before retransmitting a frame.

N1—The maximum number of bits in a frame.

N2—The maximum number of retransmission attempts to complete a transmission.

K—The maximum number of outstanding I frames.

L3MODE—The logical layer 3 address of the connection

PVC—The total number of permanent virtual circuits (PVCs) available on this X.25 signaling link.

SVC—The total number of switched virtual circuits (automatic virtual circuits and remote virtual circuits) available on this X.25 signaling link.

WIN—The number of packets allowed for a window on this X.25 signaling link.

MPS—The maximum packet size (in bytes) allowed on this X.25 signaling link.

set-date**Set Date**

Use this command to set the date in the system.

Keyword: set-date

Related Commands: set-time

Command Class: Security Administration

Parameters**:date=** (mandatory)

The system date, to be reflected on all reports and output messages.

Range: 000101-991231(in the form *yymmdd*, where *yy*=year, *mm*=month, *dd*=day)**Example****set-date : date = 010307****Dependencies**

None

Notes

None

Output**set-date : date = 010307**rlghncxa03w 03-11-07 11:11:28 EST EAGLE 31.3.0
Date set complete.

;

set-gtwy-acthresh**Set Gateway Thresholds**

Use this command to set or change the level of activity thresholds to be used when reporting gateway screening activity. The STP reports screening activity only if the threshold is set and only if the threshold is reached. The thresholds are set on a linkset basis.

Keyword: set-gtwy-acthresh**Related Commands:** rtrv-gtwy-acthresh**Command Class:** Database Administration**Parameters****:intrvl=** (mandatory)

Monitor interval. The examination period, in minutes, during which the gateway screening activity thresholds are to be tested.

Range: 5, 10, 15, 20, 30**System****Default:** 0 - Indicates that thresholds are not set**:lsn=** (mandatory)

Linkset name

Range: aaaaaaaaa

1 alphabetic character followed by up to 9 alphanumeric characters

:rcv= (optional)

Received message threshold. The threshold for MSUs received on the gateway linkset.

Range: 0-999999**Default:** The current value**System****Default:** 0**:rej=** (optional)

Reject threshold. The threshold for MSUs rejected on the gateway linkset because of screening.

Range: 0-999999
Default: The current value
System
Default: 0

Example

The following example shows how to set the linkset wy644368 rejection threshold to 100, with a 15 minute interval.

set-gtwy-acthresh: lsn=wy644368:rej=100:intrvl=15

The following example shows how to set the linkset wy644368 message threshold to 1000 and the rejection threshold to 300, with an interval of 20 minutes.

set-gtwy-acthresh: lsn=wy644368:intrv=20:rej=300:recv=1000

The following example shows how to set the linkset wy644368 so that no activity messages are produced.

set-gtwy-acthresh: lsn=wy644368:intrv=5:rej=0:recv=0

Dependencies

At least one optional parameter must be specified.

The linkset specified must exist in the gateway linkset entity set of the requesting system.

The linkset specified must exist in the active database.

The value specified for INTRVL parameter is not one of 5, 10, 15, 20 or 30 minutes.

Notes

None

Output

set-gtwy-acthresh: lsn=wy644368:rej=100:intrvl=15

```
rlghncxa03w 03-11-18 08:50:12 EST EAGLE 31.3.0
SET-GTWY-TRHSHLD: MASP A - COMPLTD
;
```

set-scrrej-prmtrs

Set Parameters for SS7 Message-Rejection Reporting

Use this command to change the STP values that limit the display of MSUs rejected because of gateway screening notification messages that could become excessive. The new values overwrite the existing values.

Keyword: set-scrrej-prmtrs

Related Commands: rtrv-gtwy-acthresh, rtrv-gtwy-prmtrs, set-gtwy-acthresh

Command Class: Database Administration

Parameters

:intrvl= (mandatory)

Monitor interval. The examination period, in minutes, during which the gateway screening activity thresholds are to be tested.

Range: 5, 10, 15, 20, 30

System

Default: 5

:limit= (mandatory)
 Threshold not to be exceeded.
Range: **0-9999**
System
Default: **9999**

Example

```
set-scrrej-prmtrs:limit=200:intrvl=10
```

Dependencies

The value specified for INTRVL parameter is not one of 5, 10, 15, 20 or 30 minutes.

Notes

None

Output

```
set-scrrej-prmtrs:limit=200:intrvl=10

rlghncxa03w 03-11-18 08:50:12 EST EAGLE 31.3.0
SET-SCRREJ-PRMTRS: MASP A - COMPLTD
;
```

set-time

Set Time

Use this command to set the system clock. The clock is used to determine when measurements collection takes place as well as several other time-driven events.

Keyword: **set-time**

Related Commands: **set-date**

Command Class: Security Administration

Parameters

:time= (mandatory)
 The system time that is to be reflected on all reports and output messages.
Range: **0000-2359**
hhmm where *hh* = **00-23** (hour) and *mm* = **00-59** (minute)

:tz= (optional)
 The time zone
Range: **est, edt, cst, cdt, mst, mdt, pst, pdt, hst, hdt, ast, adt, gmt, wet, west, utc, bst, cet, cest, met, mest, fwt, fst, eet, eest, sast, msk, msd, ist, idt, cct, awst, awdt, rok, acst, acdt, aest, aedt, nzst, nzdt, akst, akdt, nst, ndt, bra**
 The time zones are described in Table 5-72.
Default: Current value

Table 5-72. Time Zones Set by the **set-time** command

Abbreviation	Time Zone	Abbreviation	Time Zone
est	Eastern Standard Time	edt	Eastern Daylight Time
cst	Central Standard Time	cdt	Central Daylight Time

Table 5-72. Time Zones Set by the **set-time** command

Abbreviation	Time Zone	Abbreviation	Time Zone
mst	Mountain Standard Time	mdt	Mountain Daylight Time
pst	Pacific Standard Time	pdt	Pacific Daylight Time
hst	Hawaiian Standard Time	hdt	Hawaiian Daylight Time
ast	Atlantic Standard Time	adt	Atlantic Daylight Time
gmt	Greenwich Mean Time	wet	Western European Time
west	Western European Summer Time	utc	Universal Time Coordinated
bst	British Summer Time	cet	Central European Time
cest	Central European Summer Time	met	Middle European Time
mest	Middle European Summer Time	fwf	French Winter Time
fst	French Summer Time	eet	Eastern European Time
eest	Eastern European Summer Time	sast	South African Standard Time
msk	Moscow Time	msd	Moscow Summer Time
ist	India Standard Time	idt	India Daylight Time
cct	China Coast Time	awst	Australian Western Standard Time
awdt	Australian Western Daylight Time	rok	Republic of Korea
acst	Australian Central Standard Time	acdt	Australian Central Daylight Time
aest	Australian Eastern Standard Time	aedt	Australian Eastern Daylight Time
nzst	New Zealand Standard Time	nzdt	New Zealand Daylight Time
akst	Alaska Standard Time	akdt	Alaska Daylight Time

Table 5-72. Time Zones Set by the **set-time** command

Abbreviation	Time Zone	Abbreviation	Time Zone
nst	Newfoundland Standard Time	ndt	Newfoundland Daylight Time
bra	Brazil Standard Time		

Example

```
set-time:time=1432:tz=est
```

Dependencies

None

Notes

None

Output

```
set-time:time=1432:tz=est
rlghncxa03w 02-11-07 14:32:28 EST EAGLE 30.0.0
Time set complete.
;
```

set-uim-actthresh**Set Activity Level Thresholds for STP UIM Activity Reporting**

Use this command to set or change the level-of-activity threshold for reporting UIM messages. The system suppresses the generation of UIM messages when message generation exceeds the threshold that was defined for the interval period. The values are set within five seconds after the command was entered. Any previous count is cleared and the new or changed threshold and limit is enforced. Refer to “Configuring the UIM Threshold” in the *Database Administration Manual – System Management* for more information about UIM threshold configuration.

Keyword: **set-uim-actthresh**

Related Commands: **dlt-uim-actthresh**, **rtrv-uim-actthresh**

Command Class: Database Administration

Parameters

:intrvl= (mandatory)

The monitor interval in minutes.

Range: 5, 10, 15, 20, 25, 30

Default: Current value

:uimn= (mandatory)

The UIM number.

Range: 1000-1499

:force= (optional)

Required to set the **limit** parameter to 0 for a given interval.



CAUTION

CAUTION: Setting the limit to 0 turns off all occurrences of the specified UIM. Use this manner of creating thresholds only if you are certain you have specified the correct UIM.

Range: yes, no
Default: no **force** specified

:limit= (optional)
 The message threshold.



CAUTION: Setting the limit to 0 will turn off all occurrences of the specified UIM. This can be dangerous if the wrong UIM number is specified by mistake. It is highly recommended that thresholds for UIMs are not set in this manner, but the ability is provided for certain extreme cases. The **force** parameter must be specified to set the limit to 0, and an additional scroll area message is issued.

Range: 0-9999
Default: Current value

Example

Sets UIM number 1333 threshold to 100 in a 5-minute interval:

set-uim-acthresh:uimn=1333:limit=100:intrvl=5

Sets UIM number 1444 threshold to 200 in a 15-minute interval:

set-uim-acthresh:uimn=1444:limit=200:intrvl=15

Dependencies

At least one optional parameter must be specified.

The **uimn** parameter value must be a numeric value in the range **1000–1499**.

The **limit** parameter value must be a numeric value in the range **0–9999**.

The **intrvl** parameter value must be one or two numeric characters with the following values: **5, 10, 15, 20, 25, 30**.

The **force=yes** parameter must be specified to set the **limit** parameter to **0** for a given interval. Setting the **limit** to **0** turns off all occurrences of the specified UIM. See the cautions under the **force** and **limit** parameters.

When creating a new UIM threshold, both the **limit** and **intrvl** parameters must be specified.

The specified **uimn** parameter value must exist in the system Trouble Text table.

Notes

None

Output

set-uim-acthresh:uimn=1333:limit=100:intrvl=5

```
rlghncxa03w 03-11-01 08:50:12 EST EAGLE 31.3.0
SET-UIM-ACTHRESH: MASP A - COMPLTD
;
```

tst-bip

Test Board Identification PROM

Use this command to test each byte of the specified board identification PROM (BIP) by reading and writing to the PROM. The test is performed for both the main assembly and applique BIPs.

Keyword: **tst-bip**

Related Commands: **chg-bip-fld, chg-bip-rec, rtrv-bip**

Command Class: System Maintenance

Parameters

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

HMUX and HIPR locations are not valid.

Example

tst-bip:loc=1211

Dependencies

The card location, frame, shelf, or slot must be within the allowed range.

The card location must be valid for the command.

The board type **type=dbd** parameter is not valid for card type GPSM-II, HCAP, ATM or DCM. HMUX and HIPR cards do not contain BIP information.

The card specified by the **loc** parameter must be equipped in the database.

The card specified by the **loc** parameter must be in the OOS-MT-DSBLD state prior to BIP testing.

Notes

The specified card must be inhibited.

The **tst-bip** command verifies that the PROM is good by writing and reading to the PROM. The **rtrv-bip** command show the level of the BIP, as well as the board part number, the revision number, and the serial number. If the **rtrv-bip** command fails, this indicates that communications to the card has failed, and the card should be replaced.

Output

tst-bip:loc=1211

```
rlghncxa03w 03-11-07 16:19:08 EST EAGLE 31.3.0
Test Board Identification PROM Location: 1211 - MBD Packet: 1
```

```
-----
BIP Passed
```

```
rlghncxa03w 03-11-07 16:19:08 EST EAGLE 31.3.0
Test Board Identification PROM Location: 1211 - DBD Packet: 1
```

```
-----
BIP Passed
```

;

tst-disk

Test Disk

Use this command prior to an upgrade, or as a diagnostic tool, to test the integrity of an EAGLE 5 ISS fixed drive or removable cartridge or drive, at the specified location. The test is non-intrusive and non-destructive to the disk. A read-only test is executed for all logical blocks (LBAs) used on the specified target disk and a report identifying any bad or questionable LBAs is output.

Keyword: **tst-disk**

Related Commands: **copy-disk**

Command Class: System Maintenance

Parameters

:loc= (mandatory)

The location of the disk to be tested.

Range: **1114, 1116, 1117, 1113, 1115**

1114— The TDM

1116— The TDM

1117— The removable cartridge drive

1113— The latched USB port

1115— The latched USB port

:disk= (optional)

This parameter specifies the disk that is being tested.

Range: **remove, fixed, usb**

remove— The removable drive

fixed— The fixed drive

usb— The credit card drive

:partition= (optional)

Portion of disk to be tested. This parameter specifies the individual physical disk partition (1, 2, 3, or 4) or all defined partitions for a given disk size up to a maximum of 4 partitions.

Range: **1, 2, 3, 4, all**

1, 2, 3, 4—Tests the specified existing partition on the disk. Only the number or numbers for the partition or partitions that exist on the disk are valid. (For example, if the disk size allows only 2 partitions, **partition=3** and **partition=4** are invalid for that disk.)

all—Tests all existing partitions on the fixed disk or on one side of the removable cartridge or drive

Default: **all**

Example

tst-disk:loc=1116

Dependencies

The card in the specified location (**loc**) must be a TDM or MDAL card.

The disk to be tested must be in service.

If a TDM location is specified, the TDM cannot be reserved (as when a copy-disk command is running).

The target drive must have low level format.

The **tst-disk** command can be run simultaneously on both TDMs, if entered from different terminals.

The removable disk can be tested simultaneously with the standby TDM but not with the active TDM.

To test the removable cartridge when **loc=1117** is specified, the disk must be inserted in the removable cartridge drive on the MDAL card.

The **partition=3** and **partition=4** values are invalid for a 4GB fixed drive. The only valid value for the 2.3 GB and 4.1 GB removable disks is **partition=1**. An error message will be generated for a disk that has been Formatted (**format-disk** command) but does not yet contain a DOS directory structure (created with the **copy-disk** command) when **partition= 1, 2, 3, 4, or all** is specified.

An E5-MCAP card must be installed before the **disk=usb** parameter can be specified.

If an E5-MCAP card is installed, then the **tst-disk** command cannot be entered when other database commands are running.

If an E5-TDM card is installed, then the **disk=fixed** parameter cannot be specified.

Notes

A physical fixed disk (TDM) or removable cartridge or drive is formatted and given a DOS directory structure to define the number of physical partitions that the disk size can accommodate. (The logical partitions that contain database, backup, GPL, and measurements files are placed in these physical partitions, with no correlation between the physical numbers and the logical contents.)

For a fixed TDM disk, the **partition** parameter specifies the individual partition (1, 2, 3, or 4) or all existing partitions to be tested.

- One partition = 2 GB.
- The 4 GB drive contains two 2 GB partitions.
- The 9 GB drive and the 18 GB drive each contain four 2 GB partitions.
- The 9 GB drive contains four 2 GB partitions.
- Any disk space beyond the four 2 GB partitions is unused disk space (and always has been due to EAGLE DISK FAT structure used).

For a removable cartridge or drive, each side of the disk will contain the maximum number of partitions (up to 4) that the disk size can accommodate. Only one side of the disk is tested with one **tst-disk** command. For example, a 2.3 GB removable disk has one partition on each side that is slightly larger than 1 GB. A 4.1 GB removable disk has one 2 GB partition on each side. Only **tst-disk:partition=1** is valid for either of these disks.

The **partition=all** value implies that testing starts with the first partition, then second, and so on, until the last existing disk partition is detected without skipping any non-existing or defined partitions.

Table 5-73 outlines execution time estimates based on disk capacity.

Table 5-73. Test Disk Execution Times

Capacity	Nominal Execution Time	Maximum Execution Time for 100% Errors
4.0 GB	40 minutes	27.5 hours
9.0 GB	1 hour 45 minutes	(Not determined)
18 GB	30 minutes (partition=1) 5 hours (partition=disk) depending on amount of disk tested and EAGLE 5 ISS provisioning/ activity	(Not determined)
2.3 GB Magneto Optical Removable	18 minutes	7.4 hours
4.1 GB Magneto Optical Removable	25 minutes (requires 806 MDAL)	7.4 hours
507 MB	5 minutes	3.4 hours
2.0 GB	20 minutes	13.5 hours

Table 5-73. Test Disk Execution Times

Capacity	Nominal Execution Time	Maximum Execution Time for 100% Errors
4.0 GB	40 minutes	27.5 hours
Magneto Optical Removable	20 minutes	7.4 hours
Removable Drive	30 seconds	Less than 1 minute

Nominal times for **tst-disk** command execution depend on the capacity of the disk being tested and assume that few or no errors are found. Maximum execution times are based on disk capacity, retry count, and retry delay. Each read error and retry may cause a delay of up to three seconds.

Because of the intense, sustained disk activity created when **tst-disk** is executed, concurrently performing other disk-based activities, such as prolonged LNP command entry or database backups, will result in performance degradation up to twice the usual execution time.

Because of the extended processing time required for large disks, a progress message is displayed every five minutes providing the current LBA and the total LBA count for the partition.

Specific errors are reported for the first 10 error occurrences. Thereafter, only the error count is tracked and summary results are reported upon completion.

Output

```

tst-disk:loc=1116
  rlghncxa03w 03-11-27 11:40:02 EST  EAGLE 31.3.0
  TST-DISK of all partitions initiated for TDM 1116
;

  rlghncxa03w 03-11-27 11:40:02 EST  EAGLE 31.3.0
  TST-DISK: TDM 1116 in progress 868680 of 4124735 LBA read
;

  rlghncxa03w 03-11-27 11:40:02 EST  EAGLE 31.3.0
  TST-DISK Error: TDM 1116 LBA range 4124706 - 4124960
  Check Condition: DISK_NOT_READY
  TST-DISK results for TDM 1116
  Total LBAs = 4124735    LBA size = 512
  Retries    = 1    Errors    = 1
  Command Completed
;

tst-disk:loc=1116:partition=2
  rlghncxa03w 03-11-27 11:40:02 EST  EAGLE 31.3.0
  TST-DISK on Partition 2 initiated for TDM 1116
;

  rlghncxa03w 03-11-27 11:40:02 EST  EAGLE 31.3.0
  TST-DISK: TDM 1116 in progress 1234567 of 4194304 LBA read
;

  rlghncxa03w 03-11-27 11:40:02 EST  EAGLE 31.3.0
  TST-DISK Error: TDM 1116 LBA range 4194304 - 4194558
                                (NOTE: w/i 2nd disk partition)
  Check Condition: DISK_NOT_READY
  TST-DISK results for TDM 1116
  Total LBAs = 4194304    LBA size = 512
  Retries    = 1    Errors    = 1
  Command Completed
;

```

tst-dlk**Test Data Link**

Use this command to test the specified TCP/IP data link. The TCP/IP data link is tested with an ethernet test that is an echo test type called ping.

Keyword: **tst-dlk**

Related Commands: **act-dlk, canc-dlk, dlt-dlk, ent-dlk, rept-stat-dlk, rtrv-dlk**

Command Class: Link Maintenance

Parameters

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

:type= (mandatory)

The type of test to run.

Range: **ping**

:ipaddr= (optional)

The IP address of the remote host. This is a TCP/IP address expressed in standard dot notation. IP addresses consist of the system's network number and the machine's unique host number. An example IP address is **192.126.100.5**, where **192.126.100** is the network number and **5** is the machine's host number.

Range: 1-223, 0-255

4 numbers separated by dots

1-223—first number

0-255—the other three numbers

Default: Host IP

:rc= (optional)

The number of times the test is repeated.

Range: 1-15

Default: 1

Example

tst-dlk: loc=1206:type=ping

Dependencies

No other action command can be in progress when this command is entered.

The card location must contain an ACM card.

The shelf and card must be equipped.

The specified card must have a TCP/IP data link assigned to it.

If a test repeat count (**rc**) is not entered, the test is not repeated.

If a data link test is in progress, another data link test cannot be started.

The card location, frame, shelf, or slot must be within the allowed range.

A card location that is valid and defined in the database must be specified.

The **ipaddr** parameter must specify a valid IP address.

Notes

None

Output

tst-dlk: loc=1206:type=ping

rlghncxa03w 03-11-27 17:00:36 EST EAGLE 31.3.0

Command Accepted: Test Link message is sent.

rlghncxa03w 03-11-27 17:00:36 EST EAGLE 31.3.0

Command Completed.

rlghncxa03w 03-11-27 17:00:36 EST EAGLE 31.3.0

1310.1132 CARD 1206 INFO STPLAN DLK ping test completed
TESTS REQUESTED= 1 PASSED COUNT= 1 FAILED COUNT= 0
AVR RND TRIP= 10 MAX RND TRIP=10 MIN RND TRIP=10
HOST IPADDR=198.089.040.069

;

Use this command to test HC-MIM and E5-E1T1 E1 ports. The loopback parameter provides the ability to select local transceiver (**lxvr**) and line loopback tests.

The **tst-e1** command is rejected if a loopback test is not compatible with the port type.

Keyword: **tst-e1**

Related Commands: **chg-e1, dlt-e1, ent-e1, rtrv-e1**

Command Class: System Maintenance

Parameters

:e1port= (mandatory)

E1 port number. The value must be an E1 port that has already been configured with an E1 interface on the specified HC-MIM or E5-E1T1 E1 card.

Range: **1-8**

Ports 3 - 8 can be specified only for HC-MIM and E5-E1T1 cards.

:loc= (mandatory)

Card location. The HC-MIM or E5-E1T1 card location as stenciled on the shelf of the system.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

:action= (optional)

Indicator of command action to stop or start a test.

Range: **start, stop**

Default: **start**

:loopback= (optional)

Select loopback test type.

Range: **line, lxvr**

Default: **lxvr**

Example

tst-e1:e1port=1:loc=1203:loopback=lxvr

tst-e1:e1port=1:loc=1203:action=stop

Dependencies

This command cannot be entered during upgrade.

The card in the specified card location (**loc** parameter) must be an HC-MIM or E5-E1T1 card with card type **lime1**.

The card in the specified card location (**loc** parameter) must be equipped.

The card in the specified card location (**loc** parameter) must be in service.

The specified E1 port (**e1port** parameter) on the card (**loc** parameter) must have a defined E1 interface.

All signaling links that provide timeslots serviced by E1 interfaces on the specified card (**loc** parameter) must be deactivated before this command can be entered. None of the signaling links can be running link diagnostic tests (**tst-slk** and **act-cdl**) when this command is entered.

Only one port test can be running on an E1 port (**e1port** parameter) at one time.

When the **action=stop** parameter is specified, the **loopback** parameter cannot be specified.

The **action=stop** parameter can be specified only when a port test is running.

Notes

This command can be used for only HC-MIM and E5-E1T1 card ports.

Only one port test can be performed at a time on an E1 port. When a port test is in progress on an E1 port, subsequent test requests are rejected.

Output

tst-e1:e1port=1:loc=1203:loopback=lxvr

```
rlghncxa03w 05-01-07 16:19:08 EST EAGLE5 33.0.0
Command Accepted: Test Port message is sent.
```

```
;
```

```
rlghncxa03w 05-01-07 16:19:08 EST EAGLE5 33.0.0
Command Completed.
```

```
;
```

tst-e1:e1port=1:loc=1203:action=stop

```
rlghncxa03w 05-01-07 16:19:08 EST EAGLE5 33.0.0
Command Accepted: Stop Port test message is sent.
```

```
;
```

```
rlghncxa03w 05-01-07 16:19:08 EST EAGLE5 33.0.0
Command Completed.
```

```
;
```

tst-imt

Test IMT Bus

The interprocessor message transport bus (IMT bus) is the main communications artery between all subsystems in the system. Use this command to determine the location of faults on a failed or abnormal IMT bus. The alternate bus state must be IS-NR. The target bus state must be OOS-MT-DSBLD. Notice: IMT Fault test terminated. Non-Standard cabling or IMT Bus-X state change detected.

NOTE: At least one card must be populated in each EAGLE 5 ISS shelf to allow tst-imt the opportunity to successfully execute. See the "Notes" section for this command for more information about executing the command.

Keyword: tst-imt

Related Commands: clr-imt-stats, init-imt-gpl, rept-imt-lvl1, rept-imt-lvl2

Command Class: System Maintenance

Parameters

:bus= (mandatory)
The IMT bus to test.
Range: a, b

Example

tst-imt:bus=a

tst-imt:bus=b

Dependencies

A related IMT command must not be in progress. Only one fault isolation test can be active at a time.

This command cannot be entered if the alternate bus is other than in-service normal (IS-NR).

This command cannot be entered if the target bus is other than out of service - maintenance disabled (OOS-MT-DSBLD).

This command cannot be entered during the IMT statistics collection period following an hourly boundary (IMT performance monitoring).

Notes

Probable causes are listed in order of most probable to least probable. The listed components should be replaced in order listed by the output of the **tst-imt** command.

Multiple, masking points of failure can occur in the same bus segment. Such faults are reported as a single bus segment fault. Because running this command on a system with no IMT bus faults prints an indication that no faults were found, you can iteratively replace components and run this test until all components in the segment are ruled out.

A detection of an IMT address mismatch indicates a faulty backplane or card.

A detection of an inconsistency with a particular card's IMT card list indicates an error of unknown origin, probably due to one or more lost messages.

When the **tst-imt** command completes, either through normal termination of the command or because the command was ended for another reason, you must administratively enable the target bus. If all faults have meanwhile been isolated and corrected, the target bus becomes operational.

When a fault is detected, the possible error sources are listed in order from the most likely to the least likely. This ordering is based on operational experience.

At least one card must be populated in each EAGLE 5 ISS shelf to allow the **tst-imt** command to execute successfully. The card does not need to be a provisioned card; the card must be in IS-NR state on both IMT busses before the **tst-imt** command is entered. If an empty shelf does exist in the EAGLE 5 ISS, the following text is displayed when the **tst-imt** command is entered:

Notice: IMT Fault test terminated.

.

Non-Standard cabling or IMT Bus-X state change detected.

Output

Connectivity test fails

tst-imt:bus=a

```
rlghncxa03w 03-11-27 12:47:07 EST EAGLE 31.3.0
IMT Fault Isolation Bus A
Fault Location    Probable Cause  Failure(s)
Bus  1218-1301   HIPR 1209
                        HIPR 1309
                        Card 1218
                        Card 1301
                        Cable connecting Shelves 1200 and 1300 on Bus A
                        Backplane 1200
                        Backplane 1300
                                Connectivity Test Failed

Bus  1304-1305   HIPR 1309
                        Card 1304
                        Card 1305
                        Backplane 1300
                                Connectivity Test Failed
```

;

Pass-through test fails.

tst-imt:bus=a

```
rlghncxa03w 03-11-27 12:47:07 EST EAGLE 31.3.0
IMT Fault Isolation Bus B
Fault Location    Probable Cause  Failure(s)
Card  1201        Card 1201
                                Pass-through Test Failed

Card  1301        Card 1301
                                Pass-through Test Failed
```

;

All tests pass.

tst-imt:bus=b

```
rlghncxa03w 03-11-27 12:47:07 EST EAGLE 31.3.0
IMT Fault Isolation Bus B
Fault Location    Probable Cause  Failure(s)
No Faults Found
                                All Tests Passed.
```

;

tst-msg**Test Tool Test message**

Use this command to invoke the Test Tool to test the feature call flow for the specified test message from the TESTMSG table.

The command sends the specified message from the TESTMSG table to an EAGLE 5 ISS Service Feature. The test message that is sent does not create a new raw MSU. The test message is used only to modify the internal data structures of the Service Feature to study the call flow behavior when a message with the specified parameters is injected into the call path. The test message is never sent out to the network.

Keyword: **tst-msg**

Related Commands: **chg-gsm-msg, chg-is41-msg, chg-isup-msg, chg-ttr-msg, rtrv-gsm-msg, rtrv-is41-msg, rtrv-isup-msg, rtrv-ttr-msg**

Command Class: Database Administration

Parameters

:feat= (mandatory)

Feature. This parameter specifies the EAGLE 5 ISS Service feature where the message is processed on the network card.

Range: **ttr, tif, tif2, tif3, mosmsnpp**

ttr — Service feature for processing Prepaid IDP Query Relay test messages

tif — Service feature for processing ISUP test messages when the provisioned Gateway Screening stop action is TIF.

tif2 — Service feature for processing ISUP test messages when the provisioned Gateway Screening stop action is TIF2.

tif3 — Service feature for processing ISUP test messages when the provisioned Gateway Screening stop action is TIF3.

mosmsnpp — Service feature for processing MO SMS NPP test messages

:loc= (mandatory)

Card location. The location of the network card where the message is to be sent.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

:msgn= (mandatory)

Message number. This parameter specifies the message number of the test message to be sent for feature service processing.

Range: **1-10**

:prot= (mandatory)

Protocol. This parameter specifies the protocol of the test message that is sent to the feature for processing.

Range: **ttr, isup, is41, gsm**

:mode= (optional)

Output mode. This parameter specifies the mode in which output is shown while processing is performed on the specified test message.

NOTE: The most complete and accurate test results are obtained when mode=debug is used.

Range: **brief, full, debug**

brief — summary format

full — full format

debug — debug format

Default: **brief**

Example

tst-msg:loc=1103:prot=is41:feat=mosmsnpp:msgn=1:mode=full

tst-msg:loc=1103:prot=ttr:feat=ttr:msgn=1:mode=full

tst-msg:loc=1103:prot=gsm:feat=mosmsnpp:msgn=1:mode=debug

Dependencies

The Prepaid IDP Query Relay feature must be enabled before the **feat=ttr** parameter can be specified.

The card in the location that is specified in the **loc** parameter must be equipped in the system.

The card in the location specified by the **loc** parameter must be a Service Module card running the **vsccp** application (a DSM card or an E5-SM4G card).

The card in the location specified in the **loc** parameter must be in the Active state.

The values specified for the **prot** and **feat** parameters must be compatible. Valid combinations are shown in Table 5-74.

Table 5-74. Valid PROT and FEAT Combinations

FEAT	Prot
ttr	ttr
tif, tif2, tif3	isup
mosmsnpp	gsm, is41

If the specified test message is defined with ACTIVE=YES (see the **chg-isup-msg** command), then the message is sent to the specified network card for test processing. (Test messages are never sent out to the live network.)

The TSTMSG table is corrupt or cannot be found.

The MO SMS ASD, MO SMS GRN, MO SMS IS41-to-GSM Migration, or MO-based IS1 SMS NP feature must be enabled before the **feat=mosmsnpp** and **prot=is41** parameters can be specified.

The MO SMS ASD, MO SMS GRN, Prepaid SMS Intercept Ph1, MO-based GSM SMS NP, or Portability Check for MO SMS feature must be enabled before the **feat=mosmsnpp** and **prot=gsm** parameters can be specified.

At least one TIF feature must be enabled before a value of **tif**, **tif2**, or **tif3** can be specified for the **feat** parameter.

Notes

None

Output

When the **mode=full** or **mode=debug** parameter is specified, the FORMAT field indicates whether formatting actions are executed. If formatting actions are not executed, then the OUTG DIGITS field displays a value of UNMODIFIED. If any digit string is blank, then the associated field displays a value of EMPTY.

The following example displays the command output in brief format.

tst-msg:feat=ttr:prot=ttr:msgn=1:mode=brief

```
tekelecstp 08-05-05 18:20:46 EST EAGLE 39.0.0
tst-msg:feat=ttr:prot=ttr:msgn=1:mode=brief
Command Accepted: Test message is sent.
;
```

```
TST-MSG-RESULT
=====
```

```
MSG = 1          TCAP_TYPE = INAP
```

```
SCCP
```

```
CGPA_GT = 2
CGPA_GT_NAI = 4      CGPA = 9111111111
CDPA_GT = 2
CDPA_GT_NAI = 4      CDPA = 9818555001
```

```
TCAP
```

```
SK = 6ba1b1c1      BCSM = 02
CGPN_NAI = 4        CGPN = 919818000005
CDPN_NAI = 4        CDPN = 919818000001
```

```
CDPN NPP PROCESSING
```

```
SERVICE NAME = idprcdpn SERVICE STATUS = ON
INC DIGITS = 919818000001
NAI = 4 FNAI = intl FDIGLEN = 12
```

```
MATCHING RULE
```

```
FNAI = intl FDIGLEN = 0 FPFX = *
ACTION SET NAME = cdprintl
```

```
CONDITIONING RESULT
```

```
INC DIGITS = 919818000001
COND DIGITS = 919818000001
```

```
FORMATING RESULT
```

```
OUTG DIGITS = 00910123459818000001
OUTG FNAI = intl
```

```
;
```

```
tekelecstp 08-05-05 18:20:46 EST EAGLE 39.0.0
```

```
CGPN NPP PROCESSING
```

```
SERVICE NAME = idprcgpn SERVICE STATUS = ON
INC DIGITS = 919818000005
NAI = 4 FNAI = intl FDIGLEN = 12
```

```
MATCHING RULE
```

```
FNAI = intl FDIGLEN = 12 FPFX = *
ACTION SET NAME = cgpn1
```

```
CONDITIONING RESULT
```

```
INC DIGITS = 919818000005
```

```

COND DIGITS = 919818000005

FORMATING RESULT
  OUTG DIGITS = 00915432109818000005
  OUTG FNAI = intl
;

```

The following example displays the command output in full format.

```

tst-msg:feat=ttr:prot=ttr:msgn=1:mode=full
tekelecstp 09-01-05 18:20:46 EST  EAGLE 40.1.0
tst-msg:feat=ttr:prot=ttr:msgn=1:mode=full
Command Accepted: Test message is sent.
;

```

```

TST-MSG-RESULT
=====

```

```

MSG = 1          TCAP_TYPE = INAP

```

```

SCCP
  CGPA_GT = 2
  CGPA_GT_NAI = 4      CGPA = 9111111111
  CDPA_GT = 2
  CDPA_GT_NAI = 4      CDPA = 9818555001

```

```

TCAP
  SK = 6ba1b1c1      BCSM = 02
  CGPN_NAI = 4        CGPN = 919818000005
  CDPN_NAI = 4        CDPN = 919818000001

```

```

CDPN NPP PROCESSING

```

```

SERVICE NAME = idprcdpn SERVICE STATUS = ON
  INC DIGITS = 919818000001
  NAI = 4 FNAI = intl FDIGLEN = 12

```

```

MATCHING RULE
  FNAI = intl FDIGLEN = 0 FPFX = *
  ACTION SET NAME = cdpnintl

```

```

CONDITIONING RESULT
  CA1 = cc2      EXECUTED = Y RESULT = PASS
  CA2 = ac2      EXECUTED = Y RESULT = PASS
  CA3 = snx      EXECUTED = Y RESULT = PASS
  INC DIGITS = 919818000001
  COND DIGITS = 919818000001

```

```

SERVICE APPLICATION
  SA1 = ccncchk   EXECUTED = Y FORMAT = Y
  SA2 = cdpnp    EXECUTED = Y FORMAT = Y
  SA3 = cgpnprqd EXECUTED = Y FORMAT = Y

```

```

FORMATING RESULT
  FA1 = dlma      EXECUTED = Y RESULT = PASS
  FA2 = cc        EXECUTED = Y RESULT = PASS
  FA3 = rn        EXECUTED = Y RESULT = PASS
  FA4 = ac        EXECUTED = Y RESULT = PASS
  FA5 = sn        EXECUTED = Y RESULT = PASS
  OUTG DIGITS = 00910123459818000001
  OUTG FNAI = intl
;

```

```

tekelecstp 09-01-05 18:20:46 EST  EAGLE 40.1.0

```

```

CGPN NPP PROCESSING

```



```

SERVICE NAME = idprcgpn SERVICE STATUS = ON
INC DIGITS = 919818000005
NAI = 4 FNAI = intl FDIGLEN = 12

MATCHING RULE
FNAI = intl FDIGLEN = 12 FPFx = *
ACTION SET NAME = cgpn1

CONDITIONING RESULT
CA1 = cc2 EXECUTED = Y RESULT = PASS
CA2 = ac2 EXECUTED = Y RESULT = PASS
CA3 = sn8 EXECUTED = Y RESULT = PASS
INC DIGITS = 919818000005
COND DIGITS = 919818000005

SERVICE APPLICATION
SA1 = cgpnnp EXECUTED = Y FORMAT = Y

FORMATING RESULT
FA1 = dlma EXECUTED = Y RESULT = PASS
FA2 = cc EXECUTED = Y RESULT = PASS
FA3 = rn EXECUTED = Y RESULT = PASS
FA4 = ac EXECUTED = Y RESULT = PASS
FA5 = sn EXECUTED = Y RESULT = PASS
OUTG DIGITS = 00915432109818000005
OUTG FNAI = intl

```

;

The following example displays the command output in debug format for the TTR protocol.

tst-msg:feat=ttr:prot=ttr:msgn=1:mode=debug

```

tekelecstp 09-01-05 18:20:46 EST EAGLE 40.1.0
tst-msg:feat=ttr:prot=ttr:msgn=1:mode=debug
Command Accepted: Test message is sent.

```

;

```

TST-MSG-RESULT
=====

```

```

MSG = 2          TCAP_TYPE = INAP

```

SCCP

```

CGPA_GT = 4
CGPA_GT_NAI = 4          CGPA = 9111111111
CDPA_GT = 4
CDPA_GT_NAI = 4          CDPA = 9818555001

```

TCAP

```

SK = 6ba1b1c1          BCSM = 02
CGPN_NAI = 4           CGPN = 919818000005
CDPN_NAI = 4           CDPN = 009090919818000001

```

CDPN NPP PROCESSING

```

SERVICE NAME = idprcdpn SERVICE STATUS = ON
INC DIGITS = 009090919818000001
NAI = 4 FNAI = intl FDIGLEN = 18

```

MATCHING RULE

```

FNAI = intl FDIGLEN = 18 FPFx = 00
ACTION SET NAME = cdpn6

```

CONDITIONING RESULT

```

CA1 = fpx          EXECUTED = Y RESULT = PASS
CA2 = pfxa4        EXECUTED = Y RESULT = PASS
CA3 = cc2          EXECUTED = Y RESULT = PASS
CA4 = ac2          EXECUTED = Y RESULT = PASS

```

```

CA5 = sn8          EXECUTED = Y RESULT = PASS
INC DIGITS = 009090919818000001
COND DIGITS = 919818000001

SERVICE APPLICATION
  SA1 = ccncchk     EXECUTED = Y FORMAT = Y
  CCNC Check Passed
  SA2 = cdpnp       EXECUTED = Y FORMAT = Y
  RTDB LKPSUCC Entity=1 Cdpn=919818000001
  SA3 = lacck       EXECUTED = Y FORMAT = Y
  PPFX & PFXA FAs set to None
  SA4 = cgpnpqrq    EXECUTED = Y FORMAT = Y

FORMATING RESULT
  FA1 = fpfx        EXECUTED = Y RESULT = PASS
  FA2 = pfxa        EXECUTED = Y RESULT = PASS
  FA3 = dlma        EXECUTED = Y RESULT = PASS
  FA4 = cc          EXECUTED = Y RESULT = PASS
  FA5 = rn          EXECUTED = Y RESULT = PASS
  FA6 = ac          EXECUTED = Y RESULT = PASS
  FA7 = sn          EXECUTED = Y RESULT = PASS
  OUTG DIGITS = 00910123459818000001
  OUTG FNAI = intl
;

```

tekelecstp 09-01-05 18:20:46 EST EAGLE 40.1.0

CGPN NPP PROCESSING

```

SERVICE NAME = idprcgp SERVICE STATUS = ON
INC DIGITS = 919818000005
NAI = 4 FNAI = intl FDIGLEN = 12

```

```

MATCHING RULE
  FNAI = intl FDIGLEN = 12 PPFX = *
  ACTION SET NAME = cgpn1

```

```

CONDITIONING RESULT
  CA1 = cc2         EXECUTED = Y RESULT = PASS
  CA2 = ac2         EXECUTED = Y RESULT = PASS
  CA3 = sn8         EXECUTED = Y RESULT = PASS
  INC DIGITS = 919818000005
  COND DIGITS = 919818000005

```

```

SERVICE APPLICATION
  SA1 = cgpnp       EXECUTED = Y FORMAT = Y
  RTDB LKPSUCC Entity=1 Cgpn=919818000005

```

```

FORMATING RESULT
  FA1 = dlma        EXECUTED = Y RESULT = PASS
  FA2 = cc          EXECUTED = Y RESULT = PASS

```

;
The following command displays the output in debug format when the ISUP protocol is used.

tst-msg:msgn=1:loc=2217:prot=isup:feat=tif3:mode=debug

tklc1191001 09-01-08 08:06:03 EST EAGLE5 40.1.0

```

SERVICE NAME = tif3 SERVICE STATUS = ON
INC DIGITS = 1970442001
NAI = 4 FNAI = intl FDIGLEN = 10

```

```

MATCHING RULE
  FNAI = intl FDIGLEN = 0 PPFX = 1970
  ACTION SET NAME = temp3

```

```

CONDITIONING RESULT
  CA1 = cc1          EXECUTED = Y RESULT = PASS
  CA2 = dnx          EXECUTED = Y RESULT = PASS
  INC DIGITS = 1970442001
  COND DIGITS = 1970442001

SERVICE APPLICATION
  SA1 = nprls        EXECUTED = Y FORMAT = Y
  INDIV RLS redir=1 cause=np(0) RN=ffffff SP=dd02001

FORMATING RESULT
  FA1 = rn           EXECUTED = Y RESULT = PASS
  FA2 = cc           EXECUTED = Y RESULT = PASS
  OUTG DIGITS = fffffff1
  OUTG FNAI = intl
;

```

tst-npp-msg

Change NPP Test Service Parameters

Use this command to provision and test the NPP provided service, NPPT. The NPP Test Service allows customers to provision NPP Action Sets and Rules associated with the NPPT Service Rule Set. Customers can inject test messages to a provisioned NPPT Service Rule to verify proper digit string processing.

Keyword: **tst-npp-msg**

Command Class: Database Administration

Parameters

:digs= (mandatory)

Digits. This parameter specifies the incoming digit string for NPP to process.

Range: 1-32 digits

:loc= (mandatory)

This parameter specifies the Service Module card to which the test message is issued.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

:nai= (mandatory)

Incoming digit string Nature of Address Indicator (NAI) mapping value.

Range: 0-255

:srvn= (mandatory)

Service name. This parameter specifies the name of the NPP service that should receive the NPP Test message.

Range: **nppt**
nppt — NPP Test Service

:mode= (optional)

This parameter specifies the generated output format.

Range: **brief, full, debug**
brief — summary format
full — full format
debug — debug format

Default: **brief**

Example

tst-npp-msg:loc=1101:mode=full:digs=0ab4041234567:nai=3

Dependencies

None.

Output

When the **mode=full** or **mode=debug** parameter is specified, the FORMAT field indicates whether formatting actions are executed. If formatting actions are not executed, then the OUTG DIGITS field displays a value of UNMODIFIED. If any digit string is blank, then the associated field displays a value of EMPTY.

tst-npp-msg:loc=1101:digs=9090920292252645:nai=7:mode=full

```
SERVICE NAME = nppt SERVICE STATUS = ON
INC DIGITS = 9090920292252645
NAI = 7 FNAI = intl FDIGLEN = 16
```

MATCHING RULE

```
FNAI = intl FDIGLEN = 16 PPFX = 9090
ACTION SET NAME = set1
```

CONDITIONING RESULT

```
CA1 = ign4 EXECUTED = Y RESULT = PASS
CA2 = cc2 EXECUTED = Y RESULT = PASS
CA3 = dn10 EXECUTED = Y RESULT = PASS
INC DIGITS = 9090920292252645
COND DIGITS = 920292252645
```

SERVICE APPLICATION

```
SA1 = rtdbtrn EXECUTED = Y FORMAT = Y
```

FORMATING RESULT

```
FA1 = cc EXECUTED = Y RESULT = PASS
FA2 = rn EXECUTED = Y RESULT = PASS
FA3 = dn EXECUTED = Y RESULT = PASS
OUTG DIGITS = 92abcd0292252645
OUTG FNAI = intl
```

tst-npp-msg:loc=1101:digs=0609192252645:nai=5:mode=full

```
SERVICE NAME = nppt SERVICE STATUS = ON
INC DIGITS = 0609192252645
NAI = 5 FNAI = natl FDIGLEN = 13
```

MATCHING RULE

```
FNAI = natl FDIGLEN = 13 PPFX = 060
ACTION SET NAME = set2
```

CONDITIONING RESULT

```
CA1 = ccdef EXECUTED = Y RESULT = PASS
CA2 = ign3 EXECUTED = Y RESULT = PASS
CA3 = dn7 EXECUTED = Y RESULT = PASS
INC DIGITS = 0609192252645
COND DIGITS = 989192252
```

SERVICE APPLICATION

```
SA1 = rtdbtrnsp EXECUTED = Y FORMAT = Y
```

FORMATING RESULT

```
FA1 = rn EXECUTED = Y RESULT = PASS
FA2 = sp EXECUTED = Y RESULT = PASS
FA3 = orig EXECUTED = Y RESULT = PASS
OUTG DIGITS = 1bce0609192252645
OUTG FNAI = natl
```

tst-slk**Test Signaling Link**

Use this command for testing signaling links. The **loopback** parameter on the **tst-slk** command provides the ability to select from among the following loopback tests: local transceiver (**lxvr**), **oam**, **line**, **payload**, and either low-speed signaling links or ATM high-speed signaling links (**sltc**).

- The **tst-slk** command is not valid on TCP/IP point-to-multipoint links (SSEDCM cards or E5-ENET cards equipped as SS7IPGW and IPGWI links).
- For low-speed links, the **lxvr** and **sltc** tests are allowed.
- On LIM-ATM cards, the **lxvr**, **sltc**, **payload**, **line**, and **oam** tests are allowed.
- On TCP/IP point-to-point links (SSEDCM cards or E5-ENET cards equipped as IPLIM or IPLIMI links), **sltc** is the only supported test. The **sltc** test is allowed only for links configured with **ipliml2=m2pa**.
- On E1/T1 MIM cards, the **sltc** test is the only supported test.
- On E1 ATM cards (**atmitu** application), the **lxvr**, **oam**, and **sltc** tests are allowed.
- On E5-ENET cards running the **ipsg** application, the command is only supported for IPSPG-M2PA signaling links, and only the **sltc loopback** test is allowed.

See "Summary of Loopback Testing Commands and Functions" in Appendix A.

Keyword: **tst-slk**

Related Commands: **act-lpo**, **act-slk**, **blk-slk**, **canc-lpo**, **canc-slk**, **dact-slk**, **inh-slk**, **rept-stat-tstslk**, **rtrv-slk**, **ublk-slk**, **unhb-slk**

Command Class: Link Maintenance

Parameters

:link= (mandatory)

The signaling link on the card specified in the **loc** parameter. The links can be specified in any sequence or pattern.

Synonym: **port**

Range: **a, b, a1-a31, b1-b31**

Not all card types support all **link** parameter values.

See "Summary of Range Values for :link Parameter" for valid **link** parameter range values for each type of card that can have a location specified in the **loc** parameter.

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

:action= (optional)

Indicator of command action to stop or start a test.

Range: **start, stop**

Default: **start**

:force= (optional)

The **force=yes** parameter must be specified to start a test when there are 256 or more tests already running.

Range: **yes, no**
Default: **no**

:loopback= (optional)

Specifies the type of loopback test to run.

Range: **line, lxvr, oam, payload, sltc**

line— This test is similar to the payload loopback test, but the data transmitted to the remote system is received by the remote system's ATM driver. This test is prohibited for the E1 ATM card.

lxvr— Loopback at the local transceiver without involving the remote STP. For the ADS0, AINF, AOCU, and AV35 appliques, the MTP-2 protocol stack and ISCC hardware are tested. For AATM applique and DS1 interface, the AATM hardware, ATM level 2 protocol stack, and AAL5CP portion of ATM driver are tested,

oam— Messages are passed between local and remote systems to guarantee that the ATMM portion of ATM driver is functioning.

payload— This test is similar to the local transceiver loopback test. The wire is also tested because the loopback is at the remote's DS1 interface instead of the local's DS1 interface. This test is prohibited for the E1 ATM card.

sltc— This test can be run on either the low-speed signaling links or the ATM high-speed signaling links. This is the only test that is supported for links on the E1/T1 MIM card, and for **m2pa** links on IPLIMx cards.

Default: **sltc**

:time= (optional)

The time duration for testing the link.

Range: **1-240000**

hhmmss—*hh*=hours (**00-24**), *mm*=minutes (**00-59**), *ss*=seconds (**00-59**)

For example, **time=1** or **time=000001** is one second; **time=240000** is 24 hours;

time=200 or **time=000200** is 2 minutes.

Default: **1**

Example

```
tst-slk:loc=1203:link=a
```

```
tst-slk:loc=1203:link=a:loopback=lxvr
```

```
tst-slk:loc=1205:link=b:time=000200:force=yes:action=start
```

```
tst-slk:loc=1205:link=b:action=stop
```

```
tst-slk:loc=1205:link=b:time=200
```

Dependencies

A card location that is valid and defined in the database must be specified.

The card must be equipped and in service, and must be one of the following cards:

- An E1 ATM card running the **atmitu** application
- An E1/T1 MIM, E5-E1T1, or HC MIM card running the **ss7ansi** or **ccs7itu** application
- An E5 ATM card running the **atmansi** or **atmitu** application
- An E5-ENET card running the **ipsg** application
- An E5-ENET card or SSEDCCM card running the **iplim** or **iplimi** application with links having **ipliml2=m2pa**
- A LIM card running the **ss7ansi**, **ss7gx25**, or **ccs7itu** application

- A LIM ATM card running the **atmansi** application

The following **link** parameter values can be specified for the following cards that support more than 2 links per card:

- **a1-a3, b1-b3**—Multi-port LIM (MPL), SSEDCCM card running the **iplim** or **iplimi** application with links having **ipliml2=m2pa**, E1/T1 MIM card
- **a1-a31, b1-b31**—HC-MIM card
- **a1-a15, b1-b15**—E5-E1T1 card
- **a1-a7, b1-b7**—E5-ENET card running the **iplim** or **iplimi** application that supports 16 links.
- **a1-a15, b1-b15**—E5-ENET card running the **ipsg** application.

If the signaling link is an ATM HSL signaling link, only the **link=a** parameter can be specified.

This command is not supported for cards running the **ss7ipgw** application.

If IPSP-M2PA signaling links or IPLIMx signaling links are used, and the **ipliml2=m2pa** parameter is specified, then only the **loopback=sltc** test is allowed.

The **payload** and **line** values are not valid for the **loopback** parameter when the card is an E1 ATM.

Only the **sltc** test can be run on card types **lime1**, **limt1**, and **limch**.

The card must contain the specified signaling link.

The specified signaling link must be provisioned in the database.

The specified signaling link must be an SS7 signaling link.

The signaling link that is used for LFS (Link Fault Sectionalization) testing cannot be active.

A command is already in progress. The previously entered command for a link test must be accepted before another link test command can be entered.

This command cannot be entered if the LFS test is running on the specified link.

The specified link cannot be in Command Driven Loopback (CDL) when this command is entered. The link must be removed from CDL before this command can be entered for the link. (See the **act-cdl** and **dact-cdl** commands).

The **force=yes** parameter must be specified to start a test when 256 or more tests are already running in the system.

This command cannot be entered if the maximum number of LFS or link tests are already running in the system. At least one active test must complete before the command can be entered again.

Only one link test can be running on a signaling link at one time.

The **action=stop** parameter cannot be specified when there is no active link test running on the specified link.

When the **action=stop** parameter is specified, the **loopback**, **time**, and **force** parameters cannot be specified.

If an IPSP-M3UA signaling link is used, then this command cannot be entered.

If an IPSP-M2PA signaling link is used, the **loopback=sltc** parameter must be specified.

The card must be equipped and in service, and must be one of the following cards:

- An E1 ATM card running the **atmitu** application
- An E1/T1 MIM, E5-E1T1, or HC MIM card running the **ss7ansi** or **ccs7itu** application
- An E5 ATM card running the **atmansi** or **atmitu** application

- An E5-ENET card running the **ipsg** application
- An E5-ENET card or SSEDCCM card running the **iplim** or **iplimi** application with links having **ipliml2=m2pa**
- A LIM card running the **ss7ansi**, **ss7gx25**, or **ccs7itu** application
- A LIM ATM card running the **atmansi** application

Notes

The **lxvr** and **sltc** loopback tests can be run on low-speed signaling links. All the loopback tests can be run on the ATM high-speed signaling links.

This command cannot be used with X.25 signaling links.

Output

If the card is inhibited, not in service, the following message appears when you try to test the links on the card:

```
tst-slk:loc=1203:link=a
rlghncxa03w 03-11-07 16:19:08 EST  EAGLE 31.3.0
Command Rejected : Card is not in service.
;

tst-slk:loc=1205:link=b:time=000200:force=yes:action=start
tekelecstp 03-11-27 16:15:20 EST  EAGLE 31.3.0
tst-slk:loc=1205:link=b:time=000200:force=yes:action=start
Command Accepted: Test Link message is sent.
;

tekelecstp 03-11-27 16:15:22 EST  EAGLE 31.3.0
Command Completed.
;

tekelecstp 03-11-27 16:22:25 EST  EAGLE 31.3.0
LOC = 1205  Link = B  LSN = ls12345678  Start time = 16:22:25
LOOPBACK = SLTC      TIME = 00:02:00
TEST STATUS = Loopback success
;

tst-slk:loc=1205:link=b:action=stop
tekelecstp 03-11-27 16:15:20 EST  EAGLE 31.3.0
tst-slk:l oc=1205:link=b:action=stop
Command Accepted: Stop Test Link message is sent.
;

tekelecstp 03-11-27 16:15:22 EST  EAGLE 31.3.0
Command Completed.
;

tekelecstp 03-11-27 16:22:25 EST  EAGLE 31.3.0
LOC = 1205  = B  LSN = ls12345678  Start time = 16:22:25
LOOPBACK = LXVR      TIME = 00:01:00
TEST STATUS = Loopback cleared
;

tst-slk:loc=1205:link=b:time=200
tekelecstp 03-11-27 16:15:20 EST  EAGLE 31.3.0
tst-slk:loc=1205:link=b:time=200
Command Accepted: Stop Test Link message is sent.
;

tekelecstp 03-11-27 16:15:22 EST  EAGLE 31.3.0
Command Completed.
;

tekelecstp 03-11-27 16:22:25 EST  EAGLE 31.3.0
LOC = 1205  Link = B  LSN = ls12345678  Start time = 16:22:25
LOOPBACK = SLTC      TIME = 00:00:53
TEST STATUS = Loopback failed
;
```

Legend

LOC—Card location that contains the signaling being tested.

LINK—Signaling link being tested on the card.

LSN—Name of the linkset that contains the link being tested.

START TIME—Time that the test started.

LOOPBACK—Type of loopback test being run.

TIME—Length of time that the test ran. This value can exceed the value that was specified in the **time** parameter if the test requires more than the specified time to complete.

TEST STATUS—

- When a **tst-slk** command with **action=start** (specified or default) is entered, any one of the following *TEST STATUS* values can appear:
 - Loopback success
 - Loopback failed
 - Loopback aborted
 - Loopback in-progress
 - Loopback prevented
 - Loopback invalid
- When a **tst-slk** command with **action=stop** is entered, any one of the following *TEST STATUS* values can appear:
 - Loopback cleared
 - Loopback could not be cleared

tst-t1

Test T1 Port

Use this command to test T1 Ports on the HC-MIM and E5-E1T1 cards. The loopback parameter provides the ability to select local transceiver (**lxvr**) and line loopback tests.

The **tst-t1** command is rejected if a loopback test is not compatible with the port type.

Keyword: **tst-t1**

Related Commands: **chg-t1, dlt-t1, ent-t1, rtrv-t1**

Command Class: System Maintenance

Parameters

:loc= (mandatory)

Card location. The HC-MIM or E5-E1T1 card location as stenciled on the shelf of the system.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118**

:t1port= (mandatory)

T1 port number. The value must be a T1 port that has already been configured with a T1 interface on the specified HC-MIM or E5-E1T1 T1 card.

Range: **1-8**

Ports 3 - 8 can be specified only for HC-MIM and E5-E1T1 cards.

:action= (optional)

Indicator of command action to stop or start a test.

Range: **start, stop**

Default: **start**

:loopback= (optional)
 Select loopback test type.
Range: **line, lxvr**
Default: **lxvr**

Example

```
tst-t1:t1port=1:loc=1203:loopback=lxvr
tst-t1:t1port=1:loc=1203:action=stop
```

Dependencies

This command cannot be entered during upgrade.

The card in the specified card location (**loc** parameter) must be an HC-MIM or E5-E1T1 card with card type **limt1**.

The card in the specified card location (**loc** parameter) must be equipped.

The card in the specified card location (**loc** parameter) must be in service.

The specified T1 port (**t1port** parameter) on the card (**loc** parameter) must have a defined T1 interface.

All signaling links that provide timeslots serviced by T1 interfaces on the specified card (**loc** parameter) must be deactivated before this command can be entered. None of the signaling links can be running link diagnostic tests (**tst-slk** and **act-cdl** commands) when this command is entered.

Only one port test can be running on a T1 port (**t1port** parameter) at one time.

When the **action=stop** parameter is specified, the **loopback** parameter cannot be specified.

The **action=stop** parameter can be specified only when a port test is running.

Notes

This command can be used only for HC-MIM and E5-E1T1 card ports.

Only one port test can be performed at a time on a T1 port. When a port test is in progress on a T1 port, subsequent test requests are rejected.

Output

```
tst-t1:t1port=1:loc=1203:loopback=lxvr

rlghncxa03w 05-01-07 16:19:08 EST  EAGLE5 33.0.0
Command Accepted: Test Port message is sent.
;
rlghncxa03w 05-01-07 16:19:08 EST  EAGLE5 33.0.0
Command Completed.
;

tst-t1:t1port=1:loc=1203:action=stop

rlghncxa03w 05-01-07 16:19:08 EST  EAGLE5 33.0.0
Command Accepted: Stop Port test message is sent.
;

tekelecstp 03-12-16 14:31:23 EST  EAGLE5 33.0.0
Command Completed.
;
```

ublk-slk

Unblock Signaling Link

Use this command to cancel a local processor outage (LPO) and restore the link to its previous state. Link status signal units (LSSU) with status of processor outage are stopped, and the link begins

sending MSUs again. IPSP-M3UA signaling links are allowed to enter service by allowing received AS-ACTIVE messages to be accepted.

NOTE: The blocked status of the signaling link is not preserved across a LIM reboot.

Keyword: ublk-slk

Related Commands: act-lpo, blk-slk, canc-lpo

Command Class: Link Maintenance

Parameters

:link= (mandatory)

The signaling link on the card specified in the **loc** parameter. The signaling links can be specified in any sequence or pattern.

Synonym: port

Range: a, b, a1-a31, b1-b31

Not all card types support all **link** parameter values.

See "Summary of Range Values for :link Parameter" for valid **link** parameter range values for each type of card that can have a location specified in the **loc** parameter.

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Example

ublk-slk:loc=2311:link=b

Dependencies

A card location that is valid and defined in the database must be specified.

No other action command can be in progress when this command is entered.

The card must be equipped and must be one of the following cards:

- A LIM card running the **ss7ansi**, **ss7gx25**, **atmansi**, or **ccs7itu** application
- An E1 ATM card running the **atmitu** application
- An SSEDCCM card running the **iplim** or **iplimi** application with links having **ipliml2=m2pa**
- An E1/T1 MIM card or an HC-MIM card running the **ss7ansi** or **ccs7itu** application
- An E5-ENET card running the **iplim**, **iplimi**, or **ipsg** application
- An E1/T1 MIM, an HC-MIM or and E5-E1T1 card running the **ss7ansi** or **ccs7itu** application

This command can be entered only for IPLIMx signaling links that have an **ipliml2** parameter setting of **m2pa**.

The **ublk-slk** command is not valid for SSEDCCM cards or E5-ENET cards with **ss7ipgw** or **ipgwi** TCP/IP links.

The card must contain signaling links.

The signaling link must be equipped in the database.

The following **link** parameter values can be specified for the following cards that support more than 2 links per card:

- **a1-a3, b1-b3**—Multi-port LIM (MPL, MPL-T), SSED CM card running the **iplim** or **iplimi** application with links having **ipliml2=m2pa**, E1/T1 MIM card
- **a1-a31, b1-b31**—HC-MIM card
- **a1-a15, b1-b15**—E5-E1T1 card
- **a1-a7, b1-b7**—E5-ENET card running the **iplim** or **iplimi** application that supports 16 links.
- **a1-a15, b1-b15**—E5-ENET card running the **ipsg** application.

The card in the specified card location cannot be a TDM card, an MDAL card, an HMUX or HIPR card, or the cards running the OAM application.

This command is not valid for links belonging to proxy linksets.

Notes

Unblocking a signaling link removes a Level 2 failure resulting from a **blk-slk** of an ATM high-speed signaling link.

The function of this command is the same as the **canc-lpo** command.

The *Installation Manual – EAGLE 5 ISS* provides an illustration of card locations.

Output

```
ublk-slk:loc=2311:link=b
    rlghncxa03w 03-03-07 11:11:28 EST EAGLE 31.3.0
    Local processor outage being cleared.
;
ublk-slk:loc=1113:link=a
    rlghncxa03w 03-03-07 11:11:28 EST EAGLE 31.3.0
    Command Rejected : Location is not valid for command.
;
```

unhb-alm

Restore Alarm Reporting

Use this command to restore the reporting of alarms for the given device.

Keyword: unhb-alm

Related Commands: inh-alm, rept-stat-alm, rept-stat-card, rept-stat-cdt, rept-stat-dlk, rept-stat-dstn, rept-stat-ls,, rept-stat-rte, rept-stat-rtx, rept-stat-seas, rept-stat-slk, rept-stat-sys, rept-stat-trbl, rept-stat-trm, rtrv-log

Command Class: System Maintenance

Parameters

NOTE: See "Point Code Formats and Conversion" for a detailed description of point code formats, rules for specification, and examples.

:dev= (mandatory)

Device. This parameter specifies the device where the reporting of alarms is to be restored.

Range: **applsock**, **as**, **card**, **cdt**, **clock**, **dlk**, **e1port**, **ls**, **lmsconn**, **route**, **seasx25**, **slk**, **t1port**, **trm**, **rtx**
applsock— IP gateway application socket
as— IP gateway application Application Server
card— Cards in the database
cdt— Customer defined troubles
clock— System clock

dlk— The IP ports on the VSCCP, EROUTE, SLAN, VXWSLAN and MCP application cards.

e1port— E1 port on E1/T1 MIM or HC-MIM cards

ls— Linksets

lsmsconn— Communication link between the LSMS and the EMS

route— Route

seasx25— SEAS X.25 links

slk— Signaling links

t1port— T1 port on E1/T1 MIM or HC-MIM cards

trm— Terminals

rtx— Exception Route

:asname= (optional)

Gateway Application Server name. When used with the **dev=as** parameter, this parameter can be used to uninhibit alarms for the named Application Server.

Range: *aaaaaaaaaaaaa*

Up to 15 alphanumeric characters; the first character must be a letter

:cic= (optional)

Starting Circuit Identification Code. This parameter is used alone or together with the **ecic** parameter to define the CIC range, which is used as an exception routing criterion for the specified exception route.

Range: **0-16383**

:dpc= (optional)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*). The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: **dpca**

Range: **p-, 000-255, ***

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

The asterisk value (*) is not valid for the *ni* subfield.

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:dpc/dpca/dpci/dpcn/dpcn24= (optional)

Destination point code for inhibiting alarms for routes.

:dpci= (optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:dpcn= (optional)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:dpcn24= (optional)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point*. The *prefix* subfield indicates a private point code.

Range: **p-, 000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p-**

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:e1port= (optional)

Port ID. This parameter specifies the E1 port on the specified HC-MIM card. This parameter is mandatory if **dev=e1port** is specified.

Range: **1-8**

Ports 3 through 8 can be specified only for HC-MIM cards.

:ecic= (optional)

Ending Circuit Identification Code. This parameter is used with the **cic** parameter to define the CIC range, which is used as an exception routing criterion for the specified exception route.

Range: **0-16383**

:id= (optional)

Customer Defined Trouble (CDT) ID. Customer Defined Trouble IDs 1 through 4 are generated critical alarms. Because critical alarms cannot be turned off, Customer Defined Trouble IDs 1 through 4 cannot be specified as values for the **id** parameter. This parameter is mandatory if **dev=cdt** is specified.

Range: **5-16**

:ilsn= (optional)

Incoming Link Set Name. This parameter contains the name of the originating linkset. The parameter value is used as part of the exception routing criteria for the specified exception route.

Range: *ayyyyyyy*

1 alphabetic character followed by up to 9 alphanumeric characters

:link= (optional)

Signaling link on the card specified in the **loc** parameter.

Synonym: **port**

Range: **a, b, a1-a31, b1-b31**
a, b—For **dev=dlk**, **dev=slk** for a two-port LIM
a1, a2, b1, b2—For **dev=seasx25/lsmconn**
a, b, a1, b1, a2, b2, a3, b3—For **dev=slk** for a multi-port LIM
a, b, a1-a31, b1-b31—For **dev=slk** for an HC-MIM

:loc= (optional)

The card location as stenciled on the shelf of the system.

Range: **1101-1113, 1115, 1201-1218, 1301-1318, 2101-2118, 2201-2218, 2301-2318,**
3101-3118, 3201-3218, 3301-3318, 4101-4118, 4201-4218, 4301-4318, 5101-5118,
5201-5218, 5301-5318, 6101-6118

:lsn= (optional)

Linkset name. The name of the linkset containing the device where alarm reporting is to be restored.

Range: **ayyyyyyyyy**
 1 alphabetic character followed by up to 9 alphanumeric characters

:opc= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*). The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Synonym: **opca**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:opc/opca/opci/opcn/opcn24= (optional)

Origination point code

:opci= (optional)

ITU international origination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:opcn= (optional)

ITU national origination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code, private point code, or private and spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, p-, ps-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s**-, **p**-, **ps**-

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:opc**n24**= (optional)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point (msa-ssa-sp)*. The *prefix* subfield indicates a private point code (*prefix-msa-ssa-sp*).

Range: **p**-, **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**p**-

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:si= (optional)

Service Indicator. This parameter is used as the exception routing criterion for the specified exception route.

Range: **0-15**

:sname= (optional)

Gateway application socket. When used with the **dev=applsock** parameter, this parameter can be used to uninhibit alarms for the named IP⁷ application socket.

Range: *ayyyyyyyyyyyyyyy*

1 to 15 alphanumeric characters

:t1port= (optional)

Port ID. T1 port on the specified HC-MIM card. This parameter is mandatory if **dev=t1port** is specified.

Range: **1-8**

Ports 3 through 8 can be specified only for HC-MIM cards.

:trm= (optional)

Terminal ID. This parameter specifies the ID number of the terminal whose alarms are to be uninhibited.

Range: **1-40**

Default: Report displays on the terminal where the command was issued.

Example

unhb-alm:dev=route:dpc=1-1-1

unhb-alm:dpc=1-101-1:opc=4-4-4:dev=rtx

Dependencies

This command is not allowed in the upgrade mode.

No other action command can be in progress when this command is entered.

When the **dev=card** parameter is specified, the **loc** parameter must be specified.

When the **dev=dlk** parameter is specified, the **loc** parameter must be specified.

When the **dev=slk** parameter is specified, the **loc** parameter and the **link** parameter must be specified.

When the **dev=e1port** parameter is specified, the **loc** parameter and the **e1port** parameter must be specified.

When the **dev=t1port** parameter is specified, the **loc** parameter and the **t1port** parameter must be specified.

When the **dev=ls** parameter is specified, the **lsn** parameter must be specified.

When the **dev=trm** parameter is specified, the **trm** parameter must be specified.

When the **dev=cdt** parameter is specified, the **id** parameter must be specified.

When the **dev=seasx25** parameter is specified, the **link** parameter must be specified.

When the **dev=lsmsconn** parameter is specified, the **link** parameter must be specified.

When the **dev=route** parameter is specified, a **dpc/dpca/dpci/dpcn/dpcn24** parameter must be specified.

When the **dev=applsock** parameter is specified, the **sname** parameter must be specified.

When the **dev=as** parameter is specified, the **asname** parameter must be specified.

The linkset specified by the **lsn** parameter must be equipped in the database.

If the **dpcn** parameter is specified, its format must match the format that was assigned with the **chg-stpopts:npcfmti** parameter.

If the **dev=slk** parameter or **dev=dlk** parameter is specified, the specified **link** must exist in the database.

The STP Options table must be accessible.

Table 5-75 shows the valid parameter combinations for the **unhb-alm** command.

Table 5-75. Parameter Combinations for the unhb-alm command

Value (:dev)	a	a	c	c	d	e	l	l	n	n	r	s	s	t	t	r
Device Parameter	p	s	a	d	l	l	s	s	d	d	e	l	l	r	s	
	p	r	t	o	k	p	m	c	c	u	a	k	p	m		
	l	d	c	o	s	l	q	t	s							
	s		k	r	c	k	3	e	x							
	o				t				2							
	c								5							
	k						n									
No Parameters				x					x							
:asname		x														
:dpc/dpca/dpci/dpcn/dpcn24										x						
:id				x												
:loc			x		x	x						x	x			
:lsn							x									
:e1port=1-8						x										
:link=a, b					x							x				

Table 5-75. Parameter Combinations for the **unhb-alm** command

Value (:dev)	a	a	c	c	d	e	l	l	n	n	r	s	s	t	t	r
Device Parameter	p	s	a	d	l	l	s	s	d	d	o	e	l	l	r	s
	p	r	t	o	k	p	m	c	c	u	a	k	p	m		
	l	d	c	o	s	l	q	t	s	o						
	s		k	r	c	k	3	e	x	r						
	o			t	o				2	t						
	c								5							
	k						n									
:link=a, b, a1, a2, b1, b2, a3, a3												x				
:link=a1, a2, b1, b2							x	x			x					
:link=a, b, a1-a31, b1-b31					x									x		
:sname	x															
:t1port=1-8														x		
:trm															x	
:rsn																x

If the **sname** parameter is specified, the socket name must exist in the IPAPSOCK table.

If a point code parameter is specified, the point code must exist in the Routing table.

The card location that is specified in the **loc** parameter must be equipped.

The specified device type must be supported by the card in the specified card location.

The Origin-Based MTP Routing feature must be enabled and turned on before specifying the **dev=rtx** parameter.

When the **dev=ndclk** parameter is specified, the **link** parameter must be specified.

The **link** parameter must be valid for the selected device type.

Notes

In this command, only ITU-international and ITU national point codes support the spare point code subtype prefix (**s-**) and the private and spare point code subtype prefix (**ps-**). All of the point code types support the private (internal) point code subtype prefix (**p-**).

Output

```

unhb-a lm:dev=route:dpc=1-1-1
    rlghncxa03w 03-03-23 13:20:59 EST  EAGLE 31.3.0
    Alarms are inhibited.

    rlghncxa03w 03-03-23 13:20:59 EST  EAGLE 31.3.0
    Command Completed.
;

unhb-a lm:dpc=1-101-1:opc=4-4-4:dev=rtx
    stdcfg2b 06-05-27 20:22:02 EST  EAGLE 35.0.0
    Alarms are enabled
    Command Completed.
;

```

unhb-slk**Uninhibit Signaling Link**

Use this command to return an inhibited signaling link to service. If the link was aligned when it was inhibited, a changeover occurred. This command causes a changeback on the specified link. MSUs are transmitted on the link after the changeback is issued.

NOTE: The inhibited status of the signaling link is not preserved across a LIM reboot.

Keyword: unhb-slk

Related Commands: act-slk, blk-slk, dact-slk, dlt-slk, ent-slk, inh-slk, rept-stat-slk, rtrv-slk, tst-slk, ublk-slk

Command Class: Link Maintenance

Parameters

:link= (mandatory)

The signaling link on the card specified in the **loc** parameter. The signaling links can be specified in any sequence or pattern.

Synonym: port

Range: a, b, a1-a31, b1-b31

Not all card types support all **link** parameter values.

See "Summary of Range Values for :link Parameter" for valid **link** parameter range values for each type of card that can have a location specified in the **loc** parameter.

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

Example

```
unhb-slk:loc=1301:link=a
```

Dependencies

A card location that is valid and defined in the database must be specified.

No other action command can be in progress when this command is entered.

The card must be equipped and must be one of the following cards:

- An E1 ATM card running the **atmitu** application

- An E1/T1 MIM, E5-E1T1, or HC MIM card running the **ss7ansi** or **ccs7itu** application
- An E5 ATM card running the **atmansi** or **atmitu** application
- An E5-ENET card running the **ipsg** application
- An E5-ENET card or SSEDCCM card running the **iplim** or **iplimi** application with links having **ipliml2=m2pa**
- A LIM card running the **ss7ansi**, **ss7gx25**, or **ccs7itu** application
- A LIM ATM card running the **atmansi** application

The card must contain signaling links.

The signaling link must be equipped in the database.

The inhibit and uninhibit actions are valid for links on IPLIMx SSEDCCMs that have **ipliml2=m2pa**.

The following **link** parameter values can be specified for the following cards that support more than 2 links per card:

- **a1-a3, b1-b3**—Multi-port LIM (MPL),
- An SSEDCCM card running the **iplim** or **iplimi** application with links having **ipliml2=m2pa**
- **a1-a31, b1-b31**—HC-MIM card
- **a1-a15, b1-b15**—E5-E1T1 card
- **a1-a7, b1-b7**—E5-ENET card running the **iplim** or **iplimi** application that supports 16 links.
- **a1-a15, b1-b15**—E5-ENET card running the **ipsg** application.

The card in the specified card location cannot be a TDM card, an MDAL card, an HMUX or HIPR card, or the cards running the OAM application.

This command is not valid on TCP/IP point to multipoint links (DCM cards equipped as SS7IPGW links).

If an IPSG-M3UA signaling link is used, then this command cannot be entered.

The card must be equipped and must be one of the following cards:

- An E1 ATM card running the **atmitu** application
- An E1/T1 MIM, E5-E1T1, or HC MIM card running the **ss7ansi** or **ccs7itu** application
- An E5 ATM card running the **atmansi** or **atmitu** application
- An E5-ENET card running the **ipsg** application
- An E5-ENET card or SSEDCCM card running the **iplim** or **iplimi** application with links having **ipliml2=m2pa**
- A LIM card running the **ss7ansi**, **ss7gx25**, or **ccs7itu** application
- A LIM ATM card running the **atmansi** application

Notes

This command is not valid on TCP/IP point to multipoint links (SSEDCCM cards or E5-ENET cards equipped as SS7IPGW or IPGWI links or E5-ENET cards equipped as IPSG-M3UA links). TCP/IP point to point links (IPLIM and IPLIMI) can be uninhibited.

The function of this command is the same as the **canc-lpo** command.

The *Installation Manual – EAGLE 5 ISS* provides an illustration of card locations.

Output

```
unhb-sl k: loc=1301: link=a
    rlghncxa03w 03-03-23 13:20:59 EST  EAGLE 31.3.0
    Allow Link message sent to card
;
```

unlock**Unlock Keyboard**

Use this command to unlock a previously locked terminal keyboard. Anyone attempting to use the keyboard is prompted to enter the password of the currently logged-in user.

Keyword: unlock

Related Commands: lock

Command Class: Basic

Parameters

This command has no parameters.

Example

```
unlock
```

Dependencies

You must enter the password of the logged in user to unlock the keyboard.

This command is valid only if the keyboard is locked.

The port must not be in an unlock disabled state because of excessive successive unlock failures.

Notes

None

Output

```
unlock
Enter LOGIN password to unlock keyboard :
```


Debug Commands

Introduction

This chapter contains information about debug commands used in troubleshooting and debugging the system. These commands are intended only for Tekelec Technical Services personnel and authorized engineering personnel in the operating companies. The use of these commands is restricted to personnel who have access to the command class Debug.



CAUTION: These commands are to be used precisely as they are described in this chapter, and only under the direction of Tekelec Technical Services personnel. Any other use of these commands can result in a system failure.

This chapter contains the debug commands in alphabetical order.

act-upgrade

Activate Upgrade

Use this command to perform a software upgrade from a source release to the target release on an in-service system.



CAUTION: It is strongly recommended that this command be used only in conjunction with the system Upgrade Procedure for your target release. The Upgrade Procedure provides step-by-step information on performing an upgrade.

Keyword: act-upgrade

Related Commands: rept-stat-db

Command Class: Debug

Parameters

:action= (mandatory)

This parameter specifies the action to be performed for the upgrade process.



CAUTION: The **converttoam**, **convertnet**, and **netcomplete** actions should be used only under the direction of Tekelec personnel.

Range: yyyyyyyyyy

Up to 10 alphabetic characters. Valid actions are:

- **chkrel**—Validates the stored upgrade target release on the physical disk as specified by the **src** parameter with the software access key.
- **converttoam**—Converts the standby OAM database.
- **convertnet**—Performs an inhibit/allow sequence for each network card. This sequence effects the controlled loading of the new release generic program load (GPL) and of the converted database. Requires upgrade phase indicator of 3.
- **convertstp**—Performs all OAM and network conversions necessary for an upgrade. This command transitions through all of the upgrade phases to upgrade completion. If measurement collection is turned on, this command automatically inhibits measurements during the upgrade. Upon completion of the upgrade, this command returns the MASP's to full-function mode with measurement collection turned back on.
- **dbstatus**—Reports the status of all database partitions on the TDM fixed disks and the removable drive(s) (similar to the **rept-stat-db:display=version** command).
- **getrel**—Retrieves the upgrade target release file from either the EAGLE 5 ISS software release distribution server or the credit card USB. It then expands the data on the inactive partition group of the hard disks.
- **netcomplete**—Indicates upgrade completion and places the system in a fully functional mode.
- **oamcomplete**—Sets the upgrade phase number to 3, enables the beginning of controlled card loading, and allows OAP terminals to be attached.

:appl= (optional)

This parameter specifies the name of the GPL on which to perform the network upgrade.

Range: ayyyyyyy

1 alphabetic character followed by up to 7 alphanumeric characters. Use the **rept-stat-gpl** command or the **rtrv-gpl** command to obtain the valid GPLs.

Default: all

:dest= (optional)

This parameter specifies the disk that is used as the physical work area for the conversion of the database.

Range: **fixed, remove**

fixed— Convert the database on the fixed disk

remove— Convert the database on the removable cartridge

This parameter cannot be specified for E5-MDAL or E5-MCAP cards.

:force= (optional)

This parameter forces a command to be executed if the **action=convertnet** parameter is specified. If the **action=convertnet** parameter is specified, and if all cards of the specified GPL type are not in the In-Service Normal state or Out-Of-Service Maintenance-Disabled state, then the **force** parameter must be specified. In this case, minimum service may not be maintained when the command is executed with the **force** parameter.

If the **action=convertnet** parameter is not specified, then the **force** parameter is ignored.

Range: **yes, no**

Default: no

:release= (optional)

This parameter specifies the name of the EAGLE 5 ISS software release file to be downloaded.

This file contains the upgrade target release on the EAGLE 5 ISS software release distribution server or credit card USB.

Range: xxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxx
 1 alphabetic character followed by up to 29 alphanumeric characters. One or more periods can be used.

:src= (optional)

This parameter specifies the physical disk that contains the upgrade target release.

Range: **fixed, remove, usb, server**

fixed — The upgrade target release is on the fixed disk

remove — The upgrade target release is on the removable cartridge

usb — The upgrade target release is on the credit card drive

server — The upgrade target release is on the remote server

The **src=remove** parameter cannot be specified for E5-MDAL or E5-MCAP cards.

:thres= (optional)

Network Threshold value. This parameter specifies the percentage of signaling links that are to remain in service (IS) during the network conversion phase and enables SCCP thresholding and flashing on non-provisioned cards during the upgrade.

Range: **50 - 90**

Default: The network cards are updated serially.

Example

act-upgrade:action=convertstp

act-upgrade:action=dbstatus

act-upgrade:action=convertstp:dest=remove

The following shows a variation of the getrel option that finds the release on the credit card usb instead of through the E5-IPSM card.

act-upgrade:action=getrel:release="37.5.2-58.41.2.tar.gz":src=usb

act-upgrade:action=chkrel:src=fixed

Dependencies

Table 6-1 lists the actions (**action** parameter values) that correspond to a given upgrade mode. An action is accepted only when the system is in the corresponding upgrade mode.

Table 6-1. Actions with Corresponding Upgrade Phase

Action	Corresponding Upgrade Phase
action=converttoam	0 and 1
action=oamcomplete	2
action=convertnet	3
action=netcomplete	3
action=convertstp	0 through 3

If measurement collection is enabled, the **act-upgrade:action=convertstp** command automatically inhibits measurement collection during the upgrade. Before returning to full function mode, measurements are turned back on. The following actions require that you manually inhibit measurements: **converttoam**, **oamcomplete**, **convertnet**, and **netcomplete**.

The valid release upgrade disk must be inserted in the MDAL drive.

The standby OAM database must be the source release.

The current OAM database must be the source release.

The database partition must be coherent.

The database partition must be in the correct functional mode.

If the **appl** parameter is specified, then the **action=convertnet** parameter must be specified. If the **action=convertnet** parameter is specified, then the **appl** parameter must be specified.

If the **force** parameter is specified, then the **action=convertnet** parameter must be specified.

If the **action=convertnet** parameter is specified, and if all cards of the specified GPL type are not in the In-Service Normal state or Out-Of-Service Maintenance-Disabled state, then the **force** parameter must be specified. In such cases, minimum service may not be maintained.

If the **thres** parameter is specified, then the **action=convertnet** and **action=convertstp** parameters must be specified.

The destination of a static IP route or the local interface network address of an IP card cannot be the same as the EAGLE 5 ISS PVN, FCNA, or FCNB network address.

Upgrade conversion cannot be initiated from a telnet-type terminal (terminal IDs 17-40).

TALI sockets cannot be configured in the system.

ISUP Normalization feature-related configuration cannot be present in the system.

The dual-slot DCM card (card type **dcm**) is obsolete for **ss7ipgw**, **ipgwi**, **iplim**, and **iplimi** applications.

TALI links cannot be configured in the system.

The **action=getrel** parameter and the **release** parameter must be specified together in the command.

An E5-IPSM card must be provisioned and in service before a value of **getrel** or **chkrel** can be specified for the **action** parameter.

The **ent-ftp-serv:app=dist** command must be entered before a value of **getrel** or **chkrel** can be specified for the **action** parameter.

If the **dest=remove** parameter is specified, then the **src=fixed** and **src=usb** parameters cannot be specified.

An E5-MCAP card must be provisioned in the system before the **src=usb** parameter can be specified.

If the **src=fixed** parameter is specified, then a removable cartridge or credit card drive cannot be inserted.

If the **src=remove** parameter is specified, then a removable cartridge must be inserted in the system.

If an E5-MCAP or E5-MDAL card is used, then the **src=remove** parameter cannot be specified.

Invalid hardware configuration alarms are set or an HMUX alarm must be addressed.

All cards that are in the auto-inhibited state must be removed before this command can be entered.

Cards that prevent the IMT buses from being inhibited during the upgrade cannot exist in the system.

The specified source drive is not at the correct database version for the upgrade to proceed.

The removable cartridge cannot contain an EAGLE 5 ISS backup image.

If the **src=usb** parameter is selected, then the credit card USB upgrade media must be inserted in the Active OAMs flush mount USB slot.

The internal ramdisk is not available for the credit card USB upgrade image to be unpackaged.

The disk that contains the upgrade target release is in an unknown upgrade mode.

If the **src=usb** or **src=server** parameter is specified, then the **action=getrel** parameter must be specified. If the **src=remove** or **src=fixed** parameter is specified, then the **action=getrel** parameter cannot be specified.

Notes

For the **appl** parameter, the list of valid GPLs varies from release to release. The **rtrv-gpl** command can be used (when in full function mode) to obtain a list of the GPLs currently resident on the TDMs. The **rept-stat-gpl** command can be used to obtain a list of the GPLs currently active on provisioned network cards.

The **act-upgrade:action=convertstp** command executes all four upgrade phases consecutively.

If the **act-upgrade:action=convertstp** command is entered following a command abort, the upgrade processing determines the last upgrade phase that was successfully completed. The upgrade processing then attempts to restart from that point to successful completion. Re-entering the **act-upgrade:action=convertstp** command following a command abort is the recommended method for recovery.

The TDMs and removable cartridge have upgrade phase indicators. The upgrade command expects the disks to be in certain phases before executing a specific action. If the disks are not in the correct phases, an error is generated.

The command **act-upgrade:action=dbstatus** generates output similar to that provided by the command **rept-stat-db:display=version**.

The **thres** parameter is used for the following purposes:

- Allows for multiple cards to be upgraded together, as long as the specified percentage of links remain in service. If no **thres** parameter is specified, the cards are upgraded serially. The value is applied to groups of links based upon the link-supporting GPL being upgraded.
- Enables SCCP thresholding, which allows multiple SCCP or VSCCP cards to be upgraded together. The specified **thres** parameter value is not used to determine the number of SCCP cards to upgrade. The peak SCCP load since the last OAM boot is used to determine the number of cards that must remain in service (at least half of the cards must remain in service).
- Enables the non-provisioned flash function, which flash-downloads any boot-prom type card if the card is in the system but not provisioned.

The **act-upgrade:action=getrel** action defaults to getting the release from the provisioned E5-IPSM card using the provisioned FTP Server. If the **src=usb** parameter is specified, and an E5-MCAP card is used, then the release is obtained from the credit card USB upgrade media.

Output

NOTE: The **act-upgrade:action=convertstp** command performs the OAM conversion and the network conversion. During the conversion, this command broadcasts the current activity in the scroll area. Refer to Appendix B of the EAGLE 5 ISS Release Software Upgrade Procedure for a sample of message output.

The action **dbstatus** reports the current database status.

act-upgrade:action=dbstatus

tekelecstp 03-08-01 08:30:00 EST Rel 31.3.0 Upg Phase 2

DATABASE STATUS: >> OK <<

TDM 1114 (STDBY)				TDM 1116 (ACTV)			
	C	LEVEL	TIME LAST BACKUP		C	LEVEL	TIME LAST BACKUP
FD BKUP	Y	1	03-08-01 08:30:00	EST	Y	1	03-08-01 08:30:00
FD CRNT	Y	1			Y	1	

MDAL 1117

	C	LEVEL	TIME LAST BACKUP
RD BKUP	Y	1	

	CARD/APPL	LOC	C	T	LEVEL	TIME LAST UPDATE	VERSION STATUS
UPG 2	TDM-CRNT	1114	Y	N	1	03-08-01 08:30:00	123-001123-000-000
UPG 2	TDM-BKUP	1114	Y	-	1	03-08-01 08:30:00	123-001123-000-000
UPG 2	TDM-CRNT	1116	Y	N	1	03-08-01 08:30:00	123-001123-000-000
UPG 2	TDM-BKUP	1116	Y	-	1	03-08-01 08:30:00	123-001123-000-000
UPG 2	MDAL	1117	Y	-	1	-----	123-001123-000-000

	CARD/APPL	LOC	C	T	LEVEL	TIME LAST UPDATE	VERSION STATUS
	TDM-CRNT	1114	Y	N	1	03-08-01 08:30:00	118-000-000 NORMAL
	TDM-BKUP	1114	Y	-	1	03-08-01 08:30:00	118-000-000 NORMAL
	TDM-CRNT	1116	Y	N	1	03-08-01 08:30:00	118-000-000 NORMAL
	TDM-BKUP	1116	Y	-	1	03-08-01 08:30:00	118-000-000 NORMAL

;

cdu

CAP Downloadable Utility

The CAP Downloadable Utility (CDU) is a diagnostic program that can be downloaded to any card including the DSM/DCM cards on the system by entering the **alw/rst-card:loc= xxxx :code=utility** command.

This command is used to enter commands to perform diagnostic functions. The command syntax is as follows:

cdu:loc=xxxx:cmd="command string"

where the **loc** and **cmd** parameters are mandatory parameters for the **cdu** command. The command string, which is enclosed in double quotes (" "), specifies the diagnostic function to perform and includes any optional or mandatory parameters for the specified **cmd** keyword.

The **cd** command uses the VCDU or CDU GPL. The DSM board can hold up to 4 GB of memory. The CDU or the VCDU utility is downloaded automatically depending on the type of the board. For the DSM the VCDU utility is downloaded; for the TSM the CDU utility is downloaded.

Keyword: `cdu`

Related Commands:

Command Class: Debug

Parameters

:cmd= (mandatory)

The commands that are used to perform diagnostic functions. The command string contains a keyword (listed in the following Range section) and one or more parameters (listed in the Subrange section that follows the Range section). The command string must be enclosed in double quotes (“”).

Range: *zzzzzzzzzzzzzzzzzzzzzzzzzzzz*

The keywords used in the command strings are:

- **act-memtest**—Starts the memory test.
- **canc-memtest**—Stops the memory test. This command has no parameters.
- **dump-memtest**—Displays the memory test results continuously without any other output messages. This command has no parameters.
- **rtrv-memtest**—Displays the memory test results. This command can be entered while the test is still running or as soon as a failure occurs. This command has no parameters.
- **act-qcktest**—Implements a quick go/no-go test to check the basic integrity of the memory within ten minutes. The VDCU utility verifies the address, the data lines to memory, and the accessibility of each memory chip of 4 GB. This command applies to the DSM card only.
- **canc-qcktest**—Aborts the quick test. This command applies to the DSM card only and has no parameters.
- **rtrv-qcktest**—Displays the quick test results. This command applies to the DSM card only and has no parameters.
- **fill-mempat**—Fills a section of memory with a specific data pattern.
- **tst-mempat**—Tests the memory pattern that was initialized by the fill-mempat command.
- **dump-mempat**—Displays the memory pattern test results continuously without any other output messages. This command has no parameters.
- **rtrv-mempat**—Displays the memory pattern test results. This command can be entered while the test is still running or as soon as a failure occurs. This command has no parameters.
- **act-checkbit**—Tests the M256 checkbit DRAM.
- **rtrv-checkbit**—Displays the M256 checkbit test results. This command has no parameters.
- **act-memflt**—Tests M256 error detection and correction capabilities (fault insertion test).
- **rtrv-memflt**—Displays the fault insertion test results. This command has no parameters.

- **act-cachetst**—Starts the cache test on the specified memory range.
- **dump-cachetst**—Displays the results of the cache test. This command has no parameters.
- **act-pingtst**—Implements a network test in the VCDU utility only. The ping test is applicable to DCM/DSM cards only and will not work in the other cards.
- **canc-pingtst**—Aborts the ping test. This command has no parameters.
- **rtrv-pingtst**—Displays the results of the ping test. This command has no parameters.

Subrange: The keywords used in the command strings use the following parameters.

Table 6-2. Subrange Parameters for cmd Keywords

:beg=(mandatory) The start address of the physical memory range to be tested. The value is a hexadecimal number. This parameter is used with the keywords act-cachetst, act-checkbit, act-memtst, fill-mempat, and tst-mempat. Range: • For cards other than the DSM—h'00100000–h'bfffffff • For act-checkbit only—h'80000000–h'bfffffff • For act-cachetst only—h'01400000–h'ffd40000 • For 1GB DSM card only—h'01400000–h'3fffffff • For 2GB DSM card only—h'01400000–h'7fffffff • For 3GB DSM card only—h'01400000–h'bfffffff • For 4GB DSM card only—h'01400000–h'ffdfcfff
:end= (mandatory) The first address beyond the last address of the physical memory range to be tested. The value is a hexadecimal number. This parameter is used with the following keywords: act-checkbit, actcachetst, act-memtst, fill-mempat, and tst=mempat. Range: • For cards other than the DSM—h'00100002–h'c0000000 • For act-checkbit only—h'80000004–h'c0000000 • For act-cachetst only—h'01440000–h'ffdfcfff • For act-memtst on 1GB DSM card only—h'01400000–h'40000000 • For act-memtst on 2GB DSM card only—h'01400000–h'80000000 • For act-memtst on 3GB DSM card only—h'01400000–h'c0000000 • For act-memtst on 4GB DSM card only—h'01400000–h'ffe00000

Table 6-2. Subrange Parameters for cmd Keywords

:loop= (optional) The number of times a test is performed. The value is a hexadecimal or a decimal number. This parameter is used with the following keywords: act-memtst, act-cachetst, act-memflt, actcheckbit, act-qcktst, and act-pingtst. Range: h'0–h'ffff The value h'0 indicates that an infinite number of tests is performed. Default: h'1
:data= (mandatory) The hexadecimal of the data pattern. This parameter is used only with the keywords act-cachetst, fill-mempat, and tst-mempat. Range: h'0000–h'ffff
:port=(mandatory) The port address from which to start the ping. This parameter is used only with the keyword act-pingtst. Range: a, b
:dest= (mandatory) The destination IP address to be pinged. This is a TCP/IP address expressed in standard dot notation. IP addresses consist of the system's network number and the machine's unique host number. An example IP address is 192.126.100.5, where 192.126.100 is the network number and 5 is the machine's host number. This parameter is used only with the keyword act-pingtst. Range: 4 numbers separated by dots, with each number in the range of 0–255.
:router=(optional) The router through which the network interface can be tested. This is a TCP/IP address expressed in standard dot notation. IP addresses consist of the system's network number and the machine's unique host number. An example IP address is 192.126.100.5, where 192.126.100 is the network number and 5 is the machine's host number. This parameter is used only with the keyword act-pingtst. Range: 4 numbers separated by dots, with each number in the range of 0–255.
:type=(optional) Indicates the type of memory test to perform: a comprehensive high-memory test or a fast high-memory test. The fast test performs two tests: the Write/Read block and the Address Write/Read. The comprehensive test performs the fast

Table 6-2. Subrange Parameters for cmd Keywords

test as well as a Write/Read Walking 1/0s. This parameter is used only with the act-memtst keyword. Range: full, fast Default: full
:addr= (mandatory) Indicates the physical address to test. This parameter must be dword aligned and must not be the first or last dword of the installed M256 expansion DRAM. This parameter is used only with the act-memflt keyword. Range: h'80000004–h'bfffffff8

:loc= (mandatory)

The card location of the card as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1113, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118, 1115

Example

```
cdu: loc=1215: cmd="act-
memtst: beg=h'00100000: end=h'00100002: loop=3: type=fast"
cdu: loc=1215: cmd="canc-memtst"
cdu: loc=1215: cmd="rtrv-memtst"
cdu: loc=1215: cmd="fill-
mempat: beg=h'00100000: end=h'c0000000: data=h'ffff"
cdu: loc=1215: cmd="tst-
mempat: beg=h'00100000: end=h'c0000000: data=h'ffff"
cdu: loc=1215: cmd="act-qcktst: loop=h'2"
cdu: loc=1215: cmd="canc-qcktst"
cdu: loc=1215: cmd="rtrv-qcktst"
cdu: loc=1215: cmd="act-
pingtst: port=a: dest=215:200:100.6: router=150.1.1.105: loop=h'2"
cdu: loc=1215: cmd="canc-pingtst"
cdu: loc=1215: cmd="rtrv-pingtst"
cdu: loc=1107: cmd="act-
cachetst: beg=h'01400000: end=h'01440000: data=h'ffff"
cdu: loc=1107: cmd="dump-cachetst"
cdu: loc=1215: cmd="act-
checkbit: beg=h'80000000: end=h'80000004: loop=h'2"
cdu: loc=1215: cmd="rtrv-checkbit"
cdu: loc=1215: cmd="act-memflt: addr=h'80000004: loop=h'3"
cdu: loc=1215: cmd="rtrv-memflt"
```

Dependencies

If the **act-cachetst** keyword is entered, the address range should not be less than 256 KB.

The **fill-mempat** keyword must be entered before the **act-cachetst** keyword can be entered.

The quick memory test commands can be entered only on DSM cards.

The ping test commands can be entered only on DSM or DCM cards.

Notes

The **act-memtst:type=full** test takes approximately 21 hours to run on a 1 GB TSM. The **actmemtst:type=fast** test takes approximately 1 hour. The VCDU utility has the capability to test the 4 GB of memory in 4 hours if the **act-memtst** command is entered with the **type** parameter set to **fast**.

Output**cdu:loc=1107:cmd="dump-memtst"**

cdu: paced memtst output begins

address	written	read	address	written	read
bad: h'01400000,	h'5a5a,	h'ffff	h'01400002,	h'5a5a,	h'ffff
bad: h'01400004,	h'5a5a,	h'ffff	h'01400006,	h'5a5a,	h'ffff
bad: h'01400008,	h'5a5a,	h'ffff	h'0140000a,	h'5a5a,	h'ffff
bad: h'0140000c,	h'5a5a,	h'ffff	h'0140000e,	h'5a5a,	h'ffff
bad: h'01400010,	h'5a5a,	h'ffff	h'01400012,	h'5a5a,	h'ffff
bad: h'01400014,	h'5a5a,	h'ffff	h'01400016,	h'5a5a,	h'ffff
bad: h'01400018,	h'5a5a,	h'ffff	h'0140001a,	h'5a5a,	h'ffff

cdu:loc=1107:cmd="dump-mempat"

cdu: paced mempat output begins

address	written	read	address	written	read
bad: h'01400000,	h'1234,	h'ffff	h'01400002,	h'1234,	h'ffff
bad: h'01400004,	h'1234,	h'ffff	h'01400006,	h'1234,	h'ffff
bad: h'01400008,	h'1234,	h'ffff	h'0140000a,	h'1234,	h'ffff
bad: h'0140000c,	h'1234,	h'ffff	h'0140000e,	h'1234,	h'ffff
bad: h'01400010,	h'1234,	h'ffff	h'01400012,	h'1234,	h'ffff
bad: h'01400014,	h'1234,	h'ffff	h'01400016,	h'1234,	h'ffff
bad: h'01400018,	h'1234,	h'ffff	h'0140001a,	h'1234,	h'ffff
bad: h'0140001c,	h'1234,	h'ffff	h'0140001e,	h'1234,	h'ffff
bad: h'01400020,	h'1234,	h'ffff	h'01400022,	h'1234,	h'ffff
bad: h'01400024,	h'1234,	h'ffff	h'01400026,	h'1234,	h'ffff
bad: h'01400028,	h'1234,	h'ffff	h'0140002a,	h'1234,	h'ffff

NOTE: The fill-mempat keyword must be specified before the act-cachetst keyword is specified.

cdu:loc=1107:cmd="fill-mempat:beg=h'11000000:end=h'11001000:data=h'1234"**cdu:loc=1107:cmd="act -****cachetst: beg=h'11000000:end=h'11001000:data=h'1234"**

CARD : 1107 CDU: Cache Test Strt Loop 0x1

CARD : 1107 CDU: Cache Test Pass Loop 0x1

or

CARD : 1107 CDU: Cache Test Strt Loop 0x2

CARD : 1107 CDU: Cache Test Fail Loop 0x2

or

CARD : 1107 CDU: Cache write back may not occur w/ address range less than 256KB

or

CARD : 1107 CDU: Cache Test Already Running

cdu:loc=1107:cmd="dump-cachetst"

CARD 1107 CDU: PACED CACHETST OUTPUT BEGINS

CARD 1107 B:11000004,1234,55aa

cdu:loc=1107:cmd="act-qcktst"

CARD: 1107 CDU: Quick Test Started: Loop 0x1

CARD: 1107 CDU: Quick Test Passed: Loop 0x1

or

CARD: 1107 CDU: Quick Test Already In progress

or

CARD: 1107 CDU: Quick Test Started: Loop 0x1

CARD: 1107 CDU: Quick Test Failed: Loop 0x1

```
cdu:loc=1107:cmd="rtrv-qcktst"
```

Location: 1107 Loop: 0x1

Memory Range : 0x01400000 - 0xFFDFFFFF Number of D1G = 4

Number of Failures: 15

Data Lines Test

Fault detected in data line D12 for chip xx

Fault detected in data line D20 for chip yy

•

•

Address Lines Test

Fault detected in address line A14 for chip xx

Fault detected in address line A26 for chip yy

•

Memory Device Test

Address: 0x01410000 Write: 0xaaaa Read: 0xaaa5

Address: 0x01410100 Write: 0xaaaa Read: 0xaa5a

```
cdu:loc=1107:cmd="act-pingtst:port=a:dest=128.113.14.95: loop=2"
```

CARD: 1107 CDU: PING Test Started: PORT A: Loop 0x1

CARD: 1107 CDU: PING Test Passed: PORT A: Loop 0x1

or

CARD: 1107 CDU:PING Test Already In Progress

```
cdu: loc=1107:cmd="rtrv-pingtst"
```

CARD: 1107 CDU: Ping Test: PORT A: Loop: 0x1

```
Total Attempts: 10 # of Successful Attempts: 2 # of Failed Attempts: 8
```

chg-bip-fld

Change Board Identification Field

Use this command to manually update the board identification PROM (BIP) data during an upgrade in the field.

NOTE: Initial programming of the BIP data occurs during manufacturing.

Keyword: chg-bip-fld

Related Commands: chg-bip-rec, disp-bip, rtrv-bip, tst-bip

Command Class: Debug

Parameters

:data= (mandatory)

Board Identification (BID) record field data.

[illegible]

A character string, specifying board identification field data based on the value of the **fld** parameter.

:fld= (mandatory)

Board identification field.

Range: rev, sm

rev—revision

sm— software match

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

:type= (mandatory)

This parameter specifies the type of board.

Range: **mbd, dbd**

mbd — main assembly

dbd — applique

:dbdloc= (optional)

Applique location. This parameter specifies the location of the applique.

This parameter is valid only with cards that support multiple appliques.

Range: **1-2**

Default: **1**

Example

The following example changes the rev field in the BIP data for the first applique of a card that supports multiple appliques.

chg-bip-fld:loc=1106:type=dbd:fld=rev:data="B":dbdloc=1

The following example changes the rev field in the BIP data for the applique of a card that supports only one applique.

chg-bip-fld:loc=1103:type=dbd:fld=rev:data="C"

The following example shows changing of sm (Software MatchID) field in BIP data of Main assembly.

chg-bip-fld:loc=1102:type=mbd:fld=sm:data="001"

The following example changes the rev field in the BIP data for the first applique of a card that supports multiple appliques, without specifying the dbdloc parameter.

chg-bip-fld:loc=1206:type=dbd:fld=rev:data="B"

Dependencies

The value of the **loc** parameter cannot specify a location for a fixed disk or removable cartridge.

The **type=dbd** parameter cannot be specified for card type GPSM-II, HCAP, ATM or DCM. HMUX and HIPR cards do not contain BIP information.

If the **type=mbd** parameter is specified, then the **dbdloc** parameter cannot be specified.

The card at the location specified by the **loc** parameter must support multiple appliques before the **dbdloc** parameter can be specified.

Notes

The card in the specified location must be inhibited.

Output

chg-bip-fld:loc=1103:type=mbd:fld=rev:data="B"

tekelecstp 07-01-01 12:05:44 IST EAGLE 37.0.0

Board ID Prom updated.

;

chg-bip-rec

Change Board Identification PROMs Record

Use this command to manually update the Board Identification PROM (BIP) data during an upgrade in the field.

NOTE: Initial programming of the BIP data occurs during manufacturing.

Keyword: chg-bip-rec

Related Commands: `chg-bip-fld`, `disp-bip`, `rtrv-bip`, `tst-bip`

Command Class: Debug

Parameters

:data= (mandatory)

Board identification data.

[illegible]

A patterned character string. This data string is generated by entering valid input parameters to the BIP tool.

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

:type= (mandatory)

The type of board.

Range: mbd, dbd

mbd—main assembly

dbd — applique

:dbdloc= (optional)

Applique location. This parameter specifies the location of the applique.

This parameter is valid only with cards that support multiple appliques.

Range: 1-2

Default: 1

:init= (optional)

This parameter initializes the contents of a PROM to contain only the record specified in the **data** parameter, if that record is a board identification record.

Range: yes, no

yes— The contents of the PROM are initialized.

no — The contents of the PROM are not initialized.

Default: no

Example

The following example initializes the contents of a main assembly BIP to contain only the record specified in the data parameter.

chg-bip-rec:loc=1105:type=mdb:data=xxxx:init=yes

The following example displays the programming of the BIP data for the first applique of a card that supports multiple appliques.

chq-bip-rec:loc=1106:type=dbd:data=xxx:dbdloc=1

The following example displays the programming of the BIP data for the applique of a card that supports only one applique.

chg-bip-rec:loc=1103:type=dbd:data=xxx

The following example displays programming of a BBT record into the BIP data for the applique.

chg-bip-rec:loc=1101:type=dbd:data="BBT01, eg.004, cs146"

The following example displays the programming of the DCM Ethernet Addresses for Port A (ENT01).

chg-bip-rec:loc=1102:type=mbd:data="ENT01, AD00001704000D, cs104"

The following example displays the programming of the BIP data for the first applique of a card that supports multiple appliques, without specifying the dbdloc parameter.

chg-bip-rec:loc=1206:type=dbd:data="BID01, PN850-0666-04.A, SMEG.001, DS2007.11 .C.10207115240, CS157"

Dependencies

The value of the **loc** parameter cannot specify a location for a fixed disk or removable cartridge.

The **type=dbd** parameter cannot be specified for card type GPSM-II, HCAP, ATM or DCM. HMUX and HIPR cards do not contain BIP information.

If the **type=mbd** parameter is specified, then the **dbdloc** parameter cannot be specified.

If the card at the location specified by the **loc** parameter does not support multiple appliques, then the **dbdloc** parameter cannot be specified.

If the **init=yes** parameter is specified, then the value of the **data** parameter must be a Board IDentification (BID) record.

Notes

The card in the specified location must be inhibited.

Output

```
chg-bip-rec:loc=1107:type=mbd:data=xxx:init=yes
tekelecstp 07-01-01 12:05:44 IST EAGLE 37.0.0
Board ID Prom updated.
;
```

chg-tbl

Change Table

Use this command to create, rename, or reset any table on a fixed disk, removable cartridge, or removable drive.



CAUTION

CAUTION: Before entering the chg-tbl command, contact Tekelec Technical Services at (888) FOR-TKLC.

Keyword: chg-tbl

Related Commands: disp-disk-dir

Command Class: Debug

Parameters

:action= (mandatory)

This parameter specifies the desired action to perform on the table.

Range: create, rename, reset

create— Creates a DOS entry in the FAT table and updates the DOS directory table.

rename— Changes the name of an existing system table to a new DOS file name (does not update the **dms.cfg** file).

reset— Initializes an existing table to the value designated by the **resetchar** parameter.

:disk= (mandatory)

Target disk. This parameter specifies the disk that contains the file.

Range: **remove, fixed, usb**

remove — Removable cartridge or drive

fixed — Fixed disk

usb — Credit card drive

:ext= (optional)

Extension. This parameter specifies the three character DOS filename extension.

Range: *azz*

0–3 ASCII characters

Default: No file name extension is specified

:filelength= (optional)

This parameter specifies the amount of space the file occupies on the disk.

Range: **1-32505856**

Default: The file length is not specified

:id= (optional)

This parameter specifies the table identification number.

Range: **0-499**

Default: No table identification number is specified

:name= (optional)

This parameter specifies the name of the file.

Range: *azzzzzzz*

1–8 ASCII characters.

Default: No file name is specified

:prtnggrp= (optional)

Partition group. This parameter specifies the disk partition group to be changed.

Range: **active, inactive**

Default: **active**

:resetchar= (optional)

Reset character. This parameter specifies the table reset character that is written to every byte of the table.

Range: **0-255**

Example

chg-

tbl:action=create:disk=remove:name=test:ext=sys:filelength=150000

chg-tbl:action=reset:disk=remove:id=0

chg-tbl:action=rename:disk=remove:id=0:name=dms:ext=old

Dependencies

If the **action=create** parameter is specified, then the **name**, **ext**, and **filelength** parameters must be specified.

If the file type is a directory, the **filelength** parameter is not required. The directory entry file length is always 1 cluster in length.

The attributes used during file creation are: current date and time of the active MASP, readable/writable, files are allocated contiguously from the last free FAT cluster.

If the **action=reset** parameter is specified, then the **id** parameter must be specified.

If the **action=rename** parameter is specified, then the **id**, **name**, and **ext** parameters must be specified.

This command cannot be used to modify the security log.

An E5-MCAP card must be installed before the **disk=usb** parameter can be specified.

Notes

None

Output

```
chg-
tbl:action=create:disk=remove:name=test:ext=sys:filelength=150000
```

```
chg-tbl: CREATE OK : filename = test.sys, byte length = 150000
chg-tbl: command complete
;
```

```
chg-tbl:action=reset:disk=remove:id=0
```

```
chg-tbl: RESET OK : Table 0, DMS.CFG
chg-tbl: command complete
;
```

```
chg-tbl:action=rename:disk=remove:id=0:name=dms:ext=old
```

```
chg-tbl: RENAME OK : Table 0, DMS.CFG to DMS.OLD
chg-tbl: command complete
;
```

chg-upgrade-config

Change Upgrade Configuration

Use this command to configure data used by the upgrade software during an upgrade of an in-service EAGLE 5 ISS from a source release to the target release.

NOTE: This command does not start the software upgrade; it stores data that will be used during the software upgrade. The data will be cleared when the OAM boots.

Keyword: chg-upgrade-config

Related Commands: act-upgrade, rtrv-upgrade-config

Command Class: Debug

Parameters

:sak= (optional)

Software access key. This parameter specifies the software access key that is used to allow the EAGLE 5 ISS to upgrade to the target release.

Range: *zzzzzzzzzzzzzz*

13-character alphanumeric text

:src= (optional)

Source. This parameter specifies the disk that physically contains the upgrade target release.

Range: **fixed, remove**

fixed— The upgrade target release is on the fixed disk

remove— The upgrade target release is on the removable cartridge

Example

```
chg-upgrade-config:addtblcnv=327
```

```
chg-upgrade-config:deltblcnv=327
```

```
chg-upgrade-config:sak=vbjyapdpbtejb:src=fixed
```

Dependencies

The **addtblcnv** parameter and the **deltblcnv** parameter cannot be specified together in the same command.

One, but not both, of the optional parameters must be specified in the command.

Output

```
chg-upgrade-config:addtblcnv=327
rlghncxa03w 07-03-13 08:15:45 EST EAGLE 37.5.0
Command Completed.
;
```

clr-disk-stats**Clear Disk Statistics**

Use this command to clear the disk performance statistics. All associated disk statistics are zeroed.

Keyword: **clr-disk-stats**

Related Commands: **disp-disk-stats**

Command Class: Debug

Parameters

:loc= (mandatory)

Location. This parameter specifies the location of the card.

Range: 1113, 1115

Default: None

Example

```
clr-disk-stats:loc=1113
```

Dependencies

The specified card location must contain a card that is running an OAM (1113 or 1115).

A related command must not be in progress.

Notes

None

Output

```
clr-disk-stats:loc=1113

rlghncxa03w 01-03-01 14:14:05 EST Rel 28.1.0
Disk performance statistics cleared.
;
```

copy-tbl**Copy Table**

Use this command to copy a single table from one source to another. A table can be copied to any verifiable location in the system; however, the source and destination tables must have identical configurations (same number of entries, same entry size, both 1- dimensional and 2-dimensional).

NOTE: A table cannot be copied onto itself.

Keyword: **copy-tbl**

Related Commands:

Command Class: Debug

Parameters**:dloc=** (mandatory)

Destination location. This parameter specifies the fixed disk, removable thumb drive, or removable cartridge card location of the destination table.

Range: 1114, 1116, 1117, 1113, 1115

1114 — The TDM

1116 — The TDM

1117 — The removable cartridge drive

1113 — The latched USB port

1115 — The latched USB port

:sloc= (mandatory)

Source location. This parameter specifies the fixed disk, removable drive, or removable cartridge card location of the source table.

Range: 1114, 1116, 1117, 1113, 1115

1114 — The TDM

1116 — The TDM

1117 — The removable cartridge drive

1113 — The latched USB port

1115 — The latched USB port

:stbl= (mandatory)

Source table. This parameter specifies the identifying number of the source table.

Range: 0-511**:ddrv=** (optional)

Destination drive. This parameter specifies the identification of the disk to which the table is copied.

Range: fixed, remove, usb

fixed — The fixed disk

remove — The removable cartridge or drive

usb — The credit card drive

Default: fixed**:dprtnggrp=** (optional)

Disk partition group. This parameter specifies the disk partition group of the destination table.

Range: active, inactive**Default:** active**:dtbl=** (optional)

Destination table. This parameter specifies the identifying number of the destination table.

Range: 0-511**Default:** The stbl parameter value**:sdrv=** (optional)

Source drive. This parameter specifies the identification of the disk from which the table is copied.

Range: fixed, remove, usb

fixed — The fixed disk

remove — The removable cartridge or drive

usb — The credit card drive

Default: fixed**:sprtnggrp=** (optional)

Source partition group. This parameter specifies the disk partition group of the source table.

Range: active, inactive
Default: active

Example

copy -tbl:stbl=25:dtbl=24:sloc=1114:dloc=1116:sdrv=fixed

Dependencies

Only one table copy command can be executed at a time.

The source and destination tables must exist and be compatible.

This command cannot be used to modify the security log.

The same value cannot be specified for the **sloc** and **dloc** or the **stbl** and **dtbl** parameters.

An E5-MCAP card must be installed before a value of **usb** can be specified for the **ddrv** or **sdrv** parameter.

If a value of **fixed** is specified for the **sdrv** or **ddrv** parameter, then a value of **1114** or **1116** must be specified for the **sloc** or **dloc** parameter, respectively.

Notes

None

Output

copy -tbl:stbl=25:dtbl=24:sloc=1114:dloc=1116:sdrv=fixed

```
rlghncxa03w 01-03-04 16:11:53 EST Rel 28.1.0
Table copy command complete.
;
```

disp-bip**Display Board Identification PROM**

Use this command to display the Board Identification PROM (BIP) hex and ASCII data for the specified card type and location. The PROM data consists of the board ID, part number, revision, date of manufacture, power, serial number, software match ID, and check sums.

Keyword: disp-bip

Related Commands: chg-bip-fld, chg-bip-rec, rtrv-bip, tst-bip

Command Class: Debug

Parameters

:loc= (mandatory)

The card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

:dbdloc= (optional)

Applique location. This parameter specifies the location of the applique.

This parameter is valid only with the cards that support multiple appliques.

Range: 1-2

:type= (optional)

This parameter specifies the board type to be displayed.

Range: mdb, dbd, both

mdb — Displays the main assembly.
dbd — Displays the applique.
both — Displays the main assembly and the applique.

Default: **both**

Example

The following example displays the BIP data for all appliques that are supported by the card.

disp-bip: loc=1105: type=dbd

The following example displays the BIP data for the second applique.

disp-bip: loc=1103: type=dbd: dbdloc=2

Dependencies

The value of the **loc** parameter cannot specify the location of a fixed disk or removable cartridge.

The **type=dbd** parameter cannot be specified for card type GPSM-II, HCAP, ATM or DCM. HMUX and HIPR cards do not contain BIP information.

If the **type=mdb** parameter is specified, then the **dbdloc** parameter cannot be specified.

If the card at the location specified by the **loc** parameter does not support multiple appliques, then the **dbdloc** parameter cannot be specified,

Output

The following example displays the BIP data for the main assembly.

disp-bip: loc=1105: type=mbd

```
tekelecstp 12-12-30 20:24:41 IST EAGLE 37.0.0
Board Identification PROM Dump Location: 1105 - Motherboard Packet: 1
```

```
-----
0000 42 49 44 30 31 2c 50 4e 38 35 30 2d 30 31 34 35 BID01,PN850-0145
0010 2d 30 31 2e 31 41 42 2c 53 4d 45 47 2e 30 30 31 -01.1AB,SMEG.001
0020 2c 44 53 39 32 2e 31 30 2e 43 2e 32 31 30 30 31 ,DS92.10.C.21001
0030 38 32 2c 43 53 32 32 35 00 00 00 00 00 00 00 82,CS225.....
0040 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
0050 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
0060 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
0070 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
```

;

The following example displays the BIP data for the second applique.

disp-bip: loc=1104: type=dbd: dbdloc=2

```
tekelecstp 12-12-30 20:24:41 IST EAGLE 37.0.0
Board Identification PROM Dump Location: 1104 - DBD - 2 Packet: 1
```

```
-----
0000 42 49 44 30 31 2c 50 4e 38 35 30 2d 30 36 34 36 BID01,PN850-0646
0010 2d 30 32 2e 41 2c 53 4d 45 47 2e 30 30 31 2c 44 -02.A,SMEG.001,D
0020 53 32 30 30 36 2e 32 35 2e 43 2e 31 30 32 30 36 S2006.25.C.10206
0030 32 35 35 34 32 30 2c 43 53 31 36 33 00 42 42 54 255420,CS163.BBT
0040 30 31 2c 45 47 2e 30 30 36 2c 43 53 31 34 34 00 01,EG.006,CS144.
0050 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
0060 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
0070 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
```

;

The following example displays the BIP data for all appliques that are supported by the card.

disp-bip: loc=1102: type=dbd

```
tekelecstp 12-12-30 20:24:41 IST EAGLE 37.0.0
Board Identification PROM Dump Location: 1102 - DBD - 1 Packet: 1
```

```
-----
0000 42 49 44 30 31 2c 50 4e 38 37 30 2d 32 32 31 32 BID01,PN870-2212
0010 2d 30 32 2e 41 2c 53 4d 45 47 2e 30 30 31 2c 44 -02.A,SMEG.001,D
0020 53 32 30 30 36 2e 32 35 2e 43 2e 31 30 32 30 36 S2006.25.C.10206
0030 32 35 35 34 36 31 2c 43 53 31 37 35 00 42 42 54 255461,CS175.BBT
0040 30 31 2c 45 47 2e 30 30 32 2c 43 53 31 34 30 00 01,EG.002,CS140.
0050 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
0060 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
0070 00 00 00 00 00 00 00 00 00 00 00 00 10 3d 0f .....=.
```

;

```
tekelecstp 12-12-30 20:24:41 IST EAGLE 37.0.0
Board Identification PROM Dump Location: 1102 - DBD - 2 Packet: 1
```

```
-----
0000 42 49 44 30 31 2c 50 4e 38 37 30 2d 32 32 31 32 BID01,PN870-2212
0010 2d 30 32 2e 41 2c 53 4d 45 47 2e 30 30 31 2c 44 -02.A,SMEG.001,D
0020 53 32 30 30 36 2e 32 35 2e 43 2e 31 30 32 30 36 S2006.25.C.10206
0030 32 35 35 34 36 31 2c 43 53 31 37 35 00 42 42 54 255461,CS175.BBT
0040 30 31 2c 45 47 2e 30 30 32 2c 43 53 31 34 30 00 01,EG.002,CS140.
0050 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
0060 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
0070 00 00 00 00 00 00 00 00 00 00 00 00 10 3d 0f .....=.
```

;

disp-bp**Display Breakpoint**

Use this command to display currently active breakpoints in the communication and application processors.

Keyword: disp-bp

Related Commands: dlt-bp, ent-bp

Command Class: Debug

Parameters

:card= (optional)

This parameter specifies the card location, in the form of *GPLID-Subsystem ID*.

Range: *GPLID-Subsystem ID*

GPLID—atmansi, atmitu, atmhc, bphcap, bpdcm, bpdcm2, bphcap, bphcapt, bpmpl, bpmplt, ccs7itu, eoam, eroute, erthc, gls, hipr, ipghc, ipgwi, iplhc, iplim, iplimi, ips, ipsg, ipshc, mcp, pktgen, sccp, sccphc, slanhc, ss7ansi, ss7epm, ss7gx25, ss7hc, ss7ipgw, ss7ml, stplan, utility, vsccp, vxutil, vxwslan

Subsystem ID—a, b, act, stby, all

The **oam** GPL can be specified with any of the subsystem IDs. For all other GPLs, only the **all** subsystem ID is valid.

:imt= (optional)

This parameter specifies the IMT address of the card.

Range: 0-255

:loc= (optional)

Location. This parameter specifies the card location as stenciled on the shelf of the system.

Range: 1101-1113, 1201-1218, 1301-1318, 2101-2118, 2201-2218, 2301-2318, 3101-3118, 3111-3118, 3201-3218, 3301-3318, 4101-4118, 4201-4218, 4301-4318, 5101-5118, 5201-5218, 5301-5318, 6101-6118, 1115

The command is not valid for HMUX cards in locations xy 09 and xy 10 (x = the frame, y = the shelf).

:proc= (optional)

This parameter specifies the processor type.

Range: appl, com

appl—Application processor

com—Communication processor

Default: appl

:ueng= (optional)

This parameter specifies the microengine number.

This parameter is valid only on IXP-based cards. If this parameter is not specified, the card processor type is assumed to be ARM.

Range: 0-5

Example

```
disp-bp:card=ss7ansi-all
```

```
disp-bp:loc=1214
```

```
disp-bp:loc=1109
```

```
disp-bp:loc=1109:ueng=3
```

Dependencies

The **loc**, **imt**, or **card** parameter must be specified.

Only one of the **loc**, **imt**, and **card** parameters can be specified in the command.

The **imt** parameter allows this command to be entered for a card that has not been configured in the system.

The **ueng** parameter can be specified only for IXP-based cards (such as HIPR cards).

The **eoam** GPLID accepts all subsystem values; all other GPLIDs accept only the **all** subsystem value.

The card location specified by the **loc** parameter must be in the database.

Card locations (**loc** parameter) **1114**, **1116**, **1117**, **1118**, and the HMUX locations (xy **09** and xy **10** where x is the frame and y is the shelf) are not valid for break point commands.

Notes

Card locations (**loc** parameter) xy09 and xy10 (x is the frame and y is the shelf) for HMUX cards are not valid for break point commands.

Output

The following examples are for x86-based cards:

disp-bp:card=ss7ansi-all

```
rlghncxa03w 01-03-22 21:14:58 EST EAGLE5 31.3.0
SDS Installed Breakpoint Report from IMT Address H'00f4
Brkpoint-Addr Memory-Dump-Addr Condition-1 Condition-2 Repeat-Count
```

```
-----
H'003a-H'0001 ANY ANY 0
```

```
rlghncxa03w 01-03-22 21:14:58 EST EAGLE5 31.3.0
SDS Installed Breakpoint Report from IMT Address H'000a
BP Address Memory-Dump Address Conditions Rpt Ct Ind
-----
H'0000a974 H'000c030c 1- ANY 3 1
Code Breakpoint 2- ANY
H'0000a975 1- ANY PERM 0
Data Write - WORD 2- ANY
H'0000a976 1- ANY 15 0
Any Access - DWORD 2- ANY
H'0000a977 1- ANY PERM 0
Data Read - BYTE 2- ANY
```

```
rlghncxa03w 01-03-22 21:14:58 EST EAGLE5 31.3.0
80386/80486 Debug Registers in Use: DR0 DR2 DR3
;
```

disp-bp:card=vsccp-all:

```
rlghncxa03w 01-03-22 21:14:58 EST EAGLE5 31.3.0
SDS Installed Breakpoint Report from IMT Address H'0005
BP Address Memory-Dump Address Conditions Rpt Ct Ind
-----
H'0000a974 1- ANY 1 0
Code Breakpoint 2- ANY
;
```

The following output examples are for IXP-based cards.

disp-bp:loc=1109

```
tekelecstp 05-01-10 13:58:45 GMT EAGLE5 33.0.0
SDS Installed Breakpoint Report from IMT Address H'00ff
```

```
BP Address Memory-Dump Address Conditions Rep Ind CPU
-----
H'000401000 R11+H'0000ffff 1- R15 > H'ffffffff 2 0 ARM
Any Access - 2- R0 <= H'0000ffff
Data value: H'00000000 Data Mask: H'ffffffff
```

disp-bp:loc=1109:ueng=3

```
tekelecstp 05-01-10 13:58:45 GMT EAGLE 33.0.0
SDS Installed Breakpoint Report from IMT Address H'00ff
```

```
BP Address Memory-Dump Address Conditions Rep Ind CPU
-----
H'00235000 H'00020044 1- ANY PERM 1 UENG 3
CODESW Breakpoint 2- ANY CTX 2
;
```

disp-disk-dir**Display Disk Directory**

Use this command to display the DOS directory on the specified disk. This command can display the creation date for each file or for selected files and applies to fixed disks and removable cartridges or drives.

NOTE: This command can be used to verify that the correct version of a file is on the disk.

Keyword: disp-disk-dir

Related Commands: act-gpl, chg-db, chg-gpl, copy-gpl, copy-meas, init-sys, rept-stat-db

Command Class: Debug

Parameters

:file= (optional)

This parameter specifies the name of the file to be displayed.

Range: *zzzzzzzzzzzz*

1–12 ASCII characters

Default: All files are displayed

:loc= (optional)

This parameter specifies the card location in the system.

Range: **1114 , 1116, 1117, 1113, 1115**

1114 — The TDM

1116 — The TDM

1117 — The removable cartridge drive

1113 — The latched USB port

1115 — The latched USB port

:prtnggrp= (optional)

Partition group. This parameter specifies the disk partition group to be displayed.

Range: **active, inactive**

Default: **active**

:src= (optional)

Source. This parameter specifies the identification of the disk containing the files to be displayed.

Range: **fixed, remove, usb**

fixed — The fixed disk

remove — The removable cartridge or drive

usb — The credit card drive

Default: The fixed disk

Example

disp-disk-dir:loc=1117:file="dms.cfg"

disp-disk-dir:src=remove:file="fta"

disp-disk-dir:src=remove:file="*.*"

Dependencies

Valid filenames must be in the format, *filename.extension*, with the following requirements:

File name—1–8 ASCII Characters

Extension—0–3 ASCII Characters

Wildcards (asterisks) are allowed when the wildcard pattern is enclosed in parentheses.

*—Matches all characters in either filename or extension

?—Matches one character in either filename or extension

file="*.*"—Matches all files on disk

file="*.tbl"—Matches all files on disk with **.tbl** as a extension

An E5-MCAP card must be installed before the **src=usb** parameter can be specified.

The **src** parameter must be specified.

The **1117** location is used by MDAL cards. The **1113** and **1115** locations are used by E5-MCAP cards. The **1114** and **1116** locations are used by TDM or E5-TDM cards.

Notes

None

Output

disp-disk-dir

```

lnpstp 01-03-30 15:52:04 EST Rel 28.1.0
DISP-DISK-DIR, Loc=1116, Device = FIXED, Dir = :\
Filename Ext          Length Last Modified      Cluster      LBA
DMS      CFG          16384  00-08-01 18:45          2          573
:

```

```

File(s) : 175   Bytes : 457956761
Volume : FIXED DISK
Bytes free : 73654887
Disk Size (MB) : 2014
;

```

disp-disk-dir:loc=1117

```

lnpstp 01-03-30 15:52:46 EST Rel 28.1.0
disk-disk-dir:loc=1117:file="dms1024.cfg"
DISP-DISK-DIR, Loc=1117, Device = REMOVE, Dir = :\
Filename Ext          Length Last Modified      Cluster      LBA
DMS1024   CFG          16384  00-08-01 15:48          2          339
:

```

```

File(s) : 72   Bytes : 192883124
Volume : SYSTEM DISK
Bytes free : 956339788
Disk Size (MB) : 1096
;

```

disp-disk-dir:file=ttserv.tbl

```

lnpstp 01-03-30 15:53:09 EST Rel 28.1.0
DISP-DISK-DIR, Loc=1116, Device = FIXED, Dir = :\
Filename Ext          Length Last Modified      Cluster      LBA
TTSERV    TBL          8192  00-08-01 18:45        2731        44237

```

```

File(s) : 1   Bytes : 8192
Volume : FIXED DISK
Bytes free : 73654887
Disk Size (MB): 2014
;

```

disp-disk-dir:loc=1116

```

eaglestp 05-03-30 15:53:09 EST TTTT PPP EAGLE5 34.0.0
DISP-DISK-DIR, Loc=1116, Device = FIXED, Dir = :\
Filename Ext          Length Last Modified      Cluster      LBA
DMS      CFG          16384  08-07-97 11:00          2          573
OAM      ELF          3145728 08-07-97 11:00          4          605
TOAM     ELF          3145728 08-07-97 11:00        388        6749
SS7      ELF          1048576 08-07-97 11:00        772       12893
TSS7     ELF          1048576 08-07-97 11:00        900       14941
GX25     ELF          1048576 08-07-97 11:00       1028       16989
TGX25    ELF          1048576 08-07-97 11:00       1156       19037
CCS7ITU  ELF          1048576 08-07-97 11:00       1284       21085
.
.
.
LNP_LRN  BKP          3072096 08-07-97 11:00       38963       623949
LNP_MR   BKP          1679392 08-07-97 11:00       39339       629965
LNP_NPA  BKP          5120096 08-07-97 11:00       39545       633261
LNP_4DIG BKP        128000064 08-07-97 11:00       40171       643277
ACG_MIC  BKP          187712  08-07-97 11:00       55797       893293
LNP_CHCK BKP          197378  08-07-97 11:00       55820       893661

```

LNP_DBMM	BKP	801600	08-07-97 11:00	55845	894061
TRBLTX	BKP	63980	08-07-97 11:00	55943	895629
MTT	BKP	384000	08-07-97 11:00	55951	895757
2201800	REL	2048	08-07-97 11:00	55998	896509

File(s) : 175 Bytes : 457956761
 Volume : FIXED DISK
 Bytes free : 73654887
 Disk Size (MB) : 507
 Largest Free Space : 73654887

;

The following example displays the output when an E5-MCAP card is used.

disp-disk-dir: loc=1113:src=remove

```
e5oam 09-01-20 22:24:12 EST EAGLE 40.1.0
DISP-DISK-DIR Loc=1113 Dev = REMOVE
Filename Ext Length
DMS1024 CFG 32768
TATMANSI ELF 3145728
TATMHC ELF 5242880
TATMITU ELF 3145728
TBLBEPM ELF 3145728
TBLBIOS ELF 3145728
TBLBSMG ELF 3145728
TBLCPLD ELF 3145728
TBLDIAG ELF 3145728
TBLDIAG6 ELF 3145728
...
SMEAS_ST SYS 12228
UIMLOG SYS 11263947
SYSREL SYS 949
MTT BKP 384000
TRBLTX BKP 96000
FEATCTRL BKP 128000
ASSYPWR BKP 8016
TS30100 REL 5120
BLMCAP TAR 13721600
File(s) : 178    Bytes : 437596655    Disk Size (MB) : 1972;
```

Legend

FILENAME—The name of the file in the directory

EXT—The extension of the file name (for example, for the file MFC.BIN, MFC is the file name and BIN is the extension of the file name).

LENGTH—The amount of space, in bytes, the file occupies on the disk.

LAST MODIFIED—The data and time the file was changed.

CLUSTER—A 2-byte, 16-digit binary number that represents the first section of the disk occupied by the file.

LBA—The starting logical block address that corresponds to the **CLUSTER**.

FILE(s)—The number of files on the disk that match the search criteria.

BYTES—The amount of space, in bytes, the displayed files occupy on the disk

VOLUME—An 11-character name for the disk.

BYTES FREE—The number of bytes that are available on the disk for file storage.

DISK SIZE—The total capacity of the specified disk.

disp-disk-stats

Display Disk Performance Statistics

Use this command to display the disk performance statistics.

NOTE: The OAMs maintain disk read/writer access times as well as per table and per application statistics on the number of disk accesses and cache accesses. Per application and per table statistics that have zero values are not displayed if an application ID or table ID is not specified; only nonzero statistics are displayed in the default report.

Keyword: disp-disk-stats

Related Commands: clr-disk-stats

Command Class: Debug

Parameters

:loc= (mandatory)

Location. This parameter specifies the card location in the system.

Range: 1113, 1115

:applid= (optional)

Application ID. This parameter specifies the application IDs that are used to define tasks.

Range: 0-255

Default: all

:tblid= (optional)

Table ID. This parameter specifies the table IDs that are used to define tables.

Range: 0-511

Default: all

Example

disp-disk-stats:loc=1113:applid=29

disp-disk-stats:loc=1113:applid=93

disp-disk-stats:loc=1113

Dependencies

The specified card location must contain a card that is running an OAM (1113 or 1115).

GPSPM-II and E5-MCAP cards cannot co-exist in the system.

Notes

None

Output**disp-disk-stats:loc=1113:applid=29**

rlghncxa03w 01-03-01 14:14:05 EST Rel 28.1.0

Disk Performance Statistics Report:

Appl Id	Cache Read Hits	Disk Read Accesses	Cache Write Hits	Disk Write Accesses
-----	-----	-----	-----	-----
29	113	23	25	40

Command Completed.

disp-disk-stats:loc=1113:applid=93

tekelecstp 01-06-01 14:14:05 EST Rel 28.1.0

Disk Performance Statistics Report:

Appl Id	Cache Read Hits	Disk Read Accesses	Cache Write Hits	Disk Write Accesses
-----	-----	-----	-----	-----
93	0	0	0	0

Command Completed.

;

disp-disk-stat:loc=1113

rlghncxa03w 01-03-01 14:14:05 EST Rel 28.1.0

Disk Performance Statistics Report:

Appl Id	Cache Read Hits	Disk Read Accesses	Cache Write Hits	Disk Write Accesses
-----	-----	-----	-----	-----
29	113	23	25	40
120	12	223	225	361

Table Id	Cache Read Hits	Disk Read Accesses	Cache Write Hits	Disk Write Accesses
-----	-----	-----	-----	-----
185	12	223	225	361
201	113	23	25	40

	Total Cache Read Hits	Total Disk Reads	Total Cache Write Hits	Total Disk Writes
-----	-----	-----	-----	-----
	125	246	250	401

Disk Access Times (microseconds)			
Minimum	Maximum	Average	Access Type
-----	-----	-----	-----
1260	31121	6380	Read
1215	31090	6350	Write

Command Completed.

;

disp-lba**Display Logical Block Access**

Use this command to display the contents of a logical block of data at a specified logical block address of a fixed disk or removable cartridge.

Keyword: disp-lba

Related Commands:

Command Class: Debug

Parameters

:lba= (mandatory)

This parameter specifies the logical block address.

Range: **0-1953125**

:loc= (mandatory)

Location. This parameter specifies the card location in the system. A fixed disk or removable cartridge location must be specified.

Range: **1114, 1116, 1117**

1114 — The standby TDM

1116 — The standby TDM

1117 — The removable cartridge

Default: Active fixed disk

Example

disp - lba : lba=676 : loc=1117

Dependencies

The requested disk must be available.

The logical block address specified must be within the valid range for the disk specified.

If E5-MCAP, E5-MDAL, or E5-TDM cards are installed, then this command cannot be entered.

Notes

None

Output**disp-lba:lba=676:loc=1117**

```

rlghncxa03w 01-03-02 16:21:12 EST Rel 28.1.0
0504 DISP-LBA DEVICE ID=H'0021, LBA=H'000002a4, LOC=1117
0000 ff 44 4d 53 2e 43 46 47 00 00 00 00 00 00 00 00 .DMS.CFG.....
0010 20 00 01 00 00 02 00 00 00 00 00 00 03 00 00 00 .....
0020 00 55 4e 55 53 45 44 54 41 42 4c 45 00 00 00 00 .UNUSEDTABLE....
0030 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
0040 ff 64 62 73 74 61 74 2e 62 6b 70 00 00 00 02 00 .dbstat.bkp.....
0050 2e 00 01 00 01 00 00 00 00 00 00 00 01 00 00 00 .....
0060 ff 64 62 73 74 61 74 2e 74 62 6c 00 00 00 03 00 .dbstat.tbl.....
0070 2e 00 01 00 01 00 00 00 00 00 00 00 03 00 00 00 .....
0080 00 55 4e 55 53 45 44 54 41 42 4c 45 00 00 00 00 .UNUSEDTABLE....
0090 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
00a0 ff 6d 63 66 67 2e 62 6b 70 00 00 00 00 00 05 00 .mcfg.bkp.....
00b0 9c 00 01 00 01 00 00 00 00 00 00 00 01 00 00 00 .....
00c0 ff 6d 63 66 67 2e 74 62 6c 00 00 00 00 00 06 00 .mcfg.tbl.....
00d0 9c 00 01 00 01 00 00 00 00 00 00 00 03 00 00 00 .....
00e0 ff 69 6d 74 61 2e 62 6b 70 00 00 00 00 00 07 00 .imta.bkp.....
00f0 28 00 01 00 00 01 00 00 00 00 00 00 01 00 00 00 (.
0100 ff 69 6d 74 61 2e 74 62 6c 00 00 00 00 00 08 00 .imta.tbl.....
0110 28 00 01 00 00 01 00 00 00 00 00 00 03 00 00 00 (.
0120 00 55 4e 55 53 45 44 54 41 42 4c 45 00 00 00 00 .UNUSEDTABLE....
0130 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
0140 ff 6c 64 74 62 6c 2e 73 79 73 00 00 00 00 0a 00 .ldtbl.sys.....
0150 b8 00 01 00 14 00 00 00 00 00 00 00 03 00 00 00 .....
0160 ff 73 68 65 6c 66 2e 62 6b 70 00 00 00 00 0b 00 .shelf.bkp.....
0170 03 00 02 00 03 00 00 00 03 00 00 00 01 00 00 00 .....
0180 ff 73 68 65 6c 66 2e 74 62 6c 00 00 00 00 0c 00 .shelf.tbl.....
0190 03 00 02 00 03 00 00 00 03 00 00 00 03 00 00 00 .....
01a0 ff 6c 69 6e 6b 2e 62 6b 70 00 00 00 00 0d 00 .link.bkp.....
01b0 10 00 01 00 00 02 00 00 00 00 00 00 01 00 00 00 .....
01c0 ff 6c 69 6e 6b 2e 74 62 6c 00 00 00 00 0e 00 .link.tbl.....
01d0 10 00 01 00 00 02 00 00 00 00 00 00 03 00 00 00 .....
01e0 00 55 4e 55 53 45 44 54 41 42 4c 45 00 00 00 00 .UNUSEDTABLE....
01f0 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
;

```

disp-mem**Display Memory**

Use this command to display memory in communication and application processors. This display is in byte format.

Keyword: disp-mem

Related Commands: set-mem

Command Class: Debug

Parameters

:addr= (optional)

This parameter specifies the address in the form of *segment-offset*.

Range: *segment-offset*
 segment—h'00—h'ffff
 offset—h'00—h'ffff

:bc= (optional)

Byte count. This parameter specifies the number of data bytes to display.

Range: **0-65535**

Default: **96**

:card= (optional)

Card location. This parameter specifies the card location in the form of *GPLID-Subsystem ID*.

Range: *GPLID-Subsystem ID*

GPLID—**atmansi, atmitu, atmhc, bphcap, bpdcm, bpdcm2, ccs7itu, eoam, eroute, erthc, gls, hipr, ipghc, ipgwi, iplhc, iplim, iplimi, ips, ipsg, ipshc, mcp, pktgen, sccp, sccphc, slanhc, ss7ansi, ss7epm, ss7gx25, ss7hc, ss7ipgw, ss7ml, stplan, utility, vscpp, vxutil, vxwslan**

Subsystem ID—**a, b, act, stby, all**

The **oam** GPL can be specified with any of the subsystem IDs.

For all other GPLs, only the **all** subsystem ID is valid.

:dformat= (optional)

This parameter specifies the memory dump format.

Range: **byte, word, dword**

Default: **byte**

:imt= (optional)

This parameter specifies the IMT address.

Range: **0-255**

:loc= (optional)

Location. This parameter specifies the card location as stenciled on the shelf of the system.

Range: **1101-1108, 1111-1113, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118, 1115**

:paddr= (optional)

This parameter specifies the physical offset of the memory address.

Range: **h'00-h'ffffff**

:proc= (optional)

This parameter specifies the processor type.

Range: **appl, com**

appl—Application processor

com—Communication processor

Default: **appl**

Example

```
disp-mem:card=ss7ansi-all:addr=h'03a-h'001:bc=8
```

```
disp-mem:loc=1204:paddr=h'103abc:bc=8:dformat=word
```

```
disp-mem:loc=1204:paddr=h'103abc:bc=8:dformat=dword
```

Dependencies

Either the **loc**, **imt**, or **card** parameter must be specified.

Only one of the **loc**, **imt**, and **card** parameters can be specified in the command.

The **addr** and **paddr** parameters cannot be specified together in the command.

The value of the **bc** parameter cannot exceed **2000**.

The card location specified by the **loc** parameter must be in the database.

All of the subsystem values can be specified with the **oam** GPLID. The other GPLID values can be specified only with the **all** subsystem value.

Card locations (**loc** parameter) **1114**, **1116**, **1117**, **1118**, and the **HMUX** and **HIPR** locations (xy **09** and xy **10** where x is the frame and y is shelf) are not valid for memory commands.

Notes

The **imt** parameter allows this command to be entered for a card that has not been configured in the system.

Output

disp-mem:card=psm-a:addr=h'03a-h'001:bc=8

rlghncxa03w 01-03-22 21:13:50 EST Rel 28.1.0

SDS Memory Dump from IMT Address H'00f6

Source-Address = H'003a0001 Length = 8 bytes

0000 04 0d 3d 1c 04 0d 3d 1c ..=...=.

;

disp-mem:loc=1204:paddr=h'103abc:bc=8:dformat=word

rlghncxa03w 01-03-22 21:13:50 EST Rel 28.1.0

SDS Memory Dump from IMT Address H'000a

Source-Address = H'00103abc Length = 8 bytes

0000 ffff 00ff 00ff 0000

;

disp-mem:loc=1204:paddr=h'103abc:bc=8:dformat=dword

rlghncxa03w 01-03-22 21:13:50 EST Rel 28.1.0

SDS Memory Dump from IMT Address H'000a

Source-Address = H'00103abc Length = 8 bytes

0000 00ffffff 000000ff

;

disp-trace

Display Trace

Use this command to display trace entries.

Keyword: disp-trace

Related Commands: dlt-trace, ent-trace

Command Class: Debug

Parameters

:traceid= (optional)

Trace ID. Identifier of the trace entry to be displayed.

Range: 1-10

Example

disp-trace

disp-trace:traceid=5

Dependencies

None

Output

disp-trace

stdcfq2b 07-10-05 12:55:32 EST EAGLE 37.5.0

Trace Request 1:

CARD= SS7ANSI OPC= 001-001-001

TRACE DISPLAY COMPLETE.

;

dlt-bp**Delete Breakpoint**

Use this command to delete breakpoints in the communication or application processors.

Keyword: **dlt-bp**

Related Commands: **disp-bp**, **ent-bp**

Command Class: Debug

Parameters

:addr= (optional)

This parameter specifies the address in the form of *segment–offset*.

Range: *segment–offset*
segment—h'00–h'ffff
offset—h'00–h'ffff

:card= (optional)

Card location. This parameter specifies the card location in the form of *GPLID–Subsystem ID*.

Range: *GPLID–Subsystem ID*
GPLID—atmansi, atmitu, atmhc, bphcap, bpdcm, bpdcm2, ccs7itu, eoam, eroute, erthc, gls, hipr, ipghc, ipgwi, iplhc, iplim, iplimi, ips, ipsg, ipshc, mcp, mplga, mplgi, pktgen, sccp, sccphc, slanhc, ss7ansi, ss7epm, ss7gx25, ss7hc, ss7ipgw, ss7ml, stplan, utility, vscpp, vxutil, vxwslan

Subsystem ID—a, b, act, stby, all

The **oam** GPL can be specified with any of the subsystem IDs. For all other GPLs, only the **all** subsystem ID is valid.

:imt= (optional)

This parameter specifies the IMT address of the card.

Range: **0-255**

:loc= (optional)

Location. This parameter specifies the card location as stenciled on the shelf of the system.

Range: **1101-1113, 1201-1218, 1301-1318, 2101-2118, 2201-2218, 2301-2318, 3101-3118, 3111-3118, 3201-3218, 3301-3318, 4101-4118, 4201-4218, 4301-4318, 5101-5118, 5201-5218, 5301-5318, 6101-6118, 1115**

The command is not valid for HMUX cards in locations xy09 and xy10 (x = the frame, y = the shelf).

:paddr= (optional)

This parameter specifies the physical offset of the memory address.

Range: **h'00–h'ffffff**

:proc= (optional)

This parameter specifies the processor type.

Range: **appl, com**
appl — Application processor
com — Communication processor

Default: **appl**

:ueng= (optional)

This parameter specifies the microengine number.

This parameter is valid only on IXP-based cards. If this parameter is not specified, the card processor type is assumed to be ARM.

Range: **0-5**

Example

```
dlt-bp:card=ss7gx25-all
dlt-bp:loc=1109
dlt-bp:loc=1209:ueng=2
dlt-bp:card=hipr-all
```

Dependencies

The **loc**, **imt**, or **card** parameter must be specified.

Only one of the **loc**, **imt**, and **card** parameters can be specified in the command.

Either the **addr** or **paddr** parameter, but not both, must be specified in the command.

The **ueng** parameter can be specified only for IXP-based cards (such as HIPR cards).

The card location specified by the **loc** parameter must be in the database.

Card locations (**loc** parameter) **1114**, **1116**, **1117**, **1118**, and the HMUX locations (xy **09** and xy **10** where x is the frame and y is the shelf) are not valid for break point commands.

All of the subsystem values can be specified with the **oam** GPLID. The other GPLID values can be specified only with the **all** subsystem value.

Notes

The **imt** parameter allows this command to be entered for a card that has not been configured in the system.

Output

```
dlt-bp:card=oam-all:proc=com
Command Accepted - Processing

tekelecstp 97-01-20 19:21:10 EST Rel 37.0.0
dlt-bp:card=oam-all:proc=com
Command entered at terminal #1.
;
```

dlt-trace**Delete Trace**

Use this command to delete provisioned MSU tracing criteria from the database.

Keyword: **dlt-trace**

Related Commands: **disp-trace**, **ent-trace**

Command Class: Debug

Parameters

:traceid= (optional)
Trace ID. Identifier of the trace entry to be deleted.
Range: **1-10**

Example

```
dlt-trace:traceid=5
dlt-trace
```

Dependencies

None

Output

```

dlt-trace:traceid=1
stdcfg2b 07-10-05 13:03:29 EST EAGLE 37.5.0
dlt-trace:traceid=1
Command entered at terminal #4.

```

```
;
```

ent-bp**Enter Breakpoint**

Use this command to add breakpoints in communications and application processors in the system.

Keyword: **ent-bp**

Related Commands: **disp-bp**, **dlt-bp**

Command Class: Debug

Parameters

:access= (optional)

This parameter specifies the access type, in the form of *access type-format*.

Use the **data** parameter to set the format on IXP-based cards (such as HIPR cards).

Range: *access type-format*

access type—**r**, **w**, **rw** (read, write, read-write)

format—**byte**, **word**, **dword**, **any**

Default: For x86-based cards—**rw-byte**

For IXP-based cards—**rw-any**

:addr= (optional)

This parameter specifies the memory location in the form of *segment-offset*.

Range: *segment-offset*

segment—**h'00-h'ffff**

offset—**h'00-h'ffff**

:bc= (optional)

This parameter specifies the number of data bytes to display.

For IXP-based cards, **bc** represents the number of bytes of memory. The number of bytes of stack to be displayed will be 256 – **bc**. For example, if **bc=128**, 128 bytes of memory and 128 bytes of stack will be displayed. If **bc=0**, 0 bytes of memory and 256 bytes of stack will be displayed. The exception to this rule is that 1 byte of stack will never be displayed.

Range: **0-256**

For x86-based cards, the maximum number of bytes is **96**.

For IXP-based cards, the maximum number of bytes is **256**.

:ca= (optional)

This parameter specifies condition “a” in the form of *register-condition-integer*.

The value *register* is the CPU internal register.

The value *condition* is the comparison condition (equal, not equal, less than, greater than, greater than or equal, less than or equal).

The value *integer* is the value for comparison.

Range: *register-condition-integer*
register—**sp, bp, ds, ss, es, cs, fl, ax, ah, al, bx, bh, bl, cx, ch, cl, dx, dh, dl, di, si, ip, fs, gs, esi, edi, ebp, esp, eip, efl, eax, ebx, ecx, edx, lr, pc, r1-r15**
condition—**eq, neq, gt, lt, gte, lte**
integer—**h'00–h'ffffff**

:card= (optional)

This parameter specifies the card location, in the form of *GPLID–Subsystem ID*.

Range: *GPLID–Subsystem ID*
GPLID—**atmansi, atmitu, atmhc, bpdcm, bpdcm2, bphcap, bphcapt, bpmpl, bpmplt, ccs7itu, eoam, eroute, erthc, gls, hipr, ipghc, ipgwi, iplhc, iplim, iplimi, ips, ipsg, ipshc, mcp, pktgen, mcp, oam, sccp, sccphc, slanhc, ss7ansi, ss7epm, ss7gx25, ss7hc, ss7ipgw, ss7ml, stplan, utility, vscpp, vxutil, vxwslan**
Subsystem ID—**a, b, act, stby, all**

The **oam** GPL can be specified with any of the subsystem IDs.

For all other GPLs, only the **all** subsystem ID is valid.

:cb= (optional)

This parameter specifies condition “b” in the form of *register–condition–integer*.

The value *register* is the CPU internal register.

The value *condition* is the comparison condition (equal, not equal, less than, greater than, greater than or equal, less than or equal).

The value *integer* is the value for comparison.

Range: *register-condition-integer*
register—**sp, bp, ds, ss, es, cs, fl, ax, ah, al, bx, bh, bl, cx, ch, cl, dx, dh, dl, di, si, ip, fs, gs, esi, edi, ebp, esp, eip, efl, eax, ebx, ecx, edx, lr, pc, r0-r15**
condition—**eq, neq, gt, lt, gte, lte**
integer—**h'00–h'ffffff**

:ctx= (optional)

This parameter specifies the bit-mapped microengine context mask.

Range: **1-15**

:da= (optional)

This parameter specifies the dump address, in the form of *segment–offset*.

Range: *segment–offset*
segment—**h'00–h'ffff**
offset—**h'00–h'ffff**

:data= (optional)

Instructs a data breakpoint to qualify on a match of the data. This parameter is valid only on IXP-based cards (such as HIPR cards).

Range: *value-mask*
value—**0-0xFFFFFFFF**
mask—**0-0xFFFFFFFF**

Default: **0-0**

:dformat= (optional)

Memory dump format (byte, doubleword, word).

Range: byte, dword, word
Default: byte

:dpaddr= (optional)

Memory dump address (physical offset).

Range: h'00–h'ffffff

:dr= (optional)

The data register indirect memory dump, in the form *register-register-integer*.

The *register-register* value is the CPU internal register.

The *integer* value is the offset value.

Range: *register-register-integer*

register—sp, bp, ss, ds, es, cs, fl, ax, ah, al, bx, bh, bl, cx, ch, cl, dx, dh, dl, di, si, ip, fs, gs, esi, edi, ebp, esp, eip, efl, eax, ebx, ecx, edx

register—sp, bp, ds, ss, es, cs, fl, ax, ah, al, bx, bh, bl, cx, ch, cl, dx, dh, dl, di, si, ip, fs, gs, esi, edi, ebp, esp, eip, efl, eax, ebx, ecx, edx

integer—h'00–h'ffffff

:drarm= (optional)

ARM register indirect memory dump.

Range: *ARM register-integer*

ARM register—r0-r15, sp, lr, pc

mask—0-65535

The value *ARM register* is the CPU internal register.

The value *integer* is the offset value.

The value *ARM register* is the CPU internal register.

The value *integer* is the offset value.

Default: 0-0

:dur= (optional)

Breakpoint duration.

Range: temp, perm

Default: temp

:imt= (optional)

IMT address of the card.

Range: 0-255

:ind= (optional)

Indirection count.

Range: 0-3

Default: 0

:loc= (optional)

The card location as stenciled on the shelf of the system.

Range: 1101-1113, 1115, 1201-1218, 1301-1318, 2101-2118, 2201-2218, 2301-2318, 3101-3118, 3201-3218, 3301-3318, 4101-4118, 4201-4218, 4301-4318, 5101-5118, 5201-5218, 5301-5318, 6101-6118

The command is not valid for HMUX cards in locations xy09 and xy10 (x = the frame, y = the shelf).

:paddr= (optional)

The physical offset of the memory address.

Range: h'00–h'ffffff

:proc= (optional)

Processor type.

Range: **appl**, **com**

appl — Application processor

com — Communication processor

Default: **appl**

:rep= (optional)

Repetitions for this breakpoint.

Range: **0-255**

Default: **0**

:type= (optional)

Breakpoint type in the form of processor type-breakpoint type

Range: *processor type-breakpoint type*

processor type—**p186**, **p286**, **p486**, **arm**, **ixp**

breakpoint type—**code**, **codehw**, **codesw**, **data**

Default: For x46-based cards—**p486-code**

For IXP-based cards—**arm-codesw**

:ueng= (optional)

Microengine number. This parameter is valid only on IXP-based cards. If this parameter is not specified, the card processor type is assumed to be ARM.

Range: **0-5**

Example

```
ent-bp:loc=1113:addr=h'03a-0001
```

```
ent-bp:loc=1204:paddr=h'27c3c:type=p486-data:access=rw-word
```

```
ent-bp:loc=1109:paddr=h'401000:type=arm-codesw:access=rw-  
any:ca=r7-eq-0
```

```
ent-bp:loc=1209:paddr=h'402000:type=arm-data:access=w-  
any:data=h'1111-h'ff
```

```
ent-bp:loc=1309:paddr=h'403000:type=ixp-codesw:ueng=2:ctx=1
```

```
ent-bp:card=hipr-all:paddr=h'404000:type=arm-  
codehw:drarm=r3-0:bc=64
```

Dependencies

All of the subsystem values can be specified with the **oam** GPLID. The other GPLID values can be specified only with the **all** subsystem value.

Card locations (**loc** parameter) **1114**, **1116**, **1117**, and **1118** are not valid for break point commands.

The **loc** parameter, the **imt** parameter, or the **card** parameter must be specified.

Only one of the **loc**, **imt**, and **card** parameters can be specified in the command.

The **dr** parameter and the **da** parameter cannot be specified together in the command.

The **dur=perm** parameter and the **rep** parameter cannot be specified together in the command.

The **dur=perm** parameter cannot be specified when the value of the processor type portion of the **type** parameter is **p186** or **p286**.

Either the **addr** parameter or the **paddr** parameter, but not both, must be specified in the command.

When the **da** parameter, the **dr** parameter, or the **drarm** parameter is specified, the **dpaddr** parameter cannot be specified.

When the **paddr** parameter and the **bc** parameter are specified, either the **dpaddr** or **dr** parameter must be specified in the command.

The **access** parameter can be specified only when the **type** parameter value is **p486-data** or **arm-data**.

The **bc** parameter value cannot be greater than **96** for x86-based cards.

The **ind** parameter value cannot be greater than **3**.

The specified card must be in use.

For 80286 processors, registers for 80386 processors cannot be specified.

For 80286 processors, **integer** values for registers and conditions must be less than **65535**.

The **ueng** parameter is valid only on IXP-based cards (the value **ixp** is specified for the processor type portion of the **type** parameter).

The **cts** parameter is valid only on IXP-based cards (the value **ixp** is specified for the processor type portion of the **type** parameter).

The **data** parameter is valid only on IXP-based cards.

The **data** parameter is valid only when the value is **data** for the breakpoint type portion of the **type** parameter.

The register values **sp**, **lr**, **pc**, and **r0-r15** for the **ca**, **cb**, and **drarm** parameters are valid on an IXP-based card ARM processor.

The **ca** and **cb** parameters cannot be specified when the value **ixp** is specified for the processor type portion of the **type** parameter.

The **drarm** parameter can be specified only on IXP-based cards.

The **drarm** parameter can be specified only when the value **arm** is specified for the processor type portion of the **type** parameter.

The **dr** parameter cannot be specified for IXP-based cards.

The **data** and **codesw** values for the breakpoint type portion of the **type** parameter cannot be specified when the value **ixp** is specified for the processor type portion of the **type** parameter.

The **arm** and **ixp** values for the processor type portion of the **type** parameter are valid only on IXP-based cards.

The value **any** for the format portion of the **access** parameter can be specified only on IXP-based cards. The format value must be set to **any** on IXP-based cards.

When the value **ixp** is specified for the processor type portion of the **type** parameter, the **ueng** and **cts** parameters must be specified.

The **addr** parameter can be specified only when the **proc=com** parameter is specified for DS0 cards with PROM-based COM processors (such as TSMs).

When the **ca**, **cb**, and **dr** parameters are used with 80186 and 80286 processors, the register values **ip**, **fs**, **gs**, **esi**, **edi**, **ebp**, **esp**, **eip**, **efl**, **eax**, **ebx**, **ecx**, and **edx** cannot be specified. These registers can be used only with 80486 processors. The integer values for these parameters when used with 80186 and 80286 processors must be less than **h'ffff** (65535).

The **data** value for the breakpoint type portion of the **type** parameter cannot be specified with the values **p186**, **p286**, and **ixp** for the processor type portion of the **type** parameter.

The **da** parameter cannot be specified for IXP-based cards.

An ARM register value must be specified for an IXP-based card with an ARM processor.

Notes

The **imt** parameter allows this command to be entered for a card that has not been configured in the system.

Output

```
ent -bp:loc=1113:addr=h'03a-0001
rlghncxa03w 04-08-22 21:14:41 EST EAGLE 33.0.0
SDS Response Code 22 from IMT Address H'00f6 - command complete.

rlghncxa03w 04-08-22 21:14:41 EST EAGLE 33.0.0
SDS Response from IMT Address H'000a - command complete.
;
```

ent-trace**Enter Trace**

Use this debug command to trace MSUs sent to SCCP, VSCCP, or SS7 cards running the following applications: **ss7ansi**, **ccs7itu**, **sccp**, **vsccp**, **atmitu**, **atmansi**, **iplim**, **iplimi**, **ss7ipgw** or **ipgwi**.

The EAGLE 5 ISS traps MSUs that meet the provisioned tracing criteria, and the MSU remains in the trapped state for the life span of that MSU. This life span varies depending on the type of MSU. For MTP-Routed or GTT MSUs, the life span lasts until the MSU travels out of the EAGLE 5 ISS or is discarded. For LNP MSUs, the life span lasts until the request is processed. The response is not part of the LNP MSU. Trapping a response requires the provisioning of another MSU trace.

Table 6-3 lists by card type the parameters that can be used to filter an MSU.

Table 6-3. Parameter/Card Type Filters for MSUs

An MSU for this card type...	Can be filtered using one or more of the following parameters...
SCCP	error , gt , lrn , tn , ssp , sspa
VSCCP	error , gt , lrn , tn , ssp/sspa/sspi/sspn/sspn24 , dn , entityid , imei , imsi
ANSI SS7	error , ssp/sspa , opc/opca , dpc/dpca , tlnpisuptype , gt
ITU SS7	error , sspi/sspn/sspn24 , opci/opcn/opcn24 , dpci/dpcn/dpcn24 , gt

The following parameters are mutually exclusive: **lrn**, **tn**, **dn**, **entityid**, **imsi**, **imei**, **error**.

The following parameters can be used once in a single MSU trace request with ONE of the mutually exclusive parameters specified above: **opc**, **dpc**, **ilsn**, **si**, **gt**, **ssp**, **h0h1**, **cpc**, **cic/ecic**.

The **cic/ecic** parameters can be used only for ISUP traffic. The **ecic** parameter must be specified with the **cic** parameter.

For all cards supported by the **ent-trace** command, the **error** parameter can be provisioned as the only optional parameter or in addition to any other optional parameter to trace any messages that fail verification or processing. If the **error** parameter not specified, the default value is **error=no**.



CAUTION: If your system's configuration approaches the maximum number of provisioned SCCP cards, entering this command might cause an OAM to reset because of the amount of information that may be returned.

Keyword: ent-trace

Related Commands:

Command Class: Debug

Parameters

:card= (mandatory)

This parameter specifies the card location in the form of *APPL CLASS-Subsystem ID*.

Range: *APPL CLASS-Subsystem ID*
APPL CLASS—atmansi, atmitu, ccs7itu, iplim, iplimi, sccp, ss7ansi, ss7ipgw, ipgwi, vscpp
Subsystem ID—all

:brief= (optional)

This parameter specifies whether all information is provided for each MSU as it moves through the EAGLE 5 ISS.

Range: **no, yes**
no — All information, including data sections for the MSU, is displayed.
yes — The data sections for the MSU are not displayed.

:cic= (optional)

This parameter specifies the beginning value for a CIC range.

Range: **0-16383**

:cpc= (optional)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member (ni-nc-ncm)*.

Synonym: **cpca**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:cpci= (optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

The point code **0-000-0** is not a valid point code.

zone—0-7

area—000-255

id—0-7

:cpcn= (optional)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnngc, m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn, prefix-nnnnngc, prefix-m1-m2-m3-m4, prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:cpcn24= (optional)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:dn= (optional)

Directory Number. The **dn** parameter is used for ATINP, G-Flex, G-Port, INP, PPSMS, and V-Flex. The **tn** parameter is used as the directory number for LNP.

Range: 5-15 digits

Valid digits are **0-9, a-f, A-F**

:dpc= (optional)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-nm*)

Synonym: **dpca**

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001-005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006-255**.

The point code **000-000-000** is not a valid point code.

:dpci= (optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:dpcn= (optional)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnn-gc*, *m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn*, *prefix-nnnnn-gc*, *prefix-m1-m2-m3-m4*, *prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:dpcn24= (optional)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:ecic= (optional)

This parameter specifies the end value for a CIC range.

Range: **0-16383**

:entityid= (optional)

This parameter specifies the entity ID.

Range: 1-15 digits

1-15 digits; valid digits are **0-9, a-f, A-F**

:error= (optional)

This parameter specifies whether to perform a trace on any message verification error and message processing error

Range: **yes, no**

Default: **no**

:gt= (optional)

Global title. This parameter specifies the global title digits.

Range: 1-21 digits

Valid digits are **0-9, a-f, A-F**

:h0h1= (optional)

This parameter specifies a combination of values contained in some MSUs. The **h0** value is the code for a message group, and **h1** is the code for a message within that group.

Range: **0-255**

:ilsn= (optional)

This parameter specifies the incoming linkset name.

Range: ayyyyyyyy
1 alphabetic character followed by up to 9 alphanumeric characters.

:imei= (optional)

This parameter specifies the International Equipment Identifier.

Range: 14 digits
Exactly 14 digits; valid digits are **0-9, a-f, A-F**.

:imsi= (optional)

This parameter specifies the International Mobile Station Identifier.

Range: 5-15 digits
Valid digits are **0-9, a-f, A-F**.

:loc= (optional)

Location. This parameter specifies the card location of the card as stenciled on the shelf of the system.

Range: **1101-1108, 1111-1112, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118, 1113, 1115**

:lrn= (optional)

The local routing number.

Range: *Exactly 14 digits*
Valid digits are **0-9**.

:mode= (optional)

This parameter specifies the type of output that is displayed.

Range: **brief, default, detail, debug**
brief — Abbreviated information is displayed when an MSU matches the request.
default — The default value of this parameter.
detail — Detailed information is displayed when an MSU matches the request.
debug — Complete information is displayed when an MSU matches the request.

:opc= or :opca= (optional)

ANSI point code with subfields *network indicator-network cluster-network cluster member (ni-ncnm)*. The *prefix* subfield indicates a private point code (*prefix-ni-nc-ncm*).

Range: **000-255**
Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).
When **chg-sid:pctype=ansi** is specified, **ni = 000** is not valid.
When **chg-sid:pctype=ansi** is specified, **nc = 000** is not valid if **ni = 001-005**.
When **chg-sid:pctype=ansi** is specified, **nc = 000** is valid if **ni = 006-255**.
The point code **000-000-000** is not a valid point code.

:opci= (optional)

ITU international origination point code with subfields *zone-area-id*. The *prefix subfield* indicates a spare point code, private point code, or private and spare point code (*prefix-zone-area-id*).

Range: **s-, p-, ps-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-, p-, ps-**

zone—**0-7**

area—**000-255**

id—**0-7**

The point code **0-000-0** is not a valid point code.

:opc= (optional)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnngc, m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn, prefix-nnnnnngc, prefix-m1-m2-m3-m4, prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—**s-**

nnnnn—**0-16383**

gc—**aa-zz**

m1-m2-m3-m4—**0-14** for each member; values must sum to 14

:opc24= (optional)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—**000-255**

ssa—**000-255**

sp—**000-255**

:rep= (optional)

The number of MSUs to trap.

Range: **0-255**

:service= (optional)

This parameter specifies the service that is offered by the EAGLE 5 ISS.

Range: **gflex, gport, inpmr, inpq, smsmr, mnpsms, eir, idpr, idps, tif, tif2, tif3, none**

:si= (optional)

Service indicator.

Range: **0-15**

:sls= (optional)

Signaling link selector.

Range: **0-255**

:ssp= or :sspa= (optional)

ANSI destination point code with subfields *network indicator-network cluster-network cluster member* (*ni-nc-ncm*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

When **chg-sid:pctype=ansi** is specified, *ni* = **000** is not valid.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is not valid if *ni* = **001–005**.

When **chg-sid:pctype=ansi** is specified, *nc* = **000** is valid if *ni* = **006–255**.

The point code **000-000-000** is not a valid point code.

:sspi= (optional)

ITU international destination point code with subfields *zone-area-id*. The *prefix* subfield indicates a spare point code (*prefix-zone-area-id*).

Range: **s-, 0-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

zone—0-7

area—000-255

id—0-7

The point code **0-000-0** is not a valid point code.

:sspn= (optional)

ITU national destination point code in the format of a 5-digit number (*nnnnn*); or 2, 3, or 4 numbers (members) separated by dashes (*m1-m2-m3-m4*) as defined by the **chg-stpopts:npcfmti** flexible point code option. A group code must be specified when the ITUDUPPC feature is turned on (*nnnnngc, m1-m2-m3-m4-gc*). The *prefix* subfield indicates a spare point code (*prefix-nnnnn, prefix-nnnnngc, prefix-m1-m2-m3-m4, prefix-m1-m2-m3-m4-gc*).

Range: **s-, 0-16383, aa-zz**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

prefix—s-

nnnnn—0-16383

gc—aa-zz

m1-m2-m3-m4—0-14 for each member; values must sum to 14

:sspn24= (optional)

24-bit ITU national destination point code with subfields *main signaling area-sub signaling area-signaling point* (*msa-ssa-sp*).

Range: **000-255**

Specify a valid value for each subfield of the point code, and separate the subfields with a dash (-).

msa—000–255

ssa—000–255

sp—000–255

:tlnpisuptype= (optional)

The ISUP message type.

Range: **0-255**

:tn= (optional)

The directory number.

Range: 10 digits
Exactly 10 digits. Valid digits are **0-9**.

Example

```
ent-trace:gt=919460:card=SCCP-ALL
ent-trace:gt=919460:lrn=9105551234:ssp=10-10-10:card=SCCP-ALL:rep=2
ent-trace:opc=1-1-1:card=SS7ANSI-ALL:rep=2
ent-trace:tlnpisuptype=01:card=SS7ANSI-ALL
ent-trace:dn=12345:card=VSCCP-ALL
ent-trace:imsi=c122d:card=VSCCP-ALL
ent-trace:card=ccs7itu-all:dpc=2-7-5:error=no
ent-trace:card=vscpp-all:error=yes
ent-trace:card=ccs7itu-all:sspn24=10-11-12:opc=10-10-10:dpc=10-101-11
ent-trace:imei=123456789101234:card=VSCCP-ALL
ent-trace:entityid=c123:card=VSCCP-ALL
ent-trace:loc=1305:si=5:brief=yes
```

Dependencies

The **card** parameter or the **loc** parameter must be specified.

At least one optional parameter must be specified. The **error** parameter can be specified as the only optional parameter or with any of the other optional parameters in the command.

The following parameters cannot have a value of **none**: **gt**, **entityid**, **dn**, **imei**, and **imsi**.

For the **card** parameter, only the following values are allowed: **sccp**, **vscpp**, **ss7ansi**, **atmitu**, **atmansi**, **iplim**, **iplimi**, **ss7ipgw**, or **ccs7itu**.

The only qualifier allowed for the **card** parameter is **-all**.

The following parameters are invalid for SCCP cards: **entityid**, **dn**, **imei**, **imsi**, **opc**, **dpc**, **tlnpisuptype**, **sspi**, **sspn**, and **sspn24**.

The following parameters are invalid for ANSI SS7 cards running the **ss7ansi**, **atmansi**, **iplim**, or **ss7ipgw** GPLs: **gt**, **entityid**, **dn**, **imei**, **imsi**, **lrn**, and **tn**.

The following ITU point code parameters are invalid for ANSI SS7 cards running the **ss7ansi**, **atmansi**, **iplim**, or **ss7ipgw** GPLs: **opci**, **opc**, **opc24**, **dpci**, **dpc**, **dpc24**, **sspi**, **sspn**, and **sspn24**.

The following parameters are invalid for ITU SS7 cards running the **ccs7itu**, **atmitu**, or **iplimi** GPLs: **gt**, **entityid**, **dn**, **imei**, **imsi**, **lrn**, **tn**, and **tlnpisuptype**.

The following ANSI point code parameters are invalid for ITU SS7 cards running the **ccs7itu** or **iplimi** GPLs: **opc**, **opca**, **dpc**, **dpca**, **ssp**, and **sspa**.

The following parameters are invalid for VSCCP cards: **opc**, **dpc**, and **tlnpisuptype**.

The G-Flex, G-Port, INP, or V-Flex feature must be turned on, or the ATINP, IDP Relay or any TIF feature must be enabled before the **entityid** parameter can be specified.

The G-Flex feature or the Equipment Identity Register feature must be turned on before the **imsi** parameter can be specified.

If the ITU Duplicate Point Code (ITUDUPPC) feature is turned on, the ITU national point code must be specified as a full point code.

The Equipment Identity Register (EIR) feature must be turned on before the **imei** parameter can be specified.

The G-Flex, G-Port, INP, AINPQ, PPSMS, IDP Relay, or V-Flex feature must be turned on, or the ATINP feature must be enabled before the **dn** parameter can be specified.

Only one of the following parameters can be specified in a single MSU trace request: **lrn**, **tn**, **dn**, **entityid**, **imsi**, **imei**, or **error**.

A maximum of 10 traces can be entered in the system at a time.

Output

The following example displays output for an MTP trace.

ent - trace: loc=1101:dpc=7-1-0

```
stdcfg1b 07-08-10 15:51:33 EST EAGLE 37.5.0
```

```
MSU TRACE H'00e1: Card=1101 RX - Link B0
```

```
Trace Condition:
```

```
LOC= 1101
```

```
DPC= 007-001-000
```

```
MSU info:
```

```
TOTAL MSU SIZE= 12 Bytes
```

```
MSU DATA SIZE = 4 Bytes
```

```
      0  1  2  3  4  5  6  7  8  9  0  1  2  3  4  5  6  7  8  9
MTP:  85 00 01 07 01 65 01 16
```

```
DATA: 00 00 09 00
```

```
TRACE OUTPUT COMPLETE.
```

```
;
```

```
stdcfg1b 07-08-10 15:51:33 EST EAGLE 37.5.0
```

```
MSU TRACE H'00e1: Card=1101 Use RTE: 007-001-000:H'0001
```

```
Trace Condition:
```

```
LOC= 1101
```

```
DPC= 007-001-000
```

```
MSU info:
```

```
TOTAL MSU SIZE= 12 Bytes
```

```
MSU DATA SIZE = 4 Bytes
```

```
      0  1  2  3  4  5  6  7  8  9  0  1  2  3  4  5  6  7  8  9
MTP:  85 00 01 07 01 65 01 16
```

```
DATA: 00 00 09 00
```

```
TRACE OUTPUT COMPLETE.
```

```
;
```

```
stdcfg1b 07-08-10 15:51:33 EST EAGLE 37.5.0
```

```
MSU TRACE H'00e1: Card=1101 Sending to 1103:B1
```

```
Trace Condition:
```

```
LOC= 1101
```

```
DPC= 007-001-000
```

```
MSU info:
```

```
TOTAL MSU SIZE= 12 Bytes
```

```
MSU DATA SIZE = 4 Bytes
```

```
      0  1  2  3  4  5  6  7  8  9  0  1  2  3  4  5  6  7  8  9
MTP:  85 00 01 07 01 65 01 0b
```

```
DATA: 00 00 09 00
```

```
TRACE OUTPUT COMPLETE.
```

```
;
```

```
stdcfg1b 07-08-10 15:51:33 EST EAGLE 37.5.0
```

```
MSU TRACE H'00e1: Card=1103 MSU Received from 1101
```

```
Trace Condition:
```

```
LOC= 1101
```

```
DPC= 007-001-000
```

```
MSU info:
```

```
TOTAL MSU SIZE= 12 Bytes
```

```
MSU DATA SIZE = 4 Bytes
```

```

      0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9
MTP:  85 00 01 07 01 65 01 0b

```

```

DATA: 00 00 09 00
TRACE OUTPUT COMPLETE.

```

```

;

```

```

stdcfg1b 07-08-10 15:51:33 EST  EAGLE 37.5.0
MSU TRACE H'00e1:  Card=1103  MSU sent to L2 - B1
Trace Condition:
LOC=          1101
DPC=          007-001-000

```

```

MSU info:
TOTAL MSU SIZE= 12 Bytes
MSU DATA SIZE = 4 Bytes

```

```

      0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9
MTP:  85 00 01 07 01 65 01 0b

```

```

DATA: 00 00 09 00
TRACE OUTPUT COMPLETE.

```

```

;

```

The following example displays output for an SCCP trace.

ent -trace: loc=1101:gt=9194605500

```

stdcfg1b 07-08-10 15:51:33 EST  EAGLE 37.5.0
MSU TRACE H'00e2:  Card=1101  RX - Link B0
Trace Condition:
LOC=          1101
GT=           9194605500

```

```

MSU info:
TOTAL MSU SIZE= 90 Bytes
MSU DATA SIZE = 82 Bytes

```

```

      0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9
MTP:  83 00 01 01 01 65 01 02

```

```

SCCP: 09 80 03 0e 13 0b 8b 8c 28 04 01 0a 19 49 06 55 00 05 c3 0a
      04 05 06

```

```

TCAP: 3a e2 38 c7 04 e5 04 61 80 e8 30 e9 2e cf 01 00 d0 02 83 01
      f2 25 aa 0b 84 09 01 00 11 0a 19 49 06 12 19 84 09 02 00 11
      0a 19 39 88 41 63 84 07 07 00 01 03 21 03 00 df 45 01 00
TRACE OUTPUT COMPLETE.

```

```

;

```

```

stdcfg1b 07-08-10 15:51:33 EST  EAGLE 37.5.0
MSU TRACE H'00e2:  Card=1101  TVG: Sending to SCCP 1107
Trace Condition:
LOC=          1101
GT=           9194605500

```

```

MSU info:
TOTAL MSU SIZE= 90 Bytes
MSU DATA SIZE = 82 Bytes

```

```

      0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9
MTP:  83 00 01 01 01 65 01 02

```

```

SCCP: 09 80 03 0e 13 0b 8b 8c 28 04 01 0a 19 49 06 55 00 05 c3 0a
      04 05 06

```

```

TCAP: 3a e2 38 c7 04 e5 04 61 80 e8 30 e9 2e cf 01 00 d0 02 83 01

```

```

        f2 25 aa 0b 84 09 01 00 11 0a 19 49 06 12 19 84 09 02 00 11
        0a 19 39 88 41 63 84 07 07 00 01 03 21 03 00 df 45 01 00
TRACE OUTPUT COMPLETE.
;

stdcfg1b 07-08-10 15:51:33 EST EAGLE 37.5.0
MSU TRACE H'00e2: Card=1107 MSU Received from 1101
Trace Condition:
LOC=          1101
GT=           9194605500

MSU info:
TOTAL MSU SIZE= 90 Bytes
MSU DATA SIZE = 82 Bytes

      0  1  2  3  4  5  6  7  8  9  0  1  2  3  4  5  6  7  8  9
MTP:  83 00 01 01 01 65 01 02

SCCP: 09 80 03 0e 13 0b 8b 8c 28 04 01 0a 19 49 06 55 00 05 c3 0a
      04 05 06

TCAP: 3a e2 38 c7 04 e5 04 61 80 e8 30 e9 2e cf 01 00 d0 02 83 01
      f2 25 aa 0b 84 09 01 00 11 0a 19 49 06 12 19 84 09 02 00 11
      0a 19 39 88 41 63 84 07 07 00 01 03 21 03 00 df 45 01 00
TRACE OUTPUT COMPLETE.
;

stdcfg1b 07-08-10 15:51:33 EST EAGLE 37.5.0
MSU TRACE H'00e2: Card=1107 SCCP: Before SS7 Trans Encod
Trace Condition:
LOC=          1101
GT=           9194605500

MSU info:
TOTAL MSU SIZE= 97 Bytes
MSU DATA SIZE = 89 Bytes

      0  1  2  3  4  5  6  7  8  9  0  1  2  3  4  5  6  7  8  9
MTP:  83 00 01 01 01 65 01 02

SCCP: 09 80 03 0e 13 0b 8b 8c 28 04 01 0a 19 49 06 55 00 05 c3 0a
      04 05 06

TCAP: 3a e2 38 c7 04 e5 04 61 80 e8 30 e9 2e cf 01 00 d0 02 83 01
      f2 25 aa 0b 84 09 01 00 11 0a 19 49 06 12 19 84 09 02 00 11
      0a 19 39 88 41 63 84 07 07 00 01 03 21 03 00 df 45 01 00 02
      08 01 65 01 00 04
TRACE OUTPUT COMPLETE.
;

stdcfg1b 07-08-10 15:51:33 EST EAGLE 37.5.0
MSU TRACE H'00e2: Card=1107 SCCP: After SS7 Trans Encode
Trace Condition:
LOC=          1101
GT=           9194605500

MSU info:
TOTAL MSU SIZE= 97 Bytes
MSU DATA SIZE = 89 Bytes

      0  1  2  3  4  5  6  7  8  9  0  1  2  3  4  5  6  7  8  9
MTP:  83 00 01 07 00 01 01 02

SCCP: 09 80 03 0e 13 0b cb 10 00 01 07 0a 19 49 06 55 00 05 c3 0a
      04 05 06

```

```

TCAP: 3a e2 38 c7 04 e5 04 61 80 e8 30 e9 2e cf 01 00 d0 02 83 01
      f2 25 aa 0b 84 09 01 00 11 0a 19 49 06 12 19 84 09 02 00 11
      0a 19 39 88 41 63 84 07 07 00 01 03 21 03 00 df 45 01 00 02
      08 01 65 01 00 04
TRACE OUTPUT COMPLETE.
;

stdcfg1b 07-08-10 15:51:33 EST EAGLE 37.5.0
MSU TRACE H'00e2: Card=1107 Use RTE 007-001-000:H'0009
Trace Condition:
LOC=          1101
GT=           9194605500

MSU info:
TOTAL MSU SIZE= 97 Bytes
MSU DATA SIZE = 89 Bytes

      0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9
MTP: 83 00 01 07 00 01 01 02

SCCP: 09 80 03 0e 13 0b cb 10 00 01 07 0a 19 49 06 55 00 05 c3 0a
      04 05 06

TCAP: 3a e2 38 c7 04 e5 04 61 80 e8 30 e9 2e cf 01 00 d0 02 83 01
      f2 25 aa 0b 84 09 01 00 11 0a 19 49 06 12 19 84 09 02 00 11
      0a 19 39 88 41 63 84 07 07 00 01 03 21 03 00 df 45 01 00 02
      08 01 65 01 00 04
TRACE OUTPUT COMPLETE.
;

stdcfg1b 07-08-10 15:51:33 EST EAGLE 37.5.0
MSU TRACE H'00e2: Card=1107 Sending to 1103:B1
Trace Condition:
LOC=          1101
GT=           9194605500

MSU info:
TOTAL MSU SIZE= 97 Bytes
MSU DATA SIZE = 89 Bytes

      0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9
MTP: 83 00 01 07 00 01 01 01

SCCP: 09 80 03 0e 13 0b cb 10 00 01 07 0a 19 49 06 55 00 05 c3 0a
      04 05 06

TCAP: 3a e2 38 c7 04 e5 04 61 80 e8 30 e9 2e cf 01 00 d0 02 83 01
      f2 25 aa 0b 84 09 01 00 11 0a 19 49 06 12 19 84 09 02 00 11
      0a 19 39 88 41 63 84 07 07 00 01 03 21 03 00 df 45 01 00 02
      08 01 65 01 00 04
TRACE OUTPUT COMPLETE.
;

stdcfg1b 07-08-10 15:51:33 EST EAGLE 37.5.0
MSU TRACE H'0000: Card=1103 MSU Received from 1107
Trace Condition:
LOC=          1101
GT=           9194605500

MSU info:
TOTAL MSU SIZE= 97 Bytes
MSU DATA SIZE = 89 Bytes

      0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9

```



```

MTP: 83 00 01 07 00 01 01 01

SCCP: 09 80 03 0e 13 0b cb 10 00 01 07 0a 19 49 06 55 00 05 c3 0a
      04 05 06

TCAP: 3a e2 38 c7 04 e5 04 61 80 e8 30 e9 2e cf 01 00 d0 02 83 01
      f2 25 aa 0b 84 09 01 00 11 0a 19 49 06 12 19 84 09 02 00 11
      0a 19 39 88 41 63 84 07 07 00 01 03 21 03 00 df 45 01 00 02
      08 01 65 01 00 04
TRACE OUTPUT COMPLETE.
;

```

```

stdcfg1b 07-08-10 15:51:33 EST EAGLE 37.5.0
MSU TRACE H'0000: Card=1103 MSU sent to L2 - B1
Trace Condition:
LOC=          1101
GT=           9194605500

```

```

MSU info:
TOTAL MSU SIZE= 90 Bytes
MSU DATA SIZE = 82 Bytes

```

```

      0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9
MTP: 83 00 01 07 00 01 01 01

SCCP: 09 80 03 0e 13 0b cb 10 00 01 07 0a 19 49 06 55 00 05 c3 0a
      04 05 06

TCAP: 3a e2 38 c7 04 e5 04 61 80 e8 30 e9 2e cf 01 00 d0 02 83 01
      f2 25 aa 0b 84 09 01 00 11 0a 19 49 06 12 19 84 09 02 00 11
      0a 19 39 88 41 63 84 07 07 00 01 03 21 03 00 df 45 01 00
TRACE OUTPUT COMPLETE.
;

```

The following example displays output for a trace when truncated output is requested. Only the filters that are specified in the command are displayed.

ent-

trace:loc=1305:si=0:hoh1=20:sls=255:cpc=001-002-003:mode=debug:brief=yes

```

tklc1071501 08-09-22 10:49:00 EST EAGLE5 39.2.0
;

```

```

tklc1071501 08-09-22 10:49:00 EST EAGLE5 39.2.0
MSU TRACE H'0081: Card=1305
Trace ID 1 Condition:
LOC=          1305
SI=           0
H0H1=         20
SLS=          255
CPC=          001-002-003
MODE=         DEBUG

```

```

Info: RX - Link A0

```

```

TRACE OUTPUT COMPLETE.
;

```

```

tklc1071501 08-09-22 10:49:00 EST EAGLE5 39.2.0
MSU TRACE H'0081: Card=1305
Trace ID 1 Condition:
LOC=          1305
SI=           0
H0H1=         20
SLS=          255
CPC=          001-002-003

```

```

MODE=          DEBUG

Info: TIF Stop Action: OK

TRACE OUTPUT COMPLETE.
;

tklc1071501 08-09-22 10:49:00 EST  EAGLE5 39.2.0
MSU TRACE H'0081: Card=1305
Trace ID 1 Condition:
LOC=           1305
SI=            0
H0H1=          20
SLS=           255
CPC=           001-002-003
MODE=          DEBUG

Info: TVG: Sending to SCCP 1317

TRACE OUTPUT COMPLETE.
;

tklc1071501 08-09-22 10:49:00 EST  EAGLE5 39.2.0
MSU TRACE H'0081: Card=1317
Trace ID 1 Condition:
LOC=           1305
SI=            0
H0H1=          20
SLS=           255
CPC=           001-002-003
MODE=          DEBUG

Info: SCCP: MSU RX from 1305

TRACE OUTPUT COMPLETE.
;

tklc1071501 08-09-22 10:49:00 EST  EAGLE5 39.2.0
MSU TRACE H'0081: Card=1317
Trace ID 1 Condition:
LOC=           1305
SI=            0
H0H1=          20
SLS=           255
CPC=           001-002-003
MODE=          DEBUG

Info: TIF Process Msg: Ruleset TIF1

TRACE OUTPUT COMPLETE.
;

tklc1071501 08-09-22 10:49:00 EST  EAGLE5 39.2.0
MSU TRACE H'0081: Card=1317
Trace ID 1 Condition:
LOC=           1305
SI=            0
H0H1=          20
SLS=           255
CPC=           001-002-003
MODE=          DEBUG

Info: TIF: No Error CdPN:111111119703819111100

TRACE OUTPUT COMPLETE.

```

```

;

tklc1071501 08-09-22 10:49:00 EST EAGLE5 39.2.0
MSU TRACE H'0081: Card=1305
Trace ID 1 Condition:
LOC=          1305
SI=           0
H0H1=        20
SLS=         255
CPC=         001-002-003
MODE=        DEBUG

Info: Use RTE (16) DPCa:  023-172-011, OPCa:  013-159-005

TRACE OUTPUT COMPLETE.

;

tklc1071501 08-09-22 10:49:00 EST EAGLE5 39.2.0
MSU TRACE H'0081: Card=1305
Trace ID 1 Condition:
LOC=          1305
SI=           0
H0H1=        20
SLS=         255
CPC=         001-002-003
MODE=        DEBUG

Info: Sending to 2311:B3

TRACE OUTPUT COMPLETE.

;

tklc1071501 08-09-22 10:49:00 EST EAGLE5 39.2.0
MSU TRACE H'0081: Card=2311
Trace ID 1 Condition:
LOC=          1305
SI=           0
H0H1=        20
SLS=         255
CPC=         001-002-003
MODE=        DEBUG

Info: MSU Received from 1305

TRACE OUTPUT COMPLETE.

;

tklc1071501 08-09-22 10:49:00 EST EAGLE5 39.2.0
MSU TRACE H'0081: Card=2311
Trace ID 1 Condition:
LOC=          1305
SI=           0
H0H1=        20
SLS=         255
CPC=         001-002-003
MODE=        DEBUG

Info: MSU sent to L2 - B3: DPCa=  023-172-011, OPCa=  013-159-005

TRACE OUTPUT COMPLETE.

;

tklc1071501 08-09-22 10:49:00 EST EAGLE5 39.2.0
MSU TRACE H'0081: Card=2311
Trace ID 1 Condition:

```

```

LOC=          1305
SI=           0
H0H1=        20
SLS=         255
CPC=         001-002-003
MODE=        DEBUG

Info: Transmitted and ACK'd on B3

TRACE OUTPUT COMPLETE.
;

```

rtrv-upgrade-config

Retrieve Upgrade Configuration

Use this command to retrieve provisioned data used by the upgrade software during an upgrade of an in-service EAGLE 5 ISS from a source release to the target release.

Keyword: **rtrv-upgrade-config**

Related Commands: **act-upgrade**, **chg-upgrade-config**

Command Class: Debug

Parameters

:display= (optional)

Display Indicator. This parameter indicates what type of output is to be displayed.

Range: **tblcnv**, **prtnstat**, **all**

tblcnv— Displays a list of DMS tables that will be converted during the next upgrade. These tables are selected for conversion using the **chg-upgrade-config** command.

prtnstat— This parameter is not implemented at this time.

all— Display all upgrade configuration data.

Default: **all**

Example

Display a list of DMS tables that will be converted during the next upgrade.

```
rtrv-upgrade-config:display=tblcnv
```

```
rtrv-upgrade-config
```

Dependencies

None

Output

```

rtrv-upgrade-config:display=tblcnv
rlghncxa03w 07-03-13 08:15:45 EST EAGLE 37.5.0
The following tables will be converted:
    FEAT_CTRL Table, ID=327
Command Completed.
;

rtrv-upgrade-config
rlghncxa03w 08-09-13 08:15:45 EST EAGLE 39.2.0
Software Access Key entered on system: VBJYAPDPBTEJB
Command Completed.
;

```

send-msg

Send Message

Use this debug command to manually simulate a system generated message from a user terminal. The parameters (not entered by the user) are defaulted to:

- Origination subsystem = **cam_active**
- Destination subsystem = **orig application ID=appl_ID_ui**
- Violation= **no report**
- Bus = **imt choice**
- Message length = **computed**

Keyword: send-msg

Related Commands:

Command Class: Debug

Parameters

:da= (mandatory)

This parameter specifies the destination application ID.

Range: 0-255

:ds= (mandatory)

This parameter specifies the destination subsystem.

Range: 0-255

:f= (mandatory)

This parameter specifies the function ID.

Range: 0-255

:loc= (mandatory)

Location. This parameter specifies the card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1113, 1115, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118

:alt= (optional)

This parameter specifies whether to use the alternate bus bit.

Range: on, off

Default: on

:bus= (optional)

This parameter specifies the IMT bus.

Range: a, b

Default: a

:d0= (optional)

This parameter specifies the application data.

Range: 0-255

:d1= (optional)

This parameter specifies the application data.

Range: 0-255

:d2= (optional)

Application Data.

Range: 0-255

- :d3=** (optional)
This parameter specifies the application data.
Range: 0-255
- :d4=** (optional)
This parameter specifies the application data.
Range: 0-255
- :d5=** (optional)
This parameter specifies the application data.
Range: 0-255
- :d6=** (optional)
This parameter specifies the application data.
Range: 0-255
- :d7=** (optional)
This parameter specifies the application data.
Range: 0-255
- :d8=** (optional)
This parameter specifies the application data.
Range: 0-255
- :d9=** (optional)
This parameter specifies the application data.
Range: 0-255
- :len=** (optional)
This parameter specifies the message length in bytes.
Range: 0-65535
Default: Calculated
- :oa=** (optional)
This parameter specifies the originating application ID.
Range: 0-255
Default: 2
- :os=** (optional)
This parameter specifies the originating subsystem.
Range: 0-255
Default: 0
- :sut=** (optional)
This parameter specifies the signal unit type.
Range: 0-9
Default: 2

Example

```
send-msg: loc=1113:os=2:oa=h'28:ds=2:da=h'28:f=7
send-msg: loc=1113:ds=2:oa=h'17:da=h'30:f=11
send-msg: loc=1116:ds=2:oa=h'17::da=h'30:f=12
```

Dependencies

The value of the **da** parameter must be valid.

The destination location must be equipped to receive messages.

Card locations **xy 09** and **xy 10** cannot be used with bus **b** and bus **a**, respectively.

The value of the **ds** parameter must be valid.

Notes

Both the **bus** and **sut** parameters must be used when sending a message to an HMUX or HIPR card.

If the **bus** parameter is not specified with an HMUX or HIPR card location on **imt b** (such as **xy 10**), the bus **b** parameter value is used instead of the bus **a** parameter value.

Output

```
send-msg: loc=1113:os=2:oa=h'28:ds=2:da=h'28:f=7
rlghncxa03w 01-03-13 15:01:02 EST
0061.0019 CARD 1113 PSM ADMIN PSM became active
;

send-msg: loc=1113:ds=2:oa=h'17:da=h'30:f=11
rlghncxa03w 01-03-13 15:02:34 EST
System Buffer sent has following attributes :
  Msg Length = H'0006
  Dest Card = H'00f4
  Orig Subsys = H'0002      Dest Subsys = H'0002
  Orig Appl ID = H'0017     Dest Appl ID = H'0030
  Func ID = H'000b         Bus/Alt/SUT = H'000b
  Violation Ind = H'0000
User Message sent to location 1113.
;

send-msg: sut=7: loc=1110:ds=0:da=h'40:f=h'a3:d0=0:bus=b
tekelecstp 06-01-11 11:39:15 EST EAGLE 35.1.0
System Buffer sent has following attributes :
  Msg Length = H'0010
  Dest Card = H'00ff
  Orig Subsys = H'0001      Dest Subsys = H'0000
  Orig Appl ID = H'0030     Dest Appl ID = H'0040
  Func ID = H'00a3         Bus/Ret/Sut = H'0087
  Violation Ind = H'0000
User Message sent to location 1110.
;
```

set-mem

Set Memory

Use this command to set values in memory in the communication and application processors. If a card is reloaded, these memory changes are lost.

Keyword: set-mem

Related Commands: disp-mem

Command Class: Debug

Parameters

:addr= (optional)

This parameter specifies the address, in the form of *segment-offset*.

Range: *segment-offset*
 segment—h'00—h'ffff
 offset—h'00—h'ffff

:byte= (optional)

This parameter specifies the byte value to write to the specified memory location(s).

Range: 0–h'00–h'ff

:card= (optional)

This parameter specifies the card location, in the form of *GPLID–Subsystem ID*.

Range: *GPLID–Subsystem ID*

GPLID—atmansi, atmitu, atmhc, bphcap, bpdcm, bpdcm2, ccs7itu, eoam, eroute, erthc, gls, hipr, ipghc, ipgwi, iplhc, iplim, iplimi, ips, ipsg, ipshc, mcp, mplga, mplgi, pktgen, sccp, sccphc, slanhc, ss7ansi, ss7epm, ss7gx25, ss7hc, ss7ipgw, ss7ml, stplan, utility, vsccp, vxutil, vxwslan

Subsystem ID—a, b, act, stby, all

The **oam** GPL can be specified with any of the subsystem IDs.

For all other GPLs, only the **all** subsystem ID is valid.

:dword= (optional)

This parameter specifies a double word value to write to the specified memory location(s).

Range: 0–h'00–h'ffffff

:fill= (optional)

This parameter specifies the number of times that the value is to be written to successive addresses.

Range: 0-65535

Default: 1

:imt= (optional)

This parameter specifies the IMT address.

Range: 0-254

:loc= (optional)

Location. This parameter specifies the card location as stenciled on the shelf of the system.

Range: 1101-1108, 1111-1113, 1201-1208, 1211-1218, 1301-1308, 1311-1318, 2101-2108, 2111-2118, 2201-2208, 2211-2218, 2301-2308, 2311-2318, 3101-3108, 3111-3118, 3201-3208, 3211-3218, 3301-3308, 3311-3318, 4101-4108, 4111-4118, 4201-4208, 4211-4218, 4301-4308, 4311-4318, 5101-5108, 5111-5118, 5201-5208, 5211-5218, 5301-5308, 5311-5318, 6101-6108, 6111-6118, 1115

:mask= (optional)

This parameter specifies the mask that selects the bits that are to be included in the operation (op).

Range: 0-0xFFFFFFFF

Default: 0xFFFFFFFF

:op= (optional)

Operation. This parameter specifies the operation that is performed in order to arrive at the final value in the memory location.

Range: replace, and, or, x

Default: replace

:paddr= (optional)

This parameter specifies the physical offset of the memory address.

Range: h'00–h'ffffff

:proc= (optional)

This parameter specifies the processor type.

Range: appl, com

appl—Application processor

com—Communication processor

Default: appl

:word= (optional)

This parameter specifies a word value to write to the specified memory location(s).

Range: **h'00–h'ffff**

Example

set-mem:card=ss7ansi-all:addr=h'03a-h'001:byte=4

set-mem:loc=1109:paddr=h'201000:byte=0:fill=1024

set-mem:card=hipr-all:paddr=h'202000:word=h'2a:op=and:mask=h'fff

Dependencies

Either the **loc**, **imt**, or **card** parameter must be specified.

Only one of the **loc**, **imt**, and **card** parameters can be specified in the command.

Either the **addr** or **paddr** parameter can be specified, but not both, in the command.

The value of the **bc** parameter must not exceed 2000.

The card location specified by the **loc** parameter must be in the database.

All of the subsystem values can be specified with the **oam** GPLID. The other GPLID values can be specified only with the **all** subsystem value.

Card locations (**loc** parameter) **1114**, **1116**, **1117**, **1118**, and the **HMUX** and **HIPR** locations (xy **09** and xy **10** where x is the frame and y is shelf) are not valid for memory commands.

Either the **byte**, **word**, or **dword** parameter must be specified.

Only one of the **byte**, **word**, and **dword** parameters can be specified in the command.

The **paddr** parameter cannot be specified for an SS7 LIM card.

Notes

The **imt** parameter allows this command to be entered for a card that has not been configured in the system.

Output

set-mem:card=ss7ansi-all:addr=h'03a-h'001:byte=4

rlghncxa03w 01-03-22 21:14:03 EST Rel 28.1.0

SDS Response Code 22 from IMT Address H'00f6 - command complete.

;

Pass-Through Commands

This chapter introduces the pass-through commands and describes the command conventions. The pass-through commands are listed in alphabetical order starting on page 7-2.

Introduction

The pass-through commands are used within the **pass** command (see Chapter 5). Pass-through commands are passed through the OAM and sent to individual cards for processing. Pass-through commands reduce the need to add card-specific and application-specific code to the OAM build.

Command Conventions

The following is an example of a **pass** command:

```
pass:loc=1201:cmd="connmgr -c"
```

The **cmd** parameter contains the pass-through command (**connmgr -c**) within the double quotes.

Pass-through commands consist of two types of tokens: command name and command options. Tokens are whitespace-delimited and null-terminated. The generalized format of a pass-through command is:

```
command_name option1 option2....option n-1.... option n
```

In the example, the *command_name* is '**connmgr**' and the option is '-c'.

Options and option parameters are made up of a specific character string or a variable. The variable is to be replaced with a value selected from a range of values. Option variables and option parameter variables are underlined. For example, the **arp** command option **-d** has the parameter variable **IP address**. Specify the IP address as in the command **arp -d 192.9.200.44**. Do not enter the underlined text; enter a value instead.

Help information for each pass-through command can be obtained by using the option **-h** on any command.

arp**Address Resolution Protocol**

This command is used to display and modify the internet to ethernet address translation tables used by the address resolution protocol.

Keyword: arp

Command Class: IP Stack Maintenance

Options

Options and option parameters that are underlined indicate that a value must be specified for that option or parameter. For example, the arp command option **-d** has the parameter IP address. The IP address must be specified for which an ARP entry will be deleted, as in the command **arp -d 192.9.200.44**. Do not enter the underlined option or parameter; enter a value for the information represented by the underlined option or parameter.

-a

This option displays all entries in the ARP table.

-d IP address

This option deletes an ARP entry for the specified IP address.

The IP address is a TCP/IP address expressed in standard “dot notation.” IP addresses consist of the system’s network number and the machine’s unique host number. An example IP address is **192.9.200.44**, where **192.9.200** is the network number and **44** is the machine’s host number.

Range:

4 numbers separated by dots, with each number in the range of **0-255**.

-f

This option flushes all entries from the ARP table.

-h

This option displays help (usage) information for the command.

-s IP address MAC address

This option creates an ARP entry for the specified IP address and ethernet address.

Range:

4 numbers separated by dots, with each number in the range of **0-255**.

The IP address is a TCP/IP address expressed in standard “dot notation.” IP addresses consist of the system’s network number and the machine’s unique host number. For example, **192.9.200.44**, where **192.9.200** is the network number and **44** is the machine’s host number.

Range:

6 hexadecimal numbers separated by colons; each number in the range **0 - FF**.

The MAC (media access control) address is an ethernet address with the format **x:x:x:x:x:x**, where **x** is a hexadecimal integer from **0** to **FF**. For example, **08:00:20:1b:0f:f2**.

Example

```
arp -a
```

```
arp -s 192.9.200.44 08:00:20:1b:0f:f2
```

```
arp -d 192.9.200.44
```

```
arp -f
```

Dependencies

Only one of the options can be specified at a time.

The **arp** command with no options displays all of the current ARP cache entries.

Notes

The **arp** command is executed through the **pass** command.

Output

pass:loc=1105:cmd="arp" or

pass:loc=1105:cmd="arp -h"

```

Command Accepted - Processing

rlghncxa03w 04-07-27 08:10:00 EST  EAGLE5 31.6.0
pass:loc=1105:cmd="arp"
Command entered at terminal #1.
;

rlghncxa03w 04-07-27 08:10:00 EST  EAGLE5 31.6.0
PASS: Command sent to card
;
rlghncxa03w 04-07-27 08:10:00 EST  EAGLE5 31.6.0

Usage: arp [-a] [-d ipaddr] [-f] [-h] [-s ipaddr enetaddr]

Options:
-a      Display All entries in ARP table
-d      Delete specified entry (ipaddr) from ARP table
-f      Flush all entries from ARP table
-h      Displays this message
-s      Set ARP table entry to associate ipaddr with enetaddr
enetaddr x:x:x:x:x:x
ipaddr   d.d.d.d
;
rlghncxa03w 04-07-27 08:10:01 EST  EAGLE5 31.6.0

ARP command complete
;

pass:loc=1105:cmd="arp -s 192.168.100.234 11:22:33:44:55:66"

Command Accepted - Processing

rlghncxa03w 04-07-27 08:11:08 EST  EAGLE5 31.6.0
pass:loc=1105:cmd="arp -s 192.168.100.234 11:22:33:44:55:66"
Command entered at terminal #1.
;
rlghncxa03w 04-07-27 08:11:08 EST  EAGLE5 31.6.0
PASS: Command sent to card
;
rlghncxa03w 04-07-27 08:11:08 EST  EAGLE5 31.6.0

ARP: 192.168.100.234 (11:22:33:44:55:66) added
;
rlghncxa03w 04-07-27 08:11:09 EST  EAGLE5 31.6.0

ARP command complete
;

```

pass:loc=1105:cmd="arp -a"

Command Accepted - Processing

```

    rlghncxa03w 04-07-27 08:11:18 EST  EAGLE5 31.6.0
    pass:loc=1105:cmd="arp -a"
    Command entered at terminal #1.
;
    rlghncxa03w 04-07-27 08:11:18 EST  EAGLE5 31.6.0
    PASS: Command sent to card
;
    RLGHCXA03WRLGHNCXA03W 04-07-27 08:11:18 EST  EAGLE5 31.6.0

    LINK LEVEL ARP TABLE
    destination      gateway                flags  Refcnt  Use      Interface
    -----
    192.168.55.250    00:e0:16:9b:0d:86  405    1        0        seeq1
    192.168.100.234   11:22:33:44:55:66  c05    0        0        seeq0
    -----
;
    rlghncxa03w 04-07-27 08:11:19 EST  EAGLE5 31.6.0
    ARP command complete
;

```

pass:loc=1105:cmd="arp -f"

Command Accepted - Processing

```

    rlghncxa03w 04-07-27 08:11:38 EST  EAGLE5 31.6.0
    pass:loc=1105:cmd="arp -f"
    Command entered at terminal #1.
;
    rlghncxa03w 04-07-27 08:11:38 EST  EAGLE5 31.6.0
    PASS: Command sent to card
;
    rlghncxa03w 04-07-27 08:11:38 EST  EAGLE5 31.6.0
    ARP: ARP table flushed
;
    rlghncxa03w 04-07-27 08:11:38 EST  EAGLE5 31.6.0

    ARP command complete
;

```

pass:loc=1105:cmd="arp -d 192.111.111.222"

```
E3780 Cmd Rej: Syntax Error Found

    rlgncxa03w 04-07-27 08:26:37 EST  EAGLE5 31.6.0
    pass:loc=1105:cmd="arp -d 192.111.111.222"
    Command entered at terminal #1.
;
    rlgncxa03w 04-07-27 08:26:37 EST  EAGLE5 31.6.0
    PASS: Command sent to card
;
    rlgncxa03w 04-07-27 08:26:37 EST  EAGLE5 31.6.0
    ARP: entry not deleted
;
    rlgncxa03w 04-07-27 08:26:37 EST  EAGLE5 31.6.0

    ARP command complete
;
```

aslog

SCTP Application Server Log

This command is used to display the state changes for a specified Application Server (AS).

Keyword: **aslog**

Command Class: Application Maintenance

Options

Options and option parameters that are underlined indicate that a value must be specified for that option or parameter. For example, the **aslog** command has the parameter asname. The Application Server name must be specified for which the log will be displayed, as in the command **aslog as1**. Do not enter the underlined option or parameter; enter a value for the information represented by the underlined option or parameter.

asname

This option specifies the Association Server name for the display.

-h

This option displays help (usage) information for the command.

Example

aslog as1

Dependencies

None

Notes

None

Output

```

pass:loc=1105:cmd="aslog as1"

Command Accepted - Processing

    rlgncxa03w 00-01-27 08:10:00 EST  EAGLE5 31.6.0
    pass:loc=1105:cmd="aslog as1"
    Command entered at terminal #3.
;
    rlgncxa03w 00-01-27 08:10:00 EST  EAGLE5 31.6.0
    PASS: Command sent to card
;
    rlgncxa03w 00-01-27 08:10:00 EST  EAGLE5 31.6.0
    ASLOG command in progress
;
    rlgncxa03w 00-01-27 08:10:00 EST  EAGLE5 31.6.0

ASLOG: AS history log

ASLOG: AS state history log

Date      Time      AS Event
-----
65-05-31  22:27:29.075  Transition to AS-Down
65-05-31  22:27:29.080  Transition to AS-Active Override
65-05-31  22:38:24.050  Transition to AS-Active Override

ASLOG command complete
;

```

asplog**SCTP Application Server Process Log**

NOTE: This command is obsolete. The functions have been updated and moved to the ualog command.

This command is used to display the UA state history for a specified Application Server Process (ASP).

Keyword: **asplog**

Command Class: Application Maintenance

Options

Options and option parameters that are underlined indicate that a value must be specified for that option or parameter. For example, the **asplog** command has the parameter asp name. The Application Server Process must be specified for which the log will be displayed, as in the command **asplog s7000**. Do not enter the underlined option or parameter; enter a value for the information represented by the underlined option or parameter.

asp name

This option specifies the Application Server Process name for the display.

-h

This option displays help (usage) information for the command.

-i event group

This option includes groups of events in the state machine history.

Range: **service, ua**

-x event group

This option excludes groups of events from the state machine history.

Range: service, ua

Example

asplog s7000

Dependencies

None

Notes

None

Output

In this example, transmitted notification, ASP Inactivation (RFC Extension) , ASP Activation (RFC Extension) and ASP Failure Notification events are shown.

pass:loc=1105:cmd="asplog s7000"

```
      Command entered at terminal #3.
;
  rlghncxa03w 02-09-27 08:10:00 EST  EAGLE5 31.6.0
  PASS: Command sent to card
;
  rlghncxa03w 02-09-27 08:10:00 EST  EAGLE5 31.6.0
  ASPLOG command in progress
;
```

```
rlghncxa03w 02-09-27 08:10:00 EST EAGLE5 31.6.0
```

```
ASPLLOG: ASP history log
```

```
ASPLLOG: ASP state history log
        UA version: 01
        ASP ID:0x00000002
        UA Adapter Implemented: M3UA RFC
        Current settings: -i service ua
```

Date	Time	ASP Event
02-08-01	17:17:46.700	ASP Created
02-08-01	17:17:46.780	AS Created
02-08-01	17:17:46.820	Transition to OOS
02-08-01	17:17:46.940	Management Socket Open
02-08-01	17:17:46.940	Transition to Connecting
02-08-01	17:17:47.500	Socket Allowed for Traffic
02-08-01	17:17:49.375	Socket Connection Established
02-08-01	17:17:49.375	Transition to ASP-DOWN
02-08-01	17:17:49.390	ASPUP PDU Received (ASP ID = 0x00000002)
02-08-01	17:17:49.390	ASPUPACK PDU Transmitted
02-08-01	17:17:49.390	Transition to ASP-INACTIVE LOADSHARE
02-08-01	17:17:49.390	AS INACTIVE NTFY PDU Transmitted
02-08-01	17:17:49.405	ASPACTIVE PDU Received
02-08-01	17:17:49.405	ASPACTIVEACK PDU Transmitted
02-08-01	17:17:49.405	Transition to ASP-ACTIVE LOADSHARE
02-08-01	17:17:49.405	AS ACTIVE NTFY PDU Transmitted
02-08-01	17:17:50.405	ASP INACT NTFY PDU Transmitted (ASP ID =0x00000005)
02-08-01	17:17:50.405	ASP ACT NTFY PDU Transmitted (ASP ID =0x00000005)
02-08-01	17:17:52.730	ASP FAILURE NTFY PDU Transmitted (ASP ID =0x00000003)

```
ASPLLOG command complete
```

```
;
```

The following output example shows output when User Adapter SUA RFC is implemented:

pass:loc=1303:cmd="asplog s7000"

```

rlghncxa03w 04-10-19 08:10:00 EST  EAGLE5 31.10.0
PASS: Command sent to card
;

rlghncxa03w 04-10-19 08:10:00 EST  EAGLE5 31.10.0

ASPL0G command in progress

;
rlghncxa03w 04-10-19 08:10:00 EST  EAGLE5 31.10.0
ASPL0G: ASP state history log
      UA Version: 01
      ASP ID: 0x00000007
      User Adapter Implemented: SUA RFC
      Current settings: -i service ua

Date       Time       Event
-----
04-11-09   18:56:06.515   IP Conn Established
04-11-09   18:56:06.515   Transition to ASP-DOWN
04-11-09   18:56:41.595   ASPUP PDU Received (ASP ID=0x00000007)
04-11-09   18:56:41.595   ASPUPACK PDU Transmitted
04-11-09   18:56:41.595   Transition to ASP-INACTIVE LOADSHARE
04-11-09   18:56:41.595   AS INACTIVE NTFY PDU Transmitted (RC=0000000023)
04-11-09   18:56:41.595   ASPACTIVE PDU Received (RC=none)
04-11-09   18:56:41.595   ASPACTIVEACK PDU Transmitted (RC=0000000023)
04-11-09   18:56:41.595   Transition to ASP-ACTIVE LOADSHARE
04-11-09   18:56:41.595   AS ACTIVE NTFY PDU Transmitted (RC=0000000023)

ASPL0G: command complete
;

```

When a received M3UA or SUA PDU contains errors, a response error message is transmitted containing an error code. Error codes are recorded to and displayed in the **asplog** output only when the UA peer-to-peer message logging option (**-i ua**) is enabled.

The following output example shows error code 0x0000015:

pass:loc=1303:cmd="asplog asp1303a"

```

rlghncxa03w 00-01-27 08:10:00 EST  EAGLE5 31.6.0
PASS: Command sent to card
;

rlghncxa03w 00-01-27 08:10:00 EST  EAGLE5 31.6.0

ASPLOG command in progress

;

rlghncxa03w 00-01-27 08:10:00 EST  EAGLE5 31.6.0

ASPLOG: ASP state history log
        UA Version: 01
        ASP ID:undefined
        UA Adapter Implemented: M3UA_RFC
        Current settings: -i service ua

Date      Time      Socket Event
-----
02-08-01  17:17:46.940  Management Socket Open
02-08-01  17:17:46.940  Transition to Connecting
02-08-01  17:17:49.375  Socket Connection Established
02-08-01  17:17:49.375  Transition to ASP-DOWN
02-08-01  17:17:49.390  ASPUP PDU Received (ASP ID = undefined)
02-08-01  17:17:49.390  ASPUPACK PDU Transmitted
02-08-01  17:17:49.390  Transition to ASP-INACTIVE LOADSHARE
02-08-01  17:17:49.390  AS INACTIVE NTFY PDU Transmitted
02-08-01  17:17:49.405  ASPACTIVE PDU Received
02-08-01  17:17:49.405  ASPACTIVEACK PDU Transmitted
02-08-01  17:17:49.405  Transition to ASP-ACTIVE LOADSHARE
02-08-01  17:17:49.405  AS ACTIVE NTFY PDU Transmitted
02-08-01  17:17:49.450  DAUD PDU Received
02-08-01  17:17:49.480  ERR PDU Transmitted (0x00000015)

ASPLOG command complete
;

```

Error Codes

NOTE: The following error codes are not used in M3UA: 0x02, 0x08, 0x1a, 0x1b, 0x1c, 0x10, 0x17, and 0x18

The following error codes can appear in the error messages:

0x01—Invalid Version

A message was received with an invalid or unsupported version. The error message contains the supported version in the Common Header.

0x03—Unsupported Message Class

A message was received with an unexpected or unsupported Message Class.

0x04—Unsupported Message Type

A message was received with an unexpected or unsupported Message Type.

0x05—Unsupported Traffic Handling Mode

This error is sent by a Signaling Gateway Process (SGP) if an Application Server Process (ASP) sends an ASP Active message with an unsupported Traffic Mode Type or a Traffic

Mode Type that is inconsistent with the currently configured mode for the Application Server (AS).

0x06—Unexpected Message

This error message can be sent if a defined and recognized message is received that is not expected in the current state. In some cases the ASP might silently discard the message and not send an error message. Silent discard is used by an ASP if it received a DATA message from a signaling point while the ASP is in the ASP-INACTIVE state. If the unexpected message contains Routing Context, the Routing Context can be included in the error message.

0x07—Protocol Error

This error message is sent for any protocol anomaly, such as reception of a parameter that is syntactically correct but unexpected in the current situation.

0x09—Invalid Stream Identifier

A message is received on an unexpected SCTP stream (for example, a Management message was received on a stream other than 0).

0x0d—Refused - Management Blocking

An ASP Up or ASP Active message is received and the request is refused for management reasons (such as management lockout). If this error is in response to an ASP Active message, the Routing Context in the ASP Active message can be included in the error message.

0x0e—ASP Identifier Required

This error message is sent by an SGP in response to an ASP Up message that does not contain an ASP Identifier parameter when the SGP requires one. The ASP should resend the ASP Up message with an ASP Identifier.

0x0f—Invalid ASP Identifier

This error message is sent by an SGP in response to an ASP Up message with an invalid (for example, non-unique) ASP Identifier

0x11—Invalid Parameter Value

A message is received with an invalid parameter value (for example, a DUPU message was received with a Mask value other than 0).

0x12—Parameter Field Error

A message is received with a parameter that has a wrong length field.

0x13—Unexpected Parameter

A message contains an invalid parameter.

0x14—Destination Status Unknown

This error message can be sent if a DAUD is received at a Signaling Gateway (SG) asking for the availability/congestion status of a destination, and the SG does not provide the status (as in the case when the sender is not authorized to know the status). For this error, each invalid or unauthorized Point Code is included along with the Network Appearance and/or Routing Context associated with the Point Code.

0x15—Invalid Network Appearance

This error message is sent by an SGP if an ASP sends a message with an invalid (unconfigured) Network Appearance value. For this error, the invalid (unconfigured) Network Appearance is included in the Network Appearance parameter.

0x16—Missing Parameter

A message is received, and a mandatory parameter is not included in the message.

0x19—Invalid Routing Context

A message is received from a peer with an invalid (unconfigured) Routing Context value. The invalid Routing Context is included in the error message.

0x1a—No Configured AS for ASP

A message is received from a peer without a Routing Context parameter, and it is not known by configuration data which Application Servers are referenced.

assocrtt

SCTP Association Round Trip Time

This command is used to display the SCTP round trip times for a specified association. Minimum, maximum, and average times are kept for each open association. The Retransmission Mode (RFC or LIN) and the configured Minimum and Maximum Retransmission Timeout limits are also displayed.

Keyword: `assocrtt`

Command Class: Application Maintenance

Options

Options and option parameters that are underlined indicate that a value must be specified for that option or parameter. For example, the `assocrtt` command has the parameter aname. The association name must be specified for which the information will be displayed, as in the command `assocrtt c7000`. Do not enter the underlined option or parameter; enter a value for the information represented by the underlined option or parameter.

aname

This option specifies the association name for the display.

-r

This option resets all statistics for the specified association name.

Example

```
assocrtt c7000
```

```
assocrtt c7000 -r
```

Dependencies

None

Notes

This command does not indicate whether or not the socket is congested.

Output**pass:loc=1105:cmd="assocrtt" or****pass:loc=1105:cmd="assocrtt -h"**

```

      Command entered at terminal #1.
;
      rlghncxa03w 00-01-27 08:10:00 EST  EAGLE5 31.6.0
      PASS: Command sent to card
;
      rlghncxa03w 00-01-27 08:10:00 EST  EAGLE5 31.6.0

      Usage: ASOCRTT sockname [-r] [-h]
      Options:
          -r          Resets rtt data for specified association
          -h          Displays this message
;
      rlghncxa03w 00-01-27 08:10:00 EST  EAGLE5 31.6.0
      ASSocrtt command complete
;

pass:loc=1105:cmd="assocrtt c7000"

Command Accepted - Processing

      rlghncxa03w 00-01-27 08:10:00 EST  EAGLE5 31.6.0
      pass:loc=1105:cmd="assocrtt c7000"
      Command entered at terminal #1.
;
      rlghncxa03w 00-01-27 08:10:00 EST  EAGLE5 31.6.0
      PASS: Command sent to card
;
      rlghncxa03w 00-01-27 08:10:00 EST  EAGLE5 31.6.0

      ASSOCRTT: Association round trip time report (in milliseconds)

      Retransmission Configuration
          Retransmission Mode          : LIN
          Minimum RTO      : 120
          Maximum RTO      : 800

      Traffic Round-Trip Times

          Minimum round-trip time      : 5
          Maximum round-trip time      : 120
          Weighted Average round-trip time : 10
          Last recorded round-trip time  : 10
;
      Measured Congested Traffic Round-Trip Times

          Minimum round-trip time      : 0
          Maximum round-trip time      : 0
          Weighted Average round-trip time : 0
          Last recorded round-trip time  : 0
;
      rlghncxa03w 00-01-27 08:10:01 EST  EAGLE5 31.6.0
      ASSOCRTT command complete
;

```

pass:loc=1105:cmd="assocrtt c7000 -r"

```

      Command entered at terminal #1.
;
  rlghncxa03w 00-01-27 08:10:01 EST  EAGLE5 31.6.0
PASS: Command sent to card
;
  rlghncxa03w 00-01-27 08:10:01 EST  EAGLE5 31.6.0

ASSocrtt: Association round-trip time report (in milliseconds)

Retransmission Configuration
  Retransmission Mode           : RFC
  Minimum RT0      : 120
  Maximum RT0      : 800

Traffic Round-Trip Times

  Minimum round-trip time      : 5
  Maximum round-trip time      : 120
  Weighted Average round-trip time : 10
  Last recorded round-trip time  : 10

Measured Congested Traffic Round-Trip Times

  Minimum round-trip time      : 0
  Maximum round-trip time      : 0
  Weighted Average round-trip time : 0
  Last recorded round-trip time  : 0
;
  rlghncxa03w 00-01-27 08:10:01 EST  EAGLE5 31.6.0
ASSocrtt command complete
;

```

connmgr

Connection Manager

This command is used to generate reports about the status of the connection manager.

Keyword: connmgr

Command Class: Application Maintenance

Options

-d

This option displays a connection manager data summary. For IPSG cards, this report contains summary information and does not contain information for individual signaling links.

-h

This option displays help (usage) information for the command.

-i

This option displays SCTP instance and association data.

-l

This option displays the connection manager event log.

-n

This option displays the SCTP notification log.

-r

This option resets the connection manager event log.

Example**connmgr -r****connmgr -c****connmgr -s****Dependencies**

Only one of the options can be specified at a time.

If no options are specified, usage information is displayed.

Notes

The **connmgr** command is executed through the **pass** command.

Output**pass:loc=1107:cmd="connmgr" or****pass:loc=1304:cmd="connmgr -h"**

Command Accepted - Processing

```

rlghncxa03w 08-01-21 15:29:46 EST  EAGLE5 38.0.0
pass:loc=1304:cmd="connmgr -h"
Command entered at terminal #1.
;
rlghncxa03w 08-01-21 15:29:46 EST  EAGLE5 38.0.0
PASS: Command sent to card
;
rlghncxa03w 04-07-02 15:29:46 EST  EAGLE5 31.6.0
Usage: CONNMGR [-d] [-h] [-i] [-l] [-n] [-r]
Options:
  -d    Display connection manager data summary
  -h    Displays this message
  -i    Displays instance data
  -l    Display the connection manager event log
  -n    Display the SCTP notification log
  -r    Reset the connection manager event log
;

```

pass:loc=1107:cmd="connmgr -d"

The Connection Manager Data Summary displays all provisioned signaling link ports.

In the following example, signaling link port (slk) B is valid only for IPLIMx cards.

Command Accepted - Processing

```

rlghncxa03w 04-07-02 15:37:12 EST  EAGLE5 31.6.0
pass:loc=1107:cmd="connmgr -d"
Command entered at terminal #1.
;
rlghncxa03w 04-07-02 15:37:12 EST  EAGLE5 31.6.0
PASS: Command sent to card
;
rlghncxa03w 04-07-02 15:37:12 EST  EAGLE5 31.6.0
CONNMGR: command being processed
;
rlghncxa03w 04-07-02 15:37:12 EST  EAGLE5 31.6.0
CONNMGR: Connection Manager Data Summary
slk  link state  srv  cli  opn sock  inst  opn assoc
---  -
A   active      1   0           1   0           0
B   active      0   0           0   1           1

CONNMGR command complete
;

```

In the following example, a summary data report is requested for an IPSG card.

pass:loc=1304:cmd="connmgr -d"

Command Accepted - Processing

```
eagle10110 08-01-15 16:09:24 EST EAGLE 38.0.0
pass:loc=1304:cmd="connmgr -d"
Command entered at terminal #3.
```

;

```
eagle10110 08-01-15 16:09:24 EST EAGLE 38.0.0
PASS: Command sent to card
```

;

```
eagle10110 08-01-15 16:09:24 EST EAGLE 38.0.0
CONNMGR: Connection Manager Data Summary
```

```
num_instances:                1
num_assocs:                    1
num_established_assocs:        0
num_cli_assocs:                 0
num_established_cli_assocs:     0
num_assocs_with_tx_data:        0
num_full_assocs:                0
num_assoc_with_rcv_data:        0
num_times_tx_q_full:            0
num_assoc_down_notif:           0
num_assoc_aborted_notif:        0
num_assoc_restart_notif:        0
num_intf_up_notif:              0
num_intf_down_notif:            0
num_hb_resp_notif:              0
num_dg_fail_notif:              0
num_rd_errors:                  0
num_wt_errors:                  0
num_wt_shutdown:                0
num_wt_empty:                   0
```

CONNMGR: command complete

;

```
eagle10110 08-01-15 16:09:24 EST EAGLE 38.0.0
```

;

pass:loc=1301:cmd="connmgr -i"

Command Accepted - Processing

```
eagle10213 04-07-22 08:49:37 GMT EAGLE5 31.6.0
pass:loc=1301:cmd="connmgr -i"
Command entered at terminal #4.
;

eagle10213 04-07-22 08:49:37 GMT EAGLE5 31.6.0
PASS: Command sent to card
;

eagle10213 04-07-22 08:49:37 GMT EAGLE5 31.6.0

CONNMGR command being processed
;

eagle10213 04-07-22 08:49:37 GMT EAGLE5 31.6.0
CONNMGR: Connection Manager Instance Data
inst id  lport  cfg  est  tot grntd  tot rfsd
-----  -
021B7880   1301    2    2          0          0

CONNMGR command complete
;
```

pass:loc=1107:cmd="connmgr -l"

Command Accepted - Processing

```
rlghncxa03w 04-07-02 15:35:28 EST  EAGLE5 31.6.0
pass:loc=1107:cmd="connmgr -l"
Command entered at terminal #1.
;

rlghncxa03w 04-07-02 15:35:28 EST  EAGLE5 31.6.0
PASS: Command sent to card
;

rlghncxa03w 04-07-02 15:35:28 EST  EAGLE5 31.6.0
CONNMGR: command being processed
;

rlghncxa03w 04-07-02 15:35:28 EST  EAGLE5 31.6.0
CONNMGR: Connection Manager Event Log
04-07-03 13:17:40.730 conn-rcvd  5005 from 192.168.100.174:5005
04-07-03 13:17:40.735 conn-rfsd  lnk-not-actv  5005 192.168.100.174
04-07-03 13:17:40.850 conn-rcvd  5006 from 192.168.100.174:5006
04-07-03 13:17:40.855 conn-rfsd  lnk-not-actv  5006 192.168.100.174
04-07-03 13:17:40.910 conn-rcvd  5002 from 192.168.100.174:5002
04-07-03 13:17:40.915 conn-rfsd  lnk-not-actv  5002 192.168.100.174
04-07-03 13:17:40.950 conn-rcvd  5004 from 192.168.100.174:5004
04-07-03 13:17:40.955 conn-rfsd  lnk-not-actv  5004 192.168.100.174

CONNMGR command complete
;
```

pass:loc=1103:cmd="connmgr -l"

Command Accepted - Processing

```

rlghncxa03w 04-07-02 15:35:28 EST EAGLE5 31.6.0
pass:loc=1103:cmd="connmgr -l"
Command entered at terminal #4.
;
rlghncxa03w 04-07-02 15:35:28 EST EAGLE5 31.6.0
PASS: Command sent to card
;
rlghncxa03w 04-07-02 15:35:28 EST EAGLE5 31.6.0
CONNMGR: command being processed
;
rlghncxa03w 04-07-02 15:35:28 EST EAGLE5 31.6.0
CONNMGR: Connection Manager Event Log
00-01-13 13:17:40.170 sock-add ipl1103
00-01-13 13:17:40.885 lnk-act Port A
00-01-13 13:17:40.080 conn-made ipl1101

CONNMGR command complete
;

```

pass:loc=1301:cmd="connmgr -n"

Command Accepted - Processing

```

eagle10213 04-07-22 08:50:04 GMT EAGLE5 31.6.0
pass:loc=1301:cmd="connmgr -n"
Command entered at terminal #4.
;
eagle10213 04-07-22 08:50:04 GMT EAGLE5 31.6.0
PASS: Command sent to card
;
eagle10213 04-07-22 08:50:04 GMT EAGLE5 31.6.0

CONNMGR command being processed
;
eagle10213 04-07-22 08:50:04 GMT EAGLE5 31.6.0
CONNMGR: Connection Manager SCTP Notification Log
04-07-21 18:06:34.860 assoc-up ipl1301a from 192.168.110.17:1301
04-07-21 18:06:49.620 assoc-up ipl1301b from 192.168.110.18:1303
04-07-21 18:07:54.185 assoc-down ipl1301b from 192.168.110.18:1303
04-07-21 18:09:21.990 assoc-up ipl1301b from 192.168.110.18:1303

CONNMGR command complete
;

```

pass:loc=1107:cmd="connmgr -r"

Command Accepted - Processing

```

rlghncxa03w 04-07-02 15:36:18 EST  EAGLE5 31.6.0
pass:loc=1107:cmd="connmgr -r"
Command entered at terminal #1.
;
rlghncxa03w 04-07-02 15:36:18 EST  EAGLE5 31.6.0
PASS: Command sent to card
;
rlghncxa03w 04-07-02 15:36:18 EST  EAGLE5 31.6.0
CONNMGR: command being processed
;
rlghncxa03w 04-07-02 15:36:18 EST  EAGLE5 31.6.0
CONNMGR command complete
;

```

pass:loc=1107:cmd="connmgr -s"

Command Accepted - Processing

```

rlghncxa03w 04-07-02 15:39:54 EST  EAGLE5 31.6.0
pass:loc=1107:cmd="connmgr -s"
Command entered at terminal #1.
;
rlghncxa03w 04-07-02 15:39:54 EST  EAGLE5 31.6.0
PASS: Command sent to card
;
rlghncxa03w 04-07-02 15:40:02 EST  EAGLE5 31.6.0
CONNMGR: command being processed
;
rlghncxa03w 04-07-02 15:40:03 EST  EAGLE5 31.6.0
CONNMGR: Connection Manager Server Data
task_id  server state lport cfg opn cn_grntd cn_rfsd
-----
0114FEE8 listening 5001 1 1 2 546
0114ED40 listening 5002 1 1 2 434
0114DB98 listening 5003 1 1 2 539
0114C9F0 listening 5004 1 1 2 542
0114B848 listening 5005 1 1 2 539
0114A6A0 listening 5006 1 1 2 549
011494F8 listening 5007 1 0 0 548
01148350 listening 5008 1 1 2 560
011471A8 listening 5009 1 1 2 523
01146000 listening 5010 1 1 2 532
01144E58 listening 5011 1 1 2 534
01143CB0 listening 5012 1 1 2 481
01142B08 listening 5013 1 1 2 474
01141960 listening 5014 1 1 2 521
011407B8 listening 5015 1 0 2 515
0113F610 listening 5016 5 0 14 2741
0113E468 listening 5017 5 0 11 2723

CONNMGR command complete
;

```

```
pass:loc=1103:cmd="connmgr -s"
```

```
Command Accepted - Processing
```

```

rlghncxa03w 04-07-02 15:39:54 EST  EAGLE5 31.6.0
pass:loc=1103:cmd="connmgr -s"
Command entered at terminal #4.
;
rlghncxa03w 04-07-02 15:39:54 EST  EAGLE5 31.6.0
PASS: Command sent to card
;
rlghncxa03w 04-07-02 15:40:02 EST  EAGLE5 31.6.0
CONNMGR: command being processed
;
rlghncxa03w 04-07-02 15:40:03 EST  EAGLE5 31.6.0
CONNMGR: Connection Manager Server Data
task_id  server state slk lport cfg opn cn_grntd cn_rfsd
-----
CONNMGR command complete
;
```

ftptest

FTP Test

Use this command to send a test file to a configured FTP server that is used for the Measurements Platform feature

Keyword: `ftptest`

Command Class: System Maintenance

Options

Options and option parameters that are underlined indicate that a value must be specified for that option or parameter. For example, the **ftptest** command option **-a** has the parameter appl. The FTP registered application to be tested can be specified, as in the command **ftptest -a meas**. Do not enter the underlined option or parameter; enter a value for the information represented by the underlined option or parameter.

-h

This option provides help information for the command.

-a appl

This option specifies the FTP registered application to be tested.

Range: meas

meas—The Measurements Platform application

Example

```
ftptest
```

```
ftptest -h
```

```
ftptest -a meas
```

Dependencies

None

Notes

The **ftptest** command is executed through the **pass** command.

The specified card location must have an IP port configured to an FTP server using the **ent-ftp-serv** command, and the card must have its IP port configured using the **chg-ip-lnk** command.

Output

```
pass:loc=1105:cmd="ftpptest-h"
```

or

```
pass:loc=1105:cmd="ftpptest"
```

Command Accepted - Processing

```
rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0
pass:loc=1215:cmd="ftpptest -h"
Command entered at terminal #3.
;

rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0
PASS: Command sent to card
;

rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0

Usage: ftpptest -a appl [-h]

Options:
  -a appl  FTP client application name
  -h       Displays this message
;

rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0

FTPTEST: Command Complete
;

pass:loc=1105:cmd="ftpptest -a meas"
```

```

PASS: Command sent to card
;

rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0

FTPTEST: Command In Progress
;

rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0
FTP Interface Test
Test Results: PASS
Server IP:    10.25.61.71
FTP Error:    0
File Error:   0
Segment:      190004a2
Diag Msg:
FTPTEST: Command Complete
;
```

The following example shows the error occurs if the wrong password is specified in the **ent-ftp-serv** command for the application specified in the **ftpptest** command.

pass:loc=1215:cmd="ftpctest -a meas"

```

rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0
PASS: Command sent to card
;

rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0

FTPTEST: Command In Progress

;

rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0
FTP Interface Test
  Test Results: FAIL
  Server IP:    0.0.0.0
  FTP Error:    530
  Segment:      190004dd
  Diag Msg:     Server Connection Error

FTPTEST: Command Complete

;
```

linkinfo

Link State and Event Log

This command is used to display the state of a signaling link and to retrieve/clear a specified event log for a signaling link. The signaling link is any valid signaling link provisioned for the card. For IPLIMx cards, the following signaling links are supported: **a, a1, a2, a3, b, b1, b2, or b3**. For the IPSPG cards, the following signaling links are supported: **a:a15-b:b15**

Keyword: **linkinfo**

Command Class: Application Maintenance

Options

Options and option parameters that are underlined indicate that a value must be specified for that option or parameter. For example, the **linkinfo** command option **-i** has the parameter event. The event to be included in the report can be specified, as in the command **linkinfo a -a -i m2pa**. Do not enter the underlined option or parameter; enter a value for the information represented by the underlined option or parameter.

-h

This option provides help information for the command.

port

This option specifies the signaling link port.

Range: **a, b, a1, b1, a2, b2, a3, b3**

-a

This option displays the adapter layer interface (ALI) log for the specified signaling link. For M3UA associations the **link -a** option is used to display the UA event log. This command logs information on an association basis. The **link** parameter is used to obtain this report on IPSPG instead of the association name. This information is currently provided by the ualog command on IPGWx cards.

-c

This option displays congestion tuning parameters for M3UA and M2PA links. The report is enhanced to include card level congestion thresholds and the high-water mark for IPSPG cards.

-i event

This option includes (does not filter) a link event in the log. For IPSP cards, this option may be used to include or exclude events for the ali and link logs. Valid events for the ALI event log are **ua, service**

Range: **ali, all, data, l2l3, l3l2, m2pa, state, ua, service**

all—include all events

-l

This option displays the IPLIM ALI event log for the specified signaling link

-m

This option displays acknowledgment times on an M2PA connection (minimum, maximum, weighted average, last recorded). For IPSP cards, this measurement is supported for only IPSP-M2PA links.

-r

This option resets (clears) the event log for the specified signaling link. This option is valid only with the **-a** option or **-l** option.

-s

This option displays the state information for the specified signaling link. For the IPSP cards, this option is enhanced to display M3UA signaling link status.

-v

This option displays the link event filter configuration.

-x event

This option excludes (filters) a link event in the log. For IPSP cards, this option may be used to include or exclude events for the ali and link logs. Valid events for the ALI event log are **ua, service**

Range: **ali, all, data, l2l3, l3l2, m2pa, state, ua, service**

all—exclude all events

Example

Provide help information for the command.

pass:loc=1301:cmd="linkinfo -h"

Set the filter to include ua events in the ua log report.

pass:loc=1304:cmd="linkinfo a -i ua"

Set the filter to include service events in the ua log report.

pass:loc=1304:cmd="linkinfo a -i service"

Display the ua log report for signaling link a.

pass:loc=1304:cmd="linkinfo a -a"

Display the ALI event log for signaling link **a1**.

pass:loc=1301:cmd="linkinfo a1 -a"

Display the IPLIM application event log for signaling link **a1**.

pass:loc=1301:cmd="linkinfo a1 -l"

Reset/clear the link event log for signaling link **a1**.

pass:loc=1301:cmd="linkinfo a1 -l -r"

Clear the ua log report for signaling link **a**.

pass:loc=1304:cmd="linkinfo a -a -r"

Display the state information for signaling link **a1**.

pass:loc=1301:cmd="linkinfo a1 -s"

Display acknowledgement times for an M2PA connection on signaling link **b1**.

pass:loc=3315:cmd="linkinfo b1 -m"

Display congestion tuning information for an IPSPG-M3UA signaling link.

pass:loc=1301:cmd="linkinfo a -c "

Dependencies

None

Notes

None

Output

Example of help for using the command:

pass:loc=1301:cmd="linkinfo" or

pass:loc=1301:cmd="linkinfo -h"

```

rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0

PASS: Command sent to card
;

rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0

Usage: LINKINFO port [-a [-r]] [-h] [-l [-r]] [-m [-r]] [-s] [-v]
Options:

link      Signaling link port: a, b, a1, b1, a2, b2, a3, b3
-a        Display the ALI event log for a signaling link
-c        Display Congestion Tuning Information for a signaling link
-h        Displays this message
-i event  Include (do not filter) a link event type in the log
           where 'event' is: ali, all, data, l2l3, l3l2,
                           m2pa, state
-l        Displays the event log for a signaling link
-m        Display Link Measurements
-r        Resets the specified event log for a signaling link
-s        Displays the state information for a signaling link
-v        View the link event filter configuration
-x event  Exclude (filter) a link event type from the log
           where 'event' is: ali, all, data, l2l3, l3l2,
                           m2pa, state

;

rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0

LINKINFO command complete
;

```

The following example illustrates a request to display the adapter layer interface (ALI) event log for signaling link **a1** and association **ipl1301a** that has been provisioned with signaling link **a1**.

pass:loc=1301:cmd="linkinfo a1 -a"

```

rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0
PASS: Command sent to card
;

rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0

LINKINFO command being processed

;

rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0
IPLIM Adapter Layer Events for Port a1:
04-07-29 10:23:48.525 IP_CONN_OPENED
04-07-29 10:36:09.465 IP_CONN_CONNECTED
04-07-29 10:36:09.465 IP_CONN_ALLOWED

end of report

;

```

The following example illustrates a request to display the **iplim** ALI event log for signaling link **a1** and the association **ipl1301a** that has been provisioned with signaling link **a1**.

pass:loc=1301:cmd="linkinfo a1 -I"

```

rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0
PASS: Command sent to card
;

rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0

LINKINFO command being processed

;

rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0
IPLIM Adapter Layer Events for Port a1:
04-07-29 10:36:40.240 IP_CONN_ALLOWED
04-07-29 10:36:40.240 IP_CONN_OPENED
04-07-29 10:36:40.240 LINK_STATE_OOS
04-07-29 10:36:50.935 L3_L2_START
04-07-29 10:37:18.890 IP_CONN_CONNECTED
04-07-29 10:37:18.900 LINK_STATE_AIP
04-07-29 10:37:18.900 M2PA_LSA_RCVD
04-07-29 10:37:18.915 LINK_STATE_PROVING
04-07-29 10:37:18.915 M2PA_LSPN_RCVD
04-07-29 10:37:19.453 M2PA_T4_EXPD
04-07-29 10:37:20.565 M2PA_LSPN_RCVD
04-07-29 10:37:21.785 M2PA_T4_EXPD
04-07-29 10:37:22.565 M2PA_LSPN_RCVD
04-07-29 10:37:23.785 M2PA_T4_EXPD
04-07-29 10:37:24.565 M2PA_LSPN_RCVD
04-07-29 10:37:25.785 M2PA_T4_EXPD
04-07-29 10:37:26.385 M2PA_LSPN_RCVD
04-07-29 10:37:27.576 M2PA_T2_EXPD
04-07-29 10:37:27.585 LINK_STATE_READY
04-07-29 10:37:30.123 M2PA_LSR_RCVD
04-07-29 10:36:32.095 LINK_STATE_INS

end of report

;

```

The following example illustrates a **linkinfo** request to reset/clear the link event log for signaling link **a1**

pass:loc=1301:cmd="linkinfo a1 -l -r"

```

rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0
PASS: Command sent to card
;

rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0

LINKINFO command being processed
;

rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0
LINKINFO command complete
;

```

The following example illustrates a **linkinfo** request to display acknowledgement times for an IPLIMx M2PA connection on signaling link **b1**.

pass:loc=1301:cmd="linkinfo b1 -m"

```

rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0
PASS: Command sent to card
;

rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0

LINKINFO: Command In Progress
;

rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0
IPLIMx M2PA Measurements Information for Port B1

Measured M2PA Traffic Acknowledgement Times

      Minimum acknowledge time      : 14
      Maximum acknowledge time      : 35
      Weighted Average acknowledge time: 17
      Last recorded acknowledge time : 20

end of report
;

rlghncxa03w 04-07-29 11:31:09 EST  EAGLE5 31.6.0
;

```

The following example illustrates a **linkinfo** request to display the state information for signaling link **a1**.

pass:loc=1301:cmd="linkinfo a1 -s"

```
rlghncxa03w 03-07-29 11:31:09 EST EAGLE5 30.0.0
PASS: Command sent to card
;

rlghncxa03w 03-07-29 11:31:09 EST EAGLE5 30.0.0

LINKINFO command being processed
;

rlghncxa03w 03-07-29 11:31:09 EST EAGLE5 30.0.0
SLK      LINKINFO STATE
1301,A1  OOS      CONNECTING

end of report
;
rlghncxa03w 03-07-29 11:31:09 EST EAGLE5 30.0.0
LINKINFO command complete
;

```

Output for IPSP Card

The following example illustrates a **linkinfo** request to display the signaling link event log for an IPSP-M3UA link.

pass:loc=1304:cmd="linkinfo a -l"

```
Command Accepted - Processing

eagle10110 08-01-16 16:52:59 EST EAGLE 38.0.0
pass:loc=1304:cmd="linkinfo a -l"
Command entered at terminal #3.
;

eagle10110 08-01-16 16:52:59 EST EAGLE 38.0.0
PASS: Command sent to card
;

eagle10110 08-01-16 16:52:59 EST EAGLE 38.0.0

IP7 Layer 2 Link Events for Link A

08-01-16 15:03:37.080 LINK_STATE_INHIBITED
08-01-16 15:05:23.510 L3_L2_EMERGENCY_Cease
08-01-16 15:05:23.510 L3_L2_START
08-01-16 15:05:23.510 LINK_STATE_NOT_ALIGNED
08-01-16 15:53:02.660 ASP_UP
08-01-16 15:53:02.660 LINK_STATE_ALIGNED_READY
08-01-16 16:19:45.755 ASP_ACTIVE
08-01-16 16:19:45.755 LINK_STATE_INS
08-01-16 16:19:45.755 L2_L3_IN_SERVICE
08-01-16 16:19:45.780 L3_L2_LINKSET_ALLOWED

end of report
;

```

The following example illustrates a **linkinfo** request to display the signaling link event for an IPSP-M2PA link.

pass:loc=1314:cmd="linkinfo b2 -l"

eagle10110 08-01-16 16:46:05 EST EAGLE 38.0.0

IP7 Layer 2 Link Events for Link B2

```
08-01-16 16:45:26.050 L3_L2_START
08-01-16 16:45:26.050 L2_L3_OUT_OF_SERVICE
08-01-16 16:45:26.060 RETRIEVAL_COMPLETE
08-01-16 16:45:26.860 L3_L2_EMERGENCY
08-01-16 16:45:26.860 L3_L2_START
08-01-16 16:45:26.860 L2_L3_OUT_OF_SERVICE
08-01-16 16:45:26.870 RETRIEVAL_COMPLETE
08-01-16 16:45:27.215 IP_CONN_OPENED
08-01-16 16:45:27.215 LINK_STATE_CONNECTING
08-01-16 16:45:27.215 IP_CONN_ALLOWED
08-01-16 16:45:27.225 IP_CONN_CONNECTED
08-01-16 16:45:27.225 M2PA_LSO_TRANSMITTED
08-01-16 16:45:27.225 LINK_STATE_CONNECTED
08-01-16 16:45:27.230 M2PA_LSO_RECEIVED
08-01-16 16:45:27.670 L3_L2_EMERGENCY
08-01-16 16:45:27.670 L3_L2_START
08-01-16 16:45:27.670 M2PA_LSA_TRANSMITTED
08-01-16 16:45:27.670 LINK_STATE_NOT_ALIGNED
08-01-16 16:45:27.680 M2PA_LSA_RECEIVED
08-01-16 16:45:27.680 M2PA_LSPE_TRANSMITTED
08-01-16 16:45:27.680 LINK_STATE_ALIGNED
08-01-16 16:45:27.685 M2PA_LSPE_RECEIVED
08-01-16 16:45:27.685 LINK_STATE_PROVING
08-01-16 16:45:27.890 M2PA_T16_EXPIRED
08-01-16 16:45:28.085 M2PA_T16_EXPIRED
08-01-16 16:45:28.185 M2PA_T4_EXPIRED
08-01-16 16:45:28.185 M2PA_LSR_TRANSMITTED
08-01-16 16:45:28.185 LINK_STATE_ALIGNED_READY
08-01-16 16:45:28.195 M2PA_LSR_RECEIVED
08-01-16 16:45:28.195 L2_L3_IN_SERVICE
08-01-16 16:45:28.195 M2PA_LSR_TRANSMITTED
08-01-16 16:45:28.195 LINK_STATE_INS
08-01-16 16:45:28.200 M2PA_LSR_RECEIVED
```

end of report

;

eagle10110 08-01-16 16:46:05 EST EAGLE 38.0.0

LINKINFO: Command Complete

;

The following example illustrates a **linkinfo** request to set the filter to include ua events in the ua log report for signaling link a.

pass:loc=1304:cmd="linkinfo a -i ua"

rlghncxa03w 08-01-29 11:31:09 EST EAGLE 38.0.0

Link event type (ua) is logged for link A

end of report

;

The following example illustrates a **linkinfo** request to set the filter to include service events in the ua log report for signaling link a.

pass:loc=1304:cmd="linkinfo a -i service"

```
rlghncxa03w 08-01-29 11:31:09 EST EAGLE 38.0.0
```

```
Link event type (service) is logged for link A
```

```
end of report
```

```
;
```

The following example illustrates a **linkinfo** request to display the ua log report for signaling link **a**.

pass:loc=1304:cmd="linkinfo a -a"

```
rlghncxa03w 08-01-29 11:31:09 EST EAGLE 38.0.0
```

```
Adapter Layer Events for Link A
```

```
UALOG: UA event history log
       UA Version: 01
       ASP ID: undefined
       User Adapter Implemented: M3UA RFC
       Current settings: -i service ua
```

Date	Time	Event
08-01-16	15:51:45.890	IP Conn Established
08-01-16	15:51:45.890	Transition to SERVER_DOWN (RC=0000000004)
08-01-16	15:53:02.660	ASPUP PDU Received (ASP ID=undefined)
08-01-16	15:53:02.660	Transition to SERVER_INACTIVE (RC=0000000004)
08-01-16	15:53:02.660	ASP to SLK Up
08-01-16	15:53:02.660	Link Activated
08-01-16	15:53:02.660	ASPUPACK PDU Transmitted
08-01-16	15:53:02.660	AS INACTIVE NTFY PDU Transmitted (RC=0000000004)
08-01-16	16:19:45.755	ASPACTIVE PDU Received (RC=none)
08-01-16	16:19:45.755	ASPACTIVEACK PDU Transmitted (RC=0000000004)
08-01-16	16:19:45.755	Transition to SERVER_ACTIVE LOADSHARE (RC=0000000004)
08-01-16	16:19:45.755	ASP to SLK Active
08-01-16	16:19:45.780	AS Active
08-01-16	16:19:45.780	AS ACTIVE NTFY PDU Transmitted (RC=0000000004)

```
end of report
```

```
;
```

The following example illustrates a **linkinfo** request to clear the ua log report for signaling link **a**.

pass:loc=1304:cmd="linkinfo a -a -r"

```
rlghncxa03w 08-01-29 11:31:09 EST EAGLE 38.0.0
```

```
LINKINFO: Command Complete
```

```
;
```

The following example illustrates a **linkinfo** request to display the link measurement information for an IPSG-M2PA signaling link.

pass:loc=1301:cmd="linkinfo b2 -m "

```
rlghncxa03w 08-01-29 11:31:09 EST EAGLE5 38.0.0
M2PA Measurements Information for Link B2
```

Measured M2PA Traffic Acknowledgement Times

```
Minimum acknowledge time      : 16
Maximum acknowledge time      : 44
Weighted Average acknowledge time: 16
Last recorded acknowledge time : 16
```

end of report

;

The following example illustrates a **linkinfo** request to display state information for an IPSPG-M3UA signaling link.

pass:loc=1301:cmd="linkinfo a -s "

```
rlghncxa03w 08-01-29 11:31:09 EST EAGLE 38.0.0

IP7 Layer 2 Link State Information for Link A

LINK_STATE_ALIGNED          ASP_STATE_SERVER_DOWN
```

end of report

;

The following example illustrates a **linkinfo** request to display state information for an IPSPG-M2PA signaling link.

pass:loc=1314:cmd="linkinfo b2 -s"

```
rlghncxa03w 08-01-29 11:31:09 EST EAGLE 38.0.0

IP7 Layer 2 Link State Information for Link B2

LINK_STATE_INS              IP_CONN_STATE_ESTABLISHED
```

end of report

;

The following example illustrates the **linkinfo** request to display congestion tuning information for an IPSPG-M3UA signaling link.

pass:loc=1301:cmd="linkinfo a -c "

rlghncxa03w 08-01-29 11:31:09 EST EAGLE 38.0.0

Congestion Tuning Information for Link A

High-Water Mark : 0

High-Water Mark Date & Time : 00-00-00 00:00:00.000

HMCg SLK Congestion Threshold Values

Danger of Congestion Onset	: 240
Abatement Level-1	: 241
Onset Level-1	: 480
Abatement Level-2	: 481
Discard Level-1	: 600
Onset Level-2	: 605
Abatement Level-3	: 606
Discard Level-2	: 720
Onset Level-3	: 725
Discard Level-3	: 840
Maximum Buffers for L2	: 960

HMCg Card-Level Congestion Threshold Values

Danger of Congestion Onset	: 2500
Abatement Level-1	: 2501
Onset Level-1	: 5000
Abatement Level-2	: 5001
Discard Level-1	: 7601
Onset Level-2	: 6251
Abatement Level-3	: 6252
Discard Level-2	: 7601
Onset Level-3	: 7501
Discard Level-3	: 7601
Maximum Buffers for L2	: 10000
High Water Mark	: 0

end of report

;

rlghncxa03w 08-01-29 11:31:09 EST EAGLE 38.0.0

LINKINFO: Command Complete

;

The following example illustrates the **linkinfo** request to display congestion tuning information for an IPSP-M2PA signaling link.

pass:loc=1301:cmd="linkinfo b2 -c "

rlghncxa03w 08-01-29 11:31:09 EST EAGLE 38.0.0
Congestion Tuning Information for Link B2

RETX Queue Depth threshold : 240

High-Water Mark : 0

High-Water Mark Date & Time : 00-00-00 00:00:00.000

HMCG SLK Congestion Threshold Values

Danger of Congestion Onset	: 120
Abatement Level-1	: 121
Onset Level-1	: 240
Abatement Level-2	: 241
Discard Level-1	: 300
Onset Level-2	: 305
Abatement Level-3	: 306
Discard Level-2	: 360
Onset Level-3	: 365
Discard Level-3	: 420
Maximum Buffers for L2	: 480

HMCG Card-Level Congestion Threshold Values

Danger of Congestion Onset	: 2500
Abatement Level-1	: 2501
Onset Level-1	: 5000
Abatement Level-2	: 5001
Discard Level-1	: 7601
Onset Level-2	: 6251
Abatement Level-3	: 6252
Discard Level-2	: 7601
Onset Level-3	: 7501
Discard Level-3	: 7601
Maximum Buffers for L2	: 10000
High Water Mark	: 2

end of report

;

rlghncxa03w 08-01-29 11:31:09 EST EAGLE 38.0.0

LINKINFO: Command Complete

;

msucount

Message Signaling Unit (MSU) Count

This command is used to report the count of SS7 MSUs and bytes that pass through links, routing keys, and IP connections. These counts can be reported and reset at the same time to get accurate counts for longer periods of time. In addition to MSUs transmitted and received, the **msucount**

command also reports statistics on packets related to MTP Primitives and on discarded transmit and receive data.

Keyword: **msucount**

Command Class: Application Maintenance

Options

Options and option parameters that are underlined indicate that a value must be specified for that option or parameter. For example, the **msucount** command option **-l** has the parameter port. The link for which counts will be displayed can be specified, as in the command **msucount -l a1**. Do not enter the underlined option or parameter; enter a value for the information represented by the underlined option or parameter.

-a

This option is used to display IP connection statistics for a specific association. When **-a aname** is specified on the same line as **-k rtkey**, the output is assumed to be routing key output. When **-a aname** is specified on the command line without **-k rtkey**, association statistics output is generated. For IPSG cards, this option is enhanced to include receive and transmit counts for M3UA SSNMs (DAUD messages and M3UA SSNM PDUs) and replicated M3UA PDUs.

-b

This option is used to display signaling link bytes statistics. The signaling link bytes report displays data for measurements on a per-signaling-link basis for both the transmit and receive directions. The report can display link statistics for a specified signaling link number. If a link is not specified, the report displays link statistics for signaling link A for IPGWx cards and for all equipped signaling links for IPLIMx and IPSG cards. If a signaling link is valid for the card and application type, but is unequipped, then the report displays all zeros.

-h

This option is used to provide help information for the command.

-d

This option is used to report dynamic routing keys (IPGWx application only). This option is not supported for the IPSG application.

Default: **Static**

-f

This option is used to display a full report (IPGWx application only).

-k rtkey

This option is used to specify the routing key for which the counts will be displayed. The routing key is specified as a single parameter with up to five colon-separated fields. The subsystem is not specified when SI is not equal to 3.

This option is not supported for the IPSG cards.

The **-p** modifier can be specified to identify the point code type of the routing key that follows the **-k** option in the command.

The rtkey variable is optional when used with **-t default**, and mandatory for all other cases.

If the same routing key exists as both a static and dynamic routing key, the **-k** option will report the counts associated with the dynamic entry in the Routing Key table only.

The following formats are valid for the routing key that follows the **-k** option in the command:

- **n-c-m:s:n**—For DPC, SI, SSN type routing keys. The network, cluster and member (**n-c-m**) are in the range **0-255**. The service indicator (s) is **3** or **sccp**. The subsystem (**n**) is in the range **0-255**.

- **n-c-m:s**—For DPC, SI, type routing keys. The network, cluster and member (*n-c-m*) are in the range **0-255**. The service indicator (s) is in the range **0-2, 4, or 6-15**. There is no subsystem. As a default, counts for all routing keys within the option combination are displayed.
- **n-c-m:s:no-co-mo:cs:ce**—For DPC, SI, CIC type routing keys. The DPC network, cluster and member (*n-c-m*) are in the range **0-255**. The service indicator (s) is **5** or **isup**. There is no subsystem. The OPC network, cluster and member (*no-co-mo*) are in the range **0-255**. The starting circuit identification code (cs) and ending circuit identification code (ce) are in the range **0** to **16363**.

-l

For IPSP cards, this option displays the link report for all equipped signaling links on the card.

-l link

This option is used to display counts for links. The link report optionally allows display of link statistics for a specified port.

The link report contains data, per link, for MSUs (tx/rcv), MSU bytes (tx/rcv), MGMT msgs (tx/rcv), and discarded data (tx/rcv).

For the IPSP card, the M2PA link report is the same as the IPLIMx M2PA report. The M3UA link report contains an additional detail line for non-discard pegs for SS7 SNM and Replicated M3UA PDU counts.

Range: a, b, a1, b1, a2, b2, a3, b3 a:a15-b:b15

Ports **a1, b1, a2, b2, a3, and b3** are allowed only on SSEDCCM IPLIMx cards.

If a port is not specified, **msucount** displays link statistics for port **a** for IPGWx links, and port **a** and port **b** for IPLIMx links.

The **msucount** link statistics report contains all zeros for a port that is valid for the card and application type but is unequipped.

The range a:a15-b:b15 is valid for IPSP cards.

-l

link -f

This option displays the full link report. For IPSP-M2PA links, this option displays the same report as the **-l <link>** option. For IPSP-M3UA links the report includes the data from the **-l <link>** report and includes an additional detail line displaying tx/rx discards counts and discard data.

-p point code type

This option modifier can be specified along with the **-k** option to identify the point code type (ANSI, ITU international, ITU-national, 24-bit ITU national, ITU international spare, and ITU national spare) in the routing key that follows the **-k** option in the command.

Range: ansi, itui, itun, itun24, ituis, ituns**-r**

This option is used with other options to reset counts at the same time of reporting them.

-s name

This option is used to display socket reports for the specified IP connection. This option is not supported for IPSP cards.

Range:

Up to 15 alphanumeric characters

Default: Counts for all IP connections within the option combination

-t keytype

This option is used to display the routing key type (IPGWx only).

-x

The routing context is an index that uniquely defines a routing key associated with an SUA or M3UA AS. For the IPSP card, the option displays a link report for all signaling links on the card that are

members of the linkset that contains the specified routing context value (equivalent to the **msucount -lreport.-x** option is used as an alternative to the **-k** option to identify the routing key by specifying its routing context in the command line.

NOTE: The -x rc option can only be used to specify routing keys containing M3UA/SUA associations.

Example

Link counts only. Displays brief count for signaling link a for IPGWx. Displays counts for all equipped signaling links for IPLIMx.

msucount -l

Link counts only, for signaling link port **a1**.

msucount -l a1

Full/detail report for signaling link **a** for IPGWx.

msucount -l -f

Counts for the specified socket only.

msucount -s socyellow

Counts for the specified association only.

msucount -a association name

Counts for first matching routing key

msucount -k 10-10-10:3:16

Counts for matching dynamic routing key

msucount -k 10-10-10:3:16 -d

Counts for the routing key report using the routing context.

msucount -x 5

Counts for the first matching routing key and an associated socket

msucount -s socket name -k rtkey

Counts for first matching routing key and an associated association.

msucount -a association name -k rtkey

Counts for the default routing key

msucount -k -t default

Counts for a matching partial routing key.

msucount -k 3-3-3 -t partial

Counts for counts for link only. Displays brief report for signaling link a for IPGWx. Displays counts for all equipped signaling links for IPLIMx.

msucount

Full/detail report for signaling link A for IPGWx.

msucount -h full

Resets the signaling link count measurements.

msucount -r

Brief version of help text.

msucount -h

Full version of help text.

msucount -h full

Counts for link and first matching routing key

msucount -b

Byte report for signaling link A for IPGWx cards. Byte report for all equipped signaling links for IPLIMx cards.

msucount -b -link

Byte report for specified signaling link.

msucount -l -k 10-10-10:3:16

Counts for first matching routing key and an associated IP connection

msucount -s socyellow -k 10-10-10:3:16

Use with other parameters to display and reset counts. Valid with the above combinations.

msucount -l -r**msucount -r****msucount -s sock1 -r****msucount -x 5 -r**

The following examples provide a correct syntax to specify partial or default keys, or to specify a key by routing context.

pass:loc=1105:cmd="msucount -k 5-5-1:5:6-6-6 -t partial

pass:loc=1105:cmd="msucount -k 5-5-1:5 -t partial"

pass:loc=1105:cmd="msucount -k 5-5-1:3 -t partial

pass:loc=1105:cmd="msucount -p ITUI -t partial -k 1-235-1"

pass:loc=1105:cmd="msucount -p ITUN -t partial -k 2351"

pass:loc=1105:cmd="msucount -p ITUN -t partial -k 2351-gr

pass:loc=1105:cmd="msucount -t partial -k :2 "

pass:loc=1105:cmd="msucount -k -t default"

pass:loc=1105:cmd="msucount -d -k -t default "

pass:loc=1105:cmd="msucount -p ITUN24 -t partial -k 10-235-1"

pass:loc=1105:cmd="msucount -p ITUN24 -t partial -k 10-235-1"

Examples of other valid routing key inputs:

pass:loc=1105:cmd="msucount -r -k 5-5-6:5:5-5-7:1:1000"

pass:loc=1105:cmd="msucount -r -p ITUI -k 5-5-6:4:5-5-7:1:1000"

pass:loc=1105:cmd="msucount -r -p ITUI -k 5-5-6:5:5-5-7:1:1000"

```

pass:loc=1105:cmd="msucount -p ITUI -k 5-5-1:3:5 -s c7000 -r"
pass:loc=1105:cmd="msucount -r -s c7050 -p ITUN -k 2860:3:5 -l"
pass:loc=1105:cmd="msucount -k 5-5-1:3:5 -a assoc1"
pass:loc=1105:cmd="msucount -p ITUN -k 3838:3:5 -s c7000"
pass:loc=1105:cmd="msucount -p ITUI -k 1-34-4:3:105 -s c7001"
pass:loc=1105:cmd="msucount -r -p ITUN24 -k 15-105-16:5:15-105-17:1:1000"

```

Dependencies

At least one option must be specified.

Notes

The **msucount** command is executed through the **pass** command.

Combinations of the **-l**, **-a**, **-s**, **-k**, **-t**, **-x** and **-b** options provide count information based on the entered combination.

If no parameters are specified, then the **-l** brief report is output.

Multiple reports are not supported with the IP Signaling Serviceability feature.

For the SS7IPGW and IPGWI GPLs, 4 types of reports can be generated: the link report, the routing key report, the IP connection statistics report, and the signaling link bytes report. For the IPLIM/IPLIMI card, the routing key report is not supported.

The 4 reports are the following:

1. The link report (**-l** option) contains statistics per link—data about MSUs (transmit/receive), MSU bytes (transmit/receive), MGMT messages (transmit/receive), and discarded data (transmit/receive).
2. The routing key report (**-k** option) contains statistics for a specific routing key—data about MSUs (transmit), MSU bytes (transmit), and discards on the transmit path for the routing key. A list of one or more IP connections associated with the routing key, with the MSU and MSU bytes counts for each connection, is also displayed. If **-s sname** or **-a aname** is in the same input command with **-k rtkey**, only the connection association data for the specified connection is displayed. When **-s sname** and **-a aname** is not specified with **-k rtkey**, all connection associations are listed. If **-x rc** is specified, only the connection association data for the specified routing context is displayed.
The **-p** (point code type) modifier option can be used with the **-k** option to specify the point code type of the routing key that follows the **-k** option in the command.
For the **-k** options, the routing key must be an exact match of a routing key that exists in the static or dynamic Routing Key tables. If the same routing key exists in both the static and dynamic Routing Key tables, the **-k** option displays the counts associated with the entry in the dynamic Routing Key table only.
3. The IP connection statistic report (**-s sname** or **-a aname** option) contains statistics for a specified IP connection—data about MSUs (transmit/receive), MSU bytes (transmit/receive), and discarded data (transmit/receive).
When the **-s sname** or **-a aname** option is specified in the command with the **-k** option, the output type is assumed to be routing key output.
When the **-s sname** option is specified in the command without the **-k** option, the IP connection statistic report is generated.
When **-a aname** is specified on the command line without **-k**, association statistics output is generated.

4. The signaling link bytes report (**-b** option) provides the following information for both IPGWx and IPLIMx cards: bytes/sec for the last second, average MSU size during the last second, and maximum one-second average MSU size since card load time or reset. For the IPLIMx cards, the report also provides the following information: sum of bytes/sec for the last second for all signaling link, average MSU size for last second for all signaling links, maximum average MSU size since load time or reset for all signaling links, and maximum MSU size since load time or reset for all signaling links.

The link report, routing key report, and IP connection statistic report (IPGWx only) can display individual transmit MSUs that were discarded at layer 2. The first 32 bytes of the MSU transmit data that is discarded is stored beginning at the SIO bytes. If the MSU is not 32 bytes long, the remaining bytes are set to 0.

The signaling link bytes report optionally allows display of link statistics for a specified signaling link number. If a link is not specified for the bytes report, the *msucount* command displays link statistics for signaling link A for IPGWx cards and for all equipped signaling links for IPLIMx cards.

The signalling link bytes report contains all zeros for a signaling link that is valid for the card and application type but that is unequipped.

The link and IP connection statistics reports can display individual receive packets that were discarded at layer 2. Portions of the TALI packets for the receive MSUs that the SS7IPGW application discards are stored beginning with the 12 bytes of the TALI header., and followed by the service data. If the storage space is larger than the service data, the extra bytes are set to 0. The TALI packet is stored instead of the MSU so that it is not necessary to construct an MTP3 header for packets that are discarded for reasons such as bad link state, bad SCCP message type, no calling or called party, or bad SIO for an ISUP message.

The reset option (**-r**) resets the specified measurements. This option can be added to any command.

Output

In the examples that follow, the hexadecimal output for discarded *transmit* data represents data stored beginning at the SIO bytes through the first 32 bytes of the MSU. If the MSU was less than 32 bytes, the remaining bytes are represented by zeros.

Hexadecimal output for discarded *receive* data represents data stored beginning at the TALI header. (A TALI header can have a sync code of either TALI or SASI). This data is used to store portions of the TALI packets for received MSUs that the SS7IPGW APPL layer decides to discard.

Stored *receive* data takes the following format:

First 12 bytes = TALI header.

Bytes 13-x = Service data, beginning with the first byte of service data based on the received TALI operations code. If the storage space is greater than the size of the service data, the remaining bytes are zeroed.

Output Specific to SS7IPGW and IPGWI

Either brief or full help reports can be displayed. A full help report is generated by adding the **full** (**-f**) option to the command line.

Example of a brief help report:

```
pass:loc=1105:cmd="msucount -h"
```

```
Usage: msucount [ [-l [link]] | [-b [link]] ] |  
               [[-a aname] | [-s sname]]  
               [[-x rc] | [-k [rtkey]] [-p pctype] [-t keytype] [-d]] ]  
               [-f] [-r] [-h [full]]
```

```
Options: -l  display signaling link report  
        -b  display signaling link bytes report  
        -a  display association report  
        -s  display socket report  
        -x  routing key report using routing context  
        -k  routing key report using MTP3 parameters  
            rtkey :: ([dpc][:si][:opc | :ssn][:cics][:cice])  
        -p  pctype :: (ANSI, ITUI, ITUN, ITUN24, ITUIS, ITUNS)  
        -t  routing key type  
            keytype :: (<full>, partial, default)  
        -d  display dynamic routing key  
        -f  display full report  
        -r  resets the specified counts  
        -h  display command help (brief or full)
```

Example of a full help report.

pass:loc=1105:cmd="msucount -h full"

```
Usage: msuaccount [ [-l [link]] | [-b [link]] |
                  [[-a aname] | [-s sname]]
                  [[-x rc] | [-k [rtkey] [-p pctype] [-t keytype] [-d]]] ]
                  [-f] [-r] [-h [full]]
```

```
Options: -l display signaling link report
          -b display signaling link bytes report
          -a display association report
          -s display socket report
          -x routing key report using routing context
          -k routing key report using MTP3 parameters
             rtkey :: ([dpc][:si][:opc | :ssn][:cics][:cice])
          -p pctype :: (ANSI, ITUI, ITUN, ITUN24, ITUIS, ITUNS)
          -t routing key type
             keytype :: (<full>, partial, default)
          -d display dynamic routing key
          -f display full report
          -r resets the specified counts
          -h display command help (brief or full)
```

-k option details:

Use the -p option along with -k to specify the SS7 network domain and point code format for the network. The SS7IPGW default pctype is ANSI. The IPGW1 default pctype is ITUI.

Network	PC Format	Notes
ANSI	N-C-M	
ITUN	N	Non-Spare ITU National, no group code
ITUN	N-GC	Non-Spare ITU National with group code
ITUI	Z-A-I	Non-Spare ITU International
ITUN24	N-C-M	Non-Spare ITU National, 24-bits
ITUNS	N	Spare ITU National, no group code
ITUNS	N-GC	Spare ITU National with group code
ITUIS	Z-A-I	Spare ITU International

Use the -t option along with -k to specify certain MTP3 and user part MSU fields as wildcards for the routing key.

SS7 Traffic Partition	RTKEY Parameter	Example
Any User Part to DPC 1-1-1	-k 1-1-1	-t partial
SCCP to DPC 1-1-1	-k 1-1-1:3	-t partial
ISUP to DPC 1-1-1	-k 1-1-1:5	-t partial
TUP to DPC 1-1-1	-k 1-1-1:4	-t partial
QBICC to DPC 1-1-1	-k 1-1-1:13	-t partial
SI [0-2,6-12,14,15] to DPC 1-1-1	-k 1-1-1:SI	
SCCP SSN 5 to DPC 1-1-1	-k 1-1-1:3:5	
ISUP to DPC 1-1-1 from OPC 2-2-2	-k 1-1-1:5:2-2-2	-t partial
TUP to DPC 1-1-1 from OPC 2-2-2	-k 1-1-1:4:2-2-2	-t partial
QBICC to DPC 1-1-1 from OPC 2-2-2	-k 1-1-1:13:2-2-2	-t partial
ISUP CIC 1 to 1-1-1 from 2-2-2	-k 1-1-1:5:2-2-2:1	
TUP CIC 1 to 1-1-1 from 2-2-2	-k 1-1-1:4:2-2-2:1	
QBICC CIC 1 to 1-1-1 from 2-2-2	-k 1-1-1:13:2-2-2:1	
ISUP CIC 0-5 to 1-1-1 from 2-2-2	-k 1-1-1:5:2-2-2:0:5	
TUP CIC 0-5 to 1-1-1 from 2-2-2	-k 1-1-1:4:2-2-2:0:5	
QBICC CIC 0-5 to 1-1-1 from 2-2-2	-k 1-1-1:13:2-2-2:0:5	
Default Routing Key	-k	-t default

A brief version for the link measurement report can be specified for IPGWx. If no parameters are specified for a link measurements report, then a brief report is displayed. The brief report does not display the transmit/receive discard counts.

Example of a brief link measurements report:

pass:loc=1305:cmd="msucount"

or

pass:loc=1305:cmd="msucount -l"

MSUCOUNT: MSU Count Report

Link Measurements (Link A)

Transmit Counts

rate	msus	bytes
2000	4294967295	4294967295

Receive Counts

rate	msus	bytes
2000	4294967295	4294967295

MTP Primitive (MTPP) counts

sent pdus	rcvd pdus	dscrd pdus
4294967295	4294967295	4294967295

Reroute Counts

sent msus	rcvd msus
4294967295	4294967295

END of Report

Example of a full link measurements report:

pass:loc=1305:cmd="msucount -f"

or

pass:loc=1305:cmd="msucount -l -f"

MSUCOUNT: MSU Count Report

Link Measurements (Link A)

Transmit Counts

rate	msus	bytes
2000	4294967295	4294967295

Receive Counts

rate	msus	bytes
2000	4294967295	4294967295

MTP Primitive (MTPP) Counts

sent pdus	rcvd pdus	dscrd pdus
4294967295	4294967295	4294967295

Reroute Counts

sent msus	rcvd msus
4294967295	4294967295

Dynamic Rtkey (RKRP) Counts

rcvd pdus	dscrd pdus	updates
4294967295	4294967295	4294967295

Transmit Discard Counts

reason	count
no ss7 rtbl entry	4294967295
no ss7 rtkey	4294967295
no conn avail to pc	4294967295
no conn avail to rtkey	4294967295
congested connection	4294967295
sccp msg type	4294967295
sccp class	4294967295
circular rte	4294967295
normalization error	4294967295
invalid traffic type	4294967295
M3UA conversion error	4294967295
SUA conversion error	4294967295
AS-Pending overflow	4294967295
AS timer Tr expiry	4294967295
reroute failure	4294967295
unexpected for APC	4294967295
lrg BICC not supported	4294967295

Receive Discard Counts

reason	count
link state	4294967295
sccp msg type	4294967295
sccp class	4294967295
sccp called party	4294967295
sccp calling party	4294967295
isup sio	4294967295
normalization error	4294967295
error in XSRV packet	4294967295
M3UA PDU error	4294967295
SUA PDU error	4294967295
invalid rcontext	4294967295
lrg BICC not supported	4294967295

Stored Transmit Discard Data

```

83 01 05 05 0a 01 03 bf 09 80 03 08 0d 05 c3 07
01 05 05 05 c3 07 0a 01 03 08 e2 06 c7 04 13 10

```

Stored Receive Discard Data

```

53 41 53 49 73 63 63 70 1a 00 09 01 03 08 0d 05
c3 05 0a 01 03 05 c3 05 01 05 05 08 e2 06 c7 04

```

MSUCOUNT: command complete

;

Example of an output report when all counts are zero:

pass:loc=1305:cmd="msucount -f"

or

pass:loc=1305:cmd="msucount -l -f"

```

MSUCOUNT: MSU Count Report
-----
Link Measurements (Link A)
-----
Transmit Counts                      Receive Counts
-----
rate  msus      bytes                rate  msus      bytes
-----
00000 00000      00000                00000 00000      00000

MTP Primitive (MTPP) Counts          Reroute Counts
-----
sent pdus  rcvd pdus  dscrd pdus  sent msus  rcvd msus
-----
00000      00000      00000      00000      00000

Dynamic Rtkey (RKRP) Counts
-----
rcvd pdus  dscrd pdus  updates
-----
00000      00000      00000

Transmit Discard Counts              Receive Discard Counts
-----
reason                      count                reason                      count
-----
no transmit discard counts      no receive discard counts

Stored Transmit Discard Data
-----
no stored transmit discard data
Stored Receive Discard Data
-----
no stored receive discard data

MSUCOUNT: command complete

```

Routing Key Report Output Examples

The routing key report contains data about MSUs (tx), MSU bytes (tx), and discards on the transmit path for the routing key. A list of one or more connections associated with the routing key, with the MSU and MSU bytes counts for each connection, is also presented. If **-s sname** or **-a aname** is in the same input command with **-k rtkey**, only the connection association data for the specified connection is displayed. When **-s sname** and **-a aname** is not specified with **-k rtkey**, all connection associations are listed. If **-x rc** is specified, only the connection association data for the specified routing context is displayed.

NOTE: For IPGWx, -k rtkey is optional when used with -t default, and mandatory for all other cases.

The report output itself does not display the routing key that was entered, other than an exact copy of the command line being generated as part of the output. The only indication in the output as to which key was found is the indication as to whether the key was in the dynamic Routing Key table or the static Routing Key table.

Partial routing keys (where some fields in the MSU are ignored with respect to finding a routing key to use for the MSU) and default keys can be specified in the command. The output does not change for these key types; the only difference is the routing key syntax (**-p**, **-d**) that must be processed as part of identifying the partial and default keys. (See the Example section of this command description for syntax examples.)

Example of a routing key report for an ANSI routing key that specifies the dynamic Routing Key table:

pass:loc=1105:cmd="msucount -k 5-5-1:3: -t partial -d"

or

pass:loc=1105:cmd="msucount -k 5-5-1:3 -p ANSI -t partial -d"

```

MSUCOUNT: MSU Count Report
-----
Routing Key Measurements for Dynamic Routing Key
-----
Transmit Counts
-----
tx bytes                4294967295
tx msus                 4294967295

Transmit Discard Counts
-----
sccp msg type           4294967295
sccp class              4294967295
normalization error     4294967295
invalid traffic type    4294967295

Associated IP Connection      tx bytes      tx msus
-----
c7000                        4294967295    4294967295
c7050                        4294967295    4294967295
c7052                        4294967295    4294967295
c7054                        4294967295    4294967295

Stored Transmit Discard Data
-----
83 01 05 05 0a 01 03 94 09 01 03 08 0d 05 c3 05
01 05 05 05 c3 05 0a 01 03 08 e2 06 c7 04 28 10

MSUCOUNT: command complete
;

```

Example of an ITU-I routing key report (only 1 specific socket association or socket is displayed):

pass:loc=1105:cmd="msucount -p ITUI -k 5-5-1:3:5 -a c7000"

or

pass:loc=1105:cmd="msucount -p ITUI -k 5-5-1:3:5 -s c7000"

```

MSUCOUNT: MSU Count Report

-----
Routing Key Measurements for Static Routing Key
-----

Transmit Counts
-----
tx bytes:                4294967295
tx msus:                  4294967295

Transmit Discard Counts
-----
sccp msg type            4294967295
sccp class                4294967295
normalization error      4294967295
invalid traffic type     4294967295

Associated IP Connection      tx bytes      tx msus
-----
c7000                        4294967295    4294967295

Stored Transmit Discard Data
-----
83 01 05 05 0a 01 03 94 09 01 03 08 0d 05 c3 05
01 05 05 05 c3 05 0a 01 03 08 e2 06 c7 04 28 10

MSUCOUNT: command complete
;

```

Example of a routing key report when the routing context =5 (because a table is not specified, the key is searched for in the Static table).

pass:loc=1105:cmd="msucount -x 5"

MSUCOUNT: MSU Count Report

 Routing Key Measurements for Static Routing Key

Transmit Counts

 tx bytes 4294967295
 tx msus 4294967295

Transmit Discard Counts

 sccp msg type 4294967295
 sccp class 4294967295
 normalization error 4294967295
 invalid traffic type 4294967295

Associated IP Connection	tx bytes	tx msus
-----	-----	-----
c7000	4294967295	4294967295
c7050	4294967295	4294967295
c7052	4294967295	4294967295
c7054	4294967295	4294967295

Stored Transmit Discard Data

 83 01 05 05 0a 01 03 94 09 01 03 08 0d 05 c3 05
 01 05 05 05 c3 05 0a 01 03 08 e2 06 c7 04 28 10

MSUCOUNT: command complete

;

Example of an ITU-N routing key report:

- Command when the ITUDUPPC feature is OFF (default)

pass:loc=1105:cmd="msucount -p ITUN -k 2860:3:5"

Command Accepted - Processing

rlghncxa03w 06-06-01 11:33:40 EST EAGLE5 35.0.0
 pass:loc=1105:cmd="msucount -p ITUN -k 2860:3:5"
 Command entered at terminal #1.

;

- Command when the ITUDUPPC feature is ON (a 2-letter group code must be specified)

pass:loc=1105:cmd="msucount -p ITUN -k 2860-gr:3:5"

Command Accepted - Processing

rlghncxa03w 06-06-01 11:33:40 EST EAGLE5 35.0.0
 pass:loc=1105:cmd="msucount -p ITUN -k 2860-gr:3:5"
 Command entered at terminal #1.

;

- The remainder of the ITUN routing key report is the same for both the **on** and **off** settings of the ITUDUPPC feature:

rlghncxa03w 06-06-01 11:33:40 EST EAGLE5 35.0.0

```

PASS: Command sent to card
;

rlghncxa03w 06-06-01 11:33:40 EST  EAGLE5 35.0.0
MSUCOUNT: Command In Progress

;

rlghncxa03w 06-06-01 11:33:40 EST  EAGLE5 35.0.0
MSUCOUNT: MSU Count Report

-----
Routing Key Measurements for Static Routing Key
-----

Transmit Counts
-----
tx bytes:                                00000
tx msus:                                00000

Transmit Discard Counts
-----
discarded tx due to sccp msg type:      00000
discarded tx due to sccp class:         00000
discarded tx due to normalization error: 00000
discarded tx due to invalid traffic type: 00000

Associated IP Connection                tx bytes      tx  msus
-----
c7000                                00000000      00000000
c7050                                00000000      00000000
c7052                                00000000      00000000
c7054                                00000000      00000000

Stored Transmit Discard Data
-----
no stored transmit discard data

MSUCOUNT: command complete

;

```

IP Connection Report

Example of an IP Connection report for an association or a socket (both share the same report output).

pass:loc=1105:cmd="msucount -s c7050"

or

pass:loc=1105:cmd="msucount -a c7050"

MSUCOUNT: MSU Count Report

IP Connection Measurements

Receive Counts

msus	bytes
4294967295	4294967295

Transmit Counts

msus	bytes
4294967295	4294967295

Receive Discard Counts

reason	count
link state	4294967295
sccp msg type	4294967295
sccp class	4294967295
sccp called party	4294967295
sccp calling party	4294967295
isup sio	4294967295
normalization error	4294967295
error in XSRV packet	4294967295
M3UA PDU error	4294967295
SUA PDU error	4294967295
invalid rcontext	4294967295

Transmit Discard Counts

reason	count
sccp msg type	4294967295
sccp class	4294967295
normalization error	4294967295
invalid traffic type	4294967295
M3UA conversion error	4294967295
SUA conversion error	4294967295

Stored Transmit Discard Data

no stored transmit discard data

Stored Receive Discard Data

```
53 41 53 49 69 73 6f 74 11 00 87 0a 01 03 01 05
05 00 01 02 03 04 05 06 07 08 09 00 00 00 00 00
```

MSUCOUNT: command complete

;

Signaling Link Bytes Report

Example of a signaling link bytes report for an IPGWx card.

pass:loc=1305:cmd="msucount -b"

or

pass:loc=1305:cmd="msucount -b a"

MSUCOUNT: MSU Count Report

```

-----
Link Byte Measurements (Link A)
-----

SLK Transmit counts          SLK Receive counts
-----
bytes/      avg      max      max      bytes/      avg      max      max
sec         msu      avg msu      msu      sec         msu      avg msu      msu
-----
444400      2020     2020     2020     444400      2020     2020     2020

```

MSUCOUNT: command complete

Output Specific to IPLIM and IPLIMI

NOTE: The routing key report is not supported for IPLIMx applications. The -k, -t, -p, -d, -x options are not supported because the IPLIMx card does not use routing keys and does not support dynamic routing key registration.

NOTE: The IPLIMx reports include all equipped signaling links instead of just ports A and B. These reports include the transmit/receive counts alongside each other for the link case.

Example of help for using the command:

pass:loc=1103:cmd="msucount -h" or

pass:loc=1103:cmd="msucount"

```

Usage: msucount [ [-l [link]] | [-b [link]] |
                [[-a aname] | [-s sname]] ]
                [-r] [-h]

Options: -l  display signaling link report
         -b  display signaling link bytes report
         -a  display association report
         -s  display socket report
         -r  resets the specified counts
         -h  display command help

```

MSUCOUNT command complete

;

Example of a link report for an IPLIMx card with 2 SAALTALI or M2PA links:

The report does not contain MTPP or RKRPMGMT statistics, because those capabilities are not supported on the IPLIMx applications. The report also does not contain tx/rcv discard data, because there are no discards performed at layer 2 of the IPLIMx applications. The IPLIMx card can also contain 2 links per card; the output contains link data for each link.

pass:loc=1301:cmd="msucount"

or

pass:loc=1301:cmd="msucount -l"

MSUCOUNT: MSU Count Report

SLK Transmit counts				SLK Receive counts		
slk	rate	msus	bytes	rate	msus	bytes
A	2000	4294967295	4294967295	2000	4294967295	4294967295
B	2000	4294967295	4294967295	2000	4294967295	4294967295
A1	2000	4294967295	4294967295	2000	4294967295	4294967295
B1	2000	4294967295	4294967295	2000	4294967295	4294967295
A2	0000	0000000000	0000000000	0000	0000000000	0000000000

MSUCOUNT: command complete

The following is an output example for signaling link **a1** on an IPLIMx card:

pass:loc=1103:cmd="msucount -l a1"

MSUCOUNT: MSU Count Report

SLK Transmit counts				SLK Receive counts		
slk	rate	msus	bytes	rate	msus	bytes
A1	2000	4294967295	4294967295	2000	4294967295	4294967295

MSUCOUNT: command complete

Example of an IP connection statistics report. The IPLIMx IP connection report does not contain **tx/rcv** discard data, because there are no discards performed at layer 2 of the IPLIMx applications.

pass:loc=1105:cmd="msucount -s c7050"

or

pass:loc=1105:cmd="msucount -a c7050"

MSUCOUNT: Command In Progress

MSUCOUNT: MSU Count Report

IP Connection Measurements

Transmit Counts		Receive Counts	
msus	bytes	msus	bytes
4294967295	4294967295	4294967295	4294967295

MSUCOUNT: command complete

Signalling Link Bytes Report

Example of a signaling link bytes report for an IPLIMx card.

pass:loc=1303:cmd="msucount -b"

MSUCOUNT: SLK Bytes Report

SLK Transmit						SLK Receive					
max	avg	max				max	avg	max			
slk	bytes/sec	msu	msu	msu		slk	bytes/sec	msu	msu	msu	
A	35000	140	273	273		A	35000	140	273	273	
B	35000	140	273	273		B	35000	140	273	273	
A1	35000	140	578	578		A1	35000	140	578	578	
B1	35000	140	273	273		B1	35000	140	273	273	
A2	35000	140	140	140		A2	35000	140	140	140	
B2	35000	140	169	169		B2	35000	140	169	169	
A3	35000	2048	2048	2048		A3	35000	2048	2048	2048	
B3	35000	140	166	166		B3	35000	140	166	166	
280000	140	2048	2048	total		280000	140	2048	2048		

MSUCOUNT: command complete

Example signaling link bytes report for a specified link on an IPLIMx card.

pass:loc=1303:cmd="msucount -b a"

MSUCOUNT: SLK Bytes Report

SLK Transmit						SLK Receive					
max	avg	max				max	avg	max			
slk	bytes/sec	msu	msu	msu		slk	bytes/sec	msu	msu	msu	
A	35000	140	273	273		A	35000	140	273	273	

MSUCOUNT: command complete

Enhanced Reset Option

The reset option resets the specified measurements without displaying **msucount** output. The default is to reset the link measurements report.

Example displays resetting link measurements:

pass:loc=1305:cmd="msucount -l -r"

or

pass:loc=1305:cmd="msucount -r"

eagle10212 06-06-01 08:50:47 EST EAGLE 35.0.0

MSUCOUNT: MSU Count Report

Link measurements have been reset.

MSUCOUNT: command complete

Example displays resetting IP connections:

pass:loc=1305:cmd="msucount -s -sock1 -r"

```
eagle10212 07-05-05 08:50:47 EST EAGLE 37.0.0
```

```
MSUCOUNT: MSU Count Report
```

```
IP Connection measurements have been reset.
```

```
MSUCOUNT: command complete
```

Example displays resetting Routing Key measurements:

pass:loc=1305:cmd="msucount -x -5 -r"

```
eagle10212 06-01-05 08:50:47 EST EAGLE 35.0.0
```

```
MSUCOUNT: MSU Count Report
```

```
Routing Key measurements have been reset.
```

```
MSUCOUNT: command complete
```

Example displays resetting link byte measurements

pass:loc=1305:cmd="msucount -b -r"

```
eagle10212 07-05-01 08:50:47 EST EAGLE 37.0.0
```

```
MSUCOUNT: MSU Count Report
```

```
Link byte measurements have been reset.
```

```
MSUCOUNT: command complete
```

Output specific to IPSP Cards

The option to display a full help report is not supported for IPSP cards.

pass:loc=1304:cmd="msucount -h

```

Command Accepted - Processing

rlghncxa03w 08-01-29 11:31:09 EST  EAGLE 38.0.0
pass:loc=1304:cmd="msucount -h"
Command entered at terminal #3.
;

rlghncxa03w 08-01-29 11:31:09 EST  EAGLE 38.0.0
PASS: Command sent to card
;

rlghncxa03w 08-01-29 11:31:09 EST  EAGLE 38.0.0

Usage: msucount [ [-l [link]] | [-b [link]] | [-l link -f] ] |
               [ [-a aname] ]
               [ [-x rc] ]
               [-r] [-h]

Options: -l  display signaling link report
         -b  display signaling link bytes report
         -a  display association report
         -x  display routing context report
         -f  display full report
         -r  resets the specified counts
         -h  display command help
;

rlghncxa03w 08-01-29 11:31:09 EST  EAGLE 38.0.0

MSUCOUNT: command complete

```

For link reports on IPSP signaling links, if a specific link is not requested, then counts for all equipped signaling links on the card are displayed. The report includes counts for up to 32 links per card. The **-l <link>** report adds counts for *Replicated M3UA PDU sent*, *Replicated M3UA PDU rcvd*, and *SS7 SNM Counts sent* for M3UA links.

Example of a brief measurements report:

pass:loc=1303:cmd="msucount -l"

```

rlghncxa03w 08-01-29 11:31:09 EST  EAGLE 38.0.0
pass:loc=1303:cmd="msucount -l"

MSUCOUNT: MSU Count Report

```

SLK Transmit counts				SLK Receive counts		
slk	rate	msus	bytes	rate	msus	bytes
A	0	3	72	0	0	0
B	0	62	1916	0	62	1916
A1	0	2	48	0	0	0
A2	0	1	24	0	0	0
A3	0	0	0	0	0	0
A4	0	0	0	0	0	0
-----				-----		
	0	68	2060	0	62	1916
-----				-----		

MSUCOUNT: command complete

Example of a measurement report for an IPSP-M3UA signaling link:

❑ **pass:loc=1303:cmd="msucount -l a"**

```
rlghncxa03w 08-01-29 11:31:09 EST EAGLE 38.0.0
MSUCOUNT: MSU Count Report
```

SLK Transmit counts				SLK Receive counts		
slk	rate	msus	bytes	rate	msus	bytes
A	0	3	72	0	0	0

Replicated M3UA PDU counts		SS7 SNM counts
sent	rcvd	sent
0	0	3

Example of a measurement report for an IPSP-M2PA signaling link:

pass:loc=1303:cmd="msucount -l b"

```
rlghncxa03w 08-01-29 11:31:09 EST EAGLE 38.0.0
MSUCOUNT: MSU Count Report
```

SLK Transmit counts				SLK Receive counts		
slk	rate	msus	bytes	rate	msus	bytes
B	0	62	1916	0	62	1916

MSUCOUNT: command complete

The **msucount -l <link> f** report displays the same information as the brief report (**msucount -l <link>**) for IPSP-M2PA links. For IPSP-M3UA links, the **msucount -l <link> -f** report displays both the information from the brief report and the *discarded tx due to M3UA Conversion Error*, *discarded rcv due to M3UA PDU Error*, *discarded rcv due to Management Blocking*, and *discarded rcv due to Lrg BICC not supported* discard counts.

Example of a full report for an IPSP-M3UA signaling link when discard counts are not received:

Pass:loc=1303:cmd="msucount -l a -f"

rlghncxa03w 08-01-29 11:31:09 EST EAGLE 38.0.0
 MSUCOUNT: MSU Count Report

SLK Transmit counts				SLK Receive counts		
slk	rate	msus	bytes	rate	msus	bytes
A	0	3	72	0	0	0

Replicated M3UA PDU counts		SS7 SNM counts
sent	rcvd	sent
0	0	3

Transmit Discard Counts		Receive Discard Counts	
reason	count	reason	count
M3UA conversion error	2	no receive discard counts	

Stored Transmit Discard Data

```

b0 04 04 04 00 d4 01 1b 61 00 00 bb a9 02 00 00
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
b0 04 04 04 00 d4 01 16 61 00 00 27 b8 02 00 00
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

```

Stored Receive Discard Data

```

no stored receive discard data

```

MSUCOUNT: command complete

Example of a full report for an IPSG-M3UA signaling link when discard counts are received:

pass:loc=1304:cmd="msucount -l a -f"

Command Accepted - Processing

rlghncxa03w 08-01-29 11:31:09 EST EAGLE 38.0.0

MSUCOUNT: MSU Count Report

SLK Transmit counts

slk	rate	msus	bytes
A	0	58	3380

SLK Receive counts

rate	msus	bytes
0	5	292

Replicated M3UA PDU counts

sent	rcvd
1	1

SS7 SNM counts

sent
13

Transmit Discard Counts

reason	count
M3UA conversion error	3

Receive Discard Counts

reason	count
M3UA PDU Error	1
management blocking	1
lrg BICC not supported	1

Stored Transmit Discard Data

```

b0 04 04 04 00 6e 01 18 51 01 00 0f 49 02 00 00
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

80 04 04 04 00 d2 01 00 23 05 05 05 02 1f 61 02
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

80 04 04 04 00 d2 01 00 13 20 19 02 00 00 00 00
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

```

Stored Receive Discard Data

```

01 00 04 01 00 00 00 18 00 0b 00 08 02 00 00 00
00 06 00 08 00 00 00 04 00 00 00 00 00 00 00 00

01 00 01 01 00 00 00 3c 00 06 00 08 00 00 00 04
02 10 00 2b 00 04 04 04 00 05 05 05 0d 02 00 96

01 00 00 10 00 00 00 1c 00 0c 00 08 00 00 00 06
00 07 00 0c 01 00 02 02 00 00 00 18 00 00 00 00

```

MSUCOUNT: command complete

;

Example of a link report for an IPSP-M2PA signaling link:

pass:loc=1303:cmd="msucount -l b"

```
rlghncxa03w 08-01-29 11:31:09 EST EAGLE 38.0.0
MSUCOUNT: MSU Count Report
```

SLK Transmit counts				SLK Receive counts		
slk	rate	msus	bytes	rate	msus	bytes
B	0	62	1916	0	62	1916

```
MSUCOUNT: command complete
```

Example of a full link report for an IPSG-M3UA link where discard counts are not received:

pass:loc=1303:cmd="msucount -l a -f"

```
rlghncxa03w 08-01-29 11:31:09 EST EAGLE 38.0.0
MSUCOUNT: MSU Count Report
```

SLK Transmit counts				SLK Receive counts		
slk	rate	msus	bytes	rate	msus	bytes
A	0	3	72	0	0	0

Replicated M3UA PDU counts		SS7 SNM counts
sent	rcvd	sent
0	0	3

Transmit Discard Counts		Receive Discard Counts	
reason	count	reason	count
M3UA conversion error	2	no receive discard counts	

```
Stored Transmit Discard Data
-----
b0 04 04 04 00 d4 01 1b 61 00 00 bb a9 02 00 00
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

b0 04 04 04 00 d4 01 16 61 00 00 27 b8 02 00 00
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
```

```
Stored Receive Discard Data
-----
no stored receive discard data
```

```
MSUCOUNT: command complete
```

Example of a full link report that contains discard counts for an IPSG-M3UA link:

pass:loc=1304:cmd="msucount -l a -f"

Command Accepted - Processing

rlghncxa03w 08-01-29 11:31:09 EST EAGLE 38.0.0

MSUCOUNT: MSU Count Report

SLK Transmit counts

slk	rate	msus	bytes
A	0	58	3380

SLK Receive counts

rate	msus	bytes
0	5	292

Replicated M3UA PDU counts

sent	rcvd
1	1

SS7 SNM counts

sent
13

Transmit Discard Counts

reason	count
M3UA conversion error	3

Receive Discard Counts

reason	count
M3UA PDU Error	1
management blocking	1
lrg BICC not supported	1

Stored Transmit Discard Data

```

b0 04 04 04 00 6e 01 18 51 01 00 0f 49 02 00 00
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

80 04 04 04 00 d2 01 00 23 05 05 05 02 1f 61 02
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

80 04 04 04 00 d2 01 00 13 20 19 02 00 00 00 00
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

```

Stored Receive Discard Data

```

01 00 04 01 00 00 00 18 00 0b 00 08 02 00 00 00
00 06 00 08 00 00 00 04 00 00 00 00 00 00 00 00

01 00 01 01 00 00 00 3c 00 06 00 08 00 00 00 04
02 10 00 2b 00 04 04 04 00 05 05 05 0d 02 00 96

01 00 00 10 00 00 00 1c 00 0c 00 08 00 00 00 06
00 07 00 0c 01 00 02 02 00 00 00 18 00 00 00 00

```

MSUCOUNT: command complete

;

Signaling Link Bytes Report

The IPSPG signaling link bytes report is the same as the IPLIMx link bytes report.

Example of a signaling link bytes report for an IPSPG card:

pass:loc=1303:cmd="msucount -b"

rlghncxa03w 08-01-29 11:31:09 EST EAGLE 38.0.0
MSUCOUNT: MSU Count Report

SLK Transmit counts					SLK Receive counts				
slk	bytes/ sec	avg msu	max avg msu	max msu	bytes/ sec	avg msu	max avg msu	max msu	
A	0	0	24	24	0	0	0	0	
B	62	31	31	31	62	31	31	31	
A1	0	0	24	24	0	0	0	0	
A2	0	0	24	24	0	0	0	0	
A3	0	0	0	0	0	0	0	0	
A4	0	0	0	0	0	0	0	0	
-----					-----				
	62	31	31	31	62	31	31	31	
-----					-----				

Example of the '-b' link report:

pass:loc=1305:cmd="msucount -b a"

rlghncxa03w 08-01-29 11:31:09 EST EAGLE 38.0.0
MSUCOUNT: MSU Count Report

SLK Transmit counts					SLK Receive counts				
slk	bytes/ sec	avg msu	max avg msu	max msu	bytes/ sec	avg msu	max avg msu	max msu	
A	0	0	24	24	0	0	0	0	
-----					-----				
	0	0	24	24	0	0	0	0	
-----					-----				

MSUCOUNT: MSU Count Report

Routing Context Report

The **msucount -x <routing context>** report for an IPSP card displays the equivalent of the **msucount -l** report for all signaling links on the card that are members of the linkset containing the specified routing context.

Example of a routing context report:

pass:loc=1303:cmd="msucount -x 74565"

```
rlghncxa03w 08-01-29 11:31:09 EST EAGLE 38.0.0
MSUCOUNT: MSU Count Report
```

```
-----
Routing Context Measurements
-----
```

SLK Transmit counts				SLK Receive counts		
slk	rate	msus	bytes	rate	msus	bytes
A	0	3	72	0	0	0
	0	3	72	0	0	0

```
MSUCOUNT: command complete
```

```
;
```

IP Connection Report

The IP connection statistic report for an IPSG card contains data regarding MSUs (tx/rcv), MSU bytes (tx/rcv), and discarded data (tx/rcv) for a specific socket or an association. The **-a <aname>** report for M3UA links adds the *Replicated M3UA PDU sent*, *Replicated M3UA PDU rcvd*, *SS7 SNM sent*, *Discarded rcv due to SS7 SNM not supported*, and *Discarded rcv due to no SS7 SNM capacity*.

The existing *Discarded rcv due to M3UA PDU error* and *Invalid rcontext counts* are also supported.

Example of an aname report:

```
pass:loc=1303:cmd="msucount -a a1303a"
```

rlghncxa03w 08-01-29 11:31:09 EST EAGLE 38.0.0

MSUCOUNT: MSU Count Report

IP Association Measurements

Transmit PDUs		Receive PDUs	
pdus	bytes	pdus	bytes
3	72	0	0

SS7 SNM counts

sent	rcvd
0	0

Receive Discard Counts

reason	count
M3UA PDU error	3

Stored Receive Discard Data

```

-----
01 00 00 00 00 00 00 1c 00 0c 00 08 00 00 00 06
00 07 00 0c 01 00 02 02 00 00 00 18 00 00 00 00

01 00 00 00 00 00 00 1c 00 0c 00 08 00 00 00 06
00 07 00 0c 01 00 02 02 00 00 00 18 00 00 00 00

01 00 00 00 00 00 00 1c 00 0c 00 08 00 00 00 06
00 07 00 0c 01 00 02 02 00 00 00 18 00 00 00 00

```

MSUCOUNT: command complete
;

pass:loc=1304:cmd="msucount -a a1304m3ua1"

Command Accepted - Processing

<CLLI> <date> <time> <timezone> <product> <release ID>

MSUCOUNT: MSU Count Report

IP Association Measurements

Transmit PDUs

pdus bytes

58 3380

Receive PDUs

pdus bytes

5 292

SS7 SNM counts

sent rcvd

8 7

Receive Discard Counts

reason count

SS7 SNM not supported 1
SS7 SNM no capacity 1
M3UA PDU error 13
invalid rcontext 5

Stored Receive Discard Data

01 00 01 01 00 00 00 3c 00 06 00 08 00 00 00 01
02 10 00 2b 00 04 04 04 00 05 05 05 05 00 00 9a

01 00 03 01 00 00 00 08 00 00 00 00 00 00 00
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

01 00 01 01 00 00 00 3c 00 06 00 08 00 00 00 04
02 10 00 2b 00 04 04 04 00 05 05 05 85 02 00 9a

01 00 01 01 00 00 00 3c 00 06 00 08 00 00 00 04
02 10 00 2b 00 04 04 04 00 05 05 05 85 02 00 9a

01 00 04 01 00 00 00 18 00 0b 00 08 02 00 00 00
00 06 00 08 00 00 00 04 00 00 00 00 00 00 00

01 00 01 01 00 00 00 3c 00 06 00 08 00 00 00 04
02 10 00 2b 00 04 04 04 00 05 05 05 85 02 00 9a

01 00 01 01 00 00 00 3c 00 06 00 08 00 00 00 04
02 10 00 2b 00 04 04 04 00 05 05 05 85 02 00 9a

01 00 01 01 00 00 0a fc 00 06 00 08 00 00 00 0a
02 10 0a eb 00 04 32 01 00 04 32 01 0d 02 00 99

01 00 01 01 00 00 00 08 00 00 00 00 00 00 00
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00

01 00 07 01 00 00 00 70 00 06 00 08 00 00 00 02

```
01 15 00 08 00 00 00 80 01 02 00 18 00 02 00 03
```

```
MSUCOUNT: command complete
```

```
;
```

msuroute

Message Signaling Unit (MSU) Routing Information

This command is used to provide a list of all routing keys currently configured on an SS7IPGW/ IPGWI card that could be used to route a particular MSU. With 3 types of routing keys (fully specified, partial and default) and 2 types of routing key tables (static and dynamic) the complexity associated with figuring out how a particular MSU would be routed at any point in time is not trivial. This command provides output to help determine how MSUs will be routed based on current conditions.

Keyword: **msuroute**

Command Class: Application Maintenance

Options

Options and option parameters that are underlined indicate that a value must be specified for that option or parameter. For example, the **msuroute** command option **-k** has the parameter **rtkey**. The *full routing key* must be specified for the MSU for which the summary will be displayed, as in the command **msuroute -k 5-5-5:5:6-6-6:1100**. Do not enter the underlined option or parameter; enter a value for the information represented by the underlined option or parameter.

-d

This option is used to report dynamic routing keys.

-h

This option is used to provide help information for the command.

-k rtkey

This option is mandatory in the command to specify the full routing key for the MSU for which the summary will be displayed. The routing key is specified as a single parameter with up to five colon-separated fields. The subsystem is not specified when SI is not equal to **3**.

The **-p point code type** modifier is used to identify the format of the routing key that follows the **-k** option in the command.

The following are valid formats for the routing key that follows the **-k** option in the command:

- **n-c-m:s:n**—For DPC, SI, SSN type routing keys. The network, cluster and member (n-c-m) are in the range **0-255**. The service indicator (s) is **3** or **sccp**. The subsystem (n) is in the range **0-255**.
- **n-c-m:s**—For DPC, SI, type routing keys. The network, cluster and member (n-c-m) are in the range **0-255**. The service indicator (s) is in the range **0-2**, **4**, or **6-15**. There is no subsystem.
- **n-c-m:s:no-co-mo:cs:ce**—For DPC, SI, CIC type routing keys. The DPC network, cluster and member (n-c-m) are in the range **0-255**. The service indicator (s) is **5** or **isup**. There is no subsystem. The OPC network, cluster and member (no-co-mo) are in the range **0-255**. The starting circuit identification code (cs) and ending circuit identification code (ce) are in the range **0** to **16363**.

-p point code type

This option modifier is used to identify the point code type (ANSI, ITU international, ITU national, ITU international spare, ITu national spare) in the routing key that follows the **-k** option in the command.

Range: ansi, itui, itun, itun24. ituis, ituns

Default: ansi

-x routing context

This option modifier is used to display the routing key report using routing context.

Example

```
msuroute -h
msuroute -p ansi -k 5-5-5:5:6-6-6:1100
msuroute -p ansi -k 5-5-5:5:6-6-6:1100:1100
msuroute -k 5-5-5:5:6-6-6:1100
msuroute -k 5-5-5:5:6-6-6:1100:1100
msuroute -p ansi -k 5-5-5:8
msuroute -p itun -k 345:5:678:100:200
msuroute -p itun -k 345-gr:5:678-gr:100:200
msuroute -p itun24 -k 10-200-10:5:10-200-1:1:100
```

Dependencies

The **-k** option must be specified in the command, and must specify a full routing key.

This command is not supported for IPLIM/IPLIMI cards.

Notes

The **msuroute** command is executed through the pass command.

The **-p point code type** modifier option can be used with the **-k** option to specify the format of the routing key that follows the **-k** option in the command.

Output

The output for each **msuroute** command consists of a list of all of the routing keys that exist on the IPGWx card that could be used to route the MSU. The list of routing keys is presented in the hierarchical search order in which the keys would be used. The list of routing keys indicates keys that have IP connections available for traffic, and indicates which routing key would currently be used to route the MSU (marked with ***).

For the routing key that is selected to route the MSU, the list of IP connections associated with the key is also displayed.

NOTE: Most of the following output examples show command entries for ANSI MSUs. Because, other than echoing the input command back to the screen, there is nothing in the output that contains specific fields from any configured keys. The output would not be different if the user entered ITUI MSUs instead of ANSI MSUs.

Either brief or full help reports can be displayed. A full help report is generated by adding the **-h full** option to the command line.

Example of a brief help report:

```
pass:loc=1105:cmd="msuroute -h"
```

Command Accepted - Processing

```
Usage: msuroute [ [-x rc] | [-k [rtkey] [-p pctype] [-d]] ]
        [-h [full]]
```

```
Options: -x routing key report using routing context
        -k routing key report using MTP3 parameters
           rtkey :: ([dpc][:si][:opc | :ssn][:cics][:cice])
        -p pctype :: (ANSI, ITUI, ITUN, ITUN24, ITUIS, ITUNS)
        -d display dynamic routing key
        -h display command help (brief or full)
```

;

Example of a full help report:

pass:loc=1305:cmd="msuroute -h full"

```
0          1          2          3          4          5          6          7
12345678901234567890123456789012345678901234567890123456789012345678
Usage: msuroute [ [-x rc] | [-k [rtkey] [-p pctype] [-d]] ]
        [-h [full]]
```

```
Options: -x routing key report using routing context
        -k routing key report using MTP3 parameters
           rtkey :: dpc:si:opc:cics:cice | dpc:si:ssn | dpc:si
        -p pctype :: (ANSI, ITUI, ITUN, ITUN24, ITUIS, ITUNS)
        -d display dynamic routing key
        -h display command help (brief or full)
```

-k option details:

Use the -p option along with -k to specify the SS7 network domain and point code format for the network. The SS7IPGW default pctype is ANSI. The IPGW default pctype is ITUI.

Network	PC Format	Notes
-----	-----	-----
ANSI	N-C-M	
ITUN	N	Non-Spare ITU National, no group code
ITUN	N-GC	Non-Spare ITU National with group code
ITUI	Z-A-I	Non-Spare ITU International
ITUN24	N-C-M	Non-Spare ITU National, 24-bits
ITUNS	N	Spare ITU National, no group code
ITUNS	N-GC	Spare ITU National with group code
ITUIS	Z-A-I	Spare ITU International

SS7 Traffic Partition	RTKEY Parameter Example
-----	-----
SCCP SSN 5 to DPC 1-1-1	-k 1-1-1:3:5
ISUP CIC 1 to 1-1-1 from 2-2-2	-k 1-1-1:5:2-2-2:1
TUP CIC 1 to 1-1-1 from 2-2-2	-k 1-1-1:4:2-2-2:1
QBICC CIC 1 to 1-1-1 from 2-2-2	-k 1-1-1:13:2-2-2:1
ISUP CIC 0-5 to 1-1-1 from 2-2-2	-k 1-1-1:5:2-2-2:0:5
TUP CIC 0-5 to 1-1-1 from 2-2-2	-k 1-1-1:4:2-2-2:0:5
QBICC CIC 0-5 to 1-1-1 from 2-2-2	-k 1-1-1:13:2-2-2:0:5

;

```
eagle10212 06-06-01 12:56:46 EST EAGLE 35.0.0
MSURROUTE command complete
```

Example of **msuroute** output for an ANSI CIC-based MSU, showing at least 1 routing key of every key type in the search hierarchy configured on the 1105 card. Only key types that are configured on the card will be listed in the display.

pass:loc=1105:cmd="msuroute -p ANSI -k 5-5-5:5:6-6-6:1100"

Command Accepted - Processing

```

rlghncxa03w 06-06-01 11:31:09 EST EAGLE5 35.0.0
pass:loc=1105:cmd="msuroute -x ANSI -k 5-5-5:5:6-6-6:1100"
Command entered at terminal #1.
;

rlghncxa03w 06-06-01 11:31:09 EST EAGLE5 35.0.0
PASS: Command sent to card
;

rlghncxa03w 06-06-01 11:31:09 EST EAGLE5 35.0.0
MSURROUTE command in progress
;

rlghncxa03w 04-04-29 11:31:09 EST EAGLE5 31.6.0

TABLE  KEYTYPE                #ConnCfgd  #ConnAvail  RTKEY USED
DYN     FULL                    1           0           no
DYN     PARTIAL: IGNORE-CIC     2           0           no
DYN     PARTIAL: IGNORE-CIC+OPC 1           0           no
DYN     PARTIAL: DPC-SI ONLY    3           3           yes
DYN     PARTIAL: DPC ONLY       2           2           no
DYN     PARTIAL: SI ONLY        4           0           no
DYN     DEFAULT                 4           4           no
STATIC  FULL                    12          4           no
STATIC  PARTIAL: IGNORE-CIC     3           0           no
STATIC  PARTIAL: IGNORE-CIC+OPC 2           0           no
STATIC  PARTIAL: DPC-SI ONLY    3           2           no
STATIC  PARTIAL: DPC ONLY       2           2           no
STATIC  PARTIAL: SI ONLY        1           0           no
STATIC  DEFAULT                 2           0           no

IP Connections Associated with the RTKEY USED
Name                               Avail?
Vox1                               yes
Mgc2                               yes
Mgc24                             yes

MSURROUTE command complete
;

```

Example of **msuroute** output for an ANSI SCCP MSU. Several of the key types in the search hierarchy are not configured on the 1105 card, and therefore are not part of the output (for example, dynamic or static full key and dynamic or static partial SI only). Only key types that are configured on the card will be listed in the display.

pass:loc=1105:cmd="msuroute -p ANSI -k 5-5-5:3:34"

Command Accepted - Processing

```

rlghncxa03w 06-06-01 11:31:09 EST  EAGLE5 35.0.0
pass:loc=1105:cmd="msuroute -p ANSI -k 5-5-5:3:34"
Command entered at terminal #1.
;

rlghncxa03w 06-06-01 11:31:09 EST  EAGLE5 35.0.0
PASS: Command sent to card
;

rlghncxa03w 06-06-01 11:31:09 EST  EAGLE5 35.0.0
MSURROUTE command in progress
;

rlghncxa03w 06-06-01 11:31:09 EST  EAGLE5 35.0.0
TABLE  KEYTYPE                #ConnCfgd  #ConnAvail  RTKEY USED
DYN     PARTIAL: DPC-SI ONLY    3           2           yes
DYN     PARTIAL: DPC ONLY      2           2           no
DYN     DEFAULT                4           4           no
STATIC  PARTIAL: DPC-SI ONLY    3           2           no
STATIC  PARTIAL: DPC ONLY      2           2           no
STATIC  DEFAULT                2           0           no

SocketsIP Connections Associated with the RTKEY USED
Name                                     Avail?
Scpsandiego                             no
scpdenver                               yes
scpkansascity                           yes

MSURROUTE command complete
;

```

Example of **msuroute** output for an ANSI MSU with SI=8:

pass:loc=1105:cmd="msuroute -p ANSI -k 5-5-5:8"

Command Accepted - Processing

```

rlghncxa03w 06-06-01 11:31:09 EST EAGLE5 35.0.0
pass:loc=1105:cmd="msuroute -p ANSI -k 5-5-5:8"
Command entered at terminal #1.
;

rlghncxa03w 06-06-01 11:31:09 EST EAGLE5 35.0.0
PASS: Command sent to card
;

rlghncxa03w 06-06-01 11:31:09 EST EAGLE5 35.0.0
MSURROUTE command in progress
;

rlghncxa03w 06-06-01 11:31:09 EST EAGLE5 35.0.0

TABLE  KEYTYPE                #ConnCfgd  #ConnAvail  RTKEY USED
DYN     FULL                    7           0           no
DYN     PARTIAL: DPC ONLY       2           2           yes
DYN     PARTIAL: SI ONLY       2           0           no
DYN     DEFAULT                4           4           no
STATIC  FULL                   11          0           no
STATIC  PARTIAL: DPC ONLY       2           2           no
STATIC  PARTIAL: SI ONLY       1           0           no
STATIC  DEFAULT                2           0           no

IP Connections Associated with the RTKEY USED
Name                               Avail?
SI8sock1                           yes
SI8sock2                           yes

MSURROUTE command complete
;

```

Examples of **msuroute** output for an ITUN and an ITUN24 MSU with SI=5. The output format is the same for all four commands.

The ITUDUPPC feature is OFF (default):

pass:loc=1105:cmd="msuroute -p itun -k 345:5:678:100:200"

The ITUDUPPC feature is ON (the 2-letter group code must be specified with the DPC and OPC)

pass:loc=1105:cmd="msuroute -p itun -k 345-gr:5:678-gr:100:200"

An ITUN24 MSU with SI=5:

pass:loc=1105:cmd="msuroute -p itun24 -k 10-200-10:5:10-200-1:1:100"

An ITU-I Spare MSU with SI=5:

msuroute -p ituis -k 3-11-1:5:4-11-1:5:5

Command Accepted - Processing

```

r1ghncxa03w 06-06-01 11:31:09 EST  EAGLE5 35.0.0
pass:loc=1105:cmd="msuroute -p ITUN -k 345:678:100:200"
Command entered at terminal #1.
;

r1ghncxa03w 06-06-01 11:31:09 EST  EAGLE5 35.0.0
PASS: Command sent to card
;

r1ghncxa03w 06-06-01 11:31:09 EST  EAGLE5 35.0.0
MSURROUTE command in progress
;

r1ghncxa03w 06-06-01 11:31:09 EST  EAGLE5 35.0.0
TABLE  KEYTYPE                #ConnCfgd  #ConnAvail  RTKEY USED
DYN     FULL                   1          0           no
DYN     PARTIAL: IGNORE CIC    2          0           no
DYN     PARTIAL: IGNORE CIC+OPC 1          0           no
DYN     PARTIAL: DPC-SI ONLY   3          3           yes
DYN     PARTIAL: DPC ONLY      2          2           no
DYN     PARTIAL: SI ONLY       4          0           no
DYN     DEFAULT                4          4           no
STATIC  FULL                   12         4           no
STATIC  PARTIAL: IGNORE-CIC    3          0           no
STATIC  PARTIAL: IGNORE-CIC+OPC 2          0           no
STATIC  PARTIAL: DPC-SI ONLY   3          2           no
STATIC  PARTIAL: DPC ONLY      2          2           no
STATIC  PARTIAL: SI ONLY       1          0           no
STATIC  DEFAULT                2          0           no

IP Connections Associated with the RTKEY USED
Name                               Avail?
Vox1                               yes
Mgc2                               yes
Mgc24                             yes

MSURROUTE command complete
;

```

msutrace

MSU Trace

This command provides filter and trace capability for MSUs passing through the IP⁷ GPLs. This command provides a view of MSU data as it exists in the PSTN network and its corresponding format as it exists in the IP network.

Keyword: **msutrace**

Command Class: Application Maintenance

Options

Options and option parameters that are underlined indicate that a value must be specified for that option or parameter. For example, the **msutrace** command option **-a** has the parameter **action**. The action that the command is to take can be specified, as in the command **msutrace -a acttrace**. Do not enter the underlined option or parameter; enter a value for the information represented by the underlined option or parameter.

-a action

Action option.

Range: acttrace, clrtrace, dacttrace, chgfilter**acttrace**—Activate (turn on) MSU tracing**clrtrace**—Clear all data from trace buffers**dacttrace**—Deactivate (turn off) MSU tracing**chgfilter**—Change filter used to indicate which MSUs are placed in the trace buffers**-g get option**

The get option.

Range: config, trace**config**—Displays the current **msutrace** settings: trace ON/OFF status, filter settings, and trace buffers used/available**trace**—Displays contents of trace buffers containing captured MSU data**-h help**

This option is used to display help information about this command.

Range: fullIf **full** is specified, the detailed version of the help information is displayed.If **full** is not specified (just **-h**), the simple version of the help information is displayed.**-m mode**

This option is used to indicate which MSUs are captured.

Range: normerr, all**normerr**—trace only MSUs with normalization errors**all**—trace all MSUs regardless of MSU contents**-p point code type**

This option is used to specify which type of point code (ANSI, ITU international, ITU national, 24-bit ITU national, ITU-I spare, or ITU-N spare) is contained in the filter key, when the key contains a DPC or OPC.

Range: ansi, itui, itun, itun24, ituis, ituns**Default: ansi****-k filter key**The **-k**, **-c**, and **-p** options are used to specify the filter key used to determine which MSUs will have data placed in the trace buffers.**Range:****-k filter key [-p] [-c pcType]**The syntax for the **filter key** portion of the **-k filter key** option is specified as a single string parameter with up to five colon-separated fields. The **filter key** can contain one or more of the following fields:*n-c-m*—represents an ANSI DPC in the format *network-cluster-member**no-co-mo*—represents an ANSI OPC in the format *network-cluster-member**z-a-i*—represents an ITU-I DPC in the format *zone-area-id**zo-ao-io zone-area-id*—represents an ITU-I OPC in the format*msa-ssa-sp*—represents a 24-bit ITU-N DPC in the format *main sigaling area-sub signaling area-signaling point**nnnnn*—represents an ITU-N DPC*nnnnn-gc*—represents an ITU-N DPC with Group Code when the Duplicate Point Code feature is ON*no*—represents an ITU-N OPC*no-gc*—represents an ITU-N OPC with Group Code when the Duplicate Point Code feature is ON*s*—represents an SI (Service Indicator)*cs*—represents a CIC Start value (start of the CIC range)*ce*—represents a CIC End value (end of the CIC range)

n—represents an SSN (Subsystem Number)

The following examples show valid formats:

- *n-c-m:s:n*—For DPC, SI, SSN type routing keys. The network, cluster and member (*n-c-m*) are in the range **0-255**. The service indicator (*s*) is **3** or **sccp**. The subsystem (*n*) is in the range **0-255**.
- *n-c-m:s*—For DPC, SI type routing keys. The network, cluster and member (*n-c-m*) are in the range **0-255**. The service indicator (*s*) is in the range **0-2**, **4**, or **6-15**. There is no subsystem number. As a default, counts for all routing keys within the option combination are displayed.
- *n-c-m:s:no-co-mo:cs:ce*—For DPC, SI, CIC type routing keys. The DPC network, cluster and member (*n-c-m*) are in the range **0-255**. The service indicator (*s*) is **5** or **isup**. There is no subsystem. The OPC network, cluster and member (*no-co-mo*) are in the range **0-255**. The starting circuit identification code (*cs*) and ending circuit identification code (*ce*) are in the range **0** to **16363**.
- *z-a-i*—For DPCN and DPCI routing keys, the zone, area and ID (*z-a-i*) are in the range of **000-007** (zone and ID) and **000-255** (area).
- *msa-ssa-sp*—For 24-bit DPCN routing keys, the main signaling area, sub signaling area and signaling point (*msa-ssa-sp*) are in the range of **000-255**.

-t

This option is used to denote the routing key type (IPGWx only).

-x rc

This option is used to generate a routing key report using routing context.

Example

```
pass:loc=1105:cmd="msutrace -h"
```

```
pass:loc=1105:cmd="msutrace -h full"
```

```
pass:loc=1105:cmd="msutrace -g config"
```

```
pass:loc=1315:cmd="msutrace -g trace"
```

```
pass:loc=1105:cmd="msutrace -a clrttrace"
```

```
pass:loc=1105:cmd="msutrace -a acttrace"
```

```
pass:loc=1105:cmd="msutrace -a chgfilter -p ansi -k 3-3-3:5:4-4-4:10:1000"
```

```
pass:loc=1105:cmd="msutrace -a chgfilter -p itui -t partial -k 1-3-3:5:2-4-4"
```

```
pass:loc=1105:cmd="msutrace -a chgfilter -p itun -t partial -k 1536:5"
```

```
pass:loc=1105:cmd="msutrace -a chgfilter -m normerr"
```

```
pass:loc=1105:cmd="msutrace -a chgfilter -m all"
```

Dependencies

If no options are specified, the simple version of the help information is displayed.

The point code type defaults to ANSI when the **-p** option is not specified.

The **-p** option is allowed only on key types that contain a DPC or OPC.

Notes

The **msutrace** command is executed through the **pass** command.

The **msutrace** command captures the data portion of the PSTN packet, starting at the SIO bytes.

The **msutrace** command captures the entire TALI, M3UA, or SUA packet. This includes the TALI, M3UA, or SUA header and additional data stored inside system buffer chain elements. The **msutrace** command currently does not support the trace and capture of TALI MTP Primitives or M3UA / SUA SSNM (Class 2) messages.

The **msutrace** command captures data in trace buffers. If the set of trace buffers becomes full with captured MSU data after MSU tracing is activated, no more data capturing will take place. The **-a clrtrace** option must be specified to reset (clear) the content of the trace buffers. After the trace buffers are empty again, **msutrace** will restart capturing qualified MSUs.

If MSU tracing is activated with the **-a acttrace** option before a properly formatted filter key is entered, **msutrace** will not capture any data due to lack of a proper filter. When the **-a chgfilter** option is specified to enter a properly formatted filter; **msutrace** will start capturing qualified MSUs.

Output

NOTE: The msutrace pass command exists on the IPLIM/IPLIMI cards as a debug-only pass command. All command syntax and output are identical to the SS7IPGW and IPGWI commands described in this section.

Both brief and full versions of IPGW reports can be requested. A full report is requested by including the **-f** in the command line.

Example of a brief help report:

pass:loc=1305:cmd="msutrace -h"

```

0          1          2          3          4          5          6          7
12345678901234567890123456789012345678901234567890123456789012345678
Usage: msutrace [-a action_cmd] [-g get_cmd]
               [ [-x rc] | [-k [rtkey] [-p pctype] [-t keytype]] ]
               [-m mode] [-h [full]]

Options:
  -a  action_cmd: an Action Command
  -g  get_cmd: a Get Command
  -x  routing key report using routing context
  -k  routing key report using MTP3 parameters
      rtkey :: ([dpc][:si][:opc | :ssn][:cics][:cice])
  -p  pctype :: (ANSI, ITUI, ITUN, ITUN24, ITUIS, ITUNS)
  -t  routing key type
      keytype :: (<full>, partial, default)
  -m  mode: mode for qualifying MSUs captured=[normerr | all]
  -h  displays this message (brief or full)

get_cmd:      [config | trace]
  config      config
  trace       trace

action_cmd:    [acttrace | chgfilter | clrtrace | dacttrace]
  acttrace     acttrace
  chgfilter     chgfilter [ <fltrkey> ] | [-m mode] (at least 1 required)
                  (valid fltrkey should be present either before
                  specifying mode or in the same command)

  clrtrace     clrtrace
  dacttrace     dacttrace

<fltrkey>:    [ [-x rc] | [-k [rtkey] [-p pctype] [-t keytype]] ]
              (see 'msutrace -h full' for complete description)

MSUTRACE command complete

```

;

Example of a full help report:

pass:loc=1305:cmd="msutrace -h full"

```

0          1          2          3          4          5          6          7
12345678901234567890123456789012345678901234567890123456789012345678
Usage: msutrace [-a action_cmd] [-g get_cmd]
               [-x rc] | [-k [rtkey] [-p pctype] [-t keytype]] ]
               [-m mode] [-h [full]]

```

Options:

```

-a  action_cmd: an Action Command
-g  get_cmd: a Get Command
-x  routing key report using routing context
-k  routing key report using MTP3 parameters
    rtkey :: ([dpc][:si][:opc | :ssn][:cics][:cice])
-p  pctype :: (ANSI, ITUI, ITUN, ITUN24, ITUIS, ITUNS)
-t  routing key type
    keytype :: (<full>, partial, default)
-m  mode: mode for qualifying MSUs captured=[normerr | all]
-h  displays this message (brief or full)

```

```

get_cmd:      [config | trace]
config        Display the current MSUTRACE settings:
               trace On/Off status, filter settings, and
               trace buffers used/available.
               ex: msutrace -g config

trace         Display content of trace buffers containing captured
               MSU data
               ex: msutrace -g trace

action_cmd:   [acttrace | chgfilter | clrtrace | dacttrace]
acttrace      Activate (turn-on) MSU-tracing.
               ex: msutrace -a acttrace

chgfilter     chgfilter [<filtkey>] | [-m mode] at least 1 required)
               (valid fltrkey should be present either before
               specifying mode or in the same command)
               Change filter used to qualify which MSUs are placed in
               trace buffers:
               Flow of command should be
               Either entering filter key before specifying mode:
               ex: To trace MSUs based on MSU content:
                   msutrace -a chgfilter <filtkey>
               ex: To only trace MSUs with Normalization errors.
                   msutrace -a chgfilter -m normerr
               ex: To trace all MSUs regardless of error conditions:
                   msutrace -a chgfilter -m all
               Or entering filter key along with mode:
               ex: To trace MSUs based on MSU content:
                   with Normalization errors:
                   msutrace -a chgfilter <fltrkey> -m normerr
               ex: To trace MSUs based on MSU content
                   regardless of error conditions:
                   msutrace -a chgfilter <filtkey> -m all

clrtrace      Clear all data from trace buffers.
               ex: msutrace -a clrtrace

dacttrace     Deactivate (turn-off) MSU-tracing.
               ex: msutrace -a dacttrace

```

-k option details:

Use the -p option along with -k to specify the SS7 network domain and point code format for the network. The SS7IPGW

default pctype is ANSI. The IPGWI and IPLIMI default pctype is ITUI.

Network	PC Format	Notes
-----	-----	-----
ANSI	N-C-M	
ITUN	N	Non-Spare ITU National, no group code
ITUN	N-GC	Non-Spare ITU National with group code
ITUI	Z-A-I	Non-Spare ITU International
ITUN24	N-C-M	Non-Spare ITU National, 24-bits
ITUNS	N	Spare ITU National, no group code
ITUNS	N-GC	Spare ITU National with group code
ITUIS	Z-A-I	Spare ITU International

Use the -t option along with -k to specify certain MTP3 and user part MSU fields as wildcards for the routing key.

SS7 Traffic Partition	RTKEY	Parameter	Example
-----	-----	-----	-----
Any User Part to DPC 1-1-1	-k	1-1-1	-t partial
SCCP to DPC 1-1-1	-k	1-1-1:3	-t partial
ISUP to DPC 1-1-1	-k	1-1-1:5	-t partial
TUP to DPC 1-1-1	-k	1-1-1:4	-t partial
QBICC to DPC 1-1-1	-k	1-1-1:13	-t partial
SI [0-2,6-12,14,15] to DPC 1-1-1	-k	1-1-1:SI	
SCCP SSN 5 to DPC 1-1-1	-k	1-1-1:3:5	
ISUP to DPC 1-1-1 from OPC 2-2-2	-k	1-1-1:5:2-2-2	-t partial
TUP to DPC 1-1-1 from OPC 2-2-2	-k	1-1-1:4:2-2-2	-t partial
QBICC to DPC 1-1-1 from OPC 2-2-2	-k	1-1-1:13:2-2-2	-t partial
ISUP CIC 1 to 1-1-1 from 2-2-2	-k	1-1-1:5:2-2-2:1	
TUP CIC 1 to 1-1-1 from 2-2-2	-k	1-1-1:4:2-2-2:1	
QBICC CIC 1 to 1-1-1 from 2-2-2	-k	1-1-1:13:2-2-2:1	
ISUP CIC 0-5 to 1-1-1 from 2-2-2	-k	1-1-1:5:2-2-2:0:5	
TUP CIC 0-5 to 1-1-1 from 2-2-2	-k	1-1-1:4:2-2-2:0:5	
QBICC CIC 0-5 to 1-1-1 from 2-2-2	-k	1-1-1:13:2-2-2:0:5	
Default Routing Key	-k		-t default

eagle10212 06-01-16 11:01:02 EST EAGLE 35.0.0

MSUTRACE command complete

Example of a full help report for the IPSPG card:

pass:loc=1304:cmd="msutrace -h full"

```

0          1          2          3          4          5          6          7
12345678901234567890123456789012345678901234567890123456789012345678

```

```

Usage: msutrace [-a action_cmd] [-g get_cmd]
               [ [-x rc] | [-k [rtkey] [-p pctype] [-t keytype]] ]
               [-m mode] [-h [full]]

```

Options:

```

-a      action_cmd: an Action Command
-g      get_cmd: a Get Command
-x      routing key report using routing context
-k      routing key report using MTP3 parameters
        rtkey :: ([dpc][:si][:opc | :ssn][:cics][:cice])
-p      pctype :: (ANSI, ITUI, ITUN, ITUN24, ITUIS, ITUNS)
-t      routing key type
        keytype :: (<full>, partial, default)
-m      mode: mode for qualifying MSUs captured = [normerr | all]
-h      displays this message (brief or full)

```

```

get_cmd:    [config | trace]
config      Display the current MSUTRACE settings:
            trace On/Off status, filter settings, and
            trace buffers used/available.
            ex: msutrace -g config

trace       Display content of trace buffers containing captured
            MSU data
            ex: msutrace -g trace

action_cmd: [acttrace | chgfilter | clrtrace | dacttrace ]
acttrace    Activate (turn-on) MSU-tracing.
            ex: msutrace -a acttrace

chgfilter   chgfilter [<filtkey>] | [-m mode] at least 1 required)
            (valid fltrkey should be present either before
            specifying mode or in the same command)
            Change filter used to qualify which MSUs are placed in
            trace buffers:
            Flow of command should be
            Either entering filter key before specifying mode:
            ex: To trace MSUs based on MSU content:
                msutrace -a chgfilter <fltrkey>
            ex: To only trace MSUs with Normalization errors.
                msutrace -a chgfilter -m normerr
            ex: To trace all MSUs regardless of error conditions:
                msutrace -a chgfilter -m all
            Or entering filter key along with mode:
            ex: To trace MSUs based on MSU content:
                with Normalization errors:
                msutrace -a chgfilter <fltrkey> -m normerr
            ex: To trace MSUs based on MSU content
                regardless of error conditions:
                msutrace -a chgfilter <fltrkey> -m all

clrtrace    Clear all data from trace buffers.
            ex: msutrace -a clrtrace

dacttrace   Deactivate (turn-off) MSU-tracing.
            ex: msutrace -a dacttrace

```

-k option details:

Use the -p option along with -k to specify the SS7 network domain and point code format for the network. The SS7IPGW and IPLIM default pctype is ANSI. The IPGWI and IPLIMI

default pctype is ITUI.

For IPSG both ANSI and ITU network point code formats are eligible for trace when the default filter or an SI only filter is specified. The IPSG default pctype is ANSI when the filter contains OPC or DPC and the -p option is not specified.

Network	PC Format	Notes
-----	-----	-----
ANSI	N-C-M	
ITUN	N	Non-Spare ITU National, no group code
ITUN	N-GC	Non-Spare ITU National with group code
ITUI	Z-A-I	Non-Spare ITU International
ITUN24	N-C-M	Non-Spare ITU National, 24-bits
ITUNS	N	Spare ITU National, no group code
ITUNS	N-GC	Spare ITU National with group code
ITUIS	Z-A-I	Spare ITU International

Use the -t option along with -k to specify certain MTP3 and user part MSU fields as wildcards for the routing key or LS.

SS7 Traffic Partition	RTKEY/MTP3 Parameter	Example
-----	-----	-----
Any User Part to DPC 1-1-1	-k 1-1-1	-t partial
SCCP to DPC 1-1-1	-k 1-1-1:3	-t partial
ISUP to DPC 1-1-1	-k 1-1-1:5	-t partial
TUP to DPC 1-1-1	-k 1-1-1:4	-t partial
QBICC to DPC 1-1-1	-k 1-1-1:13	-t partial
SI [0-2,6-12,14,15] to DPC 1-1-1	-k 1-1-1:SI	
SCCP SSN 5 to DPC 1-1-1	-k 1-1-1:3:5	
ISUP to DPC 1-1-1 from OPC 2-2-2	-k 1-1-1:5:2-2-2	-t partial
TUP to DPC 1-1-1 from OPC 2-2-2	-k 1-1-1:4:2-2-2	-t partial
QBICC to DPC 1-1-1 from OPC 2-2-2	-k 1-1-1:13:2-2-2	-t partial
ISUP CIC 1 to 1-1-1 from 2-2-2	-k 1-1-1:5:2-2-2:1	
TUP CIC 1 to 1-1-1 from 2-2-2	-k 1-1-1:4:2-2-2:1	
QBICC CIC 1 to 1-1-1 from 2-2-2	-k 1-1-1:13:2-2-2:1	
ISUP CIC 0-5 to 1-1-1 from 2-2-2	-k 1-1-1:5:2-2-2:0:5	
TUP CIC 0-5 to 1-1-1 from 2-2-2	-k 1-1-1:4:2-2-2:0:5	
QBICC CIC 0-5 to 1-1-1 from 2-2-2	-k 1-1-1:13:2-2-2:0:5	
Default Routing Key	-k	-t default
Any User Part to DPC=LS APC	-x LS RCONTEXT	(IPSG Only)

;

MSUTRACE command complete

;

Get the current settings of the **msutrace** command options: trace ON/OFF status, filter settings, and trace buffers that are used and available.

pass:loc=1105:cmd="msutrace -g config"

Command Accepted - Processing

```
eagle20003 99-11-27 10:16:57 EST EAGLE5 31.6.0
pass:loc=1105:cmd="msutrace -g config"
Command entered at terminal #1.
;
eagle20003 99-11-27 10:16:57 EST EAGLE5 31.6.0
PASS: Command sent to card
;
eagle20003 99-11-27 10:16:57 EST EAGLE5 31.6.0
MSUTRACE command in progress
;
eagle20003 99-11-27 10:16:57 EST EAGLE5 31.6.0
MSUTRACE configurations

Trace = On

Trace buffers: 2 of 3 contain captured MSU data

MSUTRACE: filter settings
DPCA      SI SSN OPCA      CICS      CICE      MODE
055-055-055 13 *** 016-006-006 1234567890 1234567890 normerr
;
eagle20003 99-11-27 10:16:57 EST EAGLE5 31.6.0
MSUTRACE command complete
;
```

Get the current settings of the **msutrace** command options: trace ON/OFF status, filter settings, and trace buffers that are used and available, when the filter key specifies an ITU-I spare point code.

pass:loc=1105:cmd="msutrace -g config"

Command Accepted - Processing

```
eagle20003 05-01-27 10:16:03 EST EAGLE5 31.12.0
pass:loc=1105:cmd="msutrace -g config"
Command entered at terminal #1.
;
eagle20003 05-01-27 10:16:03 EST EAGLE5 31.12.0
PASS: Command sent to card
;
eagle20003 05-01-27 10:16:03 EST EAGLE5 31.12.0
MSUTRACE command in progress
;
eagle20003 05-01-27 10:16:03 EST EAGLE5 31.12.0
MSUTRACE configurations

Trace = On

Trace buffers: 3 of 3 USED

MSUTRACE: filter settings
DPCI      SI SSN OPCI      CICS      CICE      MODE
s-2-011-1 2 *** ****      ****      ****      all
;
eagle20003 05-01-27 10:16:03 EST EAGLE5 31.12.0
MSUTRACE command complete
;
```

Get the current settings of the **msutrace** command when an IPSG card is used.

pass:loc=1304:cmd="msutrace -g config"

```
rlghncxa03w 08-01-29 11:31:09 EST EAGLE 38.0.0
```

```
MSUTRACE: Configurations
```

```
MSU Tracing is off
```

```
Trace buffers: 0 of 3 USED
```

```
MSUTRACE: filter settings
```

DPCA	SI	SSN	OPCA	CICS	CICE	MODE
004-004-004	**	***	****	****	****	all

;

Activate trace with a DPC-only filter key specified via the **-x <rcontext>** option:.

pass:loc=1304:cmd="msutrace -a acttrace"

```
rlghncxa03w 08-01-29 11:31:09 EST EAGLE 38.0.0
```

```
MSUTRACE command complete
```

;

Retrieve the captured trace buffer for an IPSP card:

pass:loc=1304:cmd="msutrace -g trace"

rlghncxa03w 08-01-29 11:31:09 EST EAGLE 38.0.0

 BUFFER: 0

Filter used:

DPCA	SI	SSN	OPCA	CICS	CICE	MODE
004-004-004	**	***	****	****	****	all

Timestamp: 08-01-21 16:06:17.420

Direction: Tx

Error Code: 0

PSTN DATA

```

-----
85 04 04 04 05 05 05 00 00 00 00 6e 01 00 f9 e3 .....n....
33 c7 00 00 1d 00 00 00 00 10 00 12 00 14 00 16 3.....
00 18 00 1a 00 1c 00 1e 00 .....
  
```

IP DATA

```

-----
01 00 01 01 00 00 00 44 00 06 00 08 00 00 00 04 .....D.....
02 10 00 31 00 05 05 05 00 04 04 04 05 02 00 00 ...1.....
00 00 00 6e 01 00 f9 e3 33 c7 00 00 1d 00 00 00 ...n...3.....
00 10 00 12 00 14 00 16 00 18 00 1a 00 1c 00 1e .....
00 00 00 00 ....
  
```

MSUTRACE command complete

;

Retrieve contents of the trace buffers. In this TALI example, there are 2 stored trace buffers:

pass:loc=1315:cmd="msutrace -g trace"

Command Accepted - Processing

```
eagle10202 01-01-19 10:20:56 GMT EAGLE5 31.6.0
pass:loc=1315:cmd="msutrace -g trace"
Command entered at terminal #4.
```

;

```
eagle10202 01-01-19 10:20:56 GMT EAGLE5 31.6.0
PASS: Command sent to card
```

;

```
eagle10202 01-01-19 10:20:56 GMT EAGLE5 31.6.0

MSUTRACE command in progress
```

;

```
eagle10202 01-01-19 10:20:56 GMT EAGLE5 31.6.0
```

```
-----
BUFFER:  0
-----
```

Filter used:

DPCN	SI	SSN	OPCN	CICS	CICE	MODE
02137	**	***	****	****	****	any

```
Timestamp: 01-01-19 10:19:14.520
Direction: Rx
Error Code: 19
```

```
PSTN DATA
-----
```

```
IP DATA
-----
```

54 41 4c 49 78 73 72 76 ac 00 78 6e 72 6d 00 00	TALIXsrv..xnm..
02 61 61 04 00 01 00 00 00 00 00 00 00 00 02	.aa.....
85 00 85 59 48 16 a4 00 00 41 00 00 00 00 02	...YH...A.....
0e 0c 00 00 00 00 00 00 00 00 00 00 00 0a 0a	
00 00 00 00 00 00 00 00 00 00 08 01 00 1a 04 00	
00 00 00 0b 0a 00 00 00 00 00 00 00 00 00 13	
02 00 01 28 0a 00 00 00 00 00 00 00 00 00 2a	...(.....)*
01 00 20 03 7e 01 00 03 01 00 1d 02 00 80 c0 0b	~.....
00 00 00 00 00 00 00 00 00 00 00 c1 09 00 00 00	
00 00 00 00 00 00 39 02 00 00 3f 0a 00 00 00 00	9...?.....
00 00 00 00 00 00 00 03 0c 00 04 00 01 00 fc 00	
04 00 0e 02 00 00	

```
-----
BUFFER:  1
-----
```

Filter used:

DPCN	SI	SSN	OPCN	CICS	CICE	MODE
02137	05	***	04185	0	100	any

```
Timestamp: 01-01-19 10:19:32.470
Direction: Rx
Error Code:  0
```

```
PSTN DATA
-----
```

```

85 59 48 16 64 00 00 01 00 00 00 00 02 0e 0c      .YH.d.....
00 00 00 00 00 00 00 00 00 00 00 00 0a 0a 00 00      .....
00 00 00 00 00 00 00 00 08 01 00 1a 04 00 00 00      .....
00 0b 0a 00 00 00 00 00 00 00 00 00 00 13 02 00      .....
01 28 0a 00 00 00 00 00 00 00 00 00 2a 01 00      .(.....*..
20 03 7e 01 00 03 01 00 1d 02 00 80 c0 0b 00 00      ..~.....
00 00 00 00 00 00 00 00 00 c1 09 00 00 00 00 00      .....
00 00 00 00 39 02 00 00 3f 0a 00 00 00 00 00 00      ....9...?....
00 00 00 00 fc 02 00 00 00      .....

```

IP DATA

```

54 41 4c 49 78 73 72 76 ac 00 78 6e 72 6d 00 00      TALIXsrv..xnm..
02 61 61 04 00 01 00 00 00 00 00 00 00 00 00 02      .aa.....
85 00 85 59 48 16 64 00 00 01 00 00 00 00 00 02      ...YH.d.....
0e 0c 00 00 00 00 00 00 00 00 00 00 00 0a 0a      .....
00 00 00 00 00 00 00 00 00 00 08 01 00 1a 04 00      .....
00 00 00 0b 0a 00 00 00 00 00 00 00 00 00 00 13      .....
02 00 01 28 0a 00 00 00 00 00 00 00 00 00 00 2a      ...(. ....*..
01 00 20 03 7e 01 00 03 01 00 1d 02 00 80 c0 0b      ....~.....
00 00 00 00 00 00 00 00 00 00 c1 09 00 00 00 00      .....
00 00 00 00 00 00 39 02 00 00 3f 0a 00 00 00 00      ....9...?....
00 00 00 00 00 00 03 0c 00 04 00 01 00 fc 00      .....
04 00 0e 02 00 00      .....

```

BUFFER: 2

Filter used:

DPCN	SI	SSN	OPCN	CICS	CICE	MODE
02137	05	***	04185	0	100	normerr

Timestamp: 01-01-19 10:20:53.305

Direction: Rx

Error Code: 19

PSTN DATA

IP DATA

```

54 41 4c 49 78 73 72 76 ac 00 78 6e 72 6d 00 00      TALIXsrv..xnm..
02 61 61 04 00 01 00 00 00 00 00 00 00 00 00 02      .aa.....
85 00 85 59 48 16 a4 00 00 41 00 00 00 00 00 02      ...YH....A.....
0e 0c 00 00 00 00 00 00 00 00 00 00 00 0a 0a      .....
00 00 00 00 00 00 00 00 00 00 08 01 00 1a 04 00      .....
00 00 00 0b 0a 00 00 00 00 00 00 00 00 00 00 13      .....
02 00 01 28 0a 00 00 00 00 00 00 00 00 00 00 2a      ...(. ....*..
01 00 20 03 7e 01 00 03 01 00 1d 02 00 80 c0 0b      ....~.....
00 00 00 00 00 00 00 00 00 00 c1 09 00 00 00 00      .....
00 00 00 00 00 00 39 02 00 00 3f 0a 00 00 00 00      ....9...?....
00 00 00 00 00 00 03 0c 00 04 00 01 00 fc 00      .....
04 00 0e 02 00 00      .....

```

MSUTRACE command complete

;

Retrieve contents of the trace buffers. The following example contains 1 stored trace buffer for a transmitted M3UA PDU.

pass:loc=1303:cmd="msutrace -g trace"

Command Accepted - Processing

```

eagle10202 01-01-19 10:20:56 GMT EAGLE5 31.6.0
pass:loc=1303:cmd="msutrace -g trace"
Command entered at terminal #4.
;

eagle10202 01-01-19 10:20:56 GMT EAGLE5 31.6.0
PASS: Command sent to card
;

eagle10202 01-01-19 10:20:56 GMT EAGLE5 31.6.0

MSUTRACE command in progress
;

eagle10202 01-01-19 10:20:56 GMT EAGLE5 31.6.0

-----
BUFFER:  0
-----
Filter used:

DPCA          SI SSN OPCA          CICS          CICE          MODE
001-001-001 5  *** 001-001-002 0          100          all

Timestamp: 02-06-07 08:40:29.435
Direction: Tx
Error Code: 0

PSTN DATA
-----
85 01 01 01 02 01 01 b2 00 00 01 00 00 00 00 03 .....
05 00 02 80 80 0d 00 00 21 43 65 87 09 21 43 65 .....!Ce..!Ce
87 09 01 .....

IP DATA
-----
01 00 01 01 00 00 00 3c 02 00 00 08 00 00 00 01 .....<.....
02 10 00 2b 00 01 01 02 00 01 01 01 05 02 00 b2 ...+.....
00 00 01 00 00 00 00 03 05 00 02 80 80 0d 00 00 .....
21 43 65 87 09 21 43 65 87 09 01 00 !Ce..!Ce....

MSUTRACE command complete
;

```

Retrieve contents of the trace buffers with ITU-I spare point codes. The following example contains 3 stored trace buffers.

pass:loc=1317:cmd="msutrace -g trace"

Command Accepted - Processing

```

eagle20003 05-01-27 10:16:03 EST  EAGLE5 31.12.0
pass:loc=1317:cmd="msutrace -g trace"
Command entered at terminal #4.
;

eagle20003 05-01-27 10:16:03 EST  EAGLE5 31.12.0
PASS: Command sent to card
;

eagle20003 05-01-27 10:16:03 EST  EAGLE5 31.12.0

MSUTRACE command in progress
;

eagle20003 05-01-27 10:16:03 EST  EAGLE5 31.12.0

-----
BUFFER:  0
-----
Filter used:

      DPCI      SI SSN      OPCI      CICS      CICE      MODE
s-2-011-1      2   ***      ****      ****      ****      all

Timestamp: 05-01-26 10:33:14.330
Direction: Tx
Error Code: 0

PSTN DATA
-----
02 59 50 16 a2 80 03 83 ce 46 0a 00 00 00      .YP.....F....

IP DATA
-----
54 41 4c 49 6d 74 70 33 0e 00 02 59 50 16 a2 80      TALImtp3...YP...
03 83 ce 46 0a 00 00 00      ...F....

-----
BUFFER:  1
-----
Filter used:

      DPCI      SI SSN      OPCI      CICS      CICE      MODE
s-2-011-1      2   ***      ****      ****      ****      all

Timestamp: 05-01-26 10:33:14.335
Direction: Tx
Error Code: 0

PSTN DATA
-----
02 59 50 16 a2 80 84 04 c8 46 0a 00 00 00      .YP.....F....

IP DATA
-----
54 41 4c 49 6d 74 70 33 0e 00 02 59 50 16 a2 80      TALImtp3...YP...
84 04 c8 46 0a 00 00 00      ...F....

-----
BUFFER:  2

```

Filter used:

DPCI	SI	SSN	OPCI	CICS	CICE	MODE
s-2-011-1	2	***	****	****	****	all

Timestamp: 05-01-26 10:33:14.340

Direction: Tx

Error Code: 0

PSTN DATA

02 59 50 16 f2 80 01 81 c1 46 0f 00 00 00 .YP.....F....

IP DATA

54 41 4c 49 6d 74 70 33 0e 00 02 59 50 16 f2 80 TALImp3...YP...
01 81 c1 46 0f 00 00 00 ...F....

MSUTRACE command complete

;

Clear the contents of the trace buffers:

pass:loc=1105:cmd="msutrace -a clrtrace"

Command Accepted - Processing

eagle20003 99-11-27 10:16:57 EST EAGLE5 31.6.0
pass:loc=1105:cmd="msutrace -a clrtrace"
Command entered at terminal #1.

;

eagle20003 99-11-27 10:16:57 EST EAGLE5 31.6.0
PASS: Command sent to card

;

eagle20003 99-11-27 10:16:57 EST EAGLE5 31.6.0
MSUTRACE command in progress

;

eagle20003 99-11-27 10:16:57 EST EAGLE5 31.6.0
MSUTRACE command completed

;

Activate MSU tracing:

pass:loc=1105:cmd="msutrace -a acttrace"

Command Accepted - Processing

eagle20003 99-11-27 10:16:57 EST EAGLE5 31.6.0
pass:loc=1105:cmd="msutrace -a acttrace"
Command entered at terminal #1.

;

eagle20003 99-11-27 10:16:57 EST EAGLE5 31.6.0
PASS: Command sent to card

;

eagle20003 99-11-27 10:16:57 EST EAGLE5 31.6.0
MSUTRACE command in progress

;

eagle20003 99-11-27 10:16:57 EST EAGLE5 31.6.0
MSUTRACE command completed

;

Deactivate MSU tracing:

pass:loc=1105:cmd="msutrace -a dacttrace"

Command Accepted - Processing

```

eagle20003 99-11-27 10:16:57 EST  EAGLE5 31.6.0
pass:loc=1105:cmd="msutrace -a dacttrace"
Command entered at terminal #1.
;
eagle20003 99-11-27 10:16:57 EST  EAGLE5 31.6.0
PASS: Command sent to card
;
eagle20003 99-11-27 10:16:57 EST  EAGLE5 31.6.0
MSUTRACE command in progress
; 4.0.0
eagle20003 99-11-27 10:16:57 EST  EAGLE5 31.6.0
MSUTRACE command completed
;

```

Examples for Entering a Filter Key

The output shown at the end of the following command examples is the same for each example, except for the echo of the entered command.

Command with the **-a chgfilter** option to insert a fully specified ANSI PC CIC filter key.

This filter key qualifies for capture MSUs with the following properties:

- DPC = 3-3-3 (ANSI)
- SI = 5
- OPC = 4-4-4 (ANSI)
- CIC = [10..1000]

pass:loc=1105:cmd="msutrace -a chgfilter -p ansi -k 3-3-3:5:4-4-4:10:1000"

Command with the **-a chgfilter** option to insert a fully specified ANSI SCCP filter.

This filter key qualifies for capture MSUs with the following properties:

- DPC = 3-3-3 (ANSI)
- SI = 3
- SSN = 230

pass:loc=1105:cmd="msutrace -a chgfilter -k 3-3-3:3:230"

Command with the **-a chgfilter** option to insert a fully specified ANSI DPC SI filter key.

This filter key qualifies for capture MSUs with the following properties:

- DPC = 3-3-3 (ANSI)
- SI = 6

pass:loc=1105:cmd="msutrace -a chgfilter -k 3-3-3:6"

Command with the **-a chgfilter** option to insert a fully specified ITUN24 PC CIC filter key.

This filter key qualifies for capture MSUs with the following properties:

- DPC = 13-103-3 (ITUN24)

- SI = 5
- OPC = 14-104-4 (ITUN24)
- CIC = [10..1000]

pass:loc=1105:cmd="msutrace -a chgfilter -p itun24 -k 13-103-3:5:14-104-4:10:1000"

Command with the **-a chgfilter** option to insert a partial ITUI DPC SI OPC filter key.

This filter key qualifies for capture MSUs with the following properties:

- DPC = 1-3-3 (ITUI)
- SI = 5
- OPC = 2-4-4 (ITUI)

pass:loc=1105:cmd="msutrace -a chgfilter -p itui -k 1-3-3:5:2-4-4"

Command with the **-a chgfilter** option to insert a partial DPC SI ITUN PC filter key, with the Duplicate Point Code feature turned off:

This filter key qualifies for capture MSUs with the following properties:

- DPC = 1536 (ITUN)
- SI = 5

pass:loc=1105:cmd="msutrace -a chgfilter -p itun -k 1536:5"

Command with the **-a chgfilter** option to insert a partial DPC SI ITUN PC filter key, with the Duplicate Point Code feature turned on:

This filter key qualifies for capture MSUs with the following properties:

- DPC = 1536-bb (ITUN)
- SI = 5

pass:loc=1105:cmd="msutrace -a chgfilter -p itun -k 1536-bb:5"

Command with the **-a chgfilter** option to insert a partial ANSI DPC filter key.

This filter key qualifies for capture MSUs with the following properties:

- DPC = 3-3-3 (ANSI)

pass:loc=1105:cmd="msutrace -a chgfilter -k 3-3-3"

Command with the **-a chgfilter** option to insert a partial SI filter key. Because no DPC or OPC field is specified, point code type does not have to be indicated.

This filter key qualifies for capture MSUs with the following properties:

- SI = 5

This filter key qualifies for capture MSUs with the following properties:

- DPC = 13-113-3 (ITUN24)

pass:loc=1105:cmd="msutrace -a chgfilter -p itun24 -k 13-113-3"

Command Accepted - Processing

```
eagle20003 06-06-01 10:16:57 EST EAGLE5 35.0.0
pass:loc=1105:cmd="msutrace -a chgfilter -p ansi -k 3-3-3:5:4-4-4:10:1000"
Command entered at terminal #1.
;
eagle20003 99-11-27 10:16:57 EST EAGLE5 31.6.0
PASS: Command sent to card
;
eagle20003 99-11-27 10:16:57 EST EAGLE5 31.6.0
MSUTRACE command in progress
;
eagle20003 99-11-27 10:16:57 EST EAGLE5 31.6.0
MSUTRACE command completed
;
```

The following commands include the **-m mode** option to change the trace capture mode.

Mode to have a 'capture-on-normalization error' property such that only MSUs with normalization processing errors are traced:

pass:loc=1105:cmd="msutrace -a chgfilter -m normerr"

Set a default filter key and the filter's mode at the same time:

pass:loc=1105:cmd="msutrace -a chgfilter -k -t default -m all"

Command Accepted - Processing

```
eagle20003 99-11-27 10:16:57 EST EAGLE5 31.6.0
pass:loc=1105:cmd="msutrace -a chgfilter -k -t default -m all"
Command entered at terminal #1.
;
eagle20003 99-11-27 10:16:57 EST EAGLE5 31.6.0
PASS: Command sent to card
;
eagle20003 99-11-27 10:16:57 EST EAGLE5 31.6.0
MSUTRACE command in progress
;
eagle20003 99-11-27 10:16:57 EST EAGLE5 31.6.0
MSUTRACE command completed
;
```

The following commands insert a partial DPC-SI filter key with ITU-I spare point code and show the **msutrace getfilter** command output with the filter key after the **chgfilter** command is processed to completion.

This filter key will qualify MSUs with at least the following properties:

- DPCI = (ITU-I Spare) 2-11-1
- SI=5

pass:loc=1317:cmd="msutrace -a chgfilter -p ituis -k 2-11-1:5"

Command Accepted - Processing

```
eagle20003 06-06-01 10:16:03 EST EAGLE5 35.5.0
pass:loc=1317:cmd="msutrace -a chgfilter -p ituis -k 2-11-1:5"
Command entered at terminal #1.
;
eagle20003 06-06-01 10:16:03 EST EAGLE5 35.5.0
PASS: Command sent to card
;
eagle20003 06-06-01 10:16:03 EST EAGLE5 35.5.0
MSUTRACE command in progress
;
eagle20003 06-06-01 10:16:03 EST EAGLE5 35.5.0
MSUTRACE command completed
;
```

pass:loc=1317:cmd="msutrace -g config"

Command Accepted - Processing

```
eagle20003 05-01-27 10:16:03 EST EAGLE5 31.12.0
pass:loc=1317:cmd="msutrace -g config"
;
eagle20003 05-01-27 10:16:03 EST EAGLE5 31.12.0
PASS: Command sent to card
;
eagle20003 05-01-27 10:16:03 EST EAGLE5 31.12.0
MSUTRACE command in progress
;
eagle20003 05-01-27 10:16:03 EST EAGLE5 31.12.0
MSUTRACE configurations

Trace = On

Trace buffers: 3 of 3 USED

MSUTRACE: filter settings
      DPCI      SI SSN      OPCI      CICS      CICE      MODE
s-2-011-1      5   ***      ****      ****      ****      all
;
eagle20003 05-01-27 10:16:03 EST EAGLE5 31.12.0
MSUTRACE command complete
;
```

The following commands insert a full DPC-SI-OPC filter key with an ITU-N spare point code when the Duplicate Point Code feature is on, and show the **msutrace getfilter** command output with the filter key after the **chgfilter** command is processed to completion.

This filter key will qualify MSUs with at least the following properties:

- DPC = (ITU-N Spare) 6234-aa
- SI=5
- OPC=(ITU-N Spare) 6233-aa
- CICS=1
- CICE=200

pass:loc=1315:cmd="msutrace -a chgfilter -p ITUNS -k 6234-aa:5:6233-aa:1:200"

Command Accepted - Processing

```
eagle20003 06-06-01 10:16:03 EST EAGLE5 35.0.0
pass:loc=1315:cmd="msutrace -a chgfilter -p ITUNS -k
6234-aa:5:6233-aa:1:200"
Command entered at terminal #1.
;
eagle20003 06-06-01 10:16:03 EST EAGLE5 35.0.0
PASS: Command sent to card
;
eagle20003 06-06-01 10:16:03 EST EAGLE5 35.0.0
MSUTRACE command in progress
;
eagle20003 06-06-01 10:16:03 EST EAGLE5 35.0.0
MSUTRACE command completed
;
```

pass:loc=1317:cmd="msutrace -g config"

Command Accepted - Processing

```
eagle20003 05-01-27 10:16:03 EST EAGLE5 31.12.0
pass:loc=1317:cmd="msutrace -g config"
Command entered at terminal #1.
;
eagle20003 05-01-27 10:16:03 EST EAGLE5 31.12.0
PASS: Command sent to card
;
eagle20003 05-01-27 10:16:03 EST EAGLE5 31.12.0
MSUTRACE command in progress
;
eagle20003 05-01-27 10:16:03 EST EAGLE5 31.12.0
MSUTRACE configurations

Trace = On

Trace buffers: 0 of 3 USED

MSUTRACE: filter settings
      DPCN      SI SSN      OPCI      CICS      CICE      MODE
s-6234-aa      5   ***    s-6233-aa      ****      ****      all
;
eagle20003 05-01-27 10:16:03 EST EAGLE5 31.12.0
MSUTRACE command complete
;
```

netstat

Network Statistics

This command is used to display network statistics from the TCP/IP stack. This command allows troubleshooting of network interface and routing configuration problems within the private EPAP-DSM IP network.

Keyword: netstat

Command Class: IP Stack Maintenance

Options

Options and option parameters that are underlined indicate that a value must be specified for that option or parameter. For example, the **netstat** command option **-m** has the parameter buffer pool. The pool for which information will be displayed can be specified, as in the command **netstat -m sys**. Do not enter the underlined option or parameter; enter a value for the information represented by the underlined option or parameter.

-a

This option displays socket information for all protocols.

-d

This option displays driver measurement data.

The **-m** modifier displays multicast information. The **-p** modifier displays PHY registers. The **-z** modifier clears driver measurements. The **-h** modifier displays history measurements for the past 24 hours or the measurements collected a user defined hour ago. The **-f** modifier displays driver measurement data in full format (for GPLs that are loaded on E5-based cards only).

The **-m**, **-p**, and **-h** modifiers are not supported for GPLs that are loaded on E5-based cards.

-e

This option displays DPL driver measurement data. This option is supported only for GPLs that are loaded on E5-based cards.

-f

-h

This options provides help information for the command.

-i

This option displays interface information for all interfaces.

-m buffer pool

This option displays buffer pool information for the specified pool.

Range: data, sys, dd

data—SENS protocol stack data buffer pool

sys—system buffer pool

dd—Ethernet device driver buffer pool

Default: All three buffer pools are displayed.

-p protocol

This option displays information for the specified protocol.

Rnage: tcp, udp, ip, icmp, sctp

tcp—transmission control protocol

udp—user datagram protocol

ip—internet protocol

icmp—internet control message protocol

sctp—stream control transmission protocol

Default: None

-r

This option displays the Route table.

Example

pass:cmd="netstat -i":loc=1105

pass:cmd="netstat -a":loc=1111

pass:cmd="netstat -p tcp":loc=1111

pass:cmd="netstat -m data":loc=1105

```
pass:cmd="netstat -r":loc=1105
```

```
pass:cmd="netstat -e":loc=1111
```

```
pass:cmd="netstat -d 0 -f":loc=1111
```

Dependencies

Only one of the options can be specified at a time.

Notes

The **netstat** command is executed through the **pass** command.

The options {-m,-p,-h} are not supported for GPLs that are loaded on E5-based cards.

Output for GPLs that are NOT loaded on E5-based cards

```
pass:loc=1107:cmd="netstat"
```

or

```
pass:loc=1107:cmd="netstat -h"
```

```
Command Accepted - Processing
```

```
tekelecstp 08-02-02 12:16:34 EST EAGLE 38.0.0
```

```
PASS: Command sent to card
```

```
Usage: netstat [-a] [-h] [-m data|sys|dd] [-p icmp|igmp|ip|sctp|tcp|udp]
          [-i] [-r] [-d 0|1 [-m] [-p] [-z] [-h 1..24]]
```

Options:

```
-a      display socket information for all protocols
-h      Displays this message
-m      display buffer pool information for 1 of the system pools
-p      display socket information for 1 of the protocols
-i      display interface information for all interfaces
-r      display the route table information
-d      display driver measurement data
```

```
;
```

```
tekelecstp 08-02-02 12:16:34 EST EAGLE 38.0.0
```

```
NETSTAT command complete
```

```
;
```

pass: loc=1105: cmd="netstat -a"

Command Accepted - Processing

tekelecstp 08-02-07 07:59:12 EST EAGLE 38.0.0
PASS: Command sent to card

;

tekelecstp 08-02-07 07:59:12 EST EAGLE 38.0.0

Active Internet connections (including servers)

PCB	Proto	Recv-Q	Send-Q	Local Address Foreign Address	(state)
11df510	TCP	0	0	0.0.0.0.111 0.0.0.0.0	LISTEN
11df384	UDP	0	0	0.0.0.0.1008 0.0.0.0.0	
11df48c	UDP	0	0	0.0.0.0.111 0.0.0.0.0	

;

tekelecstp 08-02-07 07:59:12 EST EAGLE 38.0.0

NETSTAT command complete

pass: loc=1105: cmd="netstat -i"

tekelecstp 08-02-07 07:59:20 EST EAGLE 38.0.0
PASS: Command sent to card

;

```
tekelecstp 08-02-07 07:59:20 EST EAGLE 38.0.0
lo (unit number 0):
  Flags: (0x8069) UP LOOPBACK MULTICAST ARP RUNNING 10MB HDX DIX
  Type: SOFTWARE_LOOPBACK
  Internet address: 127.0.0.1
  Netmask 0xff000000 Subnetmask 0xff000000
  Metric is 0
  Maximum Transfer Unit size is 32768
  6 packets received; 6 packets sent
  0 multicast packets received
  0 multicast packets sent
  0 input errors; 0 output errors
  0 collisions; 0 dropped
seeq (unit number 0):
  Flags: (0x63) UP BROADCAST ARP RUNNING 10MB HDX DIX
  Type: ETHERNET_CSMACD
  Internet address: 192.168.100.112
  Broadcast address: 192.168.100.255
  Netmask 0xffffffff00 Subnetmask 0xffffffff00
  Ethernet address is 00:00:17:04:00:61
  Metric is 0
  Maximum Transfer Unit size is 1500
  5 packets received; 1 packets sent
  5 multicast packets received
  0 multicast packets sent
  0 input errors; 0 output errors
  0 collisions; 0 dropped
seeq (unit number 1):
  Flags: (0x63) UP BROADCAST ARP RUNNING 10MB HDX DIX
  Type: ETHERNET_CSMACD
  Internet address: 192.168.55.112
  Broadcast address: 192.168.55.255
  Netmask 0xffffffff00 Subnetmask 0xffffffff00
  Ethernet address is 00:00:17:04:00:62
  Metric is 0
  Maximum Transfer Unit size is 1500
  28 packets received; 16 packets sent
  13 multicast packets received
  0 multicast packets sent
  0 input errors; 0 output errors
  0 collisions; 0 dropped
```

;

eagle20004 08-02-07 07:59:20 EST EAGLE 38.0.0

NETSTAT command complete

pass: loc=1105: cmd="netstat -m data"

Command Accepted - Processing

tekelecstp 08-02-07 07:59:56 EST EAGLE 38.0.0
PASS: Command sent to card

;

eagle20004 08-02-07 07:59:56 EST EAGLE 38.0.0

type number

FREE : 9553

DATA : 0

HEADER : 0

SOCKET : 0

PCB : 0

RTABLE : 0

HTABLE : 0

ATABLE : 0

SONAME : 0

ZOMBIE : 0

SOOPTS : 0

FTABLE : 0

RIGHTS : 0

IFADDR : 0

CONTROL : 0

OOBDATA : 0

IPMOPTS : 0

IPMADDR : 0

IFMADDR : 0

MRTABLE : 0

TOTAL : 9553

number of mbufs: 9553

number of times failed to find space: 0

number of times waited for space: 0

number of times drained protocols for space: 0

CLUSTER POOL TABLE

size	clusters	free	usage
64	1000	1000	41
128	1250	1250	848
256	1250	1250	0
512	200	200	0
1024	100	100	0
2048	20	20	0

64 1000 1000 41

128 1250 1250 848

256 1250 1250 0

512 200 200 0

1024 100 100 0

2048 20 20 0

;

tekelecstp 08-02-07 07:59:56 EST EAGLE 38.0.0

NETSTAT command complete

pass: loc=1105: cmd="netstat -m sys"

Command Accepted - Processing

tekelecstp 08-02-07 08:00:14 EST EAGLE 38.0.0
PASS: Command sent to card

;

eagle20004 08-02-07 08:00:14 EST EAGLE 38.0.0

type	number
FREE	3069
DATA	0
HEADER	0
SOCKET	3
PCB	4
RTABLE	17
HTABLE	0
ATABLE	0
SONAME	0
ZOMBIE	0
SOOPTS	0
FTABLE	0
RIGHTS	0
IFADDR	6
CONTROL	0
OOBDATA	0
IPMOPTS	0
IPMADDR	1
IFMADDR	0
MRTABLE	0
TOTAL	3100

number of mbufs: 3100

number of times failed to find space: 0

number of times waited for space: 0

number of times drained protocols for space: 0

CLUSTER POOL TABLE

size	clusters	free	usage
64	650	640	12
128	200	188	33
256	500	494	6
512	200	197	24

;

tekelecstp 08-02-07 08:00:14 EST EAGLE 38.0.0

NETSTAT command complete

pass: loc=1105: cmd="netstat -m dd"

Command Accepted - Processing

tekelecstp 08-02-07 08:00:24 EST EAGLE 38.0.0
PASS: Command sent to card

;

tekelecstp 08-02-07 08:00:24 EST EAGLE 38.0.0

END-0 Buffer Pool

CLUSTER POOL TABLE

size	clusters	free	usage
1528	80	77	10

END-1 Buffer Pool

CLUSTER POOL TABLE

size	clusters	free	usage
1528	80	72	58

;

tekelecstp 08-02-07 08:00:24 EST EAGLE 38.0.0

NETSTAT command complete

pass: loc=1105: cmd="netstat -p icmp"

Command Accepted - Processing

;

tekelecstp 08-02-07 08:00:29 EST EAGLE 38.0.0
0966.1083 SYSTEM INFO REPT COND: system alive
Report Date:08-02-27 Time:08:00:29

;

tekelecstp 08-02-27 08:00:29 EST EAGLE 38.0.0
PASS: Command sent to card

;

tekelecstp 08-02-27 08:00:29 EST EAGLE 38.0.0
ICMP:
1 call to icmp_error
0 error not generated because old message was icmp
Output histogram:
destination unreachable: 1
0 message with bad code fields
0 message < minimum length
0 bad checksum
0 message with bad length
Input histogram:
echo reply: 6
destination unreachable: 1
0 message response generated

;

tekelecstp 08-02-07 08:00:29 EST EAGLE 38.0.0

NETSTAT command complete

pass: loc=1105: cmd="netstat -p ip"

Command Accepted - Processing

tekelecstp 08-02-07 08:00:44 EST EAGLE 38.0.0
PASS: Command sent to card

;

tekelecstp 08-02-07 08:00:44 EST EAGLE 38.0.0
IP:

48 total
0 badsum
0 tooshort
0 toosmall
0 badhlen
0 badlen
0 infragments
0 fragdropped
0 fragtimeout
0 forward
14 cantforward
0 redirectsent
1 unknownprotocol
0 nobuffers
0 reassembled
0 outfragments
0 noroute

;

tekelecstp 08-02-07 08:00:44 EST EAGLE 38.0.0

NETSTAT command complete

pass: loc=1105: cmd="netstat -p tcp"

Command Accepted - Processing

tekelecstp 08-02-07 08:00:54 EST EAGLE 38.0.0
PASS: Command sent to card

;

tekelecstp 08-02-07 08:00:54 EST EAGLE 38.0.0
TCP:

```

  0 packet sent
    0 data packet (0 byte)
    0 data packet (0 byte) retransmitted
    0 ack-only packet (0 delayed)
    0 URG only packet
    0 window probe packet
    0 window update packet
    0 control packet
  0 packet received
    0 ack (for 0 byte)
    0 duplicate ack
    0 ack for unsent data
    0 packet (0 byte) received in-sequence
    0 completely duplicate packet (0 byte)
    0 packet with some dup. data (0 byte duped)
    0 out-of-order packet (0 byte)
    0 packet (0 byte) of data after window
    0 window probe
    0 window update packet
    0 packet received after close
    0 discarded for bad checksum
    0 discarded for bad header offset field
    0 discarded because packet too short
  0 connection request
  0 connection accept
  0 connection established (including accepts)
  0 connection closed (including 0 drop)
  0 embryonic connection dropped
  0 segment updated rtt (of 0 attempt)
  0 retransmit timeout
    0 connection dropped by rexmit timeout
  0 persist timeout
  0 keepalive timeout
    0 keepalive probe sent
    0 connection dropped by keepalive
  0 pcb cache lookup failed

```

;

tekelecstp 08-01-07 08:00:54 EST EAGLE 38.0.0

NETSTAT command complete

pass:loc=1305:cmd="netstat -p sctp"

Command Accepted - Processing

tekelecstp 08-01-25 11:20:41 EST EAGLE 38.0.0
PASS: Command sent to card

;

```
tekelecstp 08-01-25 11:20:41 EST EAGLE 38.0.0
ip packets sent..... 1474882
  ip packets sent with data chunk..... 306354
  control chunks (excluding retransmissions)..... 1172759
  ordered data chunks (excluding retransmissions).. 1534350
  unordered data chunks (excluding retransmissions) 0
  user messages fragmented due to MTU..... 0
  retransmit data chunks sent..... 4
  sacks sent..... 496302
  send failed..... 0
ip packets received..... 1816035
  ip packets received with data chunk..... 989957
  control chunks (excluding duplicates)..... 833141
  ordered data chunks (excluding duplicates)..... 989968
  unordered data chunks (excluding duplicates).... 0
  user messages reassembled..... 0
  data chunks read..... 988601
  duplicate tsns received..... 0
  sacks received..... 153763
  gap ack blocks received..... 0
  out of the blue..... 4
  with invalid checksum..... 0
connections established..... 2954
  by upper layer..... 0
  by remote endpoint..... 2958
connections terminated..... 4
  ungracefully..... 2952
  gracefully..... 0
associations dropped due to retransmits..... 0
consecutive retransmit timeouts..... 4
retransmit timer count..... 6
fast retransmit count..... 0
heartbeat requests received..... 330275
heartbeat acks received..... 340239
heartbeat requests sent..... 340258
associations supported..... 50
milliseconds cookie life at 4-way start-up handshake. 5000
retransmission attempts allowed at start-up phase.... 8
```

;

tekelecstp 08-01-25 11:20:41 EST EAGLE 38.0.0

NETSTAT command complete

pass: loc=1105: cmd="netstat -p udp"

Command Accepted - Processing

tekelecstp 08-02-10 08:01:05 EST EAGLE 38.0.0
PASS: Command sent to card

;

tekelecstp 08-02-10 08:01:05 EST EAGLE 38.0.0
UDP:

42 total packets
29 input packets
13 output packets
0 incomplete header
0 bad data length field
0 bad checksum
16 broadcasts received with no ports
0 full socket
13 pcb cache lookups failed
1 pcb hash lookup failed

;

tekelecstp 08-02-10 08:01:05 EST EAGLE 38.0.0

NETSTAT command complete

pass: loc=1105: cmd="netstat -r"

Command Accepted - Processing

tekelecstp 08-02-07 08:01:14 EST EAGLE 38.0.0
PASS: Command sent to card

;

tekelecstp 08-02-07 08:01:14 EST EAGLE 38.0.0

ROUTE NET TABLE

destination	gateway	flags	Refcnt	Use	Interface
0.0.0.0	192.168.55.250	3	0	14	seeq1
192.168.55.0	192.168.55.112	101	0	0	seeq1
192.168.100.0	192.168.100.112	101	0	0	seeq0

ROUTE HOST TABLE

destination	gateway	flags	Refcnt	Use	Interface
127.0.0.1	127.0.0.1	5	1	6	lo0

;

tekelecstp 08-02-07 08:01:14 EST EAGLE 38.0.0

NETSTAT command complete

pass:loc=1107:cmd="netstat -d 0"

Command Accepted - Processing

tekelecstp 08-01-30 09:49:57 EST EAGLE 38.0.0
 6734.1083 SYSTEM INFO REPT COND: system alive
 Report Date:08-01-30 Time:09:49:57

;

tekelecstp 08-01-30 09:49:57 EST EAGLE 38.0.0
 PASS: Command sent to card

;

tekelecstp 08-01-30 09:49:57 EST EAGLE 38.0.0

Report Time = 05-11-30 09:50:01.435
 Card Load Time = 05-11-29 16:46:49.775
 Last Reset Time = 05-11-29 16:46:49.775

overflow = 0	excess coll. = 0	align. error = 0
crc = 0	underflow = 0	rx collision = 0
dribble = 0	late coll. = 0	very long = 0
short fr = 0	coll. = 0	exc defer = 0
oversize = 0	cs error = 0	rxerror = 132
rxabort = 0	tx bytes = 60	rx broadcast = 104853
read err = 0	tx frames = 1	tx broadcast = 1
rx bytes = 6385476		tx multicast = 0
rx frames = 104856		
bit bucket = 0		
term count = 0		
runts = 0		

;

pass:loc=1107:cmd="netstat -d 0 -m"

Command Accepted - Processing

tekelecstp 08-02-02 10:34:59 EST EAGLE 38.0.0
 6734.1083 SYSTEM INFO REPT COND: system alive
 Report Date:08-02-02 Time:10:34:59

;

tekelecstp 08-02-02 10:34:59 EST EAGLE 38.0.0
 PASS: Command sent to card

;

tekelecstp 08-02-02 10:34:59 EST EAGLE 38.0.0

Report Time = 05-12-02 10:35:01.755
 Card Load Time = 05-11-30 16:14:26.590
 Last Reset Time = 05-11-30 16:14:26.590

IP Multicast Reference Table

Bit	0	1	2	3	4	5	6	7
Byte-0	0	0	0	0	0	0	0	0
Byte-1	0	0	0	0	0	0	0	0
Byte-2	0	0	0	0	0	0	0	0
Byte-3	0	0	0	0	0	0	0	0
Byte-4	0	0	0	0	0	0	0	0
Byte-5	0	0	0	0	0	0	0	0
Byte-6	0	0	0	0	0	0	1	0
Byte-7	0	0	0	0	0	0	0	0

Multicast MAC Address List

MAC Addr	Ref-Cnt	Byte	Bit
01:00:5e:00:00:01	01	6	6

Hardware Multicast Filter Register (unit=0)
 00 00 00 00 00 00 40 00

;

tekelecstp 08-02-02 10:34:59 EST EAGLE 38.0.0

NETSTAT command complete

;

pass:loc=1107:cmd="netstat -d 1 -m"

Command Accepted - Processing

tekelecstp 08-01-30 09:51:07 EST EAGLE 38.0.0
PASS: Command sent to card

;

tekelecstp 08-01-30 09:51:07 EST EAGLE 38.0.0

Report Time = 05-11-30 09:51:07.745
Card Load Time = 05-11-29 16:46:49.775
Last Reset Time = 05-11-30 09:50:43.510

Multicast is NOT enabled for unit=1

;

tekelecstp 08-01-30 09:51:07 EST EAGLE 38.0.0

NETSTAT command complete

;

pass:loc=1107:cmd="netstat -d 0 -p"

Command Accepted - Processing

tekelecstp 08-01-30 09:50:55 EST EAGLE 38.0.0
PASS: Command sent to card

;

tekelecstp 08-01-30 09:50:55 EST EAGLE 38.0.0

Register		Value
-----		-----
Control	=	0x2100
Status	=	0x7809
PHY ID #1	=	0x0016
PHY ID #2	=	0xf831
AN Adv.	=	0x01e1
AN REC	=	0x0000
Config #1	=	0x0022
Config #2	=	0xff00
Status Output	=	0x02c0
Mask	=	0xffff0

;

tekelecstp 08-01-30 09:50:55 EST EAGLE 38.0.0

NETSTAT command complete

;

pass:loc=1107:cmd="netstat -d 0 -z"

Command Accepted - Processing

tekelecstp 08-01-30 09:50:43 EST EAGLE 38.0.0
PASS: Command sent to card

;

tekelecstp 08-01-30 09:50:43 EST EAGLE 38.0.0

Report Time = 05-11-30 09:50:43.510
Card Load Time = 05-11-29 16:46:49.775
Last Reset Time = 05-11-30 09:50:43.510

overflow = 0	excess coll. = 0	align. error = 0
crc = 0	underflow = 0	rx collision = 0
dribble = 0	late coll. = 0	very long = 0
short fr = 0	coll. = 0	exc defer = 0
oversize = 0	cs error = 0	rxerror = 0
rxabort = 0	tx bytes = 0	rx broadcast = 0
read err = 0	tx frames = 0	tx broadcast = 0
rx bytes = 0		tx multicast = 0
rx frames = 0		
bit bucket = 0		
term count = 0		
runts = 0		

Driver measurements for unit=0 cleared

;

tekelecstp 08-01-30 09:50:43 EST EAGLE 38.0.0

NETSTAT command complete

;

pass:loc=1107:cmd="netstat -d 0 -h"

Command Accepted - Processing

tekelecstp 08-01-30 09:50:12 EST EAGLE 38.0.0
PASS: Command sent to card

;

tekelecstp 08-01-30 09:50:12 EST EAGLE 38.0.0

Report Time = 05-11-30 09:50:12.500
Card Load Time = 05-11-29 16:46:49.775
Last Reset Time = 05-11-29 16:46:49.775

Hours Ago	Tx Frames	Tx Errors	Rx Frames	Rx Errors
1	0	0	6298	0
2	0	0	6295	0
3	0	0	6295	0
4	0	0	6295	0
5	0	0	6295	0
6	0	0	6295	0
7	0	0	6296	0
8	0	0	6296	0
9	0	0	6294	0
10	0	0	6294	0
11	0	0	6295	0
12	0	0	6296	0
13	0	0	6294	0
14	0	0	6295	0
15	0	0	6294	0
16	0	0	5248	0
17	1	0	4852	0
18	--	--	--	--
19	--	--	--	--
20	--	--	--	--
21	--	--	--	--
22	--	--	--	--
23	--	--	--	--
24	--	--	--	--

;

tekelecstp 08-01-30 09:50:12 EST EAGLE 38.0.0

NETSTAT command complete

;

pass:loc=1107:cmd="netstat -d 0 -h 18"

Command Accepted - Processing

tekelecstp 08-01-30 10:20:57 EST EAGLE 38.0.0
PASS: Command sent to card

;

tekelecstp 08-01-30 10:20:57 EST EAGLE 38.0.0

Report Time = 05-11-30 10:20:57.735
Card Load Time = 05-11-29 16:46:49.775
Last Reset Time = 05-11-30 09:51:22.480

NETSTAT: Invalid hour number, cannot display 18 hour(s) ago.
Stats have only been saved for 17 hour(s).

;

tekelecstp 08-01-30 10:20:57 EST EAGLE 38.0.0

NETSTAT command complete

;

pass:loc=1107:cmd="netstat -d 0 -h 15"

Command Accepted - Processing

;

tekelecstp 08-01-30 09:50:24 EST EAGLE 38.0.0
PASS: Command sent to card

;

tekelecstp 08-01-30 09:50:24 EST EAGLE 38.0.0

Report Time = 05-11-30 09:50:24.080
Card Load Time = 05-11-29 16:46:49.775
Last Reset Time = 05-11-29 16:46:49.775

overflow = 0	excess coll. = 0	align. error = 0
crc = 0	underflow = 0	rx collision = 0
dribble = 0	late coll. = 0	very long = 0
short fr = 0	coll. = 0	exc defer = 0
oversize = 0	cs error = 0	rxerror = 0
rxabort = 0	tx bytes = 0	rx broadcast = 6296
read err = 0	tx frames = 0	tx broadcast = 0
rx bytes = 383160		tx multicast = 0
rx frames = 6294		
bit bucket = 0		
term count = 0		
runts = 0		

;

tekelecstp 08-01-30 09:50:24 EST EAGLE 38.0.0

NETSTAT command complete

;

Output for GPLs on E5-based Cards

pass:cmd="netstat":loc=1111

or

pass:cmd="netstat -h":loc=1111

```

Command Accepted - Processing

tekelecstp 08-01-19 04:43:47 EST  EAGLE 38.0.0
PASS: Command sent to card
;

tekelecstp 08-01-19 04:43:47 EST  EAGLE 38.0.0

Usage: netstat [-a] [-e] [-h] [-m data|sys|dd] [-p icmp|igmp|ip|sctp|tcp|udp
]
               [-i] [-r] [-d 0|1 [-m] [-p] [-z] [-h 1..24] [-f]]

Options:
  -a      display socket information for all protocols
  -e      display DPL driver measurement data
  -d      display Ethernet driver measurement data
  -h      display this message
  -m      display buffer pool information for 1 of the system pools
  -p      display socket information for 1 of the protocols
  -i      display interface information for all interfaces
  -r      display the route table information
;

tekelecstp 08-01-19 04:43:47 IST  EAGLE 38.0.0

NETSTAT command complete
;

```


pass:cmd="netstat -a":loc=1111

Command Accepted - Processing

tekelecstp 08-06-21 16:26:30 IST EAGLE5 39.0.0
 pass:cmd="netstat -a":loc=1105
 Command entered at terminal #3.

;

tekelecstp 08-06-21 16:26:30 IST EAGLE5 39.0.0
 PASS: Command sent to card

;

tekelecstp 08-06-21 16:26:30 IST EAGLE5 39.0.0
 SDS Shell Output

```
-> tklc_inetstatShow
PCB      Proto Recv-Q   Send-Q   Local Address   Foreign Address  (state)
-----
2354720  TCP                0         0  0.0.0.0.23      0.0.0.0.0        LISTEN
232cd60  UDP      16921935         0  0.0.0.0.161     0.0.0.0.0
232cc20  UDP                0         0  127.0.0.1.1026  127.0.0.1.17185
232cae0  UDP      16921930         0  0.0.0.0.17185   0.0.0.0.0
232c9a0  UDP      16921922         0  0.0.0.0.68      0.0.0.0.0
232c5e0  UDP      16921912         0  127.0.0.1.1024  0.0.0.0.0
232c220  UDP                0         0  127.0.0.1.1025  127.0.0.1.1024
value = 1 = 0x1
```

;

tekelecstp 08-06-21 16:26:30 IST EAGLE5 39.0.0

;

tekelecstp 08-06-21 16:26:30 IST EAGLE5 39.0.0
 NETSTAT command complete

;

pass:cmd="netstat -e":loc=1111

Command Accepted - Processing

tekelecstp 08-01-19 04:45:51 EST EAGLE 38.0.0
PASS: Command sent to card

;

tekelecstp 08-01-19 04:45:51 EST EAGLE 38.0.0

Dual Port Link Statistics

In Ucast Octets = 0	In Ucast Pkts = 0
Out Ucast Octet = 0	Out Ucast Pkts = 0
Out Bcast Octets = 0	Out Bcast Pkts = 0
Out Ucast Octets Err = 0	Out Ucast Pkts Err = 0
Out Bcast Octet Err = 0	Out Bcast Pkts Err = 0
Invalid copy lengths = 0	IP Frame too big = 0
No Mbufs Avail = 0	No System bufs Avail = 0
TVG Func Err = 0	System buf Err = 0
Inbound too big = 0	

;

tekelecstp 08-01-19 04:45:51 EST EAGLE 38.0.0

NETSTAT command complete

;

pass:cmd="netstat -i":loc=1111

Command Accepted - Processing

tekelecstp 08-01-19 04:46:02 EST EAGLE 38.0.0
PASS: Command sent to card

;

tekelecstp 08-01-19 04:46:02 EST EAGLE 38.0.0
SDS Shell Output

-> tklc_ifShow

lo (unit number 0):

Flags: (0x48049) UP LOOPBACK MULTICAST TRAILERS ARP RUNNING INET_UP

Type: SOFTWARE_LOOPBACK

inet: 127.0.0.1

Netmask 0xff000000 Subnetmask 0xff000000

Metric is 0

Maximum Transfer Unit size is 1536

0 packets received; 1 packets sent

0 multicast packets received

0 multicast packets sent

0 input errors; 0 output errors

0 collisions; 0 dropped

0 output queue drops

DPLend (unit number 0):

Flags: (0x20043) UP BROADCAST ARP RUNNING

Type: ETHERNET_CSMACD

Ethernet address is 00:00:00:00:00:00

Metric is 0

Maximum Transfer Unit size is 485

0 octets received

0 octets sent

0 unicast packets received

0 unicast packets sent

0 non-unicast packets received

0 non-unicast packets sent

0 incoming packets discarded

0 outgoing packets discarded

0 incoming errors

0 outgoing errors

0 unknown protos

0 collisions; 0 dropped

0 output queue drops

gei (unit number 2):

Flags: (0x70043) UP BROADCAST ARP RUNNING INET_UP AUTONEG 100MB FDX DIX

Type: ETHERNET_CSMACD

inet: 192.168.55.203

Broadcast address: 192.168.55.255

Netmask 0xffffffff00 Subnetmask 0xffffffff00

Ethernet address is 00:00:17:0c:dd:e0

Metric is 0

Maximum Transfer Unit size is 1500

1708790504 octets received

989333197 octets sent

392089485 unicast packets received

712715002 unicast packets sent

0 multicast packets received

0 multicast packets sent

514480 broadcast packets received

7 broadcast packets sent

0 incoming packets discarded

0 outgoing packets discarded

0 incoming errors

0 outgoing errors

0 unknown protos

```
        0 collisions; 0 dropped
        0 output queue drops
value = 26 = 0x1a
;

tekelecstp 08-01-19 04:46:02 EST  EAGLE 38.0.0

NETSTAT command complete
;
```

The following example displays BOND interfaces. These interfaces are supported by only E5-SM4G cards.

pass:cmd="netstat -i":loc=1111

Command Accepted - Processing

```
tekelecstp 08-06-21 03:10:00 IST EAGLE 39.0.0
pass:cmd="netstat -i":loc=1107
Command entered at terminal #2.
```

;

```
tekelecstp 08-06-21 03:10:00 IST EAGLE 39.0.0
PASS: Command sent to card
```

;

```
tekelecstp 08-06-21 03:10:00 IST EAGLE 39.0.0
SDS Shell Output
```

-> tklc_ifShow

lo (unit number 0):

```
Flags: (0x48049) UP LOOPBACK MULTICAST TRAILERS ARP RUNNING INET_UP
Type: SOFTWARE_LOOPBACK
inet: 127.0.0.1
Netmask 0xff000000 Subnetmask 0xff000000
Metric is 0
Maximum Transfer Unit size is 1536
0 packets received; 1 packets sent
0 multicast packets received
0 multicast packets sent
0 input errors; 0 output errors
0 collisions; 0 dropped
0 output queue drops
```

DPLend (unit number 0):

```
Flags: (0x20043) UP BROADCAST ARP RUNNING
Type: ETHERNET_CSMACD
Ethernet address is 00:00:00:00:00:00
Metric is 0
Maximum Transfer Unit size is 485
0 octets received
0 octets sent
0 unicast packets received
0 unicast packets sent
0 non-unicast packets received
0 non-unicast packets sent
0 incoming packets discarded
0 outgoing packets discarded
0 incoming errors
0 outgoing errors
0 unknown protos
0 collisions; 0 dropped
0 output queue drops
```

gei (unit number 0):

```
Flags: (0x78042) DOWN BROADCAST MULTICAST ARP RUNNING INET_UP 100MB HDX
```

DIX

```
Type: ETHERNET_CSMACD
inet: 192.168.122.4
Broadcast address: 192.168.122.255
Netmask 0xffffffff00 Subnetmask 0xffffffff00
Ethernet address is 00:00:17:0d:0f:3a
Metric is 0
Maximum Transfer Unit size is 1500
0 octets received
0 octets sent
0 unicast packets received
0 unicast packets sent
0 multicast packets received
0 multicast packets sent
0 broadcast packets received
0 broadcast packets sent
```

```

    0 incoming packets discarded
    0 outgoing packets discarded
    0 incoming errors
    0 outgoing errors
    0 unknown protos
    0 collisions; 0 dropped
    0 output queue drops
gei (unit number 1):
  Flags: (0x78042) DOWN BROADCAST MULTICAST ARP RUNNING INET_UP 10MB HDX
DIX
  Type: ETHERNET_CSMACD
  inet: 192.168.121.4
  Broadcast address: 192.168.121.255
  Netmask 0xffffffff00 Subnetmask 0xffffffff00
  Ethernet address is 00:00:17:0d:0f:3b
  Metric is 0
  Maximum Transfer Unit size is 1500
  0 octets received
  0 octets sent
  0 unicast packets received
  0 unicast packets sent
  0 multicast packets received
  0 multicast packets sent
  0 broadcast packets received
  0 broadcast packets sent
  0 incoming packets discarded
  0 outgoing packets discarded
  0 incoming errors
  0 outgoing errors
  0 unknown protos
  0 collisions; 0 dropped
  0 output queue drops
Bond (unit number 0):
  Flags: (0x60043) UP BROADCAST ARP RUNNING INET_UP
  Type: ETHERNET_CSMACD
  inet: 192.168.123.4
  Broadcast address: 192.168.123.255
  Netmask 0xffffffff00 Subnetmask 0xffffffff00
  Ethernet address is 00:00:00:00:00:00
  Metric is 0
  Maximum Transfer Unit size is 485
  0 octets received
  0 octets sent
  0 unicast packets received
  0 unicast packets sent
  0 non-unicast packets received
  0 non-unicast packets sent
  0 incoming packets discarded
  0 outgoing packets discarded
  0 incoming errors
  0 outgoing errors
  0 unknown protos
  0 collisions; 0 dropped
  0 output queue drops
value = 26 = 0x1a
;
tekelecstp 08-06-21 03:10:00 IST EAGLE 39.0.0
;
tekelecstp 08-06-21 03:10:00 IST EAGLE 39.0.0
NETSTAT command complete

```

```

;

pass:cmd="netstat -m data":loc=1111

    Command Accepted - Processing

    tekelecstp 08-01-19 04:46:24 EST  EAGLE5 38.0.0
    PASS: Command sent to card
;

    tekelecstp 08-01-19 04:46:24 EST  EAGLE5 38.0.0
    SDS Shell Output

    -> netStackDataPoolShow
    type          number
    -----
    FREE   :      37587
    DATA   :         23
    HEADER  :         22
    SOCKET  :          0
    PCB     :          0
    RTABLE  :          0
    HTABLE  :          0
    ATABLE  :          0
    SONAME  :          0
    ZOMBIE  :          0
    SOOPTS  :          0
    FTABLE  :          0
    RIGHTS  :          0
    IFADDR  :          0
    CONTROL :          0
    OOBDATA :          0
    IPMOPTS :          0
    IPMADDR :          0
    IFMADDR :          0
    MRTABLE :          0
    TAG     :          0
    TOTAL   :      37632
    number of mbufs: 37632
    number of times failed to find space: 0
    number of times waited for space: 0
    number of times drained protocols for space: 0

    CLUSTER POOL TABLE
    -----
    size      clusters  free      usage      minsize  maxsize  avgsz
    -----
    ---
    64         6336     6336      33          4         56       13
    128        6336     6313     712952418  128       128        1
    256        6336     6336        0          0          0        0
    512       10240     10218     712654339  293       293         3
    1024       1024     1024        0          0          0        0
    2048       1024     1024        0          0          0        0
    -----
    ---
    value = 80 = 0x50 = 'P'
;

    tekelecstp 08-01-19 04:46:24 EST  EAGLE5 38.0.0

    NETSTAT command complete
;

```

pass:cmd="netstat -m sys":loc=1111

Command Accepted - Processing

tekelecstp 08-01-19 04:46:44 EST EAGLE 38.0.0
PASS: Command sent to card

;

tekelecstp 08-01-19 04:46:44 EST EAGLE 38.0.0
SDS Shell Output

-> netStackSysPoolShow
type number

```
-----
FREE      :    3696
DATA      :         4
HEADER    :         0
SOCKET    :         0
PCB       :         0
RTABLE    :         0
HTABLE    :         0
ATABLE    :         0
SONAME    :         0
ZOMBIE    :         0
SOOPTS    :         0
FTABLE    :         0
RIGHTS    :         0
IFADDR    :         0
CONTROL   :         0
OOBDATA   :         0
IPMOPTS   :         0
IPMADDR   :         0
IFMADDR   :         0
MRTABLE   :         0
TAG       :         0
TOTAL     :    3700
```

number of mbufs: 3700

number of times failed to find space: 0

number of times waited for space: 0

number of times drained protocols for space: 0

CLUSTER POOL TABLE

size	clusters	free	usage	minsize	maxsize	avgsz
20	500	477	28	8	20	16
44	500	495	5	24	32	35
96	500	487	13	48	96	65
172	500	490	10	116	160	150
292	500	487	1059	176	256	0
664	500	486	1064	384	592	1
1144	100	95	5	1144	1144	228

value = 80 = 0x50 = 'P'

;

tekelecstp 08-01-19 04:46:47 EST EAGLE 38.0.0

NETSTAT command complete

;

pass:cmd="netstat -m dd":loc=1111

Command Accepted - Processing

tekelecstp 08-01-19 04:47:03 EST EAGLE 38.0.0
PASS: Command sent to card

;

tekelecstp 08-01-19 04:47:03 EST EAGLE 38.0.0

END-0 Buffer Pool

CLUSTER POOL TABLE

size	clusters	free	usage
1536	800	480	0

END-1 Buffer Pool

CLUSTER POOL TABLE

size	clusters	free	usage
1536	800	640	0

;

tekelecstp 08-01-19 04:47:05 EST EAGLE 38.0.0

NETSTAT command complete

;

pass:cmd="netstat -p icmp":loc=1111

```
Command Accepted - Processing

tekelecstp 08-01-19 04:47:13 EST  EAGLE 38.0.0
PASS: Command sent to card
;

tekelecstp 08-01-19 04:47:13 EST  EAGLE 38.0.0
SDS Shell Output

-> icmpstatShow
ICMP:
  0 call to icmp_error
  0 error not generated because old message was icmp
  Output histogram:
    echo: 1042
  0 message with bad code fields
  0 message < minimum length
  0 bad checksum
  0 message with bad length
  Input histogram:
    echo reply: 1042
  0 message response generated
value = 30 = 0x1e
;

tekelecstp 08-01-19 04:47:13 EST  EAGLE 38.0.0

NETSTAT command complete
;
```

pass:cmd="netstat -p igmp":loc=1111

```
Command Accepted - Processing

tekelecstp 08-01-19 04:47:31 EST  EAGLE 38.0.0
PASS: Command sent to card
;

tekelecstp 08-01-19 04:47:31 EST  EAGLE 38.0.0
SDS Shell Output

-> igmpstatShow
IGMP:
  0 invalid queries received
  0 invalid reports received
  0 bad checksums received
  0 reports for local groups received
  0 membership queries received
  0 membership reports received
  0 short packets received
  0 total messages received
  0 membership reports sent
value = 27 = 0x1b
;

tekelecstp 08-01-19 04:47:31 EST  EAGLE 38.0.0

NETSTAT command complete
;
```

pass:cmd="netstat -p ip":loc=1111

Command Accepted - Processing

tekelecstp 08-01-19 04:47:50 EST EAGLE 38.0.0
PASS: Command sent to card

;

tekelecstp 08-01-19 04:47:50 EST EAGLE 38.0.0
SDS Shell Output

-> ipstatShow

total	392695394
badsum	0
tooshort	0
toosmall	0
badhlen	0
badlen	0
infragments	0
fragdropped	0
fragtimeout	0
forward	0
fastforward	0
cantforward	0
redirectsent	0
unknownprotocol	0
delivered	392695394
localout	712875071
nobuffers	0
reassembled	0
fragmented	0
outfragments	0
cantfrag	0
badoptions	0
noroute	0
badvers	0
rawout	0
toolong	0
notmember	0
nogif	0
badaddr	0

value = 1 = 0x1

;

tekelecstp 08-01-19 04:47:50 EST EAGLE 38.0.0

NETSTAT command complete

;

pass:cmd="netstat -p tcp":loc=1111

Command Accepted - Processing

tekelecstp 08-01-19 04:48:10 EST EAGLE 38.0.0
PASS: Command sent to card

;

tekelecstp 08-01-19 04:48:10 EST EAGLE 38.0.0
SDS Shell Output

-> tcpstatShow

TCP:

```

712802525 packets sent
    712802521 data packets (-1599247397 bytes)
    0 data packet (0 byte) retransmitted
    2 ack-only packets (0 delayed)
    0 URG only packet
    0 window probe packet
    0 window update packet
    3 control packets
392101363 packets received
    392101363 acks (for -1599247397 bytes)
    0 duplicate ack
    0 ack for unsent data
    0 packet (0 byte) received in-sequence
    0 completely duplicate packet (0 byte)
    0 packet with some dup. data (0 byte duped)
    0 out-of-order packet (0 byte)
    0 packet (0 byte) of data after window
    0 window probe
    0 window update packet
    0 packet received after close
    0 discarded for bad checksum
    0 discarded for bad header offset field
    0 discarded because packet too short
3 connection requests
0 connection accept
1 connection established (including accepts)
2 connections closed (including 0 drop)
0 embryonic connection dropped
392101363 segments updated rtt (of 44575243 attempts)
1 retransmit timeout
    0 connection dropped by rexmit timeout
0 persist timeout
7 keepalive timeouts
    0 keepalive probe sent
    0 connection dropped by keepalive
0 pcb cache lookup failed
value = 27 = 0x1b

```

;

tekelecstp 08-01-19 04:48:10 EST EAGLE 38.0.0

NETSTAT command complete

;

pass:cmd="netstat -p sctp":loc=1106

Command Accepted - Processing

tekelecstp 08-01-24 05:41:04 EST EAGLE 38.0.0
PASS: Command sent to card

;

```
tekelecstp 08-01-24 05:41:04 EST EAGLE 38.0.0
ip packets sent..... 214
  ip packets sent with data chunk..... 8
  control chunks (excluding retransmissions)..... 211
  ordered data chunks (excluding retransmissions).. 8
  unordered data chunks (excluding retransmissions) 0
  user messages fragmented due to MTU..... 0
  retransmit data chunks sent..... 0
  sacks sent..... 9
  send failed..... 0
ip packets received..... 215
  ip packets received with data chunk..... 8
  control chunks (excluding duplicates)..... 211
  ordered data chunks (excluding duplicates)..... 8
  unordered data chunks (excluding duplicates).... 0
  user messages reassembled..... 0
  data chunks read..... 8
  duplicate tsns received..... 0
  sacks received..... 9
  gap ack blocks received..... 0
  out of the blue..... 0
  with invalid checksum..... 0
connections established..... 1
  by upper layer..... 0
  by remote endpoint..... 1
connections terminated..... 0
  ungracefully..... 0
  gracefully..... 0
associations dropped due to retransmits..... 0
consecutive retransmit timeouts..... 0
retransmit timer count..... 0
fast retransmit count..... 0
heartbeat requests received..... 99
heartbeat acks received..... 99
heartbeat requests sent..... 99
associations supported..... 16
milliseconds cookie life at 4-way start-up handshake. 5000
retransmission attempts allowed at start-up phase.... 10
```

;

tekelecstp 08-01-24 05:41:04 EST EAGLE 38.0.0

NETSTAT command complete

;

pass:cmd="netstat -p udp":loc=1111

Command Accepted - Processing

tekelecstp 08-01-19 04:48:40 EST EAGLE 38.0.0
PASS: Command sent to card

;

tekelecstp 08-01-19 04:48:40 EST EAGLE 38.0.0
SDS Shell Output

-> udpstatShow

UDP:

714029 total packets
612012 input packets
102017 output packets
0 incomplete header
0 bad data length field
0 bad checksum
510042 broadcasts received with no ports
0 full socket
0 pcb cache lookup failed
0 pcb hash lookup failed
value = 26 = 0x1a

;

tekelecstp 08-01-19 04:48:40 EST EAGLE 38.0.0

NETSTAT command complete

;

pass:cmd="netstat -r":loc=1112

Command Accepted - Processing

tekelecstp 08-02-19 05:58:13 EST EAGLE 38.0.0
PASS: Command sent to card

;

tekelecstp 08-02-19 05:58:13 EST EAGLE 38.0.0
SDS Shell Output

-> tklc_routeShow

ROUTE NET TABLE

destination	gateway	flags	Refcnt	Use	Interface
172.20.48.0	172.20.48.250	33554689	0	0	DPLend0
192.168.55.0	192.168.55.252	33554689	2	0	gei2

ROUTE HOST TABLE

destination	gateway	flags	Refcnt	Use	Interface
127.0.0.1	127.0.0.1	35651589	3	15	lo0
192.168.99.100	192.168.55.211	33554439	0	0	gei2

value = 0 = 0x0

;

tekelecstp 08-02-19 05:58:13 EST EAGLE 38.0.0

NETSTAT command

pass:cmd="netstat -d 0":loc=1111

Command Accepted - Processing

tekelecstp 08-01-19 04:49:16 EST EAGLE 38.0.0
PASS: Command sent to card

;

tekelecstp 08-01-19 04:49:16 EST EAGLE 38.0.0

Report Time = 00-00-00 00:00:59.001
Card Load Time = 00-00-00 00:00:09.905
Last Reset Time = 00-00-00 00:00:09.905

crc err = 0	align err = 0	symbol err = 0
rx err = 0	missed pkt = 0	sequence err = 0
cr ex er = 0	rx len err = 0	rx no buf = 0
rx total = 243721	rx undersz = 0	rx frag = 0
good pkt rx= 243721	rx bcast = 11652	rx mcast = 0
rx oversz = 0	rx jabber = 0	collision = 0
tx total = 381079	late coln = 0	tx underun = 0
good pkt tx= 381079	tx bcast = 0	tx mcast = 0
defer count = 0	tx no crs = 0	
good octets rx = 16988038	total octets rx = 16988038	
good octets tx = 137538057	total octets tx = 137538057	

;

tekelecstp 08-01-19 04:49:16 EST EAGLE 38.0.0

NETSTAT command complete

;

pass:cmd="netstat -d 0 -z":loc=1111

tekelecstp 08-01-19 04:50:07 EST EAGLE 38.0.0
PASS: Command sent to card

;

tekelecstp 08-01-19 04:50:07 EST EAGLE 38.0.0

Driver measurements for unit 0 cleared

;

tekelecstp 08-01-19 04:50:07 EST EAGLE 38.0.0

NETSTAT command complete

;

pass:cmd="netstat -d 0 -f":loc=1111

Command Accepted - Processing

tekelecstp 08-01-19 04:50:22 EST EAGLE 38.0.0
PASS: Command sent to card

;

tekelecstp 08-01-19 04:50:22 EST EAGLE 38.0.0

Report Time = 00-00-00 00:01:01.335
Card Load Time = 00-00-00 00:00:09.905
Last Reset Time = 00-00-00 00:00:46.665

crc err = 0	align err = 0	symbol err = 0
rx err = 0	missed pkt = 0	sequence err = 0
cr ex er = 0	rx len err = 0	rx no buf = 0
rx total = 13562	rx undersz = 0	rx frag = 0
good pkt rx= 13562	rx bcast = 149	rx mcast = 0
rx oversz = 0	rx jabber = 0	collision = 0
tx total = 22019	late coln = 0	tx underun = 0
good pkt tx= 22019	tx bcast = 0	tx mcast = 0
single col = 0	excess coln = 0	multi colsn = 0
pkt rx 64 = 179	pkt rx 127 = 13383	pkt rx 255 = 0
pkt rx 511 = 0	pkt rx 1023 = 0	pkt rx 1522 = 0
pkt tx 64 = 30	pkt tx 127 = 0	pkt tx 255 = 0
pkt tx 511 = 21989	pkt tx 1023 = 0	pkt tx 1522 = 0
tcp cxt tx = 0	rx FIFO head = 0x00000caf	rx FIFO tail = 0x00000caf
rx FIFO pc = 0	rx FIFO hs = 0x00000caf	rx FIFO ts = 0x00000caf
tcp tx fc = 0	tx FIFO head = 0x00001f30	tx FIFO tail = 0x00001f30
tx FIFO pc = 0	tx FIFO hs = 0x00001f30	tx FIFO ts = 0x00001f30
XON rcv = 0	XON xmit = 0	XOFF rcv = 0
XOFF tx = 0		unsupport FC = 0
defer count = 0		tx no crs = 0
good octets rx = 948266		total octets rx = 948266
good octets tx = 7983927		total octets tx = 7983927

;

tekelecstp 08-01-19 04:50:22 EST EAGLE 38.0.0
5463.1083 SYSTEM INFO REPT COND: system alive
Report Date:02-01-19 Time:04:50:24

;

tekelecstp 08-01-19 04:50:22 EST EAGLE 38.0.0

NETSTAT command complete

;

nslookup

Nameserver Lookup

This command returns the IP address for a given hostname, or returns a hostname for a given IP address.

Keyword: nslookup

Command Class: IP Stack Maintenance

Options

Options and option parameters that are underlined indicate that a value must be specified for that option or parameter. For example, the **nslookup** command has the option destination. An IP address

or hostname can be specified for the destination, as in the commands **nslookup 192.168.100.3** and **nslookup dcm1107a**. Do not enter the underlined option or parameter; enter a value for the information represented by the underlined option or parameter.

destination

The destination can be either an IP address or hostname.

IP address

The IP address is a TCP/IP address expressed in standard “dot notation.” IP addresses consist of the system’s network number and the machine’s unique host number. An example IP address is **192.9.200.44**, where **192.9.200** is the network number and **44** is the machine’s host number.

Range:

4 numbers separated by dots, with each number in the range of **0-255**.

hostname

Hostname. This parameter identifies the logical name assigned to the device with the IP address indicated.

Range:

a-z, A-Z, 0-9, -, . (any string of characters beginning with a letter and comprising up to 60 characters in length)

-h

This options provides help information for the command.

Example

```
nslookup 192.9.200.44
```

```
nslookup nc.tekelec.com
```

Dependencies

The actual **nslookup** text string must be followed by a destination (either a hostname or IP address).

Whether a host is found depends on the configuration of the host table and domain name servers.

Notes

The **nslookup** command is executed through the **pass** command.

Output

```
pass:loc=1105:cmd="nslookup"
```

or

pass:loc=1105:cmd="nslookup -h"

```
Command Accepted - Processing
  rlghncxa03w 04-07-27 08:43:21 EST  EAGLE5 31.6.0
  pass:loc=1105:cmd="nslookup"
  Command entered at terminal #1.
;
  rlghncxa03w 04-07-27 08:43:21 EST  EAGLE5 31.6.0
  PASS: Command sent to card
;
  rlghncxa03w 04-07-27 08:43:21 EST  EAGLE5 31.6.0

Usage: nslookup [hostname|ipaddr]
Options:
    hostname  String name
    ipaddr    d.d.d.d
;
  rlghncxa03w 04-07-27 08:43:22 EST  EAGLE5 31.6.0
  NSLOOKUP command complete
;
```

pass:loc=1105:cmd="nslookup dcm1107a"

```
Command Accepted - Processing
  rlghncxa03w 04-07-27 08:43:46 EST  EAGLE5 31.6.0
  pass:loc=1105:cmd="nslookup dcm1107a"
  Command entered at terminal #1.
;
  rlghncxa03w 04-07-27 08:43:46 EST  EAGLE5 31.6.0
  PASS: Command sent to card
;
  rlghncxa03w 04-07-27 08:43:46 EST  EAGLE5 31.6.0

  NSLOOKUP command in progress
;
  rlghncxa03w 04-07-27 08:43:46 EST  EAGLE5 31.6.0

Configured Domain Name Data

DNSA = 192.168.100.3
DNSB = 0.0.0.0
Domain Name = nc.tekelec.com
Search Order = LOCAL First

Resolving host name - dcm1107a

Host Table entry
  dcm1107a - 192.168.100.113
DNS Server - No entry exists

Currently using Host Table entry

NSLOOKUP command complete
;
```

```
pass:loc=1105:cmd="nslookup 192.168.100.3"
```

```
Command Accepted - Processing
```

```
rlghncxa03w 04-07-27 13:21:49 EST EAGLE5 31.6.0
pass:loc=1105:cmd="nslookup 192.168.100.3"
Command entered at terminal #1.
;
rlghncxa03w 04-07-27 13:21:49 EST EAGLE5 31.6.0
PASS: Command sent to card
;
rlghncxa03w 04-07-27 13:21:49 EST EAGLE5 31.6.0

NSLOOKUP command in progress
;
rlghncxa03w 04-07-27 13:21:49 EST EAGLE5 31.6.0

Configured Domain Name Data

DNSA = 192.168.100.3
DNSB = 0.0.0.0
Domain Name = nc.tekelec.com
Search Order = LOCAL First

Resolving IP address - 192.168.100.3

Host Table - No entry exists
DNS Server
    tekral.nc.tekelec.com - 192.168.100.3

Currently using DNS Server entry

NSLOOKUP command complete
;
```

ping

Packet Internetwork Groper

This command is used to test for the presence of hosts on the network. This command is invoked with a destination (either a hostname or IP address).

Keyword: **ping**

Command Class: IP Stack Maintenance

Options

Options and option parameters that are underlined indicate that a value must be specified for that option or parameter. For example, the **ping** command has the option destination. An IP address or hostname can be specified for the destination, as in the commands **ping 192.9.200.44** and **ping nc.tekelec.com**. Do not enter the underlined option or parameter; enter a value for the information represented by the underlined option or parameter.

destination

The destination can be either an IP address or hostname.

IP address

The IP address is a TCP/IP address expressed in standard "dot notation." IP addresses consist of the system's network number and the machine's unique host number. An example IP address is **192.9.200.44**, where **192.9.200** is the network number and **44** is the machine's host number.

Range:

4 numbers separated by dots, with each number in the range of **0-255**.

hostname

Hostname. This parameter identifies the logical name assigned to the device with the IP address indicated.

Range:

any string of characters beginning with a letter and comprising ('a'..'z', 'A'..'Z', '0'..'9', '-', '.') up to 120 characters in length.

-i

This option specifies the number of ping requests to send.

Range: 1 - 5

Default: 3

-n

This option specifies the size of message to use in test.

Range: 12 - 2048

Default: 64

-h

This options provides help information for the command.

Example

ping 192.9.200.44

ping nc.tekelec.com

ping 192.9.200.44 -i 5 -n 2048

Dependencies

The actual **ping** text string must be followed by a destination (either a hostname or IP address) prior to the options.

Notes

The **ping** command is executed through the **pass** command.

Output**pass:loc=1105:cmd="ping" or****pass:loc=1105:cmd="ping -h"**

Command Accepted - Processing

```

rlghncxa03w 04-07-27 08:29:35 EST  EAGLE5 31.6.0
pass:loc=1105:cmd="ping"
Command entered at terminal #1.
;
rlghncxa03w 04-07-27 08:29:35 EST  EAGLE5 31.6.0
PASS: Command sent to card
;
rlghncxa03w 04-07-27 08:29:35 EST  EAGLE5 31.6.0

Usage: ping <hostname | ipaddr> [-h] [-i size] [-n count]
Options:
  -h           Displays this message
  -i count     Number of pings to send. Range=1..5. Default=3.
  -n sizet     Sets size of ICMP echo packet. Range=12..2048. Default=64.
  hostname     Name of machine to ping
  ipaddr       IP Address of machine to ping (d.d.d.d)
;
rlghncxa03w 04-07-27 08:29:36 EST  EAGLE5 31.6.0

PING command complete
;

```

pass:loc=1105:cmd="ping tekral"

Command Accepted - Processing

```

rlghncxa03w 04-07-27 08:30:16 EST  EAGLE5 31.6.0
pass:loc=1105:cmd="ping tekral"
Command entered at terminal #1.
;
rlghncxa03w 04-07-27 08:30:16 EST  EAGLE5 31.6.0
PASS: Command sent to card
;
rlghncxa03w 04-07-27 08:30:16 EST  EAGLE5 31.6.0
PING command in progress
;
rlghncxa03w 04-07-27 08:30:18 EST  EAGLE5 31.6.0
PING tekral (192.168.100.3): 56 data bytes
64 bytes from tekral.nc.tekelec.com (192.168.100.3):icmp_seq=0.time=5. ms
64 bytes from tekral.nc.tekelec.com (192.168.100.3):icmp_seq=1.time=0. ms
64 bytes from tekral.nc.tekelec.com (192.168.100.3):icmp_seq=2.time=0. ms
----tekral PING Statistics----
3 packets transmitted, 3 packets received, 0% packet loss
round-trip (ms)  min/avg/max = 0/1/5
PING command complete
;

```

pass:loc=1105:cmd="ping 192.168.100.3"

Command Accepted - Processing

```

rlghncxa03w 04-07-27 08:30:44 EST  EAGLE5 31.6.0
pass:loc=1105:cmd="ping 192.168.100.3"
Command entered at terminal #1.
;
rlghncxa03w 04-07-27 08:30:44 EST  EAGLE5 31.6.0
PASS: Command sent to card
;
rlghncxa03w 04-07-27 08:30:44 EST  EAGLE5 31.6.0

PING command in progress
;
rlghncxa03w 04-07-27 08:30:46 EST  EAGLE5 31.6.0
PING 192.168.100.3: 56 data bytes
64 bytes from tekral.nc.tekelec.com (192.168.100.3):icmp_seq=0.time=5. ms
64 bytes from tekral.nc.tekelec.com (192.168.100.3):icmp_seq=1.time=0. ms
64 bytes from tekral.nc.tekelec.com (192.168.100.3):icmp_seq=2.time=0. ms
----192.168.100.3 PING Statistics----
  3 packets transmitted, 3 packets received, 0% packet loss
round-trip (ms)  min/avg/max = 0/1/5

PING command complete
;

```

pass:loc=1105:cmd="ping tekral -i 2"

Command Accepted - Processing

```

rlghncxa03w 04-07-27 08:31:46 EST  EAGLE5 31.6.0
pass:loc=1105:cmd="ping tekral -i 2"
Command entered at terminal #1.
;
rlghncxa03w 04-07-27 08:31:46 EST  EAGLE5 31.6.0
PASS: Command sent to card
;
rlghncxa03w 04-07-27 08:31:46 EST  EAGLE5 31.6.0

PING command in progress
;
rlghncxa03w 04-07-27 08:31:47 EST  EAGLE5 31.6.0
PING tekral (192.168.100.3): 56 data bytes
64 bytes from tekral.nc.tekelec.com(192.168.100.3):icmp_seq=0.time=10. ms
64 bytes from tekral.nc.tekelec.com(192.168.100.3):icmp_seq=1.time=0. ms
----tekral PING Statistics----
  2 packets transmitted, 2 packets received, 0% packet loss
round-trip (ms)  min/avg/max = 0/5/10

PING command complete
;

```

pass:loc=1105:cmd="ping tekral -i 1"

Command Accepted - Processing

```

rlghncxa03w 04-07-27 08:31:55 EST  EAGLE5 31.6.0
pass:loc=1105:cmd="ping tekral -i 1"
Command entered at terminal #1.
;
rlghncxa03w 04-07-27 08:31:55 EST  EAGLE5 31.6.0
PASS: Command sent to card
;
rlghncxa03w 04-07-27 08:31:55 EST  EAGLE5 31.6.0

PING command in progress
;
rlghncxa03w 04-07-27 08:31:55 EST  EAGLE5 31.6.0

PING: tekral is alive

PING command complete
;

```

pass:loc=1105:cmd="ping tekral -i 2 -n 200"

```

rlghncxa03w 04-07-27 08:32:09 EST  EAGLE5 31.6.0
pass:loc=1105:cmd="ping tekral -i 2 -n 200"
Command entered at terminal #1.
;
rlghncxa03w 04-07-27 08:32:09 EST  EAGLE5 31.6.0

PING command in progress
;
rlghncxa03w 04-07-27 08:32:10 EST  EAGLE5 31.6.0
PING tekral (192.168.100.3): 192 data bytes
200 bytes from tekral.nc.tekelec.com(192.168.100.3):icmp_seq=0.time=5. ms
200 bytes from tekral.nc.tekelec.com(192.168.100.3):icmp_seq=1.time=0. ms
----tekral PING Statistics----
2 packets transmitted, 2 packets received, 0% packet loss
round-trip (ms)  min/avg/max = 0/2/5

PING command complete
;

```

NOTE: In the above example, the response shows eight bytes less than the entry (192 as opposed to 200) because the ping command may use eight bytes automatically.

sctp

Stream Control Transmission Protocol

This command is used to provide a view of SCTP instance and association information.

Keyword: sctp

Command Class: SCTP Stack Maintenance

Options

Options and option parameters that are underlined indicate that a value must be specified for that option or parameter. Do not enter the underlined option or parameter; enter a value for the information represented by the underlined option or parameter.

-a aname

This option is used to retrieve the measurements and information for a specific association.

-l

This option is used to display logging details for associations. The logging details are independent of the association state (close or open).

-p <port>

This option is used to retrieve the measurements for a specified SCTP port.

-r

This option is used to reset specified measurements. The associated report is not displayed.

-h

This option is used to display help information for the command. Either brief or full help reports can be generated.

-m

This option is used to display SCTP incoming/outgoing (IO) header audit reports for common and dedicated IO header pools. The IO header is a transmission sequence number (TSN) control block used in processing SCTP chunks. The report shows total, currently available, and minimum IO header counts for the IO header pool shared by all associations (common pool) and the IO header pool for each association (dedicated pool).

Example

```
pass:cmd="sctp -a aname":loc=1307
```

```
pass:cmd="sctp -l":loc=1307
```

```
pass:cmd="sctp -l aname":loc=1307
```

```
pass:cmd="sctp -p port":loc=1307
```

```
pass:cmd="sctp -r -a aname":loc=1307
```

```
pass:cmd="sctp -r -l aname":loc=1307
```

```
pass:cmd="sctp -m"
```

```
pass:cmd="sctp"
```

Dependencies

The **-r** option can be specified in the same command as the **-a**, **-p**, or **-l** options. Otherwise, only one option can be specified at a time.

Notes

None

Output

Either brief or full help reports can be displayed. A full help report is generated by adding the **-h full** option to the command line.

Example brief help report:


```
pass:loc=1305:cmd="sctp -h"
```

```
Usage: [ [[[-a aname] | [-p port] | [-l [aname]]] [-r [-s]]] | [-m] | [-h  
[full]] ]
```

Options:

(no parameters)	display list of SCTP ports
-a aname	display association report
-p port	display SCTP port report
-r	reset specified SCTP measurements
-m	display IO header usage report
-l aname	display association event log
-l	display all event logs
-r -l	reset all SCTP event logs
-r -s	reset all SCTP measurements and pegs
-h	displays command help (brief or full)

```
;
```

```
rlghncxa03w 08-02-01 08:32:09 EST EAGLE5 38.0.0
```

```
SCTP command complete
```

```
;
```

Example of a full help report:

pass:loc=1307:cmd="sctp -h full"

```
Usage: sctp [[[-a aname] | [-p port] | [-l [aname]]] [-r [-s]]] | [-m]
| [-h [full]]
```

Options:

(no parameters)	display list of SCTP ports
-a aname	display association report
-p port	display SCTP port report
-r	reset specified SCTP measurements
-m	display IO header usage report
-l aname	display association event log
-l	display all event logs
-r -l	reset all SCTP event logs
-r -s	reset all SCTP measurements and pegs
-h	displays command help (brief or full)

no parameters option

Summary list of all SCTP instances. To list all the SCTP ports issue the following command:

```
sctp
```

-a aname option details

Retrieves detailed information and measurements for a specific association. For example the following SCTP command will get the measurements and detailed information for the association with association name = assoc1.

```
sctp -a assoc1
```

-p port option details

Retrieves detailed information for a specified SCTP port. For example the following SCTP command will get the detailed information for the SCTP port with a local port of 200.

```
sctp -p 200
```

-r option details

Resets specified SCTP Measurements. See examples below.

Resets measurements for specified association:

```
sctp -r -a assoc
```

Resets measurements for all associations on port 2000:

```
sctp -r -p 2000
```

Resets measurements and event logs for all ports/associations:

```
sctp -r
```

Resets event logs for specified association:

```
sctp -r -l assoc
```

Resets event logs for all associations:

```
sctp -r -l
```

Resets measurements for all associations:

```
sctp -r -s
```

-m

This option displays SCTP IO header audit report for common and dedicated IO header pools. The report shows total, currently available and minimum (low water mark) IO header counts for common and each association's dedicated pool.

IO header is a TSN control block used in processing SCTP chunks. Common pool is IO header pool shared by all associations. Dedicated pool is a per-association IO header pool.

```
sctp -m;
```

-l option details

This option displays logging details for associations. The logging details are independent of the association state (close or open). See examples below:

The following SCTP command will get the logging details for all associations on the specified card.

```
sctp -l
```

The following Sctp command will get the logging details for the association with association name = assoc1.

```
sctp -l assoc1
```

;

```
rlghncxa03w 08-02-01 08:32:09 EST EAGLE5 38.0.0
```

Sctp command complete

;

Example summary list of all Sctp ports. All Sctp ports and number of associations associated with each port is displayed.

pass:loc=1307:cmd="sctp"

```
rlghncxa03w 08-02-01 08:32:09 EST EAGLE5 38.0.0
Local   Local IP      Num of
Port    Address         Assoc
7001    192.168.110.35    1
2222    192.168.110.12 3
        192.168.112.12
```

;

```
rlghncxa03w 08-02-01 08:32:09 EST EAGLE5 38.0.0
```

Sctp command complete

;

Example specific Sctp association information and measurements:

pass:loc=1307:cmd="sctp -a assoc1"

```
e1090203 09-03-03 12:52:56 EST EAGLE 40.1.0
Aname      Local      Local  Remote      Remote
           Address    Port   Address     Port
assoc1     192.168.110.12    2222   192.168.112.4  5555
           192.168.112.12
```

```
Configuration                      State
Retransmission Mode = LIN          State = OPEN
Min. Retransmission Timeout = 10   ULP association id = 18
Max. Retransmission Timeout = 800  Number of nets = 2
Max. Number of Retries = 10        Inbound Streams = 1
Min. Congestion Window = 3000      Outbound Streams = 2
Inbound Streams = 2
Outbound Streams = 2
Checksum Algorithm = crc32c
Send/Rcv Buffer Size = 204800
```

Nets Data

```
IP Address 192.168.112.4      State Reachable
Port       5555              Primary YES
MTU        1500              cwnd  16384
ssthresh   16384            RT0    120

IP Address 192.168.112.5      State Reachable
Port       7777              Primary NO
MTU        1500              cwnd  16384
ssthresh   16384            RT0    120
```

```
Last Net Sent To = 192.168.112.4
Last Net Rcvd From = 192.168.112.4
Over All Error Count = 0
Peers Rwnd = 13880
My Rwnd = 16384
Max Window = 16384
Initial Seq Number = 24130
Next Sending Seq Number = 124686
Last Acked Seq Number = 124669
Maximum Outbound Char Count = 16384
Current Outbound Char Count = 2112
Number Unsent Char Count = 0
Outbound Data Chunk Count = 16
Number Unsent = 0
Number To Retransmit = 0
```

```
ip datagrams rcvd = 155402
ip datagrams with data chunks rcvd = 120844
data chunks rcvd = 367908
data chunks read = 367900
dup tsns rcvd = 8
sacks rcvd = 38734
gap ack blocks rcvd = 3
heartbeat requests rcvd = 135
heartbeat acks rcvd = 52
heartbeat requests sent = 52
ip datagrams sent = 129254
ip datagrams with data chunks sent = 73084
data chunks sent = 396330
retransmit data chunks sent = 135
sacks sent = 64872
send failed = 0
retransmit timer count = 0
consecutive retransmit timeouts = 0
RTT between RMIN and RMAX inclusive = 6
```

```

RTT greater than RMAX = 0
fast retransmit count = 135
  recv timer count = 0
heartbeat timer count = 244
  none left tosend = 0
  none left rwnd gate = 5
  none left cwnd gate = 8
    UNKNOWN = 0
;

e1090203 09-03-03 12:52:56 EST  EAGLE 40.1.0

SCTP command Complete
;

```

Example SCTP port measurements:

pass:loc=1307:cmd="sctp -p 2222"

```

rlghncxa03w 08-02-01 08:32:09 EST  EAGLE5 38.0.0
Local  Local IP      Num of
Port   Address         Assoc
 2222   192.168.110.12  3
        192.168.112.12

Assoc  Local          Local  Remote          Remote
ID     IP Address      Port   Address         Port
  1    192.168.110.12 2222   192.168.112.4   5555
        192.168.112.12
  2    192.168.110.12 2222   192.168.112.4   6666
        192.168.112.12
  3    192.168.110.12 2222   192.168.112.4   7777
        192.168.112.12

      no.of inqueued msgs = 0
            max mtu = 1500
            max init times = 8
      max size reassembly = 1048576
      default rwnd value = 16384
      ip datagram counter = 2781

Timer Values:      seconds      millisecs
      INIT          1             0
      RECV          0             200
      SEND          1             0
      SHUTDOWN      0             300
      HEARTBEAT      0             500
      PMTU          600            0
;

SCTP command complete
;

```

Example displays all event logs for an association:

pass:loc=1307:cmd="sctp -l assoc1"

rlghncxa03w 08-02-01 08:32:09 EST EAGLE 38.0.0

SCTP Event Log				
Time	Event	Reason	Ripaddr	Rport
01:19:04.165	SACK send fail	None	192.168.63.235	10001
01:19:04.175	Ck echo ack snd fail	None	192.168.63.235	10001
01:19:04.180	Assoc UP	Unknown	192.168.63.235	10001
01:19:04.180	Assoc Down	Shutdown Rcv	192.168.63.235	10001
01:19:04.180	Shutdown ack send	None	192.168.63.235	10001
01:19:06.425	INIT Rcv	None	192.168.63.142	10002
01:19:06.425	Datagram Ignored	No Assoc Found	192.168.63.142	10002
01:19:16.500	INIT tmr expr	None	192.168.63.235	10001
01:19:16.500	SACK send fail	None	192.168.63.235	10001
01:19:17.500	INIT tmr expr	None	192.168.63.235	10001
01:19:17.500	SACK send fail	None	192.168.63.235	10001

SCTP: command complete

;

rlghncxa03w 08-02-01 08:32:09 EST EAGLE 38.0.0

SCTP command complete

;

Example displays event logs for all associations on a given card location:

pass:loc=1307:cmd="sctp -l"

rlghncxa03w 08-02-01 08:32:09 EST EAGLE 38.0.0

SCTP Event Log				
Time	Event	Reason	Ripaddr	Rport
01:19:04.165	SACK send fail	None	192.168.63.235	10001
01:19:04.175	Ck echo ack snd fail	None	192.168.63.235	10001
01:19:04.180	Assoc UP	Unknown	192.168.63.235	10001
01:19:04.180	Assoc Down	Shutdown Rcv	192.168.63.235	10001
01:19:04.180	Shutdown ack send	None	192.168.63.235	10001
01:19:06.425	INIT Rcv	None	192.168.63.142	10002
01:19:06.425	Datagram Ignored	No Assoc Found	192.168.63.142	10002
01:19:16.500	INIT tmr expr	None	192.168.63.235	10001
01:19:16.500	SACK send fail	None	192.168.63.235	10001
01:19:17.500	INIT tmr expr	None	192.168.63.235	10001
01:19:17.500	SACK send fail	None	192.168.63.235	10001

SCTP: command complete

;

Example clears the logged events for an association:

pass:loc=1307:cmd="sctp -r -l assoc1"

Command Accepted - Processing

rlghncxa03w 08-02-01 08:32:09 EST EAGLE 38.0.0

All event logs for specified association have been reset.

;

rlghncxa03w 08-02-01 08:32:09 EST EAGLE 38.0.0

SCTP command complete

;

Example resets association measurements:

pass:loc=1307:cmd="sctp -r -a assoc1"

rlghncxa03w 08-02-01 08:32:09 EST EAGLE5 38.0.0

PASS: Command sent to card

Association measurements have been reset.

SCTP command complete

Example resets port measurements:

pass:loc=1307:cmd="sctp -r -p 4001"

rlghncxa03w 08-02-01 08:32:09 EST EAGLE5 38.0.0

PASS: Command sent to card

Port measurements have been reset.

SCTP command complete

Example resets all measurements and event logs:

pass:loc=1307:cmd="sctp -r"

rlghncxa03w 08-02-01 08:32:09 EST EAGLE5 38.0.0

PASS: Command sent to card

All measurements and logs have been reset.

SCTP command complete

Example resets measurements for all ports/associations

pass:loc=1307:cmd="sctp -r -s"

Command Accepted - Processing

rlghncxa03w 08-02-01 08:32:09 EST EAGLE5 38.0.0

All measurements have been reset.

;

rlghncxa03w 08-02-01 08:32:09 EST EAGLE5 38.0.0

SCTP command complete

;

Example IO header audit report:

sctp -m

rlghncxa03w 08-02-01 08:32:09 EST EAGLE5 38.0.0

IO Headers in Common Pool (Total/CurrentFree/Min):
20494/20494/20494

Inst ID	Sock Idx	Assoc ID	IO Headers(Total/CurrentFree/Min)
2	0	1	400/400/398

;

sockrtt

Socket Round Trip Time

This command is used to report and reset the round-trip time statistics for application sockets. Minimum, maximum, and average times are kept for each open socket. The Retransmission Mode (BSD, FIXED, or MOD) and the Fixed Round Trip Time are also displayed.

Keyword: sockrtt

Command Class: Application Maintenance

Options

Options and option parameters that are underlined indicate that a value must be specified for that option or parameter. For example, the **sockrtt** command has the option socket name. The socket name must be specified for which statistics will be displayed, as in the command **sockrtt socyellow**. Do not enter the underlined option or parameter; enter a value for the information represented by the underlined option or parameter.

socket name

This option is **mandatory** and specifies the socket name for which statistics are to be displayed.

Range:

up to 15 alphanumeric characters.

-r

This option resets all statistics for the given socket name.

-h

This option provides help information for the command.

Example

sockrtt


```
sockrtt -h
sockrtt socyellow
sockrtt socyellow -r
```

Dependencies

None

Notes

The **sockrtt** command is executed through the **pass** command.

Output

```
pass:loc=1105:cmd="sockrtt" or
pass:loc=1105:cmd="sockrtt -h"
```

Command Accepted - Processing

```
rlghncxa03w 04-07-27 08:32:34 EST EAGLE5 31.6.0
PASS: Command sent to card
;
rlghncxa03w 04-07-27 08:32:34 EST EAGLE5 31.6.0
Usage: SOCKRTT sockname [-r] [-h]
Options:
    -r      Resets rtt data for specified socket
    -h      Displays this message
;
rlghncxa03w 04-07-27 08:32:34 EST EAGLE5 31.6.0

SOCKRTT command complete
;
```

pass:loc=1105:cmd="sockrtt c7000"

Command Accepted - Processing

rlghncxa03w 04-07-27 08:32:34 EST EAGLE5 31.6.0
PASS: Command sent to card

;

rlghncxa03w 04-07-27 08:32:34 EST EAGLE5 31.6.0

SOCKRTT: Socket round-trip time report (in milliseconds)

Configured Traffic Round-Trip Time

Retransmission Mode : FIXED
Fixed Round Trip Time : 250

Measured Normal Traffic Round-Trip Times

Minimum round-trip time : 5
Maximum round-trip time : 195
Weighted Average round-trip time : 10
Last recorded round-trip time : 10

Measured Congested Traffic Round-Trip Times

Minimum round-trip time : 0
Maximum round-trip time : 0
Weighted Average round-trip time : 0
Last recorded round-trip time : 0

;

rlghncxa03w 04-07-27 08:32:34 EST EAGLE5 31.6.0
SOCKRTT command complete

;

pass:loc=1105:cmd="sockrtt c7000 -r"

Command Accepted - Processing

```

rlghncxa03w 04-07-27 08:32:34 EST EAGLE5 31.6.0
pass:loc=1105:cmd="sockrtt c7000 -r"
Command entered at terminal #1.
;
rlghncxa03w 04-07-27 08:32:34 EST EAGLE5 31.6.0
PASS: Command sent to card
;
rlghncxa03w 04-07-27 08:32:34 EST EAGLE5 31.6.0

SOCKRTT: Socket round-trip time report (in milliseconds)

Configured Traffic Round-Trip Time
  Retransmission Mode           : FIXED
  Fixed Round Trip Time         : 250

Measured Normal Traffic Round-Trip Times

  Minimum round-trip time       : 0
  Maximum round-trip time       : 0
  Weighted Average round-trip time : 0
  Last recorded round-trip time  : 0

Measured Congested Traffic Round-Trip Times

  Minimum round-trip time       : 0
  Maximum round-trip time       : 0
  Weighted Average round-trip time : 0
  Last recorded round-trip time  : 0
;
rlghncxa03w 04-07-27 08:32:34 EST EAGLE5 31.6.0
SOCKRTT command complete
;

```

soipdata

SEAS Over IP Data

This command is used to display the SOIP operational data captured for the last 24 hours.

Keyword: soipdata

Command Class: Application Maintenance

Options

Options and option parameters that are underlined indicate that a value must be specified for that option or parameter.

-f

This option displays full operational data (all counts).

-s

This option is used to display the number of errors received with error type Bad Source.

-d

This option is used to display the number of errors received with error type Bad Destination.

-v

This option is used to display the number of errors received with error type Bad Version.

-g

This option is used to display the number of Good Day messages received.

-e

This option is used to display the number of error messages sent (Sum of Bad Version, Bad Source and Bad Destination).

-u

This option is used to display the number of UPL messages received.

-t

This option is used to display the number of UPL messages transmitted.

-r

This option is used to reset the specified error count.

-h

This option is used to display help for the command.

Example

soipdata -h

soipdata -f

soipdata -r

soipdata -u

Dependencies

None

Notes

None

Output

pass:loc=1305:cmd= "soipdata -h"

Usage: soipdata [[-f] |

[[[-s] [-d] [-v] [-g] [-e] [-u] [-t]
[-r]][-h]]

Options:

-f Display Full Operational data (all the counts)

-s Display number of SR-5129 Messages received with Bad Source

-d Display number of SR-5129 Messages received with Bad Destination

-v Display number of SR-5129 Messages received with Bad Version

-g Display number of Good Day Messages Received.

-e Display number of error messages sent (Sum of BadVersion, BadSource and BadDestination)

-u Display number of Number of UPL messages received

-t Display number of Number of UPL messages transmitted.

-r Reset the Specified Error Count

-h display command help

pass:loc=1305:cmd="soipdata -f"

SOIPDATA: SR-5129 Operational Data Report

Operational Data

reason		count
Message Recived with Bad Source	1	
Message Recived with Bad Destination	2	
Message Recived with Bad Version	0	
Number of Goodday Messages Received	1	
Number of Error Messages Sent		10
Number of UPL Messages Received		12000
Number of UPL Messages Sent		19000

pass:loc=1105:cmd=pass:loc=1305:cmd="soipdata -r"

SOIPDATA : All SOIP Operational data has been reset

pass:loc=1305:cmd="soipdata -r -u"

SOIPDATA: Number of UPL Messages Received has been reset.

pass:loc=1305:cmd="soipdata -u"

SOIP Operational Data

reason		count
Number of UPL Messages Received	0	

soiplog

SEAS Over IP Log

This command is used to display the logs for the SR-5129 messages for a particular SEAS terminal.

Keyword: soiplog

Command Class: Application Maintenance

Options

Options and option parameters that are underlined indicate that a value must be specified for that option or parameter.

-l

This option is used to enable and disable logging.

-d

This option is used to display live message logs

-n X

This option is used to display the last X number of messages.

-h

This option is used to display the help for this command.

Example

soiplog -h

soiplog -l enable":loc=XXXX

Dependencies

None

Notes

With two active connections to the CCS MR, logging must be enabled on each E5-IPSM card that has an active SEAS terminal in order to properly log all SR-5129 communication data.

Assuming a message size of 500 bytes, each E5-IPSM card can log approximately 2000 messages.

If an attempt is made to enable logging on a terminal when logging is already enabled on a different terminal, then the following warning message appears in the previously enabled terminal.

Warning: SOIP Logging Enabled from Terminal: <New logging enabled terminal>

If an attempt is made to disable logging on a terminal when logging is already enabled on a different terminal, then the following warning message appears in the previously enabled terminal

"Warning: SOIP Logging disabled from Terminal: <New logging enabled terminal>"

If an attempt is made to turn on logging on a terminal when it is already enabled on a different terminal, then the following warning message appears in the previously enabled terminal.

"Warning: SOIPLLOG Started on Terminal: <New logging enabled terminal>"

Output

pass:loc=1305:cmd= "soiplog -h"

```
Usage: SOIPLLOG [[-l option] | [-d] [-n] [-h]]

Options:
-l <enable/disable>    Enable/Disable the logs
-d                      Display live message logs
-n <num>               Display last <num> number of messages.
Range=1..2000
-h                      Display Command Help
```

To Enable Real time logging and display, the following commands must be entered one after the other:

pass:cmd="soiplog -l enable":loc=XXXX

pass:cmd="soiplog -d":loc=XXXX

To enable logging and to display the last N number of logged messages, the following commands must be entered one after the other:

pass:cmd="soiplog -l enable":loc=XXXX

pass:cmd="soiplog -n N":loc=XXXX

[mm/dd/yy:hour:min:sec] Message Received.

0353 SR5129 Rcvd 064 bytes, trm=17

```
7E 7E 7E 7E 00 00 00 38    02 01 01 02 01 50 04 0A
41 42 43 44 45 46 47 48    49 50 04 0B 53 45 41 53
4E 4A 43 43 53 4D 31 04    11 50 49 53 43 4E 4A 53
4E 44 38 31 58 49 46 30    31 41 02 01 00 02 01 01
```

```
*~~~~ 8 P *
*ABCDEFGH IJ SEAS*
*NJCCSM1 PISCNJS*
*ND81XIF01A *
```

[mm/dd/yy:hour:min:sec] Message Received.

0354 SR5129 Rcvd 133 bytes, trm=17

```
P
7E 7E 7E 7E 00 00 00 7D    02 01 01 02 01 50 04 0A
*
41 42 43 44 45 46 47 48    49 50 04 0B 53 45 41 53
4E 4A 43 43 53 4D 31 04    11 50 49 53 43 4E 4A 53
4E 44 38 31 58 49 46 30    31 41 02 01 00 02 01 13
*
04 43 03 41 41 42 44 45    46 47 48 49 50 51 53 45
41 53 4E 4A 43 43 53 4D    31 00 56 52 46 00 2A 56
46 59 2D 47 54 54 3A 3A    30 31 30 2C 2A 2A 2D 2A
**
2A 2D 2A 2A 2C 2A 2A 3A    31 32 33 34 35 36 3A 35
*
30 2C 56 52 46
*0, VRF *
```

```
*~~~~ }
*ABCDEFGH IJ SEAS*
*NJCCSM1 PISCNJS*
*ND81XIF01A
* ABCDEFGHIJKSE *
*ASNJCCSM1 VFY *V*
*FY-GTT::010, **
**-**, **:123456:5
```

traceroute

IP Tracing Utility

This command is used to determine the path taken by a UDP message to a specified remote host. The command can be invoked with either a hostname or IP address.

Keyword: traceroute

Command Class: IP Stack Maintenance

Options

Options and option parameters that are underlined indicate that a value must be specified for that option or parameter. For example, the **traceroute** command has the option IP address. The IP address can be specified for the remote host to which the UDP message is sent, as in the command **traceroute 208.55.20.177**. Do not enter the underlined option or parameter; enter a value for the information represented by the underlined option or parameter.

IP address

The IP address is a TCP/IP address expressed in standard “dot notation.” IP addresses consist of the system’s network number and the machine’s unique host number. An example IP address is **192.9.200.44**, where **192.9.200** is the network number and **44** is the machine’s host number.

Range:

4 numbers separated by dots, with each number in the range of **0-255**.

hostname

Hostname. This parameter identifies the logical name assigned to the device with the IP address indicated.

Range:

String of characters, beginning with a letter, up to 120 characters in length. Valid characters are **a-z**, **A-Z**, **0-9**, **-** (hyphen), **.** (period)

-h

This option provides help information for the command.

-m maximum hops

This option specifies the maximum number of hops before the trace is terminated.

Range: 1-30

Default: 10

-n

This option specifies that only the IP Address of each host will be displayed (not the hostname).

-p port

This option provides the user port number.

Range: 1-65535

Default: 33434

Example

```
tracert
```

```
tracert www.remotedest.com
```

```
tracert www.remotedest.com -m 20
```

```
tracert www.remotedest.com -m 20 -n
```

```
tracert 208.55.20.177
```

```
tracert 208.55.20.177 -m 20 -p 40000
```

Dependencies

If a Domain Name is specified, either the Domain Name must exist in the IP Host table or the Domain Name Server A or B must be provisioned.

Notes

The **tracert** command is executed through the **pass** command.

Output

The following example illustrates the help information for the command.

pass:loc=1103:cmd="traceroute" or

pass:loc=1103:cmd="traceroute -h"

```

Command entered at terminal #1.
;
    rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
PASS: Command sent to card
;

    rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0

Usage: traceroute <hostname | ipaddr> [-h] [-m maxhops] [-n] [-p port]
Options:
    -h           Displays this message
    -m maxhops   Maximum number of hops to destination.  Range=1..30. Default= 10.
    -n names     Inhibits the display of intermediate host names
    -p port      Port number. Range=1..65535. Default=33434.
    hostname     Name of machine to trace
    ipaddr       IP Address of machine to trace (d.d.d.d)
Errors:
    *           Timeout
    !N          Unreachable Network
    !H          Unreachable Host
    !?nn        Unknown Failure (nn = ICMP Code)
;
    rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0

TRACEROUTE command complete

```

The following example illustrates a **traceroute** request to host **www.remotedest.com**. A maximum of 20 hops has been specified. Three packets are sent to each hop, with the time for each sample displayed. Intermediate host names are also displayed.

pass:loc=1103:cmd="tracert www.remotedest.com -m 20"

```

Command entered at terminal #1.
;

rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
PASS: Command sent to card
;

rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0

TRACEROUTE command in progress

;

rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
;

rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
Traceroute to www.remotedest.com (208.55.20.177),
  20 hops max, 100 byte packets
 1    5ms    5ms    5ms  216-187-242-57.ded.btitelecom.net (216.187.242.57)
 2   25ms   25ms   85ms  216-187-251-74.ded.btitelecom.net (216.187.251.74)
 3   25ms   25ms   25ms  bti-rdu-c1-rtr.btitelecom.net (208.216.228.254)
 4   30ms   25ms   25ms  Serial4-1-0.GW2.RDU1.ALTER.NET (157.130.34.93)
 5   35ms   35ms   40ms  178.ATM2-0.XR1.DCA1.ALTER.NET (146.188.162.50)
 6   40ms   40ms   35ms  195.at-2-0-0.XR1.DCA6.ALTER.NET (152.63.33.22)
 7   40ms   40ms   40ms  0.so-1-3-0.XL1.DCA6.ALTER.NET (152.63.35.114)
 8   40ms   40ms   40ms  POS6-0.BR3.DCA6.ALTER.NET (152.63.38.117)
 9   40ms   40ms   40ms  a3-0.uunet.mclnva02.us.bb.verio.net (204.255.169.90)
10   75ms   75ms   75ms  p16-0-0-0.r00.atlna03.us.bb.verio.net (129.250.2.49)
11   95ms   95ms   95ms  p4-0-2-0.r01.bcrftl01.us.bb.verio.net (129.250.4.54)
12   95ms   95ms   95ms  ge-1-1.r01.border.boca.verio.net (129.250.28.52)
13   95ms   95ms   95ms  ge-8-1.r01.edge.boca.verio.net (208.55.254.9)
14   95ms   95ms   95ms  www.remotedest.com (208.55.20.177)

TRACEROUTE command complete

;

```

The following example illustrates a **tracert** request to host **www.remotedest.com**. No maximum number of hops has been specified. Intermediate host names are displayed. The display terminates after 10 hops.

```
pass:loc=1103:cmd="traceroute www.remotedest.com"
```

```

Command entered at terminal #1.
;

rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
PASS: Command sent to card
;

rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0

TRACEROUTE command in progress
;

rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
;

rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
Traceroute to www.remotedest.com (208.55.20.177),
  10 hops max, 100 byte packets
 1    5ms    5ms    5ms 216-187-242-57.ded.btitelecom.net (216.187.242.57)
 2   25ms   25ms   25ms 216-187-251-74.ded.btitelecom.net (216.187.251.74)
 3   25ms   25ms   25ms bti-rdu-c1-rtr.btitelecom.net (208.216.228.254)
 4   25ms   25ms   25ms 157.130.34.93 (157.130.34.93)
 5   35ms   40ms   40ms 178.ATM2-0.XR1.DCA1.ALTER.NET (146.188.162.50)
 6   40ms   35ms   45ms 195.at-2-0-0.XR1.DCA6.ALTER.NET (152.63.33.22)
 7   45ms   40ms   40ms 0.so-1-3-0.XL1.DCA6.ALTER.NET (152.63.35.114)
 8   40ms   35ms   35ms POS6-0.BR3.DCA6.ALTER.NET (152.63.38.117)
 9   40ms   40ms   40ms a3-0.uunet.mclnva02.us.bb.verio.net (204.255.169.90)
10   75ms   75ms   80ms p16-0-0-0.r00.atlna03.us.bb.verio.net (129.250.2.49)
Maximum number of hops reached

TRACEROUTE command complete
;

```

The following example illustrates a **traceroute** request to host IP address **208.55.20.177**. No maximum number of hops has been specified. Intermediate host names are displayed. The display terminates after 10 hops.

pass:loc=1103:cmd="tracert 208.55.20.177"

```

Command entered at terminal #1.
;

rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
PASS: Command sent to card
;

rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0

TRACEROUTE command in progress

;

rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
Tracert to www.remotedest.com (208.55.20.177),
10 hops max, 100 byte packets
 1    5ms    5ms    5ms  216-187-242-57.ded.btitelecom.net (216.187.242.57)
 2   55ms   260ms  300ms  216-187-251-74.ded.btitelecom.net (216.187.251.74)
 3   25ms   25ms   25ms  bti-rdu-c1-rtr.btitelecom.net (208.216.228.254)
 4   25ms   25ms   25ms  Serial4-1-0.GW2.RDU1.ALTER.NET (157.130.34.93)
 5   40ms   35ms   35ms  178.ATM2-0.XR1.DCA1.ALTER.NET (146.188.162.50)
 6   40ms   35ms   40ms  195.at-2-0-0.XR1.DCA6.ALTER.NET (152.63.33.22)
 7   35ms   40ms   40ms  0.so-1-3-0.XL1.DCA6.ALTER.NET (152.63.35.114)
 8   40ms   35ms   40ms  POS6-0.BR3.DCA6.ALTER.NET (152.63.38.117)
 9   40ms   40ms   40ms  a3-0.uunet.mclnva02.us.bb.verio.net (204.255.169.90)
10   75ms   75ms   75ms  p16-0-0-0.r00.atlnga03.us.bb.verio.net (129.250.2.49)
)
Maximum number of hops reached

TRACEROUTE command complete
;

```

The following example illustrates a **tracert** request to host IP address **208.55.20.177**. A maximum of 20 hops has been specified. Intermediate host names are displayed.

```
pass:loc=1103:cmd="traceroute 208.55.20.177 -m 20"
```

```

Command entered at terminal #1.
;

rlghncxa03w 04-07-27 08:32:34 EST EAGLE5 31.6.0
PASS: Command sent to card
;

rlghncxa03w 04-07-27 08:32:34 EST EAGLE5 31.6.0

TRACEROUTE command in progress
;

rlghncxa03w 04-07-27 08:32:34 EST EAGLE5 31.6.0
;

rlghncxa03w 05-07-27 08:32:34 EST EAGLE5 31.6.0
Traceroute to www.remotedest.com (208.55.20.177),
  20 hops max, 100 byte packets
 1   5ms   5ms   5ms 216-187-242-57.ded.btitelecom.net (216.187.242.57)
 2  25ms  25ms  25ms 216-187-251-74.ded.btitelecom.net (216.187.251.74)
 3  25ms  25ms  25ms bti-rdu-c1-rtr.btitelecom.net (208.216.228.254)
 4  25ms  25ms  25ms Serial4-1-0.GW2.RDU1.ALTER.NET (157.130.34.93)
 5  35ms  35ms  35ms 178.ATM2-0.XR1.DCA1.ALTER.NET (146.188.162.50)
 6  35ms  40ms  35ms 195.at-2-0-0.XR1.DCA6.ALTER.NET (152.63.33.22)
 7  35ms  35ms  35ms 0.so-1-3-0.XL1.DCA6.ALTER.NET (152.63.35.114)
 8  40ms  35ms  35ms POS6-0.BR3.DCA6.ALTER.NET (152.63.38.117)
 9  40ms  40ms  40ms a3-0.uunet.mclnva02.us.bb.verio.net (204.255.169.90)
10  75ms  75ms  75ms p16-0-0-0.r00.atlnga03.us.bb.verio.net(129.250.2.49)
11  95ms  95ms  95ms p4-0-2-0.r01.bcrftl01.us.bb.verio.net (129.250.4.54)
12  95ms  95ms  95ms ge-1-1.r01.border.boca.verio.net (129.250.28.52)
13  95ms  95ms  95ms ge-8-1.r01.edge.boca.verio.net (208.55.254.9)
14  95ms  95ms  95ms www.remotedest.com (208.55.20.177)

TRACEROUTE command complete
;

```

The following example illustrates a **traceroute** request to host IP address **208.55.20.177**. A maximum of 20 hops has been specified. Intermediate host names are not displayed because the **-n** option is specified.

pass:loc=1103:cmd="tracert 208.55.20.177 -m 20 -n"

```

Command entered at terminal #1.
;
  rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
PASS: Command sent to card
;

  rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0

TRACEROUTE command in progress
;

  rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
;

  rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
Traceroute to www.remotedest.com (208.55.20.177),
    20 hops max, 100 byte packets
 1    5ms    5ms    5ms  216.187.242.57
 2   25ms   25ms   25ms  216.187.251.74
 3   25ms   25ms   25ms  208.216.228.254
 4   30ms   30ms   30ms  157.130.34.93
 5   35ms   40ms   40ms  146.188.162.50
 6   40ms   40ms   40ms  152.63.33.22
 7   40ms   45ms   40ms  152.63.35.114
 8   40ms   40ms   35ms  152.63.38.117
 9   40ms   40ms   40ms  204.255.169.90
10   75ms   75ms   75ms  129.250.2.49
11   95ms   95ms   95ms  129.250.4.54
12   95ms   95ms   95ms  129.250.28.52
13   95ms   95ms   95ms  208.55.254.9
14  110ms  100ms   95ms  208.55.20.177

TRACEROUTE command complete
;

```

The following example illustrates a **tracert** request to host IP address **www.remotedest.com**. A maximum of 20 hops has been specified. Intermediate host names are not displayed because the **-n** option is specified.

pass:loc=1103:cmd="traceroute www.remotedest.com -m 20 -n"

```

Command entered at terminal #1.
;
  rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
PASS: Command sent to card
;

  rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0

TRACEROUTE command in progress
;

  rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
;

  rlghncxa03w 05-07-27 08:32:34 EST  EAGLE5 31.6.0
Traceroute to www.remotedest.com (208.55.20.177),
      20 hops max, 100 byte packets
 1    5ms    5ms    5ms  216.187.242.57
 2   25ms   25ms   25ms  216.187.251.74
 3   25ms   25ms   25ms  208.216.228.254
 4   30ms   30ms   30ms  157.130.34.93
 5   35ms   40ms   40ms  146.188.162.50
 6   40ms   40ms   40ms  152.63.33.22
 7   40ms   45ms   40ms  152.63.35.114
 8   40ms   40ms   35ms  152.63.38.117
 9   40ms   40ms   40ms  204.255.169.90
10   75ms   75ms   75ms  129.250.2.49
11   95ms   95ms   95ms  129.250.4.54
12   95ms   95ms   95ms  129.250.28.52
13   95ms   95ms   95ms  208.55.254.9
14  110ms  100ms   95ms  208.55.20.177

TRACEROUTE command complete
;

```

The following example illustrates a **traceroute** request to host IP address **208.55.20.177**. A maximum of 20 hops has been specified. Intermediate host names are displayed. Application Port 40000 is used.

pass:loc=1103:cmd="traceroute 208.55.20.177 -m 20 -p 40000"

```

Command entered at terminal #1.
;

  rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
PASS: Command sent to card
;

  rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0

TRACEROUTE command in progress
;

  rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
;

```

```

rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
Tracert to www.remotedest.com (208.55.20.177),
      20 hops max, 100 byte packets
 1    5ms    5ms    5ms  216-187-242-57.ded.bttelecom.net (216.187.242.57)
 2   25ms   25ms   25ms  216-187-251-74.ded.bttelecom.net (216.187.251.74)
 3   25ms   25ms   25ms  208.216.228.254 (208.216.228.254)
 4   25ms   25ms   25ms  157.130.34.93 (157.130.34.93)
 5   35ms   40ms   40ms  178.ATM2-0.XR1.DCA1.ALTER.NET (146.188.162.50)
 6   45ms   35ms   40ms  195.at-2-0-0.XR1.DCA6.ALTER.NET (152.63.33.22)
 7   35ms   40ms   40ms  0.so-1-3-0.XL1.DCA6.ALTER.NET (152.63.35.114)
 8   40ms   35ms   40ms  POS6-0.BR3.DCA6.ALTER.NET (152.63.38.117)
 9   40ms   40ms   40ms  a3-0.uunet.mclnva02.us.bb.verio.net (204.255.169.90)
10   75ms   75ms   75ms  p16-0-0-0.r00.atlga03.us.bb.verio.net(129.250.2.49)
11   95ms   95ms   95ms  p4-0-2-0.r01.bcrftl01.us.bb.verio.net (129.250.4.54)
12   95ms   95ms   95ms  ge-1-1.r01.border.boca.verio.net (129.250.28.52)
13   95ms   95ms   95ms  ge-8-1.r01.edge.boca.verio.net (208.55.254.9)
14   95ms   95ms   95ms  www.remotedest.com (208.55.20.177)

TRACEROUTE command complete
;

```

The following example illustrates a tracert request to host IP address 204.202.136.31. A maximum of 20 hops has been specified. Intermediate host names are displayed. Several timeouts occur. Finally, an ICMP error is received (in this case, an unknown response with an ICMP code = 13), and the command is terminated immediately.

pass:loc=1103:cmd="tracert 204.202.136.31 -m 20"

```

      Command entered at terminal #1.
;

rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
PASS: Command sent to card
;

rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0

TRACEROUTE command in progress
;

rlghncxa03w 04-07-27 08:32:34 EST  EAGLE5 31.6.0
;

```



```

rlghncxa03w 04-07-27 08:32:34 EST EAGLE 31.6.0
Traceroute to 204.202.136.31 (204.202.136.31),
  20 hops max, 100 byte packets
 1  5ms    5ms    5ms  216-187-242-57.ded.btitelecom.net (216.187.242.57)
 2  25ms   25ms   25ms  216-187-251-74.ded.btitelecom.net (216.187.251.74)
 3  25ms   25ms   25ms  bti-rdu-c1-rtr.btitelecom.net (208.216.228.254)
 4  25ms   25ms   25ms  Serial4-1-0.GW2.RDU1.ALTER.NET (157.130.34.93)
 5  35ms   40ms   35ms  178.ATM2-0.XR1.DCA1.ALTER.NET (146.188.162.50)
 6  40ms   35ms   35ms  195.at-1-0-0.TR1.DCA6.ALTER.NET (152.63.33.206)
 7  110ms  115ms  115ms  121.at-1-1-0.TR1.SEA1.ALTER.NET (146.188.140.74)
 8  110ms  115ms  115ms  299.ATM7-0.XR1.SEA1.ALTER.NET (146.188.200.109)
 9  115ms  115ms  115ms  195.ATM5-0.GW5.SEA1.ALTER.NET (146.188.201.57)
10  110ms  110ms  110ms  waltdisney1-OC12-gw.customer.alter.net(157.130.182.30)
11  110ms  115ms  110ms  204.202.138.71 (204.202.138.71)
12  *      *      *      Request timed out
13  !?13   Unreachable

TRACEROUTE command complete

```

;

ualog

User Adapter Log

Use this command to report on the user adapter (UA) state machine history for a specified association name. State machine history is kept in a circular buffer in memory. The **-i** and **-x** options are used to include or exclude groups of events from the state machine history.

Keyword: **ualog**

Command Class: Application Maintenance

Options

Options and option parameters that are underlined indicate that a value must be specified for that option or parameter. For example, the **ualog** command has the parameter aname. The association name must be specified for which the user adapter log will be displayed, as in the command **ualog s7000**. Do not enter the underlined option or parameter; enter a value for the information represented by the underlined option or parameter.

aname

This option specifies the association name for the display.

-h

This option displays help (usage) information for the command.

-i event group

This option includes groups of events in the state machine history.

Range: service, ua

-x event group

This option excludes groups of events from the state machine history.

Range: service, ua

Example

```
pass:loc=1105:cmd="ualog s7000"
```

Dependencies

None

Notes

None

Output

```
pass:loc=1105:cmd="ualog s7000"
```

```

rlghncxa03w 05-07-27 08:10:00 EST  EAGLE5 34.0.0
PASS: Command sent to card
;
rlghncxa03w 05-07-27 08:10:00 EST  EAGLE5 34.0.0
UALOG command in progress
;
rlghncxa03w 05-07-27 08:10:00 EST  EAGLE5 34.0.0
Date      Time      ASP Event
-----
05-07-27  17:17:46.940  Management Socket Open
05-07-27  17:17:46.940  Transition to Connecting
05-07-27  17:17:47.500  Socket Allowed for Traffic
05-07-27  17:17:49.375  Socket Connection Established
05-07-27  17:17:49.375  Transition to ASP-DOWN
05-07-27  17:17:49.390  ASPUP PDU Received (ASP ID = 0x00000002)
05-07-27  17:17:49.390  ASPUPACK PDU Transmitted
05-07-27  17:17:49.390  Transition to ASP-INACTIVE LOADSHARE (RC=none)
05-07-27  17:17:49.390  AS INACTIVE NTFY PDU Transmitted (RC=none)
05-07-27  17:17:49.405  ASPACTIVE PDU Received (RC=none)
05-07-27  17:17:49.405  ASPACTIVEACK PDU Transmitted (RC=none)
05-07-27  17:17:49.405  Transition to ASP-ACTIVE LOADSHARE (RC=none)
05-07-27  17:17:49.405  AS ACTIVE NTFY PDU Transmitted (RC=none)
05-07-27  17:17:50.405  ASP INACT NTFY PDU Transmitted (ASP ID = 0x00000005)
05-07-27  17:17:50.405  ASP ACT NTFY PDU Transmitted (ASP ID = 0x00000005)
05-07-27  17:17:52.730  ASP FAILURE NFY PDU Transmitted (ASP ID = 0x00000003)

UALOG command complete
;

```

```
pass:loc=1105:cmd="ualog s7000"
```

```
Command Accepted - Processing
```

```
rlghncxa03w 05-07-27 08:10:00 EST EAGLE5 34.0.0
pass:loc=1105:cmd="ualog s7000"
```

```
;
```

```
rlghncxa03w 05-07-27 08:10:00 EST EAGLE5 34.0.0
PASS: Command sent to card
```

```
;
```

```
rlghncxa03w 05-07-27 08:10:00 EST EAGLE5 34.0.0
```

```
UALOG command in progress
```

```
;
```

```
rlghncxa03w 05-07-27 08:10:00 EST EAGLE5 34.0.0
```

```
UALOG: User Adapter state history log
      UA Version: 01
      ASP ID: 0x00000007
      User Adapter Implemented: SUA RFC
      Current settings: -i service ua
```

Date	Time	Event
05-07-27	19:45:33.265	CLDT PDU Transmitted(RC=0000000001)
05-07-27	19:48:07.490	ASPINACTIVE PDU Received(RC=none)
05-07-27	19:48:07.490	ASPINACTIVEACK PDU Transmitted(RC=0000000002)
05-07-27	19:48:07.490	Transition to ASP-INACTIVE LOADSHARE(RC=0000000002)
05-07-27	19:48:07.490	AS PENDING NTFY PDU Transmitted(RC=0000000002)
05-07-27	19:48:07.500	AS INACTIVE NTFY PDU Transmitted(RC=0000000002)
05-07-27	19:48:19.730	ASPACTIVE PDU Received(RC=0000000001)
05-07-27	19:48:19.730	ASPACTIVEACK PDU Transmitted(RC=0000000001)
05-07-27	19:48:19.730	Transition to ASP-ACTIVE LOADSHARE(RC=0000000001)
05-07-27	19:48:19.730	AS ACTIVE NTFY PDU Transmitted(RC=0000000001)

```
UALOG: command complete
```

```
;
```

When a M3UA or SUA PDU is received that contains one or more errors, a response error message is transmitted containing an error code. Error codes are recorded to and displayed in the UALOG only when the UA peer-to-peer message logging option is enabled (**-i ua**), as shown in the following example.:

pass:loc=1315:cmd="ualog assoc1315a1"

Command Accepted - Processing

```

rlghncxa03w 05-07-27 08:10:00 EST  EAGLE5 34.0.0
pass:loc=1315:cmd="ualog assoc1315a1"
Command entered at terminal #3.
;

rlghncxa03w 05-07-27 08:10:00 EST  EAGLE5 34.0.0
PASS: Command sent to card
;

rlghncxa03w 05-07-27 08:10:00 EST  EAGLE5 34.0.0

UALOG command in progress
;

rlghncxa03w 05-07-27 08:10:00 EST  EAGLE5 34.0.0

UALOG: User Adapter state history log
      UA Version: 01
      ASP ID:undefined
      User Adapter Implemented: M3UA RFC
      Current settings: -i service ua

Date      Time      Socket Event
-----
05-07-27  17:17:46.940  Management Socket Open
05-07-27  17:17:46.940  Transition to Connecting
05-07-27  17:17:49.375  Socket Connection Established
05-07-27  17:17:49.375  Transition to ASP-DOWN
05-07-27  17:17:49.390  ASPUP PDU Received (ASP ID = undefined)
05-07-27  17:17:49.390  ASPUPACK PDU Transmitted
05-07-27  17:17:49.390  Transition to ASP-INACTIVE LOADSHARE
05-07-27  17:17:49.390  AS INACTIVE NTFY PDU Transmitted
05-07-27  17:17:49.405  ASPACTIVE PDU Received
05-07-27  17:17:49.405  ASPACTIVEACK PDU Transmitted
05-07-27  17:17:49.405  Transition to ASP-ACTIVE LOADSHARE
05-07-27  17:17:49.405  AS ACTIVE NTFY PDU Transmitted
05-07-27  17:17:49.450  DAUD PDU Received
05-07-27  17:17:49.480  ERR PDU Transmitted (0x00000015)

UALOG command complete
;

```

Error Codes

NOTE: The following error codes are not used in M3UA: 0x02, 0x08, 0x1a, 0x1b, 0x1c, 0x10, 0x17, and 0x18

The following error codes can appear in the error messages:

0x01—Invalid Version

A message was received with an invalid or unsupported version. The error message contains the supported version in the Common Header.

0x03—Unsupported Message Class

A message was received with an unexpected or unsupported Message Class.

0x04—Unsupported Message Type

A message was received with an unexpected or unsupported Message Type.

0x05—Unsupported Traffic Handling Mode

This error is sent by a Signaling Gateway Process (SGP) if an Application Server Process (ASP) sends an ASP Active message with an unsupported Traffic Mode Type or a Traffic Mode Type that is inconsistent with the currently configured mode for the Application Server (AS).

0x06—Unexpected Message

This error message can be sent if a defined and recognized message is received that is not expected in the current state. In some cases the ASP might silently discard the message and not send an error message. Silent discard is used by an ASP if it received a DATA message from a signaling point while the ASP is in the ASP-INACTIVE state. If the unexpected message contains Routing Context, the Routing Context can be included in the error message.

0x07—Protocol Error

This error message is sent for any protocol anomaly, such as reception of a parameter that is syntactically correct but unexpected in the current situation.

0x09—Invalid Stream Identifier

A message is received on an unexpected SCTP stream (for example, a Management message was received on a stream other than 0).

0x0d—Refused - Management Blocking

An ASP Up or ASP Active message is received and the request is refused for management reasons (such as management lockout). If this error is in response to an ASP Active message, the Routing Context in the ASP Active message can be included in the error message.

0x0e—ASP Identifier Required

This error message is sent by an SGP in response to an ASP Up message that does not contain an ASP Identifier parameter when the SGP requires one. The ASP should resend the ASP Up message with an ASP Identifier.

0x0f—Invalid ASP Identifier

This error message is sent by an SGP in response to an ASP Up message with an invalid (for example, non-unique) ASP Identifier

0x11—Invalid Parameter Value

A message is received with an invalid parameter value (for example, a DUPU message was received with a Mask value other than 0).

0x12—Parameter Field Error

A message is received with a parameter that has a wrong length field.

0x13—Unexpected Parameter

A message contains an invalid parameter.

0x14—Destination Status Unknown

This error message can be sent if a DAUD is received at a Signaling Gateway (SG) asking for the availability/congestion status of a destination, and the SG does not provide the status (as in the case when the sender is not authorized to know the status). For this error, each invalid or unauthorized Point Code is included along with the Network Appearance and/or Routing Context associated with the Point Code.

0x15—Invalid Network Appearance

This error message is sent by an SGP if an ASP sends a message with an invalid (unconfigured) Network Appearance value. For this error, the invalid (unconfigured) Network Appearance is included in the Network Appearance parameter.

0x16—Missing Parameter

A message is received, and a mandatory parameter is not included in the message.

0x19—Invalid Routing Context

A message is received from a peer with an invalid (unconfigured) Routing Context value.
The invalid Routing Context is included in the error message.

0x1a—No Configured AS for ASP

A message is received from a peer without a Routing Context parameter, and it is not known by configuration data which Application Servers are referenced.

Reference Information

Summary of Range Values for :link Parameter.....	A-2
Possible Values for PST/SST/AST.....	A-3
PST.....	A-3
SST.....	A-4
AST.....	A-4
Point Code Formats and Conversion.....	A-5
ANSI Point Codes.....	A-6
ITU International Point Codes.....	A-7
ITU National Point Codes.....	A-7
Converting ITU National Point Code Formats.....	A-8
Introduction.....	A-8
Converting Single Number ITU National Point Codes.....	A-9
Converting Multiple-Part ITU National Point Codes.....	A-9
24-bit ITU-National Point Codes.....	A-10
Spare and Private Point Code Subtype Prefixes.....	A-10
Valid CIC Ranges for SI and MSU Types in Routing Key Static Entries.....	A-13
NAIV/NAI Mapping.....	A-13
NPV/NP Mapping.....	A-14
Cards that use the ent-card Command.....	A-14
Summary of Loopback Testing Commands and Functions.....	A-19

Summary of Range Values for :link Parameter

Table A-1 lists the valid **link** parameter range values signaling links assigned to each type of card for which a location can be specified in the command **loc** parameter. The commands that use these values refer to this table in their **link** parameter description.

NOTE: The link parameter is a synonym for the port parameter in signaling link definitions for a few EAGLE 5 ISS releases. Then the port parameter will be removed.

Table A-1. Summary of Ranges for **link** Parameter

Card	Link	Supported Application
Two-port LIM	A	All supported link applications. The two-port LIM supports the DS0 , OCU , V35 , ATM , E1-ATM , or E1 interface.
Two-port LIM	B	All supported link applications except ss7gx25 (X.25 signaling link), atmansi (ATM high-speed signaling link), atmitu (E1 ATM high-speed signaling link), or ss7ipgw and ipgwi (IP signaling link). The iplim and iplimi applications support sockets, M3UA/SCTP associations, or M2PA/SCTP associations on ports on dual-slot DCMs.
Multi-port LIM	A, B, A1, B1, A2, B2, A3, B3	The ss7ml GPL with DS0 interface at 56 Kb running the ss7ansi application only.
E1/T1 MIM	A, B, A1, B1, A2, B2, A3, B3	The ss7ml GPL running the ss7ansi or ccs7itu application.
IPLIMx with 8 Points (SSEDCM)	A, B, A1, B1, A2, B2, A3, B3	The iplim and iplimi GPLs running the iplim and iplimi applications with sockets, M2PA/SCTP associations, or M3UA/SCTP associations.
HC-MIM	A, B, A1-A31, B1-B31	Runs the ss7ansi or ccs7itu application. A maximum of 64 links can be assigned to each HC-MIM card.
HC-MIM for SE-HSL	A, B	Runs the ss7ansi or ccs7itu application. A maximum of 2 SE-HSL links can be assigned to a card.
E5-ATM	A, B	Runs the atmansi or atmitu application. The card can support up to 2 signaling links.
E5-ENET	A, B, A1-A7, B1-B7, A1-A15, B1-B15	The iplim and iplimi GPLs running the iplim and iplimi applications with sockets, M2PA/SCTP associations, or M3UA/SCTP associations. The ipsggpl running the ipsg applications.

Table A-1. Summary of Ranges for **link** Parameter

Card	Link	Supported Application
E5-E1T1	A, B, A1-A15, B1-B15	Runs the ss7ansi or ccs7itu application. A maximum of 32 links can be assigned to each E5-E1T1 card.
E5-E1T1 for SE-HSL	A, B	Runs the ss7ansi or ccs7itu application. Only 1 SE-HSL link can be assigned to a card.

Possible Values for PST/SST/AST

This section lists the possible values for the primary state (PST), secondary state (SST), and associated state (AST) shown in the output of Report Status (rept-stat-) and Retrieve (rtrv-) commands.

Status can apply to the following types of entities (not all values are possible for every entity type):

card	terminal port
clock	serial port
cluster	but
TCP/IP data link signaling link	
subsystem	linkset
EPAP/ELAP	ACM

PST

Primary state possible values are the following:

IS-ANR—(In Service - Abnormal) The entity is in service but only able to perform a limited subset of its normal service functions.

IS-NR—(In Service - Normal) The entity is in service and handling all its normal service functions.

OOS-MA—(Out Of Service - Memory Administration) The entity is out of service because it has not been equipped.

OOS-MT—(Out Of Service - Maintenance) The entity is out of service and is not available to perform its normal service function. The maintenance system is actively working to restore the entity to service.

OOS-MT-DSBLD—(Out Of Service - Maintenance -Disabled) The entity is out of service and the maintenance system is preventing the entity from performing its normal service function.

SST

Secondary state possible values are the following:

ACTIVE—(Active) The entity is currently in use and is handling its normal service function as the primary service provider. (Master) The entity is currently in a master state in relation to its redundant unit.

ALLOWED—(Allowed) The entity is handling its normal service function.

AVAIL—(Available) Entity service is available to another entity.

BLOCKED—(Blocked) The entity has been manually prohibited from handling traffic.

BUSY—(Busy) The entity is handling the maximum traffic capacity and has no spare capacity for new service requests.

CONN—(Connect) The card's entity status is in connected state.

DISC—(Disconnect) The card's entity status is in disconnected state.

FAULT—(Fault) The entity has failed.

IDLE—(Idle) The entity is in use and has spare capacity for service. For a telnet terminal, this indicates a "ready for connection" status.

INHIBITED—(Inhibited) The entity has been manually prevented from performing its normal service function.

ISOLATED—(Isolated) The entity cannot be detected through software or hardware.

LPBK—(Loopback) The entity status of the card is in the Loopback state.

MANUAL—(Manual) The entity has manually been removed from service and is not carrying any traffic.

MEA—(Mismatch of Equipment and Attributes) A B link is provisioned for a card other than a LIMATM or a LIME1ATM card.

OVFLW-1—(Overflow) One entity cannot provide service to another entity due to service denial.

PROHIBIT—(Prohibited) The entity is not handling traffic because of a failure in the network.

RESTRICT—(Restricted) The traffic the entity is handling is restricted. The normal capacity or configuration is not being used because of a failure in the network. The normal capacity, functionality or configuration of an entity may be restricted during loading or synching of data. This can occur when the Measurements Platform has not yet been enabled.

STANDBY—(Standby) The entity is currently in use and is handling its normal service function as an alternate service provider if the primary service provider failed. For an IPSM card, Standby is the state just prior to Ready, while the card completes initializations.

STANDBY—(Slave) The entity is currently in a slave state in relation to its redundant unit.

TEST—(Test) The entity is currently in a test state.

UNAVAIL—(Unavailable) Entity service is unavailable to another entity.

UEQ—(Unequipped) The entity is not equipped.

UNBLOCKED—(Unblocked) The entity is handling its normal service function.

AST

Associated state possible values are the following:

----- (Blank)—The field may be left blank.

ACCESS—(Accessible) Traffic is being carried between the local entity and an adjacent, or remote, service provider. A full connection has been completed.

ACTIVE—(Active) The entity is currently in use and is handling its normal service function as the primary service provider. (This appears as an AST for the MPS when there is an alarm on it.)

ALMINH—(Alarm Inhibited) The alarm has been inhibited.

BIP ERROR—(Board Identity Prom) The entity has both daughterboard and motherboard prom error.

DB DIFF—(Database Different) The entity has a database difference.

D BIP ERR—(Daughterboard Identity Prom) The entity has a daughterboard prom error.

ENET FLT—(Ethernet fault) An Ethernet fault exists.

GWS—(Gateway Screening) Linkset has gateway screening. See the **rept-stat-ls** command.

INACCESS—(Inaccessible) Traffic is not being carried from the local entity to another service provider. A breakdown in a complete circuit has been detected.

LINE—(Local Line) Local Line loopback state

LOCAL—(Local) Entity has become locally isolated.

LXVR—(Local Transceiver) Local Transceiver loopback state

M BIP ERR—(Motherboard Identity Prom) The entity has a motherboard prom error.

MPS UNAVL—The DSM card cannot communicate to an MPS.

PAYLOAD—(Local Payload) Local Payload loopback state

STANDBY—(Standby) The entity is currently in use and is handling its normal service function as an alternate service provider if the primary service provider failed. (This appears as an AST for the MPS when there is an alarm on it.)

XX%—(Progress indicator for cards that are performing a warm restart and are currently data loading. Shows the percentage of tables that have been downloaded for GPLs that support a persistent LNP database (**scdp**)).

Point Code Formats and Conversion

Many of the commands used for database configuration use point codes. This section describes the point code formats that the system supports. If you need additional information or procedural information, refer to the *Database Administration Manual - SS7*.

The system supports four different point code formats:

- ANSI point codes
- ITU International point codes
- ITU National point codes
- ITU National 24-bit point codes

Each format is described in further detail in the following sections.

ANSI Point Codes

ANSI point codes are made up of three groups of digits called the network indicator (*ni*), network cluster (*nc*), and network cluster member (*ncm*). The values for ANSI point codes depend on the value of the **pctype** parameter of the **chg-sid** command, either **ansi** or **other**.

If the **chg-sid:pctype** parameter is set to **ansi**, the range of values for an ANSI point code is as follows:

ni—**001-255**
nc—**001-255** (if *ni* = **001-005**)
 —**000-255, *** (if *ni* = **006-255**)
ncm—**000-255**

The following rules apply to provisioning ANSI point codes if the **chg-sid:pctype=ansi** parameter is specified:

- An *ni* value of **0** is not allowed (for example, **dpc=0-1-1** and **dpc=0-0-0** are not valid point codes).
- If the *ni* value is **1, 2, 3, 4**, or **5**, then the *nc* value cannot be **0** (for example, **dpc=5-0-1** is rejected).
- If the *ni* value is **1, 2, 3, 4**, or **5**, then network routing point codes are not allowed (for example, **dpc=4-*-*** is rejected).

If the **chg-sid:pctype** parameter is set to **other**, the ANSI point codes do not meet ANSI standards. The range of values for these ANSI point codes is as follows:

ni—**000-255**
nc—**000-255, ***
ncm—**000-255, ***

The following rules apply to provisioning ANSI point code if the **chg-sid:pctype=other** parameter is specified:

- An *ni* value of **0** is allowed, however **dpc=0-0-0** is rejected (for example, **dpc=0-1-1** is accepted).
- The *nc* value can be **0** for all values of *ni* (for example, **dpc=5-0-1** is accepted).
- Network routing point codes are allowed for all values of *ni* (for example, **dpc=4-*-*** is accepted).

An ANSI point code containing all zeros (**0-0-0**) is not a valid point code and cannot be entered into the database.

ANSI point codes support the Private (Internal) Point Code subtype prefix (**p-**). The prefix can be specified before the point code subfield values to indicate a Private Point Code (**p-5-0-1**, for example). See "Spare and Private Point Code Subtype Prefixes".

NOTE: Point codes specified by many commands, including those for site identification, routing keys, and LNP, are required to be full point codes. The asterisk values are not valid in

the commands that specify these point codes. The command Dependencies sections identify the point codes that must be full point codes in the commands.

A range of values for a subfield is specified by separating the values that define the range by two ampersands (&&); for example, **ni=025&&100** specifies all network indicators for ANSI point codes from 25 through 100.

The asterisk (*) point code value indicates a single cluster address for a cluster point code (for example, **20-2-***) or a network routing destination (**20-*-***). If * is used for the *nc* subfield, then * must be also be used for the *ncm* subfield.

A double asterisk (**) and a triple asterisk (***) can also be used for the *nc* and *ncm* subfields of the ANSI point code, but only for the **rtrv-dstn**, **rept-stat-dstn**, **rtrv-rte**, and **rept-stat-rte** commands. If *, **, or *** is used for the *nc* subfield, then *, **, or *** must be used for the *ncm* field

For examples of all of these point code values, see the **rtrv-dstn** command output in Chapter 5 of the *Commands Manual*.

ITU International Point Codes

The ITU international point codes are made up of three groups of digits called *zone*, *area*, and *id*. The range of values for ITU International point codes are:

zone—**0-7**

area—**000-255**

id—**0-7**

An ITU international point code containing all zeros (**0-000-0**) is not a valid point code and cannot be entered into the database.

ITU international point codes support the Spare Point Code subtype prefix (s-). The prefix can be specified before the point code subfield values to indicate a Spare Point Code (**s-5-222-1**, for example). See "Spare and Private Point Code Subtype Prefixes".

ITU National Point Codes

The ITU national point code is a 14-bit integer. The point codes can be a single number up to five digits, or two, three, or four numbers (members) separated by dashes.

If the ITU National Duplicate Point Code (ITUDUPPC) feature is on, ITU national point codes can have group codes assigned to them. The point code is a 1- to 5-digit number. The group code is a two-character field ranging from **aa** to **zz** that is entered as the last subfield of the point code and is separated by a dash from the rest of the point code. An example is **12345-az**.

If the flexible point codes option is enabled (see the **chg-stpopts** command, **:npcfmti parameter**), an ITU national point code format consists of 2, 3, or 4 numbers separated by dashes (formatted as *m1-m2-m3-m4*). When the ITUDUPPC feature is also on, the format is *m1-m2-m3-m4-gc* with a group code. If one of the *m1*, *m2*, *m3*, *m4* members is set to zero bits, no value is entered for that position in the point code. For example, if the **npcfmti** parameter value is set to **3-8-3-0**, valid point codes would be **1-100-1-aa** with a group code, or **7-255-7** with no group code. See the tables in the **chg-stpopts** command description for valid member values and additional examples.

The following ranges of values are valid:

nnnnn—**0-16383**

nnnnn-gc—**0-16363**; group code is *aa-zz* (the ITUDUPPC feature must be on)

m1-m2-m3-m4—Each member represents the number of bits allowed in the corresponding position for a flexible ITU national point code. The range of each member is from **0** to **14**. Each member must be specified; the member value of **0** indicates that the position is not specified in the flexible point code. The sum of the member values must equal 14.

m1-m2-m3-m4-gc—Each member represents the number of bits allowed in the corresponding position for a flexible ITU national point code. The range of each member is from **0** to **14**. Each member must be specified; the member value of **0** indicates that the position is not specified in the flexible point code. The sum of the member values must equal 14. Group code is *aa-zz* (the ITUDUPPC feature must be on).

An asterisk value (*) is allowed only for the **rtrv-dstn** and **rtrv-rte** commands to retrieve ITU-N DPCs if the ITUDUPPC feature is on (for point codes with group codes). The node and group code cannot both be *. For example, **dpcn=12345-*** and **dpcn=*aa** are allowed, but **dpcn=*-*** is not allowed.

If flexible point codes are also used, all valid *m1*, *m2*, *m3*, and *m4* must all be either a number or an *. For example, **1-100-1-aa** and ***-*-*-aa** are allowed, but **1-*-*-aa** is not allowed.

ITU national point codes support the Spare Point Code subtype prefix (**s-**). The prefix can be specified before the point code subfield values to indicate a Spare Point Code (**s-12345** or **s-1-3-5-5-gc**, for example). See "Spare and Private Point Code Subtype Prefixes".

Converting ITU National Point Code Formats

Introduction

Gateway screening only allows ITU national point codes to be provisioned in the database by the enter, delete, or change gateway screening commands, and displayed by the gateway screening retrieve commands as a single number. If a format other than a single number (**14-0-0-0**) for the ITU national point code has been defined by the **npcfmti** parameter of the **chg-stpopts** command, the ITU national point code must be converted into a single number so that it can be used by gateway screening.

For example, the format of the ITU national point code is **4-4-4-2** and you would like to add point code **7-7-7-1** into the allowed OPC screen. The point code **7-7-7-1** would have to be converted to a single number so that the point code can be added to the allowed OPC screen. To determine what multiple-part ITU national point code is represented by the single number ITU national point code in the gateway screening table, the single number point code must be converted to a multiple-part point code.

To convert a single number ITU national point code to a multiple-part point code, go to "Converting Single Number ITU National Point Codes".

To convert a multiple-part ITU national point code to a single number point code, go to "Converting Multiple-Part ITU National Point Codes".

For a definition of the different formats that can be used for ITU national point codes, see "ITU National Point Codes".

Converting Single Number ITU National Point Codes

To make this conversion, you will need to know the format of the ITU national point code. This can be verified in the NPCFMTI field of the **rtrv-stpopts** command output. For this example, the ITU national point codes **14781** and **695** are converted to point codes using the **3-8-3-0** format.

Convert a single number ITU national point code to a multiple-part ITU national point code as follows.

Procedure - Converting a Single Number ITU national point code to a multiple-part ITU national point code

- 1 Convert the point code to a binary number. This can be done with most scientific calculators. The number **14781** converts to the binary number 11100110111101.
The number **695** converts to the binary number 1010110111.

NOTE: Make sure the binary number contains 14 digits. If it does not, add leading zeros to the binary number to bring the total number of digits in the number to 14.

In this example, the binary equivalent for the decimal number 695 (1010110111) contains 10 digits; four zeros must be added to the beginning of the binary number. The resulting binary number is now 00001010110111.

- 2 Divide the binary number into the number of parts required by the format of the ITU national point code. For this example, the format is **3-8-3-0**. Because the last part of the point code format is **0**, the point code format contains only three parts. Divide the point code into three parts, the first part of the point code contains the first three digits of the 14-digit binary number, the second part of the point code contains the next eight digits of the 14-digit binary number, and the third part of the point code contains the last three digits of the 14-digit binary number. For this example, the binary numbers would be divided like this:

11100110111101 = 111 00110111 101

00001010110111 = 000 01010110 111

- 3 Convert each part of the point code into a decimal number using the same scientific calculator used in step 1 and separate each part of the point code with dashes. The results are as follows.
111 00110111 101 = **7-55-5**
000 01010110 111 = **0-86-7**

When the ITU national point codes are converted from single numbers to multiple-part point codes, the resulting value of the multiple-part point code depends on the point code format specified by the **npcfnti** parameter of the **chg-stpopts** command. When converting the single number point code **14781** to the point code format **3-8-3-0**, the resulting point code value is **7-55-5**. If point code **14781** is converted to the point code format **4-4-4-2**, the resulting point code value is **14-6-15-1**.

Converting Multiple-Part ITU National Point Codes

To make this conversion, you will need to know the format of the ITU national point code. This can be verified in the **npcfnti** field of the **rtrv-stpopts** command output. For this example, the ITU national point codes **7-55-5** and **0-86-7**, using the **3-8-3-0** point code format, are converted into a single number.

Convert multiple-part ITU national point codes to a single number as follows.

Procedure - Converting Multiple-Part ITU National Point Codes to a Single Number

- 1 Convert each part of the point code into a binary number using a scientific calculator. The results are as follows.

7-55-5 = 111 00110111 101

0-86-7 = 000 01010110 111

- 2 Combine each part of the point code into a single binary number as follows.

111 00110111 101 = 11100110111101

000 01010110 111 = 00001010110111

NOTE: If the binary number has any zeros at the beginning of the number, remove these zeros as they are not necessary.

In this example, the binary equivalent for the point code **0-86-7** (00001010110111) contains four zeros at the beginning of the binary number. When the leading zeros are removed from the binary number, the resulting binary number is now 1010110111.

- 3 Convert the binary number to a decimal number using the same scientific calculator used in step 1.

The binary number 11100110111101 converts to the decimal number **14781**.

The binary number 1010110111 converts to the decimal number **695**.

24-bit ITU-National Point Codes

The 24-bit ITU national point codes are made up of three groups of digits called *main signaling area*, *sub signaling area*, and *signaling point*. The valid values for 24-bit ITU national point codes are:

main signaling area —**000-255**

sub signaling area —**000-255**

signaling point—**000-255**

24-bit ITU national point codes support the Private (Internal) Point Code subtype prefix (**p-**). The prefix can be specified before the point code field values to indicate a Private Point Code (**p-2055-222-2011**, for example). See "Spare and Private Point Code Subtype Prefixes".

Spare and Private Point Code Subtype Prefixes

The Spare Point Code Support feature and the Internal Point Code Support feature provide optional point code subtype prefixes. The Spare Point Code feature must be enabled before a point code subtype prefix can be specified for a point code.

NOTE: The SEAS interface does not support point code subtype prefixes.

The values **p-**, **s-**, and **ps-** are valid point code subtype prefixes. The dash “-” separates the point code subtype prefix from the remainder of the point code. The prefixes are displayed in lower case. The syntax for the remainder of the point code remains the same.

The Spare Point Code prefix (**s-**) applies only to ITU-I and ITU-N point code domains (ITU-N24 point codes do not support the Spare Point Code prefix), to allow the EAGLE 5 ISS to fully support ITU National and International Spare Point Codes. Table A-2 lists the commands that support the Spare Point Code subtype prefix.

The Private (Internal) Point Code prefix (**p-**) applies to all point code domain types (including ITU-N24 point codes), to allow messages destined to the End Office Node to be routed from the inbound LIM to the outbound IPGWx. Table A-3 lists the commands that support the Private Point Code subtype prefix.

The subtype prefix **ps-** can be specified when the point code parameter supports both the spare and private point code prefixes.

Table A-2. Commands that support the Spare Point Code Prefix

Command	Description	Applicable Point Code Parameters
alm	Alarm	dpci and dpcn
appl-rtkey	Application Route Key	dpci and dpcn ; opci and opcn
cspc	Concerned Signaling Point Code	pci and pcn
dstn	Destination	spci and spcn ; dpci and dpcn ; and to Alias combinations, as shown in Figure 1.
ent-trace	Enter Trace	dpci and dpcn ; opci and opcn
gsmmap-scrn	GSM MAP Screening	npci and npcn
gsmopts	GSM Options	ppmspci1 , ppmspci2 , ppmspcn1 , ppmspcn2
gsm-s-opcode	GSM Short Message Services OP-Code	pci and pcn
gtt/gta	Global Title Translation/Global Title Address	pci and pcn
ls	Linkset	apci and apcn
map	Mated Application	pci and pcn ; mpci and mpcn
mrn	Mated Relay Node	pci and pcn ; pci1 and pcn1 ; pci2 and pcn2 ; pci3 and pcn3 ; pci4 and pcn4
na	Network Appearance	type=ituis , type=ituns
pass	Pass Commands	Syntax for routing keys
rmt-appl	Remote Application	ipci and ipcn
rte	Route	dpci and dpcn
scr-aftpc	Gateway Screening Allowed Affected Point Code	pcst and pctype
scr-blkdp	Gateway Screening Blocked Destination Point Code	pcst and pctype

Table A-2. Commands that support the Spare Point Code Prefix

Command	Description	Applicable Point Code Parameters
scr-blkopc	Gateway Screening Blocked Origination Point Code	pcst and pctype
scr-cdpa	Gateway Screening Called Party (CDPA PC Destination) Point Code	pcst and pctype
scr-cgpa	Gateway Screening Calling Party (Origination) Point Code	pcst and pctype
scr-destfld	Gateway Screening Affected Destination (Concerned) Point Code	pcst and pctype
scr-dpc	Gateway Screening Destination Point Code	pcst and pctype
scr-opc	Gateway Screening Origination Point Code	pcst and pctype
sid	Site ID	True pci and pcn ; cpci and cpn ; ncpci and ncpn .
spc	Secondary Point Code	spci and spcn

Table A-3. Commands that support the Private Point Code Prefix

Command	Description	Applicable Point Code Parameters
dstn	Destination	spci and spcn ; dpc , dpca , dpci , and dpcn Does not apply to Aliases
ls	Linkset	If ipgwapc = yes , apc apcn , apci , and apcn
gtt/gta	Global Title Translation	pc , pca , pci , and pcn
inh/unhb-alm	Destination alarm inhibit	dpc , dpca , dpci , and dpcn
rept-stat-cluster	Report Cluster Status	dpc and dpca
rept-stat-dstn	Report Destination Status	dpc , dpca , dpci , and dpcn
rmt-appl	Remote Application	ipc , ipca , ipci , and ipcn
rst-dstn	Restore Destination	dpc and dpca
rte	Route	dpc , dpca , dpci , and dpcn

Valid CIC Ranges for SI and MSU Types in Routing Key Static Entries

Table A-4 lists the valid CIC ranges for use with SI and MSU types in Routing Key table static entries.

Table A-4. Valid CIC Ranges for SI and MSU Types

SI	MSU for ANSI DPC	MSU for ITU DPC	Comments
4 (TUP)	N/A	CIC is 12 bits. Range is 0-4095.	The TUP protocol is used only in ITU networks.
5 (ISUP)	CIC is 14 bits. Range is 0-16383.	CIC is 12 bits. Range is 0-4095.	
13 (QBICC)	CIC is 32 bits. Range is 0-4294967295.		

NAIV/NAI Mapping

Table A-5 shows the mapping between the **naiv** and the **nai** parameters.

Table A-5. NAIV/NAI Mapping

NAIV	NAI	Description
0	–	Unknown
1	Sub	Subscriber Number
2	Rsvd	Reserved for national use
3	Natl	National significant number
4	Intl	International number
5–127	–	Spare

NPV/NP Mapping

Table A-6 shows the mapping between the **npv** and the **np** parameters.

Table A-6. NPV/NP Mapping

NPV	NP	Description
0	–	Unknown
1	E164	ISDN/telephony numbering plan
2	Generic	Generic numbering plan
3	X121	Data numbering plan
4	F69	Telex numbering plan
5	E210	Maritime mobile numbering plan
6	E212	Land mobile numbering plan
7	E214	ISDN/mobile numbering plan
8	Private	Private network or network-specific numbering plan
9–15	–	Spare

Cards that use the ent-card Command

Table A-7 contains information about cards that use the **ent-card** command for provisioning.

Table A-7. Valid **ent-card** Applications (**appl**) and Card Types (**type**)

Card Name (as shown on card label)	Part Number	Card Type (:type)	Application Type (:appl)	Maximum Cards in the Database
ACM	870-1008-02 870-1008-03 870-1008-04 870-1008-05	acmenet	stplan	32
DCM	870-1945-01 870-1945-02 870-1945-03 870-1984-01	dcm stc	stplan eroute	32 for stplan 32 for eroute (minimum of 17 for 500 links)

Table A-7. Valid ent-card Applications (appl) and Card Types (type)

Card Name (as shown on card label)	Part Number	Card Type (:type)	Application Type (:appl)	Maximum Cards in the Database
EDCM (SSEDCM)	870-2372-01 870-2372-08 / 870-2372-13 (R)	dcm stc	stplan iplim iplimi ss7ipgw ipgwi eroute	32 for stplan 100 for iplim or iplimi Total of 64 ss7ipgw, ipgwi, or combination 32 for eroute (minimum of 14 for 500 links)
EDCM-A (SSEDCM)	870-2508-01 / 870-2508-02 (R)	dcm stc	stplan eroute	32 for stplan 32 for eroute (minimum of 14 for 500 links)
DSM***	870-1984-02 870-1984-03 870-1984-05 870-1984-06 870-1984-08 870-1984-07 / 870-1984-13 (R) 870-1984-16 (R) 870-1984-09 / 870-1984-15 (R) 870-1984-17 (R)	dsm	vscpp gls	25 for vscpp 32 for 50,000 GTT (no MPS-based features on) 8 for gls
DSM-1G	870-2371-02 870-2371-06 870-2371-08 / 870-2371-13 (R)	ipsm	ips	3
EDSM-2G*	870-2372-03 870-2372-07 870-2372-09 / 870-2372-14 (R) 870-2372-15 (R)	mcpm	mcp	250
E1/T1 MIM††	870-2198-01 870-2198-02 870-2198-03 870-2198-04 / 870-2198-07 (R)	lime1 limt1 limch	ss7ansi ccs7itu	250 for each application

Table A-7. Valid **ent-card** Applications (**appl**) and Card Types (**type**)

Card Name (as shown on card label)	Part Number	Card Type (:type)	Application Type (:appl)	Maximum Cards in the Database
E1-ATM	870-2455-01 870-2455-02 870-2455-03 / 870-2455-05 (R)	lime1atm	atmitu	115
E5-ATM	870-1872-01 (R) 870-1872-02 (R)	limatm lime1atm	atmansi atmitu	180 if only one link is provisioned per card. A maximum of 180 links for either application can exist in the system.
E5-E1T1††	870-1873-02 870-1873-03 (R) 870-1873-04 (R)	lime1 limt1	ss7ansi ccs7itu	250 for each application
E5-ENET	870-2212-02 870-2212-03 (R) 870-2212-04 (R) 870-2212-05 (R)	dcm enet stc	ss7ipgw ipgwi iplim iplimi stplan eroute ipsg	64 for IPGWx 100 for IPLIMx 100 for ipsg 32 for stplan 32 for eroute
E5-IPSM	870-2877-01 (R) 870-2877-02 (R)	ipsm	ips	3
E5-SM4G	870-2860-01 (R) 870-2860-02 (R)	dsm	vscpp	32 when no MPS-based features are on 25 when one or more MPS-based features are on 9 when an LNP quantity greater than 228M is on
E5-TSM	870-2943-03 (R)	tsm	gls	8
EILA	870-2049-01 870-2049-02	limds0 limocu limv35	ss7ansi ss7gx25 ccs7itu	250 for each application

Table A-7. Valid ent-card Applications (appl) and Card Types (type)

Card Name (as shown on card label)	Part Number	Card Type (:type)	Application Type (:appl)	Maximum Cards in the Database
EILA-T	870-2049-03	limds0 limocu limv35	ss7ansi ss7gx25 ccs7itu	250 for each application
HC-MIM††	870-2671-01 870-2671-02 870-2671-03 (R)	lime1 limt1	ss7ansi ccs7itu	125 for each application
LIM** or LIM-AINF	870-1014-01 870-1014-02 870-1014-03 870-1014-04 870-1014-05 870-1014-06 870-1488-01 870-1488-02 870-1488-03 870-1488-04 870-1488-05 870-1488-06	limds0 limocu limv35	ss7ansi ss7gx25 ccs7itu	250 for each application
LIM-ATM	870-1293-02 870-1293-03 870-1293-06 870-1293-07 870-1293-08 870-1293-10 / 870-1293-13 (R)	limatm	atmansi	115
LIM-DS0	870-1009-02 870-1009-03 870-1009-04 870-1485-01 870-1485-02 870-1485-03	limds0	ss7ansi ss7gx25 ccs7itu	250 for each application
LIM-E1††	870-1379-01	lime1 limch	ss7ansi ccs7itu	250 for each application

Table A-7. Valid **ent-card** Applications (**appl**) and Card Types (**type**)

Card Name (as shown on card label)	Part Number	Card Type (:type)	Application Type (:appl)	Maximum Cards in the Database
LIM-ILA	870-1484-01 870-1484-02	limds0 limocu limv35	ss7ansi ss7gx25 ccs7itu	250 for each application
LIM-OCU	870-1010-03 870-1010-04 870-1010-05 870-1486-02 870-1486-03 870-1486-04	limocu	ss7ansi ss7gx25 ccs7itu	250 for each application
LIM-V.35	870-1012-02 870-1012-03 870-1012-04 870-1487-01 870-1487-02 870-1487-03	limv35	ss7ansi ss7gx25 ccs7itu	250 for each application
MPL	870-2061-01 870-2061-03 870-2061-04 / 870-2061-06 (R)	limds0	ss7ansi	250 for ss7ansi
TSM-256†	870-1289-02 870-1289-03 870-1289-04 / 870-1289-06 (R) 870-1289-07 (R)	tsm	sccp gls	25 for sccp 8 for gls
TSM-512	870-1290-02 870-1290-03 870-1290-04	tsm	sccp gls	25 for sccp 8 for gls
TSM-768	870-1291-02 870-1291-03 870-1291-04	tsm	sccp gls	25 for sccp 8 for gls

Table A-7. Valid **ent-card** Applications (**appl**) and Card Types (**type**)

Card Name (as shown on card label)	Part Number	Card Type (:type)	Application Type (:appl)	Maximum Cards in the Database
TSM-1024	870-1292-02 870-1292-03 870-1292-04	tsm	sccp gls	25 for sccp 8 for gls
* Though the system allows 250 MCPM cards, practical usage is 2. ** A LIM, EILA, or ILA is a link interface module using the AINF interface and can be installed in place of the LIM-DS0A, LIM-OCU, or LIM-V.35. It is configured in the database as either a LIM-DS0A, LIM-OCU, or LIM-V.35 card. *** If any MPS-based features are running in the system, up to 25 DSMs are allowed in the system. If only GTT is running, up to 32 DSMs can be used in the system with the 50,000 GTT feature. † DSM cards or E5-SM4G cards are required for the LNP feature. For more information about turning the LNP feature on, refer to the <i>LNP Feature Activation Guide</i>. †† For the E1 or T1 interface, either SS7 application (SS7ANSI or CCS7ITU) can be assigned to these cards. For more information on the E1 or T1 interface go to Chapter 3 “System Administration Procedures” in the <i>Database Administration Manual - SS7</i>. Part numbers followed by (R) are ROHS numbers. These numbers are equivalent to the non-ROHS numbers that they are paired with.				

Summary of Loopback Testing Commands and Functions

The following section, Table A-8, Table A-9, and Figure A-1 summarize the loopback testing commands and functions in the system.

The **tst-slk** command provides several methods for testing signaling links. The **loopback** parameter on the **tst-slk** command provides the ability to select **lxvr** (local transceiver), **oam**, **line**, **payload**, and **sltc** loopback tests. The **tst-slk** command will be rejected if a loopback test is not compatible with the link type.

- For low-speed links, the **lxvr** and **sltc** tests are allowed.
- For high-speed links (ATM), the **lxvr**, **oam**, **line**, **payload**, and **sltc** tests are allowed.
- For SS7IPGW and IPGWI DCMs, the **tst-slk** command is not supported.
- For IPLIMx DCMs, only the **loopback=sltc** test is allowed, and is allowed only for links having IPLIML2 type of M2PA.
- For LIME1, LIMT1, or LIMCH cards, or for the E5-ENET card running the IPSP application, only the **loopback=sltc** test is allowed.
- The E5-ATM card can function as either an E1 MIM card or a T1 MIM card, depending on how the card is provisioned. **loopback=sltc** test is allowed.

The **act-lbp** command activates test on one or more loopback points for testing data signaling link elements in one CCS7 transmission path. The maximum number of loopback points is 32.

For a single loopback point test, the parameters can be entered on the command line. If the parameters are not entered at the command line, the LFS database is used. For multiple loopback point tests, the LFS database must be used.

The **ent-lbp** command is used to create the loopback points in the LFS database. The LBPs may be entered in any order.

See the command descriptions in this manual for details on entering parameters and using the commands.

Table A-8. Loopback Testing Commands and Functions—LIME1 and LIMT1 Cards

Command/Function	LIME1 (within a channel)	T1 MIM (within a channel)	E1 MIM (within a channel)	T1 HC- MIM	E1 HC- MIM	Testing Limits
ent-lbp OAM Database for Multiple LFS points per LFS tests No impact on actual link behavior other than allowing multiple points.	n/a	Yes	n/a	Yes	n/a	32 points per card no limit on # of cards
act/dact-lbp EAGLE initiated Level 1 DS0 LFS tests Link State—Link is down Equipment tested—Level 1 element(s) in a signaling path Purpose—Test the error rates of a signaling path Description—Sends loopback code to establish loopback, then performs BERT test for a specified period of time. Typical use—To validate signaling path has acceptable error rate.	n/a	Yes	n/a	Yes	n/a	1024 concurrent tests per system 1 test per card
Remote Loopback FAR END initiated DS0 LFS Test Link State—Link can be up or down Equipment tested—Near end hardware up to level 2 (LXVR)	n/a	Yes	n/a	Yes	n/a	no limit on # of cards

Table A-8. Loopback Testing Commands and Functions—LIME1 and LIMT1 Cards

Command/Function	LIME1 (within a channel)	T1 MIM (within a channel)	E1 MIM (within a channel)	T1 HC- MIM	E1 HC- MIM	Testing Limits
and far end hardware level 1 interface Purpose—Auto—loopback a BERT test to the far end Description—When receiving a loopback code, deactivate the link and go into loopback Typical use—used to remotely test the far end with standard DS0 BERT tests						
tst-slk SLTC <i>EAGLE</i> initiated <i>Level 3 SS7 SLT</i> Link State—Link is up Equipment tested—Near and far end up to Level 3 Purpose—Test the entire path to the far end at Level 3 Description—This will send an SLTM out and expects an SLTA back. Typical use—To validate connectivity of a signaling path.	Yes	Yes	Yes	Yes	Yes	1024 concurrent link tests per system
tst-slk OAM <i>EAGLE</i> initiated <i>Level 1 ATM test</i> Link State—Link is down Equipment tested—Near and far end level 1 software and hardware including all hardware on the cards Purpose—Test the entire near and far end level 1 hardware by exchanging ATM cells Description—Sends OAM cells out to far end for 60 seconds if no errors, or 2	n/a	n/a	n/a	n/a	n/a	1024 concurrent link tests per system

Table A-8. Loopback Testing Commands and Functions—LIME1 and LIMT1 Cards

Command/Function	LIME1 (within a channel)	T1 MIM (within a channel)	E1 MIM (within a channel)	T1 HC- MIM	E1 HC- MIM	Testing Limits
minutes when errors are received. Typical use—Verifies ATM cells can be exchanged between 2 signaling points						
tst-slkl LINE <i>EAGLE</i> initiated <i>Level 1-2 ATM test</i> Link State—Link is down Equipment tested—Near end hardware up to level 2 (LXVR) and far end hardware level 1 interface Purpose—Hardware continuity check between near and far end Description—The following steps occur: 1. Device under test (DUT) sends T1 bit-oriented code (BOC) to remote device 2. Remote device receives BOC and programs hardware 3. DUT attempts level 2 alignment 4. If link aligns (level 2), test passes, else test fails 5. DUT sends BOC to remote device to remove loopback 6. Remote device receives BOC and re-programs hardware	n/a	n/a	n/a	n/a	n/a	1024 concurrent link tests per system
NOTE: Note: If the DUT boots in the middle of sequence, the remote device just needs to have the link activated or de-						

Table A-8. Loopback Testing Commands and Functions—LIME1 and LIMT1 Cards

Command/Function	LIME1 (within a channel)	T1 MIM (within a channel)	E1 MIM (within a channel)	T1 HC- MIM	E1 HC- MIM	Testing Limits
activated and it returns to the original programming. Typical use—Used for a link in line timing to check continuity from the near end level 2 hardware to the level 1 interface at the far end						
tst-slk PAYLOAD <i>EAGLE initiated Level 1-2 ATM test</i> Link State-Link is down Equipment tested—Near end hardware up to level 2 (LXVR) and far end hardware level 1 interface Purpose—Hardware continuity check between near and far end Description—The following steps occur: 1. Device under test (DUT) sends T1 bit oriented code (BOC) to remote device 2. Remote device receives BOC and programs hardware 3. DUT attempts level 2 alignment 4. If link aligns (level 2), test passes, else test fails 5. DUT sends BOC to remote device to remove loopback 6. Remote device receives BOC and re-programs hardware Typical use—used for a link in master timing to check continuity from the near end level 2	n/a	n/a	n/a	n/a	n/a	1024 concurrent link tests per system

Table A-8. Loopback Testing Commands and Functions—LIME1 and LIMT1 Cards

Command/Function	LIME1 (within a channel)	T1 MIM (within a channel)	E1 MIM (within a channel)	T1 HC- MIM	E1 HC- MIM	Testing Limits
hardware to the level 1 interface at the far end						
tst-slk LXVR EAGLE initiated Level 1 Internal card loopback Link State—Link is down Equipment tested—Local card Purpose—Test the near end card only Description—This will test the near end card up through level 2. Typical use—To validate the card on the Eagle as good	No	No	No	No	No	1024 concurrent link tests per system

Table A-9. Loopback Testing Commands and Functions—LIM and ATM Cards

Command/Function	DS0 MPL	OCU	V. 35	E1- ATM	T1- ATM	IPLIM	IPGW	Testing Limits
ent-lbp OAM Database for Multiple LFS points per LFS tests No impact on actual link behavior other than allowing multiple points.	Yes	No	No	n/a	n/a	n/a	n/a	32 points per card no limit on # of cards
act/dact-lbp EAGLE initiated Level 1 DS0 LFS tests Link State—Link is down Equipment tested—Level 1 element(s) in a signaling path Purpose—Test the error rates of a signaling path Description—Sends loopback code to establish loopback, then performs	Yes	No	No	n/a	n/a	n/a	n/a	1024 concurrent tests per system 1 test per card

Table A-9. Loopback Testing Commands and Functions—LIM and ATM Cards

Command/Function	DS0 MPL	OCU	V. 35	E1- ATM	T1- ATM	IPLIM	IPGW	Testing Limits
BERT test for a specified period of time. Typical use—To validate signaling path has acceptable error rate.								
Remote Loopback <i>FAR END initiated DS0 LFS Test</i> Link State—Link can be up or down Equipment tested—Near end hardware up to level 2 (LXVR) and far end hardware level 1 interface Purpose-Auto—loopback a BERT test to the far end Description—When receiving a loopback code, deactivate the link and go into loopback Typical use—used to remotely test the far end with standard DS0 BERT tests	Yes	Yes	No	n/a	n/a	n/a	n/a	no limit on # of cards
tst-slk <i>SLTC EAGLE initiated Level 3 SS7 SLT</i> Link State—Link is up Equipment tested—Near and far end up to Level 3 Purpose—Test the entire path to the far end at Level 3 Description—This will send an SLTM out and expects an SLTA back. Typical use—To validate connectivity of a signaling path.	Yes	Yes	Yes	Yes	Yes	Yes (not M3UA)	n/a	1024 concurrent link tests per system

Table A-9. Loopback Testing Commands and Functions—LIM and ATM Cards

Command/Function	DS0 MPL	OCU	V. 35	E1- ATM	T1- ATM	IPLIM	IPGW	Testing Limits
tst-slk OAM EAGLE <i>initiated Level 1 ATM test</i> Link State—Link is down Equipment tested—Near and far end level 1 software and hardware including all hardware on the cards Purpose—Test the entire near and far end level 1 hardware by exchanging ATM cells Description—Sends OAM cells out to far end for 60 seconds if no errors, or 2 minutes when errors are received. Typical use—Verifies ATM cells can be exchanged between 2 signaling points	n/a	n/a	n/a	Yes	Yes	n/a	n/a	1024 concurrent link tests per system
tst-slk LINE EAGLE <i>initiated Level 1-2 ATM test</i> Link State—Link is down Equipment tested—Near end hardware up to level 2 (LXVR) and far end hardware level 1 interface Purpose—Hardware continuity check between near and far end Description—The following steps occur: 1. Device under test (DUT) sends T1 bit-oriented code (BOC) to remote device 2. Remote device receives BOC and programs hardware 3. DUT attempts level 2 alignment	n/a	n/a	n/a	n/a	Yes	n/a	n/a	1024 concurrent link tests per system


Table A-9. Loopback Testing Commands and Functions—LIM and ATM Cards

Command/Function	DS0 MPL	OCU	V. 35	E1- ATM	T1- ATM	IPLIM	IPGW	Testing Limits
4. If link aligns (level 2), test passes, else test fails 5. DUT sends BOC to remote device to remove loopback 6. Remote device receives BOC and re-programs hardware								
NOTE: If the DUT boots in the middle of sequence, the remote device just needs to have the link activated or de- activated and it returns to the original programming. Typical use—Used for a link in line timing to check continuity from the near end level 2 hardware to the level 1 interface at the far end								
tst-slk PAYLOAD <i>EAGLE</i> <i>initiated Level 1-2 ATM test</i> Link State-Link is down Equipment tested—Near end hardware up to level 2 (LXVR) and far end hardware level 1 interface Purpose—Hardware continuity check between near and far end Description—The following steps occur: 1. Device under test (DUT) sends T1 bit oriented code (BOC) to remote device 2. Remote device receives BOC and programs hardware	n/a	n/a	n/a	n/a	Yes	n/a	n/a	1024 concurrent link tests per system

Table A-9. Loopback Testing Commands and Functions—LIM and ATM Cards

Command/Function	DS0 MPL	OCU	V. 35	E1- ATM	T1- ATM	IPLIM	IPGW	Testing Limits
3. DUT attempts level 2 alignment 4. If link aligns (level 2), test passes, else test fails 5. DUT sends BOC to remote device to remove loopback 6. Remote device receives BOC and re-programs hardware Typical use—used for a link in master timing to check continuity from the near end level 2 hardware to the level 1 interface at the far end								
tst-slk LXVR EAGLE <i>initiated Level 1 Internal card loopback</i> Link State—Link is down Equipment tested—Local card Purpose—Test the near end card only Description—This will test the near end card up through level 2. Typical use—To validate the card on the Eagle as good	Yes	Yes	Yes	Yes	Yes	No	No	1024 concurrent link tests per system

Figure A-1. ATM Loopback Tests

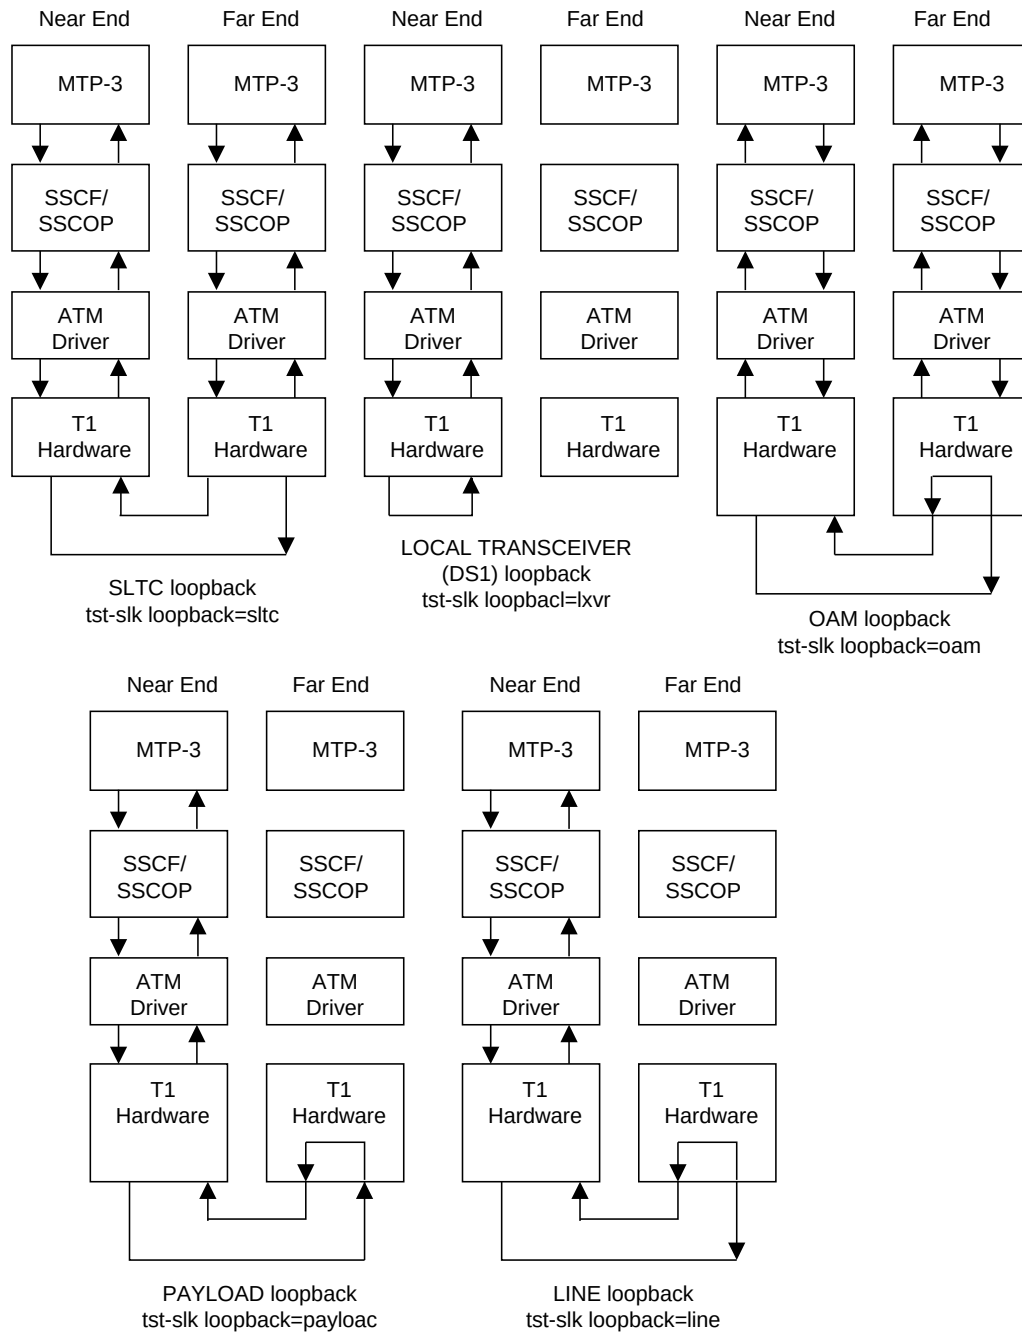

B

Acronyms and Abbreviations

A-Port	ANSI-41 Mobile Number Portability
AINPQ	ANSI-41 INP Query
AAL	ATM Adaptation Layer
AAL5	ATM Adaptation Layer 5
AAL5CP	ATM Adaptation Layer 5 Common Port
AATM	ATM Applique
ACG	Automatic Call Gapping
ACM	Application Communications Module
ADJ DPC	Adjacent Destination Point Code
AI	Address Indicator
AIN	Advanced Intelligent Network
AINF	Application Interface Applique
ANSI	American National Standards Institute
AP	Application Processor
APC	Adjacent Point Code
ARP	Address Resolution Protocol
AS	Application Server; a logical entity serving a specific Routing Key
ASM	Application Services Module
ASP	Application Server Process
ATI	Any Time Interrogation
ATM	Asynchronous Transfer Mode
ATMANSI	The application software for the ATM (high-speed) SS7 signaling links
ATM HSL	Asynchronous Transfer Mode High Speed Link
ATMM	ATM Layer Management
AVL	Availability Measurements report
AVLD	Daily Availability measurements report
AVLDTH	Day-to-Hour Availability measurements report
BCSM	Basic Call State Model
BIP	Board Identification PROM
BITS	Building Integrated Timing System
BLM	Bulk Load Module
BPHCAP	The application software used by the application processor and the IMT processor of the LIMATM
BPDCM	The application software for flash memory management on the DCM card.
BSD	Berkeley Software Distribution
BSN	Backward Sequence Number
CAS	Channel Associated Signaling
CCM	Command Class Management

CCS	Common Channel Signaling
CCS7	Common Channel Signaling System #7
CCS7ITU	The application software for the ITU SS7 signaling links
CDPA	Called Party Address
CDPN	Called Party Number
CGPA	Calling Party Address
CF	Control Frame
CIC	Circuit Identification Code
CLLI	Common Language Location Identifier
CLU	Network Cluster
CM	Cluster Management
CNCF	Calling Name Conversion Facility
CP	Communication Processor
CPU	Central Processing Unit
CRC	Cyclic Redundancy Check
CRMD	Cluster Routing and Management Diversity
CRP	Circular Route Prevention
CSL	Common Screening List
CSPC	Concerned Signaling Point Code Group
CSU	Channel Service Unit
DB	Database
DCM	Database Communications Module
DIP	Dual In-Line Package
DIX	Digital/Intel/Xerox de facto standard for Ethernet Media Access Control Type
DN	Dialed or Directory Number
DPC	Destination Point Code
DRAM	Dynamic Random Access Memory
DS0	Digital Signal Level - 0
DSM	Database Services Module
DSU	Data Service Unit
DTA	Database Transport Access
E5-E1T1	EPM-based E1/T1 Multi-Channel Interface Module
E5-ENET	EPM-based Ethernet card
E5IS	Eagle 5 Integrated Monitoring Support
EBDA	Enhanced Bulk Download and Audit
EDR	Efficient Data Representation
EF	Extension Frame
EGTT	Enhanced Global Title Translation
EIA	Electronic Industries Association
EILA	Enhanced Integrated LIM Applique
EIR	Equipment Identity Register
ELAP	Eagle LNP Application Processor
EMP	Eagle Monitoring Protocol
EMSALM	Element Management System Alarm Monitor
ENET	Ethernet
EOAM	Enhanced Operations, Administration, and Maintenance
EOAP	Enhanced OSS Application Process
EPAP	Eagle Provisioning Application Processor
EPM	Embedded Processor Module (E5-E1T1 and E5-ENET cards are EPM-based cards)
EPROM	Erasable PROM
ESP	Extended Services Platform
FAK	Feature Access Key
FAP	Fuse and Alarm Panel
FAS	Frame Alignment Signal

Acronyms and Abbreviations

FISU	Fill In Signal Unit
FPBA	Frame Power Budget Alarm
FPCR	Full Point Code Routing
FPT	Frame Power Threshold
FSN	Forward Sequence Number
FTA	File Transfer Area
FTP	File Transfer Protocol
FTRA	FTP-based Table Retrieve Application
GDB	GSM Real-Time Database
G-Flex	GSM Flexible Numbering
G-Port	GSM Mobile Number Portability
GLS	Generic Loading Service
GMSC	Gateway MSC
GPL	Generic Program Load
GPSM	General Purpose Service Module
GSL	Generic Software Load
GSM	Global System for Mobile Communications
GTA	Global Title Address
GTI	Global Title Indicator
GTT	Global Title Translation
GTWY	Gateway Administration measurements report
GWS	Gateway Screening
GWSA	Gateway Screening Application
GWSM	Gateway Screening Messages
HC-MIM	High Capacity Multi-Channel Interface Module
HDB3	High Density Bipolar 3 encoding
HIPR	High Speed IMT Packet Router
HLR	Home Location Register
HOMERN	Home Network Routing Number Prefix
HMUX	High-Speed Multiplexer
HRN	Home Routing Number
HSL	High-Speed Links
IAM	Initial Address Message
IC	Integrated Circuit
ICMP	Internet Control Message Protocol
ID	Identity
IDP	Initial Detection Point
IEC	International Escape Code
IETF	Internet Engineering Task Force
IGM	IS41 GSM Migration
IGTTLS	Intermediate Global Title Translation Load Sharing
IL	Incremental loading
ILA	Integrated LIM Applique
IMEI	International Mobile Equipment Identifier
IMF	Integrated Message Feeder
IMSI	International Mobile Station Identifier
IMT	Inter-processor Message Transport
IN	Intelligent Network
INAP	Intelligent Network Application Part
INET	Internet
INH	Inhibit
INP	INAP-based Number Portability
INSL	In-Network Subscriber List
IP	Internet Protocol

IPGWI	An ITU version of SS7IPGW
IPGWx	Point to multi-point IP Transport GPL, referring to SS7IPGW (ANSI) and IPGWI (ITU)
IPLIM	The application software used by the DCM card for TCP/IP point-to-point connectivity for ANSI point codes.
IPLIMI	The application software used by the DCM card for TCP/IP point-to-point connectivity for ITU point codes.
IPLIMx	Point to point IP Transport GPL, referring to IPLIM (ANSI) and IPLIMI (ITU)
IPMX	IMT Power and Multiplexer
IPS	Internet Protocol Services
IPSM	Internet Protocol Services Module
IS-41	Interim Standard 41, same as and interchangeable with ANSI-41
IS-ANR	In Service - Abnormal
ISDN	Integrated Services Digital Network
IS-NR	In Service - Normal
ISUP	ISDN User Part
ITU	International Telecommunications Union
ITUDUPPC	ITU National Duplicate Point Code
JIP	Jurisdiction Indicator Parameter
LAN	Local Area Network
LB	Load Balancing
LBP	Loop Back Point
LC	Logical channel
LED	Light Emitting Diode
LFS	Link Fault Sectionalization
LIM	Link Interface Module
LIM-AINF	Link Interface Module with the AINF interface
LIM-ATM	LIM with ATM interface
LIM-DS0	LIM with DS0 Applique
LIM-E1	LIM with E1 Applique
LIM-OCU	LIM with Office Channel Unit Applique
LIM-V35	LIM with V35 Interface
LNP	Local Number Portability
LNPMR	LNP Message Relay
LNPQS	LNP Query Service
LNP SMS	LNP Short Message Service
LPE	Logical Processing Element
LPO	Link Processor Outage
LRN	Location Routing Number
LS	Link Set
LSA	Link Status Alignment
LSB	Least Significant Bit (bit 1)
LSL	Low-Speed Link
LSMS	Local Service Management System
LSN	Link Set Name
LSO	Link Status out of Service
LSPE	Link Status Proving Emergency
LSPN	Link Status Proving Normal
LSR	Link Status Ready
LSSU	Link Status Signal Unit
M2PA	SS7 MTP2-User Peer-to-Peer Adaptation Layer
M3UA	SS7 MTP3-User Adaptation Layer
MAAL	Management ATM Adaptation Layer
MAP	Mobile Application Part

Acronyms and Abbreviations

MAPSCRN	GSM MAP Screening measurements report
MCAP	MAS Communication Application Processor Card
MCC	Mobile Country Code
MCM	Maintenance Communication Module
MCP	Measurement Collection Processor
MCPM	Measurement Collection and Polling Module
MDAL	Maintenance Disk and Alarm (card)
MDN	Mobile Dialed Number
MGT	Mobile Global Title
MGTT	Modified Global Title Translation
MF	Miscellaneous Frame
MIM	Multi-Channel Interface Module
MIN	Mobile Identification Number
MLPRST	MTP Low Priority Route Set
MNP	Mobile Number Portability
MNP SMS	Portability Check for Mobile Originated SMS
MNP-SRF	Signaling Relay Function for support of Mobile Number Portability
MOBR	Origin-based MTP Routing feature
MPC	Multiple Point Code feature
MPL	Multi-port LIM
MPS	Multi-Purpose Server
MR	Message Relay
MRN	Mated Relay Node
MRN	Message Reference Number
MS	Mobile Station
MSB	Most Significant Bit
MSC	Mobile Switching Center
MSAR	Memory space accounting reporting
MSISDN	Mobile Station ISDN Number or Mobile Switching ISDN Number
MSRN	Mobile Station Roaming Number
MSU	Message Signal Unit
MTCD	Maintenance Daily measurements report
MTCDTH	Maintenance Day-to-Hour measurements report
MTCH	Maintenance Hourly (marginal) measurements report
MTCS	Maintenance Status (link/link set) measurements report
MTP	Message Transfer Part
MTP2	Message Transfer Part, Level 2
NAI	Nature of Address Indicator
NCAI	Nested Cluster Allowed Indicator
NCR	Nested Cluster Routing
NEC	National Escape Code
NFAS	Non-Frame Alignment Signal
NI	Network Indicator
NIC	Network Information Center
NID	Network Identification
NM	Network Management
NP	Number Plan
NPA	Numbering Plan Area
NPAC	Number Portability Administration Center
NPANXX	Numbering Plan Area and Exchange
NRT	Network Routing
NSAP	Network Service Access Point
NSE	Network Security Enhancement
NSFI	Next Screening Function Indicator

NSP	Network Services Part
NSPC	New Secondary Point Code
OAM	Operations, Administration, and Maintenance
OAP	Operation System Support Application Processor
OAMP	Operations, Administration and Maintenance Part
OBSR	Origin-based SCCP Routing feature
OCU	Office Channel Unit
OOS-MA	Out of Service - Memory Administration
OOS-MT	Out of Service - Maintenance
OOS-MT-DSBLD	Out of Service - Maintenance Disabled
OPC	Origination Point Code
OPCODE	Operation Code
OPNAME	Operation Name
OSI	Open Systems Interconnection
OSS	Operations Systems Support
PC	Point Code
PCR	Preventive Cyclic Retransmission
PCS	Personal Communications Service (North American GSM)
PDBA	Provisioning Database Application
PDBI	Provisioning Database Interface
PDN	Packet Data Network
PDS	Persistent Device States
PLNP	PCS 1900 LNP
PLNPQS	LNPQS support provided for PLNP
PPSMS	Prepaid Short Message Service Intercept
PROM	Programmable Read-Only Memory
PSEL	Presentation Selector
PST	Primary State for Maintenance
PSTN	Public Switched Telephone Network
PVC	Permanent Virtual Circuit
PVN	Private Virtual Network
Q3	Q.3 Protocol
RAM	Random Access Memory
RBASE	Record Base measurements report
RC	Relative Cost
RI	Routing Indicator
RFC	Request for Comments
RMC	Remote Maintenance Center
RMTTP	Reliable Multicast Transport Protocol
RN	Routing Number
RTDB	DSM Real-time database
RTT	Round Trip Time
SAAL	Signaling ATM Adaptation Layer
SAPC	Secondary Adjacent Point Code
SCCP	Signaling Connection Control Part
SCM	System Configuration Manager
SCMG	SCCP Management
SCP	Service Control Point
SCRSET	Screen Set
SCSI	Small Computer System Interface
SCTP	Stream Control Transmission Protocol
SE-HSL	Synchronous E1 High Speed Link
SEAS	Signaling Engineering and Administration System
SIB	Status Indication "Busy"

Acronyms and Abbreviations

SIE	Status Indication “Emergency” Alignment
SIN	Status Indication “Normal Alignment”
SIO	Service Information Octet
SIO	Status Indication “Out of Alignment”
SIOS	Status Indication “Out of Service”
SK	Service Key
SKTS	Service Key/TeleService List
SLK	Signaling Link
SLS	Signaling Link Selection
SLSCI	Signaling Link Conversion Indicator
SLTA	Signaling Link Test Acknowledgement
SLTM	Signaling Link Test Message
SMS	Short Message Service
SMSC	Short Message Service Center
SMSMR	Prepaid Short Message Service
SNAI	Service Nature of Address Indicator
SNM	Signaling Network Management
SNR	Subsystem Normal Routing
SOR	Support for Optimal Routing
SORP	Socket Option Registration Primitive
SPC	Secondary Point Code Signaling Point Code
SRF	Signaling Relay Function
SRI	Send Routing Information
SRVSEL	Service Selector
SS7	Signaling System #7
SS7ANSI	The application software for the ANSI SS7 signaling links
SS7GX25	The application software for the X.25/SS7 gateway feature
SS7IPGW	The application software used by the DCM card for TCP/IP point-to-multipoint capability
SSA	Subsystem Allowed (An SCCP management message)
SSEL	Session Selector
SSN	SS7 Subsystem Number
SSP	Service Switching Point
SSU	Status Signal Unit
ST	Stop Digit—BCD value 15 (0xF)—used to indicate the end of dialing in some applications
STC	Signaling Transport Card
STP	Signal Transfer Point
STP LAN	The application software for the STP LAN feature
SUA	SS7 SCCP-User Adaptation Layer
SVC	Switched Virtual Circuit
TALI	Transport Adapter Layer Interface (RFC 3094)
TCP	Transmission Control Protocol
TCAP	Transaction Capabilities Application Part
TDM	Terminal Disk Module
TFA	Transfer Allowed
TFC	Transfer Congested (traffic)
TFP	Transfer Prohibited
TFR	Transfer Restricted
TLNP	Triggerless LNP
TOS	Type of Service
TPS	Transactions Per Second
TRA	Traffic Restarting Allowed
TRBL	Trouble

TRW	Traffic Restarting Waiting
TSC	Time Slot Counter Synchronization
TSM	Translation Services Module
TT	Translation Type
TUP	Telephone User Part
TV	Ticket Voucher
TVG	Group Ticket Voucher
UA	IETF User Adaptation Layers
UAM	Unsolicited Alarm Message
UART	Universal Asynchronous Receiver - Transmit
UDP	User Datagram Protocol
UDTS	Unit Data Transfer Service
UI	User Interface
UID	User ID
UIM	Unsolicited Informational Message
UPD	Update
VGTT	Variable Length GTT
VLR	Visitor Location Register
VMSC	Voice Mail Service Center Visited Mobile Switching Center
VSCCP	VxWorks Signaling Connection Control Part
WNP	Wireless Number Portability
WNPQS	Wireless Number Portability Query Service
X.25 DE	X.25 Destination Entity
XGTT	Expanded GTT (GTT Table Expansion)
XMAP	Expanded MAP Table

Index

act-alm-trns 5-1
act-cdl 5-2
act-dlk 5-3
act-echo 5-4
act-file-trns 5-5
act-flash 5-8
act-ftp-trns 5-11
act-gpl 5-12
action commands 4-9
act-lbp 5-15
act-lpo 5-21
act-oap-config 5-23
act-slk 5-26
act-upgrade 6-1
act-user 5-28
administration of User IDs and passwords 4-17
alarm levels 4-4
alw-card 5-29
alw-imt 5-32
alw-map-ss 5-33
alw-slk 5-33
alw-trm 5-35
arp 7-2
arrow key operations, terminal 4-13
aslog 7-5
asplog 7-6
assocrtt 7-12
AST possible values A-3
aud-data 5-36
banner format, output 4-16
blk-slk 5-40
canc-alm-trns 5-42
canc-cmd 5-43
canc-dlk 5-45
canc-echo 5-46
canc-lpo 5-46
canc-slk 5-48
canc-user 5-49
cdu 6-6
chg-acg-mic 5-50
chg-acg-noc 5-52
chg-appl-rtkey 5-53
chg-as 5-60
chg-assoc 5-61
chg-atinpqopts 5-66
chg-atm-lps 5-69
chg-attr-seculog 5-72
chg-bip-fld 6-13
chg-bip-rec 6-14
chg-clkopts 5-73
chg-cmd 5-75
chg-cmdclass 5-78
chg-csl 5-79
chg-ctrl-feat 5-83
chg-db 5-90
chg-dstn 5-96
chg-e1 5-111
chg-eisopts 5-114
chg-feat 5-115
chg-frm-pwr 5-123
chg-ftp-serv 5-125
chg-gpl 5-126
chg-gsmap-scrn 5-133
chg-gsm-msg 5-130
chg-gsmopts 5-138
chg-gsmsmsopts 5-150
chg-gsms-opcode 5-146
chg-gta 5-157
chg-gtcnv 5-171
chg-gtt 5-174
chg-gttset 5-183
chg-gttset 5-187
chg-gtw-stp 5-188
chg-gws-actset 5-189
chg-gws-redirect 5-192
chg-inpopts 5-195
chg-ip-card 5-201
chg-ip-lnk 5-204
chg-is41-msg 5-208
chg-is41opts 5-211
chg-is41smsopts 5-216
chg-isup-msg 5-222
chg-l2t 5-224
chg-l3t 5-227
chg-lbp 5-234
chg-lnpopts 5-239
chg-lnp-serv 5-236
chg-lnp-ttmap 5-238
chg-loopset 5-242
chg-ls 5-250
chg-ls 0
chg-ls 0
chg-lsopts 5-268
chg-m2pa-tset 5-271
chg-map 5-273
chg-meas 5-285

Index

chg-measopts 5-287
chg-mrn 5-295
chg-mtc-measopts 5-308
chg-netopts 5-312
chg-npp-as 5-314
chg-npp-serv 5-327
chg-npp-srs 5-331
chg-oap-config 5-333
chg-pid 5-337
chg-ppsopts 5-338
chg-prefix 5-342
chg-rte 5-345
chg-rtx 5-348
chg-sccpopts 5-359
chg-sccp-serv 5-352
chg-scr-aftpc 5-362
chg-scr-blkdpc 5-368
chg-scr-blkopc 5-374
chg-scr-cdpa 5-380
chg-scr-cgpa 5-386
chg-scr-destfld 5-392
chg-scr-dpc 5-397
chg-scr-isup 5-402
chg-scr-opc 5-404
chg-scrset 5-416
chg-scr-sio 5-409
chg-scr-tt 5-414
chg-seas-config 5-418
chg-secu-dflt 5-420
chg-secu-trm 5-425
chg-sg-opts 5-429
chg-sid 5-432
chg-slt 5-442
chg-srvsel 5-443
chg-ss7opts 5-449
chg-ss-appl 5-448
chg-stpopts 5-451
chg-t1 5-464
chg-tbl 6-16
chg-th-alm 5-466
chg-tifopts 5-468
chg-tinopts 5-471
chg-trm 5-473
chg-ttmap 5-483
chg-ttr-msg 5-484
chg-ttropts 5-486
chg-uaps 5-488
chg-upgrade-config 6-18
chg-user 5-492
chg-vflx-cd 5-497
chg-vflx-opts 5-498
chg-vflx-rn 5-501
chg-vflx-vm sid 5-502
chg-x25-dstn 5-504
chg-x25-rte 5-505
chg-x25-slk 5-507
chk-unref-ent 5-509
classes, command 4-18
clr-disk-stats 6-19
clr-imt-stats 5-511
Command Aborted messages 4-15
Command Accepted messages 4-15
command classes, configuration of 4-18
Command Completed messages 4-15
Command Executed messages 4-15
Command Failed messages 4-15
Command Rejected messages, summary 4-15
Command Response messages 4-15
commands
 about 4-9
 command classes 4-18
 keywords 4-10
 output banner format 4-16
 parameters 4-10
 reports and output message types generated by 4-15
commands
 duplicate parameters in 4-11
commands, action 4-9
commands, entering 4-9
commands, functions performed by 4-9
configuration
 of command classes 4-18
 of terminals and printers 4-3
conn-imt 5-513
connmgr 7-14
Converting ITU National Point Code Formats A-8
copy-disk 5-514
copy-fta 5-516
copy-gpl 5-518
copy-meas 5-520
copy-seculog 5-521
copy-tbl 6-19
critical alarms 4-4
dact-alm-trns 5-523
dact-cdl 5-523
dact-cmd 5-524
dact-echo 5-526
dact-lbp 5-527
dact-rstst 5-529
dact-slk 5-530
dact-user 5-532
disc-imt 5-532
disp-bip 6-21
disp-bp 6-23
disp-disk-dir 6-26
disp-disk-stats 6-31
disp-fta-dir 5-533

- disp-lba 6-32
- disp-mem 6-34
- disp-trace 6-36
- dlt-acg-mic 5-534
- dlt-acg-noc 5-535
- dlt-appl-rtkey 5-535
- dlt-as 5-540
- dlt-assoc 5-541
- dlt-bp 6-37
- dlt-card 5-541
- dlt-csl 5-542
- dlt-cspc 5-546
- dlt-dlk 5-549
- dlt-dstn 5-549
- dlt-e1 5-554
- dlt-frm-pwr 5-556
- dlt-fta 5-556
- dlt-ftp-serv 5-557
- dlt-gserv-data 5-558
- dlt-gsmmap-scrn 5-560
- dlt-gsms-opcode 5-561
- dlt-gsmssn-scrn 5-562
- dlt-gta 5-563
- dlt-gtcnv 5-568
- dlt-gtt 5-569
- dlt-gttset 5-572
- dlt-gttset 5-574
- dlt-gws-redirect 5-574
- dlt-homern 5-576
- dlt-home-smisc 5-575
- dlt-ip-host 5-576
- dlt-ip-node 5-577
- dlt-ip-rte 5-579
- dlt-lbp 5-580
- dlt-lnp-serv 5-581
- dlt-loopset 5-582
- dlt-ls 5-584
- dlt-map 5-585
- dlt-mrn 5-589
- dlt-na 5-597
- dlt-npp-as 5-598
- dlt-npp-srs 5-599
- dlt-prefix 5-600
- dlt-rmt-appl 5-601
- dlt-rte 5-603
- dlt-rtx 5-607
- dlt-sccp-serv 5-611
- dlt-scr-aftpc 5-616
- dlt-scr-blkdpc 5-619
- dlt-scr-blkopc 5-622
- dlt-scr-cdpa 5-626
- dlt-scr-cgpa 5-629
- dlt-scr-destfld 5-632
- dlt-scr-dpc 5-635
- dlt-scr-isup 5-638
- dlt-scr-opc 5-639
- dlt-scrset 5-645
- dlt-scr-sio 5-642
- dlt-scr-tt 5-644
- dlt-shlf 5-646
- dlt-slk 5-646
- dlt-spc 5-649
- dlt-srvsel 5-650
- dlt-ss-appl 5-652
- dlt-subnetid 5-653
- dlt-t1 5-653
- dlt-trace 6-38
- dlt-tt 5-654
- dlt-ttmap 5-656
- dlt-uim-acthresh 5-657
- dlt-user 5-657
- dlt-vendid 5-658
- dlt-vflx-cd 5-658
- dlt-vflx-rn 5-659
- dlt-vflx-vmsid 5-660
- dlt-x25-dstn 5-660
- dlt-x25-rte 5-661
- documentation
 - admonishments 1-6
 - locate on Customer Support Site 1-6
- duplicate parameters in command 4-11
- E5-based Control Cards 4-2
- Element Management System Alarm Monitor (EMSALM) 4-8
- Element Management System Alarm Monitor (EMSALM) 4-8
- EMSALM terminals 4-8
- EMSALM terminals 4-8
- enable-ctrl-feat 5-661
- ent-acg-mic 5-676
- ent-acg-noc 5-677
- ent-appl-rtkey 5-679
- ent-as 5-684
- ent-assoc 5-685
- ent-bp 6-39
- ent-card 5-688
- ent-csl 5-696
- ent-cspc 5-701
- ent-dlk 5-703
- ent-dstn 5-705
- ent-e1 5-719
- entering commands 4-9
- ent-frm-pwr 5-722
- ent-ftp-serv 5-724
- ent-gserv-data 5-726
- ent-gsmmap-scrn 5-728
- ent-gsms-opcode 5-734
- ent-gsmssn-scrn 5-739

Index

ent-gta 5-740
ent-gtcnv 5-753
ent-gtt 5-756
ent-gttset 5-765
ent-gttset 5-769
ent-gws-redirect 5-770
ent-homern 5-773
ent-home-smc 5-773
ent-ip-host 5-774
ent-ip-node 5-775
ent-ip-rte 5-777
ent-lbp 5-779
ent-lnp-serv 5-781
ent-loopset 5-783
ent-ls 5-785
ent-ls 0
ent-ls 0
ent-map 5-800
ent-mrn 5-811
ent-na 5-824
ent-npp-as 5-825
ent-npp-srs 5-839
ent-rmt-appl 5-841
ent-rte 5-843
ent-rtx 5-847
ent-scr-aftpc 5-852
ent-scr-blkdpc 5-856
ent-scr-blkopc 5-860
ent-scr-cdpa 5-865
ent-scr-cgpa 5-869
ent-scr-destfld 5-873
ent-scr-dpc 5-876
ent-scr-isup 5-881
ent-scr-opc 5-883
ent-scrset 5-893
ent-scr-sio 5-887
ent-scr-tt 5-891
ent-serial-num 5-895
ent-shlf 5-896
ent-sid 5-897
ent-slk 5-899
ent-spc 5-913
ent-srvsel 5-915
ent-ss-appl 5-918
ent-subnetid 5-920
ent-t1 5-921
ent-trace 6-44
ent-tt 5-924
ent-ttmap 5-925
ent-user 5-926
ent-vendid 5-930
ent-vflx-cd 5-932
ent-vflx-rn 5-933
ent-vflx-vmsid 5-934
ent-x25-dstn 5-936
ent-x25-rte 5-937
expired password procedure 4-21
flash-card 5-940
format, output banner 4-16
format-disk 5-943
ftptest 7-21
I/O devices 4-3
inh-alm 5-948
inh-card 5-956
inhibited alarms 4-4
inh-imt 5-958
inh-map-ss 5-959
inh-slk 5-961
inh-trm 5-962
init-card 5-963
init-flash 5-969
init-imt-gpl 5-973
init-mux 5-974
init-network 5-975
init-oap 5-978
init-sys 5-980
intrusion alert 4-18
keyboard functions 4-11
key sequences
 KSR terminal 4-11
 VT320 terminal 4-11
keywords, command 4-10
KSR function on VT320 terminals 4-5
KSR terminals
 function on VT320 devices 4-5
 key sequences 4-11
Legacy Control Cards 4-1
linkinfo 7-23
link Parameter, Summary of Range Values for A-2
lock 5-983
login 5-983
 procedure for password expired 4-21
 procedure for User ID-password already being
 used 4-22
 procedure for User ID-password not accepted
 4-20
 procedure to change password at first login 4-20
 security checks 4-18
logout 5-984
logout procedure 4-23
Maintenance and Administration Subsystem - See
 MASP cards 4-1
major alarms 4-4
MASP cards 4-1
minor alarms 4-4
msucount 7-33
msuroute 7-64
msutrace 7-70

- netstat 7-91
- netstat 7-91
- nslookup 7-126
- output banner format 4-16
- output groups, unsolicited messages 4-15
- output messages, types of 4-15
- parameters, command 4-10
- pass 5-985
- Pass-Through Commands 7-1
- password
 - change at first login 4-20
 - change expired at login 4-21
- passwords, rules for administering 4-17
- ping 7-129
- printers
 - configuration of 4-3
 - connection to TDM 4-5
 - directing 4-15
- procedures
 - logout 4-23
- procedures, login
 - change password at first login 4-20
 - password expired 4-21
 - User ID-password already being used 4-22
 - User ID-password not accepted 4-20
- PST/AST/SST possible values A-3
- related publications 1-3
- rept-ftp-meas 5-987
- rept-imt-info 5-991
- rept-imt-lvl1 5-1012
- rept-imt-lvl2 5-1027
- rept-meas 5-1031
- rept-stat-alm 5-1046
- rept-stat-applsock 5-1053
- rept-stat-as 5-1055
- rept-stat-assoc 5-1056
- rept-stat-card 5-1059
- rept-stat-cdl 5-1092
- rept-stat-cdt 5-1094
- rept-stat-clk 5-1095
- rept-stat-cluster 5-1102
- rept-stat-db 5-1108
- rept-stat-dlk 5-1124
- rept-stat-dstn 5-1125
- rept-stat-e1 5-1137
- rept-stat-enet 5-1139
- rept-stat-eroute 5-1140
- rept-stat-gpl 5-1145
- rept-stat-imt 5-1158
- rept-stat-iptps 5-1160
- rept-stat-lfs 5-1164
- rept-stat-lnp 5-1165
- rept-stat-ls 5-1174
- rept-stat-meas 5-1181
- rept-stat-mon 5-1183
- rept-stat-mps 5-1189
- rept-stat-mux 5-1195
- rept-stat-rtd 5-1196
- rept-stat-rte 5-1201
- rept-stat-rtkey 5-1223
- rept-stat-rtx 5-1223
- rept-stat-sccp 5-1229
- rept-stat-seas 5-1255
- rept-stat-seculog 5-1257
- rept-stat-slan 5-1259
- rept-stat-slk 5-1262
- rept-stat-sys 5-1270
- rept-stat-t1 5-1275
- rept-stat-trbl 5-1278
- rept-stat-trm 5-1283
- rept-stat-tstslk 5-1285
- rept-stat-user 5-1287
- rept-stat-xlist 5-1287
- rept-x25-meas 5-1288
- Response Messages 4-15
- rls-alm 5-1291
- rmv-card 5-1292
- rmv-imt 5-1293
- rmv-trm 5-1294
- rst-card 5-1295
- rst-dstn 5-1296
- rst-imt 5-1298
- rst-trm 5-1298
- rtrv-acg-mic 5-1299
- rtrv-acg-noc 5-1301
- rtrv-appl-rtkey 5-1302
- rtrv-as 5-1309
- rtrv-assoc 5-1310
- rtrv-atinpqopts 5-1320
- rtrv-atm-lps 5-1321
- rtrv-atm-prm 5-1327
- rtrv-attr-seculog 5-1328
- rtrv-bip 5-1329
- rtrv-card 5-1335
- rtrv-clkopts 5-1344
- rtrv-cmd 5-1344
- rtrv-cmdclass 5-1347
- rtrv-csl 5-1348
- rtrv-cspc 5-1356
- rtrv-ctrl-feat 5-1359
- rtrv-data-rtdb 5-1364
- rtrv-dlk 5-1372
- rtrv-dstn 5-1375
- rtrv-e1 5-1408
- rtrv-eisopts 5-1411
- rtrv-feat 5-1412
- rtrv-frm-pwr 5-1414
- rtrv-ftp-serv 5-1415

Index

rtrv-gpl 5-1419
rtrv-gserv-data 5-1425
rtrv-gsmmap-scrn 5-1429
rtrv-gsm-msg 5-1428
rtrv-gsmopts 5-1438
rtrv-gsmsmsopts 5-1447
rtrv-gsms-opcode 5-1442
rtrv-gsmssn-scrn 5-1448
rtrv-gta 5-1449
rtrv-gtcnv 5-1470
rtrv-gtt 5-1472
rtrv-gttset 5-1488
rtrv-gttset 5-1494
rtrv-gtw-stp 5-1497
rtrv-gtwy-acthresh 5-1497
rtrv-gtwy-prmtrs 5-1499
rtrv-gws-actset 5-1499
rtrv-gws-redirect 5-1500
rtrv-homern 5-1503
rtrv-home-smc 5-1502
rtrv-inopts 5-1503
rtrv-ip-card 5-1506
rtrv-ip-host 5-1509
rtrv-ip-lnk 5-1510
rtrv-ip-node 5-1512
rtrv-ip-rte 5-1516
rtrv-is41-msg 5-1517
rtrv-is41opts 5-1518
rtrv-is41smsopts 5-1519
rtrv-isup-msg 5-1520
rtrv-l2t 5-1522
rtrv-l3t 5-1525
rtrv-lbp 5-1527
rtrv-lnopts 5-1535
rtrv-lnp-serv 5-1530
rtrv-lnp-ttmap 5-1532
rtrv-log 5-1536
rtrv-loopset 5-1547
rtrv-ls 5-1550
rtrv-m2pa-tset 5-1572
rtrv-map 5-1575
rtrv-measopts 5-1588
rtrv-meas-sched 5-1585
rtrv-mrn 5-1590
rtrv-mtc-measopts 5-1596
rtrv-na 5-1598
rtrv-netopts 5-1599
rtrv-npp-as 5-1600
rtrv-npp-serv 5-1601
rtrv-npp-srs 5-1604
rtrv-oap-config 5-1606
rtrv-obit 5-1607
rtrv-ppsopts 5-1618
rtrv-prefix 5-1623
rtrv-rmt-appl 5-1624
rtrv-rte 5-1625
rtrv-rtx 5-1660
rtrv-sccpopts 5-1672
rtrv-sccp-serv 5-1669
rtrv-scr-aftpc 5-1674
rtrv-scr-blkdpc 5-1680
rtrv-scr-blkopc 5-1686
rtrv-scr-cdpa 5-1691
rtrv-scr-cgpa 5-1696
rtrv-scr-destfld 5-1702
rtrv-scr-dpc 5-1708
rtrv-scr-isup 5-1714
rtrv-scr-opc 5-1717
rtrv-scrset 5-1730
rtrv-scr-sio 5-1723
rtrv-scr-tt 5-1727
rtrv-seas-config 5-1734
rtrv-secu-dflt 5-1735
rtrv-secu-log 5-1742
rtrv-secu-trm 5-1737
rtrv-secu-user 5-1739
rtrv-serial-num 5-1749
rtrv-sg-opts 5-1749
rtrv-shlf 5-1750
rtrv-sid 5-1752
rtrv-slk 5-1761
rtrv-slt 5-1767
rtrv-spc 5-1769
rtrv-srvsel 5-1773
rtrv-ss7opts 5-1780
rtrv-ss-appl 5-1780
rtrv-stp 5-1781
rtrv-stpopts 5-1796
rtrv-subnetid 5-1801
rtrv-t1 5-1803
rtrv-tbl-capacity 5-1806
rtrv-th-alm 5-1809
rtrv-tifopts 5-1809
rtrv-tinopts 5-1810
rtrv-trbl 5-1811
rtrv-trbltx 5-1812
rtrv-trm 5-1817
rtrv-tt 5-1832
rtrv-ttmap 5-1835
rtrv-ttr-msg 5-1838
rtrv-ttropts 5-1839
rtrv-uaps 5-1839
rtrv-uim-acthresh 5-1842
rtrv-upgrade-config 6-60
rtrv-user 5-1842
rtrv-vendid 5-1845
rtrv-vflx-cd 5-1846
rtrv-vflx-opts 5-1849

- rtrv-vflx-rn 5-1850
- rtrv-vflx-vmsid 5-1853
- rtrv-x25-dstn 5-1856
- rtrv-x25-rte 5-1857
- rtrv-x25-slk 5-1861
- sctp 7-133
- SEAS Terminals 4-8
- send-msg 6-60
- set-date 5-1862
- set-gtwy-acthresh 5-1863
- set-mem 6-63
- set-scrrej-prmtrs 5-1864
- set-time 5-1865
- set-uim-acthresh 5-1867
- sockrtt 7-142
- soipdata 7-145
- soiplog 7-147
- SST possible values A-3
- system security
 - command classes 4-18
 - intrusion alert 4-18
 - login security checks 4-18
- TDM card
 - connection of terminals and printers to 4-5
- telnet terminals 4-6
- terminals 4-8
 - arrow key operations 4-13
 - configuration of 4-3
 - connection to TDM 4-5
 - directing unsolicited messages to 4-15
 - EMSALM 4-8
 - EMSALM 4-8
 - SEAS 4-8
 - telnet 4-6
 - VT320 4-3
- traceroute 7-149
- traceroute 7-149
- tst-bip 5-1868
- tst-disk 5-1869
- tst-dlk 5-1873
- tst-e1 5-1874
- tst-imt 5-1876
- tst-msg 5-1878
- tst-npp-msg 5-1885
- tst-slk 5-1888
- tst-t1 5-1893
- ualog 7-159
- ublk-slk 5-1894
- unhb-alm 5-1896
- unhb-slk 5-1903
- unlock 5-1905
- unsolicited messages
 - definition 4-15
 - output groups 4-15
- User IDs
 - already in use at login 4-22
 - not accepted at login 4-20
 - rules for administering 4-17
- User Names - See User IDs 4-17
- VT320 terminals 4-3
 - key sequences 4-11
 - KSR function on 4-5

Index